

Real Flat Television

User Manual

21PT5006


29PT5006

25PT5016

29PT5016

21PT5026

29PT5026

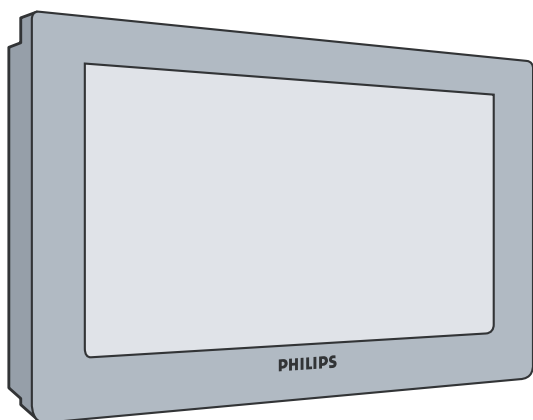

PHILIPS

CONTENTS

Introduction

| | |
|---------------------------------|---|
| Safety information / Tips | 3 |
| Before calling service | 4 |

Basic Installation functions

| | |
|---|----|
| TV hookup (Basic connection) | 5 |
| Remote control use and care | 5 |
| Audio/Video connections (Playback) | 6 |
| Audio/Video connections (Recording) | 8 |
| Remote control functions | 9 |
| TV control functions | 11 |

TV Installation

| | |
|------------------------------------|----|
| Menu language selection | 12 |
| Automatic tuning of channels | 13 |
| Manual tuning of channels | 14 |
| Colour / Sound system | 16 |
| Fine Tuning of channels | 17 |

Features

| | |
|---------------------------|----|
| Picture adjustments | 19 |
| Sound adjustments | 20 |
| Format adjustments | 21 |
| Signal Strength | 22 |
| Active Control | 23 |
| Smart Picture | 24 |
| Smart Sound | 25 |
| Personal Zapping | 26 |
| Teletext | 27 |

General

| | |
|----------------------|----|
| Specifications | 29 |
|----------------------|----|



Recycling Directive – To minimise harm to the environment, the batteries supplied with the TV set do not contain mercury or nickel cadmium. If possible, when disposing of batteries, use recycling means available to you. Your TV set uses materials which are reusable or which can be recycled. To minimise the amount of waste in the environment, specialist companies recover used sets for dismantling and collection of reusable materials (contact your dealer).

SAFETY INFORMATION AND USEFUL TIPS

Safety information

- Disconnect mains plug when :
 - the red light below the TV screen is flashing continuously.
 - a bright white line is displayed across the screen.
 - cleaning the TV screen. Never use abrasive cleaning agents. Use a slight damp chamois leather or soft cloth.
 - there is a lightning storm.
 - the set is left unattended for a prolonged period of time.
- No naked flame sources, such as lighted candles, should be placed on top of the TV or in the vicinity.
- Do not place your TV set under direct sunlight or heat.
- Leave at least 5 cm around each side of TV set to allow for proper ventilation.
- Avoid placing your set (e.g. near the window) where it is likely to be exposed to rain or water.
- No objects filled with liquids should be placed on top the TV so as to avoid dripping or splashing of liquids on the set.

Tips

- Do not leave your set on standby mode for a prolonged period of time. Switch off set to allow it to be demagnetised. A demagnetised set supports good picture quality.
- Do not shift or move the set around when it is switched on. Unevenness in colour in some parts of the screen may occur.
- Never attempt to repair a defective TV yourself. Always consult a skilled service personnel.

BEFORE CALLING SERVICE

Below is a list of frequently occurred symptoms. Before you call for service, make these simple checks. Some of these symptoms can easily be rectified if you know what to do.

Symptoms

What you should do

Colour patch
(uneveness)

- Switch off the TV by the mains power button. Wait for 20 minutes before switching on again.
 - Check the TV is not placed too near speakers or magnetic objects.
-

No power

- Check the TV's AC power cord is plugged into the mains socket. If there is still no power, disconnect plug. Wait for 60 seconds and re-insert plug. Switch on the TV again.
-

No picture

- Check the antenna connection at the rear of the TV.
 - Possible TV station problem. Try another channel.
-

Good picture
but no sound

- Try increasing the volume.
 - Check that the sound is not muted. If it is muted, press the **Mute** button on the remote control to restore sound.
-

Good sound but poor
colour or no picture

- Try increasing the contrast and brightness setting.
-

Snowy picture and
noise

- Check antenna connection at the rear of the TV.
-

Horizontal dotted lines

- Possible electrical interference e.g. hairdryer, vacuum cleaner, etc. Switch off appliances.
-


Double images or
"Ghost" images

- Possible poor positioning of antenna. Using a highly directional antenna may improve reception.
-

TV not responding to
remote control


- Check life span of batteries of remote control handset. remote
- Aim remote control directly at remote sensor lens on the front panel of the TV.

TV HOOKUP (BASIC CONNECTION)

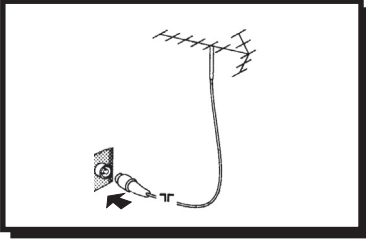


Antenna connection

- Connect the aerial plug to the antenna socket on the backcover.
- Insert the mains plug into the wall socket.

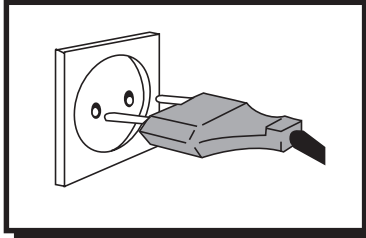

Mains connection


- For correct mains voltage, refer to type sticker at the rear of the TV set
- Consult your dealer if mains supply is different. Note :This diagram is not representative of the actual plug and socket.

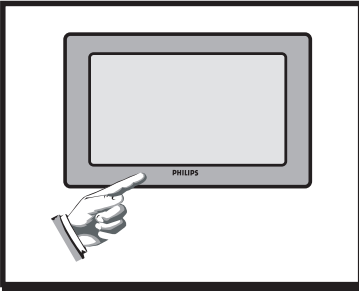

Switching on the set


- Press the main power button to switch on/off the TV.
- If the set is on standby (indicator is lit), press the Power button on the remote control to switch on set.

REMOTE CONTROL CARE AND USE

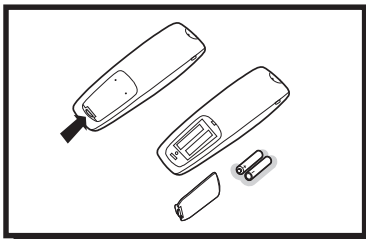

- Insert the correct type of batteries into the compartment.
- Ensure the batteries are placed in the right direction.

AUDIO/VIDEO CONNECTIONS (PLAYBACK)

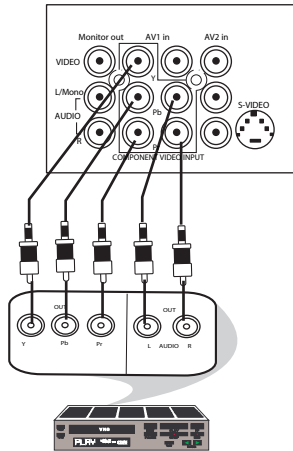

AV sockets on rear of TV


Back of DVD

DVD (with “Y”, “Pb” and “Pr”
and Output sockets)

You can view the playback of DVD discs by using the COMPONENT VIDEO INPUT (CVI) sockets on the rear of the TV.


– Connect the CVI cables from the “Y”, “Pb” and “Pr” INPUT of the TV to the “Y”, “Pb” and “Pr” OUTPUT of the DVD to view playback of DVD discs.

AUDIO/VIDEO CONNECTIONS (PLAYBACK)

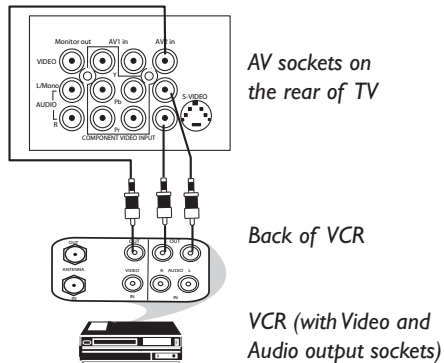

You can view the playback of VCR tapes (Video Disc players, camcorders, etc.) by using the AUDIO and VIDEO INPUT sockets on the rear of the TV.

– Connect the video and audio RCA cables from the VIDEO and AUDIO IN on the rear of the TV to the AUDIO and VIDEO OUT of the VCR.

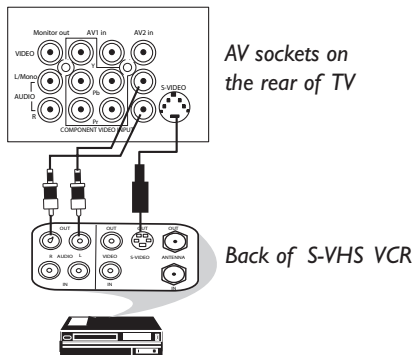

The S-Video connection on the rear of the TV is used for the playback of S-VHS VCR tapes, Video Discs, Video Games or Compact Disc-Interactive (cd-i) discs. Better picture detail and clarity is possible with the S-Video playback as compared to the picture from a normal antenna (RF) connection.


– Connect the S-VIDEO cable from the S-VIDEO socket on the rear of the TV to the S-VHS OUT of the VCR.

– Connect the audio RCA cables from the AUDIO IN on the rear of the TV to the AUDIO OUT of the VCR.

Note : You need not connect the VIDEO IN of the TV if S-VIDEO IN is connected.

AUDIO/VIDEO CONNECTIONS (RECORDING)

Connection for recording from the TV channel

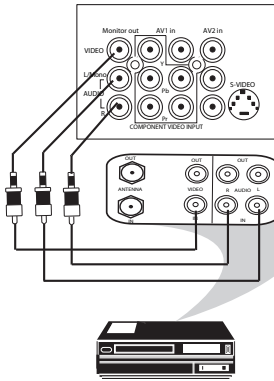


AV sockets on the rear of TV

VCR (with Video and Audio input sockets)

- Connect the video and audio RCA cables from the INPUT sockets of the VCR to the MONITOR OUT on the rear of the TV.
- To enhance the sound of your TV, connect the audio cables to an external audio system instead of the VCR. For mono equipment, connect only the AUDIO L socket.

Connection for recording from cable TV to VCR

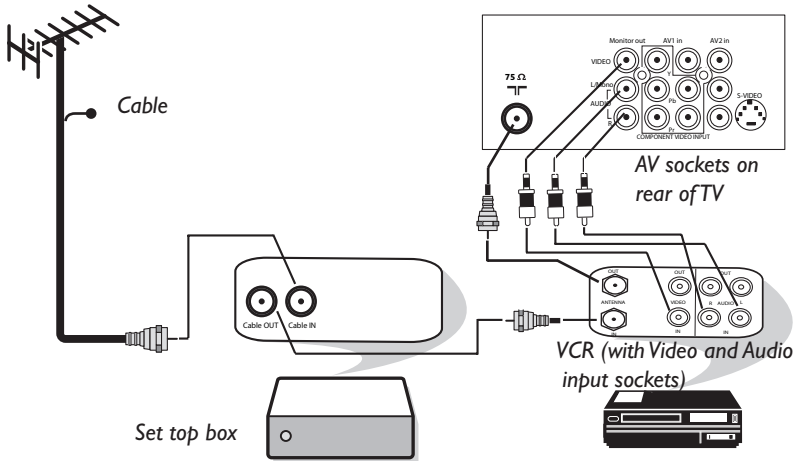

AV sockets on rear of TV


VCR (with Video and Audio input sockets)

Set top box

- Connect the RF cable from the OUTPUT of the set top box to the Antenna IN of the VCR. From the VCR's Antenna OUT, connect the RF cable to the Antenna socket on the rear of the TV.
- Connect the video and audio RCA cables from the INPUT sockets of the VCR to the MONITOR OUT on the rear of the TV.


REMOTE CONTROL FUNCTIONS

(Refer to the correct page for the remote control that came with your set)

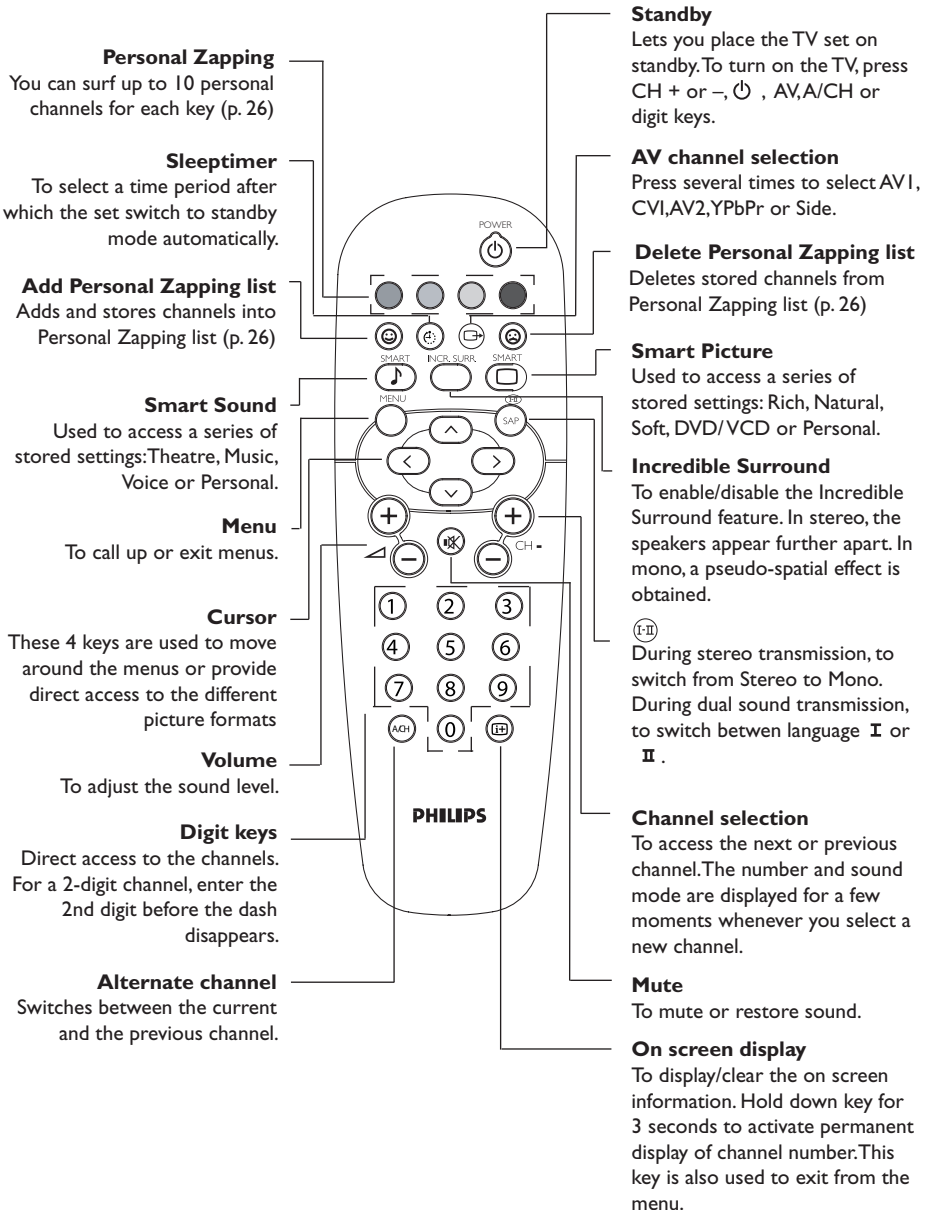


REMOTE CONTROL FUNCTIONS

(Refer to the correct page for the remote control that came with your set)

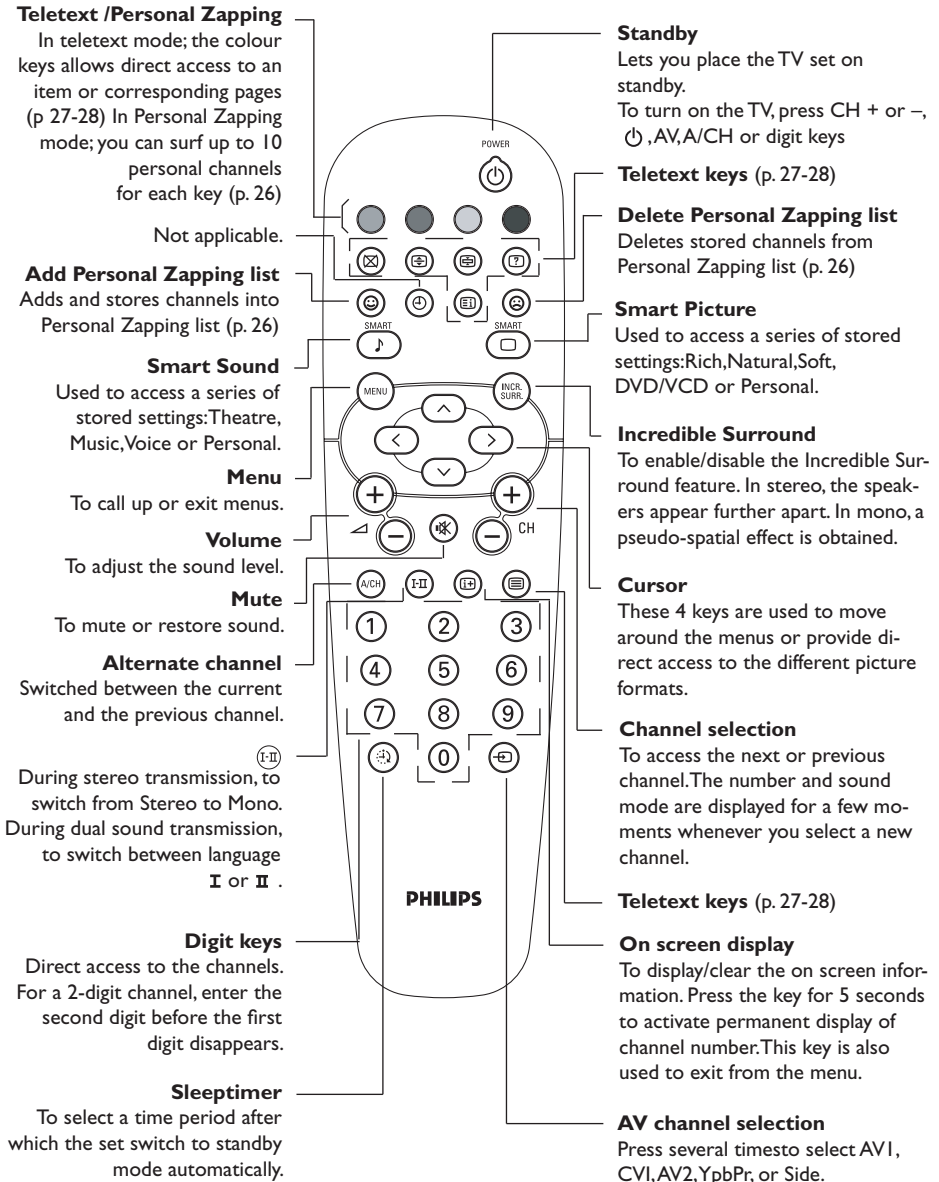

TV CONTROL FUNCTIONS

The TV controls are on the front or the side of the set depending on your model.

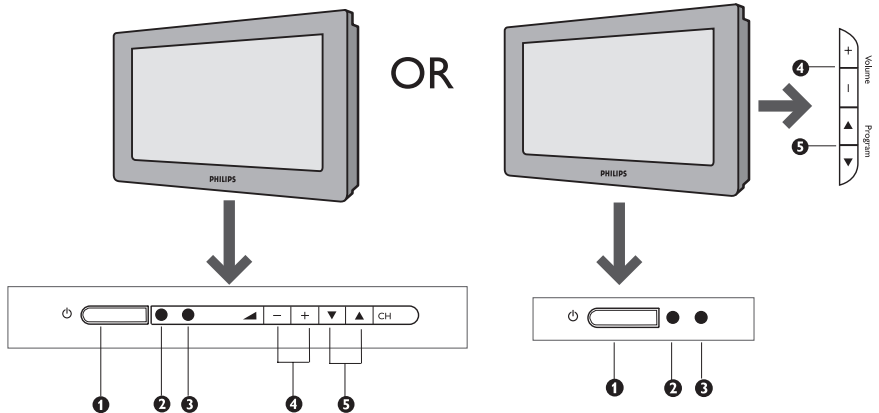


| | | |
|---|-------------------------|--|
| ❶ | Mains Power button | Switches mains power on or off. |
| ❷ | Standby light indicator | Indicator is lit when standby mode is activated. |
| ❸ | Remote Sensor | Acts as a sensor for activating the controls of the TV when remote control handset is aimed at it. |
| ❹ | Volume + / - buttons | Adjust sound volume softer/louder. |
| ❺ | Channel V / ^ buttons | Select channel in descending/ascending order. |

Tip:

- You can enter the main menu by pressing both the Volume - and + buttons at the same time.
- Press the Channel V or ^ button to select the next item on the menu.
- Press Volume - or + button to access sub-menu and adjust the settings.

MENU LANGUAGE SELECTION

Operating instructions generally explains the operation of the TV set using the buttons on the remote control unless otherwise stated. Please read the following instructions carefully and follow the steps as shown to familiarise yourself with the installations and all features available in your set.

Tip: When there is no signal input to the TV, you may encounter instability of the on screen display. In this instance, please use the  button on your remote control to select an AV channel.

The **Language** feature allows you to set the TV's on-screen menu to be shown in your desired language.

Step


Press button

Result on screen

1




Enter main menu

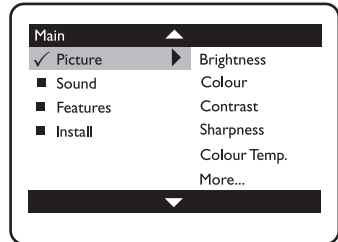

2



Select **Install**

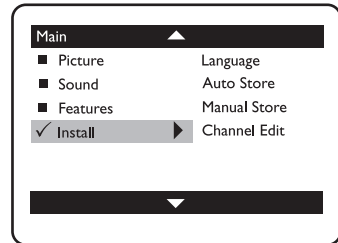

3




Enter the Install menu.

4



Press button repeatedly to cycle through the language list and select the language of your choice.

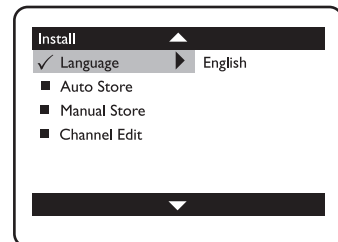

5



Exit menu from screen.

Screen displays may look different on certain models.

AUTOMATIC TUNING OF CHANNELS

Automatic tuning of channels allows you to store each programme automatically.

Step


Press button

Result on screen

1




Enter main menu

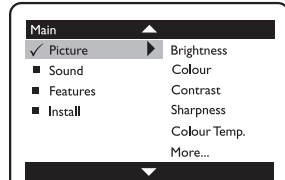

2




Press button repeatedly until **Install** is selected.

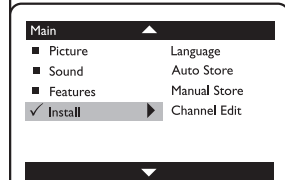

3




Enter the Install menu.

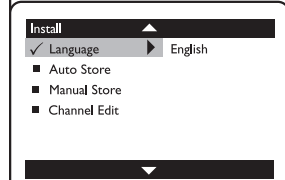

4




Select **Auto Store**.

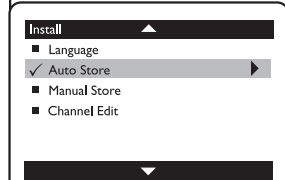

5




Start automatic tuning of channels.

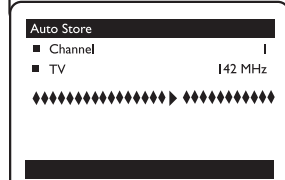

6



When tuning is completed, exit menu from screen.

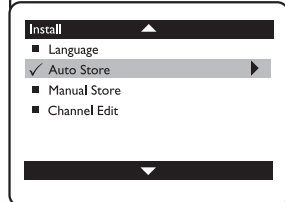

Screen displays may look different on certain models.

MANUAL TUNING OF CHANNELS

Manual tuning of channels allows you to select your preferred channel number for every available programme.

Step


Press button

Result on screen

1




Enter main menu.

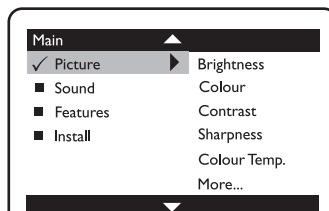

2




Press button repeatedly until **Install** is selected.

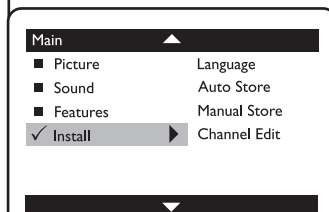

3




Enter the Install menu.

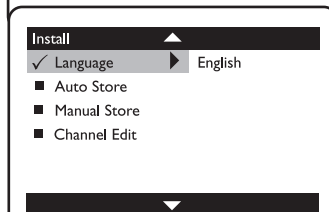

4




Press button repeatedly until **Manual Store** is selected.

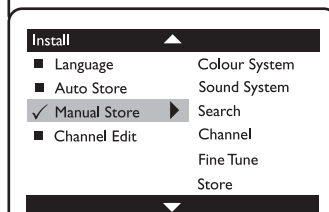

5



Enter the Manual Store menu.

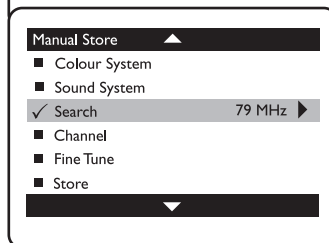

6



Press button repeatedly until **Search** is selected.

Screen displays may look different on certain models.

MANUAL TUNING OF CHANNELS

Step


Press button

Result on screen

7



Start manual searching. Searching stops once a transmitting signal is found.

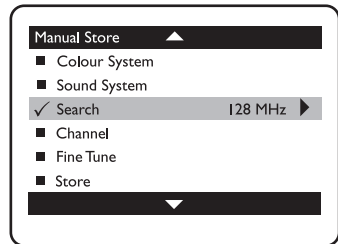


8




Select **Channel**.

 9




Key in the channel number.

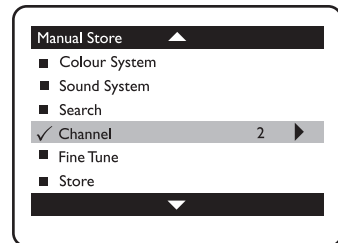

10




Press button repeatedly until **Store** is selected.

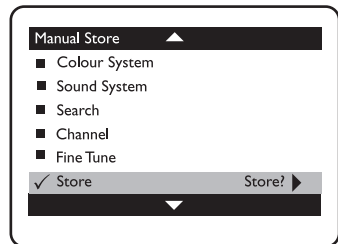

11



Store the tuned channel. Note : If you want to continue searching for another transmitting channel, repeat steps 7 to 11.

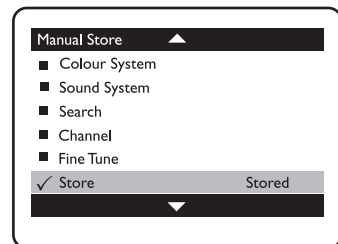

12



Exit menu from screen.

Screen displays may look different on certain models.

COLOUR / SOUND SYSTEM

This feature allows you to select your desired **Colour** and **Sound** system. If **Auto** is selected, the respective colour and sound system will be automatically selected according to the transmission system. Note: Select your desired colour and sound system manually if reception is poor in Auto mode.

Step

Press button

Repeat steps 1 to step 5 as in “Manual Tuning of TV Channels”

Colour System is selected.

6



or



Select the desired colour system (**Auto, PAL, NTSC 3.58, NTSC 4.43 or SECAM**).

7



Press button repeatedly until **Store** is selected.

8



Store selected system.

9



or



Proceed to select **Sound System**.

10



or



Select the desired sound system (**Auto, BG, I, DK or M**).

11



Press button repeatedly until **Store** is selected.

12




Store selected system.

13



Exit menu from screen.


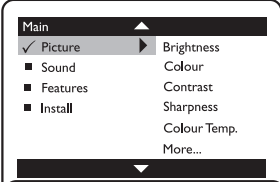

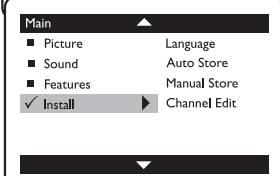

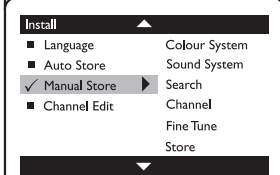

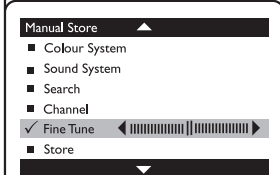

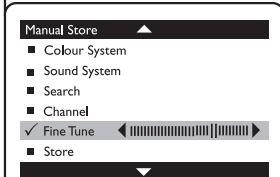


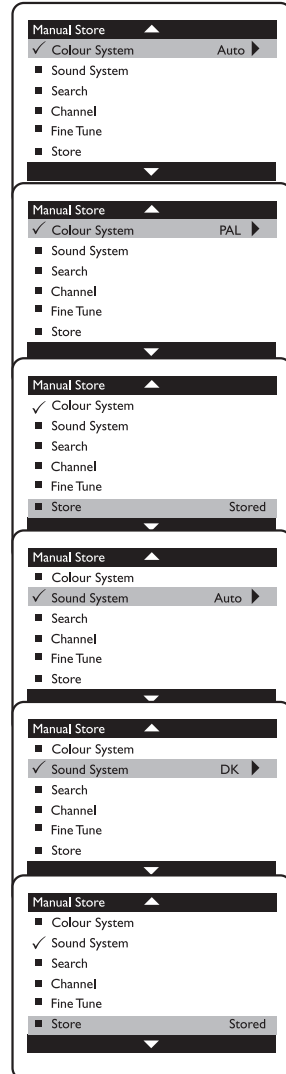






Result on screen



Screen displays may look different on certain models.

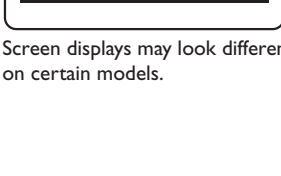FINE TUNING OF CHANNELS

This feature allows you to adjust picture reception in areas of weak reception.

| Step | Press button | Result on screen |
|-----------|--|---|
| 1 |  |  |
| 2 |  |  |
| 3 |  |  |
| 4 |  |  |
| 5 |  |  |
| 6 |  |  |
| 7 |  or  |  |
| 8 |  |  |
| 9 |  | |
| 10 |  | |

Screen displays may look different on certain models.

CHANNEL EDIT

This feature allows you to skip or edit channels which have bad or weak TV signal or channels that you do not watch often. Note: Once a channel is skipped, you cannot access it by using the CH (Channel) + or - button. You can only access it using the channel digit (0 - 9) buttons.

Step

Press button

1



Enter main menu.

2



Press button repeatedly until **Install** is selected.

3



Enter the Install menu.

4



Press button repeatedly until **Channel Edit** is selected.

5



Enter the **Channel Edit** menu.

6



Key in the channel number to be skipped.

7



Select **Skipped**.

8




Select **On** to skip channel.

9




Exit menu from screen.

Result on screen

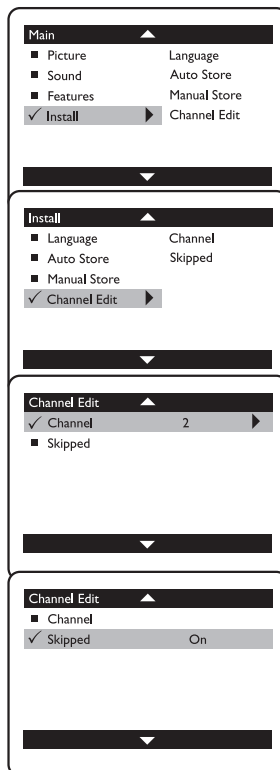

HOW TO RESTORE SKIPPED CHANNELS

- Repeat Steps 1 to 5 as in "Editing of Channels".
- Key in the channel number to be restored with the Digit (0 - 9) button.
- Select Skipped with the button.
- Select Off to restore channel with the button.
- Exit menu from screen with the button.

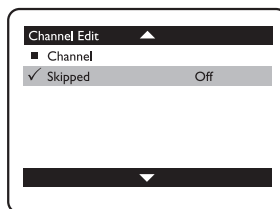

Screen displays may look different on certain models.

PICTURE ADJUSTMENTS

The picture menu allows you to make adjustments to the picture.

Step


Press button

Result on screen

1




Enter main menu.

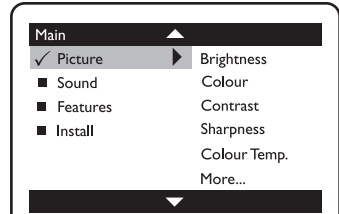

2



Enter **Picture** menu.

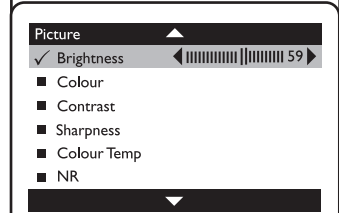


3



Select item.

or

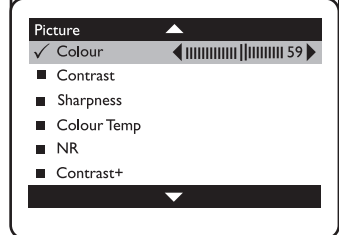

4



Adjust level or select desired setting.

or



5











Exit menu from screen.

Screen displays may look different on certain models.


| Picture menu items | Activities |
|----------------------|---|
| Brightness | Increase or decrease brightness level. |
| Colour | Increase or decrease colour level. |
| Contrast | Increase or decrease contrast level. |
| Sharpness | Increase or decrease sharpness level to improve detail in picture. |
| Colour temperature | Choose from 3 settings (Normal, Warm or Cool). |
| NR (Noise Reduction) | Select On to reduce “noisy” picture (little dots on picture) due to weak signal. |
| Contrast + | Select On to optimise the total contrast for improved picture quality. |

SOUND ADJUSTMENTS

The sound menu allows you to make adjustments to the sound.


- | Step | Press button | |
|------|--|---|
| 1 |  | Enter main menu. |
| 2 |  | Select Sound menu. |
| 3 |  | Enter Sound menu. |
| 4 |  or  | Select item. |
| 5 |  or  | Adjust level or select desired setting. |
| 6 |  | Exit menu from screen. |

Result on screen

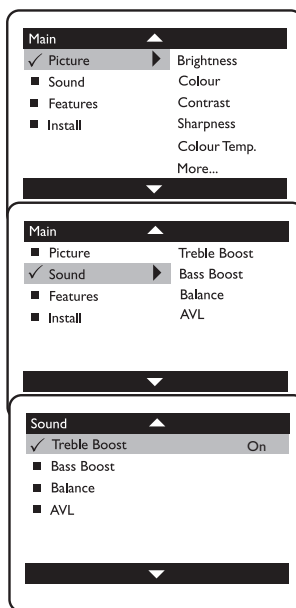







Screen displays may look different on certain models.

| Sound menu items | Activities |
|----------------------------|--|
| Treble Boost | Switch On or Off high frequency level. |
| Bass Boost | Switch On or Off low frequency level. |
| Balance | Increase or decrease to adjust balance level. |
| AVL (Auto Volume Leveller) | Select On to enable volume to remain at a pre-determined level should there be a sudden change in volume during commercial breaks or channel surfing. |


Tip: In TV mode, you can change the sound to **STEREO** or **MONO** by pressing the  button to toggle between the two modes. The mode will be displayed on the top right of the screen.

FORMAT ADJUSTMENTS

You can have a choice of two formats for your viewing pleasure, namely : -4:3 mode and the **EXPAND 4:3** mode through the **FORMAT** menu.

- | Step | Press button | |
|------|---|---|
| 1 |  | Enter main menu. |
| 2 |  | Press button repeatedly until Features is selected. |
| 3 |  | Enter the Features menu. |
| 4 |  | Press button repeatedly until Format is selected. |
| 5 |  | Press the button repeatedly to cycle through the different formats (4:3 or Expand 4:3) or and select your desired format. |
| 6 |  | Exit menu from screen. |

Result on screen

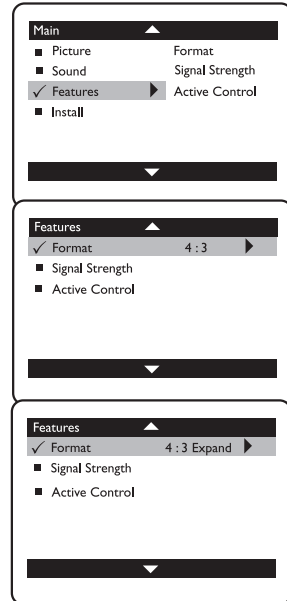

Screen displays may look different on certain models.

When to use the Screen formats

4:3 format


Select the 4:3 format if you want to display the 4:3 picture using the full surface of the screen.



Expand 4:3 format

Select the Expand 4:3 format if you want to expand movie images recorded in the letterbox format.

.When this format is selected, the black horizontal bars at the top and bottom are expanded thus filling up the entire TV screen.

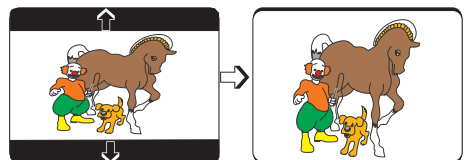

SIGNAL STRENGTH

The Signal Strength feature allows to view the signal strength level when the **On** option is selected. The signal strength level will be indicated at the bottom of the screen whenever you switch channel.

Step

Press button

Result on screen

1



Enter main menu.

2



Press button repeatedly until **Features** is selected.

3



Enter **Features** menu.

4



Press button repeatedly until **Signal Strength** is selected.

5




Press button to select **On** option to activate the **Signal Strength** mode.

6



Exit menu from screen.

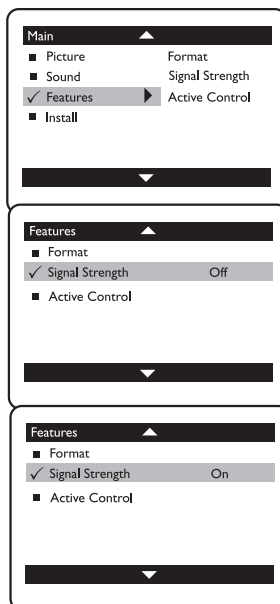

Screen displays may look different on certain models.


ACTIVE CONTROL

This Active Control feature automatically adjust settings for optimal picture quality continuously under any signal conditions. To activate the Active Control feature, select the "ON" option in the Active Control menu.

Step

Press button

1

 Enter main menu.


2

 Press button repeatedly until **Features** is selected.


3

 Enter **Features** menu.


4

 Press button repeatedly until **Active Control** is selected.


5

 Press the button to select **On** option to activate **Active Control** mode. If **Display On** option is selected, the settings of Brightness, Contrast, Sharpness, Contrast + and Noise Reduction will be displayed on the screen when the set is switched on or when you switch to another channel.

6

 Exit menu from screen.

Result on screen

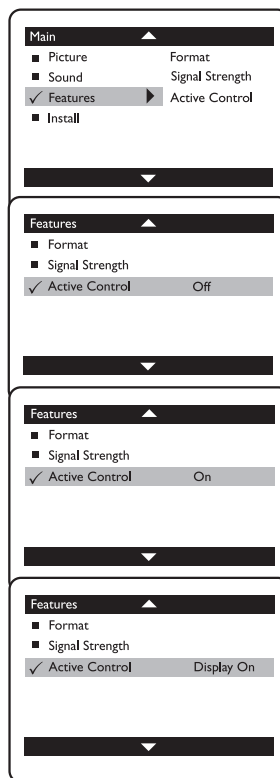

Screen displays may look different on certain models.

SMART PICTURE

Whether you are watching a movie or video game, your TV has automatic video control settings matched to your current program source or content. The Smart Picture feature quickly resets your TV's video controls of program for a number of different types of programs and viewing conditions you may have in your home. Each Smart Picture setting is preset at the factory to automatically adjust the TV's Brightness, Colour, Picture and Sharpness levels.

Step

Press button

1



Press button repeatedly to cycle through the 5 settings namely, Personal, DVD/VCD, Rich, Natural and Soft and select your desired picture setting.

2



Exit menu from screen.

Defintion of Picture settings


Personal : Picture settings are set to your preference.

DVD/VCD : For optimal picture setting, whenever the source is connected to DVD/VCD player, select DVD/VCD setting for AV mode.

Rich : Emphasize very vibrant colours. This setting is the optimal setting when you are viewing TV programmes in a brightly-lit room.

Natural : Emphasize original colours.

Soft : Emphasize “warm” colours. (Suitable for dimly-lit room condition and gives cinema-like effect when light is switched off).

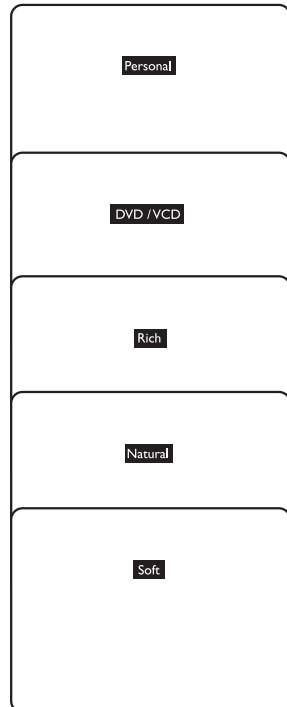

Screen displays may look different on certain models.

SMART SOUND

Whether you are watching a movie or video game, your TV has automatic sound control settings matched to your current program source or content. The Smart Sound feature quickly resets your TV's sound controls of program for a number of different types of programs and viewing conditions you may have in your home. Each Smart Sound setting is preset at the factory to automatically adjust the TV's Treble and Bass levels.

Step

Press button

1



Press button repeatedly to cycle through the 4 settings namely, **Personal**, **Theatre**, **Music** and **Voice** and select your desired sound setting.


2



Exit menu from screen.

Definition of Sound settings

| | |
|----------|--|
| Personal | : Sound settings are set to your preference. |
| Theatre | : Emphasize sensation to action. (Bass and Treble boosted) |
| Music | : Emphasize low tone (Bass boosted). |
| Voice | : Emphasize high tone (treble boosted). |

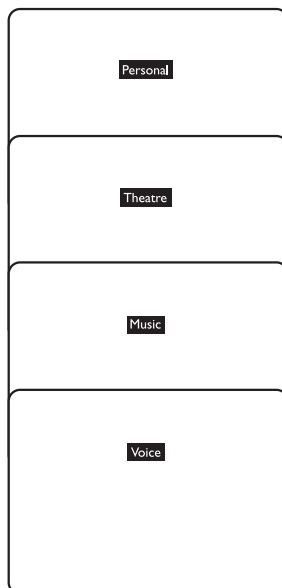

Screen displays may look different on certain models.

PERSONAL ZAPPING

A list or series of favourite TV programs can be selected and stored in the 4 coloured buttons with the Personal Zapping feature. With this feature you can easily view up to a total of 10 preferred channels for each coloured button.

Adding Channels to the favourite list

Step

Press button

Result on screen

1



Select a channel with the Digit buttons.

2



Press button to display list.

3




Choose your favourite colour button to store selected channel.

Repeat steps 1 to 3 to add and store your favourite channels to the list.

4



Exit menu from screen.

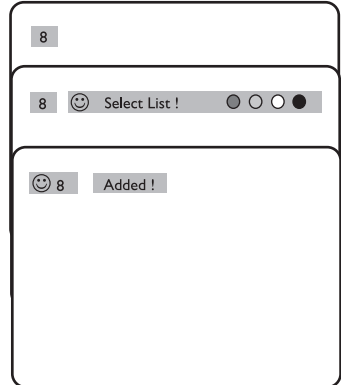

To view through the favourite list

1



Press the colour button that you have selected.

2



Press button repeatedly to cycle through your favourite list and view your favourite channel.

Deleting channels from the favourite list

1



Select a colour button and press button repeatedly to select the channel you want to delete.

2



Press button to display list.

3




Press button to remove item.

Repeat steps 1 to 3 to delete more channels from list.

4




Exit menu from screen.

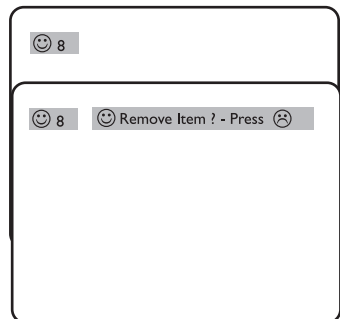

TELETEXT

(Available on certain models only)

If a TV channel broadcast contains teletext information, each channel that broadcasts teletext transmits a page (index page) with information on how to use the teletext system, usually on page 100. The system transmitted is indicated in the option line at the bottom of the screen.

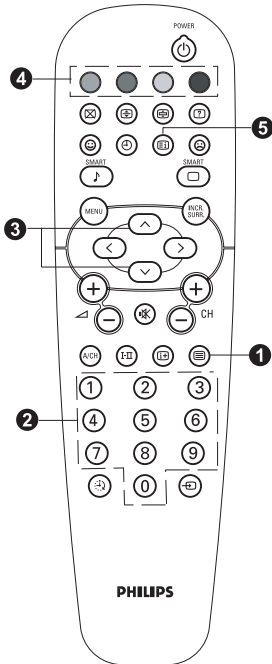


Press button

- 1 On/Off teletext and superimpose teletext page over TV programme.



 - 2 Selecting a teletext page



- 3 Accessing a teletext page



- 4 Direct Access to an item or corresponding pages



 
- 5 Main Index



Result on screen

Press the button once to switch on teletext display. (A channel in which teletext is being transmitted must be selected). Press the button the second time superimpose the teletext page over the TV programme. Press the button the third time to exit teletext mode.

Key in the required teletext page (3 digits). The page number is displayed at the top left hand corner of the screen. When the teletext page is located, the counter stops searching. If the counter keeps searching, it means that the page is not available for selection. If you make a mistake in keying the page number, you have to complete keying the 3-digit number before re-keying the correct page number.


Press the  button to display the next page and the  button to display the previous page.

The 4-colour buttons allow you to access directly an item or corresponding pages.

Press the button to return to the main index page.

TELETEXT

(Available on certain models only)

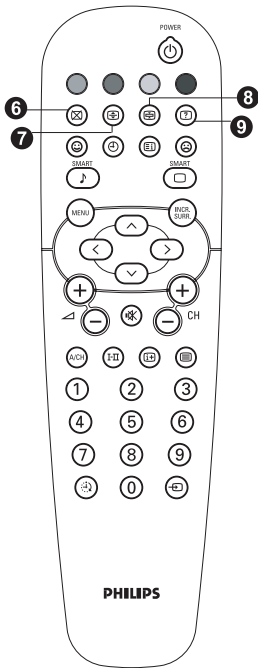

Press button

6 Interrupt



7 Enlarge



8 Hold



9 Reveal / Conceal



Result on screen

Press the button to change to TV mode. Press the button again to return to teletext mode and to the teletext page.

Press the button once to enlarge and view the top half of the page. Press the button the second time to enlarge and view the bottom half of the page. Press the button the third time to return to normal sized page.

A selected page sometimes contains a few sub-pages. The sub-page will automatically move to the next sub-page after about 20 seconds. The total number of sub-pages are indicated at the top right hand corner of the screen. Press the button once to hold page and the second time to release holding of page.

Press the button once to reveal hidden information (solutions to puzzles, riddles, etc). Press the button the second time to conceal information.

This button is applicable only to teletext page with puzzles, riddles, etc.

SPECIFICATIONS

| Product type | 2IPT5006 | 29PT5006 | 25PT5016 | 29PT5016 | 2IPT5026 | 29PT5026 |
|------------------------------|--|----------|----------|----------|--|----------|
| Picture | | | | | | |
| Display screen type | Real Flat picture tube | | | | | |
| Diagonal screen size | 55 cm | 72 cm | 63 cm | 72 cm | 55 cm | 72 cm |
| Visible diagonal screen size | 51 cm | 68 cm | 59 cm | 68 cm | 51 cm | 68 cm |
| Aspect ratio | 4:3 | | | | | |
| Picture enhancements | Active Control | | | | | |
| Picture noise reduction | Noise Reduction | | | | | |
| Sound | | | | | | |
| Loudspeakers | 2 x 5 W | | | | | |
| Sound systems | AV Stereo | | | | Full Stereo | |
| Sound features | AVL, Mute, Smart Sound (4 modes) | | | | AVL, Mute, Smart Sound (4 modes), Dynamic Ultra Bass, Incredible Sound | |
| Convenience | Sleeptimer, Auto Store, Personal Zapping, Signal Strength Indicator | | | | | |
| Reception | | | | | | |
| TV system | PAL - Multi AP | | | | | |
| TV Systems Off Air/ Cable | PAL B/G, PAL D/K, PAL I, SECAM B/G, SECAM D/K | | | | | |
| Connectivity | | | | | | |
| Rear | AV1: CVBS in, Y Pb Pr, AV2: S-Video, CVBS in; AV3: Monitor Out; Antenna in (75Ω) | | | | | |
| Side / Top | CVBS in, Headphone out | | | | | |

SPECIFICATIONS

| Product type | 21PT5006 | 29PT5006 | 25PT5016 | 29PT5016 | 21PT5026 | 29PT5026 |
|----------------------------------|---------------------|-----------------|-----------------|-----------------|-----------------|-----------------|
| General | | | | | | |
| Mains volt/freq. | 100-250V / 50-60 Hz | | | | | |
| Power consumption | 54 W | 73 W | 63 W | 73 W | 54 W | 73 W |
| Net weight | 21 kg | 42 kg | 29 kg | 42 kg | 21 kg | 42 kg |
| Gross weight | 23.5 kg | 47.5 kg | 33 kg | 47.5 kg | 23.5 kg | 47.5 |
| Set dimensions (W x H x D) mm | 594 x 460 x 486 | 740 x 583 x 484 | 662 x 527 x 451 | 740 x 583 x 484 | 594 x 460 x 486 | 740 x 583 x 484 |

Note: Specifications subject to change without notice.



Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.
2004 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com
3139 125 36651