



North/Latin America
Europe/Africa
Asia/Oceania

Internal Use Only

<http://aic.lgservice.com>
<http://eic.lgservice.com>
<http://biz.lgservice.com>

LED LCD TV


SERVICE MANUAL

CHASSIS : LJ03D

MODEL : 32LE5500 32LE5500-SA

CAUTION

BEFORE SERVICING THE CHASSIS,
READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

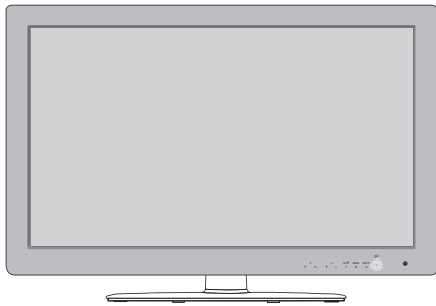

CONTENTS

CONTENTS	2
PRODUCT SAFETY	3
SPECIFICATION	6
ADJUSTMENT INSTRUCTION	12
EXPLODED VIEW	20
SVC. SHEET	

SAFETY PRECAUTIONS

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by \triangle in the Schematic Diagram and Exploded View.

It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent Shock, Fire, or other Hazards.

Do not modify the original design without permission of manufacturer.

General Guidance

An **isolation Transformer should always be used** during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks.

It will also protect the receiver and its components from being damaged by accidental shorts of the circuitry that may be inadvertently introduced during the service operation.

If any fuse (or Fusible Resistor) in this TV receiver is blown, replace it with the specified.

When replacing a high wattage resistor (Oxide Metal Film Resistor, over 1 W), keep the resistor 10 mm away from PCB.

Keep wires away from high voltage or high temperature parts.

Before returning the receiver to the customer,

always perform an **AC leakage current check** on the exposed metallic parts of the cabinet, such as antennas, terminals, etc., to be sure the set is safe to operate without damage of electrical shock.

Leakage Current Cold Check(Antenna Cold Check)

With the instrument AC plug removed from AC source, connect an electrical jumper across the two AC plug prongs. Place the AC switch in the on position, connect one lead of ohm-meter to the AC plug prongs tied together and touch other ohm-meter lead in turn to each exposed metallic parts such as antenna terminals, phone jacks, etc.

If the exposed metallic part has a return path to the chassis, the measured resistance should be between 1 M Ω and 5.2 M Ω .

When the exposed metal has no return path to the chassis the reading must be infinite.

An other abnormality exists that must be corrected before the receiver is returned to the customer.

Leakage Current Hot Check (See below Figure)

Plug the AC cord directly into the AC outlet.

Do not use a line Isolation Transformer during this check.


Connect 1.5 K / 10 watt resistor in parallel with a 0.15 μ F capacitor between a known good earth ground (Water Pipe, Conduit, etc.) and the exposed metallic parts.

Measure the AC voltage across the resistor using AC voltmeter with 1000 ohms/volt or more sensitivity.

Reverse plug the AC cord into the AC outlet and repeat AC voltage measurements for each exposed metallic part. Any voltage measured must not exceed 0.75 volt RMS which corresponds to 0.5 mA.

In case any measurement is out of the limits specified, there is possibility of shock hazard and the set must be checked and repaired before it is returned to the customer.

Leakage Current Hot Check circuit

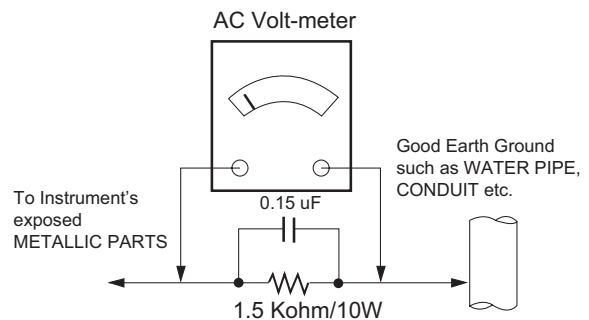

When 25A is impressed between Earth and 2nd Ground for 1 second, Resistance must be less than 0.1 Ω

*Base on Adjustment standard

SERVICING PRECAUTIONS

CAUTION: Before servicing receivers covered by this service manual and its supplements and addenda, read and follow the **SAFETY PRECAUTIONS** on page 3 of this publication.

NOTE: If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

General Servicing Precautions

1. Always unplug the receiver AC power cord from the AC power source before;
 - a. Removing or reinstalling any component, circuit board module or any other receiver assembly.
 - b. Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
 - c. Connecting a test substitute in parallel with an electrolytic capacitor in the receiver.

CAUTION: A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.

2. Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc) equipped with a suitable high voltage probe. Do not test high voltage by "drawing an arc".
3. Do not spray chemicals on or near this receiver or any of its assemblies.
4. Unless specified otherwise in this service manual, clean electrical contacts only by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable non-abrasive applicator; 10 % (by volume) Acetone and 90 % (by volume) isopropyl alcohol (90 % - 99 % strength)
CAUTION: This is a flammable mixture. Unless specified otherwise in this service manual, lubrication of contacts in not required.
5. Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
6. Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
7. Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead.
Always remove the test receiver ground lead last.

8. Use with this receiver only the test fixtures specified in this service manual.

CAUTION: Do not connect the test fixture ground strap to any heat sink in this receiver.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called *Electrostatically Sensitive (ES) Devices*. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the unit under test.

2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static type solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.
CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

General Soldering Guidelines

1. Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range or 500 °F to 600 °F.
2. Use an appropriate gauge of RMA resin-core solder composed of 60 parts tin/40 parts lead.
3. Keep the soldering iron tip clean and well tinned.
4. Thoroughly clean the surfaces to be soldered. Use a mall wire-bristle (0.5 inch, or 1.25 cm) brush with a metal handle. Do not use freon-propelled spray-on cleaners.
5. Use the following unsoldering technique
 - a. Allow the soldering iron tip to reach normal temperature. (500 °F to 600 °F)
 - b. Heat the component lead until the solder melts.
 - c. Quickly draw the melted solder with an anti-static, suction-type solder removal device or with solder braid.
CAUTION: Work quickly to avoid overheating the circuit board printed foil.
6. Use the following soldering technique.
 - a. Allow the soldering iron tip to reach a normal temperature (500 °F to 600 °F)
 - b. First, hold the soldering iron tip and solder the strand against the component lead until the solder melts.
 - c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.
CAUTION: Work quickly to avoid overheating the circuit board printed foil.
 - d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

IC Remove/Replacement

Some chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

Removal

1. Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts.
2. Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

Replacement

1. Carefully insert the replacement IC in the circuit board.
2. Carefully bend each IC lead against the circuit foil pad and solder it.
3. Clean the soldered areas with a small wire-bristle brush. (It is not necessary to reapply acrylic coating to the areas).

"Small-Signal" Discrete Transistor

Removal/Replacement

1. Remove the defective transistor by clipping its leads as close as possible to the component body.
2. Bend into a "U" shape the end of each of three leads remaining on the circuit board.
3. Bend into a "U" shape the replacement transistor leads.
4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact then solder each connection.

Power Output, Transistor Device

Removal/Replacement

1. Heat and remove all solder from around the transistor leads.
2. Remove the heat sink mounting screw (if so equipped).
3. Carefully remove the transistor from the heat sink of the circuit board.
4. Insert new transistor in the circuit board.
5. Solder each transistor lead, and clip off excess lead.
6. Replace heat sink.

Diode Removal/Replacement

1. Remove defective diode by clipping its leads as close as possible to diode body.
2. Bend the two remaining leads perpendicular y to the circuit board.
3. Observing diode polarity, wrap each lead of the new diode around the corresponding lead on the circuit board.
4. Securely crimp each connection and solder it.
5. Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and if necessary, apply additional solder.

Fuse and Conventional Resistor

Removal/Replacement

1. Clip each fuse or resistor lead at top of the circuit board hollow stake.
2. Securely crimp the leads of replacement component around notch at stake top.
3. Solder the connections.
CAUTION: Maintain original spacing between the replaced component and adjacent components and the circuit board to prevent excessive component temperatures.

Circuit Board Foil Repair

Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board causing the foil to separate from or "lift-off" the board. The following guidelines and procedures should be followed whenever this condition is encountered.

At IC Connections

To repair a defective copper pattern at IC connections use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections).

1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary).
2. Carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.
3. Bend a small "U" in one end of a small gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.
4. Route the jumper wire along the path of the out-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area and clip off any excess jumper wire.

At Other Connections

Use the following technique to repair the defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

1. Remove the defective copper pattern with a sharp knife. Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.
2. Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
3. Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side. Carefully crimp and solder the connections.
CAUTION: Be sure the insulated jumper wire is dressed so the it does not touch components or sharp edges.

SPECIFICATION

NOTE : Specifications and others are subject to change without notice for improvement.

1. Application range

This specification is applied to the LCD TV used LJ03B/D/E/F chassis.

2. Requirement for Test

Each part is tested as below without special appointment.

- 1) Temperature
: $25\text{ }^{\circ}\text{C} \pm 5\text{ }^{\circ}\text{C}$ ($77\text{ }^{\circ}\text{F} \pm 9\text{ }^{\circ}\text{F}$), CST : $40\text{ }^{\circ}\text{C} \pm 5\text{ }^{\circ}\text{C}$
- 2) Relative Humidity : $65\% \pm 10\%$
- 3) Power Voltage
: Standard input voltage (AC 100-240 V~ 50 / 60 Hz)
* Standard Voltage of each products is marked by models.
- 4) Specification and performance of each parts are followed each drawing and specification by part number in accordance with BOM.
- 5) The receiver must be operated for about 20 minutes prior to the adjustment.

3. Test method

- 1) Performance: LGE TV test method followed
- 2) Demanded other specification
 - Safety: CE, IEC specification
 - EMC:CE, IEC

4. General Specification(TV)

No	Item	Specification	Remark
1	Receivable System	1) SBTVD / NTSC / PAL-M / PAL-N	
2	Available Channel	VHF : 02 ~ 13 UHF : 14 ~ 69 DTV : 07 ~ 69 CATV : 01 ~ 135	
3	Input Voltage	1) AC 100 ~ 240V 50/60Hz	
4	Market	Central and South AMERICA	
5	Screen Size	32 inch Wide (1920 x 1080) 42 inch Wide (1920 x 1080) 47 inch Wide (1920 x 1080) 55 inch Wide (1920 x 1080) 60 inch Wide (1920 x 1080)	32LE7500,32LD650,32LE5500 42LE7500,42LD650,42LE5500,42LE8500 47LE7500,47LD650,47LE5500, 55LE7500,55LD650 60LE5500
6	Aspect Ratio	16:9	
7	Tuning System	FS	
8	LCD Module	LC320EUH-SCA4 (Vitiaz 5) LC420EUH-SCA2 (Vitiaz 5) LC470EUH-SCA2 (Vitiaz 5) LC550EUB-SCA2 (Vitiaz 5) LC320WUH-SCA1(Vitiaz 5) LC420WUH-SCA1(Vitiaz 5) LC470WUH-SCA1(Vitiaz 5) LC550WUB-SCA1(Vitiaz 5) LC320EUH-SCA1(Vitiaz 5) LC420EUH-SCA1(Vitiaz 5) LC470EUH-SCA1(Vitiaz 5) Sharp 60 FHD T240 IOP LED LC420MUK-SCA1 (Vitiaz 5)	32LE7500-SA 42LE7500-SA 47LE7500-SA 55LE7500-SA 32LD650-SA 42LD650-SA 47LD650-SA 55LD650-SA 32LE5500-SA 42LE5500-SA 47LE5500-SA 60LE5500-SA 42LE8500-SA
9	Operating Environment	Temp : 0 ~ 40 deg Humidity : ~ 80 %	
10	Storage Environment	Temp : -20 ~ 60 deg Humidity : -85 %	

5. Chrominance & Luminance Specification

1) LJ03D/E (LE5500,LE7500,42LE8500)

No	Item			Min	Typ	Max	Unit	Remark	
1.	Max Luminance (Center 1-point / Full White Pattern)	Module		360	450		cd/m ²	32/42/47/55LE7(5)500 42LE8500	
				450	500				
		Set		300	450		cd/m ²	32/42/47/55LE7(5)500 42LE8500	
				400	500				
2.	Luminance uniformity			77			%	Full white	
3.	Color coordinate	RED	X	Typ. -0.03	0.651	Typ. +0.03			32LE7(5)500 42/55LE7(5)500 47LE7(5)500 (42LE8500)
					0.647				
			0.645						
			(TBD)						
		Y	0.332						
			0.332						
		GREEN	X		0.308				
					0.309				
			0.310						
			(TBD)						
		Y	0.597						
			0.601						
BLUE	X	0.149							
		0.149							
	0.152								
	(TBD)								
Y	0.059								
	0.059								
WHITE	X	0.057							
		(TBD)							
	0.279								
	(0.280)								
Y	0.292								
	(0.290)								
4.	Color coordinate uniformity							N/A	
5.	Contrast ratio			900:1	1300:1			32LE7(5)500 42/47/55, 42LE85	
				1000:1	1400:1				NORMAL
				3,000,000:1	5,000,000:1			LE7(5)500	
				5,000,000:1	7,000,000:1			42LE8500	
6.	Color Temperature	Cool		0.267	0.269	0.271		<Test Condition> 85% Full white pattern ** The W/B Tolerance is ±0.015 Adjustment	
				0.271	0.273	0.275			
		Standard		0.283	0.285	0.287			
				0.291	0.293	0.295			
		Warm		0.311	0.313	0.315			
				0.327	0.329	0.331			
7.	Color Distortion, DG					10.0	%		
8.	Color Distortion, DP					10.0	deg		
9.	Color S/N, AM/FM			43.0			dB		
10.	Color Killer Sensitivity			-80			dBm		

2) LJ03B (32/42/47/55LD650-SA)

No	Item			Min	Typ	Max	Unit	Remark	
1.	Max Luminance (Center 1-point / Full White Pattern)	Module		400	500		cd/m ²	32/42/47/55LD650	
		Set		400	500		cd/m ²	32/42/47/55LD650	
2.	Luminance uniformity			77			%	Full white	
3.	Color coordinate	RED	X	Typ. -0.03	0.642	Typ. +0.03			32LD650 42LD650 47LD650 55LD650
			Y		0.636				
		GREEN	X		0.639				
					(TBD)				
			Y		0.334				
					0.335				
		BLUE	X		0.334				
					(TBD)				
			Y		0.292				
					0.291				
		WHITE	X		0.290				
					(TBD)				
Y	0.607								
	0.603								
BLUE	X	0.606							
		(TBD)							
	Y	0.146							
		0.146							
WHITE	X	0.146							
		(TBD)							
	Y	0.056							
		0.061							
WHITE	X	0.058							
		(TBD)							
	Y	0.279							
		0.292							
4.	Color coordinate uniformity							N/A	
5.	Contrast ratio			1000:1	1400:1			32LD650	NORMAL
				1100:1	1500:1			42/55LD650	DCR
				1200:1	1500:1			47LD650	
				50,000:1	70,000:1				
6.	Color Temperature	Cool		0.267	0.269	0.271			<Test Condition> 85% Full white pattern ** The W/B Tolerance is ±0.015 Adjustment
				0.271	0.273	0.275			
		Standard		0.283	0.285	0.287			
				0.291	0.293	0.295			
		Warm		0.311	0.313	0.315			
				0.327	0.329	0.331			
7.	Color Distortion, DG					10.0	%		
8.	Color Distortion, DP					10.0	deg		
9.	Color S/N, AM/FM			43.0			dB		
10.	Color Killer Sensitivity			-80			dBm		

6. Component Video Input (Y, Cb/Pb, Cr/Pr)

No	Resolution	H-freq(kHz)	V-freq.(kHz)	Pixel clock	Proposed
1.	720*480	15.73	60	13.5135	SDTV ,DVD 480I
2.	720*480	15.73	59.94	13.5	SDTV ,DVD 480I
3.	720*480	31.50	60	27.027	SDTV 480P
4.	720*480	31.47	59.94	27.00	SDTV 480P
5.	720*576	15.625	50*	13.5	SDTV 576I
6.	720*576	31.25	50*	13.5	SDTV 576P
7.	1280*720	37.5	50*	74.25	HDTV 720P
8.	1280*720	45.00	60.00	74.25	HDTV 720P
9.	1280*720	44.96	59.94	74.176	HDTV 720P
10.	1929*1080	28.125	50*	74.25	HDTV 1080I
11.	1920*1080	33.75	60.00	74.25	HDTV 1080I
12.	1920*1080	33.72	59.94	74.176	HDTV 1080I
13.	1920*1080	56.25	50*	148.5	HDTV 1080P
14.	1920*1080	67.50	60	148.50	HDTV 1080P
15.	1920*1080	67.432	59.94	148.352	HDTV 1080P
16.	1920*1080	27.00	24.00	74.25	HDTV 1080P
17.	1920*1080	26.97	23.976	74.176	HDTV 1080P
18.	1920*1080	33.75	30.00	74.25	HDTV 1080P
19.	1920*1080	33.71	29.97	74.176	HDTV 1080P

8. RGB Input (PC)

No	Resolution	H-freq(kHz)	V-freq.(kHz)	Pixel clock	Proposed	
	PC					DDC
1.	640*350	31.468	70.09	25.17	EGA	X
2.	720*400	31.469	70.08	28.32	DOS	O
3.	640*480	31.469	59.94	25.17	VESA(VGA)	O
4.	800*600	37.879	60.31	40.00	VESA(SVGA)	O
5.	1024*768	48.363	60.00	65.00	VESA(XGA)	O
6.	1280*768	47.776	59.87	79.50	CVT(WXGA)	O
7.	1360*768	47.712	60.015	85.50	VESA(WXGA)	O
8.	1280*1024	63.981	60.020	108.00	VESA(SXGA)	O
9.	1600*1200	75.00	60.00	162	VESA(UXGA)	O
10.	1920*1080	67.50	60	148.5	HDTV 1080P	O

- RGB PC Monitor Range Limits

Min Vertical Freq - 56 Hz
 Max Vertical Freq - 62 Hz
 Min Horiz. Freq - 30 kHz
 Max Horiz. Freq - 80 kHz
 Pixel Clock - 170 MHz

9. HDMI input (PC/DTV)

No	Resolution	H-freq(kHz)	V-freq.(kHz)	Pixel clock	Proposed	
						DDC
	PC					
1.	640*350	31.468	70.09	25.17	EGA	X
2.	720*400	31.469	70.08	28.32	DOS	O
3.	640*480	31.469	59.94	25.17	VESA(VGA)	O
4 .	800*600	37.879	60.31	40.00	VESA(SVGA)	O
5.	1024*768	48.363	60.00	65.00	VESA(XGA)	O
6.	1280*768	47.776	59.870	79.50	CVT(WXGA)	X
7.	1360*768	47.712	60.015	85.50	VESA(WXGA)	X
8.	1280*1024	63.981	60.020	108.00	VESA(SXGA)	O
9.	1600*1200	75.00	60.00	162	VESA(UXGA)	O
10.	1920*1080	67.5	60	148.5	HDTV 1080P	O
	DTV					
1.	720*480	31.50	60	27.027	SDTV 480P	
2.	720*480	31.47	59.94	27.00	SDTV 480P	
3.	720*576	31.25	50*	13.5	SDTV 576P	
4.	1280*720	37.5	50*	74.25	HDTV 720P	
5.	1280*720	45.00	60.00	74.25	HDTV 720P	
6.	1280*720	44.96	59.94	74.176	HDTV 720P	
7.	1929*1080	28.125	50*	74.25	HDTV 1080I	
8.	1920*1080	33.75	60.00	74.25	HDTV 1080I	
9.	1920*1080	33.72	59.94	74.176	HDTV 1080I	
10.	1920*1080	56.25	50*	148.5	HDTV 1080P	
11.	1920*1080	67.50	60	148.50	HDTV 1080P	
12.	1920*1080	67.432	59.94	148.352	HDTV 1080P	
13.	1920*1080	27.00	24.00	74.25	HDTV 1080P	
14.	1920*1080	26.97	23.976	74.176	HDTV 1080P	
15.	1920*1080	33.75	30.00	74.25	HDTV 1080P	
16.	1920*1080	33.71	29.97	74.176	HDTV 1080P	

- HDMI Monitor Range Limits

Min Vertical Freq - 56 Hz

Min Horiz. Freq - 30 kHz

Pixel Clock - 170 MHz

Max Vertical Freq - 62 Hz

Max Horiz. Freq - 80 kHz

ADJUSTMENT INSTRUCTION

1. Application Range

This specification sheet is applied all of the LJ03D/E LCD TV models, which produced in manufacture department or similar LG TV factory

2. Notice

- (1) Because this is not a hot chassis, it is not necessary to use an isolation transformer. However, the use of isolation transformer will help protect test instrument.
- (2) Adjustment must be done in the correct order.
- (3) The adjustment must be performed in the circumstance of 25 °C ± 5 °C of temperature and 65 % ± 10 % of relative humidity if there is no specific designation.
- (4) The input voltage of the receiver must keep AC 100-220 V~ 50 / 60Hz.
- (5) Before adjustment, execute Heat-Run for 5 minutes.

- △ After Receive 100% Full white pattern (06CH) then process Heat-run (or "8. Test pattern" condition of Ez-Adjust status)
- △ How to make set white pattern
 - 1) Press Power ON button of Service Remocon
 - 2) Press ADJ button of Service remocon. Select "8. Test pattern" and, after select "White" using navigation button, and then you can see 100% Full White pattern.

- * In this status you can maintain Heat-Run useless any pattern generator
- * **Notice:** if you maintain one picture over 20 minutes (Especially sharp distinction black with white pattern – 13Ch, or Cross hatch pattern – 09Ch) then it can appear image stick near black level.

3. Adjustment Items

3.1. PCB Assembly Adjustment

- △ MAC Address Download
 - △ Adjust 480i Comp1
 - △ Adjust 1080p Comp1/RGB
 - If it is necessary, it can adjustment at Manufacture Line
 - You can see set adjustment status at "1. ADJUST CHECK" of the "In-start menu"
 - △ EDID (The Extended Display Identification Data)/DDC (Display Data Channel) download

3.2. Set Assembly Adjustment

- △ Color Temperature (White Balance) Adjustment
- △ Using RS-232C
- △ PING Test
- △ Selection Factory output option

4. PCB Assembly Adjustment


4.1. MAC Address

4.1.1. Equipment & Condition

- Play file: Serial.exe
- MAC Address edit
- Input Start / End MAC address

4.1.2 Download method


4.1.2.1 Communication Prot connection

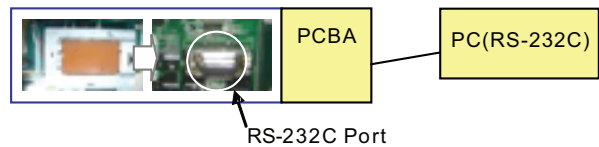

Connect: PCBA Jig-> RS-232C Port== PC-> RS-232C Port

4.1.2.2 MAC Address Download

- Com 1,2,3,4 and 115200(Baudrate)
- Port connection button click(1)

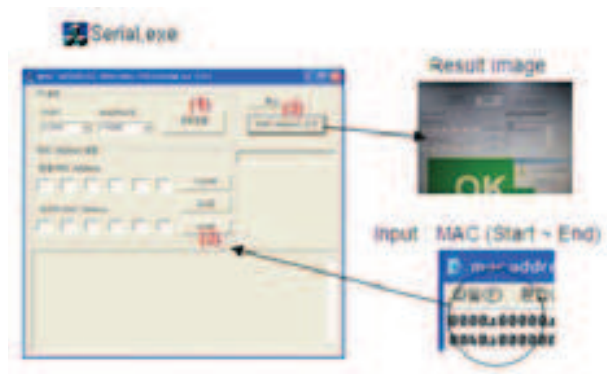

- Load button click(2) for MAC Address write.
- Start MAC Address write button(3)
- Check the OK Or NG


4.1.3 Equipment & Condition

- Each other connection to LAN Port of IP Hub and Jig



4.1.4 LAN inspection solution

- LAN Port connection with PCB
- Network setting at MENU Mode of TV
- Setting automatic IP
- Setting state confirmation
 - If automatic setting is finished, you confirm IP and MAC Address.

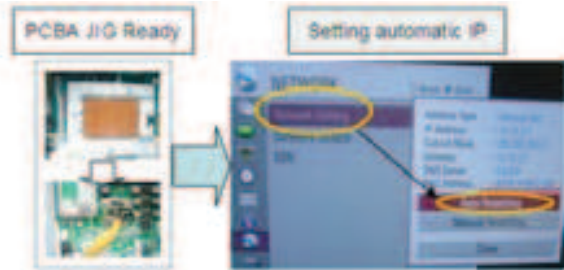

4.1.5 LAN Port Inspection (PING Test)

Connect: SET-> LAN Port == PC-> LAN Port



4.1.5.1 Equipment setting

- 1) Play the LAN Port Test PROGRAM.
- 2) Input IP set up for an inspection to Test Program.
 - *IP Number : 12.12.2.2

4.1.6 LAN Port Inspection (PING Test)

- 1) Play the LAN Port Test Program.
- 2) connect each other LAN Port Jack.
- 3) Play Test (F9) button and confirm OK Message.
- 4) remove LAN CABLE



4.2. Using RS-232C

Adjust 3 items at 3.1 PCB assembly adjustments “adjustment sequence” one after the order.

A Adjustment protocol

Order	Comment	Set response
1. Enter the Adjustment mode	aa 00 00	aa 00 0000
2. Change the source	xb 00 40 xb 00 60	xb 00 00 00 (Adjust 480i Comp1) (Adjust 1080p Comp1) xb 00 00 00 (Adjust 1080p-PC)
3. Start Adjustment	ad 00 10	
4. Return the response		OK (Success condition) NG (Failed condition)
5. Read Adjustment data	[mode] ad 00 10 [mode] ad 00 10	[mode] : component1 : 480i / RGB (1080p) XX [mode] : component1 : 1080p / XX
6. Confirm Adjustment	ad 00 90	NO (EOL mode (Failed condition)) NO (EOL mode (Failed condition)) NO (EOL mode (Failed condition)) OK 00 00 (Success condition)
7. End of Adjustment	ad 00 90	ad 00 0000

See ADC Adjustment RS232C Protocol_Ver1.0

A Necessary items before Adjustment items

- Pattern Generator : (MSPG-925FA)
- Adjust 480i Comp1 (MSPG-925FA:model :209 , pattern :65) – Comp1 Mode
- Adjust 1080p Comp1 (MSPG-925FA:model :225 , pattern :65) – Comp1 Mode
- Adjust RGB (MSPG-925FA:model :225 , Pattern :65) – RGB-PC Mode

* If you want more information then see the below Adjustment method (Factory Adjustment)

A Adjustment sequence

- aa 00 00: Enter the ADC Adjustment mode.
- xb 00 40: Change the mode to Component1 (No actions)
- ad 00 10: Adjust 480i Comp
- ad 00 10: Adjust 1080p Comp
- xb 00 60: Change to RGB-PC mode(No action)
- ad 00 10: Adjust 1080p RGB
- xb 00 90: Endo of Adjustment

 
5 Factory Adjustment

5.1 Manual Adjust Component 480i/1080p RGB 1080p

A Summary : Adjustment component 480i/1080i and RGB 1080p is Gain and Black level setting at Analog to Digital converter, and compensate the RGB deviation

A Using instrument

- Adjustment remocon, 801GF(802B, 802F, 802R) or MSPG925FA pattern generator (It can output 480i/1080i horizontal 100% color bar pattern signal, and its output level must setting 0.7V±0.1V p-p correctly)



<Pic.4 Adjustment pattern : 480i / 1080p 60Hz Pattern >

A You must make it sure its resolution and pattern cause every instrument can have different setting

A Adjustment method 480i Comp1, Adjust 1080p Comp1/RGB (Factory adjustment)

- ADC 480i Component1 adjustment
 - Check connection of Component1
 - MSPG-925FA -> Model: 209, Pattern 65
- Set Component 480i mode and 100% Horizontal Color Bar Pattern(HozTV31Bar), then set TV set to Component1 mode and its screen to "NORMAL"
- ADC 1080p Component1 / RGB adjustment
 - Check connection both of Component1 and RGB
 - MSPG-925FA -> Model: 225, Pattern 65
- Set Component 1080p mode and 100% Horizontal Color Bar Pattern(HozTV31Bar), then set TV set to Component1 mode and its screen to "NORMAL"
- After get each the signal, wait more a second and enter the "IN-START" with press IN-START key of Service remocon. After then select "7. External ADC" with navigator button and press "Enter".
- After Then Press key of Service remocon "Right Arrow(VOL+)"
- You can see "ADC Component1 Success"
- Component1 1080p, RGB 1080p Adjust is same method.
- Component 1080p Adjustment in Component1 input mode
- RGB 1080p adjustment in RGB input mode
- If you success RGB 1080p Adjust. You can see "ADC RGB-DTV Success"

5.2 EDID (The Extended Display Identification Data) / DDC (Display Data Channel) Download.

A Summary

- It is established in VESA, for communication between PC and Monitor without order from user for building user condition. It helps to make easily use realize "Plug and Play" function.

- For EDID data write, we use DDC2B protocol.

A Auto Download

- After enter Service Mode by pushing "ADJ" key,
- Enter EDID D/L mode.
- Enter "START" by pushing "OK" key.

=> Caution : - Never connect HDMI & D-sub Cable when the user downloading .

- Use the proper cables below for EDID Writing.



§ Edid data and Model option download (RS232)

NO	Item	CMD 1	CMD 2	Data 0	Data 1	
Enter download MODE	Download Mode In	A	E	0	0	When transfer the "Mode In", Carry the command
Edid data and Model option download	Download	A	E	*Note1	*Note2	Automatically download (The use of a internal Data)
	Adjust Mode Out	A	E	9	0	
	Adjustment Confirmation	A	E	9	9	To check Download go Assembly line


5.3 Adjustment Color Temperature (White balance)

A Using Instruments


- Color Analyzer: CA-210 (CH 9)
 - Using LCD color temperature, Color Analyzer (CA-210) must use CH 9, which Matrix compensated (White, Red, Green, Blue compensation) with CS-2100. See the Coordination bellowed one.
- Auto-adjustment Equipment (It needs when Auto-adjustment – It is availed communicate with RS-232C : Baud rate: 115200)
- Video Signal Generator MSPG-925F 720p, 216Gray (Model: 217, Pattern 78)

A Connection Diagram (Auto Adjustment)

- Using Inner Pattern

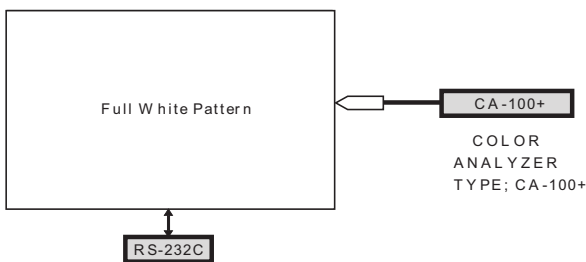

- Using HDMI input

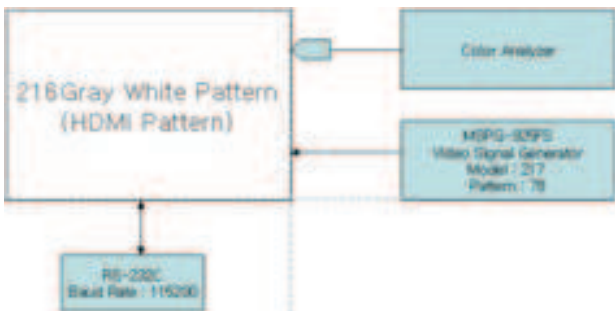

<Pic.5 Connection Diagram for Adjustment White balance>

A White Balance Adjustment

If you can't adjust with inner pattern, then you can adjust it using HDMI pattern. You can select option at "Ez-Adjust Menu – 7. White Balance" there items "NONE, INNER, HDMI". It is normally setting at inner basically. If you can't adjust using inner pattern you can select HDMI item, and you can adjust.

In manual Adjust case, if you press ADJ button of service remocon, and enter "Ez-Adjust Menu – 7. White Balance", then automatically inner pattern operates. (In case of "Inner" originally "Test-Pattern. On" will be selected in The "Test-Pattern. On/Off".

- Connect all cables and equipments like Pic.5)
- Set Baud Rate of RS-232C to 115200. It may set 115200 originally.
- Connect RS-232C cable to set
- Connect HDMI cable to set



A RS-232C Command (Commonly apply)

RS-232C COMMAND	Meaning		
CHND	ID	D	
wb	00	00	White Balance adjustment start
wb	00	10	Start of adjust gain (inner white pattern)
wb	00	1f	End of gain adjust
wb	00	20	Start of offset adjust(inner white pattern)
wb	00	2f	End of offset adjust
wb	00	ff	End of White balance adjust(inner pattern disappeared)

- "wb 00 00": Start Auto-adjustment of white balance.
- "wb 00 10": Start Gain Adjustment (Inner pattern)
- "jb 00 c0" :
- ...
- "wb 00 1f": End of Adjustment
 - * If it needs, offset adjustment (wb 00 20-start, wb 00 2f-end)
- "wb 00 ff": End of white balance adjustment (inner pattern disappear)

○ Notice) Adjustment Mapping information

	RS-232C COMMAND [CMD ID DATA]			MIN	CENTER (DEFAULT)			Max
	Cool	Mid	Warm		Cool	Mid	Warm	
	R Gain	32	38		3d	00	192	
G Gain	3h	3i	3j	00	189	175	157	192
B Gain	3	3c	3f	00	153	127	57	192
R Cut					64	64	64	127
G Cut					64	64	64	127

- When Color temperature (White balance) Adjustment (Automatically)
 - Press "Power only key" of service remocon and operate automatically adjustment.
 - Set BaudRate to 115200.
- If it needs, then adjustment "Offset".

A White Balance Adjustment (Manual adjustment)

- Test Equipment: CA-210
 - Using LCD color temperature, Color Analyzer (CA-210) must use CH 9, which Matrix compensated (White, Red, Green, Blue compensation) with CS-2100. See the Coordination bellowed one.
- Manual adjustment sequence is like bellowed one.
 - Turn to "Ez-Adjust" mode with press ADJ button of service remocon.
 - Select "10.Test Pattern" with CH+/- button and press enter. Then set will go on Heat-run mode. Over 30 minutes set let on Heat-run mode.
 - Let CA-210 to zero calibration and must has gap more 10cm from center of LCD module when adjustment.
 - Press "ADJ" button of service remocon and select "7.White-Balance" in "Ez-Adjust" then press " G " button of navigation key.
(When press " G " button then set will go to full white mode)
 - Adjust at three mode (Cool, Medium, Warm)
 - If "cool" mode
Let B-Gain to 192 and R, G, B-Cut to 64 and then control R, G gain adjustment High Light adjustment.
 - If "Medium" and "Warm" mode
Let R-Gain to 192 and R, G, B-Cut to 64 and then control G, B gain adjustment High Light adjustment.
 - All of the three mode
Let R-Gain to 192 and R, G, B-Cut to 64 and then control G, B gain adjustment High Light adjustment.
 - With volume button (+/-) you can adjust.
 - After all adjustment finished, with Enter (A key) turn to Ez-Adjust mode. Then with ADJ button, exit from adjustment mode

Attachment: White Balance adjustment coordination and color temperature.

- Using CS-1000 Equipment.
 - COOL : T=11000K, Δuv=0.000, x=0.276 y=0.283
 - MEDIUM : T=9300K, Δuv=0.000, x=0.285 y=0.293
 - WARM : T=6500K, Δuv=0.000, x=0.313 y=0.329

- Using CA-210 Equipment. (9 CH)
 - Contrast value: 216 Gray

Color temperature	Test Equipment	Color Coordination	
		x	y
COOL	CA-210	0.269±0.002	0.273±0.002
MEDIUM	CA-210	0.285±0.002	0.293±0.002
WARM	CA-210	0.313±0.002	0.329±0.002

- White Balance adjustment coordination and color temperature for Edge(IOP) LED (LJ03D/E)

Color Temperature		Cool	11,000K	%	X=0.285 (+0.002) Y=0.293 (+0.002)	3210(H)770(E)7500-SA 3210(H)750(E)5500-SA 43.0500-SA	<Test signal> 3sec pattern (216gray)25RE				
								Medium	9,300K	%	X=0.285 (+0.002) Y=0.293 (+0.002)
								Warm	6,500K	%	X=0.313 (+0.002) Y=0.329 (+0.002)

- White Balance adjustment table for Edge (IOP) LED (LJ03D/E)

	H/R Time(Min)	Cool		Medium		Warm	
		x	y	x	y	x	y
		269	273	285	293	313	329
1	0-2 Min	280	291	296	311	319	340
2	3-5 Min	278	288	294	308	317	338
3	6-9 Min	276	285	292	305	315	335
4	10-19 Min	274	282	290	302	313	332
5	20-35 Min	273	279	289	299	312	329
6	36-49 Min	270	276	287	296	310	326
7	50-79 Min	269	273	286	293	308	323
8	Above of 80 Min	269	273	285	293	308	323

5.4 EYE-Q function check

- 1) Turn on TV
- 2) Press EYE key of Adj. R/C
- 3) Cover the Eye Q II sensor on the front of the using your hand and wait for 6 seconds
- 4) Confirm that R/G/B value is lower than 10 of the "Raw Data (Sensor data, Back light)". If after 6 seconds, R/G/B value is not lower than 10, replace Eye Q II sensor
- 5) Remove your hand from the Eye Q II sensor and wait for 6 seconds
- 6) Confirm that "ok" pop up.
If change is not seen, replace Eye Q II sensor



5.5 HDCP (High-Bandwidth Digital Contents Protection) Setting

- No Need.

5.6 Test of RS-232C control.

Press In-Start button of Service Remocon then set the "4.Baud Rate" to 115200. Then check RS-232C control and

5.7 Selection of Country option.

Selection of country option is allowed only North American model (Not allowed Korean model). It is selection of Country about Rating and Time Zone.

- Models: All models which use LJ03X Chassis (See the first page.)
- Press "In-Start" button of Service Remocon, then enter the "Option" Menu with "PIP CH-" Button
- Select one of these three (USA, CANADA, MEXICO) depends on its market using "Vol. +/-" button.

*** Caution : Don't push The INSTOP KEY after completing the function inspection.**

6. GND and ESD Testing

6.1 Prepare GND and ESD Testing.

- A Check the connection between set and power cord

6.2 Operate GND and ESD auto-test.

- A Fully connected (Between set and power cord) set enter the Auto-test sequence.
- A Connect D-Jack AV jack test equipment.
- A Turn on Auto-controller(GWS103-4)
- A Start Auto GND test.
- A If its result is NG, then notice with buzzer.
- A If its result is OK, then automatically it turns to ESD Test.
- A Operate ESD test
- A If its result is NG, then notice with buzzer.
- A If its result is OK, then process next steps. Notice it with Good lamp and STOPER Down.Check Items.
- A Test Voltage
 - GND: 1.5KV/min at 100mA
 - Signal: 3KV/min at 100mA
- A Test time: just 1 second.
- A Test point
 - GND test: Test between Power cord GND and Signal cable metal GND.
 - ESD test: Test between Power cord GND and Live and neutral.
- A Leakage current: Set to 0.5mA(rms)

7. Preset Ch information.

Country	SYSTEM	CH	FREQ	BAND	VIDEO	AUDIO	REMARK
KOREA	NTSC	101.0	68.25	4875	SHITE	STEREO	
	PAL-M	99.4	67.25	4875	DIGITAL	MONO	
	NTSC	100.0	68.25	4875	PRODUCTION SYSTEM	MONO	
	NTSC	100.7	68.25	4875	WIDE PICTURE	STEREO	
	NTSC	100.9	68.25	4875	OCUS HATCH	STEREO	
	PAL-M	99.17	68.25	4875	DIGITAL	MONO	
	NTSC	100.0	68.25	4875	DIGITAL	STEREO	
	NTSC	100.18	68.25	4875	SECURITY	MONO	
	NTSC	100.22	68.25	4875	Best DTV System		Use DTV Support Channel, To Support User Interface, etc.
	NTSC	100.24	68.25	4875	Best DTV System		
	NTSC	100.28	68.25	4875	DIGITAL HDTV	MONO	CANADA, CANADA
	NTSC	100.30	68.25	4875	DIGITAL HDTV	MONO	Discontinued
PAL-M	99.32	68.25	4875	DIGITAL HDTV	MONO	Discontinued	
NTSC-M	100.68	68.25	4875	SECURITY	MONO	Discontinued	

In case of POWER ONLY, System color is operated multi system

In case of IN STOP, System color is operated default system (PAN-M)

8. Default Service option.



8.1 ADC-Set.

- A R-Gain adjustment Value (default 128)
- A G-Gain adjustment Value (default 128)
- A B-Gain adjustment Value (default 128)
- A R-Offset adjustment Value (default 128)
- A G-Offset adjustment Value (default 128)
- A B-Offset adjustment Value (default 128)

8.2 White balance. Value.

	CENTER (DEFAULT)			MAX
	Cool	Mid	Warm	
R. Gain	192	192	192	
G Gain	192	192	192	
B Gain	192	192	192	
R. Cut	64	64	64	
G Cut	64	64	64	
B Cut	64	64	64	

9. USB DOWNLOAD (*.epk file download)

9.1 Put the USB Stick to the USB socket


9.2 Press Menu key, and move OPTION



9.3 Press "FAV" Press 7 times.



9.4 Select download file (epk file)

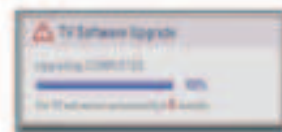


9.5 After download is finished, remove the USB stick.

9.6 Press "IN-START" key of ADJ remote control, check the S/W version.


EXPLODED VIEW

IMPORTANT SAFETY NOTICE





Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by \triangle in the Schematic Diagram and EXPLODED VIEW. It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent X-RADIATION, Shock, Fire, or other Hazards. Do not modify the original design without permission of manufacturer.

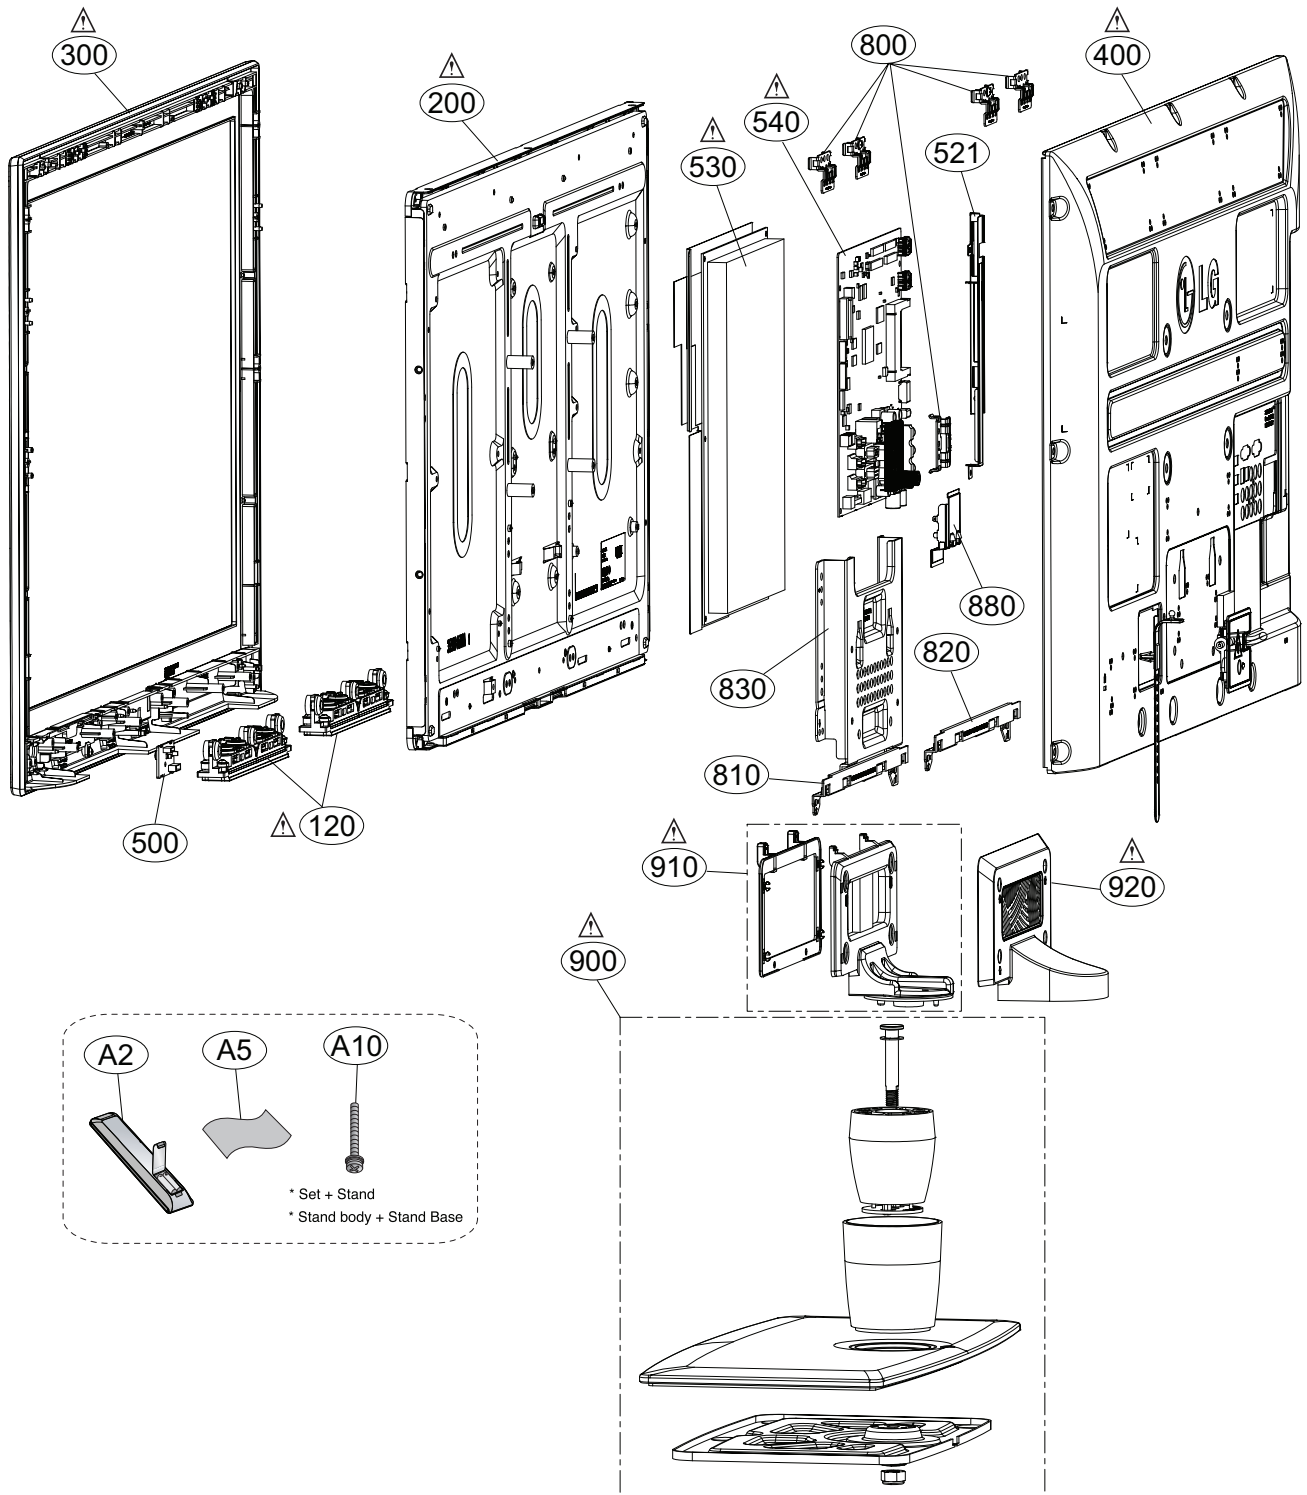

RESET

 


NVRAM

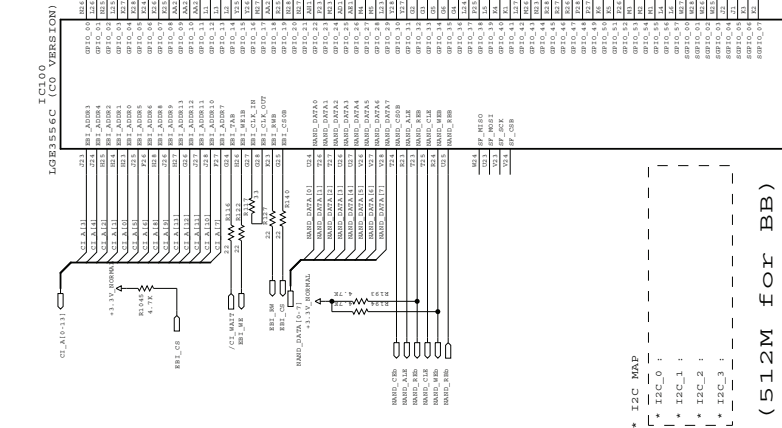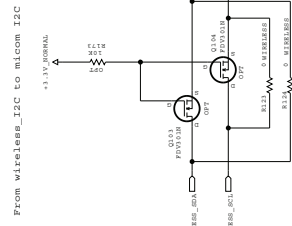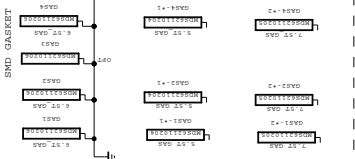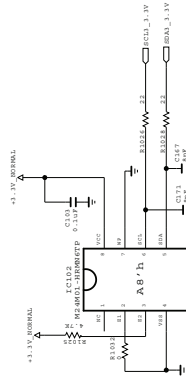

EXT. I/O
GPIO_00, GPIO_01, GPIO_02,
GPIO_11, GPIO_11, GPIO_39
IR_INT : GPIO_23
IR_IN : GPIO_25
IR_OUT : GPIO_26
IR_OUT : GPIO_26
PMW1 : GPIO_24
PMW1 : GPIO_09


Boot Strap

Default Res. of all NAND pin is Pull-down

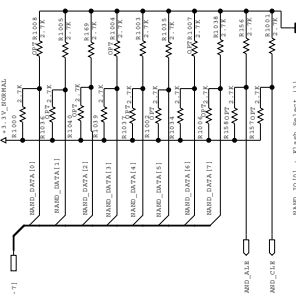


- NAND_001 : P148 Select (1)
- NAND_002 : P148 Select (2)
- NAND_003 : P148 Select (3)
- NAND_004 : P148 Select (4)
- NAND_005 : P148 Select (5)
- NAND_006 : P148 Select (6)
- NAND_007 : P148 Select (7)
- NAND_008 : P148 Select (8)
- NAND_009 : P148 Select (9)
- NAND_010 : P148 Select (10)
- NAND_011 : NAND Block 0 Write (WB)
- NAND_012 : NAND Block 0 Read (RB)
- NAND_013 : NAND Block 1 Write (WB)
- NAND_014 : NAND Block 1 Read (RB)
- NAND_015 : NAND Block 2 Write (WB)
- NAND_016 : NAND Block 2 Read (RB)
- NAND_017 : NAND Block 3 Write (WB)
- NAND_018 : NAND Block 3 Read (RB)
- NAND_019 : NAND Block 4 Write (WB)
- NAND_020 : NAND Block 4 Read (RB)
- NAND_021 : NAND Block 5 Write (WB)
- NAND_022 : NAND Block 5 Read (RB)
- NAND_023 : NAND Block 6 Write (WB)
- NAND_024 : NAND Block 6 Read (RB)
- NAND_025 : NAND Block 7 Write (WB)
- NAND_026 : NAND Block 7 Read (RB)
- NAND_027 : NAND Block 8 Write (WB)
- NAND_028 : NAND Block 8 Read (RB)
- NAND_029 : NAND Block 9 Write (WB)
- NAND_030 : NAND Block 9 Read (RB)
- NAND_031 : NAND Block 10 Write (WB)
- NAND_032 : NAND Block 10 Read (RB)
- NAND_033 : NAND Block 11 Write (WB)
- NAND_034 : NAND Block 11 Read (RB)
- NAND_035 : NAND Block 12 Write (WB)
- NAND_036 : NAND Block 12 Read (RB)
- NAND_037 : NAND Block 13 Write (WB)
- NAND_038 : NAND Block 13 Read (RB)
- NAND_039 : NAND Block 14 Write (WB)
- NAND_040 : NAND Block 14 Read (RB)
- NAND_041 : NAND Block 15 Write (WB)
- NAND_042 : NAND Block 15 Read (RB)
- NAND_043 : NAND Block 16 Write (WB)
- NAND_044 : NAND Block 16 Read (RB)
- NAND_045 : NAND Block 17 Write (WB)
- NAND_046 : NAND Block 17 Read (RB)
- NAND_047 : NAND Block 18 Write (WB)
- NAND_048 : NAND Block 18 Read (RB)
- NAND_049 : NAND Block 19 Write (WB)
- NAND_050 : NAND Block 19 Read (RB)
- NAND_051 : NAND Block 20 Write (WB)
- NAND_052 : NAND Block 20 Read (RB)
- NAND_053 : NAND Block 21 Write (WB)
- NAND_054 : NAND Block 21 Read (RB)
- NAND_055 : NAND Block 22 Write (WB)
- NAND_056 : NAND Block 22 Read (RB)
- NAND_057 : NAND Block 23 Write (WB)
- NAND_058 : NAND Block 23 Read (RB)
- NAND_059 : NAND Block 24 Write (WB)
- NAND_060 : NAND Block 24 Read (RB)
- NAND_061 : NAND Block 25 Write (WB)
- NAND_062 : NAND Block 25 Read (RB)
- NAND_063 : NAND Block 26 Write (WB)
- NAND_064 : NAND Block 26 Read (RB)
- NAND_065 : NAND Block 27 Write (WB)
- NAND_066 : NAND Block 27 Read (RB)
- NAND_067 : NAND Block 28 Write (WB)
- NAND_068 : NAND Block 28 Read (RB)
- NAND_069 : NAND Block 29 Write (WB)
- NAND_070 : NAND Block 29 Read (RB)
- NAND_071 : NAND Block 30 Write (WB)
- NAND_072 : NAND Block 30 Read (RB)
- NAND_073 : NAND Block 31 Write (WB)
- NAND_074 : NAND Block 31 Read (RB)
- NAND_075 : NAND Block 32 Write (WB)
- NAND_076 : NAND Block 32 Read (RB)
- NAND_077 : NAND Block 33 Write (WB)
- NAND_078 : NAND Block 33 Read (RB)
- NAND_079 : NAND Block 34 Write (WB)
- NAND_080 : NAND Block 34 Read (RB)
- NAND_081 : NAND Block 35 Write (WB)
- NAND_082 : NAND Block 35 Read (RB)
- NAND_083 : NAND Block 36 Write (WB)
- NAND_084 : NAND Block 36 Read (RB)
- NAND_085 : NAND Block 37 Write (WB)
- NAND_086 : NAND Block 37 Read (RB)
- NAND_087 : NAND Block 38 Write (WB)
- NAND_088 : NAND Block 38 Read (RB)
- NAND_089 : NAND Block 39 Write (WB)
- NAND_090 : NAND Block 39 Read (RB)
- NAND_091 : NAND Block 40 Write (WB)
- NAND_092 : NAND Block 40 Read (RB)
- NAND_093 : NAND Block 41 Write (WB)
- NAND_094 : NAND Block 41 Read (RB)
- NAND_095 : NAND Block 42 Write (WB)
- NAND_096 : NAND Block 42 Read (RB)
- NAND_097 : NAND Block 43 Write (WB)
- NAND_098 : NAND Block 43 Read (RB)
- NAND_099 : NAND Block 44 Write (WB)
- NAND_100 : NAND Block 44 Read (RB)
- NAND_101 : NAND Block 45 Write (WB)
- NAND_102 : NAND Block 45 Read (RB)
- NAND_103 : NAND Block 46 Write (WB)
- NAND_104 : NAND Block 46 Read (RB)
- NAND_105 : NAND Block 47 Write (WB)
- NAND_106 : NAND Block 47 Read (RB)
- NAND_107 : NAND Block 48 Write (WB)
- NAND_108 : NAND Block 48 Read (RB)
- NAND_109 : NAND Block 49 Write (WB)
- NAND_110 : NAND Block 49 Read (RB)
- NAND_111 : NAND Block 50 Write (WB)
- NAND_112 : NAND Block 50 Read (RB)
- NAND_113 : NAND Block 51 Write (WB)
- NAND_114 : NAND Block 51 Read (RB)
- NAND_115 : NAND Block 52 Write (WB)
- NAND_116 : NAND Block 52 Read (RB)
- NAND_117 : NAND Block 53 Write (WB)
- NAND_118 : NAND Block 53 Read (RB)
- NAND_119 : NAND Block 54 Write (WB)
- NAND_120 : NAND Block 54 Read (RB)
- NAND_121 : NAND Block 55 Write (WB)
- NAND_122 : NAND Block 55 Read (RB)
- NAND_123 : NAND Block 56 Write (WB)
- NAND_124 : NAND Block 56 Read (RB)
- NAND_125 : NAND Block 57 Write (WB)
- NAND_126 : NAND Block 57 Read (RB)
- NAND_127 : NAND Block 58 Write (WB)
- NAND_128 : NAND Block 58 Read (RB)
- NAND_129 : NAND Block 59 Write (WB)
- NAND_130 : NAND Block 59 Read (RB)
- NAND_131 : NAND Block 60 Write (WB)
- NAND_132 : NAND Block 60 Read (RB)
- NAND_133 : NAND Block 61 Write (WB)
- NAND_134 : NAND Block 61 Read (RB)
- NAND_135 : NAND Block 62 Write (WB)
- NAND_136 : NAND Block 62 Read (RB)
- NAND_137 : NAND Block 63 Write (WB)
- NAND_138 : NAND Block 63 Read (RB)
- NAND_139 : NAND Block 64 Write (WB)
- NAND_140 : NAND Block 64 Read (RB)
- NAND_141 : NAND Block 65 Write (WB)
- NAND_142 : NAND Block 65 Read (RB)
- NAND_143 : NAND Block 66 Write (WB)
- NAND_144 : NAND Block 66 Read (RB)
- NAND_145 : NAND Block 67 Write (WB)
- NAND_146 : NAND Block 67 Read (RB)
- NAND_147 : NAND Block 68 Write (WB)
- NAND_148 : NAND Block 68 Read (RB)
- NAND_149 : NAND Block 69 Write (WB)
- NAND_150 : NAND Block 69 Read (RB)
- NAND_151 : NAND Block 70 Write (WB)
- NAND_152 : NAND Block 70 Read (RB)
- NAND_153 : NAND Block 71 Write (WB)
- NAND_154 : NAND Block 71 Read (RB)
- NAND_155 : NAND Block 72 Write (WB)
- NAND_156 : NAND Block 72 Read (RB)
- NAND_157 : NAND Block 73 Write (WB)
- NAND_158 : NAND Block 73 Read (RB)
- NAND_159 : NAND Block 74 Write (WB)
- NAND_160 : NAND Block 74 Read (RB)
- NAND_161 : NAND Block 75 Write (WB)
- NAND_162 : NAND Block 75 Read (RB)
- NAND_163 : NAND Block 76 Write (WB)
- NAND_164 : NAND Block 76 Read (RB)
- NAND_165 : NAND Block 77 Write (WB)
- NAND_166 : NAND Block 77 Read (RB)
- NAND_167 : NAND Block 78 Write (WB)
- NAND_168 : NAND Block 78 Read (RB)
- NAND_169 : NAND Block 79 Write (WB)
- NAND_170 : NAND Block 79 Read (RB)
- NAND_171 : NAND Block 80 Write (WB)
- NAND_172 : NAND Block 80 Read (RB)
- NAND_173 : NAND Block 81 Write (WB)
- NAND_174 : NAND Block 81 Read (RB)
- NAND_175 : NAND Block 82 Write (WB)
- NAND_176 : NAND Block 82 Read (RB)
- NAND_177 : NAND Block 83 Write (WB)
- NAND_178 : NAND Block 83 Read (RB)
- NAND_179 : NAND Block 84 Write (WB)
- NAND_180 : NAND Block 84 Read (RB)
- NAND_181 : NAND Block 85 Write (WB)
- NAND_182 : NAND Block 85 Read (RB)
- NAND_183 : NAND Block 86 Write (WB)
- NAND_184 : NAND Block 86 Read (RB)
- NAND_185 : NAND Block 87 Write (WB)
- NAND_186 : NAND Block 87 Read (RB)
- NAND_187 : NAND Block 88 Write (WB)
- NAND_188 : NAND Block 88 Read (RB)
- NAND_189 : NAND Block 89 Write (WB)
- NAND_190 : NAND Block 89 Read (RB)
- NAND_191 : NAND Block 90 Write (WB)
- NAND_192 : NAND Block 90 Read (RB)
- NAND_193 : NAND Block 91 Write (WB)
- NAND_194 : NAND Block 91 Read (RB)
- NAND_195 : NAND Block 92 Write (WB)
- NAND_196 : NAND Block 92 Read (RB)
- NAND_197 : NAND Block 93 Write (WB)
- NAND_198 : NAND Block 93 Read (RB)
- NAND_199 : NAND Block 94 Write (WB)
- NAND_200 : NAND Block 94 Read (RB)

NAND FLASH MEMORY 4Gbit (512M for BB)

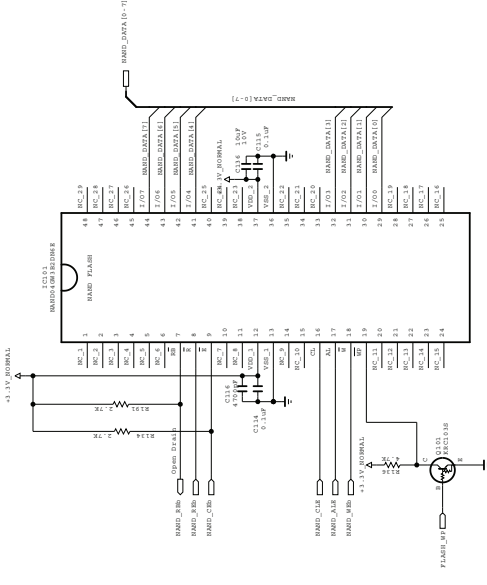


MODEL OPTION


MODEL_OPTION	RES	URBAN	LOW
MODEL_OPTION_1	RES	URBAN	LOW
MODEL_OPTION_2	RES	URBAN	LOW
MODEL_OPTION_3	RES	URBAN	LOW
MODEL_OPTION_4	RES	URBAN	LOW
MODEL_OPTION_5	RES	URBAN	LOW

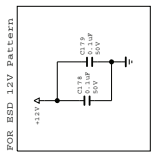



THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. PLEASE READ ELECTRICAL SHOCK WARNINGS, WHEN SERVING. IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

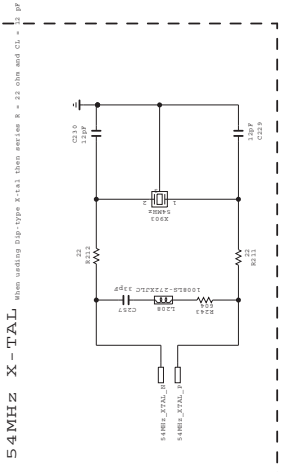

VIDEO INCM

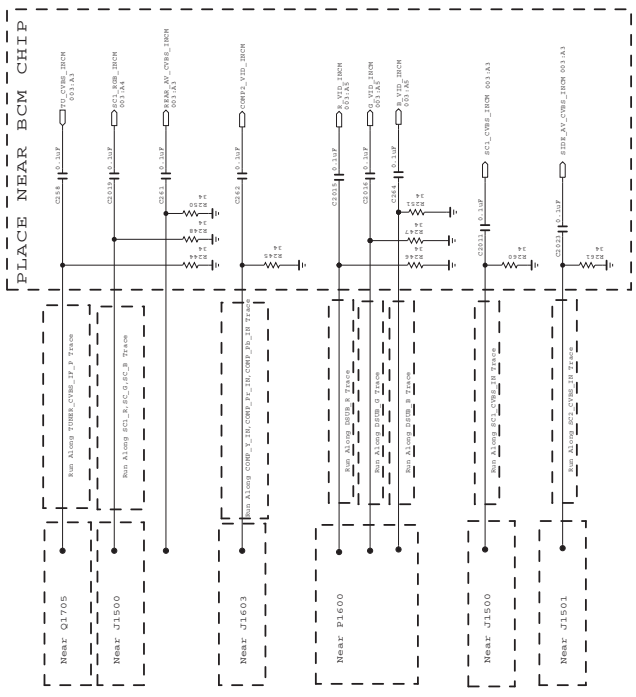

AUDIO INCM

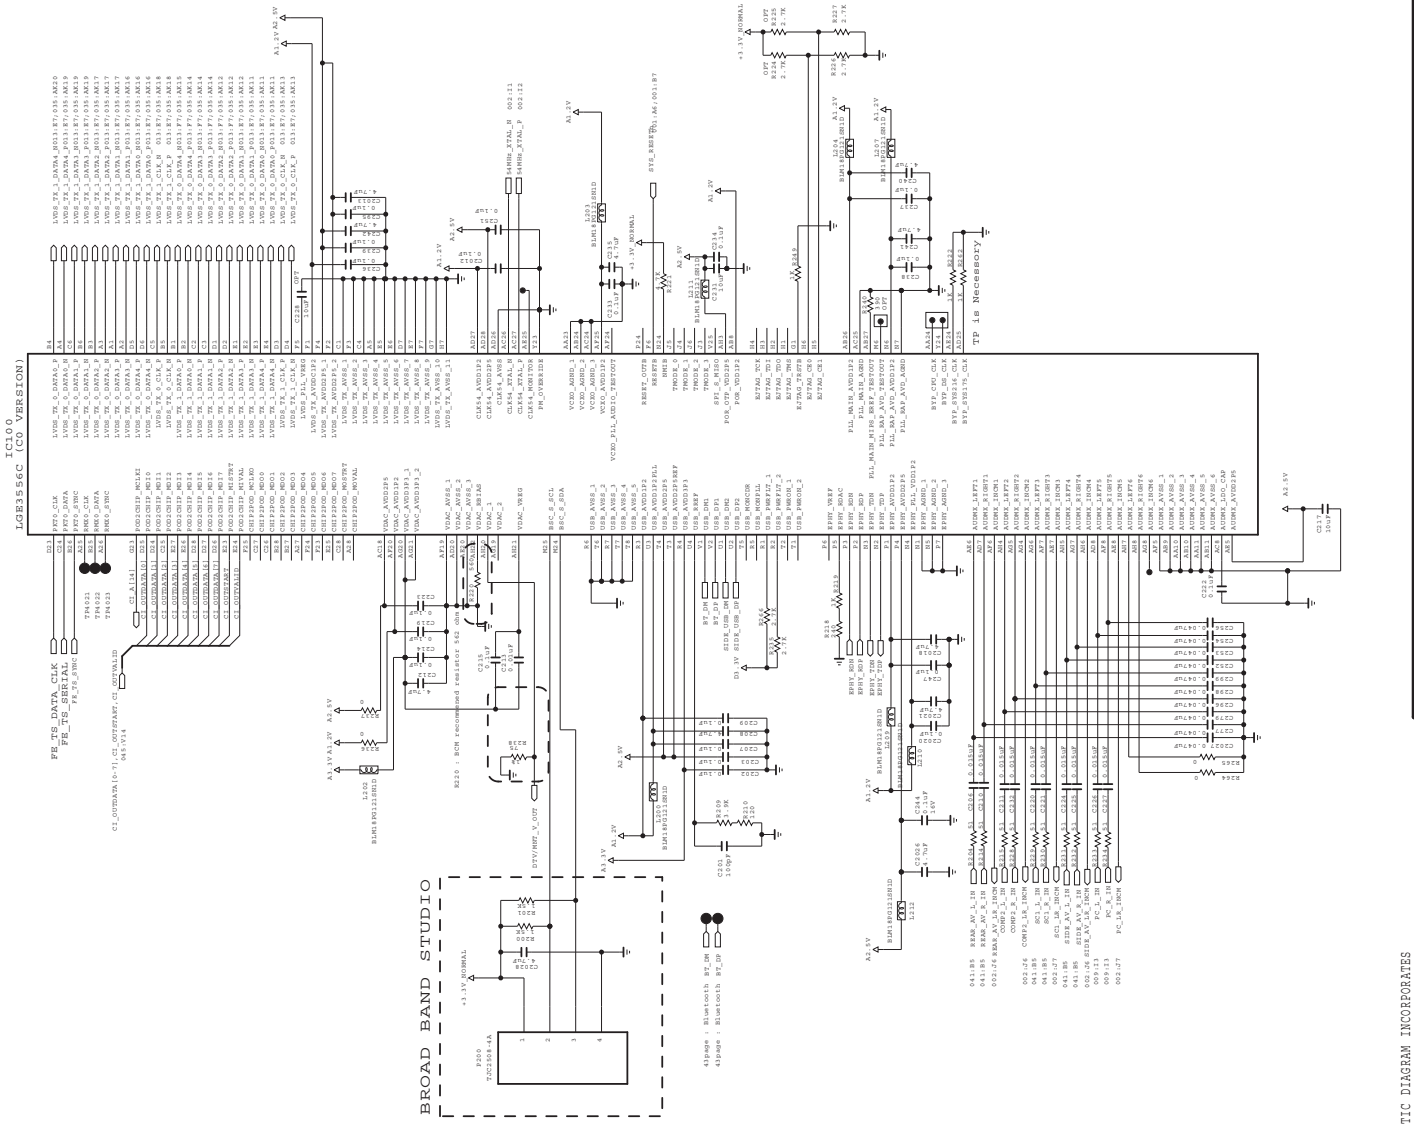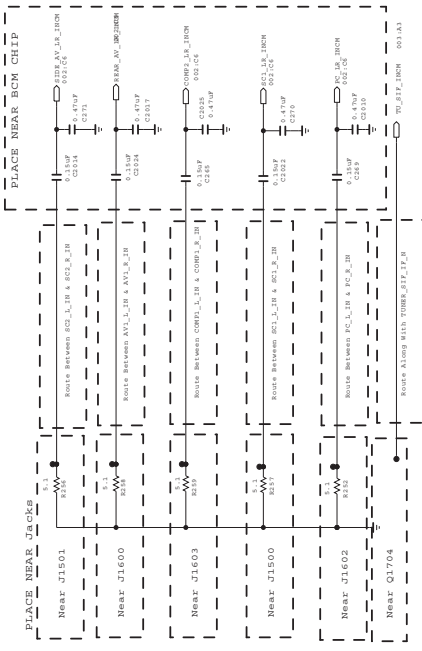




















NOTE: INCM between associated pins and right signals of same channel.
Please note the connector through-hole connector behavior ground.
Place test points, resistors connect the other side of connector to the ground as possible to the ground.
NOTE: connector associated

MODEL	BCM (EUROBEVY)	DATE	2009.06.18
BLOCK	BCN3556 AUDIO_IN/VIDEO	SHEET	2



SECRET
LGElectronics

THE MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIGURE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

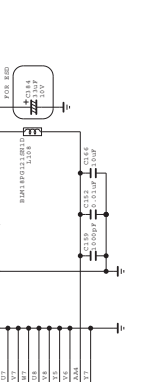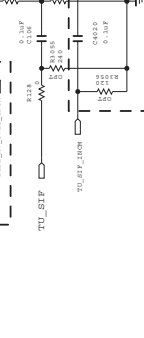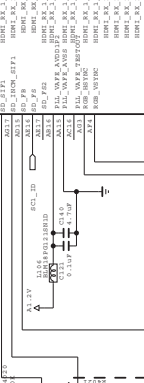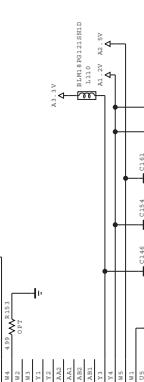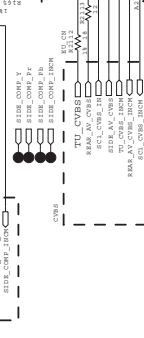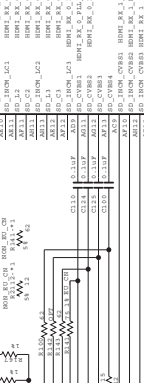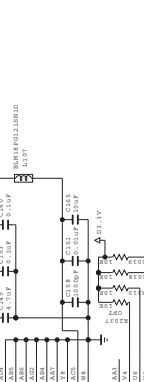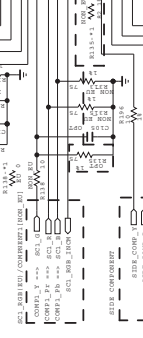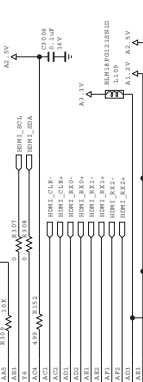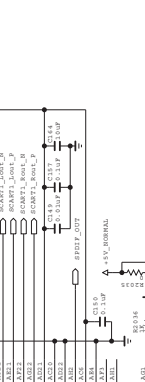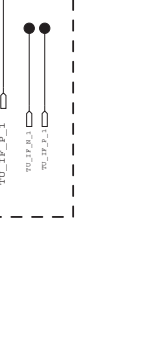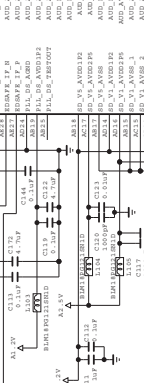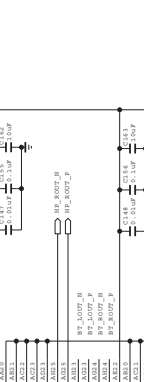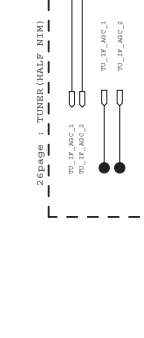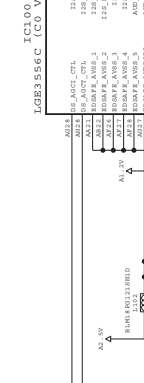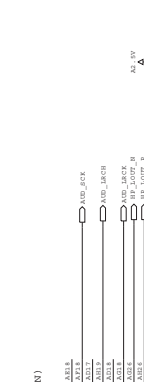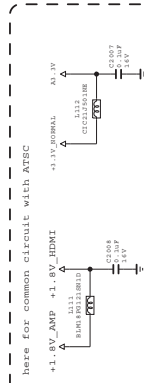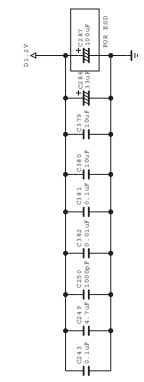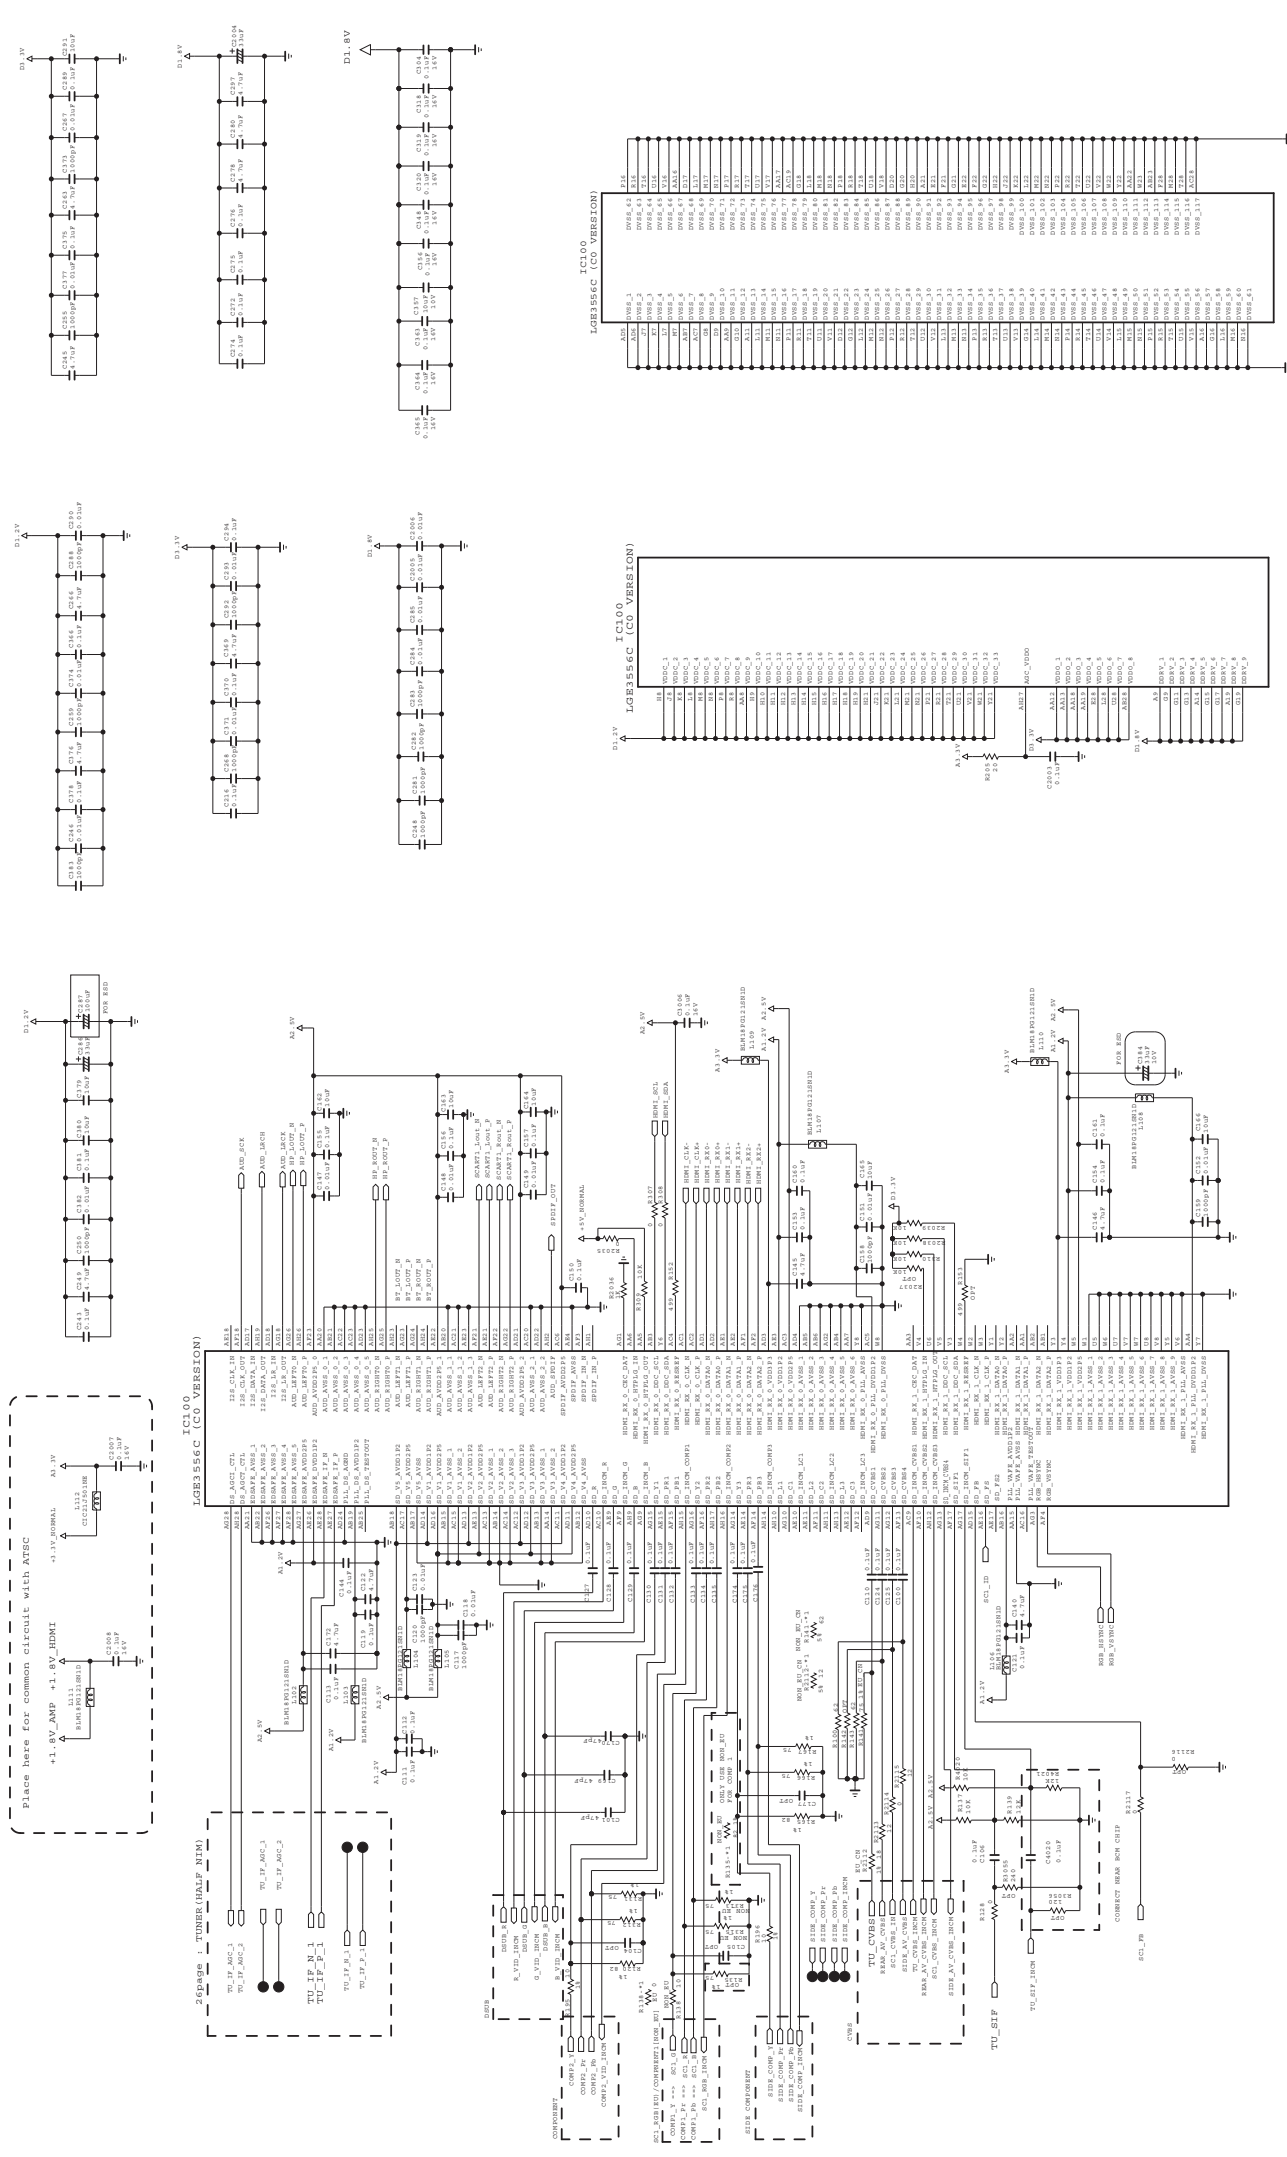

ICI100
LGR356C (CO VERSION)

ICI100
LGR356C (CO VERSION)


ICI100
LGR356C (CO VERSION)

ICI100
LGR356C (CO VERSION)

ICI100
LGR356C (CO VERSION)

ICI100
LGR356C (CO VERSION)


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIGURE AND ELECTRICAL SYMBOL HEADINGS, WHEN SERVING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

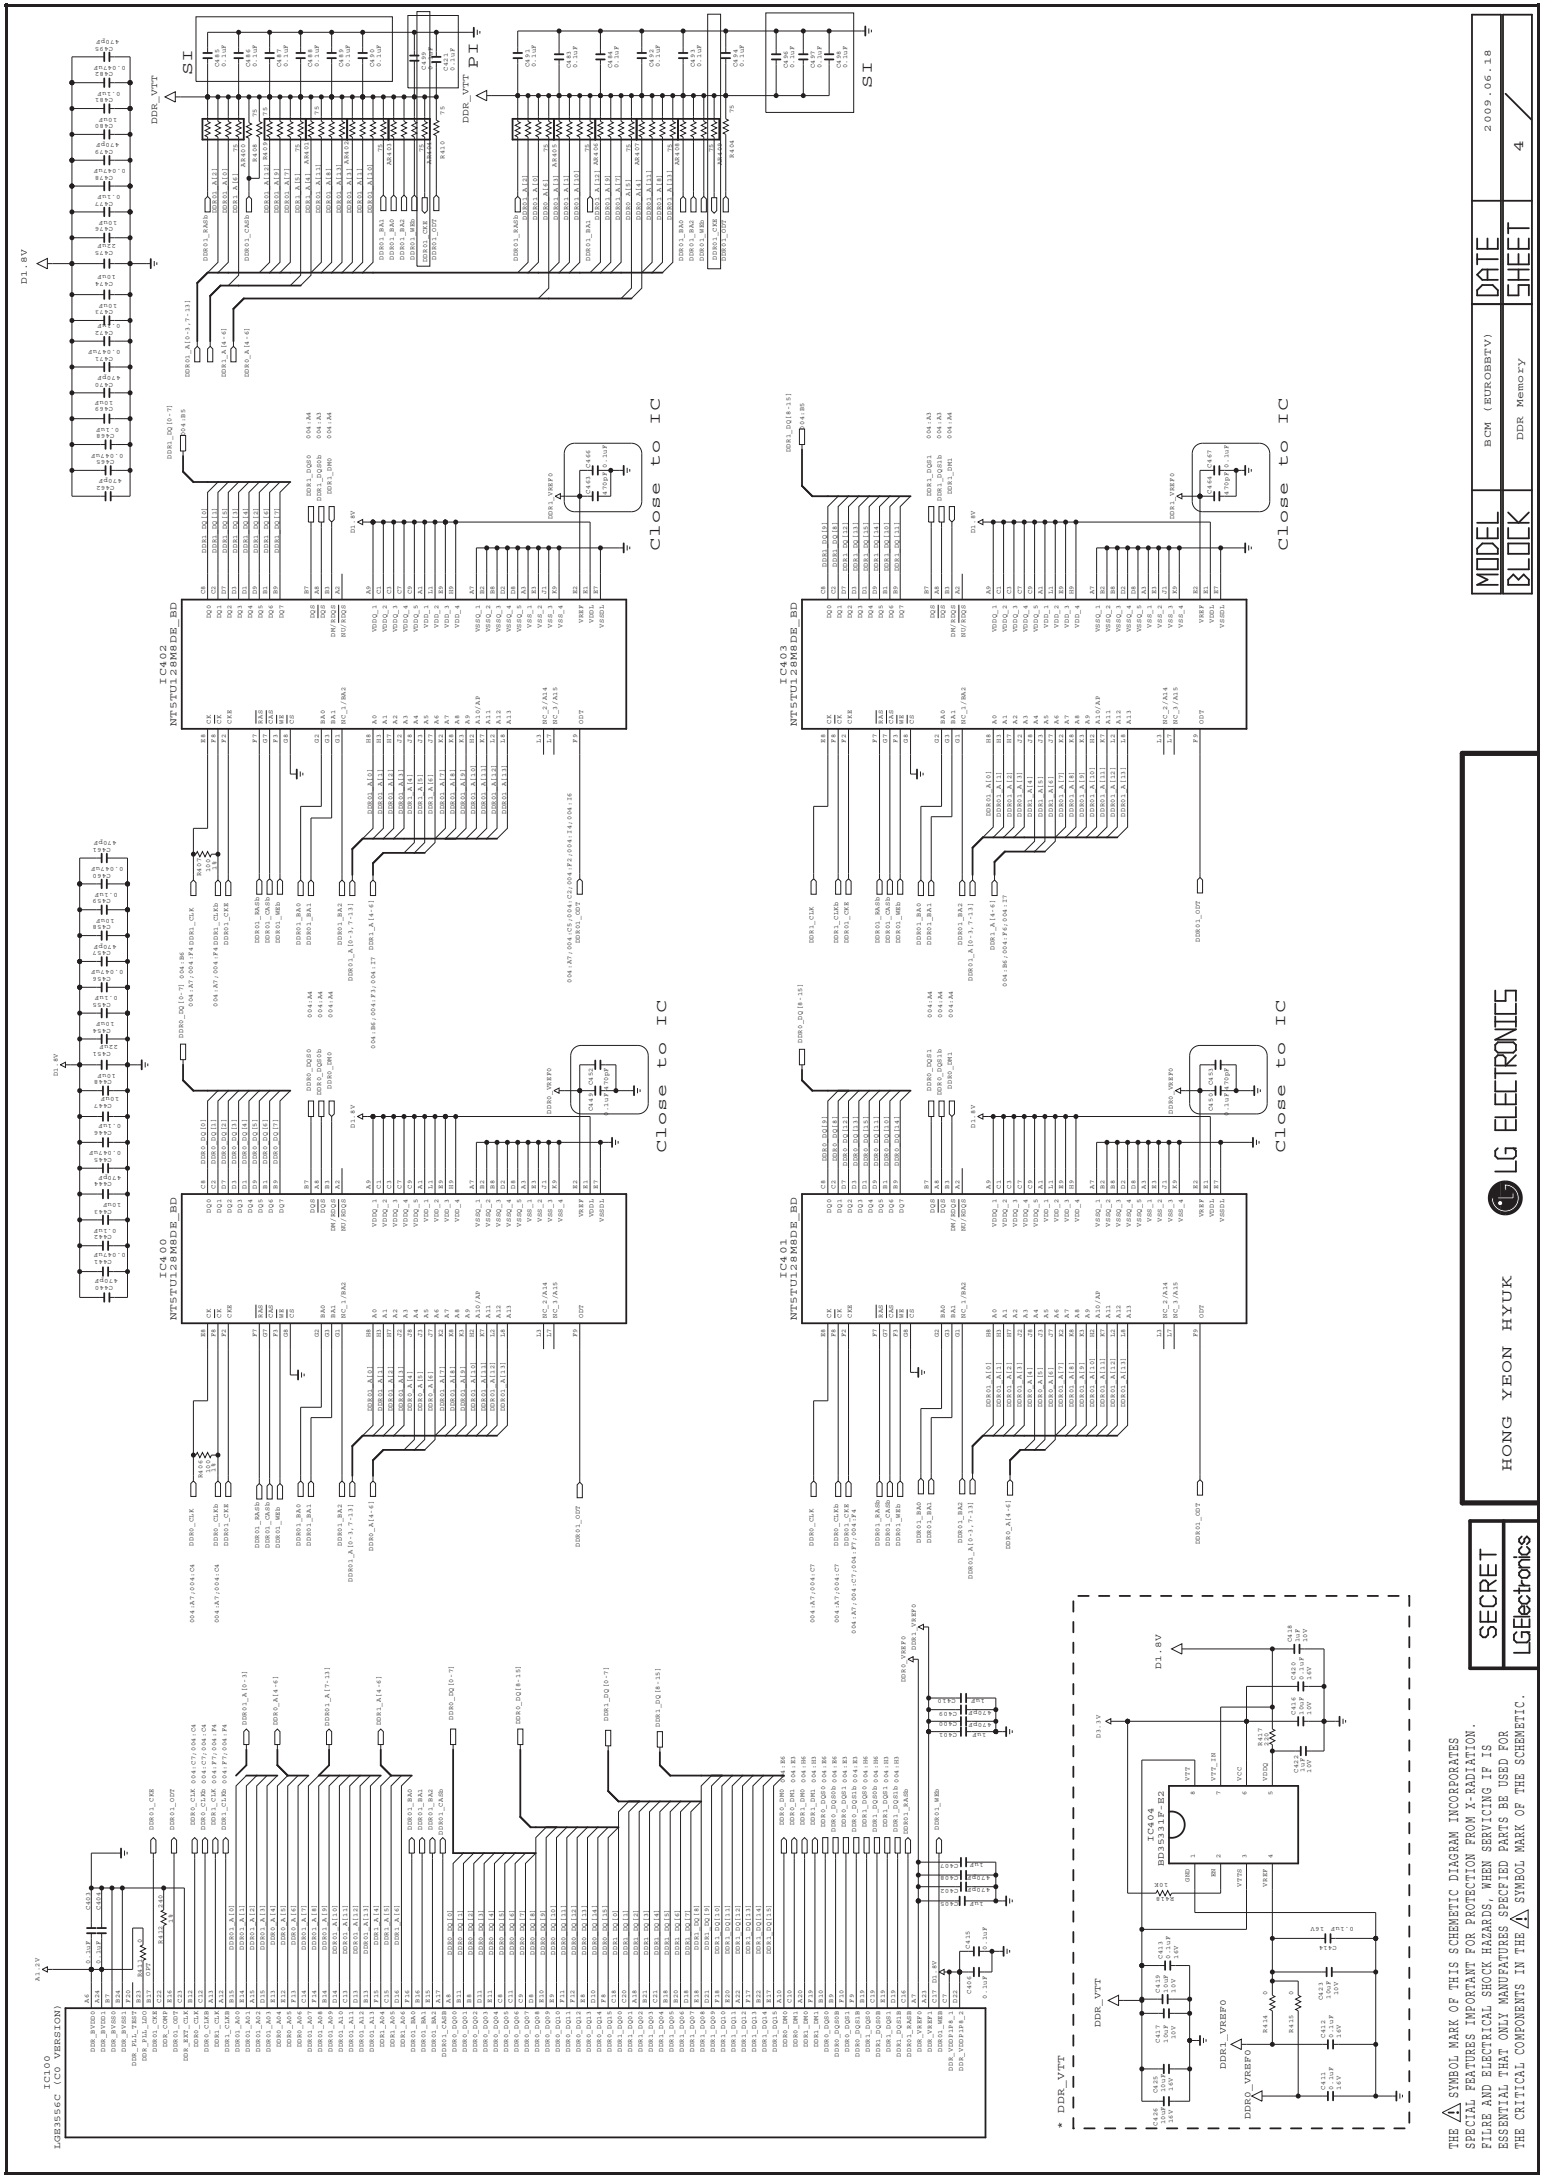


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIGURE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE ELECTRICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

COMPONENT1
COMPONENT2
AV1


JKL1100
PP237-01

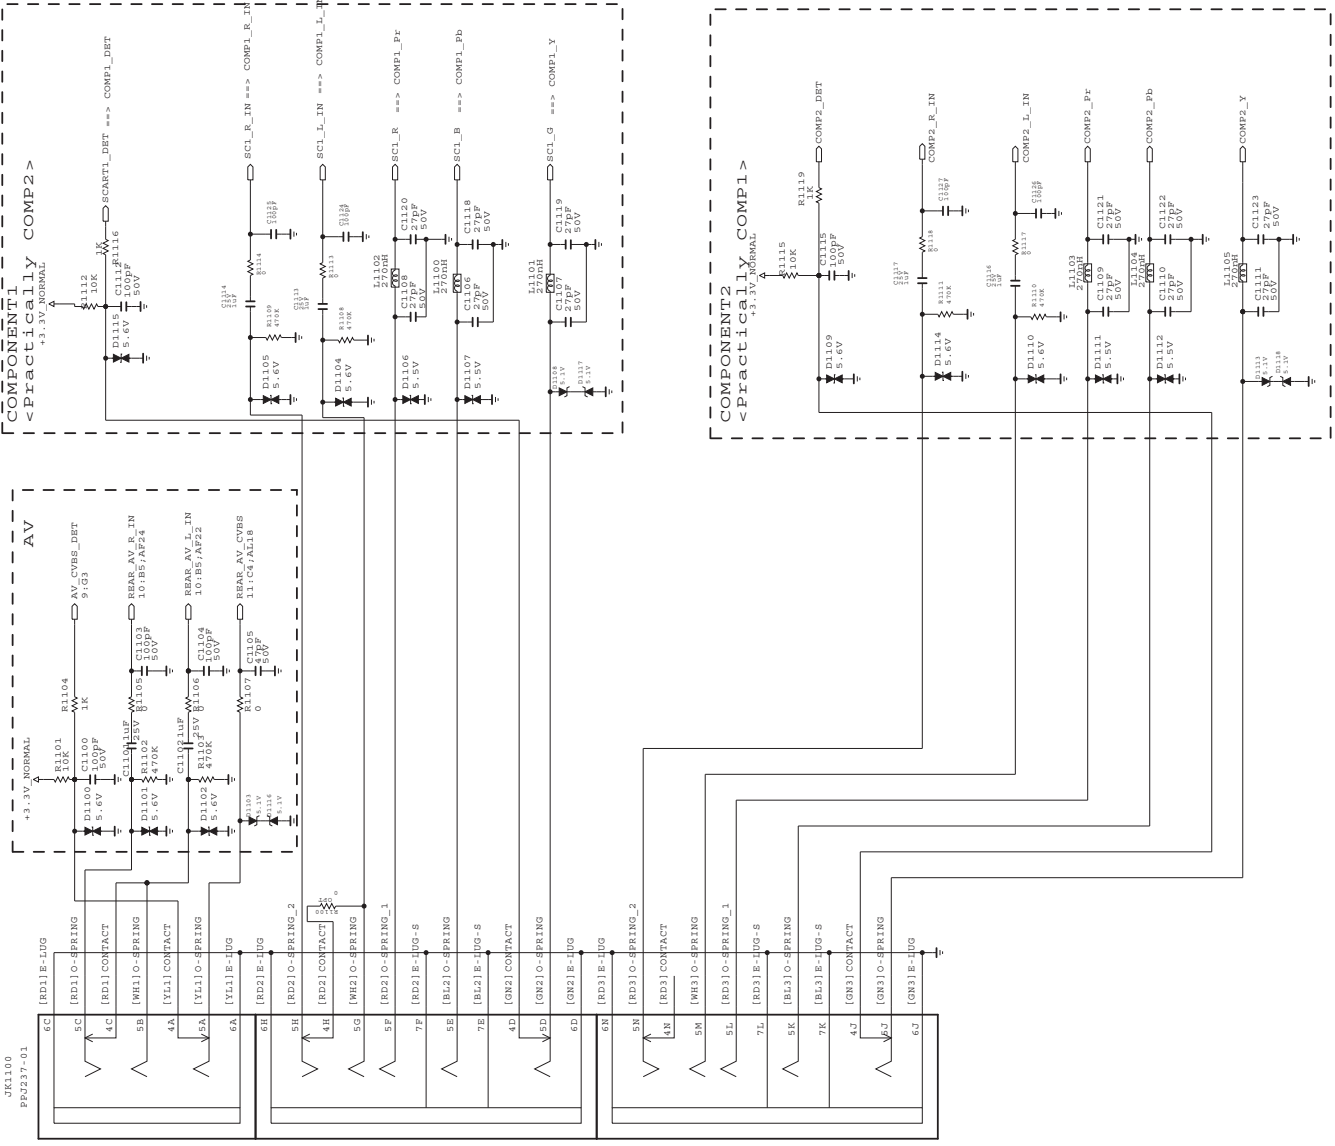

NON_SCART

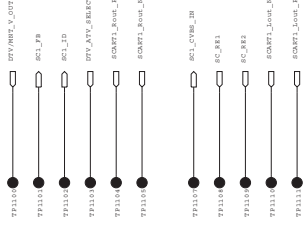





New Item Development
EARPHONE BLOCK

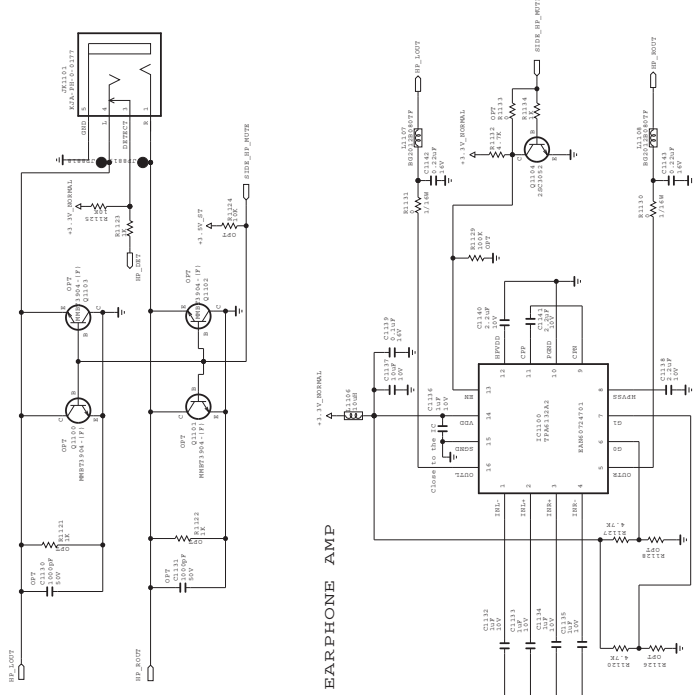

EARPHONE AMP

THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIBRE AND ELECTRICAL SHOCK HEADS, WHEN SERVING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

CAN H-NIM/NIM TUNER for TAIWAN

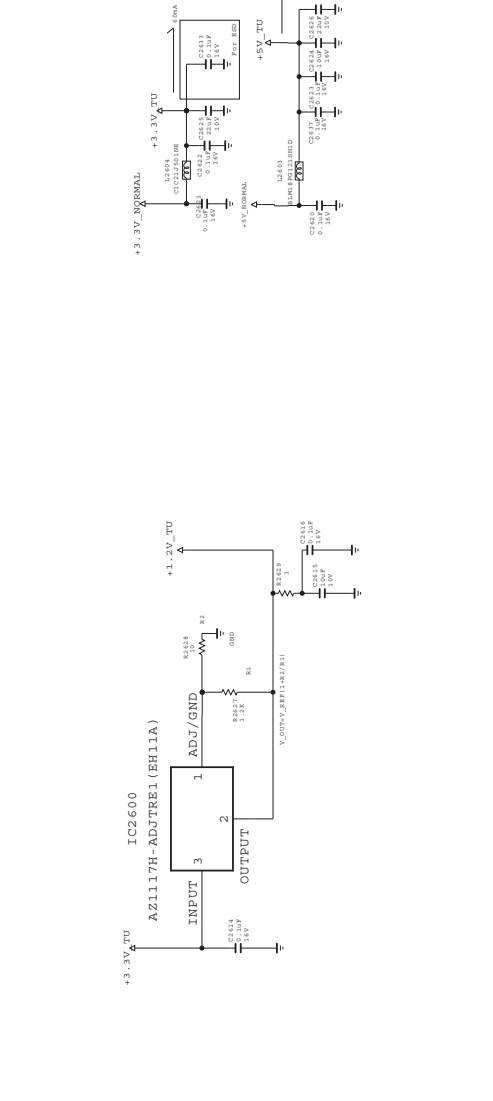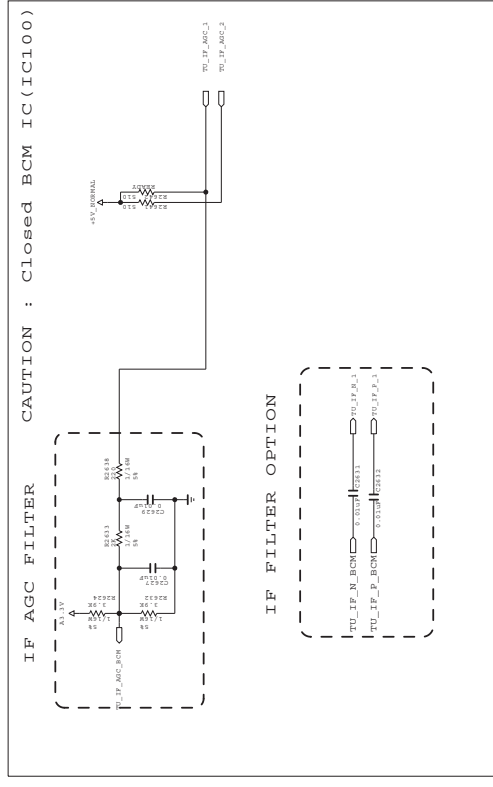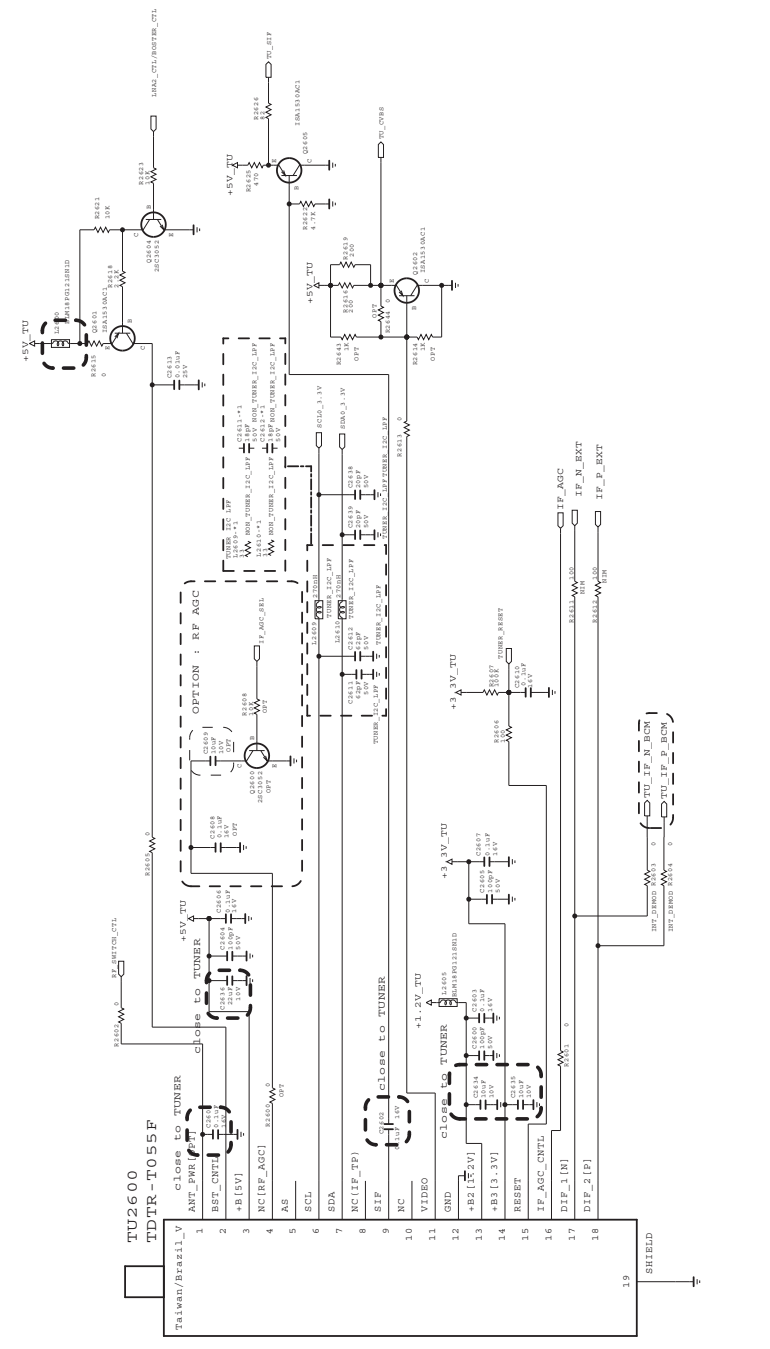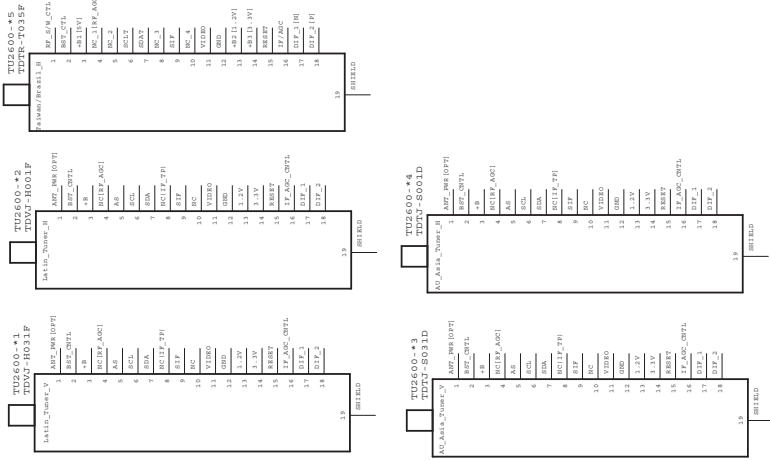


THE Δ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIGURE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE Δ SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics

LG ELECTRONICS

PANASONIC (ISDB-T) MN884433

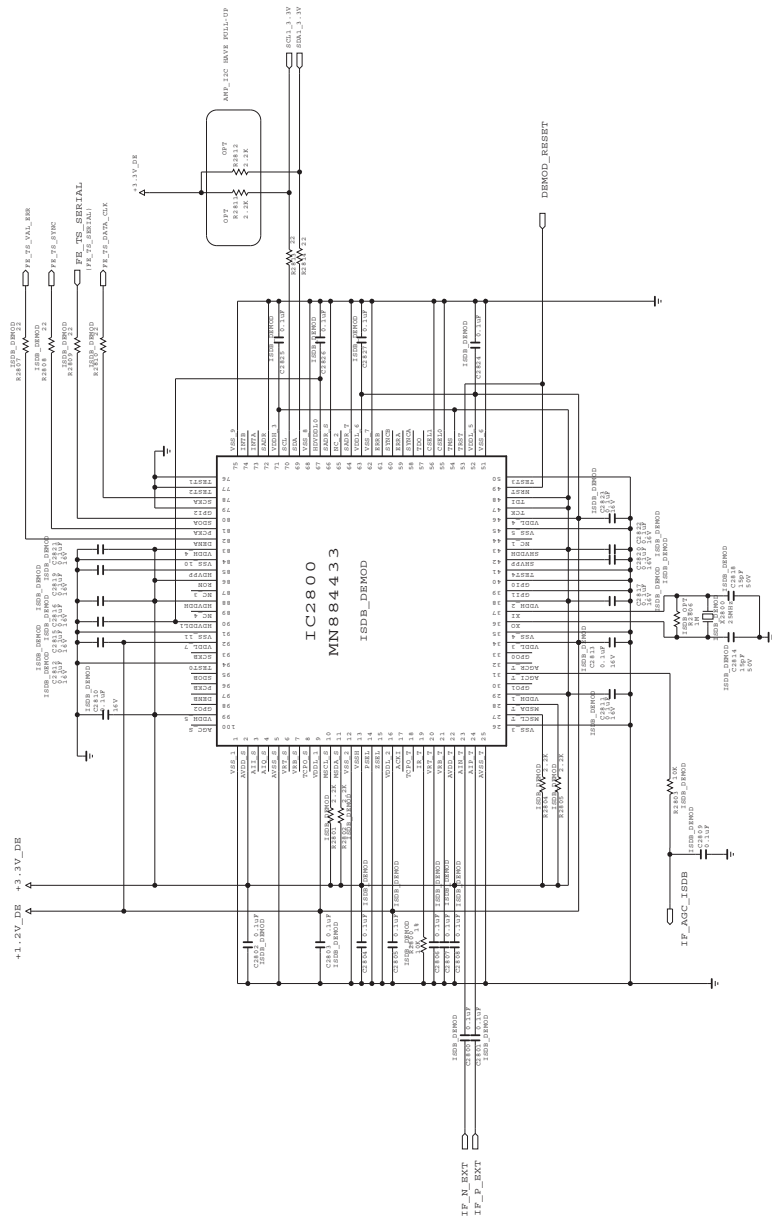


THE Δ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS. WHEN SERVING IT IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE Δ SYMBOL MARK OF THE SCHEMATIC.


SECRET
LGElectronics



Panasonic Demodulator Power (3.3V, 1.2V)

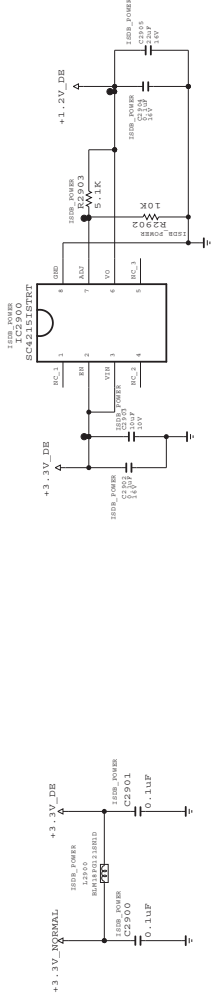



IF AGC SELECTION

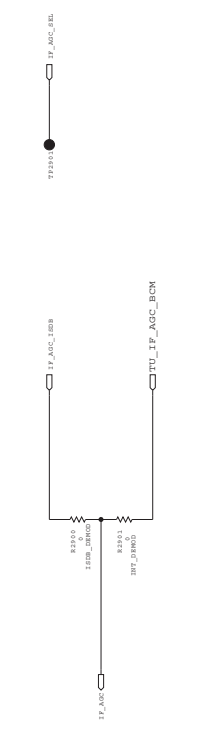

THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FLARE AND ELECTRICAL SHOCK HAZARDS. WHEN SERVING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET LGElectronics		MODEL GP2_Saturn7M BLOCK Demodulator
		DATE SHEET
		Ver. 1.0 29

USB2 OPTION

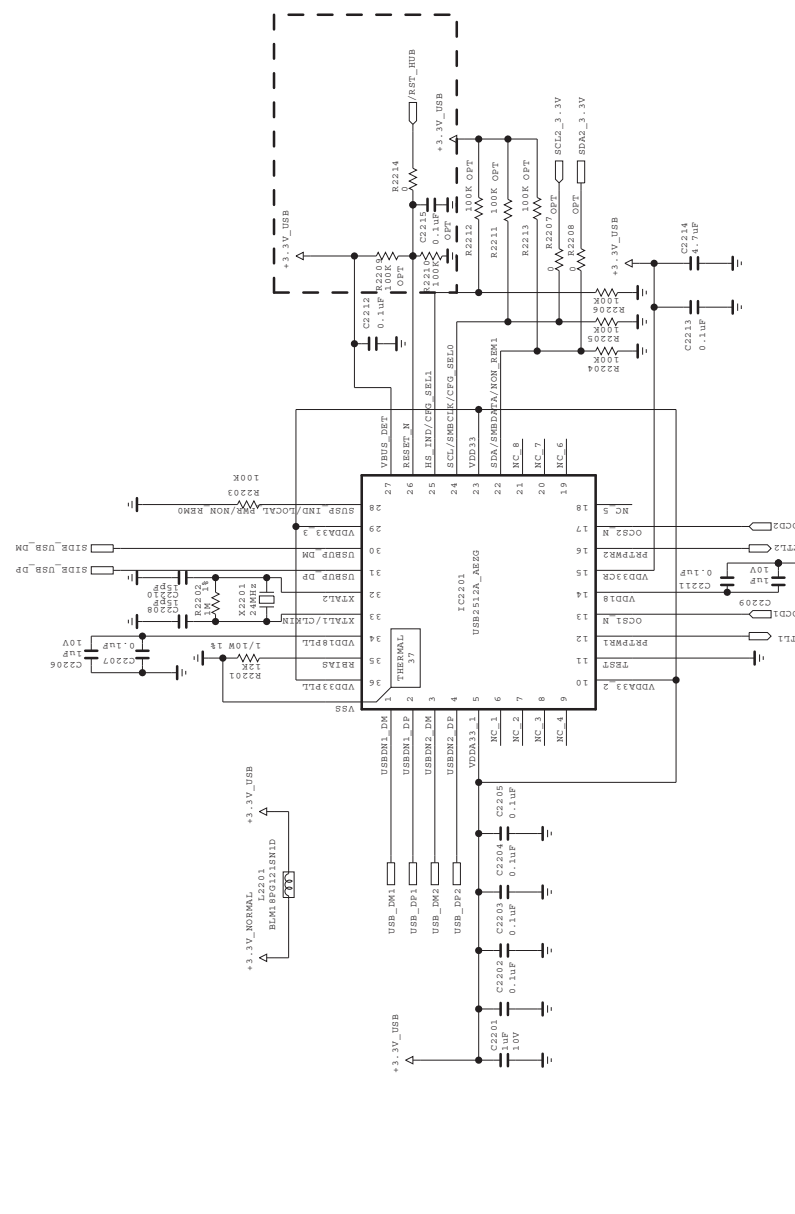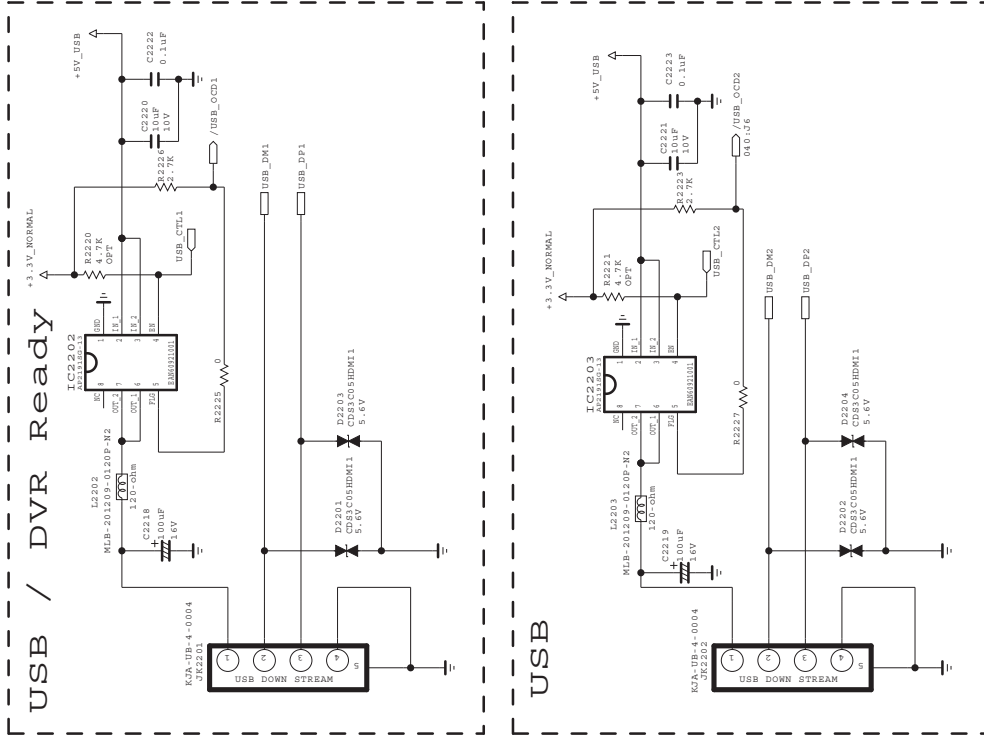


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

MODEL	DATE
BLOCK	SHEET
	40

SECRET

LGElectronics

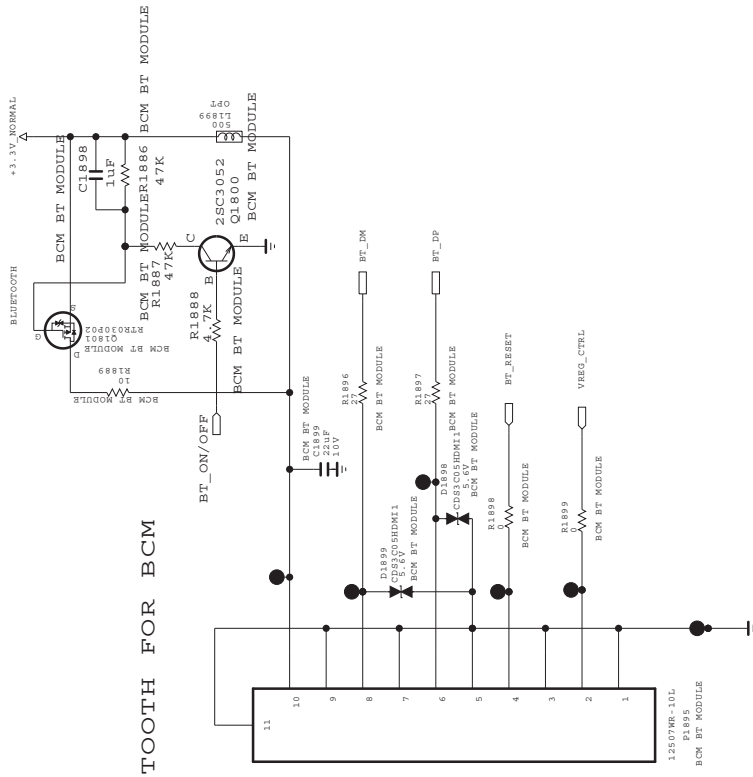

BLUETOOTH FOR BCM


THE Δ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE Δ SYMBOL MARK OF THE SCHEMATIC.

MODEL	DATE
BLOCK	SHEET
	43




SECRET
LGElectronics


CI POWER ENABLE CONTROL

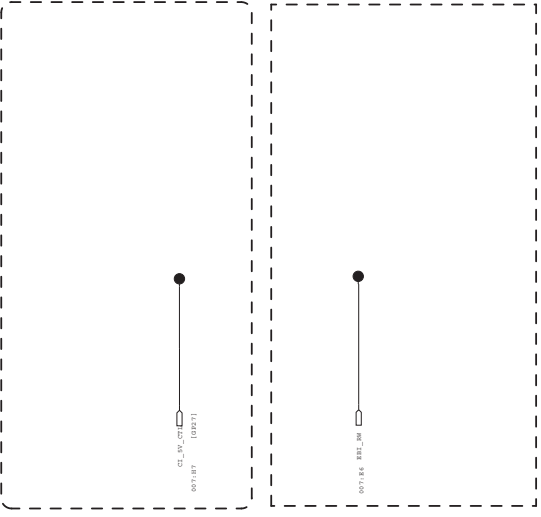



CI CONTROL BUFFER

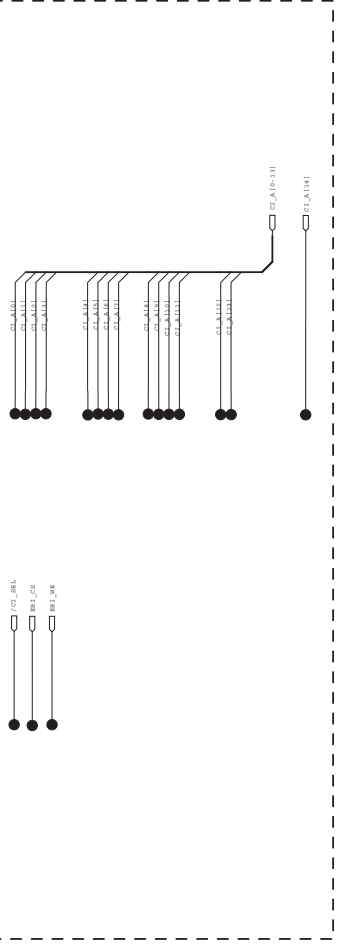

DVB-CI PULL-DOWN (Near CI Slot)

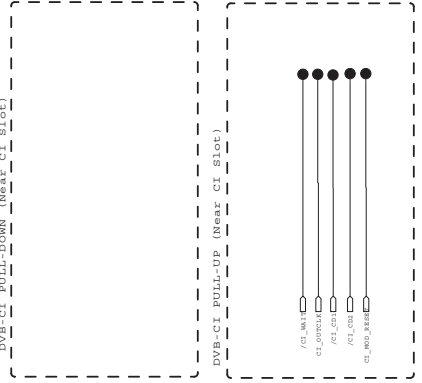

DVB-CI PULL-UP (Near CI Slot)

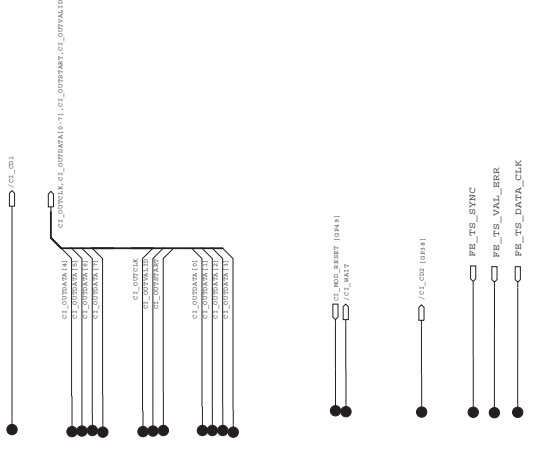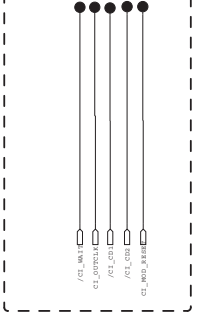


THE ▲ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. PLEASE READ ELECTRICAL SHOCK WARNINGS, WHEN SERVING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ▲ SYMBOL MARK OF THE SCHEMATIC.

SECRET
LG Electronics



MODEL	High_Common(BCK93556)	DATE	2009.10.19
BLOCK	Non_CI	SHEET	46

Mini LVDS

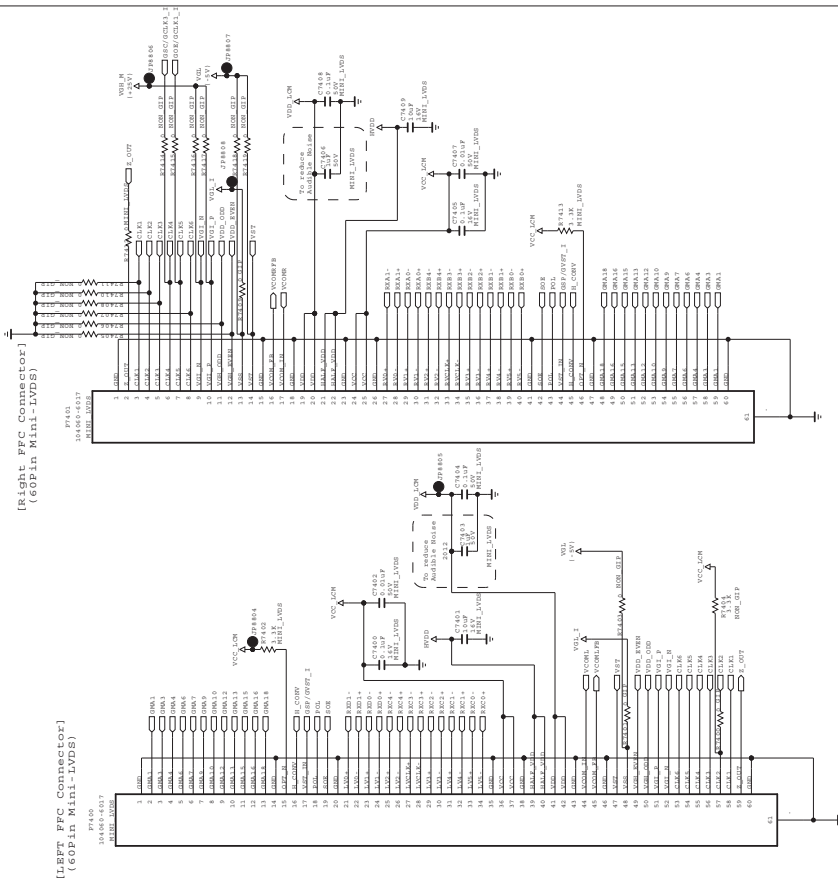

THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IT IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.


SECRET
LGElectronics




MODEL BLOCK
COMMON
UBSA3 1.20GHZ MINI_LVDS
DATE SHEET

LVDS

[5] 1Pin LVDS Connector] (For FHD 60/140Hz)

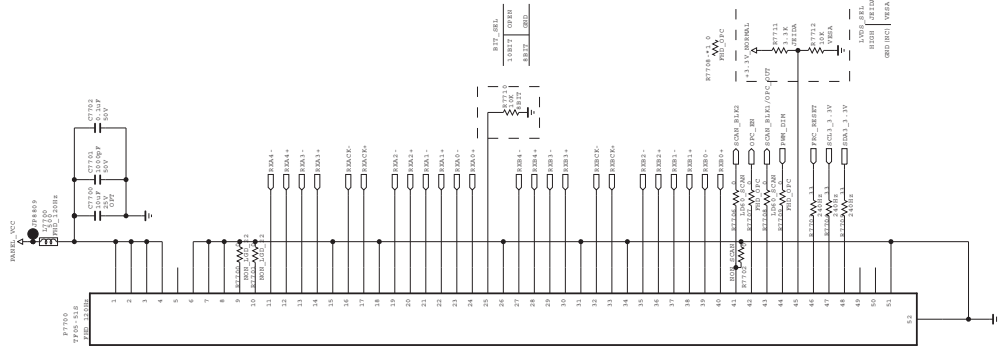

[4] 1Pin LVDS Connector] (For FHD 140Hz)

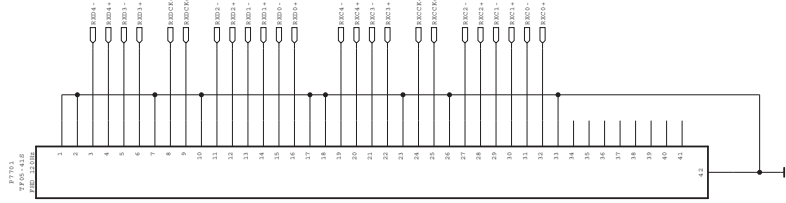

PT77100 10PC_01P










THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS. WHEN SERVICING IT IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL	DATE
BLOCK	SHEET
	35

FROM LIPS & POWER B/D

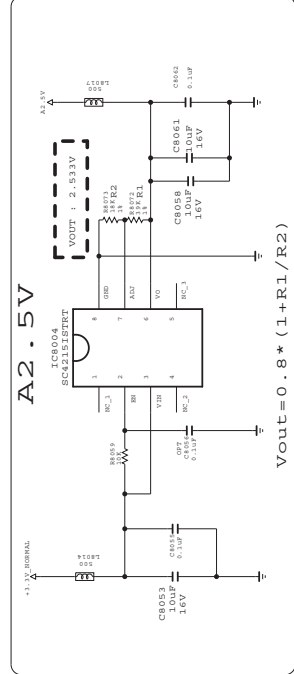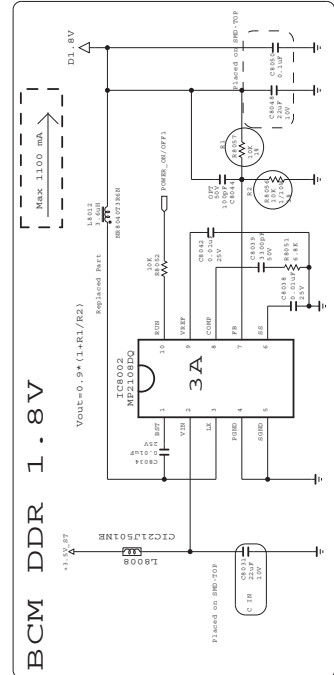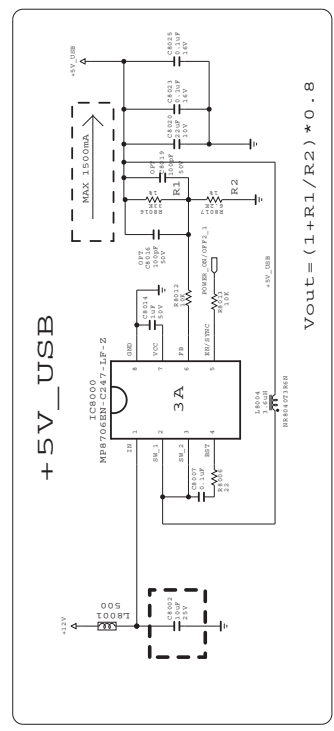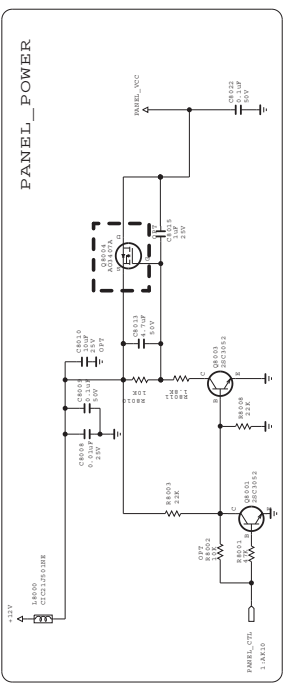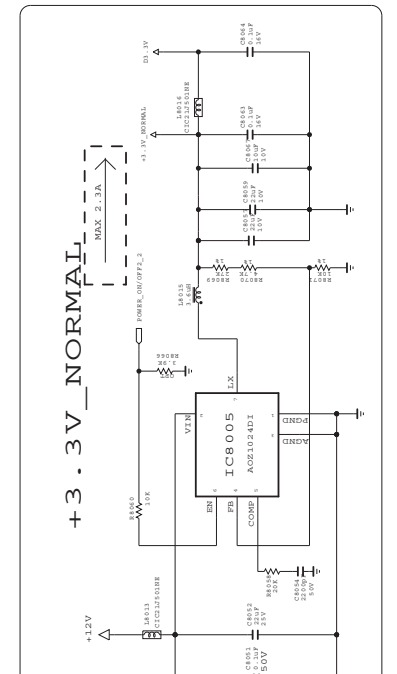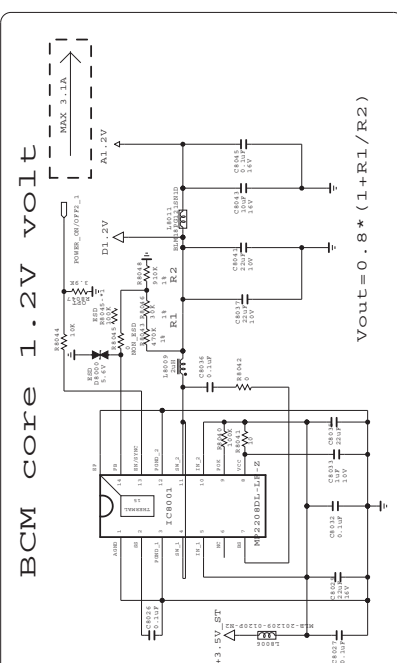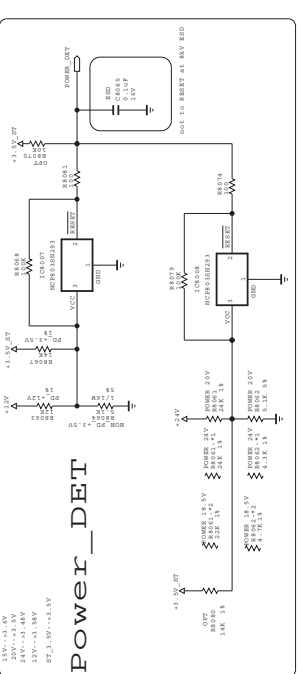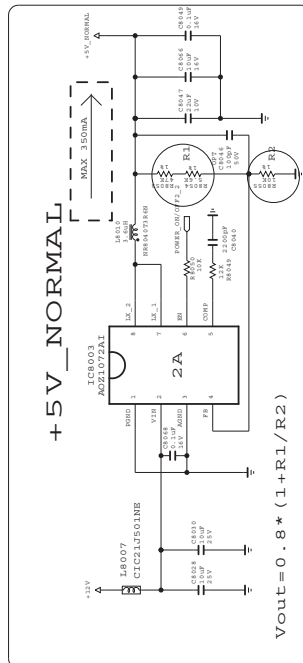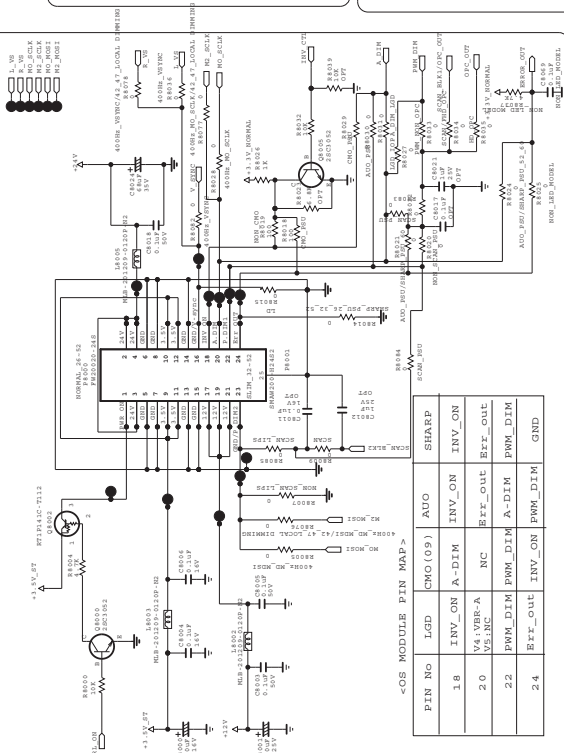


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. PLEASE READ ELECTRICAL SHOCK WARNINGS, WHEN SERVING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics




LG ELECTRONICS

MODEL	BCM (EUROBETV)	DATE
BLOCK	POWER	SHEET
		1.5

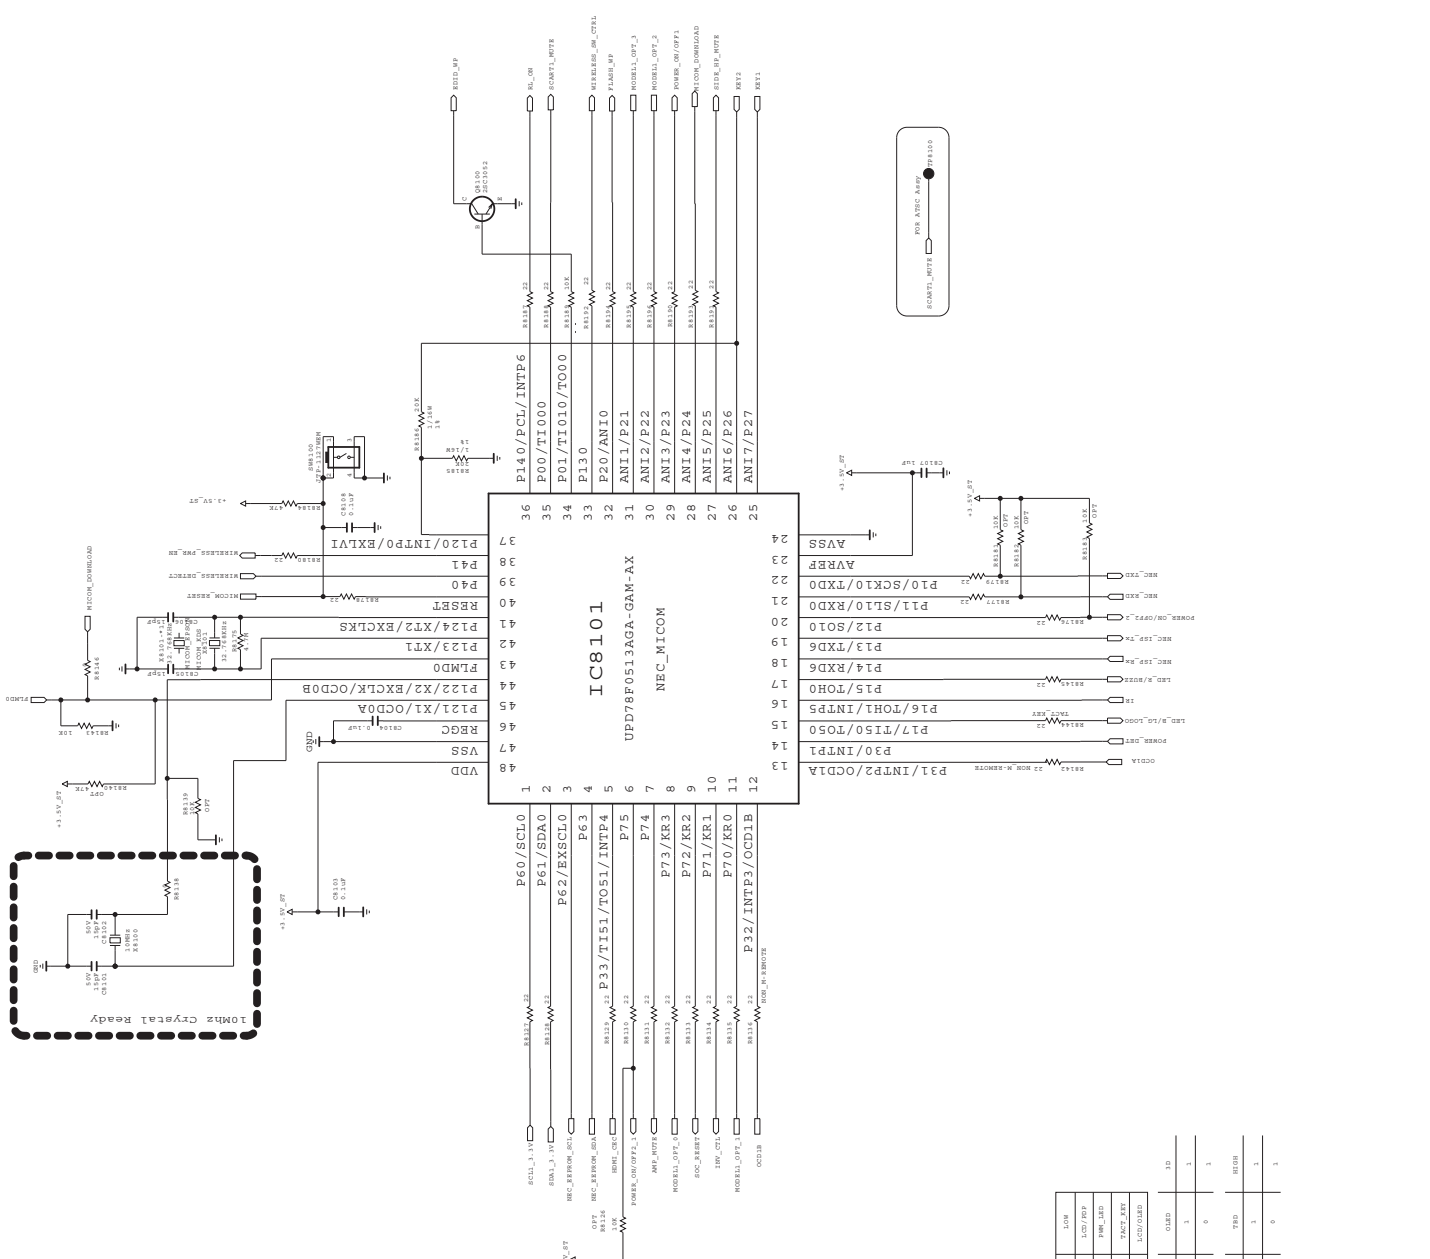


MODEL OPTION	P70 MARK	P70 INT	TRSD	TRSD	TRSD
MODEL_OPT_0	4	0	0	0	0
MODEL_OPT_1	11	1	1	1	1
MODEL_OPT_2	30	1	1	1	1
MODEL_OPT_3	31	1	1	1	1

MODEL OPTION	LOW	LOW SMALL	TRD	HIGH
MODEL_OPT_0	0	0	0	0
MODEL_OPT_1	0	1	1	1
MODEL_OPT_2	0	1	1	1
MODEL_OPT_3	0	1	1	1

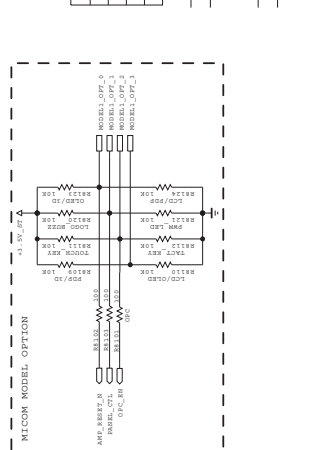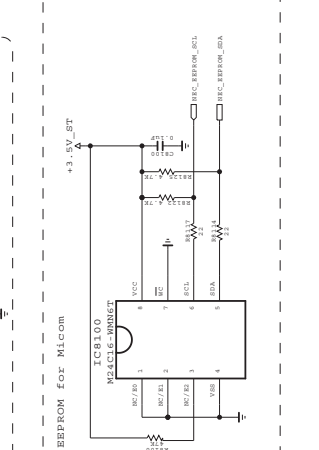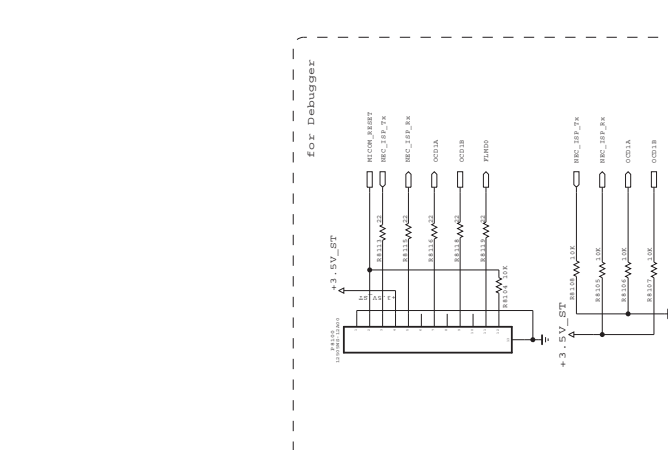


IR & KEY

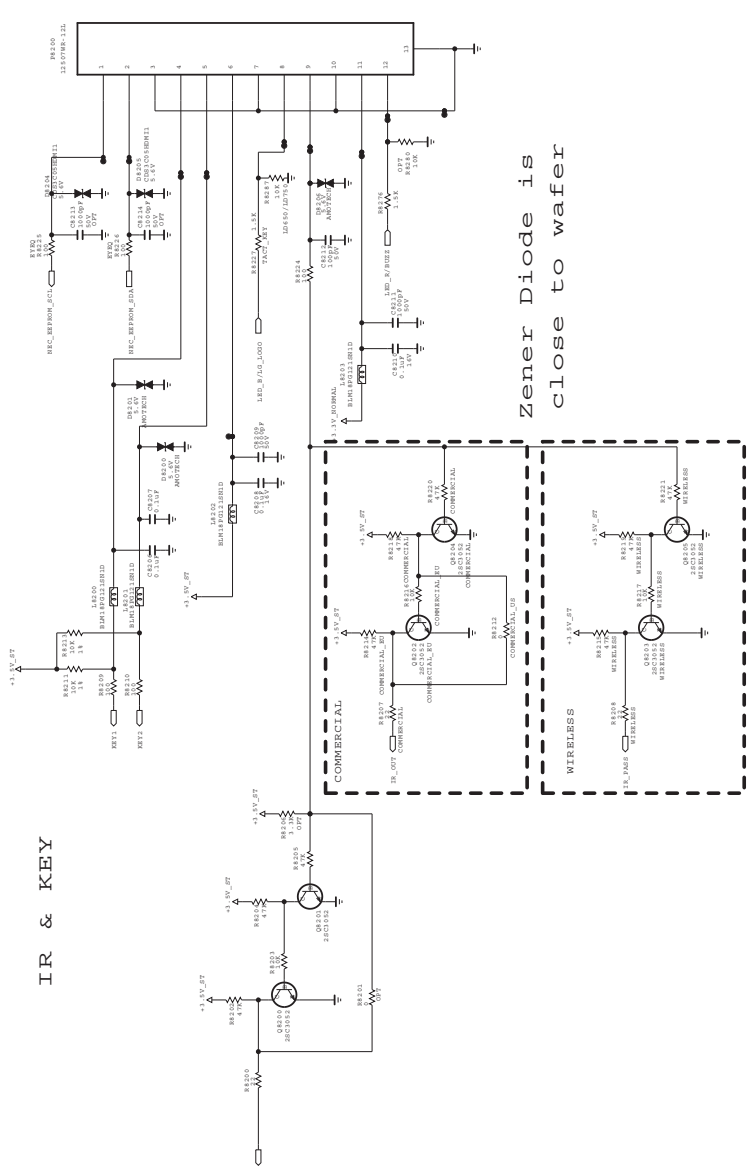


Zener Diode is close to wafer

ETHERNET CONNECT

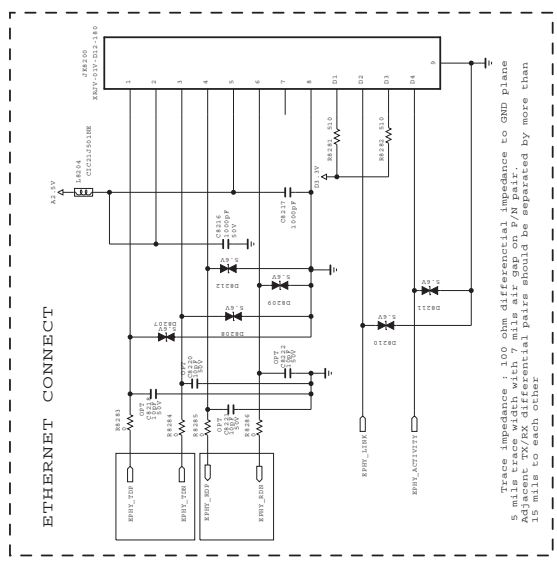

Trace impedance : 100 ohm differential impedance to GND plane
5 mils traces with 7 mils air gap on P/N pair.
100 ohm differential pairs should be separated by more than 15 mils to each other

RS232C

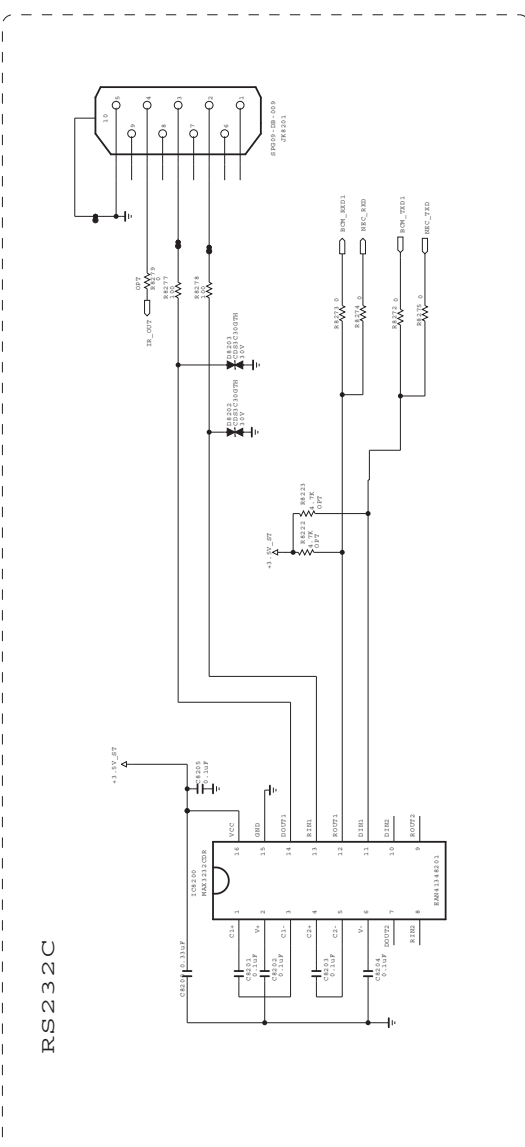









THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIGURE AND ELECTRICAL SHOCK HEADINGS, WHEN SERVING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

MODEL	DATE
BLOCK	SHEET





SECRET
LGElectronics

 * HDMI_CEC

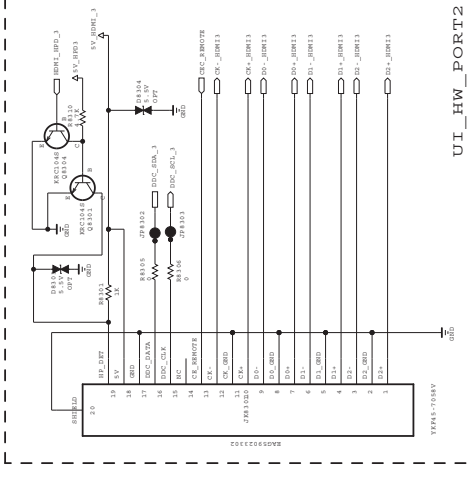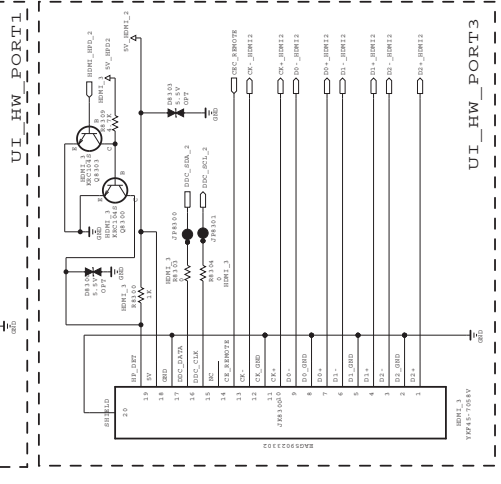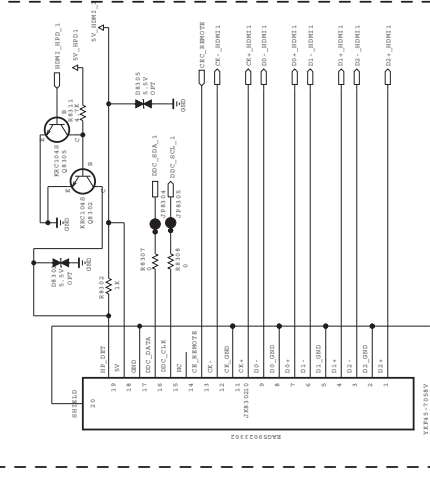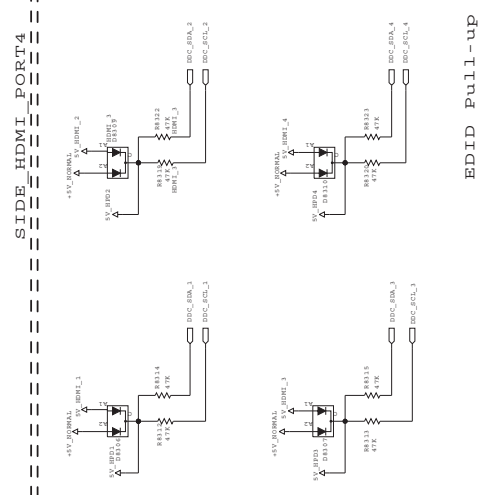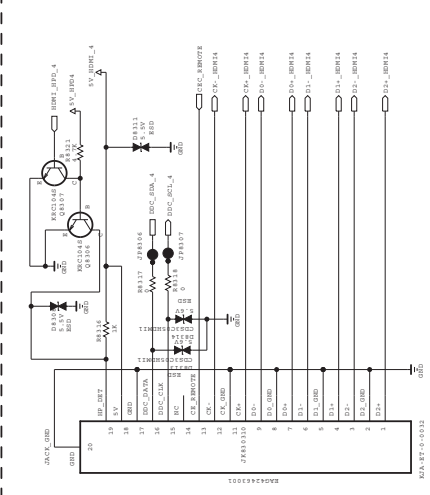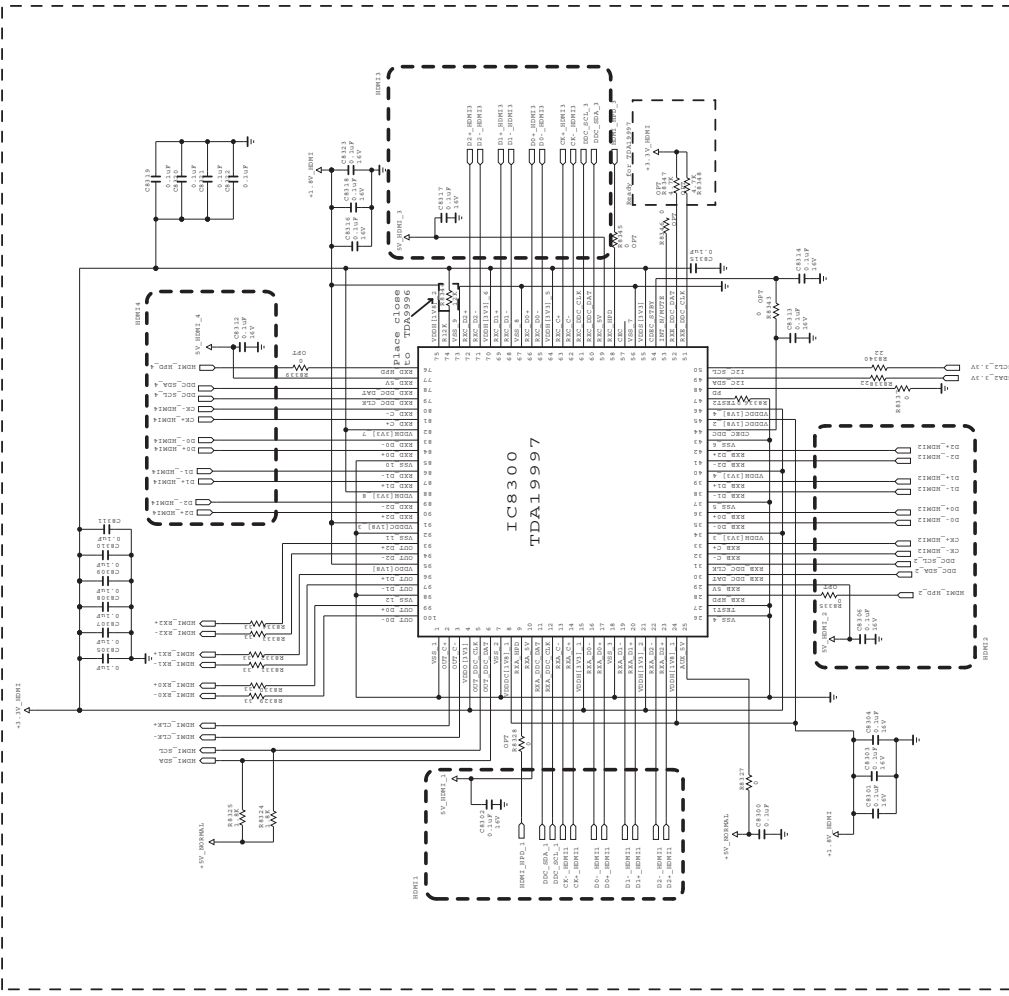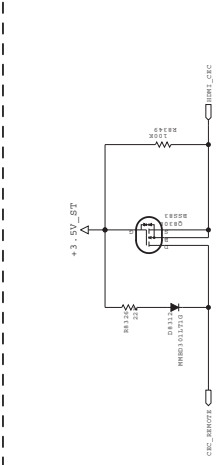

THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIGURE AND ELECTRICAL SHOCK HEADINGS, WHEN SERVING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

RGB_PC

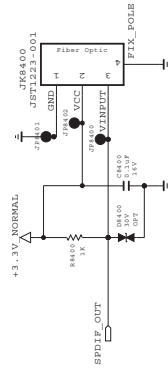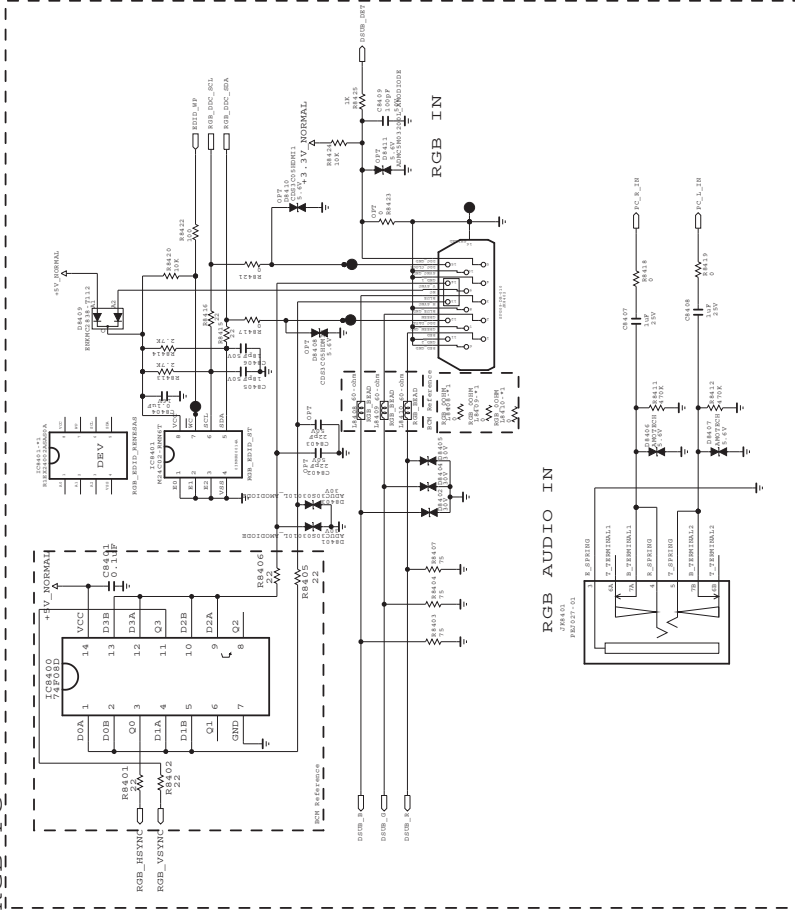

THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS. WHEN SERVING IT IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.


SECRET
LGElectronics




MODEL EUROBE7V DATE 2009.06.18
BLOCK SHEET ETC SOB BOARD I/F 9

ALL for SIDE_GENDER option

SIDE CVBS PHONE JACK (New Item Development)

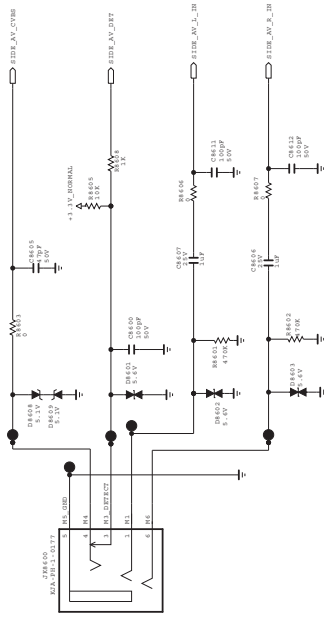

SIDE COMPONENT PHONE JACK (New Item Development)

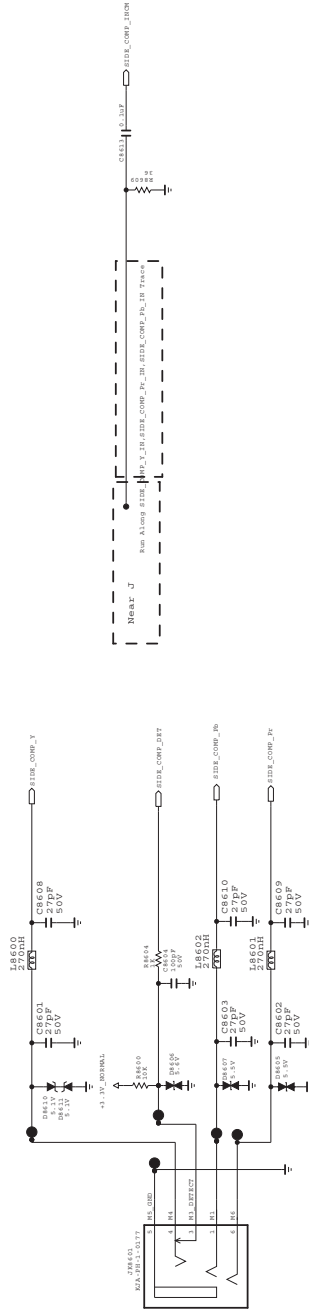

THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIGURE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics




MODEL
BLOCK

DATE
SHEET

1.1

WIRELESS READY MODEL

Wireless power

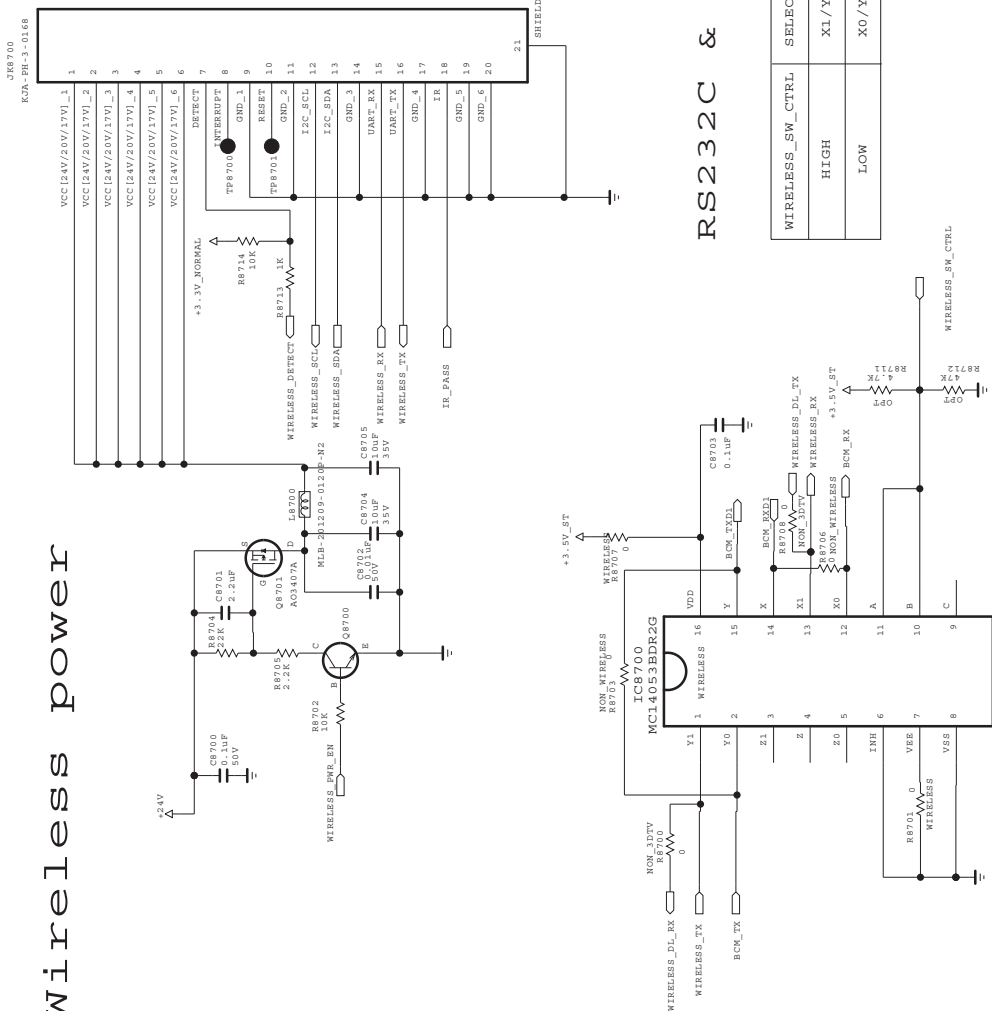

RS232C & Wireless




















WIRELESS_SW_CTRL	SELECT PIN	STATUS
HIGH	X1/Y1/Z1	WIRELESS Dongle connect --> WIRELESS RS232
LOW	X0/Y0/Z0	WIRELESS Dongle Dis_con --> S7 RS232

THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.


SECRET
LGElectronics




MODEL	DATE
BLOCK	SHEET
	12

             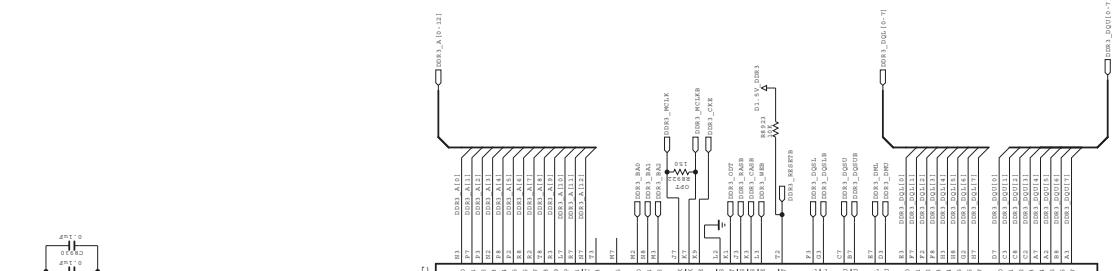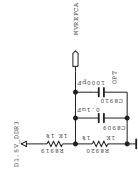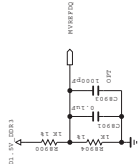   


+ 3.3V_MEMC

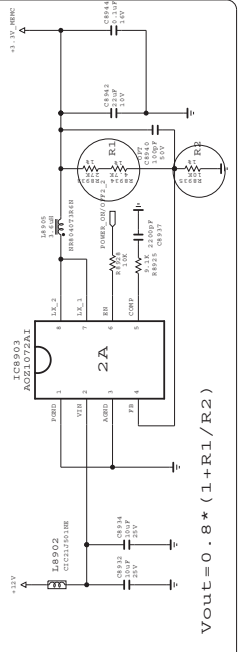

URSA3 DDR3 1.5V

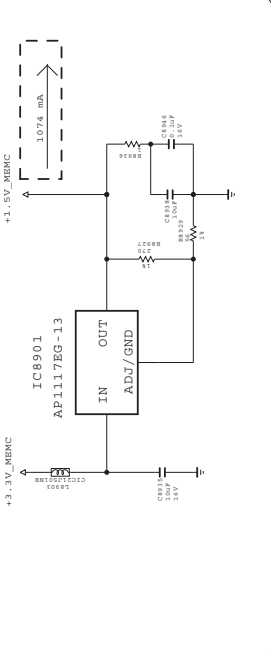

URSA3 CORE 1.26V

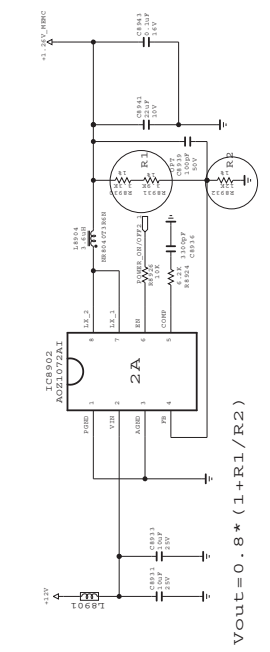







THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIGURE AND ELECTRICAL SHOCK HEADINGS, WHEN SERVING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET
LG Electronics






LG ELECTRONICS

MODEL	COMMON	DATE	2009.09.11
BLOCK	URSA3 DDR & Power	SHEET	89

 





Serial Flash

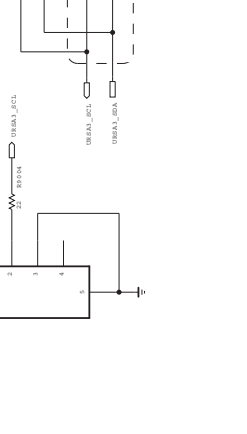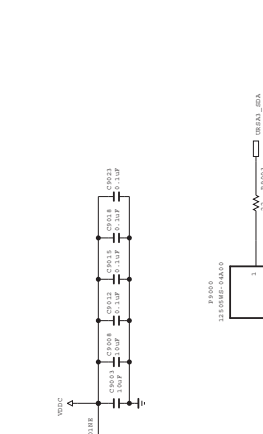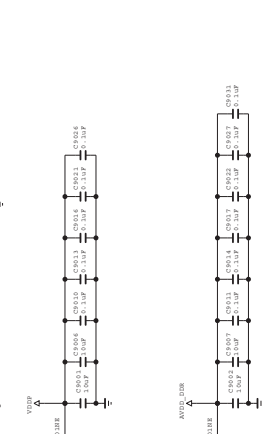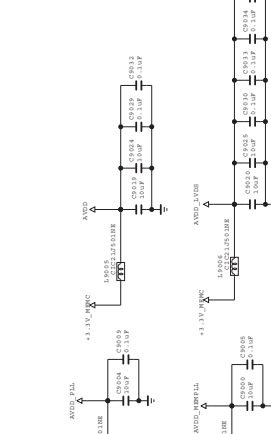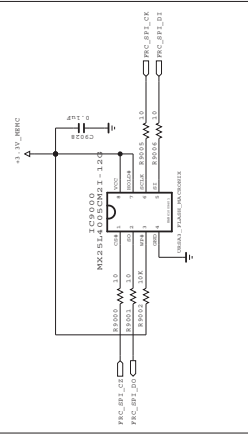

THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIGURE AND ELECTRICAL SHOCK HEADINGS, WHEN SERVING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

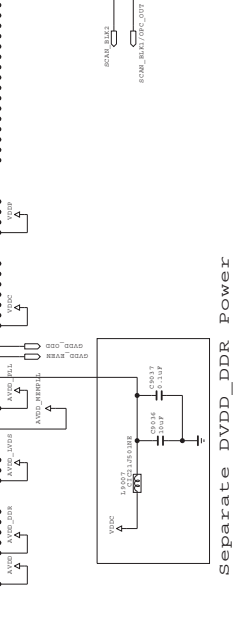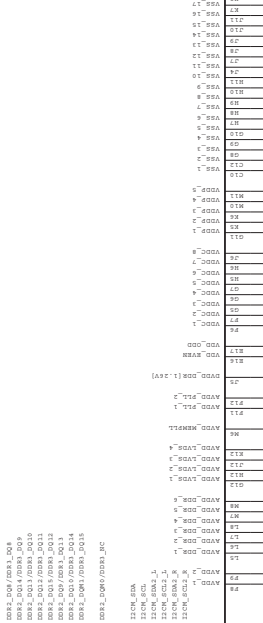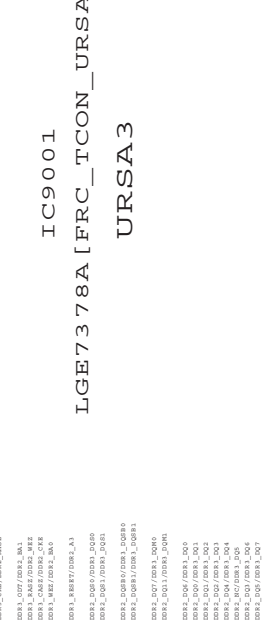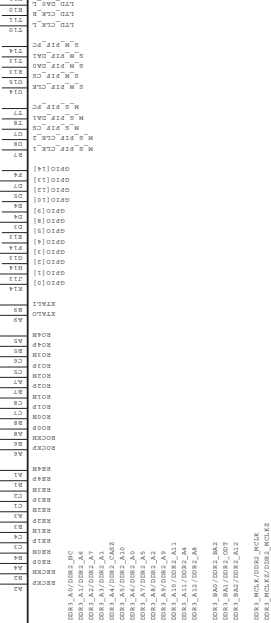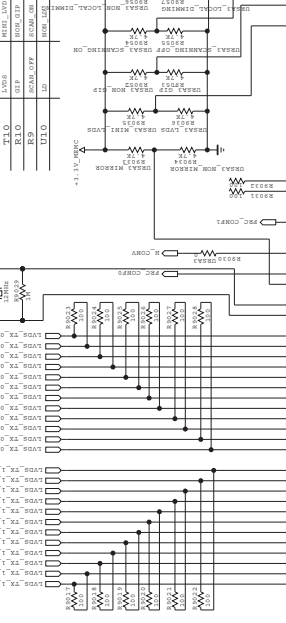


SEPARATE DVDD_DDR Power

 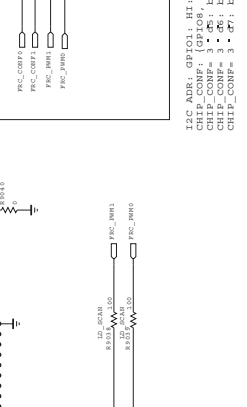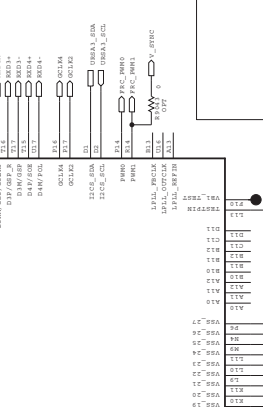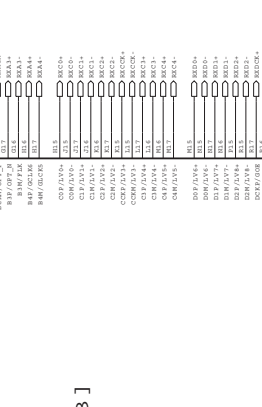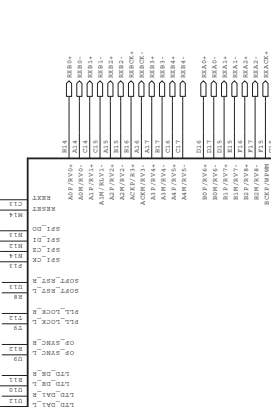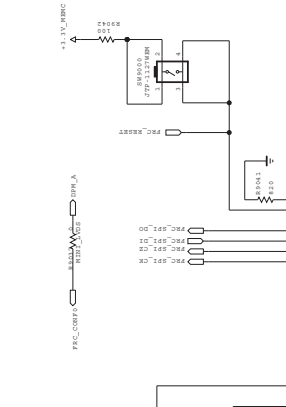

IC9001: HI-BR LOW-BR
 CHIP_CONF: {GP109, PM10, PM11, PM12, PM13, PM14, PM15, PM16, PM17, PM18, PM19, PM20, PM21, PM22, PM23, PM24, PM25, PM26, PM27, PM28, PM29, PM30, PM31, PM32, PM33, PM34, PM35, PM36, PM37, PM38, PM39, PM40, PM41, PM42, PM43, PM44, PM45, PM46, PM47, PM48, PM49, PM50, PM51, PM52, PM53, PM54, PM55, PM56, PM57, PM58, PM59, PM60, PM61, PM62, PM63, PM64, PM65, PM66, PM67, PM68, PM69, PM70, PM71, PM72, PM73, PM74, PM75, PM76, PM77, PM78, PM79, PM80, PM81, PM82, PM83, PM84, PM85, PM86, PM87, PM88, PM89, PM90, PM91, PM92, PM93, PM94, PM95, PM96, PM97, PM98, PM99, PM100}

IC9001 LGE7378A [FRC_TCON_URSA3] URSA3


[LEVEL Shift Block]

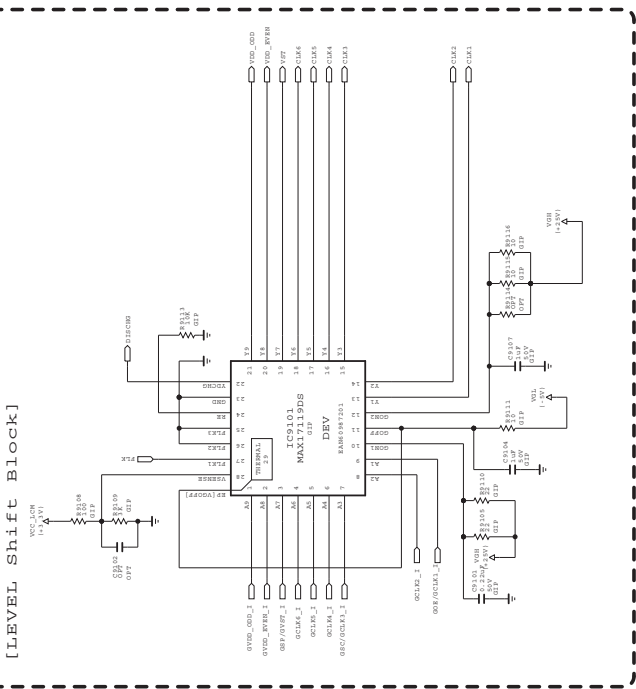



[P-GAMMA Block]
Slave Address : 0xE8h
(AO Pin - GND)



[POWER Block]

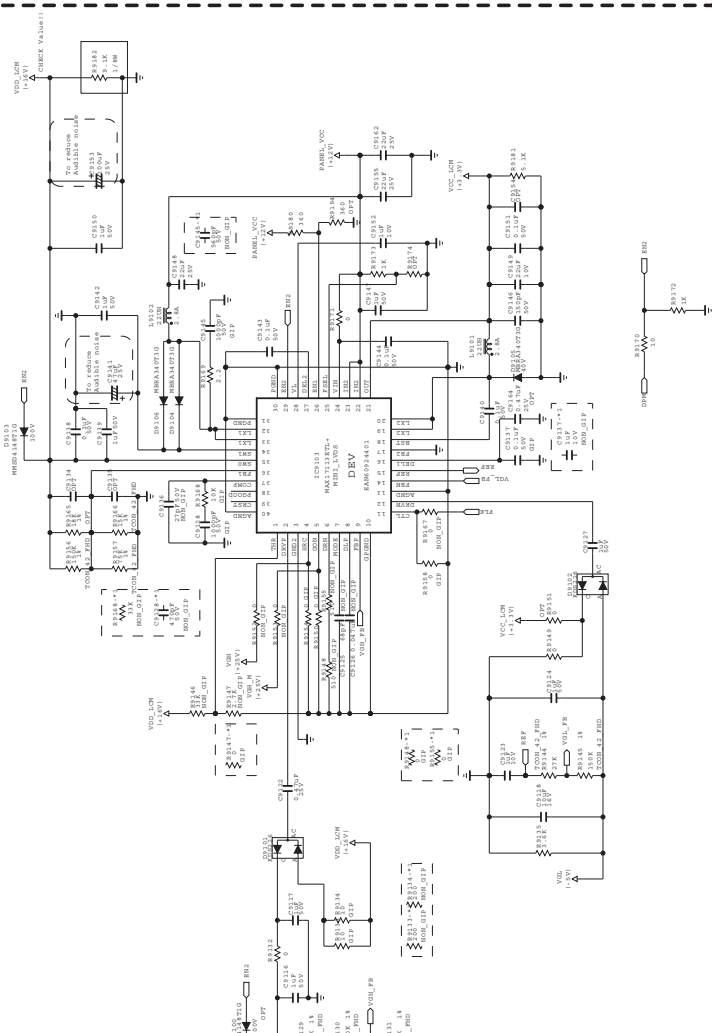Voltage Targets:
VDD_LON = 2.850V
VGH = 5.50V
VGL = -5.50V

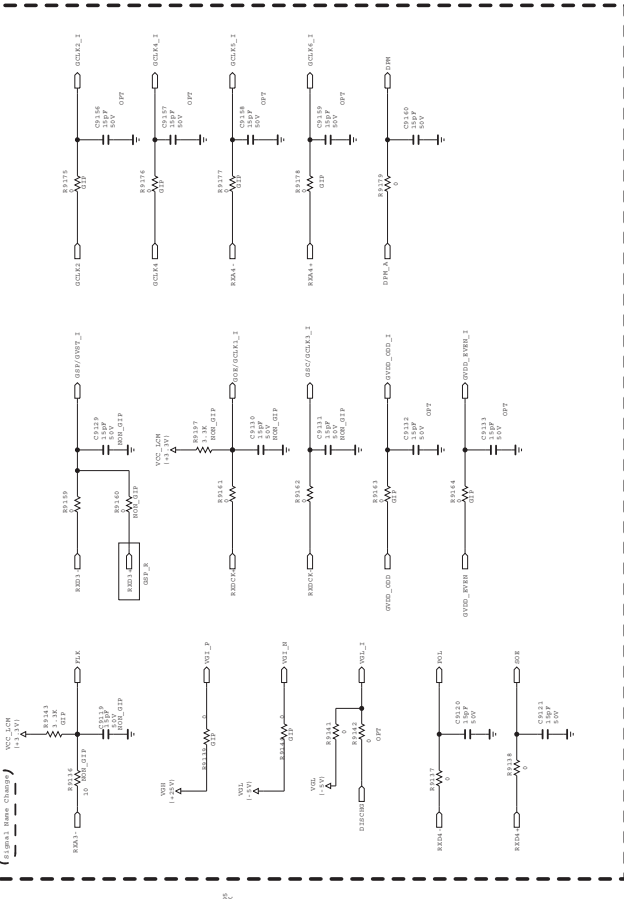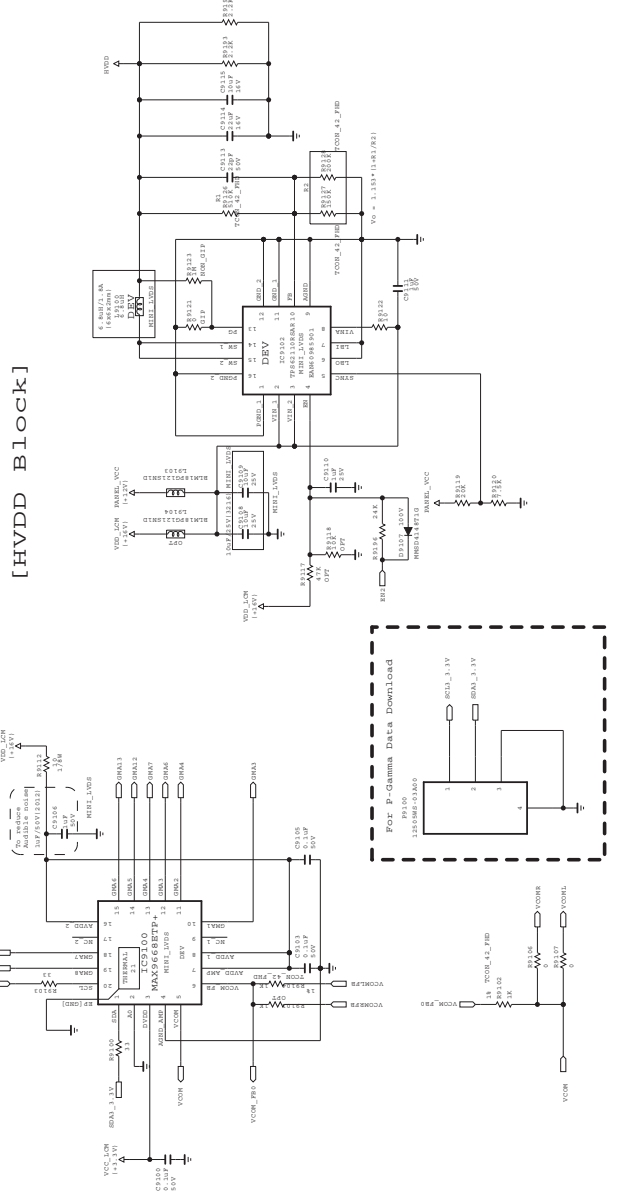

[HVDD Block]








THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIGURE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL BLOCK
COMMON
T-Conn (NO L-D.)


DATE SHEET
09/09/10
91

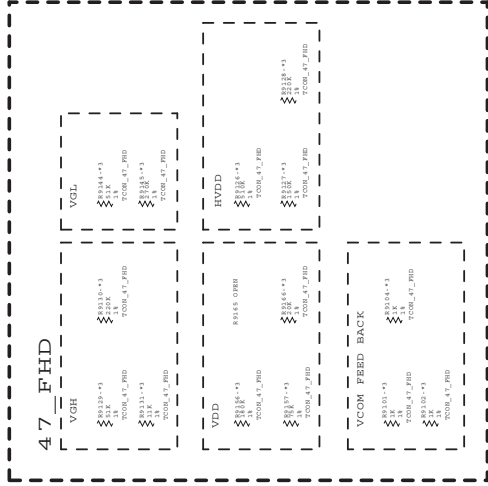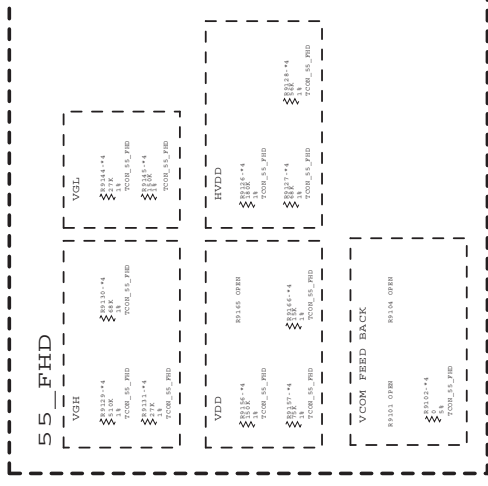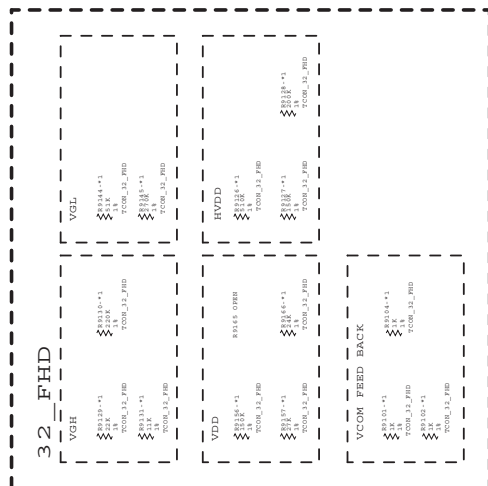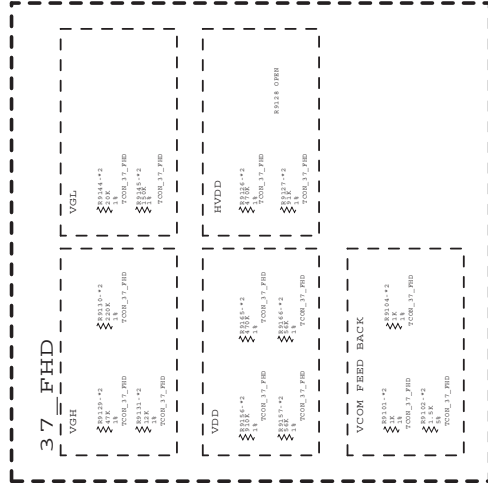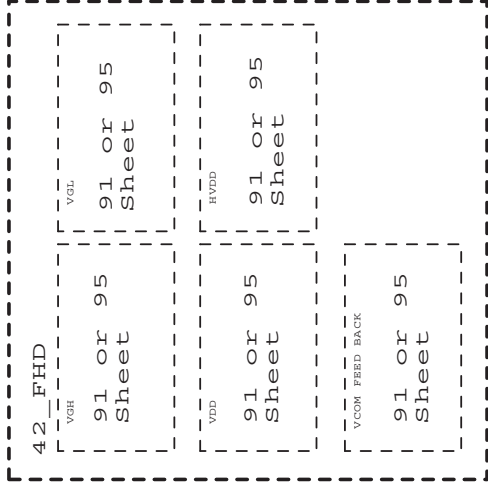


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.




BCM High Block Diagram (Input/Interface)

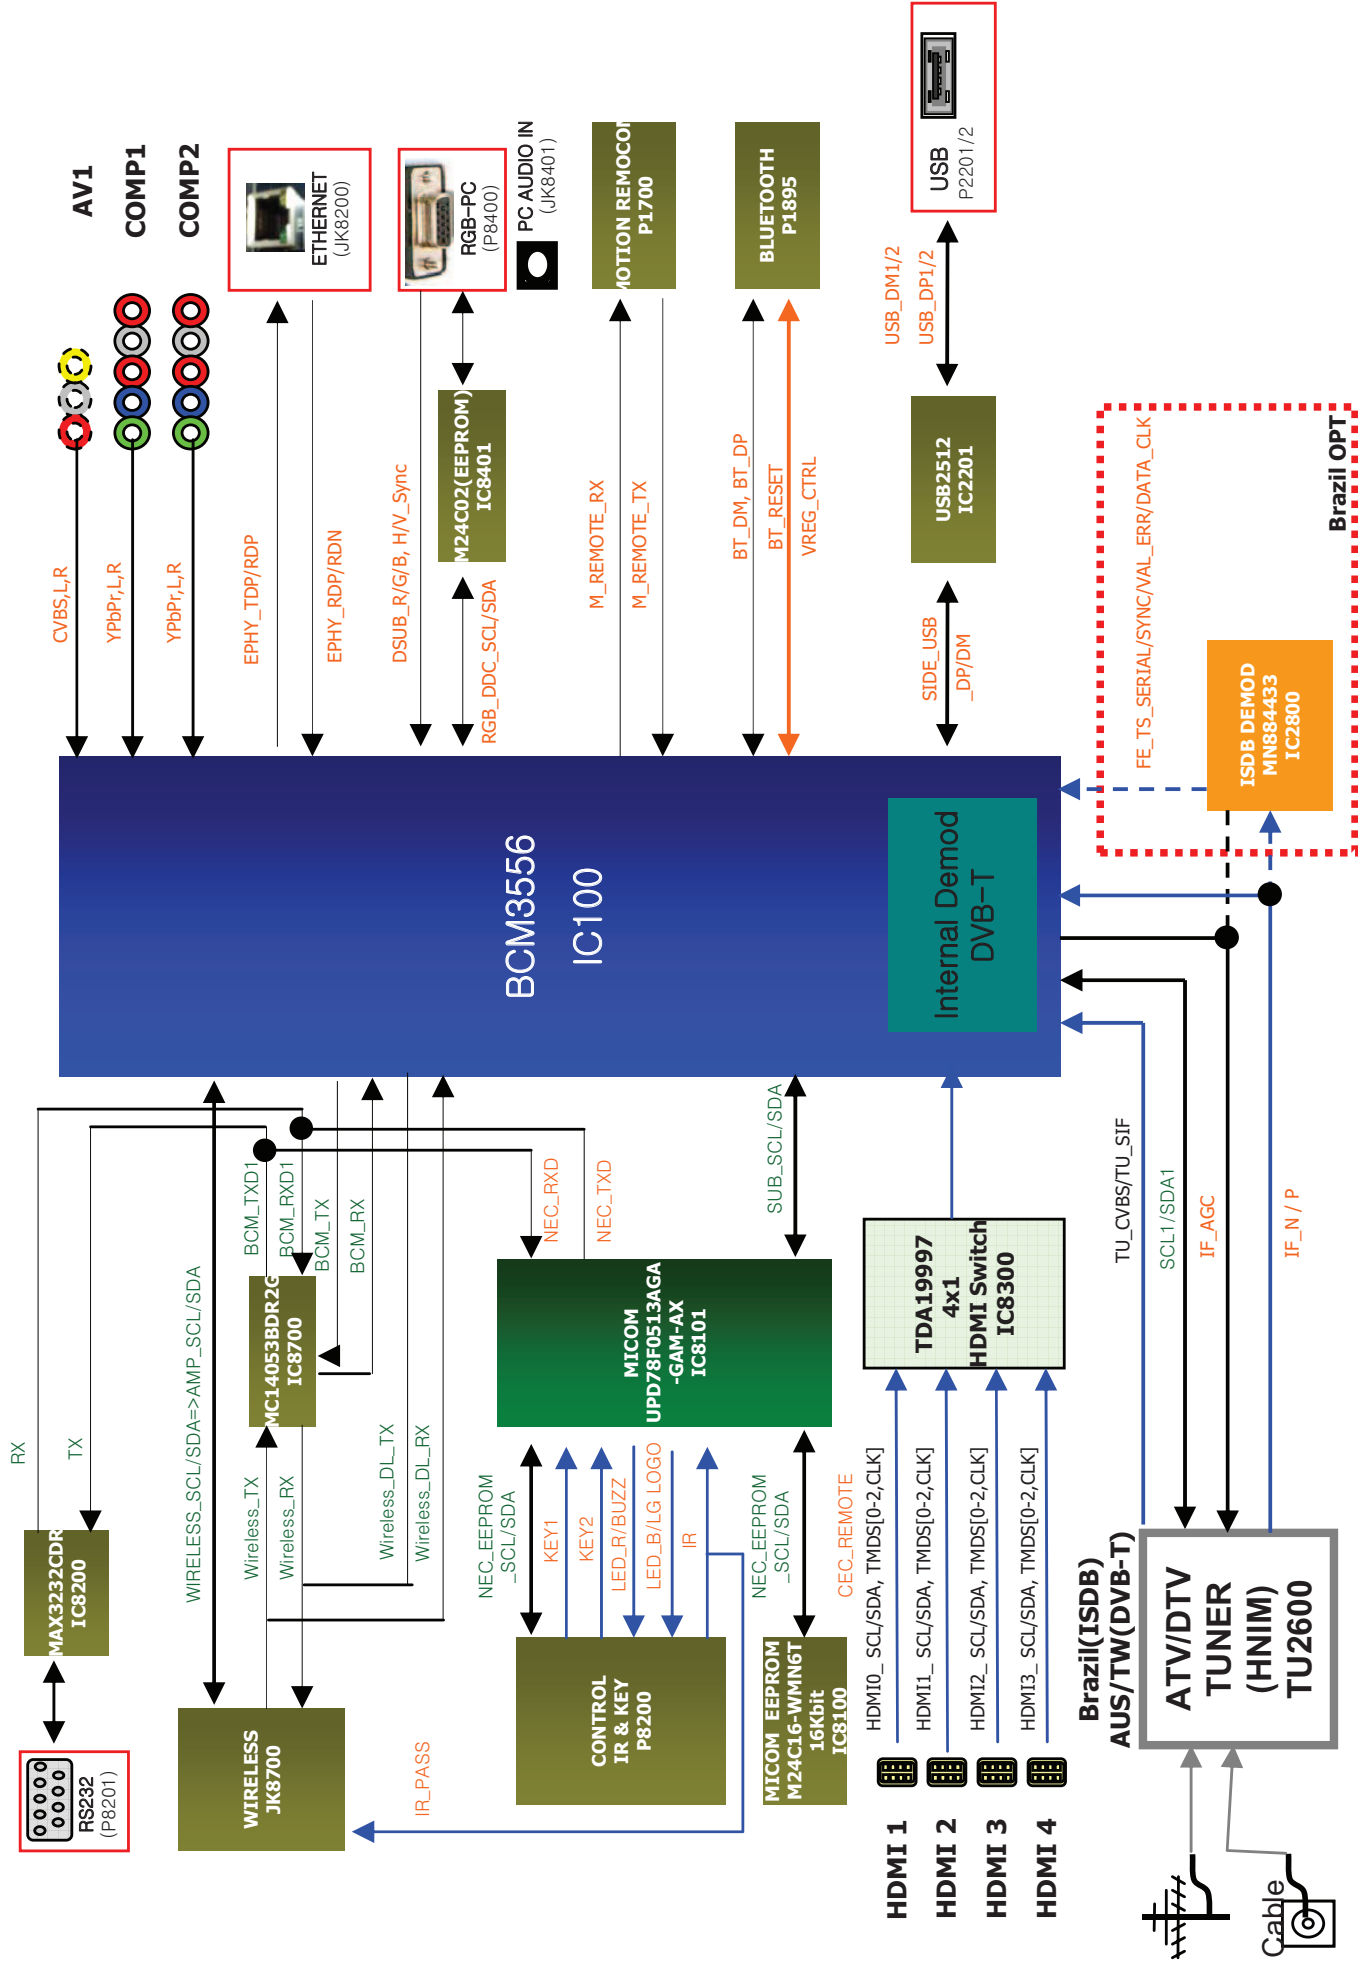


BCM High Block Diagram (Output/Audio)

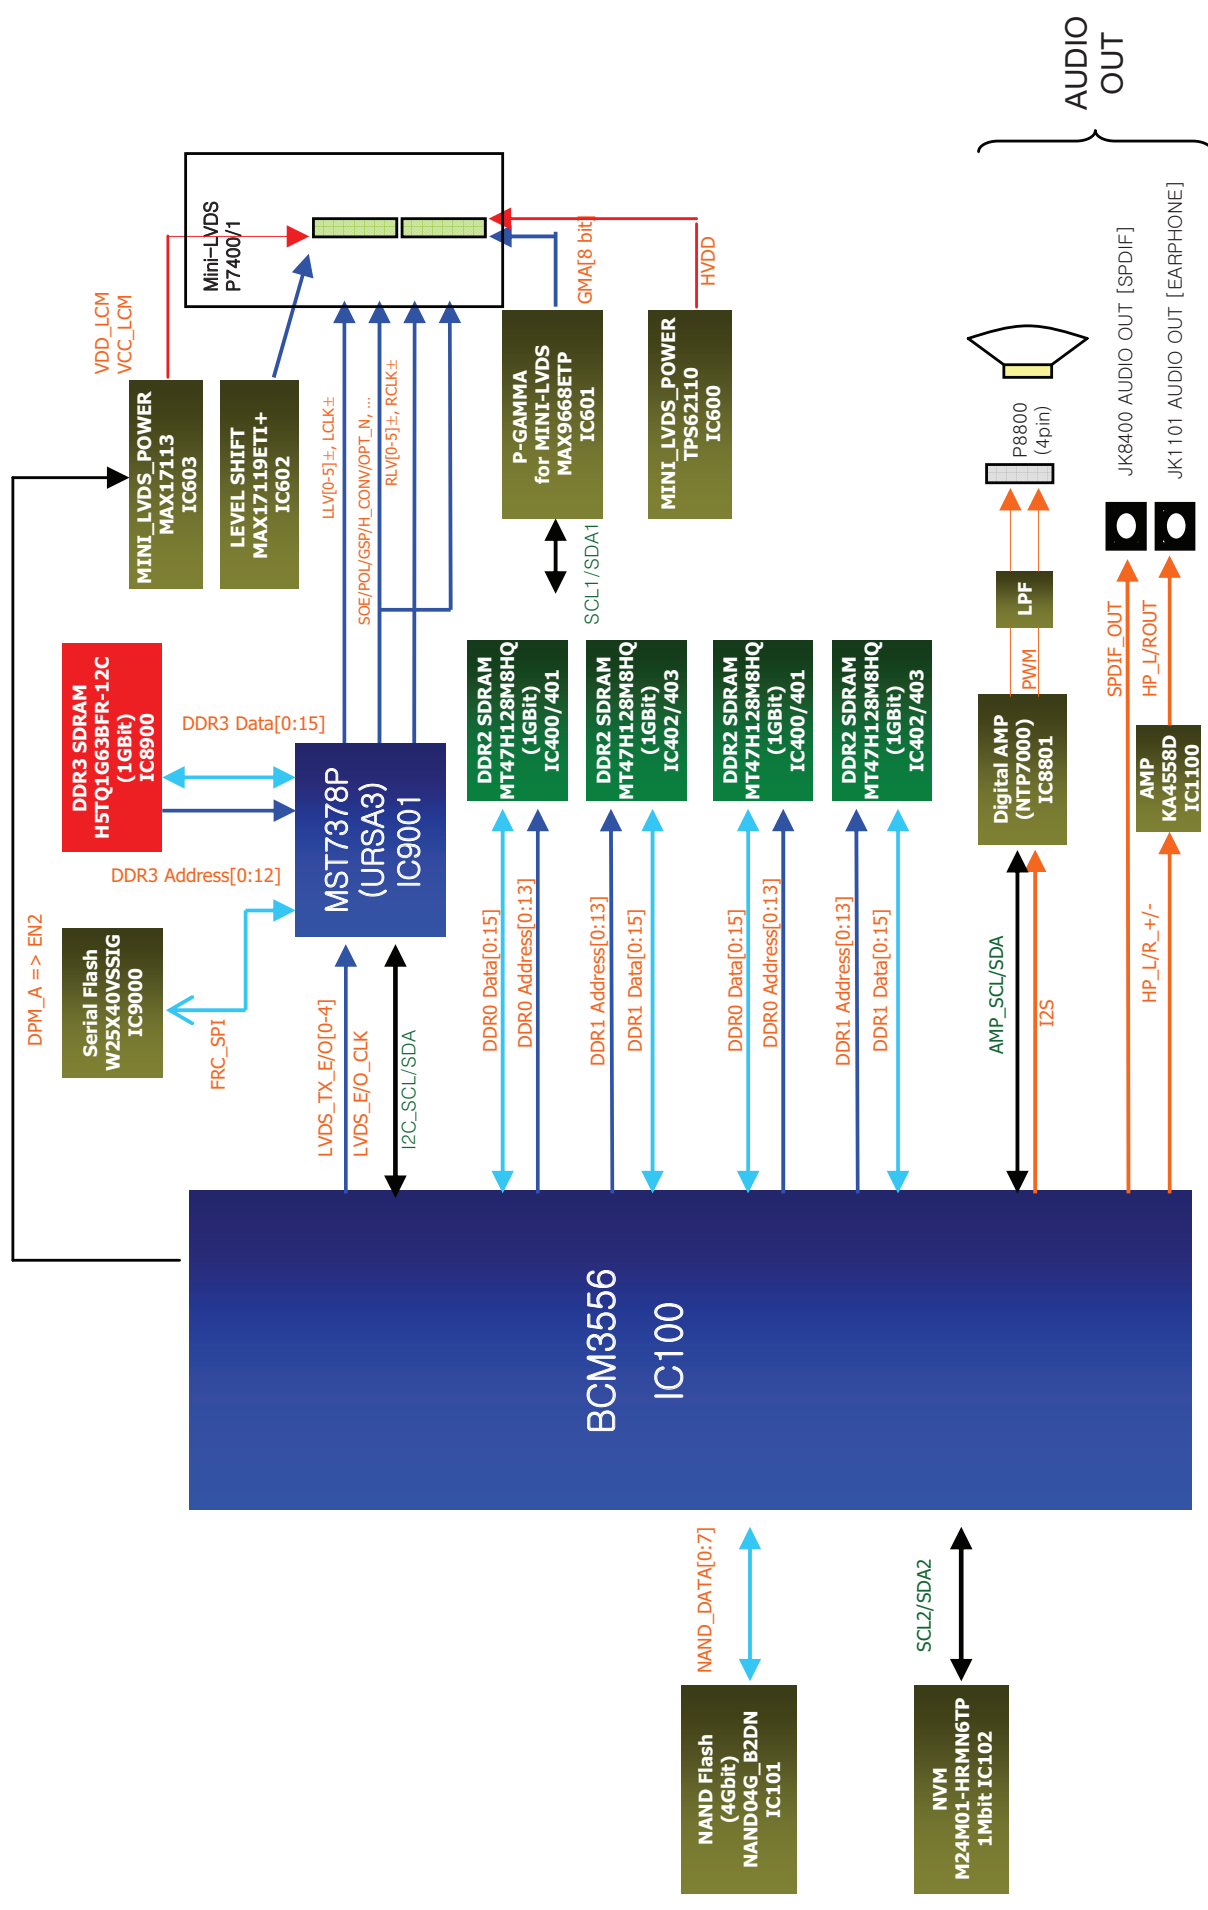

BCM High Block Diagram (Memory)

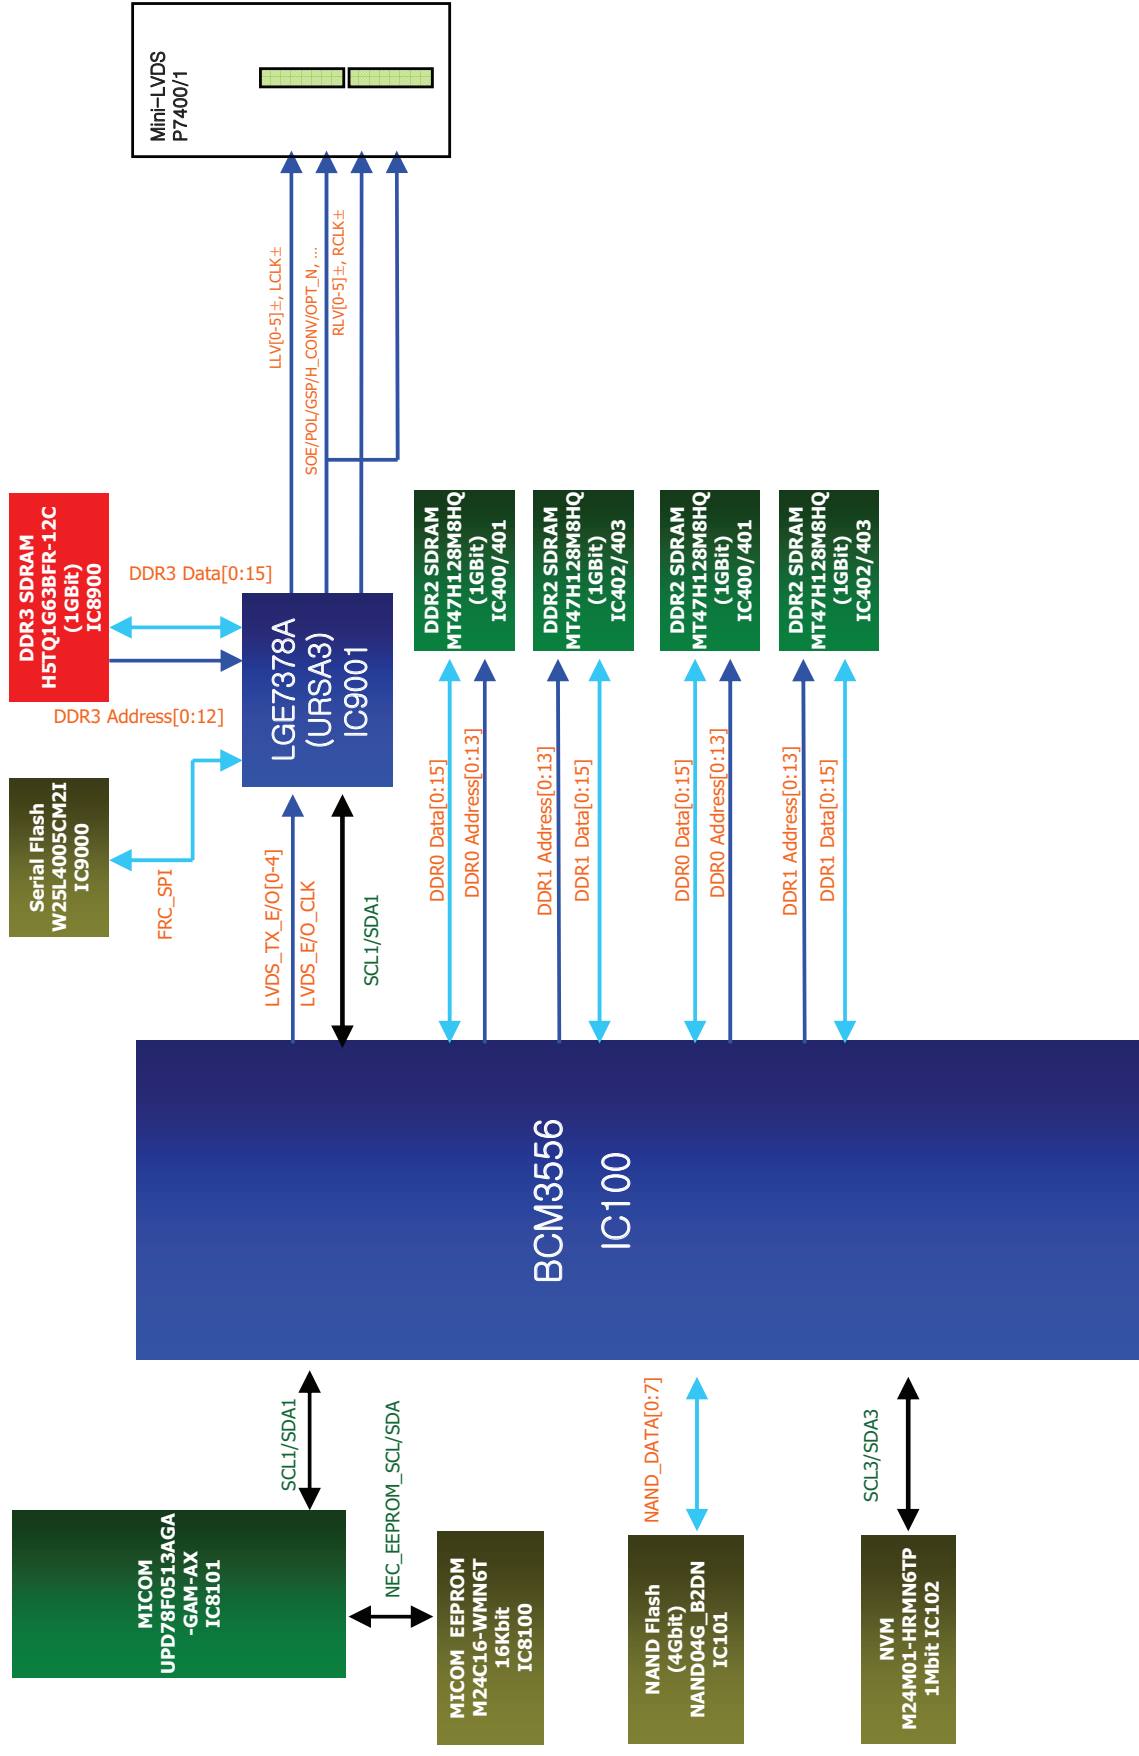

I2C Map_DV2

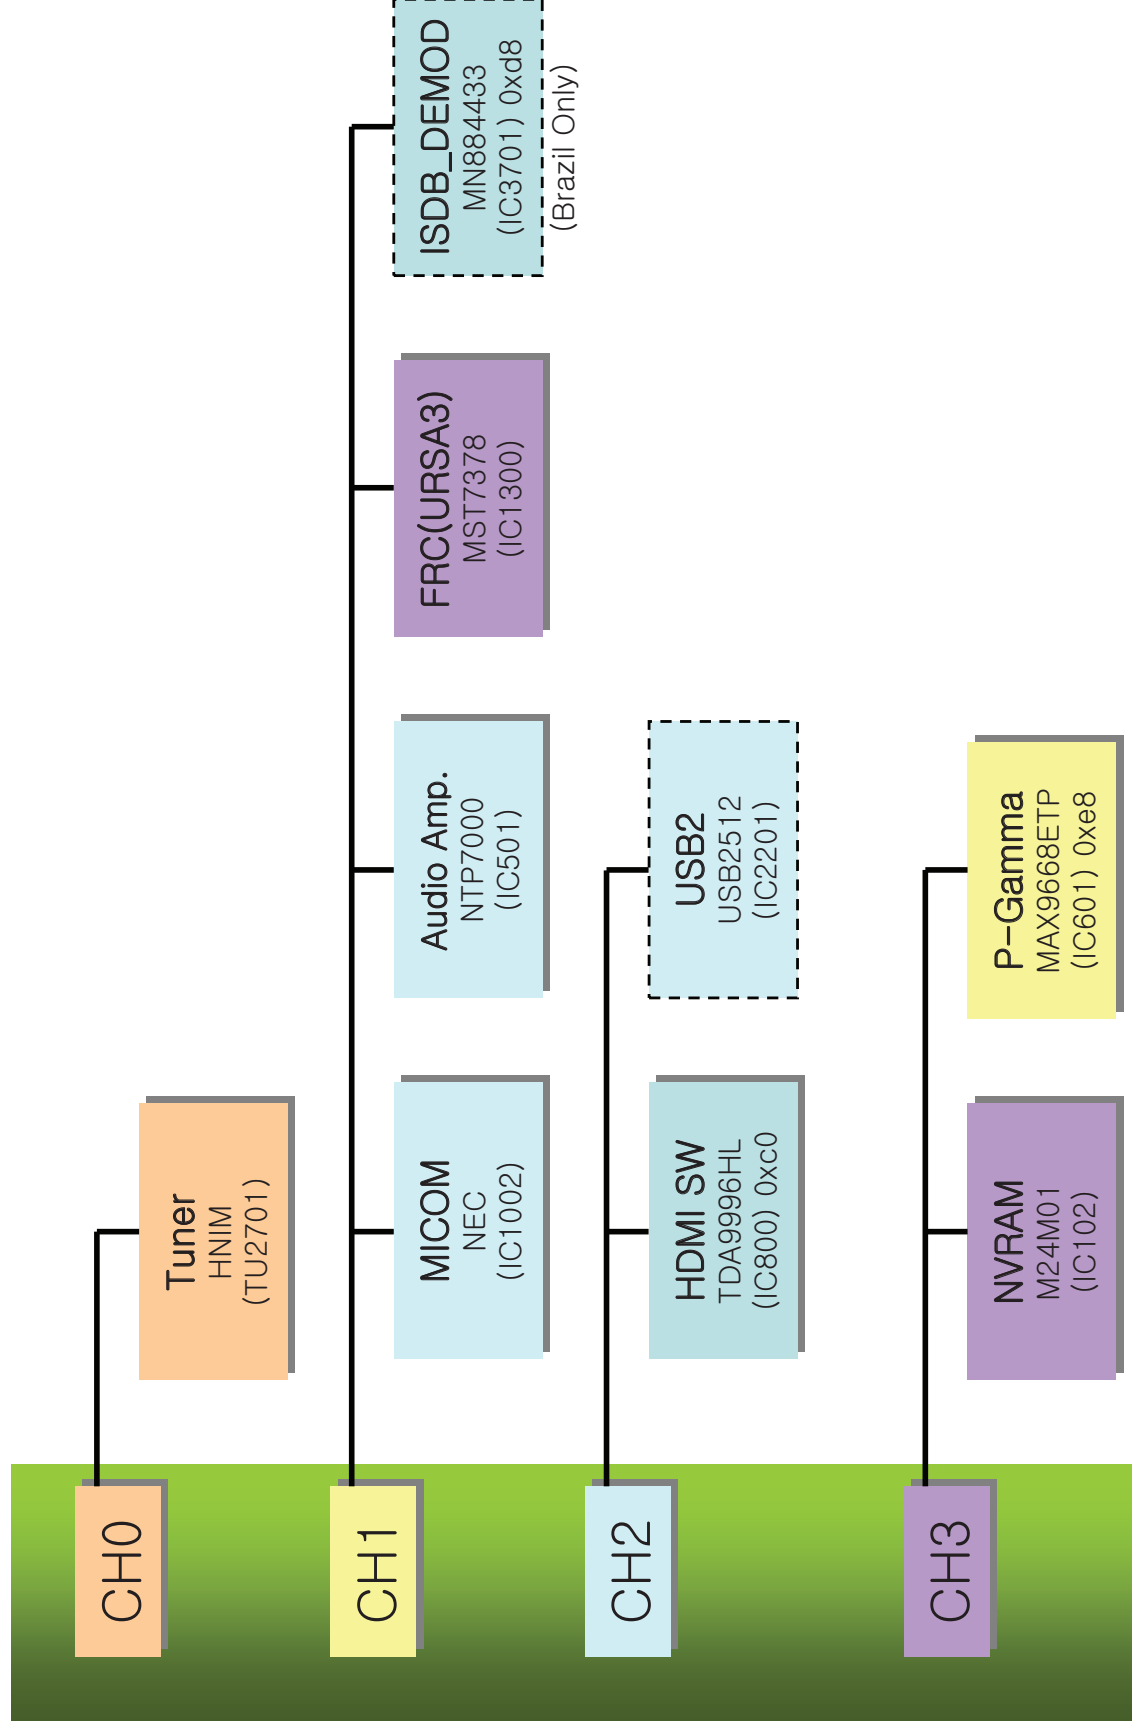

I2C Map_DV1

