



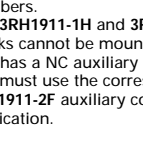


## IEC Contactors

Selection

## SIRIUS 3R Auxiliary Contact Blocks

## Auxiliary Contact Blocks, NEMA A600/Q600 rated

Illustration	Auxiliary Contacts				Screw Terminals		Cage Clamp Terminals		Terminal Identification Number
	NO	NC	Early Make NO	Late Break NC	Catalog No	Price \$	Catalog No	Price \$	
	<b>For 3RT101, 3RT13, 3RT14, 3RT15, 3RT16 Contactors and 3RH Relays</b>								
	1-pole, 3-pole, and 4-pole auxiliary contact blocks, terminals are marked with positions 2 through 5 ① acc. to EN 50 012								
	---	1	---	---	3RH1911-1HA01	10.	3RH1911-2HA01	11.	11E
	1	2	---	---	3RH1911-1HA12	21.	3RH1911-2HA12	24.	22E
	1	3	---	---	3RH1911-1HA13	28.	3RH1911-2HA13	32.	23E
	2	2	---	3RH1911-1HA22	28.	3RH1911-2HA22 <sup>②</sup>	32.	32E	
	2-pole and 4-pole auxiliary contact blocks, terminals are marked with positions 5 through 8 ① acc. to EN 50 005								
	2	---	---	---	3RH1911-1FA20	14.	3RH1911-2FA20	16.	20
	1	1	---	---	3RH1911-1FA11	14.	3RH1911-2FA11	16.	11
	---	2	---	---	3RH1911-1FA02	14.	3RH1911-2FA02	16.	02
	---	---	1	1	3RH1911-1FB11	28.	3RH1911-2FB11	30.	11U
	1	1	1	1	3RH1911-1FB22	42.	---	---	11,11U
	4	---	---	---	3RH1911-1FA40	28.	3RH1911-2FA40	32.	40
	3	1	---	---	3RH1911-1FA31	28.	3RH1911-2FA31	32.	31
	2	2	---	---	3RH1911-1FA22	28.	3RH1911-2FA22 <sup>①</sup>	32.	22
---	---	2	2	3RH1911-1FC22	42.	3RH1911-2FC22	46.	22U	
	1-pole and 2-pole, cable entry from above								
	1	---	---	---	3RH1911-1AA10	10.	---	---	---
	---	1	---	---	3RH1911-1AA01	10.	---	---	---
	1	1	---	---	3RH1911-1LA11	14.	---	---	---
	2	---	---	3RH1911-1LA20	14.	---	---	---	
	1-pole and 2-pole, cable entry from below								
	1	---	---	---	3RH1911-1BA10	10.	---	---	---
	---	1	---	---	3RH1911-1BA01	10.	---	---	---
	1	1	---	---	3RH1911-1MA11	14.	---	---	---
	2	---	---	3RH1911-1MA20	14.	---	---	---	
	Auxiliary contact blocks for low level circuits								
	1	1	---	---	3RH1911-1NF11	63.	3RH1911-2NF11	65.	---
	2	---	---	---	3RH1911-1NF20	63.	3RH1911-2NF20	65.	---
	---	2	---	3RH1911-1NF02	63.	3RH1911-2NF02	65.	---	

① See pages 343-347 for terminal identification numbers.




② The 3RH1911-1H and 3RH1911-2H auxiliary contact blocks cannot be mounted to a 3RT101 contactor that has a NC auxiliary contact built into the unit. You must use the corresponding 3RH1911-1F or 3RH1911-2F auxiliary contact blocks for this application.

## IEC Contactors

Selection

## SIRIUS 3R Auxiliary Contact Blocks

## Auxiliary Contact Blocks, NEMA A600/Q600 rated

Illustration	Auxiliary Contacts				Screw Terminals		Cage Clamp Terminals		Terminal Identification Number
	NO	NC	Early Make NO	Late Break NC	Catalog No	Price \$	Catalog No	Price \$	
	<b>For 3RT1*2, 3RT1*3, and 3RT1*4 contactors, front mount version</b>								
	4-pole auxiliary contact blocks, terminals are marked with positions 1 through 4 ① acc. to EN 50 005								
	4	---	---	---	3RH1921-1FA40	40.	3RH1921-2FA40	44.	40
	3	1	---	---	3RH1921-1FA31	40.	3RH1921-2FA31	44.	31
	2	2	---	---	3RH1921-1FA22	40.	3RH1921-2FA22	44.	22
	---	4	---	---	3RH1921-1FA04	40.	3RH1921-2FA04	44.	04
	---	---	2	2	3RH1921-1FC22	54.	3RH1921-2FC22	58.	22U
	4-pole auxiliary contact blocks acc. to EN50 012								
	3	1	---	---	3RH1921-1HA31	40.	3RH1921-2HA31	44.	31
	2	2	---	---	3RH1921-1HA22	40.	3RH1921-2HA22	44.	22
1	3	---	---	3RH1921-1HA13	40.	3RH1921-2HA13	44.	13	
	1-pole auxiliary contact blocks								
	1	---	---	---	3RH1921-1CA10	10.	3RH1921-2CA10	11.	---
	---	1	---	---	3RH1921-1CA01	10.	3RH1921-2CA01	11.	---
	---	---	1	---	3RH1921-1CD10	20.	---	---	---
	---	---	---	1	3RH1921-1CD01	20.	---	---	---
	2-pole, cable entry from above								
	1	1	---	---	3RH1921-1LA11	20.	---	---	---
	2	---	---	---	3RH1921-1LA20	20.	---	---	---
	---	2	---	---	3RH1921-1LA02	20.	---	---	---
	2-pole, cable entry from below								
1	1	---	---	3RH1921-1MA11	20.	---	---	---	
2	---	---	---	3RH1921-1MA20	20.	---	---	---	
---	2	---	---	3RH1921-1MA02	20.	---	---	---	
	4-pole (1 NO, 1 NC low level circuit; 1 NO, 1 NC standard auxiliary)								
	2	2	---	---	3RH1921-1FE22	79.	3RH1921-2FE22	83.	---
	<b>For 3RT1*2, 3RT1*3, and 3RT1*4 contactors, first side mount auxiliary contact block NEMA A300/Q300 rated</b>								
	2-pole auxiliary contact blocks, mountable on either left or right acc. to EN50 005								
	2	---	---	---	3RH1921-1EA20	20.	3RH1921-2EA20	22.	---
	1	1	---	---	3RH1921-1EA11	20.	---	---	---
	---	2	---	---	3RH1921-1EA02	20.	3RH1921-2EA02	22.	---
	2-pole auxiliary contact blocks, mountable on either left or right ③ acc. to EN 50 012								
	1	1	---	---	3RH1921-1DA11	20.	3RH1921-2DA11	22.	---
	<b>For 3RT1*4 contactors, second side mount auxiliary contact block NEMA A300/Q300 rated</b>								
2-pole auxiliary contact blocks, mountable onto a first position auxiliary on either left or right (only on 3RT104 types) acc. to EN50 005									
2	---	---	---	3RH1921-1KA20	20.	3RH1921-2KA20	22.	---	
1	1	---	---	3RH1921-1KA11	20.	---	---	---	
---	2	---	---	3RH1921-1KA02	20.	3RH1921-2KA02	22.	---	
2-pole auxiliary contact blocks, mountable onto a first position auxiliary on either left or right (only 3RT104 types) acc. to EN 50 012									
1	1	---	---	3RH1921-1JA11	20.	3RH1921-2JA11	22.	---	
<b>For 3TF50 through 3TF57 see page 253</b>									

①See pages 343-347 for terminal identification numbers.

②The 3RH1911-IH and 3RH1911-2H auxiliary contact blocks cannot be mounted to a 3RT101 contactor that has a NC auxiliary contact built in to the unit. You must use a corresponding 3RH1911-1F or 3RH1911-2F auxiliary contact blocks for this application.

③Can only be used if no 4-pole auxiliary contact blocks are snapped onto the front.

4

www.DataSheet4U.com

IEC Control

240