



by **Schneider** Electric

OPERATION/CONFIGURATION

DX8100 Series Hybrid Video Recorder



Server Application Software

C2630M-C (7/09)

Contents

Server Operation/Configuration

Welcome to the DX8100 Series HVR	13
DX8100 Client Emergency Agent	13
DX8100 Viewer	13
DX8100 Mobile Client	13
DX8100 Web Client	14
DX8100 Features	14
Getting Started with DX8100 HVR Software	15
Upgrade Policy	15
Software Upgrades	15
Hardware Upgrades	16
Starting and Shutting Down the DX8100	16
Starting the DX8100	16
Shutting Down the DX8100	16
DX8100 Documentation	17
Logging In to the DX8100 Application	18
Local DX8100 Login	18
Logging in to a Local DX8100	18
Logging Out of the Local DX8100	18
Exiting to the Windows Operating System	19
Remote DX8100 Login	19
Connecting to a Remote Site	19
Disconnecting from a Remote Site	19
Logging in to a Remote Site	19
Logging Out of a Remote Site	20
Working with an External JBOD Device	20
Verifying Available JBOD Drives	20
Working with Dual Monitors	21
Installing the Dual Display Card	21
Configuring the Dual Display Card	21
Understanding the DX8100 Application Window	22
Description of the DX8100 Main Window	22
DX8100 Menu Bar	25
DX8100 Toolbar	28
Displaying the DX8100 Window from a Page	29
Description of Operating Modes	29
Displaying Video in full screen View	29
Switching Between Standard and Extended Panel Views	30
Understanding View Panes and Panels	30
Working with View Panes and Panels	30
Configuring View Panels	31
Navigating View Panels	31
Mapping Channels on the Extended Monitor	34
Viewing Video on The Extended Monitor	36
Modifying an Extended Monitor View	36
Working with the Site tree	37
Assigning Cameras to View Panes	39
Setting Up Links	39
Removing Links	40
Working in Live View Mode	42
Assigning and Removing Cameras from View Panes	42
Setting Up Favorites	43
Adding a Camera View to Favorites	43
Organizing Favorites in Folders	44

Live View On-Screen Display (OSD)	46
Customizing the On-Screen Display (OSD)	47
Instant Recording	47
Enabling and Disabling Instant Recording	47
Adding Instant Recording to OSD	48
Starting and Stopping Instant Recording	48
Listening to Live Audio at the Server	49
Operating the On-Screen PTZ Controls	50
Operating the PTZ Controls	50
Adjusting the Camera Lens	51
Adjusting the Camera Zoom	51
Using Keyboard Shortcuts to Operate PTZ and Lens Functions	52
PTZ Presets	53
Programming a Preset	53
Activating a Preset	54
Clearing a Preset	55
PTZ Patterns	55
Programming a Pattern	56
Activating a Pattern	57
Clearing a Pattern	57
Accessing Programming Features of Remote Cameras	58
Sending Auxiliary Commands to a Device	61
Configuring Preset Tours	62
Programming a Preset Tour	62
Activating a Preset Tour	65
Deactivating a Preset Tour	65
Using the KBD300A Keyboard	66
KBD300A Standard Mode Operational Features	66
Working in Playback Mode	68
Printing Images	68
Accessing Playback Mode	68
Assigning Cameras to View Panels	68
Playback On-Screen Display (OSD)	68
Playback Controls	69
Playback Timeline	71
Playing Back Video by Time	71
Starting Playback from a Specific Point in Time	71
Understanding Instant Playback	72
Playing Back Video by Event	73
Operating Playback Digital Zoom	73
Zoom Using the Digital Zoom Control	74
Zoom Using the Mouse	75
Panning a Zoomed Image	76
Working in Search Mode	77
Search Window	77
Displaying a Deinterlaced Image in the Search Mode	78
Reusing the Search Time Range	78
Index Video Search	79
Thumbnail Video Search	80
POS Search	82
Understanding the POS Search View	82
Searching and Displaying POS Data by Device Name	85
Searching by POS Transaction Number	87
Searching for All Transactions with Exceptions	88
Searching for Transactions That Satisfy Specific Exceptions	89
Searching for Transactions by Line Item	90
Searching for Transactions by Action Code	91
Pixel Video Search	93
Searching Video Based on Changes in Screen Pixels	93
Viewing a Video Thumbnail	95

Working with Special View and Search Methods	96
Viewing Video in the Deinterlaced Mode	96
Viewing Live and Playback Video Simultaneously	96
Exporting Video	97
Exporting Bookmarked Video Regions	97
Creating Bookmarks	97
Clearing Bookmarks	98
Bookmarking and Exporting Multiple Channels	99
Inserting and Removing a USB Flash Drive	100
Installing a USB Flash Drive	100
Removing a USB Flash Drive	100
Enabling the Deinterlacing Filter	101
Mapping and Disconnecting a Network Drive	101
Mapping a Network Drive	101
Disconnecting a Network Drive	102
Performing the Export	102
Starting an Export Process	102
Changing a Bookmarked Time Range	104
Assigning a Custom Export Video File Name	104
Selecting the Export Format	106
Exporting a Sequence of Still Images	107
Finalizing an Export Process	108
Stopping an Export While in Process	108
Working with DX8100 backed up Video	109
Logs and Health Status	110
Viewing Logs from the Application Window	110
Viewing System Health Status	112
Working with System Health Status View	112
Working with System Health Log View	113
Setting Up the DX8100	114
Accessing the Setup Mode	114
Understanding the Setup Dialog Box	115
Camera Setup	116
Basic Camera Setup	116
Motion Detection Setup	118
Audio Setup	119
Configuring Video Loss Detection	121
Applying Settings to All Cameras	122
IP Camera Setup	122
Configuring the DX8100 to Record IP Camera Video	123
Understanding the DX8100 Resource Meter	129
Configuring Analog and IP Cameras for Optimal Hybrid Video Recording	130
Link Setup	132
Configuring Basic Relay and Alarm Settings	132
Linking Relay Outputs to External Events	134
Linking Cameras to Record in Response to External Events	136
Linking PTZ Presets and Patterns to External Events	139
Schedule Setup	143
Accessing the Schedule	143
Setting Up the Camera Recording Mode	145
Creating Yearly Recording Schedules	147
Creating Monthly or Multiple-Day Recording Schedules	149
Editing Schedules	152
Working with Custom Camera Settings	154
Configuring the Frame Rate	156
Setting Up Advanced Relay Output	163
Setting Up Network Properties	168
Configuring the DX8100 for Network Access	168
Setting Up TCP/IP and Bandwidth Throttle	170

Working with Multicasting	170
Accessing Network Information	171
Setting Up DNS/WINS	172
Working with Time Synchronization	172
Setting Up Port and Device Communication Properties	177
Understanding the Port/Device Page	177
Setting Up ATM/POS Device Communication Ports	179
Setting UP ATM/POS Device Properties	180
Setting Up the KBD300A Keyboard	198
Installing or Updating Device Protocols	200
Data Backup Setup	201
Accessing the Backup Configuration Page	202
Adding a Backup Schedule	202
Editing an Existing Backup Schedule	204
Deleting an Existing Backup Schedule	205
Initiating an Instant Backup Schedule	205
Mapping a Network Device	206
Disconnecting from a Network Drive	206
Selecting a Backup Media Device	207
Viewing Backed Up Video	207
User Setup	208
Accessing the User Page	208
Built-in User Accounts	209
Definition of User Access Levels	210
Definition of Camera Security Access	210
Modifying User Access Rights	211
Adding New Users	211
Modifying User Properties	212
Changing User Passwords	213
Changing a User's Group Affiliation	213
Deleting Existing Users	213
Setting Login Timeout	213
Assigning Automatic Login Permission to a User	214
Site Setup	214
Adding a Remote Site	214
Finding Active Remote Cameras	217
Activating Remote Sites	217
Modifying a Remote Site	218
System Setup	218
Accessing the System Page	219
Working with the Export Feature	219
Working with the Import Feature	220
Using System Logs	222
Selecting the Language	224
Setting the System Time	224
Selecting the Video Format	226
Working with Ctrl+Alt+Del Function	226
Setting Up Auto Reboot	227
Specifying the Data Retention Time Limit	227
Working with Online Help	228
External Monitor Setup	228
Accessing the External Monitor Setup	228
Setting Up Camera Mapping	229
Configuring Display Override	235
Using the External Monitor Option	235
Emergency Notification Setup	235
Accessing the Emergency Agent Notification Setup	235
Adding Client Emergency Agents to be Notified	236
Changing Client Emergency Agent Properties	236
Deleting Clients from the Notification List	237
Linking Cameras to Client Emergency Agents	237
Setting Server Event Transmission Time	237

Emergency E-Mail Notification Setup	238
Accessing the Emergency E-mail Notification Setup	238
Configuring Emergency E-mail Notification	238
Setting Up the Time Period	241
Setting Up E-Mail Notification Groups	243
Sending E-mail Notifications	248
Administering and Maintaining the DX8100	250
Updating the DX8100 Server and Client Applications	250
Updating DX8100 Configuration File	251
Recovering a Password	252
Performing Periodic Maintenance	252

List of Illustrations

1	Front Panel and Power Switch	16
2	Export Video Dialog Box	20
3	DX8100 HVR Main Window	23
4	View Panes and Panel for 4-Division Display	31
5	Example of Single, 4, 9, and 16 Division View Panels	32
6	View Panel Identifier	33
7	Channel Mapping for Extended Monitor Page	35
8	Assigning a Camera to a Pane	35
9	Displaying the Extended Monitor Division Buttons	36
10	Site Tree Parts	37
11	Favorites Menu List	43
12	Organize Favorites Dialog Box	44
13	Organize Favorites Dialog Box and List of Favorites/Folders	45
14	Move to Folders Dialog Box	45
15	Live View OSD Pane	46
16	HVR OSD Menu Options	47
17	Activating Instant Recording	48
18	On-Screen PTZ Control	50
19	On-Screen PTZ Movement	50
20	PTZ Keypad with Camera Lens Controls	51
21	Mouse Wheel Zoom	51
22	Creating a Preset	53
23	Programming a Preset	54
24	Activating a Preset	54
25	Clearing a Preset	55
26	Programming a Pattern	56
27	Activating a Pattern	57
28	Clearing a Pattern	57
29	PTZ OSD Menu Control	58
30	PTZ Control Panel	59
31	Camera Setup Menu	60
32	Auxiliary (Aux) Button	61
33	Preset Tour Dialog Box	62
34	Adding Preset to Tour	63
35	Deleting Preset from Tour	64
36	Activating a Preset Tour	65
37	Playback OSD	68
38	Playback Controls	69
39	Playback Speed and Volume Controls	70
40	Playback Timeline	71
41	Date Selection Drop-Down Box	72
42	Event Type Drop-down Box	73
43	Playback Digital Zoom Control	74
44	Zoom In Using Mouse	75
45	Zoom Out Using Mouse	75
46	Panning Zoomed Video with the Mouse	76
47	DX8100 HVR Search Mode Window	77
48	DX8100 HVR Index Search Screen	80
49	DX8100 HVR Thumbnail Search Screen	81
50	POS Search View	83
51	POS Transaction Search by Device Name	86
52	Display a POS Transaction Search by Device Name	87
53	Searching an POS Event by Transaction Number	88
54	Searching for Transaction with Exception Only Events	89
55	Transactions that Satisfy Specific Exception Filters	90
56	Transactions that Contain a Unique Line Item	91
57	Searching Transactions by Action Code	92
58	Pixel Search Screen	94
59	Thumbnail Images Marking Pixel Changes	95

60	Setting a Starting Bookmark	98
61	Removing a Single Bookmark	98
62	Book Marking Multiple Time Regions	99
63	Selecting a Time Range for Duplication	99
64	Selecting the Export Device and Time Ranges	100
65	Enabling the Deinterlacing Filter from the Export Video Dialog Box	101
66	Export Video Dialog Box	102
67	Exporting Selected Video	103
68	Export Time Range	104
69	Default File Names	104
70	Renaming Export Time Ranges	105
71	Still Image Export Formats	107
72	Real Time Versus Non-Real Time Export	108
73	Accessing Log Commands from the Application Window	110
74	Log View Dialog Box_C2630MB	110
75	Period Start and End Dates	110
76	User ID Log Events	111
77	System On/Off Log Events	111
78	System Health View Submenu	112
79	System Health Dialog Box	112
80	System Health Log	113
81	Parts of the DX8100 Setup Dialog Box	115
82	Camera Page	117
83	Low Sensitivity Level	118
84	High Sensitivity Setting Level	118
85	Adequate Sensitivity Level	118
86	Camera Motion Detection Setup	119
87	Audio Option Not Installed	120
88	AUX Audio Settings Dialog Box	120
89	Video Loss Detection	122
90	DX8100 Scan Utility Results	124
91	Manually Entering IP Camera Data	125
92	Manually Entering IP Camera Data	125
93	Automated Assignment of an IP Camera	125
94	Entering the User Name, Password, and Stream	126
95	Pelco IP110 General Tab	126
96	Viewing IP Camera Settings	128
97	DX8100 System Resources Warning Dialog Box	128
98	DX8100 Resource Meter	129
99	DX8100 System Resources Warning Dialog Box	130
100	Disabling an IP Camera	130
101	IP Camera Status: Disabled	131
102	IP Camera Not Registered Dialog	131
103	IP Camera in Site Tree and Status: Disabled	131
104	Relay and Alarm Settings Page: Relay Settings Section	133
105	Relay and Alarm Settings Page: Alarm Settings Section	134
106	Event-Relay Link Settings: Motion Detection Link Settings Section	134
107	Event-Relay Link Settings: Alarm Link Settings Section	135
108	Event-Relay Link Settings: ATM/POS Link Settings Section	135
109	Event-Relay Link Settings: Video-Loss Link Settings Section	136
110	Event-Relay Link Settings: Video-Loss Link Settings Section	137
111	Event-Recording Link Settings: Alarm Record Link Settings Section	137
112	Event-Recording Link Settings: ATM/POS Record Link Settings Section	138
113	Event-Recording Link Settings: Video-Loss Record Link Settings Section	138
114	Event-PTZ Link Settings: Linking Presets and Patterns to Motion Events	139
115	Event-PTZ Link Settings: Linking Presets and Patterns to Alarm Events	140
116	Event-PTZ Link Settings: Linking Presets and Patterns to ATM/POS Events	141
117	Event-PTZ Link Settings: Linking Presets and Patterns to Video Loss Events	142
118	Schedule Page	143
119	Filling In Recording Blocks in a Schedule Grid	146
120	Clearing Recording Times for a Specific Record Mode	146
121	Clearing Recording Times for All Record Modes	147

122	Year View Calendar Shortcut Menu	148
123	Month View Page: Multi-Day Schedule	149
124	Month View Page: Single-Day Schedule	151
125	Month View Calendar Shortcut Menu	152
126	Month View Page	153
127	Month View Page	154
128	Custom Camera Settings Panel	155
129	Examples of Custom Camera Settings	155
130	Frame Rate Configuration Dialog Box	158
131	Frame Rate Configuration Screen	159
132	Setting Up DX8100 for Maximum IPS Recording	161
133	Frame Rate Configuration Screen	162
134	Maximum Rate and Resolution Recording	162
135	Example of Frame Rate Capacity	163
136	Linking Relays to Motion Detection	164
137	Linking Relays to Alarms	165
138	Linking Relays to ATM/POS	166
139	Linking Relays to Video Loss	167
140	Network Setup Page	169
141	NTP Server List Dialog Box	173
142	Add / Edit NTP Server Dialog Box	173
143	Editing an NTP Time Server	174
144	Port/Device Page	177
145	Multi Mode Communication Port Settings	181
146	Default Data Format List Page	182
147	Modified ER-650 Data Format Dialog Box	182
148	Data Format List	183
149	Assigning the Data Format ATM/POS Devices	184
150	Event-Recording Link Settings Page	185
151	Schedule Setup Page	186
152	Data Format Page	187
153	Assigning a Data Format to an ATM/POS Device	191
154	Advanced Page	193
155	Exceptions Dialog Box	194
156	Assigning an Exception to an ATM/POS Device	196
157	Verifying the ATM/POS Communication Connection	197
158	Recording ATM/POS Transaction	198
159	Backup Configuration Screen	201
160	Add Backup Schedule Dialog Box	203
161	Editing an Existing Backup Schedule	204
162	Instant Record Backup Now Dialog Box	206
163	User Page	208
164	Add New User Dialog Box	212
165	Adding a Site with a Static IP Address	215
166	Adding a Site with a Dynamic IP Address	216
167	Finalizing Site Setup	217
168	Exporting HVR Settings	220
169	Import DX8100 Server Configuration	221
170	Log View Dialog Box	222
171	Window Log Viewer Dialog Box	223
172	System Setup Time	225
173	Data Retention Time Limit Entered Manually	227
174	External Monitor: Automatic Mapping	229
175	External Monitor: Manual Mapping	231
176	Loading a Mapping Sequence	232
177	Modify a Mapping Sequence	233
178	Delete a Mapping Sequence	234
179	Basic E-mail Notification Setup	239
180	E-Mail Test	240
181	Add User to E-mail Group	245
182	Remove User from E-mail Group	246
183	Modify Member Attributes	247

184	Sending E-mails to Individuals	248
185	Sending E-mails to Groups	249
186	Software Upgrade Server Console	250
187	Software Upgrade Server Console	251
188	Password Recovery Dialog Box	252
189	Removing the Filter	253

List of Tables

A	Parts of the DX8100 Application Window	24
B	File Menu Commands	25
C	Edit Menu Commands	25
D	View Menu Commands	26
E	Export Menu Commands	27
F	Favorite Menu Commands	27
G	DX8100 Help Menu Commands	28
H	DX8100 Toolbar Buttons	28
I	Operating Modes	29
J	View Panes Panel	31
K	How View Panels are Organized	32
L	View Panes and Panel	33
M	Site Tree Parts	38
N	Parts of the Live View OSD Pane	46
O	Recording Indicators	49
P	Standard Keyboard Functions for Controlling PTZ and Lens Functions	52
Q	Parts of the PTZ OSD Menu Control	59
R	KB300A Standard Operational Mode Features	66
S	KBD300A Shift Key Features	67
T	Parts of the Playback Controls	69
U	Parts of the Playback Speed and Volume Controls	70
V	Parts of the Playback Timeline Control	71
W	Parts of the Digital Zoom Control	74
X	Parts of the DX8100 Window in Search Mode	78
Y	Parts of the POS Search View	84
Z	Bookmark Controls	97
AA	Available Backup Space	103
AB	Export Formats	106
AC	Parts of the DX8100 Setup Dialog Box	115
AD	DX8100 Resource Meter	129
AE	Parts of the Schedule Page	144
AF	Record Modes	145
AG	Camera Settings for the Supported Recording Modes	156
AH	Resolution Values	159
AI	DX8100 Server Maximum IPS Recording	160
AJ	DX8100 Camera Grouping	160
AK	Frame Rate Capacity	163
AL	Motion-Activated Relay Settings	164
AM	Alarm-Activated Relay Settings	165
AN	ATM/POS-Activated Relay Settings	166
AO	Video Loss-Activated Relay Settings	167
AP	TCP/IP Ports Used by the DX8100	170
AQ	DX8100 Multicast Requirements and Operation	171
AR	Parts of the Port Device Page	178
AS	DX8100 Ports and Serial Data Communication Standards	178
AT	COM1 Port Properties	179
AU	Parts of the Data Format Page	188
AV	Transaction Start and End Parameters	188
AW	Action Codes	192
AX	ATM/POS Exception Modifiers	195
AY	KB300A Standard Operational Mode Features	199
AZ	KBD300A Shift Key Features	200
BA	Parts of the Backup Schedule Page	202
BB	Parts of the User Page	209
BC	Default User Group Access Rights	210
BD	Default Camera Security Levels	210
BE	DX8100 Activities and Windows OS Log Files	222

Server Operation/Configuration

You are reading DX8100 Series hybrid video recorder (HVR) version 2.0 documentation. The information in this manual describes how to configure and use the DX8100 system in your security application.

For a brief description of the DX8100 server and client applications, refer to [Welcome to the DX8100 Series HVR](#).

Welcome to the DX8100 Series HVR

The DX8100 Series HVR features IP camera recording, external JBOD (just a bunch of disks) storage, remote client connectivity to as many as 200 HVR/DVR servers, dual monitor display, multimode recording for up to 16 ATM/POS devices or single mode recording for up to 4 ATM/POS devices, system health status and configuration, multi-event recording, continuous motion detection, alarm, and scheduled recording. The DX8100 is a high-performance, computer-based, easy-to-operate HVR and client application system. Models range from an 8-channel, single 250 GB hard disk drive (HDD) unit to a 32-channel unit with up to 6 TB of internal storage. An external JBOD unit adds as much as 6 TB, increasing DX8100 storage capacity up to 12 TB.

DX8100 software runs on two platforms:

- The DX8100 HVR server software runs on the DX8100 Series HVR.
- The DX8100 Client Application software runs on a personal computer and allows you to log on and operate the DX8100 HVR server system from your local computer.

Fully implemented networking capabilities allow remote administration, playback, and export using the accompanying client application. Live viewing is supported on a variety of client platforms, including Internet browsers and pocket PC-compatible hand-held devices. Versatile high-speed search operations include time and date, event list, thumbnail, and intelligent pixel searching. Extensive scheduling features allow customizing of weekday, weekend, and special event recording.

The DX8100 provides a graphical user interface (GUI), allowing you quick and efficient access to all setup and operations functions. Scheduled or manual backup can be performed using a number of optical, external, and mapped network drive options.

An online Help system allows you quick access to information about how to configure and operate the DX8100 server and DX8100 client application.

The DX8100 also supports the following computer-based applications:

- [DX8100 Client Emergency Agent](#)
- [DX8100 Viewer](#) on page 13
- [DX8100 Mobile Client](#) on page 13
- [DX8100 Web Client](#) on page 14

DX8100 CLIENT EMERGENCY AGENT

The DX8100 Client Emergency Agent works with networked DX8000 Series HVRs to alert users when one or more particular channels detect a motion and/or alarm event. The Emergency Agent runs on a networked client computer.

DX8100 VIEWER

The DX8100 Viewer is capable of playing back a variety of video, still image, and audio media formats. It is designed to recognize and verify the digital watermark that is embedded in DX8000 Series HVR native video. Watermarking is used to authenticate the originality of a video file and to alert users of possible image tampering. The viewer application runs automatically each time a CD or DVD created by the DX8100's export feature is inserted into a Windows®-based computer. The software can also be installed on a computer and opened independently when necessary.

DX8100 MOBILE CLIENT

The DX8100 Mobile Client allows you to view live video remotely from multiple cameras and sites. Networking capabilities include local connection using wire-bound or wireless local area network (LAN) technologies or remote connection using the Internet. The DX8100 Mobile Client software runs on a standard pocket PC-based personal digital assistant (PDA), and it can display a single channel of real-time video from any camera attached to any DX8100 HVR on the network. Features include hierarchical organization of multiple sites, built-in security through password protection, and an adjustable viewing area, including full-screen view.

DX8100 WEB CLIENT

The DX8100 Web Client allows you to view live video and operate pan, tilt, and zoom (PTZ) features of cameras attached to DX8100 HVRs. Using a standard Web browser, you can remotely monitor up to 16 cameras from up to five DX8100 HVR servers simultaneously. Each DX8100 HVR can support up to 100 Web clients either internally within an organization or externally through the Internet.

DX8100 FEATURES

The DX8100 version 2.0 release includes new features: IP camera recording, external JBOD, and remote client connection to as many as 200 DX8100 servers. Refer to the following list for additional features.

<ul style="list-style-type: none"> Up to 480/400 images per second (ips) Recording Rate at CIF 	<ul style="list-style-type: none"> Local and remote administration, live, search, and playback viewing
<ul style="list-style-type: none"> Dynamically adjustable frame rate and image quality for motion, alarm, and pre-alarm recording 	<ul style="list-style-type: none"> Scheduled backup
<ul style="list-style-type: none"> Pre- and post- alarm recording up to 60 seconds (up to 15 minutes with optional 512 mb ram upgrade)* 	<ul style="list-style-type: none"> Export and import system configurations
<ul style="list-style-type: none"> 2 Standard audio channels with live audio over the network 	<ul style="list-style-type: none"> Multilevel password and user configuration
<ul style="list-style-type: none"> 8/16/24/32 alarm inputs and 8/16/24 relay outputs 	<ul style="list-style-type: none"> Automatic image watermarking
<ul style="list-style-type: none"> User-definable PTZ presets, patterns, and preset tours 	<ul style="list-style-type: none"> Multilingual support (English, French, German, Italian, Polish, Portuguese, Russian, and Spanish)
<ul style="list-style-type: none"> Online help 	<ul style="list-style-type: none"> Standard DVD-R burner writes to CD-R and DVD-R media
<ul style="list-style-type: none"> Thumbnail, pixel (smart search), ATM/POS search modes 	<ul style="list-style-type: none"> External storage RAID 5 option
<ul style="list-style-type: none"> Instant playback 	<ul style="list-style-type: none"> NTP time server compatible
<ul style="list-style-type: none"> Network up to five DX8100/DX8000s server 	<ul style="list-style-type: none"> Optional KBD300A keyboard support for camera selection and PTZ control
<ul style="list-style-type: none"> 5 Simultaneous connections per server 	
<ul style="list-style-type: none"> Unlimited licenses for remote computer, Web, and handheld client 	

*Pre-alarm time estimate is based on 16-channel recording at a resolution of 320 x 240 (CIF) and a frame rate of 5 ips.

Getting Started with DX8100 HVR Software

This section provides information to help you get started using the DX8100 HVR server software. You must install your DX8100 Series HVR before using this guide. In order for your system to operate properly, you must also perform the following tasks:

- Read the Important Security Information for System Administrators manual and configure the DX8100 to ensure maximum DX8100 server operation security.
- Change the default language (if other than English). For more information, refer to [Selecting the Language](#) on page 224.
- Set the system clock. For more information, refer to [Setting the System Time](#) on page 224.
- Identify network parameters. For more information, refer to [Setting Up Network Properties](#) on page 168.
- Add a printer (if you want to print still video images). For more information, refer to [Printing Images](#) on page 68.

If the above steps have not been completed, refer to the installation manual supplied with the unit for instructions on installing and configuring your DX8100.

NOTE: System administrators are recommended to read the Important Security Information for System Administrators manual and configure the DX8100 to ensure maximum DX8100 server operation security.

This section includes the following topics:

- [Upgrade Policy](#)
- [Starting and Shutting Down the DX8100](#) on page 16

UPGRADE POLICY

Pelco's representations regarding product features and performance are limited to those made in the specification sheet and installation/operation manual at the time the product was manufactured. Pelco does not represent or warrant that any upgrades to product hardware or software will be made available in the future. When possible, Pelco will offer product upgrades to purchasers of its products.

The upgrade policy is described in the following sections:

- [Software Upgrades](#)
- [Hardware Upgrades](#)

SOFTWARE UPGRADES

1. All upgrades for Pelco software shall be free to the customer for the duration of the warranty period. This offer does not apply to software that may be installed in a Pelco product that is licensed from another supplier. All other software, such as operating systems, drivers for accessory devices, and so forth, shall be governed by the software manufacturer's upgrade policy, even when said upgrades are necessary to implement an upgraded version of Pelco software.
2. Whenever possible, software upgrades with detailed instructions shall be provided to the customer through Web site download. Pelco will not be responsible for loss of data, losses due to down time, or damage to product as a result of a customer attempting to perform an upgrade.
3. Hard copies on appropriate medium (CD/DVD, ZIP, or floppy disk) shall be sent to the customer at no charge upon request.
4. It shall be the customer's responsibility to procure necessary hardware to perform upgrades if required (necessary drives, such as CD-R, DVD-R, or ZIP).
5. Pelco cannot guarantee that all future software versions will be backward compatible with earlier hardware platforms.

HARDWARE UPGRADES

Pelco provides hardware options for upgrading the DX8100 memory, channel input, analog video output, audio input capacity, and hard disk storage. For information about DX8100 upgrade options, refer to the DX8100 product specification sheet. Hard disk upgrades are available as follows:

1. Additional hard drive space cannot be installed in some models. To determine if your model can be upgraded, refer to the DX8100 Installation manual or contact Pelco's technical support.
2. Hard disk upgrades are available through Pelco at established prices and are subject to the usual 24-hour turnaround for service.

When a larger hard drive is being substituted for a smaller one, the smaller drive will be returned to the customer along with the upgraded unit.

While Pelco will perform all upgrades with the utmost consideration and care, Pelco cannot guarantee that any of the data and/or video stored on the existing hard drives will not be lost or damaged. Pelco is not responsible for damage or loss of data.

STARTING AND SHUTTING DOWN THE DX8100

This section describes how to start and shut down the DX8100 and includes the following topics:

- [Starting the DX8100](#)
- [Shutting Down the DX8100](#)

For information about logging in to the DX8100, refer to [Logging In to the DX8100 Application](#) on page 18.

STARTING THE DX8100

To start the DX8100:

1. Once the system is installed, open the front panel of the HVR and press the power switch.

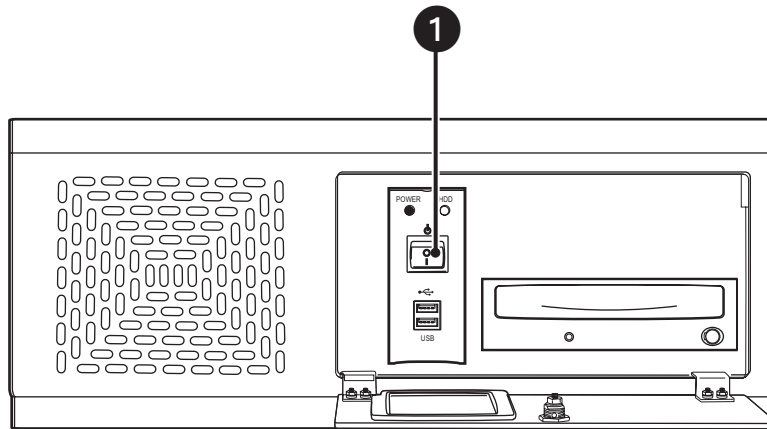


Figure 1. Front Panel and Power Switch

2. Wait while the unit starts (this may take several minutes).

SHUTTING DOWN THE DX8100

You must have Power User or Administrator access to shut down. For information about users' security levels, refer to [Definition of User Access Levels](#) on page 210.

To shut down:

1. From the DX8100 menu bar, choose File > Exit. The Shut Down dialog box opens.
2. Select Shut down.
3. Click OK.

DX8100 DOCUMENTATION

You can print selected technical documentation free, directly from the Internet.

To access technical documentation:

1. Go to www.pelco.com/products/. The Pelco Products Web page is displayed.
2. Scroll to the Control Site Equipment section and click Video Recorders. The HVR Web page is displayed.
3. Scroll to the DX8100 and locate the specific document you want to view or print. You will need Adobe® Acrobat Reader® to open, search, and/or print the document. (Go to www.adobe.com to download a free copy of Acrobat Reader.)

Logging In to the DX8100 Application

To access the features of the DX8100 Series HVR, you must log in with a valid user name and password. The DX8100 comes equipped with a built-in user account named "Guest." Each time the unit is turned on, the Guest account is automatically activated. In addition to the Guest account, there are four other user access levels, or groups, that can be configured on the DX8100. The Guest user is granted only limited access to the system. The other four access levels range from the Administrator group, with the most rights and privileges, to the Restricted group, with the least rights and privileges.

To operate and configure all but the most basic features of the DX8100, you must be assigned a user account other than Guest. If you have not been assigned a user account, contact your system administrator before proceeding.

For information about the rights and permissions of the user groups, refer to [Definition of User Access Levels](#) on page 210.

NOTE: The Guest user account does not have access to the setup features of the DX8100. Only users with Administrator and Power User accounts are allowed access to setup functions.

This section includes the following topics:

- [Local DX8100 Login](#)
- [Remote DX8100 Login](#) on page 19

LOCAL DX8100 LOGIN

If you are logging into the DX8100 for the first time, refer to the first-time login instructions in the DX8100 Installation manual.

This section includes the following topics:

- [Logging in to a Local DX8100](#)
- [Logging Out of the Local DX8100](#)
- [Exiting to the Windows Operating System](#)

LOGGING IN TO A LOCAL DX8100

You must have a valid user name and password to log in to the DX8100. The user name and password are case sensitive.

To log in with a user name other than Guest:

1. From the DX8100 main menu, go to File > User Log-in. The User Log-in dialog box opens.
2. Enter a valid user name in the User Name field and a valid password in the Password field.
3. Click OK.

LOGGING OUT OF THE LOCAL DX8100

Logging out of the local or a remote HVR does not disconnect you from that system. Logging out will return you to the Guest account.

To disconnect from a remote server, refer to [Disconnecting from a Remote Site](#) on page 19.

To log the current user out of the system and return to the Guest account:

- Click File > User Log-out.

You can also log out of a local or remote HVR by right-clicking its site name from the Site Tree and then selecting User Log-Out from the shortcut menu.

EXITING TO THE WINDOWS OPERATING SYSTEM

You must have DX8100 Administrator user access and a Windows password to exit to the Windows operating system. Refer to [Definition of User Access Levels](#) on page 210 for information about users' security levels. For information about the Windows default password, refer to the Important Security Information for System Administrators guide.

To exit the DX8100 application and log into the Windows operating system:

1. From the DX8100 menu bar, choose File > Exit. The Shut down dialog box opens.
2. Click Exit to Windows.
3. Click OK.
The Log On to Windows dialog box opens.
4. Enter the Windows password and then click OK. The system logs you into the Windows operating system.

REMOTE DX8100 LOGIN

You can view live and playback video from up to five DX8100 Series HVRs simultaneously. To access the features of a remote DX8100, a link must be established between the local and remote HVRs. Refer to [Adding a Remote Site](#) on page 214 for instructions on establishing a network connection with a remote HVR. After establishing an active connection, refer to [Logging in to a Remote Site](#) on page 19 for instructions.

This section includes the following topics:

- [Connecting to a Remote Site](#)
- [Disconnecting from a Remote Site](#)
- [Logging in to a Remote Site](#)
- [Logging Out of a Remote Site](#)

CONNECTING TO A REMOTE SITE

To connect to an active DX8100 server on the network:

1. In the DX8100 main window, right-click the remote site name from the Site Tree. The shortcut menu is displayed.
2. Select Connect from the shortcut menu.

DISCONNECTING FROM A REMOTE SITE

To terminate a connection with a remote DX8100 server:

1. In the DX8100 main window, right-click the remote site name from the Site Tree. The shortcut menu is displayed.
2. Select Disconnect from the shortcut menu.

LOGGING IN TO A REMOTE SITE

After a connection to a remote site has been established, log in with a valid user name and password for that site.

To log in to a remote site:

1. In the DX8100 main window, select a remote DX8100 Series HVR site from the Site Tree.
2. From the DX8100 menu bar, choose File > User Log-in.
You can also log in to a remote site by right-clicking its site name and then selecting User Log-In from the shortcut menu.
3. Enter a user name and password for the remote site.

LOGGING OUT OF A REMOTE SITE

Logging out of the local or a remote HVR does not disconnect you from that system. Logging out will return you to the Guest account. To disconnect from a remote server, refer to [Disconnecting from a Remote Site](#) on page 19. You can only log out of one server at a time. If you are logged into multiple servers, you must log out of each server individually. You can also log out of a local or remote HVR by right-clicking its site name in the Site Tree, and then selecting User Log-out from the shortcut menu.

To log out of a local or remote HVR site:


- From the DX8100 menu bar, choose File > User Log-out.

Working with an External JBOD Device

WARNING: The DX8100 includes the external JBOD drives as part of the Pelco database (PDB). If you manually back up video data to the JBOD device, the backed up data will be overwritten.

For information about configuring and connecting an external JBOD device to the DX8100, refer to the DX8100 Installation manual.

VERIFYING AVAILABLE JBOD DRIVES

1. Click the Search button . The HVR switches to the Search mode.
2. Click the Export Button . The Export Video dialog box opens (refer to Figure 2).
3. Verify that the JBOD drive is displayed in the Device list.

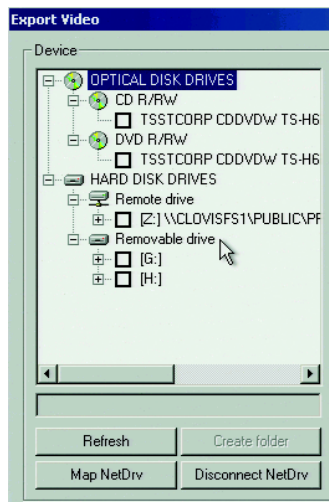


Figure 2. Export Video Dialog Box

Working with Dual Monitors

DX8100 version 1.2 and later units include a standard dual display card that provides additional viewing of up to 72 video channels simultaneously.

- **VGA output:** This feature allows you to display video from selected cameras on the extended monitor, while at the same time displaying video from selected cameras on the primary monitor. The primary monitor remains available for other tasks, such as viewing and controlling PTZ cameras and monitoring video from cameras displayed on the extended monitor. Up to 36 cameras can be displayed on each monitor. Video from any connected server can be displayed on the monitors.
- **Composite output:** The dual display card provides a composite video BNC output that allows video to be displayed on a composite monitor. The monitor can be located up to 1,500 feet (457 meters) away from the server.

NOTE: If you upgraded your DX8100 from version 1.1 to 1.2, the dual display feature is supported; the dual display card is supported for DX8100 version 1.2 and later.

INSTALLING THE DUAL DISPLAY CARD

1. Install the dual display card. For information about installing the card, refer to the DX8100 dual display card Installation manual.
2. Once the display card is installed, refer to [Configuring the Dual Display Card](#).

CONFIGURING THE DUAL DISPLAY CARD

To configure the DX8100 to display video on the extended monitor:

NOTE: After you enable the extended monitor for use with the dual display card, you must restart the DX8100 to enable the overlay feature on both monitors.

1. From the DX8100 menu bar, choose File > Exit. The “Shut down” dialog box opens.
2. Click “Exit to Windows.”
3. Click OK.
The “Log On to Windows” dialog box opens.
4. Enter the Windows password and then click OK. The system logs you into the operating system.
5. Go to Start > Settings > Control Panel, and then double-click the Display icon. The Display Properties dialog box opens.
6. Click the Settings tab.
7. To enable the extended monitor, do the following:
 - a. On the Settings tab, click the monitor icon that represents the extended monitor you want to use in addition to your primary monitor.
 - b. Click “Extend my Windows desktop onto this monitor.”
 - c. In the “Color quality” area, select Highest (32 bit).
NOTE: If the color mode is set to Medium (16 bit), video will not be displayed on the extended monitor.
 - d. In the Screen resolution area, set the resolution to match the resolution set for the primary monitor.
 - e. By default, the extended monitor’s icon is located to the right of the primary monitor’s icon. Do nothing to accept the default location or left-click and drag the icon to the desired location.
8. Click OK.
9. Restart the DX8100. The Pelco slash screen is displayed on the extended monitor.

For information about mapping channels, refer to [Mapping Channels on the Extended Monitor](#) on page 34.

Understanding the DX8100 Application Window

This section describes the DX8100 application window and its operation. The application window is the central control center where you can access to the DX8100 features and functions.

- View both live and recorded video
- Exit to the Windows environment
- Access DX8100 setup features
- Control camera PTZ functions
- Select cameras for viewing and recording
- Specify playback date and time
- Access playback controls

This section includes the following topics:

- [Description of the DX8100 Main Window](#)
- [Switching Between Standard and Extended Panel Views](#) on page 30
- [Working with the Site tree](#) on page 37

DESCRIPTION OF THE DX8100 MAIN WINDOW

The application window is displayed after the DX8100 starts. The main window provides access to both live and recorded video. The DX8100 displays an hour glass when a task requires a longer time to complete.

This section describes the DX8100 main window and includes the following topics:

- [DX8100 Menu Bar](#) on page 25
- [DX8100 Toolbar](#) on page 28
- [Displaying the DX8100 Window from a Page](#) on page 29
- [Description of Operating Modes](#) on page 29
- [Switching Between Standard and Extended Panel Views](#) on page 30

Figure 3 shows the parts of the DX8100 main window.

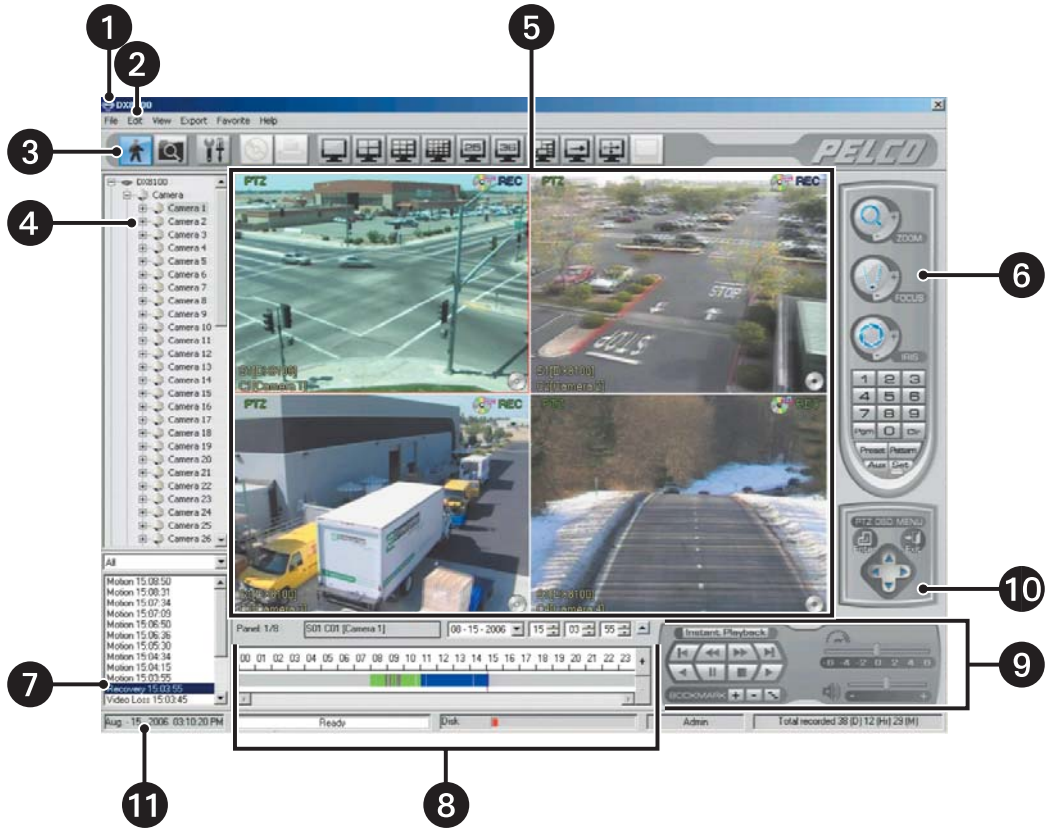


Figure 3. DX8100 HVR Main Window

Table A describes the parts of the DX8100 application window.

Table A. Parts of the DX8100 Application Window

Item	Part	Description
1	Title Bar	Displays the DX8100 application title.
2	Menu Bar	Provides access to drop-down menus.
3	Toolbar	Provides access to display, setup, export, and search tools.
4	Site Tree	Displays top-down, hierarchical management of DX8100 resources, such as servers, cameras, alarms, and relays.
5	View Panels	<p>Display live and playback video from attached cameras. A view panel consists of view panes.</p> <ul style="list-style-type: none"> • View pane: A view pane is a division of a view panel. Each view pane contains only a single camera channel. Up to 36 view panes can fit in a single view panel. • View panel: A view panel is made up of the entire DX8100 viewing area. View panels are divided into multiple panes. A panel can display from one to 36 individual cameras. <p>For additional information about view panels and panes, refer to Switching Between Standard and Extended Panel Views on page 30.</p>
6	PTZ Control Panel	Allows users with access rights to operate camera lens control features and to program PTZ presets, patterns, auxiliary outputs, and tours. This panel is hidden in the extended view mode. In this case, select the standard view mode to display the PTZ control panel. For information about how to select view modes, refer to Switching Between Standard and Extended Panel Views on page 30.
7	Index View Panel	Allows users with access rights to search motion and alarm events within a 24-hour period specified in the playback timeline. By default, this panel is not displayed.
8	Playback Timeline	Displays a 24-hour timeline marked with color-coded video events. Allows users with Standard User access rights to select a date and time for playback. This panel is hidden in the extended view mode. In this case, select the standard view mode to display the playback timeline. For information about how to select view modes, refer to Switching Between Standard and Extended Panel Views on page 30.
9	Playback Control Panel	Provides buttons for users with access rights to control video playback. Includes forward and reverse playback and still image. It also provides controls for playback speed and volume. This panel is hidden in the extended view mode. In this case, select the standard view mode to display the playback timeline control panel. For information about how to select view modes, refer to Switching Between Standard and Extended Panel Views on page 30.
10	PTZ OSD Menu or Digital Zoom Control	<p>This control provides two functions depending on whether the DX8100 is operating in Live view or playback mode:</p> <ul style="list-style-type: none"> • Live view mode: Provides whether the DX8100 is operating in Live view or playback mode: users with access rights to operate PTZ OSD features. For information about using the PTZ OSD menu controls, refer to Using the PTZ OSD Menu Control on page 58. This panel is hidden in the extended view mode. In this case, select the standard view mode to display the playback zoom control. For information about how to select view modes, refer to Switching Between Standard and Extended Panel Views on page 30. • Playback mode: Provides users with access rights to operate digital zoom features. This panel is hidden in the extended view mode. In this case, select the standard view mode to display the playback zoom control. For information about how to select view modes, refer to Switching Between Standard and Extended Panel Views on page 30.
11	Status Bar	<p>Displays the current date and time, recorder processing status, disk status indicator, user name (of the current logged in user), and total amount of recorded video.</p> <p>NOTE: As the storage array of the DX8100 fills beyond its capacity, video is deleted in a first-in, first-out (FIFO) fashion. The disk status indicator on the status bar shows the amount of disk space used by recorded video. The red indicator marks the current recording position of the disk array, blue indicators mark parts of the array that are storing previously recorded video, and clear indicates that no video has been recorded in that area of the array.</p>

DX8100 MENU BAR

This section describes the DX8100 menu bar commands and includes the following topics:

- [File Menu](#) on page 25
- [Edit Menu](#) on page 25
- [View Menu](#) on page 26
- [Export Menu](#) on page 27
- [Favorite Menu](#) on page 27
- [Help Menu](#) on page 28

File Menu

Table B describes the DX8100 File menu commands.

Table B. File Menu Commands

Command	Description
User Log-in	Opens the User Log-In dialog box for entering the user name and password to log in to the DX8100.
User Log-out	Immediately logs the current user out of the DX8100. The system returns to the default mode.
Software Upgrade	Opens the Select Upgrade Package dialog box for selecting the source from which to access files to upgrade the DX8100 software. This command is available only when you log in to the DX81000 as Administrator.
Password Recovery	Opens the Password Recovery dialog box for entering the password provided by Pelco Product Support. For more information, refer to Recovering a Password on page 252. For information about recovering a password, contact Pelco Product Support include contact information or a link to the contact information elsewhere in the document.
Unplug/Eject Hardware	Opens the Unplug or Eject Hardware dialog box for a specific device.
Multiple Configuration Upload	Opens the Multi-configuration Upload dialog, displaying a list of DX8100 sites and groups. Use this dialog box to select specific DX8100 sites, to configure the file to upload to those sites, and to initiate the upload process.
Exit	<p>Opens the Shut down dialog box for selecting one of the following actions (requires a specific level of user permission):</p> <ul style="list-style-type: none"> • Shut down: Shuts down the DX8100 machine. You must have Power User or Administrator access to shut down the DX8100 machine. For more information, refer to Shutting Down the DX8100 on page 16. • Restart: Restarts the DX8100 application. You must have Administrator or Power user access to restart the DX8100 application. For more information, refer to User Setup on page 208. • Exit to Windows mode: You must have Administrator user access to exit the DX8100 application to the Windows operating system. For more information, refer to Exiting to the Windows Operating System on page 19.

Edit Menu

Table C describes the DX8100 Edit menu commands.

Table C. Edit Menu Commands

Command	Description
Export Setup	Opens the DX8100 Setup File Export dialog box for exporting the DX8100 system configuration settings to a specific file name and location. The Export feature also allows you to export the DX8100 settings to a specified location for later retrieval. For more information, refer to Using the Edit Menu to Perform an Export on page 220.
Import Setup	Opens the DX8100 Setup File Import dialog box for importing a DX8100 system configuration file. For more information, refer to Using the Edit Menu to Perform an Export on page 220.

View Menu

Table D describes the DX8100 View menu commands.

Table D. View Menu Commands (1 of 2)

Command	Description
OSD	<p>Opens a submenu with the following choices:</p> <ul style="list-style-type: none"> • Site name: A global setting that, when selected, displays a site's name in the respective view pane. • Camera name: A global setting that, when selected, displays a camera's name in the respective view pane. • Video recording: A global setting that, when selected, displays an icon in the upper right corner of the pane, and enables video recording for the cameras assigned to a view pane. • Audio recording: A global setting that, when selected, enables audio recording for the cameras assigned to a view pane. The DX8100 compresses audio data to save space. In this case, recorded audio may not be of the same quality as live audio. • PTZ: A global setting that, when selected, displays PTZ (if active) for the cameras assigned to a view pane. • Instant recording: A global setting that, when selected, displays the instant recording icon for the cameras assigned to a view pane. • POS: A global setting that, when selected, displays POS (if active) for the cameras assigned to a view pane. • Select all: Selects all of the OSD options. • Background color: Opens a submenu with the following choices: <ul style="list-style-type: none"> – Set color: Opens the Colors palette for selecting or creating a background color. – Disable background: Disables a background color from being shown.
Log	<p>Opens a submenu with the following choices:</p> <ul style="list-style-type: none"> • System On/Off • System failure • Export • Backup • Network connection • Login ID list with time • Video loss
Resolution	<p>Opens a submenu with the following choices:</p> <ul style="list-style-type: none"> • 1024 x 768 • 1280 x 1024
Cycle Views Setup	<p>Opens a submenu with the following choices:</p> <ul style="list-style-type: none"> • Dwell time change: Opens a submenu with the following choices for assigning permission to a user group, allowing the selected user group to change the dwell time: <ul style="list-style-type: none"> – Restricted User Group – Standard User Group – Power User Group • Dwell time: Opens a submenu of dwell times with the following choices: <ul style="list-style-type: none"> – 2 Sec. – 5 Sec. – 10 Sec. – 30 Sec. – 60 Sec.
Extended View	Enlarges the video image displayed in the view pane.
Index View	Opens the Event Index pane.

Table D. View Menu Commands (2 of 2)

Command	Description
System Health View	Opens a submenu with the following choices: <ul style="list-style-type: none">• Status View• Log View
Display Deinterlaced Image	Selects the deinterlace mode for enhancing the display of video images.

Export Menu

Table E describes the DX8100 Export menu commands.

Table E. Export Menu Commands

Command	Description
Interrupt Export	Immediately concludes an export process. If the Interrupt Export command is executed before the scheduled backup time, the system will save the backed up data until the time the Interrupt Export command is executed.
Cancel Export	Immediately cancels the export process and no backed data is retained.

Favorite Menu

Table F describes the DX8100 Menu commands.

Table F. Favorite Menu Commands

Command	Description
Add to Favorites	Opens the Add to Favorites dialog box, where you can create and store a favorite to a specified folder.
Organize Favorites	Opens the Organize Favorites dialog box, where you can do the following: <ul style="list-style-type: none">• Create a new folder.• Rename the folders.• Move favorites to a specific folder.• Delete a favorite or favorite folder.

Help Menu

Table G describes the DX8100 Help menu commands.

Table G. DX8100 Help Menu Commands

Command	Description
DX8100 Help	Opens the DX8100 Help system.
About	Provides model and version information for the DX8100 application.

DX8100 TOOLBAR

This section describes the DX8100 toolbar. Table H describes the DX8100 toolbar buttons.

Table H. DX8100 Toolbar Buttons (1 of 2)

















Button	Name	Description
	Live	Enters the display mode and opens the DX8100 main window, where live and playback video is displayed: <ul style="list-style-type: none"> • Live mode: Allows all users to view live video. • Playback mode: Allows users with playback access rights (Standard User by default) and higher to play back recorded video.
	Search	Enters the search mode and opens the Search window, providing access to search features. Users with Standard User access and higher are allowed to search video data using specific criteria.
	Setup	Enters the setup mode and opens the Setup dialog box to the Camera page (default view), and allows access to the other pages. Users with Power User access and higher are allowed to set up the features and options for the HVR.
	Export	Enters the export mode, where you configure the export options and parameters.
	Print	Enters the print mode, where you print the selected video image.
	Single Division	Displays one camera.
	4 Division	Displays four cameras simultaneously (quad display).
	9 Division	Displays nine cameras simultaneously.
	16 Division	Displays 16 cameras simultaneously.
	25 Division	Displays 25 images. Each HVR accommodates up to 32 cameras. You can display images from the local and remote DX8100 HVRs. Use the expansion unit to increase DX8108 from 8 to 24 camera inputs or the DX8116 from 16 to 32 camera inputs.
	36 Division	Displays 36 images. Each HVR accommodates up to 32 cameras. You can display images from the local and remote DX8100 HVRs.
	6, 10, 13 Division	Displays images as follows: <ul style="list-style-type: none"> • 6 Division (1+5): One larger and five smaller images • 10 Division (2+8): Two larger and eight smaller images • 13 Division (1+12): One larger and 12 smaller images

Table H. DX8100 Toolbar Buttons (2 of 2)

Button	Name	Description
	Cycle Views	Turns window cycling on and off. Automatically cycles through each view panel ensuring all cameras get displayed. Group permission to change the dwell time is assigned by the Administrator to the following groups: Restricted User Group, Standard User Group, and Power User Group. For information about cycle views setup, refer to Automatically Cycling Through View Panels on page 33.
	Full Screen	Selects a full screen view. The application window is expanded to occupy the entire monitor screen. Click the right mouse button to exit full-screen view. The full screen view is not available in the Thumbnail, POS, and Pixel search mode.
	External Monitor	Opens the external monitor drop-down menu. For more information, refer to External Monitor Setup on page 228.

DISPLAYING THE DX8100 WINDOW FROM A PAGE

To display the DX8100 main window from a Setup dialog page:




- On the DX8100 toolbar, click the [Live button](#)  .

DESCRIPTION OF OPERATING MODES

The DX8100 Series HVR has four primary operating modes: Live, Playback, Search, and Setup. Each operating mode is accessed by clicking its corresponding button on the toolbar.

Table I describes the DX8100 operating modes.

Table I. Operating Modes


Icon	Mode	Description
	Live	Enters the display mode and opens the DX8100 main window, where live and playback video is displayed: <ul style="list-style-type: none"> Live mode: Allows all users to view live video. Playback mode: Allows users with playback access rights to play back recorded video.
	Search	Enters the search mode and opens the Search window, providing access to search features. Allows users with playback access rights to search video data using specific criteria.
	Setup	Enters the setup mode and opens the Setup dialog box to the Camera setup page (default view), and allows access to the other setup pages. Users with Power User access and higher are allowed to set up the features and options for the HVR.

DISPLAYING VIDEO IN FULL SCREEN VIEW

The DX8100 allows full screen viewing of video data in the live, playback, and index search mode, providing more screen area to display video.

Displaying Live Video in Full Screen View

To display live video in full window view:


- Select the live video mode. For information about working in the playback mode, refer to [Working in Live View Mode](#) on page 42.
- Select a window division.
- On the DX8100 toolbar, click the Full Screen button  . Live video is displayed in full screen view.

To display the DX8100 main window from the full screen view:

- Right click in the DX8100 window.

Displaying Playback Video in Full Screen View

To display playback video in full screen view:



1. Select the playback mode. For information about working in the playback mode, refer to [Working in Playback Mode](#) on page 68.
2. Select a window division.
3. On the DX8100 toolbar, click the Full Screen button . Playback video is displayed in full screen view.

To display the DX8100 main window from the full screen view:

- Right click in the DX8100 window.

Displaying Index Search Video in Full Screen View

To display index search video in full screen view:

1. Select the index search mode. For information about working in the index search mode, refer to [Working in Playback Mode](#) on page 68.
2. Click the Reverse playback button  to begin viewing video.
3. On the DX8100 toolbar, click the Full Screen button . Index search video is displayed in full screen view.

To display the DX8100 main window from the full screen view:

- Right click in the DX8100 window.

SWITCHING BETWEEN STANDARD AND EXTENDED PANEL VIEWS

The DX8100 features a viewing area that can be expanded to fill a larger portion of the main window. Extended view expands the viewable panel containing camera panes but hides the timeline, PTZ, digital zoom, and playback controls. To use the timeline, PTZ, digital zoom, and playback controls, you must take the DX8100 out of extended view.

To switch back and forth between standard and extended view:

- From the DX8100 menu bar, choose View > Extended View.

UNDERSTANDING VIEW PANES AND PANELS

This section describes the DX8100 viewing area. The viewing area is organized into panes and panels, much like a window contains panes. Video from each camera is displayed in its own viewing pane.

This section includes the following topics:

- [Working with View Panes and Panels](#)
- [Configuring View Panels](#) on page 31
- [Navigating View Panels](#) on page 31

WORKING WITH VIEW PANES AND PANELS

The DX8100 displays video from each camera in its own viewing pane.

- **View pane:** A view pane is a division of a view panel. Each view pane contains only a single camera channel. Up to 36 view panes can fit in a single view panel.
- **View panel:** A view panel is made up of the entire DX8100 viewing area. View panels are divided into multiple panes. Each panel can display from one to 36 individual cameras.

Figure 4 shows how the DX8100 viewing area is structured.



Figure 4. View Panes and Panel for 4-Division Display

Table J describes the view pane and panel as shown in Figure 4.


Table J. View Panes Panel

Item	Description
1	Shows a view pane for a four division display.
2	Shows the view panel, which contains view panes.

CONFIGURING VIEW PANELS

The DX8100 can display up to 36 cameras simultaneously in a single panel.

To select a view panel division:

1. On the DX8100 toolbar, click the Live button  .
2. On the DX8100 toolbar, click a view panel division button.

For information about the view division buttons, refer to [DX8100 Toolbar](#) on page 28.

NAVIGATING VIEW PANELS

This section describes how to move between the DX8100 view panes and panels. This section includes the following topics:

- [Navigating Between View Panels](#) on page 32
- [Expanding and Collapsing View Panes](#) on page 33
- [Manually Cycling Through Hidden View Panels](#) on page 33
- [Automatically Cycling Through View Panels](#) on page 33

Navigating Between View Panels

The DX8100 allows you to monitor up to 36 channels: each channel is assigned to one pane within the view panel. If the 36-division display format is selected, all 36 panes occupy one panel. However, for single, 4-division, 9-division, 16-division, and 25-division display formats, the DX8100 displays the panes in multiple panels. In this case, to view all of the panes, you must cycle through multiple panels to display hidden panes.

- **Channel:** As pertains to video, one DX8100 camera port (input). The term channel is sometimes used interchangeably with camera.
- **Camera:** One external video device, such as a Spectra III™, that provides input video to the DX8100 HVR.

For example, if you select the single-division display format, one channel (video pane) fills the entire panel.

- The pane and panel represent the same amount of viewing area.
- In this case, there will be an additional 31 hidden panels (one pane equals one panel) through which to cycle.

Similarly, if you select the 4-division display format:

- Four panes (one camera/channel per pane) are displayed in the panel.
- In this case, 7 hidden panels (four cameras/channels per panel, or $4 \times 7 = 28$ panels), remain to be displayed.

Figure 5 shows how the DX8100 cycles through view panels, depending on the display format.

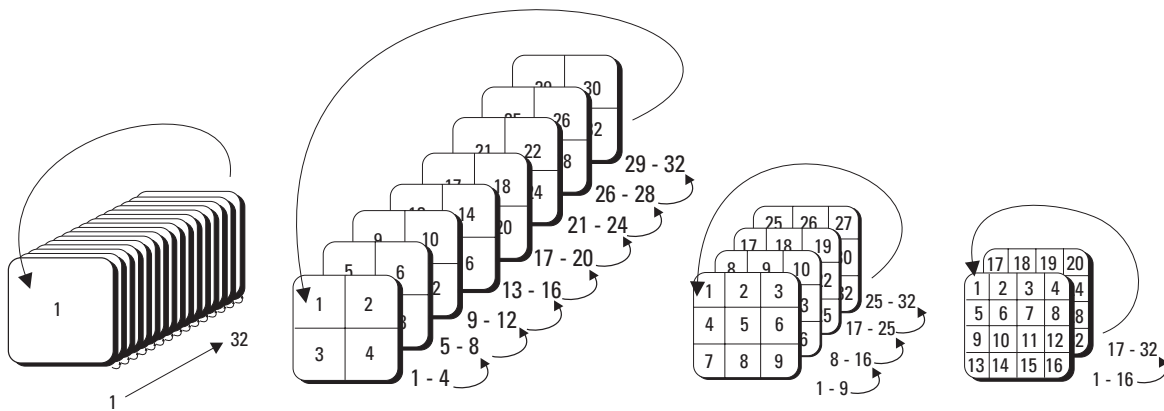


Figure 5. Example of Single, 4, 9, and 16 Division View Panels

Table K describes how the DX8100 view panes and panels are organized.

Table K. How View Panels are Organized

Display Type	Grouping	Number of View Panes	Number of View Panels
Single	1/32	1	32
4 Division	1/8	4	8
9 Division	1/4	9	4
16 Division	1/2	16	2
25 Division	1/2	25	2
36 Division	1/1	36	1
6, 10, 13 Division:			
• 1+5 Division	1/6	6	6
• 2+8 Division	1/4	10	4
• 1+12 Division	1/4	13	4

Pressing one of the view panel division buttons sets the number of visible channels displayed in the panel. Figure 6 shows the view panel identifier.

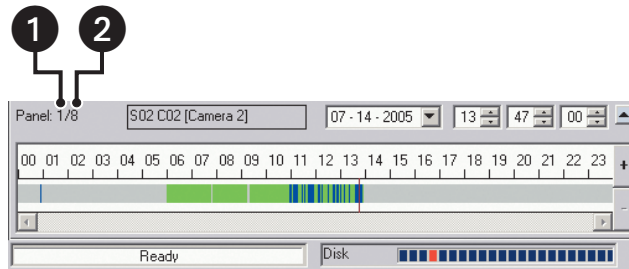


Figure 6. View Panel Identifier

Table L describes how the DX8100 view panes and panels shown in Figure 6 are organized.

Table L. View Panes and Panel

Item	Description
1	Indicates the panel number being viewed.
2	Indicates the total number of panel pages available.

Expanding and Collapsing View Panes

To expand a view pane to fill the entire panel:

- Double-click a view pane.
The view fills the entire view panel.

To collapse a view pane:

- Double-click the expanded view pane.
The view pane returns to its default size.

Manually Cycling Through Hidden View Panels

To manually cycle through hidden view panels:

- On the DX8100 toolbar, click one of the [panel](#) division buttons.
The view sequences through the view panels.

For example, when you repeatedly click a 4 Division display format button , the DX8100 cycles through each of the eight available view panels.

Automatically Cycling Through View Panels


The DX8100 provides an automatic cycle feature that (when selected) automatically cycles through each view panel, ensuring all cameras get displayed. Group permission to change the dwell time is assigned by the Administrator to the following groups: Restricted User Group, Standard User Group, and Power User Group.

This section describes how to configure the DX8100 to automatically cycle through camera views and includes the following sections:

- [Starting an Automatic Cycle View Mode](#) on page 34
- [Stopping an Automatic Cycle View Sequence](#) on page 34
- [Selecting User Groups to Set the Cycle View Dwell Time](#) on page 34
- [Selecting the Cycle View Dwell Time](#) on page 34

Starting an Automatic Cycle View Mode


To start the automatic cycle view mode:

- On the DX8100 toolbar, click the Cycle Views button .

The Cycle Views icon turns blue, indicating that the DX8100 is in the automatic cycle view mode. The system will cycle through each panel, displaying each panel for the configured cycle view dwell time.

Stopping an Automatic Cycle View Sequence

To stop the automatic cycle view mode:


- On the DX8100 toolbar, click the Cycle Views button .

The DX8100 stops the automatic cycle view mode.

Selecting User Groups to Set the Cycle View Dwell Time


The DX8100 allows the Administrator to control which user group can change the cycle view dwell time. In this case, anyone that belongs to a selected user group can change the cycle view dwell time.

To select a user group to have permission to change the cycle view dwell time:

1. On the DX8100 toolbar, click the Live button .
2. From the DX8100 menu bar, choose View > Cycle Views Setup > Dwell time change.
3. From the Dwell time change submenu, choose a user group.

Selecting the Cycle View Dwell Time

To configure the cycle period:

1. On the DX8100 toolbar, click the Live button .
2. From the DX8100 menu bar, choose View > Cycle Views Setup > Dwell time.
3. From the Dwell time submenu, choose a time period.

MAPPING CHANNELS ON THE EXTENDED MONITOR

The DX8100 HVR version 1.2 and later units include a standard dual display card. By default, the DX8100 is set up to display video on the extended monitor connected to the VGA connector on the dual display card. Alternately, you can configure the dual display card to display video on a composite monitor connected to the BNC connector on the dual display card. For information about how to reconfigure the dual display card, refer to the dual display card installation manual.

The dual display card must be installed in the DX8100 and you must be logged on to the DX8100 application for the Channel Mapping icon  to be available.

The DX8100 division buttons allow you to configure multiple extended monitor views. Figure 7 shows the 9-Division view. The DX8100 supports up to nine different channel mapping views. Selected cameras from the Site Tree can be displayed on the extended monitor and can be assigned to multiple views. Each view is set up independently; removing a camera from one view does not remove it from another.

To set up channel mapping for the extended monitor (VGA or composite):

1. On the DX8100 toolbar, click the Channel Mapping button . The setup page opens to the “Channel Mapping for Extended Monitor” tab. You can also access this page from the Setup dialog box by clicking the Ext. Monitor icon.

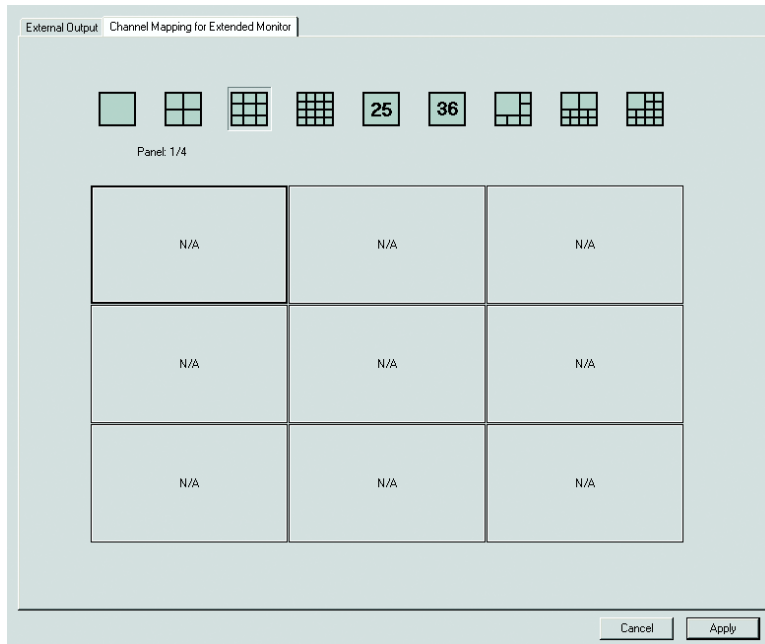


Figure 7. Channel Mapping for Extended Monitor Page

2. To assign a camera to a pane, click and drag the camera from the Site Tree onto a pane.

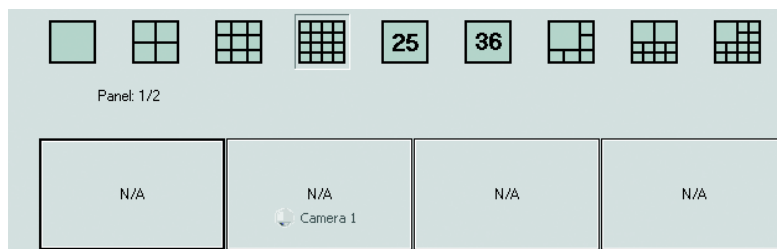


Figure 8. Assigning a Camera to a Pane

3. Repeat step 2 to assign other cameras to the view.
4. To move a camera from one pane to another pane, right-click and drag the camera to the new pane. If the new pane was empty, the N/A moves from the new pane to the old pane. If a camera was already assigned to the new pane, the two cameras switch places.
5. To remove a camera entirely from a view, right-click the camera and drag it outside of the view area.
6. Click Apply to save the channel mapping.

VIEWING VIDEO ON THE EXTENDED MONITOR

To display video on the extended monitor:

1. After you have mapped the channels, move the cursor to the extended monitor.
2. Click in the top-middle area of the extended monitor's display. The division buttons appear.



Figure 9. Displaying the Extended Monitor Division Buttons


3. Click the specific division button for which a view is configured. Video is displayed on the extended monitor.

At the extended monitor, video is only displayed if a view is already configured for the division button you selected. Otherwise, the Pelco blue logo appears.

4. Click a division button to display a different view.

MODIFYING AN EXTENDED MONITOR VIEW

To modify a display while viewing video on the extended monitor:

1. On the DX8100 toolbar, click the Channel Mapping button .
2. Click the division button for the current view displayed on the extended monitor.
3. Modify the view: add, move, and remove cameras.
4. Click Apply. The change is displayed on the extended monitor.

WORKING WITH THE SITE TREE

The Site Tree provides access to DX8100 resources, such as cameras, alarm inputs, and relay outputs. Objects can be selected by clicking the left mouse button once, and then linked by dragging and dropping the icon into a view pane or another Site Tree item. The Site Tree information reflects the current DX8100 server configuration.

Figure 10 shows the Site Tree.

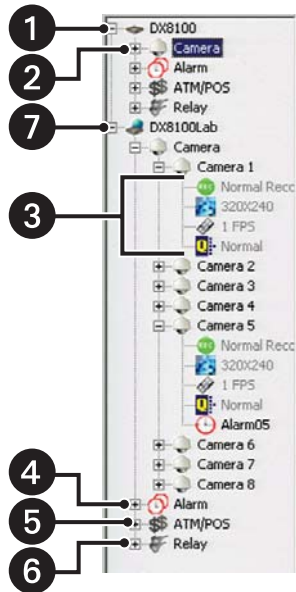








Figure 10. Site Tree Parts

Table M describes the Site Tree parts.

Table M. Site Tree Parts

Item	Part	Description
1	Name	<p>Site: Expands and collapses the DX8100 site. Right-clicking the site name opens a shortcut menu that provides the following commands:</p> <ul style="list-style-type: none"> • User Log-In: opens the User Log-In dialog box, where you enter your user name and password to log into the DX8100 site. • User Log-Out: Logs you out of the DX8100 site. • Connect • Disconnect
2		<p>Camera: Expands and collapses the Camera tree.</p>
3		<p>Channel information: Displays icons that represent the configuration of the camera:</p> <ul style="list-style-type: none"> • Recording mode • Recording resolution • Recording frame rate • Recording image quality
4		<p>Alarm: Expands and collapses the Alarm tree.</p>
5		<p>ATM/POS: Expands and collapses the ATM/POS tree.</p>
6		<p>Relay: Expands and collapses the Relay tree. Right-clicking a relay opens a shortcut menu that provides the following commands:</p> <ul style="list-style-type: none"> • ON: Allows you to turn on the relay. • OFF: Allows you to turn off the relay.
7		<p>Remote site: Expands and collapses the remote DX8100 site. Right-clicking the remote site name opens a shortcut menu that provides the following commands:</p> <ul style="list-style-type: none"> • User Log-In: Opens the User Log-In dialog box, where you enter your user name and password to log into the remote DX8100 site. • User Log-Out: Logs you out of the remote DX8100 site. • Connect: Allows you to connect to the remote site. • Disconnect: Allows you to disconnect from the remote site.

This section describes how to work with the Site Tree and includes the following topics:




- [Assigning Cameras to View Panes](#) on page 39
- [Setting Up Links](#) on page 39
- [Removing Links](#) on page 40

ASSIGNING CAMERAS TO VIEW PANES

The DX8100 provides view panes that are organized into view panels. The DX8100 includes 36 view panels that can display cameras from up to five connected HVR sites. For information about view panels, refer to [Working with View Panes and Panels](#) on page 30.

The DX8100 Series HVR supports triplex operation. Triplex operation means that the DX8100 will continuously record, even while users view simultaneous live and playback video or modify the system setup.

To assign a single camera to a view pane:

1. On the DX8100 toolbar, click the Live button .
2. In the Site Tree, click the plus sign (+) next to  to expand the tree (if necessary).
3. Do one of the following:
 - To assign a single camera to a view pane, drag the camera from the Site Tree onto a view pane.
 - To assign all cameras from a single site to the view panes, drag  onto a single view pane. (The default arrangement of cameras is Camera1, Camera2, Camera3; from left to right, top to bottom.)
4. Repeat the process in step 3 for up to 36 cameras and up to five HVR sites.

SETTING UP LINKS

The DX8100 allows you to set up links in various configurations:

- You can link multiple alarms and relays to a single camera.
- You can link a single alarm or relay to multiple cameras.
- You can link alarms and relays to cameras by dragging them onto individual camera view panes.
- You can also manually turn a relay on and off from the Site Tree.

This section describes how to set up links and includes the following sections:

- [Manually Turning On and Off a Relay](#) on page 39
- [Linking Alarm Inputs to a Camera](#) on page 39
- [Linking a Relay Output to a Camera](#) on page 40
- [Linking Relay Outputs to Alarm Inputs](#) on page 40

Manually Turning On and Off a Relay

To manually turn on and off a relay:

1. Right click a relay. The shortcut menu opens.
2. Click ON to turn on the relay; click OFF to turn off the relay.



Linking Alarm Inputs to a Camera

The DX8100 allows you to link alarm inputs to a camera.

- You can link multiple alarm inputs to a single camera.
- You can also link a single alarm input to multiple cameras.

The DX8100 allows you to link alarms to cameras by dragging them onto individual camera view panes or onto cameras listed in the Site Tree.

To link an alarm input to a camera:

1. On the DX8100 toolbar, click the Live button .
2. In the Site Tree, click the plus sign (+) next to the camera to which you want to link alarms.
3. Click the plus sign (+) next to the  to see the list of alarm inputs.
4. Drag an alarm input onto a camera pane or a camera listed in the Site Tree.



Linking a Relay Output to a Camera

The DX8100 allows you to link relays to a camera.

- You can link multiple relays a single camera.
- You can also link a single relay to multiple cameras.



The DX8100 allows you to link relays to cameras by dragging them onto individual camera view panes or onto cameras listed in the Site Tree.

To link a relay output to a camera:

1. On the DX8100 toolbar, click the Live button .
2. In the Site Tree, click the plus sign (+) next to the camera to which you want to link relays.
3. Click the plus sign (+) next to  to see the list of relay outputs.
4. Drag a relay onto a camera pane or a camera listed in the Site Tree.

Linking Relay Outputs to Alarm Inputs

To link a relay output to an alarm input:

1. On the DX8100 toolbar, click the Live button .
2. In the Site Tree, click the plus sign (+) next to  to expand the Alarm tree if needed.

Relays can also be linked to cameras and alarms on the Link settings page. For more information, refer to [Configuring Basic Relay and Alarm Settings](#) on page 132.

3. Click the plus sign (+) next to  to expand the Relay tree if needed.
4. Drag a relay output onto an alarm input in the Site Tree.


REMOVING LINKS

This section describes how to remove links and includes the following sections:

- [Removing a Linked Alarm Input from a Camera](#) on page 40
- [Removing a Linked Relay Output from a Camera](#) on page 40
- [Removing a Linked Relay Output from an Alarm Input](#) on page 41


Removing a Linked Alarm Input from a Camera

To remove an alarm link from a camera:

1. On the DX8100 toolbar, click the Live button .
2. In the Site Tree, click the plus sign (+) next to the camera from which you want to remove an alarm input.
3. Left click and drag the alarm outside the Site Tree panel, and then release the mouse button.
4. Repeat the above process for each alarm you want to remove.


Removing a Linked Relay Output from a Camera

To remove a relay link from a camera:

1. On the DX8100 toolbar, click the Live button .
2. In the Site Tree, click the plus sign (+) next to the camera from which you want to remove the relay output.
3. Left click and drag the relay outside the Site Tree panel to the DX8100 toolbar or panel (above or below the Site Tree panel), and then release the mouse button.
4. Repeat the above process for each relay you want to remove.

Removing a Linked Relay Output from an Alarm Input

To unlink a relay from an alarm:

1. On the DX8100 toolbar, click the Live button  .
2. In the Site Tree, click the plus sign (+) next to the alarm input from which you want to remove the relay output.
3. Left click and drag the relay outside the Site Tree panel, and then release the mouse button.

Repeat the above process for each relay you want to remove.

Working in Live View Mode

This section describes how to use the DX8100 to view and record live video. All users can view live video from the main window. Users with PTZ access rights (Standard User by default) and higher can operate the on-screen PTZ controls. Live video can also be displayed in full screen view. For information about displaying playback video in full screen view, refer to [Displaying Live Video in Full Screen View](#) on page 29.

The DX8100 displays live video based on one of the following scenarios:

- **Capture card displays live video:** The capture card is used to display live video on the main VGA monitor. For each channel, live video is displayed on the VGA monitor at the maximum recording rate. For example, channel 1 is set to 2CIF recording resolution and the actual record rate is 1 image per second (ips). In this case, live video for channel 1 is displayed at 15 ips. Additionally, the capture card provides a BNC analog output of the live video image. The analog image is the same as the image displayed on the VGA monitor. The DX8100 External Monitor option allows you to configure how analog video is displayed on an external monitor connected to the capture card. For information about the External Monitor feature, refer to [External Monitor Setup](#) on page 228.
- **MUX card displays real-time video:** If the DX8100 is equipped with the MUX option, real-time video from the MUX card(s) is displayed on the main VGA monitor at 30 ips. Real-time video is displayed for all the channels regardless of the recording resolution.
 - Additionally, the MUX Card provides a BNC analog output of the real-time video image. The analog image is the same as the image displayed on the VGA monitor. The analog output does not contain any display icons, labels, or text, but video is displayed on the analog monitor in the same division mode as is displayed on the VGA monitor.
 - One operational difference is that the MUX stops the display of real-time video if the search mode is active for one channel. In this case, the capture card(s) are used to display the video.

When installing the MUX card option, ensure that the MUX Card matches the capture card channel capacity as follows:

- If an 8-channel capture card is installed, the DX8108-MUX option is required. The DX8124 model HVR has two capture cards installed: an 8-channel and a 16-channel capture card. In this case, the DX8108-MUX and DX8116-MUX option are required.
- If a 16-channel capture card is installed, the DX8116-MUX option is required. The DX8132 model HVR has two 16-channel capture cards installed. In this case, two DX8116-MUX options are required.

To view live video in the DX8100 main window:

- On the DX8100 toolbar, click [Live](#).

This section includes the following topics:

- [Assigning and Removing Cameras from View Panes](#)
- [Live View On-Screen Display \(OSD\)](#) on page 46
- [Customizing the On-Screen Display \(OSD\)](#) on page 47

ASSIGNING AND REMOVING CAMERAS FROM VIEW PANES

The DX8100 allows you to quickly move cameras to and remove cameras from a view pane.

To assign a camera to the view pane:

1. Drag a camera from the Site Tree onto a view pane.
2. Repeat the process in step 1 for up to 36 cameras and up to five different DX8100 sites.

To remove a camera from a view pane:

- Right click in the view pane and drag the camera to the Site Tree pane.

For information about the DX8100 view pane and panels, refer to the following topics:

- [Working with View Panes and Panels](#) on page 30
- [Configuring View Panels](#) on page 31
- [Navigating View Panels](#) on page 31

SETTING UP FAVORITES

The DX8100 Favorites menu allows you to organize and save camera views. For example, you might want to display camera views that show the delivery gate entrance for buildings 1, 4, 7, and 12 during the hours of 06:00 to 07:30 and another camera view that displays the front lobby of buildings 1 through 16 at 08:00.

This section describes the following topics:

- [Adding a Camera View to Favorites](#)
- [Organizing Favorites in Folders](#)

ADDING A CAMERA VIEW TO FAVORITES

You can create multiple camera views to monitor various site locations. For example, you could create a folder named Day Shift for displaying camera views during normal working hours and Night Shift for displaying various camera views after work and during the night hours. For information about organizing favorites into folders, refer to [Organizing Favorites in Folders](#).

To add a camera view to favorites:

1. From the DX8100 menu bar, click Favorite > Add to Favorites.
The Add to Favorites dialog box opens.
2. Enter the camera view name in the Name box.
3. Click OK. The camera view is added to the favorites, and the Add to Favorites dialog box closes.
4. To view the new entry, from the DX8100 menu bar, click Favorites. The new entry appears in the Favorites list.

 


Figure 11. Favorites Menu List

ORGANIZING FAVORITES IN FOLDERS

As your list of favorites grows, you can keep them organized by creating folders. You can organize your camera views by site name, user name, and so forth. For example, you could create a folder named Day Shift for displaying camera views for the day shift.

Creating a Favorites Folder

To create a favorites folder:

1. From the DX8100 menu bar, click Favorite > Organize Favorites.

The Organize Favorites dialog box opens.

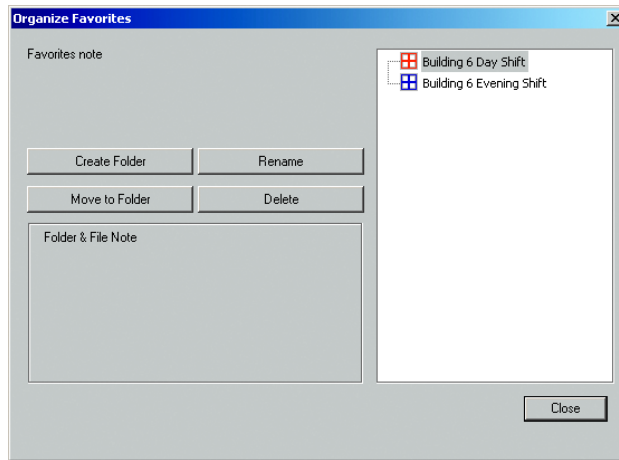


Figure 12. Organize Favorites Dialog Box

2. Click Create Folder. A new folder is added to the favorites area.
3. To name the folder, do one of the following:
 - a. If the new folder name is already selected, type the name of the folder.
or
 - b. If the new folder name is not selected:
 - (1) Click the new folder.
 - (2) Type the name of the folder.

The new folder is listed in the Favorites area of the Organize Favorites dialog box and in the Favorites menu.

Moving Existing Favorites to a Folder

To move an existing favorite to a folder:

1. Create a favorites folder (refer to [Creating a Favorites Folder](#) on page 44).
2. From the DX8100 menu bar, click Favorite > Organize Favorites.

The Organize Favorites dialog box opens. A list of the current favorites and folders is displayed in the favorites area.

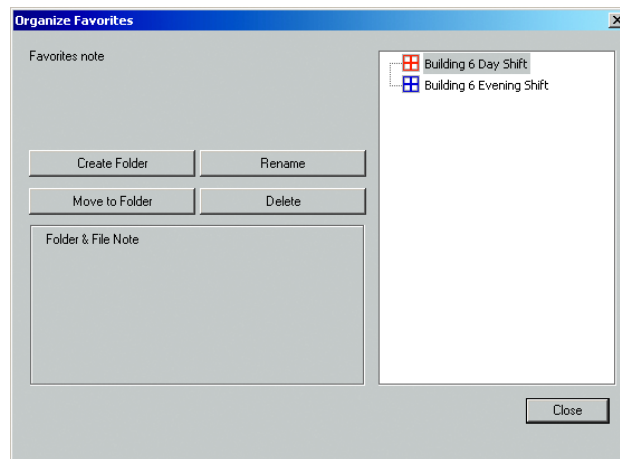


Figure 13. Organize Favorites Dialog Box and List of Favorites/Folders

3. In the favorites area, click a favorite.
4. Click Move to Folder.

The Move to Folder dialog box opens.

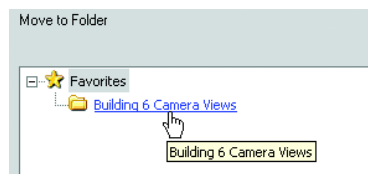


Figure 14. Move to Folders Dialog Box

5. Select a destination folder.
6. Click OK.

The favorite is moved under the destination folder.

LIVE VIEW ON-SCREEN DISPLAY (OSD)

The DX8100's OSD consists of camera and site information that is superimposed on each view pane. Each display item in the OSD can be customized for both live and playback viewing.

Figure 15 shows the parts of the Live View OSD pane.

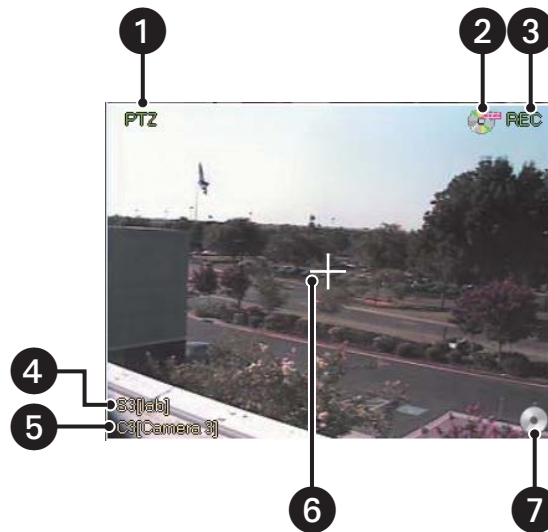



Figure 15. Live View OSD Pane

Table N describes the parts of the Live View OSD pane.

Table N. Parts of the Live View OSD Pane

Item	Part	Description
1	PTZ	Indicates that the PTZ control is enabled.
2		Indicates that audio recording is enabled. The DX8100 compresses audio data to save space. In this case, recorded audio may not be of the same quality as live audio.
3	REC	Indicates camera recording mode and status. A blinking REC indicator signifies event recording. <ul style="list-style-type: none"> Green indicates normal recording. Blue indicates motion recording. Red indicates alarm recording. Yellow indicates ATM/POS recording. Purple indicates video loss recording. Black on white background indicates instant recording.
4	Site Designator	Lists the number and name of the current site.
5	Camera Designator	Lists the number and name of the current camera.
6	On-Screen PTZ Control	Facilitates mouse control of PTZ functions. Refer to Operating the On-Screen PTZ Controls on page 50.
7	Instant Recording	Starts/stops instant recording if enabled.

CUSTOMIZING THE ON-SCREEN DISPLAY (OSD)

Users with Guest User access and higher can add and delete on-screen display items.

To customize the on-screen display:

1. From the DX8100 menu bar, choose View > OSD and then select the items you want to add to or delete from the OSD. Items include
 - Site Name
 - Camera Name
 - Video Recording
 - Audio Recording
 - PTZ
 - Instant Recording
 - POS
 - Select All (displays all items in each pane)
 - Background Color

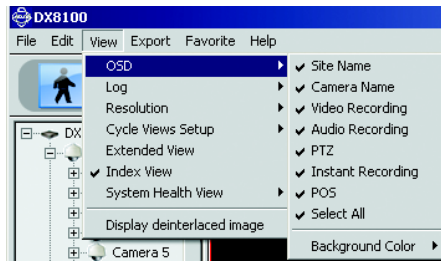


Figure 16. HVR OSD Menu Options

2. Do one of the following:
 - From the DX8100 menu bar, choose View > OSD > Background Color > Set Color to add a contrasting background field behind each OSD display item.
 - From the DX8100 menu bar, choose View > OSD > Background Color > Disable Background to remove background field.

INSTANT RECORDING

This section describes the instant recording mode. Users with Power User access and higher can configure the DX8100 for recording video both instantly and in accordance with a preset schedule. The Instant Recording mode is enabled from the Schedule page. Instant recording is activated from the main window by double-clicking the Instant Recording icon.

If the HVR is not in the normal recording mode, you can use the instant recording mode to manually start and stop a video recording session instantly. For information about adding the Instant Recording icon to the OSD, refer to [Adding Instant Recording to OSD](#) on page 48.

This section includes the following topics:

- [Enabling and Disabling Instant Recording](#)
- [Adding Instant Recording to OSD](#) on page 48
- [Starting and Stopping Instant Recording](#) on page 48

ENABLING AND DISABLING INSTANT RECORDING



This section describes how to enable and disable the instant recording mode and includes the following topics:

- [Enabling Instant Recording](#)
- [Disabling Instant Recording](#)

For more information about instant recording, refer to [Instant Recording](#) on page 47.



Enabling Instant Recording

To enable the Instant Recording mode:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Schedule button .
3. In the Camera Settings Panel, from the Instant Recording drop-down box, select Enable.

Disabling Instant Recording

To disable the Instant Recording mode:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Schedule button .
3. In the Camera Settings Panel, from the Instant Recording drop-down box, select Disable.

ADDING INSTANT RECORDING TO OSD

To add the Instant Recording icon to the OSD:

- From the DX8100 menu bar, choose View > OSD > Instant Recording.
The Instant Record icon is displayed in the lower-right corner of the view pane.

STARTING AND STOPPING INSTANT RECORDING

The Instant Recording mode must first be enabled from the Schedule page and the Instant Recording icon must be visible in the lower-right corner of the view pane. For more information about DX8100 instant recording, refer to [Instant Recording](#) on page 47. For information about OSD, refer to [Live View On-Screen Display \(OSD\)](#) on page 46.

Figure 17 shows the Record and Instant Record icons.



Figure 17. Activating Instant Recording

Table 0 describes the recording indicators.

Table 0. Recording Indicators

Item	Icon	Description
1	REC	Indicates camera recording mode and status. A blinking REC indicator signifies event recording. <ul style="list-style-type: none">• Green indicates normal recording.• Blue indicates motion recording.• Red indicates alarm recording.• Yellow indicates ATM/POS recording.• Purple indicates video loss recording.• Black on white background indicates instant recording.
2	Instant Recording	Starts/stops instant recording if enabled. Changes from silver to blue to indicate that instant recording is activated.

This section describes how to start and stop instant recording and includes the following topics:

- [Starting Instant Recording](#)
- [Stopping Instant Recording](#)

Starting Instant Recording

To start instant recording:

- Double-click the Instant Recording icon located in the lower-right corner of the view pane.
 - The Instant Recording icon changes from silver to blue, indicating that instant recording is activated.
 - If video recording is enabled, verify that REC is black and highlighted white. If video recording is not enabled, REC is not displayed or will show another recording mode color.


Stopping Instant Recording


To deactivate instant recording:

- In the view pane, double-click the Instant Recording icon.

The instant recording icon changes from blue to silver, indicating that instant recording is de-activated.

LISTENING TO LIVE AUDIO AT THE SERVER

1. On the DX8100 toolbar, click the Live button .
2. Drag a camera that is configured to record live audio from the Site Tree onto a view pane.

NOTE: Live audio recording is not supported for IP cameras.
3. On the playback control, click the Mute on/off button . The sound feature is enabled.
4. Verify that you can hear live audio from an audio monitoring device connected to the DX8100 server's audio output.

OPERATING THE ON-SCREEN PTZ CONTROLS

Users with PTZ access rights (Standard User by default) and higher can operate PTZ lens functions of cameras that support such features. PTZ functions can be controlled on the screen in Live mode using the mouse.

PTZ control is available for cameras that support PTZ functions using Pelco's P, D, or Coaxitron® protocols. It is also available for supported third-party dome cameras. For more information about configuring PTZ ports, refer to [Setting Up COM1 Port Properties](#) on page 179 and [Setting Up RS-422/RS-485 Communication Port Properties](#) on page 180.

In addition, the PTZ option must be enabled and a protocol must be assigned to the camera channel. For more information, refer to [Camera Setup](#) on page 116.

This section describes how to use the PTZ controls and includes the following topics:

- [Operating the PTZ Controls](#)
- [Adjusting the Camera Lens](#) on page 51
- [Adjusting the Camera Lens](#) on page 51
- [Adjusting the Camera Zoom](#) on page 51
- [Using Keyboard Shortcuts to Operate PTZ and Lens Functions](#) on page 52

OPERATING THE PTZ CONTROLS

To operate the on-screen PTZ controls:


1. On the DX8100 toolbar, click the Live button .
2. Select a PTZ-enabled camera from the Site Tree.
3. Place the mouse pointer in the middle of the camera's view pane. The mouse pointer will change to a black cross when on-screen PTZ control is available.



Figure 18. On-Screen PTZ Control

4. Click and hold the left mouse button, and then drag the mouse pointer in the direction you want to move the camera. The display changes to an arrow, indicating the direction of the mouse.

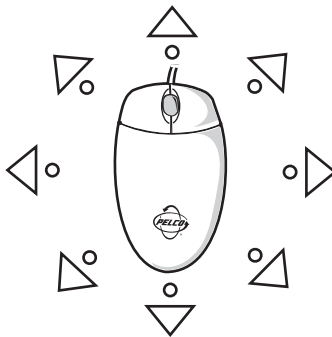


Figure 19. On-Screen PTZ Movement

5. Release the mouse button when you have repositioned the camera to the desired location.

ADJUSTING THE CAMERA LENS

The keypad is hidden in the extended view mode. In this case, select the standard view mode to display the keypad.

To switch between the standard and extended view mode:

- From the DX8100 menu bar, choose View > Extended View.

For information about changing view modes, refer to [Switching Between Standard and Extended Panel Views](#) on page 30.

To adjust camera lens features:

- Click the plus (+) or minus (-) button next to the zoom, focus, and iris function on the keypad.



Figure 20. PTZ Keypad with Camera Lens Controls

ADJUSTING THE CAMERA ZOOM

To adjust camera zoom using the mouse:

- Rotate the mouse wheel forward to zoom in and backward to zoom out.

Figure 21 shows how to operate the mouse to zoom in and out. You can also use keyboard shortcuts to operate the lens features of cameras such as Pelco's Spectra III. For more information about using keyboard shortcuts, refer to [Using Keyboard Shortcuts to Operate PTZ and Lens Functions](#) on page 52.

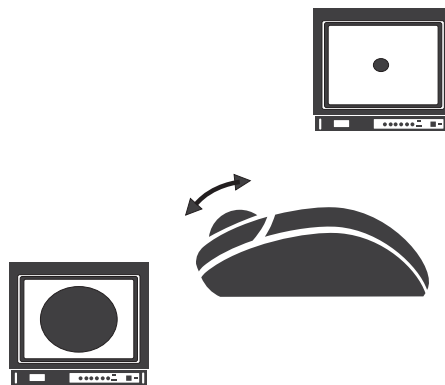


Figure 21. Mouse Wheel Zoom

USING KEYBOARD SHORTCUTS TO OPERATE PTZ AND LENS FUNCTIONS


Users with PTZ access rights (Standard User by default) and higher can use a computer keyboard to operate PTZ and lens functions of cameras that support such features. PTZ and lens functions can be controlled in Live mode using the keyboard.

Table P describes the keyboard buttons that you use to control PTZ and lens functions.

Table P. Standard Keyboard Functions for Controlling PTZ and Lens Functions

Key	Description
Insert and Delete	These keys provide the following functionality: <ul style="list-style-type: none"> • On-screen display, preset and pattern modes: Insert increases focus and Delete decreases focus, performing the same actions as the focus control on the PTZ keypad. • Remote camera programming mode: Insert and Delete perform the same actions as the PTZ keypad focus (+) and (-) buttons, navigating up and down the camera menu choices.
Home and End	These keys provide the following functionality: <ul style="list-style-type: none"> • On-screen display, preset and pattern modes: The Home key opens the iris and the End key closes the iris, performing the same actions as the PTZ keypad iris (+) and (-) buttons. • Remote camera programming mode: The Home key selects an option from the camera's on-screen menu. The End key cancels an option or exit a menu. These keys perform the same actions as the PTZ keypad iris (+) and (-) buttons.
Page Up and Page Down	These keys provide the same functionality in the on-screen display and the preset and pattern modes as the PTZ keypad zoom (+) and (-) buttons. Page Up zooms in; Page Down zooms out.
Up and Down Arrows	These keys provide the following functionality: <ul style="list-style-type: none"> • On-screen display, preset and pattern modes: The up arrow key raises the camera and the down arrow key lowers the camera. The keys perform the same actions as the mouse to move the camera. • Remote camera programming mode: The arrow keys navigate up and down the camera menu choices. The keys perform the same actions as the PTZ keypad focus (+) and (-) buttons.
Left and Right Arrows	These keys provide the same actions as the mouse for moving the camera. The left arrow key pans the camera to the left and the right arrow key pans the camera to the right.
+ and -	These keys perform similar actions as using the mouse to change the speed of camera movement. When pressed once, the plus (+) key increases the camera's pan/tilt speed; when pressed once, the minus (-) key decreases the pan/tilt speed. Each time the plus (+) key is pressed the pan/tilt speed is increased toward maximum speed; each time the minus (-) key is pressed, the pan/tilt speed is decreased toward minimum speed.

To use the keyboard (+) and (-) keys to control camera pan/tilt speed:

1. On the DX8100 toolbar, click the Live button .
2. Select a PTZ-enabled camera from the Site Tree.
3. Click the mouse pointer in the camera's view panel.
4. Press and hold the up/down and left/right arrows to pan/tilt the camera.
5. Press the plus (+) key one or more times to increase the pan/tilt speed. Press the minus (-) key one or more times to decrease the pan/tilt speed.

PTZ PRESETS

A preset is a user-defined camera position using PTZ and focus commands (the camera's auto focus option must be turned off). Only cameras that support positioning and programming using D, P, Coaxitron, or supported third-party protocols can use this feature. The DX8100 Series HVR can address up to 150 PTZ presets (1-150). Preset 95 is reserved for remote camera setup, and preset 99 is reserved for camera autoscan mode.



The PTZ controls are hidden in the extended view mode. In this case, select the standard view mode to display the PTZ controls.

To switch between the standard and extended view mode:

- From the DX8100 menu bar, choose View > Extended View.

For information about changing view modes, refer to [Switching Between Standard and Extended Panel Views](#) on page 30.

The following PTZ operating guidelines must be observed:



- To program or clear presets, preset tours, and patterns, the  button must be engaged.
- To activate presets, tours, and patterns, the  button must be disengaged.

This section describes how to program, activate, and clear presets and includes the following topics:



- [Programming a Preset](#)
- [Activating a Preset](#) on page 54
- [Clearing a Preset](#) on page 55

PROGRAMMING A PRESET

This section describes how to program a preset. The following PTZ operating guidelines apply:

- Clicking the  button places DX8100 in PTZ programming mode.
- While in PTZ programming mode, multiple presets can be programmed until the  button is pressed again.

To program a PTZ preset:

1. On the DX8100 toolbar, click the Live button .
2. Drag a camera from the Site Tree onto a view panel.
3. On the PTZ keypad, click the Set button .
4. Using the on-screen PTZ controls and PTZ keypad, move the camera to the desired position and adjust the zoom setting.

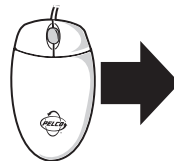
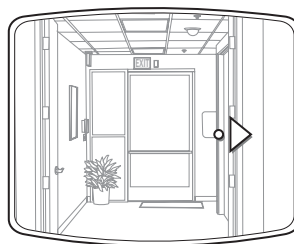




Figure 22. Creating a Preset

5. Using the PTZ keypad, select a number for the new preset (for example, select 1).
6. Click the Preset button  to store the preset in the selected memory location.
7. Repeat steps 4-6 for each preset you want to program.
8. Click the Set button  again to exit programming mode.

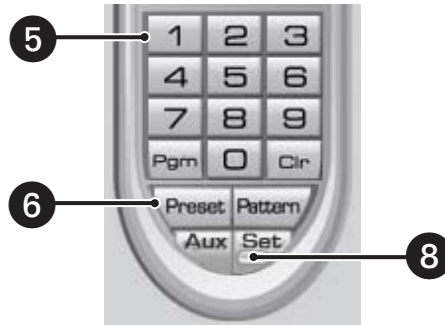



Figure 23. Programming a Preset

ACTIVATING A PRESET

Double- and triple-digit presets can be set or activated by pressing the first digit and then the second digit sequentially. For example, preset 20 can be selected by clicking the number 2 and then the 0 (zero) on the PTZ keypad.

To activate a preset:

1. On the PTZ keypad, click a preset number (1-150) on the keypad.
2. Click the Preset button  to activate preset. The camera repositions to the new preset.

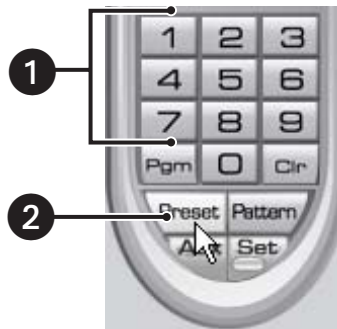

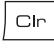



Figure 24. Activating a Preset

CLEARING A PRESET

To clear a preset:

1. On the PTZ keypad, click the Set button  to enter programming mode.
2. Click the number of the preset you want to clear from the PTZ keypad.
3. Click the Clr button .
4. Repeat steps 2 and 3 to clear multiple presets.
5. Click the Set button  to exit programming mode.

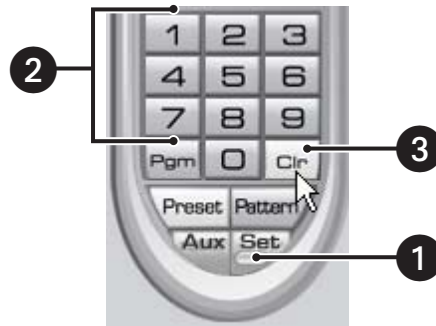


Figure 25. Clearing a Preset

PTZ PATTERNS

A pattern is a user-defined, viewable camera path with a definite beginning and end. Patterns are made up of a sequence of standard pan, tilt and lens commands. Patterns are stored in the internal memory of the PTZ device, such as a Spectra® dome, that is connected to the DX8100. The Spectra III supports one pattern and the Spectra III SE supports up to four unique PTZ patterns. Depending on the type and configuration of the PTZ device, the DX8100 can address up to four unique PTZ patterns. Once defined, a pattern can be activated with a series of on-screen commands. A pattern will run continuously until it is deactivated.

Only PTZ-enabled cameras that support pattern programming through D, P, Coaxitron, or supported third-party protocols can use this feature.

The PTZ controls are hidden in the extended view mode. In this case, select the standard view mode to display the PTZ controls.

To switch between the standard and extended view mode:

- From the DX8100 menu bar, choose View > Extended View.

This section describes how to program, activate, and clear patterns, and access the programming features of remote cameras. This section includes the following topics:




- [Programming a Pattern](#)
- [Activating a Pattern](#) on page 57
- [Clearing a Pattern](#) on page 57
- [Accessing Programming Features of Remote Cameras](#) on page 58

PROGRAMMING A PATTERN

This section describes how to program a pattern. Certain PTZ devices, such as Pelco's Spectra series domes, will display an on-screen message stating the amount of remaining memory available for pattern programming.

Start Programming a Pattern

To program a pattern:

1. On the PTZ keypad toolbar, click the Live button .
2. Drag a camera from the Site Tree onto a view panel.
3. On the PTZ keypad, click the Set button  to enter programming mode.
4. Using the PTZ keypad, select a number for the pattern (1-4).
5. Click the Pattern button .
6. Move the camera through a series of movements using the on-screen PTZ and focus controls.

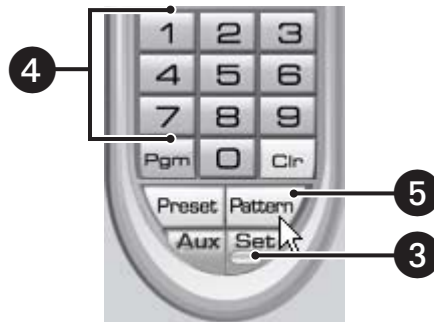




Figure 26. Programming a Pattern

Stop Programming a Pattern

To stop programming a pattern:

1. On the PTZ keypad, click the Pattern button .
2. Click the Set button .

ACTIVATING A PATTERN

When activated, a pattern will repeat indefinitely until it is cleared, another pattern is set, or the on-screen PTZ control is moved.

To activate a pattern:

1. On the PTZ keypad, click a pattern number (1-4) on the keypad.
2. Click the Pattern button .

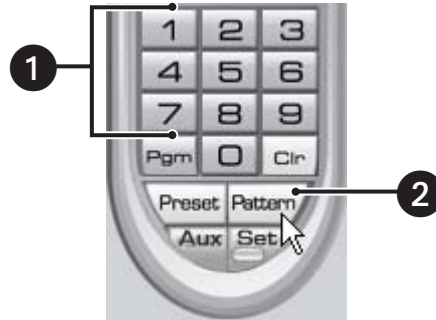


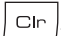




Figure 27. Activating a Pattern

CLEARING A PATTERN

To clear a pattern:

1. On the PTZ keypad, click Set button  to enter programming mode.
2. Select a pattern number (1-4) on the keypad.
3. Click the Pattern button .
4. Click the Clr button .
5. Click the Pattern  again.
6. Click the Set button  again to exit programming mode.

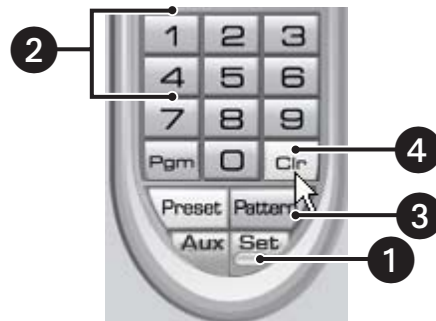


Figure 28. Clearing a Pattern

ACCESSING PROGRAMMING FEATURES OF REMOTE CAMERAS

You can use the PTZ function to program features of remote cameras, such as Pelco's Spectra or Esprit®. Only cameras that support remote programming through D, P, Coaxitron, or supported third-party protocols can use this feature.

The DX8100 allows you to navigate the remote camera menu system using any of the following:

- PTZ OSD Menu controls. For information about using the PTZ OSD Menu controls, refer to [Using the PTZ OSD Menu Control](#) on page 58.
- Keypad controls. For information about using the keypad controls, refer to [Accessing a Remote Camera Programming Menu](#) on page 59.
- Keyboard keys. For information about using the keyboard keys, refer to [Using Keyboard Shortcuts to Operate PTZ and Lens Functions](#) on page 52.

The PTZ controls are hidden in the extended view mode. In this case, select the standard view mode to display the PTZ controls.

To switch between the standard and extended view mode:

- From the DX8100 menu bar, choose View > Extended View.

This section describes how to access the programming features of remote cameras and includes the following topics:

- [Using the PTZ OSD Menu Control](#)
- [Accessing a Remote Camera Programming Menu](#) on page 59

Using the PTZ OSD Menu Control

The DX8100 allows you to navigate the menu system of remote cameras using the PTZ OSD Menu control. The PTZ OSD Menu control is available when the DX8100 is in Live View mode. The PTZ controls are hidden in the extended view mode. In this case, select the standard view mode to display the PTZ controls.

To switch between the standard and extended view mode:

- From the DX8100 menu bar, choose View > Extended View.

Alternative methods to navigate the remote camera menu system are as follows:

- Keypad controls. For information about using the keypad controls, refer to [Accessing a Remote Camera Programming Menu](#) on page 59.
- Keyboard keys. For information about using the keyboard keys, refer to [Using Keyboard Shortcuts to Operate PTZ and Lens Functions](#) on page 52.

Figure 29 shows the parts of the PTZ OSD Menu control.

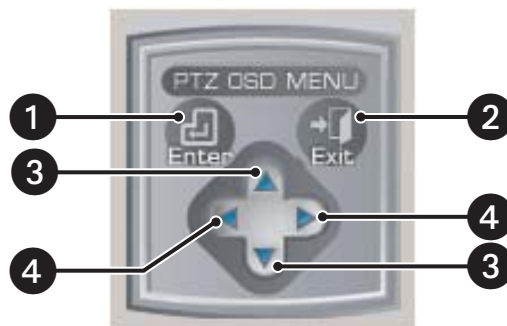


Figure 29. PTZ OSD Menu Control

Table Q describes the parts of the PTZ OSD Menu control.

Table Q. Parts of the PTZ OSD Menu Control

Item	Part	Description
1	Enter	Provides the following actions: <ul style="list-style-type: none"> Accepts the selected remote camera OSD menu choice. Accesses menu option parameters. For example, point the cursor at the Language option and click Enter accesses the list of available languages.
2	Exit	N/A
3	Up and Down Buttons	Navigate up and down the remote camera OSD menu, or cycle through a list of options or parameters.
4	Left and Right Buttons	Perform no activity.

Accessing a Remote Camera Programming Menu

The DX8100 allows you to navigate the remote camera menu system using any of the following:

- PTZ OSD Menu controls. For information about using the PTZ OSD Menu controls, refer to [Using the PTZ OSD Menu Control](#) on page 58.
- Keypad controls. For information about using the keypad controls, refer to [Accessing a Remote Camera Programming Menu](#).
- Keyboard keys. For information about using the keyboard keys, refer to [Using Keyboard Shortcuts to Operate PTZ and Lens Functions](#) on page 52.

The following procedure instructs you to use the PTZ OSD Menu control to navigate the remote camera programming menu.

To access a programming menu for a remote camera:





- On the DX8100 toolbar, click the Live button .
- Drag a remote camera from the Site Tree onto a view panel.
For certain camera models, you can also select preset number 95 from the keypad to access remote setup mode.
- To access remote camera setup mode, do one of the following:
 - On the PTZ keypad, click the Pgm button .
 - On the PTZ keypad, click the Set button , the number buttons 9, 5, and the Preset button .



Figure 30. PTZ Control Panel

- To navigate up and down through camera menu choices, do one of the following:
 - Use the PTZ OSD Menu controls.
 - Use the on-screen PTZ controls or the focus (+) and focus (-) buttons.

5. To select an option from the camera's on-screen menu, do one of the following:

- On the PTZ OSD Menu, click Enter.
- On the keypad, click the iris (+) button.

6. Click the iris (-) button to cancel an option or select the Exit command.

You can also use the on-screen PTZ controls with your mouse to navigate through camera menus. Click and drag the mouse up or down to move between menu options.

7. Click the iris (+) button to select the option, or to exit a menu when the cursor is pointed at the Exit command.



Figure 31. Camera Setup Menu


SENDING AUXILIARY COMMANDS TO A DEVICE

The DX8100 auxiliary feature allows you to control external equipment connected to the auxiliary outputs of Spectra domes or Esprit positioning systems. The auxiliary function is implemented through the D protocol and P protocol. In this case, the attached camera and DX8100 must be configured to communicate using one of these protocols.

The Aux key selects the auxiliary mode. Buttons 1-4 select which of the camera's auxiliary outputs to operate. Buttons 1-4 operate as a toggle (on/off) each time they are clicked.

For example, an Esprit equipped with a wiper uses Aux 1 to control the wiper. In this case, pressing Aux and then 1 sends a command to the Esprit to operate the wiper. You must configure the camera to establish how the camera responds to an auxiliary command. For detailed information about how a specific Spectra or Esprit camera system interprets auxiliary commands, refer to the documentation that accompanies your Spectra or Esprit camera system.

To send an auxiliary command:

1. On the PTZ keypad, click the Set button  to enter the programming mode.
2. Select the camera in the DX8100 view panel to which you want to send the auxiliary command.
3. Click the Aux button. Keypad buttons 1-4 are available.

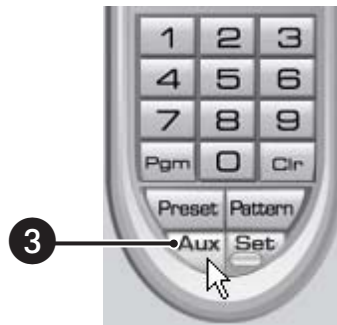


Figure 32. Auxiliary (Aux) Button

4. Click a keypad button (1-4). The auxiliary function, assigned by camera for the selected button, is executed.

CONFIGURING PRESET TOURS

A preset tour allows a camera to move through a programmed sequence of PTZ presets. The DX8100 Series HVR can store up to four preset tours. While four tours can be programmed, only one tour can be activated at a time. A preset tour will operate continuously until another PTZ control action is performed. At least one PTZ preset must be set in order to create a preset tour.

The PTZ controls are hidden in the extended view mode. In this case, select the standard view mode to display the PTZ controls.

To switch between the standard and extended view mode:

- From the DX8100 menu bar, choose View > Extended View.

This section describes how to configure preset tours and includes the following topics:

- [Programming a Preset Tour](#)
- [Activating a Preset Tour](#) on page 65
- [Deactivating a Preset Tour](#) on page 65




PROGRAMMING A PRESET TOUR

This section describes how to program a preset tour and includes the following topics:

- [Accessing a Preset Tour Group](#)
- [Adding Presets to a Tour](#) on page 63
- [Deleting Presets from a Tour](#) on page 64

Accessing a Preset Tour Group

To access the “Preset tour group” dialog box:

1. On the DX8100 toolbar, click the Live button  .
2. On the PTZ keypad, click the Set button  and then click the Pgm button  . The “Preset tour group” dialog box opens.
3. Select the preset tour (1-4) that you want to program from the drop-down box.
4. Do one of the following:
 - To add presets to a tour, refer to [Adding Presets to a Tour](#) on page 63.
 - To delete presets from a tour, refer to [Deleting Presets from a Tour](#) on page 64.

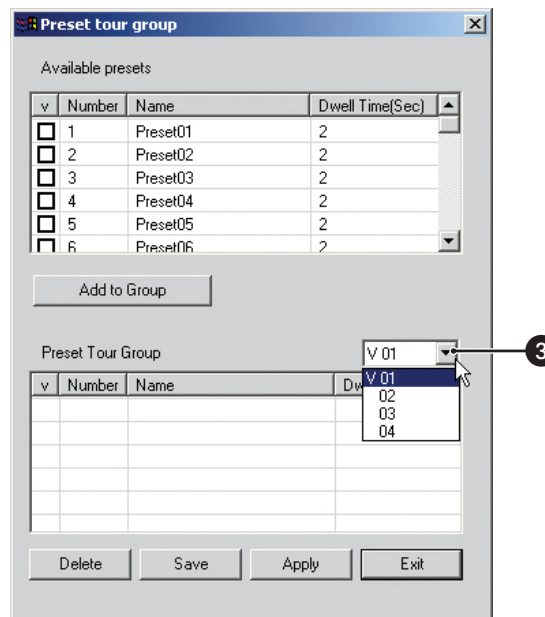


Figure 33. Preset Tour Dialog Box

Adding Presets to a Tour

To add presets to a tour:

1. Access the "Preset tour group" dialog box. For information about accessing the "Preset tour group" dialog box, refer to [Accessing a Preset Tour Group](#) on page 62.
2. Click the check box beside one of the presets you want to add to the tour.
3. Double-click in the Dwell Time field of a preset, and then increase or decrease the time (in seconds) at which the camera will remain during that sequence of the tour.
4. Repeat steps 1 and 2 for each additional preset you want to add to the tour.
5. Click Add to Group.
6. Click Save.
7. Click Exit to return to the main screen.

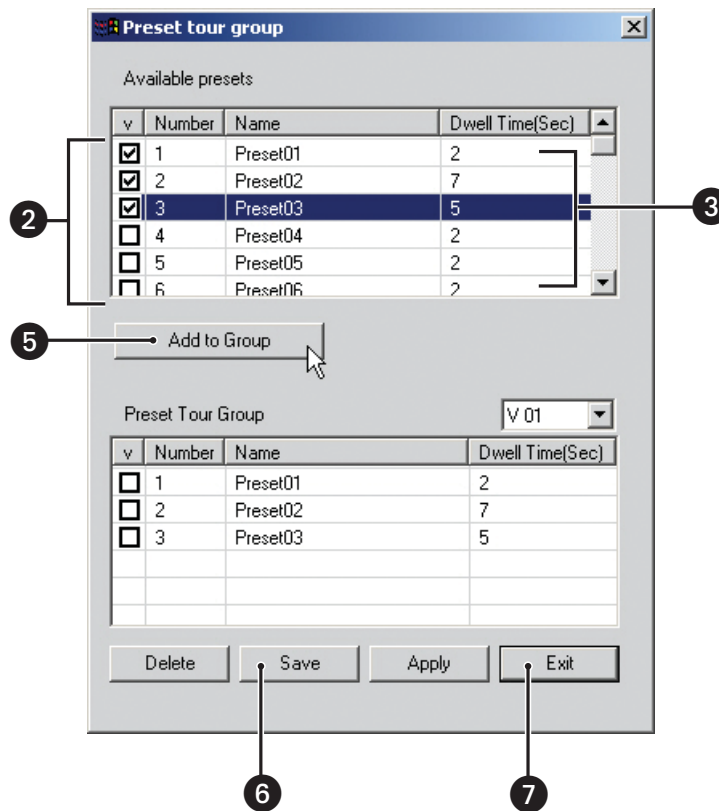


Figure 34. Adding Preset to Tour

Deleting Presets from a Tour

To delete presets from a tour:

1. Access the "Preset tour group" dialog box. For information about accessing the "Preset tour group" dialog box, refer to [Accessing a Preset Tour Group](#) on page 62.
2. Click the check box beside one or more presets you want to delete from the preset tour group.
3. Click Delete.
4. Click Save.
5. Click Exit to return to the main screen.

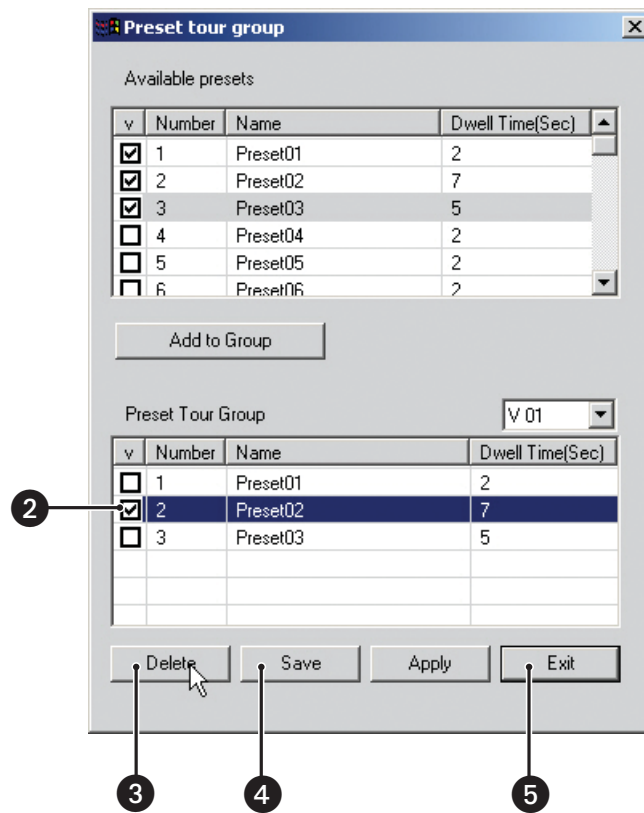







Figure 35. Deleting Preset from Tour

ACTIVATING A PRESET TOUR

This section describes how to activate a preset tour. You can save a preset tour for later use without engaging the tour by not performing step 5. Then, continue on to step 6 without clicking Apply.

To activate a preset tour:

1. On the DX8100 toolbar, click .
2. On the PTZ keypad, click the Set button  and then click the Pgm button  to bring up the "Preset preset tour group" dialog box.
3. From the drop-down box, select the preset tour (1-4) you want to activate.
4. Click Save.
5. Click Apply.
6. Click Exit to return to the main screen.
7. Click the Set button  on the PTZ keypad to exit programming mode.
8. Click the Preset button  on the PTZ keypad to activate the tour.

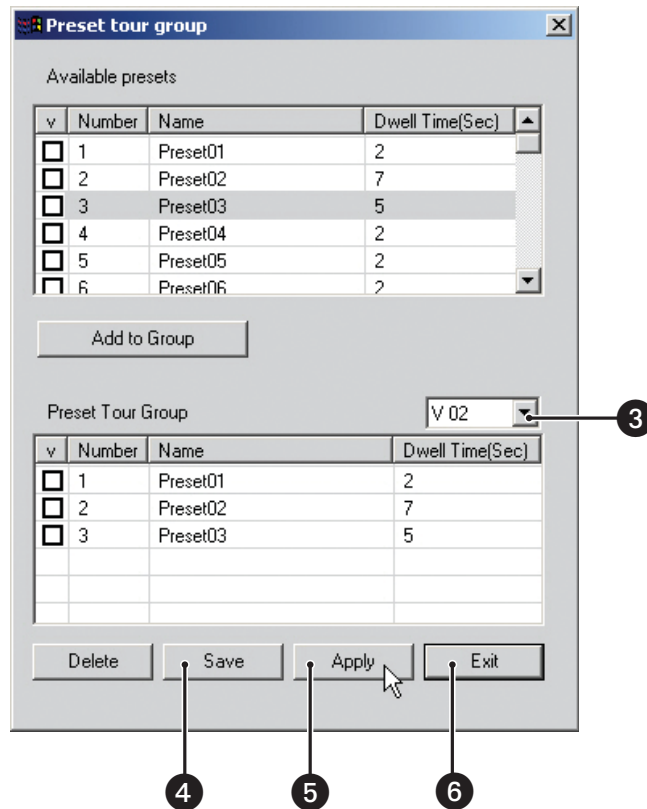


Figure 36. Activating a Preset Tour

To reactivate the last preset tour you configured:

- On the keypad, click Preset.

DEACTIVATING A PRESET TOUR

To deactivate a preset tour, do one of the following:

- Use the mouse to move the on-screen PTZ control.
- Activate a PTZ preset.

USING THE KBD300A KEYBOARD

The KBD300A allows you to operate certain DX8100 live view display functions and control camera PTZ operations from a keyboard, rather than a mouse.

When connected to the DX8100 server, the KBD300A supports two modes: the Standard mode and the Shift mode. The Shift mode is entered by pressing the Shift button and is indicated by a lit LED. For information about how to operate the KBD300A, refer to the KBD300A Universal Keyboard Installation/Operation manual.

This section describes the KBD300A operational features and is organized as follows:

- [KBD300A Standard Mode Operational Features](#)
- [KBD300A SHIFT Key Mode Features](#) on page 67

For information about connecting the KBD300A to the DX8100, refer to the DX8100 Installation manual. For information about configuring DX8100 data communication settings for the KBD300A, refer to [Setting Up the KBD300A Keyboard](#) on page 198.

KBD300A STANDARD MODE OPERATIONAL FEATURES

The KBD300A Standard mode allows you to control certain DX8100 operation features from the keyboard.

This section describes the KBD300A Standard mode features/functions. The Standard mode only works in the DX8100 view pane. You can program camera presets and patterns, operate the camera PTZ features, and assign cameras to panes. For detailed information about how to operate the KBD300A, refer to the KBD300A Universal Keyboard Installation/Operation manual. For information about configuring DX8100 data communication settings for the KBD300A, refer to [Setting Up the KBD300A Keyboard](#) on page 198.

Table R describes the KBD300A Standard mode operational features specific for the DX8100 server.

Table R. KB300A Standard Operational Mode Features

Keyboard Control	Action
Joystick	Controls the camera's PTZ operation.
Number + PRESET (short)	Moves camera to the programmed preset position.
Number + PRESET (long)	Programs the current camera position to the desired preset number.
Number + PATTERN (long)	Starts the pattern record mode.
ACK	Stops the pattern record mode.
Number + PATTERN	Runs the desired pattern.
Number + AUX ON/AUX OFF	Turns on/off the specified auxiliary output.
Number + MON	Assigns the selected camera to the desired view pane. The active view pane is highlighted.

To place the KBD300A in the standard mode:

- On the KBD300A keyboard, press the SHIFT button.
The LED indicator should not be lit.

KBD300A SHIFT Key Mode Features

The KBD300A SHIFT key allows you to control certain DX8100 operation features in the Site Tree from the keyboard.

This section describes the KBD300A SHIFT key features. The SHIFT key is effective within the DX8100 Site Tree. You can move the cursor to select elements within the Site Tree, expand and collapse elements, and select the display division. For detailed information about how to operate the KBD300A, refer to KBD300A Universal Keyboard Installation/Operation manual. For information about configuring DX8100 data communication settings for the KBD300A, refer to [Setting Up the KBD300A Keyboard](#) on page 198.

Table S describes the KBD300A SHIFT key features specific to the DX8100 server.

Table S. KBD300A Shift Key Features

Keyboard Control	Action
Joystick	<p>Activity within the DX8100 Site Tree:</p> <ul style="list-style-type: none"> • Up/down direction: Moves the cursor vertically through each element in the Site Tree. <ul style="list-style-type: none"> An element is a DX8100 site, camera within each DX8100 site, or Alarm, ATM/POS, and relay within each DX8100 site. If an element is expanded, the joystick moves the cursor vertically through the objects of that element. • Left/right direction: <ul style="list-style-type: none"> – Right: Expands an element to display objects contained under the element. – Left: Collapses an element and hides its objects. Select a camera/unit at the tree.
Number + CAM	<p>Expands the Site Tree and selects the first camera in each DX8100 site. For example, if there are two sites with one named DX8100 site 1 and the other named DX8100 site 2:</p> <ul style="list-style-type: none"> • Pressing 1 + CAM expands the Site Tree for DX8100 site 1 and selects the first camera. It does not assign the selected camera to a view pane or display video. • Pressing 2 + CAM expands the Site Tree for DX8100 site 2 and selects the first camera. It does not assign the selected camera to a view pane or display video.
F2, F3, ON, OFF	<p>Cameras are assigned numerically 1–16 to the respectively numbered video. These controls display DX8100 video in the following divisions:</p> <ul style="list-style-type: none"> • F2/OFF: Single-division view • F3/MOM: 4-division view • AUX ON: 9-division view • AUX OFF: 16-division view <p>Repeatedly pressing a button causes the DX8100 to cycle through the display of the remaining panels.</p>

To place the KBD300A in the shift mode:

- On the KBD300A keyboard, press the SHIFT key.
The LED indicator should be on.


Working in Playback Mode

Recorded video can be played back one channel at a time on the DX8100. Like live video, recorded video is viewed from the camera view panels on the main screen. Refer to [Switching Between Standard and Extended Panel Views](#) on page 30 for information about view panels. Only users with playback access rights (Standard User by default) and higher are allowed to view recorded video. Playback video can also be displayed in full screen view. For information about displaying playback video in full screen view, refer to [Displaying Playback Video in Full Screen View](#) on page 30.


This section describes how to use the Playback mode and includes the following topics:

- [Printing Images](#)
- [Accessing Playback Mode](#)
- [Assigning Cameras to View Panels](#)
- [Playback On-Screen Display \(OSD\)](#) on page 68
- [Playback Controls](#) on page 69
- [Playback Timeline](#) on page 71
- [Playing Back Video by Time](#) on page 71
- [Playing Back Video by Event](#) on page 73
- [Operating Playback Digital Zoom](#) on page 73
- [Viewing Video in the Deinterlaced Mode](#) on page 96
- [Viewing Live and Playback Video Simultaneously](#) on page 96

PRINTING IMAGES

To print a still image, use the playback controls to pause video playback at a specific image. Then click the Print button  on the DX8100 toolbar.

ACCESSING PLAYBACK MODE

To access the Playback mode, click the Live button  on the DX8100 toolbar.

ASSIGNING CAMERAS TO VIEW PANELS

To assign a camera to a view panel:


1. Drag a camera from the Site Tree onto a camera view pane.
2. Repeat this process for up to 36 cameras.

PLAYBACK ON-SCREEN DISPLAY (OSD)



Figure 37. Playback OSD

PLAYBACK CONTROLS

Use the playback controls to start playback, control direction, and adjust speed. On the playback control, click the Stop button  at any time to return to live view.

The playback controls are hidden in the extended view mode. In this case, select the standard view mode to display the playback controls.

To switch between the standard and extended view mode:

- From the DX8100 menu bar, choose View > Extended View.

Figure 38 shows the parts of the DX8100 playback controls.

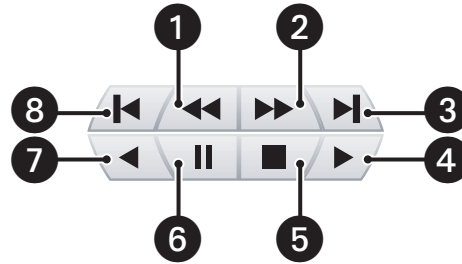


Figure 38. Playback Controls

Table T describes the parts of the playback controls.

Table T. Parts of the Playback Controls

Item	Part	Description
1	Frame-By-Frame Reverse	Each frame is displayed in the reverse direction with each click of the Frame-by-Frame Reverse button.
2	Frame-By-Frame Forward	Each frame is displayed in the forward direction with each click of the Frame-by-Frame Forward button.
3	Fast Forward to End	Advances the bookmark to the end of the latest recorded video.
4	Play Forward	Initiates normal playback of recorded video in the forward direction.
5	Stop	Stops playback control activity and returns to the Live View mode.
6	Pause	Pauses video playback in the forward or reverse direction.
7	Play Reverse	Initiates normal playback of recorded video in the reverse direction.
8	Rewind to Beginning	Returns the bookmark to the start of the earliest recorded video.

Figure 39 shows the parts of the DX8100 playback speed and volume controls.

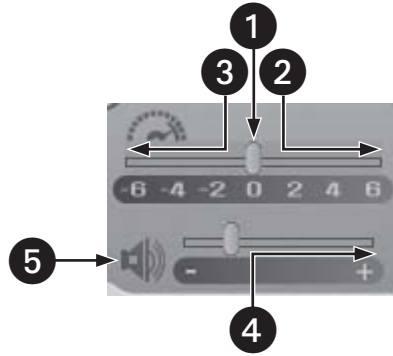


Figure 39. Playback Speed and Volume Controls

Table U describes the parts of the playback speed and volume controls.

Table U. Parts of the Playback Speed and Volume Controls

Item	Part	Description
1	Normal	Playback speed is at normal rate.
2	Faster	Playback speed is increased to a faster rate.
3	Slower	Playback speed is reduced to a slower rate.
4	Louder	Volume is increased to a higher level or decreased to a lower level.
5	Mute	Volume is silenced.

PLAYBACK TIMELINE

The playback timeline is used to select a day and time to begin playback. The timeline includes a horizontal slider that can be moved to select playback time over a 24-hour period. Time periods containing recorded video are represented as color-coded segments of the timeline. Figure 40 shows the parts of the timeline color-coding scheme.

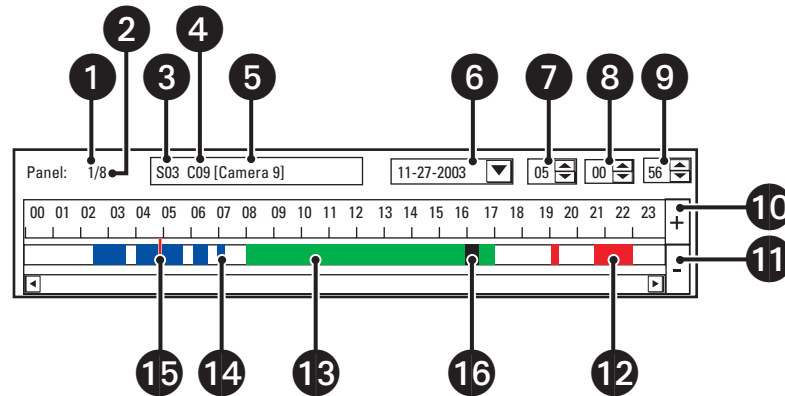


Figure 40. Playback Timeline

Table V describes the parts of the playback timeline control.

Table V. Parts of the Playback Timeline Control

Item	Part	Item	Part
1	Currently displayed view panel	9	Selected second
2	Total number of view windows	10	Increase timeline detail
3	Site number	11	Decrease timeline detail
4	Camera number	12	Alarm recording
5	Camera name	13	Normal recording
6	Selected date	14	Motion detection recording
7	Selected hour	15	Timeline slider
8	Selected minute	16	Instant recording

PLAYING BACK VIDEO BY TIME


This section describes how to play back video by time. The time is displayed in 24-hour clock format. You can select the time by moving the slider along the timeline.


This section includes the following topics:

- [Starting Playback from a Specific Point in Time](#)
- [Understanding Instant Playback](#) on page 72

STARTING PLAYBACK FROM A SPECIFIC POINT IN TIME

To start video playback from a particular point in time:

1. On the DX8100 toolbar, click the Live button .
2. Select a camera in the Site Tree. You can also select the camera from a view pane if the camera appears in the panel.

3. In the Timeline section, do the following:
 - a. In the Date Selection drop-down box, select the day you want playback to begin.
 - b. Use the spinner buttons to select the time.
4. On the playback control, click the Forward button  to begin viewing.

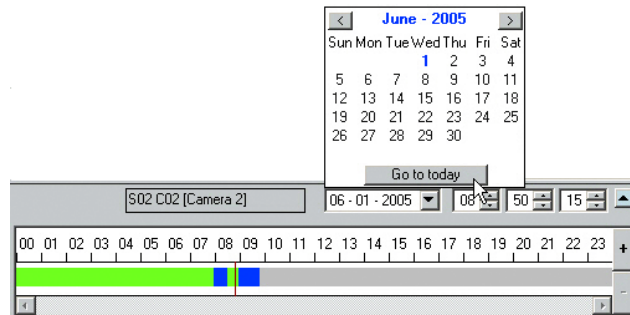


Figure 41. Date Selection Drop-Down Box

UNDERSTANDING INSTANT PLAYBACK

The DX8100's ability to perform instant playback of video is limited by a one-minute delay interval. The DX8100 has a built-in latency of approximately one minute between the time that video is captured and when it is written to the hard disk. This delay exists to ensure that video is accurately stored and the HVR's database is updated correctly.

The delay interval is not affected if the DX8100 is in the alarm or motion record mode. In this case, the pre-alarm or pre-motion time period does not become a factor in determining the delay interval.

To initiate an instant playback:

- On the playback control, click Instant Playback. The timeline is zoomed to the last two or three minutes of data.

The user can view video that has just been recorded. This video resides in memory and has not yet been stored on the hard drive. The color of the timeline for this video will be green. This is because the system cannot identify the data characteristic until the data is stored on the hard disk drive.

For example, if this data is recorded from a camera configured to monitor motion and there is no motion activity, the data will not be stored on the hard disk drive.

PLAYING BACK VIDEO BY EVENT

Users with playback access rights (Standard User by default) and higher can search video by events, such as motion detection or alarm activation. A sensor event is identical to an alarm event.

To play back video recorded during an alarm or motion event:

1. On the DX8100 toolbar, click the Live button .
2. From the DX8100 menu bar, choose View > Index View. The Event Type drop-down box is displayed.

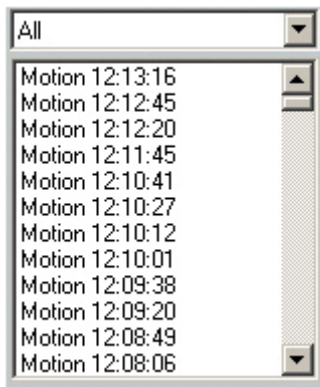



Figure 42. Event Type Drop-down Box

3. Select a camera by clicking it in the Site Tree.
4. In the Date Section drop-down box above the playback timeline, select the day that you want events to be displayed.
5. In the Event Type drop-down box, select the event type you want to view. Options are as follows:
 - All
 - None
 - Motion
 - Alarm in
 - ATM/POS
 - Video Loss
6. Select an event from the listing.
7. On the playback control, click the Forward button  to begin viewing.

OPERATING PLAYBACK DIGITAL ZOOM

Video playback can be zoomed (using a control keypad or the mouse) when the DX8100 is in the Playback or Search mode. In Playback mode, the on-screen PTZ feature is replaced with the mouse-activated digital zoom. Playback digital zoom is also available in Search mode. For information about the Playback mode, refer to [Working in Search Mode](#) on page 77. For information about the Search mode, refer to [Working in Search Mode](#) on page 77.

The PTZ controls are hidden in the extended view mode. In this case, select the standard view mode to display the PTZ controls.

To switch between the standard and extended view mode:

- From the DX8100 menu bar, choose View > Extended View.




This section describes how to operate playback digital zoom and includes the following topics:

- [Zoom Using the Digital Zoom Control](#)
- [Zoom Using the Mouse](#) on page 75
- [Panning a Zoomed Image](#) on page 76
- [Working in Playback Mode](#) on page 68
- [Working in Search Mode](#) on page 77

ZOOM USING THE DIGITAL ZOOM CONTROL

The digital zoom feature is accessible when the DX8100 is in the Playback or Search mode. For information about the Playback mode, refer to [Working in Playback Mode](#) on page 68. For information about the Search mode, refer to [Working in Search Mode](#) on page 77.

To zoom using the digital zoom control:

- To place the DX8100 in the Playback or Search mode, do one of the following:
 - On the DX8100 toolbar, click the **Live** button .
 - On the DX8100 toolbar, click the **Search** button .
- On the playback control, click the **Forward** button  to start video playback.
- Use the Digital Zoom control to zoom and pan video playback.

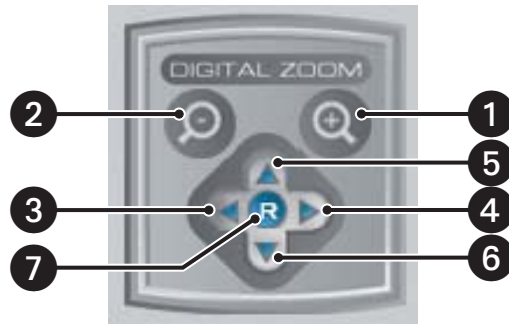


Figure 43. Playback Digital Zoom Control

Table W describes the parts of the Digital Zoom control.

Table W. Parts of the Digital Zoom Control

Item	Part	Description
1	Zoom In	Allows you to magnify the entire pane. Click the Zoom In button to magnify to the next preset magnification level (x1-6).
2	Zoom Out	Allows you to reduce to the previous preset magnification. Click the Zoom Out button to reduce to the previous magnification level.
3	Pan Left	Allows you to move the magnified playback image to the left.
4	Pan Right	Allows you to move the magnified playback image to the right.
5	Pan Up	Allows you to move the magnified playback image up.
6	Pan Down	Allows you to move the magnified playback image down.
7	Zoom Restore	Allows you to return the zoomed image to the original size.

ZOOM USING THE MOUSE

The DX8100 allows you to use the mouse to drag a selection region (rectangle) around a specific area of a pane, and to zoom the selection in and out. A small rectangle about 0.25 inches (6.4 mm) square provides a x6 zoom factor. As the selection area increases in size, the zoom in/out factor decreases: x5, x4, x3, x2, and x1.

- If you use the mouse to select an area about 0.25 inches (6.4 mm) in size, the zoom feature performs as follows:
 - If zooming in, the zoom factor is at x6. The selected viewing area is zoomed to the largest size.
 - If zooming out, the zoom factor is at x6. The selected viewing area is zoomed to the original size.
- If you use the mouse to select the entire pane, the zoom feature performs as follows:
 - If zooming in, the zoom factor is at x1. In this case, the selected viewing area is slightly enlarged. You will have to perform many zoom in operations to arrive at the largest zoom size.
 - If zooming out, the zoom factor is at x1. In this case, the selected viewing area is slightly reduced. You will have to perform many zoom out operations to arrive at the original size.
- You can also use the hand tool and the mouse wheel to zoom in and out.

The zoom factor is displayed in the upper-right corner of the pane. The effective zoom in factor is displayed after the zoom operation is performed. The effective zoom out factor is not displayed.

To zoom using the mouse:


1. To place the DX8100 in the Playback or Search mode, do one of the following:
 - On the DX8100 toolbar, click [Live](#).
 - On the DX8100 toolbar, click [Search](#).
2. On the playback control, click the Forward button  to start video playback.
3. Do the following:
 - a. To zoom in, click and drag the mouse diagonally to your right in a *downward* direction.



Figure 44. Zoom In Using Mouse

- b. To zoom out, click and drag the mouse diagonally to your left in an *upward* direction.



Figure 45. Zoom Out Using Mouse

PANNING A ZOOMED IMAGE

This section describes how to use the hand tool and mouse wheel to zoom in and out.

To pan a zoomed portion of video within the view panel:

1. To place the DX8100 in the Playback or Search mode do one and of the following:
 - On the DX8100 toolbar, click [Live](#).
 - On the DX8100 toolbar, click [Search](#).
2. Right-click in the view panel. The mouse pointer now resembles a hand.
3. Click the left mouse button, and drag the mouse in the direction you want to move the video image.
4. Right-click again to return to zoom mode.

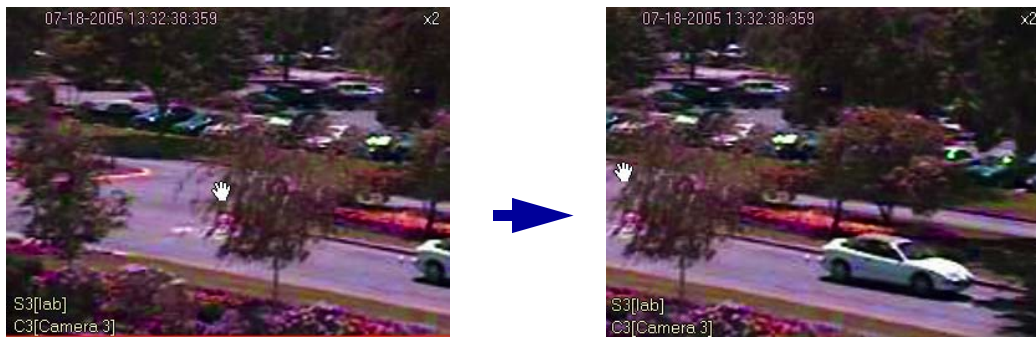


Figure 46. Panning Zoomed Video with the Mouse

Working in Search Mode

The DX8100 Series HVR supports four video search methods: index, thumbnail, POS, and pixel. For information about the user access level required to search video data, refer to [Definition of User Access Levels](#) on page 210.

To enter the Search mode:

- On the DX8100 toolbar, click [Search](#).

This section describes how to use the Search mode and includes the following topics:

- [Search Window](#)
- [Displaying a Deinterlaced Image in the Search Mode](#) on page 78
- [Reusing the Search Time Range](#) on page 78
- [Index Video Search](#) on page 79
- [Thumbnail Video Search](#) on page 80
- [POS Search](#) on page 82
- [Pixel Video Search](#) on page 93
- [Working with Special View and Search Methods](#) on page 96

SEARCH WINDOW

The search window facilitates access to the search capabilities of the DX8100. Available search methods include index, thumbnail, POS, and pixel. Each search method allows users with playback access rights (Standard User by default) and higher to locate video data instantly using criteria such as time of day or changes in window pixels.

As in Playback mode, digital zoom, export, and print features are available in Search mode. For more information, refer to [Operating Playback Digital Zoom](#) on page 73, [Exporting Video](#) on page 97, and [Printing Images](#) on page 68.

Figure 47 shows the parts of the DX8100 window in Search mode.



Figure 47. DX8100 HVR Search Mode Window

Table X describes the parts of the DX8100 window in the Search mode.

Table X. Parts of the DX8100 Window in Search Mode

Item	Part	Description
1	Index Search	Allows users to search motion and alarm events listed in the event index panel.
2	Thumbnail Search	Allows users to visually search video that has been recorded over a 24-hour period. Video is presented as a series of thumbnail images. Each thumbnail represents the first image recorded during a specified period of time. Thumbnails can be expanded and collapsed to represent hourly, 10-minute, and 1-minute intervals.
3	POS Search	Allows users to search ATM/POS transaction text data.
4	Pixel Search	Allows users to search any 24-hour period of recorded video automatically for changes in screen pixels.
5	View Window	Displays search video, image thumbnails, and pixel grid.
6	Site Tree	Facilitates top-down, hierarchical management of DX8100 resources such as servers, cameras, alarms, and relays.
7	Event Index Panel	Lists motion and alarm events over the 24-hour time period specified in the playback timeline.
8	Select All Check Box	Enables playback for all visible view panels when selected. If this check box is deselected, only the selected channel will play. This control is only available while using Index Search.
9	Playback Timeline	Displays a 24-hour timeline marked with color-coded video events. Allows user to select a date and time for playback.
10	Playback Control Panel	Provides buttons to control video playback. Includes forward and reverse playback and still image. Also provides controls for playback speed and volume.
11	Playback Zoom Control	Provides access to digital zoom features during playback.
12	Search Control	Provides access to the index, thumbnail, POS, and pixel search controls.

DISPLAYING A DEINTERLACED IMAGE IN THE SEARCH MODE

If you are searching for an image that is recorded at 4CIF at a low frame rate per second, the viewed image might move or tear. The View menu's Deinterlaced Image option is used to enhance the image during a search activity.

To search video using the deinterlaced option:

1. On the menu bar, click View > Display deinterlaced image.
2. On the DX8100 toolbar, click the Search button . The DX8100 is placed in the Search mode.



REUSING THE SEARCH TIME RANGE

The DX8100 allows sharing of time range search settings between the Thumbnail and Pixel search mode. If you initiate a Thumbnail search, you can select a preview clip and initiate a Pixel search. The Pixel search mode is based on the same time criteria as the preview Thumbnail clip.

INDEX VIDEO SEARCH

Index search allows a user to search video by events, such as motion detection or alarm activation. Events are listed chronologically and by type. To ensure the proper camera channel is selected, check the camera information box above the playback timeline or verify that the desired view panel is framed with a thin red outline. Index video can also be displayed in full screen view. For information about displaying playback video in full screen view, refer to [Displaying Index Search Video in Full Screen View](#) on page 30.

To search video by motion or alarm events:

1. On the DX8100 toolbar, click the Search button .
2. On the DX8100 Search control, click the Search button .
3. On the DX8100 toolbar, click a view panel division button.
4. From the Site Tree, drag the camera channel you want to search onto one of the view panels.
5. Click the view panel of the channel you want to search.
6. From the drop-down box on the playback timeline, select the day you want playback to begin.
7. Select the event type you want to view from the event type drop-down box.

Only events recorded for the selected camera are listed in the index. A sensor event is identical to an alarm event. Options are as follows:

- All
 - None
 - Motion
 - Alarm in
 - ATM/POS
 - Video Loss
8. Select an event from the index.
 9. Verify that the "Select all" check box is selected. Deselecting the "Select all" check box will disable playback for all view panels except the channel being searched.

The DX8100 allows you to view playback on multiple cameras in addition to the camera being searched. This feature is valuable if you want to examine a variety of views recorded at the time a certain event was detected.

10. On the playback control, click the Forward button  to begin viewing.






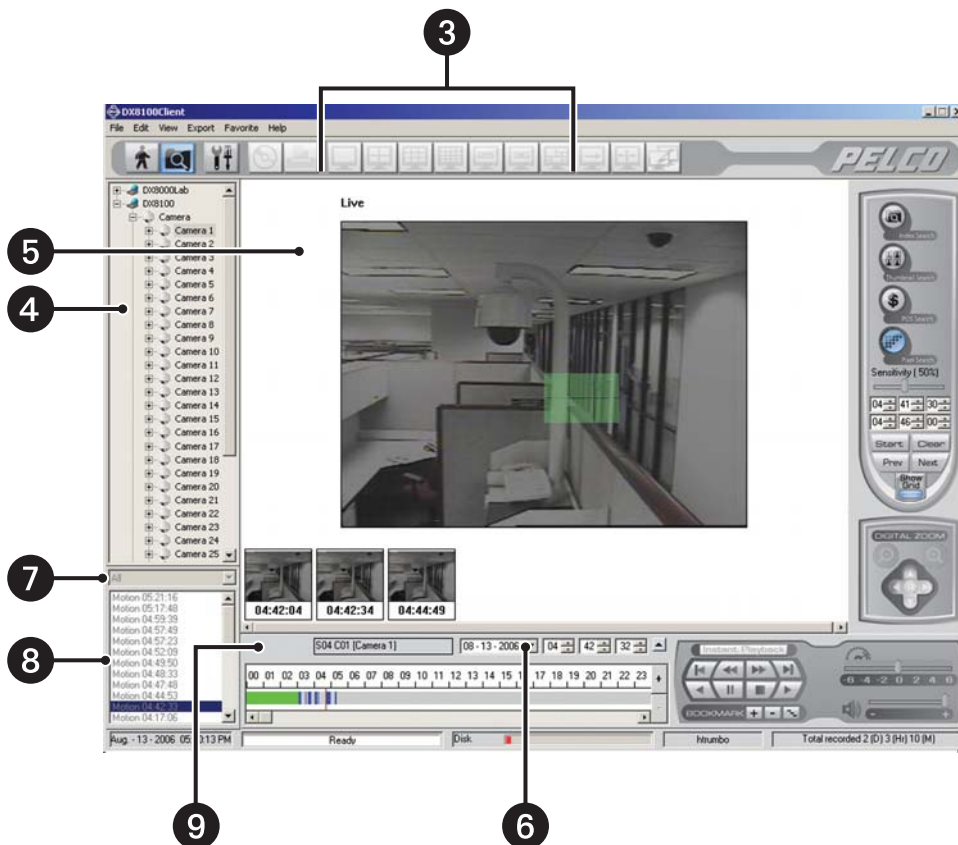Figure 48. DX8100 HVR Index Search Screen









THUMBNAIL VIDEO SEARCH

Thumbnail search allows users to visually search video that has been recorded over a 24-hour period. Video is presented as a series of thumbnail images. Each thumbnail represents the first image recorded during a specified period of time. Thumbnails can be expanded and collapsed to represent hourly, 10-minute, and 1-minute intervals.

The DX8100 allows sharing of time range search settings between the Thumbnail and Pixel search mode. In this case, if you initiate a Thumbnail search, you can select a preview clip and initiate a Pixel search. The Pixel search mode is based on the same time criteria as the preview Thumbnail clip.

To visually search video using thumbnail images:

1. On the DX8100 toolbar, click the Search button .
2. On the DX8100 Search control, click Thumbnail Search button .
3. Select a camera from the Site Tree.
4. From the drop-down box, select the date on which you want to begin your search.
5. Click the thumbnail for the hour you want to begin searching.

6. Click the Expand button  to change the thumbnail time range to shorter intervals, or click the Collapse button  to change the thumbnail time range to longer intervals.
 - Click the Expand button  to change from 1-hour intervals to 10-minute intervals.
 - Click the Expand button  again to change from 10-minute intervals to 1-minute intervals.
 - Click the Collapse button  once to change from 1-minute intervals to 10-minute intervals.
 - Click the Collapse button  again to change from 10-minute intervals to 1-hour intervals.
7. Click the thumbnail of the interval you want to search.
8. Click the Forward button  to view video.
Double-clicking a thumbnail image will enlarge the image and begin playback.
9. Click  to return to thumbnail images.

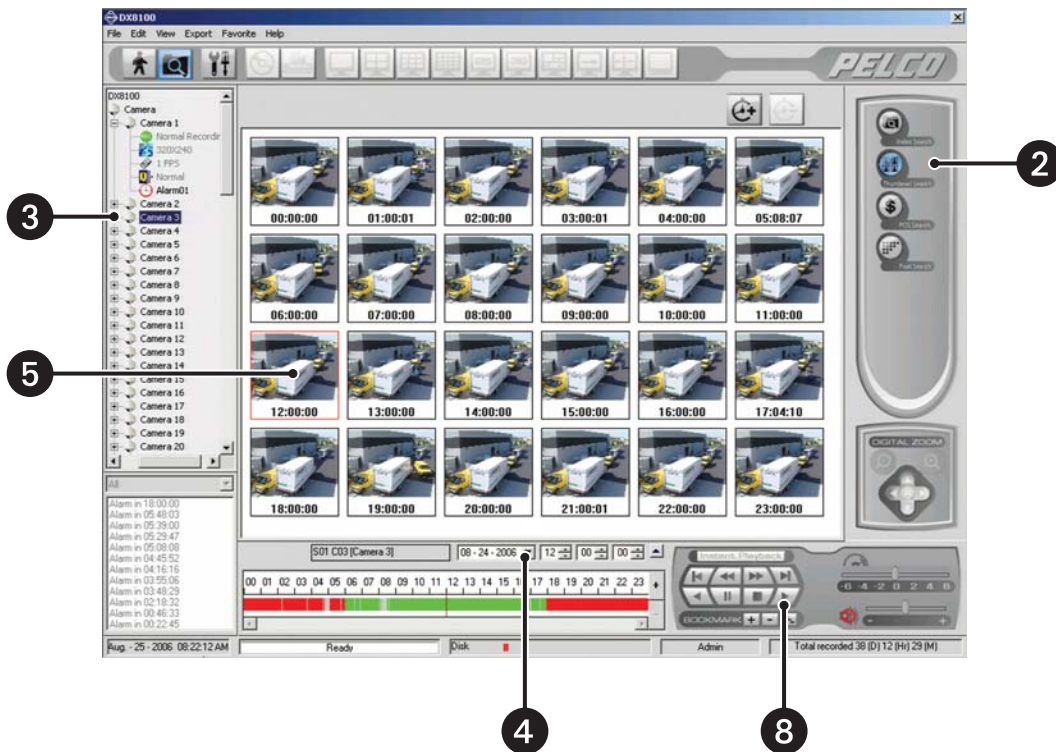


Figure 49. DX8100 HVR Thumbnail Search Screen

POS SEARCH

The DX8100 allows a user to search any 24-hour period of recorded POS video and data. To record ATM/POS video and data, the ATM/POS devices and DX8100 must first be connected and configured as follows:

- Connect the ATM/POS devices to the DX8100.
- Set up camera-to-ATM/POS device linking.
- Configure the DX8100 ATM/POS settings for each attached ATM/POS device.
- Start an ATM/POS transmittal and verify that the DX8100 is receiving the ATM/POS video and data.

For information about setting up the DX8100 for ATM/POS applications, refer to the following sections:

- [Linking Relay Outputs to ATM/POS Events](#) on page 135
- [Linking Cameras to Record in Response to ATM/POS Events](#) on page 137
- [Linking Presets and Patterns to ATM/POS Events](#) on page 141
- [Verifying the ATM/POS Communication Connection](#) on page 196
- [Setting UP ATM/POS Device Properties](#) on page 180

This section describes how to use the POS search feature and includes the following topics:

- [Understanding the POS Search View](#)
- [Searching and Displaying POS Data by Device Name](#) on page 85
- [Searching by POS Transaction Number](#) on page 87
- [Searching for All Transactions with Exceptions](#) on page 88
- [Searching for Transactions That Satisfy Specific Exceptions](#) on page 89
- [Searching for Transactions by Line Item](#) on page 90
- [Searching for Transactions by Action Code](#) on page 91

UNDERSTANDING THE POS SEARCH VIEW

To enter the POS Search mode:


1. On the DX8100 toolbar, click the Search button .
2. On the Search control, click the POS Search button . The POS search view is displayed.

Figure 50 shows the parts of the POS search view.

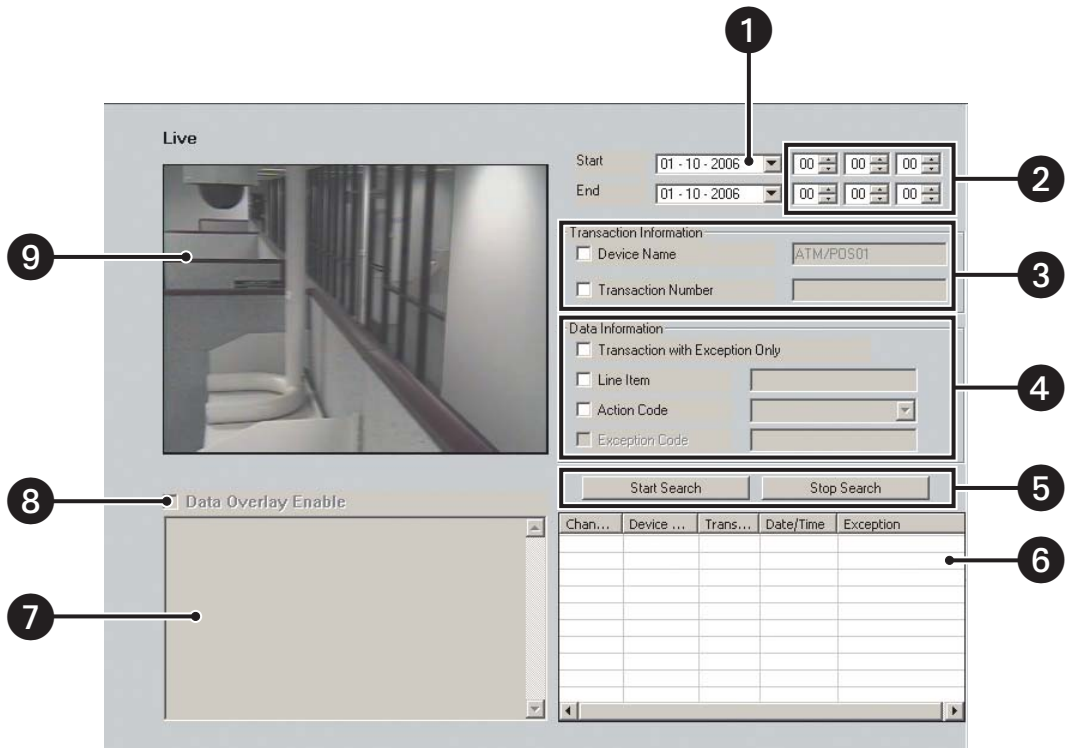


Figure 50. POS Search View

Table Y describes the parts of the POS search view.

Table Y. Parts of the POS Search View (1 of 2)

Item	Part	Description
1	Date	Date range for which to search the video and data.
2	Time	Time range based on a 24-hour time period for searching POS events.
3	Transaction Information	Allows POS search by transaction information options as follows: <ul style="list-style-type: none"> • Device name: The ATM/POS device linked to a specific camera. In this case, selecting a camera linked to an ATM/POS device automatically inserts the name of the ATM/POS device in the Device Name box. • Transaction Number: A number assigned by the ATM/POS device that is printed on the sales are transaction receipt.
4	Data Information	Allows POS search by data information options as follows: <ul style="list-style-type: none"> • Transaction with Exception Only: Finds all transactions for which an exception is defined. • Line Item: Allows you to search POS data by a specific transaction line item, based on the following guidelines: <ul style="list-style-type: none"> – Line item entries are not case sensitive. Enter lower or uppercase characters. – Specify the asterisk (*) wildcard. – Search by a single word or multiple words appearing in a transaction line. – Type the first few characters of the <i>first</i> word appearing in the transaction and the wildcard. For example, type sma* for a line item containing the entry “small orange juice.” The search returns all transactions that contain the word “small.” – Type the first few characters of the <i>second</i> word in a transaction and the wildcard. For example, type ora* for a line item containing the entry “small orange juice.” The search returns all transactions that contain the word “orange.” – Search by abbreviation. For example type 6-pk, for a line item containing the entry “Soda 6-pk.” The search returns all transactions that contain the abbreviation “6-pk.” • Action Code: A two-letter abbreviation designating a specific action code. For information about action codes, refer to Setting UP ATM/POS Device Properties on page 180. • Exception Code: A predefined transaction filter used to detect a specific data structure within the ATM/POS transaction data. For information about exceptions, refer to Setting Up ATM/POS Exceptions on page 191.
5	Start and Stop	Start: Initiates a search event. Stop: Ends a search event.
6	POS Search Table	Lists the data discovered in response to the POS options selected for the transaction and data information. <ul style="list-style-type: none"> • Channel number: From 1–16. • Device name: By default, ATM/POS01 to ATM/POS16. The device name can be changed. • Transaction number: Number assigned by the ATM/POS device to the transaction data. • Date/Time: Date and time transaction is recorded. • Exception: Yes if an exception filter is active for the transaction data has an exception. No if the transaction does not have an exception filter. <p>The transaction and data information are based on the ATM/POS configuration settings derived from the following:</p> <ul style="list-style-type: none"> • Data format • ATM/POS exceptions • Exception action codes <p>For information about setting up ATM/POS transaction and data options, refer to Setting UP ATM/POS Device Properties on page 180.</p>

Table Y. Parts of the POS Search View (2 of 2)



Item	Part	Description
7	Data Window	Area where recorded transaction data is displayed.
8	Data Overlay Box	The function is not supported at this time.
9	Video Window	Area where live and playback (recorded) video is viewed. Playback video is started at the date and time specified for the respective transaction data as shown in the POS Search table. The DX8100 playback controls are used to view playback video.

SEARCHING AND DISPLAYING POS DATA BY DEVICE NAME

You can perform a general search for POS transaction data record for a particular ATM/POS device and its associated camera. Use the date and time and ATM/POS device name as the search criteria. The search results contain all POS transactions recorded for that device according to the specified date and time.

Searching POS Data by Device Name

To search POS transaction data by ATM/POS device name:

1. On the DX8100 toolbar, click the Search button .
2. On the Search control, click the POS Search button . The POS search view is displayed.
3. To select a channel, in the DX8100 Site Tree, click a camera that is linked to an ATM/POS device.
By default, the name of the ATM/POS device linked to the selected camera/channel is displayed in the Device Name box. In this case, the Device Name box is deselected.
4. Select the date and time for the POS search event as follows:
 - a. Select the Start date.
 - b. Select the End date.
 - c. Select the End time.
 - d. Select the Start time.
5. In the Transaction Information section, click the check box to select Device Name. The Device Name box is available.
6. Verify that the ATM/POS device name displayed in the Device Name box is the correct device for the search.



- Click Start Search. The POS Search Table is populated with POS transaction data.



Figure 51. POS Transaction Search by Device Name

Displaying POS Data Discovered by Device Name

To display a POS transaction and its associated video:

- On the DX8100 toolbar, click the Search button .
- On the Search control, click the POS Search button . The POS search view is displayed.
- Perform a POS search by device name. For information about performing a search by ATM/POS device name, refer to [Searching POS Data by Device Name](#) on page 85.
- In the POS Search Table, click a transaction. The transaction data is displayed in the Data window.
- On the playback control, click Play. The video recorded for the selected POS transaction is played back and is displayed in the Video window.

- Use the playback control to stop or pause playback, reverse playback, and so forth.

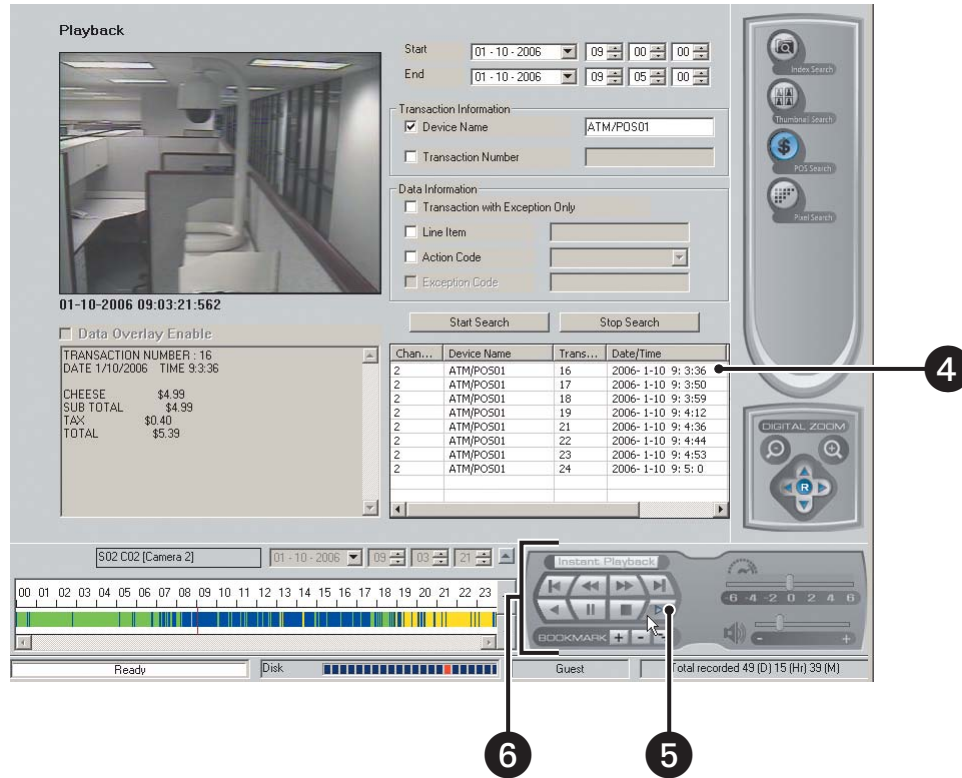




Figure 52. Display a POS Transaction Search by Device Name

SEARCHING BY POS TRANSACTION NUMBER

The DX8100 allows you to search for a POS event by transaction number. You must specify the channel, date, and a time window in which the transaction is recorded.

To search for a POS event by transaction number:

- On the DX8100 toolbar, click the Search button .
- On the Search control, click the POS Search button . The POS search view is displayed.
- To select a device name, do one of the following:
 - In the DX8100 Site Tree, click a camera that is linked to an ATM/POS device.

By default, the name of the ATM/POS device linked to the selected camera/channel is displayed in the Device Name box. In this case, the Device Name box is deselected.
 - In the Transaction Information section, click the check box to select Device Name. When the Device Name box is enabled, type the ATM/POS device name in the box.
- Set the date and time range you want to search for the transaction number.
- In the Transaction Information section, click the check box to select Transaction Number. The Transaction Number box is available.
- In the Transaction Number box, type the transaction number.
- Click Start Search. If the channel, date, time, and transaction number are valid, the POS transaction is displayed in the POS Search Table.
- In the POS Search Table, click a transaction entry. The transaction data is displayed in the Data window.

9. On the playback controls, click the Forward button. The video recorded for the transaction is displayed in the Video window.

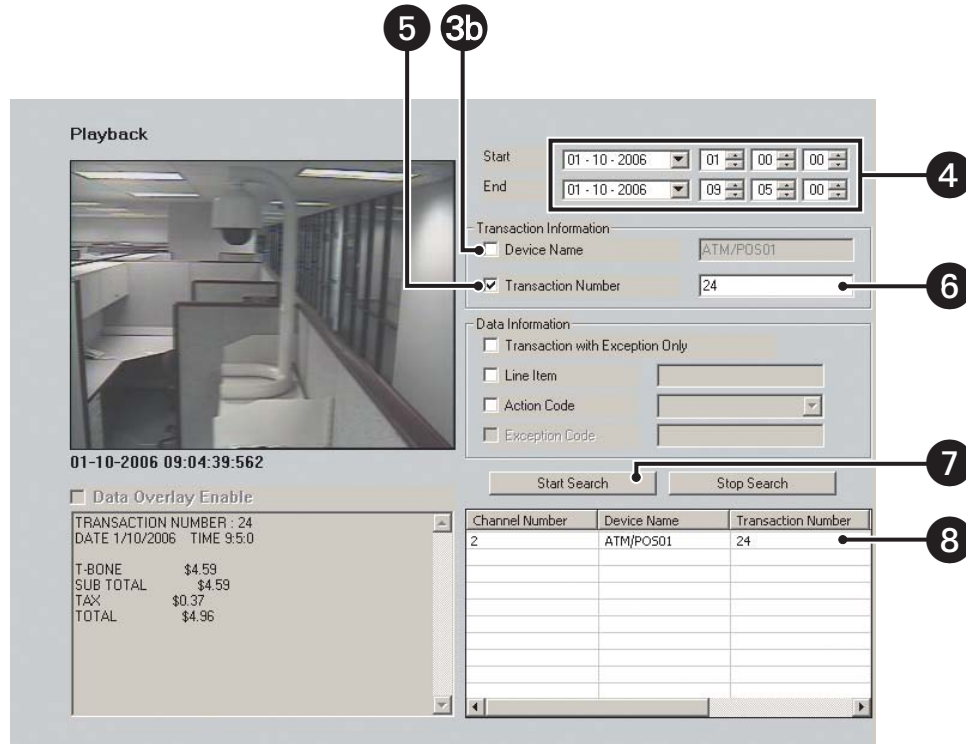


Figure 53. Searching an POS Event by Transaction Number



SEARCHING FOR ALL TRANSACTIONS WITH EXCEPTIONS

The DX8100 allows you to search for transactions that meet conditions defined by one or more exceptions. In this case, you must configure your search criteria based on the following:

- **Channel:** The camera that captured the video and is linked to the ATM/POS device that produced the transaction data.
- **Date/time:** The date and time window within which the transactions were recorded.

To use an exception to search transaction data, the exception must be created before recording the transaction data. If the transaction data is recorded before the exception filter is defined, the exception filter will not find the data structure within the transaction data.

To search for only POS events by transaction with exception:

1. On the DX8100 toolbar, click the Search button .
2. On the Search control, click the POS Search button . The POS search view is displayed.
3. To select a ATM/POS device, do one of the following:
 - In the DX8100 Site Tree, click a camera that is linked to the ATM/POS device.
By default, the name of the ATM/POS device linked to the selected camera/channel is displayed in the Device Name box. In this case, the Device Name box is deselected.
 - In the Transaction Information section, click the check box to select Device Name. When the Device Name box is enabled, type the ATM/POS device name in the box.
4. Set the date and time range for the search.
5. In the Data Information section, click the check box to select Transaction with Exception Only. The Exception Code check box is available.
6. Click Start Search. If the device name/channel, date, and time are valid, and if transactions with exceptions were recorded during the time range, the transactions are displayed in the POS Search Table.
7. In the POS Search Table, click a transaction. The transaction data is displayed in the Data window.

- On the playback controls, click the Forward button. The video recorded for the transaction is displayed in the Video window.

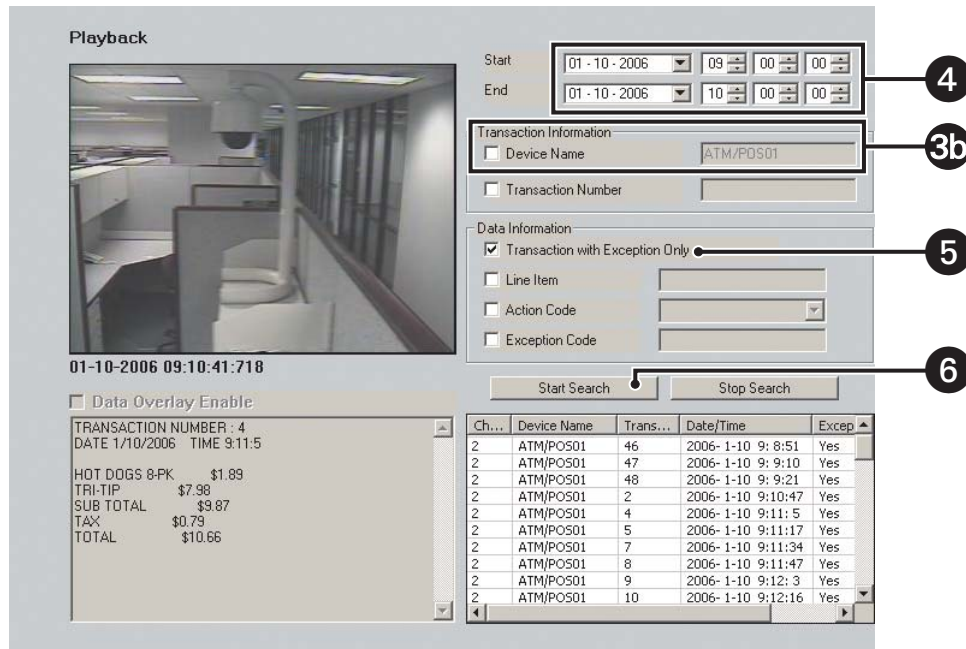


Figure 54. Searching for Transaction with Exception Only Events



SEARCHING FOR TRANSACTIONS THAT SATISFY SPECIFIC EXCEPTIONS

The DX8100 allows you to search for and display ATM/POS transactions that meet conditions as defined by one or more exceptions. You can use specific exception codes to define the search criteria. To use an exception to search transaction data, the exception must be created before recording the transaction data. If the transaction data is recorded before the exception filter is defined, the exception filter will not find the data structure within the transaction data.

The search criteria is based on the following:

- Channel:** The camera that captured the video and is linked to the ATM/POS device that produced the transaction data.
- Date/time:** The date and time window within which the transactions were recorded.
- Exception code:** The predefined transaction filter used to detect a specific data structure within the ATM/POS transaction data.

To search for transactions that meet specific exceptions:

- On the DX8100 toolbar, click the Search button .
- On the Search control, click the POS Search button . The POS search view is displayed.
- To select a ATM/POS device, do one of the following:
 - In the DX8100 Site Tree, click a camera that is linked to the ATM/POS device.

By default, the name of the ATM/POS device linked to the selected camera/channel is displayed in the Device Name box. In this case, the Device Name box is deselected.
 - In the Transaction Information section, click the check box to select Device Name. When the Device Name box is enabled, type the ATM/POS device name in the box.
- Set the date and time range for the search.
- In the Data Information section, do the following:
 - Click the check box to select Transaction with Exception Only. The Exception Code check box is available.
 - Click the check box to select Exception Code. The Exception Code box is available.
 - Type the exception code in the box.

6. Click Start Search. If the device name/channel, date, and time are valid, and if transactions with exceptions were recorded during the time range, the transactions are displayed in the POS Search Table.
7. In the POS Search Table, click a transaction. The transaction data is displayed in the Data window.

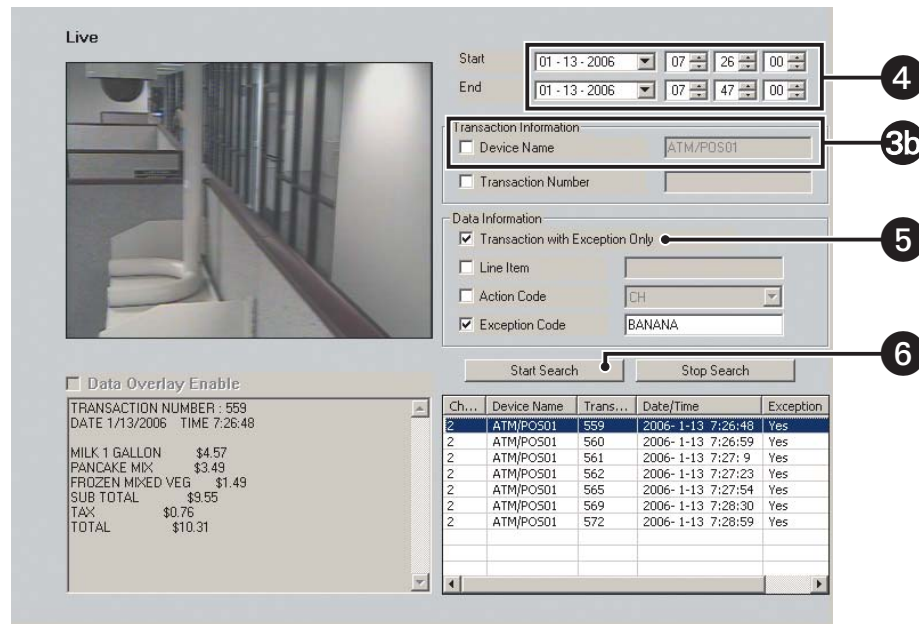


Figure 55. Transactions that Satisfy Specific Exception Filters



SEARCHING FOR TRANSACTIONS BY LINE ITEM

The DX8100 allows you to search for and display ATM/POS transactions that contain a unique line item. Use the asterisk (*) as a wildcard character to substitute for zero or more characters.

The search criteria is based on the following:

- **Channel:** The camera that captured the video and is linked to the ATM/POS device that produced the transaction data.
- **Date/time:** The date and time window within which the transaction(s) were recorded.
- **Line item:** The line item has the following guidelines:
 - Line item entries are not case sensitive. Enter lower- or uppercase characters.
 - Specify the asterisk (*) wildcard.
 - Search by a single word or multiple words appearing in a transaction line.
 - Enter the first few characters of the *first* word appearing in the transaction and the wildcard. For example, type sma* for a line item containing the entry “small orange juice.” The search returns all transactions that contain the word “small.”
 - Enter the first few characters of the *second* word in a transaction and the wildcard. For example, type ora* for a line item containing the entry “small orange juice.” The search returns all transactions that contain the word “orange.”
 - Search by abbreviation. For example, type 6-pk for a line item containing the entry “Soda 6-pk.” The search returns all transactions that contain the abbreviation “6-pk.”

To search for transactions that contain a unique line item:

1. On the DX8100 toolbar, click the Search button .
2. On the Search control, click the POS Search button . The POS search view is displayed.

3. To select a ATM/POS device, do one of the following:
 - In the DX8100 Site Tree, click a camera that is linked to the ATM/POS device.
By default, the name of the ATM/POS device linked to the selected camera/channel is displayed in the Device Name box. In this case, the Device Name box is deselected.
 - In the Transaction Information section, click the check box to select Device Name. When the Device Name box is enabled, type the ATM/POS device name in the box.
4. Set the date and time range for the search.
5. In the Data Information section, do the following:
 - a. Click the check box to select Line Item. The Line Item box is available.
 - b. Type the name of the line item in the box.
6. Click Start Search. If the device name/channel, date, and time are valid, transactions containing the line item are displayed in the POS Search Table.
7. In the POS Search Table, click a transaction. The transaction data is displayed in the Data window.

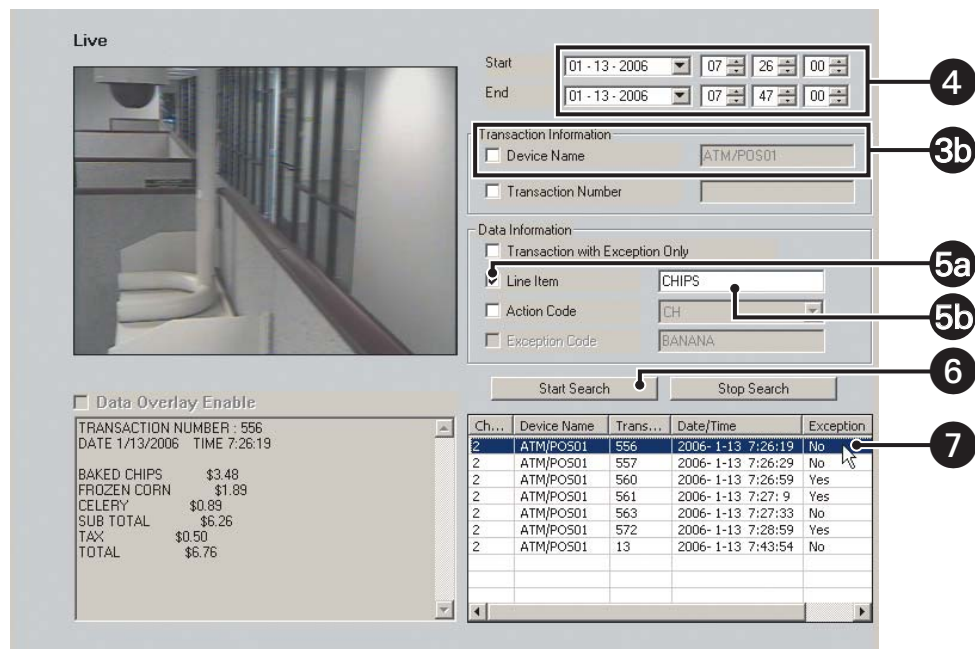


Figure 56. Transactions that Contain a Unique Line Item



SEARCHING FOR TRANSACTIONS BY ACTION CODE

The DX8100 allows you to search for and display ATM/POS transactions by action code. To use an action code to search transaction data, the action code must be created before recording the transaction data. If the transaction data is recorded before the action code is defined, the action code will not find the data structure within the transaction data.

The search criteria is based on the following:

- **Channel:** The camera that captured the video and is linked to the ATM/POS device that produced the transaction data.
- **Date/time:** The date and time window within which the transaction(s) were recorded.
- **Action code:** The special two-character filter that defines a specific transaction event.

To search for transactions by action code:

1. On the DX8100 toolbar, click the Search button .
2. On the Search control, click the POS Search button . The POS search view is displayed.

3. To select a ATM/POS device, do one of the following:
 - In the DX8100 Site Tree, click a camera that is linked to the ATM/POS device.
By default, the name of the ATM/POS device linked to the selected camera/channel is displayed in the Device Name box. In this case, the Device Name box is deselected.
 - In the Transaction Information section, click the check box to select Device Name. When the Device Name box is enabled, type the ATM/POS device name in the box.
4. Set the date and time range for the search.
5. In the Data Information section, do the following:
 - a. Click the check box to select Action Code. The Action Code drop-down box is available.
 - b. In the Action Code drop-down box, select an action code.
For information about action codes, refer to [Using Action Codes](#) on page 192.
6. Click Start Search. If the device name/channel, date, and time are valid, transactions containing the line item are displayed in the POS Search Table.
7. In the POS Search Table, click a transaction. The transaction data is displayed in the Data window.

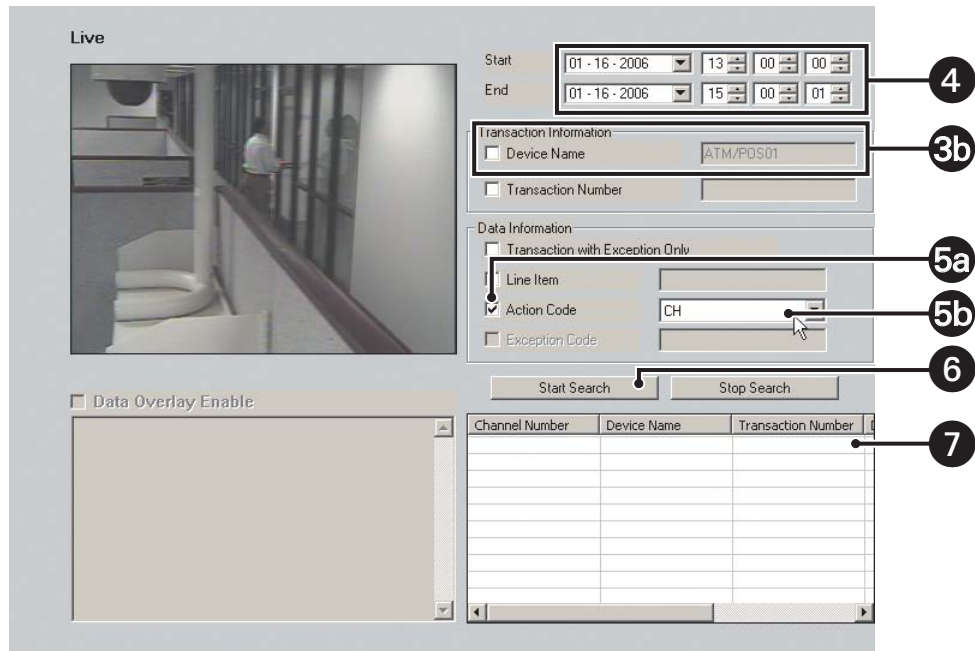


Figure 57. Searching Transactions by Action Code

PIXEL VIDEO SEARCH

The DX8100 allows a user to automatically search any 24-hour period of recorded video for changes in screen pixels. This feature can be configured to identify motion events even when motion detection has not been enabled on a camera.

The DX8100 allows sharing of time range search settings between the Thumbnail and Pixel search mode. If you initiate a Thumbnail search, you can select a preview clip and initiate a Pixel search. The Pixel search mode is based on the same time criteria as the preview Thumbnail clip.

This section describes how to search video by changes in screen pixels and includes the following topics:

- [Searching Video Based on Changes in Screen Pixels](#) on page 93
- [Viewing a Video Thumbnail](#) on page 95

SEARCHING VIDEO BASED ON CHANGES IN SCREEN PIXELS

DX8100 pixel video search is accomplished in two steps:

- Searching recorded video for changes in screen pixels.



After the search has been completed, the DX8100 displays a series of thumbnails below the search grid. Each thumbnail contains the first image of recorded video for the specified date and time range period.


NOTE: A pixel search might not detect obvious movement.

- Viewing the thumbnails.

For information about how to view the video thumbnail, refer to [Viewing a Video Thumbnail](#) on page 95.

To search video by analyzing changes in screen pixels:

1. On the DX8100 toolbar, click the Search button .
2. On the Search control, click the Pixel Search button .
3. Select a camera from the Site Tree.
4. From the drop-down box, select the date on which you want to begin your search.
5. Select the start and end times to define your search range.
6. Using your mouse, highlight the areas on the grid that you want to search for pixel changes.
 - Hold down the *left* mouse button and drag to *select* areas.
 - Hold down the *right* mouse button and drag to *clear* areas.
7. Adjust the pixel sensitivity threshold. Moving the slider to the left decreases sensitivity and moving it to the right increases sensitivity.
8. Click Start. Wait for the progress line on the status bar to return to Ready.

9. Use the  icon to show and hide the pixel grid for a clearer view in the search screen.

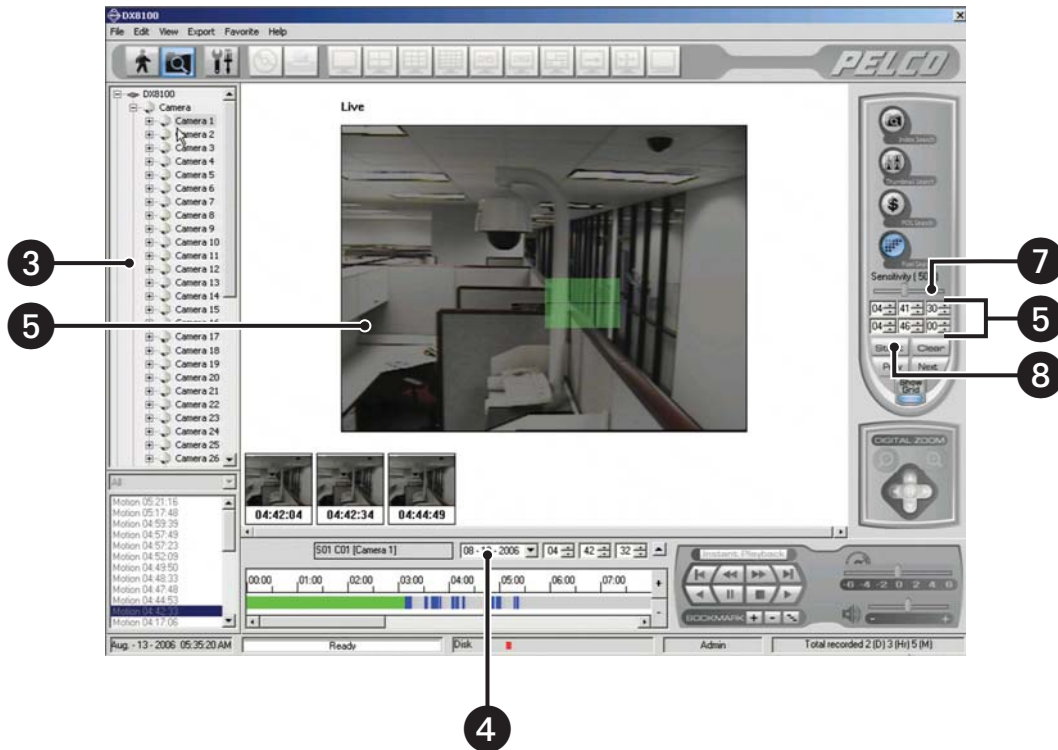




Figure 58. Pixel Search Screen

VIEWING A VIDEO THUMBNAIL

After the search has been completed, a series of thumbnails appear on the screen below the search grid. Each thumbnail contains the first image of recorded video for the listed time period.

- Double-clicking a thumbnail will cause it to begin playing.
- Click the Prev button  and the Next button  to move backward and forward through thumbnails.

To view a video thumbnail:

1. Click a thumbnail. The thumbnail's search parameters (date and time) are displayed below the search grid. The thumbnail's search start time is a few seconds ahead of the search start time you entered.

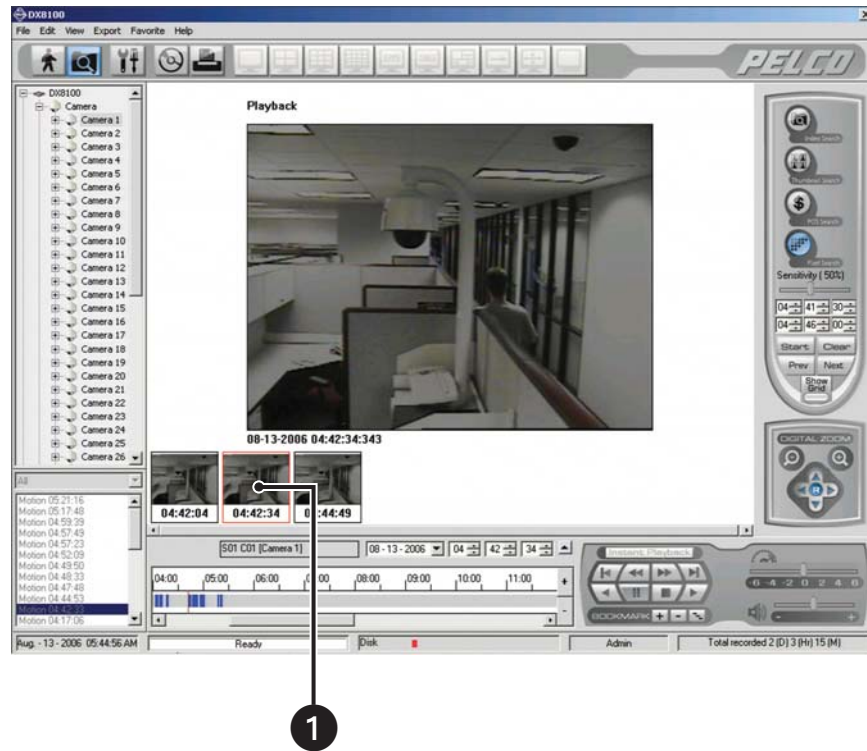






Figure 59. Thumbnail Images Marking Pixel Changes

2. To locate playback at the start of the first image, click Reverse playback button . The video scene is played back and displayed in reverse.
3. Click the Pause button  to pause the video playback when the beginning of the first recorded is reached.
4. Click the Forward button . Playback starts and the video scene is displayed.
5. Click the Clear button  to remove the thumbnail results.

WORKING WITH SPECIAL VIEW AND SEARCH METHODS

The DX8100 allows you to do the following:

- View video in the deinterlaced mode.
- View live and playback video simultaneously.
- View, search, export, and print backed up video. You must use the DX8100 Client application to view, search, export, and print backed up video. For more information, refer to the DX8100 Client Application manual.

This section describes how to use special view and search methods and includes the following topics:

- [Viewing Video in the Deinterlaced Mode](#)
- [Viewing Live and Playback Video Simultaneously](#)

VIEWING VIDEO IN THE DEINTERLACED MODE

Images recorded at 4CIF at a low frame rate per second might move or tear. In this case, you can use the View menu's Deinterlaced Image option to enhance the displayed image. In the deinterlaced mode, the DX8100 converts the recorded image and displays it at 2CIF resolution. The process removes one of the 4CIF interlaced fields (even or odd) from the 4CIF recorded image to arrive at 2CIF resolution for the displayed image. The original image is retained at the recorded 4CIF resolution.

For exported images, the DX8100 provides a global option for enabling a deinterlacing filter. In this case, the selected channel's image is exported at 2CIF resolution. This setting is effective for all channels and cannot be set for individual channels. For more information about enabling the denaturalizing filter, refer to [Enabling the Deinterlacing Filter](#) on page 101.



To view video using the deinterlaced option:

1. Click the Forward button  to start video playback.
2. On the menu bar, click View > Display deinterlaced image.

VIEWING LIVE AND PLAYBACK VIDEO SIMULTANEOUSLY

The DX8100 allows simultaneous viewing of live and playback video from a single camera source.

To view live and playback video from the same camera:

1. On the DX8100 toolbar, click the Live button .
2. Drag a camera from the Site Tree to a view panel.
3. Click the Forward button  to begin playback.
4. Drag the *same camera* from the Site Tree onto a different view panel while video is playing.

Exporting Video

Users with export access rights (Power Users and Administrators by default) can export sections of prerecorded video to magnetic or optical media. The DX8100 must be in the Playback or Search mode to export video. You cannot access Export in Live mode. To export video or still images to a CD-R/RW or DVD-R/RW, you must have Nero® Express 7 Essentials software installed on the DX8100 HVR.

This section describes how to export video and includes the following topics:




- [Exporting Bookmarked Video Regions](#)
- [Inserting and Removing a USB Flash Drive](#) on page 100
- [Enabling the Deinterlacing Filter](#) on page 101
- [Mapping and Disconnecting a Network Drive](#) on page 101
- [Performing the Export](#) on page 102
- [Stopping an Export While in Process](#) on page 108

EXPORTING BOOKMARKED VIDEO REGIONS

You can bookmark multiple regions of video along the timeline for export. Bookmarked regions are designated with start point and end point bookmarks. Multiple regions can be bookmarked along a single 24-hour timeline, but only a single channel can be exported at a time. Bookmarked regions are listed in the Export Video dialog box at the time of export.




Table Z describes the bookmark controls.

Table Z. Bookmark Controls

Button	Command	Description
	Add Bookmark	Does the following: <ul style="list-style-type: none">• Adds a red bookmark flag to mark the beginning of a start point.• Adds a gray bar to indicate the range between the start point and end point.
	Remove Bookmark	Removes the selected bookmark.
	Remove All Bookmarks	Removes all bookmarks.

CREATING BOOKMARKS

To select a region to export:

1. Make sure the HVR is in Playback or Search mode by clicking the Live button  or the Search button .
2. Click the Forward button  if you are in Live mode, or proceed to step 3 if you are in Search mode.
3. Select a camera from the Site Tree.
4. Locate the timeline slider at the *beginning* of the range you want to bookmark.

You can use the drop-down box and spinner buttons above the timeline to locate a bookmark.

5. Click . A red bookmark flag appears on the timeline.

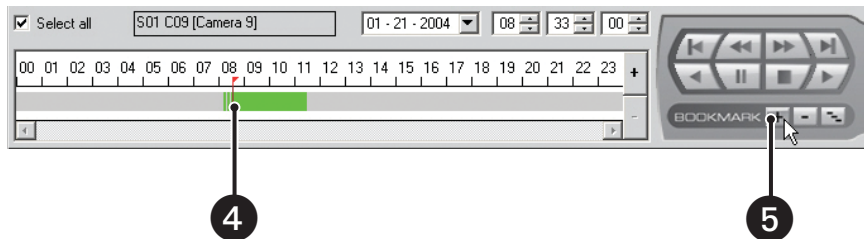


Figure 60. Setting a Starting Bookmark

6. Locate the timeline slider at the *end* of the range you want to bookmark.
7. Click the Add Bookmark button . The bookmark flag and the region between bookmarks turn gray.
Exporting a bookmarked region of video requires start and end bookmarks. If only one bookmark is set, video will not be marked for export.
8. Repeat steps 4-7 for each additional region you want to bookmark for that camera.
9. Click the Forward button if you are in Live mode, or proceed to step 8 if you are in Search mode.
10. Click the Export button and follow the directions in [Performing the Export](#) on page 102.

CLEARING BOOKMARKS

This section describes how to clear bookmarks and includes the following topics:

- [Clearing a Single Bookmark](#) on page 98
- [Clearing All Bookmarks](#) on page 98

Clearing a Single Bookmark

To clear a single bookmark:

1. Select a bookmark flag from the timeline. The bookmark flag should change to a light green color.
2. Click the Remove Bookmark button to remove the selected bookmark.

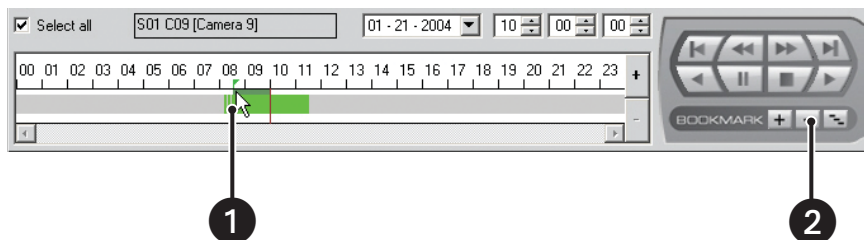


Figure 61. Removing a Single Bookmark

Clearing All Bookmarks


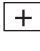
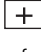
To clear all bookmarks:

- Click [Remove All Bookmarks](#).

BOOKMARKING AND EXPORTING MULTIPLE CHANNELS

The DX8100 allows you to bookmark a video region for one camera and apply that book marked time window to multiple channels. This feature is used in conjunction with the export feature. For example, if you want to export video recorded between 9:00 a.m. and 9:05 a.m. for multiple cameras, you set the bookmarks for camera 1 at 9:00 a.m. and 9:05 a.m. During the export process you can associate that same bookmarked time window with multiple cameras.

To book mark data and export video for multiple channels:

1. On the DX8100 toolbar, click the Search button . This ensures that the HVR is in the Search mode.
2. Select a camera from the Site Tree.
3. Locate the timeline slider at the *beginning* of the range you want to bookmark.
You can use the drop-down box and spinner buttons above the timeline to locate a bookmark.
4. To create book marks, do the following:
 - a. Click the Expand Bookmark button . A red bookmark flag appears on the timeline.
 - b. Locate the timeline slider at the *end* of the range you want to bookmark.
 - c. Click Expand Bookmark button . The bookmark flag and the region between bookmarks turn gray.
Exporting a bookmarked region of video requires start and end bookmarks. If only one bookmark is set, video will not be marked for export.
 - d. Repeat steps 3 and 4 for each additional region you want to bookmark for that camera.

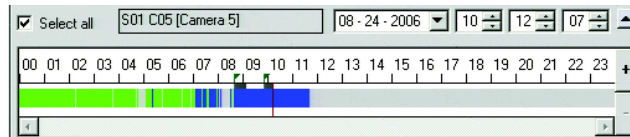



Figure 62. Book Marking Multiple Time Regions

5. Click click the Export button . The Export Video dialog box opens.
6. Do the following:
 - a. Right click the time range you want to assign to multiple channels. The Duplicate Bookmark submenu is displayed.

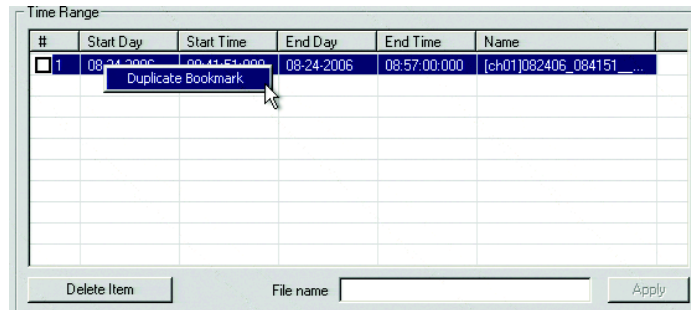


Figure 63. Selecting a Time Range for Duplication

- b. Click Duplicate Bookmark. The Select Channel dialog box opens.
- c. Click the check box for each channel to which you want to assign the book mark region.
- d. Click OK. The time range for each selected channel is displayed in the Time Range table.

7. Do the following:
 - a. In the Device panel, click the check box of the desired export device.
 - b. Click the check box for each time range you want to export.
8. Click Export.

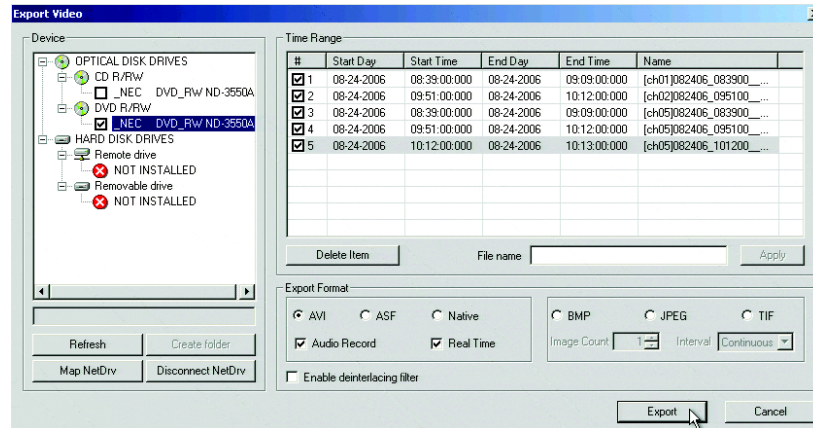


Figure 64. Selecting the Export Device and Time Ranges

INSERTING AND REMOVING A USB FLASH DRIVE

The DX8100 supports both USB 1.1 and USB 2.0 flash drives. To ensure data is not lost or corrupted when exporting data to a USB flash drive, follow the steps listed in [Removing a USB Flash Drive](#) on page 100.

This section describes how to insert and remove a USB device and includes the following topics:

- [Installing a USB Flash Drive](#) on page 100
- [Removing a USB Flash Drive](#) on page 100

INSTALLING A USB FLASH DRIVE

This section describes how to install a USB flash drive. To install a USB flash drive into the DX8100:

1. Insert the USB drive into the USB 2.0 port on the HVR's front panel.
2. Wait five seconds while the DX8100 recognizes and automatically installs the device.

REMOVING A USB FLASH DRIVE

You can remove a USB device within the DX8100 environment. In this case, you do not have to exit to the Windows environment.

WARNING: Improperly removing a USB drive can cause data to be lost or corrupted.





To remove the USB flash drive from the DX8100:

1. Click > File Unplug/Eject Hardware. The Unplug or Eject Hardware dialog box opens.
2. Select the USB flash drive in the Hardware devices list.
3. Click Stop. The Stop a Hardware device dialog box opens.
4. Select the USB device.
5. Click OK.
6. Wait for the DX8100 to respond with a message stating that it is safe to remove the USB device from the DX8100. Removing a USB flash drive before the DX8100 acknowledges that it is safe to do so, might result in lost or corrupted data.
7. Remove the USB flash drive.

ENABLING THE DEINTERLACING FILTER

Images recorded at 4CIF at a low frame rate per second might move or tear. The DX8100 provides a global option for enabling deinterlacing filtering to enhance the exported image for 4CIF recorded channels. In this case, the exported image is converted to 2CIF resolution. This setting is effective for all channels, and cannot be set for enabling individual channels. For more information about viewing video in the deinterlaced mode, refer to [Viewing Video in the Deinterlaced Mode](#) on page 96.

To enable the deinterlacing filter:

1. Make sure the HVR is in Playback or Search mode by clicking the Live button  or the Export button .
2. Click  if you are in Live mode, or proceed to step 3 if you are in Search mode.
3. Click . The Export Video dialog box opens.
4. From the Export Format area, select the “Enable deinterlacing filter” check box.

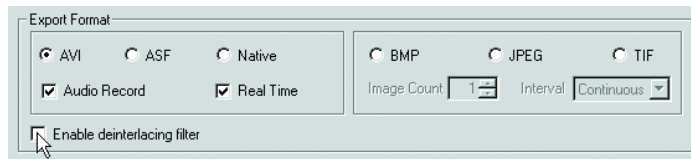


Figure 65. Enabling the Deinterlacing Filter from the Export Video Dialog Box

MAPPING AND DISCONNECTING A NETWORK DRIVE





You can export sections of prerecorded video to a network drive. The DX8100 allows you to map to or disconnect from a network drive. In this case, you must use the IP address of the target drive. The DX8100 allows you to use the host name of the target device. To do so, you must enable NetBIOS option in the Windows environment. You need to know what letters are already assigned to drives and the path to the folder you want to map.

This section describes how to map to and disconnect from a network drive, including the following topics:

- [Mapping a Network Drive](#)
- [Disconnecting a Network Drive](#)

MAPPING A NETWORK DRIVE

To map a network drive:

1. Make sure the HVR is in Playback or Search mode by clicking the Live button  or the Export button .
2. Click the Forward button  if you are in Live mode, or proceed to step 3 if you are in Search mode. Click the Export button . The Export Video dialog box opens.
3. Click Map NetDrv. The Map Network Drive dialog box opens asking for a drive letter and path.
4. In the Drive drop-down box, select a drive letter that is not being used.
5. Type the path in the Folder drop-down box. (For example, type **\\IP_address_of_server\folder_name.**)
6. (Optional) Click the “Reconnect at logon” box if you do not want the mapped drive to remain connected each time you logon.

- Click Finish. The newly mapped drive is added as a remote drive and is displayed in the Device area. The mapped drive can now be accessed just like a local drive.

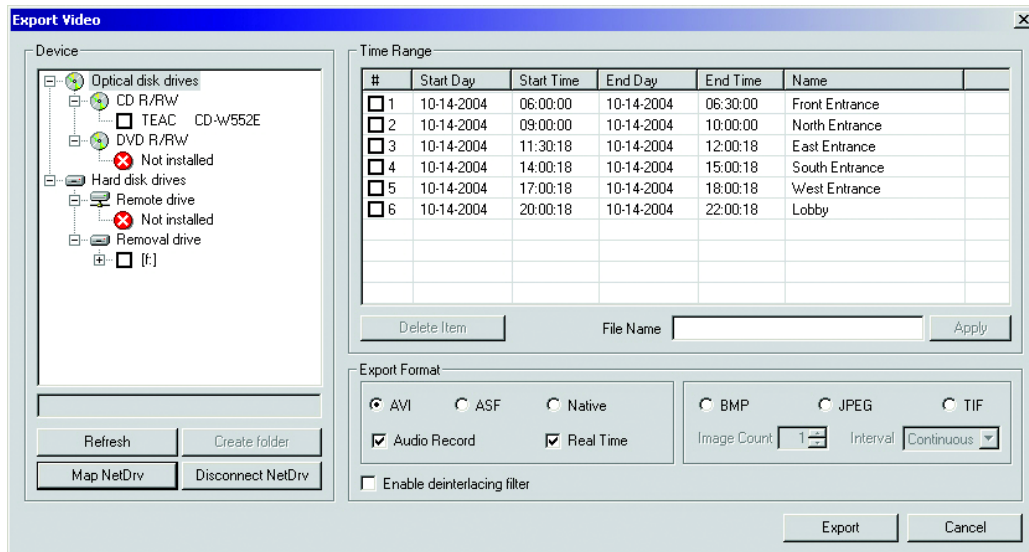




Figure 66. Export Video Dialog Box

DISCONNECTING A NETWORK DRIVE

To disconnect a network drive:

- On the DX8100 toolbar, click the Search button . The DX8100 is in the Search mode.
- Click the Export button . The Export Video dialog box opens.
- Click Disconnect NetDrv. The Disconnect Network Drive dialog box opens.
- Select the network drive that you want to disconnect.
- Click OK. The drive is disconnected and removed from the Export Video dialog box Device area.





PERFORMING THE EXPORT

This section describes how to export data and includes the following topics:

- [Starting an Export Process](#)
- [Changing a Bookmarked Time Range](#) on page 104
- [Assigning a Custom Export Video File Name](#) on page 104
- [Selecting the Export Format](#) on page 106
- [Exporting a Sequence of Still Images](#) on page 107
- [Finalizing an Export Process](#) on page 108
- [Stopping an Export While in Process](#) on page 108
- [Working with DX8100 backed up Video](#) on page 109

STARTING AN EXPORT PROCESS

To start the export process:

- Make sure the HVR is in Playback or Search mode by clicking the Live button  or the Export button .
- Click the Forward button  if you are in Live mode, or proceed to step 3 if you are in Search mode.
- Click the Export button . The Export Video dialog box opens.
- Click the plus (+) sign next to a drive in the Device list. Available devices are indicated by a check box to the left of the device name.

5. Select the check box of the desired device. If you choose a remote device, select the drive and folder path where you would like to store the exported file. You can also click the Browse button to access the file system for the appropriate folder.

If your DX8100 is connected to a network that supports shared folders and drives, you can map a network drive from within the Export Video dialog box. For more information, refer to [Mapping and Disconnecting a Network Drive](#) on page 101.

Table AA describes the available devices.

Table AA. Available Backup Space

Type	Description
Optical drives	The DX8100 supports the following drives: <ul style="list-style-type: none"> • CD-R • DVD-R
Hard disk drives	The hard disk drive can be any of the following: <ul style="list-style-type: none"> • Local drives • Remote drives
Removable drives	USB flash drives

6. Select the check box of the video time range you want to export. You can export multiple time ranges simultaneously. For more information, refer to [Changing a Bookmarked Time Range](#) on page 104.
7. Click in the File Name box, and then type the file name for each selected video time range. You can accept the default file name assigned to the time range. For more information, refer to [Assigning a Custom Export Video File Name](#) on page 104.
8. Select the export format. For more information, refer to [Selecting the Export Format](#) on page 106.
9. Click Export.

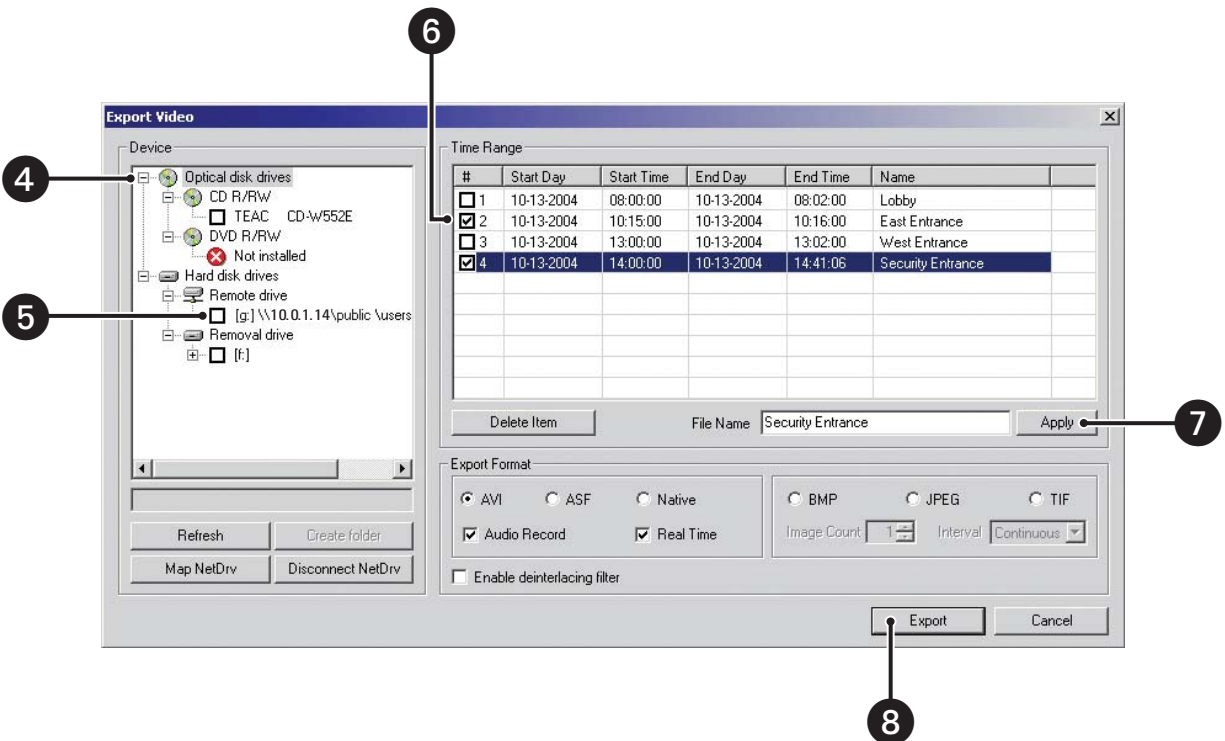


Figure 67. Exporting Selected Video

CHANGING A BOOKMARKED TIME RANGE

To change a bookmarked time range or create a new time range to be exported:

1. Select the desired row in the Time Range table.
2. Double-click the Start Day field, and then use the spinner buttons to set the start date for the export.
The start days and times cannot be set later than end days and times.
3. Double-click the Start Time field, and then use the spinner buttons to set the start time for the export.
4. Double-click the End Day field, and then use the spinner buttons to set the end date for the export.
5. Double-click the End Time field, and then use the spinner buttons to set the end time for the export.
6. Select the check box next to each time range you would like to export.

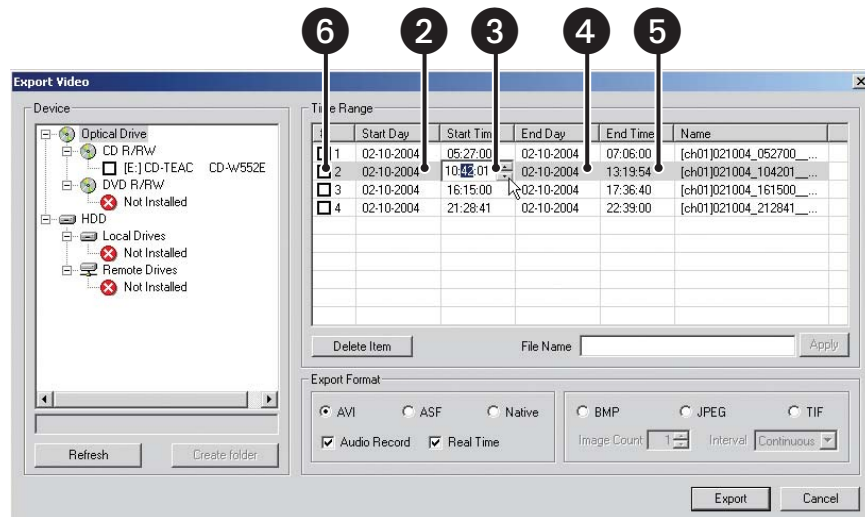


Figure 68. Export Time Range

ASSIGNING A CUSTOM EXPORT VIDEO FILE NAME

By default, the DX8100 assigns a file name to each time range. When the video channel selected is exported, the file is assigned the name appearing in the Name column.

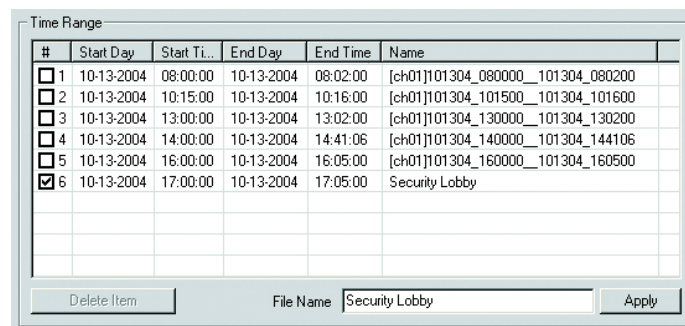


Figure 69. Default File Names

The default filename is constructed from the information displayed in the Start Day, Start Time, End Day, and End Time columns.

To assign a custom file name for a time range:

1. Verify that the check box of the row you want to rename is selected.
2. Enter a file name for the file you want to export. (Export file names follow standard Windows file-naming conventions.)
3. Click Apply. The Apply button updates the Name field.

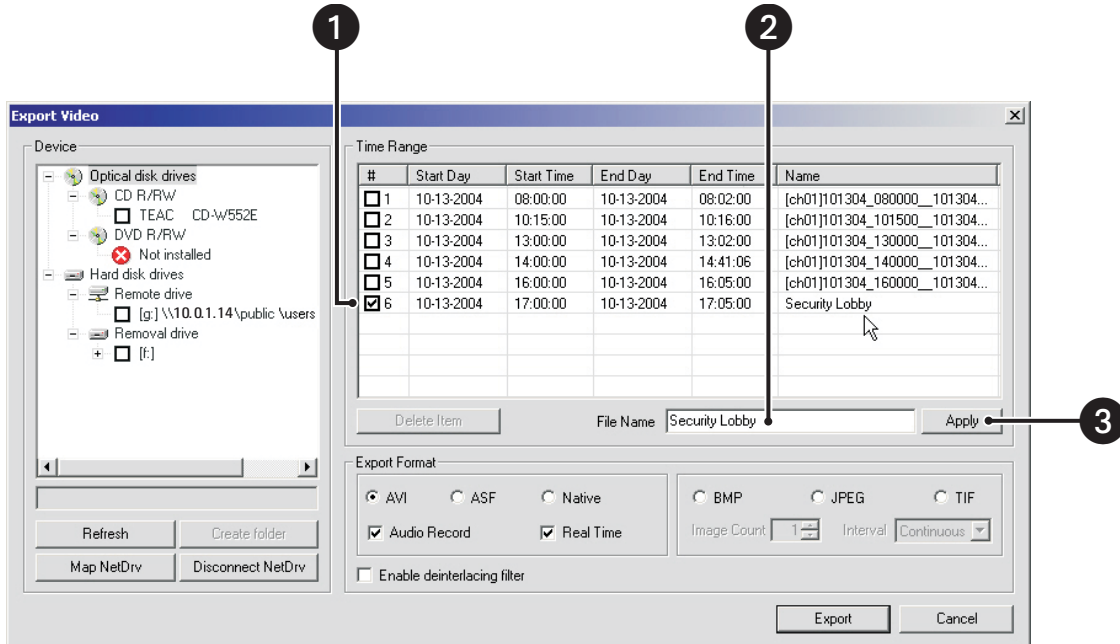


Figure 70. Renaming Export Time Ranges

SELECTING THE EXPORT FORMAT

The DX8100 allows you to select the export format. Table AB describes the available export formats.

- **Native format:** When exporting video in the native format, the DX8100 embeds a digital watermark in the video stream for the purpose of authentication. Watermarking ensures that an image has not been edited or damaged after it has been recorded. The watermark is an encrypted, digital signature embedded in the video stream during the compression stage, protecting the video from the moment of creation. The DX8100 Viewer software is capable of reading a DX8100 watermark and verifying the originality of the video.
- **AVI or ASF format:** Video exported in AVI or ASF format can be viewed using standard viewer software such as Windows Media Player.

NOTE: Refer to the DX8100 product specification or DX8100 Client Operation/Configuration manual for recommended computer requirements for playing back exported video.

When exporting video in the native format to a CD or DVD device, the DX8100 will automatically include the DX8100 Viewer application along with the video. This viewer is designed to play a variety of still image, video, and audio media formats, including the native DX8100 format. The DX8100 Viewer application will automatically run each time a CD or DVD created by the DX8100's export feature is inserted into a Windows-based computer. To ensure that the viewer software runs automatically after the disk has been inserted, verify that the auto-run feature of your computer's optical drive has not been disabled.

Table AB. Export Formats

Format	Description
AVI	Saves video sequence as a standard Windows video format.
ASF	Saves video sequence as a standard Windows media file.
Native	Saves video sequence using Pelco's engineered compression format. Native format provides increased compression and smaller file sizes.
BMP	Saves a still image file in standard Windows bitmap format. Only the first frame of the video sequence is saved.
JPEG	Saves a still image file in JPEG format. Only the first frame of the video sequence is saved.
TIF	Saves a still image file in TIF format. Only the first frame of the video sequence is saved

To select the export format:

- From the Export Video dialog box, select the radio button of the file format you want to export.

EXPORTING A SEQUENCE OF STILL IMAGES

Still image formats export the first frame of a bookmarked region, and then a single frame for each time interval until the number of images specified has been exported. For example, consider exporting a six-hour bookmarked region of video with an image count of 100 and a time interval of 3 seconds. The resulting export will include the first frame of the bookmarked region followed by 99 additional images taken at three second intervals. The first exported image will be the first frame of the bookmarked region and the last image will be the frame taken at 300 seconds into the bookmarked region.

To export a sequence of still images:

1. Select a still image format. Options are BMP, JPEG, and TIF.
2. Select the number of images (1-999) you want to save in the sequence.
3. Select the time interval between each saved image in the sequence. Options are as follows:
 - Continuous
 - 0.5 seconds
 - 1 second
 - 2 second
 - 3 second
 - 4 seconds
 - 5 seconds

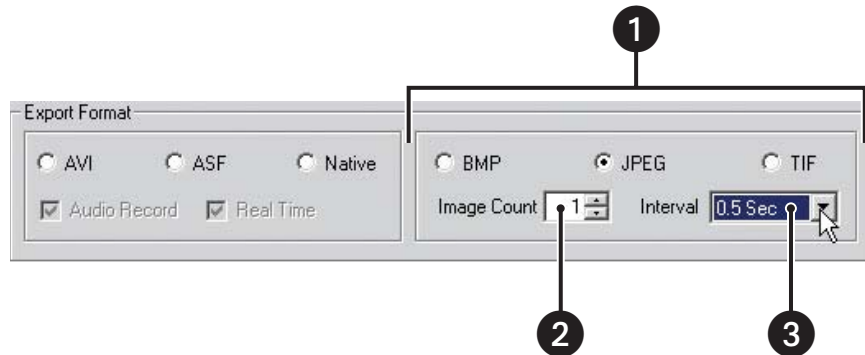


Figure 71. Still Image Export Formats

FINALIZING AN EXPORT PROCESS

This section describes how to finalize an export process. The following guidelines are applicable:

- Audio export is available only with DX8100 native, AVI, and ASF video formats.
- Real Time setting applies only to DX8100 native, AVI, and ASF video formats.
- When the Real Time check box is selected, the DX8100 will export video so it can be played back in real time (30 fps) for the same length of time as the original recording. For example, if video was recorded at 1 fps, this means the DX8100 will insert 29 null frames for every one frame of actual video. Thus, one minute of video recorded at 1 fps (60 frames total) will play back for one minute at 30 frames per second (60 frames of actual video interspersed with 1,740 null frames). If the Real Time check box is not selected, one minute of video recorded at 1 fps will play back in two seconds in real time.

Figure 72 illustrates the two video streams: 1) one padded with null frames to match the actual time duration and 2) another stream without null frames.



Figure 72. Real Time Versus Non-Real Time Export

To finalize the export process:

1. Make sure that the export media selected is inserted in the drive unit that the drive is ready.
2. In the Time Range table, click selection box for each backed-up video time range you want to export.
3. In the Export Format section, do the following:
 - a. Click the Audio Record check box to include recorded audio.
 - b. Click the Real Time check box to export video using standard clock time.
4. Click Export to export video data.

STOPPING AN EXPORT WHILE IN PROCESS

Once an export operation has begun, a user can easily stop it by interrupting or canceling the operation from the Export menu on the main or search screens. Interrupting an export simply stops the progress of the export while keeping all current video information intact. Canceling an export will delete any video data exported during the operation, as well as end the export itself.

This section describes how to stop an export process and includes the following topics:

- [Retaining Video When Stopping an Export Process](#)
- [Deleting Video Data When Stopping an Export Process](#)

Retaining Video When Stopping an Export Process

To halt an export that is in process while retaining current video data stored:

- From the DX8100 menu bar, choose Export > Interrupt Export.

Deleting Video Data When Stopping an Export Process

To halt an export that is in process and delete any current video data stored:

- From the DX8100 menu bar, choose Export > Cancel Export.

WORKING WITH DX8100 BACKED UP VIDEO

The DX8100 allows you to view, search, export, back up, and print backed up video. To do so, you must use the DX8100 Client application.

For more information about viewing backed up video, refer to *Viewing and Searching Backed Up Video* in the Client Applications Help or the Client Applications manual.

Logs and Health Status

This section describes how to work with the system log and system health status feature and includes the following topics:

- [Viewing Logs from the Application Window](#)
- [Viewing System Health Status](#) on page 112

VIEWING LOGS FROM THE APPLICATION WINDOW

You can access the system logs from the application window or from the System setup page. For information about working with logs from the System setup page, refer to [Using System Logs](#) on page 222.

NOTE: The UPS area is reserved for future use.

To access system logs:

1. From the DX8100 menu bar, click View > Log. A submenu is displayed listing the various commands.

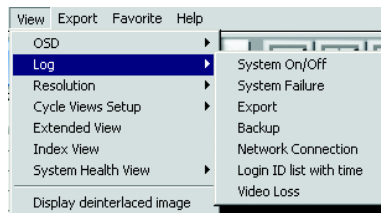


Figure 73. Accessing Log Commands from the Application Window

2. From the submenu, click a command. The Log View dialog box opens. If there are no log events for the specific log command you selected, the Log View message box is displayed.

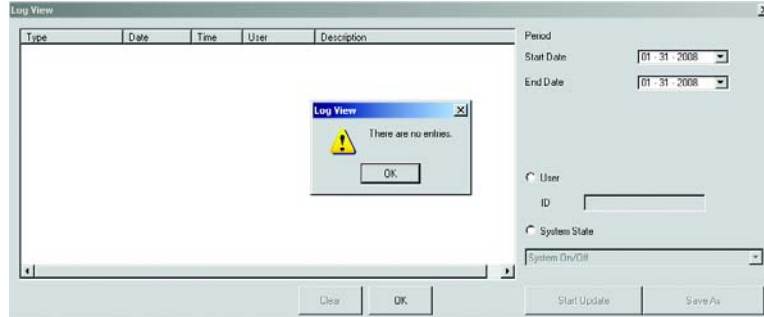


Figure 74. Log View Dialog Box_C2630MB

3. Click OK.
4. In the Period section, do the following:
 - a. Click the Start Date drop-down arrow, and then select a start date.
 - b. Click the End Date drop-down arrow, and then select an end date.

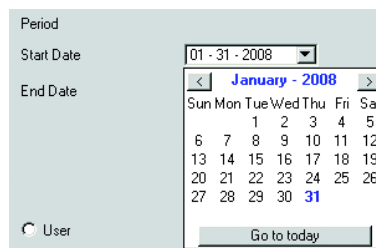


Figure 75. Period Start and End Dates

5. Do one of the following:
 - **Search by user ID:** Click User and type the user's login ID in the text entry box.
 - **Search by system state:** Click System State, and then click the drop-down arrow to select a log.
 6. Click Start Update. If the system logged events for search criteria, those events are displayed in the Log View window.
- Figure 76 shows all the events that occurred for user ID Admin.

Type	Date	Time	User	Description
User Change	01-31-2008	14:21:29	Admin	Logout: [10.80.2.254]trumbo
On Connect	01-31-2008	15:02:06	Admin	IP Address is [10.80.2.254]
On Disconnect	01-31-2008	14:57:27	Admin	IP Address is [10.80.2.254]
On Connect	01-31-2008	14:28:31	Admin	IP Address is [10.80.2.254]
On Disconnect	01-31-2008	14:21:29	Admin	IP Address is [10.80.2.254]
User Change	01-30-2008	18:23:11	Admin	Login Success:[10.80.2.254]trumbo
On Connect	01-30-2008	18:22:25	Admin	IP Address is [10.80.2.254]
Video Loss	01-29-2008	16:56:42	Admin	Channel 3 Video Loss
Video Loss	01-29-2008	16:52:00	Admin	Channel 6 Video Loss
Video Loss	01-29-2008	16:52:00	Admin	Channel 8 Video Loss
Video Loss	01-29-2008	16:47:21	Admin	Channel 4 Video Loss
Video Loss	01-29-2008	16:47:21	Admin	Channel 7 Video Loss
Video Loss	01-29-2008	16:39:50	Admin	Channel 5 Video Loss
Video Recovery	01-29-2008	16:13:04	Admin	Channel 8 Video Recovery
Video Recovery	01-29-2008	16:13:04	Admin	Channel 6 Video Recovery
Video Loss	01-29-2008	16:13:00	Admin	Channel 6 Video Loss
Video Loss	01-29-2008	16:13:00	Admin	Channel 8 Video Loss
Video Recovery	01-29-2008	16:12:59	Admin	Channel 8 Video Recovery

Figure 76. User ID Log Events

Figure 77 shows the log events that occurred for System On/Off.

Type	Date	Time	User	Description
System On	01-29-2008	16:04:38	Guest	
System Off	01-29-2008	16:01:59	Admin	
System On	01-28-2008	06:57:15	Guest	
System Off	01-28-2008	06:31:28	Admin	
System On	01-28-2008	00:04:27	Guest	
System Off	01-28-2008	00:01:00	Admin	A scheduled reboot was performed.

Figure 77. System On/Off Log Events

7. To save the log search results to a file, do the following:
 - a. Click Save As. The DX8100 Save As Log Info dialog box opens.
 - b. Select a destination folder, and then type the name of the file.
 - c. Click Save. The file is saved.
8. Do one of the following:
 - To remain in the Log View dialog box and run another report, click Clear.
 - To exit the Log View dialog box, click OK.

VIEWING SYSTEM HEALTH STATUS

The system health feature allows you to view the health status and configure low and high operating thresholds for various system devices. If a threshold is exceeded, the system displays an alert notification. You can elect to open a subsequent event log, which provides a more detailed description about the event. The system devices are as follows:

- CPU temperature
- Fan speed
- Power supply status
- Self-Monitoring Analysis and Reporting Technology (SMART) for hard disk drive status
- Network information
- Uninterruptible power source (UPS) status when connected

NOTE: The UPS area is reserved for future use.

An alert notification also appears on the remote client computer. For this to occur, the remote client must be connected to the server to receive the notification.

WORKING WITH SYSTEM HEALTH STATUS VIEW

To access the System Health dialog box:

1. From the DX8100 menu bar, click View > System Health View.

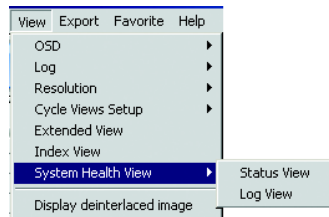


Figure 78. System Health View Submenu

2. On the submenu, select Status View. The System Health dialog box opens.

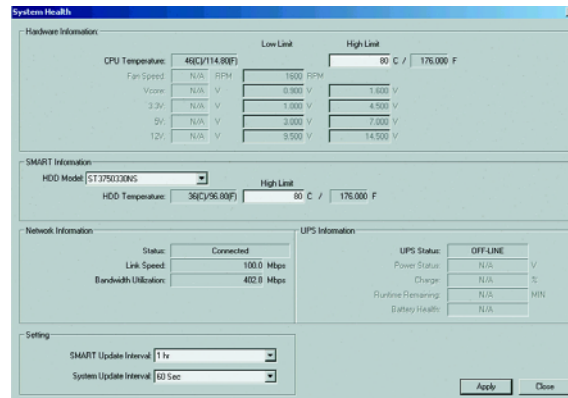


Figure 79. System Health Dialog Box

3. To set a threshold for a device/function, do the following:
 - a. Click the box for the device/function.
 - b. Enter the value you want.
 - c. Click Apply.
 - d. Click Close to exit the dialog box.

WORKING WITH SYSTEM HEALTH LOG VIEW

The System Health Log allows you to view a history of the events that have occurred. A calendar function allows you to use a date range to display health status events.

To access the System Health Log:

1. From the DX8100 menu bar, click View > System Health View.
2. On the submenu, select Log View. The System Health Log opens.

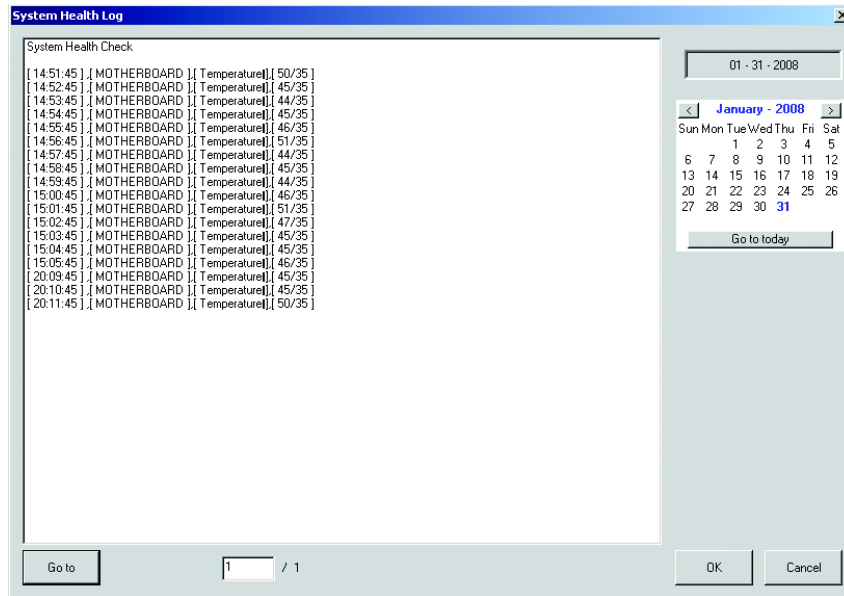


Figure 80. System Health Log

3. To display logged events, do the following:
 - a. In the calendar, click the left and right arrow buttons to select a month.
 - a. Click the date.
4. To navigation to the data you want to view, do the following:
 - Click "Go to today" to display information about the current date.
 - Click "Go to" to advance to subsequent pages.
5. Click OK to exit the System Health Log.

Setting Up the DX8100

Only a single user with Administrator or Power User access is allowed to access a DX8100's Setup mode at one time. When connected to a network supporting multiple HVRs and clients, users with Administrator access override and block Power Users. If two users with the same access level attempt to enter Setup mode simultaneously, the DX8100 will allow access to setup features on a first-come, first-served basis. Unavailable setup options will be grayed out.


This section describes the Setup Mode and includes the following topics:

- [Accessing the Setup Mode](#)
- [Understanding the Setup Dialog Box](#) on page 115
- [Camera Setup](#) on page 116
- [IP Camera Setup](#) on page 122
- [Link Setup](#) on page 132
- [Schedule Setup](#) on page 143
- [Setting Up Network Properties](#) on page 168
- [Data Backup Setup](#) on page 201
- [User Setup](#) on page 208
- [Site Setup](#) on page 214
- [System Setup](#) on page 218
- [External Monitor Setup](#) on page 228
- [Emergency Notification Setup](#) on page 235
- [Emergency E-Mail Notification Setup](#) on page 238

ACCESSING THE SETUP MODE

The Setup Mode is accessed from the DX8100 toolbar by clicking the [Setup](#) icon. When clicked, the Setup icon opens the Setup dialog box in the DX8100 view panel. Major configuration categories are displayed on individual tabbed pages. Each configuration page contains all of the options and parameters for the respective functions, which allows you to customize how the DX8100 operates for your particular application. To access a setup page, click the icon displayed on the right side of the view panel.

The Setup dialog box allows Administrators and Power Users access to the DX8100's setup functions. However, only Administrators can define user names and passwords for new users.

To access the Setup Mode, click the Setup button  on the DX8100 toolbar. The Setup dialog opens to the Camera page.

To access a Setup page, click a setup button in the DX8100 Setup dialog box. The selected setup page appears.

For information about the Setup dialog, refer to [Understanding the Setup Dialog Box](#) on page 115.

UNDERSTANDING THE SETUP DIALOG BOX

The Setup dialog box opens in the DX8100 view panel to the default Camera page. You can only view video in the Camera page. You must exit the Setup dialog box to access the DX8100 functions in the main window. Figure 81 shows the parts of the Setup dialog.

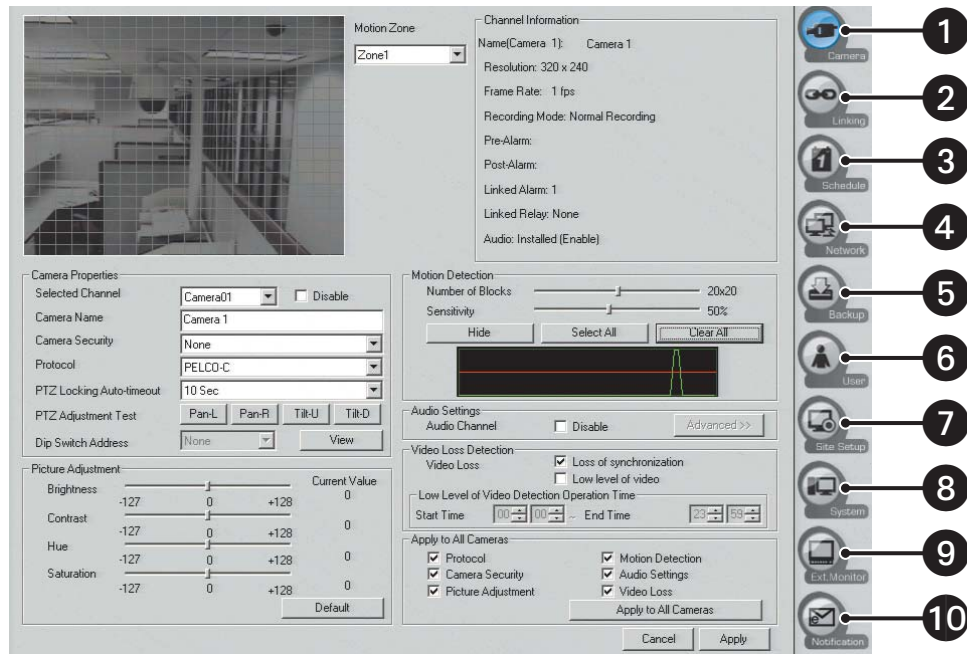


Figure 81. Parts of the DX8100 Setup Dialog Box

Table AC describes the parts of the Setup dialog.

Table AC. Parts of the DX8100 Setup Dialog Box

Item	Button	Part	Description
1		Camera	Click the Camera button to configure cameras. Available options are PTZ functions, motion detection, picture adjustment, audio, and video loss detection settings.
2		Linking	Click the Linking button to configure relays and alarms, associate relays and alarms with cameras, link relays to alarms, and link cameras to other cameras.
3		Schedule	Click the Schedule button to build custom recording schedules, set image resolution, frame rate, and image quality, and configure relay settings.
4		Network	Click the Network button to set up the network configuration and communication port settings.
5		Backup	Click the Backup button to configure and perform backups.
6		User	Click the User button to add, delete, or change user accounts.
7		Site	Click the Site Setup button to add, delete, and configure additional DX8100 Series HVRs.
8		System	Click the System button to set up additional system options.
9		Ext. Monitor	Click the Ext. Monitor button to configure an additional display monitor. (This button appears only if the optional display card has been installed.)
10		Notification	Click the Notification button to configure emergency agent and e-mail notification options.

CAMERA SETUP

Up to 32 video cameras can be connected to the unit. Only an Administrator or Power User can configure cameras.



This section describes how to setup the camera and includes the following topics:

- [Basic Camera Setup](#)
- [Motion Detection Setup](#) on page 118
- [Audio Setup](#) on page 119
- [Configuring Video Loss Detection](#) on page 121
- [Applying Settings to All Cameras](#) on page 122
- [IP Camera Setup](#) on page 122

BASIC CAMERA SETUP

This section describes how to set up an analog camera. For information about setting up an IP camera, refer to [IP Camera Setup](#) on page 122.

To set up camera picture and PTZ options:

1. Do one of the following:
 - On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
 - If the Setup dialog box is already open, click the Camera button . The Camera page is displayed.
2. In the Camera Properties section, do the following:
 - a. Select a camera from the Selected Channel drop-down box. Alternately, you can click a camera in the Site Tree to select it.
 - b. Verify that Local Camera is displayed in the associated Selected Channel drop-down box.
 - c. (Optional) To disable an analog camera, select Disable in the associated Selected Channel drop-down box.
 - d. Enter an optional new name in the Camera Name box for the camera. Camera names can be up to 32 characters long and can include spaces and special characters. The Camera Name box cannot be left blank or have any spaces. If a valid name is not entered in the Camera Name box when you click Apply, the previous name is displayed.
 - e. Set camera security level. The default security levels are as follows:
 - **None:** The camera can be viewed by all users.
 - **Low:** The camera can be viewed by all users except the Guest account.
NOTE: If you do not want video from a low security level camera to be viewed by the Guest user, set the security level for that cameras to medium or higher.
 - **Medium:** The camera can be viewed by users with Standard User access and higher.
 - **High:** The camera can be viewed by users with Power User access and higher.
 - f. In the Protocol drop-down box, select the appropriate PTZ protocol for the camera, or select No PTZ if the selected camera does not support PTZ functions. Some of the supported protocol options are as follows:
 - NO PTZ: Disables all PTZ functions for the current camera
 - PELCO-C: Coaxitron
 - PELCO-D: Pelco engineered
 - PELCO-P: Pelco engineered
 - SAMSUNG™ (V2.0)
 - PANASONIC®
 - VICON®
 - KALATEL™
 - Honeywell™ (HSD251)
 - American Dynamics™
 - Phillips® (TC8560, TC700 Series)
 - LG® (v1.0)

You must configure one of the RS-422/RS-485 PTZ ports for Spectra for Coaxitron to function. For more information, refer to [Setting Up RS-422/RS-485 Communication Port Properties](#) on page 180.

- g. Do the following:
- (1) In the PTZ Locking Auto-timeout drop-down box, select an appropriate timeout value. Timeout values can be set between five and 60 seconds. The default value is 10 seconds.

Because the DX8100 Series HVR is designed to operate in a networked environment, it is possible that multiple users may attempt to simultaneously control the PTZ features of a single camera. To minimize potential conflicts, only one user at a time is allowed to control the PTZ features of a camera. PTZ control is made available on a first-come, first-served basis. Once a user gains control of a camera's PTZ features, all other users are locked out. All other users must wait until the controls for that device have been left idle for the amount of time configured for that camera, as specified in the PTZ Locking Auto-timeout drop-down box.

- (2) To perform a PTZ test, click Pan-L (left), Pan-R (right), Tilt-U (up), and Tilt-D (down), to verify that the camera responds to PTZ commands.
- h. Set the selected camera address as follows:
- (1) In the Dip Switch Address drop-down box, select an address from the available addresses. If the selected camera's protocol is set to NO PTZ or PELCO-C, the DIP Switch Address drop-down box is unavailable. In this case, the camera's dip switch setting cannot be set using software.

This option is available for cameras and protocols that support software-configured addresses. Only one address can be assigned per camera. The DX8100 displays an error message if you attempt to assign the same address to different cameras.

- (2) To view the camera DIP switch address setting for all attached local cameras, click View. The DIP Switch Address View dialog box opens. The assigned DIP switch setting for all attached cameras is displayed.
3. In the Picture Adjustment section, adjust picture properties by moving sliders for Brightness, Contrast, Hue, and Saturation.
- As you adjust the picture properties of a camera on the local HVR, changes will be reflected immediately in the view area near the top of the screen. Changes made to cameras at a remote site will not appear in the view area until you click Apply.

4. Click Default to return all picture property settings to the normal state.

You can click the Hide/Show button to clear the view area to get a better look at your picture property changes. Refer to step 2 in [Motion Detection Setup](#) on page 118.

5. Click Apply.

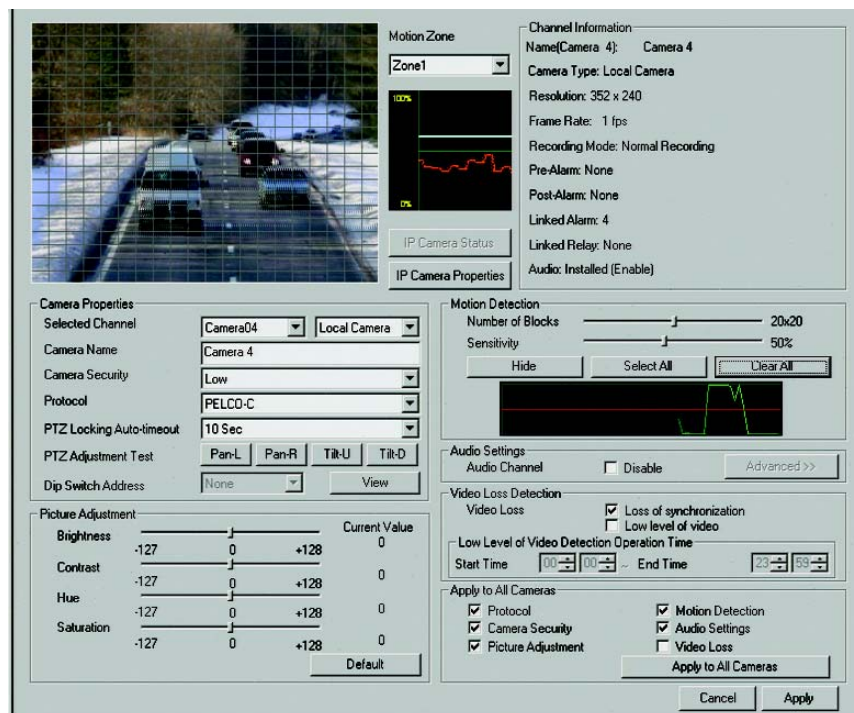


Figure 82. Camera Page

MOTION DETECTION SETUP

Up to five motion detection profiles can be defined for each camera. When the DX8100 is set to record motion detection, any motion sensed in the selected zone will be recorded on that channel. Motion detection can also be used to trigger relays, PTZ presets, and the recording of multiple cameras. Refer to [Schedule Setup](#) on page 143 and [Link Setup](#) on page 132 for more information.

To define motion detection profiles for the selected camera:


1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
2. To set up the motion grid, do the following:
 - a. Select the motion zone (1-5) from the drop-down box.
 - b. Click the Hide/Show button to either hide or display the motion grid.
 - c. Move the Number of Blocks slider to change the grid size of the motion overlay.
3. Define the area for motion detection as follows:
 - a. Click Clear All to remove the currently defined motion detection area.
 - b. Click Select All to enable motion detection for the entire viewable area.
 - c. Hold down the *left* mouse button and drag to *select* areas.
 - d. Hold down the *right* mouse button and drag to *deselect* areas.
4. In the Motion Detection section, move the Sensitivity slider to adjust motion sensitivity. Moving the slider to the left decreases the sensitivity; moving the slider to the right increases the sensitivity. The motion sensitivity window provides a visual indicator that helps you set the sensitivity to the correct level, so that erroneous motion events caused by wind or other disturbances are avoided.
 - Figure 83 shows the position of the red sensitivity indicator at a low sensitivity setting. In this case, a large motion level is needed to cause the green motion indicator to exceed the red sensitivity indicator.



Figure 83. Low Sensitivity Level

- Figure 84 shows the position of the red sensitivity indicator at a high sensitivity setting. In this case, a low motion level will cause the green motion indicator to surpass the red sensitivity indicator.

 


Figure 84. High Sensitivity Setting Level

- Figure 85 shows the position of the red sensitivity indicator at a medium 50% sensitivity setting (default). In this case, a motion event is large enough to cause the green motion indicator to surpass the red sensitivity indicator.

 


Figure 85. Adequate Sensitivity Level

5. Click Apply.

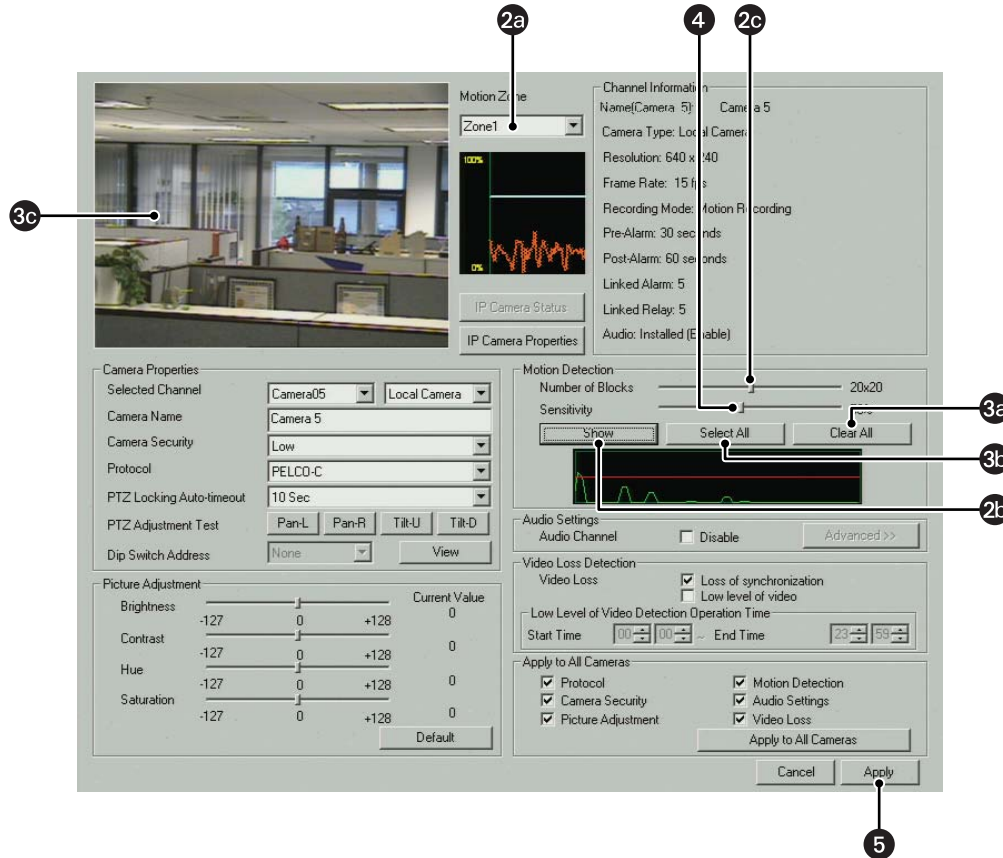


Figure 86. Camera Motion Detection Setup

AUDIO SETUP

The DX8100 server supports two audio configurations: standard audio and optional expanded audio. Both of these configurations allow you to configure individual camera channels to listen to and record live audio. You can monitor live audio at a local server or listen to live audio from a remote DX8100 server or client system. You can play back audio recorded by a camera channel. For information about listening to live audio at the server or client system, refer to [Using the KBD300A Keyboard](#) on page 66.

NOTE: Live audio is not supported for IP cameras.

- Standard audio input:** The DX8100 provides two standard audio inputs: Line In (stereo), Mic In (mono), and one audio output. The standard audio inputs are available by default if the optional audio option card is not installed. If the optional audio card is installed, the standard audio inputs are disabled.

The standard audio connections are described as follows:

 - **Line In (stereo):** A 2-channel stereo input (left and right channel) allows you to connect up to two external audio sources. You can assign a specific camera to record video in association with each audio channel. For example, you can assign camera 2 to the left audio channel and camera 32 to the right audio channel.
 - **Mic In:** Accepts one audio input. You can assign one camera to record video in association with the audio input.
 - **Audio output:** Allows you to connect an audio output device, such as an amplifier, to listen to recorded video and audio simultaneously.
- Optional expanded audio input:** To use the DX8100 expanded audio feature, the optional DX8100-AUD audio card must be installed. You can determine if the audio card is installed by checking the Audio option status in the Channel Information section of the Camera page. The Audio status is one of the following:
 - **Not installed:** If the optional audio card is not installed, the Advanced button in the Audio Settings area is available.
 - **Installed (enabled):** If the optional audio card is installed, the Advanced button in the Audio Settings area is not available.

The DX8100 compresses audio data to save space. In this case, recorded audio that may not be of the same quality as live audio. Consult your Pelco sales representative for more information regarding the DX8100-AUD option.


This sections describes how to setup the audio feature and is organized into the following sections:

- [Setting Up the Standard Audio Options](#)
- [Setting Up the Expanded Audio Options](#) on page 121
- [Listening to Live Audio at the Server](#) on page 49

Setting Up the Standard Audio Options

By default, the DX8100 supports two standard audio inputs if the expanded audio card is not installed. If the expanded audio card is installed, the two standard audio inputs are disabled.

To set up the standard audio options:

1. Connect the audio input source to the DX8100. For information about connecting an audio source to the DX8100, refer to the DX8100 Installation manual.
2. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
3. In the Channel Information area, verify that expanded audio option is not installed. This is indicated by the label Audio: Not Installed.

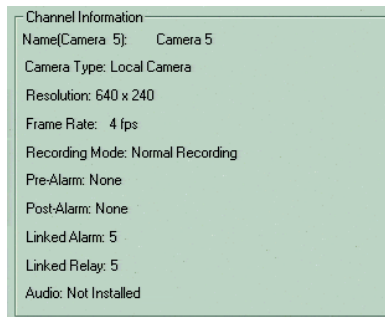


Figure 87. Audio Option Not Installed

4. In the Audio Settings area, click Advanced >>. The AUX Audio Settings dialog box opens.
5. In the AUX Audio Settings dialog box, do the following:
 - a. Click to deselect the Audio Disable check box.
 - b. In the Input Device drop-down box, select Mic (single channel only) or "Line in" (two standard channels).
 - c. Click the Left Channel check box and in the drop-down box, select an associated camera.
 - d. Click the Right Channel check box and in the drop-down box, select an associated camera.
 - e. (Optional) Left-click the Aux volume control and drag left to decrease the audio input level or to the right to increase the audio input level.
 - f. Click OK.
 - g. Click Apply.

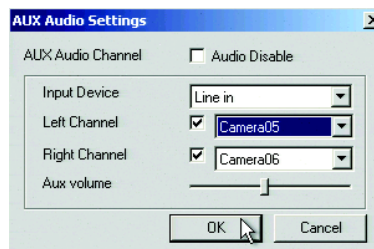



Figure 88. AUX Audio Settings Dialog Box

Setting Up the Expanded Audio Options

To set up the expanded audio option:

1. Do the following:
 - a. Install the optional DX8108-AUD/DX8116-AUD audio card (if necessary). For information about installing the optional DX8108-AUD/DX8116-AUD audio card, refer to the DX8100 8/16 Channel Audio Card Installation manual.
 - b. Connect an audio input device (microphone) to the numbered DX8108-AUD/DX8116-AUD audio card input for the camera channel being configured for live audio recording.
 - c. To hear live audio at the local server, connect head phones to the DX8100 audio output connector.
2. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
3. Check the Channel Information section to verify that the audio option is installed and available.
4. In the Camera Properties section, select the camera channel you want to configure for live audio recording.
5. In the Audio Settings section, verify that the Audio Disable check box is not selected.
6. Click Apply.
7. Verify that you can hear sound from the DX8100 audio output.

For information about listening to live audio, refer to [Listening to Live Audio at the Server](#) on page 49.

CONFIGURING VIDEO LOSS DETECTION

You can configure the DX8100 to monitor each camera for the following events:

- **Loss of synchronization:** This event occurs if the data cable between the camera and DX8100 is disconnected (cable is cut or unplugged) or when the camera loses power.
- **Low level of video:** This event occurs if the DX8100 detects a low level of video signal from the camera:
 - The available light source for the camera (indoor/outdoor lightly) is greatly diminished.
 - The DX8100 data cable is disconnected.


You can adjust the operation time from 0:00 to 23:59. For example, if the start time is 6:00 and the end time is 18:00, a low video level event from 18:01 to 5:59 will not be detected. The low video level detection time option is only available when the low level of video option is selected.

The DX8100 also stores a video incident as a video loss recovery event. The status provides the start and restore time for the video loss event.

The DX8100 allows you to select the loss of synchronization and low level of video option independently.

- The PTZ camera and multiple relay output can be mapped to a video loss event.
- Multiple cameras can be configured to record in response to a video loss event.
- The DX8100 can be configured to use emergency agent notification. In this case, the last available video image at the time the event occurred is sent to the designated remote client. If no image exist, then the system attaches a red colored pane to the e-mail. The red pane contains the text "Video Loss." For information about setting up emergency notification, refer to [Emergency Notification Setup](#) on page 235.
- The DX8100 can be configured to send an e-mail notification in response to a video loss event. In this case, the last available video image at the time the event occurred is attached to the e-mail. If no image exist, then the system attaches a red colored pane to the e-mail. The red pane contains the text "Video Loss." For information about setting up emergency notification, refer to [Emergency E-Mail Notification Setup](#) on page 238.
- The record icon turns purple indicating a video loss recording, regardless of the schedule. The video loss utility is constantly running in the background. If a schedule is not available, the record icon defaults to purple. If the DX8100 loses feed, video on that channel is recorded.

To set up video loss detection:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
2. In the Video Loss Detection section, do one or both of the following:
 - Click the “Loss of synchronization” check box.
 - Click the “Low level of video” check box.
 - In the Low Level of Video Detection Operation Time section, set the Start Time and the End Time.
3. Click Apply.

 



Figure 89. Video Loss Detection

APPLYING SETTINGS TO ALL CAMERAS

If you want to keep the changes you made to options and parameters on the Camera page, you must click Apply. If you attempt to leave the Camera page, the system will display a message box, prompting you to apply, not apply, or cancel the changes.

To apply camera configuration options to all attached cameras:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
2. Perform the camera configuration.
3. In the Apply to All Cameras section, select the check boxes for one or more of the settings you want to apply to all cameras: Protocol, Camera Security, Picture Adjustment, Motion Detection, Audio Settings, and Video Loss.
4. Click Apply to All Cameras.
5. Click Apply.

IP CAMERA SETUP

This section describes how to configure IP cameras and is organized into the following sections:

- [Configuring the DX8100 to Record IP Camera Video](#) on page 123
- [Disabling an IP Camera](#) on page 130
- [Deleting an IP Camera](#) on page 131
- [Restoring a Disabled Analog or IP Camera](#) on page 131

For information about the supported IP cameras, refer to the DX8100 Series HVR Version 2.0 Release Notes. To access this document, go to <http://www.Pelco.com> and navigate to the Hybrid Video Recorders page.

CONFIGURING THE DX8100 TO RECORD IP CAMERA VIDEO

The DX8100 allows you to assign an IP camera to a designated channel. Initially, camera channels above the DX8100 standard analog channels are not displayed in the Site Tree. These channels are listed in the Selected Channel drop-down box located on the Camera page. Each IP camera configured as a network camera is displayed in the Site Tree.

The steps for configuring the DX8100 to record IP camera video are organized into the following topics:

- [About Analog and IP Camera Channel Configurations](#)
- [Searching for IP Cameras](#)
- [Assigning an IP Camera to a Camera Channel](#) on page 124
- [Configuring IP Camera Settings](#) on page 126
- [Customizing IP Camera Display Settings](#) on page 127

About Analog and IP Camera Channel Configurations

The DX8100 channel configuration is as follows:


- **Standard analog channel:** The DX8108 and DX8116 channel capacity can be expanded by 16 channels using the DX8100 16-channel expansion unit kit.
 - **DX8108 channel configuration:** Camera channels 1 to 8 are standard analog inputs and are displayed in the Site Tree; channels 9 to 24 (sixteen total) are available for assigning IP cameras.
 - **DX8116 channel configuration:** Camera channels 1 to 16 are standard analog inputs and are displayed in the Site Tree; channels 17 to 32 (sixteen total) are available for assigning IP cameras.
 - **DX8124 channel configuration:** Camera channels 1 to 24 are standard analog inputs and are displayed in the Site Tree; channels 25 to 32 (eight total) are available for assigning IP cameras.
 - **DX8132 channel configuration:** Camera channels 1 to 32 are standard analog inputs and are displayed in the Site Tree. Analog channels must be disabled to assign an IP camera.
- **NOTE:** For information about the supported resources for configuring analog and IP cameras, refer to DX8100 Series HVR Version 2.0 Release Notes.
- **Disabling an analog or IP camera results in the following conditions:**
 - Frees up system CPU and memory resources.
 - Video from the disabled channel is no longer available for recording.
 - Settings specific to the disabled camera are preserved.
 - The IP camera is not removed from the IP Camera Properties dialog box.

For information about disabling a camera, refer to [Disabling an Analog Camera](#) on page 130 or [Disabling an IP Camera](#) on page 130. For information about restoring a camera, refer to [Restoring a Disabled Analog or IP Camera](#) on page 131.

For information about DX8100 supported analog and IP camera capacity, refer to DX8100 Series HVR Version 2.0 Release Notes. To access this document, go to <http://www.Pelco.com> and navigate to the Hybrid Video Recorders page.

Searching for IP Cameras

NOTE: The scan utility is a DX8100 server-based feature and discovers IP cameras within the DX8100 network. The scan utility is not available in the Client application.

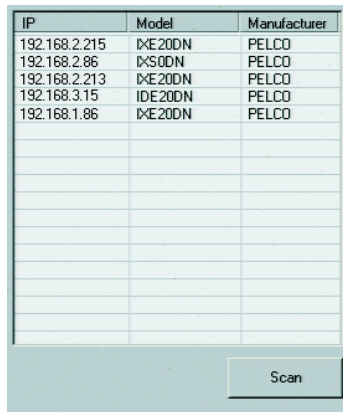
1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
2. Click IP Camera Properties. The IP Camera Properties dialog box appears.
3. To search for IP cameras connected to the network:

- **Using the IP Camera Properties dialog box scan utility:** The scan utility locates Pelco IP devices, IP cameras, and Axis IP cameras.

NOTE: The DX8100 Client application IP Camera Properties scan utility is unavailable.

- (1) Click Scan. The IP Camera Searching dialog box appears.
- (2) After the IP Camera Searching dialog box closes, the IP scan results are displayed in the scan table.

NOTE: The scan results are cleared if the IP Camera Properties dialog box is closed.



IP	Model	Manufacturer
192.168.2.215	IXE200N	PELCO
192.168.2.86	IXS00N	PELCO
192.168.2.213	IXE200N	PELCO
192.168.3.15	IDE200N	PELCO
192.168.1.86	IXE200N	PELCO

Figure 90. DX8100 Scan Utility Results

- **Using the Pelco Device Utility:** For information about installing the Device Utility, refer to Utility Device for Pelco IP Cameras manual.


NOTE: Install the Device Utility only on a remote computer. Do not install it on the DX8100 server.

- (1) On a remote computer, start the Pelco Device Utility and allow the Device Utility to discover IP devices on the network.
 - (2) Search the Device Utility IP Address column for supported IP camera devices. For information about the supported IP cameras, refer to DX8100 Series HVR Version 2.0 Release Notes. To access this document, go to <http://www.Pelco.com> and navigate to the Hybrid Video Recorders page.
4. Note the IP address and model number of the supported IP cameras to be configured.
 5. Assign each IP cameras to a DX8100 camera channel (refer to [Assigning an IP Camera to a Camera Channel](#) on page 124).

Assigning an IP Camera to a Camera Channel

The DX8100 allows you to select the video format and recording stream. The MPEG4 codec (video format) setting allows you to select the primary or secondary stream. The MJPEG codec setting only supports the primary stream.

- **Pelco IP cameras (IP110, IP3701, Spectra IP, and Spectra Mini IP):** These cameras record as follows:
 - Primary stream: 4CIF 30 ips
 - Secondary stream: CIF 15 ips
- **Pelco IX and IXE Series network cameras with Sarix™ technology:** The resolution, frame rate, and bit rate can be adjusted.
- **Axis Communications® Axis 211 or Axis 232D:** Frame rates are selectable from 1 to 30 ips; resolutions are selectable from 640x480, 480x360, 320x240, 240x810, or 160x120.

1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
2. Click IP Camera Properties. The IP Camera Properties dialog box appears.
3. To assign an IP camera to a camera channel, do one of the following:
 - **Manual assignment:**
 - (1) Click a check box to select a camera.
 - (2) Click the Manufacturer drop-down box and select a manufacturer. The port number, compression method, and video stream settings automatically appear in the camera row.

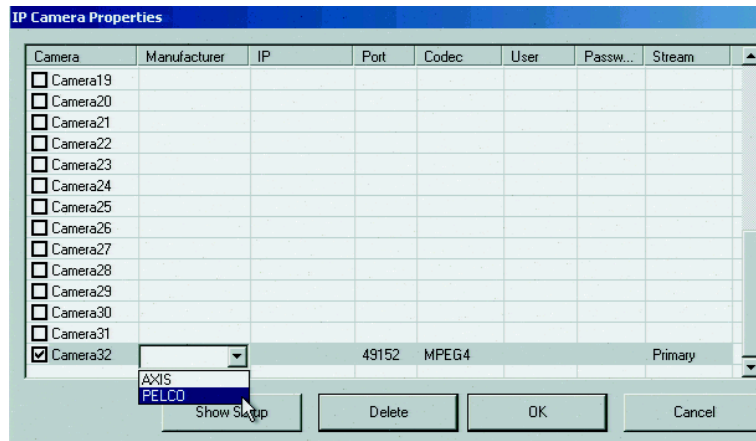


Figure 91. Manually Entering IP Camera Data

- (3) Click the IP drop-down box and enter the camera's IP address.

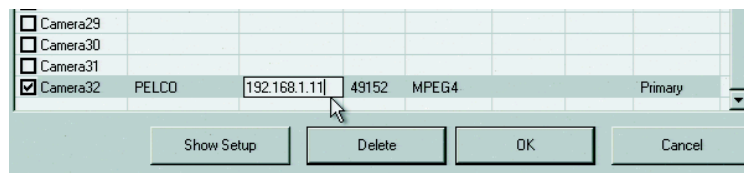



Figure 92. Manually Entering IP Camera Data

- **Automated assignment:**
 - (1) Click Scan. Available IP devices appear in the Scan table.
 - (2) Click a supported IP camera.
 - (3) Click the Add button . The Connect dialog box opens.
 - (4) In the Connect drop-down box, click a camera.
 - (5) Click Apply. The selected camera is assigned to the designated camera channel.

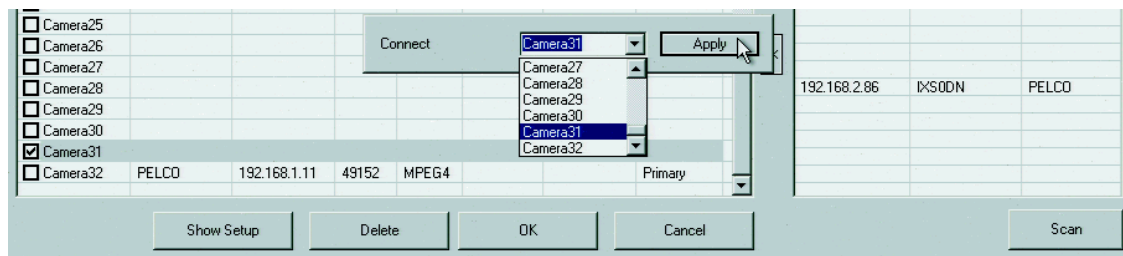


Figure 93. Automated Assignment of an IP Camera

4. (Optional) MPEG-4 is the default codec. Double-click the Codec drop-down box to select a different compression.
5. Double-click the User box and enter the user name.
6. Double-click the Password box and enter the password.
7. The DX8100 allows you to select the IP camera stream that the unit uses to record video.
 - **Stream 1:** Primary is the default stream. It supports a higher resolution and image rate.
 - **Stream 2:** Stream 2 supports a lower resolution and image rate.

NOTE: For information about supported resolution and image rates, refer to *DX8100 Series HVR Release Notes*. To access this document, go to <http://www.Pelco.com> and navigate to the Hybrid Video Recorders page.

Double-click the Stream drop-down box to select the secondary stream.

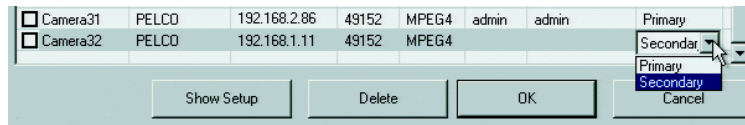


Figure 94. Entering the User Name, Password, and Stream


8. Repeat step 2 to 7 to associate additional IP cameras with other camera channels.
9. Click OK. The channel assignments are saved and the Camera page appears.
10. (Optional) To adjust IP camera settings, refer to [Configuring IP Camera Settings](#). Otherwise, refer to [Customizing IP Camera Display Settings](#) on page 127.

Configuring IP Camera Settings

For Pelco IP cameras, use the IP Camera Properties dialog box, the Web browser running on the DX8100 Client computer, or the Device Utility.

For Axis IP cameras, use the Web-based Axis interface. For information about configuring Axis camera settings, refer to the Axis documentation that came with the camera.

Using the IP Cameras Properties Dialog to Configure IP Cameras

1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
2. Click IP Camera Properties. The IP Camera Properties dialog box appears.
3. Click a check box to select an IP camera channel. The Show Setup button is available.
4. Click Show Setup. The IP Camera Properties setup content area appears and the Web browser accesses the IP camera's Settings page.

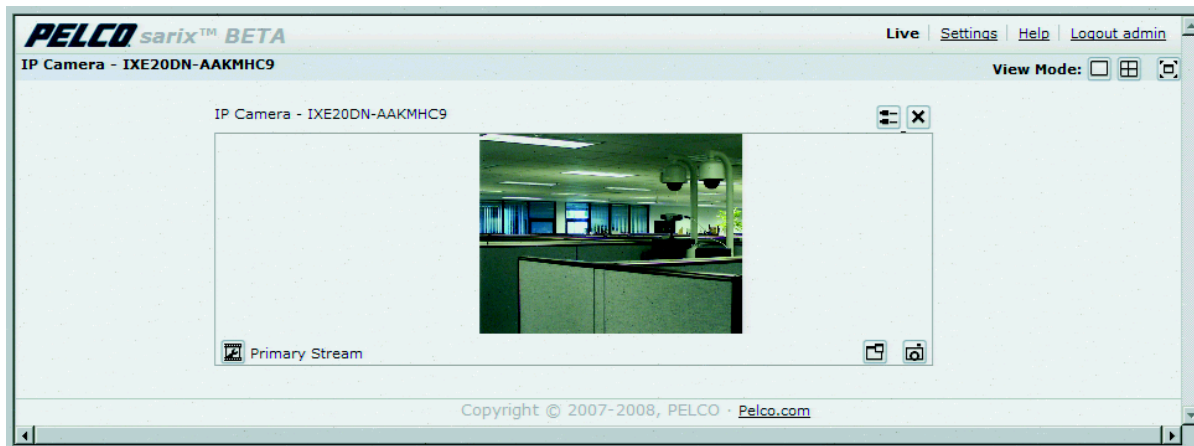


Figure 95. Pelco IP110 General Tab

5. Configure the IP camera settings.
6. Log out of the IP camera. A login dialog box appears.
7. Click Hide Setup.
8. Click OK. The camera settings are saved and the DX8100 Camera page appears.
9. Set up the IP camera to be displayed in the DX8100 Site Tree (refer to [Customizing IP Camera Display Settings](#) on page 127).

Using the Device Utility to Configure IP Cameras

1. Run the Device Utility on a remote computer and configure the IP camera settings.
2. Set up the IP camera to be displayed in the DX8100 Site Tree (refer to [Customizing IP Camera Display Settings](#) on page 127).

Customizing IP Camera Display Settings


The Camera page allows you to customize the IP camera display settings. Perform this step after the IP camera is assigned to a camera channel.

NOTE: The IP camera's status is automatically set to "Network Camera" when it is assigned to a camera channel, and assumes the default camera settings for that channel.

For information about assigning an IP camera to a camera channel, refer to [Assigning an IP Camera to a Camera Channel](#) on page 124.

For information about removing an IP camera from the Site Tree, refer to [Disabling an IP Camera](#) on page 130.

To customize an IP camera's display settings:

1. If the Camera page is not displayed, click the Setup button  on the DX8100 toolbar. The Setup dialog opens to the Camera page.
2. In the Camera Properties section:
 - a. Select an IP camera from the Selected Channel drop-down box.
 - b. Verify that the IP cameras is set to Network Camera in the related Selected Channel drop-down box.
 - c. (Optional) To disable an IP camera, refer to [Disabling an IP Camera](#) on page 130. To disable an IP camera, refer to [Disabling an IP Camera](#) on page 130.
 - d. Enter an optional new name in the Camera Name box.

Camera names can be up to 32 characters long and can include spaces and special characters. The Camera Name box cannot be left blank or have any spaces. If a valid name is not entered in the Camera Name box when you click Apply, the previous name is displayed.
 - e. Select the appropriate PTZ protocol setting. Select No PTZ if the selected IP camera does not support PTZ; select Network Camera PTZ if the IP camera supports PTZ.
3. Select an appropriate timeout value.
4. Adjust picture properties by moving the sliders for Brightness, Contrast, Hue, and Saturation.

As you adjust the picture properties of a camera on the local HVR, changes are reflected immediately in the viewing area near the top of the screen. Changes made to cameras at a remote site do not appear in the viewing area until you click Apply.
5. Click Default to return all picture property settings to the normal state.
6. Click Apply. The IP camera is added to the Site Tree.

- Verify that the IP camera resolution is displayed in the Site Tree and Channel Information area.

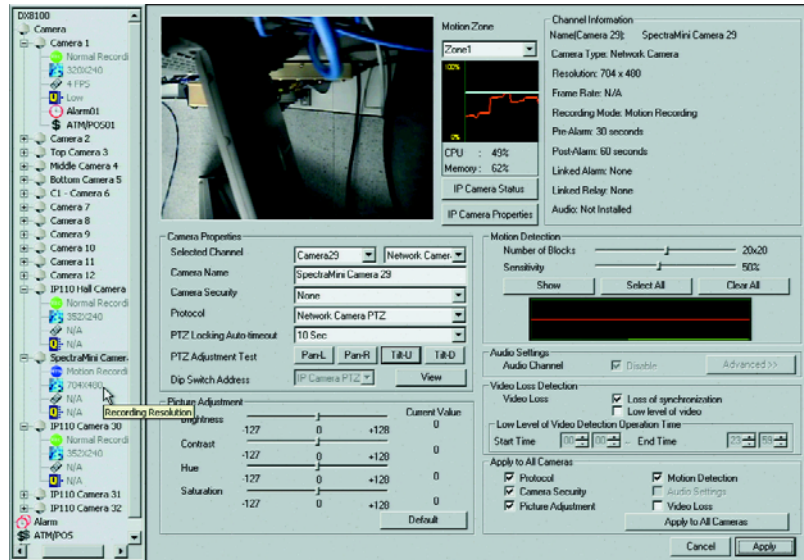


Figure 96. Viewing IP Camera Settings

- In the Site Tree, click the IP camera. The IP camera video is displayed in the Camera page preview window.
- Verify that the CPU (orange) and Memory (blue) levels are within the DX8100 Resource Meter's 0 to 100 percent range. If either level exceeds 100 percent, a warning dialog box appears.

Click the check box to disable future DX8100 System Resources Warning dialog boxes. If the unit is restarted, the DX8100 System Resources Warning dialog box is enabled again.

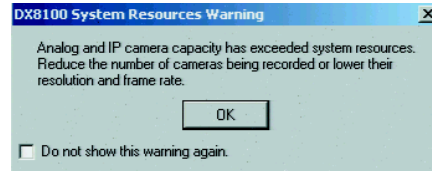



Figure 97. DX8100 System Resources Warning Dialog Box

To configure the analog and IP cameras to bring the CPU or Memory level within range:

- (Optional) Click the check box to disable the DX8100 System Resources Warning dialog box.
 - Go to [Configuring Analog and IP Cameras for Optimal Hybrid Video Recording](#) on page 130.
- Verify that the IP camera is communicating with the DX8100. Click IP Camera Status. The IP Camera Network Status dialog box appears and displays the IP camera's status.
 - Click OK.
 - Click Apply.
 - On the DX8100 toolbar, click the Setup button . The DX8100 application window appears.
 - Drag the newly configured IP camera to a camera pane.

UNDERSTANDING THE DX8100 RESOURCE METER

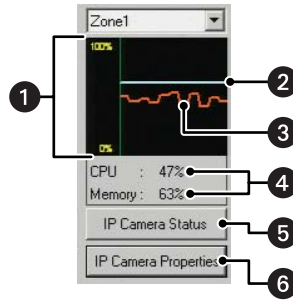


Figure 98. DX8100 Resource Meter

Table AD describes the parts of the DX8100 Resource Meter.

Table AD. DX8100 Resource Meter

Item	Part	Description
1	View Pane	Displays the available system resources (CPU and Memory resource levels) for the DX8100 server. The meter range is 0 to 100 percent. The CPU and Memory resource levels cannot exceed 100 percent. If either level exceeds 100 percent, the DX8100 System Resources Warning dialog box appears. For information about configuring analog and IP cameras for optimal system resources performance in order to bring the system resources within an acceptable range, refer to Configuring Analog and IP Cameras for Optimal Hybrid Video Recording on page 130. NOTE: The DX8100 Resource Meter shows the CPU and memory resource levels that are specific to the DX8100 server application. They do not match the resource levels that appear in Windows Task Manager on the server.
2	Memory Level (Blue)	Indicates the DX8100 server's memory usage.
3	CPU Level (Orange)	Indicates the DX8100 server's CPU usage.
4	Data Area	Displays the CPU and Memory usage as a percentage.
5	IP Camera Status Button	Sends a command to the IP address of the camera displayed in the Selected Channel drop down box. The ping command opens and displays the results in the IP Camera Network Status dialog box.
6	IP Camera Properties Button	Opens a dialog box that allows you to assign an IP camera to a camera channel.

CONFIGURING ANALOG AND IP CAMERAS FOR OPTIMAL HYBRID VIDEO RECORDING

If the CPU level or the Memory level exceeds 100 percent, the DX8100 System Resources Warning dialog box appears.

Click the check box to disable the DX8100 System Resources Warning dialog box.

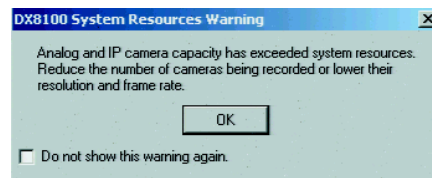


Figure 99. DX8100 System Resources Warning Dialog Box

You can easily add, remove, and configure analog and IP cameras to achieve optimal hybrid video recording and system resources performance.


NOTE: The system operates best when the CPU and Memory levels are less than 100 percent. For information about the DX8100 Resource Meter, refer to [Understanding the DX8100 Resource Meter](#) on page 129.

The DX8100 Resource Meter provides a real-time display of available system resources. Use the DX8100 Resource Meter to help you fine tune the analog and IP camera recording settings.

In summary, to configure the unit for optimal hybrid video recording, do any combination of the following:

- Adjust the analog camera recording settings (refer to [Basic Camera Setup](#) on page 116 and [Schedule Setup](#) on page 143)
- Adjust the IP camera recording settings (refer to [Configuring IP Camera Settings](#) on page 126 and [Customizing IP Camera Display Settings](#) on page 127)
- Disable an analog camera (refer to [Disabling an Analog Camera](#) on page 130)
- Disable an IP camera (refer to [Disabling an IP Camera](#) on page 130 and [Deleting an IP Camera](#) on page 131)
- Restore a disabled analog or IP camera (refer to [Restoring a Disabled Analog or IP Camera](#) on page 131)


Disabling an Analog Camera

1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
2. From the Selected Channel drop-down box, select an analog camera. The camera is highlighted in the Site Tree.
3. From the extended Selected Channel drop-down box, select Disable.
4. Click Apply. The selected analog camera is removed from the Site Tree. The camera's customized settings are retained.

A disabled analog camera can be reassigned to the Site Tree. For information about restoring a disabled analog camera, refer to [Restoring a Disabled Analog or IP Camera](#) on page 131.

Disabling an IP Camera

Disabling an IP camera does not delete its customized settings. For example, you can temporarily disable an IP camera to recover system resources. For information about other reasons to disable an IP camera, refer to [About Analog and IP Camera Channel Configurations](#) on page 123.

1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
2. In the Camera Properties section, do the following:
 - a. In the Site Tree, select an IP camera. The IP camera name is displayed in the Selected Channel drop-down box.
 - b. Select Disable in Camera page Selected Channel drop-down box.

 


Figure 100. Disabling an IP Camera

- Click Apply. The IP camera is removed from the Site Tree, but it is still assigned to the channel in the IP Camera Properties dialog box. The IP camera can be reassigned to the Site Tree. For information about restoring a disabled IP camera, refer to [Restoring a Disabled Analog or IP Camera](#) on page 131.

Deleting an IP Camera

- On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
- Click IP Camera Properties. The IP Camera Properties dialog box appears.
- In the IP Camera Properties dialog box, select the IP camera you want to delete.
- Click Delete. The IP camera is deleted from the IP Camera Properties dialog box.
- In the IP Camera Properties dialog box:
 - To accept the deletion:** Click OK. The IP Camera Properties dialog box closes. The IP camera is removed from the Site Tree and its status changes to "Disable" in the extended Selected Channel drop-down box. The IP camera retains its customized camera name and display settings.

 


Figure 101. IP Camera Status: Disabled

If you select Network Camera in the extended Selected Channel drop-down box, a DX8100 message appears, stating that the IP camera is not registered. To register the IP camera, you must assign it to a camera channel. For information about assigning an IP camera to a camera channel, refer to [Assigning an IP Camera to a Camera Channel](#) on page 124.

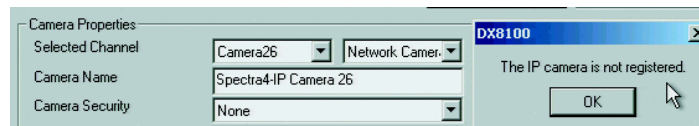


Figure 102. IP Camera Not Registered Dialog

- To cancel the deletion:**
 - Click Cancel. The IP Camera Properties dialog box closes. The IP camera is not removed from the Site Tree, but its status changes to "Disable" in the extended Selected Channel drop-down box.

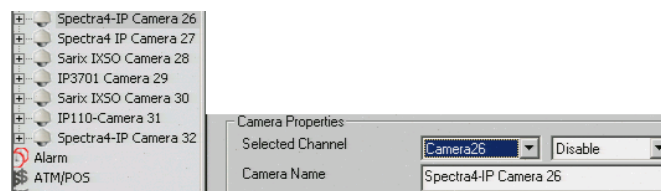


Figure 103. IP Camera in Site Tree and Status: Disabled

- In the Camera page, click Cancel. The IP camera status changes to Network Camera in the extended Selected Channel drop-down box. The IP camera is not deleted from the IP Camera Properties dialog box.

Restoring a Disabled Analog or IP Camera

A disabled analog or IP camera can be restored. For information about configuring an IP camera, refer to [Assigning an IP Camera to a Camera Channel](#) on page 124.

NOTE: An IP camera that was deleted in the IP Camera Properties dialog box cannot be restored; a deleted IP camera must be reconfigured.

Analog Camera

1. From the Selected Channel drop-down box, select an analog camera. The camera name is displayed in the Camera Name box.
2. From the extended Selected Channel drop-down box, select Local Camera.
3. Click Apply. The camera name is displayed in the Site Tree and video is displayed in the Camera page preview window.

IP Camera

NOTE: An IP camera must be configured and assigned to a camera channel in the IP Camera Properties dialog box before it can be assigned as a network camera.

1. From the Selected Channel drop-down box, select an IP camera. The camera name is displayed in the Camera Name box.
2. From the extended Selected Channel drop-down box, select Network Camera. If an error message appears, reassign the IP camera to a camera channel (refer to [Customizing IP Camera Display Settings](#) on page 127).
3. Click Apply. The camera name is displayed in the Site Tree and video is displayed in the Camera page preview window.

LINK SETUP

This section describes how to use the Link page to set up the following:

- Relay and alarm settings
- Event-relay link settings
- Event-recording link settings
- Event-PTZ link settings

This section includes the following topics:

- [Configuring Basic Relay and Alarm Settings](#)
- [Linking Relay Outputs to External Events](#) on page 134
- [Linking PTZ Presets and Patterns to External Events](#) on page 139
- [Linking Cameras to Record in Response to External Events](#) on page 136

CONFIGURING BASIC RELAY AND ALARM SETTINGS

The DX8100 can support up to 32 alarm inputs and 24 relay outputs. Each 8-channel HVR has 8 dry contact alarm inputs and 8 relay terminals; each 16-channel HVR has 16 dry contact alarm inputs and 16 relay terminals.

This section describes how to configure basic relay and alarm settings, including the following topics:

- [Understanding How Relays and Alarms React to a Power Outage](#)
- [Configuring DX8100 Basic Relay and Alarm Settings](#)
- [Configuring Basic Relay Operating Properties](#)
- [Configuring Basic Alarm Input Operating Properties](#) on page 133

Understanding How Relays and Alarms React to a Power Outage

The DX8100 server might experience an external AC power outage that impacts how the relay and alarm features function.

- **Power outage:** Relays configured as NO are closed if the DX8100 is server is shut down by a power outage, or the AC cord is unplugged.
- **Power button:** Relays configured as NO are closed if the DX8100 power button is pressed and held down.

In the scenarios above, a relay will remain closed as long as the DX8100 is powered down. In this case, alarms or sirens connected to the relays might produce a false alert.



Configuring DX8100 Basic Relay and Alarm Settings

To access the Link page to program alarms and relays:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera setup page.
2. Click the Linking button . The Link page is displayed.

Configuring Basic Relay Operating Properties

To configure basic relay operating properties:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
2. Click the Linking button  to display the Link page.
3. In the Relay Settings section, do the following:
 - a. In the Relay Channel drop-down box, select the relay you want to configure.
 - b. In the Relay Name box, enter an optional new name for the relay. Relay names can be up to 32 characters long and can include spaces and special characters.
You can also rename sites, cameras, alarms, and relays from the Site Tree by slowly clicking twice on each object's name.
 - c. In the Relay Type section, click the NO/NC button to toggle the default output type for each relay (normally open or normally closed).
4. Click Apply.

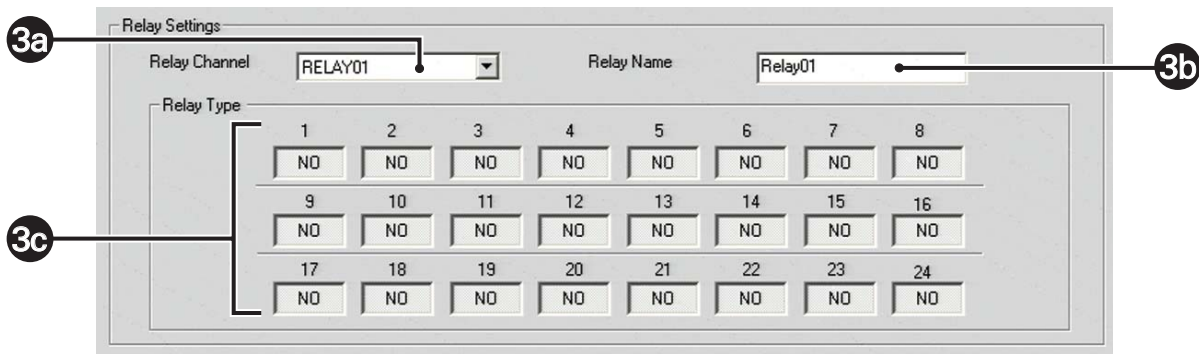




Figure 104. Relay and Alarm Settings Page: Relay Settings Section

Configuring Basic Alarm Input Operating Properties

Most applications will not require you to change relay and alarm settings from their default states.

To configure basic alarm input operating properties:

1. On the DX8100 toolbar, the Setup button . The Setup dialog opens to the Camera page.
2. Click the Linking button  to display the Link page.
3. In the Alarm Settings section, do the following:
 - a. In the Alarm Channel drop-down box, select the Alarm you want to configure.
 - b. In the Alarm Name box, enter an optional new name for alarm. Alarm names can be up to 32 characters long and can include spaces and special characters.
You can also rename sites, cameras, alarms, and relays from the Site Tree by slowly clicking twice on each object's name.
 - c. In the Alarm Type section, click the NO/NC button to toggle the default output type for each alarm (normally open or normally closed).

- Click Apply.

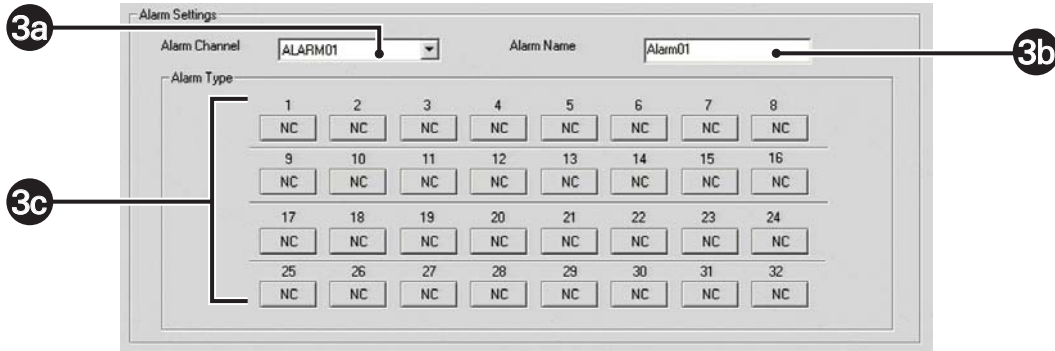


Figure 105. Relay and Alarm Settings Page: Alarm Settings Section

LINKING RELAY OUTPUTS TO EXTERNAL EVENTS

This section describes how to link relay outputs to external events, such as motion, alarm, ATM/POS, and video loss events. The following topics are included:

- [Linking Relay Outputs to Motion Events](#)
- [Linking Relay Outputs to Alarm Events](#) on page 135
- [Linking Relay Outputs to ATM/POS Events](#) on page 135
- [Linking Relay Outputs to Video Loss Events](#) on page 136

To access the Event-Relay Link Settings page:

- On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
- Click the Linking button . The Linking page opens to the Relay and Alarm Settings page.
- Click the Event-Relay Link Settings tab.

Linking Relay Outputs to Motion Events

To set relay outputs to activate in response to motion detection events:

- On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
- Click the Linking button .
- Click the Event-Relay Link Settings tab.
- In the Motion Detection Link Settings section, do the following:
 - Select a camera channel from the Camera Channel drop-down box.
 - Click the button for each relay you want to link to the selected camera.
You can also drag relays onto cameras in the Site Tree while in Live mode (main screen).
- Click Apply.

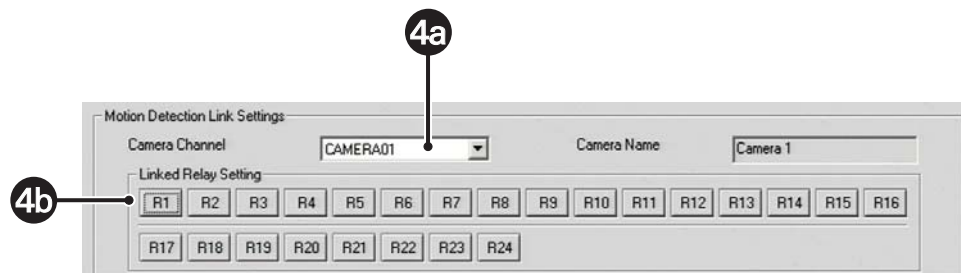




Figure 106. Event-Relay Link Settings: Motion Detection Link Settings Section

Linking Relay Outputs to Alarm Events

To set relay outputs to activate in response to an alarm event:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Linking button .
3. Click the Event-Relay Link Settings tab.
4. In the Alarm Link Settings section, do the following:
 - a. Select an alarm channel from the Alarm Channel drop-down box.
 - b. Click the button for each relay you want to link to the selected alarm.
You can also drag relays onto alarms in the Site Tree while in Live mode (main screen).
5. Click Apply.

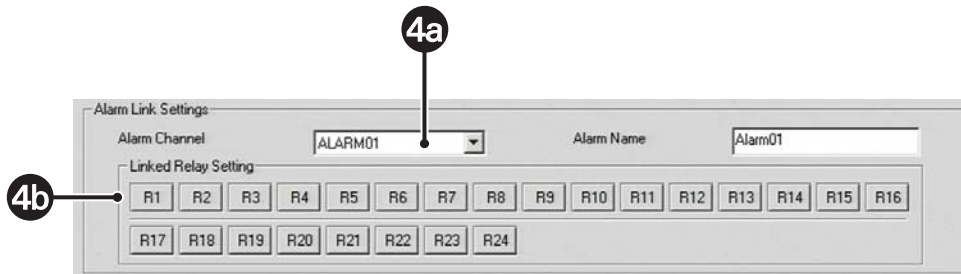




Figure 107. Event-Relay Link Settings: Alarm Link Settings Section

Linking Relay Outputs to ATM/POS Events

To set relay outputs to activate in response to an ATM/POS event:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Linking button .
3. Click the Event-Relay Link Settings tab.
4. In the ATM/POS Link Settings section, do the following:
 - a. Select an ATM/POS address from the ATM/POS Address drop-down box.
 - b. Click the button for each relay you want to link to the selected ATM/POS address.
You can also drag relays onto ATM/POS devices in the Site Tree while in Live mode (main screen).
5. Click Apply.

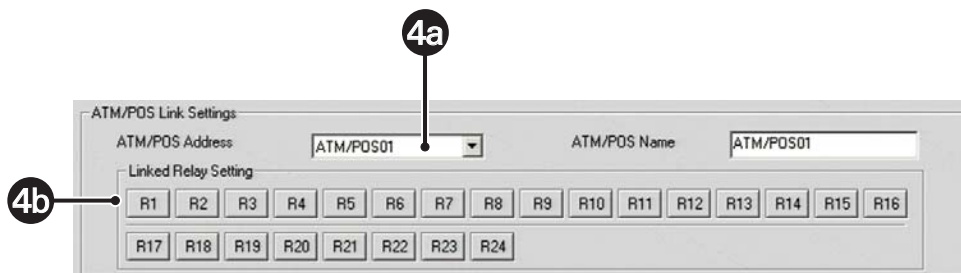




Figure 108. Event-Relay Link Settings: ATM/POS Link Settings Section

Linking Relay Outputs to Video Loss Events

To set relay outputs to activate in response to a video loss event:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Linking button .
3. Click the Event-Relay Link Settings tab.
4. In the Video-Loss Link Settings section, do the following:
 - a. Select a camera from the Video-Loss Channel drop-down box.
 - b. Click the button for each relay you want to link to the selected Video-Loss Channel.
5. Click Apply.

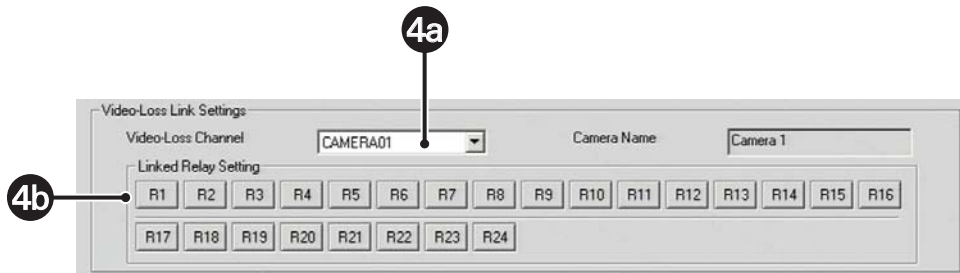


Figure 109. Event-Relay Link Settings: Video-Loss Link Settings Section



LINKING CAMERAS TO RECORD IN RESPONSE TO EXTERNAL EVENTS

Multiple cameras can be configured to begin recording in response to detected motion, alarm, ATM/POS transaction, and video loss events. This section describes how to link cameras to record in response to these events and includes the following topics:

- [Linking Cameras to Record in Response to Motion Events](#) on page 136
- [Linking Cameras to Record in Response to Alarm Events](#) on page 137
- [Linking Cameras to Record in Response to ATM/POS Events](#) on page 137
- [Linking Cameras to Record in Response to Video Loss Events](#) on page 138

Linking Cameras to Record in Response to Motion Events

To link multiple cameras to record in response to motion detection events:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Linking button . The Linking page is displayed.
3. Click the Event-Recording Link Settings tab.
4. In the Motion Record Link Settings section, do the following:
 - a. Select a camera from the Motion Source Camera drop-down box.
 - b. Click the button for each camera you want to begin recording when motion is detected by the source camera.

5. Click Apply.

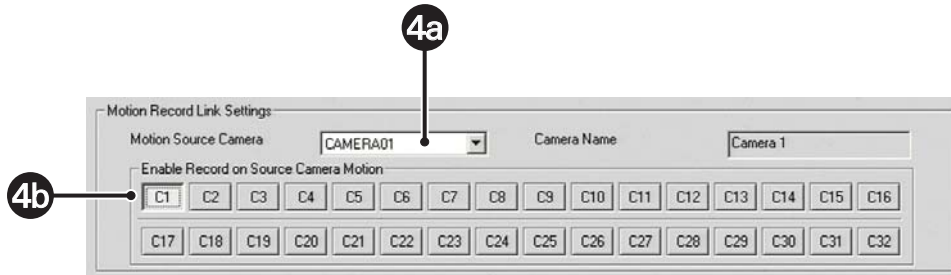




Figure 110. Event-Relay Link Settings: Video-Loss Link Settings Section

Linking Cameras to Record in Response to Alarm Events

To link multiple cameras to record in response to a single alarm input:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Linking button . The Linking page is displayed.
3. Click the Event-Recording Link Settings tab.
4. In the Alarm Record Link Settings section, do the following:
 - a. Select an Alarm channel from the Alarm Channel drop-down box.
 - b. Click the button for each camera you want to begin recording when the source alarm is triggered.
5. Click Apply.

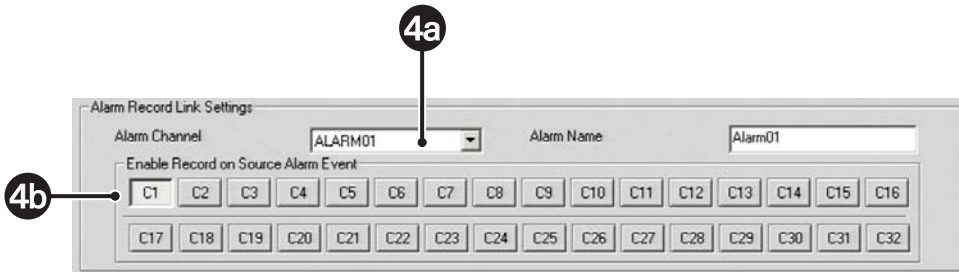




Figure 111. Event-Recording Link Settings: Alarm Record Link Settings Section

Linking Cameras to Record in Response to ATM/POS Events

To link multiple cameras to record in response to an ATM/POS event:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Linking button . The Linking page is displayed.
3. Click the Event-Recording Link Settings tab.
4. In the ATM/POS Record Link Settings section, do the following:
 - a. Select an ATM/POS address from the ATM/POS address drop-down box.
 - b. Click the button for each camera you want to begin recording in response to an ATM/POS event.

5. Click Apply.

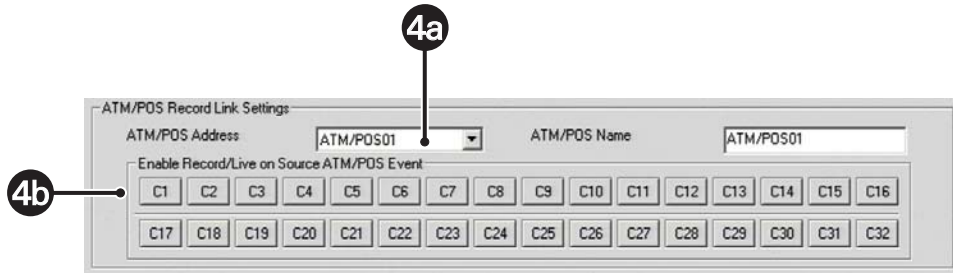




Figure 112. Event-Recording Link Settings: ATM/POS Record Link Settings Section

Linking Cameras to Record in Response to Video Loss Events

To link multiple cameras to record in response to a video loss event:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Linking button . The Linking page is displayed.
3. Click the Event-Recording Link Settings tab.
4. In the Video-Loss Record Link Settings section, do the following:
 - a. Select a camera from the Video-Loss Channel drop-down box.
 - b. Click the button for each camera you want to begin recording in response to a video loss event.
5. Click Apply.

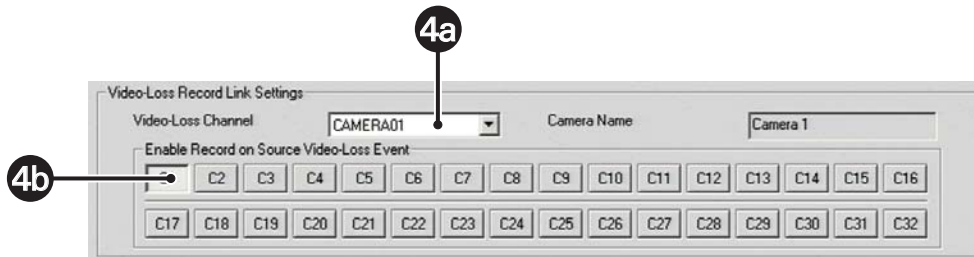


Figure 113. Event-Recording Link Settings: Video-Loss Record Link Settings Section

LINKING PTZ PRESETS AND PATTERNS TO EXTERNAL EVENTS



The DX8100 can be configured in such a way that motion, alarms, ATM/POS transactions, and video loss events detected by one camera will result in the repositioning of another. Similarly, alarm inputs can be set to trigger camera-positioning presets. Only a single preset or pattern can be linked to a camera.

This section describes how to link PTZ presets and patterns to motion and alarm events, including the following topics:

- [Linking PTZ Presets and Patterns to Motion Events](#) on page 139
- [Linking PTZ Presets and Patterns to Alarm Events](#) on page 140
- [Linking Presets and Patterns to ATM/POS Events](#) on page 141
- [Linking Presets and Patterns to Video Loss Events](#) on page 142

Linking PTZ Presets and Patterns to Motion Events

To link two cameras so that motion detected on one results in the repositioning of another:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
 2. Click the Linking button . The Linking page is displayed.
 3. Click the Event-PTZ Link Settings tab.
 4. In the Motion Detection Link Settings section, do the following:
 - a. Select a camera from the Camera Channel drop-down box. (This camera will be the motion source.)
 - b. In the Linked PTZ Setting section, select a camera to be linked from the Linked Camera Channel drop-down box. (This camera will change PTZ position in response to motion detected by the source camera.)
 5. To select a PTZ preset or pattern for the linked camera, in the Linked PTZ Setting section, do one of the following:
 - To force the linked camera to move to a PTZ preset in response to motion detected by the source camera:
 - (1) Click the Linked Camera Preset button to select this option.
 - (2) In the Preset drop-down box, select a PTZ preset (1-150).
 - To force a PTZ pattern to be activated in response to motion detected by the source camera:
 - (1) Click the Linked Camera Pattern button to select this option.
 - (2) In the Pattern drop-down box, select a PTZ pattern (1-4) to be activated on the camera.
- The selected camera must support PTZ functions, and at least one PTZ preset/pattern must be defined for this function to work.
6. Click Apply.

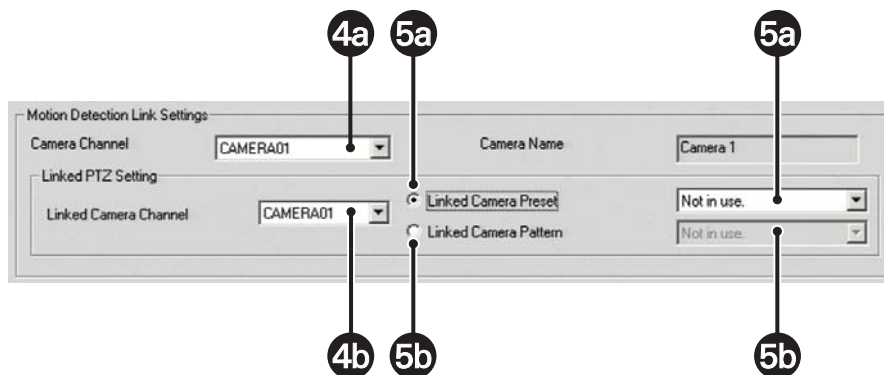




Figure 114. Event-PTZ Link Settings: Linking Presets and Patterns to Motion Events

Linking PTZ Presets and Patterns to Alarm Events

To link an alarm input to a camera so activation of the alarm results in a repositioning of that camera:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
 2. Click the Linking button . The Linking page is displayed.
 3. Click the Event-PTZ Link Settings tab.
 4. In the Alarm Record Link Settings section, do the following:
 - a. Select an alarm from the Alarm Channel drop-down box.
 - b. In the Linked PTZ Setting section, select a camera to be linked from the Linked Camera Channel drop-down box. (This camera will change PTZ position in response to an alarm input detected by the source alarm.)
 5. To select a PTZ preset or pattern for the linked camera, in the Linked PTZ Setting section, do one of the following:
 - To force the linked camera to move to a PTZ preset in response to an alarm input detected by the source camera:
 - (1) Click the Linked Camera Preset button to select this option.
 - (2) In the Preset drop-down box, select a PTZ preset (1-150).
 - To force a PTZ pattern to be activated in response to alarm input detected by the source camera:
 - (1) Click the Linked Camera Pattern button to select this option.
 - (2) In the Pattern drop-down box, select a PTZ pattern (1-4) to be activated on the camera.
- The selected camera must support PTZ functions, and at least one PTZ preset/pattern must be defined for this function to work.
6. Click Apply.

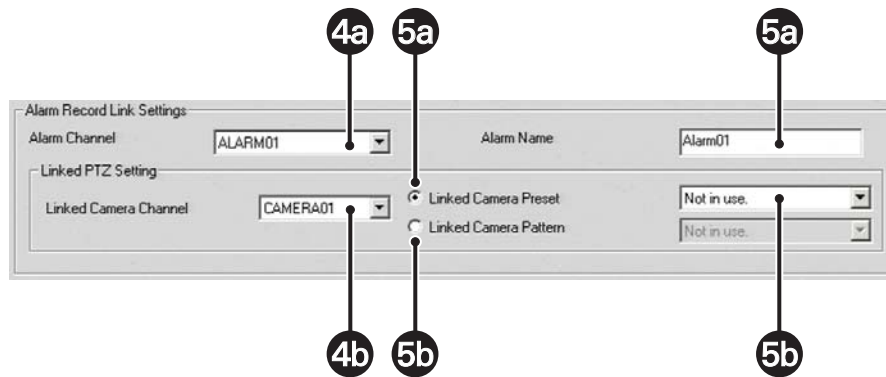




Figure 115. Event-PTZ Link Settings: Linking Presets and Patterns to Alarm Events

Linking Presets and Patterns to ATM/POS Events

To link an ATM/POS input to a camera so the detected ATM/POS event results in a repositioning of that camera:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
 2. Click the Linking button . The Linking page is displayed.
 3. Click the Event-PTZ Link Settings tab.
 4. In the ATM/POS Link Settings section, do the following:
 - a. Select an ATM/POS address from the ATM/POS Address drop-down box.
 - b. In the Linked PTZ Setting section, select a camera to be linked from the Linked Camera Channel drop-down box. (This camera will change PTZ position in response to an ATM/POS input detected by the source ATM/POS device.)
 5. To select a PTZ preset or pattern for the linked camera, in the Linked PTZ Setting section, do one of the following:
 - To force the linked camera to move to a PTZ preset in response to an ATM/POS input detected by the source camera:
 - (1) Click the Linked Camera Preset button to select this option.
 - (2) In the Preset drop-down box, select a PTZ preset (1-150).
 - To force a PTZ pattern to be activated in response to ATM/POS input detected by the source camera:
 - (1) Click the Linked Camera Pattern button to select this option.
 - (2) In the Pattern drop-down box, select a PTZ pattern (1-4) to be activated on the camera.
- The selected camera must support PTZ functions, and at least one PTZ preset/pattern must be defined for this function to work.
6. Click Apply.

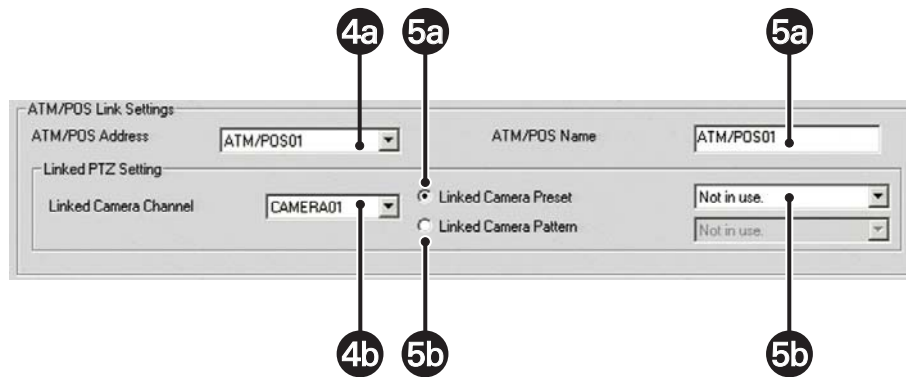




Figure 116. Event-PTZ Link Settings: Linking Presets and Patterns to ATM/POS Events

Linking Presets and Patterns to Video Loss Events

To link a video loss event to a camera so the detected video loss event results in a repositioning of that camera:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
 2. Click the Linking button . The Linking page is displayed.
 3. Click the Event-PTZ Link Settings tab.
 4. In the Video-Loss Link Settings section, do the following:
 - a. Select a camera channel from the Video-Loss Channel drop-down box.
 - b. In the Linked PTZ Setting section, select a camera to be linked from the Linked Camera Channel drop-down box. (This camera will change PTZ position in response to a video loss event detected by the source camera.)
 5. To select a PTZ preset or pattern for the linked camera, in the Linked PTZ Setting section, do the one of the following:
 - To force the linked camera to move to a PTZ preset in response to a video loss event detected by the source camera:
 - (1) Click the Linked Camera Preset button to select this option.
 - (2) In the Preset drop-down box, select a PTZ preset (1-150) for the camera to move to.
 - To force a PTZ pattern to be activated in response to video loss input detected by the source camera:
 - (1) Click the Linked Camera Pattern button to select this option.
 - (2) In the Pattern drop-down box, select a PTZ pattern (1-4) to be activated on the camera.
- The selected camera must support PTZ functions, and at least one PTZ preset/pattern must be defined for this function to work.
6. Click Apply.

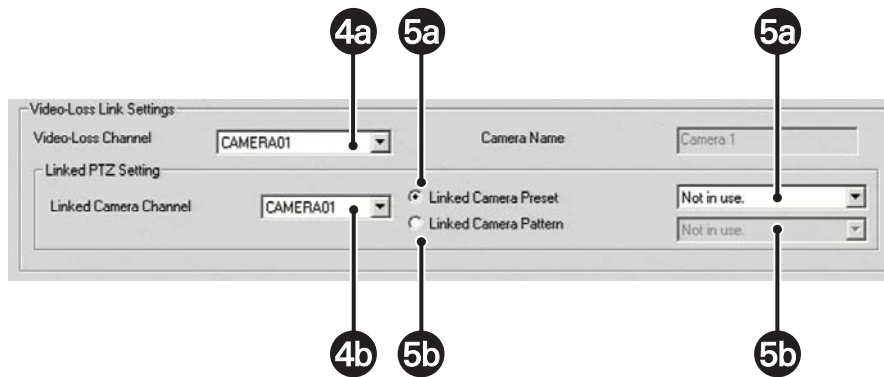


Figure 117. Event-PTZ Link Settings: Linking Presets and Patterns to Video Loss Events

SCHEDULE SETUP

The DX8100 provides extensive scheduling capabilities. Flexible recording schedules can be established for daily, weekday, weekend, or individual day recording. Recording time can be broken up into increments of one-half hour, and each increment can be scheduled to record continuously or in response to an alarm, motion, or ATM/POS event. Users with Power User access and higher can create recording schedules.

This section describes how to setup recording schedules and includes the following topics:

- [Accessing the Schedule](#) on page 143
- [Setting Up the Camera Recording Mode](#) on page 145
- [Creating Yearly Recording Schedules](#) on page 147
- [Creating Monthly or Multiple-Day Recording Schedules](#) on page 149
- [Creating Single-Day Schedules](#) on page 150
- [Editing Schedules](#) on page 152
- [Working with Custom Camera Settings](#) on page 154
- [Configuring the Frame Rate](#) on page 156
- [Setting Up Advanced Relay Output](#) on page 163

ACCESSING THE SCHEDULE

To access the scheduling features of the DX8100:

1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.

Figure 118 shows the parts of the Schedule page.

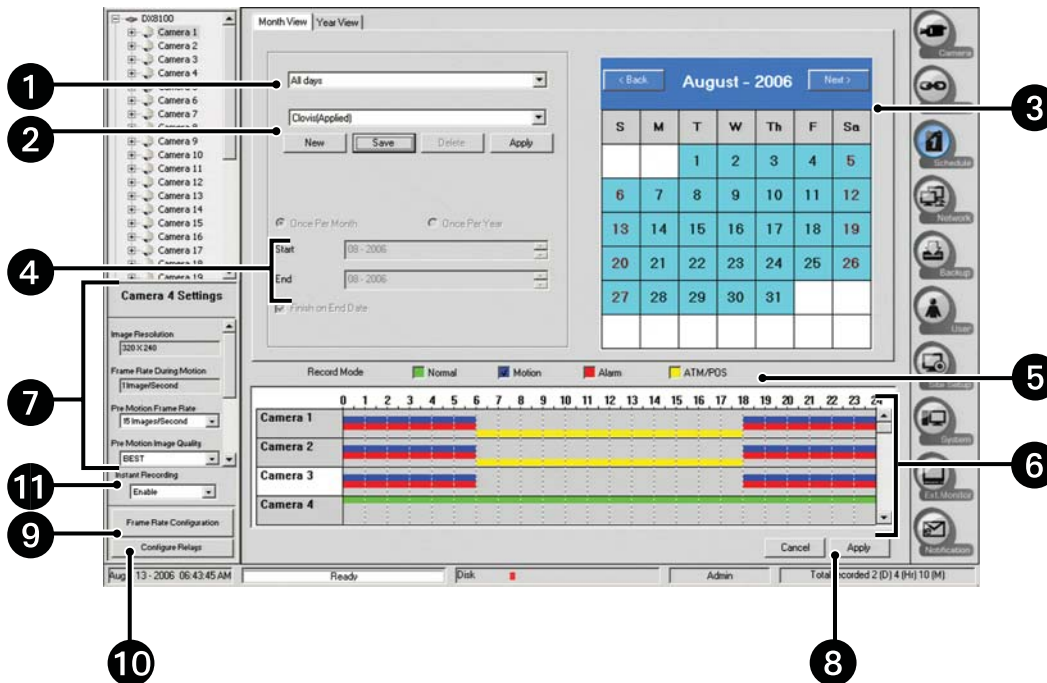


Figure 118. Schedule Page

Table AE describes the parts of the Schedule page.

Table AE. Parts of the Schedule Page

Item	Part	Description
1	Schedule Type Drop-down Box	Selects the type of schedule. Options are as follows: <ul style="list-style-type: none"> • All days; Seven days a week • Weekdays; Monday through Friday, with the exception of any day assigned in Custom mode • Weekends; Saturday and Sunday, with the exception of any day assigned in Custom mode • Custom Mode; Any day, such as a holiday
2	Recording Schedule Profile	Allows you to do the following: <ul style="list-style-type: none"> • Select and apply an existing schedule profile. • Create and save a new profile. • Change an existing profile. • Delete an existing profile.
3	Calendar	Displays current schedule profile in accordance with the schedule type selected (All Days, Weekdays, Weekends, or Custom Mode).
4	Start and End Date Markers	Sets the start and end dates for a custom schedule.
5	Record Mode	Selects a recording mode to be applied to a camera. Options are as follows: <ul style="list-style-type: none"> • Normal • Motion • Alarm • ATM/POS
6	Channel Scheduling Panel	Allows the assignment of recording modes across individual camera channels over a 24-hour period.
7	Camera Settings Panel	Allows custom settings to be applied to individual cameras for each recording mode.
8	Apply	Saves current schedule.
9	Frame Rate Configuration	Allows configuration of channel resolution and frame rates.
10	Configure Relays	Allows configuration of relays that have been linked to cameras and alarms.
11	Instant Recording	Enables or disables selection of instant recording from the View menu.

SETTING UP THE CAMERA RECORDING MODE

The DX8100 allows you to schedule each camera to record in a single or multiple-event mode across a 24-hour timeline. Users with Power User access or higher can schedule video recording for one or more cameras. Use the Record Mode section near the bottom of the Schedule page to configure the recording mode for each camera.

This section describes how to schedule a recording mode and includes the following topics:

- [Scheduling a Record Mode](#)
- [Clearing a Scheduled Recording](#) on page 146

Scheduling a Record Mode

The DX8100 allows you to schedule a camera for multiple event recording. In this case, pre-event (motion, alarm, or ATM/POS) recording is set at the frame rate of the active record mode when the alarm, motion, or ATM/POS event occurred. For example, if the DX8100 HVR is recording at 1 ips in the Normal record mode when an alarm event occurs, video is recorded at 1 ips during the pre-event time period. After the pre-event time period expires, the recording rate switches to the frame rate configured for the event.

To schedule a record mode for one or more channels:



1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.
3. Click the check box for the record mode you want to apply to a channel.
 - Normal
 - Motion
 - Alarm
 - ATM/POS

Table AF describes the record modes.

Table AF. Record Modes

Mode	Color	Description
Normal	Green	Continuous recording.
Motion	Blue	Recording is triggered during the selected time block if a motion event is detected in the camera's predefined motion field. For information about motion detection, refer to Motion Detection Setup on page 118.
Alarm	Red	Recording is triggered during the selected time block when an alarm is activated. At least one alarm must be linked to the camera for this option to work. For information about alarms, refer to Linking Alarm Inputs to a Camera on page 39.
ATM/POS	Yellow	Recording is triggered during the selected time block if an ATM or POS event is detected in the camera's predefined ATM/POS field. For information about ATM/POS detection, refer to Linking Cameras to Record in Response to ATM/POS Events on page 137.

4. Click and drag the mouse to highlight the time periods and channels where you want the recording mode to apply.
Drag the mouse diagonally to highlight periods across multiple camera channels simultaneously.

5. Click Apply.

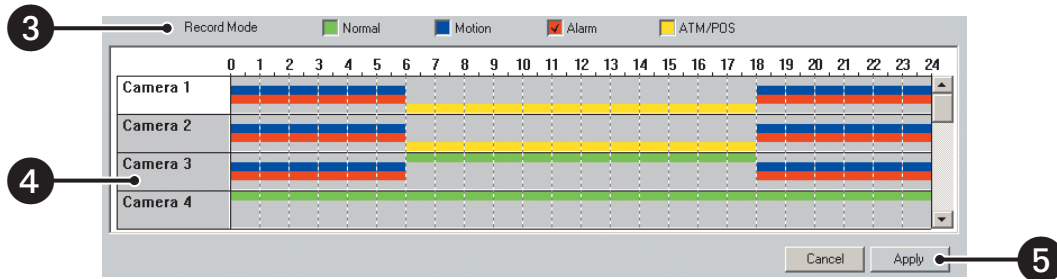


Figure 119. Filling In Recording Blocks in a Schedule Grid

Clearing a Scheduled Recording

The DX8100 Schedule feature allows you to do the following:



- For one or multiple channels, clear the scheduled recording times for a specific record mode. You can select one channel or you can drag and select a group of channels. For example, you can select and drag the recording times for channel 1-32. However, the system does not allow you to select random channels from the list. For example, you are not allowed to select channel 1, 2, and 4 (excluding camera 3).
- For one or multiple channels, you can clear the scheduled recording times for all record modes simultaneously.
- You can select and clear recording times periods in increments of 30 minutes to 24 hours.

This section describes how to clear a scheduled recording and includes the following sections:

- [Clearing Recording Times for a Specific Record Mode](#) on page 146
- [Clearing Recording Times for All Record Modes](#) on page 147

Clearing Recording Times for a Specific Record Mode

To clear the scheduled recording times for a specific record mode for one or more channels:

1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.
3. Click a record mode check box to select the specific record mode.
4. Right-click and drag to highlight the time periods and channels for which you want to *clear* recording times.
5. Release the right mouse button. The highlighted recording times are cleared.
6. Do one of the following:
 - To accept the change, click Apply. The selected time period is deleted.
 - To cancel the change, click Cancel. The deleted recording times are restored.

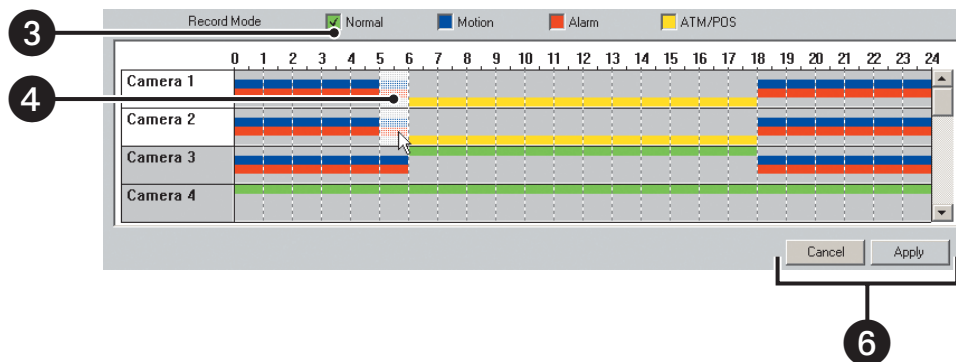




Figure 120. Clearing Recording Times for a Specific Record Mode

Clearing Recording Times for All Record Modes

To clear the scheduled recording times for all record modes:

1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.
3. Click a record mode check box to deselect the record mode. No record mode is selected.
4. Right-click and drag to highlight the time periods and channels for which you want to *clear* recording times.
5. Release the right mouse button. The highlighted recording times are cleared.
6. Do one of the following:
 - To accept the change, click Apply. The selected time period is deleted.
 - To cancel the change, click Cancel. The deleted recording times are restored.

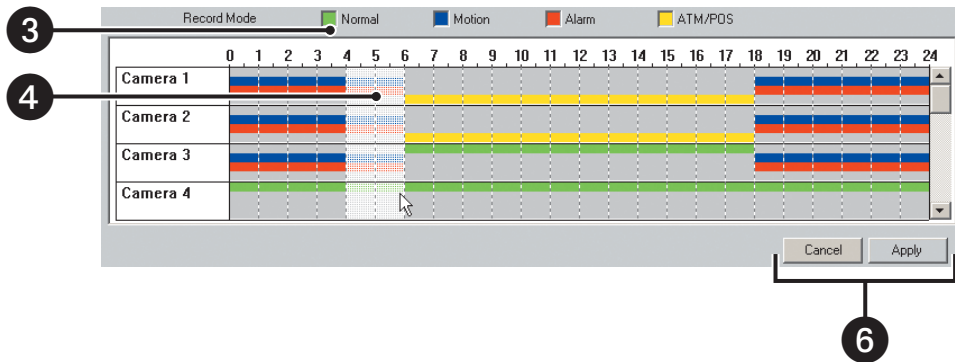


Figure 121. Clearing Recording Times for All Record Modes

CREATING YEARLY RECORDING SCHEDULES

The DX8100 allows you create and save various recording schedules. This section describes how to create yearly recording schedules and includes the following sections:

- [Creating a Yearly Recording Schedule](#)
- [Scheduling Individual Days Using the Year View](#) on page 148
- [Copying Schedule Attributes to a Different Day](#) on page 148



Creating a Yearly Recording Schedule

Year View allows a user to customize recording schedules for individual days. Year View displays daily recording schedules in a calendar format. The calendar displays one year's worth of daily recording schedules. The scheduling period begins in the current month.

- Days circled in red have been assigned weekday, weekend, or everyday recording schedules.
- Days circled in blue have been assigned a custom recording schedule.
- Days without circles denote that no recording has been scheduled for that day.



Scheduling Individual Days Using the Year View

To schedule individual days using the Year View:

1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.
3. Click the Year View tab. The Year View page is displayed.
4. Click the day you want to schedule.
5. Using your mouse, select the recording modes and times for each channel you want to schedule. For information about selecting a recording mode, refer to [Setting Up the Camera Recording Mode](#) on page 145.
6. Repeat steps 2 and 3 for each additional day you want to schedule.
7. Click Apply.

Copying Schedule Attributes to a Different Day

To copy the schedule attributes of one day and apply them to a different day:

1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.
3. Right-click the calendar day you want to copy.
4. Select Copy from the shortcut menu.

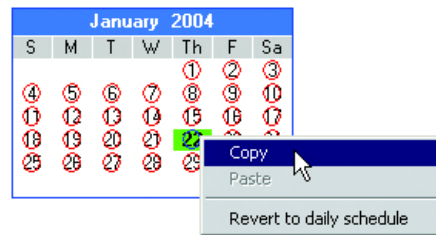


Figure 122. Year View Calendar Shortcut Menu

5. Right-click the day on the calendar you want to apply the copied schedule attributes.
6. Select Paste from the shortcut menu.
7. Click Apply.

To change a custom schedule day to a regular schedule day, right-click and select “Revert to daily schedule” from the shortcut menu.

CREATING MONTHLY OR MULTIPLE-DAY RECORDING SCHEDULES



Unlike schedules set in the Year View, Month View schedules are recurrent. Schedules can be set for subsequent weekdays, weekends, everyday, or a single day.

This section describes how to create a monthly or multiple-day schedule and includes the following topics:

- [Creating Multiple-Day Schedules](#)
- [Creating Single-Day Schedules](#) on page 150

Creating Multiple-Day Schedules

To create a recording schedule to recur indefinitely:

1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.
3. Click the Month View tab if it is not currently selected.
4. Select All days, Weekday, or Weekends from the drop-down box.
5. Click New. The New File Name dialog box opens.
6. In the New File Name box, enter a new filename for the profile.
The profile file name follows the standard Windows file-naming conventions.
7. Click OK.
8. Using your mouse, select the recording modes and times for each camera you want to schedule. For information about camera scheduling, refer to [Setting Up the Camera Recording Mode](#) on page 145.
9. Click Save.
10. Click Apply.
11. Click the Apply button at the bottom of the Schedule page.

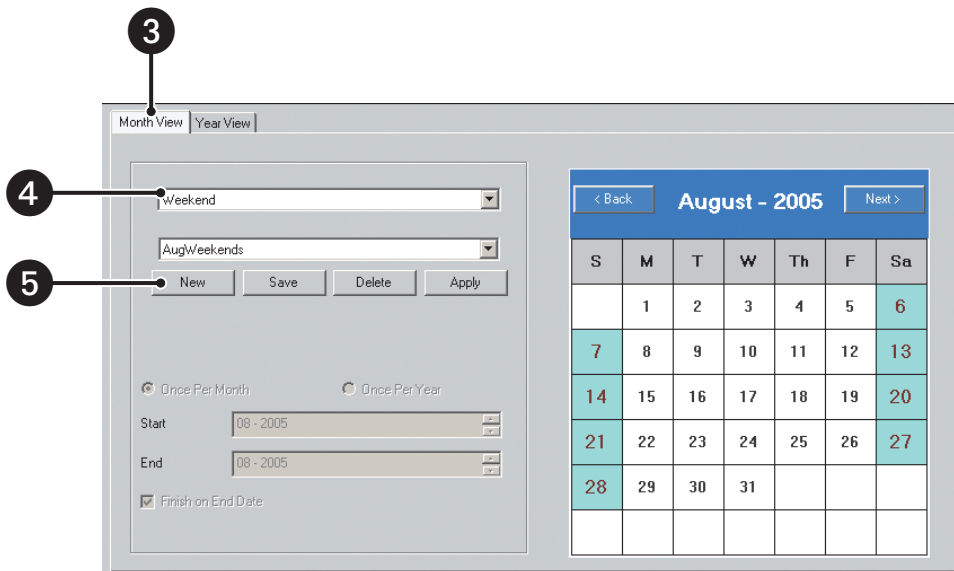


Figure 123. Month View Page: Multi-Day Schedule

Creating Single-Day Schedules



This section describes how to create a single-day schedule and includes the following topics:

- [Working with Single-Day Schedules](#)
- [Copying and Applying Schedule Attributes](#) on page 152

Working with Single-Day Schedules

Custom Mode schedules are defined for single days only. A custom-scheduled day can be set to recur on the same day of every month or the same day every year.

To set the HVR to record on a specific day:

1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.
3. Click the Month View tab (if it is not currently selected.)
4. Select Custom Mode from the drop-down box.
5. Click New. The New File Name dialog box opens.
6. Enter a new file name for the profile.
The profile file name follows the standard Windows file-naming conventions.
7. Click OK.
8. Select Once Per Month or Once Per Year.
9. Select the date range for the custom schedule.
 - a. Set the start date with the Start spinner buttons.
The start date cannot be set later than the end date.
 - b. If you want the schedule to recur indefinitely, deselect the Finish on End Date check box.
 - c. Set the end date with the End spinner buttons.
10. On the calendar, click the desired date.
11. Select the recording modes and times for each camera you want to schedule. Refer to [Setting Up the Camera Recording Mode](#) on page 145 for instructions.
12. Click Save.
13. Click Apply.

14. Click the Apply button at the bottom of the screen.

The screenshot shows a software interface for scheduling. At the top left, there are tabs for 'Month View' (selected) and 'Year View'. Below these are several configuration options: a 'Custom Mode' dropdown menu, a 'Custom' dropdown, and buttons for 'New', 'Save', 'Delete', and 'Apply'. There are radio buttons for 'Once Per Month' (selected) and 'Once Per Year'. Below these are 'Start' and 'End' date pickers, both set to '08 - 2005', and a checked checkbox for 'Finish on End Date'. To the right is a calendar for 'August - 2005' with days of the week (S, M, T, W, Th, F, Sa) and dates from 1 to 31. The date '16' is highlighted. Below the calendar is a 'Record Mode' section with checkboxes for 'Normal' (checked), 'Motion', 'Alarm', and 'ATM/PDS'. At the bottom is a 24-hour timeline for 'Camera 1', 'Camera 2', 'Camera 3', and 'Camera 4'. Camera 1 has bars for Normal (green), Motion (blue), Alarm (red), and ATM/PDS (yellow) from 0 to 6 and 18 to 24. Camera 2 has bars for Normal (green), Motion (blue), Alarm (red), and ATM/PDS (yellow) from 0 to 6 and 18 to 24. Camera 3 has bars for Normal (green), Motion (blue), Alarm (red), and ATM/PDS (yellow) from 0 to 6 and 18 to 24. Camera 4 has a bar for Normal (green) from 0 to 24. At the bottom right are 'Cancel' and 'Apply' buttons.

3

4

5

12

8

9

10

11

14

Figure 124. Month View Page: Single-Day Schedule

Copying and Applying Schedule Attributes

To copy the schedule attributes of one day and apply them to a different day:



1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.
3. Right-click the calendar day you want to copy.
4. Select Copy from the shortcut menu.



Figure 125. Month View Calendar Shortcut Menu

5. Right-click on the calendar day to which you want to apply the copied schedule attributes.
6. Select Paste from the shortcut menu.
7. Click the Apply button at the bottom of the screen.

To change a custom schedule day to a regular schedule day, right-click and select “Revert to daily schedule” from the shortcut menu.



EDITING SCHEDULES

This section describes how to edit a schedule to change its profile or delete a schedule. The following topics are included:

- [Changing an Existing Schedule Profile](#)
- [Deleting an Existing Schedule Profile](#) on page 153

Changing an Existing Schedule Profile

To change a profile:

1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.
3. Click the Month View tab if it is not currently selected.
4. In the drop-down box, select the type of schedule you want to change. Options are as follows:
 - All Days
 - Weekdays
 - Weekends
 - Custom Mode
5. Select the schedule profile from the drop-down box.
6. Using your mouse, assign new recording modes and times for each camera you want to schedule. Refer to [Setting Up the Camera Recording Mode](#) on page 145 for instructions.
7. Click Save.

8. Click Apply.
9. Click the Apply button at the bottom of the screen.

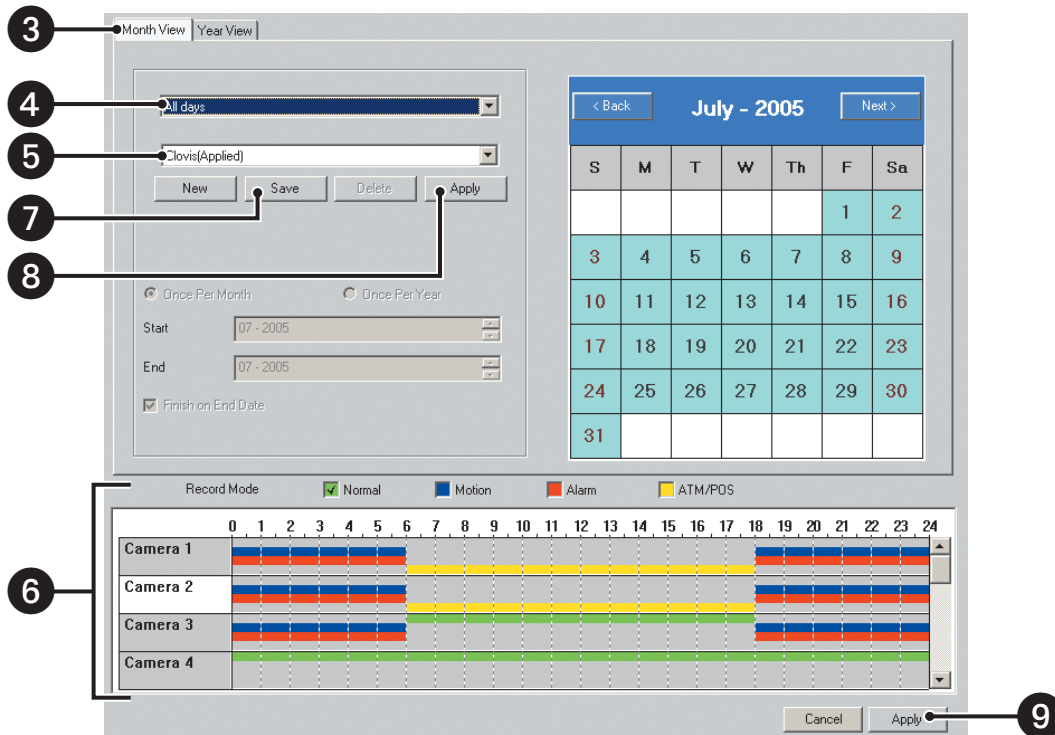




Figure 126. Month View Page

Deleting an Existing Schedule Profile

To delete a schedule profile:

1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.
3. Click the Month View tab if it is not currently selected.
4. In the drop-down box, select the type of schedule you want to change. Options are as follows:
 - All days
 - Weekdays
 - Weekends
 - Custom Mode
5. In the drop-down box, select a profile that is *different* from the one you want to delete. (This step is necessary because you cannot delete a schedule profile that is currently active.)
6. Click Apply.
7. In the drop-down box, select the profile you want to delete.
8. Click Delete.

9. Click Apply.

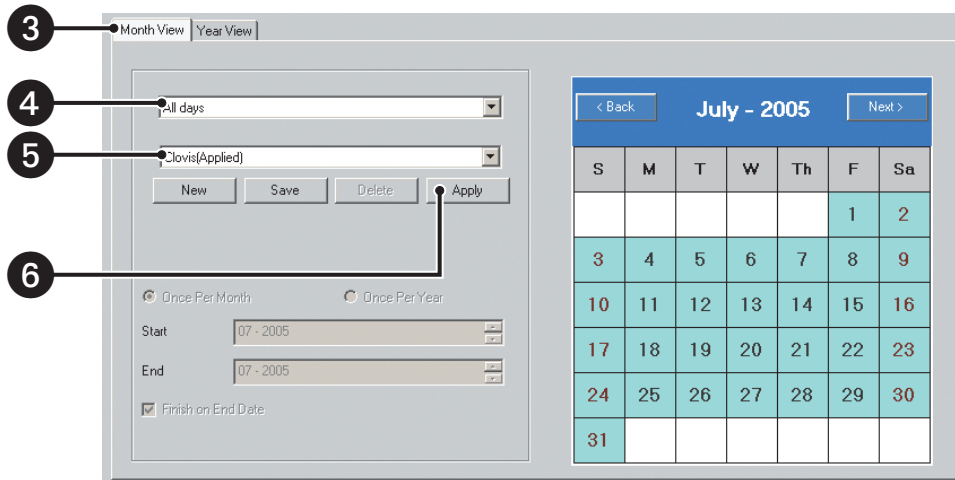


Figure 127. Month View Page

WORKING WITH CUSTOM CAMERA SETTINGS



This section describes how to configure customized camera settings and includes the following topics:

- [Configuring Custom Camera Settings](#)
- [Examples of Custom Camera Settings](#) on page 155

Configuring Custom Camera Settings

Each camera can be configured with custom recording settings.

To customize camera settings for normal, motion, alarm, or ATM/POS recording:

1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.
3. Click the plus (+) sign next to a camera in the Site Tree.
4. Select a recording mode from one of the following options:
 - Normal
 - Motion
 - Alarm
 - ATM/POS
5. In the Camera Settings section, click Frame Rate Configuration. The Frame Rate Configuration dialog box opens.
6. Adjust the parameters in the camera settings section.
7. Click OK.

8. Click Apply.

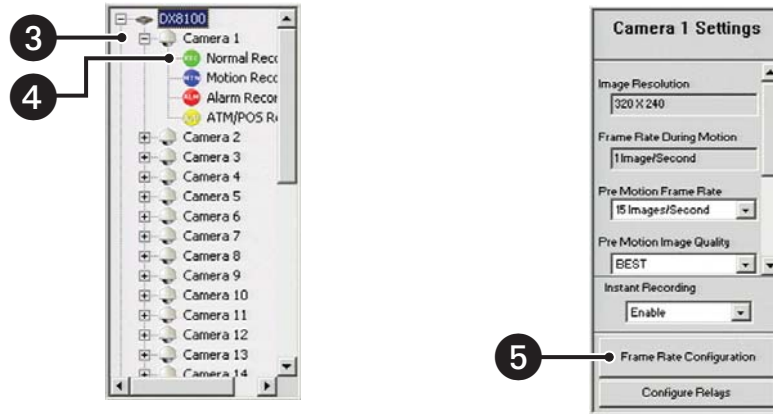


Figure 128. Custom Camera Settings Panel

Examples of Custom Camera Settings

The DX8100 allows you to configure customized camera settings for the following recording modes:

- Normal
- Motion
- Alarm
- ATM/POS

Figure 129 shows camera settings for the supported modes.

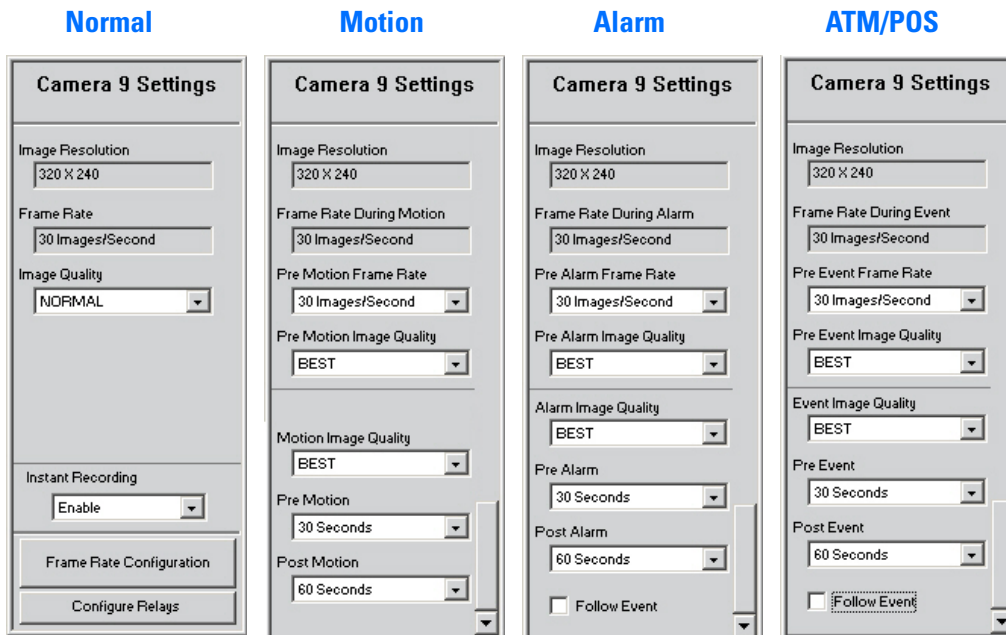


Figure 129. Examples of Custom Camera Settings

Table AG describes the settings for the supported modes.

Table AG. Camera Settings for the Supported Recording Modes

Normal	Motion	Alarm	ATM/POS
Image Resolution*	Image Resolution*	Image Resolution*	Image Resolution*
Frame Rate*	Frame Rate During Motion*	Frame Rate During Alarm*	Frame Rate During ATM/POS*
Image Quality [†] (Best, High, Normal, Low, Lowest)	Pre-Motion Frame Rate	Pre-Alarm Frame Rate	Pre-ATM/POS Frame Rate
	Pre-Motion Image Quality [†] (Best, High, Normal, Low, Lowest)	Pre-Alarm Image Quality [†] (Best, High, Normal, Low, Lowest)	Pre-ATM/POS Image Quality [†] (Best, High, Normal, Low, Lowest)
	Motion Image Quality [†] (Best, High, Normal, Low, Lowest)	Alarm Image Quality [†] (Best, High, Normal, Low, Lowest)	ATM/POS Image Quality [†] (Best, High, Normal, Low, Lowest)
	Pre-Motion (1-60 sec)	Pre-Alarm (1-60 sec)	Pre-Event (1-60 sec)
	Post-Motion (1-180 sec)	Post-Alarm (1-180 sec)	Post-Event (1-180 sec)

*This field appears for information purposes only. To change this setting, refer to [Configuring the Frame Rate](#) on page 156.

[†]Image quality is a function of video compression. Higher quality video images require larger file sizes.

CONFIGURING THE FRAME RATE

The DX8100 can record at frame rates up to 480 ips by National Television System Committee (NTSC) standards and 400 ips by Phase Alternating Line (PAL) standards.

This total frame rate capacity is distributed among 8, 16, 24, or 32 cameras, depending on the configuration of your unit. Resolution and frame rate values can be assigned evenly among all cameras, or they can be configured independently for individual cameras. Frame rate values can also be customized according to recording mode type (normal, motion, alarm, or ATM/POS).


Power Users and Administrators can configure recording frame rates on the DX8100. All cameras are optimized to provide 30 ips frame rates at 320 x 240 resolution for NTSC (352 x 288 resolution for PAL). The DX8100 allows you to change the frame rates available to each camera, while resolution values must remain constant or change both frame rate and resolution settings.

This section describes how to configure the frame rate and includes the following topics:

- [Accessing the Frame Rate Configuration Dialog Box](#)
- [Setting the Frame Rate](#)
- [Setting the Resolution and Frame Rate](#) on page 158
- [Understanding the DX8100 Frame Rate Calculations](#) on page 163

Accessing the Frame Rate Configuration Dialog Box



To access the Frame Rate Configuration dialog box:

1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.
3. In the Camera Settings section, click Frame Rate Configuration. The Frame Rate Configuration dialog box opens.

Setting the Frame Rate

The DX8100 Series HVR is optimized to provide 8, 16, 24, or 32 cameras of continuous video recording, with a frame rate of 30 ips at a resolution of 320 x 240 (NTSC) or 320 x 288 (PAL). The DX8100 allows you to change the frame rate independent of the resolution. For information about accessing the Frame Rate Configuration dialog box, refer to [Accessing the Frame Rate Configuration Dialog Box](#).

To set the frame rate values for cameras:

1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.
3. In the Camera Settings section, click Frame Rate Configuration. The Frame Rate Configuration dialog box opens.
4. Select the button for the recording mode you want to configure. Options are as follows:
 - 604
 - 704
 - Normal
 - Motion
 - Alarm
 - ATM/POS
5. Do the following:
 - a. Using the ALL frame rate settings slider, set the frame rate for all channels.
 - b. To set the frame rate for an individual channel, use the frame rate slider for that channel to select a frame rate from 1-30 ips (according to the available capacity for the channel). The frame rate of an individual channel is limited to the maximum setting of the ALL frame rate slider.

The frame rate ranges from 1 to 30 ips, depending on the DX8100 Series HVR configuration. The 8-camera HVR has 8 sliders, the 16-camera HVR has 16 sliders, the 24-camera HVR has 24 sliders, and the 32-camera HVR has 32 sliders.
6. Repeat step 5b for each camera you want to configure.
7. Click OK.

8. Click Apply at the Schedule page.

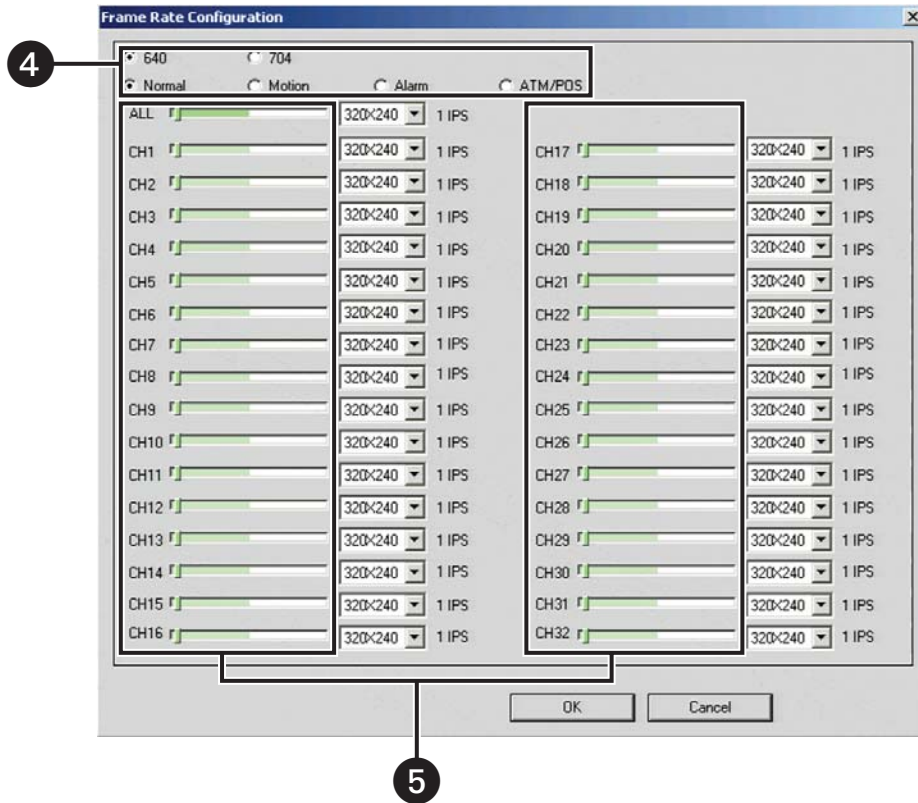




Figure 130. Frame Rate Configuration Dialog Box

Setting the Resolution and Frame Rate

Both resolution and frame rate settings can be adjusted using the Frame Rate Configuration dialog box. For information about accessing the Frame Rate Configuration dialog box, refer to [Accessing the Frame Rate Configuration Dialog Box](#) on page 156.

To set recording resolution and frame rates for each channel:

1. From the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Schedule button . The Schedule page is displayed.
3. In the Camera Settings section, click Frame Rate Configuration. The Frame Rate Configuration dialog box opens.
4. Select the button for the recording resolution and mode you want to configure. Options are as follows:
 - 640
 - 704
 - Normal
 - Motion
 - Alarm
 - ATM/POS

The 640 resolution setting is for the standard VGA format. The 704 resolution is for the cropped D1 video (NTSC, PAL).

5. Select resolution values for individual channels from the drop-down boxes. Table AH describes the available resolution values.
Setting a resolution value for one recording mode sets the resolution value for all modes. For example, setting resolution to 640 x 480 in Motion recording mode will change the resolution to 640 x 480 in Normal and Alarm recording modes as well.

Table AH. Resolution Values

Video Format	NTSC		PAL	
	640	704	640	704
CIF	320 x 240	352 x 240	320 x 288	352 x 288
2CIF	640 x 240	704 x 240	640 x 288	704 x 288
4CIF	640 x 480	704 x 480	640 x 576	704 x 576

6. Do the following:
 - a. Using the ALL frame rate settings slider, set the frame rate for all channels.
 - b. To set the frame rate for individual channels, use the frame rate slider for each channel to select a frame rate from 1-30 ips (according to the available capacity for that channel). The frame rate of an individual channel cannot exceed the maximum setting of the ALL frame rate slider.
7. Click OK.
8. Click Apply when you return to the Schedule Setup screen.

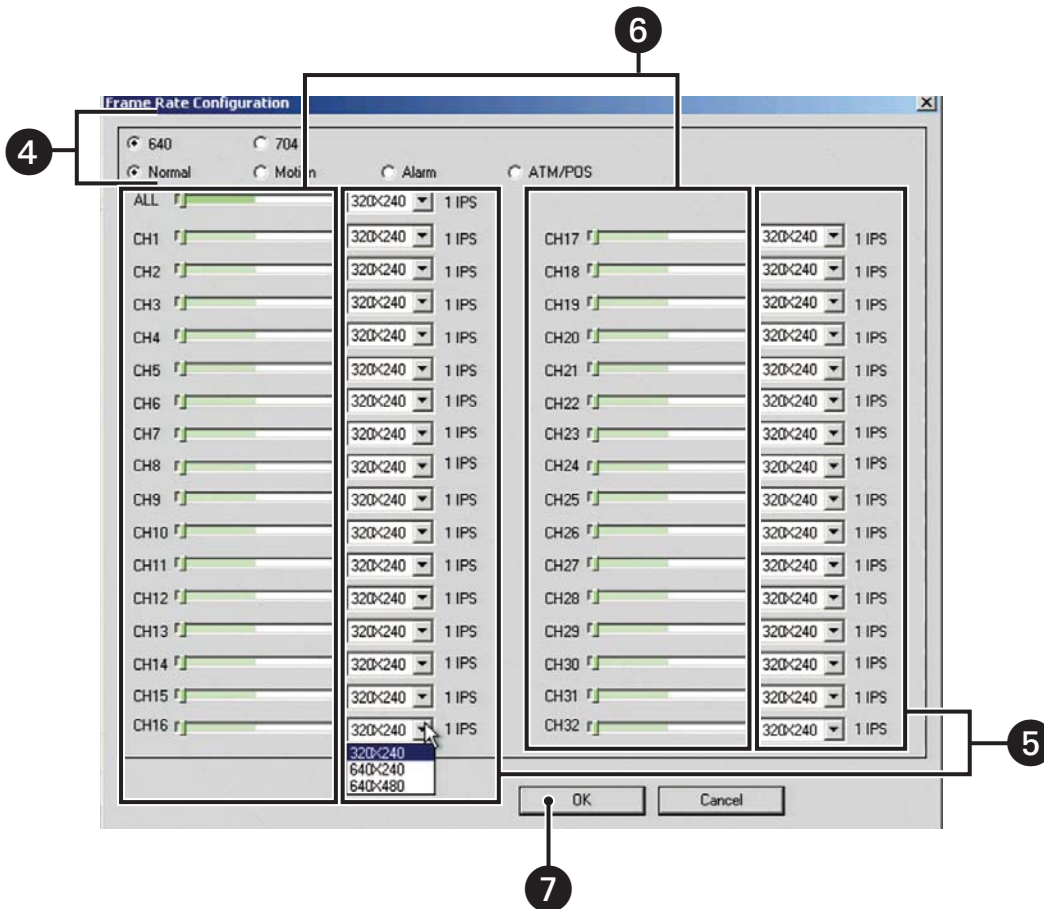


Figure 131. Frame Rate Configuration Screen

Understanding DX8100 Server Maximum IPS Recording

The DX8100 can record at frame rates up to 480 IPS NTSC and 400 IPS PAL. The total frame rate capacity is distributed among 8/16/24/32 channels, depending on the configuration of your unit. Resolution and frame rate values can be assigned evenly among all channels, or they can be configured independently for individual channel. Frame rate values can also be customized according to recording mode (normal, motion, alarm, and ATM/ POS). For information about setting up the DX8100 to record at the maximum rate and resolution, refer to [Setting Up DX8100 for Maximum IPS Recording](#).

Table AI. DX8100 Server Maximum IPS Recording

Model	Format	NTSC IPS		PAL IPS	
		Total	Per Camera	Total	Per Camera
DX8108	CIF	240	30	200	25
	2CIF	120	15	100	12
	4CIF	60	7	50	6
DX8116	CIF	480	30	400	25
	2CIF	240	15	200	12
	4CIF	120	7	100	6
DX8124	CIF	360	15	300	12
	2CIF	180	6	150	6
	4CIF	90	3	75	3
DX8132	CIF	480	15	400	12
	2CIF	240	6	200	6
	4CIF	120	3	100	3




Setting Up DX8100 for Maximum IPS Recording

Table AJ describes how the DX8100 organizes cameras (channels) into groups of four cameras per group. To achieve the maximum recording rate and resolution: (30 ips at 4CIF [NTSC] or 25 ips at 4CIF [PAL]), enable one camera from each group while the other three cameras in the group are disabled. For information about the various recording rates and resolutions, refer to [Understanding DX8100 Server Maximum IPS Recording](#).

Table AJ. DX8100 Camera Grouping

Model	Group	Assigned Camera
DX8108	1	1-4
	2	5-8
DX8116	1	1-4
	2	5-8
	3	9-12
	4	13-16

To set up the DX8100 to record at the maximum rate and resolution:

1. Do one of the following:
 - On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
 - If the Setup dialog box is already open, click the Camera button . The Camera page is displayed.
2. In the Camera Properties section, for Group 1, do the following:
 - a. Select a camera from the drop-down box. (You can also select a camera from the Site Tree by clicking on it.)
 - b. For the camera you want to enable, verify that the Disable check box is not selected.
 - c. For the remaining cameras in the group, click the Disable check box to disable the respective camera.
3. Repeat step 2 for Groups 2, 3, and 4 (if applicable).
4. Click Apply.
5. Click the Schedule button . The Schedule page is displayed.
6. Verify that the enabled camera from each group is displayed in the Site Tree.

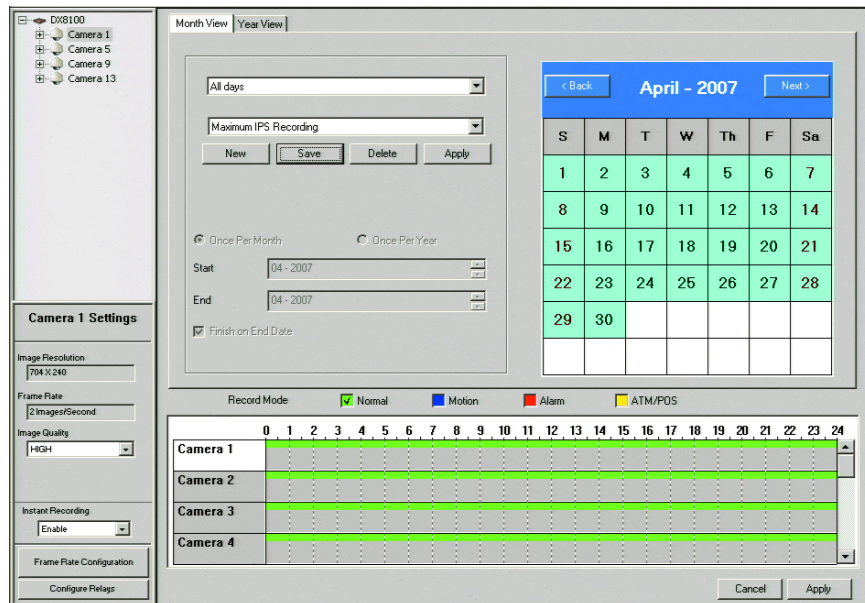


Figure 132. Setting Up DX8100 for Maximum IPS Recording

7. Click the Frame Rate configuration button. The Frame Rate Configuration screen is displayed.

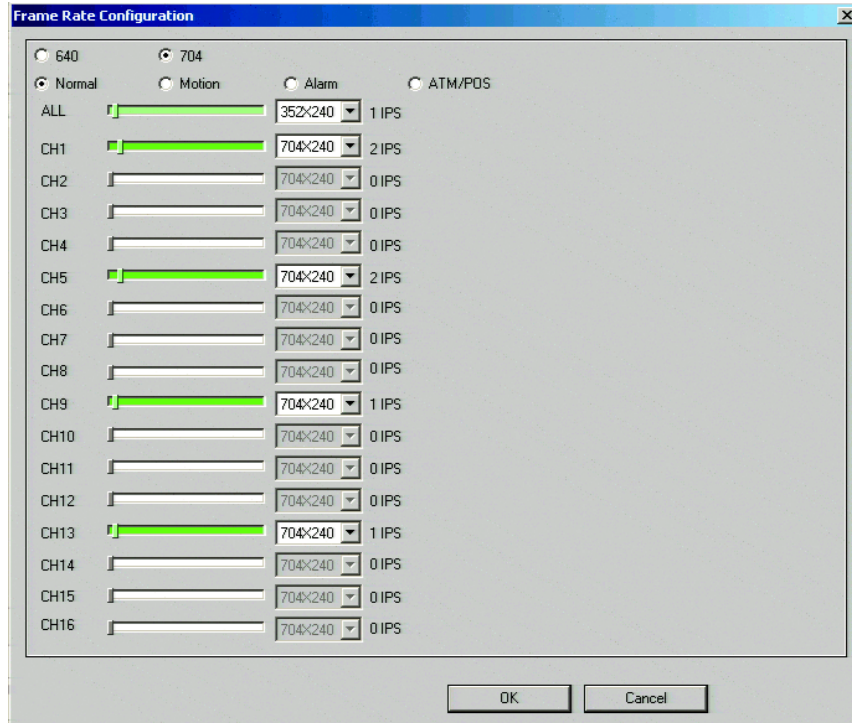


Figure 133. Frame Rate Configuration Screen

8. Do the following:
 - a. Using the ALL frame rate settings slider, set the frame rate to 30 ips. The recording rate for each enabled camera is changed to 30 ips.
 - b. For the ALL resolution setting, from the drop-down box, select 704 x 480 from the drop-down box. The resolution for each enabled camera is set to 704 x 480.
 - c. Click OK.
9. Click Apply at the Schedule page, and verify that each enabled camera listed in the Site Tree is configured to record at 30 ips at 4CIF.

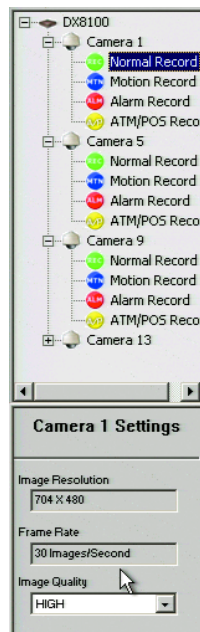


Figure 134. Maximum Rate and Resolution Recording

Understanding the DX8100 Frame Rate Calculations

The DX8100 uses a complex algorithm to calculate the amount of recording resources available for each channel. This calculation takes into account factors such as the number of enabled cameras; whether uniform or mixed resolution values are used; recording type (continuous, alarm, or motion); and the frame rate settings of enabled channels. The resulting calculations provide the operator with a margin of available frame rate capacity to distribute among the recorder's channels. This margin of frame rate capacity, or "headroom," is presented to the user as color-filled sections of the frame rate sliders. White areas on the slider represent frame rate capacity that is not available to that channel. In certain cases, adjusting the available frame rates of one channel or resolution type may free up capacity for other channels. Figure 135 shows the available and unavailable frame rate capacity.

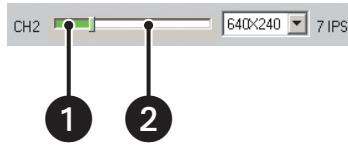


Figure 135. Example of Frame Rate Capacity

Table AK describes the available and unavailable frame rate capacity.

Table AK. Frame Rate Capacity

Item	Description
1	Available frame rate capacity
2	Unavailable frame rate capacity

SETTING UP ADVANCED RELAY OUTPUT

Relays work much like switches. When triggered, relays can activate external devices such as sirens, light fixtures, and door locks. The DX8100 Series HVR allows Administrators and Power users to link relays to cameras and alarms. Up to 20 seconds of delay can be set from the moment an event is triggered to the time when a relay is activated.



Make sure you have linked relays to the appropriate cameras and alarm inputs before attempting to configure them. For instructions on linking alarms and relays, refer to [Linking Alarm Inputs to a Camera](#) on page 39 and [Linking Relay Outputs to Alarm Inputs](#) on page 40.

This section describes how to setup advanced alarm and motion relay output and includes the following topics:

- [Configuring Advanced Motion-Activated Relay Output](#)
- [Configuring Advanced Alarm-Activated Relay Output](#) on page 165
- [Configuring Advanced ATM/POS-Activated Relay Output](#) on page 166
- [Configuring Advanced Video Loss-Activated Relay Output](#) on page 167

Configuring Advanced Motion-Activated Relay Output

To configure a motion relay output:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click Schedule button . The Schedule page is displayed.
3. Click the Configure Relays button. The Configure Relays dialog box opens.
4. Click the Motion tab.
5. Configure each relay that is linked to a camera:
 - a. Click the drop-down box to select a relay.
 - b. Select a relay time value from the Activation Period drop-down box.
6. Click Save.

7. Click Exit.

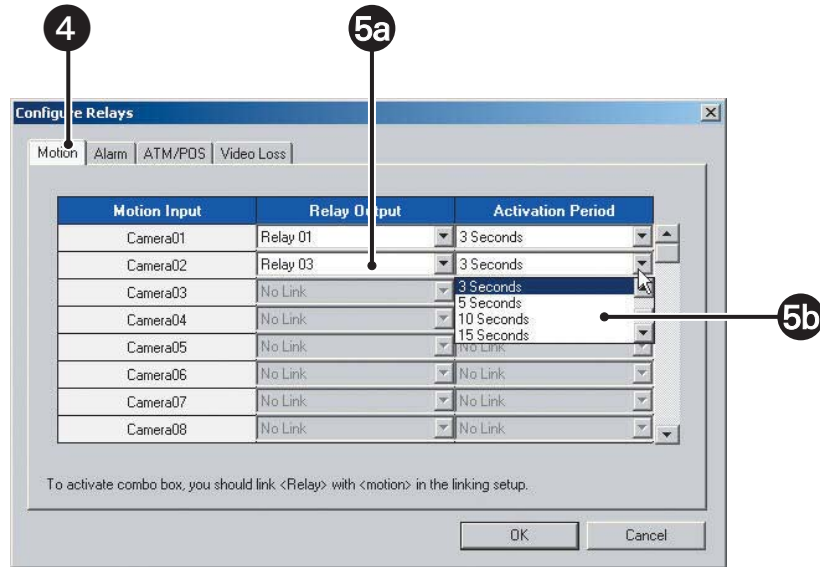


Figure 136. Linking Relays to Motion Detection



Table AL describes the available motion-activated relay settings.

Table AL. Motion-Activated Relay Settings

Option	Result
Disable	Relay will not activate when motion is detected.
Follow Event	Relay will activate at the exact moment that motion is detected.
1, 3, 5, 10, 15, and 20 Seconds	Sets the amount of time the relay will remain active after motion has been detected.

Configuring Advanced Alarm-Activated Relay Output

To configure an alarm relay output:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click Schedule button . The Schedule page is displayed.
3. Click the Configure Relays button. The Configure Relays dialog box opens.
4. Click the Alarm tab if it is not already selected.
5. Configure each relay that is linked to an alarm:
 - a. Click the drop-down box to select a relay.
 - b. Select a relay time value from the Activation Period drop-down box.

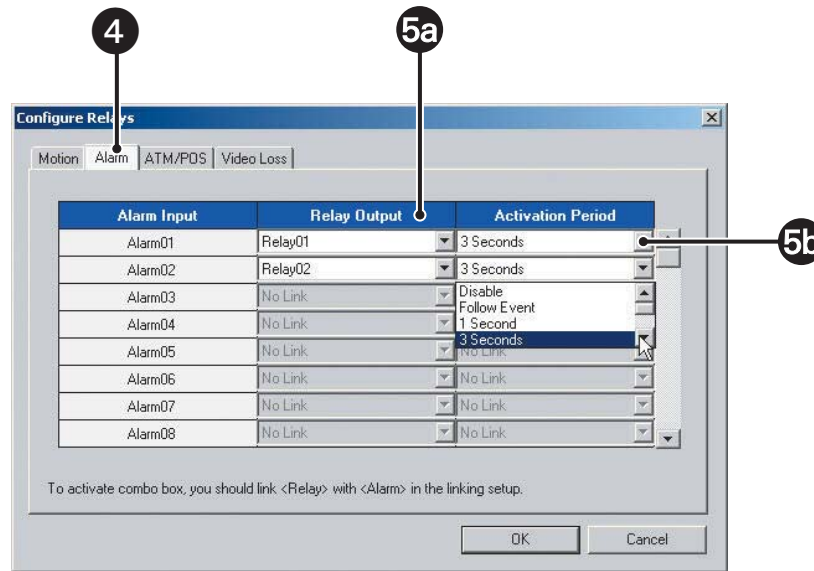


Figure 137. Linking Relays to Alarms



Table AM describes the available alarm-activated options.

Table AM. Alarm-Activated Relay Settings

Option	Result
Disable	Relay will not activate when the alarm is triggered.
Follow Event	Relay will activate at the exact moment the alarm is triggered.
1, 3, 5, 10, 15, and 20 Seconds	Sets the amount of time the relay will remain active after the alarm has been triggered.

Configuring Advanced ATM/POS-Activated Relay Output

To configure an ATM/POS-activated relay output:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click Schedule button . The Schedule page is displayed.
3. Click the Configure Relays button. The Configure Relays dialog box opens.
4. Click the ATM/POS tab if it is not already selected.
5. Configure each relay that is linked to an ATM/POS:
 - a. Click the drop-down box to select a relay.
 - b. Select a relay time value from the Activation Period drop-down box.

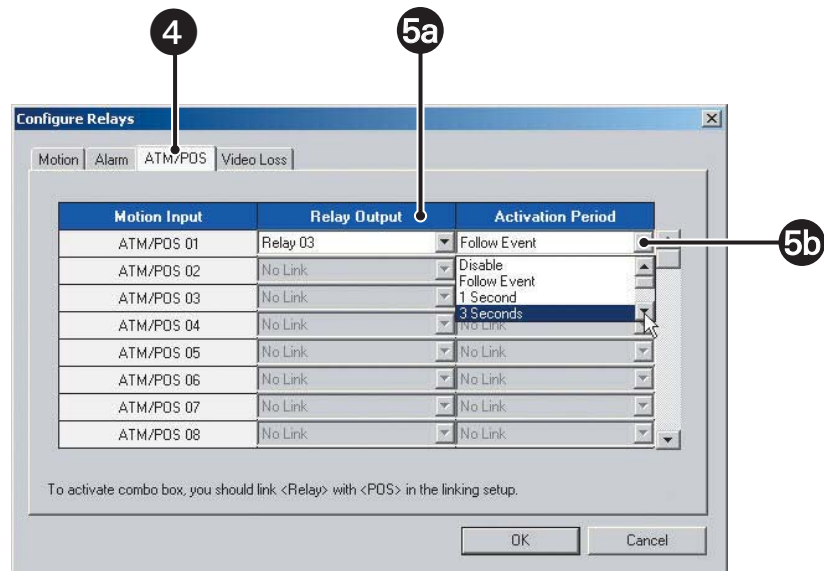


Figure 138. Linking Relays to ATM/POS



Table AN describes the available ATM/POS-activated relay options.

Table AN. ATM/POS-Activated Relay Settings

Option	Result
Disable	Relay will not activate when the ATM/POS event occurs.
Follow Event	Relay will activate at the exact moment the ATM/POS event occurs.
1, 3, 5, 10, 15, and 20 Seconds	Sets the amount of time the relay will remain active after the ATM/POS event occurs.

Configuring Advanced Video Loss-Activated Relay Output

To configure an advanced video loss-activated relay output:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click Schedule button . The Schedule page is displayed.
3. Click the Configure Relays button. The Configure Relays dialog box opens.
4. Click the Video Loss tab if it is not already selected.
5. Configure each relay that is linked to an alarm:
 - a. Click the drop-down box to select a relay.
 - b. Select a relay time value from the Activation Period drop-down box.

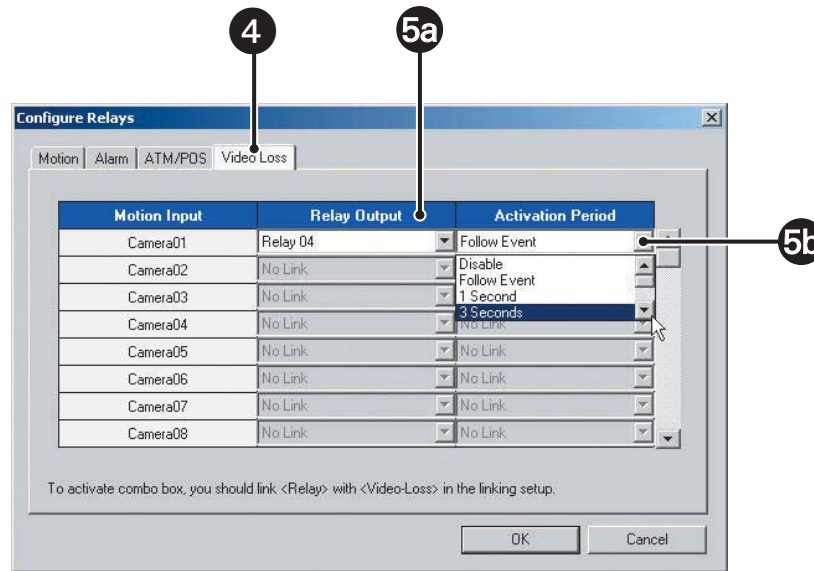


Figure 139. Linking Relays to Video Loss

Table A0 describes the available video loss-activated relay settings.

Table A0. Video Loss-Activated Relay Settings

Option	Result
Disable	Relay will not activate when a video loss event occurs.
Follow Event	Relay will activate at the exact moment the video loss event happens.
1, 3, 5, 10, 15, and 20 Seconds	Sets the amount of time the relay will remain active after the video loss event occurs.

SETTING UP NETWORK PROPERTIES

The DX8100 networking capability allows you to network up to five DX8100s. You can configure such networking options as follows:

- [Configuring the DX8100 for Network Access](#)
- [Setting Up DHCP](#)
- [Setting Up a Static IP Address](#)
- [Setting Up TCP/IP and Bandwidth Throttle](#)
- [Setting Up DNS/WINS](#)
- [Working with Time Synchronization](#) on page 172
- [Setting Up COM1 Port Properties](#)

This section describes how to set up DX8100 network communication and includes the following topics:

- [Configuring the DX8100 for Network Access](#) on page 168
- [Setting Up TCP/IP and Bandwidth Throttle](#) on page 170
- [Working with Multicasting](#) on page 170
- [Accessing Network Information](#) on page 171
- [Setting Up DNS/WINS](#) on page 172

CONFIGURING THE DX8100 FOR NETWORK ACCESS

Using the TCP/IP protocol, up to five DX8100 Series HVRs can be networked for remote viewing and management. In addition, up to five simultaneous computer, Web, and mobile clients can connect to each HVR. The DX8100 Series HVR supports both static IP addressing and dynamic addressing through DHCP. Consult your network administrator for more information about IP address configuration.



The system must be turned on and connected to a secured private network, and you must be logged in with either Power User or Administrator access to configure network software settings. You must reboot the HVR for any network configuration changes to take effect.

This section describes how to setup network access and includes the following topics:

- [Setting Up DX8100 Network Access](#)
- [Setting Up DHCP](#) on page 169
- [Setting Up a Static IP Address](#) on page 170

Setting Up DX8100 Network Access

To begin the network setup process:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
2. In the Setup dialog box, click Network button . The Network page is displayed.
3. Click the Network tab if it is not already selected.
4. Enter a new name for your HVR in the Site Name box. (Site names can be up to 30 characters in length; the default site name is DX8100.)
5. Enter a unique System ID for your HVR in the System ID field. (System IDs must start with a letter, be 15 characters or less, and not include spaces or special characters.)

Your HVR's site name is used to identify your system to clients and other DX8100 servers. Your HVR's system ID is used to uniquely identify your system on a LAN. System IDs are required to prevent possible conflicts with other network devices.

6. Set up the. For information about setting up DHCP or static IP addressing, refer to [Setting Up DHCP](#) on page 169 or [Setting Up a Static IP Address](#) on page 170.

The screenshot shows the Network Setup page with the following fields and settings:

- Site Name:** DX8100 (Callout 4)
- System ID:** DX8100_Bld7 (Callout 5)
- Obtain An IP Address Automatically (DHCP)
- IP Address:** 0 . 0 . 0 . 0
- Subnet Mask:** 0 . 0 . 0 . 0
- Default Gateway:**
- DX8100 Base Port:** 9002
- Software Upgrade Port:** 9003
- Information Port:** 9005
- Bandwidth Throttle:** Slider set to 64K (range: 64K to 10M, 3.0 Mbps)
- Image quality:** NORMAL
- Enable Multicasting
- Multicast Group IP:** 224 . 0 . 1 . 1
- Buttons:** Network Information, Cancel, Apply

Callouts: 3 points to the Network tab; 4 points to the Site Name field; 5 points to the System ID field.

Figure 140. Network Setup Page

Setting Up DHCP

Your network must support DHCP, and an active DHCP server must be present for dynamic addressing to work. If you select DHCP and your network does not include an active DHCP server, the IP address settings will default to addresses in the 169.254.x.x range. Consult your network administrator for more information.

Access the Network page to set up the DHCP options. For information about accessing the Network page, refer to [Setting Up DX8100 Network Access](#) on page 168.

To configure the HVR to acquire a dynamic IP address through DHCP:

1. In the Network page, click the check box labeled Obtain An IP Address Automatically (DHCP).
2. Click Apply.

Setting Up a Static IP Address

The DX8100 allows you to set up a static IP address. This information can be obtained from your network administrator.

Access the Network page to set up the static IP address. For information about accessing the Network page, refer to [Setting Up DX8100 Network Access](#) on page 168.

To set up a static IP address:

1. In the Network page, verify that the Obtain An IP Address Automatically (DHCP) check box is *not* selected.
2. In the IP Address box, enter a unique IP address (for example, 10.10.0.170). The last three digits must be different for each recorder (for example, 171, 172, 173, and so forth).
3. In the Subnet Mask box, enter the subnet mask (for example, 255.0.0.0 is the default).
4. In the Default Gateway box, enter the gateway address (the IP address of the default router on your immediate network segment).
5. Click Apply.

SETTING UP TCP/IP AND BANDWIDTH THROTTLE

The DX8100 uses the TCP/IP networking protocol to communicate over LAN and WAN networks. TCP/IP uses logical network ports to organize data transmissions and to ensure that data packets are delivered to the proper application. For example, e-mail is traditionally delivered through TCP/IP port 25 and Web pages through port 80.

Table AP describes the ports assigned to direct video and control information into and out of the DX8100. You should keep port numbers set at their default values unless there is a known conflict with your existing network infrastructure. Consult your network administrator before changing any port information about the DX8100.

Table AP. TCP/IP Ports Used by the DX8100

Port Number	User Changeable	Description
9002	Yes	Base port for transmission of video, audio, and interface data
9003	Yes	Software upgrades
9004	Yes	Emergency agent notifications
9005	No	Information port
13900	No	Ping port

Access the Network page to set up the TCP/IP DHCP and bandwidth throttle options. For information about accessing the Network page, refer to [Setting Up DX8100 Network Access](#) on page 168. Consult your network administrator before assigning or changing port numbers. Make sure that the ports are not blocked internally but are protected from external threats by a firewall. Client and server ports must be identical.

To configure the base port and software upgrade port:

1. If necessary, in the DX8100 Base Port box, enter a new base port number (9002 is the default).
2. If necessary, in the Software Upgrade Port box, enter a new software upgrade port (9003 is the default).
3. If necessary, in the Information Port box, enter a new information port (9005 is the default).
4. To set the network bandwidth throttle to limit the amount of network resources allocated to client connections, drag the network bandwidth throttle slider to the desired value. (Client bandwidth can be adjusted from a minimum of 64 Kbps to a maximum of 10 Mbps in increments of 64 Kbps.)
5. Click Apply.

WORKING WITH MULTICASTING

The DX8100 supports a layer 2 multicast feature that allows the multicast and unicast mode to co-exist. In this case, the DX8100 Web Client and DX8100 Client software can connect to a DX8100 server simultaneously. The recommended multicasting IP range is from 224.0.1.1 to 224.0.1.253. If the DX8100 server is not configured to operate in the multicast mode, then the DX8100 network automatically uses the unicast protocol.

The DX8100 layer 2 multicast feature conserves bandwidth and reduces network traffic by simultaneously delivering one stream of data to an unlimited number of connections.

This section describes the DX8100 layer 2 multicasting feature and is organized into the following topics:

- [Multicast Requirements](#)
- [Enabling Multicasting](#) on page 171

Multicast Requirements

The DX8100 multicast feature has the following requirements:

Table AQ. DX8100 Multicast Requirements and Operation

Item	Description
Network equipment	The switch or router must support layer 2 multicasting.
Network requirements	<ul style="list-style-type: none"> • The DX8100 Web Client establishes multicast connections with DX8100 servers in its own VLAN. • The network must support Internet Group Management Protocol (IGMP). • The number of DX8100 Web Client connections is unlimited.
Operation	<ul style="list-style-type: none"> • Initially, the DX8100 Web Client uses the IP address of the target DX8100 server (using the TCP port) to establish a connection to the DX8100. After the connection is established, the session switches from using TCP to using User Data Protocol (UDP). • Since the Web Client connection is using UDP, the user does not have to log in or out of the DX8100 server. The Web Client displays the connection status: connected or disconnect. • The PTZ feature is not available. • The Web Client displays only the camera name in the Site Tree. All other camera recording details, such as the recording mode, resolution, recording rate, and so forth are not displayed. • The camera name and DX8100 server information is not updated until a new connection to the DX8100 is initiated. • The Web Client monitors the UDP socket every 10 seconds to ensure that live data is being received. If live data is not received within 30 seconds, the Web Client will disconnect from the DX8100 server after two minutes and automatically reconnect to the DX8100.

Enabling Multicasting

The recommended multicasting IP range is from 224.0.1.1 to 224.0.1.253.

To enable multicasting:

1. In the Network page, click the check box labeled Enable Multicasting.
2. In the Multicast Group IP box, enter the multicast group IP address.
3. Click Apply. The DX8100 message dialog box opens, prompting you to restart the DX8100.
4. Do one of the following:
 - Click Yes to restart the DX8100.
 - Click No to cancel the restart action. If you exit the Network page, you are not prompted to apply the previous settings. If you open the Network page again, the Enable Multicasting check box is selected. However, the DX8100 must still be restarted to activate the multicasting mode.

ACCESSING NETWORK INFORMATION

Access the Network page to view DX8100 network settings. For information about accessing the Network page, refer to [Setting Up DX8100 Network Access](#) on page 168.

To access network information, such as IP and default gateway addresses:

1. In the Network page, click Network Information. The IP Configuration information box appears.
2. Click OK to return to the Network page.

SETTING UP DNS/WINS

The DX8100 allows you to set up DNS or WINS services, if your network supports these services. Access the Network page to configure DX8100 DNS/WINS services. For information about accessing the Network page, refer to [Setting Up DX8100 Network Access](#) on page 168.

To set up DNS/WINS:

1. In the Network page, click the DNS/WINS tab. The DNS/WINS page is displayed.
2. Do one of the following:
 - If you are using dynamic IP addressing through a DHCP server, click the "Obtain DNS/WINS info from DHCP" check box.
 - If you are using static IP addressing, provide the following information in the appropriate fields. This information can be obtained from your network administrator.
 - (1) Primary DNS server IP address
 - (2) Secondary DNS server IP address
 - (3) Primary WINS server IP address
 - (4) Secondary WINS server IP address
3. Click Apply to update the configuration.

WORKING WITH TIME SYNCHRONIZATION



The DX8100 supports the Simple Network Time Protocol (SNTP), which allows the DX8100 to access Network Time Protocol (NTP) servers to synchronize DX8100 clocks. The DX8100 allows you to manually or automatically synchronize its time to an NTP time server. Additionally, the DX8100 server can provide time synchronization for the other DX8100 network. There can be only one NTP time server in the DX8100 network.

This section describes how to synchronize the DX8100 clock and is organized into the following topics:

- [Adding an NTP Time Server](#) on page 173
- [Editing an NTP Time Server](#) on page 174
- [Deleting an NTP Server](#) on page 175
- [Comparing the DX8100 and NTP Server Time](#) on page 175
- [Manually Synchronizing the DX8100 Time](#) on page 175
- [Setting Up Automatic Time Synchronization](#) on page 176
- [Enabling Database Overwrite](#) on page 176

Adding an NTP Time Server

To add an NTP time server:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
2. In the Setup dialog box, click Network button . The Network page is displayed.
3. Click the NTP tab.
4. Do the following:
 - a. Click Add/Edit/Delete. The NPT Server List dialog box opens.

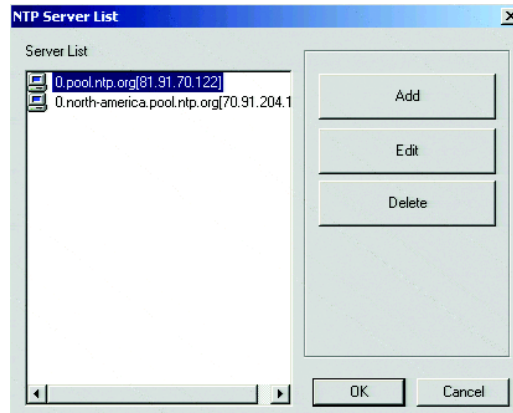


Figure 141. NTP Server List Dialog Box

- b. Click Add. The Add/ Edit NTP Server dialog box opens.

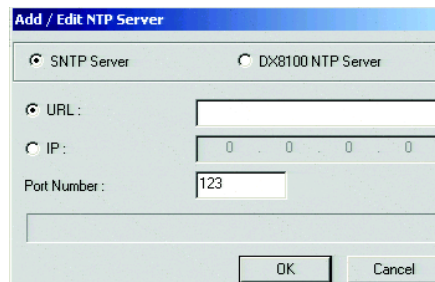




Figure 142. Add / Edit NTP Server Dialog Box

- c. To select the NTP server, do one of the following:
 - Do nothing and accept the default SNTP Server option button. In this case, an NTP server is used to provide time synchronization.
 - Click the DX8100 NTP Server option button to select the DX8100 to provide time synchronization for the network.
 - d. To specify the NTP server addressing, do one of the following:
 - If the DX8100 NTP Server option is selected, the URL option is not available. In this case, the IP option button is automatically selected and you must provide the DX8100 NTP Server IP address.
- or
- If the SNTP Server options is selected, you can do nothing and accept the default URL option button. In this case, you must enter the SNTP Server URL.
 - Click the IP option button and enter the SNTP Server IP address.
- e. Enter either the NTP server URL or IP address.
 - f. Accept the default NPT server port number or enter a port number.
5. Click OK. The DX8100 attempts to locate the NTP server. If successful, the NTP server is added to the NTP Server List. The DX8100 displays the message "NTP server not found" if the server cannot be located.

Editing an NTP Time Server

To edit an NTP time server:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
2. In the Setup dialog box, click Network button . The Network page is displayed.
3. Click the NTP tab. The NTP page is displayed.

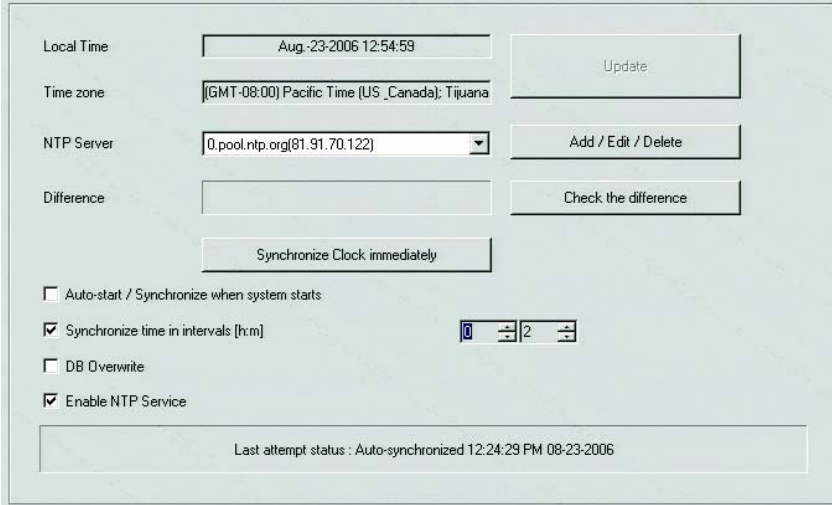




Figure 143. Editing an NTP Time Server

4. In the NTP Server drop-down box, select an NTP server.
5. Click Add / Edit / Delete. The NTP Server List dialog box opens.
6. In the Server List, select a server.
7. Click Edit. The Add / Edit NTP Server dialog box opens.
8. Make the desired change.
9. Click OK.
10. Click Apply.

Deleting an NTP Server

To delete an NTP time server:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
2. In the Setup dialog box, click Network button . The Network page is displayed.
3. Click the NTP tab. The NTP page is displayed.
4. In the NTP Server drop-down box, select an NTP server.
5. Click Add/Edit/Delete. The NTP Server List dialog box opens.
6. In the Server List, select a server.
7. Click Delete. The selected server entry is deleted.
8. Do one of the following:
 - To accept the deletion and close the dialog box, click OK.
 - To reject the deletion and close the dialog box, click Cancel.
9. Make the desired change.
10. Click Apply.

Comparing the DX8100 and NTP Server Time

The DX8100's "check the difference" feature allows you to quickly compare its time with an external time source.

To compared the DX8100's time with an external time source:

1. On the DX8100 toolbar, click Setup. The Setup dialog opens to the Camera page.
2. In the Setup dialog box, click Network. The Network page is displayed.
3. Click the NTP tab. The NTP page is displayed.
4. In the NTP Server drop-down box, select an NTP server.
5. Click "Check the Difference." The difference between the DX8100 server and NTP Server time is displayed in the Difference time area.

Manually Synchronizing the DX8100 Time

You can manually synchronize the DX8100 to an external time source. You do not have to enable the NTP service, but you do need access to an NTP time server.

To manually synchronize the DX8100 to an external time server:

1. On the DX8100 toolbar, click Setup. The Setup dialog opens to the Camera page.
2. In the Setup dialog box, click Network. The Network page is displayed.
3. Click the NTP tab. The NTP page is displayed.
4. In the NTP Server drop-down box, select an NTP server. For information about adding an NTP time server, refer to [Adding an NTP Time Server](#) on page 173.
5. Click Synchronize Clock Immediately. The DX8100 time is synchronized to the NTP time server.

Setting Up Automatic Time Synchronization

You can configure the DX8100 to be automatically synchronized to an NTP time server. You can also set the synchronization interval from zero to 23 hours and 59 minutes. In this case, you have to enable the NTP service and synchronize time in intervals options.

To automatically synchronize the DX8100 to an external time server:

1. On the DX8100 toolbar, click Setup. The Setup dialog opens to the Camera page.
2. In the Setup dialog box, click Network. The Network page is displayed.
3. Click the NTP tab. The NTP page is displayed.
4. In the NTP Server drop-down box, select an NTP server. For information about adding an NTP time server, refer to [Adding an NTP Time Server](#) on page 173.
5. Do the following:
 - a. To synchronize the DX8100 upon startup, click the Auto-start/Synchronize When System Starts check box.
 - b. Click the Synchronize Time in Intervals [H:M] check box.
 - c. In the Synchronize Time in Intervals [H:M] spin box, set the interval in hours and minutes.
 - d. Click the Enable NTP Service check box.
6. Click Apply.

Enabling Database Overwrite

In the event that the DX8100 time is reset to a period earlier than the current time, the DX8100 allows you to do one of the following:

- **Database Overwrite:** Enabling this option causes the DX8100 to overwrite previously recorded data, coincide with the time at which the clock is turned back. For example, if at 2:00 p.m. (current time) you set back the DX8100 clock to 1:30 p.m. (an earlier time), the previously recorded data beginning at 1:30 p.m. is overwritten.
- **Select not to enable Database Overwrite:** If this option is not enabled, previously recorded data is not overwritten. For example, if at 2:00 p.m. (current time) you set back the DX8100 clock to 1:30 p.m. (an earlier time), the DX8100 does not record data between 1:30 p.m. and 2:00 p.m. In this case, any video events occurring during that half-hour time period are not recorded. Recording does not begin again until after the DX8100 clock exceeds 2:00 p.m.

To enable Database Overwrite:

1. On the DX8100 toolbar, click Setup. The Setup dialog opens to the Camera page.
2. In the Setup dialog box, click Network. The Network page is displayed.
3. Click the NTP tab. The NTP page is displayed.
4. Click the Database Overwrite check box to select the option.

SETTING UP PORT AND DEVICE COMMUNICATION PROPERTIES

The system must be powered on, and you must be logged in as a Power User or Administrator to configure communication port settings. Refer to the instructions that came with your peripheral device for correct settings.

This section describes how to set up port and device communication properties including the following topics:

- [Understanding the Port/Device Page](#)
- [Setting Up ATM/POS Device Communication Ports](#) on page 179
- [Setting Up RS-422/RS-485 Communication Port Properties](#) on page 180
- [Installing or Updating Device Protocols](#) on page 200

UNDERSTANDING THE PORT/DEVICE PAGE

This section describes the Port/Device page. Figure 144 shows the parts of the Port/Device page.

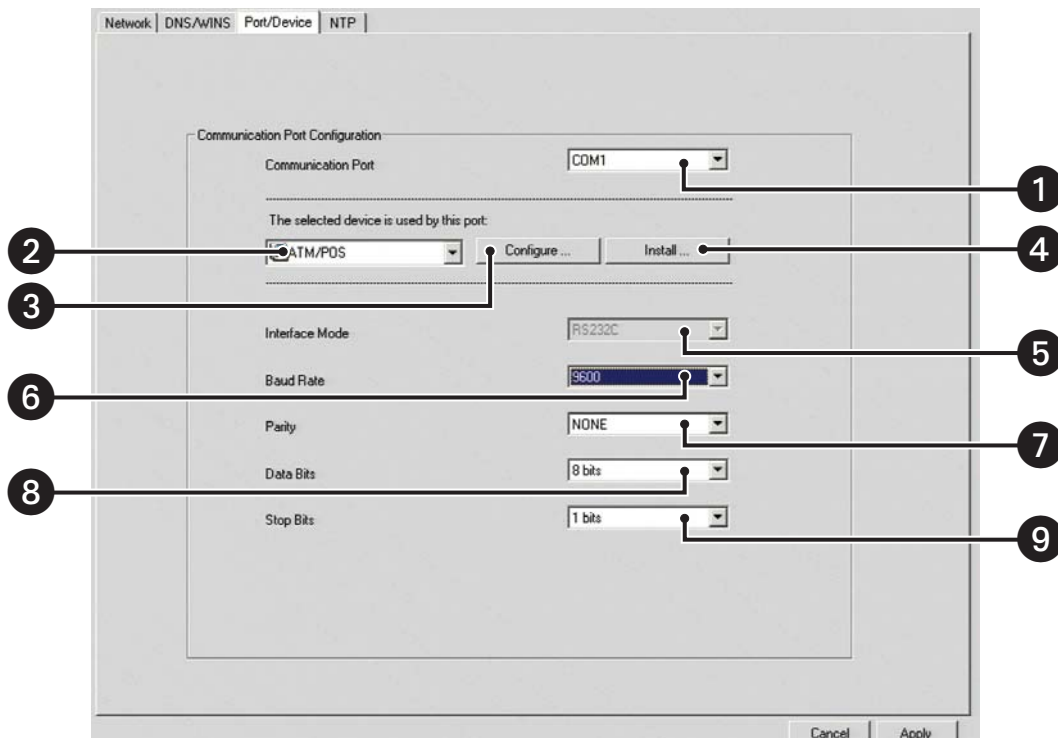


Figure 144. Port/Device Page

Table AR describes the parts of the Port Device page.

Table AR. Parts of the Port Device Page

Item	Part	Description
1	Port	Communications port drop-down box, where you select the port for connecting a device to the DX8100. The available choices are as follows: <ul style="list-style-type: none"> • COM1: Uses RS-232 serial data standard. • Port 1 to 4: Uses either RS-422 or RS-485 serial data standard.
2	Device	Attached device drop-down box, where the type of device is selected to be interfaced to the DX8100 through the communication port.
3	Configure	Device configuration button that opens the Device Configuration dialog box. The Device Configuration dialog box performs two functions, depending on the type of device selected. <ul style="list-style-type: none"> • KBD300A and dome devices: only displays device configuration information. • ATM/POS devices: allows you to configure ATM/POS device options and parameters for the selected device.
4	Install	Protocol installation button that opens the Protocol Install dialog box. The Protocol Install dialog box allows you to do the following: <ul style="list-style-type: none"> • View the current device protocols already installed. • Update the device protocols.
5	Interface Mode	Interface mode drop-down box that allows you to select the serial data standard for the selected device. The DX8100 supports COM1 (RS-232) and Port 1 to Port 4 (RS-422/RS-485).
6	Baud Rate	Baud rate drop-down box that allows you to select the baud rate for each device. Available baud rates are as follows: 1200, 2400, 4800, 9600, 19200, 28800, 38400, 57600, or 115200.
7	Parity	Parity drop-down box. You select the parity for none, odd, or even.
8	Data Bits	Data bits drop-down box. Configure the number of data bits for 5, 6, 7, or 8.
9	Stop Bits	Stop bits drop-down box. Select the number of stop bits for 1 or 2.

Table AS describes the ports and the associated serial data communication standard they support.

- **For COM1:** RS-232 is the default serial data standard.
- **For Port 1 to 4:** RS-422 and RS-485 are the available serial data standards.

Table AS. DX8100 Ports and Serial Data Communication Standards

Port	Serial Data Standard Supported		
	RS-232	RS-422	RS-485
COM1	✓		
1		✓	✓
2		✓	✓
3		✓	✓
4		✓	✓

SETTING UP ATM/POS DEVICE COMMUNICATION PORTS

The DX8100 allows you to use both the COM1 (RS-232) port and Port 1 to Port 4 (RS-422/RS-485) to connect ATM/POS devices. Typically, Port 1 to Port 4 are used to connect the KBD300A and dome devices.

This section describes how to select and configure the ATM/POS device communication port and includes the following topics:

- [Setting Up COM1 Port Properties](#)
- [Selecting the ATM/POS Device Mode and Communications Options](#) on page 181
- [Setting Up an ATM/POS Data Format](#) on page 186
- [Assigning a Data Format to an ATM/POS Device](#) on page 190
- [Setting Up ATM/POS Exceptions](#) on page 191
- [Verifying the ATM/POS Communication Connection](#) on page 196

Setting Up COM1 Port Properties

This topic describes how to set up COM1 communication port properties. Access the Network page to configure the communication ports. For information about accessing the Network page, refer to [Setting Up DX8100 Network Access](#) on page 168. For information about the Port/Device page, refer to [Setting Up Port and Device Communication Properties](#) on page 177.

Table AT describes the COM1 port properties.

Table AT. COM1 Port Properties

Property	Selection
Interface Mode	RS-232 (default)
Baud Rate	1200, 2400, 4800, 9600, 19200, 28800, 38400, 57600, or 115200
Parity	None, Odd, or Even
Data Bits	5, 6, 7, or 8
Stop Bits	1 or 2

To set up COM1 communication properties:

1. In the Network page, click the Port/Device tab. The Port/Device page is displayed.
2. In the Communication Port drop-down box, select COM1. RS-232 is the serial data communication standard.
3. In the device drop-down box, select a device.
4. Configure the following COM port settings using the drop-down boxes provided.
 - Interface mode: RS-232 is the only allowed setting by default.
 - Baud rate
 - Parity
 - Data bits
 - Stop bits
5. Click Apply.

Setting Up RS-422/RS-485 Communication Port Properties

The DX8100 interfaces with the KBD300A, ATM/POS, and third-party dome devices using Port 1 to Port 4. All ports are compatible with both RS-422 or RS-485 serial data communication standard. This setting describes how to connect a device to the DX8100 using Port 1 to Port 4. Access the Network page to configure Port 1 to Port 4 communication properties. For information about accessing the Network page, refer to [Setting Up DX8100 Network Access](#) on page 168. For information about the Port/Device page, refer to [Setting Up Port and Device Communication Properties](#) on page 177.

To configure Port 1 to Port 4 properties:

1. In the Network page, click the Port/Device tab. The Port/Device page is displayed.
2. In the Communication Port drop-down box, select the port number you want to configure.
3. In the device drop-down box, select a device.

ATM/POS devices can use COM1 and Port 1 to Port 4. The KBD300A and third-party dome devices use Port 1 to Port 4. For information about interfacing ATM/POS devices to the DX8100 using COM1, refer to [Setting Up COM1 Port Properties](#) on page 179.

4. Configure the following port settings using the drop-down box.
 - Interface mode
 - Baud rate
 - Parity
 - Data bits
 - Stop bits
5. Click Apply.

SETTING UP ATM/POS DEVICE PROPERTIES

The DX8100 allows you to connect up to 16 ATM/POS devices and provides 2 ATM/POS device modes:

- **Single Mode:** Use this option to connect up to 4 ATM/POS devices to the DX8100.
- **Multi Mode:** Use this option to connect up to 16 ATM/POS devices to the DX8100 over one serial connection.

Single Mode and Multi Mode can be combined to connect up to 16 ATM/POS devices to the DX8100. For information about installing the ATM/POS equipment for each mode, refer to the DX8100 Installation manual.

This section describes how to configure ATM/POS device properties and includes the following topics:

- [Selecting the ATM/POS Device Mode and Communications Options](#)
- [Setting Up an ATM/POS Data Format](#)
- [Assigning a Data Format to an ATM/POS Device](#) on page 190
- [Setting Up ATM/POS Exceptions](#) on page 191
- [Verifying the ATM/POS Communication Connection](#) on page 196
- [Recording ATM/POS Events](#) on page 197

Selecting the ATM/POS Device Mode and Communications Options

This section describes the complete process for configuring DX8100 ATM/POS device communication options. For additional information about each phase of the configuration process, refer to the following topics:

- [Setting Up an ATM/POS Data Format](#)
- [Assigning a Data Format to an ATM/POS Device](#) on page 190
- [Setting Up ATM/POS Exceptions](#) on page 191
- [Verifying the ATM/POS Communication Connection](#) on page 196
- [Recording ATM/POS Events](#) on page 197

To select the device mode and set up the ATM/POS communications options:

1. In the Network page, click the Port/Device tab. The Port/Device page is displayed.
2. Do one of the following:
 - **Single Mode:** In the Communication Port drop-down box, select a port (COM1, Port 1, Port 2, Port 3, or Port 4).
 - **Multi Mode:** In the Communication Port drop-down box, select COM1.
If you select COM1, the Interface Mode option is unavailable and is set to RS-232C by default.
3. In the device drop-down box, select ATM/POS and configure the port settings for Interface mode (the default setting is RS232C for COM1), Baud Rate, Parity, Data Bits, and Stop Bits.

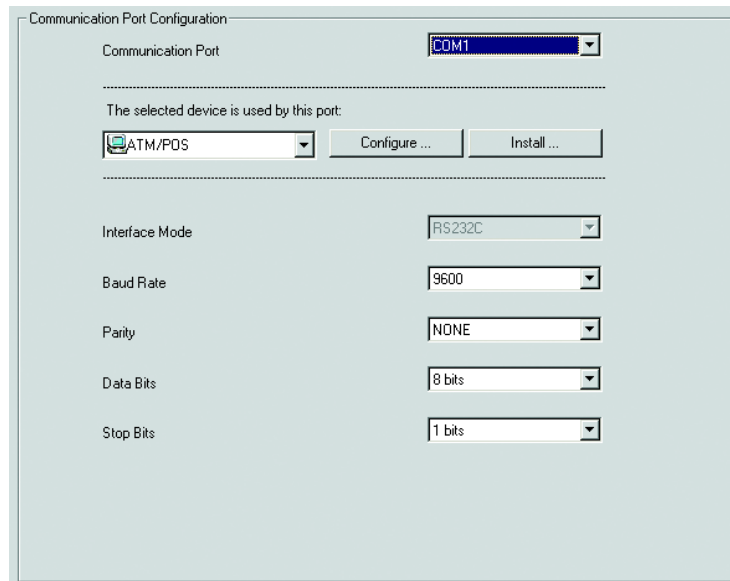


Figure 145. Multi Mode Communication Port Settings

4. In the Port/Device page, do the following:
 - a. In the Communication Port Configuration section, click Configure. The Device Configuration dialog box opens.
 - b. In the Device Mode drop-down box, select either Single Mode (the default setting) or Multi Mode.

5. In the Device Configuration page, do the following:
 - a. Click Data Format. The Data Format List page is displayed. By default, the ER-650 data format is selected. You can modify the ER-650 data format or create a new format.

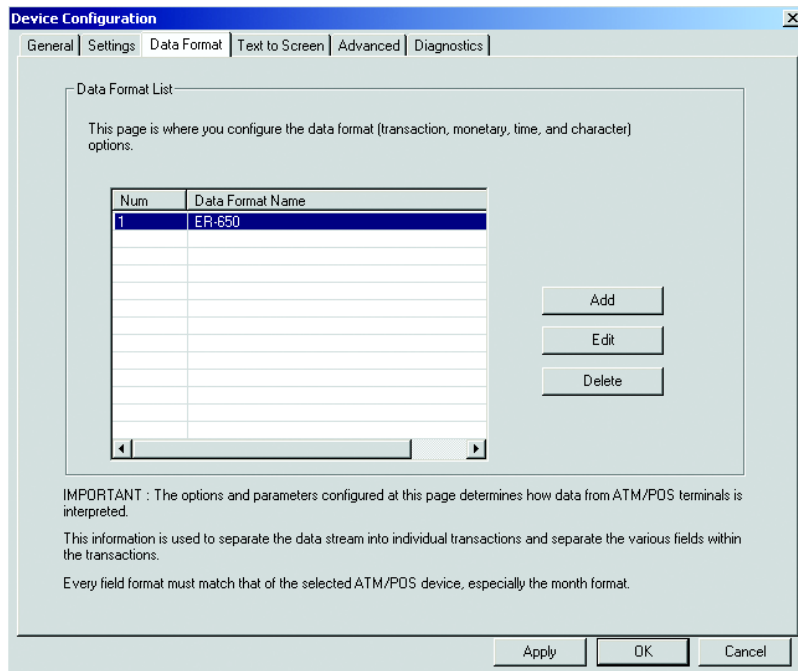


Figure 146. Default Data Format List Page

- b. Configure a data format:
 - To use and modify the ER-650 format, highlight the data format, and then click Edit.
 - To start a new data format, click Add.

The Data Format dialog box opens.

- c. In the Data Format Name box, type a name.

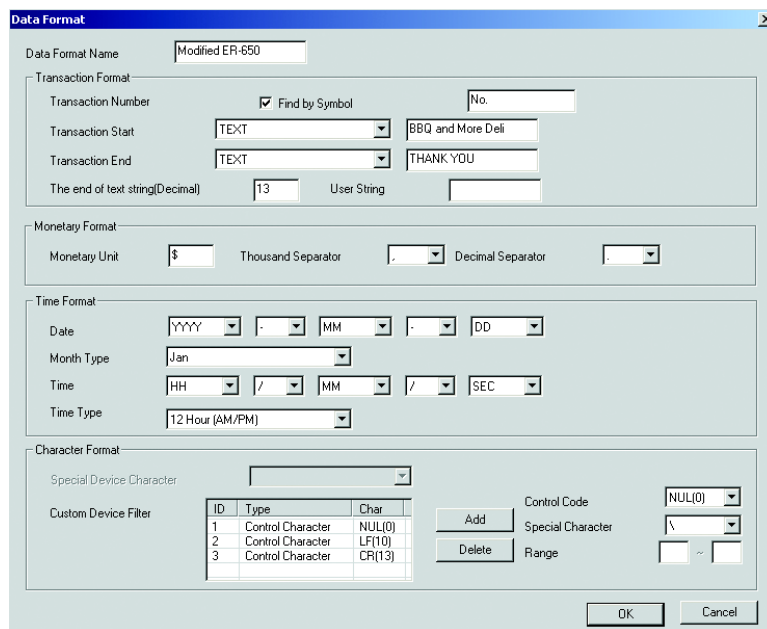


Figure 147. Modified ER-650 Data Format Dialog Box

- d. Using the information from the transaction record or other source, set the parameters for the following Data Format sections (as applicable):
 - Transaction Format
 - Monetary Format
 - Time Format
 - Character Format
- e. Click OK. The new or updated data format appears in the Data Format List.

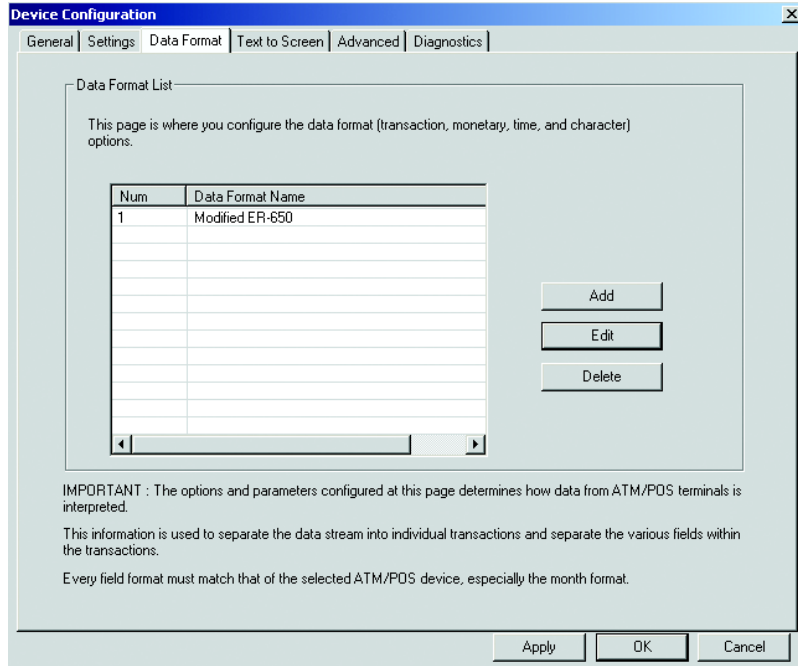


Figure 148. Data Format List

6. In the Device Configuration page, do the following:
 - a. Click the Settings tab. The Available ATM/POS Device table is displayed.
 - b. In the Device ID column, click an ATM/POS device to select it.
 - c. Double-click the Data Format cell for the selected ATM/POS device. The Data Format cell drop-down box is displayed.
 - d. Click the Data Format cell to display the available data formats.
 - e. Select the data format you want to assign to the ATM/POS device.

7. In the Protocol column, do the following:
 - a. Double-click the Protocol cell for the selected ATM/POS device. The Protocol cell drop-down box is displayed.
 - b. Click the Protocol cell to display the available protocols.
 - c. Select the protocol you want to assign to the ATM/POS device.
8. Do one of the following:
 - Click Apply to save your settings without closing the Device Configuration dialog box.
 - Click OK to save your settings and return to the Port/Device page.

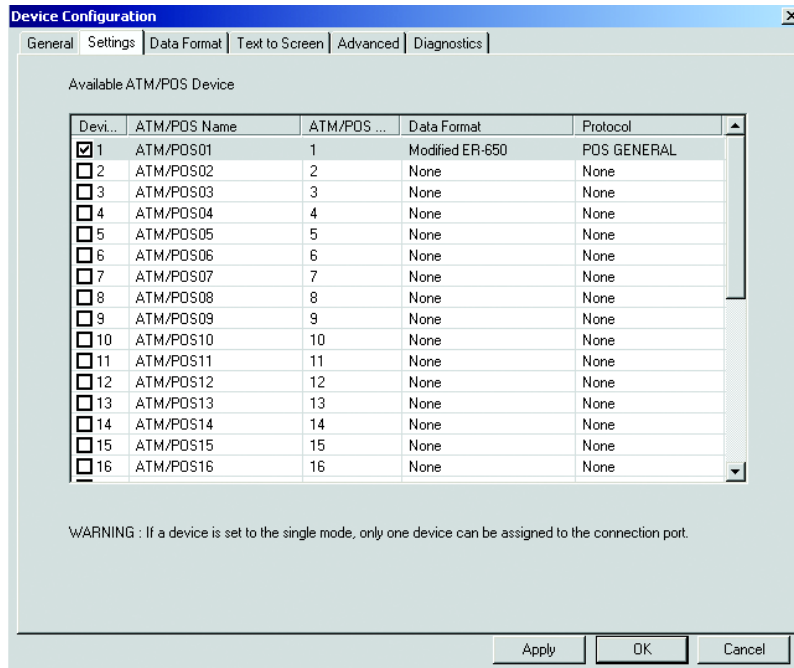


Figure 149. Assigning the Data Format ATM/POS Devices

9. Click the Linking button . The Linking setup page is displayed.

- Click the Event-Recording Link Settings tab. The Event-Recording Link Settings page is displayed.

Relay and Alarm Settings | Event-Relay Link Settings | **Event-Recording Link Settings** | Event-PTZ Link Settings

Motion Record Link Settings

Motion Source Camera: CAMERA01 Camera Name: Camera 1

Enable Record on Source Camera Motion

Alarm Record Link Settings

Alarm Channel: ALARM01 Alarm Name: Alarm01

Enable Record on Source Alarm Event

ATM/POS Record Link Settings

ATM/POS Address: ATM/POS01 ATM/POS Name: ATM/POS01

Enable Record/Live on Source ATM/POS Event


Video-Loss Record Link Settings

Video-Loss Channel: CAMERA01 Camera Name: Camera 1

Enable Record on Source Video-Loss Event

Cancel Apply

Figure 150. Event-Recording Link Settings Page

- In the ATM/POS Record Link Settings section, do the following:
 - In the ATM/POS Address drop-down box, select an ATM/POS address. Each ATM/POS address corresponds to a unique Regcom box device ID. Each device ID must be assigned to a specific HVR camera channel.
 - In the “Enable Record/Live on Source ATM/POS Event” section, click a camera to link the camera to the ATM/POS address.
 - Click Apply.
- Click the Schedule button . The Schedule setup page is displayed.

13. Create an ATM/POS schedule for the camera you linked to the ATM/POS address.

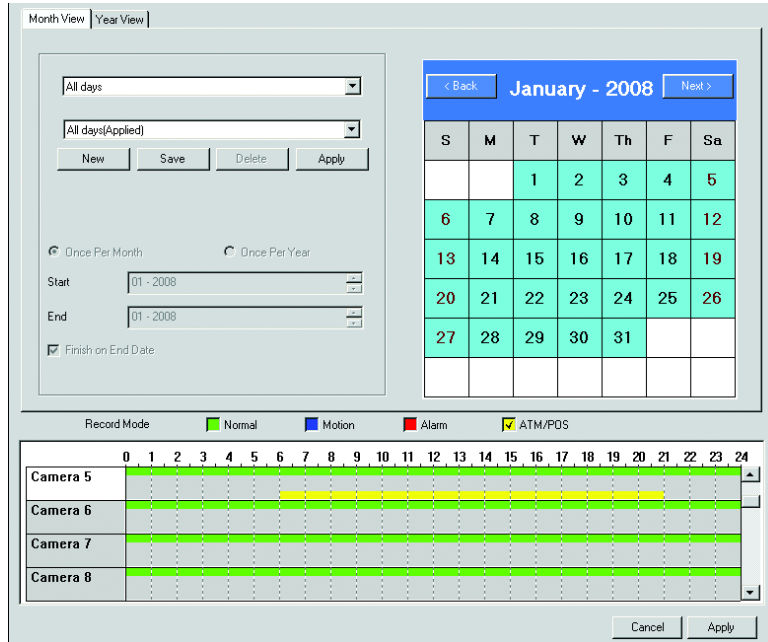


Figure 151. Schedule Setup Page

For information about verifying that the ATM/POS configuration is set up correctly, refer to [Verifying the ATM/POS Communication Connection](#) on page 196.

Setting Up an ATM/POS Data Format

The DX8100 allows you to create a data format for each ATM/POS device. You can assign a unique name to each data format. The data format values determine how data from ATM or POS terminals is interpreted. This information is used to separate the data stream into individual transactions and separate the various fields within the transaction. Every field format must match that of the ATM or POS device, especially the month format.

Access the Network page to configure the data format. For information about accessing the Network page, refer to [Setting Up DX8100 Network Access](#) on page 168. For information about the Port/Device tab, refer to [Setting Up Port and Device Communication Properties](#) on page 177.

This section describes how to create a data format template and includes the following topics:

- [Understanding the Data Format Page](#)
- [Creating a New Data Format](#) on page 189
- [Editing a Data Format](#) on page 189
- [Deleting a Data Format](#) on page 190

Understanding the Data Format Page

The DX8100 allows you to create a device data format for each ATM/POS device. You can assign a unique name to each device data format template.

Figure 152 shows the parts of the Data Format page. Access the Data Format page from the Port/Device page. For information about accessing the Data Format page, refer to [Setting Up DX8100 Network Access](#) on page 168. For information about the Port/Device tab, refer to [Setting Up Port and Device Communication Properties](#) on page 177.

The screenshot shows the 'Data Format' dialog box with the following sections and callouts:

- 1**: Data Format Name (ER-650)
- 2**: Transaction Format section, including Transaction Number (Find by Symbol checked, #), Transaction Start (TEXT, WELCOME), Transaction End (TEXT, THANK YOU), and The end of text string(Decimal) (10).
- 3**: Monetary Format section, including Monetary Unit (\$), Thousand Separator (.), and Decimal Separator (.).
- 4**: Time Format section, including Date (MM / DD / YYYY), Month Type (01), Time (HH : MM : SEC), and Time Type (24 Hour).
- 5**: Character Format section, including Special Device Character, Custom Device Filter table, Control Code (NUL(0)), Special Character (\), and Range.

ID	Type	Char
1	Control Character	NUL(0)
2	Control Character	LF(10)
3	Control Character	CR(13)

Figure 152. Data Format Page

Table AU describes the parts of the Data Format page.

Table AU. Parts of the Data Format Page

Item	Command	Description
1	Data Format Name	Box where a specific name for the data format template is created.
2	Transaction Format	Includes the following options: <ul style="list-style-type: none"> • Transaction Number: Allows a transaction symbol to be entered. • Transaction Start: Selects the control character for indicating the start of a transmission. • Transaction End: Selects the control character for indicating the end of a transmission. • The end of text string (Decimal): Specifies the type of control character that marks the end of a transaction line. Decimal 13 represents the ASCII CR control character. • User String: Allows you to enter an end-of-line string.
3	Monetary Format	Includes the following options: <ul style="list-style-type: none"> • Monetary Unit: Box for entering the monetary symbol. • Thousand Separator: Symbol used in transaction data to separate number by thousands. • Decimal Separator: Symbol used in transaction data to separate dollars and cents.
4	Time Format	Allows you to set the following options to match those in the transaction data: <ul style="list-style-type: none"> • Date: Selects the date format. • Month Type: Selects the month format. • Time: Selects the time format. • Time Period: Selects the time period, 12- or 24-hour.
5	Character Format	Allows you to specify a character filter: <ul style="list-style-type: none"> • Special Device Character: Not available at this time. • Custom Device Filter: Contains the character filter. • Add: Moves the character filter into the Custom Device Filter table. • Delete: Deletes the selected filter in the Custom Device Filter table • Control Code: Contains a selection of control codes for creating a desired filter • Special Character: Contains a selection of characters for creating a desired filter • Range: Not applicable.

Table AV describes the transaction start and end parameters.

Table AV. Transaction Start and End Parameters

Value	Description
None	First part of transaction field is not used.
CR	Carriage return character (13 in ASCII).
LF	Line feed character (10 in ASCII).
FF	Form feed character (12 in ASCII).
DATE	Date field.
TIME	Time field.
TEXT	Ten selected; another field appears to let you enter a text string (up to 20 characters) that defines the start of the transaction.

Using Custom Device Filters

The **DX8100** allows you to use a custom device filter to remove unwanted characters from the data input port. These characters may be printer commands or some other type of device control/overhead. Each entered line of text in the Custom Device Filter table defines a separate character filter. A filter can be a combination of exact characters to match, character ranges to match, and character counts. Incoming characters matching any of the character filters will be discarded.

Use the Control Code drop-down box, Special Character drop-down box, and Range box to create the desired filter. Then click the Add button to transfer the created filter to the Custom Device Filter table.

Creating a New Data Format

Create the data format based on information contained in the ATM/POS transaction. For example, a sales receipt provides detailed transaction information. The data format values determine how data from ATM or POS terminals is interpreted. This information is used to separate the data stream into individual transactions and separate the various fields within the transaction. Every field format must match that of the ATM or POS device, especially the month format.

To create a data format:

1. In the Network page, click the Port/Device tab. The Port/Device page is displayed.
2. In the Communication Port drop-down box, select a port (Port 1 to Port 4). The device mode option is not available for COM1.
3. In the selected device drop-down box, select an ATM/POS device.
4. In the Communication Port Configuration section, click Configure. The Device Configuration page is displayed.
5. Click the Data Format tab.
6. In the Data Format page, click Add. The Data Format dialog box opens.
7. Using the information from the transaction record or other source, set the parameters for the following Data Format sections (as applicable):
 - Transaction Format
 - Monetary Format
 - Time Format
 - Character Format
8. Click OK.
9. Verify that the new data format is listed in the Data Format List, on the Data Format page.

Editing a Data Format

The **DX8100** allows you to edit a data format. Once you click OK to accept the changes, you cannot undo the changes.

To edit an existing data format:

1. In the Network page, click the Port/Device tab. The Port/Device page is displayed.
2. In the Communication Port drop-down box, select a port (Port 1 to Port 4). The device mode option is not available for COM1.
3. In the selected device drop-down box, select an ATM/POS device.
4. In the Communication Port Configuration section, click Configure. The Device Configuration page is displayed.
5. In the Data Format List, highlight the name of a data format.
6. Click Edit. The Data Format dialog box opens.
7. Make sure the correct data format name appears in the Data Format Name box.
8. Perform the edits.
9. Do one of the following:
 - To accept the changes, click OK.
 - To not accept the changes, click Cancel.

Deleting a Data Format

To delete an existing data format:

1. In the Network page, click the Port/Device tab. The Port/Device page is displayed.
2. In the Communication Port drop-down box, select a port (Port 1 to Port 4). The device mode option is not available for COM1.
3. In the selected device drop-down box, select an ATM/POS device.
4. In the Communication Port Configuration section, click Configure. The Device Configuration page is displayed.
5. Click the Data Format tab. The Data Format List page is displayed.
6. In the Data Format List, highlight the name of a data format.
7. Click Delete. A **DX8100** message box is displayed prompting you to confirm deletion of the data format.
8. Do one of the following:
 - To delete the data format, click Yes.
 - To not accept the deletion, click No or Cancel.

Assigning a Data Format to an ATM/POS Device

After you have created a data format, you can assign it to a specific ATM/POS device.

To assign an existing data format to a specific ATM/POS device:

1. In the Network page, click the Port/Device tab. The Port/Device page is displayed.
2. In the Communication Port drop-down box, select a port (Port 1 to Port 4). The device mode option is not available for COM1.
3. In the selected device drop-down box, select an ATM/POS device.
4. In the Communication Port Configuration section, click Configure. The Device Configuration page is displayed.
5. Click the Settings tab. The Available ATM/POS Device setup table is displayed.
6. In the Data Format column, do the following:
 - a. In the Device ID column, click the check box to select an ATM/POS device.
 - b. Double-click the Data Format cell for the selected ATM/POS device. The Data Format cell drop-down box is displayed.
 - c. Click in the Data Format cell to display the available data formats.
 - d. Select the data format you want to assign to the ATM/POS device.

- e. Do one of the following:
- Click Apply to confirm selection and remain in the Device Configuration dialog box.
 - Click OK to confirm selection and return to the Port/Device page.

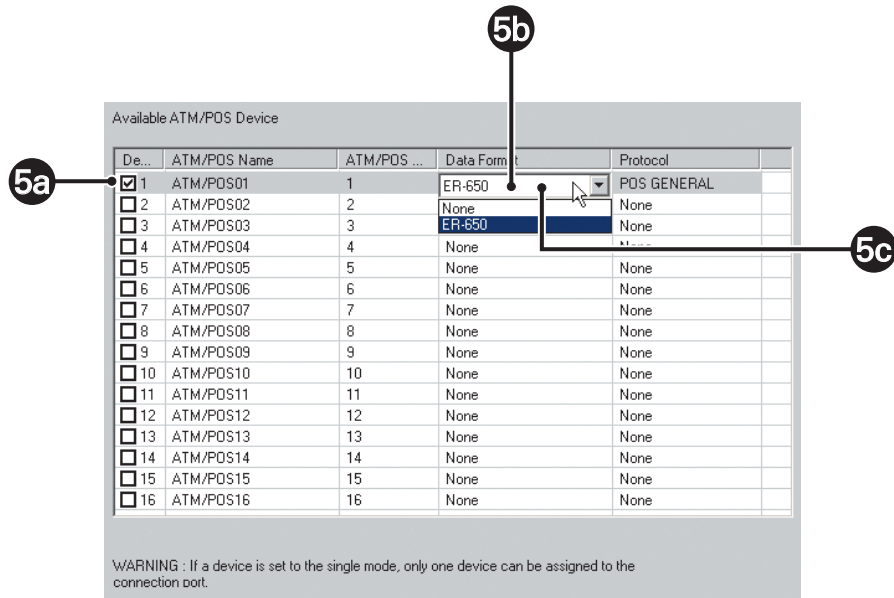


Figure 153. Assigning a Data Format to an ATM/POS Device

Setting Up ATM/POS Exceptions

An *exception* is a predefined transaction filter used to detect a specific data structure within the ATM/POS transaction data. Exceptions are configured on the Advanced page.

To use an exception to search transaction data, the exception must be created, before recording the transaction data. If the transaction data is recorded before the exception filter is defined, the exception filter will not find the data structure within the transaction data.

The **DX8100** allows you to configure unique exceptions for each ATM/POS device from the following:

- ATM/POS device selection drop-down box
- Exception table that contains the name and effect of each exception you create
- Action code drop-down box that contains exception action codes
- User mapping table where you create the string for the action code

Use the Advanced tab to configure exceptions. Entries are case sensitive. For each defined data device ATM device or POS terminal, you can specify up to 31 data exceptions. A field left blank is not used in the exception. Any fields containing values must all be found or satisfied before a data device exception is generated. Each data device can trigger the **DX8100** to record at special rates and for a special length of time, as determined in the Record On Data Exceptions screen.

This section describes how to work with exceptions and includes the following topics:

- [Using Action Codes](#)
- [Creating an ATM/POS Exception](#) on page 193
- [Editing an ATM/POS Exception](#) on page 195
- [Deleting an ATM/POS Exception](#) on page 195
- [Assigning an Exception to An ATM/POS Device](#) on page 196

Using Action Codes

To use an action code to search transaction data, the action code must be created, before recording the transaction data. If the transaction data is recorded before the action code is defined, the action code will not find the data structure within the transaction data.

Table AW The following table describes the ATM/POS action codes.

Table AW. Action Codes

Code	Description	Code	Description
AL	ALL CODES (item or merchandise sold normally)	GR	GAS REFUND (refund of unused portion of gasoline prepayment)
AM	AMOUNT TENDERED (cash amount tendered)	IM	INFORMATION MESSAGES (displays message fields, as is)
CC	CREDIT CARD (amount tendered with credit card)	IT	ITEM SALE TRANSACTION (displays message fields)
CD	CASH DROP (safe drop)	LO	LOTTERY PAYMENT (lottery pay out)
CG	CHARGE ACCT (amount added to charge account balance)	LS	LOTTERY (lottery sale)
CH	CHANGE (change due to customer)	MT	Not included
CK	CHECK (amount tendered with check)	NS	NO SALE (no sale)
CL	CLERK NAME (and/or number) or CLERK LOGIN	NT	NEG TAX (negative tax)
CM	MFR COUPON (manufacturer coupon redemption)	OT	Description not available
CP	COUPON (store coupon redemption)	OV	OVERRIDE (override programmed price-displays message fields)
CR	CRITICAL CODES (determined by Action Critical)	PL	PRICE LOOKUP (displays message fields)
CX	CANCEL (cancel entire sale before completion)	PO	PAID OUT (pay out cash from register)
DB	DEBIT CARD (amount tendered with debit, ATM or credit)	RA	RCVD ON ACCT (customer payment toward charge account balance)
DC	DRAWER CLOSED (no display)	RF	REFUND (payment of refund to customer)
DD	DISCOUNT (discount entered as absolute amount)	RT	RETURN (merchandise returned)
DO	DRAWER OPEN (no display)	ST	SUBTOTAL (sale subtotal)
DP	DEPOSIT (deposit amount paid pending purchase)	SX	TAXABLE AMT (taxable subtotal)
DR	DEPOSIT RETURN (deposit return)	TI	CURRENT TIME (displays description field)
DS	PCT DISCOUNT (discount as percentage of cost or total)	TK	TRANSACTION RECEIPT NUMBER (displays description field)
EI	EMPLOYEE SIGN ON (to register)	TN	Tim Norris (publicly viewable)
EO	EMPLOYEE SIGN OFF (to register)	TR	NEGATIVE TOTAL (negative amount as the total)
FC	COMPLIMENTARY (complimentary or on-the-house charge)	TT	TOTAL (total amount due)
FS	FOODSTAMPS (amount tendered in food stamps, WIC, and so forth)	TX	TAX (tax amount)
GA	PREPAID GAS (gasoline prepayment after pumping)	VD	ERROR CORRECT (void of last item entered)
GP	GAS PREPAID (gasoline prepayment)	VX	VOID (correction of entered item within current transaction)

Creating an ATM/POS Exception

To create an ATM/POS exception:

1. In the Network page, click the Port/Device tab. The Port/Device page is displayed.
2. In the Communication Port drop-down box, select a port (Port 1 to Port 4). The device mode option is not available for COM1.
3. In the selected device drop-down box, select an ATM/POS device.
4. In the Communication Port Configuration section, click Configure. The Device Configuration page is displayed.
5. Click the Advanced tab. For information about the Advanced page, refer to [Setting Up ATM/POS Exceptions](#) on page 191.
6. In the ATM/POS Name drop-down box, select an ATM/POS device.

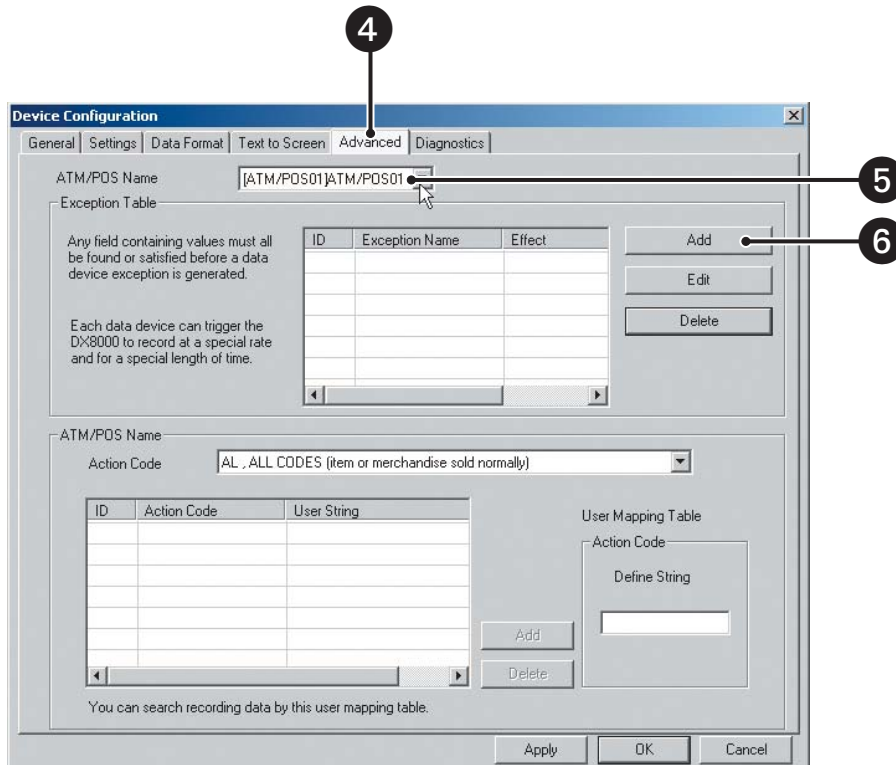


Figure 154. Advanced Page

7. In the Exception Table section, click Add. The Exceptions dialog box opens.

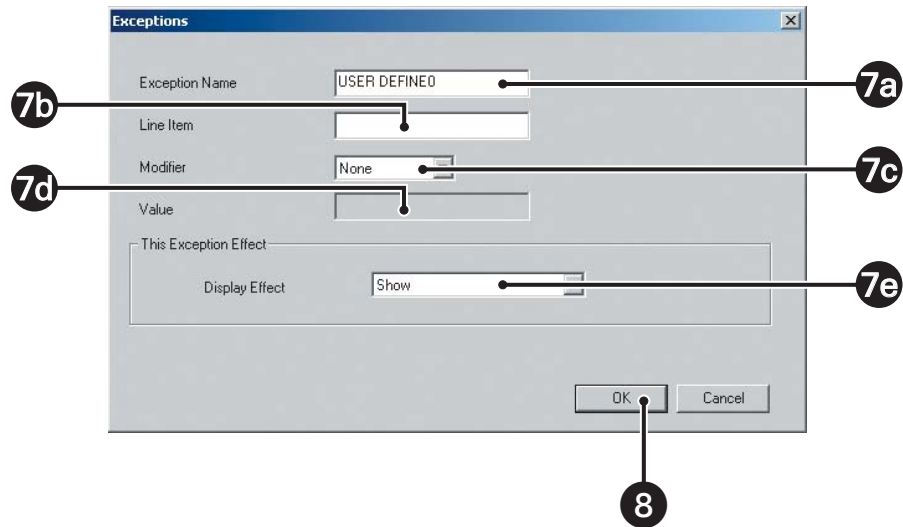


Figure 155. Exceptions Dialog Box

8. In the Exceptions dialog box, do the following:
 - a. In the Exception Name box, enter a name or description for the exception (up to 20 characters).
 - b. In the Line Item box, enter the name of the line item (up to 20 characters). The line item entry is case-sensitive. If the transaction is displayed as all capital letters, then the line item entry must be in all capital letters.

The HVR will search for this entry anywhere in the transaction. ATM transactions do not usually contain line items. The program may display a "No data found" error message if searching ATM transactions using line items. If the line item box is blank, it is considered found or satisfied.
 - c. In the Modifier drop-down box, select a modifier that further defines the line item.

A modifier must be selected before a value can be entered. If a modifier is not selected, the Value box is unavailable.
 - d. In the Value box, enter the value.

The value (9999.99 maximum) is used with the modifier (above) to trigger an exception. You can use a period to separate dollars and cents, but do not use a comma between thousands and hundreds.
 - e. In the This Exception Effect section, do one of the following:
 - Accept the default display effect setting.
 - In the Display Effect drop-down box, select Don't Show or Show.
9. Click OK.

10. At the Advanced page, do one of the following:
 - Click Apply to confirm selection and remain in the Device Configuration dialog box.
 - Click OK to confirm selection and return to the Port/Device page.

Table AX. ATM/POS Exception Modifiers

Modifier	Description
None	Value is not used and is disabled.
>	Greater than: Trigger exception only if the value found on the line is greater than the value entered in the Value box.
<	Less than: Trigger exception only if the value found on the line is less than the value entered in the Value box.
=	Equal to: Trigger exception only if the value found on the line is equal to the value entered in the Value field.
!=	Not equal to: Trigger exception only if the value found on the line is not equal to the value entered in the Value field.

Editing an ATM/POS Exception

To edit an ATM/POS exception:

1. In the Network page, click the Port/Device tab. The Port/Device page is displayed.
2. In the Communication Port drop-down box, select a port (Port 1 to Port 4). The device mode option is not available for COM1.
3. In the selected device drop-down box, select an ATM/POS device.
4. In the Communication Port Configuration section, click Configure. The Device Configuration page is displayed.
5. Click the Advanced tab. For information about the Advanced page, refer to [Setting Up ATM/POS Exceptions](#) on page 191.
6. In the Exception Table, select an exception.
7. Click Edit. The Exceptions dialog box opens.
8. Edit the exception content.
9. Do one of the following:
 - Click OK to accept the changes and exit the Exceptions dialog box.
 - Click Cancel to exit the Exception dialog box and not save the changes.

Deleting an ATM/POS Exception

To delete an ATM/POS exception:

1. In the Network page, click the Port/Device tab. The Port/Device page is displayed.
2. In the Communication Port drop-down box, select a port (Port 1 to Port 4). The device mode option is not available for COM1.
3. In the selected device drop-down box, select an ATM/POS device.
4. In the Communication Port Configuration section, click Configure. The Device Configuration page is displayed.
5. Click the Advanced tab. For information about the Advanced page, refer to [Setting Up ATM/POS Exceptions](#) on page 191.
6. In the Exception Table, select an exception.
7. Click Delete. The **DX8100** message box is displayed.
8. In response to the **DX8100** message, do one of the following:
 - Click Yes to delete the exception.
 - Click No if you do not want to continue with the deletion.
 - Click Cancel to discard the delete action.

Assigning an Exception to An ATM/POS Device

To assign an exception to an ATM/POS device:

1. In the Network page, click the Port/Device tab. The Port/Device page is displayed.
2. In the Communication Port drop-down box, select a port (Port 1 to Port 4). The device mode option is not available for COM1.
3. In the selected device drop-down box, select an ATM/POS device.
4. In the Communication Port Configuration section, click Configure. The Device Configuration page is displayed.
5. Click the Advanced tab.
6. In the ATM/POS Name drop-down box, select an ATM/POS device.
7. In the Exception Table, click the ID box of the exception you want to assign to the ATM/POS device.
8. Do one of the following:
 - Click OK to accept the changes and exit the Exceptions dialog box.
 - Click Cancel to exit the Exception dialog box and not save the changes.

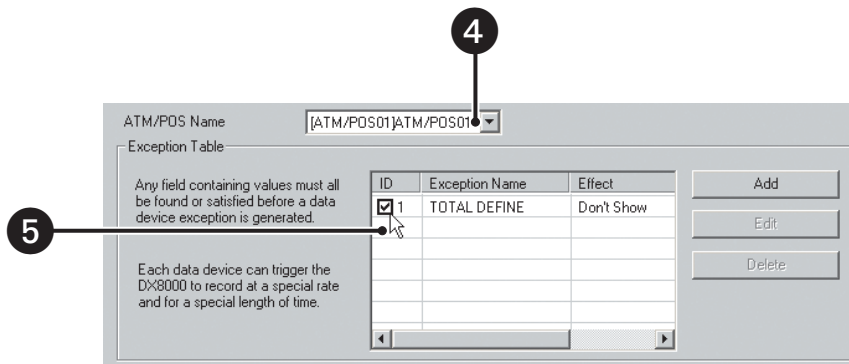


Figure 156. Assigning an Exception to an ATM/POS Device

Verifying the ATM/POS Communication Connection

To verify that the ATM/POS connection is working correctly:

1. In the Network page, click the Port/Device tab. The Port/Device page is displayed.
2. In the Communication Port drop-down box, select a port (COM1 or Port 1 to Port 4).
3. In the selected device drop-down box, select an ATM/POS device.
4. In the Communication Port Configuration section, click Configure. The Device Configuration page is displayed.
5. Click the Diagnostics tab.
6. In the ATM/POS Information section, select the ATM/POS device in the Device ID drop-down box.

7. Do the following:
 - a. Verify that transaction data is displayed in the ATM/POS Raw Data View area.
 - b. Verify that transaction data (as interpreted by the DX8100) is displayed in the Result Box.

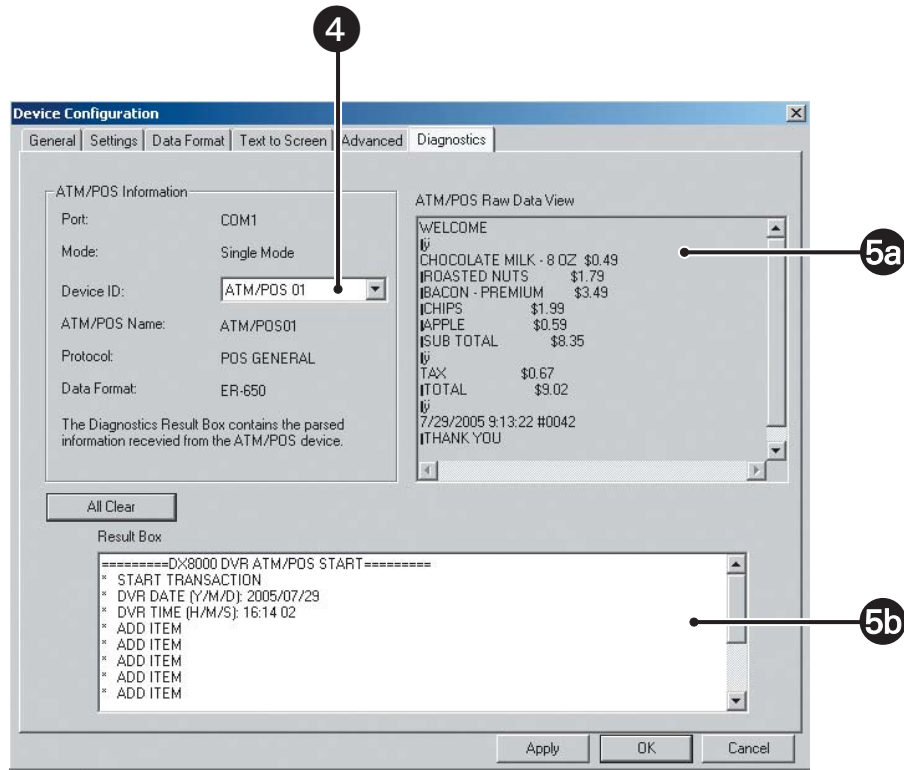


Figure 157. Verifying the ATM/POS Communication Connection

Recording ATM/POS Events

To view POS recorded dates, the OSD POS view option must be selected at the View menu. For information about the POS option, refer to [View Menu](#) on page 26.

To record ATM/POS events:

1. Set up the ATM/POS device communication and do the following:
 - a. Assign the ATM/POS device to a COM port and set up COM port properties. For information, refer to [Setting Up ATM/POS Device Communication Ports](#) on page 179.
 - b. Select the ATM/POS device mode. For information, refer to [Selecting the ATM/POS Device Mode and Communications Options](#) on page 181.
 - c. Create a data format for the ATM/POS device. For information, refer to [Setting Up an ATM/POS Data Format](#) on page 186.
 - d. Assign the data format to the ATM/POS device. For information, refer to [Assigning a Data Format to an ATM/POS Device](#) on page 190.
 - e. Set up ATM/POS exceptions. For information, refer to [Setting Up ATM/POS Exceptions](#) on page 191.
 - f. Assign the exception to the ATM/POS device. For information, refer to [Assigning an Exception to An ATM/POS Device](#) on page 196.
 - g. Verify the ATM/POS communication connection. For information, refer to [Verifying the ATM/POS Communication Connection](#) on page 196.

2. Setup a camera to record the ATM/POS events:
 - a. Set up the designated ATM/POS camera for scheduled ATM/POS recording.
 - b. Configure the ATM/POS link settings.
 - c. Configure the ATM/POS record link settings.
 - d. (Optional) Configure the ATM/POS PTZ link settings.
3. In the **DX8100** application window, do the following:
 - a. Assign a camera to a view pane.
 - b. Assign the ATM/POS device to the camera designated to record ATM/POS events.
4. Verify the following:
 - a. The POS record indicator is yellow and flashing.
 - b. The ATM/POS record symbol flashes blue during an ATM/POS event.
 - c. The ATM/POS events are displayed yellow in the time line.

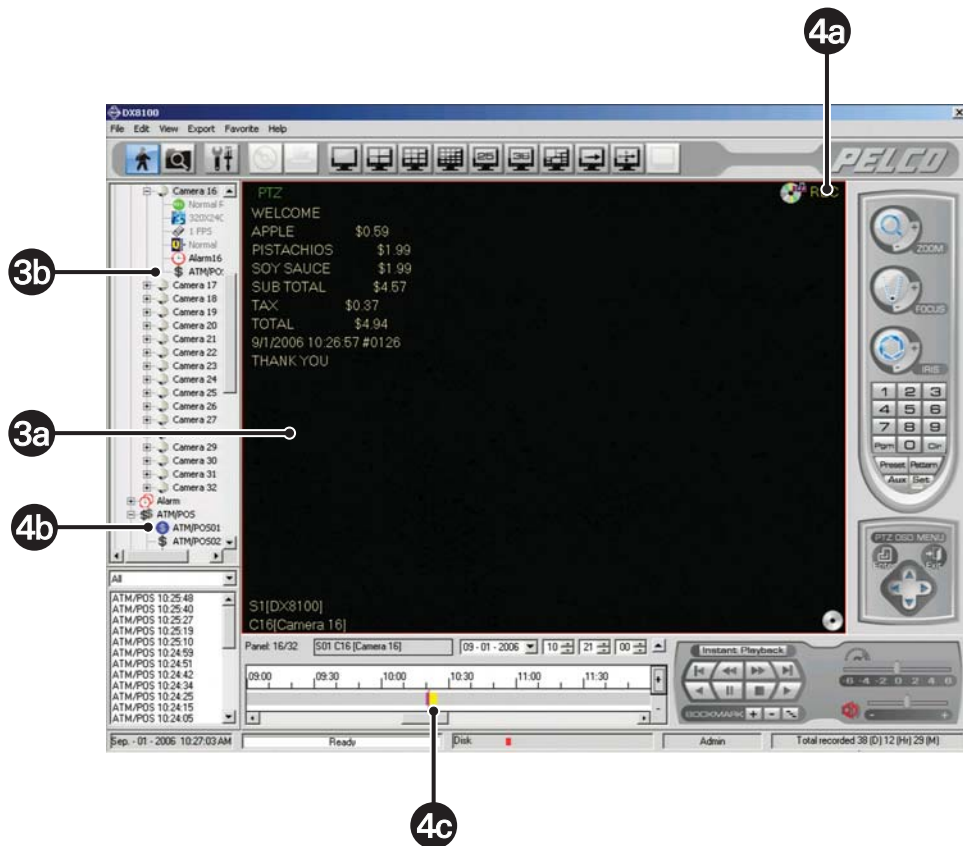


Figure 158. Recording ATM/POS Transaction

SETTING UP THE KBD300A KEYBOARD

The KBD300A allows you to operate certain DX8100 live view display functions and control camera PTZ operations from a keyboard rather than a mouse.

When connected to the DX8100 server, the KBD300A supports two modes: standard and shift mode. Shift mode is entered by pressing the Shift button and is indicated by a lit Shift button LED. For information about how to operate the KBD300A, refer to the KBD300A universal keyboard Installation/Operation manual. For information about using the KBD300A, refer to [Using the KBD300A Keyboard](#) on page 66.

In summary, the steps required to set up the KBD300A for operation are as follows:



- Connect the KBD300A to the DX8100: For information about connecting the KBD300A to the **DX8100**, refer to the DX8100 Installation manual.

- Configure the KBD300A communication settings

Configuring KBD300A Communication Settings

This section describes how to configure the KBD300A communication settings. The KBD300A is interfaced to the DX8100 using Port 1 to Port 4. These ports support connectivity to the DX8100 using the RS-422 data communication standard. A user-supplied RJ-45 cable is required. For information about using the KBD300A, refer to [Using the KBD300A Keyboard](#) on page 66.

To configure the KBD300A communication settings:

1. Connect the KBD300A to the **DX8100** to a RS-422 RJ-45 port.
1. On the DX8100 toolbar, click the Setup button . The Setup dialog opens to the Camera page.
2. In the Setup dialog box, click Network button . The Network page is displayed.
3. In the Network page, click the Port/Device tab. The Port/Device page is displayed.
4. In the Communication Port drop-down box, select the Port to which the KBD300A is connected.
5. In the device drop-down box, select KBD300A (Pelco).
6. Configure the following port settings.
 - Interface mode: RS-422
 - Baud rate: 9600
 - Parity: ODD
 - Data bits: 8
 - Stop bits: 1
7. Click Apply.

KBD300A Standard Mode Operational Features

Table AY describes the KBD300A Standard Mode operational features.

Table AY. KB300A Standard Operational Mode Features

Control	Action
Joystick	Controls the camera's PTZ operation.
Number + PRESET (short)	Moves camera to the programmed preset position.
Number + PRESET (long)	Programs the current camera position to the desired preset number.
Number + PATTERN (long)	Starts the pattern record mode.
ACK	Stops the pattern record mode.
Number + PATTERN	Runs the desired pattern.
Number+ AUX ON/AUX OFF	Turns the specified auxiliary output on or off.
Number + MON	Assigns the selected camera to the desired view pane. The active view pane is highlighted.

KBD300A Shift Key Features

Table AZ describes the KBD300A Shift key features.

Table AZ. KBD300A Shift Key Features

Control	Action
Joystick	<p>Activity within the DX8100 Site Tree:</p> <ul style="list-style-type: none">• Up/Down direction: Moves the cursor vertically through each element in the Site Tree. An element is a DX8100 site; a camera within each DX8100 site, alarm, or ATM/POS; or are relay within each DX8100 site. If an element is expanded, the joystick moves the cursor vertically through the objects of that element.• Left/Right direction:<ul style="list-style-type: none">– Right: Expands an element to display objects contained under the element.– Left: Collapses an element and hides its objects. Select a camera/unit at the tree.
Number + CAM	<p>Expands the specified DX8100 Site Tree. If there are two sites, 1 + CAM expands DX8100 site 1; 2 + CAM expands DX8100 site 2.</p>
F2, F3, ON, OFF	<p>Cameras are assigned numerically 1–16 to the respectively numbered video. These controls display DX8100 video in the following divisions:</p> <ul style="list-style-type: none">• F2/OFF: Single division view• F3/MOM: 4-division view• AUX ON: 9-division view• AUX OFF: 16-division view

INSTALLING OR UPDATING DEVICE PROTOCOLS

The **DX8100** uses dynamic-link library (DLL) files to support the various ATM, dome, and keyboard device protocols. The **DX8100** is shipped with a default set of protocols and devices for Pelco and other manufacturers. As new devices or updates are made available, the **DX8100** allows you to install new or update existing device protocols to support the devices.

- DLL files for Pelco devices supported by the **DX8100** are provided by Pelco.
- DLL files for other manufacturer devices supported by the **DX8100** are provided by the respective vendor.

To install or update a device (PTZ, POS, or keyboard) in the **DX8100**:

1. Insert the CD containing the Pelco DLL files in the **DX8100** CD drive.
2. In the Network page, click the Port/Device tab. The Port/Device page is displayed.
3. Click Install. The Protocol Install dialog box opens.
4. Click Browse and locate the DLL files for the device.
5. Click Update.
6. Click Exit.

DATA BACKUP SETUP

Video data recorded on the **DX8100** can be backed up to a variety of media. The backup process involves selecting a specific time range for archival and the type of media to be used. The primary difference between backing up and exporting video is performing a backup archives all channels for a specific time period, while exporting only archives selected channels. Following the directions below, Power User and Administrators can set up and perform backups.

NOTE: The DX8100 Export feature backs up all configuration settings to the target device; however, the target device setting is not restored after the import process is executed. The target device setting must be re-entered before the scheduled backup routine can execute.

You must use the **DX8100** Client application to view backed up data. For more information about viewing backed up data, refer to the client application manual.

This section describes how to back up data and includes the following topics:

- [Accessing the Backup Configuration Page](#) on page 202
- [Adding a Backup Schedule](#) on page 202
- [Editing an Existing Backup Schedule](#) on page 204
- [Deleting an Existing Backup Schedule](#) on page 205
- [Initiating an Instant Backup Schedule](#) on page 205
- [Mapping a Network Device](#) on page 206
- [Disconnecting from a Network Drive](#) on page 206
- [Selecting a Backup Media Device](#) on page 207
- [Viewing Backed Up Video](#) on page 207

Figure 159 shows the parts of the Backup schedule page.

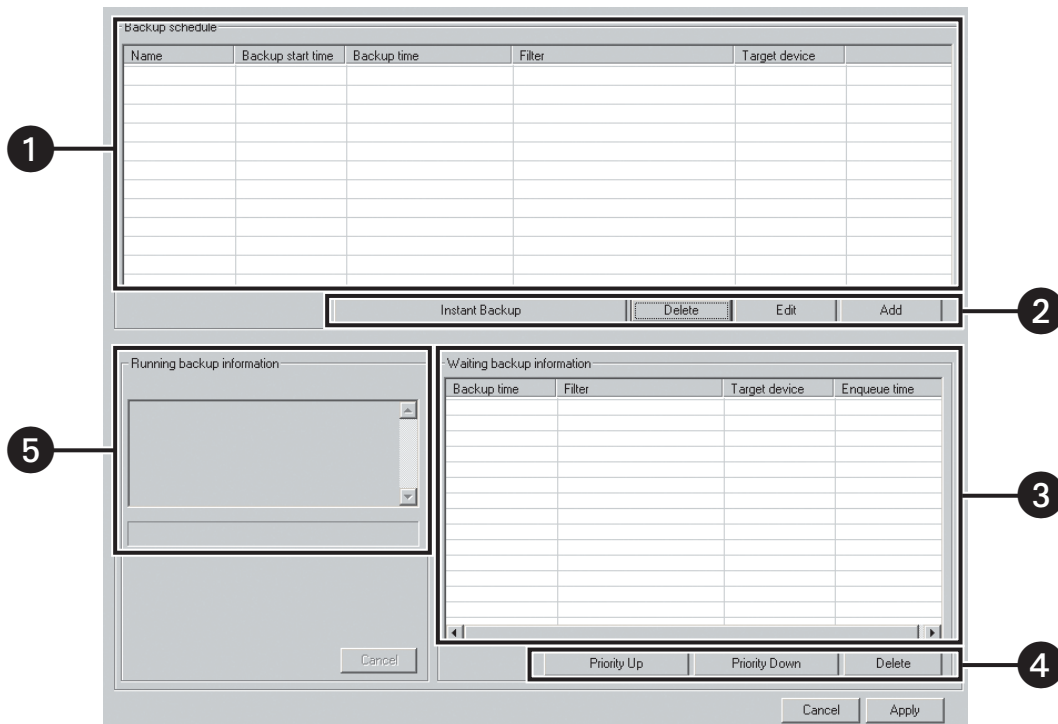


Figure 159. Backup Configuration Screen

The following table describes the parts of the Backup schedule page.



Table BA. Parts of the Backup Schedule Page

Item	Part	Description
1	Backup schedule table	<p>Describes the configured backup schedule details.</p> <ul style="list-style-type: none"> • Name: The type of backup schedule (Daily or Weekly). Daily includes all days of the week, Monday through Sunday; Weekly (indicates a specific day of the week that the backup schedule is to occur. A selection check box allows you to select or deselect a backup schedule to run as scheduled. A deselected backup schedule does not run as scheduled. • Backup start time: The date and time a backup schedule is defined to run. • Backup time: The time period entered for the backup schedule. • Filter: The channels selected for back up. • Target device: The selected backup media device.
2	Backup schedule buttons	<p>Allows you to do the following:</p> <ul style="list-style-type: none"> • Add: Opens the Add Backup Schedule dialog box for configuring a backup schedule. For more information about the Add Backup Schedule dialog box, refer to Adding a Backup Schedule on page 202. • Edit: Allows you to edit the details of the selected backup schedule. • Delete: Allows you to delete a selected backup schedule. • Instant Backup: Opens the Backup Now dialog box, where you enter options to start a backup schedule
3	Waiting backup information	<p>Displays backup schedules waiting to be executed.</p> <ul style="list-style-type: none"> • Backup time: The date and time a backup schedule is defined to run. • Filter: The channels selected for back up. • Target device: The selected backup media device. • Enqueue time: The system's estimated time for backup completion.
4	Waiting backup information control buttons	<p>Allows you to do the following:</p> <ul style="list-style-type: none"> • Priority up: Allows you to move the selected backup schedule to a higher place in the list. • Priority down: Allows you to move the selected backup schedule to a lower place in the list. • Delete: Allows you to delete the selected backup schedule.
5	Running backup information	<p>Lists the backup schedules that are currently running.</p>

ACCESSING THE BACKUP CONFIGURATION PAGE

For information about the Backup schedule page, refer to [Data Backup Setup](#) on page 201.

To access the Backup page:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Backup button . The Backup schedule page is displayed.

ADDING A BACKUP SCHEDULE

The DX8100 allows you to configure the start time and time range for backing up data. The backup schedule can be configured to run on a daily basis, at a set time, and for a specified time range. Or, you can set up the backup schedule(s) to run on selected days of the week. In this case, selecting a weekly backup schedule allows you to customize the start time and time range for each selected day of the week. The start date and time cannot be set to begin later than the end date and time.

To define the time range of the data to be backed up:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Backup button . The Backup schedule page is displayed.

3. On the Backup schedule page, click Add to add a backup schedule. The Add Backup Schedule dialog box opens.

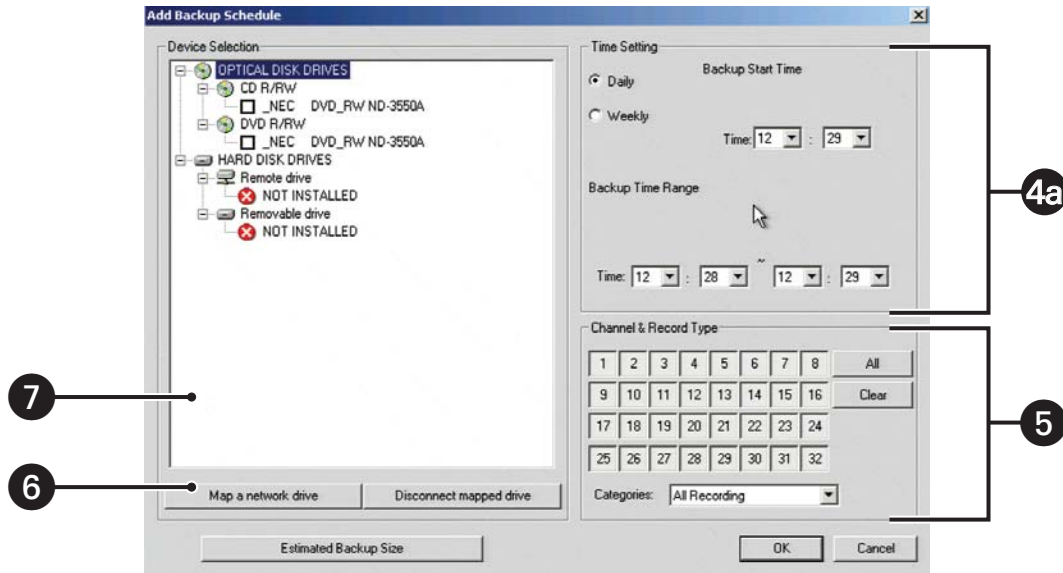


Figure 160. Add Backup Schedule Dialog Box

4. In the Time Setting section (to set up the time schedule) do one of the following:
 - a. For daily recording click Daily (if it is not selected) and do the following:
 - (1) Click the Time drop-down boxes, and select the time you want the backup schedule to start.
 - (2) Click the Backup Time Range drop-down boxes, and select the time you want the backup schedule to stop.
 - or
 - b. For weekly recording, click Weekly (if it is not selected) and do the following:
 - (1) Under the Backup Start Time, click the Day drop-down-box. Select the day of the week. In this case, each day represents an individual backup schedule for that specific day and the configured time constraints.
 - (2) Under the Backup Start Time, click the Time drop-down boxes simultaneously select the time you want the backup schedule to start.
 - (3) Under the Backup Time Range, click the Day drop-down boxes. Select the day you want the backup schedule to start and the day you want the backup schedule to stop.
 - (4) Under the Backup Time Range, click the Time drop-down boxes. Select the time of day you want the backup schedule to start and the time you want the backup schedule to stop.
5. In the Channel & Record Type section, select the channel record type as follows:
 - (1) Click the All or Clear button to select or clear all of the channels simultaneously, or click channels 1–32 individually to select or deselect a channel.
 - (2) Click the Categories drop-down box to select the type of recording. The backup schedule includes only the type of recording you have specified.



6. (Optional) In the Device Selection section, map a network drive for backup by performing one of the following:
 - a. Click the “Map a network drive” button. The Windows Map Network Drive dialog box opens. For more information about mapping a network drive, refer to [Mapping a Network Device](#) on page 206.
 - (1) Specify the drive letter for the connection and to which folder you want to connect.
 - (2) Click Finish. The mapped drive is displayed in the Device Selection area under “Remote drives.”
 - or
 - b. Click “Disconnect a mapped drive” to disconnect.
7. In the Device Selection section, click the check box for the device to which you want the data backed up.
8. Click OK.

The “Backup schedule” table is displayed, the newly scheduled backup time range is listed in the table, and the selection check box is marked.
9. Click Apply.

EDITING AN EXISTING BACKUP SCHEDULE

The DX8100 allows you to edit or delete an existing backup schedule.

To edit a backup schedule:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Backup button . The Backup schedule page is displayed.
3. In the “Backup schedule” table, do the following:
 - a. Click the backup schedule time range you want to edit.
 - b. Click Edit.

The Edit Backup Schedule dialog box opens, displaying the current settings for the selected backup schedule.

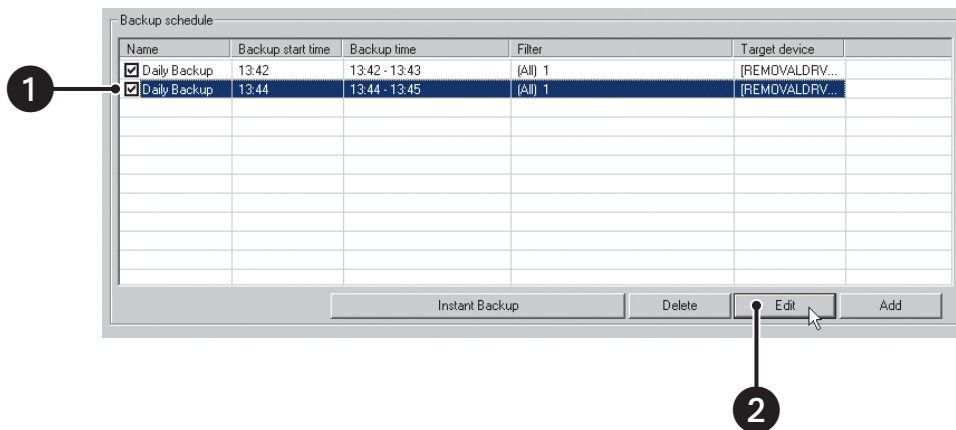


Figure 161. Editing an Existing Backup Schedule



- c. Edit the backup parameters.
- d. Click OK.

The Edit Backup Schedule dialog box closes, and the backup configuration screen is displayed. The updated schedule details are displayed in the “Backup schedule” table.

4. Click Apply.

DELETING AN EXISTING BACKUP SCHEDULE

To delete an existing schedule:

1. On the **DX8100** toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Backup button . The Backup schedule page is displayed.
3. In the "Backup schedule" table, click the backup schedule you want to delete.
4. Click Delete.
5. Click Apply.



INITIATING AN INSTANT BACKUP SCHEDULE

The **DX8100** allows you to schedule an instant backup; time setting options are displayed when you select instant backup. In this case, you are given quick access to select the backup device, day and time, channel record type, and recording category. Once you establish the backup schedule, you can view the estimated backup size before starting the actual backup process.

The **DX8100** provides initial default settings. You can save time by accepting the following defaults:

- **Backup time range:** The current day and time you initiated the instant backup routine.
- **Channel record type:** All channels.
- **Categories:** All Recording.

To perform an instant backup:

1. On the **DX8100** toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Backup button . The Backup schedule page is displayed.
3. In the Backup page, do the following:
 - a. Click Instant Backup. The Backup Now dialog box opens.
 - b. Click the selection check box for the device you want to receive the instant backup data.
4. Do one of the following:
 - a. To accept backup schedule options:
 - (1) Click Estimated Backup Size. The Estimated Backup Size dialog box opens, displaying backup details.
 - (2) Read the backup information and verify that the selected backup device provides adequate space to receive the backed up data.
 - (3) Click OK.
 - (4) Click OK to accept the defaults for the time setting, channel record type, and categories. The backup starts immediately.
 - or
 - b. To customize the backup options:
 - (1) Change the backup time range, channel record type, and category.
 - (2) Click Estimated Backup Size. The Estimated Backup Size dialog box opens, displaying backup details.
 - (3) Read the backup information and verify that the selected backup device provides adequate space to receive the backed up data.
 - (4) Click OK.
 - (5) Click OK. The backup starts immediately.

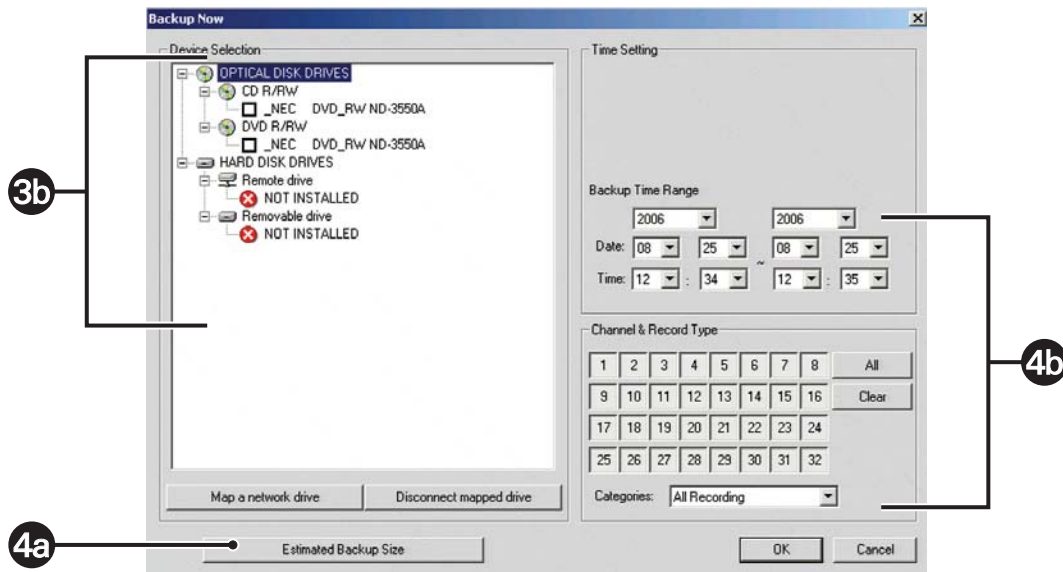




Figure 162. Instant Record Backup Now Dialog Box

MAPPING A NETWORK DEVICE



The **DX8100** allows you to map to or disconnect from a network drive. You need to know the drive letters, as well as the path to the folder to which you want to map.

To map a network drive:

1. On the **DX8100** toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Backup button . The Backup schedule page is displayed.
3. Click the Add or Instant Backup button. The Add Backup Schedule or Backup Now dialog box opens.
4. Click "Map a network drive." The Map Network Drive dialog box opens asking for a drive letter and path.
5. In the Drive drop-down box, select an available drive letter.
6. Type the path in the Folder drop-down box (*for example, \\WP_address_of_server\folder_name*).
7. (Optional) Click the "Reconnect at logon" box if you do not want the mapped drive to remain connected each time you log on.
8. Click Finish. The newly mapped drive is added as a remote drive and is displayed in the Device area of the Export Video dialog box. The mapped drive can now be accessed just like a local drive.

DISCONNECTING FROM A NETWORK DRIVE



To disconnect from a network drive:

1. On the **DX8100** toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Backup button . The Backup schedule page is displayed.
3. Click the Add or Instant Backup button. The Add Backup Schedule or Backup Now dialog box opens.
4. Click "Disconnect mapped drive." The Disconnect Network Drive dialog box opens.
5. Select the network drive you want to disconnect
6. Click OK. The drive is disconnected and removed from the Export Video dialog box's Device area.

SELECTING A BACKUP MEDIA DEVICE

You can back up video to a local or remote network device. Depending on your system configuration, backup devices may include an optical drive such as a CD-R or DVD-R, an external drive, or a network drive. The **DX8100** does not support exporting or backing up to CD-RW and DVD-RW disks, but it does support exporting or backing up to CD-R and DVD-R disks.

To select the type of backup device you want to use:

1. On the **DX8100** toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Backup button . The Backup schedule page is displayed.
3. Click the Add or Instant Backup button. The Add Backup Schedule or Backup Now dialog box opens.
4. Click the plus (+) sign beside a backup device in the device list.
5. Select the check box of the device you want to use.
6. Make sure that the backup media selected is inserted in the drive and the drive is ready.

If your **DX8100** is connected to a network that supports shared folders and drives, you can map a network drive by right-clicking the Network Drive icon in the device list. To map a network drive, select Add Network Drive from the shortcut menu and follow the on-screen directions. To remove a drive mapping, right-click the Network Drive icon and select Remove Network Drive.

VIEWING BACKED UP VIDEO

You must use the **DX8100** Client application to view backed up video. For more information about viewing backed up video, refer to the section titled *Viewing and Searching Backed Up Video* in the Client online Help or Client Applications manual.

USER SETUP

The User page allows an Administrator (Admin) to add, delete, and change the properties of users. Admin has full permission to configure all of the DX8100 features, and it is the only user level that can change permissions for all lower level users. Users are subdivided into groups and each group is granted a particular level of access. A lower level user cannot have a larger set of permission than a higher level user.

This section describes how to configure users and includes the following topics:

- [Accessing the User Page](#)
- [Built-in User Accounts](#) on page 209
- [Definition of User Access Levels](#) on page 210
- [Definition of Camera Security Access](#) on page 210
- [Adding New Users](#) on page 211
- [Modifying User Properties](#) on page 212
- [Changing User Passwords](#) on page 213
- [Changing a User's Group Affiliation](#) on page 213
- [Deleting Existing Users](#) on page 213
- [Setting Login Timeout](#) on page 213
- [Assigning Automatic Login Permission to a User](#) on page 214

ACCESSING THE USER PAGE

To access the User page:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the User button . The User page is displayed.

Figure 163 shows the parts of the User page.

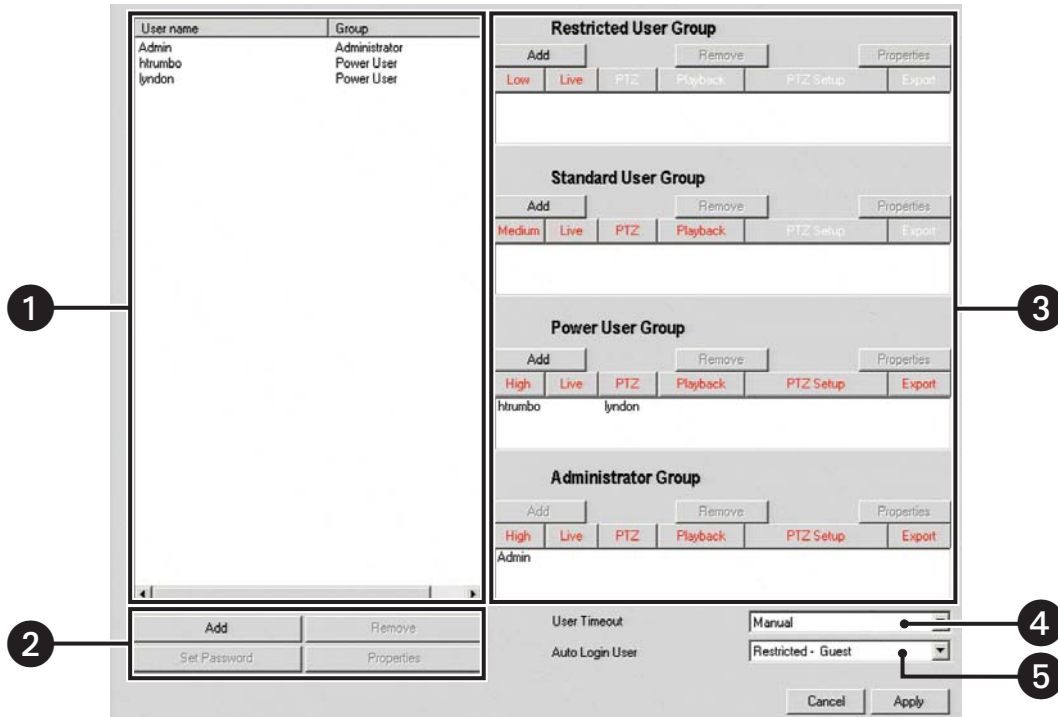


Figure 163. User Page

Table BB describes the parts of the User page.

Table BB. Parts of the User Page

Item	Part	Description
1	User Name Table	Lists the authorized users.
2	User Buttons	Allows you to do the following: <ul style="list-style-type: none"> • Add: Opens the Add New User dialog box, to create a new user account. • Remove: Deletes the selected user. • Properties: Opens the Properties dialog box, to view and modify user details. • Set Password: Opens the Set Password dialog box, to specify or modify the user's password.
3	User Groups	Allows you to create user accounts for the following user groups: <ul style="list-style-type: none"> • Power • Standard • Restricted <p>The DX8100 allows the administrator to configure access rights to any user group for the following functions:</p> <ul style="list-style-type: none"> • Camera security • View live video • Operate PTZ • Playback video • Set PTZ • Access export menu <p>For more information about user groups, refer to Definition of User Access Levels and Definition of Camera Security Access on page 210.</p>
4	User Timeout	Allows you to configure the amount of time a user is allowed to remain logged on to the DX8100 system, before the system automatically logs out. The time period is from 5-60 minutes (in increments of 5 minutes). The manual setting allows the user to stay logged on to the DX8100 until the user is manually logged off.
5	Auto Login User	Allows you to configure a user to log on to the DX8100 automatically.

BUILT-IN USER ACCOUNTS

There are two built-in user accounts that come pre configured with the DX8100, which cannot be deleted or changed.

- **Guest:** The Guest account provides limited access to the system. The Guest user can view live video but cannot play back recorded video or access system configuration functions. The Guest account automatically becomes active when the system is first started and each time a user logs out. The Guest user is not a member of any group; however, a Guest retains all of the rights and privileges of the Restricted Users group, including the ability to view low security cameras. If you do not want video from a low security level camera to be viewed by the Guest user, set the security level for that camera to medium or higher.
- **Admin:** The Admin account has full access to the system. The Admin user can view live and playback video, access all configuration settings, add and modify users, and can perform searches and backups. The Admin user is a member of the Administrators group and cannot be removed.

DEFINITION OF USER ACCESS LEVELS

There are four predefined user access levels or groups. User access levels range from the Administrator group to the Restricted group. By default, the system starts up with a default Guest account. The Admin user can assign automatic login for a specified user. For information about setting up auto login, refer to [Assigning Automatic Login Permission to a User](#) on page 214.

The Guest account has Restricted user access. Table BC describes the default user group access rights.

Table BC. Default User Group Access Rights

User Groups	View Live Video	View Recorded Video	Operate PTZ	Search Video	Backup Video	System Setup	Shut Down System	Add/Remove Users	Change User/Group Properties	Exit to Windows
Administrators	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Power Users	✓	✓	✓	✓	✓	✓	✓			
Standard Users	✓	✓	✓	✓						
Restricted Users	✓									
Guest Users	✓									

DEFINITION OF CAMERA SECURITY ACCESS

The administrator can limit the cameras that users are allowed to view. Access to a camera is determined by its security designation. The Admin user can configure access rights to any user group, for any of the following functions:

- Camera security
- View live video
- Operate PTZ
- Playback video
- Set PTZ
- Access export menu

Only users with High Security access can view cameras designated as High Security. Medium Security cameras can be viewed by users with Medium Security access and higher. All users can view Low Security cameras. All users can view No Security cameras. If you do not want video from a low security level camera to be viewed by the Guest user, set the security level for that cameras to medium or higher.

Table BD describes the default camera security levels and user access.

Table BD. Default Camera Security Levels

Groups	No Security Cameras	Low Security Cameras	Medium Security Cameras	High Security Cameras
Administrators	✓	✓	✓	✓
Power Users	✓	✓	✓	✓
Standard Users	✓	✓	✓	
Restricted Users	✓	✓		
Guest Users	✓			

MODIFYING USER ACCESS RIGHTS

The Admin user can alter default access rights of lower level users. In this case, any permission granted to a lower level user, must first be granted to all other higher level users. For example, export rights must first be granted to the Standard user before they can be granted to a Restricted user.

Click the user group buttons to enable/disable the access right for each access category. The access right category is enabled when the button's text is red (permission granted), and it is disabled when the button's text is white (permission not granted). Click a button to toggle the access right, on and off. Repeatedly clicking the Camera Security button cycles through the security levels (none, low, medium, and high).

To modify a user's access rights:

1. On the DX8100 toolbar, click (icon). The Setup dialog box opens to the Camera page.
2. Click (icon). The User page is displayed.
3. Do one of the following:
 - a. To grant an access right to a user, left click on an access right button above the user's group list. The text will toggle from white to red and that permission will be active for that user.
 - b. To deny an access right to a user, left click on an access right button above the user's group list. The text will toggle from red to white and that permission will be denied for that user.
4. Click Apply.



ADDING NEW USERS

Administrators can create new user accounts and modify existing users; this can be done locally on the DX8100 server or remotely from the DX8100 Client Application.

User names and passwords have the following requirements:

- User names can be between 4 and 20 alphanumeric characters in length.
- User passwords can be between 4 and 10 alphanumeric characters in length.
- User names cannot contain spaces and special characters.
- User names and passwords are case sensitive.

To add a new user:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the User button . The User page is displayed.
3. Click Add. The Add New User dialog box opens.
4. Do the following:
 - a. Enter a login name for the user.
 - b. Enter the user's full name.
 - c. Enter a brief description for the user. For example, enter Building 6 Security Guard.
 - d. Enter a password for the user. (Passwords must be between 4 and 10 characters in length and cannot contain spaces and special characters.)
 - e. Re-enter the same password to confirm.
5. Click Next. The user access level options for the New User dialog box are displayed.
6. Select the user's access level: Restricted, Standard, or Power.
7. Click Finish.

8. Click Apply.

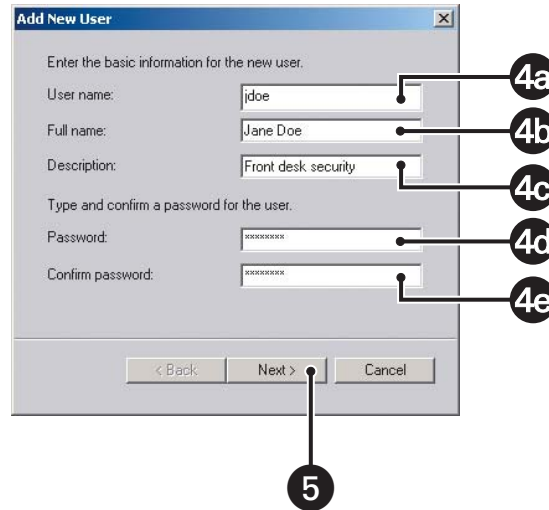




Figure 164. Add New User Dialog Box

MODIFYING USER PROPERTIES

Follow the steps below to change user attributes, such as user name and group affiliation. Users with Admin or Power User access can change name and description properties of lower level users. However, only Admin level users can change a user's group affiliation.

To modify a user's properties:



1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the User button . The User page is displayed.
3. Do one of the following:
 - In the main user list:
 - (1) Click a user name.
 - (2) Click Properties. The Property dialog box opens.
 - In one of the group lists:
 - (1) Click a user name.
 - (2) Click Properties. The Property dialog box opens.
4. Edit the following user properties:
 - User name
 - Full name
 - Description
 - Group
5. Click Apply in the Property dialog box.
6. Click Apply in the User Setup screen.

An Administrator level user can also change the group affiliation of users by dragging user names to different groups.

CHANGING USER PASSWORDS

Administrators and Power Users can change or reset an existing user's password.

To change a user's password:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the User button . The User page is displayed.
3. Click a user name in the main user list.
4. Click Set Password. The Set Password dialog box opens.
5. Enter a new password in the "New password" field.
6. Retype the password again in the "Confirm new password" field.
7. Click Apply in the Set Password dialog box.
8. Click Apply in the User Setup screen.

CHANGING A USER'S GROUP AFFILIATION

An Administrator level user can also change users' group affiliation of users by dragging user names to different groups.



To change a user's group affiliation:

- In the User name column of the User page, click the user's name and drag it into a group.

DELETING EXISTING USERS

Administrators can delete existing users.



To delete a user's account:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the User button . The User page is displayed.
3. Click the user name of the user you want to delete from the main user list.
4. Click Remove. The Remove User dialog box opens.
5. Click Yes to confirm the deletion or No to cancel and return to the User Setup screen.
6. Click the Apply button at the bottom of the screen.

SETTING LOGIN TIMEOUT

Administrators can define the amount of time a user's account can remain idle before having to log in again. This setting applies to all users, regardless of access level.

To set login timeout:



1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the User button . The User page is displayed.
3. Select a time limit from the User Timeout drop-down box.
 - Time limits range from five minutes to one hour, in five-minute increments.
 - Selecting Manual from the drop-down box will suspend the automatic logout feature. (A user will remain logged in until the user logs out or another user logs in.)
4. Click Apply.

ASSIGNING AUTOMATIC LOGIN PERMISSION TO A USER

The DX8100 allows one user to automatically log in to the DX8100 application. The administrator must assign automatic login permission to the user. Once automatic login permission is assigned to the user, the user will be automatically logged in to the DX8100 application. In this case, the assigned user does not have to enter the user name and password.

NOTE: Automatic login user permission makes the DX8100 more vulnerable because a higher level user is logged in every time.

To assign automatic login permission:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the User button . The User page is displayed.
3. In the Auto Login User drop-down selection box, select a user.
4. Click Apply.

The next time the DX8100 application is started, the assigned user is logged in automatically.

SITE SETUP

This section describes how to connect to a remote site and includes the following topics:

- [Adding a Remote Site](#)
- [Finding Active Remote Cameras](#) on page 217
- [Activating Remote Sites](#) on page 217
- [Editing a Remote Site](#) on page 218
- [Deleting a Remote Site](#) on page 218

ADDING A REMOTE SITE

Up to 100 remote DX8100 HVR server sites can be added to the local server's site list. Up to four remote HVR sites can be accessed from a single DX8100 (a total of five sites, including the local HVR, can be active on a single network segment). Up to 16 cameras can be viewed from and managed for each remote site (of which 32 cameras can be simultaneously assigned to view panels). Once a site has been added to the site list, it can be managed and viewed just as the local HVR.

NOTE: Only those with Power User or greater permissions can configure the access rights of remote HVRs.



Once a remote site has been added, all viewing, searching, and setup functions of that site can be accessed from the local DX8100. To access the features of a remote site, users must possess a valid user account with the appropriate access rights for that site.

This section describes how to add a site with a static IP or dynamic IP address and includes the following topics:

- [Adding a Site with a Static IP Address](#)
- [Adding a Site with a Dynamic IP Address](#) on page 216

Adding a Site with a Static IP Address

To add a remote HVR site when the IP address is known:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Site Setup button .
3. Select the Manual button (if it is not already selected).
4. Enter a site name for the remote HVR. (Site names can be up to 32 characters long and can contain spaces and special characters, for example, Building 1 HVR.)

5. Enter the IP address of the remote site.
6. If necessary, do the following:
 - a. Enter a new base port number (9002 is the default).
 - b. Enter a new upgrade port number (9003 is the default).
 - c. Enter a new information port number (9003 is the default).
 - d. Click Add. The site appears in the "Site IP list" on the right.
7. Repeat steps 4-6 for each additional site. Up to 50 remote sites can be added to the site list.
8. Click Apply.

Once a remote site has been set up, its name appears in the Site Tree. It may take up to five minutes to initially connect to the site. Once a connection has been established, cameras from the remote site can be dragged onto the main screen view panels.

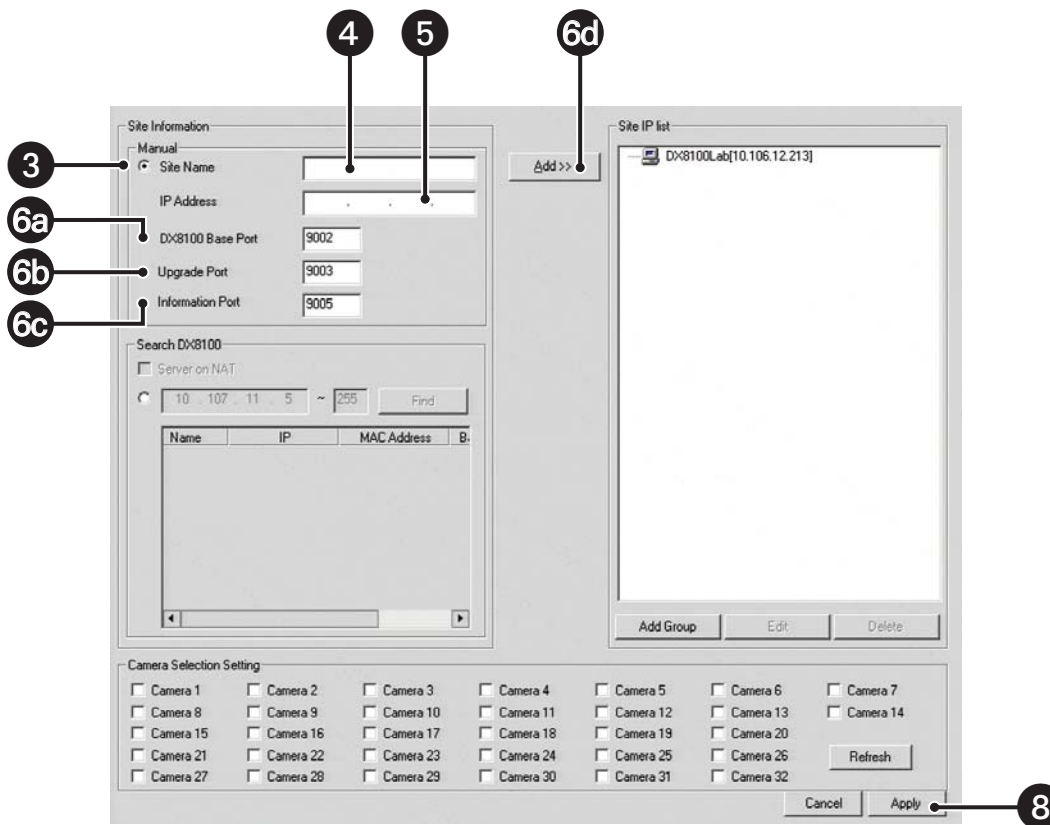




Figure 165. Adding a Site with a Static IP Address

Adding a Site with a Dynamic IP Address

An Administrator level user can connect DX8100 units, even when the exact IP address of a remote HVR is not known. To add a site successfully, the following items must be established:

- Each HVR must be attached to the same TCP/IP subnet or LAN.
- The first three octets of the IP address of the HVR host or subnet must be known.
- The range of addresses used in the last octet of the HVR host or subnet must be known.

To add a remote HVR site when the IP address is known:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Site Setup button .
3. Select the Search DX8100 button (if it is not already selected).
4. Enter an IP address range to search for HVR sites.
 - a. Enter the first three octets of the IP range you want to search (for example, 10.10.1).
 - b. Enter the beginning value for the search range in the fourth octet (for example, 001).
 - c. Enter the final value for the search range in the box provided (for example, 254).Each octet of the IP address must be an integer number between 1 and 255.
5. Click Find, and then wait while the DX8100 searches the network for remote HVR sites.
6. Select the HVR site(s) you want to add to the site list.
7. Click Add.
8. Click Apply.

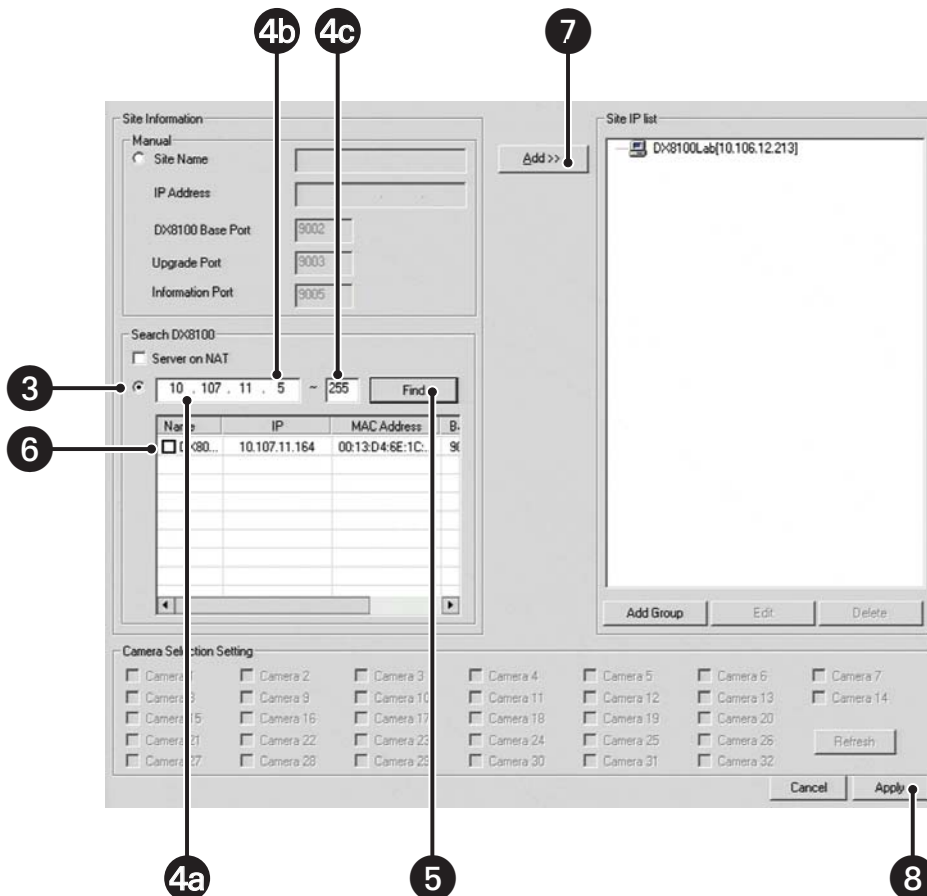




Figure 166. Adding a Site with a Dynamic IP Address

FINDING ACTIVE REMOTE CAMERAS

After connecting to a remote site, you should query the server to determine which cameras are active. HVRs can have 8, 16, 24, or 32 channels.

To determine which cameras are active:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Site Setup button .
3. Select the Manual button (if it is not already selected).
4. Enter a remote site IP address.
5. Click Refresh.
6. Click Apply.

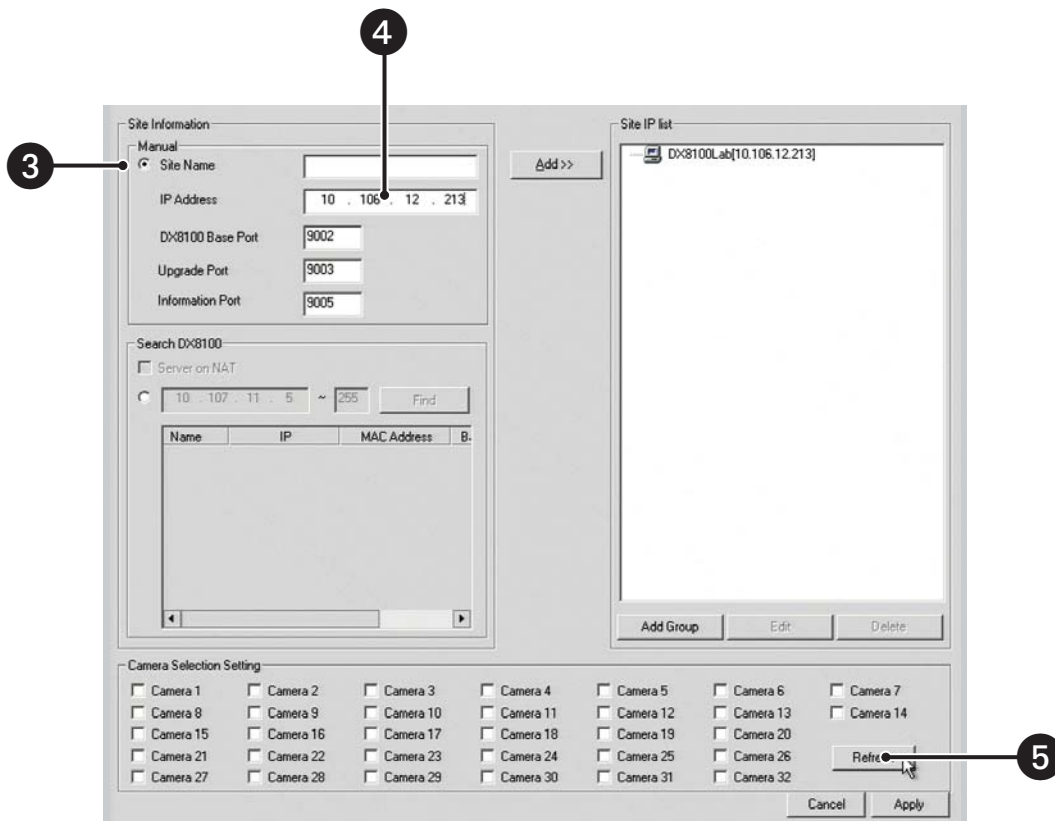




Figure 167. Finalizing Site Setup

ACTIVATING REMOTE SITES

The DX8100 only supports up to five remote connections; however, one computer client can connect up to 200 servers simultaneously. Using the multicast feature, the DX8100 HVR can support an unlimited number of Web client connections.

To activate up to five remote sites:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Site Setup button .
3. In the "Site IP list," select up to five HVR sites to be activated.
4. Click Apply. The new DX8100 server site(s) should now be listed in the Site Tree.



MODIFYING A REMOTE SITE

This section describes how to modify a remote site and includes the following topics:

- [Editing a Remote Site](#) on page 218
- [Deleting a Remote Site](#) on page 218

Editing a Remote Site

To change the attributes of a remote site:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. In the Setup dialog box, click the Site Setup button .
3. Select the site name you want to edit from the "Site IP list" by clicking its site name.
4. Click Edit. The Server Information dialog box opens.
5. Enter a new site name for the remote HVR.
6. Enter the new IP address of the remote site.
7. If necessary, enter a base port number (9002 is the default).
Unless there is a conflict on your network, you should not change port numbers from their default values. Make sure any changes to port numbers are made consistently across all DX8100 servers and clients on a network. Client and server ports must be identical.
8. If necessary, enter an upgrade port number (9003 is the default).
9. Click OK.
10. Click Apply.

Deleting a Remote Site

To delete an existing site from the site list:

1. Select the site name you want to delete from the "Site IP list" by clicking its site name.
2. Click Delete.
3. Click OK to confirm, or click Cancel to abort the deletion.
4. Click Apply.

SYSTEM SETUP

Users with Power User or greater permissions can save configuration settings using the system export feature. Previously saved settings can be loaded into the HVR using system import.

This section describes how to configure system options and parameters, including the following topics:

- [Accessing the System Page](#) on page 219
- [Working with the Export Feature](#) on page 219
- [Working with the Import Feature](#) on page 220
- [Using System Logs](#) on page 222
- [Selecting the Language](#) on page 224
- [Setting the System Time](#) on page 224
- [Selecting the Video Format](#) on page 226
- [Working with Ctrl+Alt+Del Function](#) on page 226
- [Setting Up Auto Reboot](#) on page 227
- [Specifying the Data Retention Time Limit](#) on page 227
- [Working with Online Help](#) on page 228

ACCESSING THE SYSTEM PAGE

To access the System page:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the System button . The System page is displayed.

WORKING WITH THE EXPORT FEATURE

The DX8100 provides an import and export feature that allows you to save and reload DX8100 configuration settings. You can save your DX8100 HVR configuration settings by exporting them to a specific storage location. You can reload a specific configuration profile by importing its configuration file.



NOTE: The DX8100 Export feature backs up all configuration settings to the target device; however, the target device setting is not restored after the import process is executed. The target device setting must be re-entered before the scheduled backup routine can execute.

This section describes how to use the import and export feature, including the following topics:

- [Exporting the Current HVR Settings](#)
- [Using the Edit Menu to Perform an Export](#) on page 220

Exporting the Current HVR Settings

To save current HVR configuration settings:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the System button . The System page is displayed.
3. Select the Export button.
4. Select the check boxes of each configuration item you want to back up.
5. Do one of the following:
 - a. To specify the file name to which you want to export, enter the drive, path and file name information into the box. Setting file names follow standard Windows file-naming conventions, for example, C:\DX8100\Jan_2004_config.bak.or
 - b. To browse for a location:
 - (1) Click Browse.
The DX8100 Setup File Export Dialog box opens.
 - (2) Enter a file name in the "File name" box.
 - (3) Navigate to the drive and folder in which you want to save the settings file.
 - (4) Click the Up button to move up a level in the folder hierarchy.
 - (5) Click Save.

- Click Export Now.

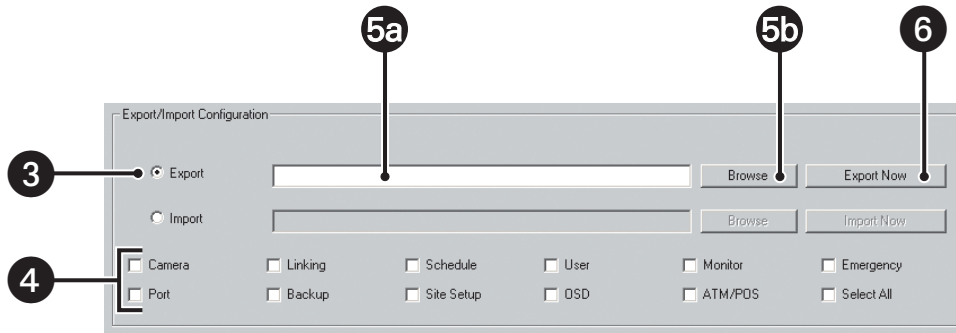


Figure 168. Exporting HVR Settings

Using the Edit Menu to Perform an Export

To save the current HVR settings:

- From the DX8100 menu bar, choose Edit > Export Setup.
The DX8100 Setup File Export Dialog box opens.
- Select the folder in which you want to save the settings file.
- Click the Up button to move up a level in the folder hierarchy.
- Enter a file name in the space provided.
- Click Save.



WORKING WITH THE IMPORT FEATURE

This sections describes how to import DX8100 HVR settings and includes the following topics:

- [Importing HVR Settings](#)
- [Using the Edit Menu to Perform an Import](#) on page 221

Importing HVR Settings

To import a saved settings file:

- On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
- Click the System button . The System page is displayed.
- Select the Import button.
- Do one of the following:
 - To specify the file name for import, enter the drive, path, and file name information in the box. Settings file names follow standard Windows file-naming conventions. For example, C:\System Settings Backup.bak.
 - or
 - To browse for a location:
 - Click Browse. The DX8100 Setup File Export Dialog box opens.
 - Navigate to the drive and folder where the settings file is located.
 - Click the Up button to move up a level in the folder hierarchy.
 - Select the settings file you want to open.
 - Click Open.
- Click Import Now.

6. Click Apply.

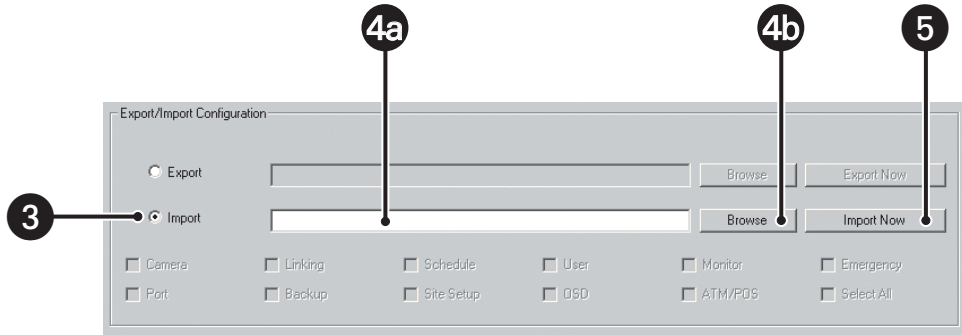


Figure 169. Import DX8100 Server Configuration

Using the Edit Menu to Perform an Import

To import a settings file from a specific drive or folder:

1. From the DX8100 menu bar, choose Edit > Import Setup.
The DX8100 Setup File Import Dialog box opens.
2. Select the folder location of the file you want to import.
3. Click the Up button to move up a level in the folder hierarchy.
4. Click the settings file you want to open.
5. Click Open.

USING SYSTEM LOGS

The DX8100 automatically stores system information in a number of log files. Users with Power User or greater permissions can use these files to track system statistics and monitor security. The DX8100 allows you to view its activity log and Windows OS log files.

NOTE: If the Log View dialog box displays multiple System On notifications, but does not display any System Off notifications, the unit has failed. Contact Pelco Product Support for more information.

This section describes how to use the system logs and includes the following topics:

- [Viewing a Log File](#) on page 222
- [Exporting Log Information](#) on page 224

Table BE describes the DX8100 activities and Windows OS log views. The log views are available from the DX8100 server's View menu.

Table BE. DX8100 Activities and Windows OS Log Files

DX8100 Log View	Windows OS Log View
System On/Off	Success
System Failure	Error
Export	Warning
Backup	Information
Network Connection	Audit_Sucess
Login ID List with Time	Audit_Failure
Video Loss	Audit_Failure

Viewing a Log File

To view a log file:



1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the System button . The System page is displayed.
3. In the Log Information section, select a log file from the Choose drop-down box.
4. Do one of the following:
 - a. To view DX8100 logs, click View. The Log View dialog box opens.

Figure 170 shows the Log View dialog box.



Figure 170. Log View Dialog Box

or

- b. To view OS log information, do the following:

- (1) Click OS Log View. The Window Log Viewer opens.
- (2) Click a button to select a category

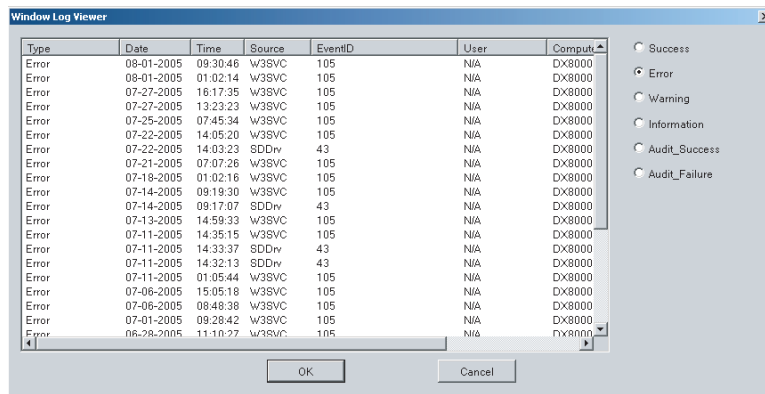




Figure 171. Window Log Viewer Dialog Box

5. Do one of the following:
 - Click OK to close the log dialog box.
 - Click Clear to erase the log.

Exporting Log Information

To export a system log file:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click System button . The System page is displayed.
3. In the Choose drop-down box, select a log file.
4. Click Save As.
5. Select the drive and folder in which you want to store the log file.
6. Enter a filename for the log information in the space provided.



Log file names follow standard Windows file-naming conventions. Alternately, you can view log files by clicking View > Log and then selecting the desired log file. Log files can be opened and printed using a text editing program, such as Windows Notepad.

7. Click Save.

SELECTING THE LANGUAGE

English is the default language for the DX8100 interface; although the system supports multiple languages, language changes must be configured from both the HVR's operating system and within the DX8100 application.

To select the appropriate language for your location:

1. On the DX8100 toolbar, click Setup button . The Setup dialog box opens to the Camera page.
2. Click the System button . The System page is displayed.
3. Make sure the HVR operating system's regional and language settings have been properly set up. Refer to the installation manual for information about regional setup.
4. In the Language section, select the following appropriate language from the Select Language drop-down box.
 - English
 - French
 - German
 - Italian
 - Polish
 - Portuguese
 - Russian
 - Spanish
5. Click Update. The Restart dialog box opens.
6. Click Yes. The changes are applied and the DX8100 restarts.

SETTING THE SYSTEM TIME

Be sure to set the system time before using the DX8100; setting the internal clock for each HVR on the network ensures that each unit accurately reflects the local time.

This section describes how to set the DX8100 system time and includes the following topics:

- [Setting System Time](#)
- [Working with Standard and Daylight Saving Time](#) on page 225



Setting System Time


Pelco recommends that the system time be configured only at the DX8100 server System page. Only Administrator access or higher can change the system time. If a subsequent attempt is made to set the system clock to a time earlier than the current time, the DX8100 server will display the Confirm dialog box, to alert the user. The user will then be prompted to do one of the following:

- Accept the new system time and delete data recorded between the current time and the newly set time. If this option is accepted, the data is deleted and the DX8100 automatically restarts.
- Accept the new system time, with the following conditions:
 - Previously recorded data will not be deleted.
 - The DX8100 will not record new data until the system time passes the time that data was previously recorded. For example, if data was recorded at 3:00 p.m. and at that time the system time was reset to 2:30 p.m., the DX8100 will not commence recording again until the system time passes 3:00 p.m.

If the user changes the system time from the Windows Control Panel, the data recording protection feature described above is defeated, resulting in impairment of the recording time line. Without notice, previously recorded data can be overwritten by new data.

To set the system time:

1. On the DX8100 toolbar, click Setup button . The Setup dialog box opens to the Camera page.
2. Click the System button . The System page is displayed.
3. In the Date/Time Setup section, do the following:
 - a. In the Date/Time drop-down box, select the current month, day, and year.
 - b. Select the current time.

 **WARNING:** Attempting to set the system clock to a time earlier than the current system time will require that you either perform one of two options: delete all data recorded between the current time and the new time, or do not delete previously recorded data and begin recording only after the system time has passed the recorded time. One exception to this rule involves Daylight Saving Time. For more information, refer to the [Working with Standard and Daylight Saving Time](#) on page 225.

- c. Click Update.
 - d. In the “Time zone” drop-down box, select the correct time zone.
 - e. Click Update.
4. Click Apply.

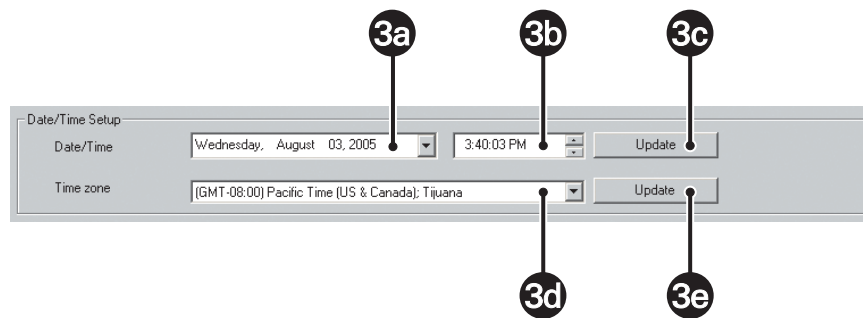




Figure 172. System Setup Time

Working with Standard and Daylight Saving Time

The DX8100 ensures that no data is lost when the system clock is changed to reflect Daylight Saving Time or Standard Time. The DX8100 follows the Windows operating system clock changes and is configured (by default) to automatically recognize Daylight Saving and Standard Time changes. When the DX8100 encounters a time change it will record data for the transition time period twice. For example, when the system clock is set back one hour (from 2:00 AM to 1:00 AM), there will appear two periods on the playback time line that represent the transition hour.

SELECTING THE VIDEO FORMAT

To select the appropriate video signal format for your location:

1. On the DX8100 toolbar, click Setup button . The Setup dialog box opens to the Camera page.
2. Click the System button . The System page is displayed.
3. In the Video Format section, click NTSC or PAL to select the format.
4. Click Apply.

WORKING WITH CTRL+ALT+DEL FUNCTION

This section describes how to use the DX8100 Ctrl+Alt+Del key combination and includes the following topics:



- [Enabling Ctrl+Alt+Del](#)
- [Using Ctrl+Alt+Del](#)

Enabling Ctrl+Alt+Del

Enabling the Ctrl+Alt+Del key combination allows you to open the Windows Task Manager dialog box to perform system administration tasks. To complete the procedure, you must be logged on to the DX8100 as an administrator or power user.

The DX8100 keyboard is remapped. To see which keys replace the Ctrl and Alt keys, refer to the Important Security Information for System Administrators guide.

To enable the Ctrl+Alt+Del key combination:

1. On the DX8100 toolbar, click Setup button . The Setup dialog box opens to the Camera page.
2. Click the System button . The System page is displayed.
3. In the “Setup Ctrl + Alt + Del key combination” section, click the Enable Ctrl+Alt+Del key combination selection check box.
4. Click Apply.
5. Reboot the DX8100.

Using Ctrl+Alt+Del

You must enable the Ctrl+Alt+Del key combination and verify your actual keyboard mapping. In some cases, the DX8100 keyboard is remapped and the actual Ctrl, Alt, and Delete key function is assigned to other keys.

Ctrl+Alt+Del allows you to access the Windows Task Manager dialog box from within the DX8100 shell. When you exit the Windows environment, you are returned to the DX8100 shell. In this case, you do not have to log back into the DX8100.

To access the Windows Task Manager dialog box:

1. Press the assigned keys that implement the Ctrl+Alt+Del function. The Windows Security dialog box opens.
2. In the Windows Security dialog box, click Task Manager. The Windows Task Manager window opens.



To return to the DX8100 shell without rebooting the DX8100, exit the Windows Task Manager dialog box.

SETTING UP AUTO REBOOT

The DX8100 allows you to select the day and time for the server to perform an automatic reboot. If there are mapped network drives, the Windows feature requires that the password be entered at the Enter Network Password dialog box. In this case, the DX8100 application will not start until the password is manually entered.

NOTE: The DX8100 will not automatically reboot if there are mapped network drives.

To enable the Auto Reboot feature:



1. On the DX8100 toolbar, click Setup button . The Setup dialog box opens to the Camera page.
2. Click the System button . The System page is displayed.
3. In the Auto Reboot section, click the Enable check box.
4. In the Auto Reboot section, do the following to specify the day and time to automatically reboot the system:
 - a. Select the day of the week in the drop-down box.
 - b. In the Hour drop-down box, select the hour. Time is displayed in 24-hour clock format.
 - c. In the Minute drop-down box, select the minutes.
5. Click Apply.

SPECIFYING THE DATA RETENTION TIME LIMIT

The DX8100 data retention time setting allows the Administrator user to configure a time limit for viewable recorded video. The time limit can be entered manually or selected from the drop-down menu lists. The data retention time is set in increments of one or more days. The viewing time limit window starts from the date of recording to the configured time limit. For example, if the time limit is set for 11 days, all video recorded on Aug. 24, 2006 can be viewed up to and including September 4, 2006. The data recorded on Aug. 24 cannot be viewed on Sept. 5. The video data recorded on Aug. 24 is not be deleted; it is just not available for viewing.

If the Administrator sets the retention time to unlimited or to a time later than the current retention time limit, all video data (if the retention time is set to Unlimited) or data within the newly set retention time limit can be viewed.

To set the data retention time limit:

1. On the DX8100 toolbar, click Setup button . The Setup dialog box opens to the Camera page.
2. Click the System button . The System page is displayed.
3. In the Data Retention Time Limit area, select a retention time limit from the drop-down list.

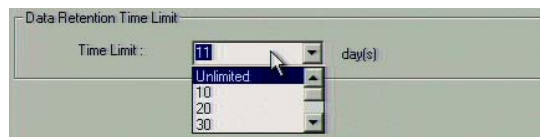


Figure 173. Data Retention Time Limit Entered Manually



4. Click Apply. The Shut Down dialog box opens, prompting you to restart the DX8100.
5. Do one of the following:
 - To restart the DX8100 to use the new settings, click Yes. The DX8100 restarts.
 - To cancel the new settings, click No. The current time limit setting is restored and the system does not restart.

WORKING WITH ONLINE HELP

The DX8100 server includes an online Help system. By default, the Help system is disabled and not available for viewing. The Admin user has authority to configure the DX8100 to display or not display online Help. When Help is enabled, all user groups can open and view the Help system.

NOTE: There is a security risk when Help is enabled. A guest user can gain access to the Windows file manager through the online Help system.

To enable/disable Help for viewing:

1. On the DX8100 toolbar, click Setup button . The Setup dialog box opens to the Camera page.
2. Click the System button . The System page is displayed.
3. In the DX8100 Help section, do one of the following:
 - Click the Enable DX8100 Help to select Help for viewing,
 - Click the Enable DX8100 Help to deselect Help for viewing,
4. Click Apply.

EXTERNAL MONITOR SETUP

The DX8100 includes one capture card, which provides a BNC analog monitor output. A second optional capture card can be installed to provide two analog monitor outputs. The first capture card nearest to the PTZ card is user definable. Users with Power User access or higher can assign cameras and configure the capture card analog output options.

NOTE: An external monitor must be connected to the capture card to make use of the analog monitor outputs. Refer to the installation manual for instructions on how to connect analog monitors to the capture card.

This section describes how to setup an external monitor and includes the following topics:

- [Accessing the External Monitor Setup](#)
- [Setting Up Camera Mapping](#)
- [Configuring Display Override](#) on page 235
- [Using the External Monitor Option](#) on page 235

ACCESSING THE EXTERNAL MONITOR SETUP

To access the monitor configuration screen:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Ext. Monitor button . The External Output page is displayed.
The Ext. Monitor page is displayed.

SETTING UP CAMERA MAPPING

The DX8100 allows you to set up automatic or manual camera mapping. This sections describes how to set up camera mapping and includes the following topics:

- [Setting Up Automatic Camera Mapping](#)
- [Setting Up Manual Camera Mapping](#) on page 230



Setting Up Automatic Camera Mapping

Automatic camera mapping offers a simplified method for configuring the capture card analog output. Video from each camera source will be automatically cycled across the monitor's view panels. In the automatic mode, all cameras will be displayed sequentially, starting with Camera 1 and continuing through Camera 32 (depending on your system configuration).

The following information should be noted when using the automatic camera mapping feature:

- The automated sequence is interrupted each time a motion or alarm event is detected.
- When the HVR detects an event (either motion or alarm), the monitor output displays the camera source that detected the event. The amount of time that an event channel is permitted to override the automated sequence can be set from 1 to 60 seconds.
- Eight-channel HVRs offer only the 1 x 1, 2 x 2, and 3 x 3 view panel options. If you select more than one screen division, each camera channel will cycle through each screen before the next panel division is presented.

To configure automatic camera mapping:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Ext. Monitor button . The External Output page is displayed.
3. In the Auto Camera Mapping Mode section, do the following:
 - a. Select the Auto Camera Mapping Mode button.
 - b. Select from the screen division options.
 - c. Select dwell time (1-60 seconds) from the drop-down box. This is the amount of time each window will remain on the monitor.
 - d. Select the type of event that will be allowed to override the monitor output:
 - Alarm input
 - Motion detection
 - e. Set the dwell time an event will be allowed to override the screen (1-60 seconds).
4. Click the Apply button at the bottom of the page.

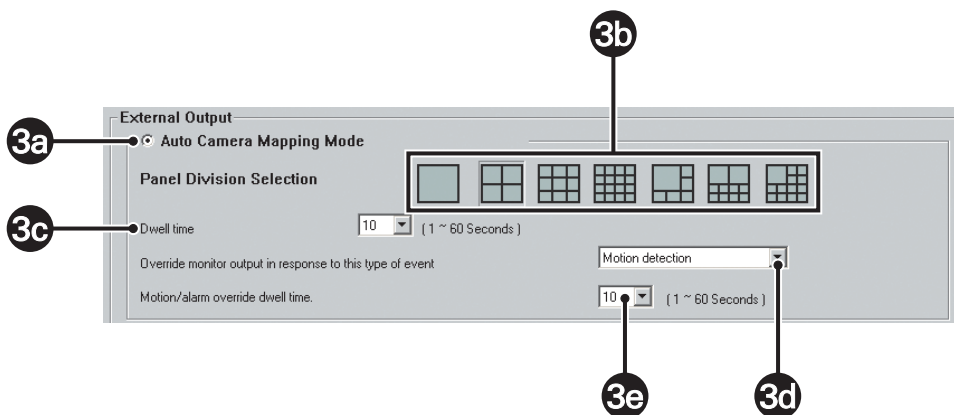


Figure 174. External Monitor: Automatic Mapping

Setting Up Manual Camera Mapping

Manual camera mapping allows a user to customize the capture card analog output. Individual cameras can be assigned to view panels in any combination. Each customized screen can be added to a sequence list and assigned a specific amount of dwell time. These combinations of customized screens and corresponding dwell times make up sequence instances: multiple sequence instances can be combined into a sequence list. The resulting list will sequentially display each instance on an external monitor in a continuous loop. The sequence will continue uninterrupted until an alarm or motion event overrides the cycle.

The following information should be noted when using the manual camera mapping feature:



- Eight-channel HVRs offer only the 1 x 1, 2 x 2, and 3 x 3 view panel options.
- If you select more than one screen division, each camera channel will cycle through each screen before the next panel division is presented.

This section describes how to set up manual camera mapping and includes the following topics:

- [Creating Monitor Sequence Instances](#)
- [Loading an Existing Sequence List](#) on page 231
- [Modifying a Sequence Instance in the List](#) on page 232
- [Deleting a Sequence Instance from the List](#) on page 233
- [Appending an Existing Sequence List](#) on page 234

Creating Monitor Sequence Instances

To add a sequence instance to the sequence list:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Ext. Monitor button . The External Output page is displayed.
3. In the Manual Camera Mapping Mode section, do the following:
 - a. Select the Manual Camera Mapping Mode button (if it is not already selected).
 - b. Select one of the screen division options.
 - c. Drag cameras from the Site Tree onto each view panel until cameras have been assigned to all panels.
 - d. From the Min and Sec drop-down boxes, select the amount of time the sequence instance will remain on the monitor.
 - e. Click Add.
The instance is added to the Sequence Table.
4. Do one of the following:
 - Repeat step 3 for each additional sequence instance you want to add to the sequence list.
 - If you want to apply the custom setting without saving, click Apply and skip steps 5-9.
5. Click Save. The Save Profile dialog box opens.
6. Select an existing profile or enter a new profile name under which to save the sequence.
7. Click OK.
8. In the Sequence Table, click Apply.

9. Click Apply in the External Output page.

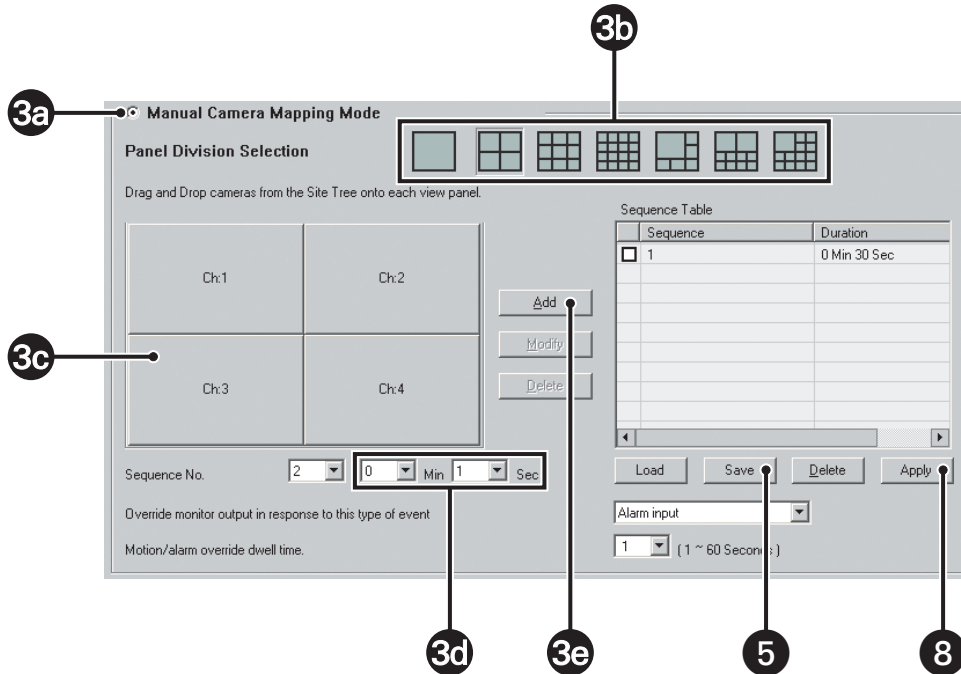




Figure 175. External Monitor: Manual Mapping

Loading an Existing Sequence List

To load an existing sequence list:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Ext. Monitor button . The External Output page is displayed.
3. In the Manual Camera Mapping Mode section, do the following:
 - a. Click the button to select the Manual Camera Mapping mode.
 - b. Click Load to load or modify an existing sequence.
The "Load profile" dialog box opens.
 - c. Select a profile.
 - d. Click OK.
The DX8100 dialog box opens, prompting you to append the sequence to the list.

- e. Click No to the Append option.

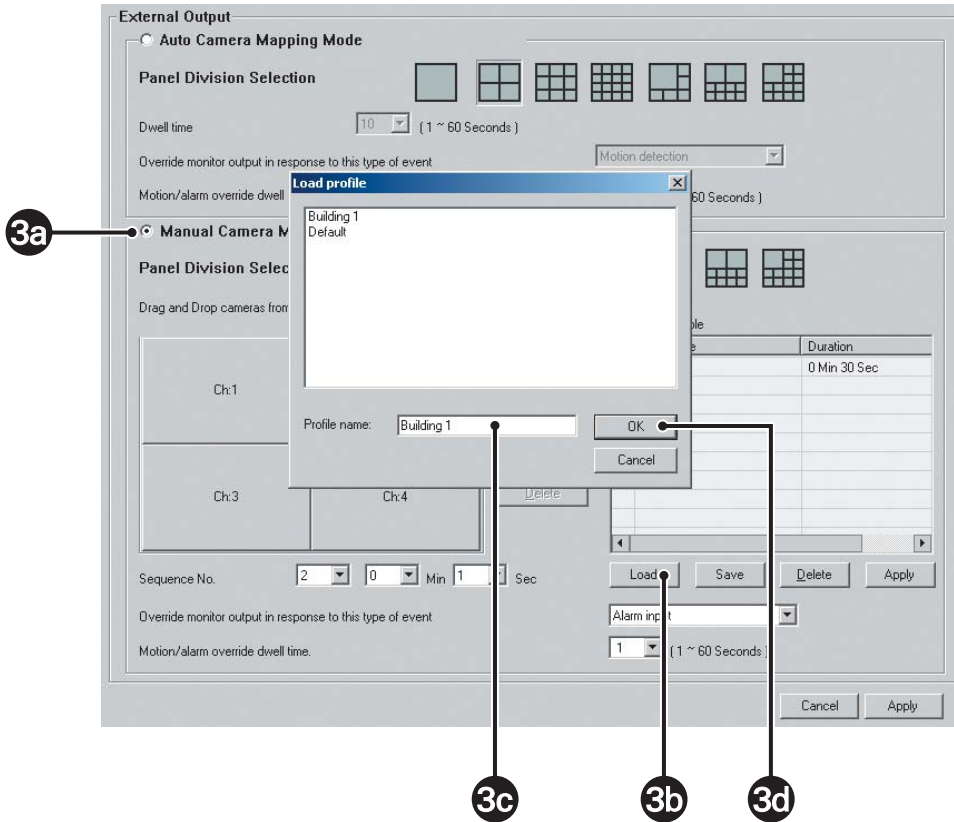




Figure 176. Loading a Mapping Sequence

Modifying a Sequence Instance in the List

To modify a sequence instance in the list:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Ext. Monitor button . The External Output page is displayed.
3. In the Manual Camera Mapping Mode section, do the following:
 - a. Click the button (if it is not selected) to select the Manual Camera Mapping mode.
 - b. Click one of the sequence instances from the list.
 - c. Select a screen division.
 - d. Drag cameras from the Site Tree onto each view panel until cameras have been assigned to all panels.
 - e. From the Min and Sec drop-down boxes, select the amount of time the sequence instance will remain on the monitor.
 - f. Click Modify.
 - g. Click Save.
The Save dialog box open.
4. Select an existing profile or enter a new profile name under which to save the sequence list.
5. Click OK.
6. Click Apply.

- Click Apply in the External Monitor page.

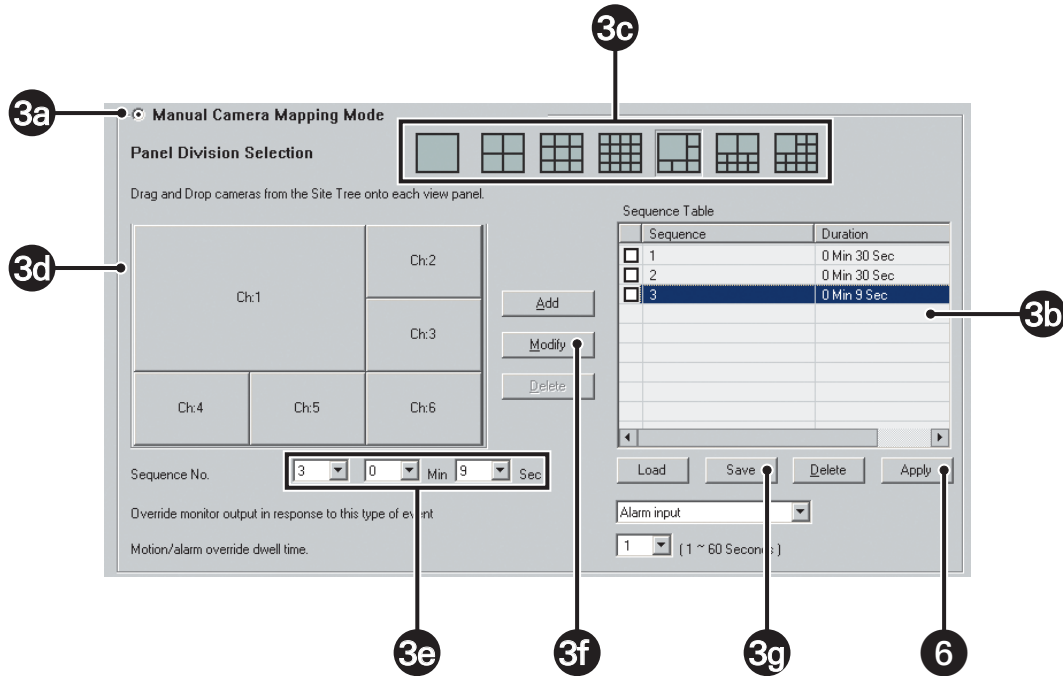




Figure 177. Modify a Mapping Sequence

Deleting a Sequence Instance from the List

To delete a sequence instance from the list:

- On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
- Click the Ext. Monitor button . The External Output page is displayed.
- In the Manual Camera Mapping Mode section, do the following:
 - In the Sequence Table, click the check box next to the sequence instance you want to delete.
 - Click Delete.
 - Click Save.

The Save profile dialog box opens.
- Select an existing profile or enter a new profile name under which to save the sequence list.
- Click OK.
- Click Apply.

- Click Apply at the bottom of the External Monitor page.

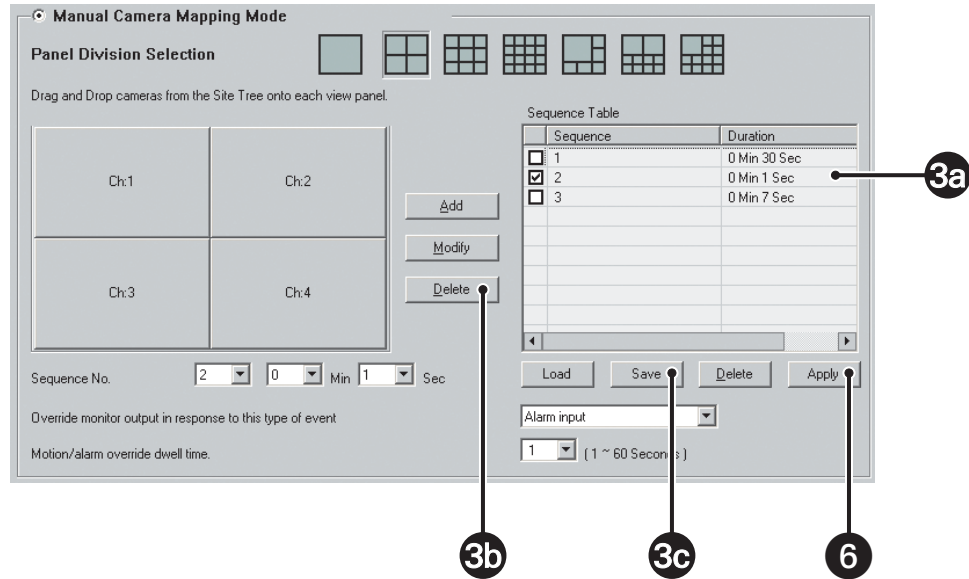




Figure 178. Delete a Mapping Sequence

Appending an Existing Sequence List



To append an existing sequence list to the current list:

- On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
- Click the Ext. Monitor button . The External Output page is displayed.
- Click Load. The “Load profile” dialog box opens.
- Select a profile.
- Click OK.
The “Append to list” dialog box opens.
- Click Yes to add the new sequences to the existing list.
- To add, delete, or modify sequence instances, follow the directions in the sections above.
- Click Save.
- Select an existing profile or enter a new profile name to save the sequence list.
- Click OK.
- Click Apply in the Sequence Table section.
- Click Apply.

CONFIGURING DISPLAY OVERRIDE



The capture card can be configured to interrupt normal output when a motion or alarm event is detected. Each event instance causes live video from the sensing camera to be displayed for up to 60 seconds after event detection.

To set up event monitor override options:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Ext. Monitor button . The External Output page is displayed.
3. Select the type of event that will be allowed to override the monitor output:
 - Alarm input
 - Motion detection
4. Set the dwell time an event will be allowed to override the screen (1-60 seconds).
5. Click Apply.

USING THE EXTERNAL MONITOR OPTION

To assign a sequence profile to an external analog monitor:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Ext. Monitor button . The External Output page is displayed.
The External Monitor drop-down menu is displayed.
3. Select a profile from the External Monitor drop-down menu.

EMERGENCY NOTIFICATION SETUP

The Emergency Agent Notification alerts selected clients to motion, alarm, and video loss events detected by DX8100 server sites. When a motion, alarm, or video loss event is triggered, a pop-up window opens on the monitor of the remote site client. The window displays one or more still images taken during the event.

Users with Power User access and higher can configure the emergency agent notification system. The first step in the setup process requires that clients be added to the emergency agent notification list. To complete this step, you must provide a valid name and the IP address of each client computer. After clients have been added they can be linked to one or more cameras. Finally, the amount of time a server sends images after an event occurs and the interval between sending each image must be set.

NOTE: Before configuring the Emergency Agent Notification, make sure the Emergency Agent Client utility is installed on one or more client computers. For information about installing the Emergency Agent Client utility, refer to *Installing the Client Emergency Agent Application* in the DX8100 Client Application manual.

This section describes how to setup emergency notification and includes the following topics:

- [Accessing the Emergency Agent Notification Setup](#)
- [Adding Client Emergency Agents to be Notified](#)
- [Changing Client Emergency Agent Properties](#) on page 236
- [Deleting Clients from the Notification List](#) on page 237
- [Linking Cameras to Client Emergency Agents](#) on page 237
- [Setting Server Event Transmission Time](#) on page 237

ACCESSING THE EMERGENCY AGENT NOTIFICATION SETUP



To access the Emergency Agent Notification setup:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.

ADDING CLIENT EMERGENCY AGENTS TO BE NOTIFIED

After clients have been added, cameras must be configured to notify individual clients of an event. A single camera can be linked to one or more client emergency agents. For information about linking cameras to client emergency agents, refer to [Linking Cameras to Client Emergency Agents](#) on page 237.



To add clients to the Emergency Agent Notification list:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click Add. The Agent Setup dialog box opens.
4. Do the following:
 - a. Enter a name for the client. (Client names can be up to 63 characters and can include spaces, but not special characters.)
 - b. Enter the client's IP address.
 - c. If necessary, enter a port number in the Agent Port box. (The default port number is 9004.)

Unless there is a conflict on your network, you should not change the Emergency Agent port number from its default of 9004. Make sure any changes to port numbers are made consistently across all DX8100 servers and clients on a network. Client and server ports must be identical.
5. Click OK.
6. Click the Apply button at the bottom of the screen.

CHANGING CLIENT EMERGENCY AGENT PROPERTIES



To change an existing client's information in the emergency notification list:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Do the following:
 - a. In the Emergency Agent Setup section, select a client from the list.
 - b. Click Edit. The Agent Setup dialog box opens.
 - c. Enter a new name for the client. (Client names can be up to 63 characters long and can include spaces, but not special characters.)
 - d. Enter a new IP address for the client.
 - e. If necessary, enter a port number in the Agent Port box. (The default port number is 9004.)

Unless there is a conflict on your network, you should not change the Emergency Agent port number from its default of 9004. Make sure any changes to port numbers are made consistently across all DX8100 servers and clients on a network. Client and server ports must be identical.
4. Click OK.
5. Click the Apply button at the bottom of the screen.

DELETING CLIENTS FROM THE NOTIFICATION LIST

To delete a client from the emergency notification list:



1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Do the following:
 - a. In the Emergency Agent Setup section, select a client from the list.
 - b. Click Delete. The selected client is deleted.
4. Click Apply.

LINKING CAMERAS TO CLIENT EMERGENCY AGENTS

After clients have been added, cameras must be configured to notify individual clients about an event. A single camera can be linked to one or more client emergency agents.

Up to 32 IP addresses can be assigned to each camera. The DX8100 can transmit up to 10 IP addresses simultaneously.



To link a camera to one or more clients:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. In the Camera Setup section, click a camera button (Camera 1-32). The Emergency Agent Selection dialog box opens.
4. Click the check box to select the name of the client site you want to notify when a motion, alarm, or video loss event is detected by this camera.
5. Repeat steps 1 and 2, for up to 32 cameras on the current site.
6. Click the Apply button at the bottom of the screen.
7. Configure the server event transmission time. For information about setting the duration and transmission interval, refer to [Setting Server Event Transmission Time](#) on page 237.

SETTING SERVER EVENT TRANSMISSION TIME

After clients have been added and linked to cameras, you must set the amount of time a server sends images after an event occurs and the interval between sending each image (for one or more clients). For information about adding clients, refer to [Adding Client Emergency Agents to be Notified](#) on page 236. For information about linking cameras, refer to [Linking Cameras to Client Emergency Agents](#) on page 237.

To set the duration for sending images and the transmission interval:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. In the Option section of the Emergency Agent page, enter the amount of time (in seconds) that you want the DX8100 to continue sending still images after an alarm, motion, or video loss event has been detected.
4. Enter the time interval (in seconds) that you want the DX8100 to wait between sending each still image.
5. Click Apply.

EMERGENCY E-MAIL NOTIFICATION SETUP

The DX8100 can be configured to send e-mail notifications alerting users of motion, alarm, and video loss events. Users with Power User access and higher can configure the notification function. Notifications can be sent to a single e-mail address or a group of addresses, either immediately after an event occurs or periodically according to a predefined schedule. You can configure up to 32 e-mail groups, and up to 32 members can be assigned to each e-mail group.

Before sending notifications, you must provide information about your e-mail server and establish the events (motion, alarm, and video loss) that you want to include in the e-mail message. Timing and frequency of the e-mail notifications must also be set. You should test the e-mail notification function immediately after configuration to ensure your system is set up correctly.

NOTES:


- To use emergency e-mail notification, the DX8100 Series HVR must be connected to a LAN that maintains an SMTP mail server. The network must also be connected to either an intranet or the Internet depending on the location of the e-mail accounts to which you want to send notifications. Consult your network administrator for information about configuring e-mail notification on your local network.
- The DX8100 does not support the Secure Sockets Layer (SSL) protocol required by Simple Mail Transfer Protocol (SMTP) servers.
- The DX8100 does not support Google™ Gmail.

This section describes how to set up emergency e-mail notification and includes the following topics:

- [Accessing the Emergency E-mail Notification Setup](#) on page 238
- [Configuring Emergency E-mail Notification](#) on page 238
- [Setting Up the Time Period](#) on page 241
- [Sending E-mail Notifications](#) on page 248

ACCESSING THE EMERGENCY E-MAIL NOTIFICATION SETUP

To access the emergency e-mail notification setup:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.



CONFIGURING EMERGENCY E-MAIL NOTIFICATION

This section describes how to set up emergency e-mail notification and includes the following topics:

- [Enabling or Disabling E-mail Notification](#)
- [Setting Up the E-mail Server](#)
- [Testing E-mail Notification](#) on page 240

Enabling or Disabling E-mail Notification



To enable or disable emergency e-mail notification:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. In the Emergency E-mail Notification page, do one of the following:
 - Click the Enable Notification button to enable e-mail notification.
 - Click the Disable Notification button to disable e-mail notification.

Setting Up the E-mail Server

Set up the e-mail server in the Emergency E-Mail Notification page. For information about accessing the Emergency E-Mail Notification page, refer [Accessing the Emergency E-mail Notification Setup](#) on page 238.

To set up the e-mail server:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. Enter a name in the Full Name box. You should enter a name that reflects the DX8100 server sending the notification (for example, DX8100 First Floor Lobby). Names can be up to 31 characters long and can include spaces, but not special characters.
5. Enter your e-mail address in the E-mail Address box.
6. Enter the address of your local SMTP mail server. Obtain this information from your network administrator.
7. If your e-mail server requires you to log in, do the following:
 - a. Select the check box labeled My E-mail Server Requires Authentication.
 - b. Enter your e-mail server address.
 - c. Enter your user name. (User names can be up to 31 characters in length and cannot include spaces or special characters.)
 - d. Enter your password. (Passwords can be up to 19 characters in length and cannot include spaces or special characters.)
8. Click Apply.

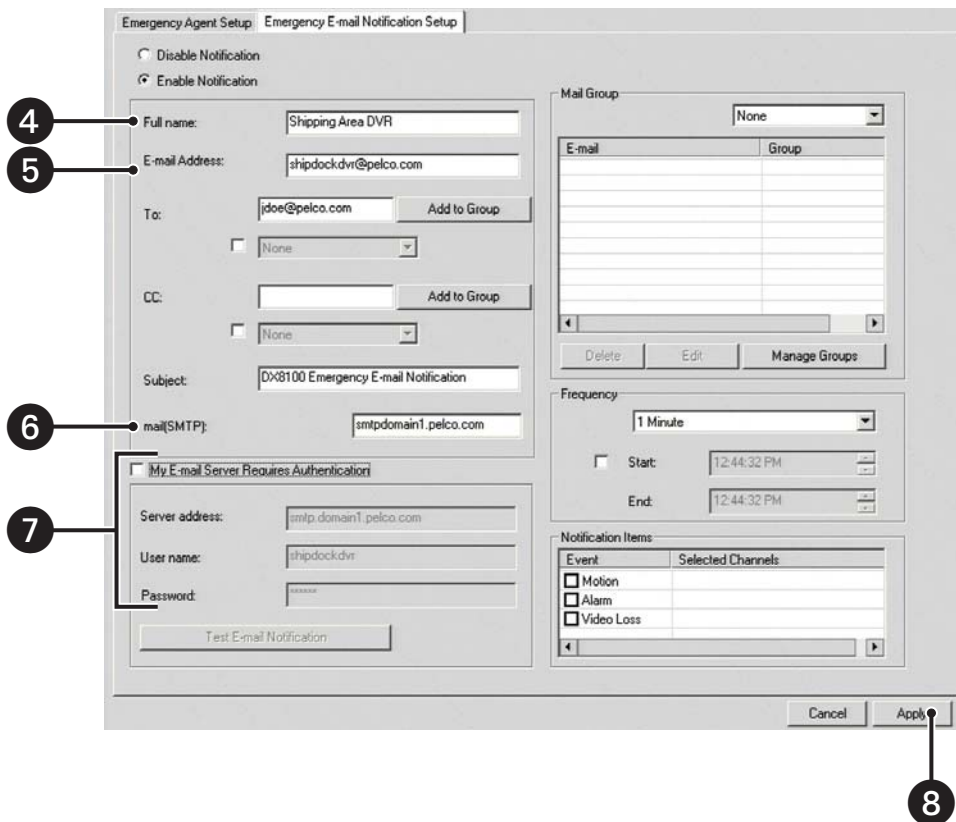





Figure 179. Basic E-mail Notification Setup

Testing E-mail Notification

You test the e-mail notification configuration in the Emergency E-mail Notification page. For information about accessing the Emergency E-mail Notification page, refer [Accessing the Emergency E-mail Notification Setup](#) on page 238.

To test e-mail notification:

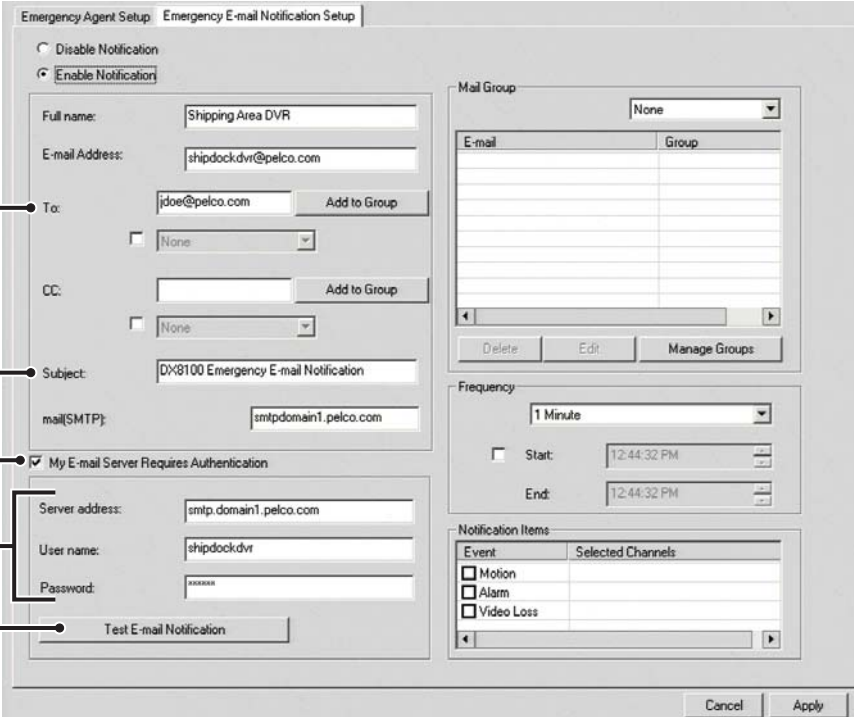1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. Select the My E-mail Server Requires Authentication check box (if it is not already selected).
5. Enter your personal e-mail address or the address of someone who can verify the receipt of the test e-mail in the To box.
6. Type **DX8100 E-mail Notification Test** in the Subject box.
7. Enter the following server settings if necessary:
 - Server address (This address should be the same as the SMTP server address you entered above.)
 - User name
 - Password
8. Click Test E-mail Notification.



The screenshot shows the 'Emergency E-mail Notification Setup' dialog box. It has two tabs: 'Emergency Agent Setup' and 'Emergency E-mail Notification Setup'. The 'Enable Notification' radio button is selected. The 'Full name' field contains 'Shipping Area DVR' and the 'E-mail Address' field contains 'shipdockdvr@pelco.com'. The 'To:' field contains 'jdoe@pelco.com' with an 'Add to Group' button. The 'Subject:' field contains 'DX8100 Emergency E-mail Notification'. The 'mail(SMTP):' field contains 'smtpdomain1.pelco.com'. The 'My E-mail Server Requires Authentication' checkbox is checked. Below this, the 'Server address:' field contains 'smtp.domain1.pelco.com', the 'User name:' field contains 'shipdockdvr', and the 'Password:' field contains '*****'. A 'Test E-mail Notification' button is at the bottom left. On the right side, there is a 'Mail Group' section with a dropdown set to 'None' and a table with columns 'E-mail' and 'Group'. Below that is a 'Frequency' section with a dropdown set to '1 Minute' and 'Start' and 'End' times set to '12:44:32 PM'. At the bottom right, there is a 'Notification Items' section with a table with columns 'Event' and 'Selected Channels', containing checkboxes for 'Motion', 'Alarm', and 'Video Loss'. Callouts 4 through 8 point to the authentication checkbox, the 'To:' field, the 'Subject:' field, the server settings fields, and the 'Test E-mail Notification' button, respectively.

Figure 180. E-Mail Test

SETTING UP THE TIME PERIOD



The DX8100 can be configured to send e-mail notifications on a periodic basis, such as once every ten minutes. This sections describes how to set up the time period and includes the following topics:

- [Configuring E-Mail Notification Frequency](#)
- [Setting the Time of Day](#)
- [Sending E-mail Notifications in Response to Motion Events](#) on page 242
- [Sending E-mail Notifications in Response to Alarm Events](#) on page 242
- [Sending E-mail Notifications in Response to Video Loss Events](#) on page 243

Configuring E-Mail Notification Frequency



Depending on the volume of motion, alarm, or video loss events detected by the DX8100, the number of e-mail notifications can be far too many to manage effectively. To keep the number of e-mails sent by the DX8100 at a manageable level, the e-mail notification frequency can be adjusted. When events have been detected, e-mail notifications can be sent out in intervals from once per minute up to once every six hours. If no events have been detected during the specified frequency interval, no notification will be sent. Each e-mail notification will include information about the first event detected during the interval, the last event detected during the interval, and a still image (in JPEG format) of the last event.

To configure notification frequency:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. In the Frequency section, select the frequency interval from the drop-down box. Options for sending an e-mail notification include once every
 - 1 minute
 - 10 minutes
 - 30 minutes
 - 1 hour
 - 3 hours
 - 6 hours

Setting the Time of Day



To set the time of day during which e-mail notifications will be sent:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. In the Frequency section, do the following:
 - a. Click the Start check box to use the spinner buttons, or type the earliest time of day you want e-mail notifications to be sent (for example, 7:30 a.m.).
 - b. Click the End check box to use the spinner buttons, or type the latest time of day you want e-mail notifications to be sent (for example, 6:00 p.m.).
5. Click Apply.

Sending E-mail Notifications in Response to Motion Events

E-mail notifications can be sent whenever a camera attached to a DX8100 detects motion.



To cause e-mail notifications to be sent in response to motion events:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. In the Notification Items section, do the following:
 - a. Click the Motion check box.
 - b. In the Selected Channels field, click once to the right of the word Motion. The Selected Channels dialog box opens.
 - c. Do one of the following:
 - Click the check box for each channel you want to monitor for motion detection events.
 - Click Select All to monitor all channels for motion detection.
 - Click Deselect All to deselect all channels.
5. Click OK.
6. Click Apply.

Sending E-mail Notifications in Response to Alarm Events

E-mail notifications can be sent whenever an alarm input is activated.



To initiate e-mail notifications to be sent in response activated alarm inputs:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. In the Notification Items section, do the following:
 - a. Click the Alarm check box.
 - b. In the Selected Channels field, click once to the right of the word Alarm. The Selected Channels dialog box opens.
 - c. Do one of the following:
 - Click the check box for each channel you want to monitor for alarm detection events.
 - Click Select All to monitor all channels for alarm detection.
 - Click Deselect All to deselect all channels.
5. Click OK.
6. Click Apply.

Sending E-mail Notifications in Response to Video Loss Events

E-mail notifications can be sent whenever a camera attached to a DX8100 experiences a video loss event.

To cause e-mail notifications to be sent in response to video loss events:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. In the Notification Items section, do the following:
 - a. Click the Video Loss check box.
 - b. In the Selected Channels field, click once to the right of the words Video Loss. The Selected Channels dialog box opens.
 - c. Do one of the following:
 - Click the check box for each channel you want to monitor for video loss detection events.
 - Click Select All to monitor all channels for video loss detection.
 - Click Deselect All to deselect all channels.
5. Click OK.
6. Click Apply.

SETTING UP E-MAIL NOTIFICATION GROUPS

The DX8100 allows you to set up groups to send an emergency notification to multiple users. The DX8100 supports the following:



- You can create up to 32 e-mail notification groups.
- Up to 32 members can be assigned to each e-mail group.
- A group can be notified in response to an alarm or motion detection event.

This section describes how to set up e-mail notification groups and includes the following topics:

- [Adding an E-mail Notification Group](#)
- [Modifying an E-mail Group Name](#)
- [Deleting an E-mail Group](#) on page 244
- [Adding Members to an E-mail Group](#) on page 245
- [Deleting Members from an E-mail Group](#) on page 246
- [Modifying E-mail Group Member Attributes](#) on page 247



Adding an E-mail Notification Group

To add an e-mail notification group:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. In the Mail Group area, do the following:
 - a. Click Manage Groups. The Group Management dialog box opens.
 - b. Click Add Group. The Manage Groups dialog box opens.
 - c. Enter the name of the group. (Group names can be up to 32 characters in length and can include spaces, but not special characters.)
5. Click OK.
6. Click Close.
7. Click Apply.



Modifying an E-mail Group Name

To modify a group name:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. In the Mail Group area, do the following:
 - a. Click Manage Groups. The Group Management dialog box opens.
 - b. In the Group Name table, select a group.
 - c. Click Edit Group. The Manage Groups dialog box opens.
 - d. Edit the existing name or enter a new name for the group.
5. Click OK.
6. Click Close.
7. Click Apply.

Deleting an E-mail Group



To delete a group:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. In the Mail Group area, do the following:
 - a. Click Manage Groups. The Group Management dialog box opens.
 - b. In the Group Name table, select a group.
 - c. Click Delete.
5. Click Close.
6. Click Apply.

Adding Members to an E-mail Group

Up to 32 members can be assigned to each e-mail group.

To add e-mail addresses to a group:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. Do the following:
 - a. In the Mail Group section, select a group name from the drop-down box.
 - b. Ensure that the group check boxes under To and CC are deselected.
 - c. Enter an e-mail address in the To or CC boxes.
 - d. Click Add to Group.
5. Click Apply.

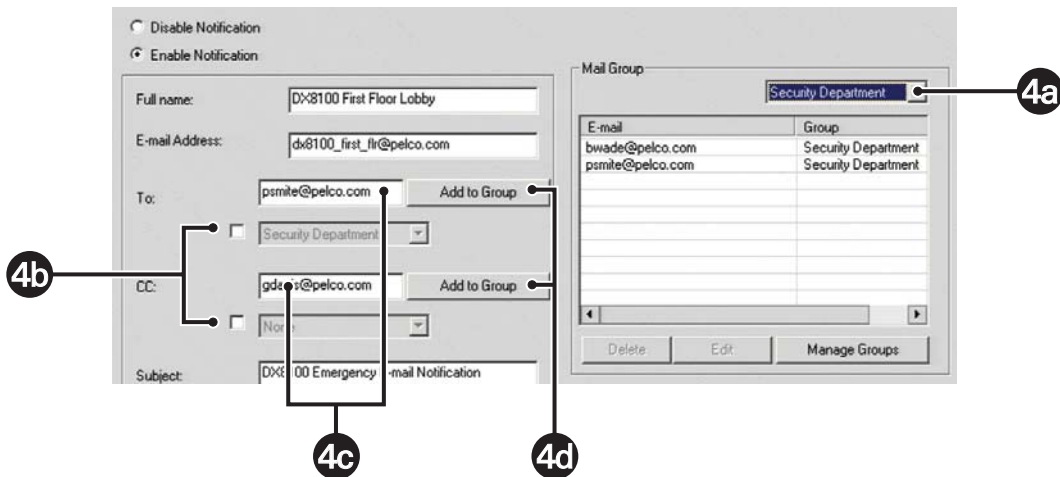




Figure 181. Add User to E-mail Group

Deleting Members from an E-mail Group

To delete a user from a group:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. Do the following:
 - a. In the Mail Group section, select a group name from the drop-down box.
 - b. Select the user you want to delete from the list.
 - c. Click Delete.
5. Click Apply.

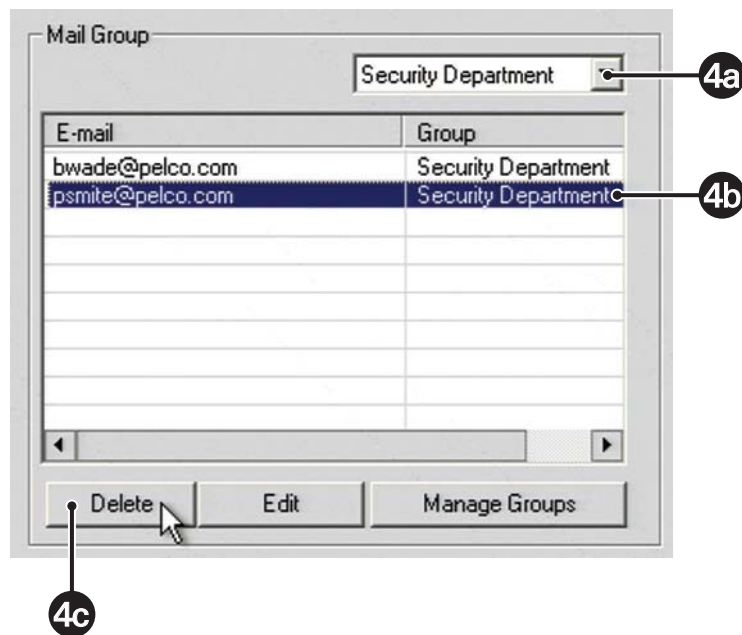




Figure 182. Remove User from E-mail Group

Modifying E-mail Group Member Attributes

To modify a user's e-mail address or group affiliation:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. Do the following:
 - a. In the Mail Group section, select a group name from the drop-down box.
 - b. Click the e-mail address of the user you want to edit.
 - c. Click Edit. The E-mail Settings dialog box opens.
 - d. In the Group drop-down box, select a different group for the user.
 - e. If necessary, enter a new e-mail address for the user in the E-mail Address box.
5. Click OK.
6. Click Apply.

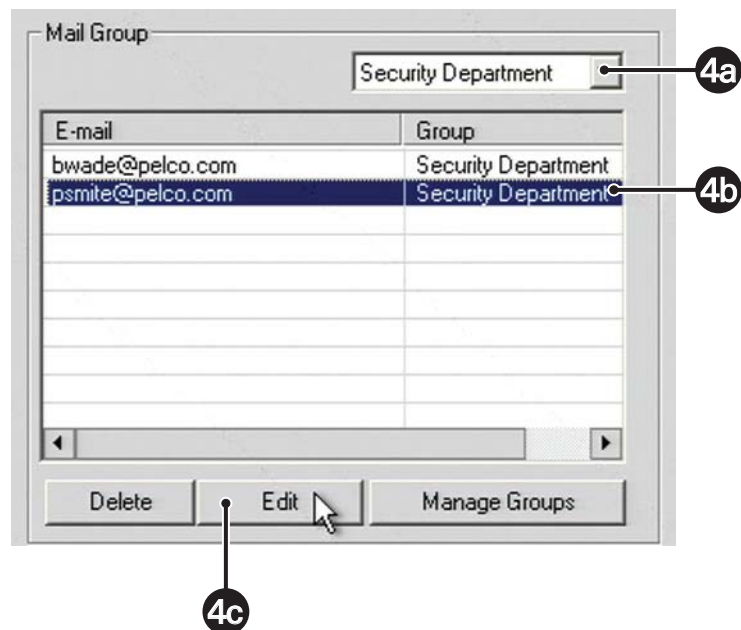


Figure 183. Modify Member Attributes



SENDING E-MAIL NOTIFICATIONS

This section describes how to send e-mail notifications and includes the following topics:

- [Sending E-mail Notifications to Individuals](#) on page 248
- [Sending E-mail Notifications to Groups](#) on page 249

Sending E-mail Notifications to Individuals

To configure e-mail notifications to send alerts to an individual:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. Do the following:
 - a. In the To box, enter the e-mail address of the individual to whom you would like to send e-mail notifications.
 - b. (Optional) In the CC box, enter a second e-mail address of a person to whom you would like to send a copy of the notification.
 - c. In the Subject box, enter text in the subject line as you would like it to appear in e-mail notifications. (The default subject line is DX8100 Emergency E-mail Notification.)
5. Click Apply.

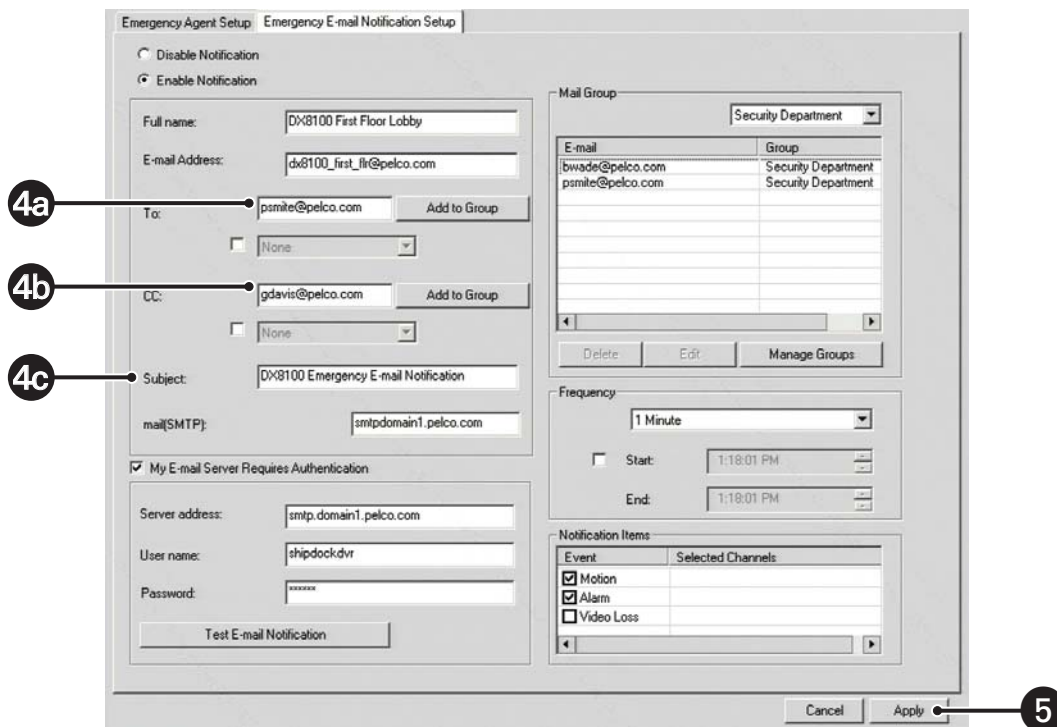




Figure 184. Sending E-mails to Individuals

Sending E-mail Notifications to Groups

To configure e-mail notification to send e-mail alerts to a group of individuals:

1. On the DX8100 toolbar, click the Setup button . The Setup dialog box opens to the Camera page.
2. Click the Notification button . The Notification page is displayed.
3. Click the Emergency E-mail Notification Setup tab.
4. Do the following:
 - a. Click the To check box.
 - b. In the drop-down box, select the group to which you want to send event notifications.
 - c. (Optional) If you want to e-mail a copy of the event notification to another group of users, click the CC: check box.
 - d. In the drop-down box, select the group you want to copy.
5. Click Apply.

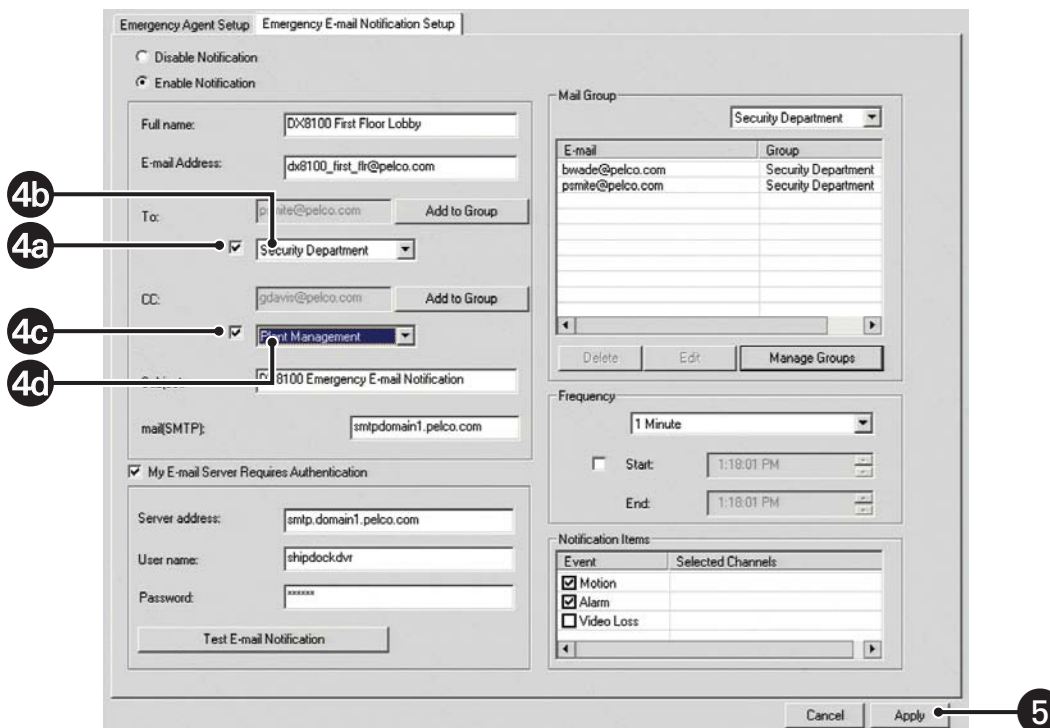


Figure 185. Sending E-mails to Groups

Administering and Maintaining the DX8100

This section describes how to perform DX8100 system administration and periodic maintenance, including the following topics:

- [Updating the DX8100 Server and Client Applications](#)
- [Recovering a Password](#) on page 252

UPDATING THE DX8100 SERVER AND CLIENT APPLICATIONS

Software updates are available for both the DX8100 Series HVR server and client applications. These updates are free and are available on the product resource disc or online at pelco.com/software/downloads/dvr. Contact Pelco Product Support for more information.

When an update is issued, it must be loaded onto a single DX8100 HVR server. Once installed on a server, updates are automatically distributed to clients on the same network when the client applications are started. Remote DX8100 servers can be updated from a local HVR using the DX8100 Software Upgrade utility.

To start the update process:

1. From the DX8100 menu bar, choose File > Software Upgrade.



Figure 186. Software Upgrade Server Console

2. The Select Upgrade Package dialog box opens.
3. Click Browse. The Open dialog box opens.
4. Select the update file.
5. Click Open. The Select Upgrade Package dialog box becomes active.
6. Click Next.

The Select Server dialog box opens and displays a list of all connected DX8100s, including the local HVR. Updates to the local server and all connected remote servers can be initiated from this dialog box.

7. To update a local or remote HVR server:
 - **Local server:** Select the site name of your system from the Select Server list.
 - **Remote server:** Select the remote server from the Select Server list, and then click Connect.
8. Click Next and wait for the DX8100 Upgrade utility to copy the necessary files to the selected HVR.
9. At the completion of the update process, a dialog box will appear prompting you to update another server (if desired).
 - Click Yes to select another server to update.
 - Click No to finish the update process and reboot.

The local or remote server will reboot 30 seconds after the upgrade process has been completed.

UPDATING DX8100 CONFIGURATION FILE

The DX8100 HVR allows you to update the configuration file for multiple DX8100 servers and server groups simultaneously. The Multiple Configuration Upload command on the File menu opens a dialog box, which displays all of the DX8100 devices and groups listed in the Site Tree.

To upload the resident DX8100 server configuration file to selected DX8100 devices:

1. In the System page, export the current HVR settings. For more information about exporting configuration settings, refer to [Exporting the Current HVR Settings](#) on page 219.
2. From the DX8100 menu bar, choose File > Multiple Configuration Upload. The Multiple Configuration Upload dialog box opens. The DX8100 devices and groups listed in the Site Tree are listed in the Multiple Configuration dialog box Site List.
3. In the Site List in the Multiple Configuration Upload dialog box, click the check box for each DX8100 server and server group you want to update.
4. In the Multiple Configuration Upload dialog box, do the following:
 - a. Click Browse. The DX8100 Setup File Import dialog box opens.
 - b. Select the configuration file you want to use to update the DX8100 servers.
 - c. Click Open. The path to the configuration file is displayed in the Configuration File Path box.
 - d. Click Upload. The configuration file is uploaded to the selected device. If there is an issue, a message dialog box opens.
5. Click Close to exit the Multiple Configuration Upload dialog box.

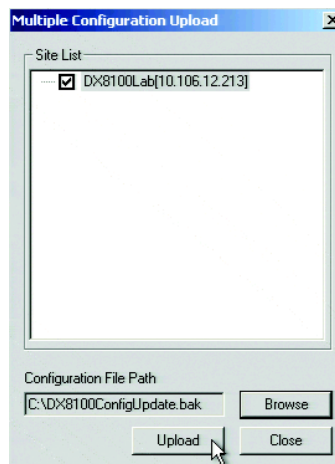


Figure 187. Software Upgrade Server Console

RECOVERING A PASSWORD

Upon request, Pelco can issue a password recovery code that is valid for 24 hours, on the machine for which it was issued only. To do so, the original buyer of the system (typically the dealer) must contact Pelco Technical Support. The serial number and order number (or invoice number) under which the unit was originally purchased, as well as the MAC address and exact date/time listed on the password recovery screen must be provided. This must be done in writing, by fax, and the request must be accompanied by a letter from the current owner of the system stating the following information under penalty of perjury:

- He/she is the legal owner of the system.
- The password for the system was lost.
- He/she is requesting a password reset.

Pelco will then issue a reset code that can be used for 24 hours, with the provided MAC address only.

(If possible) Use company letterhead to submit all information (the exact time, the mac address, and so forth) detailed on the "password recovery," including the bulleted information above.

Fax to 1-888-294-3885, attention: DX8100 Password Recovery.

To recover a lost or forgotten Admin password:

1. From the DX8100 menu, choose File > Password Recovery. The Password Recovery dialog box appears.

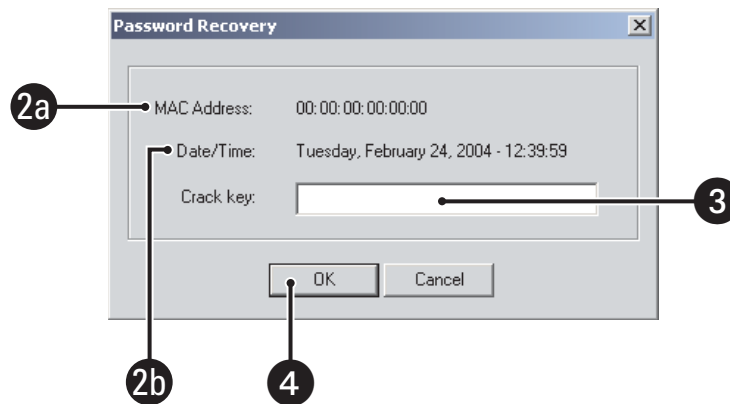


Figure 188. Password Recovery Dialog Box

2. Contact Pelco Product Support with the following information:
 - a. MAC address as it appears in the Password Recovery dialog box.
 - b. Current date for your location as it appears in the Password Recovery dialog box.
 - c. Any additional information requested by Pelco Product Support.
3. Enter the new password you obtained from Pelco Product Support in the field provided.
4. Click OK.

PERFORMING PERIODIC MAINTENANCE

The DX8100 filter should be cleaned periodically, to ensure proper ventilation and cooling of the DX8100. The filter is easily accessible through DX8100 front panel.

To remove and cleanse the filter:

1. From the DX8100 menu bar, choose File > Exit. The Shut Down dialog box opens.
2. Select Shut down.
3. Click OK.
4. Open the DX8100 front panel.
5. Reach behind the front panel and pull out the filter assembly (5).

6. Remove the filter (6).

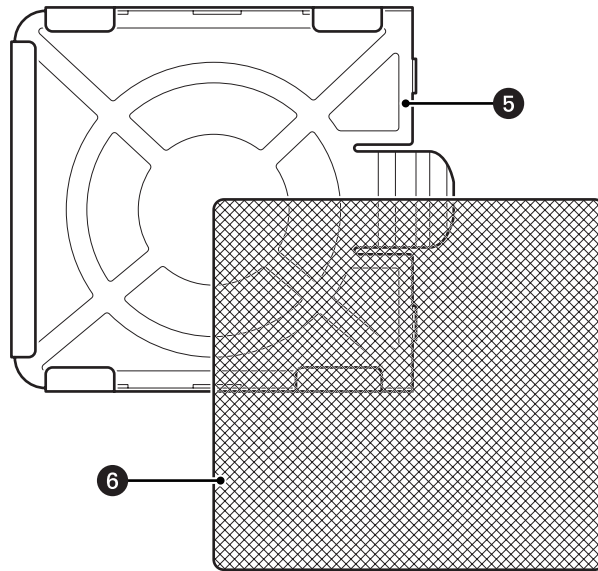


Figure 189. Removing the Filter

7. Do the following:
 - a. Using a can of compressed air, blow air from the back side of the filter through the front.
 - b. Verify that the filter is clean.
 - c. Use a cloth to remove dust from the filter bracket.
 - d. Insert the filter into the filter bracket.
 - e. Re-install the filter assembly.
8. Close the front panel door.
9. Start the DX8100 and resume operation.

Index

A

- access levels
 - Administrator 18
 - logging into DX8100 18
 - logging out of DX8100 18
 - user 18
- accounts
 - access levels 18
 - access levels, definition of 210
 - Administrator 18
 - built-in user accounts 209
 - Guest 18
- activating remote sites 217
- active remote cameras, locating 217
- address
 - DHCP 169
 - static IP 169
- administrator
 - accessing the setup mode 114
 - setup options 114
- alarm event
 - emergency notification 145
 - recording mode, setting up 145
- alarm inputs
 - linking a single alarm input to multiple cameras 39
 - linking multiple alarms to one camera 39
 - removing a linked alarm input from a camera 40
 - setting up
 - alarm input, selecting 133
 - alarm output type, selecting 133
 - basic operating properties 133
 - creating custom name for 133
 - supported 132
- area, viewing
 - pane 24, 30
 - panel 24, 30
- ATM/POS communications
 - connection
 - running diagnostics 196
 - connection, verifying 196
 - viewing ATM/POS data 197
- ATM/POS device
 - data format
 - assigning to an ATM/POS device 190
 - creating 189
 - deleting 190
 - editing 189
 - overview 186
 - Data Format page, overview 187
 - device filter, custom 189
 - dynamic-link library (DLL) files 200
 - multi mode 180
 - protocols
 - installing 200
 - updating 200
 - single mode 180

- ATM/POS event
 - ATM/POS address, selecting 135
 - ATM/POS recording mode, setting up 145
 - linking relay to 135
 - recording 197
- ATM/POS exceptions
 - assigning to an ATM/POS device 196
 - creating 193
 - deleting 195
 - editing 195
 - exception action codes, defined 192
 - modifiers 195
 - overview 84, 89, 191
- audio 119
- audio indicator 46
- audio, listening to 121
- auxiliary feature
 - external equipment 61
 - how used 61
 - protocols, supported 61

B

- backed up data
 - backup schedule
 - creating 202
 - deleting 205
 - editing 204
 - instant, starting 205
 - overview 202
 - media device, selecting 207
 - overview 201
 - viewing 109, 201, 207
- backed up video
 - working with 96, 109, 207
- bandwidth throttle options 170
- base port 170
- baud rate 180, 181

C

- calendar
 - See schedule
- camera
 - alarm input, linking to camera 39
 - assigning all cameras to view panes 39
 - assigning to a view pane 39, 42
 - D, P, or Coaxitron protocol support 53
 - event detection/repositioning--PTZ preset/patterns linked to
 - alarm events 140
 - ATM/POS events 141
 - motion events 139
 - video loss events 142
 - expanded audio 119
 - external event recording
 - alarm event, linking multiple cameras to record 137

- ATM/POS event, linking multiple cameras to record 137
- motion event, linking multiple cameras to record 136
- video loss event, linking multiple cameras to record 138
- IP camera, setting up 122, 123
- lens, adjusting 51
- mapping 229
- motion detection zones 118
- PC keyboard, using shortcuts to operate PTZ and lens functions 52
- PTZ protocols 116
 - Coaxitron, DX8100PELCO-C
 - D protocol, DX8100PELCO-D
 - disable protocol, DX8100NO PTZ
 - P protocol, DX8100PELCO-P
- recording modes 144
- relay, linking to camera 40
- remote setup using preset 95 53
- remote, accessing programming features 58
- removing from a view pane 42
- scheduled recording mode, setting up 145
- security levels 116
 - high
 - low
 - medium
 - none
- settings
 - custom settings, examples of 155
 - customizing 144, 154
 - support for recording modes 156
 - supported for recording modes 155
- settings, customizing 154
- setup
 - applying settings to all cameras 122
 - communications protocol 116
 - enabling/disabling camera 116, 127, 161
 - expanded audio option 121
 - motion detection zones 118
 - name, customizing 116, 127
 - pan, tilt, and zoom 116
 - picture 116
 - picture properties 117
 - PTZ locking auto-timeout 117
 - PTZ protocol 116, 127
 - security level 116
 - security level, selecting 116, 127
 - video loss detection 122
- single, assigning to view pane 39
- standard audio 119
- zoom, adjusting 51
- camera designator 46
- camera event detection and repositioning
 - overview 139
- camera mapping 229
- camera, removing a linked alarm input 40
- capture card
 - analog output, setting up 228
 - optional 228
- capture card, displaying video 42
- channel mapping 34
- channel resolution 144
- client, remote 13

- Coaxitron protocol 53
- COM1 communications properties 179
- commands
 - auxiliary, sending 61
- compression, video 156
- connecting DX8100 HVRs 114

D

- D protocol 53
- data bits 180, 181
- data communications
 - dome devices, setting up 180
- data packets 170
- data retention time 227
- data transmissions 170
- designators
 - camera 46
 - site 46
- digital zoom control 24
- disk space 24
- disk status indicator 24
- display mode
 - Live video 29
 - playback video 29
 - See pane/panel
- DNS or WINS services, setting up 172
- documentation
 - printed 17
- Dome communications ports
 - setting up 180
- dual display card 34
- dwelt time 26
- DX8100
 - command descriptions 25
 - exiting application 25
 - overview of application window 22
- DX8100 application
 - logging in to 18
- DX8100 application window
 - panels 30
 - panes 30
- DX8100, setting up 114
- dynamic IP address
 - remote site 214
- dynamic-link library (DLL) files
 - installing 200
- dynamic-link library (DLL) files, updating 200

E

- e-mail notification
 - overview 248
 - sending to groups 249
 - sending to individuals 248
 - video loss event, sending in response to 121

- e-mail server 238
- emergency agent notification 121
 - accessing Emergency Agent Setup page 235
 - camera, linking to client emergency agents 237
 - clients
 - adding 236
 - changing emergency agent properties 236
 - deleting from notification list 237
 - Emergency Agent Client utility, required 235
 - overview 235
 - port 170
 - server event transmission time, setting 237
- emergency e-mail notification
 - accessing Emergency E-mail Notification page 238
 - alarm 238
 - alarm events, sent in response to 242
 - e-mail groups 238
 - e-mail server, configuring 239
 - enabling/disabling 238
 - group
 - adding 243
 - adding members 245
 - deleting 244
 - deleting members from group 246
 - modifying 244
 - modifying member attributes 247
 - overview 243
 - local area network (LAN), 238
 - motion events, sent in response to 242
 - overview 238
 - setting up 238
 - testing configuration 240
 - time period
 - notification frequency, setting up 241
 - overview 241
 - setting the time of day 241
 - video loss events, sent in response to 243
- event, jump to 69
- events
 - alarm 132
 - ATM/POS 134
 - motion detection 118
 - recording modes 145
 - video loss detection 121
- exception 191
- Expansion Unit 28
- export setup 25
- Ext. monitor
 - camera mapping
 - automatic camera mapping, setting up 229
 - manual camera mapping, setting up 230
 - overview 229
 - Capture Card, configuring interrupt override 235
 - external monitor option 235
 - overview 228
 - sequence instance
 - appending to an existing sequence list 234
 - creating 230
 - deleting 233
 - loading an existing list 231

- modifying in the list 232
- extended monitor 34
- extended view mode 51
- external events 134
- external storage 13, 14, 20

F

- file size
 - video image 156
- frame rate
 - about calculating 163
 - advanced, configuring 158
 - overview 144, 156
 - range of 156
 - resolution value 159
- frame rate, setting 157
- full-screen view
 - video, displaying 29
- full-window view 29
 - index video, displaying 30
 - live video, displaying 29
 - playback video, displaying 30
 - selecting 29

G

- getting started
 - exiting the DX8100 19
 - first-time login 18
 - powering on the DX8100 16
 - shutting down the DX8100 16
 - starting the DX8100 16
 - user security levels 16

H

- hard disk 16
- hardware
 - capture card 230
 - DX8100-AUD audio card 119
 - external equipment 61
 - upgrading 16
- Help
 - enabling/disabling 228
 - online, viewing 228

I

- import setup 25
- index view panel 24
- indicators
 - audio 46
 - camera 46
 - instant recording 46
 - on-screen PTZ control 46
 - pan, tilt, and zoom 46
 - record 46

- site 46
- information port 170
- instant recording indicator 46
- instant recording mode 47
- interface mode 180, 181
- IP camera
 - analog camera, disabling 123, 130
 - assigning to a camera channel 123
 - camera channels, supported 123
 - configuring IP camera settings 126
 - deleting 131
 - disabling 130
 - DX8100 network, searching for IP camera 124
 - IP address, assigning 124
 - restoring a disabled camera 131
 - setting up 122
 - site, assigning to 127
 - user name and password, configuring 124

J

- JBOD external storage 13, 14, 20

K

- keypad 51

L

- language
 - selecting 15, 16
- linking
 - alarm input, removing from camera 40
 - alarm inputs, linking to cameras 39
 - link setup options 132
 - event-PTZ link settings
 - event-recording link settings
 - event-relay link settings
 - relay and alarm settings
 - relays, linking to cameras 40
 - removing 40
 - setting up 39
- linking and event recording setup 132
- live audio 26, 46, 119
- live audio, listening to 121
- Live View mode 58
- local area network (LAN) 238
- logical network ports 170
- logs
 - files 26
 - Backup
 - Export
 - Login ID list with time
 - Network Connections
 - System Failure
 - System On/Off
 - Video Loss

M

- mapping, camera 229
- maximum record rate 160, 161
- menu bar 24
- menus
 - Edit 25
 - File 25
 - file 24
 - Help 28
- menus, shortcut
 - local site 38
 - relay 38
 - remote site 38
- mode
 - extended view mode
 - standard view 51
 - instant record, starting 49
 - instant record, starting and stopping 48
 - instant record, stopping 49
 - instant recording 47
 - interface 180, 181
 - live recording 50
 - Live View mode, working in 58
 - live view, working in 42
 - normal recording 47
 - recording modes, scheduled 144
 - See* recording mode
- monitor, extended 34
- monitor, external 228
- motion
 - detection of 134, 145
 - See also* relays
 - detection zones 118
 - emergency e-mail notification 238
 - emergency notification 235
 - motion event recording mode, setting up 145
 - sensitivity, setting 118
- multicast, enabling 170
- multi-event recording 145
- multiple event recording 145
- multiplexed analog output 228
- MUX card
 - displaying real-time video 42

N

- National Television System Committee (NTSC) 156
- network camera 122, 123
- network drive
 - disconnecting from 206
- network ports, logical 170
- network requirements
 - connecting DX8100 HVRs 19
 - DX8100 network properties 15
- normal recording mode 47
- notification
 - e-mail 121

emergency agent 121
Notification page 235

O

online Help 228
on-screen display
 add instant record icon to OSD 48
 customizing 47
 overview 26, 46
 selections 47
 Audio Recording
 Background Color
 Camera Name
 Instant Recording
 POS
 PTZ
 Select All
 Site Name
 Video Recording
operating modes
 function 29
 Display
 Search
 Setup
 instant record, starting and stopping 48
 instant recording 47
 live recording 50
operation and configuration
 user access level 18
overriding other users 114

P

P protocol 53
pan, tilt, and zoom (PTZ) control panel 24
pan, tilt, and zoom control
 enabling 46
 focus command, using 53
 operating 50
 preset, programming 53
 programming guidelines 53
 protocols, camera support 50
pan, tilt, and zoom indicator 46
pane/panel
 background color 26
 channel/camera assignment to 32
 configuring 31
 division display format 32
 division, selection of 31
 hidden panels, automatically cycling through 33
 hidden panels, manually cycling through 33
 live/playback video, display of 24
 navigating between 31, 32
 overview 30
 pane, expanding and collapsing 33
 site name displayed in 26
 video, viewing 115
parity 180, 181

password
 recovery 25
pattern
 activating 53, 55, 57
 clearing 53, 57
 overview 55
 programming 53, 56
 programming, starting 56
 programming, stopping 56
 protocols, PTZ-enabled cameras 55
PC client application
 server connections, number of 217
Phase Alternating Line (PAL) 156
ping port 170
playback control panel 24
playback timeline 24
port and device communications properties
 ATM/POS device
 data format 186
 mode, selecting 181
 COM1 port 178
 COM1, setting up 179
 overview 177
 RS-232 178
 RS-422/RS-485 178
port numbers, changing 170
pre-alarm recording rate 145
preset
 activating 53, 54
 clearing 53, 55
 guidelines 53
 Preset 95 53
 Preset 99 53
 programming 53
preset tour
 accessing a preset tour group 62
 adding presets to a tour 62, 63
 configuring 62
 delete presets from a tour 62
 deleting presets from a tour 64
 programming 62
printing 15
protocols
 D, P, Coaxitron 53
 device, installing/updating 200
PTZ OSD menu control 58
PTZ presets and patterns
 alarm events, linking to 140
 ATM/POS events, linking to 141
 motion events, linking to 139
 video loss events, linking to 142
PTZ protocols
 testing PTZ functionality 117

R

reboot, automatic
 automatic reboot 227

- record indicator 46
- record rate, maximum 160, 161
- recording mode
 - alarm, camera settings supported
 - alarm image quality 156
 - frame rate during alarm 156
 - image resolution 156
 - post-motion 156
 - pre-alarm 156
 - pre-alarm frame rate 156
 - pre-alarm image quality 156
 - ATM/POS, camera settings supported
 - ATM/POS image quality 156
 - frame rate during ATM/POS 156
 - image resolution 156
 - post-ATM/POS 156
 - pre-ATM/POS 156
 - pre-ATM/POS frame rate 156
 - pre-ATM/POS image quality 156
 - instant 47
 - instant, disabling 48
 - instant, enabling 48
 - motion, camera settings supported
 - frame rate during motion 156
 - image resolution 156
 - motion image quality 156
 - post-motion 156
 - pre-motion 156
 - pre-motion frame rate 156
 - pre-motion image quality 156
 - normal 47
 - normal, camera settings supported
 - frame rate 156
 - image quality 156
 - image resolution 156
 - recording schedule profile 144
 - scheduled modes 144, 145
 - alarm
 - ATM/POS
 - motion
 - normal
- recording modes 145
- recording schedule 143
- relays
 - Event-Relay Link Settings page, accessing 134
 - linked relay output
 - removing from a camera 40
 - removing from an alarm input 41
 - manually turning On and Off 38
 - multiple relays, linking to one camera 40
 - relay output
 - alarm event, linking to 40, 135
 - ATM/POS event, linking to 135
 - motion event, linking to 134
 - number supported 132
 - video loss event, linking to 136
 - setting up
 - advanced relay output 163
 - basic operating properties 133
 - creating custom name for 133
 - relay output type, selecting 133
 - relay, selecting 133
 - single relay, linking to multiple cameras 40
- remote camera
 - menu system, navigating using
 - Keypad controls 58, 59
 - PC keyboard keys 58, 59
 - PTZ OSD menu control 58
 - PTZ OSD menu controls 58, 59
 - programming features, accessing 58
 - protocol support 58
- remote site
 - accessing features of 19
 - activating 217
 - active remote cameras, finding 217
 - connecting to 19
 - deleting 218
 - DHCP IP addressed, adding 216
 - disconnecting from 19
 - editing 218
 - logging into 19
 - logging out of 20
 - modifying 218
 - overview 214
 - static IP addressed, adding 214
- remote sites
 - overview 214
- resolution
 - resolution value, setting for recording 159
 - screen 26
- Resource Meter 129
- RS-232 178
- RS-422/RS-485 178, 180

S

- schedule
 - accessing 143
 - all record modes, clearing schedule 147
 - clearing a recording schedule 146
 - copying attributes 148, 152
 - custom settings 144
 - deleting a schedule 153
 - editing a profile 152
 - individual days, scheduling 148
 - multi-day schedule, creating 149
 - record mode 143
 - setting up 145
 - single day, creating 150
 - types of 144
 - yearly recording schedule, creating 147
- screen resolution 26
- search
 - mode 29
 - sharing of time range search 78
- sensitivity, motion 118
- server sites
 - connecting to DX8100 server sites 214
- server, e-mail 238
- Setup dialog box 114

- setup mode
 - accessing 114
 - alarm properties, setting up 133
 - See also* alarm inputs
 - camera setup 116, 154
 - See also* camera
 - commands, listing of 115
 - Backup
 - Camera
 - Ext. Monitor
 - Linking
 - Network
 - Notification
 - Schedule
 - Site
 - System
 - User
 - data backup 201
 - Ext. monitor setup 228
 - how to open Setup dialog box 29
 - motion sensitivity, setting 118
 - multiple cameras
 - alarm events, linking cameras to record 137
 - ATM/POS events, linking cameras to record 137
 - motion events, linking cameras to record 136
 - video loss events, linking cameras to record 138
 - network properties
 - accessing DX8100 network configuration details 171
 - base port, setting up 170
 - DHCP, setting up 169
 - DNS or WINS services, setting up 172
 - overview 168
 - port and device communications properties 177
 - site name, assigning 168
 - TCP/IP and bandwidth throttle, setting up 170
 - network setup
 - static IP address, entering 170
 - overview 114
 - PTZ presets and patterns
 - alarm events, linking to 140
 - ATM/POS events, linking to 141
 - linking to external events 139
 - motion events, linking to 139
 - PTZ test 117
 - video loss events, linking to 142
 - relay output
 - advanced alarm-activated, configuring 165
 - advanced ATM/POS-activated, configuring 166
 - advanced motion-activated, configuring 163
 - advanced video loss-activated, configuring 167
 - alarm event (external), linking to 135
 - ATM/POS event (external), linking to 135
 - motion event (external), linking to 134
 - See also* relays
 - video loss event (external), linking to 136
 - relay properties, setting up 133
 - See also* relays
 - schedule setup
 - frame rate, basic, configuring 157
 - frame rate, configuring 156
 - record mode 143, 145
 - system setup 218
 - user access 208
- setup pages
 - Backup page 201
 - Camera page 115
 - Ext. Monitor page 228
 - Linking page 132
 - Network page
 - default, Network page 168
 - DNS/WINS page 172
 - Schedule page 143
 - Site page 214
 - System page 218
 - User page 208
- shortcut keys
 - PC keyboard 52
 - Home and End
 - Insert and Delete
 - Left and Right Arrow
 - Page Up and Page Down
 - Plus (+) and Minus (-)
 - Up and Down arrow
 - using to operate PTZ and lens functions 51, 52
- shortcut menus
 - local site shortcut menu 38
 - relay shortcut menu 38
 - remote site shortcut menu 38
- site designator 46
- site name 168
- site tree
 - all cameras, assigning from 39
 - how organized 24
 - local, expanding and collapsing 38
 - overview 37
 - remote, expanding and collapsing 38
 - single camera, assigning from 39
- software
 - DX8100 HVR server, using 15
 - upgrading 15
- software upgrade port 170
- standard audio
 - inputs 119
- standard view mode 51
- static IP address
 - adding remote site with static IP address 214
 - assigning 169, 170
 - remote site 214
- status bar 24
- stop bits 180, 181
- synchronization, loss of 121
- system administration 250
- system administrator
 - obtaining user account 18
- system configuration
 - language 16
 - language, setting 15
 - printer, adding 15
 - time, setting 15
- system ID 168

- system setup
 - accessing the System page 219
 - Ctrl+Alt+Del key
 - enabling 226
 - using 226
 - Edit menu
 - exporting from 220
 - importing from 221
 - export feature 219
 - HVR settings
 - exporting 219
 - importing 220
 - import feature 220
 - language 224
 - selecting 224
 - supported languages 224
 - log files
 - exporting 224
 - overview 222
 - viewing a log file 222
 - overview 218
 - system time
 - standard and daylight saving time 225
 - video format
 - selecting 226
- system time 15

T

- TCP/IP ports (default), 170
- third-party
 - domes 50, 180
 - protocols, supported 53, 55, 58, 116
- title bar 24
- toolbar 24, 28
- tour, preset 53, 62
- transaction
 - format 188
 - parameters 188
- transaction filter, predefined 84, 89, 191

U

- upgrade policy
 - hardware 15
 - software 15
- user security level 208
 - accessing user setup page 208
 - Administrator 16, 114, 210
 - dwelling time, changing 33
 - DX8100, accessing 114
 - Guest user account 18
 - pan, tilt, and zoom control, operating 50
 - Power User 16, 47, 114, 210
 - Restricted User 26, 33, 209, 210
 - Standard User account 24, 26, 210
 - user access levels 210
 - user accounts
 - adding new users 211
 - existing users, deleting 213

- log-in timeout, setting 213
 - modifying 212
 - password, changing 213
 - user's group affiliation, changing 213
- user accounts, default 209
- user name and password 18

V

- video
 - full-window view, displaying 29
 - images, printing 15
 - live, viewing 19, 22
 - playback, viewing 19
- video compression 156
- video loss
 - detection of 121
 - emergency notification 235
 - relay output, linking to 136
 - synchronization, loss of 121
 - video level, low 121
- video, low level 121
- view
 - cycle view setup 26
 - dwelling time 26
 - extended 30
 - pane/panel. *See* pane/panel
 - standard 30
 - viewing area. *See* pane/panel

W

- warranty period 15
- wildcard character 90
- wildcard, character 90
- wiper, operating 61

Z

- zones, motion detection 118
- zoom, adjusting camera 51

PRODUCT WARRANTY AND RETURN INFORMATION

WARRANTY

Pelco will repair or replace, without charge, any merchandise proved defective in material or workmanship **for a period of one year** after the date of shipment.

Exceptions to this warranty are as noted below:

- Five years:
 - Fiber optic products
 - TW3000 Series unshielded twisted pair (UTP) transmission products
 - CC3701H-2, CC3701H-2X, CC3751H-2, CC3651H-2X, MC3651H-2, and MC3651H-2X camera models
- Three years:
 - Pelco-branded fixed camera models (CCC1390H Series, C10DN Series, C10CH Series, IP3701H Series, and IX Series)
 - EH1500 Series enclosures
 - Spectra® IV products (including Spectra IV IP)
 - Camclosure® Series (IS, ICS, IP) integrated camera systems
 - DX Series digital video recorders, DVR5100 Series digital video recorders, Digital Sentry® Series hardware products, DVX Series digital video recorders, and NVR300 Series network video recorders
 - Endura® Series distributed network-based video products
 - Genex® Series products (multiplexers, server, and keyboard)
 - PMCL200/300/400 Series LCD monitors
- Two years:
 - Standard varifocal, fixed focal, and motorized zoom lenses
 - DF5/DF8 Series fixed dome products
 - Legacy® Series integrated positioning systems
 - Spectra III™, Spectra Mini, Spectra Mini IP, Esprit®, ExSite®, and PS20 scanners, including when used in continuous motion applications.
 - Esprit Ti and TI2500 Series thermal imaging products
 - Esprit and WW5700 Series window wiper (excluding wiper blades).
 - CM6700/CM6800/CM9700 Series matrix
 - Digital Light Processing (DLP®) displays (except lamp and color wheel). The lamp and color wheel will be covered for a period of 90 days. The air filter is not covered under warranty.
 - Intelli-M® eIDC controllers
- One year:
 - Video cassette recorders (VCRs), except video heads. Video heads will be covered for a period of six months.
- Six months:
 - All pan and tilts, scanners, or preset lenses used in continuous motion applications (preset scan, tour, and auto scan modes).

Pelco will warrant all replacement parts and repairs for 90 days from the date of Pelco shipment. All goods requiring warranty repair shall be sent freight prepaid to a Pelco designated location. Repairs made necessary by reason of misuse, alteration, normal wear, or accident are not covered under this warranty.

Pelco assumes no risk and shall be subject to no liability for damages or loss resulting from the specific use or application made of the Products. Pelco's liability for any claim, whether based on breach of contract, negligence, infringement of any rights of any party or product liability, relating to the Products shall not exceed the price paid by the Dealer to Pelco for such Products. In no event will Pelco be liable for any special, incidental, or consequential damages (including loss of use, loss of profit, and claims of third parties) however caused, whether by the negligence of Pelco or otherwise.

The above warranty provides the Dealer with specific legal rights. The Dealer may also have additional rights, which are subject to variation from state to state.

If a warranty repair is required, the Dealer must contact Pelco at (800) 289-9100 or (559) 292-1981 to obtain a Repair Authorization number (RA), and provide the following information:

1. Model and serial number
2. Date of shipment, P.O. number, sales order number, or Pelco invoice number
3. Details of the defect or problem

If there is a dispute regarding the warranty of a product that does not fall under the warranty conditions stated above, please include a written explanation with the product when returned.

Method of return shipment shall be the same or equal to the method by which the item was received by Pelco.

RETURNS

To expedite parts returned for repair or credit, please call Pelco at (800) 289-9100 or (559) 292-1981 to obtain an authorization number (CA number if returned for credit, and RA number if returned for repair) and designated return location.

All merchandise returned for credit may be subject to a 20 percent restocking and refurbishing charge.

Goods returned for repair or credit should be clearly identified with the assigned CA or RA number and freight should be prepaid.

12-23-08

 The materials used in the manufacture of this document and its components are compliant to the requirements of Directive 2002/95/EC.



This equipment contains electrical or electronic components that must be recycled properly to comply with Directive 2002/96/EC of the European Union regarding the disposal of waste electrical and electronic equipment (WEEE). Contact your local dealer for procedures for recycling this equipment.

REVISION HISTORY

Manual #	Date	Comments
C2630M	9/06	Original version.
C2630M-A	6/07	Added new features: data retention custom setting, full screen button, multicasting, export and printing of backed up video, and MUX analog video output.
C2630M-B	4/08	Added new features: dual display, expanded ATM/POS, and system health check.
C2630M-C	7/09	Added new features: External JBOD storage and IP camera support.

Pelco, the Pelco logo, Camclosure, Digital Sentry, Endura, Esprit, ExSite, Genex, Intelli-M, Legacy, and Spectra are registered trademarks of Pelco, Inc. Sarix and Spectra III are trademarks of Pelco, Inc. DLP is a registered trademark of Texas Instruments Incorporated.

All product names and services identified throughout this document are trademarks or registered trademarks of their respective companies. The absence of a trademark or registered trademark from this document does not constitute a waiver of intellectual property rights.

© Copyright 2009, Pelco, Inc. All rights reserved.

PELCO

by **Schneider** Electric

www.pelco.com

Pelco, Inc. Worldwide Headquarters 3500 Pelco Way Clovis, California 93612 USA
USA & Canada Tel (800) 289-9100 Fax (800) 289-9150
International Tel +1 (559) 292-1981 Fax +1 (559) 348-1120