

HI1018A Digital Photo Frame

1. Performance:

1. HI1018A solutions.
2. Support the JPEG format picture
3. Support the memory card: SD、MMC、MS、XD.

2. Technological standards:

1. Power Adapter: AC110~240 / DC5V 1A Min.
2. Normal operating current of less than 1A.(LED backlight TFT panel)
3. Support Baseline JPEG and hardware decoding,speed fast.
4. Max support to 4000 * 4000 pixels.
5. Operation Adopt five function keys panel.
6. Support three display modes: original image size,4:3 and full screen.
7. Support SD / MMC / MS / XD memory card.
8. Support USB HOST high speed.
9. High-quality TFT panel, resolution 480 * 234

3. Package Contents:

Digital Photo Frame+ Bracket	1PCS
User's Manual	1PCS
DC 5V/1.5A Power Adapter	1PCS

4. Note host keys

Digital frame can be operated by the button, front the photo frame from left to right have five function keys as follows:

【▶▶】、**【◀◀】**、**【▶▶|】**、**【↻/s】**、**【MODE】**

1.Note Power on logo

Turn on power, display picture as following:




2 Select Card mode



In this mode on ◀/▶ keys to various storage devices (including memory) the choice, choose equipment after press ENTER button to enter the Select Mode, press SLIDESHOW button to enter the automatic play mode.

3 Select Mode

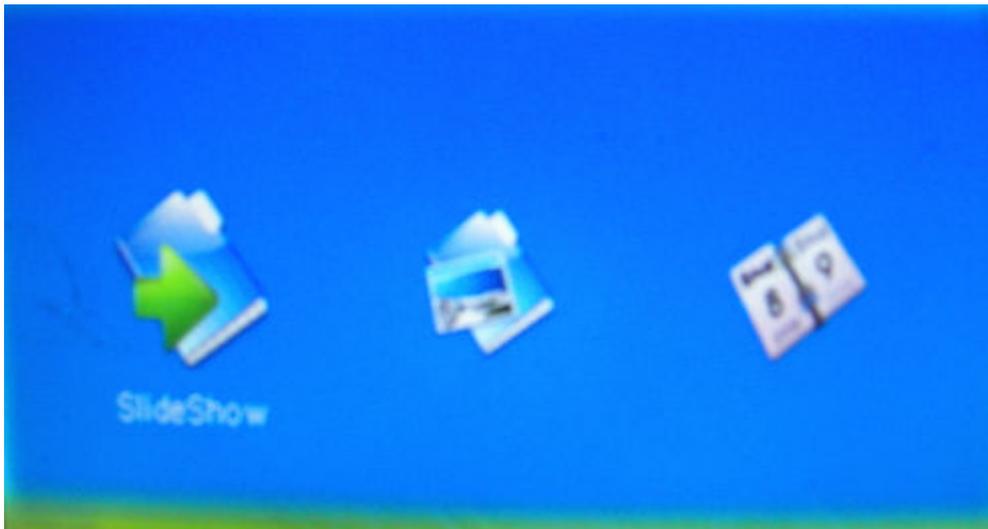

In this mode there are three menu choices: SLIDESHOW PHOTO CALENDAR After selection by the ENTER key as to enter the corresponding functional operation. Press EXIT / STOP back to the Select Card model, press SLIDESHOW key players into the automatic mode.

3. 1、SLIDESHOW



Automatic play mode, play picture can choose to play four or full-screen playback screen, press EXIT / STOP back to PHOTO menu.

3. 2、 PHOTO :




6 screen image preview, select a picture after press ENTER key to full-screen preview image, press SETUP can pop-up setup menu, you can set image display mode, the picture zoom / rotate / copy / delete (the current equipment for the Memory When not be able to choose copy) operation, the file copied to the memory inside or removed from memory. Press EXIT / STOP back to the Select Mode, press SLIDESHOW button to enter the automatic play mode.

3. 3、ENDAR:



Calendar Show, Time set by the other mode SETUP pop-up menu, select Set Time settings and save time (SETUP key invalid in this state). Press EXIT / STOP back to the Select Mode, press SLIDESHOW button to enter the automatic play mode

4、 POP Menu:

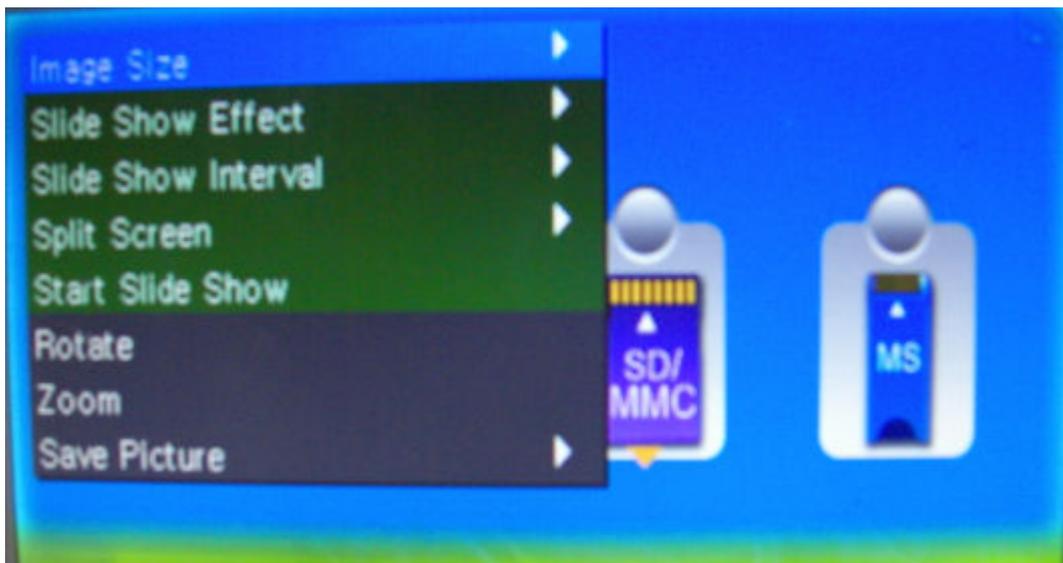

- Image Size: (auto fit/pan scan)
- Slide Show Effect:
- Slide Show Speed:
- Four Screen Display:
- Music Repeat:(Single/Circular/No Repeat):
- Start Slide Show:
- Rotate:
- Zoom:
- Copy File:
- Delete File:
- Reset Settings:
- Language:
- Brightness:
- Contrast:
- Color:
- Tint:
- Set Time:

Press SETUP button pop-up menu Pop-Menu (in the auto show and invalid under state CALENDAR). Press ▲ / ▼ button to select the settings, press ENTER into this setting items, Press ◀/▶ key adjustment, Press EXIT on a return to the menu, set out by SETUP menu.