


KS5513

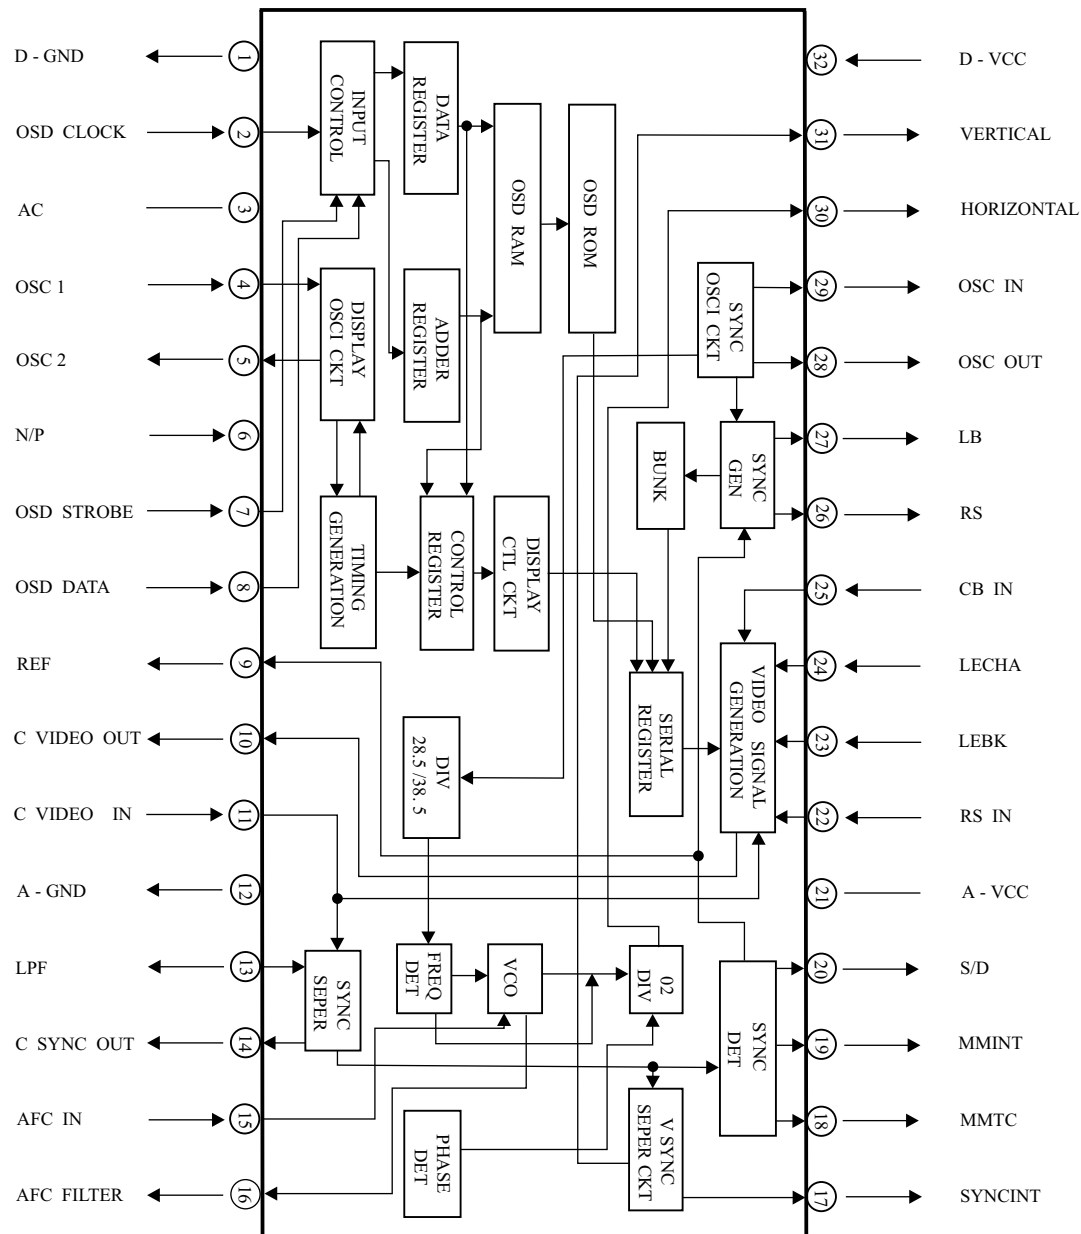

KS5513			
MODE	STOP	REC	PLAY
PIN NO			
PIN 1	0	0	0
PIN 2	0.4	0.4	0.4
PIN 3	4.9	4.9	4.9
PIN 4	2.0	2.0	2.0
PIN 5	2.0	2.0	2.0
PIN 6	0	0	0
PIN 7	3.2	3.3	3.3
PIN 8	0.5	0.4	0.4
PIN 9	1.5	2.5	2.4
PIN 10	0.9	1.0	0.9
PIN 11	0.2	1.0	0.9
PIN 12	0	0	0
PIN 13	1.6	2.6	2.6
PIN 14	4.0	0.5	0.4
PIN 15	0.5	0.1	0.1
PIN 16	2.3	2.3	2.3
PIN 17	4.9	0.3	0.3
PIN 18	0.6	0.7	0.7
PIN 19	4.9	1.8	1.8
PIN 20	0	4.2	4.2
PIN 21	4.9	4.9	4.9
PIN 22	1.1	1.1	1.1
PIN 23	0.8	0.8	0.8
PIN 24	2.2	2.2	2.2
PIN 25	2.6	0.6	0.6
PIN 26	2.0	0	0
PIN 27	2.6	0.6	0
PIN 28	2.4	2.4	2.4
PIN 29	2.4	2.4	2.4
PIN 30	4.6	4.6	4.6
PIN 31	0	4.9	4.9
PIN 32	4.9	5.0	5.0