

Connection Table of Sharp LM64C04P

SHARP LM64C04P		Flat Panel Connector	
PIN No.	FUNCTION	PIN No.	FUNCTION
1	YD	36	FLM
2	LP	38	LP
3	VSS	3	GND
4	XCK	35	SHFCLK
5	VSS	4	GND
6	DISP	5	VCC
7	VDD	6	VCC
8	VEE	7*	VEESAFE(24.7V)
9	VSS	8	GND
10	D0	20	P11
11	D1	19	P10
12	D2	18	P9
13	D3	17	P8
14	VSS	33	GND
15	D4	12	P3
16	D5	11	P2
17	D6	10	P1
18	D7	9	P0
19	VSS	34	GND
20	NC	-	-

BIOS : Standard

\* For PCM-4862/5860/4824, MIC-2340 CPU cards, an external VEE power supply is required for LCD VEE input at pin 8.