


■ Pin Assignment

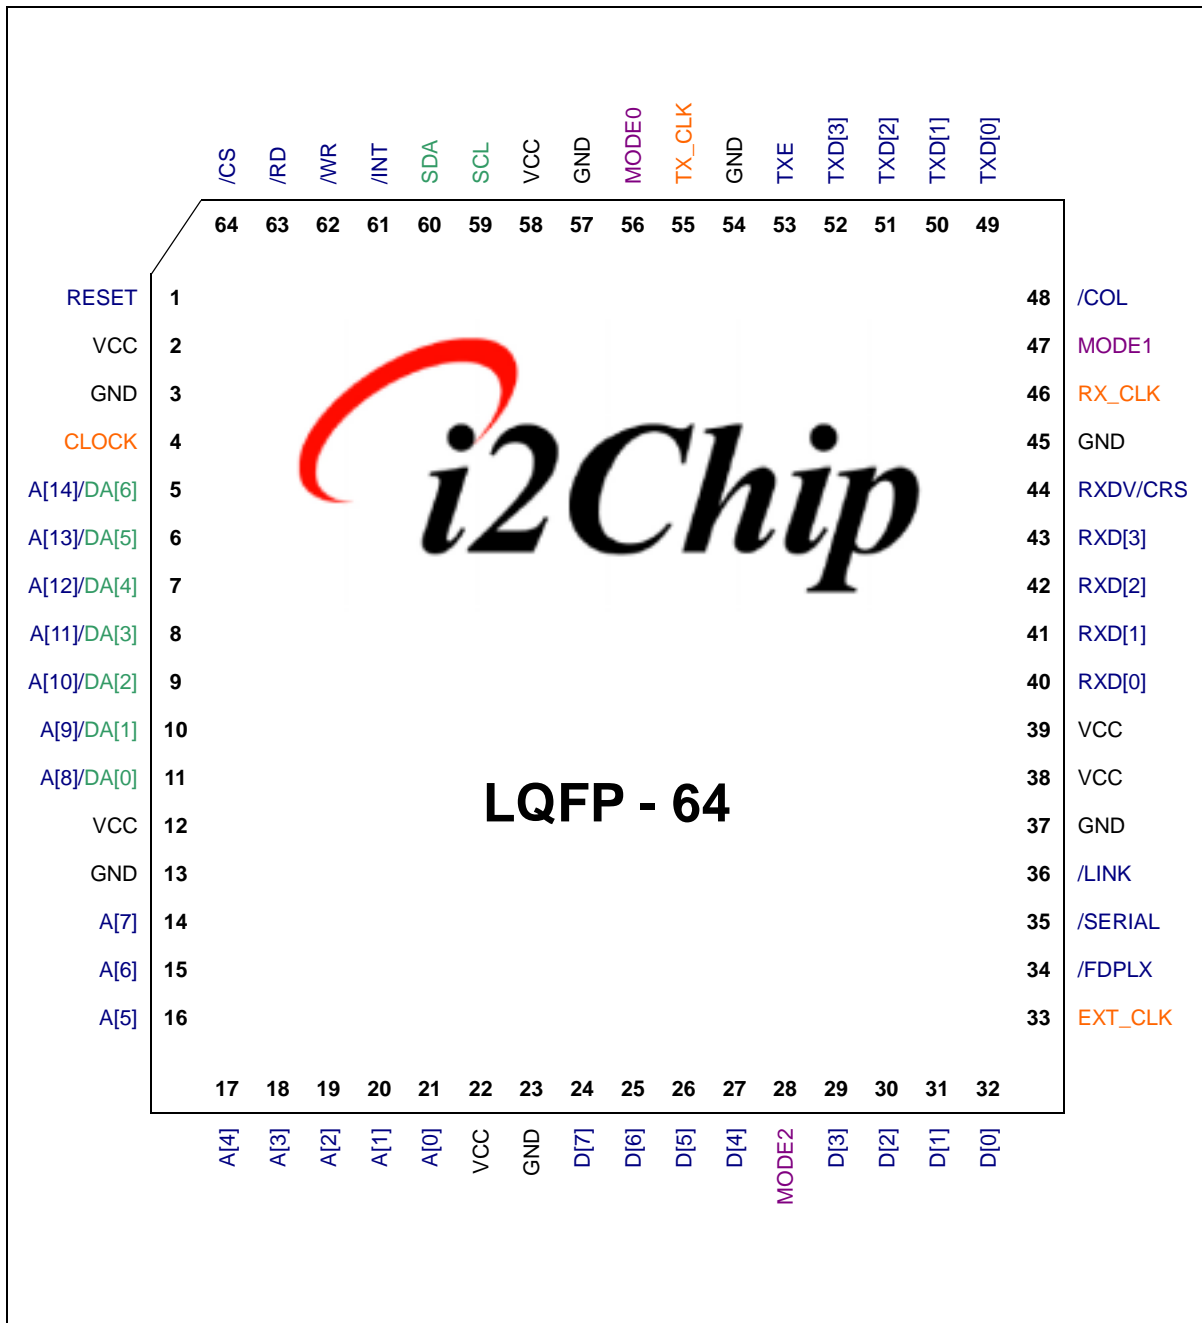

				W3100A			
Number	Name		Mode	Number	Name		Mode
1	RESET		Input	33	EXT_CLK		Input
2	VCC		power	34	/FDPLX		Input
3	GND		power	35	/SERIAL	pull-up	Input
4	25MHz_CLK		Input	36	/LINK		Input
5	A14/I2CDA6		Input	37	GND		power
6	A13/I2CDA5		Input	38	VCC		power
7	A12/I2CDA4		Input	39	VCC		power
8	A11/I2CDA3		Input	40	RXD0		Input
9	A10/I2CDA2		Input	41	RXD1		Input
10	A9/I2CDA1		Input	42	RXD2		Input
11	A8/I2CDA0		Input	43	RXD3		Input
12	VCC		power	44	RXDV		Input
13	GND		power	45	GND		power
14	A7		Input	46	RX_CLK		Input
15	A6		Input	47	MODE1	pull-down	Input
16	A5		Input	48	COL		Input
17	A4		Input	49	TXD0		Output
18	A3		Input	50	TXD1		Output
19	A2		Input	51	TXD2		Output
20	A1		Input	52	TXD3		Output
21	A0		Input	53	TXE		Output
22	VCC		power	54	GND		power
23	GND		power	55	TX_CLK		Input
24	D7		I/O	56	MODE0	pull-down	Input
25	D6		I/O	57	GND		power
26	D5		I/O	58	VCC		power
27	D4		I/O	59	SCL		Input
28	MODE2	pull-down	Input	60	SDA		I/O
29	D3		I/O	61	/INT		Output
30	D2		I/O	62	/WR		Input
31	D1		I/O	63	/RD		Input
32	D0		I/O	64	/CS		Input