

## **ML4435**

## **Sensorless BLDC Motor Controller**

#### **Features**


- Proprietary back-EMF sensing commutation technique for motor communication without hall effect sensors
- PWM pulse-by-pulse current limiting to protect motor and FET drivers
- Stand-alone operation; motor starts and stops with power applied to the IC\*
- Soft-start function limits start-up current
- PWM speed control for efficiency and minimum FET sizing
- Onboard under voltage lock out and power fail detect
- · Tach output senses commutation of the motor

## **Description**


The ML4435 provides all the circuitry for sensorless speed control of 3 phase Brushless DC Motors. Controller functions include start-up circuitry, Back EMF commutation control, Pulse Width Modulation (PWM) speed control, pulse-by-pulse current limiting, motor coasting, and undervoltage protection.

Motor starting is accomplished by commutating the motor at a low frequency to produce low speed motion. The low speed motion is used to generate a Back EMF signal. A back EMF sampling circuit locks on to the motors position and controls commutation timing by forming a phase locked loop (PLL). The commutation control circuitry also outputs a speed feedback signal used in the speed control loop. The speed control loop consists of an error amplifier and PWM comparator that produces a PWM duty cycle for speed regulation. Motor current is limited by a pulse-by-pulse PWM shutdown comparator that is tripped by the voltage across an external current sense resistor. Commutation control, PWM speed control, and current limiting are combined to produce the output driver signals. Six output drivers are used to provide gating signals to an external 3 phase bridge power stage sized for the Brush-less DC (BLDC) motor voltage and current requirements. Additional functions include a motor coast function and an under voltage lock out circuit to shut down the output drivers in the event of a low voltage condition on the VCC to the ML4435.

## **Block Diagram**

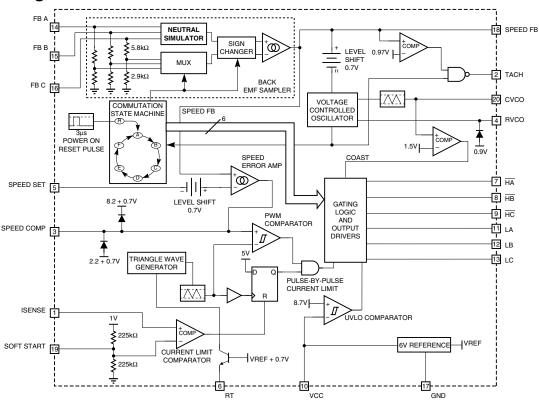

## **Pin Assignments**

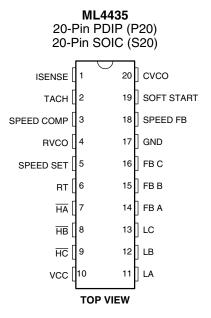

## **Pin Description**

NAME	PIN	FUNCTION			
ISENSE	1	Motor current sense input which triggers pulse by pulse current limit when ISENSE exceeds 0.55V			
TACH	2	A clock output of 6 pulses per commutation cycle when SPEED FB is greater the 0.97V otherwise the TACH output is at 5V			
SPEED COMP	3	Connection node for speed loop compensation components			
RVCO	4	Connection node for external resistor to set VCO frequency			
SPEED SET	5	DC input for setting motor speed			
RT	6	External resistor from this pin to ground controls the IC's PWM timing (frequency)			
HA	7	High-side output driver for motor phase A			
HB	8	High-side output driver for motor phase B			
HC	9	High-side output driver for motor phase C			
VCC	10	Power Supply input			
LA	11	Low-side output driver signal for motor phase A			
LB	12	Low-side output driver signal for motor phase B			
LC	13	Low-side output driver signal for motor phase C			
FB A	14	Back EMF signal input for motor phase A			
FB B	15	Back EMF signal input for motor phase B			
FB C	16	Back EMF signal input for motor phase C			
GND	17	Signal and power ground			
SPEED FB	18	Connection node for back-EMF sensing compensation components			
SOFT START	19	Connection node for external soft start capacitor which reduces start up current			
CVCO	20	Connection node for external capacitor to set VCO frequency. Forcing this input below 1.5V causes the commutation to stop and the motor to coast			

## **Electrical Tables**

Unless otherwise specified, Ta= Operating Temperature Range, VCC =  $12V \pm 10\%$ , RT = 50k

CVCO	put Range <sup>2</sup> linimum Frequency <sup>2</sup> CH Out Disabled Threshold <sup>2</sup> ack EMF Sampler <sup>2</sup>	V Speed Feedback TACH Out = Hi V Speed Feedback = 3.3V  FB A, FB B, and FB C	0	0.2 6 2 3.75 1.5 2.875 0.9 0.97 ±80	6.2	V V V V V V V V V V V V V V V V V V V
VCO	per Range <sup>2</sup> ver Threshold <sup>2</sup> per Threshold <sup>2</sup> set Enable Threshold <sup>2</sup> set Enable Threshold <sup>2</sup> set EMF Blanking Threshold <sup>2</sup> set EMF Blanking Threshold <sup>2</sup> set EMF Blanking Threshold <sup>2</sup> set EMF Sampler <sup>2</sup> set EMF Sampler <sup>2</sup> NSING	TACH Out = Hi V Speed Feedback = 3.3V	0	0.2 6 2 3.75 1.5 2.875		V V V V V V V
RVCO   Lower   Upper   CVCO   Lower   Upper   Coas   Back   Back   SPEED FEDB   V Mi   TAC   I Back   BACK EMF SEN   Feed   TACH   TAC   TAC   TAC   TAC   TAC   TAC   SPEED ERROR   I SPE   SPE   SPE   SPE   OSCILLATOR   PWM   Duty   CURRENT SEN	per Range <sup>2</sup> ver Threshold <sup>2</sup> per Threshold <sup>2</sup> set Enable Threshold <sup>2</sup> set Enable Threshold <sup>2</sup> set EMF Blanking Threshold <sup>2</sup> set EMF Blanking Threshold <sup>2</sup> set EMF Blanking Threshold <sup>2</sup> set EMF Sampler <sup>2</sup> set EMF Sampler <sup>2</sup> NSING	TACH Out = Hi V Speed Feedback = 3.3V		6 2 3.75 1.5 2.875 0.9	6.7	V V V V V V V V
Upper	per Range <sup>2</sup> ver Threshold <sup>2</sup> per Threshold <sup>2</sup> set Enable Threshold <sup>2</sup> set Enable Threshold <sup>2</sup> set EMF Blanking Threshold <sup>2</sup> set EMF Blanking Threshold <sup>2</sup> set EMF Blanking Threshold <sup>2</sup> set EMF Sampler <sup>2</sup> set EMF Sampler <sup>2</sup> NSING	TACH Out = Hi V Speed Feedback = 3.3V		6 2 3.75 1.5 2.875 0.9	6.7	V V V V V V V
CVCO Lower Upper Coast Back SPEED FEEDB TACE I Back SPEED FEEDB TACE TACE TACE SPEED ERROR SPEED ERROR SPEED ERROR SPEED	ver Threshold <sup>2</sup> ver Enable Threshold <sup>2</sup> ver Enable Threshold <sup>2</sup> ver EMF Sampler <sup>2</sup> NSING	TACH Out = Hi V Speed Feedback = 3.3V		2 3.75 1.5 2.875 0.9	6.7	V V V V
Upper   Coas	per Threshold <sup>2</sup> ast Enable Threshold <sup>2</sup> ast Enable Threshold <sup>2</sup> as EMF Blanking Threshold <sup>2</sup> BACK put Range <sup>2</sup> linimum Frequency <sup>2</sup> CH Out Disabled Threshold <sup>2</sup> ack EMF Sampler <sup>2</sup> NSING	TACH Out = Hi V Speed Feedback = 3.3V		3.75 1.5 2.875 0.9 0.97	6.7	V V V
Coase   Back   SPEED FEEDB   V Min   TAC     I Back   Feed   TACH   TAC     TACH   TAC   TAC     SPEED ERROR   SPE   I SP     SPE   SPE   SPE   SPE   SPE     OSCILLATOR   PWM   Duty     CURRENT SEN   V SC   SPE   S	ast Enable Threshold <sup>2</sup> k EMF Blanking Threshold <sup>2</sup> BACK  put Range <sup>2</sup> linimum Frequency <sup>2</sup> CH Out Disabled Threshold <sup>2</sup> ack EMF Sampler <sup>2</sup> NSING	TACH Out = Hi V Speed Feedback = 3.3V		1.5 2.875 0.9 0.97	6.7	V
Back SPEED FEEDB  Outp  V Mi  TAC  I Back  BACK EMF SEN  Feed  TACH  TAC  TACC  SPEED ERROR  SPE  SPE  SPE  OSCILLATOR  PWN  Duty  CURRENT SEN	k EMF Blanking Threshold <sup>2</sup> BACK  put Range <sup>2</sup> linimum Frequency <sup>2</sup> CH Out Disabled Threshold <sup>2</sup> ack EMF Sampler <sup>2</sup> NSING	TACH Out = Hi V Speed Feedback = 3.3V		2.875 0.9 0.97	6.7	V V
SPEED FEEDB. Outp V Mi TAC I Bac BACK EMF SEN Feed TACH TAC TAC SPEED ERROR I SPE I SPE SPE SPE OSCILLATOR PWM Duty CURRENT SEN	put Range <sup>2</sup> Ilinimum Frequency <sup>2</sup> CH Out Disabled Threshold <sup>2</sup> ck EMF Sampler <sup>2</sup> NSING	TACH Out = Hi V Speed Feedback = 3.3V		0.9	6.7	V
Outp V Mi TAC I Bac BACK EMF SEN Feed TACH TAC TAC TAC SPEED ERROR SPE SPE SPE SPE OSCILLATOR PWN Duty CURRENT SEN	put Range <sup>2</sup> linimum Frequency <sup>2</sup> CH Out Disabled Threshold <sup>2</sup> ck EMF Sampler <sup>2</sup> NSING	TACH Out = Hi V Speed Feedback = 3.3V		0.97	6.7	V
V Mi TAC I Bac BACK EMF SEN Feed TACH TAC TAC TAC SPEED ERROR SPE I SPE SPE SPE SPE OSCILLATOR PWM Duty CURRENT SEN	CH Out Disabled Threshold <sup>2</sup> ck EMF Sampler <sup>2</sup> NSING	TACH Out = Hi V Speed Feedback = 3.3V		0.97	6.7	V
TAC I BACK BACK EMF SEN Feed TACH TAC TAC TAC SPEED ERROR SPE SPE SPE SPE OSCILLATOR PWM Duty CURRENT SEN	CH Out Disabled Threshold <sup>2</sup> ack EMF Sampler <sup>2</sup> NSING	TACH Out = Hi V Speed Feedback = 3.3V		0.97		
BACK EMF SER Feed TACH TACC TACC SPEED ERROR SPE I SPE SPE SPE SPE OSCILLATOR PWM Duty CURRENT SEN	nck EMF Sampler <sup>2</sup>	V Speed Feedback = 3.3V				17
BACK EMF SER Feed TACH TAC TAC SPEED ERROR SPE I SPE SPE SPE SPE OSCILLATOR PWM Duty CURRENT SEN	NSING			±80	+	V
TACH TACH TAC TAC SPEED ERROR SPE I SPE SPE SPE SPE OSCILLATOR PWM Duty CURRENT SEN		FB A, FB B, and FB C				μA
TACH TAC TAC SPEED ERROR SPE I SPE SPE SPE SPE OSCILLATOR PWM Duty CURRENT SEN	d Back Input Range <sup>2</sup>	FB A, FB B, and FB C	_			
TAC TAC SPEED ERROR SPE I SPE SPE SPE OSCILLATOR PWM Duty CURRENT SEN		!	0		VCC	V
TAC SPEED ERROR SPE I SPE SPE SPE OSCILLATOR PWM Dutty CURRENT SEN			!	'	-	
SPEED ERROR  SPE  I SPE  SPE  SPE  OSCILLATOR  PWM  Duty  CURRENT SEN	CH Out Low	ISINK = 100μA		0.2	0.4	V
SPE I SPE SPE SPE OSCILLATOR PWM Duty CURRENT SEN V SC	CH Out High	ISOURCE = 100µA	4.3	4.8		V
SPE SPE OSCILLATOR PWN Duty CURRENT SEN	R MP		ļ	1	-	
SPE SPE SPE OSCILLATOR PWM Duty CURRENT SEN V SC	EED SET Range <sup>2</sup>		0		6	V
SPE OSCILLATOR PWN Duty CURRENT SEN V SC	PEED COMP	V SPEED COMP = 5.1V		±45		μA
OSCILLATOR PWM Duty CURRENT SEN V SC	EED COMP Output Lower Clamp <sup>2</sup>	$I = \pm 45\mu A$		2.15		V
PWN Duty CURRENT SEN V SC	EED COMP Output Upper Clamp <sup>2</sup>	I = ±45μA		8.2		V
CURRENT SEN V SC			<del>!</del>	!	•	
CURRENT SEN	M Frequency	N1, N2, N3	17	25	33	kHz
V SC	y Cycle <sup>2</sup>	N1, N2, N3	0		100	%
	NSE	-		1		
ISENSE Thre	OFT START		0.48	0.58	0.68	V
	eshold <sup>2</sup>			0.58		V
OUTPUTS (N1,	, N2, N3, P1, P2, AND P3)	1		•		
Outp	put Low	ISINK = 20mA	0	0.5	1	V
Outp	put High (VCC-VOUT)	ISOURCE = 20mA	0	0.5	1	V
UNDER VOLTAG		•			•	
Start	GE LOCKOUT		8.7	9.2	9.7	V
Unde	GE LOCKOUT t Threshold		8.2	8.7	9.2	V
SUPPLY						
ICC Supp	rt Threshold				1	

Note 1: Limits are guaranteed by 100% testing, sampling, or correlation with worst case test conditions.

Note 2: Guaranteed by design, not tested.

## **Functional Description**

#### **Component Selection**

Selecting external components for the ML4435 requires calculations based on the motor's electrical and mechanical parameters. The following is a list of the motor parameters needed to for these calculations:

The maximum DC motor supply voltage V MOTOR (V)

The maximum operating current I MAX (A)

The winding resistance measured line to line Rl-l  $\Omega$ 

The number of magnetic poles N (Unitless)

The Back EMF constant Ke (V s/RAD)

The torque constant  $K\tau$  (N m/A) of the motor ( $K\tau$  = Ke in SI units)

The maximum speed of operation RPMMAX (RPM)

The moment of inertia J (Kg m<sup>2</sup>) of the motor and its load

The viscous damping factor  $\zeta$  (Unitless) of the motor and its load

If one or more of the above values is not known, it is still possible to pick components for the ML4435, but some experimentation may be necessary to determine the optimal values. All quantities are in SI units unless otherwise specified. The following formulas and component selection graphs should be considered as a starting point from which to optimize the application. All calculations for capacitors and resistors should be used as the first approximation for selecting the closest standard value.

#### Supply Voltage and On Chip Voltage Reference

#### VCC

The supply voltage at VCC (pin 10) is nominally  $12V \pm 10\%$ . A bypass capacitor of  $0.1\mu F$  to ground as close as possible to VCC (pin 10) is recommended.

#### RT

An internal 6V reference is generated inside the ML4435. The reference appears on RT (pin 6). A resistor to ground on RT sets the PWM frequency. This resistor can be replaced with a potentiomenter for use in setting the speed command. This topic is discussed under the PWM SPEED CONTROL section. Note: Buffer this pin with an op amp with at least a  $1M\Omega$  input impedance if external circuits are necessary.

#### **Output Drivers**

The output drivers LA, LB, LC,  $\overline{HA}$ ,  $\overline{HB}$ , and  $\overline{HC}$  provide totem pole output drive signals for a 3 phase bridge power stage. All control functions in the ML4435 translate to outputs at these pins. LA, LB, LC provide the low side drive signals for phases A, B, and C of the 3 phase power stage and are 12V active high signals.  $\overline{HA}$ ,  $\overline{HB}$ , and  $\overline{HC}$  provide the high side signals for phases A, B, and C of the 3 phase power stage and are 12V active low signals.

# Current Limiting in the 3 Phase Bridge Power Stage

A current sense resistor RSENSE shown in Figure 1 is installed in the 3 phase power stage to regulate the maximum current in the power stage and the BLDC motor. Current regulation is accomplished by shutting off the output drivers LA, LB, and LC for the remainder of the PWM period if the voltage across RSENSE exceeds the current limit threshold set by the SOFT START (pin 19). The maximum power dissipated in RSENSE is shown in Figure 2.

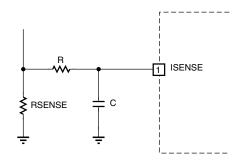


Figure 1. Current Limit with RSENSE

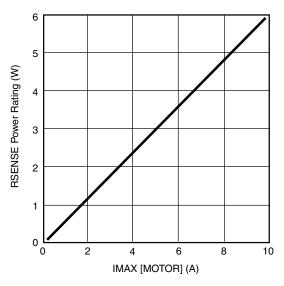


Figure 2. RSENSE Power vs. Motor Current

#### **Soft Start**

The voltage at SOFT START (pin 19) sets the current limit threshold. The ML4435 has an internal voltage divider with a 1.1V supply voltage. This circuit is shown in Figure 3. The divider consists of two  $225k\Omega$  resistors setting the current limit threshold to approximately 0.55V. An external voltage divider off of VCC or an external reference can be used to override the default setting of SOFT START by using a divider with 10 times the current draw of the internal divider.

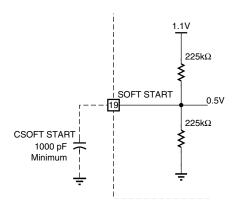


Figure 3. SOFT START Function

A capacitor to ground on the SOFT START pin can be used to provide a soft ramping of the current limit on power up. The ramp time can be selected using Figure 4.

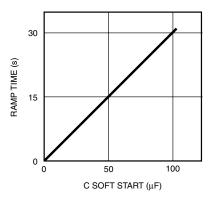


Figure 4. SOFT START Ramp Time vs. CSOFTSTART

#### **RSENSE**

The function of RSENSE is to provide a voltage proportional to the motor current, for current limiting. The default trip voltage across RSENSE is 0.6V as set by the SOFT START (pin 19). The current sense resistor should be a low inductance resistor such as a carbon composition. For resistors in the milli ohms range wire wound resistors tend to have low values of inductance. RSENSE can be selected using Figure 4. The power rating of RSENSE should be sized to handle the power dissipation (I MAX squared times RSENSE) seen at maximum current.

#### **ISENSE Filter**

An RC lowpass filter is required at the ISENSE input pin to remove the voltage spike on the leading edge of the current sense signal caused by the diode reverse recovery shoot through current. Absent the filter, false triggering of the current limit could occur.

The recommended starting values for this circuit are  $R=1K\Omega$  and C=1000pF a configuration that will filter out spikes less than 1µs long. It is recommended that the capacitor value not be increased beyond 3300pF.

#### **Pulse-By-Pulse Current Limiting**

When current limit is activated by the voltage on ISENSE exceeding the voltage on SOFT START the current limit is tripped, turning off LA, LB, and LC for the remainder of the PWM period.

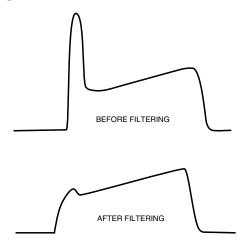


Figure 5. ISENSE Filter Wave Forms

#### **Commutation Control**

A 3 phase Brushless DC motor requires electronic commutation to achieve rotational motion. Electronic commutation requires the switching on and off of the power switches of a 3 phase half bridge. For torque production to be achieved in one direction the commutation is dictated by the rotor's position. Electronic commutation in the ML4435 is achieved by turning on and off, in the proper sequence, one L output from one phase and one  $\overline{H}$  output from another phase. There are six combinations of L and  $\overline{H}$  outputs (six switching states) that constitute a full commutation cycle as illustrated in Table 1 labeled state A through F. This switching sequence is programmed into the commutation state machine as illustrated in Figure 6. Clocking of the commutation state machine is provided by the output of a VCO.

		OUTPUT DRIVERS					
		LA	LB	LC	HA	HB	HC
STATE	Α	LOW	LOW	HIGH	LOW	HIGH	HIGH
	В	LOW	LOW	HIGH	HIGH	LOW	HIGH
	С	HIGH	LOW	LOW	HIGH	LOW	HIGH
	D	HIGH	LOW	LOW	HIGH	HIGH	LOW
	E	LOW	HIGH	LOW	HIGH	HIGH	LOW
	F	LOW	HIGH	LOW	LOW	HIGH	HIGH
						= DRI	VER ON

**Table 1. Communication Control States** 

#### **Voltage Controlled Oscillator**

The VCO outputs a TTL compatible clock on the TACH (pin 2) proportional to the input voltage to the voltage controlled oscillator SPEED FB (pin 18). The proportion of frequency to voltage or VCO constant Kv is set by a resistor to ground on RVCO (pin 4) and capacitor to ground on CVCO (pin 20) as shown in Figure 7. RVCO sets up a current proportional to the VCO input voltage SPEED FB minus 0.7V. This current is used to charge and discharge CVCO between the threshold voltages of 2V and 3.75V as shown in Figure 7. RVCO has a lower voltage limit of 0.2V. The resulting triangle wave of CVCO corresponds to the clock on the TACH pin, this is also illustrated in Figure 7. Kv should be set so that the VCO output frequency corresponds to the maximum commutation frequency FMAX and thus the maximum motor speed when the VCO input is equal to or slightly less than 6V. CVCO and RVCO can be selected by first calculating FMAX and then using the selection graph in Figure 8. FMAX is calculated as follows:

 $FMAX = 0.05 \times RPMMAX \times N$ 

Where: RPMMAX = The maximum speed of operation (RPM). N = The number of magnetic poles (Unitless).

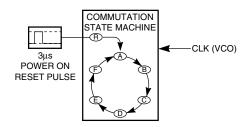


Figure 6. Commutation State Machine

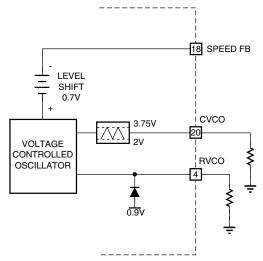


Figure 7. VCO Control

#### Tach

The TACH (pin 2) outputs the VCO frequency. This is 6 times the commutation frequency. The TACH out also

indicates a low motor speed by staying TTL high when the motor is at its minimum speed (SPEED FB below 0.97V).

#### **Back EMF Sampler**

The input to the VCO (pin 18) SPEED FB is controlled by the Back EMF Sampler. The back EMF sense pins FB A, FB B, and FB C inputs to the back EMF sampler require a signal from the motor phase leads that is below the VCC of the ML4435. The phase sense input impedance is  $8.7k\Omega$ . If the motor voltage is greater than the VCC of the ML4435 then this requires a series resistor RFB from the motor phase lead shown in Figure 8. RFB can be selected by using the graph in Figure 9 or using the following equation:

$$RFB = 8.7k\Omega \left( \frac{VMOTOR}{12} - 1 \right)$$

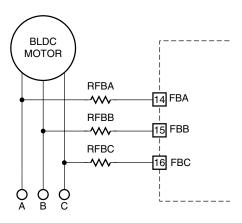


Figure 8. Back EMF Sampler Configuration

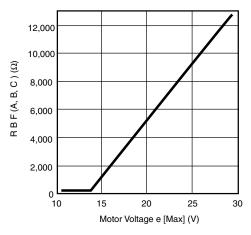


Figure 9. RFB vs. VMOTOR [MAX]

The back EMF sampler takes the motor phase voltages divided down to signals that are less than VCC (12V nominal) and calculates the neutral point of the motor by the following equation:

$$VNEUTRAL = (FBA + FBB + FBC)/3$$

This allows the ML4435 to compare the back EMF signal to the motors neutral point without the need for bringing out an extra wire on a WYE wound motor. For DELTA wound motors there isn't a physical neutral to bring out so this reference point must be calculated anyway.

The back EMF sampler takes the motor phase that is not driven (i.e. if LA and  $\overline{HB}$  are on then phase A is driven low and phase B is driven high then phase C is sampled). The sampled phase provides a back EMF signal that is compared against the neutral of the motor. The sampler is controlled by the commutation state machine. The sampled back EMF is compared to the neutral through an error amplifier. The output of the error amplifier outputs a charging or discharging current to SPEED FB (pin 18) which provides the voltage to the VCO.

# Back EMF Sensing Phase Locked Loop Commutation Control

The three blocks: The commutation state machine, the VCO, and the back EMF sampler form a phase locked loop that locks the commutation clock onto the back EMF signal. The complete phase locked loop is illustrated in Figure 10. The phased locked loop requires a lead lag filter that is set by external components on SPEED FB (pin 18). The filter components in Figure 10 work for most applications. If performance is unstable C1 and C2 can go up or down a decade in

value as low as the C2 stays equal to C1 x 10.

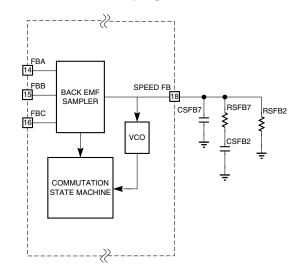


Figure 10. Phase Locked Loop

#### **Motor Start-Up**

When power is first applied to the ML4435, the motor is at rest and thus, the back EMF is equal to zero. The motor needs to be rotating for the Back EMF sampler to lock onto the rotor position and commutate the motor. The ML4435 uses a minimum VCO frequency to begin commutating the motor. This low frequency commutation is set by the 0.2V clamp on RVCO, this provides a commutation frequency at 1/30th of the maximum frequency.

#### **Run Mode**

After the Back EMF sensing PLL has locked on to the motor's position, the motor is running in closed loop control. At this point, the speed control loop should force the motor speed to the speed that corresponds to the SPEED SET voltage.

#### **PWM Speed Control**

Speed control is accomplished by setting a speed command

at SPEED SET (pin 5) with an input voltage from 0.2 to 6V. The accuracy of the speed command is determined by the external components RVCO and CVCO. There are a number of methods to control the speed command on the ML4435. One method is to use a potentiometer from RT to ground with the wiper going to SPEED SET. If SPEED SET is

controlled from a microcontroller, a DAC that uses RT as its input reference can be used. The RT voltage must be buffered connecting it to external circuits. The speed command is compared with the sensed speed from SPEED FB minus 0.7V (pin 18) through a transconductance error amplifier. The output of the speed error amplifier is SPEED COMP (pin 3). SPEED COMP is clamped between 8.2V and

2.2V. A signal of 8.2V corresponds to full PWM duty

cycle and 2.2V corresponds to 0% duty cycle. Speed loop compensation components are placed on this pin as shown in Figure 11.

The speed loop compensation components are calculated as follows:

$$C_{SC}2 = \frac{1.44 \times Nx Kex VMOTOR \times R_{VCO} \times C_{VCO}}{2 \times \pi \times J \times RI \times freq^{2}}$$

$$Rsc = \frac{10}{2 \times \pi \times freq \times Csc2}$$

$$Csc1 = 10 \times Csc2$$

Where freq is the speed loop bandwidth in Hz.

The voltage on SPEED COMP (pin 3) is compared with a triangle wave oscillator to create a PWM duty cycle. The PWM oscillator creates a triangle wave function from 3V to 7V as shown in Figure 11. The frequency of the triangle wave oscillator is set by a resistor to ground on RT (pin 6). RT can be selected from the graph in Figure 12.

The PWM duty cycle from the speed control loop is gated the pulse-by-pulse current limit that controls the LA, LB, and LC output drivers.

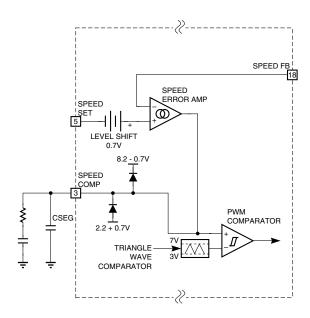


Figure 11. PWM Oscillator Circuit

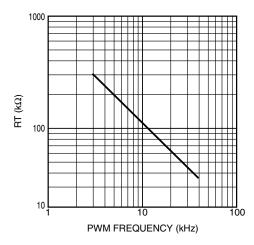


Figure 12. RT vs PWM Frequency

#### Coast

When CVCO (pin 20) is pulled below 1.5V the output drivers LA, LB, LC and  $\overline{\text{HA}}$ ,  $\overline{\text{HB}}$ , and  $\overline{\text{HC}}$  are turned off. The COAST function shuts all power off from the motor allowing it to coast to a stop. The COAST function in (pin 20) is configured as shown in Figure 13 and can be driven by a switch to ground or open collector to ground also shown in Figure 13.

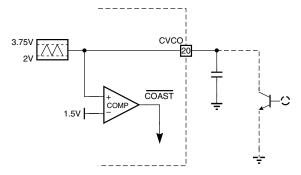


Figure 13. Coast Control

#### **Under Voltage Protection**

Undervoltage protection is used to protect the 3 phase bridge power stage from a low VCC condition. Undervoltage is triggered at VCC of 9.2V or under. Undervoltage also turns off all output drivers LA, LB, LC,  $\overline{\text{HA}}$ ,  $\overline{\text{HB}}$ , and  $\overline{\text{HC}}$ . The comparator that triggers undervoltage protection has 500mV of hystersis.

#### Interfacing the Output Drivers to the 3 Phase Bridge Power Stage

The most flexible configuration is to use high side drivers

to control N-Channel MOSFETs (or IGBTs) allowing applications from less than 12V up to 170V. Figure 14a shows the ML4435 and all the support circuitry in a typical application. Figure 14b shows a power stage using the IR2118 high side drivers from International Rectifier and high voltage MOSFETs.

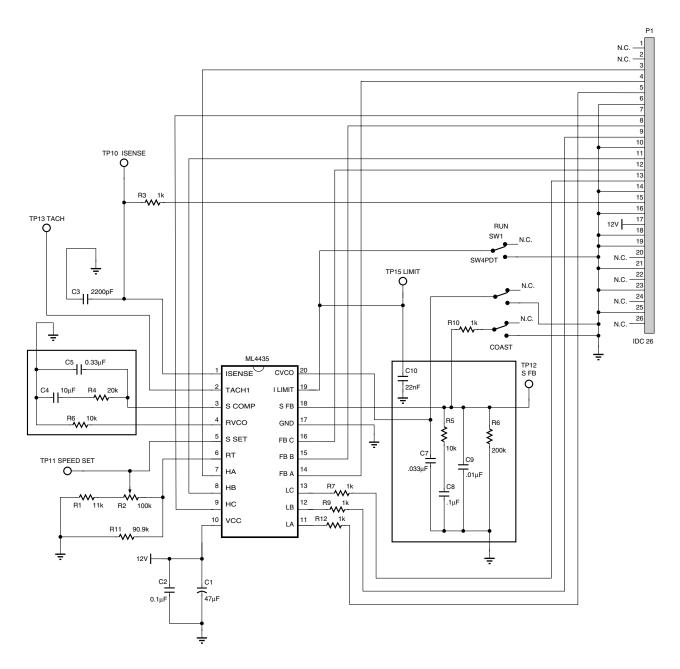


Figure 14a. ML4435 Typical Application


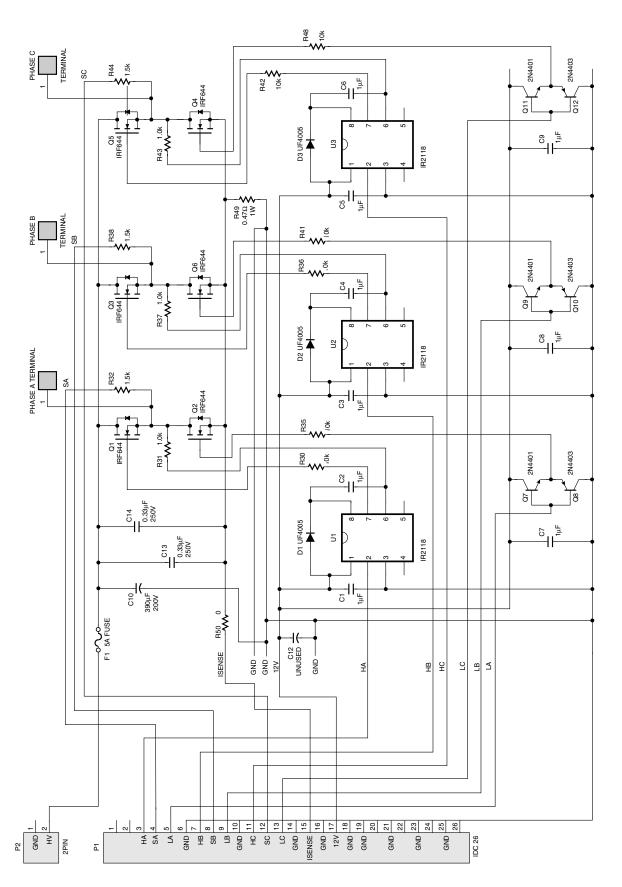



Figure 14b. Power Stage

## **Mechanical Dimensions**

## Package P20 20 Pin PDIP

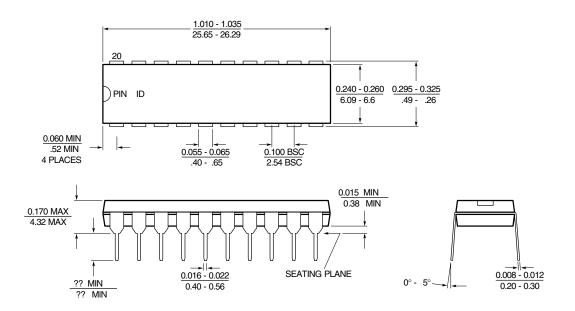

## Package S20 20 Pin SOIC

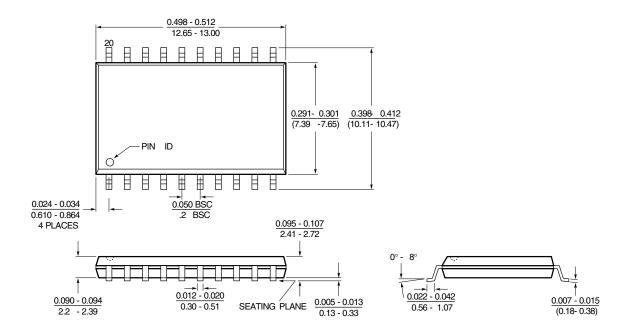

## **Ordering Information**

PART NUMBER	TEMPERATURE RANGE	PACKAGE
ML4435CP	0°C to 70°C	20 Pin PDIP (P20)
ML4435CS	0°C to 70°C	20 Pin SOIC (S20)
ML4435IP	-40°C to 85°C	20 Pin PDIP (P20)
ML4435IS	-40°C to 85°C	20 Pin SOIC (S20)

#### **DISCLAIMER**

FAIRCHILD SEMICONDUCTOR RESERVES THE RIGHT TO MAKE CHANGES WITHOUT FURTHER NOTICE TO ANY PRODUCTS HEREIN TO IMPROVE RELIABILITY, FUNCTION OR DESIGN. FAIRCHILD DOES NOT ASSUME ANY LIABILITY ARISING OUT OF THE APPLICATION OR USE OF ANY PRODUCT OR CIRCUIT DESCRIBED HEREIN; NEITHER DOES IT CONVEY ANY LICENSE UNDER ITS PATENT RIGHTS, NOR THE RIGHTS OF OTHERS.

#### LIFE SUPPORT POLICY

FAIRCHILD'S PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS WRITTEN APPROVAL OF THE PRESIDENT OF FAIRCHILD SEMICONDUCTOR CORPORATION. As used herein:

- Life support devices or systems are devices or systems which, (a) are intended for surgical implant into the body, or (b) support or sustain life, or (c) whose failure to perform when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant injury of the user.
- A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.