

# STEPPER MOTOR DRIVER

 
#### **■ GENERAL DESCRIPTION**

#### **■ PACKAGE OUTLINE**

The NJM6219 is a stepper motor driver, which consists of a LS-TTL compartible logic input stage, off time control circuits and a pair of high power H-bridges and protection diodes.

The output current is up to 1000mA.

The NJM6219 with small number of external components conforms a complete control and drive unit for stepper motor systems.




NJM6219E3 (SOP24-E3)


# **■ FEATURES**

- Switched mode bipolar constant current drive
- Wide voltage range 4 to 45V
- Wide range of current control 5 to 1000mA
- Half- step and full-step operation
- Thermal overload protection
- Package SOP24-E3 JEDEC 300mil

#### **■ PIN CONNECTION**

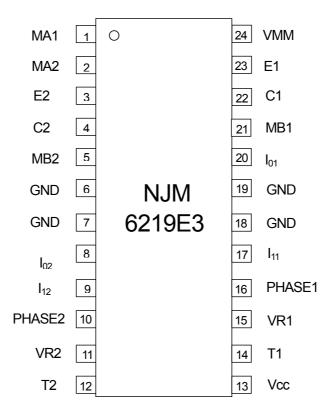

# **■ BLOCK DIAGRAM**

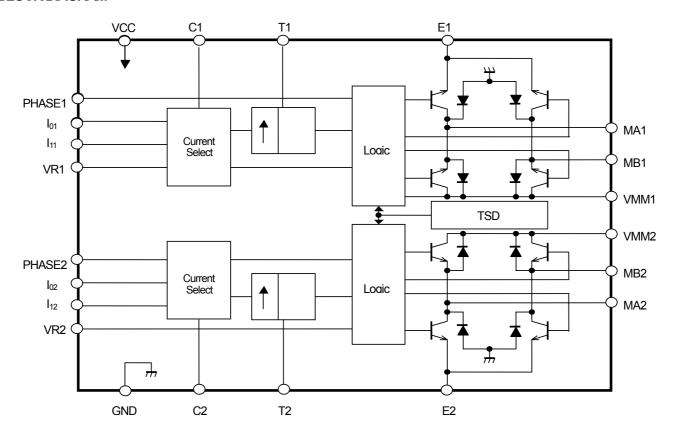

# **■ PIN DESCRIPTION**

1 MA1 Motor output A, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  MA2 Motor output A, channel 2. Motor current flows from MA2 to MB2 when Phase2 is high.  C2 Common emitter, channel 2. Connect the Sense resistor between this pin and ground.  C3 Comparator input, channel 2. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  MB2 Motor output B, channel 2. Motor current flows from MA2 to MB2 when Phase2 is high.  G7ND G7ND G7ND G7ND G7ND G7ND G7ND G7ND	SOP	Symbol	Description
<ul> <li>MA2</li> <li>Motor output A, channel 2. Motor current flows from MA2 to MB2 when Phase2 is high.</li> <li>Common emitter, channel 2. Connect the Sense resistor between this pin and ground.</li> <li>Comparator input, channel 2. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.</li> <li>MB2</li> <li>MB2 Motor output B, channel 2. Motor current flows from MA2 to MB2 when Phase2 is high.</li> <li>Ground and negative supply. These pins are used for heat sinking. Make sure that all ground pins are soldered onto a suitable large copper ground plane for efficient heat sinking.</li> <li>Logic input, channel 2. It controls, together with the I<sub>12</sub> input, the current level in the output stage.</li> <li>Logic input, channel 2. It controls, together with the I<sub>02</sub> input, the current level in the output stage.</li> <li>PHASE2</li> <li>Controls the direction of the motor current of MA2 and MB2 outputs. Motor current flows from MA2 to MB2 when Phase2 is HIGH.</li> <li>Reference voltage, channel 2. Controls the threshold voltage for the comparator and hence the output current.</li> <li>Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>VR1</li> <li>VR1</li> <li>VR1</li> <li>VR2</li> <li>Reference voltage, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>VR1</li> <li>Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.</li> <li>Clock Oscillator, channel 1. Tontrols the threshold voltage for the comparator and hence the output current.</li> <li>Logic input, channel 1. It controls together with the I<sub>11</sub> input, the current level in the output stage.</li> <li>Logic input, channel 1. It controls, together with the I<sub>11</sub> input, the current level in the output stage.</li> <li>MB1</li> <li>Motor o</li></ul>			
C2 Comparator input, channel 2. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  MB2 Motor output B, channel 2. Motor current flows from MA2 to MB2 when Phase2 is high.  GND Ground and negative supply. These pins are used for heat sinking. Make sure that all ground pins are soldered onto a suitable large copper ground plane for efficient heat sinking.  Logic input, channel 2. It controls, together with the I <sub>12</sub> input, the current level in the output stage.  PHASE2 Controls the direction of the motor current of MA2 and MB2 outputs. Motor current flows from MA2 to MB2 when Phase2 is HIGH.  VR2 Reference voltage, channel 2. Controls the threshold voltage for the comparator and hence the output current.  T2 Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  Vcc Logic voltage supply normally +5V.  T1 Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  VR1 Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.  Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.  Logic input, channel 1. It controls, together with the I <sub>11</sub> input, the current level in the output stage.  MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.	2	MA2	, · · ·
C2 Comparator input, channel 2. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  MB2 Motor output B, channel 2. Motor current flows from MA2 to MB2 when Phase2 is high.  GND Ground and negative supply. These pins are used for heat sinking. Make sure that all ground pins are soldered onto a suitable large copper ground plane for efficient heat sinking.  Logic input, channel 2. It controls, together with the I <sub>12</sub> input, the current level in the output stage.  PHASE2 Controls the direction of the motor current of MA2 and MB2 outputs. Motor current flows from MA2 to MB2 when Phase2 is HIGH.  VR2 Reference voltage, channel 2. Controls the threshold voltage for the comparator and hence the output current.  T2 Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  Vcc Logic voltage supply normally +5V.  T1 Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  VR1 Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.  Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.  Logic input, channel 1. It controls, together with the I <sub>11</sub> input, the current level in the output stage.  MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.	3	E2	Common emitter, channel 2. Connect the Sense resistor between this pin and ground.
<ul> <li>MB2 GND Ground and negative supply. These pins are used for heat sinking. Make sure that all ground pins are soldered onto a suitable large copper ground plane for efficient heat sinking. Logic input, channel 2. It controls, together with the I<sub>12</sub> input, the current level in the output stage.</li> <li>I<sub>12</sub> Logic input, channel 2. It controls, together with the I<sub>12</sub> input, the current level in the output stage.</li> <li>PHASE2 Controls the direction of the motor current of MA2 and MB2 outputs. Motor current flows from MA2 to MB2 when Phase2 is HIGH.</li> <li>VR2 Reference voltage, channel 2. Controls the threshold voltage for the comparator and hence the output current.</li> <li>T2 Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>V<sub>CC</sub> Logic voltage supply normally +5V.</li> <li>T1 Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>VR1 Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.</li> <li>PHASE1 Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.</li> <li>I<sub>11</sub> Logic input, channel 1. It controls, together with the I<sub>01</sub> input, the current level in the output stage.</li> <li>Logic input, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.</li> <li>Comparator input, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.</li> <li>Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.</li> <li>E1 Common emitter, channel 1. Connect the Sense resistor between this pin and ground.</li> </ul>		C2	Comparator input, channel 2. This input senses the instantaneous voltage across the sensing
<ul> <li>GND Ground and negative supply. These pins are used for heat sinking. Make sure that all ground pins are soldered onto a suitable large copper ground plane for efficient heat sinking. Logic input, channel 2. It controls, together with the I<sub>12</sub> input, the current level in the output stage.</li> <li>Logic input, channel 2. It controls, together with the I<sub>02</sub> input, the current level in the output stage.</li> <li>PHASE2 Controls the direction of the motor current of MA2 and MB2 outputs. Motor current flows from MA2 to MB2 when Phase2 is HIGH.</li> <li>Reference voltage, channel 2. Tontrols the threshold voltage for the comparator and hence the output current.</li> <li>Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>VCC</li> <li>Logic voltage supply normally +5V.</li> <li>Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.</li> <li>PHASE1 Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.</li> <li>Logic input, channel 1. It controls, together with the I<sub>01</sub> input, the current level in the output stage.</li> <li>MB1 Logic input, channel 1. It controls, together with the I<sub>11</sub> input, the current level in the output stage.</li> <li>MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.</li> <li>Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.</li> <li>Common emitter, channel 1. Connect the Sense resistor between this pin and ground.</li> </ul>			resistor, filtered through a RC network.
pins are soldered onto a suitable large copper ground plane for efficient heat sinking. Logic input, channel 2. It controls, together with the I <sub>12</sub> input, the current level in the output stage.  Logic input, channel 2. It controls, together with the I <sub>02</sub> input, the current level in the output stage.  Controls the direction of the motor current of MA2 and MB2 outputs. Motor current flows from MA2 to MB2 when Phase2 is HIGH.  VR2 Reference voltage, channel 2. Controls the threshold voltage for the comparator and hence the output current.  Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  Logic voltage supply normally +5V.  T1 Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.  Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.  Logic input, channel 1. It controls, together with the I <sub>01</sub> input, the current level in the output stage.  In Logic input, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  Common emitter, channel 1. Connect the Sense resistor between this pin and ground.	5	MB2	Motor output B, channel 2. Motor current flows from MA2 to MB2 when Phase2 is high.
<ul> <li>Logic input, channel 2. It controls, together with the I<sub>12</sub> input, the current level in the output stage.</li> <li>Logic input, channel 2. It controls, together with the I<sub>12</sub> input, the current level in the output stage.</li> <li>PHASE2</li> <li>Controls the direction of the motor current of MA2 and MB2 outputs. Motor current flows from MA2 to MB2 when Phase2 is HIGH.</li> <li>VR2</li> <li>Reference voltage, channel 2. Controls the threshold voltage for the comparator and hence the output current.</li> <li>Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>V<sub>CC</sub></li> <li>Logic voltage supply normally +5V.</li> <li>Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>VR1</li> <li>Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.</li> <li>PHASE1</li> <li>PHASE1</li> <li>Logic input, channel 1. It controls the threshold voltage for the comparator and hence the output current.</li> <li>Logic input, channel 1. It controls the threshold voltage for the comparator and hence the output current.</li> <li>Logic input, channel 1. It controls the threshold voltage for the comparator and hence the output current.</li> <li>Logic input, channel 1. It controls together with the I<sub>01</sub> input, the current level in the output stage.</li> <li>Logic input, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.</li> <li>Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.</li> <li>Common emitter, channel 1. Connect the Sense resistor between this pin and ground.</li> </ul>	6,7,18,19	GND	Ground and negative supply. These pins are used for heat sinking. Make sure that all ground
stage.  Logic input, channel 2. It controls, together with the l <sub>02</sub> input, the current level in the output stage.  Controls the direction of the motor current of MA2 and MB2 outputs. Motor current flows from MA2 to MB2 when Phase2 is HIGH.  Reference voltage, channel 2. Controls the threshold voltage for the comparator and hence the output current.  Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  Vcc Logic voltage supply normally +5V.  Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  VR1 Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.  PHASE1 PHASE1 Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.  Logic input, channel 1. It controls, together with the I <sub>01</sub> input, the current level in the output stage.  In MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  Common emitter, channel 1. Connect the Sense resistor between this pin and ground.			
<ul> <li>I<sub>12</sub> Logic input, channel 2. It controls, together with the I<sub>02</sub> input, the current level in the output stage.</li> <li>Controls the direction of the motor current of MA2 and MB2 outputs. Motor current flows from MA2 to MB2 when Phase2 is HIGH.</li> <li>VR2 Reference voltage, channel 2. Controls the threshold voltage for the comparator and hence the output current.</li> <li>T2 Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>V<sub>CC</sub> Logic voltage supply normally +5V.</li> <li>T1 Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>VR1 Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.</li> <li>PHASE1 Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.</li> <li>I<sub>11</sub> Logic input, channel 1. It controls, together with the I<sub>01</sub> input, the current level in the output stage.</li> <li>I<sub>01</sub> Logic input, channel 1. It controls, together with the I<sub>11</sub> input, the current level in the output stage.</li> <li>MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.</li> <li>Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.</li> <li>E1 Common emitter, channel 1. Connect the Sense resistor between this pin and ground.</li> </ul>	8	l <sub>02</sub>	Logic input, channel 2. It controls, together with the I <sub>12</sub> input, the current level in the output
Stage. Controls the direction of the motor current of MA2 and MB2 outputs. Motor current flows from MA2 to MB2 when Phase2 is HIGH.  VR2 Reference voltage, channel 2. Controls the threshold voltage for the comparator and hence the output current.  Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  Vcc Logic voltage supply normally +5V.  T1 Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  VR1 Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.  Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.  Logic input, channel 1. It controls, together with the I <sub>01</sub> input, the current level in the output stage.  Logic input, channel 1. It controls, together with the I <sub>11</sub> input, the current level in the output stage.  MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.			
<ul> <li>PHASE2 Controls the direction of the motor current of MA2 and MB2 outputs. Motor current flows from MA2 to MB2 when Phase2 is HIGH.</li> <li>VR2 Reference voltage, channel 2. Controls the threshold voltage for the comparator and hence the output current.</li> <li>T2 Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>V<sub>CC</sub> Logic voltage supply normally +5V.</li> <li>T1 Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>VR1 Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.</li> <li>PHASE1 Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.</li> <li>Logic input, channel 1. It controls, together with the I<sub>01</sub> input, the current level in the output stage.</li> <li>Logic input, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.</li> <li>MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.</li> <li>Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.</li> <li>Common emitter, channel 1. Connect the Sense resistor between this pin and ground.</li> </ul>	9	I <sub>12</sub>	
MA2 to MB2 when Phase2 is HIGH.  Reference voltage, channel 2. Controls the threshold voltage for the comparator and hence the output current.  Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  Logic voltage supply normally +5V.  Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  VR1 Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.  PHASE1 Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.  Logic input, channel 1. It controls, together with the I <sub>01</sub> input, the current level in the output stage.  In MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  Common emitter, channel 1. Connect the Sense resistor between this pin and ground.			
<ul> <li>VR2 Reference voltage, channel 2. Controls the threshold voltage for the comparator and hence the output current.</li> <li>T2 Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>V<sub>CC</sub> Logic voltage supply normally +5V.</li> <li>T1 Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>VR1 Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.</li> <li>PHASE1 PHASE1 Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.</li> <li>I<sub>11</sub> Logic input, channel 1. It controls, together with the I<sub>01</sub> input, the current level in the output stage.</li> <li>I<sub>01</sub> Logic input, channel 1. It controls, together with the I<sub>11</sub> input, the current level in the output stage.</li> <li>MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.</li> <li>C1 Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.</li> <li>E1 Common emitter, channel 1. Connect the Sense resistor between this pin and ground.</li> </ul>	10	PHASE2	
the output current.  T2 Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  Logic voltage supply normally +5V.  T1 Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.  PHASE1 Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.  Logic input, channel 1. It controls, together with the I <sub>01</sub> input, the current level in the output stage.  MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  C1 Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  Common emitter, channel 1. Connect the Sense resistor between this pin and ground.			
T2 Clock Oscillator, channel 2. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  Logic voltage supply normally +5V.  Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  VR1 Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.  PHASE1 Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.  Logic input, channel 1. It controls, together with the I <sub>01</sub> input, the current level in the output stage.  Logic input, channel 1. It controls, together with the I <sub>11</sub> input, the current level in the output stage.  MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  Common emitter, channel 1. Connect the Sense resistor between this pin and ground.	11	VR2	
between T and ground.  Logic voltage supply normally +5V.  Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.  PHASE1 Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.  Logic input, channel 1. It controls, together with the I <sub>01</sub> input, the current level in the output stage.  Logic input, channel 1. It controls, together with the I <sub>11</sub> input, the current level in the output stage.  MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  Common emitter, channel 1. Connect the Sense resistor between this pin and ground.			•
<ul> <li>V<sub>CC</sub> T1 Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.</li> <li>VR1 Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.</li> <li>PHASE1 Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.</li> <li>Logic input, channel 1. It controls, together with the I<sub>01</sub> input, the current level in the output stage.</li> <li>Logic input, channel 1. It controls, together with the I<sub>11</sub> input, the current level in the output stage.</li> <li>MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.</li> <li>Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.</li> <li>Common emitter, channel 1. Connect the Sense resistor between this pin and ground.</li> </ul>	12	T2	
T1 Clock Oscillator, channel 1. Timing pin connect a 56kΩ resistance and a 820pF in parallel between T and ground.  NR1 Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.  Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.  Logic input, channel 1. It controls, together with the I <sub>01</sub> input, the current level in the output stage.  Logic input, channel 1. It controls, together with the I <sub>11</sub> input, the current level in the output stage.  MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  Common emitter, channel 1. Connect the Sense resistor between this pin and ground.	40	.,	
between T and ground. Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current. Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH. Logic input, channel 1. It controls, together with the I <sub>01</sub> input, the current level in the output stage. Logic input, channel 1. It controls, together with the I <sub>11</sub> input, the current level in the output stage. MB1 Comparator input, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high. Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network. Common emitter, channel 1. Connect the Sense resistor between this pin and ground.			
Reference voltage, channel 1. Controls the threshold voltage for the comparator and hence the output current.  Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.  Logic input, channel 1. It controls, together with the I <sub>01</sub> input, the current level in the output stage.  Logic input, channel 1. It controls, together with the I <sub>11</sub> input, the current level in the output stage.  MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  Common emitter, channel 1. Connect the Sense resistor between this pin and ground.	14	11	l ' '
the output current.  Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.  Logic input, channel 1. It controls, together with the I <sub>01</sub> input, the current level in the output stage.  Logic input, channel 1. It controls, together with the I <sub>11</sub> input, the current level in the output stage.  MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  Common emitter, channel 1. Connect the Sense resistor between this pin and ground.	45	\/D4	
PHASE1 Controls the direction of the motor current of MA1 and MB1 outputs. Motor current flows from MA1 to MB1 when Phase1 is HIGH.  Logic input, channel 1. It controls, together with the I <sub>01</sub> input, the current level in the output stage.  Logic input, channel 1. It controls, together with the I <sub>11</sub> input, the current level in the output stage.  MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  Common emitter, channel 1. Connect the Sense resistor between this pin and ground.	15	VRT	
MA1 to MB1 when Phase1 is HIGH.  Logic input, channel 1. It controls, together with the I <sub>01</sub> input, the current level in the output stage.  Logic input, channel 1. It controls, together with the I <sub>11</sub> input, the current level in the output stage.  MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  Common emitter, channel 1. Connect the Sense resistor between this pin and ground.	16		
Logic input, channel 1. It controls, together with the I <sub>01</sub> input, the current level in the output stage.  Logic input, channel 1. It controls, together with the I <sub>11</sub> input, the current level in the output stage.  MB1 C1 MB1 C1 Comparator input, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high. Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  Common emitter, channel 1. Connect the Sense resistor between this pin and ground.	10	PHASE	
stage.  Logic input, channel 1. It controls, together with the I <sub>11</sub> input, the current level in the output stage.  MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high.  Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  E1 Common emitter, channel 1. Connect the Sense resistor between this pin and ground.	17		
Logic input, channel 1. It controls, together with the I <sub>11</sub> input, the current level in the output stage.  MB1 C1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high. Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  E1 Common emitter, channel 1. Connect the Sense resistor between this pin and ground.	17	<sup>1</sup> 11	
stage.  MB1 C1 C1 MB1 C3 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high. Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network. Common emitter, channel 1. Connect the Sense resistor between this pin and ground.	20	la.	
MB1 Motor output B, channel 1. Motor current flows from MA1 to MB1 when Phase1 is high. C1 Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network. Common emitter, channel 1. Connect the Sense resistor between this pin and ground.	20	<b>'</b> 01	
C1 Comparator input, channel 1. This input senses the instantaneous voltage across the sensing resistor, filtered through a RC network.  Common emitter, channel 1. Connect the Sense resistor between this pin and ground.	21	MR1	
resistor, filtered through a RC network.  Common emitter, channel 1. Connect the Sense resistor between this pin and ground.			l
23 E1 Common emitter, channel 1. Connect the Sense resistor between this pin and ground.	<u></u>	"	
Continue of the control of the contr	23	E1	, · · · · · · · · · · · · · · · · · · ·

# **NJM6219**

# ■ ABSOLUTE MAXIMUM RETINGS

(Ta=25°C)

PARAMETER	SYMBOL	MIN.	MAX.	UNIT		
Voltage						
Logic Supply	$V_{CC}$	0	7	V		
Motor Supply	$V_{MM}$	0	45	V		
Logic Input Voltage	$V_{l}$	-0.3	$V_{CC}$	V		
Comparator Input Voltage	$V_{C}$	-0.3	$V_{CC}$	V		
Reference Input Voltage	V <sub>C</sub>	-0.3	$V_{CC}$	V		
Current						
Motor Output Current	I <sub>M</sub>	-1000	+1000	mA		
Logic Input Current	I	-10	ı	mA		
Analog Input Current	I <sub>A</sub>	-10	-	mA		
TSOPerature						
Operating TSOPerature	T <sub>opr</sub>	-40	85	°C		
Storage TSOPerature	T <sub>stg</sub>	-55	150	°C		

# ■ RECOMMENDED OPERATING CONDITIONS

PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT
Logic Supply	$V_{CC}$	4.75	5.00	5.25	V
Motor Supply	$V_{MM}$	4	-	40	V
Motor Output Current	I <sub>M</sub>	-800	-	800	mA
Operating Junction TSOPerature	Tj	-20	-	+125	°C
Rise time Logic Inputs	t <sub>r</sub>	-	-	2	μS
Fall Time Logic Inputs	t <sub>f</sub>	-	-	2	μS

# ■ ERECTRICAL CHARACTERISTICS ( $T_j$ =+25°C, $V_{CC}$ =5V, $V_{MM}$ =40V, $C_T$ =820pF, $R_T$ =56k $\Omega$ )

PARAMETER	SYMBOL	CONDITION	MIN.	TYP.	MAX.	UNIT	
General							
Supply Current	I <sub>CC</sub>		-	-	60	mA	
Turn Off	td	dVc/dt≥50mV/μs	-	0.9	-	μS	
Thermal Shutdown TSOPerature	TSD		-	170	-	°C	
Logic Input							
H Level Input Voltage	V <sub>IH</sub>		2.0	-	-	V	
L Level Input Voltage	V <sub>IL</sub>		-	-	8.0	V	
H Level Input Current	I <sub>IH</sub>	V <sub>I</sub> =2.4V	-	-	20	μΑ	
L Level Input Current	I <sub>IL</sub>	V <sub>I</sub> =0.4V	-250	-	-	μΑ	
Input Resistance							
Input Resistance	$R_R$		-	8.8	-	kΩ	
Analog Input							
Threshold Voltgae	V <sub>CH</sub>	V <sub>R</sub> =5.0V,I <sub>0</sub> =I <sub>1</sub> =L	405	450	495	mV	
	$V_{CM}$	V <sub>R</sub> =5.0V,I <sub>0</sub> =H,I <sub>1</sub> =L	284	315	347	mV	
Input Current	V <sub>CL</sub>	V <sub>R</sub> =5.0V,I <sub>0</sub> =L,I <sub>1</sub> =H	134 -20	150	163	mV	
	I <sub>C</sub>		-20	-	-	μ <b>A</b>	
Motor Output							
Lower Transistor Saturation Voltage	$V_{OL}$	$I_{M}$ =500mA $I_{M}$ =800mA	-	1.1 1.3	1.4 1.7	V	
	.,	I <sub>M</sub> =500mA	-	1.1	1.4	V	
Upper Transistor Saturation Voltage	V <sub>OU</sub>	I <sub>M</sub> =800mA	-	1.3	1.7	V	
Lower Diode Forward Voltage Drop	V <sub>fL</sub>	I <sub>M</sub> =500mA	-	1.0	1.3	V	
		I <sub>M</sub> =800mA	-	1.2	1.6	V	
Upper Diode Forward Voltage Drop	$V_{fU}$	I <sub>M</sub> =500mA   I <sub>M</sub> =800mA	-	1.1 1.3	1.4 1.7	V	
Output Leak Current	I <sub>IL</sub>	I <sub>0</sub> =I <sub>1</sub> =H	-	-	100	μA	
Monostable							
Cut Off Time	t <sub>off</sub>		-	31	-	μS	

# **■ THERMAL CHARACTERISTICS**

PARAMETER	SYMBOL	CONDITION	MIN.	TYP.	MAX.	UNIT
The man I Decistores	Rth <sub>J-GND</sub>		-	13	-	°C
Thermal Resistance	Rth <sub>J-A</sub>	Note2	-	42	-	°C

# Notes

- 1. All voltages are with respect to ground. Currents are positive into, negative out of specified terminal.
- 2. All ground pins soldered onto 20cm<sup>2</sup> PCB copper area with free air condition, T<sub>A</sub>=25°C.

# **■ TYPICAL APPLICATION CIRCUIT**


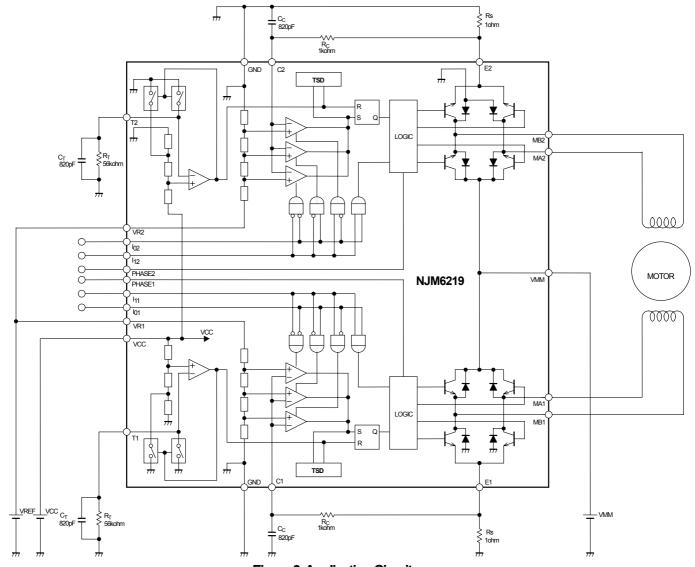


Figure 3. Application Circuit

# **■ TYPICAL APPLICATION CIRCUIT**

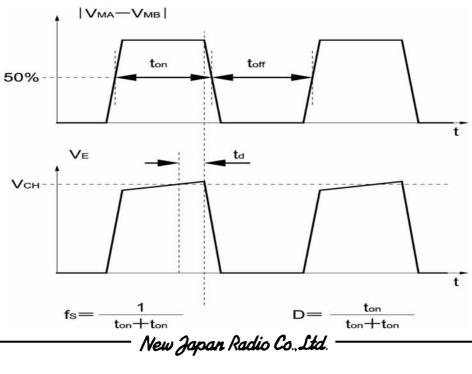

#### **■ FUNCTIONAL DESCRIPTION**

The NJM6219 is intended to drive a bipolar constant current through one winding of a 2-phase stepper motor.

Current control is achieved through switched-mode regulation, see figure 4 and 5.

Three different current levels and zero current can be selected by the input logic.

The circuit contains the following functional blocks:

- Input logic
- Current sense
- Single-pulse generator
- Output stage

### Input logic

### Phase input

The phase input determines the direction of the current in the motor winding. High input forces the current from terminal  $M_A$  to  $M_B$  and low input from terminal  $M_B$  to  $M_A$ . A Schmitt trigger provides noise immunity and a delay circuit eliminates the risk of cross conduction in the output stage during a phase shift.

Half- and full-step operation is possible.

#### Current level selection.

The status of  $I_0$  and  $I_1$  inputs determines the current level in the motor winding. Three fixed current levels can be selected according to the table below.

Motor current		$I_0$	I <sub>1</sub>
High level	100%	L	L
Medium level	60%	Н	L
Low level	20%	L	Н
Zero current	0%	Н	Н

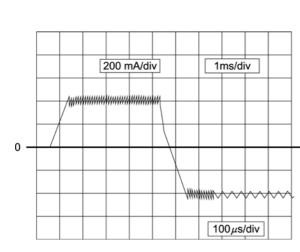


Figure 4. Motor current (I<sub>M</sub>), Vertical: 200 mA/div, Horizontal: 1 ms/div, expanded part 100 µs/div.

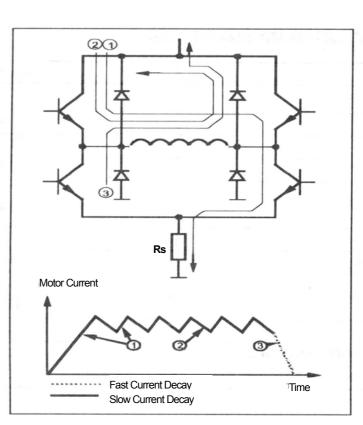


Figure 5. Output stage with current pathsfor fast and slow current decay.

# NJM6219

The specific values of the different current levels are determined by the reference voltage  $V_R$  together with the value of the sensing resistor  $R_S$ .

The peak motor current can be calculated as follows:

 $i_m = (V_R \cdot 0.080) / R_S [A]$ , at 100% level

 $i_m = (V_R \cdot 0.050) / R_S [A]$ , at 60% level

 $i_m = (V_R \cdot 0.016) / R_S [A]$ , at 20% level

The motor current can also be continuously varied by modulating the voltage reference input.

#### **Current sensor**

The current sensor contains a reference voltage divider and three comparators for measuring each of the selectable current levels. The motor current is sensed as a voltage drop across the current sensing resistor, R<sub>S</sub>, and compared with one of the voltage references from the divider. When the two voltages are equal, the comparator triggers the single-pulse generator. Only one comparator at a time is activated by the input logic.

#### Single-pulse generator

The pulse generator is a monostable multivibrator triggered on the positive edge of the comparator output. The multivibrator output is high during the pulse time,  $t_{off}$ , which is determined by the timing components  $R_T$  and  $C_T$ .

The single pulse switches off the power feed to the motor winding, causing the winding to decrease during to the same triangle pulse switches off the power feed to the motor winding, causing the winding to decrease during to the same triangle pulse.

If a new trigger signal should occur during toff, it is ignored.

#### **Output stage**

The output stage contains four transistors and four diodes, connected in an H-bridge. Note that the upper recirculation diodes are connected to the circuit externally. The two sinking transistors are used to switch the power supplied to the motor winding, thus driving a constant current through the winding. See figures 4 and 5.

#### Overload protection

The circuit is equipped with a thermal shut-down function, which will limit the junction tSOPerature. The output current will be reduced if the maximum permissible junction tSOPerature is exceeded. It should be noted, however, that it is not short circuit protected.

# Operation

When a voltage  $V_{MM}$  is applied across the motor winding, the current rise follows the equation:

 $i_m = (V_{MM} / R) \cdot (1 - e^{-(R \cdot t)/L})$ 

R = Winding resistance

L = Winding inductance


t = time

(see figure 5, arrow 1)

The motor current appears across the external sensing resistor,  $R_S$ , as an analog voltage. This voltage is fed through a low-pass filter,  $R_CC_C$ , to the voltage comparator input (pin 4 and pin 22). At the moment the sensed voltage rises above the comparator threshold voltage, the monostable is triggered and its output turns off the conducting sink transistor. The polarity across the motor winding reverses and the current is forced to circulate through the appropriate upper protection diode back through the source transistor (see figure 5, arrow 2).

After the monostable has timed out, the current has decayed and the analog voltage across the sensing resistor is below the comparator threshold level. The sinking transistor then turns on and the motor current starts to increase again, The cycle is repeated until the current is turned off via the logic inputs. When both  $I_1$  and  $I_0$  are high, all four transistors in the output H-bridge are turned off, which means that inductive current recirculates through two opposite free-wheeling diodes (see figure 5, arrow 3). this method of turning off the current results in a faster current decay than if only one transistor was turned off and will therefore improve speed performance in half-stepping mode.

# **■ PRINCIPAL OPERATING SEQUENCE**

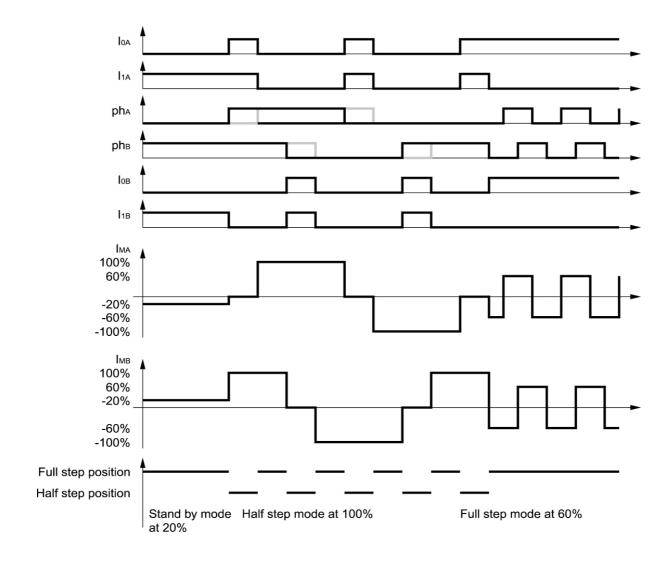

#### **■ APPLICATIONS INFORMATION**

#### **Motor selection**

Some stepper motors are not designed for continuous operation at maximum current. As the circuit drives a constant current through the motor, its tSOPerature can increase, both at low- and high-speed operation.

Some stepper motors have such high core losses that they are not suited for switched-mode operation.

#### Interference

As the circuit operates with switched-mode current regulation, interference-generation problems can arise in some applications. A good measure is then to decouple the circuit with a 0.1 µF ceramic capacitor, located near the package across the power line VMM and ground.

Also make sure that the  $V_{Ref}$  input is sufficiently decoupled. An electrolytic capacitor should be used in the +5V rail, close to the circuit.

The ground leads between  $R_S$ ,  $C_C$  and circuit GND should be kept as short as possible. This applies also to the leads connecting  $R_S$  and  $R_C$  to pin 22 and pin 23, pin 4 and pin 3 respectively.

In order to minimize electromagnetic interference, it is recommended to route  $M_A$  and  $M_B$  leads in parallel on the printed circuit board directly to the terminal connector. The motor wires should be twisted in pairs, each phase separately, when installing the motor system.

#### **Unused inputs**

Unused inputs should be connected to proper voltage levels in order to obtain the highest possible noise immunity.

#### Ramping

A stepper motor is a synchronous motor and does not change its speed due to load variations. This means that the torque of the motor must be large enough to match the combined inertia of the motor and load for all operation modes. At speed changes, the requires torque increases by the square, and the required power by the cube of the speed change. Ramping, i.e., controlled acceleration or deceleration must then be considered to avoid motor pullout.

#### VCC, VMM

The supply voltages, VCC and VMM, can be turned on or off in any order. Normal dv/dt values are assumed.

Before a driver circuit board is removed from its system, all supply voltages must be turned off to avoid destructive transients being generated by the motor.

#### **Switching frequency**

The motor inductance, together with the pulse time,  $t_{\text{off}}$ , determines the switching frequency of the current regulator. The choice of motor may then require other values on the  $R_T$ ,  $C_T$  components than those recommended in figure 3, to obtain a switching frequency above the audible range. Switching frequencies above 40 kHz are not recommended because the current regulation can be affected.

#### **Analog control**

As the current levels can be continuously controlled by modulating the V<sub>R</sub> input, limited microstepping can be achieved.

#### Sensor resistor

The  $R_S$  resistor should be of a noninductive type power resistor. A 1.0 ohm resistor, tolerance  $\leq$  1%, is a good choice for 415 mA max motor current at  $V_R = 5V$ .

The peak motor current, i<sub>m</sub>, can be calculated by using the formula:


 $i_m = (V_R \cdot 0.080) / R_S [A]$ , at 100% level

 $i_m = (V_R \cdot 0.050) / R_S [A]$ , at 60% level


 $i_m = (V_R \cdot 0.016) / R_S [A]$ , at 20% level

#### **■ TYPICAL CHARACTERISTICS**

VCC VS. ICC @NJM6219 I0=I1=LOW

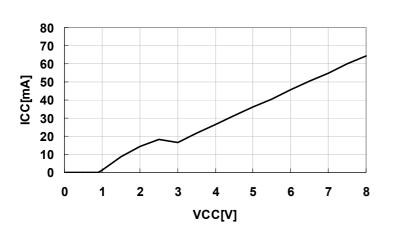



VCC VS. ICC @NJM6219 I0=I1=HIGH

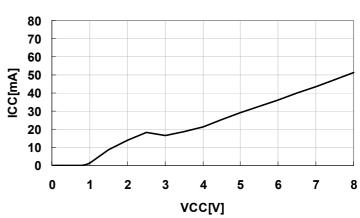

COMP input Voltage VS. COMP input Current @NJM6219 VCC=VR=5V I0=I1=LOW


COMP input Voltage VS. COMP input Current @NJM6219 VCC=VR=5V I0=LOW I1=HIGH

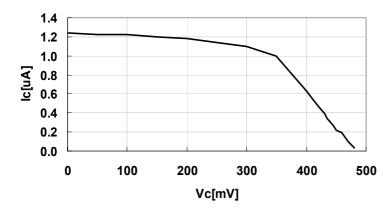


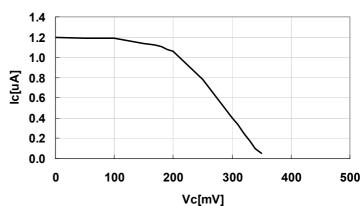

COMP input Voltage VS. COMP input Current @NJM6219 VCC=VR=5V I0=HIGH I1=LOW


Phase input Voltage VS. Phase input Current @NJM6219 VCC=VR=5V

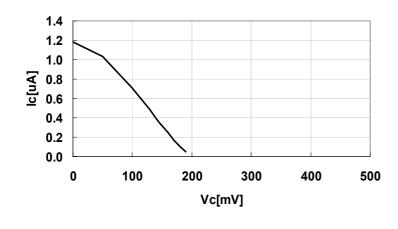

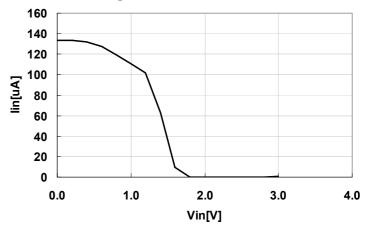


### **■ TYPICAL CHARACTERISTICS**

# **Power Dissipation vs Motor Current** NJM6219(1ch Drive)VCC=5V, VMM=40V, ta=25°C

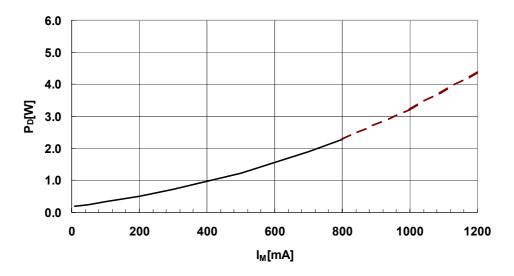

# **Power Dissipation vs Motor Current** NJM6219(2ch Drive)VCC=5V, VMM=40V, ta=25°C

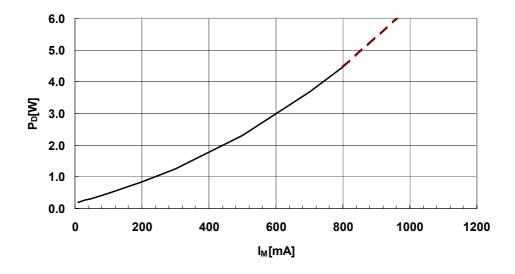

[CAUTION]
The specifications on this databook are only given for information , without any guarantee as regards either mistakes or omissions. The application circuits in this databook are application oricins in this databook are described only to show representative usages of the product and not intended for the guarantee or permission of any right including the industrial rights.