

PRELIMINARY

 
#### 3.1/2 DIGIT SINGLE CHIP DIGITAL MULTIMETER LSI

#### **■** GENERAL DESCRIPTION

The NJU9207B is 3.1/2 digit single chip digital multimeter LSI with auto-ranging function containing 3.1/2 digit dual-slope A/D converter, voltage reference, controller, oscillator, battery-life detector and LCD driver.

The NJU9207B is most suitable for the pocket type digital multimeter because of low operating voltage(3V) and functions of auto-ranging, display hold, LCD display, piezo buzzer direct driving and battery life indicator.

#### PACKAGE OUTLINE




NJU9207BF


#### ■ FEATURES

- Low Operating Current
- Low Operating Voltage (3V)
- Dual-slope A/D Converter
- Auto-ranging
- Holding Function (Data, Range)
- LCD Display Direct Driving
- Voltage Doubler for LCD Driver On-chip
- Voltage Regulator for LCD Driving
- Piezo Buzzer Direct Driving
- Power-on Initialize
- Battery-life Detector
- Package Outline -- QFP 80
- C-MOS Technology

#### ■ PIN CONFIGURATION

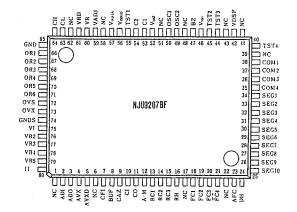

#### BLOCK DIAGRAM

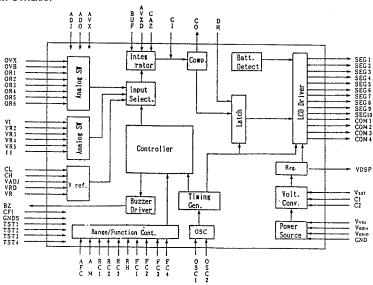



### ■ TERMINAL DESCRIPTION

NO.	SYMBOL	F U N C T I O N
2 3	ADI ADO	AC → DC Conversion Input Terminal AC → DC Conversion Output Terminal
4 5	AVX AVXD	ADC "+" Input Terminal in AC Voltage Input ADC "-" Input Terminal in AC Voltage Input
7	CF1	Noise Filter Capacitor Connecting Terminal
8	BUF	Buffer Amplifier Output
9 10 11	CAZ CI CO	Auto-Zero Capacitor Connecting Terminal Integral Capacitor Connecting Terminal Comparator Output Terminal
12	A/M	Auto/Manual Selecting H Level: Auto Input Terminal L Level: Manual
13-15	RC1-RC3	Range Selecting Terminals (Note 1)
16 24	RH DH	Range Hold Terminal L Level: Range Hold (Note 1) Display Data Hold Mode Selecting Terminal: Toggle Mode
18-21	FC1-FC4	Function Selecting Terminals (Note 1)
23	AFC	Range Limit Mode H Level: Range Limit Mode (Note 1) Selecting Terminal L Level: Full Range Mode
34-25 38-35 42	SEG1-10 COM1-4 VDSP	LCD Segment Driver Output Terminals LCD Common Driver Output Terminals LCD Driving Voltage Monitor Terminal
47	BZ	Piezo Buzzer Driving Output Terminal
49,50	OSC2, OSC1	Quartz Crystal Connecting Terminals
53,54	C1,C2	Voltage Doubler Capacitor Connecting Terminals
59 60 61	VADJ VR VRD	Reference Voltage Adjustment Terminal Reference Voltage Output Terminal Reference Voltage Monitor Terminal
63,64	CL,CH	Reference Capacitor Connecting Terminals
66-71	OR1-6	Reference Resistor Connecting Terminals for Resistance Measurement
72 73	OVS OVX	Reference Voltage Input Terminal for Resistance Measurement Measuring Voltage Input Terminal for Resistance Measurement
75	VI	Voltage Measurement Input Terminal
76-79	VR2-VR5	Bleeder Resistor Connecting Terminals
80	[]	Current Measurement Input Terminal
55,45 44,40	TST1,2 TST3,4	Test Terminals 1,2 Test Terminals 3,4 (Normally Open)
46 52 56 57 65 74	Vss1 Vss2 Vddid Vddia GND GNDS	Analog, Digital GND Terminal OV LCD Driving Voltage Supply Terminal -3V Digital Block Voltage Supply Terminal +3V Analog Block Voltage Supply Terminal +3V Analog Block Center point Voltage Supply Terminal +1.5V GND Sensing Terminal in Integral Operation

(Note 1) With Pull-Up resistance except the A/M terminal.



#### **FUNCTIONAL DESCRIPTION**

#### (1) MEASUREMENT FUNCTION

Measurement Function	Range		Auto or Manual		
DC Voltage	200mV~400V	5-Range	Auto/Manual Range		
AC Voltage	2V ~ 2000V	4-Range	Auto/Manual Range		
Resistance	100Ω~20MΩ	6-Range	Auto/Manual Range		
DC Current	2mA ~ 20A	5-Range	Manual Range		
AC Current	2mA ~ 20A	5-Range	Manual Range		
Diode Check					
Continuity Check			•		

(2) MEASUREMENT FUNCTION SELECTION (By the FC1  $\sim$  FC4 terminals input)

FUNCTION	FC1	FC2	FC3	FC4
DCV ACV DCI ACI Ω →+ CONTI	エーエーエエエ	###	XXXX	X

- (3) MEASUREMENT FUNCTION SELECTION SWITCH
  The mechanical lock type or rotary type switch is required.
- (4) THE KEY INPUT CONFIRMATION SOUND OF SWITCH OPERATION / SYSTEM RESET
  Piezo buzzer driving signal for the key input confirmation sound and the system reset signal are
  output, when the switch is operated.
  - a) THE KEY INPUT CONFIRMATION SOUND SIGNAL(2kHz)
    2kHz clock is output from BZ terminal about 31.25mS period at the rising or falling edge of input signals to the FC1 ~ FC4 terminals. This signal can drive a Piezo Buzzer directly.

FC1 ~ FC4	
ВΖ	 31.25mS



#### b) SYSTEM RESET SIGNAL

The range-set, counter-reset, data-hold-release and auto-reset are performed synchronizing the rising or falling edge of input signals to the FC1  $\sim$  FC4 terminals.

#### [Range-Set]

 
When the function was changed in the auto-range mode, the range is set depending on the FAFCJ terminal level as follows:

FUNCTION	[AFC]	:[լյ	[AFC]: [H]		
FUNCTION	RANGE	POINT	RANGE	POINT	
DCV ACV DCI ACI Ω →+ CONTI	200mV 2 V 200mA 200mA 200Ω 2 V 2kΩ	P1 P3 P1 P1 P1 P3 P3	2 V 2 V 200mA 200mA 2kΩ 2 V 2kΩ	P3 P3 P1 P1 P3 P3 P3	



#### [COUNTER RESET]

When the function is changed even if the A/D conversion period, the counter reset signal is output internally and the LSI is initialized. Afterward, the A/D conversion is start from auto-zero cycle.



#### (5) CONTINUITY CHECK FUNCTION

 
When select continuity check function,  $2k\Omega$  range of  $k\Omega$  function is set automatically. If the measured value is under  $300\Omega$ , the buzzer sound is output continuously and the measured resistor value is displayed.

#### (6) DIODE CHECK FUNCTION

When select diode check function,  $2k\Omega$  range of  $k\Omega$  function is set automatically and measured a diode forward voltage by supplied 1.5V. If the input terminals are open, the voltage corresponding to the battery voltage is displayed.



- (7) FULL AUTO-RANGE FUNCTION (A/M=H Level)
  - ① The following flow is performed by range control terminal (RC1):



Apply the Momentary-type switch for the range control.

Full Range Mode (AFC=L Level)

TUNOTION	AUTO		MANUAL	RANGE CONTROL	
FUNCTION		1 PUSH 1 PUSH (<		NANGE CONTROL	
D C V A C V D C I A C I	RNG1 ~ RNG5 RNG1 ~ RNG4 Fix to RNG1 Fix to RNG1	→ HOLD → HOLD RNG1 RNG1	RNGi→RNGi+1 (RNG5→RNG1) RNGi→RNGi+1 (RNG4→RNG1) RNG1 RNG1	200mV ~ 2000V 2V ~ 2000V 200mA 200mA	
Ω	RNG1 ∼ RNG6	$\rightarrow$ HOLD	RNGi→RNGi+1 (RNG6→RNG1)	$200\Omega \sim 20M\Omega$	

#### Range Control Mode (AFC=H Level)

FUNOTION	AUTO		MANUAL	RANGE CONTROL
FUNCTION		1 PUSH	1 PUSH (<1sec.)	NANGE CONTINUE
D C V A C V D C I A C I	RNG1 ~ RNG4 RNG1 ~ RNG4 Fix to RNG1 Fix to RNG1	→ HOLD → HOLD RNG1 RNG1	RNGi→RNGi+1 (RNG4→RNG1) RNGi→RNGi+1 (RNG4→RNG1) RNG1 RNG1	2V ~ 2000V 2V ~ 2000V 200mA 200mA
Ω	RNG1 ∼ RNG4	→ HOLD	RNGi→RNGi+1 (RNG4→RNG1)	2kΩ ~ 2000kΩ

#### 2 AUTO-RETURN FUNCTION

When the range selecting terminal is kept L level over than 1 sec or a function is changed by FC1~FC4 terminals, the range can be changed a function to auto range from any fixed range.

#### 3 RANGE HOLD FUNCTION

When the range hold terminal is L level, the range is fixed to the operated range. And the input signal to the range selecting terminal (RC1) is disregarded.

#### 4 THE RANGE SELECTING CONFIRMATION SIGNAL

2kHz clock is output on BZ terminal about 31.25mS period at the falling edge of the RC1 terminal input. This signal can drive a Piezo Buzzer directly.





#### (8) MANUAL RANGE FUNCTION (A/M=L Level)

① Manual range is selected by RC1~RC3 as follows:

 
RC1	RC2	RC3	DCV	ACV	DCI,ACI	Ω
Н	Н	Н	RNG2, 2V	RNG1, 2V	RNG1, 2mA	RNG2, 2KΩ
L	H	H	RNG3, 20V	RNG2, 20V	RNG2, 20mA	RNG3, 20KΩ
Н	L	н	RNG4, 200V	RNG3, 200V	RNG3, 200mA	RNG4, 200KΩ
L	l L	H	RNG5, 2000V	RNG4, 2000V	RNG4, 2000mA	RNG5, 2000ΚΩ
Н	Н	L	RNG5, 2000V	RNG4, 2000V	RNG5, 20A	RNG6, 20MΩ
L	Н	L	RNG1, 200mV	RNG1, 2V	RNG1, 2mA	RNG1, 200Ω

② MODE CHANGE OPERATION CONFIRMATION SOUND SIGNAL(2kHz) 2kHz clock is output on BZ terminal about 31.25mS period at the rising or falling edge of RC1 ∼ RC3 terminals input. This signal can drive a Piezo Buzzer directly.



#### (9) CHATTER-FREE FUNCTION

All input terminals for control are build with the chatter-free circuits which eliminate chattering input less than 62.5mS



#### (10) BUZZER DRIVING SIGNAL

Adding to the switch operation confirmation signal output by FC1  $\sim$  FC4 and RC1  $\sim$  RC3, the buzzer driving signals is also output at the following conditions.

① Alarm sound for over range (except  $\Omega$ )




2 Confirmation for continuity




 


#### (11) LCD DISPLAY FUNCTION

· LCD Display pattern

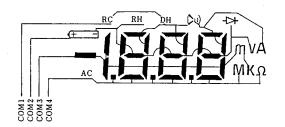

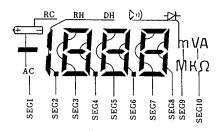



#### · Segment Assignment

7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7	SEG1	SEG2	SEG3	SEG4	SEG5	SEG6	SEG7	SEG8	SEG9	SEG10
COM 1	RC	DH	a2	b2	a1	b1	a0	b0	X)	A
COM 2	BATT	RH	f2	g2	f1	g1	f0	g0	<b>≯</b>	٧
COM 3	_	b3/c3	e2	c2	e1	c1	e0	, c0	· m	K
COM 4	AC	р3	d2	p2	d1	p1	d0		М	Ω



- · Display Mark Explanation
- ① [BATT MARK] ( 4 )

[q + -1] is displayed when either the  $V_{DD}$  or  $V_{SS}$  becomes lower than 1.1V $\sim$ 1.3V.

- ② [-]
  - [-] is displayed when the DCV or DCl input is "-".
- ③ [AC]
  - [AC] is displayed when the ACV or ACI mode is selected.
- ④ [RH]
  - [RH] is displayed when the RH terminal is input L level in the AUTO range(A/M=H) mode.
- [S] [RC] [RC] is displayed when the range is controlled by RC1 terminal in the AUTO range(A/M=H) mode.
- (K) (B)
  - [>] is displayed when the continuity check function is selected.
- ⑦ [₩]
  - [>] is displayed when the diode check function is selected.
- (HD]
  - [DH] is displayed and the data is hold when the DH switch is pushed a time. When DH switch is pushed once again, [DH] is disappeared and the data holding is released.
- [mV]
  - [mV] is displayed when 200mV range of DCV is selected.
- ① [V]
  - [V] is displayed when 2V, 20V, 200V and 2000V range of DCV and ACV is selected.
- $(\Omega)$ 
  - [ $\Omega$ ] is displayed when the 200 $\Omega$  range is selected.
- ② [kΩ]
  - [k $\Omega$ ] is displayed when  $2k\Omega$ ,  $20k\Omega$ ,  $200k\Omega$  and  $2000k\Omega$  range and the continuity check function is selected.
- (Β) [MΩ]
  - [M $\Omega$ ] is displayed when the 20M $\Omega$  range is selected.
- (14) [mA]
  - [mA] is displayed when mA range of DC and AC is selected.
- (15) FA7
  - [A] is displayed when 20A range of DC and AC is selected.
- ® Over flow display
  - When an input signal is over flow, the display indicates [1000] with blinking most significant digit, though the internal counter counts up to [2000]. And if the input value becomes over than [2000] count, the lower 3 digit always displays [000].
- The Polarity [-] display [-] is not displayed when the ACV, ACI,  $\Omega$  and CONT1 mode is selected and display value is [000].
- (B) Data hold
  - When the DH terminal is L level, the data is held and [DH] is displayed. And when the terminal is L level again, the data hold mode is released and [DH] is disappeared. And also, the data hold is released by function and range operation.
- (12) Power-On Initialization
  - When turn on the power, the power-on-initialization circuits performs
    - All LCD Display ON
    - Piezo buzzer driving signal output (about 62.5mS)
    - Initializing the internal circuits.

 


#### (13) The ADJUSTMENT of the REFERENCE VOLTAGE.


The NJU9207B has the reference voltage generator and the reference voltage can be adjusted by setting the value of the external fix and variable resistors.

The NJU9207B is classified 7 ranks (A,B,C,D,E,F,G) due to the internal reference voltage tolerance. Therefore, please select the external fix (R1 and R2) and variable (RV) resistors according to the below table.

RANK	R1 (KΩ)	RV(KΩ)	R2(KΩ)
Α	33	10	33
B C	36	10	27
C	39	10	22
D	39	10	15
E	39	10	10
F	39	10	5.1
G	39	10	1.2
i			



: less than ±2%

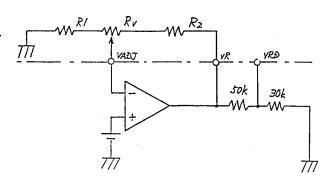



### ■ ABSOLUTE MAXIMUM RATINGS

( Ta=25℃ )

PARAM	IETER	SYMBOL	RATINGS	UNIT
Supply Voltage		V <sub>DD1</sub> -V <sub>SS1</sub> GND -V <sub>SS1</sub>	4.0 2.0	V
Control Termina	l Input Voltage	V <sub>ID</sub>	V <sub>DD1</sub> ~ V <sub>ss1</sub>	٧
Analog Terminal	Input Voltage	VIA	V <sub>DD1</sub> ~ V <sub>SS1</sub>	٧
Soldering Temperature		TsoL	260	${\mathfrak C}$
Soldering Time		tsol	10	sec
Operating Tempe	erature Range	Topr	0 ~ + 50	ొ
Storage Tempera	ture Range	Tstg	- 40 <b>∼</b> +125	${\mathfrak C}$
Input Current	Power Supply Term. ORI Terminal Oth. Terminals	ldd, lgnd, lss lori li, lo	士 50 士 50 士 10	mA

#### ■ ELECTRICAL CHARACTERISTICS


( Ta=25°C, V<sub>DD1</sub>=3.0V, GND=1.5V, DC 200mV Range)

PARAMETER	SYMBOL	CONDI	TIONS	MIN	TYP	MAX	UNIT
Operating Voltage	V <sub>DD1</sub> GND		* 1	1.8	3.0 1.5	3.6 1.8	٧
Operating Current	DD					1.0	mA
Sampling Time	Ts				100		ms
Sampling Rate	Nr				2		Times/ sec
Linearity	Lin	D4-40HO				±0.2	Wr c
Rollover Error	EР	R1=10MΩ				±0.1	%F.S
Zero Input Reading	Zero	R1=series i	0	0	0	٧	
Step Up Voltage	Vss2	V <sub>ss2</sub> Termin		- 2.8		٧	
Input Voltage	VIH	FC1~FC4, RC1~RC4, RH,		2.45			٧
	VIL	AFC, DH, A/	M Terminals			0.55	٧
Input Pull-up Resistance	Rı	FC1~FC4, R AFC, DH Ter	C1~RC4, RH, minals	100	300	500	kΩ
Buzzer Driving Current	ОН		V <sub>он</sub> =2.7V	0.25	0.75		mA
	lor	BZ Terminal	V <sub>or</sub> =0.3V	0.25	0.75		mA
Open-circuit Voltage for OHM Measurements	۷Ω	200Ω~20MΩ	Σ		0.43		٧
	۷н	COM1~COM4			-1.03		:
Output Voltage	VL	SEG1~SEG10			-2.07		٧
	VDSP	(LCD drivin	g waveform)		-3.10		
		VI	Vin=0mV			± 10	рĀ
Input Leakage Current	IIL	Terminal	Vin=±200mV			±100	рĀ


<sup>\* 1)</sup> VDD1A and VDD1D are same voltage, so VDD1 is a generic term.



LCD Driving Waveform
(1/4duty, DC200mV Range, Vin=0mV)

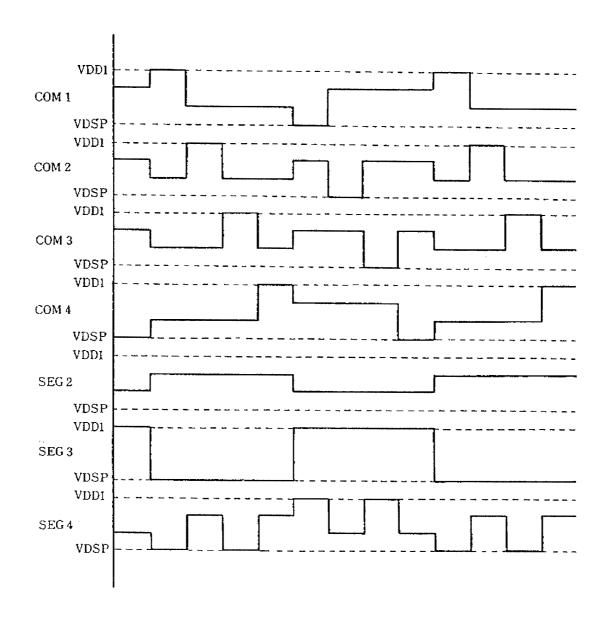


# ■ STANDARD CRYSTAL PARAMETERS FOR MEASUREMENT CIRCUITS

 

f[MHz]	R1[Ω]	L1[mH]	C1[fF]	CO[pF]
32.768	41.84	2.48	9.5	3.91



#### APPLICATION CIRCUIT (Auto-Range DMM)

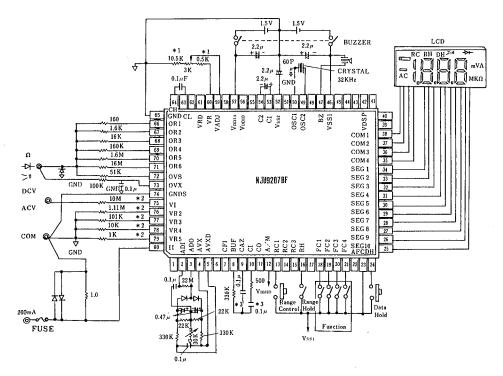

\*1 : See (13) of these datasheets

Accuracy: less than ±2%

The relative error of temperature characteristics: less than ±50ppm.

\*2 : Accuracy : less than  $\pm 0.5\%$ 

No mentioned resistor : less then  $\pm 1.0\%$ 

\*3 : Polypropylene film capacitor

Quartz Crystal : 32.768kHz, CI=less than  $30k\Omega$ 

## **NJU9207B**

www.DataSheet4U.com

### **MEMO**

[CAUTION]
The specifications on this databook are only given for information , without any guarantee as regards either mistakes or omissions. The application circuits in this databook are described only to show representative usages of the product and not intended for the guarantee or permission of any right including the industrial rights.