4-Phase Unipolar Stepper **Motor Drive Board PVP134**

Technical specification:

Size

Mating edge connector

Supply (board and motor)

Current consumption:

a) board only

b) motor windings

On-board auxiliary output Switching logic control

inputs

a) full/half step

- b) direction
- c) clock
- d) preset

standard Euro card 168 x 100 x 1.5 standard 32-way DIN 41612 socket 15-30V d.c. +10% max. unregulated smoothed i.e. PVP102B1

60mA

dependent on motor used-up to 2A/phase max.

12V d.c. 50mA max, regulated


Level '0' 0V CMOS and open collector T.T.L. compatible

Level '1' 12V Level '1' full step Level '0' half step

1Hz-25kHz, 10µs min. pulse width negative edge triggered

Active Level '0' sets motor drive states to Q1, & Q3 OFF, Q2 & Q4 ON (full step mode) Q1, Q2 & Q3 OFF, Q4 ON (Half step mode) - see fig. 1. Automatic preset at

switch-on

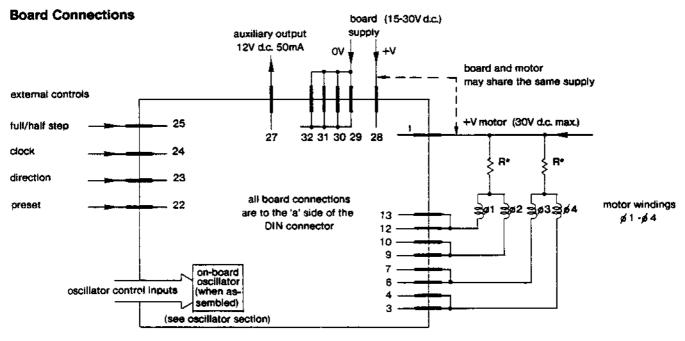


 $^{+}R = +V$ motor — rated winding voltage rated winding current

Fig. 1

Max. power dissipated through $R = (rated motor current)^2 \times R$. If the power dissipation is high it is advisable to arrive at the required value of R by using a network of series or parallel resistors. (The use of higher wattage resistors and heat sinks may be required).


Max. current consumption (motor & board) = 2 x (current per phase) +60mA. Thus ensure power supply cables used are sufficiently rated.

External control signals e.g. full/half step, direction etc. as well as the oscillator (If fitted) stop/run signal can be applied to the circuit in any of the methods of fig. 2.

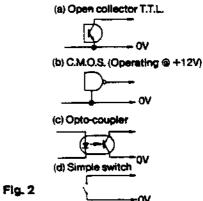

Connection to stepper motors


When the windings of the Stepper Motors are assigned (Ø1 - Ø4) as shown in Fig. 3, they can be connected to the board according to Fig. 1.

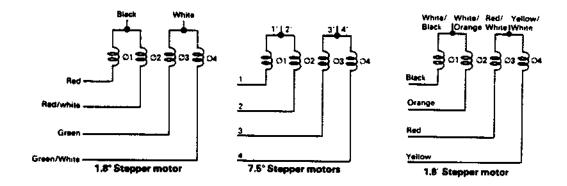

On-board oscillator assembly

If external clock source is not available, an on-board oscillator can be assembled simply by soldering into place the required Components listed below.

Note: the oscillator clock output must be externally wired to the clock, input-pin 24a).

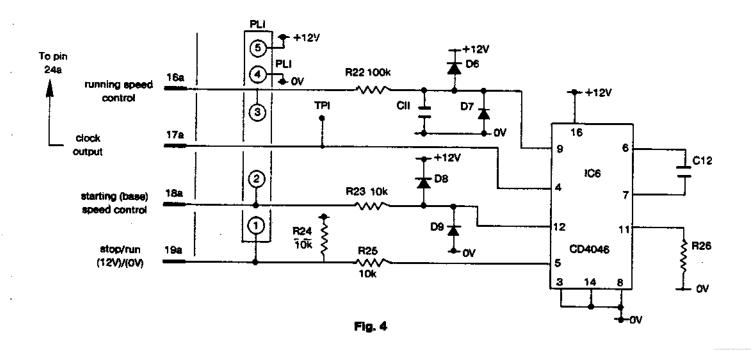

R22	100K Ω resistor	1 off
R23, 24, 25	10KΩ resistor	3 off
D6, 7, 8, 9	signal diode	4 off
1C6	CMOS I.C.	1 off
R26, C11 & C12	(value depends on application)	1 off each

If oscillator remote controls are required (e.g. front panel controls) then plug PLI (5-way inter-p.c.b.) can be added together with mating cable shell and crimp terminals.

Starting (base) and running speed control

The on-board oscillator can be arranged to start at a fixed frequency (thus a fixed motor speed) and then ramp up to a final value (the running motor speed). This facility is available to start the motor within its pull-in performance region and then accelerate the motor through so that it can operate within the pull-out mode. On switch-off the motor decelerates automatically. Three parameters need to be determined for any application:

- a. The starting speed: this should be below the pull-in speed for the motor (with any additional load).
- b. The running (final) speed: this should be within the pull-out capability of the motor (with any additional load).
- c. The acceleration and deceleration rate between starting and running speeds: this is limited by the motor capability to accelerate through its own (plus any load) inertia.

Oscillator controls (external)

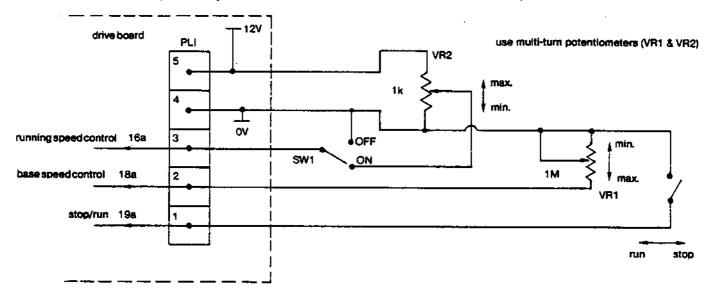


Fig. 5

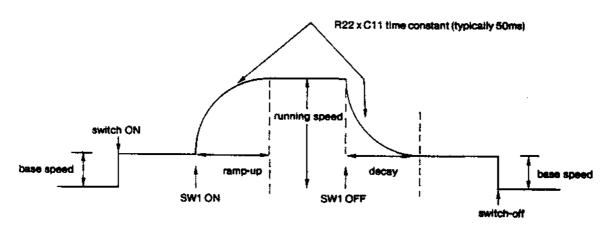


Fig. 6 Motor speed-ramping characteristic

Note: Oscillator frequency corresponds directly to motor speed in steps/s or half steps/s depending on motor drive mode.

For A 1.8° stepper motor speed in revs/min = 60 x speed in steps/s 200

For A 7.5° stepper motor speed in revs/min = 60 x speed in steps/s

or 60 x speed in half steps/s

or 60 x speed in half steps/s

96

Oscillator frequency setting

Recommended component values

VR1 $0 - 1M\Omega$ VR2 1ΚΩ


10K Ω **R26**

 $-1M\Omega$

greater than 100pf C12

Determine the base frequency and maximum running frequency. Using Fig. 7 and the base frequency value choose a value for C12 and VR1. Calculate the ratio max, running frequency/base frequency to determine the ratio of VR1 \pm R23 (fixed at 10k Ω

and thus using Fig. 8 establish the required value for R26.

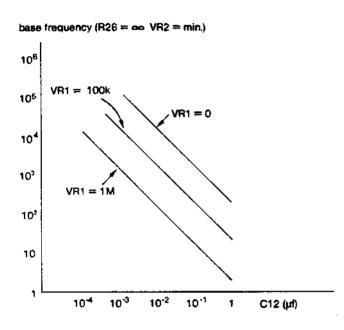


max, running frequency/base frequency 100 10 $VR1 + 10k\Omega$ R26 10 100 0.1

Fig. 7

Fig. 8

Once all component values are established and assembled the oscillator frequency range is as shown in Fig. 9. If SW1 is OFF the oscillator runs at base frequency. When SW1 is ON the oscillator builds up (at a rate depending on R22 x C11 time constant) to a frequency determined by VR2 setting.

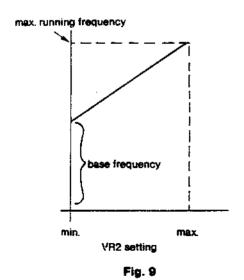

ALZANTI LIMITED

The Warren, Darby Green Lane, Blackwater, Camberley, Surrey, UK, GU17 0DN Tel: +44 1252 861113 Fax: +44 1252 861103 Email: sales@alzanti.com