

Connection Table of SAMSUNG UG-64I-011A

SAMSUNG UG-64I-011A		Flat Panel Connector	
PIN No.	FUNCTION	PIN No.	FUNCTION
1	FLM	36	FLM
2	NC	-	-
3	/DISP OFF	5	VCC
4	CL1	38	LP
5	VSS	3	GND
6	CL2	35	SHFCLK
7	VSS	4	GND
8	UD0	20	P11
9	UD1	19	P10
10	UD2	18	P9
11	UD3	17	P8
12	UD4	12	P3
13	UD5	11	P2
14	UD6	10	P1
15	UD7	9	P0
16	LD0	24	P15
17	LD1	23	P14
18	LD2	22	P13
19	LD3	21	P12
20	LD4	16	P7
21	LD5	15	P6
22	LD6	14	P5
23	LD7	13	P4
24	VDD	6	VCC
25	VSS	33	GND
26	VSS	34	GND
27	VEE	7*	VEESAFE
28	VEE	7*	VEESAFE
29	VEE	7*	VEESAFE

BIOS : Standard

* For PCM-4862/5860/4824, MIC-2340 CPU cards, an external VEE power supply is required for LCD VEE input at pin 27/28/29.