

## **KYL-818 8-way wireless ON-OFF Module**

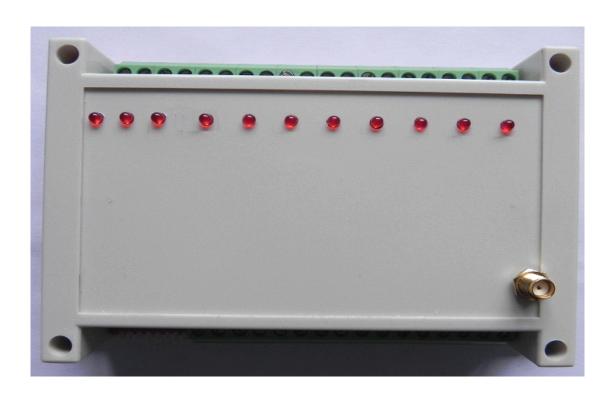

#### I. Introduction

This 8-way ON-OFF module is to transmit the ON-OFF condition to a remote place wirelessly in time. When here the switch condition is ON, the output in the remote place is ON. When the local switch condition is OFF, the other terminal is OFF.

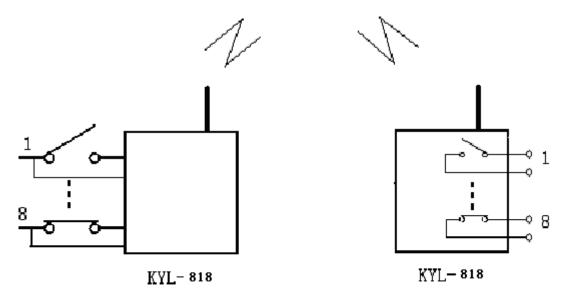


Tel: 86-755-83410815 Email: sales01@rf-data.com Web:www.rf-data.com

#### II. Features of KYL-818

- 1. 8-way isolated input, high reliability and stability.
- 8-way relay dry contact output, contact current is 220V, 5A.
- Collocated with a wireless data module inside whose transmitting distance is about 2km-3km; the working frequency 433MHz (400-470MHz); RF power: 1000mW; Receiving sensitivity: -123dBm
- 4. Receiving current: 60mA; transmitting current: 350mA
- 5 Power supply: DC 12V-30V
- 6 Dimension: 145mm\*90mm\*40mm

### III. Dip switch instruction

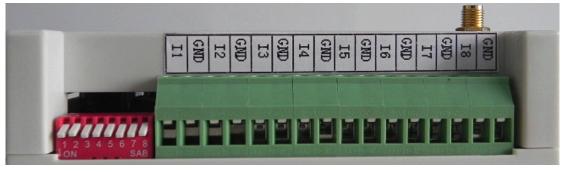

Pic 1. DIP Switch

#### DIP8: working method

ON—touch off transmitting. Once you change any of the 8 channels condition, the module will send out this info .

OFF---fixed time transmitting. The master transmits 8 channels' condition to the slave every 1s or 2s (not real-time transmitting).

## DIP7: master and slave choosing under the fixed time transmitting mode

ON—slave, OFF—host

### DIP6: data collecting mode

The master collects input condition or controls output condition via sending data. In data collecting mode, the module can't send out data actively. That is to say touch off

Tel: 86-755-83410815 Email:sales01@rf-data.com Web:www.rf-data.com



transmitting and timing transmitting are both invalid in this mode.

# DIP5: ON--no definition DIP1-4: channel choosing

To avoid interference, please use different DIP switch mode and choose different channels when you use several pairs of modules in the same place. Maximal 16 channels.

The following is a channel correspondence table for DIP switch 1-4:

DIP No.	Channel No.						
	1		5		9		13
	2		6		10		14
	3		7		11		15
	4		8		12		16

#### **Notice:**


- \* For most users "touch off transmitting mode" is OK-----DIP7-ON
- \* To avoid interference caused by more pairs of modules working in the same place, please choose different channels for different systems.
- \* In timing mode, there should be a master and a slave.
- \* changing the DIP switch just takes effect after the module is re-power on.

## **IV. Wiring Terminal Schematic**

Tel: 86-755-83410815 Email:sales01@rf-data.com Web:www.rf-data.com



Pic 2: Switch input wiring terminal schematic

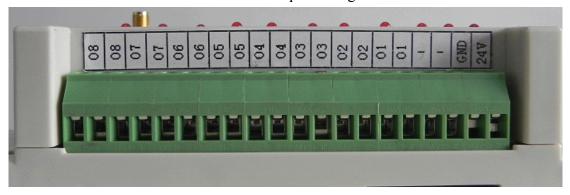

Pic 3: Switch output wiring terminal schematic

## V. Pin Definition:

Pin name	Pin No.	Definition	Remarks	
COM1	1	GND	The ground of power supply	
	2	VCC	DC: 12-30V	
	3	-	Blank	
	4	-	Blank	
	5	OUT1	The 1st way dry contact output	
	6			
	7	OUT2	The 2 <sup>nd</sup> way dry contact output	
	8			
	9	OUT3	The 3 <sup>rd</sup> way dry contact output	
	10			
	11	OUT4	The 4th way dry contact output	
	12			
	13	OUT5	The 5 <sup>th</sup> way dry contact output	
	14			
	15	OUT6	The 6 <sup>th</sup> waydry contact output	
	16			
	17	OUT7	The 7 <sup>th</sup> way dry contact output	
	18		1	
	19	OUT8	The 8th way dry contact output	

Tel: 86-755-83410815 Email:<u>sales01@rf-data.com</u> Web:www.rf-data.com



	20			
COM2	1	IN1	The 1st ON-OFF condition input	
	2	GND		
	3	IN2	IN2 The 2 <sup>nd</sup> ON-OFF condition input GND	
	4	GND		
	5	IN3	The 3 <sup>rd</sup> ON-OFF condition input	
	6	GND		
	7	IN4	The 4 <sup>th</sup> ON-OFF condition input	
	8	GND		
	9	IN5	The 5 <sup>th</sup> ON-OFF condition input	
	10	GND		
	11	IN6	The 6 <sup>th</sup> ON-OFF condition input  The 7 <sup>th</sup> ON-OFF condition input	
	12	GND		
	13	IN7		
	14	GND		
	15	IN8	The 8th ON-OFF condition input	
	16	GND		

#### VI. How to use KYL-818

- Consider your specific application, set the DIP switch, connect VCC(12V-30V
   and switch input and output cables as per the above instruction.
  - 2. Power supply on for the module.
  - 3. The factory setting is touch off transmitting mode and current channel is No.1.
- 4. Choose different frequency points to avoid interference caused by more pairs of modules working in the same area.

Tel: 86-755-83410815 Email: sales01@rf-data.com Web:www.rf-data.com