




$P_C - T_a$

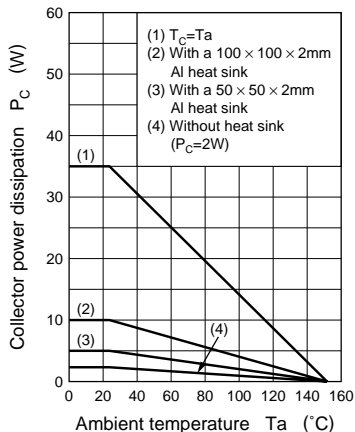


$I_C - V_{CE}$

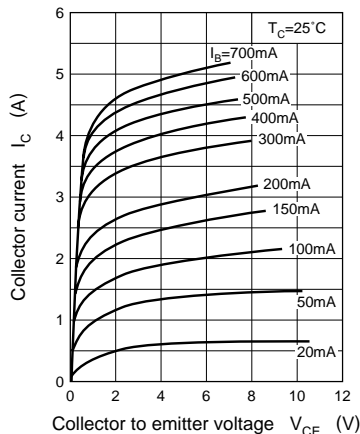


$V_{CE(sat)} - I_C$

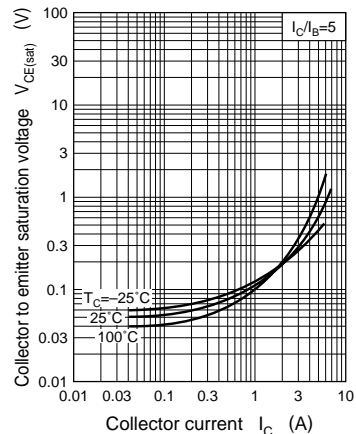


$V_{BE(sat)} - I_C$

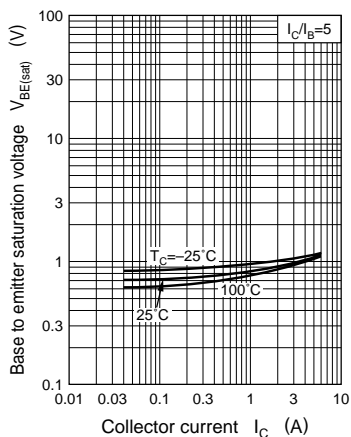


$h_{FE} - I_C$

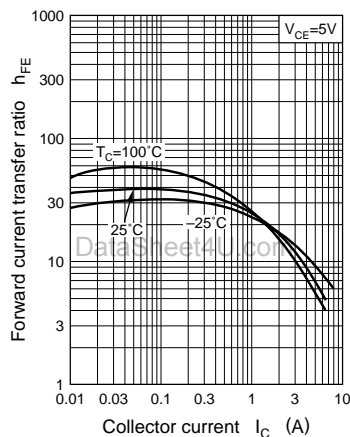


$f_T - I_C$

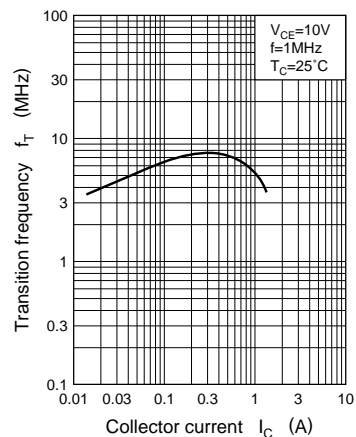


$C_{ob} - V_{CB}$

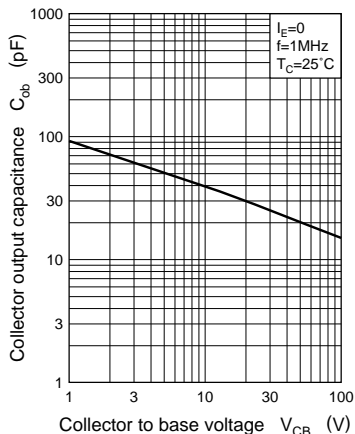


$t_{on}, t_{stg}, t_f - I_C$

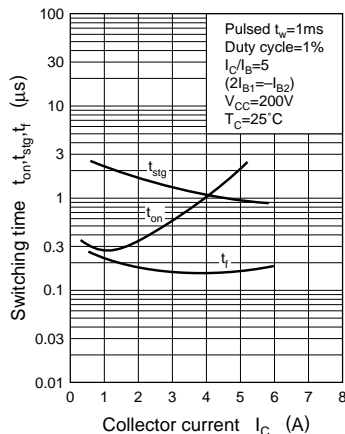


Area of safe operation (ASO)

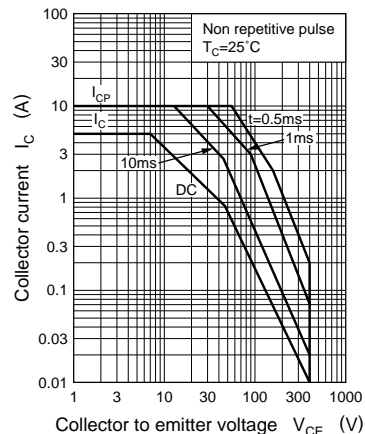


Area of safe operation, reverse bias ASO

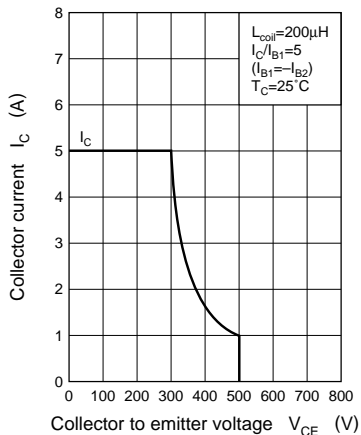

Reverse bias ASO measuring circuit

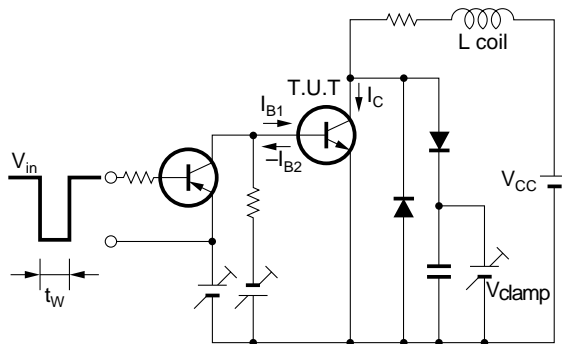

$R_{th(t)} - t$

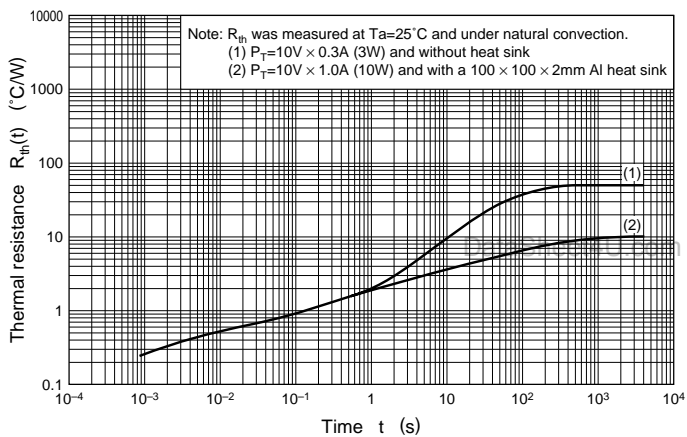

et4U.com