

# Power Management Switch ICs for PCs and Digital Consumer Products

# 1ch High Side Switch ICs for USB Devices and Memory Cards





No.11029EBT21

# BD82061FVJ,BD82065FVJ

## Description

Single channel high side switch IC for USB port is a high side switch having over-current protection used in power supply line of universal serial bus (USB).

N-channel power MOSFET of low on-resistance and low supply current are realized in this IC.

And, over-current detection circuit, thermal shutdown circuit, under-voltage lockout and soft-start circuit are built in.

# Features

- 1) Low On-Resistance 70mΩ MOSFET Switch
- 2) Current Limit Threshold 2.4A
- 3) Control Input Logic

Active "Low" Control Logic: BD82061FVJ Active "High" Control Logic: BD82065FVJ

- 4) Soft-Start Circuit
- 5) Over-Current Protection
- 6) Thermal Shutdown
- 7) Under-Voltage Lockout
- 8) Open-Drain Error Flag Output
- 9) Reverse Current Protection When Power Switch Off
- 10) Power Supply Voltage Range 2.7V~5.5V
- 11) TTL Enable Input
- 12) 0.8ms Typical Rise Time
- 13) 1µA Max Standby Current

#### Applications

PC, PC peripheral equipment, USB hub in consumer appliances, Car accessory, and so forth

#### Line Up Matrix

Parameter	BD82061FVJ	BD82065FVJ
Current limit threshold (A)	2.4	2.4
Control input logic	Low	High
Number of channnels	1ch	1ch
Package	TSSOP-B8J	TSSOP-B8J

# ● Absolute maximum ratings(Ta=25°C)

Parameter	Symbol	Ratings	Unit
Supply voltage	VIN	-0.3 ~ 6.0	V
Enable input voltage	VEN	-0.3 ~ 6.0	V
/OC voltage	V/oc	-0.3 ~ 6.0	V
/OC sink current	IS/oc	~ 5	mA
OUT voltage	Vout	-0.3 ~ 6.0	V
Storage temperature	Тѕтс	-55 ~ 150	°C
Power dissipation	Pd	587.5 <sup>*1</sup>	mW

<sup>\*1</sup> Mounted on 70mm\*70mm\*1.6mm glass-epoxy PCB. Derating : 4.7mW/°C above Ta=25°C

\* This product is not designed for protection against radioactive rays.

# Operating conditions

Parameter	Cymbol		Unit			
Parameter	Symbol	Min.	Тур.	Max.	Offic	
Operating voltage	VIN	2.7	-	5.5	V	
Operating temperature	Topr	-40	-	85	°C	

# Electrical Characteristics

OBD82061FVJ (Unless otherwise specified VIN = 5.0V,  $Ta = 25^{\circ}C$ )


Deremeter .		Limits			Lleit	Condition	
Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition	
Operating current	ldd	-	110	160	μΑ	V/EN = 0V , OUT=OPEN	
Standby current	Іѕтв	-	0.01	1	μΑ	V/EN = 5V , OUT=OPEN	
/EN input voltage	V/EN	2.0	-	-	V	High input	
/Liv input voitage	V/EN	-	-	8.0	V	Low input	
/EN input current	l/EN	-1.0	0.01	1.0	μА	V/EN = 0V or V/EN = 5V	
/OC output low voltage	V/ocl	-	-	0.5	V	I/oc = 0.5mA	
/OC output leak current	IL/oc	-	0.01	1	μА	V/oc = 5V	
/OC delay time	T/oc	10	15	20	ms		
On-resistance	Ron	-	70	110	mΩ	IOUT = 500mA	
Switch leak current	ILsw	-	-	1.0	μА	V/EN = 5V, VOUT = 0V	
Reverse leak current	ILREV	-	-	1.0	μΑ	VOUT = 5.5V, VIN = 0V	
Current limit threshold	Ітн	1.5	2.4	3.0	А		
Short circuit current	Isc	1.1	1.5	2.1	А	Vout = 0V CL = 47µF (RMS)	
Output rise time	Ton1	-	0.8	10	ms	RL = 10Ω	
Output turn-on time	Ton2	-	1.1	20	ms	RL = 10Ω	
Output fall time	Toff1	-	5	20	μs	RL = 10Ω	
Output turn-off time	T OFF2	-	10	40	μs	RL = 10Ω	
UVLO threshold	VTUVH	2.1	2.3	2.5	V	Increasing VIN	
OVEO (III ESHOIU	VTUVL	2.0	2.2	2.4	V	Decreasing VIN	


OBD82065FVJ (Unless otherwise specified VIN = 5.0V, Ta =  $25^{\circ}$ C)

·		Limits			l lmi4	Condition	
Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition	
Operating current	IDD	-	110	160	μΑ	VEN = 5V , OUT=OPEN	
Standby current	ISTB	-	0.01	1	μΑ	VEN = 0V , OUT=OPEN	
EN input voltage	VEN	2.0	-	-	V	High input	
Liv input voitage	VEN	-	-	8.0	V	Low input	
EN input current	len	-1.0	0.01	1.0	μΑ	VEN = 0V or VEN = 5V	
/OC output low voltage	V/ocl	-	-	0.5	V	I/oc = 0.5mA	
/OC output leak current	IL/oc	-	0.01	1	μΑ	V/oc = 5V	
/OC delay time	T/oc	10	15	20	ms		
On-resistance	Ron	-	70	110	mΩ	IOUT = 500mA	
Switch leak current	ILsw	-	-	1.0	μΑ	VEN = 0V, VOUT = 0V	
Reverse leak current	ILREV	-	-	1.0	μΑ	VOUT = 5.5V, VIN = 0V	
Current limit threshold	Ітн	1.5	2.4	3.0	А		
Short circuit current	Isc	1.1	1.5	2.1	А	Vout = 0V CL = 47µF (RMS)	
Output rise time	Ton1	-	0.8	10	ms	RL = 10Ω	
Output turn-on time	Ton2	-	1.1	20	ms	RL = 10Ω	
Output fall time	Toff1	-	5	20	μs	RL = 10Ω	
Output turn-off time	T OFF2	-	10	40	μs	RL = 10Ω	
UVLO threshold	VTUVH	2.1	2.3	2.5	V	Increasing VIN	
OAFO HIIESHOID	VTUVL	2.0	2.2	2.4	V	Decreasing VIN	


Free Datasheet http://www.datasheet4u.com/

# Measurement Circuit

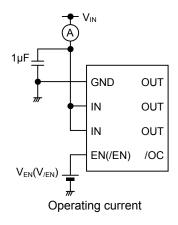

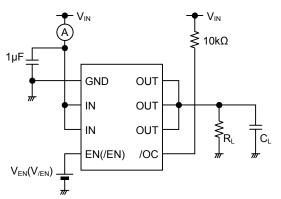

EN, /EN input voltage, Output rise, fall time Inrush current

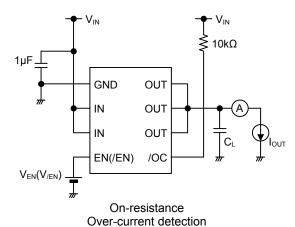

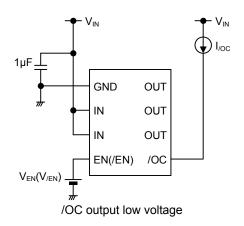


Fig.1 Measurement circuit

# ●Timing Diagram

OBD82061FVJ

# OBD82065FVJ

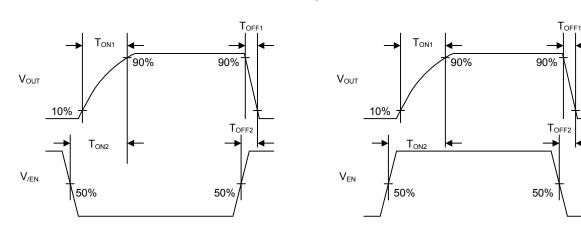


Fig.2 Timing diagram

# ● Electrical Characteristic Curves (Reference Data)

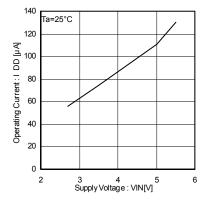


Fig.3 Operating current EN,/EN enable

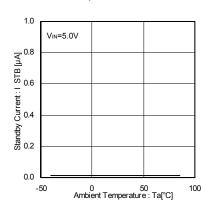


Fig.6 Standby current EN,/EN disable

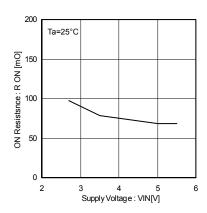


Fig.9 On-resistance

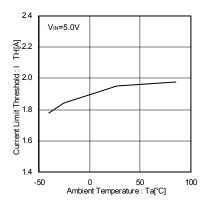


Fig.12 Current limit threshold

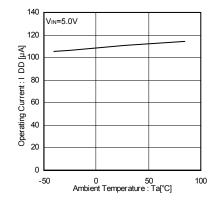


Fig.4 Operating current EN,/EN enable

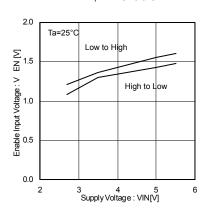


Fig.7 EN,/EN input voltage

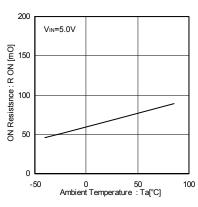


Fig.10 On-resistance

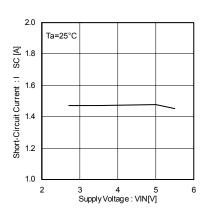


Fig.13 Short circuit current

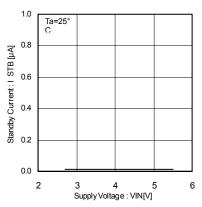


Fig.5 Standby current EN,/EN disable

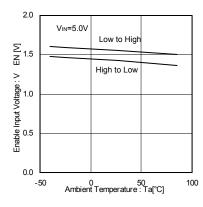


Fig.8 EN,/EN input voltage

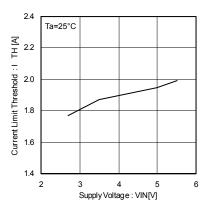


Fig.11 Current limit threshold

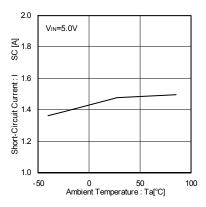


Fig.14 Short circuit current


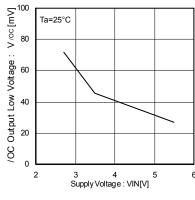


Fig.15 /OC output low voltage

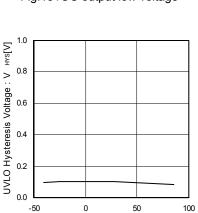

Ambient Temperature : Ta[°C]
Fig.18 UVLO hysteresis voltage

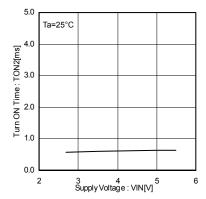


Fig.21 Output turn-on time

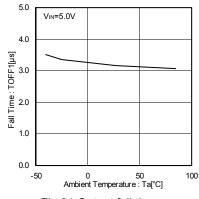


Fig.24 Output fall time

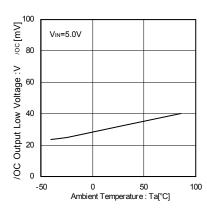


Fig.16 /OC output low voltage

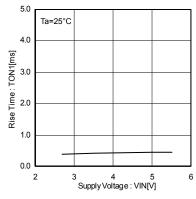


Fig.19 Output rise time


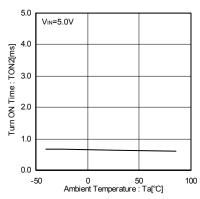


Fig.22 Output turn-on time

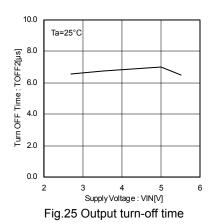

2.5 VTUVH VTUVL VTUVL 2.1 2.0 O 50 Ambient Temperature : Ta[°C]

Fig.17 UVLO threshold voltage

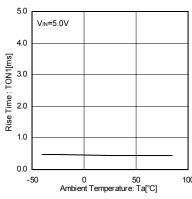


Fig.20 Output rise time

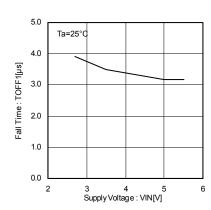


Fig.23 Output fall time



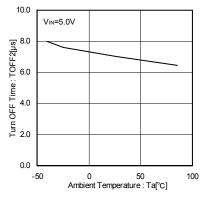


Fig.26 Output turn-off time

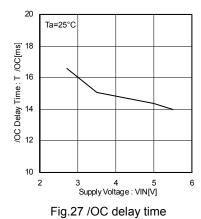


20 Vin=5.0V Vin=5.0V

Fig.28 /OC delay time

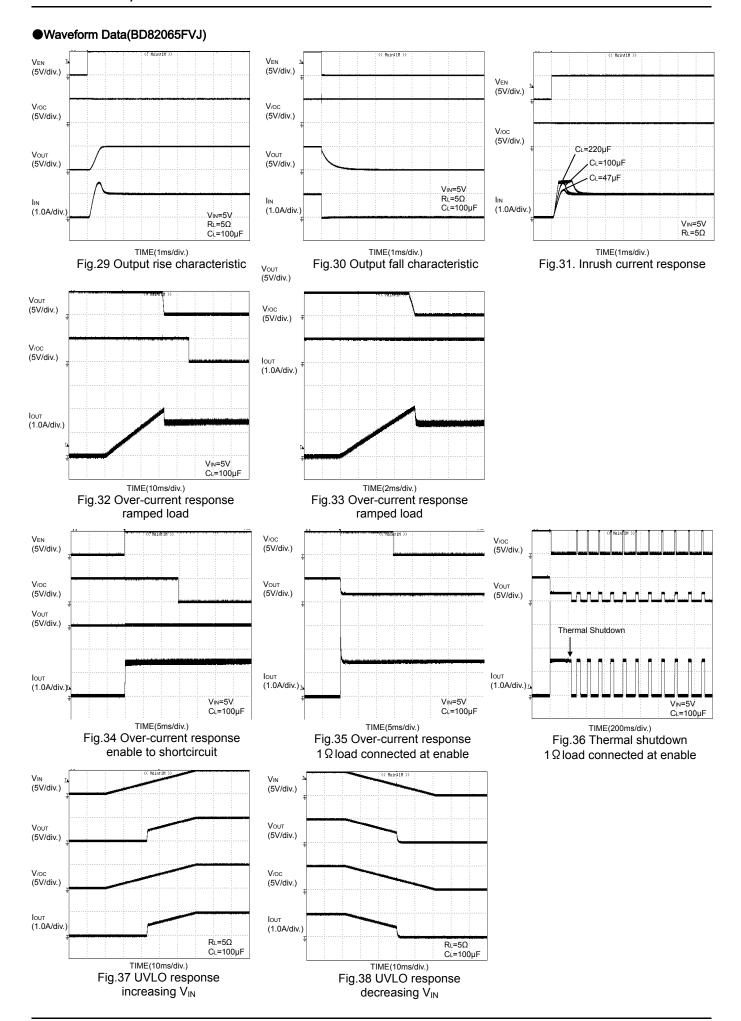

# Block Diagram

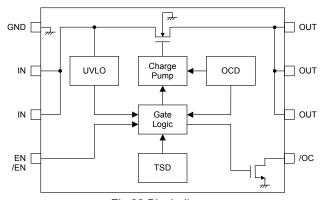

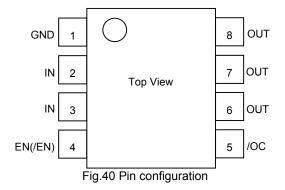


Fig.39 Block diagram

Pin Configuration

-11	i Configura	Configuration						
	Pin No.	Symbol	1/0	Pin function				
	1	GND	-	Ground.				
	2, 3	IN	-	Power supply input. Input terminal to the power switch and power supply input terminal of the internal circuit. At use, connect each pin outside.				
	4	EN,/EN	I	Enable input.  Power switch on at Low level.(BD82061FVJ)  Power switch on at High level.(BD82065FVJ)  High level input > 2.0V, Low level input < 0.8V.				
	5	/OC	0	Error flag output. Low at over-current, thermal shutdown. Open drain output.				
	6, 7, 8	OUT	0	Power switch output. At use, connect each pin outside.				

# ●I/O Circuit

O Circuit		
Symbol	Pin No	Equivalent circuit
EN(/EN)	4	
/OC	5	
OUT	6,7,8	

#### Functional Descriptions

# 1. Switch operation

IN terminal and OUT terminal are connected to the drain and the source of switch MOSFET respectively. And the IN terminalis used also as power source input to internal control circuit.

When the switch is turned on from EN, /EN control input, IN terminal and OUT terminal are connected by a  $70m\Omega$  switch. In on status, the switch is bidirectional. Therefore, when the potential of OUT terminal is higher than that of IN terminal, current flows from OUT terminal to IN terminal.

Since a parasitic diode between the drain and the source of switch MOSFET is canceled, in the off status, it is possible to prevent current from flowing reversely from OUT to IN.

#### 2. Thermal shutdown circuit (TSD)

If over-current would continue, the temperature of the IC would increase drastically. If the junction temperature were beyond 170°C (typ.) in the condition of over-current detection, thermal shutdown circuit operates and makes power switch turn off and outputs error flag (/OC). Then, when the junction temperature decreases lower than 150°C (typ.), power switch is turned on and error flag (/OC) is cancelled. Unless the fact of the increasing chips temperature is removed or the output of power switch is turned off, this operation repeats.

The thermal shutdown circuit operates when the switch is on (EN,/EN signal is active).

#### 3. Over-current detection (OCD)

The over-current detection circuit limits current (Isc) and outputs error flag (/OC) when current flowing in each switch MOSFET exceeds a specified value. There are three types of response against over-current. The over-current detection circuit works when the switch is on (EN,/EN signal is active).

- 3-1. When the switch is turned on while the output is in shortcircuit status

  When the switch is turned on while the output is in shortcircuit status or so, the switch gets in current limit status soon.
- 3-2. When the output shortcircuits while the switch is on When the output shortcircuits or large capacity is connected while the switch is on, very large current flows until the over-current limit circuit reacts. When the current detection, limit circuit works, current limitation is carried out.
- 3-3. When the output current increases gradually

When the output current increases gradually, current limitation does not work until the output current exceeds the over-current detection value. When it exceeds the detection value, current limitation is carried out.

#### 4. Under-voltage lockout (UVLO)

UVLO circuit prevents the switch from turning on until the VIN exceeds 2.3V(Typ.). If the VIN drops below 2.2V(Typ.) while the switch turns on, then UVLO shuts off the power switch. UVLO has hysteresis of a 100mV(Typ.). Under-voltage lockout circuit works when the switch is on (EN,/EN signal is active).

# 5. Error flag (/OC) output

Error flag output is N-MOS open drain output. At detection of over-current, thermal shutdown, low level is output.

Over-current detection has delay filter. This delay filter prevents instantaneous current detection such as inrush current at switch on, hot plug from being informed to outside.

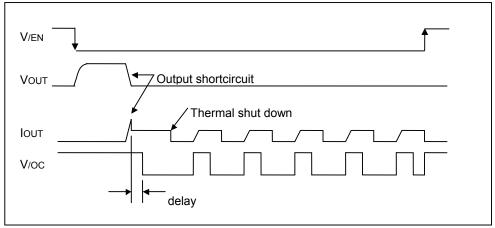


Fig.41 Over-current detection, thermal shutdown timing (BD82061FVJ)

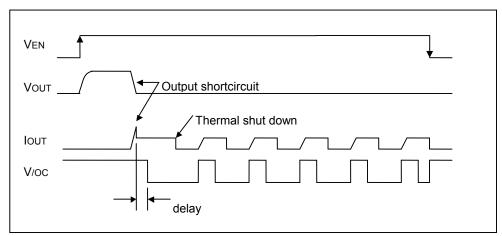


Fig.42 Over-current detection, thermal shutdown timing (BD82065FVJ)

# ● Typical application Circuit

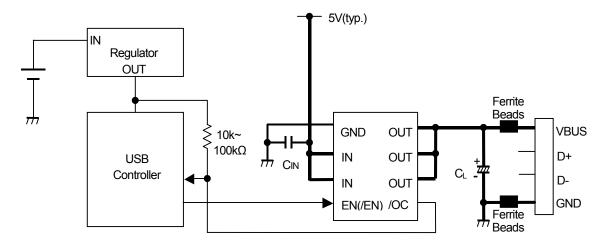


Fig.43 Typical application circuit

# Application Information

When excessive current flows owing to output shortcircuit or so, ringing occurs by inductance of power source line to IC, and may cause bad influences upon IC actions. In order to avoid this case, connect a bypath capacitor by IN terminal and GND terminal of IC.  $1\mu F$  or higher is recommended.

Pull up /OC output by resistance  $10k\Omega \sim 100k\Omega$ .

Set up value which satisfies the application as CL and Ferrite Beads.

This system connection diagram doesn't guarantee operating as the application.

The external circuit constant and so on is changed and it uses, in which there are adequate margins by taking into account external parts or dispersion of IC including not only static characteristics but also transient characteristics.

# ●Power Dissipation Character

(TSSOP-B8J)

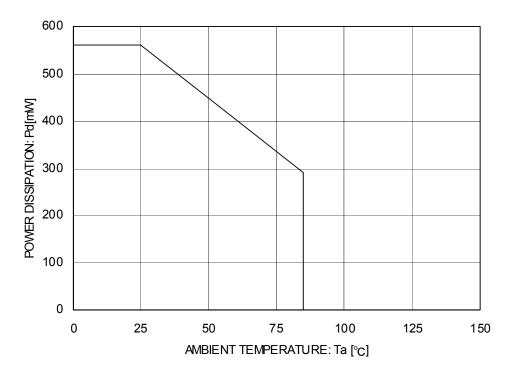


Fig.44 Power dissipation curve (Pd-Ta Curve)

#### Cautions On Use

#### (1) Absolute Maximum Ratings

An excess in the absolute maximum ratings, such as supply voltage, temperature range of operating conditions, etc., can break down devices, thus making impossible to identify breaking mode such as a short circuit or an open circuit. If any special mode exceeding the absolute maximum ratings is assumed, consideration should be given to take physical safety measures including the use of fuses, etc.

#### (2) Operating conditions

These conditions represent a range within which characteristics can be provided approximately as expected. The electrical characteristics are guaranteed under the conditions of each parameter.

#### (3) Reverse connection of power supply connector

The reverse connection of power supply connector can break down ICs. Take protective measures against the breakdown due to the reverse connection, such as mounting an external diode between the power supply and the IC's power supply terminal.

#### (4) Power supply line

Design PCB pattern to provide low impedance for the wiring between the power supply and the GND lines. In this regard, for the digital block power supply and the analog block power supply, even though these power supplies has the same level of potential, separate the power supply pattern for the digital block from that for the analog block, thus suppressing the diffraction of digital noises to the analog block power supply resulting from impedance common to the wiring patterns. For the GND line, give consideration to design the patterns in a similar manner.

Furthermore, for all power supply terminals to ICs, mount a capacitor between the power supply and the GND terminal. At the same time, in order to use an electrolytic capacitor, thoroughly check to be sure the characteristics of the capacitor to be used present no problem including the occurrence of capacity dropout at a low temperature, thus determining the constant.

#### (5) GND voltage

Make setting of the potential of the GND terminal so that it will be maintained at the minimum in any operating state. Furthermore, check to be sure no terminals are at a potential lower than the GND voltage including an actual electric transient.

# (6) Short circuit between terminals and erroneous mounting

In order to mount ICs on a set PCB, pay thorough attention to the direction and offset of the ICs. Erroneous mounting can break down the ICs. Furthermore, if a short circuit occurs due to foreign matters entering between terminals or between the terminal and the power supply or the GND terminal, the ICs can break down.

## (7) Operation in strong electromagnetic field

Be noted that using ICs in the strong electromagnetic field can malfunction them.

## (8) Inspection with set PCB

On the inspection with the set PCB, if a capacitor is connected to a low-impedance IC terminal, the IC can suffer stress. Therefore, be sure to discharge from the set PCB by each process. Furthermore, in order to mount or dismount the set PCB to/from the jig for the inspection process, be sure to turn OFF the power supply and then mount the set PCB to the jig. After the completion of the inspection, be sure to turn OFF the power supply and then dismount it from the jig. In addition, for protection against static electricity, establish a ground for the assembly process and pay thorough attention to the transportation and the storage of the set PCB.

#### (9) Input terminals

In terms of the construction of IC, parasitic elements are inevitably formed in relation to potential. The operation of the parasitic element can cause interference with circuit operation, thus resulting in a malfunction and then breakdown of the input terminal. Therefore, pay thorough attention not to handle the input terminals, such as to apply to the input terminals a voltage lower than the GND respectively, so that any parasitic element will operate. Furthermore, do not apply a voltage to the input terminals when no power supply voltage is applied to the IC. In addition, even if the power supply voltage is applied, apply to the input terminals a voltage lower than the power supply voltage or within the guaranteed value of electrical characteristics.

#### (10) Ground wiring pattern

If small-signal GND and large-current GND are provided, It will be recommended to separate the large-current GND pattern from the small-signal GND pattern and establish a single ground at the reference point of the set PCB so that resistance to the wiring pattern and voltage fluctuations due to a large current will cause no fluctuations in voltages of the small-signal GND. Pay attention not to cause fluctuations in the GND wiring pattern of external parts as well.

## (11) External capacitor

In order to use a ceramic capacitor as the external capacitor, determine the constant with consideration given to a degradation in the nominal capacitance due to DC bias and changes in the capacitance due to temperature, etc.


# (12) Thermal shutdown circuit (TSD)

When junction temperatures become detected temperatures or higher, the thermal shutdown circuit operates and turns a switch OFF. The thermal shutdown circuit is aimed at isolating the LSI from thermal runaway as much as possible. Do not continuously use the LSI with this circuit operating or use the LSI assuming its operation.


#### (13) Thermal design


Perform thermal design in which there are adequate margins by taking into account the power dissipation (Pd) in actual states of use.

# Ordering part number



# TSSOP-B8J

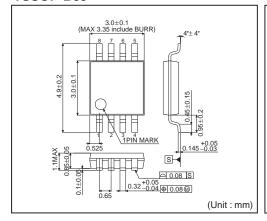

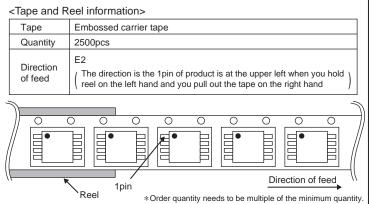

#### Notes

No copying or reproduction of this document, in part or in whole, is permitted without the consent of ROHM Co.,Ltd.

The content specified herein is subject to change for improvement without notice.

The content specified herein is for the purpose of introducing ROHM's products (hereinafter "Products"). If you wish to use any such Product, please be sure to refer to the specifications, which can be obtained from ROHM upon request.

Examples of application circuits, circuit constants and any other information contained herein illustrate the standard usage and operations of the Products. The peripheral conditions must be taken into account when designing circuits for mass production.

Great care was taken in ensuring the accuracy of the information specified in this document. However, should you incur any damage arising from any inaccuracy or misprint of such information, ROHM shall bear no responsibility for such damage.

The technical information specified herein is intended only to show the typical functions of and examples of application circuits for the Products. ROHM does not grant you, explicitly or implicitly, any license to use or exercise intellectual property or other rights held by ROHM and other parties. ROHM shall bear no responsibility whatsoever for any dispute arising from the use of such technical information.

The Products specified in this document are intended to be used with general-use electronic equipment or devices (such as audio visual equipment, office-automation equipment, communication devices, electronic appliances and amusement devices).

The Products specified in this document are not designed to be radiation tolerant.

While ROHM always makes efforts to enhance the quality and reliability of its Products, a Product may fail or malfunction for a variety of reasons.

Please be sure to implement in your equipment using the Products safety measures to guard against the possibility of physical injury, fire or any other damage caused in the event of the failure of any Product, such as derating, redundancy, fire control and fail-safe designs. ROHM shall bear no responsibility whatsoever for your use of any Product outside of the prescribed scope or not in accordance with the instruction manual.

The Products are not designed or manufactured to be used with any equipment, device or system which requires an extremely high level of reliability the failure or malfunction of which may result in a direct threat to human life or create a risk of human injury (such as a medical instrument, transportation equipment, aerospace machinery, nuclear-reactor controller, fuel-controller or other safety device). ROHM shall bear no responsibility in any way for use of any of the Products for the above special purposes. If a Product is intended to be used for any such special purpose, please contact a ROHM sales representative before purchasing.

If you intend to export or ship overseas any Product or technology specified herein that may be controlled under the Foreign Exchange and the Foreign Trade Law, you will be required to obtain a license or permit under the Law.



Thank you for your accessing to ROHM product informations. More detail product informations and catalogs are available, please contact us.

# ROHM Customer Support System

http://www.rohm.com/contact/