Single Phase Synchronous Rectified Buck MOSFET Driver

General Description

The RT9624H is a high frequency, synchronous rectified, single phase MOSFET driver designed for normal MOSFET driving applications and high performance CPU VR driving capabilities.

The RT9624H can be supplied from 4.5V to 13.2V. The applicable power stage VIN range is from 5V to 24V. The IC also builds in an internal power switch to replace external bootstrap diode.

The RT9624H can support switching frequency efficiently up to 500kHz. The IC has both the UGATE and LGATE driving circuits for synchronous rectified DC/DC converter applications. The shoot through protection mechanism is designed to prevent shoot through between high-side and low-side power MOSFETs. The RT9624H has tri-state PWM input with shutdown function, which can force driver to output low UGATE and LGATE signals.

The RT9624H is available in a small footprint WDFN-8SL 2x2 package.

Features

- Drive Two N-MOSFETs
- Shoot-Through Protection
- Embedded Bootstrap Switch
- Support High Switching Frequency
- Fast Output Rising Time
- Tri-State PWM Input for Output Shutdown
- Small 8-Lead WDFN Package
- RoHS Compliant and Halogen Free

Applications


- Core Voltage Supplies for Desktop, Motherboard CPU
- High Frequency Low Profile DC/DC Converters
- High Current Low Voltage DC/DC Converters
- Core Voltage Supplies for GFX Card

Marking Information



27 : Product Code W : Date Code

Simplified Application Circuit

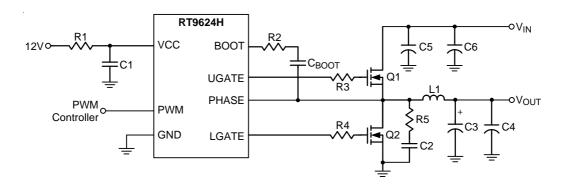

RT9624H



Ordering Information

RT9624H

Package Type QWA : WDFN-8SL 2x2 (W-Type) (Exposed Pad-Option 1) — Lead Plating System


G : Green (Halogen Free and Pb Free)

Note :

Richtek products are :

- ▶ RoHS compliant and compatible with the current requirements of IPC/JEDEC J-STD-020.
- Suitable for use in SnPb or Pb-free soldering processes.

Pin Configurations




WDFN-8SL 2x2

Function Pin Description

Pin No.	Pin Name	Pin Function
1	BOOT	Bootstrap Supply for High-Side Gate Driver.
2	PWM	PWM Signal Input. Connect this pin to the PWM output of the controller.
3	NC	No Internal Connection.
4	VCC	Supply Voltage Input.
5	LGATE	Low-Side Gate Driver Output. Connect this pin to the Gate of low-side power N-MOSFET.
6, 9 (Exposed Pad)	GND	Ground. The exposed pad must be soldered to a large PCB and connected to GND for maximum power dissipation.
7	PHASE	Connect this pin to the Source of the high-side N-MOSFET and the Drain of the low-side N-MOSFET.
8	UGATE	High-Side Gate Driver Output. Connect this pin to the Gate of high-side power N-MOSFET.

Function Block Diagram

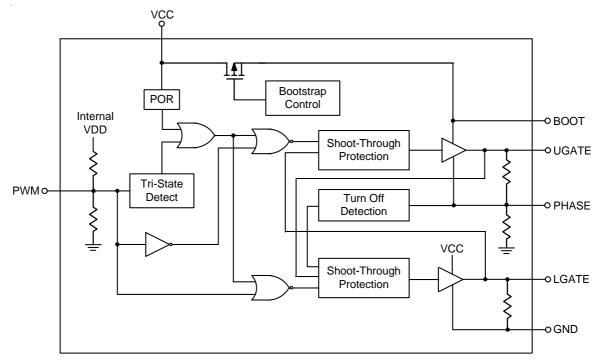

Operation

POR (Power On Reset)

The POR block detects the voltage at the VCC pin. When the VCC pin voltage is higher than POR rising threshold, the POR block output is high. The POR output is low when VCC is less than POR rising threshold. When the POR block output is high, UGATE and LGATE can be controlled by PWM input voltage. If the POR block output is low, both UGATE and LGATE will be pulled to low.

Tri-State Detect

When both POR block output and EN pin voltages are high, UGATE and LGATE can be controlled by PWM input. There are three PWM input modes, which are high, low, and shutdown state. If PWM input is within the shutdown window, both UGATE and LGATE output are low. When PWM input is higher than its rising threshold, UGATE is high and LGATE is low. When PWM input is lower than its falling threshold, UGATE is low and LGATE is high.

Bootstrap Control

The bootstrap control block controls the integrated bootstrap switch. When LGATE is high (low-side MOSFET is turned on), the bootstrap switch is turned on to charge the bootstrap capacitor connected to BOOT pin. When LGATE is low (low-side MOSFET is turned off), the bootstrap switch is turned off to disconnect VCC pin and BOOT pin.

Turn-Off Detection

The turn-off detection block detects whether high-side MOSFET is turned off by monitoring the PHASE pin voltage. To avoid shoot-through between high-side and low-side MOSFETs, low-side MOSFET can be turned on only after high-side MOSFET is effectively turned off.

Shoot-Through Protection

The shoot-through protection block implements the dead time when both high-side and low-side MOSFETs are turned off. With shoot-through protection block, high-side and low-side MOSFET are never turned on simultaneously. Thus, shoot-through between high-side and low-side MOSFETs is prevented.



Absolute Maximum Ratings (Note 1)

Supply Voltage, VCC	–0.3V to 15V
BOOT to PHASE	0.3V to 15V
PHASE to GND	
DC	0.3V to 30V
< 20ns	10V to 35V
LGATE to GND	
DC	0.3V to (VCC + 0.3V)
< 20ns	2V to (VCC + 0.3V)
UGATE to GND	
DC	(V _{PHASE} – 0.3V) to (V _{BOOT} + 0.3V)
< 20ns	(V _{PHASE} $-$ 2V) to (V _{BOOT} + 0.3V)
• EN, PWM to GND	0.3V to 7V
• Power Dissipation, $P_D @ T_A = 25^{\circ}C$	
WDFN-8SL 2x2	2.17W
Package Thermal Resistance (Note 2)	
WDFN-8SL 2x2, 0JA	46°C/W
WDFN-8SL 2x2, θ_{JC}	11.5°C/W
• Lead Temperature (Soldering, 10 sec.)	260°C
Junction Temperature	150°C
Storage Temperature Range	–65°C to 150°C
ESD Susceptibility (Note 3)	
HBM (Human Body Model)	2kV

Recommended Operating Conditions (Note 4)

Supply Voltage, VCC	- 4.5V to 13.2V
• Input Voltage, (V _{IN} + VCC)	< 35V
Junction Temperature Range	40°C to 125°C
Ambient Temperature Range	40°C to 85°C

Electrical Characteristics

(V_{CC} = 12V, T_A = 25^{\circ}C unless otherwise specified)

Parameter	Symbol	Test Conditions		Тур	Max	Unit		
Power Supply	Power Supply							
Power Supply Voltage	V _{CC}		4.5		13.2	V		
Power Supply Current	I _{VCC}	V _{BOOT} = 12V, PWM Input Floating		120		μΑ		
Power On Reset (POR)								
POR Rising Threshold	V _{POR_r}	V _{CC} Rising		4	4.4	V		
POR Falling Threshold	V _{POR_f}	V _{CC} Falling	3	3.5		V		
PWM Input								
Maximum Input Current	I _{PWM}	PWM = 0V or 5V		160		μΑ		
PWM Floating Voltage	V _{PWM_fl}	PWM = Open		1.8		V		

Parameter	Symbol	Test Conditions	Min	Тур	Max	Unit	
PWM Rising Threshold	V _{PWM_rth}		2.3	2.8	3.2	V	
PWM Falling Threshold	V _{PWM_fth}		0.7	1.1	1.4	V	
Timing							
UGATE Rising Time	tUGATEr	3nF Load		25		ns	
UGATE Falling Time	t _{UGATEf}	3nF Load		12		ns	
LGATE Rising Time	t _{LGATE} r	3nF Load		24		ns	
LGATE Falling Time	t _{LGATEf}	3nF Load		10		ns	
UGATE Propagation Delay	tUGATEpdh	V _{BOOT} – V _{PHASE} = 12V See Timing Diagram		60		ns	
	tUGATEpdl			22		115	
LGATE Propagation Delay	t _{LGATE} pdh	See Timing Diagram		30		ns	
LOATE Propagation Delay	t _{LGATE pdl}	See Timing Diagram		8		115	
Output	Output						
UGATE Drive Source	RUGATEsr	$V_{BOOT} - V_{PHASE} = 12V$, $I_{Source} = 100mA$		1.7		Ω	
UGATE Drive Sink	R _{UGATEsk}	$V_{BOOT} - V_{PHASE} = 12V$, $I_{Sink} = 100mA$		1.4		Ω	
LGATE Drive Source	R _{LGATEsr}	I _{Source} = 100mA		1.6		Ω	
LGATE Drive Sink	R _{LGATEsk}	I _{Sink} = 100mA		1.1		Ω	


Note 1. Stresses beyond those listed "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions may affect device reliability.

- Note 3. Devices are ESD sensitive. Handling precaution is recommended.
- Note 4. The device is not guaranteed to function outside its operating conditions.


Note 2. θ_{JA} is measured at $T_A = 25^{\circ}C$ on a high effective thermal conductivity four-layer test board per JEDEC 51-7. θ_{JC} is measured at the exposed pad of the package.



Typical Application Circuit

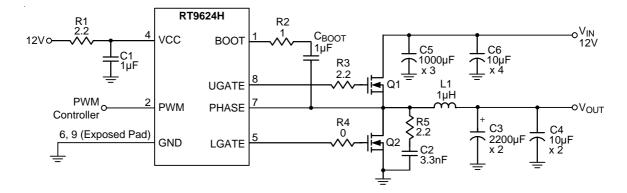


Timing Diagram

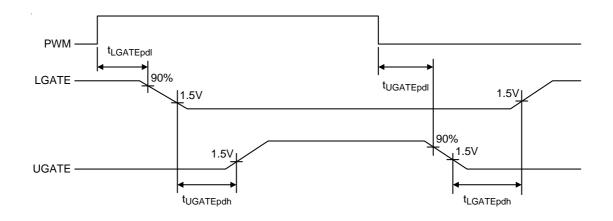


Typical Operating Characteristics

RICHTEK

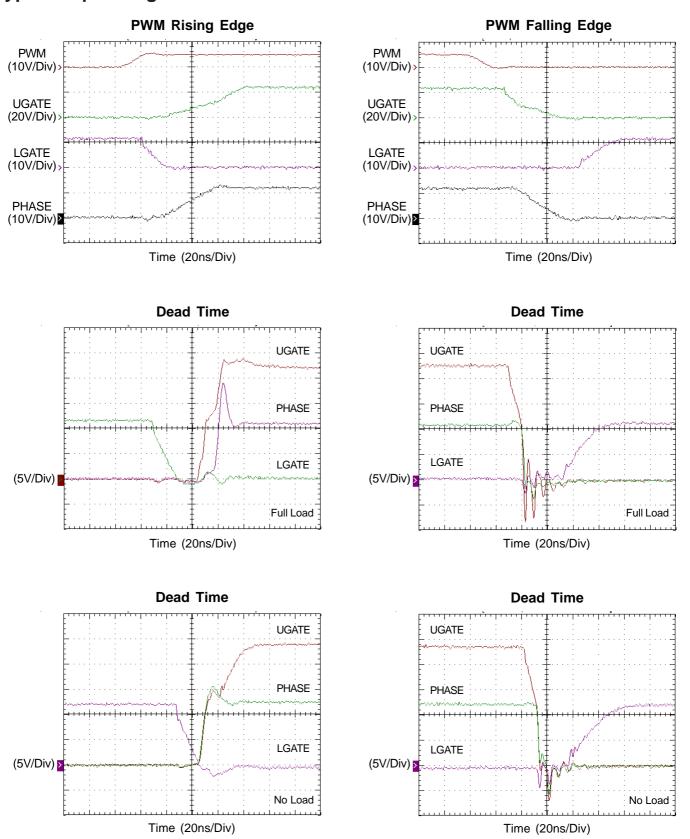





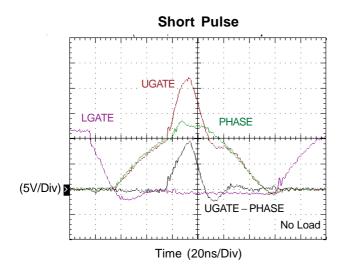

Application Information

The RT9624H is a high frequency, synchronous rectified, single phase dual MOSFET driver containing Richtek's advanced MOSFET driver technologies. The RT9624H is designed to be able to adapt from normal MOSFET driving applications to high performance CPU VR driving capabilities.

Supply Voltage and Power On Reset

The RT9624H can be utilized under both V_{CC} = 5V or V_{CC} = 12V applications which may happen in different fields of electronics application circuits. In terms of efficiency, higher V_{CC} equals higher driving voltage of UGATE/LGATE which may result in higher switching loss and lower conduction loss of power MOSFETs. The choice of V_{CC} = 12V or V_{CC} = 5V can be a tradeoff to optimize system efficiency.

The RT9624H is designed to drive both high-side and lowside N-MOSFET through external input PWM control signal. It has power on protection function which held UGATE and LGATE low before the VCC voltage rises to higher than rising threshold voltage.

Tri-state PWM Input

After the initialization, the PWM signal takes the control. The rising PWM signal first forces the LGATE signal to turn low then UGATE signal is allowed to go high just after a non-overlapping time to avoid shoot through current. The falling of PWM signal first forces UGATE to go low. When UGATE and PHASE signal reach a predetermined low level, LGATE signal is allowed to turn high.

The PWM signal is acted as "High" if the signal is above the rising threshold and acted as "Low" if the signal is below the falling threshold. When PWM signal level enters and remains within the shutdown window, the output drivers are disabled and both MOSFET gates are pulled and held low. If the PWM signal is left floating, the pin will be kept around 1.8V by the internal divider and provide the PWM controller with a recognizable level.

Internal Bootstrap Power Switch

The RT9624H builds in an internal bootstrap power switch to replace external bootstrap diode, and this can facilitate PCB design and reduce total BOM cost of the system. Hence, no external bootstrap diode is required in real applications.

Non-overlap Control

To prevent the overlap of the gate drivers during the UGATE pull low and the LGATE pull high, the non-overlap circuit monitors the voltages at the PHASE node and high-side gate drive (UGATE-PHASE). When the PWM input signal goes low, UGATE begins to pull low (after propagation delay). Before LGATE is pulled high, the non-overlap protection circuit ensures that the monitored voltages have gone below 1.1V. Once the monitored voltages fall below 1.1V, LGATE begins to turn high. By waiting for the voltages of the PHASE pin and high-side gate driver to fall below 1.1V, the non-overlap protection circuit ensures that UGATE is low before LGATE pulls high.

Also to prevent the overlap of the gate drivers during LGATE pull low and UGATE pull high, the non-overlap circuit monitors the LGATE voltage. When LGATE goes below 1.1V, UGATE goes high after propagation delay.

Driving Power MOSFETs

The DC input impedance of the power MOSFET is extremely high. When V_{gs1} or V_{gs2} is at 12V or 5V, the gate draws the current only for few nano-amperes. Thus once the gate has been driven up to "ON" level, the current could be negligible.

However, the capacitance at the gate to source terminal should be considered. It requires relatively large currents to drive the gate up and down 12V (or 5V) rapidly. It is also required to switch drain current on and off with the required speed. The required gate drive currents are calculated as follows.

RT9624H

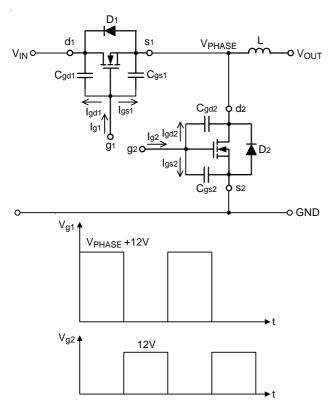


Figure 1. Equivalent Circuit and Waveforms (V_{CC} = 12V)

In Figure 1, the current I_{g1} and I_{g2} are required to move the gate up to 12V. The operation consists of charging C_{gd1} , C_{gd2} , C_{gs1} and C_{gs2} . C_{gs1} and C_{gs2} . C_{gs1} and C_{gs2} are the capacitors from gate to source of the high-side and the low-side power MOSFETs, respectively. In general data sheets, the C_{gs1} and C_{gs2} are referred as " C_{iss} " which are the input capacitors. C_{gd1} and C_{gd2} are the capacitors from gate to drain of the high-side and the low-side power MOSFETs, respectively and referred to the data sheets as " C_{rss} " the reverse transfer capacitance. For example, t_{r1} and t_{r2} are the rising time of the high-side and the low-side power MOSFETs respectively, the required current I_{gs1} and I_{gs2} , are shown as below :

$$I_{gs1} = C_{gs1} \frac{dV_{g1}}{dt} = \frac{C_{gs1} x \, 12}{t_{r1}}$$
(1)

$$I_{gs2} = C_{gs1} \frac{dV_{g2}}{dt} = \frac{C_{gs1} \times 12}{t_{r2}}$$
(2)

Before driving the gate of the high-side MOSFET up to 12V, the low-side MOSFET has to be off; and the high-side MOSFET will be turned off before the low-side is turned on. From Figure 1, the body diode " D_2 " will be turned on before high-side MOSFETs turn on.

$$I_{gd1} = C_{gd1} \frac{dV}{dt} = C_{gd1} \frac{12}{t_{r1}}$$
 (3)

Before the low-side MOSFET is turned on, the C_{gd2} have been charged to V_{IN} . Thus, as C_{gd2} reverses its polarity and g_2 is charged up to 12V, the required current is

$$I_{gd2} = C_{gd2} \frac{dV}{dt} = C_{gd2} \frac{V_{IN} + 12}{t_{r2}}$$
(4)

It is helpful to calculate these currents in a typical case. Assume a synchronous rectified Buck converter, input voltage V_{IN} = 12V, V_{gs1} = 12V, V_{gs2} = 12V. The high-side MOSFET is PHB83N03LT whose C_{iss} = 1660pF, C_{rss} = 380pF, and t_r = 14ns. The low-side MOSFET is PHB95N03LT whose C_{iss} = 2200pF, C_{rss} = 500pF and t_r = 30ns, from the equation (1) and (2) we can obtain

$$I_{gs1} = \frac{1660 \times 10^{-12} \times 12}{14 \times 10^{-9}} = 1.428 \quad (A)$$
 (5)

$$I_{gs2} = \frac{2200 \times 10^{-12} \times 12}{30 \times 10^{-9}} = 0.88 \quad (A)$$
(6)

from equation. (3) and (4)

$$I_{gd1} = \frac{380 \times 10^{-12} \times 12}{14 \times 10^{-9}} = 0.326 \quad (A)$$
(7)

$$I_{gd2} = \frac{500 \times 10^{-12} \times (12+12)}{30 \times 10^{-9}} = 0.4 \quad (A)$$
(8)

the total current required from the gate driving source can be calculated as the following equations.

 $I_{g1} = I_{gs1} + I_{gd1} = (1.428 + 0.326) = 1.754$ (A) (9)

$$I_{g2} = I_{gs2} + I_{gd2} = (0.88 + 0.4) = 1.28 \quad (A)$$
(10)

By a similar calculation, we can also get the sink current required from the turned off MOSFET.

Select the Bootstrap Capacitor

Figure 2 shows part of the bootstrap circuit of the RT9624H. The V_{CB} (the voltage difference between BOOT and PHASE on RT9624H) provides a voltage to the gate of the high-side power MOSFET. This supply needs to be ensured that the MOSFET can be driven. For this, the capacitance C_{BOOT} has to be selected properly. It is determined by the following constraints.

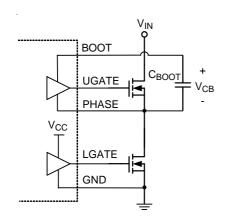


Figure 2. Part of Bootstrap Circuit of RT9624H

In practice, a low value capacitor C_{BOOT} will lead to the over charging that could damage the IC. Therefore, to minimize the risk of overcharging and to reduce the ripple on V_{CB}, the bootstrap capacitor should not be smaller than 0.1µF, and the larger the better. In general design, using 1µF can provide better performance. At least one low-ESR capacitor should be used to provide good local de-coupling. It is recommended to adopt a ceramic or tantalum capacitor.

Power Dissipation

To prevent driving the IC beyond the maximum recommended operating junction temperature of 125°C, it is necessary to calculate the power dissipation appropriately. This dissipation is a function of switching frequency and total gate charge of the selected MOSFET.

Figure 3 shows the power dissipation test circuit. C_L and C_U are the UGATE and LGATE load capacitors, respectively. The bootstrap capacitor value is 1μ F.

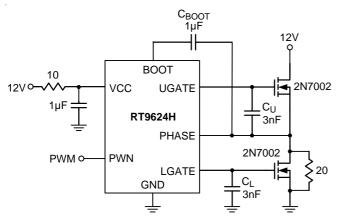


Figure 3. Power Dissipation Test Circuit

Figure 4 shows the power dissipation of the RT9624H as a function of frequency and load capacitance when $V_{CC} = 12V$. The value of C_U and C_L are the same and the frequency is varied from 100kHz to 1MHz.

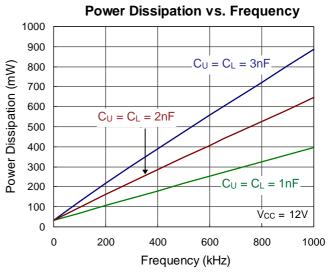


Figure 4. Power Dissipation vs. Frequency

The operating junction temperature can be calculated from the power dissipation curves (Figure 4). Assume

 $V_{CC} = 12V$, operating frequency is 200kHz and $C_U = C_L = 1$ nF which emulate the input capacitances of the highside and low-side power MOSFETs. From Figure 4, the power dissipation is 100mW. Thus, for example, with the WDFN-8SL 2x2 package, the package thermal resistance θ_{JA} is 46°C/W. The operating junction temperature is then calculated as :

 $T_J = (46^{\circ}C/W \times 100 mW) + 25^{\circ}C = 29.6^{\circ}C$ (11)

where the ambient temperature is 25°C.

Thermal Considerations

For continuous operation, do not exceed absolute maximum junction temperature. The maximum power dissipation depends on the thermal resistance of the IC package, PCB layout, rate of surrounding airflow, and difference between junction and ambient temperature. The maximum power dissipation can be calculated by the following formula :

$$\mathsf{P}_{\mathsf{D}(\mathsf{MAX})} = (\mathsf{T}_{\mathsf{J}(\mathsf{MAX})} - \mathsf{T}_{\mathsf{A}}) / \theta_{\mathsf{J}\mathsf{A}}$$

where $T_{J(MAX)}$ is the maximum junction temperature, T_A is the ambient temperature, and θ_{JA} is the junction to ambient thermal resistance.


Copyright ©2014 Richtek Technology Corporation. All rights reserved.	RICHTEK is a registered trademark of Richtek Technology Corporation.

RT9624H

For recommended operating condition specifications, the maximum junction temperature is 125°C. The junction to ambient thermal resistance, θ_{JA} , is layout dependent. For WDFN-8SL 2x2 package, the thermal resistance, θ_{JA} , is 46°C/W on a standard JEDEC 51-7 four-layer thermal test board. The maximum power dissipation at $T_A = 25$ °C can be calculated by the following formulas :

 $P_{D(MAX)}$ = (125°C - 25°C) / (46°C/W) = 2.17W for WDFN-8SL 2x2 package

The maximum power dissipation depends on the operating ambient temperature for fixed $T_{J(MAX)}$ and thermal resistance, θ_{JA} . The derating curve in Figure 5 allow the designer to see the effect of rising ambient temperature on the maximum power dissipation.

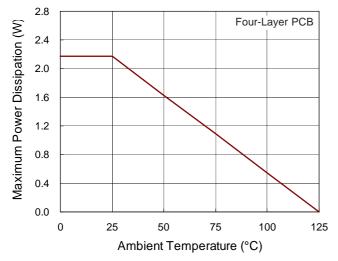



Layout Consideration

Figure 6 shows the schematic circuit of a synchronous buck converter to implement the RT9624H. The converter operates from 5V to 12V of input Voltage.

For the PCB layout, it should be very careful. The power circuit section is the most critical one. If not configured properly, it will generate a large amount of EMI. The location of Q1, Q2, L1 should be very close.

Next, the trace from UGATE, and LGATE should also be short to decrease the noise of the driver output signals. PHASE signals from the junction of the power MOSFET, carrying the large gate drive current pulses, should be as heavy as the gate drive trace. The bypass capacitor C1 should be connected to GND directly. Furthermore, the bootstrap capacitors (C_{BOOT}) should always be placed as close to the pins of the IC as possible.



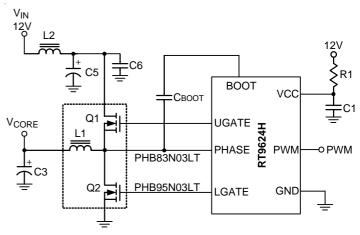


Figure 6. Synchronous Buck Converter Circuit

Outline Dimension

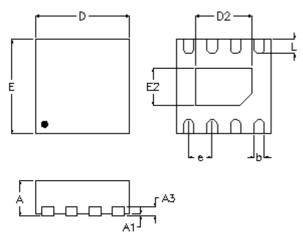



DETAIL A Pin #1 ID and Tie Bar Mark Options

Note : The configuration of the Pin #1 identifier is optional, but must be located within the zone indicated.

Symbol		Dimensions In Millimeters		Dimensions In Inches		
		Min.	Max.	Min.	Max.	
	А	0.700	0.800	0.028	0.031	
	A1	0.000	0.050	0.000	0.002	
	A3	0.175	0.250	0.007	0.010	
	b	0.200	0.300	0.008	0.012	
	D	1.900	2.100	0.075	0.083	
D2	Option1	1.150	1.250	0.045	0.049	
DZ	Option2	1.550	1.650	0.061	0.065	
	E	1.900	2.100	0.075	0.083	
E2	Option1	0.750	0.850	0.030	0.033	
ĽΖ	Option2	0.850	0.950	0.033	0.037	
	e 0.500		0.500 0.020		020	
	L	0.250	0.350	0.010	0.014	

W-Type 8SL DFN 2x2 Package

Richtek Technology Corporation

14F, No. 8, Tai Yuen 1st Street, Chupei City Hsinchu, Taiwan, R.O.C. Tel: (8863)5526789

Richtek products are sold by description only. Richtek reserves the right to change the circuitry and/or specifications without notice at any time. Customers should obtain the latest relevant information and data sheets before placing orders and should verify that such information is current and complete. Richtek cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Richtek product. Information furnished by Richtek is believed to be accurate and reliable. However, no responsibility is assumed by Richtek or its subsidiaries for its use; nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Richtek or its subsidiaries.