#### Overview:

There may be instances where the 12A continuous current handling capability of the ICON H-Bridge is not adequate for a specific application. For higher current applications there are at least two options that can be implemented to allow the ICON H-Bridge to meet the needs of the design.

The first option is to increase the power dissipating capability of your system. This can most easily be accomplished by increasing the forced airflow over the ICON H-Bridge with a high-speed, high-volume, fan. But even with increased airflow the ICON H-Bridge will probably not be capable of continuously handling more than 20A of continuous current due to the size of the ICON H-Bridge PCB.

The second option is to operate multiple ICON H-Bridges in parallel. The N-channel MOSFETs that make up the H-bridges can efficiently share current, thus increasing the overall current handling capability of your system. In addition, the number of control lines required to interface to each of the MOSFETs is not increased since these control lines may also be paralleled. In this application note a single PIC16F873 (Microchip) microcontroller was used to control four ICON H-Bridge modules.

An analog-to-digital converter (ADC, internal to the PIC16F873) was used to establish a pulse-width-modulation duty-cycle (PWM, also internal to the PIC16F873) to control four ICON H-Bridge modules connected in parallel. The system was configured for unidirectional speed control and was tested at 24V with a resistive load of  $0.389\Omega$ . A custom PCB was designed to carry the four ICON H-Bridge modules and the control circuitry. In testing, this design was able to deliver 48A of continuous current to the load at a 98% duty cycle (roughly 900W) for several hours.

## H-Bridge Configuration:

www.DataSheet

The ICON H-Bridge modules were configured to operate in "direct drive" mode for this application note. All other settings in the ICON H-Bridges were left in their default state (as described in ICON H-Bridge datasheet). A single ICON Interface Module was used to program the ICON H-Bridges for direct drive mode using the ICON Interface Module control software available at the <a href="https://www.solutions-cubed.com">www.solutions-cubed.com</a> web site.

In direct drive mode the serial DIN line of each H-bridge becomes the /ENABLE line. Driving this line to 0V turns on the H-bridge, and enables the H-bridge control lines (HI-A, LO-B, HI-B, and LO-A) to actively control the MOSFETs on all four H-Bridges. Additionally, direct drive mode converts the DOUT line from a serial output to a STATUS line. When this line is at a logic high (+5V) the H-bridge is disabled. A logic low indicates that the H-bridge is enabled.

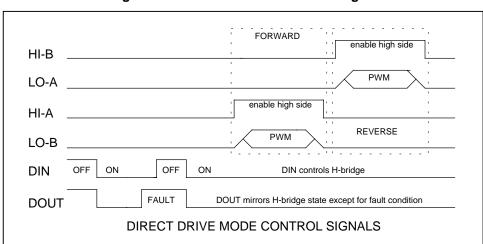


Figure 1: Direct Drive Mode Control Signals

ICON DC Motor Control System - Solutions Cubed www.solutions-cubed.com

It would be feasible to configure the PIC16F873 to test the ICON H-Bridges for direct drive mode of operation on power-up by toggling the DIN line and checking to see if the DOUT line follows the input. If the devices were not configured for direct drive mode they could be programmed to operate in direct drive mode via the DIN and DOUT connections of each H-bridge and the ICON H-Bridge communication protocol. This would eliminate the need for the ICON Interface Module used during the programming phase of this application note. There is also no reason that this application note could not be modified to implement the full serial communication protocol.

#### **Hardware:**

The custom PCB was designed to mount all four ICON H-Bridges in close proximity to each other. Mounting holes were included for the ICON Active Cooling fans. ¼" bolts were used as the connection points for both the load and the load supply, and were responsible for carrying the high currents required for this application note. As mentioned earlier the load supply was 24V and rated for 60A. The 12V supply required to power each ICON H-Bridge and the four cooling fans was provided by a separate 12V power supply. The 5V necessary to power the PIC16F873 was generated with a linear regulator connected to the 12V power supply.

Connector J2 (the 20 pin 0.1" shrouded header) was included and mirrors many of the connections of the ICON Interface Module. This allows the design to work with the ICON Adapter Board. The ICON Adapter Board was used to provide the analog input signal for PWM generation and TTL to RS232 conversion for the serial interface built into the application.

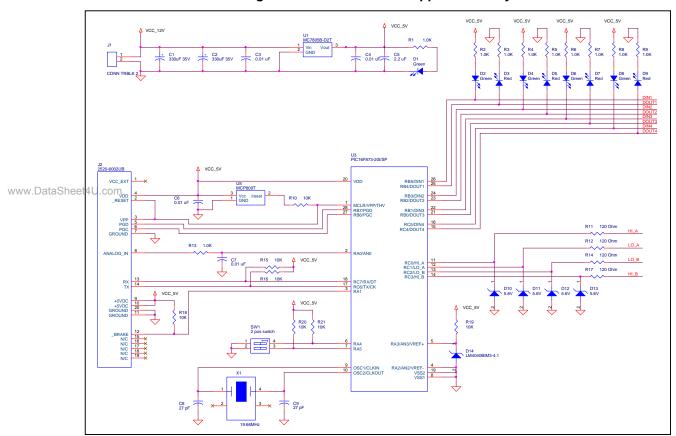


Figure 2: PIC16F873 and Support Circuitry

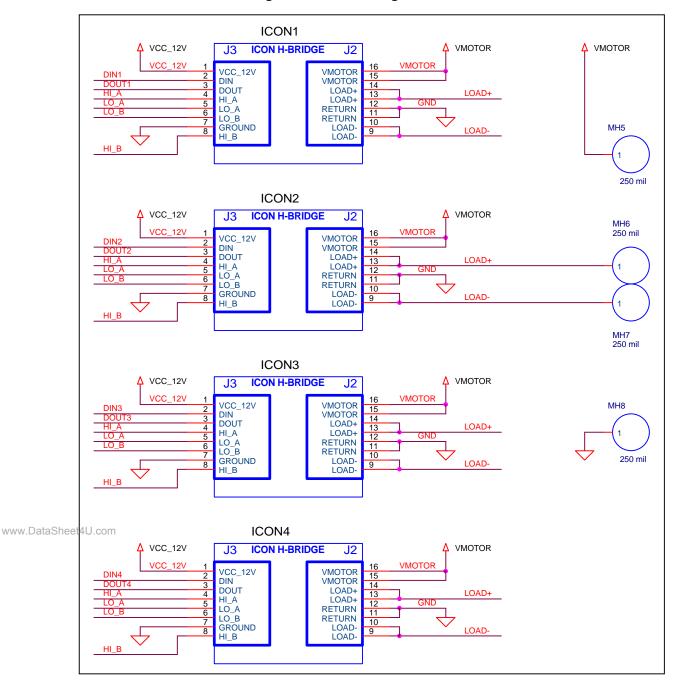


Figure 3: ICON H-Bridge Connections

The custom PCB used in this design was a 4" x 7.1" 2-layer board with components on the top-side only. The copper cladding was a standard ½ ounce thickness, and the high current carrying traces measured roughly 1" wide. This board was not designed to continuously carry a high load current, but was designed to allow for testing of the ICON H-Bridges for several hours at their maximum current rating (48A continuous).

Boards designed for continuous loads of this magnitude should use copper cladding of 1-2 ounce thickness and should provide for some means of cooling the carrier board PCB as well as the ICON H-Bridge modules.

H-BRIDGE R2

Figure 4: AN603 PCB Layout

Figure 5: AN603 Bill of Materials

Manufacturer

Manufacturer Part

Description

Number					Number
1	2	C1 C2	330UF 35V RADIAL 1050MA RIP	Panasonic	EEU-FC1V331
2	4	C3 C4 C6 C7	.01UF 50V CERAMIC CAP 0805 SMD	Panasonic	ECU-V1H103KBG
3	1	C5	CAP 2.2UF 16V CERAMIC Y5V 1206	Murata	GRM42-6Y5V225Z016AK
4	2	C8 C9	27PF 50V CERAMIC CAP 0805 SMD	Panasonic	ECU-V1H270JCG
5	5	D1 D2 D4 D6 D8	SMT 1206 GREEN LED	LiteOn	LTST-C150GKT
6	4	D3 D5 D7 D9	SMT 1206 RED LED	LiteOn	LTST-C150EKT
.com <sup>7</sup>	4	D10 D11 D12 D13	DIODE 5.6V ZENER TO236/SOT23	Diodes Inc.	BZX84C5V6
8	1	D14	4.096V 0.2% REFERENCE	National	LM4040BIM3-4.1
9	1	J1	CONN TERM BLOCK 2POS 5.08MM	Phoenix Contact	1715721
10	1	J2	DUAL HEADER 20 VERT. 0.1"	3M	2520-6002UB
11	10	R1 R2 R3 R4 R5 R6 R7 R8 R9 R13	RES 1.0K OHM 1/10W 5% 0805 SMD	Panasonic	ERJ-6GEYJ102
12	7	R10 R15 R16 R18 R19 R20 R21	RES 10K OHM 1/10W 5% 0805 SMD	Panasonic	ERJ-6GEYJ103
13	4	R11 R12 R14 R17	RES 120 OHM 1/10W 5% 0805 SMD	Panasonic	ERJ-6GEYJ121
14	1	SW1	SWITCH 2 POS DIP TAPE SEAL SMD	CTS Corporation	219-2LPST
15	1	U1	5V LINEAR REG. D2PAK	On Semi	MC7805B-D2T
16	4	U2 U4 U6 U7	ICON H-BRIDGE REV3	Solutions Cubed	_
17	1	U3	MICROCONTROLLER	Microchip	PIC16F873-20I/SP
18	1	U5	RESET CIRCUIT	Microchip	MCP809T-300I/TT
19	1	X1	CRYSTAL 19.66MHZ SMD	Epson	MA-306-19.660M-CQ

www.DataSheet4U.

Item

Quantity Part Reference

#### **Additional Hardware Information:**

<u>DIP Switch</u> – This component (labeled SW1 on the PCB and schematic) is used to set some operating parameters in this application. This part is a dual surface mount DIP switch. Switch one on the dual DIP switch selects between single or quad H-bridge operation. Switch two can be used to disable or enable the H-bridges that are selected with switch one.

Figure 6: Dual DIP Switch (SW1) Settings

Switch	ON	OFF
Switch 1	Only H-bridge 1 is operational	H-bridges 1, 2, 3, and 4 are
		operational
Switch 2	H-bridge operation enabled	H-bridge operation disabled

If a fault condition occurs when operating in direct drive mode the only way to clear the fault is by disabling the H-bridge with a fault and then re-enabling it. This can be done with switch 2. When an H-bridge is enabled the green indicator LED associated with it will be lit. When the H-bridge is disabled the red status LED is lit. If a fault condition has occurred both LEDs will be lit.

<u>Serial Communication Link</u> - A serial communication link was used in this application note to send speed and H-bridge status data to an ASCII terminal. The hardware is connected for bidirectional communication but this application note only supports sending data. The serial data is configured for 38.4KBPS, 8N1, TTL level, true data. An ICON Adapter Board is connected to component J2 via a ribbon cable and is used to provide the analog control signal and to convert the TTL serial data to RS232 levels.

<u>LED Indicators</u> – As previously mentioned each ICON H-Bridge module has a set of indicator LEDs associated with it. When an H-bridge is enabled the green indicator LED will be lit. When disabled the red LED is lit. If an over-current or over-temperature fault occurs then both LEDs will be lit. There is one hardware consideration associated with the red status LEDs. The ICON H-Bridge modules have a pseudo open-collector output. When the ICON H-Bridge outputs 5V it is actually configuring its output pin as an input, and the line is pulled to 5V with a 2.2KΩ resistor. This has the effect of creating a voltage divider between the 2.2KΩ resistor on the H-bridge, the status LED, and the 1.0KΩ resistor associated with the LED. The output voltage due to this relationship is closer to 3V than 5V. In systems where this could have an adverse effect the status LED and 1.0KΩ resistor should be omitted.

#### www.DataSheet4U.com

### Firmware:

The firmware used in this application note was generated using the CCS, Inc. PIC C compiler. The code is pretty straightforward and provides analog control of a unidirectional DC motor.

Essentially the PIC16F873 regularly checks a DIP switch with two switches. These switch settings determine first if any ICON H-Bridge modules should be enabled. Secondly, they are used to determine whether all H-bridges (1,2,3 and 4) should be enabled or whether only H-bridge1 should be enabled. The function that checks the state of the switches is also responsible for reading the status inputs from each H-bridge to determine if a fault has occurred. If a fault has occurred a flag is set for the H-bridge experiencing the fault condition.

After the status of the H-bridges are determined the program will read the 10 bit ADC and move that value to the PWM register used to drive the low side MOSFET (LO-B). If the ADC reads 0 then the high side MOSFET (HI-A) is turned off. The analog input should range from 0-4.096V.

Finally, a serial data interface (38.4KBPS, 8N1, TTL level) sends the H-bridge status information and the PWM settings (as a percentage). This information can be read with a terminal program once the TTL level data is converted to RS232 levels.

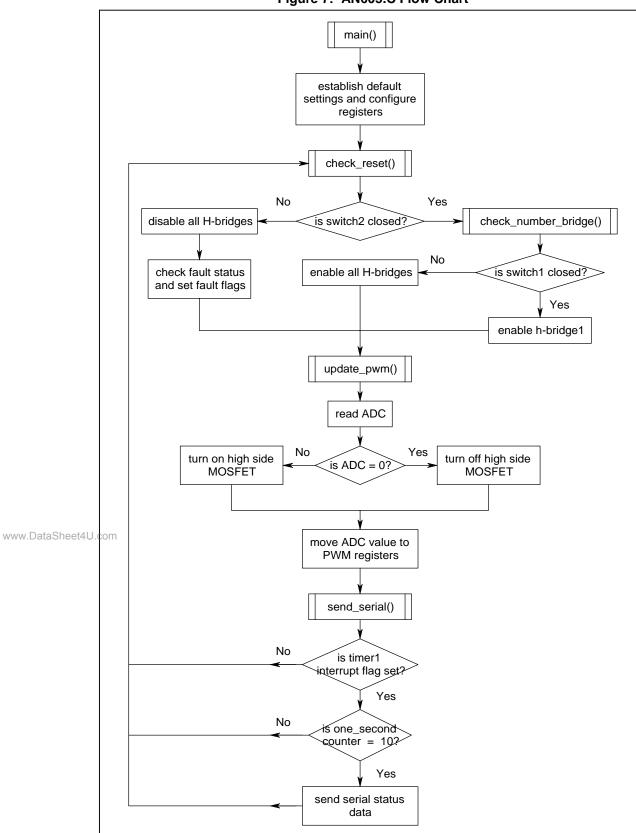


Figure 7: AN603.C Flow Chart

Figure 8: AN603 Code Listing

```
//
                   Application Note 603 (AN603)
            //
                   Parallel ICON H-Bridges
            //
                   Date 04-02-02
            //
                   Description: This application note allows a single
            //
                   PIC16F873 to control up to 4 ICON H-Bridge modules.
            //
                   These modules are connected in parallel and have
            //
                   been pre-programmed to operate in direct drive mode
            //
                   with an ICON Interface Module before being placed
            //
                   into this system.
            //
            //
                   The firmware was generated with the CCS C compiler
            //
                   (www.ccsinfo.com) designed for use with Microchip's
            //
                   (www.microchip.com) line of PIC microcontrollers.
            //
            //
                   An ICON Adapter Board was used to introduce a control
            //
                   voltage and to translate TTL level data to RS232
            //
                   levels for the serial output.
            //Pin definitions, include files, and compiler directives
            #include <16F873.h>
            #use delay(clock=19660000)
            #fuses HS,NOWDT
            #define PIN_ADC_IN
            #define PIN BRAKE
                                 41
            #define PIN_VREFN
                                 42
            #define PIN_VREFP
                                 43
            #define PIN SW1
                                 44
            #define PIN SW2
                                 45
                                 48
            #define PIN DO3
            #define PIN DI3
                                 49
            #define PIN DO2
                                 50
www.DataSheet##define PIN_DI2
                                 51
                                 52
            #define PIN DO1
            #define PIN DI1
                                 53
            #define PIN_HIA
                                 56
            #define PIN LOA
                                 57
            #define PIN_LOB
                                 58
            #define PIN_HIB
                                 59
            #define PIN DO4
                                 60
            #define PIN DI4
                                 61
            #use rs232(baud=38400,parity=N,xmit=PIN C6,rcv=PIN C7)
            #zero ram
                                                      //clear ram
            #use
                  fast_io(A)
                                                      //Ensure port direction is not changed
            #use fast io(B)
                                                      // unless specified by code
            #use fast_io(C)
```

```
//PIC RAM register and bit definitions
           #byte PortA
                        = 0x05
           #byte PortB
                        = 0x06
           #byte PortC = 0x07
           #byte adresh = 0x1E
           #byte adresl = 0x9E
           #byte status = 0x03
           #byte indf = 0x00
           #bit
                 T1if
                         = 0x0C.0
                                                   //Define timer 1 interrupt flag
           //variable definitions
           float speed;
                                                   //define global pwm value
           long pwmvalue;
           int
                  HB_State;
           int
                  one_second;
           #bit
                  HB1 Enable = HB_State.0
                                                   //define flags detailing which H-bridges
                                                   // should be enabled
           #bit
                  HB2_Enable = HB_State.1
           #bit
                  HB3_Enable = HB_State.2
           #bit
                 HB4_Enable = HB_State.3
           #bit
                  HB1 Fault = HB State.4
                                                   //define flags detailing which H-bridges
                 HB2 Fault = HB State.5
           #bit
                                                   // have a fault
           #bit
                  HB3 Fault = HB State.6
           #bit
                  HB4_Fault = HB_State.7
           // Functions
           //
           // check number bridges: This function reads the
                  dual DIP switch connected to port A and
           //
           //
                  determines whether the system should be
           //
                  configured for 1 or 4 ICON H-Bridge
www.DataSheet4...com Modules.
           void check_number_bridges()
            byte dip value;
                                                   //define variable for dip switch value
            dip_value = PortA & 0b00010000;
                                                   //capture port A dip switch settings
            dip_value = dip_value >> 4;
                                                   //rotate value so it equals 0 or 1
            switch(dip_value)
                                                   //determine case based on dip switch
                  case 0:
                  HB1_Enable = True;
                                                   //case 0 only one H-bridge in use
                   HB2_Enable = False;
                   HB3 Enable = False;
                   HB4_Enable = False;
                   break;
```

```
case 1:
                    HB1_Enable = True;
                                                       //case 1 enables all 4 H-bridges
                    HB2_Enable = True;
                    HB3 Enable = True;
                    HB4_Enable = True;
                    break;
                   }
             }
            // check reset: This function checks the DIP
            //
                   switch connected to port A to see if the
            //
                   ICON H-Bridges can be enabled or if they
            //
                   should be turned off. If the H-bridges
            //
                   can be turned on then the check number bridges
            //
                   function is called. This routine will also
            //
                   update the status fault flag associated
                   with each H-bridge.
            void check_reset()
              byte dip_value;
                                                       //define variable for dip switch value
                                                       //capture port A.5 dip switch setting
              dip value = PortA & 0b00100000;
              dip_value = dip_value >> 5;
                                                       //rotate value so it equals 0 or 1
              switch(dip_value)
                                                       //determine case based on dip switch
                   case 0:
                    check_number_bridges();
                                                       //case 0 turn on the H-bridges
                    break;
                   case 1:
                    HB1 Enable = False;
                                                       //disable H-bridges is off
                    HB2 Enable = False;
                    HB3_Enable = False;
                    HB4 Enable = False;
www.DataSheet4U.com
                    break;
                   }
              if (input(PIN_DO1) == True)
                                                       //Test each H-bridge status flag to see if a
                    HB1 Fault = True;
                                                       // fault condition is present
              else
                    HB1_Fault = False;
              if (input(PIN_DO2) == True)
                    HB2 Fault = True;
              else
                    HB2_Fault = False;
              if (input(PIN DO3) == True)
                    HB3_Fault = True;
              else
                    HB3_Fault = False;
```

```
if (input(PIN DO4) == True)
                   HB4 Fault = True;
             else
                   HB4 Fault = False;
             }
            // enable_HB: This function checks the HBx_Enable
                  flag. If the flag is true then the H-bridge
            //
                  is enabled.
           void enable HB()
             {
                  if (HB1 Enable == True)
                                                     //test H-bridge enable flag
                    output_low(PIN_DI1);
                                                     // if true then enable H-bridge
                  else
                    output_high(PIN_DI1);
                                                     // otherwise diable H-bridge
                  if (HB2_Enable == True)
                                                     //repeat for all four H-bridges
                    output_low(PIN_DI2);
                  else
                    output_high(PIN_DI2);
                  if (HB3 Enable == True)
                    output_low(PIN_DI3);
                  else
                    output_high(PIN_DI3);
                  if (HB4_Enable == True)
                    output low(PIN DI4);
                    output_high(PIN_DI4);
www.DataSheet
            // update pwm: This function reads the 10-bit analog
           //
                  value present at RAO. The ADC is set up for
           //
                  0-4.096VDC input (4mV per bit). The C compiler
           //
                  used in this application note should have
            //
                  returned a 10 bit value for direct movement
            //
                  to the PWM register associated with the PIC's
            //
                  PWM generation hardware. This was not the
           //
                  case and may be due to a coding error on our
           //
                  part or an error in the version of the C
            //
                  compiler used. In either case the ADC registers
                  were manipulated in this routine to provide
            //
                  10-bit resolution.
           void update_PWM()
```

```
pwmvalue = read adc():
                                                         //read ADC at RA0
              pwmvalue = pwmvalue << 2;
                                                         //rotate adresh value for 2 LSBs in adresl
              bit set(status,5);
                                                         //select bank 1 RAM
              indf = adresl >> 6:
                                                         //move LSBs to and store in indf register
              bit_clear(status,5);
                                                         //select bank 0 RAM
              pwmvalue = pwmvalue + indf;
                                                         //add indf to pwm storage to get 10 bit result
              if (pwmvalue == 0)
                                                         //if value is equal to 0 then turn off high side
                    output_low(PIN_HIA);
                                                        // driver via control pin
              else
                                                         //if ADC not equal zero turn on high side
                   output high(PIN HIA);
                                                         // driver via control pin
                                                         //use ADC to set CCP1 PWM value
              set_pwm1_duty(pwmvalue);
              }
            // send serial: This function sends the PWM value
                    as a percentage (0-100%) and is labeled
            //
                    "Speed". A message associated with each
                    H-bridge is sent detailing the state of
            //
                    each H-bridge (enabled or disabled) and if
            //
            //
                    the H-bridge is enabled its status is also
            //
                    sent (OK or FAULT). Data is sent in ASCII
                   format at 38.4KBPS, 8N1. This data can be
            //
            //
                    displayed on any ASCII terminal if the data
                    is converted to RS232 format.
            void send_serial()
                                                         //this routine sends the duty cycle value
                                                         // and the status of each H-bridge
              if (T1if == True)
                                                         //test for timer overflow which occurs
                                                         // every 100ms
                    SET TIMER1(0):
                                                         //clear timer 1
                                                         //clear timer 1 overflow flag
                    T1if = False;
                                                         //test 1 second timer counter
                    if (one second == 10)
                     {
www.DataSheet4U.com
                     one_second = 0;
                                                         //reset 1 second timer counter
                                                         //store PWM in 32 bit variable
                     speed = pwmvalue
                                                         //send speed value as XXX.X% setting
                     printf("\n\rSpeed = \%3.1f\%\%\n\r",(speed*100/1023));
                     if (HB1_Enable == True)
                                                        //determine state of H-bridge
                           printf("H-Bridge1 Enabled"); //display H-bridge enabled message
                           if (HB1 Fault == True)
                                   printf(" FAULT\n\r"); //display fault message
                           else
                                   printf(" OK\n\r");
                                                         //display OK message
                     else
                                                         //display disabled message
                           printf("H-Bridge1 Disabled\n\r");
```

```
//repeat for all H-bridges
                     if (HB2 Enable == True)
                          printf("H-Bridge2 Enabled");
                          if (HB2 Fault == True)
                                 printf(" FAULT\n\r");
                          else
                                 printf(" OK\n\r");
                          }
                     else
                          printf("H-Bridge2 Disabled\n\r");
                     if (HB3 Enable == True)
                          printf("H-Bridge3 Enabled");
                          if (HB3_Fault == True)
                                 printf(" FAULT\n\r");
                          else
                                 printf(" OK\n\r");
                          }
                     else
                          printf("H-Bridge3 Disabled\n\r");
                     if (HB4_Enable == True)
                          printf("H-Bridge4 Enabled");
                          if (HB4_Fault == True)
                                 printf(" FAULT\n\r");
                          else
                                 printf(" OK\n\r");
                          }
                     else
                          printf("H-Bridge4 Disabled\n\r");
                  }
                   else
                    one_second = one_second + 1;
www.DataSheet4U.com
             }
            // main: The main function sets up many of the
                   registers used by this application note
                   and calls four functions.
            void main()
             setup adc ports(RA0 ANALOG RA3 RA2 REF); //configure ADC for RA0 vref at RA2,3
             setup_adc(ADC_CLOCK_DIV_32); //ADC clock setting
             setup_spi(FALSE);
                                               //disable SPI port
             setup_counters(RTCC_INTERNAL,RTCC_DIV_2); //timer0 is Fosc/2
             setup_timer_1(T1_DIV_BY_8|T1_INTERNAL);
                                                             //timer1 divide by 8
                                                             //update PWM every period
             setup_timer_2(T2_DIV_BY_1,255,1);
             setup_ccp1(CCP_PWM);
                                               //CCP1 set for PWM function
                                               //CCP2 set for PWM function
             setup_ccp2(CCP_PWM);
                                               //set serial data speed to 38400
             set uart speed(38400);
                                               //establish I/O settings for ports
             set tris a(0xFF);
             set_tris_b(0xD5);
```

```
set tris c(0x90);
 set_adc_channel(0);
                                    //select RA0 for ADC input
 delay us(10);
                                     //delay 10us for ADC setting
 output_low(PIN_LOA);
                                    //initialize H-Bridge control lines to
 output low(PIN HIB);
                                    // a disabled state
 output_low(PIN_LOB);
 output_low(PIN_HIA);
 output high(PIN DI1);
 output high(PIN DI2);
 output high(PIN DI3);
 output high(PIN DI4);
 set_pwm2_duty(0);
                                     //initialize PWM output to 0
 set pwm1 duty(0);
 delay ms(1000);
                                     //wait a second before running main loop
while(True)
                                     //This is the main program loop
 check_reset();
                                     //check dip switch for user reset
                                    //enable h-bridges based on HBx_Enable flags
 enable_HB();
                                    //read ADC at RA0 and use value for PWM setting
 update PWM();
 send serial();
                                    //send program data to PC serial port
 }
```

# **Summary:**

This application note provides one method that may be implemented to allow a single device to control multiple ICON H-Bridge modules. The hardware and components used in this design are flexible enough to be used for a much more complex control system. The modular nature of the ICON H-Bridge and its simplified "direct-drive" mode of control were exploited in this design to provide the components of a medium current motor controller. Additionally, the fault protections built into the ICON H-Bridge provided excellent protection for both the H-bridges and the load connected to them. The status output flags were also useful in ensuring that the controlling device was aware of fault conditions.

In this application note the ICON H-Bridge was easily designed into a system that otherwise would require significant time to engineer. For low or medium volume production runs a design utilizing parallel ICON H-Bridge modules is a superior solution.

www.DataSheet