# HMS30C7202

**Highly-integrated MPU**(ARM Based 32-Bit Microprocessor)

# **Datasheet**

Version 1.4

www.DataSheet.in

Hynix Semiconductor Inc.







# www.DataSheet.in



# Copyright. 2002 Hynix Semiconductor Inc.

ALL RIGHTS RESERVED. No part of this publication may be copied in any form, by photocopy, microfilm, retrieval system, or by any other means now known or hereafter invented without the prior written permission of Hynix Semiconductor Inc.

Hynix Semiconductor Inc.

#1, Hyangjeong-dong, Heungduk-gu, Cheongju-si, Chungcheonbuk-do, Republic of Korea

**Taiwan** 

Telephone: 886-(0)2-2500-8357

Facsimile: 886-(0)2-2509-8977

Homepage: www.hynix.com

Technical Support Homepage: <a href="www.softonchip.com">www.softonchip.com</a>

# H.Q. of Hynix Semiconductor Inc. Marketing Site

Telephone: 82-(0)43-270-4070 Telephone: 82-(0)43-270-4085 Facsimile: 82-(0)43-270-4099 Facsimile: 82-(0)43-270-4099

# **World Wide Sales Network**

#### U.S.A.

Telephone: 1-408-232-8757 Facsimile: 1-408-232-8135

HMS30C7202 Datasheet, ver1.4

May 12, 2004

# Sales in Korea

Telephone: 82-(0)2-3459-3843 Facsimile: 82-(0)2-3459-3945

# **Hong Kong**

Telephone: 852-2971-1640 Facsimile: 852-2971-1622



# **Proprietary Notice**

Hynix logo is trademark of Hynix Semiconductor Inc.

Neither the whole nor any part of the information contained in, or the product described in, this document may be adapted or reproduced in any material from excepts with the prior permission of the copyright holder.

The product described in this document is subject to continuous developments and improvements. All particulars of the product and its use contained in this document are given by Hynix in good faith. However, all warranties implied or expressed, including but not limited to implied warranties or merchantability, or fitness for purpose, are excluded.

This document is intended only to assist the reader in the use of the product. Hynix Semiconductor Inc. shall not be liable for any loss or damage arising from the use of any information in this document, or any error or omission in such information, or any incorrect use of the product. Hynix Semiconductor Inc. may make changes to specification and product description at any time without notice.

# **Change Log**

Issue	Date	Ву	Change
A-01	2002/08/27	Kisun Kim	The First Draft
A-02	2002/08/28	Kisun Kim	PMU Freq. Range / QFP Footprint / BGA Pin Diagram
A-03	2002/10/01	Kisun Kim	PKG Soldering Condition / Harry's Update
A-04	2002/10/05	Kisun Kim	CAN Interrupt Desc. / Interrupt controller FIQ Desc.
A-05	2002/10/14	Kisun Kim	Harry's Review (Chapter 1~5)
A-06	2002/12/28	Kisun Kim	Harry's Review (Chapter 6~11)
A-07	2003/01/09	Kisun Kim	SMI example / SMC / USB
A-08	2003/02/26	Injae Koo	DC Electrical Characteristics / RTC / USB
A-10	2003/03/03	Injae Koo	The First Release (Version 1.0)
A-11	2003/03/28	Injae Koo	LCD / CAN / Overview / DC E. Char. / GPIO (Version 1.1)
A-12	2003/06/03	Injae Koo	DMA / DC Char. / GPIO / Delete the I2S (Version 1.2)
A-13	2003/09/15	Injae Koo	ERRATA(version 1.0) is incorporated into this version
A-14	2004/05/12	Injae Koo	ADC/GPIO/SDRAMC/MMC/LCD/AC Characteristics (SMI)



# **FEATURES**

- 32-bit ARM7TDMI RISC static CMOS CPU core : Running up to 70 MHz
- 8Kbytes combined instruction/data cache
- Memory management unit
- Supports Little Endian operating system
- 2Kbytes SRAM for internal buffer memory
- On-chip peripherals with individual power-down:
- Multi-channel DMA
  - 4 Timer Channels with Watch Dog Timer
- Intelligent Interrupt Controller
- Memory controller for ROM, Flash, SRAM, SDRAM
- Power management unit
- LCD Controller for mono/color STN and TFT LCD
- Real-time clock (32.768kHz oscillator)
- Infrared communications (SIR support)
- 4 UARTs (16C550 compatible)
- PS/2 External Keyboard / Mouse interface
  - 2 Pulse-Width-Modulated (PWM) interface
- Matrix Keyboard control interface (8\*8)
- GPIO
- MMC / SMC Card interface
- 2 Controller Area Network (CAN)
- USB (slave)
  - On-chip ADC and interface module (Battery Check, Audio In, Touch Panel)
- On-chip DAC and interface module (8 Bit Stereo Audio Output)
- 3 PLLs

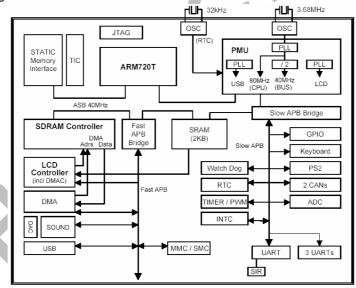


Figure A. Functional Block Diagram

- JTAG debug interface and boundary scan
- 0.25um Low Power CMOS Process
- 2.5V internal / 3.3V IO supply voltage
- 256-pin MQFP / FBGA package
- Low power consumption



# **OVERVIEW**

The HMS30C7202 is a highly integrated low power microprocessor for personal digital assistants, and other applications described below. The device incorporates an ARM720T CPU and system interface logic to interface with various types of devices. HMS30C7202 is a highly modular design based on the AMBA bus architecture between CPU and internal modules.

The on-chip peripherals include LCD controller with DMA support for external SDRAM memory, analog functions such as ADC, DAC, and PLLs. Intelligent interrupt controller and internal 2Kbytes SRAM can support an efficient interrupt service execution. The HMS30C7202 also supports voice recording, sound playback and a touch panel interface. UART, USB, PS2 and CAN provide serial communication channels for external systems. The power management features result in very low power consumption. The HMS30C7202 provides an excellent solution for personal digital assistants (PDAs), and data terminal running the Microsoft Windows CE operating system. Other applications include smart phones, Internet appliances, telematic systems and embedded computer.

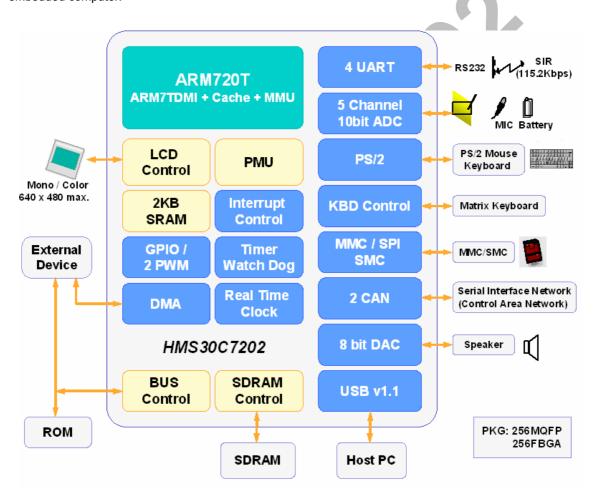


Figure B. System Configuration



# **TABLE OF CONTENTS**

1	ARCHI	TECTURAL OVERVIEW	9
	1.1 Pro	OCESSOR	9
		DEO	
	1.3 ME	MORY	9
	1.4 INT	ERNAL BUS STRUCTURE	
	1.4.1	ASB	
	1.4.2	Video bus	
	1.4.3	<i>APB</i>	
		RAM CONTROLLER	
		RIPHERAL DMA	
	1.6.1	Overview	
	1.6.2	Transfer sizes	
	1.6.3 1.6.4	Fly-by Timing	
	1.6.5	Sound output	
		RIPHERALS	11 11
		WER MANAGEMENT	
	1.8.1	Clock gating	
	1.8.2	PMU	12
		ST AND DEBUG	
•		SCRIPTION	
2			
	2.1 256	5-Pin Diagram	
	2.1.1	MQFP Type	13
	2.1.2	FBGA Type	
		DESCRIPTIONS	
	2.2.1	External Signal Functions	17
	2.2.2	Multiple Function Pins	20
		1 PORT A	
	2.2.2.		20
	2.2.2.		
	2.2.2.		
	2.2.2. 2.2.2.		
	2.2.2.		
	2.2.2.		
3	ARM72	OT MACROCELL	24
	3.1 AR	M720T Macrocell	24
4	MEMO	RY MAP	25
_	DE CELL O	DI I	
5	PMU &	PLL	27
	5.1 BLo	OCK FUNCTIONS	27
	5.2 Pov	WER MANAGEMENT	28
	5.2.1	State Diagram	
	5.2.2	Power management states	
	5.2.3	Wake-up Debounce and Interrupt	
		GISTERS	
	5.3.1	PMU Mode Register (PMUMODE)	
	5.3.2	PMU ID Register (PMUID)	
	5.3.3	PMU Reset /PLL Status Register (PMUSTAT)	
	5.3.4	PMU Clock Control Register (PMUCLK)	
	5.3.5	PMU Debounce Counter Test Register (PMUDBCT)	
	5.3.6 5.4 TIN	PMU PLL Test Register (PMUPLLTR)	<i>33</i>
	J.★ IIIV	TINUO	



	5.4.1	Reset Sequences of Power On Reset	
	5.4.2	Software Generated Warm Reset	35
	5.4.3	An Externally generated Warm Reset	
		, 0	
6	SDRA	M CONTROLLER	3′
		JPPORTED MEMORY DEVICES	
	6.2 RI	EGISTERS	
	6.2.1	SDRAM Controller Configuration Register (SDCON)	38
	6.2.2	SDRAM Controller Refresh Timer Register (SDREF)	
	6.2.3	SDRAM Controller Write buffer flush timer Register (SDWBF)	
	6.2.4	SDRAM Controller Wait Driver Register (SDWAIT)	
		OWER-UP INITIALIZATION OF THE SDRAMS	
		DRAM MEMORY MAP	
	6.5 Al	MBA Accesses and Arbitration	42
		IERGING WRITE BUFFER	
7	STATI	C MEMORY INTERFACE	44
		XTERNAL SIGNALS	
	7.2 Fu	UNCTIONAL DESCRIPTION	44
	7.2.1	Memory bank select	44
	7.2.2	Access sequencing	
	7.2.3	Wait states generation	1
	7.2.3	Burst read control	4.
	7.2.5	Byte lane write control	
	7.3 RI	EGISTERS	40
	7.3.1	MEM Configuration Register	40
		XAMPLES OF THE SMI READ, WRITE WAIT TIMING DIAGRAM	
	7.4.1	Read normal wait (Non-Sequential mode)	
	7.4.2	Read normal wait (Sequential mode)	
	7.4.3	Read burst wait (Sequential mode)	49
	7.4.4	Write normal wait (Sequential mode)	50
	7.5 IN	ITERNAL SRAM	
	7.5.1	Remapping Enable Register	5
	7.5.2	Remap Source Address Register	5
8	LCD C	CONTROLLER	52
	0.1 37	IDEO OPERATION	
	8.1.1	LCD datapath	
	8.1.1		
	8.1.2	Color/Grayscale Dithering	53
	8.1.3	How to order the bit on LD[7:0] output	
	8.1.4	TFT mode	
		EGISTERS	
		ICD Boston Control	ال
	8.2.1	LCD Power Control	
	8.2.2	LCD Controller Status/Mask and Interrupt Registers	
	8.2.3	LCD DMA Base Address Register	58
	8.2.4	LCD DMA Channel Current Address Register	58
	8.2.5	LCD Timing 0 Register	58
	8.2.6	LCD Timing 1 Register	
	8.2.7		
		LCD Timing 2 Register	
	8.2.8	LCD Test Register	
	8.2.9	Grayscaler Test Registers	6.
	8.2.10	LCD Palette registers	62
		IMINGS	
9	FAST	AMBA PERIPHERALS	64
	0.1	MA Covernous pa	_
		MA CONTROLLER	
	9.1.1	External Signals	64
	9.1.2	Registers	64
	9.1.2	2.1 ADR0	



9.1.2.2	ASR	65
9.1.2.3	TNR0	65
9.1.2.4	TSR	65
9.1.2.5	CCR0	65
9.1.2.6	ADR1	
9.1.2.7	TNR1	
9.1.2.8	CCR1	66
9.1.2.9		
9.1.2.1		
9.1.2.1		
9.1.2.1		
9.1.2.1		
	DMAC operation	
	C/ SPI Controller	
	External Signals	
9.2.2	Registers (SPI Mode)	69
9.2.2.1	SPIMMC Control Register (SPICR)	69
	SPIMMC Status Register (SPISR)	
9.2.2.3		70
9.2.2.4		70
9.2.2.5		70
9.2.2.6		71
9.2.3	Timings	71
9.2.4	SPI Operation for MMC	72
9.2.5	Multimedia Card Host Controller	
	Registers	
	MMC Mode Register	
9.2.6.2		74
9.2.6.3	MMC Status Register	74
9.2.6.4	-	
9.2.6.5	MMC Block Size Register	
9.2.6.6	MMC Block Number Register	76
9.2.6.7		
9.2.6.8		
9.2.6.9		
9.2.6.1		
9.2.6.1	8	
9.2.6.1		77
	Basic Operation in MMC Mode	
9.2.7.1	Write Operation	
	Read Operation	
	C CONTROLLER	
	External Signals	
9.3.2	Registers	79
9.3.2.1	SMC Command Register (SMCCMD)	
9.3.2.2	SMC Address Register (SMCADR)	80
9.3.2.3	SMC Data Write Register (SMCDATW)	
9.3.2.4		
9.3.2.5	SMC Configuration Register (SMCCONF)	
9.3.2.6	SMC Timing Parameter Register (SMCTIME)	
9.3.2.7	SMC Status Register (SMCSTAT)	
	VD INTERFACE	
9.4 <b>3</b> 001	External Signals.	
9.4.1 9.4.2	Registers	
9.4.2.1	SCONT	
9.4.2.2	SDADR	
	SLAVE INTERFACE	
9.5.1	Block Diagram	
9.5.2	Theory of Operation	
953	Endpoint FIFOs (Rr. Tr.)	90



	ternal Signals	
9.5.5 Re	gistersgisters	90
9.5.5.1	GCTRL	90
9.5.5.2	EPCTRL	90
9.5.5.3	INTMASK	91
	INTSTAT	
	PWR	
	DEVID	
,	DEVCLASS	
	INTCLASS	
	SETUPO / SETUP1	
9.5.5.10	ENDP0RD.	
9.5.5.11	ENDPOWT	
9.5.5.11	ENDP1RD.	
9.5.5.12	ENDP2WT	
10 SLOW A	MBA PERIPHERALS	95
	TERFACE CONTROLLER	
	ternal Signals	
10.1.2 Re	gistersgisters	
10.1.2.1	ADC Control Register (ADCCR)	96
10.1.2.2	ADC Touch Panel Control Register (ADCTPCR)	
10.1.2.3	ADC Battery check Control Register (ADCBACR)	97
10.1.2.4	ADC Sound Control Register (ADCSDCR)	97
10.1.2.5	ADC Interrupt Status Register (ADCISR)	97
10.1.2.6	ADC Tip Down Control Status Register (ADCTDCSR)	
10.1.2.7	ADC Direct Control Register (ADCDIRCR)	
10.1.2.8	ADC Direct Data Read Register (ADCDIRDATA)	
10.1.2.9	ADC 1 <sup>ST</sup> Touch Panel Data register	99
10.1.2.10	ADC 2 <sup>ND</sup> Touch Panel Data Register	99
10.1.2.11	ADC Main Battery Data Register (ADCMBDATA)	
10.1.2.12	ADC Backup Battery Data Register (ADCBBDATA)	
10.1.2.12		
	TERFACETERFACE	
	ock Diagram	
	gister Map	
	gisters	
10.2.3.1		
10.2.3.2	CAN Status Register	
10.2.3.3	CAN Error Counting Register	
10.2.3.4	CAN Bit Timing Register	
10.2.3.5	CAN Interrupt Register	
10.2.3.6	CAN Test Register	
10.2.3.7	CAN BRP Extension Register	
10.2.3.8	CAN Enable Register	
10.2.3.9	Interface X Command Request Register	
10.2.3.10	Interface X Command Mask Register	107
10.2.3.11	Interface X Mask 1 Register	108
10.2.3.12	Interface X Mask 2 Register	108
10.2.3.13	Interface X Arbitration 1 Register	109
10.2.3.14	Interface X Arbitration 2 Register	
10.2.3.15	Interface X Message Control Register	
10.2.3.16	Interface X Data A1 Register	
10.2.3.17	Interface X Data A2 Register.	
10.2.3.18	Interface X Data B1 Register.	
10.2.3.19	Interface X Data B2 Register.	
10.2.3.20	Transmission Request 1 Register.	
10.2.3.21	Transmission Request 2 Register.	
10.2.3.21	New Data 1 Register	
10.2.3.23	New Data 2 Register	
10.4.2.4.1	110W Dum 2 100510101	



10.2.3.24	Interrupt Pending 1 Register	
10.2.3.25	Interrupt Pending 2 Register	
10.2.3.26	Message Valid 1 Register	
10.2.3.27	Message Valid 2 Register	112
10.3 GPIO		114
10.3.1 Ext	ernal Signals	114
10.3.2 Reg	risters	114
10.3.2.1	ADATA	
10.3.2.2	ADIR	
10.3.2.3	AMASK	
10.3.2.4	ASTAT	
10.3.2.5	AEDGE	
10.3.2.6	ACLR	
10.3.2.7	APOL	
10.3.2.8	GPIO PORT A Enable Register	
10.3.2.9	BDATA	
10.3.2.10	BDIR	
10.3.2.10	BMASK	117
10.3.2.11	BSTAT	
10.3.2.12	BEDGE	
10.3.2.13	BCLK	
10.3.2.14	BPOL	
10.3.2.16 10.3.2.17	GPIO PORT B Enable Register	
	CDATA	
10.3.2.18	CDIR	
10.3.2.19	CMASK	
10.3.2.20	CBSTAT	
10.3.2.21	CEDGE	
10.3.2.22	CCLK	
10.3.2.23	CPOL	
10.3.2.24	GPIO PORT C Enable Register	118
10.3.2.25	DDATA	
10.3.2.26	DDIR	
10.3.2.27	DMASK	
10.3.2.28	DBSTAT	
10.3.2.29	DEDGE	
10.3.2.30	DCLK	
10.3.2.31	DPOL	
10.3.2.32	GPIO PORT D Enable Register	
10.3.2.33	EDATA	
10.3.2.34	EDIR	
10.3.2.35	EMASK	
10.3.2.36	EBSTAT	
10.3.2.37	EEDGE	
10.3.2.38	ECLK.	
10.3.2.39	EPOĽ	
10.3.2.40	GPIO PORT E Enable Register	119
10.3.2.41	Tic Test mode Register(TICTMDR)	119
10.3.2.42	PORTA Multi-function Select register(AMULSEL)	
10.3.2.43	SWAP Pin Configuration Register(SWAP)	
	IO Interrupt	
10.3.4 GP.	IO Rise/Fall Time	121
10.4 Interru	PT CONTROLLER	122
10.4.1 Blo	ck diagram	122
10.4.2 Reg	risters	122
10.4.2.1	Interrupt Enable Register (IER)	
10.4.2.2	Interrupt Status Register (ISR)	
10.4.2.3	IRQ Vector Register (IVR)	
10.4.2.4	Source Vector Register (SVR0 to SVR30)	
10.4.2.5	Interrupt ID Register (IDR)	125



10.4.2.6	Priority Set Register (PSR0 to PSR/)	125
10.5 MATRIX	Keyboard Interface Controller	127
10.5.1 Exte	ernal Signals	127
10.5.2 Reg	isters	127
10.5.2.1	Keyboard Configuration Register (KBCR)	128
10.5.2.2	Keyboard Scanout Register(KBSC)	
10.5.2.3	Keyboard Test Register (KBTR)	
10.5.2.4	Keyboard Value Register (KVR0)	
10.5.2.5	Keyboard Value Register (KVR1)	
	Keyboard Status Register (KVKT)  Keyboard Status Register (KBSR)	
10.5.2.6		
	ERFACE CONTROLLER	
	ernal Signals	
-	isters	
10.6.2.1	PSDATA	
10.6.2.2	PSSTAT	132
10.6.2.3	PSCONF	
10.6.2.4	PSINTR	133
10.6.2.5	PSTDLO	133
10.6.2.6	PSTPRI	
10.6.2.7	PSTXMT	
10.6.2.8	PSTREC	
10.6.2.9	PSPWDN	
	lication Notes	
	ernal Signals	
	ctional Description	
10.7.3 Reg	isters	
10.7.3.1	RTC Data Register (RTCDR)	137
10.7.3.2	RTC Match Register (RTCMR)	138
10.7.3.3	RTC Status Register (RTCS)	
10.7.3.4	RTC Control Register (RTCCR)	138
	The could region (in colo	
	ernal Signals	
	isters	
10.8.2. Reg		
	Timer [0,1,2] Base Register (T[0,1,2]BASE)	
10.8.2.2	Timer [0,1,2] Count Register (T[0,1,2]COUNT)	
10.8.2.3	Timer [0,1,2] Control Register (T[0,1,2]CTRL)	
10.8.2.4	Timer Top-level Control Register (TOPCTRL)	
10.8.2.5	Timer Status Register (TOPSTAT)	
10.8.2.6	Timer Lower 32-bit Count Register of 64-bit Counter (T64LOW)	141
10.8.2.7	Timer Upper 32-bit Count Register of 64-bit Counter (T64HIGH)	141
10.8.2.8	Timer 64-bit Counter Control Register (T64CTRL)	141
10.8.2.9	Timer 64-bit Counter Test Register (T64TR)	
10.8.2.10	Timer Lower 32-bit Base Register of 64-bit Counter (T64LBASE)	
10.8.2.11	Timer Upper 32-bit Base Register of 64-bit Counter (T64HBASE)	
10.8.2.12	PWM Channel [0,1] Count Register (P[0,1]COUNT)	
10.8.2.13	PWM Channel [0,1] Width Register (P[0,1]WIDTH)	
10.8.2.14	PWM Channel [0,1] Period Register (P[0,1]PERIOD)	
10.8.2.15	PWM Channel [0,1] Control Register (P[0,1]CTRL)	
10.8.2.16	PWM Channel[0,1] Test Register(P[0,1]PWMTR)	
	IR	
	ernal Signals	
10.9.2 Reg	isters	145
10.9.2.1	RBR/THR/DLL	146
10.9.2.2	IER/DLM	146
10.9.2.3	IIR/FCR	
10.9.2.4	LCR	
10.9.2.5	MCR	
10.9.2.6	LSR	
10.9.2.7	MSR	150
10.7.4./	141017	1,7 1



10.9.2.8 SCR		152
10.9.2.9 UartEn		
10.9.3 FIFO Interrupt Mode Operation		152
10.10 WATCHDOG TIMER		154
10.10.1 Watchdog Timer Operation		154
10.10.1.1 The Watchdog Timer Mode		
10.10.1.2 The Interval Timer Mode		
10.10.1.3 Timing of setting the overflow flag		
10.10.1.4 Timing of clearing the overflow flag		
10.10.2 Registers		
10.10.2.1 WDT Control Register (WDTCTRL)		155
10.10.2.2 WDT Control Register (WDTCTRE)		
10.10.2.2 WDT Status Register (WDTSTAT)		
1 3 8		157
10.10.3.2 Watchdog Timer Mode with Internal Reset Disable		
10.10.3.3 Watchdog Timer Mode with Manual Reset		
11 DEBUG AND TEST INTERFACE		150
11.1 Overview		159
11.2 SOFTWARE DEVELOPMENT DEBUG AND TEST INTERFACE		159
11.3 TEST ACCESS PORT AND BOUNDARY-SCAN		159
11.3.1 Reset		
11.3.2 Pull up Resistors		
11.3.3 Instruction Register		
11.3.4 Public Instructions		
11.3.5 Test Data Registers	•	163
11.3.6 Boundary Scan Interface Signals		164
11.4 PRODUCTION TEST FEATURES		
12 ELECTRICAL CHARACTERISTICS		173
12.1 ABSOLUTE MAXIMUM RATINGS		172
12.2 DC CHARACTERISTICS		1 /4
12.3 A/D CONVERTER ELECTRICAL CHARACTERISTICS		
12.4 D/A Converter Electrical Characteristics		
12.5 AC CHARACTERISTICS		
12.5.1 Static Memory Interface		
12.5.1.1 READ Access Timing (Single Mode)		
12.5.1.2 READ Access Timing (Burst Mode)		
12.5.1.3 WRITE Access Timing		
12.5.2 SDRAM Interface		
12.5.3 LCD Interface		
12.5.4 UART(Universal Asynchronous Receiver Transmitter)		183
12.6 PACKAGE		184
12.6.1 Recommended Soldering Conditions		184
12.6.1.1 MQFP(Metric Quad Flat Pack ) Type		
12.6.1.2 FBGA(Chip Array Ball Grid Array) Type		
12.6.2 Pictures of Package Marking		
13 APPENDIX		186
13.1 DEEP-SLEEP, WAKE-UP ISSUES OF HMS30C7202 PMU		186
13.1.1 Wake-up		
13.1.1 wake-up		186 186



LIST OF FIGURES	
Figure 5-1 PMU Power Management State Diagram	28
Figure 5-2 PMU Cold Reset Event	
Figure 5-3 PMU Software Generated Warm Reset	35
Figure 5-4 PMU An Externally Generated Warm Reset	36
Figure 6-1 SDRAM Controller Software Example and Memory Operation Diagram	39
Figure 8-1 Video System Block Diagram	
Figure 8-2 5:6:5 Combination of 16bpp Data	
Figure 8-3 Palette RAM Entries for 5:6:5 Combination	
Figure 8-4 Sample Code for 5:6:5 Palette Generation	
Figure 8-5 LCD Palette Word Bit Field for STN mode	
Figure 8-6 LCD Palette Word Bit Field for TFT mode	
Figure 8-7 Example Mono STN LCD Panel Signal Waveforms	
Figure 8-8 Example TFT Signal Waveforms, Start of Frame	
Figure 8-9 Example TFT Signal Waveforms, End of Last Line	
Figure 9-1 USB Block Diagram	
Figure 9-2 USB Serial Interface Engine	88
Figure 9-3 USB Device Interface Device Controller	
Figure 10-1 Typical CAN Network	102
Figure 10-2 Block Diagram of the CAN	103
Figure 10-3 Interrupt controller block diagram	127
Figure 10-4 A flow chart of the keyboard controllerFigure 10-5 PS/2 Controller Transmitting Data Timing Diagram	
Figure 10-5 FS/2 Controller Hansfillting Data Timing Diagram	
Figure 10-6 F3/2 Controller Receiving Data Tilling Diagram	
Figure 10-7 RTC ConflectionFigure 10-8 RTC Block Diagram	137
Figure 10-9 WDT Operation in the Watchdog Timer mode	
Figure 10-10 WDT Operation in the Interval Timer mode	
Figure 10-11 Interrupt Clear in the interval timer mode	
Figure 10-12 Interrupt Clear in the watchdog timer mode with reset disable	
Figure 10-13 Interrupt Clear in the watchdog timer mode with manual reset	
rigure to to interrupt olear in the watchadg timer mode with manda reset	
LIST OF TABLES	
LIST OF TABLES	
LIST OF TABLES Table 2-1 Pin Signal Type Definition	17
LIST OF TABLES  Table 2-1 Pin Signal Type Definition  Table 2-2 External Signal Functions	17 19
LIST OF TABLES Table 2-1 Pin Signal Type Definition	17 19
LIST OF TABLES  Table 2-1 Pin Signal Type Definition  Table 2-2 External Signal Functions  Table 4-1 Top-level address map	
LIST OF TABLES  Table 2-1 Pin Signal Type Definition  Table 2-2 External Signal Functions  Table 4-1 Top-level address map  Table 4-2 Peripherals Base Addresses	
LIST OF TABLES  Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition Table 2-2 External Signal Functions Table 4-1 Top-level address map Table 4-2 Peripherals Base Addresses Table 5-1 PMU Register Summary Table 5-2 PMU Bit Settings for a cold Reset Event within PMUSTAT Register Table 5-3 PMU Bit Settings for a Software Generated Warm Reset within PMUSTAT Regist Table 5-4 PMU Bit Settings for a Warm Reset within PMUSTAT Regist Table 6-1 SDRAM Controller Register Summary Table 6-2 SDRAM Row/Column Address Map Table 6-3 SDRAM Device Selection Table 7-1 Static Memory Controller Register Summary Table 8-1 LCD Colorgrayscale intensities and modulation rates Table 8-2 How to order the bit on LD[7:0] in 8-bit color STN mode Table 8-3 LCD Controller Register Summary Table 9-1 DMA Controller Register Summary Table 10-1 ADC Controller Register Summary	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition Table 2-2 External Signal Functions Table 4-1 Top-level address map Table 4-2 Peripherals Base Addresses Table 5-1 PMU Register Summary Table 5-2 PMU Bit Settings for a cold Reset Event within PMUSTAT Register Table 5-3 PMU Bit Settings for a Software Generated Warm Reset within PMUSTAT Register Table 5-4 PMU Bit Settings for a Warm Reset within PMUSTAT Register Table 6-1 SDRAM Controller Register Summary Table 6-2 SDRAM Row/Column Address Map Table 6-3 SDRAM Device Selection Table 7-1 Static Memory Controller Register Summary Table 8-1 LCD Colorgrayscale intensities and modulation rates Table 8-2 How to order the bit on LD[7:0] in 8-bit color STN mode Table 8-3 LCD Controller Register Summary Table 9-1 DMA Controller Register Summary Table 10-1 ADC Controller Register Summary Table 10-1 ADC Controller Register Summary Table 10-2 Interrupt controller Configuration Table 10-3 Interrupt controller Register Summary	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	
Table 2-1 Pin Signal Type Definition	



## 1 ARCHITECTURAL OVERVIEW

#### 1.1 Processor

The ARM720T core incorporates an 8K unified write-through cache, and an 8 data entry, 4-address entry write buffer. It also incorporates an MMU with a 64 entry TLB, and WinCE enhancements.

#### 1.2 Video

The integrated LCD controller can control STN displays and TFT displays, up to 640x480 (VGA) resolution and 16bit color. On mono displays it can directly generate 16 gray scales.

# 1.3 Memory

HMS30C7202 incorporates two independent memory controllers. A high-speed 16-bit wide interface connects directly to one or two 16, 64,128 or 256MBit SDRAM devices, supporting DRAM memory sizes in the range 2 to 64MB. A separate 32- bit data path interfaces to ROM or Flash devices. Burst mode ROMs are supported, for increased performance, allowing operating system code to be executed directly from RQM. Since the ROM and SDRAM interfaces are independent, the processor core can execute ROM code simultaneously with video DMA access to the SDRAM, thus increasing total effective memory bandwidth, and hence overall performance.

## 1.4 Internal Bus Structure

The HMS30C7202 internal bus organization is based upon the AMBA standard, but with some minor modifications to the peripheral buses (the APBs). There are three main buses in the HMS30C7202:

- 1. The main system bus (the ASB) to which the CPU and memory controllers are connected
- 2. The fast APB to which high-bandwidth peripherals are connected
- 3. The slow APB (to which timers, the UART and other low-bandwidth peripherals are connected) There is also a separate video DMA bus.

#### 1.4.1 ASB

The ASB is designed to allow the ARM continuous access to both, the ROM and the SDRAM interface. The SDRAM controller straddles both the ASB and the video DMA bus so the LCD can access the SDRAM controller simultaneously with activity on the ASB. This means that the ARM can read code from ROM, or access a peripheral, without being interrupted by video DMA.

The HMS30C7202 uses a modified arbiter to control mastership on the main ASB bus. The arbiter only arbitrates on quad-word boundaries, or when the bus is idle. This is to get the best performance with the ARM720T, which uses a quad-word cache line, and also to get the best performance from the SDRAM, which uses a burst size of eight half-words per access. By arbitrating only when the bus is idle or on quad-word boundaries (A[3:2] = 11), it ensures that cache line fills are not broken up, hence SDRAM bursts are not broken up.

The SDRAM controller controls video ASB arbitration. This is explained in 6.5 Arbitration on page 39.

# 1.4.2 Video bus

The video bus connects the LCD controller with the SDRAM controller. Data transfers are DMA controlled. The video bus consists of an address bus, data bus and control signals to/from the SDRAM controller. The LCD registers are programmed through the fast APB. The SDRAM controller arbitrates between ASB, VGA access requests. Video always has higher priority than ASB access requests. The splitting ASB/video bus allows slow ASB device accesses SDRAM without blocking video DMA.

## 1.4.3 APB



There are two APB buses, the fast and slow APB bus. The fast APB bus operates at the speed of the ASB, and hosts the USB interface, the sound output interface, the LCD registers, etc. These are the high performance peripherals, which are generally DMA targets. The slow APB peripherals generally operate at the UART crystal clock frequency of 3.6864MHz, though register access via the APB is at ASB speed.

The slow APB peripherals do not support DMA transfers. This arrangement of running most of the peripherals at a slower clock, and reducing the load on the faster bus, results in significantly reduced power consumption. Both APB buses connect to the main ASB bus via bridges. The slow APB bridge takes care of all resynchronization, handing over data and control signals between the ASB and UART clock domains in a safe and reliable manner.

The fast APB Bridge is modified from the normal AMBA Bridge, to allow DMA access to fast APB peripherals. Additional signals from the DMA controller to the APB bridge request select and acknowledge DMA transfers to and from DMA-aware peripherals.

#### 1.5 SDRAM Controller

The SDRAM controller is a key part of the HMS30C7202 architecture. The SDRAM controller has two data ports - one for video DMA and one for the main ASB - and interfaces to 16-bit wide SDRAMs. One to four 16, 64, 128, or 256 Mbit x16-bit devices are supported, giving a memory size ranging from 2 to 64 Mbytes.

The main ASB and video DMA buses are independent, and operate concurrently. The video bus has always higher priority than the main bus.

The video interface consists of address, data and control signals. The video access burst size is fixed to 16 words. The address is non-incrementing for words within a burst (as the SDRAM controller only makes use of the first address for each burst request).

# 1.6 Peripheral DMA

## 1.6.1 Overview

HMS30C7202 incorporates a four-channel, general-purpose DMA controller that operates on the ASB. The DMA controller is an AMBA compliant ASB bus master with a higher arbitration priority than the ARM processor, to ensure low DMA latency. Since, however, the main ASB bus always has lower priority access to the SDRAM controller than the video bus, it will always get lower priority access to SDRAM than the LCD.

## 1.6.2 Transfer sizes

A device that uses the peripheral DMA is the Sound output. The sound output data rate is 88.2KB/sec. To ensure reasonable usage of SDRAM, APB and ASB bandwidth, the transfer sizes to the sound controller is a single word.

The SDRAM controller does a complete quad-word access for every SDRAM access. The maximum SDRAM bandwidth taken by sound device running concurrently is 0.75%.

DMA accesses to Sound blocks are fully AMBA compliant, meaning that a word transfer takes two bus cycles.

# 1.6.3 Fly-by

The DMA controller is tightly coupled to the fast APB Bridge. In order for the DMA Controller to start a transfer, it must first receive a DMA data request from one of the peripherals; it will then request mastership of the ASB. Once granted, the DMA Controller will retain mastership of the ASB until the requested DMA transaction is completed, which ensures correct data in the DMA peripherals (i.e. the ARM core cannot modify data while a DMA transfer is in progress).

The DMA transfer request is monitored by the Fast APB bridge, which performs the correspondent APB transfer by inverting the read/write line with respect to the ASB and generates a PWRITE signal on the APB. The DMA transfer is acknowledged on the APB by asserting a PSELDMA signal for the given peripheral. The data is timed by PSTB as on a normal APB transfer. The APB address PA is not used for DMA transfers.

The APB bridge receives two signals from the DMA controller called CHAN [1:0], which tells it which DMA channel (peripheral) the DMA access is for. All other information comes from monitoring the ASB bus signals. For example, the direction of transfer comes from BWRITE (the sense is inverted to get the APB signal), and



when the SDRAM transfer completes, comes from the bridge monitoring the BWAIT ASB signal.

## 1.6.4 **Timing**

This is detailed in Chapter 9, Fast AMBA Peripherals.

## 1.6.5 Sound output

In the HMS30C7202, the sound peripheral is connected to the fast APB bus and supported by the DMA controller. (Note that this is compatible with some operating systems, which require DMA-support sound hardware.)

## 1.7 Peripherals

#### Universal Serial Bus (USB) device controller

The USB device controller is used to transfer data from/to host system like PC in high-speed (12Mbits/s) mode. No external USB transceiver is necessary.

#### PS/2 Interface

The PS/2 port can be used with keyboard, mice or other PS/2 compliant devices. In PS/2 mode the pins are open-drain I/Os, as GPIOs they have normal characteristics.

#### Universal Asynchronous Receiver and Transmitter (UART)

Four UART ports are implemented. One of them supports full modem interface signals. Some pins are used as GPIO or matrix keyboard pins when not used for UART.

#### IrDA

IrDA uses UART1 for its SIR transfer in 115 Kbit/s speed. The pins are used as GPIO or matrix keyboard pins when not used for IrDA.

#### Controller Area Network (CAN)

The two CAN ports are used. The pins are used as GPIO when not used for CAN.

## Multimedia Card (MMC), Solid State Floppy Disk Card (SSFDC)

MMC or SSFDC memory card can be used as storage device. The pins are used as GPIO when not used for MMC or

#### Pulse-Width-Modulated (PWM) Interface

Two PWM output signals are generated. The pins are used as GPIO when not used for PWM.

## Matrix Keyboard Interface

Matrix keyboard interface supports up to 64 keys. The pins are used as GPIO when not used for matrix keyboards.

## General Purpose DMA Channel

One DMA channel is provided for external device that needs DMA access. The pins are used as GPIO when not used for DMA.

# DAC

On chip DAC provides 8-bit audio stereo sound.

#### ADC

A 5 channel ADC is implemented for touch panel, audio input and monitoring of two voltages. No external transistor switch is necessary for touch panel operation.

#### PLL

CPU, video and USB clocks are generated by three PLL with 3.6864 MHz input clock.

# 1.8 Power management

The HMS30C7202 incorporates advanced power management functions, allowing the whole device to be put into a standby mode, when only the real time clock runs. The SDRAM is put into low-power self-refresh mode to preserve its contents. The HMS30C7202 may be forced out of this state by either a real-time clock wake-up interrupt, a user wake-up event (which would generally be a user pressing the "on" key) or by the UART ring-indicate input. The power management unit (PMU) controls the safe exit from standby mode to operational mode, ensuring that SDRAM contents are preserved. In addition, halt and slow modes allow the processor to be halted or run at reduced speed to reduce power consumption. The processor can be quickly brought out of the halted state by a peripheral interrupt. The advanced power management unit controls all this functionality. In addition, individual devices and peripherals may be powered down when they are not in use. The



HMS30C7202 is designed for battery-powered portable applications and incorporates innovative design features in the bus structure and the PMU to reduce power consumption. The slow APB bus allows peripherals to be clocked slowly hence reducing power consumption. The use of three buses reduces the number of nodes that are toggled during a data access, and thereby further reducing power consumption. In addition, clocks to peripherals that are not active can also be gated.

## 1.8.1 Clock gating

The high performance peripherals, such as the SDRAM controller and the LCD controller, run most of the time at high frequencies and careful design, including the use of clock gating, has minimized their power consumption. Any peripherals can be powered down completely when not in use.

#### 1.8.2 PMU

The Power Management Unit (PMU) is used to control the overall state the system is in. The system can be in one of five states:

#### Run

The system is running normally. All clocks are running (except where gated locally), and the SDRAM controller is performing normal refresh.

#### Slow

The system operates normally, except the ARM is placed into Fast Bus mode, and hence is clocked at half its normal rate

#### Idle

In this mode, the PMU becomes the bus master until there is an interrupt for the CPU, or the peripheral DMA controller requests mastership of the bus.

#### Sleep

The SDRAM is placed into self-refresh mode, and internal clocks are gated off. This mode can only be entered from Idle mode (that is, the PMU must be ASB master before this mode can be entered). The PMU must get bus mastership to ensure that the system is stopped in a safe state and not, for example, halfway through an SDRAM write. Usually this state is only to be entered briefly, on the way to entering deep sleep mode.

#### Deep Sleep

In deep sleep mode, the 3.6864MHz oscillator and the PLLs are disabled. This is the lowest power state available. Only the 32kHz oscillator runs. The real time clock and wakeup sections of the PMU are operated from this clock. Everything else is powered down, and SDRAM is in self-refresh mode. This is the normal system "off" mode. Sleep and Deep Sleep modes are exited either by a user wake-up event (generally pressing the "On" key), an RTC wake-up alarm, a device reset request, or by a modem ring indicate event. These interrupt sources go directly to the PMU. In addition, the modem ring indicate signal also goes to the normal interrupt controller to signal an interrupt if there is a ring indicate event in a non-sleep mode.


# 1.9 Test and debug

The HMS30C7202 incorporates the ARM standard test interface controller (TIC) allowing 32-bit parallel test vectors to be passed onto the internal bus. This allows access to the ARM720T macro-cell core, and also to memory mapped devices and peripherals within the HMS30C7202. In addition, the ARM720T includes support for the ARM debug architecture (Embedded ICE), which makes use of a JTAG boundary scan port to support debug of code on the embedded processor. The same boundary scan port is also used to support a normal pad-ring boundary scan for board level test applications.]



# 2 PIN DESCRIPTION

# 2.1 256-Pin Diagram

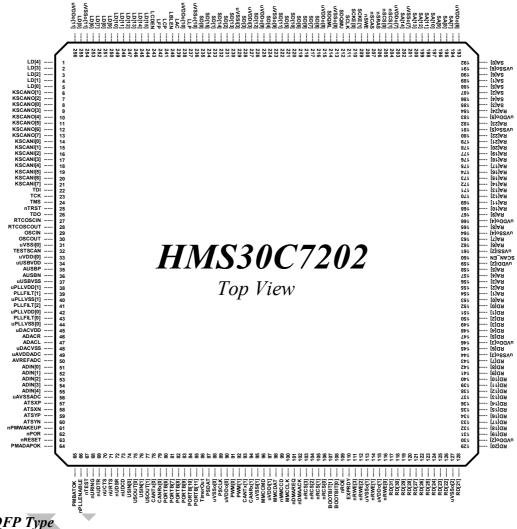

2.1.1 MQFP Type

Lead Count	Body Size	Body Thickness	Lead Pitch	Lead Form	Standoff
256	28.0X28.0	3.37	.40	1.30	.13
	•	•	Note	: All dimen	sions in mm.

Pin Pin **PAD Name PAD Name** Pin **PAD Name** Pin **PAD Name** No. No. No. No. **PMBATOK** RD[20] LD[4] 65 129 193 uVDDo6 LD[3] nPLLENABLE 130 uVDDo2 194 66 SA[7] 3 LD[2] 67 nTEST 131 RD[19] 195 SA[8] LD[1] 68 nURING 132 RD[18] 196 SA[9] LD[0] 69 nUDTR 133 RD[17] 197 SA[10] 6 KSCANO[1] 70 nUCTS 134 RD[16] 198 SA[11] KSCANO[2] nURTS 135 RD[15] 199 SA[12]

© 2002 Hynix Semiconductor Inc. All Rights Reserved.

Version 1.4




8	KSCANO[0]	72	nUDSR	136	RD[14]	200	SA[13]
9	KSCANO[3]	73	nUDCD	137	RD[13]	201	uVSSo7
10	KSCANO[4]	74	USIN[0]	138	RD[12]	202	SA[14]
11	KSCANO[5]	75	USOUT[0]	139	RD[11]	203	uVDDo7
12	KSCANO[6]	76	USIN[1]	140	RD[10]	204	nSCS[1]
13	KSCANO[7]	77	USOUT[1]	141	RD[9]	205	nSCS[0]
14	KSCANI[0]	78	CANTx[0]	142	RD[8]	206	nSRAS
15	KSCANI[1]	79	CANRx[0]	143	RD[7]	207	nSCAS
16	KSCANI[2]	80	PORTB[6]	144	uVSSo3	208	nSWE
17	KSCANI[3]	81	PORTB[7]	145	RD[6]	209	SCKE[1]
18	KSCANI[4]	82	PORTB[8]	146	uVDDo3	210	SCKE[0]
19	KSCANI[5]	83	PORTB[9]	147	RD[5]	211	SCLK
20	KSCANI[6]	84	PORTB[10]	148	RD[4]	212	SDQMU
21	KSCANI[7]	85	PORTB[11]	149	RD[3]	213	uVSSo8
22	TDI	86	TimerOut	150	RD[2]	214	SDQML
23	TCK	87	PSDAT	151	RD[1]	215	uVDDo8
24	TMS	88	uVSSo0	152	RD[0]	216	SD[8]
25	nTRST	89	PSCLK	153	RA[0]	217	SD[7]
26	TDO	90	uVDDo0	154	RA[1]	218	SD[9]
27	RTCOSCIN	91	PWM[0]	155	RA[2]	219	SD[6]
28	RTCOSCOUT	92	PWM[1]	156	RA[3]	220	SD[10]
29	OSCIN	93	CANTx[1]	157	RA[4]	221	SD[5]
30	OSCOUT	94	CANRx[1]	158	RA[5]	222	SD[11]
31	uVSSi0	95	uVSSi1	159	uVDDi2	223	uVSSo9
32	TESTSCAN	96	MMCCMD	160	SCAN_EN	224	SD[4]
33	uVDDi0	97	uVDDi1	161	uVSSi2	225	uVDDo9
34	AVDDUSB	98	MMCDAT	162	RA[6]	226	SD[12]
35	AUSBP	99	nMMCCD	163	RA[7]	227	uVDDi3
36	AUSBN	100	MMCCLK	164	uVSSo4	228	SD[3]
37	AVSSUSB	101	nDMAREQ	165	RA[8]	229	uVSSi3
38	PLLVDD[1]	101	nDMAACK	166	uVDDo4	230	SD[13]
39	PLLFILT[1]	102	nRCS[3]	167	RA[9]	231	SD[2]
40	PLLVSS[1]	103	nRCS[2]	168	RA[10]	232	SD[14]
41	PLLFILT[2]	105	nRCS[1]	169	RA[11]	233	SD[1]
42	PLLVDD[0]	103	nRCS[0]	170	RA[12]	234	SD[15]
43	PLLFILT[0]	107	BOOTBIT[1]	171	RA[12]	235	SD[0]
44	PLLVSS[0]	107	BOOTBIT[0]	172	RA[13]	236	นVSSo10
	AVDDDAC	109	nROE	173		237	LLP
45 46	ADACR	110	EXPRDY	173	RA[15] RA[16]	238	uVDDo10
							LAC
47	ADACL AVSSDAC	111	nRWE[3]	175 176	RA[17] RA[18]	239 240	LBLEN
49	AVSSDAC	113	nRWE[2] uVSSo1	176	RA[18] RA[19]	240	LCP
<u>50</u> 51	AVREFADC ADIN[0]	114 115	nRWE[1] uVDDo1	178 179	RA[20]	242 243	LFP LCDEN
					RA[21]		
52	ADIN[1]	116 117	nRWE[0]	180	RA[22]	244	LD[15]
53	ADIN[2]		RD[31]	181	uVSSo5	245	LD[14]
54	ADIN[3]	118	RD[30]	182	RA[23]	246	LD[13]
55	ADIN[4]	119	RD[29]	183	uVDDo5	247	LD[12]
56	AVSSADC	120	RD[28]	184	RA[24]	248	LD[11]
57	ATSXP	121	RD[27]	185	SA[3]	249	LD[10]
58	ATSXN	122	RD[26]	186	SA[4]	250	LD[9]
59	ATSYP	123	RD[25]	187	SA[2]	251	LD[8]
60	ATSYN	124	RD[24]	188	SA[5]	252	LD[7]
61	nPMWAKEUP	125	RD[23]	189	SA[1]	253	LD[6]
62	nPOR	126	RD[22]	190	SA[6]	254	uVSSo11
63	nRESET	127	uVSSo2	191	uVSSo6	255	LD[5]
64	PMADAPOK	128	RD[21]	192	SA[0]	256	uVDDo11



# 2.1.2 FBGA Type

#### <Bottom View>

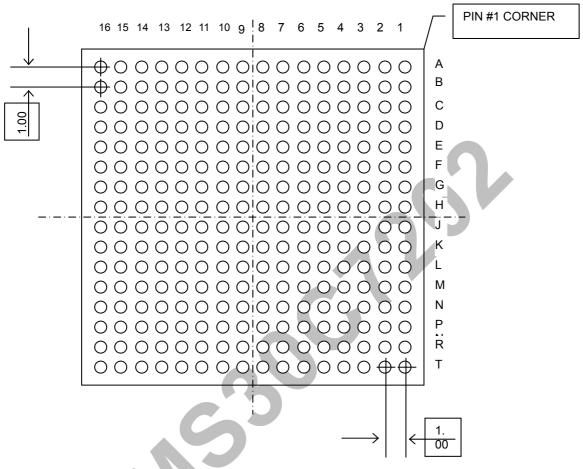

Body	Ball	Signal	Package	Row	Ball	Ball
Size	Count	I/O	Height	Array	Matrix	Pitch
17.0X17.0	256	256	1.40	Full Array	16X16	

Note: All dimensions in mm.

Pin No.	PAD Name	Pin No.	PAD Name	Pin No.	PAD Name	Pin No.	PAD Name
B1	LD[4]	T2	PMBATOK	R16	RD[20]	A15	uVDDo6
C2	LD[3]	R3	nPLLENABLE	P15	uVDDo2	B14	SA[7]
C1	LD[2]	T3	nTEST	P16	RD[19]	A14	SA[8]
D3	LD[1]	P4	nURING	N14	RD[18]	C13	SA[9]
D1	LD[0]	T4	nUDTR	N16	RD[17]	A13	SA[10]
D2	KSCANO[1]	R4	nUCTS	N15	RD[16]	B13	SA[11]
E4	KSCANO[2]	N5	nURTS	M13	RD[15]	D12	SA[12]
E1	KSCANO[0]	T5	nUDSR	M16	RD[14]	A12	SA[13]
E3	KSCANO[3]	P5	nUDCD	M14	RD[13]	C12	uVSSo7
E2	KSCANO[4]	R5	USIN[0]	M15	RD[12]	B12	SA[14]
F5	KSCANO[5]	M6	USOUT[0]	L12	RD[11]	E11	uVDDo7
F4	KSCANO[6]	N6	USIN[1]	L13	RD[10]	D11	nSCS[1]
F1	KSCANO[7]	T6	USOUT[1]	L16	RD[9]	A11	nSCS[0]
F3	KSCANI[0]	P6	CANTx[0]	L14	RD[8]	C11	nSRAS



	1400111111		0.1110 101	1.45		044	
<u>F2</u>	KSCANI[1]	R6	CANRx[0]	L15	RD[7]	B11	nSCAS
<u>G6</u>	KSCANI[2]	L7	PORTB[6]	K11	uVSSo3	F10	nSWE
G5	KSCANI[3]	M7	PORTB[7]	K12	RD[6]	E10	SCKE[1]
G4	KSCANI[4]	N7	PORTB[8]	K13	uVDDo3	D10	SCKE[0]
G1	KSCANI[5]	T7	PORTB[9]	K16	RD[5]	A10	SCLK
G3	KSCANI[6]	P7	PORTB[10]	K14	RD[4]	C10	SDQMU
G2	KSCANI[7]	R7	PORTB[11]	K15	RD[3]	B10	uVSSo8
H7	TDI	K8	TimerOut	J10	RD[2]	G9	SDQML
H6	TCK	L8	PSDAT	J11	RD[1]	F9	uVDDo8
H5	TMS	M8	uVSSo0	J12	RD[0]	E9	SD[8]
<u>H4</u>	nTRST	N8	PSCLK	J13	RA[0]	D9	SD[7]
<u>H1</u>	TDO	T8	uVDDo0	J16	RA[1]	A9	SD[9]
H3	RTCOSCIN	P8	PWM[0]	J14	RA[2]	C9	SD[6]
H2	RTCOSCOUT	R8	PWM[1]	J15	RA[3]	B9	SD[10]
J7	OSCIN	K9	CANTx[1]	H10	RA[4]	G8	SD[5]
J6	OSCOUT	L9	CANRx[1]	H11	RA[5]	F8	SD[11]
J5	uVSSi0	M9	uVSSi1	H12	uVDDi2	E8	uVSSo9
J4	TESTSCAN	N9	MMCCMD	H13	SCAN_EN	D8	SD[4]
J2	uVDDi0	R9	uVDDi1	H15	uVSSi2	B8	uVDDo9
J3	AVDDUSB	P9	MMCDAT	H14	RA[6]	C8	SD[12]
J1	AUSBP	T9	nMMCCD	H16	RA[7]	A8	uVDDi3
J8	AUSBN	J9	MMCCLK	H9	uVSSo4	H8	SD[3]
K5	AVSSUSB	M10	nDMAREQ	G12	RA[8]	E7	uVSSi3
K4	PLLVDD[1]	N10	nDMAACK	G13	uVDDo4	D7	SD[13]
K2	PLLFILT[1]	R10	nRCS[3]	G15	RA[9]	В7	SD[2]
K3	PLLVSS[1]	P10	nRCS[2]	G14	RA[10]	C7	SD[14]
K6	PLLFILT[2]	L10	nRCS[1]	G11	RA[11]	F7	SD[1]
K7	PLLVDD[0]	K10	nRCS[0]	G10	RA[12]	G7	SD[15]
K1	PLLFILT[0]	T10	BOOTBIT[1]	G16	RA[13]	A7	SD[0]
L6	PLLVSS[0]	L11	BOOTBIT[0]	F11	RA[14]	F6	uVSSo10
L2	AVDDDAC	R11	nROE	F15	RA[15]	B6	LLP
L4	ADACR	N11	EXPRDY	F13	RA[16]	D6	uVDDo10
L3	ADACL	P11	nRWE[3]	F14	RA[17]	C6	LAC
L5	AVSSDAC	M11	nRWE[2]	F12	RA[18]	E6	LBLEN
L1	AVDDADC	T11	uVSSo1	F16	RA[19]	A6	LCP
M4	AVREFADC	N12	nRWE[1]	E13	RA[20]	D5	LFP
M2	ADIN[0]	R12	uVDDo1	E15	RA[21]	B5	LCDEN
M5	ADIN[1]	M12	nRWE[0]	E12	RA[22]	E5	LD[15]
M3	ADIN[2]	P12	RD[31]	E14	uVSSo5	C5	LD[14]
M1	ADIN[3]	T12	RD[30]	E16	RA[23]	A5	LD[13]
N4	ADIN[4]	N13	RD[29]	D13	uVDDo5	D4	LD[12]
N2	AVSSADC	R13	RD[28]	D15	RA[24]	B4	LD[11]
N3	ATSXP	P13	RD[27]	D14	SA[3]	C4	LD[10]
N1	ATSXN	T13	RD[26]	D16	SA[4]	A4	LD[9]
P2	ATSYP	R14	RD[25]	C15	SA[2]	В3	LD[8]
P1	ATSYN	T14	RD[24]	C16	SA[5]	A3	LD[7]
P3	nPMWAKEUP	P14	RD[23]	C14	SA[1]	C3	LD[6]
R1	nPOR	T15	RD[22]	B16	SA[6]	A2	uVSSo11
R2	nRESET	R15	uVSSo2	B15	uVSSo6	B2	LD[5]
T1		T16	RD[21]	A16	SA[0]	A1	uVDDo11



# 2.2 Pin Descriptions

Table 2-2 describes the function of all the external signals to the HMS30C7202.

Type	Description	Type	Description
0	Output	OA	Analog Output
I	Input	IA	Analog Input
Ю	Input/Output	IOA	Analog Input/Output
IS	Input with Schmitt level input threshold	Р	Power input
U	Suffix to indicate integral pull-up	D	Suffix to indicate integral pull-down
m	Suffix to multiple function pin		

**Table 2-1 Pin Signal Type Definition** 

# 2.2.1 External Signal Functions

Function	Signal Name	Signal Type	Description
	LD[45:0]	Om	LCD data bus. Allow 5:6:5 TFT, color (using [7:0]) or mono,
	LD[15:0]	Om	using [3:0] or [7:0]
	LCP	0	LCD clock pulse
LCD	LLP	0	LCD line pulse (Hsync for TFT)
LCD	LFP	0	LCD frame pulse (Vsync for TFT)
	LAC	0	LCD AC bias (clock enable for TFT)
	LCDEN	0	Display enable signal for LCD. Enables high voltage to LCD
	LBLEN	Om	LCD backlight enable
	RA[24:0]	0	ROM address bus
	RD[31:0]	IOm	ROM data bus
Static	nRCS[3:0]	Om	ROM chip select outputs
Memory	nROE	0	ROM output enable signal
Interface	nRWE[3:0]	Om	ROM write enable signals
	EXPRDY	17	Wait from external I/O
	BOOTBIT[1:0]		8/16/32 bit ROM selection
	SCLK	0	SDRAM clock output
	SCKE[1:0]	0	SDRAM clock enable output
	nSRAS	0	SDRAM RAS output
	nSCAS	0	SDRAM CAS output
SDRAM	nSWE	0	SDRAM write enable output
Interface	nSCS[1:0]	0	SDRAM chip select outputs
	SDQML	0	SDRAM lower data byte enable
	SDQMU	0	SDRAM upper data byte enable
	SD[15:0]	Ю	SDRAM data bus
	SA[14:0]	0	SDRAM address bus
DMA	nDMAREQ	lm	DMA request input (active Low)
Interface	nDMAACK	Om	DMA acknowledge output
	nUDCD0	lm	UART data carrier detect input
	nUDSR0	lm	UART data set ready input
	nUCTS0	lm	UART clear to send input
LIADT	USIN[3:0]	lm	UART serial data inputs
UART	USOUT[3:0]	Om	UART serial data outputs
	nUDTR0	Om	UART data terminal ready
	nURTS0	Om	UART request to send
	nURING0	lm	UART ring input signal (wake-up signal to PMU)
I-D A	IRDIN1	lm	IrDA infra-red data input
IrDA	IRDOUT1	Om	IrDA infra-red data output
USB	AUSBP	AIO	USB positive signal
	AUSBN	AIO	USB negative signal



AVDDUSB	Function	Signal Name	Signal Type	Description
PWM         PWM[1:0]         Om         Pulse width modulation output           CAN         2ANTX[1:0]         Om         Timer output           CANTX[1:0]         Om         Controlled Area Network data output           Matrix         KSCANO[7:0]         Im         Controlled Area Network data input           Matrix         KSCANO[7:0]         Im         Matrix keyboard scan unputs           FS2         PS2D         ODm         PS2 dock signal           Interface         PS2CD         ODm         PS2 dock signal           Interface         PS2CD         Om         MMC card controller data output           MMC         SSDO         Om         MMC card controller data output           MMC         SSCLK         Om         MMC card controller data output           SSECK         Om         MMC card controller clock output           nSSCS         Om         MMC card controller clock output           nSMCB         Om         Smart Media Card (SSFDC) data signals           nSMWP         Om         Smart Media Card (SSFDC) data signals           nSMME         Om         Smart Media Card (SSFDC) write enable           nSMCE         Om         Smart Media Card (SSFDC) write enable           nSMCE         Om		AVDDUSB	Р	USB analog Vdd
TMMEROUT		AVSSUSB	Р	USB analog Vss
TMEROUT	PWM		Om	Pulse width modulation output
Matrix   KSCANI[7:0]   Im		TIMEROUT	Om	Timer output
CANKX[1:0]   Im	CAN		Om	Controlled Area Network data output
Keyboard         KSCANI[7:0]         Im         Matrix keyboard scan inputs           PS/2         PS2D         ODm         PS2 data signal           Interface         PS2D         ODm         PS2 data signal           Interface         PS2DO         Om         MMC card controller data output           SSDI         Im         MMC card controller data input           SSDI         Im         MMC card controller data input           SSCLK         Om         MMC card controller data input           SSCLK         Om         MMC card controller data input           SMD[7:0]         IOm         Smart Media Card (SSFDC) data signals           nSMWP         Om         Smart Media Card (SSFDC) write protect           nSMWW         Om         Smart Media Card (SSFDC) write enable           SMALE         Om         Smart Media Card (SSFDC) command latch enable           nSMCLE         Om         Smart Media Card (SSFDC) command latch enable           nSMCD         Im         Smart Media Card (SSFDC) command latch enable           nSMCD         Im         Smart Media Card (SSFDC) command latch enable           nSMCD         Im         Smart Media Card (SSFDC) command latch enable           nSMCD         Im         Smart Media Card (SSFDC) command latch	_	CANRX[1:0]	lm	Controlled Area Network data input
PS/2			Om	Matrix keyboard scan outputs
Interface		KSCANI[7:0]	lm	Matrix keyboard scan inputs
MMC	-	PS2D	ODm	PS2 data signal
MMC         SSDI         Im         MMC card controller data input           SSCLK         Om         MMC card controller clock output           nSSCS         Om         MMC card controller clock output           nSMDP         Om         Smart Media Card (SSFDC) write protect           nSMWE         Om         Smart Media Card (SSFDC) write protect           nSMWE         Om         Smart Media Card (SSFDC) write enable           SMALE         Om         Smart Media Card (SSFDC) write enable           SMCLE         Om         Smart Media Card (SSFDC) command latch enable           SMCE         Om         Smart Media Card (SSFDC) command latch enable           nSMCE         Om         Smart Media Card (SSFDC) command latch enable           nSMCE         Om         Smart Media Card (SSFDC) command latch enable           nSMCE         Om         Smart Media Card (SSFDC) compand latch enable           nSMCE         Om         Smart Media Card (SSFDC) compand latch enable           nSMCE         Om         Smart Media Card (SSFDC) compand latch enable           nSMCE         Om         Smart Media Card (SSFDC) compand latch enable           nSMCE         Om         Smart Media Card (SSFDC) compand latch enable           nSMCE         Om         Smart Media Card (SSFDC) compand	Interface	PS2CK	ODm	PS2 clock signal
SSCLK			Om	MMC card controller data output
SSCLK	MMC		lm	MMC card controller data input
SMD[7:0]			Om	
NSMWP		nSSCS	Om	MMC card controller chip select
SSFDC (SmartCard)         nSMWE         Om Smart Media Card (SSFDC) address latch enable           SMALE         Om Smart Media Card (SSFDC) command latch enable           nSMCD         Im         Smart Media Card (SSFDC) command latch enable           nSMCD         Im         Smart Media Card (SSFDC) chip enable           nSMCE         Om         Smart Media Card (SSFDC) chip enable           nSMRB         Im         Smart Media Card (SSFDC) chip enable           nSMRB         Im         Smart Media Card (SSFDC) read enable           nSMRB         Im         Smart Media Card (SSFDC) read brown in smart Media Card (SSFDC) read enable           ATSYP         IO         Touch screen switch X low drive           ATSYP         IO         Touch screen switch X low drive           ATSYN         O         Touch screen switch Y low drive           ADC         ATSYN         O         Touch screen switch Y low drive           AVSSADC         P         ADC analog Vdd           AVSSADC         P         ADC analog Vds           AVSSDAC         P         DAC analog Vds           ADC         ADC analog Vds     <		SMD[7:0]	IOm	Smart Media Card (SSFDC) data signals
SSFDC (SmartCard)         SMALE         Om Smart Media Card (SSFDC) address latch enable sMCLE         Om Smart Media Card (SSFDC) command latch enable nSMCD         Imm Smart Media Card (SSFDC) card detection signal nSMCE         Om Smart Media Card (SSFDC) card detection signal nSMCE         Om Smart Media Card (SSFDC) chip enable nSMRE         Om Smart Media Card (SSFDC) read enable nSMRB         Imm Smart Media Card (SSFDC) read enable nswitch Nature now now read that now now now read now now read now now now read now now read now no		nSMWP	Om	Smart Media Card (SSFDC) write protect
SMCLE		nSMWE	Om	Smart Media Card (SSFDC) write enable
SMCLE         Om Smart Media Card (SSFDC) command latch enable nSMCD         In SMCD         Im Smart Media Card (SSFDC) card detection signal nSMCE         Om Smart Media Card (SSFDC) chip enable nSMRE         Om Smart Media Card (SSFDC) read enable nSMRE         Om SMRE         Om Smart Media Card (SSFDC) read enable nsMRE         ADC nable nSMRE         Om SMRE         Om Smart Media Card (SSFDC) read enable nswitch X low drive now have now	SSEDC	SMALE	Om	Smart Media Card (SSFDC) address latch enable
NSMCD		SMCLE	Om	Smart Media Card (SSFDC) command latch enable
nSMRE         Om NSMRB         Smart Media Card (SSFDC) read enable           ATSXP         IO         Touch screen switch X high drive           ATSXN         O         Touch screen switch X how drive           ATSYP         IO         Touch screen switch Y high drive           ATSYN         O         Touch screen switch Y high drive           ATSYN         O         Touch screen switch Y low drive           ADIN[4:0]         AI         ADC inputs for MIC, battery, touch           AVDDADC         P         ADC analog Vdd           AVSSADC         P         ADC analog Vss           AVEFADC         AI         ADC reference voltage           AVSSDAC         P         DAC analog Vss           ADAC         AVSSDAC         P           ADAC         AO         Sound DAC output (Right channel)           ADAC         AO         Sound DAC output (Right channel)           ADAC         ADAC output (Left channel)           PLLVS[1:0]         P         PLL analog Vss           PLLYS[1:0]         P         PLL analog Vss           PLLFILIT[2:0]         AI         External PLL loop filter input pins (1 per PLL)           GPIO         PORTIQ[1:0]         IOm         General purpose input/output signals	(Ginartoura)	nSMCD	lm	Smart Media Card (SSFDC) card detection signal
NSMRB		nSMCE	Om	Smart Media Card (SSFDC) chip enable
ATSXP		nSMRE	Om	
ATSXN		nSMRB	lm	Smart Media Card (SSFDC) READY/nBUSY signal
ATSYP		ATSXP	Ю	Touch screen switch X high drive
ADC		ATSXN	0	Touch screen switch X low drive
ADIN[4:0]		ATSYP	Ю	Touch screen switch Y high drive
ADIN[4:0]	ADC:	ATSYN	0	Touch screen switch Y low drive
AVSSADC	ABO .	ADIN[4:0]	Al	ADC inputs for MIC, battery, touch
AVREFADC   AI   ADC reference voltage		AVDDADC	P	ADC analog Vdd
DAC		AVSSADC	Р	ADC analog Vss
DAC         AVSSDAC         P         DAC analog Vss           ADACR         AO         Sound DAC output (Right channel)           ADACL         AO         Sound DAC output (Left channel)           PLLVDD[1:0]         P         PLL analog Vdd           PLLVSS[1:0]         P         PLL analog Vss           PLLFILT[2:0]         AI         External PLL loop filter input pins (1 per PLL)           PORTA[15:0]         IOm         General purpose input/output signals           PORTB[11:0]         IOm         General purpose input/output signals           PORTD[8:0]         IOm         General purpose input/output signals           PORTE[24:0]         IO         Reset input (also driven out in POR, until the PLL is locked)           PMADAPOK         I         Adapter power OK           PMBATOK         I         Main battery OK           PMADAPOK         I<		AVREFADC	Al	ADC reference voltage
ADACR   AO   Sound DAC output (Right channel)		AVDDDAC	Р	DAC analog Vdd
ADACR   AO   Sound DAC output (Right channel)	DAC	AVSSDAC	P	DAC analog Vss
PLL   PORTA[15:0]   P   PLL   PORTA[15:0]   IOm   General purpose input/output signals	Dito	ADACR	AO	Sound DAC output (Right channel)
PLL         PLLVSS[1:0]         P         PLL analog Vss           PLLFILT[2:0]         AI         External PLL loop filter input pins (1 per PLL)           GPIO         PORTA[15:0]         IOm         General purpose input/output signals           PORTD[10:0]         IOm         General purpose input/output signals           PORTD[8:0]         IOm         General purpose input/output signals           PORTE[24:0]         IOm         General purpose input/output signals           Power on reset input. Schmitt level input with pullup         Wake-up "on-key" input. Low causes PMU to exit standby state.           NESET         IO         Reset input (also driven out in POR, until the PLL is locked)           PMBATOK         I         Main battery OK           RTCOSCIN         I         RTC oscillator input <t< td=""><td></td><td>ADACL</td><td>AO</td><td>Sound DAC output (Left channel)</td></t<>		ADACL	AO	Sound DAC output (Left channel)
PLLFILT[2:0] AI External PLL loop filter input pins (1 per PLL)  PORTA[15:0] IOm General purpose input/output signals  PORTB[11:0] IOm General purpose input/output signals  PORTC[10:0] IOm General purpose input/output signals  PORTD[8:0] IOm General purpose input/output signals  PORTD[8:0] IOm General purpose input/output signals  PORTE[24:0] IOM General purpose input/output signals  PORTE[25:0] IOM General purpose input/o		PLLVDD[1:0]	Р	PLL analog Vdd
PORTA[15:0]   IOm   General purpose input/output signals	PLL	PLLVSS[1:0]	Р	PLL analog Vss
PORTB[11:0]         IOm         General purpose input/output signals           PORTC[10:0]         IOm         General purpose input/output signals           PORTD[8:0]         IOm         General purpose input/output signals           PORTE[24:0]         IOm         General purpose input/output signals           NPOR         IS         Power on reset input. Schmitt level input with pullup           NPMWAKEUP         IS         Wake-up "on-key" input. Low causes PMU to exit standby state.           NRESET         IO         Reset input (also driven out in POR, until the PLL is locked)           PMADAPOK         I         Adapter power OK           PMBATOK         I         Main battery OK           RTCOSCIN         I         RTC oscillator input           OSCIN         I         Main oscillator output           Digital         VDDCore[3:0]         P         Core Vdd supply (2.5V)		PLLFILT[2:0]	Al	External PLL loop filter input pins (1 per PLL)
GPIO         PORTC[10:0]         IOm PORTD[8:0]         General purpose input/output signals           PORTE[24:0]         IOm General purpose input/output signals           PORTE[24:0]         IOm General purpose input/output signals           NPOR         IS Power on reset input. Schmitt level input with pullup           NPMWAKEUP         IS Wake-up "on-key" input. Low causes PMU to exit standby state.           NRESET         IO Reset input (also driven out in POR, until the PLL is locked)           PMADAPOK         I Adapter power OK           PMBATOK         I Main battery OK           RTCOSCIN         I RTC oscillator input           OSCIN         I Main oscillator output           OSCOUT         O Main oscillator output           Digital         VDDCore[3:0]         P Core Vdd supply (2.5V)		PORTA[15:0]	IOm	General purpose input/output signals
PORTD[8:0]   IOm   General purpose input/output signals		PORTB[11:0]	IOm	General purpose input/output signals
PORTE[24:0]         IOm         General purpose input/output signals           nPOR         IS         Power on reset input. Schmitt level input with pullup           nPMWAKEUP         IS         Wake-up "on-key" input. Low causes PMU to exit standby state.           nRESET         IO         Reset input (also driven out in POR, until the PLL is locked)           PMADAPOK         I         Adapter power OK           PMBATOK         I         Main battery OK           RTCOSCIN         I         RTC oscillator input           RTCOSCOUT         O         RTC oscillator output           OSCIN         I         Main oscillator input           OSCOUT         O         Main oscillator output           Digital         VDDCore[3:0]         P         Core Vdd supply (2.5V)	GPIO	PORTC[10:0]	IOm	General purpose input/output signals
nPOR       IS       Power on reset input. Schmitt level input with pullup         Wake-up "on-key" input. Low causes PMU to exit standby state.         nRESET       IO       Reset input (also driven out in POR, until the PLL is locked)         PMADAPOK       I       Adapter power OK         PMBATOK       I       Main battery OK         RTCOSCIN       I       RTC oscillator input         RTCOSCOUT       O       RTC oscillator output         OSCIN       I       Main oscillator input         OSCOUT       O       Main oscillator output         Digital       VDDCore[3:0]       P       Core Vdd supply (2.5V)		PORTD[8:0]	IOm	General purpose input/output signals
nPOR       IS       Power on reset input. Schmitt level input with pullup         Wake-up "on-key" input. Low causes PMU to exit standby state.         nRESET       IO       Reset input (also driven out in POR, until the PLL is locked)         PMADAPOK       I       Adapter power OK         PMBATOK       I       Main battery OK         RTCOSCIN       I       RTC oscillator input         RTCOSCOUT       O       RTC oscillator output         OSCIN       I       Main oscillator input         OSCOUT       O       Main oscillator output         Digital       VDDCore[3:0]       P       Core Vdd supply (2.5V)		PORTE[24:0]	IOm	General purpose input/output signals
System         nPMWAKEUP         IS         Wake-up "on-key" input. Low causes PMU to exit standby state.           nRESET         IO         Reset input (also driven out in POR, until the PLL is locked)           PMADAPOK         I         Adapter power OK           PMBATOK         I         Main battery OK           RTCOSCIN         I         RTC oscillator input           RTCOSCOUT         O         RTC oscillator output           OSCIN         I         Main oscillator input           OSCOUT         O         Main oscillator output           Digital         VDDCore[3:0]         P         Core Vdd supply (2.5V)		nPOR	IS	
NRESET   10   Reset input (also driven out in POR, until the PLL is locked)   PMADAPOK   I   Adapter power OK	Cuatam	nPMWAKEUP	IS	
PMADAPOK         I         Adapter power OK           PMBATOK         I         Main battery OK           Oscillator         RTCOSCIN         I         RTC oscillator input           RTCOSCOUT         O         RTC oscillator output           OSCIN         I         Main oscillator input           OSCOUT         O         Main oscillator output           Digital         VDDCore[3:0]         P         Core Vdd supply (2.5V)	System	nRESET	Ю	Reset input (also driven out in POR, until the PLL is locked)
PMBATOK         I         Main battery OK           Oscillator         RTCOSCIN         I         RTC oscillator input           RTCOSCOUT         O         RTC oscillator output           OSCIN         I         Main oscillator input           OSCOUT         O         Main oscillator output           Digital         VDDCore[3:0]         P         Core Vdd supply (2.5V)			I	
Oscillator         RTCOSCOUT         O         RTC oscillator output           OSCIN         I         Main oscillator input           OSCOUT         O         Main oscillator output           Digital         VDDCore[3:0]         P         Core Vdd supply (2.5V)		PMBATOK	I	
Oscillator         RTCOSCOUT         O         RTC oscillator output           OSCIN         I         Main oscillator input           OSCOUT         O         Main oscillator output           Digital         VDDCore[3:0]         P         Core Vdd supply (2.5V)			I	*
OSCIN         I         Main oscillator input           OSCOUT         O         Main oscillator output           Digital         VDDCore[3:0]         P         Core Vdd supply (2.5V)	Ossillatar		0	,
OSCOUT         O         Main oscillator output           Digital         VDDCore[3:0]         P         Core Vdd supply (2.5V)	Oscillator		I	
Digital VDDCore[3:0] P Core Vdd supply (2.5V)			0	•
_ •	Digital			
		VSSCore[3:0]		Core Vss supply



Function	Signal Name	Signal Type	Description
Ground	VDD[11:0]	Р	IO Vdd supply (3.3V)
	VSS[11:0]	Р	IO Vss supply
	TCK	lu	JTAG boundary scan and debug test clock
	nTRST	ld	JTAG boundary scan and debug test reset
JTAG	TMS	lu	JTAG boundary scan and debug test mode select
	TDI	lu	JTAG boundary scan and debug test data input
	TDO	0	JTAG boundary scan and debug test data output
Test	nPLLENABLE	ld	Low to enable PLL. High to bypass PLL with clock from OSCIN
	TESTSCAN	ld	Scan Test Mode Enable
	SCAN_EN	ld	Scan Chain Activated
	nTEST	lu	Test mode select

**Table 2-2 External Signal Functions** 





# 2.2.2 Multiple Function Pins

# 2.2.2.1 PORTA

**Data Input/Output** 

~AEN* &	(nTEST   nPLLENABLE) &		GPIO Enable (nTEST   nPLLENABLE ) & AEN & ~AMULSEL		MultiFunction Enable (nTEST   nPLLENABLE ) & ~AEN & AMULSEL		able   LE ) &	Analog Test (~nTEST & ~nPLLENABLE)	
I	0	I	0	I	0	I	0	I	0
	KSCANO0	PORTA0	PORTA0		PORTA0	PORTA0	PORTA0	TPLL3FREQSEL[0]	
	KSCANO1	PORTA1	PORTA1		PORTA1	PORTA1	PORTA1	TPLL3FREQSEL[1]	
***************************************	KSCANO2	PORTA2	PORTA2		PORTA2	PORTA2	PORTA2	TPLL3FREQSEL[2]	
***************************************	KSCANO3	PORTA3	PORTA3			PORTA3	PORTA3	TPLL3FREQSEL[3]	
	KSCANO4	PORTA4	PORTA4			PORTA4	PORTA4	TPLL3FREQSEL[4]	
	KSCANO5	PORTA5	PORTA5	USIN2		PORTA5	PORTA5	TPLL3FREQSEL[5]	
	KSCANO6	PORTA6	PORTA6		USOUT2	PORTA6	PORTA6	TPLL3PWDN	
	KSCANO7	PORTA7	PORTA7		IRDOUT	PORTA7	PORTA7		TPLL3CLKOut
KSCANI0		PORTA8	PORTA8		PORTA8	PORTA8	PORTA8		TPLL3CLKQOut
KSCANI1		PORTA9	PORTA9		PORTA9	PORTA9	PORTA9		TPLL3LOCKOut
KSCANI2		PORTA10	PORTA10		PORTA10	PORTA10	PORTA10	TAIOSTOP	
KSCANI3		PORTA11	PORTA11			PORTA11	PORTA11	TACH[0]	
KSCANI4		PORTA12	PORTA12			PORTA12	PORTA12	TACH[1]	
KSCANI5		PORTA13	PORTA13	USIN3		PORTA13	PORTA13	TACH[2]	
KSCANI6		PORTA14	PORTA14		USOUT3	PORTA14	PORTA14	TACH[3]	
KSCANI7		PORTA15	PORTA15	IRDIN		PORTA15	PORTA15	TACH[4]	

<sup>\*</sup> AEN : GPIO PORT A Enable Register (0x8002.301C).

# 2.2.2.2 PORT B

Data Input/Output

Primary nTEST ~nPLLENAI ~BEN*	& BLE &	GPIO Ena nTEST ~nPLLENA BEN	&	Normal B nTEST nPLLENAB	&	Normal T ~nTEST nPLLENAB ~BEN	&	UART TEST &  ~nTEST &  nPLLENABLE &  BEN		Analog Test ~nTEST & ~nPLLENABLE	
I	0	I	0	I	0	I	0	I	0	I	0
nURING		PORTB0	PORTB0	nURING		TBLCLK		nURING			
	nUDTR	PORTB1	PORTB1		nUDTR	TBCCLK			nUDTR		
nUCTS		PORTB2	PORTB2	nUCTS				nUCTS		TACLK	
	nURTS	PORTB3	PORTB3		nURTS				nURTS	·	TAD[9]
nUDSR		PORTB4	PORTB4	nUDSR				nUDSR			TAD[8]
nUDCD		PORTB5	PORTB5	nUDCD				nUDCD			TAD[7]
PORTB6	PORTB6	PORTB6	PORTB6	TBFCLK		TBFCLK					
PORTB7	PORTB7	PORTB7	PORTB7	TBQFCLK		TBQFCLK					
PORTB8	PORTB8	PORTB8	PORTB8	TBBCLK		TBBCLK					
PORTB9	PORTB9	PORTB9	PORTB9				TACK		TACK		TACK
PORTB10	PORTB10	PORTB10	PORTB10	TBLCLK		TREQB		TREQB		TREQB	
PORTB11	PORTB11	PORTB11	PORTB11	TBCCLK		TREQA		TREQA		TREQA	

<sup>\*</sup> BEN: GPIO PORT B Enable Register (0x8002.303C).

<sup>\*\*</sup> AMULSEL: GPIO PORT A Multi-Function Select Register (0x8002.30A4).



# 2.2.2.3 PORT C

# Data Input/Output

Primary (nTEST   nPLLEN	IABLE) & ~CEN*	GPIO Enabl (nTEST   n & CEN	_	Analog Test ~nTEST & ~nPLLENABLE		
I	1 0		0	I	0	
	TIMEROUT	PORTC0	PORTC0		TAD[2]	
	CANTX0	PORTC1	PORTC1		TAD[4]	
CANRX0		PORTC2	PORTC2		TAD[3]	
PSDAT	PSDAT	PORTC3	PORTC3		TAD[1]	
PSCLK	PSCLK	PORTC4 PORTC4			TAD[0]	
	PWM0	PORTC5	PORTC5	TDIOSTOP		
	PWM1	PORTC6	PORTC6	TDLEFT	$\bigcirc \setminus \setminus$	
nDMAREQ		PORTC7	PORTC7	TDD[2]		
	nDMAACK nRCS2 / [nRCS2dma]		PORTC8	TDD[1]		
			PORTC9			
	nRCS3	PORTC10	PORTC10	TDD[0]		

<sup>\*</sup> CEN: GPIO PORT C Enable Register (0x8002.305C).

# 2.2.2.4 PORT D

# Data Input/Output

Primary (nTEST   nF & ~DEN*	PLLENABLE )	GPIO Enab (nTEST   nP & DEN	le LLENABLE )	Analog Test ~nTEST & ~nPLLENABLE		
I	0	I	0	I	0	
	LD8	PORTD0	PORTD0	TPLL1PWDN		
	LD9	PORTD1	PORTD1	TPLL1FREQSEL[0]		
	LD10		PORTD2	TPLL1FREQSEL[1]		
	LD11	PORTD3	PORTD3	TPLL1FREQSEL[2]		
	LD12	PORTD4	PORTD4	TPLL1FREQSEL[3]		
	LD13	PORTD5	PORTD5	TPLL1FREQSEL[4]		
	LD14	PORTD6	PORTD6	TPLL1FREQSEL[5]		
	LD15		PORTD7	TPLL1PCLKIn		
	LBLEN	PORTD8	PORTD8			

<sup>•</sup> DEN : GPIO PORT D Enable Register (0x8002.307C).



# 2.2.2.5 PORT E

# **Data Input/Output**

Primary (nTEST & ~HalfWordSel & ~EEN*1)		GPIO Enable (nTEST & EEN)		MultiFunction 1 (nTEST & HalfWordSel* <sup>3</sup> & ~EEN & ~SWAP* <sup>2</sup> )		MultiFunction 2 (nTEST & HalfWordSel & ~EEN & SWAP)		Test Mode (~nTEST)		Analog Test (~nTEST & ~nPLLENABLE)	
I	0	I	0	I	0	I	0	I	0	I	0
RD16	RD16	PORTE0	PORTE0		nUSBOE	SMD7	SMD7	RD16	RD16		
RD17	RD17	PORTE1	PORTE1		UVPO	SMD6	SMD6	RD17	RD17		
RD18	RD18	PORTE2	PORTE2		UVMO	SMD5	SMD5	RD18	RD18		
RD19	RD19	PORTE3	PORTE3		USUSPEND	SMD4	SMD4	RD19	RD19		
RD20	RD20	PORTE4	PORTE4	URCVIN		SMD3	SMD3	RD20	RD20		
RD21	RD21	PORTE5	PORTE5	UVM		SMD2	SMD2	RD21	RD21		
RD22	RD22	PORTE6	PORTE6	UVP		SMD1	SMD1	RD22	RD22		
RD23	RD23	PORTE7	PORTE7	SMD7	SMD7	SMD0	SMD0	RD23	RD23		
RD24	RD24	PORTE8	PORTE8	SMD6	SMD6		nSMWP	RD24	RD24		
RD25	RD25	PORTE9	PORTE9	SMD5	SMD5		nSMWE	RD25	RD25		
RD26	RD26	PORTE10	PORTE10	SMD4	SMD4		SMALE	RD26	RD26		
RD27	RD27	PORTE11	PORTE11	SMD3	SMD3		nSMRE	RD27	RD27		
RD28	RD28	PORTE12	PORTE12	SMD2	SMD2		nSMCE	RD28	RD28		
RD29	RD29	PORTE13	PORTE13	SMD1	SMD1	nSMCD		RD29	RD29		
RD30	RD30	PORTE14	PORTE14	SMD0	SMD0		SMCLE	RD30	RD30		
RD31	RD31	PORTE15	PORTE15		nSMWP	nSMRB		RD31	RD31		
	nRW2	PORTE16	PORTE16		nSMWE	CANRX1			PORTE16		
	nRW3	PORTE17	PORTE17		SMALE		CANTX1		PORTE17		
MMCCMD / SSDI	MMCCMD/ ZERO	PORTE18	PORTE18		nSMRE		nUSBOE		PORTE18	TDD[6]	
MMCDAT	MMCDAT / SSDO	PORTE19	PORTE19		nSMCE		UVPO		PORTE19	TDD[5]	
nMMCCD	ZERO/ nSSCS	PORTE20	PORTE20	nSMCD			UVMO		PORTE20	TDD[4]	
	MMCCLK / SSCLK	PORTE21	PORTE21		SMCLE		USUSPEND		PORTE21	TDD[3]	
CANRX1		PORTE22	PORTE22	nSMRB		URCVIN			PORTE22	TDD[7]	
	CANTX1	PORTE23	PORTE23		PORTE23	UVM			PORTE23	TDRIGHT	
	RA24	PORTE24	PORTE24		RA24	UVP			RA24		

Note: A 32 bit access is not possible without RD16~RD31.

So User should make program to disable PORTE for 32bit access time.

We are not guarantee that the program is alternated 32bit access(RD0~31) with PORTE.

<sup>\*1</sup> EEN: GPIO PORT E Enable Register (0x8002.309C).

\*2 SWAP: SWAP Pin Configuration Register (0x8002.30A8).

\*3 When HalfWordSel is enable, MultiFunction 1 or 2 is usable instead of Primary RD16~31. To enable HalfWordSel, you should set bottom bits[1:0] of SMI Registers(MEMCFG0~3 on the Table 7-1) to [01 or 10 or 11].



# 2.2.2.6 USB Transceiver Test & Analog Test

**Data Input/Output** 

. <u>put</u>									
nTEST &		~nTEST &	~nTEST &						
Primary		~LCDEn ~USBTransSe	& !I	~LCDEn & USBTransSel					
I	0	I	0	I	0				
	LD0	TCANCK		TnUSBOE					
	LD1			TUVPO					
	LD2	TCANSI		TUVMO					
	LD3		TCANSO	TUSUSPEND					
	LD4				TURCVIN				
	LD5				TUVM				
	LD6				TUVP				

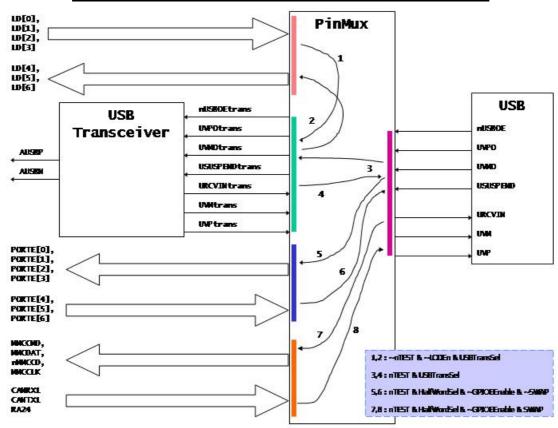


Figure USB Transceiver Test Scheme VER1.5

# 2.2.2.7 DMA Data Input/Output

nTEST &					
nDMAACK		~nDMAACK			
I	0	I	0		
	nROE		nROEdma		
	nRWE0		nRWE0dma		

# 2.2.2.8 Inverter Chain

When nTESTANA == 0, BOOTBIT1  $\rightarrow$  nRWE1 (total 50ns delay expected)



# 3 ARM720T MACROCELL

# 3.1 ARM720T Macrocell

For details of the ARM720T, please refer to the ARM720T Data Sheet (DDI 0087).





## 4 MEMORY MAP

There are five main memory map divisions, outlined in Table 4-1 Top-level address map

Base Address (Byte)	Base Address (Hex)	Size	Description
0 Mbyte	0x0000.0000	32Mbytes	ROM chip select 0
64 Mbytes	0x0400.0000	32Mbytes	ROM chip select 1
128 Mbytes	0x0800.0000	32Mbytes	ROM chip select 2
192 Mbytes	0x0C00.0000	32Mbytes	ROM chip select 3
256 Mbytes	0x1000.0000	256Mbytes	Reserved
512 Mbytes	0x2000.0000	512Mbytes	Reserved
1024 Mbytes	0x4000.0000	32Mbytes	SDRAM chip select 0
1056 Mbytes	0x4200.0000	32Mbytes	SDRAM chip select 1
1088 Mbytes	0x4400.0000		SDRAM mode register chip 0
1120 Mbytes	0x4600.0000		SDRAM mode register chip 1
1152 Mbytes	0x4800.0000	896Mbytes	Reserved
2048 Mbytes	0x8000.0000	336Kbytes	Peripherals

Table 4-1 Top-level address map

The ROM has an address space of 256Mbytes that is split equally between four external ROM chip select. Actual address range for each chip select is 32Mbytes with 25 external address signals.

There is a maximum of 64Mbytes of SDRAM space. Reading from the address space(over 0x4400.0000) above the SDRAM address space(0x4000.0000~0x43ff.ffff) sets the mode registers in the SDRAM (To set the SDRAM mode register, read operation from the ranges of SDRAM mode register is needed. For more information, refer 6.3.).

The peripheral address space is subdivided into three main areas: those on the ASB, the fast APB and the slow APB. The base address for the peripherals is given in Table 3-2: Peripherals base addresses.

Function	Dana Addus as (Usa)	Maria	December 41 - 12
Function	Base Address (Hex)	Name	Description
	0x7F00.0000	IntSRAM Base	Internal SRAM
	0x7F00.0800	Reserved	~0x7FFF.FFFF
	0x8000.0000	SDRAMC Base	SDRAM Controller
ASB Peripherals	0x8000.1000	PMU Base	PMU/PLL
NOD I CIIPIICIAIO	0x8000.2000	Reserved	
	0x8000.3000	BUSC Base	Bus controller
	0x8000.4000	DMAC Base	DMAC
	0x8000.5000	Reserved	~0x8000.FFFF
	0x8001.0000	LCD	LCD
	0x8001.1000	Reserved	
	0x8001.2000	USB Base	USB
Fast APB Peripherals	0x8001.3000	Sound Base	SOUND
r ast Ar D r elipherais	0x8001.4000	Reserved	
	0x8001.5000	MMC Base	MMC/ SPI
	0x8001.6000	SMC Base	SMC
	0x8001.7000	Reserved	~0x8001.FFFF
Slow APB Peripherals	0x8002.0000	U0 Base	UART 0
	0x8002.1000	U1 Base	UART 1 (support SIR)
	0x8002.2000	KBD Base	KBD
	0x8002.3000	GPIO Base	GPIO
	0x8002.4000	INTC Base	INTC
	0x8002.5000	Timer Base	TIMER
	0x8002.6000	Reserved	~0x8002.7FFF
	0x8002.8000	RTC Base	RTC
	0x8002.9000	ADC Base	ADC
	0x8002.A000	Reserved	
	0x8002.B000	WDT Base	WDT



Function	Base Address (Hex)	Name	Description
	0x8002.C000	PS2 Base	PS2
	0x8002.D000	U2 Base	UART2
	0x8002.E000	U3 Base	UART3
	0x8002.F000	CAN0 Base	CAN0
	0x8003.0000	CAN1 Base	CAN1
	0x8003.1000	Reserved	~0x8004.FFFF

Table 4-2 Peripherals Base Addresses





# 5 PMU & PLL

The HMS30C7202 is designed primarily for HPC and other portable computing applications. Therefore there are 4 operating modes to reduce power consumption and extend battery life.

- RUN normal operation (used for CPU-intensive tasks)
- SLOW half-speed operation used when the application interacts with a user (e.g. word processing)
- IDLE where the CPU operation is halted but peripherals operation continue (such as screen refresh, or serial communications)
- SLEEP & DEEP SLEEP This mode will be perceived as `OFF' by the user, but the SDRAM contents is maintained and only the real-time clock is running.

The transition between these modes is controlled by the PMU (see also 7.3 Power management states, page 7-5). The PMU is an ASB slave unit to allow the CPU to write to its control registers, and is an ASB master unit to provide the mechanism for stopping the ARM core's internal clock.

# 5.1 Block Functions

# **CLOCK** generator

The CLOCK generator module controls the PLLs and gating clocks while the PLL outputs are unknow and to ensure that clocks are available during test modes and during RESET sequences.

# FCLK (ARM Processor and SDRAM controller clock)

Derived from PLL3, programmable between 49.7664 MHz and 82.944 MHz by a 6-bit register (default frequency is 70.0416 MHz).

There are two methods for updating frequency, depending upon the state of bit 6 of the Clock Control register ClkCtl (see ClkCtl register on page 7-11). If bit 6 is set, then any data written to bits [5:0] of the ClkCtl register are immediately transferred to the pins of PLL3, thus causing the loop to unlock and to mute FCLK. This is only a safe mode of operation if PLL3 frequency and mark-space ratio is guaranteed to be within limits immediately after the Lock Detect signal has become active. If bit 6 is NOT set, then the HMS30C7202 must enter DEEP sleep mode before bits [5:0] of the Clock Control register are transferred to PLL3.

To switch between the two frequencies when bit 6 is not set:

- Software writes the new value into the ClkCtl register
- Set a Real Time Clock Alarm to wake the HMS30C7202 in 2 seconds
- Enter DEEP SLEEP Mode by writing to the PMUMode Register
- The HMS30C7202 will power up with PLL3 running at the new frequency

# **BCLK**

Bus Clock is generated by the PMU by dividing FCLK by 2.

#### **VCLK**

VCLK is generated by PLL1 and clocks the LCD controller. The frequency is selectable between 24.8832MHz or 41.472MHz (default is 30.4128 MHz). The VCLK PLL is disabled when on BnRES is active or when the PMU is put into DEEP SLEEP mode. On exit from either of these conditions, the VCLK PLL must be reenabled by software.

## Changing Frequency:

- 1. Software must first disable the VCLK pll, by writing a '0' to the PLL1Enable bit of the ClkCtl register.
- 2. Write the new value to the PLL1Freq bit.
- 3. Re-enable the VCLK pll by writing 1 to the PLL1Enable bit.

#### ссі к

CCLK is generated by PLL2 and clocks the CAN and the USB block - Nominally 48MHz. The CCLK PLL is disabled when BnRES active or when the PMU is put into DEEP SLEEP mode. On exit from either of these conditions, the CCLK PLL must be re-enabled by software.

#### PMU state machine

The state machine handles the transition between the power management states described below. The CPU



can write to the PMU mode registers (which is what would typically happens when a user switches off the device) and the state machine will proceed to the commanded state.

# 5.2 Power management

# 5.2.1 State Diagram

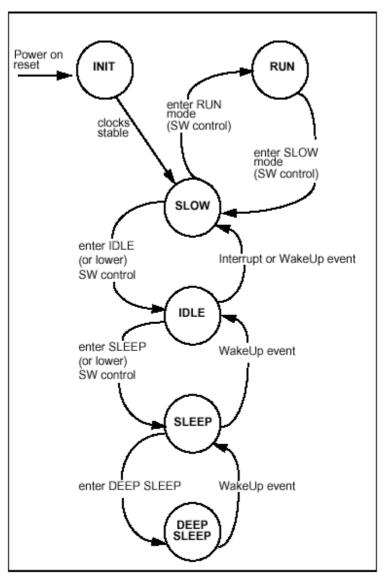




Figure 5-1 PMU Power Management State Diagram

# 5.2.2 Power management states

#### RUN

The system is running normally. All Clocks running (except where gated locally). The SDRAM controller is performing normal refresh.



#### **SLOW**

The CPU is switched into FastBus mode, and hence runs at the BCLK rate (half the FCLK rate). This is the default mode after exiting SLEEP Mode.

#### **IDLE**

In this mode, the PMU becomes the bus master until there is either a fast or normal interrupt for the CPU, or the peripheral DMA controller requests master-ship of the bus.

This will cause the clocks in the CPU to stop when it attempts an ASB access. This mode can be initiated by writing the PMU\_IDLE value to the PMU Mode Register (in RUN or SLOW mode), or by a WakeUp signal while the CPU is in SLEEP or DEEP SLEEP mode.

#### SLEEP

In this mode, the SDRAM is put into self-refresh mode, and internal clocks are gated off. This mode can only be entered from IDLE mode (the PMU bus master must have mastership of the ASB before this mode can be entered). The PMU must be bus master to ensure that the system is stopped in a safe state, and is not half way through a SDRAM write (for example). Both the Video and Communication clocks should be disabled before entering this state.

Usually this state would only be entered briefly, on the way to entering DEEP SLEEP mode.

#### **DEEP SLEEP**

In DEEP SLEEP mode, the 3.6864MHz oscillator and the PLL are disabled. This is the lowest power state available. Only the 32 kHz oscillator runs, driving the real time clock and the PMU. Clocked circuitry in the PMU runs at 4kHz (i.e. the RTC clock divided by 8). Everything else is powered down, and SDRAM is in self refresh mode. This is the normal system "off" mode.

SLEEP and DEEP SLEEP modes are exited either by a user wake-up event (generally pressing the "On" key), or by an RTC wake-up alarm, or by a modem ring indicate event. These interrupt sources go directly to the PMU.

# 5.2.3 Wake-up Debounce and Interrupt

The Wake-up events are debounced as follows:

Each of the event signals which are liable to noise (nRESET, RTC, nPMWAKEUP, and Modem Ring Indicator, Power Adapter Condition) is re-timed to a 250 Hz clock derived from the low power (4 kHz) clock. After filtering to a quarter of 250 Hz, each event has an associated `sticky' register bit. nPMWAKEUP is an external input, which may be typically connected to an "ON" key.

A 'sticky' bit is a register bit that is set by the incoming event, but is only reset by the CPU. Thus should a PLL drop out of lock momentarily (for example) the CPU will be informed of the event, even if the PLL has regained lock by the time the CPU can read its associated register bit.

The nPMWAKEUP, Modem, Real Time Clock, HotSync(GPIOB[10]) and Power Adapter condition inputs are combined to form the PMU Interrupt. Each of these four interrupt sources can wake up from deep-sleep mode individually and all wake-up operation can not mask able. But when wake-up occur, user can mask interrupt signal to inform interrupt controller.

To make use of the nPMWAKEUP Interrupt, (for example) controlling software will need to complete the following tasks:

- Enable the nPMWAKEUP interrupt bit, by writing 1 to bit[11] of the Reset / Status register (PMUSTAT register).
- Once an interrupt has occurred, read the RESET / Status register to identify the source(s) of interrupt. In the case of a nPMWAKEUP event, the register will return 0x10.
- Clear the appropriate `sticky' bit by writing a 1 to the appropriate location (in the nPMWAKEUP case, this
  will be 0x10.).

But Even though the nPMWAKEUP interrupt mask bit is masked, by writing 0 to bit[11] of the Reset Status register, chip shall wake-up with nPMWAKEUP signal.

# PORTB[10] (HotSync) Wake-up Sequence

The HotSync interrupt is OR gated with nPMWAKEUP to support additional wake up sources.

HotSync input signal can be used as a wake up source; they are enabled using the Interrupt MASK Register. After wake up, s/w should program the PORTB Interrupt Mask Register and/or the PMU ResetStatus Register.



One other possible application is to use the nDCD signal, from the UART interface, as a wake up source, by connecting nDCD to a PORTB input. In Deep Sleep mode, nDCD can wake up the system by generating a PORTB interrupt request to the PMU block. The PMU state machine then returns the system to the operational mode.

# 5.3 Registers

Address	Name	Width	Default	Description
0x8000.1000	PMUMODE	4		PMU Mode Register
0x8000.1010	PMUID	32		PMU ID Register
0x8000.1020	PMUSTAT	17		PMU Reset/PLL Status Register
0x8000.1028	PMUCLK	16	0x1B	PMU Clock Control Register
0x8000.1030	PMUDBCT	9		PMU Debounce Test Register
0x8000.1038	PUMPLLTR	21		PMU PLL Test Register

**Table 5-1 PMU Register Summary** 

# 5.3.1 PMU Mode Register (PMUMODE)

This read/write register is to change from RUN mode or SLOW mode into a different mode. The encoding is shown below, in PMU Mode encoding. The register can only be accessed in RUN mode or SLOW mode (these are the only modes in which the processor is active). Therefore, the processor will never be able to read values for modes other than mode 0x00 and mode 0x 01. A test controller may read other values as long as clocks are enabled with bit 8 of the PMU Debounce Counter Test Register. For more information, please refer 5.3.6.

31				3	2	1	0
				WAKEUP	MODE SEL		
Bits	Type	Functio	n				
31:4	-	Reserve	ed				
3	R/W	Writing	a `1' to this bit allows PMU	to exit DEEP	SLEEP mode	when pins Pl	MBATOK and
		PMADA	POK are both low. Writing a	a '0' to this bi	t prevents the	PMU from le	eaving DEEP
		SLEEP	mode when PMBATOK and P	MADAPOK are	e both low		
2:0	R/W	Value	PMU Mode encoding				
		0x04	Initialization mode				
		0x01	RUN mode				
		0x00	SLOW mode				
		0x02	IDLE mode				
		0x03	SLEEP mode				
		0x07	DEEP SLEEP mode				

**Note:** All other values in the above table are undefined.

# 5.3.2 PMU ID Register (PMUID)

This read-only register returns a unique chip revision ID. Revision 0 of the HMS30C7202 device (the first revision) will return the constant value 0x00720200.



# 5.3.3 PMU Reset /PLL Status Register (PMUSTAT)

This read/write register provides status information on power on reset and the PLL status. The allocation is a shown in following two tables: ResetStatus Register Bits. The bits in this register are `sticky' bits. For a definition of a sticky bit, please refer to 5.2.3 Wake-up Debounce and Interrupt. Generally, this register will be



read each time the ARM exits reset mode, so that the ARM can identify what event has caused it to exit from reset mode.

							0710000
							16
							WARM RESET
15	14	13	12	11	10	9	8
HOTSYNC INTR	ADAPTOR INTR	RTC INTR	MRING INTR	WAKEUP INTR	HOTSYNC STATUS	WDT RST	WARM RST STATUS
7	6	5	4	3	2	1	0
ADAPTOR STATUS	RTC STATUS	MRING STATUS	WAKEUP STATUS	PLL3 LOCK	PLL2 LOCK	PLL1 LOCK	POR STATUS

Bits	Type	Function
31:17	-	Reserved
16	W	Warm RESET. Writing a `1' causes nRESET to be asserted. Writing `0' has no effect.
15	R/W	HOTSYNC interrupt Mask. When reads, When writes to these bits, PMU
		0 = Disable Hotsync interrupt from External pin. Interrupts will be enabling. `1' enables
		1 = Enable Hotsync interrupt from External pin. interrupts to the CPU, `0' masks such
14	R/W	No External Power Interrupt Mask. When reads, activity. Should the enable bit be set
		0 = Disable PMU interrupt from PMADAPOK LOW. to one when one of the debounced
		1 = Enable PMU interrupt from PMADAPOK LOW. event signals is set, then an interrupt
13	R/W	RTCEvt Interrupt Mask. When reads, WILL be generated (i.e. the interrupt
		0 = Disable PMU interrupt from RTC is level sensitive, not edge sensitive).
		1 = Enable PMU interrupt from RTC
12	R/W	RIEvt Interrupt MASK PMU Interrupt Request / Clear
		When reads,
		0 = Disable PMU interrupt from MRING
		1 = Enable PMU interrupt from MRING
11	R/W	OnEvt Interrupt MASK PMU Interrupt Enable
		When reads,
		0 = Disable PMU interrupt from nPMWAKEUP
		1 = Enable PMU interrupt from nPMWAKEUP
10	R/w	HOTSYNC Event
		When reads, 0 = Not Hot Sync state; 1 = Hot Sync status
^	D./	When writes, HotSync Interrupt Clear. Writing a `1' to this bit clears the event bit
9	R/w	WDTEvt: Watch Dog Reset (Warm reset)
		When reads,
		0 = No Watch dog Timer event occured 1 = A Watch dog timer event has ocurred since last cleared
		When writes, Watch dog Reset Clear. Writing a `1' to this bit clears the event bit
8	R/w	RESETEVI: Warm RESET Event (debounced)
O	1 V/VV	When reads,
		0 = No Warm RESET event has occurred
		1 = A Warm RESET event has occurred since last cleared
		When writes, Warm Reset Clear. Writing a `1' to this bit clears the event bit.
7	R/w	PowerFailEvt: ADPATOR NOT OK (debounced)
-		When reads,
		0 = No Power Fail event since last cleared
		1 = A Power Fail event has occurred since last cleared
		When writes, Power Fail Interrupt Clear. Writing a `1' to this bit clears a pending interrupt bit.
6	R/w	RTCEvt
		When reads,
		0 = No Real Time Clock (RTC) calendar wake-up event since last cleared
		1 = Real Time Clock (RTC) calendar wake-up event since last cleared
		When writes, RTC Interrupt Clear. Writing a `1' to this bit clears a pending interrupt bit.
5	R/w	RIEvt (debounced)
		When reads,
		0 = No Modem Ring Indicate wake-up event since last cleared
		1 = Modem Ring Indicate wake-up event since last cleared
		When writes, RI Interrupt Clear. Writing a `1' to this bit clears a pending interrupt bit.



4	R/w	OnEvt (debounced)
		When reads, 0 = No On key event since last cleared; 1 = On key event since last cleared
		When writes, OnEvt Interrupt Clear. Writing a `1' to this bit clears a pending interrupt bit.
3	R/w	PLLLock3
		When reads,
		0 = System PLL has been locked since last cleared
		1 = System PLL has fallen out of lock since last cleared
		When writes, writing a '1' to this bit causes the PLL3 Unlock event flag to be cleared.
2	R/w	PLLLock2
		When reads,
		0 = Comms PLL has been locked since last cleared
		1 = Comms PLL has fallen out of lock since last cleared
		When writes, writing a `1' to this bit causes the PLL2 Unlock event flag to be cleared.
1	R/w	PLLLock1
		When reads,
		0= LCD PLL has been locked since last cleared
		1= LCD PLL has fallen out of lock since last cleared
		When writes, writing a `1' to this bit causes the PLL1 Unlock event flag to be cleared.
0	R/w	PORStatus
		When reads, 0 = No POR since last cleared; 1 = POR since last cleared
		When writes, writing a `1' to this bit causes the nPOR event flag to be cleared.

# 5.3.4 PMU Clock Control Register (PMUCLK)

This register is used to control the frequency of PLL3, the system clock PLL and PLL1, the LCD clock. Six bits are defined which control the frequency of FCLK, and a further bit is used to control the frequency of PLL1, the LCD clock. The Default (Power on Reset) value for this register is 0x2126.

15	14	13	12	11	10	9	8
PLL2 ENABLE	PLL1 ENABLE	PLL1 FREQ					
7	6	5	4	3	2	1	0
PLL3 MUTE	PLL3 FREQ UPDATE	PLL3 FREQ					

Bits	Type	Function						
31:16	-	Reserved						
15	R/W	Set for PLL2 enable. Output will be gated until PLL2 Lock Detect (LD) is received. Reset for						
		disable PLL2						
14	R/W	Set for PLL1 enable. Output will be gated until PLL1 Lock Detect (LD) is received. Reset for						
		disable PLL1						
13:8	R/W	Same with bit [5:0]. But output clock frequency will be half of PLL3 – default 30.4128 MHz						
7	R/W	Reset: PLL3 is muted when Lock detect = 0 (default)						
		Set: PLL3 only muted after nPOR or nRESET. Subsequent unlock condition does not mute						
		the clock. Allows dynamic changes to the clock frequency without halting execution. Care: this						
		only will be legal if PLL3 is under-damped (i.e. will not exhibit overshoot in its lock behavior).						
6	R/W	Reset: PLL3 frequency control frequency is only updated when PMU exits DEEP SLEEP						
		mode (default)						
		Set: PLL3 frequency control frequency is updated instantaneously						
5:0	R/W	Value Frequency Value Frequency						
		0x1B 49.7664 MHz 0x25 68.1984 MHz						
		0x1C 51.6096 MHz 0x26 70.0416 MHz - default						
		0x1D 53.4528 MHz 0x27 71.8848 MHz						
		0x1E 55.2960 MHz 0x28 73.7280 MHz						
		0x1F 57.1392 MHz 0x29 75.5712 MHz						
		0x20 58.9824 MHz 0x2A 77.4144 MHz						
		0x21 60.8256 MHz 0x2B 79.2576 MHz						



0x22	62.6688 MHz	0x2c 81.1008 MHz
0x23	64.5120 MHz	0x2D 82.9440 MHz
0x24	66.3552 MHz	Other values Reserved

#### IF BIT 6 is '0'

When the CPU writes to bits 5:0 of this register, these bits are stored in a temporary buffer, which is not transferred to the PLL until the next time the PLL lock signal becomes inactive. This means that for a new value to take effect, it is necessary for the device to enter DEEP SLEEP mode first.

### IF BIT 6 is `1'

The first effect that writing a new value to bits [5:0] will have is that PLL3 will go out of lock, and the Clock control circuit will immediately inhibit FCLK and BCLK, without first verifying that SDRAM operations have completed.

### 5.3.5 PMU Debounce Counter Test Register (PMUDBCT)

0x80001030

Bits	Type	Function	
		Read	Write
31:9	-	Reserved	
8	W	Reset: Normal operation	
		Set: Forces FCLK and BLCK to be active	in all PMU states (test purposes only)
7:6	-	Reserved	
5	R	Selected debounce counter bits	Reserved
4	R/W	_	Reset: normal operation
			Set: disables Bus Request from the PMU to
			allow CPU to read state machine for test
			purposes during PMU IDLE state.
3	R/W	Prescaler bits	Reset: nTEST takes value from input pin
		_	Set: forces local test mode
2:0	R/W		Select Debounce counter for
			Value Function
			0x0 nPMWAKEUP
			0x1 RING event
			0x3 Power Adapter event
			0x4 Warm Reset

In order that the debounce counters (which would normally be clocked at 4 kHz) may be independently exercised and observed, the counters may be triggered and observed using the above registers. *These registers are for testing only and are not required in normal use.* 

# 5.3.6 PMU PLL Test Register (PMUPLLTR)

31		21	20	19	18	17	16
Reserved			Select LCLK, CCLK	Select BCLK	Select PLL To 01(PLL1), 10 11(PLL3)		PLL TEST MUX
15	14	13	12	11	10	9	8
PMUTEST	PWRDN1	PWRDN2	PWRDN3	PLL1 Freque	ncy		
7	6	5	4	3	2	1	0
		PLL3 Freque	ncy				

Bits	Type	Function	
31:21	-	Reserved	
20			
19			



18:17			
16			
15			
14			
13			
12			
11:6			
5:0		_	

# 5.4 Timings

### 5.4.1 Reset Sequences of Power On Reset

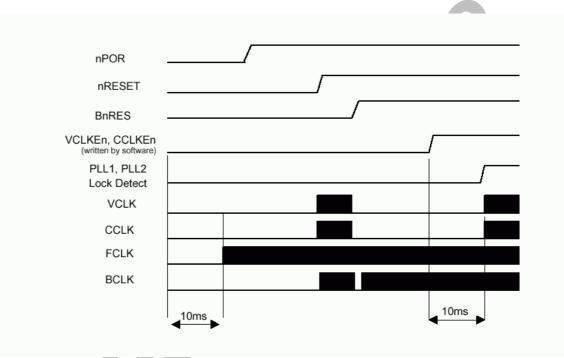


Figure 5-2 PMU Cold Reset Event

In the event of removal and re-application of all power to the HMS30C7202, the following sequence may be typical:

- nPOR input is active. All internal registers are reset to their default values. The PMU drives nRESETout LOW to reset any off-chip peripheral devices.
- BnRES becomes active on exit from the nPOR condition. Clocks are enabled temporarily to allow synchronous resets to operate.
- The default frequency of FCLK on exit from nPOR will be 70.0416 MHz.
- When FCLK is stable, the CPU clock is released. If the CPU were to read the RESET/Status register at this time, it will return 0x10f as a initial value.
- If you are to clear these flag bits, write 0x10f to the RESET register. (Refer 5.3.4 PMU Reset/PLL Status Register).
- The CPU writes 0x20 to the clock control register, which will set a FCLK speed of 58.9824MHz. The new clock frequency, however, is not adopted until the
- PMU has entered and left DEEP SLEEP mode.
- The CPU sets a RTC timer alarm to expire in approximately 2 seconds
- The CPU sets DEEP SLEEP into the PMU Mode Register
- The PMU state machine will enter DEEP SLEEP mode (via the intermediate states shown in Figure 5-1: Power Management State Diagram).
- When the RTC timer alarm is activated, the PMU automatically wakes up into SLOW mode, but with the new FCLK



frequency of 58.9824Mhz.

 The CPU may write 0xE120 to the Clock Control register, which enables CCLK and VCLK, and retains the new FCLK frequency.

Bit	Meaning
Bit 0 set:	Power On Reset event has occurred
Bit 1 set:	PLL1 has been `unlocked'
Bit 2 set:	PLL2 has been `unlocked'
Bit 3 set:	PLL3 has been `unlocked'

Table 5-2 PMU Bit Settings for a cold Reset Event within PMUSTAT Register

### 5.4.2 Software Generated Warm Reset

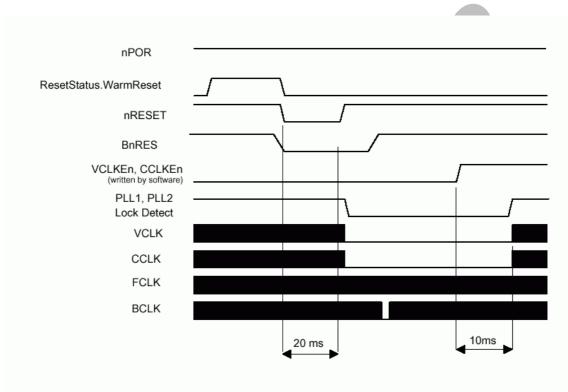


Figure 5-3 PMU Software Generated Warm Reset

The CPU writes `1' to the WarmReset bit of PMUSTAT register. The PMU drives nRESET low. The internal chip reset, BnRES is driven low. The PMU detects that the bi-directional nRESET pin is low. nRESET is filtered by a de-bounce circuit. Note that this means that nRESET will remain low for a minimum of 16ms. BnRES becomes active once the de-bounced nRESET goes high once more, which disables PLL1 and PLL2. The CPU may read the PMUSTAT register, which will return 0x106:

Bit	Meaning	
Bit 1 set:	PLL1 has been `unlocked'	
Bit 2 set:	PLL2 has been `unlocked'	
Bit 8 set:	A RESET event has occurred.	

Table 5-3 PMU Bit Settings for a Software Generated Warm Reset within PMUSTAT Register

### 5.4.3 An Externally generated Warm Reset



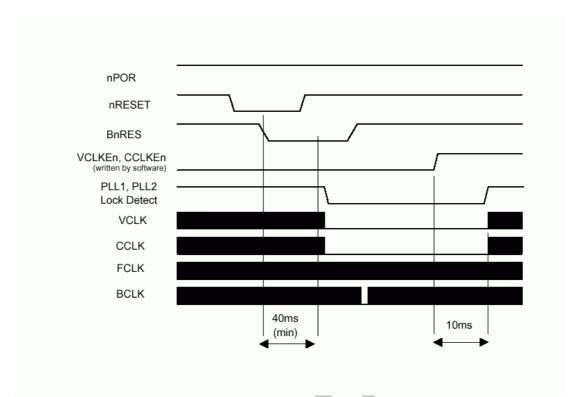


Figure 5-4 PMU An Externally Generated Warm Reset

nRESET is driven to `0' by external hardware. The nRESET input is filtered by a de-bounce circuit. Note that this means that nRESET must remain low for a minimum of 40ms. BnRES (the on-chip reset signal) becomes active as soon as nRESET is low, and high once the de-bounced nRESET goes high once more. BnRES disables PLL1 and PLL2. The CPU may read the RESET register, which will return 0x106:

Bit	Meaning
Bit 1 set:	PLL1 has been `unlocked'
Bit 2 set:	PLL2 has been `unlocked'
Bit 8 set:	A RESET event has occurred.

Table 5-4 PMU Bit Settings for a Warm Reset within PMUSTAT Register

### Note

The internal chip reset, BnRES, remains active for 20ms after an externally generated nRESET. External devices should not assume that the HMS30C7202 is in an active state during this period.



### 6 SDRAM CONTROLLER

The SDRAM controller operates at the full CPU core frequency (FCLK = SCLK) and is connected to the core via the ASB bus. Internally the SDRAM controller arbitrates between access requests from the main AMBA bus, and the video bus.

It can control up to two SDRAMs of 16Mx16 density maximum. To reduce the system power consumption it can power down these individually using the Clock Enable (CKE). When the MCU is in standby mode the SDRAMs are powered down into self-refresh mode.

SDRAMs achieve the highest throughput when accessed sequentially – like video data. However accesses from the core are less regular. The SDRAM controller uses access predictability to maximize the memory interface bandwidth by having access to the LCD address buses.

Video accesses to the SDRAM occur in fixed-burst lengths of 16 words; At each Video access, SDRAM controller issues 4 consecutive "Read" commands of which burst length is 8 half-word. So, If you want to get the successive 16 words, the start address of SDRAM read must be arranged to 4-Word(8-HalfWord) boundary - The start address of SDRAM must be 0xXXXX XXX0.

ARM and DMA controller accesses occur in a fixed-burst length of four words. If the requested accesses are shorter than four words, then the extra data is ignored. In Addition, ARM/DMA Access SDRAM Controller discards the data of which the address is not sequentially increased. For example, If ARM do the 4-Word "Idm(load Block data)" of which start address is 0x4000\_0004, the Address output from SDRAM Controller to SDRAM is start from 2 (just 4bits from LBS). SDRAM do the 8-HalfWord Burst Read and it's address sequence is 2-3-4-5-6-7-0-1. In that case, SDRAM Controller discards data from address 0,1 and jost get the 6-HalfWard Data(Address from 2 to 7). After that, SDRAM Controller issue the "Read" Command again of which Start address to SDRAM is 8 and gets the 2-HalfWord data(data from SDRAM address 8,9).

### **FEATURES**

- 16 Bits wide external bus interface (two access requires for each word)
- Supports 16/64/128/256Mbit device
- Supports 2~64 Mbytes in up to two devices (the size of each memory device may be different)
- Programmable CAS latency
- Supports 2/4 banks with page lengths of 256 or 512 half words
- Programmable Auto Refresh Timer
- Support low power mode when IDLE (each device's CKE is disable individually).
- Support External Device interface with DMA channel 2.

### **6.1 Supported Memory Devices**

2-64Mbytes of SDRAM are supported with any combination of one or two 16/64/128/256Mbit devices. Each device is mapped to a 32 Mbyte address space. The MMU (memory management unit) maps different device combinations (e.g. 16- and 64Mbit devices) into a continuous address space for the ARM core. Note that 16Mbit devices appear eight times, and 64Mbit devices appear twice in the memory map.

<b>Total Memory</b>	16Mbit devices	64Mbit devices	128Mbit devices	256Mbit devices
2Mbyte	1	-	-	-
4Mbyte	2	-	-	-
8Mbyte	-	1	-	-
16Mbyte	-	2	1	-
32Mbyte	-	-	2	1
64Mbyte	-	-	-	2



#### Note

The MMU (memory management unit) must be programmed according to the actual memory configuration (combination of 16/64/128/256 Mbit SDRAMs).

The SDRAM controller allows up to four memory banks to be open simultaneously. The open banks may exist in different physical SDRAM devices.

### 6.2 Registers

The SDRAM controller has four registers: the configuration, refresh timer, the Write Buffer Flush timer and wait driver. The configuration register's main function is to specify the number of SDRAMs connected, and whether they are 2- or 4-bank devices. The refresh timer gives the number of BCLK ticks that need to be counted inbetween each refresh period. The Write Buffer Flush timer is used to set the number of BCLK ticks since the last write operation, before the write buffer's contents are transferred to SDRAM. The wait driver is used to set wait delay for external slow device.

Address	Name	Width	Default	Description
0x8000.0000	SDCON	32	0x00700000	Configuration register
0x8000.0004	SDREF	16	0x0080	Refresh timer
0x8000.0008	SDWBF	3	0x1	Write back buffer flush timer
0x8000.000C	SDWAIT	4	0x1	Wait driver register

Table 6-1 SDRAM Controller Register Summary

In addition to the SDRAM control registers, the ARM may access the SDRAM mode registers by writing to a 64MByte address space referenced from the SDRAM mode register base address. Writing to the SDRAM mode registers is discussed further in 오류! 참조 원본을 찾을 수 없습니다. 오류! 참조 원본을 찾을 수 없습니다.

# 6.2.1 SDRAM Controller Configuration Register (SDCON)

																0x	8000.0000
31	30		24	23	22	21	20	19	18	17		7	6		3	2	
S1	SO	-	W	R	Α	C1	C0	D	С	В	-	E1	B1	-	E0	B0	-
							_ 4										
Bits		Type	Fu	nctior	1												
31:3	0	R			control												
				-	ved 10				•	Idle							
24		R/W	$\overline{}$		er enal												
23		R/W	4		DRAM					-							
					DRAM												
22		R/W			DRAM -charge					de reir	esn						<del></del>
22		IVVV			pre-ch												
					uto pre-												
		Ì				U		, SDF	RAM co	ontrolle	r issue	s "Rea	ad/Writ	e with	Auto P	re-cha	arge"
					d inste												
							•								Vrite op		
				•		_							al "Rea	ad/VVri	te" con	nmand	
						•					ains ac		amma	nd on	lv in th		o that
				,					,			•			ly in th age ad		
				ne ba		age is	active	and ti	icic is	necu	to rea	u/ Wille	ine o	uiei p	age au	uicss	iii uie
			Jui	ne ba	iii.												
			You	u had	better (	disable	auto	ore-ch	arge b	it, if a	numbe	r of SI	DRAM	acces	ses oc	cur in t	the
			sar	ne pa	ge bou	ndary	- You c	an pe	rform	SDRAI	M "Rea	d/Writ	e" com	mand	fastly	withou	t
			"Pr	e-cha	rge" &	"Active	e" comi	mand.									
21:2	0	R/W			atency		:CAS I	atenc	y2 (	)1:CAS	latenc	cy1 (	0:Res	erved			
19		R/W			bus tri-			4 -		. 41 ^	DD 4 • 4		L / L				
											DRAM	data	bus (de	erauit)			
			1 =	ine S	DRAM	DUS IS	เท-รเล	iea ex	cept c	iuring \	writes						



		This bit should be cleared before the IC enters a low power mode. Driving the data lines avoids floating inputs that could increase device power consumption. During normal operation the D bit should be set, to avoid data bus drive conflicts with SDRAM.
18	R/W	SDRAM clock enable control
		0 = the clock of IDLE devices are disabled to save power (default)
		1 = all clock enables are driven HIGH continuously
17	R/W	Write buffer enable
		Value = 1 if the write buffer is enabled
		Value = 0 if the write buffer is disabled
7	R/W	1 = a device is present at address range 32-64Mbyte
		0 = no device present at address range 32-64Mbyte
		The bit E is used to control the auto-refresh
6	R/W	Specifies the number of banks of the SDRAM at address range 32-64Mbyte
		1 = the SDRAM is a four-bank device
		0 = the SDRAM is a two-bank device
3	R/W	1 = a device is present at address range 0-32MByte
		0 = no device present at address range 0-32Mbyte
		The bit E is used to control the auto-refresh
2	R/W	Specifies the number of banks of the SDRAM at address range 0-32Mbyte
		1 = the SDRAM is a four-bank device
		0 = the SDRAM is a two-bank device

The SDRAM controller powers-up with E[1:0]=00 and R=0. This indicates that the memory interface is IDLE. Next, the software should set at least one E bit to 1 with the R bit 0. This will cause both devices to be precharged (if present). The next operation in the initialization sequence is to auto-refresh the SDRAMs. Note that the number of refresh operations required is device-dependent. Set R=1 and E[1:0]=00 to start the auto-refresh process. Software will have to ensure that the prescribed number of refresh cycles is completed before moving on to the next step. The final step in the sequence is to set R=1 and to set the E bits corresponding to the populated slots. This will put the SDRAM controller (and the SDRAMs) in their normal operational mode. After that SDRAM mode register (in the SDRAM, not SDCON) must be initialized as to Write Burst Mode = "Programmed Burst Length", Burst Type = "Sequential", Burst Length = "8".

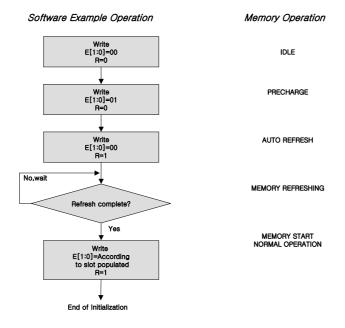


Figure 6-1 SDRAM Controller Software Example and Memory Operation Diagram



# 6.2.2 SDRAM Controller Refresh Timer Register (SDREF)

0x8000.0004

		0,0000.000
-		15 – 0
Reserv	/ed	SDREF
Bits	Туре	Function
15:0	R/W	A 16-bit read/write register that is programmed with the number of BCLK ticks that should be counted between SDRAM refresh cycles. For example, for the common refresh period of 16us, and a BCLK frequency of 50MHz, the following value should be programmed into it:  16x10-6 * 50x106 = 800  The refresh timer defaults to a value of 128, which for a 16us refresh period assumes a worst case (i.e. slowest) clock rate of:  128/(16x10E-6) = 8 MHz  The refresh register should be programmed as early as possible in the system start-up procedure, and in the first few cycles if the system clock is less than 8MHz.

# 6.2.3 SDRAM Controller Write buffer flush timer Register (SDWBF)

0x8000.0008

-			2 - 0
Reserve	ed		SDWBF
Bits	Type	Function	
2:0	R/W	A 3-bit read/write register that sets the time-out value for flushing write buffer. The times are given in the following table.  Timer value BCLK ticks between time-outs  111 128 110 64 101 32 100 16 011 8 010 4 001 2 000 Time-out disabled	ng the quad word merging

# 6.2.4 SDRAM Controller Wait Driver Register (SDWAIT)

0x8000.000C

Reserv	ed	SDW	/AIT
Bits	Туре	Function	
3:0	R/W	This value specifies the waited delay time (BLCK cycles) of the BWAIT signal of bus (AMBA ASB); default value is 1. This register affects only the external device channel-2 operation and does not affect channel-0 and channel-1. During an external device with DMA channel-2, Write-Back buffer is always enable even (SDRAM Controller Configuration Register)'s W bit (Write-Back buffer enally (disabling the operation of Write-Back Buffer).	ce with DMA ccess to the en if SDCON

# 6.3 Power-up Initialization of the SDRAMs

The SDRAMs are initialized by applying power, waiting a prescribed amount of settling time (typically 100us), performing at least 2 auto-refresh cycles and then writing to the SDRAM mode register. The exact sequence is



SDRAM device-dependent.

The settling time is referenced from when the SDRAM CLK starts. The processor should wait for the settling time before enabling the SDRAM controller refreshes, by setting the R bit in the SDRAM control register. The SDRAM controller automatically provides an auto refresh cycle for every refresh period programmed into the Refresh Timer when the R bit is set. The processor must wait for sufficient time to allow the manufacturer's specified number of auto-refresh cycles before writing to the SDRAM's mode register.

The SDRAM's mode register is written to via its address pins (A[14:0]). Hence, when the processor wishes to write to the mode register, it should read from the binary address (AMBA address bits [24:9]), which gives the binary pattern on A[14:0] which is to be written. The mode register of each of the SDRAMs may be written to by reading from a 64Mbyte address space from the SDRAM mode register base address. The correspondence between the AMBA address bits and the SDRAM address lines (A[14:0]) is given in the Row address mapping of 오류! 참조 원본을 찾을 수 없습니다. Bits [25] of the AMBA address bus select the device to be initialized.

The SDRAM must be initialized to have the same CAS latency as is programmed into C[1:0] bits of the SDRAM control register, and always to have a burst length of 8.

### 6.4 SDRAM Memory Map

The SDRAM controller can interface with up to two SDRAMs of 1Mx16, 4Mx16, 8Mx16 or 16Mx16 density. The SDRAMs may be organized in either two or four banks. The controller can address 64Mbyte, subdivided into two 32Mbyte blocks, one for each SDRAMs.

The mapping of the AMBA address bus to the SDRAM row and column addresses is given in 오류! 참조 원본을 찾을 수 없습니다.. The first row of the diagram indicates the SDRAM Controller Address output (SA[14:0]) and the SDRAM address bit (BS1, BS0,A12~A0); If you use 64Mbit SDRAM, you should connect A11~A0 to SA[11:0] and BS0~1 to SA[13:12].

The remaining numbers indicate the AMBA address bits MBA[24:1].

SDRAM ADDR	SA[14] A12	SA[13] BS0	SA[12] BS1	SA[11] A11	SA[10] A10	SA[9] A9	SA[8] A8	SA[7] A7	SA[6 A6	SA[5] A5	SA[4 A4	SA[3] A3	SA[2] A2	SA[1] A1	SA[0] A0
Row 16Mbit	24	10*	9*	22	20*	Note 1	19*	18*	17*	16*	15*	14*	13*	12*	11*
Col 16Mbit	24	10*	9*	Note1	20	Note 1	23	8*	7*	6*	5*	4*	3*	2*	Note2
Row 64Mbit	24	10*	9*	22*	20*	21*	19*	18*	17*	16*	15*	14*	13*	12*	11*
Col 64Mbit	24	10*	9*	22	20	21	23	8*	7*	6*	5*	4*	3*	2*	Note2
Row 128Mbit	24	10*	9*	22*	20*	21*	19*	18*	18*	16*	15*	14*	13*	12*	11*
Col 128Mbit	24	10*	9*	22	20	21	23*	8*	7*	6*	5*	4*	3*	2*	Note2
Row 256Mbit	24*	10*	9*	22*	20*	21*	19*	18*	18*	16*	15*	14*	13*	12*	11*
Col 256Mbit	24	10*	9*	22	20	21	23*	8*	7*	6*	5*	4*	3*	2*	Note2
Mode Write	24*	10*	9*	22*	20*	21*	19*	18*	17*	16*	15*	14*	13*	12*	11*
Summary	24	10	9	22	20	21	19/23	18/8	17/7	16/6	15/5	14/4	13/3	12/2	11*

Table 6-2 SDRAM Row/Column Address Map

The start address of each SDRAM is fixed to a 32Mbyte boundary. The memory management unit will be used

<sup>(1)</sup> For the 16Mbit device, SDRAM address line A11 should be connected to the HMS30C7202 pin SA[13](BS0), and the SDRAM address line A9 should be connected to the HMS30C7202 pin SA[12](BS1). The HMS30C7202 address lines SA[11] and SA[9] should not be connected.

<sup>(2)</sup> Since all burst accesses commence on a word boundary, and SDRAM addresses are non-incrementing (the address incremented is internal to the device), column address zero will always be driven to logic `0'.

<sup>\*</sup> An asterisk denotes the address lines that are used by the SDRAM.



to map the actual banks that exist into contiguous memory as seen by the ARM. Bits [25] of the AMBA address bus select the device to be initialized, as described in 오류! 참조 원본을 찾을 수 없습니다..

A25	Device selected
0	Device 0
1	Device 1

**Table 6-3 SDRAM Device Selection** 

#### 6.5 AMBA Accesses and Arbitration

The SDRAM controller bridges both the AMBA Main and Video buses. On the Main bus, the SDRAM appears as a normal slave device. On the Video DMA bus, the SDRAM controller integrates the functions of the bus arbiter and address decoder. Writes from the main bus may be merged in the quad word merging write buffer. A Main/Video arbiter according to the following sequence arbitrates access requests from either the Main or Video buses:

Highest Priority: LCD

Refresh request

Lowest Priority: Main bus peripheral (PMU, ARM, DMA)--order determined by Main bus arbiter.

Video SDRAM accesses always occur in bursts of 16 words. Once a burst has started, the SDRAM controller provides data without wait states. Video data is only read from SDRAM, no write path is supported.

If a refresh cycle is requested, then it will have lower priority than the Video bus, but will be higher than any other accesses from the Main bus. Assuming a worst-case BCLK frequency of 8MHz, the maximum, worst-case latency that the arbitration scheme enforces is 11.5us before a refresh cycle can take place. This is comfortably within the 16us limit. Note that the 2 external SDRAM devices are refreshed on 2 consecutive clock cycles to reduce the peak current demand on the power source.

The arbitration of the Main bus is left to the Main bus arbiter. Data transfers requested from the Main bus always occur as a burst of eight half-word accesses to SDRAM. The Main bus arbiter cannot break into access requests from the Main bus. In the case where fewer than four words are actually requested by the Main bus peripheral, the excess data from the SDRAM is ignored by the SDRAM controller in the case of read operations, or masked in the case of writes. In the case where more than four words are actually requested by the Main bus peripheral, the SDRAM controller asserts BLAST to force the ASB decoder to break the burst. In the case of word/half-word/byte misalignment to a quad word boundary (when any of address bits [3:0] are non-zero at the start of the transfer), BLAST is asserted at the next quad word boundary (bits 3, 2, 1 and 0

properly set 1 for each type) to force the ASB decoder to break the burst. Sequential half word (or byte) reads are supported and the controller asserting BLAST at quad word boundary.

In the case of byte or half word reads, data is replicated across the whole of the ASB data bus.

### Data bus for word access:

31 23 15 7 0 d31 d30 d29 d28 d27 d26 d25 d24 d23 d22 d21 d20 d19 d18 d17 d16 d15 d14 d13 d12 d11 d10 d9 d8 d7 d6 d5 d4 d3 d2 d1 d0

#### Data bus for half word access:

31 23 15 7 0 d15 d14 d13 d12 d11 d10 d9 d8 d7 d6 d5 d4 d3 d2 d1 d0 d15 d14 d13 d12 d11 d10 d9 d8 d7 d6 d5 d4 d3 d2 d1 d0

### Data bus for byte access:

31 23 15 7 0 0 d7 d6 d5 d4 d3 d2 d1 d0 d7 d6 d5 d4 d3 d2 d1 d0 d7 d6 d5 d4 d3 d2 d1 d0 d7 d6 d5 d4 d3 d2 d1 d0

# 6.6 Merging Write Buffer

An eight word merging Write-Buffer is implemented in the SDRAM controller to improve write performance. The write buffer can be disabled, but its operation is completely transparent to the programmer. The eight words of the buffer are split into two quad words, the same size as all data transactions to the SDRAMs. The



split into two quad words allows one quad word to be written to at the same time as the contents of the other are being transferred to SDRAM. The quad word buffer currently being written to may be accessed with non-contiguous word, half word or byte writes, which will be merged into a single quad word. The buffered quad word will be transferred to the SDRAM when:

- There is a write to an SDRAM address outside the current quad word being merged into
- There is a read to the address of the quad word being merged into
- There is a time-out on the write back timer

The two quad-words that make up the write buffer operate in "ping-pong" fashion, whereby one is initially designated the buffer for writes to go into, and the other is the buffer for write backs. When one of the three events that can cause a write-back occurs, the functions of the two buffers are swapped. Thus the buffer containing data to be written back becomes the buffer that is currently writing back, and the buffer that was the write-back buffer becomes the buffer being written to.

In the case of a write-back initiated by a read from the same address as the data in the merge buffer, the quad word in the buffer is written to SDRAM, and then the read occurs from SDRAM. The write before read is essential, because not all of the quad word in the buffer may have been updated, so its contents need to be merged with the SDRAM contents to fill any gaps where the buffer was not updated. The write buffer flush timer forces a write back to occur after a programmable amount of time. Every time a write into the buffer occurs, the counter is re-loaded with the programmed time-out value, and starts to counts down. If a time-out occurs, then data in the write buffer is written to SDRAM.





### 7 STATIC MEMORY INTERFACE

The Static Memory Controller (SMI) interfaces the AMBA Advanced System Bus (ASB) to the External Bus Interface (EBI). It controls four separate memory or expansion banks. Each bank is 32MB in size and can be programmed individually to support:

- 8-, 16- or 32-bit wide, little-endian memory
- Variable wait states (up to 16)
- Burst mode read access

Burst mode access allows fast sequential access within quad word boundaries. This can significantly improve bus bandwidth in reading from memory (that must support at least four word burst reads). In addition, bus transfers can be extended using the EXPRDY input signal.

# 7.1 External Signals

Pin Name	Type	Description
EXPRDY	I	Expansion channel ready. When LOW, during phase one this signal will force the current memory transfer to be extended.
nRWE [3:0]	0	These signals are active LOW write enables for each of the memory byte lanes on the external bus.
nROE	0	This is the active LOW output enable for devices on the external bus.
nRCS [3:0]	0	Active LOW chip selects.
RA [24:0]	0	ROM Address Bus
RD [31:0]	I/O	ROM Data Bus
BOOTSBIT [1:0]	I	Configuration input. 00 - Select bank 0 as 32-bit memory 01 - Select bank 0 as 16-bit memory 10 - Select bank 0 as 8-bit memory 11 - Reserved

# 7.2 Functional Description

The main functions of the Static Memory Controller (SMI) are:

- Memory bank select
- Access sequencing
- Wait states generation
- Burst read control
- Byte lane write control

These are described below

# 7.2.1 Memory bank select

Start Address	Address (Hex)	Size	Description	
0 Mbytes	0x0000.0000	32Mbytes	ROM chip select 0	
64 Mbytes	0x0400.0000	32Mbytes	ROM chip select 1	
128 Mbytes	0x0800.0000	32Mbytes	ROM chip select 2	
192 Mbytes	0x0C00.0000	32Mbytes	ROM chip select 3	

# 7.2.2 Access sequencing

The bank configuration also determines the width of the external memory devices. When the external memory bus is narrower than the transfer initiated from the current master, the internal transfer will take several external bus transfers to complete. For example, in case that memory Bank0 is configured as 8-bit wide



memory and a 32-bit read is initiated the AMBA bus stalls while the SMI read four consecutive bytes from the memory. During these accesses the data path is controlled (in the EBI) to demultiplex the four bytes into one 32-bit word on the AMBA ASB bus.

### 7.2.3 Wait states generation

The Static Memory Controller supports wait states for read and write accesses. This is configurable between one and 16 wait states for standard memory access, and zero and 15 wait states for burst mode. The Static Memory Controller also allows transfers to be extended indefinitely, using the EXPRDY signal. To hold the current transfer, EXPRDY must be LOW on the falling edge of BCLK before the last cycle of the accesses. The transfer cannot complete until EXPRDY is HIGH for at least one cycle.

### 7.2.4 Burst read control

Up to four consecutive locations in 8-, 16- or 32-bit memories can be read in one burst. If the bus width of external memory is less than that of internal bus, you have to set the value of **BURST READ WAIT STATE** in *7.3.1 MEM Configuration Register* more than 1 cycle for stable data transfers between them.

# 7.2.5 Byte lane write control

This controls nRWE [3:0] according to transfer width, BA [1:0] and the access sequencing. The table below shows nRWE coding case by little endian accessing to 32,16,8-bit external memory bus.

### CASE1. ACCESS: Write, 32-Bit external bus

BSIZE [1:0]	BA [1:0]	nRWE [3:0]	
10(WORD)	XX	0000	
01(HALF)	1X	0011	
	0X	1100	
00(BYTE)	11	0111	
	10	1011	
	01	1101	
	00	1110	

### CASE2. ACCESS: Write, 16-Bit external bus

BSIZE [1:0]	BA [1:0]	IA [1:0] *1	nRWE [3:0]	
10(WORD)	XX	1X	1100	
	XX	0X	1100	
01(HALF)	1X	1X	1100	
	0X	0X	1100	
00(BYTE)	11	1X	1101	
	10	1X	1110	
	01	0X	1101	
	00	0X	1110	

#### CASE3. ACCESS: Write, 8-Bit external bus

BSIZE [1:0]	BA [1:0]	IA [1:0] *1	nRWE [3:0]	
10(WORD)	XX	11	1110	
	XX	10	1110	
	XX	01	1110	
	XX	00	1110	
01(HALF)	1X	11	1110	
	1X	10	1110	



	0X	01	1110	
	0X	00	1110	
00(BYTE)	11	11	1110	
	10	10	1110	
	01	01	1110	
	00	00	1110	

Note \*1 IA [1:0] : internal SMI address

# 7.3 Registers

Address	Name	Width	Default	Description
0x8000.3000	MEMCFG0		0x0	Memory Configuration Register 0
0x8000.3004	MEMCFG1		0x0	Memory Configuration Register 1
0x8000.3008	MEMCFG2		0x0	Memory Configuration Register 2
0x8000.300C	MEMCFG3		0x0	Memory Configuration Register 3

Table 7-1 Static Memory Controller Register Summary

# 7.3.1 MEM Configuration Register

			11	10	9	8	7	6	5	4	3	2	1	0
			BUR EN		ST REA			NOR STAT	MAL A	CCESS	WAIT		MEM WIDT	Ή
Bits	Type	Function	1						, , , , , , , , , , , , , , , , , , ,					
31:12	-	Reserve	:d											
11	R/W	Burst Er							to take	advan	tage of	faster	access	times
		from me	mory de	vices th	nat supp	oort bu	ırst mod	e.						
10:7	R/W	Value	Numbe	er of Bu	ırst Rea	ad Wai	t State							
		1111	0											
		1110	1											
		0001	14											
		0000	15 (de											
6:3	R/W	Value	Numbe	er of No	ormal A	ccess	Wait Sta	te						
		1111	1											
		1110	2											
		0001	 15											
		0000	16 (de	foult)										
2	_	Reserve		iauit)										
1:0	R/W	Value	-	ry Widt	h									
1.0	IX/VV	value	MEITIO	i y vviat	11									
		11	Reserv	ved										
		10			y acces	s								
		01			y acces									
		00			y acces									
			J_ D.C.		, 23000									




# 7.4 Examples of the SMI Read, Write wait timing diagram

The following timing diagrams show sequential and non-sequential read and write accesses. For information on the AMBA bus internal signals refer to the AMBA specification (ARM IHI 0011A)

# 7.4.1 Read normal wait (Non-Sequential mode)

This timing diagram shows a non-sequential read accesses with 5 wait cycles (MEM config register = 0x058).

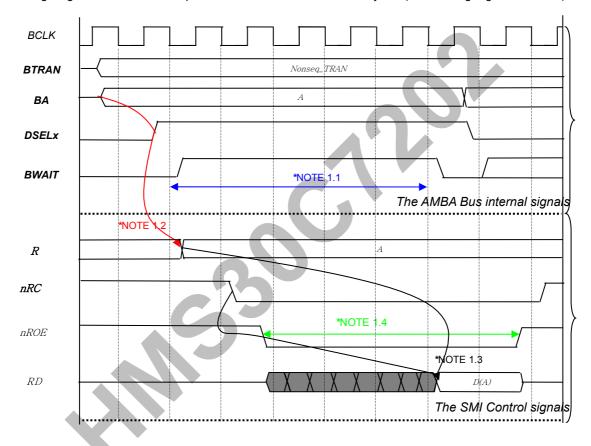

<sup>\*</sup>NOTE 1.1: BWAIT time = BCLK x 5 wait cycle

<sup>\*</sup>NOTE 1.2: Valid the SMI address latch on the ASB Bus address when BA and DSEL are valid condition.


<sup>\*</sup>NOTE 1.3: After generated SMI control signals and the end of 5wait cycles, external device read data is valid with SMI address (RA), nRCS, and nROE.

<sup>\*</sup>NOTE 1.4: External Memory access time. It is the same as Wait time (i.e. BWAIT cycle time = 5 wait cycle)



# 7.4.2 Read normal wait (Sequential mode)

This timing diagram shows a sequential read accesses with 3 wait cycles (MEM config register = 0x068)

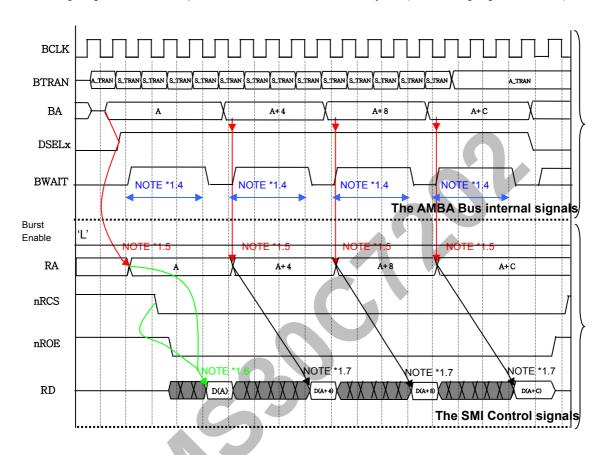

<sup>\*</sup>NOTE 1.4: BWAIT time = BCLK x 3 wait cycle (If MCR is set)


<sup>\*</sup>NOTE 1.5: Valid the SMI address latch on the ASB Bus address when BA and DSEL are valid condition.

<sup>\*</sup>NOTE 1.6: After generated SMI control signals, external device read data is valid with SMI address(RA), nRCS, and nROE.

<sup>\*</sup>NOTE 1.7: The BTRAN is sequential transfer so the SMI control signal (nRCS, nROE) are not asserted any more, and then external device read data is valid with SMI address (RA).



### 7.4.3 Read burst wait (Sequential mode)

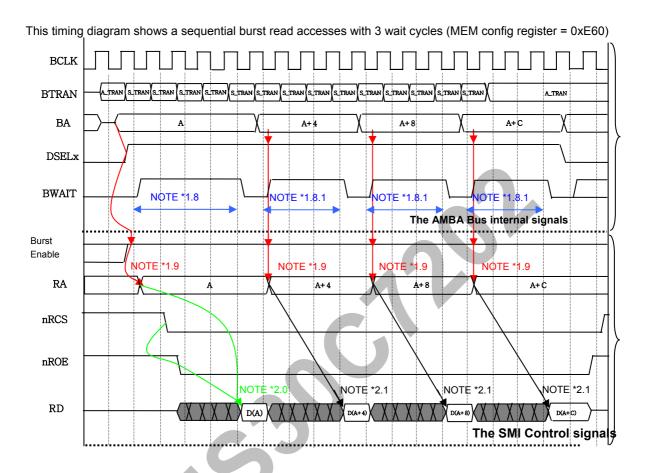

<sup>\*</sup>NOTE 1.8: For the 1<sup>st</sup> read of a Burst read transfer the wait time is Normal Wait time (in this example 4 cycles).

Above the figure of burst wait signals; make sure that BurstEnable signal will be change (High to Low) at the BA is become to different value.

<sup>\*</sup>NOTE 1.8.1: BWAIT time = BCLK x 3 wait cycle(If MCR is set)

<sup>\*</sup>NOTE 1.9: Valid the SMI address latch on the ASB Bus address when BA, DSEL, and BurstEnable are valid condition.


<sup>\*</sup>NOTE 2.0: After generated SMI control signals, external device read data is valid with SMI address (RA), nRCS, and nROE.

<sup>\*</sup>NOTE 2.1: The BTRAN is sequential transfer so the SMI control signal (nRCS, nROE) are not asserted any more, and then external device read data is valid with SMI address(RA).



# 7.4.4 Write normal wait (Sequential mode)

This timing diagram shows a sequential write accesses with 3 wait cycles (MEM config register = 0x068).

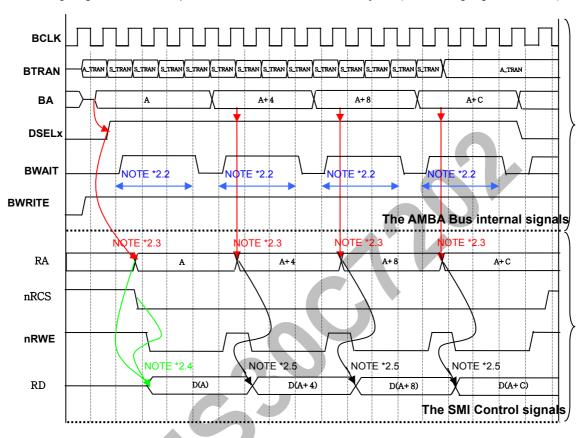

<sup>\*</sup>NOTE 2.2: BWAIT time = BCLK x 3 wait cycle (If MCR is set)

<sup>\*</sup>NOTE 2.3: Valid the SMI address latch on the ASB Bus address when BA and DSEL are valid condition.

<sup>\*</sup>NOTE 2.4: After generated SMI control signals, external device write data is valid with SMI address (RA), nRCS, and nRWE.

<sup>\*</sup>NOTE 2.5: The BTRAN is Sequential transfer so nRCS external chip enable signal is not asserted, but nRWE external write enable signal asserted on the falling edge of BCLK.



# 7.5 Internal SRAM

# 7.5.1 Remapping Enable Register

HMS30C7202 allows the remapping of the internal SRAM block (Base address : 0x7F00.0000 - 2KB size) to enhance the performance.

							0x8000.1	1040
31	30	29	28	27	26	25	24	
			Rese	erved				
23	22	21	20	19	18	17	16	
			Rese	erved				
15	14	13	12	11	10	9	8	
	Reserved				Remap Size			
7	6	5	4	3	2	1	0	
		Remap Size			Rese	erved	RemapEn	

Bits	Type	Function
31:13	-	Reserved
12:3	R/W	Remap Size (word Boundary)
		Caution: Max size of remapping is 0x7FF(2KB area).
		If remap size setting exceeds this value, the correct operation can not be guaranteed
2:1		Reserved
0	R/W	1 : Enable Remap
		0 : Disable Remap

# 7.5.2 Remap Source Address Register

							0x8000.1048
31	30	29	28	27	26	25	24
			Reserved				
23	22	21	20	19	18	17	16
			Remap Sou	rce Address			
15	14	13	12	11	10	9	8
			Remap Sou	rce Address			
7	6	5	4	3	2	1	0
		Remap Sou	rce Address			Rese	erved

Bits	Type	Function
31:25	-	Reserved
24:2	R/W	Remap Source Address Start address of Remapping(Word Boundary)
0:1		Reserved



### 8 LCD CONTROLLER

### **FEATURES**

- Single panel color and monochrome STN displays
- TFT color displays
- Resolution programmable up to 640x480
- Single panel mono STN displays with either 4- or 8-bit interfaces
- 15 gray-level mono support, 3375 color STN support
- 4bpp mono, 4 or 8bpp palletized color displays
- 16bpp color 'true-color' color displays(TFT)
- Programmable timing for different display panels
- 3 x 256 entry, 5-bit Red, Blue and 6-bit Green palette RAM in TFT mode
- 3 x 256 entry, 4-bit palette RAM in STN mode
- Patented gravscale algorithm
- Little-endian operation

#### Note

The controller does not support dual panel STN displays.

There is no hardware cursor support, since WinCE does not use a cursor.

# 8.1 Video operation

A block diagram of the video system is shown in Figure 8-1: Video System Block Diagram. The video system has a data path for STN LCD and for TFT LCDs.

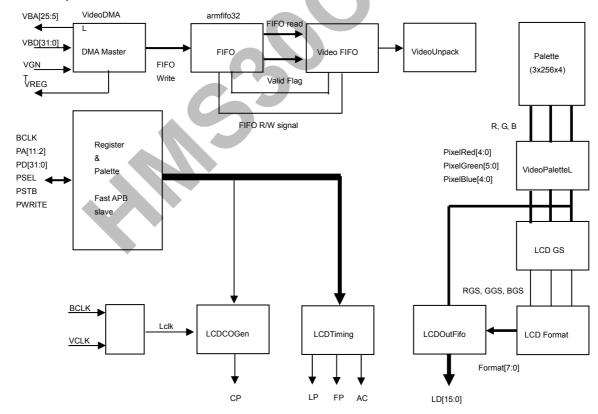


Figure 8-1 Video System Block Diagram



### 8.1.1 LCD datapath

In TFT mode the digital RGB data is directly available at output pins. However, in STN mode, the data must be gray scaled, and then formatted for the LCD panel. The grayscaler block converts the 4 bit per color gun data into a single bit per gun, using a patented time/space dither algorithm. In mono mode, only the B gun data is used. The output of the grayscaler is fed to the formatter, which formats the pixels in the correct order for the LCD panel type in use. (4 or 8 mono pixels per clock for mono panels, or 2 2/3pixels per clock for color data.) The output of the formatter in color mode is bursty, due to the 2 2/3pixels per clock that are output, so the formatter output goes to a small FIFO, which smoothes out this burstiness, before data is output to the LCD panel at a constant rate.

### 8.1.1.1 Palette RAM & 16bpp mode

Logical pixels are either 8 or 16 bits. In 8-bit mode, the logical pixel value is used to index into the three palette arrays to select the three color components of the physical pixel value. In 16-bit pseudo true-color mode, a patented technique is used to allow  $2^{16}$  colors to be selected from  $2^{24}$  possible colors. Separate color gun values are independently used to index into the three palette arrays, to select an 8-bit value for each of the color guns. By splitting the palette RAM into three separate RAM arrays, it allows 16-bit mode to generate 8-bit color gun data. The method used is an ARM patented technique, where 16bpp data is split into three overlapping 8-bit fields that are used to index into the three RAM arrays. The red gun is indexed by bits 15:8 of the 16-bit pixel value, the blue gun is indexed by bits 7:0 of the pixel value, and the green gun is indexed by bits 11:4 of the pixel value. By programming the palette with the correct values, 5:5:5, 5:6:5, 4:8:4, and many other combinations of 16-bit data may be used. Thus:

8 bpp: 256 palette entries are used for each palette array. All three palette RAMs are indexed by pixel[7:0]

16 bpp : 256 palette entries are used for each palette array. Red array is indexed by pixel[15:8], green array is indexed by pixel[11:4], and blue array is indexed by pixel[7:0]

Figure 8-2 shows 5:6:5 combination. Least significant 3bits are don't cares for red index, most significant 3bits are don't cares for blue index. Bit0 and bit7 are don't cares for green index.

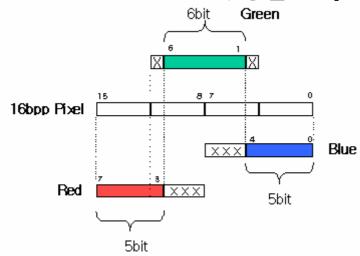


Figure 8-2 5:6:5 Combination of 16bpp Data

The effective 5, 6, and 5 bits are indexes to HMS30C7202 palette RAM for TFT mode. Figure 8-3 shows HMS30C7202 palette register mapping for 16bpp(5:6:5) representation.



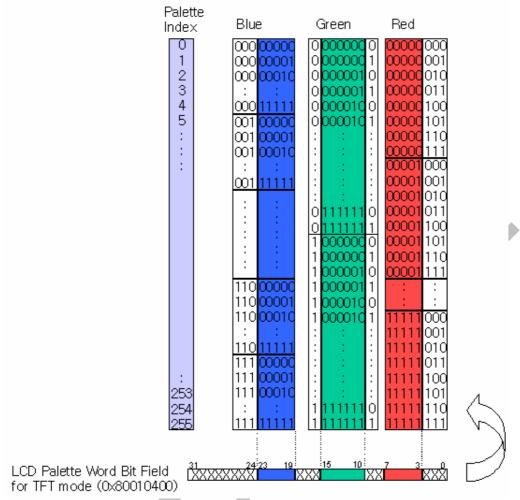


Figure 8-3 Palette RAM Entries for 5:6:5 Combination

To program palette RAM as in Figure 8-3, refer to the code in Figure 8-4.

```
unsigned long palette[256];

main ( )
{
    int i;
    for (i=0; i<256; i++)
    {
        // store 5 bits red, 6 bits green, and 5 bits blue
            palette[i] = ((i&0x1f) << 19) | ((i&0x7e) << 9) | ((i&0xf8));

            printf("%d, %02X, %02X, %02X\r\n", i, (i&0x1f) << 3, (i&0x7e) << 1, (i&0xf8) << 0 );
    }
}
```

Figure 8-4 Sample Code for 5:6:5 Palette Generation



### 8.1.2 Color/Grayscale Dithering

Entries selected from the look-up palette are sent to the color/grayscale space/time base dither generator. Each 4-bit value is used to select one of 15 intensity levels.

Note that two of the 16 dither values are identical. The table below assumes that a pixel data input to the LCD panel is active HIGH. That is, a `1' in the pixel data stream will turn the pixel on, and a `0' will turn it off. If this is not the case, the intensity order will be reversed, with "0000" being the most intense color. This polarity is LCD panel dependent.

The gray/color intensity is controlled by turning individual pixels on and off at varying periodic rates. More intense grays/colors are produced by making the average time that the pixel is off longer than the average time that it is on. The proprietary dither algorithm is optimized to provide a range of intensity values that match the eye's visual perception of color/gray gradations, with smaller changes in intensity nearer to the mid-gray level, and greater nearer the black and the white levels. In color mode, red, green and blue components are gray-scaled simultaneously as if they were mono pixels. The duty cycle and resultant intensity level for all 15 color/grayscale levels is summarized in Table 8-1: Color/grayscale intensities and modulation rates.

Dither Value (4 bit value from palette)	Intensity (0% is white)	Modulation Rate (ration of ON to ON+OFF pixels)
1111	100.0	1
1110	100.0	1
1101	88.9	8/9
1100	80.0	4/5
1011	73.3	11/15
1010	66.6	6/9
1001	60.0	3/5
1000	55.6	5/9
0111	50.0	1/2
0110	44.4	4/9
0101	40.0	2/5
0100	33.3	3.9
0011	26.7	4/15
0010	20.0	1/5
0001	11.1	1/9
0000	0.0	0

Table 8-1 LCD Colorgrayscale intensities and modulation rates

# 8.1.3 How to order the bit on LD[7:0] output

In STN mode, the low order LD signals are the first pixels on the line, and the high order LD signals are later pixels on the line.

In color mode things are different once again. LD[7] is the red component of the first pixel on the line, and LD[6] is the green component of the pixel, and LD[5] the blue, with LD[4] being the red component of the next pixel. This pattern continues, with LD[0] being the green component of the third pixel, and LD[7] of the next clock being the blue component of the same pixel.



LCD Pin		Time Sequence							
LD[7]	R0	B2	G5	R8		R0	B2		
LD[6]	G0	R3	B5	G8		G0	R3		
LD[5]	В0	G3	R6	B8		В0	G3		
LD[4]	R1	В3	G6	R9		R1	B3		
LD[3]	G1	R4	B6	G9		G1	R4		
LD[2]	B1	G4	R7	B9		B1	G4		
LD[1]	R2	B4	G7	R10		R2	B4		
LD[0]	G2	R5	B7	G10		G2	R5		

Table 8-2 How to order the bit on LD[7:0] in 8-bit color STN mode

#### 8.1.4 TFT mode

When TFT display mode is enabled, the timing of the pixel, line and frame clocks as well as the AC-bias pin change. The pixel clock transitions continuously in this mode as long as the LCD is enabled. The AC-bias pin functions as an output enable. When it is HIGH, the display latches data from the LCD's pins using the pixel clock. The line clock pin is used as the horizontal synchronization signal (HSYNC), and the frame clock is used as the vertical synchronization signal (VSync). Pixel data is output one pixel per clock, rather than 4, 8 or 22/3pixels per clock, as it is in the passive LCD modes.

#### 8.2 Registers

Address	Name	Width	Default	Description
0x8001.0000	LcdControl			LCD Control Register
0x8001.0004	LcdStatus			LCD Status Register
0x8001.0008	LcdStatusM			LCD Status Mask Register
0x8001.000C	LcdInterrupt			LCD Interrupt Register
0x8001.0010	LcdDBAR			LCD DMA Channel Base Address Register
0x8001.0014	LcdDCAR			LCD DMA Channel Current Address Register
0x8001.0020	LcdTiming0			LCD Timing 0 Register
0x8001.0024	LcdTiming1			LCD Timing 1 Register
0x8001.0028	LcdTiming2			LCD Timing 2 Register
0x8001.0040	LcdTest			LCD Test register
0x8001.0044	GSFState			Grayscaler production test register
0x8001.0048	GSRState			Grayscaler production test register
0x8001.004C	GSCState			Grayscaler production test register
0x8001.0400~	LCDPalette			LCD Palette programming registers
0x8001.07FC				

Table 8-3 LCD Controller Register Summary

#### 8.2.1 LCD Power Control

LCD displays require that the LCD is running before power is applied. For this reason, the LCD's power on control is not set to "1" unless both LcdEn and LcdPwr are set to "1". Note that most LCD displays require the LcdEn must be set to "1" approximately 20ms before LcdPwr is set to "1" for powering up. Likewise, LcdPwr is set to "0" 20ms before LcdEn is set to "0" for powering down.

24	
LDbusEn	

						24
						LDbusEn
23	22	21		19	18	
LcdBLE	LcdPwr	LcdMono8		LcdVComp		
			12			
			BGR			



			4	3	2	1	0
			LcdTFT	LcdBW	LcdBpp		LcdEn
Bits	Type	Function					
3125	туре	Reserved					
24	R/W	LD data bus Enable					
24	FC/ VV	0 – LD data bus disable	e (initial value	`			
		1 – LD data bus Enabl	,	,			
23	R/W	Lcd Backlight enable					
20	1000	This drives "0" or "1" o		acklight enab	e pin		
22	R/W	Lcd power enable					
		0 - Lcd is off					
		1 - Lcd is on when Lcd	En=1				
21	R/W	Lcd monochrome da	ta width				
		0 - 4 bits Lcd module					
		1 - 8 bits Lcd module					
20	-	Reserved					
19:18	R/W	Generate interrupt at:					
		00 - start of VSync					
		01 - start of BACK PO					
		10 - start of ACTIVE V					
17:13	_	11 - start of FRONT Po	<u> ЈКСП</u>				
12	R/W	0 - RGB normal video	output for LCE	,			
12	1000	1 - BGR red and blue					
11:5	_	Reserved	• •				
4	R/W	LCD TFT					
		0 - Passive or STN dis	play operation	enabled			
		1 - Active or TFT displa	ay operation e	nabled			
3	R/W	LCD Monochrome					
		0 - Color operation ena					
		1 - Monochrome opera	ation only enal	oled			
2:1	R/W	LCD Bits Per Pixel					
		00 - 4bpp					
		01 - 8bpp					
		10 - 16bpp					
		11 – Reserved					
0	R/W	LCD Controller Enab					
		0 - LCD controller disa					
		1 - LCD controller enal	pied				

# 8.2.2 LCD Controller Status/Mask and Interrupt Registers

The LCD controller status, mask and interrupt registers all have the same format. Each bit of the status register is a status bit that may generate an interrupt. The corresponding bits in the mask register mask the interrupt. The interrupt register is the logical AND of the status and mask registers, and the interrupt output from the LCD controller is the logical OR of the bits within the interrupt register.

The LCD controller status register contains bits that signal an under-run error for the FIFO, the DMA next base update ready status, and the DMA done status. Each of these hardware-detected events can generate an interrupt request to the interrupt controller.

The state of the s			0x800100	004 ~ 0x800100c
	3	2	1	0
	LDone	VComp	LNext	LFUF

Bits	Type	Function
31:4	-	Reserved
3	R	LCD Done frame status/mask/interrupt bit
		The LCD Frame Done (Done) is a read-only status bit that is set after the LCD has been



		disabled (LcdEn = 0) and the frame that is current active finishes being output to the LCD's data pins. It is cleared by writing the base address (LcdDBAR) or enabling the LCD, or, by writing "1" to the LDone bit of the Status Register. When the LCD is disabled by clearing the LCD enable bit (LcdEn=0) in LcdControl, the LCD allows the current frame to complete before
		it is disabled. After the last set of pixels is clocked out onto the LCD's data pins by the pixel clock, the LCD is disabled and Done is set.
2	R/W	Vertical compare interrupt
		This bit is set when the Lcd timing generator reaches the vertical region programmed in the
		Video Control Register. This bit is "sticky", meaning it remains set until it is cleared by writing
		a "1" to this bit
1	R	LCD Next base address update status/mask/interrupt bit
		The LCD Next Frame (LNext) is a read-only status bit that is set after the contents of the LCD
		DMA base address register are transferred to the LCD DMA current address register at the
		start of frame, and it is cleared when the LCD DMA base address register is written.
0	R/W	FIFO underflow status/mask/interrupt bit
		The LCD FIFO underflow (LFUF) status bit is set when the LCD FIFO under-runs. The status
		bit is "sticky", meaning it remains set after the FIFO is no longer underrunning. The status bit
		is cleared by writing a `1' to this bit.

### 8.2.3 LCD DMA Base Address Register

The LCD DMA base address register (LcdDBAR) is a read/write register used to specify the base address of the off-chip frame buffer for the LCD. Addresses programmed in the base address register must be aligned on sixteen-word boundaries, thus the least significant six bits (LcdDBAR [5:0]) must always be written with zeros. Only 26 bits of the register are valid (including the LS 6 bits which must be zero), because LCD DMA is only allowed from SDRAM.

The 26 bits address range allows the LCD DMA to access any address within the SDRAM. The upper address lines are not needed, because these are the address lines used to select which device is accessed, but the LCD always accesses SDRAM. The user must initialize the base address register before enabling the LCD, and may also write a new value to it while the LCD is enabled to allow a new frame buffer to be used for the next frame. The user can change the state of LcdDBAR while the LCD controller is active, after the Next Frame (Next) status bit is set within the LCD's status register that generates an interrupt request. This status bit indicates that the value in the base address pointer has been transferred to the current address pointer register and that it is safe to write a new base address value. This allows double-buffered video to be implemented if required.

0x80010010

Bits	Type	Function
31:26	-	Reserved. Keep these bits zero
25:6	R/W	LcdDBAR: LCD DMA Channel Base Address Pointer
		16-word aligned base address in SDRAM of the frame buffer within off-chip memory.
5:0	-	Reserved. Keep these bits zero

# 8.2.4 LCD DMA Channel Current Address Register

This read-only register allows the processor to read the current value of the LCD DMA channel current address register. This is not something that would normally be done, but it allows additional test observability. Its value cannot be expected to be exact, it could change at an moment. However, its contents can be read to determine the approximate line that the LCD controller is currently displaying and driving out to the display

0x80010014

Bits	Type	Function
31:26	-	Reserved. Keep these bits zero
25:6	R/W	LcdDCAR: LCD DMA Channel Current Address Pointer  16-word aligned current address pointer to data in SDRAM frame buffer currently being displayed
5:0	-	Reserved. Keep these bits zero

### 8.2.5 LCD Timing 0 Register

LCD Timing 0 Register (LcdTiming0) controls horizontal LCD timing. See 8.6.2 Pixel Clock Divider (PCD) on



page 8-13 for a description of the terms "PixelClock" and "LcdClk"

0x80010020

31 30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
HBP							HFP							
15 14	13	12	11	10	9	8	7	6	5	4	3	2		
HSW							PPL							

Bits	Type	Function
31:24	R/W	Horizontal Back Porch
		The 8-bit Horizontal Back Porch (HBP) field is used to specify the number of pixel clock
		periods to insert at the beginning of each line or row of pixels. After the line clock for the
		previous line has been negated, the value in HBP is used to count the number of pixel clocks
		to wait before starting to output the first set of pixels in the next line. HBP generates a wait
		period ranging from 1-256 pixel clock cycles (Number of LcdClk clock periods to add to the
		beginning of a line transmission before the first set of pixels is output to the display minus 1).
23:16	R/W	HFP Horizontal Front Porch
		The 8-bit Horizontal Front Porch (HFP) field is used to specify the number of pixel clock
		periods to insert at the end of each line or row of pixels before pulsing the line clock pin. Once
		a complete line of pixels is transmitted to the LCD driver, the value in HFP is used to count
		the number of pixel clocks to wait before pulsing the line clock. HFP generates a wait period
		ranging from 1-256 pixel clock cycles. (Program to value required minus one).
15:8	R/W	Horizontal Sync Pulse Width
		The 6-bit horizontal sync pulse width (HSW) field is used to specify the pulse width of the line
		clock in passive mode, or horizontal synchronization pulse in active mode. Number of LcdClk
		clock periods to pulse the line clock at the end of each line minus 1
7:2	R/W	The pixels-per-line (PPL) bit-field is used to specify the number of pixels in each line or row
		on the screen. PPL is a 6-bit value that represents between 16-1024 pixels per line. PPL is
		used to count the correct number of pixel clocks that must occur before the line clock can be
		pulsed. Program the value required divided by 16, minus 1.
1:0	-	Reserved

# 8.2.6 LCD Timing 1 Register

LCD Timing 1 Register (LcdTiming1) controls LCD vertical timing parameters.

31 30 29 28 27 26	25 24 23 22	21 20 19 18 17 16
VBP	VFP	
15 14 13 12 11 10	9 8 7 6	5 4 3 2 1 0
VSW	LPS	

	-	
Bits	Type	Function
3124	R/W	Vertical Back Porch The 8-bit Vertical Back Porch (VBP) field is used to specify the number of line clocks to insert at the beginning of each frame, i.e. number of inactive lines at the start of a frame, after VSync period. The VBP count starts just after the VSync signal for the previous frame has been negated for active mode, or the extra line clocks have been inserted as specified by the VSW bit-field in passive mode. After this has occurred, the value in VBP is used to count the number of line clock periods to insert before starting to output pixels in the next frame. VBP generates from 0-255 extra line clock cycles. This should be programmed to zero in passive mode, unless sensing LCD to VGA to share DMA data
23:16	R/W	Vertical Front Porch The 8-bit Vertical Front Porch (VFP) field is used to specify the number of line clocks to insert at the end of each frame, i.e. number of inactive lines at the end of frame, before VSync period. Once a complete frame of pixels is transmitted to the LCD display, the value in VFP is used to count the number of line clock periods to wait. After the count has elapsed the VSync (LcdFP) signal is pulsed in active mode, or extra line clocks are inserted as specified by the VSW bit-field in passive mode. VFP generates from 0-255 line clock cycles. This should be zero for passive display modes, unless synchronizing to the VGA to share data.



15:10	R/W	Vertical Sync Pulse Width The 6-bit vertical sync pulse width (VSW) field is used to specify the pulse width of the vertical synchronization pulse in active mode, or is used to add extra dummy line clock delays between frames in passive mode. Should be small for passive LCD, but should be long enough to re-program the video palette under interrupt control, without writing the video palette at the same time as video is being displayed. The register is programmed with the number of lines of VSync minus one.
9:0	R/W	Lines Per Screen The Lines Per Screen (LPS) bit-field is used to specify the number of lines or rows per LCD panel being controlled. LPS is a 10-bit value that represents 1-1024 Lines Per Screen. The register is programmed with the number of lines per screen minus 1.

# 8.2.7 LCD Timing 2 Register

Skip4 BCD CPL

LCD Timing 2 Register (LcdTiming2) controls various functions associated with the timing of the LCD controller. 0x80010028

27 26 25 24 23 22 21 20 19 18 17 16

15	14	13 12	11	10	9	8	7	6	5	4	3	2	1	0
					9	0	•	U	_	-	3			U
SLV	IEO	IPC IHS	IVS	ACB					LCS	PCD				
Bits	Type	Functio	n											
31:28	-	Reserve	ed											
27	R/W	Set this	bit to "	1" wher	n runnii	ng a c	olor pa	ssive I	LCD with	slave	mode	. This	produc	es an
		•					-		pulse is		,		-	
									o-and-tw					
									eans that					
									will be o	utput e	every e	gnt Lc	асік ре	rioas,
26	R/W		e LCD C			nan me	reque	ilicy of	LCUCIK.					
20	IN/VV					ded I C	CD clock	c to be	output c	n I CF	) This i	nit coul	d only h	ne set
		-	mode bu						output			on oou	a only i	0000
25:16	R/W		Per Line											
		This is t	he actua	al numb	er of clo	ocks ou	utput to	the L0	CD panel	each	line, m	inus or	e. This	must
									e LCD Ti	_	_			
									ed by 1, 4				hirds fo	r TFT
45	DAM			it mode	, mono	8-bit, c	or color	SINm	node (22/	3) resp	pectivel	у.		
15	R/W	Slave n		k) I CD	to VC	۸ vidoo	. The l	Jevno	and VS	ma ara	lookor	to the	. V/C A 4	imina
			_	,				•	and voy Illy progr					_
14	R/W		Output E		Zoritari	ıgı	maot be	ourcit	any progr	ammo	<u>a 11 511a</u>	inig Di	iii t data	<u> </u>
					le (IEO)	) bit is ı	used to	select	the activ	e and	inactive	e state	of the	output
		enable	signal in	active of	display î	mode.	In this r	mode,	the AC-b	ias pir	n is use	d as a	n enabl	e that
		•		•				•	ing drive		_	•		
		,							1, the Lo					
							e LCD's	data	lines on	the pr	ogramn	ned ed	ge of L	.cdCP
			cdAC is i AC pin is				nada							
			C pin is											
13	R/W		ixel Clo											
		The Inv	ert Pixel	Clock (	(IPC) bi	it is us	ed to s	elect w	vhich edg	e of t	he pixe	l clock	pixel d	ata is
									vhich edo data is dr					
		driven o	ut onto t g-edge o	he LCD	's data	lines. V	When IF	PC=0, 0		iven o	nto the	LCD's	data lin	es on
		driven of the rising edge of	ut onto t g-edge o LcdCP.	he LCD of LcdCl	`s data P. Wher	lines. V n IPC=	When IF 1, data	PC=0, o	data is dr en onto th	iven one LCI	nto the O's data	LCD's	data lin	es on
		driven of the rising edge of 0 - Data	ut onto t g-edge o LcdCP. is driver	he LCD of LcdCl	's data P. Wher LCD's	lines. V n IPC= data lir	When IF 1, data nes on t	PC=0, o is drive he risii	data is dr en onto th ng-edge	iven one LCI of Lcd	nto the O's data CP.	LCD's	data lin	es on
12	R/W	driven of the rising edge of 0 - Data	ut onto t g-edge o LcdCP. is driver is driver	he LCD of LcdCl	's data P. Wher LCD's	lines. V n IPC= data lir	When IF 1, data nes on t	PC=0, o is drive he risii	data is dr en onto th	iven one LCI of Lcd	nto the O's data CP.	LCD's	data lin	es on

0 - LcdLP pin is active HIGH and inactive LOW.



		1 - LcdLP pin is active LOW and inactive HIGH.
11	R/W	Invert Vsync
		The Invert VSync (IVS) bit is used to invert the polarity of the LcdFP signal.
		0 - LcdFP pin is active HIGH and inactive LOW.
		1 - LcdFP pin is active LOW and inactive HIGH.
10:6	R/W	AC Bias Pin Frequency
		The 5-bit AC-bias frequency (ACB) field is used to specify the number of line clock periods to
		count between each toggle of the AC-bias pin (LcdAC). This pin is used to periodically invert
		the polarity of the power supply to prevent DC charge build-up within the display. The value
		programmed is the number of lines between transitions, minus 1.
		Note
		The ACB bit field had no effect on LcdAC in active mode. The pixel clock transitions
		continuously in active mode and the AC Bias line is used as an output enable signal
5	R/W	LCD Clock source selection
		0 - DMA bus clock (system bus clock)
		1 - Video PLL clock (VCLK; in normal operation)
4:0	R/W	Pixel Clock Divisor
		Used to specify the frequency of the pixel clock based on the LCD clock (LcdCLK) frequency.
		Pixel clock frequency can range from LcdCLK/2 to LcdCLK/33, where LcdClk is the clock
		selected by LCS. Pixel Clock Frequency = LcdCLK/(PCD+2).
		Note that in the case of the LCD, the pixel clock is not the frequency of some nominal clock
		rate that individual pixels are output to the LCD. It is the frequency of the LcdCP signal. In
		normal mono mode (4-bit interface), four pixels are output per LcdCP cycle, so the PixelClock
		is one quarter the nominal pixel rate. In the case of 8-bit interface mono, PixelClock is one-
		eighth the nominal pixel rate, since 8 pixels are output per LcdCP cycle. In the case of color,
		PixelClock is 0.375 times the nominal pixel rate, because 22/3 pixels are output per LcdCP
		cycle. If the LCD and VGA are operating concurrently, and sharing DMA data, then in color
		mode the pixel clock should normally be 3/8 the VGA clock. To achieve this, PCD should be
		7programmed to the value 0 and the skip4 bit set to "1". The skip4 bit produces a null clock
		cycle (no high phase) every fourth clock cycle.
		-) (··- ···g.: p···· / • · • · ) · • • · · · · · · · · · · · ·

# 8.2.8 LCD Test Register

The LCD test register contains bits that allow certain LCD signals to be output on the LCD pins for test purposes. This register should not normally be used. The register is reset to all zero, and this will result in normal operation.

							8
							TCOUNT
7	6	5	4	3	2	1	0
TCC	TLC	TCR	TLR	TCF	TRF	TLDATA	TEST MODE

Bits	Type	Function
31:9	-	Reserved
8	R/W	Separates the 10-bit counter into nibbles for the test purpose
7	R/W	For production test of grayscaler, never write a "1" to these registers in normal use.
6	R/W	For production test of grayscaler, never write a "1" to these registers in normal use.
5	R/W	For production test of grayscaler, never write a "1" to these registers in normal use.
4	R/W	For production test of grayscaler, never write a "1" to these registers in normal use.
3	R/W	For production test of grayscaler, never write a "1" to these registers in normal use.
2	R/W	For production test of grayscaler, never write a "1" to these registers in normal use.
1	R/W	Walking one's pattern used in place of SDRAM data for the LCD controller
0	R/W	Test mode bit for grey-scaler

# 8.2.9 Grayscaler Test Registers

The registers GSFrame State, GSRow State and GS Column State are used for the purpose of production test



and must not be written to or read from in normal use.

0x80010044, 0x80010048, 0x8001004c

# 8.2.10 LCD Palette registers

The LCD palette registers are a set of 256 word-aligned registers that allow the LCD to be programmed. The format of the palette data is shown below. At the TFT mode, the palette RAM bit width will be increased as Figure 8-6.

5														0x8	0010400
									23	22	21	20			
									В						
	15	14	13	12					7	6	5	4			
	G								R						
Figu	re 8-	5 LCD	Palett	e Wor	d Bit F	ield f	or STN	l mode	•						
									23	22	21	20	19		
									В						
	15	14	13	12	11	10			7	6	5	4	3		
	G								D						

Figure 8-6 LCD Palette Word Bit Field for TFT mode



# 8.3 Timings

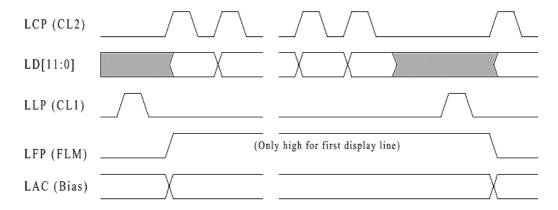


Figure 8-7 Example Mono STN LCD Panel Signal Waveforms

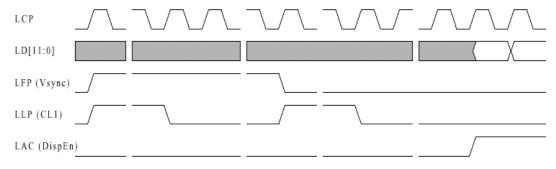


Figure 8-8 Example TFT Signal Waveforms, Start of Frame

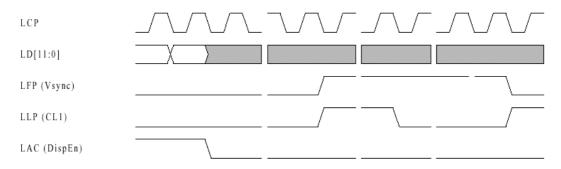


Figure 8-9 Example TFT Signal Waveforms, End of Last Line



#### 9 **FAST AMBA PERIPHERALS**

#### 9.1 **DMA Controller**

This chip includes a three-channel direct memory access controller (DMAC). High-speed transfers between peripheral devices and the SDRAM can be controlled by the DMAC instead of the CPU core. Transfers using addresses other than SDRAM will produce unpredictable results.

#### **Features**

- Three Channels.
- Max Transfer rate: 133MB/s. • Max Buffer size: 16383.
- Address mode: Single(SDRAM) address is supported.
- Channel function: Transfer modes are different in each channel.
  - i. Channel 0: Dedicated to the sound interface controller. This channel has a source address reload function. The memory space of the sound I/O device consists of a double buffer. The sound interface uses exception bus mode and word access. The channel performs only DMA transfers for transmitting data (transfers from SDRAM to the sound interface).
  - ii. Channel 1: Dedicated to the SMC/MMC interface block. The channel uses exception bus mode and word access. It controls DMA transfers for both transmitting (from SDRAM) and receiving (to SDRAM). Word is the only supported transfer size. Correct DMA operation of this channel is guaranteed only if the SDRAM write buffer is enabled and LCD operation is disabled. Otherwise it will produce unpredictable results.
  - iii. Channel 2: Used by external IO device. The channel supports both exception and burst bus modes. Transfer sizes of byte, half word (16 bits) and word are all supported.
- Channel priority: Configured by register setting.
- Interrupt request: The DMAC interrupt request can be triggered by each channel whenever the DMA transfer is completed by buffer size. Since only one interrupt ID is assigned to the DMAC, the interrupt flag register (FLAGR) maintains the information on which DMA channel requested the interrupt.
- The channel 2 should not be enabled with either of the other channels at the same time.

### 9.1.1 External Signals

Pin Name	Type	Description
nDMAREQ		DMA request input signal from external device (level sensitive, active Low)
nDMAACK	0	DMA acknowledge output signal to external Device.

# 9.1.2 Registers

Address	Name	Width	Default	Description
0x8000.4000	ADR0	32	0x0	Write: Start address of the first buffer of Channel 0
				Read: Current address of the first buffer of Channel 0
0x8000.4004	ASR	32	0x0	Write: Start address of the second buffer of Channel 0
				Read: Current address of the second buffer of Channel 0
0x8000.4008	TNR0	14	0x3FFF	Write: Size of the first buffer of Channel 0 (in words)
				Read: Number of words in the first buffer of Channel 0
				which remain to be transferred
0x8000.400C	TSR	14	0x3FFF	Write: Size of the second buffer of Channel 0 (in words)
				Read: Number of words in the second buffer of Channel
				0 which remain to be transferred
0x8000.4010	CCR0	4	0x0	Channel 0 control
0x8000.4014	ADR1	32	0x0	Write: Start address of Channel 1 buffer
				Read: Current address of Channel 1 buffer
0x8000.4018	TNR1	14	0x3FFF	Write: Size of Channel 1 buffer (in words)
				Read: Number of words in Channel 1 buffer which
				remain to be transferred



0x8000.401C	CCR1	3	0x0	Channel 1 control
0x8000.4020	ADR2	32	0x0	Write: Start address of Channel 2 buffer
				Read: Current address of Channel 2 buffer
0x8000.4024	TNR2	14	0x3FFF	Write: Size of Channel 2 buffer (in unit of transfer size).
				Read: Number of data in Channel 2 buffer which remain
				to be transferred (in unit of transfer size)
0x8000.4028	CCR2	8	0x0	Channel 2 control
0x8000.4038~	-	-	-	Reserved
0x8000.4040				
0x8000.4044	FLAGR	5	0x0	DMA interrupt flags
0x8000.4048~	-	-	-	Reserved
0x8000.4050				
0x8000.4054	DMAOR	3	0x0	Operation control of the DMAC

### **Table 9-1 DMA Controller Register Summary**

### 9.1.2.1 ADR0

ADR0

Bits Type Function

31:0 R/W Write: Start address of the first buffer (Buffer 0) of Channel 0 (for the sound interface)
Read: Current address of the first buffer of Channel 0

### 9.1.2.2 ASR

Read: Current address of the second buffer of Channel 0

# 9.1.2.3 TNR0

Bits	Type	Function
13:0	R/W	Write: Size of the first buffer of Channel 0 (in words, max. 16383)
		Read: Number of words in the first buffer of Channel 0 which remain to be transferred

# 9.1.2.4 TSR

Ox8000.400C

Reserved

TSR

Bits Type Function

13:0 R/W Write: Size of the second buffer of Channel 0 (in words, .max. 16383)


Read: Number of words in the second buffer of Channel 0 which remain to be transferred

# 9.1.2.5 CCR0



2	R/W	Buffer 1 transfer end interrupt mask bit of Channel 0
		1 = Interrupt request is generated when the whole DMA transfer of Buffer 1 is completed.
		0 = No Interrupt request is generated when the whole DMA transfer of Buffer 1 is completed.
1	R/W	Buffer 0 transfer end interrupt mask bit of Channel 0
		1 = Interrupt request is generated when the whole DMA transfer of Buffer 0 is completed.
		0 = No Interrupt request is generated when the whole DMA transfer of Buffer 0 is completed.
0	R/W	Channel 0 enable bit
		1 = Channel 0 is enabled.
		0 = Channel 0 is disabled.

# 9.1.2.6 ADR1

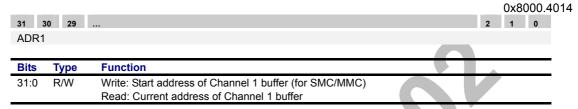

# 9.1.2.7 TNR1

			0x8000.4018				
-		13 12	1 0				
Reserved		TNR1					
Bits	Type	Function					
13:0	R/W	Write: Size of Channel 1 buffer (in words, max. 16383)					
		Read: Number of words in Channel 1 buffer which remain to be transferred					

# 9.1.2.8 CCR1

-			2	1	0
Reserved			MASK1	MODE1	DMEN1
Bits	Type	Function			
2 R/W Transfer end interrupt mask bit of Channel 1					
1 = Interrupt request is generated when the DMA transfer of the whole buffer is com					npleted.
		0 = No Interrupt request is generated when the DMA tran	sfer of the w	hole buffer is	completed.
1	R/W	Transfer direction			
		0 = Transfer from SDRAM to SMC/MMC			
		1 = Transfer from SMC/MMC to SDRAM			
0	R/W	Channel 1 enable bit			
		1 = Channel 1 is enabled.			
	`	0 = Channel 1 is disabled.			

# 9.1.2.9 ADR2

31	30 29		0x8000.4020
ADR2	2		
Bits	Туре	Function	
31:0	R/W	Write: Start address of Channel 2 buffer (for external I/O device) Read: Current address of Channel 2 buffer	

# 9.1.2.10 TNR2

				0x8000.4024
	13	12		1 0
Reserved	TNR2			

0x8000.401C



Bits	Type	Function
13:0	R/W	Write: Size of Channel 2 buffer (in unit of transfer size, max. <b>16383</b> ) Read: Number of data in Channel 2 buffer which remain to be transferred (in unit of transfer size)

#### 9.1.2.11 CCR2

0x8000.4028

-	8	7 6	5	4	3	2	1	0
Reserved	ISA	BURST	TYPE	SIZE		MASK2	MODE2	DMEN2

Bits	Type	Function
8	R/W	External bus type 0: not ISA type (Default) 1: ISA type
7:6	R/W	Burst length 11: 32 beats 10: 16 beats 01: 8 beats 00: 4 beats
5	R/W	Transfer type 0: exception mode 1: burst mode
4:3	R/W	Transfer size 11: reserved 10: word 01: half word 00: byte
2	R/W	Transfer end interrupt mask bit of Channel 2
		1 = Interrupt request is generated when the DMA transfer of the whole buffer is completed.
		0 = No Interrupt request is generated when the DMA transfer of the whole buffer is completed.
1	R/W	Transfer direction
		0 = Transfer from SDRAM to external I/O
		1 = Transfer from external I/O to SDRAM
0	R/W	Channel 2 enable bit
		1 = Channel 2 is enabled.
		0 = Channel 2 is disabled.

<sup>\*</sup> Note: The burst mode must be used in the external bus type of ISA

#### 9.1.2.12 FLAGR

0x8000.4044

Rese	rved		FLAG2	FLAG1	FLAG01	FLAG00
Bits	Type	Function				
3	R/W	Interrupt flag of Channel 2 Set when the whole transfer of Channel 2 but If MASK2 (Bit 2 of CCR2) is set, there is an ir				
2	R/W	Interrupt flag of Channel 1				

Set when the whole transfer of Channel 1 buffer is completed.

If MASK1 (Bit 2 of CCR1) is set, there is an interrupt request.

1 R/W Interrupt flag of the first buffer of Channel 0
Set when the whole transfer of the first buffer of Channel 0 is completed.

If MASK01 (Bit 2 of CCR0) is set, there is an interrupt request.

0 R/W Interrupt flag of the second buffer of Channel 0

Set when the whole transfer of the second buffer of Channel 0 is completed. If MASK00 (Bit 1 of CCR0) is set, there is an interrupt request.

Note: Each flag bit is cleared by writing '1' to its bit position.

#### 9.1.2.13 DMAOR

0x8000.4054

-			2	1	0
Reserved					DMAEN
Bits	Туре	Function			
2:1	R/W	Defines the channel priorities in case of simultaneous transfer 11: ch0 > ch1 > ch2 10: ch2 > ch1 > ch0 01: ch1 > ch0 > ch2	requests f	or multiple	channels.

00: ch1 > ch2 > ch0 (initial value)



0	R/W	DMA operation enable bit
		1 = DMA operation is enabled.
		0 = DMA operation is disabled.
		A specific DMA channel is enabled when both of this bit and the corresponding channel
		enable bit (DMENx) are set.

#### 9.1.3 DMAC operation

For correct DMA operation, the DMA address register (ADRx or ASR), DMA buffer size register (TNRx), DMA channel control register (CCRx), and DMA operation register (DMAOR) must be set properly. Then the DMAC performs DMA data transfers as follows.

- The DMAC checks if the corresponding channel enable bit (DMENx, Bit 0 of CCRx) and the DMAEN (Bit 0 of DMAOR) are enabled.
- When there is a transfer request from internal or external I/O and the DMA transfer in the corresponding channel is enabled, the DMAC initiates DMA data transfers according to the bus size, transfer direction and bus mode.
- The DMAC ends data transfers and sets the corresponding interrupt flag (FLAGx of FLAGR) when the
  whole buffer is transferred (when the internal count value equals TNRx or TSR). If the interrupt mask bit of
  the channel is set (and the DMA interrupt is enabled in the interrupt controller), a DMA transfer end interrupt
  request is sent to the CPU core.

#### **DMA Channel Priority**

When the DMAC receives simultaneous DMA transfer requests, the channel with the higher priority is served first. The channel priorities are programmable in the DMAOR register.

#### **DMA** bus mode

#### Burst mode (for Channel 2)

Once the bus mastership is obtained, the transfer is performed continuously by the burst length (BURST, Bit 7 of CCR2) as long as nDMAREQ pin is driven high. Then the bus mastership is given to the CPU.

#### Exception mode (cycle-steal mode)

In the exception mode, the bus mastership is given to the CPU core whenever one transfer is completed

#### **DMA** transfer request

The DMA transfer request should be disabled by I/O device module.



#### 9.2 MMC/ SPI Controller

The SPI is a high-speed synchronous serial port. This chapter describes the SPI communication with a MMC device.

The communication between CP (master) and MMC is controlled by the CP. The data transmission starts when the CS (chip-select) goes LOW and ends when the CS goes HIGH.

SPI-MMC messages are built from command, response and data-block tokens. Every command, response and data block is built with one byte (8-bit). Generally every MMC token transferred on the data signal is protected by CRC bits. But MMC offers also a non-protected mode that allows a system, built with reliable data links to exclude the hardware or firmware required for CRC generation and verification.

In the non-protected mode, the CRC bits of the command, response and data tokens are still required in the tokens; they are, however, defined as "don't care" for the transmitters and are ignored by the receivers.

MMC is initialized in the non-protected mode. The CP can turn this option on and off using the CRCONOFF command (CMD39). We assume that CRC is processed by software.

## 9.2.1 External Signals

Pin Name	Type	Description	
SSDO	0	MMC card controller data output	
SSDI	I	MMC card controller data input	
SSCLK	0	MMC card controller clock output	
nSSCS	0	MMC card controller chip select	

## 9.2.2 Registers (SPI Mode)

Address	Name	Width Default	Description	
0x8001.5000	SPICR	0x20	SPI control register	
0x8001.5004	SPISR	0x0	SPI status register	
0x8001.5008	XCHCNT	0x0	Number of exchange data	
0x8001.500C	TXBUFF	0x0	TX data buffer (8*8 bits)	
0x8001.5010	RXBUFF	0x0	RX data buffer (8*8 bits)	
0x8001.5014	TestReg1	0x0	Test register 1	
0x8001.5018	TestReg2	0x0	Test register 2	
0x8001.501C	ResetReg	0x0	SPI reset register	
0x8001.5024	TicReg	0x0	Tic register	

**Table 9-3 SPIMMC Controller Register Summary** 

## 9.2.2.1 SPIMMC Control Register (SPICR)

DataRate XCHMode TestMode LOOP SPIEN **Bits Function Type** 7 Reserved R/W This bit sets the baud rate (SPICLK) 0: SPICLK=BCLK/2 1: SPICLK=BCLK/4 5 R/W This bit is the Chip select signal. To communicate with external devices (MMC), CP asserts 0 0 = CP can exchange data with external device (MMC) 1 = CP cannot exchange data with external device (MMC) R/W This bit determines the direction of transfer 0 = CP have valid data to send to MMC (send mode) 1 = CP have valid data to receive from MMC (receive mode) R/W 0 = Normal operation 1 = the SPI-MMC block is in TIC mode. In this mode the Clock source is not BCLK/2 but TCLK that is made in the block.

0x8001.5000



2	R/W	0 = Normal operation							
		1 = The SPI-MMC block is in loopback mode							
		In the loopback mode the transmitter output is internally connected to the receiver input.							
		MISO is internally connected to MOSI.							
1	R/W	0 = SPI master disable (reduce power consumption)							
		1 = SPI master enable							
		The SPI must be enabled before initiating an exchange and should be disabled after the							
		exchange is complete to reduce the power consumption.							
0	R/W	This bit triggers the state machine to generate clocks at the selected bit rate.							
		1 = Initiate exchange							
		0 = No exchange occurs							

## 9.2.2.2 SPIMMC Status Register (SPISR)

7 6 5

0x8001.5004

TXET		XCHDONE RXFULL
Bits	Type	Function
7	R	When the TX data buffer is empty this bit is set and a serial peripheral interrupt is generated. The bit is reset by reading the SPISR.
6	R	When the exchange is completed between CP and MMC this bit is set and a serial peripheral interrupt is generated. The bit is reset by reading the SPISR.
5	R	When the RX data buffer is full this bit is set and a serial peripheral interrupt is generated. The bit is reset by reading the SPISR.
4:0	-	Reserved

## 9.2.2.3 SPIMMC XCH Counter Register (XCHCNT)

9 8 7 6 5 4

0x8001.5008

•			•		_	•	_	
XCH	COUNTE	R						
Bits	Type	Function						
9:0	R/W	Number of by	tes to be	exchanged b	etween CF	and SPI		

# 9.2.2.4 SPIMMC TX Data Buffer Register (TXBUFF)

0x8001.500C

This 8-bit register is the entry point of the TX FIFO. When CP writes an 8-bit data to this register, the SPI-MMC block shifts the content of the TX FIFO and appends the new data to the FIFO.

7	(	6	5	4	3	2	1	0			
TX FI	TX FIFO ENTRY POINT										
Bits	Type	Function									
7:0	W	TX FIFO's	Entry Point	·	·			-			

## 9.2.2.5 SPIMMC RX Data Buffer Register (RXBUFF)

0x8001.5010

This register is the access point of the RX FIFO. When CP reads one data item from this register, the SPI-MMC block shifts the RX FIFO so that the next data item becomes available at this location.

7	6	3	5	4	3	2	1	0	
RX FI	FO ACCE	SS POINT							
Bits	Туре	Function	l						



## 9.2.2.6 SPIMMC Reset Register (ResetReg)

0x8001.501C

RESET

Bits	Type	Function
7:1	-	Reserved
7:0	R/W	When CP writes 0 to this location, all registers and counters of the SPI-MMC block are cleared.

## **9.2.3** *Timings*

All timing diagrams use the following schematics and abbreviations.

Name	Description	Name	Description
Н	Signal is HIGH (logic 1)	Busy	Busy token
L	Signal is LOW (logic 0)	Command	Command token
Χ	Don't care	Response	Response token
Z	High Impedance State	DataBlk	Data token
*	Repeater		

All timing values are defined as outlined below.

#### Command/Response

Host command to card response: card is ready

CS	H H L L L *****************************	L L H H H
	$\leftarrow$ N <sub>CS</sub> $\rightarrow$	
MOSI	H H H H H 6 Bytes Command H H H H H ************** H H	1 H H X X X
	$\leftarrow$ N <sub>CR</sub> $\rightarrow$	
MISO	Z Z Z H H H H H *********** H H H H Response H H	H H H Z Z

Host command to card response: card is busy

CS	H H L L L *****************************	L	L	L	L	Н	Н	Н
	$\leftarrow$ N <sub>CS</sub> $\rightarrow$							
MOSI	H H H H H 6 Bytes Command H H H H H ***************************	Н	Н	Η	Τ	Х	Χ	Х
	$\leftarrow N_{CR} \rightarrow$	_						
MISO	ZZZHHHHHX******************************	t	Bus	sy	Н	Н	Ζ	Ζ

Card response to host command:

CS	L	L	L	L	L	***	******	*****	****	***	****	***	***	*****			L	L	Н	Н	Н
MOSI	Н	Н	Η	Н	Τ	Н	*****		Н	Н	Н	Н	Н	6 Bytes Command	Н	Н	Η	Н	Χ	Х	Χ
									<b>+</b>	N <sub>RC</sub>	; <del></del>										
MISO	Н	Н	Н	Н	Н	Re	esponse	Н	Н	Н	Н	Н	***	*****	Н	Н	Н	Н	Н	Ζ	Z

#### Data read

CS	Н	Н	L	L	L	**:	********	****	***	****	****	****	******	*****					L	L	Н	НН
			+	-N <sub>CS</sub>	$\rightarrow$																	
MOSI	Н	Н	Н	Н	Н	Н	Read Command	Н	Н	Н	Н	Н	******	*****			Н	Н	Н	Н	Х	XX
								<b>←</b>	-N <sub>C</sub>	$R \rightarrow$				$\leftarrow$ N <sub>AC</sub> $\rightarrow$								
MISO	Ζ	Ζ	Ζ	Н	Н	Н	Н	Н	Н	Н	Н	Re	esponse	н н н	Н	DataBlk	Н	Н	Н	Н	Н	ZZ



#### Data write

CS	НН	L L	. L	***	******	****	***	****	****	***	*****	****	*							L	Н	Н	Н
		←No	$_{\mathbb{S}} \rightarrow$									<b>←</b>	N <sub>WR</sub> -	<b>→</b>									
MOSI	н н	Н	Н	Н	Write Command	Н	Н	Н	Н	Н	*****					DataBl	lk	Н	******		Х	Χ	Х
						<b>←</b> I	V <sub>CR</sub>	$\rightarrow$															
MISO	ZZ	Ζŀ	Н	Н	Н	Н	Н	Н	Н	Re	sponse	Н	Н	Н	Н	* H	1	Н	Data Resp.	Busy	Н	Ζ	Z

#### Timing constants definitions

Name	Minimum	Maximum	Unit
N <sub>CS</sub>	0	-	8 Clock Cycles
$N_{CR}$	1	2	8 Clock Cycles
N <sub>RC</sub>	1	-	8 Clock Cycles
$N_{AC}$	1	-	8 Clock Cycles
$N_{WR}$	1	-	8 Clock Cycles

## 9.2.4 SPI Operation for MMC

After CP writes a sequence of data to the TX FIFO, the content of the FIFO is loaded into the TX shift register and shifted out serially one byte at a time. When all elements in the TX FIFO are transferred to the TX shift register, the SPI-MMC issues an interrupt to CP, which may fill the TX FIFO for further data transfer.

Serial input data is shifted into the RX shift register. After 8 bits are shifted in, the content of the RX shift register is copied into the RX FIFO. When the RX FIFO is full, the SPI-MMC issues an interrupt to CP through the SPIIRQ signal. CP reads the content of the RX FIFO in an interrupt service routine.

The timing and control block produces all necessary control signals of the SPI-MMC block including SPICLK. The frequency of SPICLK signal is programmable.

SPI-MMC transfer's protocol is command and response. Whenever CP sends a command to MMC (via SPI), MMC sends CP (via SPI) a response. The length of the response depends on the command – e.g. there are 1-, 6-, and 17-byte responses. There is only 6 bytes in command.

Consider the sequence of operations that occur in a read transfer.

- 1. CP sends a reset signal to the SPI-MMC block. In other word, CP writes "0" to bit in the ResetReg register. The signal is used to clear counters inside the block. Before new exchange begins and the content of XCHCOUNTER is changed, and transmit mode is changed (XCHMODE BIT in the SPICR), CP must send a reset signal to the SPI-MMC block.
- 2. First, CP set up the SPICR register. In this example, XCHMODE is send mode.
- 3. CP writes number to send into XCHCOUNTER register.
- 4. CP writes "Data read command (CMD17)" into the TX FIFO.
- 5. CP asserts CS signal. In other words, CP write 0 to CS bit in the SPICR.
- 6. CP sends a start signal to SPI-MMC. In other word, CP set XCH bit in the SPICR.
- 7. The SPI-MMC block sends out 6 bytes of command data from TX FIFO through TX shift register.
- 8. The SPI-MMC block issues the interrupt after it send all data in TX FIFO.
- 9. The CP reads the SPISR register in The SPI-MMC block and disable start signal (reset XCH bit). In other words, CP writes the SPICR register.
- 10. CP sends a reset signal to the SPI-MMC block. In other word, CP writes 0 to bit in the ResetReg register. The signal is used to clear counters inside the block. Before new exchange begins and the content of XCHCOUNTER is changed, and transmit mode is changed (XCHMODE BIT in the SPICR), CP must send a reset signal to the SPI-MMC block.
- 11. CP changes transmit mode (XCHMODE is receive mode).
- 12. The CP writes number to be received into XCHCOUNTER register.
- 13. CP sends a start signal to SPI-MMC (set XCH bit).
- 14. Then SPI-MMC controller receives response from MMC.
- 15. After SPI-MMC receives 1 byte (for CMD17 command), it sets XCH DONE status bits and it issues an interrupt to a CP.
- 16. The CP reads the SPISR register in the SPI-MMC block and disable start signal (reset XCH bit). In other words, CP writes the SPICR register.
- 17. The CP reads data RX FIFO.



- 18. After CP takes this response data and examine it, CP act as response data. If there is no error indication in response, CP informs SPI-MMC block that MMC sends data to it.
- 19. CP sends a reset signal to the SPI-MMC block. In other words, CP writes 0 to bit in the Reset register. The signal is used to clear counters inside the block. Before new exchange begins and the content of XCHCOUNTER is changed, and transmit mode is changed (XCHMODE BIT in the SPICR), CP must send a reset signal to the SPI-MMC block.
- 20. The CP writes number to be received into XCHCOUNTER register.
- 21. CP sends a start signal to SPI-MMC (set XCH bit).
- 22. The SPI-MMC block receives data from MMC (for example, data length is from 4 byte to 515 byte).
- 23. If SPI-MMC receives data like RX FIFO size, SPI-MMC block sets the "RX FIFO full" status bit and issues an interrupt to CP. At this time SPICLK disable start signal for prevention of RX FIFO overrun. If CP takes all data in RX FIFO, CP sends a start signal and receives response to remain. Repeat it.
- 24. After SPI-MMC block receive all data from MMC, it sets the XCH DONE status bit and issues an interrupt to CP.
- 25. The CP reads the SPISR register in the SPI-MMC block and disable start signal (reset XCH bit). In other words, CP writes the SPICR register.
- 26. After CP takes last data from RX FIFO, CP de-asserts CS signal.

#### 9.2.5 Multimedia Card Host Controller

This document will describe the basic operation about the MMC Host controller for the ARM7202. This controller operates in MMC mode to communicate with Multimedia Card.

#### 9.2.6 Registers

The MMC host controller has 12 registers. Following table shows the register map and its reset value.

Address	Name	Width	Default	Description
0x8001.5040	mmcModeReg	9		MMC Mode Register
0x8001.5044	mmcOperationReg	9		MMC Operation Register
0x8001.5048	mmcStatusReg	15		MMC Status Register
0x8001.504C	mmcIntrEnReg	7		MMC interrupt Enable Register
0x8001.5050	mmcBlockSizeReg	11		MMC Block Size Register
0x8001.5054	mmcBlockNumberReg	16		MMC Block Number Register
0x8001.5058	mmcTimePeriodReg	24		MMC Time Period Register
0x8001.505C	mmcCMDBufferReg	6		MMC Command Buffer Register
0x8001.5060	mmcARGBufferReg	32		MMC ARG Buffer Register
0x8001.5064	mmcRESPBufferReg	32		MMC RESP Buffer Register
0x8001.5068	mmcDATABufferReg	32		MMC Data Buffer Register
0x8001.507C	mmcReadyTimeoutReg	24		MMC Ready Timeout Register

**Table 9-4 MMC Host Controller Register Summary** 

## 9.2.6.1 MMC Mode Register

0x8001.5040

Int	rReq	DmaReq	SoftReset	ClkRate	DmaEn	Reserved	Enable
Bits	Туре	Function					
8	R	Interrupt Requ	iest Signal.				
7	R	DMA Request	Signal.				
6	R/W	Software Res	et.				
5:3	R/W	Clock Rate Di	visor Value. BC	LK is 50MHz.			
		0 for 25MH	ed will be one o Iz (1/2 BCLK) IHz (1/4 BCLK)		ccording to diviso	or value.	

2 for 6.25MHz (1/8 BCLK) 3 for 3.125MHz (1/16 BCLK)



		4 for 1.5625MHz (1/32 BCLK)
		5 for 0.78125MHz (1/64 BCLK)
		6 for 0.390625MHz (1/128 BCLK)
		7 for 0.1953125MHz (1/256 BCLK)
2	R/W	DMA Enable.
1	-	Reserved
0	R/W	MMC Enable.

#### Table 9-5 MMC Mode Register

MMC Controller can be reset by the two methods. First is the system reset. In this case, most registers are initialized to the default value. But two registers (response FIFO and data FIFO) are not initialized. Second is the software reset. It is accomplished by writing the 7th bit of MMC mode control register with 1. Its effect is same with the first. Following table shows the MMC mode control register.

This controller sends the DMA request signal in two cases (Rx & Tx). And if you want to use DMA, you must set the DmaEn bit of MMC Mode register. For Rx, when the number of data in the FIFO is more then zero, it generates the request signal. For Tx, when the number of data in the FIFO are less then eight, it generate the request signal.

Operation frequency can be controlled by setting the ClkRate bit of MMC Mode register. Divisor controls the rate of MMC clock (MMCCLK). Assume that BCLK has 50MHz frequency.

#### 9.2.6.2 MMC Operation Register

								0x8001.5044				
8		7	6	6 5		2	1	0				
BusyCheck		StreamEn	WriteEn	DataEn	RespFormat	Initialization	ClkEn	StartEn				
Bits	Type	Function										
8	R/W	Current cor	nmand needs	the busy che	eck after comman	nd operation.						
7	R/W	Define stream	am mode( 1 =	stream mod	e, 0 = block mod	e )						
6	R/W	1 = write, 0	= read. defa	ult is read								
5	R/W	Indicate tha	it current com	mand contain	ns the data opera	ation						
4:3	R/W	Response f	ormat (No res	ponse, R1, F	R2, and R3)							
		0 for No res	sponse									
		1 for format R1										
		2 for format	2 for format R2									
		3 for format	: R3									
2	R/W	Add the 128	3 clocks before	e sending the	e command							
1	R/W	Enable the	clock									
0	R/W/C	Start the mi	nc operation		•							

#### **Table 9-6 MMC Operation Register**

All Multimedia Cards require at least 74 clock cycles prior to starting bus communication. and the clock frequency must be less then the Open-Drain frequency(F\_od=0.5Mhz). Therefore the host controller must do these during power-on.

For generating 74 clock cycles, set initialization bit of MMC Operation register. If initialization bit is set, then the controller will send additional 128 clocks before send start bit. Although this bit is zero, the controller sends 16 clocks before the start bit for safe operation. And add 8 clocks after the stop bit.

MMC has the four types of the response (No response, R1, R2, and R3). And each format is similar to the command format. But you need not know what they shape. You just only need to know the length of response to be stored after the response end. R1 and R3 have one word. And R2 has four words. Its contents are different according to the each command. You must analysis this content according to the each command after operation. And the response format can be specified by the RespFormat bits of the operation control register.

## 9.2.6.3 MMC Status Register

							0x8001.504
	14	13	12	11	10	9	8
	Detected_n	DetIntr	ReadyTimeout	RespCrcErr	DataCrcErr	RespTimeout	DataTimeout
7	6	5	4	3	2	1	0



Card	Busy	ataOperEnd DataTransEnd CmdRespEnd ClkOnv RxFifoFull TxFifoEmpty RxFifoRea	ady
Bits	Type	Function	
14	R	card detection status	
13	R/WC	card detection interrupt	
12	R/WC	ready timeout error status	
11	R/WC	response data CRC error	
10	R/WC	Rx or Tx data CRC error	
9	R/WC	response timeout error	
8	R/WC	data timeout error	
7	R	card busy status	
6	R/WC	MMC operation status	
5	R/WC	data transfer status for Rx and Tx	
4	R/WC	command response end status	
3	R	clock status	
2	R	Rx FIFO is full	
1	R	Tx FIFO is empty	
0	R	Rx FIFO contains more than the one word	

#### **Table 9-7 MMC Status Register**

WC: To clear these bit, you need to write any dummy value to these register.

## 9.2.6.4 MMC Interrupt Enable Register

0x8001.504C mmcDetIntr crcErrIntr timeoutIntr OprEndIntr dataTranfEndIntr CmdRespEndIntr dataFifoIntr Bits Type Function 6 R/W Card detection interrupt (insertion, remove) This interrupt can be used to check the card insertion and removal 5 R/W CRC errors interrupt (response CRC error, data CRC error). This interrupt is generated in two cases (response CRC error, data CRC error). If CRC interrupt is generated, MMC host controller will stop the current operation. R/W Timeout interrupt (Response timeout, data timeout, and ready timeout). MMC host controller generates three types of timeout interrupt (response, data, and busy). These three timeout values are specified in MMC Time Period register and MMC Ready Timeout register. ISR can check the each timeout interrupt by reading MMC Status register. R/W Operation end interrupt. This interrupt is generated when all operation is finished. Before the start operation, you need to set MMC Operation register. This register contains information about the operation. If an operation does not need the response and data, this interrupt is generated after the end of command transfer. If an operation just needs response, it is generated when MMC host controller receives the response. If an operation needs the data operation, it is generated when MMC host controller finish all operation including busy checking. 2 R/W Data transfer end interrupt. This interrupt is generated when MMC Host controller receives or sends the data specified by MMC Block Size register and MMC Block Number register. In most case, Multimedia Card goes into the ready state to write internal buffer data into flash memory. So after data transfer, Multimedia Card can be ready state for some time. This interrupt can be used to inform the data transfer end without busy check. R/W Command response ends interrupt. This interrupt is generated when MMC Host controller finishes receiving of command response. For data read operation, because the response and data is transmitted currently, you can user this interrupt to check the data FIFO and the response FIFO independently. 0 R/W Data fifo interrupt (Rx fifo full, Tx fifo empty). This interrupt is generated in two cases (Rx FIFO full, Tx FIFO empty). You can use this interrupt to check the FIFO status during the read and write operation. And by reading the status register, you can know which interrupt is taken.

Table 9-8 MMC Interrupt Enable Register




MMC Host controller has the seven interrupt sources (Rx/Tx Fifo interrupt, command response interrupt, data transfer end interrupt, MMC operation interrupt, timeout interrupt, CRC error interrupt and MMC detection interrupt). Setting the each interrupt enable bit of MMC Interrupt Enable register can enable each interrupt.

We can consider the card detection in the two cases.

Firstly, In case that MMC Host controller is not enabled, clock is not supplied into the controller. So the detection logic can operate without the clock. To detect the MMC without clock, the detection signal is passed into the interrupt request directly. If the card detection interrupt is enabled, interrupt signal will be passed into the interrupt controller. Secondly, If MMC host controller is enabled; it means the detection logic now operates with clock. In this case, MMC Host controller detects both card insertion and card removal. When this interrupt is generated, you can detect if current interrupt is the card insertion or removal by reading the Detected\_n bit of MMC Status register. If the value is zero, it indicates card insertion. If not, it notifies card removal.

#### 9.2.6.5 MMC Block Size Register

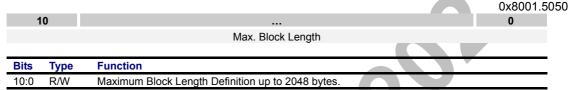

**Table 9-9 MMC Block Size Register** 

## 9.2.6.6 MMC Block Number Register

		0x8001.5054
15		0
	Max. Number of Block	
Bits Type	Function	
15:0 R/W	Maximum Number of Block Transfer Definition up to 64K blocks.	

Table 9-10 MMC Block Number Register

#### 9.2.6.7 MMC Time Period Register

					0x8001.5058
	23	16	15		0
		RespTimeout		DataTimeout	
Bits	Type	Function			
23:16	R/W	Response Timeout Period			
15:0	R/W	Data Timeout Period			

Table 9-11 MMC Time Period Register

## 9.2.6.8 MMC Command Buffer Register

.0.0 171	inc c	ommana Bujjer Regi		0x8001.505C
	5			0
			Command Buffer	
Bits	Type	Function		
5:0	R/W	Command Buffer		

## Table 9-12 MMC Command Buffer Register

# 9.2.6.9 MMC Argument Buffer Register

		gument Dayer Register		0x8001.5060
3	31			0
		Arg	gument Buffer	
Bits	Type	Function		
31:0	R/W	Argument Buffer		



#### Table 9-3-6-9 MMC Argument Buffer Register

#### 9.2.6.10 MMC Response Buffer Register

31	7070	Ox8001.5064 O Response Buffer  Type Function RO Response Buffer	
Dite	T	Function	

Table 9-13 MMC Response Buffer Register

This controller has two FIFO, which are response and data FIFO. Each has 4-word depths and 8-word depths. And Both FIFOs are cleared at the start of the command. If there were some data before starting, incorrect data will be transmitted, so you have to confirm that the FIFO is empty to writing any value into the status register. There is no way to write the MMC Resp Buffer directly. This Register can be written only when the Response from MMC Card is received.


For data FIFO, it used two modes. If the current operation is read, it will be used the Rx FIFO, if not, the Tx FIFO.

#### 9.2.6.11 MMC Data Buffer Register

				0x8001.5068
3	31			0
			Data Buffer	
Bits	Type	Function		
31:0	R/W	Data Buffer		

Table 9-14 MMC Data Buffer Register

#### 9.2.6.12 MMC Ready Timeout Register

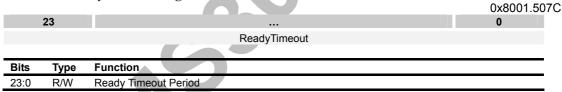

**Table 9-15 MMC Ready Timeout Register** 

## 9.2.7 Basic Operation in MMC Mode

MMC command format consists of six parts. Four parts (start bit, transmitter bit, CRC, and stop bit) are automatically generated by MMC Host controller. For remain two parts (command index, argument), you must inform the MMC Host controller by setting registers properly.

After power-on, all Multimedia Cards need at least 74 clock cycles prior to starting the operation. It can be achieved by setting the third bit (Initialization) of the MMC Operation register. If set, MMC Host controller sends 128 clock cycles prior to sending start bit.

In case of data operation, you need to define the type of operation.

For example, at the case of block write, both DataEn and WriteEn are '1'. To enable stream read, both DataEn and StreamEn are '1' while WriteEn is '0'.

For some command, it needs the busy check after the command end. In this case, busy check bit of MMC Operation register is must be set (For more details, refer to "Multimedia Card Product Manual").

Finally, to initiate operation, write '1' to StartEn and ClkEn. Then MMC Host controller starts to send command to Multimedia Cards. And StartEn bit is cleared automatically when the MMC Host controller finishes current operation. ClkEn bit makes MMC clock to be enabled. In this case, the MMC clock (MMCCLK) is generated during the operation. If this bit is zero, clock to operate control block is not generated.



You can check the end of response or operation from MMC Status register. This register also contains lots of useful information about what MMC Host controller is doing.

If the current operation does not contain data operation, you just need to poll CmdRespEnd or DataOperEnd bit. But if not, you need to have another step prior to starting. If current command requires multiple block operation, you must inform the block length and the number of block to be transferred to MMC Host controller. These controllers (mmcBlockSizeReg, mmcBlockNumberReg) can specify up to 2048 bytes for the length of block, and 64K blocks for the number of block.

Following shows the procedure for the write and read operation.

#### 9.2.7.1 Write Operation

MMC Host controller starts the sending of data at the end of response end. And if the controller does not receive response during a specified period, it will generate response timeout error. Anyway, after the response end, if Tx FIFO is not ready (FIFO is empty), waits until the data is ready. The data transfer can be done by the three methods (polling, interrupt, and DMA (Direct Memory Access)). Polling method checks the Tx FIFO empty bit of the status register and if it is empty, you can write less than the eight word. And again wait until Tx FIFO is empty. Repeat this procedure until the operation end bit is set. Interrupt method uses the Tx FIFO empty interrupt. For every interrupt, you can write the eight words. And exit the ISR (Interrupt Service Routine). And then wait for the next interrupt. DMA method uses not ARM720T core but the DMA controller, so you must program the DMA controller before start operation. MMC Host controller must set the DmaEn bit of MMC Mode register. DMA request signal is generated whenever the number of data in Tx FIFO is less then equal to seven.

#### 9.2.7.2 Read Operation

Multimedia Card can send both response and data currently after receiving the command from the host controller. So, MMC Host controller waits the response and data at the same time. Therefore, you must check response and data concurrently. Or you can use the response end interrupt. But in most case, after the response end, you can start read data from the Rx FIFO. This is reason why the Rx FIFO sizes with the eight words (32\*8 cycles), so to fill it, the controller needs the 256 cycles. The data transfer also can be done by the three methods like the write operation. Polling method checks the Rx FIFO ready bit of the status register. This bit is activated when Rx FIFO has more than two word data. So you just read two times when you check this bit is set. Interrupt method uses the Rx FIFO full interrupt. Because the Rx FIFO has eight word depths, whenever interrupt is called, ISR reads the eight words form the Rx FIFO. In the case of the Rx FIFO full, you don't worry about it because the MMC Host controller stops the output clock not to loss on the bus. In DMA mode, the DMA request is generated when the Rx FIFO has one more words.

\* Note: Errata sheet (version 1.0) includes contents of the lower subject [Subject] A way for using both MMC and SPI mode on a system board



#### 9.3 SMC Controller

This SmartMedia™ Card Controller is an Advanced Microcontroller Bus Architecture (AMBA) compliant System-on-a-Chip peripheral providing an interface to industry-standard SmartMedia™ Flash Memory Card. A channel has 8 control signal outputs and 8 bits of bi-directional data ports.

#### **FEATURES**

- One 3.3V SmartMedia support
- 4MB to 128MB media (both Flash and Mask ROM type)
- Interrupt mode support when erase/write operation is finished
- Unique ID SmartMedia support
- Multi-page DMA access
- Marginal timing operation settable.

## 9.3.1 External Signals

Pin Name	Type	Description
SMD [7:0]	I/O	Smart Media Card (SSFDC) 8bit data signals
nSMWP	0	Smart Media Card (SSFDC) write protect
nSMWE	0	Smart Media Card (SSFDC) write enable
SMALE	0	Smart Media Card (SSFDC) address latch enable
SMCLE	0	Smart Media Card (SSFDC) command latch enable
nSMCD	I	Smart Media Card (SSFDC) card detection signal
nSMCE	0	Smart Media Card (SSFDC) chip enable
nSMRE	0	Smart Media Card (SSFDC) read enable
nSMRB	I	Smart Media Card (SSFDC) READY/nBUSY signal. This is open-drain output so
		it requires a pull-up resistor.

#### 9.3.2 Registers

Address	Name	Width	Default	Description
0x8001.6000	SMCCMD	32	0x0	SmartMedia Card Command register
0x8001.6004	SMCADR	27	0x0	SmartMedia Card Address register
0x8001.6008	SMCDATW	32	0x0	Data written to SmartMedia Card
0x8001.600C	SMCDATR	32	0x0	Data received from SmartMedia Card
0x8001.6010	SMCCONF	8	0x0	SmartMedia Card controller configuration register
0x8001.6014	SMCTIME	20	0x0	Timing parameter register
0x8001.601C	SMCSTAT	32	0x0	SmartMedia Card controller status register

Table 9-16 SmartMedia Controller Register Summary

## 9.3.2.1 SMC Command Register (SMCCMD)

0x8001.6000

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Hidden Command 0							Hidden Command 1								
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Main Command								Second Command							

Bits	Type	Function
3124	R/W	Hidden Command 0. This Unique ID feature will be available to 128Mb NAND Flash and upward density products to prevent illegal copy of music files. Unique ID is put into redundant block of SmartMedia. Use this hidden command to access redundant block that cannot be accessed with open command, This byte filed is ignored when user block is accessed. For more information, refer to SmartMedia Maker's datasheet.
23:16	R/W	Hidden Command 1. Read ID command returns whether the SmartMedia card supports unique ID or not. Hidden 2 step command for Samsung is 30h-65h and for Toshiba is 5Ah-



B5h. To return back to user block after accessing redundant block area, Reset command (FFh) should be carried out.

15:8 R/W

There are 9 commands to operate SmartMedia card. This controller supports only parts of them (bold type). Set 1<sup>ST</sup> command into this byte field except writing to SmartMedia. For write operation, set this byte field to Serial Data Input (80h) and set Second Command byte field to Page Program (10h).

Function	1 <sup>ST</sup> cycle 2 <sup>ND</sup> cycle	Function	1 <sup>ST</sup> cycle	2 <sup>ND</sup> cycle		
Serial Data Input	80h	Page Program		10h		
Read 0	00h	Block Erase	60h	D0h		
Read 1	01h	Status Read	70h			
Read 2	50h	ID Read	90h	90h		
Reset	FFh					

7:0 R/W Set 2<sup>ND</sup> command here

#### 9.3.2.2 SMC Address Register (SMCADR)

SMCADR15 ~ SMCADR0

# Bits Type Function 26:0 R/W SMC Add

SMC Address. SMC controller begins to operate after writing an address to SMCADR. Hence a valid command must be set to SMCCMD before writing to SMCADR. However, reset and status read commands activate SMC controller after writing to SMCCMD because they do not require an address.

Following table shows valid address range according to SmartMedia card size.

#### Model Valid Page Address

4 MB SMCADR0 ~ SMCADR21 8 MB SMCADR0 ~ SMCADR22 16 MB SMCADR0 ~ SMCADR23 32 MB SMCADR0 ~ SMCADR24 64 MB SMCADR0 ~ SMCADR25 128 MB SMCADR0 ~ SMCADR26

## 9.3.2.3 SMC Data Write Register (SMCDATW)

Bits	Type	Function
31:0	R/W	Four byte data written to this register will be sent to SmartMedia. SMC controller receives a 32bit data from host controller or DMA controller. Then It starts to transmit from least significant byte to most significant byte, one byte at a time. This SMC controller writes a whole page at a single write transaction, so it requires 132 times consecutive writing (528 = 512+16 bytes). A page program process is as follows:
		1. Set SMCCMD to xxxx8010h (Sequential Data Input + Page Program), SMCADR to desired target page address space, and then write first 4 byte data onto SMCDATW. If DMA mode enabled, DMA interrupt will be repeated until it writes 528 byte data to SmartMedia. In normal mode, interrupt will be generated every 4 bytes write.  2. At the end of sequential data input, SmartMedia goes into page program mode by
		transmitting the second command to SmartMedia. Usually page program takes long time, no polling status register is recommended. SMC controller automatically generates write finish



interrupt when SmartMedia comes back to ready mode.

# 9.3.2.4 SMC Data Read Register (SMCDATR)

n	X	R	N	n	11	ш	ล	N	N	C
u	^	u	v	v	'		v	v	v	${}^{\circ}$

														•	
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
N * (SMCADR + 3)'s Byte Data								N * (SMCADR + 2)'s Byte Data							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
N * (	N * (SMCADR + 1)'s Byte Data									N * SMCADR's Byte Data					

Bits	Type	Function
31:0	R	Four byte data read from SmartMedia is stored in this register. SMC controller receives a byte data from SmartMedia and stores it into 4 byte internal buffer to create 32bit data. First read byte data is stored at least significant byte and fourth byte data is stored at most significant byte of buffer. Host controller or DMA controller read this register to get 4 byte data at a time. This SMC controller reads a whole page at a single read transaction, so it requires 132 times consecutive reading. A page reading process is as follows:  1. Set SMCCMD to xxxx00yyh (xxxx can be unique ID if redundant area accessed, yy is don't care. Only 00h command is valid. No 01h or 50h command supported) and then set SMCADR to target page address.  2. SMC controller will access SmartMedia with given command and address.  3. Interrupt (or DMA interrupt according to interrupt mode setting) will be generated after first four byte read. Like writing process, reading process reads a whole 528 byte in a page at a single transaction, so interrupt will be 132 times.  Against to write operation, there is no read finish interrupt because we can count the number
		of read transfers in software or can get the total access word size from BYTE COUNT of SMCSTAT.

# 9.3.2.5 SMC Configuration Register (SMCCONF)

0x8001.6010

31	6	5	4	3	2	1	0
POWER ENABLE	SAFE MARGIN	SMC ENABLE	CONT PAGE EN	INTR EN	DMA EN	UNIQUE ID EN	BIG CARD ENABLE

Bits	Type	Function
31	R/W	Power on bit. To activate SMC controller, set this bit. Reset will fall the controller into the deep sleep mode.
30:7	-	Reserved. Keep these bits to zero.
6	R/W	Safe margin enable bit. In normal mode, chip select signal changes simultaneously with read enable and write enable signals. But when this bit set, the duration of read and write enable signal applied to SmartMedia is reduced by 1 automatically. By enabling this, the rising edge of read and write enable signal will be earlier than the rising edge of chip enable, which
		guarantees latching data safely.
5	R/W	SMC controller enable bit. Reset this bit will make SMC controller stay in standby mode. No interrupt generated, no action occurred.
4	R/W	Continuous page read enable. If this bit set, then multi-page can be accessed in a single command and address setting. Usually DMA controller accesses multiple pages with a start address and a predefined size. Setting DMA access size in SMCTIME and enabling this bit will automatically read or write SmartMedia with DMA mode.
3	R/W	Interrupt enable. After reading a word or before writing a word, the interrupt bit of SMCSTAT will be set and interrupt will occur if INTR EN is enabled. If this bit is disabled, software must poll the interrupt flag of SMCSTAT to know the occurrence of an interrupt. After writing a whole page (or pages when CONT PAGE EN is enabled) to SmartMedia, write finish interrupt will also be generated to notice that the SmartMedia complete the write operation successfully.
2	R/W	DMA enable. If set, all interrupt during read or write data will be sent to DMA controller. However, write finish interrupt is a still normal interrupt. To minimize CPU burden and to maximize BUS utilization, enabling both interrupt and DMA mode together is recommended.
1	R/W	Redundant page enable. When use SmartMedia with unique ID and want to access redundant page area, set high. This bit cannot be cleared automatically, so in order to read



		open page area clear this bit and set a reset command to SMCCMD.
0	R/W	Larger than 32MB SmartMedia support enable. When using 64MB or 128MB SmartMedia, set
		this bit high.

# 9.3.2.6 SMC Timing Parameter Register (SMCTIME)

0x8001.6014

31 30	29	28	27	26	25	24		22	21	20	19	18	17	16
DMA SIZE	WAIT COUNTER					BYTE COUNTER								
					9	8						2	1	0
					HIGH COUN							LOW	COUNT	ΓER

Dito	Time	Eurotion
Bits	Type	Function
31:28	R/W	Multi-page DMA size bit. Maximum 15 pages are accessible at a time.
		0000 = not defined.
		0001 = 1 page
		0010 = 2 pages
		1111 = 15 pages
27:24	R/W	Wait counter maximum limit value. Waiting time delay between address latch and write data in
		page program mode or between address latch and read data in read ID mode and read status
		register is determined by this register.
		0000 = 1 BCLK width
		0001 = 2 BCLK width
		1111 = 16 BCLK width
23	-	Reserved
22:16	R/W	Should set these bits as 0x7F to access full 512 bytes page at one access command (read or
		program).
15:10	-	Reserved
9:8	R/W	High pulse width value of read enable and write enable signal. The width must satisfy the AC
		characteristics of SmartMedia to guarantee correct transfer of data. With Safety Margin
		enable, width will be decreased by one.
		00 = 1 BCLK width (0 BCLK with safety margin enable. Don't make this case)
		01 = 2 BCLK width (1 BCLK with safety margin enable)
		10 = 3 BCLK width (2 BCLK with safety margin enable)
		11 = 4 BCLK width (3 BCLK with safety margin enable)
7:3	-	Reserved
2:0	R/W	Low pulse width value of read enable and write enable signal. The width must satisfy the AC
		characteristics of SmartMedia to guarantee correct transfer of data. With Safety Margin
		enable, width will be decreased by one.
		000 = 1 BCLK width (0 BCLK with safety margin enable, Don't make this case)
		001 = 2 BCLK width (1 BCLK with safety margin enable)
		111 = 8 BCLK width (7 BCLK with safety margin enable)
		· · · · · · · · · · · · · · · · · · ·

# 9.3.2.7 SMC Status Register (SMCSTAT)

0x8001.601C

31	30	29	28	27	26	25	24			
CD INTR	nSMCE	SMCLE	SMALE	nSMWE	nSMRE	nSMWP	SMR/B			
23	22	21	20	19	18	17	16			
CURRENT COMMAND/CARD DETECT NOTIFICATION										
15	14	13	12	11	10	9	8			
EXTRA AREA	BYTE COUNT									
7	6	5	4	3	2	1	0			



INTERNAL STATE DETECT IRQ DRQ BUSY	INTERNAL STATE	CARD DETECT	IRQ	DRQ	BUSY
------------------------------------	----------------	----------------	-----	-----	------

Bits	Type	Function
31	R	Card Detect Interrupt. When card inserted or removed, card detect interrupt will be generated.
		In the interrupt service routine, look at this bit to identify interrupt type.
30:24	R	Current status of output signals.
23:16	R	Current active command. If in card detect interrupt, this byte shows 0xCD.
15	R	Set when extra area of a page is accessed.
14:8	R	Current address of a page in word units.
7:4	R	Shows internal state machine's state.
3	R	Set when SMC enable and SMC card inserted. It will be zero when card removed.
2	R	Interrupt flag
1	R	DMA interrupt flag
0	R	Reset shows SMC is in idle mode. Set means SMC in working mode.



#### 9.4 Sound Interface

The Sound Control Unit (SCU) is an interface block to transfer sound data to external speakers.

The SCU is an interface block used to send data to the external speaker through the internal 8-bit DA converter. It can process 44.1/22.05/11.025/8KHz sampled 8-bit mono or 16-bit stereo sound data.

This unit has a 32-bit register to receive sound data from the CPU through DMA or interrupt mode. This unit requests the DMA or interrupt controller every 32-bit processing time, which depends on the sampling frequency. It has two separate signals for DAC that indicate the direction of data for the stereo sound. Either higher or lower byte of 16-bit stereo sound data can be played through the left or right speaker by programming the control register. During mono playback, this unit sends the same data for the left and right channels.

There are two test registers. Both these registers should be cleared during normal operation. TICCLK port is also assigned for production test only.

#### **Features**

- Sound playback
- Supports programmable sampling rate
- 32-bit internal data register for DMA
- Auto DMA request
- 8-bit resolution DAC control
- Supports non-overlapping left/right signal for DAC
- Supports test mode

#### 9.4.1 External Signals

Pin Name	Type	Description
ADACR	0	Sound DAC output for Right
ADACL	0	Sound DAC output for Left

#### 9.4.2 Registers

Address	Name	Width Default	Description
0x8001.3000	SCONT	8 0x0	Control register
0x8001.3004	SDADR	32 0x0	Data register

Table 9-17 Sound Controller Register Summary

#### 9.4.2.1 SCONT

Reserved

0x8001.3000

MONO DMA POR DAC RL

SAMP

Bits	Туре	Function
7	R/W	0 – stereo
		1 – mono
6*	R/W	DMA request masking bit
		0 - masking
		1 – unmasking
5	R/W	This bit should be cleared to minimize power consumption when not in use.
		0 - power down mode
		1 - normal mode
4	R/W	DAC operation enable/disable. During disabled, DAC is in power save mode.
		0 - DAC disable
		1 - DAC enable
3	R/W	When cleared, lower byte data goes to left speaker. (ADACL pin)
		0 - lower byte data goes to ADACL pin
		1 - lower byte data goes to ADACR pin
2:1	R/W	Programmable sampling rate



		00 - 11.025KHz	
		01 - 22.05KHz	
		10 - 44.1KHz	
		11 - 8KHz	
0*	R/W	0 Interrupt request masking bit	
		0 - masking	
		1 – unmasking	

**Note** Those bits marked with an asterisk should not be enabled simultaneously during normal operation. (The programmer can select only one--either Interrupt or DMA mode.)

## 9.4.2.2 SDADR

This register can be programmed after setting Bit 5 of the SCONT register.

					UX8	001	1.3004
31	30	29			1	0	
SDA	DR						
Bits	Ту	ре	Function				
32	R/	W	Sound Data This register receives data by DMA Controller or CPU. This unit processes the data followed by the higher 16-bit data. After the lower 16-bit is processed, this unit receive new data and sends a request signal to DMA Controller or CPU. In mond lower byte is processed first followed by the higher byte.	t is	rea	dy to	0



#### 9.5 USB Slave Interface

This section describes the implementation-specific options of USB protocol for a device controller. It is assumed that the user has knowledge of the USB standard. This USB Device Controller (USBD) is chapter 9 (of USB specification) compliant, and supports standard device requests issued by the host. The user should refer to the Universal Serial Bus Specification revision 1.1 for a full understanding of the USB protocol and its operation. (The USB specification 1.1 can be accessed via the World Wide Web at: <a href="http://www.usb.org">http://www.usb.org</a>). The USBD is a universal serial bus device controller (slave, not hub or host controller) which supports three endpoints and can operate half-duplex at a baud rate of 12 Mbps. Endpoint 0,by default is only used to communicate control transactions to configure the USBD after it is reset or physically connected to an active USB host or hub. Endpoint 0's responsibilities include connection, address assignment, endpoint configuration and bus numeration.

The connected host that can get a device descriptor stored in USBD's internal ROM via endpoint 0 configures the USBD. The USBD uses two separate 32 x 8 bit FIFO to buffer receiving and transmitting data to/from the host. The external pins dedicated to this interface are UVPO, UVP, UVMO, UVM, URCVIN, nUSBOE and USUSPEND. These signals should be connected to USB transceiver such as PDIUSBP11 provided by Philip Semiconductor. Refer to data sheet PDIUSBP11). The CPU can access the USBD using Interrupt controller, by setting the control register appropriately. This section also defines the interface of USBD and CPU.

\* Notice: Don't use this USB device function with a LS device (like a USB mouse) in a same HUB.

#### **FEATURES**

- Full universal serial bus specification 1.1 compliant.
- Receiver and Transceiver have 32 bytes FIFO individually (this supports maximum data packet size of bulk transfer).
- Internal automatic FIFO control logic. (According to FIFO status, the USBD generates Interrupt service request signals to the CPU)
- Supports high-speed USB transfer (12Mbps).
- There are two endpoint of transmitter and receiver respectively, totally three endpoints including endpoint 0 that has responsibility of the device configuration.
- CPU can access the internal USB configuration ROM storing the device descriptor for Hand-held PC (HPC) by setting the predefined control register bit.
- USB protocol and device enumeration is performed by internal state-machine in the USBD.
- The USBD only supports bulk transfer of 4-transfer type supported by USB for data transfer.
- Endpoint FIFO (Tx, Rx) has the control logic preventing FIFO overrun and under run error.

Note Product ID: 7210 Vendor ID: 05b4 \* can be modified

Reference document - Hms30c7210\_UsbDownLoad\_V1.3.2Guide\_with\_Errata.pdf [Location: http://www.hynix.com -SP-MCU-ARM Core Based-HMS30C7210 Reference Design Kit-Miscellany]



## 9.5.1 Block Diagram

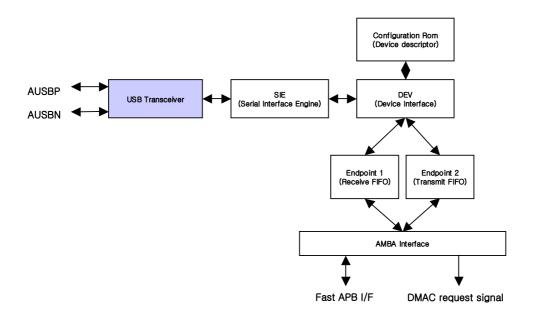


Figure 9-1 USB Block Diagram

The USB, Figure 9-2: USBD Block Diagram comprises the Serial Interface Engine (SIE) and Device Interface (DEV). The SIE connects to the USB through a bus transceiver, and performs NRZI conversion, bit un-stuffing, CRC checking, packet decoding and serial to parallel conversion of the incoming data stream. In outgoing data, it does the reverse, that is, parallel to serial of outgoing data stream and packetizing the data, CRC generation, bit stuffing and NRZI generation.

The DEV provides the interface between the SIE and the device's endpoint FIFO, ROM storing the device descriptor. The DEV handles the USB protocol, interpreting the incoming tokens and packets and collecting and sending the outgoing data packets and handshakes. The endpoints FIFO (RX, TX) give the information of their status (full/ empty) to the AMBA interface and AMBA I/F enable the CPU to access the FIFO's status register and the device descriptor stored in ROM. The AMBA interface generates a FIFO read/write strobe without FIFO's errors, based on APB signal timing. In case of data transmitting through TX FIFO (when USB generates an OUT token, AMBA I/F generates Interrupt to CPU), the user should set the transmitting enable bit in the control register. If the error of FIFO (Rx: overrun, TX: under-run) occurs, the AMBA I/F cannot generate FIFO read/ write.

## 9.5.2 Theory of Operation

The Hynix USB Core enables a designer to connect virtually any device requiring incoming or outgoing PC data to the Universal Serial Bus. As illustrated in Figure 9-2: USBD Block Diagram, the USB core comprises two parts, the SIE and DEV. The SIE connects to the Universal Serial Bus via a bus transceiver. The interface between the SIE and the DEV is a byte-oriented interface that exchanges various types of data packets between two blocks.

#### Serial Interface Engine

The SIE converts the bit-serial, NRZI encoded and bit-stuffed data stream of the USB into a byte and packet oriented data stream required by the DEV. As shown in Figure 9-3: Hynix Serial Interface Engine, it comprises seven blocks: Digital Phase Lock Loop, Input NRZI decode and bit-unstuff, Packet Decoder, Packet Encoder, Output bit stuff and NRZI encode, Counters, and the CRC Generation & Checking block. Each of the blocks is described in the following sections.



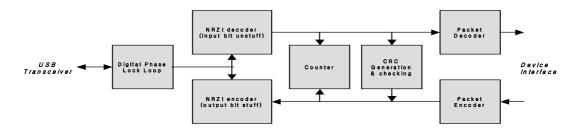


Figure 9-2 USB Serial Interface Engine

#### **Digital Phase Lock Loop**

The Digital Phase Lock Loop module takes the incoming data signals from the USB, synchronizes them to the 48MHz input clock, and then looks for USB data transitions.

Based on these transitions, the module creates a divide-by-4 clock called the usbclock. Data is then output from this module synchronous to the usbclock.

#### Input NRZI decode and bit-unstuff

The Input NRZI decodes and bit-unstuff module extracts the NRZI encoded data from the incoming USB data. Transitions on the input serial stream indicate a 0, while no transition indicates a 1. Six ones in a row cause the transmitter to insert a 0 to force a transition, therefore any detected zero bit that occurs after six ones is thrown out.

#### **Packet Decoder**

The Packet Decoder module receives incoming data bits and decodes them to detect packet information. It checks that the PID (Packet ID) is valid and was sent without error.

After decoding the PID, the remainder of the packet is split into the address, endpoint, and CRC5 fields, if present. The CRC Checker is notified to verify the data using the incoming CRC5 field. If the packet is a data packet, the data is collected into bytes and passed on with an associated valid bit. Table 9-6: Supported PID Types shows the PID Types that are decoded (marked as either Receive or Both). At the end of the packet, either the packetok or packetnotok signal is asserted. Packetnotok is asserted if any error condition arose (bad valid bit, bit-stuff, bad PID, wrong length of a field, CRC error, etc.).

PID Type	Value	Send/Receive	PID Type	Value	Send/Receive
OUT	4'b0001	Receive	DATA1	4'b1011	Both
IN	4'b1001	Receive	ACK	4'b0010	Both
SOF	4'b1101	Receive	NAK	4'b1010	Send
SETUP	4'b0000	Receive	STALL	4'b1110	Send
DATA0	4'b0011	Both	PRE	4'b1100	Receive

Table 9-18 USB Supported PID Types

#### Packet Encoder

The Packet Encoder creates outgoing packets based on signals from the DEV. Table 9-6: Supported PID Types shows the PID Types that can be encoded (marked as Send or Both). For each packet type, if the associated signal sends type is received from the DEV, the packet is created and sent. Upon completion of the packet, packettypesent is asserted to inform the DEV of the successful transmission. The Packet Encoder creates the outgoing PID, grabs the data from the DEV a byte at a time, signals the CRC Generator to create the CRC16 across the data field, and then sends the CRC16 data. The serial bits are sent to the Output bit stuff and NRZI encoder.

#### Output bit stuff and NRZI encoder

The Output bit stuff and NRZI encoder takes the outgoing serial stream from the Packet Encoder, inserts stuff bits (a zero is inserted after six consecutive ones), and then encodes the data using the NRZI encoding scheme (zeroes cause a transition, ones leave the output unchanged).



#### Counter block

The Counter block tracks the incoming data stream in order to detect the following conditions: reset, suspend, and turnaround. It also signals to the transmit logic (Output NRZI and bit stuff) when the bus is idle so transmission can begin.

#### **Generation and Checking block**

The Generation and Checking block checks incoming CRC5 and CRC16 data fields, and generates CRC16 across outgoing data fields. It uses the CRC polynomial and remainder specified in the USB Specification Version 1.1.

#### **Device Interface**

The DEV shown in Figure 9-4: Device Interface works at the packet and byte level to connect a number of endpoints to the SIE. It understands the USB protocol for incoming and outgoing packets, so it knows when to grab data and how to correctly respond to incoming packets. A large portion of the DEV is devoted to the setup, configuration, and control features of the USB. As shown in Figure 9-4: Device Interface the DEV is divided into three blocks: Device Controller, Device ROM, and Start of Frame. The three blocks are described in the following sections.

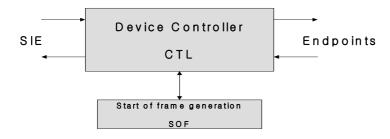


Figure 9-3 USB Device Interface Device Controller

#### **Device Controller**

The Device Controller contains a state machine that understands the USB protocol. The (SIE) provides the Device Controller with the type of packet, address value, endpoint value, and data stream for each incoming packet. The Device Controller then checks to see if the packet is targeted to the device by comparing the address/endpoint values with internal registers that were loaded with address and endpoint values during the USB enumeration process. Assuming the address/endpoint is a match, the Device Controller then interprets the packet. Data is passed on to the endpoint for all packets except SETUP packets, which are handled specially. Data toggle bits (DATA0 and DATA1 as defined by the USB spec) are maintained by the Device Controller. For IN data packets (device to host) the Device Controller sends either the maximum number of bytes in a packet or the number of bytes available from the endpoint. All packets are acknowledged as per the spec. For SETUP packets, the incoming data is extracted into the relevant internal fields, and then the appropriate action is carried out. Table 9-7: Supported Setup Requests lists the types of setup operations that are supported.

Setup Request	Value	Supported	Setup Request	Value	Supported
Get Status	0	Device, Interface, Endpoint	Get Configuration	8	Device
Clear Feature	1	Endpoints Only	Set Configuration	9	Device
Set Feature	3	Not supported	Get Interface	10	Not supported
Set Address	5	Device	Set Interface	11	Not supported
Get Descriptor	6	Device	Synch Frame	12	Not supported
Set Descriptor	7	Not supported			

Table 9-19 USB Supported Setup Requests

#### Start of Frame

The Start of Frame logic generates a pulse whenever either the incoming Start of Frame (SOF) packet arrives or approximately 1 ms after it the last one arrived. This allows an isochronous endpoint to stay in sync even if the SOF packet has been garbled.



## 9.5.3 Endpoint FIFOs (Rx, Tx)

Each endpoint FIFO has the specific number of FIFO depth according to data transfer rate. In case of maximum packet size for bulk transfer is 32 bytes that is supported in USBD. Each FIFO generates data ready signals (means FIFO not full or FIFO not empty) to AMBA IF. It contains the control logic for transferring 4 bytes at a read/write strobe generated by AMBA to obtain better efficiency of AMBA bus.

## 9.5.4 External Signals

Pin Name	Type	Description
USBP	I/O	USB transceiver signal for P+
USBN	I/O	USB transceiver signal for N+

## 9.5.5 Registers

Address	Name	Width	Default	Description
0x8005.1000	GCTRL	4	0x0	USB Global Configuration Register
0x8005.1004	EPCTRL	21	0x0	Endpoint Control Register
0x8005.1008	INTMASK	10	0x3ff	Interrupt Mask Register
0x8005.100C	INTSTAT	20	0x0	Interrupt Status Register
0x8005.1010	PWR	4	0x0	Power Control Register
0x8005.1018	DEVID	32	0x721005b4	Device ID Register
0x8005.101C	DEVCLASS	32	0xffffff	Device Class Register
0x8005.1020	INTCLASS	32	0xffffff	Interface Class Register
0x8005.1024	SETUP0	32	-	SETUP Device Request Lower Address
0x8005.1028	SETUP1	32	-	SETUP Device Request Upper Address
0x8005.102C	ENDP0RD	32	-	ENDPOINT0 Read Address
0x8005.1030	ENDP0WT	32		ENDPOINTO WRITE Address
0x8005.1034	ENDP1RD	32	•	ENDPOINT1 READ Address
0x8005.1038	ENDP2WT	32	-	ENDPOINT2 WRITE Address

#### Table 9-20 USB Slave interface Register Summary

#### 9.5.5.1 GCTRL

						0x8005.1000
31		4	3	2	1	0
Reser	rved		TRANSel	WBack	Resume	DMADis
Bits	Type	Function				
3	R/W	USB Transceiver power-down mode sel internal USB transceiver is forced to go I that transceiver when USB function is N zero while USB normal operation	high immedia	tely. This is for	power-dowr	scheme of
2	R/W	HMS30C7210 does not supports Write This bit must be set to '0'.	e-Back clear	mode for Inte	errupt Statu	s Register.
1	R/W	This Enables Remote Resume Capabiliti signaling. Should be cleared to stop resur		nis Bit Set, USE	3 Drives rem	note resume
0	R	DMA Disable bit. HMS30C7210 does no changeable	ot support DN	MA, so value o	f this bit (log	gic 1) is not

## 9.5.5.2 EPCTRL

											0x8005.1	1004
31	21	20		19	18	17	16	15	14	13	12	
Reserved		CLR2	2	CLR1	CLR0	E2T	XB	E2SND	E2NK	E2ST	E2En	
11	10	9	8	7		4		3	2	1	0	



E1RCV E1NK E1ST E1En E0TXB E0NK E0ST E0TR E0En	E1RCV	E1NK	E1ST	E1En	E0TXB	E0NK	E0ST	E0TR	E0En	
--	-------	------	------	------	-------	------	------	------	------	--

Bits	Type	Function
20	R/W	Clear Endpoint2 FIFO Pointer(Auto cleared by Hardware).
19	R/W	Clear Endpoint1 FIFO Pointer(Auto cleared by Hardware).
18	R/W	Clear Endpoint0 FIFO Pointer(Auto cleared by Hardware).
17~	R/W	USB Can Transmit NON Maximum sized Packet. This Field contains the residue byte which
16		should be transmitted.
15	R/W	This Bit enables NON Maximum sized Packet transfer. After NON maximum sized packet
		transfer, this bit is auto cleared and return to Maximum Packet size transfer mode.
14	R/W	When This Bit is Set, and Endpoint2 is not enabled, USB should send NAK Handshake
13	R/W	When This Bit is Set, and Endpoint2 is not enabled, USB should send STALL Handshake
12	R/W	Enable Endpoint2 as IN Endpoint
11	R/W	This bit must be zero. So only maximum packet size RX transfer mode is supported. This
		means RX (HOST OUT) data packet size is fixed to 32 bytes only.
10	R/W	When This Bit is Set, and Endpoint1 is not enabled, USB should send NAK Handshake
9	R/W	When This Bit is Set, and Endpoint1 is not enabled, USB should send STALL Handshake
8	R/W	Enable Endpoint1 as OUT Endpoint
7~4	R/W	This Bit Stores the Byte Count which should be transmitted to HOST when IN token is
		received (Exception :: When This bit is 0, 8 Byte are transferred)
3	R/W	When This Bit is Set, and Endpoint0 is not enabled, USB should send NAK Handshake
2	R/W	When This Bit is Set, and Endpoint0 is not enabled, USB should send STALL Handshake
1	R/W	When this Bit1, Endpoint0 is configured to IN endpoint. (others OUT endpoint)
0	R/W	Enable Endpoint0

## 9.5.5.3 INTMASK

0x8005.1008
31 10 9 8 7 6 5 4 3 2 1 0

Reserved E0STL SUS RESET E2EM E1OV E1FU E0EM E0OV E0FU SET

Bits	Type	Function
9	R/W	Mask Endpoint0 Stall Interrupt
8	R/W	Mask SUSPEND Interrupt
7	R/W	Mask USB Cable RESET Interrupt
6	R/W	Mask Endpoint2 Empty Interrupt
5	R/W	Mask Endpoint1 Overrun Interrupt (May not be used)
4	R/W	Mask Endpoint1 Full Interrupt
3	R/W	Mask Endpoint0 Empty Interrupt
2	R/W	Mask Endpoint0 Overrun Interrupt (May not be used)
1	R/W	Mask Endpoint0 Full Interrupt
0	R/W	Mask Endpoint0 Setup Token Received Interrupt

# 9.5.5.4 INTSTAT

0x8005.100C

31 20			19 14			13 0			
Reserved			EP1RXBYTE			EP0RXBYTE			
9	8	7	6	5	4	3	2	1	0
E0STL	SUS	RESET	E2EM	E10V	E1FU	E0EM	E00V	E0FU	SET

Bits	Type	Function
19~	R/W	Currently Remained Byte In Endpoint1 Receive FIFO which should be read by HOST
14		
13~	R/W	Currently Remained Byte in Endpoint0 Receive FIFO which should be read by HOST
10		
9	R/W	Endpoint0 Stall Interrupt
8	R/W	SUSPEND Interrupt
7	R/W	USB Cable RESET Interrupt
6	R/W	Endpoint2 Empty Interrupt



5	R/W	Endpoint1 Overrun Interrupt (May not be used)
4	R/W	Endpoint1 Full Interrupt
3	R/W	Endpoint0 Empty Interrupt
2	R/W	Endpoint0 Overrun Interrupt (May not be used)
1	R/W	Endpoint0 Full Interrupt
0	R/W	Endpoint0 Setup Token Received Interrupt

## 9.5.5.5 PWR

0x8005.1010

31	4	3	2	1 0
	Reserved	EnBCLK	SWUPDATE	PwrMD

Bits	Type	Function
3	R/W	Enable BCLK to USB FIFO Block
2	R/W	USB Core Power Mode Update Mode, When This Bit 1, Only software can update USB Core Power Mode. But this bit 0, USB core automatically update its power status according to cable state
1 ~ 0	R/W	USB Power Mode 00 : Full Power Down -> Usb core can't detect any cable activity 01 : Power Power Down -> Usb can detect any cable activity but core doesn't operate normally 10 : Full Power Operation Mode

## 9.5.5.6 DEVID

0x8005.1018

Bits Type	Function
31:0 R/W	USB Core Can Change Device ID Field by writing Appropriate Device ID Value to This Register

## 9.5.5.7 DEVCLASS

0x8005.101C

Bits	Type	Function
23:0	R/W	USB Core Can Change Device Class Field by writing Appropriate Device ID Value to This
		Register

# 9.5.5.8 INTCLASS

0x8005.1020

Bits	Type	Function
23:0	R/W	USB Core Can Change Interface Class Field by writing Appropriate Device ID Value to This
		Register

- While USB device configuration process, HOST requests Descriptors.

This USB block has a hard-wired descriptor ROM, but there are 3 fields (whole 10 bytes size) user adjustable.

## [DEVICE DESCRIPTOR]

- see USB spec. 1.1 (9.6 Standard USB Descriptor Definitions) for more detail

OFFSET (BYTE)	INITIAL VALUE	DESCRIPTION	ADJUSTABLE
h00	h12	length	
h01	h01	DEVICE	
h02	h00	spec version 1.00	
h03	h01	spec version	
h04	hFF	device class	YES
h05	hFF	device sub-class	YES
h06	hFF	vendor specific protocol	YES
h07	h08	max packet size	



h08	hB4	vendor id	YES
h09	h05	vendor id (05b4) for HME	YES
h0a	h02	product id	YES
h0b	h72	product id (7210) for HME7210	YES
h0c	h01	device release #	
h0d	h00	device release #	
h0e	h00	manufacturer index string	
h0f	h00	product index string	
h10	h00	serial number index string	
h11	h01	number of configurations	

<sup>\*</sup> DEVID register has 32-bit width and it covers vendor id to product id (offset from h08 to h0b): DEVID [31:24]

[CONFIGURATION DESCRIPTOR]

9 <u>0111 10011741101</u>	I DESCRIF I OR		
OFFSET (BYTE)	INITIAL VALUE	DESCRIPTION	ADJUSTABLE
h00	h09	Length of this descriptor	
h01	h02	CONFIGURATION (2)	
h02	h20	Total length includes endpoint descriptors	
h03	h00	Total length high byte	
h04	h01	Number of interfaces	
h05	h01	Configuration value for this one	
h06	h00	Configuration - string	
h07	h80	Attributes - bus powered, no wakeup	
h08	h32	Max power - 100 ma is 50 (32 hex)	
h09	h09	Length of the interface descriptor	
h0a	h04	INTERFACE (4)	
h0b	h00	Zero based index 0f this interface	
h0c	h00	Alternate setting value (?)	
h0d	h02	Number of endpoints (not counting 0)	
h0e	hFF	Interface class, ff is vendor specific	YES
h0f	hFF	Interface sub-class	YES
h10	hFF	Interface protocol	YES
h11	h00	Index to string descriptor for this interface	
h12	h07	Length of this endpoint descriptor	
h13	h05	ENDPOINT (5)	
h14	h01	Endpoint direction (00 is out) and address	
h15	h02	Transfer type – h02 = BULK	
h16	h20	Max packet size - low : 32 byte	
h17	h00	Max packet size - high	
h18	h00	Polling interval in milliseconds (1 for iso)	
h19	h07	Length of this endpoint descriptor	
h1a	h05	ENDPOINT (5)	
h1b	h82	Endpoint direction (80 is in) and address	
h1c	h02	Transfer type – h02 = BULK	
h1d	h20	Max packet size - low : 32 byte	
h1e	h00	Max packet size - high	
h1f	h00	Polling interval in milliseconds (1 for iso)	

<sup>\*</sup> see USB spec. 1.1 (9.6 Standard USB Descriptor Definitions) for more detail

<sup>-</sup> h0b, DEVID [23:16] - h0a, DEVID [15:8] - h09, DEVID [7:0] - h08

<sup>\*</sup> DEVCLASS register has 24-bit width and it covers device class to vendor specific protocol (offset from h04 to h06): DEVCLASS [23:16] – h06, DEVCLASS [15:8] – h05, DEVCLASS [7:0] – h04

<sup>\*</sup> The descriptor has 4 parts : Configuration, Interface, Endpoint1, Endpoint2 (doubled lines)



#### [STRING DESCRIPTOR]

OFFSET	INITIAL VALUE	DESCRIPTION	ADJUSTABLE
h0	h02	size in bytes	
h1	h03	STRING type (3)	

<sup>\*</sup> This index zero string descriptor means a kind of look up table. As there is no other string descriptor and as there is no further information in this descriptor, USB block does not support strings. (All string index fields are filled with zero)

## 9.5.5.9 SETUP0 / SETUP1

0x8005.1024 / 0x8005.1028

Bits	Type	Function
31:0	R/W	USB Core can accept vendor specific protocol command using Endpoint0. This Register
		contains previously received Setup Device Request Value (64-bit Wide, half in each Register)

<sup>-</sup> Below is Request format from HOST when configuration.

## [Standard Device Request Format]

bmRequestType	bRequest	wVa	lue	wind	ex	$\overline{J}$	wLength
Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byt	e 6 Byte 7

When HOST sends request to USB device, this USB block handles a few requests by SIE (Serial Interface Engine).

This is the condition of requests which this USB SIE can handle.

- Request Type must be Standard (b00): see USB spec. 9.3 Table 9-2 'Format of Setup Data' for more detail. Offset 0 (bmRequestType field) D[6:5] (Type); 00 Standard, 01 Class, 10 Vendor, 11 reserved.
- Request must be one of these: GET\_DESCRIPTOR, SET\_ADDRESS, SET\_INTERFACE, SET\_CONFIGURATION, GET\_INTERFACE, GET\_CONFIGURATION and GET\_STATUS.

So for requests other than above, HMS30C7210 USB sets 9.5.5.4 INTSTAT [0] and it means HOST sent Setup Request that USB SIE cannot handle by itself and these 9.5.5.9 SETUP0 and 9.5.5.10 SETUP1 resister hold Device Request Data (8 bytes: 64 bit described above). This function is to handle standard requests that SIE cannot handle and to handle vendor specific requests.

#### 9.5.5.10 ENDPORD

			UX8005.102
Bits	Type	Function	
31:0	R/W	Each Endpoint 0 FIFO Read	

## 9.5.5.11 ENDPOWT

0x8005.1030

Bits	Type	Function
31:0	R/W	Each Endpoint 0 FIFO Write

#### 9.5.5.12 ENDP1RD

0x8005.1034

Bits	Type	Function
31:0	R/W	Each Endpoint 1 FIFO Read

#### 9.5.5.13 ENDP2WT

0x8005.1038

Bits	Type	Function
31:0	R/W	Each Endpoint 2 FIFO Write

<sup>\*</sup> Note: 9.5.5.4 INTSTAT [0] bit will not go 'high' in case of Setup request if SIE can handle that request by itself.



#### 10 SLOW AMBA PERIPHERALS

#### 10.1 ADC Interface Controller

HMS30C7210 has internal ADC and ADC interface logic for analog applications of touch panel interface, two 8-bit battery check, and one 8-bit sound sampling. If user doesn't need these applications or want to use for other functions, there's a direct ADC control register available.

#### **FEATURES**

- 5-channel 10-bit ADC embedded
- 4-sample data per one sampling point of touch panel (use 2 channels, X and Y, 10-bit)
- Main and backup battery check function (use 2 channels, 8-bit resolution)
- Eight 32-byte sound data buffer (8-word buffer, 8-bit sound data)
- Manual and Auto ADC power down mode

## 10.1.1 External Signals

Pin Name	Туре	Description	
ADIN[0]	Analog input	Touch Panel X-axis signal input	
ADIN[1]	Analog input	Touch Panel Y-axis signal input	
ADIN[2]	Analog input	Main Battery value input	
ADIN[3]	Analog input	Backup Battery value input	
ADIN[4]	Analog input	Sound input	

## 10.1.2 Registers

Address	Name	Width	Default	Description
0x8002.9000	ADCCR		0x80	ADC Control Register
0x8002.9004	ADCTPCR		0x0	Touch panel control register
0x8002.9008	ADCBACR		0x0	Battery check Control Register
0x8002.900C	ADCSDCR		0x0	Sound Data Control Register
0x8002.9010	ADCISR		0x0	ADC Interrupt Status Register
0x8002.901C	ADCTDCSR		0x0X	Tip Down Control/Status Register
0x8002.9020	ADCDIRCR			ADC Direct Control Register
0x8002.9024	ADCDIRDATA			ADC Direct Data read register
0x8002.9030	ADCTPXDR0			Touch Panel X Data register 0
0x8002.9034	ADCTPXDR1			Touch Panel X Data register 1
0x8002.9038	ADCTPYDR0			Touch Panel Y Data register 0
0x8002.903C	ADCTPYDR1			Touch Panel Y Data register 1
0x8002.9040	ADCTPXDR2			Touch Panel X Data register 2
0x8002.9044	ADCTPXDR3			Touch Panel X Data register 3
0x8002.9048	ADCTPYDR2			Touch Panel Y Data register 2
0x8002.904C	ADCTPYDR3			Touch Panel Y Data register 3
0x8002.9050	ADCMBDATA			Main Battery check Data Register
0x8002.9054	ADCBBDATA			Backup Battery check Data Register
0x8002.9060	ADCSDATA0			Sound Data Register
0x8002.9064	ADCSDATA1			Sound Data Register
0x8002.9068	ADCSDATA2			Sound Data Register
0x8002.906C	ADCSDATA3			Sound Data Register
0x8002.9070	ADCSDATA4			Sound Data Register
0x8002.9074	ADCSDATA5			Sound Data Register
0x8002.9078	ADCSDATA6			Sound Data Register
0x8002.907C	ADCSDATA7			Sound Data Register

**Table 10-1 ADC Controller Register Summary** 



#### 10.1.2.1 ADC Control Register (ADCCR)

User can set ADCPD to save power consumption by ADC. But ADC needs 10-40 ms to self calibrate for normal operation. DIRECTC bit can be used for direct accessing from CPU to ADC without interface function logic. All direct control signals are describe in ADCDIRCR register field. Basically ADC core converts Analog data to Digital data continuously in every 16 ADC operation-clocks. ADC operation clock is "aclk" (3.6864MHz) called as "PCLK" in SLOW APB

WAIT bit field select conversion time of ADC because in certain case interface logic can read wrong or unstable value from ADC. SOP bit can be used for one-shot operation to save power. When this bit is set and all ADC functions are disabled then interface logic strobe "power down" signal to ADC core. LONGCAL signal selects self-calibration time. Initially this bit set as "0" it means short calibration time (about 10 ms). But if first a couple of data were wrong value, user should select long calibration time (about 40 ms).

. Oi u	ala wc	re wrong value, us	or stroute scie	ct long calibration	on time (abo	out <del>4</del> 0 m3).	0x8002.900							
7		6		3	2	1	0							
ADCF	PD	DIRECTC		WAIT		SOP	LONGCAL							
Bits	Type	Function												
7	R/W	This bit blocks th	e clock to ADO	o go ADC power s C, so ADC consur 40 ms calibration	nes no powe		t is set. But after							
6	R/W	If this bit was se value through DI	,	directly ADC thr	ough DIRCF	R and directly	read ADC result							
5:4	-	Reserved	Reserved											
3:2	R/W	R/W Select ADC conversion wait time. It is for capture timing of the data from ADC to internal register.  00: no wait (read after 16 cycles, default wait time)  01: 2 clock wait (read after 18 cycles)  10: 4 clock wait (read after 20 cycles)												
1	R/W	Self Operate Pov functions are ena		hen this bit is set,	AIOSTOP b	it will strobe hiç	gh when no ADC							
O R/W Long calibration time. The default ADC calibration time is 10 ms but when needed ADC be calibrated during 40ms with this bit.  Short calibration time need 96 cycles of 8 kHz OCLK or 128 cycles of 11 kHz OCLK an long time need 384 cycles of 8 kHz or 512 cycles of 11 kHz OCLK. OCLK is determined SRATE bit of ADCSDCR.														
		ADCCR.	ADCSCR.	Calibration Tim	ne									
		LONGCAL bit	SRATE bit	(the number of	OCLK cycle	es)								
		0	0		96									
		0	1		28									
		1	1 0 383											
			1	5	511									

## 10.1.2.2 ADC Touch Panel Control Register (ADCTPCR)

This register control functions related with touch panel interface. HMS30C7210 supports only external drive for touch panel, so prudent setting of this register is needed.

•	,	•	J	· ·				0x8002.9				
7		6	5	4	3	2	1	0				
TPEN		TINTMSK	SWBYPSS	SWINVT	INTTDEN	SSHOT	TRATE					
Bits	Туре	Function	1									
7	R/W		Touch panel read enable bit. Write "1" to enable touch panel function.									
6	R/W	W Touch panel read interrupt mask bit. Write "1" to enable touch panel interrupt.										
5	R/W		nel drive signa signals to ext	, i				is bit to bypass				



1:0 -

4	R/W	Touch panel drive signal inversion bit. for flexibility
3	R/W	Internal tip-down detection logic enable bit. You must write "0" to disable this function.
2	R/W	Single touch panel read operation. Normally, touch panel date read twice. But this bit is set, touch panel data read once for a point and save power to read touch panel.
1:0	R/W	Select touch panel date sampling rate. It depends on basic operation clock of ADC interface(sound sampling rate). 11: 400 or 550 samples / sec 10: 200 or 275 samples / sec 01: 100 or 138 samples / sec 00: 50 or 69 samples / sec

## 10.1.2.3 ADC Battery check Control Register (ADCBACR)

This registers controls battery check operation.

	giotoi	o controlo battory one	on operation.			0x8002.9008
7		6		3	2	
MBEN		MINTMSK		BBEN	BINTMSK	
Bits	Type	Function				
7	R/W	Main battery check	enable			
		Write "1" to enable				
		Four 8-bit battery of	heck data recorded	I in ADCMBDA	ATA register	
6	R/W	Main battery check	interrupt mask bit			
		Write "1" to enable				
5:4	-	Reserved				
3	R/W	Backup battery che	eck enable			
		Write "1" to enable				
		Four 8-bit battery of	heck data recorded	in ADCBBDA	TA register	
2	R/W	Backup battery che	eck interrupt mask b	oit		
		Write "1" to enable				

# 10.1.2.4 ADC Sound Control Register (ADCSDCR)

Reserved

This registers controls sound sampling function. SRATE bit control base clock of ADC interface logic.

7		6 0										
SNDE	ΞN	SINTMSK SRATE										
Bits	Type	Function										
7	7 R/W Sound date capture enable bit Write "1" to enable											
6	R/W											
5:1	-	Reserved										
0	R/W	Sound date sampling rate selection bit. This bit affects to all sampling rates of touch panel and battery operations. 0: 8 kHz sound sampling 1: 11.025 kHz sound sampling 8/11KHz is derived from aclk (3.6864MHz) called as "PCLK" in SLOW APB.										

# 10.1.2.5 ADC Interrupt Status Register (ADCISR)

Read only valid but write "1" to clear all interrupt value

,						0x8002.9010
7	6	5	4		1	0
INTTP	INTMB	INTBB	INTSD		INTTD	INTTU

0x8002.900C



Bits	Type	Function
7	R/W	Touch panel data interrupt. Write "1" here to clear this interrupt.
6	R/W	Main battery checks interrupt. Write "1" here to clear this interrupt.
5	R/W	Backup battery check interrupt. Write "1" to clear this interrupt.
4	R/W	Sound data interrupt. It will be generated when all the 8 sound registers are full. Write "1" here
		to clear this interrupt.
3:2	-	Reserved
1	R/W	Tip Down interrupt. Write "1" here to clear this interrupt.
0	R/W	Tip Up interrupt. Write "1" here to clear this interrupt.

## 10.1.2.6 ADC Tip Down Control Status Register (ADCTDCSR)

UX8C	102.	90	11

IDEN		IDMSK TUEN TUMSK TPSEL TP_X TP_Y
Bits	Туре	Function
7	R/W	Touch panel tip-down detection logic enable Write "1" to enable this function
6	R/W	Touch panel tip-down interrupt mask bit Write "1" to enable interrupt
5	R/W	Touch panel tip-up detection enable. When this bit is set, once in every 20 OCLK cycles, monitor touch panel status periodically.
4	R/W	Touch panel tip-up interrupt mask bit.
3	R/W	Select Tip Down/Up monitoring channel (0:X, 1:Y)
2	-	Reserved
1	R/W	X axis Tip status monitor bit (read only bit)
0	R/W	Y axis Tip status monitor bit (read only bit)

## 10.1.2.7 ADC Direct Control Register (ADCDIRCR)

ADC I/F has the Direct Data Read Function. When DIRECTC bit in ADCCR register is set high, CPU can access directly A/D Converter through this register and can read conversion data of A/D Converter through DIRDATA register.

								0x8002.9020				
7		6	5	4	3	2	1	0				
AIOS	TOP			ACH								
Bits	Type	Function		7								
7	R/W											
6:5	-	Reserved	r									
4:0	R/W	ADC cha	nnel selec	tion bits to con	trol ADC direc	tly						
		00001: se	elect chan	nel 0 (touch pa	inel X)							
		00010: se	elect chan	nel 1 (touch pa	inel Y)							
		00100: se	elect chan	nel 2 (Main bat	ttery)							
				nel 3 (Backup l	• ,							
		10000: se	elect chan	nel 4 (Sound ir	nput)							

## 10.1.2.8 ADC Direct Data Read Register (ADCDIRDATA)

Register can be used to read data from ADC.

									0x8002	.9024		
9	8	7	6	5	4	3	2	1	0			
AD Da	ata											
Bits	Type	Function										
9:0	R	10-bit AD conversion data										



# 10.1.2.9 ADC 1<sup>ST</sup> Touch Panel Data register

0x8002.9030 - 0x8002.903C

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	
						XDATA1: ADCTPXDR0, XDATA3: ADCTPXDR1										
						YDATA1: ADCTPYDR0, YDATA3: ADCTPYDR1										
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
						XDATA0: ADCTPXDR0, XDATA2: ADCTPXDR1										
						YDATA0: ADCTPYDR0, YDATA2: ADCTPYDR1										

ADCTPXDR0: 0x80029030

Bits	Type	Function
31:26	-	Reserved
25:16	R	Touch panel X data 10-bit, 2/4 of the first sample cycle (XDATA1)
15:10	-	Reserved
9:0	R	Touch panel X data 10-bit, 1/4 of the first sample cycle (XDATA0)

ADCTPXDR1: 0x80029034

Bits	Type	Function
31:26	-	Reserved
25:16	R	Touch panel X data 10-bit, 4/4 of the first sample cycle (XDATA3)
15:10	-	Reserved
9:0	R	Touch panel X data 10-bit, 3/4 of the first sample cycle (XDATA2)

ADCTPYDR0: 0x80029038

Bits	Type	Function
31:26	-	Reserved
25:16	R	Touch panel Y data 10-bit, 2/4 of the first sample cycle (YDATA1)
15:10	-	Reserved
9:0	R	Touch panel Y data 10-bit, 1/4 of the first sample cycle (YDATA0)

ADCTPYDR1: 0x8002903C

Bits	Type	Function
31:26	-	Reserved
25:16	R	Touch panel Y data 10-bit, 4/4 of the first sample cycle (YDATA3)
15:10	- ,	Reserved
9:0	R	Touch panel Y data 10-bit, 3/4 of the first sample cycle (YDATA2)

# 10.1.2.10 ADC 2<sup>ND</sup> Touch Panel Data Register

0x8002.9040 - 0x8002.904C

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
									R2, XD R2, YD						
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
									R2, XD R2, YD						

ADCTPXDR2: 0x80029040

Bits	Type	Function
31:26	-	Reserved
25:16	R	Touch panel X data 10-bit, 2/4 of the second sample cycle (XDATA5)
15:10	-	Reserved
9:0	R	Touch panel X data 10-bit, 1/4 of the second sample cycle (XDATA4)



#### ADCTPXDR3: 0x80029044

Bits	Type	Function
31:26	-	Reserved
25:16	R	Touch panel X data 10-bit, 4/4 of the second sample cycle (XDATA7)
15:10	-	Reserved
9:0	R	Touch panel X data 10-bit, 3/4 of the second sample cycle (XDATA6)

#### ADCTPYDR2: 0x80029048

Bits	Type	Function
31:26	-	Reserved
25:16	R	Touch panel Y data 10-bit, 2/4 of the second sample cycle (YDATA5)
15:10	-	Reserved
9:0	R	Touch panel Y data 10-bit, 1/4 of the second sample cycle (YDATA4)

#### ADCTPYDR3: 0x8002904C

Bits	Type	Function
31:26	-	Reserved
25:16	R	Touch panel Y data 10-bit, 4/4 of the second sample cycle (YDATA7)
15:10	-	Reserved
9:0	R	Touch panel Y data 10-bit, 3/4 of the second sample cycle (YDATA6)

## 10.1.2.11 ADC Main Battery Data Register (ADCMBDATA)

										′				0>	(8002.9	9050
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	
MBD	ATA3							MBD	ATA2							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
MBD	ATA1							MBD	ATA0							

Bits	Type	Function
31:24	R/W	Forth main battery check data
23:16	R/W	Third main battery check data
15:8	R/W	Second main battery check data
7:0	R/W	First main battery check data

## 10.1.2.12 ADC Backup Battery Data Register (ADCBBDATA)

Bits	Type	Function
31:24	R/W	Forth backup battery check data
23:16	R/W	Third backup battery check data
15:8	R/W	Second backup battery check data
7:0	R/W	First backup battery check data

## 10.1.2.13 ADC Sound Data Register (ADCSDATA0 – ADCSDATA7)

HMS30C7202 has 8-word size sound register so it can contain 32 8-bit sound data.

In ADC interface logic, there are 8-byte(2-word) temporal buffer for sound data and every 2-word write into SDATA0,1 / SDATA2,3 / SDATA4,5 / SDATA6,7 at a time (at end of every "all 8-byte temporal buffer full"



time). So, user has to read in 8 x (one sample period) second for getting valid ADCSDATA0,1(1st 2-word) after Sound interrupt.

0x8002.9060 - 0x8002.907
--------------------------

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
SDAT	ΓA (n+3)	)						SDAT	A (n+2)						
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
SDATA (n+1)							SDATA (n)								


Bits	Type	Function	
31:24	R/W	(4n+3) <sup>TH</sup> Sound Data. (n = ADCSDATAn)	
23:16	R/W	(4n+2) <sup>TH</sup> Sound Data. (n = ADCSDATAn)	
15:8	R/W	(4n+1) <sup>TH</sup> Sound Data. (n = ADCSDATAn)	
7:0	R/W	(4n) <sup>TH</sup> Sound Data. (n = ADCSDATAn)	



#### 10.2 CAN Interface

The Controller Area Network (CAN) is a serial communication protocol that can be efficiently used in distributed real-time control with a very high level of security. Its domain of application ranges from high-speed networks to low cost multiplex wiring. Especially in automotive electronics, engine control units, antilock-break-systems, sensors, anti-skid-systems, etc. can be connected using a CAN with bitrates up to 1 Mbit/s. At the same time it is cost-effective to build into vehicle body electronics, e.g. lamp clusters, electric windows etc. to replace the wiring harness otherwise required.

The CAN used in HMS30C7202 performs communication according to the CAN protocol version 2.0. The register set of the CAN can be accessed directly by an ARM core via the module interface. These register are used to control/configure the CAN Core and the Message Handler and to access the Message RAM.

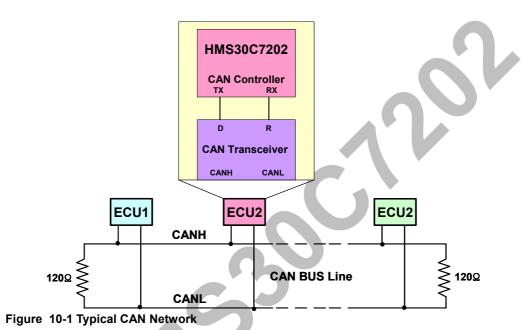

#### **FEATURES**

- Supports CAN protocol version 2.0 part A and B
- Bit rates up to 1Mbit/s
- Disable Automatic Retransmission mode for Time Triggered CAN application
- 32 Message Objects
- Each Message Object has its own identifier mask
- Programmable FIFO mode
- Maskable interrupt
- Programmable loop-back mode for self test operation
- Two 16-bit module interface to the AMBA APB bus from ARM



#### 10.2.1 Block Diagram

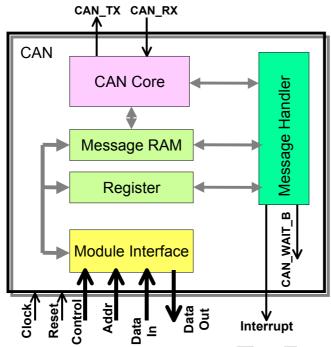


Figure 10-2 Block Diagram of the CAN

# **CAN CORE**

CAN Protocol Controller and Rx/Tx Shift Register

#### Message RAM

Stores Message Objects and Identifier Masks

#### Registers

All registers used to control and to configure the CAN module

#### Message Handler

The State machine controls the data transfer between the Rx/Tx Shift Register of the CAN Core and the Message RAM as well as the generation of interrupts according to the programming of the Control and Configuration Registers

#### 10.2.2 Register Map

The register map consists of :

a set of Control, Configuration and Status Registers

two CPU interface registers sets for access to the Message RAM

■ 32 Message Objects located in the Message RAM

Base address of CAN0 : 0x8002.F000 Base address of CAN1 : 0x8003.0000

Address	Name	Widt h	Default	Description
CAN_BASE+0x000	CANControl	16	0x0001	CAN Control Register
CAN_BASE+0x004	CANStatus	16	0x0000	CAN Status Register
CAN_BASE+0x008	CANError	16	0x0000	CAN Error Counting Register
CAN_BASE+0x00C	CANBitTimReg	16	0x2301	CAN Bit Timing Register
CAN_BASE+0x010	CANIntReg	16	0x0000	CAN Interrupt Register



CAN_BASE+0x014         CANTestReg         16         0x00000*         CAN Test Register           CAN_BASE+0x018         CANBRPExt         16         0x0000         CAN BRP Extension Register           CAN_BASE+0x010         CANEnable         16         0x0000         CAN Enable Register           CAN_BASE+0x020         IF1ComM         16         0x0001         Interface1 Command Request Register           CAN_BASE+0x022         IF1Mask1         16         0xFFFF         Imterface1 Command Mask Register           CAN_BASE+0x028         IF1Mask1         16         0xFFFF         Interface1 Mask2 Register           CAN_BASE+0x020         IF1Mask2         16         0xFFFF         Interface1 Mask2 Register           CAN_BASE+0x030         IF1Arb1         16         0x0000         Interface1 Mask2 Register           CAN_BASE+0x034         IF1Arb2         16         0x0000         Interface1 Arbitration1 Register           CAN_BASE+0x033         IF1DataA1         16         0x0000         Interface1 Mask2 Register           CAN_BASE+0x040         IF1DataA1         16         0x0000         Interface1 Data A1 Register           CAN_BASE+0x044         IF1DataB1         16         0x0000         Interface1 Data B2 Register           CAN_BASE+0x048         IF					
CAN BASE+0x01C         CANEnable         16         0x0000         CAN Enable Register           CAN BASE+0x020         IF1ComR         16         0x0001         Interface1 Command Request Register           CAN BASE+0x024         IF1ComM         16         0x0000         Interface1 Command Mask Register           CAN BASE+0x028         IF1Mask1         16         0xFFFF         Interface1 Mask1 Register           CAN BASE+0x030         IF1Arb1         16         0xFFFF         Interface1 Mask2 Register           CAN BASE+0x034         IF1Arb2         16         0x0000         Interface1 Arbitration1 Register           CAN BASE+0x038         IF1Mont         16         0x0000         Interface1 Message Control Register           CAN BASE+0x038         IF1DataA1         16         0x0000         Interface1 Message Control Register           CAN BASE+0x0404         IF1DataA1         16         0x0000         Interface1 Data A1 Register           CAN BASE+0x0404         IF1DataB1         16         0x0000         Interface1 Data A1 Register           CAN BASE+0x048         IF2ComR         16         0x0000         Interface2 Data B1 Register           CAN BASE+0x088         IF2ComR         16         0x0000         Interface2 Command Request Register           CA	CAN_BASE+0x014	CANTestReg	16	0x0000*	CAN Test Register
CAN         BASE+0x020         IF1ComR         16         0x0001         Interface1 Command Request Register           CAN         BASE+0x024         IF1ComM         16         0x0000         Interface1 Command Mask Register           CAN         BASE+0x022         IF1Mask1         16         0xFFFF         Imterface1 Mask2 Register           CAN         BASE+0x020         IF1Msk2         16         0xFFFF         Interface1 Arbitration1 Register           CAN         BASE+0x034         IF1Arb1         16         0x0000         Interface1 Arbitration2 Register           CAN         BASE+0x038         IF1Mcont         16         0x0000         Interface1 Message Control Register           CAN         BASE+0x038         IF1Mcont         16         0x0000         Interface1 Data A1 Register           CAN         BASE+0x038         IF1DataA1         16         0x0000         Interface1 Data A2 Register           CAN         BASE+0x044         IF1DataB1         16         0x0000         Interface1 Data B1 Register           CAN         BASE+0x080         IF2ComR         16         0x0000         Interface2 Data B2 Register           CAN         BASE+0x088         IF2ComM         16         0x0000         Interface2 Data B2 Register <t< td=""><td>CAN_BASE+0x018</td><td>CANBRPExt</td><td>16</td><td>0x0000</td><td>CAN BRP Extension Register</td></t<>	CAN_BASE+0x018	CANBRPExt	16	0x0000	CAN BRP Extension Register
CAN         BASE+0x024         IF1ComM         16         0x0000         Interface1 Command Mask Register           CAN         BASE+0x028         IF1Mask1         16         0xFFFF         Imterface1 Mask1 Register           CAN         BASE+0x020         IF1Mask2         16         0xFFFF         Interface1 Mask2 Register           CAN         BASE+0x030         IF1Arb1         16         0x0000         Interface1 Arbitration1 Register           CAN         BASE+0x038         IF1Mcont         16         0x0000         Interface1 Message Control Register           CAN         BASE+0x038         IF1DataA1         16         0x0000         Interface1 Data A1 Register           CAN         BASE+0x030         IF1DataA1         16         0x0000         Interface1 Data A2 Register           CAN         BASE+0x040         IF1DataA2         16         0x0000         Interface1 Data B1 Register           CAN         BASE+0x044         IF1DataB2         16         0x0000         Interface1 Data B2 Register           CAN         BASE+0x080         IF2ComR         16         0x0000         Interface2 Command Request Register           CAN         BASE+0x088         IF2Mask1         16         0x0000         Interface2 Mask1 Register	CAN_BASE+0x01C	CANEnable	16	0x0000	CAN Enable Register
CAN_BASE+0x028         IF1Mask1         16         0xFFFF         Imteface1 Mask1 Register           CAN_BASE+0x02C         IF1Mask2         16         0xFFFF         Interface1 Mask2 Register           CAN_BASE+0x030         IF1Arb1         16         0x0000         Interface1 Arbitration1 Register           CAN_BASE+0x034         IF1Arb2         16         0x0000         Interface1 Arbitration2 Register           CAN_BASE+0x036         IF1DataA1         16         0x0000         Interface1 Data A1 Register           CAN_BASE+0x036         IF1DataA1         16         0x0000         Interface1 Data A2 Register           CAN_BASE+0x040         IF1DataB2         16         0x0000         Interface1 Data B1 Register           CAN_BASE+0x044         IF1DataB1         16         0x0000         Interface1 Data B2 Register           CAN_BASE+0x080         IF2ComR         16         0x0000         Interface2 Data B1 Register           CAN_BASE+0x080         IF2ComR         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x080         IF2Mask1         16         0x0000         Interface2 Command Request Register           CAN_BASE+0x080         IF2Mask1         16         0xFFFF         Interface2 Data K1 Register           CAN_BASE+0x080 <td>CAN_BASE+0x020</td> <td>IF1ComR</td> <td>16</td> <td>0x0001</td> <td>Interface1 Command Request Register</td>	CAN_BASE+0x020	IF1ComR	16	0x0001	Interface1 Command Request Register
CAN         BASE+0x02C         IF1Mask2         16         0xFFFF         Interface1 Mask2 Register           CAN         BASE+0x030         IF1Arb1         16         0x0000         Interface1 Arbitration1 Register           CAN         BASE+0x034         IF1Arb2         16         0x0000         Interface1 Arbitration2 Register           CAN         BASE+0x038         IF1Mcont         16         0x0000         Interface1 Message Control Register           CAN         BASE+0x030         IF1DataA1         16         0x0000         Interface1 Data A1 Register           CAN         BASE+0x040         IF1DataA2         16         0x0000         Interface1 Data B2 Register           CAN         BASE+0x044         IF1DataB1         16         0x0000         Interface1 Data B1 Register           CAN         BASE+0x088         IF1DataB2         16         0x0000         Interface2 Data B2 Register           CAN         BASE+0x080         IF2ComR         16         0x0001         Interface2 Command Request Register           CAN         BASE+0x084         IF2ComM         16         0x0001         Interface2 Command Mask Register           CAN         BASE+0x084         IF2Damak1         16         0xFFFF         Interface2 Mask1 Register	CAN_BASE+0x024	IF1ComM	16	0x0000	Interface1 Command Mask Register
CAN_BASE+0x030         IF1Arb1         16         0x0000         Interface1 Arbitration1 Register           CAN_BASE+0x034         IF1Arb2         16         0x0000         Interface1 Arbitration2 Register           CAN_BASE+0x038         IF1Mcont         16         0x0000         Interface1 Message Control Register           CAN_BASE+0x03C         IF1DataA1         16         0x0000         Interface1 Data A1 Register           CAN_BASE+0x040         IF1DataA2         16         0x0000         Interface1 Data A2 Register           CAN_BASE+0x044         IF1DataB1         16         0x0000         Interface1 Data B1 Register           CAN_BASE+0x048         IF1DataB2         16         0x0000         Interface1 Data B2 Register           CAN_BASE+0x088         IF2ComR         16         0x0000         Interface2 Command Request Register           CAN_BASE+0x084         IF2ComM         16         0x0000         Interface2 Command Reguest Register           CAN_BASE+0x088         IF2Mask1         16         0xFFFF         Interface2 Command Reguest Register           CAN_BASE+0x080         IF2Arb1         16         0xFFFF         Interface2 Mask1 Register           CAN_BASE+0x090         IF2Arb1         16         0x0000         Interface2 Arbitration1 Register	CAN_BASE+0x028	IF1Mask1	16	0xFFFF	Imteface1 Mask1 Register
CAN_BASE+0x034         IF1Arb2         16         0x0000         Interface1 Arbitration2 Register           CAN_BASE+0x038         IF1Mcont         16         0x0000         Interface1 Message Control Register           CAN_BASE+0x03C         IF1DataA1         16         0x0000         Interface1 Data A1 Register           CAN_BASE+0x040         IF1DataB1         16         0x0000         Interface1 Data B1 Register           CAN_BASE+0x048         IF1DataB2         16         0x0000         Interface1 Data B2 Register           CAN_BASE+0x048         IF1DataB2         16         0x0000         Interface2 Data B1 Register           CAN_BASE+0x080         IF2ComR         16         0x0000         Interface2 Command Request Register           CAN_BASE+0x084         IF2ComM         16         0x0000         Interface2 Command Mask Register           CAN_BASE+0x088         IF2Mask1         16         0xFFFF         Interface2 Mask1 Register           CAN_BASE+0x080         IF2Arb1         16         0x0000         Interface2 Mask2 Register           CAN_BASE+0x090         IF2Arb1         16         0x0000         Interface2 Arbitration2 Register           CAN_BASE+0x094         IF2DataA1         16         0x0000         Interface2 Data A1 Register           CAN_	CAN_BASE+0x02C	IF1Mask2	16	0xFFFF	Interface1 Mask2 Register
CAN_BASE+0x038         IF1Mcont         16         0x0000         Interface1 Message Control Register           CAN_BASE+0x03C         IF1DataA1         16         0x0000         Interface1 Data A1 Register           CAN_BASE+0x040         IF1DataA2         16         0x0000         Interface1 Data A2 Register           CAN_BASE+0x044         IF1DataB1         16         0x0000         Interface1 Data B1 Register           CAN_BASE+0x048         IF1DataB2         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x080         IF2ComR         16         0x0000         Interface2 Command Request Register           CAN_BASE+0x081         IF2ComM         16         0x0000         Interface2 Command Mask Register           CAN_BASE+0x084         IF2ComM         16         0x0000         Interface2 Command Mask Register           CAN_BASE+0x088         IF2Mask1         16         0xFFFF         Interface2 Mask1 Register           CAN_BASE+0x088         IF2Mask2         16         0xFFFF         Interface2 Mask2 Register           CAN_BASE+0x094         IF2Arb1         16         0x0000         Interface2 Arbitration1 Register           CAN_BASE+0x098         IF2Mcont         16         0x0000         Interface2 Data A1 Register           CAN_	CAN_BASE+0x030	IF1Arb1	16	0x0000	Interface1 Arbitration1 Register
CAN_BASE+0x03C         IF1DataA1         16         0x0000         Interface1 Data A1 Register           CAN_BASE+0x040         IF1DataA2         16         0x0000         Interface1 Data A2 Register           CAN_BASE+0x044         IF1DataB1         16         0x0000         Interface1 Data B1 Register           CAN_BASE+0x048         IF1DataB2         16         0x0000         Interface1 Data B2 Register           CAN_BASE+0x080         IF2ComR         16         0x0000         Interface2 Command Request Register           CAN_BASE+0x084         IF2ComM         16         0x0000         Interface2 Command Mask Register           CAN_BASE+0x088         IF2Mask1         16         0xFFFF         Interface2 Mask2 Register           CAN_BASE+0x080         IF2Mask2         16         0xFFFF         Interface2 Mask2 Register           CAN_BASE+0x080         IF2Mask2         16         0xFFFF         Interface2 Mask2 Register           CAN_BASE+0x090         IF2Arb1         16         0x0000         Interface2 Arbitration1 Register           CAN_BASE+0x094         IF2Mcont         16         0x0000         Interface2 Message Control Register           CAN_BASE+0x090         IF2DataA1         16         0x0000         Interface2 Data A1 Register           CAN_BASE+	CAN_BASE+0x034	IF1Arb2	16	0x0000	Interface1 Arbitration2 Register
CAN_BASE+0x040         IF1DataA2         16         0x0000         Interface1 Data A2 Register           CAN_BASE+0x044         IF1DataB1         16         0x0000         Interface1 Data B1 Register           CAN_BASE+0x048         IF1DataB2         16         0x0000         Interface1 Data B2 Register           CAN_BASE+0x080         IF2ComR         16         0x0001         Interface2 Command Request Register           CAN_BASE+0x084         IF2ComM         16         0x0000         Interface2 Command Mask Register           CAN_BASE+0x088         IF2Mask1         16         0xFFFF         Interface2 Mask1 Register           CAN_BASE+0x080         IF2Mask2         16         0xFFFF         Interface2 Mask2 Register           CAN_BASE+0x090         IF2Arb1         16         0x0000         Interface2 Arbitration1 Register           CAN_BASE+0x094         IF2Arb2         16         0x0000         Interface2 Arbitration2 Register           CAN_BASE+0x098         IF2DataA1         16         0x0000         Interface2 Message Control Register           CAN_BASE+0x040         IF2DataA2         16         0x0000         Interface2 Data A1 Register           CAN_BASE+0x0A4         IF2DataB1         16         0x0000         Interface2 Data B2 Register           CA	CAN_BASE+0x038	IF1Mcont	16	0x0000	Interface1 Message Control Register
CAN_BASE+0x044         IF1DataB1         16         0x0000         Interface1 Data B1 Register           CAN_BASE+0x048         IF1DataB2         16         0x0000         Interface1 Data B2 Register           CAN_BASE+0x080         IF2ComR         16         0x0001         Interface2 Command Request Register           CAN_BASE+0x084         IF2ComM         16         0x0000         Interface2 Command Mask Register           CAN_BASE+0x088         IF2Mask1         16         0xFFFF         Interface2 Mask1 Register           CAN_BASE+0x080         IF2Mask2         16         0xFFFF         Interface2 Mask2 Register           CAN_BASE+0x090         IF2Arb1         16         0x0000         Interface2 Arbitration1 Register           CAN_BASE+0x094         IF2Arb2         16         0x0000         Interface2 Message Control Register           CAN_BASE+0x098         IF2Mcont         16         0x0000         Interface2 Data A1 Register           CAN_BASE+0x090         IF2DataA1         16         0x0000         Interface2 Data A2 Register           CAN_BASE+0x0A0         IF2DataB1         16         0x0000         Interface2 Data B1 Register           CAN_BASE+0x0A4         IF2DataB2         16         0x0000         Interface2 Data B2 Register           CAN_BASE	CAN_BASE+0x03C	IF1DataA1	16	0x0000	Interface1 Data A1 Register
CAN_BASE+0x048         IF1DataB2         16         0x0000         Interface1 Data B2 Register           CAN_BASE+0x080         IF2ComR         16         0x0001         Interface2 Command Request Register           CAN_BASE+0x084         IF2ComM         16         0x0000         Interface2 Command Mask Register           CAN_BASE+0x088         IF2Mask1         16         0xFFFF         Interface2 Mask1 Register           CAN_BASE+0x080         IF2Mask2         16         0xFFFF         Interface2 Mask2 Register           CAN_BASE+0x090         IF2Arb1         16         0x0000         Interface2 Arbitration1 Register           CAN_BASE+0x094         IF2Arb2         16         0x0000         Interface2 Arbitration2 Register           CAN_BASE+0x098         IF2Mcont         16         0x0000         Interface2 Message Control Register           CAN_BASE+0x090         IF2DataA1         16         0x0000         Interface2 Data A1 Register           CAN_BASE+0x000         IF2DataA2         16         0x0000         Interface2 Data B1 Register           CAN_BASE+0x0A4         IF2DataB1         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x100         TxRqst1         16         0x0000         Transmission Request 1           CAN_BASE+0	CAN_BASE+0x040	IF1DataA2	16	0x0000	Interface1 Data A2 Register
CAN_BASE+0x080         IF2ComR         16         0x0001         Interface2 Command Request Register           CAN_BASE+0x084         IF2ComM         16         0x0000         Interface2 Command Mask Register           CAN_BASE+0x088         IF2Mask1         16         0xFFFF         Interface2 Mask1 Register           CAN_BASE+0x08C         IF2Mask2         16         0xFFFF         Interface2 Mask2 Register           CAN_BASE+0x090         IF2Arb1         16         0x0000         Interface2 Arbitration1 Register           CAN_BASE+0x094         IF2Arb2         16         0x0000         Interface2 Arbitration2 Register           CAN_BASE+0x098         IF2Mcont         16         0x0000         Interface2 Message Control Register           CAN_BASE+0x099         IF2DataA1         16         0x0000         Interface2 Data A1 Register           CAN_BASE+0x000         IF2DataA2         16         0x0000         Interface2 Data A2 Register           CAN_BASE+0x0A4         IF2DataB1         16         0x0000         Interface2 Data B1 Register           CAN_BASE+0x100         TxRqst1         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x104         TxRqst1         16         0x0000         Transmission Request 1           CAN_BASE+0x1	CAN_BASE+0x044	IF1DataB1	16	0x0000	Interface1 Data B1 Register
CAN_BASE+0x084         IF2ComM         16         0x0000         Interface2 Command Mask Register           CAN_BASE+0x088         IF2Mask1         16         0xFFFF         Interface2 Mask1 Register           CAN_BASE+0x08C         IF2Mask2         16         0xFFFF         Interface2 Mask2 Register           CAN_BASE+0x090         IF2Arb1         16         0x0000         Interface2 Arbitration1 Register           CAN_BASE+0x094         IF2Arb2         16         0x0000         Interface2 Message Control Register           CAN_BASE+0x098         IF2Mcont         16         0x0000         Interface2 Data A1 Register           CAN_BASE+0x09C         IF2DataA1         16         0x0000         Interface2 Data A2 Register           CAN_BASE+0x000         IF2DataA2         16         0x0000         Interface2 Data B1 Register           CAN_BASE+0x0A4         IF2DataB1         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x0A8         IF2DataB2         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x100         TxRqst1         16         0x0000         Transmission Request 1           CAN_BASE+0x124         NewDat1         16         0x0000         New Data 1           CAN_BASE+0x140         IntPnd1<	CAN_BASE+0x048	IF1DataB2	16	0x0000	Interface1 Data B2 Register
CAN_BASE+0x088         IF2Mask1         16         0xFFFF         Interface2 Mask1 Register           CAN_BASE+0x08C         IF2Mask2         16         0xFFFF         Interface2 Mask2 Register           CAN_BASE+0x090         IF2Arb1         16         0x0000         Interface2 Arbitration1 Register           CAN_BASE+0x094         IF2Arb2         16         0x0000         Interface2 Arbitration2 Register           CAN_BASE+0x098         IF2Mcont         16         0x0000         Interface2 Message Control Register           CAN_BASE+0x09C         IF2DataA1         16         0x0000         Interface2 Data A1 Register           CAN_BASE+0x0A0         IF2DataA2         16         0x0000         Interface2 Data A2 Register           CAN_BASE+0x0A4         IF2DataB1         16         0x0000         Interface2 Data B1 Register           CAN_BASE+0x0A8         IF2DataB2         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x100         TxRqst1         16         0x0000         Transmission Request 1           CAN_BASE+0x104         TxRqst2         16         0x0000         Transmission Request 2           CAN_BASE+0x124         NewDat2         16         0x0000         New Data 2           CAN_BASE+0x144         IntPnd1	CAN_BASE+0x080	IF2ComR	16	0x0001	Interface2 Command Request Register
CAN_BASE+0x08C         IF2Mask2         16         0xFFFF         Interface2 Mask2 Register           CAN_BASE+0x090         IF2Arb1         16         0x0000         Interface2 Arbitration1 Register           CAN_BASE+0x094         IF2Arb2         16         0x0000         Interface2 Arbitration2 Register           CAN_BASE+0x098         IF2Mcont         16         0x0000         Interface2 Message Control Register           CAN_BASE+0x09C         IF2DataA1         16         0x0000         Interface2 Data A1 Register           CAN_BASE+0x0A0         IF2DataA2         16         0x0000         Interface2 Data A2 Register           CAN_BASE+0x0A4         IF2DataB1         16         0x0000         Interface2 Data B1 Register           CAN_BASE+0x0A8         IF2DataB2         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x100         TxRqst1         16         0x0000         Transmission Request 1           CAN_BASE+0x104         TxRqst2         16         0x0000         Transmission Request 2           CAN_BASE+0x124         NewDat1         16         0x0000         New Data 1           CAN_BASE+0x144         IntPnd1         16         0x0000         Interrupt Pending 1           CAN_BASE+0x160         MsgVal1	CAN_BASE+0x084	IF2ComM	16	0x0000	Interface2 Command Mask Register
CAN_BASE+0x090         IF2Arb1         16         0x0000         Interface2 Arbitration1 Register           CAN_BASE+0x094         IF2Arb2         16         0x0000         Interface2 Arbitration2 Register           CAN_BASE+0x098         IF2Mcont         16         0x0000         Interface2 Message Control Register           CAN_BASE+0x09C         IF2DataA1         16         0x0000         Interface2 Data A1 Register           CAN_BASE+0x0A0         IF2DataA2         16         0x0000         Interface2 Data A2 Register           CAN_BASE+0x0A4         IF2DataB1         16         0x0000         Interface2 Data B1 Register           CAN_BASE+0x0A8         IF2DataB2         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x100         TxRqst1         16         0x0000         Transmission Request 1           CAN_BASE+0x104         TxRqst2         16         0x0000         Transmission Request 2           CAN_BASE+0x120         NewDat1         16         0x0000         New Data 1           CAN_BASE+0x144         IntPnd1         16         0x0000         Interrupt Pending 1           CAN_BASE+0x144         IntPnd2         16         0x0000         Interrupt Pending 2           CAN_BASE+0x160         MsgVal1         16	CAN_BASE+0x088	IF2Mask1	16	0xFFFF	Interface2 Mask1 Register
CAN_BASE+0x094         IF2Arb2         16         0x0000         Interface2 Arbitration2 Register           CAN_BASE+0x098         IF2Mcont         16         0x0000         Interface2 Message Control Register           CAN_BASE+0x09C         IF2DataA1         16         0x0000         Interface2 Data A1 Register           CAN_BASE+0x0A0         IF2DataA2         16         0x0000         Interface2 Data A2 Register           CAN_BASE+0x0A4         IF2DataB1         16         0x0000         Interface2 Data B1 Register           CAN_BASE+0x0A8         IF2DataB2         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x100         TxRqst1         16         0x0000         Transmission Request 1           CAN_BASE+0x104         TxRqst2         16         0x0000         Transmission Request 2           CAN_BASE+0x120         NewDat1         16         0x0000         New Data 1           CAN_BASE+0x124         NewDat2         16         0x0000         New Data 2           CAN_BASE+0x140         IntPnd1         16         0x0000         Interrupt Pending 1           CAN_BASE+0x144         IntPnd2         16         0x0000         Message Validation 1	CAN_BASE+0x08C	IF2Mask2	16	0xFFFF	Interface2 Mask2 Register
CAN_BASE+0x098         IF2Mcont         16         0x0000         Interface2 Message Control Register           CAN_BASE+0x09C         IF2DataA1         16         0x0000         Interface2 Data A1 Register           CAN_BASE+0x0A0         IF2DataA2         16         0x0000         Interface2 Data A2 Register           CAN_BASE+0x0A4         IF2DataB1         16         0x0000         Interface2 Data B1 Register           CAN_BASE+0x0A8         IF2DataB2         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x100         TxRqst1         16         0x0000         Transmission Request 1           CAN_BASE+0x104         TxRqst2         16         0x0000         Transmission Request 2           CAN_BASE+0x120         NewDat1         16         0x0000         New Data 1           CAN_BASE+0x124         NewDat2         16         0x0000         New Data 2           CAN_BASE+0x140         IntPnd1         16         0x0000         Interrupt Pending 1           CAN_BASE+0x144         IntPnd2         16         0x0000         Message Validation 1	CAN_BASE+0x090	IF2Arb1	16	0x0000	Interface2 Arbitration1 Register
CAN_BASE+0x09C         IF2DataA1         16         0x0000         Interface2 Data A1 Register           CAN_BASE+0x0A0         IF2DataA2         16         0x0000         Interface2 Data A2 Register           CAN_BASE+0x0A4         IF2DataB1         16         0x0000         Interface2 Data B1 Register           CAN_BASE+0x0A8         IF2DataB2         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x100         TxRqst1         16         0x0000         Transmission Request 1           CAN_BASE+0x104         TxRqst2         16         0x0000         Transmission Request 2           CAN_BASE+0x120         NewDat1         16         0x0000         New Data 1           CAN_BASE+0x124         NewDat2         16         0x0000         New Data 2           CAN_BASE+0x140         IntPnd1         16         0x0000         Interrupt Pending 1           CAN_BASE+0x144         IntPnd2         16         0x0000         Message Validation 1	CAN_BASE+0x094	IF2Arb2	16	0x0000	Interface2 Arbitration2 Register
CAN_BASE+0x0A0         IF2DataA2         16         0x0000         Interface2 Data A2 Register           CAN_BASE+0x0A4         IF2DataB1         16         0x0000         Interface2 Data B1 Register           CAN_BASE+0x0A8         IF2DataB2         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x100         TxRqst1         16         0x0000         Transmission Request 1           CAN_BASE+0x104         TxRqst2         16         0x0000         Transmission Request 2           CAN_BASE+0x120         NewDat1         16         0x0000         New Data 1           CAN_BASE+0x124         NewDat2         16         0x0000         New Data 2           CAN_BASE+0x140         IntPnd1         16         0x0000         Interrupt Pending 1           CAN_BASE+0x144         IntPnd2         16         0x0000         Message Validation 1	CAN_BASE+0x098	IF2Mcont	16	0x0000	Interface2 Message Control Register
CAN_BASE+0x0A4         IF2DataB1         16         0x0000         Interface2 Data B1 Register           CAN_BASE+0x0A8         IF2DataB2         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x100         TxRqst1         16         0x0000         Transmission Request 1           CAN_BASE+0x104         TxRqst2         16         0x0000         Transmission Request 2           CAN_BASE+0x120         NewDat1         16         0x0000         New Data 1           CAN_BASE+0x124         NewDat2         16         0x0000         New Data 2           CAN_BASE+0x140         IntPnd1         16         0x0000         Interrupt Pending 1           CAN_BASE+0x144         IntPnd2         16         0x0000         Interrupt Pending 2           CAN_BASE+0x160         MsgVal1         16         0x0000         Message Validation 1	CAN_BASE+0x09C	IF2DataA1	16	0x0000	Interface2 Data A1 Register
CAN_BASE+0x0A8         IF2DataB2         16         0x0000         Interface2 Data B2 Register           CAN_BASE+0x100         TxRqst1         16         0x0000         Transmission Request 1           CAN_BASE+0x104         TxRqst2         16         0x0000         Transmission Request 2           CAN_BASE+0x120         NewDat1         16         0x0000         New Data 1           CAN_BASE+0x124         NewDat2         16         0x0000         New Data 2           CAN_BASE+0x140         IntPnd1         16         0x0000         Interrupt Pending 1           CAN_BASE+0x144         IntPnd2         16         0x0000         Interrupt Pending 2           CAN_BASE+0x160         MsgVal1         16         0x0000         Message Validation 1	CAN_BASE+0x0A0	IF2DataA2	16	0x0000	Interface2 Data A2 Register
CAN_BASE+0x100         TxRqst1         16         0x0000         Transmission Request 1           CAN_BASE+0x104         TxRqst2         16         0x0000         Transmission Request 2           CAN_BASE+0x120         NewDat1         16         0x0000         New Data 1           CAN_BASE+0x124         NewDat2         16         0x0000         New Data 2           CAN_BASE+0x140         IntPnd1         16         0x0000         Interrupt Pending 1           CAN_BASE+0x144         IntPnd2         16         0x0000         Interrupt Pending 2           CAN_BASE+0x160         MsgVal1         16         0x0000         Message Validation 1	CAN_BASE+0x0A4	IF2DataB1	16	0x0000	Interface2 Data B1 Register
CAN_BASE+0x104         TxRqst2         16         0x0000         Transmission Request 2           CAN_BASE+0x120         NewDat1         16         0x0000         New Data 1           CAN_BASE+0x124         NewDat2         16         0x0000         New Data 2           CAN_BASE+0x140         IntPnd1         16         0x0000         Interrupt Pending 1           CAN_BASE+0x144         IntPnd2         16         0x0000         Interrupt Pending 2           CAN_BASE+0x160         MsgVal1         16         0x0000         Message Validation 1	CAN_BASE+0x0A8	IF2DataB2	16	0x0000	Interface2 Data B2 Register
CAN_BASE+0x120         NewDat1         16         0x0000         New Data 1           CAN_BASE+0x124         NewDat2         16         0x0000         New Data 2           CAN_BASE+0x140         IntPnd1         16         0x0000         Interrupt Pending 1           CAN_BASE+0x144         IntPnd2         16         0x0000         Interrupt Pending 2           CAN_BASE+0x160         MsgVal1         16         0x0000         Message Validation 1	CAN_BASE+0x100	TxRqst1	16	0x0000	Transmission Request 1
CAN_BASE+0x124         NewDat2         16         0x0000         New Data 2           CAN_BASE+0x140         IntPnd1         16         0x0000         Interrupt Pending 1           CAN_BASE+0x144         IntPnd2         16         0x0000         Interrupt Pending 2           CAN_BASE+0x160         MsgVal1         16         0x0000         Message Validation 1	CAN_BASE+0x104	TxRqst2	16	0x0000	Transmission Request 2
CAN_BASE+0x140         IntPnd1         16         0x0000         Interrupt Pending 1           CAN_BASE+0x144         IntPnd2         16         0x0000         Interrupt Pending 2           CAN_BASE+0x160         MsgVal1         16         0x0000         Message Validation 1	CAN_BASE+0x120	NewDat1	16	0x0000	New Data 1
CAN_BASE+0x144         IntPnd2         16         0x0000         Interrupt Pending 2           CAN_BASE+0x160         MsgVal1         16         0x0000         Message Validation 1	CAN_BASE+0x124	NewDat2	16	0x0000	New Data 2
CAN_BASE+0x160 MsgVal1 16 0x0000 Message Validation 1	CAN_BASE+0x140	IntPnd1	16	0x0000	Interrupt Pending 1
	CAN_BASE+0x144	IntPnd2	16	0x0000	Interrupt Pending 2
CAN_BASE+0x164 MsgVal2 16 0x0000 Message Validation 2	CAN_BASE+0x160	MsgVal1	16	0x0000	Message Validation 1
	CAN_BASE+0x164	MsgVal2	16	0x0000	Message Validation 2

(\*: 0b0000.0000.r000.0000 : r = actual value at pin CAN\_RX)

# 10.2.3 Registers

# 10.2.3.1 CAN Control Register

						CA	AN_BASE+0x000
15	14	13	12	11	10	9	8
Reserved							
7	6	5	4	3	2	1	0
Test	CCE	DAR	Reserved	EIE	SIE	IE	Init

Bits	Type	Function
7	R/W	Test Mode Enable, '1': Test mode. '0': normal mode.
6	R/W	Configuration Change Enable
		'1': The CPU has write access to the Bit Timing Register (while Init = '1').
		'0': The CPU has no write access to the Bit Timing Register.
5	R/W	Disable Automatic Retransmission
		'1': Automatic Retransmission disabled.
		'0': Automatic Retransmission of Distributed message enabled.
4	-	Reserved
3	R/W	Error Interrupt Enable
		'1': Enabled - a change in the BOff or Ewarn in the Status Register generates an interrupt.
		'0': Disabled – No Error Status Interrupt will be generated
2	R/W	Status-change Interrupt Enable
		'1': Enabled - successful completion of a message transfer or a detection of CAN bus error.



		'0': Disabled - No Status Change Interrupt will be generated
1	R/W	Module Interrupt Enable
		'1': Enabled
		'0': Disabled
0	R/W	Internal Initialization Pending
		'1': Initialization is started.
		'0': Normal Operation

# 10.2.3.2 CAN Status Register

CAN BASE+0x0	04
--------------	----

						C/	HIN_DASETUX
15	14	13	12	11	10	9	8
Reserved							
7	6	5	4	3	2	1	0
Boff	Ewarn	EPass	RxOk	TxOk	LEC		

Bits	Type	Function
7	R	Bus Off Status
		'1': The CAN module in busoff status.
		'0': The CAN module is not busoff
6	R	Error Warning Status
		'1': At least one of the error counters in the EML(Error Management Logic) has reached the
		error warning limit of 96.
		'0': Both error counters are below the error warning limit of 96
5	R	Error Passive
		'1': The CAN Core is in the error passive state as defined in the CAN Specification
		'0': The CAN Core is error active
4	R	Received a Message Successfully
		'1': Since this bit was last reset(to zero) by the ARM Core, a message has been successfully
		received(independent of the result of acceptance filtering)
		'0': Since the ARM Core last reset this bit, no message has been successfully received. This
		bit is never reset by the CAN Core
3	R	Transmitted a Message Successfully
		'1': Since this bit was last reset(to zero) by the ARM Core, a message has been successfully
		transmitted(error free and acknowledged by at least one other node).
		'0': Since the ARM Core last reset this bit, no message has been successfully transmitted.
		This bit is never reset by the CAN Core
2:0	R	Last Error Code (See a CAN Specification for more information)
		"000" : No Error
		"001" : Stuff Error
		"010" : Form Error
		"011" : Acknowledgment Error
		"100" : Bit1 Error "101" : Bit0 Error
		"110" : CRC Error

(A read access to the Status Register clears the Status Interrupt.)

# 10.2.3.3 CAN Error Counting Register

CAN\_BASE+0x008

15	14	13	12	11	10	9	8
Receive error passive	Receive Error	Count					
7	6	5	4	3	2	1	0
Transmit Error Count							

Bits	Type	Function
15	R	Receive Error Passive
		'1': The receive error counter has reached the error passive level as defined in the CAN
		Specification
		'0': The receive error counter is below the error passive level.
14:8	R	Receive Error Count



		Actual state of the Receive Error Counter Value : 0 ~ 127
7:0	R	Transmit Error Count
		Actual state of the Transmit Error Counter Value : 0 ~ 255

# 10.2.3.4 CAN Bit Timing Register

CAN\_BASE+0x00C

15	14	13	12	11	10	9	8
Reserved	TSeg2			TSeg1			
7	6	5	4	3	2	1	0
SWJ		BRP					

Bits	Type	Function
14:12	WC	Timing Segment 2 The timing segment after the sample point, valid value for TSeg2 are [07]. The actual Interpretation by the hardware of this value is such that one more than the value programmed here is used.
11:8	WC	Timing Segment 1 The timing segment before the sample point, valid value for TSeg1 are [115]. The actual Interpretation by the hardware of this value is such that one more than the value programmed here is used.
7:6	WC	(Re)Synchronous Jump Width Valid values are 0~3. The actual Interpretation by the hardware of this value is such that one more than the value programmed here is used.
5:0	WC	Baud Rate Prescaler The value by which the oscillator frequency is divided for generating the bit time quanta. The bit time is built up from a multiple of this quanta. Valid values for the Baud Rate Prescaler are 0~63. The actual Interpretation by the hardware of this value is such that one more than the value programmed here is used.

(WC: Write access only if Configuration Change Enable)

# 10.2.3.5 CAN Interrupt Register

CAN BASE+0x010

						O,	" 1_D/ 10_ 10/10
15	14	13	12	11	10	9	8
Intld 15 – 8							
7	6	5	4	3	2	1	0
Intld 7 – 0							

Bits	Type _F	unction
15:0	R Ir	iterrupt Identifier
	0:	x0000 : No Interrupt is pending.
	0:	x0001 ~ 0x0020 : Number of Message Object which caused the interrupt.
	0:	x0021 ~ 0x7FFF : Unused.
	0:	x8000 : Status Interrupt.
	0:	x8001 ~ 0xFFFF: Unused

# 10.2.3.6 CAN Test Register

CAN\_BASE+0x014

						•		
15	14	13	12	11	10	9	8	
Reserved								
7	6	5	4	3	2	1	0	
Rx	Tx1	Tx0	Loop Back	Silent	Basic	Reserved		

Bits	Type	Function
7	R	Receive
		Monitors the actual value of the CAN_RX Pin.
6:5	WT	Control of CAN_TX pin
		"00": Reset value, CAN_TX is controlled by the CAN Core.



		"01": Sample Point can be monitored at CAN_TX pin.
		"10": CAN_TX pin drives a dominant('0') value.
		"11": CAN_TX pin drives a recessive('1') value.
4	WT	Loop Back Mode(Receiving its own transmission)
		'1': Loop-back mode is enabled.
		'0': Loop-back mode is disabled.
3	WT	Silent Mode(Never Send Dominant Bits)
		'1': The module is in Silent Mode.
		'0': Normal Operation.
2	WT	Basic Mode(Message-RAM is not available)
		'1': IF1 registers are used as transmit buffers and IF2 registers are used as receive buffer.
		'0': Regular mode. Message-RAM is used as transmit and receive buffer.

(WT: Write access only if Test Mode enabled)

# 10.2.3.7 CAN BRP Extension Register

		S				CA	AN_BASE+0x018
15	14	13	12	11	10	9	8
Reserved							
7	6	5	4	3	2	1	0
Reserved				BRPE			

				_		_	
Bits	Type	Function	4		V		
3:0	WC	Baud Rate Prescaler Extension					

# 10.2.3.8 CAN Enable Register

Busy

Reserved

	8					CA	N_BASE+0x01C
15	14	13	12	11	10	9	8
Reserved							
7	6	5	4	3	2	1	0
Reserved							En

Bits	Type	Function
0	R/W	'1': CAN module is enabled
		(Enable the clock "PCLK" and "BCLK").
		'0' : Disable.

# 10.2.3.9 Interface X Command Request Register

Message Number

Reserved

CAN\_BASE+0x020 / 0x080
2 11 10 9 8

Bits	Type	Function
15	R/W	Bus Flag (Write access only when Busy = '0')
		'1': set to one when writing to the IFx Command Request Register.
		'0': reset to zero when read/write action has finished.
5:0	R/W	Message Number 1 to 32
		A Message Object in the Message RAM is selected for data transfer.
		33 to 63
		Not a Valid Message Number.

# 10.2.3.10 Interface X Command Mask Register

						CAN_BASE+0x024 / 0x084			
15	14	13	12	11	10	9	8		
Reserved									



7	6	5	4	3	2	1	0
WR/RD	Mask	Arb	Control	ClrIntPnd	TxRqst/ NewDat	DataA	DataB

Bits	Type	Function
7	R/W	Read/Write '1': Write data from the selected Interface Registers to the Message Object addressed by the Command Request Register. '0': Read data from the Message Object addressed by the Command Request Register into the selected Interface Register.
6	R/W	Access Interface X Mask Bits '1': read/write Identifier Mask + Mdir + MXtd. '0': Mask bits unchanged.
5	R/W	Access Interface X Arbitration  '1' : read/write Identifier + Dir + Xtd + MsgVal.  '0' : Arbitration bits unchanged.
4	R/W	Access Interface X Message Control Bits '1' : read/write control bits. '0' : Control Bits unchanged.
3	R/W	Clear(Reset) Interface X Clear Interrupt Pending '1': clear IntPnd bit when reading the Message Object. '0': IntPnd bit remains unchanged when reading the Message Object.
2	R/W	Access Transmission Request / New Data Bit WR/RD = Write '1': set TxRqst bit. '0': TxRqst bit unchanged. WR/RD = Read '1': reset NewDat bit. '0': NewDat bit unchanged.
1	R/W	Access Data Byte 0~3 '1': read/write Data Byte 0~3. '0': Data Byte 0~3 unchanged.
0	R/W	Access Data Byte 4~7 '1': read/write Data Byte 4~7. '0': Data Byte 4~7 unchanged.

# 10.2.3.11 Interface X Mask 1 Register

CAN BASE+0x028 / 0x088

						CAIN_D	ASE+UXUZO	/ UXU
15	14	13	12	11	10	9	8	
Msk15	Msk14	Msk13	Msk12	Msk11	Msk10	Msk9	Msk8	
7	6	5	4	3	2	1	0	
Msk7	Msk6	Msk5	Msk4	Msk3	Msk2	Msk2	Msk0	

# SEE THE EXPLANATION OF 10.2.3.12

# 10.2.3.12 Interface X Mask 2 Register

CAN\_BASE+0x02C / 0x08C

15	14	13	12	11	10	9	8
MXtd	Mdir	Reserved	Msk28	Msk27	Msk26	Msk25	Msk24
7	6	5	4	3	2	1	0
Msk23	Msk22	Msk21	Msk20	Msk19	Msk18	Msk17	Msk16

MASK28-0 : Identifier Mask(Read/Write access)

Msk28-18 : Identifier Mask Standard Message Msk28-0 : Identifier Mask Extended Message.

'1': The corresponding identifier bit is used for acceptance filtering.

'0": The corresponding bit in the identifier of the message object cannot inhibit the match in the acceptance filtering.

Bits	Type	Function
DIIS	rype	FullCuon



15	R/W	Mask Extended Identifier
		'1': The extended identifier bit(IDE) is used for acceptance filtering.
		'0': The extended identifier bit(IDE) has no effect on the acceptance filtering
14	R/W	Mask Message Direction
		'1': The message direction bit(RTR) is used for acceptance filtering.
		'0': The message direction bit(RTR) has no effect on the acceptance filtering

# 10.2.3.13 Interface X Arbitration 1 Register

#### CAN BASE+0x030 / 0x090

15	14	13	12	11	10	9	8
ID15	ID14	ID13	ID12	ID11	ID10	ID9	ID8
7	6	5	4	3	2	1	0
ID7	ID6	ID5	ID4	ID3	ID2	ID1	ID0

#### SEE THE EXPLANATION OF 10.2.3.14

# 10.2.3.14 Interface X Arbitration 2 Register

CAN BASE+0x034 / 0x094

15	14	13	12	11	10	9	8
MsgVal	Xtd	Dir	ID28	ID27	ID26	ID25	ID24
7	6	5	4	3	2	1	0
ID23	ID22	ID21	ID20	ID19	ID18	ID17	ID16

# ID28-0 : Identifier Message(Read/Write access)

ID28-18: Identifier Standard Message ID28-0: Identifier Extended Message.

Bits	Type	Function
15	R/W	Message Validation
		'1': The Message Object is configured and should be considered by the Message Handler.
		'0': The Message Object is ignored by the Message Handler.
14	R/W	Extended Identifier
		'1': The extended Identifier(19 bit) will be used for this Message Object.
		'0': The Standard Identifier(11 bit) will be used for this Message Object.
13	R/W	Message Direction
		'1': Transmit
		'0': Receive

# 10.2.3.15 Interface X Message Control Register

CAN BASE+0x038 / 0x098

15	14	13	12	11	10	9	8
NewDat	MsgLst	IntPnd	UMask	TxIE	RxIE	RmtEn	TxRqst
7	6	5	4	3	2	1	0
EoB	Reserved			DLC(3-0)			

Bits	Type	Function
15	R/W	New Data
		'1': The Message Handler or the CPU has written new data into the data portion of this
		Message Object.
		'0': No new data has been written into the data portion of this Message Object by the
		Message Handler since last time this flag was cleared by the CPU.
14	R/W	Message Lost(Only valid for direction = receive)
		'1': The Message Handler Stored a new message into this object when NewDat was still
		set, the CPU has lost a message.
		'0': No message lost since last time this bit was reset by the CPU.
13	R/W	Interrupt Pending
		'1': This message object has generated an interrupt.
		'0': No interrupt was generated by this message object since last time the CPU has
		cleared this flag.



12	R/W	Use Identifier Mask
		'1' : Use Identifier Mask.
		'0' : Identifier Mask ignored.
11	R/W	Transmit Interrupt Enable
		'1': An interrupt is generated after a successful transmission of a frame.
		'0': No interrupt is generated after a successful transmission of a frame.
10	R/W	Receive Interrupt Enable
		'1': An interrupt is generated after a successful reception of a frame.
		'0': No interrupt is generated after a successful reception of a frame.
9	R/W	Remote Enable
		'1': At the reception of a Remote Frame, TxRqst is set.
		'0': At the reception of a Remote Frame, TxRqst is left unchanged.
8	R/W	Transmit Request
		'1': The transmit of this Message Object is requested and is not yet done.
		'0': This Message Object is not waiting for transmission.
7	R/W	End of Buffer(For normal operation, this bit must be set to one)
		'1': FIFO operation – Last Message Object of FIFO Buffer.
		'0': FIFO operation – If MsgVal is set, this Message Object stores the Next Message.
3:0	R/W	Data Length Code
		Number of Data Bytes
		"0000": 0
		"0001": 1
		"0010": 2
		"0011": 3
		"0100": 4
		"0101": 5 "0440": 0
		"0110": 6 "0111": 7
		"1000": 8

# 10.2.3.16 Interface X Data A1 Register

CAN\_BASE+0x03C / 0x09C

15	14	13	12	11	10	9	8
Data1							
7	6	5	4	3	2	1	0
Data0							

Bits	Type	Function
15:8	R/W	Data1 : Shift Register Byte 1
7:0	R/W	Data0 : Shift Register Byte 0

# 10.2.3.17 Interface X Data A2 Register

CAN\_BASE+0x040 / 0x0A0

15	14	13	12	11	10	9	8
Data3							
7	6	5	4	3	2	1	0
Data2							

Bits	Type	Function
15:8	R/W	Data3 : Shift Register Byte 3
7:0	R/W	Data2 : Shift Register Byte 2

# 10.2.3.18 Interface X Data B1 Register

CAN BAS	ここてしくしょく	$I \cap V \cap A A$

						O,,	_
15	14	13	12	11	10	9	8
Data5							
7	6	5	4	3	2	1	0



D	ata	14

Bits	Type	Function
15:8	R/W	Data5 : Shift Register Byte 5
7:0	R/W	Data4 : Shift Register Byte 4

#### 10.2.3.19 Interface X Data B2 Register

CAN BASE+0x048 / 0x0A8

						CAN_DAS	ETUXU40 / UXU
15	14	13	12	11	10	9	8
Data7							
7	6	5	4	3	2	1	0
Data6							

Bits	Type	Function	
15:8	R/W	Data7 : Shift Register Byte 7	
7:0	R/W	Data6 : Shift Register Byte 6	

## 10.2.3.20 Transmission Request 1 Register

CAN BASE+0x100

15	14	13	12	11	10	9	8	
TxRqst 16 – 9								
7	6	5	4	3	2	1	0	
TxRast 8 – 1								

SEE THE EXPLANATION OF [10.2.3.21]

# 10.2.3.21 Transmission Request 2 Register

CAN BASE+0x104

						O,	"1_D/ (OL : 0X )
15	14	13	12	11	10	9	8
TxRqst 32 -	25						
7	6	5	4	3	2	1	0
TuDest 04	47						

TxRqst 24 – 17
TxRqst 32 –1 : Transmission Request Bits(Read-Only)

'1': This transmission of this message object is requested and is not yet done.

'0': This message object is not waiting for transmission.

# 10.2.3.22 New Data I Register

$\sim$ $\sim$ $\sim$ $\sim$ $\sim$	BASE+0x120
( . A N	BASE+UVI /II

15	14	13	12	11	10	9	8
New Data 16	S <b>–</b> 9						
7	6	5	4	3	2	1	0
New Data 8	<b>–</b> 1						

SEE THE EXPLANATION OF [10.2.3.23]

### 10.2.3.23 New Data 2 Register

CAN BASE+0x124

15	14	13	12	11	10	9	8
New Data 32	2 – 25						
7	6	5	4	3	2	1	0
New Data 24	1 _ 17						

NewDat 32 – 1 : New Data Bits(Read-only)

- '1': The Message Handler or the CPU has written new data into the data portion of this Message Object.
- '0': No new data has been written into the data portion of this Message Object by the Message Handler since last time this flag was cleared by the CPU.



## 10.2.3.24 Interrupt Pending 1 Register

							CAN_BASE	=+0x14
15	14	13	12	11	10	9	8	
IntPnd 16 -	- 9							
7	6	5	4	3	2	1	0	
1.15.10	4							

SEE THE EXPLANATION OF [10.2.3.25]

#### 10.2.3.25 Interrupt Pending 2 Register

							CAN_BAS	SE+0x1
15	14	13	12	11	10	9	8	
IntPnd 3	2 – 25							
7	6	5	4	3	2	1	0	
IntPnd 2	4 – 17							

IntPnd 32 – 1 : Interrupt Pending(Read-Only)

'1': This Message Object has generated an interrupt.

'0': No interrupt was generated by this message object since last time the CPU has cleared this flag.

#### 10.2.3.26 Message Valid 1 Register

	O	C					CAN_BASE	E+0x160
15	14	13	12	11	10	9	8	
MsgVal 16	<b>-</b> 9							
7	6	5	4	3	2	1	0	
MsgVal 8 -	- 1							

SEE THE EXPLANATION OF [10.2.3.27]

#### 10.2.3.27 Message Valid 2 Register

						CA	AN_BASE+0x	(164
15	14	13	12	11	10	9	8	
MsgVal 32 –	25							
7	6	5	4	3	2	1	0	
MsgVal 24 -	17							

MsgVal 32 – 1 : Message Validation(Read-Only)

'1': This Message Object is configured and should be considered by the Message Handler.


'0': This Message Object is ignored by the Message Handler.

NOTE: CAN Data Read/Write Timing Diagram




# **Data Write into CAN Block**

 Two consecutive write accesses must have a minimum distance of 12 PCLK period(2 CAN clock).

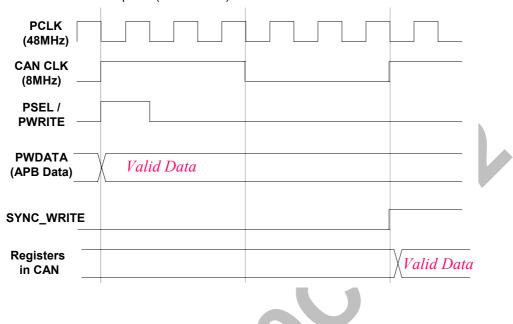

# **Data Read from CAN Block**

- A read access to CAN module with APB interface must be performed as "**Double Read**".
- Two consecutive read accesses must have a minimum distance of 13 PCLK period(2 CAN clock + 1 PCLK).

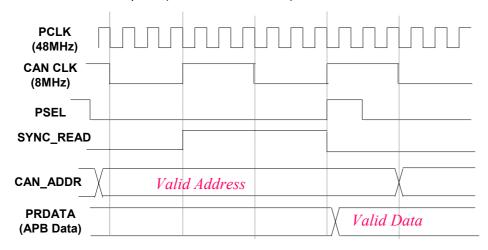

NOTE: For more information about CAN used in HMS30C7202 and its application, please refer "CAN User Manual of HMS30C7202 for Software Engineer" published by SP-SoC team in Hynix Semiconductor Inc. .



#### 10.3 **GPIO**

This document describes the Programmable Input /Output module (PIO). This is an AMBA slave module that connects to the Advanced Peripheral Bus (APB). For more information about AMBA, please refer to the AMBA Specification (ARM IHI 0001).

The I/O status is not changed during "Sleep mode" or "Deep Sleep mode".

# 10.3.1 External Signals

Pin Name	Type	Description
KSCANI [7:0]	I/O	GPIO PORTA [15:8]
KSCANO [7:0]	I/O	GPIO PORTA [7:0]
PORTB [11:6]	I/O	GPIO PORTB [11:6]
		PORTB[11:10] : dedicated to the external interrupt of PMU
nUDCD0	I/O	GPIO PORTB [5]
nUDSR0	I/O	GPIO PORTB [4]
nURTS0	I/O	GPIO PORTB [3]
nUCTS0	I/O	GPIO PORTB [2]
nUDTR0	I/O	GPIO PORTB [1]
nURING0	I/O	GPIO PORTB [0]
nRCS3	I/O	GPIO PORTC [10]
nRCS2	I/O	GPIO PORTC [9]
nDMAACK	I/O	GPIO PORTC [8]
nDMAREQ	I/O	GPIO PORTC [7]
PWM1	I/O	GPIO PORTC [6]
PWM0	I/O	GPIO PORTC [5]
PS2CK	I/O	GPIO PORTC [4]
PS2D	I/O	GPIO PORTC [3]
CANRx0	I/O	GPIO PORTC [2]
CANTx0	I/O	GPIO PORTC [1]
TimerOut	I/O	GPIO PORTC [0]
LBLEN	I/O	GPIO PORTD [8]
LD [15:8]	I/O	GPIO PORTD [7:0]
RA [24]	I/O	GPIO PORTE [24]
CANTx1	I/O	GPIO PORTE [23]
CANRx1	I/O	GPIO PORTÉ [22]
MMCCLK	1/0	GPIO PORTE [21]
MMCCD	1/0	GPIO PORTE [20]
MMCDAT	1/0	GPIO PORTE [19]
MMCCMD	1/0	GPIO PORTE [18]
nRW3	I/O	GPIO PORTE [17]
nRW2	I/O	GPIO PORTE [16]
RD [31:16]	1/0	GPIO PORTE [15:0]

## 10.3.2 Registers

Address	Name	Width	Default	Description
0x8002.3000	ADATA	16	0x0000	GPIO PORTA Data register
0x8002.3004	ADIR	16	0xFFFF	GPIO PORTA Data Direction register
0x8002.3008	AMASK	16	0x0000	GPIO PORTA Interrupt Mask register
0x8002.300C	ASTAT	16	0x0000	GPIO PORTA Interrupt Status register
0x8002.3010	AEDGE	16	0x0000	GPIO PORTA Edge Mode register
0x8002.3014	ACLR	16	0x0000	GPIO PORTA Clear register
0x8002.3018	APOL	16	0x0000	GPIO PORTA Polarity register
0x8002.301C	AEN	16	0x0000	GPIO PORTA Enable register
0x8002.3020	BDATA	12	0x000	GPIO PORTB Data register
0x8002.3024	BDIR	12	0xFFF	GPIO PORTB Data Direction register



0x8002.3028	BMASK	12	0x000	GPIO PORTB Interrupt Mask register
0x8002.302C	BSTAT	12	0x000	GPIO PORTB Interrupt Status register
0x8002.3030	BEDGE	12	0x000	GPIO PORTB Edge Moderegister
0x8002.3034	BCLR	12	0x000	GPIO PORTB Clear register
0x8002.3038	BPOL	12	0x000	GPIO PORTB Polarity register
0x8002.303C	BEN	6	0x00	GPIO PORTB Enable register
0x8002.3040	CDATA	11	0x000	GPIO PORTC Data register
0x8002.3044	CADIR	11	0x7FF	GPIO PORTC Data Direction register
0x8002.3048	CMASK	11	0x000	GPIO PORTC Interrupt Mask register
0x8002.304C	CSTAT	11	0x000	GPIO PORTC Interrupt Status register
0x8002.3050	CEDGE	11	0x000	GPIO PORTC Edge Mode register
0x8002.3054	CCLR	11	0x000	GPIO PORTC Clear register
0x8002.3058	CPOL	11	0x000	GPIO PORTC Polarity register
0x8002.305C	CEN	11	0x000	GPIO PORTC Enable register
0x8002.3060	DDATA	9	0x000	GPIO PORTD Data register
0x8002.3064	DDIR	9	0x1FF	GPIO PORTD Data Direction register
0x8002.3068	DMASK	9	0x000	GPIO PORTD Interrupt Mask register
0x8002.306C	DSTAT	9	0x000	GPIO PORTD Interrupt Status register
0x8002.3070	DEDGE	9	0x000	GPIO PORTD Edge Mode register
0x8002.3074	DCLR	9	0x000	GPIO PORTD Clear register
0x8002.3078	DPOL	9	0x000	GPIO PORTD Polarity register
0x8002.307C	DEN	9	0x000	GPIO PORTD Enable register
0x8002.3080	EDATA	25	0x0000000	GPIO PORTE Data register
0x8002.3084	EDIR	25	0x1FFFFFF	GPIO PORTE Data Direction register
0x8002.3088	EMASK	25	0x0000000	GPIO PORTE Interrupt Mask register
0x8002.308C	ESTAT	25	0x0000000	GPIO PORTE Interrupt Status register
0x8002.3090	EEDGE	25	0x0000000	GPIO PORTE Edge Mode register
0x8002.3094	ECLR	25	0x0000000	GPIO PORTE Clear register
0x8002.3098	EPOL	25	0x0000000	GPIO PORTE Polarity register
0x8002.309C	EEN	25	0x0000000	GPIO PORTE Enable register
0x8002.30A0	TICTMDR	1	0x0	GPIO Tic Test Mode register
0x8002.30A4	AMULSEL	16	0x0000	GPIO PORTA Multi-function Select register
0x8002.30A8	SWAP	1	0x0	SWAP Pin Configuration register

# 10.3.2.1 ADATA

0x8002.3000

													0/1000 <b>=</b> .00
15 14	13 12	11	10	9	8	7	6	5	4	3	2	1	0
ADATA, AD	IR, AMASK, A	STAT, A	EDGE,	ACLR,	APOL,	AEN [1	5:0]						

Bits	Type	Function
16	R/W	Values written to this register will be output on port [A,B,C,D,E] pins if the corresponding data direction bits are set Low (port output). Values read from this register reflect the external state of port [A,B,C,D,E] not necessarily the value written to it. All bits are cleared by a system reset. When the PIO pin is defined as input, this input can be an interrupt source with register setting.
		On reads, the Data Register contains the current status of correspondent port pins, whether they are configured as input or output. Writing to a Data Register only affects the pins that are configured as outputs. All PIO input pins can be used as interrupt source with enabled interrupt mask register bit. These interrupt sources can be selected as active HIGH/LOW, EDGE/LEVEL trigger mode.

# 10.3.2.2 ADIR

Bits	Type	Function
16	R/W	Bits set in this register will select the corresponding pin in port [A,B,C,D,E] to become an
		input, clearing a bit sets the pin to output. All bits are set by a system reset.



#### 10.3.2.3 AMASK

0x8002.3008

Bits	Type	Function
16	R/W	Bits set in this register will select the corresponding pin to become an interrupt source. All bits
		are cleared by a system reset.
		0 = disable interrupt (default)
		1 = enable interrupt

#### 10.3.2.4 ASTAT

0x8002.300C

Bits Type	Function
16 RO	All PIO signals can be used as interrupt sources according to the settings. Each port has the following registers and the interrupt signals to interrupt controller. Interrupt controller receives active HIGH, level mode interrupt sources only. But PIO block can receive not only active HIGH or active LOW, but also level or edge mode signals. Then it interprets and sends interrupt request to the interrupt controller. All bits can be controlled separately. Values in this 16-bit read-only register represents that the interrupt requests are pending on corresponding pins. All bits are cleared by a system reset.  0 = no interrupt request 1 = interrupt pending (masked interrupt is always 0)

#### 10.3.2.5 AEDGE

0x8002.3010

Bits	Type	Function						
16	R/W	Bits set in this 16-bit read/write register will select the corresponding pin to become an edge						
		mode interrupt source. All bits are cleared by a system reset.						
		0 = level mode (default)						
		1 = edge mode						

# 10.3.2.6 ACLR

0x8002.3014

Bits	Type	Function
16	WO	Bits set in this 16-bit write-only register will clear the stored interrupt request of corresponding bit in edge mode. All bits are automatically cleared after written.  0 = no action (default)  1 = clear interrupt source (self reset)

#### 10.3.2.7 APOL

0x8002.3018

Bits	Type	Function
16	R/W	Bits set in this 16-bit read/write register will select the corresponding pin to become an active LOW mode interrupt source. All bits are cleared by a system reset. After accessing this register, the Edge Mode register should be cleared with the Clear register.  0 = active HIGH mode 1 = active LOW mode

# 10.3.2.8 GPIO PORT A Enable Register

15	14	13	12	11	10	9	8
PORTA15	PORTA14	PORTA13	PORTA12	PORTA11	PORTA10	PORTA9	PORTA8
7	6	5	4	3	2	1	0
PORTA7	PORTA6	PORTA5	PORTA4	PORTA3	PORTA2	PORTA1	PORTA0

0x8002.301C

Bits	Type	Function
15	R/W	GPIO PORT A[15] Enable 1: PORT A[15] 0: KSCAN0[7]



14	R/W	GPIO PORT A[14] Enable 1: PORT A[14] 0: KSCAN0[6]
13	R/W	GPIO PORT A[13] Enable 1: PORT A[13] 0: KSCAN0[5]
12	R/W	GPIO PORT A[12] Enable 1: PORT A[12] 0: KSCAN0[4]
11	R/W	GPIO PORT A[11] Enable 1: PORT A[11] 0: KSCAN0[3]
10	R/W	GPIO PORT A[10] Enable 1: PORT A[10] 0: KSCAN0[2]
9	R/W	GPIO PORT A[9] Enable 1: PORT A[9] 0: KSCAN0[1]
8	R/W	GPIO PORT A[8] Enable 1: PORT A[8] 0: KSCAN0[0]
7	R/W	GPIO PORT A[7] Enable 1: PORT A[7] 0: KSCANI[7]
6	R/W	GPIO PORT A[6] Enable 1: PORT A[6] 0: KSCANI[6]
5	R/W	GPIO PORT A[5] Enable 1: PORT A[5] 0: KSCANI[5]
4	R/W	GPIO PORT A[4] Enable 1: PORT A[4] 0: KSCANI[4]
3	R/W	GPIO PORT A[3] Enable 1: PORT A[3] 0: KSCANI[3]
2	R/W	GPIO PORT A[2] Enable 1: PORT A[2] 0: KSCANI[2]
1	R/W	GPIO PORT A[1] Enable 1: PORT A[1] 0: KSCANI[1]
0	R/W	GPIO PORT A[0] Enable 1: PORT A[0] 0: KSCANI[0]

#### 10.3.2.9 BDATA

10.3.2.10 BDIR

10.3.2.11 BMASK

0x8002.3028 0x8002.302C

0x8002.3024

10.3.2.12 BSTAT 10.3.2.13 BEDGE

0x8002.3030

10.3.2.14 BCLK

0x8002.3034

10.3.2.15 BPOL

0x8002.3038

0x8002.303C

#### 10.3.2.16 GPIO PORT B Enable Register

7	6	5	4	3	2	1	0
Reserve	ed	PORTB5	PORTB4	PORTB3	PORTB2	PORTB1	PORTB0

Bits Function Type GPIO PORT B[5] Enable 1: PORT B[5] 0: nUDCD R/W R/W GPIO PORT B[4] Enable 1: PORT B[4] 0: nUDSR 3 R/W GPIO PORT B[3] Enable 1: PORT B[3] 0: nURTS GPIO PORT B[2] Enable 1: PORT B[2] R/W 0: nUCTS R/W GPIO PORT B[1] Enable 1: PORT B[1] 0: nUDTR 0 R/W GPIO PORT B[0] Enable 1: PORT B[0] 0: nURING

#### 10.3.2.17 CDATA

0x8002.3040

10 9 8 7 6 5 4 3 2 1 0

CDATA, CDIR, CMASK, CSTAT, CEDGE, CCLR, CPOL, CEN

10.3.2.18 CDIR



10.3.2.19 CMASK	
10.5.2.17 CMISK	0x8002.3048
10.3.2.20 CBSTAT	0x8002.304C
10.3.2.21 CEDGE	0x0002.304C
10.2.2.22 CCLV	0x8002.3050
10.3.2.22 CCLK	0x8002.3054
10.3.2.23 CPOL	
10 2 2 4 CDIO DODE CE 11 D	0x8002.3058

#### 10.3.2.24 GPIO PORT C Enable Register

15	14	13	12	11	10	9	8
		Reserved			PORTC10	PORTC9	PORTC8
7	6	5	4	3	2	1	0

0x8002.305C

Bits	Type	Function
10	R/W	GPIO PORT C[10] Enable 1: PORT C[10] 0: nRCS3
9	R/W	GPIO PORT C[9] Enable 1: PORT C[9] 0: nRCS2
8	R/W	GPIO PORT C[8] Enable 1: PORT C[8] 0: nDMAACK
7	R/W	GPIO PORT C[7] Enable 1: PORT C[7] 0: nDMAREQ
6	R/W	GPIO PORT C[6] Enable 1: PORT C[6] 0: PWM1
5	R/W	GPIO PORT C[5] Enable 1: PORT C[5] 0: PWM0
4	R/W	GPIO PORT C[4] Enable 1: PORT C[4] 0: PS2CK
3	R/W	GPIO PORT C[3] Enable 1: PORT C[3] 0: PS2D
2	R/W	GPIO PORT C[2] Enable 1: PORT C[2] 0: CANRx0
1	R/W	GPIO PORT C[1] Enable 1: PORT C[1] 0: CANTx0
0	R/W	GPIO PORT C[0] Enable 1: PORT C[0] 0: TimerOut

#### 10.3.2.25 DDATA

10.3.2.26 DDIR

0x8002.3064

10.3.2.27 DMASK 0x8002.3068

10.3.2.28 DBSTAT 0x8002.306C

10.3.2.29 DEDGE 0x8002.3070

10.3.2.30 DCLK 0x8002.3074

10.3.2.31 DPOL 0x8002.3078

10.3.2.32 GPIO PORT D Enable Register

15	14	13	12	11	10	9	8
Reserved PORTE							
7	6	5	4	3	2	1	0
PORTD7	PORTD6	PORTD5	PORTD4	PORTD3	PORTD2	PORTD1	PORTD0



0x8002.307C

Bits	Type	Function
8	R/W	GPIO PORT D[8] Enable 1: PORT D[8] 0: LBEn
7:0	R/W	GPIO PORT D[7:0] Enable 0xFF: PORT D[7:0] 0x00: LD[15:8]

10.3.2.33 EDATA

0x8002.3080

24 23 22 21 20 19 18 17 16

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

EDATA, EDIR, EMASK, ESTAT, EEDGE, ECLR, EPOL, EEN [24:0]

10.3.2.34 EDIR

10.3.2.35 EMASK

10.3.2.36 EBSTAT

10.3.2.37 EEDGE

10.3.2.38 ECLK

10.3.2.39 EPOL

0x8002.3084

0x8002.3088

0x8002.308C

0x8002.3090

0x8002.3094

0x8002.3098

# 10.3.2.40 GPIO PORT E Enable Register

31	30	29	28	27	26	25	24
23	22	21	Reserved 20	19	18	17	PORTE24 <b>16</b>
PORTE23 <b>15</b>	PORTE22 <b>14</b>	PORTE21 <b>13</b>	PORTE20 <b>12</b>	PORTE19 <b>11</b>	PORTE18 <b>10</b>	PORTE17 9	PORTE16 8
PORTE15 <b>7</b>	PORTE14 6	PORTE13 <b>5</b>	PORTE12	PORTE11	PORTE10	PORTE9	PORTE8
PORTE7	PORTE6	PORTE5	PORTE4	PORTE3	PORTE2	PORTE1	PORTE0

0x8002.309C

Bits	Type	Function	
24	R/W	GPIO PORT E[24] Enable 1:PORT E[24] 0: RA[24]	
23	R/W	GPIO PORT E[23] Enable 1:PORT E[23] 0: CANTx1	
22	R/W	GPIO PORT E[22] Enable 1:PORT E[22] 0: CANRx1	
21	R/W	GPIO PORT E[21] Enable 1:PORT E[21] 0: MMCCLK	
20	R/W	GPIO PORT E[20] Enable 1:PORT E[20] 0: MMCCD	
19	R/W	GPIO PORT E[19] Enable 1:PORT E[19] 0: MMCDAT	
18	R/W	GPIO PORT E[18] Enable 1:PORT E[18] 0: MMCCMD	
17	R/W	GPIO PORT E[17] Enable 1:PORT E[17] 0: nRW3	
16	R/W	GPIO PORT E[16] Enable 1:PORT E[16] 0: nRW2	
15:0	R/W	GPIO PORT E[15] Enable 0xFFFF : PORT E[15:0] 0x0000: RD[31:16]	

#### 10.3.2.41 Tic Test mode Register(TICTMDR)

0x8002.30A0

TicSel



Bits	Type	Function
0	R/W	When TicSel is HIGH, there is 3 Port registers (B, D, F) access to check up special word. TicSelWR is enabling the TICTMDR and PSTB is clock signal. So TicSel data output is PD[0] bit.

#### 10.3.2.42 PORTA Multi-function Select register(AMULSEL)

	1 011		J			0	(		/						0x8	002.30 <i>A</i>
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1		0
AMUL	SEL															
Bits	Type	F	unctio	n												
15	R/W	/ (	SPIO P	ORT A[	15] Mult	i-functio	n Selec	t 1: IR	.IN	(	): GPIC	or Pr	imary			
14	R/W	/ (	SPIO P	ORT A[	14] Mult	ti-functio	n Selec	t 1: U	SOUT3	, (	): GPI	or Pr	imary			
13	R/W	/ (	SPIO P	ORT A[	13] Mult	ti-functio	n Selec	t 1: U	SIN3	(	): GPIC	or Pr	imary			
12	R/W	/ (	SPIO P	ORT A[	12] Mult	ti-functio	n Selec	t 1: IS	ECK	(	): GPI	or Pi	rimary			
11	R/W	/ (	SPIO P	ORT A[	11] Mult	i-functio	n Select	1: IS	WS	C	: GPIC	or Pr	imary			
10	R/W	/ (	SPIO P	ORT A[	10] Mult	i-functio	n Selec	t 1: P0	ORT A[	10] out	put 0:	<b>GPIO</b>	or Pri	mary		
9	R/W	/ (	SPIO P	ORT A[	9] Multi-	function	Select	1: PC	RT A[9	] outpu	ıt 0: (	GPIO d	r Prim	nary		
8	R/W	/ (	SPIO P	ORT A[	3] Multi-	function	Select	1: PC	)RT A[8	3] outpu	it 0: 0	GPIO (	or Prim	nary		
7	R/W	/ (	SPIO P	ORT A[	7] Multi-	function	Select	1: IR	TUC		: GPIC	or Pr	imary			
6	R/W	/ (	SPIO P	ORT A[	3] Multi-	function	Select	1: US	SOUT2		): GPIC	or Pr	imary			
5	R/W	/ (	SPIO P	ORT A[	5] Multi-	function	Select	1: US	SIN2		): GPIC	or Pr	imary			
4	R/W	/ (	SPIO P	ORT A[	4] Multi-	function	Select	1: IS0	CLK	(	): GPIC	or Pr	imary			
3	R/W	/ (	SPIO P	ORT A[	3] Multi-	function	Select	1; ISI	Ò		0: GPI	O or P	rimary			
2	R/W	/ (	SPIO P	ORT A[	2] Multi-	function	Select	1: PC	RT A[2	] outpu	ıt 0: (	GPIO (	or Prim	nary		
1	R/W	/ (	SPIO P	ORT A[	1] Multi-	function	Select	1: PC	RT A[1	] outpu	ıt 0: (	GPIO (	or Prim	nary		
0	R/W	/ (	SPIO P	ORT A[	O] Multi-	function	Select	1: PC	ORT A[C	)] outpu	ıt 0: 0	GPIO (	or Prim	nary		

#### 10.3.2.43 SWAP Pin Configuration Register(SWAP)

		0x8002.3	30A
		SWAP	
Bits	Type	Function	-
0	R/W	SWAP determines PORT E Pin configuration. When reset, USB transceiver signals, SMC and RA24 will be available. Otherwise, USB transceiver, SMC and CAN 1 will be available while RA 24 cannot be used so addressing space reduced by half.	-

#### 10.3.3 GPIO Interrupt

GPIO has 7 interrupt sources. Each port can be configured as 1 interrupt source except port B. To use a GPIO port as interrupt source, specify edge register polarity register according to interrupt type, for example, low level sensitive or rising edge sensitive, etc. then set mask register to enable interrupt. Port B has 3 interrupt sources, PORTB[11], PORTB[10] and PORTB[9:0]. PORTB[11] is assigned to make CPU go to deep sleep mode, PORTB[10] is to detect Hotsync. PORTB[9:0] is used as general GPIO interrupt source. So, following chart shows available GPIO interrupts.

Interrupt Name	Configurable Bits
GPIOAINTR	PORTA[15:0]
GPIOB0INTR	PORTB[10], Hotsync Interrupt
GPIOB1INTR	PORTB[11], Deep Sleep Interrupt
GPIOBINTR	PORTB[9:0]
GPIOCINTR	PORTC[10:0]
GPIODINTR	PORTD[8:0]
GPIOEINTR	PORTE[24:0]



#### 10.3.4 GPIO Rise/Fall Time

Data output, unit : ns

	50pF		10	00pF	150pF	
Port number	Rise	Fall	Rise	Fall	Rise	Fall
A0~15, B0~11, C0~10, D0~8, E22~23 (*Group A)	8.745	10.687	15.946	19.917	23.136	29.147
E0~17,24 (Group B)	6.098	5.693	10.896	10.317	15.696	14.927
E18~21 (Group C)	4.018	4.048	6.904	7.137	9.783	10.217

<sup>\*</sup> It means the drive strength (Group A = 1, Group B = 2, Group C = 4)





#### 10.4 Interrupt Controller

The HMS30C7202 has a fully programmable priority, individually maskable, vectored interrupt controller. This feature reduces the software overhead in handling interrupts. The Interrupt controller can trigger the Fast interrupt request (NFIQ) and the standard interrupt request (NIRQ) from any interrupt source (on-chip peripherals and GPIOs). The fully programmable priority encoder allows the user to define the priority of each interrupt source. External interrupt sources can be positive or negative edge triggered or high or low level sensitive, depending on the value programmed in the EDGE and POL registers (see GPIO registers).

ID Code	Interrupt Source	ID Code	Interrupt Source
00	PMU	10	Timer1 or Timer2 or Timer3(64Bit)
01	DMA	11	Watchdog
02	LCD	12	CAN0
03	Sound	13	CAN1
04	Reserved	14	GPIOB0 (GPIOB [10])
05	USB	15	GPIOB1 (GPIOB [11])
06	MMC	16	GPIOA
07	RTC	17	GPIOB
08	UART0	18	GPIOC
09	UART1	19	GPIOD
0A	UART2	1A	GPIOE
0B	UART3	1B	ARM core (COMMRX debug only)
0C	KBD (KeyBoard Interface)	1C	ARM core (COMMTX debug only)
0D	PS2	1D	SmartMedia Card
0E	AIC	1E	Software (auto generation by CPU
0F	Timer0		register set)

Table 10-2 Interrupt controller Configuration

Note The inputs GPIOB [10] and GPIOB [11] have internally a de-bouncing logic, which allows the direct connection to a button (e.g. for deep sleep and Hot Sync.).

#### 10.4.1 Block diagram

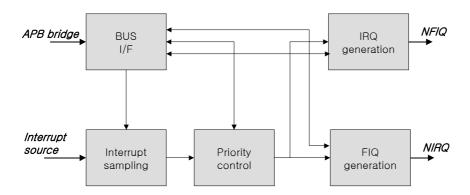


Figure 10-3 Interrupt controller block diagram

#### 10.4.2 Registers

Address	Name	Width	Default	Description
0x8002.4000	IER	31	0x00000000	Interrupt enable register
0x8002.4004	ISR	31	0x00000000	Interrupt status register
0x8002.4008	IVR	32	0x00000000	IRQ vector register



0x8002.4010         SVR0         32         0x00000000         Source vector register 1           0x8002.4014         SVR1         32         0x00000000         Source vector register 1           0x8002.4016         SVR2         32         0x00000000         Source vector register 3           0x8002.4020         SVR4         32         0x00000000         Source vector register 4           0x8002.4024         SVR5         32         0x00000000         Source vector register 5           0x8002.4028         SVR6         32         0x00000000         Source vector register 6           0x8002.4030         SVR8         32         0x00000000         Source vector register 7           0x8002.4034         SVR9         32         0x00000000         Source vector register 7           0x8002.4034         SVR9         32         0x00000000         Source vector register 7           0x8002.4034         SVR9         32         0x00000000         Source vector register 9           0x8002.4034         SVR11         32         0x00000000         Source vector register 10           0x8002.4040         SVR12         32         0x00000000         Source vector register 11           0x8002.4040         SVR14         32         0x00000000 <td< th=""><th></th><th></th><th></th><th></th><th></th></td<>					
0x8002.4018         SVR2         32         0x00000000         Source vector register 2           0x8002.4010         SVR3         32         0x00000000         Source vector register 3           0x8002.4020         SVR4         32         0x00000000         Source vector register 4           0x8002.4024         SVR5         32         0x00000000         Source vector register 5           0x8002.4028         SVR6         32         0x00000000         Source vector register 6           0x8002.4030         SVR8         32         0x00000000         Source vector register 7           0x8002.4034         SVR9         32         0x00000000         Source vector register 9           0x8002.4034         SVR9         32         0x00000000         Source vector register 10           0x8002.4035         SVR10         32         0x00000000         Source vector register 11           0x8002.4036         SVR11         32         0x00000000         Source vector register 11           0x8002.4040         SVR12         32         0x00000000         Source vector register 13           0x8002.4044         SVR14         32         0x00000000         Source vector register 14           0x8002.4055         SVR16         32         0x00000000	0x8002.4010	SVR0	32	0x00000000	Source vector register 0
0x8002.401C         SVR3         32         0x00000000         Source vector register 3           0x8002.4020         SVR4         32         0x00000000         Source vector register 4           0x8002.4024         SVR5         32         0x00000000         Source vector register 5           0x8002.4028         SVR6         32         0x00000000         Source vector register 6           0x8002.4030         SVR8         32         0x00000000         Source vector register 7           0x8002.4031         SVR8         32         0x00000000         Source vector register 8           0x8002.4038         SVR9         32         0x00000000         Source vector register 9           0x8002.4038         SVR10         32         0x00000000         Source vector register 10           0x8002.4040         SVR12         32         0x00000000         Source vector register 11           0x8002.4040         SVR13         32         0x00000000         Source vector register 12           0x8002.4040         SVR13         32         0x00000000         Source vector register 14           0x8002.4040         SVR15         32         0x00000000         Source vector register 14           0x8002.4050         SVR16         32         0x00000000	0x8002.4014	SVR1	32	0x00000000	Source vector register 1
0x8002.4020         SVR4         32         0x00000000         Source vector register 4           0x8002.4024         SVR5         32         0x00000000         Source vector register 5           0x8002.4028         SVR6         32         0x00000000         Source vector register 6           0x8002.4020         SVR7         32         0x00000000         Source vector register 7           0x8002.4030         SVR8         32         0x00000000         Source vector register 8           0x8002.4033         SVR9         32         0x00000000         Source vector register 9           0x8002.4036         SVR10         32         0x00000000         Source vector register 10           0x8002.4037         SVR11         32         0x00000000         Source vector register 11           0x8002.4038         SVR11         32         0x00000000         Source vector register 12           0x8002.4040         SVR12         32         0x00000000         Source vector register 13           0x8002.4044         SVR13         32         0x00000000         Source vector register 14           0x8002.4050         SVR16         32         0x00000000         Source vector register 15           0x8002.4054         SVR17         32         0x00000000	0x8002.4018	SVR2	32	0x00000000	Source vector register 2
0x8002.4024         SVR5         32         0x00000000         Source vector register 5           0x8002.4028         SVR6         32         0x00000000         Source vector register 6           0x8002.4030         SVR8         32         0x00000000         Source vector register 7           0x8002.4034         SVR9         32         0x00000000         Source vector register 8           0x8002.4034         SVR9         32         0x00000000         Source vector register 9           0x8002.4038         SVR10         32         0x00000000         Source vector register 10           0x8002.4036         SVR11         32         0x00000000         Source vector register 11           0x8002.4040         SVR12         32         0x00000000         Source vector register 12           0x8002.4044         SVR13         32         0x00000000         Source vector register 13           0x8002.4054         SVR15         32         0x00000000         Source vector register 15           0x8002.4050         SVR16         32         0x00000000         Source vector register 15           0x8002.4054         SVR17         32         0x00000000         Source vector register 17           0x8002.4055         SVR18         32         0x00000000	0x8002.401C	SVR3	32	0x00000000	Source vector register 3
0x8002.4028         SVR6         32         0x00000000         Source vector register 6           0x8002.4030         SVR8         32         0x00000000         Source vector register 7           0x8002.4034         SVR9         32         0x00000000         Source vector register 9           0x8002.4038         SVR10         32         0x00000000         Source vector register 10           0x8002.4030         SVR11         32         0x00000000         Source vector register 11           0x8002.4040         SVR12         32         0x00000000         Source vector register 12           0x8002.4044         SVR13         32         0x00000000         Source vector register 13           0x8002.4044         SVR13         32         0x00000000         Source vector register 13           0x8002.4046         SVR14         32         0x00000000         Source vector register 14           0x8002.4050         SVR16         32         0x00000000         Source vector register 15           0x8002.4054         SVR17         32         0x00000000         Source vector register 17           0x8002.4056         SVR18         32         0x00000000         Source vector register 17           0x8002.4066         SVR20         32         0x00000000 <td>0x8002.4020</td> <td>SVR4</td> <td>32</td> <td>0x00000000</td> <td>Source vector register 4</td>	0x8002.4020	SVR4	32	0x00000000	Source vector register 4
0x8002.402C         SVR7         32         0x00000000         Source vector register 7           0x8002.4034         SVR9         32         0x00000000         Source vector register 8           0x8002.4034         SVR9         32         0x00000000         Source vector register 9           0x8002.4038         SVR10         32         0x00000000         Source vector register 10           0x8002.403C         SVR11         32         0x00000000         Source vector register 11           0x8002.4040         SVR12         32         0x00000000         Source vector register 12           0x8002.4044         SVR13         32         0x00000000         Source vector register 14           0x8002.404C         SVR15         32         0x00000000         Source vector register 14           0x8002.4050         SVR16         32         0x00000000         Source vector register 16           0x8002.4054         SVR17         32         0x00000000         Source vector register 17           0x8002.4055         SVR18         32         0x00000000         Source vector register 18           0x8002.405C         SVR19         32         0x00000000         Source vector register 20           0x8002.4064         SVR21         32         0x00000000 <td>0x8002.4024</td> <td>SVR5</td> <td>32</td> <td>0x00000000</td> <td>Source vector register 5</td>	0x8002.4024	SVR5	32	0x00000000	Source vector register 5
0x8002.4030         SVR8         32         0x00000000         Source vector register 8           0x8002.4034         SVR9         32         0x00000000         Source vector register 10           0x8002.4036         SVR10         32         0x00000000         Source vector register 10           0x8002.4030         SVR11         32         0x00000000         Source vector register 11           0x8002.4040         SVR12         32         0x00000000         Source vector register 12           0x8002.4044         SVR13         32         0x00000000         Source vector register 13           0x8002.4046         SVR14         32         0x00000000         Source vector register 14           0x8002.4050         SVR16         32         0x00000000         Source vector register 15           0x8002.4050         SVR16         32         0x00000000         Source vector register 16           0x8002.4054         SVR17         32         0x00000000         Source vector register 18           0x8002.4056         SVR18         32         0x00000000         Source vector register 19           0x8002.4060         SVR20         32         0x00000000         Source vector register 20           0x8002.4066         SVR21         32         0x00000000	0x8002.4028	SVR6	32	0x00000000	Source vector register 6
0x8002.4034         SVR9         32         0x00000000         Source vector register 9           0x8002.4038         SVR10         32         0x00000000         Source vector register 10           0x8002.403C         SVR11         32         0x00000000         Source vector register 11           0x8002.4040         SVR12         32         0x00000000         Source vector register 12           0x8002.4044         SVR13         32         0x00000000         Source vector register 13           0x8002.4046         SVR14         32         0x00000000         Source vector register 14           0x8002.4040         SVR16         32         0x00000000         Source vector register 15           0x8002.4050         SVR16         32         0x00000000         Source vector register 17           0x8002.4054         SVR17         32         0x00000000         Source vector register 17           0x8002.4055         SVR18         32         0x00000000         Source vector register 18           0x8002.4050         SVR19         32         0x00000000         Source vector register 20           0x8002.4064         SVR21         32         0x00000000         Source vector register 21           0x8002.4065         SVR23         32         0x0000000	0x8002.402C	SVR7	32	0x00000000	Source vector register 7
0x8002.4038         SVR10         32         0x0000000         Source vector register 10           0x8002.403C         SVR11         32         0x0000000         Source vector register 11           0x8002.4040         SVR12         32         0x0000000         Source vector register 12           0x8002.4044         SVR13         32         0x0000000         Source vector register 13           0x8002.404C         SVR15         32         0x0000000         Source vector register 15           0x8002.4050         SVR16         32         0x0000000         Source vector register 16           0x8002.4054         SVR17         32         0x0000000         Source vector register 17           0x8002.4058         SVR18         32         0x0000000         Source vector register 17           0x8002.4050         SVR19         32         0x0000000         Source vector register 18           0x8002.4060         SVR20         32         0x0000000         Source vector register 19           0x8002.4061         SVR20         32         0x0000000         Source vector register 20           0x8002.4068         SVR22         32         0x0000000         Source vector register 27           0x8002.4070         SVR24         32         0x0000000	0x8002.4030	SVR8	32	0x00000000	Source vector register 8
0x8002.403C         SVR11         32         0x0000000         Source vector register 11           0x8002.4040         SVR12         32         0x00000000         Source vector register 12           0x8002.4044         SVR13         32         0x00000000         Source vector register 13           0x8002.4048         SVR14         32         0x00000000         Source vector register 14           0x8002.4050         SVR16         32         0x00000000         Source vector register 16           0x8002.4054         SVR17         32         0x00000000         Source vector register 17           0x8002.4058         SVR18         32         0x00000000         Source vector register 18           0x8002.4050         SVR19         32         0x00000000         Source vector register 19           0x8002.4050         SVR19         32         0x00000000         Source vector register 29           0x8002.4060         SVR20         32         0x00000000         Source vector register 21           0x8002.4064         SVR21         32         0x00000000         Source vector register 22           0x8002.4070         SVR24         32         0x00000000         Source vector register 23           0x8002.4074         SVR25         32         0x000000	0x8002.4034	SVR9	32	0x00000000	Source vector register 9
0x8002.4040         SVR12         32         0x00000000         Source vector register 12           0x8002.4044         SVR13         32         0x00000000         Source vector register 13           0x8002.4048         SVR14         32         0x00000000         Source vector register 14           0x8002.4050         SVR16         32         0x00000000         Source vector register 15           0x8002.4054         SVR17         32         0x00000000         Source vector register 17           0x8002.4058         SVR18         32         0x00000000         Source vector register 18           0x8002.4050         SVR19         32         0x00000000         Source vector register 18           0x8002.4060         SVR20         32         0x00000000         Source vector register 20           0x8002.4064         SVR21         32         0x00000000         Source vector register 21           0x8002.4068         SVR22         32         0x00000000         Source vector register 22           0x8002.4070         SVR23         32         0x00000000         Source vector register 23           0x8002.4074         SVR25         32         0x00000000         Source vector register 24           0x8002.4078         SVR26         32         0x00000	0x8002.4038	SVR10	32	0x00000000	Source vector register 10
0x8002.4044         SVR13         32         0x00000000         Source vector register 13           0x8002.4048         SVR14         32         0x00000000         Source vector register 14           0x8002.404C         SVR15         32         0x00000000         Source vector register 15           0x8002.4050         SVR16         32         0x00000000         Source vector register 16           0x8002.4054         SVR17         32         0x00000000         Source vector register 17           0x8002.4058         SVR18         32         0x00000000         Source vector register 18           0x8002.4050         SVR19         32         0x00000000         Source vector register 19           0x8002.4060         SVR20         32         0x00000000         Source vector register 20           0x8002.4064         SVR21         32         0x00000000         Source vector register 21           0x8002.4065         SVR23         32         0x00000000         Source vector register 22           0x8002.4066         SVR23         32         0x00000000         Source vector register 23           0x8002.4070         SVR24         32         0x00000000         Source vector register 24           0x8002.4078         SVR26         32         0x00000	0x8002.403C	SVR11	32	0x00000000	Source vector register 11
0x8002.4048         SVR14         32         0x0000000         Source vector register 14           0x8002.404C         SVR15         32         0x00000000         Source vector register 15           0x8002.4050         SVR16         32         0x00000000         Source vector register 16           0x8002.4054         SVR17         32         0x00000000         Source vector register 17           0x8002.4058         SVR18         32         0x00000000         Source vector register 18           0x8002.405C         SVR19         32         0x00000000         Source vector register 19           0x8002.4060         SVR20         32         0x00000000         Source vector register 20           0x8002.4064         SVR21         32         0x00000000         Source vector register 21           0x8002.4068         SVR22         32         0x00000000         Source vector register 22           0x8002.4060         SVR23         32         0x00000000         Source vector register 23           0x8002.4070         SVR23         32         0x00000000         Source vector register 24           0x8002.4074         SVR25         32         0x00000000         Source vector register 26           0x8002.4075         SVR26         32         0x000000	0x8002.4040	SVR12	32	0x00000000	Source vector register 12
0x8002.404C         SVR15         32         0x00000000         Source vector register 15           0x8002.4050         SVR16         32         0x00000000         Source vector register 16           0x8002.4054         SVR17         32         0x00000000         Source vector register 17           0x8002.4058         SVR18         32         0x00000000         Source vector register 18           0x8002.405C         SVR19         32         0x00000000         Source vector register 19           0x8002.4060         SVR20         32         0x00000000         Source vector register 20           0x8002.4064         SVR21         32         0x00000000         Source vector register 21           0x8002.4068         SVR22         32         0x00000000         Source vector register 22           0x8002.406C         SVR23         32         0x00000000         Source vector register 23           0x8002.4070         SVR24         32         0x00000000         Source vector register 24           0x8002.4074         SVR25         32         0x00000000         Source vector register 25           0x8002.4078         SVR26         32         0x00000000         Source vector register 27           0x8002.4080         SVR28         32         0x00000	0x8002.4044	SVR13	32	0x00000000	Source vector register 13
0x8002.4050         SVR16         32         0x00000000         Source vector register 16           0x8002.4054         SVR17         32         0x00000000         Source vector register 17           0x8002.4058         SVR18         32         0x00000000         Source vector register 18           0x8002.405C         SVR19         32         0x00000000         Source vector register 19           0x8002.4060         SVR20         32         0x00000000         Source vector register 20           0x8002.4064         SVR21         32         0x00000000         Source vector register 21           0x8002.4068         SVR22         32         0x00000000         Source vector register 22           0x8002.4070         SVR24         32         0x00000000         Source vector register 23           0x8002.4074         SVR25         32         0x00000000         Source vector register 24           0x8002.4078         SVR26         32         0x00000000         Source vector register 25           0x8002.4070         SVR27         32         0x00000000         Source vector register 26           0x8002.4080         SVR28         32         0x00000000         Source vector register 27           0x8002.4084         SVR29         32         0x00000	0x8002.4048	SVR14	32	0x00000000	Source vector register 14
0x8002.4054         SVR17         32         0x00000000         Source vector register 17           0x8002.4058         SVR18         32         0x00000000         Source vector register 18           0x8002.405C         SVR19         32         0x00000000         Source vector register 19           0x8002.4060         SVR20         32         0x00000000         Source vector register 20           0x8002.4064         SVR21         32         0x00000000         Source vector register 21           0x8002.4068         SVR22         32         0x00000000         Source vector register 22           0x8002.406C         SVR23         32         0x00000000         Source vector register 23           0x8002.4070         SVR24         32         0x00000000         Source vector register 24           0x8002.4074         SVR25         32         0x00000000         Source vector register 25           0x8002.4076         SVR27         32         0x00000000         Source vector register 26           0x8002.4080         SVR28         32         0x00000000         Source vector register 27           0x8002.4084         SVR29         32         0x00000000         Source vector register 28           0x8002.4088         SVR30         32         0x00000	0x8002.404C	SVR15	32	0x00000000	Source vector register 15
0x8002.4058         SVR18         32         0x00000000         Source vector register 18           0x8002.405C         SVR19         32         0x00000000         Source vector register 19           0x8002.4060         SVR20         32         0x00000000         Source vector register 20           0x8002.4064         SVR21         32         0x00000000         Source vector register 21           0x8002.4068         SVR22         32         0x00000000         Source vector register 22           0x8002.406C         SVR23         32         0x00000000         Source vector register 23           0x8002.4070         SVR24         32         0x00000000         Source vector register 24           0x8002.4074         SVR25         32         0x00000000         Source vector register 25           0x8002.4078         SVR26         32         0x00000000         Source vector register 26           0x8002.4070         SVR27         32         0x00000000         Source vector register 27           0x8002.4080         SVR28         32         0x00000000         Source vector register 27           0x8002.4084         SVR29         32         0x00000000         Source vector register 28           0x8002.4084         SVR29         32         0x00000	0x8002.4050	SVR16	32	0x00000000	Source vector register 16
0x8002.405C         SVR19         32         0x00000000         Source vector register 19           0x8002.4060         SVR20         32         0x00000000         Source vector register 20           0x8002.4064         SVR21         32         0x00000000         Source vector register 21           0x8002.4068         SVR22         32         0x00000000         Source vector register 22           0x8002.406C         SVR23         32         0x00000000         Source vector register 23           0x8002.4070         SVR24         32         0x00000000         Source vector register 24           0x8002.4074         SVR25         32         0x00000000         Source vector register 25           0x8002.4078         SVR26         32         0x00000000         Source vector register 26           0x8002.4070         SVR27         32         0x00000000         Source vector register 27           0x8002.4080         SVR28         32         0x00000000         Source vector register 28           0x8002.4084         SVR29         32         0x00000000         Source vector register 29           0x8002.4090         IDR         32         0x00000000         Source vector register 30           0x8002.4094         PSR0         32         0x00000000	0x8002.4054	SVR17	32	0x00000000	Source vector register 17
0x8002.4060         SVR20         32         0x00000000         Source vector register 20           0x8002.4064         SVR21         32         0x00000000         Source vector register 21           0x8002.4068         SVR22         32         0x00000000         Source vector register 22           0x8002.406C         SVR23         32         0x00000000         Source vector register 23           0x8002.4070         SVR24         32         0x00000000         Source vector register 24           0x8002.4074         SVR25         32         0x00000000         Source vector register 25           0x8002.4078         SVR26         32         0x00000000         Source vector register 26           0x8002.407C         SVR27         32         0x00000000         Source vector register 27           0x8002.4080         SVR28         32         0x00000000         Source vector register 28           0x8002.4084         SVR29         32         0x00000000         Source vector register 29           0x8002.4090         IDR         32         0x00000000         Source vector register 30           0x8002.4094         PSR0         32         0x0000000         Source vector register 30           0x8002.4098         PSR1         32         0x0000000 <td>0x8002.4058</td> <td>SVR18</td> <td>32</td> <td>0x00000000</td> <td>Source vector register 18</td>	0x8002.4058	SVR18	32	0x00000000	Source vector register 18
0x8002.4064         SVR21         32         0x00000000         Source vector register 21           0x8002.4068         SVR22         32         0x00000000         Source vector register 22           0x8002.406C         SVR23         32         0x00000000         Source vector register 23           0x8002.4070         SVR24         32         0x00000000         Source vector register 24           0x8002.4074         SVR25         32         0x00000000         Source vector register 25           0x8002.4078         SVR26         32         0x00000000         Source vector register 26           0x8002.407C         SVR27         32         0x00000000         Source vector register 27           0x8002.4080         SVR28         32         0x00000000         Source vector register 28           0x8002.4084         SVR29         32         0x00000000         Source vector register 29           0x8002.4088         SVR30         32         0x00000000         Source vector register 30           0x8002.4094         PSR0         32         0x0000000         Source vector register 9           0x8002.4098         PSR1         32         0x0000000         Priority set register 1           0x8002.40A0         PSR3         32         0x0B0A0908	0x8002.405C	SVR19	32	0x00000000	Source vector register 19
0x8002.4068         SVR22         32         0x00000000         Source vector register 22           0x8002.406C         SVR23         32         0x00000000         Source vector register 23           0x8002.4070         SVR24         32         0x00000000         Source vector register 24           0x8002.4074         SVR25         32         0x00000000         Source vector register 25           0x8002.4078         SVR26         32         0x00000000         Source vector register 26           0x8002.407C         SVR27         32         0x00000000         Source vector register 27           0x8002.4080         SVR28         32         0x00000000         Source vector register 28           0x8002.4084         SVR29         32         0x00000000         Source vector register 29           0x8002.4088         SVR30         32         0x00000000         Source vector register 30           0x8002.4090         IDR         32         0x0000000         Source vector register 30           0x8002.4094         PSR0         32         0x0300000         Priority set register 0           0x8002.4096         PSR2         32         0x060000         Priority set register 3           0x8002.40A0         PSR3         32         0x13121110	0x8002.4060	SVR20	32	0x00000000	Source vector register 20
0x8002.406C         SVR23         32         0x00000000         Source vector register 23           0x8002.4070         SVR24         32         0x00000000         Source vector register 24           0x8002.4074         SVR25         32         0x00000000         Source vector register 25           0x8002.4078         SVR26         32         0x00000000         Source vector register 26           0x8002.407C         SVR27         32         0x00000000         Source vector register 27           0x8002.4080         SVR28         32         0x00000000         Source vector register 28           0x8002.4084         SVR29         32         0x00000000         Source vector register 29           0x8002.4088         SVR30         32         0x00000000         Source vector register 30           0x8002.4090         IDR         32         0x0000000         Source vector register 30           0x8002.4094         PSR0         32         0x0300000         Priority set register 0           0x8002.4098         PSR1         32         0x07060504         Priority set register 1           0x8002.40A0         PSR3         32         0x0F0E0D0C         Priority set register 3           0x8002.40A4         PSR4         32         0x13121110	0x8002.4064	SVR21	32	0x00000000	Source vector register 21
0x8002.4070         SVR24         32         0x00000000         Source vector register 24           0x8002.4074         SVR25         32         0x00000000         Source vector register 25           0x8002.4078         SVR26         32         0x00000000         Source vector register 26           0x8002.407C         SVR27         32         0x00000000         Source vector register 27           0x8002.4080         SVR28         32         0x00000000         Source vector register 28           0x8002.4084         SVR29         32         0x00000000         Source vector register 29           0x8002.4088         SVR30         32         0x00000000         Source vector register 30           0x8002.4090         IDR         32         0x00001F1F         Interrupt ID register           0x8002.4094         PSR0         32         0x03020100         Priority set register 0           0x8002.4098         PSR1         32         0x07060504         Priority set register 1           0x8002.40A0         PSR3         32         0x0F0E0D0C         Priority set register 3           0x8002.40A4         PSR4         32         0x13121110         Priority set register 5           0x8002.40AC         PSR6         32         0x15161514 <t< td=""><td>0x8002.4068</td><td>SVR22</td><td>32</td><td>0x00000000</td><td>Source vector register 22</td></t<>	0x8002.4068	SVR22	32	0x00000000	Source vector register 22
0x8002.4074         SVR25         32         0x00000000         Source vector register 25           0x8002.4078         SVR26         32         0x00000000         Source vector register 26           0x8002.407C         SVR27         32         0x00000000         Source vector register 27           0x8002.4080         SVR28         32         0x00000000         Source vector register 28           0x8002.4084         SVR29         32         0x00000000         Source vector register 29           0x8002.4088         SVR30         32         0x00000000         Source vector register 30           0x8002.4090         IDR         32         0x00001F1F         Interrupt ID register           0x8002.4094         PSR0         32         0x03020100         Priority set register 0           0x8002.4098         PSR1         32         0x07060504         Priority set register 1           0x8002.409C         PSR2         32         0x0B0A0908         Priority set register 2           0x8002.40A0         PSR3         32         0x13121110         Priority set register 4           0x8002.40A8         PSR5         32         0x17161514         Priority set register 5           0x8002.40AC         PSR6         32         0x181A1918         P	0x8002.406C	SVR23	32	0x00000000	Source vector register 23
0x8002.4078         SVR26         32         0x00000000         Source vector register 26           0x8002.407C         SVR27         32         0x00000000         Source vector register 27           0x8002.4080         SVR28         32         0x00000000         Source vector register 28           0x8002.4084         SVR29         32         0x00000000         Source vector register 29           0x8002.4088         SVR30         32         0x0000000         Source vector register 30           0x8002.4090         IDR         32         0x00001F1F         Interrupt ID register           0x8002.4094         PSR0         32         0x03020100         Priority set register 0           0x8002.4098         PSR1         32         0x07060504         Priority set register 1           0x8002.409C         PSR2         32         0x0B0A0908         Priority set register 2           0x8002.40A0         PSR3         32         0x13121110         Priority set register 4           0x8002.40A8         PSR5         32         0x17161514         Priority set register 5           0x8002.40AC         PSR6         32         0x1B1A1918         Priority set register 6	0x8002.4070	SVR24	32	0x00000000	Source vector register 24
0x8002.407C         SVR27         32         0x00000000         Source vector register 27           0x8002.4080         SVR28         32         0x00000000         Source vector register 28           0x8002.4084         SVR29         32         0x00000000         Source vector register 29           0x8002.4088         SVR30         32         0x00000000         Source vector register 30           0x8002.4090         IDR         32         0x00001F1F         Interrupt ID register           0x8002.4094         PSR0         32         0x03020100         Priority set register 0           0x8002.4098         PSR1         32         0x07060504         Priority set register 1           0x8002.409C         PSR2         32         0x0B0A0908         Priority set register 2           0x8002.40A0         PSR3         32         0x13121110         Priority set register 4           0x8002.40A8         PSR5         32         0x17161514         Priority set register 5           0x8002.40AC         PSR6         32         0x1B1A1918         Priority set register 6	0x8002.4074	SVR25	32	0x00000000	Source vector register 25
0x8002.4080         SVR28         32         0x00000000         Source vector register 28           0x8002.4084         SVR29         32         0x00000000         Source vector register 29           0x8002.4088         SVR30         32         0x00000000         Source vector register 30           0x8002.4090         IDR         32         0x00001F1F         Interrupt ID register           0x8002.4094         PSR0         32         0x03020100         Priority set register 0           0x8002.4098         PSR1         32         0x07060504         Priority set register 1           0x8002.409C         PSR2         32         0x0B0A0908         Priority set register 2           0x8002.40A0         PSR3         32         0x0F0E0D0C         Priority set register 3           0x8002.40A4         PSR4         32         0x13121110         Priority set register 4           0x8002.40A8         PSR5         32         0x17161514         Priority set register 5           0x8002.40AC         PSR6         32         0x1B1A1918         Priority set register 6	0x8002.4078	SVR26	32	0x00000000	Source vector register 26
0x8002.4084         SVR29         32         0x00000000         Source vector register 29           0x8002.4088         SVR30         32         0x00000000         Source vector register 30           0x8002.4090         IDR         32         0x00001F1F         Interrupt ID register           0x8002.4094         PSR0         32         0x03020100         Priority set register 0           0x8002.4098         PSR1         32         0x07060504         Priority set register 1           0x8002.409C         PSR2         32         0x0B0A0908         Priority set register 2           0x8002.40A0         PSR3         32         0x0F0E0D0C         Priority set register 3           0x8002.40A4         PSR4         32         0x13121110         Priority set register 4           0x8002.40A8         PSR5         32         0x17161514         Priority set register 5           0x8002.40AC         PSR6         32         0x1B1A1918         Priority set register 6	0x8002.407C	SVR27	32	0x00000000	Source vector register 27
0x8002.4088         SVR30         32         0x00000000         Source vector register 30           0x8002.4090         IDR         32         0x00001F1F         Interrupt ID register           0x8002.4094         PSR0         32         0x03020100         Priority set register 0           0x8002.4098         PSR1         32         0x07060504         Priority set register 1           0x8002.409C         PSR2         32         0x0B0A0908         Priority set register 2           0x8002.40A0         PSR3         32         0x0F0E0D0C         Priority set register 3           0x8002.40A4         PSR4         32         0x13121110         Priority set register 4           0x8002.40A8         PSR5         32         0x17161514         Priority set register 5           0x8002.40AC         PSR6         32         0x1B1A1918         Priority set register 6	0x8002.4080	SVR28	32	0x00000000	Source vector register 28
0x8002.4090         IDR         32         0x00001F1F         Interrupt ID register           0x8002.4094         PSR0         32         0x03020100         Priority set register 0           0x8002.4098         PSR1         32         0x07060504         Priority set register 1           0x8002.409C         PSR2         32         0x0B0A0908         Priority set register 2           0x8002.40A0         PSR3         32         0x0F0E0D0C         Priority set register 3           0x8002.40A4         PSR4         32         0x13121110         Priority set register 4           0x8002.40A8         PSR5         32         0x17161514         Priority set register 5           0x8002.40AC         PSR6         32         0x1B1A1918         Priority set register 6	0x8002.4084	SVR29	32	0x00000000	Source vector register 29
0x8002.4094         PSR0         32         0x03020100         Priority set register 0           0x8002.4098         PSR1         32         0x07060504         Priority set register 1           0x8002.409C         PSR2         32         0x0B0A0908         Priority set register 2           0x8002.40A0         PSR3         32         0x0F0E0D0C         Priority set register 3           0x8002.40A4         PSR4         32         0x13121110         Priority set register 4           0x8002.40A8         PSR5         32         0x17161514         Priority set register 5           0x8002.40AC         PSR6         32         0x1B1A1918         Priority set register 6	0x8002.4088	SVR30	32	0x00000000	Source vector register 30
0x8002.4098         PSR1         32         0x07060504         Priority set register 1           0x8002.409C         PSR2         32         0x0B0A0908         Priority set register 2           0x8002.40A0         PSR3         32         0x0F0E0D0C         Priority set register 3           0x8002.40A4         PSR4         32         0x13121110         Priority set register 4           0x8002.40A8         PSR5         32         0x17161514         Priority set register 5           0x8002.40AC         PSR6         32         0x1B1A1918         Priority set register 6	0x8002.4090	IDR	32	0x00001F1F	Interrupt ID register
0x8002.409C         PSR2         32         0x0B0A0908         Priority set register 2           0x8002.40A0         PSR3         32         0x0F0E0D0C         Priority set register 3           0x8002.40A4         PSR4         32         0x13121110         Priority set register 4           0x8002.40A8         PSR5         32         0x17161514         Priority set register 5           0x8002.40AC         PSR6         32         0x1B1A1918         Priority set register 6	0x8002.4094	PSR0	32	0x03020100	Priority set register 0
0x8002.40A0         PSR3         32         0x0F0E0D0C         Priority set register 3           0x8002.40A4         PSR4         32         0x13121110         Priority set register 4           0x8002.40A8         PSR5         32         0x17161514         Priority set register 5           0x8002.40AC         PSR6         32         0x1B1A1918         Priority set register 6	0x8002.4098	PSR1	32	0x07060504	Priority set register 1
0x8002.40A4         PSR4         32         0x13121110         Priority set register 4           0x8002.40A8         PSR5         32         0x17161514         Priority set register 5           0x8002.40AC         PSR6         32         0x1B1A1918         Priority set register 6	0x8002.409C	PSR2	32	0x0B0A0908	Priority set register 2
0x8002.40A8         PSR5         32         0x17161514         Priority set register 5           0x8002.40AC         PSR6         32         0x1B1A1918         Priority set register 6	0x8002.40A0	PSR3	32	0x0F0E0D0C	Priority set register 3
0x8002.40AC PSR6 32 0x1B1A1918 Priority set register 6	0x8002.40A4	PSR4	32	0x13121110	Priority set register 4
	0x8002.40A8	PSR5	32	0x17161514	Priority set register 5
0x8002.40B0 PSR7 32 0x001E1D1C Priority set register 7	0x8002.40AC	PSR6	32	0x1B1A1918	Priority set register 6
	0x8002.40 <u>B</u> 0	PSR7	32	0x001E1D1C	Priority set register 7

Table 10-3 Interrupt controller Register Summary

10.4.2.1 Interrupt Enable Register (IER)
This register is used to enable/disable the interrupt request of interrupt sources.

Bits	Type	Function
31	R/W	0 : enable FIQ for priority 0 interrupts , 1 : disable FIQ (a priority 0 interrupt will trigger IRQ)
30	R/W	Software Interrupt
29	R/W	SmartMedia Card
28	R/W	ARM core (COMMTX: debug only)
27	R/W	ARM core (COMMRX: debug only)
26	R/W	GPIO port E
25	R/W	GPIO port D
24	R/W	GPIO port C
23	R/W	GPIO port B
22	R/W	GPIO port A
21	R/W	External Interrupt1 (GPIOB[11])
20	R/W	External Interrupt0 (GPIOB[10])



19	R/W	CAN1
18	R/W	CAN0
_17	R/W	Watchdog timer
16	R/W	Timer1 or Timer2 or Timer3(64Bit)
15	R/W	Timer0
14	R/W	AIC
13	R/W	PS2
12	R/W	KBD (keyboard interface)
11	R/W	UART3
10	R/W	UART2
9	R/W	UART1
8	R/W	UART0
7	R/W	RTC
6	R/W	MMC
5	R/W	USB
4	R/W	Reserved
3	R/W	Sound
2	R/W	LCD
1	R/W	DMA
0	R/W	PMU

#### Note

0: Disable interrupt / 1: Enable interrupt

The interrupt signals of Timer 1, 2, and 3 are merged into one interrupt source in Timer Block. So, you can use these ORed signal as one interrupt source.

# 10.4.2.2 Interrupt Status Register (ISR)

The IRQ Status register indicates whether or not the interrupt source has triggered an IRQ interrupt.

Bits	Type	Function
31	R/O	Reserved
30	R/O	Software Interrupt
29	R/O	SmartMedia Card
28	R/O	ARM core (COMMTX: debug only)
27	R/O	ARM core (COMMRX: debug only)
26	R/O	GPIO port E
25	R/O	GPIO port D
24	R/O	GPIO port C
23	R/O	GPIO port B
22	R/O	GPIO port A
21	R/O	External Interrupt1 (GPIOB[11])
20	R/O	External Interrupt0 (GPIOB[10])
19	R/O	CAN1
18	R/O	CAN0
17	R/O	Watchdog timer
16	R/O	Timer1 or Timer2 or Timer3(64Bit)
15	R/O	Timer0
14	R/O	AIC
13	R/O	PS2
12	R/O	KBD (keyboard interface)
11	R/O	UART3
10	R/O	UART2
9	R/O	UART1
8	R/O	UART0
7	R/O	RTC
6	R/O	MMC
5	R/O	USB
4	R/O	Reserved
3	R/O	Sound



#### Note

0: No interrupt requested (or interrupt source is disabled)

# 10.4.2.3 IRQ Vector Register (IVR)

	0x8002.4008
31	 0
IVR	

Bits	Type	Function
31:0	R	The IRQ Vectored Register contains the vector programmed by the user in the Source Vector
		Register corresponding to the current interrupt. The Source Vector Register (0 to 31) is
		indexed using the ID number in the current interrupt ID register when the IRQ Vector Register
		is read. When there is no IRQ status, the IRQ Vector Register is set to 0.

#### 10.4.2.4 Source Vector Register (SVR0 to SVR30)

		0x8002.4010 ~ 0x8002.4088
31		0
IVR		
Bits	Type	Function
31:0	R/W	The user may store in these registers the address of the corresponding handler for each interrupt source. This interrupt controller has 31-Source Vector Registers, which are corresponded to ID code. For example the Source Vector Register of the Interrupt by RTC is the SVR7 (Source Vector Register 7)

## 10.4.2.5 Interrupt ID Register (IDR)

The Interrupt ID Register returns the current FIQ and IRQ interrupt source number.

							0x8002.4	4090
31 – 13				12 - 8	7 – 5	4 - 0		
Reserve	ed			FIQID	Reserved	IRQID		
Bits	Type	Function						_
31:13	R	Reserved						•
12:8	R	FIQID						_
7:5	R	Reserved						_
4:0	R	IRQID						_

# 10.4.2.6 Priority Set Register (PSR0 to PSR7)

The Priority Set Registers consist of 8 registers, representing 32 priority levels. Each interrupt source (see table 10-2) has its (unique) priority level. The FIQ interrupt source is defined in PSR0[7:0], e.g. if PSR0[7:0] = 0x09, UART 1 can trigger the FIQ interrupt.

), <b>0</b> / ((( ) )	an anggor	uic i iq i	пспари		0x8002.4094 ~ 0x8002.40B0
31 – 24		23 –	16	15 – 8	7 – 0
IRQ priority	*	IRQ	priority *	IRQ priority *	IRQ priority *
Register	Bits	Туре	Initial ID value	Function	
PSR7	31:24	R	0x00	Reserved	
	23:16	R/W	0x1E	IRQ priority 1E	
	15:8	R/W	0x1D	IRQ priority 1D	_
	7:0	R/W	0x1C	IRQ priority 1C	
PSR6	31:24	R/W	0x1B	IRQ priority 1B	
	23:16	R/W	0x1A	IRO priority 1A	

<sup>1:</sup> Interrupt pending



	15:8	R/W	0x19	IRQ priority 19
	7:0	R/W	0x18	IRQ priority 18
PSR5	31:24	R/W	0x17	IRQ priority 17
	23:16	R/W	0x16	IRQ priority 16
	15:8	R/W	0x15	IRQ priority 15
	7:0	R/W	0x14	IRQ priority 14
PSR4	31:24	R/W	0x13	IRQ priority 13
	23:16	R/W	0x12	IRQ priority 12
	15:8	R/W	0x11	IRQ priority 11
	7:0	R/W	0x10	IRQ priority 10
PSR3	31:24	R/W	0x0F	IRQ priority F
	23:16	R/W	0x0E	IRQ priority E
	15:8	R/W	0x0D	IRQ priority D
	7:0	R/W	0x0C	IRQ priority C
PSR2	31:24	R/W	0x0B	IRQ priority B
	23:16	R/W	0x0A	IRQ priority A
	15:8	R/W	0x09	IRQ priority 9
	7:0	R/W	0x08	IRQ priority 8
PSR1	31:24	R/W	0x07	IRQ priority 7
	23:16	R/W	0x06	IRQ priority 6
	15:8	R/W	0x05	IRQ priority 5
	7:0	R/W	0x04	IRQ priority 4
PSR0	31:24	R/W	0x03	IRQ priority 3
	23:16	R/W	0x02	IRQ priority 2
	15:8	R/W	0x01	IRQ priority 1
	7:0	R/W	0x00	IRQ priority 0 or FIQ source *

#### Note

The Priority Level is to be defined as follows.

IRQ Priority 0 or *FIQ source* > IRQ Priority 1 > IRQ Priority 2 > . . . > IRQ Priority 1D> IRQ Priority 1E

\* Disable Interrupt Type Bit(IER Bit31): *FIQ source* / Enable Interrupt Type Bit(IER Bit31): IRQ priority 0



## 10.5 Matrix Keyboard Interface Controller

The Matrix keyboard interface controller is an AMBA slave module that connects to the Advanced Peripheral Bus (APB). For more information about AMBA, please refer to the AMBA Specification (ARM IHI 0001). The interface controller is designed to communicate with the external keyboard. The keyboard interface uses the pins KSCANI [7:0], KSCANO [7:0]. It is possible to select one of four scan clock modes.

#### **FEATURES**

- Four scanning modes
- 8x8 Matrix
- Byte key buffers

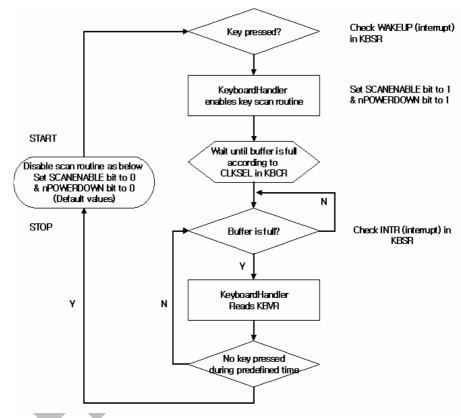


Figure 10-4 A flow chart of the keyboard controller

#### 10.5.1 External Signals

Pin Name	Type	Description
KSCANO [7:0]	0	This assigns the x-axis' scan line. The value is changed periodically so as to cover every key matrix. During one keyboard scan, KSCANO [7:0] can have 8 different values. Active LOW signal.
KSCANI [7:0]	I	This indicates which key is pressed in the assigned scan line. Active LOW signal

#### 10.5.2 Registers

Address	Name	Width	Default	Description
0x8002.2000	KBCR	8	0x0	Keyboard Configuration register
0x8002.2004	KBSC	8	0x0	Keyboard Scanout register



0x8002.2008	KBTR	8	0x0	Keyboard Test register
0x8002.200C	KBVR0	32	0x0	Keyboard value register 0
0x8002.2010	KBVR1	32	0x0	Keyboard value register 1
0x8002.2018	KBSR	1	0x0	Keyboard status register

Table 10-4 Matrix Keyboard Interface Controller Register Summary

# 10.5.2.1 Keyboard Configuration Register (KBCR)

	 	(	,			0x8002.2000
7				2	1	0
SCAN ENABLE				nPOWER DOWN	CLK SEL	

Bits	Type	Function
7	R/W	SCANENABLE bit. This starts or stops matrix keyboard scanning. To start keyboard input scanning, set the SCANENABLE bit and nPOWERDOWN bit of KBCR (Keyboard Configuration Register) and the CLK SEL bit of the KBCR. The key scan control signal is generated. Periodically, column scan code is saved in the 8byte key buffer. After the 8th column key data is stored, keyboard interrupt is generated to make the CPU read 8 scan values. The SCANENABLE bit and nPOWERDOWN bit are usually set or reset simultaneously When all the column of keyboard has been scanned, an interrupt is generated, and, by interrogating the KBVR registers, software can determine which keys have been pressed. It is software's responsibility to debounce the key pressed information. Keyboard key press interrupts are generated in all PMU states except deep sleep. Start and stop scanning 0 = stop
		1 = start
6:3	-	Reserved. Keep these bits to zero.
2	R/W	nPOWERDOWN bit. In the power down mode, no clock is inputted to this controller logic.  0 = power down mode, where clock is not operating  1 = normal mode, where clock is operating
1:0	R/W	CLKSEL bit. This controls the operating clock of scanning matrix keyboard.  Base Scanning clock is generated using PCLK (3.6864MHz).
		Value Base Scanning Clock Rate Scan Rate (8byte column buffer)
		00 PCLK/2 (1.84MHz, test mode only) 8861 times/sec
		01 PCLK/128 (28KHz) 138 times/sec
		10 PCLK/256 (14KHz) 69 times/sec
		11 PCLK/512 (7KHz) 34 times/sec

# 10.5.2.2 Keyboard Scanout Register(KBSC)

Bits	Initial	Function
7	0	0 = 1 <sup>st</sup> line will be scanned
		1 = no scan
6	0	0 = 2 <sup>nd</sup> line will be scanned
		1 = no scan
5	0	0 = 3 <sup>rd</sup> line will be scanned
		1 = no scan
4	0	0 = 4 <sup>th</sup> line will be scanned
		1 = no scan
3	0	0 = 5 <sup>th</sup> line will be scanned
		1 = no scan
2	0	0 = 6 <sup>th</sup> line will be scanned
		1 = no scan
1	0	0 = 7 <sup>th</sup> line will be scanned
		1 = no scan



0	0	0 = 8 <sup>th</sup> line will be scanned
		1 = no scan

# 10.5.2.3 Keyboard Test Register (KBTR)

0x8002.2008

Bits	Initial	Function
7	1	Indicates whether 1 <sup>st</sup> key in the selected scan column is pressed
		0 = pressed, 1 = not pressed
6	1	Indicates whether 2 <sup>nd</sup> key in the selected scan column is pressed
		0 = pressed, 1 = not pressed
5	1	Indicates whether 3 <sup>rd</sup> key in the selected scan column is pressed
		0 = pressed, 1 = not pressed
4	1	Indicates whether 4 <sup>th</sup> key in the selected scan column is pressed
		0 = pressed, 1 = not pressed
3	1	Indicates whether 5 <sup>th</sup> key in the selected scan column is pressed
		0 = pressed, 1 = not pressed
2	1	Indicates whether 6 <sup>th</sup> key in the selected scan column is pressed
		0 = pressed, 1 = not pressed
1	1	Indicates whether 7 <sup>th</sup> key in the selected scan column is pressed
		0 = pressed, 1 = not pressed
0	1	Indicates whether 8 <sup>th</sup> key in the selected scan column is pressed
		0 = pressed, 1 = not pressed

# 10.5.2.4 Keyboard Value Register (KVR0)

0x8002.200C

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
1st column KSCANI [7:0]							2nd column KSCANI [7:0]								
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
3rd column KSCANI [7:0]								4th column KSCANI [7:0]							

Bits	Type	Function
31:24	R	1st column matrix keyboard scan input data. For example, if the value of KBVR0[32:24] is
		00001100, the 5th and 6th keys are pressed and the others are released in 1st column.
23:16	R	2nd column matrix keyboard scan input data
15:8	R	3rd column matrix keyboard scan input data
7:0	R	4th column matrix keyboard scan input data

# 10.5.2.5 Keyboard Value Register (KVR1)

0x8002.2010

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
5th column KSCANI [7:0]								6th column KSCANI [7:0]							
15	15 14 13 12 11 10 9 8									5	4	3	2	1	0
7th column KSCANI [7:0]								8th co	olumn k	(SCAN	l [7:0]				

Bits	Type	Function
31:24	R	5th column matrix keyboard scan input data
23:16	R	6th column matrix keyboard scan input data
15:8	R	7th column matrix keyboard scan input data
7:0	R	8th column matrix keyboard scan input data

# 10.5.2.6 Keyboard Status Register (KBSR)

					1	0
					WAKEUP	INTR
Bits	Type	Function				



7:2	-	Reserved
1	R	The interrupt and the KBSR bit are cleared after the CPU reads KBSR. The WAKEUP bit is set if any key is pressed when SCANENABLE bit is inactive.  Wake up state:  0 = no key pressed or scan enabled  1 = key pressed when scan disabled
0	R	Key bufferstate: 0 = key buffer is not full 1 = key buffer is full





#### 10.6 PS/2 Interface Controller

This PS/2 Controller is an Advanced Microcontroller Bus Architecture (AMBA) compliant System-on-a-Chip peripheral providing industry-standard PS/2 data transfer channel. A channel has two bi-directional signals that serve as direct interfaces to an external keyboard, mouse or any other PS/2-compatible pointing device. This is an AMBA slave module that connects to the Advanced Peripheral Bus (APB). For more information about AMBA, please refer to the AMBA Specification (ARM IHI 0001).

#### **FEATURES**

- AMBA compliant
- PS/2 compatible interface
- Half-duplex bi-directional synchronous serial interface using open-drain outputs for clock and data
- Enable/Disable channel
- Operation in polled or interrupt-driven mode
- Hardware support for PS/2 auxiliary device protocol
- Maskable transmit and receive interrupts
- Automatic odd parity generation and checking
- Optional software based PS/2 implementation
- Test Interface Controller compatible test registers and test modes.

#### 10.6.1 External Signals

Pin Name	Type	Description
PSCLK	I/O	PS/2 compatible clock signal pin. Pull-up this pad output (open-drain pad used.)
PSDAT	I/O	PS/2 compatible data signal pin. Also pull-up this pad (open-drain).

#### 10.6.2 Registers

Address	Name	Width	Default	Description
0x8002.C000	PSDATA	8	00h	Transmit/Receive data register
0x8002.C004	PSSTAT	7	00h	Internal status register
0x8002.C008	PSCONF	6	00h	Configuration register
0x8002.C00C	PSINTR _	5	00h	Interrupt/Error status and Interrupt ACK register
0x8002.C010	PSTDLO	8	00h	Timing parameter register
0x8002.C014	PSTPRI	8	00h	Timing parameter register
0x8002.C018	PSTXMT	8	00h	Timing parameter register
0x8002.C020	PSTREC	8	00h	Timing parameter register
0x8002.C024	PSTIC0	1		Test Register 0
0x8002.C024	PSTIC1	8		Test Register 1
0x8002.C024	PSTIC2	8		Test Register 2
0x8002.C024	PSTIC3	8		Test Register 3
0x8002.C024	PSTIC4	8		Test Register 4
0x8002.C024	PSTIC5	8	•	Test Register 5
0x8002.C03C	PSPWDN	1	00h	Power-down configuration register

Table 10-5 PS/2 Controller Register Summary

NOTE: The initial value of registers may be not correct with the condition of testing environment. Above values are based on TIC test environment. With external model, some registers may have different value.

#### 10.6.2.1 PSDATA

7	6	5 5	4	3	2	1	0	002.C0
Trans	mit / Rece	eive Data						
Bits	Туре	Function						
7:0	R/W	Aften wells we DC	S/2 interface wait	to for one of t	uo ovonto:			



- 1. If data is written to the PSDATA register, a transmit sequence is initiated and the data is transmitted serially.
- 2. If data signal is pulled low by the external devices and clock signal's negative edge is detected, a receive sequence begins and data is clocked into PSDATA register.

At the end of transmission, transmit interrupt will occur. By reading PSSTAT status register will reveal the data is transmitted properly. Reading PSSTAT also de-asserts transmit interrupt request.

PS/2 controller usually remains in receive data mode if no data is transmitting. The controller automatically receives data from external device and generates receive interrupt. By just reading PSDATA register the data will be acquired and the receive interrupt will be cleared.

#### 10.6.2.2PSSTAT

0x8002.C004

		6	5	4	3	2	1	0
		PARITY	DATA IN	CLK IN	RX BUSY	RX FULL	TX BUSY	TX EMPTY
<b>-</b>								
Bits	Type	Function	1					
7	-	Reserved	d. Always Zero	)				
6	R/O	The parity bit of the last received data byte						
5	R/O	Double s	ynchronized v	alue of the cu	rrent PSDAT be	eing received/t	ransmitted	
4	R/O	Double s	ynchronized v	alue of the cu	rrent PSCLK be	eing received/t	ransmitted	
3	R/O	This bit in	ndicates that the	he PS/2 contr	oller is currently	receiving dat	a or not	
2	R/O	This bit in	ndicates that th	he a data is re	eceived and rea	dy to be read		
1	R/O	This bit in	ndicates that the	he PS/2 contr	oller is currently	transmitting o	data or not	
0	R/O	This bit in	ndicates that the	he transmit re	gister is empty	and ready to t	ransmit	

RX

#### 10.6.2.3PSCONF

0x8002.C008

ENIADIE

	L	CE DAT LOW CLK LOW INTREN INTREN	E
Bits	Type	Function	
7	-	Reserved	
6	R/W	Line Control detection Enable bit. If set, PS/2 controller checks the line control bit fi external device following by STOP bit. Otherwise PS/2 controller skips checking line corbit and proceeds to next operation. Default value is zero. Most PS/2 compatible descripports line control bit mechanism. But there are some devices that don't support line corbit. To handle such device, PS/2 controller can skip line control bit detection by resetting bit.	ntrol vice ntrol
5	R/W	When set, PSDAT output is forced LOW regardless of the current state of the PS/2 corlogic. This mode can be used as manual communication with external device.	ntrol
4	R/W	When set, PSCLK output is forced LOW regardless of the current state of the PS/2 cor logic.	ntrol
3	R/W	Enable receiver interrupt. To set means enable interrupt. Receiver interrupt is general whenever PS/2 controller finishes receiving a byte data from external device. Except whenever PS/2 controller goes in receive mode automatically. If receiver interrupt disabled, PS/2 controller doesn't notify a data received. So polling PSINTR interrupt registis needed.	hen ot is
2	R/W	Enable transmitter interrupt. To set means enable interrupt. Transmitter interrupt is general whenever PS/2 controller completes to transmit a byte data to external device. If transmit	

completed or poll interrupt register transmitter interrupt is generated.

Reserved

**FORCE** 

FORCE

As soon as this bit is enabled, PS/2 controller goes into receive mode by default.

interrupt is disabled then poll status register to know that the transmitting transaction is

When reset, PS/2 controller is disabled and gets into deep sleep mode. When set, enabled. To activate PS/2 controller,, first set proper parameters of timing registers and then set this bit.



#### 10.6.2.4PSINTR

					0x8002.C0	UC
	4	3	2	1	0	
		RECEIVE TIMIEOUT		RX INTR	TX INTR	

Bits	Type	Function
7:5	-	Reserved
4	R/O	Set when PS/2 controller fails to send a complete byte data to external device in a given time. The time limit is defined in PSTXMT register. PS/2 controller doesn't try to re-transmit the data. Reset when PSSTAT register is read.
3	R/O	Set when a byte data was not constructed in a certain predefined time limit due to no more bit received or bit-rate is too slow. The time limit is defined in PSTREC register. PSDATA shows the incomplete data that has been received by that time. Reset as soon as the next byte data is arrived.
2	R/O	Set when the last received data has parity error. Cleared when the very next byte data is arrived.
1	R/O	Set when PS/2 controller receives a byte data from external device. Cleared when PSDATA register is read. When PSCONF.RXINTREN is reset, the only way to know that receiver interrupt is generated is to read this bit.
0	R/O	Set when PS/2 controller completes to transmit a byte data to external device. Cleared when PSSTAT register is read. When PSCONF.TXINTREN is reset, poll this bit to confirm that the transmission is completed.

#### 10.6.2.5PSTDLO



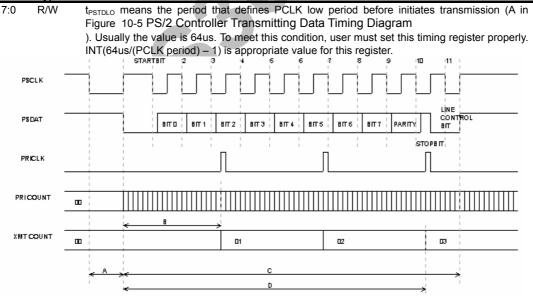


Figure 10-5 PS/2 Controller Transmitting Data Timing Diagram

A: tpstdlo, B: tpstpri, C: txmt, D: tpstxmt

#### 10.6.2.6 PSTPRI

							0x8002.C014
7	6	5	4	3	2	1	0
PSTPRI							




Bits	Type	Function
7:0	R/W	Every timer in PS/2 controller is clocked by PRICLK except PRI COUNTER that generates PRICLK itself. The reason why uses PRICLK instead of PCLK is that PCLK is too fast so timing check counter requires more bits than slower clock rate. The period of PRICLK is determined by (PSTPRI+1) * that of PCLK.

# 10.6.2.7 PSTXMT

J	~111111	-						0x8002	.C018
7		6	5	4	3	2	1	0	
PSTX	MT								
									_
Bits	Type	Function							_
7:0	R/W	Figure 10 ) = (PST Diagram ). Error c Transmit	O-5 PS/2 C XMT+1)*t <sub>Ps</sub> ondition is tting Data s t <sub>PSTXMT</sub> . Ty	Controller Trans STPRI (B in Figure when t <sub>XMT</sub> (total Timing Diagrar	mitting Data 7 e 10-5 PS/2 transmission ti m	Timing Di Controlle ime, C in	agram er Transmitti Figure 10-5	ed as t <sub>PSTXMT</sub> (D in ng Data Timing PS/2 Controlle	9 r

# 10.6

	PSTREC							0x8002.C020
7	6		5	4	3	2	1	0
PSTR	REC							
Bits	Type	Function						
7:0	R/W	t <sub>PSTREC</sub> (I ) = (PST Diagram ). Error c Receivin	B in Figu REC+1) condition g Data 1 Is t <sub>PSTRE</sub>	re 10-6 PS/ *t <sub>PSTPRI</sub> (A ir is when t <sub>REC</sub> iming Diagra b. Typical va	2 Controller In Figure 10- c(total receiving	Receiving D 6 PS/2 Cor	ata Timing D htroller Receinn n Figure 10-	t is calculated as liagram ving Data Timing 6 PS/2 Controller

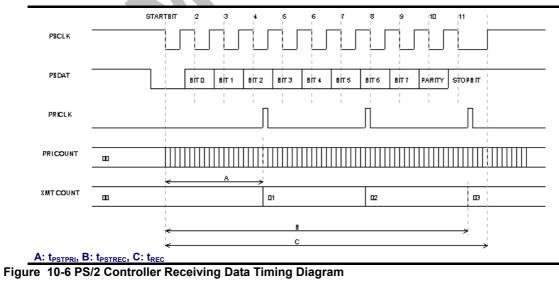



#### 10.6.2.9 PSPWDN

0x8002.C03C

			0
			PSPWDN

Bits	Type	Function
7:1	-	Reserved
0	R/W	Power Down disable. The initial value of power on reset is zero that means the PS/2 controller is in power down mode. To wake up PS/2 controller, set other timing registers then set this bit at last. User can put the PS/2 controller into power down mode by resetting this register at any time.

## 10.6.3 Application Notes

- Use pull up resistors at the PSCLK and PSDAT pad output.
- For example, in order to set  $t_{PSTXMT}$  as 15ms, when PCLK speed is 3.6864MHz (271.3ns), see the procedure shown below.
  - i.

  - iii.
  - First of all, total transmission time factor,  $t_{XMT}$  = (PSTXMT+1) \*  $t_{PSTPRI}$ . So that equation is expanded as follows:  $t_{XMT}$  = (PSTXMT+1) \* {(PSTPRI+1) \*  $t_{PCLK}$ }. When  $t_{XMT}$  is 15ms and  $t_{PCLK}$  is 271.3ns, . (PSTXMT+1) \* {(PSTPRI+1) is 55288. Due to both PSTXMT and PSTPRI is only 8-bit register, the values of these two register iv. can hold only up to 256. So if we set (PSTPRI+1) to 256 then (PSTXMT+1) will be 216.
  - PSTPRI = 255<sub>10</sub> = FF<sub>16</sub> ٧.
  - vi.  $PSTXMT = 215_{10} = D7_{16}$
- You can use the same flow to calculate t<sub>PSTREC</sub>. Basically as the root, t<sub>PSTPRI</sub>, is common with t<sub>PSTXMT</sub>, the only factor you have to calculate is just PSTREC.





#### 10.7 RTC

This module is a 32-bit counter clocked by a 32768Hz clock. This clock needs to be provided by the system, as there is no crystal inside the block. It also contains a 32-bit match register that can be programmed to generate an interrupt signal when the time in the RTC matches the specific value written to this register (alarm function - RTC event). The RTC has two event outputs, one which is synchronized to PCLK, RTCIRQ, and the second, URTCEV synchronized to the 32768Hz clock. RTCIRQ is connected to the system interrupt controller, and URTCEV is used by the PMU to provide a system alarm Wake up.

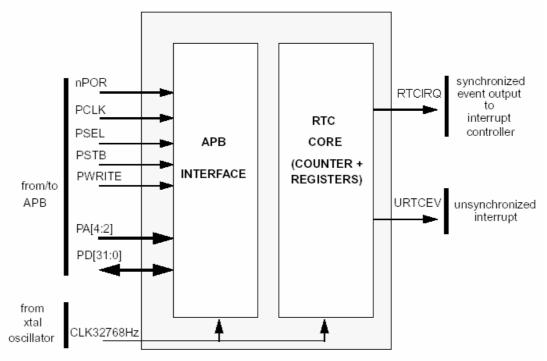


Figure 10-7 RTC Connection

As shown in Fig. 10-3, RTC module is connected to the APB. APB signals are refer to AMBA APB spec, and following table shows the non-AMBA signals from the RTC core block. The following table shows non-AMBA signals within RTC core block for more information about APB signals refer to the AMBA APB spec.

NAME	Source/Destination	Description
CLK32KHZ	Clock generator	32768HZ clock input. This is the signal that clocks the counter during normal operation.
RTCIRQ	APB(Interrupt controller)	Interrupt signal to the interrupt module. When HIGH, this signal indicates a valid comparison between the counter value and the match register. It also indicates 1HZ interval with enable bit in control register.
URTCEV	ASB(PMU)	When HIGH, this signal indicates a valid comparison between the counter value and the match register. This signal is used to wake up the HMS30C7202 when it is in deep sleep mode.

Table 10-6 Non-AMBA Signals within RTC Core Block

#### **FEATURES**

Two type of Alarm function



#### 10.7.1 External Signals

Pin Name	Type	Description
RTCOSCIN	1	RTC oscillator input. 32.768KHz
RTCOSCOUT	0	RTC oscillator output. 32.768KHz

#### 10.7.2 Functional Description

The counter is loaded by writing to the RTC data register. The counter will count up on each rising edge of the 1Hz clock and loops back to 0 when the maximum value(0xFFFFFFFF) is reached. At any moment the counter value can be obtained by reading the RTC data register.

The value of the match register can also be read at any time, and the read does not affect the counter value. The status of the interrupt signal is available in the status register. The status bit is set if a comparator match event has occurred or 1 second has elapsed. Reading from the status register will clear the status register.

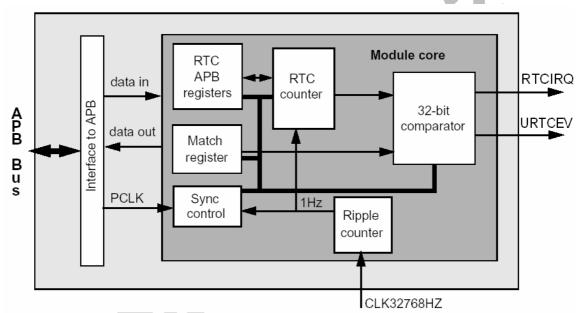


Figure 10-8 RTC Block Diagram

#### 10.7.3 Registers

31:0

R/W

Address	Name	Width	Default	Description
0x8002.8000	RTCDR	32	0x0	RTC Data Register
0x8002.8004	RTCMR	32	0xF	RTC Match Register
0x8002.8008	RTCS	2	0x0	RTC Status Register
0x8002.8010	RTCCR	2	0x0	RTC Control Register

Table 10-7 RTC Register Summary

## 10.7.3.1 RTC Data Register (RTCDR)

31	30 2	29 28	27	26	25	24	23	22	21	20	19	18	17	x8002. <b>16</b>
RTCD	DR [31:16	]												
15	14	13 12	11	10	9	8	7	6	5	4	3	2	1	0
RTCD	DR [15:0]													
Bits	Type	Function	on											

RTC Data register. Writing to this 32-bit register will load the counter. A read will give the



current value of the counter. The counter is loaded by writing to the RTC data register. The counter will count up on each rising edge of the clock and loops back to 0 when the maximum value (0xFFFFFFFF) is reached. At any moment the counter value can be obtained by reading the RTC data register.

# 10.7.3.2 RTC Match Register (RTCMR)

0x800	12.8	OC	14
-------	------	----	----

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
RTC	MR [31	:16]													
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
RTC	MR [15	·01													

Bits	Type	Function
31:0	R/W	RTC Match register. If this register's value is matched with current counter, an interrupt will be generated to implement alarm function. Writing to this 32-bit register will load the match register. This value can also be read back.

# 10.7.3.3 RTC Status Register (RTCS)

0x8002.8008

		1	0
		MATCH FLAG	1 SEC FLAG

Bits	Type	Function
7:2	-	Reserved
1	R	Match event interrupt flag is set if the counter value equals to the content of match register, RTCMR. Reading from the status register will clear the status register.
0	R	When performing a read from this register the interrupt flag will be cleared. If 1 second has elapsed, this bit will be set.

# 10.7.3.4 RTC Control Register (RTCCR)

		1	0
		MATCH INTR EN	1 SEC INTR EN

Bits	Type	Function
7:2	_	Reserved
1	R/W	Set this bit enables match event interrupt.
0	R/W	Set this bit enables 1 second event interrupt.



### **10.8 TIMER**

This module is a 32-bit counter clocked by a 3.6864MHz clock.

Timer is an AMBA slave module that connects to the Advanced Peripheral Bus (APB). For more information about AMBA, please refer to the AMBA Specification (ARM IHI 0001).

#### **FEATURES**

- 32-bit up ripple counter
- Auto repeat mode
- Count enable/disable
- Interrupt enable/disable
- 3-timer channel

### 10.8.1 External Signals

Pin Name	Type	Description	
PWM [1:0]	0	PWM Output	
TimerOut	0	Timer 1 output divided by 2	

### 10.8.2 Registers

Address	Name	Width	Default	Description
0x8002.5000	T0BASE	32	0xFFFFFFF	Timer0 Base Register
0x8002.5008	T0COUNT	32	0x0	Timer0 Counter Register
0x8002.5010	T0CTRL	3	0x0	Timer0 Control Register
0x8002.5020	T1BASE	32	0xFFFFFFF	Timer1 Base Register
0x8002.5028	T1COUNT	32	0x0	Timer1 Counter Register
0x8002.5030	T1CTRL	3	0x00	Timer1 Control Register
0x8002.5040	T2BASE	32	0xFFFFFFF	Timer2 Base Register
0x8002.5048	T2COUNT	32	0x0	Timer2 Counter Register
0x8002.5050	T2CTRL	3	0x0	Timer2 Control Register
0x8002.5060	TOPCTRL	32	0x9	Top-level Control Register
0x8002.5064	TOPSTAT	3	0x0	Top-level Status Register
0x8002.5080	T64LOW	32	0x0	Lower 32-bit of 64-bit counter (Timer3)
0x8002.5084	T64HIGH	32	0x0	Upper 32-bit of 64-bit counter (Timer3)
0x8002.5088	T64CTRL	2	0x0	64-bit Timer Control Register (Timer3)
0x8002.508C	T64TR	15	0x0	64-bit Timer Test Register (Timer3)
0x8002.5094	T64LBase	32	0xFFFFFFF	64-bit Timer Lower Base (Timer3)
0x8002.5098	T64HBase	32	0xFFFFFFF	64-bit Timer Higher Base (Timer3)
0x8002.50A0	P0COUNT	16	0x0	PWM channel 0 count register
0x8002.50A4	P0WIDTH	16	0xFFFF	PWM channel 0 width register
0x8002.50A8	P0PERIOD	16	0xFFFF	PWM channel 0 period register
0x8002.50AC	P0CTRL	5	0x0	PWM channel 0 control register
0x8002.50B0	P0PWMTR	4	0x0	PWM channel 0 test register
0x8002.50C0	P1COUNT	16	0x0	PWM channel 1 count register
0x8002.50C4	P1WIDTH	16	0xFFFF	PWM channel 1 width register
0x8002.50C8	P1PERIOD	16	0xFFFF	PWM channel 1 period register
0x8002.50CC	P1CTRL	5	0x0	PWM channel 1 control register
0x8002.50D0	P1PWMTR	4	0x0	PWM channel 1 test register

**Table 10-8 Timer Register Summary** 

10.8.2.1Timer [0,1,2] Base Register (T[0,1,2]BASE)



T[0,1	,2]BA	SE [31:1	[6]												
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
T[0,1	,2]BA	SE [15:0	0]												

Bits	Type	Function
31:0	R/W	Timer 0 (Timer 1, Timer 2) Base Register. 32-bit target count value (interval) is stored in here.
		The interrupt interval in repeat mode is (Base Register value + 1) clock periods.
		For example, if the Base Register is set to 0x3333, then the timer generates an interrupt
		request every 0x3333 + 1 clock cycles.

### 10.8.2.2Timer [0,1,2] Count Register (T[0,1,2]COUNT)

									(	0x8002	2.5008	/ 0x80	102.50	28 / Ux	8002.5	04
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	
T[0,1	,2]COI	JNT [31	1:16]													
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	

T[0,1,2]COUNT [15:0]

Bits	Type	Function			
31:0	R/W	32bit up counter			

### 10.8.2.3Timer [0,1,2] Control Register (T[0,1,2]CTRL)

0x8002.5010 / 0x8002.5030 / 0x8002.5050

	2	1	0
	RESET	REPEAT MODE	COUNT ENABLE

Bits	Type	Function
7:3	-	Reserved
2	R/W	Set for reset counter register
1	R/W	Set for count repeat mode
0	R/W	Set to start count and reset to stop. For Timer 0, Timer 1, and Timer 2 in non-repeat mode,
		This bit will be cleared automatically whenever the counter reaches the target value.

# 10.8.2.4Timer Top-level Control Register (TOPCTRL)

0x8002.5060

6	5	4	3	2	1	0
TIMER OUT EN	TIMER 64	TIMER 64 ENABLE	POWER DOWN	TIMER 2 INTR EN	TIMER 1	TIMER 0
OUTEN	IIN I K EIN	CINADLE	DOWN	IIN I I'X EIN	IIN I I'X EIN	IIN I I'X EIN

Bits	Type	Function
7	-	Reserved
6	R/W	Timer 1 Output Enable. The interval of this output is 2 times of interrupt interval of Timer 1.  0 = disable, 1 = enable
5	R/W	64bit Timer Counter Overflow Interrupt Enable 0 = disable, 1 = enable
4	R/W	64bit Timer Enable. 0 = disable, 1 = enable
3	R/W	Timer Controller POWER DOWN. 0 = Power Down mode, 1 = enable
2	R/W	Timer 2 Interrupt Enable 0 = disable, 1 = enable
1	R/W	Timer 1 Interrupt Enable 0 = disable, 1 = enable
0	R/W	Timer 0 Interrupt Enable. If reset, no interrupt is generated at Timer 0. 0 = disable, 1 = enable



# 10.8.2.5Timer Status Register (TOPSTAT)

0x8002.5064

3	2	1	0
TIMER 64	TIMER 2	TIMER 1	TIMER 0
INTR	INTR	INTR	INTR

Bits	Type	Function
7:4	-	Reserved
3	R	Timer 64 Interrupt Status Flag
2	R	Timer 2 Interrupt Status Flag
1	R	Timer 1 Interrupt Status Flag
0	R	Timer 0 Interrupt Status Flag

# 10.8.2.6Timer Lower 32-bit Count Register of 64-bit Counter (T64LOW)

0x8002.5080

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
			_												
T64L	.OW [31	:161													
		-,													
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
T64L	.OW [15	5:01													

Bits	Type	Function	
31:0	R/W	Lower 32bit count value of 64bit Timer (Timer3)	

# 10.8.2.7Timer Upper 32-bit Count Register of 64-bit Counter (T64HIGH)

0x8002.5084

											UXC	0002.50
31 30 29	28	27 26	25	24	23	22	21	20	19	18	17	16
T64HIGH [31:16]												
15 14 13	12	11 10	9	8	7	6	5	4	3	2	1	0
T64HIGH [15:0]												

Bits	Type	Function
31:0	R/W	Upper 32bit count value of 64bit Timer (Timer3)

### 10.8.2.8Timer 64-bit Counter Control Register (T64CTRL)

0x8002.5088

COUNT

ENARIE

			LINABLE
Bits	Type	Function	
7:3	-	Reserved	
2	R/W	Reset Timer 64 (Timer3).	
		0 = Keep Counting, 1 = Reset the counter register	
1		Reserved	
0	R/W	Timer 64 (Timer3)Enable.	
		0 = Stop Counter, 1 = Start Counter	

RESET

# 10.8.2.9Timer 64-bit Counter Test Register (T64TR)

0x8002.508C

					10	9	8
(	Creg59	Creg55	Creg51	Creg47	Creg43	Creg39	Creg35
7	6	5	4	3	2	1	0
Creg31	Creg27	Creg23	CReg19	CReg15	CReg11	CReg7	CReg3



14	W	When TestReg[59] is HIGH, output is the same as CountCLK inversion.
		When TestReg[59] is LOW, output is the same as CountReg[59]
13	W	When TestReg[55] is HIGH, output is the same as CountCLK inversion.
		When TestReg[55] is LOW, output is the same as CountReg[55]
12	W	When TestReg[51] is HIGH, output is the same as CountCLK inversion.
		When TestReg[51]] is LOW, output is the same as CountReg[51]
11	W	When TestReg[47] is HIGH, output is the same as CountCLK inversion.
		When TestReg[47] is LOW, output is the same as CountReg[47]
10	W	When TestReg[43] is HIGH, output is the same as CountCLK inversion.
		When TestReg[43] is LOW, output is the same as CountReg[43]
9	W	When TestReg[39] is HIGH, output is the same as CountCLK inversion.
		When TestReg[39] is LOW, output is the same as CountReg[39]
8	W	When TestReg[35] is HIGH, output is the same as CountCLK inversion.
		When TestReg[35] is LOW, output is the same as CountReg[35]
7	W	When TestReg[31] is HIGH, output is the same as CountCLK inversion.
		When TestReg[31] is LOW, output is the same as CountReg[31]
6	W	When TestReg[27] is HIGH, output is the same as CountCLK inversion.
		When TestReg[27] is LOW, output is the same as CountReg[27]
5	W	When TestReg[23] is HIGH, output is the same as CountCLK inversion.
		When TestReg[23] is LOW, output is the same as CountReg[23]
4	W	When TestReg[19] is HIGH, output is the same as CountCLK inversion.
		When TestReg[19] is LOW, output is the same as CountReg[19]
3	W	When TestReg[15] is HIGH, output is the same as CountCLK inversion.
		When TestReg[15] is LOW, output is the same as CountReg[15]
2	W	When TestReg[11] is HIGH, output is the same as CountCLK inversion.
		When TestReg[11] is LOW, output is the same as CountReg[11]
1	W	When TestReg[7] is HIGH, output is the same as CountCLK inversion.
		When TestReg[7] is LOW, output is the same as CountReg[7]
0	W	When TestReg[3] is HIGH, output is the same as CountCLK inversion.
		When TestReg[3] is LOW, output is the same as CountReg[3]

# 10.8.2.10 Timer Lower 32-bit Base Register of 64-bit Counter (T64LBASE)

						•				`		/		0x	8002.5	5094
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	
T64L	BASE [	31:16]														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
T64L	BASE [	15:0]														

Bits	Type	Function
31:0	R/W	Lower 32bit base value of 64bit Timer (Timer3)

# 10.8.2.11 Timer Upper 32-bit Base Register of 64-bit Counter (T64HBASE)

														0x	8002.5	5098
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	
T64H	BASE	[31:16]														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
T64H	BASE	[15:0]														

Bits	Type	Function
31:0	R/W	Upper 32bit base value of 64bit Timer (Timer3)

# 10.8.2.12 PWM Channel [0,1] Count Register (P[0,1]COUNT)

				, <u>1</u>								0x8002.50A0 / 0x8002.50C0				
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
P[0,1	]COUN	ΙT														

Bits	Type	Function
15:0	R	PWM [0,1] Count Register



### 10.8.2.13 PWM Channel [0,1] Width Register (P[0,1]WIDTH)

0x8002.50A4 / 0x8002.50C4

					0A0002.0	0/ ( 1 / 0//000 <u>2</u> .0	
15 14 13 12	11 10	9 8	7 6	5 4	3 2	1 0	
P[0,1]WIDTH							

Bits	Type	Function
15:0	R/W	PWM [0,1] Width Register. Actual width of output is (P[0,1]WIDTH + 1) / PCLK.

# 10.8.2.14 PWM Channel [0,1] Period Register (P[0,1]PERIOD)

0x8002.50A8 / 0x8002.50C8

3 2 1 0

15	14	13	12	11	10	9	8	7	6	5	
P[0.1]	IPERIC	D									

Bits	Туре	Function
15:0	R/W	PWM [0,1] Period Register. Actual Period of output is (P[0,1]PERIOD + 1) / PCLK.

### 10.8.2.15 PWM Channel [0,1] Control Register (P[0,1]CTRL)

0x8002.50AC / 0x8002.50CC

		CLK SEL OUTPUT OUTPUT RESET PWM[0,1] ENABLE
Bits	Туре	Function
7:5	-	Reserved
4	R/W	PWM [0,1] Source Clock Selection(PCLK) 0 = 3.6864MHz, 1 = 1.8432MHz
3	R/W	PWM [0,1] Output Waveform Inverting 0 = non inverting, 1 = inverting
2	R/W	PWM [0,1] Output Enable 0 = disable output driver, 1 = enable output driver
1	R/W	PWM [0,1] Counter Reset 0 = keep count, 1 = reset counter register
0	R/W	PWM [0,1] Counter Enable. 0 = stop counter, 1 = start counter

# 10.8.2.16 PWM Channel[0,1] Test Register(P[0,1]PWMTR)

0x8002.50B0 / 0x8002.50D0

Bits	Туре	Function
3		Reseved
2	W	When TestReg[11] is HIGH, output is the same as CountCLK inversion. When TestReg[11] is LOW, output is the same as CountReg[11]
1	W	When TestReg[7] is HIGH, output is the same as CountCLK inversion.  When TestReg[7] is LOW, output is the same as CountReg[7]
0	W	When TestReg[3] is HIGH, output is the same as CountCLK inversion.  When TestReg[3] is LOW, output is the same as CountReg[3]

Reserved Creg11 Creg7



#### 10.9 UART/SIR

The 16C550 is a Universal Asynchronous Receiver/Transmitter (UART), with FIFOs, and is functionally identical to the 16C450 on power-up (CHARACTER mode). The 16550 can be put into an alternate mode (FIFO mode) to relieve the CPU of excessive software overhead. In this mode internal FIFOs are activated, allowing 16 bytes plus 3 bit of error data per byte in the RCVR FIFO, to be stored in both receive and transmit modes. All the logic is on the chip to minimize the system overhead and to maximize efficiency.

The UART performs serial-to-parallel conversion on data characters received from a peripheral device or a MODEM, and parallel-to-serial conversion on data characters received from the CPU. The CPU can read the complete status of the UART at any time during the functional operation. Status information reported includes the type and condition of the transfer operations being performed by the UART, as well as any error conditions (parity, overrun, framing, or break interrupt).

The UART includes a programmable baud rate generator capable of dividing the timing reference clock input by divisors of 1 to 2<sup>16</sup>-1, and producing a 16x clock for driving the internal transmitter logic. Provisions are also included to use this 16x clock to drive the receiver logic.

The UART has complete MODEM-control capability, and a processor-interrupt system. Interrupts can be programmed to the user's requirements, minimizing the computing required to handle the communications link.

#### **FEATURES**

- Capable of running all existing 16C450 software.
- After reset, all registers are identical to the 16C450 register set.
- The FIFO mode transmitter and receiver are each buffered with 16 byte FIFOs to reduce the number of interrupts presented to the CPU.
- Add or delete standard asynchronous communication bits (start, stop and parity) to or from the serial data.
- Holding and shift registers in the 16C450 mode eliminate the need for precise synchronization between the CPU and serial data.
- Independently controlled transmit, receive, line status and data set interrupts.
- Programmable baud generator divides any input clock by 1 to 65535 and generates 16x clock
- Independent receiver clock input.
- MODEM control functions (CTS, RTS, DSR, DTR, RI and DCD).
- Fully programmable serial-interface characteristics:
- 5-, 6-, 7- or 8-bit characters
- Even, odd or no-parity bit generation and detection
- 1-, 1.5- or 2-stop bit generation and detection
- Baud generation (DC to 230k baud)
- False start bit detection.
- Complete status-reporting capabilities.
- Line breaks generation and detection.
- Internal diagnostic capabilities:
- Loopback controls for communications link fault isolation
- Full prioritized interrupt system controls.

### 10.9.1 External Signals

Pin Name	Type	Description
nURING	I	UART 0 ring input signal (wake-up signal to PMU).
		When LOW, this indicates that the MODEM or data set has received a telephone
		ring signal. The nURING signal is a MODEM status input whose condition can be
		tested by the CPU reading bit 6 (RI) of the MODEM Status Register. Bit 6 is the
	complement of the nURING signal. Bit 2 (TERI) of the MODEM Status Register	
		indicates whether the nURING input signal has changed from a LOW to a HIGH
		state since the previous reading of the MODEM Status Register.
		Note: Whenever the RI bit of the MODEM Status Register changes from a HIGH
		to a LOW state, an interrupt is generated if the MODEM Status Interrupt is
		enabled. The nURING input from the external PAD is not provided. To use this
		signal, you should set up the UART control register of the AFE interface. For
		further information, refer to 13.9 Analog Front End, AFE (CODEC Interface) on



nUDTR O UART 0 data terminal ready. When LOW, this informs the MODEM or dethat the UART is ready to establish communication link. The nUDTR output signal can be set to an active LOW by programmin (DTR) of the MODEM Control Register to HIGH level. A Master Reset op sets this signal to its inactive (HIGH) state. Loop mode operation holds this in its inactive state.  nUCTS I UART 0 clear to send input. When LOW, this indicates that the MODEM set is ready to exchange data. The nUCTS signal is a MODEM statu whose conditions can be tested by the CPU reading bit 4 (CTS) of the M Status Register indicates whether the nUCTS input has changed state sin previous reading of the MODEM Status Register. nUCTS has no effect Transmitter.  Note: Whenever the CTS bit of the MODEM Status Register changes its an interrupt is generated if the MODEM Status Interrupt is enabled.  NURTS O UART 0 request to send. When LOW, this informs the MODEM or data set the UART is ready to exchange data. The nURTS output signal can be set.	or data is input MODEM noe the on the
The nUDTR output signal can be set to an active LOW by programmin (DTR) of the MODEM Control Register to HIGH level. A Master Reset op sets this signal to its inactive (HIGH) state. Loop mode operation holds this in its inactive state.  NUCTS  I UART 0 clear to send input. When LOW, this indicates that the MODEM set is ready to exchange data. The nUCTS signal is a MODEM statu whose conditions can be tested by the CPU reading bit 4 (CTS) of the M Status Register indicates whether the nUCTS input has changed state sin previous reading of the MODEM Status Register. nUCTS has no effect Transmitter.  Note: Whenever the CTS bit of the MODEM Status Register changes its an interrupt is generated if the MODEM Status Interrupt is enabled.  NURTS  O UART 0 request to send. When LOW, this informs the MODEM or data sets to the modern status interrupt is enabled.	or data is input IODEM ince the on the
(DTR) of the MODEM Control Register to HIGH level. A Master Reset op sets this signal to its inactive (HIGH) state. Loop mode operation holds this in its inactive state.  nUCTS  I UART 0 clear to send input. When LOW, this indicates that the MODEM set is ready to exchange data. The nUCTS signal is a MODEM statu whose conditions can be tested by the CPU reading bit 4 (CTS) of the M Status Register indicates whether the nUCTS input has changed state sin previous reading of the MODEM Status Register. nUCTS has no effect Transmitter.  Note: Whenever the CTS bit of the MODEM Status Register changes its an interrupt is generated if the MODEM Status Interrupt is enabled.  nURTS  O UART 0 request to send. When LOW, this informs the MODEM or data sets that the MODEM status interrupt is enabled.	or data is input IODEM ince the on the
sets this signal to its inactive (HIGH) state. Loop mode operation holds this in its inactive state.  nUCTS  I UART 0 clear to send input. When LOW, this indicates that the MODEM set is ready to exchange data. The nUCTS signal is a MODEM statu whose conditions can be tested by the CPU reading bit 4 (CTS) of the M Status Register indicates whether the nUCTS input has changed state sin previous reading of the MODEM Status Register. nUCTS has no effect Transmitter.  Note: Whenever the CTS bit of the MODEM Status Register changes its an interrupt is generated if the MODEM Status Interrupt is enabled.  nURTS  O UART 0 request to send. When LOW, this informs the MODEM or data sets the interrupt is senabled.	or data s input MODEM nce the on the
in its inactive state.  NUCTS  I UART 0 clear to send input. When LOW, this indicates that the MODEM set is ready to exchange data. The nUCTS signal is a MODEM statu whose conditions can be tested by the CPU reading bit 4 (CTS) of the M Status Register indicates whether the nUCTS input has changed state sin previous reading of the MODEM Status Register. nUCTS has no effect Transmitter.  Note: Whenever the CTS bit of the MODEM Status Register changes its an interrupt is generated if the MODEM Status Interrupt is enabled.  NURTS  O UART 0 request to send. When LOW, this informs the MODEM or data sets to send the model of the MODEM or data sets the model of the MODEM o	or data s input IODEM nce the on the
in its inactive state.  NUCTS  I UART 0 clear to send input. When LOW, this indicates that the MODEM set is ready to exchange data. The nUCTS signal is a MODEM statu whose conditions can be tested by the CPU reading bit 4 (CTS) of the M Status Register indicates whether the nUCTS input has changed state sin previous reading of the MODEM Status Register. nUCTS has no effect Transmitter.  Note: Whenever the CTS bit of the MODEM Status Register changes its an interrupt is generated if the MODEM Status Interrupt is enabled.  NURTS  O UART 0 request to send. When LOW, this informs the MODEM or data sets to send the model of the MODEM or data sets the model of the MODEM o	or data s input IODEM nce the on the
nUCTS  I UART 0 clear to send input. When LOW, this indicates that the MODEM set is ready to exchange data. The nUCTS signal is a MODEM statu whose conditions can be tested by the CPU reading bit 4 (CTS) of the M Status Register indicates whether the nUCTS input has changed state sin previous reading of the MODEM Status Register. nUCTS has no effect Transmitter.  Note: Whenever the CTS bit of the MODEM Status Register changes its an interrupt is generated if the MODEM Status Interrupt is enabled.  nURTS  O UART 0 request to send. When LOW, this informs the MODEM or data sets to send the model of the MODEM or data sets the model of the MODEM or data s	is input IODEM ince the on the
set is ready to exchange data. The nUCTS signal is a MODEM statu whose conditions can be tested by the CPU reading bit 4 (CTS) of the M Status Register indicates whether the nUCTS input has changed state sin previous reading of the MODEM Status Register. nUCTS has no effect Transmitter.  Note: Whenever the CTS bit of the MODEM Status Register changes its an interrupt is generated if the MODEM Status Interrupt is enabled.  NURTS  O UART 0 request to send. When LOW, this informs the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the MODEM or data sets to send the number of the number o	is input IODEM ince the on the
whose conditions can be tested by the CPU reading bit 4 (CTS) of the M Status Register indicates whether the nUCTS input has changed state sin previous reading of the MODEM Status Register. nUCTS has no effect Transmitter.  Note: Whenever the CTS bit of the MODEM Status Register changes its an interrupt is generated if the MODEM Status Interrupt is enabled.  nURTS  O UART 0 request to send. When LOW, this informs the MODEM or data sets to the model of the MODEM or data sets to send.	ODEM nce the on the
Status Register indicates whether the nUCTS input has changed state sing previous reading of the MODEM Status Register. nUCTS has no effect Transmitter.  Note: Whenever the CTS bit of the MODEM Status Register changes its an interrupt is generated if the MODEM Status Interrupt is enabled.  NURTS O UART 0 request to send. When LOW, this informs the MODEM or data is	nce the on the
previous reading of the MODEM Status Register. nUCTS has no effect Transmitter.  Note: Whenever the CTS bit of the MODEM Status Register changes its an interrupt is generated if the MODEM Status Interrupt is enabled.  NURTS O UART 0 request to send. When LOW, this informs the MODEM or data sets to send the modem of the MODEM or data sets the modem of the MODEM or	on the
Transmitter.  Note: Whenever the CTS bit of the MODEM Status Register changes its an interrupt is generated if the MODEM Status Interrupt is enabled.  NURTS O UART 0 request to send. When LOW, this informs the MODEM or data sets to send.	
Note: Whenever the CTS bit of the MODEM Status Register changes its an interrupt is generated if the MODEM Status Interrupt is enabled.  NURTS O UART 0 request to send. When LOW, this informs the MODEM or data states to send.	4-4-
nURTS O UART 0 request to send. When LOW, this informs the MODEM or data s	s state
nURTS O UART 0 request to send. When LOW, this informs the MODEM or data s	otato,
	set that
active LOW by programming bit 1 (RTS) of the MODEM Control Regi	
Master Reset operation sets this signal to its inactive (HIGH) state. Loop	
operation holds this signal in its inactive state.	Tillouc
nUDSR I UART 0 data set ready input. When LOW, this indicates that the MODEM	or data
set is ready to establish the communications link with the UART. The r	
signal is a MODEM status input whose conditions can be tested by the	
reading bit 5 (DSR) of the MODEM Status Register. Bit 5 is the compler	
the nUDSR signal. Bit 1(DDSR) of MODEM Status Register indicates v	
the nUDSR input has changed state since the previous reading of the M	
status register.	IODEIVI
Note: Whenever the DSR bit of the MODEM Status Register changes its	e etato
	s state,
an interrupt is generated if the MODEM Status Interrupt is enabled.	
nUDCD I UART 0 data carrier detect input. When LOW, indicates that the data carr	
been detected by the MODEM data set. The signal is a MODEM statu	
whose condition can be tested by the CPU reading bit 7 (DCD) of the M	
Status Register. Bit 7 is the complement of the signal. Bit 3 (DDCD)	
MODEM Status Register indicates whether the input has changed state sit	
previous reading of the MODEM Status Register. nUDCD has no effect	on the
réceiver.	
Note: Whenever the DCD bit of the MODEM Status Register changes its	s state,
an interrupt is generated if the MODEM Status Interrupt is enabled.	
USIN [0]   UART 0 serial data inputs. Serial data input from the communication	ns link
(peripheral device, MODEM or data set).	
USOUT [0] O UART 0 serial data outputs. Composite serial data output to the communi	
link (peripheral, MODEM or data set). The USOUT signal is set to the M	/larking
(logic 1) state upon a Master Reset operation.	
USIN [1] I UART 1 serial data inputs	
USOUT [1] O UART 1 serial data outputs	
USIN [2] UART 2 serial data inputs (muxed with KSCANO5)	
USOUT [2] O UART 2 serial data outputs (muxed with KSCANO6)	_
USIN [3] I UART 3 serial data inputs (muxed with KSCANI5)	
USOUT [3] O UART 3 serial data outputs (muxed with KSCANI6)	

# 10.9.2 Registers

Address	Name	Width	Default	Description
0x8002.0000	U0Base	-	-	UART 0 Base
0x8002.1000	U1Base	-	-	UART 1 Base
0x8002.D000	U2Base	-	-	UART 2 Base
0x8002.E000	U3Base	-	-	UART 3 Base
UxBase+0x00	RBR	8	0x0	Receiver Buffer Register (DLAB = 0, Read)
	THR			Transmitter Holding Register (DLAB = 0, Write)



	DLL			Divisor Latch Least Significant Byte (DLAB = 1)
UxBase+0x04	IER	8	0x0	Interrupt Enable Register (DLAB = 0)
	DLM			Divisor Latch Most Significant Byte (DLAB = 1)
UxBase+0x08	IIR	8	0x1	Interrupt Identification Register (Read)
	FCR		0x0	FIFO Control Register (Write)
UxBase+0x0C	LCR	8	0x0	Line Control Register
UxBase+0x10	MCR	3	0x0	Modem Control Register
UxBase+0x14	LSR	8	0x60	Line Status Register
UxBase+0x18	MSR	8	0xX0	Modem Status Register
UxBase+0x1C	SCR	8	0x0	Scratch Register
UxBase+0x30	UartEN	1	0x0	UART Enable Register
		or 4		In Uart 1, this bit width is 4 (support SIR)

### Table 10-9 UART/SIR Register Summary

### 10.9.2.1 RBR/THR/DLL

.2.1 1	D10, 111	TUBLE						UxBase+	0x00		
7		6	5	4	3	2	1	0			
Data I	Data Bit 7 ~ Data Bit 0 (RBR, THR; DLAB = 0)										
Bit 7 ~	Bit 0 (D	LL; DLAB = 1	l)								
									_		
Bits	Type	Function							_		
7:0	R/W	When DL	When DLAB = 0, read this register represents RBR while writes does THR.								
		When DL	AB = 1, DLL	will be read or v	written.	1					

#### 10.9.2.2 IER/DLM

This register enables the five types of UART interrupts. Each interrupt can individually activate the interrupt (INTUART) output signal. It is possible to totally disable the interrupt Enable Register (IER). Similarly, setting bits of the IER register to logic 1 enables the selected interrupt(s). Disabling an interrupt prevents it from being indicated as active in the IIR and from activating the INTUART output signal. All other system functions operate in their normal manner, including the setting of the Line Status and MODEM Status Registers. Table 13-6: Summary of registers on page 13-10 shows the contents of the IER. Details on each bit follow.

							UxBase+0x04
7	6	5	4	3	2	1	0
0	0	0	0	MS INTR	LS INTR	TX EMPTY INTR	DATA RDY INTR
Bit 7 ~ Bit 0 I	DLM; (DLAB =	1)					

Bits	Туре	Function		
		IER	DLM	
7	R/W	0	Most significant byte of Divisor Latch	
6	R/W	0		
5	R/W	0		
4	R/W	0		
3	R/W	Enables the MODEM Status Interrupt when		
		set to logic 1.		
2	R/W	Enables the Receiver Line Status Interrupt		
		when set to logic 1.		
1	R/W	Enables the Transmitter Holding Register		
		Empty Interrupt when set to logic 1.		
0	R/W	Enables the Received Data Available		
		Interrupt (and time-out interrupts in the FIFO		
		mode) when set to logic 1.		

### 10.9.2.3 IIR/FCR

							UxBase+0x08
7	6	5	4	3	2	1	0



FIFO EN	0	0	INTR ID			INTR PEND
RCVR TRIG LEVEL	-	-	-	XMIT RESET	RCVR RESET	FIFO EN

#### **Interrupt Identification Register**

In order to provide minimum software overhead during data character transfers, the UART prioritizes interrupts into four levels and records these in the Interrupt Identification Register. The four levels of interrupt conditions are, in order of priority

- 1. Receiver Line Status
- Received Data Ready
- 3. Transmitter Holding Register Empty
- MODEM Status

When the CPU accesses the IIR, the UART freezes all interrupts and indicates the highest priority pending interrupt to the CPU. While this CPU access is occurring, the UART records new interrupts, but does not change its current indication until the access is complete.

Bits	Type	Function
7:6	R	These two bits are set when FCR [0] = 1.
5:4	R	These two bits of the IIR are always logic 0
3:1	R	These two bits of the IIR are used to identify the highest priority interrupt pending. In the 16C450 mode, IIR [3] is 0. In the FIFO mode, IIR [3] is set along with IIR [2] when a time-out interrupt is pending

IIR [3:1]

**Interrupt Set and Reset Function** 

Priority Level Interrupt Type Interrupt Source Interrupt Reset Control

000

None

None

011

Highest Receiver Line Status

Overrun Error or Parity Error or Framing Error or Break Interrupt

Reading the Line Status Register

010

Second

Receiver Data Available

Receiver Data Available or Trigger Level Reached

Reading the Receiver Buffer Register or the FIFO drops below the trigger level

110

Second

**Character Time-out Indication** 

No Characters have been removed from or input to the RCVR FIFO during the last 4 Character times and there is at least 1 Character in it during this time

Reading the Receiver Buffer Register



		001 Third Transmitter Holding Register Empty Transmitter Holding Register Empty Reading the IIR Register (if source of interrupt) or writing into the Transmitter Holding Register
		000 Fourth MODEM Status Clear to Send or Data Set Ready or Ring Indicator or Data Carrier Detect Reading the MODEM Status Register
0	R	This bit can be used in a prioritized interrupt environment to indicate whether an interrupt is pending. When bit 0 is logic 0, an interrupt is pending and the IIR contents may be used as a pointer to the appropriate interrupt service routine. When bit 0 is logic 1, no interrupt is pending

### **FIFO Control Register**

This is a write-only register at the same location as the IIR (the IIR is a read-only register). This register is used to enable the FIFOs, clear the FIFOs and set the RCVR FIFO trigger level.

Bits	Type	Function
7:6	W	These two bits sets the trigger level for the RCVR FIFO interrupt
		Value RCVR FIFO Trigger Level (Bytes)
		00 01
		01 04
		10 08
		11 14
5:3	-	Reserved
2	W	Writing 1 resets the transmitter FIFO counter logic to 0. The shift register is not cleared. The 1
1	W	that is written to this bit position is self-clearing  Writing 1 resets the receiver FIFO counter logic to 0. The shift register is not cleared. The 1
į	VV	that is written to this bit position is self-clearing
0	W	Writing 1 enables both the XMIT and RCVR FIFOs. Resetting FCR0 will clear all bytes in both FIFOs. When changing from FIFO Mode to 16C450 Mode and vice versa, data is
		automatically cleared from the FIFOs. This bit must be a 1 when other FCR bits are written to or they will not be programmed

### 10.9.2.4 LCR

The system programmer specifies the format of the asynchronous data communications exchange and set the Divisor Latch Access bit via the Line Control Register (LCR). The programmer can also read the contents of the Line Control Register. The read capability simplifies system programming and eliminates the need for separate storage in system memory of the line characteristics.

UxBase+0x0C

7	6	5	4	3	2	1	0
DLAB	SET BREAK	STICK PARITY	EVEN PARITY	PARITY ENABLE	STOPBIT NUMBER	WORD SELECT	LENGTH

Bits	Type	Function
7		This bit is the Divisor Latch Access Bit (DLAB). It must be set HIGH (logic 1) to access the Divisor Latches of the Baud Generator during a Read or Write operation. It must be set LOW (logic 0) to access the Receiver Buffer, the Transmitter Holding Register or the Interrupt
		Enable Register
6	•	This bit is the Break Control bit. It causes a break condition to be transmitted to the receiving



		UART 1	When it is set to logic 1, the serial output (SOUT) is forced to the Spaci	ing (logic 0)			
			The break is disabled by setting logic 0. The Break Control bit acts only on	0 ( 0 /			
		has no effect on the transmitter logic. Note: This feature enables the CPU to alert a termina					
			outer communications system. If the following sequence is followed, no e				
		•	eous characters will be transmitted because of the break.				
5			t is the Stick Parity bit. When bits 3, 4 and 5 are logic 1 the Parity bit is tran	smitted and			
Ü			d as logic 0. If bits 3 and 5 are 1 and bit 4 is logic 0 then the Parity bit is				
			ecked as logic 1. If bit 5 is a logic 0 Stick Parity is disabled.	transmitted			
4			t is the Even Parity Select bit. When bit 3 is logic 1 and bit 4 is logic 0, and	odd numbor			
4			t is the Even Fanty Select bit. When bit 3 is logic 1 and bit 4 is logic 0, and the Even Fanty Select bit. When bit is stransmitted or checked in the data word bits and Parity bit. When bit				
				i a is logic i			
			4 is logic 1, an even number of logic 1s is transmitted or checked.				
3			t is the Parity Enable bit. When bit 3 is logic 1, a Parity bit is generated (tra				
			cked (receive data) between the last data word bit and Stop bit of the seria	`			
		,	bit is used to produce an even or odd number of 1s when the data word	bits and the			
			pit are summed).				
2			t specifies the number of Stop bits transmitted and received in each serial				
		bit 2 is l	logic 0, one Stop bit is generated in the transmitted data. If bit 2 is logic 1 v	when a 5-bit			
		word le	ength is selected via bits 0 and 1, one and a half Stop bits are generated.	If bit 2 is a			
		logic 1	when either a 6-, 7- or 8-bit word length is selected, two Stop bits are gen	erated. The			
		Receive	er checks the first Stop-bit only, regardless of the number of Stop bits select	ted.			
1:0	R/W	These t	two bits specify the number of bits in each transmitted and received seria	al character.			
		The end	coding of bits 0 and 1 is as follows:				
		Value	Character Length				
		00	5 Bits				
		01	6 Bits				
		10	7 Bits				
		11	8 Bits				

### **Programmable Baud Generator**

Baud rate table below provides decimal divisors to use with a crystal frequency of 3.6864MHz. For baud rates of 38400 and below, the error obtained is minimal. The accuracy of the desired baud rate is dependent on the crystal frequency chosen. Using a divisor of zero is not recommended.

Desired Baud Rate	Decimal Divisor (Used to generate 16 x Clock)	Percent Error Difference Between Desired and Actual
50	4608	-
110	2094	0.026
300	768	-
1200	192	-
2400	96	-
4800	48	-
9600	24	-
19200	12	-
38400	6	-
57600	4	
115200	2	

Table 10-10 Baud Rate with Decimal Divisor at 3.6864MHz Crystal Frequency

### 10.9.2.5 MCR

This register controls the interface with the MODEM or data set (or a peripheral device emulating a MODEM).



UxBase+0x10

7	6	5	4	3	2	1	0
0	0	0	LOOP	-	-	RTS	DTR

Bits	Type	Function
7:5	R	These bits are permanently set to logic 0
4		This bit provides a local loop back feature for diagnostic testing of the UART. When bit 4 is set to logic 1, the following occur: the transmitter Serial Output (SOUT) is set to the Marking (logic 1) state; the receiver Serial Input (SIN) is disconnected; the output of the Transmitter Shift Register is "looped back" into the Receiver Shift Register input; the four MODEM Control inputs (NCTS, NDSR, NDCD and NRI) are disconnected; and the two MODEM Control outputs (NDTR and NRTS) are internally connected to the four MODEM Control inputs, and the MODEM Control output pins are forced to their inactive state (HIGH). On the diagnostic mode, data that is transmitted is immediately received. This feature allows the processor to verify the transmit- and received-data paths of the UART.  In the diagnostic mode, the receiver and transmitter interrupts are fully operational. Their sources are external to the part. The MODEM Control interrupts are also operational, but the interrupts sources are now the lower four bits of the MODEM Control Register instead of the four MODEM Control inputs. The interrupts are still controlled by the Interrupt Enable Register.
3:2	-	Reserved
1		This bit controls the Request to Send (nURTS) output. Bit 1 affects the NRTS output in a manner identical to that described above for bit 0.
0	R/W	This bit controls the Data Terminal Ready (nUDTR) output. When bit is set to logic 1, the NDTR output is forced to logic 0. When bit 0 is reset to logic 0, the NDTR output is forced to logic 1.  Note:  The NDTR output of the UART may be applied to an EIA inverting line driver (such as the DS1488) to obtain the proper polarity input at the succeeding MODEM or data set.

### 10.9.2.6 LSR

7 6

This register provides status information to the CPU concerning the data transfer.

UxBase+0x14

FIFO ERR		TEMT	THRE	BI	FE	PE	OE	DR
Bits	Туре	Function						
7	R							
6								
5	R	This bit is the Transmitter Holding Register Empty (THRE) indicator. Bit 5 indicates that the UART is ready to accept a new character for transmission. In addition, this bit causes the UART to issue an interrupt to the CPU when the Transmit Holding Register Empty Interrupt enable is set HIGH. The THRE bit is set to a logic 1 when a character is transferred from the Transmitter Holding Register into the Transmitter Shift Register. The bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register. In the FIFO mode this bit is set when the XMIT FIFO is empty; it is cleared when at least 1 byte is written to the XMIT FIFO.						
4	R	input is h the total the CPU associate CPU who	eld in the Sp time of Start reads the ed with the p en its associ	pacing (logic bit + data be contents of particular characted charac	0) state for long its + Parity + S the Line Statu racter in the FI ter is at the top	er than a full votop bits). The segister. In FO it applies tof the FIFO.	word transmis BI indicator in the FIFO m to. This error When break	the received data ssion time (that is, is reset whenever node this error is is revealed to the occurs, only one ed after SIN goes



		to the marking state and receives the next valid start bit.  Note:
		Bits 14 are the error conditions that produce a Receiver Line Status interrupt whenever any of the corresponding conditions are detected and the interrupt is enabled.
3	R	This bit is the Framing Error (FE) indicator. Bit 3 indicates that the received character did not have a valid stop bit. Bit 3 is set to logic 1 whenever the Stop bit following the last data bit or parity bit is detected as a logic 0 bit (Spacing level). The FE indicator is reset whenever the CPU reads the contents of the Line Status Register. In the FIFO mode this error is associated with the particular character in the FIFO it applies to. This error is revealed to the CPU when its associated character is at the top of the FIFO. The UART will try to re-synchronize after a framing error. To do this it assumes that the framing error was due to the next start bit, so it samples this "start" bit twice and then takes in the "data".
2	R	This bit is the Parity Error (PE) indicator. Bit 2 indicates that the received data character does not have the correct even or odd parity, as selected by the even-parity-select bit. The PE bit is set to logic 1 upon detection of a parity error and is reset to logic 0 whenever the CPU reads the contents of the Line Status Register. In the FIFO mode, this error is associated with the particular character in the FIFO it applies to. This error is revealed to the CPU when its associated character is at the top of the FIFO.
1	R	This bit is the Overrun Error (OE) indicator. Bit 1 indicates that data in the Receiver Buffer Register was not read by the CPU before the next character was transferred into the Receiver Buffer Register, thereby destroying the previous character. The OE indicator is set to logic 1 upon detection of an overrun condition and reset whenever the CPU reads the contents of the Line Status Register. If the FIFO mode data continues to fill the FIFO beyond the trigger level, an overrun error will occur only after the FIFO is full and the next character has been completely received in the shift register. OE is indicated to the CPU as soon as it happens. The character in the shift register is overwritten, but it is not transferred to the FIFO.
0	R	This bit is the receiver Data Ready (DR) indicator. Bit 0 is set to logic 1 whenever a complete incoming character has been received and transferred into the Receiver Buffer Register or the FIFO. Bit 0 is reset to logic 0 by reading all of the data in the Receiver Buffer Register or the FIFO.

Some bits in LSR are automatically cleared when CPU reads the LSR register, so interrupt handling routine should be written that if once reads LSR, then keep the value through entire the routine because second reading LSR returns just reset value.

### 10.9.2.7 MSR

This register provides the current state of the control lines from the MODEM (or peripheral device) to the CPU. In addition to this current-state information, four bits of the MODEM Status Register provide change information. These bits are set to logic 1 whenever a control input from the MODEM change state. They are reset to logic 0 whenever the CPU reads the MODEM Status Register.

CTS DDCD TERI

UxBase+0x18

Bits Type	Function
7	This bit is the complement of the Data Carrier Detect (nUDCD) input. If bit 4 of the MCR is set to a 1, this bit is equivalent to OUT2 in the MCR.
6	This bit is the complement of the Ring Indicator (nURING) input. If bit 4 of the MCR is set to a 1, this bit is equivalent to OUT1 in the MCR.
5	This bit is the complement of the Data Set Ready (nUDSR) input. If bit 4 of the MCR is set to a 1, this bit is equivalent to DTR in the MCR.
4	This bit is the complement of the Clear to Send (nUCTS) input. If bit 4 (loop) of the MCR is set to a 1, this bit is equivalent to RTS in the MCR.
3	This bit is the Delta Data Carrier Detect (nUDCD) indicator. Bit 3 indicates that the nUDCD input to the chip has changed state since the last time it was read by the CPU. Note: Whenever bit 0, 1, 2 or 3 is set to logic 1, a MODEM Status Interrupt is generated.
2	This bit is the Trailing Edge of Ring Indicator (TERI) detector. Bit 2 indicates that the nURING input to the chip has changed from a LOW to a HIGH state.
1	This bit is the Delta Data Set Ready (nUDSR) indicator. Bit 1 indicates that the nUDSR input

5 DSR



		to the chip has changed state since the last time it was read by the CPU.
0	R/W	This bit is the Delta Clear to Send (nUCTS) indicator. Bit 0 indicates that the nUCTS input to
		the chip has changed state since the last time it was read by the CPU.

#### 10.9.2.8 SCR

This 8-bit Read/Write Register does not control the UART in any way. It is intended as a scratchpad register to

								UxBase+0
7	6		5	4	3	2	1	0
DATA								
Bits	Type	Function						
7:0	R/W	Temporar	y data stor	age				
9.2.9 U	JartEn							UxBase+0
					SIR Loop Back Uart1 only	Full Duplex Force Uart1 only	SIREN Uart1 only	UARTEN
Bits	Туре	Function						
7:4	-	Reserved						
3	R/W	0 = SIR L	oop-back <sup>-</sup>	(Uart1 only) Test disable Test enable.				
2	R/W	SIR Full-o 0 = Half D 1 = Full D	uplex.	ce (Uart1 only)				
1	R/W	0 = SIR N		le	SIR function, yo	u must set th	is bit with UA	ART En bit at
0	R/W	UART En	able. disable (F	ower-Down), U	JART Clock stop.			

### 10.9.3 FIFO Interrupt Mode Operation

When the RCVR FIFO and receiver interrupts are enabled (FCR 0 = 1, IER 0 = 1) RCVR interrupts occur as follows:

- The received data available interrupt will be issued to the CPU when the FIFO has reached its programmed trigger level. It will be cleared as soon as the FIFO drops below its programmed trigger level.
- The IIR receive data available indication also occurs when the FIFO trigger level is reached, and like the interrupt, it is cleared when the FIFO drops below the trigger level.
- The receiver line status interrupt (IIR-06), as before, has higher priority than the received data available (IIR-04) interrupt.
- The data ready bit (LSR 0) is set as soon as a character is transferred from the shift register to the RCVR FIFO. It is reset when the FIFO is empty. 5.

When RCVR FIFO and receiver interrupts are enabled, RCVR FIFO time-out interrupts occurs as follows:

- A FIFO time-out interrupt occurs if the following conditions exist: at least one character is in the 1. **FIFO**
- the most recent serial character received was longer than four continuous character times ago



(if two stop bits are programmed, the second one is included in this time delay)

the most recent CPU read of the FIFO was longer than four continuous character times ago

This will cause a maximum character received to interrupt issued delay of 160 ms at 300 baud with a 12-bit character.

- 2. Character times are calculated by using the RCLK input, which is the internal signal of UART for a clock signal (this makes the delay proportional to the baud rate).
- 3. When a time-out interrupt has occurred, it is cleared and the timer is reset when the CPU reads one character from the RCVR FIFO.
- 4. When a time-out interrupt has not occurred the time-out timer is reset after a new character is received or after the CPU reads the RCVR FIFO.

When the XMIT FIFO and transmitter interrupts are enabled (FCR 0 = 1, IER 1 = 1), XMIT interrupts occurs as follows:

- 1. 1 The transmitter holding register interrupt (02) occurs when the XMIT FIFO is empty. It is cleared as soon as the transmitter holding register is written to (1 to 16 characters may be written to the XMIT FIFO while servicing this interrupt) or the IIR is read.
- 2. 2 The transmitter FIFO empty indications will be delayed 1 character time minus the last stop bit time whenever the following occurs: THRE = 1 and there has not been at least two bytes at the same time in the transmit FIFO since the last THRE = 1. The first transmitter interrupt affect changing FCR0 will be immediate if it is enabled.

Character time-out and RCVR FIFO trigger level interrupts have the same priority as the current received data available interrupt; XMIT FIFO empty has the same priority as the current transmitter holding register empty interrupt.





### 10.10 Watchdog Timer

The watchdog timer (WDT) has a one-channel for monitoring system operations. If a system becomes uncontrolled and the timer counter overflows without being rewritten correctly by the CPU, a reset signal is output to PMU

When this watchdog function is not needed, the WDT can be used as an interval timer. In the interval timer operation, an interval timer interrupt is generated at each counter overflow.

#### **FEATURES**

- Watchdog timer mode and interval timer mode
- Interrupt signal INT\_WDT to interrupt controller in the watchdog timer mode & interval timer mode
- Output signal MNRESET to PMU (Power Management Unit)
- Eight counter clock sources
- Selection whether to reset the chip internally or not
- Reset signal type: manual reset

### 10.10.1 Watchdog Timer Operation

### 10.10.1.1 The Watchdog Timer Mode

To use the WDT as a watchdog timer, set the MODESEL and TMEN bits of the WDTCTRL to 1. Software must prevent WDTCNT overflow by rewriting the WDTCNT value (normally by writing 0x00) before overflow occurs. If the WDTCNT fails to be rewritten and overflow due to a system crash or the like, INT\_WDT signal and PORESET/MNRESET signal are output. The INT\_WDT signal is not output if INTREN is disabled (INTREN = 0).

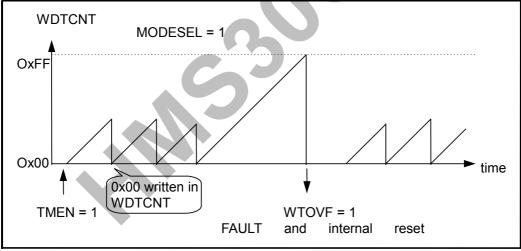


Figure 10-9 WDT Operation in the Watchdog Timer mode

If the RSTEN bit in the WDTCTRL is set to 1, a signal to reset the chip will be generated internally when WDTCNT overflows.

#### 10.10.1.2 The Interval Timer Mode

To use the WDT as an interval timer, clear MODESEL in WDTCTRL to 0 and set TMEN to 1. A watchdog timer interrupt (INT\_WDT) is generated each time the timer counter overflows. This function can be used to generate interval timer interrupts at regular intervals.



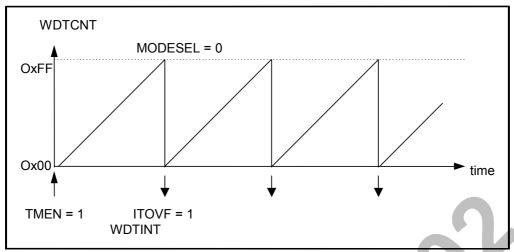


Figure 10-10 WDT Operation in the Interval Timer mode

### 10.10.1.3 Timing of setting the overflow flag

In the interval timer mode when the WDTCNT overflows, the ITOVF flag is set to 1 and an watchdog timer interrupt (INT WDT) is requested.

In the watchdog timer mode when the WDTCNT overflows, the WTOVF bit of the WDTSTAT is set to 1 and a WDTOUT signal is output. When RSTEN bit is set to 1, WDTCNT overflow enables an internal reset signal to be generated for the entire chip.

### 10.10.1.4 Timing of clearing the overflow flag

When the WDT Status Register (WDTSTAT) is read, the overflow flag is cleared.

### 10.10.2 Registers

Address	Name	Width Default	Description
0x8002.B000	WDTCTRL	8 0x0	Timer/Reset Control
0x8002.B004	WDTSTAT	2 0x0	Reset Status
0x8002.B008	WDTCNT	8	Timer Counter

**Table 10-11 Watchdog Timer Register Summary** 

# 10.10.2.1 WDT Control Register (WDTCTRL)

7		6	5	4	3	2	1 0			
INTRI	EN	MODESEL	TMEN	RSTEN	RSTSEL	CLK SOURC	CE SEL			
Bits	Type	Function	Function							
7	R/W	Enable o	Enable or disable the interrupt request.							
		0 = disab	le							
		1 = enab	le							
6	R/W	Select wh	Select whether to use the WDT as a watchdog timer or interval timer.							
		0 = interval timer mode								
		1 = watch	ndog timer m	ode						
5	R/W	Enable o	Enable or disable the timer.							
		0 = disab	le							
		1 = enable								
4	R/W	Select whether to reset the chip internally or not if the TCNT overflows in the watchdog					watchdog timer			
		mode.		•	•			•		
		0 = disab	le							

0x8002.B000



		1 = enable
3	R/W	Select the type of generated internal reset if the TCNT overflows in the watchdog timer mode.  1 = manual reset enable
2:0	R/W	The WDT has a clock generator which products eight counter clock sources. The clock signals are obtained by dividing the frequency of the system clock (B_CLK).
		VALUE CLOCK SOURCE (SYSTEM CLOCK = 40 MHz) OVERFLOW INTERVAL

000

The system clock is divided by 2

12.8 us

001

The system clock is divided by 8

51.2 us

010

The system clock is divided by 32

204.8 us

011

The system clock is divided by 64

409.6 us

100

The system clock is divided by 256

1.64 ms

101

The system clock is divided by 512

3.28 ms

110

The system clock is divided by 2048

13.11 ms

111

The system clock is divided by 8192

52.43 ms

## 10.10.2.2 WDT Status Register (WDTSTAT)

0x8002.B004

		ITOVF WTOVF
Bits	Type	Function
7:2	-	Reserved
1	R	Set when WDTCNT has overflowed in the interval timer mode.
0	R	Set when WDTCNT has overflowed in the watchdog timer mode.

### 10.10.2.3 WDT Counter (WDTCNT)

0x8002.B008

1	6		5	4	3	2	1	U
WDTC	CNT							
Bits	Type	Function						



7:0 R 8-bit up counter. When the timer is enabled, the timer counter starts counting pulse of the selected clock source. When the value of the WDTCNT changes from 0xFF-0x00(overflows), a watchdog timer overflow signal is generated in the both timer modes. The WDTCNT is initialized to 0x00 by a power-reset.

### 10.10.3 Examples of Register Setting

### 10.10.3.1 Interval Timer Mode

TCNT = 0x00 TRCR = 0xA0

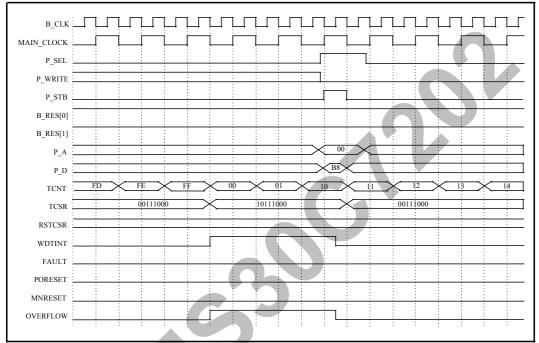


Figure 10-11 Interrupt Clear in the interval timer mode

10.10.3.2 Watchdog Timer Mode with Internal Reset Disable TCNT = 0x00 (normally) TRCR = 0xE0



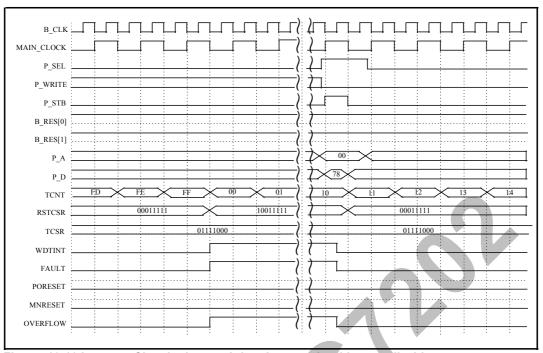


Figure 10-12 Interrupt Clear in the watchdog timer mode with reset disable

10.10.3.3 Watchdog Timer Mode with Manual Reset TCNT = 0x00 TRCR = 0xF8

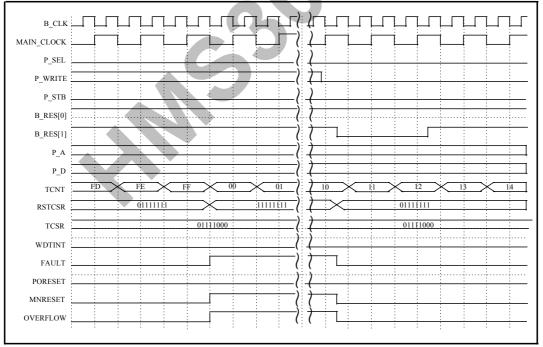


Figure 10-13 Interrupt Clear in the watchdog timer mode with manual reset



#### 11 DEBUGAND TEST INTERFACE

#### 11.1 Overview

The HMS30C7202 has built-in features that enable debug and test in a number of different contexts. Firstly, there are circuit structures to help with software development. Secondly, the device contains boundary scan cells for circuit board test. Finally, the device contains some special test modes that enable the generation production patterns for the device itself.

#### 11.2 Software Development Debug and Test Interface

The ARM720T and Piccolo processors incorporated inside HMS30C7202 contain hardware extensions for advanced debugging features. These are intended to ease user development and debugging of application software, operating systems, and the hardware itself.

Full details of the debug interfaces and their programming can be found in *ARM720T Data Sheet* (ARM DDI-0087) and *Piccolo Data Sheet* (ARM DDI-0128). The MultiICE product enables the ARM720T and Piccolo macrocells to be debugged in one environment. Refer to *Guide to MultiICE* (ARM DUI-0048).

#### 11.3 Test Access Port and Boundary-Scan

HMS30C7202 contains full boundary scan on its inputs and outputs to help with circuit board test. This supports both INTEST and EXTEST, allowing patterns to be applied serially to the HMS30C7202 when fixed in a board and for full circuit board connection respectively. The boundary-scan interface conforms to the IEEE Std. 1149.1- 1990, Standard Test Access Port and Boundary-Scan Architecture. (Please refer to this standard for an explanation of the terms used in this section and for a description of the TAP controller states.) The boundary-scan interface provides a means of testing the core of the device when it is fitted to a circuit board, and a means of driving and sampling all the external pins of the device irrespective of the core state. This latter function permits testing of both the device's electrical connections to the circuit board, and (in conjunction with other devices on the circuit board having a similar interface) testing the integrity of the circuit board connections between devices. The interface intercepts all external connections within the device, and each such "cell" is then connected together to form a serial register (the boundary scan register). The whole interface is controlled via 5 dedicated pins: TDI, TMS, TCK, nTRST and TDO. Figure 11-1: Test Access Port (TAP) Controller State Transitions shows the state transitions that occur in the TAP controller.



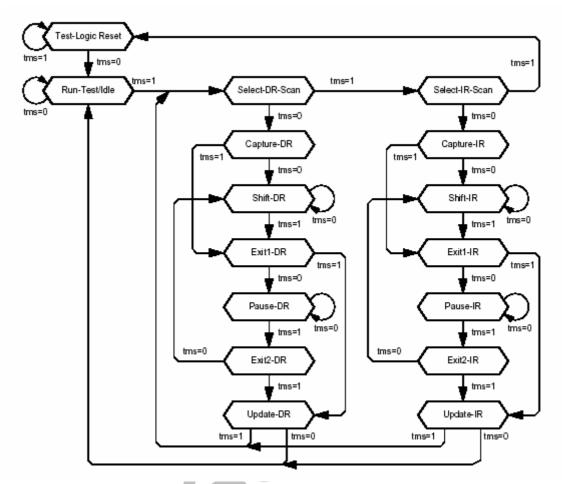


Figure 11-1: Test Access Port (TAP) Controller State Transitions

#### 11.3.1 Reset

The boundary-scan interface includes a state-machine controller (the TAP controller).

A pulldown resistor is included in the **nTRST** pad which holds the TAP controller state machine in a safe state after power up. In order to use the boundary scan interface, **nTRST** should be driven HIGH to take the TAP state machine out of reset.

The action of reset (either a pulse or a DC level) is as follows:

- System mode is selected (i.e. the boundary scan chain does NOT intercept any of the signals passing between the pads and the core).
- IDcode mode is selected. If TCK is pulsed, the contents of the ID register will be clocked out of TDO.

**Note** The TAP controller inside HMS30C7202 contains a scan chip register which is reset to the value b0011 thus selecting the boundary scan chain. If this register is programmed to any value other than b0011, then it must be reprogrammed with b0011 or a reset applied before boundary scan operation can be attempted.

# 11.3.2 Pull up Resistors

The IEEE 1149.1 standard requires pullup resistors in the input pins. However, to ensure safe operation an internal pulldown is present in the **nTRST** pin and therefore will have to be driven HIGH when using this interface.



Pin Name	Internal Resistor
TCLK	Pullup
nTRST	Pulldown
TMS	Pullup
TDI	Pullup

### 11.3.3 Instruction Register

The instruction register is 4 bits in length.

There is no parity bit. The fixed value loaded into the instruction register during the CAPTURE-IR controller state is: 0001.

#### 11.3.4 Public Instructions

The following public instructions are supported:

Instruction	Binary Code
EXTEST	0000
SAMPLE/PRELOAD	0011
CLAMP	0101
HIGHZ	0111
CLAMPZ	1001
INTEST	1100
IDCODE	1110
BYPASS	1111

In the descriptions that follow, **TDI** and **TMS** are sampled on the rising edge of **TCK** and all output transitions on **TDO** occur as a result of the falling edge of **TCK**.

#### **EXTEST (0000)**

The BS (boundary-scan) register is placed in test mode by the EXTEST instruction. The EXTEST instruction connects the BS register between **TDI** and **TDO**. When the instruction register is loaded with the EXTEST instruction, all the boundary-scan cells are placed in their test mode of operation.

In the CAPTURE-DR state, inputs from the system pins and outputs from the boundary-scan output cells to the system pins are captured by the boundary-scan cells. In the SHIFT-DR state, the previously captured test data is shifted out of the BS register via the **TDO** pin, whilst new test data is shifted in via the **TDI** pin to the BS register parallel input latch. In the UPDATE-DR state, the new test data is transferred into the BS register parallel output latch. Note that this data is applied immediately to the system logic and system pins. The first EXTEST vector should be clocked into the boundary-scan register, using the SAMPLE/PRELOAD instruction, prior to selecting EXTEST to ensure that known data is applied to the system logic.

#### SAMPLE/PRELOAD (0011)

The BS (boundary-scan) register is placed in normal (system) mode by the SAMPLE/PRELOAD instruction. The SAMPLE/PRELOAD instruction connects the BS register between **TDI** and **TDO**.

When the instruction register is loaded with the SAMPLE/PRELOAD instruction, all the boundary-scan cells are placed in their normal system mode of operation.

In the CAPTURE-DR state, a snapshot of the signals at the boundary-scan cells is taken on the rising edge of **TCK**. Normal system operation is unaffected. In the SHIFT-DR state, the sampled test data is shifted out of the BS register via the **TDO** pin, whilst new data is shifted in via the **TDI** pin to preload the BS register parallel input latch. In the UPDATE-DR state, the preloaded data is transferred into the BS register parallel output latch. Note that this data is not applied to the system logic or system pins while the SAMPLE/PRELOAD



instruction is active. This instruction should be used to preload the boundary-scan register with known data prior to selecting the INTEST or EXTEST instructions.

#### **CLAMP (0101)**

The CLAMP instruction connects a 1 bit shift register (the BYPASS register) between **TDI** and **TDO**. When the CLAMP instruction is loaded into the instruction register, the state of all output signals is defined by the values previously loaded into the boundary-scan register. A guarding pattern should be pre-loaded into the boundary-scan register using the SAMPLE/PRELOAD instruction prior to selecting the CLAMP instruction. In the CAPTURE-DR state, a logic 0 is captured by the bypass register. In the SHIFT-DR state, test data is shifted into the bypass register via **TDI** and out via **TDO** after a delay of one **TCK** cycle. Note that the first bit shifted out will be a zero. The bypass register is not affected in the UPDATE-DR state.

#### HIGHZ (0111)

The HIGHZ instruction connects a 1 bit shift register (the BYPASS register) between **TDI** and **TDO**. When the HIGHZ instruction is loaded into the instruction register, all outputs are placed in an inactive drive state. In the CAPTURE-DR state, a logic 0 is captured by the bypass register. In the SHIFT-DR state, test data is shifted into the bypass register via **TDI** and out via **TDO** after a delay of one **TCK** cycle. Note that the first bit shifted out will be a zero. The bypass register is not affected in the UPDATE-DR state.

#### **CLAMPZ (1001)**

The CLAMPZ instruction connects a 1 bit shift register (the BYPASS register) between **TDI** and **TDO**. When the CLAMPZ instruction is loaded into the instruction register, all outputs are placed in an inactive drive state, but the data supplied to the disabled output drivers is derived from the boundary-scan cells. The purpose of this instruction is to ensure, during production testing, that each output driver can be disabled when its data input is either a 0 or a 1. A guarding pattern (specified for this device at the end of this section) should be preloaded into the boundary-scan register using the SAMPLE/PRELOAD instruction prior to selecting the CLAMPZ instruction. In the CAPTURE-DR state, a logic 0 is captured by the bypass register. In the SHIFT-DR state, test data is shifted into the bypass register via **TDI** and out via **TDO** after a delay of one **TCK** cycle. Note that the first bit shifted out will be a zero. The bypass register is not affected in the UPDATE-DR state.

#### **INTEST (1100)**

The BS (boundary-scan) register is placed in test mode by the INTEST instruction. The INTEST instruction connects the BS register between **TDI** and **TDO**. When the instruction register is loaded with the INTEST instruction, all the boundary-scan cells are placed in their test mode of operation. In the CAPTURE-DR state, the complement of the data supplied to the core logic from input boundary-scan cells is captured, while the true value of the data that is output from the core logic to output boundary-scan cells is captured. Note that CAPTURE-DR captures the complemented value of the input cells for testability reasons. In the SHIFT-DR state, the previously captured test data is shifted out of the BS register via the **TDO** pin, whilst new test data is shifted in via the **TDI** pin to the BS register parallel input latch. In the UPDATE-DR state, the new test data is transferred into the BS register parallel output latch. Note that this data is applied immediately to the system logic and system pins. The first INTEST vector should be clocked into the boundary-scan register, using the SAMPLE/PRELOAD instruction, prior to selecting INTEST to ensure that known data is applied to the system logic. Single-step operation is possible using the INTEST instruction.

### **IDCODE (1110)**

The IDCODE instruction connects the device identification register (or ID register) between **TDI** and **TD**O. The ID register is a 32-bit register that allows the manufacturer, part number and version of a component to be determined through the TAP. The IDCODE returned will be that for the ARM720T core. When the instruction register is loaded with the IDCODE instruction, all the boundary-scan cells are placed in their normal (system) mode of operation. In the CAPTURE-DR state, the device identification code (specified at the end of this section) is captured by the ID register.

In the SHIFT-DR state, the previously captured device identification code is shifted out of the ID register via the **TDO** pin, whilst data is shifted in via the **TDI** pin into the ID register. In the UPDATE-DR state, the ID register is unaffected.

#### **BYPASS (1111)**

The BYPASS instruction connects a 1 bit shift register (the BYPASS register) between**TDI** and **TD**O. When the BYPASS instruction is loaded into the instruction register, all the boundary-scan cells are placed in their normal (system) mode of operation. This instruction has no effect on the system pins. In the CAPTURE-DR state, a logic 0 is captured by the bypass register. In the SHIFT-DR state, test data is shifted into the bypass



register via **TDI** and out via **TDO** after a delay of one **TCK** cycle. Note that the first bit shifted out will be a zero. The bypass register is not affected in the UPDATE-DR state.

### 11.3.5 Test Data Registers

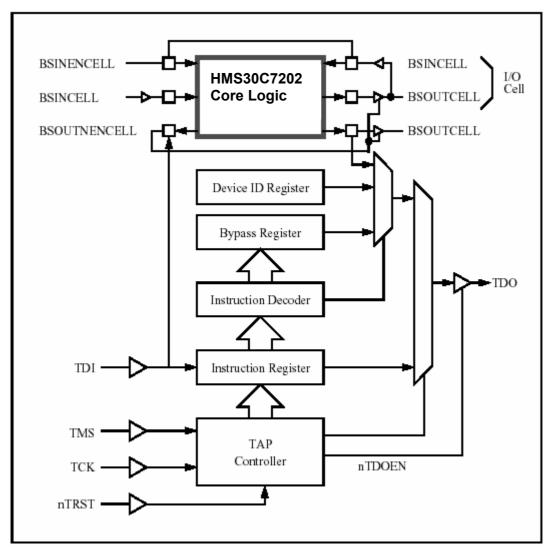


Figure 11-2: Boundary Scan Block Diagram

#### **Bypass Register**

Purpose: This is a single bit register which can be selected as the path between **TDI** and **TDO** to allow the device to be bypassed during boundary-scan testing.

Length: 1 bit

Operating Mode: When the BYPASS instruction is the current instruction in the instruction register, serial data is transferred from **TDI** to **TDO** in the SHIFT-DR state with a delay of one **TCK** cycle.

There is no parallel output from the bypass register.

A logic 0 is loaded from the parallel input of the bypass register in the CAPTURE-DR state.

### **Boundary Scan (BS) Register**

Purpose: The BS register consists of a serially connected set of cells around the periphery of the device, at the interface between the core logic and the system input/output pads. This register can be used to isolate the



core logic from the pins and then apply tests to the core logic, or conversely to isolate the pins from the core logic and then drive or monitor the system pins. Operating modes: The BS register is selected as the register to be connected between **TDI** and **TDO** only during the SAMPLE/PRELOAD, EXTEST and INTEST instructions. Values in the BS register are used, but are not changed, during the CLAMP and CLAMPZ instructions. In the normal (system) mode of operation, straight-through connections between the core logic and pins are maintained and normal system operation is unaffected. In TEST mode (i.e. when either EXTEST or INTEST is the currently selected instruction), values can be applied to the core logic or output pins independently of the actual values on the input pins and core logic outputs respectively. On the HMS30C7202 all of the boundary scan cells include an update register and thus all of the pins can be controlled in the above manner.

Additional boundary-scan cells are interposed in the scan chain in order to control the enabling of tristateable buses. The values stored in the BS register after power-up are not defined. Similarly, the values previously clocked into the BS register are not guaranteed to be maintained across a Boundary Scan reset (from forcing nTRST LOW or entering the Test Logic Reset state).

#### Single-step Operation

HMS30C7202 is a static design and there is no minimum clock speed. It can therefore be single-stepped while the INTEST instruction is selected and the PLLs are bypassed.

This can be achieved by serializing a parallel stimulus and clocking the resulting serial vectors into the boundary-scan register. When the boundary-scan register is updated, new test stimuli are applied to the core logic inputs; the effect of these stimuli can then be observed on the core logic outputs by capturing them in the boundary-scan register.

### 11.3.6 Boundary Scan Interface Signals

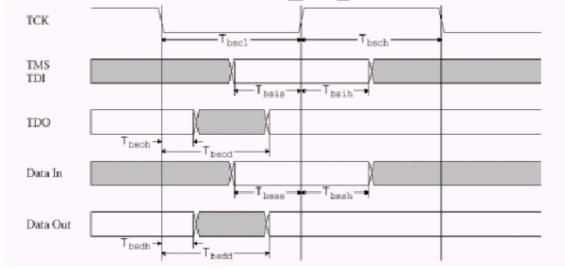


Figure 11-3: Boundary Scan General Timing



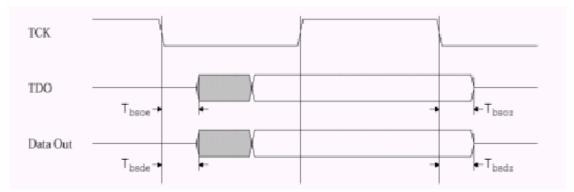


Figure 11-4: Boundary Scan Tristate Timing

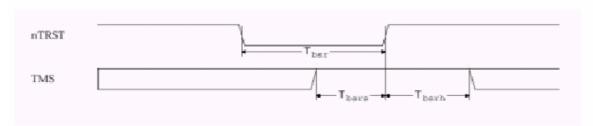


Figure 11-5: Boundary Scan Reset Timing

Symbol	Parameter	Min	Max
Tbscl	TCK low period	50	-
Tbsch	TCK high period	50	-
Tbsis	TMS, TDI setup to TCKr	0	-
Tbsih	TMS, TDI hold from TCKr	2	-
Tbsoh	TDO output hold from TCKf	3	-
Tbsod	TDO output delay from TCKf	-	20
Tbsss	Test mode Data in setup to TCKr	2	-
Tbssh	Test mode Data in hold from TCKf	5	-
Tbsdh	Test mode Data out hold from TCKf	3	-
Tbsdd	Test mode Data out delay from TCKf	-	20
Tbsoe	TDO output enable delay from TCKf	2	15
Tbsoz	Test mode Data enable delay from TCKf	2	15
Tbsde	TDO output disable delay from TCKf	2	15
Tbsdz	Test mode Data disable delay from TCKf	2	15
Tbsr	NTRST minimun pulse width	25	-
Tbsrs	TMS setup to nTRSTr	20	-
Tbsrh	TMS hold from nTRSTr	20	-

The AC parameters are based on simulation results using 0.0pf circuit signal loads.

Delays should be calculated using manufacturers output derating values for the actual circuit capacitance loading.

The correspondence between boundary-scan cells and system pins, system direction controls and system output enables is shown below. The cells are listed in the order in which they are connected in the boundary-scan register, starting with the cell closest to TDI. All outputs are three-state outputs. All boundary-scan register cells at input pins can apply tests to the on-chip system logic.

EXTEST/CLAMP guard values specified in the table below should be clocked into the boundary-scan register (using the SAMPLE/PRELOAD instruction) before the EXTEST, CLAMP or CLAMPZ instructions are selected to ensure that known data is applied to the system logic during the test. The INTEST guard values shown in the table below should be clocked into the boundary-scan register (using the SAMPLE/PRELOAD instruction) before the INTEST instruction is selected to ensure that all outputs are disabled. An asterisk in the guard



value column indicates that any value can be submitted (as test requires), but ones and zeros should always be placed as shown.

Num	PAD Cell Name	PIN	TYPE	Output Enable BS Cell	Guard V	'alue
1	uLD4	LD[4]	OUT	-	0	*
2	uLD3	LD[3]	IN	-	*	*
3	uLD3	LD[3]	OUT	-	*	*
4	uLD3	-	OUTEN	LDPADOutEn[3]	1	*
5	uLD2	LD[2]	IN	-	*	*
6	uLD2	LD[2]	OUT	-	*	*
7	uLD2	-	OUTEN	LDPADOutEn[2]	1	*
8	uLD1	LD[1]	IN	-	*	*
9	uLD1	LD[1]	OUT	-	*	*
10	uLD1	-	OUTEN	LDPADOutEn[1]	1	*
11	uLD0	LD[0]	IN	-	*	*
12	uLD0	LD[0]	OUT	-	*	*
13	uLD0	-	OUTEN	LDPADOutEn[0]	1	*
14	uKSCANO0	KSCANO[0]	IN	-	*	*
15	uKSCANO0	KSCANO[0]	OUT	-	*	*
16	uKSCANO0		OUTEN	MuxPORTAOutEn[0]	1	*
17	uKSCANO1	KSCANO[1]	IN		*	*
18	uKSCANO1	KSCANO[1]	OUT	-	*	*
19	uKSCANO1	-	OUTEN	MuxPORTAOutEn[1]	1	*
20	uKSCANO2	KSCANO[2]	IN	-	*	*
21	uKSCANO2	KSCANO[2]	OUT		*	*
22	uKSCANO2		OUTEN	MuxPORTAOutEn[2]	1	*
23	uKSCANO3	KSCANO[3]	IN	- Maxi OrtiAouten[2]	*	*
24	uKSCANO3	KSCANO[3]	OUT	_	*	*
25	uKSCANO3	-	OUTEN	MuxPORTAOutEn[3]	1	*
26	uKSCANO4	KSCANO[4]	IN	-	*	*
27	uKSCANO4	KSCANO[4]	OUT	<del>-</del>	*	*
28	uKSCANO4	- KOCANO[4]	OUTEN	MuxPORTAOutEn[4]	1	*
29	uKSCANO5	KSCANO[5]	IN	MuxPORTAGutEn[4]	*	*
30			OUT	-   _	*	*
31	uKSCANO5 uKSCANO5	KSCANO[5]	OUTEN	MuxPORTAOutEn[5]	1	*
32		KCCVNOICI	IN		*	*
33	uKSCANO6	KSCANO[6]	OUT	-	*	*
	uKSCANO6	KSCANO[6]		M DODTA O 4E = [6]		*
34	uKSCANO6	L'CCANOITI	OUTEN	MuxPORTAOutEn[6]	1 *	*
35	uKSCANO7	KSCANO[7]		-	*	*
36	uKSCANO7	KSCANO[7]	OUT	- M		*
37	uKSCANO7	- ICOCANIIFOT	OUTEN	MuxPORTAOutEn[7]	1 *	*
38	uKSCANIO	KSCANI[0]	IN	-	*	*
39	uKSCANI0	KSCANI[0]	OUT	-		*
40	uKSCANI0	-	OUTEN	MuxPORTAOutEn[8]	1 *	*
41	uKSCANI1	KSCANI[1]	IN	-	*	*
42	uKSCANI1	KSCANI[1]	OUT	-	*	*
43	uKSCANI1	-	OUTEN	MuxPORTAOutEn[9]	1	*
44	uKSCANI2	KSCANI[2]	IN	-	*	*
45	uKSCANI2	KSCANI[2]	OUT	-	*	*
46	uKSCANI2	-	OUTEN	MuxPORTAOutEn[10]	1	*
47	uKSCANI3	KSCANI[3]	IN	-	*	*
48	uKSCANI3	KSCANI[3]	OUT	-	*	*
49	uKSCANI3	-	OUTEN	MuxPORTAOutEn[11]	1	*
50	uKSCANI4	KSCANI[4]	IN	-	*	*
51	uKSCANI4	KSCANI[4]	OUT	-	*	*
52	uKSCANI4	-	OUTEN	MuxPORTAOutEn[12]	1	*
53	uKSCANI5	KSCANI[5]	IN	-	*	*
54	uKSCANI5	KSCANI[5]	OUT	-	*	*



55	uKSCANI5	-	OUTEN	MuxPORTAOutEn[13]	1	*
56	uKSCANI6	KSCANI[6]	IN	-	*	*
57	uKSCANI6	KSCANI[6]	OUT	_	*	*
58	uKSCANI6	-	OUTEN	MuxPORTAOutEn[14]	1	*
59	uKSCANI7	KSCANI[7]	IN	-	*	*
60	uKSCANI7	KSCANI[7]	OUT	-	*	*
61	uKSCANI7		OUTEN	MuxPORTAOutEn[15]	1	*
62	uATSXP	ATSXP	IN	-	*	*
63	uATSXP	ATSXP	OUT	_	*	*
64	uATSXP	-	OUTEN	ATSXPEn	1	*
65	uATSXN	ATSXN	OUT	-	0	*
66	uATSXN	-	OUTEN	ATSXNEn	1	*
67	uATSYP	ATSYP	IN	-	*	*
68	uATSYP	ATSYP	OUT	-	*	*
69	uATSYP	-	OUTEN	ATSYPEn	1	*
70	uATSYN	ATSYN	IN	-	*	*
71	uATSYN	ATSYN	OUT	-	*	*
72	uATSYN	-	OUTEN	ATSYNEn	1	*
73	unPMWAKEUP	nPMWAKEUP	IN	-	*	0
74	unPOR	nPOR	IN		*	0
75	unRESET	nRESET	IN		*	*
76	unRESET	nRESET	OUT		*	*
77	unRESET	-	OUTEN	nRESETEn	1	*
78	uPMADAPOK	PMADAPOK	IN	-	*	0
79	uPMBATOK	PMBATOK	IN	-	*	0
80	unPLLENABLE	nPLLENABLE	IN		*	0
81	unURING	nURING	IN		*	*
82	unURING	nURING	OUT		*	*
83	unURING	-	OUTEN	MuxnPORTBOutEn[0]	1	*
84	unUDTR	nUDTR	IN	-	*	*
85	unUDTR	nUDTR	OUT	_	*	*
86	unUDTR	-	OUTEN	MuxnPORTBOutEn[1]	1	*
87	unUCTS	nUCTS	IN	-	*	*
88	unUCTS	nUCTS	OUT	_	*	*
89	unUCTS	-	OUTEN	MuxnPORTBOutEn[2]	1	*
90	unURTS	nURTS	IN	-	*	*
91	unURTS	nURTS	OUT	_	*	*
92	unURTS	IIOITIO	OUTEN	MuxnPORTBOutEn[3]	1	*
93	unUDSR	nUDSR	IN	-	*	*
94	unUDSR	nUDSR	OUT	-   _	*	*
95	unUDSR	IIODOIX	OUTEN	MuxnPORTBOutEn[4]	1	*
96	unUDCD	nUDCD	IN	-	*	*
97	unUDCD	nUDCD	OUT	_	*	*
98	unUDCD		OUTEN	MuxnPORTBOutEn[5]	1	*
99	uUSIN0	USIN0	IN	-	*	0
100	uUSOUT0	USOUT0	OUT	-	0	*
101	uUSIN1	USIN1	iN	-	*	0
102	uUSOUT1	USOUT1	OUT	-	0	*
103	uCANTx0	CANTx[0]	IN	-	*	*
104	uCANTx0	CANTX[0]	OUT	-	*	*
105	uCANTx0	-	OUTEN	MuxnPORTCOutEn[1]	1	*
106	uCANRx0	CANRx[0]	IN	-	*	*
107	uCANRx0	CANRx[0]	OUT	-	*	*
107	uCANRx0	-	OUTEN	MuxnPORTCOutEn[2]	1	*
109	uPORTB6	PORTB[6]	IN	-	*	*
110	uPORTB6	PORTB[6]	OUT	-	*	*
111	uPORTB6	-	OUTEN	MuxnPORTBOutEn[6]	1	*
112	uPORTB7	PORTB[7]	IN	- muxiir OK i BOulEii[0]	*	*
113	uPORTB7	PORTB[7]	OUT	-	*	*
113	ur UN I D/	LOKID[1]	JU1	1 <del>-</del>	<u> </u>	



44.4	DODTD7		OUTEN	Muse DODT DOUGE # [7]	4	*
114 115	uPORTB7 uPORTB8	PORTB[8]	IN	MuxnPORTBOutEn[7]	1 *	*
116		• • •	OUT	-	*	*
117	uPORTB8	PORTB[8]	OUTEN	Muse BODTBOutEn(9)		*
	uPORTB8	- DORTRINI		MuxnPORTBOutEn[8]	1 *	*
118 119	uPORTB9	PORTB[9]	IN	-	*	*
	uPORTB9	PORTB[9]	OUT	MBODTDO4F-:101		*
120	uPORTB9	- DODTDIAN	OUTEN	MuxnPORTBOutEn[9]	1	*
121	uPORTB10	PORTB[10]	IN	-	*	*
122	uPORTB10	PORTB[10]	OUT	- Non-poptpo-45-440		*
123	uPORTB10	- DODTDIAA	OUTEN	MuxnPORTBOutEn[10]	1	*
124	uPORTB11	PORTB[11]	IN	-	*	*
125	uPORTB11	PORTB[11]	OUT	- N		*
126	uPORTB11	- T'	OUTEN	MuxnPORTBOutEn[11]	1	*
127	uTimerOut	TimerOut	IN	-	*	*
128	uTimerOut	TimerOut	OUT	-		*
129	uTimerOut	-	OUTEN	MuxnPORTCcutEn[0]	1 *	*
130	uPSDAT	PSDAT	IN	-	*	*
131	uPSDAT	PSDAT	OUT	-		*
132	uPSDAT	-	OUTEN	MuxnPORTCcutEn[3]	1	
133	uPSCLK	PSCLK	IN		*	*
134	uPSCLK	PSCLK	OUT	-		
135	uPSCLK	-	OUTEN	MuxnPORTCcutEn[4]	1	*
136	uPWM0	PWM[0]	IN	-	*	*
137	uPWM0	PWM[0]	OUT	-	*	*
138	uPWM0	-	OUTEN	MuxnPORTCcutEn[5]	1	*
139	uPWM1	PWM[1]	IN		*	*
140	uPWM1	PWM[1]	OUT	-	*	*
141	PWM1	-	OUTEN	MuxnPORTCcutEn[6]	1	*
142	uCANTx1	CANTx[1]	IN	-	*	*
143	uCANTx1	CANTx[1]	OUT	-	*	*
144	uCANTx1		OUTEN	-	1	*
145	uCANRx1	CANRx[1]	IN	MuxnPORTEcutEn[23]	*	*
146	uCANRx1	CANRx[1]	OUT	-	*	*
147	uCANRx1		OUTEN	MuxnPORTEcutEn[22]	1	*
148	uMMCCMD	MMCCMD	IN	-	*	*
149	uMMCCMD	MMCCMD	OUT	-	*	*
150	uMMCCMD		OUTEN	MuxnPORTEcutEn[18]	1	*
151	uMMCDAT	MMCDAT	IN	-	*	*
152	uMMCDAT	MMCDAT	OUT	-	*	*
153	uMMCDAT	-	OUTEN	MuxnPORTEcutEn[19]	1	*
154	unMMCCD	nMMCCD	IN	-	*	*
155	unMMCCD	nMMCCD	OUT	-	*	*
156	unMMCCD	-	OUTEN	MuxnPORTEcutEn[20]	1	*
157	uMMCCLK	MMCCLK	IN	-	*	*
158	uMMCCLK	MMCCLK	OUT	-	*	*
159	uMMCCLK	-	OUTEN	MuxnPORTEcutEn[21]	1	*
160	unDMAREQ	nDMAREQ	IN	-	*	*
161	unDMAREQ	nDMAREQ	OUT	-	*	*
162	unDMAREQ	-	OUTEN	MuxnPORTCOutEn[7]	1	*
163	unDMAACK	nDMAACK	IN	-	*	*
164	unDMAACK	nDMAACK	OUT	-	*	*
165	unDMAACK	-	OUTEN	MuxnPORTCOutEn[8]	1	*
166	unRCS3	nRCS[3]	IN	•	*	*
167	unRCS3	nRCS[3]	OUT	-	*	*
168	unRCS3	-	OUTEN	MuxnPORTCOutEn[10]	1	*
169	unRCS2	nRCS[2]	IN	•	*	*
170	unRCS2	nRCS[2]	OUT	-	*	*
171	unRCS2	-	OUTEN	MuxnPORTCOutEn[9]	1	*
172	unRCS1	nRCS[1]	OUT	•	0	*



173	unRCS0	»DCCINI	OUT		0	*
174	uBOOTBIT1	nRCS[0] BOOTBIT[1]	IN	-	*	0
175	uBOOTBIT1	BOOTBIT[0]	IN	-	*	0
176			OUT	-	0	*
177	unROE uEXPRDY	nROE EXPRDY	IN		*	•
				-	*	0 *
178	unRWE3	nRWE[3]	IN	-	*	*
179	unRWE3	nRWE[3]	OUT	- N		*
180	unRWE3	-	OUTEN	MuxnPORTEOutEn[17]	1	
181	unRWE2	nRWE[2]	IN	-	*	*
182	unRWE2	nRWE[2]	OUT	-	*	*
183	unRWE2	-	OUTEN	MuxnPORTEOutEn[16]	1	*
184	unRWE1	nRWE[1]	OUT	-	0	*
185	unRWE0	nRWE[0]	OUT	-	0	*
186	uRD31	RD[31]	IN	-	*	*
187	uRD31	RD[31]	OUT	-	*	*
188	uRD31		OUTEN	MuxnPORTEOutEn[15]	1	*
189	uRD30	RD[30]	IN	- Control	*	*
190	uRD30	RD[30]	OUT	-	*	*
191	uRD30		OUTEN	MuxnPORTEOutEn[14]	1	*
192	uRD29	RD[29]	IN	-	*	*
193	uRD29	RD[29]	OUT		*	*
194	uRD29	KD[29]	OUTEN	MuxnPORTEOutEn[13]	1	*
195	uRD28	RD[28]	IN	MUXIIFOR TEGULETI[13]	*	*
196	uRD28	RD[28]	OUT	-	*	*
197	uRD28	KD[20]	OUTEN	MuxnPORTEOutEn[12]	1	*
198	uRD27	RD[27]	IN	MuxiiPORTEOutEn[12]	*	*
199		• •	OUT		*	*
	uRD27	RD[27]		Manage DODTEO : 45 = 1441		*
200	uRD27	- PDIOCI	OUTEN	MuxnPORTEOutEn[11]	1 *	*
201	uRD26	RD[26]	OUT	-	*	*
202	uRD26	RD[26]		- N		*
203	uRD26	- DDroei	OUTEN	MuxnPORTEOutEn[10]	1 *	*
204	uRD25	RD[25]	IN	-	*	*
205	uRD25	RD[25]	OUT	-		*
206	uRD25	-	OUTEN	MuxnPORTEOutEn[9]	1 *	*
207	uRD24	RD[24]	IN	-	*	*
208	uRD24	RD[24]	OUT	-		
209	uRD24		OUTEN	MuxnPORTEOutEn[8]	1	*
210	uRD23	RD[23]	IN	-	*	*
211	uRD23	RD[23]	OUT	-	*	*
212	uRD23		OUTEN	MuxnPORTEOutEn[7]	1	*
213	uRD22	RD[22]	IN	-	*	*
214	uRD22	RD[22]	OUT	-	*	*
215	uRD22	-	OUTEN	MuxnPORTEOutEn[6]	1	*
216	uRD21	RD[21]	IN	-	*	*
217	uRD21	RD[21]	OUT	-	*	*
218	uRD21	-	OUTEN	MuxnPORTEOutEn[5]	1	*
219	uRD20	RD[20]	IN	-	*	*
220	uRD20	RD[20]	OUT	-	*	*
221	uRD20	-	OUTEN	MuxnPORTEOutEn[4]	1	*
222	uRD19	RD[19]	IN	-	*	*
223	uRD19	RD[19]	OUT	-	*	*
224	uRD19	-	OUTEN	MuxnPORTEOutEn[3]	1	*
225	uRD18	RD[18]	IN	-	*	*
226	uRD18	RD[18]	OUT	-	*	*
227	uRD18	-	OUTEN	MuxnPORTEOutEn[2]	1	*
228	uRD17	RD[17]	IN	-	*	*
239	uRD17	RD[17]	OUT	-	*	*
230	uRD17	-	OUTEN	MuxnPORTEOutEn[1]	1	*
231	uRD16	RD[16]	IN	-	*	*



000	DD40	DD1461	A	Г	*	*
232	uRD16	RD[16]	OUT	-		*
233	uRD16	-	OUTEN	MuxnPORTEOutEn[0]	1	
234	uRD15	RD[15]	IN	-		*
235	uRD15	RD[15]	OUT	-	*	*
236	uRD15	-	OUTEN	nRDEn[1]	1	*
237	uRD14	RD[14]	IN	-	*	*
238	uRD14	RD[14]	OUT	jnRDEn[1]	*	*
239	uRD13	RD[13]	IN	-	*	*
240	uRD13	RD[13]	OUT	jnRDEn[1]	*	*
241	uRD12	RD[12]	IN	-	*	*
242	uRD12	RD[12]	OUT	jnRDEn[1]	*	*
243	uRD11	RD[11]	IN	-	*	*
244	uRD11	RD[11]	OUT	jnRDEn[1]	*	*
245	uRD10	RD[10]	IN	-	*	*
246	uRD10	RD[10]	OUT	jnRDEn[1]	*	*
247	uRD9	RD[9]	IN	-	*	*
248	uRD9	RD[9]	OUT	jnRDEn[1]	*	*
249	uRD8	RD[8]	IN	-	*	*
250	uRD8	RD[8]	OUT	jnRDEn[1]	*	*
251	uRD7	RD[7]	IN		*	*
252	uRD7	RD[7]	OUT	-,	*	*
253	uRD7	-	OUTEN	nRDEn[0]	1	*
254	uRD6	RD[6]	IN	-	*	*
255	uRD6	RD[6]	OUT	jnRDEn[0]	*	*
256	uRD5	RD[5]	IN	-	*	*
257	uRD5	RD[5]	OUT	inRDEn[0]	*	*
258	uRD4	RD[4]	IN	-	*	*
259	uRD4	RD[4]	OUT	jnRDEn[0]	*	*
260	uRD3	RD[3]	IN		*	*
261	uRD3	RD[3]	OUT	jnRDEn[0]	*	*
262	uRD2	RD[2]	IN	-	*	*
263	uRD2	RD[2]	OUT	jnRDEn[0]	*	*
264	uRD1	RD[1]	IN	-	*	*
265	uRD1	RD[1]	OUT	jnRDEn[0]	*	*
266	uRD0	RD[0]	IN	-	*	*
267	uRD0	RD[0]	OUT	jnRDEn[0]	*	*
268	uRA0	RA[0]	OUT	-	0	*
269	uRA1	RA[1]	OUT	-	0	*
270	uRA2	RA[2]	OUT	_	0	*
271	uRA3	RA[3]	OUT	-	0	*
272	uRA4	RA[4]	OUT	-	0	*
273	uRA5	RA[5]	OUT	-	0	*
274	uRA6	RA[6]	OUT	-	0	*
275	uRA7	RA[7]	OUT	-	0	*
276	uRA8	RA[8]	OUT	-	0	*
277	uRA9	RA[9]	OUT	-	0	*
278	uRA10	RA[10]	OUT	-	0	*
279	uRA11	RA[11]	OUT	-	0	*
280	uRA12	RA[12]	OUT	-	0	*
281	uRA13	RA[13]	OUT	-	0	*
282	uRA14	RA[14]	OUT	-	0	*
283	uRA15	RA[15]	OUT	-	0	*
284	uRA16	RA[16]	OUT	-	0	*
285	uRA17	RA[17]	OUT	-	0	*
286	uRA18	RA[17]	OUT	-	0	*
287	uRA19	RA[19]	OUT	-	0	*
288	uRA20	RA[19]	OUT	-	0	*
289	uRA21	RA[20]	OUT	-	0	*
290	uRA21	RA[21]	OUT	-	0	*
7.70	ui\M44	1\14[44]	501	<del>-</del>	U	



291	uRA23	RA[23]	OUT	_	0	*
291	uRA23 uRA24	RA[23] RA[24]	IN	-	*	*
292	uRA24	RA[24]	OUT	-	*	*
294	uRA24	- RA[24]	OUTEN	MuxnPORTEOutEn[24]	1	*
295	uSA3	SA[3]	OUT	- WuxiiPORTEOutEn[24]	0	*
296	uSA4	SA[4]	OUT	-	0	*
297	uSA2	SA[2]	OUT	-	0	*
298	uSA5	SA[2]	OUT	-	0	*
299	uSA1	SA[1]	OUT	-	0	*
300	uSA6	SA[6]	OUT	-	0	*
301	uSA0	SA[0]	OUT	-	0	*
302	uSA7	SA[7]	OUT	-	0	*
303	uSA8	SA[8]	OUT	-	0	*
304	uSA9	SA[9]	OUT	-	0	*
305	uSA10	SA[10]	OUT	-	0	*
306	uSA11	SA[10]	OUT	-	0	*
307	uSA11		OUT		0	*
308	uSA12	SA[12] SA[13]	OUT	-	0	*
				-		*
309 310	uSA14 unSCS1	SA[14]	OUT		0	*
		nSCS[1]		· A 🗸	0	*
311 312	unSCS0 unSRAS	nSCS[0] nSRAS	OUT		0	*
						*
313 314	unRCAS unSWE	nSCAS nSWE	OUT	-	0	*
					0	*
315 316	uSCKE1 uSCKE0	SCKE[1]	OUT	-	0	*
317	uSCLK	SCKE[0] SCLK	IN		*	*
	uSCLK		OUT	-	*	*
318		SCLK		1'b0	1	*
319 320	uSCLK uSDQMU	SDQMU	OUTEN		0	*
321	·	SDQML	OUT	-	0	*
321	uSDQML uSD8		IN	-	*	*
		SD[8]	OUT	incDEn	*	*
323 324	uSD8 uSD7	SD[8]	IN	jnSDEn	*	*
325	uSD7	SD[7]	OUT	incDEn	*	*
326	uSD9	SD[7]	IN	jnSDEn	*	*
326		SD[9]	OUT	jnSDEn	*	*
	uSD9 uSD6	SD[9]	001	INSDEN		-
328	เมอบช	THE STATE OF THE S	INI	• == =		
329		SD[6]	IN	-	*	*
1 220	uSD6	SD[6]	OUT	- jnSDEn	*	*
330	uSD6 uSD10	SD[6] SD[10]	OUT IN	- jnSDEn -	*	*
331	uSD6 uSD10 uSD10	SD[6] SD[10] SD[10]	OUT IN OUT	- jnSDEn - jnSDEn	* * *	* *
331 332	uSD6 uSD10 uSD10 uSD5	SD[6] SD[10] SD[10] SD[5]	OUT IN OUT IN	- jnSDEn - jnSDEn -	* * * * *	* * *
331 332 333	uSD6 uSD10 uSD10 uSD5 uSD5	SD[6] SD[10] SD[10] SD[5] SD[5]	OUT IN OUT IN OUT	- jnSDEn - jnSDEn - jnSDEn	* * * * * *	* * * * *
331 332 333 334	uSD6 uSD10 uSD10 uSD5 uSD5 uSD11	SD[6] SD[10] SD[10] SD[5] SD[5] SD[11]	OUT IN OUT IN OUT IN	- jnSDEn - jnSDEn - jnSDEn - jnSDEn	* * * * * * *	* * * * * * *
331 332 333 334 335	uSD6 uSD10 uSD10 uSD5 uSD5 uSD5 uSD11	SD[6] SD[10] SD[10] SD[5] SD[5] SD[11] SD[11]	OUT IN OUT IN OUT IN OUT OUT	- jnSDEn - jnSDEn - jnSDEn	* * * * * * * * * * * * * * * * * * * *	* * * * * * * * * * * * * * * * * * * *
331 332 333 334 335 336	uSD6 uSD10 uSD10 uSD5 uSD5 uSD5 uSD11 uSD11	SD[6] SD[10] SD[10] SD[5] SD[5] SD[11] SD[11] SD[11]	OUT IN OUT IN OUT IN OUT IN OUT IN	- jnSDEn - jnSDEn - jnSDEn - jnSDEn - jnSDEn	* * * * * * * * * *	* * * * * * * * * * * * * * * * * * * *
331 332 333 334 335 336 337	uSD6 uSD10 uSD10 uSD5 uSD5 uSD11 uSD11 uSD4 uSD4	SD[6] SD[10] SD[10] SD[5] SD[5] SD[11] SD[11] SD[11] SD[4] SD[4]	OUT IN OUT IN OUT IN OUT IN OUT IN OUT	- jnSDEn - jnSDEn - jnSDEn - jnSDEn - jnSDEn - jnSDEn	* * * * * * * * * * * * * * * * * * * *	* * * * * * * * * * * * * * * * * * * *
331 332 333 334 335 336 337 338	uSD6 uSD10 uSD10 uSD5 uSD5 uSD11 uSD11 uSD4 uSD4 uSD4	SD[6] SD[10] SD[10] SD[5] SD[5] SD[11] SD[11] SD[4] SD[4] SD[4] SD[12]	OUT IN OUT IN OUT IN OUT IN OUT IN OUT IN	- jnSDEn - jnSDEn - jnSDEn - jnSDEn - jnSDEn - jnSDEn -	* * * * * * * * * * * * * * * * * * * *	* * * * * * * * * * * * *
331 332 333 334 335 336 337 338 339	uSD6 uSD10 uSD10 uSD5 uSD5 uSD11 uSD11 uSD4 uSD4 uSD4 uSD4 uSD2	SD[6] SD[10] SD[10] SD[5] SD[5] SD[11] SD[11] SD[4] SD[4] SD[4] SD[12] SD[12]	OUT IN OUT	- jnSDEn - jnSDEn - jnSDEn - jnSDEn - jnSDEn - jnSDEn	* * * * * * * * * * * * * * * * * * * *	* * * * * * * * * * * * * *
331 332 333 334 335 336 337 338 339 340	uSD6 uSD10 uSD10 uSD5 uSD5 uSD11 uSD11 uSD4 uSD4 uSD4 uSD4 uSD12 uSD12 uSD3	SD[6] SD[10] SD[10] SD[5] SD[5] SD[11] SD[11] SD[4] SD[4] SD[4] SD[4] SD[12] SD[12] SD[12]	OUT IN	- jnSDEn	* * * * * * * * * * * * * * * * * * * *	* * * * * * * * * * * * * * * *
331 332 333 334 335 336 337 338 339 340 341	uSD6 uSD10 uSD10 uSD5 uSD5 uSD11 uSD11 uSD4 uSD4 uSD4 uSD4 uSD12 uSD12 uSD3 uSD3	SD[6] SD[10] SD[10] SD[5] SD[5] SD[11] SD[11] SD[4] SD[4] SD[4] SD[12] SD[12] SD[12] SD[3] SD[3]	OUT IN OUT	- jnSDEn	* * * * * * * * * * * * * * * * * * * *	* * * * * * * * * * * * * * * * *
331 332 333 334 335 336 337 338 339 340 341	uSD6 uSD10 uSD10 uSD5 uSD5 uSD11 uSD11 uSD4 uSD4 uSD4 uSD4 uSD2 uSD12 uSD3 uSD3 uSD3	SD[6] SD[10] SD[10] SD[5] SD[5] SD[11] SD[11] SD[4] SD[4] SD[4] SD[12] SD[12] SD[12] SD[3] SD[3] SD[13]	OUT IN	- jnSDEn -	* * * * * * * * * * * * * * * * * * * *	* * * * * * * * * * * * * * * * * *
331 332 333 334 335 336 337 338 339 340 341 342 343	uSD6 uSD10 uSD10 uSD5 uSD5 uSD11 uSD11 uSD4 uSD4 uSD4 uSD4 uSD2 uSD12 uSD3 uSD3 uSD3 uSD13 uSD13	SD[6] SD[10] SD[10] SD[5] SD[5] SD[11] SD[11] SD[4] SD[4] SD[4] SD[12] SD[12] SD[12] SD[3] SD[3] SD[3] SD[13] SD[13]	OUT IN OUT	- jnSDEn	* * * * * * * * * * * * * * * * * * * *	* * * * * * * * * * * * * * * * * * *
331 332 333 334 335 336 337 338 339 340 341 342 343	uSD6 uSD10 uSD10 uSD5 uSD5 uSD5 uSD11 uSD11 uSD4 uSD4 uSD4 uSD4 uSD12 uSD12 uSD13 uSD3 uSD3 uSD13 uSD13 uSD2	SD[6] SD[10] SD[10] SD[5] SD[5] SD[5] SD[11] SD[4] SD[4] SD[4] SD[12] SD[12] SD[12] SD[3] SD[3] SD[3] SD[13] SD[13] SD[13] SD[13] SD[13]	OUT IN	- jnSDEn	* * * * * * * * * * * * * * * * * * * *	* * * * * * * * * * * * * * * * * * * *
331 332 333 334 335 336 337 338 339 340 341 342 343 344 345	uSD6 uSD10 uSD10 uSD5 uSD5 uSD5 uSD11 uSD11 uSD4 uSD4 uSD4 uSD2 uSD12 uSD12 uSD3 uSD3 uSD3 uSD13 uSD13 uSD2 uSD2	SD[6] SD[10] SD[10] SD[5] SD[5] SD[5] SD[11] SD[4] SD[4] SD[4] SD[12] SD[12] SD[3] SD[3] SD[3] SD[13] SD[13] SD[13] SD[13] SD[2] SD[2]	OUT IN OUT	- jnSDEn	* * * * * * * * * * * * * * * * * * * *	* * * * * * * * * * * * * * * * * * * *
331 332 333 334 335 336 337 338 339 340 341 342 343 344 345 346	uSD6 uSD10 uSD10 uSD5 uSD5 uSD11 uSD11 uSD4 uSD4 uSD4 uSD12 uSD12 uSD12 uSD3 uSD3 uSD3 uSD3 uSD3 uSD13 uSD2 uSD2 uSD2	SD[6] SD[10] SD[10] SD[5] SD[5] SD[5] SD[11] SD[4] SD[4] SD[4] SD[12] SD[12] SD[3] SD[3] SD[3] SD[13] SD[13] SD[13] SD[2] SD[2] SD[2] SD[14]	OUT IN	- jnSDEn	* * * * * * * * * * * * * * * * * * * *	* * * * * * * * * * * * * * * * * * *
331 332 333 334 335 336 337 338 339 340 341 342 343 344 345 346 347	uSD6 uSD10 uSD10 uSD5 uSD5 uSD5 uSD11 uSD11 uSD4 uSD4 uSD4 uSD2 uSD12 uSD12 uSD3 uSD3 uSD3 uSD3 uSD3 uSD13 uSD13 uSD2 uSD2 uSD2 uSD14	SD[6] SD[10] SD[10] SD[5] SD[5] SD[5] SD[11] SD[11] SD[4] SD[4] SD[12] SD[12] SD[12] SD[3] SD[3] SD[3] SD[13] SD[13] SD[13] SD[2] SD[2] SD[2] SD[14]	OUT IN OUT	- jnSDEn	* * * * * * * * * * * * * * * * * * * *	* * * * * * * * * * * * * * * * * * *
331 332 333 334 335 336 337 338 339 340 341 342 343 344 345 346	uSD6 uSD10 uSD10 uSD5 uSD5 uSD11 uSD11 uSD4 uSD4 uSD4 uSD12 uSD12 uSD12 uSD3 uSD3 uSD3 uSD3 uSD3 uSD13 uSD2 uSD2 uSD2	SD[6] SD[10] SD[10] SD[5] SD[5] SD[5] SD[11] SD[4] SD[4] SD[4] SD[12] SD[12] SD[3] SD[3] SD[3] SD[13] SD[13] SD[13] SD[2] SD[2] SD[2] SD[14]	OUT IN	- jnSDEn	* * * * * * * * * * * * * * * * * * * *	* * * * * * * * * * * * * * * * * * *



351 u	ISD15 ISD15	SD[15]	IN	-	*	*
	SD15					
352 u	0010	SD[15]	OUT	-	*	*
	isD15	-	OUTEN	nSDEn	1	*
353 u	ISD0	SD[0]	IN	-	*	*
354 u	ISD0	SD[0]	OUT	jnSDEn	*	*
355 u	ILLP	LLP	OUT	-	0	*
356 u	ILAC	LAC	OUT	-	0	*
367 u	ILBLEN	LBLEN	IN	-	*	*
358 u	ILBLEN	LBLEN	OUT	-	*	*
359 u	ILBLEN	-	OUTEN	MuxnPORTDOutEn[8]	1	*
360 u	ILCP	LCP	OUT	-	0	*
361 u	ıLFP	LFP	OUT	-	0	*
362 u	ILCDEN	LCDEN	OUT	-	0	*
363 u	LD15	LD[15]	IN		*	*
364 u	LD15	LD[15]	OUT	-	*	*
365 u	LD15	-	OUTEN	MuxnPORTDOutEn[7]	1,	*
366 u	LD14	LD[14]	IN		*	*
367 u	LD14	LD[14]	OUT	-	*	*
368 u	LD14	-	OUTEN	MuxnPORTDOutEn[6]	1	*
369 u	LD13	LD[13]	IN	-	*	*
370 u	LD13	LD[13]	OUT	-,	*	*
371 u	LD13	-	OUTEN	MuxnPORTDOutEn[5]	1	*
372 u	LD12	LD[12]	IN	-	*	*
373 u	LD12	LD[12]	OUT	-	*	*
374 u	LD12	-	OUTEN	MuxnPORTDOutEn[4]	1	*
375 u	LD11	LD[11]	IN	-	*	*
376 u	LD11	LD[11]	TUO	-	*	*
377 u	LD11	-	OUTEN	MuxnPORTDOutEn[3]	1	*
378 u	LD10	LD[10]	IN	-	*	*
379 u	LD10	LD[10]	OUT	-	*	*
380 u	LD10	-	OUTEN	MuxnPORTDOutEn[2]	1	*
381 u	LD9	LD[9]	IN	-	*	*
382 u	LD9	LD[9]	OUT	-	*	*
383 u	LD9		OUTEN	MuxnPORTDOutEn[1]	1	*
384 u	ıLD8	LD[8]	IN	-	*	*
385 u	ıLD8	LD[8]	OUT	-	*	*
386 u	ıLD8		OUTEN	MuxnPORTDOutEn[0]	1	*
387 u	ILD7	LD[7]	OUT	-	0	*
	LD6	LD[6]	OUT	-	0	*
	LD5	LD[5]	OUT	_	0	*

# 11.4 Production Test Features

In order to generate test vectors suitable for use on a production tester by the chip manufacturer, some special test modes have been introduced. These modes come into operation whenever the pin **nTEST** is forced LOW.

Full details of these modes are available from ARM in a special Test Document on request.



### 12 ELECTRICAL CHARACTERISTICS

### 12.1 Absolute Maximum Ratings

Symbol	Parameter	Min	Max	Units
$V_{DD}$	Power Supply Voltage	-0.5	4.6	V
$V_{IN}$	DC Input Voltage	-0.3	6	V
I <sub>IN</sub>	DC Input Current	-50	50	mA
T <sub>STG</sub>	Storage Temperature	-65	150	°C

Note: Permanent damage can be occur if maximum ratings are exceeded.

Device modules may not operate normally while being exposed to electrical extremes.

Although sections of the device contain circuitry to protect against damages from high static voltages or electrical fields, take normal pre-cautions to avoid exposure to voltages higher than maximum rated voltages.

### **Recommended Operating Range**

Symbol	Parameter	Min	Max	Units
VDD (3.3V)	DC Power Supply Voltage (3.3V)	3.0	3.6	V
	→ use for I/O	2.3	2.7	V
VDD (2.5V)	DC Power Supply Voltage (2.5V)	-40	85	°C
	→ use for a Core			
T <sub>OPR</sub>	Operating Temperature			
	(Industrial Temperature)			



### 12.2 DC characteristics

All characteristics are specified at  $V_{DD}$  = 3.0 to 3.6V and  $V_{SS}$  = 0V over the junction temperature range of 0 to 100 °C.

### **Power Dissipation**

Symbol	Parameter	Min	Max	Units
$P_D$	[Run Mode]			
	With LCD @70.04MHz		190	mW
	Without LCD @70.04MHz		140	mW
	[Deep Sleep Mode]			
$P_{DWN}$	RTC Enable	120	160	uW
	RTC Disable	30	70	uW

### **CMOS/TTL Compatible Pin**

	_			
Symbol	Parameter	Min	Max	Conditions
$V_{IL}$	Low-level Input Voltage		$0.3XV_{DD}$	Guaranteed Input Low Voltage
$V_{IH}$	High-level Input Voltage	$0.7XV_{DD}$		Guaranteed Input High Voltage
$V_{OL}$	Low-level Output Voltage		0.4 V	$I_{OL}$ = 1 mA (*Group A)
			0.4 V	$I_{OL} = 2 \text{ mA (Group B)}$
			0.4 V	I <sub>OL</sub> = 4 mA (Group C)
V <sub>OH</sub>	High-level Output Voltage	2.4 V		$I_{OH}$ = -1 mA (Group A)
		2.4 V		$I_{OH} = -2 \text{ mA (Group B)}$
		2.4 V		$I_{OH} = -4 \text{ mA (Group C)}$
I <sub>IL</sub>	Input Low Current	-10 uA	10 uA	$V_{IN} ext{-}V_{SS}$
I <sub>IH</sub>	Input High Current	-10 uA	10 uA	$V_{IN}=V_{DD}$
l <sub>OZ</sub>	3-state Output Leakage	-10 uA	10 uA	$V_{PAD} = V_{SS}$ or
	Current			$V_{DD}$

<sup>\*:</sup> It means the drive strength (Group A = 1, Group B = 2, Group C = 4) Refer to GPIO part (page 122)

### I/O Circuit Pull-up Pin

The following current values are used for I/Os with internal pull-up devices.

Symbol	Parameter	$Min(V_{IN} = V_{SS})$	$Max(V_{IN} = V_{DD})$
$I_{PU}$	Pull-up	-100 uA	- 4 uA

Note: The following pins are used with internal pull-up devices. TDI, TCK, TMS, PMADAOK, PMBATOK, nTEST, nPMWAKEUP

### I/O Circuit Pull-down Pin

The following current values are used for I/Os with internal pull-down devices.

Symbol	Parameter	$Min(V_{IN} = V_{SS})$	$Max(V_{IN} = V_{DD})$
$I_{PD}$	Pull-down	4 uA	100 uA

Note : The following pins are used with internal pull-down devices. nTRST, TESTSCAN, nPLLENABLE, SCAN\_EN



#### 12.3 A/D Converter Electrical Characteristics

Symbol	Paramter	Test Condition	Min	Тур	Max	Unit
	Manage	aclk=8MHz *		0.0		
I <sub>dd</sub>	Normal	Input=AV <sub>ref</sub> V		6.0		mA
dd		fin=2KHz ramp				
	Power Down	aclk=8MHz		60		uA
An**	Analog Input Voltage		AVSS+0.2		AVref-0.2	V
Accuracy	Resolution				10	Bits
		aclk=8MHz				
INL	Integral Non-linearity	Input=0 - AV <sub>ref</sub> V		±2.0		LSB
		fin=2KHz ramp				
		aclk=8MHz				
DNL	Differential Non-linearity	Input=0 - AV <sub>ref</sub> V		±1.0		LSB
	·	fin=2KHz ramp				
SNR	Signal-to-Noise Ratio	F <sub>sample</sub> = 500Ksps	51	54		dB
Ortic		fin = 2KHz				u.b
SNDR	Signal-to-Noise Distortion Ratio		49	52		dB
aclk			2	4	8	MHz
t <sub>c</sub>	Conversion Time	t <sub>c</sub> = [aclk/16] <sup>-1</sup>	2	4	8	us
AV <sub>ref</sub> ***	Analog Reference Voltage				AVDD	V
T <sub>cal</sub>	Power-up Time	Calibration Time		22		ms
THD	Total Harmonic Distortion		51	54		dB
AVDD	Analog Power		3.0	3.3	3.6	V
DVDD	Digital Power		3.0	3.3	3.6	V
fin	Analog Input Frequency			5		KHz

(For Test, Analog Input Freq. = 2KHz, aclk=8MHz, AVDD=DVDD=AV<sub>ref</sub>=3.3V, Temperature=25°C)

aclk: To determine electrical characteristic of ADC, used 8MHz clock as aclk.

but for 7202 ADC, used 3.6864MHz for aclk.

an\* : Analog input is sample and hold with 500 $\Omega$  resistor and 300 fF capacitor in series and connected with gate of CMOS transistor.

So, in normal, input resistance of an analog input pin has a couple of Mega Ohms.

AVref\*\* : The equivalent impedance of AVREF is about  $5k\Omega$  of resistance to GND.



# 12.4 D/A Converter Electrical Characteristics

Symbol	Paramter	Test Condition	Min	Тур	Max	Unit
1	Normal	f <sub>CLK</sub> =50KHz	3.6	4.1	4.6	mA
I <sub>dd</sub>	Power Down	TBD				uA
Accuracy	Resolution			8		Bits
INL	Integral Non-linearity	DC	-0.6		+0.6	LSB
DNL	Differential Non-linearity	DC	-0.2		+0.2	LSB
SNR	Signal-to-Noise Ratio		47.5	47.7	47.8	dB
SNDR	Signal-to-Noise Distortion Ratio	f <sub>con</sub> =50KHz Temperature=25°C	47.1	47.4	47.7	dB
THD	Total Harmonic Distortion		57.5	61.8	65.9	dB
f <sub>con</sub>	Conversion Speed			50		KHz
tr/tf	rise/fall time	with ± 10% error		0.4		us
V <sub>out</sub> (p-p)	Output Voltage Range		1.025		2.675	V
$t_d$	Output Delay Time			1.4		Us

The current drive capability is about 500uA on output of DAC.


Typical load is about  $10k\Omega$  of resistance and 10pF of capacitance on output of DAC.



# 12.5 AC Characteristics

# 12.5.1 Static Memory Interface

### 12.5.1.1 READ Access Timing (Single Mode)

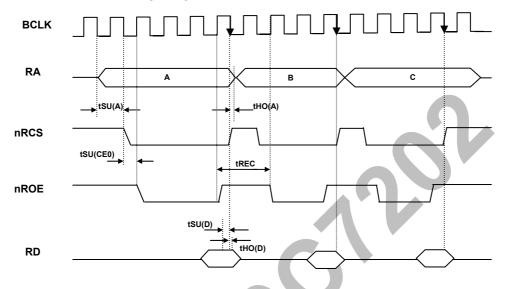

Symbol	Parameter	Min	Max	Unit
tSU(A)	Address to nRCS falling-edge setup time	25		
tHO(A)	nROE rising-edge to Address hold time	0		
tSU(CE0)	nRCS falling-edge to nROE falling-edge setup time	13		
tHO(CE0)	nROE rising-edge to nRCS rising-edge setup time	-13		
tHO(CE1)	nROE or nRWE rising-edge to nRCS falling-edge hold time	15		ns
tSU(CE1)	nRCS rising-edge to nROE or nRWE falling-edge setup time	25		
tREC	nROE negate to start of next cycle			
tSU(D)	Data setup time before latch			
tHO(D)	Data hold time after latch	0		


Timing values for read access in single mode data transfer

Memory Configuration Register Setting = 0x060

11	10	9		8	7	6	5	4	3	2	1	0
0	(	0	0	0	0		1 1	0	0	0	0	0




# 12.5.1.2 READ Access Timing (Burst Mode)

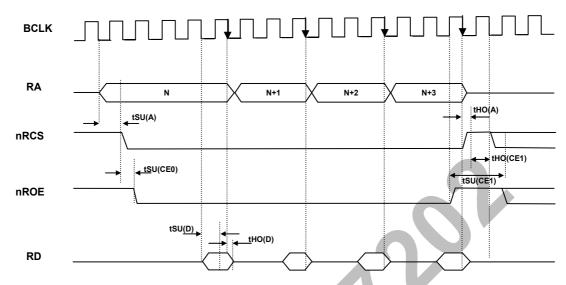

Symbol	Parameter	Min	Max	Unit
tSU(A)	Address to nRCS falling-edge setup time	13		
tHO(A)	nROE rising-edge to Address hold time	-15		
tSU(CE0)	nRCS falling-edge to nROE falling-edge setup time	13		
tHO(CE0)	nROE rising-edge to nRCS rising-edge setup time	-13		
tHO(CE1)	nROE or nRWE rising-edge to nRCS falling-edge hold time	25		ns
tSU(CE1)	nROE or nRWE rising-edge to nRCS falling-edge setup time	50		
tSU(D)	Data setup time before latch	5		
tHO(D)	Data hold time after latch	0		


Timing values for read access in burst mode data transfer

Memory Configuration Register Setting = 0xE00

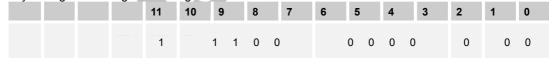



# 12.5.1.3 WRITE Access Timing

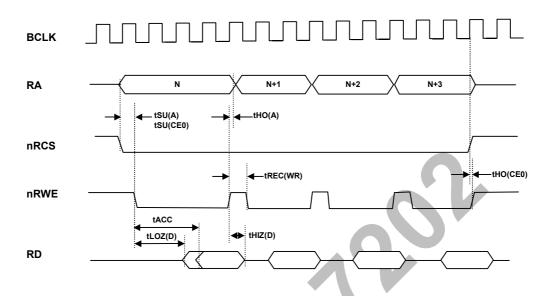

Symbol	Parameter	Min	Max	Unit
tSU(A)	Address to nRWE falling-edge setup time	15		
tHO(A)	nRWE rising-edge to Address hold time	0		
tSU(CE0)	nRCS falling-edge to nRWE falling-edge setup time	15		
tHO(CE0)	nRWE rising-edge to nRCS rising-edge setup time	27		
tHO(CE1)	nROE or nRWE rising-edge to nRCS falling-edge hold time	39		ns
tSU(CE1)	nRCS rising-edge to nROE or nRWE falling-edge setup time	25		
tREC(WR)	nRWE negate to start of next cycle	26		
tHIZ(D)	nRWE rising edge to D Hi-Z delay			
<del>tACC</del>	write access time	4.5		
tLOZ(D)	nRWE falling-edge to D driven	0		
	<b>-</b> :			


Timing values for write access

Memory Configuration Register Setting = 0x068

	11	10	9	8	7	6	5	4	3	2	1	0
	0	(	0	0	0	1	1 0	1		0	0	0




### 12.5.2 SDRAM Interface

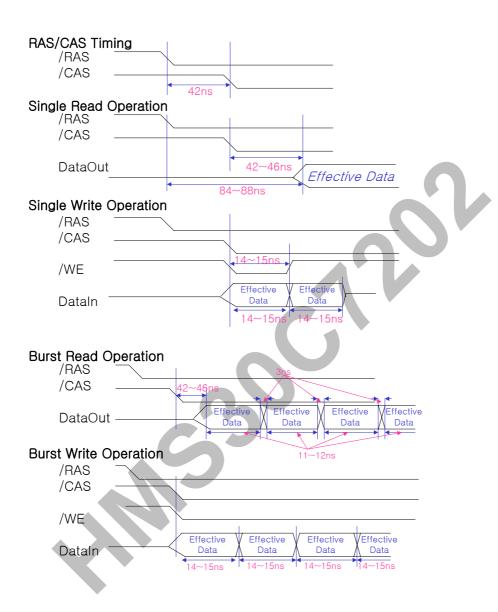

Condition: 70MHz CPU clock speed



# 12.5.3 LCD Interface

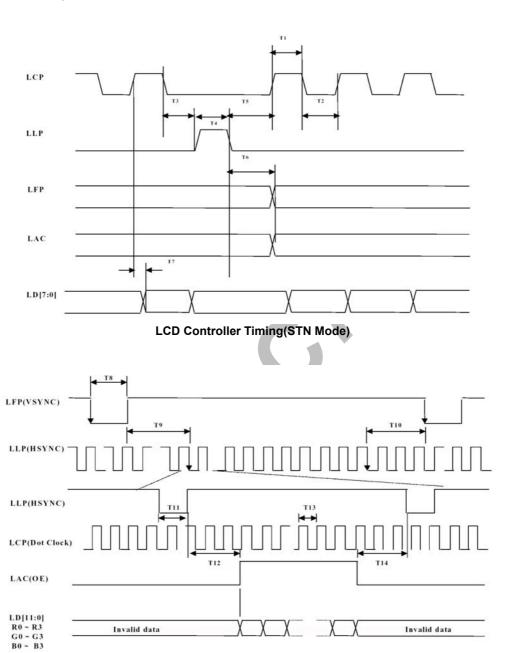

LCD Controller Timing(Active-TFT Mode)

Symbol	Parameter		Тур	Max	Unit
T1	LCP High Time	1	-	16	tCLK(Notes)
T2	LCP Low Time	1	-	17	tCLK
T3	LLP Front-Porch	1	-	256	tCLK
T4	LLP Pulse Width	1	-	256	tCLK
T5	T5 LLP Back-Porch		-	256	tCLK
T6	T6 Failing LLP to LFP(LAC) Toggle		-	256	tCLK

Invalid data


Invalid data



T7	Rising LCP to Display Data Change	TBD		TBD	ns
T8	VSYNC Width	1		64	tHperiod(Notes)
Т9	VSYNC Back-Porch	1		256	tHperiod
T10	10 VSYNC Front-Porch			256	tHperiod
T11	HSYNC Width	1		256	tCLK
T12	12 HSYNC Back-Porch		-	256	tCLK
T13	T13 HSYNC Front-Porch		-	256	tCLK
T14	Dot Clock Period		-	-	tCLK

**LCD Interface Signal Timing Parameters** 

Note: tCLK is BCLK or VCLK(LCD Controller Internal Clock Source: 31.5 or 40 MHz). tHperiod Max = 1408 tCLK

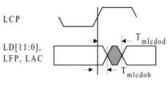


**STN Mode Signal Delay** 

Symbol	Parameter	Min	Max
Tmlcdod	Output Delay Time from LCP rising	-	5
Tmlcdoh	Output Hold Time from LCP Rising	-	-5

**STN Mode Signal Delay Parameters** 

Timing values are derived from simulations using 0pF signal loading. Actual circuit output delays should be calculated by adding manufacturers signal load de-rating delay values.

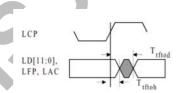

**TFT Mode Signal Delay** 


Symbol	Parameter	Min	Max
Ttftod	Output Delay Time from LCP rising	-	3
Ttftoh	Output Hold Time from LCP Rising	-	-3

**TFT Mode Signal Delay Parameters** 

Timing values are derived from simulations using 0pF signal loading. Actual circuit output delays should be calculated by adding manufacturers signal load de-rating delay values.



# 12.5.4 UART(Universal Asynchronous Receiver Transmitter)

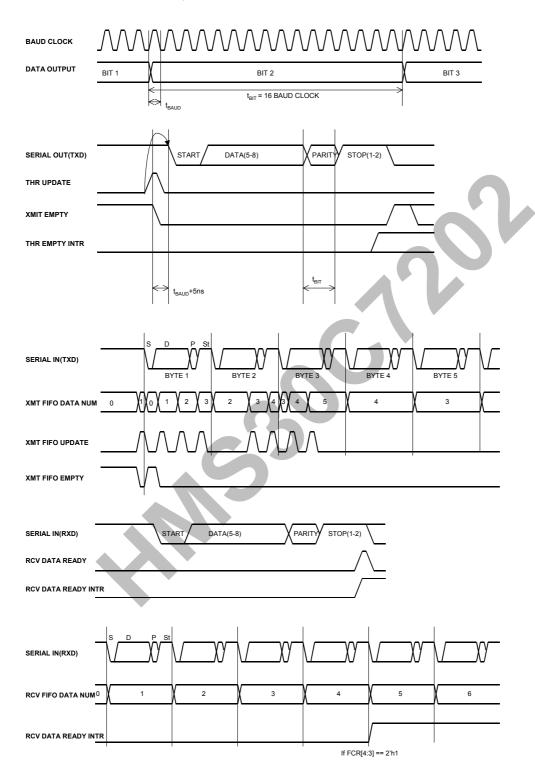





### 12.6 Package

### 12.6.1 Recommended Soldering Conditions

### 12.6.1.1 MQFP(Metric Quad Flat Pack ) Type

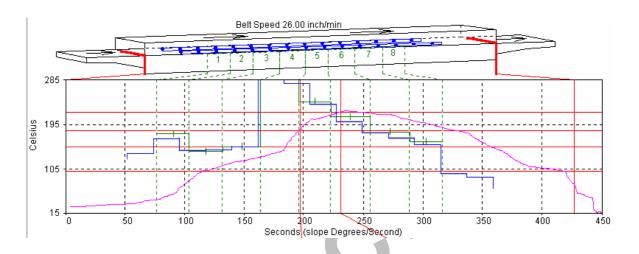

- Recommended IP-Reflow Solder Machine Temperature

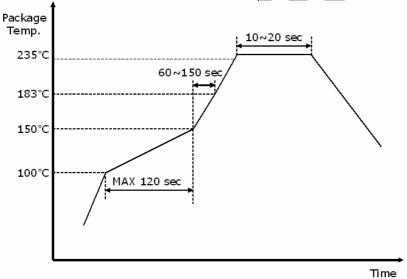

12.6.1.2 FBGA(Chip Array Ball Grid Array) Type

The soldering condition of FBGA type package is the same as that of MQFP type package.

- Recommended IP-Reflow Solder Machine Temperature



# 12.6.2 Pictures of Package Marking

Package Type	256FBGA	256MQFP
Package Marking	hynix HMS30C7202 yyww	hynix HMS30C7202Q yyww



#### 13 APPENDIX

#### 13.1 Deep-sleep, Wake-up Issues of HMS30C7202 PMU

#### 13.1.1 Wake-up

HMS30C7202 has four external wake-up sources, and at least one of two power condition pins (PMADAPOK, PMBATOK) should be high. MRING (nURING), nPMWAKEUP, RTC event can not be masked. PMU only has interrupt mask bits for interrupt controller. It means even though HMS30C7202 wake-up from deep-sleep, there might be no interrupt for interrupt controller. But every time, HMS30C7202 would wake up when any one of wake-up sources asserted.

#### - Wake-up sources

MRING: It's connected nURING pin ("n" of nURING pin means "low active")

This signal can not be masked in PMU.

HOTSYNC: HotSync condition or user defined condition (ex. Plugging power adaptor)

This signal is connected with GPIOB[10] interrupt.

nRESET: nRESET signal wake up from deep-sleep.

nPMWAKEUP: active low external signal. This signal can not be masked.

RTC Event: from RTC. This signal isn't able to mask in PMU.

All wake-up sources are filtered by debounce circuit (except RTC) with 250Hz clock from RTC clock source, so if RTC clock stopped, wake-up sequence would not work.

#### - Needed condition for wake-up

One of PMADAPOK and PMBATOK should be high, it means there's no power problem. If user wants to make wake-up regardless power source condition, set "WAKEUP" bit of PMU Mode register (PMUMODE) bit [3].

#### 13.1.2 Deep-sleep

- To go deep-sleep state, all wake-up conditions are cleared. If any wake-up pin stays in wake-up condition, 7202 would not go into "deep-sleep mode".
- Once Deep-sleep mode is set (in Slow mode) and no wake-up signal condition, State machine wait, until *Bus Idle* state. And after state machine jump into *Bus Idle*, in the very next "bus access" operation, PMU get bus mastership from CPU and state machine keep going into deep-sleep mode through short sleep state. Sometimes S/W need to wait until *Bus Idle*(ex. DMA cases) and to prevent un-wanted next instruction execution after deep-sleep instruction set PMU Mode Register(PMUMODE), usually dummy loop is used for this purpose.
- In some cases (in some S/W), to keep going into deep-sleep, dummy bus (ex. just single read of a peripheral register) access is helpful after dummy loop. We think it is related with changing bus mastership. (or may need longer dummy loop) But we can't sure it.