

# M61101FP PLL VIF/SIF TV Tuner

REJ03F0124-0120 Rev.1.2 Apr 11, 2005

# Description

M61101FP is a semiconductor integrated circuit consisting of VIF/SIF signal processing system for portable devices such as mobile phones, notebook PCs with low voltage and low consumption.


### Functions

• PLL split-carrier VIF/ SIF signal processing system compliant with NTSC


# Features

- Recommended supply voltage: 3.3V
- Adjustment free
- Coil-less VCO
- Built-in SIF trap and SIF band-pass filter
- Split-carrier system enables VIF and SIF signal processing independently
- FM radio reception capability
- Package: QFN with 28pin

# **Pin Arrangement**

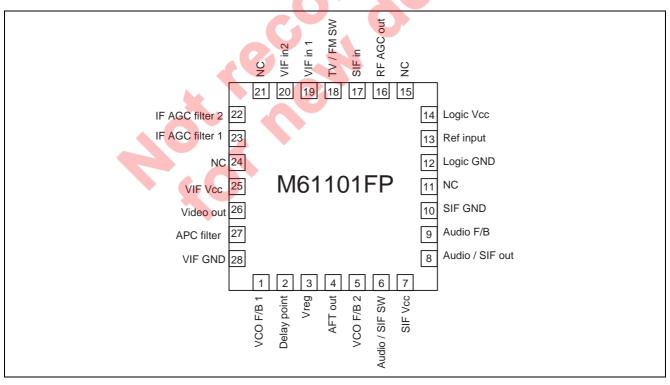

### **Block Diagram**

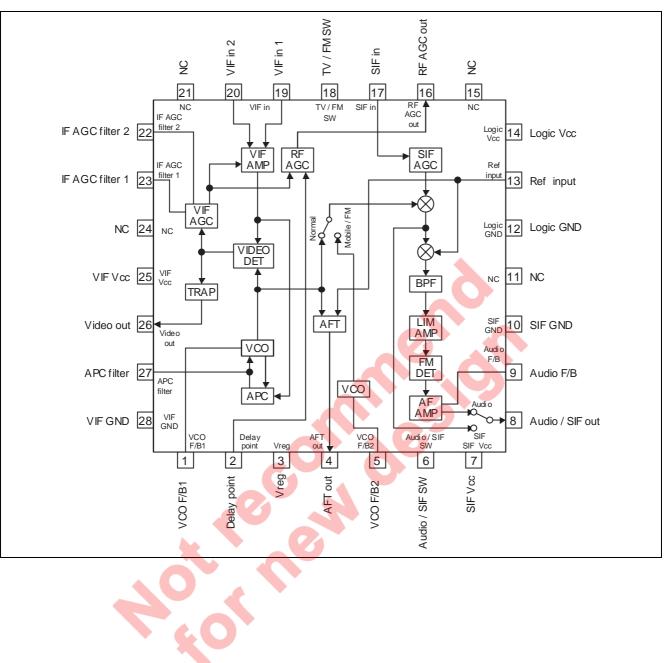




# Absolute Maximum Ratings

(Unless otherwise noted,  $Ta = 25^{\circ}C$ )

Item	Symbol	Ratings	Unit	Remarks
Supply voltage	Vcc	6.0	V	—
Power consumption	Pd	920	mW	<ul> <li>This rating is on the conditions stated below and varies depending on the materials of packaging board, Cu occupancy, etc.</li> <li>70mm□, 1.6mmt(first-layer board)</li> <li>Board material: Glass epoxy(FR-4)</li> <li>Board Cu occupancy: 50%</li> <li>WV: 0m/sec</li> </ul>
Operating ambient temperature	Topr1	–20 to 85	°C	—
Storage temperature	Tstg	-40 to 125	°C	—

# Thermal Derating (Maximum rating)

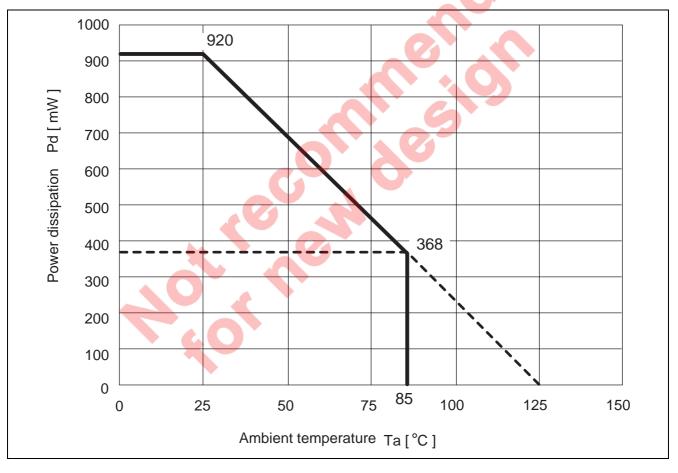


# **Recommended Operation Condition**

Item	Pin No.	Recommended value	Unit
Operation supply voltage	7, 14, 25	3.15 to 5.25	V
Recommended supply voltage	7, 14, 25	3.3	V
Standard signal frequency	13	4.000000	MHz



# **Application Circuit Example**

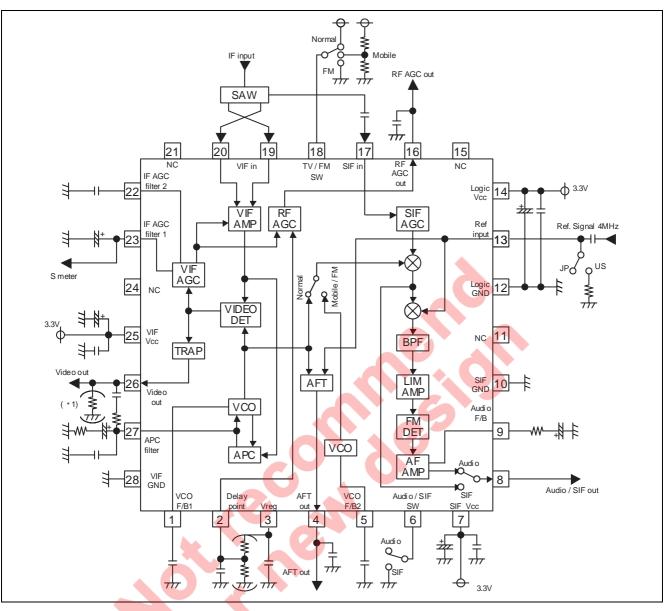

- M61101FP is a specialized semiconductor integrated circuit for Sprit-Carrier. This IC cannot be used for Inter-Carrier.
- Set up the bypass capacitor of LogicVcc(Pin14) in the near of LogicGND(pin12).
- For decreasing the wrap-around to VIF input, keep the balance connection from SAW filter to VIF input pin to short as far as possible. Furthermore, we recommend it to be crossed by a chip capacity or jumper cable.
- When using IFAGC filter 1(Pin23) as S meter output, keep the wire connection short as far as possible. If interference may occur, add a buffer. Moreover, also make the high enough impedance high by the receiver side, because the output impedance of S-meter is high.
- When attaching resistance of (\*1) to a video output terminal, more than  $10k\Omega$  is recommended.
- For the following reasons, the bandwidth of SAW filter (connected with Pin17) by the SIF side should use the narrowest as far as possible.
  - 1) When using pin8 as SIF out, any bandwidth isn't limited by the integrated circuit. (At Normal TV mode)
  - 2) Because the adjacent channel of FM wave is near such as several hundred kHz, interference may occur. (At FM mode)
- When connecting the metallic surface of the center on the rear face to the wiring, connect to pin12(GND) and don't connect another wiring.
- At power injection, apply the voltage to 3 Vcc terminals (pin7.14.25) simultaneously.
- Be sure to apply 3 Vcc terminals to a bypass capacity (Over  $0.1\mu F$ ).



# **Pin Description**

No.	Name	Function	Pin's voltage	Internal equivalent circuit
1	VCO F/B 1	VCO F/B (Feedback). For keeping the free-running frequency of built-in VCO constant, VCO F/B pin roles in Feedback control.	2.1V	
2	RF AGC Delay Point	RF AGC delay terminal. This terminal set the delay point of RF AGC.	1.2V to 1.6V	25 3 VREG 2V MOS SW 40K \$ 20K 200 FM 200 To RF AGC Delay Normal TV Mobile TV 60K \$ 80K 777 777 777 777 777 777 777 7
3	VREG	Constant voltage regulator terminal. This terminal outputs about 2V.	2.0V	25 50 3 16.4K 23.6K 0 7/7 7/7 7/7 7/7
4	AFT OUT	AFT output terminal. Because this terminal output pulse signal at TV mode, it will be smoothed by external capacity. When VIF is in a status of weak electric field, the output mute operation will be on. Moreover, at FM radio mode, the mute function always on.	3.3V to 0V	25 350K 4 350K 350K 10 10 10 10 10 10 10 10 10 10
5	VCO F/B 2	SIF VCO F/B(Feedback) terminal. For keeping the free-running frequency of built-in VCO stabilized, this terminal controls Feedback operation.	2.1V	



No.	Name	Function	Pin's voltage	www.DataSheet4U.com Internal equivalent circuit
6	Audio / SIF SW	Selector SW for AUDIO OUT and SIF OUT. OPEN: AUDIO OUT GND: SIF OUT	3.3V	
7	SIF VCC	The power supply terminal of SIF.	3.3V	7
8	AUDIO OUT	AUDIO output and SIF output terminals. This terminal needs de-emphasis characteristics for external. As described the following figure, the terminal voltage is the center voltage value of output signal.	1.8V	7     200     CMOS SW AUDIO OUT       8     4K       4K     SIF OUT       8     4K       9     SIF OUT       1     AUDIO OUT : 0.8mA       9     SIF OUT       777     777
9	AUDIO F/B	AF Bypass terminal. AUDIO F/B pin is connected to one or the other input of differential amplifier and could be got the gain by smoothing a sound signal with external capacity. When connecting the resistance in series with the capacity, this terminal enable to lower the amplitude of audio input.	1.5V	
10	SIF GND	GND terminal of SIF.	GND	10
11	NC	NC terminal.		
12	LOGIC GND	GND terminal of Logic block and Ref Amplifier.	GND	(12)
13	Ref Input (JP/US SW)	Input terminal of reference frequency. This terminal inputs the external signal(sine wave) and doubles as JP/US selector SW. In case of no connection between Ref input pin and GND: JPN(58.75M) In case of 10kΩconnection: USA(45.75M)	2.0V	14 200 13 4K 5K 4K 4K 5K 4K 100K 2V То JP/US SW 100 777 100 4K 100 100 100 100 100 100 100 10
14	Logic Vcc	Power supply voltage terminal of logic block and ref amplifier.	3.3V	(14)
15	NC	NC terminal.		

No.	Name	Function	Pin's voltage	www.DataSheet4U.com Internal equivalent circuit
16	RF AGC OUT	RF AGC output terminal. This terminal is the current-driven type.	3.3V to 0V	
17	SIF IN	SIF input terminal. This terminal inputs SIF signal after passing the SAW filter.	1.1V	7         3         VREG 2.0V         9K           10K         10K         9K           10         2K         5p           7         5p         7
18	TV/ FM SW	Each selector SW of Normal TV / Mobile TV / FM mode	5	
19	VIF in1	VIF input terminal. These terminals input VIF signal	1.1V	25 VREG 2.0V 6.8K 2.0V 2.0V 2.0V 2.0V 2.0V 2.0V 2.0V 2.0V 2.0V 2.0V 2.0V 2.0V 2.0V
20	VIF in2	after passing SAW filter. Balance input.		
21	NC	NC terminal.	_	
22	IF AGC 2	IFAGC filter terminal 2.	3.1V to 0V	
23	IF AGC 1	IF AGC Filter terminal 1. This pin changes AGC speed by external capacity value. When this terminal is grounded, the profit of VIF amplifier will become minimum. Moreover, it is available to use this terminal as S meter output. Because the impedance is high, give it attention to enough at the impedance by the side of wiring leading and a receptacle impedance.	3.1V to 0V	25 To VIF AMP 22 23 TO VIF AMP 2.5K 3K MOS SW TO VIF AMP 2.5K TO VIF AMP 2.5K TO VIF AMP TO VIF AMP



No.	Name	Function	Pin's voltage	www.DataSheet4U.com Internal equivalent circuit
25	VIF VCC	VIF power supply terminal.	3.3V	25
26	Video out	Video out terminal. As described the following figure, terminal voltage is zero carrier.	1.9V	
27	APC FILTER	APC filter terminal. As described the following figure, terminal voltage are at the time of no signal from VIF IN and IF AGC GND.	1.5V	20 20 5K 42K 300 42K 300 1.5V 42K 300 42K 42K 300 42K 42K 300 42K 42K 300 42K 42K 300 42K 42K 300 42K 42K 42K 300 42K 42K 42K 42K 42K 42K 42K 42K
28	GND	GND terminal of VIF.	GND	28

Note: Each voltage, current and resistance values are reference, so these values aren't guaranteed.



# **Electrical Characteristics**

#### General characteristics

			Test	Test	Innut	Incore	Measurement	Limits				
No.	ltem	Symbol	Test circuit	Test point	Input point	Input signal	Switches set to position 1 unless otherwise noted.	Min	Тур	Max	Unit	Note
1	VIF/SIF power supply current	lcc1	1	Pin7,25	_	-			43	51.6	mA	
2	Logic power supply current	lcc2	1	Pin14	-	-			2.5	3	mA	
3	Reference signal amplitude	Fref	1	Pin13	Pin13	4MHz Sine wave		100	200	400	mVpp	

(Unless otherwise noted, Ta=25°C, Vcc=3.3V, and 200mVpp is inputted to pin13)

#### **VIF** section

(Unless otherwise noted, Ta=25°C,	, Vcc=3.3V,	and 200mVpp is inputted to pin13)	

			Teet	Test	Innet	Immunt	Measurement		Limits			
No.	Item	Symbol	Test circuit	point	Input point	Input signal	Switches set to position 1 unless otherwise noted.	Min	Тур	Max	Unit	Note
4	Video output	Vodet	1	TP26	Pin19,20	1		0.8	1	1.2	Vpp	
5	Sink bottom voltage	Vsync	1	TP26	Pin19,20	2		0.50	0.8	1.10	V	
6	Video S/N	VoS/N	1	TP26	Pin19,20	2		45	48		dB	1
7	Input sensitivity	VinMIN	1	TP26	Pin19,20	3			40	50	dBµV	2
8	Maximum allowable input	VinMAX	1	TP26	Pin19,20	4	5	95	99	l	dBµV	3
9	Capture range CR-U	CR-U	1	TP26	Pin19,20	5		0.8	1.5		MHz	4
10	Capture range CR-L	CR-L	1	TP26	Pin19,20	5		1.0	1.5	_	MHz	5
11	Inter Modulation	IM	1	TP26	Pin19,20	6		27	35	_	dB	6
12	Differential Gain	DG	1	TP26	Pin19,20	7			7	10	%	
13	Differential Phase	DP	1	TP26	Pin19,20	7		_	7	10	deg	
14	RF AGC Maximum voltage	RFagcH	1	TP16	Pin19,20	8		Vcc 0.5	Vcc -0.2	l	V	
15	RF AGC Minimum voltage	RFagcL	1	TP16	Pin19,20	9			0.2	0.5	V	
16	RFAGC Delay point (Normal TV mode)	RFDP1	1	TP16	Pin19,20	10		85	90	95	dBµV	7
17	RFAGC Delay point (Normal FM mode)	RFDP2	1	TP16	Pin17	11	SW18=3	73	80	88	dBµV	8
18	AFT det sensitivity	μ	1	TP4	Pin19,20	12		10	26	40	mV /kHz	9
19	AFT Maximum voltage	AFTH	1	TP4	Pin19,20	13		Vcc –0.5	Vcc -0.2	l	V	9
20	AFT Minimum voltage	AFTL	1	TP4	Pin19,20	14			0.2	0.5	V	9
21	AFT Mute voltage	AFTM	1	TP4	_	_		Vcc/2 -0.4	Vcc/2	Vcc/2 +0.4	V	
22	AFT center voltage (US mode)	VaftUS	1	TP4	Pin19,20	16	SW13=2	Vcc/2 0.35	Vcc/2 -0.05	Vcc/2 +0.25	V	
23	AFT center voltage (JP mode)	VaftJP	1	TP4	Pin19,20	2		Vcc/2 0.48	Vcc/2 -0.18	Vcc/2 +0.12	V	
24	Video band width @4.0MHz	VF40	1	TP26	Pin19,20	17		-10	-5	-2	dB	10
25	Video band width @4.5MHz(TRAP)	VF45	1	TP26	Pin19,20	17		_	-25	-20	dB	10
26	VIF VCO Free-running frequency(US mode)	FvcofUS	1	TP4	_	_	SW4,13=2 SW17,23=2	-500	0	500	kHz	11
27	VIF VCO Free-running frequency(JP mode)	FvcofJP	1	TP4	_	_	SW4=2 SW17,23=2	-500	0	500	kHz	11





### M61101FP

#### SIF section

#### www.DataSheet4U.com

		,					Measurement		Limits	-		,
No.	ltem	Symbol	Test circuit	Test point	Input point	Input signal	Switches set to position 1 unless otherwise noted	Min	Тур	Max	Unit	Note
28	Audio output amplitude (Normal TV mode)	VoAF1	1	TP8	Pin17 Pin19,20	18 2		0.6	1.0	1.4	Vpp	
29	Audio output amplitude (Mobile TV mode)	VoAF1m	1	TP8	Pin17 Pin19,20	18 2	SW18=2	0.6	1.0	1.4	Vpp	
30	Audio output amplitude (FM mode)	VoAF2	1	TP8	Pin17	19	SW18=3	0.6	1.0	1.4	Vpp	
31	Audio output distortion (Normal TV mode)	THDAF1	1	TP8	Pin17 Pin19,20	18 2			0.5	1.0	%	
32	Audio output distortion (Mobile TV mode)	THDAF1m	1	TP8	Pin17 Pin19,20	18 2	SW18=2		0.5	1.0	%	
33	Audio output distortion (FM mode)	THDAF2	1	TP8	Pin17	19	SW18=3		0.5	1.0	%	
34	Audio S/N (Normal TV mode)	AF S/N1	1	TP8	Pin17 Pin19,20	20 2		48	53	—	dB	12
35	Audio S/N (Mobile TV mode)	AF S/N1m	1	TP8	Pin17 Pin19,20	20 2	SW18=2	39	45	_	dB	12
36	Audio S/N (FM mode)	AF S/N2	1	TP8	Pin17	20	SW18=3	50	56	_	dB	13
37	Input limiting sensitivity (Normal TV mode)	LIM1	1	TP8	Pin17 Pin19,20	21 22 2			35	40	dBµV	14
38	Input limiting sensitivity (Mobile TV mode)	LIM1m	1	TP8	Pin17 Pin19,20	21 22 2	SW18=2	_	35	40	dBµV	14
39	Input limiting sensitivity (FM mode)	LIM2	1	TP8	Pin17	21 22	SW18=3 SW23=2		35	40	dBµV	14
40	SIF output amplitude (Normal TV mode)	SIFG1	1	TP8A	Pin17 Pin19,20	20 2	SW6=2 SW8=2	100	105	110	dBµV	15
41	BPF frequency characteristics	BWBPF	10	TP8A	Pin17	23	SW6,18=2S W8,23=2		-20	-15	dB	16
42	S meter output @TV 90dBμV	ST90	1	TP23	Pin19,20	2		0.9	1.2	1.5	V	
43	S meter output @TV 70dBµV	ST70	1	TP23	Pin19,20	8		1.5	1.8	2.1	V	
44	S meter output @FM 90dBµV	SF90	1	TP23	Pin17	24	SW18=3	1.07	1.37	1.67	V	
45	S meter output @FM 70dBμV	SF70	1	TP23	Pin17	25	SW18=3	1.5	1.8	2.1	V	

#### (Unless otherwise noted, Ta=25°C, Vcc=3.3V, and 200mVpp is inputted to pin13)

### Mode setting

 $(Ta = 25^{\circ}C)$ 

### • Switching terminal voltage of Normal TV mode / Mobile TV mode / FM mode


o Vcc to (Vcc/2+0.3V)	Dividing SIF Receiving of	Normal TV wave type or VIF type FM radio wave	
	Receiving of	FM radio wave	
Audio/SIE	9		
Audio/SIE			
• Audio/Sil	Audio/SIF output switching terminal		
setting Audio/		6pin setting	
Audio output	t	DC open	
SIF output		GND	
-	Audio outpu	Audio/SIF select       Audio output       SIF output	

Note: SIF output can use only Normal TV mode.

(When selected at Mobile TV and FM mode, a signal for test is outputted.)




# **Measuring Circuit**

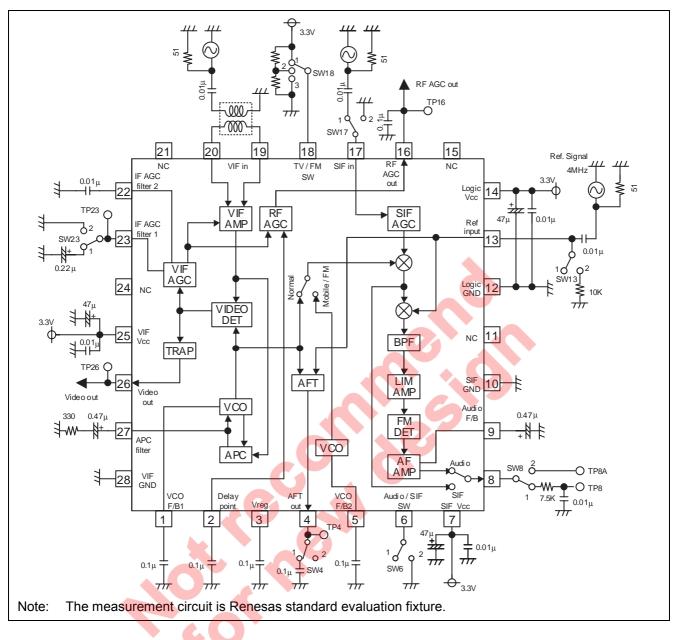



# Input Signal

SG		50Ω teri	mination	
1	f0=58.75MHz	Vi=90dBµV	fm=20kHz	AM=77.8%
2	f0=58.75MHz	Vi=90dBµV	CW	
3	f0=58.75MHz	Level variable	fm=20kHz	AM=77.8%
4	f0=58.75MHz	Level variable	fm=20kHz	AM=16.0%
5	f0=Frequency variable	Vi=90dBµV	fm=20kHz	AM=77.8%
	f1=58.75MHz	Vi=90dBµV	CM	
6	f2=55.17MHz	Vi=80dBµV	cw }-	Mixed signal
	f0=54.25MHz	Vi=80dBµV	CW	
7	f0=58.75MHz	Sync tip level=90dBµV		
'	TV modulation 10 stair-step	s waveform	Video moderation=87.5%	
8	f0=58.75MHz	Vi=70dBµV	CW	
9	f0=58.75MHz	Vi=100dBµV	CW	
10	f0=58.75MHz	Level variable	CW	
11	f0=54.25MHz	Level variable	CW	
12	f0=Frequency variable	Vi=90dBµV	CW	
13	f0=58.75-0.5MHz	Vi=90dBµV	CW	
14	f0=58.75+0.5MHz	Vi=90dBµV	CW	
15	f0=58.75+/ -5MHz	Vi=90dBµV	CW	
16	f0=45.75MHz	Vi=90dBµV	CW	
17	f1=58.75MHz	Vi=90dBµV	CW ->	Mixed signal
17	f2=Frequency variable	Vi=80dBµV	CM 7	wixed signal
18	f0=54.25MHz	Vi=80dBµV	fm=1kHz +/ -25kHz dev	
19	f0=54.25MHz	Vi=80dBµV	fm=1kHz +/ –75kHz dev	
20	f0=54.25MHz	Vi=80dBµV	CW	
21	f0=54.25MHz	Level variable	f <mark>m=1kH</mark> z +/ –25kHz dev	
22	f0=54.25MHz	Level variable	CW	
23	f0=54.25+/ -0.3MHz	Vi=80dBµV	CW	
24	f0=54.25MHz	Vi=90dBµV	CW	
25	f0=54.25MHz	Vi=70dBµV	CW	

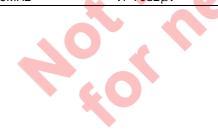



### **Electrical characteristic measurement**

#### Note1: Video S/N : VoS/N

Input SG2 to VIF IN(Pin19,20) and measure the video out (TP26) in r.m.s. through a 5MHz(-3dB)L.P.F.

$$S/N = 20log\left(\frac{0.7 \times Vodet (Vpp)}{NOISE (rms)}\right) (dB)$$

#### Note2. Input sensitivity: VinMIN

Input SG3(Vi=90dB $\mu$ V) to VIF IN(Pin19,20) and measure the input level when the 20kHz component of video output TPIA reaches –3dB from Vo det level.

#### Note3. Maximum allowable Input : VinMAX

Input SG4(Vi =  $90dB\mu V$ ) to VIF IN(Pin19,20), and measure the level of the 20kHz components of Video output. Gradually increase the Vi of SG and measure the iput level when the output reaches -3dB.

#### Note4. Capture range : CR-U

Input SG5 to VIF IN(Pin19,20), increase the frequency until the VCO is out locked-oscillation. And decrease the frequency of SG5 and measure the frequency fU when the VCO is locked.

CR - U = fU - 58.75 (MHz)

#### Note5. Capture range : CR-L

Input SG5 to VIF IN(Pin19,20), decrease the frequency is out locked-oscillation. And increase the frequency of SG5 and measure the frequency fL when the VCO is locked.


CR - L=58.75 - fL (MHz)

#### Note6. Inter modulation : IM

Input SG9 to VIF IN(Pin19,20), and measure video output(TP26) with an oscilloscope. Adjust AGC filter voltage TP23 so that the minimum DC level of the output waveform is the same level as the Sync bottom voltage(Vsync). At that time, measure TP26 with a spectrum analyzer. The inter modulation is defined as a difference between 0.92MHz and 3.58MHz frequency components.

#### Note7.RF AGC Delay Point (Normal TV mode • Mobile TV mode) : RFDP1


Input SG10 to VIF IN(Pin19,20), measure the level of SG10 when the RF AGC Output(TP16) to1/2Vcc. At that time, measure the Pin12 in the open status.

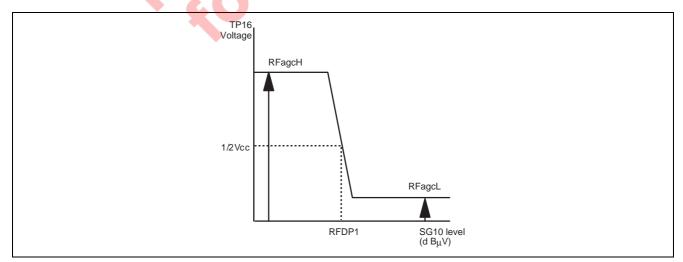



### Note8: RF AGC Delay point (FM mode)

Set the Pin18 to GND, input SG11 to SIF IN(Pin17), and measure the level of SG11when the RE AGC Output(TP16) to 1/2 Vcc. At that time, measure the Pin12 in the open status.

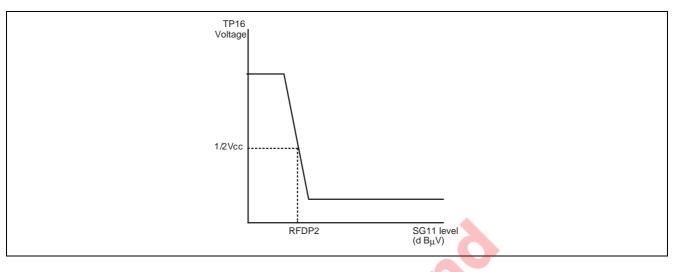


### Note9. AFT det sensitivity: µ,AFT Maximum voltage : AFTH,AFT Minimum voltage : AFTL

Input SG12 to VIF IN(Pin19,20), set the frequency of SG12as the voltage of AFT output (TP4) to 2V, and set the frequency to f(2).

Set the frequency of SG12 as the voltage of AFT output(TP4) to 1V, and set the frequency to f(1). Set the AFT output voltage when inputting the SG13 and SG14 to VIF I(Pin19, 20)


each to AFT Maximum voltage = AFTH, AFT Minimum voltage=AFT Minimum voltage=AFRL.

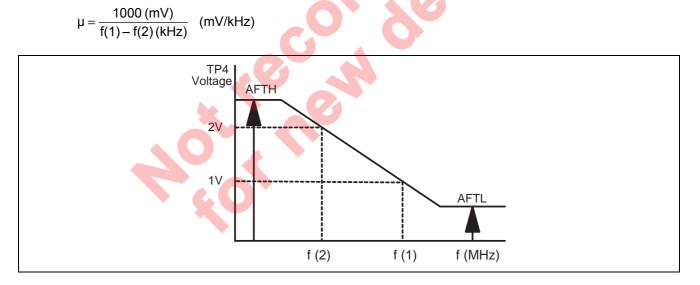

#### Note10. Video frequency characteristics (4.0MHz,4.5MHz) : VF40,VF45

Input SG17 to VIF IN(Pin19,20), measure 1MHz level of video output at f2=57.75MHz and set the level to F(1M). Measure the voltage at that time of TP23, apply the voltage to TP23 and fix. Set the frequency of SG17(f2) to 54.75MHz, measure the level of TP26 at 4MHz and set to F(4M). Also set the frequency of f2 to54.75MHz, measure the level of TP26 at 4.5MHz and set to (4.5V).

VF40 = F(4M) - F(1M) (dB)

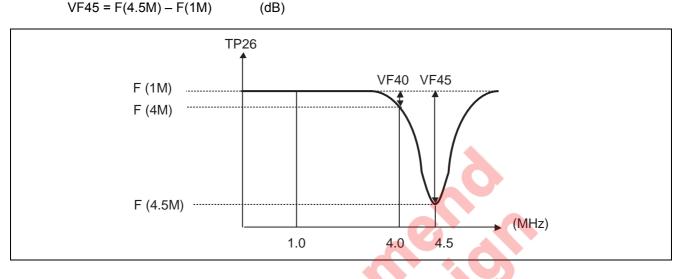

# Note11. VIF VCO Free-running frequency : FvcofJP • FvcofUS

Input 4.00MHz to Ref IN(Pin13), Set the each SW status to the following table.

*US/JP	SW
US/JI	<b>N N</b>

	JP Mode		US Mode	
SW No.	Setting	Status	Setting	Status
4	2	With no capacitor	2	With no capacitor
13	1	No 10kΩ	2	10Ω
17	2	GND	2	GND
18	1	Vcc	1	Vcc
23	2	GND	2	GND

At that time, switch No signal pull-down resistor of Pin13(=JP mode) or pull-down resistor of Pin13(=JP mode) or pulldown resistor of Pin13, measure each frequency of output signal into AFT out(TP4). Set the frequency as JP mode =FaftJP and US mode=FaftUS, calculate the difference of VCO free-running frequency and 58.75MHz(45.75MHz) from the following formula.

<Reference signal: fref=4.00MHz> JP Mode FvcofJP = 65.143(MHz) – 8 × FaftJP – 58.75(MHz) [MHz] US Mode FvcofUS = 52.148(MHz) – 8 × FaftUS – 45.75(MHz) [MHz]

### Note12, Audio S/N(Normal TV mode• Mobile TV mode) : AF S/N1,AF S/N1m

Input SG2 to VIF IN(Pin19,20) and the same as SG20 to SIF IN(Pin17), measure the noise of audio output(TP8) by FLAT and r.m.s., and set the value to Vn1.

 $AF S/N1 = 20log \left( \frac{VoAF1(mVrms)}{Vn1(mVrms)} \right) (dB)$ (AF S/N1m)



### Note13. Audio S/N(FM mode): AF S/N2

www.DataSheet4U.com

Input SG20 to SIF IN(Pin17), measure the noise by FLAT and r.m.s., set the value to Vn1. At this time, Pin18 is GND.

$$AF S/N2 = 20log\left(\frac{VoAF2 (mVrms)}{Vn2(mVrms)}\right) (dB)$$


#### Note14. Input limiting sensitivity: LIM1,LIM1m,LIM2

Input SG21 to SIF IN(Pin17), and measure the level of 1kHz element at audio output(TP8) to FLAT, r.m.s.(At normal TV mode and Mobile TV mode, input SG2 to VIF IN.)

And input SG22 to SIF IN(Pin17), and measure the noise level of audio output(TP8) to FLAT, r.m.s.(At Normal TV mode and Mobile TV mode, input SG2 to VIF IN.)

As for each amplitude of SG21 and 22, set the input level for SIF IN(Pin17)

to the input limiting sensitivity LIM1(LIM1m, LIM2) when the level difference is 30dB.

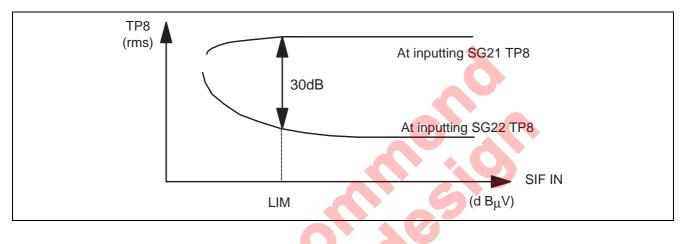


#### Note15. SIF output amplitude (Normal TV mode) : SIFG1

Set Vcc to Pin18, and input SG2 to VIF IN(Pin19,20) and same as SG20 to SIF IN(Pin17). Next, set Pin6 to GND (SW8=2), and measure the level of 4.5MHz element appearing in TP8A. At that time, keep in mind that internal BPF has not passed the 4.5MHz signal of TP8A.

#### Note16.BPF frequency characteristics (±300kHz): BWBPF

Set GND(SW8=2) to Pin16 and same as 1/2Vcc to Pin18, and input SG23 to SIF IN(Pin17). At that time, when the frequency of SG23 is set to 54.25MHz+300kHz and 54.25MHz–300kHz, the frequency outputted of TP8A are each 750kHz and 150kHz. And measure the levels each 750kHz and 150kHz, set the value as BWBPF the level of SIFG2(450kHz) when being based on the level is set to BWBPF.

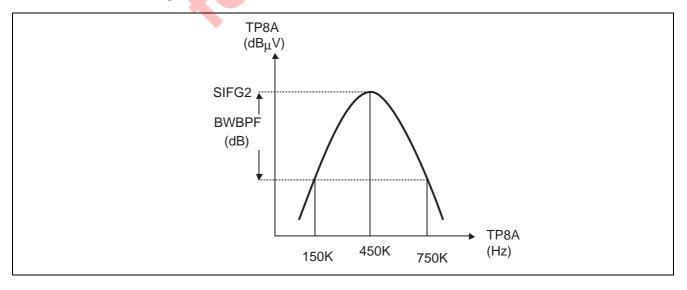



# Precautions for handling M61101FP

• Since this IC is using the detailed process, be careful of serge enough.


• The FM receiving function for this IC is deferent from the IC developed for FM wave receiving. This IC enables it to receive an FM wave in simple using the SIF signal-processing circuit for TV reception. Therefore, since many FM reception-related properties (ex: receiving sensitivity, interference, etc.) may not be enough compared with exclusive use IC which please note.

- The group delay property of Built-in SIF TRAP is as follows (reference value). <Group delay in each frequency at the time of being based on the value in 1MHz>.
  - 2.0MHz 20 nsec
  - 3.0MHz 100 nsec
  - 3.5MHz 250 nsec





# **Package Dimensions**

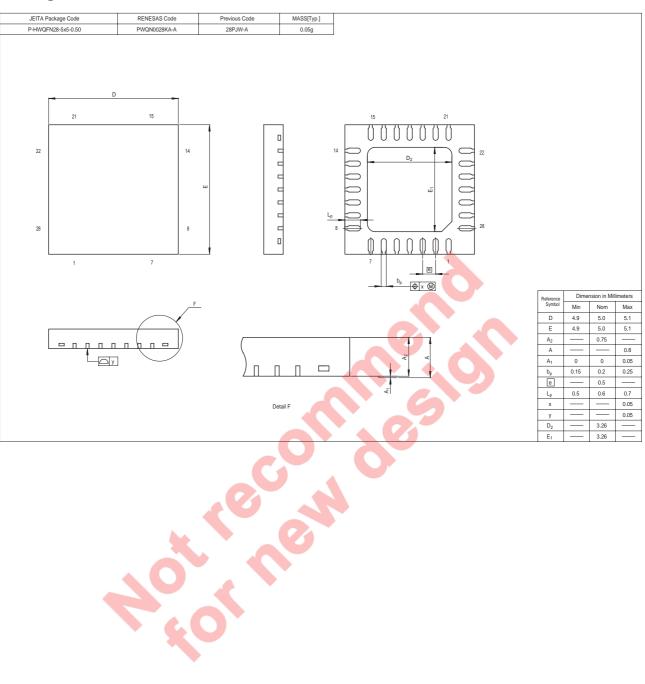



# Renesas Technology Corp. Sales Strategic Planning Div. Nippon Bldg., 2-6-2, Ohte-machi, Chiyoda-ku, Tokyo 100-0004, Japan

Keep safety first in your circuit designs! 1. Renesas Technology Corp. puts the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage. Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

#### Notes regarding these materials

- Notes regarding these materials
  1. These materials are intended as a reference to assist our customers in the selection of the Renesas Technology Corp. product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corp. or a third party.
  2. Renesas Technology Corp. assumes no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.
  3. All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corp. without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corp. or an authorized Renesas Technology Corp. product distributor for the latest product information before purchasing a product listed herein.
  The information described here may contain technical inaccuracies or typographical errors. Renesas Technology Corp. assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors. Please also pay attention to information before making a final decision on the applicability of the information adaptions, please be sure to evaluate all information actual system before making a final decision on the applicability of rangement. See a stechnology Corp. Semiconductor no responsibility for any damage, inability or on a nuthorized Renesas. Technology Corp. Semiconductor no responsibility or any damage, inability or other loss rising from these inaccuracies or errors. Please also pay attention to information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be s

- use. 6. The prior written approval of Renesas Technology Corp. is necessary to reprint or reproduce in whole or in part these materials. 7. If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination. Any diversion or reexport control raws and regulations of Japan and/or the country of destination is prohibited. 8. Please contact Renesas Technology Corp. for further details on these materials or the products contained therein.



#### **RENESAS SALES OFFICES**

Refer to "http://www.renesas.com/en/network" for the latest and detailed information.

Renesas Technology America, Inc. 450 Holger Way, San Jose, CA 95134-1368, U.S.A Tel: <1> (408) 382-7500, Fax: <1> (408) 382-7501

Renesas Technology Europe Limited Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K. Tel: <44> (1628) 585-100, Fax: <44> (1628) 585-900

Renesas Technology Hong Kong Ltd. 7th Floor, North Tower, World Finance Centre, Harbour City, 1 Canton Road, Tsimshatsui, Kowloon, Hong Kong Tel: <852> 2265-6688, Fax: <852> 2730-6071

Renesas Technology Taiwan Co., Ltd. 10th Floor, No.99, Fushing North Road, Taipei, Taiwan Tel: <886> (2) 2715-2888, Fax: <886> (2) 2713-2999

Renesas Technology (Shanghai) Co., Ltd. Unit2607 Ruijing Building, No.205 Maoming Road (S), Shanghai 200020, China Tel: <86> (21) 6472-1001, Fax: <86> (21) 6415-2952

Renesas Technology Singapore Pte. Ltd. 1 Harbour Front Avenue, #06-10, Keppel Bay Tower, Singapore 098632 Tel: <65> 6213-0200, Fax: <65> 6278-8001

http://www.renesas.com