CALLE TMF8806 Datasheet

Published by ams-OSRAM AG Tobelbader Strasse 30, 8141 Premstaetten, Austria Phone +43 3136 500-0 ams-osram.com © All rights reserved



TMF8806 Table of contents

CALL OSRAM

Table of contents

1	Gen	eral description4
	1.1	Key specifications & features 4
	1.2	Applications5
	1.3	Block diagram 5
	1.4	Pin assignment 6
2	Orde	ering information7
3	Abs	olute maximum ratings8
4	Elec	etrical characteristics9
	4.1	Algorithm performance parameters12
5	Турі	ical operating characteristics14
6	Fun	ctional description17
	6.1	Functional working principle17
	6.2	Startup of TMF880619
	6.3	Power modes
	6.4	Distance modes22
	6.5	Optical stack configurations23
	6.6	EMC performance enhancements24
	6.7	I/O voltage selection25
	6.8	Ranging acquisition timing26
	6.9	Algorithm performance26
	6.10	VCSEL
	6.11	Typical optical characteristics28
	6.12	I ² C protocol
7	Reg	ister description32
	7.2	App0 registers
	7.3	Object detection results45
	7.4	Calibration and algorithm state data exchange53
	7.5	Raw histogram output54
	7.6	Serial number readout55



	7.7	Interrupt suppression registers57
	7.8	Bootloader
_	_	
8	Арр	lication information63
	8.1	Schematic63
	8.2	PCB layout66
	8.3	PCB pad layout67
	8.4	Calibration
	8.5	Software drivers
•	D	
9	Paci	kage drawings & markings69
10	Тар	e & reel information71
	_	e & reel information71 lering & storage information72
	_	
	Solc 11.1	lering & storage information72
11	Solo 11.1 11.2	lering & storage information72 Soldering information72
11 12	Sold 11.1 11.2 Lase	lering & storage information 72 Soldering information 72 Storage information 73 er eye safety 75
11 12	Sold 11.1 11.2 Lase	lering & storage information 72 Soldering information 72 Storage information 73

CIMUI OSRAM

TMF8806 Time-of-flight sensor

1 General description

The TMF8806 is a dToF (direct Time of Flight) optical distance sensor module achieving up to 5000 mm target detection distance. The TMF8806 can operate at ultra low power consumption using a new ultra low power mode. It allows operation with I²C hosts with a very wide voltage range: 1.2 V and 1.8 V to 3.3 V.

The TMF8806 is a single modular package with integrated VCSEL. The TMF8806 device is based on SPAD, TDC and histogram technology. The device achieves 5000 mm detection range.

1.1 Key specifications & features

The benefits and features of TMF8806, Time-of-flight sensor are listed below:

Benefits	Features
Small footprint fits in the mobile phone bezel	Modular package - 2.2 mm x 3.6 mm x 1.0 mm
Detecting central closest objects	No influence on multi object reflections
Wide range of host devices	I/O supply from 1.2V, 1.8V to 3.3V
Within 3 % of measurement (accuracy); no multipath and no multiple object problems as for iToF	Time-to-Digital Converter (TDC) Direct Time-of-Flight Measurement
Better accuracy detects reliably closest object Minimum distance 10 mm, maximum 5000 mm	Single Photon Avalanche Photodiode (SPAD) Histogram based architecture
No complex calibration	Dynamic cover glass calibration
Compensates for dirt on glass	Reliable operation under demanding use cases
Improved accuracy over temperature and life	Reference SPAD and sopisticated on-chip algorithm
Class 1 eye safe	Fast VCSEL driver with protection
Longer battery life	 27 mA power consumption at 30 Hz operation. 14 μA power consumption at 0.5 Hz operation and ultra low power mode 0.26 μA power-down current consumption (EN=0)
No additional expensive EMC parts	EMC improvements

Table 1: Key benefits & features



1.2 Applications

The device is ideal for use in the mobile phone market with applications including:

- Distance measurement for camera autofocus (Laser Detect Autofocus LDAF)
- · Battery operated systems with long runtime
- Presence detection Object detection
- Collision avoidance

1.3 Block diagram

The functional blocks of this device are shown below:

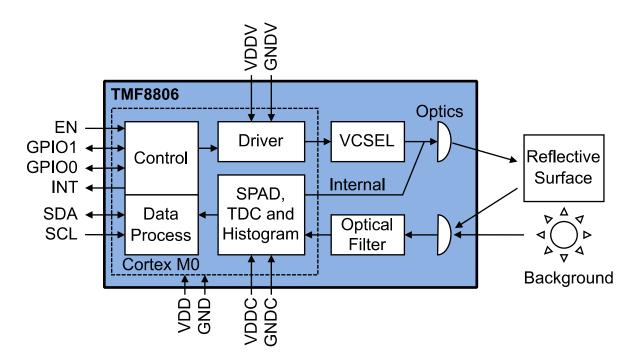


Figure 1: Functional blocks of TMF8806

1.4 Pin assignment

1.4.1 Pin diagram

Figure 2: Pin locations top through view (not to scale)

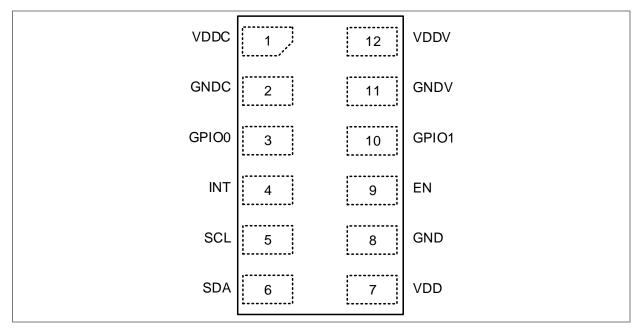


Table 2: Pin description of TMF8806

Pin number	Pin name	Signal type	Description
1	VDDC	Supply	Charge pump supply voltage (3 V); add a capacitor GRM155R70J104KA01 (0402 X7R 0.1 μF 6.3 V) to GND
2	GNDC	Ground	Charge pump ground; connect all ground pins together
3	GPIO0	I/O	General purpose input/output; default Hi-Z; if not used, connect to VDD for 1.8 V to 3.3 V I/O supply or GND for 1.2V I/O supply. During startup after the rising edge of EN, or rising edge of VDD if EN=VDD, this pin is monitored and used to switch between 1.2 V I/O supply and 1.8 V to 3.3 V I/O supply.
4	INT	Output	Interrupt. Open-drain output; default Hi-Z; connect to GND if not used, do not leave floating.
5	SCL	Input	I ² C serial clock
6	SDA	I/O	I ² C serial data
7	VDD	Supply	Chip supply voltage (3 V); add a capacitor GRM155R70J104KA01 (0402 X7R 0.1 μF 6.3 V) to GND

Pin number	Pin name	Signal type	Description
8	GND	Ground	Chip ground; connect all ground pins together
9	EN	Input	Enable input active high; setting to low forces the device into shutdown and all memory content is lost; connect the EN pin to a host GPIO to control the hardware reset function of TMF8806. If this functionality is not needed, connect to VDD.
10	GPIO1	I/O	General purpose input/output; default Hi-Z; connect to GND if not used
11	GNDV	Ground	VCSEL ground; connect all ground pins together
12	VDDV	Supply	VCSEL supply voltage (3 V); add a capacitor GRM155R70J104KA01 (0402 X7R 0.1 μF 6.3 V) to GND

(1) SDA, SCL, INT and EN have no diode to any VDD supply. Therefore, even with VDD=0 V they do not block the interrupt line or I²C bus.

(2) GPIO0 and GPIO1 are push/pull output and have a diode to VDD; therefore, if VDD is not powered, GPIO0 and GPIO1 should not be driven from outside.

2 Ordering information

Ordering code	Package	Marking	Delivery form	Delivery quantity
TMF8806-1AM	Optical module	5-digit tracecode (coded)	Tape & reel (7" reels)	500 pcs/reel
TMF8806-1A	Optical module	5-digit tracecode (coded)	Tape & reel (13″ reels)	5000 pcs/reel

3 Absolute maximum ratings

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. Functional operation of the device at absolute maximum rating conditions is not implied, nor at any other conditions beyond those indicated under "Operating Conditions".

Table 3: Absolute maximum ratings of TMF8806

Symbol	Parameter	Min	Мах	Unit	Comment
Electrical parar	neters				
VDDC, VDDV, VDD	3 V supply voltage	-0.3	3.6	V	Connect pins VDDC, VDDV, VDD on PCB with very short connections
GNDV, GNDC, GND	Ground	0.0	0.0	V	Connect all GND pins on PCB with very short connections
GPIO0, GPIO1	Digital I/O terminal voltage	-0.3	VDD + 0.3 V max. 3.6 V	V	Protection diode to VDD
INT, SCL, SDA, EN	Digital I/O terminal voltage	-0.3	3.6	V	No protection diodes to any positive supply only to ground
I_SCR	Latch up immunity		± 100	mA	JEDEC JESD78E
Electrostatic di	ischarge				
ESDHBM	Electrostatic discharge HBM		± 2000	V	JEDEC JS-001-2017
ESD _{CDM}	Electrostatic discharge CDM		± 500	V	JEDEC JS-002-2018
Temperature ra	anges and storage cond	itions			
T _{STRG}	Storage temperature range	-40	85	°C	
TBODY	Package body temperature		260	°C	IPC/JEDEC J-STD-020 ⁽¹⁾
RH _{NC}	Relative humidity (non-condensing)	5	85	%	
MSL	Moisture sensitivity level		3		Represents a maximum floor life time of 168h with $T_{AMB} < 30 \ ^{\circ}C$ and $< 60\%$ r.h.

(1) The reflow peak soldering temperature (body temperature) is specified according to IPC/JEDEC J-STD-020 "Moisture/Reflow Sensitivity Classification for Nonhermetic Solid State Surface Mount Devices."

4 Electrical characteristics

All limits are guaranteed. The parameters with Min and Max values are guaranteed with production tests or SQC (Statistical Quality Control) methods.

Device parameters are guaranteed at nominal conditions unless otherwise noted. While the device is operational across the temperature range, functionality will vary with temperature.

Symbol	Parameter	Conditions	Min	Тур	Мах	Unit	Comment
Vvddv, Vvddc, Vvdd	Supply voltage		2.7	3.1	3.5	V	
			-40	25	70		
tамв	Free-air temperature	VCSEL clk = 18.8MHz <i>vcselClkDiv2</i> =1, VDD >= 3.0V			85	°C	Operational
Current consu	mption ⁽¹⁾						
POWER_DOWN	I_VDD powerdown	Enable pin low, I²C off	0.02	0.26	1	μA	State: Powerdown
ISTANDBY	I_VDD standby CI OSC Off, pon=0 I ² C wakeup only	PU off, RAM on		85		μA	State: Standby
Iwait	I_VDD wait CPU on 5 MHz I ² C on,			140		μA	State: Wait
IACTIVE	I_VDD ranging pro running at 80 MHz No TDC			2.7		mA	State: Histogram processing
IACTIVE_RANGING	I_VDD ranging ac vcselClkDiv2=0 (d running			32.5		mA	State: Ranging active
	2.5m range, 33 ms data rate	900k iterations		25.8		mA	
	5m range, 66ms	900k iterations		22.9		mA	
	5m range, 33ms	450k iterations		20.4		mA	
	2.5m mode, 33ms	450k iterations		13.5		mA	
Iranging_avg	1 s data rate	10k iterations ultra low power mode, default range		46		μA	
	2 s data rate	10k iterations ultra low power mode, short range		15		μA	

Table 4: Electrical characteristics

Symbol	Parameter	Conditions	Min	Тур	Max	Unit	Comment
IVCSEL_PEAK	Peak VCSEL curi	rent (only internal)		230		mA	
System parame	eters						
fсри		or with a 16x PLL; adjusts the default		4.7	75 (= 4.7*16)	MHz	
f _{PLL}	Max PLL frequen	су		150.4		MHz	
Reset pin and p	power-up timing						
t POR	Power on (Boot T active)	ïme, EN to I ² C		1.6		ms	
t _{en_meas}	Enable high to rea measurement exc				5	ms	
t _{STBY_ACT}	Standby to active	time		<<1		ms	
tact_stby	Active to standby	time		<<1		ms	
ten_off	Enable low to pow	ver down time		<<1		ms	
Ranging acquis	sition timing						
tranging_init		uding electrical done on first startup e changed from last		8		ms	
	repetitionPeriodN	209			– ms		
TRANGING_PERIOD	repetitionPeriodN	1000 / 2000					
Iterations	Allowed iterations	s range - klters	10k	900k	4000k		
I/O levels							
$V_{1v2_threshold}$	See section 6.7			1.5		V	
		1.2 V operation	1.1	1.2	1.3		
Vio	VIO supply	1.8 - 3.3 V operation	1.65	1.8	3.5	V	
I _{LEAK}	SDA, SCL, GPIO	0/1, EN, INT	-5		5	μA	
V _{IL_EN}	Low level input vo suitable for 1.2V a operation		0.0		0.32	V	
Vih_en	High level input v suitable for 1.2V a operation		0.92		3.5	V	
VIL_1V2	Input low level	Pads SCL, SDA,	0.0		0.38	V	
VIH_1V2	Input high level	1.2 V I/O supply	0.8		3.5	V	
VIL_1V8_3V3	Input low level	Pads SCL, SDA,	0.0		0.57	V	
VIH_1V8_3V3	Input high level	[—] 1.8-3.3 V I/O [→] supply	1.19		3.5	V	
Vol	-	2 mA sink	0		0.36	V	
• 01			5		0.00	v	

Symbol	Parameter	Conditions	Min	Тур	Max	Unit	Comment
	Output low level SDA, GPIO0/1, INT	4 mA sink	0		0.6	V	
Idrive_h		1 V applied on GPIO	3.6			mA	
I _{DRIVE_L}		1 V applied on GPIO	3.9			mA	
I ² C interface							
fsclk	SCL clock frequency	,	0	400	1000	kHz	
tbuf	Bus free time betwee START	veen a STOP and 0.5 µs		μs			
thd:sta	Hold time (Repeate	d) start	0.26			μs	
t _{LOW}	LOW period of SCL	clock	0.5			μs	
tнigн	HIGH period of SCL	_ clock	0.26			μs	
tsu:sta	Setup time for a repe	eated START	0.26			μs	
thd:dat	Data hold time		0			μs	
tsu:dat	Data setup time		50			ns	
t _R	Rise time of both SI	DA and SCL	20		120	ns	
tF	Fall time of both SD	A and SCL	20		120	ns	
Optical param	ieters						
Fol/FoV	Field of illumination	/ Field of view		See sect	tion 6.11		

 All current consumption values include silicon process variation. Temperature and voltages are at nominal conditions (23 °C and 2.8 V).

4.1 Algorithm performance parameters

 Table 5: Algorithm performance parameters

Parameter	Cond	ition	Min	Nom	Мах	Units
Timings						
Default data rate	<i>distar</i> range	IIt Mode, 2.5 m range nceEnabled=1, distanceMode=0 (2.5 m), kIters=900 (900 k iterations), CIkDiv2=0 (VCSEL 37.6 MHz)		33		ms
Object detection al	gorithm	n parameters				
Reflectivity of object at 940 nm	Perpe	endicular to TMF8806	18		90	%
	je	350 lux fluorescent light on object, 90% white card, 450k iterations (33ms)		5000(1)		mm
	5 m range	350 lux fluorescent light on object, 18% grey card, 900k iterations (66ms)		3750		mm
		350 lux fluorescent light on object, 18% grey card, 450k iterations (33ms)		3250		mm
Maximum distance	2.5 m range, 33 ms	350 lux fluorescent light on object, 18% grey or 90% white card		2500 ⁽¹⁾		mm
detection, 1.5 m x 1.5 m object,		170 lux halogen light on object ⁽²⁾ , 90% white card		2430(1)		mm
default optical stack		170 lux halogen light on object ⁽²⁾ , 18% grey card		1840		mm
	2.5 m	170 lux halogen light on object ⁽²⁾ , 18% grey card, smudge on glass ⁽³⁾		1500		mm
		830 lux halogen light on object ⁽⁴⁾ , 18% grey card		1170		mm
	Ultra low power operation, 350 lux fluorescent light on object, 10k iterations, 2.5 m range, 18% grey card			665		mm
Minimum distance	Defau	It optical stack configuration		10		mm
detection, 18 % grey card, 20 cm x	Large	airgap optical stack configuration		20		mm
26 cm	Thick	cover glass optical stack configuration		40		mm

Parameter	Cond	ition	Min	Nom	Мах	Units	
		Object distance ≥ 200 mm		±3		%	
	range	50 mm ≤ object distance < 200 mm		±6		mm	
Accuracy, default or large airgap	2.5 m ra	Object distance < 50 mm		+5 -15		mm	
optical stack	5 m range	Object distance ≥ 500 mm		±3		%	
		rang	50 mm ≤ object distance < 500 mm		±15		mm
		Object distance < 50 mm		+5 -20		mm	
Transition short to long distance mode				200		mm	

(1) A target reported above 2500 mm respectively 5000 mm should be considered as no object.

(2) 170 Lux halogen light represents 1k Lux sunlight equivalent: light on object only.

(3) Smudge on glass is defined by one layer of Scotch Magic Tape 810 (very diffuse).

(4) 830 Lux halogen light represents 5 k Lux sunlight equivalent: light on object only.

5 Typical operating characteristics

Following operating characteristics are measured with calibrated devices with full optical stack including glass with >90 % transmissivity. The airgap is set to meet the requirements of the optical design guide. The ambient light is measured on the 2 m x 2 m target. A very diffuse scotch magic tape 810 is used for measurement with smudge.

In the measurements halogen light (HAL) is used to emulate sunlight – the lux levels are provided as figure headings.

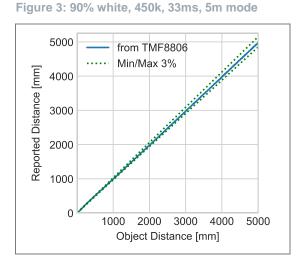
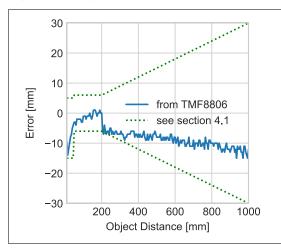


Figure 5: 18% grey, 450k, 33ms, 2.5m mode



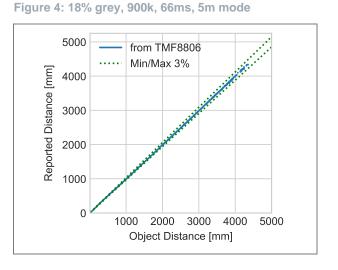
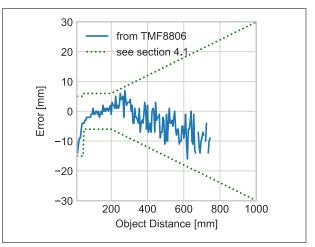


Figure 6: 18% grey, 10k, ultra low power



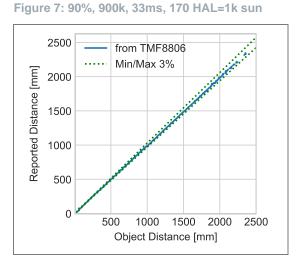


Figure 9: 18%, 900k, 33ms, 1k sun, smudge

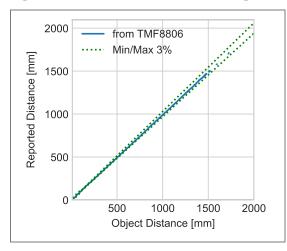


Figure 11: Field of illumination of VCSEL (FOI) x-axis: ±10.4°, y-axis: ±10.31°, 1/e²

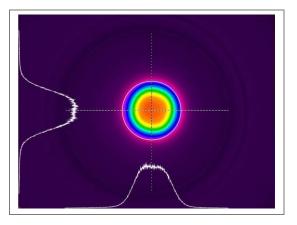


Figure 8: 18%, 900k, 33ms, 170 HAL=1k sun



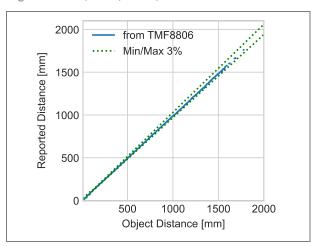


Figure 10: 18%, 900k, optical stack config's

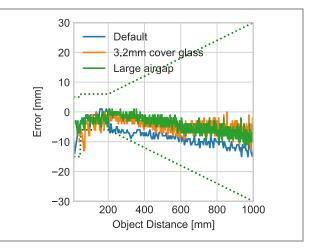


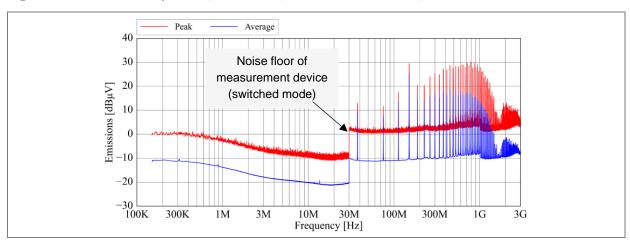


amu osram

Figure 12: EMC emission spectrum, 2.5 m mode, no EMC enhancements, 4000k iterations



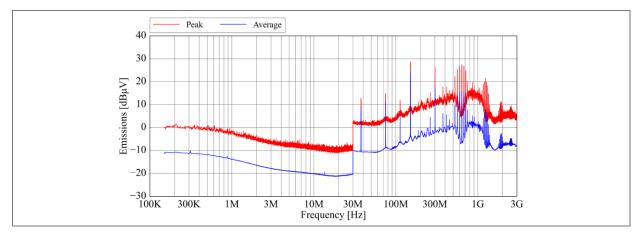



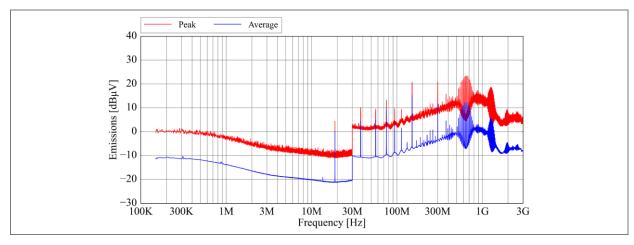

6 Functional description

6.1 Functional working principle

The TMF8806 is a direct time of flight sensor which measures the time between sending a light pulse to the time it is received. The TMF8806 internally generates histograms vs. time for each measurement – this allows the device to measure the ultra-short times needed to get a resolution of 1 mm as 1 mm is only 6.66ps.


There is an internal reference SPAD with associated TDC and histogram. This is used to determine the exact start time of each pulse. The reference SPAD is processed during calibration and in operation of the device. All processing occurs internally inside the device with no user interaction required.

The measurement SPADs are used to capture the measurement histograms; using the different measurement channels, the target distance is calculated, and the best channel is used for the final distance result.

All histograms can be processed inside the TMF8806 and/or readout through the I²C interface. As the readout is constrained by the I²C speed and the I²C bus utilization (TMF8806 can support I²C speed up to 1 MHz), it is recommended to readout the histograms only for debugging purposes.

Figure 15 shows a histogram obtained from TMF8806. The x-axis is scaled in bins, where the nominal bin size is 100 ps per bin and each TDC has 256 bins. The y-axis is scaled in counts represented by 16-bit values. The green line shows the reference histogram from TDC0 and its peak marks the reference or zero distance. The other four lines (blue, cyan, red and violet) are the histograms obtained from TDC1 to TDC4. A target at 20 cm is used to generate the peak around bin 25.


Figure 15: Histogram

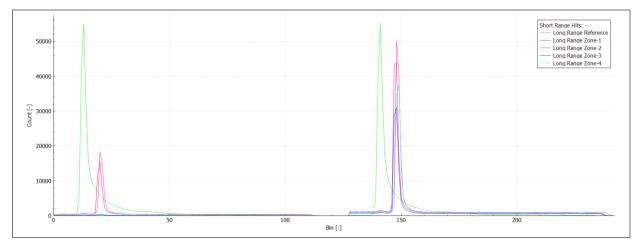

(1) The above histogram is used for general device information only. The actual histogram differs due to the different bin size and modes used.

6.2 Startup of TMF8806

Figure 16: Startup sequence of TMF8806 from power down to application commands accepted

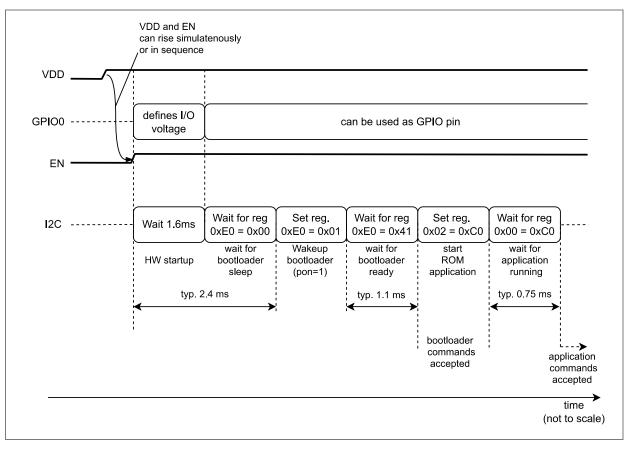

6.2.1 Example for startup and measurement

See below a simple example, assuming existing calibration data is stored in 'calibData' (14 Bytes array) in Python syntax. This example starts the TMF8806, downloads calibration data and starts a continuous measurement. After readout of the first result, it stops the measurement and powers down the TMF8806.

```
enableHigh() # Supply the device, and set pin EN=high
waitMs(1.6) # Wait until I2C is ready
while i2cTxRx(0x41, [0xE0], 1) != [0x00]: continue # Wait for the bootloader sleep
i2cTx(0x41, [0xE0, 0x01]) # Set PON=1
while i2cTxRx(0x41, [0xE0], 1) != [0x41]: continue # Wait for the bootloader ready
i2cTx(0x41, [0x02, 0xC0]) # Start the ROM application
while i2cTxRx(0x41, [0x00], 1) != [0xC0]: continue # Wait for the application
# Enable the INT pin for results
i2cTx(0x41, [0xE2, 0x01])
# Load the factory calibration stored
i2cTx(0x41, [0x20] + calibData)
```

```
# Start the continuous measurement with calibration data
i2cTx(0x41, [0x06, 0x00, 0x00, 0x11, 0x02, 0x00, 0x00, 0x06, 0x1e, 0x84, 0x03, 0x02])
# Wait for the next result
while not isIntPinLow(): continue
# Bulk-read the result including state data
result = i2cTxRx(0x41, [0x1D], 33)
print("The result #", result[3], "distance is: ", result[6] * 256 + result[5], "mm")
i2cTx(0x41, [0xE1, 0x01]) # Clear the interrupt flag
# Stop the periodic measurement
i2cTx(0x41, [0x10, 0xFF])
while i2cTxRx(0x41, [0x10], 2) != [0x00, 0xFF]: continue # Wait for command
i2cTx(0x41, [0xE1, 0x01]) # Clear a pending interrupt flag
enableLow() # Disable the device
```



Attention:


• The above code example is for explanation only. It misses error handling and frequency skew correction, see TMF8806_Host_Driver_Communication_<latest version>.pdf.

6.3 Power modes

The default operating mode of TMF8806 is to continuously capture distance information and provide these results via the I²C interface. For low duty cycle applications, where power consumption is of prime importance the TMF8806 has an ultra-low power operation:


6.3.1 Ultra low-power operation

Figure 17: Ultra low power operation schematic

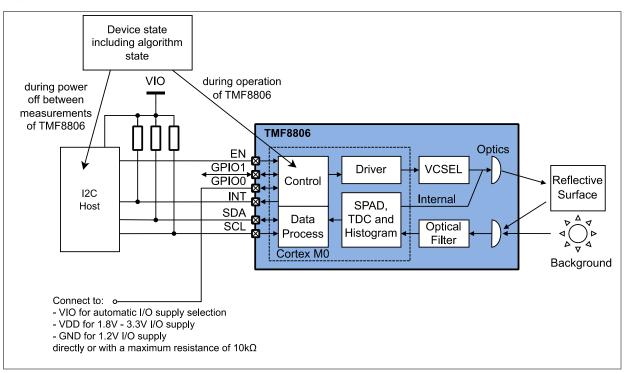

The host control controls the TMF8806 in ultra low power operation via I²C and EN line. It powers down the TMF8806 as long as possible between measurements. See flowchart in Figure 18.



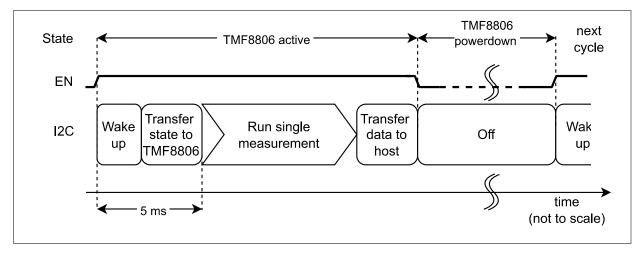

CIMU OSRAM

The ultra-low power operation can be combined with any distance mode from section 6.4.

6.4 Distance modes

Following distance modes can be selected:

- Short range mode with maximum distance 20 cm; especially useful for power savings if an application only needs to detect a close object.
- 2.5m mode = default mode
- 5m mode

Table 6: Distance mode overview

Distance mode	Maximum distance	Configured by	Notes
Short range	200 mm	distanceEnabled=0, vcselClkDiv2=0, distanceMode=0	Use for lowest power
2.5 m mode	2500 mm	<i>distanceEnabled</i> =1, <i>vcselClkDiv2</i> =0 (or 1 if you use spread spectrum), <i>distanceMode</i> =0	Default mode
5 m mode	5000 mm	distanceEnabled=1, vcselClkDiv2=1, distanceMode=1	Needs separate calibration data

Example: If an application only uses 5 m mode, it only needs one calibration data set in this mode.



Attention:

Calibration needs to be done for each of the distance modes used in an application. Only short range and 2.5 m mode can use a common calibration.

6.5 Optical stack configurations

The TMF8806 has three configurations, which support different optical stacks:

Optical stack configurations	Typical optical stack ⁽¹⁾	Minimum distance	Configured by	Notes
Default	0.5 mm airgap 0.55 mm cover glass Rubber boot	10 mm	spadSelect=0	Default setup
Large airgap	2.5 m mode: 1 mm airgap 5 m mode: 0.5 mm airgap 0.5 mm cover glass	20 mm	spadSelect=1	For designs with larger airgap
Thick cover glass	0 mm airgap 3.2 mm cover glass	40 mm	spadSelect=2	For designs with zero airgap and thick cover glass

Table 7: Optical stack configurations overview

(1) These are only examples of optical stack setups. See ams OSRAM optical design guide (ODG) for details. The optical crosstalk shall always be within the allowed range as shown in the ODG.



Attention:

Calibration needs to be done for each of the optical stack configurations used in an application.

6.6 **EMC** performance enhancements

VDDV GNDV **TMF8806** VCSEL ΕN CP Optics GPI01 VCSEL Driver GPIO0 < Control INT SPAD Reflective SDA CP SCL · Surface Internal SPAD, TDC and Data Δ D 4 Optical Histogram Process Filter Background - dd GND VDDC-GNDC-

Figure 19: Blocks with EMC performance enhancements highlighted

TMF8806 internally uses charge pumps (VCSEL CP and SPAD CP) for power management. These blocks are switching capacitors at high frequency to obtain higher voltages and therefore emit EMC noise. To attenuate this effect, the TMF8806 allows to spread this EMC emission much more smoothy over a wider frequency range.


Table 8: Spread spectrum configurations

Spread spectrum configured by	Affected block	Notes
Register SpreadSpectrumSpadChargePump: amplitude: Set to 15 config: Set to 1	SPAD charge pump	No side effects other than reducing EMC noise
Register SpreadSpectrumVcselChargePump amplitude: Set to 15 config: Set to 1	VCSEL charge pump	No side effects other than reducing EMC noise

Spread spectrum configured by	Affected block	Notes	
Register vcselClkSpreadSpecAmplitude Valid range:	VCSEL driver	For 2.5m mode, vcselClkDiv2=1 is recommended, otherwise maximum distance is reduced	
0 = no spread spectrum 13 = amplitude of spread spectrum		For 5m distance mode, maximum distance is reduced.	

6.7 I/O voltage selection

TMF8806 allows to use different I/O voltages. During startup¹ of TMF8806, the device checks the voltage on pin GPIO0 and compares it against $V_{1v2_threshold}$. If the voltage is below the threshold, 1.2 V I/O voltage, otherwise 1.8 V to 3.3 V I/O voltage is used.

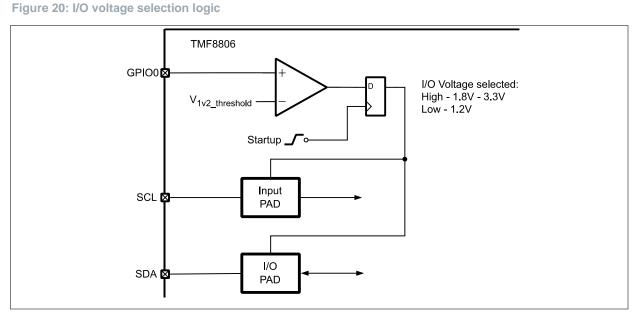

Once the I/O voltage selection is done, the pin GPIO0 can be used as a normal GPIO pin.

¹ Startup happens after the rising edge of EN signal. If EN is connected to VDD, it is the rising edge of VDD.

Information:

A

As I/O voltage selection status is stored inside a memory cell, this information is lost when EN=0 or VDD is powered down and it is performed again on the next startup.

6.8 Ranging acquisition timing

The typical ranging acquisition timing operates according to following timing diagram:

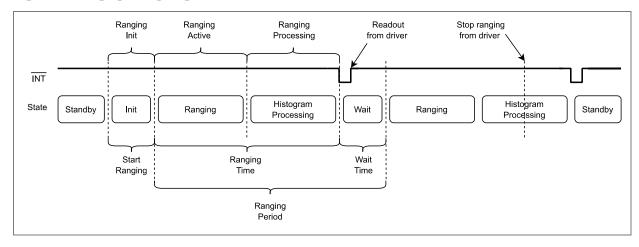


Figure 21: Ranging timing diagram

Ranging period is defined by *repetitionPeriodMs* and the wait time is adjusted accordingly. Ranging active is defined by the number of iterations (register *klters*) configured and the VCSEL clock frequency.

If ranging time gets longer than *repetitionPeriodMs*, wait time is omitted. In this case, ranging period is equal to ranging time and *repetitionPeriodMs* is ignored.

6.9 Algorithm performance

The following section only applies for calibrated devices and in-application oscillator calibration using the reference driver.

The TMF8806 is embedded in the application using a 0.38 mm airgap and a glass with an IR ink with >90 % transmissivity. The glass thickness is 0.5 mm. A rubber boot or additional mask on the opaque ink is implemented according to TMF8806 optical design guide (external document).

6.9.1 Customer factory calibration

To achieve the performance described in the next sections, a calibration of the algorithm needs to be performed (command = 0x0A). The TMF8806 shall be embedded in the final application and the cover glass including the IR ink needs to be assembled. The calibration test shall be done in a housing with minimal ambient light and no target within 40 cm in field of view of the TMF8806.

The TMF8806 shall be configured as it is used in the final application – this applies for distance modes (see section 6.4), optical stack configurations (see section 6.5) and *spadDeadTime* settings. If more than one mode or configuration is used in an application, separate calibration data sets are required.

The TMF8806 generates a calibration data set which shall be permanently stored on the host.

On each power-up of the TMF8806 the calibration data set is sent by I²C to the TMF8806 prior to execution of any algorithms (command=0x02).

6.9.2 Algorithm timings and performance parameters

The TMF8806 can adjust the number of iterations and detection threshold using registers *kiters* and *threshold*. A default mode is defined as having 900 k iterations, 2.5 m maximum distance and *threshold*=0 (internally 6 will be used instead). The different timings are shown in section 4.1 on page 12 and described in section 6.8.

The algorithm reports distance information of the closest object in 1 mm steps.

Using the timings described above, the performance as shown in section 4.1 on page 12 is achieved.

CIMU OSRAM

6.10 VCSEL

Internal protection ensures no single point of failure will cause the VCSEL to violate the Class 1 Laser Safety.

Laser Safety
 VCSEL Pulse Rep Rate
 VCSEL Pulse Rep Rate
 Class 1
 26.6 ns (37.6 MHz)
 If *vcselClkDiv2*=1, the frequency is divided by two to 53.2 ns (18.8 MHz)

6.11 Typical optical characteristics

Table 9: VCSEL field of illumination (FOI)


Definition	VCSEL field of illumination (FOI)
1/e^2	19º
Full width from 5% of maximum up to maximum	21 ⁰
Full width from 1% of maximum up to maximum	25°

Table 10: TOF sensor field of view (FOV)

Optical stack configuration	Short range (<20cm)	Long range
Default	52°	30°
Large airgap or thick cover glass	30°	30°

The SPAD FoV angular response uses the full TMF8806 SPADs only for short distances and default mode. The SPAD FoV is reduced when the TMF8806 operates in any other mode. This helps to improve ambient light tolerance² and allows operating the device with higher amounts of crosstalk.

² It depends on the size and reflectivity of the object if TMF8806 algorithm detects off-axis objects.

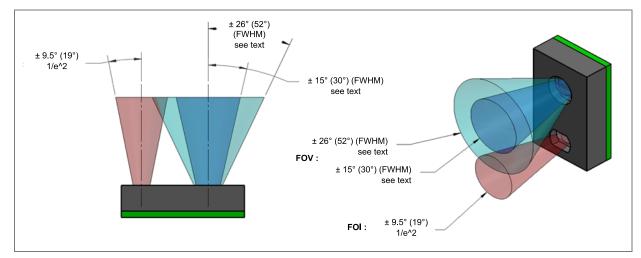

OMUSERAM

Figure 22: FOI/FOV of TMF8806 (used 1/e^2 for FOI as example)

6.11.1 Filter characteristics

•	FWHM	114 nm

- Passband center wavelength 940 nm
- Stopband wavelengths 350 nm 883 nm, 997 nm 1100 nm

6.12 I²C protocol


The TMF8806 is controlled by an I²C bus, one interrupt pin and two GPIO pins.

Additionally see ams OSRAM device driver and/or application note TMF8806_Host_Driver_Communication_*.pdf for a detailed explanation of the I²C communication itself.

The device uses I²C serial communication protocol for communication. The device supports 7- bit chip addressing (default: 0x41) and standard, fast mode and fast mode plus modes. Read and Write transactions comply with the standard set by Philips (now NXP). For a complete description of the I²C protocol, please review the NXP I²C design specification.

CIMU OSRAM

Figure 23: I²C timings

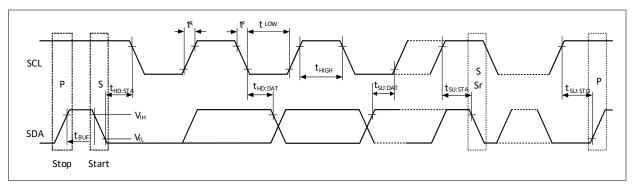

The TMF8806 support following I²C operating modes:

- Standard mode up to 100 kBit/s
- Fast-mode up to 400 kBit/s
- Fast-mode-plus up to 1 MBit/s


Table 11: I²C symbol definition

Symbol	Definition	RW	Note
S	Start condition after stop	R	1-bit
Sr	Repeated start (start condition end without preceding stop condition)	R	1-bit
ADR	Slave address 7 bits = default 0x41	R	Slave address
WA	Word address	R	8-bit
А	Acknowledge	W	1-bit
Ν	No Acknowledge	R	1-bit
Data	Data/write	R or W	8-bit
Data(n)	Data/read	W	8-bit
Р	Stop condition	R	1-bit
WA++	Slave increment word address	R	During acknowledge

Internal to the device, an 8-bit buffer stores the register address location of the byte to read or write. This buffer auto-increments upon each byte transfer and is retained between transaction events (i.e. valid even after the master issues a P (Stop condition) and the I²C bus is released). During consecutive Read transactions, the future/repeated I²C Read transaction may omit the memory address byte normally following the chip address byte; the buffer retains the last register address +1.

CALL OSRAM


A Write transaction consists of an S, ADR, 0 (R/W flag), WA, Data (n), and P. Following each byte (9th clock pulse) the slave places an A or NA (ACK/NACK) on the bus. If NACK is transmitted by the slave, the master may issue a P.

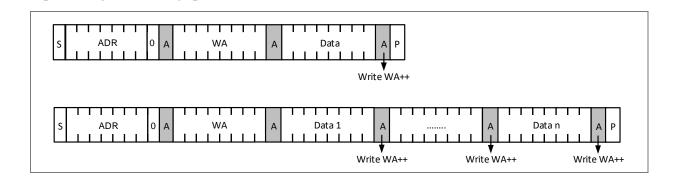

A Read transaction consists of a S, ADR, 0 (R/W flag), WA, Sr, ADR, 1 (R/W flag), Data(n) and P. Following all but the final byte the master places an A (ACK) on the bus (9th clock pulse). Termination of the Read transaction is indicated by an N (NACK) being placed on the bus by the master, followed by STOP.

Figure 25: Random read and sequential read command (example shows 2 bytes)

Figure 24: Byte write and page write commands

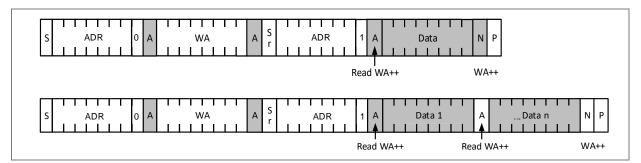

The default I²C address is 0x41. The address can be changed after power-up. Use the enable pin to enable only one device at a time to provide unique device addresses – see section 8.1.1.

The device is I3C tolerant – therefore it can coexist with I3C devices on the same bus. TMF8806 communicates in legacy I²C mode of the I3C bus.

7 Register description

7.1.1 APPID register (Address 0x00)

Table 12: APPID register

Addr: 0	x00	APPIC)	
Field	Name	Rst	Туре	Description
7:0	appid	0	RW	Currently running application: 0xC0 App0 – Measurement application running 0x80 bootloader running

7.1.2 APPREV_MAJOR register (Address 0x01)

Table 13: APPREV_MAJOR register

Addr: 0x01		APPR	EV_MAJO	R
Field	Name	Rst	Туре	Description
7:0	apprevMajor	0	RW	Application major revision

7.1.3 APPREQID register (Address 0x02)

Table 14: APPREQID register

Addr: 0x02		APPR	APPREQID	
Field	Name	Rst	Туре	Description
7:0 aj	appReqid	0	RW	Application that shall be started, set this to 0x80 bootloader
		0		0xC0 App0 – measurement application and wait until register 0x00 (APPID) shows this as application.

7.1.4 ENABLE register (Address 0xE0)

Table 15: ENABLE register

Addr: 0xE0		ENA	BLE	
Field	Name	Rst	Туре	Description
7	cpu_reset	0	RW_SC	Write a '1' here to reset CPU. This generates global reset, fully resetting CPU and all CPU registers. The bit resets itself, no need to explicitly clear it.
6	cpu_ready	0	RO	CPU is ready to handle I ² C - if this bit is zero, then only the registers 0xe0 and above are usable, the memory mapped I ² C space is not used.
0	pon	1	R_PUSH	 1=Activate oscillator; 0=Ask CPU to go to standby Activating the oscillator is implemented in hardware. Whenever this register is '0' and a '1' is being written, the oscillator is being started and CPU receives a PON1 interrupt. It is implemented in the bootloader to execute a reset at this point, but the application goes to an IDLE state. De-activating the oscillator is a software assisted process. It is important that the CPU powers down all modules properly before turning off the oscillator, therefore this is implemented in firmware. So writing a '0' to this register will trigger an internal CPU interrupt. The firmware, after powering down everything, sets the device into standby state.

7.1.5 INT_STATUS register (Address 0xE1)

Table 16: INT_STATUS register

Addr: 0xE1		INT_STATUS				
Field	Name	Rst	Туре	Description		
1 <i>int</i> 2	0	R PUSH1	Raw histogram available interrupt for App0; asserted when a raw histogram can be retrieved from I ² C.			
	II IIZ	0	K_F03III	int2 status . If bit is asserted, and int2_enab is asserted as well, then the INT pin will be pulled low. Writing a '1' here will clear int1 condition.		
0 in			R_PUSH1	Object detection interrupt for App0; asserted when a result from object detection is available.		
	int1	0		int1 status. If bit is asserted, and int1_enab is asserted as well, then the INT pin will be pulled low. Writing a '1' here will clear int1 condition.		
				Note: An interrupt is raised on every result from object detection including no-target unless persistence is set > 0		

7.1.6 INT_ENAB register (Address 0xE2)

Table 17: INT_ENAB register

Addr: 0	Addr: 0xE2		INT_ENAB				
Field	Name	Rst	Туре	Description			
1	int2_enab	0	RW	0=disabled, 1=enabled -> INT output is active if int2 flag is "1".			
0	int1_enab	0	RW	0=disabled, 1=enabled -> INT output is active if int1 flag is "1".			

7.1.7 ID register (Address 0xE3)

Table 18: ID register

Addr:	0xE3	ID		
Field	Name	Rst	Туре	Description
5:0	id	09h	RO	Chip ID, reads 09h – do not rely on register bits 6 and 7 of this register.

7.1.8 REVID register (Address 0xE4)

Table 19: REVID register

Addr: 0xE4		REVID		
Field	Name	Rst	Туре	Description
2:0	rev_id	0	RO	Chip revision ID

CIMU OSRAM

7.2 App0 registers

Following registers are only available if appid=0xC0 (App0):

7.2.1 CMD_DATA9 to 0 registers (Address 0x06-0x0F)

For detailed description about the content of cmd_data9...cmd_data0, see COMMAND register (Address 0x10). All registers are 8 bits wide:

Table 20: CMD_DATA9 to 0 registers

Addr: 0x06-0x0F CMD_DATA9 to 0 registers

				-
Addr	Name	Rst	Туре	Description
0x06	cmd_data9			Command data 9
0x07	cmd_data8			Command data 8
0x08	cmd_data7		W	Command data 7
0x09	cmd_data6	0		Command data 6
0x0A	cmd_data5			Command data 5
0x0B	cmd_data4			Command data 4
0x0C	cmd_data3			Command data 3
0x0D	cmd_data2			Command data 2
0x0E	cmd_data1			Command data 1
0x0F	cmd_data0			Command data 0

7.2.2 COMMAND register (Address 0x10)

Table 21: COMMAND register

Addr: 0x10		COMMAND			
Field	Name	Rst	Туре	Description	
	command	0 F		Command execution control register. Individual commands are described in the following tables.	
7:0			RO	Direct the device to control or select contents of the registers from 0x200xDF	
				Upon successful execution of a command, this register reads back 0x00 and command is copied to register <i>previousCommand</i> .	

Table 22: Command 0x00 – no command

Register 0x10	Command 0x00 – no command
0x00	No command

Table 23: Command 0x02 – start measurement

Register 0x10	Command 0x02 – start measurement							
	Set flag to perform target distance measurement with 10 bytes configuration cmd_data9 to cmd_data0:							
	cmd_data9 = SpreadSpectrumSpadChargePump; default 0.							
	Configuration of EMC enhancement for SPAD charge pump. For allowed settings see section 6.6.							
	Bits	Definition						
	3:0	<i>amplitude</i> : To enable the SPAD charge pump's maximum spread spectrum, set the value to 15. For disabling, set it to 0.						
	5:4	config: Set to 1 to use spread spectrum of SPAD charge pump otherwise set to 0.						
	7:6	Set to '0'						
	cmd_c	data8 = SpreadSpectrumVcselChargePump;						
	Config 6.6.	uration of EMC enhancement for VCSEL charge pump. For allowed settings see section						
	Bits	Definition						
	3:0	<i>amplitude</i> : To enable the VCSEL charge pump's maximum spread spectrum, set the value to 15. For disabling, set it to 0.						
	5:4	config: Set to 1 to use spread spectrum of VCSEL charge pump otherwise set to 0.						
0x02	7:6	Set to '0'						
	cmd_data7 = Bit mask which calibration/state data was downloaded from the host to TMF8806 prior to setting this command:							
	Bits	Definition						
	0	factoryCal: When 1 data from register 0x20 onward includes factory calibration						
	1	<i>algState</i> : If set, also set <i>factoryCal</i> =1. Data from register 0x20 onwards includes factory calibration and algorithm state.						
	2	Set to '0'						
	5:3	<i>spadDeadTime</i> : SPAD recovery time, 0=longest, 7=shortest dead time; if unsure use default=4; shorter SPAD dead time (higher number of the register <i>spadDeadTime</i>) improve sunlight performance but degrade short range accuracy						
	7:6 <i>spadSelect:</i> Optical stack configuration – see section 6.5.							
	cmd_c	data6 = Bit mask which algorithm is used						
	Bits	Definition						
	0 Set to '0'							
	1 <i>distanceEnabled</i> : If '0' only short range mode is operating – see section 6.							

Register 0x10	Comm	nand 0x02 – start measurement
	2	<i>vcselClkDiv2</i> : If set, operates the VCSEL clock at half frequency - see section 6.10 - and doubles the ranging active time where the VCSEL is enabled. It is recommended to use together with EMC performance enhancements see section 6.6.
	3	distanceMode: When 0 measure up to 2.5m. When 1 measure up to 5m.
	4	<i>immediateInterrupt</i> – When 1 target distance measurement will immediately report to the host an interrupt of the capturing caused by a GPIO event; when 0, will only report to the host when target distance measurement was finished
	6-5	Reserved; set to 0.
	7	algKeepReady - When 1 do not go to standby between measurements (faster measurement times but higher current consumption)
	cmd_c	data5 = Bits for GPIO control
	Bits	Definition
		GPIO0 settings – gpio0:
		0 - Disabled
		 Input: Active low disables collection, immediately abandoning current measurement. Returning to high restarts new measurement
		2 - Input: Active high disables collection, immediately abandoning current measurement. Returning to low restarts new measurement
		3 - Output: VCSEL pulse output – see cmd_data4
	3.0	4 - Output low (default after startup)
	3:0	5 - Output high
		6 - Output is high when an object was detected otherwise low
		7 - Output is low when an object was detected otherwise high
		8 - Output is high-Z when an object was detected otherwise low (open drain, low on no-detect)
		Output is low when an object was detected otherwise high-Z (open drain, low on detect)
		1015 - Reserved, do not use
		GPIO1 settings – gpio1:
		0 - Disabled
	7:4	 Input: Active low disables collection, immediately abandoning current measurement. Returning to high restarts new measurement
		2 - Input: Active high disables collection, immediately abandoning current measurement. Returning to low restarts new measurement
		3 - Output: VCSEL pulse output – see cmd_data4
		4 - Output low (default after startup)
		5 - Output high
		6 - Output is high when an object was detected otherwise low
		7 - Output is low when an object was detected otherwise high
		8 - Output is high-Z when an object was detected otherwise low (open drain, low on no-detect)
		9 - Output is low when an object was detected otherwise high-Z (open drain, low on detect)
		1015 - Reserved, do not use

Register 0x10	Command 0x02 – start measurement		
	cmd_data4 - <i>alsDelay100µs</i> - If cmd_data5 enables VCSEL pulse output for GPIO0 and/or GPIO1, cmd_data4 sets its timings as follows:		
	Value	Meaning	
	0	No signal	
	1	GPIOx, rises 0 µs time before VCSEL pulse starts	
	2	GPIOx rises 100 µs before VCSEL pulse	
	3	GPIOx rises 200 µs before VCSEL pulse and so on	
		ling edge of GPIOx happens at the same time the VCSEL stops emitting light.	
	cmd_data3 = Object detection threshold and spread spectrum mode		
	Bits	Definition	
	5:0	threshold - Object detection threshold – use 0 as default value	
	7:6	<i>vcselClkSpreadSpecAmplitude</i> : If set, avoids aliasing of objects into measurement range and improving EMC emission – see section 6.6. Use together with <i>vcselClkDiv2</i> =1 otherwise maximum distance is reduced and false objects at far distance can occur.	
and 0xFF for 2000 m the TMF8806 runs at		lata2 = <i>repetitionPeriodMs</i> in mSec, use 0 for single measurement, 0xFE for 1000 ms FF for 2000 ms; if the repetition period is set lower than the ranging time for this mode, F8806 runs at it maximum possible speed (best effort approach) – see section 6.8.	
	cmd_data1 = <i>klters</i> - Number of iterations, low byte; 1 LSB=1 k		
	<pre>cmd_data0 = klters - Number of iterations, high byte; 1 LSB=1 k*256</pre>		
	Once a measurement is finished, the interrupt is asserted. If <i>int1_enab</i> =1 the pin INT is asserted as well. Additionally, the transaction ID tid is updated.		

Table 24: Command 0x08 – write additional configuration

Register 0x10	Comm	Command 0x08 – write additional configuration		
	Write additional configuration for cmd_data4 = <i>persistence</i> 8-bit value for interrupt suppression			
	Value	Definition		
	0	Any result (detect and no-detect) will trigger an interrupt		
	1-255	An interrupt will only be triggered if the detected		
		distance is >= low_threshold in [mm] and		
0x08		distance <= high_threshold in [mm] and		
		the detection happened at least < persistence> consecutive times		
	cmd_data3 = low_threshold 8-bit LSB value in [mm]			
	<pre>cmd_data2 = low_threshold 8-bit MSB value in [mm] * 256</pre>			
	<pre>cmd_data1 = high_threshold 8-bit LSB value in [mm]</pre>			
	<pre>cmd_data0 = high_threshold 8-bit MSB value in [mm] * 256</pre>			

Table 25: Command 0x09 – read additional configuration

Register 0x10	Command 0x09 – read additional configuration		
0x09	Read additional configuration for application. After the command is executed, <i>persistence</i> , <i>low_threshold</i> and <i>high_threshold</i> are stored		
	in registers 0x20 to 0x24 – see section 7.7 Interrupt suppression registers		

Table 26: Command 0x0A – customer factory calibration

Register 0x10	Command 0x0A – customer factory calibration			
	Customer factory calibration - described in section 6.9.1.			
0x0A	cmd_data9cmd_data0 needs to be configured as with command=0x02 before factory calibration is executed. This is required as calibration is changing depending on configuration like distance modes – see section 6.4.			
	Perform factory calibration in the final customer application including cover glass, no ambient light and no target.			
	The result from the factory calibration is stored from register 0x20 onwards (14 bytes).			

Table 27: Command 0x0F – gpio control

Register 0x10	Command 0x0F – gpio control		
	Set gpio control setting without performing a measurement as commands 0x02 would do: cmd_data0 = Bits for GPIO control		
	Bits	Definition	
	3:0	GPIO0 settings – <i>gpio0</i> : 0 - Disabled	
		 Input: Active low disables collection, immediately abandoning current measurement. Returning to high restarts new measurement. 	
		2 - Input: Active high disables collection, immediately abandoning current measurement. Returning to low restarts new measurement.	
0x0F		3 - Output: VCSEL pulse output – see cmd_data4	
		4 - Output low (default after startup)	
		5 - Output high	
		6 - Output is high when an object was detected otherwise low	
		7 - Output is low when an object was detected otherwise high	
		8 - Output is high-Z when an object was detected otherwise low (open drain, low on no-detect)	
		 9 - Output is low when an object was detected otherwise high-Z (open drain, low on detect) 	
		1015 - Reserved, do not use	

Register 0x10	Command 0x0F – gpio control		
		GPIO1 settings – gpio1:	
		0 - Disabled	
		 Input: Active low disables collection, immediately abandoning current measurement. Returning to high restarts new measurement 	
		2 - Input: Active high disables collection, immediately abandoning current measurement. Returning to low restarts new measurement	
		3 - Output: VCSEL pulse output – see cmd_data4	
	7.4	4 - Output low (default after startup)	
	7:4	5 - Output high	
		6 - Output is high when an object was detected otherwise low	
		7 - Output is low when an object was detected otherwise high	
		8 - Output is high-Z when an object was detected otherwise low (open drain, low on no-detect)	
		 9 - Output is low when an object was detected otherwise high-Z (open drain, low on detect) 	
		1015 - Reserved, do not use	

Table 28: Command 0x30 – enable histogram readout

Register 0x10	Comm	and 0x30 – enable histogram readout	
	calibra readou	e histogram readout; the internal state machine will stop when a histogram (e.g. tion) is available and wait for readout by the host. If the selected histogram is it, the host shall continue the state machine by sending command 0x32.	
	Bits	Definition	
	0	Always set to '0'	
	1	Set to get electrical calibration histograms	
	3:2	Always set to '00'	
	4	Set to get short distance histograms	
0x30	6:5	Always set to '00'	
	7	Set to get distance measurement histograms. Bin 127 respectively bin 255 is used as scaling factor for this type of histograms. The scaling factor is 0 for no scaling, 1 for 2x, 2 for 4x and so on.	
	cmd_data2 = Set to 0x00		
	cmd_data1 = = Bitmask for pileup correct histograms readout:		
	Bits	Definition	
	0	Set to get pileup corrected distance measurement histograms	
	1	Set to get pileup corrected sum histogram	
	7:2	Always set to 0	

Register 0x10	Command 0x30 – enable histogram readout
	cmd_data0 = Set to 0x00
	Once the bitmask is set, the device is programmed to stop when the histogram is available. Set command=0x04 0x03 to perform the measurement.

Table 29: Command 0x32 – continue histogram readout

Register 0x10	Command 0x32 – continue histogram readout
0x32	After the host has readout the histogram, continue with internal processing.

Table 30: Command 0x47 – read out serial number

Register 0x10	Command 0x47 – read out serial number
0x47	Read out serial number – results see section 7.6 Serial number readout

Table 31: Command 0x49 – change the I²C address

Register 0x10	Command 0x49 – change the I ² C address	
	cmd_d	e the I ² C address of TMF8806 lata0 = Condition if I ² C address is changed; program the GPIOs input/output ingly before using this feature (commands 0x02 or 0x0F):
	Bits	Definition
	0	mask_gpio0
	1	mask_gpio1
	2	value_gpio0
0x49	3	value_gpio1
	7:4	always set to 0
	GPIO0	C address change is executed only if (mask_gpio1 & GPIO1) << 1 + (mask_gpio0 &) == value_gpio1 << 1 + value_gpio0 where GPIO1 and GPIO0 is the status on pin and pin GPIO0. If this conditional programming is not used, set cmd_data0 to 0x00.
	cmd_data1 = New I ² C address	
	Bits	Definition
	0	Set to '0'
	7:1	New I ² C address to be used

Table 32: Command 0x80 – read histogram

Register 0x10	Command 0x80 – read histogram
0x80	Start histogram readout; see host communication guide document for details. Notes:
0.00	At the end of this transaction, registers 0x20-0x9F, <i>register_contents</i> and <i>tid</i> will be updated.

Table 33: Command 0xFF – stop command

Register 0x10	Command 0xFF – stop command
0xFF	Stop whatever TMF8806 is doing as soon as possible and reenter the idle state. This command will stop continuous measurement.

7.2.3 PREVIOUS register (Address 0x11)

Table 34: PREVIOUS register

Addr:	Addr: 0x11 PREV		PREVIOUS				
Field	Name	Rst	Туре	Description			
7:0	previousCommand	0	RO	Previous command that was executed or current for measurement command 0x02 and factory calibration command 0x0A.			

7.2.4 APPREV_MINOR register (Address 0x12)

Table 35: APPREV_MINOR register

Addr: 0	: 0x12 APPREV_MINOR		V_MINOR	
Field	Name	Rst	Туре	Description
7:0	appRevMinor	0	RO	Application minor revision

7.2.5 APPREV_PATCH register (Address 0x13)

Table 36: APPREV_PATCH register

Addr: 0	x13	APPRE	V_PATCH	
Field	Name	Rst	Туре	Description
7:0	appRevPatch	0	RO	Application patch number

7.2.6 STATE register (Address 0x1C)

Table 37: STATE register

Addr:	0x1C	STATE			
Field	Name	Rst	Туре	Description	
				State of current operation.	
7:0	state	0	RO	Reading	Meaning
7.0	Sidle	0	RU	2	Error
				Any other value	Ok

7.2.7 STATUS register (Address 0x1D)

Table 38: STATUS register

Addr: (0x1D	STATUS			
Field	Name	Rst	Туре	Description	
				Status or current general operation.	
7.0		0	DO	Reading	Meaning
7:0	status	0	RO	00h-0Fh	ОК
				10h-FFh	Error

7.2.8 REGISTER_CONTENTS register (Address 0x1E)

Table 39: REGISTER_CONTENTS registers

Addr:	Addr: 0x1E		REGISTER_CONTENTS				
Field	Name	Rst	Туре	Descriptio	n		
				Current co as follows:	ntents of the I ² C RAM from 0x20 to 0xDF; the coding is		
				Reading	Meaning		
				0Ah	Calibration data		
				47h	Serial number		
				55h	Results for commands 0x02		
7:0	register_contents	0	RO		Raw histogram data where		
					80h = TDC0, bin 0…63		
					81h = TDC0, bin 64…127		
					82h = TDC0, bin 128195		
				80h-93h	83h = TDC0, bin 196255		
					84h = TDC1, bin 063		
					93h = TDC4, bin 196255		

7.2.9 TID register (Address 0x1F)

Table 40: TID register

Addr: 0	x1F	TID		
Field	Name	Rst	Туре	Description
7:0	tid	0	RO	Unique transaction ID, changes with every update of register map by TOF.

CIMU OSRAM

7.3 Object detection results

Following registers are only available if *appid*=0x55 (Object detection results of *command*=0x02):

7.3.1 RESULT_NUMBER register (Address 0x20)

Table 41: RESULT_NUMBER register

Addr: 0>	20	RESULT_NUMBER		MBER
Field	Name	Rst	Туре	Description
7:0	result_num	0	RO	Result number incremented every time there is a unique answer.

7.3.2 **RESULT_INFO** register (Address 0x21)

Table 42: RESULT_INFO register

Addr: 0x21		RESULT_INFO					
Field	Name	Rst	Туре	Descriptio	n		
					nediateInterrupt == 1 te the status of the measurement:		
				Reading	Meaning		
				0	Short distance capture interrupted, using previous short distance only result		
				1	Short distance capture interrupted, using previous short and long distance result		
7:6	measStatus	0	RO	2	Long distance capture interrupted; result is from short distance algorithm only		
				3	Complete result (short and long distance algorithm)		
				When alglr	mmediateInterrupt == 0		
				Will indicat	te the status of the measurement:		
				Reading	Meaning		
				0	Measurement was not interrupted		
				1	Reserved		
				2	Measurement was interrupted (delay) by GPIO interrupt		

Addr:	0x21	RESULT_INFO			
Field	Name	Rst	Туре	Description	
				3 Reserved	
				Reliability of object - valid range 063 where 63 is best where 0 no object detected	
5:0	reliability	0	RO	1 result from short range algorithm but device was not calibrated10 result from short range algorithm and device is calibratedany other value result from long range algorithm.	

7.3.3 DISTANCE_PEAK_0 register (Address 0x22)

Table 43: DISTANCE_PEAK_0 register

Addr: 0x22		DISTANCE_PEAK_0			
Field	Name	Rst	Туре	Description	
7:0	distance_peak[7:0]	0	RO	Distance to the peak in [mm] of the object, least significant byte	

7.3.4 DISTANCE_PEAK_1 register (Address 0x23)

Table 44: DISTANCE_PEAK_1 register

Addr: 0x23		DISTANCE_PEAK_1		
Field	Name	Rst	Туре	Description
7:0	distance_peak[15:8]	0	RO	Distance to the peak in [mm] of the object, most significant byte

7.3.5 SYS_CLOCK_0 register (Address 0x24)

The sys clock register is a running timer information – this value is counting upwards (and wraps around to 0 again) while the internal clock is running. As it is derived from the internal RC oscillator and distance information depends on its accuracy, it can be used to correct an algorithm result by comparing this clock with a more accurate clock inside the host. It is recommended to use several measurement cycles for this clock correction.

For correctly updating of these registers by TMF8806, an I²C blockread starting from address 0x1D until 0x27 shall be done³.

Table 45: SYS_CLOCK_0 register

Addr: 0x24		SYS_CLOCK_0			
Field	Name	Rst	Туре	Description	
7:0	sys_clock[7:0]	0	RO	System clock/time stamp in units of 0.213 µs = 1 / 4.7 MHz	

7.3.6 SYS_CLOCK_1 register (Address 0x25)

Table 46: SYS_CLOCK_1 register

Addr: 0x25		SYS_CI	OCK_1	
Field	Name	Rst	Туре	Description
7:0	sys_clock[15:8]	0	RO	System clock/time stamp in units of 0.213 μ s = 1 / 4.7 MHz

7.3.7 SYS_CLOCK_2 register (Address 0x26)

Table 47: SYS_CLOCK_2 register

Addr: 0x	Addr: 0x26		OCK_2	
Field	Name	Rst	Туре	Description
7:0	sys_clock[23:16]	0	RO	System clock/time stamp in units of 0.213 μ s = 1 / 4.7 MHz

³ sys_clock is only valid if its LSB bit is one.

7.3.8 SYS_CLOCK_3 register (Address 0x27)

Table 48: SYS_CLOCK_3 register

Addr: 0	x27	SYS_CLOCK_3		
Field	Name	Rst	Туре	Description
7:0	sys_clock[31:24]	0	RO	System clock/time stamp in units of 0.213 μ s = 1 / 4.7 MHz

The algorithm state information is captured in the next registers. To allow resume of operation after power-off, algorithm state can be stored temporarily inside the host and once after power-on of TMF8806 restored to resume operation.

7.3.9 STATE_DATA_0 to 10 registers (Address 0x28-0x32)

Addr: 0x28-0x32		STATE_DATA registers			
Addr	Name	Rst	Туре	Description	
0x28	state_data_0				
0x29	state_data_1				
0x2A	state_data_2				
0x2B	state_data_3				
0x2C	state_data_4			Algorithm state data (11 Bytes) for reading from TMF8806 to host.	
0x2D	state_data_5	0	RO	All registers are 8 bits wide and the content hold the current state of the algorithm. This is required especially for ultra low operation,	
0x2E	state_data_6			where the algorithm state is transferred from TMF8806 to the host before the TMF8806 enters power down – see section 6.3.1.	
0x2F	state_data_7				
0x30	state_data_8	_			
0x31	state_data_9				
0x32	state_data_10	-			

Table 49: STATE_DATA_0 to 10 registers

7.3.10 TEMPERATURE register (Address 0x33)

Table 50: TEMPERATURE register

Addr: 0x33		TEMPE	TEMPERATURE			
Field	Name	Rst	Туре	Description		
7:0	temperature	0	RO	8-bit signed integer of the TMF8806 sensor DIE junction temperature in °Celsius (e.g. "25" means 25 °C)		

Reference hits and object hits are used for information purposes of the target object and are only reported if a target is detected with the distance algorithm.

7.3.11 REFERENCE_HITS_0 register (Address 0x34)

Table 51: REFERENCE_HITS_0 register

Addr: 0x34		REFERENCE_HITS_0		
Field	Name	Rst	Туре	Description
7:0	reference_hits[7:0]	0	RO	Sum of the reference SPADs hits during the distance measurement; zero if no object is detected or distance algorithm is not used

7.3.12 REFERENCE_HITS_1 register (Address 0x35)

Table 52: REFERENCE_HITS_1 register

Addr: 0x35		REFERENCE_HITS_1		
Field	Name	Rst	Туре	Description
7:0	reference_hits[15:8]	0	RO	Sum of the reference SPADs hits during the distance measurement; zero if no object is detected or distance algorithm is not used

7.3.13 **REFERENCE_HITS_2** register (Address 0x36)

Table 53: REFERENCE_HITS_2 register

Addr: 0x36		REFERENCE_HITS_2			
Field	Name	Rst	Туре	Description	
7:0	reference_hits[23:16]	0	RO	Sum of the reference SPADs hits during the distance measurement; zero if no object is detected or distance algorithm is not used	

7.3.14 **REFERENCE_HITS_3** register (Address 0x37)

Table 54: REFERENCE_HITS_3 register

Addr: 0x37		REFERENCE_HITS_3			
Field	Name	Rst	Туре	Description	
7:0	reference_hits[31:24]	0	RO	Sum of the reference SPADs hits during the distance measurement; zero if no object is detected or distance algorithm is not used	

7.3.15 OBJECT_HITS_0 register (Address 0x38)

Table 55: OBJECT_HITS_0 register

Addr: 0	x38	OBJECT_HI		S_0
Field	Name	Rst	Туре	Description
7:0	object_hits[7:0]	0	RO	Sum of the object SPADs hits during the distance measurement; zero if no object is detected or distance algorithm is not used

7.3.16 **OBJECT_HITS_1** register (Address 0x39)

Table 56: OBJECT_HITS_1 register

Addr: 0x39		OBJE	OBJECT_HITS_1		
Field	Name	Rst	Туре	Description	
7:0	object_hits[15:8]	0	RO	Sum of the object SPADs hits during the distance measurement; zero if no object is detected or distance algorithm is not used	

7.3.17 OBJECT_HITS_2 register (Address 0x3A)

Table 57: OBJECT_HITS_2 register

Addr: 0x3A		OBJE	OBJECT_HITS_2		
Field	Name	Rst	Туре	Description	
7:0	object_hits[23:16]	0	RO	Sum of the object SPADs hits during the distance measurement; zero if no object is detected or distance algorithm is not used	

7.3.18 OBJECT_HITS_3 register (Address 0x3B)

Table 58: OBJECT_HITS_3 register

Addr: 0x3B		OBJECT_HITS_3		
Field	Name	Rst	Туре	Description
7:0	object_hits[31:24]	0	RO	Sum of the object SPADs hits during the distance measurement; zero if no object is detected or distance algorithm is not used

7.3.19 XTALK_MSB register (Address 0x3C)

Table 59: XTALK_MSB register

Addr: 0x3C		XTALK	XTALK_MSB		
Field	Name	Rst	Туре	Description	
7:0	xtalk_msb	0	RO	Crosstalk peak value MSB byte; only valid with minimal ambient light and no target within 40 cm in field of view of the TMF8806.	

7.3.20 XTALK_LSB register (Address 0x3D)

Table 60: XTALK_LSB register

Addr: 0x3D		XTALK_LSB		
Field	Name	Rst	Туре	Description
7:0	xtalk_lsb	0	RO	Crosstalk peak value LSB byte; only valid with minimal ambient light and no target within 40 cm in field of view of the TMF8806.

CIMU OSRAM

7.4 Calibration and algorithm state data exchange

These registers shall be pre-loaded by the host before command=0x02 is executed and *factoryCal*=1.

7.4.1 FACTORY_CALIB_0 to 13 registers (Address 0x20-0x2D)

Table 61: FACTORY_CALIB_0 to 13 registers

Addr: 0x20-0x2D FACTORY_CALIB_0 to 13 registers – 14 Bytes, each register is 8 bits wide

Addr	Name	Rst	Туре	Description
0x20	factory_calib_0			Factory calibration data Bits [3:0] are format revision; current revision is 0x2 Bits [7:4] are reserved.
0x21	factory_calib_1			Factory calibration data. Reserved.
0x22	factory_calib_2			Factory calibration data. Reserved.
0x23	factory_calib_3			Factory calibration data.
0x24	factory_calib_4			
0x25	factory_calib_5		RW	
0x26	factory_calib_6	0		
0x27	factory_calib_7			
0x28	factory_calib_8			
0x29	factory_calib_9			
0x2A	factory_calib_10			
0x2B	factory_calib_11			
0x2C	factory_calib_12			
0x2D	factory_calib_13			

7.4.2 STATE_DATA_WR_0 to 10 registers (Address 0x2E-0x38)

If algorithm state data is sent to TMF8806 following registers shall be pre-loaded by the host before command=0x02 is executed and *algState*=1.

	Table 62:	STATE	DATA	WR 0	to 10	registers
--	-----------	-------	------	------	-------	-----------

Addr: 0x2E-0x38		STATE_DATA_WR registers					
Addr	Name	Rst	Туре	Description			
0x2E	state_data_wr_0						
0x2F	state_data_wr_1						
0x30	state_data_wr_2						
0x31	state_data_wr_3			Algorithm state data (11 Bytes) for writing from host to TMF8806			
0x32	state_data_wr_4		RW	All registers are 8 bits wide and their content holds the current state of the algorithm. This is required especially for ultra low power operation, where the algorithm state is transferred from the host to TMF8806 right after startup of TMF8806 – see section 6.3.1.			
0x33	state_data_wr_5	0					
0x34	state_data_wr_6						
0x35	state_data_wr_7						
0x36	state_data_wr_8	-					
0x37	state_data_wr_9	-					
0x38	state_data_wr_10						

7.5 Raw histogram output

Following registers are only available if *register_contents*=0x80...0x93 (raw histogram output):

7.5.1 HISTOGRAM_START register (Address 0x20)

Table 63: HISTOGRAM_START register

Addr: 0x20		HISTOGRAM_START				
Field	Name	Rst	Туре	Description		
7:0	hist_start	0	RW	Quarter of histogram first byte		

...all bytes until...

7.5.2 HISTOGRAM_END register (Address 0x9F)

Table 64: HISTOGRAM_END register

Addr: 0	Addr: 0x9F		HISTOGRAM_END		
Field	Name	Rst	Туре	Description	
7:0	hist_end	0	RW	Quarter of histogram last byte	

7.6 Serial number readout

Following registers are only available if *register_contents=*0x47 (Serial number readout):

7.6.1 SERIAL_NUMBER_0 register (Address 0x28)

Table 65: SERIAL_NUMBER_0 register

Addr: 0x28		SERIAL_NUMBER_0				
Field	Name	Rst	Туре	Description		
7:0	serial_number_0	0	RW	Serial number byte 0		

7.6.2 SERIAL_NUMBER_1 register (Address 0x29)

Table 66: SERIAL_NUMBER_1 register

Addr: 0	Addr: 0x29		SERIAL_NUMBER_1			
Field	Name	Rst	Туре	Description		
7:0	serial_number_1	0	RW	Serial number byte 1		

7.6.3 IDENTIFICATION_NUMBER_0 register (Address 0x2A)

Table 67: IDENTIFICATION_NUMBER_0 register

Addr: 0	Addr: 0x2A		IDENTIFICATION_NUMBER_0		
Field	Name	Rst	Туре	Description	
7:0	identification_number_0	0	RW	Identification number byte 0	

7.6.4 IDENTIFICATION_NUMBER_1 register (Address 0x2B)

Table 68: IDENTIFICATION_NUMBER_1 register

Addr: 0	Addr: 0x2B		IDENTIFICATION_NUMBER_1			
Field	Name	Rst	Туре	Description		
7:0	identification_number_1	0	RW	Identification number byte 1		

The binary concatenated number of serial_number_0: serial_number_1: identification_number_0: identification_number_1 registers result in a unique number.

7.7 Interrupt suppression registers

Following registers are only available as result of command = 0x09.

7.7.1 **PERSISTENCE** register (Address 0x20)

Table 69: PERSISTENCE register

Addr: 0x20 PERSISTENCE							
Field	Name	Rst	Туре	Description			
				Persiste	Persistence 8-bit value for interrupt suppression.		
			Value	Definition			
) RW	0	Any result (detect and no-detect) will trigger an interrupt		
7:0	persistence	0			An interrupt will only be triggered if the detected		
					distance is >= low_threshold and		
				1-255	distance <= high_threshold and		
					the detection happened at least <persistence> consecutive times</persistence>		

7.7.2 LOW_THRESHOLD_LSB register (Address 0x21)

Table 70: LOW_THRESHOLD_LSB register

Addr: 0x21		LOW_	LOW_THRESHOLD_LSB			
Field	Name	Rst	Туре	Description		
7.0	low throughold lob		RW	Interrupt suppression low_threshold LSB Byte – see PERSISTENCE register		
7:0	low_threshold_lsb	0		low_threshold [mm] = low_threshold_LSB + 256 * low_threshold_MSB		

7.7.3 LOW_THRESHOLD_MSB register (Address 0x22)

Table 71: LOW_THRESHOLD_MSB register

Addr: 0x22		LOW_THRESHOLD_MSB		
Field	Name	Rst	Туре	Description
7:0	low threak ald mak	0	RW	Interrupt suppression low_threshold MSB Byte – see PERSISTENCE register
	low_threshold_msb	0		low_threshold [mm] = low_threshold_LSB + 256 * low_threshold_MSB

7.7.4 HIGH_THRESHOLD_LSB register (Address 0x23)

Table 72: HIGH_THRESHOLD_LSB register

Addr: 0x23		HIGH_	HIGH_THRESHOLD_LSB		
Field	Name	Rst	Туре	Description	
7:0	high_threshold_lsb		RW	Interrupt suppression high_threshold LSB Byte – see PERSISTENCE register	
		0		high_threshold [mm]= high_threshold_LSB + 256 * high_threshold_MSB	

7.7.5 HIGH_THRESHOLD_MSB register (Address 0x24)

Table 73: HIGH_THRESHOLD_MSB register

Addr: 0x24		HIGH_	HIGH_THRESHOLD_MSB		
Field	Name	Rst	Туре	Description	
7:0	high_threhold_msb	0	RW	Interrupt suppression high_threshold MSB Byte – see PERSISTENCE register	
		0		high_threshold [mm] = high_threshold_LSB + 256 * high_threshold_MSB	



7.8 Bootloader

As the TMF8806 can be operated directly from the on-chip ROM, only minimal control of the bootloader is required. Starting the application is performed by setting *appReqid*=0xC0, see section 6.2.

Bootloader registers and functions are only available if *appid*=0x80 (Bootloader application id).

7.8.1 Bootloader registers

7.8.1.1 BL_CMD_STAT (Address 0x08)

Table 74: BL_CMD_STAT register

Addr: 0x08		BL_C	BL_CMD_STAT		
Field	Name	Rst	Туре	Description	
7:0	bl_cmd_stat	0	RW	Write: Bootloader Command – see section Bootloader commands Read: Bootloader Status – anything else than 0x00 means an error	

7.8.1.2 BL_SIZE (Address 0x09)

Table 75: BL_SIZE register

Addr: 0	Addr: 0x09		E	
Field	Name	Rst	Туре	Description
6:0	bl_size	0	RW	Data size in bytes

7.8.1.3 BL_DATA (Address 0x0A-0x89)

Table 76: BL_DATA register

Addr: 0	Addr: 0x0A-0x89		BL_DATA	
Field	Name	Rst	Туре	Description
7:0	bl_data0 bl_data127	0	RW	Up to 128 data bytes for bootloader commands

7.8.1.4 BL_CSUM

Table 77: BL_CSUM register

Addr: After payload BL_CSUM		CSUM		
Field	Name	Rst	Туре	Description
7:0	bl_csum	0	RW	Checksum for Sum (Command + Data Size + Data itself) XOR 0xFF

7.8.2 Bootloader commands

The following commands (bl_cmd_stat) are supported by the bootloader:

Table 78: Bootloader commands

Command	Value	Meaning
RAMREMAP_RESET	0x11	Remap RAM to Address 0 and Reset
DOWNLOAD_INIT	0x14	Initialize for RAM download from host to TMF8806
W_RAM	0x41	Write RAM Region (Plain = not encoded into e.g. Intel Hex Records)
ADDR_RAM	0x43	Set the read/write RAM pointer to a given address



RAMREMAP_RESET = execute program downloaded to RAM

This command remaps the RAM to address 0 and performs a System reset.

Command is performed immediately without any delay.

After this the application that is in RAM will be running. If there is no valid application, you will need to do a HW reset (toggle enable pin or power cycle).

Table 79: RAMREMAP_RESET

Address	Value	Meaning
BL_CMD_STAT	0x11	REMAP RAM to 0 and reset
BL_SIZE	0	No parameters
BL_CSUM	0xEE	

DOWNLOAD_INIT

This command is used to initialize the download.

Table 80: DOWNLOAD_INIT

Address	Value	Meaning
BL_CMD_STAT	0x14	Initialize TMF8806 for download from host to TMF8806 RAM
BL_SIZE	1	
BL_DATA0	00xFF	Seed
BL_CSUM	00xFF	

W_RAM

This command writes the given data to a defined RAM region. Note that the RAM pointer has first to be set by the command ADDR_RAM. After the command is successfully executed the RAM pointer will point to the first byte after the written region.

Table 81: W_RAM

Address	Value	Meaning
BL_CMD_STAT	0x41	Write to main RAM
BL_SIZE	00x80	Number of bytes to be written
BL_DATA0	00xFF	1 st byte to be written
BL_DATA1	00xFF	2 nd byte to be written

Address	Value	Meaning
BL_DATA127	00xFF	128 th byte to be written (only if size was 0x80).
BL_CSUM	00xFF	The CSUM comes immediately after the data.

ADDR_RAM

This command is to specify the RAM pointer location for the next R_RAM or W_RAM command.

Table 82: ADDR_RAM

Value	Meaning
0x43	Specify the address of the next RAM read or write
2	
00xFF	LSB of address in RAM
00xFF	MSB of address in RAM
00xFF	
	0x43 2 00xFF 00xFF

8 Application information

8.1 Schematic

The TMF8806 needs only 3 small 0402 external capacitors for operation:

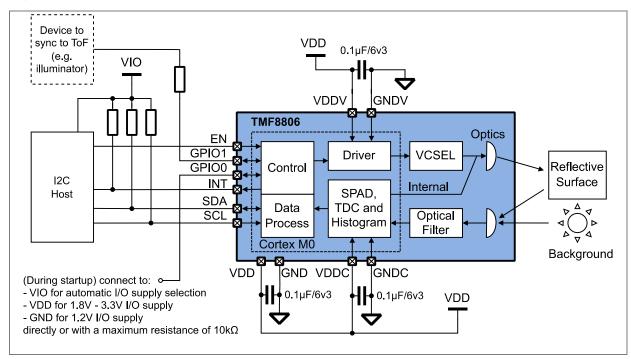


Figure 26: TMF8806 application schematic

The SYNC signal connected to GPIO1 can be used to immediately interrupt the TMF8806 VCSEL operation if the high power illuminator is operating. It needs to be ensured that SYNC does not exceed the VDD supply of TMF8806 as otherwise an internal protection diode will start conducting. The VCSEL operation is controlled by setting cmd_data5 of command=0x02 according (see App0 registers). On SYNC assertion, the VCSEL is immediately switched off (typically after 10 μ s), on SYNC de-assertion the VCSEL operation is resumed within >100 μ s.


GPIO0 is used at startup for selection of the I/O supply, see section 6.7. After startup, it can be used as a general GPIO output signal.

The signals INT/SDA/SCL need an external pull-up resistor to the VIO supply (typically 1.8 V).

8.1.1 Operating several TMF8806 on a single I²C bus

Several TMF8806 devices can share a single I²C bus if there are dedicated enable (EN) connections to each of these devices.

Figure 27: Sharing a single I²C bus for operating several TMF8806's

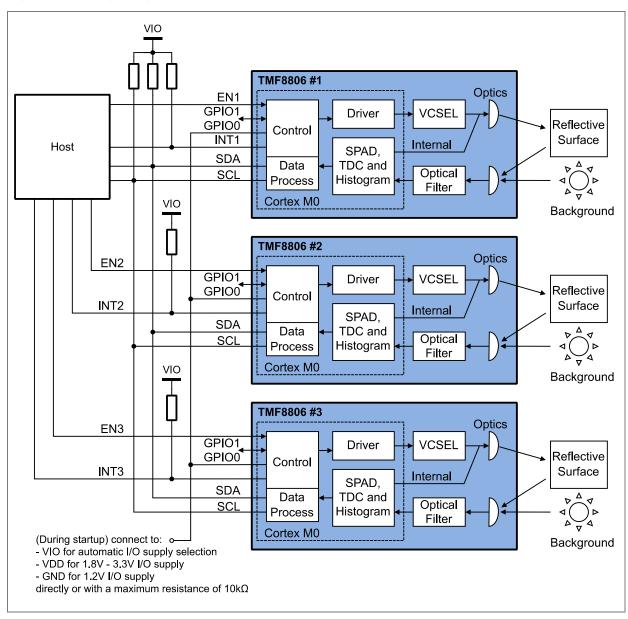

CALL OSRAM

The procedure to initialize the devices to different I²C addresses is as follows:

- 1. Set EN1=0, EN2=0, EN3=0 (reset all devices)
- 2. Set EN1=1
- 3. Startup first TMF8806
- Reprogram I²C address for first TMF8806 using command=0x49 where cmd_data0=0 and cmd_data1=I²C address for first TMF8806
- 5. Set EN2=1
- 6. Startup second TMF8806
- Reprogram I²C address for second TMF8806 using command=0x49 where cmd_data0=0 and cmd_data1=I²C address for second TMF8806
- 8. Set EN3=1
- 9. Startup third TMF8806
- 10. Reprogram I²C address for third TMF8806 using command=0x49 where cmd_data0=0 and cmd_data1=I²C address for third TMF8806
- 11. If there are further devices, repeat the last three steps accordingly.




Information:

• With setting of EN=0, the programmed I²C address returns to the default address. If the ultra low power mode (see section 6.3.1) is used together with the I²C address change, it needs to be done after every EN=0.

CIMU OSRAM

8.2 PCB layout

Figure 28: PCB layout recommendation

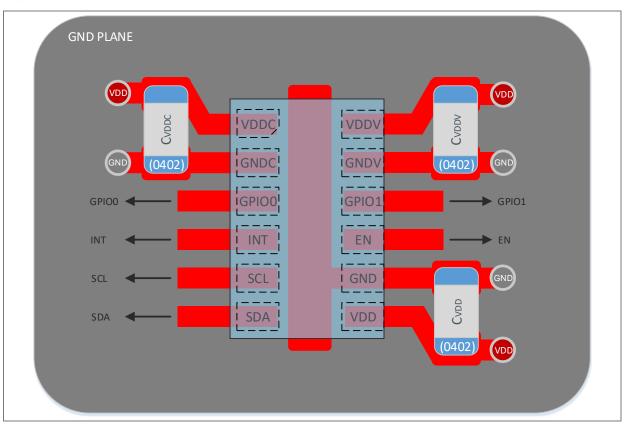


Use GRM155R70J104KA01 (0402 X7R 0.1 μ F 6.3 V) or capacitors with same or better performance for CVDDC, CVDD and CVDDV.

CIMU OSRAM

8.3 PCB pad layout

Figure 29: PCB pad layout

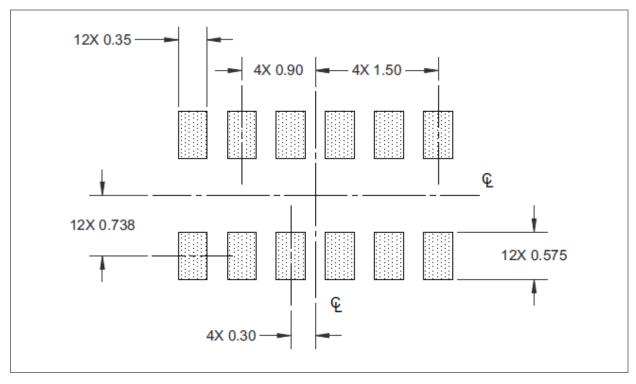

(1) All linear dimensions are in millimeters.

(2) Dimension tolerances are 0.05 mm unless otherwise noted.

(3) This drawing is subject to change without notice.

Use the PCB pad layout as a recommendation only. The actual pad layout shall be optimized for the customer production line.

8.4 Calibration

To meet the distance accuracy, each TMF8806 shall run a calibration procedure in a customer final test with the cover glass attached, see section 6.9.1. The crosstalk needs to meet the requirements defined by the ams OSRAM optical design guide (ODG) available on the ams-osram.com website:

Optical design guide

The calibration data set shall be stored on the host and downloaded to the TMF8806 on every startup, see section 6.2.1.

CIMUI OSRAM

8.5 Software drivers

ams OSRAM recommends using one of the available software drivers to operate the TMF8806. The drivers are available from the ams-osram.com website and github.com/ams OSRAM Group:

ams-osram.com/tmf8806


The following drivers are available:

Table 83: Software drivers

Туре	File	Explanation
	TMF8806_Driver_Arduino_Source_v*.zip	C source code driver intended to be easy portable to any other platform.
Arduino	github.com/ams-OSRAM- Group/tmf8806_driver_arduino	This is the driver used for the TMF8806 shield EVM TMF8806_EVM_EB_SHIELD board if piggy-packed on an Arduino Uno (not included).
		Python driver.
Python	TMF8806_Driver_Python_Source_v*.zip github.com/ams-OSRAM- Group/tmf8806_driver_python	This is the driver used for the TMF8806 shield EVM TMF8806_EVM_EB_SHIELD board if directly connected to the PC through its FTDI interface chip. The FTDI chip is included with the TMF8806 shield EVM board.
Linux	TMF8806_Driver_Linux_v*.zip and TMF8806_Driver_Linux_Source_v*.zip	Use for any Linux system (e.g. Android) where the driver is running on the application processor.
LINUX	github.com/ams-OSRAM- Group/tmf8806_driver_linux	This is the driver running on TMF8806 demo kit - TMF8806_EVM_DB_DEMO.

9 Package drawings & markings


Figure 30: OLGA12 package outline drawing

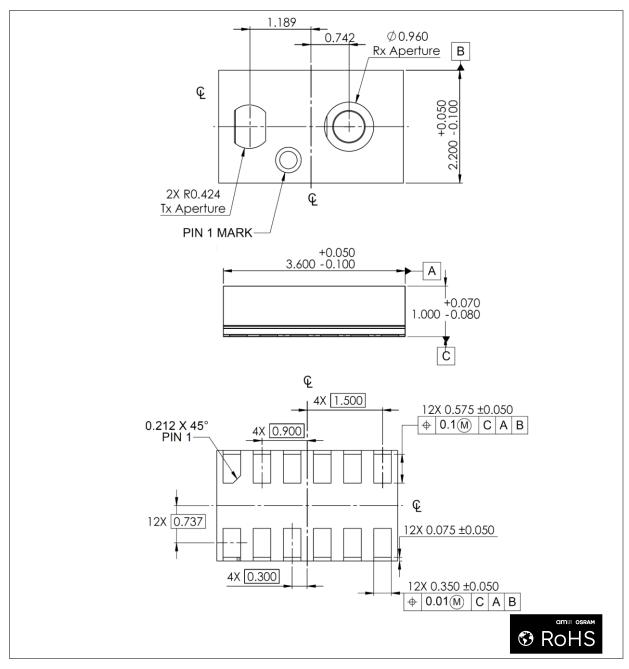

- (1) All dimensions are in millimeters. Angles in degrees.
- (2) Dimensioning and tolerancing conform to ASME Y14.5M-1994.
- (3) This package contains no lead (Pb).
- (4) This drawing is subject to change without notice.
- (5) 8-digit tracecode only on bottom side of the package.

10 Tape & reel information

Figure 31: Tape and reel drawing

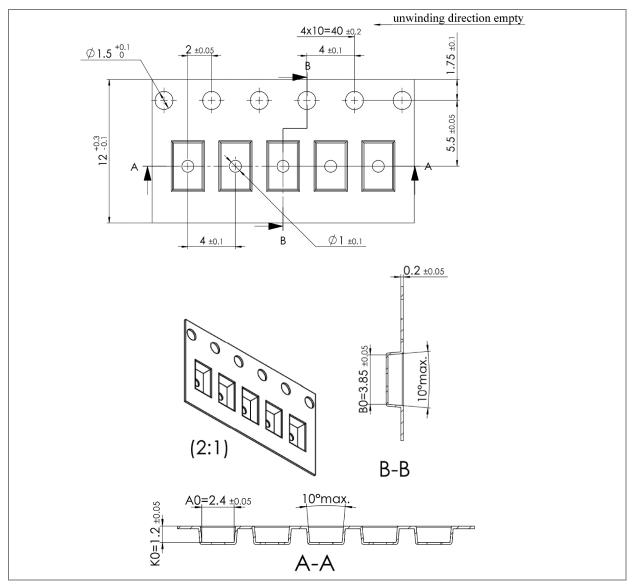

- (1) All linear dimensions are in millimeters. Dimension tolerance is ± 0.10 mm unless otherwise noted.
- (2) The dimensions on this drawing are for illustrative purposes only. The dimensions of an actual carrier may vary slightly.
- (3) Symbols on drawing A0, B0, and K0 are defined in ANSI EIA Standard 481-B 2001.
- (4) There are two reel sizes available (see section Ordering information).
 i) 7" reels: Each reel is 7 inch in diameter and contains 500 parts.
 ii) 13" reels: Each reel is 13 inch in diameter and contains 5000 parts.
- (5) ams OSRAM packaging tape and reel conform to the requirements of EIA Standard 481-B.
- (6) In accordance with EIA standard, device pin 1 is located next to sprocket holes in the tape.
- (7) This drawing is subject to change without notice.

CALL OSRAM

11 Soldering & storage information

11.1 Soldering information

The package has been tested and has demonstrated the ability to be reflow soldered to a PCB substrate. The process, equipment, and materials used in these tests are detailed below.

The solder reflow profile describes the expected maximum heat exposure of components during the solder reflow process of product on a PCB. Temperature is measured on top of component. The components should be limited to a maximum of three passes through this solder reflow profile.

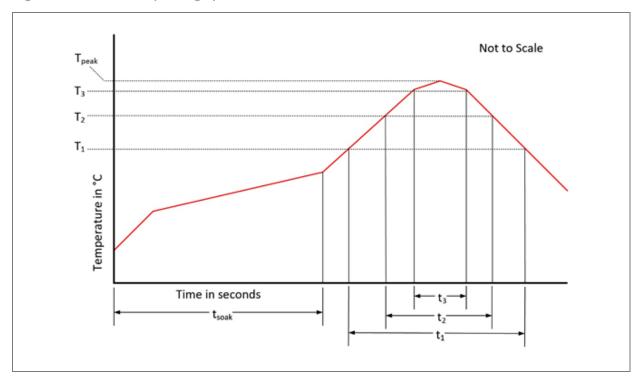




Table 84: Solder reflow profile

Parameter	Reference	Device
Average temperature gradient in preheating		2.5 °C/s
Soak time	t _{soak}	2 to 3 minutes
Time above 217 °C (T1)	t ₁	Max 60 s

Parameter	Reference	Device
Time above 230 °C (T2)	t ₂	Max 50 s
Time above T _{peak} – 10 °C (T3)	t ₃	Max 10 s
Peak temperature in reflow	T _{peak}	260 °C
Temperature gradient in cooling		Max -5 °C/s

11.2 Storage information

Moisture sensitivity

Optical characteristics of the device can be adversely affected during the soldering process by the release and vaporization of moisture that has been previously absorbed into the package.

To ensure the package contains the smallest amount of absorbed moisture possible, each device is baked prior to being dry packed for shipping. Devices are dry packed in a sealed aluminized envelope called a moisture-barrier bag with silica gel to protect them from ambient moisture during shipping, handling, and storage before use.

Shelf life

The calculated shelf life of the device in an unopened moisture barrier bag is 24 months from the date code on the bag when stored under the following conditions:

- Shelf Life: 24 months
- Ambient Temperature: <40 °C
- Relative Humidity: <90 %

Rebaking of the devices will be required if the devices exceed the 24 months shelf life or the Humidity Indicator Card shows that the devices were exposed to conditions beyond the allowable moisture region.

Floor life

The module has been assigned a moisture sensitivity level of MSL 3. As a result, the floor life of devices removed from the moisture barrier bag is 168 hours from the time the bag was opened, provided that the devices are stored under the following conditions:

- Floor Life: 168 hours
- Ambient Temperature: <30°C
- Relative Humidity: <60 %

CALL OSRAM

If the floor life or the temperature/humidity conditions have been exceeded, the devices must be rebaked prior to solder reflow or dry packing.

Rebaking instructions

When the shelf life or floor life limits have been exceeded, rebake at 50 °C for 12 hours.

12 Laser eye safety

The TMF8806 is designed to meet the Class 1 laser safety limits including single faults in compliance with IEC / EN 60825-1:2014 and EN 60825-1:2014/A11:2021. This applies to the stand-alone device and the included software supplied by ams OSRAM. In an end application system environment, the system may need to be tested to ensure it remains compliant. The system must not include any additional lens to concentrate the laser light or parameters set outside of the recommended operating conditions. Use outside of the recommended condition or any physical modification to the module during development could result in hazardous levels of radiation exposure.

Figure 33: Laser eye safety certificate



Complies with 21 CFR 1040.10 and 1040.11 except for conformance with IEC 60825-1 Ed. 3., as described in Laser Notice No. 56, dated May 8, 2019.



CAUTION:

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Example: Adding a converging lens on top of the TMF8806.

13 Revision information

Document status	Product status	Definition
Product Preview	Pre-development	Information in this datasheet is based on product ideas in the planning phase of development. All specifications are design goals without any warranty and are subject to change without notice
Preliminary Datasheet	Pre-production	Information in this datasheet is based on products in the design, validation or qualification phase of development. The performance and parameters shown in this document are preliminary without any warranty and are subject to change without notice
Datasheet	Production	Information in this datasheet is based on products in ramp-up to full production or full production which conform to specifications in accordance with the terms of ams-OSRAM AG standard warranty as given in the General Terms of Trade

Other definitions

Draft / Preliminary:

The draft / preliminary status of a document indicates that the content is still under internal review and subject to change without notice. ams-OSRAM AG does not give any warranties as to the accuracy or completeness of information included in a draft / preliminary version of a document and shall have no liability for the consequences of use of such information.

Short datasheet:

A short datasheet is intended for quick reference only, it is an extract from a full datasheet with the same product number(s) and title. For detailed and full information always see the relevant full datasheet. In case of any inconsistency or conflict with the short datasheet, the full datasheet shall prevail.

Changes from previous released version to current revision v2-00	Page
Clarified GPIO0 pin connection in pinlist	6
Corrected order codes	7
Updated Iranging_avg	9
Added allowed iteration range	10
Added typical optical stack configurations	23
Updated command 0x80	41
Package tracecode is 8 digits	68
Updated links to software drivers	75
Update package drawing tolerances	78

Page and figure numbers for the previous version may differ from page and figure numbers in the current revision.

• Correction of typographical errors is not explicitly mentioned.

14 Legal information

Copyright & disclaimer

Copyright ams-OSRAM AG, Tobelbader Strasse 30, 8141 Premstaetten, Austria-Europe. Trademarks Registered. All rights reserved. The material herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner.

Devices sold by ams-OSRAM AG are covered by the warranty and patent indemnification provisions appearing in its General Terms of Trade. ams-OSRAM AG makes no warranty, express, statutory, implied, or by description regarding the information set forth herein. ams-OSRAM AG reserves the right to change specifications and prices at any time and without notice. Therefore, prior to designing this product into a system, it is necessary to check with ams-OSRAM AG for current information. This product is intended for use in commercial applications. Applications requiring extended temperature range, unusual environmental requirements, or high reliability applications, such as military, medical life-support or life-sustaining equipment are specifically not recommended without additional processing by ams-OSRAM AG for each application. This product is provided by ams-OSRAM AG "AS IS" and any express or implied warranties, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose are disclaimed.

ams-OSRAM AG shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interruption of business or indirect, special, incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of ams-OSRAM AG rendering of technical or other services.

Product and functional safety devices/applications or medical devices/applications:

ams-OSRAM AG components are not developed, constructed or tested for the application as safety relevant component or for the application in medical devices. ams-OSRAM AG products are not qualified at module and system level for such application.

In case buyer – or customer supplied by buyer – considers using ams-OSRAM AG components in product safety devices/applications or medical devices/applications, buyer and/or customer has to inform the local sales partner of ams-OSRAM AG immediately and ams-OSRAM AG and buyer and /or customer will analyze and coordinate the customer-specific request between ams-OSRAM AG and buyer and/or customer.

ams OSRAM semiconductor RoHS compliance statement

RoHS compliant: The term RoHS compliant means that ams-OSRAM AG semiconductor products fully comply with current RoHS directives. Our semiconductor products do not contain any chemicals for all 6 substance categories plus additional 4 substance categories (per amendment EU 2015/863), including the requirement that lead not exceed 0.1% by weight in homogeneous materials.

Important information: The information provided in this statement represents ams-OSRAM AG knowledge and belief as of the date that it is provided. ams-OSRAM AG bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. ams-OSRAM AG has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. ams-OSRAM AG and ams-OSRAM AG suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

Headquarters	Please visit our website at ams-osram.com
ams-OSRAM AG	For information about our products go to Products
Tobelbader Strasse 30	For technical support use our Technical Support Form
8141 Premstaetten	For feedback about this document use Document Feedback
Austria, Europe	For sales offices and branches go to Sales Offices / Branches
Tel: +43 (0) 3136 500 0	For distributors and sales representatives go to Channel Partners