

# Multi-channel High Definition Audio CODEC

# DESCRIPTION

The WM8860 is a high performance multi-channel audio CODEC designed for high performance portable PC audio systems. The device offers full compatibility with the Intel High Definition Audio (HDA) specification revision 1.0, allowing seamless integration with industry-standard HDA controllers.

The WM8860 has two high performance stereo DACs to enable four channels of high definition audio. A high-performance ground-referenced stereo headphone amplifier utilises advanced charge pump and DC servo technology to minimise system cost and space without compromise on audio quality. A balanced line output, which can provide a differential connection to an external speaker amplifier, is also provided and enables common mode noise rejection when these traces are routed across a PCB.

The WM8860 also has two high performance stereo ADCs to provide Hi-Fi quality analogue line-in and microphone input digitisation. A low noise microphone bias with programmable output voltage is provided. Additionally, the CODEC contains a digital microphone interface capable of supporting up to four independent digital microphones. One differential stereo input is provided for line level signals, while one pseudo-differential stereo input with integrated microphone preamplifier is provided.

The WM8860 also contains a S/PDIF transmitter which is fully compatible with IEC-60958-3. Two dedicated GPIO pins are provided, enabling control of external amplifiers or other additional system components.

The WM8860 is supplied in a small 48-pin QFN package.

# **FEATURES**

- Multi-channel High Definition Audio CODEC
- Fully compatible with Intel High Definition Audio Revision 1.0
- 4-Channel DAC, 4-channel ADC
- DAC sampling frequency 8kHz 192kHz
- ADC sampling frequency 8kHz 96kHz
- DAC Performance:
  - SNR 108dB ('A' weighted)
  - SNR 105dB (non weighted)
  - THD -96dB (at 0dBFS)
- ADC Performance:
  - SNR 105dB ('A' weighted)
  - SNR 102dB (non weighted)
  - THD -95dB (at -1dBFS)
- · Ground-referenced stereo headphone driver
- Differential line inputs/outputs
- Stereo microphone interface with integrated pre-amp
- Multi-channel digital microphone interface
- IEC-60958-3 compatible S/PDIF transmitter
- Jack detect and load impedance sensing
- · Beep generator
- GPIO functionality
- IEEE-754 Single precision 32-bit floating point support
- Power supplies

Digital core: 1.62V - 1.98V
 Digital buffer: 2.97V - 3.63V
 Analogue: 4.5V - 5.25V
 Charge pump: 4.5V - 5.25V


• 48-pin 7mm x 7mm QFN package

#### **APPLICATIONS**

- High performance PC audio
- All-in-one desktop PC
- Notebook PC



# **BLOCK DIAGRAM**

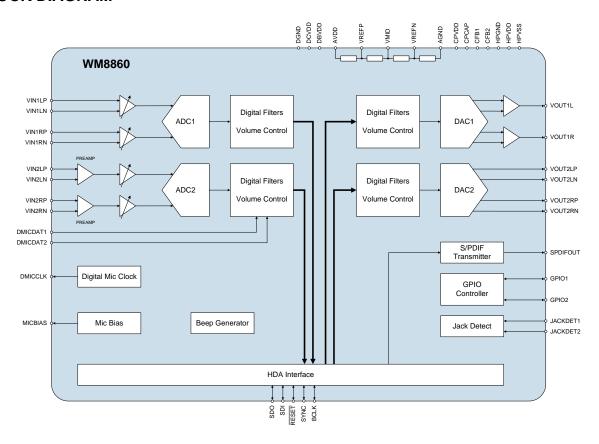



# **TABLE OF CONTENTS**

DESCRIPTION	1
FEATURES	
APPLICATIONS	1
BLOCK DIAGRAM	
TABLE OF CONTENTS	
PIN CONFIGURATION	
ORDERING INFORMATION	
PIN DESCRIPTION	_
ABSOLUTE MAXIMUM RATINGS	
	_
RECOMMENDED OPERATING CONDITIONS	
THERMAL PERFORMANCE	
ELECTRICAL CHARACTERISTICS	
TERMINOLOGY	
TYPICAL POWER CONSUMPTION	
SIGNAL TIMING REQUIREMENTS	
INTERNAL POWER ON RESET CIRCUIT	26
INTRODUCTION	27
CIRRUS LOGIC INTERPRETATION OF HDA SPECIFICATION	
DOLBY AC3 (IEC-61937)	
FLOAT32	
AUDIO WIDGETS CAPABILITIES PARAMETER: DIGITAL	28
LATENCY	28
POWER STATES	
STREAM START/STOP	
SDI STREAM ORDER	
BANDWIDTH CONFLICTS	
SOFTWARE FORMATTED (RAW) S/PDIF	
S/PDIF TX VALIDITY FLAG	
CHANNEL NUMBERING	
ILLEGAL REGISTER VALUESRESPONSE FIELD	
CHIP HIERARCHY	
WIDGET DIAGRAM	
NODE LIST	
NODE/VERB SUMMARY	
DEVICE DESCRIPTION	_
STEREO ANALOGUE LINE RECORD	
PORT-E (NID = 0CH)	
PGA1 (NID = 0AH)	
ADC1 (NID = 02H)	
STEREO ANALOGUE MICROPHONE RECORD	
PORT-B (NID = 0DH)	41
PGA2 (NID = 0BH)	
MIC1 MUX (NID = 09H)	44
MIC1 (NID = 03H)	
DIGITAL MICROPHONE RECORD	
PORT-D (NID = 0EH)	
PORT-H (NID = 16H)	
MIC2 (NID = 15H)	48



DIGITAL MICROPHONE INTERFACE CLOCK RATES	48
STEREO HEADPHONE PLAYBACK	49
DAC1 (NID = 06H)	49
PORT-A (NID = 11H)	
STEREÒ LINE PLAYBACK	
DAC2 (NID = 07H)	
PORT-G (NID = 12H)	
S/PDIF TRANSMIT	
S/PDIF TX 1 (NID = 04H)	
S/PDIF OUT (NID = 0FH)	
ANCILLARY FUNCTIONS	
BEEP (NID = 14H)	
AUDIO FUNCTION GROUP (NID = 01H)	
UNSOLICITED RESPONSES	
GENERATING UNSOLICITED RESPONSES	
PRIORITY QUEUING	
IN-QUEUE-UPDATE	
UNSOLICITED RESPONSE TYPES	
SF = UNSOLICITED RESPONSE STATUS FLAG	
UF = UNSOLICITED RESPONSE UPDATE FLAG	
EF = UNSOLICITED RESPONSE EVENT FLAG	
UNSOLICITED RESPONSE DEFINITIONS	
DETAILED VERB DESCRIPTIONS	
ROOT NODE (NID = 00H)	
AUDIO FUNCTION GROUP (NID = 01H)	
FUNCTION RESET VERB	
GET PARAMETER VERB	
POWER STATE VERB	
UNSOLICITED RESPONSE VERB	
GPIO DATA VERB	
GPIO ENABLE MASK VERB	
GPIO DIRECTION VERB	
GPIO WAKE ENABLE MASK VERB	
GPIO UNSOLICITED ENABLE MASK VERB	
GPIO STICKY MASK VERB	
IMPLEMENTATION ID / SUBSYSTEM ID VERB	
VMID CONTROL VERB (VENDOR SPECIFIC)	
GPIO AUTOMATIC CONTROL VERB (VENDOR-SPECIFIC)	
UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)	
ADC1 AUDIO INPUT CONVERTER WIDGET (NID = 02H)	
STREAM FORMAT VERB	
GET PARAMETER VERB	
GET CONNECTION LIST ENTRY VERB	
PROCESSING STATE VERB	
POWER STATE VERB	
CONVERTER STREAM, CHANNEL VERB	
UNSOLICITED RESPONSE VERB	
UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)	
CHANNEL COPY VERB (VENDOR-SPECIFIC)	
MIC1 AUDIO INPUT CONVERTER WIDGET (NID = 03H)	
STREAM FORMAT VERB	
GET PARAMETER VERB	
GET CONNECTION LIST ENTRY VERB	
PROCESSING STATE VERB	88



POWER STATE VERB	
CONVERTER STREAM, CHANNEL VERB	88
UNSOLICITED RESPONSE VERB	
UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)	
CHANNEL COPY VERB (VENDOR-SPECIFIC)	89
S/PDIF TX 1 AUDIO OUTPUT CONVERTER WIDGET (NID = 04H)	
STREAM FORMAT VERB	91
GET PARAMETER VERB	
CONVERTER STREAM, CHANNEL VERB	94
UNSOLICITED RESPONSE VERB	94
S/PDIF CONVERTER CONTROL VERB	
INTERNAL PATH VERB (VENDOR-SPECIFIC)	96
TX CHANNEL STATUS CONTROL VERB (VENDOR-SPECIFIC)	97
CHANNEL STATUS DATA PACKING CONFIGURATION VERB (VENDOR-SPECIFIC)	97
UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)	
RESERVED (NID = 05H)	
DAC1 AUDIO OUTPUT CONVERTER WIDGET (NID = 06H)	101
STREAM FORMAT VERB	101
AMPLIFIER GAIN/MUTE VERB	102
GET PARAMETER VERB	103
POWER STATE VERB	104
CONVERTER STREAM, CHANNEL VERB	104
UNSOLICITED RESPONSE VERB	105
UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)	105
DAC2 AUDIO OUTPUT CONVERTER WIDGET (NID = 07H)	107
STREAM FORMAT VERB	107
AMPLIFIER GAIN/MUTE VERB	108
GET PARAMETER VERB	109
POWER STATE VERB	110
CONVERTER STREAM, CHANNEL VERB	110
UNSOLICITED RESPONSE VERB	111
UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)	111
RESERVED (NID = 08H)	
MIC1 MUX SELECTOR WIDGET (NID = 09H)	115
GET PARAMETER VERB	115
CONNECTION SELECT CONTROL VERB	115
GET CONNECTION LIST ENTRY VERB	
PGA1 SELECTOR WIDGET (NID = 0AH)	117
AMPLIFIER GAIN/MUTE VERB	117
GET PARAMETER VERB	118
GET CONNECTION LIST ENTRY VERB	118
PGA CONTROL VERB (VENDOR-SPECIFIC)	119
PGA2 SELECTOR WIDGET (NID = 0BH)	121
AMPLIFIER GAIN/MUTE VERB	121
GET PARAMETER VERB	122
GET CONNECTION LIST ENTRY VERB	122
PGA CONTROL VERB (VENDOR-SPECIFIC	123
PORT-E PIN COMPLEX WIDGET (NID = 0CH)	125
GET PARAMETER VERB	125
PIN WIDGET CONTROL VERB	
UNSOLICITED RESPONSE VERB	
PIN SENSE VERB	
EAPD/BTL VERB	
CONFIGURATION DEFAULT VERB	127
UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)	129



AUTO-MUTE CONTROL VERB (VENDOR-SPECIFIC)	
PORT-B PIN COMPLEX WIDGET (NID = 0DH)	131
AMPLIFIER GAIN/MUTE VERB	131
GET PARAMETER VERB	132
PIN WIDGET CONTROL VERB	133
UNSOLICITED RESPONSE VERB	133
PIN SENSE VERB	133
EAPD/BTL VERB	134
CONFIGURATION DEFAULT VERB	134
UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)	136
DIFFERENTIAL VERB (VENDOR-SPECIFIC)	
AUTO-MUTE CONTROL VERB (VENDOR-SPECIFIC)	
PORT-D PIN COMPLEX WIDGET (NID = 0EH)	
AMPLIFIER GAIN/MUTE VERB	
GET PARAMETER VERB	
PIN WIDGET CONTROL VERB	
CONFIGURATION DEFAULT VERB	
S/PDIF OUT PIN COMPLEX WIDGET (NID = 0FH)	
GET PARAMETER VERB	
GET CONNECTION LIST ENTRY VERB	
PIN WIDGET CONTROL VERB	
UNSOLICITED RESPONSE VERB	
PIN SENSE VERB	
CONFIGURATION DEFAULT VERB	
UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)	
RESERVED (NID = 10H)	
CONFIGURATION DEFAULT VERB	
PORT-A PIN COMPLEX WIDGET (NID = 11H)	
GET PARAMETER VERB	
GET CONNECTION LIST ENTRY VERB	
PIN WIDGET CONTROL VERB	
UNSOLICITED RESPONSE VERBPIN SENSE VERB	
CONFIGURATION DEFAULT VERB	
UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)	
PORT-G PIN COMPLEX WIDGET (NID = 12H)	
GET PARAMETER VERB	
GET CONNECTION LIST ENTRY VERB	
PIN WIDGET CONTROL VERB	
UNSOLICITED RESPONSE VERB	
PIN SENSE VERB	
CONFIGURATION DEFAULT VERB	
UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)	
RESERVED (NID = 13H)	
CONFIGURATION DEFAULT VERB	
BEEP GENERATOR WIDGET (NID = 14H)	
AMPLIFIER GAIN/MUTE VERB	
GET PARAMETER VERB	
BEEP GENERATION VERB	
BEEP MASK SELECTION VERB (VENDOR SPECIFIC)	
MIC2 AUDIO INPUT CONVERTER WIDGET (NID = 15H)	
STREAM FORMAT VERB	
GET PARAMETER VERB	
GET CONNECTION LIST ENTRY VERB	
PROCESSING STATE VERB	


# **WM8860**



CONVERTER STREAM, CHANNEL VERB	174
UNSOLICITED RESPONSE VERB	
UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)	174
CHANNEL COPY VERB (VENDOR-SPECIFIC)	
PORT-H PIN COMPLEX WIDGET (NID = 16H)	177
AMPLIFIER GAIN/MUTE VERB	177
GET PARAMETER VERB	178
GET CONNECTION LIST ENTRY VERB	179
PIN WIDGET CONTROL VERB	179
CONFIGURATION DEFAULT VERB	
RESERVED (NID = 17H)	183
APPLICATIONS INFORMATION	184
RECOMMENDED EXTERNAL COMPONENTS	
REQUIRED JACK DETECT COMPONENTS	
PACKAGE DIMENSIONS	
IMPORTANT NOTICE	
REVISION HISTORY	188



# **PIN CONFIGURATION**

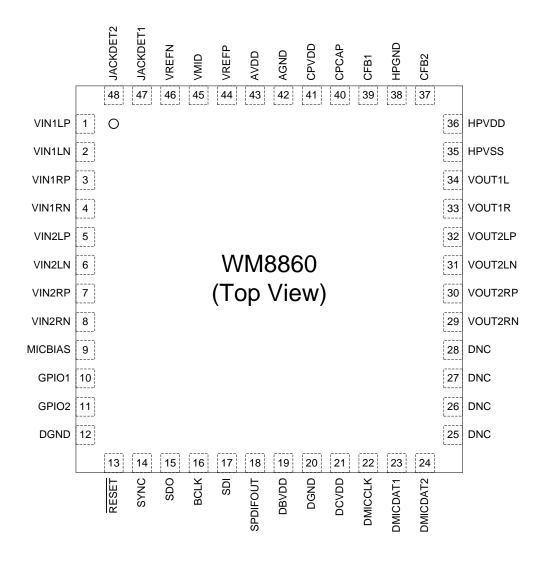

# **ORDERING INFORMATION**

ORDER CODE	TEMPERATURE RANGE	PACKAGE	MOISTURE SENSITIVITY LEVEL	PEAK SOLDERING TEMPERATURE
WM8860GEFL/V	-40°C to +85°C	48-pin QFN (Pb-free)	MSL3	260°C
WM8860GEFL/RV	-40°C to +85°C	48-pin QFN (Pb-free, tape and reel)	MSL3	260°C

Note:

Reel quantity = 2200



# **PIN DESCRIPTION**

PIN NO	NAME	TYPE	DESCRIPTION
1	VIN1LP	Analogue input	Left channel 1 positive input
2	VIN1LN	Analogue input	Left channel 1 negative input
3	VIN1RP	Analogue input	Right channel 1 positive input
4	VIN1RN	Analogue input	Right channel 1 negative input
5	VIN2LP	Analogue input	Left channel 2 positive input
6	VIN2LN	Analogue input	Left channel 2 negative input
7	VIN2RP	Analogue input	Right channel 2 positive input
8	VIN2RN	Analogue input	Right channel 2 negative input
9	MICBIAS	Analogue output	Microphone bias output
10	GPIO1	Digital input / output	General purpose digital input/output 1
11	GPIO2	Digital input / output	General purpose digital input/output 2
12	DGND	Supply input	Digital ground (return for DBVDD and DCVDD)
13	/RESET	Digital input	Global reset (active low)
14	SYNC	Digital input	HDA frame sync, 48kHz
15	SDO	Digital input	Serial data output from HDA controller
16	BCLK	Digital input	HDA Link bit clock, 24MHz
17	SDI	Digital input / output	Serial data input to HDA controller
18	SPDIFOUT	Digital output	S/PDIF output
19	DBVDD	Supply input	Digital buffer supply input
20	DGND	Supply input	Digital ground (return for DBVDD and DCVDD)
21	DCVDD	Supply input	Digital core supply input
22	DMICCLK	Digital output	Digital microphone clock output
23	DMICDAT1	Digital input	Digital microphone data input 1
24	DMICDAT2	Digital input / output	Digital microphone data input 2
25	DNC		Reserved - Do not connect
26	DNC		Reserved - Do not connect
27	DNC		Reserved - Do not connect
28	DNC		Reserved - Do not connect
29	VOUT2RN	Analogue output	Right channel 2 negative output
30	VOUT2RP	Analogue output	Right channel 2 positive output
31	VOUT2LN	Analogue output	Left channel 2 negative output
32	VOUT2LP	Analogue output	Left channel 2 positive output
33	VOUT1R	Analogue output	Right channel 1 output
34	VOUT1L	Analogue output	Left channel 1 output
35	HPVSS	Supply output	Charge pump negative supply decoupling point
36	HPVDD	Supply output	Charge pump positive supply decoupling point
37	CFB2	Analogue output	Charge pump flyback capacitor pin 2
38	HPGND	Supply input	Charge pump ground (return path for HPVDD and HPVSS)
39	CFB1	Analogue output	Charge pump flyback capacitor pin 1
40	CPCAP	Supply output	Internally generated regulated charge pump supply decoupling point
41	CPVDD	Supply input	Charge pump supply input
42	AGND	Supply input	Analogue ground (return path for AVDD and CPVDD)
43	AVDD	Supply input	Analogue supply input
44	VREFP	Analogue output	Analogue positive reference decoupling point
45	VMID	Analogue output	Midrail voltage decoupling point
46	VREFN	Analogue output	Analogue negative reference decoupling point
47	JACKDET1	Analogue output	Jack detect sense 1
48	JACKDET2	Analogue output	Jack detect sense 2



# **ABSOLUTE MAXIMUM RATINGS**

Absolute Maximum Ratings are stress ratings only. Permanent damage to the device may be caused by continuously operating at or beyond these limits. Device functional operating limits and guaranteed performance specifications are given under Electrical Characteristics at the test conditions specified.



ESD Sensitive Device. This device is manufactured on a CMOS process. It is therefore generically susceptible to damage from excessive static voltages. Proper ESD precautions must be taken during handling and storage of this device.

Cirrus Logic tests its package types according to IPC/JEDEC J-STD-020B for Moisture Sensitivity to determine acceptable storage conditions prior to surface mount assembly. These levels are:

 $MSL1 = unlimited floor life at <30 ^{\circ}C / 85\%$  Relative Humidity. Not normally stored in moisture barrier bag.

MSL2 = out of bag storage for 1 year at <30°C / 60% Relative Humidity. Supplied in moisture barrier bag.

MSL3 = out of bag storage for 168 hours at <30°C / 60% Relative Humidity. Supplied in moisture barrier bag.

The Moisture Sensitivity Level for each package type is specified in Ordering Information.

CONDITION	MIN	MAX
Analogue supply voltage (AVDD)	-0.3V	+7V
Charge pump supply voltage (CPVDD)	-0.3V	+7V
Digital core supply voltage (DCVDD)	-0.3V	+2.5V
Digtial buffer supply voltage (DBVDD)	-0.3V	+7V
Voltage range digital inputs	DGND -0.3V	DBVDD +0.3V
Voltage range analogue inputs	AGND -0.3V	AVDD +0.3V
Operating temperature range, T <sub>A</sub>	-40°C	+85°C
Junction temperature, T <sub>JMAX</sub>	-40°C	+150°C
Storage temperature after soldering	-65°C	+150°C

# RECOMMENDED OPERATING CONDITIONS

PARAMETER	SYMBOL	MIN	TYP	MAX	UNIT
CODEC Power Supplies					
Digital core supply range	DCVDD	1.62	1.8	1.98	V
Digital buffer supply range	DBVDD	2.97	3.3	3.63	V
Analogue supply range	AVDD	4.5	5.0	5.25	V
Charge pump supply range	CPVDD	4.5	5.0	5.25	V
Ground	DGND, AGND, HPGND		0		V

#### Notes:

- 1. Analogue and digital grounds must always be within 0.3V of each other.
- 2. All digital and analogue supplies are completely independent from each other (i.e. not internally connected).



# THERMAL PERFORMANCE

Thermal analysis should be performed in the intended application to prevent the WM8860 from exceeding maximum junction temperature. Several contributing factors affect thermal performance most notably the physical properties of the mechanical enclosure, location of the device on the PCB in relation to surrounding components and the number of PCB layers. Connecting the GND paddle through thermal vias and into a large ground plane will aid heat extraction.

Three main heat transfer paths exist to surrounding air as illustrated below in Figure 1:

- Package top to air (radiation).
- Package bottom to PCB (radiation).
- Package leads & paddle to PCB (conduction).




Figure 1 Heat Transfer Paths

The temperature rise  $T_R$  is given by  $T_R$  =  $P_D$  \*  $\Theta_{JA}$ 

- P<sub>D</sub> is the power dissipated in the device.
- O<sub>JA</sub> is the thermal resistance from the junction of the die to the ambient temperature and is therefore a measure of heat transfer from the die to surrounding air. O<sub>JA</sub> is determined with reference to JEDEC standard JESD51-9.

The junction temperature  $T_J$  is given by  $T_J = T_A + T_R$ , where  $T_A$  is the ambient temperature.

PARAMETER	SYMBOL	MIN	TYP	MAX	UNIT
Operating temperature range	T <sub>A</sub>	-40		85	°C
Operating junction temperature	$T_J$	-40		125	°C
Thermal Resistance	$\Theta_{JA}$		29		°C/W



# **ELECTRICAL CHARACTERISTICS**

# **Test Conditions**

 $AVDD = CPVDD = 5V, DBVDD = 3.3V, DCVDD = 1.8V, T_A = +25^{\circ}C, 1kHz \ signal, fs = 48kHz, 24-bit \ data \ unless \ otherwise \ stated.$ 

PARAMETER	SYMBOL		TEST CONDITIONS	MIN	TYP	MAX	UNIT
Analogue Input 1 (VIN1LP	VIN1LN, VIN1	1RP, VIN1RN)					
Maximum Differential Input Signal Level	V <sub>INDIFF(max)</sub>	0dB gain	VINILN or VINIRN OdB		2.25 x AVDD/5		$V_{RMS}$
Maximum Single-ended Input Signal Level	V <sub>INSE(max)</sub>	0dB gain	VINILIN OF ODB TO ADC1		1.6 x AVDD/5		$V_{RMS}$
		-12dB gain	VINTLN or VINTRN VINTRN VINTRP OF VINTRP		42		kΩ
Input impedance	Z <sub>IN</sub>	0dB gain	VINTLN or VINTRN VINTLP or VINTRP		27		kΩ
		+12dB gain	VINTLN or VINTRN VINTLP or VINTRP		9		kΩ
Common Mode Rejection Ratio	CMRR	20Hz to 20kHz	VINILIN OF OdB TO ADC1		55		dB
Minimum PGA Gain Setting					-12		dB
Maximum PGA Gain Setting					+12		dB
PGA Gain Step Size		G	uaranteed monotonic		0.5		dB



 $AVDD = CPVDD = 5V, DBVDD = 3.3V, DCVDD = 1.8V, T_A = +25^{\circ}C, 1kHz \ signal, fs = 48kHz, 24-bit \ data \ unless \ otherwise \ stated.$ 

PARAMETER	SYMBOL		TEST CONDITIONS	MIN	TYP	MAX	UNIT
Analogue Input 2 (VIN2LP,	VIN2LN, VIN2	RP, VIN2RN)					
Maximum Differential Input Signal Level	V <sub>INDIFF(max)</sub>	0dB gain	VINZIN or OdB, OdB, To ADC2 VINZPP VINZPP		2.25 x AVDD/5		$V_{RMS}$
Maximum Single-ended Input Signal Level	V <sub>INSE(max)</sub>	0dB gain	VINZIN ODB DOB TO ADC2		1.1 x AVDD/5		$V_{RMS}$
Input impedance	$Z_{ m IN}$	Single- ended or Differential (Inverting)	VINZLN or VINZRN VINZRP Or VINZRP OdB to +30dB		10		kΩ
Input impedance	ZIN	Differential (Non- inverting)	VINZEN OF VINZEN VINZER VINZER Za Za OdB to +30dB		120		kΩ
Common Mode Rejection Ratio	CMRR	20Hz to 20kHz	VINZEN O OdB ODB TO ADC2		65		dB
Microphone Preamp Gain Options					0 10 20 30		dB
Minimum PGA Gain Setting					-12		dB
Maximum PGA Gain Setting					+12		dB
PGA Gain Step Size		G	uaranteed monotonic		0.5		dB



 $AVDD = CPVDD = 5V, DBVDD = 3.3V, DCVDD = 1.8V, T_A = +25^{\circ}C, 1 kHz \ signal, fs = 48kHz, 24-bit \ data \ unless \ otherwise \ stated.$ 

PARAMETER	SYMBOL		TEST CONDITIONS	MIN	TYP	MAX	UNIT
ADC1 Performance							
		Unweighted			102		dB
Signal to Noise Ratio	SNR	A-weighted		100	105		dB
		A-weighted fs=96kHz	VINILN or VINIRN OdB		105		dB
Dynamic Range	DNR	A-weighted -60dBFS	VINI.P or VINIRP		105		dB
Total Harmonia Distortion	THD	-1dBFS			-95	-90	dB
Total Harmonic Distortion	1110	-1dBFS fs=96kHz			-95		dB
Channel Separation		1kHz			86		dB
Channel Separation			20Hz to 20kHz		86		dB
Channel Level Matching			0dBFS		0.1		dB
Channel Phase Deviation					0.01		0
Power Supply Rejection Ratio	PSRR	1kH	dz, 100mVpp on AVDD		90		dB
		20Hz to	20kHz, 100mVpp on AVDD		70		dB



 $AVDD = CPVDD = 5V, DBVDD = 3.3V, DCVDD = 1.8V, T_A = +25^{\circ}C, 1kHz \ signal, fs = 48kHz, 24-bit \ data \ unless \ otherwise \ stated.$ 

PARAMETER	SYMBOL		TEST CONDITIONS	MIN	TYP	MAX	UNIT
ADC2 Performance							
	SNR	Unweighted			100		dB
Signal to Noise Ratio		A-weighted	VIN2LN or	95	103		dB
		A-weighted fs=96kHz		103		dB	
Dynamic Range	DNR	A-weighted -60dBFS	VINZIP or VINZRP		103		dB
Total Harmonic Distortion	THD	-1dBFS			-95	-90	dB
Channel Separation		1kHz			87		dB
Charlier Separation			20Hz to 20kHz		84		dB
Channel Level Matching			0dBFS		0.1		dB
Channel Phase Deviation					0.01		o
Power Supply Rejection Ratio	PSRR -	1kH	1kHz, 100mVpp on AVDD		90		dB
		20Hz to	20Hz to 20kHz, 100mVpp on AVDD				dB

#### **Test Conditions**

 $AVDD = CPVDD = 5V, DBVDD = 3.3V, DCVDD = 1.8V, T_A = +25^{\circ}C, 1 kHz \ signal, fs = 48kHz, 24-bit \ data \ unless \ otherwise \ stated.$ 

PARAMETER	SYMBOL	TEST CONDITIONS	MIN	TYP	MAX	UNIT
Microphone Bias Generate	or					
Output Voltage		VRefEn[2:0] = 001		0.5x AVDD		V
Output Voltage		VRefEn[2:0] = 100		0.8x AVDD		V
Current Source Capability					2.5	mA
Power Supply Rejection Ratio	DCDD	1kHz, 100mVpp on AVDD		100		dB
	PSRR	20Hz to 20kHz, 100mVpp on AVDD		88		dB



 $AVDD = CPVDD = 5V, DBVDD = 3.3V, DCVDD = 1.8V, T_A = +25^{\circ}C, 1 kHz \ signal, fs = 48 kHz, 24 - bit \ data \ unless \ otherwise \ stated.$ 

PARAMETER	SYMBOL	TEST CONDITIONS	MIN	TYP	MAX	UNIT
Digital Microphone Interfa	се					
				1.024		
Digital Missanhana Clast				1.4112		
Digital Microphone Clock Frequencies				2.048		MHz
				2.8224		
				3.072		
Signal to Noise Ratio	SNR			96		dB
Minimum Digital Gain Setting				-12		dB
Maximum Digital Gain Setting				+32		dB
Digital Gain Step Size				0.5		dB



 $AVDD = CPVDD = 5V, DBVDD = 3.3V, DCVDD = 1.8V, T_A = +25^{\circ}C, 1 kHz \ signal, fs = 48kHz, 24-bit \ data \ unless \ otherwise \ stated.$ 

PARAMETER	SYMBOL		TEST CONDITIONS	MIN	TYP	MAX	UNIT
Analogue Output 1 (VOUT	1L, VOUT1R)						
Full Scale Output Signal	V	$R_L = 1k\Omega$ to $47k\Omega$ H- $PhnE$ nable $= 0$	From VOUT1L or VOUT1R The Third Thi		2 x AVDD/5		$V_{RMS}$
Level	V <sub>оит</sub>	$R_L = 16\Omega$ to $1k\Omega$ H-Phn Enable = 1	From DAC1 + VOUTIL or VOUTIL or VOUTIL or IEQ TIKQ		0.8 x AVDD/5		V <sub>RMS</sub>
Maximum Rated Output Power	$P_{\text{OUT(max)}}$	$R_L = 16\Omega$	From DACI VOUTIL or VOUTIR			40	mW
Load Impedance	$R_L$			16		47k	Ω
Load Capacitance	$C_L$					1	nF
DC Offset			Measured between VOUT1L/R and AGND with path fully enabled but no signal playing			+1	mV
Analogue Output 2 (VOUT	2L, VOUT2LN	, VOUT2RP, V					
Differential Full Scale Output Signal Level	V <sub>out</sub>	$R_L = 5k\Omega$ to $47k\Omega$	VOUTZLN or VOUTZLN D THE TOTAL SKO - VOUTZLP OF SKO - 47KO		2 x AVDD/5		$V_{RMS}$
Single-ended Full Scale Output Signal Level	V <sub>OUT</sub>	$R_L = 5k\Omega$ to $47k\Omega$	VOUT2LP PF VOUT2RP DAC2		1 x AVDD/5		$V_{RMS}$
Load Impedance	RL			5		47	kΩ
Load Capacitance	CL					1	nF



 $AVDD = CPVDD = 5V, DBVDD = 3.3V, DCVDD = 1.8V, T_A = +25^{\circ}C, 1 kHz \ signal, fs = 48kHz, 24-bit \ data \ unless \ otherwise \ stated.$ 

PARAMETER	SYMBOL	•	TEST CONDITIONS	MIN	TYP	MAX	UNIT
DAC1 Path Performance (	VOUT1L and	VOUT1R into	10kΩ Line Load)				
		Unweighted			105		dB
Signal to Noise Ratio	SNR	A-weighted		100	108		dB
		A-weighted fs=96kHz			108		dB
Out of Band Signal to Noise Ratio (0.6fs to	OBSNR	Fs > 11.025kHz	From DAC1		80		dB
150kHz)	OBSINIC	Fs <= 11.025kHz	10kΩ		75		dB
Dynamic Range	DNR	A-weighted -60dBFS			108		dB
Total Harmonic Distortion	THD	0dBFS			-96	-85	dB
Total Harmonic Distortion	טחו	0dBFS fs=96kHz			-96	-85	dB
Channel Separation		1kHz 20Hz to 20kHz			115		dB
Спаппет Зераганоп					110		dB
Channel Level Matching			0dBFS		0.1		dB
Channel Phase Deviation					0.01		o
AVDD Power Supply	AVDD	1kF	Hz, 100mVpp on AVDD		51		dB
Rejection Ratio	PSRR	20Hz to	20Hz to 20kHz, 100mVpp on AVDD		50		dB
CPVDD Power Supply	CPVDD	1kH:	1kHz, 100mVpp on CPVDD		86		dB
CPVDD Power Supply Rejection Ratio	PSRR	20Hz to 2	20Hz to 20kHz, 100mVpp on CPVDD		75		dB



 $AVDD = CPVDD = 5V, DBVDD = 3.3V, DCVDD = 1.8V, T_A = +25^{\circ}C, 1 kHz \ signal, fs = 48kHz, 24-bit \ data \ unless \ otherwise \ stated.$ 

PARAMETER	SYMBOL		TEST CONDITIONS	MIN	TYP	MAX	UNIT
DAC1 Path Performance (	OUT1L and \	OUT1R into	16Ω Headphone Load)				
		P <sub>OUT</sub> = 30mW	P <sub>OUT</sub> = 30mW		-80	-73	dB
Total Harmonic Distortion	THD	$R_L = 16\Omega$		0.01		%	
		$P_{OUT} = 10 \text{mW}$ $R_L = 300 \Omega$ $R_L = 300 \Omega$		-80		dB	
				0.01		%	
Idle Channel Noise		R <sub>L</sub> = 16Ω From DAC1 VOUTIL or VOUTIR	90	98		dBV	
idle Chamilei Noise		A-weighted	A-weighted Jacob J		12.26		$\mu V_{\text{rms}}$
Channel Separation			$R_L = 16\Omega$ 1kHz		85		dB
		$R_L = 16\Omega$ 20Hz to 20kHz			72		dB



 $AVDD = CPVDD = 5V, DBVDD = 3.3V, DCVDD = 1.8V, T_A = +25^{\circ}C, 1kHz \ signal, fs = 48kHz, 24-bit \ data \ unless \ otherwise \ stated.$ 

PARAMETER	SYMBOL		TEST CONDITIONS	MIN	TYP	MAX	UNIT
DAC2 Path Performance (	VOUT2LP, VO	UT2LN, VOU	Γ2RP and VOUT2N into 10kΩ Lir	ne Load)			
		Unweighted			103		dB
Signal to Noise Ratio	SNR	A-weighted		100	106		dB
		A-weighted fs=96kHz	VOUT2LN or VOUT2RN From 4470pF		106		dB
Out of Band Signal to Noise Ratio (0.6fs to	OBSNR	Fs > 11.025kHz	$\begin{array}{c c} DAC2 & & & & & & & & & & & \\ \hline & VOUT2LP \ o & & & & & & & \\ \hline VOUT2RP & & & & & & & \\ \hline & VOUT2RP & & & & & & \\ \hline \end{array}$		80		dB
150kHz)	OBSINK	Fs <= 11.025kHz			75		dB
Dynamic Range	DNR	A-weighted -60dBFS			106		dB
		0dBFS			-92		dB
		0dBFS fs=96kHz			-92		dB
Channel Separation			20Hz to 20kHz		102		dB
Channel Level Matching			0dBFS		0.1		dB
Channel Phase Deviation					0.01		0
AVDD Power Supply	AVDD	1kF	1kHz, 100mVpp on AVDD		75		dB
Rejection Ratio	PSRR	20Hz to	20Hz to 20kHz, 100mVpp on AVDD				dB



 $AVDD = CPVDD = 5V, \ DBVDD = 3.3V, \ DCVDD = 1.8V, \ T_A = +25^{\circ}C, \ 1kHz \ signal, \ fs = 48kHz, \ 24-bit \ data \ unless \ otherwise \ stated.$ 

PARAMETER	SYMBOL	TEST CONDITIONS	MIN	TYP	MAX	UNIT
S/PDIF Transmitter Specif	ication					
Output Signal Logic High	V <sub>OH(S/PDIF)</sub>		0.9 * DBVDD			V
Output Signal Logic Low	V <sub>OL(S/PDIF)</sub>				0.1 * DBVDD	V
Output Current Source/Sink Capability		DBVDD = 1.8V	7			mA
		DBVDD = 3.63V	15			mA
Output Sample Rate		Includes maximum reference clock error of			1000	ppm
Tolerance		±0.025% as allowed by HDA Specification	-0.1		+0.1	%
				32		
				44.1		
Output Sample Rate				48		
Support				88.2		kHz
				96		
				176.4		
				192		



 $AVDD = CPVDD = 5V, DBVDD = 3.3V, DCVDD = 1.8V, T_A = +25^{\circ}C, 1 kHz \ signal, fs = 48kHz, 24-bit \ data \ unless \ otherwise \ stated.$ 

PARAMETER	SYMBOL	TEST CONDITIONS	MIN	TYP	MAX	UNIT
Analogue References			•	•		
Positive Voltage Reference	VREFP			0.9 * AVDD		V
Negative Voltage Reference	VREFN			0.1 * AVDD		V
Midrail Voltage Reference	VMID			0.5 * AVDD		V
Charge Pump Cap Level	CPCAP			3.15		V
Midrail Voltage		AVDD to VMID or VMID to AGND VMID_SEL[1:0]=00		12.5		kΩ
	D	AVDD to VMID or VMID to AGND VMID_SEL[1:0]=01		75		kΩ
Resistance	$R_{VMID}$	AVDD to VMID or VMID to AGND VMID_SEL[1:0]=10		37.5		kΩ
		AVDD to VMID or VMID to AGND VMID_SEL[1:0]=11		375		kΩ
Digital Input / Output						
Input High Level	$V_{IH}$		0.65 * DBVDD			V
Input Low Level	$V_{IL}$				0.35 * DBVDD	V
Output High Level	$V_{OH}$		0.9 * DBVDD			V
Output Low Level	V <sub>OL</sub>				0.1 * DBVDD	V
Input Capacitance					7.5	pF
Input Leakage			-0.1		+0.1	μΑ



#### **TERMINOLOGY**

- 1. Signal-to-Noise Ratio (dB) SNR is a measure of the difference in level between the full scale output signal and the output with no input signal applied.
- 2. Total Harmonic Distortion (dB) THD is the level of the rms value of the sum of harmonic distortion products relative to the amplitude of the applied input signal.
- 3. Total Harmonic Distortion plus Noise (dB) THD+N is the level of the rms value of the sum of harmonic distortion products plus noise in the specified bandwidth relative to the amplitude of the applied input signal.
- 4. Crosstalk (L/R) (dB) left-to-right and right-to-left channel crosstalk is the measured signal level in the idle channel at the test signal frequency relative to the signal level at the output of the active channel. The active channel is configured and supplied with an appropriate input signal to drive a full scale output, with signal measured at the output of the associated idle channel. For example, measured signal level on the output of the idle right channel with a full scale signal level at the output of the active left channel.
- 5. Multi-Path Channel Separation (dB) is the measured signal level in the idle path at the test signal frequency relative to the signal level at the output of the active path. The active path is configured and supplied with an appropriate input signal to drive a full scale output, with signal measured at the output of the specified idle path.
- 6. All performance measurements carried out with 20kHz low pass filter, and where noted an A-weighted filter. Failure to use such a filter will result in higher THD and lower SNR readings than are found in the Electrical Characteristics. The low pass filter removes out of band noise; although it is not audible it may affect dynamic specification values.
- 7. Mute Attenuation This is a measure of the difference in level between the full scale output signal and the output with mute applied.
- 8. Channel Level Matching (dB) the difference in output level between channels in a stereo pair.
- 9. Channel Phase Deviation (Degrees) the difference in phase between channels in a stereo pair.
- 10. Idle Channel Noise (dBV) absolute rms measurement of the noise floor over the 20Hz to 20kHz band.



# TYPICAL POWER CONSUMPTION

# **Test Conditions**

 $AVDD = CPVDD = 5V, \ DCVDD = DBVDD = 1.8V, \ T_A = +25^{\circ}C, \ fs = 48kHz, \ 24-bit \ data \ unless \ otherwise \ stated.$ 

PARAMETER	TEST CONDITIONS	AVDD	CPVDD	DBVDD	DCVDD				
		(mA)	(mA)	(mA)	(mA)				
Render paths									
Headphone playback only	DAC1 & AFG D0, stream enabled $R_L$ =47k $\Omega$ , quiescent	26.1	8.1	<0.1	9.1				
Headphone playback & line output	DAC1, DAC2 & AFG D0, stream enabled $R_L \!\!=\!\! 47k\Omega, \text{ quiescent}$	36.7	8.1	<0.1	10.2				
Stereo line output only	DAC2 & AFG D0, stream enabled $R_L$ =47k $\Omega$ , quiescent	23.3	0.0	<0.1	9.0				
Capture paths									
Line record only	ADC1 & AFG D0, stream enabled quiescent	46.2	0.0	0.1	9.3				
Analogue microphone record only	ADC1 & AFG D0, stream enabled quiescent	53.8	0.0	0.1	9.3				
Combination paths									
Headphone playback & microphone record	ADC1, DAC1 & AFG D0, stream enabled quiescent	62.9	8.1	0.1	13.0				
All blocks enabled	All blocks D0	96.2	8.1	0.1	14.7				
All blocks disabled	All blocks D3 <sup>(Note 1)</sup> , BCLK stopped	12.3	0.0	<0.1	2.4				
All blocks disabled, lowest power mode	Vendor-specific D4 <sup>(Note 2)</sup> , BCLK stopped	0.0	0.0	0.0	2.4				


#### Notes:

- 1. D3 state allows for jack detect events to issue wake command to enable the system to wake-up
- 2. D4 state powers down all analogue circuit blocks. CODEC can no longer generate wakes, but can be woken up using the HD Link and initialised normally without the need for a power cycle.



# SIGNAL TIMING REQUIREMENTS

Signal timing requirements are as defined in the High Definition Audio Specification Revision 1.0, section 6.2.3.1. This section of the specification is repeated here for completeness.

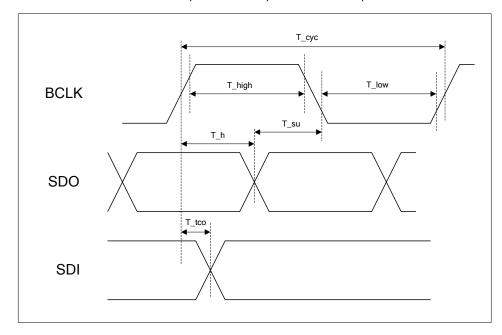

# **Test Conditions**

DBVDD=3.3V, AVDD=CPVDD=5V, DCVDD=1.8V,  $T_A$ =+25°C

PARAMETER	SYMBOL	MIN	TYP	MAX	UNIT
Period of BCLK including jitter	T_cyc	41.163	41.67	42.171	ns
High phase of BCLK	T_high	17.5			ns
Low phase of BCLK	T_low	17.5			ns
BCLK jitter			150	500	ps
Time after rising edge of BCLK that SDI becomes valid	T_tco	3		11	ns
Setup for SDO at both rising and falling edge of BCLK	T_su	5			ns
Hold for SDO at both rising and falling edge of BCLK	T_h	5			ns

Table 1 High Definition Audio Link I/O Signal Timing

#### Notes:

- Measurement points are as defined in the High Definition Audio Specification Revision 1.0 at either 0.35\*DBVDD, 0.5\*DBVDD or 0.65\*DBVDD as appropriate
- 2. Period specification for BCLK is the long term average frequency measured over 1ms. BCLK has a 100ppm tolerance in the High Definition Audio Architecture
- 3. 42/58% is the worst case BCLK duty cycle at the WM8860
- 4. The WM8860 meets the timing requirements with the slew rate of the inputs in the range of 1V/ns to 3V/ns



# INTERNAL POWER ON RESET CIRCUIT

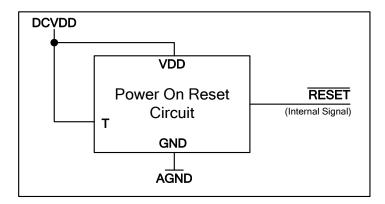


Figure 2 Internal Power on Reset Circuit Schematic

The WM8860 includes an internal Power-On-Reset Circuit, as shown in Figure 2, which is used to reset the digital logic into a default state after power up. The POR circuit is both powered from and monitors DCVDD. It asserts the internal RESET low if DCVDD is below a minimum threshold.

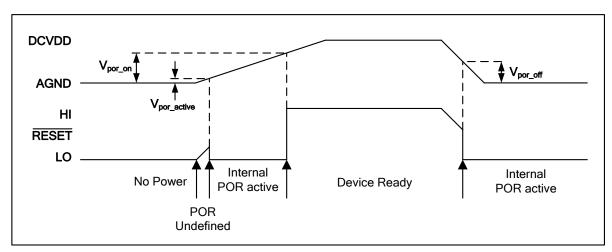


Figure 3 Typical Power up Sequence

Figure 3 shows a typical power-up sequence. The RESET signal is undefined until DCVDD has exceeded the minimum threshold,  $V_{por\_active}$ . Once this threshold has been exceeded, RESET is asserted low and the chip is held in reset. In this condition, all stimulus to the WM8860 is ignored. Once DCVDD has reached  $V_{por\_on}$ , RESET is released high, all registers are in their default state and access to the WM8860 via the HDA Interface may take place.

On power down, RESET is asserted low whenever DCVDD drops below the minimum threshold  $V_{\text{por\_off}}.$ 

Typical Power-On Reset parameters for the WM8860 are defined in Table 2.

SYMBOL	MIN	TYP	MAX	UNIT
Vpor_active		0.1		V
Vpor_on		1.23		V
Vpor_off		1.16		V

Table 2 Typical Power-On Reset parameters



# INTRODUCTION

The WM8860 is a high performance multi-channel audio CODEC designed for high performance portable PC audio systems. The device offers full compatibility with the Intel High Definition Audio (HDA) specification revision 1.0, allowing seamless integration with industry-standard HDA controllers.

The WM8860 has two high performance stereo DACs to enable four channels of high definition audio. A high-performance ground-referenced stereo headphone amplifier utilises advanced charge pump and DC servo technology to minimise system cost and space without compromise on audio quality. A stereo balanced line output is also provided. These line outputs may be used connected to external speaker drivers in a notebook or netbook application.

The WM8860 also has two high performance stereo ADCs to provide Hi-Fi quality analogue line-in and microphone input digitisation. A low noise microphone bias with programmable output voltage is provided, ideally suited as a bias current source for ECM microphones. Additionally, the CODEC contains a digital microphone interface capable of supporting up to four independent digital microphones, allowing high quality microphone array implementations to be realised. One differential stereo input is provided for line level signals, while one pseudo-differential stereo input with integrated microphone preamplifier is provided.

The WM8860 also contains a S/PDIF transmitter which is fully compatible with IEC-60958-3.

The WM8860 includes an integrated beep generator allowing system beeps to be played back through the output paths.

This datasheet assumes familiarity with the High Definition Audio Specification Revision 1.0, available from <a href="http://www.intel.com/standards/hdaudio/">http://www.intel.com/standards/hdaudio/</a>. For those verbs implemented in the WM8860 which are as defined in the High Definition Audio Specification Revision 1.0 there is no detailed text describing their use in this datasheet. However, detailed text describing the function of of vendor-specific verbs is provided. Additionally, a full list of each node and each verb implemented in the WM8860 is provided at the rear of the document.

#### CIRRUS LOGIC INTERPRETATION OF HDA SPECIFICATION

# **DOLBY AC3 (IEC-61937)**

The AFG node and Converter Widget nodes have a parameter called AC3 within the Supported Stream Formats Parameter. The Intel High Definition Audio specification states that AC3 should be set to 1 if the node supports Dolby AC3 (IEC-61937) encoded data.

There is some ambiguity as to what is meant by "supports Dolby AC3 (IEC-61937)". The WM8860 does not support processing of Dolby AC3 (IEC-61937) encoded data but it does support the passing of AC3 data through the S/PDIF Converter Widgets.

Cirrus Logic interprets the Intel specification to mean that the AC3 parameter should be set if a node supports the encoding/decoding of AC3 data, and so we set the WM8860 AC3 parameters to 0.

When the S/PDIF Converters are passing AC3 (IEC-61937) data, the *Stream Format Verb* for the widget node should have *Bits* = 1 (for 16-bit formatting) and *Type* = 1 to indicate that non-PCM data is being passed. Note that setting *Type* is for controller purposes only, and the WM8860 performs the same operation regardless of what *Type* is set to.

The user should ensure that Sample Rate Converters (SRCs) are bypassed when S/PDIF contains AC3 data.

#### FLOAT32

The WM8860 performs a Fixed-point/Floating-point conversion. Fixed point format is <1,23>, while floating point format is IEEE-754, single precision 32-bit, full scale between -1.0 and 1.0 with silence at 0.0.

Floating point conversion is implemented in all Converter widgets. The conversion is enabled when the *Stream Format Verb* for the widget node has *Bits* set to 4 (for 32-bit formatting).



#### **AUDIO WIDGETS CAPABILITIES PARAMETER: DIGITAL**

The MIC1 audio path can begin at either Port-B (Analogue Microphone) or Port-D (Digital Microphone). This leads to some confusion when setting the *Widget Capability Parameter*. Bit [9] of this parameter is called *Digital* and is used to indicate if the widget acts on an analogue stream or on a digital stream.

In the cases of the MIC1 Converter (NID = 03h) and the MIC1 Mux (NID = 09h), these can act on both analogue or digital streams, depending on which microphone interface is being used. For these two nodes, Digital = 0 to indicate that the nodes act on analogue data, but the user should be aware that these nodes can also act on digital data when the digital microphone is being used.

The Port-D node has its Digital parameter set to 1 to indicate that it acts on digital data.

#### **LATENCY**

The group delay or latency for an audio path varies based on sample rate and processing steps (e.g. SRC). As variable reporting is not supported as part of the Intel HDA Specification, the *Delay* parameter in the *Audio Widgets Capabilities Parameter* is set to 0 to indicate that latency is not reported.

#### **POWER STATES**

Within the AFG, all power states are supported. These are interpreted as follows:

- D0: Fully on
- D1: Link active, Jack detection logic on, analogue references enabled, but converters and DSP logic still disabled.
- D2: Link active, Jack detection logic on, register read/write access possible but all modules in an audio path are disabled.
- D3: Link disabled (i.e. BCLK stopped), responses not possible but Jack detection logic on and capable of issuing a wake.
- D4: Power applied, and settings maintained. Jack detection logic off, and wake disabled.

The AFG node supports the *Power State* verb. Widget nodes also offer power control, but their settings are restricted to select only power states below that of the AFG power state setting. For example, if the AFG node is set at D1, widget nodes can be set to D1, D2, D3, but not D0.

The default power state of the AFG is D2 so as to allow the PLLs to lock during CODEC initialisation. The default power state of the widget nodes is D3 so as to minimise power consumption. Widget nodes do not support D4 as the D3 state is identical to D4 at the widget node level.

Power state transitions are done in sequence. For example, if a node is in power state D3, and the power state is set to D0, the transitions steps are D3-D2-D1-D0. If a *Get Power State* command is issued during the state transitions, the actual power state returned, will be the power state at the end of the frame that the *Power State* command was issued in.

It is possible that the actual power state returned is D3, D2 or D0 while the set power state returned is D0.

For low power operation, the link should be in the Link Reset state and the WM8860 AFG should be in D3 or D4. If the link is in the Link Reset state, and the WM8860 AFG was left in states D0, D1 or D2, the WM8860 cannot issue a power state changes request (i.e. wake).

The only settings that can be changed in the D4 state is the AFG Power State or AFG reset settings – any other changes will be ignored.

In D3, BCLK may be stopped after the WM8860 asserts the *PS-ClkStopOK* register in the AFG's *Power State* verb. The *PS-ClkStopOK* bit will remain asserted in power state D3 until the power state is modified to D0, D1 or D2. If the power state is changed to D4 while in power state D3 when the *PS-ClkStopOK* bit is set, software must poll the AFG *PS-Act* bits to determine when the WM8860 reports transition to power state D4 complete (and hence reports *PS-Act* as D4) before stopping the BCLK.



In D3, if the link is not in the Link Reset state and BCLK is running, the WM8860 will issue an unsolicited response rather than a wake.

In D3 (with the link is the Link Reset state), the WM8860 is capable of generating a wake (i.e. a power state change request). The Controller will respond to the wake by putting the WM8860 through an initialisation sequence. The initialisation sequence will not change the register settings, so the WM8860 will still report a power state of D3 but the WM8860 will be able to send responses, including any unsolicited response(s) that caused a wake to be issued.

As register settings are maintained in the D3/D4 states, the user should be aware that if the WM8860 is brought from D3/D4 to D0 and stream IDs had been previously assigned, data rendering and capture will commence. If this behaviour is not desired, the user should bring the WM8860 to state D3 and set the stream IDs to 0, or ensure that stream IDs are set to 0 prior to entering the D3/D4 state

#### STREAM START/STOP

Sections 4.5.3 and 4.5.4 of the Intel HD Audio specification describe the starting and stopping of streams. While the descriptions are sufficient from a controller perspective, there are ambiguities from a CODEC perspective.

For each stream that goes through the HDA Link, there is a 'Stream Manager' module within the WM8860 whose function is to assemble/disassemble the stream packets within the link frame. The Stream Manager is disabled while the *Stream* value in the *Converter Stream, Channel Verb* is set to 0h. When disabled, the captured data will not be sent on the link, and data from the link will not be decoded for rendering.

For audio path configuration, it is assumed that the Stream ID is the last register to be set in the configuration sequence. When Stream ID is set to a non-zero value it has the effect of starting the stream. On starting the stream, Stream Managers associated with input converters begin transmitting data on the link, and Stream Managers associated with output converters begin to decode data with the corresponding stream tag.

**Note:** Audio paths with mute capabilities may have 'un-mute' as the final configuration step. For these paths, the stream will have started but the audio data will be zeroed until mute has been disabled.

There are test paths within the WM8860 that do not use the HDA Link. These paths can still be used when the Stream Manager is disabled.

The Stream Manager is also disabled when the associated converter widget is in power state D1, D2 or D3. Digital converters (i.e. S/PDIF) have a *DigEn* register bit. When this is set to 0, the associated stream manager is disabled.

It is assumed that the settings of the *Stream Format Verb* and *Converter Stream, Channel Verb* will not change when a stream is active (with the exception of changing the Stream ID to 0 to terminate the stream). Changing stream settings while a stream is active is an erroneous action, and may result in audio corruption.

#### **SDI STREAM ORDER**

The order of stream transmission on the SDI link is governed by the CODEC. The WM8860 will transmit streams with the lowest stream ID value first.

If a stream is started with a stream ID lower than an existing stream, then the new stream is transmitted earlier in the frame than the existing stream (i.e. the WM8860 auto-shuffles the stream placement within the frame). This moves the existing stream to further on in the frame than it was prior to the starting of the new stream. It is assumed that moving streams within a frame is acceptable to the Controller.

#### **BANDWIDTH CONFLICTS**

Sections 5.3.2.2 and 5.3.3.3 of the HD Audio spec describe the scenario of over-subscription of SDO and SDI bandwidths. It indicates that the final stream on the link is terminated prior to completion, and further behaviour is undefined.



#### SDO

It is possible that the SDO line could be oversubscribed, if all streams are active at their maximum sample rate, and word length. It is the responsibility of the Controller to handle this situation, and determine what is put on the SDO line during oversubscription. The WM8860 will produce unsolicited responses from the converter nodes that have not received the stream packets that they have been configured for.

#### SDI

The WM8860 invokes a protection mechanism, should a bandwidth over-subscription situation arise. The mechanism monitors the sample rate, and sample-size settings of a stream to detect oversubscription.

If the SDI line is over-subscribed, due to software configuration or configuration from the recovered S/PDIF sample-rate, the stream (or streams) assigned the highest Stream ID tag value, will be dropped, and an unsolicited response issued from the stream converter whose stream has been dropped.

A stream will be restarted on a re-issue of a non-zero stream ID. However, should the bandwidth problem still be present, the stream won't start and an unsolicited response will be re-sent.

Although there is a protection mechanism in the WM8860, it is the responsibility of the user to identify and rectify bandwidth problems.

#### SOFTWARE FORMATTED (RAW) S/PDIF

An S/PDIF sub-frame consists of a preamble, 24-bits of audio data, and four control bits. In Software Formatted (Raw) S/PDIF mode, all 24-bits of the audio data, plus the 4 bits of control information, plus a 4-bit encoding of the preamble (taking the last 4-bits of the 8-bit bi-phase encoded preamble) are transported across the link. Software Formatted S/PDIF mode is selected by setting the *Bits* register in the *Stream Format Verb* to 4h (i.e. 32-bits) and setting the *Type* register to 1.

#### S/PDIF TX VALIDITY FLAG

The validity flag is bit [28] of an S/PDIF sub-frame. It is configured using V-bit in the Digital Converter Control Verb.

When the *V-bit* is set to 1, the validity flag for both sub-frames is set to 1.

When the V-bit is set to 0, the validity flag for both sub-frames is set to 0, unless an invalid sample is being transmitted for that sub-frame - in which case the validity flag is set to 1 for that sub-frame.

An invalid sample may occur under the following conditions:

- The Stream ID is set to 0
- SRC2 is enabled but is unlocked
- There has been a FIFO overrun/under-run condition in the S/PDIF Tx Stream Manager (i.e. a Stream Error).

**Note:** A Stream Error problem would only be present due to a problem upstream of the WM8860. A Stream Error triggers an unsolicited response with the EF\_STREAM\_ERR flag set. If an invalid sample is detected, it will be overwritten with all-zeros if *VCFG* in the *Digital Converter Control Verb* is set to 1.



#### **CHANNEL NUMBERING**

#### **Multi-Channel Streams**

Channels 0, 2, 4, etc will be assigned to the Left Channel of a stereo converter. Channels 1, 3, 5, etc will be assigned to the Right Channel of a stereo converter.

Channel synchronisation between channels is only guaranteed where stream packets are received by the WM8860 after all converters in a multi-channel stream have had their stream ID assigned.

#### **Mono Streams**

All converters are stereo. Where an input converter (eg. ADC1) is associated with a mono stream, only the left channel (channel 0) will be sent on the HDA Link.

In mono mode, right channel modules in the ADC will be disabled to save power.

Where an output converter (eg. DAC1, S/PDIF Tx) is associated with a mono stream, both left and right channels render the same samples. If both left and right DAC outputs are not desired, the unwanted channel can be muted.

A stream is assumed to be mono when its *Chan* control in the *Stream Format Verb* is set to 0. The *Channel* control in the *Converter Stream, Channel Verb* should be set to 0, although any setting of this register gives the same behaviour in mono mode.

#### **ILLEGAL REGISTER VALUES**

Should the user set verb registers to illegal, unsupported or reserved values, WM8860 behaviour is undefined.

Writing to Reserved registers has no effect.

# **RESPONSE FIELD**

#### Valid Bit

Bit [35] of the Response Field is defined as the Valid Bit. Section 7.3.1 of the HDA specification states: "A 1 in the Valid bit position indicates the Response Filed contains a valid response, which the controller will place in the RIRB; a 0 indicates there is no response."

The WM8860 will set the Valid Bit for all responses, except null responses.

We define a null response as a response to a command that contains an invalid verb (a command where NID=0h, and Verb=0h), or a response to a command with a CODEC address (CAd) that does not match the WM8860 CAd. Either of these commands can be considered as a null command.

We define a non-defined command as a command that has no meaning (i.e. a NID that is not within the WM8860, or a Verb ID that is not supported for the given node). The WM8860 will set the Valid Bit for non-defined commands.



# **CHIP HIERARCHY**

#### **WIDGET DIAGRAM**

Figure 4 below shows the widgets for the WM8860 CODEC, showing available audio routing options. The Node ID (NID) values are shown in the top right corner of each widget. Dotted lines indicate paths that are controlled by vendor-specific verbs.

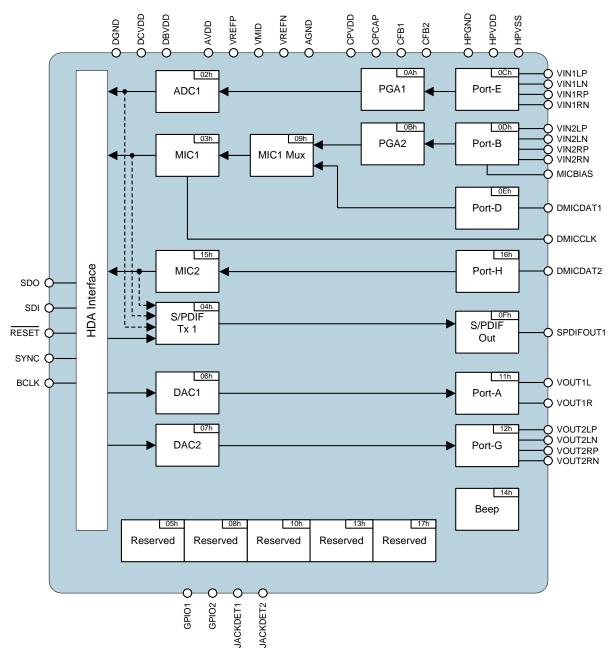


Figure 4 Widget Diagram Showing Valid Audio Paths



# **NODE LIST**

A summary of the capabilities of each node is given in Table 3 below:

NID	NAME	WIDGET TYPE	DESCRIPTION
00h	Root	Root	Provides Vendor ID, Device ID, and NID of the AFG.
01h	AFG	Audio Function Group	Provides the number of Widget Nodes, and NID of first Widget Node. Describes CODEC Audio capabilities.
02h	ADC1	Audio Input Converter	Supports sample rates from 8kHz to 96kHz, and sample sizes from 16-bits to 24-bits.
03h	MIC1	Audio Input Converter	Supports sample rates from 8kHz to 48kHz, and sample sizes from 16-bits to 24-bits.
04h	S/PDIF Tx 1	Audio Output Converter	Supports sample rates from 32kHz to 192kHz, and sample sizes from 16-bits to 32-bits. Includes a fully asynchronous SRC.
05h			Reserved
06h	DAC1	Audio Output Converter	Supports sample rates from 8kHz to 192kHz, and sample sizes from 16-bits to 24-bits. Supports digital attenuation from 0dB to -63.5 dB in 0.5 dB steps.
07h	DAC2	Audio Output Converter	As DAC1.
08h			Reserved
09h	MIC1 Mux	Audio Selector	Selects between Digital Mic (Port-D), and Analogue Mic (Port-B).
0Ah	PGA1	Audio Selector	Supports a gain range of -12dB to +12 dB in 0.5dB steps.
0Bh	PGA2	Selector	As PGA1.
0Ch	Port-E	Pin Complex	Line Input (VIN1) with presence detection.
0Dh	Port-B	Pin Complex	Analogue Mic Input (VIN2) with pre-amplifier (0dB, +10dB, +20dB, +30dB), configurable V <sub>REF</sub> , presence detection and custom impedance sensing scheme.
0Eh	Port-D	Pin Complex	Digital Mic Input (DMIC1) with gain (-12dB to +32dB in 0.5dB steps).
0Fh	S/PDIF Out	Pin Complex	S/PDIF Output with presence detection.
10h			Reserved
11h	Port-A	Pin Complex	Ground-referenced headphone/line out (VOUT1) with presence detection.
12h	Port-G	Pin Complex	Differential line out (VOUT2) with presence detection.
13h			Reserved
14h	Веер	Beep Generator	Generates a configurable tone that can be muxed into DAC audio paths. Supports a gain range 0dB to -24dB in 6dB steps.
15h	MIC2	Audio Input Converter	Supports sample rates from 8kHz to 48kHz, and sample sizes from 16-bits to 24-bits.
16h	Port-H	Pin Complex	Digital Mic Input (DMIC2) with gain (-12 dB to 32dB in 0.5 dB steps). Output port for S/PDIF Tx 2.
17h			Reserved

Table 3 Node List

#### Notes:

1. All Widget Nodes are as defined in the HDA specification; there are no vendor defined widgets.



# **NODE/VERB SUMMARY**

Table 4 gives a summary of the verbs available for each node in the WM8860. Shaded cells show vendor-specific verbs:

vendor spesino																								
	ode	ape			Tx 1	þ			þ	×						Out	þ			þe				þ
	Root Node	AFG Node	5	2	S/PDIF Tx	Reserved	ઇ	C	Reserved	MIC1 Mux	A1	A2	Port-E	Port-B	Port-D	S/PDIF Out	Reserved	Port-A	Port-G	Reserved	<u>Q</u>	и	Port-H	Reserved
	Ro	AF	ADC1	MIC1	S/P	Re	DAC1	DAC2	Res	Ĭ	PGA1	PGA2	Po	<u>P</u>	P	S/P	Res	Po	P	Re	Beep	MIC2	<u>P</u>	Re
																						7		
	00h	01h	02h	03h	4 <sub>h</sub>	05h	06h	07h	08h	09h	0Ah	0Bh	OCh	ОD	ОĒР	0Fh	10h	11h	12h	13h	14h	15h	16h	17h
Reset															1							+	$\dashv$	
Get: – Execute: 7FFh		×																						
Stream Format			×	×	×		×	×														-		
Get: Ah Set: 2h  Amplifier Gain/Mute																					_		_	_
Get: Bh Set: 3h							×	×			X	X		X	×						X		X	
Get Parameter	×	×	X	X	Х		×	X		X	X	X	×	X	X	×		X	X		X	X	X	
Get: F00h Set: -			, ,												- ]	_						$\dashv$	$\stackrel{\cdot}{\rightarrow}$	
Connection Select Control Get: F01h Set: 701h										×														
Get Connection List Entry			\ \							×						×		×				J		
Get: F02h Set: -			×	×							×	×				$\hat{}$		$\hat{}$	×			×	×	
Processing State			×	×																		×		
Get: F03h Set: 703h  Power State	$\vdash$														-							$\dashv$		
Get: F05h Set: 705h		×	X	×			×	×																
Converter Stream, Channel Verb			×	×	×		×	×														×		
Get: F06h Set: 706h																								
Pin Widget Control													×	×	×	×		×	×				×	
Get: F07h Set: 707h Unsolicited Response																-						-		
Get: F08h Set: 708h		×	X	×	×		×	×					×	×		×		×	×			×		
Pin Sense													2	×		2		2	2					
Get: F09h Execute: 709h																						_		
Beep Generation Get: F0Ah Set: 70Ah																					×			
EAPD/BTL Enable																						-		_
Get: F0Ch Set: 70Ch													×	×										
Digital Converter Control					×																			
Get: F0Dh Set: 70Dh, 70Eh  GPIO Data																						$\dashv$	-	
Get: F15h Set: 715h		×																						
GPIO Enable		<b>\</b>																						
Get: F16h Set: 716h		×																						
GPIO Direction		×																						
Get: F17h Set: 717h  GPIO Wake Enable																						+	_	
Get: F18h Set: 718h		×																						
GPIO Unsolicited Enable Mask		×																						
Get: F19h Set: 719h															_	_			_			$\dashv$	$\dashv$	
GPIO Sticky Mask Get: F1Ah Set: 71Ah		×																						
Configuration Default															J							十	1	
Get: F1Ch Set: 71Ch, 71Dh, 71Eh, 71Fh													×	×	×	×	3	×	×	c			×	
Implementation Identification/Subsystem ID		X													ſ					Ī				
Get: F20h Set: 720h, 721h, 722h, 723h  VMID Control																								
Get: F71h Set: 771h		×																						
Beep Mask Selection																					×			
Get: F72h Set: 772h																					Î			
Internal Path					×																		×	
Get: F73h Set: 773h  S/PDIF																						$\dashv$		
Get: F80h Set: 780h																								
Tx Channel Status Control					×																			
Get: F81h Set: 781h, 782h, 783h, 784h															4							$\dashv$		
Channel Status Data Packing Configuration Get: F85h Set: 785h					×																			
COLLI COLLI COLLI TOCIL																								



	00h Root Node	01h AFG Node	02h ADC1	03h MIC1	04h S/PDIF Tx 1	05h Reserved	06h DAC1	07h DAC2	08h Reserved	09h MIC1 Mux	0Ah PGA1	0Bh PGA2	0Ch Port-E	0Dh Port-B	0Eh Port-D	0Fh S/PDIF Out	10h Reserved	11h Port-A	12h Port-G	13h Reserved	14h Beep		16h Port-H	17h Reserved
GPIO Automatic Control Get: F86h Set: 786h		×																						
Unsolicited Response Priority Control Get: F8Eh Set: 78Eh		×	×	×	×		×	×					×	×		×		×	×			×		
Differential Get: FA3h Set: 7A3h														×										
Auto-Mute Control Get: FB0h Set: 7B0h													×	×										
Channel Copy Get: FB1h Set: 7B1h			×	×																		×		
PGA Control Get: FB2h Set: 7B2h, 7B3h											×	×												

Table 4 Node/Verb Summary

# Note:

- 1. Set Verbs are not supported in this case.
- 2. Execute Verbs are not supported in these cases
- 3. Node IDs 10h and 13h are Reserved, but the Host Processor must issue a Configuration Default Verb to these nodes as described in the "Detailed Verb Descriptions" section.



# **DEVICE DESCRIPTION**

This section of the datasheet provides detailed information on all the major paths through the device, along with the nodes used and the vendor-specific verbs. For those verbs implemented in the WM8860 which are as defined in the High Definition Audio Specification Revision 1.0 there is no detailed text describing their use in this datasheet.

The functions covered in this section of the datasheet, and the WM8860 nodes associated with each, are listed in Table 5.

FUNCTION	NODE NAME	NODE ID (NID)				
Stereo Analogue Line Record	Port-E	0Ch				
	PGA1	0Ah				
	ADC1	02h				
Stereo Analogue Microphone Record	Port-B	0Dh				
	PGA2	0Bh				
	MIC1 Mux	09h				
	MIC1	03h				
Digital Microphone Record	Port-D	0Eh				
	MIC1 Mux	09h				
	MIC1	03h				
	Port-H	16h				
	MIC2	15h				
Stereo Headphone Playback	DAC1	06h				
	Port-A	11h				
Stereo Line Playback	DAC2	07h				
	Port-G	12h				
S/PDIF Transmit	S/PDIF Tx 1	04h				
	S/PDIF Out	0Fh				
Ancillary Functions	Веер	14h				
(Beep generator, VMID control, GPIO2 automatic control mode, Unsolicited response priority control)	AFG	01h				

Table 5 WM8860 Device Functions



#### STEREO ANALOGUE LINE RECORD

Stereo analogue line input is supported using the VIN1LP, VIN1LN, VIN1RP and VIN1RN pins; these are available for high-quality stereo digitisation through the ADC1 node.

The WM8860 nodes associated with this function are shown in Figure 5.




Figure 5 Stereo Analogue Line Record Path

This section provides a summary of the Port-E, PGA1 and ADC1 nodes, and describes the vendor-specific verb functions associated with each.

# PORT-E (NID = 0CH)

Table 6 gives a summary of the Port-E node:

	NODE SUMMARY INFORMATION
NID	0Ch
Widget Type	Pin Complex
Supported Get Verbs	F00h, F07h, F08h, F09h, F0Ch, F1Ch, F8Eh, FB0h
Supported Set Verbs	707h, 708h, 70Ch, 71Ch, 71Dh, 71Eh, 71Fh, 78Eh, 7B0h
Unsolicited Responses	Presence Detect Status Change
Vendor-Specific Verbs	F8Eh, 78Eh: Unsolicited Response Priority Control Verb
	FB0h, 7B0h : Auto-Mute Control Verb

Table 6 Port-E Node Summary Information

Port-E supports two different input configurations, controlled by the EAPD/BTL Verb.

SET VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
70Ch	0	BTL	1h	Controls the configuration of the input pins on Port-E:
				0 = Single-ended mode
				1 = BTL (balanced) mode

In single-ended input mode, VIN1LP and VIN1RP are used as the Port-E input pins VIN1LN and VIN1RN must be left floating in this mode. Note that the full-scale input signal level is reduced in single-ended mode, as shown in the "Electrical Characteristics" section.

In differential input mode, VIN1LP, VIN1LN, VIN1RP and VIN1RN are used as the Port-E input pins.

See Figure 6 for examples of the external connections required in each of the supported input configurations.



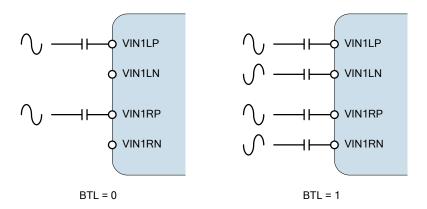


Figure 6 Single Ended (Left) and Differential (Right) External Connections

Port-E supports presence detect. This can be read directly from the Pin Sense Verb.

If nothing is plugged into Port-E it is possible to use an automute function which will automatically replace the samples in the stream with zeros, thus avoiding any noise being transmitted when there is no input. This function can be enabled using the vendor-specific *Auto-Mute Control Verb*.

SET VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
7B0h	0	PD_ AUTOMUTE	0h	Auto-Mute Control:  0 = Automute disabled  1 = Automute enabled
				Note: When PD_AUTOMUTE=1 and Presence Detect (bit 31 in verb F09h)=1 the WM8860 will replace the samples in the stream with zeros

#### PGA1 (NID = 0Ah)

Table 7 gives a summary of the PGA1 node:

NODE SUMMARY INFORMATION				
NID	0Ch			
Widget Type	Audio Selector			
Supported Get Verbs	Bh, F00h, F02h, <i>FB2h</i>			
Supported Set Verbs	3h, 7B2h, 7B3h			
Unsolicited Responses	None			
Vendor-Specific Verbs	FB2h, 7B2h, 7B3h : PGA Control			

Table 7 PGA1 Node Summary Information

PGA1 provides analogue gain for the inputs to Port-E, allowing the signal level to be adjusted by up to +/-12dB in 0.5dB steps. Gain can be applied to left and right channels independently if required. Additionally, a mute function is available – again this can be applied to separate channels as required. The gain of PGA1 is controlled using the *Amplifier Gain/Mute Verb*.

**Note**: When Port-E is configured in single-ended mode the actual gain settings applied to the signal will be adjusted by a further -3.0dB. This changes the effective gain range to -15dB to +9dB.



PGA1 uses an internal zero cross detect circuit to ensure that all gain changes occur while the signal passes through the zero point. This function eliminates any potential DC steps that can occur if gain changes are applied at other times, and therefore the potential for zipper noise is removed. If no zero cross occurs within a specified time after the gain change is requested via a register write a timeout period will elapse and the gain will be changed regardless. This timeout period can be changed using the vendor-specific *PGA Control Verb*:

BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
13:0	Terminal	1FFFh	Set the period of the zero detect timeout clock:
	Count		0000h = Timeout disabled
			0001h to 03FFh = Reserved
			0400h = 1025 x 20.833µs (21.3ms)
			0401h = 1026 x 20.833µs (21.4ms)
			1FFFh = 8192 × 20.833µs (171ms)
			$3FFFh = 16384 \times 20.833 \mu s (341 ms)$
			Note: The timeout clock uses the SYNC signal
			from the HDA interface, so the absolute value
			of the timeout period will depend on the absolute accuracy of the SYNC signal.
		NAME 13:0 Terminal	NAME 13:0 Terminal 1FFFh

#### ADC1 (NID = 02h)

Table 8 gives a summary of the ADC1 node:

	NODE SUMMARY INFORMATION
NID	02h
Widget Type	Audio Input Converter
Supported Get Verbs	Ah, F00h, F02h, F03h, F05h, F06h, F08h, F8Eh, FB1h
Supported Set Verbs	2h, 703h, 705h, 706h, 708h, 78Eh, 7B1h
Unsolicited Responses	Stream Drop
Vendor-Specific Verbs         F8Eh, 78Eh : Unsolicited Response Priority Control Verb	
	FB1h, 7B1h : Channel Copy Verb

**Table 8 ADC1 Node Summary Information** 

ADC1 supports all common sample rates from 8kHz to 96kHz and data widths of 16, 20, 24 and 32-bit (Float-32).

The sample rate and word length of the data captured by the ADC1 node is set using the *Stream Format Verb*. Table 9 below shows the required settings for *Base*, *Mult* and *Div* as part of the *Stream Format Verb* to obtain the required sample rate.

Sample Rate	Base	Mult	Div
8kHz	0h	0h	5h
11.025kHz	1h	0h	3h
16kHz	0h	0h	2h
22.05kHz	1h	0h	1h
24kHz	0h	0h	1h
32kHz	0h	1h	2h
44.1kHz	1h	0h	0h
48kHz	0h	0h	0h
88.2kHz	1h	1h	0h
96kHz	0h	1h	0h

Table 9 ADC1 Supported Sample Rate Settings



Note: Other settings of Base, Mult and Div are reserved and should not be set.

The ADC1 output data is by default set to provide the captured waveform from the left channel in Channel 0, and the right channel in Channel 1. It is possible to adjust this mapping using the vendor-specific *Channel Copy Verb*.

SET VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
7B1h	1	CHAN1_	1	Channel 1 (right) Mapping Control:
		SEL		0 = Channel 1 takes data from left audio channel
				1 = Channel 1 takes data from right audio channel
	0	CHAN0_	0	Channel 0 (left) Mapping Control:
		SEL		0 = Channel 0 takes data from left audio channel
				1 = Channel 0 takes data from right audio channel



#### STEREO ANALOGUE MICROPHONE RECORD

Stereo analogue microphone input is supported using the VIN2LP, VIN2LN, VIN2RP and VIN2RN pins; these are available for analogue microphone digitisation through the MIC1 node. The MICBIAS output, controlled via the Port-B node, provides a low noise voltage output suitable for use as a power supply for analogue or digital microphones.

The WM8860 nodes associated with this function are shown in Figure 7.

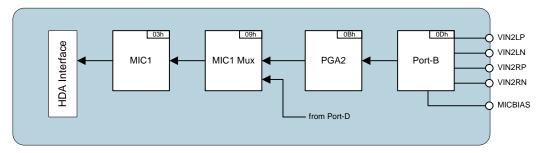


Figure 7 Stereo Analogue Microphone Record Path

This section provides a summary of the Port-B, PGA2, MIC1 Mux and MIC1 nodes, and describes the vendor-specific functions associated with each.

#### PORT-B (NID = 0DH)

Table 10 gives a summary of the Port-B node:

	NODE SUMMARY INFORMATION
NID	0Dh
Widget Type	Pin Complex
Supported Get Verbs	Bh, F00h, F07h, F08h, F09h, F0Ch, F1Ch, F8Eh, FA3h, FB0h
Supported Set Verbs	3h, 707h, 708h, 70Ch, 71Ch, 71Dh, 71Eh, 71Fh, 78Eh, 7A3h, 7B0h
Unsolicited Responses	Presence Detect Status Change
	Impedance Measurement Ready
Vendor-Specific Verbs	F8Eh, 78Eh: Unsolicited Response Priority Control Verb
	FA3h, 7A3h : Differential Verb
	FB0h, 7B0h : Auto-Mute Control Verb

Table 10 Port-B Node Summary Information

Port-B supports three different input configurations, controlled by the *EAPD/BTL Verb* and the vendor-specific *Differential Verb*.

SET VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
70Ch	0	BTL	1h	Controls the configuration of the input pins on Port-E:
				0 = Single-ended mode
				1 = BTL (balanced) mode
7A3h	0	Differential	0h	Differential mode:
		Mode		0 = Differential (microphone)
				1 = Pseudo-differential




The supported input	oonfigurations	ara dagarihad in	Table 11 balaus

BTL	DIFFERENTIAL MODE	MODE	ACTIVE PINS	NOTES
0	X	Single Ended	VIN2LP VIN2RP	Input impedance varies with gain setting – minimum $10k\Omega$ Suitable for microphone or line level signals
1	0	Differential (Microphone)	VIN2LP VIN2LN VIN2RP VIN2RN	Input impedance does not vary with gain setting – typically 120kΩ Suitable for microphone (low-level) signals only
1	1	Pseudo-Differential	VIN2LP VIN2LN VIN2RP VIN2RN	Input impedance varies with gain setting – minimum 10kΩ Suitable for microphone or line level signals

**Table 11 Port-B Configuration Options** 

See Figure 8 for examples of the external connections required in each of the supported input configurations.

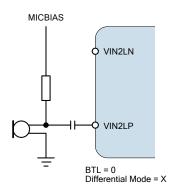

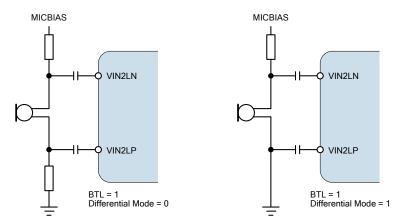


Figure 8 Port-B Example External Connections (one channel shown)

A microphone pre-amplifier is available as part of the Port-B node. This amplifier can be used to boost microphone inputs by +10dB, +20dB or +30dB. Alternatively, the gain of the pre-amplifier can be set to 0dB. It is not possible to use different gain settings for the left and right channels, and the pre-amplifier does not support mute. The microphone pre-amplifier is controlled by the *Amplifier Gain/Mute Verb*.



A low-noise microphone bias generator is provided as part of Port-B, which is suitable for use as a bias supply for analogue microphones. The control of the microphone bias level is via the *Pin Widget Control Verb*.

Port-B supports impedance sensing when using the microphone bias generator; this can be read directly from the *Pin Sense Verb*. Port-B also supports presence detect, using the *Pin Sense Verb*.

If nothing is plugged into Port-B it is possible to use an automute function which will automatically replace the samples in the stream with zeros, thus avoiding any noise being transmitted when there is no input device connected. This function can be enabled using the vendor-specific *Auto-Mute Control Verb*.

SET VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
7B0h	0	PD_ AUTOMUTE	0h	Auto-Mute Control:  0 = Automute disabled  1 = Automute enabled  Note: When PD_AUTOMUTE=1 and Presence Detect (bit 31 in verb F09h)=1 the WM8860 will replace the samples in the stream with zeros

#### PGA2 (NID = 0Bh)

Table 12 gives a summary of the PGA2 node:

	NODE SUMMARY INFORMATION	
NID	0Ch	
Widget Type	Audio Selector	
Supported Get Verbs	Bh, F00h, F02h, <i>FB</i> 2h	
Supported Set Verbs	3h, 7B2h, 7B3h	
Unsolicited Responses	None	
Vendor-Specific Verbs	FB2h, 7B2h, 7B3h : PGA Control Verb	

Table 12 PGA2 Node Summary Information

PGA2 provides analogue gain for the inputs to Port-B, allowing the signal level to be adjusted by up to +/-12dB in 0.5dB steps. Gain can be applied to left and right channels independently if required. Additionally, a mute function is available – again this can be applied to separate channels as required. The gain of PGA2 is controlled using the *Amplifier Gain/Mute Verb*.

PGA2 uses an internal zero cross detect circuit to ensure that all gain changes occur while the signal passes through the zero point. This function eliminates any potential DC steps that can occur if gain changes are applied at other times, and therefore the potential for zipper noise is removed. If no zero cross occurs within a specified time after the gain change is requested via a register write a timeout period will elapse and the gain will be changed regardless. This timeout period can be changed using the vendor-specific *PGA Control Verb*:



SET VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
7B2h 7B3h	13:0	Terminal Count	1FFFh	Set the period of the zero detect timeout clock: $0000h = \text{Timeout disabled}$ $0001h \text{ to } 03FFh = \text{Reserved}$ $0400h = 1025 \times 20.833\mu\text{s} \text{ (21.3ms)}$ $0401h = 1026 \times 20.833\mu\text{s} \text{ (21.4ms)}$
				1FFFh = 8192 × 20.833μs (171ms) 3FFFh = 16384 × 20.833μs (341ms)  Note: The timeout clock uses the SYNC signal from the HDA interface, so the absolute value of the timeout period will depend on the absolute accuracy of the SYNC signal.

#### MIC1 MUX (NID = 09h)

Table 13 gives a summary of the MIC1 Mux node:

NODE SUMMARY INFORMATION				
NID	09h			
Widget Type	Audio Selector			
Supported Get Verbs	F00h, F01h, F02h			
Supported Set Verbs	701h			
Unsolicited Responses	None			

Table 13 MIC1 Mux Node Summary Information

MIC1 Mux is used to select the source of the input to the MIC1 node. This can be either from the analogue microphone input path (from PGA2), or from the digital microphone path (from Port-D). When the MIC1 Mux is selecting the digital microphone input (Port-D) the WM8860 is automatically configured to bypass the analogue to digital converter part of the MIC1 node (NID = 03h).

There are no vendor-specific verbs associated with the MIC1  $\mbox{\it Mux}$  node.

#### MIC1 (NID = 03H)

Table 14 gives a summary of the MIC1 node:

NODE SUMMARY INFORMATION				
NID	02h			
Widget Type Audio Input Converter				
Supported Get Verbs	Ah, F00h, F02h, F03h, F05h, F06h, F08h, F8Eh, FB1h			
Supported Set Verbs	2h, 703h, 705h, 706h, 708h, 78Eh, 7B1h			
Unsolicited Responses	Stream Drop			
Vendor-Specific Verbs	F8Eh, 78Eh: Unsolicited Response Priority Control Verb			
	FB1h, 7B1h : Channel Copy Verb			

**Table 14 MIC1 Node Summary Information** 

MIC1 contains a high performance stereo ADC intended for capture of microphone inputs to the WM8860. MIC1 supports all common sample rates from 8kHz to 48kHz and data widths of 16, 20, 24 and 32-bit (Float-32). The actual processing used by this node is dependant on the type of input received from the MIC1 Mux (NID = 09h), as the input to MIC1 may come from either an analogue or digital microphone.



Regardless of the type of input, the sample rate and word length of the data captured by the MIC1 node is set using the *Stream Format Verb*. Table 15 below shows the required settings for *Base*, *Mult* and *Div* as part of the *Stream Format Verb* to obtain the required sample rate.

When a digital microphone is being used, the DMICCLK output frequency will be set according to the *Stream Format Verb*. See "Digital Microphone Record" for details of the DMICCLK frequency.

SAMPLE RATE	BASE	MULT[2:0]	DIV[2:0]
8kHz	0h	0h	5h
11.025kHz	1h	0h	3h
16kHz	0h	0h	2h
22.05kHz	1h	0h	1h
32kHz	0h	1h	2h
44.1kHz	1h	0h	0h
48kHz	0h	0h	0h

Table 15 MIC1 Supported Sample Rate Settings

Note: Other settings of Base, Mult and Div are reserved and should not be set.

The MIC1 output data is by default set to provide the captured waveform from the left channel in Channel 0, and the right channel in Channel 1. It is possible to adjust this mapping using the vendor-specific *Channel Copy Verb*.

SET VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION	
7B1h	1	CHAN1_	1	Channel 1 (right) Mapping Control:	
		SEL		0 = Channel 1 takes data from left audio channel	
				1 = Channel 1 takes data from right audio channel	
	0	CHAN0_	0	Channel 0 (left) Mapping Control:	
		SEL		0 = Channel 0 takes data from left audio channel	
				1 = Channel 0 takes data from right audio channel	



#### **DIGITAL MICROPHONE RECORD**

Digital microphone input is supported using the DMICDAT1, DMICDAT2 and DMICCLK pins; these allow up to four independent digital microphones to be connected through the MIC1 and MIC2 nodes.

The digital microphone interface accepts unfiltered PDM on the DMICDAT1 and DMICDAT2 pins and can recover data from both the high and low periods of the DMICCLK. Two microphone channels are interleaved on DMICDAT1; another two channels are interleaved on DMICDAT2. The timing is illustrated in Figure 9. Each microphone must tri-state its data output when the other microphone is transmitting.




Figure 9 Digital Microphone Interface Protocol for One (left) or Four (right) Microphones

The WM8860 nodes associated with this function are shown in Figure 10.

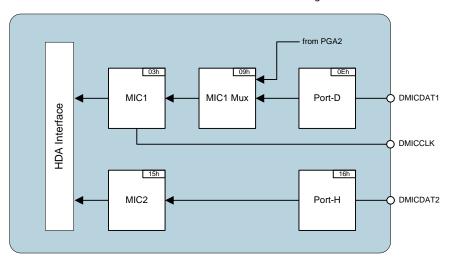


Figure 10 Digital Microphone Record Path

This section provides a summary of the Port-D, Port-H and MIC2 nodes, and describes the vendor-specific verb functions associated with each.

The MIC1 Mux and MIC1 nodes are described in the "Stereo Analogue Microphone Record" section.



#### PORT-D (NID = 0Eh)

Table 16 gives a summary of the Port-D node:

	NODE SUMMARY INFORMATION	
NID	0Eh	
Widget Type	Pin Complex	
Supported Get Verbs	Bh, F00h, F07h, F1Ch	
Supported Set Verbs	3h, 707h, 71Ch, 71Dh, 71Eh, 71Fh	
Unsolicited Responses	None	

**Table 16 Port-D Node Summary Information** 

Port-D provides digital gain for the microphone(s) connected to DMICDAT1, allowing the signal level to be adjusted by up to +32dB to -12dB in 0.5dB steps. Gain can be applied to left and right channels independently if required. Additionally, a mute function is available – again this can be applied to separate channels as required. The gain is controlled using the *Amplifier Gain/Mute Verb*.

There are no vendor-specific verbs associated with the Port-D node.

#### PORT-H (NID = 16H)

Table 17 gives a summary of the Port-H node:

NODE SUMMARY INFORMATION				
NID	16h			
Widget Type	Pin Complex			
Supported Get Verbs	Bh, F00h, F02h, F07h, F1Ch			
Supported Set Verbs 3h, 707h, 71Ch, 71Dh, 71Eh, 71Fh				
Unsolicited Responses	None			

Table 17 Port-H Node Summary Information

Port-H provides digital gain for the microphone(s) connected to DMICDAT2, allowing the signal level to be adjusted by up to +32dB to -12dB in 0.5dB steps. Gain can be applied to left and right channels independently if required. Additionally, a mute function is available – again this can be applied to separate channels as required. The gain is controlled using the *Amplifier Gain/Mute Verb*.

There are no vendor-specific verbs associated with the Port-H node.



#### MIC2 (NID = 15h)

Table 18 gives a summary of the MIC2 node:

	NODE SUMMARY INFORMATION		
NID	15h		
Widget Type Audio Input Converter			
Supported Get Verbs	Ah, F00h, F02h, F03h, F06h, F08h, F8Eh, FB1h		
Supported Set Verbs	703h, 706h, 708h, 78Eh, 7B1h		
Unsolicited Responses	Stream Drop		
Vendor-Specific Verbs	F8Eh, 78Eh: Unsolicited Response Priority Control Verb		
	FB1h, 7B1h : Channel Copy Verb		

**Table 18 MIC2 Node Summary Information** 

The MIC2 node supports digital audio input at all common sample rates from 8kHz to 48kHz.

Note that the *Stream Format Verb* in the MIC2 widget (NID = 15h) is read-only; the associated parameters will echo the values set in the same verb in the MIC1 widget.

The MIC2 output data is by default set to provide the captured waveform from the left channel in Channel 0, and the right channel in Channel 1. It is possible to adjust this mapping using the vendor-specific *Channel Copy Verb*:

SET VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
7B1h	1	CHAN1_	1	Channel 1 (right) Mapping Control:
		SEL		0 = Channel 1 takes data from left audio channel
				1 = Channel 1 takes data from right audio channel
	0	CHAN0_	0	Channel 0 (left) Mapping Control:
		SEL		0 = Channel 0 takes data from left audio channel
				1 = Channel 0 takes data from right audio channel

#### **DIGITAL MICROPHONE INTERFACE CLOCK RATES**

The sample rate of data captured by the digital microphone interface is controlled by the Stream Format Verb in the MIC1 widget (NID = 03h). Note that the *Stream Format Verb* in the MIC2 widget (NID = 15h) will echo the values set in the same verb in the MIC1 widget. This is necessary as DMICCLK is shared between the DMICDAT1 and DMICDAT2 pins.

The DMICCLK frequency will output at the rates shown in Table 19, which also contains the required settings for Base, Mult and Div as part of the Stream Format Verb of the MIC1 widget to obtain the required sample rate:

SAMPLE RATE	BASE	MULT[2:0]	DIV[2:0]	DMICCLK FREQUENCY	PROCESSING RATE
8kHz	0h	0h	5h	1.024MHz	128fs
11.025kHz	1h	0h	3h	1.4112MHz	128fs
16kHz	0h	0h	2h	1.024MHz	64fs
22.05kHz	1h	0h	1h	1.4112MHz	64fs
32kHz	0h	1h	2h	2.048MHz	64fs
44.1kHz	1h	0h	0h	2.8224MHz	64fs
48kHz	0h	0h	0h	3.072MHz	64fs

Table 19 MIC1 Supported Sample Rate Settings for Digital Microphone Interface

Note: Other settings of Base, Mult and Div are reserved and should not be set.



#### STEREO HEADPHONE PLAYBACK

Stereo headphone playback is supported using the VOUT1L and VOUT1R pins; these provide a ground-referenced stereo output through the DAC1 node. This output is intended for headphones, but can be used as a single-ended line output if required. This path can provide two channels of a multi-channel playback system, operating alongside the other DAC path.

The WM8860 nodes associated with this function are shown in Figure 11.




Figure 11 Stereo Headphone Playback Path

This section provides a summary of the DAC1 and Port-A, and describes the vendor-specific verb functions associated with each.

#### DAC1 (NID = 06H)

Table 20 gives a summary of the DAC1 node:

	NODE SUMMARY INFORMATION
NID	06h
Widget Type	Audio Converter
Supported Get Verbs	Ah, Bh, F00h, F05h, F06h, F08h, <i>F8Eh</i>
Supported Set Verbs	2h, 3h, 705h, 706h, 708h, 78Eh
Unsolicited Responses	Stream Error
Vendor-Specific Verbs	F8Eh, 78Eh: Unsolicited Response Priority Control Verb

**Table 20 DAC1 Node Summary Information** 

DAC1 is a high performance stereo DAC that supports all common sample rates from 8kHz to 192kHz and data widths of 16, 20, 24 and 32-bit (Float-32).

The sample rate and word length of the data played back by the DAC1 node is set using the *Stream Format Verb*. Table 9 below shows the required settings for *Base*, *Mult* and *Div* as part of the *Stream Format Verb* to obtain the required sample rate.



SAMPLE RATE	BASE	MULT	DIV
8kHz	0h	0h	5h
11.025kHz	1h	0h	3h
16kHz	0h	0h	2h
22.05kHz	1h	0h	1h
24kHz	0h	0h	1h
32kHz	0h	1h	2h
44.1kHz	1h	0h	0h
48kHz	0h	0h	0h
88.2kHz	1h	1h	0h
96kHz	0h	1h	0h
176.4kHz	1h	3h	0h
192kHz	0h	3h	0h

Table 21 DAC1 Supported Sample Rate Settings

Note: Other settings of Base, Mult and Div are reserved and should not be set.

DAC1 provides digital gain, allowing the signal level to be adjusted between 0dB and -63.5dB in 0.5dB steps. Gain can be applied to left and right channels independently if required. Additionally, a digital softmute function is available – again this can be applied to separate channels as required. The gain of DAC1 is controlled using the *Amplifier Gain/Mute Verb*.

**Note**: When Port-A is configured to drive headphones (*H-Phn Enable* = 1) the actual gain settings applied will be adjusted by a further -8.0dB. This changes the effective gain range to -71.5dB to -8.0dB.



#### PORT-A (NID = 11H)

Table 22 gives a summary of the Port-A node:

	NODE SUMMARY INFORMATION	
NID	11h	
Widget Type	Pin Complex	
Supported Get Verbs	F00h, F02h, F07h, F08h, F09h, F1Ch, <i>F8Eh</i>	
Supported Set Verbs	707h, 708h, 709h, 71Ch, 71Dh, 71Eh, 71Fh, 78Eh	
Unsolicited Responses	Presence Detect	
Vendor-Specific Verbs	F8Eh, 78Eh: Unsolicited Response Priority Control Verb	

Table 22 Port-A Node Summary Information

Port-A contains a ground-referenced headphone driver which negates the requirement for large AC-coupling capacitors commonly required for headphone applications. The headphone driver is powered by an on-board charge pump which generates the required positive and negative supply voltages. Configuration of this block is handled automatically by the WM8860, and the required external components to enable optimum performance of the charge pump are given in the "Applications Information" section.



#### STEREO LINE PLAYBACK

Stereo line playback is supported using the VOUT2LP, VOUT2LN, VOUT2RP and VOUT2RN pins; these provide a differential stereo output through the DAC2 node. These outputs are intended for line-level loads; the differential configuration provides noise rejection, particularly in the case of lengthy signal tracks. An external differential to single-ended converter should be used for connection to an external stereo jack. This path can provide two channels of a multi-channel playback system, operating alongside the other DAC path.

The WM8860 nodes associated with this function are shown in Figure 12.




Figure 12 Stereo Differential Line Playback Path

This section provides a summary of the DAC2 and Port-G nodes, and describes the vendor-specific verb functions associated with each.

# DAC2 (NID = 07h)

Table 23 gives a summary of the DAC2 node:

	NODE SUMMARY INFORMATION
NID	07h
Widget Type	Audio Converter
Supported Get Verbs	Ah, Bh, F00h, F05h, F06h, F08h, <i>F8Eh</i>
Supported Set Verbs	2h, 3h, 705h, 706h, 708h, <i>78Eh</i>
Unsolicited Responses	Stream Error
Vendor-Specific Verbs	F8Eh, 78Eh : Unsolicited Response Priority Control Verb

**Table 23 DAC2 Node Summary Information** 



DAC2 is a high performance stereo DAC that supports all common sample rates from 8kHz to 192kHz and data widths of 16, 20, 24 and 32-bit (Float-32).

The sample rate and word length of the data played back by the DAC2 node is set using the *Stream Format Verb*. Table 24 below shows the required settings for *Base*, *Mult* and *Div* as part of the *Stream Format Verb* to obtain the required sample rate.

SAMPLE RATE	BASE	MULT	DIV
8kHz	0h	0h	5h
11.025kHz	1h	0h	3h
16kHz	0h	0h	2h
22.05kHz	1h	0h	1h
24kHz	0h	0h	1h
32kHz	0h	1h	2h
44.1kHz	1h	0h	0h
48kHz	0h	0h	0h
88.2kHz	1h	1h	0h
96kHz	0h	1h	0h
176.4kHz	1h	3h	0h
192kHz	0h	3h	0h

Table 24 DAC2 Supported Sample Rate Settings

Note: Other settings of Base, Mult and Div are reserved and should not be set.

DAC2 provides digital gain, allowing the signal level to be adjusted between 0dB and -63.5dB in 0.5dB steps. Gain can be applied to left and right channels independently if required. Additionally, a digital softmute function is available – again this can be applied to separate channels as required. The gain of DAC2 is controlled using the *Amplifier Gain/Mute Verb*.



#### PORT-G(NID = 12h)

Table 25 gives a summary of the Port-G node:

NODE SUMMARY INFORMATION		
NID	12h	
Widget Type	Pin Complex	
Supported Get Verbs	F00h, F02h, F07h, F08h, F09h, F1Ch, <i>F8Eh</i>	
Supported Set Verbs	707h, 708h, 709h, 71Ch, 71Dh, 71Eh, 71Fh, 78Eh	
Unsolicited Responses	Presence Detect	
Vendor-Specific Verbs	F8Eh, 78Eh: Unsolicited Response Priority Control Verb	

Table 25 Port-G Node Summary Information

Port-G contains a VMID-referenced differential line driver which requires AC-coupling if driving outputs directly. It is possible to use the output in a single-ended configuration if required; note that this will result in a drop in signal level of 6dB.

If a single-ended output is required, VOUT2LP and VOUT2RP should be used to connect to the load, and VOUT2LN and VOUT2RN should be left unconnected. There is no requirement to change register settings or provide any additional external components to compensate for the unconnected output pins.



#### S/PDIF TRANSMIT

S/PDIF Transmit functionality is supported using the SPDIFOUT pin; this provides an IEC-60958-3 compatible S/PDIF output through the S/PDIF Tx 1 node.

It is possible to configure the S/PDIF output to select the ADC1, MIC1 or MIC2 nodes as the data source. These signal paths are enabled using vendor-specific verbs, and are illustrated by dotted lines in Figure 13.

The S/PDIF transmitter allows control over the channel status information.

The WM8860 nodes associated with this function are shown in Figure 13.




Figure 13 S/PDIF Transmit Paths

This section provides a summary of the S/PDIF Tx 1 and S/PDIF Out nodes, and describes the vendor-specific verb functions associated with each.



#### S/PDIF TX 1 (NID = 04h)

Table 26 gives a summary of the S/PDIF Tx 1 node:

	NODE SUMMARY INFORMATION	
NID	04h	
Widget Type	Audio Output	
Supported Get Verbs	Ah, F00h, F06h, F08h, F0Dh, F73h, F80h, F81h, F85h, F8Eh	
Supported Set Verbs	2h, 706h, 708h, 70Dh, 70Eh, 773h, 780h, 781h, 782h, 783h, 784h, 785h, 78Eh	
Unsolicited Responses	SRC2 Lock Status	
	Stream Error	
Vendor-Specific Verbs	F73h, 773h : Internal Path Verb	
	F81h, 781h, 782h, 783h, 784h : Tx Channel Status Control Verb	
	F85h, 785h : Channel Status Data Packing Configuration Verb	
	F8Eh, 78Eh: Unsolicited Response Priority Control Verb	

Table 26 S/PDIF Tx 1 Node Summary Information

The S/PDIF Tx 1 node controls the formatting of the IEC-60958-3 compatible S/PDIF output stream.

Under default conditions, the S/PDIF Tx 1 node will process data received from the HDA interface. In this case, the S/PDIF stream is controlled directly from the Stream Format Verb, as illustrated in Figure 14.




Figure 14 S/PDIF Transmit Function

It is also possible to select ADC1, MIC1 or MIC2 as the data source, using the vendor-specific *Internal Path Verb*.

When ADC1, MIC1 or MIC2 is selected as the input to the S/PDIF Tx 1 node, the *Mult / Base / Div* fields in the *Stream Format Verb* become read-only and are set according to the selected source node.

SET VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
773h	7:0	Path Sel	00h	Selects the source of the S/PDIF Tx 1 node:  00h = HDA Link  02h = ADC1  03h = MIC1
				15h = MIC2



The *Digital Converter Verb* is supported by the S/PDIF Tx 1 node, allowing selected channel status information as defined in the HDA Specification to be set. It is also possible to set the remaining bits of channel status data as defined in IEC-60958-3, using the vendor-specific *Tx Channel Status Control Verb*.

SET VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
784h	7:4	Channel Status [39:36]	0h	Original Sampling Frequency
	3:1	Channel Status [35:33]	5h	Sample Word Length
	0	Channel Status [32]	1	Max Word Length
783h	7:6	Channel Status [31:30]	0h	Channel Status [31:30]
	5:4	Channel Status [29:28]	0h	Clock Accuracy
	3:0	Channel Status [27:24]	1h	Sampling Frequency
782h	7:4	Channel Status [23:20]	0h	Channel Number for Sub-Frame B
	3:0	Channel Status [23:20]	0h	Channel Number for Sub-Frame A
781h	7:4	Channel Status [19:16]	0h	Source Number
	3:2	Channel Status [7:6]	0h	Channel Status Mode
	1:0	Channel Status [5:4]	0h	Additional De-emphasis information

#### Notes:

- 1. See IEC-60958-3 for full definitions of the channel status bits
- The channel number of Sub-Frame B is uniquely configuration all other channel status bits in Sub-Frame B have the same value as Sub-Frame A
- Remaining channel status bits are set using the Digital Converter Verb as per the HDA Specification



Under default conditions, the WM8860 will pack the S/PDIF Tx Channel Status Data with the correct values of Sampling Frequency and Sample Word Length automatically, taking into account the various routing options through the chip. This means the Channel Status Data always reflects the same rate as the physical S/PDIF stream.

If required, this behaviour can be disabled using the vendor-specific *Channel Status Data Packing Configuration Verb.* When *CSD\_MODE* is set to 0, the S/PDIF Tx Channel Status Data is completely defined using the vendor-specifc *Tx Channel Status Control Verb.* 

SET VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
785h	0	CSD_MODE	1	S/PDIF Transmitter Channel Status Data Packing Mode:
				0 = Manual mode: sample rate and data width channel status data packed from data sourced from the <i>Tx Channel Status Control Verb</i>
				1 = Automatic mode: sample rate and data width channel status data packed from data sourced from the <i>Stream Verb</i> , <i>S/PDIF Verb</i>

# S/PDIF OUT (NID = 0Fh)

Table 27 gives a summary of the S/PDIF Out node:

	NODE SUMMARY INFORMATION
NID	0Fh
Widget Type	Pin Complex
Supported Get Verbs	F00h, F02h, F07h, F08h, F09h, F1Ch, <i>F8Eh</i>
Supported Set Verbs	707h, 708h, 71Ch, 71Dh, 71Eh, 71Fh, 78Eh
Unsolicited Responses	Presence Detect
Vendor-Specific Verbs	F8Eh, 78Eh : Unsolicited Response Priority Control Verb

Table 27 S/PDIF Out Node Summary Information

The S/PDIF Out node controls the physical output to the SPDIFOUT pin.



#### **ANCILLARY FUNCTIONS**

The WM8860 contains a beep widget suitable for the playback of system beeps to the analogue output widgets.

# BEEP (NID = 14h)

Table 28 gives a summary of the Beep node:

	NODE SUMMARY INFORMATION
NID	14h
Widget Type	Beep Generator
Supported Get Verbs	Bh, F00h, F0Ah, <i>F72h</i>
Supported Set Verbs	3h, 70Ah, <i>772h</i>
Unsolicited Responses	Not supported
Vendor-Specific Verbs	F72h, 772h : Beep Mask Selection Verb

**Table 28 Beep Node Summary Information** 

The Beep node controls the system beep sound created by the WM8860. The volume of the beep signal is controlled using the *Amplifier Gain/Mute Verb*. The frequency of the beep signal is controlled using the *Beep Generation Verb*.

The beep signal overrides any sound currently being reproduced in the output path. Under default conditions, the beep is applied to all active outputs simultaneously. It is possible to mask the beep generator output to appear only at specific output nodes using the vendor-specific *Beep Mask Selection Verb*.

SET VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
772h	2	Port-A Beep Mask	0h	Beep mask enable for Port-A (DAC1)  0h = Beep produced on Port-A
				1h = Beep not produced on Port-A
				III = Beep not produced on Fort-A
	1	Port-G Beep	0h	Beep mask enable for Port-G (DAC2)
		Mask		0h = Beep produced on Port-G
				1h = Beep not produced on Port-G

#### **AUDIO FUNCTION GROUP (NID = 01h)**

Table 29 gives a summary of the Audio Function Group node:

	NODE SUMMARY INFORMATION
NID	01h
Widget Type	Audio Function Group
Supported Get Verbs	F00h, F05h, F08h, F15h, F16h, F17h, F18h, F19h, F1Ah, F20h, F71h, F86h, F8Eh
Supported Set Verbs	7FFh, 705h, 708h, 715h, 716h, 717h, 718h, 719h, 71Ah, 720h, 721h, 722h, 723h, <i>771h, 786h, 78Eh</i>
Unsolicited Responses	GPIO status change
Vendor-Specific Verbs	F71h, 771h : VMID Control Verb
	F86h, 786h : GPIO Automatic Control Verb
	F8Eh, 78Eh: Unsolicited Response Priority Control Verb

Table 29 Audio Function Group Node Summary Information



#### **VMID Voltage Reference Control**

The analogue circuits in the WM8860 require a mid-rail analogue reference voltage, VMID. This reference is generated from AVDD via a programmable resistor chain. Together with the external VMID decoupling capacitor, the programmable resistor chain determines the charging rate on VMID. The resistor chain is selected using *VMID\_SEL*, and can be used to optimise the reference for normal operation, low power standby or for fast start-up.

The VMID charge rate is controlled by VMID\_SEL and the external VMID capacitor. The VMID\_RATE field can be used to control the WM8860 power state according to the appropriate VMID conditions. In start-up from power state D4, the WM8860 will not indicate the D3 power state until the time set by VMID\_RATE has elapsed.

The VMID\_SEL and VMID\_RATE fields are part of the VMID Control Verb.

SET VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
771h	4:2	VMID_RATE	2h	Time allocated to charge VMID:
				0h = 1024ms
				1h = 512ms
				2h = 256ms
				3h = 128ms
				4h = 64ms
				5h = 32ms
				6h = 16ms
				7h = 8ms
	1:0	VMID_SEL	2h	VMID String Source Impedance Select:
				$0h = 12.5k\Omega$
				1h = 75kΩ
				$2h = 37.5k\Omega$
				$3h = 375k\Omega$
				<b>Note:</b> These figures give the value of the resistor from AVDD to VMID and from VMID to GND.

#### **GPIO2 Automatic Control Mode**

The GPIO Automatic Control Verb controls the behaviour of the GPIO2 pin.

In a system where external speaker amplifiers are connected to the WM8860 the GPIO2 pin may be used to control the enable pin(s) of these amplifiers. For this application, it is possible to automatically configure the GPIO2 pin as an output and to control its logic level as a function of the AFG power state. This function is enabled by setting GPIO2\_AUTO=1 in the vendor-specifc *GPIO Automatic Control Verb*:

SET	VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
786	3h	0	GPIO2_	1	GPIO2 Control Mode:
			AUTO		0 = GPIO2 Manual Mode
					1 = GPIO Automatic Control Mode

The behaviour of GPIO2 when GPIO2\_AUTO=1 is summarised in Table 30 below. When GPIO2\_AUTO=0 the behaviour of GPIO2 is as per the standard GPIO verbs.



AFG PS-Act	GPIO2 Output
0	Logic 1
1	Logic 1
2	Logic 0
3	Logic 0
4	Logic 0

**Table 30 GPIO2 Automatic Control Mode Summary** 

# **Unsolicited Response Priority Control Verb**

The *Unsolicited Response Priority Control Verb* is supported by multiple nodes within the WM8860, including the Audio Function Group (AFG) node. This verb allows the Unsolicited Responses associated with each node to be prioritised relative to the other nodes.

The priority level for each node is set using the *Priority* field within the *Unsolicited Response Priority Control Verb.* When more than one Unsolicited Response is awaiting transmission, the node with the lowest *Priority* is placed at the front of the queue. Nodes that have the same *Priority* setting are queued on a 'first to trigger' basis.

Note that the lowest value of *Priority* represents the highest position in the queue.

The Unsolicited Response Priority Control Verb is defined as follows.

SET VERB	BIT	BITFIELD NAME	DEFAULT	DESCRIPTION
78Eh	4:0	Priority	00h	Assigns a priority setting for queued Unsolicited Responses. Nodes with the lowest value have the highest priority, and so go to the front of the Unsolicited Response queue. Nodes with the same value for priority are queued on first-to-trigger basis.  00h = Highest priority  1Fh = Lowest priority.



#### **UNSOLICITED RESPONSES**

The High Definition Audio Specification provides support for software interrupts to be generated by the CODEC independent of verb commands sent to the CODEC: these are known as Unsolicited Responses. This section defines how the WM8860 creates Unsolicited Responses, explains some of the novel features in the WM8860 to manage them, and what each Unsolicited Response from each node represents. This section assumes familiarity with the High Definition Audio Specification.

#### **GENERATING UNSOLICITED RESPONSES**

Unsolicited Responses can only be sent wherever a null response would normally be sent.

Unsolicited Responses are queued on a frame-basis. That is, if an Unsolicited Response is issued in the current frame, it is sent on the next frame containing a null response.

#### **PRIORITY QUEUING**

Where more than one Unsolicited Response is awaiting transmission, they are queued such that the Unsolicited Response with the lowest *Priority* value (set using the *Unsolicited Response Priority Control Verb*) is at the front of the queue. Nodes that have the same *Priority* setting are queued on a 'first-to-trigger' basis.

The *Unsolicited Response Priority Control Verb* is described in the "Ancillary Functions" section describing the Audio Function Group node.

#### **IN-QUEUE-UPDATE**

The WM8860 stores all flags that trigger an Unsolicited Response. If a node triggers an Unsolicited Response, the Unsolicited Response is queued as described above. Should the same node trigger a second Unsolicited Response (from a different flag within that node) while the first is being queued, the Unsolicited Response is updated to show both flags. This is known as an 'In-Queue-Update'. Should the same node trigger a second Unsolicited Response (from the same flag within the node) while the first is being queued, only one Unsolicited Response is sent for both events.



The concepts of Priority Queuing and In-Queue-Update are illustrated with the example in Figure 15.

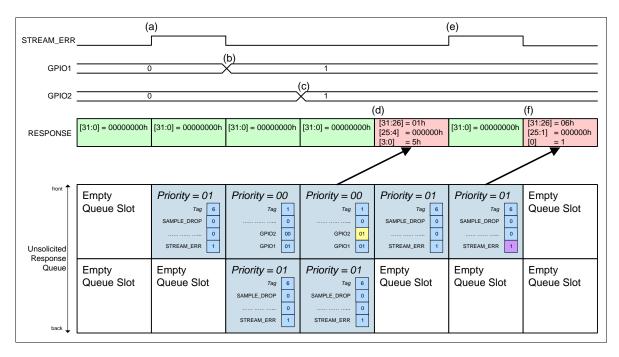


Figure 15 Priority Queuing and In-Queue Updates

- a) STREAM\_ERR flag asserts from DAC1 Node (NID = 06h), and an Unsolicited Response (Tag ID = 06h) is queued awaiting a null response slot. STREAM\_ERR rescinds at the end of the HDA frame.
- b) GPIO1 input changes to a 1 so the GPIO1 flag (from AFG NID = 01h) asserts and queues an Unsolicited Response (Tag ID = 01h). This Unsolicited Response goes to the front of the queue as its Priority value is lower (indicating higher priority) than the Priority setting of the Unsolicited Response presently at the front of the queue.
- c) GPIO2 input changes to a 1 so the GPIO2 flag asserts. The GPIO2\_UPD flag is from the AFG (NID = 01h), and as there is already an Unsolicited Response from this node in the queue, the queued Unsolicited Response is updated to show both events (as highlighted with the yellow box). This is known as an 'In-Queue-Update'.
- d) A slot becomes available for sending an Unsolicited Response, so the AFG Unsolicited Response is transmitted as it is at the front of the queue.
- e) STREAM\_ERR asserts from DAC1 Node (NID = 06h). As there is already an Unsolicited Response in the queue from this node, the Unsolicited Response is simply updated (as shown in the purple box). However, the queued Unsolicited Response already shows that there has been a STREAM\_ERR flag so the In-Queue-Update does not actually change the Unsolicited Response value.
- f) A slot becomes available for sending an Unsolicited Response, so the Unsolicited Response (Tag ID = 06h) is transmitted.



#### **UNSOLICITED RESPONSE TYPES**

There are three types of flags that are returned by the WM8860, prefixed in the register map as follows:

#### SF = UNSOLICITED RESPONSE STATUS FLAG

Unsolicited Response Status Flags (SF) are used to indicate that there has been a change in flag state, and (where possible) convey what the new state is. A change in state is typically something that will persist for a number of HDA frames. A state change will trigger an Unsolicited Response, but it is possible that a state change can occur more than once while an Unsolicited Response is being queued.

To indicate this, Unsolicited Response Status Flags are 2-bits wide and are encoded as follows:

0h = Flag did not trigger Unsolicited Response.

1h = Rising edge of flag triggered Unsolicited Response.

2h = Falling edge of flag triggered Unsolicited Response.

3h = Rising and falling edges of the flag have been detected while the Unsolicited Response has been queued

When the Unsolicited Response Status Flag is reported as 0h, the user is informed that there has been no change in status. When the Unsolicited Response Status Flag is reported as 1h or 2h, the user is informed that there has been a change in status and what the new status value is. When the Unsolicited Response Status Flag is reported as 3h, the user is informed of a multiple change in status, and the user should read the associated flag's status register to get the current status value of the flag.

#### **UF = UNSOLICITED RESPONSE UPDATE FLAG**

Unsolicited Response Update Flags (UF) are used to indicate that there has been one or more changes to the value of some status registers. The status register should be read (through the issue of the appropriate Get command), to see the current register value.

#### **EF = UNSOLICITED RESPONSE EVENT FLAG**

Unsolicited Response Event Flags (EF) are used to indicate that an event has occurred during an HDA Frame. The occurrence of an event will trigger an Unsolicited Response.



# **UNSOLICITED RESPONSE DEFINITIONS**

Table 31 gives a summary of the definitions of the Unsolicited Responses from each node in the WM8860. Note that these responses are generated only when the node is set to generate them, using the *Unsolicited Reponse Verb* as defined in the HDA specification.

NID	NODE			UNSOLICITED RESPONSE
	NAME	BIT	FLAG NAME	DESCRIPTION
01h	AFG	[31:26]	Tag	A software programmable tag value. The default value is equal to the Node ID. Other values can be configured using the Unsolicited Response Verb.
		[25:4]	Rsvd	Reserved
		[3:2]	SF_GPIO2	Indicates that the value on GPIO2 (configured as an input) has changed, and reports new status value.
				When the AFG is in power state D0, D1 or D2, a change in GPIO status triggers an Unsolicited Response.
				When the AFG is in power state D3, a change in GPIO status triggers a power state change request.
				Note that the status value is also accessible through the Get GPIO Data Verb.
		[1:0]	SF_GPIO1	Indicates that the value on GPIO1 (configured as an input) has changed, and reports new status value.
				When the AFG is in power state D0, D1 or D2, a change in GPIO status triggers an Unsolicited Response.
				When the AFG is in power state D3, a change in GPIO status triggers a power state change request.
				Note that the status value is also accessible through the Get GPIO Data Verb.
02h	ADC1	[31:26]	Tag	A software programmable tag value. The default value is equal to the Node ID. Other values can be configured using the Unsolicited Response Verb.
		[25:1]	Rsvd	Reserved
		[0]	EF_STREAM_DROP	Indicates that the stream associated with the ADC1 node has been dropped due to the bandwidth of the SDI line being oversubscribed.
				Assertion of the flag triggers an Unsolicited Response.
				The flag is cleared when the Stream ID is written to.
03h	MIC1	[31:26]	Tag	A software programmable tag value. The default value is equal to the Node ID. Other values can be configured using the Unsolicited Response Verb.
		[25:1]	Rsvd	Reserved
		[0]	EF_STREAM_DROP	Indicates that the stream associated with the MIC1 node has been dropped due to the bandwidth of the SDI line being oversubscribed.
				Assertion of the flag triggers an Unsolicited Response.
				The flag is cleared when the Stream ID is written to.



NID	NODE			UNSOLICITED RESPONSE
	NAME	BIT	FLAG NAME	DESCRIPTION
04h	S/PDIF TX 1	[31:26]	Tag	A software programmable tag value. The default value is equal to the Node ID. Other values can be configured using the Unsolicited Response Verb.
		[25:3]	Rsvd	Reserved
		[2]	EF_STREAM_ERR	Indicates that an error has occurred in the transfer of data from the HDA Link to the Stream Manager.
				Assertion of the flag triggers an Unsolicited Response.
				The flag rescinds at the end of the present HDA frame.
		[1:0]	SF_SRC2	Indicates that the lock status of SRC2 has changed, and reports the new lock status.
				A change in status triggers an Unsolicited Response.
				The status value is also accessible through the Get SRC Verb.
06h	DAC1	[31:26]	Tag	A software programmable tag value. The default value is equal to the Node ID. Other values can be configured using the Unsolicited Response Verb.
		[25:1]	Rsvd	Reserved
		[0]	EF_STREAM_ERR	Indicates that an error has occurred in the transfer of data from the HDA Link to the Stream Manager.
				Assertion of the flag triggers an Unsolicited Response.
				The flag is cleared at the end of the present HDA frame.
07h	DAC2	[31:26]	Tag	A software programmable tag value. The default value is equal to the Node ID. Other values can be configured using the Unsolicited Response Verb.
		[25:1]	Rsvd	Reserved
		[0]	EF_STREAM_ERR	Indicates that an error has occurred in the transfer of data from the HDA Link to the Stream Manager.
				Assertion of the flag triggers an Unsolicited Response.
				The flag is cleared at the end of the present HDA frame.



NID	NODE			UNSOLICITED RESPONSE
	NAME	BIT	FLAG NAME	DESCRIPTION
0Ch	Port-E	[31:26]	Tag	A software programmable tag value. The default value is equal to the Node ID. Other values can be configured using the Unsolicited Response Verb.
		[25:2]	Rsvd	Reserved
		[1:0]	SF_PD	Indicates that the Presence Detect value (in the <i>Pin Sense Verb</i> ) has changed.
				A change in status triggers an Unsolicited Response (when the AFG is in power state D0, D1, D2) or it triggers a power state change request (when the AFG is in power state D3).
				The status value is also accessible through the Get Pin Sense Verb.
0Dh	Port-B	[31:26]	Tag	A software programmable tag value. The default value is equal to the Node ID. Other values can be configured using the Unsolicited Response Verb.
		[25:3]	Rsvd	Reserved
		[2]	EF_IMP	Indicates that the Impedance Sense value is ready.
				Assertion of the flag triggers an Unsolicited Response.
				The flag is cleared on an issue of a Get Pin Sense Verb.
		[1:0]	SF_PD	Indicates that the Presence Detect value (in the <i>Pin Sense Verb</i> ) has changed.
				A change in status triggers an Unsolicited Response (when the AFG is in power state D0, D1, D2) or it triggers a power state change request (when the AFG is in power state D3).
				The status value is also accessible through the Get Pin Sense Verb.
0Fh	S/PDIF Out	[31:26]	Tag	A software programmable tag value. The default value is equal to the Node ID. Other values can be configured using the Unsolicited Response Verb.
		[25:2]	Rsvd	Reserved
		[1:0]	SF_PD	Indicates that the Presence Detect value (in the <i>Pin Sense Verb</i> ) has changed.
				A change in status triggers an Unsolicited Response (when the AFG is in power state D0, D1, D2) or it triggers a power state change request (when the AFG is in power state D3).
				The status value is also accessible through the Get Pin Sense Verb.
11h	Port-A	[31:26]	Tag	A software programmable tag value. The default value is equal to the Node ID. Other values can be configured using the Unsolicited Response Verb.
		[25:2]	Rsvd	Reserved



NID	NODE	UNSOLICITED RESPONSE					
	NAME	BIT	FLAG NAME	DESCRIPTION			
		[1:0]	SF_PD	Indicates that the Presence Detect value (in the <i>Pin Sense Verb</i> ) has changed.			
				A change in status triggers an Unsolicited Response (when the AFG is in power state D0, D1, D2) or it triggers a power state change request (when the AFG is in power state D3).			
				The status value is also accessible through the Get Pin Sense Verb.			
12h	Port-G	[31:26]	Tag	A software programmable tag value. The default value is equal to the Node ID. Other values can be configured using the Unsolicited Response Verb.			
		[25:2]	Rsvd	Reserved			
		[1:0]	SF_PD	Indicates that the Presence Detect value (in the <i>Pin Sense Verb</i> ) has changed.			
				A change in status triggers an Unsolicited Response (when the AFG is in power state D0, D1, D2) or it triggers a power state change request (when the AFG is in power state D3).			
				The status value is also accessible through the Get Pin Sense Verb.			
15h	MIC2	[31:26]	Tag	A software programmable tag value. The default value is equal to the Node ID. Other values can be configured using the Unsolicited Response Verb.			
		[25:1]	Rsvd	Reserved			
		[0]	EF_STREAM_DROP	Indicates that the stream associated with the MIC2 node has been dropped due to the bandwidth of the SDI line being oversubscribed.			
				Assertion of the flag triggers an Unsolicited Response.			
				The flag is cleared when the Stream ID is written to.			

Table 31 Unsolicited Response Summary



# **WM8860**

# **DETAILED VERB DESCRIPTIONS**

This section provides full verb information on each node in the WM8860. For verbs defined as part of the High Definition Audio Specification Revision 1.0 this is the only information provided. For vendor-specific verbs, more detailed explanation of the function is provided in the main text of the datasheet above.

# **ROOT NODE (NID = 00H)**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

#### Vendor ID Response Format (PID = 00h)

Bit	Bitfield Name	RW	Default	Description
[31:16]	Vendor ID	R	1AECh	Vendor ID
[15:0]	Device ID	R	8800h	Device ID = WM8800

#### Revision ID Response Format (PID = 02h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	MajRev	R	1h	Major revision number (left of the decimal) of the HDA Specification to which the WM8860 is fully compliant
[19:16]	MinRev	R	0h	Minor revision number (right of the decimal) of the HDA Specification to which the WM8860 is fully compliant
[15:8]	Revision ID	R	-	Cirrus Logic's revision number for this device
[7:0]	Stepping ID	R	-	Optional stepping number within the Revision ID

#### Subordinate Node Count Response Format (PID = 04h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:16]	Starting NID	R	01h	Starting NID of the first function group
[15:8]	Rsvd	R	00h	Reserved
[7:0]	Total Nodes	R	1h	Total number of function group nodes

Rev 4.0 69

00h

)1h

02h

3h

)4h

)5h

16h

\\_\_I\_

8h

001-

. . .

0Bh

0Ch

0Dh

0Eh

0Fh

10h

. . . . .

5h

16h

17h







# **WM8860**

# **AUDIO FUNCTION GROUP (NID = 01H)**

#### **FUNCTION RESET VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Execute	7FFh	00h	0000000h

Bit	Bitfield Name	RW	Default	Description
[7:0]	Reset	W	00h	AFG reset.
				00h = AFG and all widget nodes associated with the AFG will reset to default values. The WM8860 will issue a response and then be ready to accept commands in the frame following the valid response.
				<b>Note:</b> The <i>Implementation ID/Subsystem ID Verb</i> and the <i>Configuration Default Verb</i> will not be reset using this verb.

#### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

# Subordinate Node Count Response Format (PID = 04h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:16]	Starting NID	R	02h	Starting NID of the first widget in the AFG
[15:8]	Rsvd	R	00h	Reserved
[7:0]	Total Nodes	R	16h	Total number of widget nodes within the AFG

#### Function Group Type Response Format (PID = 05h)

Bit	Bitfield Name	RW	Default	Description
[31:9]	Rsvd	R	000000h	Reserved
[8]	Unsol	R	1	The AFG Node is capable of generating Unsolicited Responses
[7:0]	Node Type	R	01h	Node Type is Audio Function Group

# Audio Function Group Capabilities Response Format (PID = 08h)

Bit	Bitfield Name	RW	Default	Description
[31:17]	Rsvd	R	0000h	Reserved
[16]	Beep Gen	R	1	Beep Generator Widget present
[15:12]	Rsvd	R	00h	Reserved
[11:8]	Input Delay	R	8h	Number of samples of input delay
[7:4]	Rsvd	R	00h	Reserved
[3:0]	Output Delay	R	8h	Number of samples of output delay

### Input Amplifier Capabilities Response Format (PID = 0Dh)

Bit	Bitfield Name	RW	Default	Description
[31]	Mute Capable	R	0	Microphone preamplifers are not capable of muting
[30:23]	Rsvd	R	00h	Reserved
[22:16]	Step Size	R	27h	Gain step size is 10dB
[15]	Rsvd	R	0	Reserved
[14:8]	Num Steps	R	03h	Number of steps in gain range is 4 (0dB to +30dB)
[7]	Rsvd	R	0	Reserved
[6:0]	Offset	R	0h	The step number that 0dB corresponds to is 0

Rev 4.0 71

01h

J2n

. . . .

05h

06h

07h

)9h

0Ah

0Bh

)Ch

UDN

12h

3n

14n

4 7 L



# Output Amplifier Capabilities Response Format (PID = 12h)

Bit	Bitfield Name	RW	Default	Description
[31]	Mute Capable	R	1	DAC Volume control is capable of muting
[30:23]	Rsvd	R	0000h	Reserved
[22:16]	Step Size	R	01h	Gain step size is 0.5dB
[15]	Rsvd	R	0	Reserved
[14:8]	Num Steps	R	7Fh	Number of steps in gain range is 128 (0dB to -63.5dB)
[7]	Rsvd	R	0	Reserved
[6:0]	Offset	R	7Fh	The step number that 0dB corresponds to is 7Fh

# Supported Power States Response Format (PID = 0Fh)

Bit	Bitfield Name	RW	Default	Description
[31]	EPSS	R	0	EPSS not supported
[30]	CLKSTOP	R	1	Indicates that the link BCLK can be stopped when the WM8860 is in power state D3. The WM8860 will still perform jack detection and issue a wake the Presence Detect value of a node (in its <i>Pin Sense Verb</i> ) has changed.  Note: The <i>Power State Verb</i> for the AFG should be queried before actually stopping BCLK to ensure it is acceptable to do so
[29:5]	Rsvd	R	0000000h	Reserved
[4]	D4Sup	R	1	D4 Power State supported
[3]	D3Sup	R	1	D3 Power State supported
[2]	D2Sup	R	1	D2 Power State supported
[1]	D1sup	R	1	D1 Power State supported
[0]	D0Sup	R	1	D0 Power State supported

# **GPI/O Count Response Format (PID = 11h)**

Bit	Bitfield Name	RW	Default	Description
[31]	GPIO Wake	R	1	Indicates that a GPIO configured as an input can cause a wake (i.e. generate a Status Change event on the HDA Link)
[30]	GPIO Unsol	R	1	Indicates that a GPIO configured as an input can cause an Unsolicited Response to be generated
[29:24]	Rsvd	R	00h	Reserved
[23:16]	Num GPIs	R	00h	Device does not support any GPI pins
[15:8]	Num GPOs	R	00h	Device does not support any GPO pins
[7:0]	Num GPIOs	R	02h	Device supports 2 GPIO pins



#### **POWER STATE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F05h	00h	Bits [31:0] in the table below
Set	705h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:10]	Rsvd	R	000000h	Reserved
[9]	PS-ClkStopOK	R	0	Applicable when the AFG is in power state D3:
				0 = BCLK must be kept running
				1 = It is OK to stop BCLK
[8]	Rsvd	R	0	Reserved
[7:4]	PS-Act	R	2h	Indicates the actual power state of the AFG node:
				0h = D0
				1h = D1
				2h = D2
				3h = D3
				4h = D4
				The power state of the AFG is controlled by <i>PS-Set</i> below. For the AFG,
				PS-Act will equal PS-Set (offset by the time required to execute a power
[2:0]	PS-Set	RW	2h	state transition).
[3:0]	P3-361	KVV	211	Sets the power state of the AFG node:  0h = D0
				1h = D1
				2h = D2
				3h = D3
				4h = D4

**Note:** If the Link is operational, but the AFG is in power state D4, only Get Commands, Set Power State or AFG Reset commands are executed – all other commands are ignored. In this scenario, the SDI line is inactive and does not transmit responses, tags or data.

### **UNSOLICITED RESPONSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F08h	00h	Bits [31:0] in the table below
Set	708h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Enable	RW	0	0 = Unsolicited Responses disabled for this node
				1 = Unsolicited Responses enabled for this node
[6]	Rsvd	R	0	Reserved
[5:0]	Tag	RW	01h	A software programmable tag value that is returned in the top six bits (31:26) of every Unsolicited Response from this node.
				The default for Tag is equal to the Node ID.

 $\textbf{Note:} \ \ \textbf{The Unsolicited Response for the AFG node is defined in the "Unsolicited Responses" section.}$ 

Rev 4.0 73

01h

)2h

3h

04h

05h

06h

07h

08h

09h

JAh

UBN

UEII

UFII

0h

11h

12h

13h

. . . .

E la

16h

1/11



### **GPIO DATA VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F15h	00h	Bits [31:0] in the table below
Set	715h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:2]	Rsvd	R	00000000h	Reserved
[1]	Data[1]	RW	0	Sets and returns data associated with the GPIO2 pin
[0]	Data[0]	RW	0	Sets and returns data associated with the GPIO1 pin

## **GPIO ENABLE MASK VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F16h	00h	Bits [31:0] in the table below
Set	716h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:2]	Rsvd	R	00000000h	Reserved
[1]	Enable[1]	RW	0	0 = GPIO2 pin disabled (Hi-Z)
				1 = GPIO2 pin enabled
[0]	Enable[0]	RW	0	0 = GPIO1 pin disabled (Hi-Z)
				1 = GPIO1 pin enabled

### **GPIO DIRECTION VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F17h	00h	Bits [31:0] in the table below
Set	717h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:2]	Rsvd	R	00000000h	Reserved
[1]	Control[1]	RW	0	0 = GPIO2 pin is an input
				1 = GPIO2 pin is an output
[0]	Control[0]	RW	0	0 = GPIO1 pin is an input
				1 = GPIO1 pin is an output

### **GPIO WAKE ENABLE MASK VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F18h	00h	Bits [31:0] in the table below
Set	718h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:2]	Rsvd	R	00000000h	Reserved
[1]	Wake[1]	RW	0	0 = GPIO2 wake disabled
				1 = GPIO2 wake enabled
				Note: Applies only if GPIO2 is configured as an input
[0]	Wake[0]	RW	0	0 = GPIO1 wake disabled
				1 = GPIO1 wake enabled
				Note: Applies only if GPIO1 is configured as an input



### **GPIO UNSOLICITED ENABLE MASK VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F19h	00h	Bits [31:0] in the table below
Set	719h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:2]	Rsvd	R	00000000h	Reserved
[1]	UnsolEnable[1]	RW	0	0 = GPIO2 cannot generate an Unsolicited Response
				1 = GPIO2 can generate an Unsolicited Response
				Note: Applies only if GPIO2 is configured as an input
[0]	UnsolEnable[0]	RW	0	0 = GPIO1 cannot generate an Unsolicited Response
				1 = GPIO1 can generate an Unsolicited Response
				Note: Applies only if GPIO1 is configured as an input

### **GPIO STICKY MASK VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F1Ah	00h	Bits [31:0] in the table below
Set	71Ah	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:2]	Rsvd	R	00000000h	Reserved
[1]	Data[1]	RW	0	0 = GPIO2 is non-sticky (level sensitive)
				1 = GPIO2 is sticky (edge-sensitive)
				Note: Applies only if GPIO2 is configured as an input
[0]	Data[0]	RW	0	0 = GPIO1 is non-sticky (level sensitive)
				1 = GPIO1 is sticky (edge-sensitive)
				Note: Applies only if GPIO1 is configured as an input

#### **IMPLEMENTATION ID / SUBSYSTEM ID VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F20h	00h	Bits [31:0] in the table below
Set1	720h	Implementation ID[7:0]	00h
Set2	721h	Implementation ID[15:8]	00h
Set3	722h	Implementation ID[23:16]	00h
Set4	723h	Implementation ID[31:24]	00h

Bit	Bitfield Name	RW	Default	Description
[31:0]	Implementation ID	RW	00000100h	Implementation ID

**Note**: The *Implementation ID / Subsystem ID Verb* is not reset to its default value during a reset from any source. The settings are only lost when digital power is removed from the WM8860. When digital power is restored, the System BIOS must restore the settings.

Rev 4.0 75

01h

)2h

)3h

04h

05h

06h

07h

08h

09h

Ah

)Bh

0Ch

ULII

OI II

TUH

11h

Zn

13h

14h

5h

16h

1 / []



## VMID CONTROL VERB (VENDOR SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	F71h	00h	Bits [31:0] in the table below
Set	771h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:6]	Rsvd	R	0000000h	Reserved
[4:2]	VMID_RATE	RW	2h	Time allocated to charge VMID:
				0h = 1024ms
				1h = 512ms
				2h = 256ms
				3h = 128ms
				4h = 64ms
				5h = 32ms
				6h = 16ms
				7h = 8ms
[1:0]	VMID_SEL	RW	2h	VMID String Source Impedance Select:
				0h = 12.5kΩ
				1h = 75kΩ
				2h = 37.5kΩ
				$3h = 375k\Omega$
				<b>Note:</b> These figures give the value of the resistor from AVDD to VMID and from VMID to GND.

## GPIO AUTOMATIC CONTROL VERB (VENDOR-SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	F86h	00h	Bits [31:0] in the table below
Set	786h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:1]	Rsvd	R	0000000h	Reserved
[0]	GPIO2_AUTO	RW	1	GPIO2 Control Mode:
				0 = GPIO2 Manual Mode GPIO2 is controlled manually via the standard AFG verbs
				1 = GPIO Automatic Control Mode
				GPIO2 is always an output and forced high when PS-Act of AFG is D1 or D0. GPIO2 is forced low when PS-Act of AFG is D2, D3 or D4.

## UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	F8Eh	00h	Bits [31:0] in the table below
Set	78Eh	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:5]	Rsvd	R	0000000h	Reserved
[4:0]	Priority	RW	00h	Assigns a priority setting for queued Unsolicited Responses. Nodes with the lowest value have the highest priority, and so go to the front of the Unsolicited Response queue. Nodes with the same value for priority are queued on first-to-trigger basis.  00h = Highest priority



1Fh = Lowest priority.

00h

01h

)2h

03h

04h

05h

06h

07h

noh

07 (11

UBN

UDN

0Eh

OFh

10h

11h

12h

13h

14h

15h

16h

17h



## ADC1 AUDIO INPUT CONVERTER WIDGET (NID = 02H)

### **STREAM FORMAT VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	Ah	0000h	Bits [31:0] in the table below
Set	2h	Bits [15:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description	
[31:16]	Rsvd	R	0000h	Reserved	
[15]	Туре	R	0	Indicates the widget supports only PCM streams	
[14]	Base	RW	0	Used to set the base rate frequency:	
				0 = 48 kHz	
				1 = 44.1 kHz	
[13:11]	Mult	RW	0h	Used to set the base rate multiplication factor:	
				0h = x1 (48kHz, 44.1kHz or less)	
				1h = x2 (96kHz, 88.2kHz, 32kHz)	
				2h-7h = Reserved	
[10:8]	Div	RW	0h	Used to set the base rate division factor:	
				0h = divide by 1 (48kHz, 44.1kHz)	
				1h = divide by 2 (22.05kHz)	
				2h = divide by 3 (16kHz, 32kHz)	
				3h = divide by 4 (11.025kHz)	
				4h = Reserved	
				5h = divide by 6 (8kHz)	
				6h = Reserved	
				7h = Reserved	
[7]	Rsvd	R	0	Reserved	
[6:4]	Bits	RW	3h	Bits per Sample:	
				0h = Reserved	
				1h = 16 bits	
				2h = 20 bits	
				3h = 24 bits	
				4h = 32 bits (Float 32)	
				5h-7h = Reserved	
[3:0]	Chan	RW	1h	Number of Channels in each frame of the stream:	
				0h = 1 channel	
				1h = 2 channels	
				2h-Fh = reserved	

)0h

02h

03h

)4h

05h

06h

07h

08h

OOh

ΩAh

0Ch

0Dh

0Eh

0Fh

10h

11h

l2h

13h

14h

15h

16h

l7h



### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

## Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	1h	Indicates that this is an Audio Input Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	1	Indicates that the Power State Verb is supported in this widget
[9]	Digital	R	0	Indicates that this widget is translating analogue data
[8]	Conn List	R	1	Indicates that a connection list is present
[7]	Unsol Capable	R	1	Widget supports Unsolicited Responses
[6]	ProcWidget	R	1	Widget has processing capabilities (i.e high pass filter)
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	1	Widget has a subset of the supported rates defined for the AFG
[3]	Amp Parameter Override	R	0	Not applicable as this widget does not have amplifier capabilities
[2]	Out Amp Present	R	0	Output amplifier not present in this widget
[1]	In Amp Present	R	0	Input amplifier not present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

## Supported Rates Parameter (PID = 0Ah)

Bit	Bitfield Name	RW	Default	Description
[31:21]	Rsvd	R	000h	Reserved
[20]	B32	R	1	ADC1 supports 32-bit audio format
[19]	B24	R	1	ADC1 supports 24-bit audio format
[18]	B20	R	1	ADC1 supports 20-bit audio format
[17]	B16	R	1	ADC1 supports 16-bit audio format
[16]	B8	R	0	ADC1 does not support 8-bit audio format
[15:12]	Rsvd	R	0h	Reserved
[11]	R12	R	0	ADC1 does not support 384 kHz sample rate
[10]	R11	R	0	ADC1 does not support 192 kHz sample rate
[9]	R10	R	0	ADC1 does not support 176.4 kHz sample rate
[8]	R9	R	1	ADC1 supports 96 kHz sample rate
[7]	R8	R	1	ADC1 supports 88.2 kHz sample rate
[6]	R7	R	1	ADC1 supports 48 kHz sample rate
[5]	R6	R	1	ADC1 supports 44.1 kHz sample rate
[4]	R5	R	1	ADC1 supports 32 kHz sample rate
[3]	R4	R	1	ADC1 supports 22.05 kHz sample rate
[2]	R3	R	1	ADC1 supports 16 kHz sample rate
[1]	R2	R	1	ADC1 supports 11.025 kHz sample rate
[0]	R1	R	1	ADC1 supports 8 kHz sample rate



#### Supported Stream Formats Parameter (PID = 0Bh)

Bit	Bitfield Name	RW	Default	Description
[31:3]	Rsvd	R	00000000h	Reserved
[2]	AC3	R	0	ADC1 does not support Dolby AC3 formatted data
[1]	Float32	R	1	ADC1 supports Float32 formatted data
[0]	PCM	R	1	ADC1 supports PCM formatted data

### Connection List Length Parameter (PID = 0Eh)

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Long Form	R	0	Indicates that the connection list items are in short form
[6:0]	Connection List Length	R	01h	Indicates that there is 1 NID entry in the connection list

### Supported Power States Parameter (PID = 0Fh)

Bit	Bitfield Name	RW	Default	Description
[31:4]	Rsvd	R	0000000h	Reserved
[3]	D3Sup	R	1	D3 power state supported
[2]	D2Sup	R	1	D2 power state supported
[1]	D1sup	R	1	D1 power state supported
[0]	D0Sup	R	1	D0 power state supported

### Processing Capabilities Parameter (PID = 10h)

Bit	Bitfield Name	RW	Default	Description
[31:16]	Rsvd	R	0000h	Reserved
[15:8]	NumCoeff	R	00h	This widget does not support loadable coefficients
[7:1]	Rsvd	R	00h	Reserved
[0]	Benign	R	0	The "Processing Benign State" is not supported

### **GET CONNECTION LIST ENTRY VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F02h	00h	Bits [31:0] in the table below

Bit	Bitfield Name	RW	Default	Description
[31:24]	Conn List Entry 3	R	00h	Unused connection list entry
[23:16]	Conn List Entry 2	R	00h	Unused connection list entry
[15:8]	Conn List Entry 1	R	00h	Unused connection list entry
[7:0]	Conn List Entry 0	R	0Ah	Indicates that the ADC1 widget node connects to the PGA1 widget node (NID = 0Ah)

Rev 4.0 81

UUN

)1h

02h

U3N

05h

06h

07h

08h

)9h

OAh

0Bh

0Ch

UDh

ULII

UFII

10h

11h

ızn

13h

14h

15h

16h

I/n



### PROCESSING STATE VERB

	Verb ID	Payload [7:0]	Response[31:0]
Get	F03h	00h	Bits [31:0] in the table below
Set	703h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7:0]	Processing State	RW	01h	The processing block is the high-pass filter (HPF). The processing state is controlled as follows:
				00h = Processing Off: HPF disabled
				01h = Processing On: HPF enabled
				02h = Processing Off: HPF disabled (benign not supported)
				03h-7Fh = Reserved
				80h-FFh = Vendor Specific – not used

### **POWER STATE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F05h	00h	Bits [31:0] in the table below
Set	705h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7:4]	PS-Act	R	3h	Indicates the actual power state of the ADC1 widget node:
				0h = D0
				1h = D1
				2h = D2
				3h = D3
				<b>Note:</b> The power state of the ADC1 widget node is controlled by <i>PS-Set</i> below, however the control may be superseded by the <i>PS-Set</i> of the AFG widget node.
[3:0]	PS-Set	RW	3h	Sets the power state of the ADC1 widget node:
				0h = D0
				1h = D1
				2h = D2
				3h = D3

## CONVERTER STREAM, CHANNEL VERB

	Verb ID	Payload [7:0]	Response[31:0]
Get	F06h	00h	Bits [31:0] in the table below
Set	706h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7:4]	Stream	RW	0h	Stream ID used by this widget. Note that Stream ID = 0h is used to indicate an unused stream, and converters will not transfer/receive link data for streams with an ID of 0.
[3:0]	Channel	RW	0h	Lowest channel number used by this widget.  Note: as this widget does not support multi-channel capture, only a setting of 0h is applicable.



### **UNSOLICITED RESPONSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F08h	00h	Bits [31:0] in the table below
Set	708h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Enable	RW	0	0 = Unsolicited Responses disabled for this node
				1 = Unsolicited Responses enabled for this node
[6]	Rsvd	R	0	Reserved
[5:0]	Tag	RW	02h	A software programmable tag value that is returned in the top six bits (31:26) of every Unsolicited Response from this node.
				The default for <i>Tag</i> is equal to the Node ID.

Note: The Unsolicited Response for the AFG node is defined in the "Unsolicited Responses" section.

## **UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F8Eh	00h	Bits [31:0] in the table below
Set	78Eh	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:5]	Rsvd	R	0000000h	Reserved
[4:0]	Priority	RW	00h	Assigns a priority setting for queued Unsolicited Responses. Nodes with the lowest value have the highest priority, and so go to the front of the Unsolicited Response queue. Nodes with the same value for priority are queued on first-to-trigger basis.
				00h = Highest priority
				TFh = Lowest priority

## **CHANNEL COPY VERB (VENDOR-SPECIFIC)**

	Verb ID	Payload [7:0]	Response[31:0]
Get	FB1h	00h	Bits [31:0] in the table below
Set	7B1h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:2]	Rsvd	R	00000000h	Reserved
[1]	CHAN1_SEL	RW	1	Channel 1 (right) Mapping Control:
				0 = Channel 1 takes data from left audio channel
				1 = Channel 1 takes data from right audio channel
[0]	CHAN0_SEL	RW	0	Channel 0 (left) Mapping Control:
				0 = Channel 0 takes data from left audio channel
				1 = Channel 0 takes data from right audio channel

Rev 4.0 83

00h

) | | |

02h

)4h

05h

06h

07h

. . . .

08h

09h

Ah

)Rh

0Ch

וועו

/\_\_\_\_

Ohh

UH

11h

12h

13h

14h

15h

16h

I/n





## MIC1 AUDIO INPUT CONVERTER WIDGET (NID = 03H)

### **STREAM FORMAT VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	Ah	0000h	Bits [31:0] in the table below
Set	2h	Bits [15:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description	
[31:16]	Rsvd	R	0000h	Reserved	
[15]	Туре	R	0	Indicates the widget supports only PCM streams	
[14]	Base	RW	0		
				0 = 48 kHz	
				1 = 44.1 kHz	
[13:11]	Mult	RW	0h	Used to set the base rate multiplication factor:	
				0h = x1 (48kHz, 44.1kHz or less)	
				1h = x2 (32kHz)	
				2h-7h = Reserved	
[10:8]	Div	RW	0h	Used to set the base rate division factor:	
				0h = divide by 1 (48kHz, 44.1kHz)	
				1h = divide by 2 (24kHz, 22.05kHz)	
				2h = divide by 3 (16kHz, 32kHz)	
				3h = divide by 4 (11.025kHz)	
				4h = Reserved	
				5h = divide by 6 (8kHz)	
				6h = Reserved 7h = Reserved	
				7h = Reserved	
[7]	Rsvd	R	0	Reserved	
[6:4]	Bits	RW	3h	Bits per Sample:	
				0h = Reserved	
				1h = 16 bits	
				2h = 20 bits	
				3h = 24 bits	
				4h = 32 bits (Float 32)	
				5h-7h = Reserved	
[3:0]	Chan	RW	1h	Number of Channels in each frame of the stream:	
				0h = 1 channel	
				1h = 2 channels	
				2h = 3 channels	
				3h = 4 channels	
				4h-Fh = reserved	

03h

)4h

05h

UOII

07h

08h

00h

OAh

ODL

0Ch

0Dh

0Eh

OEh

10h

11h

2h

1.1h

15h

16h

17h



### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

## Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	1h	Indicates that this is an Audio Input widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	1	Indicates that the Power State Verb is supported in this widget
[9]	Digital	R	0	Indicates that this widget is translating analogue data
[8]	Conn List	R	1	Indicates that a connection list is present
[7]	Unsol Capable	R	1	Widget supports Unsolicited Responses
[6]	ProcWidget	R	1	Widget has processing capabilities (i.e high pass filter)
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	1	Widget has a subset of the supported rates defined for the AFG
[3]	Amp Parameter Override	R	0	Not applicable as this widget does not have amplifier capabilities
[2]	Out Amp Present	R	0	Output amplifier not present in this widget
[1]	In Amp Present	R	0	Input amplifier not present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

## Supported Rates Parameter (PID = 0Ah)

Bit	Bitfield Name	RW	Default	Description
[31:21]	Rsvd	R	000h	Reserved
[20]	B32	R	1	MIC1 supports 32-bit audio format
[19]	B24	R	1	MIC1 supports 24-bit audio format
[18]	B20	R	1	MIC1 supports 20-bit audio format
[17]	B16	R	1	MIC1 supports 16-bit audio format
[16]	B8	R	0	MIC1 does not support 8-bit audio format
[15:12]	Rsvd	R	0h	Reserved
[11]	R12	R	0	MIC1 does not support 384 kHz sample rate
[10]	R11	R	0	MIC1 does not support 192 kHz sample rate
[9]	R10	R	0	MIC1 does not support 176.4 kHz sample rate
[8]	R9	R	0	MIC1 does not support 96 kHz sample rate
[7]	R8	R	0	MIC1 does not support 88.2 kHz sample rate
[6]	R7	R	1	MIC1 supports 48 kHz sample rate
[5]	R6	R	1	MIC1 supports 44.1 kHz sample rate
[4]	R5	R	1	MIC1 supports 32 kHz sample rate
[3]	R4	R	1	MIC1 supports 22.05 kHz sample rate
[2]	R3	R	1	MIC1 supports 16 kHz sample rate
[1]	R2	R	1	MIC1 supports11.025 kHz sample rate
[0]	R1	R	1	MIC1 supports 8 kHz sample rate



#### Supported Stream Formats Parameter (PID = 0Bh)

Bit	Bitfield Name	RW	Default	Description
[31:3]	Rsvd	R	00000000h	Reserved
[2]	AC3	R	0	MIC1 does not support Dolby AC3 formatted data
[1]	Float32	R	1	MIC1 supports Float32 formatted data
[0]	PCM	R	1	MIC1 supports PCM formatted data

### Connection List Length Parameter (PID = 0Eh)

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Long Form	R	0	Indicates that the connection list items are in short form
[6:0]	Connection List Length	R	01h	Indicates that there is 1 NID entry in the connection list

### Supported Power States Parameter (PID = 0Fh)

Bit	Bitfield Name	RW	Default	Description
[31:4]	Rsvd	R	0000000h	Reserved
[3]	D3Sup	R	1	D3 power state supported
[2]	D2Sup	R	1	D2 power state supported
[1]	D1sup	R	1	D1 power state supported
[0]	D0Sup	R	1	D0 power state supported

### Processing Capabilities Parameter (PID = 10h)

Bit	Bitfield Name	RW	Default	Description
[31:16]	Rsvd	R	0000h	Reserved
[15:8]	NumCoeff	R	00h	This widget does not support loadable coefficients
[7:1]	Rsvd	R	00h	Reserved
[0]	Benign	R	0	The "Processing Benign State" is not supported

### **GET CONNECTION LIST ENTRY VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F02h	00h	Bits [31:0] in the table below

Bit	Bitfield Name	RW	Default	Description
[31:24]	Conn List Entry 3	R	00h	Unused connection list entry
[23:16]	Conn List Entry 2	R	00h	Unused connection list entry
[15:8]	Conn List Entry 1	R	00h	Unused connection list entry
[7:0]	Conn List Entry 0	R	09h	Indicates that the MIC1 Widget connects to the MIC1 Mux Widget (NID = 09h)

Rev 4.0 87

00h

0 111

UZN

03h

05h

06h

07h

08h

JAn

)Bh

0011

ODII

. . . .

. . . .

. . . . .

17h



### PROCESSING STATE VERB

	Verb ID	Payload [7:0]	Response[31:0]
Get	F03h	00h	Bits [31:0] in the table below
Set	703h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7:0]	Processing State	RW	01h	The processing node is the high-pass filter (HPF). The processing state is controlled as follows:
				00h = Processing Off: HPF disabled
				01h = Processing On: HPF enabled
				02h = Processing Off: HPF disabled (benign not supported)
				03h-7Fh = Reserved
				80h-FFh = Vendor Specific – not used

### **POWER STATE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F05h	00h	Bits [31:0] in the table below
Set	705h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7:4]	PS-Act	R	3h	Indicates the actual power state of the MIC1 widget node:
				0h = D0
				1h = D1
				2h = D2
				3h = D3
				The power state of the MIC1 widget is controlled by <i>PS-Set</i> below, however the control may be superseded by the <i>PS-Set</i> of the AFG node.
[3:0]	PS-Set	RW	3h	Sets the power state of the MIC1 widget node:
				0h = D0
				1h = D1
				2h = D2
				3h = D3

### **CONVERTER STREAM, CHANNEL VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F06h	00h	Bits [31:0] in the table below
Set	706h	Bits [7:0] in the table below	00000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7:4]	Stream	RW	0h	Stream ID used by this widget. Note that Stream ID = 0h is used to indicate an unused stream, and converters will not transfer/receive link data for streams with an ID of 0h.  For multi-channel capture on MIC1 and MIC2, the <i>Stream</i> value should be the same for both.
[3:0]	Channel	RW	0h	Note: When MIC1 and MIC2 are setup for multi-channel capture, only a setting of 0h and 2h are applicable. However, the values are mutually exclusive, in that if <i>Channel</i> has been set to 0h for the MIC1 node, it must be set to 2h for the MIC2 node. Both nodes should have <i>Channel</i> set to 0h



		when not in multi-channel capture mode.

### **UNSOLICITED RESPONSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F08h	00h	Bits [31:0] in the table below
Set	708h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Enable	RW	0	0 = Unsolicited Responses disabled for this node
				1 = Unsolicited Responses enabled for this node
[6]	Rsvd	R	0	Reserved
[5:0]	Tag	RW	03h	A software programmable tag value that is returned in the top six bits (31:26) of every Unsolicited Response from this node.
				The default for <i>Tag</i> is equal to the Node ID.

**Note:** The Unsolicited Response for the AFG node is defined in the "Unsolicited Responses" section.

## UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	F8Eh	00h	Bits [31:0] in the table below
Set	78Eh	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:5]	Rsvd	R	0000000h	Reserved
[4:0]	Priority	RW	00h	Assigns a priority setting for queued Unsolicited Responses. Nodes with the lowest value have the highest priority, and so go to the front of the Unsolicited Response queue. Nodes with the same value for priority are queued on first-to-trigger basis.  00h = Highest priority   1Fh = Lowest priority

### **CHANNEL COPY VERB (VENDOR-SPECIFIC)**

	Verb ID	Payload [7:0]	Response[31:0]
Get	FB1h	00h	Bits [31:0] in the table below
Set	7B1h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:2]	Rsvd	R	00000000h	Reserved
[1]	CHAN1_SEL	RW	1 Channel 1 (right) Mapping Control:	
				0 = Channel 1 takes data from left audio channel
				1 = Channel 1 takes data from right audio channel
[0]	CHAN0_SEL	RW	0 Channel 0 (left) Mapping Control:	
				0 = Channel 0 takes data from left audio channel
				1 = Channel 0 takes data from right audio channel

Rev 4.0 89

00h

01h

)2h

03h

)4h

05h

06h

07h

08h

09h

)Ah

)Bh

0Ch

ווענ

0Fh

1011

1h

12h

13h

1.4h

15h

16h

1/11





## S/PDIF TX 1 AUDIO OUTPUT CONVERTER WIDGET (NID = 04H)

### **STREAM FORMAT VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	Ah	0000h	Bits [31:0] in the table below
Set	2h	Bits [15:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:16]	Rsvd	R	0000h	Reserved
[15]	Туре	RW	0	Used to set the format of the stream:
				0 = PCM
				1 = Non-PCM (i.e. AC3 or Software Formatted S/PDIF)
[14]	Base	RW	0	Used to set the base rate frequency:
				0h = 48 kHz
				1h = 44.1 kHz
[13:11]	Mult	RW	0h	Used to set the base rate multiplication factor:
				0h = x1 (48kHz, 44.1kHz or less)
				1h = x2 (96kHz, 88.2kHz, 32kHz)
				2h = Reserved
				3h = x4 (192kHz, 176.4kHz)
				4h-7h = Reserved
[10:8]	Div	RW	0h	Used to set the base rate division factor:
				0h = divide by 1 (48kHz, 44.1kHz)
				1h =Reserved
				2h = divide by 3 (32kHz)
				3h-7h = Reserved
[7]	Rsvd	R	0	Reserved
[6:4]	Bits	RW	4h	Bits per Sample:
				0h = Reserved
				1h = 16 bits
				2h = 20 bits
				3h = 24 bits
				4h = 32 bits (Software Formatted or Float 32)
				5h-7h = Reserved
[3:0]	Chan	RW	1h	Number of Channels in each frame of the stream:
				0h = 1 channel
				1h = 2 channels
				2h-Fh = reserved

#### Notes:

- 1. When the internal path (of ADC1 or MIC1 or MIC2) to S/PDIF TX 1 is active, *Mult*, *Base* & *Div* become read only and are programmed by the WM8860 to match the sourced node settings.
- 2. When Software Formatted S/PDIF is selected, and the S/PDIF TX 1 is sourcing the HDA Link, the S/PDIF output is driven low until stream ID is assigned.

001

03h

04h

05h

OΔh

0Bh

0.01

0Eh

0Fh

10h

11h

1ZN

13h

4h

15h

16h

/ n



### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

## Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	0h	Indicates that this is an Audio Output Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	0	Indicates that the Power State Verb is supported in this widget
[9]	Digital	R	1	Indicates that this widget is translating digital data
[8]	Conn List	R	0	Indicates that a connection list is not present
[7]	Unsol Capable	R	1	Widget supports Unsolicited Responses
[6]	ProcWidget	R	1	Widget has processing capabilities (i.e SRC2)
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	1	Widget has a subset of the supported rates defined for the AFG
[3]	Amp Parameter Override	R	0	Not applicable as this widget does not have amplifier capabilities
[2]	Out Amp Present	R	0	Output amplifier not present in this widget
[1]	In Amp Present	R	0	Input amplifier not present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

## Supported Rates Parameter (PID = 0Ah)

Bit	Bitfield Name	RW	Default	Description
[31:21]	Rsvd	R	000h	Reserved
[20]	B32	R	1	Float32 and Software Formatted S/PDIF is supported.
[19]	B24	R	1	S/PDIF Tx 1 supports 24-bit audio format
[18]	B20	R	1	S/PDIF Tx 1 supports 20-bit audio format
[17]	B16	R	1	S/PDIF Tx 1 supports 16-bit audio format
[16]	B8	R	0	S/PDIF Tx 1 does not support 8-bit audio format
[15:12]	Rsvd	R	0h	Reserved
[11]	R12	R	0	S/PDIF Tx 1 does not support 384 kHz sample rate
[10]	R11	R	1	S/PDIF Tx 1 supports 192 kHz sample rate
[9]	R10	R	1	S/PDIF Tx 1 supports 176.4 kHz sample rate
[8]	R9	R	1	S/PDIF Tx 1 supports 96 kHz sample rate
[7]	R8	R	1	S/PDIF Tx 1 supports 88.2 kHz sample rate
[6]	R7	R	1	S/PDIF Tx 1 supports 48 kHz sample rate
[5]	R6	R	1	S/PDIF Tx 1 supports 44.1 kHz sample rate
[4]	R5	R	1	S/PDIF Tx 1 supports 32 kHz sample rate
[3]	R4	R	0	S/PDIF Tx 1 does not support 22.05 kHz sample rate
[2]	R3	R	0	S/PDIF Tx 1 does not support 16 kHz sample rate
[1]	R2	R	0	S/PDIF Tx 1 does not support 11.025 kHz sample rate
[0]	R1	R	0	S/PDIF Tx 1 does not support 8 kHz sample rate



#### Supported Stream Formats Parameter (PID = 0Bh)

Bit	Bitfield Name	RW	Default	Description
[31:3]	Rsvd	R	00000000h	Reserved
[2]	AC3	R	0	S/PDIF Tx 1 does not support Dolby AC3 format
[1]	Float32	R	1	S/PDIF Tx 1 supports Float32 formatted data
[0]	PCM	R	1	S/PDIF Tx 1 supports PCM formatted data

### Processing Capabilities Parameter (PID = 10h)

Bit	Bitfield Name	RW	Default	Description
[31:16]	Rsvd	R	0000h	Reserved
[15:8]	NumCoeff	R	00h	This widget does not support loadable coefficients
[7:1]	Rsvd	R	00h	Reserved
[0]	Benign	R	0	The "Processing Benign State" is not supported

04h

11h



## **CONVERTER STREAM, CHANNEL VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F06h	00h	Bits [31:0] in the table below
Set	706h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7:4]	Stream	RW	0h	Stream ID used by this widget. Note that Stream ID = 0h is used to indicate an unused stream, and converters will not transfer/receive link data for streams with an ID of 0.
[3:0]	Channel	RW	0h	Lowest channel number used by this widget.
				<b>Note:</b> As this widget does not support multi-channel capture, only a setting of 0 is applicable.

### **UNSOLICITED RESPONSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F08h	00h	Bits [31:0] in the table below
Set	708h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Enable	RW	0	0 = Unsolicited Responses disabled for this node
				1 = Unsolicited Responses enabled for this node
[6]	Rsvd	R	0	Reserved
[5:0]	Tag	RW	04h	A software programmable tag value that is returned in the top six bits (31:26) of every Unsolicited Response from this node.
				The default for Tag is equal to the Node ID.

Note: The Unsolicited Response for the AFG node is defined in the "Unsolicited Responses" section.



## S/PDIF CONVERTER CONTROL VERB

	Verb ID	Payload [7:0]	Response[31:0]
Get	F0Dh	0000h	Bits [31:0] in the table below
Set1	70Dh	Bits [7:0] in the table below	0000000h
Set2	70Eh	Bits [15:8] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:15]	Rsvd	R	00000h	Reserved
[14:8]	CC	RW	00h	Category Code. Channel Status bits [14:8] – see IEC 60958-3 for details.
[7]	L	RW	0	Generation Level, Channel Status bit [15] - see IEC 60958-3 for details.
[6]	PRO	RW	0	Professional, Channel Status bit[0]:
				0 = Consumer Channel Status (40-bits)
				1 = Professional Channel Status (192-bits )
[5]	/AUDIO	RW	0	Non-Audio, Channel Status bit[1]:
				0 = PCM formatted data
				1 = non-PCM formatted data
[4]	COPY	RW	0	Copyright, Channel Status bit[2]:
				0 = indicates copyright asserted (i.e. S/PDIF Channel Status bit[2] set to 1)
				1 = indicates no copyright asserted (i.e. S/PDIF Channel Status bit[2] set to 0)
				<b>Note:</b> The HDA specification, and the IEC 60958-3 specification are the inverse of each other. To comply with both, the WM8860 inverts the written value.
[3]	PRE	RW	0	Pre-emphasis, Channel Status bit[3]:
				0 = no pre-emphasis
				1 = 50/15 us pre-emphasis
[2]	VCFG	RW	0	Validity Configuration Control - determines what happens to the audio data, should an invalid sample occur (invalid samples occur when SRC2 is in use but not locked, EF_STREAM_ERR is asserted, or the stream ID is 0).
				0 = pass data as received by the S/PDIF Tx 1.
				1 = overwrite invalid data with all zeros (for the invalid sub frame only).
[1]	V	RW	0	Validity:
				0 = Indicates valid data
				1 = Indicates invalid data
				If V=1, the transmitted <i>validity</i> flag is set to 1.
				If V=0, the transmitted <i>validity</i> flag is set to 1 if there is an invalid sample being transmitted. Invalid samples may occur when SRC2 is in use but not locked, EF_STREAM_ERR is asserted, or the stream ID is 0.
[0]	DigEn	RW	0	Digital Enable:
				0 = S/PDIF audio path disabled
				1 = S/PDIF audio path enabled

Note: When Software Formatted S/PDIF is selected, verb settings for channel status and validity are not used

04h

11h



## **INTERNAL PATH VERB (VENDOR-SPECIFIC)**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F73h	00h	Bits [31:0] in the table below
Set1	773h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	0000000h	Reserved
[7:0]	Path Sel	RW	00h	Selects source of S/PDIF TX 1 node:
				00h = HDA Link
				02h = ADC1
				03h = MIC1
				15h = MIC2
				All other values of Path Sel are reserved.

**Note:** When the internal path (of ADC1 or MIC1 or MIC2) to S/PDIF TX 1 is active, SRC2 is automatically bypassed and *Mult*, *Base* & *Div* (in the *Stream Format Verb*) become read only and are programmed by the WM8860 to match the sourced node settings.



### TX CHANNEL STATUS CONTROL VERB (VENDOR-SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	F81h	00h	Bits [31:0] in the table below
Set1	781h	Bits [7:0] in the table below	0000000h
Set2	782h	Bits [15:8] in the table below	0000000h
Set3	783h	Bits [23:16] in the table below	0000000h
Set4	784h	Bits [31:24] in the table below	0000000h

The bits in the table below are defined in the IEC-60958-3 Specification:

Bit	Bitfield Name	RW	Default	Description
[31:28]	Channel Status [39:36]	RW	0h	Original Sampling Frequency
[27:25]	Channel Status [35:33]	RW	5h	Sample Word Length
[24]	Channel Status [32]	RW	1	Max Word Length
[23:22]	Channel Status [31:30]	RW	0h	Channel Status [31:30]
[21:20]	Channel Status [29:28]	RW	0h	Clock Accuracy
[19:16]	Channel Status [27:24]	RW	1h	Sampling Frequency
[15:12]	Channel Status B [23:20]	RW	0h	Channel Number for Sub-Frame B
[11:8]	Channel Status [23:20]	RW	0h	Channel Number for Sub-Frame A
[7:4]	Channel Status [19:16]	RW	0h	Source Number
[3:2]	Channel Status [7:6]	RW	0h	Channel Status Mode
[1:0]	Channel Status [5:4]	RW	0h	Additional De-emphasis Information

#### Notes:

- 1. When Software Formatted S/PDIF is selected, verb settings for channel status and validity are not used.
- 2. The *Channel Number* for Sub-frame B is uniquely configurable all other Channel status bits have the same value as Sub-frame A.

# CHANNEL STATUS DATA PACKING CONFIGURATION VERB (VENDOR-SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	F85h	00h	Bits [31:0] in the table below
Set	785h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:1]	Rsvd	R	0000000h	Reserved
[0]	CSD_MODE	RW	1	S/PDIF Transmitter Channel Status Data Packing Mode:
				0 = Manual mode: sample rate and data width channel status data packed from data sourced from the <i>Tx Channel Status Control Verb</i>
				1 = Automatic mode: sample rate and data width channel status data packed from data sourced from the <i>Stream Verb</i> , <i>S/PDIF Verb</i>

Rev 4.0 97

03h

04h

) E I-

06h

07h

08h

09h

UAN

UBh

. . .

OEL

0Fh

Un

12h

3h

14h

15h

16h

17h



## UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	F8Eh	00h	Bits [31:0] in the table below
Set	78Eh	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:5]	Rsvd	R	0000000h	Reserved
[4:0]	Priority	RW	00h	Assigns a priority setting for queued Unsolicited Responses. Nodes with the lowest value have the highest priority, and so go to the front of the Unsolicited Response queue. Nodes with the same value for priority are queued on first-to-trigger basis.  00h = Highest priority  1Fh = Lowest priority



RESERVED (NID = 05H)

00h

01h

02h

03h

04h

05h

06h

07h

08h

ngh

ΩAh

0Rh

0Ch

0Dh

0Eh

0Fh

10h

11h

12h

13h

14h

15h

16h

17h







## DAC1 AUDIO OUTPUT CONVERTER WIDGET (NID = 06H)

### **STREAM FORMAT VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	Ah	0000h	Bits [31:0] in the table below
Set	2h	Bits [15:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description	
[31:16]	Rsvd	R	0000h	Reserved	
[15]	Туре	R	0h	Indicates the widget supports only PCM streams	
[14]	Base	RW	0	Used to set the base rate frequency:	
				0 = 48 kHz	
				1 = 44.1 kHz	
[13:11]	Mult	RW	0h	Used to set the base rate multiplication factor:	
				0h = x1 (48kHz, 44.1kHz  or less)	
				1h = x2 (96kHz, 88.2kHz, 32kHz)	
				2h = Reserved	
				3h = x4 (192kHz, 176.4kHz)	
				4h-7h = Reserved	
[10:8]	Div	RW	0h	Used to set the base rate division factor:	
				0h = divide by 1 (48kHz, 44.1kHz)	
				1h = divide by 2 (24kHz, 22.05kHz)	
				2h = divide by 3 (16kHz, 32kHz)	
				3h = divide by 4 (11.025kHz)	
				4h = Reserved	
				5h = divide by 6 (8kHz)	
				6h = Reserved	
				7h = Reserved	
[7]	Rsvd	R	0	Reserved	
[6:4]	Bits	RW	3h	Bits per Sample:	
				0h = Reserved	
				1h = 16 bits	
				2h = 20 bits	
				3h = 24 bits	
				4h = 32 bits (Float 32)	
				5h-7h = Reserved	
[3:0]	Chan	RW	1h	Number of Channels in each frame of the stream:	
				0h = 1 channel	
				1h = 2 channels	
				2h = 3 channels	
				3h = 4 channels	
				4h = 5 channels	
				5h = 6 channels	
				6h-Fh = reserved	

Rev 4.0 101

00h

)1h

02h

03h

)4h

05h

06h

07h

08h

09h

0Ah

0Bh

UEh

0Fh

10h

11h

12h

12h

1 11

15h

16h

l7h



### **AMPLIFIER GAIN/MUTE VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	Bh	A000h	Bits [31:0] in the response table below – applies to the left channel only
Get	Bh	8000h	Bits [31:0] in the response table below – applies to the right channel only
Set	3h	Bits [15:0] in the set table below	0000000h

### Response Table:

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Amplifier Mute	R	1	Shows the amplifier mute status of the selected channel:
				0 = Normal
				1 = Muted
[6:0]	Amplifier Gain	R	7Fh	Shows the amplifier gain setting (step number) for the selected channel. The actual gain applied is determined by <i>the Output Amplifier Capabilities Parameter</i> in the AFG, and is shown below for convenience:
				00h = −63.5dB
				01h = −63.0dB
				0.5dB steps
				7Eh = −0.5dB
				7Fh = 0dB
				Note: If the <i>H-Phn Enable</i> register in the Port-A (NID=11h) <i>Pin Widget Control Verb</i> is set to 1, the actual gain setting applied has an offset of -8dB from the setting configured by the <i>Gain</i> register.

### Set Table:

Bit	Bitfield Name	RW	Default	Description
[15]	Set Output Amp	W	1	Indicates that the programming refers to the output amplifier on this widget
[14]	Set Input Amp	W	0	Not applicable to this widget
[13]	Set Left Amp	W	1	0 = Left channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields
				1 = Left channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields
[12]	Set Right Amp	W	1	0 = Right channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields
				1 = Right channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields
[11:8]	Index	W	0h	Not applicable to this widget
[7]	Mute	W	1	0 = Normal operation
				1 = Mute
[6:0]	Gain	W	7Fh	Step number of the gain – see <i>Amplifier Gain</i> in response table above for details of actual gain values



## **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

### Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	0h	Indicates that this is an Audio Output Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	1	Indicates that the Power State Verb is supported in this widget
[9]	Digital	R	0	Indicates that this widget is translating analogue data
[8]	Conn List	R	0	Indicates that a connection list is not present
[7]	Unsol Capable	R	1	Widget supports Unsolicited Responses
[6]	ProcWidget	R	0	Widget does not have processing capabilities
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	1	Widget has a subset of the supported rates defined for the AFG
[3]	Amp Parameter Override	R	0	The AFG amplifier parameters are used for this widget
[2]	Out Amp Present	R	1	Output amplifier is present in this widget
[1]	In Amp Present	R	0	Input amplifier not present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

### Supported Rates Parameter (PID = 0Ah)

Bit	Bitfield Name	RW	Default	Description
[31:21]	Rsvd	R	000h	Reserved
[20]	B32	R	1	DAC1 supports 32-bit audio format
[19]	B24	R	1	DAC1 supports 24-bit audio format
[18]	B20	R	1	DAC1 supports 20-bit audio format
[17]	B16	R	1	DAC1 supports 16-bit audio format
[16]	B8	R	0	DAC1 does not support 8-bit audio format
[15:12]	Rsvd	R	0h	Reserved
[11]	R12	R	0	DAC1 does not support 384 kHz sample rate
[10]	R11	R	1	DAC1 supports 192 kHz sample rate
[9]	R10	R	1	DAC1 supports 176.4 kHz sample rate
[8]	R9	R	1	DAC1 supports 96 kHz sample rate
[7]	R8	R	1	DAC1 supports 88.2 kHz sample rate
[6]	R7	R	1	DAC1 supports 48 kHz sample rate
[5]	R6	R	1	DAC1 supports 44.1 kHz sample rate
[4]	R5	R	1	DAC1 supports 32 kHz sample rate
[3]	R4	R	1	DAC1 supports 22.05 kHz sample rate
[2]	R3	R	1	DAC1 supports 16 kHz sample rate
[1]	R2	R	1	DAC1 supports 11.025 kHz sample rate
[0]	R1	R	1	DAC1 supports 8 kHz sample rate

## Supported Stream Formats Parameter (PID = 0Bh)

Bit	Bitfield Name	RW	Default	Description
[31:3]	Rsvd	R	00000000h	Reserved
[2]	AC3	R	0	DAC1 does not support Dolby AC3 formatted data
[1]	Float32	R	1	DAC1 supports Float32 formatted data
[0]	PCM	R	1	DAC1 supports PCM formatted data

Rev 4.0 103

uun

01h

)2h

)3h

)4h

)5h

06h

07h

08h

001-

DI-

006

ΩDh

0Eh

0Fh

10h

11h

12h

3h

1.4b

15h

16h

17h



### Supported Power States Parameter (PID = 0Fh)

Bit	Bitfield Name	RW	Default	Description
[31:4]	Rsvd	R	0000000h	Reserved
[3]	D3Sup	R	1	D3 power state supported
[2]	D2Sup	R	1	D2 power state supported
[1]	D1sup	R	1	D1 power state supported
[0]	D0Sup	R	1	D0 power state supported

### **POWER STATE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F05h	00h	Bits [31:0] in the table below
Set	705h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description	
[31:8]	Rsvd	R	000000h	Reserved	
[7:4]	PS-Act	R	3h	Indicates the actual power state of the DAC1 node:	
				0h = D0	
				1h = D1	
				2h = D2	
				3h = D3	
				4h-Fh = Reserved	
				<b>Note:</b> The power state of the DAC1 node is controlled by <i>PS-Set</i> below, however the control may be superseded by the <i>PS-Set</i> of the AFG node.	
[3:0]	PS-Set	RW	3h	Sets the power state of the DAC1 node:	
				0h = D0	
				1h = D1	
				2h = D2	
				3h = D3	
				4h-Fh = Reserved	

### **CONVERTER STREAM, CHANNEL VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F06h	00h	Bits [31:0] in the table below
Set	706h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7:4]	Stream	RW	0h	Stream ID used by this widget. Note that Stream ID = 0h is used to indicate an unused stream, and converters will not transfer/receive link data for streams with an ID of 0h.
[3:0]	Channel	RW	0h	Lowest channel number used by this widget.



### **UNSOLICITED RESPONSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F08h	00h	Bits [31:0] in the table below
Set	708h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Enable	RW	0	0 = Unsolicited Responses disabled for this node
				1 = Unsolicited Responses enabled for this node
[6]	Rsvd	R	0	Reserved
[5:0]	Tag	RW	06h	A software programmable tag value that is returned in the top six bits (31:26) of every Unsolicited Response from this node.
				The default for <i>Tag</i> is equal to the Node ID.

Note: The Unsolicited Response for the AFG node is defined in the "Unsolicited Responses" section.

## UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	F8Eh	00h	Bits [31:0] in the table below
Set	78Eh	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:5]	Rsvd	R	0000000h	Reserved
[4:0]	Priority	RW	00h	Assigns a priority setting for queued Unsolicited Responses. Nodes with the lowest value have the highest priority, and so go to the front of the Unsolicited Response queue. Nodes with the same value for priority are queued on first-to-trigger basis.  00h = Highest priority   1Fh = Lowest priority

Rev 4.0 105

00h

01h

02h

)3h

04h

05h

06h

07h

08h

09h

)Ah

0.01

00h

0Dh

UEN

OFI

0h

1 111

ızn

13n

14n

15h

16h

1 / []





## DAC2 AUDIO OUTPUT CONVERTER WIDGET (NID = 07H)

### **STREAM FORMAT VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	Ah	0000h	Bits [31:0] in the table below
Set	2h	Bits [15:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:16]	Rsvd	R	0000h	Reserved
[15]	Туре	R	0	Indicates the widget supports only PCM streams
[14]	Base	RW	0	Used to set the base rate frequency:
				0 = 48 kHz
				1 = 44.1 kHz
[13:11]	Mult	RW	0h	Used to set the base rate multiplication factor:
				0h = x1 (48kHz, 44.1kHz or less)
				1h = x2 (96kHz, 88.2kHz, 32kHz)
				2h = Reserved
				3h = x4 (192kHz, 176.4kHz)
				4h-7h = Reserved
[10:8]	Div	RW	0h	Used to set the base rate division factor:
				0h = divide by 1 (48kHz, 44.1kHz)
				1h = divide by 2 (24kHz, 22.05kHz)
				2h = divide by 3 (16kHz, 32kHz)
				3h = divide by 4 (11.025kHz)
				4h = Reserved
				5h = divide by 6 (8kHz)
				6h = Reserved
				7h = Reserved
[7]	Rsvd	R	0	Reserved
[6:4]	Bits	RW	3h	Bits per Sample:
				0h = Reserved
				1h = 16 bits
				2h = 20 bits
				3h = 24 bits
				4h = 32 bits (Float 32)
				5h-7h = Reserved
[3:0]	Chan	RW	1h	Number of Channels in each frame of the stream:
				0h = 1 channel
				1h = 2 channels
				2h = 3 channels
				3h = 4 channels
				4h = 5 channels
				5h = 6 channels
				6h-Fh = reserved

Rev 4.0 107

001

01h

02h

0011

04h

05h

06h

07h

08h

09h

0Ah

0Bh

10h

11h

4.01

. . . .

156

16h

7h



### **AMPLIFIER GAIN/MUTE VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	Bh	A000h	Bits [31:0] in the response table below – applies to the left channel only
Get	Bh	8000h	Bits [31:0] in the response table below – applies to the right channel only
Set	3h	Bits [15:0] in the set table below	0000000h

### Response Table:

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Amplifier Mute	R	1	Shows the amplifier mute status of the selected channel:
				0 = Normal
				1 = Muted
[6:0]	Amplifier Gain	R	7Fh	Shows the amplifier gain setting (step number) for the selected channel. The actual gain applied is determined by the <i>Output Amplifier Capabilities Parameter</i> in the AFG (NID = 01h), and is shown below for convenience:
				00h = -63.5dB
				01h = -63.0dB
				0.5dB steps
				7Eh = −0.5dB
				7Fh = 0dB

### Set Table:

Bit	Bitfield Name	RW	Default	Description
[15]	Set Output Amp	W	1	Indicates that the programming refers to the output amplifier on this widget
[14]	Set Input Amp	W	0	Not applicable to this widget
[13]	Set Left Amp	W	1	0 = Left channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields
				1 = Left channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields
[12]	Set Right Amp	W	1	0 = Right channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields
				1 = Right channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields
[11:8]	Index	W	0h	Not applicable to this widget
[7]	Mute	W	1	0 = Normal operation
				1 = Mute
[6:0]	Gain	W	7Fh	Step number of the gain – see <i>Amplifier Gain</i> in response table above for details of actual gain values



## **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

#### Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	0h	Indicates that this is an Audio Output Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	1	Indicates that the Power State Verb is supported in this widget
[9]	Digital	R	0	Indicates that this widget is translating analogue data
[8]	Conn List	R	0	Indicates that a connection list is not present
[7]	Unsol Capable	R	1	Widget supports Unsolicited Responses
[6]	ProcWidget	R	0	Widget does not have processing capabilities
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	1	Widget has a subset of the supported rates defined for the AFG
[3]	Amp Parameter Override	R	0	The AFG amplifier parameters are used for this widget
[2]	Out Amp Present	R	1	Output amplifier is present in this widget
[1]	In Amp Present	R	0	Input amplifier not present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

#### Supported Rates Parameter (PID = 0Ah)

Bit	Bitfield Name	RW	Default	Description
[31:21]	Rsvd	R	000h	Reserved
[20]	B32	R	1	DAC2 supports 32-bit audio format
[19]	B24	R	1	DAC2 supports 24-bit audio format
[18]	B20	R	1	DAC2 supports 20-bit audio format
[17]	B16	R	1	DAC2 supports 16-bit audio format
[16]	B8	R	0	DAC2 does not support 8-bit audio format
[15:12]	Rsvd	R	0h	Reserved
[11]	R12	R	0	DAC2 does not support 384 kHz sample rate
[10]	R11	R	1	DAC2 supports 192 kHz sample rate
[9]	R10	R	1	DAC2 supports 176.4 kHz sample rate
[8]	R9	R	1	DAC2 supports 96 kHz sample rate
[7]	R8	R	1	DAC2 supports 88.2 kHz sample rate
[6]	R7	R	1	DAC2 supports 48 kHz sample rate
[5]	R6	R	1	DAC2 supports 44.1 kHz sample rate
[4]	R5	R	1	DAC2 supports 32 kHz sample rate
[3]	R4	R	1	DAC2 supports 22.05 kHz sample rate
[2]	R3	R	1	DAC2 supports 16 kHz sample rate
[1]	R2	R	1	DAC2 supports 11.025 kHz sample rate
[0]	R1	R	1	DAC2 supports 8 kHz sample rate

## Supported Stream Formats Parameter (PID = 0Bh)

Bit	Bitfield Name	RW	Default	Description
[31:3]	Rsvd	R	00000000h	Reserved
[2]	AC3	R	0	DAC2 does not support Dolby AC3 formatted data
[1]	Float32	R	1	DAC2 supports Float32 formatted data
[0]	PCM	R	1	DAC2 supports PCM formatted data

Rev 4.0 109

UUI

)1h

)2h

J3N

)4h

)5h

06h

07h

08h

09h

0Ah

0Bh

0Ch

UDh

UEh

0Fh

10h

11h

l2h

3h

14h

15h

16h



## Supported Power States Parameter (PID = 0Fh)

Bit	Bitfield Name	RW	Default	Description
[31:4]	Rsvd	R	0000000h	Reserved
[3]	D3Sup	R	1	D3 power state supported
[2]	D2Sup	R	1	D2 power state supported
[1]	D1sup	R	1	D1 power state supported
[0]	D0Sup	R	1	D0 power state supported

### **POWER STATE VERB**

I		Verb ID	Payload [7:0]	Response[31:0]
ĺ	Get	F05h	00h	Bits [31:0] in the table below
ĺ	Set	705h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7:4]	PS-Act	R	3h	Indicates the actual power state of the DAC2 node:
				0h = D0
				1h = D1
				2h = D2
				3h = D3
				4h-Fh = Reserved
				The power state of the DAC2 node is controlled by <i>PS-Set</i> below, however the control may be superseded by the <i>PS-Set</i> of the AFG node.
[3:0]	PS-Set	RW	3h	Sets the power state of the DAC2 node:
				0h = D0
				1h = D1
				2h = D2
				3h = D3
				4h-Fh = Reserved

## CONVERTER STREAM, CHANNEL VERB

	Verb ID	Payload [7:0]	Response[31:0]
Get	F06h	00h	Bits [31:0] in the table below
Set	706h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7:4]	Stream	RW	0h	Stream ID used by this widget. Note that Stream ID = 0h is used to indicate an unused stream, and converters will not transfer/receive link data for streams with an ID of 0h.
[3:0]	Channel	RW	0h	Lowest channel number used by this widget.



#### **UNSOLICITED RESPONSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F08h	00h	Bits [31:0] in the table below
Set	708h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description	
[31:8]	Rsvd	R	000000h	Reserved	
[7]	Enable	RW	0	0 0 = Unsolicited Responses disabled for this node	
				1 = Unsolicited Responses enabled for this node	
[6]	Rsvd	R	0	Reserved	
[5:0]	Tag	RW	O7h A software programmable tag value that is returned in the top six bits (31:26) of every Unsolicited Response from this node.		
				The default for <i>Tag</i> is equal to the Node ID.	

**Note:** The Unsolicited Response for the AFG node is defined in the "Unsolicited Responses" section.

## UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	F8Eh	00h	Bits [31:0] in the table below
Set	78Eh	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:5]	Rsvd	R	0000000h	Reserved
[4:0]	Priority	RW	00h	Assigns a priority setting for queued Unsolicited Responses. Nodes with the lowest value have the highest priority, and so go to the front of the Unsolicited Response queue. Nodes with the same value for priority are queued on first-to-trigger basis.  00h = Highest priority   1Fh = Lowest priority

Rev 4.0 111

00h

)1h

02h

)3h

04h

05h

06h

07h

JAII

0Bh

0Ch

0Dh

0Eh

0Fh

l Oh

11h

12h

3n

14h

15h

16h

l7h







RESERVED (NID = 08H)

08h

11h







## MIC1 MUX SELECTOR WIDGET (NID = 09H)

#### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

#### Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	3h	Indicates that this is an Audio Selector Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	0	Indicates that the Power State Verb is not supported in this widget
[9]	Digital	R	0	Indicates that this widget is translating analogue data
[8]	Conn List	R	1	Indicates that a connection list is present
[7]	Unsol Capable	R	0	Widget supports Unsolicited Responses
[6]	ProcWidget	R	0	Widget does not have processing capabilities
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	0	Widget does not override the format defined for the AFG
[3]	Amp Parameter Override	R	0	Not applicable as this widget does not have amplifier capabilities
[2]	Out Amp Present	R	0	Output amplifier is not present in this widget
[1]	In Amp Present	R	0	Input amplifier not present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

### Connection List Length Parameter (PID = 0Eh)

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Long Form	R	0	Indicates that the connection list items are in short form
[6:0]	Connection List Length	R	02h	Indicates that there is 2 NID entries in the connection list

#### **CONNECTION SELECT CONTROL VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F01h	00h	Bits [31:0] in the table below
Set	701h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7:0]	Connection	RW	00h	Connection index currently set:
	Index			00h = Connection list entry 0
				01h = Connection list entry 1
				02h-FFh = Reserved

Rev 4.0 115

01h

)2h

7-11

0.01

07h

08h

09h

Αh

JDII

006

0Eh

)Hh

10h

0.1

4h

15h

16h

l7h



## **GET CONNECTION LIST ENTRY VERB**

	Verb ID	Payload [7:0]	Response[31:0]	
Get	F02h	00h	Bits [31:0] in the table below	

Bit	Bitfield Name	RW	Default	Description	
[31:24]	Conn List Entry 3	R	00h	Unused connection list entry	
[23:16]	Conn List Entry 2	R	00h	Unused connection list entry	
[15:8]	Conn List Entry 1	R	0Eh	Indicates that the MIC1 Mux Widget connects to the Port-D Pin Widget (NID = 0Eh)  Note: When the MIC1 Widget (NID=03h) is in power state D0, and the MIC1 Mux Widget sources Port-D (Digital Microphone), the analogue circuitry for the ADC, PGA, and MICBIAS is disabled to save power. Also, the DMICCLK is automatically enabled and runs at a rate determined by the MIC1 Stream Format verb.	
[7:0]	Conn List Entry 0	R	0Bh	Indicates that the MIC1 Mux Selector Widget connects to the PGA2 Widget (NID = 0Bh)	



# **PGA1 SELECTOR WIDGET (NID = 0AH)**

### **AMPLIFIER GAIN/MUTE VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	Bh	A000h	Bits [31:0] in the response table below – applies to the left channel only
Get	Bh	8000h	Bits [31:0] in the response table below – applies to the right channel only
Set	3h	Bits [15:0] in the set table below	0000000h

#### Response Table:

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Amplifier Mute	R	1	Shows the amplifier mute status of the selected channel:
				0 = Normal
				1 = Muted
[6:0]	Amplifier Gain	R	18h	Shows the amplifier gain setting (step number) for the selected channel. The actual gain applied is determined by the <i>Output Amplifier Capabilities Parameter</i> , and is shown below for convenience: $00h = -12dB$ $01h = -11.5dB$ $ 0.5dB steps$ $2Fh = +11.5dB$ $30h = +12dB$
				Note: If the <i>BTL</i> register in the Port-E Pin Widget (NID=0Ch) <i>EAPD/BTL Verb</i> is set to 0, the input is single-ended and the actual gain setting applied has an offset of −3dB from the setting configured by the <i>Gain</i> register.

#### Set Table:

Bit	Bitfield Name	RW	Default	Description
[15]	Set Output Amp	W	1	Indicates that the programming refers to the output amplifier on this widget
[14]	Set Input Amp	W	0	Not applicable to this widget
[13]	Set Left Amp	W	1	0 = Left channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields
				1 = Left channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields
[12]	Set Right Amp	W	1	0 = Right channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields
				1 = Right channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields
[11:8]	Index	W	0h	Not applicable to this widget
[7]	Mute	W	1	0 = Normal operation
				1 = Mute
				<b>Note:</b> When mute is applied to a channel, the data value is overwritten with all zeros.
[6:0]	Gain	W	18h	Step number of the gain – see <i>Amplifier Gain</i> in response table above for details of actual gain values

Rev 4.0 117

00h

UIII

026

04h

)5h

07h

001-

0.01

0Ah

0Bh

11h

211

1011

14h

15h

6h



#### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

### Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	3h	Indicates that this is an Audio Selector Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	0	Indicates that the Power State Verb is not supported in this widget
[9]	Digital	R	0	Indicates that this widget is translating analogue data
[8]	Conn List	R	1	Indicates that a connection list is present
[7]	Unsol Capable	R	0	Widget supports Unsolicited Responses
[6]	ProcWidget	R	0	Widget does not have processing capabilities
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	0	Widget does not override the format defined for the AFG
[3]	Amp Parameter Override	R	1	The AFG amplifier parameters are overridden for this node
[2]	Out Amp Present	R	1	Output amplifier is present in this widget
[1]	In Amp Present	R	0	Input amplifier not present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

## Connection List Length Parameter (PID = 0Eh)

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Long Form	R	0	Indicates that the connection list items are in short form
[6:0]	Connection List Length	R	01h	Indicates that there is 1 NID entries in the connection list

### Output Amplifier Capabilities Response Format (PID = 12h)

Bit	Bitfield Name	RW	Default	Description
[31]	Mute Capable	R	1	PGA1 is capable of muting
[30:23]	Rsvd	R	0000h	Reserved
[22:16]	Step Size	R	01h	Gain step size is 0.5dB
[15]	Rsvd	R	0	Reserved
[14:8]	Num Steps	R	30h	Number of steps in gain range is 49 (-12dB to +12dB)
[7]	Rsvd	R	0	Reserved
[6:0]	Offset	R	18h	The step number that 0dB corresponds to is 18h

## **GET CONNECTION LIST ENTRY VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F02h	00h	Bits [31:0] in the table below

Bit	Bitfield Name	RW	Default	Description
[31:24]	Conn List Entry 3	R	00h	Unused connection list entry
[23:16]	Conn List Entry 2	R	00h	Unused connection list entry
[15:8]	Conn List Entry 1	R	00h	Unused connection list entry
[7:0]	Conn List Entry 0	R	0Ch	Indicates that the PGA1 Widget connects to the Port-E Pin Widget (NID = 0Ch)



## PGA CONTROL VERB (VENDOR-SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	FB2h	00h	Bits [31:0] in the table below
Set1	7B2h	Bits [7:0] in the table below	0000000h
Set2	7B3h	Bits [15:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:14]	Rsvd	R	00000h	Reserved
[13:0]	Terminal Count	RW	1FFFh	Set the period of the zero detect timeout clock:
				0000h = Timeout disabled
				0001h to 03FFh = Reserved
				0400h = 1025 x 20.833μs (21.3ms)
				0401h = 1026 x 20.833μs (21.4ms)
				1FFFh = 8192 × 20.833µs (171ms)
				3FFFh = 16384 × 20.833μs (341ms)
				Note: The timeout clock uses the SYNC signal from the HDA interface.
				so the absolute value of the timeout period will depend on the absolute accuracy of the SYNC signal.

/ 011

01h

02h

)3h

04h

15h

06h

07h

noh

0Ah

)Rh

UCh

0Dh

0Eh

0Fh

l Oh

11h

12h

3h

1.4b

15h

16h

17h







# PGA2 SELECTOR WIDGET (NID = 0BH)

### **AMPLIFIER GAIN/MUTE VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	Bh	A000h	Bits [31:0] in the response table below – applies to the left channel only
Get	Bh	8000h	Bits [31:0] in the response table below – applies to the right channel only
Set	3h	Bits [15:0] in the set table below	0000000h

#### Response Table:

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Amplifier Mute	R	1	Shows the amplifier mute status of the selected channel:
				0 = Normal
				1 = Muted
[6:0]	Amplifier Gain	R	18h	Shows the amplifier gain setting (step number) for the selected channel.  The actual gain applied is determined by the <i>Output Amplifier Capabilities Parameter</i> , and is shown below for convenience:
				00h = −12dB
				01h = −11.5dB
				0.5dB steps
				2Fh = +11.5dB
				30h = +12dB

#### Set Table:

Bit	Bitfield Name	RW	Default	Description
[15]	Set Output Amp	W	1	Indicates that the programming refers to the output amplifier on this widget
[14]	Set Input Amp	W	0	Not applicable to this widget
[13]	Set Left Amp	W	1	0 = Left channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields
				1 = Left channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields
[12]	Set Right Amp	W	1	0 = Right channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields
				1 = Right channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields
[11:8]	Index	W	0h	Not applicable to this widget
[7]	Mute	W	1	0 = Normal operation
				1 = Mute
				<b>Note:</b> When mute is applied to a channel, the data value is overwritten with all zeros.
[6:0]	Gain	W	18h	Step number of the gain – see <i>Amplifier Gain</i> in response table above for details of actual gain values

Rev 4.0 121

00h

01h

UZN

USII

0 111

05h

001

076

08h

09h

ΩAh

0Bh

0Ch

11h

13n

14n

15h

16h



#### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]		
Get	F00h	Parameter ID (PID)	Parameter Value		

### Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	3h	Indicates that this is an Audio Selector Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	0	Indicates that the Power State Verb is not supported in this widget
[9]	Digital	R	0	Indicates that this widget is translating analogue data
[8]	Conn List	R	1	Indicates that a connection list is present
[7]	Unsol Capable	R	0	Widget supports Unsolicited Responses
[6]	ProcWidget	R	0	Widget does not have processing capabilities
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	0	Widget does not override the format defined for the AFG
[3]	Amp Parameter Override	R	1	The AFG amplifier parameters are overridden for this node
[2]	Out Amp Present	R	1	Output amplifier is present in this widget
[1]	In Amp Present	R	0	Input amplifier not present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

## Connection List Length Parameter (PID = 0Eh)

Bit	Bitfield Name	RW	Default	Description	
[31:8]	Rsvd	R	000000h	Reserved	
[7]	Long Form	R	0	Indicates that the connection list items are in short form	
[6:0]	Connection List Length	R	01h	Indicates that there is 1 NID entry in the connection list	

### Output Amplifier Capabilities Response Format (PID = 12h)

Bit	Bitfield Name	RW	Default	Description
[31]	Mute Capable	R	1	PGA2 is capable of muting
[30:23]	Rsvd	R	0000h	Reserved
[22:16]	Step Size	R	01h	Gain step size is 0.5dB
[15]	Rsvd	R	0	Reserved
[14:8]	Num Steps	R	30h	Number of steps in gain range is 49 (-12dB to +12dB)
[7]	Rsvd	R	0	Reserved
[6:0]	Offset	R	18h	The step number that 0dB corresponds to is 18h

#### **GET CONNECTION LIST ENTRY VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F02h	00h	Bits [31:0] in the table below

Bit	Bitfield Name	RW	Default	Description
[31:24]	Conn List Entry 3	R	00h	Unused connection list entry
[23:16]	Conn List Entry 2	R	00h	Unused connection list entry
[15:8]	Conn List Entry 1	R	00h	Unused connection list entry
[7:0]	Conn List Entry 0	R	0Dh	Indicates that the PGA2 Widget connects to the Port-B Pin Widget (NID = 0Dh)



# PGA CONTROL VERB (VENDOR-SPECIFIC

	Verb ID	Payload [7:0]	Response[31:0]
Get	FB2h	00h	Bits [31:0] in the table below
Set1	7B2h	Bits [7:0] in the table below	0000000h
Set2	7B3h	Bits [15:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description	
[31:14]	Rsvd	R	00000h	Reserved	
[13:0]	Terminal Count	RW	1FFFh	Set the period of the zero detect timeout clock:	
				0000h = Timeout disabled	
				0001h to 03FFh = Reserved	
				0400h = 1025 x 20.833μs (21.3ms)	
				0401h = 1026 x 20.833µs (21.4ms)	
				1FFFh = 8192 × 20.833µs (171ms)	
				3FFFh = 16384 × 20.833μs (341ms)	
				<b>Note:</b> The timeout clock uses the SYNC signal from the HDA interface, so the absolute value of the timeout period will depend on the absolute accuracy of the SYNC signal.	

001

01h

02h

03h

04h

05h

06h

07h

08h

ΛΛh

0Bh

UCN

UDh

UEN

Ohh

l Oh

11h

ızn

3n

14h

15h

16h

7h







# PORT-E PIN COMPLEX WIDGET (NID = 0CH)

#### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

#### Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	4h	Indicates that this is a Pin Complex Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	0	Indicates that the Power State Verb is not supported in this widget
[9]	Digital	R	0	Indicates that this widget is translating analogue data
[8]	Conn List	R	0	Indicates that a connection list is not present
[7]	Unsol Capable	R	1	Widget supports Unsolicited Responses
[6]	ProcWidget	R	0	Widget does not have processing capabilities
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	0	Widget does not override the format defined for the AFG
[3]	Amp Parameter Override	R	0	Not applicable as this widget does not have amplifier capabilities
[2]	Out Amp Present	R	0	Output Amplifier not present in this widget
[1]	In Amp Present	R	0	Input amplifier not present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

### Pin Capabilities Parameter (PID = 0Ch)

Bit	Bitfield Name	RW	Default	Description
	Dittielu Name			•
[31:17]	Rsvd	R	0000h	Reserved
[16]	EAPD Capable	R	0	Widget does not support an EAPD pin
[15:8]	VRef Control	R	00h	VRef not supported
[7]	Rsvd	R	0	Reserved
[6]	Balanced I/O Pins	R	1	Indicates that this widget has balanced pins
[5]	Input Capable	R	1	Indicates that this widget is input capable
[4]	Output Capable	R	0	Indicates that this widget is not output capable
[3]	Headphone Drive Capable	R	0	Not applicable as this in an input port
[2]	Presence Detect Capable	R	1	Indicates that this widget can perform presence detection via the Pin Sense Verb
[1]	Trigger Required	R	0	Impedance measurement not supported
[0]	Impedance Sense Capable	R	0	Impedance measurement not supported

Rev 4.0 125

00h

01h

)3h

J4N

Jbn

OOH

07h

08h

09h

0Ah

0Bh

0Ch

0Dh

OI II

10h

11h

2n

3n

4h

15h

16h



### PIN WIDGET CONTROL VERB

	Verb ID	Payload [7:0]	Response[31:0]
Get	F07h	00h	Bits [31:0] in the table below
Set	707h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	H-Phn Enable	R	0	Not applicable as this in an input port
[6]	Out Enable	R	0	Not applicable as this in an input port
[5]	In Enable	RW	1	Controls the input path:
				0 = Input path is disabled
				1 = Input path is enabled
[4:3]	Rsvd	R	0h	Reserved
[2:0]	VRefEn	R	0h	Selectable VRef not supported

#### **UNSOLICITED RESPONSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F08h	00h	Bits [31:0] in the table below
Set	708h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Enable	RW	0	0 = Unsolicited Responses disabled for this node
				1 = Unsolicited Responses enabled for this node
[6]	Rsvd	R	0	Reserved
[5:0]	Tag	RW	0Ch	A software programmable tag value that is returned in the top six bits (31:26) of every Unsolicited Response from this node.
				The default for <i>Tag</i> is equal to the Node ID.

**Note:** The Unsolicited Response for the AFG node is defined in the "Unsolicited Responses" section.

#### **PIN SENSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F09h	00h	Bits [31:0] in the table below

Bit	Bitfield Name	RW	Default	Description
[31]	Presence Detect	R	0	0 = nothing plugged into Port-E
				1 = something plugged into Port-E
[30:0]	Impedance Sense	R	00000000h	Impedance sense not supported

### **EAPD/BTL VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F0Ch	00h	Bits [31:0] in the table below
Set	70Ch	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:1]	Rsvd	R	000000h	Reserved
[0]	BTL	RW	1	Controls the configuration of the input pins on Port-E:
				0 = Single-ended mode
				1 = BTL (balanced) mode



## **CONFIGURATION DEFAULT VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F1Ch	00h	Bits [31:0] in the table below
Set1	71Ch	Bits [7:0] in the table below	0000000h
Set2	71Dh	Bits [15:8] in the table below	0000000h
Set3	71Eh	Bits [23:16] in the table below	0000000h
Set4	71Fh	Bits [31:24] in the table below	00000000h

Bit	Bitfield Name	RW	Default	Description
[31:30]	Port Connectivity	RW	0h	Indicates the external connectivity:
				0h = Jack
				1h = No physical connection
				2h = A fixed function device
				3h = both a jack and an internal device are connected
[29:28]	Location[5:4]	RW	0h	Gross physical location of the device connected to Port-E:
				0h = External on primary chassis
				1h = Internal
				2h = Separate chassis
				3h = Other
[27:24]	Location[3:0]	RW	1h	Geometric location of the device connected to Port-E:
				0h = Not applicable
				1h = Rear
				2h = Front
				3h = Left
				4h = Right
				5h = Top
				6h = Bottom
				7h = Special
				8h = Special
				9h = Special
				Ah-Fh = Reserved
[23:20]	Default Device	RW	8h	Indicates the intended use of Port-E:
				0h = Line out
				1h = Speaker
				2h = Headphone out
				3h = CD
				4h = S/PDIF out
				5h = Digital other out
				6h = Modem line side
				7h = Modem handset side
				8h = Line in
				9h = AUX
				Ah = Mic in
				Bh = Telephony
				Ch = S/PDIF in
				Dh = Digital other in
				Eh = Reserved
				Fh = Other

0Ch

11h



			Description
Connection Type	RW	1h	Indicates the type of physical interface on Port-E:
			0h = Unknown
			1h = 3.5mm stereo/mono jack
			2h = 1/4" stereo/mono jack
			3h = ATAPI internal
			4h = RCA jack (for analogue audio or coaxial S/PDIF)
			5h = Optical
			6h = Other digital
			7h = Other analogue
			8h = Multi-channel analogue (DIN)
			9h = XLR/Professional
			Ah = RJ-11 (modem)
			Bh = Combination
			Ch-Eh = Reserved
			Fh = Other
Colour	RW	3h	Indicates the colour of the physical jack on Port-E:
			0h = Unknown
			1h = Black
			2h = Grey
			3h = Blue
			4h = Green
			5h = Red
			6h = Orange
			7h = Yellow
			8h = Purple
			9h = Pink
			Ah-Dh = Reserved
			Eh = White
			Fh = Other
Misc	RW	0h	Presence detection override:
			0h = Presence detection indicated by <i>Pin Capabilities Parameter</i>
			1h = Presence detection not supported. If the <i>Pin Capabilities Parameter</i> indicates that that presence detection is supported by the node, then this
			bit is used to override it to indicate the external circuitry is not capable of
			supporting presence detect
<b>5</b> ( )	514		All other values are reserved
	RW	⊦h	Association number:
ASSOCIATION			0h = Reserved
			1h-Eh = Multi Channel or Single Pin Widget
	514		Fh = Single Pin Widget Only
Sequence	RW	0h	Sequence number used to define individual channel pairs within a stream.
			All values (0h-Fh) are available for use. Use a value of 0h for Single Pin
			Widget.
		Misc RW  Default RW Association	Misc RW Oh  Default RW Fh Association

**Note**: The *Configuration Default Verb* is not reset to its default value during a reset from any source. The settings are only lost when digital power is removed from the WM8860. When digital power is restored, the System BIOS must restore the settings.



## UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	F8Eh	00h	Bits [31:0] in the table below
Set	78Eh	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:5]	Rsvd	R	0000000h	Reserved
[4:0]	Priority	RW	00h	Assigns a priority setting for queued Unsolicited Responses. Nodes with the lowest value have the highest priority, and so go to the front of the Unsolicited Response queue. Nodes with the same value for priority are queued on first-to-trigger basis.  00h = Highest priority  1Fh = Lowest priority

## **AUTO-MUTE CONTROL VERB (VENDOR-SPECIFIC)**

	Verb ID	Payload [7:0]	Response[31:0]
Get	FB0h	00h	Bits [31:0] in the table below
Set	7B0h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:1]	Rsvd	R	0000000h	Reserved
[0]	PD_AUTOMUTE	RW	0	Controls the WM8860 automute behavior when there is nothing plugged into Port-E:
				0 = Automute disabled
				1 = Automute enabled
				Note: When PD_AUTOMUTE=1 and Presence Detect (bit 31 in verb F09h)=1 the WM8860 will replace the samples in the stream with zeros

Rev 4.0 129

00h

)1h

02h

)3h

04h

05h

06h

)7h

ngh

JAH

ODII

0Ch

UDI

. . . .

11h

156

16h







# PORT-B PIN COMPLEX WIDGET (NID = 0DH)

### **AMPLIFIER GAIN/MUTE VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	Bh	2000h	Bits [31:0] in the response table below – applies to the left channel only
Get	Bh	0000h	Bits [31:0] in the response table below – applies to the right channel only
Set	3h	Bits [15:0] in the set table below	0000000h

#### Response Table:

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Amplifier Mute	R	0	Mute not supported
[6:0]	Amplifier Gain	R	00h	Shows the amplifier gain setting (step number) for the selected channel. The actual gain applied is determined by the <i>Input Amplifier Capabilities Parameter</i> in the AFG (NID = 01h), and is shown below for convenience: 00h = 0dB
				01h = +10dB
				02h = +20dB
				03h = +30dB

#### Set Table:

Bit	Bitfield Name	RW	Default	Description
[15]	Set Output Amp	R	0	Not applicable to this widget
[14]	Set Input Amp	W	1	Indicates that the programming refers to the input amplifier on this widget
[13]	Set Left Amp	W	1	0 = Left channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields
				1 = Left channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields
[12]	Set Right Amp	W	1	0 = Right channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields
				1 = Right channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields
[11:8]	Index	R	0h	Not applicable to this widget
[7]	Mute	R	0	Mute not supported
[6:0]	Gain	W	0h	Step number of the gain – see <i>Amplifier Gain</i> in response table above for details of actual gain values
				<b>Note:</b> Port-B amplifier implements Mic-Boost. The gain setting is always applied to both left and right channels when either (or both) the <i>Set Left Amp</i> or <i>Set Right Amp</i> registers are set. Dedicated boost settings for each channel are not supported.

Rev 4.0 131

00h

01h

02h

03h

04h

05h

. . .

07h

0.01

206

)Ah

)Bh

0Dh

10h

11h

Zn

3h

14h

15h

16h

l7h



### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

## Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	4h	Indicates that this is a Pin Complex Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	0	Indicates that the Power State Verb is not supported in this widget
[9]	Digital	R	0	Indicates that this widget is translating analogue data
[8]	Conn List	R	0	Indicates that a connection list is not present
[7]	Unsol Capable	R	1	Widget supports Unsolicited Responses
[6]	ProcWidget	R	0	Widget does not have processing capabilities
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	0	Widget does not override the format defined for the AFG
[3]	Amp Parameter Override	R	0	The AFG amplifier parameters are used for this widget
[2]	Out Amp Present	R	0	Output amplifier not present in this widget
[1]	In Amp Present	R	1	Input amplifier is present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

## Pin Capabilities Parameter (PID = 0Ch)

Bit	Bitfield Name	RW	Default	Description
[31:17]	Rsvd	R	0000h	Reserved
[16]	EAPD Capable	R	0	Widget does not support an EAPD pin
[15:8]	VRef Control	R	17h	Indicates that the MICBIAS pin supports the following voltage levels:
				• Hi-Z
				Ground
				• AVDD1 * 50%
				• AVDD1 * 80%
[7]	Rsvd	R	0	Reserved
[6]	Balanced I/O Pins	R	1	Indicates that this widget has balanced pins
[5]	Input Capable	R	1	Indicates that this widget is input capable
[4]	Output Capable	R	0	Indicates that this widget is not output capable
[3]	Headphone Drive Capable	R	0	Not applicable as this in an input port
[2]	Presence Detect Capable	R	1	Indicates that this Widget can perform presence detection
[1]	Trigger Required	R	1	Indicates that impedance measurement uses the <i>Execute</i> command that is part of the <i>Pin Sense Verb</i>
[0]	Impedance Sense Capable	R	1	Impedance measurement supported



#### **PIN WIDGET CONTROL VERB**

	Verb ID	Payload [7:0]	Response[31:0]	
Get	F07h	00h	Bits [31:0] in the table below	
Set	707h	Bits [7:0] in the table below	0000000h	

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	H-Phn Enable	R	0	Not applicable as this in an input port
[6]	Out Enable	R	0	Not applicable as this in an input port
[5]	In Enable	RW	1	Controls the input path:
				0 = Input path is disabled
				1 = Input path is enabled
[4:3]	Rsvd	R	0	Reserved
[2:0]	VRefEn	RW	0h	MICBIAS control:
				0h = Hi-Z
				1h = AVDD1 * 50%
				2h = Ground (0V)
				3h = Reserved
				4h = AVDD1 * 80%
				5h-7h = Reserved
				Note: If VRefEn is set to a reserved value, the value programmed will be 0h (Hi-Z) to avoid any potential damage to external components

#### **UNSOLICITED RESPONSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]	
Get	F08h	00h	Bits [31:0] in the table below	
Set	708h	Bits [7:0] in the table below	0000000h	

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Enable	RW	0	0 = Unsolicited Responses disabled for this node
				1 = Unsolicited Responses enabled for this node
[6]	Rsvd	R	0	Reserved
[5:0]	Tag	RW	0Dh A software programmable tag value that is returned in the top six bits (31:26) of every Unsolicited Response from this node.	
				The default for <i>Tag</i> is equal to the Node ID.

**Note:** The Unsolicited Response for the AFG node is defined in the "Unsolicited Responses" section.

### **PIN SENSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F09h	00h	Bits [31:0] in the table below
Execute	709h	00h	0000000h

Bit	Bitfield Name	RW	Default	Description
[31]	Presence Detect	R	0	0 = nothing plugged into Port-B
				1 = something plugged into Port-B
[30:0]	Impedance	R	7FFFFFFh	Impedance sense value:
	Sense			7FFFFFFh = measurement not ready

Rev 4.0 133

00h

)1h

JZN

06h

07h

006

0Dh

0Eh

OLL

IUII

1 111

1211

1011

4n

15h

16h



### EAPD/BTL VERB

	Verb ID	Payload [7:0]	Response[31:0]
Get	F0Ch	00h	Bits [31:0] in the table below
Set	70Ch	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:1]	Rsvd	R	000000h	Reserved
[0]	BTL	RW	1	Controls the configuration of the input pins on Port-B:
				0 = Single-ended mode
				1 = BTL (balanced) mode

### **CONFIGURATION DEFAULT VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F1Ch	00h	Bits [31:0] in the table below
Set1	71Ch	Bits [7:0] in the table below	0000000h
Set2	71Dh	Bits [15:8] in the table below	0000000h
Set3	71Eh	Bits [23:16] in the table below	0000000h
Set4	71Fh	Bits [31:24] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:30]	Port Connectivity	RW	0h	Indicates the external connectivity:
				0h = Jack
				1h = No physical connection
				2h = A fixed function device
				3h = both a jack and an internal device are connected
[29:28]	Location[5:4]	RW	0h	Gross physical location of the device connected to Port-B:
				0h = External on primary chassis
				1h = Internal
				2h = Separate chassis
				3h = Other
[27:24]	Location[3:0]	RW	2h	Geometric location of the device connected to Port-B:
				0h = Not applicable
				1h = Rear
				2h = Front
				3h = Left
				4h = Right
				5h = Top
				6h = Bottom
				7h = Special
				8h = Special
				9h = Special
				Ah-Fh = Reserved



Bit	Bitfield Name	RW	Default	Description
[23:20]	Default Device	RW	Ah	Indicates the intended use of Port-B:
				0h = Line out
				1h = Speaker
				2h = Headphone out
				3h = CD
				4h = S/PDIF out
				5h = Digital other out
				6h = Modem line side
				7h = Modem handset side
				8h = Line in
				9h = AUX
				Ah = Mic in
				Bh = Telephony
				Ch = S/PDIF in
				Dh = Digital other in
				Eh = Reserved
				Fh = Other
[19:16]	Connection Type	RW	1h	Indicates the type of physical interface on Port-B:
	,			0h = Unknown
				1h = 3.5mm stereo/mono jack
				2h = 1/4" stereo/mono jack
				3h = ATAPI internal
				4h = RCA jack (for analogue audio or coaxial S/PDIF)
				5h = Optical
				6h = Other digital
				7h = Other analogue
				8h = Multi-channel analogue (DIN)
				9h = XLR/Professional
				Ah = RJ-11 (modem)
				Bh = Combination
				Ch-Eh = Reserved
				Fh = Other
[15:12]	Colour	RW	9h	Indicates the colour of the physical jack on Port-B:
[]	00.00.			Oh = Unknown
				1h = Black
				2h = Grey
				3h = Blue
				4h = Green
				5h = Red
				6h = Orange
				7h = Yellow
				8h = Purple
				9h = Pink
				Ah-Dh = Reserved
				Eh = White
				Fh = Other

Rev 4.0 135

00h

01h

02h

03h

04h

05h

06h

07h

0.01

ngh

ΩAh

0Bh

0Ch

0Dh

0Fh

10h

11h

12h

14h

5h

16h



Bit	Bitfield Name	RW	Default	Description
[11:8]	Misc	RW	0h	Presence detection override:
				0 = Presence detection indicated by <i>Pin Capabilities Parameter</i>
				1 = Presence detection not supported. If the <i>Pin Capabilities Parameter</i>
				indicates that that presence detection is supported by the node, then this bit is used to override it to indicate the external circuitry is not capable of
				supporting presence detect
				37
				All other values are reserved
[7:4]	Default	RW	Fh	Association number:
	Association			0h = Reserved
				1h-Eh = Multi Channel or Single Pin Widget
				Fh = Single Pin Widget Only
[3:0]	Sequence	RW	0h	Sequence number used to define individual channel pairs within a stream.
				All values (0h-Fh) are available for use. Use a value of 0h for Single Pin Widget.

**Note**: The *Configuration Default Verb* is not reset to its default value during a reset from any source. The settings are only lost when digital power is removed from the WM8860. When digital power is restored, the System BIOS must restore the settings.

## UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	F8Eh	00h	Bits [31:0] in the table below
Set	78Eh	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:5]	Rsvd	R	0000000h	Reserved
[4:0]	Priority	RW	00h	Assigns a priority setting for queued Unsolicited Responses. Nodes with the lowest value have the highest priority, and so go to the front of the Unsolicited Response queue. Nodes with the same value for priority are queued on first-to-trigger basis.
				00h = Highest priority
				1Fh = Lowest priority

### **DIFFERENTIAL VERB (VENDOR-SPECIFIC)**

	Verb ID	Payload [7:0]	Response[31:0]
Get	FA3h	00h	Bits [31:0] in the table below
Set	7A3h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:1]	Rsvd	R	0000000h	Reserved
[0]	Differential Mode	RW	1	Differential mode:
				0 = Differential (Microphone)
				1 = Pseudo-differential

### **AUTO-MUTE CONTROL VERB (VENDOR-SPECIFIC)**

	Verb ID	Payload [7:0]	Response[31:0]
Get	FB0h	00h	Bits [31:0] in the table below
Set	7B0h	Bits [7:0] in the table below	0000000h

Bit Bitfie	ld Name RW	Default	Description
[31:1] Rsvd	R	0000000h	Reserved



[0]	PD_AUTOMUTE	RW	0	Controls the WM8860 automute behavior when there is nothing plugged into Port-B:
				0 = Automute disabled
				1 = Automute enabled
				Note: When PD_AUTOMUTE=1 and Presence Detect=1 the WM8860 will replace the samples in the stream with zeros

00

∩2h

03h

)4h

15h

06h

07h

08h

09h

ΩAh

0Bh

UCN

0Dh

0Eh

OFh

10h

11h

12h

3h

1.4h

15h

16h

7h



# PORT-D PIN COMPLEX WIDGET (NID = 0EH)

### **AMPLIFIER GAIN/MUTE VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	Bh	2000h	Bits [31:0] in the response table below – applies to the left channel only
Get	Bh	0000h	Bits [31:0] in the response table below – applies to the right channel only
Set	3h	Bits [15:0] in the set table below	0000000h

#### Response Table:

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Amplifier Mute	R	0	Shows the amplifier mute status of the selected channel:
				0 = Normal
				1 = Muted
[6:0]	Amplifier Gain	R	18h	Shows the amplifier gain setting (step number) for the selected channel. The actual gain applied is determined by the <i>Input Amplifier Capabilities Parameter</i> , and is shown below for convenience: $00h = -12dB$ $01h = -11.5dB$ $ 0.5dB steps$ $18h = 0dB$ $ 0.5dB steps$ $57h = +31.5dB$ $58h = +32dB$

#### Set Table:

Bit	Bitfield Name	RW	Default	Description
[15]	Set Output Amp	W	0	Not applicable to this widget
[14]	Set Input Amp	W	1	Indicates that the programming refers to the input amplifier on this widget
[13]	Set Left Amp	W	1	0 = Left channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields
				1 = Left channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields
[12]	Set Right Amp	W	1	0 = Right channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields
				1 = Right channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields
[11:8]	Index	W	0h	Not applicable to this widget
[7]	Mute	W	0	0 = Normal operation
				1 = Mute
				<b>Note:</b> When mute is applied to a channel, the data value is overwritten with all zeros.
[6:0]	Gain	W	18h	Step number of the gain – see <i>Amplifier Gain</i> in response table above for details of actual gain values

Rev 4.0 139

00h

01h

02h

03h

04h

05h

076

001-

001

ODL

0Ch

UDN

0Eh

OEh

10h

11h

2n

3n

14h

15h

16h



### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

## Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	4h	Indicates that this is a Pin Complex Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	0	Indicates that the Power State Verb is not supported in this widget
[9]	Digital	R	1	Indicates that this widget is translating digital data
[8]	Conn List	R	0	Indicates that a connection list is not present
[7]	Unsol Capable	R	0	Widget does not support Unsolicited Responses
[6]	ProcWidget	R	0	Widget does not have processing capabilities
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	0	Widget does not override the format defined for the AFG
[3]	Amp Parameter Override	R	1	The AFG amplifier parameters are overridden for this widget node
[2]	Out Amp Present	R	0	Output amplifier not present in this widget
[1]	In Amp Present	R	1	Input amplifier is present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

## Pin Capabilities Parameter (PID = 0Ch)

Bit	Bitfield Name	RW	Default	Description
[31:17]	Rsvd	R	0000h	Reserved
[16]	EAPD Capable	R	0	Widget does not support an EAPD pin
[15:8]	VRef Control	R	00h	VRef not supported for Digital Inputs
[7]	Rsvd	R	0	Reserved
[6]	Balanced I/O Pins	R	0	Indicates that this widget does not have balanced pins
[5]	Input Capable	R	1	Indicates that this widget is input capable
[4]	Output Capable	R	0	Indicates that this widget is not output capable
[3]	Headphone Drive Capable	R	0	Not applicable as this in an input port
[2]	Presence Detect Capable	R	0	Presence detection not supported
[1]	Trigger Required	R	0	Impedance measurement not supported
[0]	Impedance Sense Capable	R	0	Impedance measurement not supported

## Input Amplifier Capabilities Response Format (PID = 0Dh)

Bit	Bitfield Name	RW	Default	Description
[31]	Mute Capable	R	1	DMIC amplifiers are capable of hard-mute
[30:23]	Rsvd	R	0000h	Reserved
[22:16]	Step Size	R	01h	Gain step size is 0.5dB
[15]	Rsvd	R	0	Reserved
[14:8]	Num Steps	R	58h	Number of steps in gain range is 89 (-12dB to +32dB)
[7]	Rsvd	R	0	Reserved
[6:0]	Offset	R	18h	The step number that 0dB corresponds to is 18h



### PIN WIDGET CONTROL VERB

	Verb ID	Payload [7:0]	Response[31:0]	
Get	F07h	00h	Bits [31:0] in the table below	
Set	707h	Bits [7:0] in the table below	0000000h	

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	H-Phn Enable	R	0	Not applicable as this in an input port
[6]	Out Enable	R	0	Not applicable as this in an input port
[5]	In Enable	RW	1	Controls the input path:
				0 = Input path is disabled
				1 = Input path is enabled
[4:3]	Rsvd	R	0h	Reserved
[2:0]	VRefEn	R	0h	Selectable VRef not supported

#### **CONFIGURATION DEFAULT VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F1Ch	00h	Bits [31:0] in the table below
Set1	71Ch	Bits [7:0] in the table below	0000000h
Set2	71Dh	Bits [15:8] in the table below	0000000h
Set3	71Eh	Bits [23:16] in the table below	0000000h
Set4	71Fh	Bits [31:24] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:30]	Port Connectivity	RW	0h	Indicates the external connectivity:
				0h = Jack
				1h = No physical connection
				2h = A fixed function device
				3h = both a jack and an internal device are connected
[29:28]	Location[5:4]	RW	1h	Gross physical location of the device connected to Port-D:
				0h = External on primary chassis
				1h = Internal
				2h = Separate chassis
				3h = Other
[27:24]	Location[3:0]	RW	0h	Geometric location of the device connected to Port-D:
				0h = Not applicable
				1h = Rear
				2h = Front
				3h = Left
				4h = Right
				5h = Top
				6h = Bottom
				7h = Special
				8h = Special
				9h = Special
				Ah-Fh = Reserved

Rev 4.0 141

00h

01h

02h

)3h

04h

05h

06h

07h

08h

206

0Ah

)Bh

0Eh

OFh

10h

11h

4.01

13n

14h

15h

16h

l7h





Bit	Bitfield Name	RW	Default	Description
[23:20]	Default Device	RW	Ah	Indicates the intended use of Port-D:
				0h = Line out
				1h = Speaker
				2h = Headphone out
				3h = CD
				4h = S/PDIF out
				5h = Digital other out
				6h = Modem line side
				7h = Modem handset side
				8h = Line in
				9h = AUX
				Ah = Mic in
				Bh = Telephony
				Ch = S/PDIF in
				Dh = Digital other in
				Eh = Reserved
				Fh = Other
[19:16]	Connection Type	RW	6h	Indicates the type of physical interface on Port-D:
				0h = Unknown
				1h = 3.5mm stereo/mono jack
				2h = 1/4" stereo/mono jack
				3h = ATAPI internal
				4h = RCA jack (for analogue audio or coaxial S/PDIF)
				5h = Optical
				6h = Other digital
				7h = Other analogue
				8h = Multi-channel analogue (DIN)
				9h = XLR/Professional
				Ah = RJ-11 (modem)
				Bh = Combination
				Ch-Eh = Reserved
				Fh = Other
[15:12]	Colour	RW	0h	Indicates the colour of the physical jack on Port-D:
				0h = Unknown
				1h = Black
				2h = Grey
				3h = Blue
				4h = Green
				5h = Red
				6h = Orange
				7h = Yellow
				8h = Purple
				9h = Pink
				Ah-Dh = Reserved
				Eh = White
				Fh = Other



Bit	Bitfield Name	RW	Default	Description
[11:8]	Misc	RW	0h	Presence detection override:
				Oh = Presence detection indicated by Pin Capabilities Parameter  1h = Presence detection not supported. If the Pin Capabilities Parameter indicates that that presence detection is supported by the node, then this bit is used to override it to indicate the external circuitry is not capable of supporting presence detect
				All other values are reserved
[7:4]	Default Association	RW	Fh	Association number:
				0h = Reserved
				1h-Eh = Multi Channel or Single Pin Widget
				Fh = Single Pin Widget Only
[3:0]	Sequence	RW	0h	Sequence number used to define individual channel pairs within a stream.
				All values (0h-Fh) are available for use. Use a value of 0 for Single Pin Widget.

**Note**: The *Configuration Default Verb* is not reset to its default value during a reset from any source. The settings are only lost when digital power is removed from the WM8860. When digital power is restored, the System BIOS must restore the settings.

Rev 4.0 143

00h

01h

02h

03h

04h

05h

06h

07h

08h

ΩDh

0Eh

0Eh

10h

11h

12h

3h

14h

15h

16h

1711





### S/PDIF OUT PIN COMPLEX WIDGET (NID = 0FH)

#### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

#### Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	4h	Indicates that this is a Pin Complex Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	0	Indicates that the Power State Verb is not supported in this widget
[9]	Digital	R	1	Indicates that this widget is translating digital data
[8]	Conn List	R	1	Indicates that a connection list is present
[7]	Unsol Capable	R	1	Widget supports Unsolicited Responses
[6]	ProcWidget	R	0	Widget does not have processing capabilities
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	0	Widget does not override the format defined for the AFG
[3]	Amp Parameter Override	R	0	Not applicable as this widget does not have amplifier capabilities
[2]	Out Amp Present	R	0	Output amplifier not present in this widget
[1]	In Amp Present	R	0	Input amplifier is present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

#### Pin Capabilities Parameter (PID = 0Ch)

Bit	Bitfield Name	RW	Default	Description
[31:17]	Rsvd	R	0000h	Reserved
[16]	EAPD Capable	R	0	Widget does not support an EAPD pin
[15:8]	VRef Control	R	00h	VRef not supported for digital outputs
[7]	Rsvd	R	0	Reserved
[6]	Balanced I/O Pins	R	0	Indicates that this widget does not have balanced pins
[5]	Input Capable	R	0	Indicates that this widget is not input capable
[4]	Output Capable	R	1	Indicates that this widget is output capable
[3]	Headphone Drive Capable	R	0	Not applicable as this in an input port
[2]	Presence Detect Capable	R	1	Indicates that this widget can perform presence detection
[1]	Trigger Required	R	0	Impedance measurement not supported
[0]	Impedance Sense Capable	R	0	Impedance measurement not supported

#### Connection List Length Parameter (PID = 0Eh)

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Long Form	R	0	Indicates that the connection list items are in short form
[6:0]	Connection List Length	R	01h	Indicates that there is 1 NID entry in the connection list

Rev 4.0 145

00h

)1h

UZN

)3h

)4h

)5h

Ubn

07h

08h

. . .

001

0Dh

0Eh

0Fh

1011

1 111

1011

14r

15h

16h

l7h



#### **GET CONNECTION LIST ENTRY VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F02h	00h	Bits [31:0] in the table below

Bit	Bitfield Name	RW	Default	Description
[31:24]	Conn List Entry 3	R	00h	Unused connection list entry
[23:16]	Conn List Entry 2	R	00h	Unused connection list entry
[15:8]	Conn List Entry 1	R	00h	Unused connection list entry
[7:0]	Conn List Entry 0	R	04h	Indicates that the S/PDIF Out Pin Widget connects to the S/PDIF Tx 1 Widget (NID = 04h)

### PIN WIDGET CONTROL VERB

	Verb ID	Payload [7:0]	Response[31:0]
Get	F07h	00h	Bits [31:0] in the table below
Set	707h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	H-Phn Enable	R	0	Not applicable for S/PDIF Out
[6]	Out Enable	RW	1	Controls the output path:
				0 = Output path is disabled
				1 = Output path is enabled
				<b>Note:</b> If <i>OutEnable=0</i> , the S/PDIF signal is still transmitted, but the payload of the S/PDIF signal is filled with zeros. In this way, the <i>OutEnable</i> register acts as a S/PDIF Mute.
				Note: If DigEn=0, the SPDIFOUT pin is held at logic 0.
[5]	In Enable	R	0	Not applicable for S/PDIF Out
[4:3]	Rsvd	R	0h	Reserved
[2:0]	VRefEn	RW	0h	Selectable VRef not supported

### **UNSOLICITED RESPONSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F08h	00h	Bits [31:0] in the table below
Set	708h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Enable	RW	0	0 = Unsolicited Responses disabled for this node
				1 = Unsolicited Responses enabled for this node
[6]	Rsvd	R	0	Reserved
[5:0]	Tag	RW	0Fh	A software programmable tag value that is returned in the top six bits (31:26) of every Unsolicited Response from this node.
				The default for Tag is equal to the Node ID.

Note: The Unsolicited Response for the AFG node is defined in the "Unsolicited Responses" section.



#### **PIN SENSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F09h	00h	Bits [31:0] in the table below

Bit	Bitfield Name	RW	Default	Description
[31]	Presence Detect	R	0	0 = nothing plugged into S/PDIF Out
				1 = something plugged into S/PDIF Out
[30:0]	Impedance Sense	R	00000000h	Impedance sense not supported

#### **CONFIGURATION DEFAULT VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F1Ch	00h	Bits [31:0] in the table below
Set1	71Ch	Bits [7:0] in the table below	0000000h
Set2	71Dh	Bits [15:8] in the table below	0000000h
Set3	71Eh	Bits [23:16] in the table below	0000000h
Set4	71Fh	Bits [31:24] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:30]	Port Connectivity	RW	0h	Indicates the external connectivity:
				0h = Jack
				1h = No physical connection
				2h = A fixed function device
				3h = both a jack and an internal device are connected
[29:28]	Location[5:4]	RW	0h	Gross physical location of the device connected to S/PDIF Out:
				0h = External on primary chassis
				1h = Internal
				2h = Separate chassis
				3h = Other
[27:24]	Location[3:0]	RW	1h	Geometric location of the device connected to S/PDIF Out:
				0h = Not applicable
				1h = Rear
				2h = Front
				3h = Left
				4h = Right
				5h = Top
				6h = Bottom
				7h = Special
				8h = Special
				9h = Special
				Ah-Fh = Reserved

Rev 4.0 147

00h

01h

02h

03h

04h

05h

0 = 1

9h

. . .

ODL

UUN

UDII

OLII

0Fh

IUII

11h

12h

3h

4h

15h

16h

7h





Bit	Bitfield Name	RW	Default	Description
[23:20]	Default Device	RW	4h	Indicates the intended use of S/PDIF Out:
				0h = Line out
				1h = Speaker
				2h = Headphone out
				3h = CD
				4h = S/PDIF out
				5h = Digital other out
				6h = Modem line side
				7h = Modem handset side
				8h = Line in
				9h = AUX
				Ah = Mic in
				Bh = Telephony
				Ch = S/PDIF in
				Dh = Digital other in
				Eh = Reserved
				Fh = Other
[19:16]	Connection Type	RW	5h	Indicates the type of physical interface on S/PDIF Out:
				0h = Unknown
				1h = 3.5mm stereo/mono jack
				2h = 1/4" stereo/mono jack
				3h = ATAPI internal
				4h = RCA jack (for analogue audio or coaxial S/PDIF)
				5h = Optical
				6h = Other digital
				7h = Other analogue
				8h = Multi-channel analogue (DIN)
				9h = XLR/Professional
				Ah = RJ-11 (modem)
				Bh = Combination
				Ch-Eh = Reserved
				Fh = Other
[15:12]	Colour	RW	9h	Indicates the colour of the physical jack on S/PDIF Out:
				0h = Unknown
				1h = Black
				2h = Grey
				3h = Blue
				4h = Green
				5h = Red
				6h = Orange
				7h = Yellow
				8h = Purple
				9h = Pink
				Ah-Dh = Reserved
				Eh = White
				Fh = Other



Bit	Bitfield Name	RW	Default	Description
[11:8]	Misc	RW	1h	Presence detection override:
				0 = Presence detection indicated by <i>Pin Capabilities Parameter</i> 1 = Presence detection not supported. If the <i>Pin Capabilities Parameter</i> indicates that that presence detection is supported by the node, then this bit is used to override it to indicate the external circuitry is not capable of supporting presence detect
				All other values are reserved
[7:4]	Default	RW	Fh	Association number:
	Association			0h = Reserved
				1h-Eh = Multi Channel or Single Pin Widget
				Fh = Single Pin Widget Only
[3:0]	Sequence	RW	0h	Sequence number used to define individual channel pairs within a stream.
				All values (0h-Fh) are available for use. Use a value of 0 for Single Pin Widget.

**Note**: The *Configuration Default Verb* is not reset to its default value during a reset from any source. The settings are only lost when digital power is removed from the WM8860. When digital power is restored, the System BIOS must restore the settings.

#### **UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F8Eh	00h	Bits [31:0] in the table below
Set	78Eh	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:5]	Rsvd	R	0000000h	Reserved
[4:0]	Priority	RW	00h	Assigns a priority setting for queued Unsolicited Responses. Nodes with the lowest value have the highest priority, and so go to the front of the Unsolicited Response queue. Nodes with the same value for priority are queued on first-to-trigger basis.  00h = Highest priority   1Fh = Lowest priority

Rev 4.0 149

00h

01h

02h

03h

04h

05h

06h

07h

08h

ΛΛh

0Rh

UCh

ODII

UEN

0Fh

l Oh

11h

1Zn

13n

14n

15h

16h

17h







### **RESERVED (NID = 10H)**

#### **CONFIGURATION DEFAULT VERB**

	Verb ID	Payload [7:0]	Response[31:0]	
Get	F1Ch	00h	40C000F0h	
Set1	71Ch	11110000	0000000h	
Set2	71Dh	00000000	0000000h	
Set3	71Eh	11000000	0000000h	
Set4	71Fh	01000000	0000000h	

Note: The Configuration Default Verb is not fully supported on the WM8860. It is required that the System BIOS issues the Set1, Set2, Set3 and Set4 Verbs as described above.

Note: The Configuration Default Verb is not reset to its default value during a reset from any source. The settings are only lost when digital power is removed from the WM8860. When digital power is restored, the System BIOS must restore the settings.

10h







#### PORT-A PIN COMPLEX WIDGET (NID = 11H)

#### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

#### Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	4h	Indicates that this is a Pin Complex Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	0	Indicates that the Power State Verb is not supported in this widget
[9]	Digital	R	0	Indicates that this widget is translating analogue data
[8]	Conn List	R	1	Indicates that a connection list is present
[7]	Unsol Capable	R	1	Widget supports Unsolicited Responses
[6]	ProcWidget	R	0	Widget does not have processing capabilities
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	0	Widget does not override the format defined for the AFG
[3]	Amp Parameter Override	R	0	Not applicable as this widget does not have amplifier capabilities
[2]	Out Amp Present	R	0	Output amplifier not present in this widget
[1]	In Amp Present	R	0	Input amplifier not present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

#### Pin Capabilities Parameter (PID = 0Ch)

Bit	Bitfield Name	RW	Default	Description
[31:17]	Rsvd	R	0000h	Reserved
[16]	EAPD Capable	R	0	Widget does not support an EAPD pin
[15:8]	VRef Control	R	00h	VRef not supported for digital outputs
[7]	Rsvd	R	0	Reserved
[6]	Balanced I/O Pins	R	0	Indicates that this widget does not have balanced pins
[5]	Input Capable	R	0	Indicates that this widget is not input capable
[4]	Output Capable	R	1	Indicates that this widget is output capable
[3]	Headphone Drive Capable	R	1	Indicates that this widget has a headphone driver
[2]	Presence Detect Capable	R	1	Indicates that this widget can perform presence detection
[1]	Trigger Required	R	0	Impedance measurement not supported
[0]	Impedance Sense Capable	R	0	Impedance measurement not supported

#### Connection List Length Parameter (PID = 0Eh)

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Long Form	R	0	Indicates that the connection list items are in short form
[6:0]	Connection List Length	R	01h	Indicates that there is 1 NID entry in the connection list

Rev 4.0 153

00h

01h

0211

)3h

)4h

)5h

06h

07h

08h

09h

0Ah

0Bh

0Ch

0Dh

11h

12h

13h

14h

15h

16h

l7h



#### **GET CONNECTION LIST ENTRY VERB**

	Ve	erb ID	Payload [7:0]	Response[31:0]
Get	F0	02h	00h	Bits [31:0] in the table below

Bit	Bitfield Name	RW	Default	Description
[31:24]	Conn List Entry 3	R	00h	Unused connection list entry
[23:16]	Conn List Entry 2	R	00h	Unused connection list entry
[15:8]	Conn List Entry 1	R	00h	Unused connection list entry
[7:0]	Conn List Entry 0	R	06h	Indicates that the Port-A Pin Widget connects to the DAC1 Widget (NID = 06h)

#### PIN WIDGET CONTROL VERB

	Verb ID	Payload [7:0]	Response[31:0]
Get	F07h	00h	Bits [31:0] in the table below
Set	707h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	H-Phn Enable	RW	0h	Headphone amplifier enable:
				0 = Disable
				1 = Enable
				Note: If the <i>H-Phn Enable</i> register is set to 1, the actual gain setting applied has an offset of −8dB from the setting configured by the <i>Gain</i> register in the DAC1 <i>Amplifier Gain/Mute Verb</i> .
[6]	Out Enable	RW	1	Controls the output path:
				0 = Output path is disabled
				1 = Output path is enabled
[5]	In Enable	R	0	Not applicable for Port-A
[4:3]	Rsvd	R	0h	Reserved
[2:0]	VRefEn	R	0h	Selectable VRef not supported

#### **UNSOLICITED RESPONSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F08h	00h	Bits [31:0] in the table below
Set	708h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Enable	RW	0	0 = Unsolicited Responses disabled for this node
				1 = Unsolicited Responses enabled for this node
[6]	Rsvd	R	0	Reserved
[5:0]	Tag	RW	11h	A software programmable tag value that is returned in the top six bits (31:26) of every Unsolicited Response from this node.
				The default for Tag is equal to the Node ID.

Note: The Unsolicited Response for the AFG node is defined in the "Unsolicited Responses" section.



#### **PIN SENSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F09h	00h	Bits [31:0] in the table below

Bit	Bitfield Name	RW	Default	Description
[31]	Presence Detect	R	0	0 = nothing plugged into Port-A
				1 = something plugged into Port-A
[30:0]	Impedance Sense	R	00000000h Impedance sense not supported	

#### **CONFIGURATION DEFAULT VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F1Ch	00h	Bits [31:0] in the table below
Set1	71Ch	Bits [7:0] in the table below	0000000h
Set2	71Dh	Bits [15:8] in the table below	0000000h
Set3	71Eh	Bits [23:16] in the table below	0000000h
Set4	71Fh	Bits [31:24] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:30]	Port Connectivity	RW	0h	Indicates the external connectivity:
				0h = Jack
				1h = No physical connection
				2h = A fixed function device
				3h = both a jack and an internal device are connected
[29:28]	Location[5:4]	RW	0h	Gross physical location of the device connected to Port-A:
				0h = External on primary chassis
				1h = Internal
				2h = Separate chassis
				3h = Other
[27:24]	Location[3:0]	RW	1h	Geometric location of the device connected to Port-A:
				0h = Not applicable
				1h = Rear
				2h = Front
				3h = Left
				4h = Right
				5h = Top
				6h = Bottom
				7h = Special
				8h = Special
				9h = Special
				Ah-Fh = Reserved

Rev 4.0 155

00h

01h

02h

)3h

04h

05h

0.01

07b

ายห

)9h

0Ah

0Bh

UDII

OFh

10h

11h

12h

3h

14h

15h

16h

7h





Bit	Bitfield Name	RW	Default	Description
[23:20]	Default Device	RW	0h	Indicates the intended use of Port-A:
				0h = Line out
				1h = Speaker
				2h = Headphone out
				3h = CD
				4h = S/PDIF out
				5h = Digital other out
				6h = Modem line side
				7h = Modem handset side
				8h = Line in
				9h = AUX
				Ah = Mic in
				Bh = Telephony
				Ch = S/PDIF in
				Dh = Digital other in
				Eh = Reserved
				Fh = Other
[19:16]	Connection Type	RW	1h	Indicates the type of physical interface on Port-A:
				0h = Unknown
				1h = 3.5mm stereo/mono jack
				2h = 1/4" stereo/mono jack
				3h = ATAPI internal
				4h = RCA jack (for analogue audio or coaxial S/PDIF)
				5h = Optical
				6h = Other digital
				7h = Other analogue
				8h = Multi-channel analogue (DIN)
				9h = XLR/Professional
				Ah = RJ-11 (modem)
				Bh = Combination
				Ch-Eh = Reserved
				Fh = Other
[15:12]	Colour	RW	4h	Indicates the colour of the physical jack on Port-A:
				0h = Unknown
				1h = Black
				2h = Grey
				3h = Blue
				4h = Green
				5h = Red
				6h = Orange
				7h = Yellow
				8h = Purple
				9h = Pink
				Ah-Dh = Reserved
				Eh = White
				Fh = Other



Bit	Bitfield Name	RW	Default	Description	
[11:8]	Misc	RW	0h	Presence detection override:	
				0 = Presence detection indicated by <i>Pin Capabilities Parameter</i> 1 = Presence detection not supported. If the <i>Pin Capabilities Parameter</i> indicates that that presence detection is supported by the node, then this bit is used to override it to indicate the external circuitry is not capable of supporting presence detect	
				All other values are reserved	
[7:4]	Default	RW	2h	Association number:	
	Association			0h = Reserved	
				1h-Eh = Multi Channel or Single Pin Widget	
				Fh = Single Pin Widget Only	
[3:0]	Sequence	RW	0h	Sequence number used to define individual channel pairs within a stream.	
				All values (0h-Fh) are available for use. Use a value of 0 for Single Pin Widget.	

**Note**: The *Configuration Default Verb* is not reset to its default value during a reset from any source. The settings are only lost when digital power is removed from the WM8860. When digital power is restored, the System BIOS must restore the settings.

#### **UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F8Eh	00h	Bits [31:0] in the table below
Set	78Eh	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:5]	Rsvd	R	0000000h	Reserved
[4:0]	Priority	RW	00h	Assigns a priority setting for queued Unsolicited Responses. Nodes with the lowest value have the highest priority, and so go to the front of the Unsolicited Response queue. Nodes with the same value for priority are queued on first-to-trigger basis.  00h = Highest priority   1Fh = Lowest priority

Rev 4.0 157

00h

01h

)2h

03h

04h

05h

06h

07h

08h

09h

0Ah

0Bh

UCh

ODII

11h

12h

13n

14n

15h

16h

1711





### PORT-G PIN COMPLEX WIDGET (NID = 12H)

#### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

#### Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	4h	Indicates that this is a Pin Complex Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	0	Indicates that the Power State Verb is not supported in this widget
[9]	Digital	R	0	Indicates that this widget is translating analogue data
[8]	Conn List	R	1	Indicates that a connection list is present
[7]	Unsol Capable	R	1	Widget supports Unsolicited Responses
[6]	ProcWidget	R	0	Widget does not have processing capabilities
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	0	Widget does not override the format defined for the AFG
[3]	Amp Parameter Override	R	0	Not applicable as this widget does not have amplifier capabilities
[2]	Out Amp Present	R	0	Output amplifier not present in this widget
[1]	In Amp Present	R	0	Input amplifier not present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

#### Pin Capabilities Parameter (PID = 0Ch)

Bit	Bitfield Name	RW	Default	Description
[31:17]	Rsvd	R	0000h	Reserved
[16]	EAPD Capable	R	0	Widget does not support an EAPD pin
[15:8]	VRef Control	R	00h	VRef not supported for digital outputs
[7]	Rsvd	R	0	Reserved
[6]	Balanced I/O Pins	R	0	Indicates that this widget does not have balanced pins
[5]	Input Capable	R	0	Indicates that this widget is not input capable
[4]	Output Capable	R	1	Indicates that this widget is output capable
[3]	Headphone Drive Capable	R	0	Indicates that this widget does not have a headphone driver
[2]	Presence Detect Capable	R	1	Indicates that this widget can perform presence detection
[1]	Trigger Required	R	0	Impedance measurement not supported
[0]	Impedance Sense Capable	R	0	Impedance measurement not supported

#### Connection List Length Parameter (PID = 0Eh)

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Long Form	R	0	Indicates that the connection list items are in short form
[6:0]	Connection List Length	R	01h	Indicates that there is 1 NID entry in the connection list

Rev 4.0 159

UUI

01h

12h

)4h

. . . .

07h

08h

09h

0Ah

UDII

ΩDh

OLII

0Fh

10h

11h

12h

3h

14h

15h

16h

l7h



#### **GET CONNECTION LIST ENTRY VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F02h	00h	Bits [31:0] in the table below

Bit	Bitfield Name	RW	Default	Description
[31:24]	Conn List Entry 3	R	00h	Unused connection list entry
[23:16]	Conn List Entry 2	R	00h	Unused connection list entry
[15:8]	Conn List Entry 1	R	00h	Unused connection list entry
[7:0]	Conn List Entry 0	R	07h	Indicates that the Port-G Pin Widget connects to the DAC2 Widget (NID = 07h)

#### **PIN WIDGET CONTROL VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F07h	00h	Bits [31:0] in the table below
Set	707h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	H-Phn Enable	R	0	Not applicable for Port-G
[6]	Out Enable	RW	1	Controls the output path:
				0 = Output path is disabled
				1 = Output path is enabled
[5]	In Enable	R	0	Not applicable for Port-G
[4:3]	Rsvd	R	0h	Reserved
[2:0]	VRefEn	R	0h	Selectable VRef not supported

#### **UNSOLICITED RESPONSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F08h	00h	Bits [31:0] in the table below
Set	708h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Enable	RW	0	0 = Unsolicited Responses disabled for this node
				1 = Unsolicited Responses enabled for this node
[6]	Rsvd	R	0	Reserved
[5:0]	Tag	RW	12h	A software programmable tag value that is returned in the top six bits (31:26) of every Unsolicited Response from this node.
				The default for <i>Tag</i> is equal to the Node ID.

**Note:** The Unsolicited Response for the AFG node is defined in the "Unsolicited Responses" section.

### **PIN SENSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F09h	00h	Bits [31:0] in the table below

Bit	Bitfield Name	RW	Default	Description
[31]	Presence Detect	R	0	0 = nothing plugged into Port-G
				1 = something plugged into Port-G
[30:0]	Impedance Sense	R	00000000h	Impedance sense not supported



#### **CONFIGURATION DEFAULT VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F1Ch	00h	Bits [31:0] in the table below
Set1	71Ch	Bits [7:0] in the table below	0000000h
Set2	71Dh	Bits [15:8] in the table below	0000000h
Set3	71Eh	Bits [23:16] in the table below	0000000h
Set4	71Fh	Bits [31:24] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:30]	Port Connectivity	RW	0h	Indicates the external connectivity:
				0h = Jack
				1h = No physical connection
				2h = A fixed function device
				3h = both a jack and an internal device are connected
[29:28]	Location[5:4]	RW	0h	Gross physical location of the device connected to Port-G:
				0h = External on primary chassis
				1h = Internal
				2h = Separate chassis
				3h = Other
[27:24]	Location[3:0]	RW	1h	Geometric location of the device connected to Port-G:
				0h = Not applicable
				1h = Rear
				2h = Front
				3h = Left
				4h = Right
				5h = Top
				6h = Bottom
				7h = Special
				8h = Special
				9h = Special
				Ah-Fh = Reserved
[23:20]	Default Device	RW	0h	Indicates the intended use of Port-G:
				0h = Line out
				1h = Speaker
				2h = Headphone out
				3h = CD
				4h = S/PDIF out
				5h = Digital other out
				6h = Modem line side
				7h = Modem handset side
				8h = Line in
				9h = AUX
				Ah = Mic in
				Bh = Telephony
				Ch = S/PDIF in
				Dh = Digital other in
				Eh = Reserved
				Fh = Other

Rev 4.0 161

001

01h

02h

03h

04h

05h

06h

07h

08h

09h

0Ah

0Bh

0011

IUN

11h

12h

13h

14h

15h

16h

17h



Bit	Bitfield Name	RW	Default	Description
[19:16]	Connection Type	RW	1h	Indicates the type of physical interface on Port-G:
				0h = Unknown
				1h = 3.5mm stereo/mono jack
				2h = ¼" stereo/mono jack
				3h = ATAPI internal
				4h = RCA jack (for analogue audio or coaxial S/PDIF)
				5h = Optical
				6h = Other digital
				7h = Other analogue
				8h = Multi-channel analogue (DIN)
				9h = XLR/Professional
				Ah = RJ-11 (modem)
				Bh = Combination
				Ch-Eh = Reserved
				Fh = Other
[15:12]	Colour	RW	6h	Indicates the colour of the physical jack on Port-G:
				0h = Unknown
				1h = Black
				2h = Grey
				3h = Blue
				4h = Green
				5h = Red
				6h = Orange
				7h = Yellow
				8h = Purple
				9h = Pink
				Ah-Dh = Reserved
				Eh = White
				Fh = Other
[11:8]	Misc	RW	0h	Presence detection override:
				0 = Presence detection indicated by <i>Pin Capabilities Parameter</i>
				1 = Presence detection not supported. If the <i>Pin Capabilities Parameter</i>
				indicates that that presence detection is supported by the node, then this
				bit is used to override it to indicate the external circuitry is not capable of
				supporting presence detect
				All other values are reserved
[7:4]	Default Association	RW	2h	Association number:
	ASSOCIATION			0h = Reserved
				1h-Eh = Multi Channel or Single Pin Widget
				Fh = Single Pin Widget Only
[3:0]	Sequence	RW	1h	Sequence number used to define individual channel pairs within a stream.
				All values (0h-Fh) are available for use. Use a value of 0h for Single Pin
				Widget.

**Note**: The *Configuration Default Verb* is not reset to its default value during a reset from any source. The settings are only lost when digital power is removed from the WM8860. When digital power is restored, the System BIOS must restore the settings.



### UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	F8Eh	00h	Bits [31:0] in the table below
Set	78Eh	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:5]	Rsvd	R	0000000h	Reserved
[4:0]	Priority	RW	00h	Assigns a priority setting for queued Unsolicited Responses. Nodes with the lowest value have the highest priority, and so go to the front of the Unsolicited Response queue. Nodes with the same value for priority are queued on first-to-trigger basis.
				00h = Highest priority
				1Fh = Lowest priority

01h

. . . .

)3h

04h

05h

06h

07h

ΩΩh

. . . .

0Dh

0Ch

0Dh

0Eh

0Fh

Oh

11h

12h

13h

14h

15h

16h

17h





### RESERVED (NID = 13H)

#### **CONFIGURATION DEFAULT VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F1Ch	00h	400000F0h
Set1	71Ch	11110000	0000000h
Set2	71Dh	0000000	0000000h
Set3	71Eh	00000000	0000000h
Set4	71Fh	01000000	0000000h

Note: The Configuration Default Verb is not fully supported on the WM8860. It is required that the System BIOS issues the Set1, Set2, Set3 and Set4 Verbs as described above.

Note: The Configuration Default Verb is not reset to its default value during a reset from any source. The settings are only lost when digital power is removed from the WM8860. When digital power is restored, the System BIOS must restore the settings.

13h





### **BEEP GENERATOR WIDGET (NID = 14H)**

#### **AMPLIFIER GAIN/MUTE VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	Bh	A000h	Bits [31:0] in the response table below – applies to the left channel only
Get	Bh	8000h	Bits [31:0] in the response table below – applies to the right channel only
Set	3h	Bits [15:0] in the set table below	0000000h

#### Response Table:

Bit	Bitfield Name	RW	Default	Description
[31:7]	Rsvd	R	000000h	Reserved
[6:0]	Amplifier Gain	R	04h	Shows the amplifier gain setting (step number) for the selected channel. The actual gain applied is determined by the <i>Output Amplifier Capabilities Parameter</i> , and is shown below for convenience: $00h = -24dB$ $01h = -18dB$ $02h = -12dB$ $03h = -6dB$ $04h = 0dB$

#### Set Table:

Bit	Bitfield Name	RW	Default	Description
[15]	Set Output Amp	W	1	Indicates that the programming refers to the output amplifier on this widget
[14]	Set Input Amp	W	0	Not applicable to this widget
[13]	Set Left Amp	W	1	0 = Left channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields
				1 = Left channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields
[12]	Set Right Amp	W	1	0 = Right channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields
				1 = Right channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields
[11:8]	Index	W	0	Not applicable to this widget
[7]	Mute	R	1	Mute not supported
[6:0]	Gain	W	4h	Step number of the gain – see <i>Amplifier Gain</i> in response table above for details of actual gain values

Rev 4.0 167

00h

01h

02h

03h

04h

05h

07h

18h

09h

Ah

)Bh

0011

UDN

OI II

10h

11h

011

14h

15h

16h

7h



#### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

#### Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	7h	Indicates that this is a Beep Generator Widget
[19:4]	Rsvd	R	0000h	Reserved
[3]	Amp Parameter Override	R	1	The AFG amplifier parameters are overridden for this node
[2]	Out Amp Present	R	1	Output amplifier is present in this widget
[1:0]	Rsvd	R	0h	Reserved

#### Output Amplifier Capabilities Response Format (PID = 12h)

Bit	Bitfield Name	RW	Default	Description
[31]	Mute Capable	R	0	Beep amplifier does not support mute
[30:23]	Rsvd	R	0000h	Reserved
[22:16]	Step Size	R	17h	Gain step size is 6dB
[15]	Rsvd	R	0	Reserved
[14:8]	Num Steps	R	04h	Number of steps in gain range is 5 (0dB to −24dB)
[7]	Rsvd	R	0	Reserved
[6:0]	Offset	R	04h	The step number that 0dB corresponds to is 04h

#### **BEEP GENERATION VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	F0Ah	0000h	Bits [31:0] in the table below
Set	70Ah	Bits [15:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
31:8]	Rsvd	R	0000000h	Reserved
7:0]	Terminal Count	RW	00h	Sets tone divider value. The frequency of the beep tone is given by
				f = 48kHz / (4 * Divider):
				00h = Beep Generator disabled
				01h = 12kHz
				02h = 6 kHz
				FFh = 47.06 Hz
				Nates for a book to be generated the AEC must be in state DO
				Note: for a beep to be generated, the AFG must be in state



### BEEP MASK SELECTION VERB (VENDOR SPECIFIC)

	Verb ID	Payload [15:0]	Response[31:0]
Get	F72h	0000h	Bits [31:0] in the table below
Set	772h	Bits [15:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:3]	Rsvd	R	0000000h	Reserved
[2]	Port-A Beep	RW	0	Beep mask enable for Port-A (DAC1):
	Mask			0 = Beep tone unmasked from output
				1 = Beep tone masked from output
[1]	Port-G Beep	RW	0	Beep mask enable for Port-G (DAC2):
	Mask			0 = Beep tone unmasked from output
				1 = Beep tone masked from output
[0]	Rsvd	RW	0	Reserved

\*\*\*\*\*\*\*\*\*\*\*

. . . .

08h

00h

0 1 6

0Bh

0011

0Dh

0Eh

0Fh

10h

11h

12h

13h

14h

15h

16h

7h







### MIC2 AUDIO INPUT CONVERTER WIDGET (NID = 15H)

#### **STREAM FORMAT VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	Ah	0000h	Bits [31:0] in the table below

Bit	Bitfield Name	RW	Default	Description
[31:16]	Rsvd	R	0000h	Reserved
[15]	Туре	R	0	Indicates the widget supports only PCM streams
[14]	Base	R	0	Used to set the base rate frequency:
				0 = 48 kHz
				1 = 44.1 kHz
[13:11]	Mult	R	0h	Used to set the base rate multiplication factor:
				0h = x1 (48kHz, 44.1kHz or less)
				1h = x2 (32kHz)
				2h-7h = Reserved
[10:8]	Div	R	0h	Used to set the base rate division factor:
				0h = divide by 1 (48kHz, 44.1kHz)
				1h = divide by 2 (24kHz, 22.05kHz)
				2h = divide by 3 (16kHz, 32kHz)
				3h = divide by 4 (11.025kHz)
				4h = Reserved
				5h = divide by 6 (8kHz)
				6h = Reserved
				7h = Reserved
[7]	Rsvd	R	0	Reserved
[6:4]	Bits	R	3h	Bits per Sample:
				0h = Reserved
				1h = 16 bits
				2h = 20 bits
				3h = 24 bits
				4h = 32 bits (Float 32)
				5h-7h = Reserved
[3:0]	Chan	R	1h	Number of Channels in each frame of the stream:
				0h = 1 channel
				1h = 2 channels
				2h = 3 channels
				3h = 4 channels
				4h-Fh = reserved

**Note:** Register values are read-only. As MIC2 and MIC1 share the DMICLK, the MIC1 *Stream Format Verb* is used to configure the sample rate for both converters.

0Eh

0Fh

10h

11h

12n

3h

14h

15h

16h

l7h



#### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

#### Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	1h	Indicates that this is an Audio Input Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	0	Indicates that the Power State Verb is not supported in this widget
[9]	Digital	R	1	Indicates that this widget is translating digital data
[8]	Conn List	R	1	Indicates that a connection list is present
[7]	Unsol Capable	R	1	Widget supports Unsolicited Responses
[6]	ProcWidget	R	1	Widget has processing capabilities (i.e high pass filter)
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	1	Widget has a subset of the supported rates defined for the AFG
[3]	Amp Parameter Override	R	0	Not applicable as this widget does not have amplifier capabilities
[2]	Out Amp Present	R	0	Output amplifier not applicable for this widget
[1]	In Amp Present	R	0	Input amplifier not present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

#### Supported Rates Parameter (PID = 0Ah)

Bit	Bitfield Name	RW	Default	Description
[31:21]	Rsvd	R	000h	Reserved
[20]	B32	R	1	MIC1 supports 32-bit audio format
[19]	B24	R	1	MIC1 supports 24-bit audio format
[18]	B20	R	1	MIC1 supports 20-bit audio format
[17]	B16	R	1	MIC1 supports 16-bit audio format
[16]	B8	R	0	MIC1 does not support 8-bit audio format
[15:12]	Rsvd	R	0h	Reserved
[11]	R12	R	0	MIC1 does not support 384 kHz sample rate
[10]	R11	R	0	MIC1 does not support 192 kHz sample rate
[9]	R10	R	0	MIC1 does not support 176.4 kHz sample rate
[8]	R9	R	0	MIC1 does not support 96 kHz sample rate
[7]	R8	R	0	MIC1 does not support 88.2 kHz sample rate
[6]	R7	R	1	MIC1 supports 48 kHz sample rate
[5]	R6	R	1	MIC1 supports 44.1 kHz sample rate
[4]	R5	R	1	MIC1 supports 32 kHz sample rate
[3]	R4	R	1	MIC1 supports 22.05 kHz sample rate
[2]	R3	R	1	MIC1 supports 16 kHz sample rate
[1]	R2	R	1	MIC1 supports 11.025 kHz sample rate
[0]	R1	R	1	MIC1 supports 8 kHz sample rate

#### Supported Stream Formats Parameter (PID = 0Bh)

Bit	Bitfield Name	RW	Default	Description
[31:3]	Rsvd	R	00000000h	Reserved
[2]	AC3	R	0	MIC2 does not support Dolby AC3 formatted data
[1]	Float32	R	1	MIC2 supports Float32 formatted data
[0]	PCM	R	1	MIC2 supports PCM formatted data



#### Connection List Length Parameter (PID = 0Eh)

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Long Form	R	0	Indicates that the connection list items are in short form
[6:0]	Connection List Length	R	01h	Indicates that there is 1 NID entry in the connection list

#### Processing Capabilities Parameter (PID = 10h)

Bit	Bitfield Name	RW	Default	Description
[31:16]	Rsvd	R	0000h	Reserved
[15:8]	NumCoeff	R	00h	This widget does not support loadable coefficients
[7:1]	Rsvd	R	00h	Reserved
[0]	Benign	R	0	The "Processing Benign State" is not supported

#### **GET CONNECTION LIST ENTRY VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F02h	00h	Bits [31:0] in the table below

Bit	Bitfield Name	RW	Default	Description
[31:24]	Conn List Entry 3	R	00h	Unused connection list entry
[23:16]	Conn List Entry 2	R	00h	Unused connection list entry
[15:8]	Conn List Entry 1	R	00h	Unused connection list entry
[7:0]	Conn List Entry 0	R	16h	Indicates that the MIC2 Widget connects to the Port-H Pin Widget (NID = 16h)

#### **PROCESSING STATE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F03h	00h	Bits [31:0] in the table below
Set	703h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7:0]	Processing State	RW	01h	The processing block is the high-pass filter (HPF). The processing state is controlled as follows:
				00h = Processing Off: HPF disabled
				01h = Processing On: HPF enabled
				02h = Processing Off: HPF disabled (benign not supported)
				03h-7Fh = Reserved
				80h-FFh = Vendor Specific – not used

Rev 4.0 173

00h

U1h

04h

05h

OGh

07h

. . .

)Eh

4.01

3h

14h

15h

16h

1 / []



#### **CONVERTER STREAM, CHANNEL VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F06h	00h	Bits [31:0] in the table below
Set	706h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7:4]	Stream	RW	0h	Stream ID used by this widget. Note that Stream ID = 0h is used to indicate an unused stream, and converters will not transfer/receive link data for streams with an ID of 0h.  For multi-channel capture on MIC1 and MIC2, the <i>Stream</i> value should be
			_	the same for both.
[3:0]	Channel	RW	2h	Note: When MIC1 and MIC2 are setup for multi-channel capture, only a setting of 0h and 2h are applicable. However, the values are mutually exclusive, in that if <i>Channel</i> has been set to 0h for the MIC1 node, it must be set to 2h for the MIC2 node. Both nodes should have <i>Channel</i> set to 0h when not in multi-channel capture mode.

#### **UNSOLICITED RESPONSE VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F08h	00h	Bits [31:0] in the table below
Set	708h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Enable	RW	0h	0 = Unsolicited Responses disabled for this node
				1 = Unsolicited Responses enabled for this node
[6]	Rsvd	R	0h	Reserved
[5:0]	Tag	RW	15h	A software programmable tag value that is returned in the top six bits (31:26) of every Unsolicited Response from this node.
				The default for <i>Tag</i> is equal to the Node ID.

Note: The Unsolicited Response for the AFG node is defined in the "Unsolicited Responses" section.

#### UNSOLICITED RESPONSE PRIORITY CONTROL VERB (VENDOR-SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	F8Eh	00h	Bits [31:0] in the table below
Set	78Eh	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:5]	Rsvd	R	0000000h	Reserved
[4:0]	Priority	RW	00h	Assigns a priority setting for queued Unsolicited Responses. Nodes with the lowest value have the highest priority, and so go to the front of the Unsolicited Response queue. Nodes with the same value for priority are queued on first-to-trigger basis.  00h = Highest priority   1Fh = Lowest priority



### CHANNEL COPY VERB (VENDOR-SPECIFIC)

	Verb ID	Payload [7:0]	Response[31:0]
Get	FB1h	00h	Bits [31:0] in the table below
Set	7B1h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description
[31:2]	Rsvd	R	00000000h	Reserved
[1]	CHAN1_SEL	RW	1 Channel 1 (right) Mapping Control:	
				0 = Channel takes data from left channel
				1 = Channel takes data from right channel
[0]	CHAN0_SEL	RW	0	Channel 0 (left) Mapping Control:
				0 = Channel takes data from left channel
				1 = Channel takes data from right channel

Rev 4.0 175

001

01h

02h

)3h

04h

05h

06h

07h

08h

UAII

UDII

ODII

Ohh

0h

11h

12h

3h

1.4h

15h

16h

l7h







### PORT-H PIN COMPLEX WIDGET (NID = 16H)

#### **AMPLIFIER GAIN/MUTE VERB**

	Verb ID	Payload [15:0]	Response[31:0]
Get	Bh	2000h	Bits [31:0] in the response table below – applies to the left channel only
Get	Bh	0000h	Bits [31:0] in the response table below – applies to the right channel only
Set	3h	Bits [15:0] in the set table below	0000000h

#### Response Table:

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Amplifier Mute	R	0	Shows the amplifier mute status of the selected channel:
				0 = Normal
				1 = Muted
[6:0]	Amplifier Gain	R	18h	Shows the amplifier gain setting (step number) for the selected channel. The actual gain applied is determined by the <i>Input Amplifier Capabilities Parameter</i> in the AFG (NID = 01h), and is shown below for convenience:
				00h = -12dB
				01h = −11.5dB
				0.5dB steps
				57h = +31.5dB
				58h = +32dB

#### Set Table:

Bit	Bitfield Name	RW	Default	Description	
[15]	Set Output Amp	W	0	Not applicable to this widget	
[14]	Set Input Amp	W	1	Indicates that the programming refers to the input amplifier on this widget	
[13]	Set Left Amp	W	1	0 = Left channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields	
				1 = Left channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields	
[12]	Set Right Amp	W	1	0 = Right channel amplifier does not accept the values in <i>Mute</i> or <i>Gain</i> fields	
				1 = Right channel amplifier does accept the values in the <i>Mute</i> and <i>Gain</i> fields	
[11:8]	Index	W	0h	Not applicable to this widget	
[7]	Mute	W	0	0 = Normal operation	
				1 = Mute	
[6:0]	Gain	W	18h	Step number of the gain – see <i>Amplifier Gain</i> in response table above for details of actual gain values	

Rev 4.0 177

00h

UIN

02h

03h

04h

0.5h

001

071-

001-

U9h

0Ah

UBh

0Ch

UDN

0Eh

0Eh

10h

11h

ızn

3n

14n

15h

16h

l7h



### **GET PARAMETER VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F00h	Parameter ID (PID)	Parameter Value

#### Audio Widget Capabilities Parameter (PID = 09h)

Bit	Bitfield Name	RW	Default	Description
[31:24]	Rsvd	R	00h	Reserved
[23:20]	Туре	R	4h	Indicates that this is a Pin Complex Widget
[19:16]	Delay	R	0h	Latency not reported
[15:12]	Rsvd	R	0h	Reserved
[11]	L-R Swap	R	0	Left/Right swap capability not supported
[10]	PowerCntrl	R	0	Indicates that the Power State Verb is not supported in this widget
[9]	Digital	R	1	Indicates that this widget is translating digital data
[8]	Conn List	R	1	Indicates that a connection list is present
[7]	Unsol Capable	R	0	Widget does not support Unsolicited Responses
[6]	ProcWidget	R	0	Widget does not have processing capabilities
[5]	Stripe	R	0	Widget does not support striping
[4]	Format Override	R	0	Widget does not override the format defined for the AFG
[3]	Amp Parameter Override	R	1	The AFG amplifier parameters are overridden for this node
[2]	Out Amp Present	R	0	Output amplifier not present in this widget
[1]	In Amp Present	R	1	Input amplifier is present in this widget
[0]	Stereo	R	1	Indicates that this is a stereo widget

#### Pin Capabilities Parameter (PID = 0Ch)

Bit	Bitfield Name	RW	Default	Description
[31:17]	Rsvd	R	0000h	Reserved
[16]	EAPD Capable	R	0	Widget does not support an EAPD pin
[15:8]	VRef Control	R	00h	VRef not supported for digital inputs
[7]	Rsvd	R	0	Reserved
[6]	Balanced I/O Pins	R	0	Indicates that this widget does not have balanced pins
[5]	Input Capable	R	1	Indicates that this widget is input capable
[4]	Output Capable	R	1	Indicates that this widget is output capable
[3]	Headphone Drive Capable	R	0	Not applicable as this in an input port
[2]	Presence Detect Capable	R	0	Presence detection not supported
[1]	Trigger Required	R	0	Impedance measurement not supported
[0]	Impedance Sense Capable	R	0	Impedance measurement not supported

#### Input Amplifier Capabilities Response Format (PID = 0Dh)

Bit	Bitfield Name	RW	Default	Description
[31]	Mute Capable	R	1	DMIC Amplifiers are capable of hard-mute
[30:23]	Rsvd	R	00h	Reserved
[22:16]	Step Size	R	01h	Gain step size is 0.5dB
[15]	Rsvd	R	0	Reserved
[14:8]	Num Steps	R	58h	Number of steps in gain range is 89 (−12dB to +32dB)
[7]	Rsvd	R	0	Reserved
[6:0]	Offset	R	18h	The step number that 0dB corresponds to is 18h



#### Connection List Length Parameter (PID = 0Eh)

Bit	Bitfield Name	RW	Default	Description
[31:8]	Rsvd	R	000000h	Reserved
[7]	Long Form	R	0	Indicates that the connection list items are in short form
[6:0]	Connection List Length	R	01h	Indicates that there is 1 NID entry in the connection list

#### **GET CONNECTION LIST ENTRY VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F02h	00h	Bits [31:0] in the table below

Bit	Bitfield Name	RW	Default	Description
[31:24]	Conn List Entry 3	R	00h	Unused connection list entry
[23:16]	Conn List Entry 2	R	00h	Unused connection list entry
[15:8]	Conn List Entry 1	R	00h	Unused connection list entry
[7:0]	Conn List Entry 0	R	17h	Indicates that the Port-H Pin Widget connects to Node 17h

#### **PIN WIDGET CONTROL VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F07h	00h	Bits [31:0] in the table below
Set	707h	Bits [7:0] in the table below	0000000h

Bit	Bitfield Name	RW	Default	Description	
[31:8]	Rsvd	R	000000h	Reserved	
[7]	H-Phn Enable	R	0	Not applicable as this in an input port	
[6]	Out Enable	RW	0	Controls the output path:	
				0 = Output path is disabled	
				1 = Output path is enabled	
[5]	In Enable	RW	1	Controls the input path:	
				0 = Input path is disabled	
				1 = Input path is enabled	
[4:3]	Rsvd	R	0h	Reserved	
[2:0]	VRefEn	R	0h	Selectable VRef not supported	

**Note:** It is erroneous behaviour for both the *Out Enable* and *In Enable* registers to be set high simultaneously. If both registers are set, Port-H defaults to an input.

Rev 4.0 179

00h

01h

02h

03h

U4n

05h

201-

07h

Oh

OH

)9h

)Ah

)Bh

JOH

UDII

10h

16

12h

13h

14h

15h

16h

7h



#### **CONFIGURATION DEFAULT VERB**

	Verb ID	Payload [7:0]	Response[31:0]
Get	F1Ch	00h	Bits [31:0] in the table below
Set1	71Ch	Bits [7:0] in the table below	0000000h
Set2	71Dh	Bits [15:8] in the table below	0000000h
Set3	71Eh	Bits [23:16] in the table below	00000000h
Set4	71Fh	Bits [31:24] in the table below	00000000h

Bit	Bitfield Name	RW	Default	Description		
[31:30]	Port Connectivity	RW	0h	Indicates the external connectivity:		
				0h = Jack		
				1h = No physical connection		
				2h = A fixed function device		
				3h = both a jack and an internal device are connected		
[29:28]	Location[5:4]	RW	1h	Gross physical location of the device connected to Port-H:		
				0h = External on primary chassis		
				1h = Internal		
				2h = Separate chassis		
				3h = Other		
[27:24]	Location[3:0]	RW	0h	Geometric location of the device connected to Port-H:		
				0h = Not applicable		
				1h = Rear		
				2h = Front		
				3h = Left		
				4h = Right		
				5h = Top		
				6h = Bottom		
				7h = Special		
				8h = Special		
				9h = Special		
				Ah-Fh = Reserved		
[23:20]	Default Device	RW	Ah	Indicates the intended use of Port-H:		
				0h = Line out		
				1h = Speaker		
				2h = Headphone out		
				3h = CD		
				4h = S/PDIF out		
				5h = Digital other out		
				6h = Modem line side		
				7h = Modem handset side		
				8h = Line in		
				9h = AUX		
				Ah = Mic in		
				Bh = Telephony		
				Ch = S/PDIF in		
				Dh = Digital other in		
				Eh = Reserved		
				Fh = Other		



Bit	Bitfield Name	RW	Default	Description		
[19:16]	Connection Type	RW	6h	Indicates the type of physical interface on Port-H:		
				0h = Unknown		
				1h = 3.5mm stereo/mono jack		
				2h = ¼" stereo/mono jack		
				3h = ATAPI internal		
				4h = RCA jack (for analogue audio or coaxial S/PDIF)		
				5h = Optical		
				6h = Other digital		
				7h = Other analogue		
				8h = Multi-channel analogue (DIN)		
				9h = XLR/Professional		
				Ah = RJ-11 (modem)		
				Bh = Combination		
				Ch-Eh = Reserved		
				Fh = Other		
[15:12]	Colour	RW	0h	Indicates the colour of the physical jack on Port-H:		
[]				Oh = Unknown		
				1h = Black		
				2h = Grey		
				3h = Blue		
				4h = Green		
				5h = Red		
				6h = Orange		
				7h = Yellow		
				8h = Purple		
				9h = Pink		
				Ah-Dh = Reserved		
				Eh = White		
				Fh = Other		
[44.0]	Minn	DW	4  -			
[11:8]	Misc	RW	1h	Presence detection override:		
				0h = Presence detection indicated by <i>Pin Capabilities Parameter</i>		
				1h = Presence detection not supported. If the <i>Pin Capabilities Parameter</i> indicates that that presence detection is supported by the node, then this		
				bit is used to override it to indicate the external circuitry is not capable of		
				supporting presence detect		
				All other values are reserved		
[7:4]	Default	RW	Fh	Association number:		
	Association			0h = Reserved		
				1h-Eh = Multi Channel or Single Pin Widget		
				Fh = Single Pin Widget Only		
[3:0]	Sequence	RW	0h	Sequence number used to define individual channel pairs within a stream.		
				,		
				All values (0h-Fh) are available for use. Use a value of 0 for Single Pin		
				Widget.		

**Note**: The *Configuration Default Verb* is not reset to its default value during a reset from any source. The settings are only lost when digital power is removed from the WM8860. When digital power is restored, the System BIOS must restore the settings.

Rev 4.0 181

on

07h

08h

09n

UAh

0Bh

0Eh

10h

11h

12h

13h

14h

15h

16h

1 / []







RESERVED (NID = 17H)

001

01h

02h

03h

04h

05h

06h

07h

08h

001

0 1 6

ODL

0Ch

0Dh

ΛEh

0Fh

10h

11h

12h

13h

1.4h

15h

16h

17h



#### **APPLICATIONS INFORMATION**

#### RECOMMENDED EXTERNAL COMPONENTS

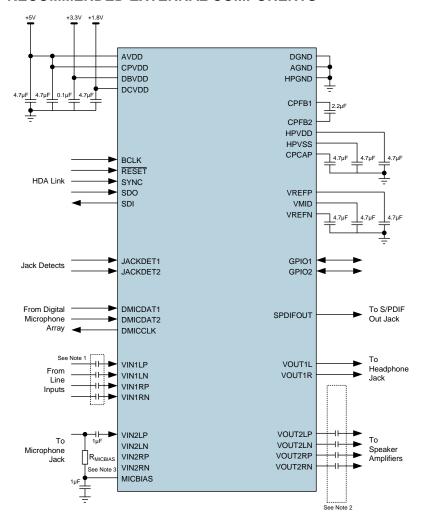


Figure 16 Recommended External Components

#### Notes:

- AC-coupling capacitors for inputs may depend on circuitry used prior to WM8860. Typical values between 1μF and 10μF are common – consult any documentation for the exact circuit used
- AC-coupling capacitors for outputs may depend in circuitry used after WM8860. Typical values between 1μF and 10μF
  are common consult any documentation for the exact circuit used
- 3. A single-ended mono microphone input is shown, but other configurations are equally valid. The value of the microphone bias resistor will vary with the microphone used a typical value is  $2.2k\Omega$
- 4. The capacitor between CFB1 and CFB2 must be placed as close as possible to the device pins
- 5. The decoupling capacitor on CPCAP must also be placed as close as possible to the device pins
- 6. The decoupling capacitor on CPVDD is next important it too should be placed as close as possible to the device pins
- 7. The decoupling capacitors on VREFP, VREFN and VMID are next important, in that order
- 8. All remaining decoupling capacitors should then be placed as close as possible



#### **REQUIRED JACK DETECT COMPONENTS**


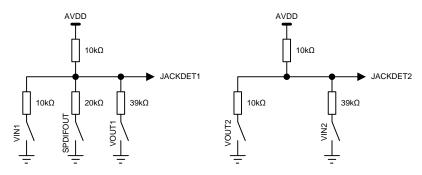


Figure 17 Required Jack Detect Components

The WM8860 supports jack detect on all analogue input and output ports, as well as on the S/PDIF output. This is implemented as per the High Definition Audio Specification Revision 1.0, section 7.4.2 and as such requires the resistor values shown in Figure 17 above. Note that, as per the High Definition Audio Specification, it is a requirement that the tolerance on these resistors is 1% or better.



### **PACKAGE DIMENSIONS**

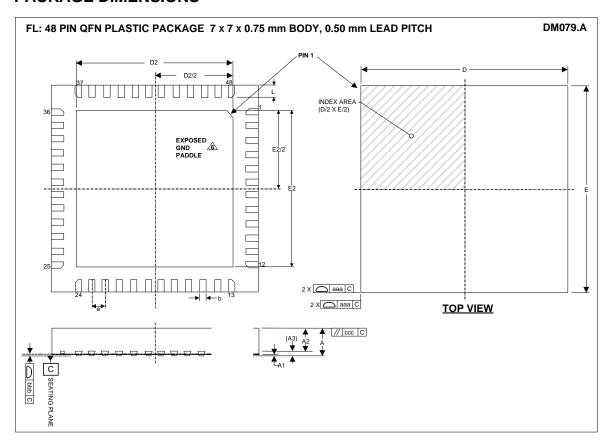

Symbols	Dimensions (mm)						
	MIN	NOM	MAX	NOTE			
Α	0.7	0.75	0.8				
A1	0	0.035	0.05				
A2	-	0.55	0.57				
A3		0.203 REF					
b	0.20	0.25	0.30	1			
D		7.00 BSC					
D2	5.55	5.65	5.75				
E		7.00 BSC					
E2	5.55	5.65	5.75				
е		0.5 BSC					
L	0.35	0.4	0.45				
Tolerances of Form and Position							
aaa	0.10						
bbb	0.08						
ccc	0.10						
REF	JEDEC, MO-220						

- NOTES:

  1. DIMENSION 5 APPLIED TO METALLIZED TERMINAL AND IS MEASURED BETWEEN 0.15 mm AND 0.30 mm FROM TERMINAL TIP.

  2. ALL DIMENSIONS ARE IN MILLIMETRES
  3. THE TERMINAL #1 IDENTIFIER AND TERMINAL NUMBERING CONVENTION SHALL CONFORM TO JESD 95-1 SPP-002.

  4. COPLANARITY APPLIES TO THE EXPOSED HEAT SINK SLUG AS WELL AS THE TERMINALS.

  5. THIS DRAWING IS SUBJECT TO CHANGE WITHOUT NOTICE.

  6. REFER TO APPLICATIONS NOTE WAN\_0118 FOR FURTHER INFORMATION.



#### IMPORTANT NOTICE

#### **Contacting Cirrus Logic Support**

For all product questions and inquiries, contact a Cirrus Logic Sales Representative. To find one nearest you, go to www.cirrus.com.

For the purposes of our terms and conditions of sale, "Preliminary" or "Advanced" datasheets are non-final datasheets that include but are not limited to datasheets marked as "Target", "Advance", "Product Preview", "Preliminary Technical Data" and/or "Pre-production." Products provided with any such datasheet are therefore subject to relevant terms and conditions associated with "Preliminary" or "Advanced" designations. The products and services of Cirrus Logic International (UK) Limited; Cirrus Logic, Inc.; and other companies in the Cirrus Logic group (collectively either "Cirrus Logic" or "Cirrus") are sold subject to Cirrus Logic's terms and conditions of sale supplied at the time of order acknowledgment, including those pertaining to warranty, indemnification, and limitation of liability. Software is provided pursuant to applicable license terms. Cirrus Logic reserves the right to make changes to its products and specifications or to discontinue any product or service without notice. Customers should therefore obtain the latest version of relevant information from Cirrus Logic to verify that the information is current and complete. Testing and other quality control techniques are utilized to the extent Cirrus Logic deems necessary. Specific testing of all parameters of each device is not necessarily performed. In order to minimize risks associated with customer applications, the customer must use adequate design and operating safeguards to minimize inherent or procedural hazards. Cirrus Logic is not liable for applications assistance or customer product design. The customer is solely responsible for its selection and use of Cirrus Logic products. Use of Cirrus Logic products may entail a choice between many different modes of operation, some or all of which may require action by the user, and some or all of which may be optional. Nothing in these materials should be interpreted as instructions or suggestions to choose one mode over another. Likewise, description of a single mode should not be interpreted as a suggestion that other modes should not be used or that they would not be suitable for operation. Features and operations described herein are for illustrative purposes only.

CERTAIN APPLICATIONS USING SEMICONDUCTOR PRODUCTS MAY INVOLVE POTENTIAL RISKS OF DEATH, PERSONAL INJURY, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE ("CRITICAL APPLICATIONS"). CIRRUS LOGIC PRODUCTS ARE NOT DESIGNED, AUTHORIZED OR WARRANTED FOR USE IN PRODUCTS SURGICALLY IMPLANTED INTO THE BODY, AUTOMOTIVE SAFETY OR SECURITY DEVICES, NUCLEAR SYSTEMS, LIFE SUPPORT PRODUCTS OR OTHER CRITICAL APPLICATIONS. INCLUSION OF CIRRUS LOGIC PRODUCTS IN SUCH APPLICATIONS IS UNDERSTOOD TO BE FULLY AT THE CUSTOMER'S RISK AND CIRRUS LOGIC DISCLAIMS AND MAKES NO WARRANTY, EXPRESS, STATUTORY OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, WITH REGARD TO ANY CIRRUS LOGIC PRODUCT THAT IS USED IN SUCH A MANNER. IF THE CUSTOMER OR CUSTOMER'S CUSTOMER USES OR PERMITS THE USE OF CIRRUS LOGIC PRODUCTS IN CRITICAL APPLICATIONS, CUSTOMER AGREES, BY SUCH USE, TO FULLY INDEMNIFY CIRRUS LOGIC, ITS OFFICERS, DIRECTORS, EMPLOYEES, DISTRIBUTORS AND OTHER AGENTS FROM ANY AND ALL LIABILITY, INCLUDING ATTORNEYS' FEES AND COSTS, THAT MAY RESULT FROM OR ARISE IN CONNECTION WITH THESE USES.

This document is the property of Cirrus Logic and by furnishing this information, Cirrus Logic grants no license, express or implied, under any patents, mask work rights, copyrights, trademarks, trade secrets or other intellectual property rights. Any provision or publication of any third party's products or services does not constitute Cirrus Logic's approval, license, warranty or endorsement thereof. Cirrus Logic gives consent for copies to be made of the information contained herein only for use within your organization with respect to Cirrus Logic integrated circuits or other products of Cirrus Logic, and only if the reproduction is without alteration and is accompanied by all associated copyright, proprietary and other notices and conditions (including this notice). This consent does not extend to other copying such as copying for general distribution, advertising or promotional purposes, or for creating any work for resale. This document and its information is provided "AS IS" without warranty of any kind (express or implied). All statutory warranties and conditions are excluded to the fullest extent possible. No responsibility is assumed by Cirrus Logic for the use of information herein, including use of this information as the basis for manufacture or sale of any items, or for infringement of patents or other rights of third parties. Cirrus Logic, Cirrus, the Cirrus Logic logo design, and SoundClear are among the trademarks of Cirrus Logic. Other brand and product names may be trademarks or service marks of their respective owners.

Copyright © 2010–2016 Cirrus Logic, Inc. All rights reserved.



### **REVISION HISTORY**

DATE	REV	DESCRIPTION OF CHANGES	PAGE	CHANGED BY
04/01/11	3.1	Order Info: updated to show both non tape and reel and tape and reel parts	8	JMacD
15/04/11	3.2	AVDD and CPVDD max voltage = 5V+ 5%	1,10	JMacD
22/06/11	4.0	Beep Generator added to Block Diagram	2	PH
		Added Power Consumption Information	24	CT