

MODIFICATION HISTORY

MODEL NAME : KLV-40X200A/46X200A/

KLV-40X250A/46X250A

SERVICE MANUAL

PARTS No. : 9-834-121-02


* Blue characters are linking.

[illegible]

KLV-40X200A/46X200A KLV-40X250A/46X250A

SERVICE MANUAL

GA Model

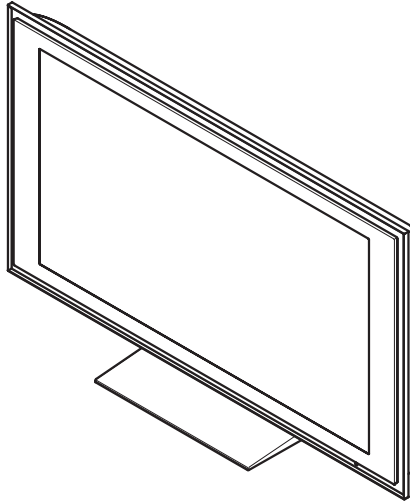

FIX CHASSIS

SPECIFICATIONS

Display Unit

Power Requirements:

110–240 V AC, 50/60 Hz

Screen Size:

KLV-46X200A/46X250A: 46 inches

KLV-40X200A/40X250A: 40 inches

Display Resolution:

1,920 dots (horizontal) × 1,080 lines (vertical)

Power Consumption:

KLV-46X200A/46X250A: 260 W

KLV-40X200A/40X250A: 220 W

Standby Power Consumption:

0.5 W

Dimensions (w × h × d):

KLV-46X200A:

Approx. 1,262 × 795 × 322 mm (with stand)

Approx. 1,262 × 734 × 121 mm (without stand)

KLV-46V250A:

Approx. 1,262 × 795 × 322 mm (with stand)

Approx. 1,262 × 734 × 123 mm (without stand)

KLV-40X200A:

Approx. 1,111 × 717 × 322 mm (with stand)

Approx. 1,111 × 657 × 121 mm (without stand)

KLV-40X250A:

Approx. 1,111 × 717 × 322 mm (with stand)

Approx. 1,111 × 657 × 123 mm (without stand)

Weight:

KLV-46X200A/46X250A:

Approx. 41.0 kg (with stand)

Approx. 36.0 kg (without stand)

KLV-40X200A/40X250A:

Approx. 35.0 kg (with stand)

Approx. 30.0 kg (without stand)

Panel System

LCD (Liquid Crystal Display) Panel

TV System

B/G, I, D/K, M

Color/Video System

PAL, SECAM, NTSC 3.58, NTSC4.43 (only Video In)

Antenna

75 ohm external terminal

Channel Coverage

B/G

VHF: E2 to E12 / UHF: E21 to E69 /

CATV: S01 to S03, S1 to S41

VHF: 0 to 12, 5A, 9A / UHF: 28 to 69 /

CATV: S01 to S03, S1 to S41 (Australia only)

VHF: 1 to 11 / UHF: 21 to 69 /

CATV: S01 to S03, S1 to S41 (New Zealand only)

I

UHF: B21 to B69 / CATV: S01 to S03, S1 to S41

D/K

VHF: C1 to C12, R1 to R12 / UHF: C13 to C57,

R21 to R60 /

CATV: S01 to S03, S1 to S41, Z1 to Z39

M

VHF: A2 to A13 / UHF: A14 to A79 /

CATV: A-8 to A-2, A to W+4, W+6 to W+84

LCD Colour TV
SONY®

Terminals

➡ 1, 2

Supported formats: 1080i, 720p, 576p, 576i, 480p, 480i

Y: 1 Vp-p, 75 ohms, 0.3V negative sync

PB/CB: 0.7 Vp-p, 75 ohms

PR/CR: 0.7 Vp-p, 75 ohms

S➡ 1, 2

S video input (4-pin mini DIN)

➡ 1, 2, 3

Video input (phono jack)

➡ 1, 2, 3

Audio input (phono jacks)

500 mVrms

Impedance: 47 kilohms

HDMI IN 1, 2

Video: 1080p, 1080i, 720p, 576p, 576i, 480p, 480i

Audio: Two channel linear PCM

32, 44.1 and 48 kHz, 16, 20 and 24 bits, or

analog audio input (phono jacks)

500 mVrms

Impedance: 47 kilohms

(HDMI IN 2 only)

➡ Video output (phono jack)

➡ Audio output (phono jacks)

➡ (RGB) PC IN

PC Input (D-sub 15-pin) (see page 40)

G: 0.7 Vp-p, 75 ohms, non Sync on Green

B: 0.7 Vp-p, 75 ohms

R: 0.7 Vp-p, 75 ohms

HD: 1-5 Vp-p

VD: 1-5 Vp-p

➡ PC IN

PC audio input (minijack)

➡

Headphones jack

Sound Output

11 W + 11 W

Optional Accessories

- Wall-Mount Bracket SU-WL51
- TV stand SU-FL61
- Colour Variation Unit:
CRU-46X1 (for KLV-46X200A/46X250A)
CRU-40X1 (for KLV-40X200A/40X250A)

Design and specifications are subject to change without notice.

PC Input Signal Reference Chart

Signals	Horizontal (Pixel)	Vertical (Line)	Horizontal frequency (kHz)	Vertical frequency (Hz)	Standard
VGA	640	480	31.5	60	VGA
	640	480	37.5	75	VESA
	720	400	31.5	70	VGA-T
SVGA	800	600	37.9	60	VESA Guidelines
	800	600	46.9	75	VESA
XGA	1024	768	48.4	60	VESA Guidelines
	1024	768	56.5	70	VESA
	1024	768	60	75	VESA
WXGA	1280	768	47.4	60	VESA
	1280	768	47.8	60	VESA
	1360	768	47.7	60	VESA

- This TV's PC input does not support Sync on Green or Composite Sync.
- This TV's PC input does not support interlaced signals.
- For the best picture quality, it is recommended to use the signals (boldfaced) in the above chart with a 60 Hz vertical frequency from a personal computer. In plug and play, signals with a 60 Hz vertical frequency will be selected automatically.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:


1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are “pinched” or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described right.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes).

Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

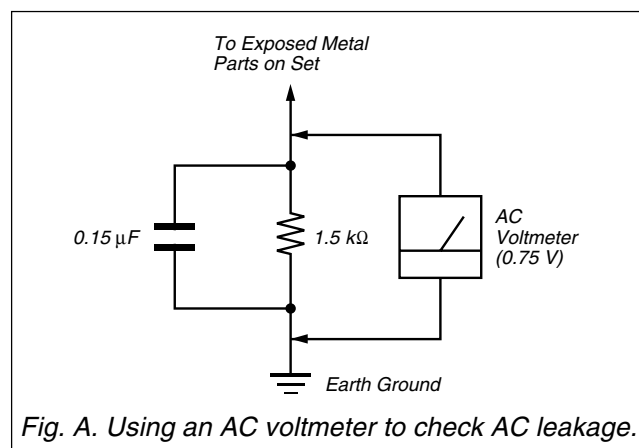

WARNING!!



SAFETY-RELATED COMPONENT WARNING!!
COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

TABLE OF CONTENTS


1. DISASSEMBLY	1-1
1-1. REAR CABINET ASSY REMOVAL	1-1
1-2. STAND ASSY REMOVAL	1-2
1-3. SPEAKER REMOVAL	1-2
1-4. H1 BOARD REMOVAL	1-3
1-5. H2 BOARD REMOVAL	1-3
1-6. G1, D1 AND D2 BOARDS REMOVAL	1-4
1-7. D3 BOARD REMOVAL (KLV-46X200A/46X250A)	1-5
1-8. AG BOARD REMOVAL	1-5
1-9. B2, FXE AND TUG BOARDS REMOVAL	1-6
1-10. H3 AND H4 BOARDS REMOVAL	1-7
1-11. CHASSIS BRACKET ASSY REMOVAL	1-7
1-12. LCD PANEL REMOVAL	1-8
2. DIAGRAMS	2-1
2-1. BLOCK DIAGRAM	2-1
2-2. FRAME DIAGRAMS	2-2
(1) KLV-40X200A/40X250A	2-2
(2) KLV-46X200A/46X250A	2-3
2-3. CIRCUIT BOARDS LOCATION	2-4
(1) KLV-40X200A/40X250A	2-4
(2) KLV-46X200A/46X250A	2-4
2-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS	2-4
(1) Schematic Diagrams of AG Board	2-5
(2) Schematic Diagrams of B2 Board	2-16
(3) Schematic Diagram of D1 Board (KLV-40X200A/40X250A)	2-33
(4) Schematic Diagram of D2 Board (KLV-46X200A/46X250A)	2-35
(5) Schematic Diagram of D3 Board (KLV-46X200A/46X250A)	2-37
(6) Schematic Diagrams of FXE Board	2-39
(7) Schematic Diagram of G1 Board	2-48
(8) Schematic Diagram of H1 Board	2-50
(9) Schematic Diagram of H2 Board	2-51
(10) Schematic Diagram of H3 Board	2-53
(11) Schematic Diagram of H4 Board	2-54
(12) Schematic Diagrams of TUG Board	2-55
2-5. SEMICONDUCTORS	2-57
3. EXPLODED VIEWS	3-1
3-1. REAR CABINET AND STAND ASSY	3-2
3-2. ARM AND UNDER COVER	3-3
3-3. CHASSIS-1	3-4
3-4. CHASSIS-2	3-5
3-5. CHASSIS BRACKET ASSY AND SPEAKER	3-6
3-6. BEZEL ASSY AND LCD PANEL	3-7
3-7. PACKING MATERIALS	3-8
4. ELECTRICAL PARTS LIST	4-1

SECTION 1 DISASSEMBLY


1-1. REAR CABINET ASSY REMOVAL

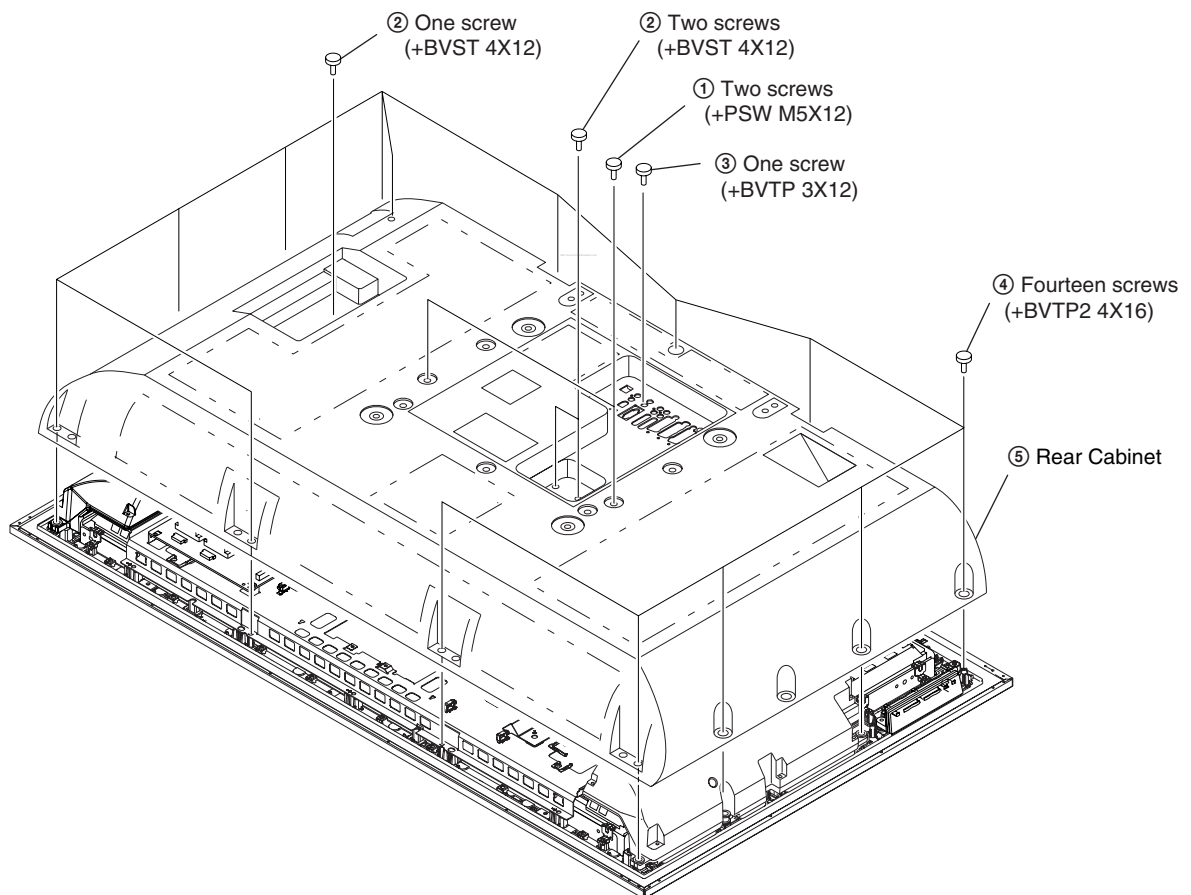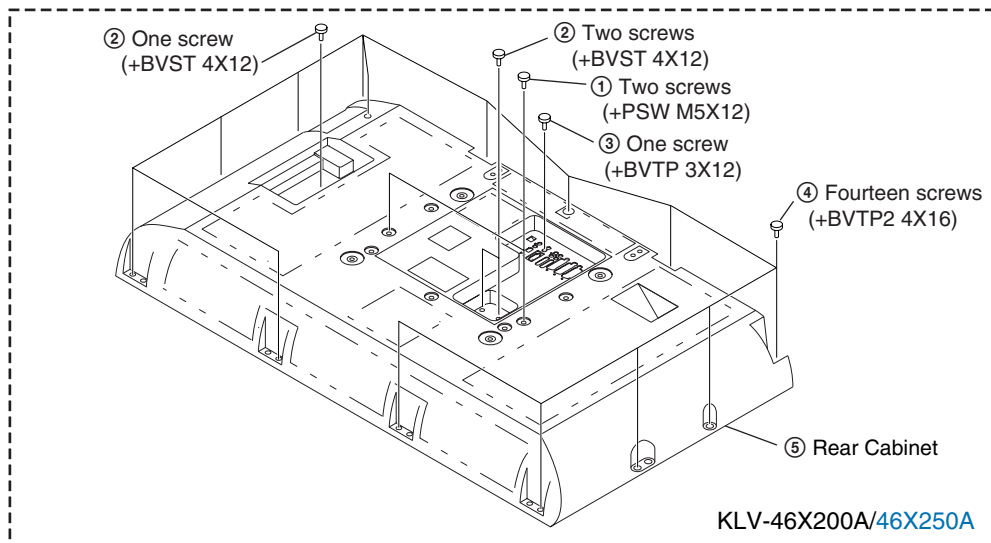


1-2. STAND ASSY REMOVAL

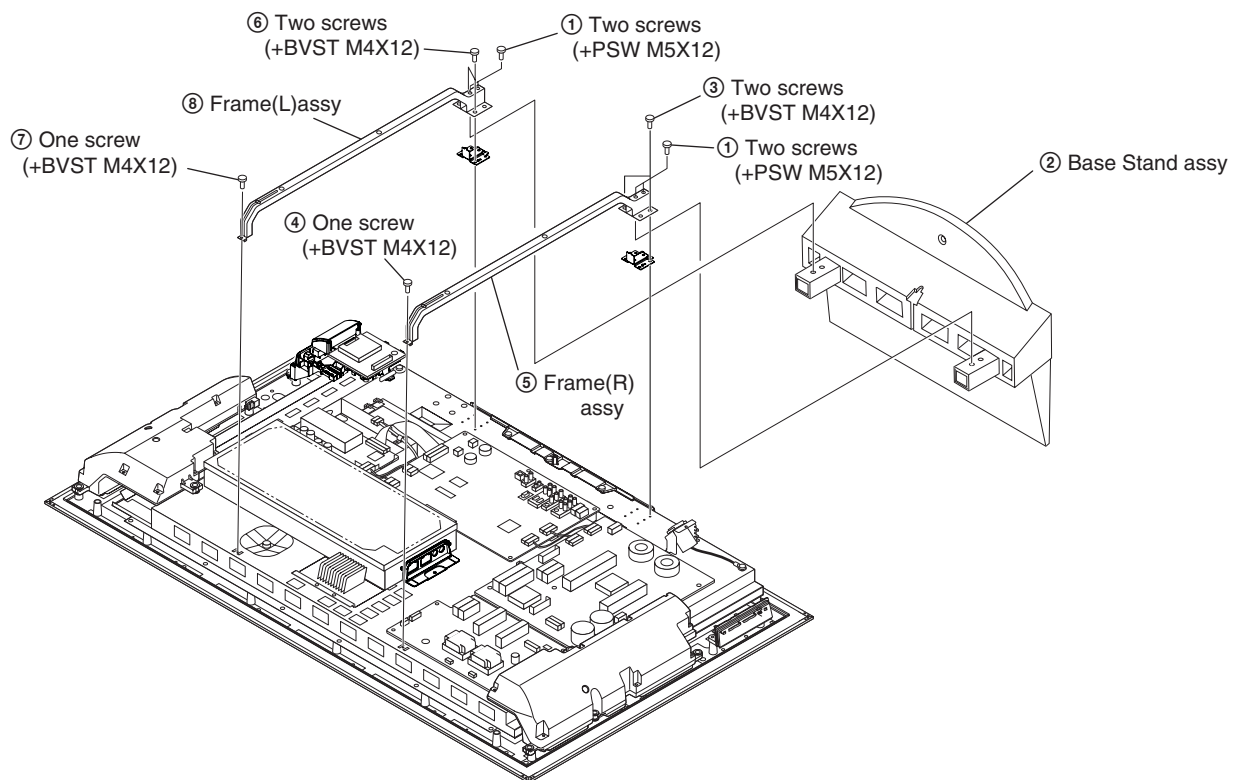


1-3. SPEAKER REMOVAL

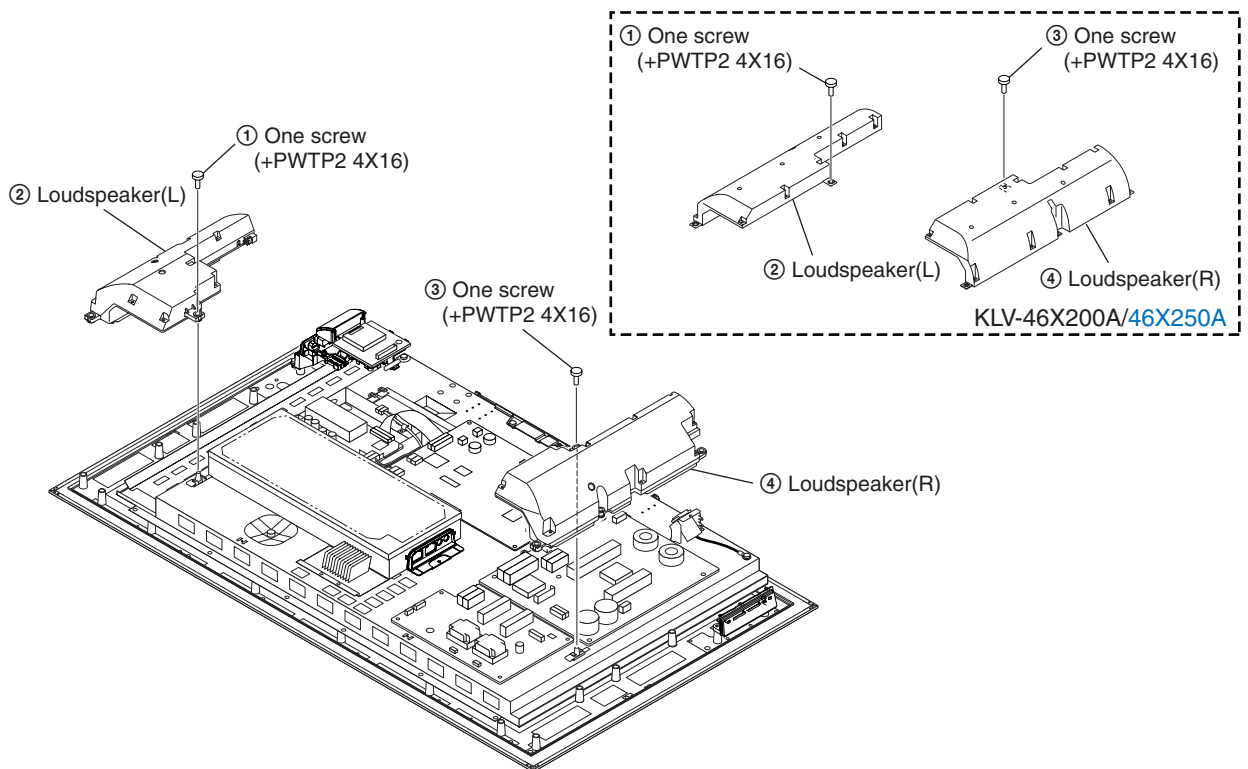


1-4. H1 BOARD REMOVAL

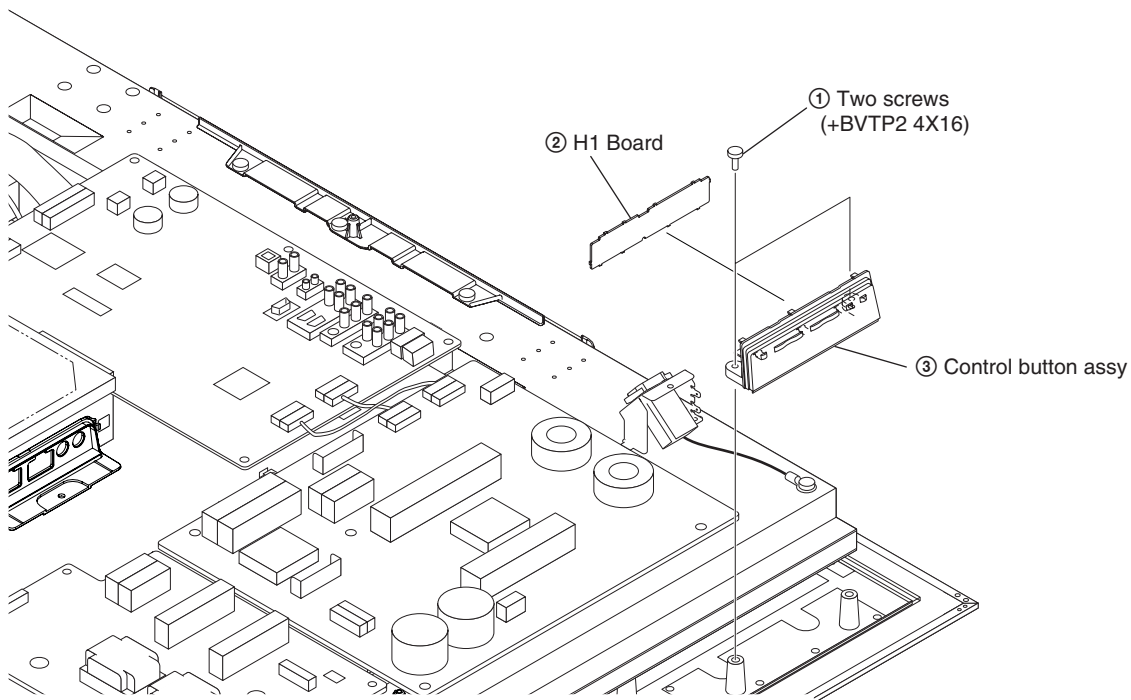


1-5. H2 BOARD REMOVAL

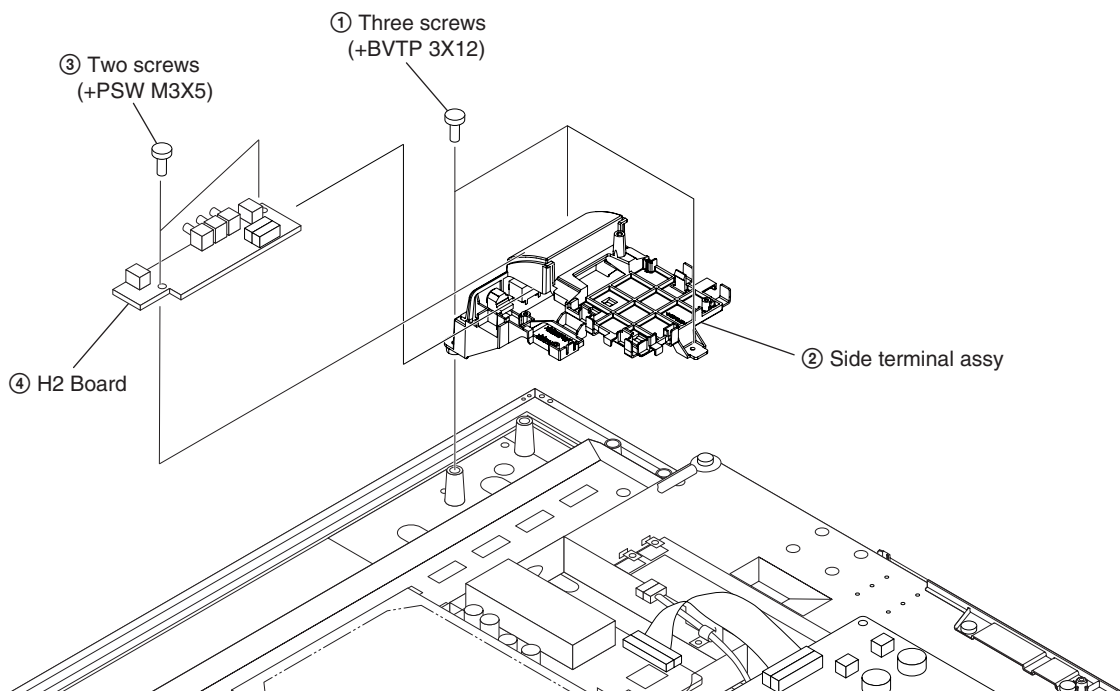


1-6. G1, D1 AND D2 BOARDS REMOVAL

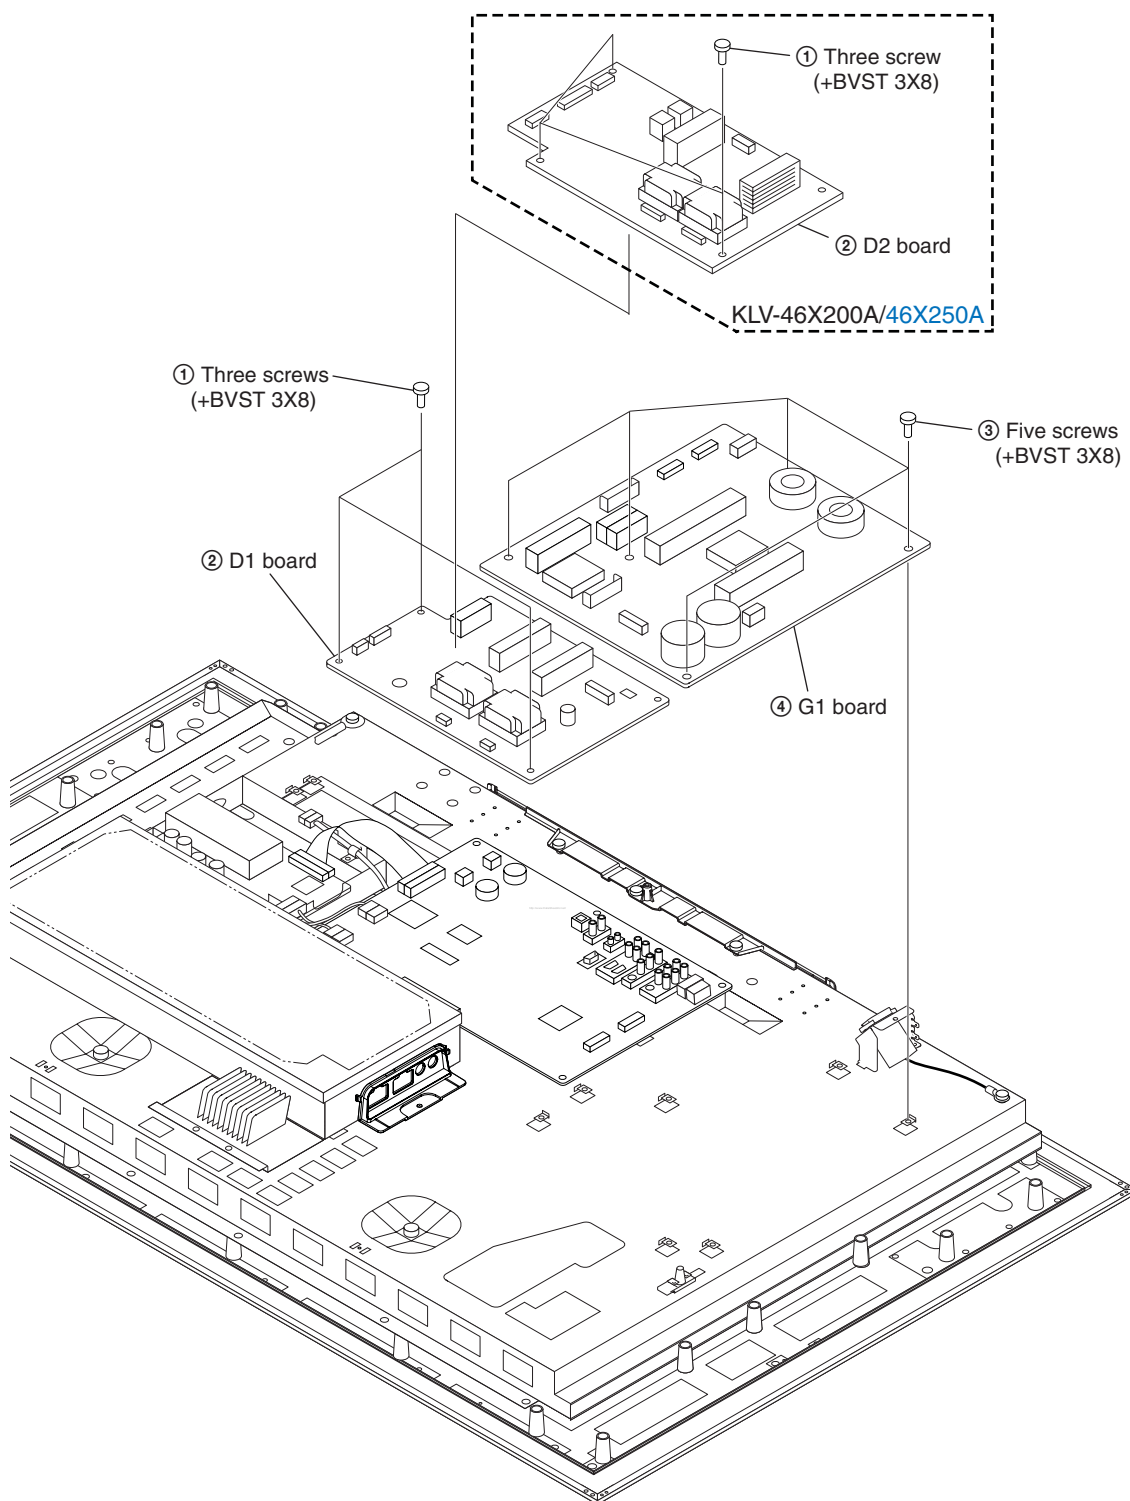


1-7. D3 BOARD REMOVAL (KLV-46X200A/46X250A)

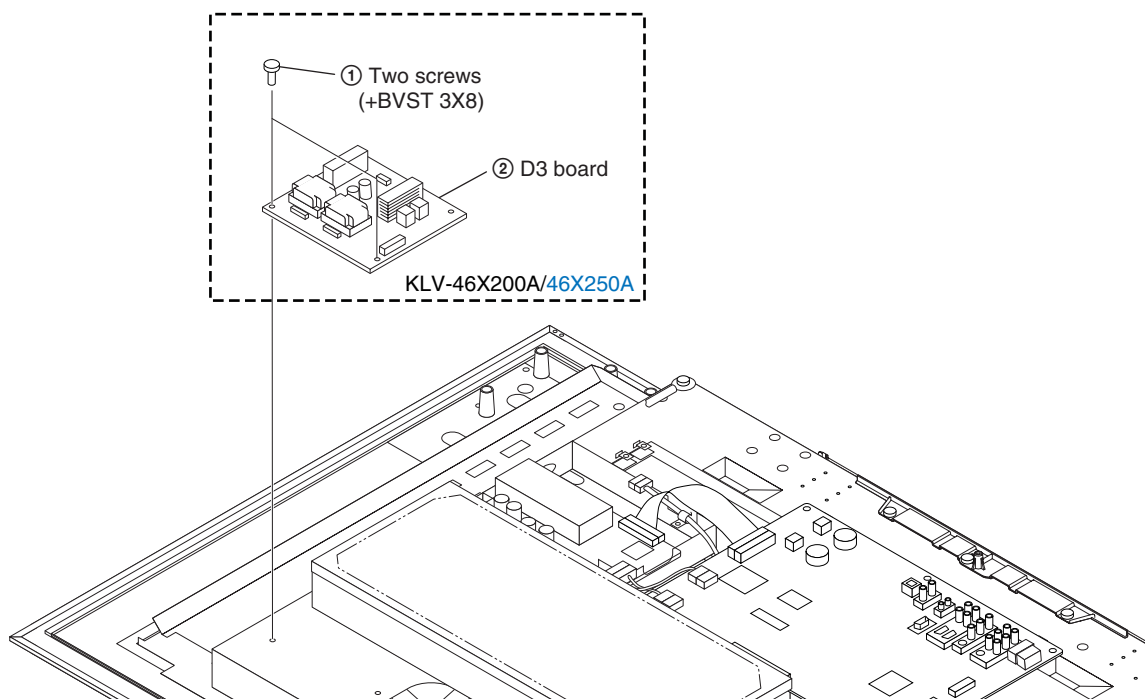


1-8. AG BOARD REMOVAL

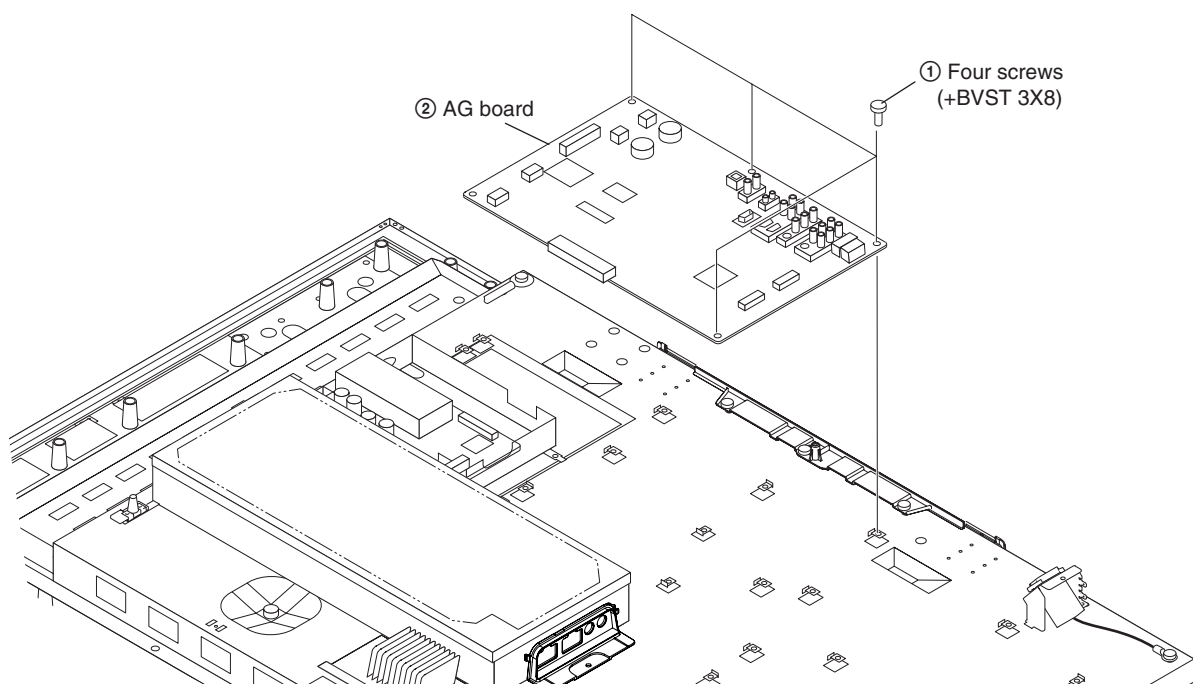


1-9. B2, FXE AND TUG BOARDS REMOVAL

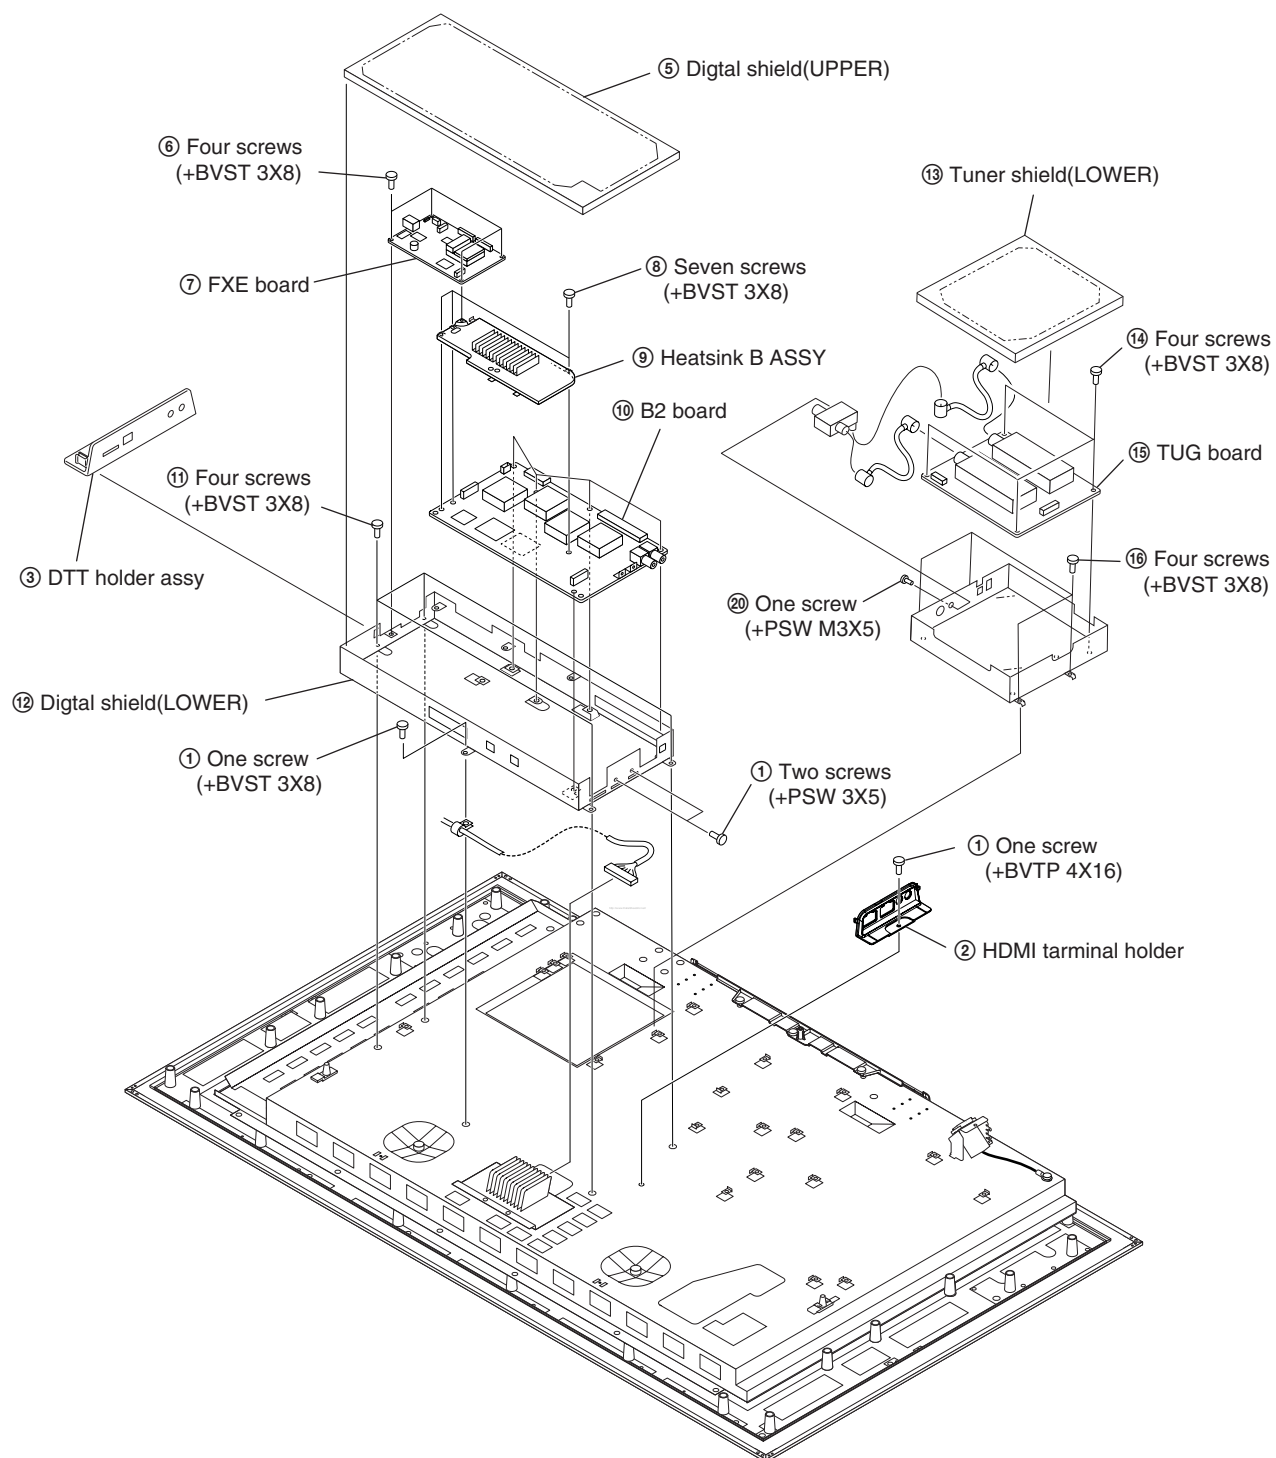


1-10. H3 AND H4 BOARDS REMOVAL

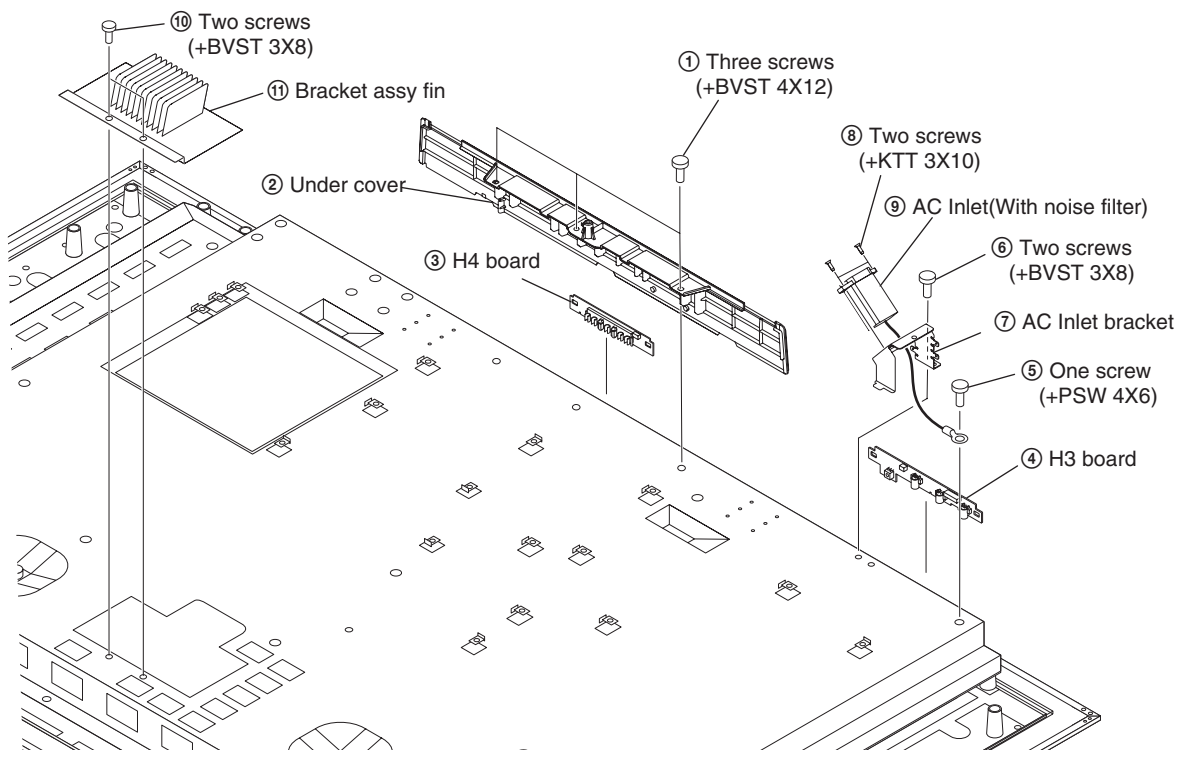

1-11. CHASSIS BRACKET ASSY REMOVAL

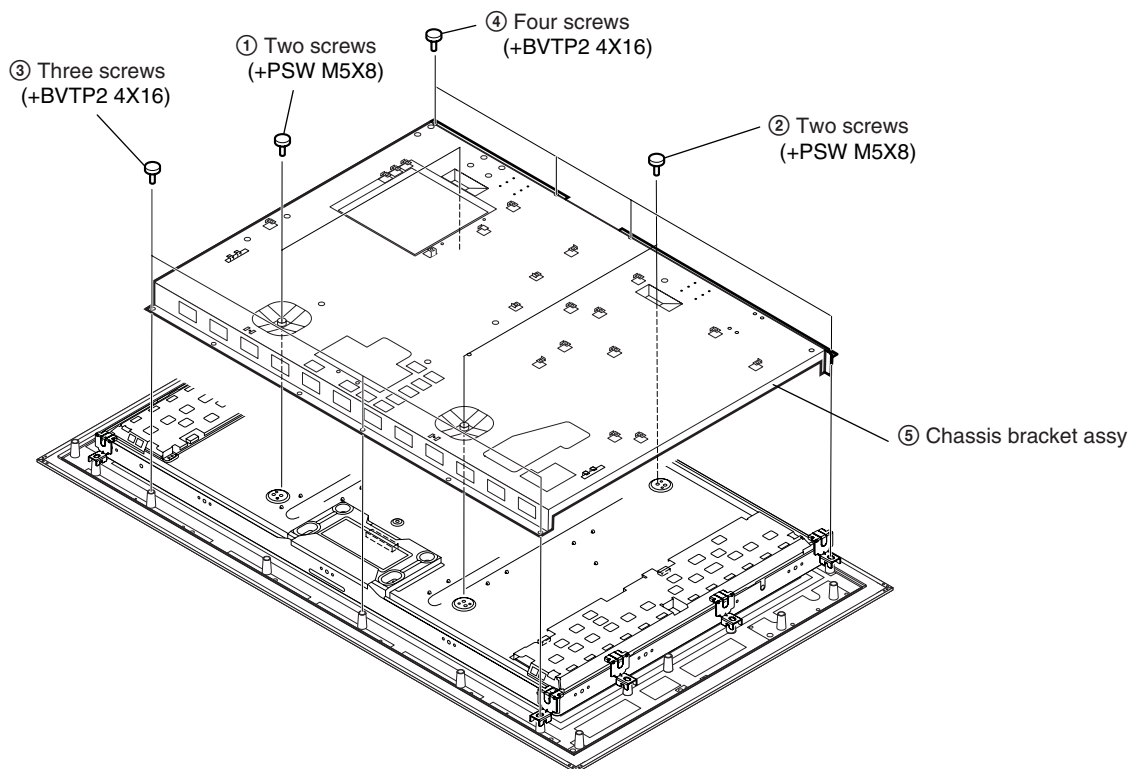


1-12. LCD PANEL REMOVAL

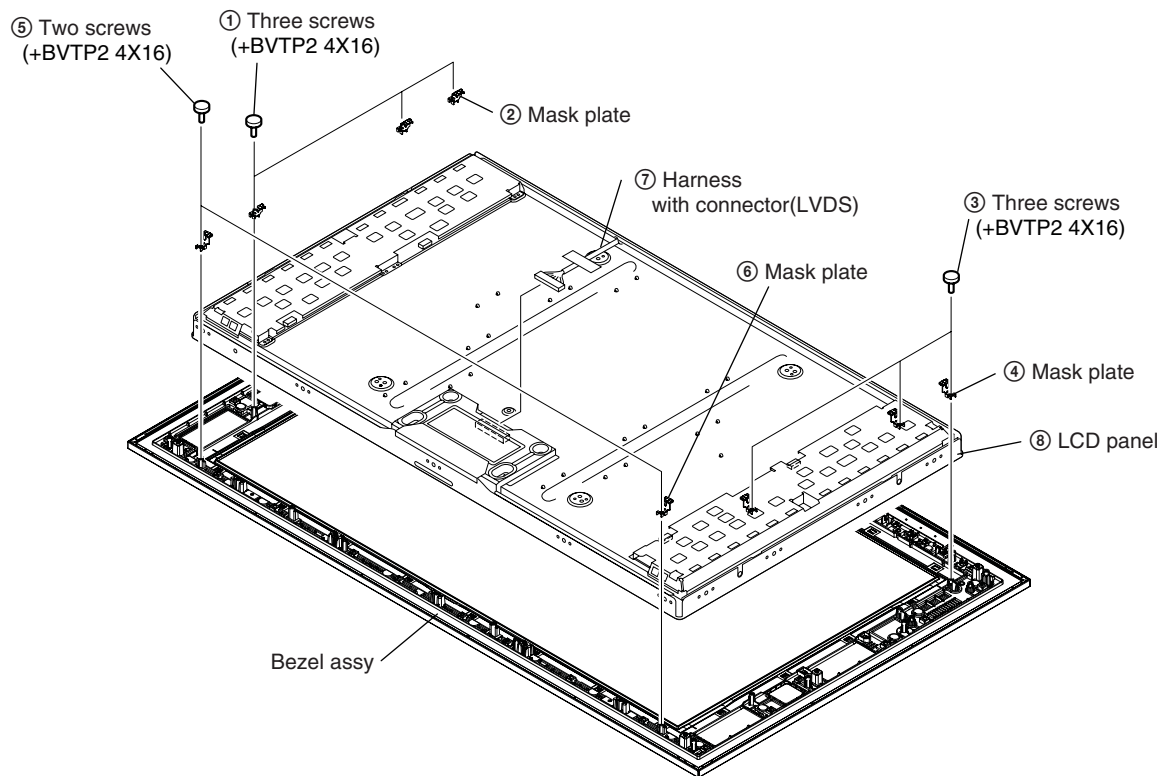



SECTION 2
DIAGRAMS

2-1. BLOCK DIAGRAM

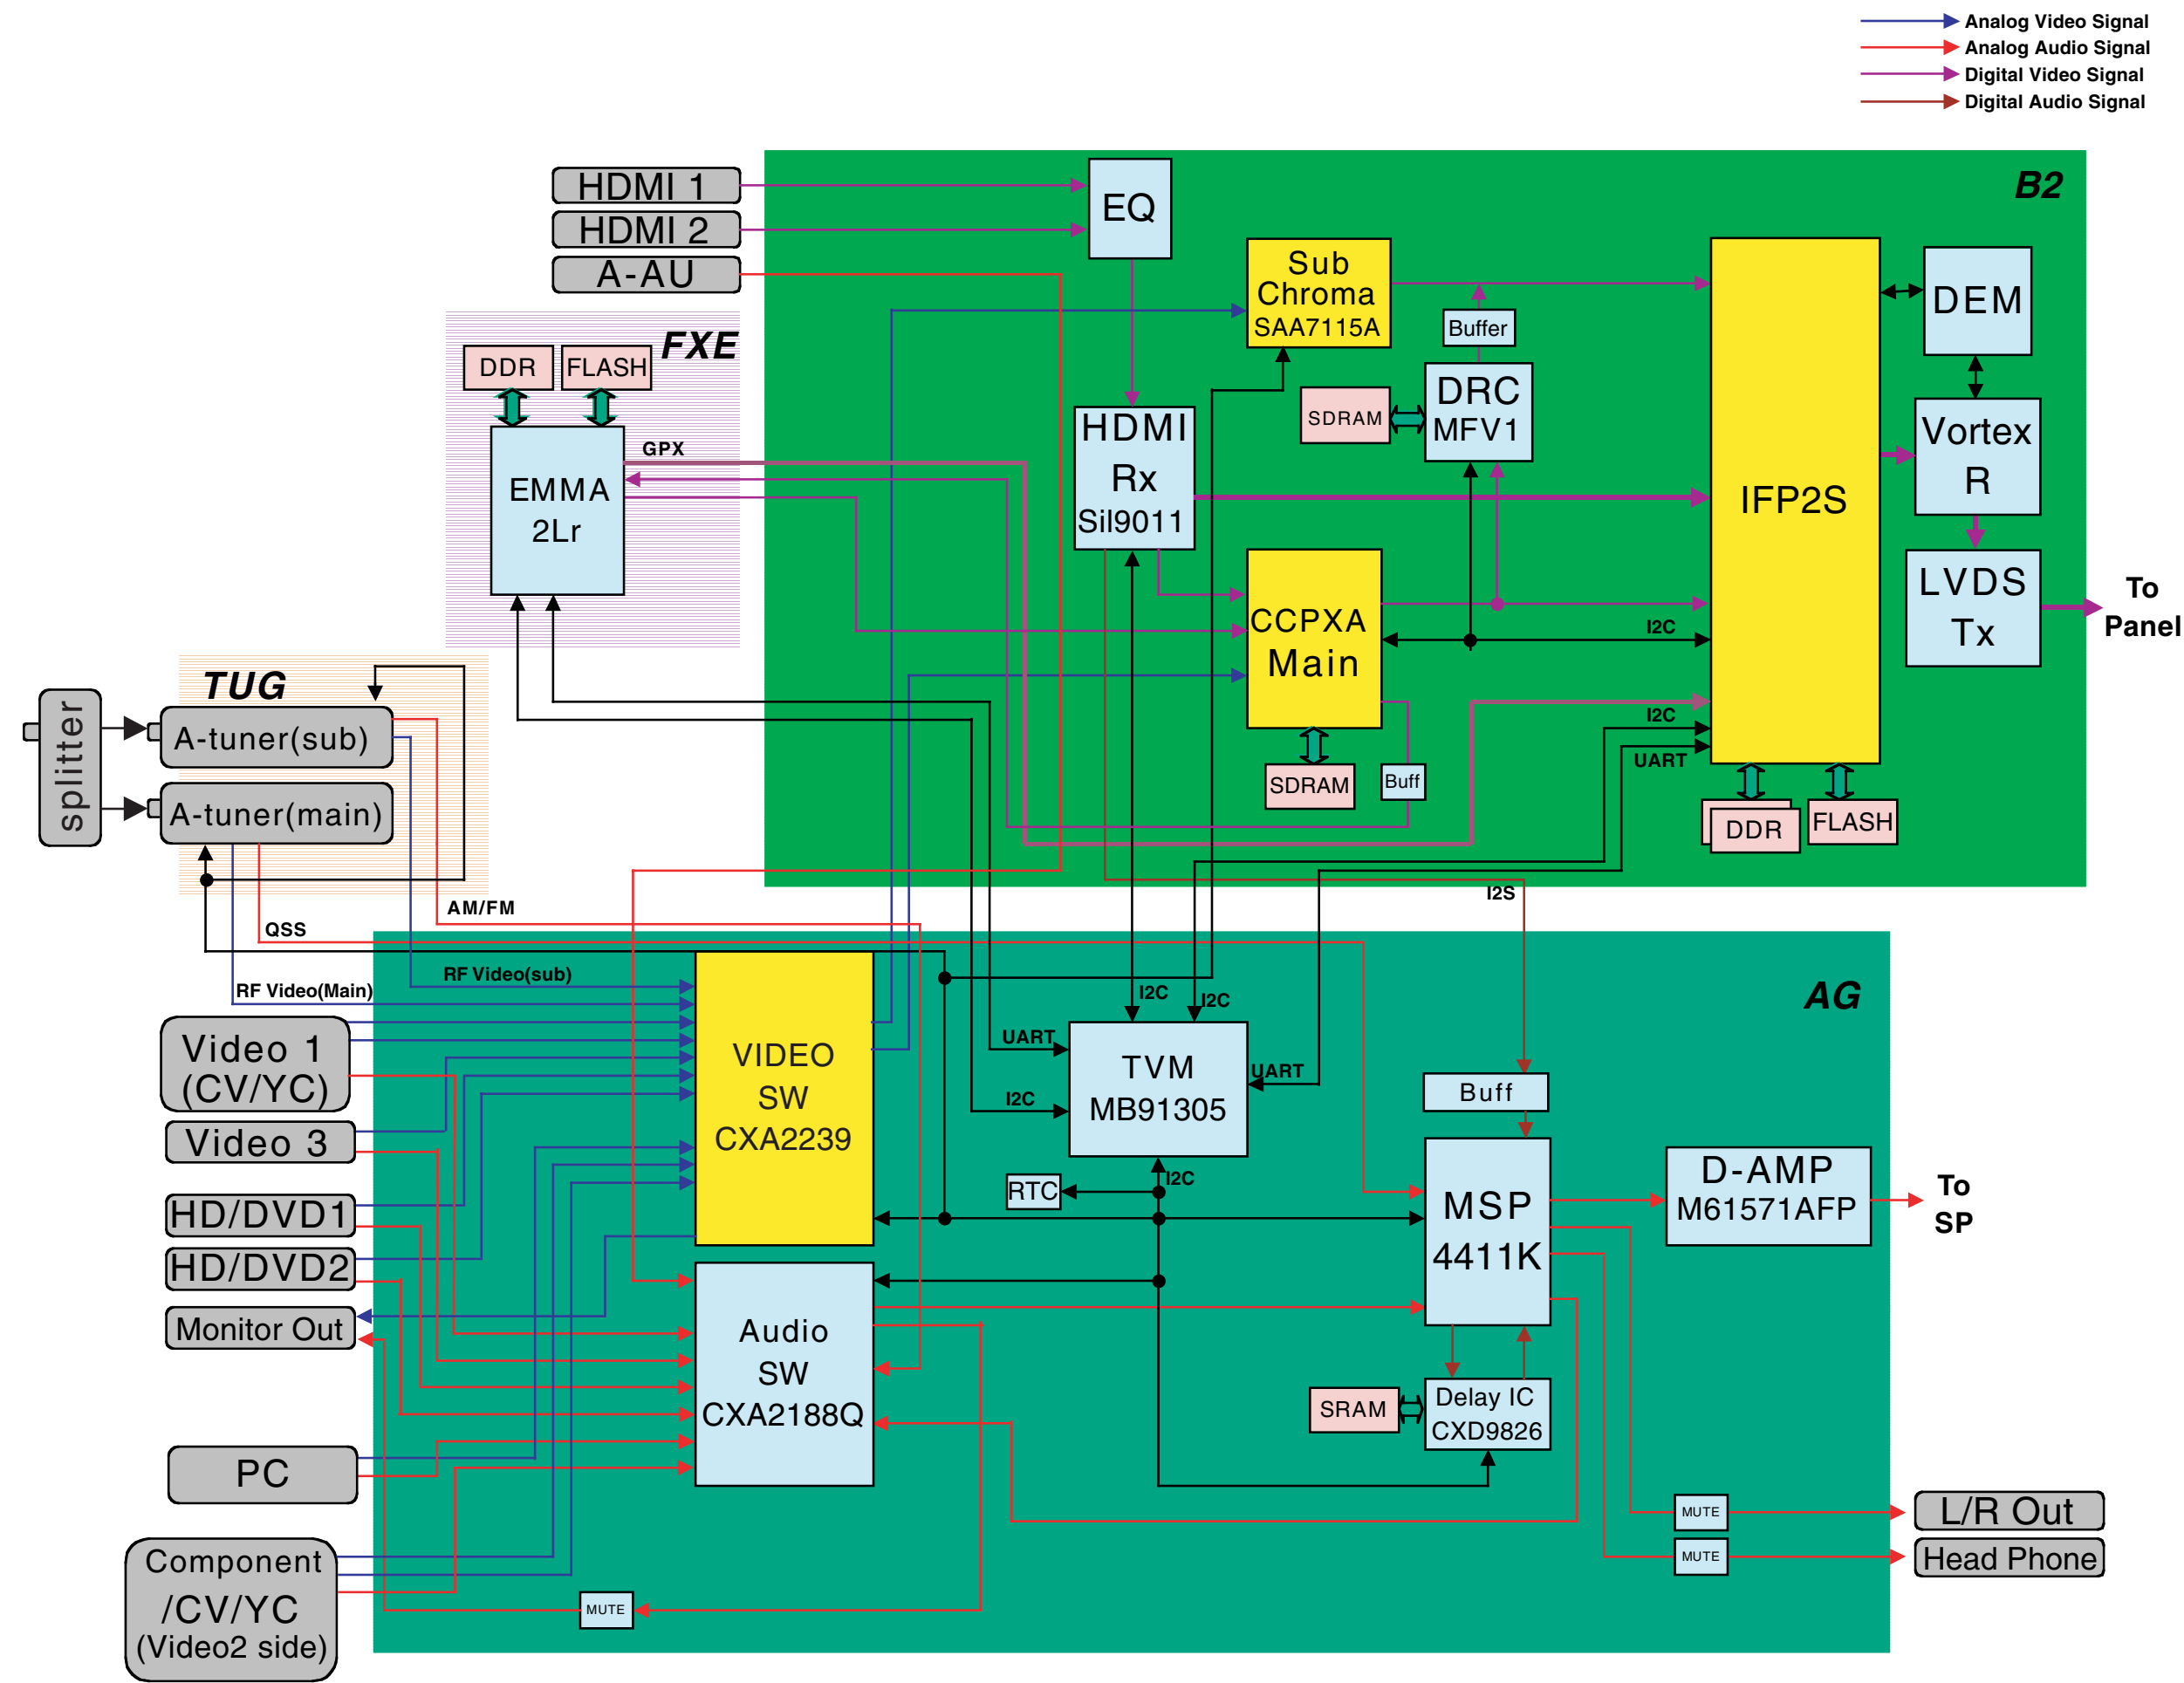


2-2. FRAME DIAGRAMS
(1) KLV-40X200A/40X250A

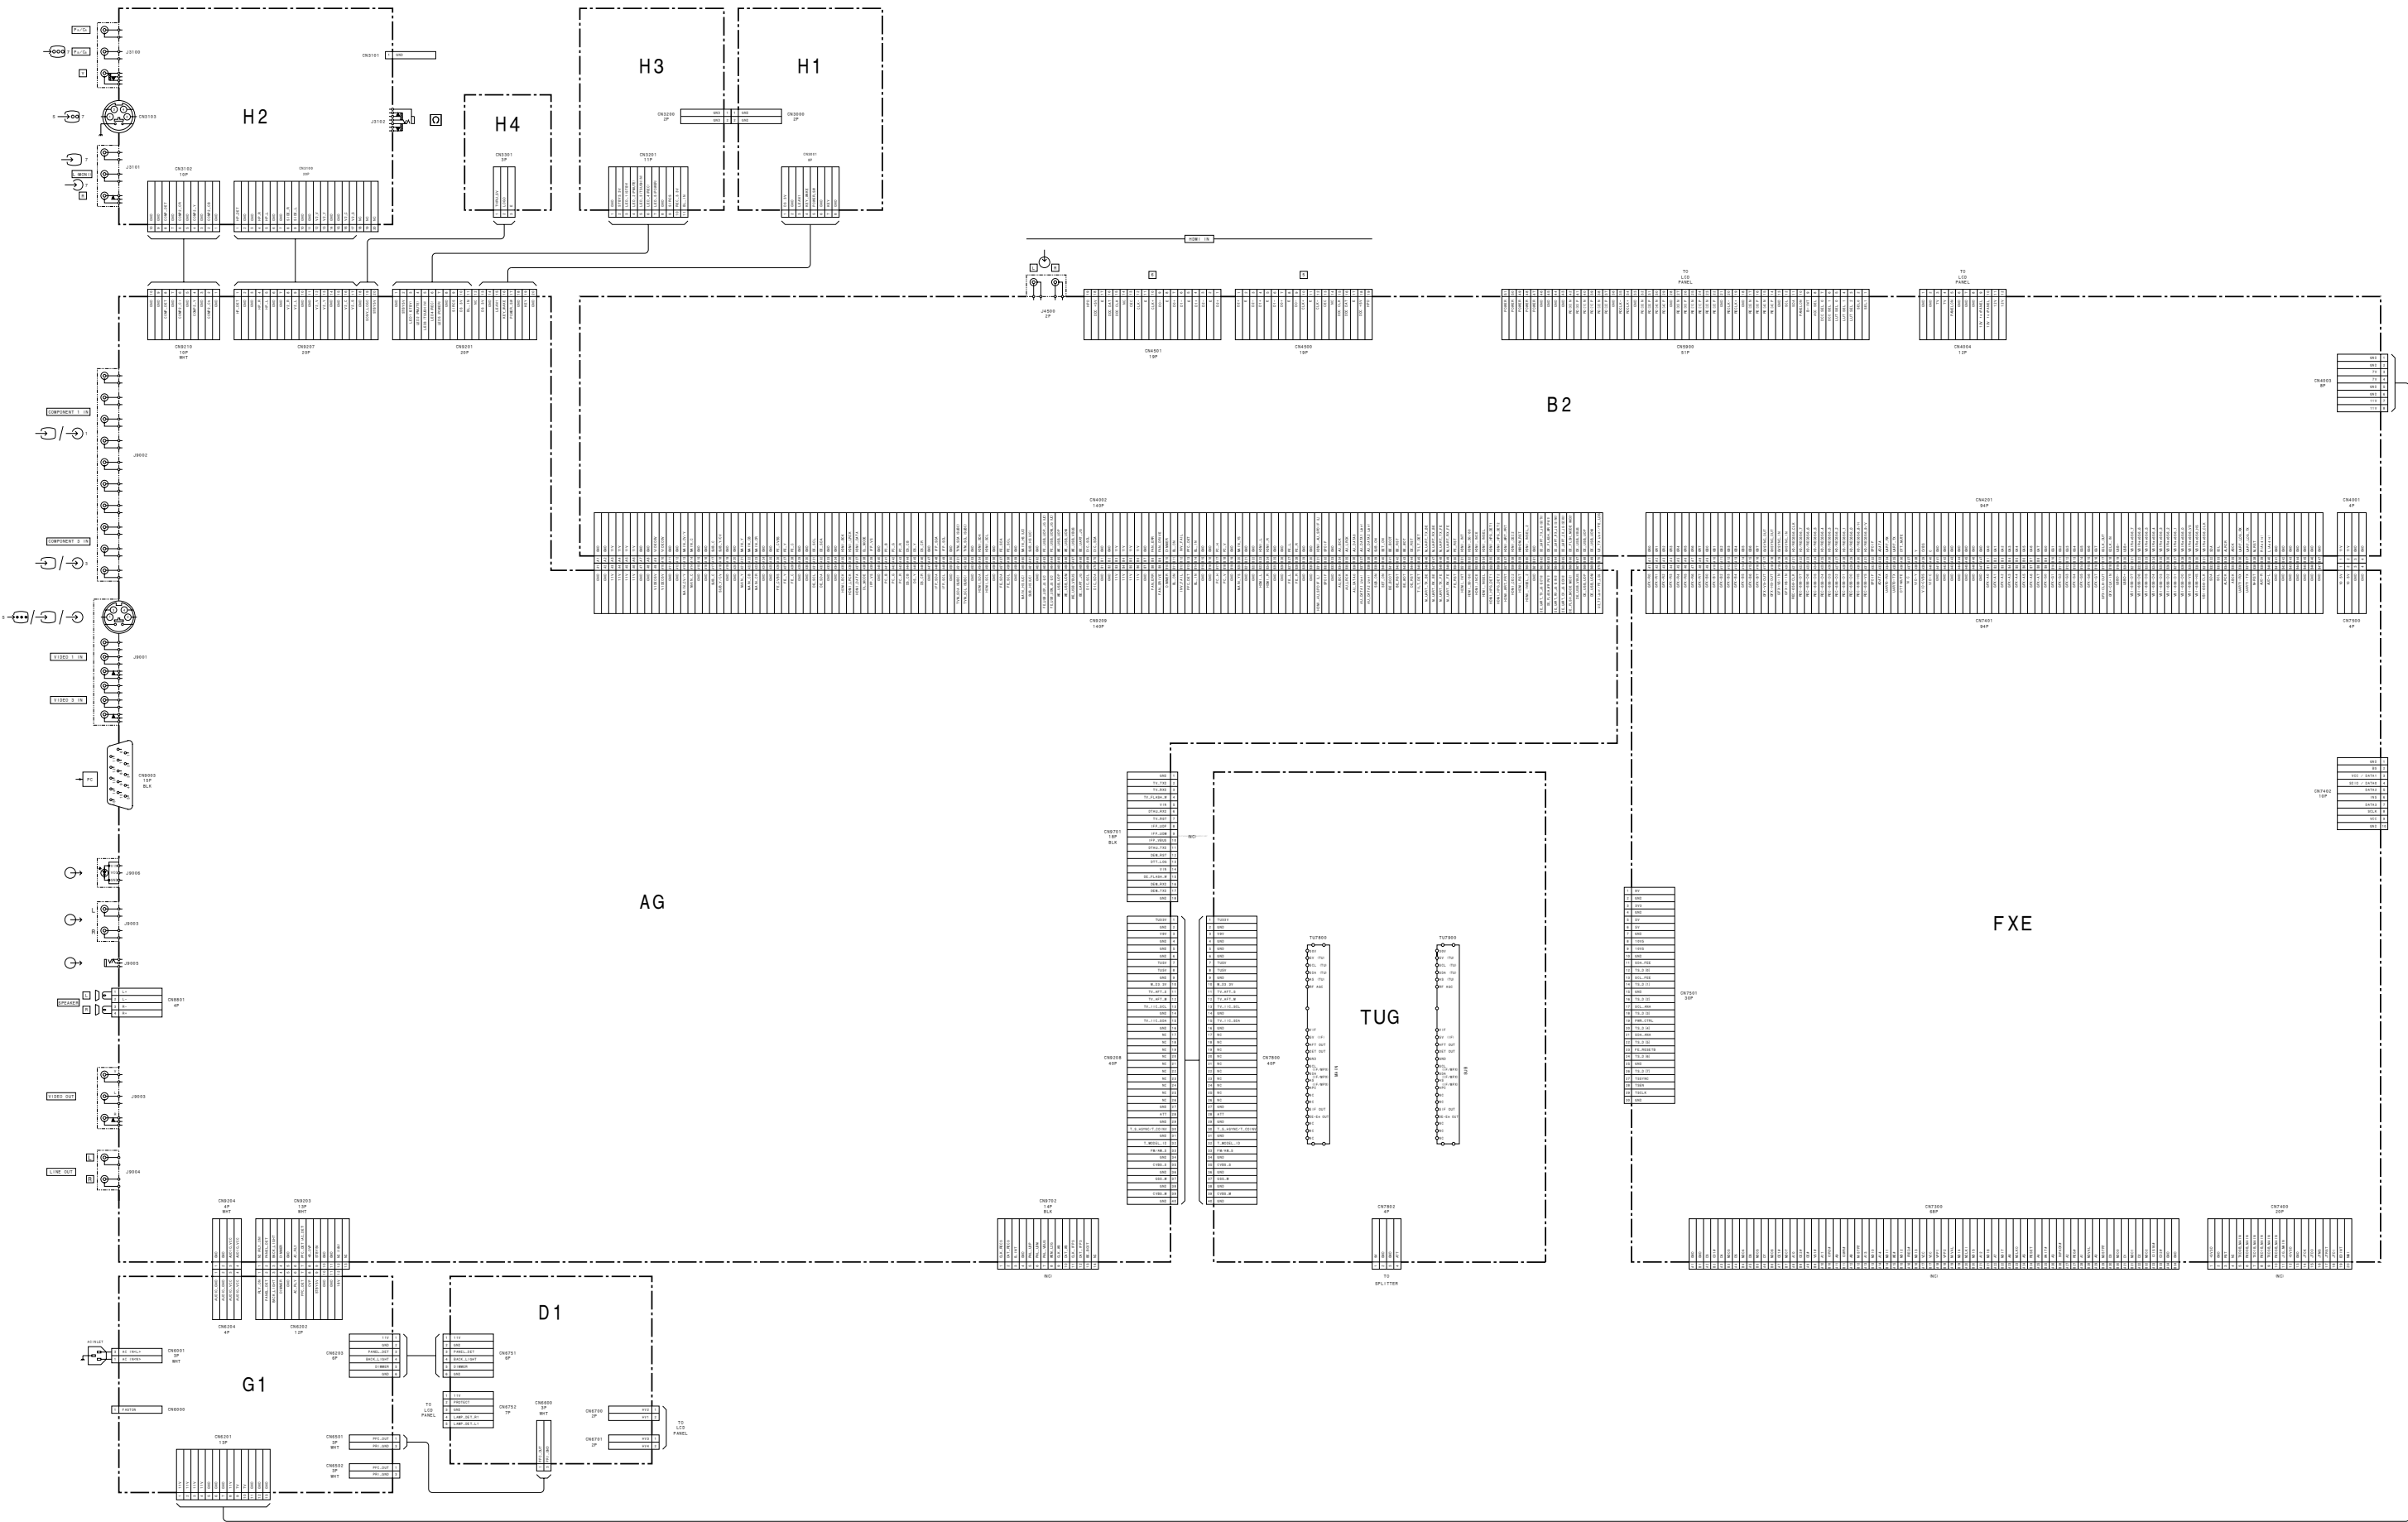

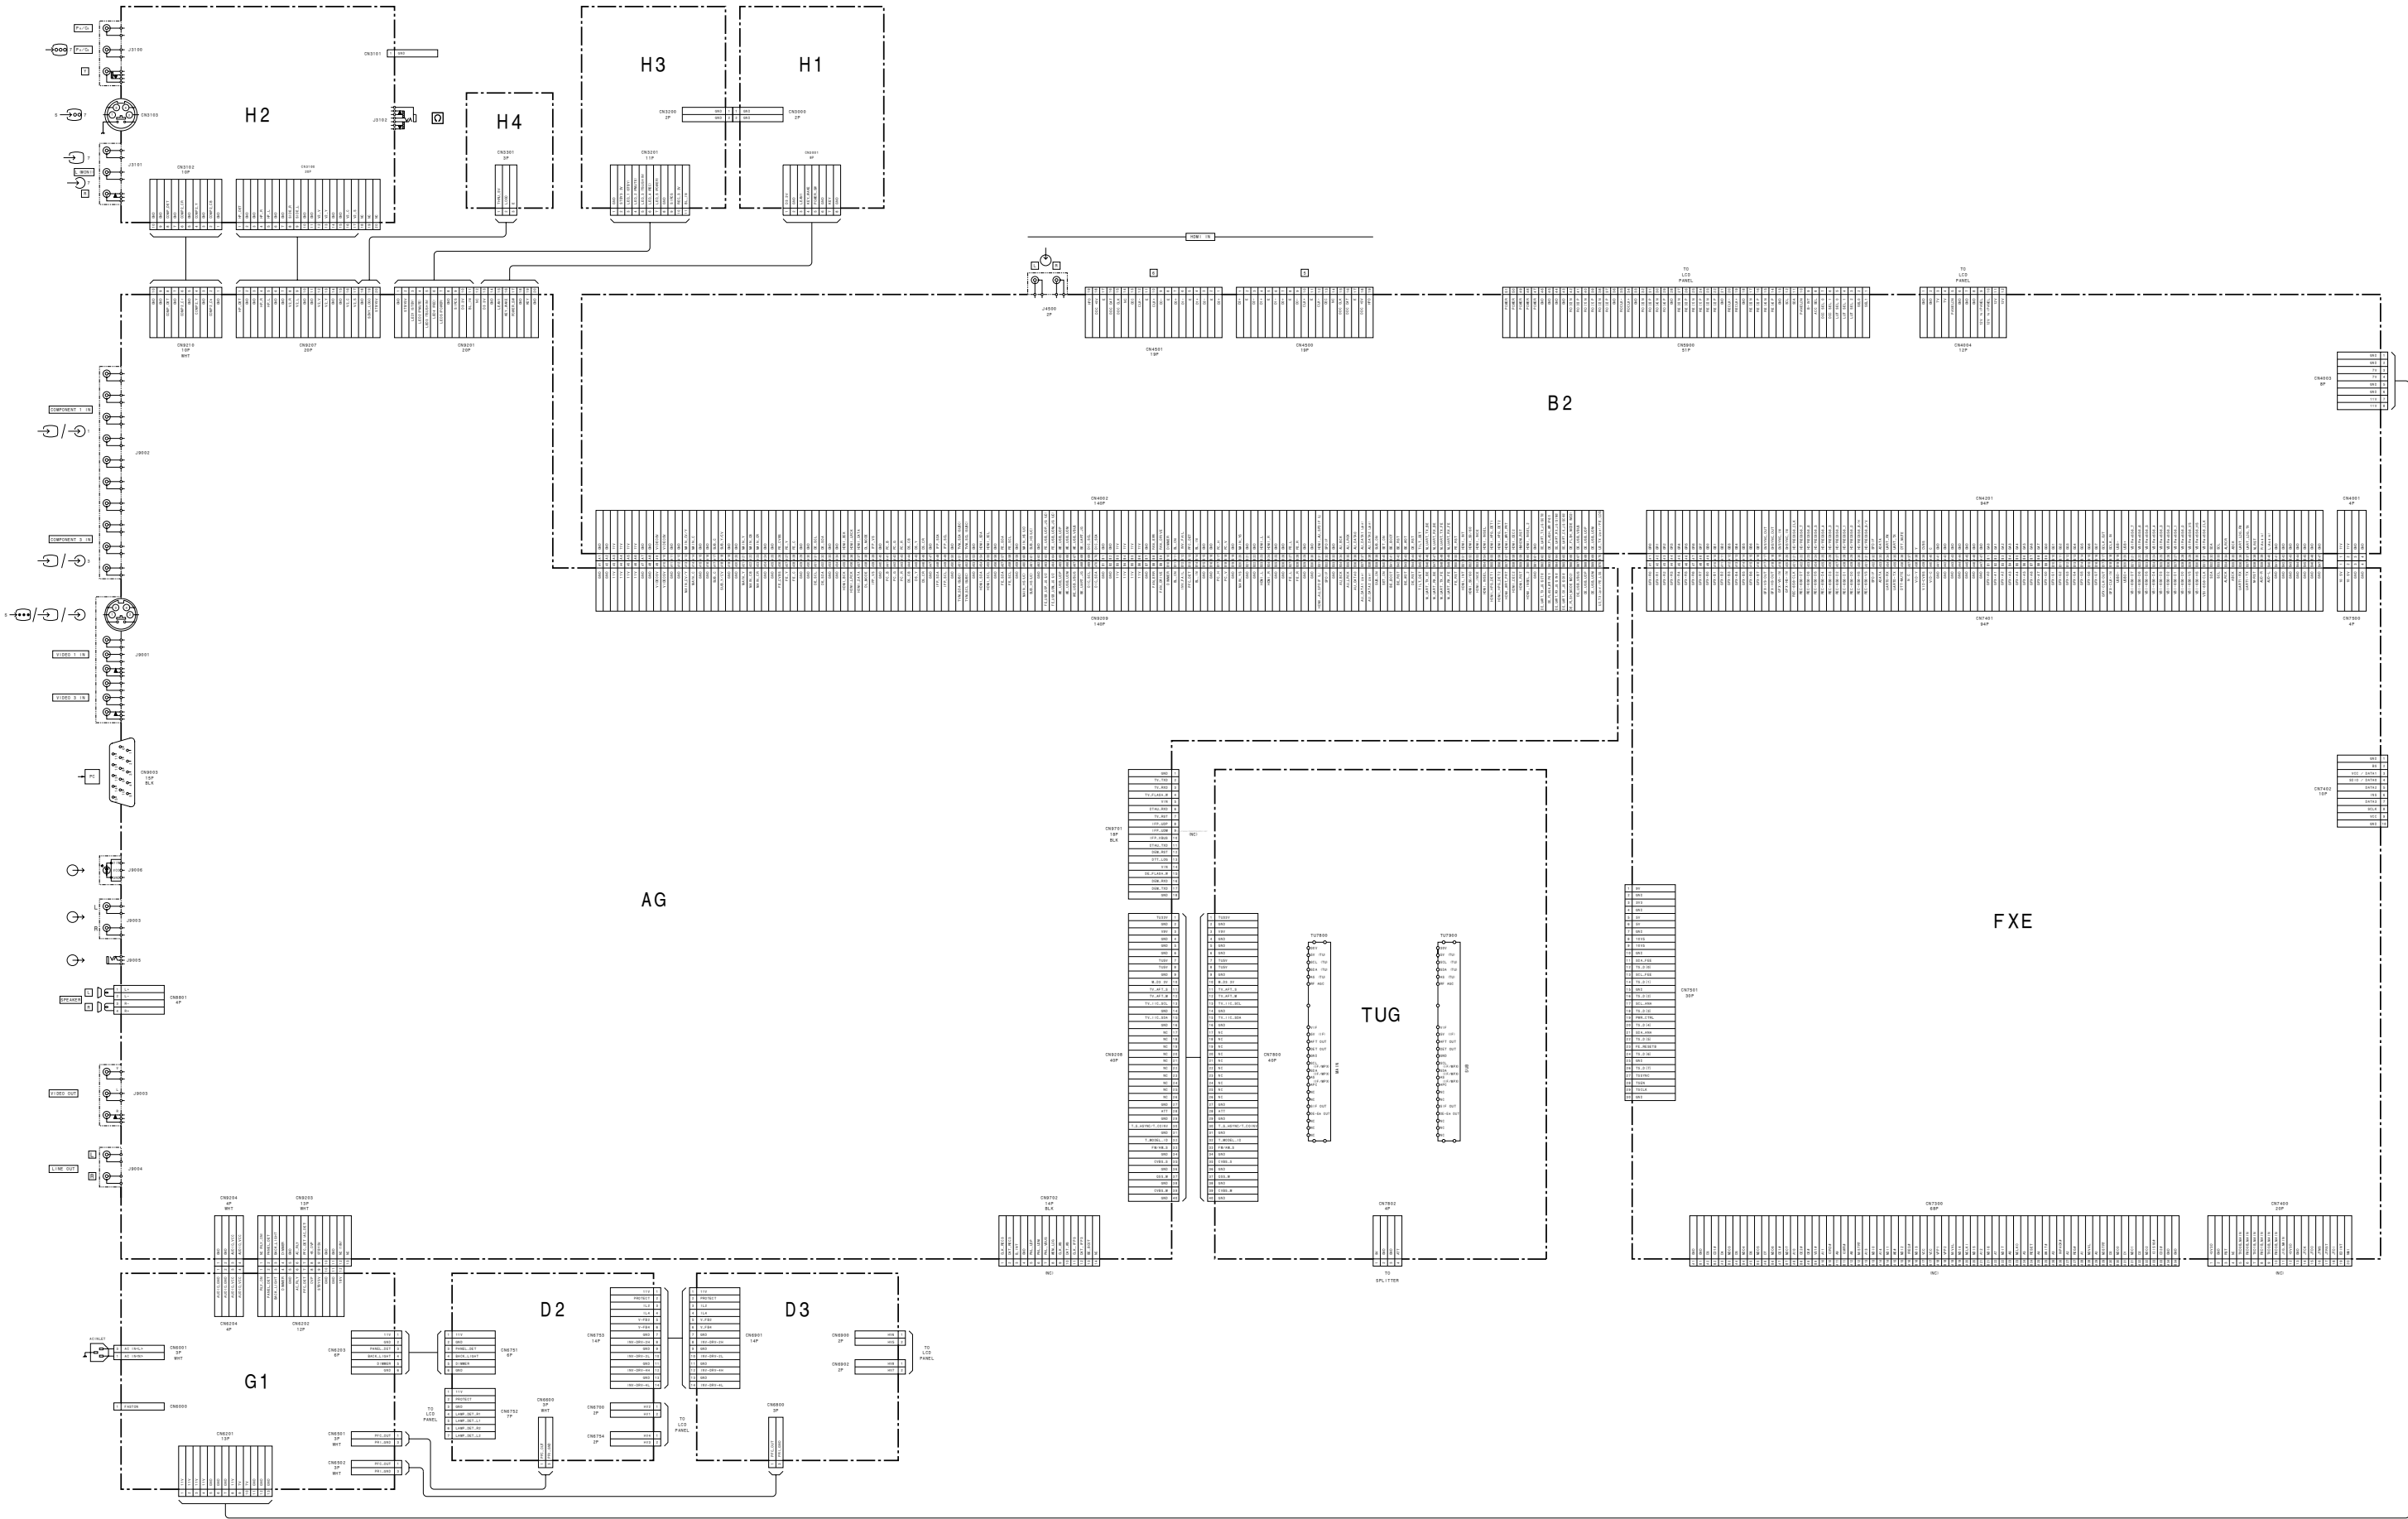


2-3. CIRCUIT BOARDS LOCATION

(1) KLV-40X200A/40X250A

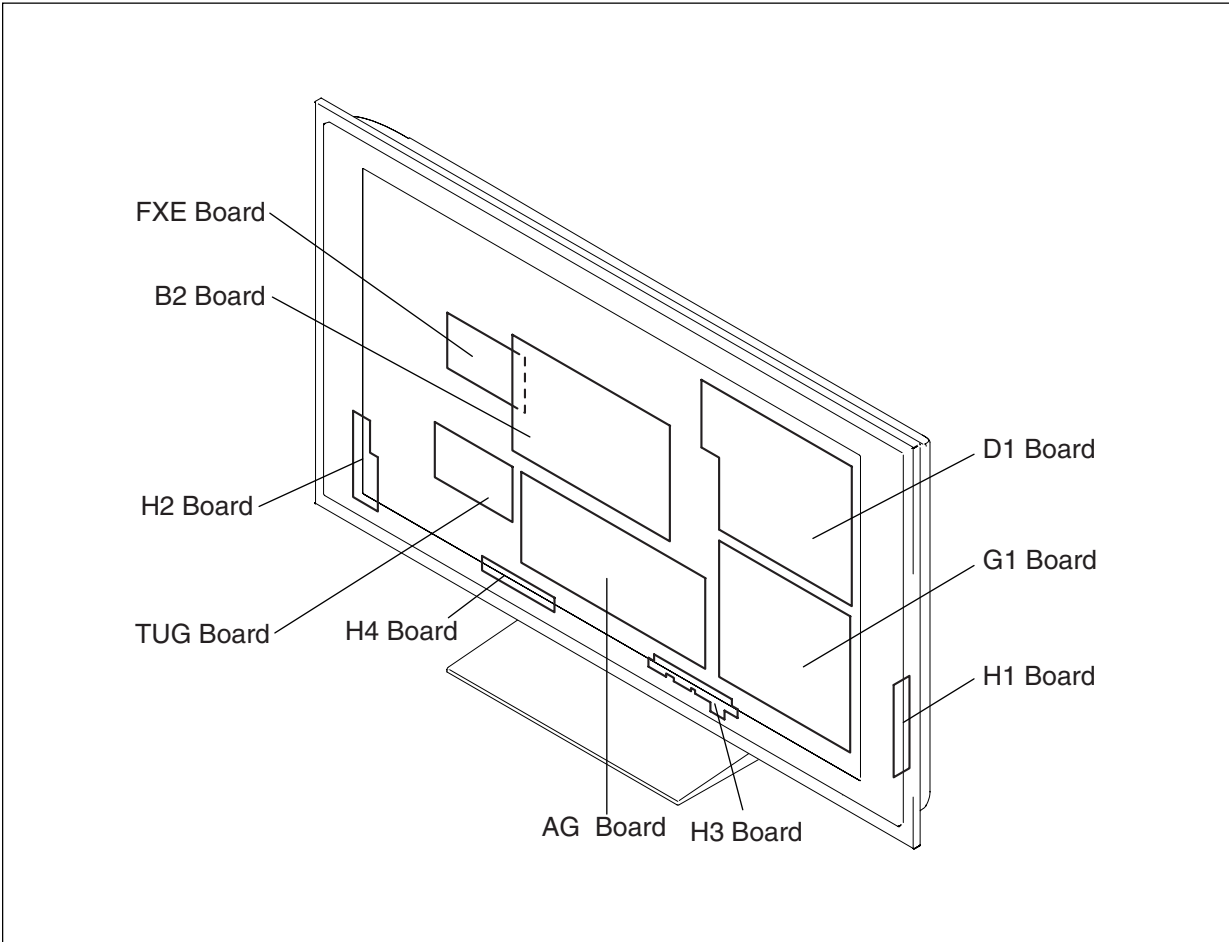

(2) KLV-46X200A/46X250A

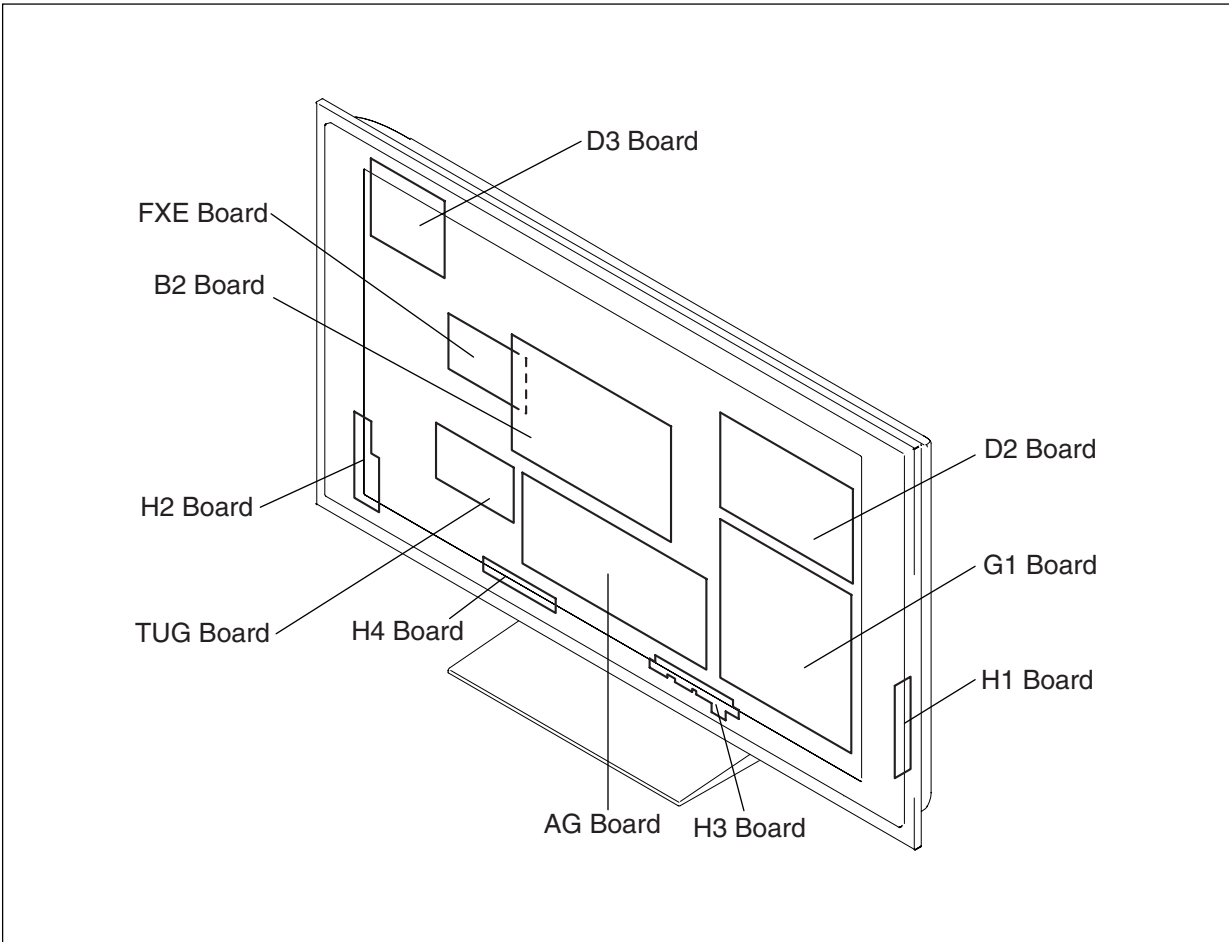

2-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

- Note:**
- Schematic diagrams and printed wiring boards of the specified boards for board replacement service are not included in this section. See Appendix of this manual if you need them.
 - All capacitors are in μF unless otherwise noted. (pF : μF) Capacitors without voltage indication are all 50 V.
 - Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch: 5 mm
Rating electrical power 1/4 W (CHIP : 1/10 W)

- All resistors are in ohms.
- : nonflammable resistor.
- : fusible resistor.
- : internal component.
- : panel designation, and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- : earth-ground.
- : earth-chassis.
- When replacing the part in below table, be sure to perform the related adjustment.
- All voltages are in V.
- Readings are taken with a 10 M Ω digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
- * : Names and values of parts depend on models.
- * : Can not be measured.
- Circled numbers are waveform references.
- : B + bus.
- : B - bus.
- : Signal path.

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

Note: The components identified by mark contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced.


Terminal name of semiconductors in silk screen printed circuit (※)

	Device	Printed symbol	Terminal name	Circuit
①	Transistor		Collector Base Emitter	
②	Transistor		Collector Base Emitter	
③	Diode		Cathode Anode	
④	Diode		Cathode Anode (NC)	
⑤	Diode		Cathode Anode (NC)	
⑥	Diode		Common Anode Cathode	
⑦	Diode		Common Anode Cathode	
⑧	Diode		Common Anode Anode	
⑨	Diode		Common Anode Anode	
⑩	Diode		Common Cathode Cathode	
⑪	Diode		Common Cathode Cathode	
⑫	Diode		Anode Anode Cathode Anode	
⑬	Transistor (FET)		Drain Source Gate	
⑭	Transistor (FET)		Drain Source Gate	
⑮	Transistor (FET)		Source Drain Gate	
⑯	Transistor		Emitter Collector Base	
⑰	Transistor		C2 B1 E1 E2 B2 C1	
⑱	Transistor		C1 B2 E2 E1 B1 C2	
⑲	Transistor		C1 B2 E2 E1 B1 C2	
⑳	Transistor		C1 B2 E2 E1 B1 C2	
㉑	Transistor		E2 B1 E1 C2 C1(B2)	
㉒	Transistor		(B2) B1 E1 E2 C1 C2	
㉓	Transistor		(B2) E2 E1 B1 C2 C1	
—	Discrete semiconductot			

(Chip semiconductors that are not actually used are included.)


Ver.1.6

(1) Schematic Diagrams of AG Board (1/9-9/9)




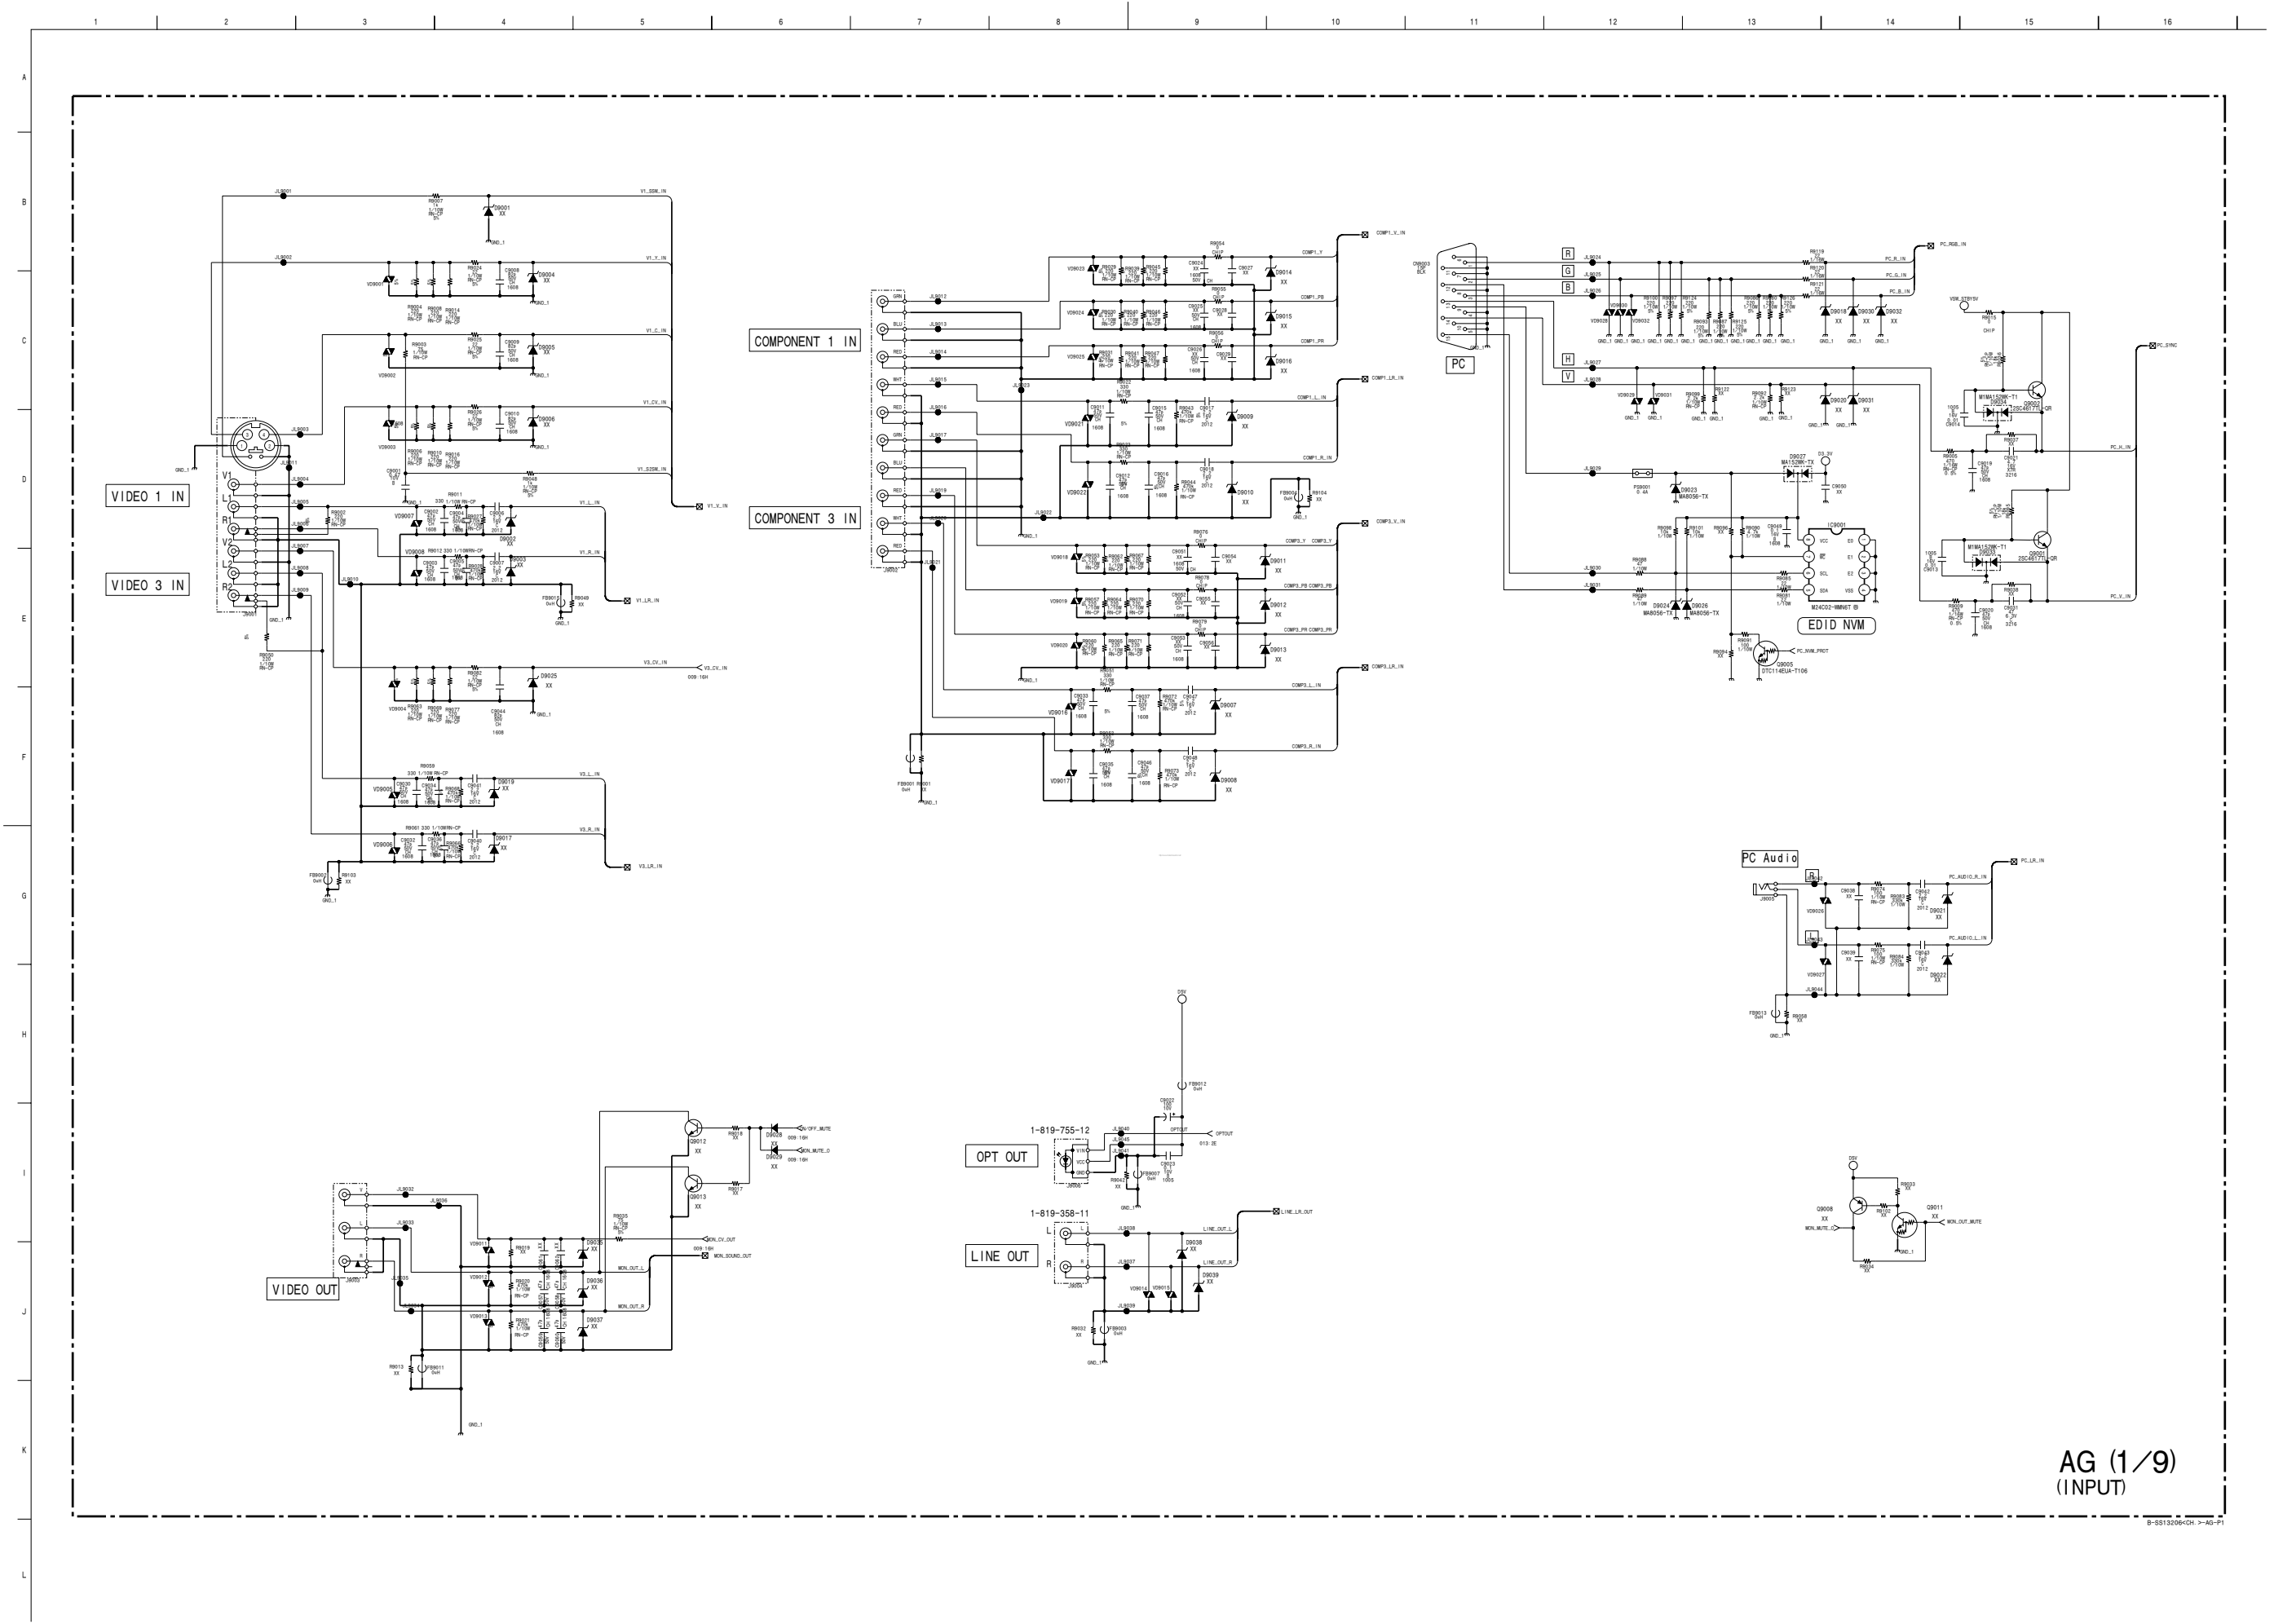


AG (1/9)
(INPUT)


B-5513206CH-3-AD-P1



KL V-40/46X200A, 40/46X250A (GA) 2-7

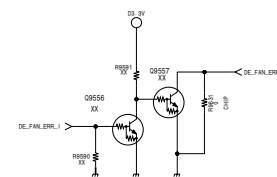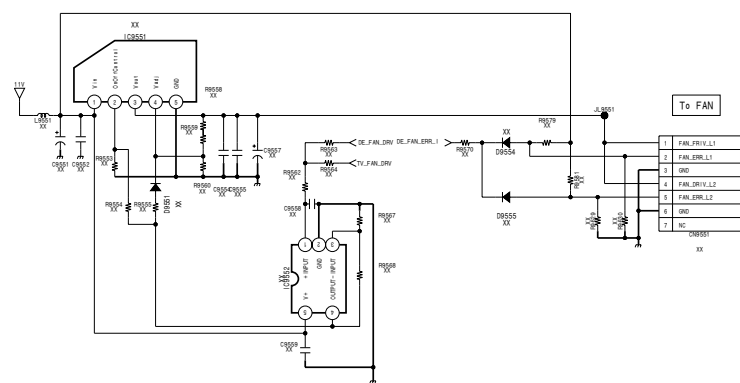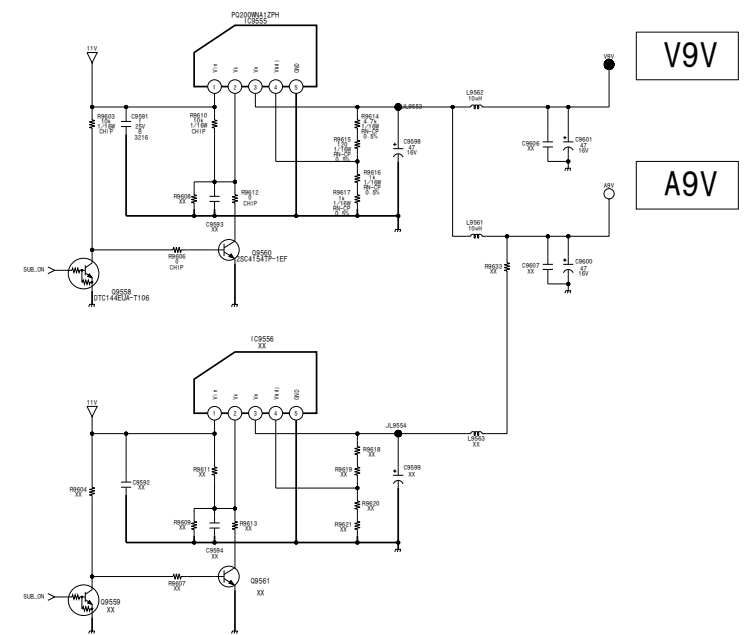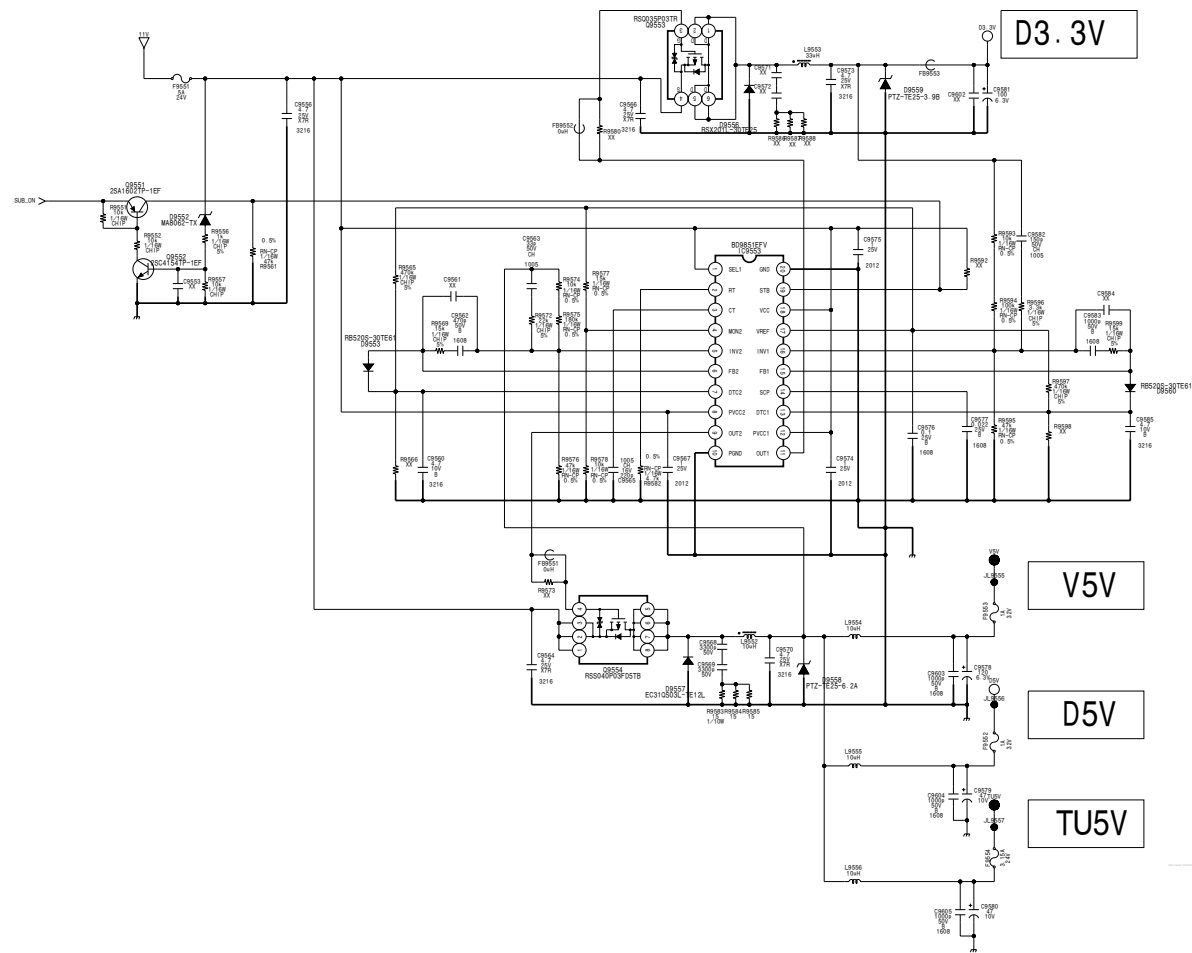


A33V DC-DC CONV

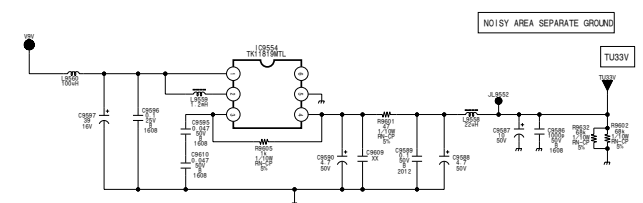



AG (4/9)
(DC REGULATOR)

B-8513208-CH-7-A0-P4

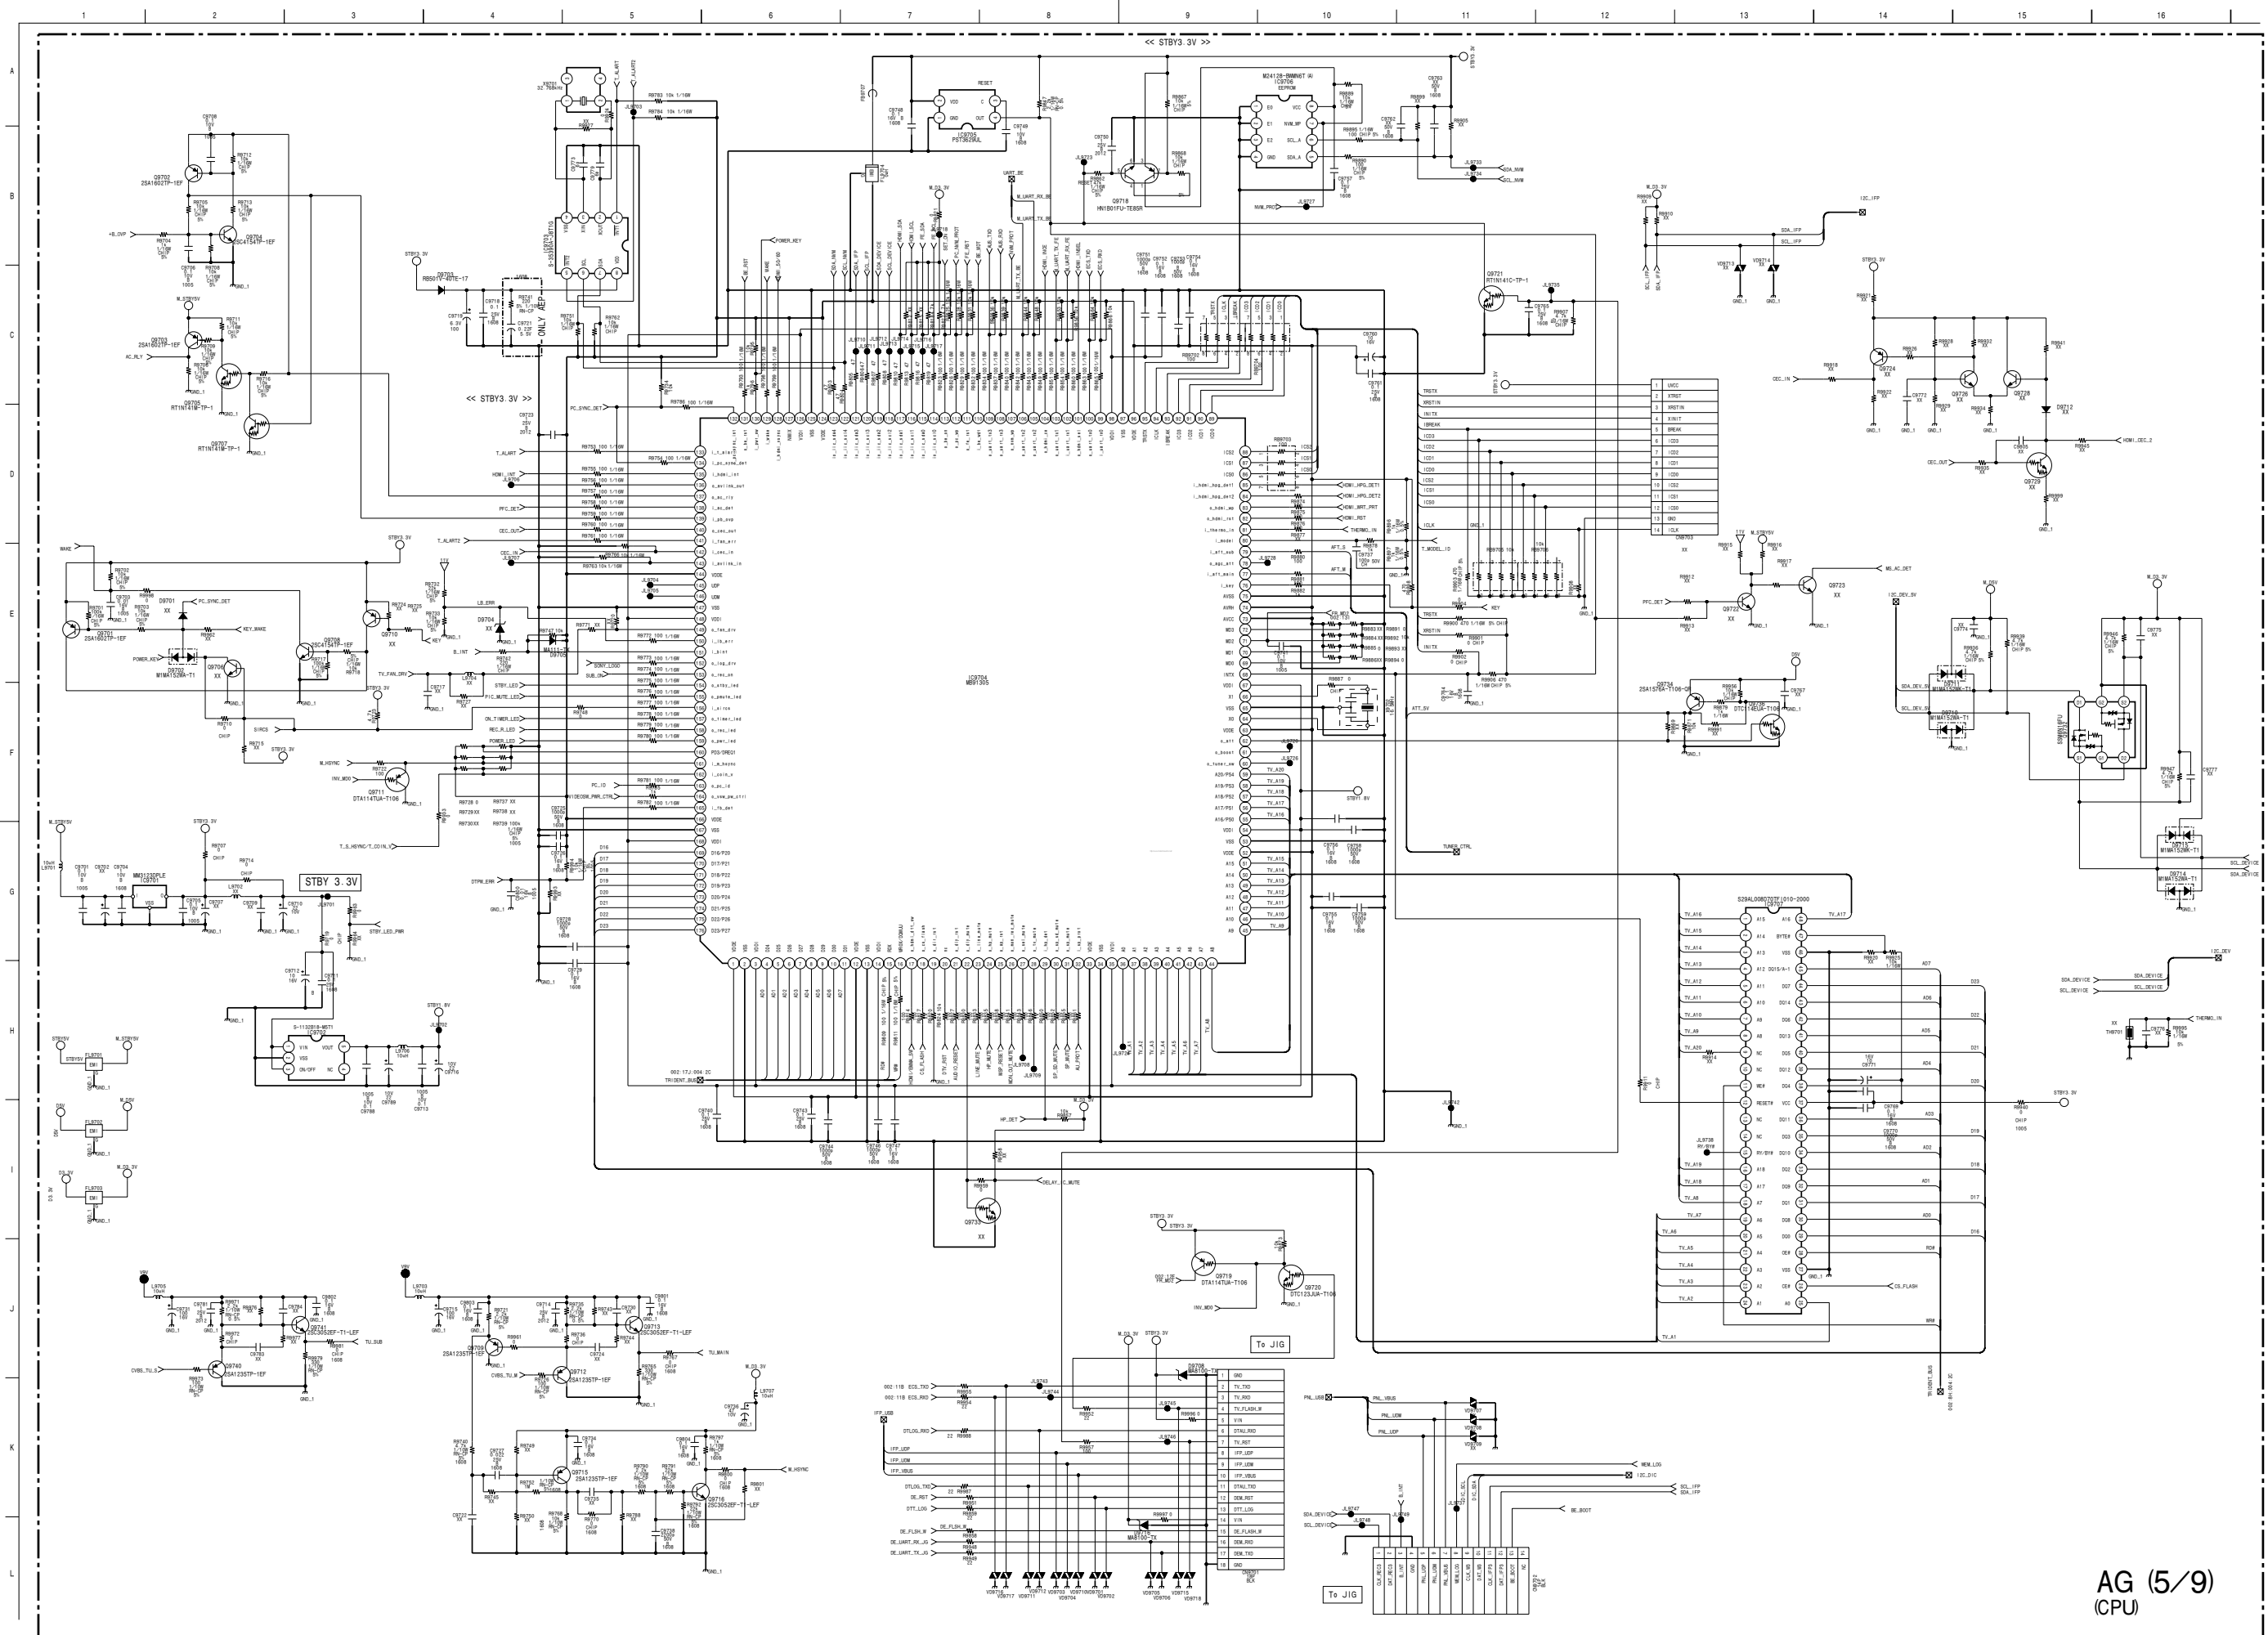


AG (5/9)
CPU

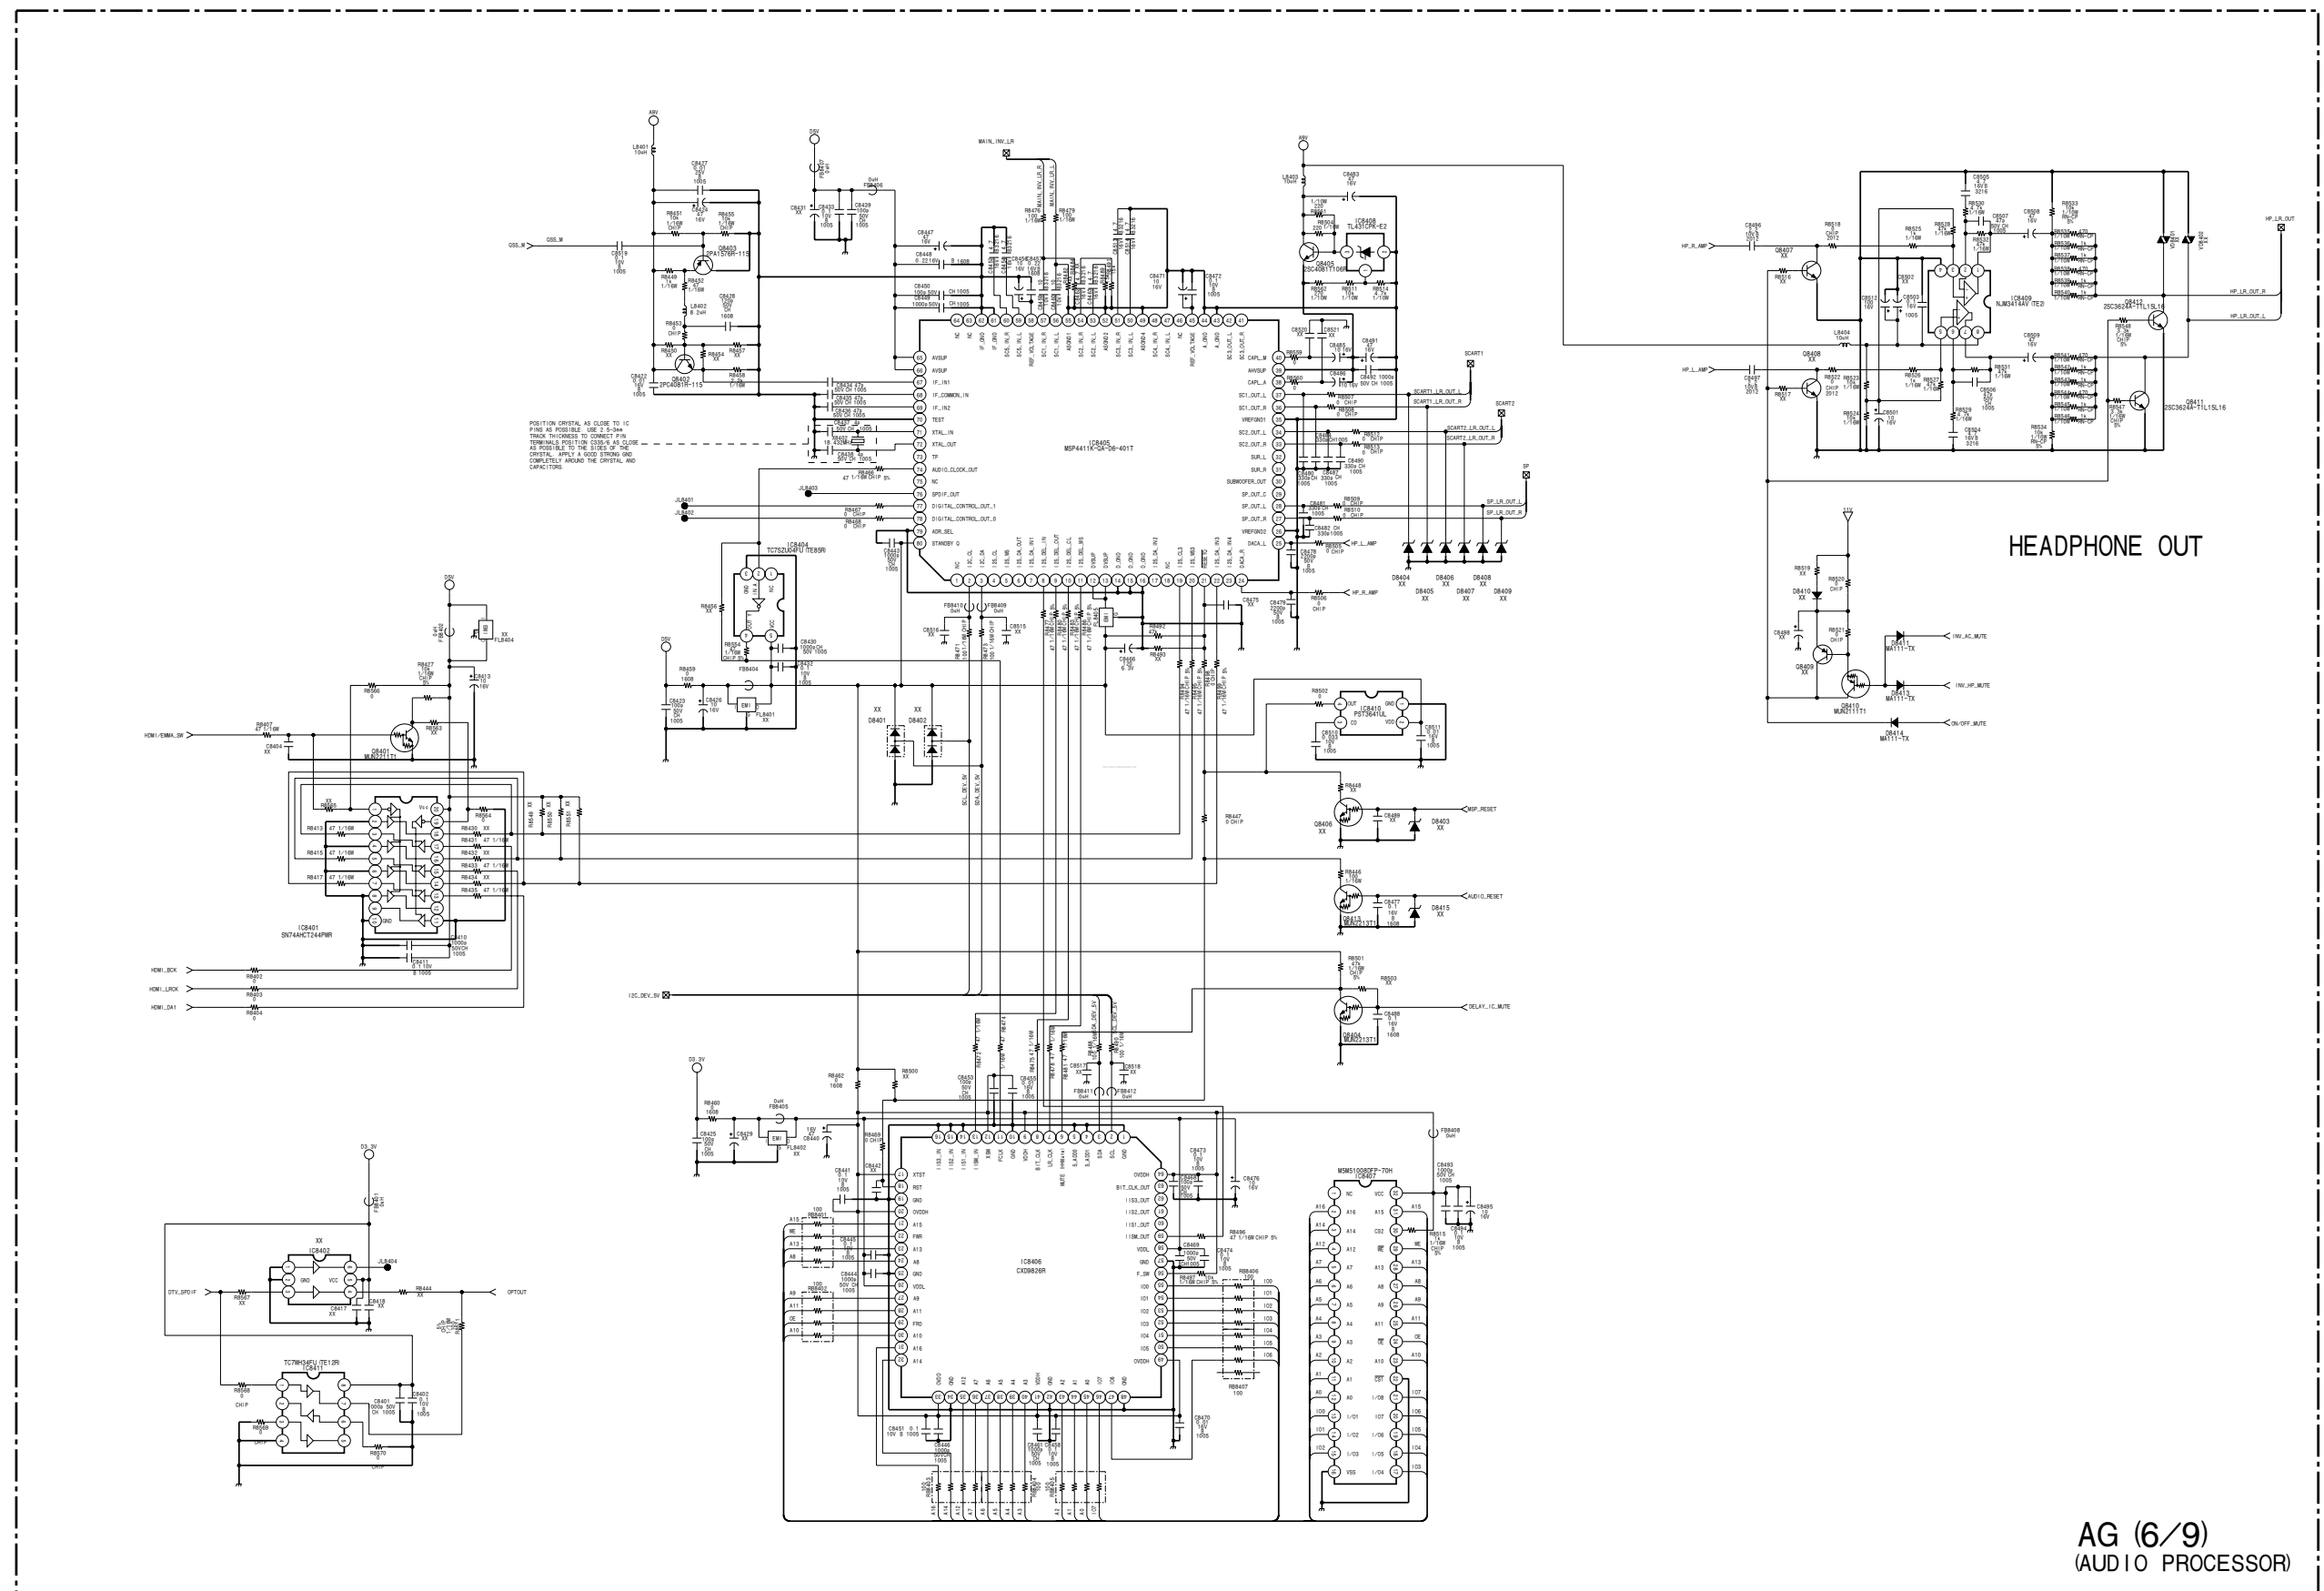

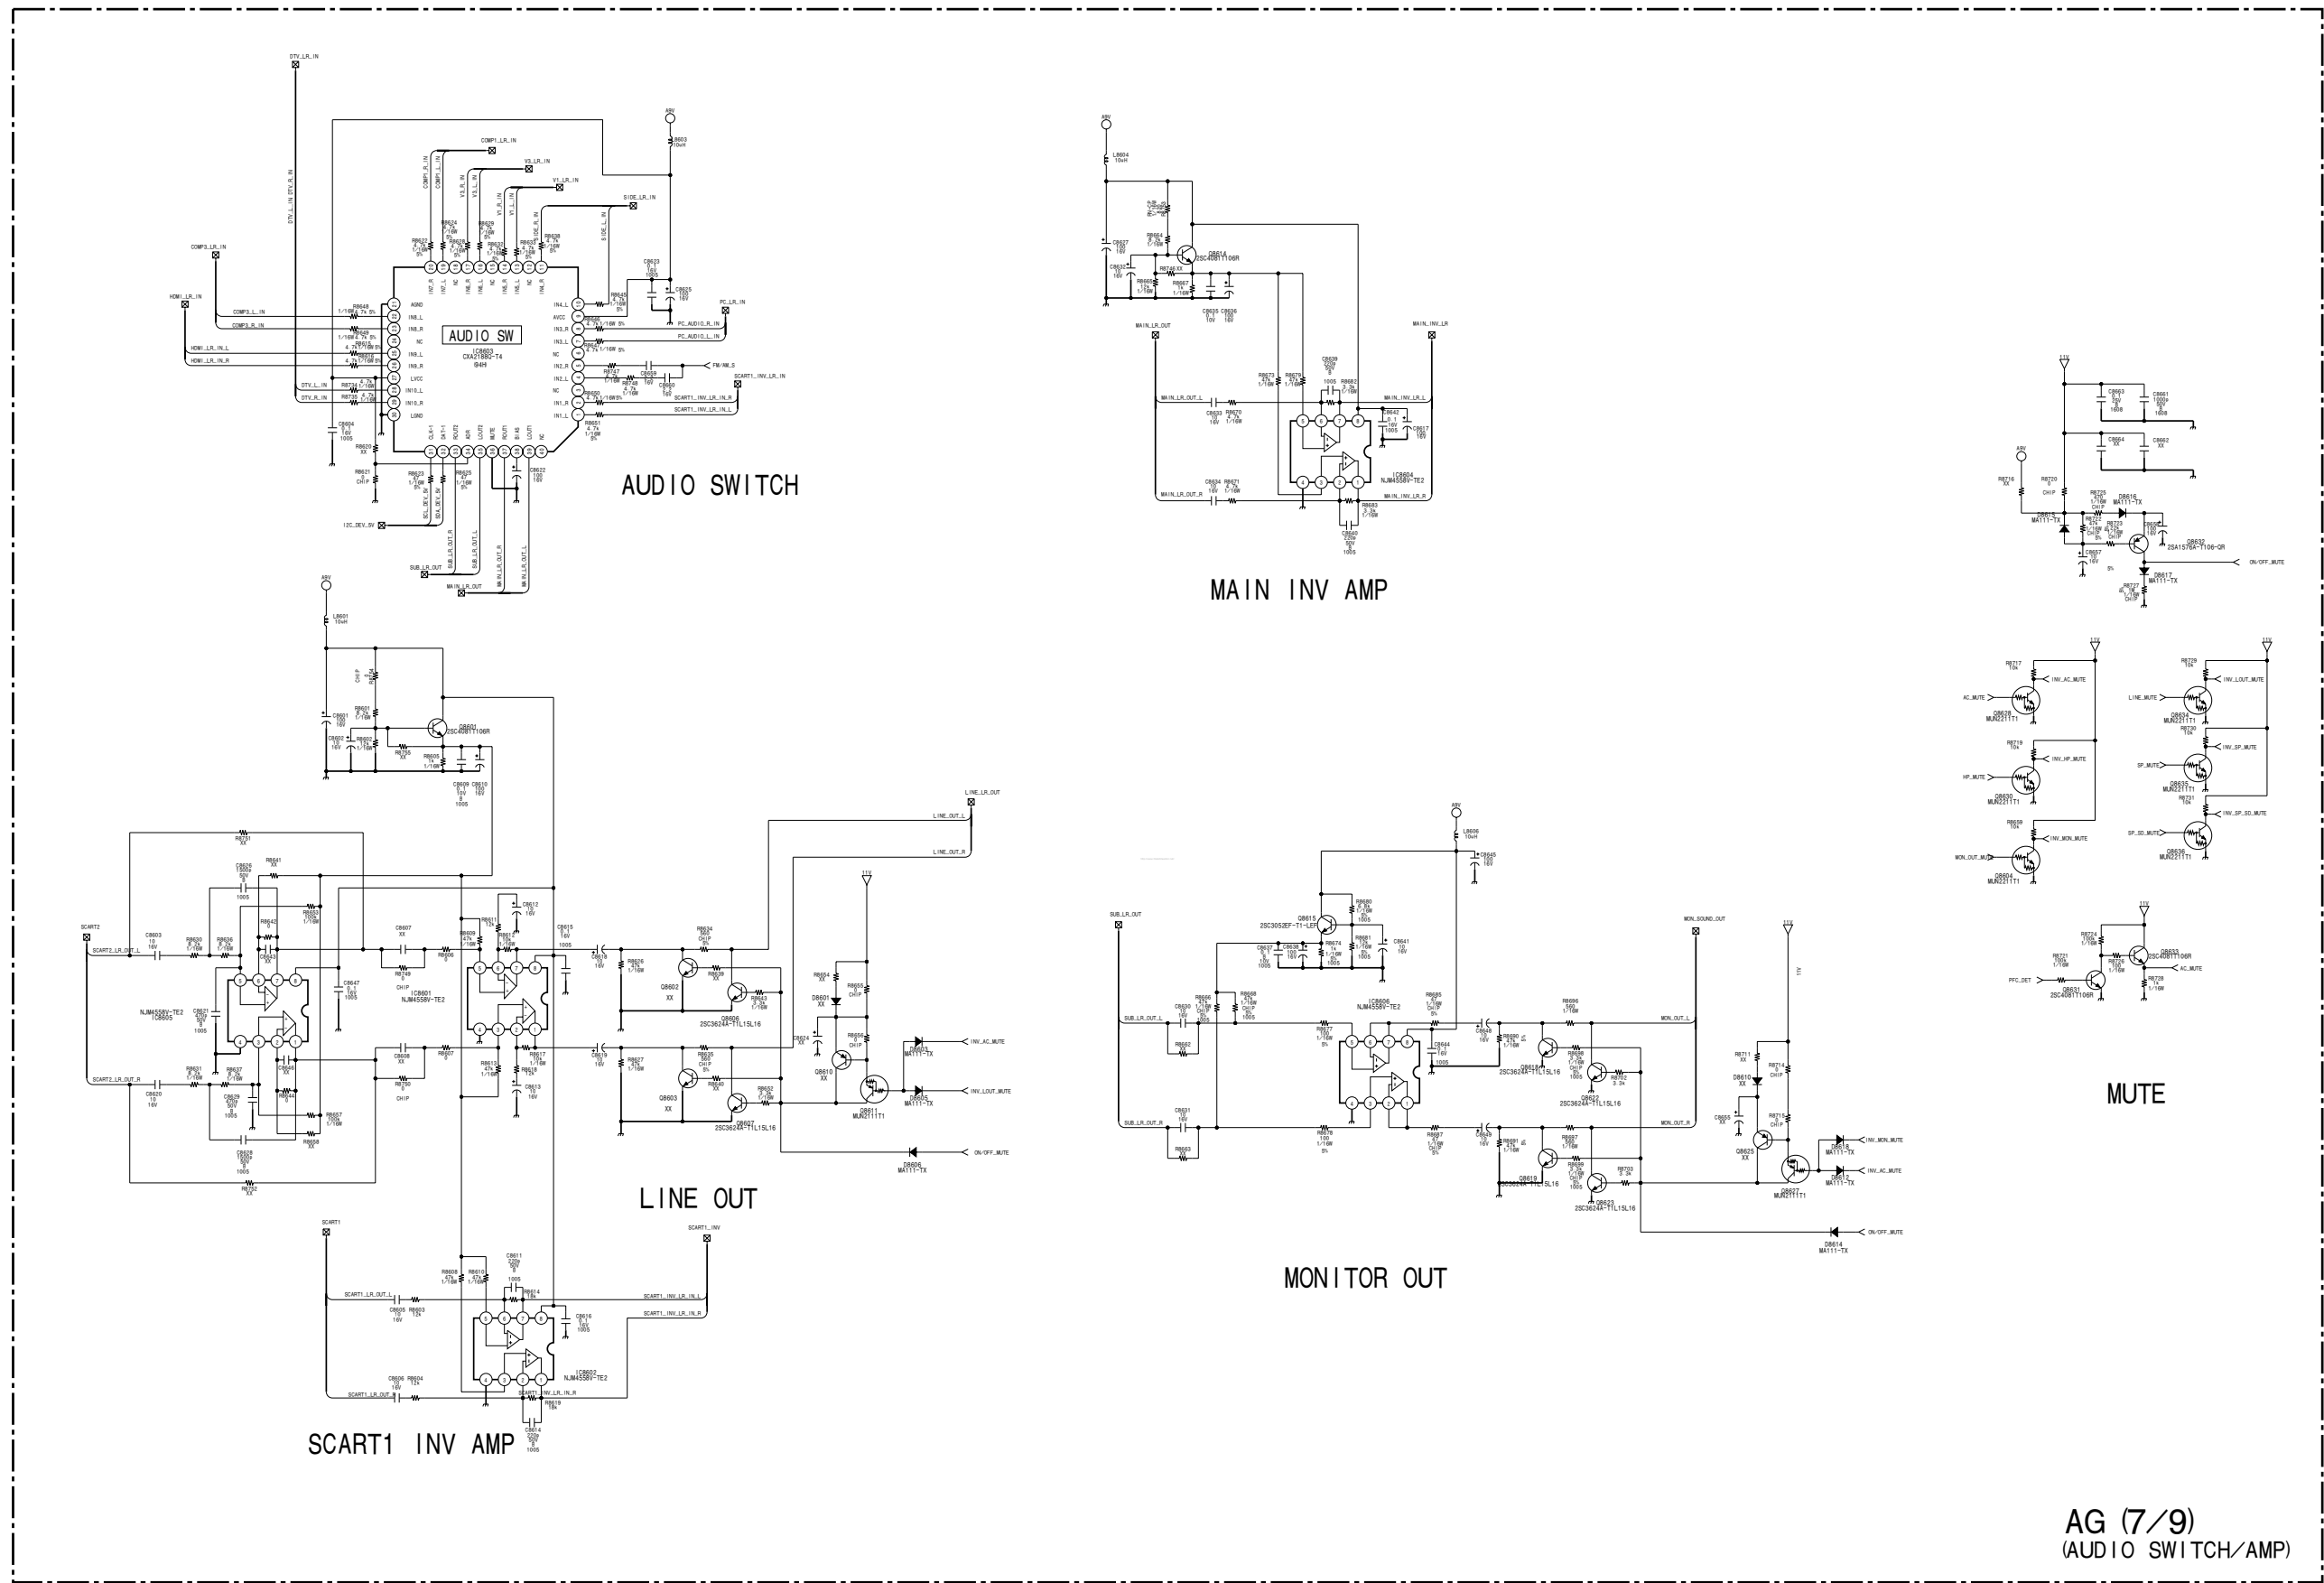


AG (7/9)
(AUDIO SWITCH/AMP)

B-5813206-CH 7-AG-PT

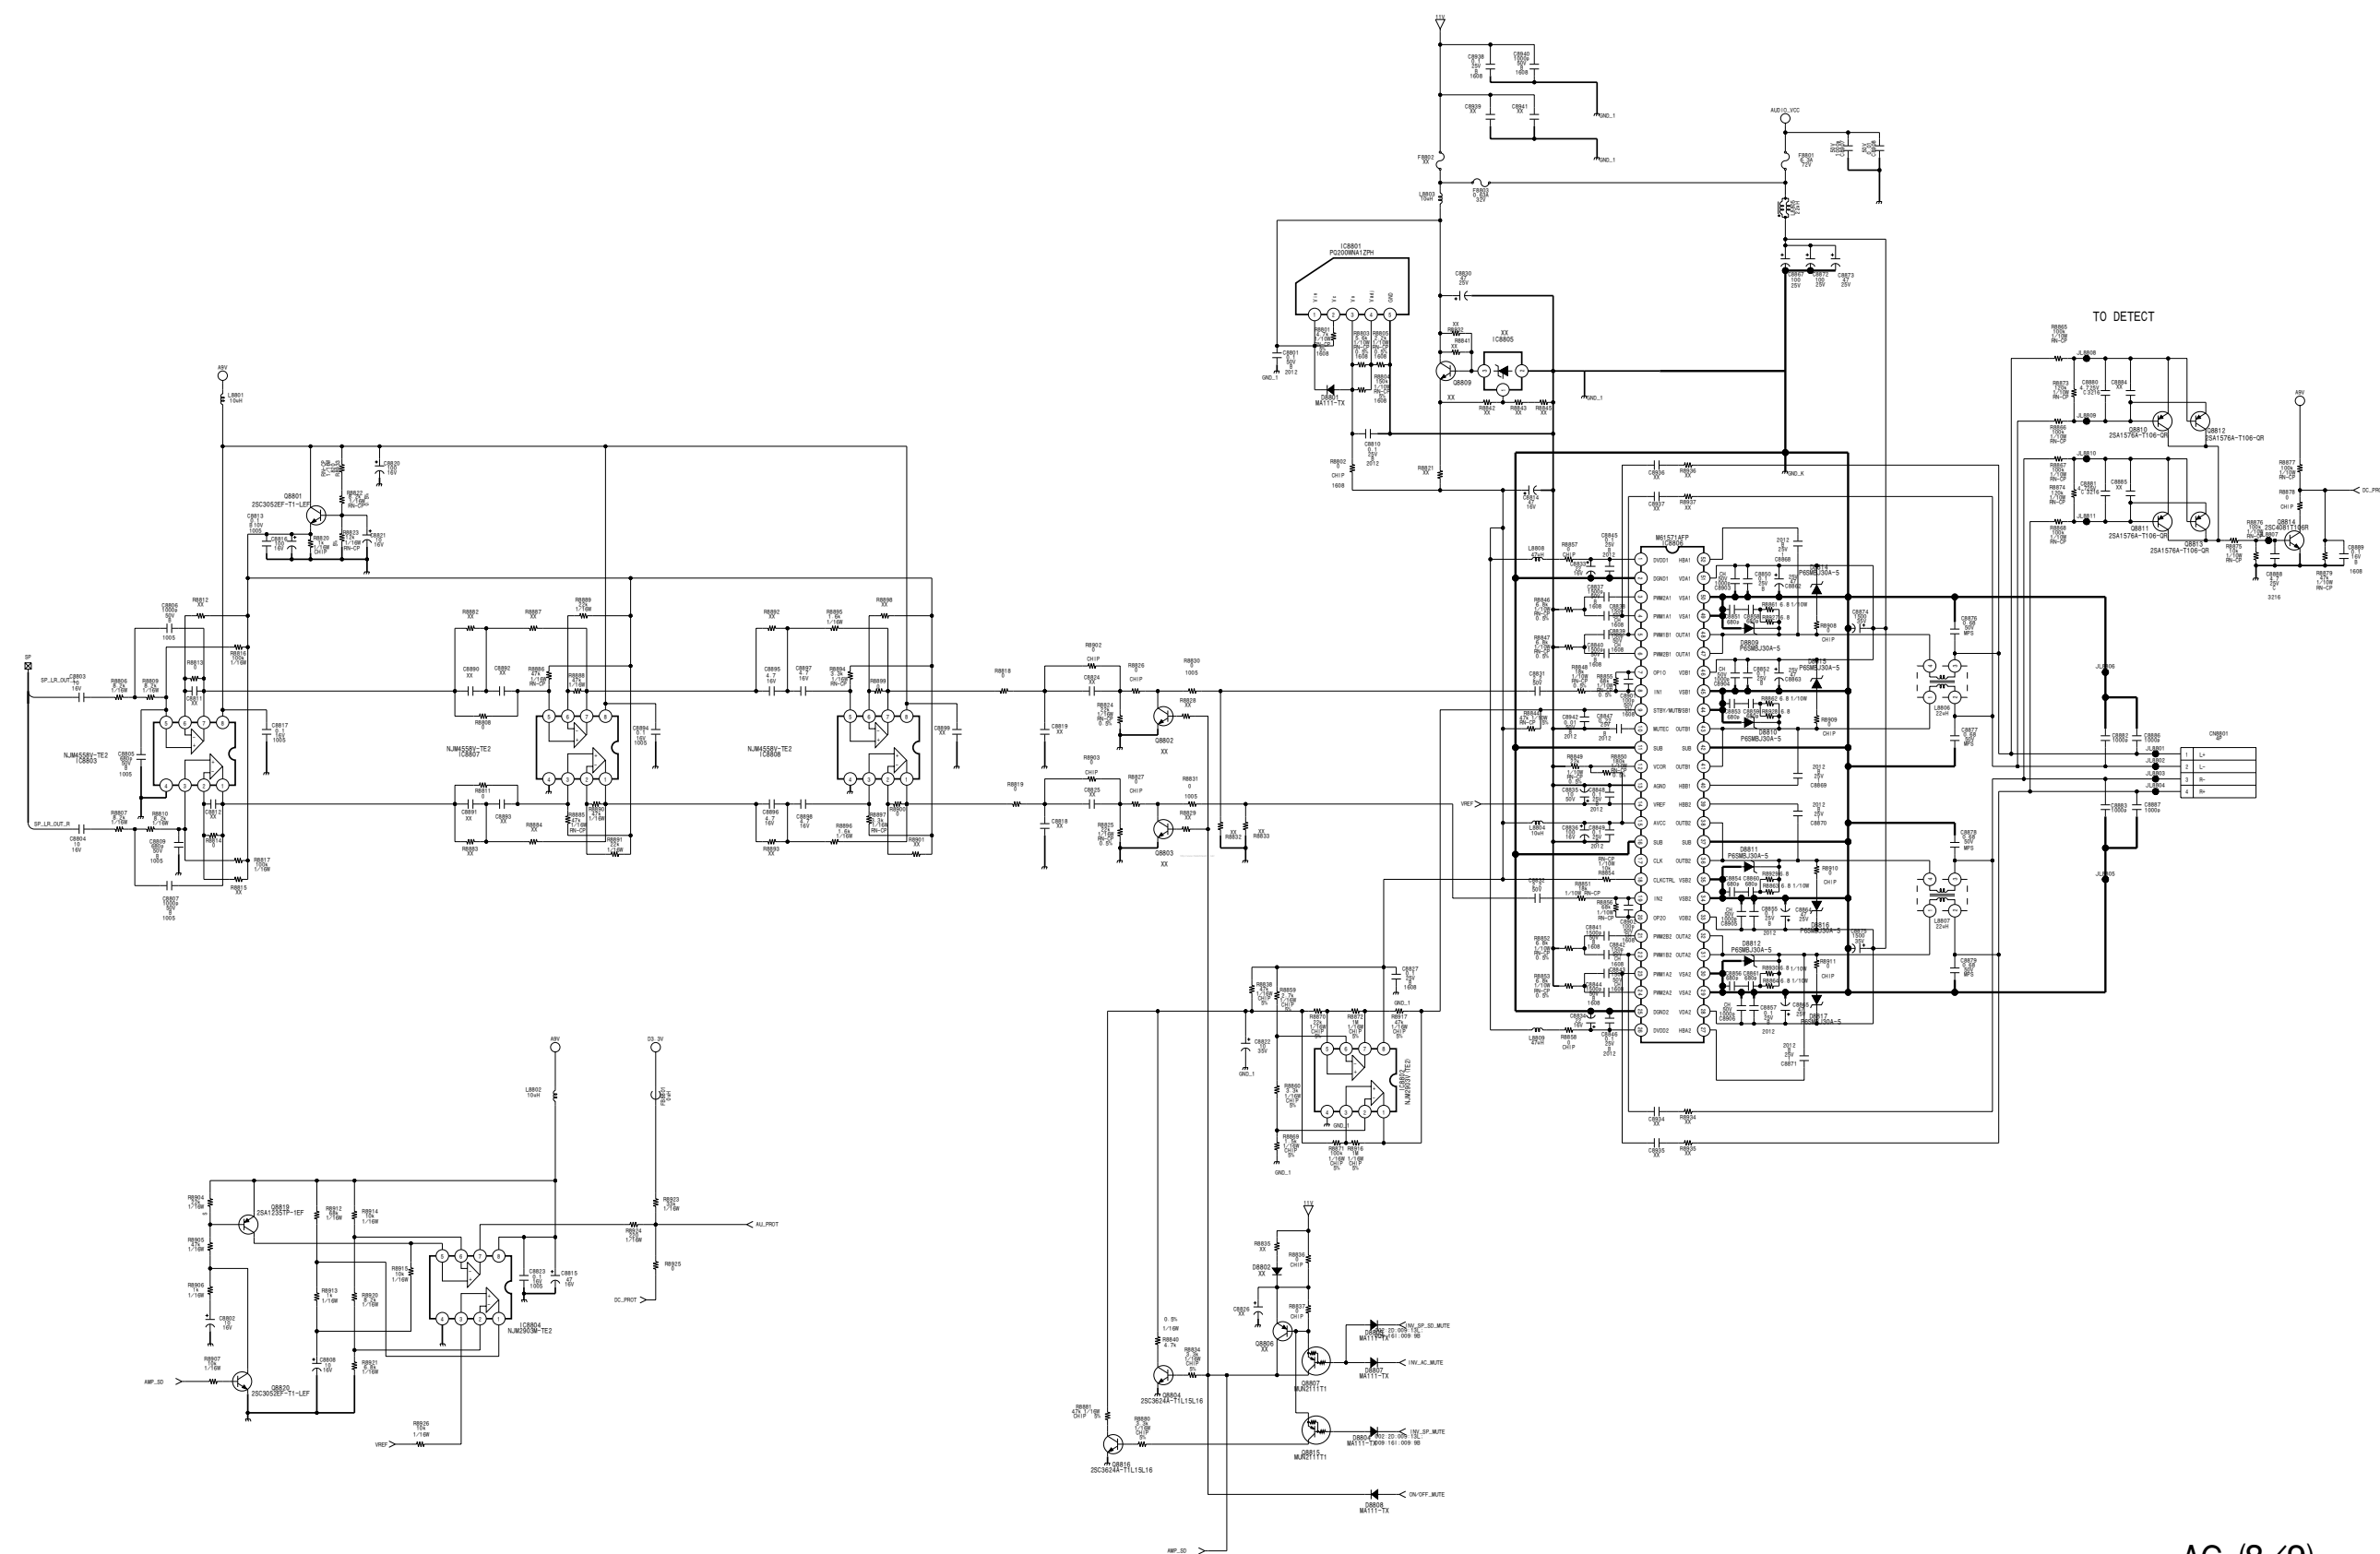


AG (8/9)
(AUDIO POWER AMP)

B-S31 3206-CH. 3-A0-P8



— AG BOARD —


AG BOARD (A)

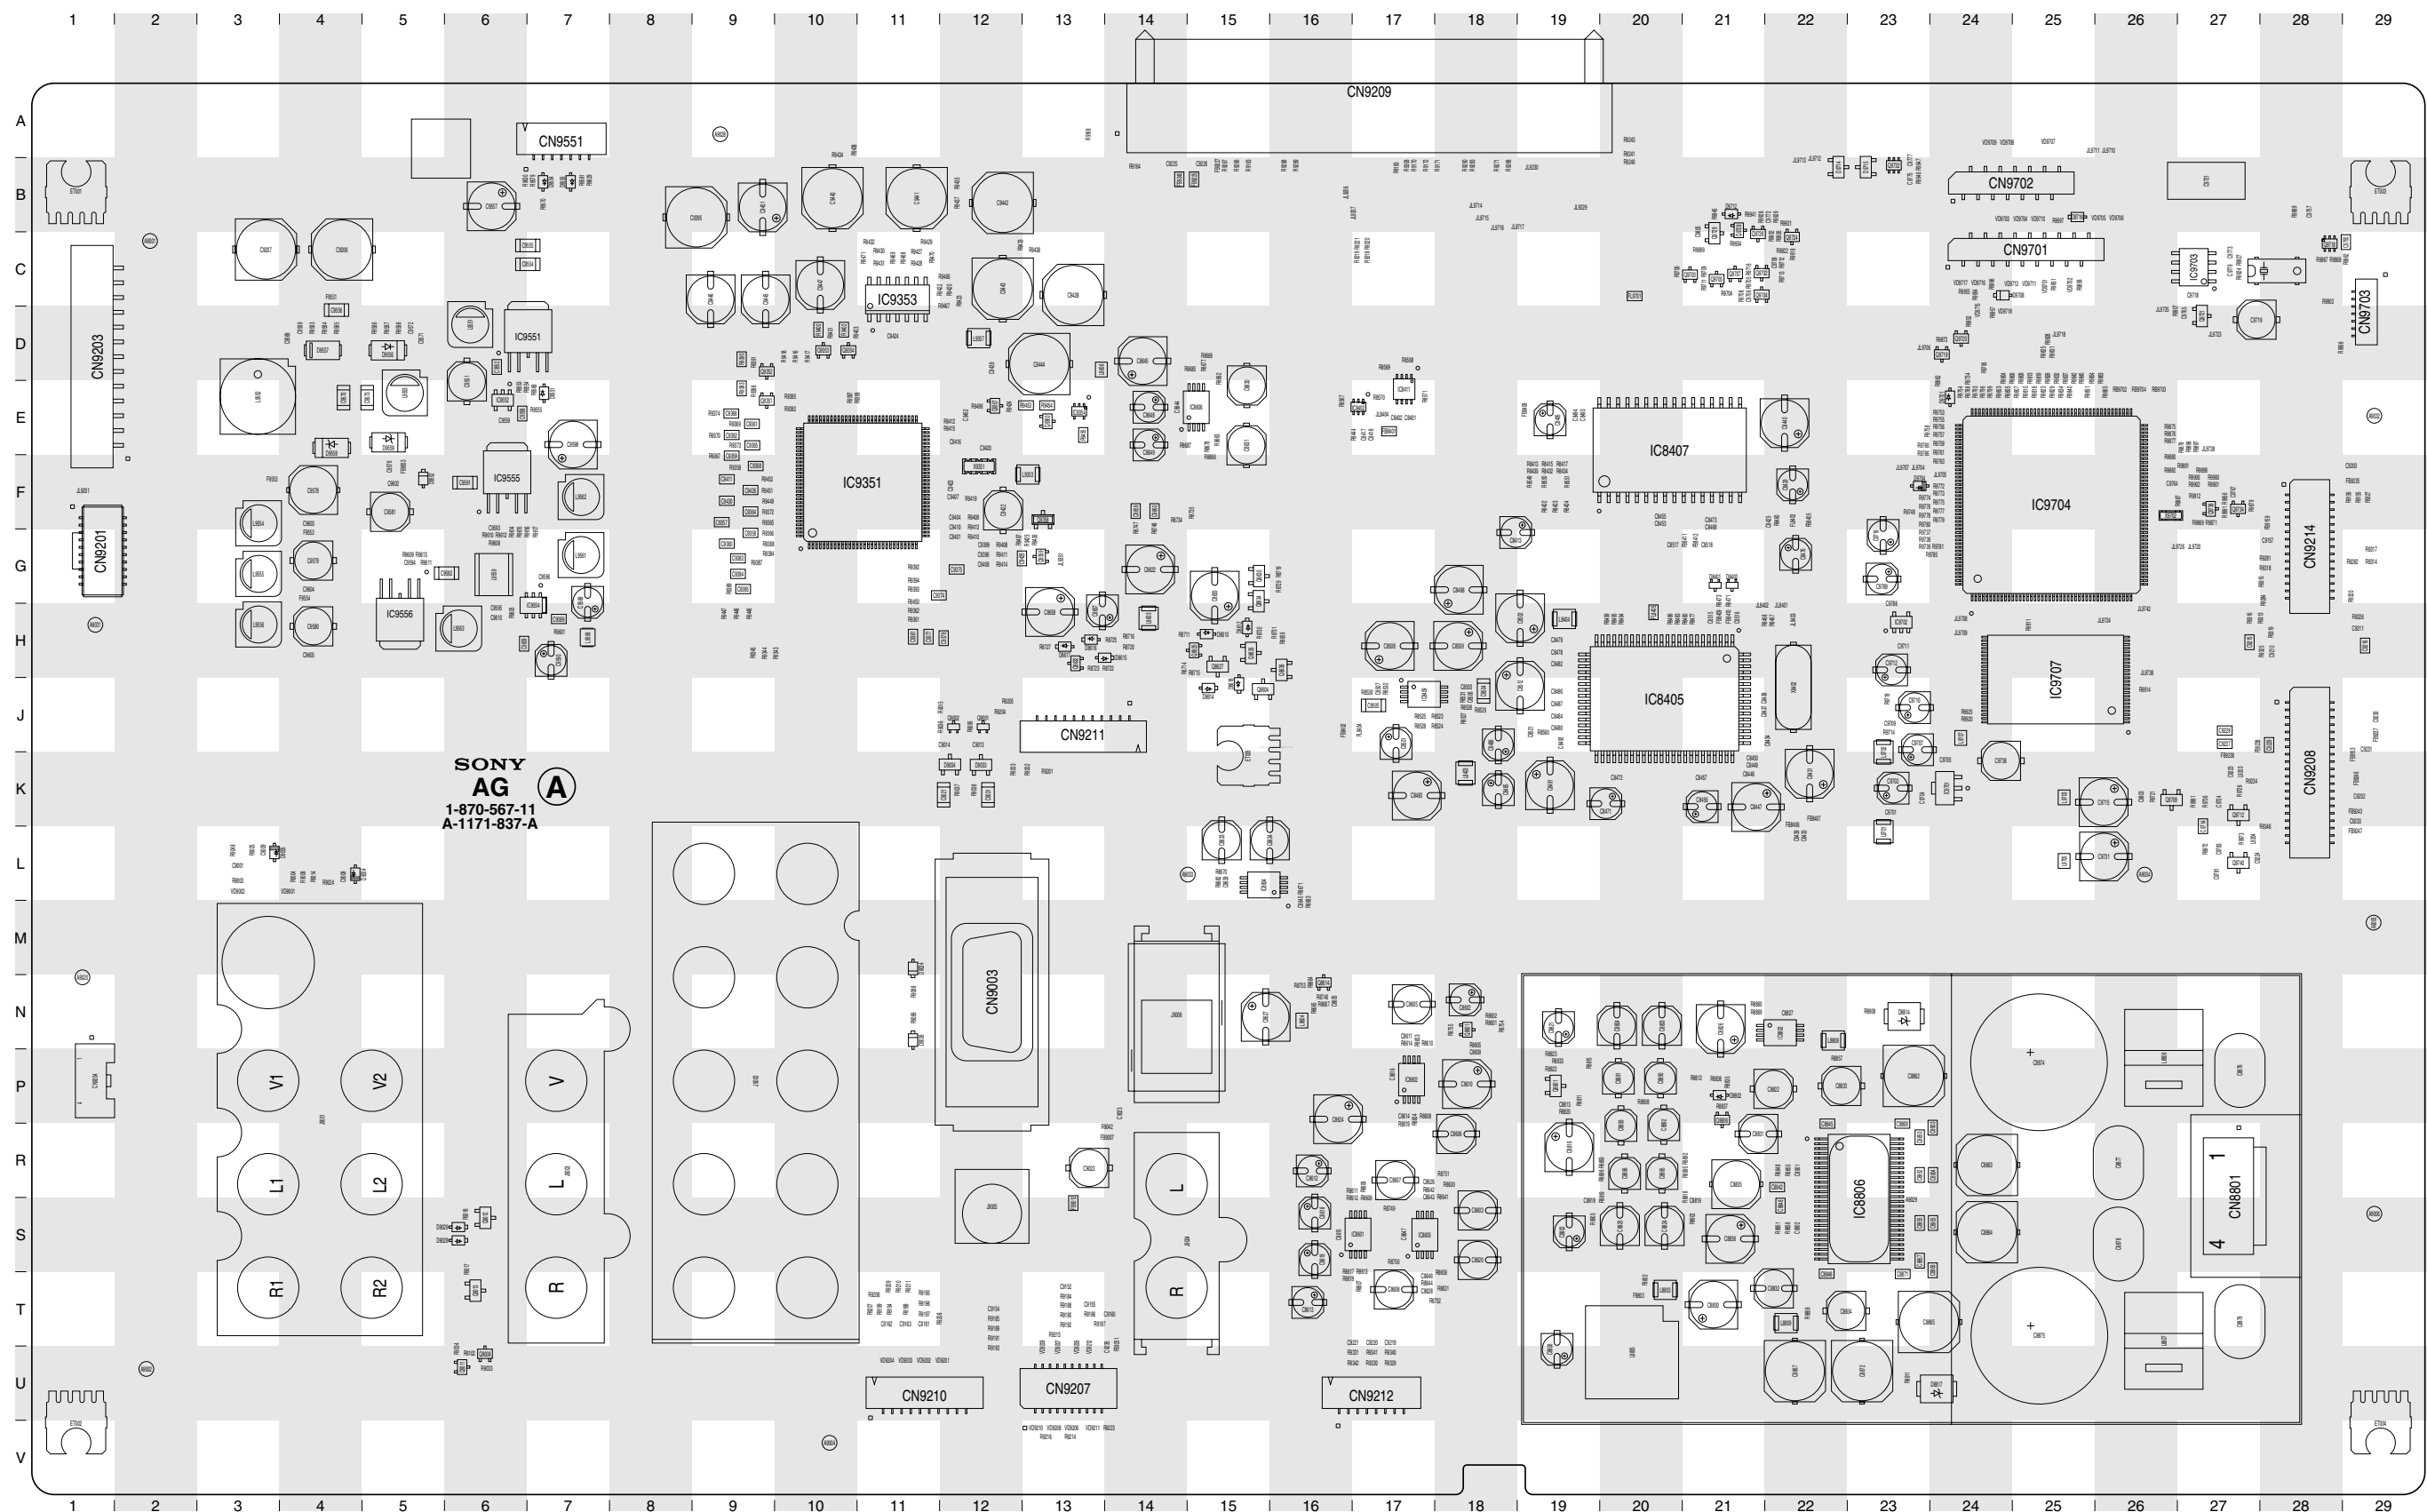

<COMPONENT SIDE>

— AG BOARD —

AG BOARD (B)

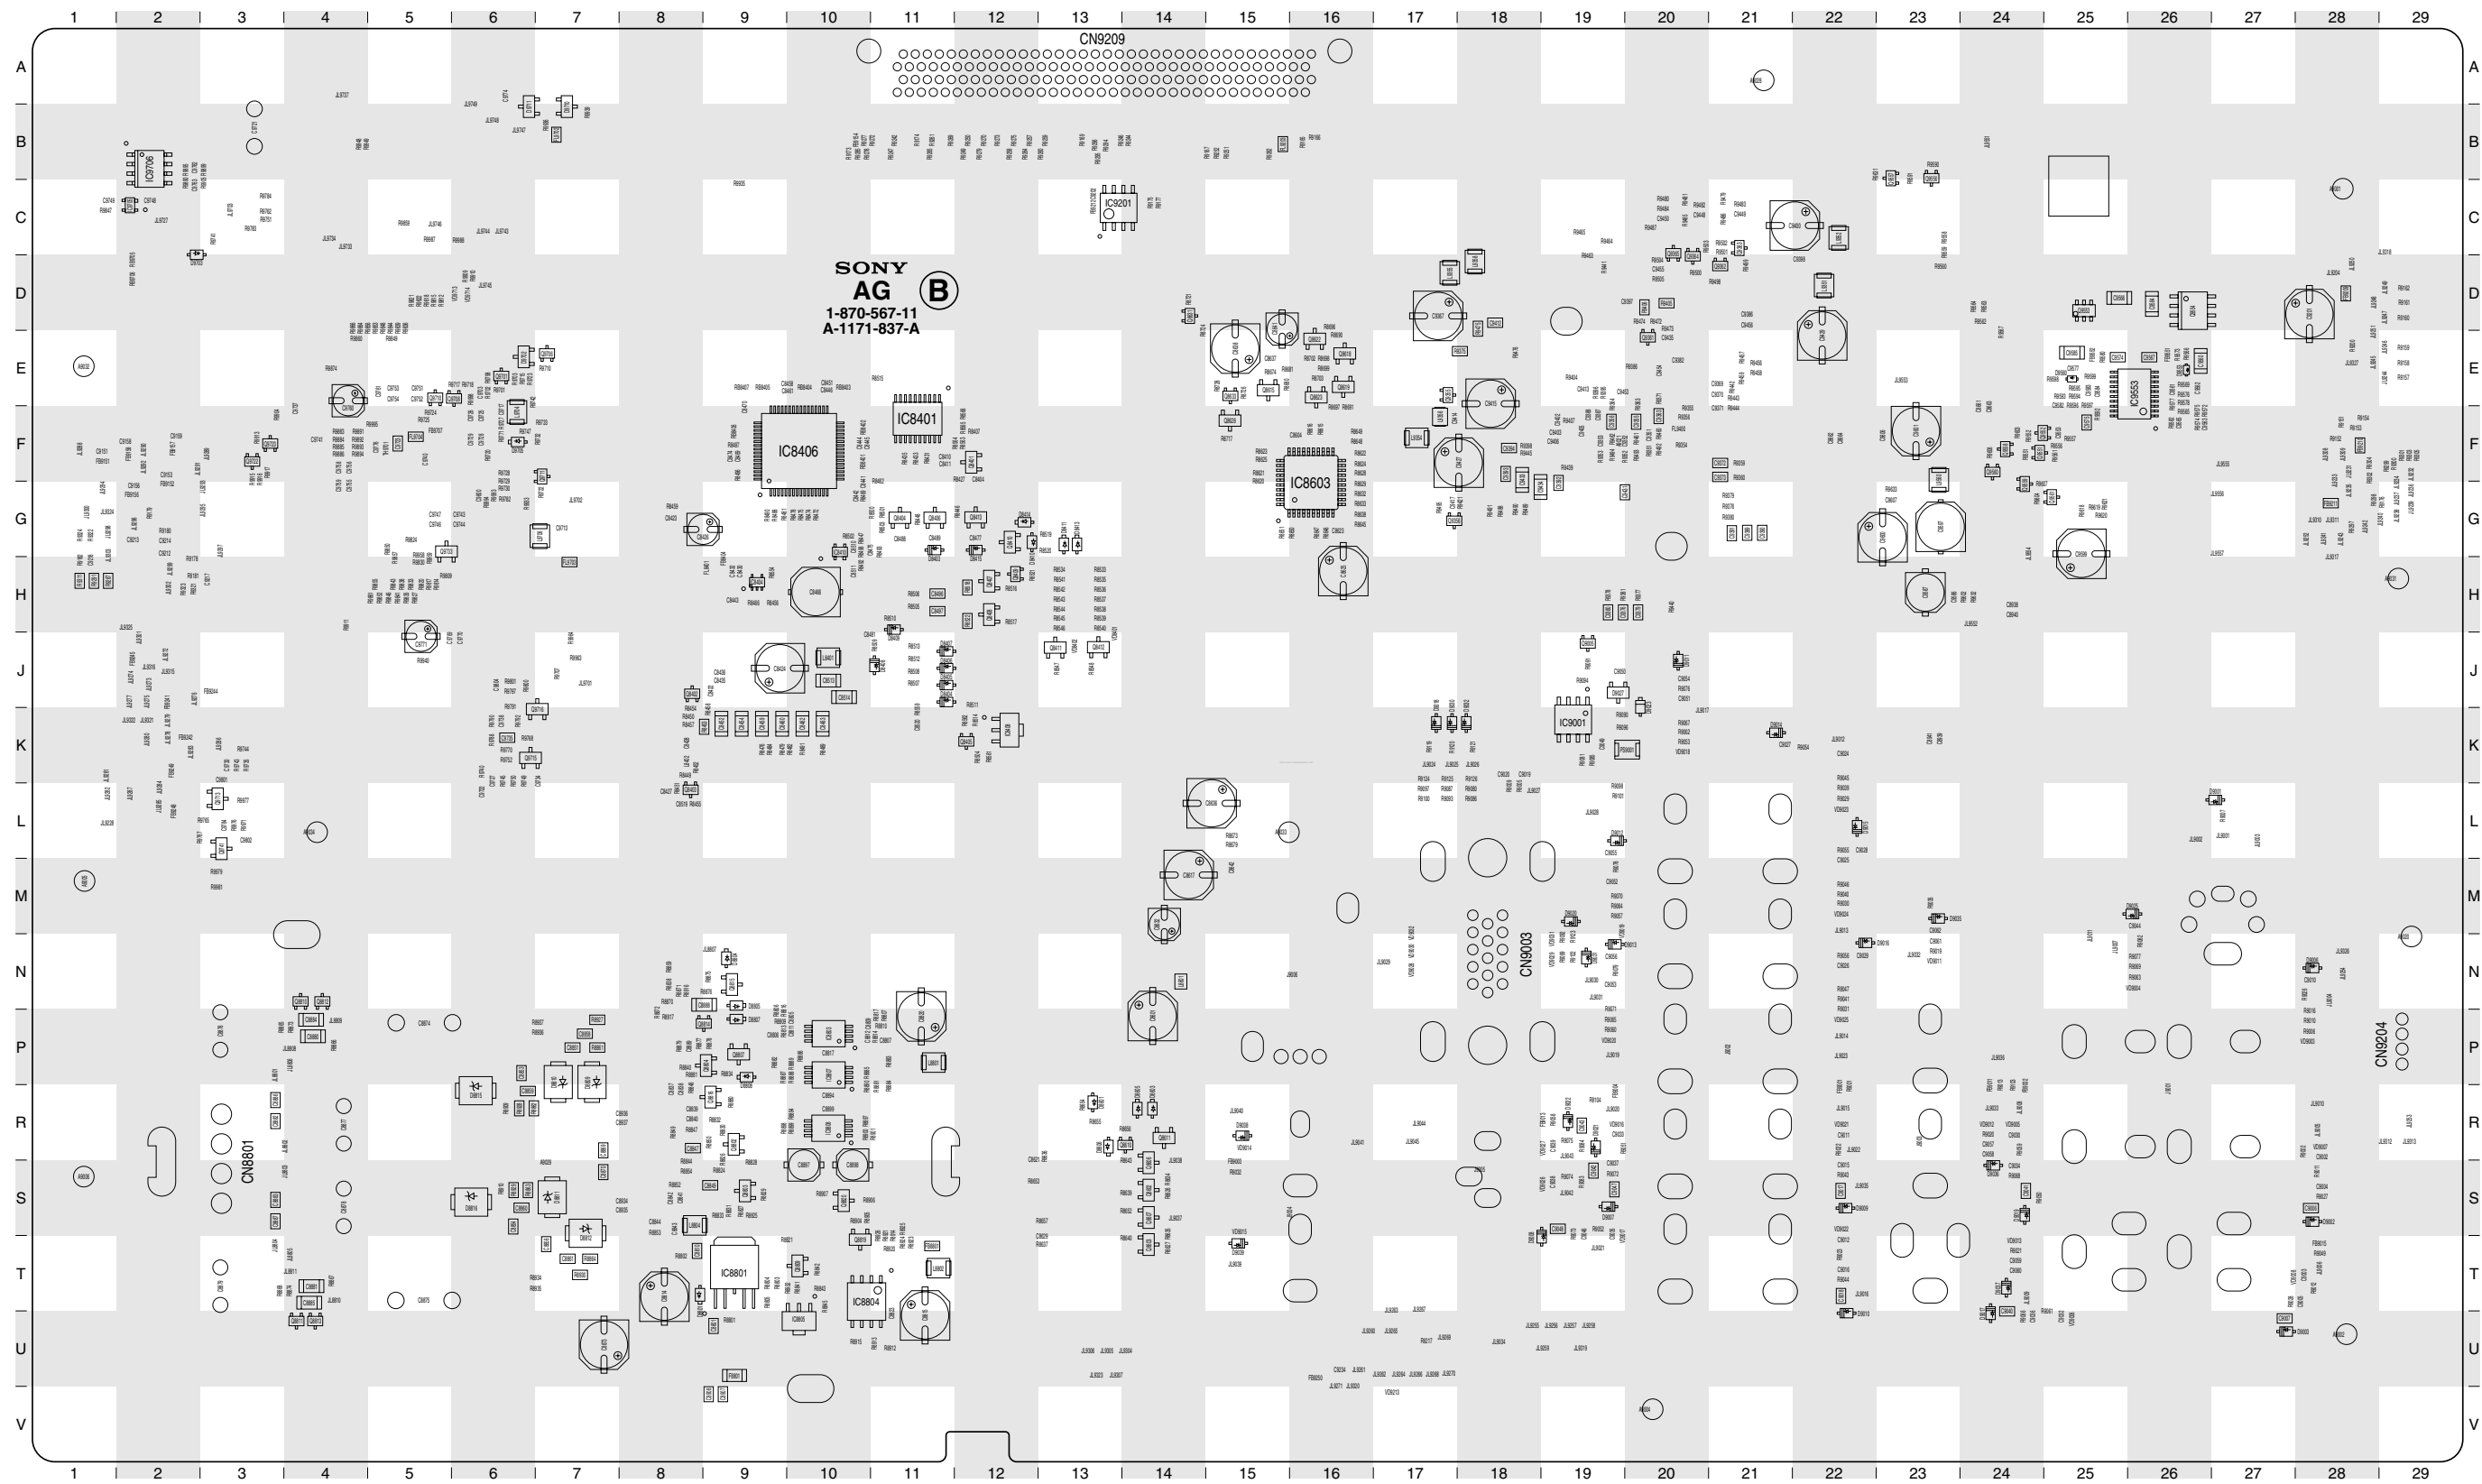

<CONDUCTOR SIDE>

1	2	3	4	5	6	7	8	9	10	11	12
A											
B											
C											
D											
E											
F											
G											
H											

Page.1001.shtTable of Contents

Page.2002.shtConnector to A (140p) / G

Page.3003.shtConnector to FE / A (Saiph)

Page.4004.shtPOWER

Page.5005.shtHDMI

Page.6006.shtCCPXA (MAIN)

Page.7007.shtDRC-MFV1

Page.8008.shtIFP2S

Page.9009.shtDDR

Page.10010.shtGPX_BUFFER

Page.11011.shtSUB_CHROMA

Page.12012.shtDE-MICRO

Page.13013.shtVORTEX-R


Page.14014.shtLVDS/TX

Page.15900.shtMECHA & GND

B2 (1/15)

(Table of Contents)

B-SS13206<CH.>-B2-P1

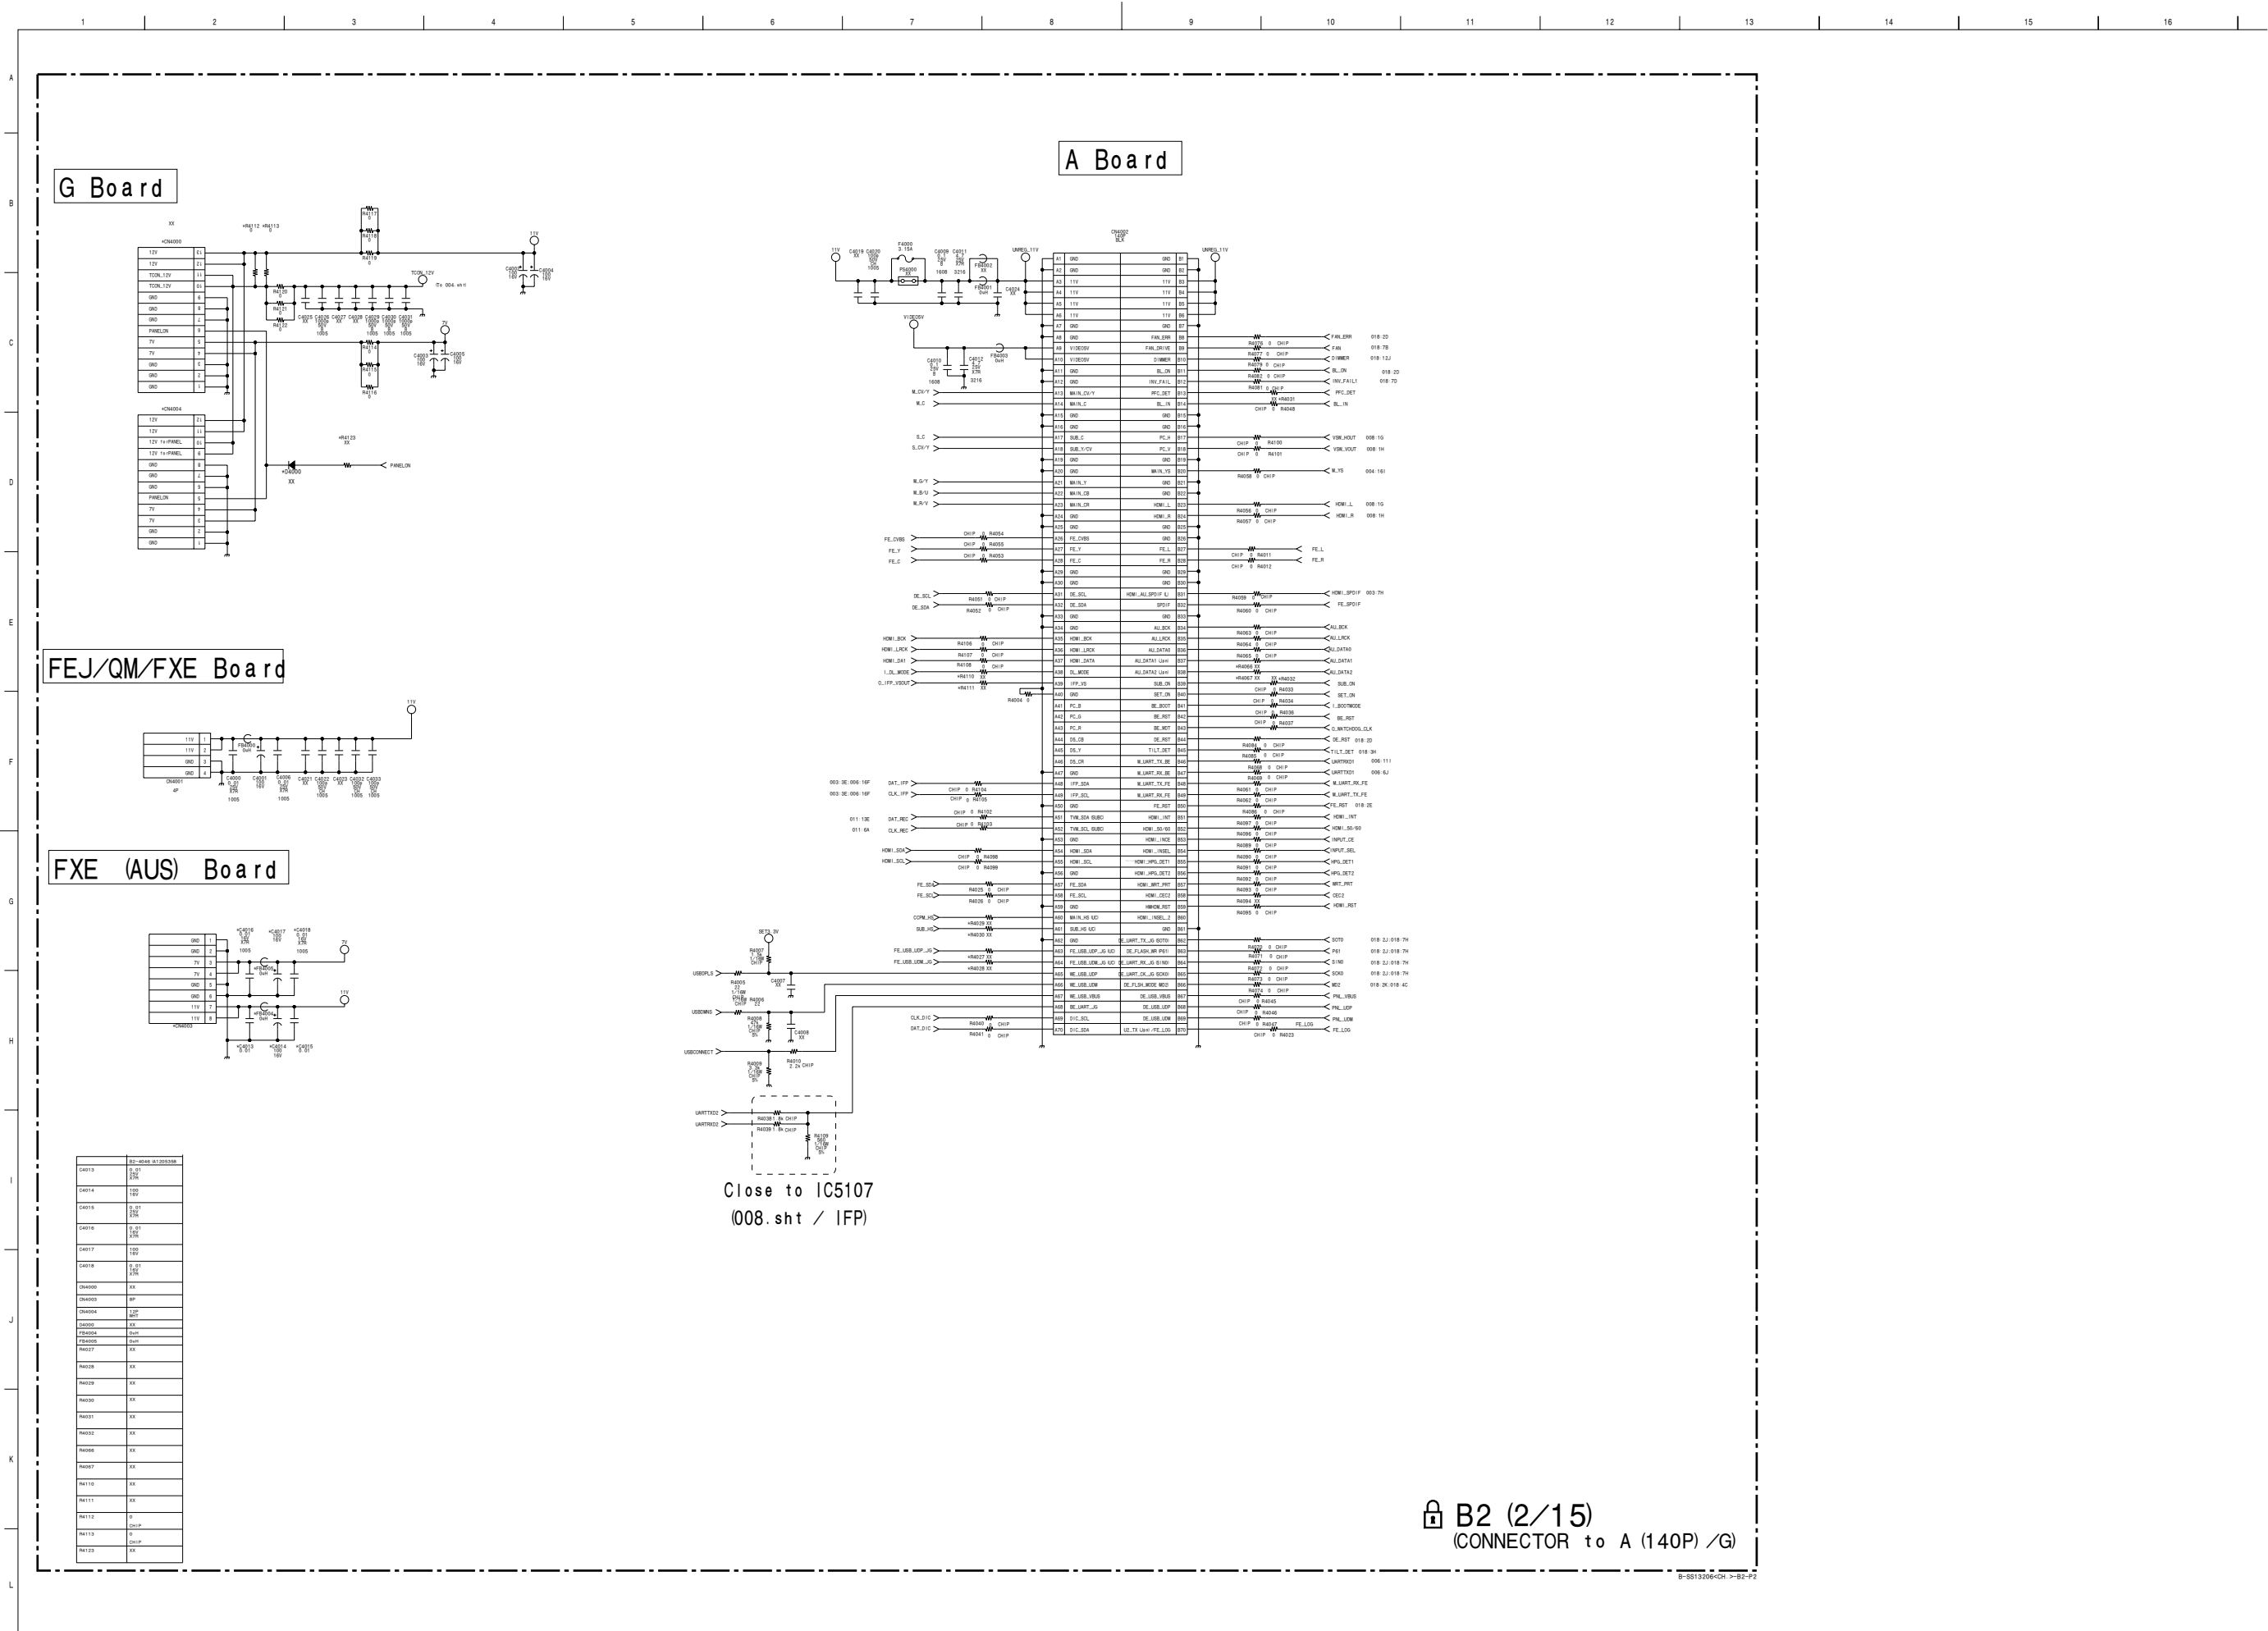

G Board

A Board

FEJ/QM/FXE Board



FXE (AUS) Board

Close to IC5107
(008.sht / IFP)

B2 (2/15)
(CONNECTOR to A (140P) /G)

	B2-0040-A120300
C4013	0.01 250
C4014	100 180
C4015	0.01 250
C4016	0.01 250
C4017	100 180
C4018	0.01 250
D4000	XX
D4003	80°
D4004	1.20 180
D4000	XX
F4004	0.01 250
F4004	0.01 250
R4027	XX
R4038	XX
R4029	XX
R4030	XX
R4031	XX
R4032	XX
R4036	XX
R4037	XX
R4110	XX
R4111	XX
R4112	0 Chip
R4113	0 Chip
R4123	XX

		B2-40X46-A1-200000
CA200	0	175
CA201	0	175
CA202	0	175
CA203	0	175
CA204	0	175
CA205	0	175
CA206	0	175
CA207	0	175
CA208	0	175
CA209	0	175
CA210	0	175
CA211	0	175
CA212	0	175
CA213	0	175
CA214	0	175
CA215	0	175
CA216	0	175
CA217	0	175
CA218	0	175
CA219	0	175
CA220	0	175
CA221	0	175
CA222	0	175
CA223	0	175
CA224	0	175
CA225	0	175
CA226	0	175
CA227	0	175
CA228	0	175
CA229	0	175
CA230	0	175
CA231	0	175
CA232	0	175
CA233	0	175
CA234	0	175
CA235	0	175
CA236	0	175
CA237	0	175
CA238	0	175
CA239	0	175
CA240	0	175
CA241	0	175
CA242	0	175
CA243	0	175
CA244	0	175
CA245	0	175
CA246	0	175
CA247	0	175
CA248	0	175
CA249	0	175
CA250	0	175
CA251	0	175
CA252	0	175
CA253	0	175
CA254	0	175
CA255	0	175
CA256	0	175
CA257	0	175
CA258	0	175
CA259	0	175
CA260	0	175
CA261	0	175
CA262	0	175
CA263	0	175
CA264	0	175
CA265	0	175
CA266	0	175
CA267	0	175
CA268	0	175
CA269	0	175
CA270	0	175
CA271	0	175
CA272	0	175
CA273	0	175
CA274	0	175
CA275	0	175
CA276	0	175
CA277	0	175
CA278	0	175
CA279	0	175
CA280	0	175
CA281	0	175
CA282	0	175
CA283	0	175
CA284	0	175
CA285	0	175
CA286	0	175
CA287	0	175
CA288	0	175
CA289	0	175
CA290	0	175
CA291	0	175
CA292	0	175
CA293	0	175
CA294	0	175
CA295	0	175
CA296	0	175
CA297	0	175
CA298	0	175
CA299	0	175
CA300	0	175

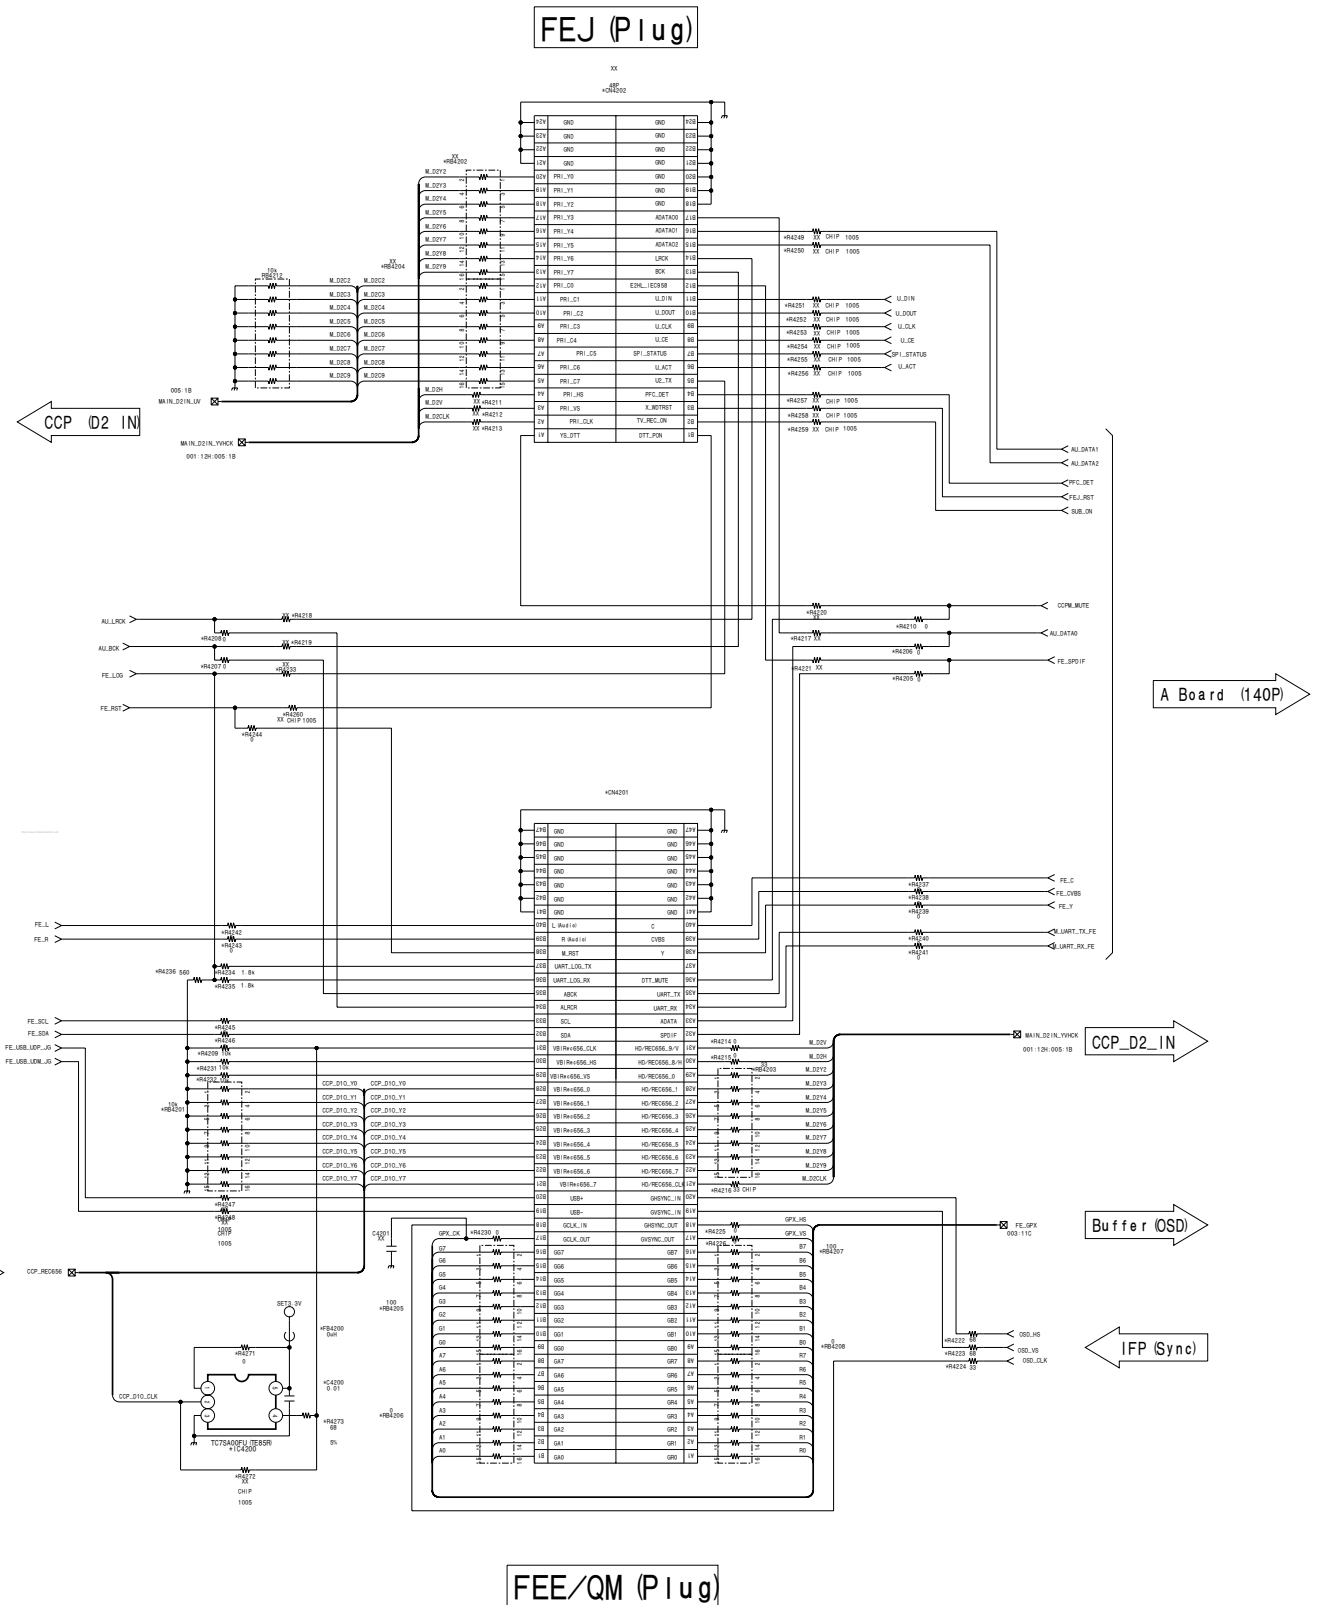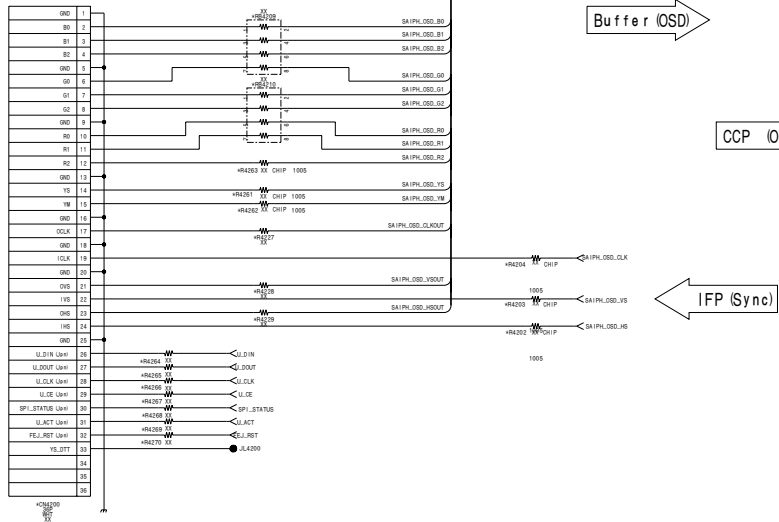


B2 (3/15)
(CONNECTOR to FE/A (Saiph))







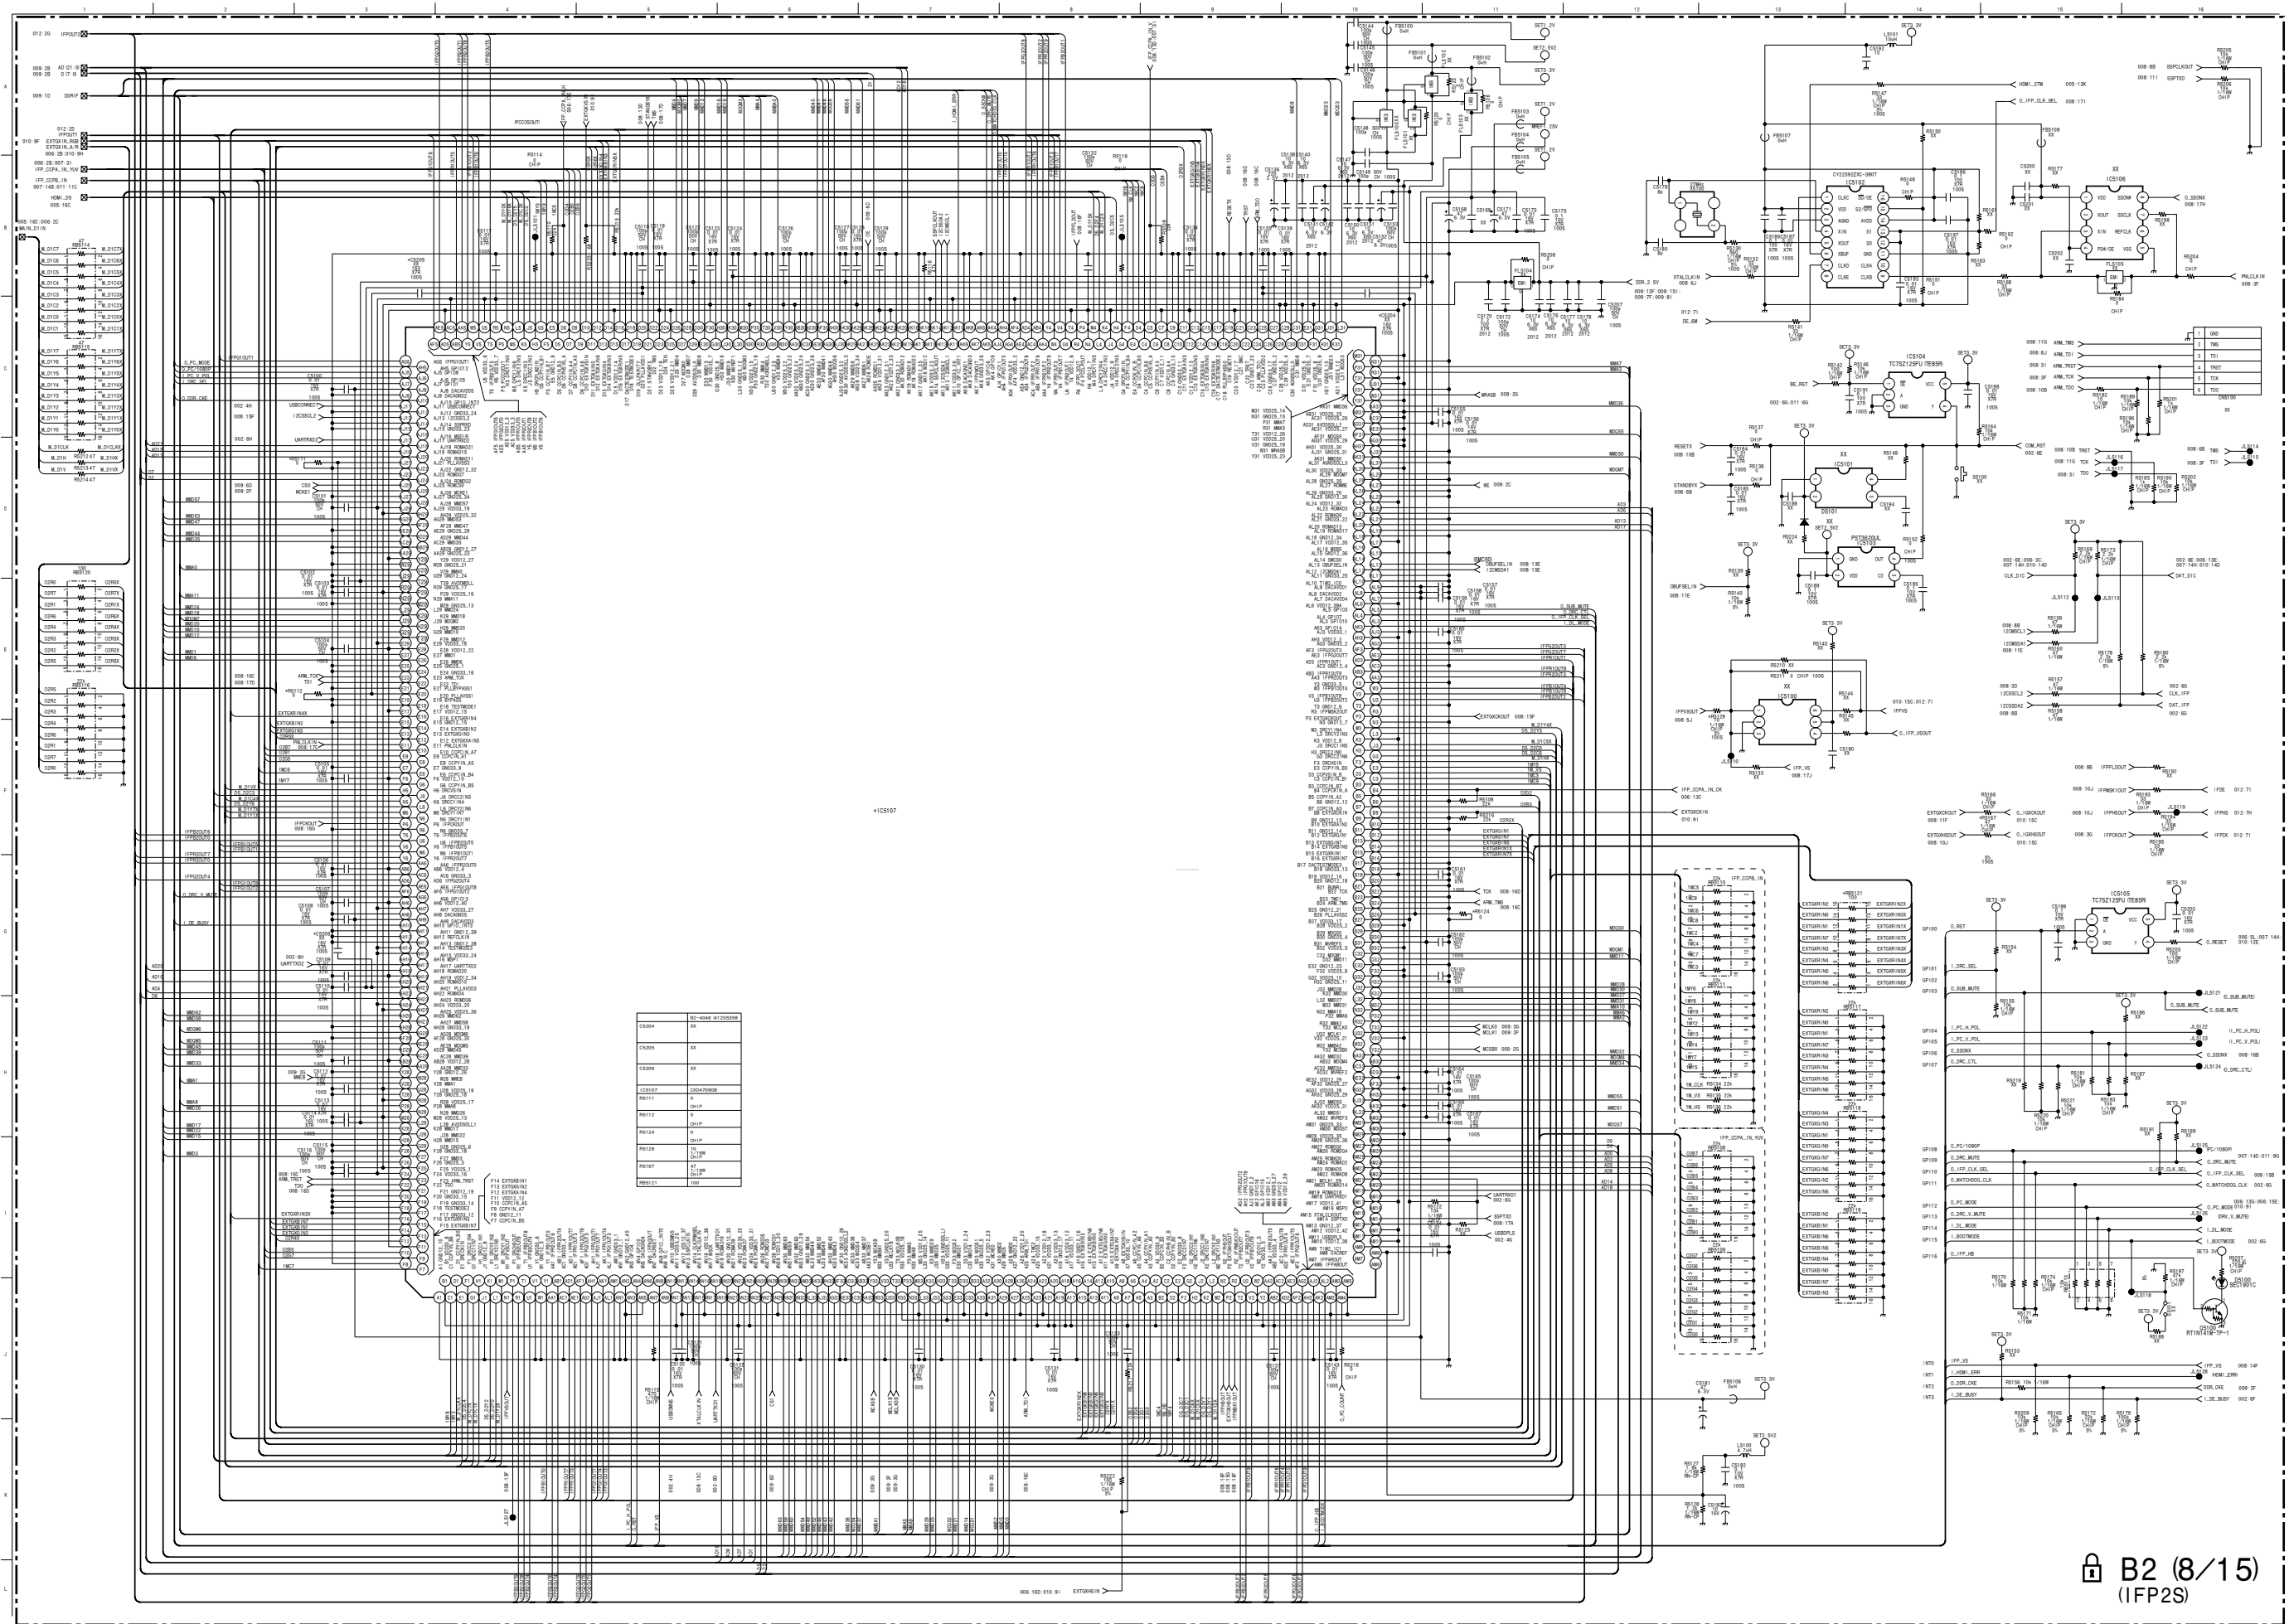







R9011	01-4040B 41200000
R9012	10K
R9013	10K
R9014	10K
R9015	10K
R9016	10K
R9017	10K
R9018	10K
R9019	10K
R9020	10K
R9021	10K
R9022	10K
R9023	10K
R9024	10K
R9025	10K
R9026	10K
R9027	10K
R9028	10K
R9029	10K
R9030	10K
R9031	10K
R9032	10K
R9033	10K
R9034	10K
R9035	10K
R9036	10K
R9037	10K
R9038	10K
R9039	10K
R9040	10K
R9041	10K
R9042	10K
R9043	10K
R9044	10K
R9045	10K
R9046	10K
R9047	10K
R9048	10K
R9049	10K
R9050	10K
R9051	10K
R9052	10K
R9053	10K
R9054	10K
R9055	10K
R9056	10K
R9057	10K
R9058	10K
R9059	10K
R9060	10K
R9061	10K
R9062	10K
R9063	10K
R9064	10K
R9065	10K
R9066	10K
R9067	10K
R9068	10K
R9069	10K
R9070	10K
R9071	10K
R9072	10K
R9073	10K
R9074	10K
R9075	10K
R9076	10K
R9077	10K
R9078	10K
R9079	10K
R9080	10K
R9081	10K
R9082	10K
R9083	10K
R9084	10K
R9085	10K
R9086	10K
R9087	10K
R9088	10K
R9089	10K
R9090	10K
R9091	10K
R9092	10K
R9093	10K
R9094	10K
R9095	10K
R9096	10K
R9097	10K
R9098	10K
R9099	10K
R9100	10K


B2 (12/15)
(DE-MICRO)

B-8813206-01H >B2-P12



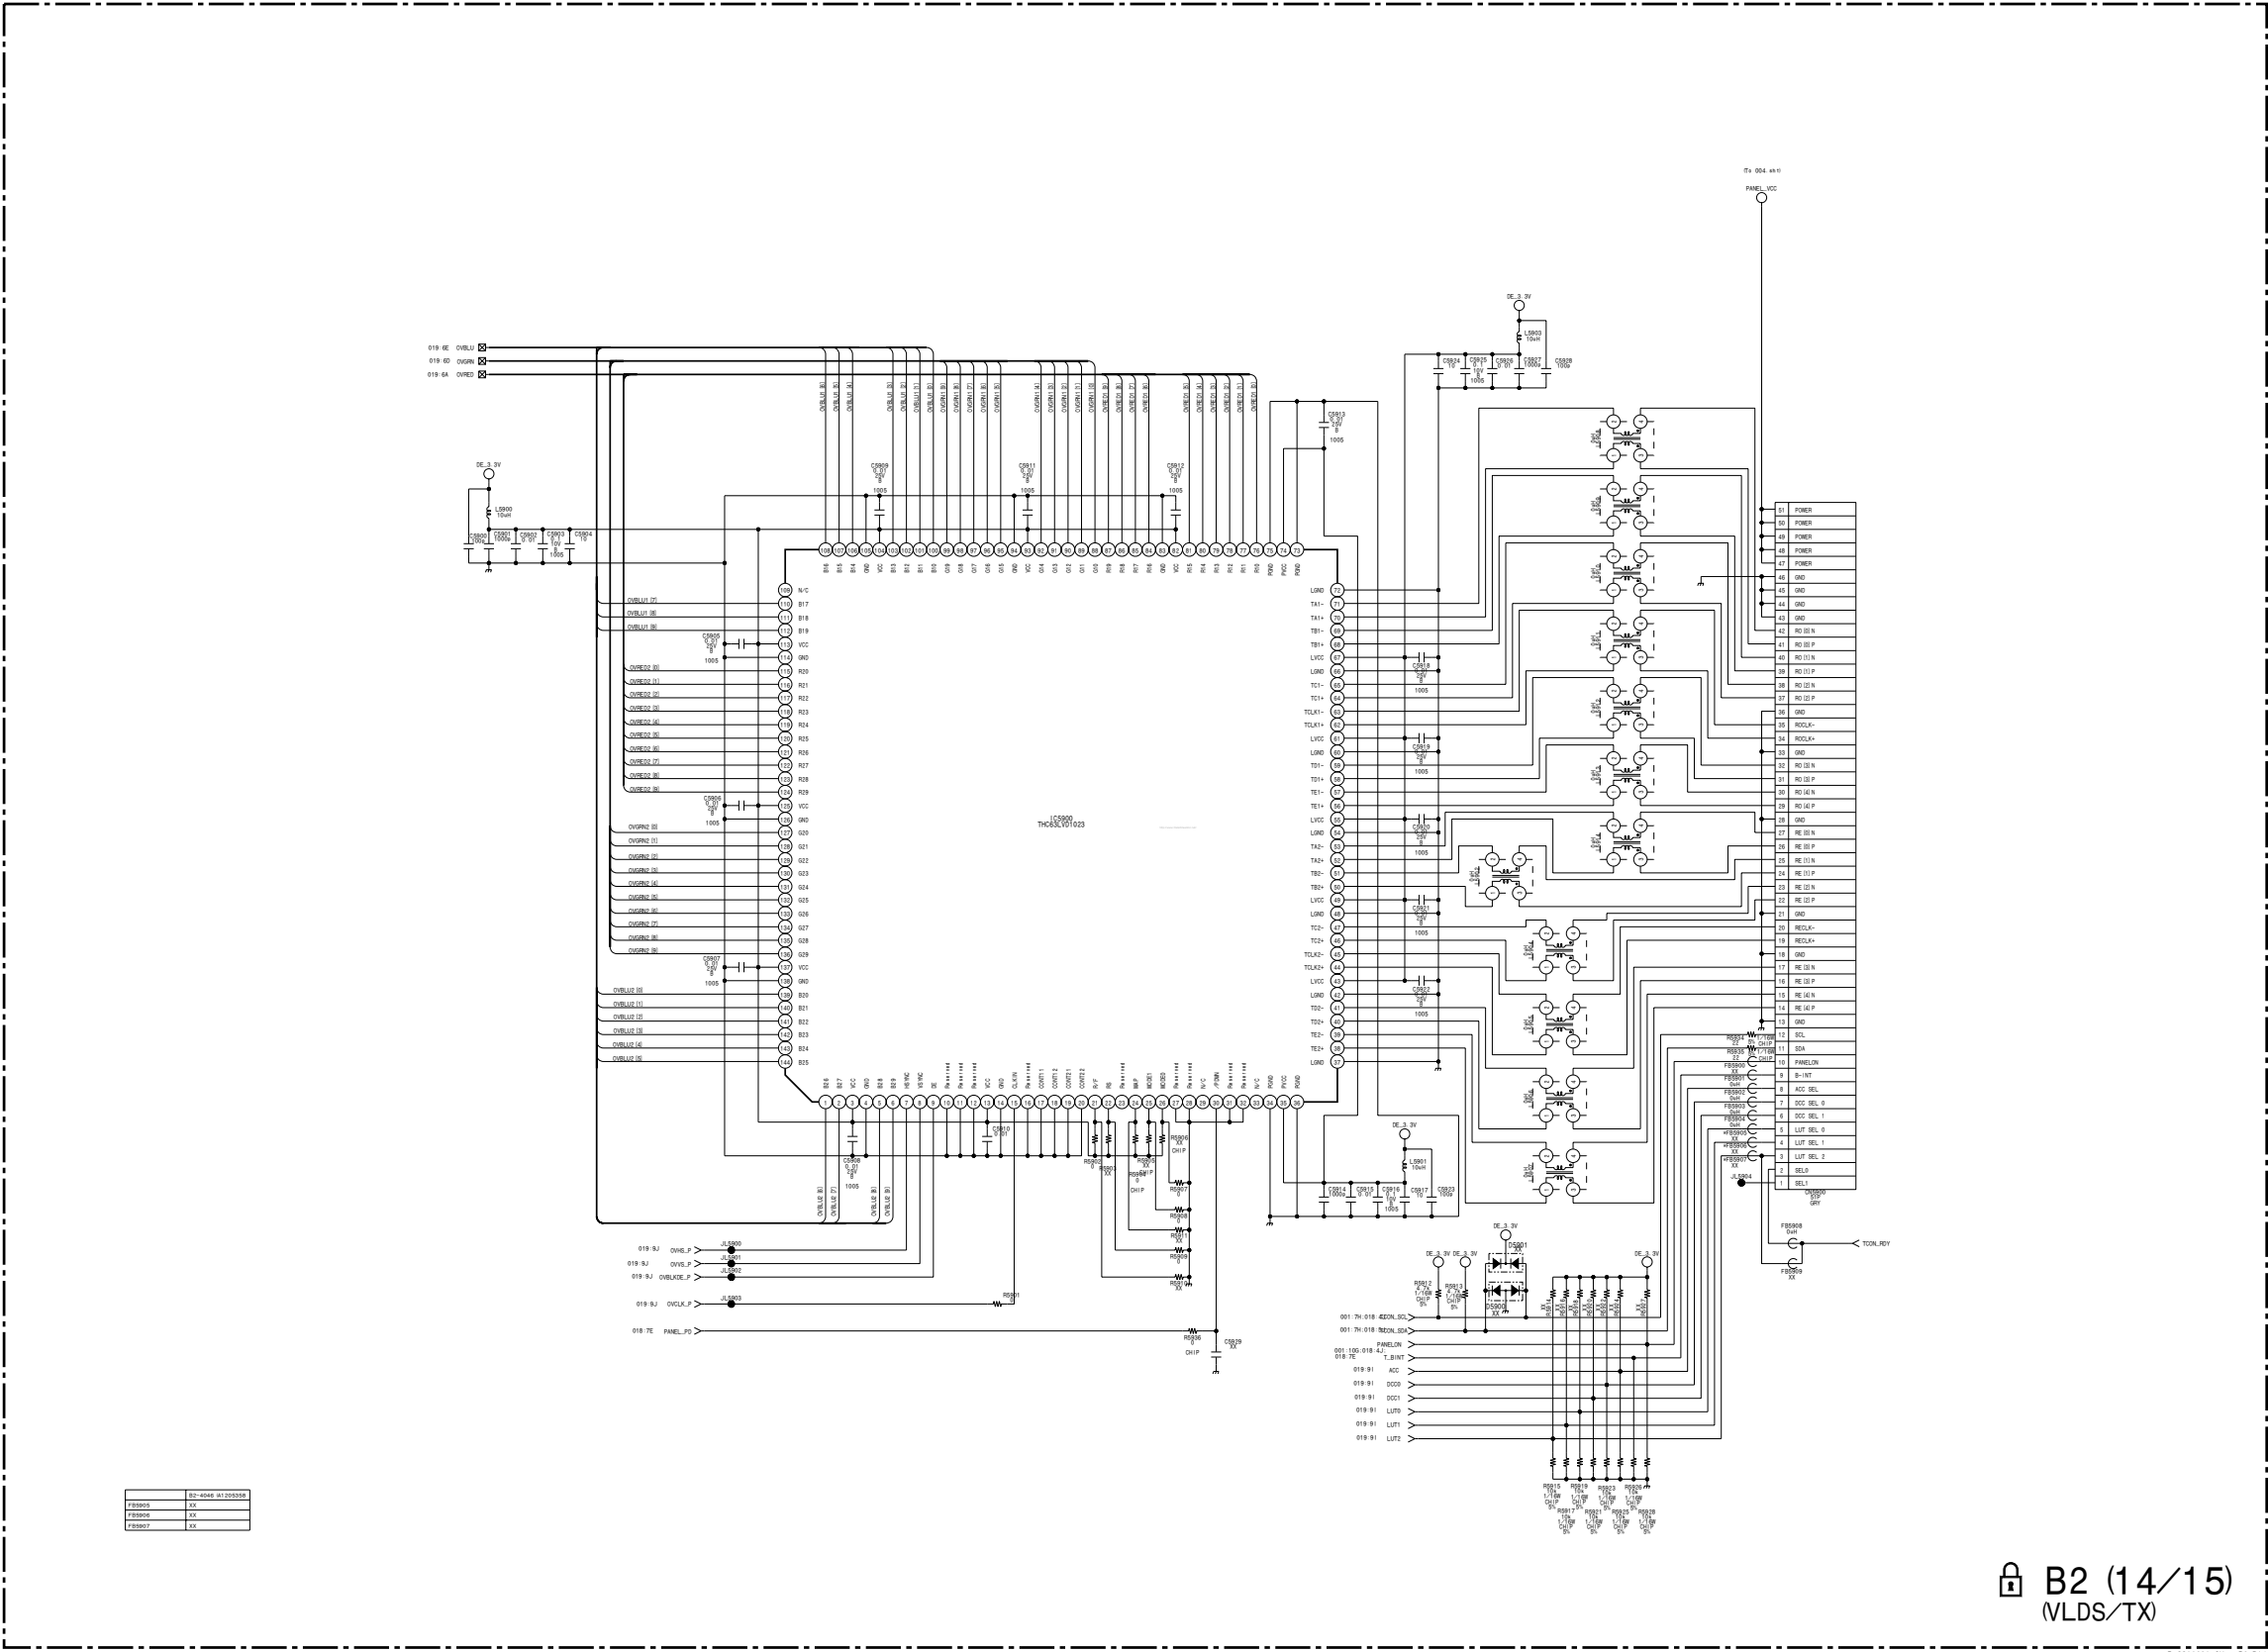


B2 (14/15)
(VLDS/TX)

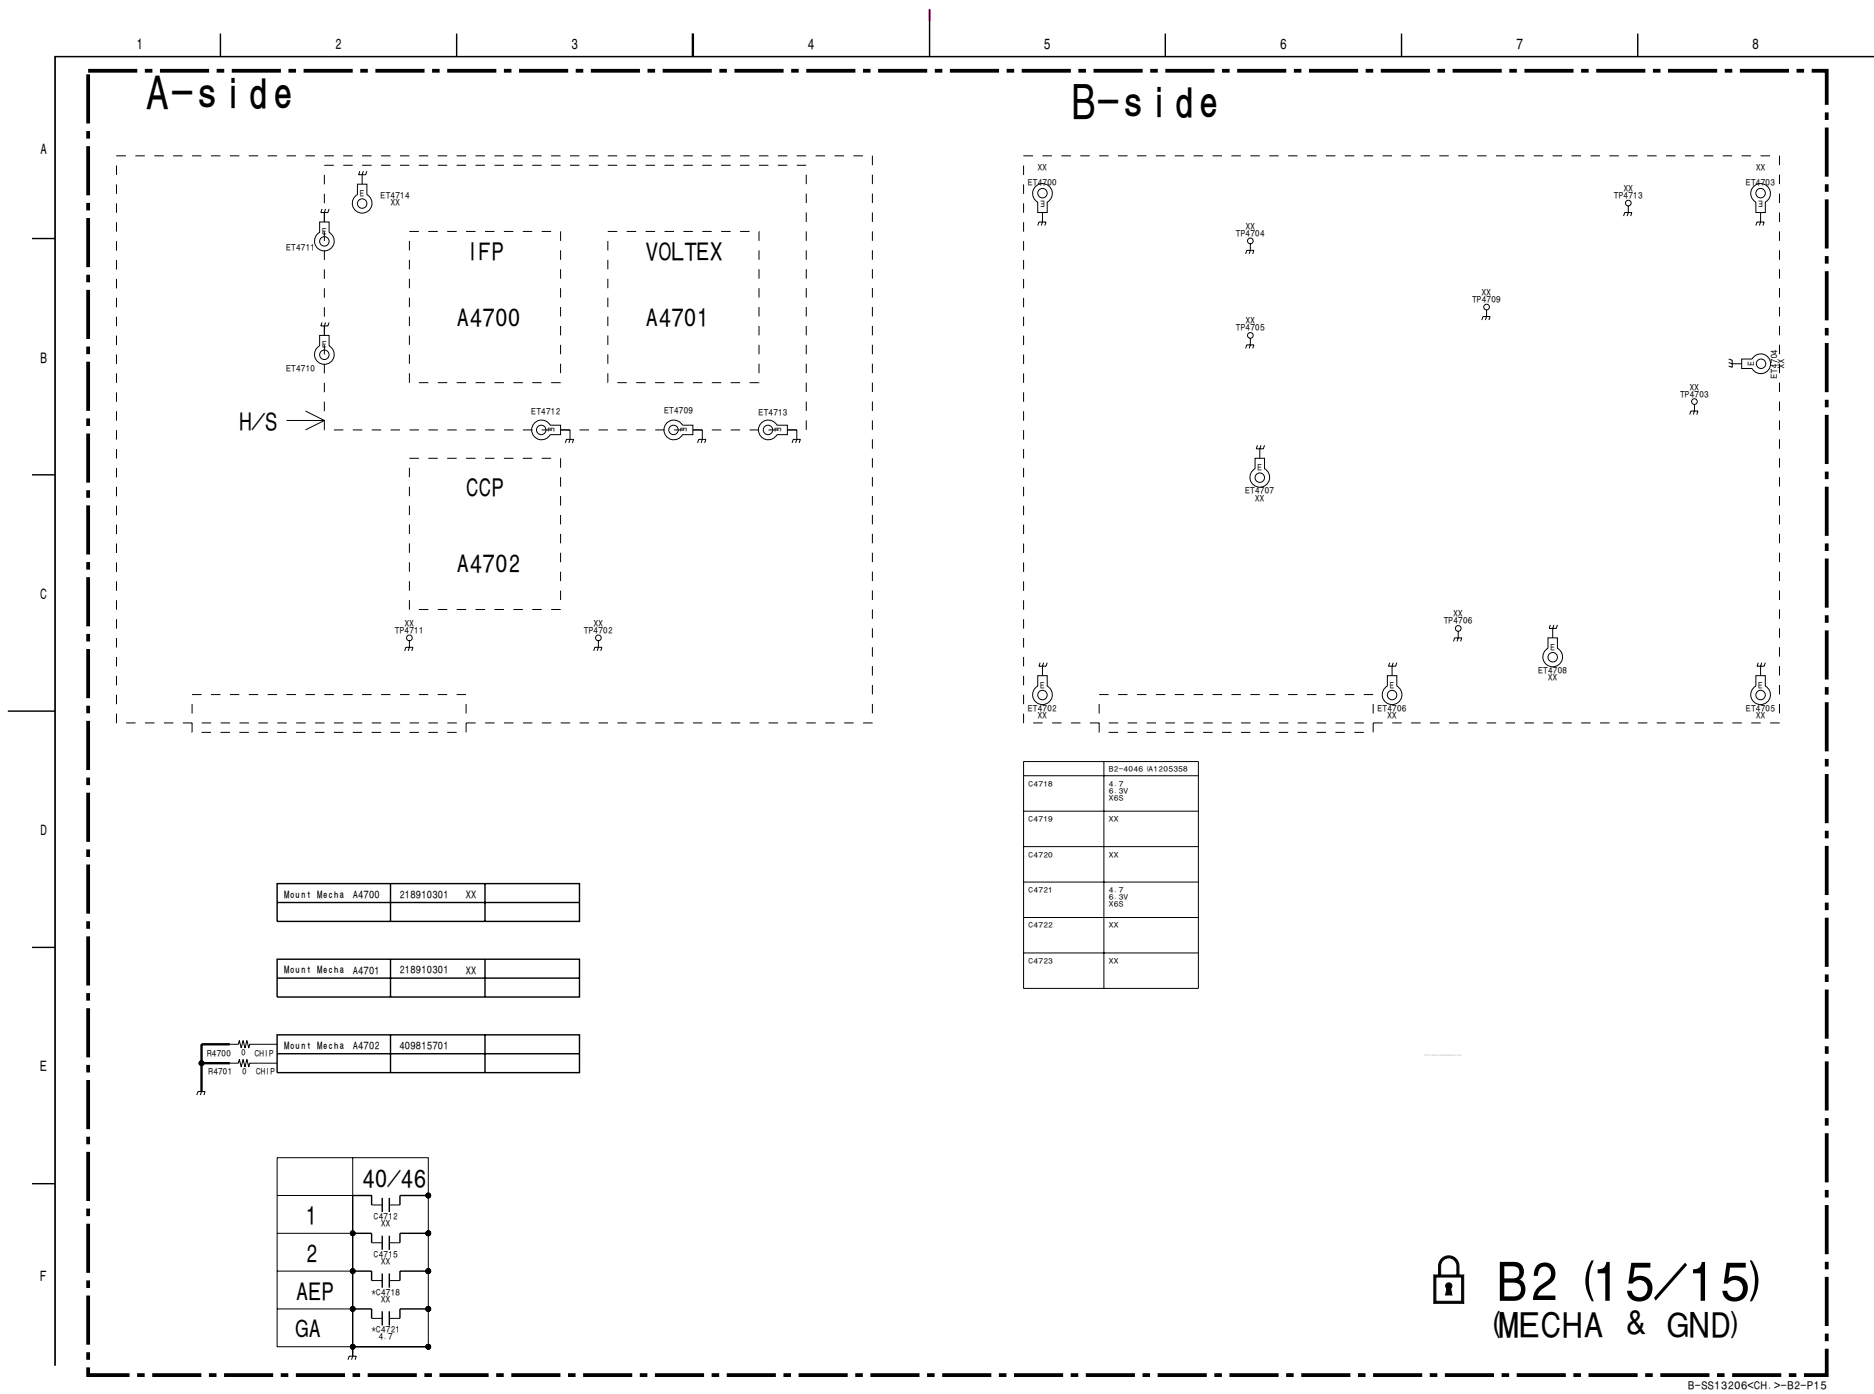


— B2 BOARD —

B2 BOARD (B)

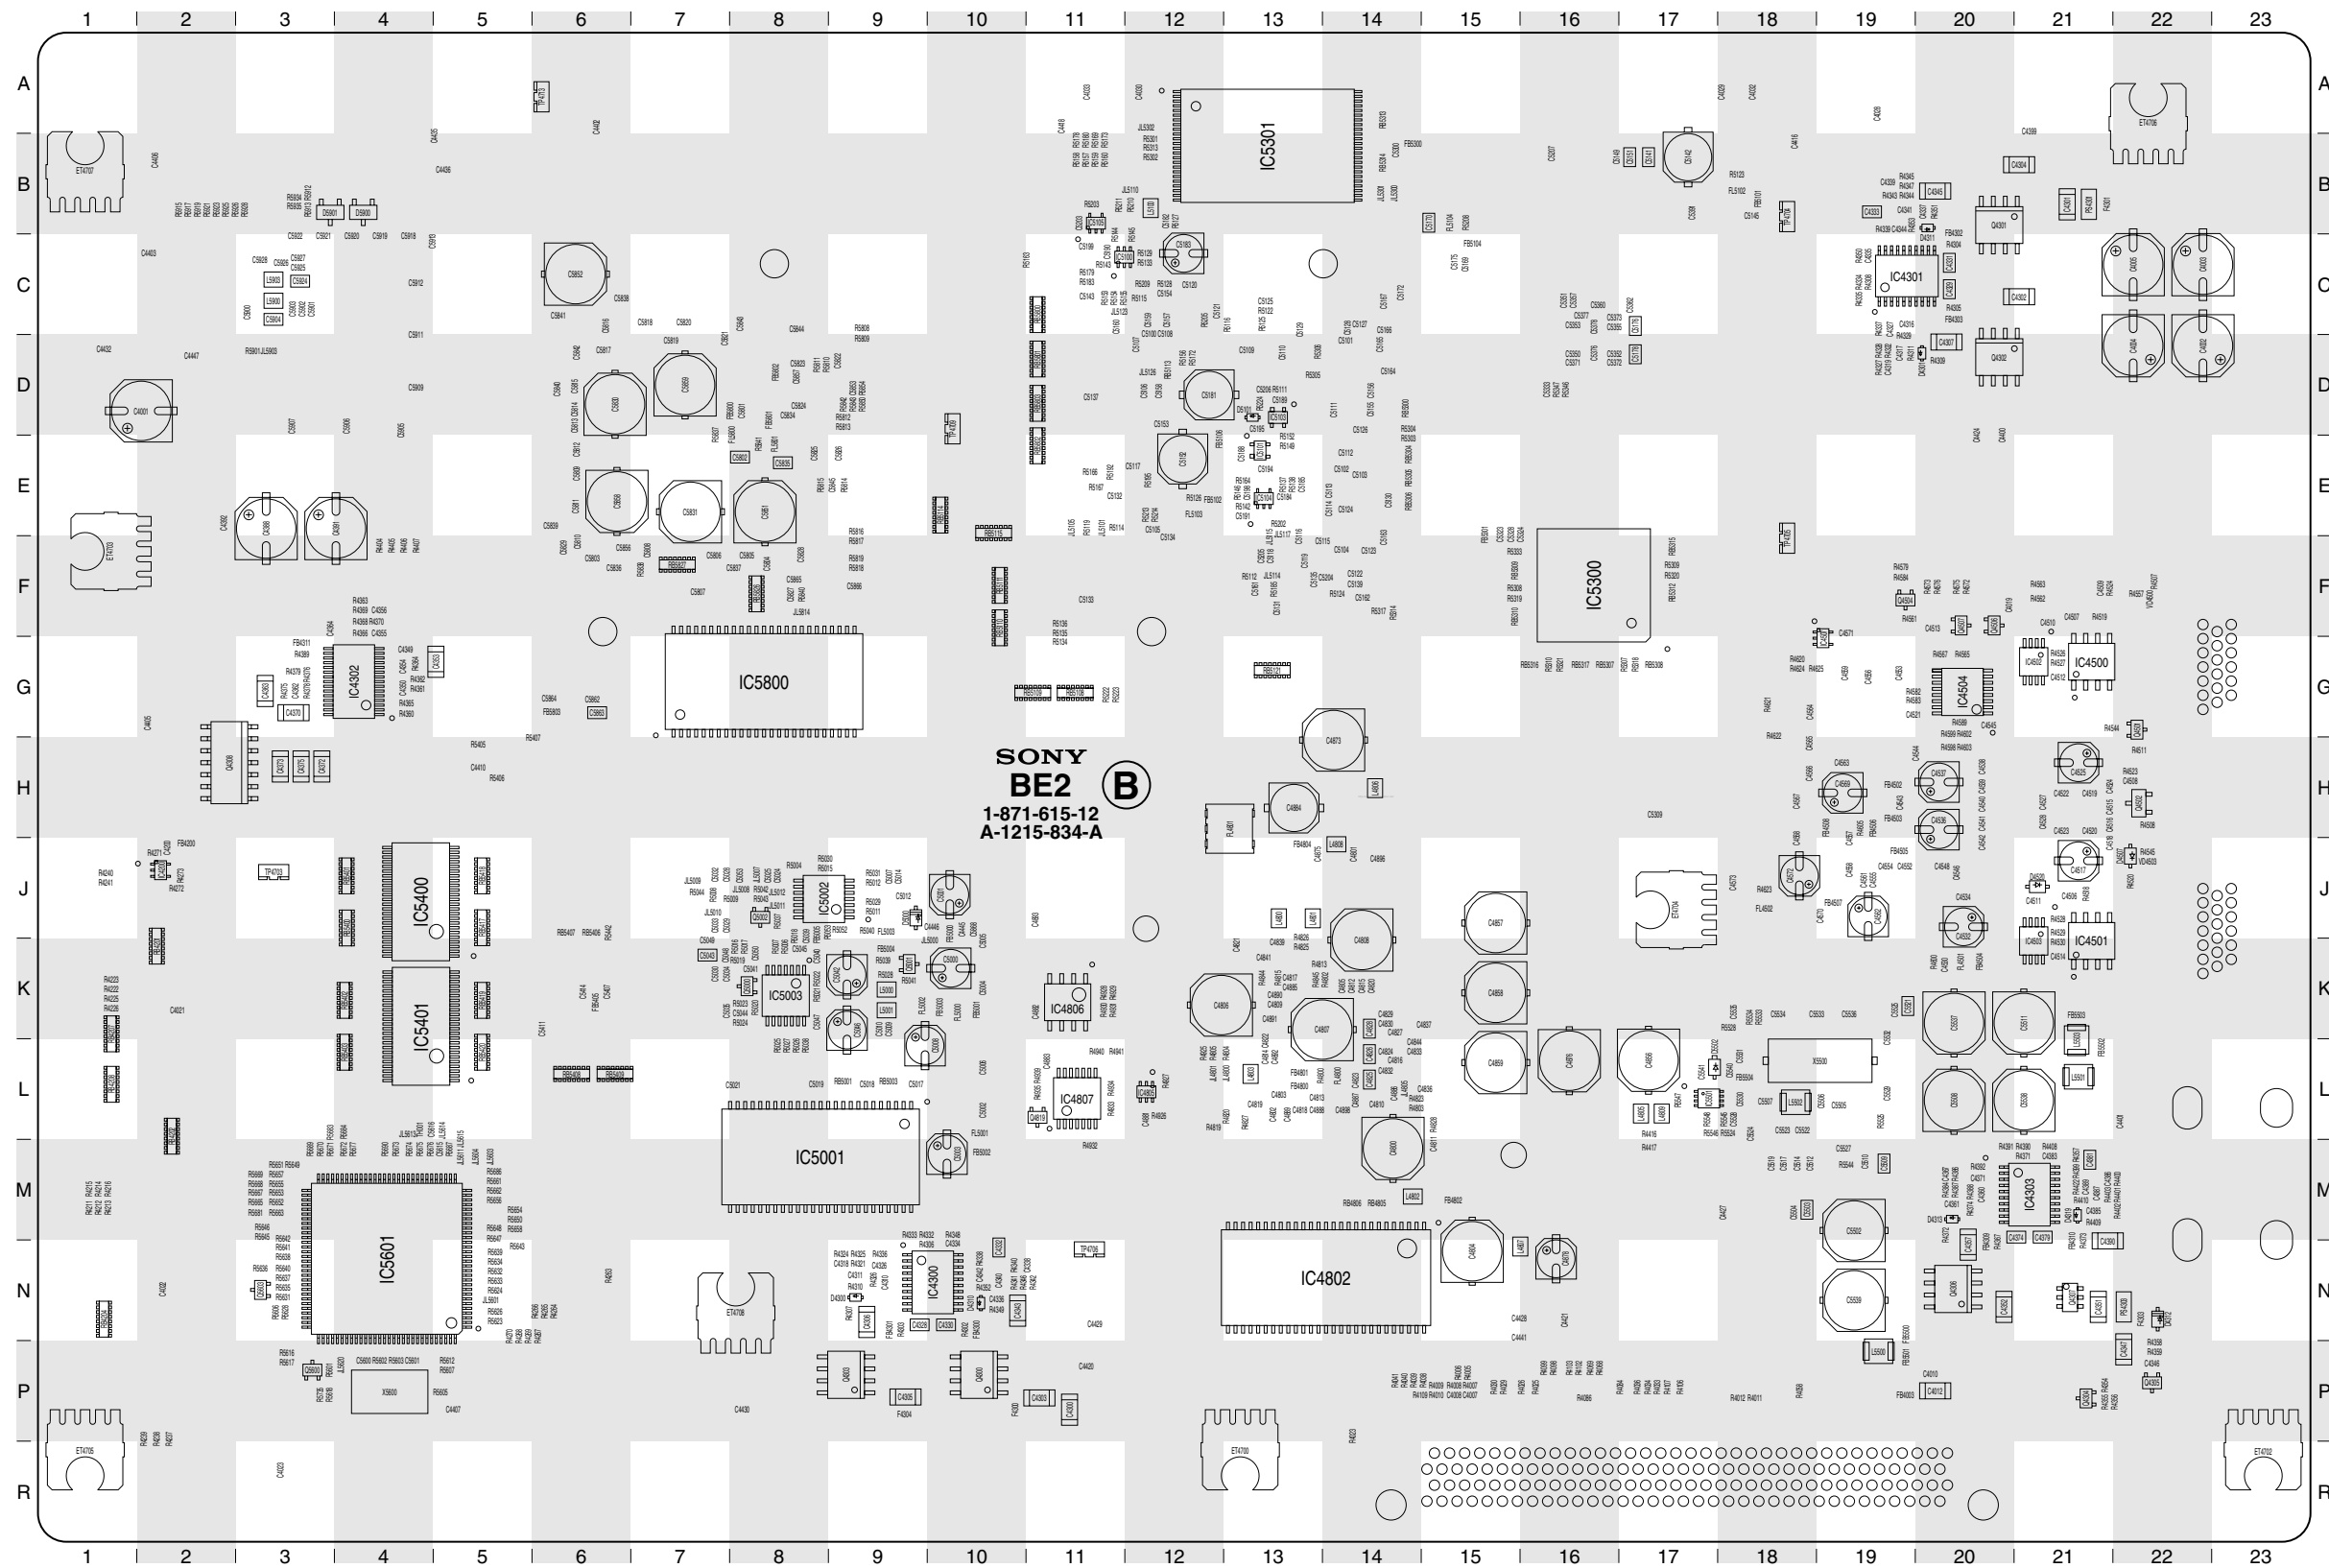


<CONDUCTOR SIDE>


(3) Schematic Diagram of D1 Board (KLV-40X200A/40X250A)

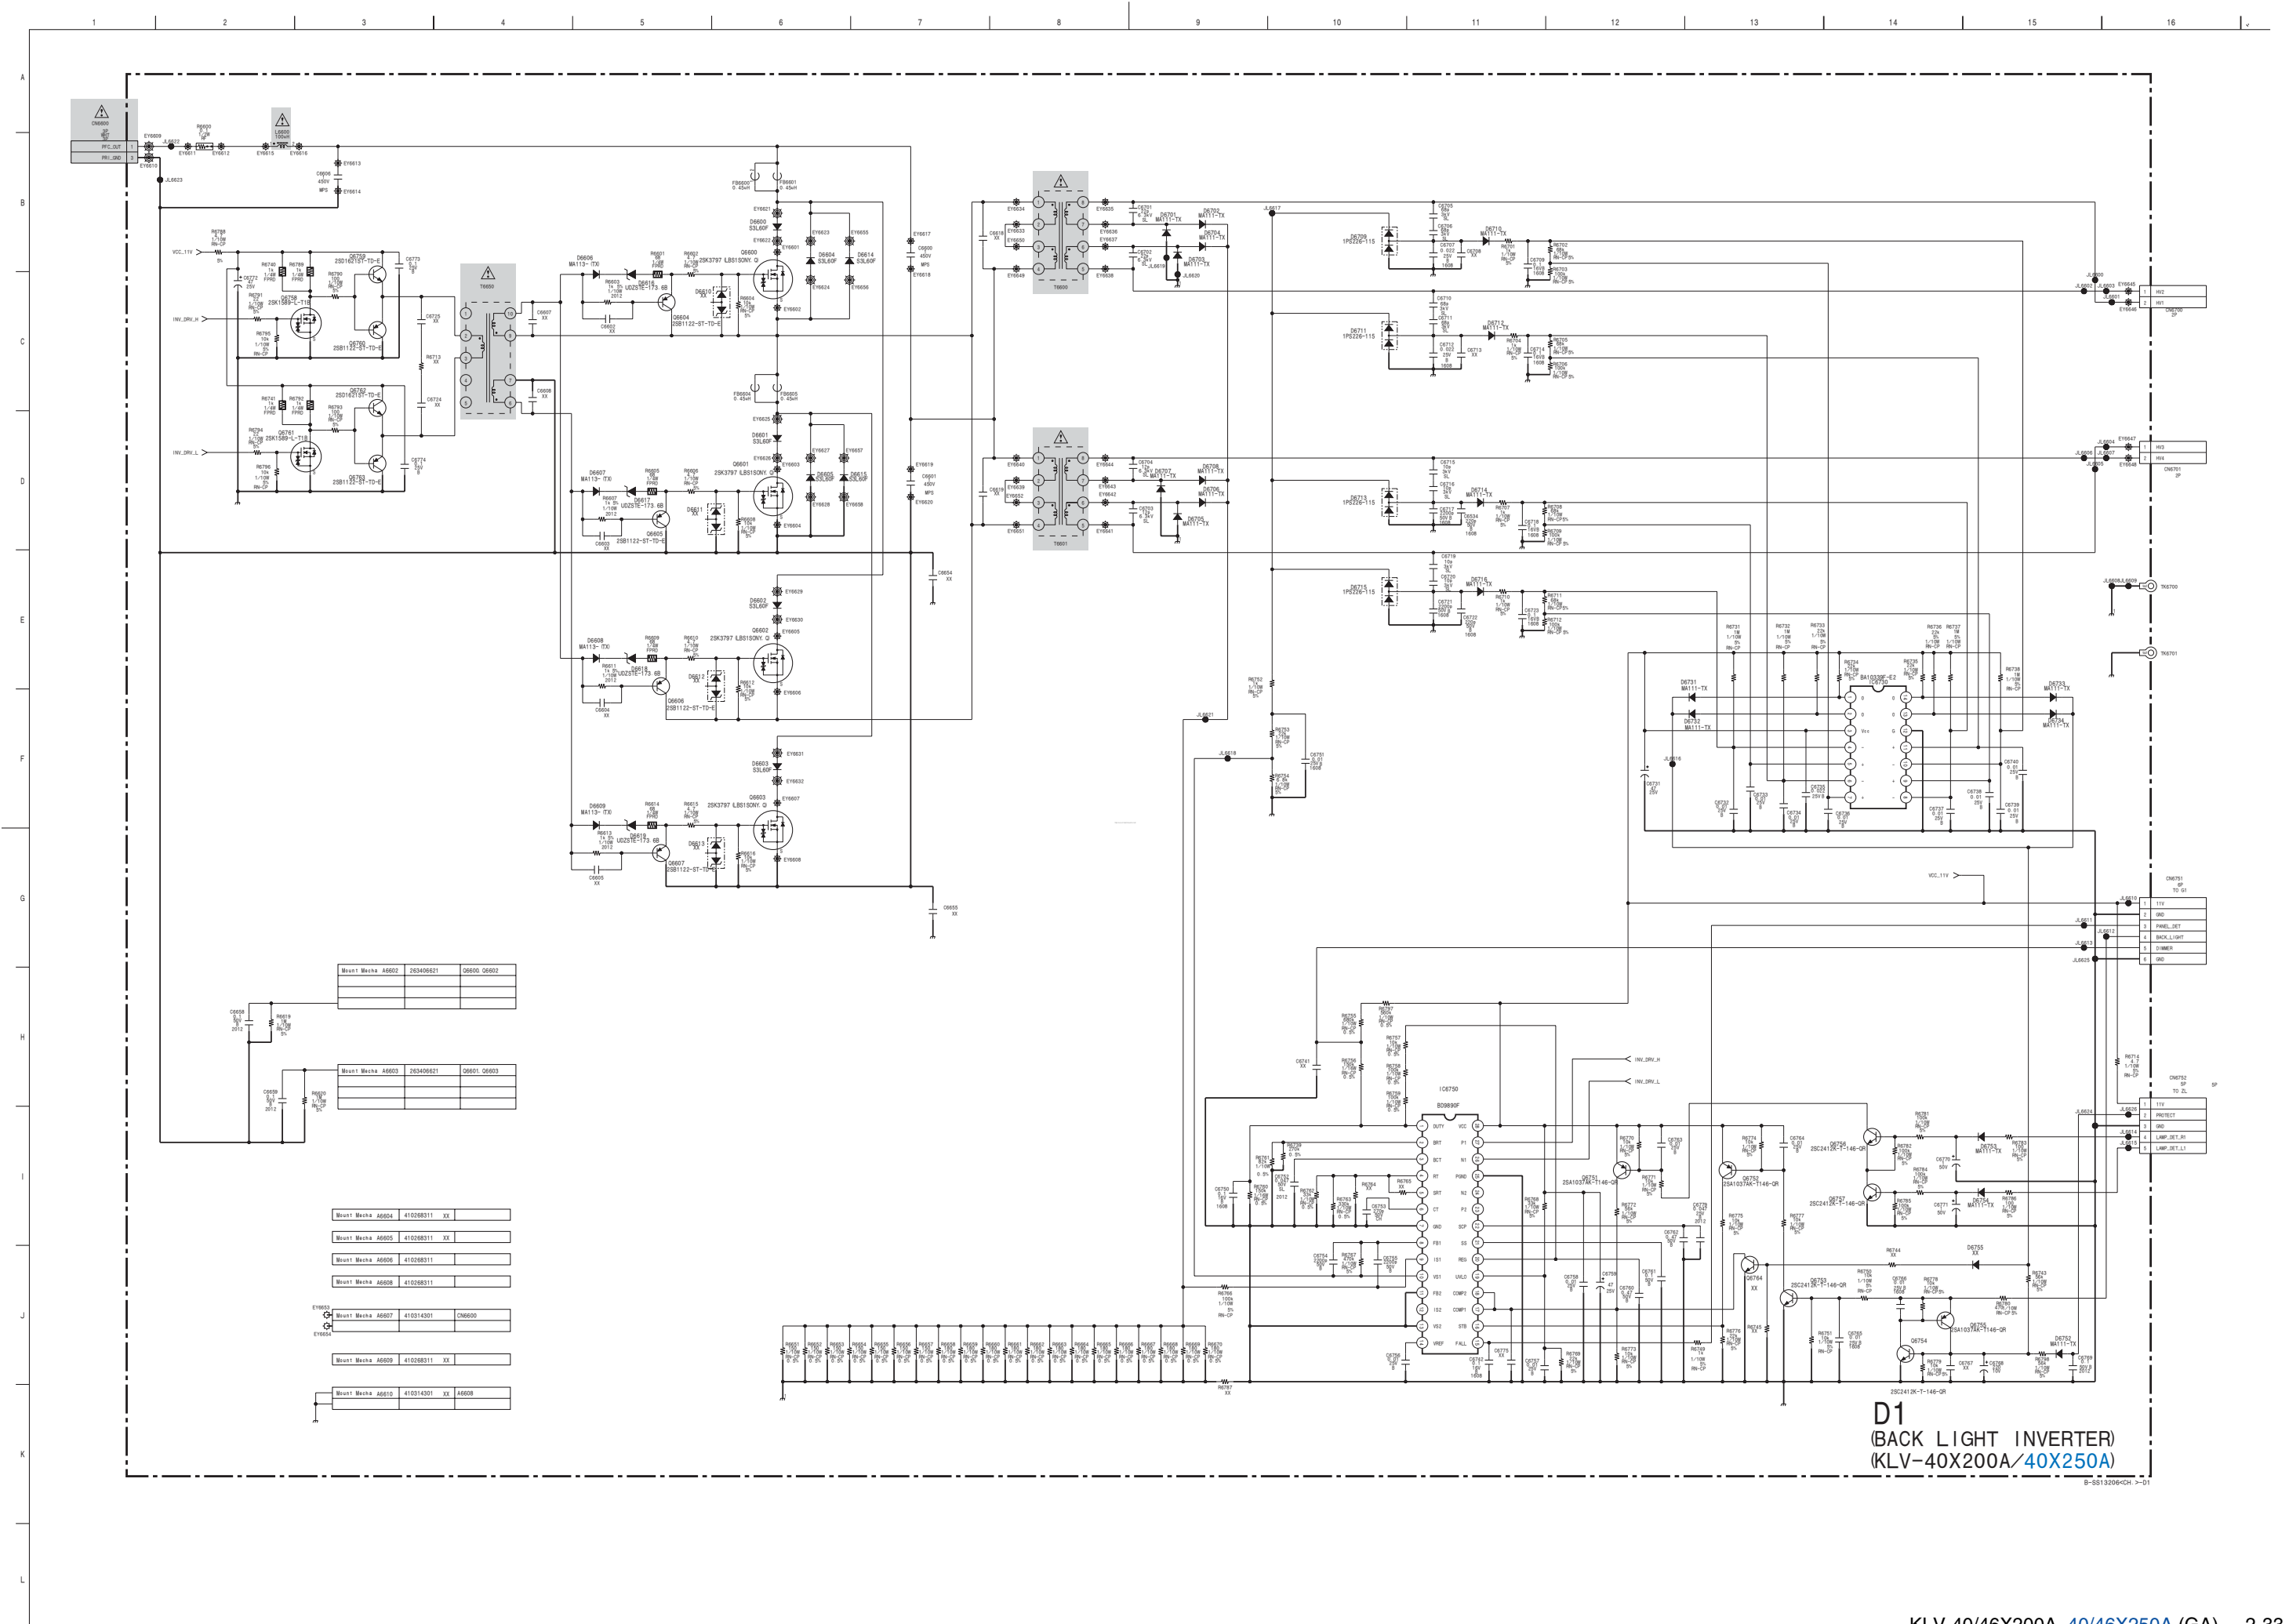

— D1 BOARD —

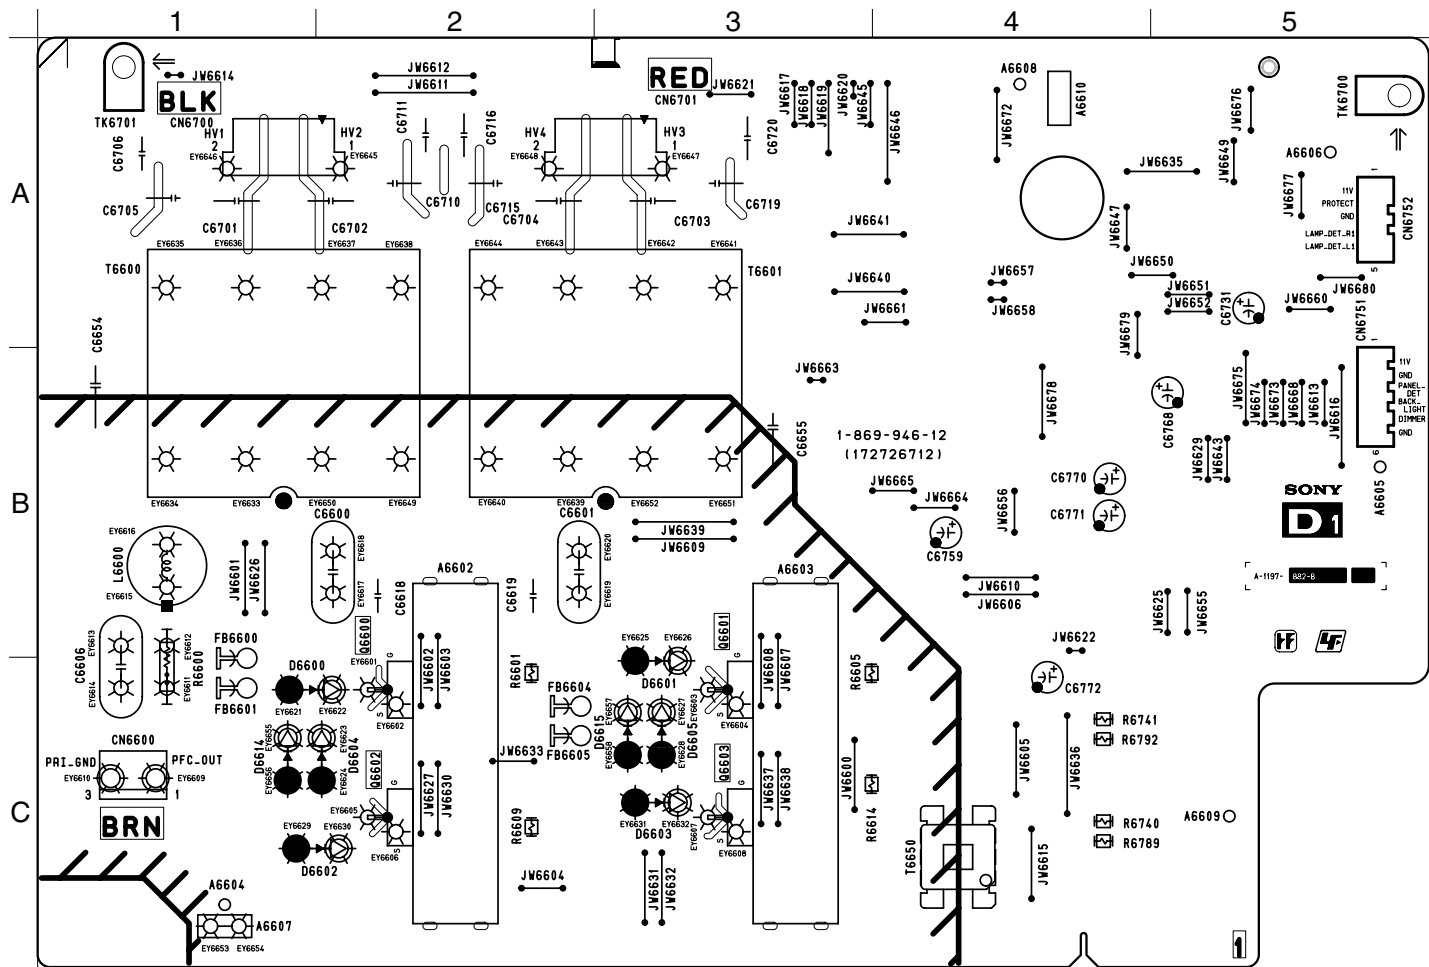

<COMPONENT SIDE>

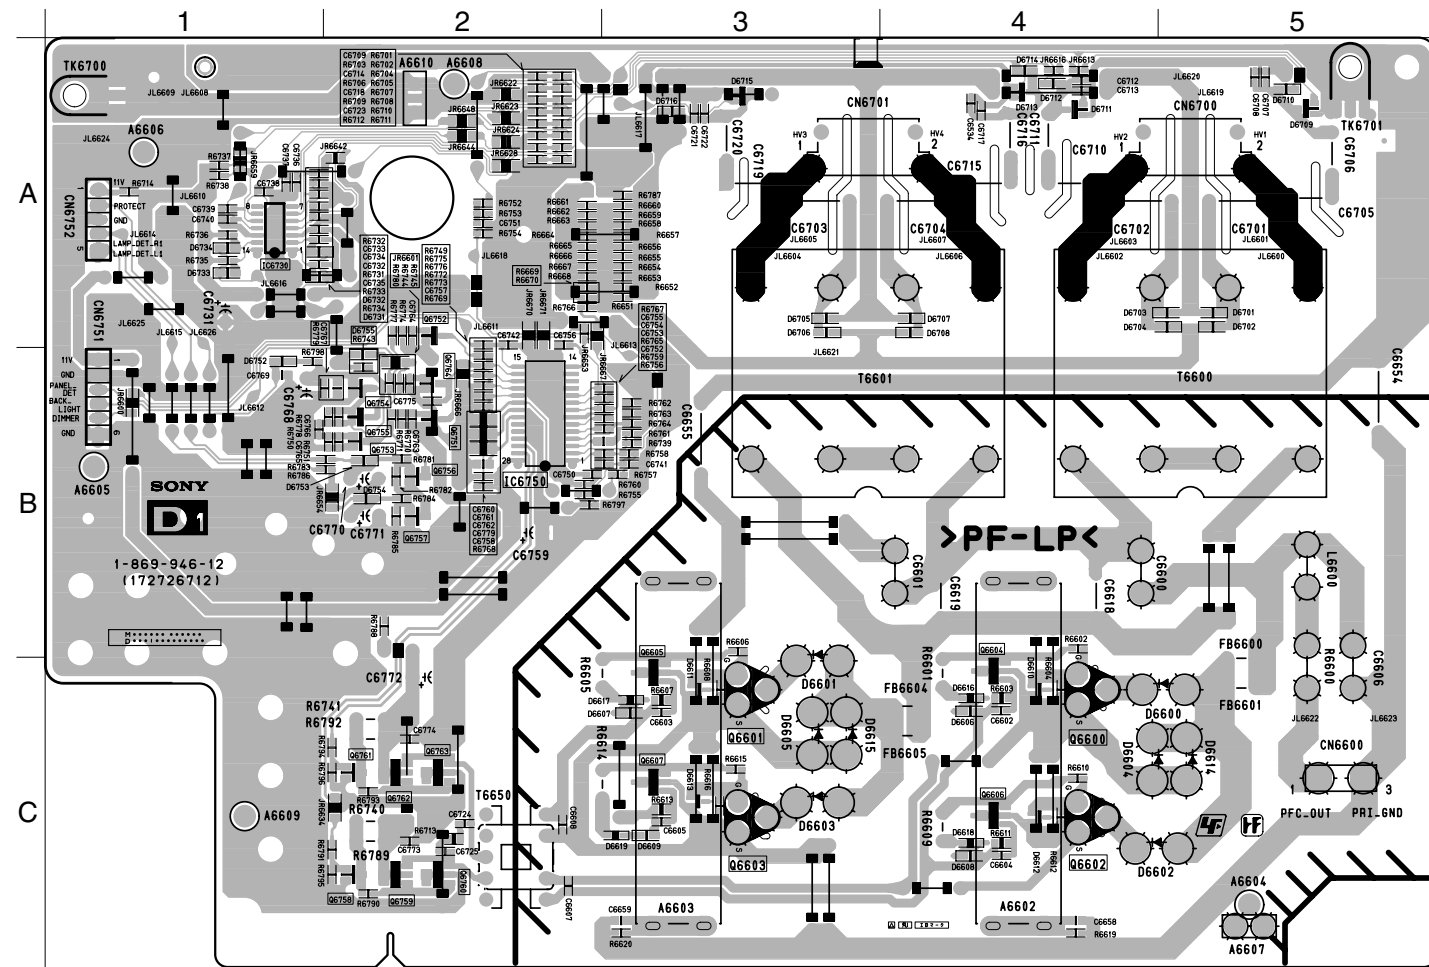


<CONDUCTOR SIDE>

D1 BOARD SEMICONDUCTOR LOCATION

IC		DIODE		TRANSISTOR	
(Component Side)	(Conductor Side)	(Component Side)	(Conductor Side)	(Component Side)	(Conductor Side)
IC6730	A-1	D6600	C-1	Q6600	C-2
IC6750	B-2	D6601	C-3	Q6601	C-3
		D6602	C-1	Q6602	C-2
		D6603	C-3	Q6603	C-3
		D6604	C-2	Q6604	C-4
		D6605	C-3	Q6605	C-3
		D6606	C-4		
		D6607	C-3		
		D6608	C-4		
		D6609	C-3		
		D6610	C-4		
		D6611	C-3		
		D6612	C-4		
		D6710	A-5		
		D6711	A-4		
		D6712	A-4		
		D6713	A-4		
		D6714	A-4		
		D6715	A-3		
		D6716	A-3		
		D6731	A-1		
		D6732	A-1		
		D6733	A-1		
		D6734	A-1		
		D6752	B-1		
		D6753	B-2		
		D6754	B-2		
		D6755	B-2		

*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 2-4)


(4) Schematic Diagram of D2 Board (KLV-46X200A/46X250A)

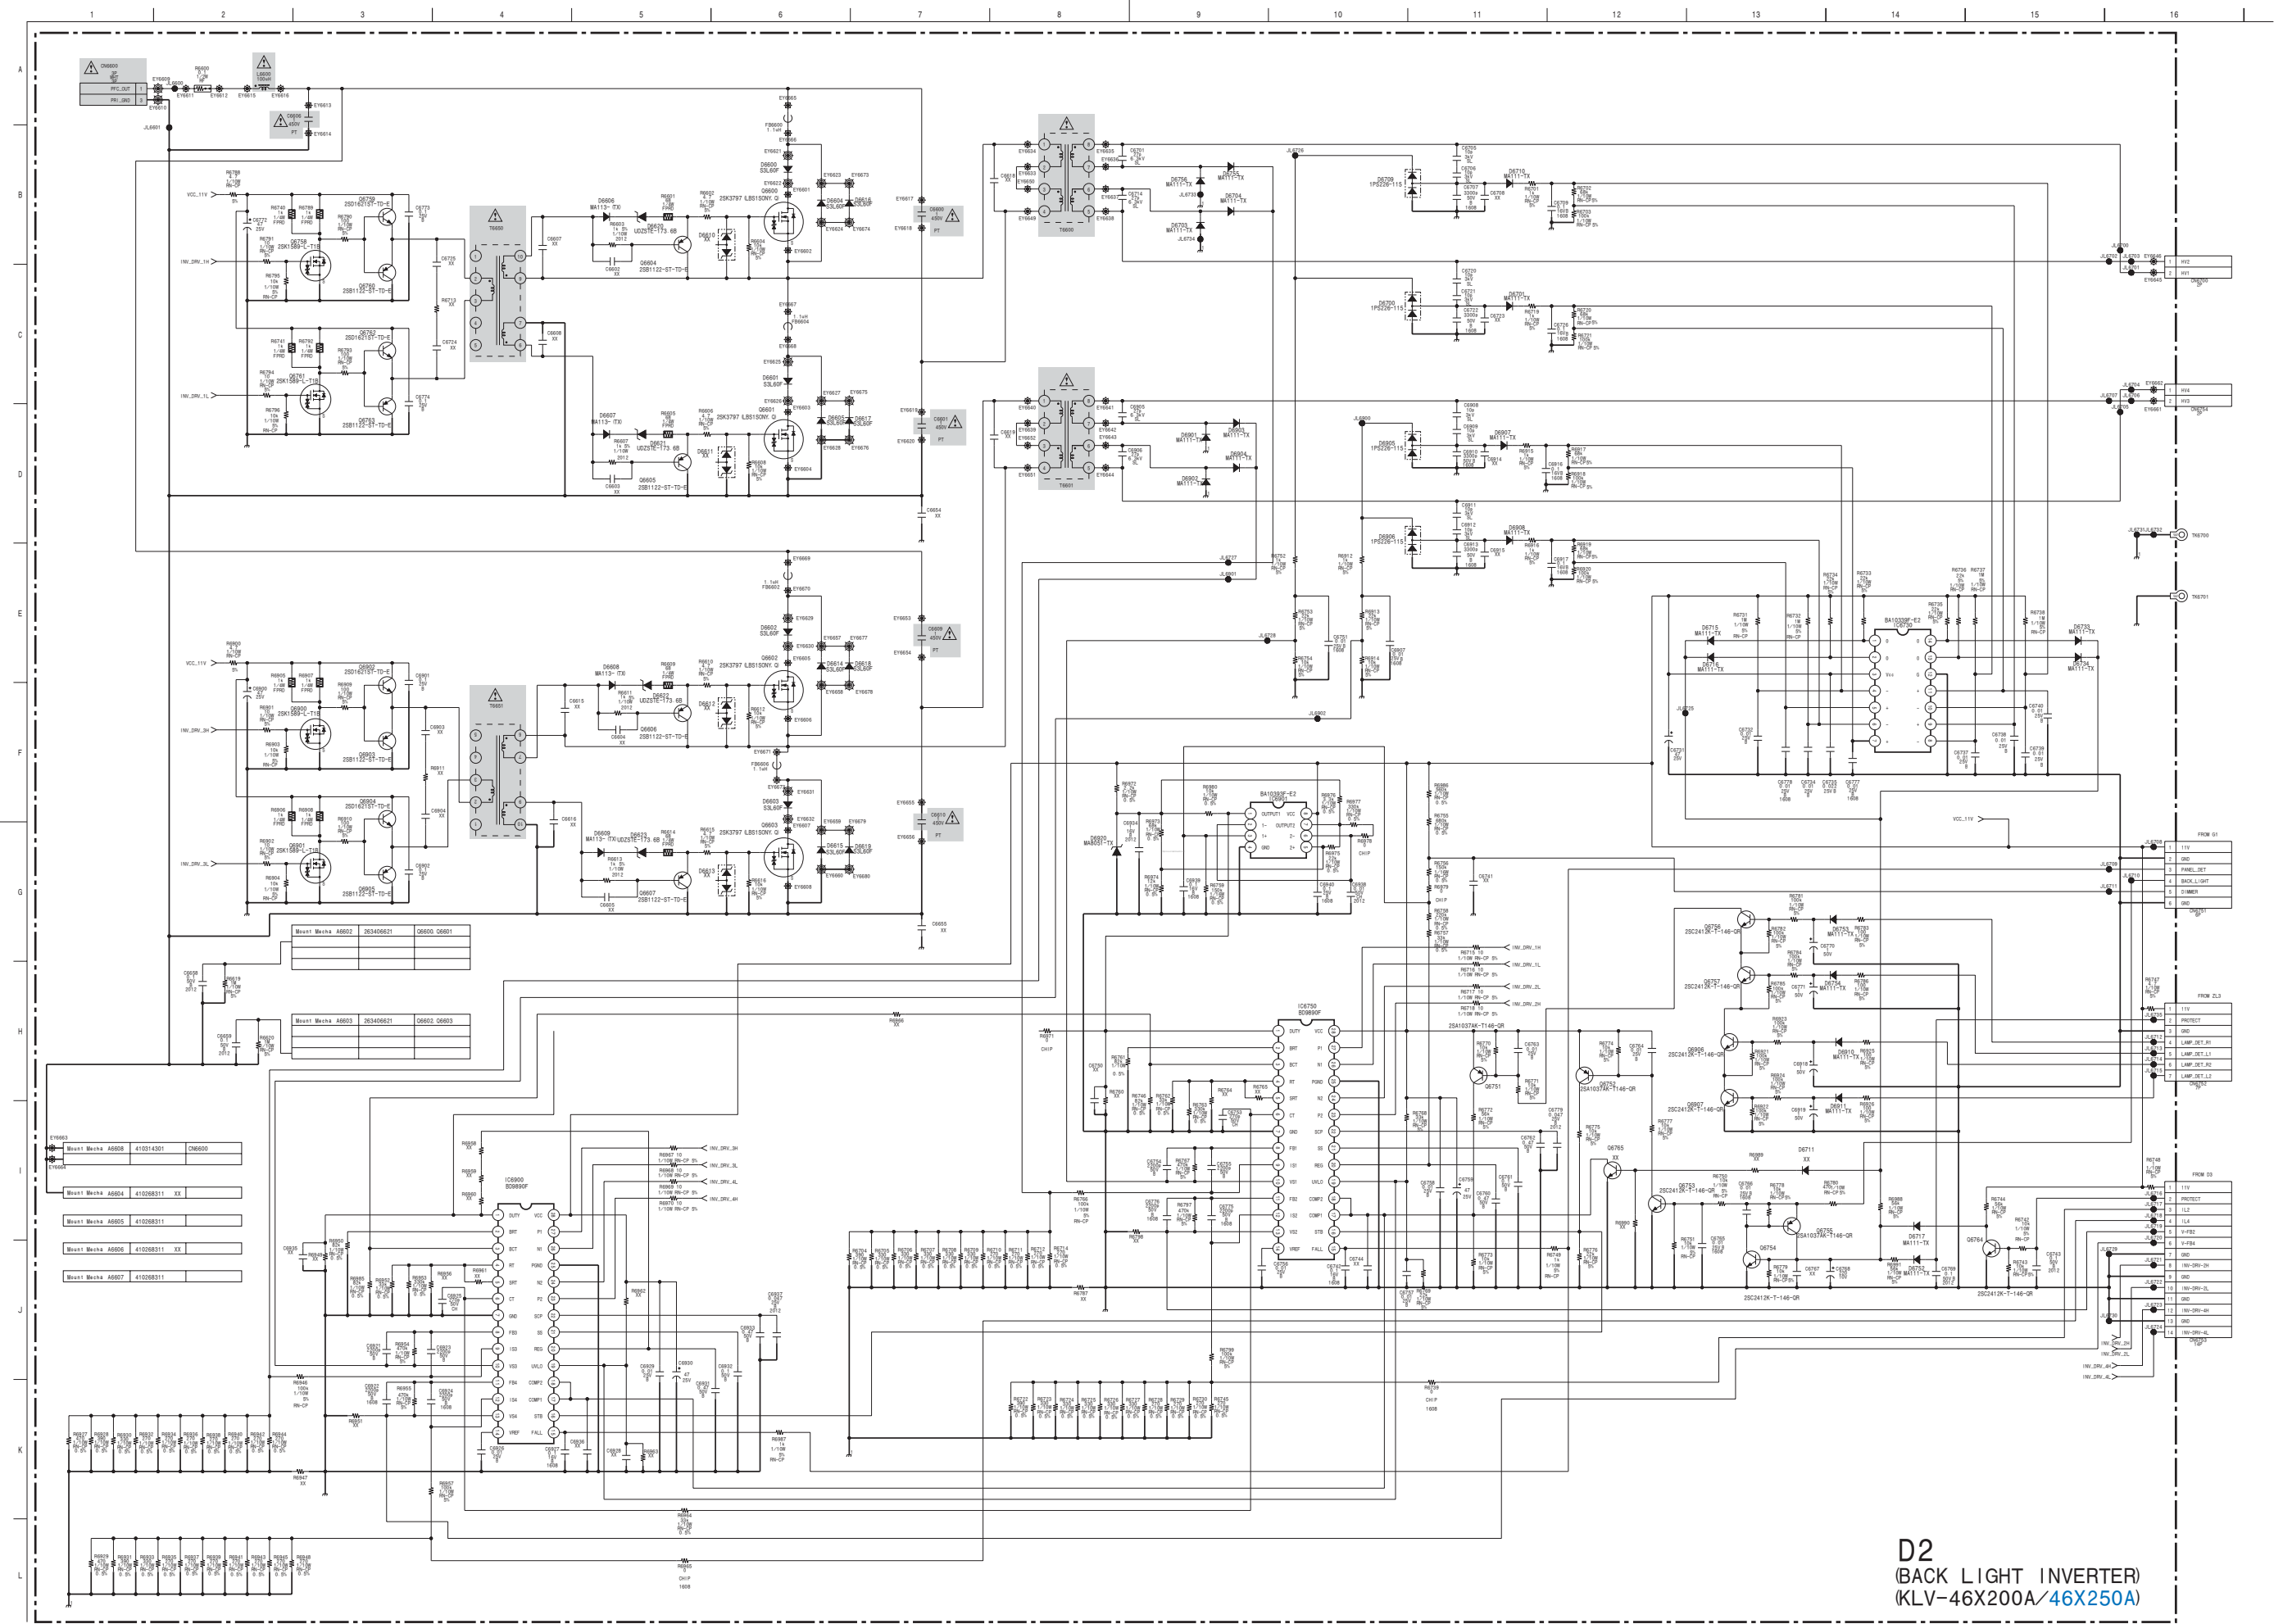

[illegible]


KLV-40/46X200A, 40/46X250A (GA) 2-36

(5) Schematic Diagram of D3 Board (KLV-46X200A/46X250A)

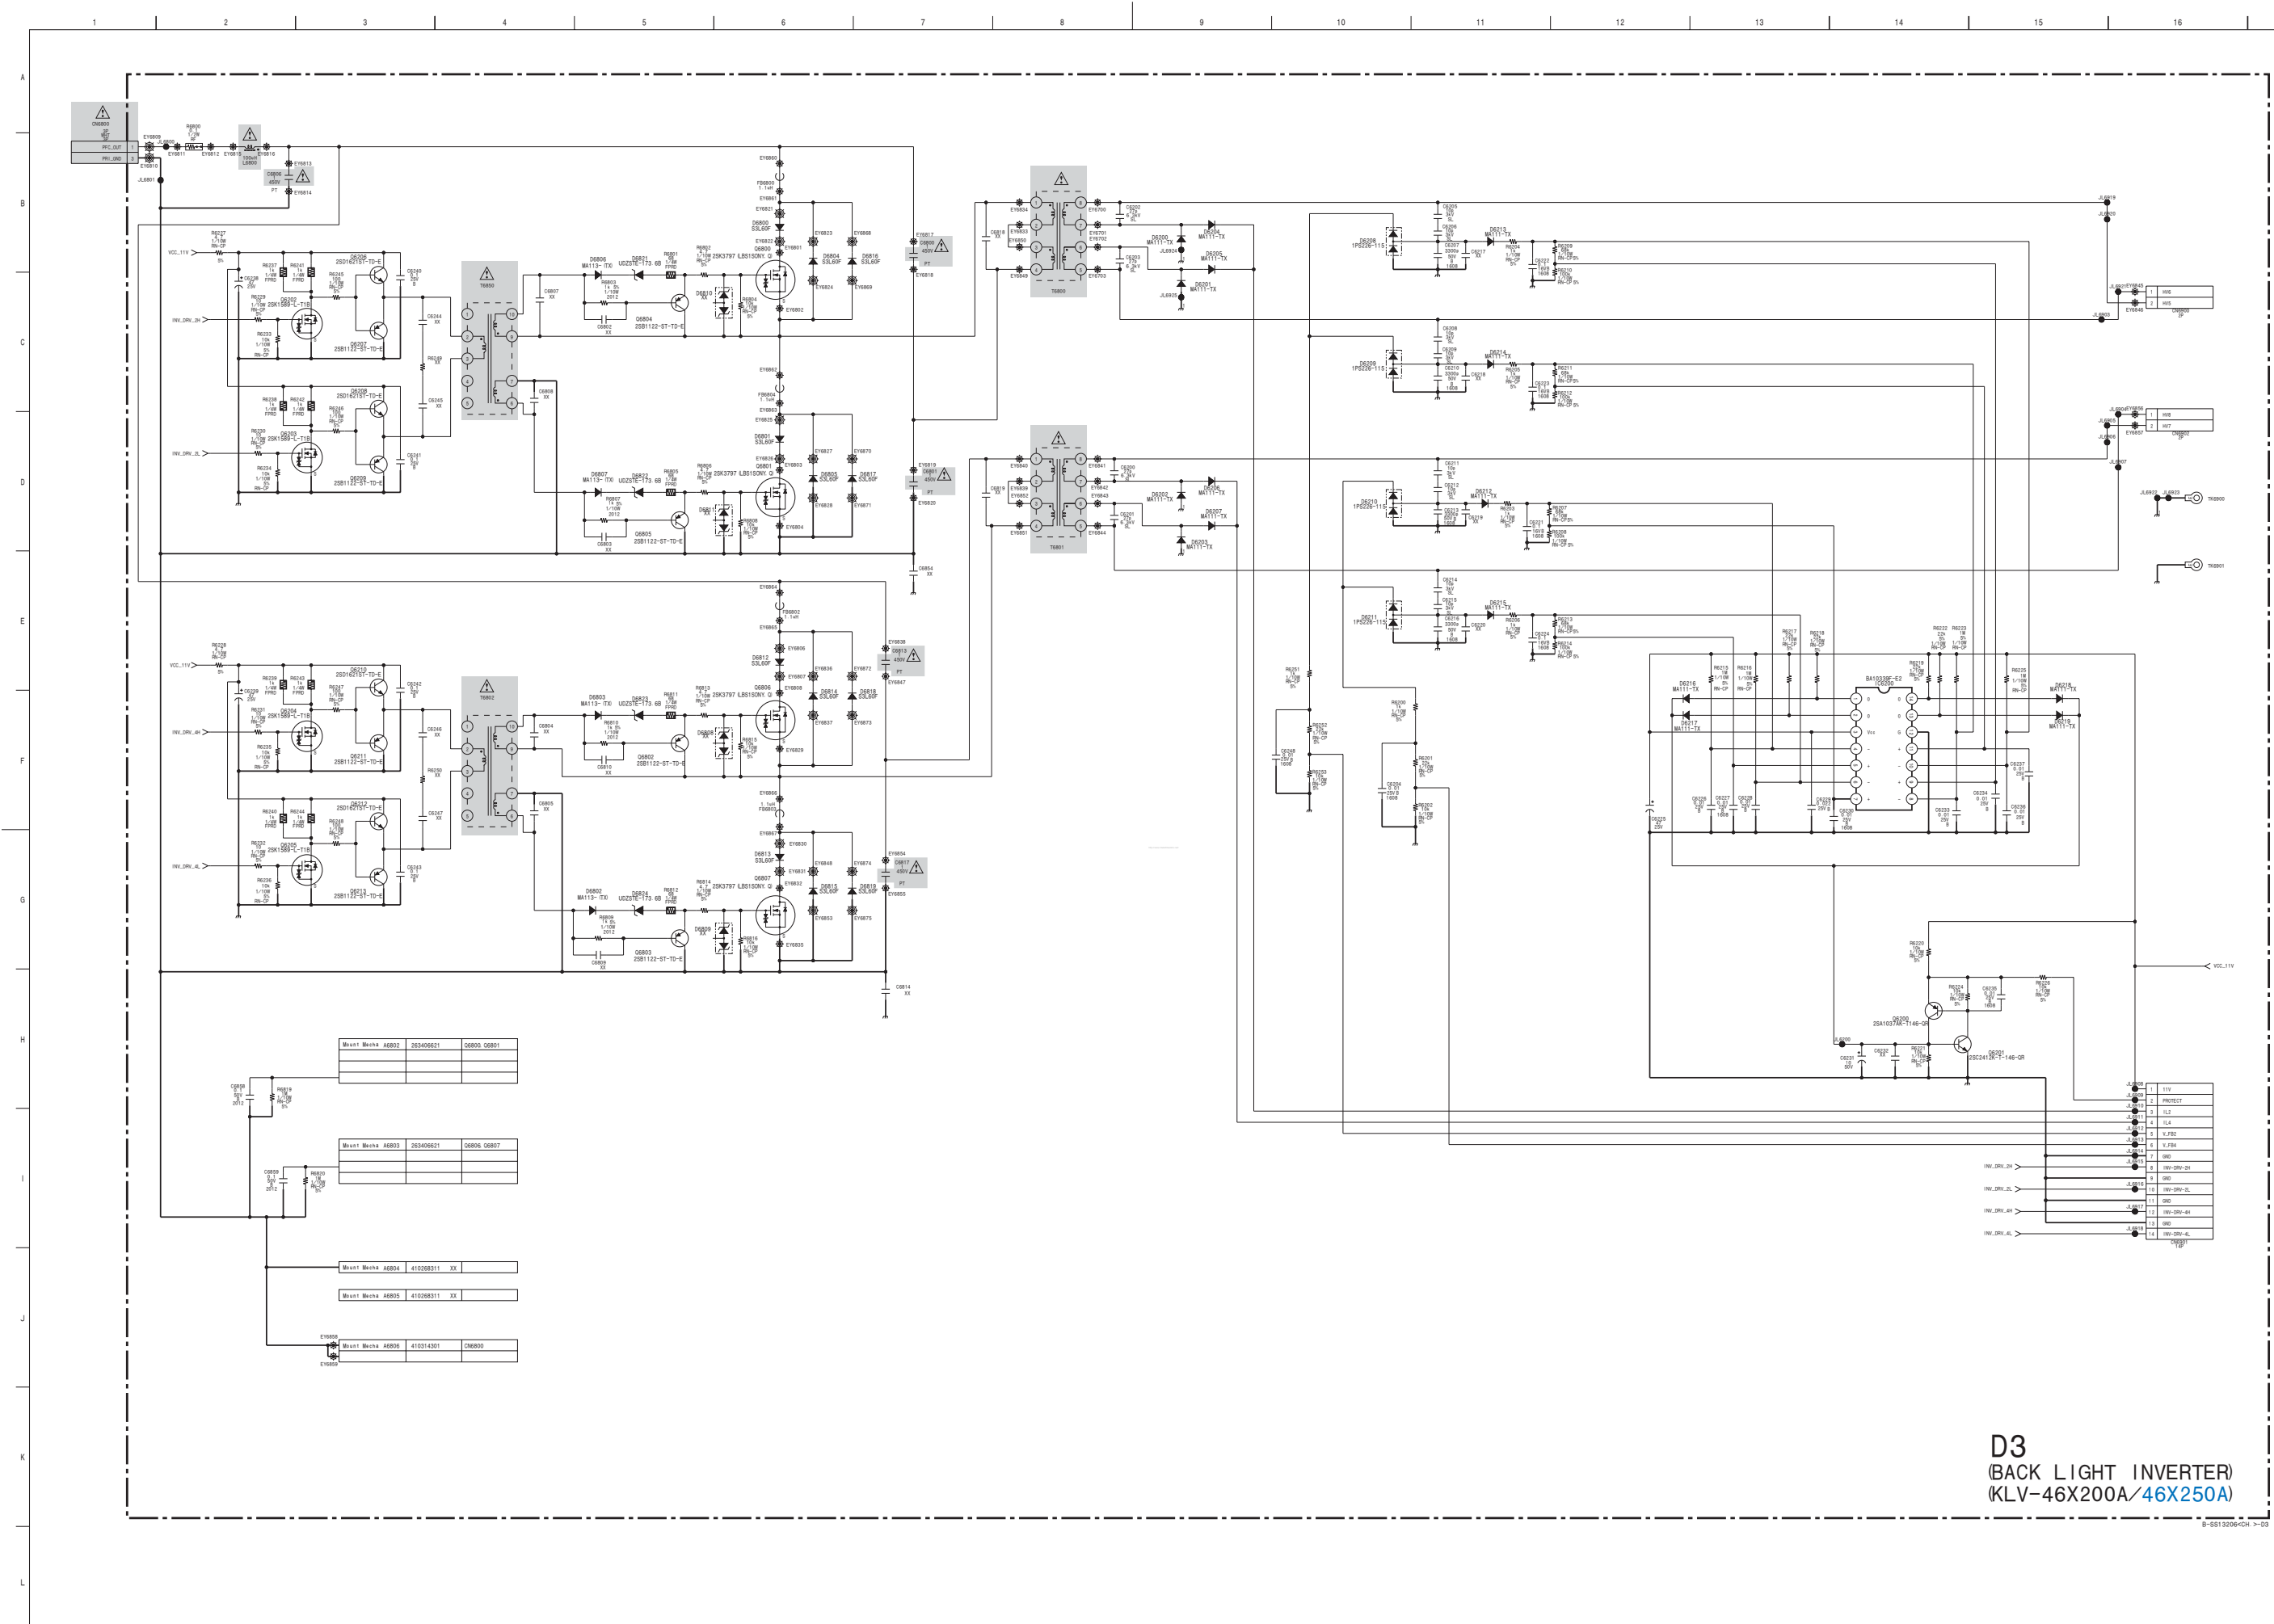


D3
BACK LIGHT INVERTER
KLV-46X200A/46X250A

— D3 BOARD —

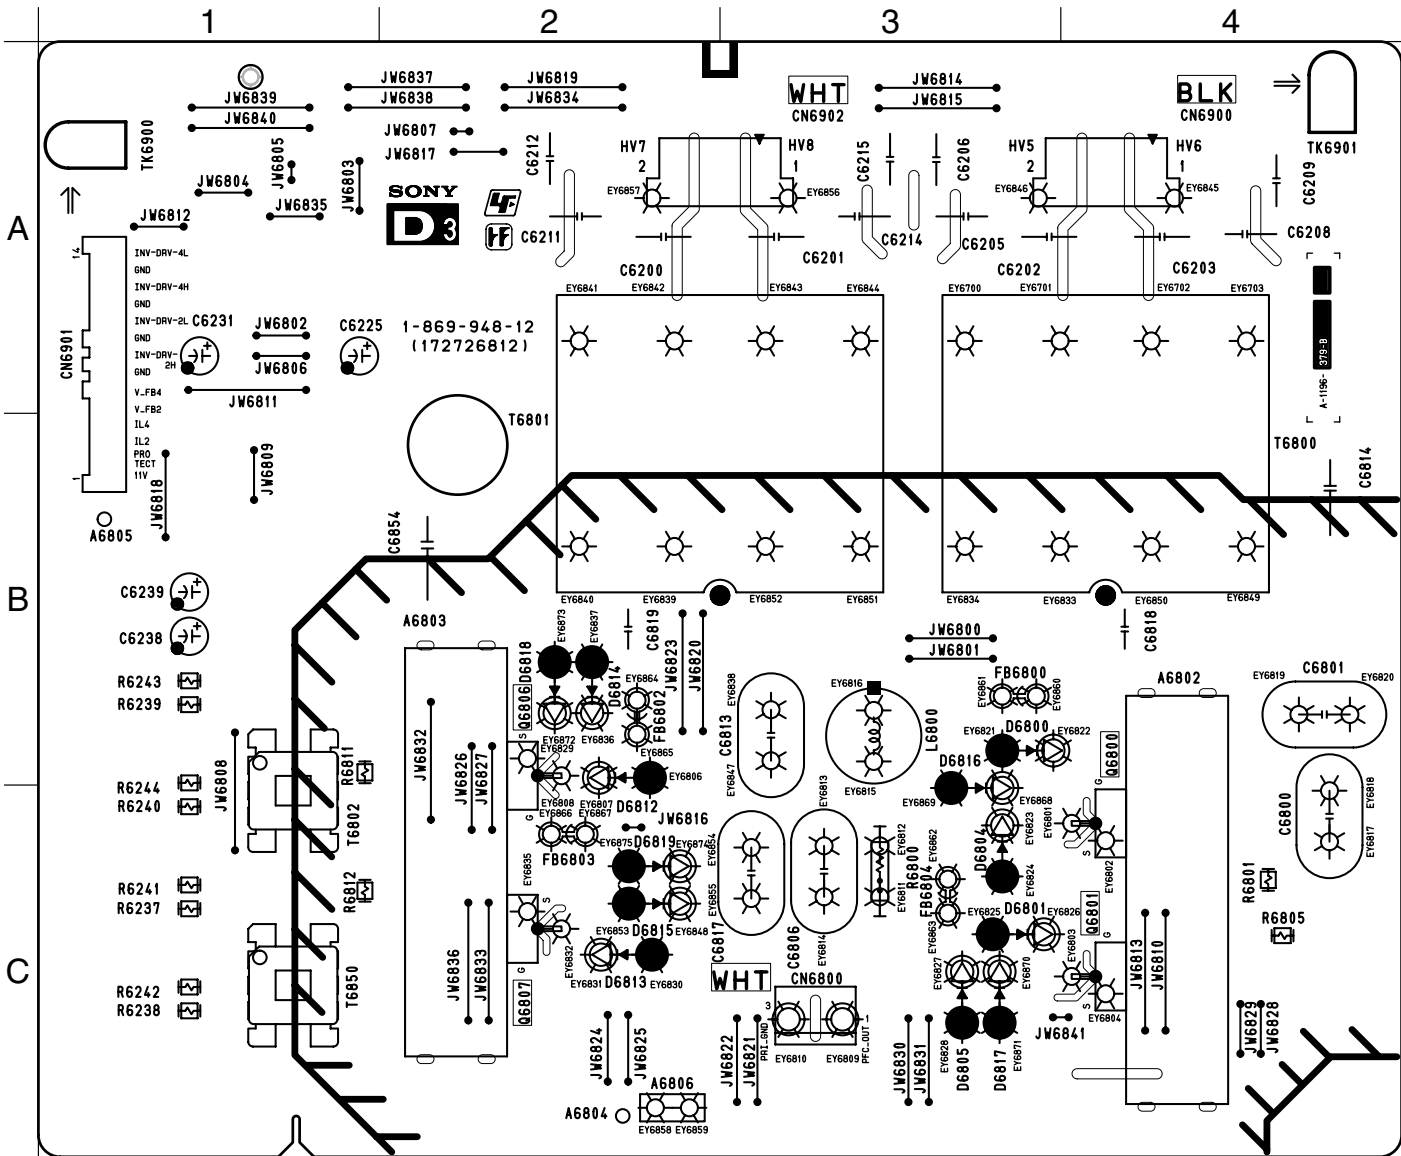

<COMPONENT SIDE>

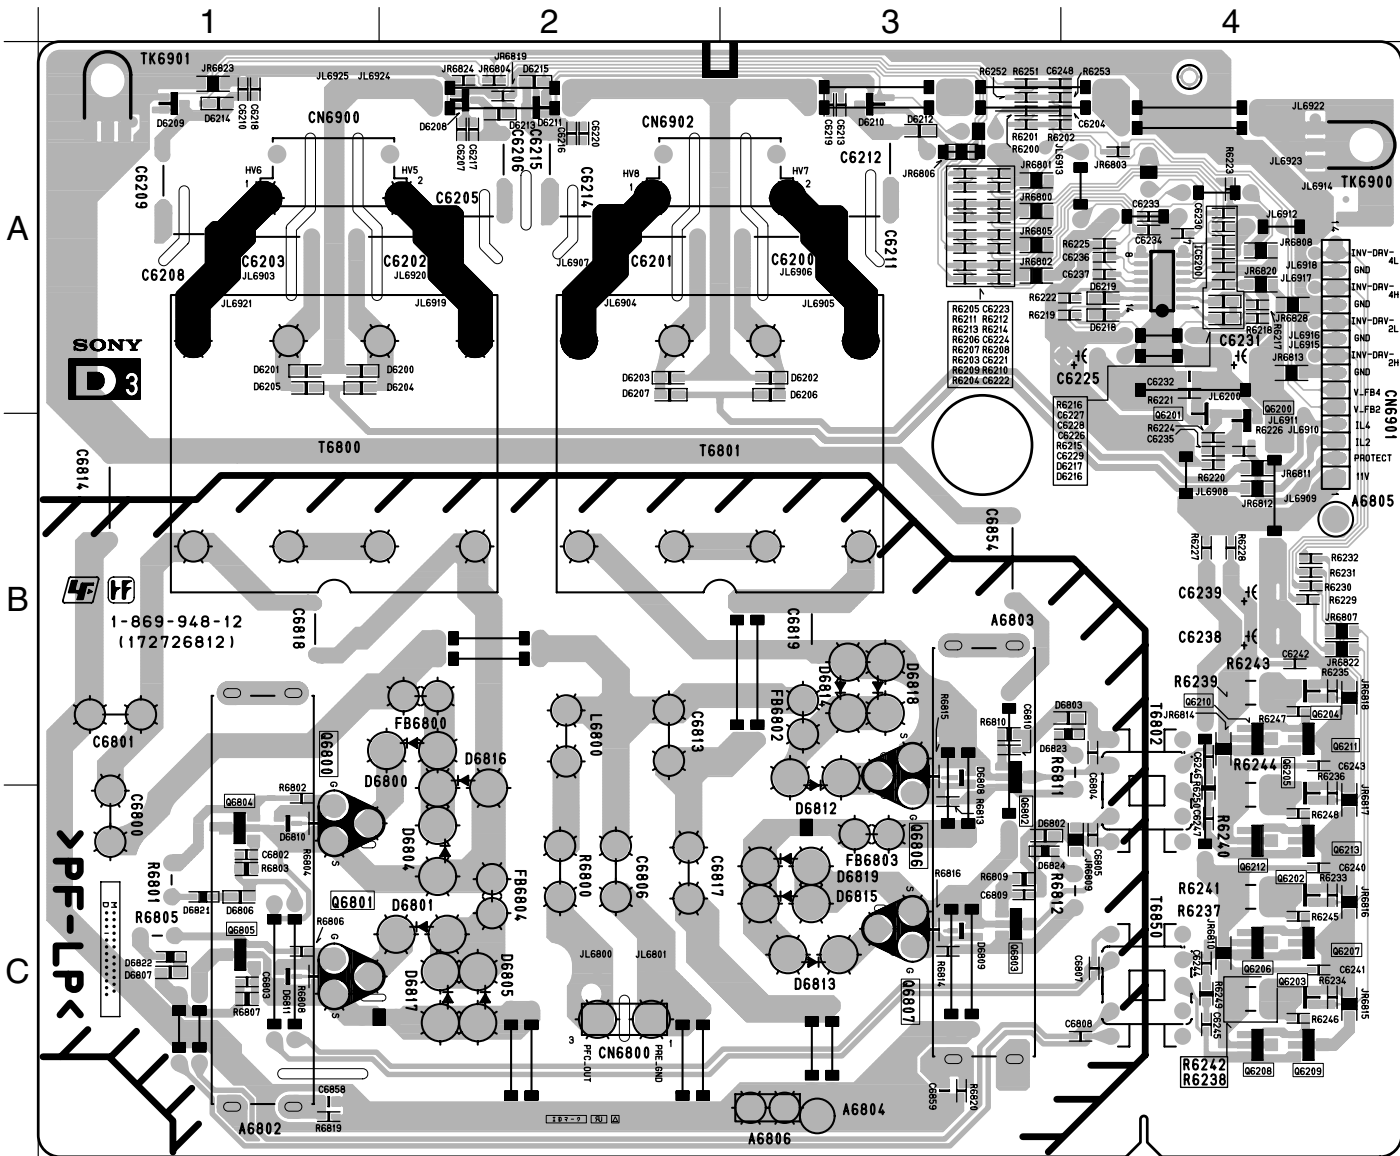



<CONDUCTOR SIDE>

• D3 BOARD SEMICONDUCTOR LOCATION

IC		DIODE		D6213		D6809	
(Component Side)	(Conductor Side)	(Component Side)	(Conductor Side)	(Component Side)	(Conductor Side)	(Component Side)	(Conductor Side)
IC6200	A-4	Q6206	C-4 ②	D6213	A-2 ③	D6809	C-3 ⑥
		Q6207	C-4 ②	D6214	A-1 ③	D6810	C-1 ⑥
		Q6208	C-4 ②	D6215	A-2 ③	D6811	C-1 ⑥
		Q6209	C-4 ②	D6216	A-4 ③	D6812	B-2 -
		Q6210	B-4 ②	D6217	A-4 ③	D6813	C-2 -
TRANSISTOR		Q6211	B-4 ②	D6218	A-4 ③	D6814	B-2 -
		Q6212	C-4 ②	D6219	A-4 ③	D6815	C-2 -
		Q6213	C-4 ②	D6800	B-3 -	D6816	C-3 -
		Q6800	C-4 -	D6801	C-3 -	D6817	C-3 -
		Q6801	C-4 -	D6802	C-3 ③	D6818	B-2 -
		Q6802	B-3 ②	D6803	B-4 ③	D6819	C-2 -
		Q6803	C-3 ②	D6804	C-3 -		
		Q6804	C-1 ②	D6805	C-3 -		
		Q6805	C-1 -	D6806	C-1 ③		
		Q6806	C-2 -	D6807	C-1 ③		
		Q6807	C-2 -	D6808	B-3 ⑥		

*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 2-4)




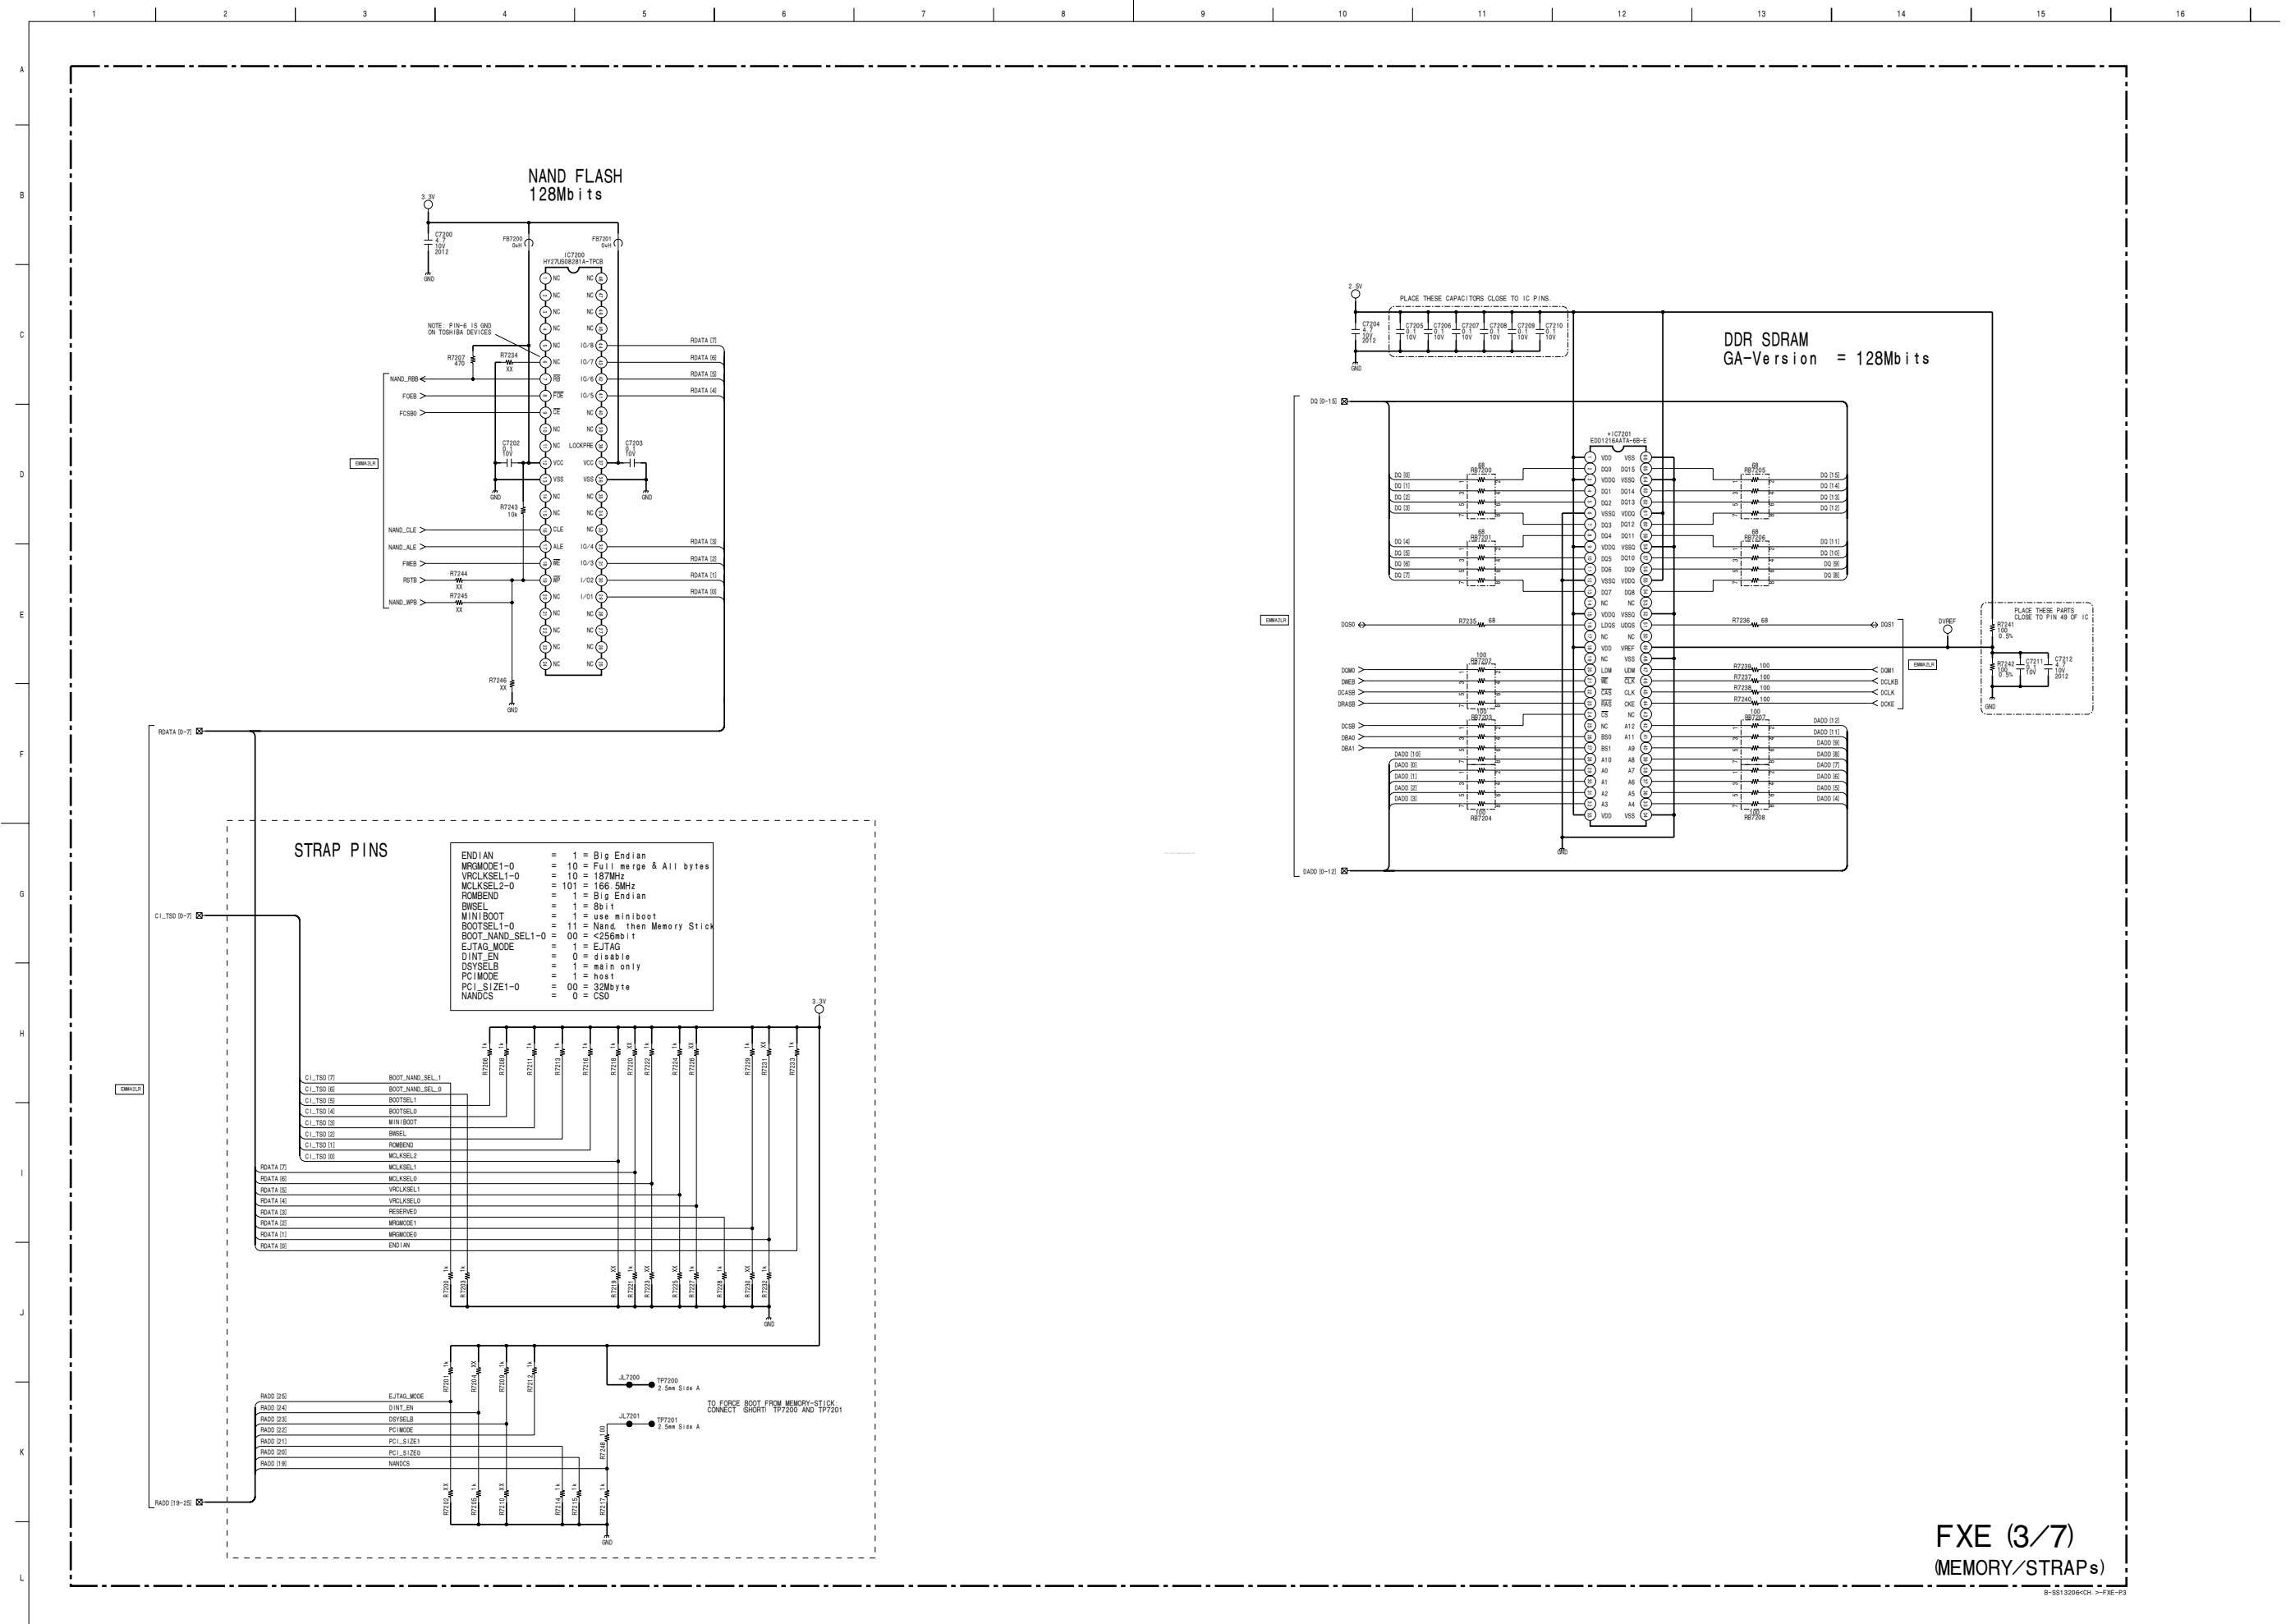


FXE (3/7)
MEMORY/STRAPS)

B-881 8206-01 -> FXE-P3







	GA/US Part Name	Value
C7137	116485081	XX
C7138	116485091	XX
C7139	116485081	XX
C7140	111772091	XX
C7141	110090711	XX
F87100	140083421	XX
R7102	121899081	0
R7119	121899081	0
R7120	121899081	0
R7121	121899091	0
R7133	121896551	XX
R7134	121896551	10k
R7135	121896551	XX
R7136	121896551	XX
R7137	121896551	10k
R7138	121896551	10k
R7139	121896551	XX
R7140	121896551	10k
R7144	12088791	XX
R7145	120888331	XX
R7146	121896551	XX
R7147	120887961	XX
R7148	121894781	XX
R7149	121894781	XX
R7150	121894781	XX
R7151	121894181	XX
R7152	121893781	XX
R7153	121896551	10k
R7154	121896551	XX
R7155	121896551	XX
R7158	121896551	XX
R7169	121893781	XX
R7170	121899091	0
R7171	121899091	0
R7173	121896551	XX
R7176	121899091	0
R7181	121893781	XX
R87104	123471021	XX

	GA/US Part	Name	Value
A7300	181564021	XX	
C7301	110000711	XX	
C7302	116493781	XX	
C7303	110000711	XX	
C7303	110000711	XX	
C7304	110000711	XX	
C7305	110000711	XX	
C7306	110000711	XX	
C7307	110000711	XX	
C7308	110000711	XX	
C7309	110000711	XX	
C7310	110000711	XX	
C7311	116509081	XX	
C7312	110000711	XX	
C7313	116493781	XX	
C7314	110000711	XX	
QN7300	181564111	XX	
FB7300	140083421	XX	
FB7301	140083421	XX	
FB7302	140083421	XX	
FB7303	140083421	XX	
FB7304	140083421	XX	
FB7305	140083421	XX	
FB7306	140083421	XX	
FB7307	140083421	XX	
FB7308	146986921	XX	
FB7309	140083421	XX	
IC7300	670648011	XX	
IC7301	875952981	XX	
IC7302	670613201	XX	
IC7303	875952971	XX	
IC7304	875952971	XX	
IC7305	875952971	XX	
IC7306	875952971	XX	
IC7307	875952971	XX	
IC7308	875952971	XX	
IC7309	670579001	XX	
IC7310	670648201	XX	
IR7300	121896581	XX	
IR7301	121894181	XX	
IR7302	121899981	XX	
IR7303	121894181	XX	
IR7304	121893781	XX	
IR7305	121893781	XX	
IR7306	121896581	XX	
IR7307	121896581	XX	
IR7308	121896581	XX	
IR7309	121896581	XX	
IR7310	121896581	XX	
IR7311	121896581	XX	
IR7312	121896581	XX	
IR7313	120887781	XX	
IR7314	121895381	XX	
IR7315	121895381	XX	
IR7316	121895381	XX	
IR7317	121895381	XX	
IR7318	121893781	XX	
IR7319	121895381	XX	
IR7320	121893781	XX	
IR7321	121893781	XX	
IR7322	121893781	XX	
IR7323	121893781	XX	
IR7324	121893781	XX	
IR7325	121894581	XX	
IR7326	121899061	XX	

	GA/US	Part Name	Value
C7409	11646781	XX	
C7410	11646781	XX	
C7411	111772091	XX	
C7412	111772091	XX	
C7413	110090711	XX	
C7414	110090711	XX	
C7415	110090711	XX	
C7416	110090711	XX	
C7417	110061191	XX	
C7418	110061191	XX	
C7419	110061191	XX	
C7420	116590891	XX	
C7421	116590891	XX	
C7422	116485081	XX	
C7423	116485081	XX	
C7424	116485081	XX	
C7425	110090711	XX	
C7426	110059791	XX	
C7427	111772091	XX	
C7428	110090711	XX	
C7429	116485081	XX	
C7430	116485081	XX	
C7431	116485081	XX	
C7432	110090711	XX	
FB7401	140083421	XX	
FB7402	140083421	XX	
LC7403	670780801	XX	
LC7404	875928340	XX	
LC7405	670327011	XX	
LC7406	141200841	XX	
LC7407	141200841	XX	
LC7408	655023701	XX	
LC7409	655023701	XX	
LC7410	655023701	XX	
LC7411	872901005	XX	
LC7412	872901005	XX	
LC7413	872901005	XX	
LC7414	872901005	XX	
LC7415	872901005	XX	
LC7416	872901005	XX	
LC7417	872901005	XX	
LC7418	872901005	XX	
LC7419	872901005	XX	
LC7420	872901005	XX	
LC7421	872901005	XX	
LC7422	872901005	XX	
LC7423	872901005	XX	
LC7424	872901005	XX	
LC7425	872901005	XX	
LC7426	872901005	XX	
LC7427	872901005	XX	
LC7428	872901005	XX	
LC7429	872901005	XX	
LC7430	872901005	XX	
LC7431	872901005	XX	
LC7432	872901005	XX	
LC7433	872901005	XX	
LC7434	872901005	XX	
LC7435	872901005	XX	
LC7436	872901005	XX	
LC7437	872901005	XX	
LC7438	872901005	XX	
LC7439	872901005	XX	
LC7440	872901005	XX	
LC7441	872901005	XX	
LC7442	872901005	XX	
LC7443	872901005	XX	
LC7444	872901005	XX	
LC7445	872901005	XX	
LC7446	872901005	XX	
LC7447	872901005	XX	
LC7448	872901005	XX	
LC7449	872901005	XX	
LC7450	872901005	XX	
LC7451	872901005	XX	
LC7452	872901005	XX	
LC7453	872901005	XX	
LC7454	872901005	XX	
LC7455	872901005	XX	
LC7456	872901005	XX	
LC7457	872901005	XX	
LC7458	872901005	XX	
LC7459	872901005	XX	
LC7460	872901005	XX	
LC7461	872901005	XX	
LC7462	872901005	XX	
LC7463	872901005	XX	
LC7464	872901005	XX	
LC7465	872901005	XX	
LC7466	872901005	XX	
LC7467	872901005	XX	
LC7468	872901005	XX	
LC7469	872901005	XX	
LC7470	872901005	XX	

	GA/AUS Part Name	Value
A7500	404240802	XX
C7500	110090711	XX
C7501	110059791	XX
C7502	116857591	XX
C7503	110059791	XX
C7504	110090711	XX
C7505	110091111	XX
C7506	110059791	XX
C7540	110091111	XX
C7541	110059791	XX
C7542	110059791	XX
C7543	110091111	XX
C7544	110059791	XX
C7545	110059791	0.1
C7546	110091111	4.7
C7547	110091111	XX
C7548	110091111	XX
C7549	110059791	0.1
C7550	110059791	0.1
C7553	110090711	XX
C7554	110090711	XX
C7555	116464781	XX
C7556	116464781	XX
C7557	116464781	XX
C7558	116464781	XX
C7559	116464781	XX
C7560	116464781	XX
C7561	116464781	XX
C7562	116464781	XX
Q7500	181945111	_
Q7501	182023511	XX
D7510	671108197	XX
D7511	878906921	0.0h
F87501	146986921	XX
F87502	146986921	XX
F87503	146986921	XX
F87508	146986921	XX
F87509	140083421	XX
F87510	140083421	XX
F87511	140083421	XX
F87512	140083421	XX
F87513	140083421	XX
F87514	140083421	XX
F87515	140083421	XX
F87516	140083421	XX
F87517	140083421	XX
F87518	140083421	XX
F87519	140083421	XX
F87520	140083421	XX
F87521	140083421	XX
F87522	140083421	XX
F87523	140083421	XX
IC7502	670610601	XX
PS7500	153365141	XX
PS7501	153365141	1.6A
RT530	120889181	XX
RT531	120886581	XX
TS530	120889081	XX

	GA/AUS Part Name	Value
IC7201	670780901	—


PHASE VARIATION:
TRIAL & MP

	Trial Part Name	Value
CN7400	181871421	—
Q7413	872902743	—
Q7414	872902743	—
R7479	121896181	4.7k
R7480	121896581	10k

	Trial Part Name	Value
D7509	871905307	—
R7523	121894881	390

R-SS13206<CH.>-FXE-P7


FXE BOARD (A)

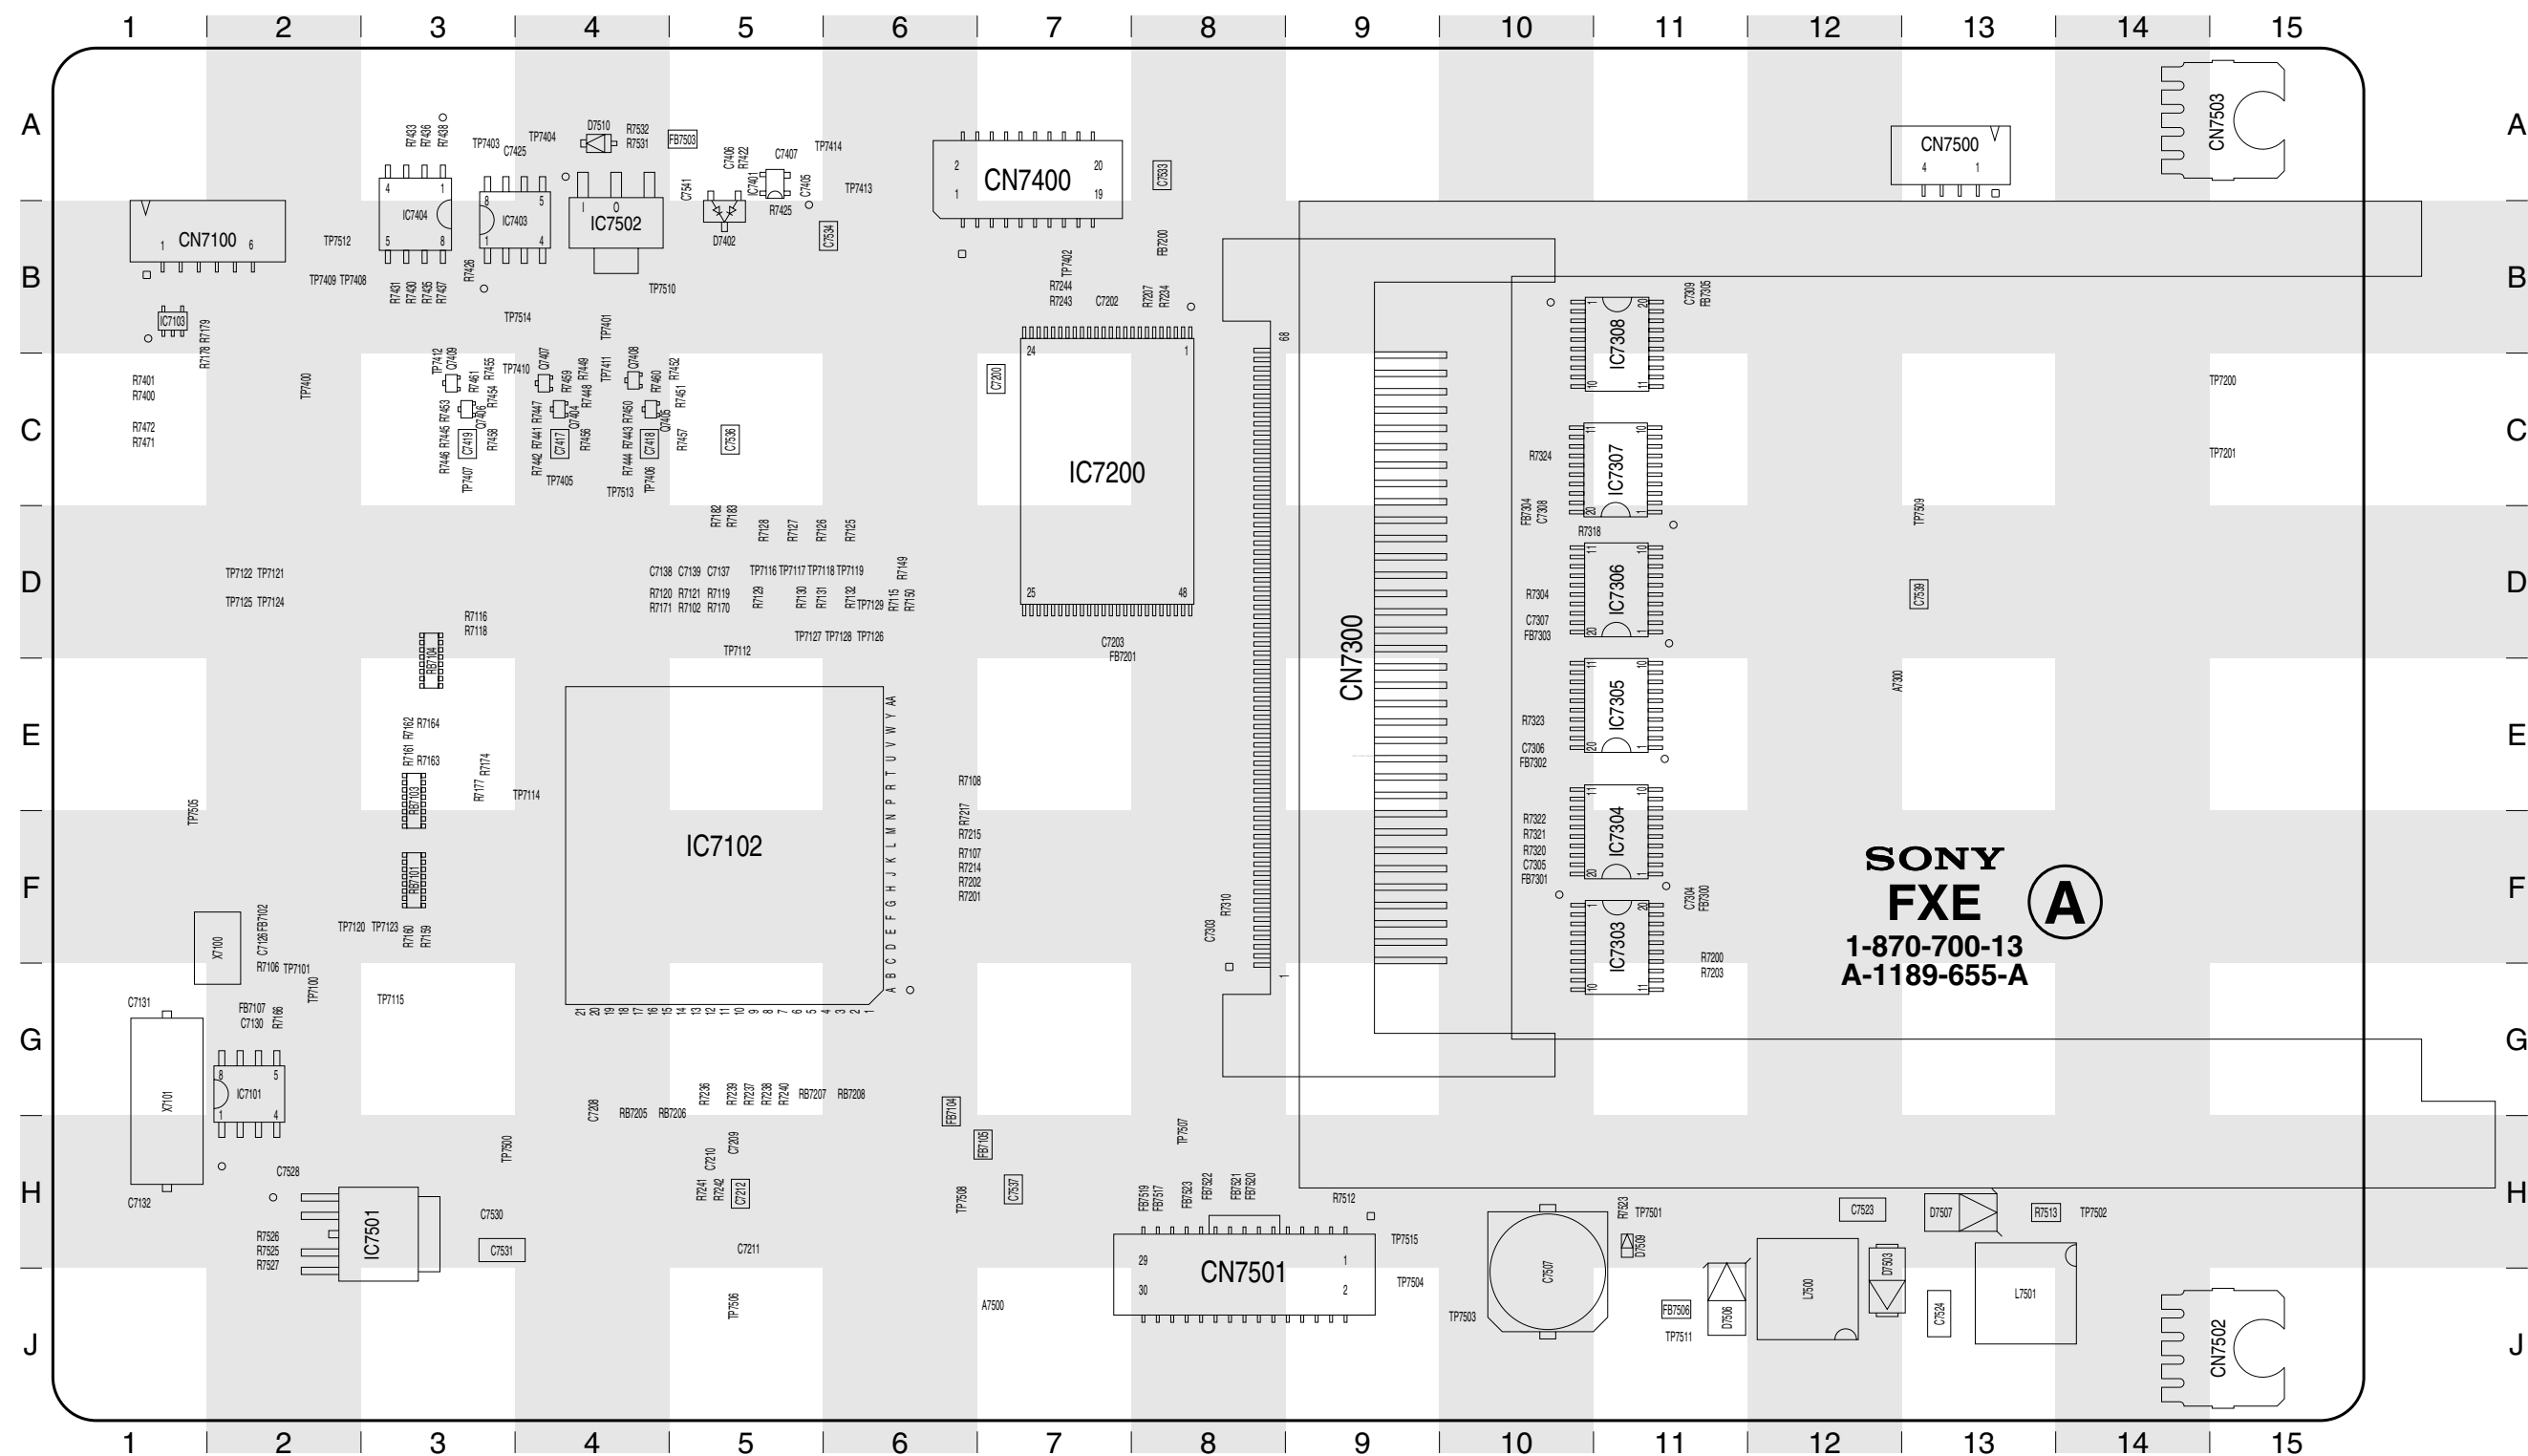

SONY
FXE 
1-870-700-13
A-1189-655-A


— FXE BOARD —

FXE BOARD (B)

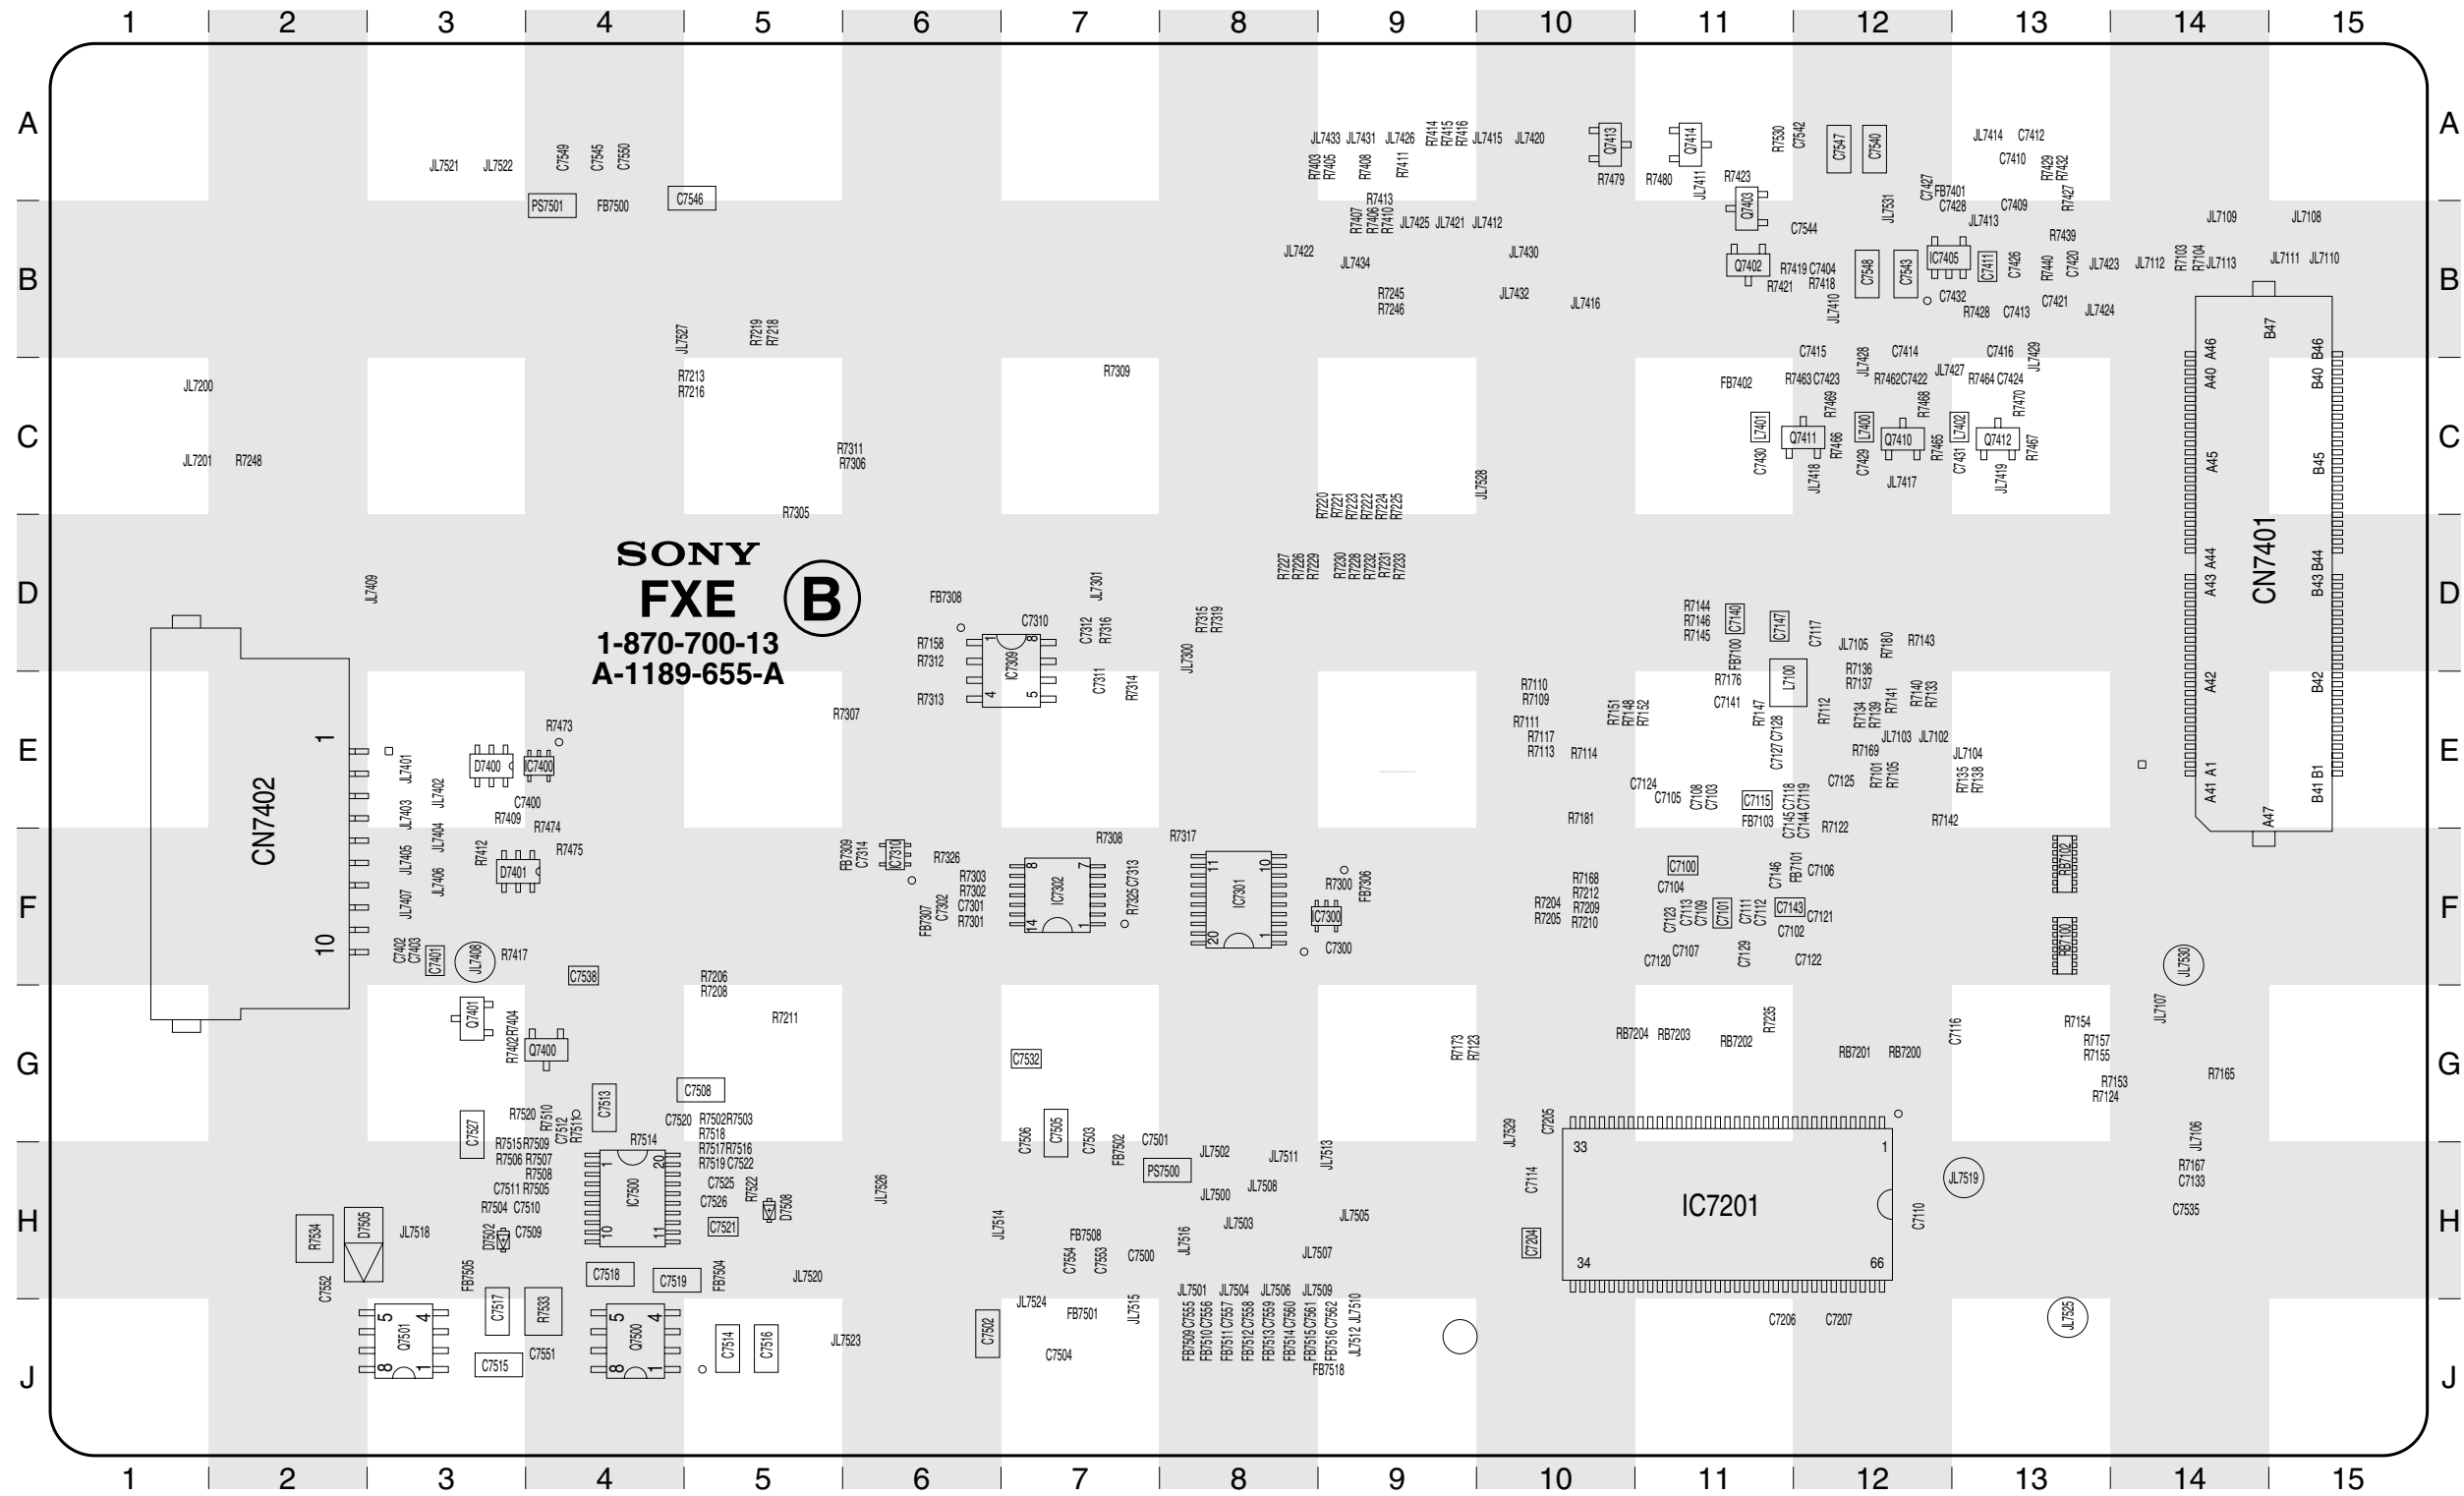

<CONDUCTOR SIDE>

(7) Schematic Diagram of G1 Board

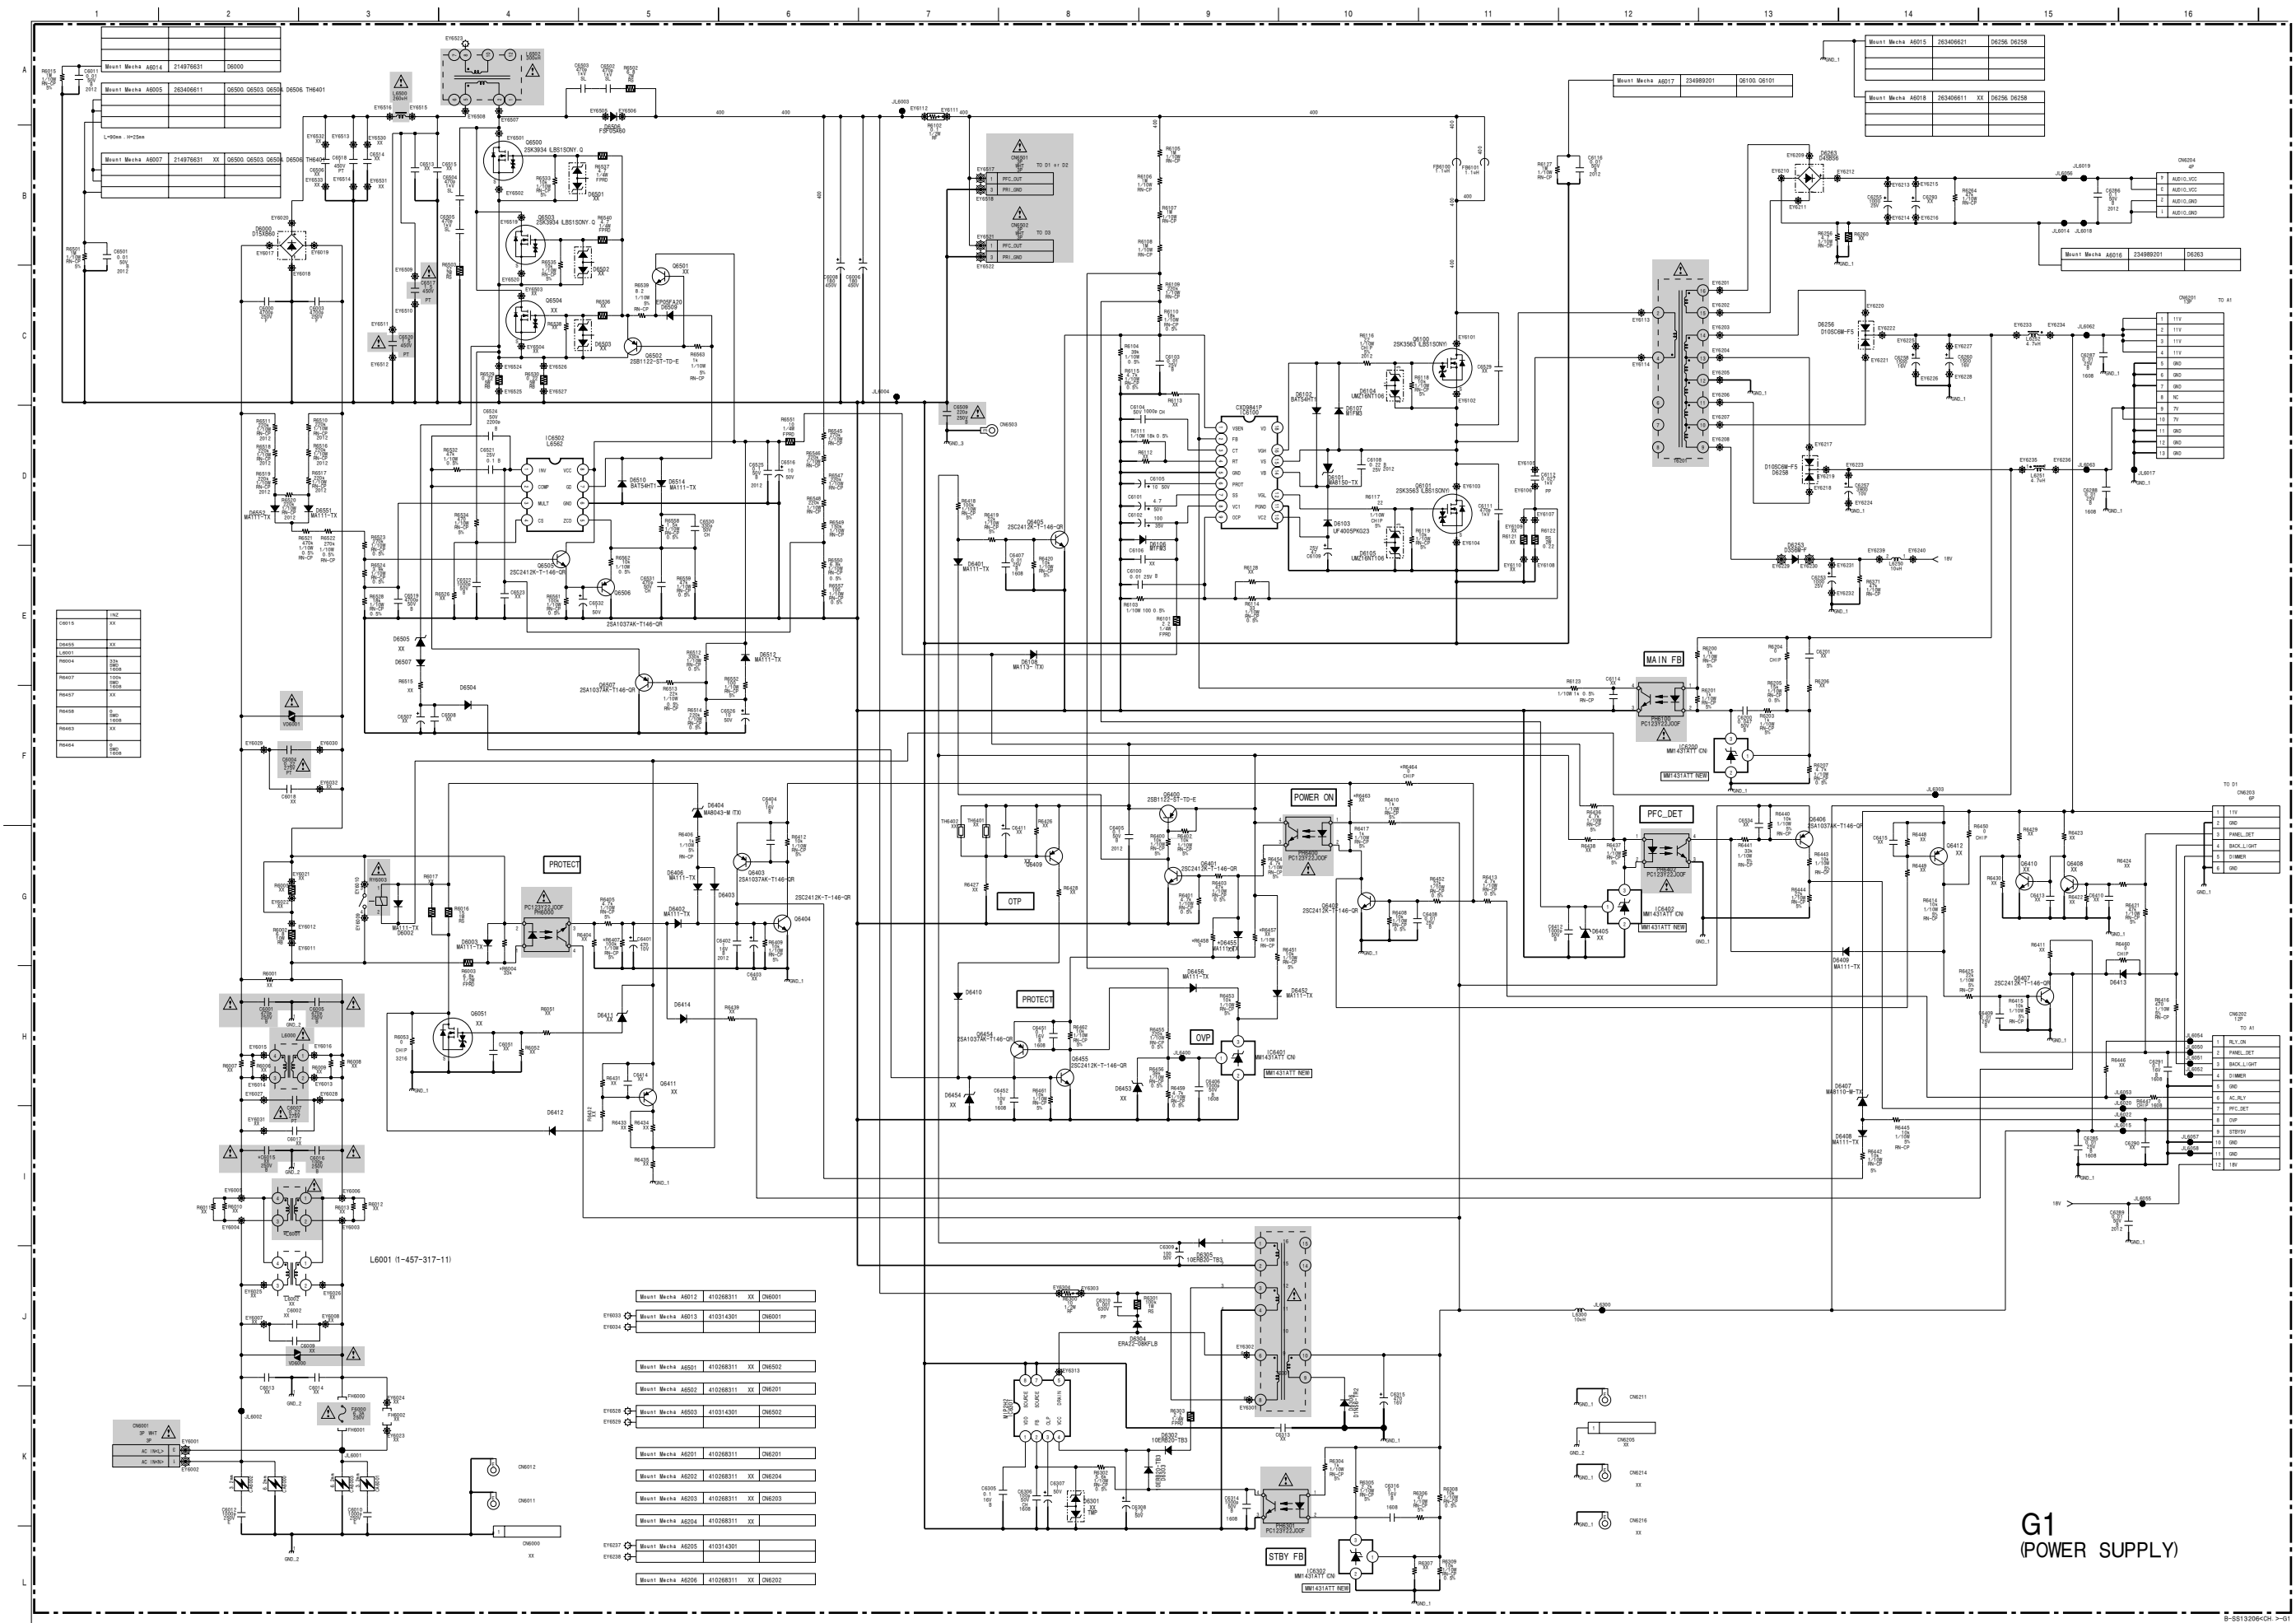



IC		TRANSISTOR				DIODE									
(Component Side)	(Conductor Side)	(Component Side)	(Conductor Side) *			(Component Side)	(Conductor Side) *								
IC6100	B-6	Q6051 *	E-6	Q6404 *	E-5	Q6455 *	C-3	D6105 *	C-2	D6303	D-3	D6407 *	E-5	D6454 *	C-3
IC6200	D-6	Q6100	C-6	Q6405 *	B-1	Q6500	A-3	D6106 *	B-2	D6304	D-2	D6408 *	E-5	D6455 *	D-3
IC6301	D-3	Q6101	C-5	Q6406 *	D-3	Q6501 *	B-4	D6107 *	C-1	D6305	D-3	D6409 *	E-4	D6456 *	D-3
IC6302	E-3	Q6400 *	C-3	Q6407 *	E-4	Q6502 *	B-4	D6108 *	B-2	D6306	E-2	D6410 *	D-3	D6501 *	A-4
IC6401	C-4	Q6401 *	D-3	Q6408 *	E-4	Q6503	A-3	D6202 *	D-5	D6401 *	B-2	D6411 *	E-6	D6502 *	A-4
IC6402	D-3	Q6402 *	D-3	Q6409 *	C-3	Q6504	A-4	D6203 *	E-5	D6402 *	E-6	D6412 *	E-6	D6503 *	A-3
IC6502	B-4	Q6403 *	E-6	Q6410 *	E-4	Q6505 *	C-3	D6204 *	E-5	D6403 *	E-6	D6413 *	E-4	D6504 *	B-4
				Q6411 *	E-6	Q6506 *	B-3	D6205 *	E-4	D6404 *	E-6	D6414 *	E-6	D6505 *	B-4
				Q6412 *	E-4	Q6507 *	B-3	D6206 *	C-4	D6405 *	D-4	D6452 *	C-3	D6506	A-4
				Q6454 *	C-3			D6301 *	D-3	D6406 *	E-6	D6453 *	C-3	D6507 *	B-4
								D6104 *	C-1						

KLV-40/46X200A, 40/46X250A (GA) 2-49

1 2 3 4

A

B

C

D


E

F

H1
(KEY SWITCH)

B-SS13206<CH.>-H1


—H1 BOARD —

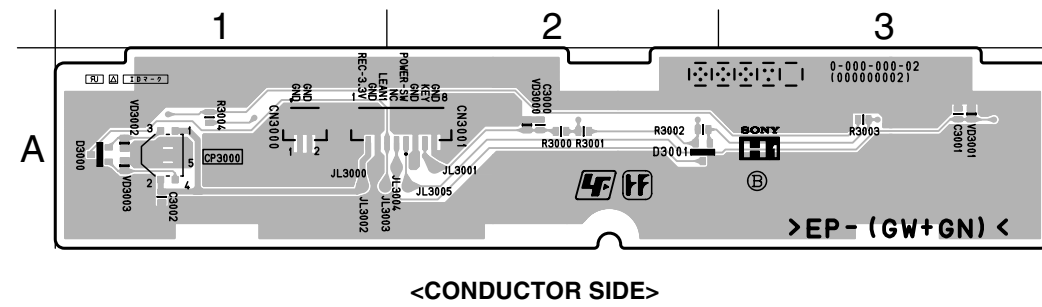

Ref.	*
D3001	⑪

KL V-40/46X200A, 40/46X250A (GA) 2-50

(9) Schematic Diagram of H2 Board

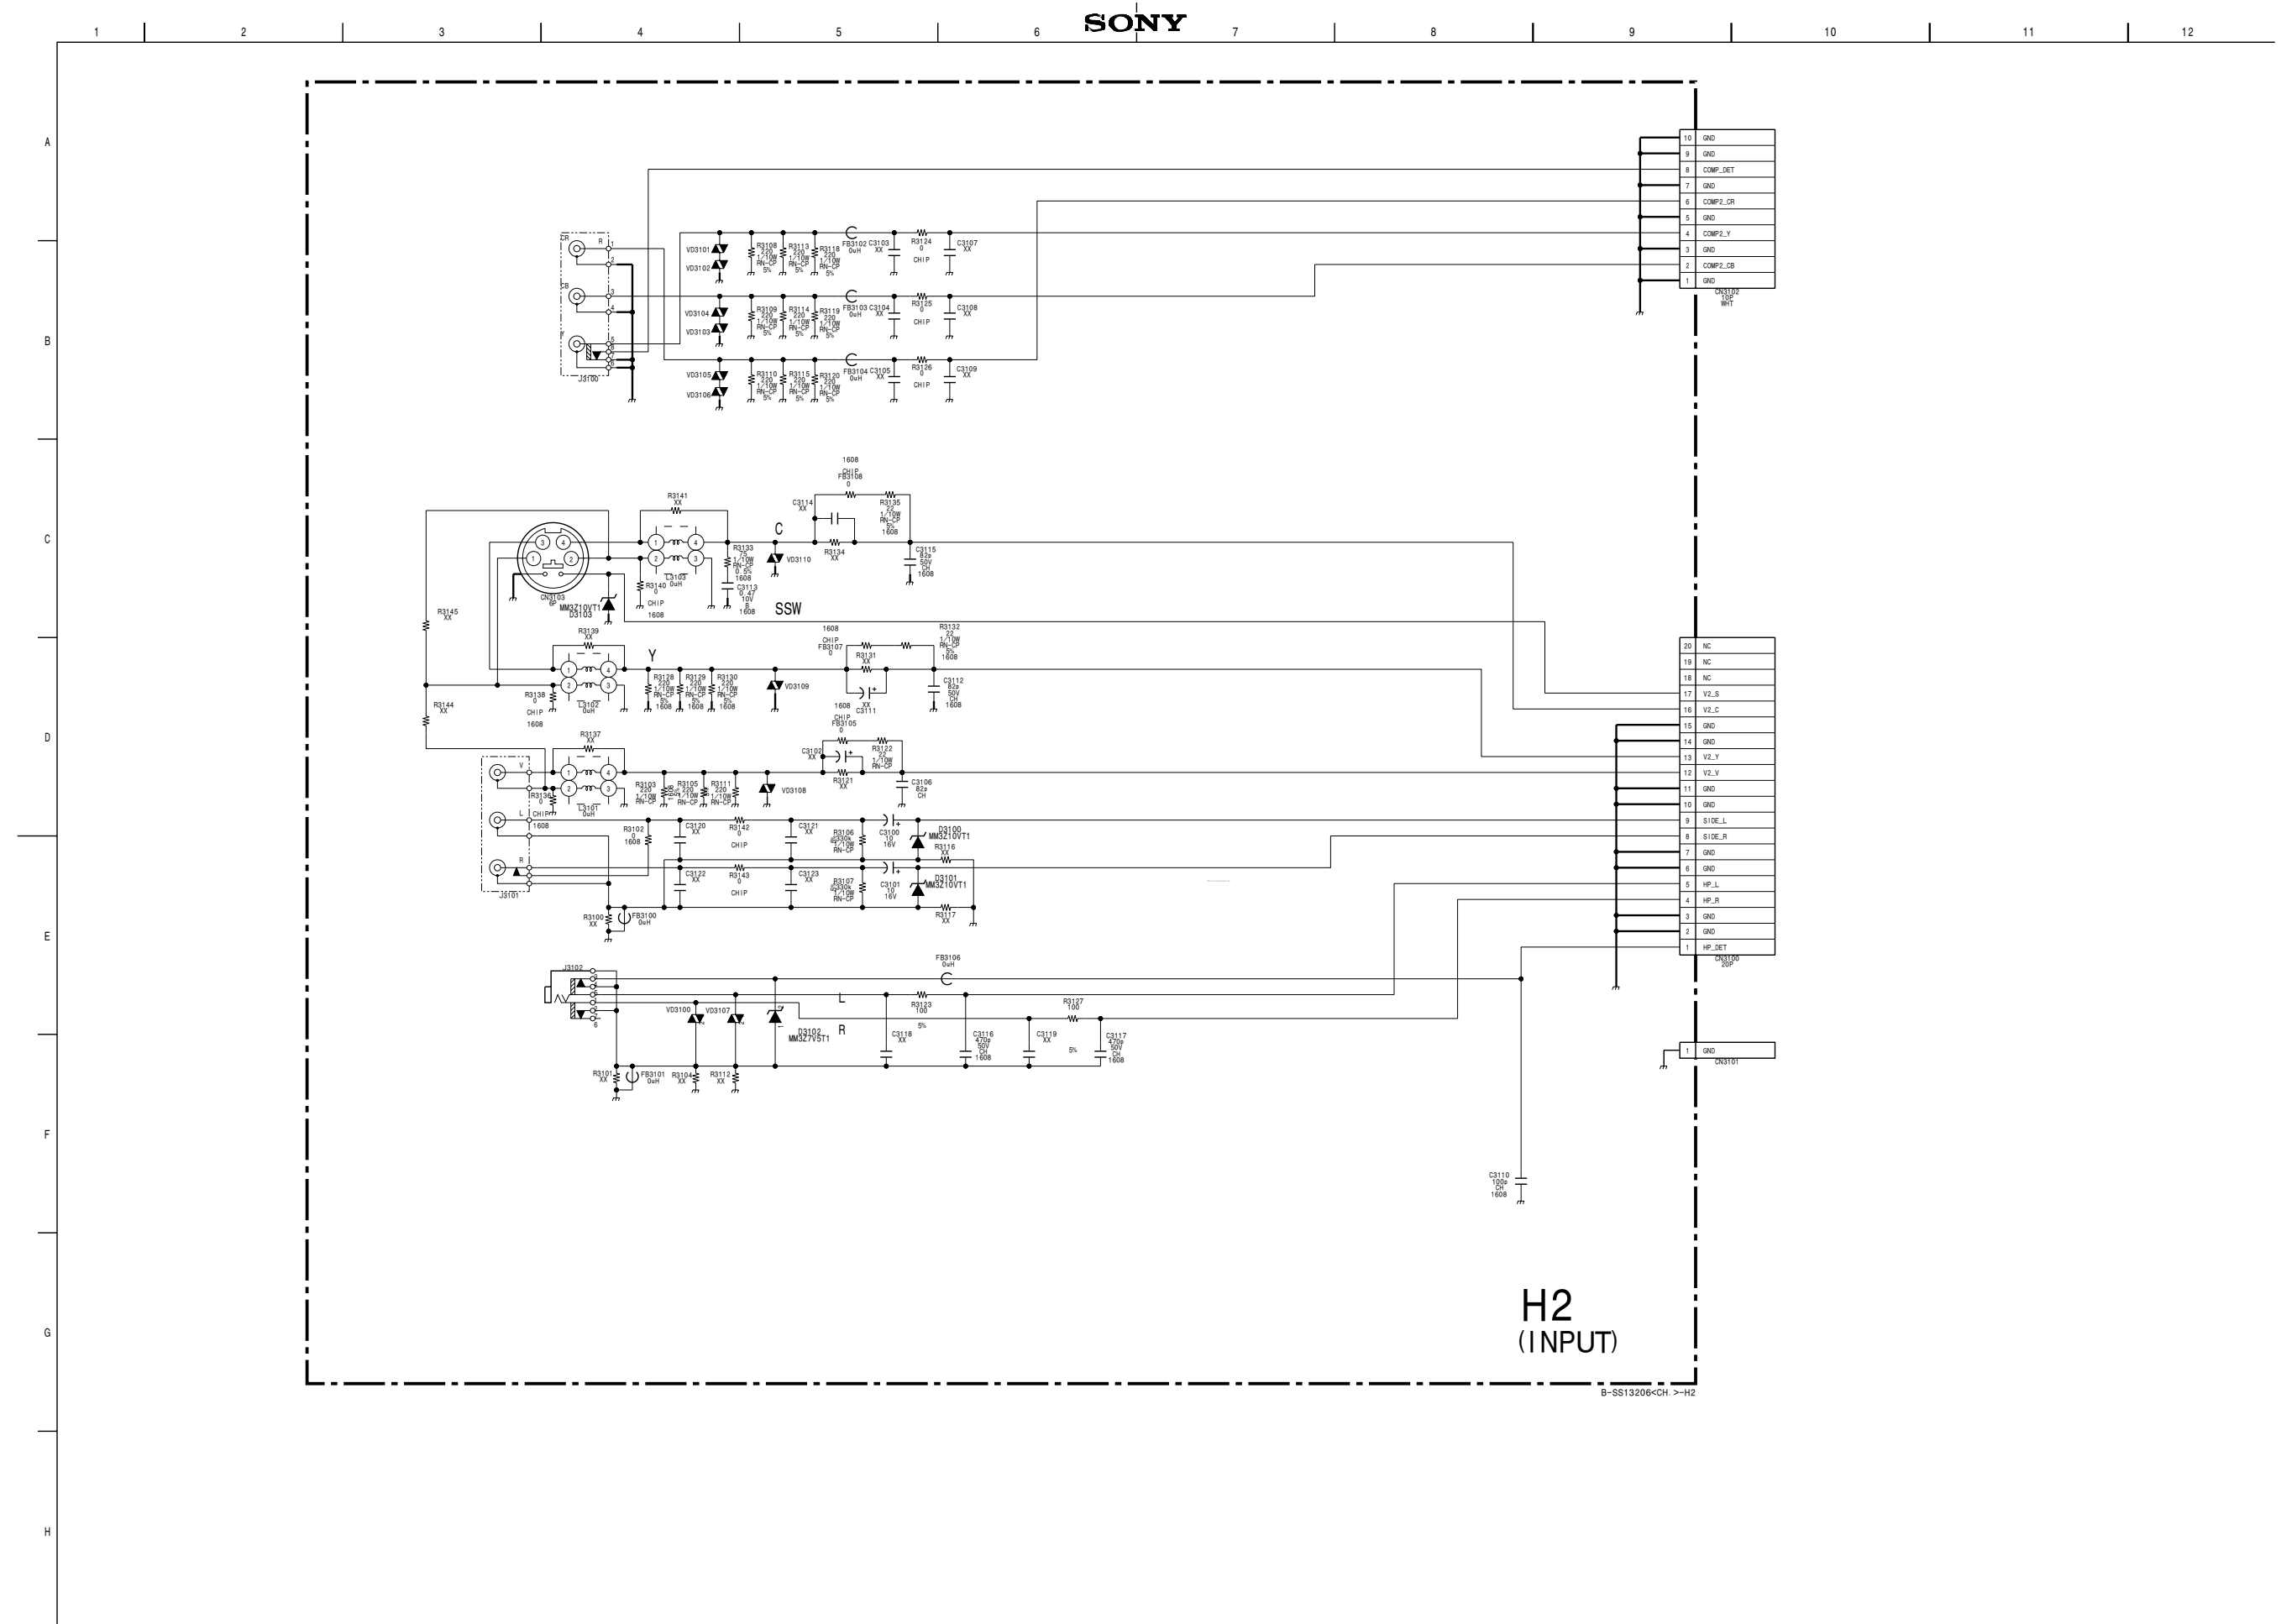


—H2 BOARD —



Ref.	*
D3100-D3103	③


*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 2-4)

(10) Schematic Diagram of H3 Board

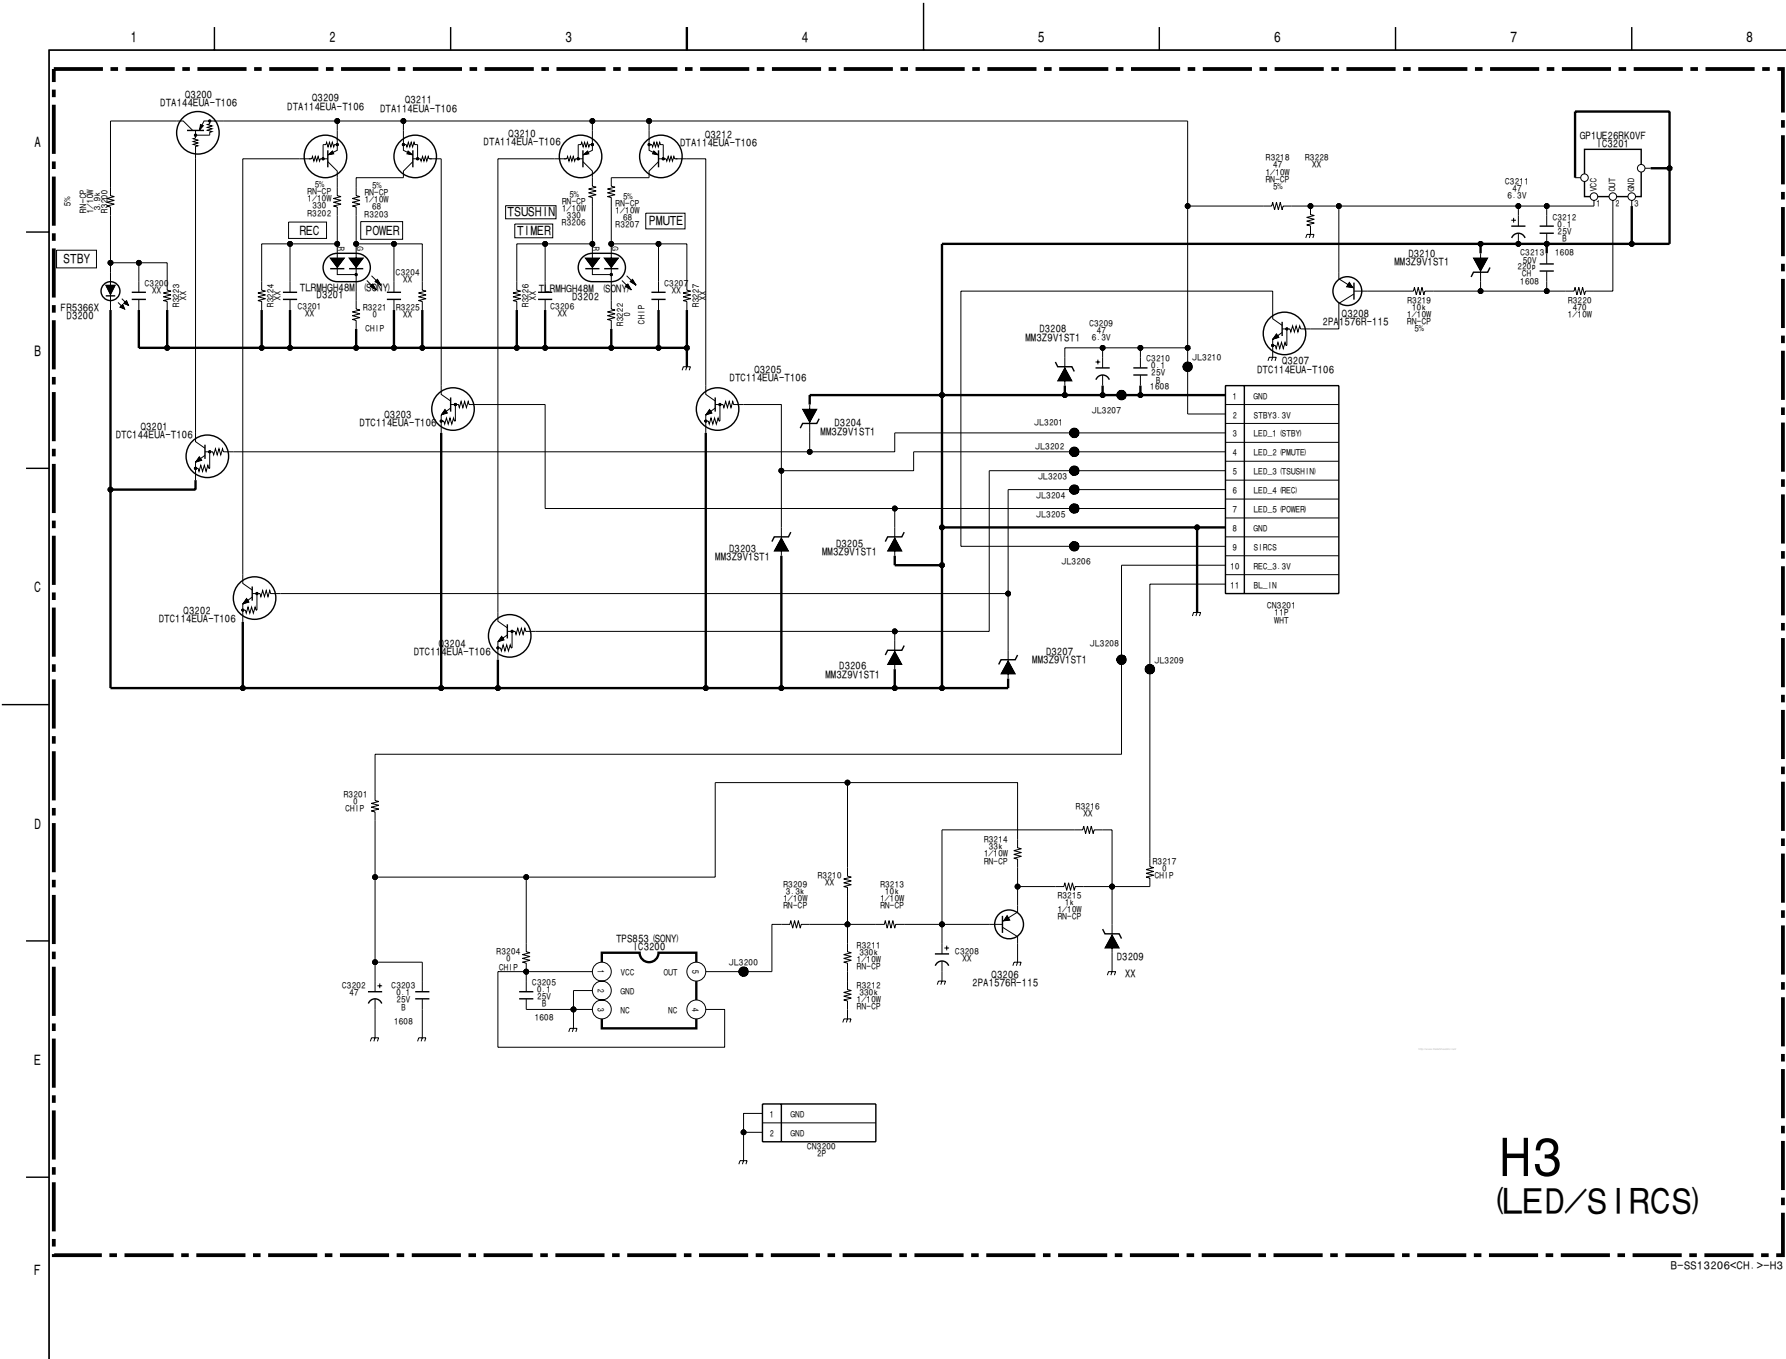


H3 [LED/SIRCS]

—H3 BOARD—

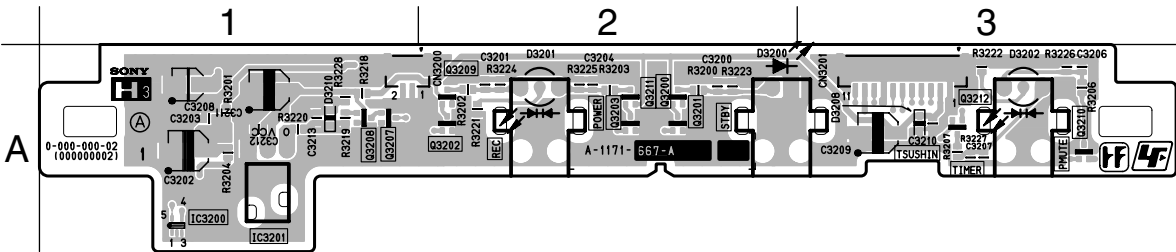

<COMPONENT SIDE>

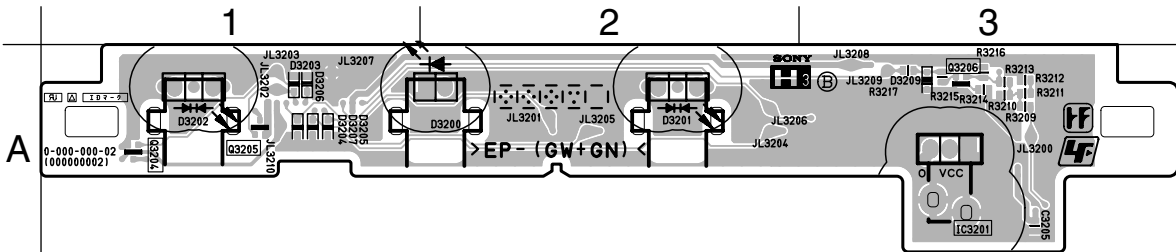

<CONDUCTOR SIDE>


• H3 BOARD SEMICONDUCTOR LOCATION

Ref.	*
Q3200-Q3212	②
D3203-D3208, D3210	③


※: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 2-4)




(12) Schematic Diagrams of TUG Board

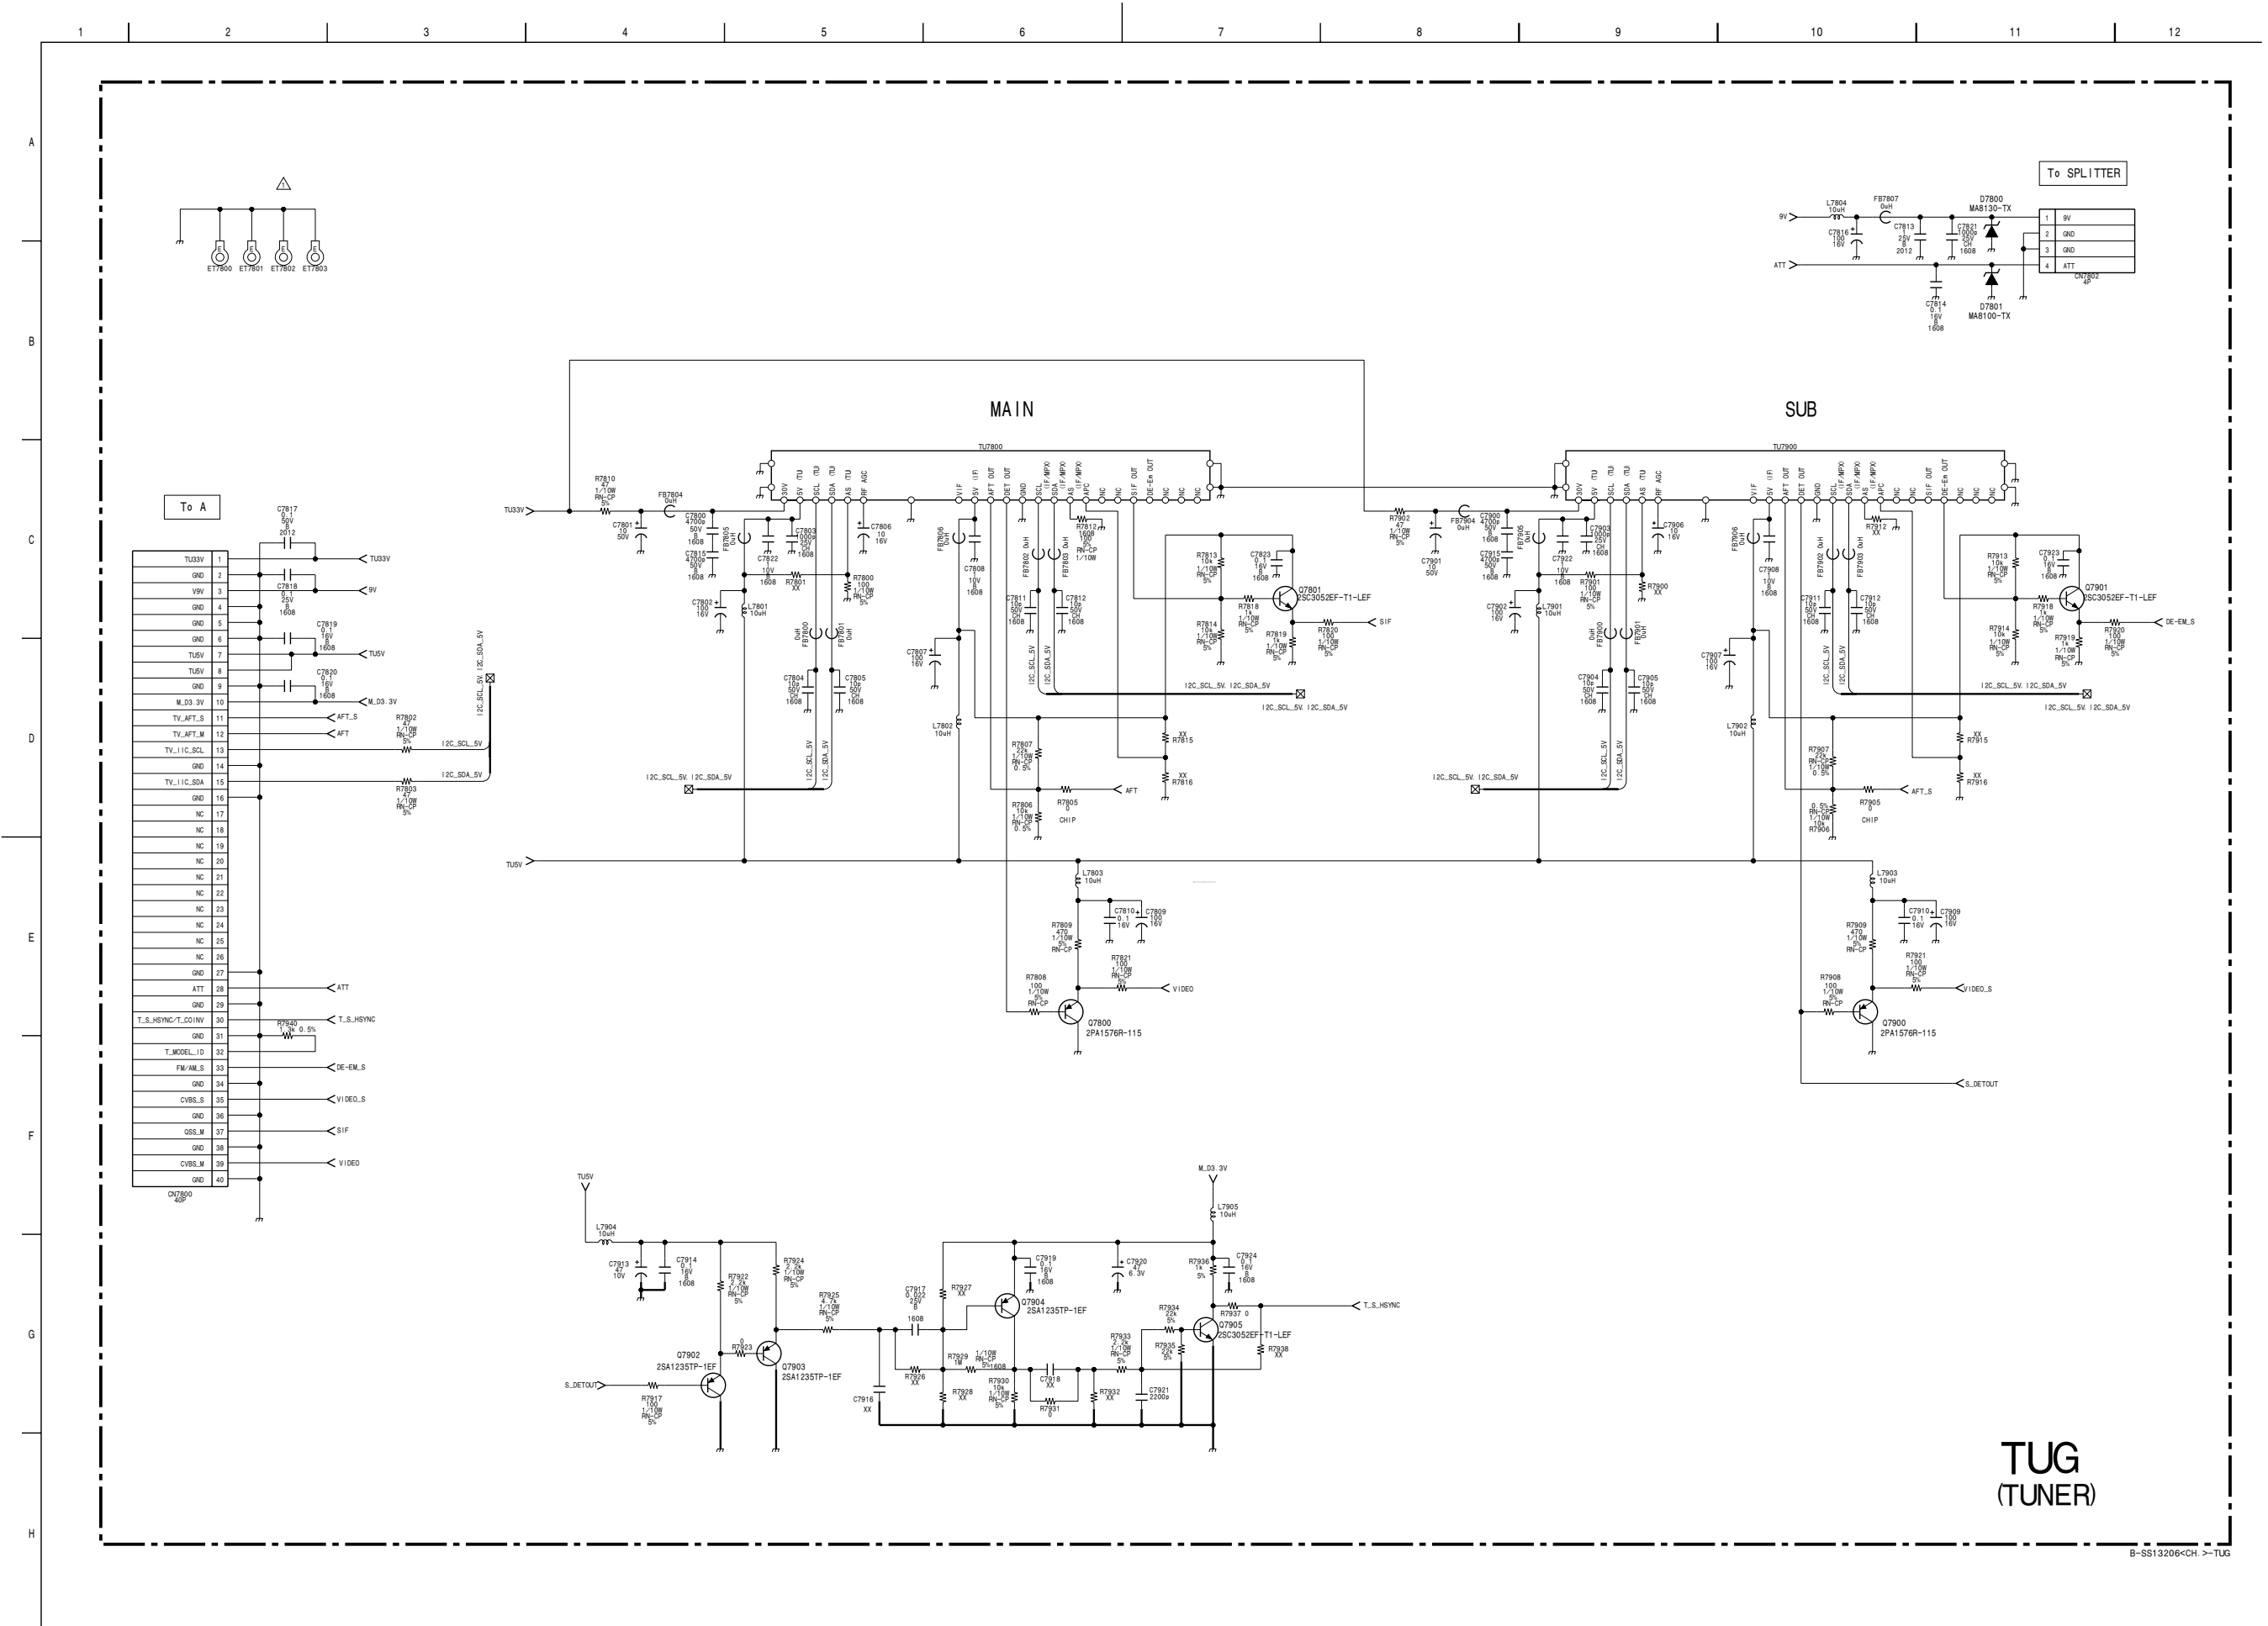

— TUG BOARD —

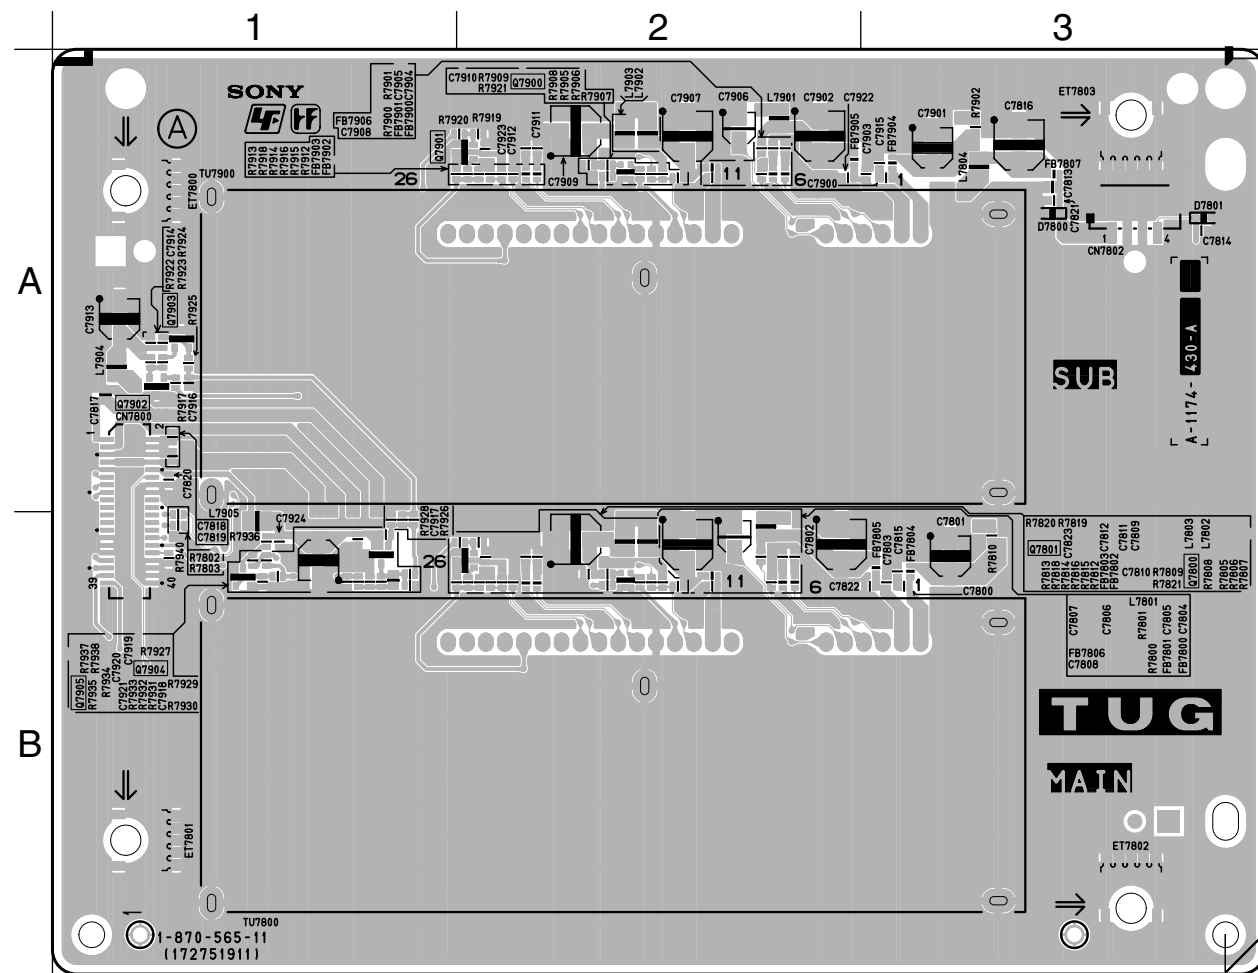

<COMPONENT SIDE>

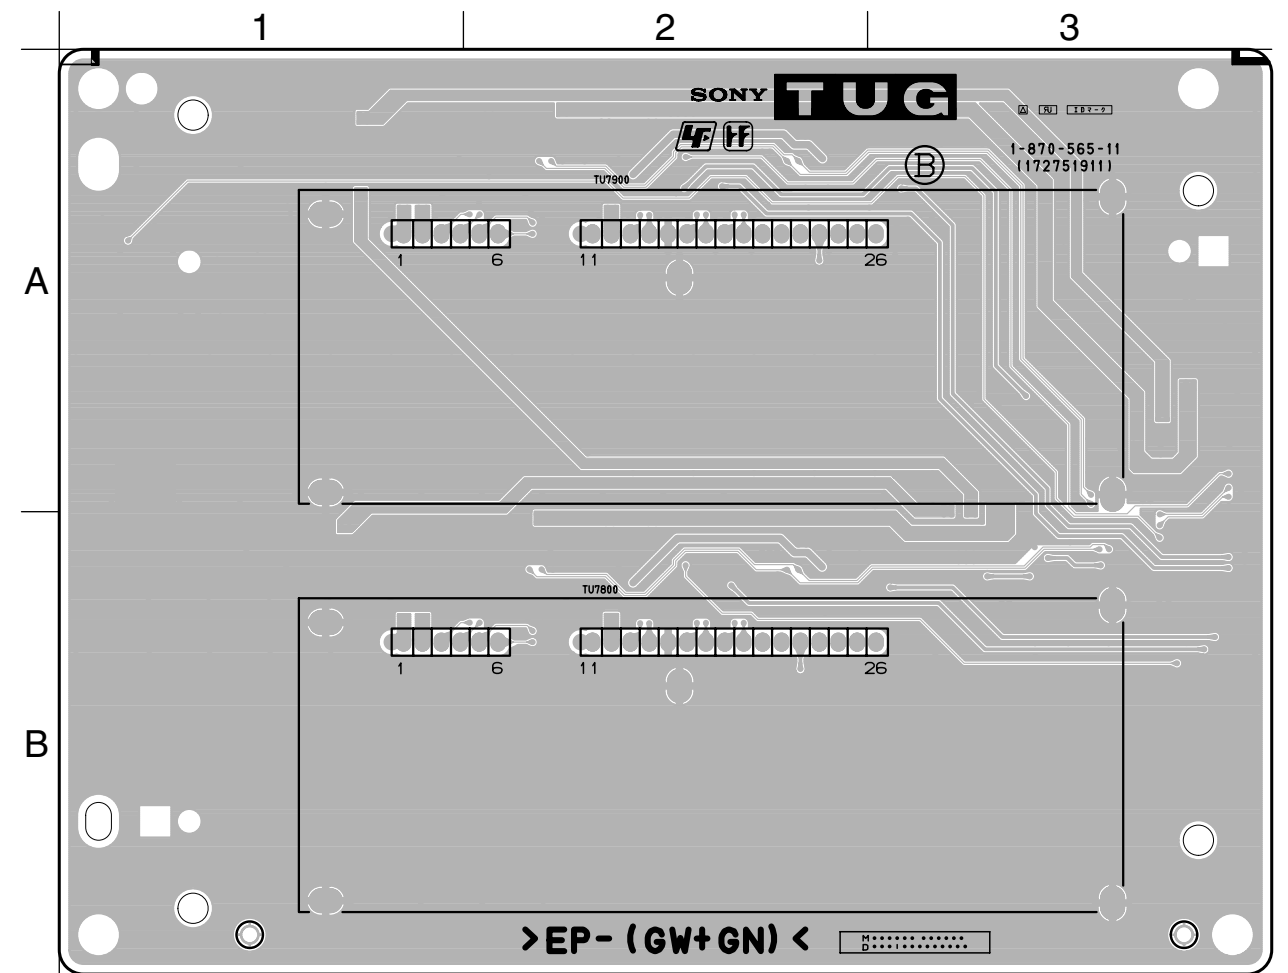

<CONDUCTOR SIDE>

- TUG BOARD SEMICONDUCTOR LOCATION


TRANSISTOR		DIODE	
(Component Side)	(Conductor Side) *	(Component Side)	(Conductor Side) *
Q7800	B-2	D7800	A-3
Q7801	B-2	D7801	A-3
Q7900	A-2		
Q7901	A-2		
Q7902	A-1		
Q7903	A-1		
Q7904	B-1		
Q7905	B-1		

*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 2-4)

2-5. SEMICONDUCTORS


IC

ADA4861-3YRZ-RL7
SN74CBT3125PWR
SN74LV125APWR
SN74LV4066APWR
TLC2933AIPWR




14Pin SOP

BA10339F-E2
BA10393F-E2
ICS7150MLFT
LMH6658MMX/J5000172
M24128-BWMN6T(A)
M24C02-WMN6T(B)
MIP2H2
NJM2903M
NJM2903M-TE2
NJM2903V(TE2)
NJM3414AV(TE2)
NJM4558V-TE2
PCA9517DP.118
S-35390A-J8T1G
SN74LVC2G53DCUR
TC7WH34FU(TE12R)
TC7WZ08FK(TE85R)
TL431CPK-E2
TMP75AIDR




8Pin SOP

BD9851EFV-E2




20Pin SOP

BD9890F-E2




28Pin SOP

CXA2188Q-T4




40Pin QFP

CXA2239AR-TL
CXA2239R-TL
MB90F334APMC-G-9009E1




120Pin QFP

CXB1441R-T4




48Pin QFP

CXD2097BQ-1




208Pin QFP

CXD3814GB
CXD3814GB-TL




332Pin QFP

CXD4709GB




648Pin PGA

CXD9816AGG




388Pin PGA

CXD9826R




64Pin QFP

CY22392ZXC-380T
SN74LV4053APWR




16Pin SOP

EDD1216AATA-6B-E
EDS6416AHTA-75-E
MT48LC4M16A2P-75:G




54Pin SOP

EDS1616AGTA-75-E
IS42S16100C1-7TL-TR
MSM56V16160F-8T3FM1



50Pin SOP

EM6A9320BI-5MG




144Pin PGA

E-L6562N




8Pin DIP

GP1UE26RK0VF

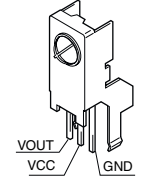

HY27US08281A-TPCB

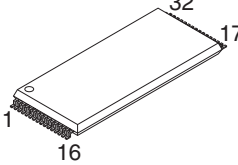


K9F2808U0C-PCB0T




48Pin SOJ

MB39A116PFT-G-BND-ERE1




30Pin SOP

MB91305PMC-G-BNDE1




176Pin QFP

MM1431ATT (CN)
MM3123DPLE
PST3629UL
S-1132B18-M5T1G
SN74LVC1G00DCKR
SN74LVC1G125DCKR
TC7SA00FU(TE85R)
TC7SZU04FU(TE85R)




MSP4411K-QA-D6-401T




80Pin QFP

M5M51008DFP-70H
M61571AFP-DF0T




32Pin SOP


PQ070XNA1ZPH
PQ200WNA1ZPH

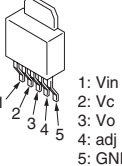

PST3620UL
PST3641UL




SAA7115AHL/V1



100Pin QFP

SI9011CTU
THC63LVD1023




144Pin QFP

SN74AHCT244PWR




20Pin DIP

S29AL008D70TFI010-2000
S29JL032H70TFI010-FIX-BE101
SN74LVC16244ADGGR




48Pin SOP

TC7PA34FU(TE85R)
TK11819MTL




TPS51100DGQR




10Pin SOP

TPS853(SONY)

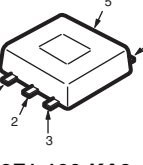


UPD61123F1-100-KA3-A

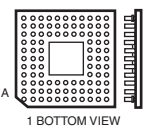


345Pin PGA

TRANSISTOR


IRF7335D1-TR

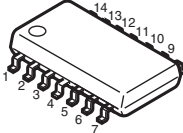


DTA114EUA-T106
DTA114TUA-T106
DTA144EUA-T106
DTC114EKA-T146
DTC114EU
DTC114EUAFT106
DTC114EUA-T106
DTC114YUA-T106
DTC144EUA-T106
MUN2111T1
MUN2211T1
MUN2213T1
RT1N141M-TP-1
RT1N144M-TP-1
UN2111
UN2211
UN2213
2PA1576R-115
2PC4081R-115
2SA1037AK-T146-QR
2SA1037AK-T146-R
2SA1235-F
2SA1235TP-1EF
2SA1576A-T106-QR
2SA1576A-T106-QR
2SA1602-F
2SA1602TP-1EF
2SB624-BV5
2SB624-T1BV5
2SC1623-L5L6
2SC2412K-T-146-QR
2SC3052EF-T1-LEF
2SC3624A-T1L15L16
2SC4081-R
2SC4081T106R
2SC4154-F
2SC4154TP-1EF
2SC4178-F13F14-T1
2SC4178-F14
2SC4617R
2SC4617TL-QR
2SD596-DV5
2SD596-T1DV5




DTC123JUA-T106




HN1B01FU-TE85R

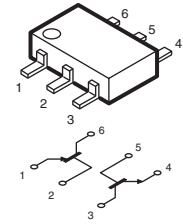


SSM6N16FU

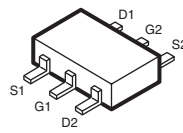


RSQ035P03TR

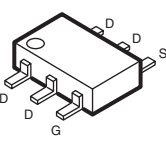


RSS040P03FD5TB

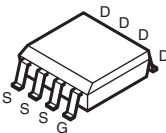


RT1N141C-TP-1

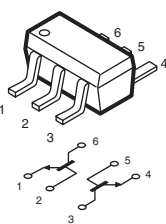


SI2301BDS-T1
2SK1589-L-T1B
2SK1828
2SK1828TE85L
2SK2036(TE85L)



2SB1122-S
2SB1122-ST-TD-E
2SD1621ST-TD-E

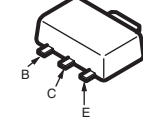

2SK3563(LBS1SONY)
2SK3797(LBS1SONY.Q)
2SK3934(LBS1SONY.Q)

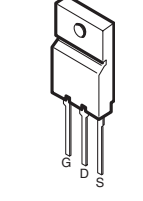


D3S6M-F
S3L60F




DIODE


BAT54HT1
DTZ10B
DTZ5.1B
MA111-TX
MA113-(TX)
MA151WK-TX

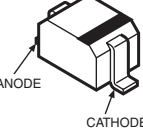


DAP202K
DAP202K-T-146
M1MA152WA-T1

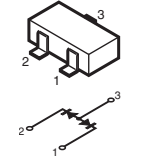


D1NS6-TR2
UF4005/23
10ERB20-TB3

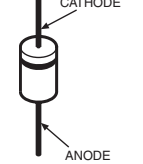


D10SC6M-F5

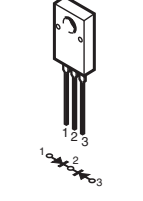


D15XB60
D4SBS6

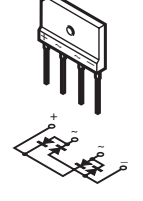

D3S6M-F
S3L60F

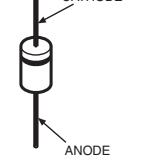


D1FM3
M1FM3
MA8043-M(TX)
MA8051-TX
RB501V-40TE-17
RB520S-30TE61
UDZSTE-1711B
UDZSTE-1715B
UDZSTE-173.6B
UDZSTE-174.3B
UDZSTE-175.1B
UDZ-TE-17-4.3B
UDZ-TE-17-6.2B

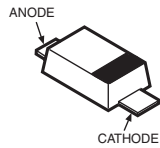


D5L60




EC31QS03L-TE12L
P6SMBJ30A-5
PTZ-TE25-3.9B
PTZ-TE25-6.2A
RSX201L-30TE25
1SMA5915BT3G
1SMA5920BT3G

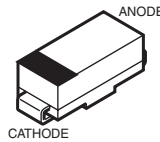


EP05FA20
MM3Z10VT1
MM3Z15VT1
MM3Z4V3ST1
MM3Z5V1ST1
MM3Z6V2ST1
MM3Z7V5T1
MM3Z9V1ST1

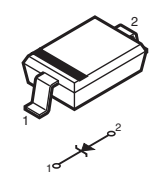


ERA22-08KFLB

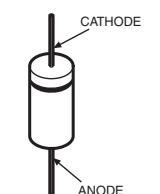


FR5366X

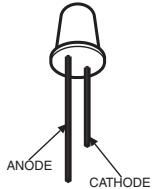


FSF05A60

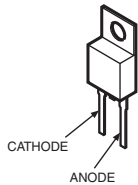


MA8056-TX
MA8062-TX
MA8100-TX
MA8100-TX
MA8110-M-TX
MA8130
MA8150-TX

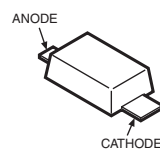


MMDL914T1

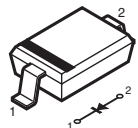


M1MA152WK-T1
1SS184

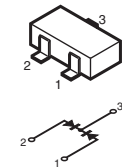


NSPW500BS-A0-M

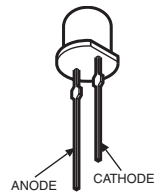


TLRMHGH48M (SONY)

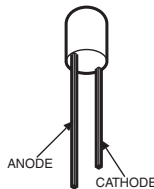


UMZ16NT106

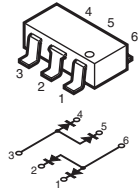

1PS184-115



1PS226-115
1SS226-TE85L



SECTION 3

EXPLODED VIEWS


NOTE:

The components identified  marked are critical for safety.
Replace only with the part number specified.

Note: The components identified by mark  contain confidential information.
Strictly follow the instructions whenever the components are repaired and/or replaced.

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


3-1. REAR CABINET AND STAND ASSY

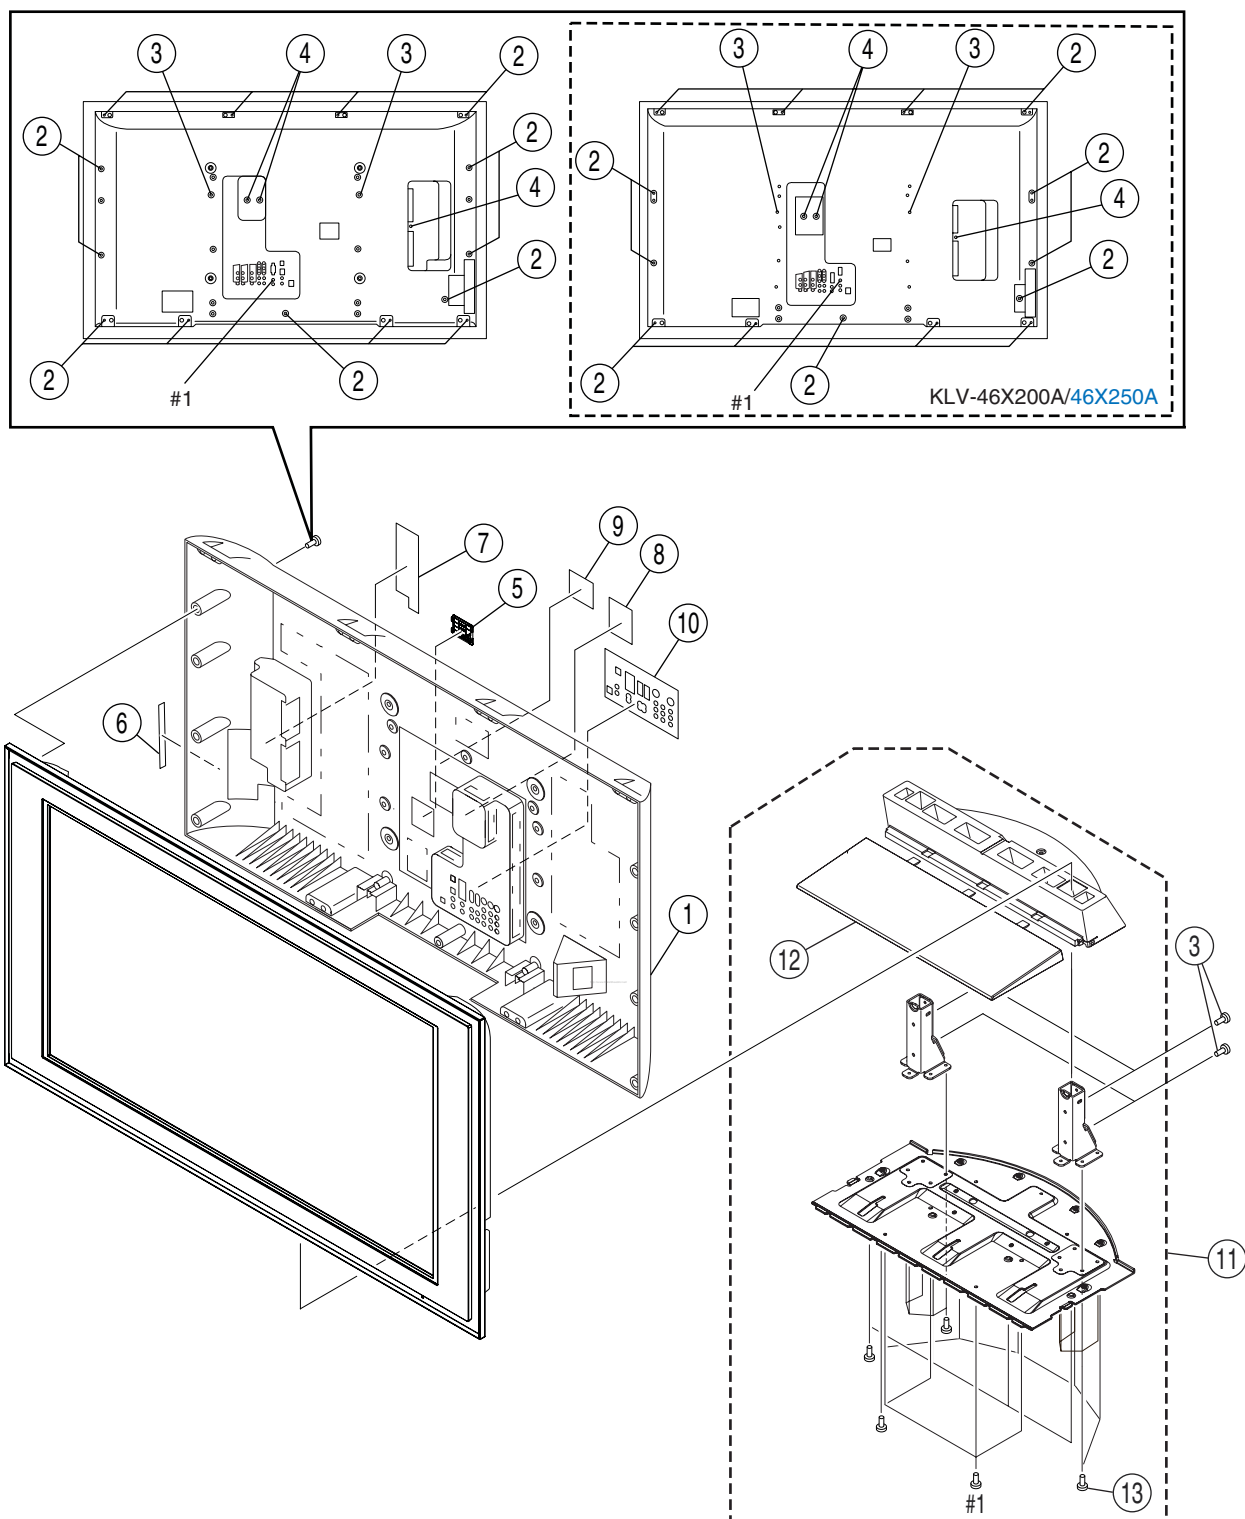

REF. No.	PART No.	DESCRIPTION	MARK
1	X-2109-241-1	REAR CABINET ASSY (40) (KLV-40X200A/40X250A)	
	X-2109-312-2	REAR CABINET ASSY (46) (KLV-46X200A/46X250A)	
2	2-580-640-01	SCREW, +BVTP2 4X16	
3	2-580-607-01	SCREW, +PSW M5X12	
4	2-580-637-01	SCREW, +BVST 4X12	
5	2-673-535-11	SERVICE COVER	
6	2-683-758-21	LABEL, SIDE TERMINAL	
7	2-683-759-41	LABEL, DTT	
8	2-683-760-21	LABEL, HDMI	
9	2-697-706-11	LABEL, INFORMATION (KLV-40X200A)	

REF. No.	PART No.	DESCRIPTION	MARK
	2-697-706-01	LABEL, INFORMATION (KLV-46X200A)	
	3-093-341-11	LABEL, INFORMATION (KLV-40X250A)	
	3-093-341-01	LABEL, INFORMATION (KLV-46X250A)	
10	2-890-542-21	LABEL, REAR TERMINAL	
11	X-2109-309-2	BASE STAND ASSY (SILVER)	12,13
	X-2148-726-1	BASE STAND ASSY (BLACK)	
12	2-673-578-02	COVER, STAND (SILVER)	
13	2-580-606-01	SCREW, +PSW M5X8	
#1	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	


3-2. ARM AND UNDER COVER

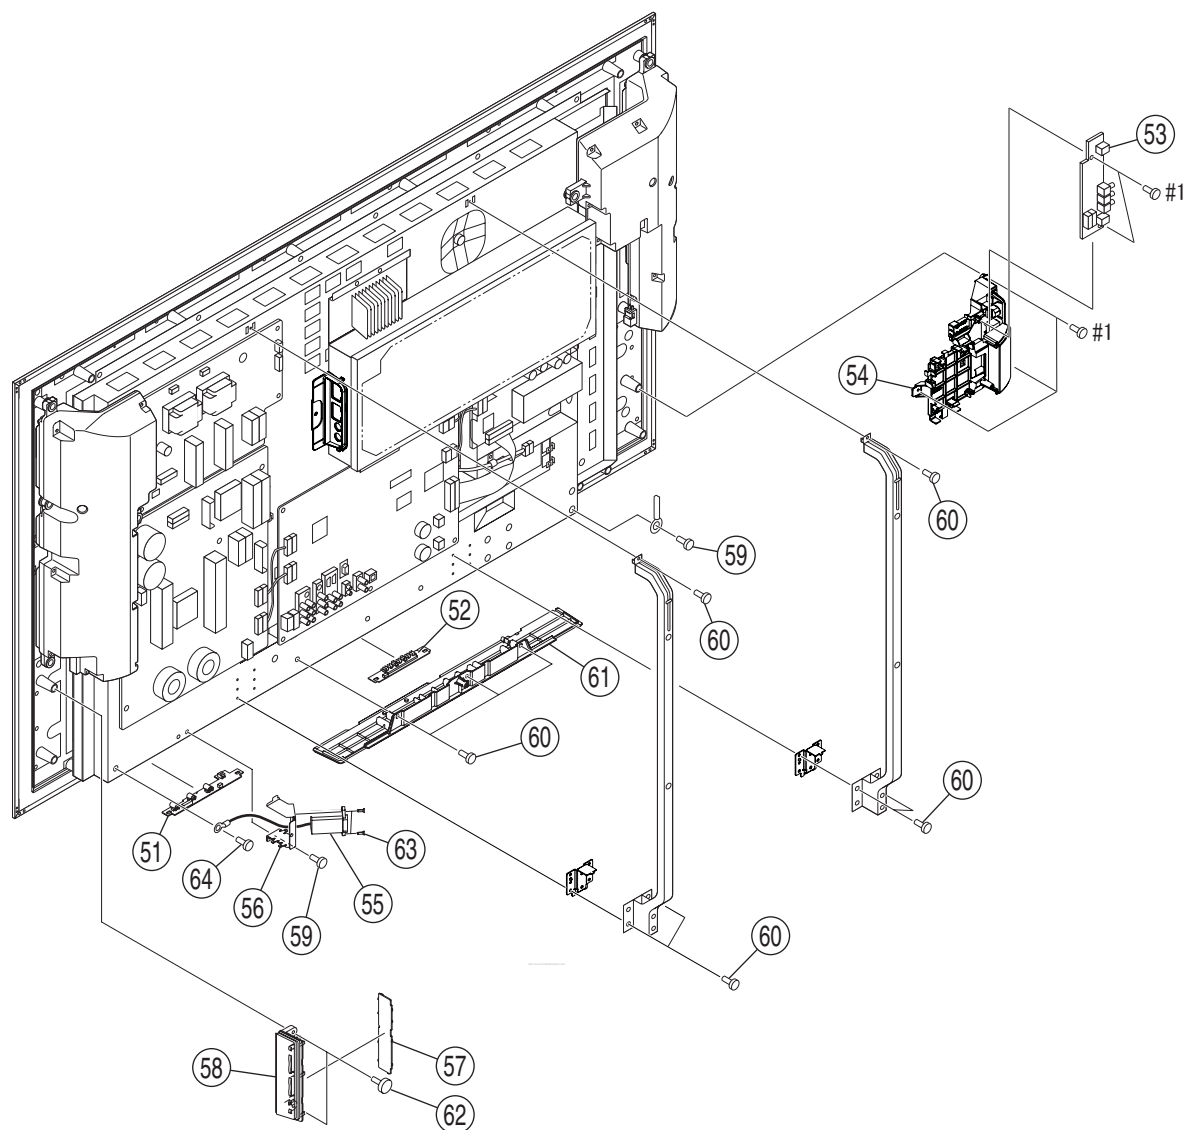

REF. No.	PART No.	DESCRIPTION	MARK
51	A-1171-667-A	H3 MOUNT	
52	A-1171-668-A	H4 MOUNT	
53	A-1171-666-A	H2 MOUNT	
54	X-2149-062-1	SIDE TERMINAL ASSY	
55	△ 1-820-563-11	INLET, AC (WITH NOISE FILTER)	
56	2-673-549-01	AC INLET BRACKET	
57	A-1171-665-A	H1 MOUNT	
58	X-2148-928-1	CONTROL BUTTON ASSY	
59	2-580-629-01	SCREW, +BVST 3X8	
60	2-580-637-01	SCREW, +BVST 4X12	

REF. No.	PART No.	DESCRIPTION	MARK
61	X-2149-441-1	UNDER COVER ASSY	
62	2-580-640-01	SCREW, +BVTP2 4X16	
63	2-596-649-01	+KTT 3X10 (S TYPE)	
64	2-580-599-01	SCREW, +PSW M4X6	
#1	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	

3-3. CHASSIS-1

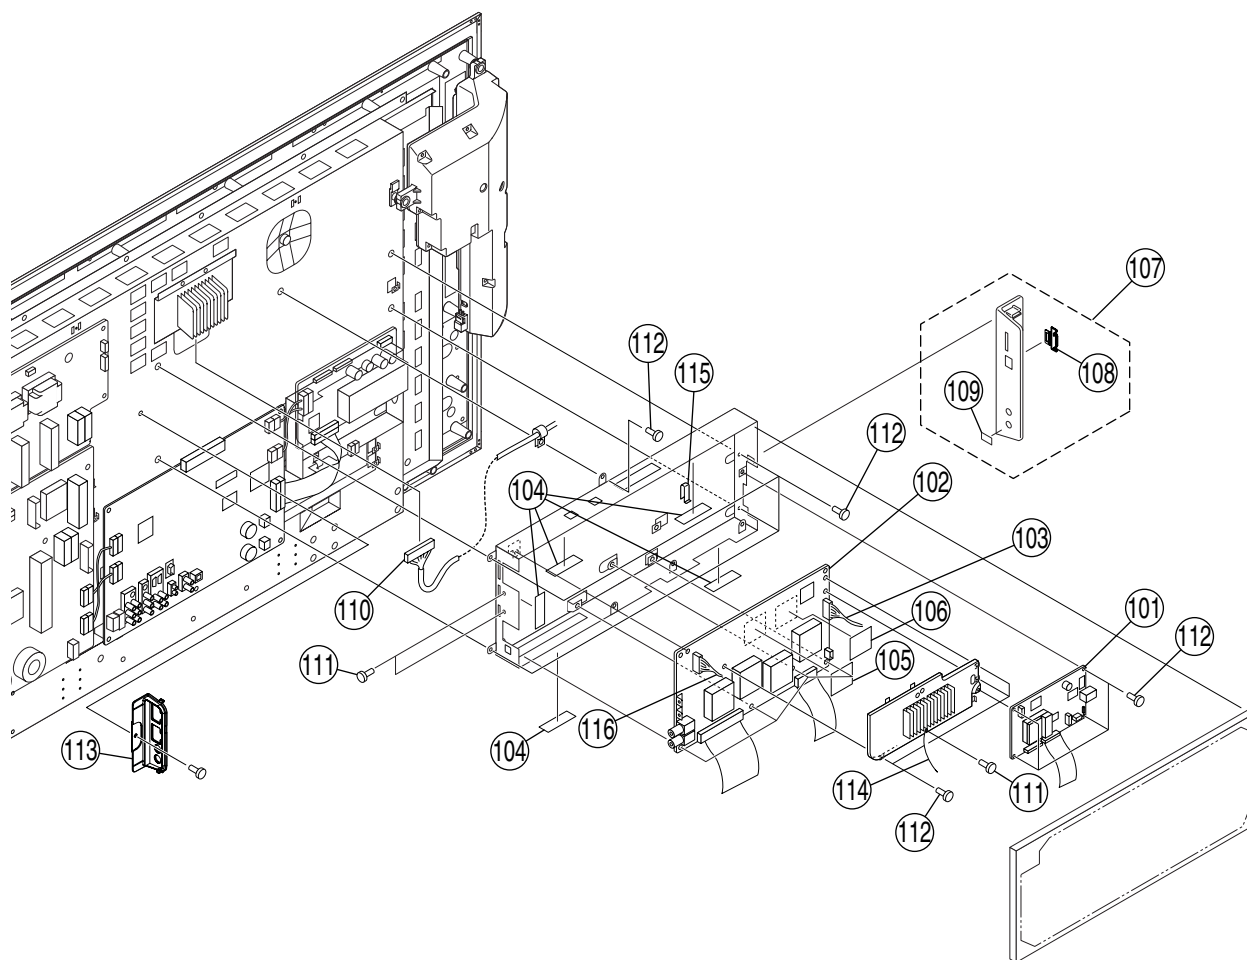


Note: The components identified by mark  contain confidential information.
Strictly follow the instructions whenever the components are repaired and/or replaced.

REF. No.	PART No.	DESCRIPTION	MARK
101	A-1219-681-A	FXE COMPL	
102	 A-1215-296-A	B2 COMPL (KLV-40X200A/40X250A)	
	 A-1215-295-A	B2 COMPL (KLV-46X200A/46X250A)	
103	1-910-029-21	PA CONNECTOR ASSY 4P	
104	* 4-093-259-01	TAPE, EARTH	
105	* 4-097-803-61	SHEET, RADIATION	
106	2-586-175-01	SHEET B, RADIATION	
107	X-2148-932-1	DTT HOLDER ASSY	108, 109
108	2-689-737-01	COVER, MS	
109	4-658-789-02	TAPE (HARNESS)	
110	1-832-957-11	LEAD WIRE WITH CONNECTOR (LVDS) (KLV-40X200A/40X250A)	
	* 1-832-957-21	LEAD WIRE WITH CONNECTOR (LVDS) (KLV-46X200A/46X250A)	

REF. No.	PART No.	DESCRIPTION	MARK
111	2-580-591-01	SCREW, +PSW M3X5	
112	2-580-629-01	SCREW, +BVST 3X8	
113	2-673-537-01	HOLDER, HDMI TERMINAL	
114	1-910-031-69	LUG CONNECTOR ASSY	
115	2-650-770-21	SLIDE, CLAMP	
116	1-910-026-00	XA CONNECTOR ASSY (B) 13P	


3-4. CHASSIS-2

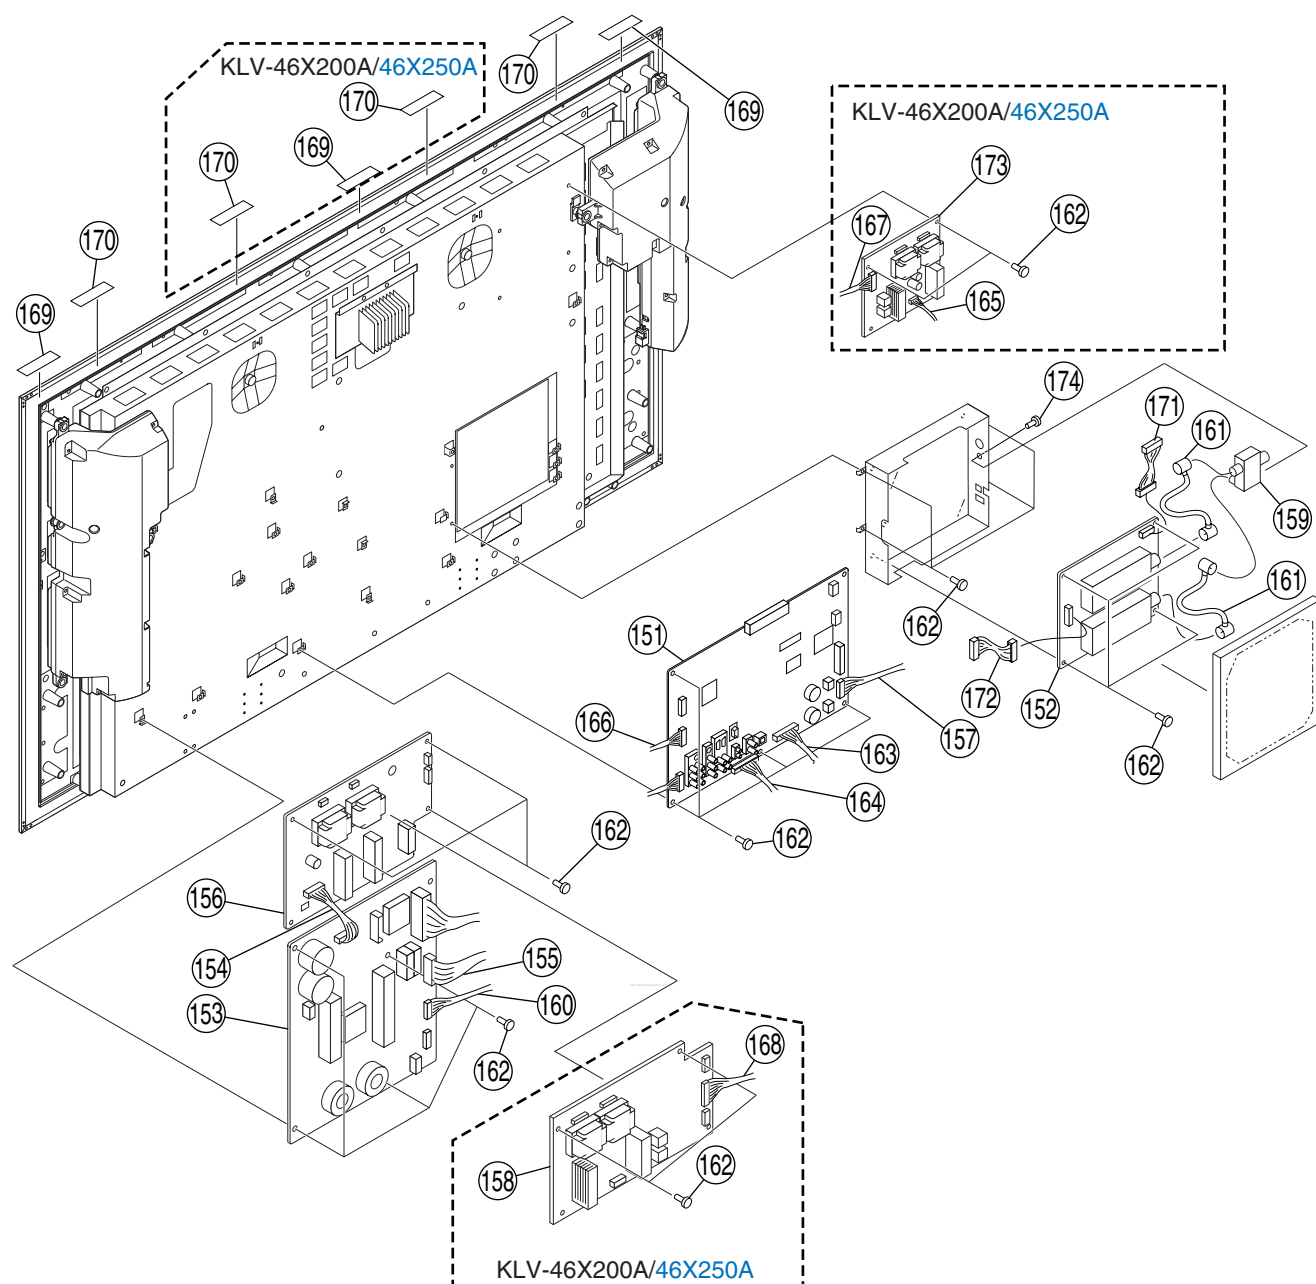

REF. No.	PART No.	DESCRIPTION	MARK
151	A-1226-283-A	AG MOUNT	
152	A-1174-430-A	TUG MOUNT	
153	A-1217-644-A	G1 COMPL	
154	1-910-026-07	VH CONNECTOR ASSY (D2) 3P	
155	1-910-030-60	XA CONNECTOR ASSY (G1)	
156	A-1197-882-B	D1 COMPL (KLV-40X200A/40X250A)	
157	1-910-032-40	VH CONNECTOR ASSY (SP) 4P (KLV-40X200A/40X250A)	
	1-910-032-41	VH CONNECTOR ASSY (SP) 4P (KLV-46X200A/46X250A)	
158	A-1196-378-B	D2 MOUNT (KLV-46X200A/46X250A)	
159	1-251-658-41	SPLITTER RF	
160	1-910-027-42	XA CONNECTOR ASSY (D1) 6P (KLV-40X200A/40X250A)	
	1-910-026-10	XA CONNECTOR ASSY (D3) 7P (KLV-46X200A/46X250A)	
161	1-558-924-21	CABLE, PIN	
162	2-580-629-01	SCREW, +BVST 3X8	
163	1-910-029-16	SHLDP CONNECTOR ASSY 20P (KLV-40X200A/40X250A)	

REF. No.	PART No.	DESCRIPTION	MARK
	1-910-032-86	SHLDP CONNECTOR ASSY 20P (KLV-46X200A/46X250A)	
164	1-832-967-12	HARNESS, WITH CONNECTOR (RGB)	
165	1-910-028-54	VH CONNECTOR ASSY (D3) 3P (KLV-46X200A/46X250A)	
166	1-910-027-47	MO1189 CONNECTOR ASSY 20P (KLV-40X200A/40X250A)	
	1-910-033-49	MO1189 CONNECTOR ASSY 20P (KLV-46X200A/46X250A)	
167	1-910-026-12	XA CONNECTOR ASSY (D3) 14P (KLV-46X200A/46X250A)	
168	1-910-026-08	XA CONNECTOR ASSY (D2) 6P (KLV-46X200A/46X250A)	
169	* 4-093-259-01	TAPE, EARTH	
170	4-090-795-01	GASKET IB	
171	1-910-029-20	EH CONNECTOR ASSY 2P	
172	1-910-029-19	SHLDP CONNECTOR ASSY 40P	
173	A-1196-379-B	D3 MOUNT (KLV-46X200A/46X250A)	
174	2-580-591-01	SCREW, +PSW M3X5	


3-5. CHASSIS BRACKET ASSY AND SPEAKER

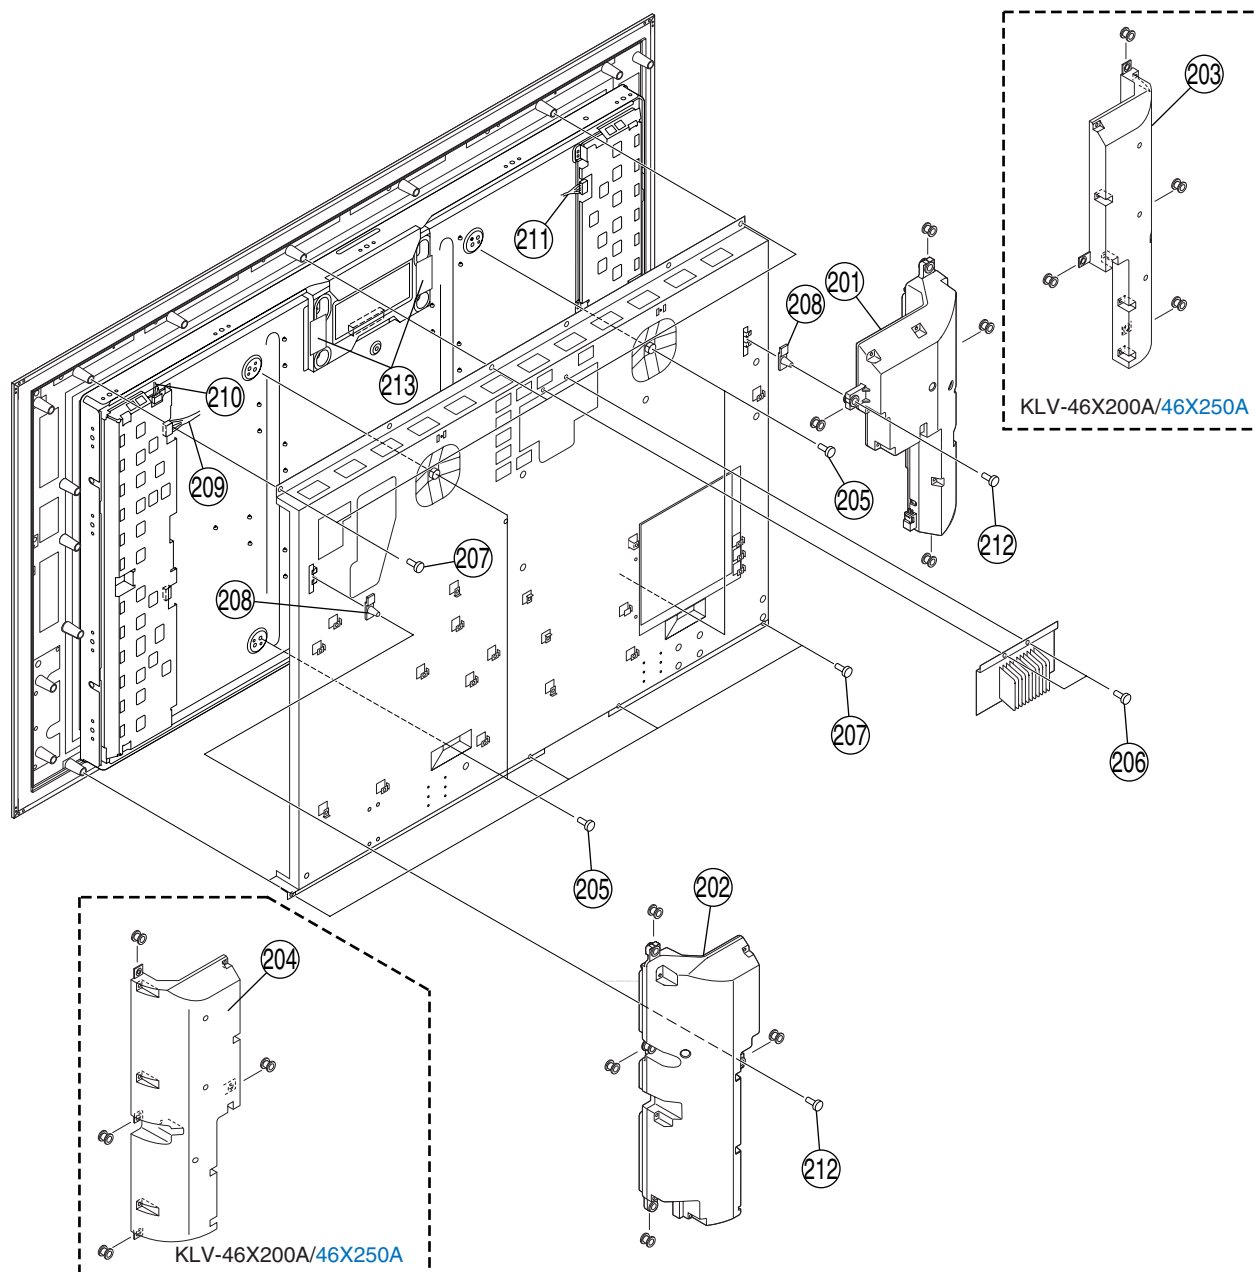

REF. No.	PART No.	DESCRIPTION	MARK
201	1-826-477-11	LOUDSPEAKER (KLV-40X200A/40X250A)	
202	1-826-477-21	LOUDSPEAKER (KLV-40X200A/40X250A)	
203	1-826-476-11	LOUDSPEAKER (KLV-46X200A/46X250A)	
204	1-826-476-21	LOUDSPEAKER (KLV-46X200A/46X250A)	
205	2-580-606-01	SCREW, +PSW M5X8	

REF. No.	PART No.	DESCRIPTION	MARK
206	2-580-629-01	SCREW, +BVST 3X8	
207	2-580-640-01	SCREW, +BVTP2 4X16	
208	2-673-542-01	SPEAKER BOX SUPPORTER	
209	1-910-026-09	BD CONNECTOR ASSY (BLK) 2P	
210	1-910-027-44	XA CONNECTOR ASSY (D1) 5P (KLV-40X200A/40X250A)	
211	1-910-027-48	BD CONNECTOR ASSY (RED) 2P (KLV-40X200A/40X250A)	
	1-910-026-13	BD CONNECTOR ASSY (WHT) 2P (KLV-46X200A/46X250A)	
212	2-580-654-01	SCREW, +PWPT2 4X16	
213	* 4-091-098-02	GASKET (F)	


3-6. BEZEL ASSY AND LCD PANEL

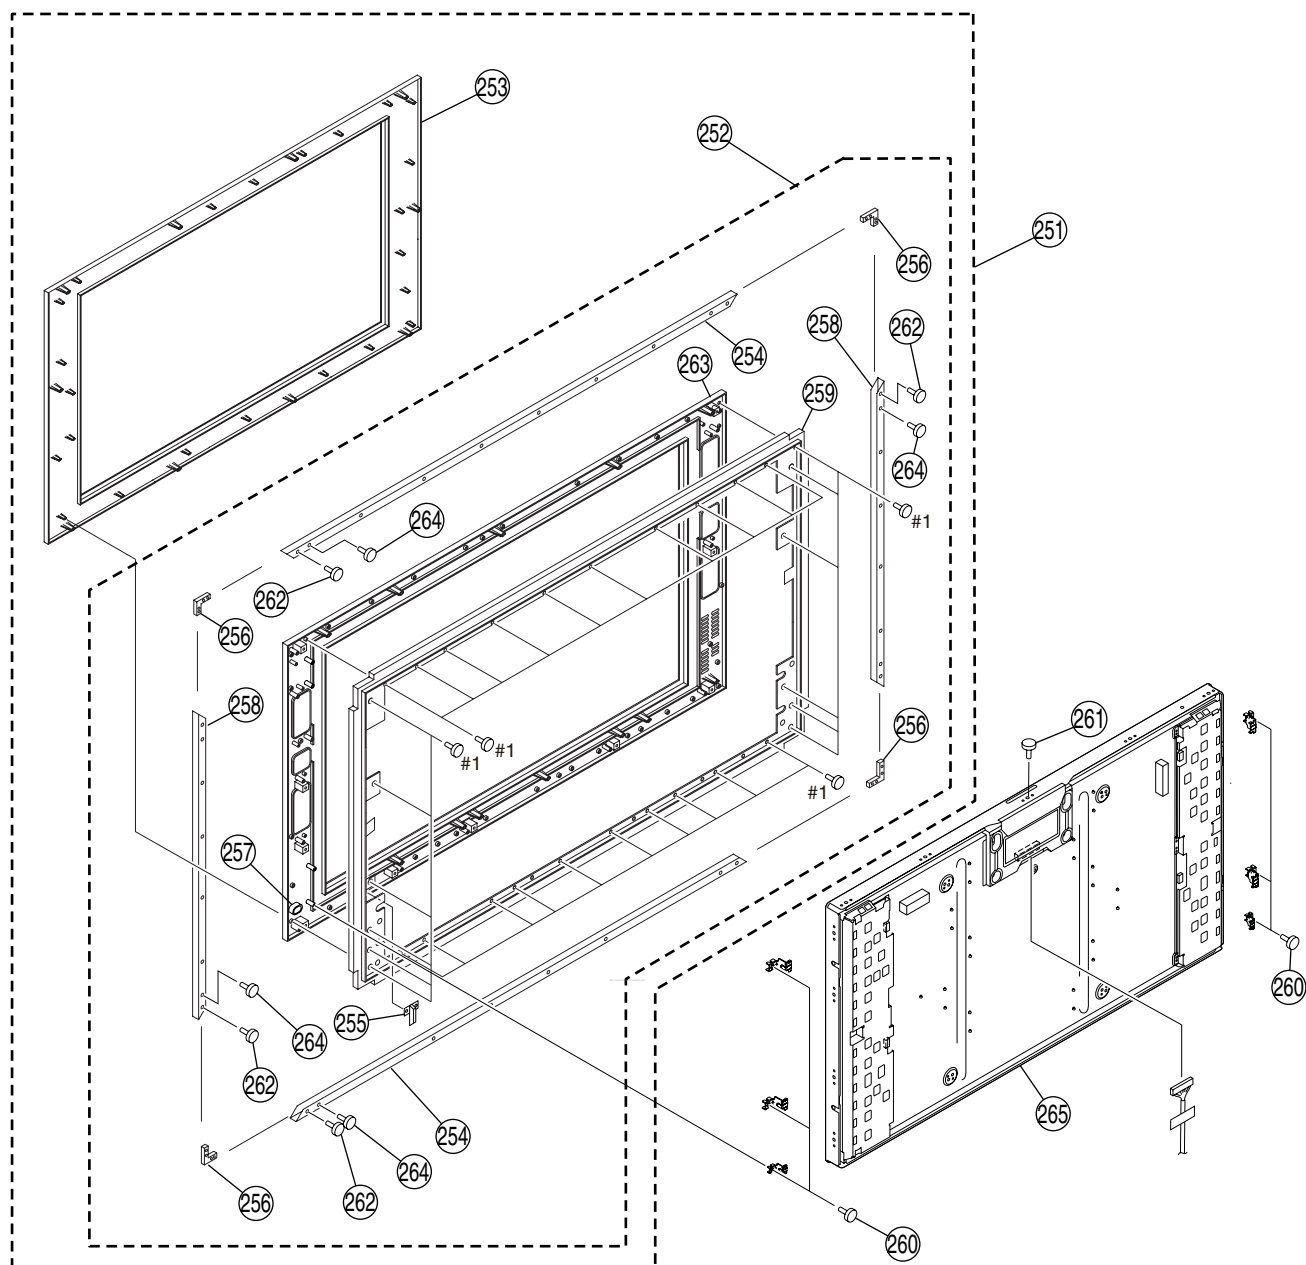

REF. No.	PART No.	DESCRIPTION	MARK
251	X-2148-072-1	FRONT CABINET ASSY (40) (SILVER)	
	X-2148-071-2	FRONT CABINET ASSY (46) (SILVER)	
252	X-2176-267-1	FRONT CABINET PRE ASSY (40) (BLACK) (KLV-40X250A)	
	X-2176-268-1	FRONT CABINET PRE ASSY (46) (BLACK) (KLV-46X250A)	
253	X-2109-327-1	BEZEL ASSY (40) (SILVER)	
	X-2109-326-1	BEZEL ASSY (46) (SILVER)	
	X-2148-130-2	BEZEL ASSY (40) (BLACK)	
	X-2148-131-2	BEZEL ASSY (46) (BLACK)	
254	2-673-396-01	ORNAMENTAL, FRAME H (40)	
255	X-2149-793-1	IR GUIDE ASSY	

REF. No.	PART No.	DESCRIPTION	MARK
256	2-673-391-01	ORNAMENTAL, JOINT	
257	2-673-579-02	BEZEL BUSH	
258	2-673-397-01	ORNAMENTAL, FRAME V (40)	
259	2-673-395-01	CENTER, CABINET (40)	
260	2-580-640-01	SCREW, +BVTP2 4X16	
261	2-580-615-01	SCREW, +K M4X6	
262	2-694-106-01	SCREW, M2 TAPING	
263	2-673-394-01	FRONT, CABINET (40)	
264	2-694-107-01	SCREW, FIXED	
265	1-802-198-12	LCD PANEL (40 INCH FHD+TFT)	
	1-802-159-23	LCD PANEL (46INCH FHD+TFT)	
#1	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	

3-7. PACKING MATERIALS

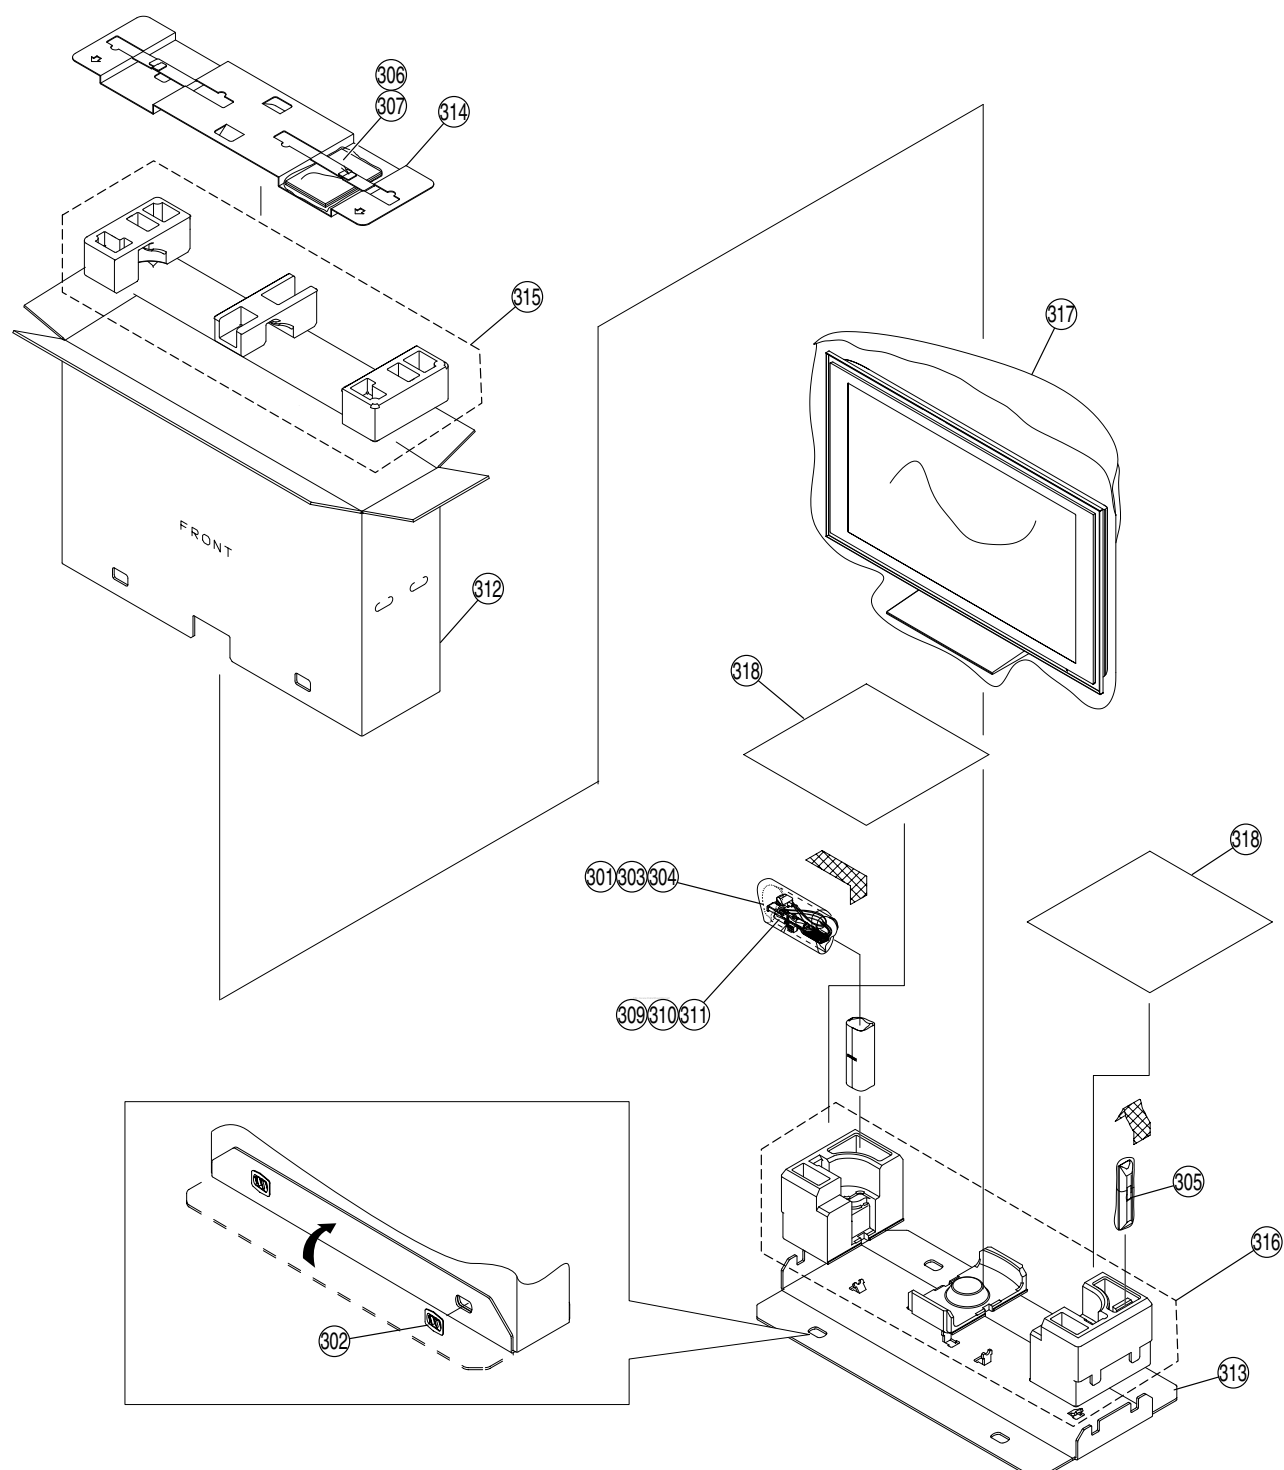

REF. No.	PART No.	DESCRIPTION	MARK
301	X-2102-511-2	BAG ASSY, RUDDER LOCK	
302	3-674-673-01	STOPPER (A)	
303	2-580-663-01	SCREW, WOOD 3.8X20	
304	2-593-320-02	SCREW, CION (M6X18)	
305	1-479-935-11	REMOTE COMMANDER (RM-GA006)	
306	2-695-576-12	MANUAL (WALL MOUNT INSTRUCTION)	
307	2-689-512-12	MANUAL, INSTRUCTION (ENGLISH)	
	2-689-512-22	MANUAL, INSTRUCTION (ARABIC, PERU)	
	2-689-512-32	MANUAL, INSTRUCTION (THAI, TRADITIONAL CHINESE)	
309	1-769-175-22	ANTENNA CABLE	
310	1-793-504-11	CABLE ASSY (15PDSUBX2CONNECTOR)	
311	△ 1-833-118-21	POWER-SUPPLY CORD SET	

REF. No.	PART No.	DESCRIPTION	MARK
312	* 2-698-649-01	INDIVIDUAL CARTON (KLV-40X200A/40X250A)	
	* 2-699-644-02	INDIVIDUAL CARTON (KLV-46X200A/46X250A)	
313	* 2-686-368-01	TRAY (KLV-40X200A/40X250A)	
	* 2-679-299-01	TRAY (KLV-46X200A/46X250A)	
314	* 2-686-369-01	BOARD, TOP (KLV-40X200A/40X250A)	
	* 2-683-084-01	BOARD, TOP (KLV-46X200A/46X250A)	
315	* 2-679-300-01	CUSHION (UPPER) (KLV-40/46X200A)	
	* 3-093-342-01	CUSHION (UPPER) (KLV-40/46X250A)	
316	* 2-679-301-01	CUSHION (LOWER) (KLV-40/46X200A)	
	* 3-093-343-01	CUSHION (LOWER) (KLV-40/46X250A)	
317	2-694-444-01	BAG, PROTECTION (KLV-46X200A)	
	* 4-102-317-03	BAG, PROTECTION (KLV-46X250A)	
318	* 2-889-071-01	SHEET, PROTECTION (KLV-40/46X250A)	

SECTION 4

ELECTRICAL PARTS LIST

NOTE:

The components identified  marked are critical for safety.
Replace only with the part number specified.

When indicating parts by reference number, please include the board name.

Note: The components identified by mark  contain confidential information.
Strictly follow the instructions whenever the components are repaired and/or replaced.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Items marked * are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

RESISTORS

- All resistors are in ohms
- F : nonflammable

CAPACITORS

- PF : $\mu\mu$ F
- There are some cases the reference number on one board overlaps on the other board. Therefore, when ordering parts by the reference number, please include the board name.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
	A-1171-667-A	H3 MOUNT					

		<CAPACITOR>					
C3202	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V	Q3205	8-729-907-00	TRANSISTOR DTC114EU	
C3203	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	Q3206	6-550-586-01	TRANSISTOR 2PA1576R-115	
C3205	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	Q3207	8-729-907-00	TRANSISTOR DTC114EU	
C3209	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V	Q3208	6-550-586-01	TRANSISTOR 2PA1576R-115	
C3210	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	Q3209	8-729-028-73	TRANSISTOR DTA114EUA-T106	
C3211	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V	Q3210	8-729-028-73	TRANSISTOR DTA114EUA-T106	
C3212	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	Q3211	8-729-028-73	TRANSISTOR DTA114EUA-T106	
C3213	1-164-230-11	CERAMIC CHIP 220PF	5.00% 50V	Q3212	8-729-028-73	TRANSISTOR DTA114EUA-T106	
		<CONNECTOR>					
CN3200	1-819-464-11	HEADER ASEEMBLY FOR PWB 2P					
CN3201	1-819-470-11	HEADER ASSEMBLY FOR PWB 11P					
		<DIODE>					
D3200	6-501-502-01	DIODE FR5366X					
D3201	6-500-672-11	DIODE TLRMHGH48M (SONY)					
D3202	6-500-672-11	DIODE TLRMHGH48M (SONY)					
D3203	6-500-028-01	DIODE MM3Z9V1ST1					
D3204	6-500-028-01	DIODE MM3Z9V1ST1					
D3205	6-500-028-01	DIODE MM3Z9V1ST1					
D3206	6-500-028-01	DIODE MM3Z9V1ST1					
D3207	6-500-028-01	DIODE MM3Z9V1ST1					
D3208	6-500-028-01	DIODE MM3Z9V1ST1					
D3210	6-500-028-01	DIODE MM3Z9V1ST1					
		<IC>					
IC3200	6-600-447-01	IC TPS853 (SONY)					
IC3201	6-600-502-01	HIC GP1UE26RK0VF					
		<TRANSISTOR>					
Q3200	8-729-028-91	TRANSISTOR DTA144EUA-T106					
Q3201	8-729-029-14	TRANSISTOR DTC144EUA-T106					
Q3202	8-729-907-00	TRANSISTOR DTC114EU					
Q3203	8-729-907-00	TRANSISTOR DTC114EU					
Q3204	8-729-907-00	TRANSISTOR DTC114EU					

A-1171-668-A H4 MOUNT

<CAPACITOR>

C3300 1-126-395-11 ELECT CHIP 22UF 20.00% 16V

<CONNECTOR>

CN3301 1-819-445-11 HEADER ASSEMBLY FOR PWB 3P

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
<DIODE>						C8458	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V
D3307	6-501-198-01	DIODE NSPW500BS-A0-M				C8459	1-165-875-11	CERAMIC CHIP	10UF	10%	10V
D3310	6-501-198-01	DIODE NSPW500BS-A0-M				C8460	1-165-875-11	CERAMIC CHIP	10UF	10%	10V
D3313	6-501-198-01	DIODE NSPW500BS-A0-M				C8461	1-112-692-11	CERAMIC CHIP	1000PF	5%	50V
<TRANSISTOR>						C8462	1-127-820-11	CERAMIC CHIP	4.7UF	10%	16V
Q3300	8-729-907-00	TRANSISTOR DTC114EU				C8463	1-127-820-11	CERAMIC CHIP	4.7UF	10%	16V
Q3303	8-729-907-00	TRANSISTOR DTC114EU				C8466	1-165-874-21	ELECT CHIP	120UF	20%	6.3V
Q3306	8-729-907-00	TRANSISTOR DTC114EU				C8468	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V
<RESISTOR>						C8469	1-112-692-11	CERAMIC CHIP	1000PF	5%	50V
R3300	1-216-809-11	METAL CHIP	100	5%	1/10W	C8470	1-164-943-81	CERAMIC CHIP	0.01UF	10.00%	16V
R3303	1-216-809-11	METAL CHIP	100	5%	1/10W	C8471	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
R3306	1-216-809-11	METAL CHIP	100	5%	1/10W	C8472	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V
*****						C8473	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V
A-1226-283-A AG MOUNT						C8474	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V
*****						C8476	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
2-580-626-01 SCREW, SP 4-40 UNC						C8477	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
2-632-929-01 SHEET (K), RADIATION						C8478	1-164-939-11	CERAMIC CHIP	0.0022UF	10.00%	50V
<CAPACITOR>						C8479	1-164-939-11	CERAMIC CHIP	0.0022UF	10.00%	50V
C8401	1-112-692-11	CERAMIC CHIP	1000PF	5%	50V	C8480	1-112-672-81	CERAMIC CHIP	330PF	5%	50V
C8402	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V	C8481	1-112-672-81	CERAMIC CHIP	330PF	5%	50V
C8410	1-112-692-11	CERAMIC CHIP	1000PF	5%	50V	C8482	1-112-672-81	CERAMIC CHIP	330PF	5%	50V
C8411	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V	C8483	1-126-204-11	ELECT CHIP	47UF	20.00%	16V
C8413	1-124-779-00	ELECT CHIP	10UF	20.00%	16V	C8484	1-112-672-81	CERAMIC CHIP	330PF	5%	50V
C8422	1-164-943-81	CERAMIC CHIP	0.01UF	10.00%	16V	C8485	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C8423	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	C8486	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C8424	1-126-204-11	ELECT CHIP	47UF	20.00%	16V	C8487	1-112-672-81	CERAMIC CHIP	330PF	5%	50V
C8425	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	C8488	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C8426	1-124-779-00	ELECT CHIP	10UF	20.00%	16V	C8490	1-112-672-81	CERAMIC CHIP	330PF	5%	50V
C8427	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V	C8491	1-126-204-11	ELECT CHIP	47UF	20.00%	16V
C8428	1-162-928-11	CERAMIC CHIP	120PF	5.00%	50V	C8492	1-112-692-11	CERAMIC CHIP	1000PF	5%	50V
C8430	1-112-692-11	CERAMIC CHIP	1000PF	5%	50V	C8493	1-112-692-11	CERAMIC CHIP	1000PF	5%	50V
C8432	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V	C8494	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V
C8433	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V	C8495	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C8434	1-164-866-11	CERAMIC CHIP	47PF	5.00%	50V	C8496	1-125-889-91	CERAMIC CHIP	2.2UF	10%	10V
C8435	1-164-866-11	CERAMIC CHIP	47PF	5.00%	50V	C8497	1-125-889-91	CERAMIC CHIP	2.2UF	10%	10V
C8436	1-164-866-11	CERAMIC CHIP	47PF	5.00%	50V	C8501	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C8437	1-164-844-11	CERAMIC CHIP	4PF	0.25PF	50V	C8503	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V
C8438	1-164-844-11	CERAMIC CHIP	4PF	0.25PF	50V	C8504	1-127-820-11	CERAMIC CHIP	4.7UF	10%	16V
C8439	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	C8505	1-127-820-11	CERAMIC CHIP	4.7UF	10%	16V
C8440	1-126-204-11	ELECT CHIP	47UF	20.00%	16V	C8506	1-164-866-11	CERAMIC CHIP	47PF	5.00%	50V
C8441	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V	C8507	1-164-866-11	CERAMIC CHIP	47PF	5.00%	50V
C8443	1-112-692-11	CERAMIC CHIP	1000PF	5%	50V	C8508	1-126-204-11	ELECT CHIP	47UF	20.00%	16V
C8444	1-112-692-11	CERAMIC CHIP	1000PF	5%	50V	C8509	1-126-204-11	ELECT CHIP	47UF	20.00%	16V
C8445	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V	C8510	1-127-772-81	CERAMIC CHIP	0.033UF	10%	10V
C8446	1-112-692-11	CERAMIC CHIP	1000PF	5%	50V	C8511	1-164-943-81	CERAMIC CHIP	0.01UF	10.00%	16V
C8447	1-126-204-11	ELECT CHIP	47UF	20.00%	16V	C8512	1-117-681-11	ELECT CHIP	100UF	20.00%	16V
C8448	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V	C8513	1-127-820-11	CERAMIC CHIP	4.7UF	10%	16V
C8449	1-112-692-11	CERAMIC CHIP	1000PF	5%	50V	C8514	1-127-820-11	CERAMIC CHIP	4.7UF	10%	16V
C8450	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	C8519	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V
C8451	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V	C8601	1-117-681-11	ELECT CHIP	100UF	20.00%	16V
C8452	1-127-820-11	CERAMIC CHIP	4.7UF	10%	16V	C8602	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C8453	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	C8603	1-128-357-11	ELECT CHIP	10UF	20.00%	16V
C8454	1-127-820-11	CERAMIC CHIP	4.7UF	10%	16V	C8604	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V
C8455	1-164-943-81	CERAMIC CHIP	0.01UF	10.00%	16V	C8605	1-128-357-11	ELECT CHIP	10UF	20.00%	16V
C8456	1-124-779-00	ELECT CHIP	10UF	20.00%	16V	C8606	1-128-357-11	ELECT CHIP	10UF	20.00%	16V
C8457	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V	C8609	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V
						C8610	1-117-681-11	ELECT CHIP	100UF	20.00%	16V
						C8611	1-164-933-11	CERAMIC CHIP	220PF	10.00%	50V
						C8612	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
						C8613	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
						C8614	1-164-933-11	CERAMIC CHIP	220PF	10.00%	50V
						C8615	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
C8616	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V	C8838	1-164-217-11	CERAMIC CHIP	150PF	5.00%	50V
C8617	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C8839	1-164-217-11	CERAMIC CHIP	150PF	5.00%	50V
C8618	1-124-779-00	ELECT CHIP	10UF	20.00%	16V	C8840	1-162-965-11	CERAMIC CHIP	0.0015UF	10.00%	50V
C8619	1-124-779-00	ELECT CHIP	10UF	20.00%	16V	C8841	1-162-965-11	CERAMIC CHIP	0.0015UF	10.00%	50V
C8620	1-128-357-11	ELECT CHIP	10UF	20.00%	16V	C8842	1-164-217-11	CERAMIC CHIP	150PF	5.00%	50V
C8621	1-164-935-11	CERAMIC CHIP	470PF	10.00%	50V	C8843	1-164-217-11	CERAMIC CHIP	150PF	5.00%	50V
C8622	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C8844	1-162-965-11	CERAMIC CHIP	0.0015UF	10.00%	50V
C8623	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V	C8845	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8625	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C8846	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8626	1-164-938-11	CERAMIC CHIP	0.0015UF	10.00%	50V	C8847	1-115-340-11	CERAMIC CHIP	0.22UF	10.00%	25V
C8627	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C8848	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8628	1-164-938-11	CERAMIC CHIP	0.0015UF	10.00%	50V	C8849	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8629	1-164-935-11	CERAMIC CHIP	470PF	10.00%	50V	C8850	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8630	1-115-154-11	ELECT CHIP	10UF	20.00%	16V	C8851	1-163-007-11	CERAMIC CHIP	680PF	10.00%	50V
C8631	1-115-154-11	ELECT CHIP	10UF	20.00%	16V	C8852	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8632	1-124-779-00	ELECT CHIP	10UF	20.00%	16V	C8853	1-163-007-11	CERAMIC CHIP	680PF	10.00%	50V
C8633	1-128-357-11	ELECT CHIP	10UF	20.00%	16V	C8854	1-163-007-11	CERAMIC CHIP	680PF	10.00%	50V
C8634	1-128-357-11	ELECT CHIP	10UF	20.00%	16V	C8855	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8635	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V	C8856	1-163-007-11	CERAMIC CHIP	680PF	10.00%	50V
C8636	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C8857	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8637	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V	C8858	1-163-007-11	CERAMIC CHIP	680PF	10.00%	50V
C8638	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C8859	1-163-007-11	CERAMIC CHIP	680PF	10.00%	50V
C8639	1-164-933-11	CERAMIC CHIP	220PF	10.00%	50V	C8860	1-163-007-11	CERAMIC CHIP	680PF	10.00%	50V
C8640	1-164-933-11	CERAMIC CHIP	220PF	10.00%	50V	C8861	1-163-007-11	CERAMIC CHIP	680PF	10.00%	50V
C8641	1-124-779-00	ELECT CHIP	10UF	20.00%	16V	C8862	1-165-585-21	ELECT CHIP	47UF	20%	25V
C8642	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V	C8863	1-165-585-21	ELECT CHIP	47UF	20%	25V
C8644	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V	C8864	1-165-585-21	ELECT CHIP	47UF	20%	25V
C8645	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C8865	1-165-585-21	ELECT CHIP	47UF	20%	25V
C8647	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V	C8867	1-128-401-11	ELECT CHIP	100UF	20%	25V
C8648	1-124-779-00	ELECT CHIP	10UF	20.00%	16V	C8868	1-100-591-91	CERAMIC CHIP	1UF	10%	25V
C8649	1-124-779-00	ELECT CHIP	10UF	20.00%	16V	C8869	1-100-591-91	CERAMIC CHIP	1UF	10%	25V
C8657	1-124-779-00	ELECT CHIP	10UF	20.00%	16V	C8870	1-100-591-91	CERAMIC CHIP	1UF	10%	25V
C8658	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C8871	1-100-591-91	CERAMIC CHIP	1UF	10%	25V
C8659	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C8872	1-128-401-11	ELECT CHIP	100UF	20%	25V
C8660	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C8873	1-128-992-21	ELECT CHIP	47UF	20%	25V
C8661	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V	C8874	1-112-030-31	ELECT	1500UF	20%	35V
C8663	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V	C8875	1-112-030-31	ELECT	1500UF	20%	35V
C8801	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V	C8876	1-131-702-11	FILM	0.68UF	5%	50V
C8802	1-124-779-00	ELECT CHIP	10UF	20.00%	16V	C8877	1-131-702-11	FILM	0.68UF	5%	50V
C8803	1-128-357-11	ELECT CHIP	10UF	20.00%	16V	C8878	1-131-702-11	FILM	0.68UF	5%	50V
C8804	1-128-357-11	ELECT CHIP	10UF	20.00%	16V	C8879	1-131-702-11	FILM	0.68UF	5%	50V
C8805	1-164-936-11	CERAMIC CHIP	680PF	10.00%	50V	C8880	1-100-671-11	CERAMIC CHIP	4.7UF	20%	25V
C8806	1-164-937-11	CERAMIC CHIP	0.001UF	10.00%	50V	C8881	1-100-671-11	CERAMIC CHIP	4.7UF	20%	25V
C8807	1-164-937-11	CERAMIC CHIP	0.001UF	10.00%	50V	C8882	1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C8808	1-124-779-00	ELECT CHIP	10UF	20.00%	16V	C8883	1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C8809	1-164-936-11	CERAMIC CHIP	680PF	10.00%	50V	C8886	1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C8810	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V	C8887	1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C8813	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V	C8888	1-100-671-11	CERAMIC CHIP	4.7UF	20%	25V
C8814	1-126-204-11	ELECT CHIP	47UF	20.00%	16V	C8889	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C8815	1-126-204-11	ELECT CHIP	47UF	20.00%	16V	C8894	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V
C8816	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C8895	1-126-603-11	ELECT CHIP	4.7UF	20.00%	35V
C8817	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V	C8896	1-126-603-11	ELECT CHIP	4.7UF	20.00%	35V
C8820	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C8897	1-126-603-11	ELECT CHIP	4.7UF	20.00%	35V
C8821	1-124-779-00	ELECT CHIP	10UF	20.00%	16V	C8898	1-126-603-11	ELECT CHIP	4.7UF	20.00%	35V
C8822	1-126-399-11	ELECT CHIP	10UF	20.00%	35V	C8901	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C8823	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V	C8902	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C8827	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V	C8903	1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C8830	1-128-992-21	ELECT CHIP	47UF	20%	25V	C8904	1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C8831	1-128-595-11	ELECT CHIP	2.2UF	20.00%	50V	C8905	1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C8832	1-128-595-11	ELECT CHIP	2.2UF	20.00%	50V	C8906	1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C8833	1-126-395-11	ELECT CHIP	22UF	20.00%	16V	C8907	1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C8834	1-126-395-11	ELECT CHIP	22UF	20.00%	16V	C8908	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C8835	1-126-405-11	ELECT CHIP	10UF	20.00%	50V	C8938	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
C8836	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C8940	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C8837	1-162-965-11	CERAMIC CHIP	0.0015UF	10.00%	50V	C8942	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
C9001	1-125-891-11	CERAMIC CHIP	0.47UF	10.00%	10V	C9359	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9002	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9360	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9003	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9361	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9004	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9362	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9005	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9363	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9006	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9364	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9007	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9365	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9008	1-162-926-11	CERAMIC CHIP	82PF	5.00%	50V	C9366	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9009	1-162-926-11	CERAMIC CHIP	82PF	5.00%	50V	C9367	1-117-681-11	ELECT CHIP	100UF	20.00%	16V
C9010	1-162-926-11	CERAMIC CHIP	82PF	5.00%	50V	C9368	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9011	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9369	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C9012	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9370	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C9013	1-164-943-81	CERAMIC CHIP	0.01UF	10.00%	16V	C9371	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C9014	1-164-943-81	CERAMIC CHIP	0.01UF	10.00%	16V	C9372	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9015	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9373	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9016	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9374	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9017	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9375	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9018	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9376	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9019	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9377	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9020	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9378	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9021	1-112-065-11	CERAMIC CHIP	4.7UF	10%	16V	C9379	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9022	1-165-492-21	ELECT CHIP	100UF	20%	10V	C9380	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9023	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V	C9381	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9030	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9382	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C9031	1-100-881-91	CERAMIC CHIP	47UF	20%	6.3V	C9383	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9032	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9384	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9033	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9385	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9034	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9386	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C9035	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9387	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C9036	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9388	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C9037	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9389	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9040	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9390	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9041	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9391	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9042	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9392	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9043	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9393	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9044	1-162-926-11	CERAMIC CHIP	82PF	5.00%	50V	C9394	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9046	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9395	1-128-399-11	ELECT CHIP	330UF	20%	16V
C9047	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9396	1-113-619-11	CERAMIC CHIP	0.47UF	10%	10V
C9048	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9397	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V
C9049	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V	C9398	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C9057	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9399	1-113-619-11	CERAMIC CHIP	0.47UF		10V
C9058	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9400	1-100-354-21	ELECT CHIP	220UF	20%	6.3V
C9059	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9401	1-113-619-11	CERAMIC CHIP	0.47UF		10V
C9060	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9402	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C9156	1-164-943-81	CERAMIC CHIP	0.01UF	10.00%	16V	C9403	1-164-943-81	CERAMIC CHIP	0.01UF	10.00%	16V
C9201	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C9404	1-113-619-11	CERAMIC CHIP	0.47UF		10V
C9202	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V	C9405	1-164-943-81	CERAMIC CHIP	0.01UF	10.00%	16V
C9206	1-127-931-21	ELECT CHIP	470UF	20%	16V	C9406	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C9207	1-127-931-21	ELECT CHIP	470UF	20%	16V	C9408	1-113-619-11	CERAMIC CHIP	0.47UF		10V
C9210	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9410	1-113-619-11	CERAMIC CHIP	0.47UF		10V
C9211	1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V	C9411	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9215	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9412	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9216	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9413	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
C9225	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V	C9414	1-162-925-11	CERAMIC CHIP	68PF	5.00%	50V
C9226	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V	C9415	1-100-354-21	ELECT CHIP	220UF	20%	6.3V
C9227	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V	C9416	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C9228	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V	C9417	1-165-887-91	CERAMIC CHIP	0.22UF	10%	6.3V
C9229	1-100-591-91	CERAMIC CHIP	1UF	10%	25V	C9420	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C9230	1-165-908-11	CERAMIC CHIP	1UF	10%	10V	C9422	1-128-994-21	ELECT CHIP	47UF	20%	10V
C9231	1-165-908-11	CERAMIC CHIP	1UF	10%	10V	C9423	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V
C9235	1-165-908-11	CERAMIC CHIP	1UF	10%	10V	C9424	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
C9355	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9425	1-100-591-91	CERAMIC CHIP	1UF	10%	25V
C9356	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9426	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V
C9357	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9427	1-100-354-21	ELECT CHIP	220UF	20%	6.3V
C9358	1-100-743-91	CERAMIC CHIP	2.2UF	20%	16V	C9428	1-127-931-21	ELECT CHIP	470UF	20%	16V

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C9429	1-100-354-21	ELECT CHIP	220UF 20% 6.3V	C9708	1-125-777-11	CERAMIC CHIP	0.1UF 10.00% 10V
C9430	1-100-743-91	CERAMIC CHIP	2.2UF 20% 16V	C9710	1-128-993-21	ELECT CHIP	22UF 20% 10V
C9433	1-112-065-11	CERAMIC CHIP	4.7UF 10% 16V	C9711	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V
C9434	1-100-881-91	CERAMIC CHIP	47UF 20% 6.3V	C9712	1-126-394-11	ELECT CHIP	10UF 20.00% 16V
C9435	1-100-597-91	CERAMIC CHIP	0.1UF 10% 25V	C9713	1-125-777-11	CERAMIC CHIP	0.1UF 10.00% 10V
C9439	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V	C9714	1-100-591-91	CERAMIC CHIP	1UF 10% 25V
C9440	1-127-931-21	ELECT CHIP	470UF 20% 16V	C9715	1-117-681-11	ELECT CHIP	100UF 20.00% 16V
C9441	1-127-931-21	ELECT CHIP	470UF 20% 16V	C9716	1-128-993-21	ELECT CHIP	22UF 20% 10V
C9442	1-127-931-21	ELECT CHIP	470UF 20% 16V	C9718	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V
C9443	1-127-931-21	ELECT CHIP	470UF 20% 16V	C9719	1-165-979-21	ELECT CHIP	100UF 20% 6.3V
C9444	1-128-398-11	ELECT CHIP	220UF 20% 16V	C9721	1-115-456-21	DOUBLE LAYER	0.22F 5.5V
C9445	1-113-701-21	ELECT CHIP	22UF 20.00% 16V	C9723	1-100-591-91	CERAMIC CHIP	1UF 10% 25V
C9446	1-113-701-21	ELECT CHIP	22UF 20.00% 16V	C9725	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C9447	1-113-701-21	ELECT CHIP	22UF 20.00% 16V	C9726	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9448	1-165-908-11	CERAMIC CHIP	1UF 10% 10V	C9727	1-164-227-11	CERAMIC CHIP	0.022UF 10.00% 25V
C9449	1-165-908-11	CERAMIC CHIP	1UF 10% 10V	C9728	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C9450	1-165-908-11	CERAMIC CHIP	1UF 10% 10V	C9729	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9451	1-117-681-11	ELECT CHIP	100UF 20.00% 16V	C9731	1-117-681-11	ELECT CHIP	100UF 20.00% 16V
C9453	1-165-908-11	CERAMIC CHIP	1UF 10% 10V	C9734	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9454	1-165-908-11	CERAMIC CHIP	1UF 10% 10V	C9736	1-128-994-21	ELECT CHIP	47UF 20% 10V
C9456	1-165-908-11	CERAMIC CHIP	1UF 10% 10V	C9737	1-164-874-11	CERAMIC CHIP	100PF 5.00% 50V
C9556	1-100-911-11	CERAMIC CHIP	4.7UF 10% 25V	C9738	1-162-966-11	CERAMIC CHIP	0.0022UF 10.00% 50V
C9560	1-115-566-11	CERAMIC CHIP	4.7UF 10.00% 10V	C9740	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V
C9562	1-162-962-11	CERAMIC CHIP	470PF 10.00% 50V	C9741	1-125-777-11	CERAMIC CHIP	0.1UF 10.00% 10V
C9563	1-164-862-11	CERAMIC CHIP	33PF 5.00% 50V	C9743	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V
C9564	1-100-911-11	CERAMIC CHIP	4.7UF 10% 25V	C9744	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C9565	1-164-882-11	CERAMIC CHIP	220PF 5.00% 16V	C9746	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C9566	1-100-911-11	CERAMIC CHIP	4.7UF 10% 25V	C9747	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9567	1-100-912-11	CERAMIC CHIP	1UF 10% 25V	C9748	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9568	1-162-967-11	CERAMIC CHIP	0.0033UF 10.00% 50V	C9749	1-165-908-11	CERAMIC CHIP	1UF 10% 10V
C9569	1-162-967-11	CERAMIC CHIP	0.0033UF 10.00% 50V	C9750	1-100-591-91	CERAMIC CHIP	1UF 10% 25V
C9570	1-100-911-11	CERAMIC CHIP	4.7UF 10% 25V	C9751	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C9573	1-100-911-11	CERAMIC CHIP	4.7UF 10% 25V	C9752	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9574	1-100-912-11	CERAMIC CHIP	1UF 10% 25V	C9753	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C9575	1-100-912-11	CERAMIC CHIP	1UF 10% 25V	C9754	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9576	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V	C9755	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9577	1-164-227-11	CERAMIC CHIP	0.022UF 10.00% 25V	C9756	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9578	1-165-874-21	ELECT CHIP	120UF 20% 6.3V	C9757	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V
C9579	1-128-994-21	ELECT CHIP	47UF 20% 10V	C9758	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C9580	1-128-994-21	ELECT CHIP	47UF 20% 10V	C9759	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C9581	1-165-979-21	ELECT CHIP	100UF 20% 6.3V	C9760	1-124-779-00	ELECT CHIP	10UF 20.00% 16V
C9582	1-164-878-11	CERAMIC CHIP	150PF 5% 50V	C9761	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V
C9583	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V	C9764	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9585	1-115-566-11	CERAMIC CHIP	4.7UF 10.00% 10V	C9765	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V
C9586	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V	C9769	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9587	1-128-991-21	ELECT CHIP	10UF 20% 50V	C9770	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C9588	1-128-996-11	ELECT CHIP	4.7UF 20% 50V	C9771	1-124-779-00	ELECT CHIP	10UF 20.00% 16V
C9589	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V	C9773	1-162-911-11	CERAMIC CHIP	6PF 0.50PF 50V
C9590	1-128-996-11	ELECT CHIP	4.7UF 20% 50V	C9779	1-162-911-11	CERAMIC CHIP	6PF 0.50PF 50V
C9591	1-125-827-91	CERAMIC CHIP	1UF 10.00% 25V	C9781	1-100-591-91	CERAMIC CHIP	1UF 10% 25V
C9595	1-100-756-91	CERAMIC CHIP	0.047UF 50V	C9788	1-125-777-11	CERAMIC CHIP	0.1UF 10.00% 10V
C9596	1-100-597-91	CERAMIC CHIP	0.1UF 10% 25V	C9789	1-128-993-21	ELECT CHIP	22UF 20% 10V
C9597	1-135-599-11	ELECT CHIP	39UF 20% 16V	C9800	1-164-943-81	CERAMIC CHIP	0.01UF 10.00% 16V
C9598	1-126-204-11	ELECT CHIP	47UF 20.00% 16V	C9801	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9600	1-126-204-11	ELECT CHIP	47UF 20.00% 16V	C9802	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9601	1-126-204-11	ELECT CHIP	47UF 20.00% 16V	C9803	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9603	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V	C9804	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V
C9604	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V	<CONNECTOR>			
C9605	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V	CN8801	* 1-580-838-11	PIN, CONNECTOR (PC BOARD) 4P	
C9610	1-100-756-91	CERAMIC CHIP	0.047UF 50V	CN9003	1-820-284-11	D SUB CONNECTOR	
C9701	1-125-777-11	CERAMIC CHIP	0.1UF 10.00% 10V	CN9201	* 1-819-928-11	HEADER ASSEMBLY 20P	
C9703	1-164-943-81	CERAMIC CHIP	0.01UF 10.00% 16V	CN9203	* 1-819-797-11	HEADER ASSEMBLY FOR PWB 13P	
C9704	1-165-908-11	CERAMIC CHIP	1UF 10% 10V	CN9204	* 1-794-502-11	PIN, CONNECTOR (B04B-PASK) 4P	
C9705	1-125-777-11	CERAMIC CHIP	0.1UF 10.00% 10V				
C9706	1-125-777-11	CERAMIC CHIP	0.1UF 10.00% 10V				

The components identified △ marked are critical for safety.
Replace only with the part number specified.

AG

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
CN9207	* 1-818-714-21	HEADER ASSEMBLY 20P		<FUSE>			
CN9209	1-820-461-11	CONNECTOR, BOARD TO BOARD 140P		F8801	△ 1-576-774-21	FUSE 6.3A 72V	
CN9210	1-819-337-11	HEADER ASSEMBLY FOR PWB 10P		F8803	△ 1-576-842-11	FUSE 0.63A 32V	
CN9214	1-818-656-21	HEADER ASSEMBLY 30P		F9551	△ 1-576-933-21	FUSE 5A 24V	
CN9701	1-794-343-51	CONNECTOR, FFC/FPC 18P		F9552	△ 1-576-612-21	FUSE 1A 32V	
CN9702	1-794-342-51	CONNECTOR, FFC/FPC 14P		F9553	△ 1-576-612-21	FUSE 1A 32V	
<DIODE>				F9554	△ 1-576-603-11	FUSE 3.15A 24V	
D8411	8-719-404-50	DIODE MA111-TX		<FERRITE BEAD>			
D8413	8-719-404-50	DIODE MA111-TX		FB8401	1-414-234-22	FERRITE 0UH	
D8414	8-719-404-50	DIODE MA111-TX		FB8402	1-414-921-11	FERRITE 0UH	
D8603	8-719-404-50	DIODE MA111-TX		FB8404	1-400-794-21	FERRITE 0UH	
D8605	8-719-404-50	DIODE MA111-TX		FB8405	1-414-921-11	FERRITE 0UH	
D8606	8-719-404-50	DIODE MA111-TX		FB8406	1-400-499-21	FERRITE 0UH	
D8612	8-719-404-50	DIODE MA111-TX		FB8407	1-400-499-21	FERRITE 0UH	
D8614	8-719-404-50	DIODE MA111-TX		FB8408	1-414-921-11	FERRITE 0UH	
D8615	8-719-404-50	DIODE MA111-TX		FB8409	1-469-637-21	FERRITE 0UH	
D8616	8-719-404-50	DIODE MA111-TX		FB8410	1-469-637-21	FERRITE 0UH	
D8617	8-719-404-50	DIODE MA111-TX		FB8411	1-469-637-21	FERRITE 0UH	
D8618	8-719-404-50	DIODE MA111-TX		FB8412	1-469-637-21	FERRITE 0UH	
D8801	8-719-404-50	DIODE MA111-TX		FB8801	1-414-234-22	FERRITE 0UH	
D8804	8-719-404-50	DIODE MA111-TX		FB9001	1-414-554-21	FERRITE 0UH	
D8805	8-719-404-50	DIODE MA111-TX		FB9002	1-414-554-21	FERRITE 0UH	
D8807	8-719-404-50	DIODE MA111-TX		FB9003	1-414-554-21	FERRITE 0UH	
D8808	8-719-404-50	DIODE MA111-TX		FB9004	1-414-554-21	FERRITE 0UH	
D8809	6-500-884-01	DIODE P6SMBJ30A-5		FB9007	1-414-554-21	FERRITE 0UH	
D8810	6-500-884-01	DIODE P6SMBJ30A-5		FB9011	1-414-554-21	FERRITE 0UH	
D8811	6-500-884-01	DIODE P6SMBJ30A-5		FB9012	1-414-234-22	FERRITE 0UH	
D8812	6-500-884-01	DIODE P6SMBJ30A-5		FB9013	1-414-554-21	FERRITE 0UH	
D8814	6-500-884-01	DIODE P6SMBJ30A-5		FB9015	1-414-554-21	FERRITE 0UH	
D8815	6-500-884-01	DIODE P6SMBJ30A-5		FB9151	1-481-051-21	FERRITE 0UH	
D8816	6-500-884-01	DIODE P6SMBJ30A-5		FB9152	1-481-051-21	FERRITE 0UH	
D8817	6-500-884-01	DIODE P6SMBJ30A-5		FB9153	1-414-445-11	FERRITE 0UH	
D9023	8-719-422-46	DIODE MA8056		FB9154	1-469-082-21	FERRITE 0UH	
D9024	8-719-422-46	DIODE MA8056		FB9156	1-481-051-21	FERRITE 0UH	
D9026	8-719-422-46	DIODE MA8056		FB9157	1-481-051-21	FERRITE 0UH	
D9027	8-719-801-78	DIODE 1SS184		FB9158	1-481-051-21	FERRITE 0UH	
D9033	8-719-050-38	DIODE M1MA152WK-T1		FB9159	1-481-051-21	FERRITE 0UH	
D9034	8-719-050-38	DIODE M1MA152WK-T1		FB9209	1-400-089-21	FERRITE 0UH	
D9552	8-719-422-58	DIODE MA8062		FB9210	1-400-089-21	FERRITE 0UH	
D9553	8-719-069-29	DIODE RB520S-30TE61		FB9211	1-400-089-21	FERRITE 0UH	
D9556	6-501-336-01	DIODE RSX201L-30TE25		FB9212	1-469-082-21	FERRITE 0UH	
D9557	8-719-078-04	DIODE EC31QS03L-TE12L		FB9225	1-400-089-21	FERRITE 0UH	
D9558	8-719-073-69	DIODE PTZ-TE25-6.2A		FB9227	1-469-082-21	FERRITE 0UH	
D9559	6-500-294-01	DIODE PTZ-TE25-3.9B		FB9235	1-481-051-21	FERRITE 0UH	
D9560	8-719-069-29	DIODE RB520S-30TE61		FB9236	1-414-445-11	FERRITE 0UH	
D9702	8-719-050-37	DIODE M1MA152WA-T1		FB9237	1-400-794-21	FERRITE 0UH	
D9703	8-719-058-24	DIODE RB501V-40TE-17		FB9238	1-400-794-21	FERRITE 0UH	
D9705	8-719-404-50	DIODE MA111-TX		FB9240	1-400-089-21	FERRITE 0UH	
D9708	8-719-423-03	DIODE MA8100		FB9241	1-469-637-21	FERRITE 0UH	
D9710	8-719-050-37	DIODE M1MA152WA-T1		FB9242	1-469-637-21	FERRITE 0UH	
D9711	8-719-050-38	DIODE M1MA152WK-T1		FB9243	1-469-637-21	FERRITE 0UH	
D9714	8-719-050-37	DIODE M1MA152WA-T1		FB9244	1-469-637-21	FERRITE 0UH	
D9715	8-719-050-38	DIODE M1MA152WK-T1		FB9245	1-469-637-21	FERRITE 0UH	
D9716	8-719-423-03	DIODE MA8100		FB9246	1-469-637-21	FERRITE 0UH	
ET001	1-780-336-11	EARTH TERMINAL		FB9247	1-469-637-21	FERRITE 0UH	
ET002	1-780-336-11	EARTH TERMINAL		FB9248	1-469-637-21	FERRITE 0UH	
ET003	1-780-336-11	EARTH TERMINAL		FB9249	1-469-637-21	FERRITE 0UH	
ET004	1-780-336-11	EARTH TERMINAL		FB9250	1-469-637-21	FERRITE 0UH	
ET005	1-780-336-11	EARTH TERMINAL		FB9251	1-414-445-11	FERRITE 0UH	
				FB9551	1-469-092-11	FERRITE 0UH	
				FB9552	1-469-092-11	FERRITE 0UH	
				FB9553	1-400-794-21	FERRITE 0UH	
				FB9707	1-400-794-21	FERRITE 0UH	

The components identified $\triangle$ marked are critical for safety.
Replace only with the part number specified.

AG

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
<FILTER>				L8603	1-412-058-11	INDUCTOR	10UH
FL8405	1-234-494-21	FILTER, EMI REMOVAL (SMD)		L8604	1-469-555-21	INDUCTOR	10UH
FL9203	1-234-494-21	FILTER, EMI REMOVAL (SMD)		L8606	1-469-555-21	INDUCTOR	10UH
FL9400	1-234-494-21	FILTER, EMI REMOVAL (SMD)		L8801	1-412-058-11	INDUCTOR	10UH
FL9701	1-234-494-21	FILTER, EMI REMOVAL (SMD)		L8802	1-412-058-11	INDUCTOR	10UH
FL9702	1-234-494-21	FILTER, EMI REMOVAL (SMD)		L8803	1-412-058-11	INDUCTOR	10UH
FL9703	1-234-494-21	FILTER, EMI REMOVAL (SMD)		L8804	1-412-058-11	INDUCTOR	10UH
FL9704	1-234-177-21	FERRITE 0UH		L8805	1-456-065-21	INDUCTOR	22UH
<IC>				L8806	1-457-318-11	INDUCTOR	22UH
IC8401	6-707-151-01	IC SN74AHCT244PWR		L8807	1-457-318-11	INDUCTOR	22UH
IC8404	8-759-592-45	IC TC7SZU04FU(TE85R)		L8808	1-412-062-11	INDUCTOR	47UH
IC8405	6-709-778-11	IC MSP4411K-QA-D6-401T		L8809	1-412-062-11	INDUCTOR	47UH
IC8406	6-706-536-01	IC CXD9826R		L9351	1-412-058-11	INDUCTOR	10UH
IC8407	6-706-907-01	IC M5M51008DFP-70H		L9352	1-412-058-11	INDUCTOR	10UH
IC8408	8-759-183-53	IC TL431CPK-E2		L9353	1-412-058-11	INDUCTOR	10UH
IC8409	8-759-359-49	IC NJM3414AV(TE2)		L9354	1-412-058-11	INDUCTOR	10UH
IC8410	6-707-593-01	IC PST3641UL		L9355	1-412-058-11	INDUCTOR	10UH
IC8411	8-759-679-05	IC TC7WH34FU(TE12R)		L9356	1-412-955-11	INDUCTOR	22UH
IC8601	8-759-278-58	IC NJM4558V-TE2		L9357	1-412-058-11	INDUCTOR	10UH
IC8602	8-759-278-58	IC NJM4558V-TE2		L9358	1-412-058-11	INDUCTOR	10UH
IC8603	8-752-107-98	IC CXA2188Q-T4		L9552	1-424-918-21	INDUCTOR	10UH
IC8604	8-759-278-58	IC NJM4558V-TE2		L9553	1-416-346-11	INDUCTOR	33UH
IC8605	8-759-278-58	IC NJM4558V-TE2		L9554	1-416-344-11	INDUCTOR	10UH
IC8606	8-759-278-58	IC NJM4558V-TE2		L9555	1-416-344-11	INDUCTOR	10UH
IC8801	6-708-762-01	IC PQ200WNA1ZPH		L9556	1-416-344-11	INDUCTOR	10UH
IC8802	8-759-338-95	IC NJM2903V(TE2)		L9558	1-414-755-11	INDUCTOR	22UH
IC8803	8-759-278-58	IC NJM4558V-TE2		L9559	1-400-815-21	INDUCTOR	1.2MH
IC8804	8-759-700-07	IC NJM2903M		L9560	1-412-064-11	INDUCTOR	100UH
IC8806	6-709-285-01	IC M61571AFP-DF0T		L9561	1-416-344-11	INDUCTOR	10UH
IC8807	8-759-278-58	IC NJM4558V-TE2		L9562	1-416-344-11	INDUCTOR	10UH
IC8808	8-759-278-58	IC NJM4558V-TE2		L9701	1-412-058-11	INDUCTOR	10UH
IC9001	6-704-600-01	IC M24C02-WMN6T(B)		L9703	1-469-555-21	INDUCTOR	10UH
IC9201	6-706-815-01	IC TMP75AIDR		L9705	1-469-555-21	INDUCTOR	10UH
IC9351	8-753-247-58	IC CXA2239R-TL		L9706	1-412-058-11	INDUCTOR	10UH
IC9353	6-709-777-01	IC ADA4861-3YRZ-RL7		L9707	1-469-555-21	INDUCTOR	10UH
IC9553	6-706-884-01	IC BD9851EFV-E2		<IC LINK>			
IC9554	8-749-925-00	IC TK11819MTL		PS9001	$\triangle$ 1-576-122-21	IC LINK	0.4A 72V
IC9555	6-708-762-01	IC PQ200WNA1ZPH		<TRANSISTOR>			
IC9701	6-705-373-01	IC MM3123DPLE		Q8401	8-729-421-22	TRANSISTOR UN2211	
IC9702	6-709-512-01	IC S-1132B18-M5T1G		Q8402	6-550-585-01	TRANSISTOR 2PC4081R-115	
IC9703	6-709-517-01	IC S-35390A-J8T1G		Q8403	6-550-586-01	TRANSISTOR 2PA1576R-115	
IC9704	6-708-219-01	IC MB91305PMC-G-BNDE1		Q8404	8-729-421-19	TRANSISTOR UN2213	
IC9705	6-703-175-01	IC PST3629UL		Q8405	8-729-905-35	TRANSISTOR 2SC4081-R	
IC9706	6-704-067-01	IC M24128-BWMN6T(A)		Q8410	8-729-424-08	TRANSISTOR UN2111	
IC9707	6-807-033-01	IC S29AL008D70TFI010-2000		Q8411	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
<JACK>				Q8412	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
J9001	1-780-271-11	S CONNECTOR BLOCK		Q8413	8-729-421-19	TRANSISTOR UN2213	
J9002	1-819-357-11	PHONO JACK 10P		Q8601	8-729-905-35	TRANSISTOR 2SC4081-R	
J9003	1-819-387-11	PHONO JACK 3P		Q8604	8-729-421-22	TRANSISTOR UN2211	
J9004	* 1-819-358-11	PHONO JACK		Q8606	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
J9005	1-507-792-00	JACK		Q8607	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
J9006	1-819-755-12	CONNECTOR FOR OPTICAL FIBRE		Q8611	8-729-424-08	TRANSISTOR UN2111	
<COIL>				Q8614	8-729-905-35	TRANSISTOR 2SC4081-R	
L8401	1-412-058-11	INDUCTOR	10UH	Q8615	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L8402	1-412-990-41	INDUCTOR	8.2UH	Q8618	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L8403	1-412-058-11	INDUCTOR	10UH	Q8619	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L8404	1-412-058-11	INDUCTOR	10UH	Q8622	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L8601	1-469-555-21	INDUCTOR	10UH	Q8623	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
				Q8627	8-729-424-08	TRANSISTOR UN2111	
				Q8628	8-729-421-22	TRANSISTOR UN2211	
				Q8630	8-729-421-22	TRANSISTOR UN2211	

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
Q8631	8-729-905-35	TRANSISTOR 2SC4081-R		<RESISTOR>			
Q8632	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8402	1-218-990-81	SHORT CHIP	0
Q8633	8-729-905-35	TRANSISTOR 2SC4081-R		R8403	1-218-990-81	SHORT CHIP	0
Q8634	8-729-421-22	TRANSISTOR UN2211		R8404	1-218-990-81	SHORT CHIP	0
Q8635	8-729-421-22	TRANSISTOR UN2211		R8407	1-218-937-11	RES-CHIP	47 5% 1/16W
Q8636	8-729-421-22	TRANSISTOR UN2211		R8413	1-218-937-11	RES-CHIP	47 5% 1/16W
Q8801	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R8415	1-218-937-11	RES-CHIP	47 5% 1/16W
Q8804	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16		R8417	1-218-937-11	RES-CHIP	47 5% 1/16W
Q8807	8-729-424-08	TRANSISTOR UN2111		R8427	1-218-965-11	RES-CHIP	10K 5% 1/16W
Q8810	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8431	1-218-937-11	RES-CHIP	47 5% 1/16W
Q8811	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8433	1-218-937-11	RES-CHIP	47 5% 1/16W
Q8812	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8435	1-218-937-11	RES-CHIP	47 5% 1/16W
Q8813	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8446	1-218-941-81	RES-CHIP	100 5% 1/16W
Q8814	8-729-905-35	TRANSISTOR 2SC4081-R		R8447	1-218-990-81	SHORT CHIP	0
Q8815	8-729-424-08	TRANSISTOR UN2111		R8449	1-218-953-11	RES-CHIP	1K 5% 1/16W
Q8816	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16		R8451	1-218-965-11	RES-CHIP	10K 5% 1/16W
Q8819	8-729-600-22	TRANSISTOR 2SA1235-F		R8452	1-218-937-11	RES-CHIP	47 5% 1/16W
Q8820	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R8453	1-216-295-91	SHORT CHIP	0
Q9001	8-729-927-99	TRANSISTOR 2SC4617R		R8455	1-218-965-11	RES-CHIP	10K 5% 1/16W
Q9002	8-729-927-99	TRANSISTOR 2SC4617R		R8458	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
Q9005	6-550-549-01	TRANSISTOR DTC114EUAFT106		R8459	1-216-864-11	SHORT CHIP	0
Q9351	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8460	1-216-864-11	SHORT CHIP	0
Q9352	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8462	1-216-864-11	SHORT CHIP	0
Q9353	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8466	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9354	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8467	1-218-990-81	SHORT CHIP	0
Q9355	8-729-117-73	TRANSISTOR 2SC4178-F14		R8468	1-218-990-81	SHORT CHIP	0
Q9356	8-729-602-21	TRANSISTOR 2SC4154-F		R8469	1-218-990-81	SHORT CHIP	0
Q9357	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8471	1-218-941-81	RES-CHIP	100 5% 1/16W
Q9358	6-550-832-01	TRANSISTOR SI2301BDS-T1		R8472	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9359	8-729-029-14	TRANSISTOR DTC144EUA-T106		R8473	1-218-941-81	RES-CHIP	100 5% 1/16W
Q9361	8-729-602-21	TRANSISTOR 2SC4154-F		R8474	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9362	8-729-117-73	TRANSISTOR 2SC4178-F14		R8475	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9363	8-729-117-73	TRANSISTOR 2SC4178-F14		R8476	1-218-941-81	RES-CHIP	100 5% 1/16W
Q9364	8-729-117-73	TRANSISTOR 2SC4178-F14		R8477	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9365	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8478	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9551	8-729-602-36	TRANSISTOR 2SA1602-F		R8479	1-218-941-81	RES-CHIP	100 5% 1/16W
Q9552	8-729-602-21	TRANSISTOR 2SC4154-F		R8480	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9553	6-550-828-01	TRANSISTOR RSQ035P03TR		R8481	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9554	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R8483	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9558	8-729-029-14	TRANSISTOR DTC144EUA-T106		R8486	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9560	8-729-602-21	TRANSISTOR 2SC4154-F		R8488	1-218-941-81	RES-CHIP	100 5% 1/16W
Q9701	8-729-602-36	TRANSISTOR 2SA1602-F		R8489	1-218-967-11	RES-CHIP	15K 5% 1/16W
Q9702	8-729-602-36	TRANSISTOR 2SA1602-F		R8490	1-218-941-81	RES-CHIP	100 5% 1/16W
Q9703	8-729-602-36	TRANSISTOR 2SA1602-F		R8491	1-218-967-11	RES-CHIP	15K 5% 1/16W
Q9704	8-729-602-21	TRANSISTOR 2SC4154-F		R8492	1-218-973-11	RES-CHIP	47K 5% 1/16W
Q9705	8-729-028-96	TRANSISTOR DTC114EUA-T106		R8494	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9707	8-729-028-96	TRANSISTOR DTC114EUA-T106		R8495	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9708	8-729-602-21	TRANSISTOR 2SC4154-F		R8496	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9709	8-729-600-22	TRANSISTOR 2SA1235-F		R8497	1-218-965-11	RES-CHIP	10K 5% 1/16W
Q9711	8-729-028-74	TRANSISTOR DTA114TUA-T106		R8498	1-218-990-81	SHORT CHIP	0
Q9712	8-729-600-22	TRANSISTOR 2SA1235-F		R8499	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9713	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R8501	1-218-973-11	RES-CHIP	47K 5% 1/16W
Q9715	8-729-600-22	TRANSISTOR 2SA1235-F		R8502	1-218-990-81	SHORT CHIP	0
Q9716	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R8504	1-218-831-11	METAL CHIP	220 0.5% 1/10W
Q9718	8-729-013-28	TRANSISTOR HN1B01FU-TE85R		R8505	1-218-990-81	SHORT CHIP	0
Q9719	8-729-028-74	TRANSISTOR DTA114TUA-T106		R8506	1-218-990-81	SHORT CHIP	0
Q9720	8-729-029-04	TRANSISTOR DTC123JUA-T106		R8507	1-218-990-81	SHORT CHIP	0
Q9721	8-729-027-43	TRANSISTOR DTC114EKA-T146		R8508	1-218-990-81	SHORT CHIP	0
Q9732	6-551-387-01	TRANSISTOR SSM6N16FU		R8509	1-218-990-81	SHORT CHIP	0
Q9734	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8510	1-218-990-81	SHORT CHIP	0
Q9736	8-729-907-00	TRANSISTOR DTC114EU		R8511	1-218-871-11	METAL CHIP	10K 0.5% 1/10W
Q9740	8-729-600-22	TRANSISTOR 2SA1235-F		R8512	1-218-990-81	SHORT CHIP	0
Q9741	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R8513	1-218-990-81	SHORT CHIP	0
				R8514	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R8515	1-218-953-11	RES-CHIP	1K	5%	1/16W	R8622	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8518	1-216-295-91	SHORT CHIP	0			R8623	1-218-937-11	RES-CHIP	47	5%	1/16W
R8520	1-218-990-81	SHORT CHIP	0			R8624	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8521	1-218-990-81	SHORT CHIP	0			R8625	1-218-937-11	RES-CHIP	47	5%	1/16W
R8522	1-216-295-91	SHORT CHIP	0			R8626	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8523	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8627	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8524	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8628	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8525	1-218-953-11	RES-CHIP	1K	5%	1/16W	R8629	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8526	1-218-953-11	RES-CHIP	1K	5%	1/16W	R8630	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R8527	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8631	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R8528	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8632	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8529	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8633	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8530	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8634	1-218-950-11	RES-CHIP	560	5%	1/16W
R8531	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8635	1-218-950-11	RES-CHIP	560	5%	1/16W
R8532	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8636	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R8533	1-216-833-11	METAL CHIP	10K	5%	1/10W	R8637	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R8534	1-216-833-11	METAL CHIP	10K	5%	1/10W	R8638	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8535	1-216-817-11	METAL CHIP	470	5%	1/10W	R8642	1-218-990-81	SHORT CHIP	0		
R8536	1-216-821-11	METAL CHIP	1K	5%	1/10W	R8643	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8537	1-216-821-11	METAL CHIP	1K	5%	1/10W	R8644	1-218-990-81	SHORT CHIP	0		
R8538	1-216-817-11	METAL CHIP	470	5%	1/10W	R8645	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8539	1-216-821-11	METAL CHIP	1K	5%	1/10W	R8646	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8540	1-216-821-11	METAL CHIP	1K	5%	1/10W	R8647	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8541	1-216-817-11	METAL CHIP	470	5%	1/10W	R8648	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8542	1-216-821-11	METAL CHIP	1K	5%	1/10W	R8649	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8543	1-216-821-11	METAL CHIP	1K	5%	1/10W	R8650	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8544	1-216-817-11	METAL CHIP	470	5%	1/10W	R8651	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8545	1-216-821-11	METAL CHIP	1K	5%	1/10W	R8652	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8546	1-216-821-11	METAL CHIP	1K	5%	1/10W	R8653	1-218-977-11	RES-CHIP	100K	5%	1/16W
R8547	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R8655	1-218-990-81	SHORT CHIP	0		
R8548	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R8656	1-218-990-81	SHORT CHIP	0		
R8554	1-218-937-11	RES-CHIP	47	5%	1/16W	R8657	1-218-977-11	RES-CHIP	100K	5%	1/16W
R8559	1-218-990-81	SHORT CHIP	0			R8659	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8560	1-218-990-81	SHORT CHIP	0			R8664	1-208-705-11	METAL CHIP	8.2K	0.5%	1/16W
R8561	1-218-831-11	METAL CHIP	220	0.5%	1/10W	R8665	1-208-709-11	METAL CHIP	12K	0.5%	1/16W
R8562	1-218-833-11	METAL CHIP	270	0.5%	1/10W	R8666	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8564	1-218-990-81	SHORT CHIP	0			R8667	1-218-953-11	RES-CHIP	1K	5%	1/16W
R8566	1-218-990-81	SHORT CHIP	0			R8668	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8568	1-218-990-81	SHORT CHIP	0			R8670	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8569	1-218-990-81	SHORT CHIP	0			R8671	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8570	1-218-990-81	SHORT CHIP	0			R8673	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8571	1-218-941-81	RES-CHIP	100	5%	1/16W	R8674	1-218-953-11	RES-CHIP	1K	5%	1/16W
R8601	1-208-705-11	METAL CHIP	8.2K	0.5%	1/16W	R8677	1-218-941-81	RES-CHIP	100	5%	1/16W
R8602	1-208-709-11	METAL CHIP	12K	0.5%	1/16W	R8678	1-218-941-81	RES-CHIP	100	5%	1/16W
R8603	1-218-966-11	RES-CHIP	12K	5%	1/16W	R8679	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8604	1-218-966-11	RES-CHIP	12K	5%	1/16W	R8680	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R8605	1-218-953-11	RES-CHIP	1K	5%	1/16W	R8681	1-218-966-11	RES-CHIP	12K	5%	1/16W
R8606	1-218-990-81	SHORT CHIP	0			R8682	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8607	1-218-990-81	SHORT CHIP	0			R8683	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8608	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8685	1-218-937-11	RES-CHIP	47	5%	1/16W
R8609	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8687	1-218-937-11	RES-CHIP	47	5%	1/16W
R8610	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8690	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8611	1-208-709-11	METAL CHIP	12K	0.5%	1/16W	R8691	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8612	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R8696	1-218-950-11	RES-CHIP	560	5%	1/16W
R8613	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8697	1-218-950-11	RES-CHIP	560	5%	1/16W
R8614	1-218-968-11	RES-CHIP	18K	5%	1/16W	R8698	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8615	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8699	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8616	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8702	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8617	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R8703	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8618	1-208-709-11	METAL CHIP	12K	0.5%	1/16W	R8714	1-218-990-81	SHORT CHIP	0		
R8619	1-218-968-11	RES-CHIP	18K	5%	1/16W	R8715	1-218-990-81	SHORT CHIP	0		
R8621	1-218-990-81	SHORT CHIP	0			R8717	1-218-965-11	RES-CHIP	10K	5%	1/16W
						R8719	1-218-965-11	RES-CHIP	10K	5%	1/16W
						R8720	1-216-864-11	SHORT CHIP	0		
						R8721	1-218-977-11	RES-CHIP	100K	5%	1/16W

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R8722	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8861	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8723	1-218-969-11	RES-CHIP	22K	5%	1/16W	R8862	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8724	1-218-977-11	RES-CHIP	100K	5%	1/16W	R8863	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8725	1-218-949-11	RES-CHIP	470	5%	1/16W	R8864	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8726	1-218-941-81	RES-CHIP	100	5%	1/16W	R8865	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8727	1-218-989-11	RES-CHIP	1M	5%	1/16W	R8866	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8728	1-218-953-11	RES-CHIP	1K	5%	1/16W	R8867	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8729	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8868	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8730	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8869	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R8731	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8870	1-218-969-11	RES-CHIP	22K	5%	1/16W
R8734	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8871	1-218-977-11	RES-CHIP	100K	5%	1/16W
R8735	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8872	1-218-989-11	RES-CHIP	1M	5%	1/16W
R8747	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8873	1-216-846-11	METAL CHIP	120K	5%	1/10W
R8748	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8874	1-216-846-11	METAL CHIP	120K	5%	1/10W
R8749	1-216-864-11	SHORT CHIP	0			R8875	1-216-833-11	METAL CHIP	10K	5%	1/10W
R8750	1-216-864-11	SHORT CHIP	0			R8876	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8753	1-208-681-11	METAL CHIP	820	0.5%	1/16W	R8877	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8754	1-218-990-81	SHORT CHIP	0			R8878	1-216-864-11	SHORT CHIP	0		
R8801	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R8879	1-216-841-11	METAL CHIP	47K	5%	1/10W
R8802	1-216-864-11	SHORT CHIP	0			R8880	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8803	1-218-865-11	METAL CHIP	5.6K	0.5%	1/10W	R8881	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8804	1-216-847-11	METAL CHIP	150K	5%	1/10W	R8885	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R8805	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W	R8886	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R8806	1-218-964-11	RES-CHIP	8.2K	5%	1/16W	R8888	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R8807	1-218-964-11	RES-CHIP	8.2K	5%	1/16W	R8889	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R8808	1-218-990-81	SHORT CHIP	0			R8890	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R8809	1-218-964-11	RES-CHIP	8.2K	5%	1/16W	R8891	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R8810	1-218-964-11	RES-CHIP	8.2K	5%	1/16W	R8894	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R8811	1-218-990-81	SHORT CHIP	0			R8895	1-208-688-11	METAL CHIP	1.6K	0.5%	1/16W
R8813	1-218-990-81	SHORT CHIP	0			R8896	1-208-688-11	METAL CHIP	1.6K	0.5%	1/16W
R8814	1-218-990-81	SHORT CHIP	0			R8897	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R8816	1-218-977-11	RES-CHIP	100K	5%	1/16W	R8899	1-218-990-81	SHORT CHIP	0		
R8817	1-218-977-11	RES-CHIP	100K	5%	1/16W	R8900	1-218-990-81	SHORT CHIP	0		
R8818	1-218-990-81	SHORT CHIP	0			R8902	1-218-990-81	SHORT CHIP	0		
R8819	1-218-990-81	SHORT CHIP	0			R8903	1-218-990-81	SHORT CHIP	0		
R8820	1-218-953-11	RES-CHIP	1K	5%	1/16W	R8904	1-218-969-11	RES-CHIP	22K	5%	1/16W
R8822	1-208-705-11	METAL CHIP	8.2K	0.5%	1/16W	R8905	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8823	1-208-709-11	METAL CHIP	12K	0.5%	1/16W	R8906	1-218-953-11	RES-CHIP	1K	5%	1/16W
R8824	1-208-715-11	METAL CHIP	22K	0.5%	1/16W	R8907	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8825	1-208-715-11	METAL CHIP	22K	0.5%	1/16W	R8908	1-216-864-11	SHORT CHIP	0		
R8826	1-218-990-81	SHORT CHIP	0			R8909	1-216-864-11	SHORT CHIP	0		
R8827	1-218-990-81	SHORT CHIP	0			R8910	1-216-864-11	SHORT CHIP	0		
R8830	1-218-990-81	SHORT CHIP	0			R8911	1-216-864-11	SHORT CHIP	0		
R8831	1-218-990-81	SHORT CHIP	0			R8912	1-218-975-11	RES-CHIP	68K	5%	1/16W
R8834	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R8913	1-218-953-11	RES-CHIP	1K	5%	1/16W
R8836	1-218-990-81	SHORT CHIP	0			R8914	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8837	1-218-990-81	SHORT CHIP	0			R8915	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8838	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8916	1-218-989-11	RES-CHIP	1M	5%	1/16W
R8840	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R8917	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8844	1-216-841-11	METAL CHIP	47K	5%	1/10W	R8920	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R8846	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R8921	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R8847	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R8923	1-218-971-11	RES-CHIP	33K	5%	1/16W
R8848	1-218-877-11	METAL CHIP	18K	0.5%	1/10W	R8924	1-218-945-11	RES-CHIP	220	5%	1/16W
R8849	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	R8925	1-218-990-81	SHORT CHIP	0		
R8850	1-218-901-11	METAL CHIP	180K	0.5%	1/10W	R8926	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8851	1-218-877-11	METAL CHIP	18K	0.5%	1/10W	R8927	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8852	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R8928	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8853	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R8929	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8854	1-216-833-11	METAL CHIP	10K	5%	1/10W	R8930	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8855	1-218-891-11	METAL CHIP	68K	0.5%	1/10W	R8933	1-208-681-11	METAL CHIP	820	0.5%	1/16W
R8856	1-218-891-11	METAL CHIP	68K	0.5%	1/10W	R9002	1-216-813-11	METAL CHIP	220	5%	1/10W
R8857	1-216-864-11	SHORT CHIP	0			R9003	1-218-285-11	METAL CHIP	75	5%	1/10W
R8858	1-216-864-11	SHORT CHIP	0			R9004	1-216-813-11	METAL CHIP	220	5%	1/10W
R8859	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R9005	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R8860	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R9006	1-216-813-11	METAL CHIP	220	5%	1/10W

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R9007	1-216-821-11	METAL CHIP	1K	5%	1/10W	R9084	1-216-851-11	METAL CHIP	330K	5%	1/10W
R9008	1-216-813-11	METAL CHIP	220	5%	1/10W	R9085	1-216-801-11	METAL CHIP	22	5%	1/10W
R9009	1-208-675-11	METAL CHIP	470	0.5%	1/16W	R9086	1-216-813-11	METAL CHIP	220	5%	1/10W
R9010	1-216-813-11	METAL CHIP	220	5%	1/10W	R9087	1-216-813-11	METAL CHIP	220	5%	1/10W
R9011	1-216-815-11	METAL CHIP	330	5%	1/10W	R9088	1-216-805-11	METAL CHIP	47	5%	1/10W
R9012	1-216-815-11	METAL CHIP	330	5%	1/10W	R9089	1-216-805-11	METAL CHIP	47	5%	1/10W
R9014	1-216-813-11	METAL CHIP	220	5%	1/10W	R9090	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R9015	1-216-864-11	SHORT CHIP	0			R9091	1-216-809-11	METAL CHIP	100	5%	1/10W
R9016	1-216-813-11	METAL CHIP	220	5%	1/10W	R9092	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R9020	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9093	1-216-813-11	METAL CHIP	220	5%	1/10W
R9021	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9095	1-216-836-11	METAL CHIP	18K	5%	1/10W
R9022	1-216-815-11	METAL CHIP	330	5%	1/10W	R9097	1-216-813-11	METAL CHIP	220	5%	1/10W
R9023	1-216-815-11	METAL CHIP	330	5%	1/10W	R9098	1-216-833-11	METAL CHIP	10K	5%	1/10W
R9024	1-216-801-11	METAL CHIP	22	5%	1/10W	R9099	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R9025	1-216-801-11	METAL CHIP	22	5%	1/10W	R9100	1-216-813-11	METAL CHIP	220	5%	1/10W
R9026	1-216-801-11	METAL CHIP	22	5%	1/10W	R9101	1-216-833-11	METAL CHIP	10K	5%	1/10W
R9027	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9119	1-218-933-11	RES-CHIP	22	5%	1/16W
R9028	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9120	1-218-933-11	RES-CHIP	22	5%	1/16W
R9029	1-216-813-11	METAL CHIP	220	5%	1/10W	R9121	1-218-933-11	RES-CHIP	22	5%	1/16W
R9030	1-216-813-11	METAL CHIP	220	5%	1/10W	R9124	1-216-813-11	METAL CHIP	220	5%	1/10W
R9031	1-216-813-11	METAL CHIP	220	5%	1/10W	R9125	1-216-813-11	METAL CHIP	220	5%	1/10W
R9035	1-218-285-11	METAL CHIP	75	5%	1/10W	R9126	1-216-813-11	METAL CHIP	220	5%	1/10W
R9036	1-216-836-11	METAL CHIP	18K	5%	1/10W	R9151	1-216-864-11	SHORT CHIP	0		
R9039	1-216-813-11	METAL CHIP	220	5%	1/10W	R9157	1-218-990-81	SHORT CHIP	0		
R9040	1-216-813-11	METAL CHIP	220	5%	1/10W	R9158	1-218-990-81	SHORT CHIP	0		
R9041	1-216-813-11	METAL CHIP	220	5%	1/10W	R9159	1-218-990-81	SHORT CHIP	0		
R9043	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9160	1-218-990-81	SHORT CHIP	0		
R9044	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9161	1-218-990-81	SHORT CHIP	0		
R9045	1-216-813-11	METAL CHIP	220	5%	1/10W	R9162	1-218-990-81	SHORT CHIP	0		
R9046	1-216-813-11	METAL CHIP	220	5%	1/10W	R9164	1-218-990-81	SHORT CHIP	0		
R9047	1-216-813-11	METAL CHIP	220	5%	1/10W	R9166	1-218-990-81	SHORT CHIP	0		
R9048	1-216-821-11	METAL CHIP	1K	5%	1/10W	R9167	1-218-990-81	SHORT CHIP	0		
R9050	1-216-813-11	METAL CHIP	220	5%	1/10W	R9168	1-218-990-81	SHORT CHIP	0		
R9051	1-216-815-11	METAL CHIP	330	5%	1/10W	R9169	1-218-990-81	SHORT CHIP	0		
R9052	1-216-815-11	METAL CHIP	330	5%	1/10W	R9170	1-218-990-81	SHORT CHIP	0		
R9053	1-216-813-11	METAL CHIP	220	5%	1/10W	R9171	1-218-990-81	SHORT CHIP	0		
R9054	1-216-864-11	SHORT CHIP	0			R9172	1-218-990-81	SHORT CHIP	0		
R9055	1-216-864-11	SHORT CHIP	0			R9173	1-218-990-81	SHORT CHIP	0		
R9056	1-216-864-11	SHORT CHIP	0			R9174	1-218-990-81	SHORT CHIP	0		
R9057	1-216-813-11	METAL CHIP	220	5%	1/10W	R9175	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9059	1-216-815-11	METAL CHIP	330	5%	1/10W	R9176	1-218-990-81	SHORT CHIP	0		
R9060	1-216-813-11	METAL CHIP	220	5%	1/10W	R9177	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9061	1-216-815-11	METAL CHIP	330	5%	1/10W	R9178	1-216-864-11	SHORT CHIP	0		
R9062	1-216-813-11	METAL CHIP	220	5%	1/10W	R9179	1-216-864-11	SHORT CHIP	0		
R9063	1-216-813-11	METAL CHIP	220	5%	1/10W	R9180	1-216-864-11	SHORT CHIP	0		
R9064	1-216-813-11	METAL CHIP	220	5%	1/10W	R9181	1-216-864-11	SHORT CHIP	0		
R9065	1-216-813-11	METAL CHIP	220	5%	1/10W	R9182	1-216-864-11	SHORT CHIP	0		
R9066	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9183	1-216-864-11	SHORT CHIP	0		
R9067	1-216-813-11	METAL CHIP	220	5%	1/10W	R9184	1-216-864-11	SHORT CHIP	0		
R9068	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9185	1-216-864-11	SHORT CHIP	0		
R9069	1-216-813-11	METAL CHIP	220	5%	1/10W	R9186	1-216-864-11	SHORT CHIP	0		
R9070	1-216-813-11	METAL CHIP	220	5%	1/10W	R9194	1-218-831-11	METAL CHIP	220	0.5%	1/10W
R9071	1-216-813-11	METAL CHIP	220	5%	1/10W	R9198	1-218-831-11	METAL CHIP	220	0.5%	1/10W
R9072	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9208	1-218-831-11	METAL CHIP	220	0.5%	1/10W
R9073	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9214	1-218-990-81	SHORT CHIP	0		
R9074	1-216-809-11	METAL CHIP	100	5%	1/10W	R9215	1-218-990-81	SHORT CHIP	0		
R9075	1-216-809-11	METAL CHIP	100	5%	1/10W	R9216	1-218-990-81	SHORT CHIP	0		
R9076	1-216-864-11	SHORT CHIP	0			R9217	1-218-990-81	SHORT CHIP	0		
R9077	1-216-813-11	METAL CHIP	220	5%	1/10W	R9218	1-218-933-11	RES-CHIP	22	5%	1/16W
R9078	1-216-864-11	SHORT CHIP	0			R9219	1-218-933-11	RES-CHIP	22	5%	1/16W
R9079	1-216-864-11	SHORT CHIP	0			R9223	1-218-941-81	RES-CHIP	100	5%	1/16W
R9080	1-216-813-11	METAL CHIP	220	5%	1/10W	R9234	1-218-933-11	RES-CHIP	22	5%	1/16W
R9081	1-216-801-11	METAL CHIP	22	5%	1/10W	R9240	1-218-990-81	SHORT CHIP	0		
R9082	1-216-801-11	METAL CHIP	22	5%	1/10W	R9241	1-218-990-81	SHORT CHIP	0		
R9083	1-216-851-11	METAL CHIP	330K	5%	1/10W	R9242	1-218-990-81	SHORT CHIP	0		

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R9243	1-218-990-81	SHORT CHIP	0			R9346	1-218-933-11	RES-CHIP	22	5%	1/16W
R9244	1-218-990-81	SHORT CHIP	0			R9354	1-218-941-81	RES-CHIP	100	5%	1/16W
R9246	1-218-990-81	SHORT CHIP	0			R9355	1-218-941-81	RES-CHIP	100	5%	1/16W
R9247	1-218-990-81	SHORT CHIP	0			R9356	1-218-941-81	RES-CHIP	100	5%	1/16W
R9249	1-218-990-81	SHORT CHIP	0			R9358	1-218-941-81	RES-CHIP	100	5%	1/16W
R9250	1-218-990-81	SHORT CHIP	0			R9359	1-218-941-81	RES-CHIP	100	5%	1/16W
R9251	1-218-990-81	SHORT CHIP	0			R9360	1-218-941-81	RES-CHIP	100	5%	1/16W
R9252	1-218-990-81	SHORT CHIP	0			R9361	1-218-941-81	RES-CHIP	100	5%	1/16W
R9257	1-218-990-81	SHORT CHIP	0			R9362	1-218-941-81	RES-CHIP	100	5%	1/16W
R9258	1-218-990-81	SHORT CHIP	0			R9363	1-218-941-81	RES-CHIP	100	5%	1/16W
R9259	1-218-990-81	SHORT CHIP	0			R9364	1-218-941-81	RES-CHIP	100	5%	1/16W
R9260	1-218-990-81	SHORT CHIP	0			R9365	1-218-941-81	RES-CHIP	100	5%	1/16W
R9261	1-218-990-81	SHORT CHIP	0			R9366	1-218-941-81	RES-CHIP	100	5%	1/16W
R9262	1-218-990-81	SHORT CHIP	0			R9367	1-218-941-81	RES-CHIP	100	5%	1/16W
R9264	1-218-990-81	SHORT CHIP	0			R9368	1-218-941-81	RES-CHIP	100	5%	1/16W
R9265	1-218-990-81	SHORT CHIP	0			R9369	1-218-941-81	RES-CHIP	100	5%	1/16W
R9266	1-218-990-81	SHORT CHIP	0			R9370	1-218-941-81	RES-CHIP	100	5%	1/16W
R9267	1-218-990-81	SHORT CHIP	0			R9371	1-218-941-81	RES-CHIP	100	5%	1/16W
R9268	1-218-990-81	SHORT CHIP	0			R9372	1-218-941-81	RES-CHIP	100	5%	1/16W
R9270	1-218-990-81	SHORT CHIP	0			R9373	1-218-941-81	RES-CHIP	100	5%	1/16W
R9271	1-218-990-81	SHORT CHIP	0			R9374	1-218-941-81	RES-CHIP	100	5%	1/16W
R9272	1-218-990-81	SHORT CHIP	0			R9375	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R9273	1-218-990-81	SHORT CHIP	0			R9376	1-218-941-81	RES-CHIP	100	5%	1/16W
R9275	1-218-990-81	SHORT CHIP	0			R9377	1-218-941-81	RES-CHIP	100	5%	1/16W
R9277	1-218-990-81	SHORT CHIP	0			R9378	1-218-941-81	RES-CHIP	100	5%	1/16W
R9278	1-218-990-81	SHORT CHIP	0			R9379	1-218-941-81	RES-CHIP	100	5%	1/16W
R9279	1-218-990-81	SHORT CHIP	0			R9380	1-218-941-81	RES-CHIP	100	5%	1/16W
R9281	1-216-864-11	SHORT CHIP	0			R9381	1-218-941-81	RES-CHIP	100	5%	1/16W
R9282	1-216-864-11	SHORT CHIP	0			R9382	1-218-941-81	RES-CHIP	100	5%	1/16W
R9283	1-218-990-81	SHORT CHIP	0			R9383	1-216-041-00	RES-CHIP	470	5%	1/10W
R9284	1-216-864-11	SHORT CHIP	0			R9384	1-218-941-81	RES-CHIP	100	5%	1/16W
R9285	1-218-990-81	SHORT CHIP	0			R9385	1-218-941-81	RES-CHIP	100	5%	1/16W
R9287	1-216-295-91	SHORT CHIP	0			R9386	1-218-941-81	RES-CHIP	100	5%	1/16W
R9288	1-218-990-81	SHORT CHIP	0			R9387	1-218-941-81	RES-CHIP	100	5%	1/16W
R9289	1-218-990-81	SHORT CHIP	0			R9388	1-218-941-81	RES-CHIP	100	5%	1/16W
R9290	1-218-990-81	SHORT CHIP	0			R9389	1-218-941-81	RES-CHIP	100	5%	1/16W
R9291	1-216-295-91	SHORT CHIP	0			R9390	1-216-041-00	RES-CHIP	470	5%	1/10W
R9294	1-218-990-81	SHORT CHIP	0			R9391	1-218-941-81	RES-CHIP	100	5%	1/16W
R9295	1-218-990-81	SHORT CHIP	0			R9392	1-218-941-81	RES-CHIP	100	5%	1/16W
R9296	1-218-990-81	SHORT CHIP	0			R9393	1-218-941-81	RES-CHIP	100	5%	1/16W
R9297	1-218-990-81	SHORT CHIP	0			R9394	1-218-941-81	RES-CHIP	100	5%	1/16W
R9298	1-218-990-81	SHORT CHIP	0			R9395	1-218-975-11	RES-CHIP	68K	5%	1/16W
R9299	1-218-990-81	SHORT CHIP	0			R9396	1-218-975-11	RES-CHIP	68K	5%	1/16W
R9300	1-218-990-81	SHORT CHIP	0			R9397	1-218-941-81	RES-CHIP	100	5%	1/16W
R9301	1-218-990-81	SHORT CHIP	0			R9398	1-218-941-81	RES-CHIP	100	5%	1/16W
R9302	1-218-990-81	SHORT CHIP	0			R9399	1-218-941-81	RES-CHIP	100	5%	1/16W
R9303	1-218-990-81	SHORT CHIP	0			R9400	1-216-041-00	RES-CHIP	470	5%	1/10W
R9304	1-218-990-81	SHORT CHIP	0			R9401	1-218-941-81	RES-CHIP	100	5%	1/16W
R9305	1-218-990-81	SHORT CHIP	0			R9402	1-216-041-00	RES-CHIP	470	5%	1/10W
R9308	1-218-990-81	SHORT CHIP	0			R9403	1-218-941-81	RES-CHIP	100	5%	1/16W
R9311	1-216-295-91	SHORT CHIP	0			R9404	1-216-864-11	SHORT CHIP	0		
R9313	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R9405	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R9314	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R9406	1-216-041-00	RES-CHIP	470	5%	1/10W
R9315	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R9407	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9316	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R9408	1-218-941-81	RES-CHIP	100	5%	1/16W
R9317	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R9409	1-218-941-81	RES-CHIP	100	5%	1/16W
R9318	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R9410	1-218-941-81	RES-CHIP	100	5%	1/16W
R9319	1-216-815-11	METAL CHIP	330	5%	1/10W	R9411	1-218-941-81	RES-CHIP	100	5%	1/16W
R9320	1-216-815-11	METAL CHIP	330	5%	1/10W	R9412	1-218-937-11	RES-CHIP	47	5%	1/16W
R9321	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R9413	1-218-941-81	RES-CHIP	100	5%	1/16W
R9322	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R9414	1-218-941-81	RES-CHIP	100	5%	1/16W
R9323	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R9415	1-218-937-11	RES-CHIP	47	5%	1/16W
R9324	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R9416	1-211-973-11	METAL CHIP	15	0.5%	1/10W
R9325	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9417	1-211-973-11	METAL CHIP	15	0.5%	1/10W
R9326	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9418	1-211-973-11	METAL CHIP	15	0.5%	1/10W

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R9419	1-218-843-11	METAL CHIP	680	0.5%	1/10W	R9496	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R9420	1-218-845-11	METAL CHIP	820	0.5%	1/10W	R9498	1-218-839-11	METAL CHIP	470	0.5%	1/10W
R9421	1-218-953-11	RES-CHIP	1K	5%	1/16W	R9499	1-218-839-11	METAL CHIP	470	0.5%	1/10W
R9422	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R9500	1-218-839-11	METAL CHIP	470	0.5%	1/10W
R9423	1-218-835-11	METAL CHIP	330	0.5%	1/10W	R9501	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R9424	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R9502	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R9425	1-218-953-11	RES-CHIP	1K	5%	1/16W	R9503	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R9426	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9504	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R9427	1-218-845-11	METAL CHIP	820	0.5%	1/10W	R9505	1-218-847-11	METAL CHIP	1K	0.5%	1/10W
R9428	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R9551	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9429	1-211-977-11	METAL CHIP	22	0.5%	1/10W	R9552	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9430	1-218-845-11	METAL CHIP	820	0.5%	1/10W	R9556	1-218-953-11	RES-CHIP	1K	5%	1/16W
R9431	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R9557	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9432	1-211-977-11	METAL CHIP	22	0.5%	1/10W	R9561	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R9433	1-211-990-11	METAL CHIP	75	0.5%	1/10W	R9565	1-218-985-11	RES-CHIP	470K	5%	1/16W
R9434	1-211-990-11	METAL CHIP	75	0.5%	1/10W	R9569	1-218-967-11	RES-CHIP	15K	5%	1/16W
R9435	1-211-990-11	METAL CHIP	75	0.5%	1/10W	R9572	1-218-969-11	RES-CHIP	22K	5%	1/16W
R9439	1-218-941-81	RES-CHIP	100	5%	1/16W	R9574	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9440	1-216-864-11	SHORT CHIP	0			R9575	1-208-941-11	METAL CHIP	180K	0.5%	1/16W
R9441	1-216-864-11	SHORT CHIP	0			R9576	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R9442	1-218-983-11	RES-CHIP	330K	5%	1/16W	R9577	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R9443	1-218-983-11	RES-CHIP	330K	5%	1/16W	R9578	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9444	1-218-983-11	RES-CHIP	330K	5%	1/16W	R9582	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R9445	1-218-941-81	RES-CHIP	100	5%	1/16W	R9583	1-216-799-11	METAL CHIP	15	5%	1/10W
R9446	1-216-864-11	SHORT CHIP	0			R9584	1-216-799-11	METAL CHIP	15	5%	1/10W
R9447	1-216-864-11	SHORT CHIP	0			R9585	1-216-799-11	METAL CHIP	15	5%	1/10W
R9448	1-216-864-11	SHORT CHIP	0			R9593	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9449	1-218-941-81	RES-CHIP	100	5%	1/16W	R9594	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R9450	1-218-941-81	RES-CHIP	100	5%	1/16W	R9595	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R9451	1-218-941-81	RES-CHIP	100	5%	1/16W	R9596	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R9452	1-218-941-81	RES-CHIP	100	5%	1/16W	R9597	1-218-985-11	RES-CHIP	470K	5%	1/16W
R9456	1-216-864-11	SHORT CHIP	0			R9599	1-218-967-11	RES-CHIP	15K	5%	1/16W
R9458	1-216-864-11	SHORT CHIP	0			R9601	1-216-805-11	METAL CHIP	47	5%	1/10W
R9460	1-218-990-81	SHORT CHIP	0			R9602	1-216-843-11	METAL CHIP	68K	5%	1/10W
R9461	1-218-990-81	SHORT CHIP	0			R9603	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9462	1-218-990-81	SHORT CHIP	0			R9605	1-216-821-11	METAL CHIP	1K	5%	1/10W
R9463	1-211-977-11	METAL CHIP	22	0.5%	1/10W	R9606	1-218-990-81	SHORT CHIP	0		
R9464	1-218-977-11	METAL CHIP	22	0.5%	1/10W	R9610	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9465	1-211-977-11	METAL CHIP	22	0.5%	1/10W	R9612	1-218-990-81	SHORT CHIP	0		
R9466	1-216-864-11	SHORT CHIP	0			R9614	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R9467	1-211-977-11	METAL CHIP	22	0.5%	1/10W	R9615	1-208-661-11	METAL CHIP	120	0.5%	1/16W
R9468	1-216-864-11	SHORT CHIP	0			R9616	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R9469	1-216-864-11	SHORT CHIP	0			R9617	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R9470	1-218-835-11	METAL CHIP	330	0.5%	1/10W	R9631	1-218-990-81	SHORT CHIP	0		
R9471	1-218-835-11	METAL CHIP	330	0.5%	1/10W	R9632	1-216-843-11	METAL CHIP	68K	5%	1/10W
R9472	1-218-968-11	RES-CHIP	18K	5%	1/16W	R9701	1-218-977-11	RES-CHIP	100K	5%	1/16W
R9473	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R9702	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9474	1-218-949-11	RES-CHIP	470	5%	1/16W	R9703	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9475	1-216-041-00	RES-CHIP	470	5%	1/10W	R9704	1-218-953-11	RES-CHIP	1K	5%	1/16W
R9476	1-218-953-11	RES-CHIP	1K	5%	1/16W	R9705	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9479	1-218-893-11	METAL CHIP	82K	0.5%	1/10W	R9706	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9480	1-218-893-11	METAL CHIP	82K	0.5%	1/10W	R9707	1-216-864-11	SHORT CHIP	0		
R9481	1-218-893-11	METAL CHIP	82K	0.5%	1/10W	R9708	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9482	1-218-881-11	METAL CHIP	27K	0.5%	1/10W	R9709	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9483	1-218-881-11	METAL CHIP	27K	0.5%	1/10W	R9710	1-218-990-81	SHORT CHIP	0		
R9484	1-218-881-11	METAL CHIP	27K	0.5%	1/10W	R9711	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9485	1-216-821-11	METAL CHIP	1K	5%	1/10W	R9712	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9486	1-218-821-11	METAL CHIP	1K	5%	1/10W	R9713	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9487	1-216-821-11	METAL CHIP	1K	5%	1/10W	R9714	1-216-864-11	SHORT CHIP	0		
R9488	1-216-864-11	SHORT CHIP	0			R9716	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9489	1-216-864-11	SHORT CHIP	0			R9717	1-218-977-11	RES-CHIP	100K	5%	1/16W
R9492	1-216-864-11	SHORT CHIP	0			R9718	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9493	1-216-864-11	SHORT CHIP	0			R9719	1-216-864-11	SHORT CHIP	0		
R9494	1-216-864-11	SHORT CHIP	0			R9721	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R9495	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R9722	1-218-941-81	RES-CHIP	100	5%	1/16W

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R9723	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R9811	1-218-941-81	RES-CHIP	100	5%	1/16W
R9726	1-216-809-11	METAL CHIP	100	5%	1/10W	R9813	1-218-937-11	RES-CHIP	47	5%	1/16W
R9728	1-218-990-81	SHORT CHIP	0			R9814	1-218-941-81	RES-CHIP	100	5%	1/16W
R9732	1-218-969-11	RES-CHIP	22K	5%	1/16W	R9816	1-218-937-11	RES-CHIP	47	5%	1/16W
R9733	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9817	1-218-941-81	RES-CHIP	100	5%	1/16W
R9734	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9818	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R9735	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W	R9819	1-218-937-11	RES-CHIP	47	5%	1/16W
R9736	1-216-864-11	SHORT CHIP	0			R9821	1-218-990-81	SHORT CHIP	0		
R9739	1-218-977-11	RES-CHIP	100K	5%	1/16W	R9822	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R9740	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R9823	1-218-941-81	RES-CHIP	100	5%	1/16W
R9741	1-216-813-11	METAL CHIP	220	5%	1/10W	R9824	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9742	1-218-945-11	RES-CHIP	220	5%	1/16W	R9825	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9747	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9826	1-218-941-81	RES-CHIP	100	5%	1/16W
R9748	1-218-990-81	SHORT CHIP	0			R9827	1-218-941-81	RES-CHIP	100	5%	1/16W
R9751	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9828	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9752	1-216-857-11	METAL CHIP	1M	5%	1/10W	R9829	1-218-941-81	RES-CHIP	100	5%	1/16W
R9753	1-218-941-81	RES-CHIP	100	5%	1/16W	R9830	1-218-941-81	RES-CHIP	100	5%	1/16W
R9754	1-218-941-81	RES-CHIP	100	5%	1/16W	R9831	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9755	1-218-941-81	RES-CHIP	100	5%	1/16W	R9832	1-218-941-81	RES-CHIP	100	5%	1/16W
R9756	1-218-941-81	RES-CHIP	100	5%	1/16W	R9833	1-218-941-81	RES-CHIP	100	5%	1/16W
R9757	1-218-941-81	RES-CHIP	100	5%	1/16W	R9834	1-218-941-81	RES-CHIP	100	5%	1/16W
R9758	1-218-941-81	RES-CHIP	100	5%	1/16W	R9835	1-218-941-81	RES-CHIP	100	5%	1/16W
R9759	1-218-941-81	RES-CHIP	100	5%	1/16W	R9836	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9760	1-218-941-81	RES-CHIP	100	5%	1/16W	R9837	1-218-941-81	RES-CHIP	100	5%	1/16W
R9761	1-218-941-81	RES-CHIP	100	5%	1/16W	R9838	1-218-941-81	RES-CHIP	100	5%	1/16W
R9762	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9839	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9763	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9840	1-218-941-81	RES-CHIP	100	5%	1/16W
R9765	1-216-815-11	METAL CHIP	330	5%	1/10W	R9841	1-218-941-81	RES-CHIP	100	5%	1/16W
R9766	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9842	1-218-941-81	RES-CHIP	100	5%	1/16W
R9767	1-216-864-11	SHORT CHIP	0			R9843	1-218-941-81	RES-CHIP	100	5%	1/16W
R9768	1-216-833-11	METAL CHIP	10K	5%	1/10W	R9844	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9770	1-216-864-11	SHORT CHIP	0			R9845	1-218-941-81	RES-CHIP	100	5%	1/16W
R9772	1-218-941-81	RES-CHIP	100	5%	1/16W	R9846	1-218-941-81	RES-CHIP	100	5%	1/16W
R9773	1-218-941-81	RES-CHIP	100	5%	1/16W	R9847	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R9774	1-218-941-81	RES-CHIP	100	5%	1/16W	R9848	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9775	1-218-941-81	RES-CHIP	100	5%	1/16W	R9849	1-218-941-81	RES-CHIP	100	5%	1/16W
R9776	1-218-941-81	RES-CHIP	100	5%	1/16W	R9850	1-218-953-11	RES-CHIP	1K	5%	1/16W
R9777	1-218-941-81	RES-CHIP	100	5%	1/16W	R9851	1-218-941-81	RES-CHIP	100	5%	1/16W
R9778	1-218-941-81	RES-CHIP	100	5%	1/16W	R9852	1-218-941-81	RES-CHIP	100	5%	1/16W
R9779	1-218-941-81	RES-CHIP	100	5%	1/16W	R9853	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9780	1-218-941-81	RES-CHIP	100	5%	1/16W	R9854	1-218-941-81	RES-CHIP	100	5%	1/16W
R9781	1-218-941-81	RES-CHIP	100	5%	1/16W	R9855	1-218-941-81	RES-CHIP	100	5%	1/16W
R9782	1-218-941-81	RES-CHIP	100	5%	1/16W	R9856	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9783	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9857	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9784	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9858	1-218-933-11	RES-CHIP	22	5%	1/16W
R9785	1-218-953-11	RES-CHIP	1K	5%	1/16W	R9859	1-218-933-11	RES-CHIP	22	5%	1/16W
R9786	1-218-941-81	RES-CHIP	100	5%	1/16W	R9860	1-218-941-81	RES-CHIP	100	5%	1/16W
R9790	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R9861	1-218-941-81	RES-CHIP	100	5%	1/16W
R9791	1-216-837-11	METAL CHIP	22K	5%	1/10W	R9862	1-218-973-11	RES-CHIP	47K	5%	1/16W
R9792	1-216-837-11	METAL CHIP	22K	5%	1/10W	R9863	1-218-941-81	RES-CHIP	100	5%	1/16W
R9793	1-218-941-81	RES-CHIP	100	5%	1/16W	R9864	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9795	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9865	1-218-941-81	RES-CHIP	100	5%	1/16W
R9796	1-218-953-11	RES-CHIP	1K	5%	1/16W	R9866	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9797	1-216-821-11	METAL CHIP	1K	5%	1/10W	R9867	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9798	1-218-941-81	RES-CHIP	100	5%	1/16W	R9868	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9799	1-218-941-81	RES-CHIP	100	5%	1/16W	R9871	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9800	1-216-864-11	SHORT CHIP	0			R9873	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9803	1-218-937-11	RES-CHIP	47	5%	1/16W	R9874	1-218-941-81	RES-CHIP	100	5%	1/16W
R9804	1-218-937-11	RES-CHIP	47	5%	1/16W	R9875	1-218-941-81	RES-CHIP	100	5%	1/16W
R9805	1-218-937-11	RES-CHIP	47	5%	1/16W	R9876	1-218-941-81	RES-CHIP	100	5%	1/16W
R9806	1-218-937-11	RES-CHIP	47	5%	1/16W	R9878	1-218-953-11	RES-CHIP	1K	5%	1/16W
R9807	1-218-937-11	RES-CHIP	47	5%	1/16W	R9879	1-218-953-11	RES-CHIP	1K	5%	1/16W
R9808	1-218-937-11	RES-CHIP	47	5%	1/16W	R9880	1-218-941-81	RES-CHIP	100	5%	1/16W
R9809	1-218-941-81	RES-CHIP	100	5%	1/16W	R9881	1-218-941-81	RES-CHIP	100	5%	1/16W
R9810	1-218-937-11	RES-CHIP	47	5%	1/16W	R9882	1-218-953-11	RES-CHIP	1K	5%	1/16W

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R9885	1-218-990-81	SHORT CHIP	0			<VARISTOR>					
R9887	1-218-990-81	SHORT CHIP	0								
R9889	1-218-965-11	RES-CHIP	10K	5%	1/16W	VD9001	1-803-974-21	VARISTOR, CHIP (1608)			
R9890	1-218-941-81	RES-CHIP	100	5%	1/16W	VD9002	1-803-974-21	VARISTOR, CHIP (1608)			
R9891	1-218-990-81	SHORT CHIP	0			VD9003	1-803-974-21	VARISTOR, CHIP (1608)			
						VD9004	1-803-974-21	VARISTOR, CHIP (1608)			
R9892	1-218-965-11	RES-CHIP	10K	5%	1/16W	VD9005	1-803-974-21	VARISTOR, CHIP (1608)			
R9894	1-218-990-81	SHORT CHIP	0								
R9895	1-218-941-81	RES-CHIP	100	5%	1/16W	VD9006	1-803-974-21	VARISTOR, CHIP (1608)			
R9896	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	VD9007	1-803-974-21	VARISTOR, CHIP (1608)			
R9897	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	VD9008	1-803-974-21	VARISTOR, CHIP (1608)			
						VD9011	1-803-974-21	VARISTOR, CHIP (1608)			
R9898	1-218-949-11	RES-CHIP	470	5%	1/16W	VD9012	1-803-974-21	VARISTOR, CHIP (1608)			
R9900	1-218-949-11	RES-CHIP	470	5%	1/16W						
R9901	1-218-990-81	SHORT CHIP	0			VD9013	1-803-974-21	VARISTOR, CHIP (1608)			
R9902	1-218-990-81	SHORT CHIP	0			VD9014	1-803-974-21	VARISTOR, CHIP (1608)			
R9903	1-218-949-11	RES-CHIP	470	5%	1/16W	VD9015	1-803-974-21	VARISTOR, CHIP (1608)			
						VD9016	1-803-974-21	VARISTOR, CHIP (1608)			
R9904	1-218-990-81	SHORT CHIP	0			VD9017	1-803-974-21	VARISTOR, CHIP (1608)			
R9906	1-218-949-11	RES-CHIP	470	5%	1/16W						
R9907	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	VD9018	1-803-974-21	VARISTOR, CHIP (1608)			
R9911	1-218-990-81	SHORT CHIP	0			VD9019	1-803-974-21	VARISTOR, CHIP (1608)			
R9924	1-218-990-81	SHORT CHIP	0			VD9020	1-803-974-21	VARISTOR, CHIP (1608)			
						VD9021	1-803-974-21	VARISTOR, CHIP (1608)			
R9925	1-218-965-11	RES-CHIP	10K	5%	1/16W	VD9022	1-803-974-21	VARISTOR, CHIP (1608)			
R9933	1-216-864-11	SHORT CHIP	0								
R9936	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	VD9023	1-803-974-21	VARISTOR, CHIP (1608)			
R9939	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	VD9024	1-803-974-21	VARISTOR, CHIP (1608)			
R9940	1-218-990-81	SHORT CHIP	0			VD9025	1-803-974-21	VARISTOR, CHIP (1608)			
						VD9026	1-803-974-21	VARISTOR, CHIP (1608)			
R9946	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	VD9027	1-803-974-21	VARISTOR, CHIP (1608)			
R9947	1-218-961-11	RES-CHIP	4.7K	5%	1/16W						
R9948	1-218-933-11	RES-CHIP	22	5%	1/16W	VD9028	1-803-974-21	VARISTOR, CHIP (1608)			
R9949	1-218-933-11	RES-CHIP	22	5%	1/16W	VD9029	1-803-974-21	VARISTOR, CHIP (1608)			
R9951	1-218-933-11	RES-CHIP	22	5%	1/16W	VD9030	1-803-974-21	VARISTOR, CHIP (1608)			
						VD9031	1-803-974-21	VARISTOR, CHIP (1608)			
R9952	1-218-933-11	RES-CHIP	22	5%	1/16W	VD9032	1-803-974-21	VARISTOR, CHIP (1608)			
R9954	1-218-933-11	RES-CHIP	22	5%	1/16W						
R9955	1-218-933-11	RES-CHIP	22	5%	1/16W	VD9701	1-803-974-21	VARISTOR, CHIP (1608)			
R9956	1-218-965-11	RES-CHIP	10K	5%	1/16W	VD9702	1-803-974-21	VARISTOR, CHIP (1608)			
R9957	1-218-941-81	RES-CHIP	100	5%	1/16W	VD9703	1-803-974-21	VARISTOR, CHIP (1608)			
						VD9704	1-803-974-21	VARISTOR, CHIP (1608)			
R9959	1-218-990-81	SHORT CHIP	0			VD9705	1-803-974-21	VARISTOR, CHIP (1608)			
R9961	1-216-864-11	SHORT CHIP	0								
R9963	1-216-864-11	SHORT CHIP	0			VD9706	1-803-974-21	VARISTOR, CHIP (1608)			
R9971	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W	VD9710	1-803-974-21	VARISTOR, CHIP (1608)			
R9972	1-216-864-11	SHORT CHIP	0			VD9711	1-803-974-21	VARISTOR, CHIP (1608)			
						VD9712	1-803-974-21	VARISTOR, CHIP (1608)			
R9973	1-216-809-11	METAL CHIP	100	5%	1/10W	VD9715	1-803-974-21	VARISTOR, CHIP (1608)			
R9979	1-216-815-11	METAL CHIP	330	5%	1/10W						
R9981	1-216-864-11	SHORT CHIP	0			VD9716	1-803-974-21	VARISTOR, CHIP (1608)			
R9987	1-218-933-11	RES-CHIP	22	5%	1/16W	VD9717	1-803-974-21	VARISTOR, CHIP (1608)			
R9988	1-218-933-11	RES-CHIP	22	5%	1/16W	VD9718	1-803-974-21	VARISTOR, CHIP (1608)			
R9994	1-218-965-11	RES-CHIP	10K	5%	1/16W						
R9995	1-218-965-11	RES-CHIP	10K	5%	1/16W	<CRYSTAL>					
R9996	1-218-990-81	SHORT CHIP	0								
R9997	1-218-990-81	SHORT CHIP	0			X8402	1-795-612-11	VIBRATOR, CRYSTAL			
R9998	1-218-990-81	SHORT CHIP	0			X9351	1-813-124-21	VIBRATOR, CERAMIC			
						X9701	1-813-784-21	VIBRATOR, CRYSTAL			
						X9702	1-813-070-21	PIEZOELECTRIC OSCILLATOR			
<NETWORK>						*****					
RB8401	1-234-372-11	RES, NETWORK	100 (1005X4)								
RB8402	1-234-372-11	RES, NETWORK	100 (1005X4)								
RB8403	1-234-372-11	RES, NETWORK	100 (1005X4)				A-1219-681-A	FXE COMPL			
RB8404	1-234-372-11	RES, NETWORK	100 (1005X4)				*****				
RB8405	1-234-372-11	RES, NETWORK	100 (1005X4)								
						<CAPACITOR>					
RB8406	1-234-372-11	RES, NETWORK	100 (1005X4)								
RB8407	1-234-372-11	RES, NETWORK	100 (1005X4)			C7100	1-117-720-11	CERAMIC CHIP	4.7UF		10V
RB9702	1-234-372-11	RES, NETWORK	100 (1005X4)			C7101	1-117-720-11	CERAMIC CHIP	4.7UF		10V
RB9703	1-234-372-11	RES, NETWORK	100 (1005X4)			C7102	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V
RB9704	1-234-372-11	RES, NETWORK	100 (1005X4)			C7103	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V
						C7104	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V
RB9705	1-234-378-21	RES, NETWORK	10K (1005X4)								
RB9706	1-234-378-21	RES, NETWORK	10K (1005X4)								

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C7105	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7524	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C7106	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7525	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
C7107	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7527	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C7108	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7528	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V
C7109	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7530	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7110	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7531	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C7111	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7532	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V
C7112	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7533	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V
C7113	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7534	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V
C7114	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7535	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V
C7115	1-117-720-11	CERAMIC CHIP 4.7UF	10V	C7536	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V
C7116	1-117-720-11	CERAMIC CHIP 4.7UF	10V	C7537	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V
C7117	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7538	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V
C7118	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7539	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V
C7119	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7545	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V
C7120	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7546	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C7121	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7549	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V
C7122	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7550	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V
C7123	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7551	1-164-938-11	CERAMIC CHIP 0.0015UF	10.00% 50V
C7124	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7552	1-164-938-11	CERAMIC CHIP 0.0015UF	10.00% 50V
C7125	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	<CONNECTOR>			
C7127	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	CN7401	1-817-717-61	CONNECTOR, BOARD TO BOARD 80P	
C7128	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	CN7402	1-820-209-11	MEMORY STICK CONNECTOR	
C7129	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	CN7500	1-819-465-11	HEADER ASSEMBLY FOR PWB 4P	
C7130	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	CN7502	1-780-336-11	EARTH TERMINAL	
C7133	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	CN7503	1-780-336-11	EARTH TERMINAL	
C7143	1-117-720-11	CERAMIC CHIP 4.7UF	10V	<DIODE>			
C7144	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	D7402	8-719-066-11	DIODE 1PS184-115	
C7145	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	D7502	8-719-069-29	DIODE RB520S-30TE61	
C7146	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	D7503	8-719-078-04	DIODE EC31QS03L-TE12L	
C7147	1-117-720-11	CERAMIC CHIP 4.7UF	10V	D7505	6-500-754-01	DIODE D1FM3	
C7200	1-117-720-11	CERAMIC CHIP 4.7UF	10V	D7506	6-500-294-01	DIODE PTZ-TE25-3.9B	
C7202	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	D7507	6-500-294-01	DIODE PTZ-TE25-3.9B	
C7203	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	D7508	8-719-069-29	DIODE RB520S-30TE61	
C7204	1-117-720-11	CERAMIC CHIP 4.7UF	10V	<FERRITE BEAD>			
C7205	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	FB7101	1-469-869-21	FERRITE 0UH	
C7206	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	FB7103	1-400-834-11	FERRITE 0UH	
C7207	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	FB7104	1-469-869-21	FERRITE 0UH	
C7208	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	FB7105	1-469-869-21	FERRITE 0UH	
C7209	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	FB7107	1-400-834-11	FERRITE 0UH	
C7210	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	FB7200	1-400-834-11	FERRITE 0UH	
C7211	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	FB7201	1-400-834-11	FERRITE 0UH	
C7212	1-117-720-11	CERAMIC CHIP 4.7UF	10V	FB7500	1-469-869-21	FERRITE 0UH	
C7401	1-117-720-11	CERAMIC CHIP 4.7UF	10V	FB7504	1-414-554-21	FERRITE 0UH	
C7402	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	FB7505	1-414-554-21	FERRITE 0UH	
C7404	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	FB7506	1-469-869-21	FERRITE 0UH	
C7405	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	FB7507	1-469-869-21	FERRITE 0UH	
C7406	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	<IC>			
C7407	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	IC7101	6-708-916-01	IC ICS7150MLFT	
C7507	1-127-931-21	ELECT CHIP 470UF	20% 16V	IC7102	6-709-214-01	IC UPD61123F1-100-KA3-A	
C7508	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	IC7200	6-705-336-01	IC K9F2808U0C-PCBOT	
C7510	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	IC7201	6-707-809-01	IC EDD1216AATA-6B-E	
C7511	1-112-672-81	CERAMIC CHIP 330PF	5% 50V	IC7401	6-703-175-01	IC PST3629UL	
C7512	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	IC7500	6-706-884-01	IC BD9851EFV-E2	
C7513	1-125-827-91	CERAMIC CHIP 1UF	10.00% 25V	IC7501	6-708-603-01	IC PQ070XNA1ZPH	
C7514	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V				
C7515	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V				
C7516	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V				
C7517	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V				
C7518	1-125-827-91	CERAMIC CHIP 1UF	10.00% 25V				
C7519	1-125-827-91	CERAMIC CHIP 1UF	10.00% 25V				
C7520	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V				
C7521	1-163-037-11	CERAMIC CHIP 0.022UF	10.00% 50V				
C7522	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V				
C7523	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V				

The components identified △ marked are critical for safety.
Replace only with the part number specified.

FXE

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
<COIL>				R7203	1-218-953-11	RES-CHIP	1K 5% 1/16W
L7100	1-414-398-11	INDUCTOR	10UH	R7205	1-218-953-11	RES-CHIP	1K 5% 1/16W
L7500	1-424-922-21	INDUCTOR	10UH	R7206	1-218-953-11	RES-CHIP	1K 5% 1/16W
L7501	1-424-922-21	INDUCTOR	10UH	R7207	1-218-949-11	RES-CHIP	470 5% 1/16W
<IC LINK>				R7208	1-218-953-11	RES-CHIP	1K 5% 1/16W
PS7501	△ 1-533-651-41	IC LINK	1.6A 24V	R7209	1-218-953-11	RES-CHIP	1K 5% 1/16W
<TRANSISTOR>				R7211	1-218-953-11	RES-CHIP	1K 5% 1/16W
Q7402	8-729-027-43	TRANSISTOR DTC114EKA-T146		R7212	1-218-953-11	RES-CHIP	1K 5% 1/16W
Q7403	8-729-027-43	TRANSISTOR DTC114EKA-T146		R7213	1-218-953-11	RES-CHIP	1K 5% 1/16W
Q7500	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R7214	1-218-953-11	RES-CHIP	1K 5% 1/16W
Q7501	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R7215	1-218-953-11	RES-CHIP	1K 5% 1/16W
<RESISTOR>				R7216	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7102	1-218-990-81	SHORT CHIP	0	R7217	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7107	1-218-937-11	RES-CHIP	47 5% 1/16W	R7218	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7108	1-218-937-11	RES-CHIP	47 5% 1/16W	R7221	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7111	1-218-937-11	RES-CHIP	47 5% 1/16W	R7222	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7112	1-218-941-81	RES-CHIP	100 5% 1/16W	R7224	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7114	1-218-937-11	RES-CHIP	47 5% 1/16W	R7227	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7115	1-218-941-81	RES-CHIP	100 5% 1/16W	R7228	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7117	1-218-937-11	RES-CHIP	47 5% 1/16W	R7229	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7119	1-218-990-81	SHORT CHIP	0	R7232	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7120	1-218-990-81	SHORT CHIP	0	R7233	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7121	1-218-990-81	SHORT CHIP	0	R7235	1-218-939-11	RES-CHIP	68 5% 1/16W
R7122	1-218-941-81	RES-CHIP	100 5% 1/16W	R7236	1-218-939-11	RES-CHIP	68 5% 1/16W
R7123	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7237	1-218-941-81	RES-CHIP	100 5% 1/16W
R7125	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	R7238	1-218-941-81	RES-CHIP	100 5% 1/16W
R7126	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	R7239	1-218-941-81	RES-CHIP	100 5% 1/16W
R7129	1-218-941-81	RES-CHIP	100 5% 1/16W	R7240	1-218-941-81	RES-CHIP	100 5% 1/16W
R7130	1-218-941-81	RES-CHIP	100 5% 1/16W	R7241	1-218-941-11	METAL CHIP	100 5% 1/16W
R7131	1-218-941-81	RES-CHIP	100 5% 1/16W	R7242	1-218-941-11	METAL CHIP	100 5% 1/16W
R7132	1-218-941-81	RES-CHIP	100 5% 1/16W	R7243	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7134	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7248	1-218-941-81	RES-CHIP	100 5% 1/16W
R7137	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7400	1-218-990-81	SHORT CHIP	0
R7138	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7401	1-218-990-81	SHORT CHIP	0
R7140	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7403	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7141	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7405	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7142	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7407	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7143	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7408	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7153	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7409	1-218-937-11	RES-CHIP	47 5% 1/16W
R7159	1-218-990-81	SHORT CHIP	0	R7410	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7163	1-218-937-11	RES-CHIP	47 5% 1/16W	R7411	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7164	1-218-937-11	RES-CHIP	47 5% 1/16W	R7412	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7165	1-218-953-11	RES-CHIP	1K 5% 1/16W	R7413	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7166	1-218-937-11	RES-CHIP	47 5% 1/16W	R7414	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7167	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7415	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7168	1-218-937-11	RES-CHIP	47 5% 1/16W	R7416	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7170	1-218-990-81	SHORT CHIP	0	R7417	1-218-990-81	SHORT CHIP	0
R7171	1-218-990-81	SHORT CHIP	0	R7418	1-218-941-81	RES-CHIP	100 5% 1/16W
R7174	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7421	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7176	1-218-990-81	SHORT CHIP	0	R7423	1-218-941-81	RES-CHIP	100 5% 1/16W
R7177	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7425	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7178	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7471	1-218-990-81	SHORT CHIP	0
R7179	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7472	1-218-990-81	SHORT CHIP	0
R7180	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7502	1-218-985-11	METAL CHIP	470K 5% 1/16W
R7183	1-218-990-81	SHORT CHIP	0	R7504	1-208-703-11	METAL CHIP	6.8K 0.5% 1/16W
R7200	1-218-953-11	RES-CHIP	1K 5% 1/16W	R7505	1-208-679-11	METAL CHIP	680 0.5% 1/16W
R7201	1-218-953-11	RES-CHIP	1K 5% 1/16W	R7506	1-208-683-11	METAL CHIP	1K 0.5% 1/16W
				R7507	1-208-712-11	METAL CHIP	16K 0.5% 1/16W
				R7508	1-208-923-11	METAL CHIP	33K 0.5% 1/16W
				R7509	1-208-711-11	METAL CHIP	15K 0.5% 1/16W
				R7510	1-208-911-11	METAL CHIP	10K 0.5% 1/16W
				R7511	1-208-911-11	METAL CHIP	10K 0.5% 1/16W
				R7514	1-218-965-11	RES-CHIP	10K 5% 1/16W
				R7515	1-218-985-11	METAL CHIP	470K 5% 1/16W
				R7516	1-208-909-11	METAL CHIP	8.2K 0.5% 1/16W

Note: The components identified by mark  contain confidential information.
Strictly follow the instructions whenever the components are repaired and/or replaced.

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R7517	1-208-931-11	METAL CHIP	68K	0.5%	1/16W	C4200	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V
R7518	1-208-923-11	METAL CHIP	33K	0.5%	1/16W	C4300	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
R7519	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	C4301	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
R7522	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W	C4302	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
R7525	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	C4303	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
R7526	1-218-935-11	RES-CHIP	33	5%	1/16W	C4304	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
R7527	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	C4305	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
R7533	1-220-234-11	METAL CHIP	4.7	10%	1/4W	C4306	1-112-066-11	CERAMIC CHIP	10UF	10%	10V
R7534	1-220-234-11	METAL CHIP	4.7	10%	1/4W	C4307	1-112-066-11	CERAMIC CHIP	10UF	10%	10V
		<NETWORK>				C4311	1-162-969-11	CERAMIC CHIP	0.0068UF	10.00%	25V
RB7100	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)			C4317	1-162-969-11	CERAMIC CHIP	0.0068UF	10.00%	25V
RB7101	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)			C4318	1-164-882-11	CERAMIC CHIP	220PF	5.00%	16V
RB7102	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)			C4319	1-164-882-11	CERAMIC CHIP	220PF	5.00%	16V
RB7103	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)			C4322	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
RB7200	1-234-702-11	RES, NETWORK 68	(1005X4)			C4323	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
RB7201	1-234-702-11	RES, NETWORK 68	(1005X4)			C4324	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
RB7202	1-234-372-11	RES, NETWORK 100	(1005X4)			C4325	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
RB7203	1-234-372-11	RES, NETWORK 100	(1005X4)			C4326	1-162-959-11	CERAMIC CHIP	330PF	5.00%	50V
RB7204	1-234-372-11	RES, NETWORK 100	(1005X4)			C4327	1-162-959-11	CERAMIC CHIP	330PF	5.00%	50V
RB7205	1-234-702-11	RES, NETWORK 68	(1005X4)			C4328	1-100-912-11	CERAMIC CHIP	1UF	10%	25V
RB7206	1-234-702-11	RES, NETWORK 68	(1005X4)			C4329	1-100-912-11	CERAMIC CHIP	1UF	10%	25V
RB7207	1-234-372-11	RES, NETWORK 100	(1005X4)			C4330	1-100-912-11	CERAMIC CHIP	1UF	10%	25V
RB7208	1-234-372-11	RES, NETWORK 100	(1005X4)			C4331	1-100-912-11	CERAMIC CHIP	1UF	10%	25V
		<CRYSTAL>				C4332	1-100-912-11	CERAMIC CHIP	1UF	10%	25V
X7101	1-813-055-11	QUARTZ CRYSTAL UNIT				C4333	1-100-912-11	CERAMIC CHIP	1UF	10%	25V
*****						C4334	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V
		A-1215-296-A	B2 COMPL (KLV-40X200A/40X250A)			C4335	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V
		A-1215-295-A	B2 COMPL (KLV-46X200A/46X250A)			C4336	1-164-227-11	CERAMIC CHIP	0.022UF	10.00%	25V
*****						C4337	1-164-227-11	CERAMIC CHIP	0.022UF	10.00%	25V
	2-586-175-01	SHEET B, RADIATION				C4338	1-164-870-11	CERAMIC CHIP	68PF	5.00%	50V
		<CAPACITOR>				C4339	1-115-412-11	CERAMIC CHIP	680PF	5.00%	25V
C4000	1-112-777-11	CERAMIC CHIP	0.01UF	10%	25V	C4340	1-115-416-11	CERAMIC CHIP	0.001UF	5.00%	25V
C4001	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C4341	1-164-227-11	CERAMIC CHIP	0.022UF	10.00%	25V
C4002	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C4343	1-112-066-11	CERAMIC CHIP	10UF	10%	10V
C4003	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C4345	1-112-066-11	CERAMIC CHIP	10UF	10%	10V
C4004	1-117-681-11	ELECT CHIP	100UF	20.00%	16V						
C4005	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C4347	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
C4006	1-112-777-11	CERAMIC CHIP	0.01UF	10%	25V	C4348	1-100-118-21	ELECT CHIP	82UF	20%	16V
C4009	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V	C4349	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
C4010	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V	C4350	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
C4011	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V	C4351	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
C4012	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V	C4352	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
C4013	1-112-777-11	CERAMIC CHIP	0.01UF	10%	25V	C4354	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C4014	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C4355	1-162-965-11	CERAMIC CHIP	0.0015UF	10.00%	50V
C4015	1-112-777-11	CERAMIC CHIP	0.01UF	10%	25V	C4356	1-115-414-11	CERAMIC CHIP	820PF	5.00%	25V
C4016	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	C4357	1-112-066-11	CERAMIC CHIP	10UF	10%	10V
C4017	1-117-681-11	ELECT CHIP	100UF	20.00%	16V	C4361	1-162-966-11	CERAMIC CHIP	0.0022UF	10.00%	50V
C4018	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	C4363	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
C4020	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	C4364	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
C4022	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	C4367	1-164-870-11	CERAMIC CHIP	68PF	5.00%	50V
C4026	1-164-937-11	CERAMIC CHIP	0.001UF	10.00%	50V	C4369	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
C4029	1-164-937-11	CERAMIC CHIP	0.001UF	10.00%	50V	C4370	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
C4030	1-164-937-11	CERAMIC CHIP	0.001UF	10.00%	50V	C4371	1-164-882-11	CERAMIC CHIP	220PF	5.00%	16V
C4031	1-164-937-11	CERAMIC CHIP	0.001UF	10.00%	50V	C4372	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
C4032	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	C4373	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
C4033	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	C4374	1-100-912-11	CERAMIC CHIP	1UF	10%	25V
						C4375	1-100-911-11	CERAMIC CHIP	4.7UF	10%	25V
						C4377	1-100-912-11	CERAMIC CHIP	1UF	10%	25V
						C4379	1-100-912-11	CERAMIC CHIP	1UF	10%	25V
						C4380	1-112-066-11	CERAMIC CHIP	10UF	10%	10V
						C4381	1-100-912-11	CERAMIC CHIP	1UF	10%	25V
						C4383	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V
						C4384	1-100-118-21	ELECT CHIP	82UF	20%	16V
						C4385	1-164-227-11	CERAMIC CHIP	0.022UF	10.00%	25V
						C4391	1-117-681-11	ELECT CHIP	100UF	20.00%	16V
						C4393	1-126-391-11	ELECT CHIP	47UF	20.00%	6.3V

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C4394	1-126-391-11	ELECT CHIP	47UF 20.00% 6.3V	C4537	1-126-394-11	ELECT CHIP	10UF 20.00% 16V
C4395	1-126-391-11	ELECT CHIP	47UF 20.00% 6.3V	C4538	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4396	1-126-412-11	ELECT CHIP	220UF 20.00% 4V	C4539	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4399	1-112-777-11	CERAMIC CHIP	0.01UF 10% 25V	C4540	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4400	1-112-777-11	CERAMIC CHIP	0.01UF 10% 25V	C4541	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4401	1-112-777-11	CERAMIC CHIP	0.01UF 10% 25V	C4542	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4402	1-112-777-11	CERAMIC CHIP	0.01UF 10% 25V	C4543	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4403	1-112-777-11	CERAMIC CHIP	0.01UF 10% 25V	C4544	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4404	1-112-777-11	CERAMIC CHIP	0.01UF 10% 25V	C4545	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4405	1-112-777-11	CERAMIC CHIP	0.01UF 10% 25V	C4546	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4406	1-164-874-11	CERAMIC CHIP	100PF 5.00% 50V	C4552	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4407	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V	C4553	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4408	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V	C4554	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4409	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V	C4555	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4410	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V	C4556	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4416	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V	C4557	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4417	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V	C4558	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4418	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V	C4561	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4419	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V	C4562	1-126-394-11	ELECT CHIP	10UF 20.00% 16V
C4420	1-164-874-11	CERAMIC CHIP	100PF 5.00% 50V	C4563	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4422	1-164-937-11	CERAMIC CHIP	0.001UF 10.00% 50V	C4564	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4424	1-164-874-11	CERAMIC CHIP	100PF 5.00% 50V	C4565	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4425	1-164-874-11	CERAMIC CHIP	100PF 5.00% 50V	C4566	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4426	1-164-874-11	CERAMIC CHIP	100PF 5.00% 50V	C4568	1-100-905-11	CERAMIC CHIP	0.001UF 10% 50V
C4428	1-164-874-11	CERAMIC CHIP	100PF 5.00% 50V	C4569	1-126-394-11	ELECT CHIP	10UF 20.00% 16V
C4430	1-164-874-11	CERAMIC CHIP	100PF 5.00% 50V	C4570	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4433	1-164-874-11	CERAMIC CHIP	100PF 5.00% 50V	C4572	1-126-394-11	ELECT CHIP	10UF 20.00% 16V
C4436	1-164-937-11	CERAMIC CHIP	0.001UF 10.00% 50V	C4721	1-112-046-11	CERAMIC CHIP	4.7UF 10% 6.3V
C4437	1-164-937-11	CERAMIC CHIP	0.001UF 10.00% 50V	C4800	1-131-661-21	ELECT CHIP	100UF 20% 10V
C4438	1-164-937-11	CERAMIC CHIP	0.001UF 10.00% 50V	C4802	1-164-874-11	CERAMIC CHIP	100PF 5.00% 50V
C4439	1-164-937-11	CERAMIC CHIP	0.001UF 10.00% 50V	C4804	1-131-661-21	ELECT CHIP	100UF 20% 10V
C4440	1-164-937-11	CERAMIC CHIP	0.001UF 10.00% 50V	C4805	1-164-874-11	CERAMIC CHIP	100PF 5.00% 50V
C4442	1-164-937-11	CERAMIC CHIP	0.001UF 10.00% 50V	C4806	1-131-661-21	ELECT CHIP	100UF 20% 10V
C4443	1-164-937-11	CERAMIC CHIP	0.001UF 10.00% 50V	C4807	1-131-661-21	ELECT CHIP	100UF 20% 10V
C4444	1-164-937-11	CERAMIC CHIP	0.001UF 10.00% 50V	C4808	1-131-661-21	ELECT CHIP	100UF 20% 10V
C4446	1-164-937-11	CERAMIC CHIP	0.001UF 10.00% 50V	C4809	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4500	1-162-923-11	CERAMIC CHIP	47PF 5.00% 50V	C4810	1-164-874-11	CERAMIC CHIP	100PF 5.00% 50V
C4501	1-162-923-11	CERAMIC CHIP	47PF 5.00% 50V	C4811	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4502	1-162-923-11	CERAMIC CHIP	47PF 5.00% 50V	C4812	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4503	1-162-923-11	CERAMIC CHIP	47PF 5.00% 50V	C4813	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4504	1-100-743-91	CERAMIC CHIP	2.2UF 20% 16V	C4814	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4505	1-100-743-91	CERAMIC CHIP	2.2UF 20% 16V	C4815	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4506	1-125-777-11	CERAMIC CHIP	0.1UF 10.00% 10V	C4816	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4507	1-125-777-11	CERAMIC CHIP	0.1UF 10.00% 10V	C4817	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4508	1-100-567-81	CERAMIC CHIP	0.01UF 10% 25V	C4818	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4509	1-100-567-81	CERAMIC CHIP	0.01UF 10% 25V	C4819	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4510	1-100-567-81	CERAMIC CHIP	0.01UF 10% 25V	C4820	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4511	1-100-567-81	CERAMIC CHIP	0.01UF 10% 25V	C4821	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4512	1-100-567-81	CERAMIC CHIP	0.01UF 10% 25V	C4822	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4513	1-100-567-81	CERAMIC CHIP	0.01UF 10% 25V	C4823	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4514	1-100-567-81	CERAMIC CHIP	0.01UF 10% 25V	C4824	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4515	1-164-937-11	CERAMIC CHIP	0.001UF 10.00% 50V	C4825	1-100-909-11	CERAMIC CHIP	10UF 10% 6.3V
C4519	1-164-937-11	CERAMIC CHIP	0.001UF 10.00% 50V	C4826	1-100-909-11	CERAMIC CHIP	10UF 10% 6.3V
C4521	1-100-567-81	CERAMIC CHIP	0.01UF 10% 25V	C4827	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4523	1-164-937-11	CERAMIC CHIP	0.001UF 10.00% 50V	C4828	1-100-909-11	CERAMIC CHIP	10UF 10% 6.3V
C4524	1-100-567-81	CERAMIC CHIP	0.01UF 10% 25V	C4829	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4525	1-124-779-00	ELECT CHIP	10UF 20.00% 16V	C4830	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4526	1-125-777-11	CERAMIC CHIP	0.1UF 10.00% 10V	C4831	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4528	1-164-937-11	CERAMIC CHIP	0.001UF 10.00% 50V	C4832	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4529	1-124-779-00	ELECT CHIP	10UF 20.00% 16V	C4833	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4532	1-126-394-11	ELECT CHIP	10UF 20.00% 16V	C4834	1-100-907-11	CERAMIC CHIP	0.1UF 10% 10V
C4533	1-125-777-11	CERAMIC CHIP	0.1UF 10.00% 10V	C4835	1-100-907-11	CERAMIC CHIP	0.1UF 10% 10V
C4534	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V	C4836	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4535	1-165-989-11	CERAMIC CHIP	10UF 10% 6.3V	C4837	1-100-906-11	CERAMIC CHIP	0.01UF 10% 16V
C4536	1-126-394-11	ELECT CHIP	10UF 20.00% 16V	C4838	1-100-909-11	CERAMIC CHIP	10UF 10% 6.3V

REF. NO.	PART NO.	DESCRIPTION				REMARK	REF. NO.	PART NO.	DESCRIPTION				REMARK
C4839	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5013	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4840	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5014	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V	
C4841	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5015	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V	
C4842	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5016	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4843	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5017	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4844	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5018	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V	
C4847	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5019	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4849	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5020	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4850	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5021	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V	
C4851	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5022	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4853	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5023	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V	
C4854	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5024	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4855	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5025	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4856	1-131-661-21	ELECT CHIP	100UF	20%	10V		C5026	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4857	1-131-661-21	ELECT CHIP	100UF	20%	10V		C5027	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C4858	1-131-661-21	ELECT CHIP	100UF	20%	10V		C5028	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4859	1-131-661-21	ELECT CHIP	100UF	20%	10V		C5029	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4860	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5030	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4861	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5031	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4862	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5032	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V	
C4863	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5033	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V	
C4864	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5034	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V	
C4865	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5035	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V	
C4866	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5036	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V	
C4867	1-100-908-11	CERAMIC CHIP	1UF	10%	6.3V		C5037	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4868	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V		C5038	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V	
C4869	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5039	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V	
C4870	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5040	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4871	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5041	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C4872	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5042	1-126-390-11	ELECT CHIP	22UF	20.00%	6.3V	
C4873	1-131-661-21	ELECT CHIP	100UF	20%	10V		C5043	1-112-046-11	CERAMIC CHIP	4.7UF	10%	6.3V	
C4875	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5046	1-126-390-11	ELECT CHIP	22UF	20.00%	6.3V	
C4876	1-131-661-21	ELECT CHIP	100UF	20%	10V		C5047	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C4877	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5100	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C4878	1-126-390-11	ELECT CHIP	22UF	20.00%	6.3V		C5101	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C4879	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5102	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C4880	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5103	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C4883	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5104	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C4885	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5105	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C4886	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5106	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C4887	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5107	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C4888	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5108	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C4889	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5109	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C4890	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5110	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C4891	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5111	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C4892	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5112	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C4893	1-164-937-11	CERAMIC CHIP	0.001UF	10.00%	50V		C5113	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C4894	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5114	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C4895	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5115	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C4896	1-164-937-11	CERAMIC CHIP	0.001UF	10.00%	50V		C5116	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C4897	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5117	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C4898	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5118	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C5000	1-126-390-11	ELECT CHIP	22UF	20.00%	6.3V		C5119	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5001	1-126-390-11	ELECT CHIP	22UF	20.00%	6.3V		C5120	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5002	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V		C5121	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C5003	1-126-390-11	ELECT CHIP	22UF	20.00%	6.3V		C5122	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C5004	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5123	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5005	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V		C5124	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5006	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V		C5125	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C5007	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5126	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C5008	1-126-390-11	ELECT CHIP	22UF	20.00%	6.3V		C5127	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C5009	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5128	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5010	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V		C5129	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C5011	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V		C5130	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5012	1-100-905-11	CERAMIC CHIP	0.001UF	10%	50V		C5131	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	

REF. NO.	PART NO.	DESCRIPTION				REMARK	REF. NO.	PART NO.	DESCRIPTION				REMARK
C5132	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5207	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C5133	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5300	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5134	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5301	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5135	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5302	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5136	1-165-880-21	ELECT CHIP	220UF	20%	2.5V		C5303	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5137	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5304	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5138	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5305	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5139	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5306	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5140	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5307	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5141	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5309	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C5142	1-126-391-11	ELECT CHIP	47UF	20.00%	6.3V		C5311	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5143	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5312	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5144	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5313	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V	
C5145	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5314	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5146	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5315	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5147	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5316	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5148	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5317	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5149	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5318	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5150	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5319	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5151	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5320	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5152	1-126-391-11	ELECT CHIP	47UF	20.00%	6.3V		C5321	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5153	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5322	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5154	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5324	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5155	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5325	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5156	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5326	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5157	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5327	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5158	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5328	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V	
C5159	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5329	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5160	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5330	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5161	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5331	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5162	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5332	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5163	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5333	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5164	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5334	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5165	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5335	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5166	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5336	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5167	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5337	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5168	1-126-391-11	ELECT CHIP	47UF	20.00%	6.3V		C5338	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5170	1-112-064-11	CERAMIC CHIP	2.2UF	10%	10V		C5339	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5171	1-126-391-11	ELECT CHIP	47UF	20.00%	6.3V		C5340	1-126-390-11	ELECT CHIP	22UF	20.00%	6.3V	
C5172	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		C5341	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5173	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5342	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V	
C5174	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5343	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V	
C5175	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5344	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V	
C5176	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5345	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V	
C5177	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5346	1-126-412-11	ELECT CHIP	220UF	20.00%	4V	
C5178	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5347	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V	
C5179	1-164-848-11	CERAMIC CHIP	8PF	0.50PF	50V		C5348	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5180	1-164-848-11	CERAMIC CHIP	8PF	0.50PF	50V		C5349	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5181	1-126-391-11	ELECT CHIP	47UF	20.00%	6.3V		C5350	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5182	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5351	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5183	1-126-394-11	ELECT CHIP	10UF	20.00%	16V		C5352	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5184	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5353	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5185	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5354	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5186	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5355	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5187	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5356	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5189	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5357	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5191	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5358	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5192	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V		C5359	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5193	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5360	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5195	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5361	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5196	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5362	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5197	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5363	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5198	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5364	1-126-412-11	ELECT CHIP	220UF	20.00%	4V	
C5199	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V		C5368	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	
C5203	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V		C5369	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V	

REF. NO.	PART NO.	DESCRIPTION					REMARK	REF. NO.	PART NO.	DESCRIPTION					REMARK
C5370	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5610	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5371	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5611	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5372	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5612	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5373	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5613	1-117-681-11	ELECT CHIP	100UF	20.00%	16V		
C5375	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5615	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V		
C5376	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5616	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V		
C5377	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5617	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5378	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5629	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V		
C5379	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V			C5630	1-164-937-11	CERAMIC CHIP	0.001UF	10.00%	50V		
C5380	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V			C5800	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V		
C5381	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V			C5801	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		
C5389	1-131-661-21	ELECT CHIP	100UF	20%	10V			C5802	1-165-989-11	CERAMIC CHIP	10UF	10%	6.3V		
C5391	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5803	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5392	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5804	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5393	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V			C5805	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5394	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V			C5806	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5395	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V			C5807	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5396	1-100-907-11	CERAMIC CHIP	0.1UF	10%	10V			C5808	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5397	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V			C5809	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5398	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V			C5810	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5399	1-100-909-11	CERAMIC CHIP	10UF	10%	6.3V			C5811	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5401	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5812	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5403	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5813	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5404	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5814	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5406	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5815	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5413	1-100-906-11	CERAMIC CHIP	0.01UF	10%	16V			C5816	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5502	1-131-661-21	ELECT CHIP	100UF	20%	10V			C5817	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5503	1-100-912-11	CERAMIC CHIP	1UF	10%	25V			C5818	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5504	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5819	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5505	1-162-917-11	CERAMIC CHIP	15PF	5.00%	50V			C5820	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5506	1-162-917-11	CERAMIC CHIP	15PF	5.00%	50V			C5821	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5508	1-131-661-21	ELECT CHIP	100UF	20%	10V			C5822	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5509	1-100-912-11	CERAMIC CHIP	1UF	10%	25V			C5823	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5510	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5824	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5511	1-131-661-21	ELECT CHIP	100UF	20%	10V			C5825	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5512	1-100-756-91	CERAMIC CHIP	0.047UF		50V			C5826	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5513	1-100-756-91	CERAMIC CHIP	0.047UF		50V			C5827	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5514	1-100-756-91	CERAMIC CHIP	0.047UF		50V			C5828	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5515	1-100-436-91	CERAMIC CHIP	0.033UF	10%	25V			C5829	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5517	1-100-756-91	CERAMIC CHIP	0.047UF		50V			C5830	1-131-661-21	ELECT CHIP	100UF	20%	10V		
C5518	1-100-436-91	CERAMIC CHIP	0.033UF	10%	25V			C5831	1-131-661-21	ELECT CHIP	100UF	20%	10V		
C5519	1-100-756-91	CERAMIC CHIP	0.047UF		50V			C5832	1-164-850-11	CERAMIC CHIP	10PF	0.50PF	50V		
C5520	1-100-436-91	CERAMIC CHIP	0.033UF	10%	25V			C5833	1-164-850-11	CERAMIC CHIP	10PF	0.50PF	50V		
C5521	1-100-912-11	CERAMIC CHIP	1UF	10%	25V			C5834	1-164-874-11	CERAMIC CHIP	100PF	5.00%	50V		
C5522	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5835	1-165-989-11	CERAMIC CHIP	10UF	10%	6.3V		
C5523	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5836	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5524	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5837	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5525	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5838	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5526	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5839	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5527	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5840	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5528	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5841	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5529	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5842	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5530	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5843	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5531	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5844	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5532	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5845	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5533	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5851	1-131-661-21	ELECT CHIP	100UF	20%	10V		
C5534	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5852	1-131-661-21	ELECT CHIP	100UF	20%	10V		
C5535	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5853	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5536	1-100-916-11	CERAMIC CHIP	0.1UF	10%	16V			C5854	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5604	1-125-777-11	CERAMIC CHIP	0.1UF	10.00%	10V			C5855	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5605	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V			C5856	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5606	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V			C5857	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		
C5607	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V			C5858	1-131-661-21	ELECT CHIP	100UF	20%	10V		
C5608	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V			C5859	1-131-661-21	ELECT CHIP	100UF	20%	10V		
C5609	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V			C5865	1-100-567-81	CERAMIC CHIP	0.01UF	10%	25V		

B2

KLV-40/46X200A, 40/46X250A (GA) 4-23

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
FB4508	1-400-382-11	FERRITE	0UH	IC4803	6-705-529-01	IC LMH6658MMX/J5000172	
FB4800	1-400-382-11	FERRITE	0UH	IC4804	6-706-180-01	IC SN74LVC2G53DCUR	
FB4801	1-400-382-11	FERRITE	0UH	IC4807	8-759-549-01	IC SN74LV125APWR	
FB4802	1-400-382-11	FERRITE	0UH	IC5000	8-753-250-46	IC CXD2097BQ-1	
				IC5001	6-707-786-01	IC IS42S16100C1-7TL-TR	
FB4803	1-400-382-11	FERRITE	0UH	IC5002	8-759-549-01	IC SN74LV125APWR	
FB4804	1-400-499-21	FERRITE	0UH	IC5003	6-709-646-01	IC TLC2933AIPWR	
FB5000	1-400-499-21	FERRITE	0UH	IC5102	6-708-754-01	IC CY22392ZXC-380T	
FB5001	1-400-382-11	FERRITE	0UH	IC5103	6-705-019-01	IC PST3620UL	
FB5002	1-400-382-11	FERRITE	0UH	IC5104	8-759-592-49	IC TC7SZ125FU(TE85R)	
FB5003	1-400-382-11	FERRITE	0UH	IC5105	8-759-592-49	IC TC7SZ125FU(TE85R)	
FB5004	1-400-382-11	FERRITE	0UH	IC5107	8-753-239-54	IC CXD4709GB	
FB5005	1-400-382-11	FERRITE	0UH	IC5300	6-707-822-01	IC EM6A9320BI-5MG	
FB5100	1-400-580-21	FERRITE	0UH	IC5301	6-806-793-01	IC S29JL032H70TFI010-FIX-BE101	
FB5101	1-400-580-21	FERRITE	0UH	IC5302	6-707-822-01	IC EM6A9320BI-5MG	
FB5102	1-400-580-21	FERRITE	0UH	IC5304	6-707-373-01	IC TPS51100DGQR	
FB5103	1-400-580-21	FERRITE	0UH	IC5401	6-701-025-01	IC SN74LVC16244ADGGR	
FB5104	1-400-580-21	FERRITE	0UH	IC5403	6-704-099-01	IC TC7WZ08FK(TE85R)	
FB5105	1-400-580-21	FERRITE	0UH	IC5404	8-759-549-01	IC SN74LV125APWR	
FB5106	1-400-580-21	FERRITE	0UH	IC5408	6-701-917-01	IC TC7PA34FU(TE85R)	
FB5107	1-400-499-21	FERRITE	0UH	IC5500	6-708-641-01	IC SAA7115AHL/V1	
FB5300	1-400-580-21	FERRITE	0UH	IC5601	6-807-041-01	IC MB90F334APMC-G-9009E1	
FB5301	1-400-580-21	FERRITE	0UH	IC5602	8-759-596-29	IC SN74LV4066APWR	
FB5302	1-400-580-21	FERRITE	0UH	IC5603	6-704-067-01	IC M24128-BWMN6T(A)	
FB5305	1-400-382-11	FERRITE	0UH	IC5801	6-707-347-01	IC CXD9816AGG	
FB5306	1-400-382-11	FERRITE	0UH	IC5900	6-708-704-01	IC THC63LVD1023	
FB5307	1-400-382-11	FERRITE	0UH			<JACK>	
FB5401	1-400-499-21	FERRITE	0UH	J4500	1-820-464-11	PHONO JACK 2P	
FB5402	1-400-499-21	FERRITE	0UH			<COIL>	
FB5404	1-400-499-21	FERRITE	0UH	L4300	1-424-918-21	INDUCTOR	10UH
FB5501	1-400-499-21	FERRITE	0UH	L4301	1-424-918-21	INDUCTOR	10UH
FB5502	1-400-499-21	FERRITE	0UH	L4302	1-424-918-21	INDUCTOR	10UH
FB5503	1-400-499-21	FERRITE	0UH	L4303	1-424-918-21	INDUCTOR	10UH
FB5601	1-400-499-21	FERRITE	0UH	L4304	1-456-065-21	INDUCTOR	22UH
FB5602	1-400-461-21	FERRITE	0UH	L4306	1-419-630-21	INDUCTOR	4.7UH
FB5607	1-400-461-21	FERRITE	0UH	L4307	1-456-787-21	INDUCTOR	10UH
FB5800	1-400-382-11	FERRITE	0UH	L4800	1-469-549-21	INDUCTOR	1UH
FB5801	1-400-382-11	FERRITE	0UH	L4801	1-469-549-21	INDUCTOR	1UH
FB5802	1-400-499-21	FERRITE	0UH	L4802	1-469-549-21	INDUCTOR	1UH
FB5901	1-400-461-21	FERRITE	0UH	L4803	1-469-549-21	INDUCTOR	1UH
FB5902	1-400-461-21	FERRITE	0UH	L4805	1-469-555-21	INDUCTOR	10UH
FB5903	1-400-461-21	FERRITE	0UH	L4806	1-469-555-21	INDUCTOR	10UH
FB5904	1-400-461-21	FERRITE	0UH	L4807	1-469-549-21	INDUCTOR	1UH
FB5908	1-400-461-21	FERRITE	0UH	L4808	1-469-555-21	INDUCTOR	10UH
		<FILTER>		L5000	1-469-555-21	INDUCTOR	10UH
FL4801	1-813-815-21	LOWPASS FILTER		L5001	1-469-555-21	INDUCTOR	10UH
		<IC>		L5100	1-469-553-21	INDUCTOR	4.7UH
IC4200	6-702-982-01	IC TC7SA00FU(TE85R)		L5101	1-469-555-21	INDUCTOR	10UH
IC4300	6-706-884-01	IC BD9851EFV-E2		L5500	1-412-058-11	INDUCTOR	10UH
IC4301	6-706-884-01	IC BD9851EFV-E2		L5501	1-412-058-11	INDUCTOR	10UH
IC4302	6-705-646-01	IC MB39A116PFT-G-BND-ERE1		L5502	1-412-058-11	INDUCTOR	10UH
IC4303	6-706-884-01	IC BD9851EFV-E2		L5503	1-412-058-11	INDUCTOR	10UH
IC4305	6-708-603-01	IC PQ070XNA1ZPH		L5900	1-469-555-21	INDUCTOR	10UH
IC4500	6-704-600-01	IC M24C02-WMN6T(B)		L5901	1-469-555-21	INDUCTOR	10UH
IC4501	6-704-600-01	IC M24C02-WMN6T(B)		L5902	1-456-583-11	INDUCTOR	0UH
IC4502	6-708-758-01	IC PCA9517DP.118		L5903	1-469-555-21	INDUCTOR	10UH
IC4503	6-708-758-01	IC PCA9517DP.118		L5904	1-456-583-11	INDUCTOR	0UH
IC4504	8-759-596-34	IC SN74LV4053APWR		L5905	1-456-583-11	INDUCTOR	0UH
IC4505	8-753-255-97	IC CXB1441R-T4		L5906	1-456-583-11	INDUCTOR	0UH
IC4506	6-708-703-01	IC SI9011CTU					
IC4800	8-753-270-44	IC CXD3814GB-TL					
IC4802	6-706-873-01	IC MT48LC4M16A2P-75:G					

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
L5907	1-456-583-11	INDUCTOR	0UH	R4009	1-218-959-11	RES-CHIP	3.3K 5% 1/16W
L5908	1-456-583-11	INDUCTOR	0UH	R4010	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
L5909	1-456-583-11	INDUCTOR	0UH	R4011	1-218-990-81	SHORT CHIP	0
L5910	1-456-583-11	INDUCTOR	0UH	R4012	1-218-990-81	SHORT CHIP	0
L5911	1-456-583-11	INDUCTOR	0UH	R4023	1-218-990-81	SHORT CHIP	0
L5912	1-456-583-11	INDUCTOR	0UH	R4025	1-218-990-81	SHORT CHIP	0
L5913	1-456-583-11	INDUCTOR	0UH	R4026	1-218-990-81	SHORT CHIP	0
L5914	1-456-583-11	INDUCTOR	0UH	R4033	1-218-990-81	SHORT CHIP	0
<TRANSISTOR>				R4034	1-218-990-81	SHORT CHIP	0
Q4300	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R4036	1-218-990-81	SHORT CHIP	0
Q4301	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R4037	1-218-990-81	SHORT CHIP	0
Q4302	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R4038	1-218-956-11	RES-CHIP	1.8K 5% 1/16W
Q4303	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R4039	1-218-956-11	RES-CHIP	1.8K 5% 1/16W
Q4304	6-550-586-01	TRANSISTOR 2PA1576R-115		R4040	1-218-990-81	SHORT CHIP	0
Q4305	6-550-585-01	TRANSISTOR 2PC4081R-115		R4041	1-218-990-81	SHORT CHIP	0
Q4306	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R4045	1-218-990-81	SHORT CHIP	0
Q4308	6-550-222-01	TRANSISTOR IRF7335D1-TR		R4046	1-218-990-81	SHORT CHIP	0
Q4500	8-729-028-99	TRANSISTOR DTC114YUA-T106		R4047	1-218-990-81	SHORT CHIP	0
Q4501	8-729-028-99	TRANSISTOR DTC114YUA-T106		R4048	1-218-990-81	SHORT CHIP	0
Q4502	8-729-025-28	TRANSISTOR 2SK1828		R4051	1-218-990-81	SHORT CHIP	0
Q4503	8-729-025-28	TRANSISTOR 2SK1828		R4052	1-218-990-81	SHORT CHIP	0
Q4504	8-729-028-99	TRANSISTOR DTC114YUA-T106		R4053	1-218-990-81	SHORT CHIP	0
Q4505	8-729-028-99	TRANSISTOR DTC114YUA-T106		R4054	1-218-990-81	SHORT CHIP	0
Q4506	8-729-028-96	TRANSISTOR DTC114EUA-T106		R4055	1-218-990-81	SHORT CHIP	0
Q4507	8-729-028-96	TRANSISTOR DTC114EUA-T106		R4056	1-218-990-81	SHORT CHIP	0
Q4508	8-729-028-99	TRANSISTOR DTC114YUA-T106		R4057	1-218-990-81	SHORT CHIP	0
Q4509	8-729-028-99	TRANSISTOR DTC114YUA-T106		R4058	1-218-990-81	SHORT CHIP	0
Q4510	8-729-028-96	TRANSISTOR DTC114EUA-T106		R4059	1-218-990-81	SHORT CHIP	0
Q4511	8-729-028-99	TRANSISTOR DTC114YUA-T106		R4060	1-218-990-81	SHORT CHIP	0
Q4512	8-729-028-96	TRANSISTOR DTC114EUA-T106		R4061	1-218-990-81	SHORT CHIP	0
Q4800	8-729-159-65	TRANSISTOR 2SD596-DV5		R4062	1-218-990-81	SHORT CHIP	0
Q4801	8-729-162-45	TRANSISTOR 2SB624-BV5		R4063	1-218-990-81	SHORT CHIP	0
Q4802	6-550-586-01	TRANSISTOR 2PA1576R-115		R4064	1-218-990-81	SHORT CHIP	0
Q4804	6-550-585-01	TRANSISTOR 2PC4081R-115		R4065	1-218-990-81	SHORT CHIP	0
Q4805	6-550-586-01	TRANSISTOR 2PA1576R-115		R4068	1-218-990-81	SHORT CHIP	0
Q4810	6-550-585-01	TRANSISTOR 2PC4081R-115		R4069	1-218-990-81	SHORT CHIP	0
Q4811	6-550-586-01	TRANSISTOR 2PA1576R-115		R4070	1-218-990-81	SHORT CHIP	0
Q4812	6-550-586-01	TRANSISTOR 2PA1576R-115		R4071	1-218-990-81	SHORT CHIP	0
Q4813	6-550-586-01	TRANSISTOR 2PA1576R-115		R4072	1-218-990-81	SHORT CHIP	0
Q4814	6-550-585-01	TRANSISTOR 2PC4081R-115		R4073	1-218-990-81	SHORT CHIP	0
Q4815	6-550-585-01	TRANSISTOR 2PC4081R-115		R4074	1-218-990-81	SHORT CHIP	0
Q4816	6-550-586-01	TRANSISTOR 2PA1576R-115		R4076	1-218-990-81	SHORT CHIP	0
Q4817	6-550-585-01	TRANSISTOR 2PC4081R-115		R4077	1-218-990-81	SHORT CHIP	0
Q4818	6-550-586-01	TRANSISTOR 2PA1576R-115		R4079	1-218-990-81	SHORT CHIP	0
Q4819	8-729-028-96	TRANSISTOR DTC114EUA-T106		R4081	1-218-990-81	SHORT CHIP	0
Q5002	8-729-028-96	TRANSISTOR DTC114EUA-T106		R4082	1-218-990-81	SHORT CHIP	0
Q5100	8-729-028-96	TRANSISTOR DTC114EUA-T106		R4084	1-218-990-81	SHORT CHIP	0
Q5400	8-729-028-96	TRANSISTOR DTC114EUA-T106		R4085	1-218-990-81	SHORT CHIP	0
Q5500	8-729-905-35	TRANSISTOR 2SC4081-R		R4086	1-218-990-81	SHORT CHIP	0
Q5501	8-729-905-35	TRANSISTOR 2SC4081-R		R4089	1-218-990-81	SHORT CHIP	0
Q5502	6-550-586-01	TRANSISTOR 2PA1576R-115		R4090	1-218-990-81	SHORT CHIP	0
Q5503	6-550-586-01	TRANSISTOR 2PA1576R-115		R4091	1-218-990-81	SHORT CHIP	0
Q5601	8-729-028-96	TRANSISTOR DTC114EUA-T106		R4092	1-218-990-81	SHORT CHIP	0
Q5602	8-729-028-96	TRANSISTOR DTC114EUA-T106		R4093	1-218-990-81	SHORT CHIP	0
Q5603	6-550-586-01	TRANSISTOR 2PA1576R-115		R4095	1-218-990-81	SHORT CHIP	0
<RESISTOR>				R4096	1-218-990-81	SHORT CHIP	0
R4004	1-218-990-81	SHORT CHIP	0	R4097	1-218-990-81	SHORT CHIP	0
R4005	1-218-933-11	RES-CHIP	22 5% 1/16W	R4098	1-218-990-81	SHORT CHIP	0
R4006	1-218-933-11	RES-CHIP	22 5% 1/16W	R4099	1-218-990-81	SHORT CHIP	0
R4007	1-218-955-11	RES-CHIP	1.5K 5% 1/16W	R4100	1-218-990-81	SHORT CHIP	0
R4008	1-218-973-11	RES-CHIP	47K 5% 1/16W	R4101	1-218-990-81	SHORT CHIP	0
				R4102	1-218-990-81	SHORT CHIP	0
				R4103	1-218-990-81	SHORT CHIP	0
				R4104	1-218-990-81	SHORT CHIP	0
				R4105	1-218-990-81	SHORT CHIP	0

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R4106	1-218-990-81	SHORT CHIP	0			R4340	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R4107	1-218-990-81	SHORT CHIP	0			R4341	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R4108	1-218-990-81	SHORT CHIP	0			R4342	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R4109	1-218-950-11	RES-CHIP	560	5%	1/16W	R4343	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R4112	1-216-864-11	SHORT CHIP	0			R4344	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R4113	1-216-864-11	SHORT CHIP	0			R4345	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R4114	1-216-864-11	SHORT CHIP	0			R4346	1-218-967-11	RES-CHIP	15K	5%	1/16W
R4115	1-216-864-11	SHORT CHIP	0			R4347	1-218-949-11	RES-CHIP	470	5%	1/16W
R4116	1-216-864-11	SHORT CHIP	0			R4348	1-218-985-11	RES-CHIP	470K	5%	1/16W
R4117	1-216-864-11	SHORT CHIP	0			R4350	1-218-985-11	RES-CHIP	470K	5%	1/16W
R4118	1-216-864-11	SHORT CHIP	0			R4352	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R4119	1-216-864-11	SHORT CHIP	0			R4353	1-218-947-11	RES-CHIP	330	5%	1/16W
R4120	1-216-864-11	SHORT CHIP	0			R4354	1-218-990-81	SHORT CHIP	0		
R4121	1-216-864-11	SHORT CHIP	0			R4355	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4122	1-216-864-11	SHORT CHIP	0			R4356	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4205	1-218-990-81	SHORT CHIP	0			R4357	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4206	1-218-990-81	SHORT CHIP	0			R4358	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4207	1-218-990-81	SHORT CHIP	0			R4359	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4208	1-218-990-81	SHORT CHIP	0			R4360	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R4209	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4361	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4210	1-218-990-81	SHORT CHIP	0			R4362	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4214	1-218-990-81	SHORT CHIP	0			R4363	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R4215	1-218-990-81	SHORT CHIP	0			R4364	1-218-990-81	SHORT CHIP	0		
R4216	1-218-935-11	RES-CHIP	33	5%	1/16W	R4365	1-218-990-81	SHORT CHIP	0		
R4222	1-218-939-11	RES-CHIP	68	5%	1/16W	R4366	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4223	1-218-939-11	RES-CHIP	68	5%	1/16W	R4368	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R4224	1-218-935-11	RES-CHIP	33	5%	1/16W	R4369	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R4225	1-218-990-81	SHORT CHIP	0			R4370	1-208-933-11	METAL CHIP	82K	0.5%	1/16W
R4226	1-218-990-81	SHORT CHIP	0			R4371	1-218-985-11	RES-CHIP	470K	5%	1/16W
R4230	1-218-990-81	SHORT CHIP	0			R4374	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R4231	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4375	1-218-990-81	SHORT CHIP	0		
R4232	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4384	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R4234	1-218-956-11	RES-CHIP	1.8K	5%	1/16W	R4386	1-208-933-11	METAL CHIP	82K	0.5%	1/16W
R4235	1-218-956-11	RES-CHIP	1.8K	5%	1/16W	R4387	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R4236	1-218-950-11	RES-CHIP	560	5%	1/16W	R4388	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R4237	1-218-990-81	SHORT CHIP	0			R4390	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R4238	1-218-990-81	SHORT CHIP	0			R4391	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R4239	1-218-990-81	SHORT CHIP	0			R4392	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R4240	1-218-990-81	SHORT CHIP	0			R4396	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R4241	1-218-990-81	SHORT CHIP	0			R4397	1-218-990-81	SHORT CHIP	0		
R4242	1-218-990-81	SHORT CHIP	0			R4398	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4243	1-218-990-81	SHORT CHIP	0			R4404	1-216-864-11	SHORT CHIP	0		
R4244	1-218-990-81	SHORT CHIP	0			R4405	1-216-864-11	SHORT CHIP	0		
R4245	1-218-990-81	SHORT CHIP	0			R4406	1-216-864-11	SHORT CHIP	0		
R4246	1-218-990-81	SHORT CHIP	0			R4407	1-216-864-11	SHORT CHIP	0		
R4271	1-218-990-81	SHORT CHIP	0			R4409	1-218-990-81	SHORT CHIP	0		
R4273	1-218-939-11	RES-CHIP	68	5%	1/16W	R4416	1-216-864-11	SHORT CHIP	0		
R4306	1-218-985-11	RES-CHIP	470K	5%	1/16W	R4422	1-218-990-81	SHORT CHIP	0		
R4308	1-218-985-11	RES-CHIP	470K	5%	1/16W	R4503	1-218-929-11	RES-CHIP	10	5%	1/16W
R4310	1-218-953-11	RES-CHIP	1K	5%	1/16W	R4504	1-218-929-11	RES-CHIP	10	5%	1/16W
R4311	1-218-953-11	RES-CHIP	1K	5%	1/16W	R4505	1-216-815-11	METAL CHIP	330	5%	1/10W
R4321	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R4506	1-216-815-11	METAL CHIP	330	5%	1/10W
R4322	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R4507	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4324	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R4508	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4325	1-208-923-11	METAL CHIP	33K	0.5%	1/16W	R4509	1-216-853-11	METAL CHIP	470K	5%	1/10W
R4326	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R4510	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R4327	1-218-958-11	METAL CHIP	2.7K	5%	1/16W	R4511	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R4328	1-208-931-11	METAL CHIP	68K	0.5%	1/16W	R4512	1-216-853-11	METAL CHIP	470K	5%	1/10W
R4329	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R4513	1-218-941-81	RES-CHIP	100	5%	1/16W
R4332	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R4514	1-218-941-81	RES-CHIP	100	5%	1/16W
R4333	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R4515	1-218-941-81	RES-CHIP	100	5%	1/16W
R4334	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R4516	1-218-941-81	RES-CHIP	100	5%	1/16W
R4335	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R4517	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4336	1-208-905-11	METAL CHIP	5.6K	0.5%	1/16W	R4518	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4337	1-208-905-11	METAL CHIP	5.6K	0.5%	1/16W	R4519	1-218-973-11	RES-CHIP	47K	5%	1/16W

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R4520	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4598	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R4521	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4599	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R4522	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4600	1-216-864-11	SHORT CHIP	0		
R4523	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4601	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4524	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4602	1-218-937-11	RES-CHIP	47	5%	1/16W
R4525	1-218-941-81	RES-CHIP	100	5%	1/16W	R4603	1-218-937-11	RES-CHIP	47	5%	1/16W
R4526	1-218-990-81	SHORT CHIP	0			R4605	1-216-864-11	SHORT CHIP	0		
R4527	1-218-990-81	SHORT CHIP	0			R4609	1-218-990-81	SHORT CHIP	0		
R4528	1-218-941-81	RES-CHIP	100	5%	1/16W	R4610	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4529	1-218-990-81	SHORT CHIP	0			R4611	1-218-933-11	RES-CHIP	22	5%	1/16W
R4530	1-218-990-81	SHORT CHIP	0			R4612	1-218-937-11	RES-CHIP	47	5%	1/16W
R4533	1-218-990-81	SHORT CHIP	0			R4613	1-218-937-11	RES-CHIP	47	5%	1/16W
R4534	1-218-990-81	SHORT CHIP	0			R4614	1-218-937-11	RES-CHIP	47	5%	1/16W
R4535	1-218-990-81	SHORT CHIP	0			R4615	1-218-937-11	RES-CHIP	47	5%	1/16W
R4536	1-218-929-11	RES-CHIP	10	5%	1/16W	R4616	1-218-937-11	RES-CHIP	47	5%	1/16W
R4537	1-218-929-11	RES-CHIP	10	5%	1/16W	R4617	1-218-937-11	RES-CHIP	47	5%	1/16W
R4538	1-218-929-11	RES-CHIP	10	5%	1/16W	R4618	1-218-937-11	RES-CHIP	47	5%	1/16W
R4539	1-218-929-11	RES-CHIP	10	5%	1/16W	R4619	1-218-937-11	RES-CHIP	47	5%	1/16W
R4540	1-218-929-11	RES-CHIP	10	5%	1/16W	R4620	1-218-937-11	RES-CHIP	47	5%	1/16W
R4541	1-218-929-11	RES-CHIP	10	5%	1/16W	R4621	1-218-933-11	RES-CHIP	22	5%	1/16W
R4542	1-218-929-11	RES-CHIP	10	5%	1/16W	R4622	1-218-935-11	RES-CHIP	33	5%	1/16W
R4543	1-218-929-11	RES-CHIP	10	5%	1/16W	R4623	1-216-864-11	SHORT CHIP	0		
R4544	1-218-990-81	SHORT CHIP	0			R4624	1-218-990-81	SHORT CHIP	0		
R4545	1-218-990-81	SHORT CHIP	0			R4700	1-216-864-11	SHORT CHIP	0		
R4546	1-218-929-11	RES-CHIP	10	5%	1/16W	R4701	1-216-864-11	SHORT CHIP	0		
R4547	1-218-929-11	RES-CHIP	10	5%	1/16W	R4800	1-216-864-11	SHORT CHIP	0		
R4548	1-218-929-11	RES-CHIP	10	5%	1/16W	R4801	1-218-990-81	SHORT CHIP	0		
R4549	1-218-929-11	RES-CHIP	10	5%	1/16W	R4802	1-218-937-11	RES-CHIP	47	5%	1/16W
R4550	1-218-929-11	RES-CHIP	10	5%	1/16W	R4803	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4551	1-218-929-11	RES-CHIP	10	5%	1/16W	R4804	1-218-935-11	RES-CHIP	33	5%	1/16W
R4552	1-218-929-11	RES-CHIP	10	5%	1/16W	R4811	1-218-929-11	RES-CHIP	10	5%	1/16W
R4553	1-218-929-11	RES-CHIP	10	5%	1/16W	R4812	1-218-929-11	RES-CHIP	10	5%	1/16W
R4554	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R4813	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4555	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R4814	1-218-933-11	RES-CHIP	22	5%	1/16W
R4557	1-218-990-81	SHORT CHIP	0			R4815	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R4559	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R4819	1-218-929-11	RES-CHIP	10	5%	1/16W
R4560	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R4820	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4561	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4821	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4562	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4823	1-218-990-81	SHORT CHIP	0		
R4563	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4824	1-218-990-81	SHORT CHIP	0		
R4572	1-218-951-11	RES-CHIP	680	5%	1/16W	R4825	1-218-990-81	SHORT CHIP	0		
R4573	1-218-951-11	RES-CHIP	680	5%	1/16W	R4826	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4574	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R4827	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4575	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4829	1-218-990-81	SHORT CHIP	0		
R4576	1-218-951-11	RES-CHIP	680	5%	1/16W	R4831	1-220-884-81	METAL CHIP	39	0.5%	1/16W
R4577	1-218-990-81	SHORT CHIP	0			R4833	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R4578	1-218-990-81	SHORT CHIP	0			R4835	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R4580	1-218-990-81	SHORT CHIP	0			R4836	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W
R4581	1-218-990-81	SHORT CHIP	0			R4837	1-218-849-11	METAL CHIP	1.2K	0.5%	1/10W
R4582	1-218-937-11	RES-CHIP	47	5%	1/16W	R4844	1-218-990-81	SHORT CHIP	0		
R4583	1-218-937-11	RES-CHIP	47	5%	1/16W	R4845	1-218-937-11	RES-CHIP	47	5%	1/16W
R4584	1-218-937-11	RES-CHIP	47	5%	1/16W	R4846	1-218-945-11	METAL CHIP	220	5%	1/16W
R4585	1-218-937-11	RES-CHIP	47	5%	1/16W	R4847	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R4586	1-218-937-11	RES-CHIP	47	5%	1/16W	R4848	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R4587	1-218-937-11	RES-CHIP	47	5%	1/16W	R4849	1-218-943-11	RES-CHIP	150	5%	1/16W
R4588	1-218-937-11	RES-CHIP	47	5%	1/16W	R4851	1-218-951-11	RES-CHIP	680	5%	1/16W
R4589	1-218-937-11	RES-CHIP	47	5%	1/16W	R4852	1-218-941-11	METAL CHIP	100	5%	1/16W
R4590	1-218-929-11	RES-CHIP	10	5%	1/16W	R4854	1-218-941-11	METAL CHIP	100	5%	1/16W
R4591	1-218-929-11	RES-CHIP	10	5%	1/16W	R4855	1-218-937-11	RES-CHIP	47	5%	1/16W
R4592	1-218-929-11	RES-CHIP	10	5%	1/16W	R4856	1-218-937-11	RES-CHIP	47	5%	1/16W
R4593	1-218-929-11	RES-CHIP	10	5%	1/16W	R4858	1-218-929-11	RES-CHIP	10	5%	1/16W
R4594	1-218-929-11	RES-CHIP	10	5%	1/16W	R4860	1-218-929-11	RES-CHIP	10	5%	1/16W
R4595	1-218-929-11	RES-CHIP	10	5%	1/16W	R4862	1-218-941-11	METAL CHIP	100	5%	1/16W
R4596	1-218-929-11	RES-CHIP	10	5%	1/16W	R4863	1-218-941-11	METAL CHIP	100	5%	1/16W
R4597	1-218-929-11	RES-CHIP	10	5%	1/16W	R4864	1-218-929-11	RES-CHIP	10	5%	1/16W

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R4865	1-218-945-11	METAL CHIP	220	5%	1/16W	R4945	1-218-941-81	RES-CHIP	100	5%	1/16W
R4866	1-218-990-81	SHORT CHIP	0			R4947	1-218-665-11	METAL CHIP	75	0.5%	1/10W
R4867	1-208-663-11	METAL CHIP	150	0.5%	1/16W	R4948	1-218-665-11	METAL CHIP	75	0.5%	1/10W
R4868	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R4949	1-218-665-11	METAL CHIP	75	0.5%	1/10W
R4869	1-218-945-11	METAL CHIP	220	5%	1/16W	R5002	1-218-937-11	RES-CHIP	47	5%	1/16W
R4870	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5003	1-218-945-11	RES-CHIP	220	5%	1/16W
R4874	1-218-945-11	METAL CHIP	220	5%	1/16W	R5004	1-218-933-11	RES-CHIP	22	5%	1/16W
R4875	1-218-990-81	SHORT CHIP	0			R5005	1-218-933-11	RES-CHIP	22	5%	1/16W
R4876	1-208-663-11	METAL CHIP	150	0.5%	1/16W	R5006	1-218-941-81	RES-CHIP	100	5%	1/16W
R4877	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R5007	1-218-941-81	RES-CHIP	100	5%	1/16W
R4878	1-218-945-11	METAL CHIP	220	5%	1/16W	R5008	1-218-933-11	RES-CHIP	22	5%	1/16W
R4879	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R5009	1-218-933-11	RES-CHIP	22	5%	1/16W
R4880	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R5010	1-218-990-81	SHORT CHIP	0		
R4881	1-218-941-11	METAL CHIP	100	5%	1/16W	R5013	1-218-937-11	RES-CHIP	47	5%	1/16W
R4882	1-218-941-81	RES-CHIP	100	5%	1/16W	R5014	1-218-937-11	RES-CHIP	47	5%	1/16W
R4883	1-218-941-81	RES-CHIP	100	5%	1/16W	R5016	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4884	1-218-941-81	RES-CHIP	100	5%	1/16W	R5017	1-218-985-11	RES-CHIP	470K	5%	1/16W
R4885	1-218-941-81	RES-CHIP	100	5%	1/16W	R5018	1-218-933-11	RES-CHIP	22	5%	1/16W
R4886	1-218-941-81	RES-CHIP	100	5%	1/16W	R5019	1-218-945-11	RES-CHIP	220	5%	1/16W
R4887	1-218-941-81	RES-CHIP	100	5%	1/16W	R5021	1-218-945-11	RES-CHIP	220	5%	1/16W
R4888	1-218-941-81	RES-CHIP	100	5%	1/16W	R5022	1-218-947-11	RES-CHIP	330	5%	1/16W
R4890	1-216-818-11	METAL CHIP	560	5%	1/10W	R5024	1-218-990-81	SHORT CHIP	0		
R4891	1-216-818-11	METAL CHIP	560	5%	1/10W	R5025	1-218-990-81	SHORT CHIP	0		
R4892	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5026	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W
R4893	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5027	1-218-985-11	RES-CHIP	470K	5%	1/16W
R4894	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W	R5029	1-218-933-11	RES-CHIP	22	5%	1/16W
R4896	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5030	1-218-933-11	RES-CHIP	22	5%	1/16W
R4898	1-208-885-11	METAL CHIP	820	0.5%	1/16W	R5031	1-218-933-11	RES-CHIP	22	5%	1/16W
R4899	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R5036	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4900	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5037	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4901	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5038	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R4902	1-218-990-81	SHORT CHIP	0			R5039	1-218-990-81	SHORT CHIP	0		
R4903	1-218-990-81	SHORT CHIP	0			R5041	1-218-990-81	SHORT CHIP	0		
R4904	1-218-951-11	RES-CHIP	680	5%	1/16W	R5048	1-218-990-81	SHORT CHIP	0		
R4905	1-218-990-81	SHORT CHIP	0			R5049	1-218-990-81	SHORT CHIP	0		
R4907	1-218-941-81	RES-CHIP	100	5%	1/16W	R5050	1-218-990-81	SHORT CHIP	0		
R4908	1-218-941-81	RES-CHIP	100	5%	1/16W	R5051	1-218-990-81	SHORT CHIP	0		
R4909	1-218-941-81	RES-CHIP	100	5%	1/16W	R5052	1-218-990-81	SHORT CHIP	0		
R4911	1-218-951-11	RES-CHIP	680	5%	1/16W	R5053	1-218-990-81	SHORT CHIP	0		
R4912	1-218-990-81	SHORT CHIP	0			R5108	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4913	1-218-951-11	RES-CHIP	680	5%	1/16W	R5109	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4914	1-218-990-81	SHORT CHIP	0			R5110	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4915	1-218-990-81	SHORT CHIP	0			R5111	1-218-990-81	SHORT CHIP	0		
R4917	1-218-951-11	RES-CHIP	680	5%	1/16W	R5112	1-218-990-81	SHORT CHIP	0		
R4918	1-218-990-81	SHORT CHIP	0			R5114	1-218-990-81	SHORT CHIP	0		
R4920	1-218-935-11	RES-CHIP	33	5%	1/16W	R5115	1-218-949-11	RES-CHIP	470	5%	1/16W
R4921	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5116	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4922	1-208-677-11	METAL CHIP	560	0.5%	1/16W	R5119	1-218-990-81	SHORT CHIP	0		
R4923	1-218-990-81	SHORT CHIP	0			R5120	1-216-864-11	SHORT CHIP	0		
R4924	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W	R5122	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4925	1-218-933-11	RES-CHIP	22	5%	1/16W	R5123	1-218-990-81	SHORT CHIP	0		
R4927	1-218-990-81	SHORT CHIP	0			R5124	1-218-990-81	SHORT CHIP	0		
R4928	1-218-990-81	SHORT CHIP	0			R5126	1-218-990-81	SHORT CHIP	0		
R4929	1-218-990-81	SHORT CHIP	0			R5127	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W
R4932	1-218-937-11	RES-CHIP	47	5%	1/16W	R5128	1-218-849-11	METAL CHIP	1.2K	0.5%	1/10W
R4933	1-218-990-81	SHORT CHIP	0			R5129	1-218-929-11	RES-CHIP	10	5%	1/16W
R4934	1-218-933-11	RES-CHIP	22	5%	1/16W	R5130	1-218-950-11	RES-CHIP	560	5%	1/16W
R4935	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5132	1-218-935-11	RES-CHIP	33	5%	1/16W
R4937	1-218-990-81	SHORT CHIP	0			R5134	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4938	1-218-933-11	RES-CHIP	22	5%	1/16W	R5135	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4939	1-218-990-81	SHORT CHIP	0			R5136	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4940	1-218-990-81	SHORT CHIP	0			R5137	1-218-990-81	SHORT CHIP	0		
R4941	1-218-947-11	RES-CHIP	330	5%	1/16W	R5138	1-218-990-81	SHORT CHIP	0		
R4942	1-218-929-11	RES-CHIP	10	5%	1/16W	R5140	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4944	1-218-941-81	RES-CHIP	100	5%	1/16W	R5141	1-218-935-11	RES-CHIP	33	5%	1/16W

REF. NO.	PART NO.	DESCRIPTION			REMARK	REF. NO.	PART NO.	DESCRIPTION			REMARK
R5142	1-218-941-81	RES-CHIP	100	5%	1/16W	R5305	1-218-990-81	SHORT CHIP	0		
R5146	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5307	1-218-933-11	RES-CHIP	22	5%	1/16W
R5147	1-218-935-11	RES-CHIP	33	5%	1/16W	R5308	1-218-933-11	RES-CHIP	22	5%	1/16W
R5148	1-218-990-81	SHORT CHIP	0			R5309	1-218-933-11	RES-CHIP	22	5%	1/16W
R5151	1-218-990-81	SHORT CHIP	0			R5310	1-218-933-11	RES-CHIP	22	5%	1/16W
R5152	1-218-990-81	SHORT CHIP	0			R5311	1-218-933-11	RES-CHIP	22	5%	1/16W
R5155	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5312	1-218-933-11	RES-CHIP	22	5%	1/16W
R5156	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5313	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5157	1-218-937-11	RES-CHIP	47	5%	1/16W	R5315	1-218-933-11	RES-CHIP	22	5%	1/16W
R5158	1-218-937-11	RES-CHIP	47	5%	1/16W	R5316	1-218-933-11	RES-CHIP	22	5%	1/16W
R5159	1-218-937-11	RES-CHIP	47	5%	1/16W	R5318	1-218-933-11	RES-CHIP	22	5%	1/16W
R5160	1-218-937-11	RES-CHIP	47	5%	1/16W	R5319	1-218-933-11	RES-CHIP	22	5%	1/16W
R5162	1-218-990-81	SHORT CHIP	0			R5320	1-218-933-11	RES-CHIP	22	5%	1/16W
R5164	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5321	1-218-933-11	RES-CHIP	22	5%	1/16W
R5165	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5322	1-218-933-11	RES-CHIP	22	5%	1/16W
R5166	1-218-935-11	RES-CHIP	33	5%	1/16W	R5323	1-218-933-11	RES-CHIP	22	5%	1/16W
R5167	1-218-937-11	RES-CHIP	47	5%	1/16W	R5324	1-218-933-11	RES-CHIP	22	5%	1/16W
R5168	1-218-935-11	RES-CHIP	33	5%	1/16W	R5325	1-218-937-11	RES-CHIP	47	5%	1/16W
R5169	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R5326	1-218-937-11	RES-CHIP	47	5%	1/16W
R5170	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5327	1-218-937-11	RES-CHIP	47	5%	1/16W
R5171	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5328	1-218-937-11	RES-CHIP	47	5%	1/16W
R5172	1-218-969-11	RES-CHIP	22K	5%	1/16W	R5329	1-218-937-11	RES-CHIP	47	5%	1/16W
R5173	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R5330	1-218-937-11	RES-CHIP	47	5%	1/16W
R5174	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5331	1-218-937-11	RES-CHIP	47	5%	1/16W
R5178	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R5332	1-218-937-11	RES-CHIP	47	5%	1/16W
R5179	1-218-977-11	RES-CHIP	100K	5%	1/16W	R5333	1-218-990-81	SHORT CHIP	0		
R5180	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R5334	1-218-933-11	RES-CHIP	22	5%	1/16W
R5181	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5335	1-218-933-11	RES-CHIP	22	5%	1/16W
R5182	1-218-929-11	RES-CHIP	10	5%	1/16W	R5336	1-218-933-11	RES-CHIP	22	5%	1/16W
R5183	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5337	1-218-933-11	RES-CHIP	22	5%	1/16W
R5184	1-218-990-81	SHORT CHIP	0			R5339	1-216-295-91	SHORT CHIP	0		
R5185	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5340	1-218-933-11	RES-CHIP	22	5%	1/16W
R5189	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5341	1-218-933-11	RES-CHIP	22	5%	1/16W
R5190	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5342	1-218-933-11	RES-CHIP	22	5%	1/16W
R5193	1-218-935-11	RES-CHIP	33	5%	1/16W	R5343	1-218-937-11	RES-CHIP	47	5%	1/16W
R5194	1-218-935-11	RES-CHIP	33	5%	1/16W	R5344	1-218-933-11	RES-CHIP	22	5%	1/16W
R5195	1-218-935-11	RES-CHIP	33	5%	1/16W	R5345	1-218-937-11	RES-CHIP	47	5%	1/16W
R5196	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5346	1-218-937-11	RES-CHIP	47	5%	1/16W
R5197	1-218-973-11	RES-CHIP	47K	5%	1/16W	R5347	1-218-937-11	RES-CHIP	47	5%	1/16W
R5201	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5348	1-218-937-11	RES-CHIP	47	5%	1/16W
R5202	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5349	1-218-937-11	RES-CHIP	47	5%	1/16W
R5203	1-218-941-81	RES-CHIP	100	5%	1/16W	R5350	1-218-937-11	RES-CHIP	47	5%	1/16W
R5204	1-218-990-81	SHORT CHIP	0			R5351	1-218-937-11	RES-CHIP	47	5%	1/16W
R5205	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5352	1-218-937-11	RES-CHIP	47	5%	1/16W
R5206	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5353	1-218-937-11	RES-CHIP	47	5%	1/16W
R5207	1-218-945-11	RES-CHIP	220	5%	1/16W	R5354	1-218-937-11	RES-CHIP	47	5%	1/16W
R5208	1-218-990-81	SHORT CHIP	0			R5355	1-218-937-11	RES-CHIP	47	5%	1/16W
R5209	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5356	1-218-990-81	SHORT CHIP	0		
R5211	1-218-990-81	SHORT CHIP	0			R5357	1-218-933-11	RES-CHIP	22	5%	1/16W
R5212	1-218-937-11	RES-CHIP	47	5%	1/16W	R5358	1-218-933-11	RES-CHIP	22	5%	1/16W
R5213	1-218-937-11	RES-CHIP	47	5%	1/16W	R5365	1-216-295-91	SHORT CHIP	0		
R5214	1-218-937-11	RES-CHIP	47	5%	1/16W	R5366	1-218-990-81	SHORT CHIP	0		
R5215	1-218-969-11	RES-CHIP	22K	5%	1/16W	R5405	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5216	1-218-969-11	RES-CHIP	22K	5%	1/16W	R5406	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5217	1-218-969-11	RES-CHIP	22K	5%	1/16W	R5407	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5218	1-218-990-81	SHORT CHIP	0			R5409	1-218-933-11	RES-CHIP	22	5%	1/16W
R5220	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5411	1-218-990-81	SHORT CHIP	0		
R5221	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5412	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5222	1-218-941-81	RES-CHIP	100	5%	1/16W	R5415	1-218-933-11	RES-CHIP	22	5%	1/16W
R5223	1-218-939-11	RES-CHIP	68	5%	1/16W	R5417	1-218-939-11	RES-CHIP	68	5%	1/16W
R5300	1-218-933-11	RES-CHIP	22	5%	1/16W	R5418	1-218-939-11	RES-CHIP	68	5%	1/16W
R5301	1-218-990-81	SHORT CHIP	0			R5422	1-218-990-81	SHORT CHIP	0		
R5302	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5423	1-218-990-81	SHORT CHIP	0		
R5303	1-218-933-11	RES-CHIP	22	5%	1/16W	R5424	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5304	1-218-933-11	RES-CHIP	22	5%	1/16W	R5432	1-218-990-81	SHORT CHIP	0		

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
R5433	1-218-990-81	SHORT CHIP	0			R5651	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5443	1-218-990-81	SHORT CHIP	0			R5652	1-218-933-11	RES-CHIP	22	5%	1/16W
R5444	1-218-941-81	RES-CHIP	100	5%	1/16W	R5653	1-218-933-11	RES-CHIP	22	5%	1/16W
R5445	1-218-941-81	RES-CHIP	100	5%	1/16W	R5654	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5448	1-218-990-81	SHORT CHIP	0			R5655	1-218-933-11	RES-CHIP	22	5%	1/16W
R5449	1-218-990-81	SHORT CHIP	0			R5656	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5450	1-218-990-81	SHORT CHIP	0			R5657	1-218-933-11	RES-CHIP	22	5%	1/16W
R5500	1-218-990-81	SHORT CHIP	0			R5661	1-218-933-11	RES-CHIP	22	5%	1/16W
R5501	1-218-990-81	SHORT CHIP	0			R5662	1-218-933-11	RES-CHIP	22	5%	1/16W
R5509	1-218-955-11	RES-CHIP	1.5K	5%	1/16W	R5663	1-218-941-81	RES-CHIP	100	5%	1/16W
R5511	1-218-955-11	RES-CHIP	1.5K	5%	1/16W	R5665	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5512	1-218-952-11	RES-CHIP	820	5%	1/16W	R5667	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5515	1-218-952-11	RES-CHIP	820	5%	1/16W	R5668	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5516	1-216-818-11	METAL CHIP	560	5%	1/10W	R5669	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5517	1-218-990-81	SHORT CHIP	0			R5670	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5518	1-216-818-11	METAL CHIP	560	5%	1/10W	R5672	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5519	1-218-990-81	SHORT CHIP	0			R5674	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5525	1-216-864-11	SHORT CHIP	0			R5675	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5526	1-218-937-11	RES-CHIP	47	5%	1/16W	R5676	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5527	1-218-937-11	RES-CHIP	47	5%	1/16W	R5677	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5528	1-218-969-11	RES-CHIP	22K	5%	1/16W	R5679	1-218-990-81	SHORT CHIP	0		
R5532	1-218-933-11	RES-CHIP	22	5%	1/16W	R5681	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5533	1-218-933-11	RES-CHIP	22	5%	1/16W	R5682	1-218-941-81	RES-CHIP	100	5%	1/16W
R5534	1-218-933-11	RES-CHIP	22	5%	1/16W	R5683	1-218-941-81	RES-CHIP	100	5%	1/16W
R5535	1-218-990-81	SHORT CHIP	0			R5684	1-218-941-81	RES-CHIP	100	5%	1/16W
R5536	1-216-864-11	SHORT CHIP	0			R5685	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R5542	1-218-990-81	SHORT CHIP	0			R5686	1-218-990-81	SHORT CHIP	0		
R5543	1-218-990-81	SHORT CHIP	0			R5687	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5546	1-218-937-11	RES-CHIP	47	5%	1/16W	R5689	1-218-941-81	RES-CHIP	100	5%	1/16W
R5600	1-218-990-81	SHORT CHIP	0			R5690	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5605	1-218-990-81	SHORT CHIP	0			R5692	1-218-933-11	RES-CHIP	22	5%	1/16W
R5606	1-218-941-81	RES-CHIP	100	5%	1/16W	R5693	1-218-933-11	RES-CHIP	22	5%	1/16W
R5611	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5694	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5612	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5702	1-218-990-81	SHORT CHIP	0		
R5614	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5713	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R5615	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5714	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W
R5617	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5718	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W
R5618	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5734	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5619	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5738	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5621	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5800	1-218-990-81	SHORT CHIP	0		
R5623	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5801	1-218-937-11	RES-CHIP	47	5%	1/16W
R5624	1-218-990-81	SHORT CHIP	0			R5802	1-218-990-81	SHORT CHIP	0		
R5625	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5803	1-218-990-81	SHORT CHIP	0		
R5626	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5806	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5627	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5820	1-218-990-81	SHORT CHIP	0		
R5628	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5821	1-218-990-81	SHORT CHIP	0		
R5629	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5822	1-218-990-81	SHORT CHIP	0		
R5631	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5823	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5632	1-218-941-81	RES-CHIP	100	5%	1/16W	R5825	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5633	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5827	1-218-933-11	RES-CHIP	22	5%	1/16W
R5634	1-218-941-81	RES-CHIP	100	5%	1/16W	R5828	1-218-939-11	RES-CHIP	68	5%	1/16W
R5635	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5829	1-218-933-11	RES-CHIP	22	5%	1/16W
R5636	1-218-955-11	RES-CHIP	1.5K	5%	1/16W	R5830	1-218-990-81	SHORT CHIP	0		
R5637	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5832	1-218-939-11	RES-CHIP	68	5%	1/16W
R5638	1-218-933-11	RES-CHIP	22	5%	1/16W	R5833	1-218-939-11	RES-CHIP	68	5%	1/16W
R5639	1-218-941-81	RES-CHIP	100	5%	1/16W	R5837	1-216-864-11	SHORT CHIP	0		
R5641	1-218-933-11	RES-CHIP	22	5%	1/16W	R5841	1-216-864-11	SHORT CHIP	0		
R5643	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5842	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R5644	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5843	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R5645	1-218-990-81	SHORT CHIP	0			R5844	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R5646	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5845	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R5647	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5846	1-218-949-11	RES-CHIP	470	5%	1/16W
R5648	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5847	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R5649	1-218-990-81	SHORT CHIP	0			R5848	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R5650	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5849	1-218-989-11	RES-CHIP	1M	5%	1/16W

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK
R5850	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	RB5111	1-234-881-21	RES, CHIP NETWORK 22KX8 (3816)	
R5851	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	RB5113	1-234-378-21	RES, NETWORK 10K (1005X4)	
R5852	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	RB5114	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	
R5853	1-208-911-11	METAL CHIP	10K	0.5%	1/16W				
R5854	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	RB5115	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	
						RB5116	1-234-881-21	RES, CHIP NETWORK 22KX8 (3816)	
R5855	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	RB5117	1-234-881-21	RES, CHIP NETWORK 22KX8 (3816)	
R5901	1-218-990-81	SHORT CHIP	0			RB5118	1-234-881-21	RES, CHIP NETWORK 22KX8 (3816)	
R5902	1-218-990-81	SHORT CHIP	0			RB5119	1-234-881-21	RES, CHIP NETWORK 22KX8 (3816)	
R5904	1-218-990-81	SHORT CHIP	0						
R5907	1-218-990-81	SHORT CHIP	0			RB5120	1-234-785-21	RES, CHIP NETWORK 100X8 (3816)	
						RB5121	1-234-785-21	RES, CHIP NETWORK 100X8 (3816)	
R5908	1-218-990-81	SHORT CHIP	0			RB5300	1-234-370-21	RES, NETWORK 22 (1005X4)	
R5909	1-218-990-81	SHORT CHIP	0			RB5301	1-234-711-21	RES, CHIP NETWORK 22X8 (3816)	
R5912	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	RB5302	1-234-711-21	RES, CHIP NETWORK 22X8 (3816)	
R5913	1-218-961-11	RES-CHIP	4.7K	5%	1/16W				
R5915	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB5303	1-234-711-21	RES, CHIP NETWORK 22X8 (3816)	
						RB5304	1-234-370-21	RES, NETWORK 22 (1005X4)	
R5917	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB5305	1-234-370-21	RES, NETWORK 22 (1005X4)	
R5919	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB5306	1-234-370-21	RES, NETWORK 22 (1005X4)	
R5921	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB5307	1-234-370-21	RES, NETWORK 22 (1005X4)	
R5923	1-218-965-11	RES-CHIP	10K	5%	1/16W				
R5925	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB5308	1-234-370-21	RES, NETWORK 22 (1005X4)	
						RB5309	1-234-370-21	RES, NETWORK 22 (1005X4)	
R5926	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB5310	1-234-370-21	RES, NETWORK 22 (1005X4)	
R5928	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB5311	1-234-711-21	RES, CHIP NETWORK 22X8 (3816)	
R5934	1-218-933-11	RES-CHIP	22	5%	1/16W	RB5312	1-234-370-21	RES, NETWORK 22 (1005X4)	
R5935	1-218-933-11	RES-CHIP	22	5%	1/16W				
R5936	1-218-990-81	SHORT CHIP	0			RB5313	1-234-378-21	RES, NETWORK 10K (1005X4)	
<NETWORK>						RB5314	1-234-378-21	RES, NETWORK 10K (1005X4)	
RB4201	1-234-799-21	RES, CHIP NETWORK 10KX8 (3816)				RB5315	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB4203	1-234-892-21	RES, CHIP NETWORK 33X8 (3816)				RB5316	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB4205	1-234-785-21	RES, CHIP NETWORK 100X8 (3816)				RB5317	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB4206	1-234-887-21	RES, CHIP NETWORK 0X8 (3816)							
RB4207	1-234-785-21	RES, CHIP NETWORK 100X8 (3816)				RB5321	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	
						RB5322	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	
RB4208	1-234-887-21	RES, CHIP NETWORK 0X8 (3816)				RB5324	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB4212	1-234-799-21	RES, CHIP NETWORK 10KX8 (3816)				RB5327	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB4500	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)				RB5328	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB4501	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)							
RB4502	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)				RB5330	1-234-370-21	RES, NETWORK 22 (1005X4)	
						RB5331	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB4503	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)				RB5333	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB4504	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)				RB5334	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB4801	1-234-892-21	RES, CHIP NETWORK 33X8 (3816)				RB5335	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB4804	1-234-378-21	RES, NETWORK 10K (1005X4)							
RB4805	1-234-372-11	RES, NETWORK 100 (1005X4)				RB5336	1-234-370-21	RES, NETWORK 22 (1005X4)	
						RB5337	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB4806	1-234-372-11	RES, NETWORK 100 (1005X4)				RB5338	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB4807	1-234-372-11	RES, NETWORK 100 (1005X4)				RB5339	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB4808	1-234-372-11	RES, NETWORK 100 (1005X4)				RB5340	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB4809	1-234-372-11	RES, NETWORK 100 (1005X4)							
RB4810	1-234-372-11	RES, NETWORK 100 (1005X4)				RB5341	1-234-371-21	RES, NETWORK 47 (1005X4)	
						RB5342	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB4811	1-234-372-11	RES, NETWORK 100 (1005X4)				RB5343	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB4812	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)				RB5344	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB4813	1-234-887-21	RES, CHIP NETWORK 0X8 (3816)				RB5345	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB4814	1-234-887-21	RES, CHIP NETWORK 0X8 (3816)							
RB5000	1-234-373-21	RES, NETWORK 220 (1005X4)				RB5346	1-234-371-21	RES, NETWORK 47 (1005X4)	
						RB5347	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB5001	1-234-373-21	RES, NETWORK 220 (1005X4)				RB5348	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB5002	1-234-785-21	RES, CHIP NETWORK 100X8 (3816)				RB5349	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB5003	1-234-373-21	RES, NETWORK 220 (1005X4)				RB5350	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB5004	1-234-785-21	RES, CHIP NETWORK 100X8 (3816)							
RB5005	1-234-373-21	RES, NETWORK 220 (1005X4)				RB5351	1-234-371-21	RES, NETWORK 47 (1005X4)	
						RB5352	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB5006	1-234-373-21	RES, NETWORK 220 (1005X4)				RB5400	1-234-799-21	RES, CHIP NETWORK 10KX8 (3816)	
RB5007	1-234-373-21	RES, NETWORK 220 (1005X4)				RB5401	1-234-799-21	RES, CHIP NETWORK 10KX8 (3816)	
RB5008	1-234-373-21	RES, NETWORK 220 (1005X4)				RB5402	1-234-799-21	RES, CHIP NETWORK 10KX8 (3816)	
RB5009	1-234-373-21	RES, NETWORK 220 (1005X4)							
RB5108	1-234-881-21	RES, CHIP NETWORK 22KX8 (3816)				RB5403	1-234-799-21	RES, CHIP NETWORK 10KX8 (3816)	
						RB5419	1-234-785-21	RES, CHIP NETWORK 100X8 (3816)	
RB5109	1-234-881-21	RES, CHIP NETWORK 22KX8 (3816)				RB5420	1-234-785-21	RES, CHIP NETWORK 100X8 (3816)	
RB5110	1-234-881-21	RES, CHIP NETWORK 22KX8 (3816)				RB5421	1-234-785-21	RES, CHIP NETWORK 100X8 (3816)	
						RB5422	1-234-785-21	RES, CHIP NETWORK 100X8 (3816)	

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
RB5500	1-234-711-21	RES, CHIP NETWORK 22X8 (3816)		C7815	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
RB5501	1-234-711-21	RES, CHIP NETWORK 22X8 (3816)		C7816	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
RB5800	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)		C7817	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
RB5801	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)		C7818	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V
RB5802	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)		C7819	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
RB5803	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)		C7820	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
RB5804	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)		C7821	1-115-416-11	CERAMIC CHIP 0.001UF	5.00% 25V
RB5805	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)		C7822	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
RB5806	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)		C7823	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
RB5807	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)		C7900	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
RB5808	1-245-943-21	RES, CHIP NETWORK 68X8 (3816)		C7901	1-128-991-21	ELECT CHIP 10UF	20% 50V
RB5809	1-245-943-21	RES, CHIP NETWORK 68X8 (3816)		C7902	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
RB5810	1-245-943-21	RES, CHIP NETWORK 68X8 (3816)		C7903	1-115-416-11	CERAMIC CHIP 0.001UF	5.00% 25V
RB5811	1-245-943-21	RES, CHIP NETWORK 68X8 (3816)		C7904	1-162-915-11	CERAMIC CHIP 10PF	0.50PF 50V
RB5812	1-245-943-21	RES, CHIP NETWORK 68X8 (3816)		C7905	1-162-915-11	CERAMIC CHIP 10PF	0.50PF 50V
RB5813	1-245-943-21	RES, CHIP NETWORK 68X8 (3816)		C7906	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
RB5814	1-245-943-21	RES, CHIP NETWORK 68X8 (3816)		C7907	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
RB5815	1-245-943-21	RES, CHIP NETWORK 68X8 (3816)		C7908	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
RB5816	1-234-795-21	RES, NETWORK 0X4 (2010)		C7909	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
RB5817	1-234-795-21	RES, NETWORK 0X4 (2010)		C7910	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
RB5826	1-234-799-21	RES, CHIP NETWORK 10KX8 (3816)		C7911	1-162-915-11	CERAMIC CHIP 10PF	0.50PF 50V
RB5827	1-234-799-21	RES, CHIP NETWORK 10KX8 (3816)		C7912	1-162-915-11	CERAMIC CHIP 10PF	0.50PF 50V
				C7913	1-128-994-21	ELECT CHIP 47UF	20% 10V
		<THERMISTOR>		C7914	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
				C7915	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
TH001	1-804-045-11	THERMISTOR		C7917	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
				C7919	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
		<VARISTOR>		C7920	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V
				C7921	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
VD4501	1-805-774-21	VARISTOR, CHIP		C7922	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
VD4502	1-805-774-21	VARISTOR, CHIP					
VD4504	1-805-774-21	VARISTOR, CHIP		C7923	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
VD4505	1-805-774-21	VARISTOR, CHIP		C7924	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
VD4506	1-803-974-21	VARISTOR, CHIP (1608)					
VD4507	1-803-974-21	VARISTOR, CHIP (1608)					
		<CRYSTAL>					
X4800	1-813-373-11	OSCILLATOR, CRYSTAL					
X5100	1-813-528-11	VIBRATOR, CRYSTAL 27MHZ		D7800	8-719-420-87	DIODE MA8130	
X5500	1-795-219-21	VIBRATOR, CRYSTAL		D7801	8-719-423-03	DIODE MA8100	
X5800	1-813-375-21	QURATZ CRYSTAL UNIT					

REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
L7804	1-412-029-11	INDUCTOR	10UH			<TUNER>					
L7901	1-412-029-11	INDUCTOR	10UH			TU7800	8-597-535-10	TUNER, FSS BTF-BG412Z			
L7902	1-412-029-11	INDUCTOR	10UH			TU7900	8-597-535-10	TUNER, FSS BTF-BG412Z			
L7903	1-412-029-11	INDUCTOR	10UH			*****					
L7904	1-412-029-11	INDUCTOR	10UH			A-1171-666-A H2 MOUNT					
L7905	1-412-029-11	INDUCTOR	10UH			*****					
<TRANSISTOR>						<CAPACITOR>					
Q7800	6-550-586-01	TRANSISTOR 2PA1576R-115				C3100	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
Q7801	8-729-120-28	TRANSISTOR 2SC1623-L5L6				C3101	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
Q7900	6-550-586-01	TRANSISTOR 2PA1576R-115				C3106	1-162-926-11	CERAMIC CHIP	82PF	5.00%	50V
Q7901	8-729-120-28	TRANSISTOR 2SC1623-L5L6				C3110	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
Q7902	8-729-600-22	TRANSISTOR 2SA1235-F				C3112	1-162-926-11	CERAMIC CHIP	82PF	5.00%	50V
Q7903	8-729-600-22	TRANSISTOR 2SA1235-F				C3113	1-125-891-11	CERAMIC CHIP	0.47UF	10.00%	10V
Q7904	8-729-600-22	TRANSISTOR 2SA1235-F				C3115	1-162-926-11	CERAMIC CHIP	82PF	5.00%	50V
Q7905	8-729-120-28	TRANSISTOR 2SC1623-L5L6				C3116	1-164-315-11	CERAMIC CHIP	470PF	5.00%	50V
<RESISTOR>						C3117	1-164-315-11	CERAMIC CHIP	470PF	5.00%	50V
R7800	1-216-809-11	METAL CHIP	100	5%	1/10W	<CONNECTOR>					
R7802	1-216-805-11	METAL CHIP	47	5%	1/10W	CN3100	* 1-818-714-21	HEADER ASSEMBLY 20P			
R7803	1-216-805-11	METAL CHIP	47	5%	1/10W	CN3101	1-695-915-11	TAB (CONTACT)			
R7805	1-216-864-11	SHORT CHIP	0			CN3102	1-819-337-11	HEADER ASSEMBLY FOR PWB 10P			
R7806	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	CN3103	1-784-646-11	TERMINAL, S			
R7807	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	<DIODE>					
R7808	1-216-809-11	METAL CHIP	100	5%	1/10W	D3100	8-719-977-28	DIODE DTZ10B			
R7809	1-216-817-11	METAL CHIP	470	5%	1/10W	D3101	8-719-977-28	DIODE DTZ10B			
R7810	1-216-805-11	METAL CHIP	47	5%	1/10W	D3102	6-500-254-01	DIODE MM3Z7V5T1			
R7812	1-216-809-11	METAL CHIP	100	5%	1/10W	D3103	8-719-977-28	DIODE DTZ10B			
R7813	1-216-833-11	METAL CHIP	10K	5%	1/10W	<FERRITE BEAD>					
R7814	1-216-833-11	METAL CHIP	10K	5%	1/10W	FB3100	1-400-333-21	FERRITE	0UH		
R7818	1-216-821-11	METAL CHIP	1K	5%	1/10W	FB3101	1-400-333-21	FERRITE	0UH		
R7819	1-216-821-11	METAL CHIP	1K	5%	1/10W	FB3102	1-481-051-21	FERRITE	0UH		
R7820	1-216-809-11	METAL CHIP	100	5%	1/10W	FB3103	1-481-051-21	FERRITE	0UH		
R7821	1-216-809-11	METAL CHIP	100	5%	1/10W	FB3104	1-481-051-21	FERRITE	0UH		
R7901	1-216-809-11	METAL CHIP	100	5%	1/10W	FB3105	1-216-864-11	SHORT CHIP	0		
R7902	1-216-805-11	METAL CHIP	47	5%	1/10W	FB3106	1-400-461-21	FERRITE	0UH		
R7905	1-216-864-11	SHORT CHIP	0			FB3107	1-216-864-11	SHORT CHIP	0		
R7906	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	FB3108	1-216-864-11	SHORT CHIP	0		
R7907	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	<JACK>					
R7908	1-216-809-11	METAL CHIP	100	5%	1/10W	J3100	1-819-355-11	PHONO JACK 3P			
R7909	1-216-817-11	METAL CHIP	470	5%	1/10W	J3101	1-819-356-11	PHONO JACK 3P			
R7913	1-216-833-11	METAL CHIP	10K	5%	1/10W	J3102	1-815-325-11	JACK			
R7914	1-216-833-11	METAL CHIP	10K	5%	1/10W	<COIL>					
R7917	1-216-809-11	METAL CHIP	100	5%	1/10W	L3101	1-400-669-21	INDUCTOR	0UH		
R7918	1-216-821-11	METAL CHIP	1K	5%	1/10W	L3102	1-400-669-21	INDUCTOR	0UH		
R7919	1-216-821-11	METAL CHIP	1K	5%	1/10W	L3103	1-400-669-21	INDUCTOR	0UH		
R7920	1-216-809-11	METAL CHIP	100	5%	1/10W	<RESISTOR>					
R7921	1-216-809-11	METAL CHIP	100	5%	1/10W	R3102	1-216-864-11	SHORT CHIP	0		
R7922	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R3103	1-216-813-11	METAL CHIP	220	5%	1/10W
R7923	1-216-864-11	SHORT CHIP	0			R3105	1-216-813-11	METAL CHIP	220	5%	1/10W
R7924	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R3106	1-216-851-11	METAL CHIP	330K	5%	1/10W
R7925	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R3107	1-216-851-11	METAL CHIP	330K	5%	1/10W
R7929	1-216-857-11	METAL CHIP	1M	5%	1/10W						
R7930	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R7931	1-216-864-11	SHORT CHIP	0								
R7933	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R7934	1-216-837-11	METAL CHIP	22K	5%	1/10W						
R7935	1-216-837-11	METAL CHIP	22K	5%	1/10W						
R7936	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R7937	1-216-864-11	SHORT CHIP	0								
R7940	1-218-850-11	METAL CHIP	1.3K	0.5%	1/10W						

The components identified △ marked are critical for safety.
Replace only with the part number specified.

H2 D1

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R3108	1-216-813-11	METAL CHIP 220	5% 1/10W	C6710	1-112-725-11	CERAMIC 68PF	5% 3KV
R3109	1-216-813-11	METAL CHIP 220	5% 1/10W	C6711	1-112-725-11	CERAMIC 68PF	5% 3KV
R3110	1-216-813-11	METAL CHIP 220	5% 1/10W	C6712	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
R3111	1-216-813-11	METAL CHIP 220	5% 1/10W	C6714	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R3113	1-216-813-11	METAL CHIP 220	5% 1/10W	C6715	1-112-740-91	CERAMIC 10PF	5% 3KV
R3114	1-216-813-11	METAL CHIP 220	5% 1/10W	C6716	1-112-740-91	CERAMIC 10PF	5% 3KV
R3115	1-216-813-11	METAL CHIP 220	5% 1/10W	C6717	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
R3118	1-216-813-11	METAL CHIP 220	5% 1/10W	C6718	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R3119	1-216-813-11	METAL CHIP 220	5% 1/10W	C6719	1-112-740-91	CERAMIC 10PF	5% 3KV
R3120	1-216-813-11	METAL CHIP 220	5% 1/10W	C6720	1-112-740-91	CERAMIC 10PF	5% 3KV
R3122	1-216-801-11	METAL CHIP 22	5% 1/10W	C6721	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
R3123	1-216-809-11	METAL CHIP 100	5% 1/10W	C6722	1-162-960-11	CERAMIC CHIP 220PF	10.00% 50V
R3124	1-216-864-11	SHORT CHIP 0		C6723	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R3125	1-216-864-11	SHORT CHIP 0		C6731	1-107-888-11	ELECT 47UF	20% 25V
R3126	1-216-864-11	SHORT CHIP 0		C6732	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
R3127	1-216-809-11	METAL CHIP 100	5% 1/10W	C6733	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
R3128	1-216-813-11	METAL CHIP 220	5% 1/10W	C6734	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
R3129	1-216-813-11	METAL CHIP 220	5% 1/10W	C6735	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
R3130	1-216-813-11	METAL CHIP 220	5% 1/10W	C6736	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
R3132	1-216-801-11	METAL CHIP 22	5% 1/10W	C6737	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
R3133	1-218-665-11	METAL CHIP 75	0.5% 1/10W	C6738	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
R3135	1-216-801-11	METAL CHIP 22	5% 1/10W	C6739	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
R3136	1-216-864-11	SHORT CHIP 0		C6740	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
R3138	1-216-864-11	SHORT CHIP 0		C6742	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R3140	1-216-864-11	SHORT CHIP 0		C6750	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R3142	1-216-864-11	SHORT CHIP 0		C6751	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
R3143	1-216-864-11	SHORT CHIP 0		C6752	1-112-029-91	CERAMIC CHIP 0.047UF	5% 50V
<VARISTOR>				C6753	1-127-803-91	CERAMIC CHIP 270PF	1% 50V
VD3100	1-803-974-21	VARISTOR, CHIP (1608)		C6754	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
VD3101	1-803-974-21	VARISTOR, CHIP (1608)		C6755	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
VD3102	1-803-974-21	VARISTOR, CHIP (1608)		C6756	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
VD3103	1-803-974-21	VARISTOR, CHIP (1608)		C6757	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
VD3104	1-803-974-21	VARISTOR, CHIP (1608)		C6758	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
VD3105	1-803-974-21	VARISTOR, CHIP (1608)		C6759	1-107-888-11	ELECT 47UF	20% 25V
VD3106	1-803-974-21	VARISTOR, CHIP (1608)		C6760	1-137-980-91	CERAMIC CHIP 0.47UF	10% 50V
VD3107	1-803-974-21	VARISTOR, CHIP (1608)		C6761	1-104-329-11	CERAMIC CHIP 0.1UF	10.00% 50V
VD3108	1-803-974-21	VARISTOR, CHIP (1608)		C6762	1-137-980-91	CERAMIC CHIP 0.47UF	10% 50V
VD3109	1-803-974-21	VARISTOR, CHIP (1608)		C6763	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
VD3110	1-803-974-21	VARISTOR, CHIP (1608)		C6764	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
*****				C6765	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
A-1197-882-B D1 COMPL (KLV-40X200A/40X250A)				C6766	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
*****				C6768	1-107-875-91	ELECT 220UF	20% 10V
2-580-592-01 SCREW, +PSW M3X8				C6769	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
<CAPACITOR>				C6770	1-107-902-11	ELECT 1UF	20% 50V
C6534	1-162-960-11	CERAMIC CHIP 220PF	10.00% 50V	C6771	1-107-902-11	ELECT 1UF	20% 50V
C6600	1-165-794-21	MYLAR 1UF	10% 450V	C6772	1-107-888-11	ELECT 47UF	20% 25V
C6601	1-165-794-21	MYLAR 1UF	10% 450V	C6773	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6606	1-165-794-21	MYLAR 1UF	10% 450V	C6774	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6658	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C6779	1-163-809-11	CERAMIC CHIP 0.047UF	10.00% 25V
C6659	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	<CONNECTOR>			
C6701	1-104-512-11	CERAMIC 22PF	5% 6.3KV	CN6600 △	* 1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P	
C6702	1-104-512-11	CERAMIC 22PF	5% 6.3KV	CN6700	* 1-820-458-11	HEADER ASSEMBLY FOR PWB 2P	
C6703	1-114-173-11	CERAMIC 12PF	5% 6.3KV	CN6701	* 1-820-458-11	HEADER ASSEMBLY FOR PWB 2P	
C6704	1-114-173-11	CERAMIC 12PF	5% 6.3KV	CN6751	* 1-785-703-11	PIN, CONNECTOR (PC BOARD) 6P	
C6705	1-112-725-11	CERAMIC 68PF	5% 3KV	CN6752	* 1-785-702-11	PIN, CONNECTOR (PC BOARD) 5P	
C6706	1-112-725-11	CERAMIC 68PF	5% 3KV	<DIODE>			
C6707	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V	D6600	6-501-497-01	DIODE S3L60F	
C6709	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D6601	6-501-497-01	DIODE S3L60F	
				D6602	6-501-497-01	DIODE S3L60F	
				D6603	6-501-497-01	DIODE S3L60F	
				D6604	6-501-497-01	DIODE S3L60F	

The components identified Δ marked are critical for safety.
Replace only with the part number specified.

D1

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
D6605	6-501-497-01	DIODE S3L60F		JR6667	1-216-296-11	SHORT CHIP	0
D6606	8-719-041-97	DIODE MA113-(TX)		JR6670	1-216-296-11	SHORT CHIP	0
D6607	8-719-041-97	DIODE MA113-(TX)		JR6671	1-216-296-11	SHORT CHIP	0
D6608	8-719-041-97	DIODE MA113-(TX)					
D6609	8-719-041-97	DIODE MA113-(TX)				<COIL>	
D6614	6-501-497-01	DIODE S3L60F		L6600	Δ 1-406-977-21	INDUCTOR	100UH
D6615	6-501-497-01	DIODE S3L60F					
D6616	8-719-083-57	DIODE UDZSTE-173.6B				<TRANSISTOR>	
D6617	8-719-083-57	DIODE UDZSTE-173.6B		Q6600	6-551-403-01	TRANSISTOR 2SK3797 (LBS1SONY)	
D6618	8-719-083-57	DIODE UDZSTE-173.6B		Q6601	6-551-403-01	TRANSISTOR 2SK3797 (LBS1SONY)	
D6619	8-719-083-57	DIODE UDZSTE-173.6B		Q6602	6-551-403-01	TRANSISTOR 2SK3797 (LBS1SONY)	
D6701	8-719-404-50	DIODE MA111-TX		Q6603	6-551-403-01	TRANSISTOR 2SK3797 (LBS1SONY)	
D6702	8-719-404-50	DIODE MA111-TX		Q6604	8-729-804-41	TRANSISTOR 2SB1122-S	
D6703	8-719-404-50	DIODE MA111-TX					
D6704	8-719-404-50	DIODE MA111-TX		Q6605	8-729-804-41	TRANSISTOR 2SB1122-S	
D6705	8-719-404-50	DIODE MA111-TX		Q6606	8-729-804-41	TRANSISTOR 2SB1122-S	
D6706	8-719-404-50	DIODE MA111-TX		Q6607	8-729-804-41	TRANSISTOR 2SB1122-S	
D6707	8-719-404-50	DIODE MA111-TX		Q6751	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D6708	8-719-404-50	DIODE MA111-TX		Q6752	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D6709	8-719-062-51	DIODE 1PS226-115					
D6710	8-719-404-50	DIODE MA111-TX		Q6753	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6711	8-719-062-51	DIODE 1PS226-115		Q6754	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6712	8-719-404-50	DIODE MA111-TX		Q6755	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D6713	8-719-062-51	DIODE 1PS226-115		Q6756	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6714	8-719-404-50	DIODE MA111-TX		Q6757	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6715	8-719-062-51	DIODE 1PS226-115		Q6758	8-729-019-94	TRANSISTOR 2SK1589-L	
D6716	8-719-404-50	DIODE MA111-TX		Q6759	8-729-820-90	TRANSISTOR 2SD1621-ST	
D6731	8-719-404-50	DIODE MA111-TX		Q6760	8-729-804-41	TRANSISTOR 2SB1122-S	
D6732	8-719-404-50	DIODE MA111-TX		Q6761	8-729-019-94	TRANSISTOR 2SK1589-L	
D6733	8-719-404-50	DIODE MA111-TX		Q6762	8-729-820-90	TRANSISTOR 2SD1621-ST	
D6734	8-719-404-50	DIODE MA111-TX		Q6763	8-729-804-41	TRANSISTOR 2SB1122-S	
D6752	8-719-404-50	DIODE MA111-TX					
D6753	8-719-404-50	DIODE MA111-TX				<RESISTOR>	
D6754	8-719-404-50	DIODE MA111-TX		R6600	1-202-933-61	FUSIBLE	0.1 10% 1/2W
		<FERRITE BEAD>		R6601	1-249-403-11	CARBON	68 5% 1/4W
FB6600	1-410-396-41	FERRITE	0.45UH	R6602	1-216-793-11	METAL CHIP	4.7 5% 1/10W
FB6601	1-410-396-41	FERRITE	0.45UH	R6603	1-216-049-11	RES-CHIP	1K 5% 1/10W
FB6604	1-410-396-41	FERRITE	0.45UH	R6604	1-216-833-11	METAL CHIP	10K 5% 1/10W
FB6605	1-410-396-41	FERRITE	0.45UH				
		<IC>		R6605	1-249-403-11	CARBON	68 5% 1/4W
IC6730	* 8-759-575-27	IC BA10339F-E2		R6606	1-216-793-11	METAL CHIP	4.7 5% 1/10W
IC6750	6-709-792-01	IC BD9890F-E2		R6607	1-216-049-11	RES-CHIP	1K 5% 1/10W
		<JUMPER READ>		R6608	1-216-833-11	METAL CHIP	10K 5% 1/10W
				R6609	1-249-403-11	CARBON	68 5% 1/4W
JR6600	1-216-296-11	SHORT CHIP	0	R6610	1-216-793-11	METAL CHIP	4.7 5% 1/10W
JR6601	1-216-296-11	SHORT CHIP	0	R6611	1-216-049-11	RES-CHIP	1K 5% 1/10W
JR6613	1-216-864-11	SHORT CHIP	0	R6612	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR6616	1-216-864-11	SHORT CHIP	0	R6613	1-216-049-11	RES-CHIP	1K 5% 1/10W
JR6622	1-216-296-11	SHORT CHIP	0	R6614	1-249-403-11	CARBON	68 5% 1/4W
JR6623	1-216-296-11	SHORT CHIP	0				
JR6624	1-216-296-11	SHORT CHIP	0	R6615	1-216-793-11	METAL CHIP	4.7 5% 1/10W
JR6628	1-216-296-11	SHORT CHIP	0	R6616	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR6634	1-216-296-11	SHORT CHIP	0	R6619	1-216-857-11	METAL CHIP	1M 5% 1/10W
JR6642	1-216-295-91	SHORT CHIP	0	R6620	1-216-857-11	METAL CHIP	1M 5% 1/10W
JR6644	1-216-296-11	SHORT CHIP	0	R6651	1-218-827-11	METAL CHIP	150 0.5% 1/10W
JR6648	1-216-296-11	SHORT CHIP	0				
JR6653	1-216-864-11	SHORT CHIP	0	R6652	1-218-827-11	METAL CHIP	150 0.5% 1/10W
JR6654	1-216-296-11	SHORT CHIP	0	R6653	1-218-827-11	METAL CHIP	150 0.5% 1/10W
JR6659	1-216-296-11	SHORT CHIP	0	R6654	1-218-827-11	METAL CHIP	150 0.5% 1/10W
JR6666	1-216-296-11	SHORT CHIP	0	R6655	1-218-827-11	METAL CHIP	150 0.5% 1/10W
				R6656	1-218-827-11	METAL CHIP	150 0.5% 1/10W
				R6657	1-218-827-11	METAL CHIP	150 0.5% 1/10W
				R6658	1-218-829-11	METAL CHIP	180 0.5% 1/10W
				R6659	1-218-829-11	METAL CHIP	180 0.5% 1/10W
				R6660	1-218-829-11	METAL CHIP	180 0.5% 1/10W
				R6661	1-218-829-11	METAL CHIP	180 0.5% 1/10W

The components identified Δ marked are critical for safety.
Replace only with the part number specified.

D1 **H1**

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R6662	1-218-829-11	METAL CHIP 180	0.5% 1/10W	R6782	1-216-845-11	METAL CHIP 100K	5% 1/10W
R6663	1-218-829-11	METAL CHIP 180	0.5% 1/10W	R6783	1-216-809-11	METAL CHIP 100	5% 1/10W
R6664	1-218-829-11	METAL CHIP 180	0.5% 1/10W	R6784	1-216-845-11	METAL CHIP 100K	5% 1/10W
R6665	1-218-829-11	METAL CHIP 180	0.5% 1/10W	R6785	1-216-845-11	METAL CHIP 100K	5% 1/10W
R6666	1-218-829-11	METAL CHIP 180	0.5% 1/10W	R6786	1-216-809-11	METAL CHIP 100	5% 1/10W
R6667	1-218-829-11	METAL CHIP 180	0.5% 1/10W	R6788	1-216-793-11	METAL CHIP 4.7	5% 1/10W
R6668	1-218-829-11	METAL CHIP 180	0.5% 1/10W	R6789	1-249-417-11	CARBON 1K	5% 1/4W
R6669	1-218-829-11	METAL CHIP 180	0.5% 1/10W	R6790	1-216-809-11	METAL CHIP 100	5% 1/10W
R6670	1-218-829-11	METAL CHIP 180	0.5% 1/10W	R6791	1-216-801-11	METAL CHIP 22	5% 1/10W
R6701	1-216-821-11	METAL CHIP 1K	5% 1/10W	R6792	1-249-417-11	CARBON 1K	5% 1/4W
R6702	1-216-843-11	METAL CHIP 68K	5% 1/10W	R6793	1-216-809-11	METAL CHIP 100	5% 1/10W
R6703	1-216-845-11	METAL CHIP 100K	5% 1/10W	R6794	1-216-801-11	METAL CHIP 22	5% 1/10W
R6704	1-216-821-11	METAL CHIP 1K	5% 1/10W	R6795	1-216-833-11	METAL CHIP 10K	5% 1/10W
R6705	1-216-843-11	METAL CHIP 68K	5% 1/10W	R6796	1-216-833-11	METAL CHIP 10K	5% 1/10W
R6706	1-216-845-11	METAL CHIP 100K	5% 1/10W	R6797	1-218-913-91	METAL CHIP 560K	0.5% 1/10W
R6707	1-216-821-11	METAL CHIP 1K	5% 1/10W	R6798	1-216-842-11	METAL CHIP 56K	5% 1/10W
R6708	1-216-843-11	METAL CHIP 68K	5% 1/10W	<TRANSFORMER>			
R6709	1-216-845-11	METAL CHIP 100K	5% 1/10W	T6600	Δ 8-597-051-00	HV ISOLATING TRANS HIT-1001//M	
R6710	1-216-821-11	METAL CHIP 1K	5% 1/10W	T6601	Δ 8-597-051-00	HV ISOLATING TRANS HIT-1001//M	
R6711	1-216-843-11	METAL CHIP 68K	5% 1/10W	T6650	Δ 1-445-039-11	TRANSFORMER, DRIVE	
R6712	1-216-845-11	METAL CHIP 100K	5% 1/10W	<TERMINAL>			
R6714	1-216-793-11	METAL CHIP 4.7	5% 1/10W	TK6700	1-537-770-21	TERMINAL BOARD, GROUND	
R6731	1-216-857-11	METAL CHIP 1M	5% 1/10W	TK6701	1-537-770-21	TERMINAL BOARD, GROUND	
R6732	1-216-857-11	METAL CHIP 1M	5% 1/10W	*****			
R6733	1-216-837-11	METAL CHIP 22K	5% 1/10W	A-1171-665-A H1 MOUNT			
R6734	1-216-837-11	METAL CHIP 22K	5% 1/10W	*****			
R6735	1-216-837-11	METAL CHIP 22K	5% 1/10W	<CAPACITOR>			
R6736	1-216-837-11	METAL CHIP 22K	5% 1/10W	C3000	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
R6737	1-216-857-11	METAL CHIP 1M	5% 1/10W	C3001	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
R6738	1-216-857-11	METAL CHIP 1M	5% 1/10W	<CONNECTOR>			
R6739	1-218-905-11	METAL CHIP 270K	0.5% 1/10W	CN3000	1-819-472-11	HEADER ASSEMBLY FOR PWB 2P	
R6740	1-249-417-11	CARBON 1K	5% 1/4W	CN3001	1-819-476-11	HEADER ASSEMBLY FOR PWB 8P	
R6741	1-249-417-11	CARBON 1K	5% 1/4W	<DIODE>			
R6743	1-216-842-11	METAL CHIP 56K	5% 1/10W	D3001	8-719-914-44	DIODE DAP202K	
R6749	1-216-821-11	METAL CHIP 1K	5% 1/10W	<RESISTOR>			
R6750	1-216-833-11	METAL CHIP 10K	5% 1/10W	R3000	1-218-670-11	METAL CHIP 120	0.5% 1/10W
R6751	1-216-833-11	METAL CHIP 10K	5% 1/10W	R3001	1-218-672-11	METAL CHIP 150	0.5% 1/10W
R6752	1-216-821-11	METAL CHIP 1K	5% 1/10W	R3002	1-218-678-11	METAL CHIP 270	0.5% 1/10W
R6753	1-216-837-11	METAL CHIP 22K	5% 1/10W	R3003	1-218-686-11	METAL CHIP 560	0.5% 1/10W
R6754	1-218-867-11	METAL CHIP 6.8K	0.5% 1/10W	R3004	1-218-696-11	METAL CHIP 1.5K	0.5% 1/10W
R6755	1-218-915-11	METAL CHIP 680K	0.5% 1/10W	<SWITCH>			
R6756	1-218-899-11	METAL CHIP 150K	0.5% 1/16W	S3000	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)	
R6757	1-218-871-11	METAL CHIP 10K	0.5% 1/10W	S3001	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)	
R6758	1-218-895-11	METAL CHIP 100K	0.5% 1/10W	S3002	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)	
R6759	1-218-895-11	METAL CHIP 100K	0.5% 1/10W	S3003	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)	
R6760	1-218-899-11	METAL CHIP 150K	0.5% 1/16W	S3004	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)	
R6761	1-218-893-11	METAL CHIP 82K	0.5% 1/10W	S3005	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)	
R6762	1-218-883-11	METAL CHIP 33K	0.5% 1/10W	S3006	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)	
R6763	1-218-907-11	METAL CHIP 330K	0.5% 1/10W				
R6766	1-216-845-11	METAL CHIP 100K	5% 1/10W				
R6767	1-216-853-11	METAL CHIP 470K	5% 1/10W				
R6768	1-216-839-11	METAL CHIP 33K	5% 1/10W				
R6769	1-216-837-11	METAL CHIP 22K	5% 1/10W				
R6770	1-216-833-11	METAL CHIP 10K	5% 1/10W				
R6771	1-216-833-11	METAL CHIP 10K	5% 1/10W				
R6772	1-216-842-11	METAL CHIP 56K	5% 1/10W				
R6773	1-216-833-11	METAL CHIP 10K	5% 1/10W				
R6774	1-216-833-11	METAL CHIP 10K	5% 1/10W				
R6775	1-216-833-11	METAL CHIP 10K	5% 1/10W				
R6776	1-216-837-11	METAL CHIP 22K	5% 1/10W				
R6777	1-216-833-11	METAL CHIP 10K	5% 1/10W				
R6778	1-216-833-11	METAL CHIP 10K	5% 1/10W				
R6779	1-216-833-11	METAL CHIP 10K	5% 1/10W				
R6780	1-216-817-11	METAL CHIP 470	5% 1/10W				
R6781	1-216-845-11	METAL CHIP 100K	5% 1/10W				

The components identified Δ marked are critical for safety.
Replace only with the part number specified.

H1 **G1**

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
<VARISTOR>				C6407	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
VD3000	1-803-974-21	VARISTOR, CHIP (1608)		C6408	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
VD3001	1-803-974-21	VARISTOR, CHIP (1608)		C6409	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
*****				C6412	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
A-1217-644-A G1 COMPL				C6451	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
*****				C6452	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
2-580-594-01 SCREW, +PSW M3X12				C6501	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V
<CAPACITOR>				C6502	1-100-613-81	CERAMIC 470PF	5% 1KV
C6000	1-161-964-91	CERAMIC 0.0047UF	250V	C6503	1-100-613-81	CERAMIC 470PF	5% 1KV
C6001	Δ 1-119-892-51	CERAMIC 470PF	10.00% 250V	C6504	1-100-613-81	CERAMIC 470PF	5% 1KV
C6003	1-161-964-91	CERAMIC 0.0047UF	250V	C6505	1-100-613-81	CERAMIC 470PF	5% 1KV
C6004	Δ 1-165-529-11	MYLAR 0.22UF	10.00% 275V	C6509	Δ 1-119-891-51	CERAMIC 220PF	10.00% 250V
C6005	1-119-892-51	CERAMIC 470PF	10.00% 250V	C6516	1-107-906-11	ELECT 10UF	20% 50V
C6006	Δ 1-135-361-11	ELECT(BLOCK) 180UF	20% 450V	C6517	Δ 1-112-188-11	MYLAR 1.5UF	5% 450V
C6007	Δ 1-165-529-11	MYLAR 0.22UF	10.00% 275V	C6518	1-112-744-61	MYLAR 1UF	10% 450V
C6008	1-135-361-11	ELECT(BLOCK) 180UF	20% 450V	C6519	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
C6010	1-113-889-11	CERAMIC 0.001UF	20.00% 250V	C6520	Δ 1-112-188-11	MYLAR 1.5UF	5% 450V
C6011	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V	C6521	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6012	1-113-889-11	CERAMIC 0.001UF	20.00% 250V	C6522	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C6015	Δ 1-119-890-51	CERAMIC 100PF	10.00% 250V	C6524	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
C6016	Δ 1-119-890-51	CERAMIC 100PF	10.00% 250V	C6525	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
C6100	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C6526	1-107-906-11	ELECT 10UF	20% 50V
C6101	1-107-905-11	ELECT 4.7UF	20% 50V	C6530	1-162-959-11	CERAMIC CHIP 330PF	5.00% 50V
C6102	1-107-910-11	ELECT CHIP 100UF	20% 50V	C6531	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V
C6103	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C6532	1-107-902-11	ELECT 1UF	20% 50V
C6104	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	<CONNECTOR>			
C6105	1-107-906-11	ELECT 10UF	20% 50V	CN6001	Δ * 1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P	
C6108	1-115-340-11	CERAMIC CHIP 0.22UF	10.00% 25V	CN6011	1-537-770-21	TERMINAL BOARD, GROUND	
C6109	1-107-888-11	ELECT 47UF	20% 25V	CN6012	1-537-770-21	TERMINAL BOARD, GROUND	
C6111	1-100-613-81	CERAMIC 470PF	5% 1KV	CN6201	* 1-793-235-11	PIN, CONNECTOR (PC BOARD) 13P	
C6112	1-100-919-11	FILM 0.027UF	3% 1KV	CN6202	* 1-785-708-11	PIN, CONNECTOR (PC BOARD) 12P	
C6116	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V	CN6203	* 1-785-703-11	PIN, CONNECTOR (PC BOARD) 6P	
C6200	1-104-760-11	CERAMIC CHIP 0.047UF	10.00% 50V	CN6204	* 1-779-944-11	PIN, CONNECTOR (PC BOARD) 4P	
C6253	1-107-914-11	ELECT CHIP 1000UF	20% 50V	CN6211	1-537-770-21	TERMINAL BOARD, GROUND	
C6255	1-128-954-11	ELECT 1000UF	20% 25V	CN6501	Δ * 1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P	
C6257	1-165-724-31	ELECT 3900UF	20% 10V	CN6502	Δ * 1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P	
C6258	1-135-362-31	ELECT 1500UF	20% 16V	CN6503	1-537-770-21	TERMINAL BOARD, GROUND	
C6260	1-135-362-31	ELECT 1500UF	20% 16V	<DIODE>			
C6285	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6000	8-719-054-89	DIODE D15XB60	
C6286	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	D6002	8-719-404-50	DIODE MA111-TX	
C6287	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6003	8-719-404-50	DIODE MA111-TX	
C6288	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6101	8-719-017-89	DIODE MA8150-TX	
C6289	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V	D6102	6-500-137-01	DIODE BAT54HT1	
C6291	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D6103	8-719-979-64	DIODE UF4005/23	
C6305	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D6104	6-501-043-01	DIODE UMZ16NT106	
C6306	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	D6105	6-501-043-01	DIODE UMZ16NT106	
C6307	1-107-902-11	ELECT 1UF	20% 50V	D6106	8-719-081-67	DIODE M1FM3	
C6308	1-107-903-11	ELECT 2.2UF	20% 50V	D6107	8-719-081-67	DIODE M1FM3	
C6309	1-107-910-11	ELECT 100UF	20% 50V	D6108	8-719-041-97	DIODE MA113-(TX)	
C6310	1-100-139-41	FILM 0.001UF	5% 630V	D6253	8-719-027-22	DIODE D3S6M-F	
C6314	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D6256	6-501-515-01	DIODE D10SC6M-F5	
C6315	1-128-949-31	ELECT 470UF	20% 16V	D6258	6-501-515-01	DIODE D10SC6M-F5	
C6316	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D6263	8-719-060-88	DIODE D4SBS6	
C6401	1-104-652-11	ELECT 470UF	20% 10V	D6302	6-500-567-31	DIODE 10ERB20-TB3	
C6402	1-127-573-11	CERAMIC CHIP 1UF	10% 16V	D6303	6-500-567-31	DIODE 10ERB20-TB3	
C6404	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D6304	6-500-849-01	DIODE ERA22-08KFLB	
C6405	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	D6305	6-500-567-31	DIODE 10ERB20-TB3	
C6406	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D6306	6-501-526-01	DIODE D1NS6-TR2	
				D6401	8-719-404-50	DIODE MA111-TX	
				D6402	8-719-404-50	DIODE MA111-TX	
				D6404	8-719-421-82	DIODE MA8043-M	

The components identified △ marked are critical for safety.
Replace only with the part number specified.

G1

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
D6406	8-719-404-50	DIODE MA111-TX		<PHOTO COUPLER>			
D6407	8-719-423-23	DIODE MA8110-M		PH6000	△6-600-187-01	PHOTO COUPLER PC123Y22JOOF	
D6408	8-719-404-50	DIODE MA111-TX		PH6100	△6-600-187-01	PHOTO COUPLER PC123Y22JOOF	
D6409	8-719-404-50	DIODE MA111-TX		PH6301	△6-600-187-01	PHOTO COUPLER PC123Y22JOOF	
D6452	8-719-404-50	DIODE MA111-TX		PH6400	△6-600-187-01	PHOTO COUPLER PC123Y22JOOF	
D6455	8-719-404-50	DIODE MA111-TX		PH6402	△6-600-187-01	PHOTO COUPLER PC123Y22JOOF	
D6456	8-719-404-50	DIODE MA111-TX		<TRANSISTOR>			
D6506	8-719-054-59	DIODE FSF05A60		Q6100	6-551-386-01	TRANSISTOR 2SK3563 (LBS1SONY)	
D6509	6-500-108-01	DIODE EP05FA20		Q6101	6-551-386-01	TRANSISTOR 2SK3563 (LBS1SONY)	
D6510	6-500-137-01	DIODE BAT54HT1		Q6400	8-729-804-41	TRANSISTOR 2SB1122-S	
D6512	8-719-404-50	DIODE MA111-TX		Q6401	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6514	8-719-404-50	DIODE MA111-TX		Q6402	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6551	8-719-404-50	DIODE MA111-TX		Q6403	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D6552	8-719-404-50	DIODE MA111-TX		Q6404	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
<FUSE>				Q6405	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
F6000	△ 1-576-233-51	FUSE	6.3A 250V	Q6406	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
<FERRITE BEAD>				Q6407	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
FB6100	1-410-397-21	FERRITE	1.1UH	Q6454	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
FB6101	1-410-397-21	FERRITE	1.1UH	Q6455	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
<FUSE HOLDER>				Q6500	6-551-336-01	TRANSISTOR 2SK3934 (LBS1SONY)	
FH6000	1-533-223-11	FUSE HOLDER	0A 0V	Q6502	8-729-804-41	TRANSISTOR 2SB1122-S	
FH6001	1-533-223-11	FUSE HOLDER	0A 0V	Q6503	6-551-336-01	TRANSISTOR 2SK3934 (LBS1SONY)	
<IC>				Q6505	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
IC6100	6-707-749-01	IC CXD9841P		Q6506	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
IC6200	6-709-368-01	IC MM1431ATT (CN)		Q6507	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
IC6301	6-708-801-01	IC MIP2H2		<RESISTOR>			
IC6302	6-709-368-01	IC MM1431ATT (CN)		R6002	1-240-251-11	METAL	6.8 5% 10W
IC6401	6-709-368-01	IC MM1431ATT (CN)		R6003	1-247-762-11	CARBON	6.8K 5% 1/2W
IC6402	6-709-368-01	IC MM1431ATT (CN)		R6015	1-216-857-11	METAL CHIP	1M 5% 1/10W
IC6502	6-709-791-01	IC E-L6562N		R6016	1-243-832-71	METAL OXIDE	15 5% 1W
<JUMPER READ>				R6053	1-216-296-11	SHORT CHIP	0
JR6001	1-216-296-11	SHORT CHIP	0	R6101	1-249-385-11	CARBON	2.2 5% 1/4W
JR6002	1-216-296-11	SHORT CHIP	0	R6102	1-202-933-61	FUSIBLE	0.1 10% 1/2W
JR6003	1-216-296-11	SHORT CHIP	0	R6103	1-218-823-11	METAL CHIP	100 0.5% 1/10W
JR6004	1-216-296-11	SHORT CHIP	0	R6104	1-218-885-11	METAL CHIP	39K 0.5% 1/10W
JR6005	1-216-864-11	SHORT CHIP	0	R6105	1-208-854-11	METAL CHIP	1M 0.5% 1/10W
JR6007	1-216-296-11	SHORT CHIP	0	R6106	1-208-854-11	METAL CHIP	1M 0.5% 1/10W
JR6008	1-216-295-91	SHORT CHIP	0	R6107	1-208-854-11	METAL CHIP	1M 0.5% 1/10W
JR6009	1-216-295-91	SHORT CHIP	0	R6108	1-208-854-11	METAL CHIP	1M 0.5% 1/10W
JR6010	1-216-295-91	SHORT CHIP	0	R6109	1-218-760-11	METAL CHIP	220K 0.5% 1/10W
JR6011	1-216-864-11	SHORT CHIP	0	R6110	1-218-877-11	METAL CHIP	18K 0.5% 1/10W
<COIL>				R6111	1-218-877-11	METAL CHIP	18K 0.5% 1/10W
L6000	△ 1-456-856-11	LINE FILTER COIL		R6114	1-211-981-11	METAL CHIP	33 0.5% 1/10W
L6001	△ 1-457-317-11	LINE FILTER COIL		R6115	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
L6250	1-412-525-31	INDUCTOR	10UH	R6116	1-216-009-91	RES-CHIP	22 5% 1/10W
L6251	1-406-657-11	INDUCTOR	4.7UH	R6117	1-216-009-91	RES-CHIP	22 5% 1/10W
L6252	1-406-657-11	INDUCTOR	4.7UH	R6118	1-216-833-11	METAL CHIP	10K 5% 1/10W
L6300	1-414-934-21	INDUCTOR	10UH	R6119	1-216-833-11	METAL CHIP	10K 5% 1/10W
L6500	△ 1-457-277-11	INDUCTOR	260UH	R6122	1-216-361-00	METAL OXIDE	0.22 5% 2W
L6502	△ 1-457-275-11	INDUCTOR	300UH	R6123	1-218-847-11	METAL CHIP	1K 0.5% 1/10W
				R6127	1-216-857-11	METAL CHIP	1M 5% 1/10W
				R6200	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R6201	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R6203	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R6204	1-216-864-11	SHORT CHIP	0
				R6205	1-218-875-11	METAL CHIP	15K 0.5% 1/10W
				R6207	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
				R6256	1-216-793-11	METAL CHIP	4.7 5% 1/10W
				R6264	1-216-841-11	METAL CHIP	47K 5% 1/10W
				R6300	1-212-958-00	FUSIBLE	10 5% 1/2W
				R6301	1-243-725-71	METAL OXIDE	100K 5% 1W

G1 D2 D3

KLV-40/46X200A, 40/46X250A (GA) 4-39

D2 **D3**

KLV-40/46X200A, 40/46X250A (GA) 4-40

The components identified △ marked are critical for safety.
Replace only with the part number specified.

D2 **D3**

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
CN6753	* 1-793-236-11	PIN, CONNECTOR (PC BOARD) 14P		D6756	8-719-404-50	DIODE MA111-TX	
CN6754	* 1-820-458-11	HEADER ASSEMBLY FOR PWB 2P		D6800	6-501-497-01	DIODE S3L60F	
CN6800△	* 1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P		D6801	6-501-497-01	DIODE S3L60F	
CN6900	* 1-820-458-11	HEADER ASSEMBLY FOR PWB 2P		D6802	8-719-041-97	DIODE MA113-(TX)	
CN6901	* 1-793-236-11	PIN, CONNECTOR (PC BOARD) 14P		D6803	8-719-041-97	DIODE MA113-(TX)	
CN6902	* 1-820-458-11	HEADER ASSEMBLY FOR PWB 2P		D6804	6-501-497-01	DIODE S3L60F	
		<DIODE>		D6805	6-501-497-01	DIODE S3L60F	
D6200	8-719-404-50	DIODE MA111-TX		D6806	8-719-041-97	DIODE MA113-(TX)	
D6201	8-719-404-50	DIODE MA111-TX		D6807	8-719-041-97	DIODE MA113-(TX)	
D6202	8-719-404-50	DIODE MA111-TX		D6812	6-501-497-01	DIODE S3L60F	
D6203	8-719-404-50	DIODE MA111-TX		D6813	6-501-497-01	DIODE S3L60F	
D6204	8-719-404-50	DIODE MA111-TX		D6814	6-501-497-01	DIODE S3L60F	
D6205	8-719-404-50	DIODE MA111-TX		D6815	6-501-497-01	DIODE S3L60F	
D6206	8-719-404-50	DIODE MA111-TX		D6816	6-501-497-01	DIODE S3L60F	
D6207	8-719-404-50	DIODE MA111-TX		D6817	6-501-497-01	DIODE S3L60F	
D6208	8-719-062-51	DIODE 1PS226-115		D6818	6-501-497-01	DIODE S3L60F	
D6209	8-719-062-51	DIODE 1PS226-115		D6819	6-501-497-01	DIODE S3L60F	
D6210	8-719-062-51	DIODE 1PS226-115		D6821	8-719-083-57	DIODE UDZSTE-173.6B	
D6211	8-719-062-51	DIODE 1PS226-115		D6822	8-719-083-57	DIODE UDZSTE-173.6B	
D6212	8-719-404-50	DIODE MA111-TX		D6823	8-719-083-57	DIODE UDZSTE-173.6B	
D6213	8-719-404-50	DIODE MA111-TX		D6824	8-719-083-57	DIODE UDZSTE-173.6B	
D6214	8-719-404-50	DIODE MA111-TX		D6901	8-719-404-50	DIODE MA111-TX	
D6215	8-719-404-50	DIODE MA111-TX		D6902	8-719-404-50	DIODE MA111-TX	
D6216	8-719-404-50	DIODE MA111-TX		D6903	8-719-404-50	DIODE MA111-TX	
D6217	8-719-404-50	DIODE MA111-TX		D6904	8-719-404-50	DIODE MA111-TX	
D6218	8-719-404-50	DIODE MA111-TX		D6905	8-719-062-51	DIODE 1PS226-115	
D6219	8-719-404-50	DIODE MA111-TX		D6906	8-719-062-51	DIODE 1PS226-115	
D6600	6-501-497-01	DIODE S3L60F		D6907	8-719-404-50	DIODE MA111-TX	
D6601	6-501-497-01	DIODE S3L60F		D6908	8-719-404-50	DIODE MA111-TX	
D6602	6-501-497-01	DIODE S3L60F		D6910	8-719-404-50	DIODE MA111-TX	
D6603	6-501-497-01	DIODE S3L60F		D6911	8-719-404-50	DIODE MA111-TX	
D6604	6-501-497-01	DIODE S3L60F		D6920	8-719-422-37	DIODE MA8051-TX	
D6605	6-501-497-01	DIODE S3L60F				<FERRITE BEAD>	
D6606	8-719-041-97	DIODE MA113-(TX)		FB6600	1-410-397-21	FERRITE	1.1UH
D6607	8-719-041-97	DIODE MA113-(TX)		FB6602	1-410-397-21	FERRITE	1.1UH
D6608	8-719-041-97	DIODE MA113-(TX)		FB6604	1-410-397-21	FERRITE	1.1UH
D6609	8-719-041-97	DIODE MA113-(TX)		FB6606	1-410-397-21	FERRITE	1.1UH
D6614	6-501-497-01	DIODE S3L60F		FB6800	1-410-397-21	FERRITE	1.1UH
D6615	6-501-497-01	DIODE S3L60F		FB6802	1-410-397-21	FERRITE	1.1UH
D6616	6-501-497-01	DIODE S3L60F		FB6803	1-410-397-21	FERRITE	1.1UH
D6617	6-501-497-01	DIODE S3L60F		FB6804	1-410-397-21	FERRITE	1.1UH
D6618	6-501-497-01	DIODE S3L60F				<IC>	
D6619	6-501-497-01	DIODE S3L60F		IC6200	* 8-759-575-27	IC BA10339F-E2	
D6620	8-719-083-57	DIODE UDZSTE-173.6B		IC6730	* 8-759-575-27	IC BA10339F-E2	
D6621	8-719-083-57	DIODE UDZSTE-173.6B		IC6750	6-709-792-01	IC BD9890F-E2	
D6622	8-719-083-57	DIODE UDZSTE-173.6B		IC6900	6-709-792-01	IC BD9890F-E2	
D6623	8-719-083-57	DIODE UDZSTE-173.6B		IC6901	8-759-510-73	IC BA10393F-E2	
D6700	8-719-062-51	DIODE 1PS226-115				<JUMPER READ>	
D6701	8-719-404-50	DIODE MA111-TX		JR6600	1-216-864-11	SHORT CHIP	0
D6703	8-719-404-50	DIODE MA111-TX		JR6605	1-216-296-11	SHORT CHIP	0
D6704	8-719-404-50	DIODE MA111-TX		JR6606	1-216-296-11	SHORT CHIP	0
D6709	8-719-062-51	DIODE 1PS226-115		JR6607	1-216-296-11	SHORT CHIP	0
D6710	8-719-404-50	DIODE MA111-TX		JR6608	1-216-296-11	SHORT CHIP	0
D6715	8-719-404-50	DIODE MA111-TX		JR6609	1-216-296-11	SHORT CHIP	0
D6716	8-719-404-50	DIODE MA111-TX		JR6610	1-216-296-11	SHORT CHIP	0
D6717	8-719-404-50	DIODE MA111-TX		JR6611	1-216-864-11	SHORT CHIP	0
D6733	8-719-404-50	DIODE MA111-TX		JR6612	1-216-864-11	SHORT CHIP	0
D6734	8-719-404-50	DIODE MA111-TX		JR6613	1-216-296-11	SHORT CHIP	0
D6752	8-719-404-50	DIODE MA111-TX					
D6753	8-719-404-50	DIODE MA111-TX					
D6754	8-719-404-50	DIODE MA111-TX					
D6755	8-719-404-50	DIODE MA111-TX					

The components identified $\triangle$ marked are critical for safety.
Replace only with the part number specified.

D2 **D3**

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
JR6614	1-216-296-11	SHORT CHIP	0	<TRANSISTOR>			
JR6616	1-216-296-11	SHORT CHIP	0	Q6200	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
JR6617	1-216-296-11	SHORT CHIP	0	Q6201	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR6618	1-216-296-11	SHORT CHIP	0	Q6202	8-729-019-94	TRANSISTOR 2SK1589-L	
JR6619	1-216-296-11	SHORT CHIP	0	Q6203	8-729-019-94	TRANSISTOR 2SK1589-L	
JR6620	1-216-296-11	SHORT CHIP	0	Q6204	8-729-019-94	TRANSISTOR 2SK1589-L	
JR6621	1-216-296-11	SHORT CHIP	0	Q6205	8-729-019-94	TRANSISTOR 2SK1589-L	
JR6622	1-216-296-11	SHORT CHIP	0	Q6206	8-729-820-90	TRANSISTOR 2SD1621-ST	
JR6624	1-216-296-11	SHORT CHIP	0	Q6207	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6625	1-216-295-91	SHORT CHIP	0	Q6208	8-729-820-90	TRANSISTOR 2SD1621-ST	
JR6626	1-216-296-11	SHORT CHIP	0	Q6209	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6627	1-216-296-11	SHORT CHIP	0	Q6210	8-729-820-90	TRANSISTOR 2SD1621-ST	
JR6628	1-216-296-11	SHORT CHIP	0	Q6211	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6629	1-216-864-11	SHORT CHIP	0	Q6212	8-729-820-90	TRANSISTOR 2SD1621-ST	
JR6630	1-216-864-11	SHORT CHIP	0	Q6213	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6631	1-216-296-11	SHORT CHIP	0	Q6600	6-551-403-01	TRANSISTOR 2SK3797(LBS1SONY.	
JR6700	1-216-296-11	SHORT CHIP	0	Q6601	6-551-403-01	TRANSISTOR 2SK3797(LBS1SONY.	
JR6703	1-216-296-11	SHORT CHIP	0	Q6602	6-551-403-01	TRANSISTOR 2SK3797(LBS1SONY.	
JR6704	1-216-296-11	SHORT CHIP	0	Q6603	6-551-403-01	TRANSISTOR 2SK3797(LBS1SONY.	
JR6705	1-216-296-11	SHORT CHIP	0	Q6604	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6706	1-216-296-11	SHORT CHIP	0	Q6605	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6707	1-216-864-11	SHORT CHIP	0	Q6606	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6708	1-216-864-11	SHORT CHIP	0	Q6607	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6709	1-216-296-11	SHORT CHIP	0	Q6751	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
JR6711	1-216-296-11	SHORT CHIP	0	Q6752	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
JR6712	1-216-296-11	SHORT CHIP	0	Q6753	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR6713	1-216-296-11	SHORT CHIP	0	Q6754	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR6714	1-216-296-11	SHORT CHIP	0	Q6755	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
JR6715	1-216-296-11	SHORT CHIP	0	Q6756	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR6716	1-216-864-11	SHORT CHIP	0	Q6757	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR6717	1-216-864-11	SHORT CHIP	0	Q6758	8-729-019-94	TRANSISTOR 2SK1589-L	
JR6718	1-216-296-11	SHORT CHIP	0	Q6759	8-729-820-90	TRANSISTOR 2SD1621-ST	
JR6719	1-216-864-11	SHORT CHIP	0	Q6760	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6720	1-216-864-11	SHORT CHIP	0	Q6761	8-729-019-94	TRANSISTOR 2SK1589-L	
JR6721	1-216-296-11	SHORT CHIP	0	Q6762	8-729-820-90	TRANSISTOR 2SD1621-ST	
JR6800	1-216-296-11	SHORT CHIP	0	Q6763	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6801	1-216-296-11	SHORT CHIP	0	Q6764	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR6802	1-216-296-11	SHORT CHIP	0	Q6800	6-551-403-01	TRANSISTOR 2SK3797(LBS1SONY.	
JR6803	1-216-864-11	SHORT CHIP	0	Q6801	6-551-403-01	TRANSISTOR 2SK3797(LBS1SONY.	
JR6804	1-216-864-11	SHORT CHIP	0	Q6802	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6805	1-216-296-11	SHORT CHIP	0	Q6803	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6806	1-216-296-11	SHORT CHIP	0	Q6804	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6807	1-216-296-11	SHORT CHIP	0	Q6805	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6808	1-216-296-11	SHORT CHIP	0	Q6806	6-551-403-01	TRANSISTOR 2SK3797(LBS1SONY.	
JR6809	1-216-296-11	SHORT CHIP	0	Q6807	6-551-403-01	TRANSISTOR 2SK3797(LBS1SONY.	
JR6810	1-216-296-11	SHORT CHIP	0	Q6900	8-729-019-94	TRANSISTOR 2SK1589-L	
JR6811	1-216-296-11	SHORT CHIP	0	Q6901	8-729-019-94	TRANSISTOR 2SK1589-L	
JR6812	1-216-296-11	SHORT CHIP	0	Q6902	8-729-820-90	TRANSISTOR 2SD1621-ST	
JR6813	1-216-296-11	SHORT CHIP	0	Q6903	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6814	1-216-296-11	SHORT CHIP	0	Q6904	8-729-820-90	TRANSISTOR 2SD1621-ST	
JR6815	1-216-296-11	SHORT CHIP	0	Q6905	8-729-804-41	TRANSISTOR 2SB1122-S	
JR6816	1-216-296-11	SHORT CHIP	0	Q6906	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR6817	1-216-296-11	SHORT CHIP	0	Q6907	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR6818	1-216-296-11	SHORT CHIP	0	<RESISTOR>			
JR6819	1-216-864-11	SHORT CHIP	0	R6200	1-216-821-11	METAL CHIP 1K 5% 1/10W	
JR6820	1-216-296-11	SHORT CHIP	0	R6201	1-216-837-11	METAL CHIP 22K 5% 1/10W	
JR6822	1-216-296-11	SHORT CHIP	0	R6202	1-216-833-11	METAL CHIP 10K 5% 1/10W	
JR6823	1-216-296-11	SHORT CHIP	0	R6203	1-216-821-11	METAL CHIP 1K 5% 1/10W	
JR6824	1-216-864-11	SHORT CHIP	0	R6204	1-216-821-11	METAL CHIP 1K 5% 1/10W	
JR6828	1-216-296-11	SHORT CHIP	0	R6205	1-216-821-11	METAL CHIP 1K 5% 1/10W	
<COIL>				R6206	1-216-821-11	METAL CHIP 1K 5% 1/10W	
L6600	$\triangle$ 1-406-977-21	INDUCTOR	100UH	R6207	1-216-843-11	METAL CHIP 68K 5% 1/10W	
L6800	$\triangle$ 1-406-977-21	INDUCTOR	100UH				

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R6208	1-216-845-11	METAL CHIP	100K 5% 1/10W	R6702	1-216-843-11	METAL CHIP	68K 5% 1/10W
R6209	1-216-843-11	METAL CHIP	68K 5% 1/10W	R6703	1-216-845-11	METAL CHIP	100K 5% 1/10W
				R6704	1-218-837-11	METAL CHIP	390 0.5% 1/10W
R6210	1-216-845-11	METAL CHIP	100K 5% 1/10W				
R6211	1-216-843-11	METAL CHIP	68K 5% 1/10W	R6705	1-218-835-11	METAL CHIP	330 0.5% 1/10W
R6212	1-216-845-11	METAL CHIP	100K 5% 1/10W	R6706	1-218-835-11	METAL CHIP	330 0.5% 1/10W
R6213	1-216-843-11	METAL CHIP	68K 5% 1/10W	R6707	1-218-835-11	METAL CHIP	330 0.5% 1/10W
R6214	1-216-845-11	METAL CHIP	100K 5% 1/10W	R6708	1-218-835-11	METAL CHIP	330 0.5% 1/10W
				R6709	1-218-835-11	METAL CHIP	330 0.5% 1/10W
R6215	1-216-857-11	METAL CHIP	1M 5% 1/10W				
R6216	1-216-857-11	METAL CHIP	1M 5% 1/10W	R6710	1-218-833-11	METAL CHIP	270 0.5% 1/10W
R6217	1-216-837-11	METAL CHIP	22K 5% 1/10W	R6711	1-218-833-11	METAL CHIP	270 0.5% 1/10W
R6218	1-216-837-11	METAL CHIP	22K 5% 1/10W	R6712	1-218-833-11	METAL CHIP	270 0.5% 1/10W
R6219	1-216-837-11	METAL CHIP	22K 5% 1/10W	R6714	1-218-833-11	METAL CHIP	270 0.5% 1/10W
				R6715	1-216-797-11	METAL CHIP	10 5% 1/10W
R6220	1-216-833-11	METAL CHIP	10K 5% 1/10W				
R6221	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6716	1-216-797-11	METAL CHIP	10 5% 1/10W
R6222	1-216-837-11	METAL CHIP	22K 5% 1/10W	R6717	1-216-797-11	METAL CHIP	10 5% 1/10W
R6223	1-216-857-11	METAL CHIP	1M 5% 1/10W	R6718	1-216-797-11	METAL CHIP	10 5% 1/10W
R6224	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6719	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R6720	1-216-843-11	METAL CHIP	68K 5% 1/10W
R6225	1-216-857-11	METAL CHIP	1M 5% 1/10W				
R6226	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6721	1-216-845-11	METAL CHIP	100K 5% 1/10W
R6227	1-216-793-11	METAL CHIP	4.7 5% 1/10W	R6722	1-218-837-11	METAL CHIP	390 0.5% 1/10W
R6228	1-216-793-11	METAL CHIP	4.7 5% 1/10W	R6723	1-218-835-11	METAL CHIP	330 0.5% 1/10W
R6229	1-216-797-11	METAL CHIP	10 5% 1/10W	R6724	1-218-835-11	METAL CHIP	330 0.5% 1/10W
				R6725	1-218-835-11	METAL CHIP	330 0.5% 1/10W
R6230	1-216-797-11	METAL CHIP	10 5% 1/10W				
R6231	1-216-797-11	METAL CHIP	10 5% 1/10W	R6726	1-218-835-11	METAL CHIP	330 0.5% 1/10W
R6232	1-216-797-11	METAL CHIP	10 5% 1/10W	R6727	1-218-835-11	METAL CHIP	330 0.5% 1/10W
R6233	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6728	1-218-833-11	METAL CHIP	270 0.5% 1/10W
R6234	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6729	1-218-833-11	METAL CHIP	270 0.5% 1/10W
				R6730	1-218-833-11	METAL CHIP	270 0.5% 1/10W
R6235	1-216-833-11	METAL CHIP	10K 5% 1/10W				
R6236	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6731	1-216-857-11	METAL CHIP	1M 5% 1/10W
R6237	1-249-417-11	CARBON	1K 5% 1/4W	R6732	1-216-857-11	METAL CHIP	1M 5% 1/10W
R6238	1-249-417-11	CARBON	1K 5% 1/4W	R6733	1-216-837-11	METAL CHIP	22K 5% 1/10W
R6239	1-249-417-11	CARBON	1K 5% 1/4W	R6734	1-216-837-11	METAL CHIP	22K 5% 1/10W
				R6735	1-216-837-11	METAL CHIP	22K 5% 1/10W
R6240	1-249-417-11	CARBON	1K 5% 1/4W				
R6241	1-249-417-11	CARBON	1K 5% 1/4W	R6736	1-216-837-11	METAL CHIP	22K 5% 1/10W
R6242	1-249-417-11	CARBON	1K 5% 1/4W	R6737	1-216-857-11	METAL CHIP	1M 5% 1/10W
R6243	1-249-417-11	CARBON	1K 5% 1/4W	R6738	1-216-857-11	METAL CHIP	1M 5% 1/10W
R6244	1-249-417-11	CARBON	1K 5% 1/4W	R6739	1-216-864-11	SHORT CHIP	0
				R6740	1-249-417-11	CARBON	1K 5% 1/4W
R6245	1-216-809-11	METAL CHIP	100 5% 1/10W				
R6246	1-216-809-11	METAL CHIP	100 5% 1/10W	R6741	1-249-417-11	CARBON	1K 5% 1/4W
R6247	1-216-809-11	METAL CHIP	100 5% 1/10W	R6742	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6248	1-216-809-11	METAL CHIP	100 5% 1/10W	R6743	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6251	1-216-821-11	METAL CHIP	1K 5% 1/10W	R6744	1-216-842-11	METAL CHIP	56K 5% 1/10W
				R6745	1-218-833-11	METAL CHIP	270 0.5% 1/10W
R6252	1-216-837-11	METAL CHIP	22K 5% 1/10W				
R6253	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6746	1-218-893-11	METAL CHIP	82K 0.5% 1/10W
R6600	1-202-933-61	FUSIBLE	0.1 10% 1/2W	R6747	1-216-793-11	METAL CHIP	4.7 5% 1/10W
R6601	1-249-403-11	CARBON	68 5% 1/4W	R6748	1-218-446-11	METAL CHIP	1 5% 1/10W
R6602	1-216-793-11	METAL CHIP	4.7 5% 1/10W	R6749	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R6750	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6603	1-216-049-11	RES-CHIP	1K 5% 1/10W				
R6604	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6751	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6605	1-249-403-11	CARBON	68 5% 1/4W	R6752	1-216-821-11	METAL CHIP	1K 5% 1/10W
R6606	1-216-793-11	METAL CHIP	4.7 5% 1/10W	R6753	1-216-837-11	METAL CHIP	22K 5% 1/10W
R6607	1-216-049-11	RES-CHIP	1K 5% 1/10W	R6754	1-216-833-11	METAL CHIP	10K 5% 1/10W
				R6755	1-218-915-11	METAL CHIP	680K 0.5% 1/10W
R6608	1-216-833-11	METAL CHIP	10K 5% 1/10W				
R6609	1-249-403-11	CARBON	68 5% 1/4W	R6756	1-218-899-11	METAL CHIP	150K 0.5% 1/16W
R6610	1-216-793-11	METAL CHIP	4.7 5% 1/10W	R6757	1-218-883-11	METAL CHIP	33K 0.5% 1/10W
R6611	1-216-049-11	RES-CHIP	1K 5% 1/10W	R6758	1-218-903-11	METAL CHIP	220K 0.5% 1/10W
R6612	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6759	1-218-899-11	METAL CHIP	150K 0.5% 1/16W
				R6761	1-218-893-11	METAL CHIP	82K 0.5% 1/10W
R6613	1-216-049-11	RES-CHIP	1K 5% 1/10W				
R6614	1-249-403-11	CARBON	68 5% 1/4W	R6762	1-218-883-11	METAL CHIP	33K 0.5% 1/10W
R6615	1-216-793-11	METAL CHIP	4.7 5% 1/10W	R6763	1-218-907-11	METAL CHIP	330K 0.5% 1/10W
R6616	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6766	1-216-845-11	METAL CHIP	100K 5% 1/10W
R6619	1-216-857-11	METAL CHIP	1M 5% 1/10W	R6767	1-216-853-11	METAL CHIP	470K 5% 1/10W
				R6768	1-216-839-11	METAL CHIP	33K 5% 1/10W
R6620	1-216-857-11	METAL CHIP	1M 5% 1/10W				
R6701	1-216-821-11	METAL CHIP	1K 5% 1/10W				

D2 D3

KLV-40/46X200A, 40/46X250A (GA) 4-44

The components identified $\triangle$ marked are critical for safety.
Replace only with the part number specified.

D2

D3

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
T6801	$\triangle$ 8-597-050-00	HV ISOLATING TRANS HIT-1000//M					
T6802	$\triangle$ 1-445-039-11	TRANSFORMER, DRIVE					
T6850	$\triangle$ 1-445-039-11	TRANSFORMER, DRIVE					
<TERMINAL>							
TK6700	1-537-770-21	TERMINAL BOARD, GROUND					
TK6701	1-537-770-21	TERMINAL BOARD, GROUND					
TK6900	1-537-770-21	TERMINAL BOARD, GROUND					
TK6901	1-537-770-21	TERMINAL BOARD, GROUND					

