

### Modified R928, 8 × 6mm Photocathode Area Size Low Dark Counts, Extended Red Multialkali, High Sensitivity For Photon Counting Applications

#### FEATURES

- Low Dark Counts ..... 300cps (at 25°C)
- Low Dark Current ..... 2nA (after 30min.)
- Wide Spectral Response ..... 185 to 900 nm
- High Cathode Sensitivity
  - Luminous ..... 200μA/lm
  - Radiant at 400nm ..... 68mA/W
- High Anode Sensitivity (at 1000V)
  - Luminous ..... 2000A/lm
  - Radiant at 400nm .....  $6.8 \times 10^5$ A/W
- Low Drift and Hysteresis

The R2949 is a 28mm (1-1/8 inch) diameter, 9-stage, side-on type photomultiplier tube having the same extended red multialkali photocathode as the R928. The R2949 features very low dark counts, extremely high quantum efficiency, high gain, good S/N ratio and wide spectral response from UV to near infrared.

The R2949 is well suited for use in various low-level photometries such as general single photon counting applications and fluorescence life time measurement.


The R2949 is directly interchangeable with the R928.



#### GENERAL

Parameter		Description/Value	Unit
Spectral Response		185 to 900	nm
Wavelength of Maximum Response		400	nm
Photocathode	Material	Multialkali	—
	Minimum Useful Size	8 × 6	mm
Window Material		UV glass	—
Dynode	Secondary Emitting Surface	Multialkali	—
	Structure	Circular-cage	—
	Number of Stages	9	—
Direct Interelectrode Capacitances	Anode to Last Dynode	Approx. 4	pF
	Anode to All Other Electrodes	Approx. 6	pF
Base		11-pin base JEDEC No. B11-88	—
Weight		Approx. 45	g
Suitable Socket (Option)		E678-11A	—
Suitable Socket Assembly (Option)		E717-21	—

Figure 1: Typical Spectral Response

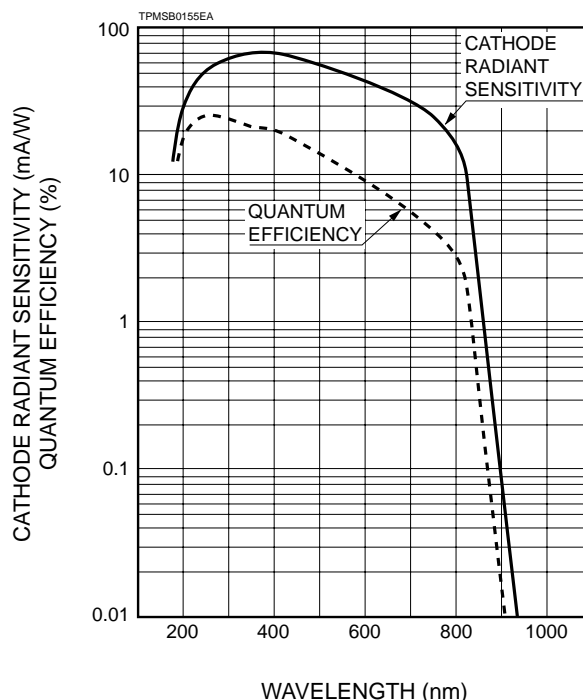

# PHOTOMULTIPLIER TUBE R2949

## MAXIMUM RATINGS (Absolute Maximum Values at 25°C)

Parameter		Value	Unit
Supply Voltage	Between Anode and Cathode	1250	Vdc
	Between Anode and Last Dynode	250	Vdc
Average Anode Current <sup>A</sup>		0.1	mA
Ambient Temperature		-80 to +50	°C

## CHARACTERISTICS (at 25°C)

Parameter		Min.	Typ.	Max.	Unit	
Cathode Sensitivity	Quantum Efficiency at 255nm	—	25.3	—	%	
	Luminous <sup>B</sup>	140	200	—	μA/lm	
	Radiant	at 194nm	—	18	—	mA/W
		at 254nm	—	52	—	mA/W
		at 400nm	—	68	—	mA/W
		at 633nm	—	41	—	mA/W
		at 852nm	—	3.5	—	mA/W
	Red/White Ratio <sup>C</sup> with R-68 Filter	0.1	0.3	—	—	
Blue <sup>D</sup>	—	7.5	—	μA/lm-b		
Anode Sensitivity	Luminous <sup>E</sup>	1000	2000	—	A/lm	
	Radiant	at 194nm	—	1.8 × 10 <sup>5</sup>	—	A/W
		at 254nm	—	5.2 × 10 <sup>5</sup>	—	A/W
		at 400nm	—	6.8 × 10 <sup>5</sup>	—	A/W
		at 633nm	—	4.1 × 10 <sup>5</sup>	—	A/W
		at 852nm	—	3.5 × 10 <sup>4</sup>	—	A/W
Gain <sup>E</sup>	—	1.0 × 10 <sup>7</sup>	—	—		
Anode Dark Counts <sup>F</sup>	at +25°C	—	300	500	cps	
	at -20°C	—	3	—	cps	
Anode Dark Current <sup>F</sup>		—	2	25	nA	
ENI (Equivalent Noise Input) <sup>G</sup>		—	1.2 × 10 <sup>-16</sup>	—	W	
Time Response <sup>E</sup>	Anode Pulse Rise Time <sup>H</sup>	—	2.2	—	ns	
	Electron Transit Time <sup>J</sup>	—	22	—	ns	
Anode Current Stability <sup>K</sup>	Current Hysteresis	—	0.1	—	%	
	Voltage Hysteresis	—	1.0	—	%	

**Table 1: Voltage Distribution Ratio**

Electrodes	K	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	Dy9	P
Distribution Ratio	1	1	1	1	1	1	1	1	1	1	1

Supply Voltage= 1000Vdc

K: Cathode, Dy: Dynode, P: Anode


## NOTES

- A: Averaged over any interval of 30 seconds maximum.
- B: The light source is a tungsten filament lamp operated at a distribution temperature of 2856K. Supply voltage is 100 volts between the cathode and all other electrodes connected together as anode.
- C: Red/white ratio is the quotient of the cathode current measured using a red filter interposed between the light source and the tube by the cathode current measured with the filter removed under the same conditions as Note B.
- D: The value is cathode output current when a blue filter (Corning CS 5-58 polished to 1/2 stock thickness) is interposed between the light source and the tube under the same conditions as Note B.
- E: Measured with the same light source as Note B and with the anode-to-cathode supply voltage and voltage distribution ratio shown in Table 1.
- F: Measured with the same supply voltage and the voltage distribution ratio as Note E after 30 minute storage in the darkness.
- G: ENI is an indication of the photon limited signal-to-noise ratio. It refers to the amount of light in watts to produce a signal-to-noise ratio of unity in the output of a photomultiplier tube.

$$ENI = \frac{\sqrt{2q \cdot I_{db} \cdot G \cdot \Delta f}}{S}$$

where q = Electronic charge (1.60 × 10<sup>-19</sup> coulomb)  
 I<sub>db</sub> = Anode dark current (after 30 minute storage) in darkness) in amperes  
 G = Gain  
 Δf = Bandwidth of the system in hertz. 1 hertz is used.  
 S = Anode radiant sensitivity in amperes per watt at the wavelength of peak response.

- H: The rise time is the time for the output pulse to rise from 10% to 90% of the peak amplitude when the entire photocathode is illuminated by a delta function light pulse.
- J: The electron transit time is the interval between the arrival of delta function light pulse at the entrance window of the tube and the time when the anode output reaches the peak amplitude. In measurement, the whole photocathode is illuminated.
- K: Hysteresis is temporary instability in anode current after light and voltage are applied.



$$\text{Hysteresis} = \frac{I_{\max} - I_{\min}}{I_j} \times 100 (\%)$$

### (1) Current Hysteresis

The tube is operated at 750 volts with an anode current of 1 microampere for 5 minutes. The light is then removed from the tube for a minute. The tube is then re-illuminated at the previous light level for a minute to measure the variation.

### (2) Voltage Hysteresis

The tube is operated at 300 volts with an anode current of 0.1 microampere for 5 minutes. The light is then removed from the tube and the supply voltage is quickly increased to 800 volts. After a minute, the supply voltage is reduced to the previous value and the tube is re-illuminated for a minute to measure the variation.

Figure 2: Anode Sensitivity and Gain Characteristics

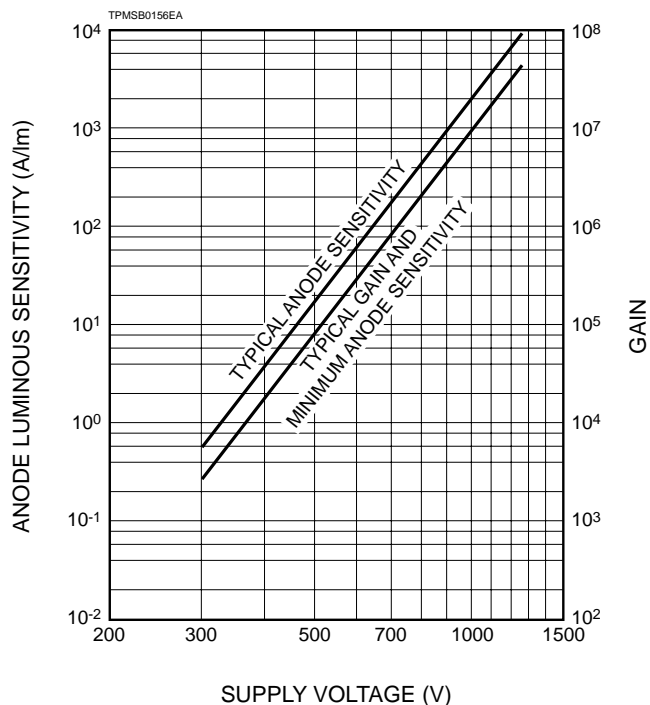


Figure 3: Typical Time Response

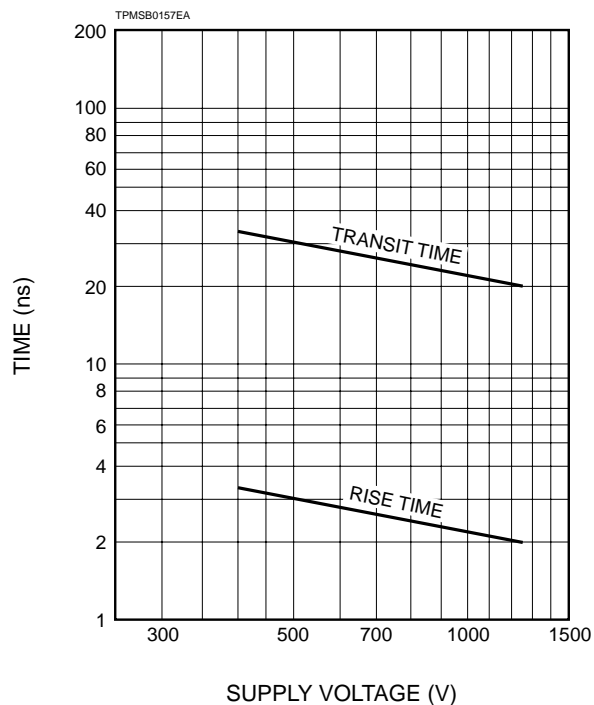


Figure 4: Typical Temperature Coefficient of Anode Sensitivity



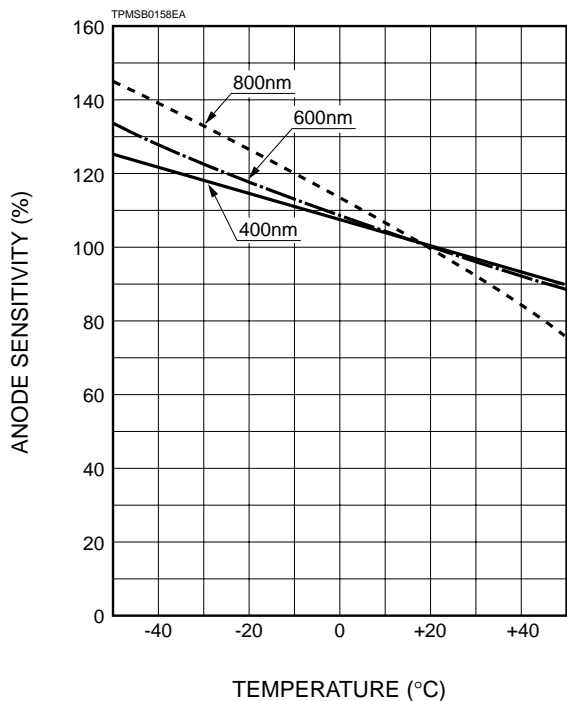


Figure 5: Typical Temperature Characteristic of Dark Counts

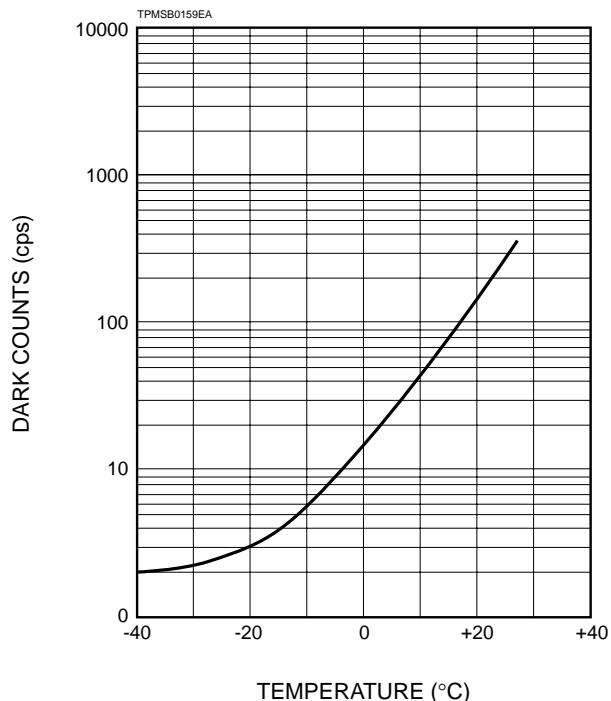


# PHOTOMULTIPLIER TUBE R2949

Figure 6: Single Photon Pulse Height Distribution

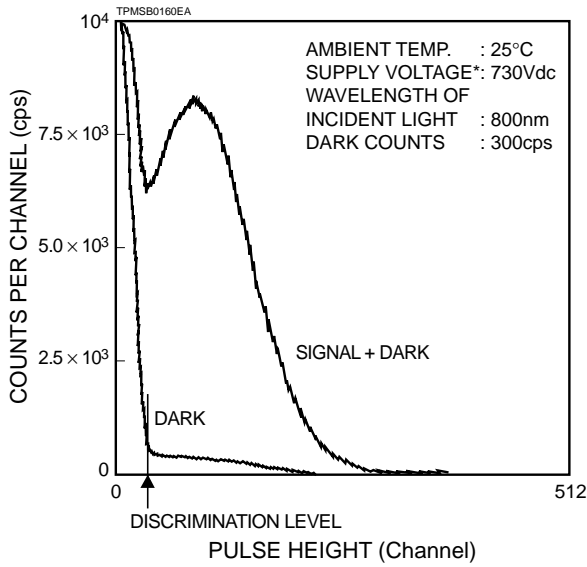

\* The supply voltage is set at gain to be  $1 \times 10^6$


Figure 7: Dimensional Outline and Basing Diagram (Unit: mm)

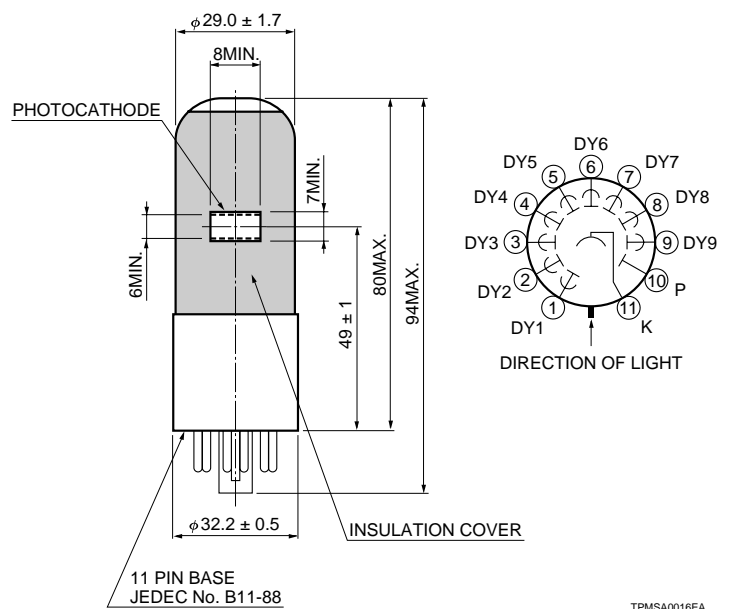

TPMSA0016EA



Figure 8: Optional Accessories (Unit: mm)

## E678-11A (Socket)

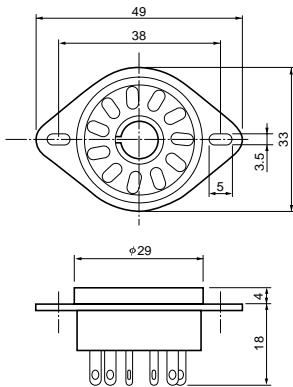

TACCA0064EA

## D Type Socket Assembly E717-21

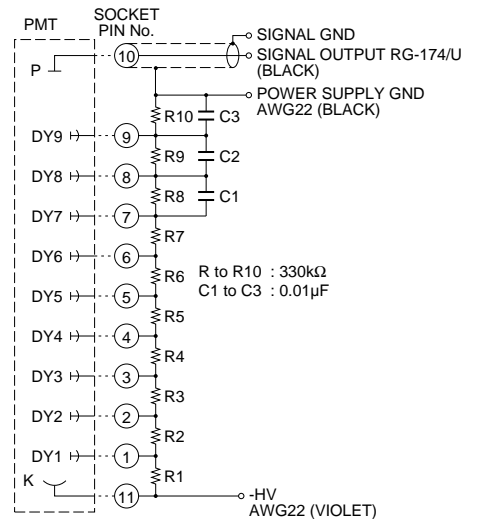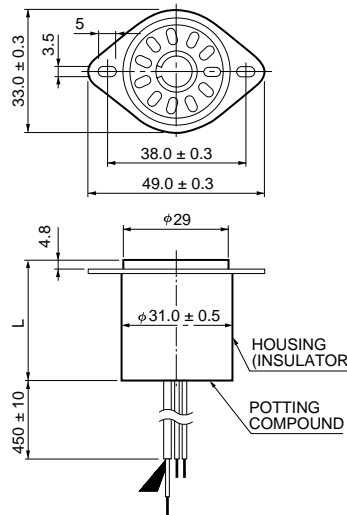

TACCA0002ED

\* Hamamatsu also provides C4900 series modular type high voltage power supplies and C6270 series DP type socket assemblies which incorporate a DC to DC converter type high voltage power supply.

**Warning-Personal Safety Hazards**  
 Electrical Shock — Operating voltage applied to this device presents shock hazard.

# HAMAMATSU

HAMAMATSU PHOTONICS K.K., Elextron Tube Center

314-5, Shimokanzo, Toyooka-village, Iwata-gun, Shizuoka-ken, 438-0193, Japan, Telephone: (81)539/62-5248, Fax: (81)539/62-2205

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, P. O. Box 6910, Bridgewater, N.J. 08807-0910, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-2658

France: Hamamatsu Photonics France S.A.R.L.: 8, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10

United Kingdom: Hamamatsu Photonics UK Limited: Lough Point, 2 Gladbeck Way, Windmill Hill, Enfield, Middlesex EN2 7JA, United Kingdom, Telephone: (44)181-367-3560, Fax: (44)181-367-6384

North Europe: Hamamatsu Photonics Norden AB: Färögatan 7, S-164-40 Kista Sweden, Telephone: (46)8-703-29-50, Fax: (46)8-750-58-95

Italy: Hamamatsu Photonics Italia: S.R.L.: Via Della Moia, 1/E, 20020 Arese, (Milano), Italy, Telephone: (39)2-935 81 733, Fax: (39)2-935 81 741

TPMS1045E01  
 JUN. 1998