


# ROITHNER LASERTECHNIK GIRDH

WIEDNER HAUPTSTRASSE 76 IO40 VIENNA AUSTRIA TEL. +43 I 586 52 43 -0, FAX. -44, OFFICE@ROITHNER-LASER.COM



## **S8550MG**



### **TECHNICAL DATA**

## **Infrared Laser Diode**

#### **Features**

Lasing Mode Structure: multi mode
Peak Wavelength: typ. 850 nm
Optical Ouput Power: 50 mW

Package: 5.6 mm



#### **Electrical Connection**

Pin Configuration			Bottom View	
10 03	n-type			2
🛨 👈	PIN	Function		
rD 🕌	PD 1	LD Cathode		<del>&gt; •   •  </del>
	2	LD Anode, PD Cathode		\ 1 \ 3 \
	3	PD Anode		
02				

## Absolute Maximum Ratings ( $T_C=25$ °C)

Item	Symbol	Value	Unit
CW Output Power	Po	50	mW
LD Reverse Voltage	$V_{rLD}$	2	V
Operating Case Temperature	T <sub>C</sub>	-10 +50	°C
Storage Temperature	Teta	-40 +85	°C

## Specifications ( $T_C=25$ °C, $P_O=50$ mW)


Item	Symbol	Min.	Тур.	Max.	Unit				
Optical Specifications									
Center Wavelength	λ <sub>C</sub>	830	850	860	nm				
FWHM Beam Divergence*	$\theta_{\parallel}$	-	11	16	deg				
L L L L L L L L L L L L L L L L L L L	$ heta_{\perp}$	-	18	23	deg				
Electrical Specifications									
Threshold Current	I <sub>th</sub>	-	16	20	mA				
Operating Current	l <sub>op</sub>	-	68	85	mA				
Slope Efficiency	η	-	0.95	-	mW/mA				
Operating Voltage	U <sub>op</sub>	-	2.1	2.3	V				
Monitor Current	I <sub>m</sub>	0.05	0.13	0.50	mA				

<sup>\*</sup>  $\theta_{\parallel}$  and  $\theta_{\perp}$  are defined as the angle within the intensity is 50% of the peak value.


The above specifications are for reference purpose only and subjected to change without prior notice.



## Package Dimensons

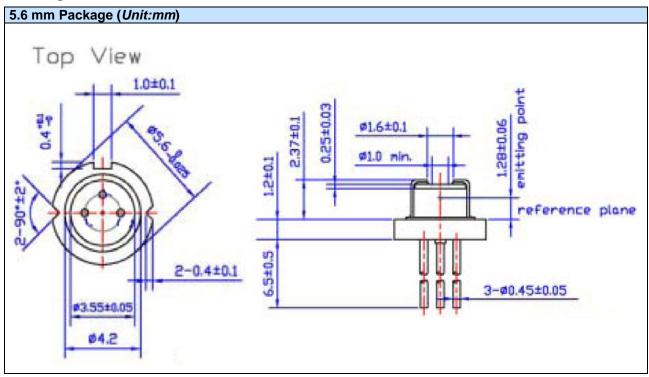

## **Typical Performance Curves**

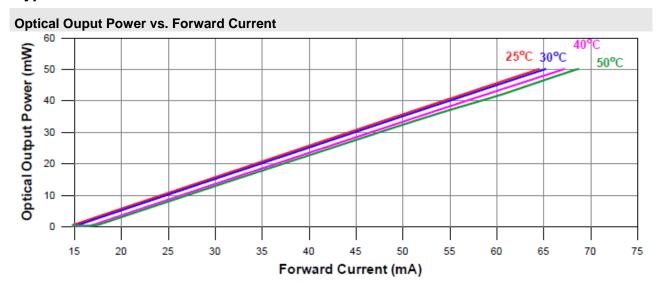




## ROITHNER LASERTECHNIK GIRDH

WIEDNER HAUPTSTRASSE 76


1040 VIENNA TEL. +43 I 586 52 43 -0, FAX. -44, OFFICE@ROITHNER-LASER.COM




### Forward Voltage vs. Forward Current

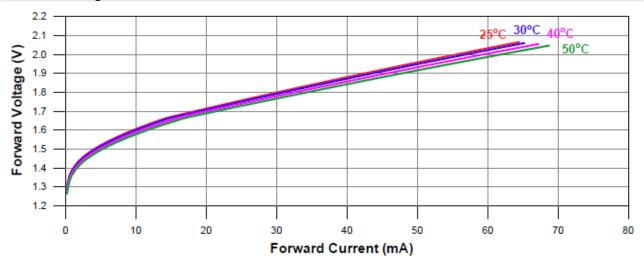

## Peak Wavelength vs. Case Temperature

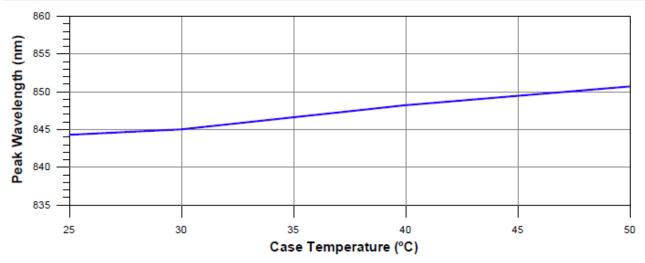

#### **Far-Field Pattern**

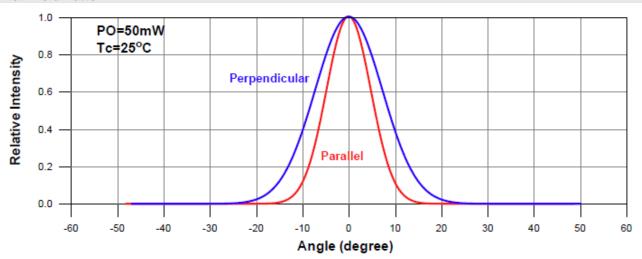




## ROITHNER LASERTECHNIK GIRDH

VIENNA AUSTRIA


@ROITHNER-LASER.COM

WIEDNER HAUPTSTRASSE 76 IO40 VIENNA AUSTRIJ TEL. +43 I 586 52 43 -0, FAX. -44, OFFICE@ROITHNER-LASER.COM


### **Monitor Current vs. Optical Output Power**

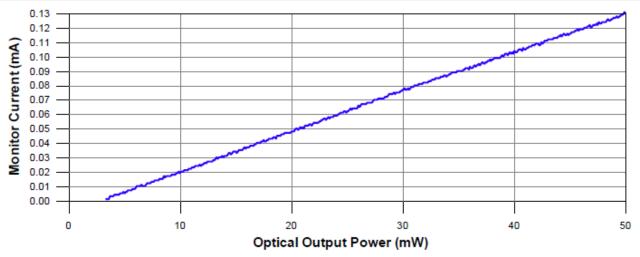

#### Slope Efficiency vs. Case Temperature

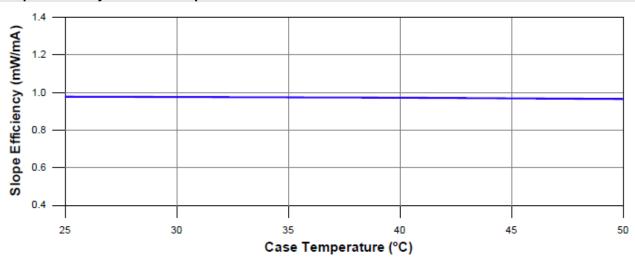

#### **Threshold Current vs. Case Temerature**

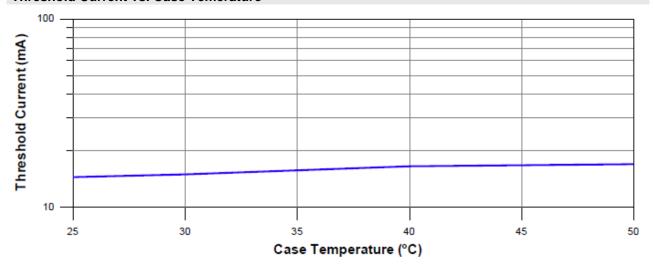



### Safety of Laser light

Laser Light can damage the human eyes and skin. Do not expose the eye or skin directly to any laser light and/or through optical lens. When handling the LDs, wear appropriate safety glasses to prevent laser light, even any reflections from entering to the eye. Focused laser beam through optical instruments will increase the chance of eye hazard.



• These LDs are emitting invisible light.

#### **Cautions**

#### 1. Operating methode

- This LD shall change its forward voltage requirement and optical ouput power according to temperature change. Also, the LD will require more operation current to maintain same ouput power as it degrades. In order to maintain output power, use of APC (Automatic Power Control) is recommended. Which use monitor feedback to adjust the operation current.
- Confirm that electrical spike current generated by swithing on and off does not exceed the
  maximum operating current level specified herein above as absolute maximum rating. Also,
  employ appropriat countermeasures to reduce chattering and/or overshooting in the circuit.

#### 2. Static Electricity

• Static electricity or electrical surges will reduce and degrade the reliability of the LDs. It is recommended to use a wrist trap or anti-electrostatic glove when handeling the product.

#### 3. Absolute Maximum Rating

Active layer of LDs shall have high current density and generate high electric field during its
operation. In order to prevent excessive damage, the LD must be operated strictly below
absolute maximum rating.

