

# **Product Specifications**

26.0" WXGA Color TFT-LCD Module Model Name: T260XW01 V.2.0

( ) Preliminary Specifications (\*) Final Specifications

Note: This Specification is subject to change without notice.



# **Contents**

	ITEM
COVER	
CONTENTS	
RECORD OF REVISIONS	
GENERAL DESCRIPTION	
ABSOLUTE MAXIMUM RATINGS	
ELECTRICAL SPECIFICATIONS	
ELECTRICAL CHARACTREISTICS	
INTERFACE CONNECTIONS	
NPUT TIMING SPECIFICATIONS	
COLOR INPUT DATA REFERNECE	
POWER SEQUENCE	
OPTICAL SFECIFICATIONS	
MECHANICAL CHARACTERISTICS	
RELIABLITY	
PRECAUTIONS	
	CONTENTS  RECORD OF REVISIONS  GENERAL DESCRIPTION  ABSOLUTE MAXIMUM RATINGS  ELECTRICAL SPECIFICATIONS  INTERFACE CONNECTIONS  INPUT TIMING SPECIFICATIONS  COLOR INPUT DATA REFERNECE  POWER SEQUENCE  OPTICAL SFECIFICATIONS  RELIABLITY  RELIABLITY  INTERNATIONAL STANDARDS  SAFETY  EMC  Packing



# **Record of Revision**

Version	Date	No		Old	Descrip	otion			New	Description	Remark
0.901	Dec.8'03	All	All issu	All issued by V.901							
2.0	Feb.4'04	2	ED		= ;;= = ;;=			Miles J		***	Update
			Humidi	ty [ (%	)RH 🛚 :	5,10,40,	,60	Humidit	y ( (%)	)RH ]: 10,40,6	0
		2	Between Section 1966 Constant September 1966 Constant	70 TO	# C   # C   # C   # U   # U   # U   # U	Final residence response to the section		N.A.			Update
		3-1	Federate (42) First Regi hard Miles From Regi hard Miles From Regis hard Miles From Regis hard From Regis From	Property   Right    Wiles   Vall   Name			From to  (CD)  From Paylo form White  From Paylo form White  From Company  From Commandes  (A) The Commandes	Ten 4.50	Test	Update	
			LCD: (1	nax)				LCD: (m	nax)		
			Power S	upply I	nput Curi	rent: 1.8		Power Su	pply In	put Current: 2.2	
			Power C	onsum	ption: 9.4	5		Power Co	onsump	tion: 11	
		3-2	Backlig	ht Con	nector P	in config	guratio	n –electri	cal Sp	ecification	
			Oscillat	ing fre	quency:	68(max)	)	66 (max)		Update	
			PWM fi	equenc	y:250(mi	n); 290(1	max)	255(min	.); 285	i (max)	Update
			Input S	Input Specification: Connection of brightness control terminal							
			VDIM-C	• •				N.A.			Update
			(2)Brigl	nt con	trol by Brightne		age:	N.A.			Update
		3-3	Timing  DE mode		(Old)						Update
			Parar	neter	Symbol	Min.	Тур.	Max.	Unit	Condition	
			Clock Fred	uency Period	1/Tc	50	65	85 1600	MHz		
			Horizontal	Active	TH	1320 1280	1280	1280			
			Vertical	Period	TV	774	-	1024			
				Active	TVD	768	768	768	<u> </u>		
			(New)	* TCH,TCL,TDS,TDH,TES : refer to timing specification of LVDS Tx chip.  (New)							
			DE only	DE only mode							
			Parar	Parameter Symbol Min. Typ. Max			Max.	Unit	Condition		
			Clock Free Hayno Fre		1/ Tc	55 47.5	85 48.5	75 49.5	MHz	<del>                                     </del>	
			Vayno Fre		-	47	80	66	Hz		
			Horizontal	Period	TH	1340	1344 1390	1600	clocks		
				Active Period	THID	1280 776	1280	1280 850	clocks lines	<del>                                     </del>	
			Vertical	Active	TVD	768	768	768	lines		
		Ī	* TCH,TC	L,TDS,TD	H,TES : refe	r to timing s	pecificatio	on of LVDS Ta	x chip.		



Version	Date	No	Old Description	New Description	Remark
2.0	Feb.4'04	3-5	Power Sequence-Power rising time(t1)	Min. à 470; Max. à 1000; unit: us	Update
			Min.à1; Maxà30; unit: ms		
		5	Mechanical Characteristics:	ME Drawing (w/ tolerance)	Update
			ME Drawing		
		6	Reliability Test Condition	(5)Thermal Shock Test	Add
				(6)Electrostatic Discharge	
		8	Packing: Carton size		
			810(L) * 270(W) * 490(H)	767(L) * 270(W) * 490(H)	Update
	Jul. 8'04	5	Mechanical Characteristics: ME	(1) Front bezel with AUO	Update
			Drawing	(2) Rear side label changed	
		8	Packing	New Carton Label design	Update



# 1. General Description

This specification applies to the 26.0 inch Color TFT-LCD Module T260XW01. This LCD module has a TFT active matrix type liquid crystal panel 1280x768 pixels, and diagonal size of 26.0 inch. This module supports 1280x768 XGA-WIDE mode (Non-interlace). Each pixel is divided into Red, Green and Blue sub-pixels or dots which are arranged in vertical stripes. Gray scale or the brightness of the sub-pixel color is determined with a 8-bit gray scale signal for each dot.

The T260XW01 has been designed to apply the 8-bit 1 channel LVDS interface method. It is intended to support displays where high brightness, wide viewing angle, high color saturation, and high color depth are very important.

## \* General Information


Items	Specification	Unit	Note
Active Screen Size	26 inches		
Display Area	566.40 (H) x 339.84(V)	mm	
Outline Dimension	620.8(H) x 389.00(V) x 39.5*(D)	mm	Inverter w/ plastic shield
Driver Element	a-Si TFT active matrix		
Display Colors	16.7M	Colors	
Number of Pixels	1280 x 768	Pixel	
Pixel Arrangement	RGB vertical stripe		
Pixel Pitch (H x V)	0.4425 x 0.4425	mm	
Surface Treatment	Hard-Coating, LR		



# 2. Absolute Maximum Ratings

The following are maximum values which, if exceeded, may cause faulty operation or damage to the unit.

Parameter	Symbol	Min.	Max.	Unit	Note
Power Input Voltage	Vcc	-0.3	5.5	$V_{ m dc}$	At 25±5°C
<b>Operating Temperature</b>	T <sub>OP</sub>	00	50	$^{\circ}\!\mathbb{C}$	1
Storage Temperature	$\mathbf{H}_{\mathbf{ST}}$	-20	60	G	1
Operating Ambient Humidity	$\mathbf{H}_{\mathbf{OP}}$	10	90	%RH	1
Storage Humidity	$\mathbf{H}_{\mathbf{ST}}$	10	90	%RH	1

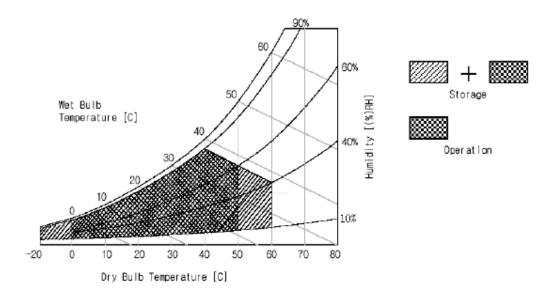

Note: The relative humidity must not exceed 90% non-condensing at temperatures of  $40^{\circ}\text{C}$  or less. At temperatures greater than  $40^{\circ}\text{C}$ , the wet bulb temperature must not exceed  $39^{\circ}\text{C}$ . When operate at low temperatures, the brightness of CCFL will drop and the life time of CCFL will be reduced.

Note: When the lamp is lighted at the conditions of ambient temperature under  $0^{\circ}\mathbb{C}$ , there is possibility that the lamp lights pinkish.

Environment



# 3. Electrical Specification

#### **3-1 Electrical Characteristics**

The T260XW01 requires two power inputs. One is employed to power the LCD electronics and to drive the TFT array and liquid crystal. The second input which powers the CCFL, is typically generated by an inverter.

Parameter	Symbol		Values			Notes
		Min	Тур	Max		
LCD:						
Power Supply Input Voltage	Vcc	4.75	5.0	5.25	Vdc	
Power Supply Input Current	Icc	-	1.6	2.2	A	
Power Consumption	Pc	-	8.0	11	Watt	
Inrush Current	$I_{RUSH}$	-	-	2.5	Apeak	
Backlight Power Consumption		-	94.8	124.8	W	1
Lamp Life Time		50,000	-	-		2

Note: The design of the inverter must have specifications for the lamp in LCD Assembly.

The performance of the Lamp in LCM, for example life time or brightness, is extremely influenced by the characteristics of the DC-AC Inverter. So all the parameters of an inverter should be carefully designed so as not to produce too much leakage current from high-voltage output of the inverter. When you design or order the inverter, please make sure unwanted lighting caused by the mismatch of the lamp and the inverter (no lighting, flicker, etc) never occurs. When you confirm it, the LCD Assembly should be operated in the same condition as installed in your instrument.

Note: Do not attach a conducting tape to lamp connecting wire. If the lamp wire attach to conducting tape, TFT-LCD Module have a low luminance and the inverter has abnormal action because leakage current occurs between lamp wire and conducting tape.



#### **3-2 Interface Connections**

- LCD Connector (CN1): DF19G-20P-1H (HRS) or equivalent

- Mating Connector : DF19G-20S-1H (HRS) or equivalent

- LVDS Transmitter: DS90C385 (N.S.) or THC63LVDM83A (THINE) or equivalent

Pin No.	Symbol	Function	Polarity	Output Pin #
1	Vcc	Power Supply +5.0V		
2	Vcc	Power Supply +5.0V		
3	GND	Power Ground		
4	GND	Power Ground		
5	RX0-	LVDS Receiver Signal (-)	Negative	
6	RX0+	LVDS Receiver Signal (+)	Positive	
7	GND	Ground		
8	RX1-	LVDS Receiver Signal (-)	Negative	
9	RX1+	LVDS Receiver Signal (+)	Positive	
10	GND	Ground		
11	RX2-	LVDS Receiver Signal (-)	Negative	
12	RX2+	LVDS Receiver Signal (+)	Positive	
13	GND	Ground		
14	RXCLK-	LVDS Receiver Clock Signal (-)	Negative	
15	RXCLK+	LVDS Receiver Clock Signal (+)	Positive	
16	GND	Ground		
17	RX3-	LVDS Receiver Signal (-)	Negative	
18	RX3+	LVDS Receiver Signal (+)	Positive	
19	GND	Ground		
20	NC	Reserved		


Note: 1. All GND (ground) pins should be connected together and also be connected to the LCD's metal frame

All Vcc (power input) pins should be connected together.




#### I LVDS Order

#### 1.LVDS\_ORDER =L

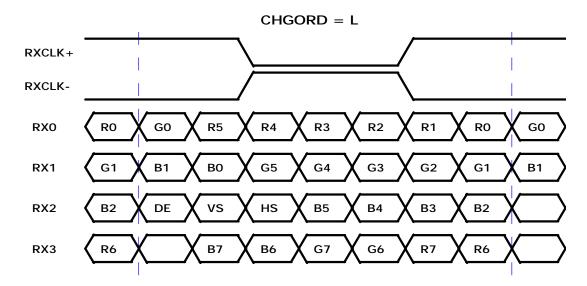

#### 2. LVDS\_ORDER =H

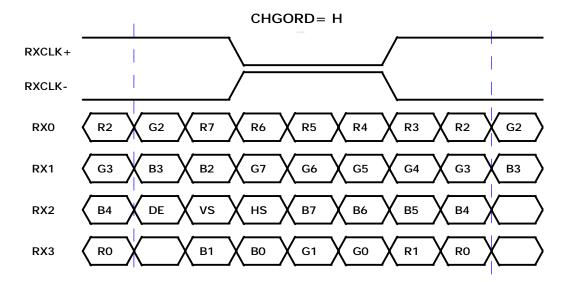



#### **BACKLIGHT CONNECTOR PIN CONFIGURATION** -

#### 1 · Electrical specification

(Ta=25±5°C)

No	ITEM		SYMBOL	TEST	MIN	TYP	MAX	UNIT	MEASURING
110	TIENT		STMDOL	CONDITION	IVIIIV	111	1417 171	OIVII	CIRCUIT
1	Input voltage		VDDB		22.8	24.0	25.2	V	
2	2 Input current		IDDB	VDDB=24V,MAX	3500	3050	950 4400	mA	
2			ШОВ	brightness	3300	3930			
3	Oscillating frequency		F0	VDDB=24V	58	62	66	kHz	
4	PWM frequency		FBI	VDDB=24V	255	270	285	Hz	
5	ON/OFF	ON	BLON	VDDB=24V	2.0	_	5.0	V	or OPEN
)	Control voltage	OFF	BLON	VDDB=24V	0	_	0.8	V	
6	Dimming	MAX	VDIM	VDDB=24V	_	1.0	_	V	
0	Control voltage	MIN	VDIM	VDDB=24V	_	0	_	V	

## 2 · Input specification

CN1: S10B-PH-SM3-TB(JST)

No.	Signal name	Feature
1	VDDB	+24V
2	VDDB	+24V
3	VDDB	+24V
4	VDDB	+24V
5	VDDB	+24V
6	GNDB	GND
7	GNDB	GND
8	GNDB	GND
9	GNDB	GND
10	GNDB	GND

CNIA.	C12D	DILC	N 112 T	B(JST)
UNZ	$\mathbf{S} \mathbf{L} \mathbf{Z} \mathbf{B}$	-PH-3	VI 1- I	B(JST)

Signal name	Feature	
VDDB	+24V	
GNDB	GND	
VDIM	Bright control	
BLON	ON/OFF Signal	
	VDDB VDDB VDDB VDDB VDDB GNDB GNDB GNDB GNDB GNDB GNDB GNDB G	VDDB         +24V           VDDB         +24V           VDDB         +24V           VDDB         +24V           VDDB         GND           GNDB         GND           WDIM         Bright control

¾1: Connection of brightness control terminal

(1)Bright control by the variable resistor

VDIM-GND short-circuit : Min. brightness

(2)Bright control by the voltage 0V : Min. brightness 1V : Max. brightness

※2: BLON Logic

H : Back Light ON L : Back Light OFF OPEN : Back Light ON



This is the signal timing required at the input of the User connector. All of the interface signal timing should be satisfied with the following specifications for it's proper operation.


#### I Timing Table

DE only mode

Parar	meter	Symbol	Min.	Тур.	Max.	Unit	Condition
Clock Fred	quency	1/ Tc	55	65	75	MHz	
Hsync Fre	quency	-	47.5	48.5	49.5	KHz	
Vsync Fre	quency	-	47	60	66	Hz	
Horizontal	Period	TH	1340	1344	1600	clocks	
попиона	Active	THD	1280	1280	1280	clocks	
Vertical	Period	TV	776	806	850	lines	
vertical	Active	TVD	768	768	768	lines	

<sup>\*</sup> TCH,TCL,TDS,TDH,TES: refer to timing specification of LVDS Tx chip.

Timing diagrams of interface signal ( DE only mode )

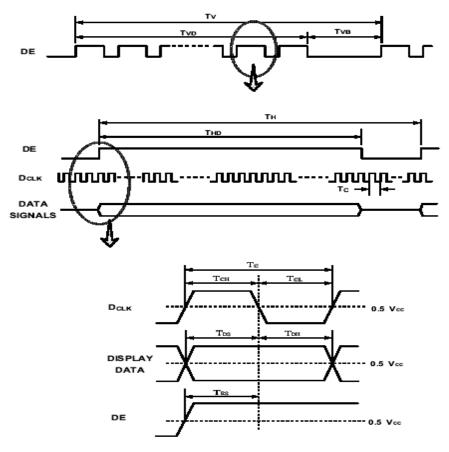




## 3-4 Color Input Data Reference

The brightness of each primary color (red, green and blue) is based on the 8 bit gray scale data input for the color; the higher the binary input, the brighter the color. The table below provides a reference for color versus data input.

## COLOR DATA REFERENCE

Color		Input Color Data																							
		RED				GREEN				BLUE															
		MS	В					I	SB	MS	В					Ι	.SB	MS	В					I	LSB
		R7	R6	R5	R4	R3	R2	R1	R0	G7	G6	G5	G4	G3	G2	G1	G0	В7	В6	В5	B4	В3	B2	B1	В0
	Black	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Red(255)	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Green(255)	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0
Basic	Blue(255)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1
Color	Cyan	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
	Magenta	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1
	Yellow	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0
	White	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
	RED(000)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	RED(001)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
RED																									
	RED(254)	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	RED(255)	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	GREEN(000)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	GREEN(001)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0
GREEN																									
	GREEN(254)	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0
	GREEN(255)	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0
	BLUE(000)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	BLUE(001)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1
BLUE											       	 								     					
	BLUE(254)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	0
	BLUE(255)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1



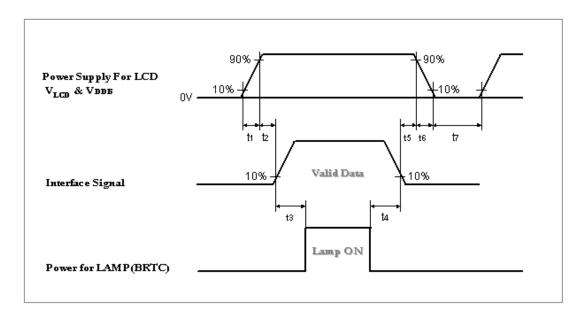

		Units		
Parameter	Min.	Тур.	Max.	Units
t1	470	-	1000	us
t2	5	-	-	ms
t3	200	-	-	ms
t4	200	-	-	ms
t5	5	-	-	ms
t6	-	-	30	ms
t7	1	-	-	S


**Note:** User should follow the power on/off sequence and the rising/falling time to avoid miss operation of the panel.



# 4. Optical Specification

Optical characteristics are determined after the unit has been 'ON' and stable for approximately 30 minutes in a dark environment at 25°C. The values specified are at an approximate distance 50cm from the LCD surface at a viewing angle of  $\Phi$  and  $\theta$  equal to 0°.

Fig.1 1 presents additional information concerning the measurement equipment and method.

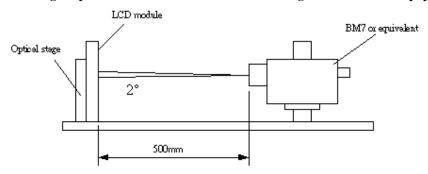

Paran	neter	Symbol		Values	Units	Notes	
			Min.	Тур.	Max.		
Contrast Ratio		CR	500	600			1
Surface Lumin	ance, white	LWH	500	600		cd/m²	2
Response Time	e	Gray to Gray	-	12		ms	
		Tr	-	15	18		3
		Tf	-	10	13		3
Color	RED	$R_X$		0.647			
Chromaticity		$R_{Y}$		0.339			
	GREEN	$G_X$	Typ0.03	0.296	Typ.+0.03		
		$G_{Y}$		0.613			
	BLUE	$B_X$		0.138			
		$B_{Y}$		0.075			
	WHITE	$W_X$		0.301			
		$W_{Y}$		0.327			
Viewing Angle	÷						
x axis, rig	tht( $\varphi = 0^{\circ}$ )	$\theta_{ m r}$	80	85	-	Degree	4
x axis, lef	$t(\varphi=180^\circ)$	$\theta_1$	80	85	-		
y axis, up	y axis, up( $\varphi = 90^{\circ}$ )		80	85	-		
y axis, do	wn ( φ=0°)	$\theta_{ m d}$	80	85	-		
White Uniform	nity	δw	70	-	-	%	5



1. Contrast Ratio (CR) is defined mathematically as:


# Contrast Ratio= Surface Luminance with all white pixels Surface Luminance with all black pixels


- 2. Surface luminance is luminance value at point 1 across the LCD surface 50cm from the surface with all pixels displaying white. (FIG2)
- 3.Response time is the time required for the display to transition from white to black (Rise Time,  $Tr_R$ ) and from black to white (Decay Time,  $Tr_D$ ). For additional information see FIG3.
- 4. Viewing angle is the angle at which the contrast ratio is greater than 5. The angles are determined for the horizontal or x axis and the vertical or y axis with respect to the z axis which is normal to the LCD surface. For more information see FIG4.
- 5. Definition of white uniformity:

White uniformity is calculated with the following formula. Luminance are measured at the following five points  $(1\sim5)$ .

 $\delta$  w =  $\frac{\text{Minimum Brightness of five points}}{\text{Maximum Brightness of five points}}$ 




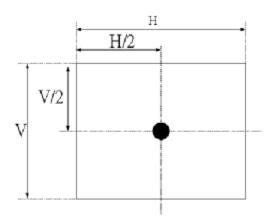

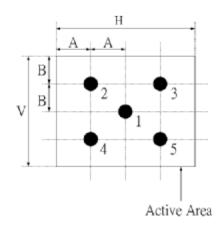


## FIG.3 Response Time

The response time is defined as the following figure and shall be measured by switching the input signal for "black" and "white".

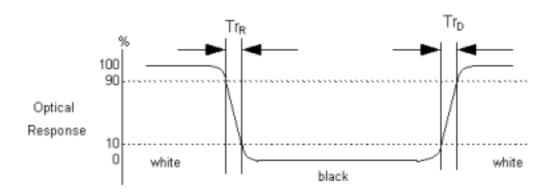



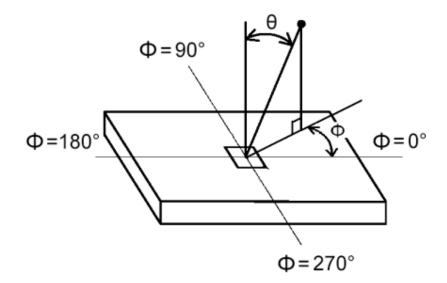



# 5. Mechanical Characteristics


The contents provide general mechanical characteristics for the model T260XW01. In addition the figures in the next page are detailed mechanical drawing of the LCD.

	Horizontal	620.8mm				
Outline Dimension	Vertical	389.00mm				
	Depth	39.50mm(w/I inverter)				
		33.50mm(w/o inverter)				
Bezel Area	Horizontal	570.40mm				
	Vertical	343.84mm				
Active Display Area	Horizontal	566.40mm				
	Vertical	339.84mm				
Weight	4000g (Typ.)					
Surface Treatment	Hard Coating, LR					

Note: Suggest to fix this panel via side mount as well as front mount simultaneously.






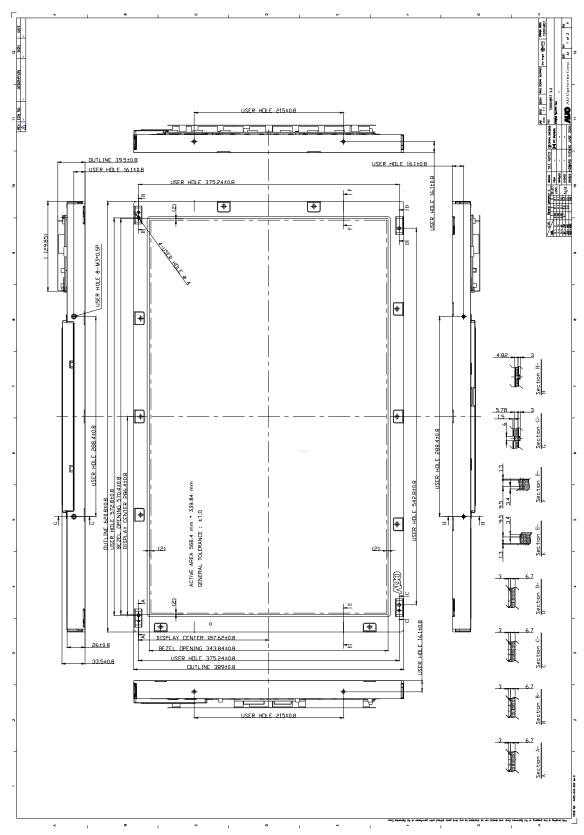





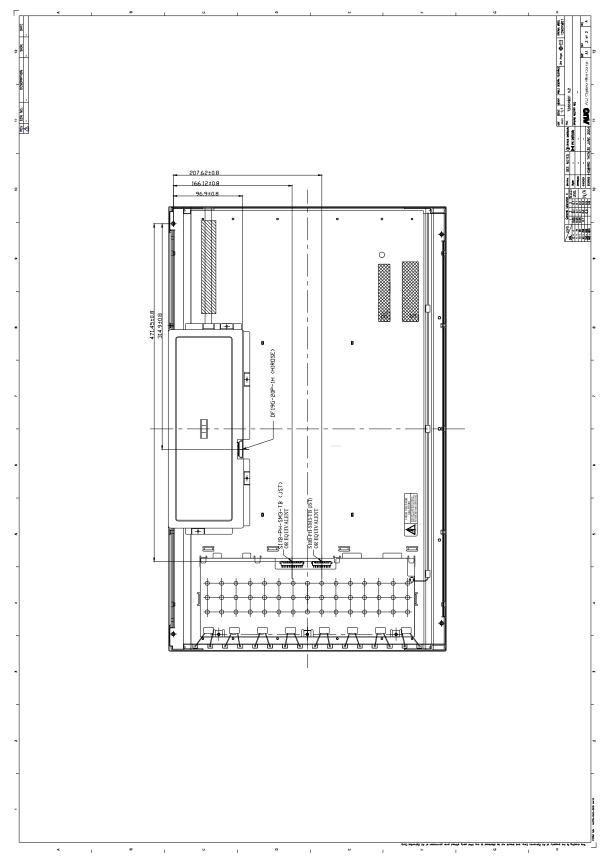



# 6. Reliability

#### Environment test condition

No	Test Item	Condition	Remark
1	High temperature storage test	Ta= 60°C 240h	Note 1,2,3
2	Low temperature storage test	Ta= -20°C 240h	Note 1,2,3
3	High temperature operation test	Ta=50°C 50%RH 240h	Note 1,2,3
4	Low temperature operation test	Ta=0°C 240h	Note 1,2,3
5	Thermal Shock Test	-20°C ~60°C 1H, 10mins, 1H, 5cycles	Note 1,2,3
6	Electrostatic discharge (non-operation)	150 pF,150 $\Omega$ ,10kV,1 second, 9 position on the panel, 10 times each place	
7	Vibration test (non-operating)	Wave form: random Vibration level: 1.0G RMS Bandwidth: 10-500Hz Duration: X, Y, Z 10min One time each direction	Note 1,2,3
8	Shock test (non-operating)	Shock level: 100G Waveform: half since wave, 2ms Direction: ±X, ±Y, ±Z One time each direction	Note 1,2,3

Note 1: Evaluation should be tested after storage at room temperature for one hour.

Note 2: There should be no change which might affect the practical display function when the display quality test is conducted under normal operating condition.

Note 3: Judgment: (a) Function OK.

(b). No serious image quality degradation.



## 7. International Standard

#### **7-1. Safety**

(1) UL1950 Third Edition, Underwriters Laboratories, Inc. Jan. 28, 1995

Standard for Safety of Information Technology Equipment Including electrical Business Equipment.

(2) CAN/CSA C22.2 No. 950-95 Third Edition, Canadian Standards Association, Jan. 28, 1995 Standard for Safety of Information Technology Equipment Including Electrical Business Equipment.

(3) EN60950: 1992+A2: 1993+A2: 1993+C3: 1995+A4: 1997+A11: 1997

IEC 950: 1991+A1: 1992+A2: 1993+C3: 1995+A4:1996

European Committee for Electrotechnical Standardization (CENELEC)

EUROPEAN STANDARD for Safety of Information Technology Equipment Including Electrical Business Equipment.

#### 7-2. EMC

- a) ANSI C63.4 "Methods of Measurement of Radio-Noise Emissions from Low-Voltage Electrical and Electrical Equipment in the Range of 9kHz to 40GHz. "American National standards Institute(ANSI), 1992
- b) C.I.S.P.R "Limits and Methods of Measurement of Radio Interface Characteristics of Information Technology Equipment." International Special committee on Radio Interference.
- c) EN 55022 "Limits and Methods of Measurement of Radio Interface Characteristics of Information Technology Equipment." European Committee for Electrotechnical Standardization. (CENELEC), 1998



# 8. Packing

(1) Label Sample




## (2) Carton Label



## (3) Carton Size

The outside dimension of carton is 767(L) mm \* 270(W) mm \* 490(H) mm.

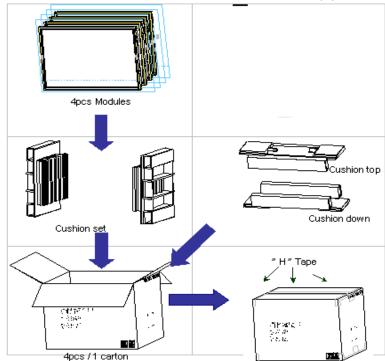



### 9. PRECAUTIONS

Please pay attention to the followings when you use this TFT LCD module.

#### 9-1 MOUNTING PRECAUTIONS

- (1) You must mount a module using holes arranged in four corners and four sides.
- (2) You should consider the mounting structure so that uneven force (ex. Twisted stress) is not applied to module. And the case on which a module is mounted should have sufficient strength so that external force is not transmitted directly to the module.
- (3) Please attach the surface transparent protective plate to the surface in order to protect the polarizer. Transparent protective plate should have sufficient strength in order to the resist external force.
- (4) You should adopt radiation structure to satisfy the temperature specification.
- (5) Acetic acid type and chlorine type materials for the cover case are not desirable because the former generates corrosive gas of attacking the polarizer at high temperature and the latter causes circuit break by electro-chemical reaction.
- (6) Do not touch, push or rub the exposed polarizers with glass, tweezers or anything harder than HB pencil lead. And please do not rub with dust clothes with chemical treatment. Do not touch the surface of polarizer for bare hand or greasy cloth. (Some cosmetics are detrimental to the polarizer.)
- (7) When the surface becomes dusty, please wipe gently with absorbent cotton or other soft materials like chamois soaks with petroleum benzene. Normal-hexane is recommended for cleaning the adhesives used to attach front/ rear polarizers. Do not use acetone, toluene and alcohol because they cause chemical damage to the polarizer.
- (8) Wipe off saliva or water drops as soon as possible. Their long time contact with polarizer causes deformations and color fading.
- (9) Do not open the case because inside circuits do not have sufficient strength.

#### 9-2 OPERATING PRECAUTIONS

- (1) The spike noise causes the mis-operation of circuits. It should be lower than following voltage:  $V=\pm 200 \text{mV}$ (Over and under shoot voltage)
- (2) Response time depends on the temperature. (In lower temperature, it becomes longer..)
- (3) In lower temperature, response time (required time that brightness is stable after turned on) becomes longer and it might effect the brightness.
- (4) Be careful for condensation at sudden temperature change. Condensation makes damage to polarizer or electrical contacted parts. And after fading condensation, smear or spot will occur.
- (5) When fixed patterns are displayed for a long time, remnant image is likely to occur.
- (6) Module has high frequency circuits. Sufficient suppression to the electromagnetic interference shall be done by system manufacturers. Grounding and shielding methods may be important to minimize the interface.

#### 9-3 ELECTROSTATIC DISCHARGE CONTROL

Since a module is composed of electronic circuits, it is not strong to electrostatic discharge. Make certain that treatment persons are connected to ground through wrist band etc. And don't touch interface pin directly.



#### 9-4 PRECAUTIONS FOR STRONG LIGHT EXPOSURE

Strong light exposure causes degradation of polarizer and color filter.

#### 9-5 STORAGE

When storing modules as spares for a long time, the following precautions are necessary.

- (1) Store them in a dark place. Do not expose the module to sunlight or fluorescent light. Keep the temperature between 5°C and 35°C at normal humidity.
- (2) The polarizer surface should not come in contact with any other object. It is recommended that they be stored in the container in which they were shipped.

#### 9-6 HANDLING PRECAUTIONS FOR PROTECTION FILM

- (1) The protection film is attached to the bezel with a small masking tape. When the protection film is peeled off, static electricity is generated between the film and polarizer. This should be peeled off slowly and carefully by people who are electrically grounded and with well ion-blown equipment or in such a condition, etc.
- (2) When the module with protection film attached is stored for a long time, sometimes there remains a very small amount of flue still on the Bezel after the protection film is peeled off.
- (3) You can remove the glue easily. When the glue remains on the Bezel or its vestige is recognized, please wipe them off with absorbent cotton waste or other soft material like chamois soaked with normal-hexane.