

A43L8316

Preliminary

128K X 16 Bit X 2 Banks Synchronous DRAM

Document Title

128K X 16 Bit X 2 Banks Synchronous DRAM

Revision History

Rev. No.History0.0Initial issue

Issue DateFFebruary 15, 2000F

Remark Preliminary



A43L8316

Preliminary

128K X 16 Bit X 2 Banks Synchronous DRAM

Features

- JEDEC standard 3.3V power supply
- LVTTL compatible with multiplexed address
- Dual banks / Pulse RAS
- MRS cycle with address key programs
 - CAS Latency (2,3)
 - Burst Length (1,2,4,8 & full page)
 - Burst Type (Sequential & Interleave)
- All inputs are sampled at the positive going edge of the system clock

General Description


The A43L8316 is 4,194,304 bits synchronous high data rate Dynamic RAM organized as 2 X 131,072 words by 16 bits, fabricated with AMIC's high performance CMOS technology. Synchronous design allows precise cycle control with the use of system clock. I/O transactions are

Pin Configuration

■ TSOP (II)


- Burst Read Single-bit Write operation
- DQM for masking
- Auto & self refresh
- 16ms refresh period (1K cycle)
- 50 Pin TSOP (II)

possible on every clock cycle. Range of operating frequencies, programmable latencies allows the same device to be useful for a variety of high bandwidth, high performance memory system applications.

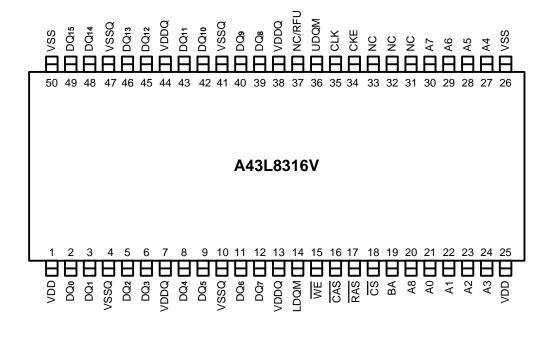



Block Diagram

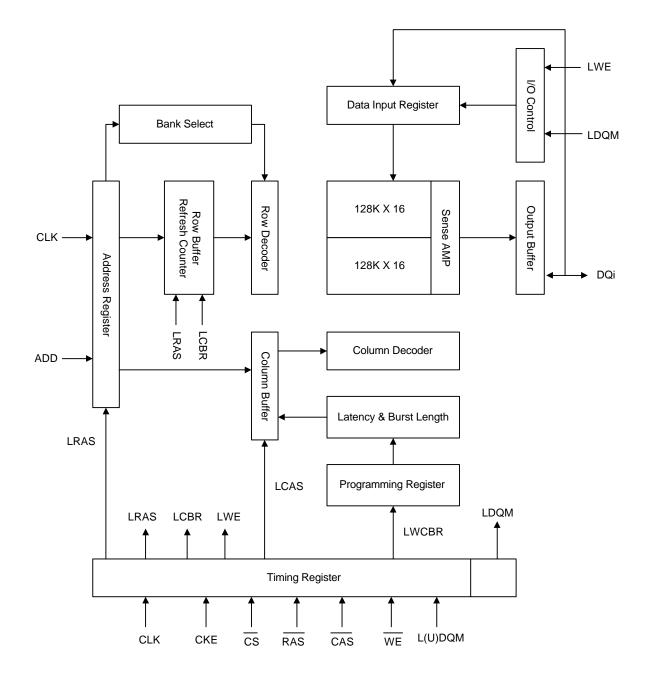



Pin Descriptions

Symbol	Name	Description				
CLK	System Clock	Active on the positive going edge to sample all inputs.				
cs	Chip Select	Disables or Enables device operation by masking or enabling all inputs except CLK, CKE and L(U)DQM				
		Masks system clock to freeze operation from the next clock cycle.				
CKE	Clock Enable	CKE should be enabled at least one clock + tss prior to new command.				
		Disable input buffers for power down in standby.				
A0~A8/AP	Address	Row / Column addresses are multiplexed on the same pins.				
AU~A0/AF	Address	Row address : RA0~RA8, Column address: CA0~CA7				
BA	Bank Select Address	Selects bank to be activated during row address latch time.				
DA	Bank Select Address	Selects band for read/write during column address latch time.				
	Row Address Strobe	Latches row addresses on the positive going edge of the CLK with \overline{RAS} low.				
RAS	Row Address Strobe	Enables row access & precharge.				
	Column Address	Latches column addresses on the positive going edge of the CLK with $\overline{\text{CAS}}$ low.				
CAS	Strobe	Enables column access.				
WE	Write Enable	Enables write operation and Row precharge.				
	Data Input/Output	Makes data output Hi-Z, t SHZ after the clock and masks the output.				
L(U)DQM	Mask	Blocks data input when L(U)DQM active.				
DQ0-15	Data Input/Output	Data inputs/outputs are multiplexed on the same pins.				
VDD/VSS	Power Supply/Ground	Power Supply: +3.3V±0.3V/Ground				
VDDQ/VSSQ	Data Output Power/Ground	Provide isolated Power/Ground to DQs for improved noise immunity.				
NC/RFU	No Connection					

Absolute Maximum Ratings*

*Comments

Permanent device damage may occur if "Absolute Maximum Ratings" are exceeded.

Functional operation should be restricted to recommended operating condition.

Exposure to higher than recommended voltage for extended periods of time could affect device reliability.

DC Electrical Characteristics

Recommend operating conditions (Voltage referenced to VSS = 0V)

Parameter	Symbol	Min	Тур	Мах	Unit	Note	
Supply Voltage	VDD,VDDQ	3.0	3.3	3.6	V		
Input High Voltage	Viн	2.0	3.0	VDD+0.3	V		
Input Low Voltage	Vil	-0.3	0	0.8	V	Note 1	
Output High Voltage	Vон	2.4	2.4 -		V	Іон = -2mA	
Output Low Voltage	Vol	-	-	0.4	V	lo∟ = 2mA	
Input Leakage Current	lı.	-5	-	5	μΑ	Note 2	
Output Leakage Current	lo∟	-5	-	5	μΑ	Note 3	
Output Loading Condition See Figure 1							

Note: 1. VIL (min) = -1.5V AC (pulse width \leq 5ns).

2. Any input 0V \leq VIN \leq VDD + 0.3V, all other pins are not under test = 0V

3. Dout is disabled, $0V \le Vout \le VDD$

Decoupling Capacitance Guide Line

Recommended decoupling capacitance added to power line at board.

Parameter	Symbol	Value	Unit
Decoupling Capacitance between VDD and VSS	Cdc1	0.1 + 0.01	μF
Decoupling Capacitance between VDDQ and VSSQ	Cdc2	0.1 + 0.01	μF

Note: 1. VDD and VDDQ pins are separated each other.

All VDD pins are connected in chip. All VDDQ pins are connected in chip.

2. VSS and VSSQ pins are separated each other

All VSS pins are connected in chip. All VSSQ pins are connected in chip.



DC Electrical Characteristics

(Recommended operating condition unless otherwise noted, $T_A = 0$ to $70^{\circ}C$)

Symbol	Parameter	Test Conditions	CAS	Speed	Unit	Notes	
Symbol	raiameter	Test conditions	Latency	-10	Onic	NOLES	
lcc1	Operating Current	Burst Length = 1	3	90	mA	1	
ICCI	(One Bank Active)	$t_{RC} \ge t_{RC}(min), t_{CC} \ge t_{CC}(min), I_{OL} = 0mA$	2	90		1	
Icc2 P	Precharge Standby	CKE ≤ VIL(max), tcc = 15ns		3	mA		
Icc2 PS	Current in power- down mode	$CKL \leq VIL(max), tcc = \infty$		2	117.		
Icc2N	Precharge Standby Current in non	CKE \ge Vін(min), $\overrightarrow{CS} \ge$ Vін(min), tcc = 15n Input signals are changed one time during		25	mA		
Icc2NS	power-down mode	CKE ≥ VIH(min), CLK ≤ VIL(max), tcc = ∞ Input signals are stable.	6				
Icc3 P	Active Standby	CKE ≤ VIL(max), tcc = 15ns		3	mA		
Icc3 PS	Current in power- down mode	CKE \leq VIL(max), CKE \leq VIL(max) tcc = ∞		2	iii/ (
ІссзN	Active Standby current in non	CKE \ge Vін(min), $\overrightarrow{CS} \ge$ Vін(min), tcc = 15n Input signals are changed one time during		30	mA		
Icc3NS	power-down mode (One Bank Active)	CKE ≥ VIH(min), CLK ≤ VIL(max), tcc = ∞ Input signals are stable.	10				
lcc4	Operating Current	lo∟ = 0mA, Page Burst	3	140			
1004	(Burst Mode)	All bank Activated, tccp = tccp (min)	2	100	mA	1	
				85	mA	2	
lcc5	Refresh Current	trc ≥ trc (min)	2	85	1		
Icc6	Self Refresh Current	CKE ≤ 0.2V	CKE ≤ 0.2V				


Note: 1. Measured with outputs open. Addresses are changed only one time during tcc(min).


2. Refresh period is 64ms. Addresses are changed only one time during tcc(min).

AC Operating Test Conditions

(VDD = 3.3V ± 0.3 V, Ta = 0°C to +70°C)

Parameter	Value
AC input levels	VIH/VIL = 2.4V/0.4V
Input timing measurement reference level	1.4V
Input rise and all time (See note3)	tr/tf = 1ns/1ns
Output timing measurement reference level	1.4V
Output load condition	See Fig.2

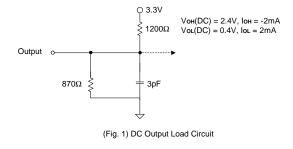



(Fig. 2) AC Output Load Circuit

AC Characteristics

(AC operating conditions unless otherwise noted)

Symbol	Parameter	CAS Latency	-1	0	Unit	Note	
			Min	Max	•		
tcc	CLK cycle time	3	10	1000	ns	1	
		2	15				
tsac	CLK to valid	3	-	8	. ns	1,2	
	Output delay	2	-	10		.,2	
toн	Output data hold time	-	3		ns	2	
tou		3	2.5			2	
tсн	CLK high pulse width	2	3.5	-	ns	3	

AC Characteristics (continued)

(AC operating conditions unless otherwise noted)

Symbol	Parameter	CAS Latency	-4	10	Unit	Note	
-,		,	Min	Мах			
tc∟	CLK low pulse width	3	3.5		20	3	
ICL		2 3.5 - 3 2.5 - 3 1 -	-	ns	5		
tss	Input setup time	3	2.5		ns	3	
155	input setup time	2	2.5	-		3	
tsн	Input hold time	3	1		ns	3	
ISH	Input hold time	2	I	-		5	
ts∟z	CLK to output in Low-Z	3	1	-		2	
ISLZ	CER to output in Low-2	2	I	-	ns	2	
tsнz	CLK to output	3	3	8	ns		
	In Hi-Z	2	3	10			

*All AC parameters are measured from half to half.

- **Note :** 1. Parameters depend on programmed CAS latency.
 - 2. If clock rising time is longer than 1ns, (tr/2-0.5)ns should be added to the parameter.
 - 3. Assumed input rise and fall time (tr & tf) = 1ns.
 - If tr & tf is longer than 1ns, transient time compensation should be considered,
 - i.e., [(tr + tf)/2-1]ns should be added to the parameter.



Operating AC Parameter

(AC operating conditions unless otherwise noted)

Cumhal	Deventer	CAS L storest	Version	l lm it	Nata
Symbol	Parameter	CAS Latency	-10	Unit	Note
tana	Row active to row active delay	3	2	CLK	1
trrd(min)	Row active to row active delay	2	2	ULK	I
toop())		3	3	CLK	1
trcd(min)	RAS to CAS delay	2	5	ULK	I
trp(min)	Row precharge time	3	3	CLK	1
(RP(min)	Now precharge time	2	5	CLK	I
tras(min)		3	6	CLK	1
lRAS(min)	Row active time	2	0	OLIX	I
tRAS(max)	Row active time	3	120		
		2	120	μs	
trc(min)	Row cycle time	3	10	CLK	1
(RC(min)		2	10		I
tcdl(min)	Last data in new col. Address delay	3	1	CLK	2
(CDL(min)	Last data in new col. Address delay	2	Ι	OLK	2
4	Last data in row procharge	3	1	CLK	2
tRDL(min)	Last data in row precharge	2	Ι	CLK	2
4	Last data in to hurst stop	3	1	CLK	2
tBDL(min)	Last data in to burst stop	2	I	ULK	2
toop() :		3	1		
tccd(min)	Col. Address to col. Address delay	2	1	CLK	
Number	f valid output data	3	2	CLK	4
	f valid output data	2	1	CLK	

Note: 1. The minimum number of clock cycles is determined by dividing the minimum time required with clock cycle time and then rounding off to the next higher integer.

2. Minimum delay is required to complete write.

3. All parts allow every cycle column address change.

4. In case of row precharge interrupt, auto precharge and read burst stop.



Simplified Truth Table

	Command		CKEn-1	CKEn	ĊŚ	RAS	CAS	WE	DQM	BA	A8/ AP	A7~A0	Notes
Register	Mode Regis	н	х	L	L	L	L	x	OP CODE		ODE	1,2	
Refresh	efresh Auto Refresh			Н									3
	Self	Entry	Н	L	L	L	L	Н	Х		Х	(3
	Refresh				L	н	Н	Н					3
		Exit	L	н	Н	Х	Х	Х	Х	Х			3
Bank Active &	Bank Active & Row Addr.			Х	L	L	Н	Н	Х	V	Ro	w Addr.	4
Read & Column Addr.	Auto Precha Auto Precha	н	х	L	н	L	н	x	V	L	Column Addr.	4	
Write & Column Addr.	Auto Precha	н	x	L	н	L	L	x	V	L	Column Addr.	4	
Burst Stop			Н	Х	L	н	Н	L	Х		Х	(6
Precharge	Bank Select Both Banks		н	х	L	L	н	L	x	V X	L	х	
		Entry			L	н	н	Н	V				
Clock Suspen Active Power		,	Н	L	Н	Х	Х	Х	Х		Х	(
	Down	Exit	L	Н	Х	Х	Х	Х	Х				
		Entry	н	L	L	Н	Н	Н	x				
Precharge Pov	wer Down Mo	-			Н	Х	Х	Х	~		х	(
		Exit	L	н	L	V	V	V	x			-	
					Н	Х	Х	Х					
DQM			Н			Х	[V		Х	(7
No Operation	Command		н	х	L H	H X	H X	H X	х		Х	(

(V = Valid, X = Don't Care, H = Logic High, L = Logic Low)

Note : 1. OP Code : Operand Code

- A0~A8/AP,BA : Program keys. (@MRS)
- 2. MRS can be issued only at both banks precharge state.
- A new command can be issued after 2 clock cycle of MRS.
- Auto refresh functions as same as CBR refresh of DRAM. The automatical precharge without Row precharge command is meant by "Auto". Auto/Self refresh can be issued only at both precharge state.
- 4. BA : Bank select address.
 - If "Low" at read, write, Row active and precharge, bank A is selected.
 - If "High" at read, write, Row active and precharge, bank B is selected.
 - If A8/AP is "High" at Row precharge, BA is ignored and both banks are selected.
- 5. During burst read or write with auto precharge, new read write command cannot be issued. Another bank read write command can be issued at every burst length.
- 6. Burst stop command is valid at every burst length.
- 7. DQM sampled at positive going edge of a CLK masks the data-in at the very CLK (Write DQM latency is 0),
 - but makes the data-out Hi-Z state after 2 CLK cycles. (Read DQM latency is 2)





Mode Register Filed Table to Program Modes

Register Programmed with MRS

Address	BA	A8	A7	A6	A5	A4	A3	A2	A1	A0
Function	RFU	Т	Ν	C	CAS Latenc	у	BT	Burst Length		

(Note 1) (Note 2)

		Test Mode	CAS Latency			В	urst Type	Burst Length					
A 8	A7	Туре	A6	A5	A4	Latency	A3	Туре	A2	A1	A0	BT=0	BT=1
0	0	Mode Register Set	0	0	0	Reserved	0	Sequential	0	0	0	1	Reserved
0	1	Vendor	0	0	1	-	1	Interleave	0	0	1	2	Reserved
1	0	Use	0	1	0	2			0	1	0	4	4
1	1	Only	0	1	1	3			0	1	1	8	8
	Writ	e Burst Length	1	0	0	Reserved			1	0	0	Reserved	Reserved
ВА		Length	1	0	1	Reserved			1	0	1	Reserved	Reserved
0		Burst	1	1	0	Reserved			1	1	0	Reserved	Reserved
1		Single Bit	1	1	1	Reserved			1	1	1	256(Full)	Reserved

(Note 3)

Power Up Sequence

- 1. Apply power and start clock, Attempt to maintain CKE = "H", DQM = "H" and the other pins are NOP condition at inputs.
- 2. Maintain stable power, stable clock and NOP input condition for a minimum of 200 µs.
- 3. Issue precharge commands for all banks of the devices.
- 4. Issue 2 or more auto-refresh commands.
- 5. Issue a mode register set command to initialize the mode register.

cf.) Sequence of 4 & 5 may be changed.

The device is now ready for normal operation.

Note: 1. RFU(Reserved for Future Use) should stay "0" during MRS cycle.

- 2. If BA is high during MRS cycle, "Burst Read Single Bit Write" function will be enabled.
- 3. The full column burst (256bit) is available only at Sequential mode of burst type.



Burst Sequence (Burst Length = 4)

Initial a	address		Sagu	ontial		Interleave				
A1	A0		Sequ	ential						
0	0	0	1	2	3	0	1	2	3	
0	1	1	2	3	0	1	0	3	2	
1	0	2	3	0	1	2	3	0	1	
1	1	3	0	1	2	3	2	1	0	

Burst Sequence (Burst Length = 8)

Initia	al add	ress				Com	ontial				Interleave							
A2	A1	A0		Sequential								interleave						
0	0	0	0	1	2	3	4	5	6	7	0	1	2	3	4	5	6	7
0	0	1	1	2	3	4	5	6	7	0	1	0	3	2	5	4	7	6
0	1	0	2	3	4	5	6	7	0	1	2	3	0	1	6	7	4	5
0	1	1	3	4	5	6	7	0	1	2	3	2	1	0	7	6	5	4
1	0	0	4	5	6	7	0	1	2	3	4	5	6	7	0	1	2	3
1	0	1	5	6	7	0	1	2	3	4	5	4	7	6	1	0	3	2
1	1	0	6	7	0	1	2	3	4	5	6	7	4	5	2	3	0	1
1	1	1	7	0	1	2	3	4	5	6	7	6	5	4	3	2	1	0



Device Operations

Clock (CLK)

The clock input is used as the reference for all SDRAM operations. All operations are synchronized to the positive going edge of the clock. The clock transitions must be monotonic between VIL and VIH. During operation with CKE high all inputs are assumed to be in valid state (low or high) for the duration of set up and hold time around positive edge of the clock for proper functionality and ICC specifications.

Clock Enable (CLK)

The clock enable (CKE) gates the clock onto SDRAM. If CKE goes low synchronously with clock (set-up and hold time same as other inputs), the internal clock is suspended form the next clock cycle and the state of output and burst address is frozen as long as the CKE remains low. All other inputs are ignored from the next clock cycle after CKE goes low. When both banks are in the idle state and CKE goes low synchronously with clock, the SDRAM enters the power down mode form the next clock cycle. The SDRAM remains in the power down mode ignoring the other inputs as long as CKE remains low. The power down exit is synchronous as the internal clock is suspended. When CKE goes high at least "tSS + 1 CLOCK" before the high going edge of the clock, then the SDRAM becomes active from the same clock edge accepting all the input commands.

Bank Select (BA)

This SDRAM is organized as two independent banks of 131,072 words X 16 bits memory arrays. The BA inputs is latched at the time of assertion of \overline{RAS} and \overline{CAS} to select the bank to be used for the operation. When BA is asserted low, bank A is selected. When BA is asserted high, bank B is selected. The bank select BA is latched at bank activate, read, write mode register set and precharge operations.

Address Input (A0 ~ A8/AP)

The 17 address bits required to decode the 131,072 word locations are multiplexed into 9 address input pins (A0~A8/AP). The 11 bit row address is latched along with \overline{RAS} and BA during bank activate command. The 8 bit column address is latched along with \overline{CAS} , \overline{WE} and BA during read or write command.

NOP and Device Deselect

When \overline{RAS} , \overline{CAS} and \overline{WE} are high, the SDRAM performs no operation (NOP). NOP does not initiate any new operation, but is needed to complete operations which require more than single clock like bank activate, burst read, auto refresh, etc. The device deselect is also a NOP

and is entered by asserting \overline{CS} high. \overline{CS} high disables the command decoder so that \overline{RAS} , \overline{CAS} and \overline{WE} , and all the address inputs are ignored.

Power-Up

The following sequence is recommended for POWER UP

- 1. Power must be applied to either CKE and DQM inputs to pull them high and other pins are NOP condition at the inputs before or along with VDD (and VDDQ) supply. The clock signal must also be asserted at the same time.
- After VDD reaches the desired voltage, a minimum pause of 200 microseconds is required with inputs in NOP condition.
- 3. Both banks must be precharged now.
- 4. Perform a minimum of 2 Auto refresh cycles to stabilize the internal circuitry.
- 5. Perform a MODE REGISTER SET cycle to program the CAS latency, burst length and burst type as the default value of mode register is undefined.

At the end of one clock cycle from the mode register set cycle, the device is ready for operation.

When the above sequence is used for Power-up, all the out-puts will be in high impedance state. The high impedance of outputs is not guaranteed in any other power-up sequence.

cf.) Sequence of 4 & 5 may be charged.

Mode Register Set (MRS)

The mode register stores the data for controlling the various operation modes of SDRAM. It programs the CAS latency, addressing mode, burst length, test mode and various vendor specific options to make SDRAM useful for variety of different applications. The default value of the mode register is not defined, therefore the mode register must be written after power up to operate the SDRAM. The mode register is written by asserting low on \overline{CS} , \overline{RAS} ,

 \overline{CAS} , \overline{WE} (The SDRAM should be in active mode with CKE already high prior to writing the mode register). The state of address pins A0~A8/AP and BA in the same cycle

as $\overline{\text{CS}}$, $\overline{\text{RAS}}$, $\overline{\text{CAS}}$, $\overline{\text{WE}}$ going low is the data written in the mode register. One clock cycle is required to complete the write in the mode register. The mode register contents can be changed using the same command and clock cycle requirements during operation as long as both banks are in the idle state. The mode register is divided into various fields depending on functionality. The burst length field uses A0~A2, burst type uses A3, addressing mode uses A4~A6, A7~A8/AP and BA are used for vendor specific options or test mode. And the write burst length is programmed using BA. A7~A8/AP and BA must be set to low for normal SDRAM operation.

Refer to table for specific codes for various burst length, addressing modes and CAS latencies.





Device Operations (continued)

Bank Activate

The bank activate command is used to select a random row in an idle bank. By asserting low on RAS and CS with desired row and bank addresses, a row access is initiated. The read or write operation can occur after a time delay of tRCD(min) from the time of bank activation. tRCD(min) is an internal timing parameter of SDRAM, therefore it is dependent on operating clock frequency. The minimum number of clock cycles required between bank activate and read or write command should be calculated by dividing tRCD(min) with cycle time of the clock and then rounding off the result to the next higher integer. The SDRAM has two internal banks on the same chip and shares part of the internal circuitry to reduce chip area, therefore it restricts the activation of both banks immediately. Also the noise generated during sensing of each bank of SDRAM is high requiring some time for power supplies recover before the other bank can be sensed reliably. trrp(min) specifies the minimum time required between activating different banks. The number of clock cycles required between different bank activation must be calculated similar to tRCD specification. The minimum time required for the bank to be active to initiate sensing and restoring the complete row of dynamic cells is determined by tras(min) specification before a precharge command to that active bank can be asserted. The maximum time any bank can be in the active state is determined by tras(max). The number of cycles for both tras(min) and tras(max) can be calculated similar to trcd specification.

Burst Read

The burst read command is used to access burst of data on consecutive clock cycles from an active row in an active bank. The burst read command is issued by asserting low on CS and \overline{CAS} with WE being high on the positive edge of the clock. The bank must be active for at least tRCD(min) before the burst read command is issued. The first output appears CAS latency number of clock cycles after the issue of burst read command. The burst length. burst sequence and latency from the burst read command is determined by the mode register which is already programmed. The burst read can be initiated on any column address of the active row. The address wraps around if the initial address does not start from a boundary such that number of outputs from each I/O are equal to the burst length programmed in the mode register. The output goes into high-impedance at the end of the burst, unless a new burst read was initiated to keep the data output gapless. The burst read can be terminated by issuing another burst read or burst write in the same bank or the other active bank or a precharge command to the same bank. The burst stop command is valid at every page burst lenath.

Burst Write

The burst write command is similar to burst read command, and is used to write data into the SDRAM consecutive clock cycles in adjacent addresses depending on burst length and burst sequence. By asserting low on CS, CAS and WE with valid column address, a write burst is initiated. The data inputs are provided for the initial address in the same clock cycle as the burst write command. The input buffer is deselected at the end of the burst length, even though the internal writing may not have been completed yet. The writing can not complete to burst length. The burst write can be terminated by issuing a burst read and DQM for blocking data inputs or burst write in the same or the other active bank. The burst stop command is valid only at full page burst length where the writing continues at the end of burst and the burst is wrap around. The write burst can also be terminated by using DQM for blocking data and precharging the bank "trol" after the last data input to be written into the active row. See DQM OPERATION also.

DQM Operation

The DQM is used to mask input and output operation. It works similar to \overline{OE} during read operation and inhibits writing during write operation. The read latency is two cycles from DQM and zero cycle for write, which means DQM masking occurs two cycles later in the read cycle and occurs in the same cycle during write cycle. DQM operation is synchronous with the clock, therefore the masking occurs for a complete cycle. The DQM signal is important during burst interrupts of write with read or precharge in the SDRAM. Due to asynchronous nature of the internal write, the DQM operation is critical to avoid unwanted or incomplete writes when the complete burst write is not required.

Precharge

The precharge operation is performed on an active bank by asserting low on \overline{CS} , \overline{RAS} , \overline{WE} and A8/AP with valid BA of the bank to be precharged. The precharge command can be asserted anytime after tras(min) is satisfied from the bank activate command in the desired bank. "trp" is defined as the minimum time required to precharge a bank. The minimum number of clock cycles required to complete row precharge is calculated by dividing "trp" with clock cycle time and rounding up to the next higher integer. Care should be taken to make sure that burst write is completed or DQM is used to inhibit writing before precharge command is asserted. The maximum time any bank can be active is specified by tras(max). Therefore, each bank has to be precharged within tRAS(max) from the bank activate command. At the end of precharge, the bank enters the idle state and is ready to be activated again. Entry to Power Down, Auto refresh, Self refresh and Mode

Entry to Power Down, Auto refresh, Self refresh and Mode register Set etc, is possible only when both banks are in idle state.



Device Operations (continued)

Auto Precharge

The precharge operation can also be performed by using auto precharge. The SDRAM internally generates the timing to satisfy $t_{RAS}(min)$ and " t_{RP} " for the programmed burst length and CAS latency. The auto precharge command is issued at the same time as burst read or burst write by asserting high on A8/AP. If burst read or burst write command is issued with low on A8/AP, the bank is left active until a new command is asserted. Once auto precharge command is given, no new commands are possible to that particular bank until the bank achieves idle state.

Both Banks Precharge

Both banks can be precharged at the same time by using Precharge all command. Asserting low on \overline{CS} , \overline{RAS} and

 $\overline{\text{WE}}$ with high on A8/AP after both banks have satisfied tras(min) requirement, performs precharge on both banks. At the end of tRP after performing precharge all, both banks are in idle state.

Auto Refresh

The storage cells of SDRAM need to be refreshed every 16ms to maintain data. An auto refresh cycle accomplishes refresh of a single row of storage cells. The internal counter increments automatically on every auto refresh cycle to refresh all the rows. An auto refresh command is issued by asserting low on \overline{CS} , \overline{RAS} and \overline{CAS} with high on CKE and \overline{WE} . The auto refresh command can only be asserted with both banks being in idle state and the device is not in power down mode (CKE is high in the previous cycle). The time required to complete the auto refresh

operation is specified by "trc(min)". The minimum number of clock cycles required can be calculated by driving "trc" with clock cycle time and then rounding up to the next higher integer. The auto refresh command must be followed by NOP's until the auto refresh operation is completed. Both banks will be in the idle state at the end of auto refresh operation. The auto refresh is the preferred refresh mode when the SDRAM is being used for normal data transactions. The auto refresh cycle can be performed once in 15.6us or a burst of 1024 auto refresh cycles once in 16ms.

Self Refresh

The self refresh is another refresh mode available in the SDRAM. The self refresh is the preferred refresh mode for data retention and low power operation of SDRAM. In self refresh mode, the SDRAM disables the internal clock and all the input buffers except CKE. The refresh addressing and timing is internally generated to reduce power consumption.


The self refresh mode is entered from all banks idle state by asserting low on \overline{CS} , \overline{RAS} , \overline{CAS} and CKE with high on \overline{WE} . Once the self refresh mode is entered, only CKE state being low matters, all the other inputs including clock are ignored to remain in the self refresh.

The self refresh is exited by restarting the external clock and then asserting high on CKE. This must be followed by NOP's for a minimum time of "trc" before the SDRAM reaches idle state to begin normal operation. If the system uses burst auto refresh during normal operation, it is recommended to used burst 1024 auto refresh cycles immediately after exiting self refresh.




Basic feature And Function Descriptions

1. CLOCK Suspend

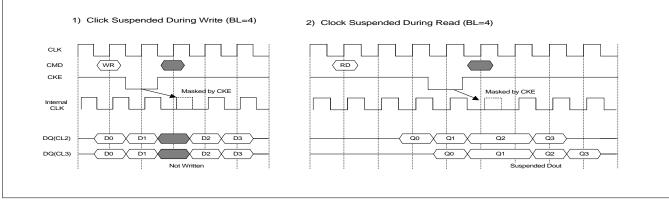

Note: CLK to CLK disable/enable=1 clock


2. DQM Operation

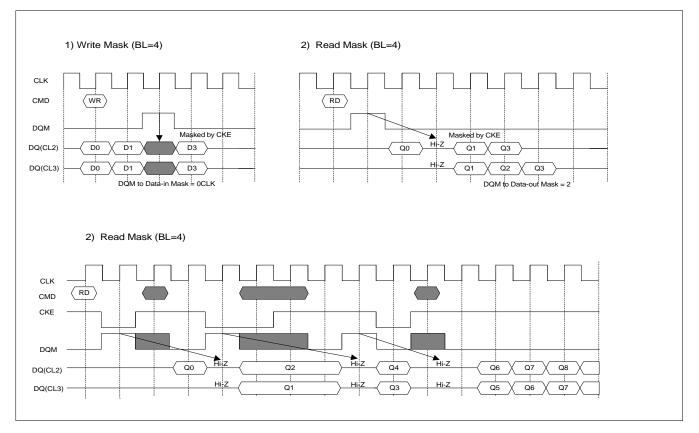

* Note: 1. DQM makes data out Hi-Z after 2 clocks which should masked by CKE "L".
2. DQM masks both data-in and data-out.




3. CAS Interrupt (I)

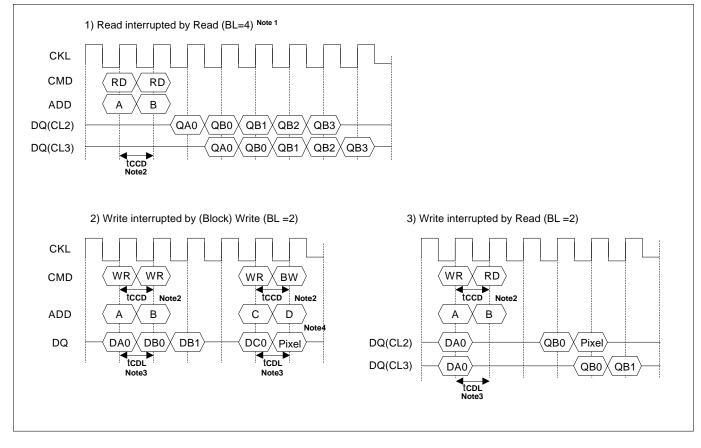

- Note : 1. By "Interrupt", It is possible to stop burst read/write by external command before the end of burst.
 - By "CAS Interrupt", to stop burst read/write by CAS access; read, write and block write.
 - 2. tccb: \overline{CAS} to \overline{CAS} delay. (=1CLK)
 - 3. tCDL : Last data in to new column address delay. (= 1CLK).



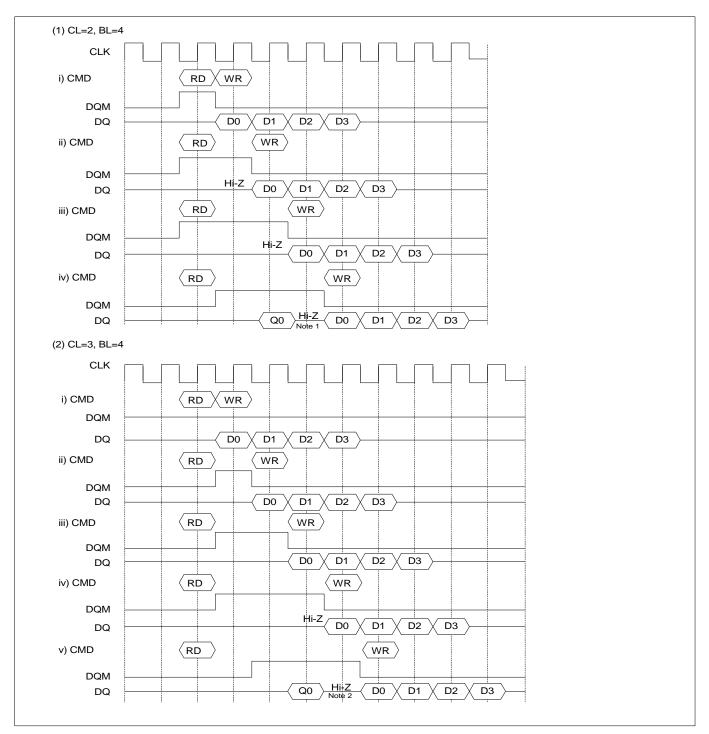


4. CAS Interrupt (II) : Read Interrupted Write & DQM

* Note : 1. To prevent bus contention, there should be at least one gap between data in and data out.

2. To prevent bus contention, DQM should be issued which makes a least one gap between data in and data out.




5. Write Interrupted by Precharge & DQM

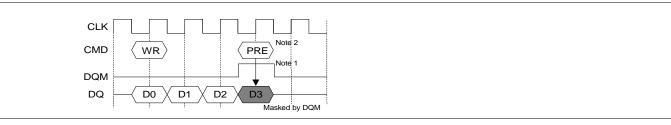


Note : 1. To inhibit invalid write, DQM should be issued.

2. This precharge command and burst write command should be of the same bank, otherwise it is not precharge interrupt but only another bank precharge of dual banks operation.

6. Precharge

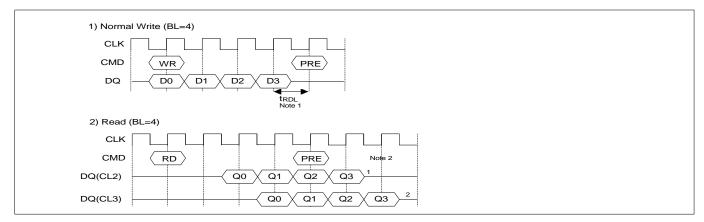

7. Auto Precharge

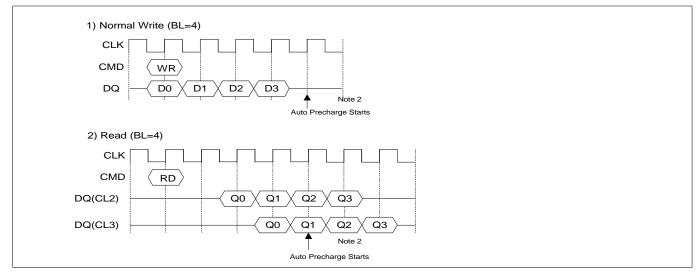


* Note : 1. Number of valid output data after Row Precharge : 1,2 for CAS Latency = 2,3 respectively.

- 2. The row active command of the precharge bank can be issued after tRP from this point.
 - The new read/write command of other active bank can be issued from this point.


At burst read/write with auto precharge, \overline{CAS} interrupt of the same/another bank is illegal.



8. Burst Stop & Precharge Interrupt

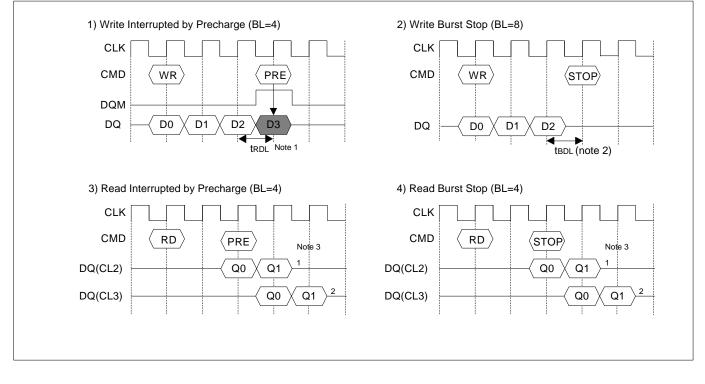

9. MRS

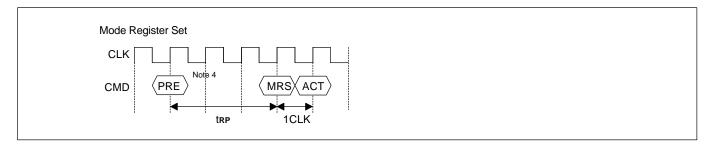


Note : 1.troL : 1CLK, Last Data in to Row Precharge.


- 2. tBDL : 1CLK, Last Data in to Burst Stop Delay.
- 3. Number of valid output data after Row precharge or burst stop : 1,2 for CAS latency=2,3 respectively.
- 4. PRE : Both banks precharge if necessary.
- MRS can be issued only at all bank precharge state.



10. Clock Suspend Exit & Power Down Exit

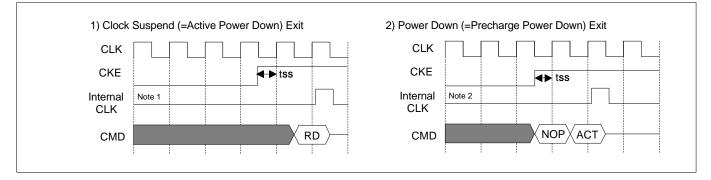

11. Auto Refresh & Self Refresh

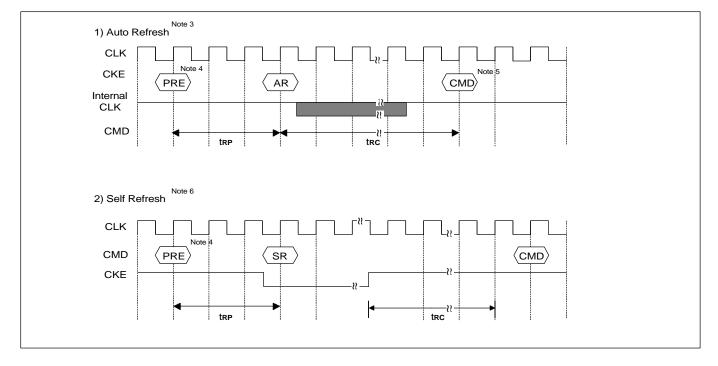

- * Note : 1. Active power down : one or more bank active state.
 - 2. Precharge power down : both bank precharge state.
 - The auto refresh is the same as CBR refresh of conventional DRAM. No precharge commands are required after Auto Refresh command. During trc from auto refresh command, any other command can not be accepted.
 - 4. Before executing auto/self refresh command, both banks must be idle state.
 - 5. MRS, Bank Active, Auto/Self Refresh, Power Down Mode Entry.
 - 6. During self refresh mode, refresh interval and refresh operation are performed internally. After self refresh entry, self refresh mode is kept while CKE is LOW. During self refresh mode, all inputs expect CKE will be don't cared, and outputs will be in Hi-Z state. During trc from self refresh exit command, any other command can not be accepted. Before/After self refresh mode, burst auto refresh cycle (1024K cycles) is recommended.

AMIC

12. About Burst Type Control


	Convertial counting	At MRS A3="0". See the BURST SEQUENCE TABE.(BL=4,8)
Basic	Sequential counting	BL=1,2,4,8 and full page wrap around.
MODE		At MRS A3=" 1". See the BURST SEQUENCE TABE.(BL=4,8)
	Interleave counting	BL=4,8 At BL=1,2 Interleave Counting = Sequential Counting
		At MRS A3 = "1". (See to Interleave Counting Mode)
		Starting Address LSB 3 bits A0-2 should be "000" or "111".@BL=8.
		if LSB = "000" : Increment Counting.
		if LSB= "111" : Decrement Counting.
	Pseudo-	For Example, (Assume Addresses except LSB 3 bits are all 0, BL=8)
	Decrement Sequential	@ write, LSB="000", Accessed Column in order 0-1-2-3-4-5-6-7
	Counting	@ read, LSB="111", Accessed Column in order 7-6-5-4-3-2-1-0
		At BL=4, same applications are possible. As above example, at Interleave
		Counting mode, by confining starting address to some values, Pseudo-
		Decrement Counting Mode can be realized. See the BURST SEQUENCE
Pseudo-		TABLE carefully.
MODE		At MRS A3 = "0". (See to Sequential Counting Mode)
		A0-2 = "111". (See to Full Page Mode)
		Using Full Page Mode and Burst Stop Command, Binary Counting Mode can be
		realized.
	Pseudo-Binary Counting	@ Sequential Counting Accessed Column in order 3-4-5-6-7-1-2-3 (BL=8)
		@ Pseudo-Binary Counting,
		Accessed Column in order 3-4-5-6-7-8-9-10 (Burst Stop command)
		Note. The next column address of 256 is 0
Random	Random column Access	Every cycle Read/Write Command with random column address can realize
MODE	tccp = 1 CLK	Random Column Access.
WODE		That is similar to Extended Data Out (EDO) Operation of convention DRAM.

13. About Burst Length Control


	1	At MRS A2,1,0 = "000".				
	1	At auto precharge, tRAS should not be violated.				
	2	At MRS A2,1,0 = "001".				
Basic	2	At auto precharge, tRAS should not be violated.				
MODE	4	At MRS A2,1,0 = "010"				
	8	At MRS A2,1,0 = "011".				
		At MRS A2,1,0 = "111".				
	Full Page	Wrap around mode (Infinite burst length) should be stopped by burst stop,				
		RAS interrupt or CAS interrupt.				
Onesial		At MRS BA="1".				
Special	BRSW	Read burst = 1,2,4,8, full page/write Burst =1				
MODE		At auto precharge of write, tRAS should not be violated.				
Random	Durat Stor	tBDL=1, Valid DQ after burst stop is 1,2 for CL=2,3 respectively				
MODE	Burst Stop	Using burst stop command, it is possible only at full page burst length.				
		Before the end of burst, Row precharge command of the same bank				
	RAS Interrupt	Stops read/write burst with Row precharge.				
	(Interrupted by Precharge)	tRDL=1 with DQM, valid DQ after burst stop is 1,2 for CL=2,3 respectively				
Interrupt		During read/write burst with auto precharge, RAS interrupt cannot be issued.				
MODE		Before the end of burst, new read/write stops read/write burst and starts new				
	CAS Interrupt	read/write burst or block write.				
		During read/write burst with auto precharge, \overline{CAS} interrupt can not be issued.				



Power On Sequence & Auto Refresh

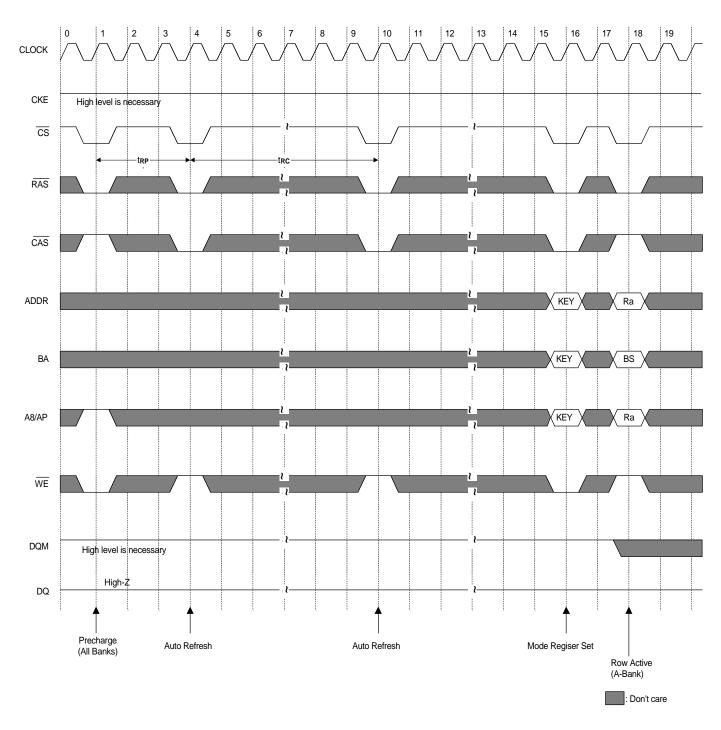



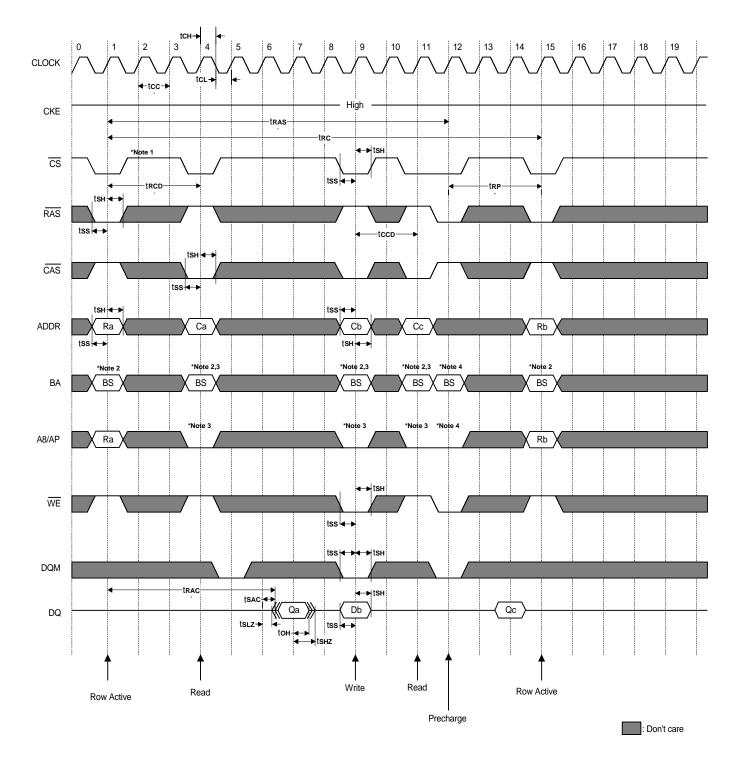

Single Bit Read-Write-Read Cycles (Same Page) @CAS Latency=3, Burst Length=1



* Note : 1. All inputs can be don't care when \overline{CS} is high at the CLK high going edge.

2. Bank active & read/write are controlled by BA.

BA	Active & Read/Write
0	Bank A
1	Bank B


3. Enable and disable auto precharge function are controlled by A8/AP in read/write command.

A8/AP	ВА	Operation
0	0	Disable auto precharge, leave bank A active at end of burst.
0	1	Disable auto precharge, leave bank B active at end of burst.
1	0	Enable auto precharge, precharge bank A at end of burst.
1	1	Enable auto precharge, precharge bank B at end of burst.

4. A8/AP and BA control bank precharge when precharge command is asserted.

A8/AP	ВА	Precharge
0	0	Bank A
0	1	Bank B
1	Х	Both Bank



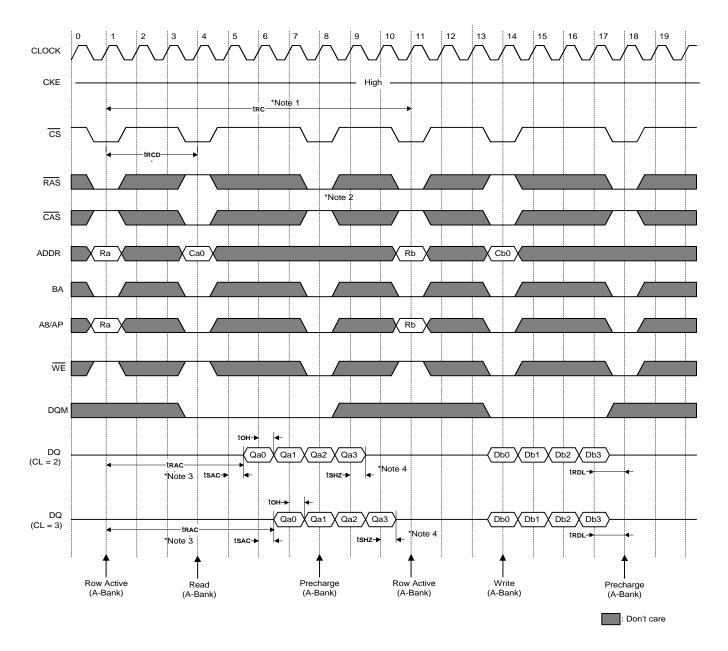


Read & Write Cycle at Same Bank @Burst Length=4

*Note: 1. Minimum row cycle times is required to complete internal DRAM operation.

- 2. Row precharge can interrupt burst on any cycle. [CAS latency-1] valid output data available after Row enters precharge. Last valid output will be Hi-Z after tsHz from the clock.
- 3. Access time from Row address. tcc*(trcp + CAS latency-1) + tsac
- 4. Output will be Hi-Z after the end of burst. (1,2,4 & 8)

At Full page bit burst, burst is wrap-around.




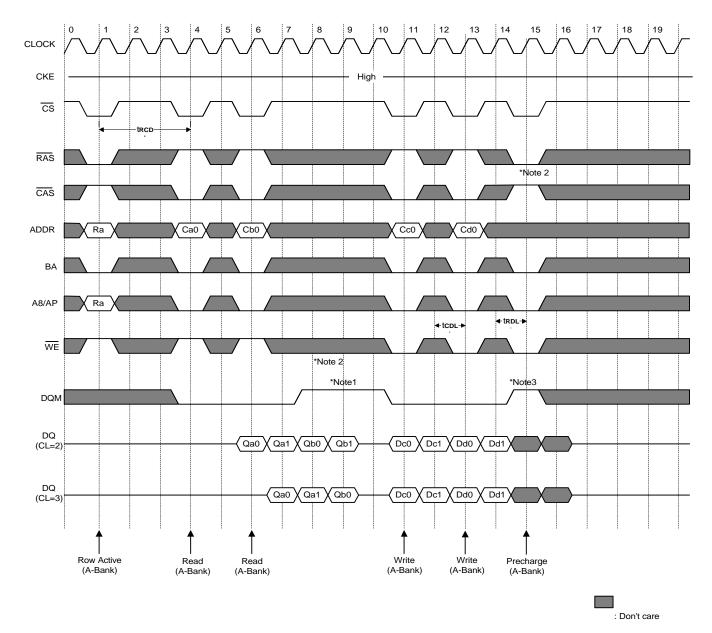

Page Read & Write Cycle at Same Bank @Burst Length=4

- *Note: 1. To write data before burst read ends, DQM should be asserted three cycle prior to write command to avoid bus contention.
 - 2. Row precharge will interrupt writing. Last data input, tRDL before Row precharge, will be written.
 - 3. DQM should mask invalid input data on precharge command cycle when asserting precharge before end of burst. Input data after Row precharge cycle will be masked internally.



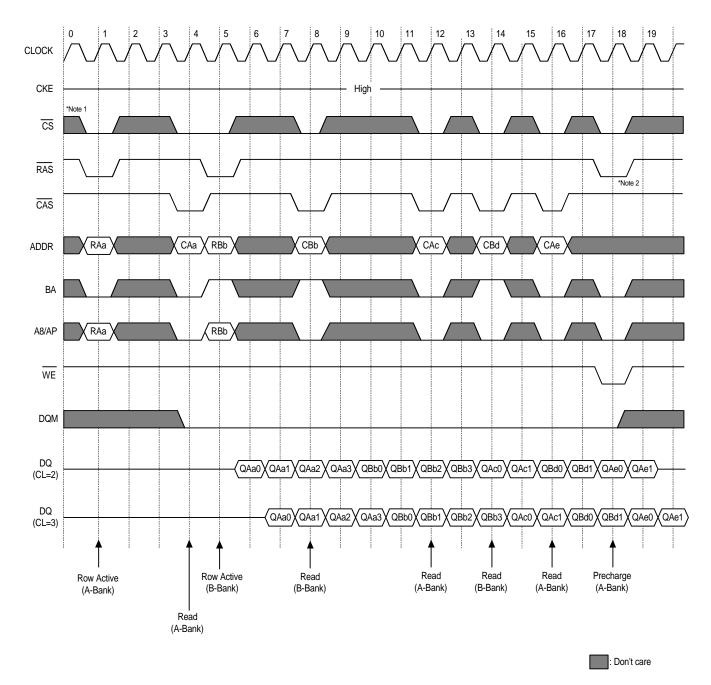


Page Read Cycle at Different Bank @Burst Length = 4

* Note : 1. \overline{CS} can be don't care when \overline{RAS} , \overline{CAS} and \overline{WE} are high at the clock high going edge.

2. To interrupt a burst read by row precharge, both the read ad the precharge banks must be the same.



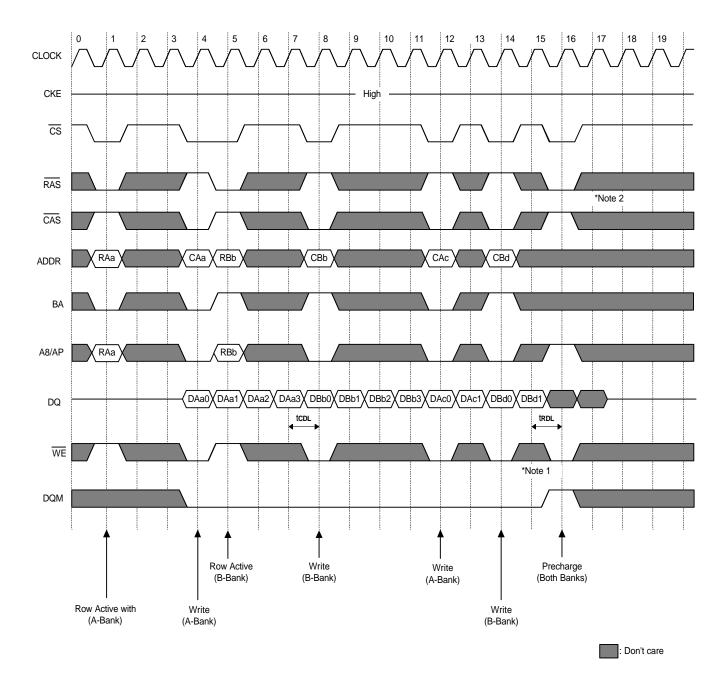


Page Write Cycle at Different Bank @Burst Length=4

* Note:

- 1. To interrupt burst write by Row precharge, DQM should be asserted to mask invalid input data.
- 2. To interrupt burst write by Row precharge, both the write and precharge banks must be the same.




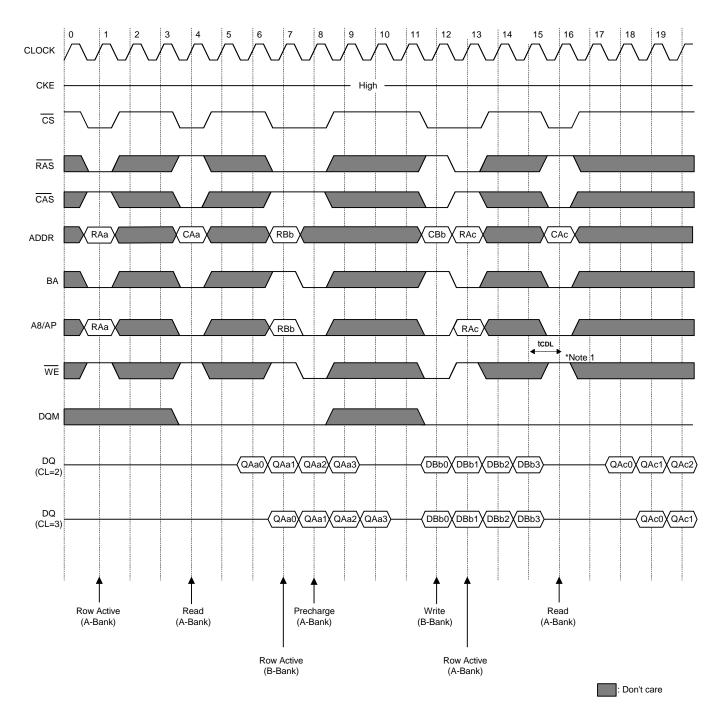

Read & Write Cycle at Different Bank @Burst Length=4


* Note : tcpL should be met to complete write.



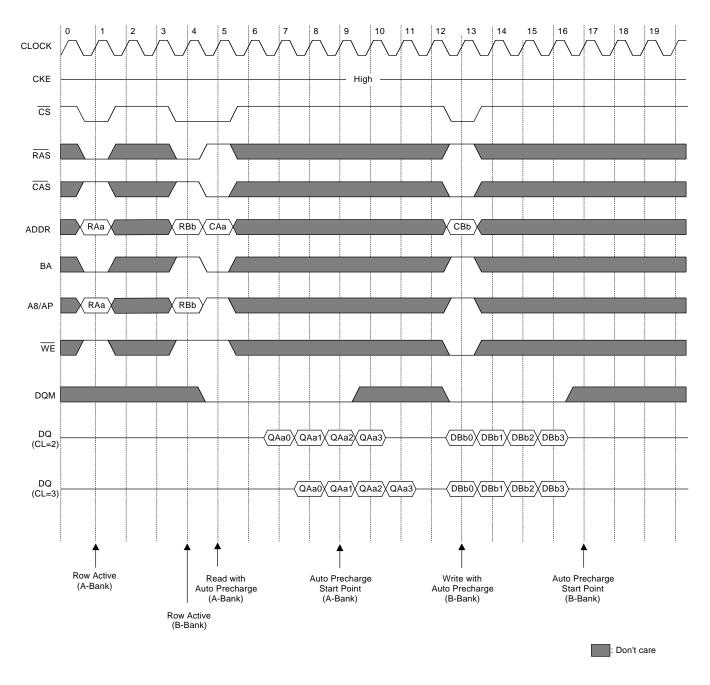

Read & Write Cycle with Auto Precharge I @Burst Length=4

*Note : tRCD should be controlled to meet minimum tRAS before internal precharge start. (In the case of Burst Length=1 & 2, BRSW mode)

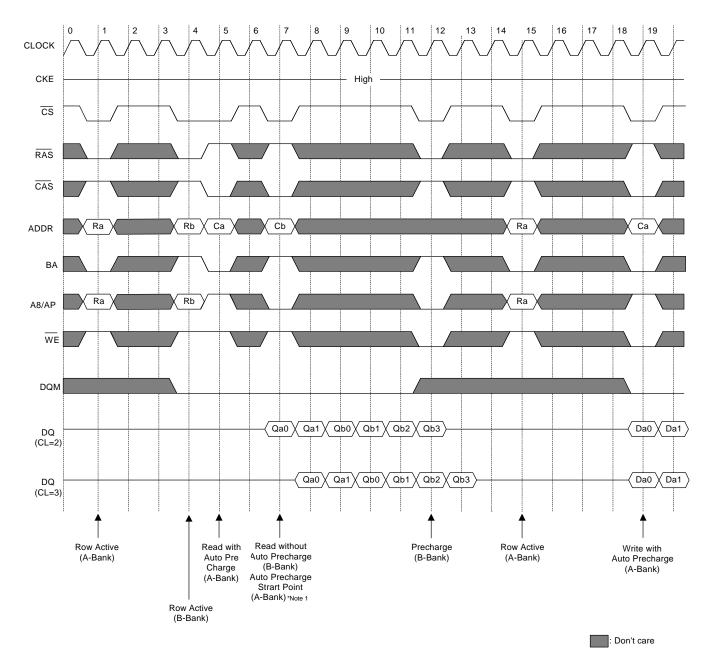


Read & Write Cycle with Auto Precharge II @Burst Length=4

MIC

* Note : When Read(Write) command with auto precharge is issued at A-Bank after A and B Bank activation.

- if read(Write) command without auto precharge is issued at B-Bank before A Bank auto precharge starts, A Bank auto precharge will start at B Bank read command input point.
- Any command can not be issued at A Bank during tRP after A Bank auto precharge starts.

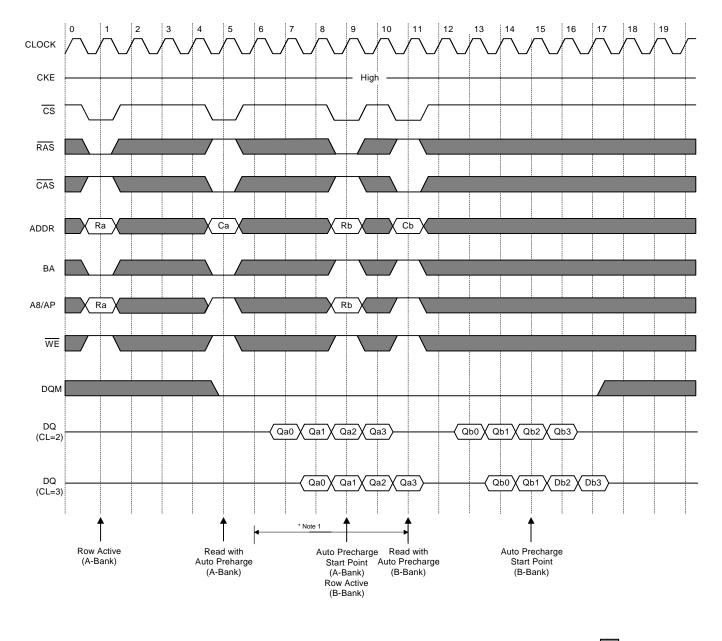


Read & Write Cycle with Auto Precharge III @Burst Length=4

: Don't care

* Note : Any command to A-bank is not allowed in this period. tRP is determined from at auto precharge start point




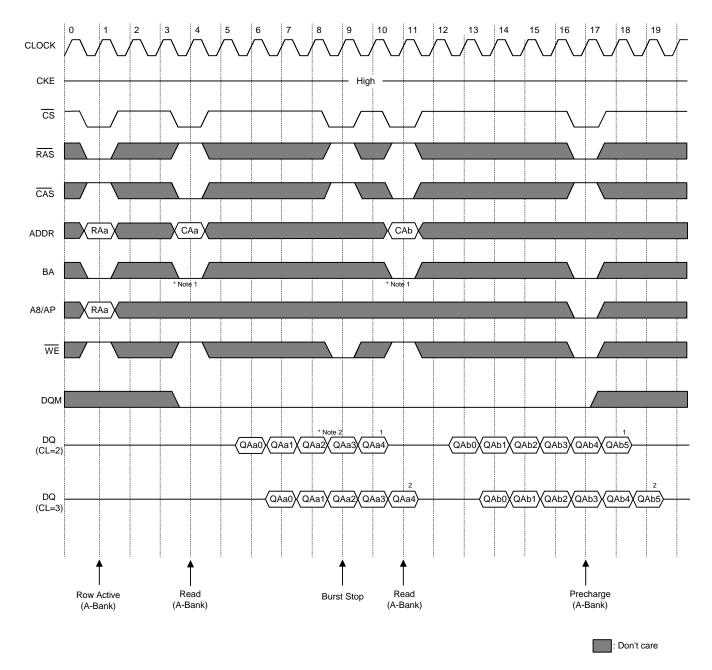

Read Interrupted by Precharge Command & Read Burst Stop Cycle (@Burst Length = Full Page)

- * Note : 1. At full page mode, burst is wrap-around at the end of burst. So auto precharge is impossible.
 - 2. About the valid DQ's after burst stop, it is same as the case of \overline{RAS} interrupt. Both cases are illustrated above timing diagram. See the label 1,2 on them. But at burst write, burst stop and \overline{RAS} interrupt should be compared carefully. Refer the timing diagram of "Full page write burst stop cycle".
 - 3. Burst stop is valid at every burst length.



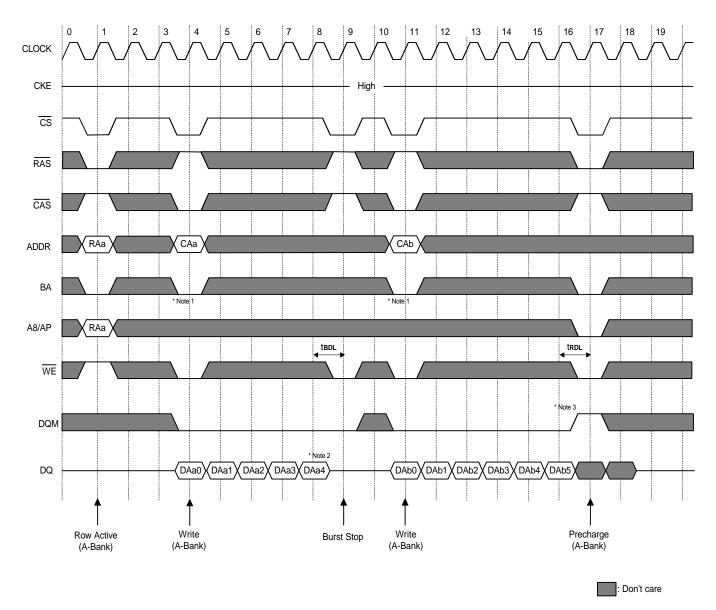


Write Interrupted by Precharge Command & Write Burst Stop Cycle (@ Burst Length = Full Page)

* Note : 1. At full page mode, burst is wrap-around at the end of burst. So auto precharge is impossible.

- Data-in at the cycle of burst stop command cannot be written into corresponding memory cell. It is defined by AC parameter of tBDL(=1CLK).
- 3. Data-in at the cycle of interrupted by precharge cannot be written into the corresponding memory cell. It is defined by AC parameter of tRDL(1=CLK). DQM at write interrupted by precharge command is needed to ensure tRDL of 1CLK. DQM should mask invalid input data on precharge command cycle when asserting precharge before end of burst. Input data after Row precharge cycle will be masked internally.
- 4. Burst stop is valid only at every burst length.



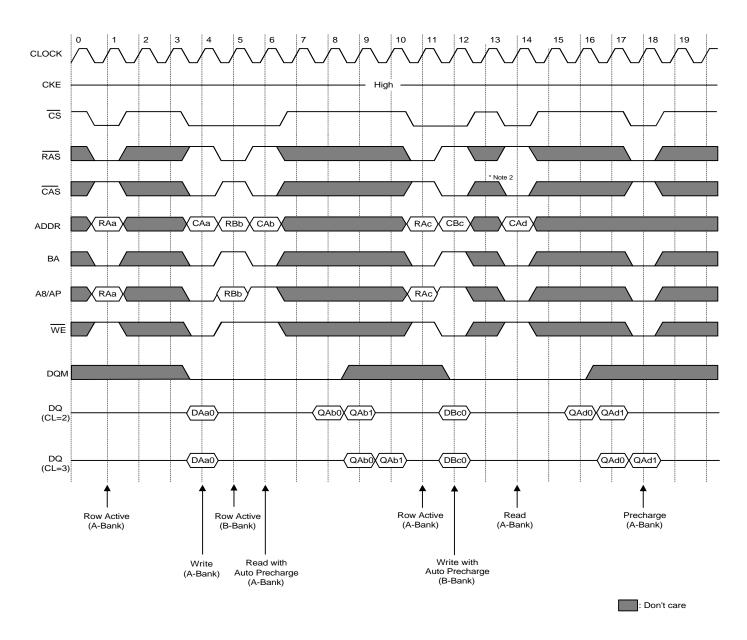


Burst Read Single Bit Write Cycle @Burst Length=2, BRSW

* Note : 1. BRSW mode is enabled by setting BA "High" at MRS (Mode Register Set).

At the BRSW Mode, the burst length at write is fixed to "1" regardless of programed burst length.

 When BRSW write command with auto precharge is executed, keep it in mind that tRAS should not be violated. Auto precharge is executed at the burst-end cycle, so in the case of BRSW write command, The next cycle starts the precharge.




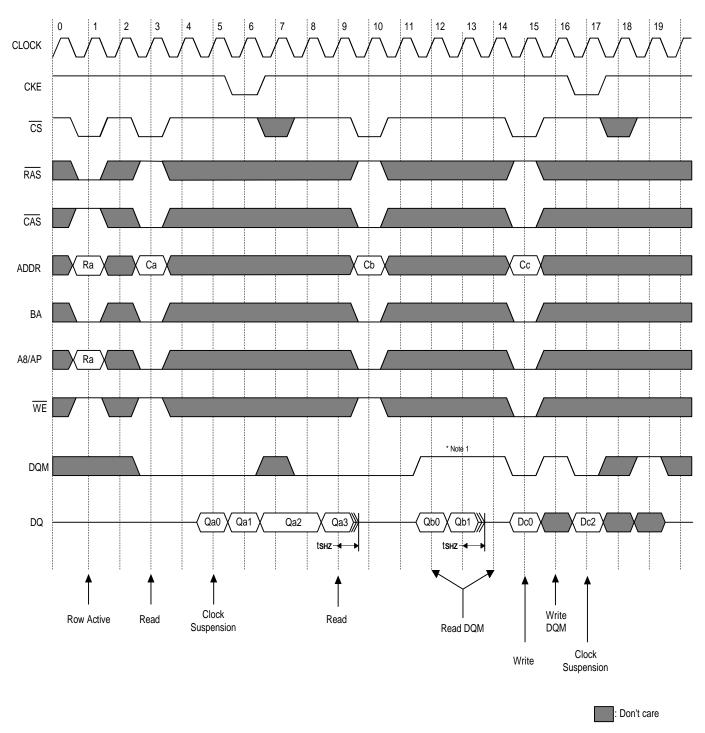

Clock Suspension & DQM Operation Cycle @CAS Latency = 2, Burst Length=4

 * Note : DQM needed to prevent bus contention.



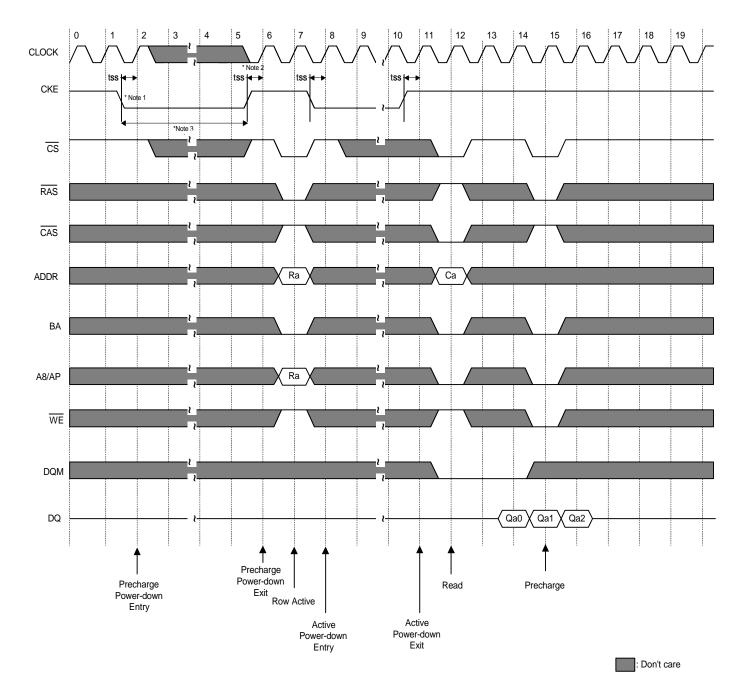

Active/Precharge Power Down Mode @CAS Lantency=2, Burst Length=4


* Note : 1. All banks should be in idle state prior to entering precharge power down mode.

2. CKE should be set high at least "1CLK + tss" prior to Row active command.

3. Cannot violate minimum refresh specification. (16ms)



Self Refresh Entry & Exit Cycle

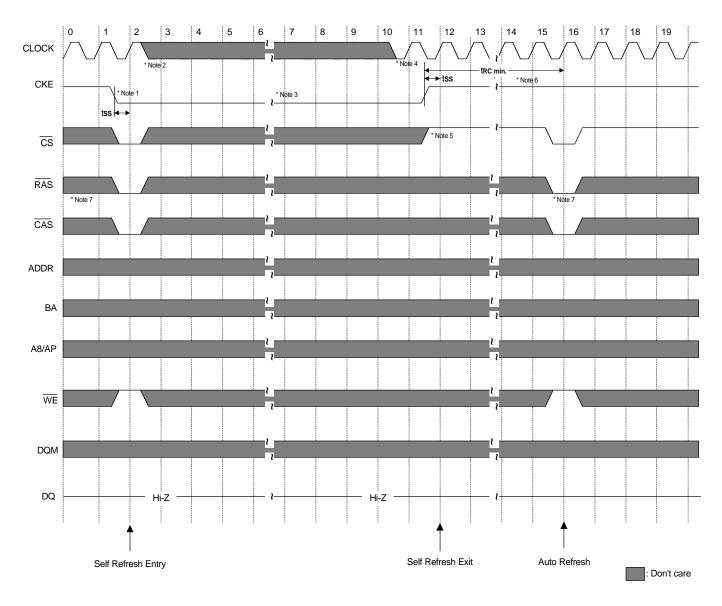

* Note : TO ENTER SELF REFRESH MODE


- 1. \overline{CS} , \overline{RAS} & \overline{CAS} with CKE should be low at the same clock cycle.
- 2. After 1 clock cycle, all the inputs including the system clock can be don't care except for CKE.
- 3. The device remains in self refresh mode as long as CKE stays "Low".
 - (cf.) Once the device enters self refresh mode, minimum tRAS is required before exit from self refresh.
- **TO EXIT SELF REFRESH MODE** 4. System clock restart and be stable before returning CKE high.
- 5. \overline{CS} starts from high.
- 6. Minimum tRC is required after CKE going high to complete self refresh exit.
- 7. 1K cycle of burst auto refresh is required before self refresh entry and after self refresh exit. If the system uses burst refresh.





Mode Register Set Cycle

Auto Refresh Cycle

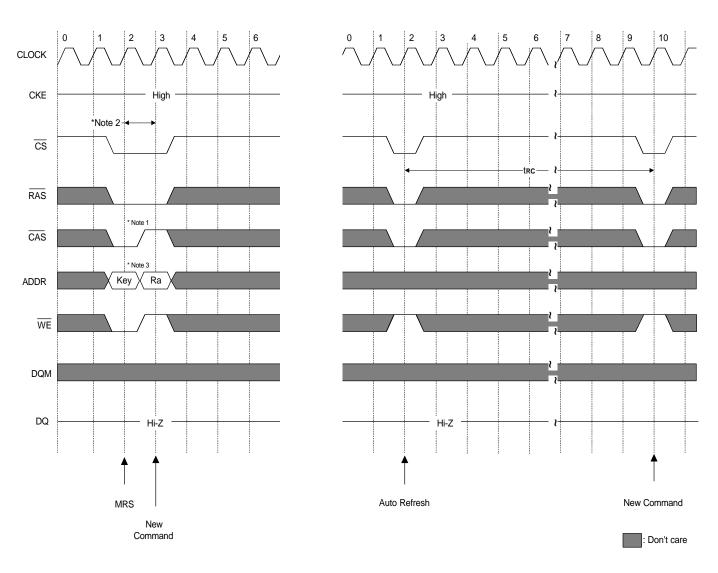

* Both banks precharge should be completed before Mode Register Set cycle and auto refresh cycle.

MODE REGISTER SET CYCLE

- * Note : 1. CS, RAS, CAS & WE activation at the same clock cycle with address key will set internal mode register.
 - 2. Minimum 2 clock cycles should be met before new \overline{RAS} activation.
 - 3. Please refer to Mode Register Set table.



Function Truth Table (Table 1)

Current State	CS	RAS	CAS	WE	BA	Address	Action	Note
	Н	Х	Х	Х	Х	Х	NOP	
	L	Н	Н	Н	Х	Х	NOP	
	L	Н	Н	L	Х	Х	ILLEGAL	2
	L	Н	L	Х	BA	CA, A8/AP	ILLEGAL	2
IDLE	L	L	Н	Н	BA	RA	Row Active; Latch Row Address	
	L	L	Н	L	BA	PA	NOP	4
	L	L	L	Н	Х	Х	Auto Refresh or Self Refresh	5
	L	L	L	L	(OP Code	Mode Register Access	5
	H	Х	Х	Х	Х	Х	NOP	
	L	Н	Н	Н	Х	Х	NOP	
Row	L	Н	Н	L	Х	Х	ILLEGAL	2
Active	L	Н	L	Н	BA	CA,A8/AP	Begin Read; Latch CA; Determine AP	
	L	Н	L	L	BA	CA,A8/AP	Begin Write; Latch CA; Determine AP	
	L	L	Н	Н	BA	RA	ILLEGAL	2
	L	L	Н	L	BA	PA	Precharge	
	L	L	L	Х	Х	Х	ILLEGAL	
	Н	Х	Х	Х	Х	Х	NOP(Continue Burst to End \rightarrow Row Active)	
	LH		Н	Н	Х	Х	NOP(Continue Burst to End \rightarrow Row Active)	
	L	Н	Н	L	Х	Х	Term burst →Row Active	
Read	L	Н	L	Н	BA	CA,A8/AP	Term burst; Begin Read; Latch CA; Determine AP	3
	L	Н	L	L	BA	CA,AP	Term burst; Begin Write; Latch CA; Determine AP	3
	L	L	Н	Н	BA	RA	ILLEGAL	2
	L	L	Н	L	BA	PA	Term Burst; Precharge timing for Reads	3
	L	L	L	Х	Х	Х	ILLEGAL	
	Н	Х	Х	Х	Х	Х	NOP(Continue Burst to End→Row Active)	
	L	Н	Н	Н	Х	Х	NOP(Continue Burst to End→Row Active)	
	L	Н	Н	L	Х	Х	ILLEGAL	
Write	L	Н	L	Н	BA	CA,A8/AP	Term burst; Begin Read; Latch CA; Determine AP	3
	L	Н	L	L	BA	CA,A8/AP	Term burst; Begin Read; Latch CA; Determine AP	3
	L	L	Н	Н	BA	RA	ILLEGAL	2
	L	L	Н	L	BA	A8/AP	Term Burst; Precharge timing for Writes	3
	L	L	L	Х	Х	Х	ILLEGAL	
	Н	Х	Х	Х	Х	Х	NOP(Continue Burst to End→Precharge)	
.	L	Н	Н	Н	Х	Х	NOP(Continue Burst to End→Precharge)	
Read with Auto	L	Н	Н	L	Х	Х	ILLEGAL	
Precharge	L	Н	L	Н	BA	CA,A8/AP	ILLEGAL	2
	L	Н	L	L	BA	CA,A8/AP	ILLEGAL	2
	L	L	Н	Х	BA	RA, PA	ILLEGAL	
	L	L	L	Х	Х	X	ILLEGAL	2



Current State	cs	RAS	CAS	WE	ВА	Address	Action	Note
	Н	Х	Х	Х	Х	Х	NOP(Continue Burst to End→Precharge)	
	L	Н	Н	Н	Х	Х	NOP(Continue Burst to End→Precharge)	
Write with	L	Н	Н	L	Х	Х	ILLEGAL	
Auto	L	Н	L	Н	BA	CA,A8/AP	ILLEGAL	2
Precharge	L	H	L	L	BA	CA,A8/AP	ILLEGAL	2
	L	L	Н	Х	BA	RA, PA	ILLEGAL	
	L	L	L	Х	Х	Х	ILLEGAL	2
	Н	Х	Х	Х	Х	Х	NOP→Idle after tr₽	
	L	Н	Н	Н	Х	Х	NOP→Idle after t℞₽	
	L	Н	Н	L	Х	Х	ILLEGAL	
Precharge	L	Н	L	Х	BA	CA,A8/AP	ILLEGAL	2
	L	L	Н	Н	BA	RA	ILLEGAL	2
	L	L	Н	L	BA	PA	NOP→Idle after t℞₽	2
	L	L	L	Х	Х	Х	ILLEGAL	4
	Н	Х	Х	Х	Х	Х	NOP→Row Active after trcd	
	L	Н	Н	Н	Х	Х	NOP→Row Active after trcd	
Row	L	Н	Н	L	Х	Х	ILLEGAL	
Activating	L	Н	L	Х	BA	CA,A8/AP	ILLEGAL	2
	L	L	Н	Н	BA	RA	ILLEGAL	2
	L	L	Н	L	BA	PA	ILLEGAL	2
	L	L	L	Х	Х	Х	ILLEGAL	2
	Н	Х	Х	Х	Х	Х	NOP→Idle after trc	
	L	Н	Н	Х	Х	Х	NOP→Idle after t₨	
Refreshing	L	Н	L	Х	Х	Х	ILLEGAL	
	L	L	Н	Х	Х	Х	ILLEGAL	
	L	L	L	Х	Х	Х	ILLEGAL	

Function Truth Table (Table 1, Continued)

Abbreviations

RA = Row Address NOP = No Operation Command BA = Bank Address CA = Column Address AP = Auto Precharge PA = Precharge All

Note: 1. All entries assume that CKE was active (High) during the preceding clock cycle and the current clock cycle.

- 2. Illegal to bank in specified state : Function may be legal in the bank indicated by BA, depending on the state of that bank.
- 3. Must satisfy bus contention, bus turn around, and/or write recovery requirements.

4. NOP to bank precharging or in idle state. May precharge bank indicated by BA (and PA).

5. Illegal if any banks is not idle.

Function Truth Table for CKE (Table 2)

Current	CKE	CKE	CS	RAS	CAS	WE	Address	Action	Note
State	n-1	n	V	X	X	V	X		
	H	X	X	X	X	X	X	INVALID	
	L	Н	Н	Х	Х	Х	Х	Exit Self Refresh→ABI after tRc	6
Self	L	Н	L	Н	Н	Н	Х	Exit Self Refresh→ABI after tRc	6
Refresh	L	Н	L	Н	Н	L	Х	ILLEGAL	
	L	Н	L	Н	L	Х	Х	ILLEGAL	
	L	Н	L	L	Х	Х	Х	ILLEGAL	
	L	L	Х	Х	Х	Х	Х	NOP(Maintain Self Refresh)	
	Н	Х	Х	Х	Х	Х	Х	INVALID	
Both	L	Н	H	Х	Х	Х	Х	Exit Power Down→ABI	7
Bank	L	Н	L	Н	Н	Н	Х	Exit Power Down→ABI	7
Precharge Power	L	Н	L	Н	Н	L	Х	ILLEGAL	
Down	L	Н	L	Н	L	Х	Х	ILLEGAL	
	L	Н	L	L	Х	Х	Х	ILLEGAL	
	L	L	Х	Х	Х	Х	Х	NOP(Maintain Power Down Mode)	
	Н	Н	Х	Х	Х	Х	Х	Refer to Table 1	
	Н	L	Н	Х	Х	Х	Х	Enter Power Down	8
	Н	L	L	Н	Н	Н	Х	Enter Power Down	8
All	Н	L	L	Н	Н	L	Х	ILLEGAL	
Banks Idle	Н	L	L	Н	L	Х	Х	ILLEGAL	
luie	Н	L	L	L	Н	Х	Х	ILLEGAL	
	Н	L	L	L	L	Н	Х	Enter Self Refresh	8
	Н	L	L	L	L	L	Х	ILLEGAL	
	L	L	Х	Х	Х	Х	Х	NOP	
Any State	Н	Н	Х	Х	Х	Х	Х	Refer to Operations in Table 1	
Other than	Н	L	Х	Х	Х	Х	Х	Begin Clock Suspend next cycle	9
Listed	L	Н	Х	Х	Х	Х	Х	Exit Clock Suspend next cycle	9
Above	L	L	Х	Х	Х	Х	Х	Maintain clock Suspend	

Abbreviations : ABI = All Banks Idle

- Note: 6. After CKE's low to high transition to exit self refresh mode. And a time of trc(min) has to be elapse after CKE's low to high transition to issue a new command.
 - 7. CKE low to high transition is asynchronous as if restarts internal clock. A minimum setup time "tSS + one clock" must be satisfied before any command other than exit.
 - 8. Power-down and self refresh can be entered only from the all banks idle state.
 - 9. Must be a legal command.



Ordering Information


Part No.	Cycle Time (ns)	Clock Frequency (MHz)	Access Time	Package
A43L8316V-10	10	100	8 ns @ CL = 3	50 TSOP (II)



Package Information

TSOP 50L (Type II) Outline Dimensions

unit: inches/mm

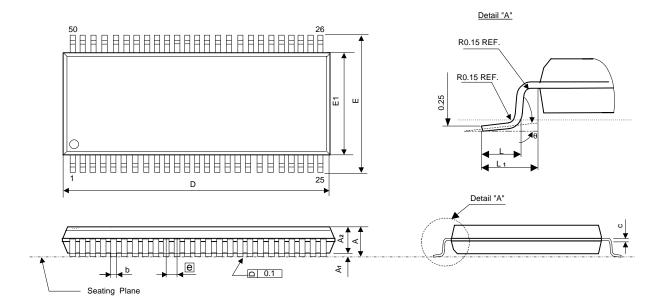

	Dimen	isions in i	nches	Dimensions in mm			
Symbol	Min	Nom	Max	Min	Nom	Max	
А	-	-	0.047	-	-	1.20	
A1	0.002	-	-	0.05	-	0.15	
A2	0.037	0.040	0.041	0.95	1.00	1.05	
b	0.012	-	0.018	0.30	-	0.45	
С	0.005	-	0.008	0.12	-	0.21	
D	0.821	0.825	0.829	20.855	20.955	21.055	
E	0.455	0.463	0.471	11.56	11.76	11.96	
E1	0.396	0.400	0.404	10.06	10.16	10.26	
е	-	0.031	-	-	0.800	-	
L	0.016	0.020	0.024	0.40	0.50	0.60	
L1	(0.031 REF		0.80 REF			
θ	0°	-	5°	0°	-	5°	

Notes:

1. The maximum value of dimension D includes end flash.

2. Dimension E does not include resin fins.

3. Dimension S includes end flash.