

BV1 - Phase sequence relay

5=5

Application

Supervision of phase loss, phase sequence and undervoltage in three-phase systems.

Function

Relay *BV1* measures amplitude and angle of three phase voltages. The angle of the phasors determine the phase sequence. Unbalance and phase loss are detected by the measurement of amplitude and angle. The undervoltage trip setting is 70 % of Un fixed. The underfrequency element trips if the frequency falls below 45 Hz.

Technical data

rated voltage Un: 110 V, 230 V, 400 V AC

frequency range: 45 - 66 Hz hysteresis: 2% Un

power consumption: 3 VA (4 VA BA1-400)

thermal load carrying

capacity: continuously 1,3 x Un

returning time: 700 ms

minimum operating

time: 700 ms

Output relays:

max. breaking capacity

ohmic: 250 V AC/120 W DC inductive: 500 V AC/75 W DC

rated current: 5 A making current (16ms): 20 A

System data:

regulations: VDE 0435 Teil 303

temperature range at

storage and operation: - 25°C bis + 70°C

Mechanical stress:

shock: class 1 acc. to DIN IEC 255-21-2 vibration: class 1 acc. to DIN IEC 255-21-1

degree of protection: IP 40 at closed front cover

weight: approx. 0,5 kg

mounting position: any

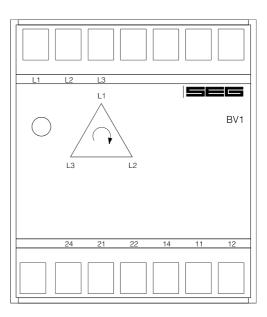


Fig. 1: Front plate

The unit *BV1* is designed to be fastened onto a DIN-rail acc. to DIN EN 50022 same as all units of the *BASIC LINE*.

The front plate of the unit is protected with a sealable transparent cover (IP40).

Please remove the transparent cover with a screw driver to adjust the relay.

LED

LED is used to indicate operation without fault with steady light. At tripping or underfrequency the LED extinguishes.

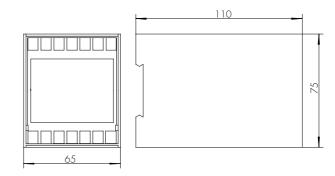


Fig. 2: Dimensional drawing of BV1



TB BV1 03.97 E www.DataSheet4U.com

Auxiliary voltage supply

The unit *BV1* needs no separate auxiliary voltage supply. The supply voltage can be formed directly from the measuring quantity.

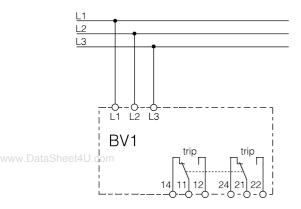


Fig. 3: Connection diagram

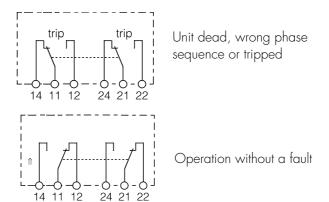


Fig. 4: Contact positions

Connection terminals

The connection up to a maximum of $2 \times 2,5 \text{ mm}^2$ cross-section conductors is possible. For this procedure the transparent cover of the unit has to be removed.

Order key:



2 www.DataSheet4U.com

www.DataSheet4LL.com

TB BV1 O3.97 E www.DataSheet4U.com

..... D-4-01---4411





Woodward SEG GmbH & Co. KG

Krefelder Weg 47 · D – 47906 Kempen (Germany)
Postfach 10 07 55 (P.O.Box) · D – 47884 Kempen (Germany)
Phone: +49 (0) 21 52 145 1

Internet

Homepage http://www.woodward-seg.com Documentation http://doc.seg-pp.com

Sales

Phone: +49 (0) 21 52 145 635 · Telefax: +49 (0) 21 52 145 354 e-mail: kemp.electronics@woodward.com

Service

Phone: +49 (0) 21 52 145 614 · Telefax: +49 (0) 21 52 145 455

e-mail: kemp.pd@woodward.com