


A New High-performance Controller: High Resolution, High Speed, and High Input Accuracy. Logic Operations and Preventive Maintenance Function. Plus Infrared Port on Front Panel.

- High-resolution display with 5 digits/0.01°C display.
- High-speed sampling cycle of 60 ms.
- High Accuracy
Thermocouple/Pt input: $\pm 0.1\%$ of PV
Analog input: $\pm 0.1\%$ FS
- Universal inputs on all models (thermocouple, PT, or analog input) to handle various sensors with one Controller. Models also available with Remote SP.
- A PV/SV-status display function can be set to automatically alternate between displaying the status of the Temperature Controller (auto/manual, RUN/STOP, and alarms) and the PV or SV.
- Flexible contact outputs with logic operations (AND, OR, and delays) set from the Support Software (CX-Thermo Ver. 4.0)
- Preventive maintenance for relays in the Temperature Controller using a Control Output ON/OFF Counter.
- Model available with position-proportional control



⚠ Refer to *Safety Precautions for E5□□/E5□□-H*.
Refer to *Operation for E5□□/E5□□-H* for operating procedures.

Main I/O Functions

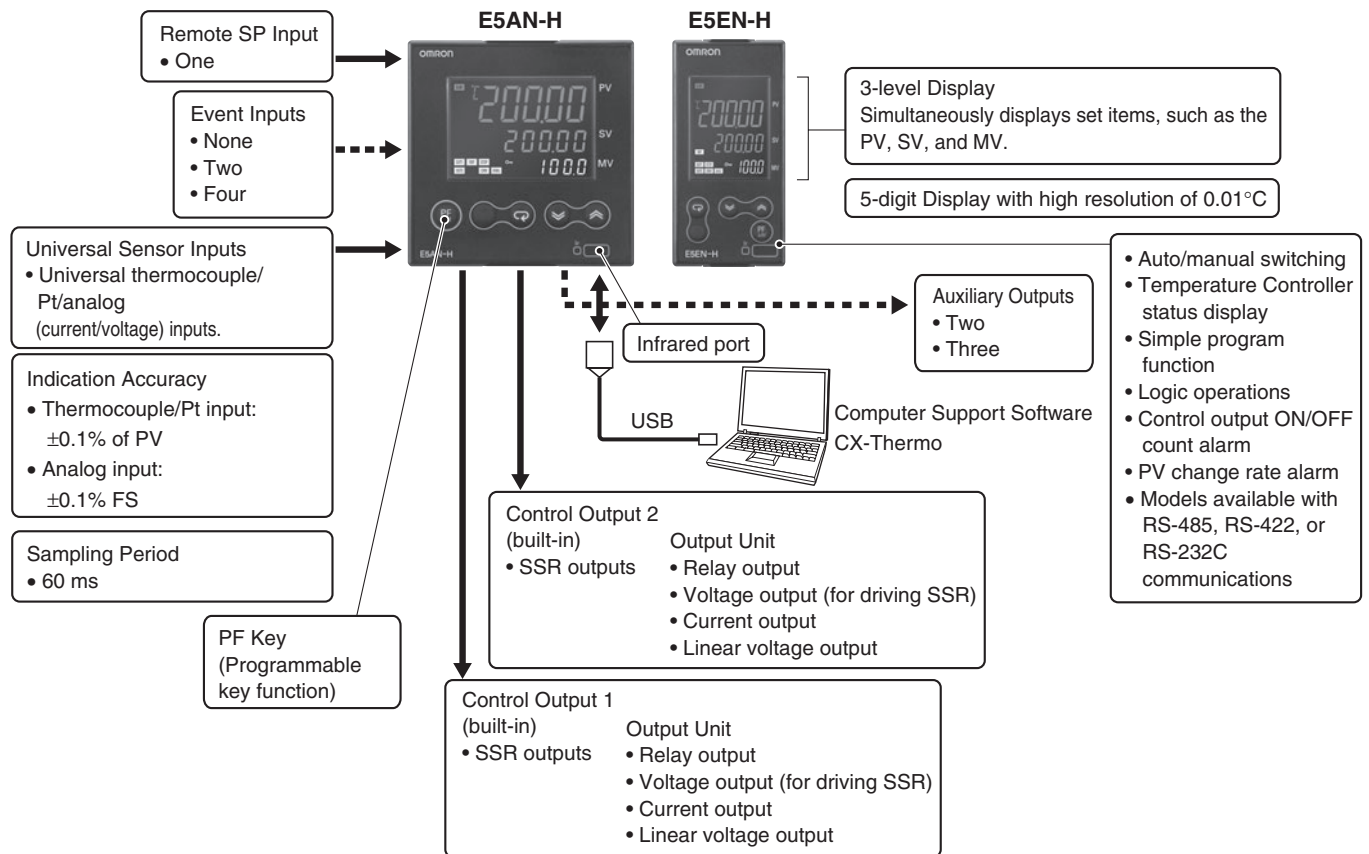

Lineup



Note: The Controller can be used for heating/cooling control even if only 1 control output is used.

Model Number Structure

Model Number Legend

Controllers

E5AN/E5EN- M - -500

1 2 3 4 5 6 7 8 9 10 11

1. Type

H: Advanced

2. Control Mode

Blank: Standard or heating/cooling control
P: Position-proportional control

3. Control Output 1

A: Control Output Unit
R: Relay output
S: SSR output

4. Control Output 2

A: Control Output Unit
R: Relay output
S: SSR output

5. Auxiliary Outputs

2: Two outputs
3: Three outputs

6. Option 1

Blank: None
H: Heater burnout/SSR failure/Heater overcurrent detection (CT1)
HH: Heater burnout/SSR failure/Heater overcurrent detection (CT2)

7. Option 2

B: Two event inputs
BF: Event input + Transfer output

8. Option 3

M: Option Unit can be mounted.

9. Power Supply Voltage

Blank: 100 to 240 VAC
D: 24 VAC/VDC

10. Case Color

Blank: Black
W: Silver

11. Terminal Cover

-500: With Terminal Cover

Option Units

E53-

1

1. Function

EN01: RS-232C communications
EN02: RS-422 communications
EN03: RS-485 communications
AKB: Event input

Output Units

E53-

1 2

1. Control Output

R: Relay output
Q: Voltage output (for driving SSR)
Q3: Voltage output (for driving SSR) + 24 VDC (NPN)
Q4: Voltage output (for driving SSR) + 24 VDC (PNP)
C3: Current output + 4 to 20 mA DC
C3D: Current output + 0 to 20 mA DC
V34: Linear voltage output + 0 to 10 VDC
V35: Linear voltage output + 0 to 5 VDC

2. Version

Blank: Available for E5AN-E5EN-H and E5AK/E5EK.
N: Available only for E5AN-H/E5EN-H.

This data sheet is provided as a guideline for selecting products. Be sure to refer to the following user manuals for application precautions and other information required for operation before attempting to use the product.

E5CN-H/E5AN-H/E5EN-H Digital Controllers User's Manual Advanced Type (Cat. No. H157)

E5CN-H/E5AN-H/E5EN-H Digital Controllers Communications Manual Advanced Type (Cat. No. H159)

Ordering Information

E5AN-H

| Size | Case color | Power supply voltage | Control method | Auxiliary output | Control output 1/2 | Heater burnout | Optional functions | | | Model | |
|--|------------|----------------------|-------------------------|-------------------------|-------------------------|-------------------------|--------------------|--------------------|---------------------|----------------------|-------------------|
| | | | | | | | Event inputs | Transfer output | RSP | | |
| 1/4 DIN 96 × 96 × 78 (W × H × D) | Black | 100 to 240 VAC | Basic | 2 | Control Output Unit × 2 | 1 | 2 | | 4 to 20-mA input | E5AN-HAA2HBM-500 | |
| | | | | | SSR outputs × 2 | 1 | 2 | | 4 to 20-mA input | E5AN-HSS2HBM-500 | |
| | | | | Control Output Unit × 2 | 2 | 2 | 4 to 20-mA output | 4 to 20-mA input | E5AN-HAA2HHBFM-500 | | |
| | | | | SSR outputs × 2 | 2 | 2 | 4 to 20-mA output | 4 to 20-mA input | E5AN-HSS2HHBFM-500 | | |
| | | | 3 | Control Output Unit × 2 | | 2 | 4 to 20-mA output | 4 to 20-mA input | E5AN-HAA3BFM-500 | | |
| | | | | SSR outputs × 2 | | 2 | 4 to 20-mA output | 4 to 20-mA input | E5AN-HSS3BFM-500 | | |
| | | Valve | 2 | Relay outputs × 2 | | 2 | | 4 to 20-mA input | E5AN-HPRR2BM-500 | | |
| | | | | Relay outputs × 2 | | 2 | 4 to 20-mA output | 4 to 20-mA input | E5AN-HPRR2BFM-500 | | |
| | | 24 VAC/VDC | Basic | 2 | | Control Output Unit × 2 | 1 | 2 | | 4 to 20-mA input | E5AN-HAA2HBMD-500 |
| | | | | | | SSR outputs × 2 | 1 | 2 | | 4 to 20-mA input | E5AN-HSS2HBMD-500 |
| | | | | Control Output Unit × 2 | 2 | 2 | 4 to 20-mA output | 4 to 20-mA input | E5AN-HAA2HHBFMD-500 | | |
| | | | | SSR outputs × 2 | 2 | 2 | 4 to 20-mA output | 4 to 20-mA input | E5AN-HSS2HHBFMD-500 | | |
| | 3 | | Control Output Unit × 2 | | 2 | 4 to 20-mA output | 4 to 20-mA input | E5AN-HAA3BFMD-500 | | | |
| | | | SSR outputs × 2 | | 2 | 4 to 20-mA output | 4 to 20-mA input | E5AN-HSS3BFMD-500 | | | |
| | Valve | 2 | Relay outputs × 2 | | 2 | | 4 to 20-mA input | E5AN-HPRR2BMD-500 | | | |
| | | | Relay outputs × 2 | | 2 | 4 to 20-mA output | 4 to 20-mA input | E5AN-HPRR2BFMD-500 | | | |
| | Silver | 100 to 240 VAC | Basic | 2 | Control Output Unit × 2 | 1 | 2 | | 4 to 20-mA input | E5AN-HAA2HBM-W-500 | |
| | | | | | Control Output Unit × 2 | 2 | 2 | 4 to 20-mA output | 4 to 20-mA input | E5AN-HAA2HHBFM-W-500 | |
| Control Output Unit × 2 | | | | | 1 | 2 | | 4 to 20-mA input | E5AN-HAA2HBMD-W-500 | | |
| | 24 VAC/VDC | | | | | | | | | | |

E5EN-H

| Size | Case color | Power supply voltage | Control method | Auxiliary output | Control output 1/2 | Heater burn-out | Optional Functions | | | Model | | |
|--|-------------------------|----------------------|-------------------|-------------------|-------------------------|-------------------------|-------------------------|--------------------|----------------------|--------------------|---------------------|----------------------|
| | | | | | | | Event inputs | Transfer output | RSP | | | |
| 1/8 DIN 48 × 96 × 78 (W × H × D) | Black | 100 to 240 VAC | Basic | 2 | Control Output Unit × 2 | 1 | 2 | | 4 to 20-mA input | E5EN-HAA2HBM-500 | | |
| | | | | | SSR outputs × 2 | 1 | 2 | | 4 to 20-mA input | E5EN-HSS2HBM-500 | | |
| | | | | | Control Output Unit × 2 | 2 | 2 | 4 to 20-mA output | 4 to 20-mA input | E5EN-HAA2HHBFM-500 | | |
| | | | | | SSR outputs × 2 | 2 | 2 | 4 to 20-mA output | 4 to 20-mA input | E5EN-HSS2HHBFM-500 | | |
| | | | | | Control Output Unit × 2 | | 2 | 4 to 20-mA output | 4 to 20-mA input | E5EN-HAA3BFM-500 | | |
| | | | | | SSR outputs × 2 | | 2 | 4 to 20-mA output | 4 to 20-mA input | E5EN-HSS3BFM-500 | | |
| | | Valve | 2 | Relay outputs × 2 | | 2 | | 4 to 20-mA input | E5EN-HPRR2BM-500 | | | |
| | | | | Relay outputs × 2 | | 2 | 4 to 20-mA output | 4 to 20-mA input | E5EN-HPRR2BFM-500 | | | |
| | | | | 24 VAC/VDC | Basic | 2 | Control Output Unit × 2 | 1 | 2 | | 4 to 20-mA input | E5EN-HAA2HBMD-500 |
| | | | | | | | SSR outputs × 2 | 1 | 2 | | 4 to 20-mA input | E5EN-HSS2HBMD-500 |
| | | | | | | | Control Output Unit × 2 | 2 | 2 | 4 to 20-mA output | 4 to 20-mA input | E5EN-HAA2HHBFMD-500 |
| | | | | | | | SSR outputs × 2 | 2 | 2 | 4 to 20-mA output | 4 to 20-mA input | E5EN-HSS2HHBFMD-500 |
| | Control Output Unit × 2 | | 2 | | | | 4 to 20-mA output | 4 to 20-mA input | E5EN-HAA3BFMD-500 | | | |
| | SSR outputs × 2 | | 2 | | | | 4 to 20-mA output | 4 to 20-mA input | E5EN-HSS3BFMD-500 | | | |
| | Valve | 2 | Relay outputs × 2 | | 2 | | 4 to 20-mA input | E5EN-HPRR2BMD-500 | | | | |
| | | | Relay outputs × 2 | | 2 | 4 to 20-mA output | 4 to 20-mA input | E5EN-HPRR2BFMD-500 | | | | |
| | | | Silver | 100 to 240 VAC | Basic | 2 | Control Output Unit × 2 | 1 | 2 | | 4 to 20-mA input | E5EN-HAA2HBM-W-500 |
| | | | | | | | Control Output Unit × 2 | 2 | 2 | 4 to 20-mA output | 4 to 20-mA input | E5EN-HAA2HHBFM-W-500 |
| Control Output Unit × 2 | | | | | | | 1 | 2 | | 4 to 20-mA input | E5EN-HAA2HBMD-W-500 | |
| 24 VAC/VDC | | | | | | Control Output Unit × 2 | | | | 4 to 20-mA input | E5EN-HAA2HBM-W-500 | |
| | Control Output Unit × 2 | 2 | | | | 2 | 4 to 20-mA output | 4 to 20-mA input | E5EN-HAA2HHBFM-W-500 | | | |
| | Control Output Unit × 2 | 1 | | | | 2 | | 4 to 20-mA input | E5EN-HAA2HBMD-W-500 | | | |

Accessories (Order Separately)

| Output unit | Model | Specifications |
|----------------------------------|----------|---|
| Relay output | E53-RN | SPST-NO, 250 VAC, 5 A (resistive load), electrical life: 100,000 operations |
| Voltage output (for driving SSR) | E53-QN | 12 VDC (PNP), max. load current: 40-mA, with short-circuit protection |
| | E53-Q3 | 24 VDC (NPN), max. load current: 20-mA, with short-circuit protection |
| | E53-Q4 | 24 VDC (PNP), max. load current: 20-mA, with short-circuit protection |
| Current output | E53-C3N | 4 to 20-mA DC, load: 600 Ω max., resolution: approx. 10,000 |
| | E53-C3DN | 0 to 20-mA DC, load: 600 Ω max., resolution: approx. 10,000 |
| Linear voltage output | E53-V34N | 0 to 10 VDC, load: 1 kΩ min., resolution: approx. 10,000 |
| | E53-V35N | 0 to 5 VDC, load: 1 kΩ min., resolution: approx. 10,000 |

USB-infrared Conversion Cable

| Model |
|-----------|
| E58-CIFIR |

USB-Serial Conversion Cable

| Model |
|-----------|
| E58-CIFQ1 |

Terminal Cover

| Connectable models | Model |
|--------------------|-----------|
| E5AN-H | E53-COV16 |
| E5EN-H | |

Note: The Terminal Cover comes with the E5CN-□□□-500 models.

Waterproof Packing

| Connectable models | Model |
|--------------------|---------|
| E5AN-H | Y92S-P4 |
| E5EN-H | Y92S-P5 |

Note: The Waterproof Packing is included with the Controller.

Current Transformers (CTs)

| Hole diameter | Model |
|---------------|---------|
| 5.8 dia. | E54-CT1 |
| 12.0 dia. | E54-CT3 |

CX-Thermo Support Software

| Model |
|-------------|
| EST2-2C-MV4 |

Specifications

Ratings
























| | | |
|--------------------------------------|---|--|
| Power supply voltage | No D in model number: 100 to 240 VAC, 50/60 Hz D in model number: 24 VAC, 50/60 Hz; 24 VDC | |
| Operating voltage range | 85% to 110% of rated supply voltage | |
| Power consumption | 100 to 240 VAC: 12 VA 24 VAC/VDC: 8.5 VA (24 VAC)/5.5 W (24 VDC) | |
| Sensor input | Any of the following can be selected. Thermocouple: K, J, T, E, L, U, N, R, S, B, W, or PL II Platinum resistance thermometer: Pt100 or JPt100 Current input: 4 to 20 mA or 0 to 20 mA Voltage input: 1 to 5 V, 0 to 5 V, or 0 to 10 V | |
| Input impedance | Current input: 150 Ω max., Voltage input: 1 MΩ min. (Use a 1:1 connection when connecting the ES2-HB.) | |
| Control method | ON/OFF control or 2-PID control (with auto-tuning) | |
| Control output | Relay output | Output Unit (Install the Output Unit (sold separately).) |
| | Voltage output (for driving SSR) | |
| | Current output | |
| | Linear voltage output | |
| | Built-in SSR output | |
| | Relay output for position-proportional control | Relay output: Open and close: SPST-NO, 250 VAC, 1 A (including in-rush current), electrical life: 100,000 operations min. Potentiometer input: Must be between 100 Ω and 2.5 kΩ for maximum open position. |
| Auxiliary output | Number of outputs | 2 or 3 max. |
| | Output specifications | Relay output: SPST-NO, 250 VAC, 3 A (resistive load), electrical life: 100,000 operations, minimum applicable load: 5 V, 10 mA |
| Event input | Number of outputs | 2 or 4 (with an E53-AKB) |
| | External contact input specifications | Contact input: ON: 1 kΩ max., OFF: 100 kΩ min. |
| | | Non-contact input: ON: Residual voltage: 1.5 V max., OFF: Leakage current: 0.1 mA max. Current flow: Approx. 7 mA per contact |
| Logic operations | Number of operations | 8 max. |
| | Operations | <ul style="list-style-type: none"> Logic operation: Any of the following four patterns can be selected. The input status may be inverted. (A and B) or (C and D), (A or C) and (B or D), A or B or C or D, A and B and C and D (A, B, C, and D are four inputs.) Delay: ON delay or OFF delay for the results of the logic operation given above. Setting time: 0 to 9999 s or 0 to 9999 min Output inversion: Possible |
| | Output | One work bit per operation |
| | Work bit assignment | Any of The following can be assigned to up to eight work bits (logic operation results): Event input operations, auxiliary outputs, or control outputs. |
| Transfer outputs | Number of outputs | 1 max. (Depends on model. Models with transfer output (F in model number) |
| | Output specifications | Current output: 4 to 20 mA DC, Load: 600 Ω max., Resolution at 4 to 20 mA: Approx. 10,000 |
| RSP input | Number of inputs | 1 |
| | Signal type | Current input: 4 to 20 mA (input impedance: 150 Ω ±10%) |
| | Analog input scaling | Scaling of signal to engineering units (EU) -19,999 to 30,000 (display: 30,000 max.) |
| | Accuracy | (±0.2% of FS) ±1 digit max. |
| | Input sampling period | 60 ms |
| Setting method | Set digitally using keys on the front panel or by using the RSP input. | |
| Indication method | 11-segment digital display and individual indicators (7-segments displays also possible) Character height: E5AN-H: PV: 15.8 mm, SV: 9.5 mm, MV: 6.8 mm; E5EN-H: PV: 11.8 mm, SV: 8.1 mm, MV: 5.8 mm Content of 3-level display: PV/SV/MV, PV/SV/Bank No., or soak time remain Number of digits: 5 for PV and SV, 4 for MV | |
| Bank switching | Supported (number of banks: 8) Local SP, alarm settings, PID sets (PID constants, MV upper limit, MV lower limit, etc.) | |
| Other functions | Manual output, heating/cooling control, loop burnout alarm, SP ramp, other alarm functions, heater burnout detection, 40% AT, 100% AT, MV limiter, input digital filter, self-tuning, temperature input shift, run/stop, protection functions, control output ON/OFF counter, extraction of square root, MV change rate limit, PV/SV status display, logic operations, automatic cooling coefficient adjustment | |
| Ambient operating temperature | -10 to 55°C (with no condensation or icing), for 3-year warranty: -10 to 50°C | |
| Ambient operating humidity | 25% to 85% | |
| Storage temperature | -25 to 65°C (with no condensation or icing) | |

Alarm Outputs

Each alarm can be independently set to one of the following 13 alarm types. The default is 2: *Upper limit*.


Auxiliary outputs are allocated for alarms. ON delays and OFF delays (0 to 999 s) can also be specified.

Note: For models with heater burnout, SSR failure, and heater overcurrent detection, alarm 1 will be an OR output of the alarm selected from the following alarm types and the alarms for heater burnout, SSR failure, and heater overcurrent. To output only a heater burnout alarm, SSR failure alarm, and heater overcurrent alarm for alarm 1, set the alarm type to 0 (i.e., no alarm function).


| Set value | Alarm type | Alarm output operation | | Description of function |
|-----------|--|---|---|---|
| | | When alarm value X is positive | When alarm value X is negative | |
| 0 | Alarm function OFF | Output OFF | | No alarm |
| 1 | Upper- and lower-limit *1 |  | *2 | Set the deviation in the set point by setting the alarm upper limit (H) and alarm lower limit (L). |
| 2 | Upper-limit |  |  | Set the upward deviation in the set point by setting the alarm value (X). |
| 3 | Lower-limit |  |  | Set the downward deviation in the set point by setting the alarm value (X). |
| 4 | Upper- and lower-limit range *1 |  | *3 | Set the deviation in the set point by setting the alarm upper limit (H) and alarm lower limit (L). |
| 5 | Upper- and lower-limit with standby sequence *1 |  | *4 | A standby sequence is added to the upper- and lower-limit alarm (1). *7 |
| 6 | Upper-limit with standby sequence |  |  | A standby sequence is added to the upper-limit alarm (2). *7 |
| 7 | Lower-limit with standby sequence |  |  | A standby sequence is added to the lower-limit alarm (3). *7 |
| 8 | Absolute-value upper-limit |  |  | The alarm will turn ON if the process value is larger than the alarm value (X) regardless of the set point. |
| 9 | Absolute-value lower-limit |  |  | The alarm will turn ON if the process value is smaller than the alarm value (X) regardless of the set point. |
| 10 | Absolute-value upper-limit with standby sequence |  |  | A standby sequence is added to the absolute-value upper-limit alarm (8). *7 |
| 11 | Absolute-value lower-limit with standby sequence |  |  | A standby sequence is added to the absolute-value lower-limit alarm (9). *7 |
| 12 | LBA (alarm 1 type only) | --- | | *8 |
| 13 | PV change rate alarm | --- | | *9 |
| 14 | RSP absolute value upper limit *6 |  |  | The alarm turns ON when the remote SP (RSP) is larger than the alarm value (X). This alarm functions in both Local SP and Remote SP Modes. |
| 15 | RSP absolute value lower limit *6 |  |  | The alarm turns ON when the remote SP (RSP) is smaller than the alarm value (X). This alarm functions in both Local SP and Remote SP Modes. |

*1. With set values 1, 4 and 5, the upper and lower limit values can be set independently for each alarm type, and are expressed as "L" and "H."

*2. Set value: 1, Upper- and lower-limit alarm

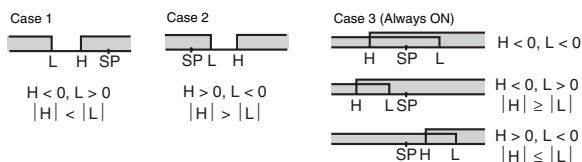

*3. Set value: 4, Upper- and lower-limit range

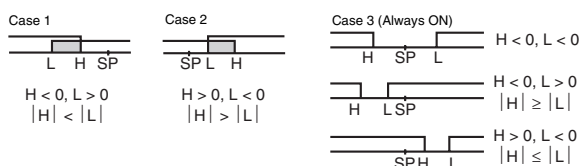

*4. Set value: 5, Upper- and lower-limit with standby sequence
For Upper- and Lower-Limit Alarm Described Above

- Case 1 and 2
Always OFF when the upper-limit and lower-limit hysteresis overlaps.
- Case 3: Always OFF

*5. Set value: 5, Upper- and lower-limit with standby sequence
Always OFF when the upper-limit and lower-limit hysteresis overlaps.

*6. Displayed when there is a remote SP input.

*7. Refer to the *E5CN/E5AN/E5EN/E5GN Digital Temperature Controllers User's Manual Basic Type* (Cat. No. H156) for information on the operation of the standby sequence.

*8. Refer to the *E5CN/E5AN/E5EN/E5GN Digital Temperature Controllers User's Manual Basic Type* (Cat. No. H156) for information on the loop burnout alarm (LBA).

*9. Refer to the *E5CN/E5AN/E5EN/E5GN Digital Temperature Controllers User's Manual Basic Type* (Cat. No. H156) for information on the PV change rate alarm.

Characteristics

| | | |
|---|---|--|
| Indication accuracy | Thermocouple: ($\pm 0.1\%$ of indicated value or $\pm 1^\circ\text{C}$, whichever is greater) ± 1 digit max. *1 Platinum resistance thermometer: ($\pm 0.1\%$ of indicated value or $\pm 0.5^\circ\text{C}$, whichever is greater) ± 1 digit max. Analog input: $\pm 0.1\%$ FS ± 1 digit max. CT input: $\pm 5\%$ FS ± 1 digit max. Potentiometer input: $\pm 5\%$ FS ± 1 digit max. | |
| Transfer output accuracy | $\pm 0.3\%$ FS max. | |
| Influence of temperature *2 | Thermocouple input (R, S, B, W, PL II): ($\pm 1\%$ of PV or $\pm 10^\circ\text{C}$, whichever is greater) ± 1 digit max. Other thermocouple input: ($\pm 1\%$ of PV or $\pm 4^\circ\text{C}$, whichever is greater) ± 1 digit max. *3 Platinum resistance thermometer: ($\pm 1\%$ of PV or $\pm 2^\circ\text{C}$, whichever is greater) ± 1 digit max. | |
| Influence of voltage *2 | Analog input: ($\pm 1\%$ FS) ± 1 digit max. | |
| Input sampling period | 60 ms | |
| Hysteresis | Temperature input: 0.1 to 3240.0°C or °F (in units of 0.1°C or °F) Analog input: 0.01% to 99.99% FS (in units of 0.01% FS) | |
| Proportional band (P) | Temperature input: 0.1 to 3240.0°C or °F (in units of 0.1°C or °F) Analog input: 0.1% to 999.9% FS (in units of 0.1% FS) | |
| Integral time (I) | 0.0 to 3240.0 s (in units of 0.1 s) | |
| Derivative time (D) | 0.0 to 3240.0 s (in units of 0.1 s) | |
| Control period | 0.5, 1 to 99 s (in units of 1 s) | |
| Manual reset value | 0.0 to 100.0% (in units of 0.1%) | |
| Alarm setting range | -19999 to 32400 (decimal point position depends on input type) | |
| Affect of signal source resistance | Thermocouple: 0.1°C/ Ω max. (100 Ω max.) Platinum resistance thermometer: 0.1°C/ Ω max. (10 Ω max.) | |
| Insulation resistance | 20 M Ω min. (at 500 VDC) | |
| Dielectric strength | 2,300 VAC, 50 or 60 Hz for 1 min (between terminals with different charge) | |
| Vibration resistance | Malfunction | 10 to 55 Hz, 20 m/s ² for 10 min each in X, Y, and Z directions |
| | Destruction | 10 to 55 Hz, 0.75-mm single amplitude for 2 hrs each in X, Y, and Z directions |
| Shock resistance | Malfunction | 100 m/s ² , 3 times each in X, Y, and Z directions |
| | Destruction | 300 m/s ² , 3 times each in X, Y, and Z directions |
| Weight | E5AN-H | Controller: Approx. 310 g, Mounting Bracket: Approx. 100 g |
| | E5EN-H | Controller: Approx. 260 g, Mounting Bracket: Approx. 100 g |
| Degree of protection | Front panel: IP66, Rear case: IP20, Terminals: IP00 | |
| Memory protection | Non-volatile memory (number of writes: 1,000,000 times) | |
| Setup Tool | CX-Thermo version 4.0 or higher | |
| Setup Tool port | Provided on the bottom of the E5AN-H and E5EN-H. An E58-CIFQ1 USB-Serial Conversion Cable is required to connect the computer to the E5AN-H and E5EN-H. Provided on the front of the E5AN-H and E5EN-H. An E58-CIFIR USB-infrared Conversion Cable is required to connect the computer to the E5AN-H or E5EN-H. *4 | |
| Standards | Approved standards | UL 61010-1, CSA C22.2 No. 1010-1 |
| | Conformed standards | EN 61010-1 (IEC 61010-1): Pollution level 2, overcurrent category II, Lloyd's standards *5 |
| EMC | EMI: Radiated Interference Electromagnetic Field Strength: EN 55011 Group 1, class A Noise Terminal Voltage: EN 55011 Group 1, class A EMS: ESD Immunity: EN 61326 Electromagnetic Field Immunity: EN 61000-4-2 Burst Noise Immunity: EN 61000-4-3 Conducted Disturbance Immunity: EN 61000-4-4 Surge Immunity: EN 61000-4-5 Power Frequency Magnetic Field Immunity: EN 61000-4-6 Voltage Dip/Interrupting Immunity: EN 61000-4-8 EN 61000-4-11 | |

*1. The indication accuracy of K thermocouples in the -200 to 1300°C range, T and N thermocouples at a temperature of -100°C max., and U and L thermocouples at any temperatures is $\pm 2^\circ\text{C} \pm 1$ digit max. The indication accuracy of the B thermocouple at a temperature of 400°C max. is not specified. The indication accuracy of B thermocouples in the 400 to 800°C range is $\pm 3^\circ\text{C}$ max. The indication accuracy of the R and S thermocouples at a temperature of 200°C max. is $\pm 3^\circ\text{C} \pm 1$ digit max. The indication accuracy of W thermocouples is $\pm 0.3\%$ of PV or $\pm 3^\circ\text{C}$, whichever is greater, ± 1 digit max.

The indication accuracy of PL II thermocouples is $\pm 0.3\%$ of PV or $\pm 2^\circ\text{C}$, whichever is greater, ± 1 digit max.

*2. Ambient temperature: -10°C to 23°C to 55°C, Voltage range: -15% to 10% of rated voltage

*3. K thermocouple at -100°C max.: $\pm 10^\circ\text{C}$ max.

*4. External communications (RS-232C, RS-485, or RS-422) and cable communications for the Setup Tool can be used at the same time.

*5. Refer to information on maritime standards in *Safety Precautions for E5□NE5□N-H* for compliance with Lloyd's Standards.

USB-Serial Conversion Cable

| | |
|-------------------------------|---|
| Applicable OS | Windows 2000, XP, or Vista |
| Applicable software | CX-Thermo version 4 or higher |
| Applicable models | E5AN/E5EN/E5CN/E5CN-U/ E5AN-H/E5EN-H/E5CN-H/E5GN |
| USB interface standard | Conforms to USB Specification 1.1. |
| DTE speed | 38400 bps |
| Connector specifications | Computer: USB (type A plug) Temperature Controller: Setup Tool port (on bottom of Controller) |
| Power supply | Bus power (Supplied from USB host controller.) |
| Power supply voltage | 5 VDC |
| Current consumption | 70 mA |
| Ambient operating temperature | 0 to 55°C (with no condensation or icing) |
| Ambient operating humidity | 10% to 80% |
| Storage temperature | -20 to 60°C (with no condensation or icing) |
| Storage humidity | 10% to 80% |
| Altitude | 2,000 m max. |
| Weight | Approx. 100 g |

Note: A driver must be installed in the personal computer. Refer to installation information in the operation manual for the Conversion Cable.

Communications Specifications

| | |
|-------------------------------------|--|
| Transmission line connection method | RS-485, RS-422: Multipoint RS-232C: Point-to-point |
| Communications | RS-485 (two-wire, half duplex) RS-422 (four-wire, half duplex) or RS-232C |
| Synchronization method | Start-stop synchronization |
| Protocol | CompoWay/F, SYSWAY, or Modbus |
| Baud rate | 1200, 2400, 4800, 9600, 19200, 38400, or 57600 bps |
| Transmission code | ASCII (CompoWay/F, SYSWAY) RTU (Modbus) |
| Data bit length * | 7 or 8 bits |
| Stop bit length * | 1 or 2 bits |
| Error detection | Vertical parity (none, even, odd) Frame check sequence (FCS) with SYSWAY Block check character (BCC) with CompoWay/F or CRC-16 Modbus |
| Flow control | None |
| Interface | RS-485, RS-422, or RS-232C |
| Retry function | None |
| Communications buffer | 217 bytes |
| Communications response wait time | 0 to 99 ms Default: 20 ms |

* The baud rate, data bit length, stop bit length, and vertical parity can be individually set using the Communications Setting Level.

Current Transformer (Order Separately) Ratings

| | |
|----------------------------|---|
| Dielectric strength | 1,000 VAC for 1 min |
| Vibration resistance | 50 Hz, 98 m/s ² |
| Weight | E54-CT1: Approx. 11.5 g, E54-CT3: Approx. 50 g |
| Accessories (E54-CT3 only) | Armatures (2) Plugs (2) |

USB-Infrared Conversion Cable

| | |
|-------------------------------|--|
| Applicable OS | Windows 2000, XP, or Vista |
| Applicable software | CX-Thermo version 4.0 or higher |
| Applicable models | E5AN-H/E5EN-H |
| USB interface standard | Conforms to USB Specification 1.1. |
| DTE speed | 38400 bps |
| Connector specifications | Computer: USB (type A plug) Temperature Controller: Infrared port (on front of Controller) |
| Power supply | Bus power (Supplied from USB host controller.) |
| Power supply voltage | 5 VDC |
| Current consumption | 80 mA |
| Ambient operating temperature | 0 to 55°C (with no condensation or icing) |
| Ambient operating humidity | 10% to 80% |
| Storage temperature | -20 to 60°C (with no condensation or icing) |
| Storage humidity | 10% to 80% |
| Altitude | 2,000 m max. |
| Weight | Approx. 130 g (with mounting adaptor) |


Note: A driver must be installed in the personal computer. Refer to installation information in the operation manual for the Conversion Cable.

Heater Burnout Alarms, SSR Failure Alarms, and Heater Overcurrent Alarms

| | |
|---|--|
| CT input (for heater current detection) | Models with detection for single-phase heaters: One input Models with detection for single-phase or three-phase heaters: Two inputs |
| Maximum heater current | 50 A AC |
| Input current indication accuracy | ±5% FS ±1 digit max. |
| Heater burnout alarm setting range *1 | 0.1 to 49.9 A (in units of 0.1 A) Minimum detection ON time: 100 ms |
| SSR failure alarm setting range *2 | 0.1 to 49.9 A (in units of 0.1 A) Minimum detection OFF time: 100 ms |
| Heater overcurrent alarm setting range *3 | 0.1 to 49.9 A (in units of 0.1 A) Minimum detection ON time: 100 ms |

- *1. For heater burnout alarms, the heater current will be measured when the control output is ON, and the output assigned to the alarm 1 function will turn ON if the heater current is lower than the set value (i.e., heater burnout detection current value).
- *2. For SSR failure alarms, the heater current will be measured when the control output is OFF, and the output assigned to the alarm 1 function will turn ON if the heater current is higher than the set value (i.e., SSR failure detection current value).
- *3. For heater overcurrent alarms, the heater current will be measured when the control output is ON, and the output assigned to the alarm 1 function will turn ON if the heater current is higher than the set value (i.e., heater overcurrent detection current value).

Electrical Life Expectancy Curve for Relays (Reference Values)

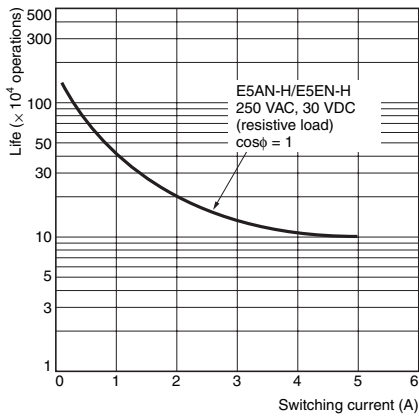


SSR Outputs (OUT1/OUT2) Ratings

- Rated load voltage: 75 to 250 VAC
- Rated load current: 1 A (resistive load)

Note: 1. The load current must be within the derating curve.
 2. There is no zero-cross function.

Derating Curve for SSR Outputs (Reference Values)

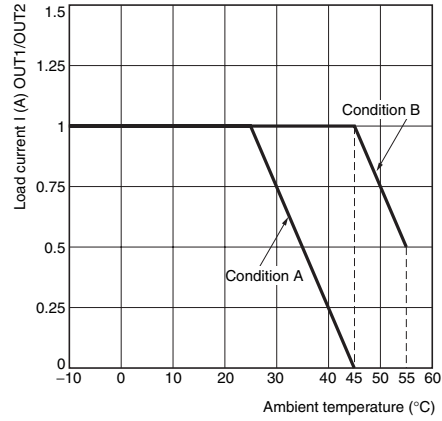

Condition A: SSR outputs 100% ON

Condition B: SSR outputs 50% ON with 2-s control cycle

External Connections



Control output 1 and control output 2 are functionally isolated from the internal circuits.

Controllers

The Temperature Controller is set for a K-type thermocouple (input type = 5) by default. An input error (5.ERR) will occur if the input type setting does not agree with the temperature sensor. Check the input type.

- 100 to 240 VAC
- 24 VAC/VDC (no polarity)

Option Units

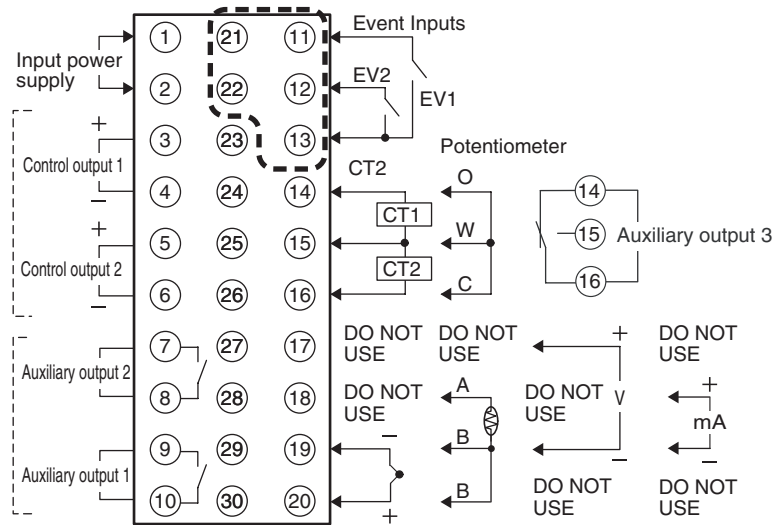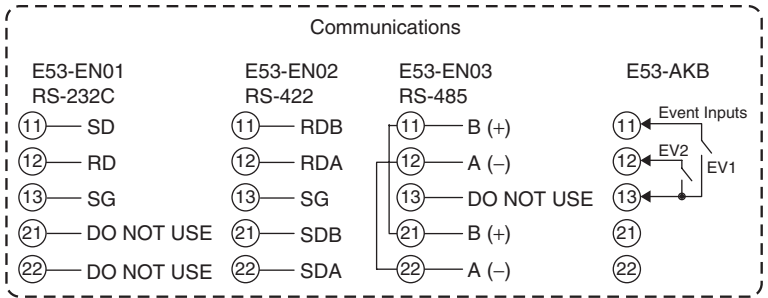


Auxiliary output 3
Relay output
SPDT, 250 VAC, 3 A
(resistive load)

A heater burnout alarm, SSR failure, heater overcurrent alarm, input alarm, or Remote SP Input Error is sent to the output to which the alarm 1 function is assigned.

Control outputs 1, 2
Control Output Unit
Control outputs 1, 2
Refer to page 4
SSR Outputs
75 to 250 VAC, 1 A
(resistive load)
Models with Position-proportional Control
Relay output
250 VAC, 1 A
(including inrush current)


Auxiliary outputs 1, 2, 3
Relay output
SPST-NO,
250 VAC, 3 A
(resistive load)

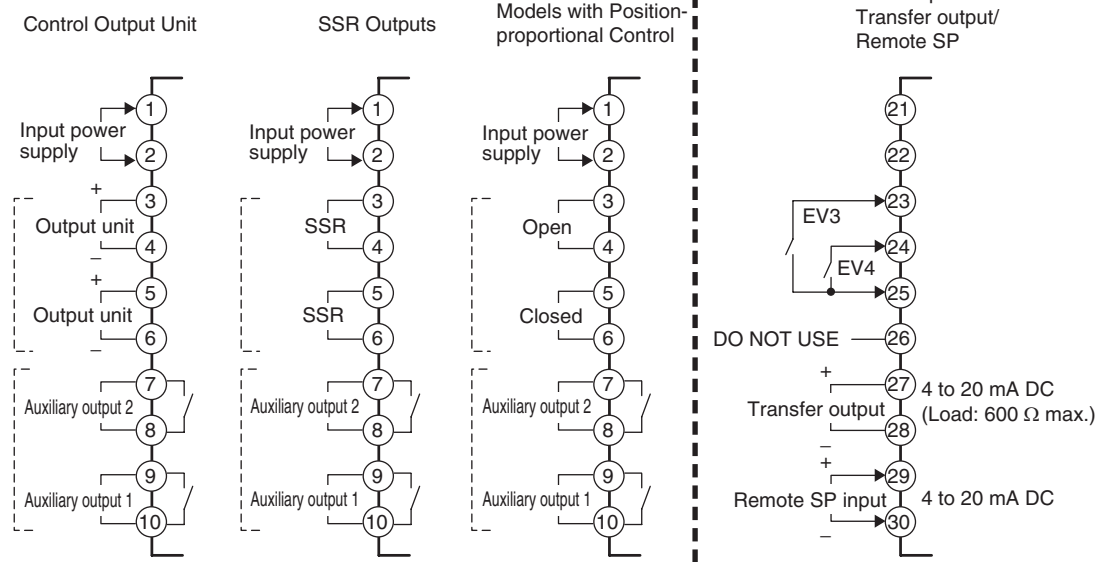


Note: Wire all voltage input terminals correctly. The Controller may fail if voltage input terminals are wired incorrectly.

Nomenclature

E5AN-H

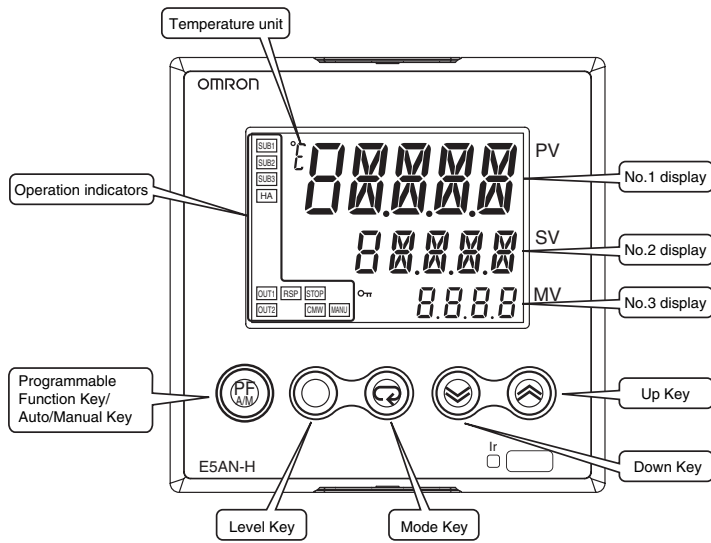



E5EN-H

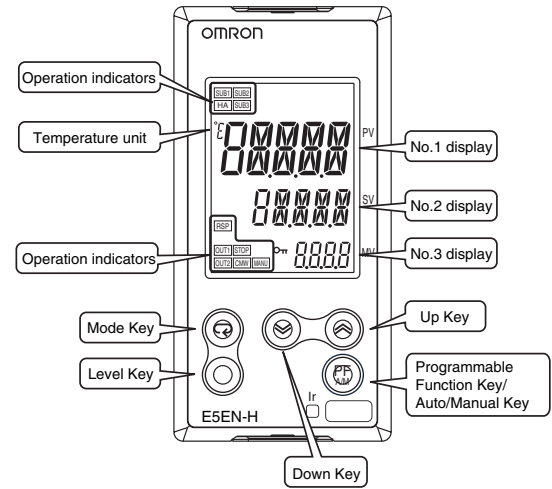

Dimensions


(Unit: mm)

E5AN-H

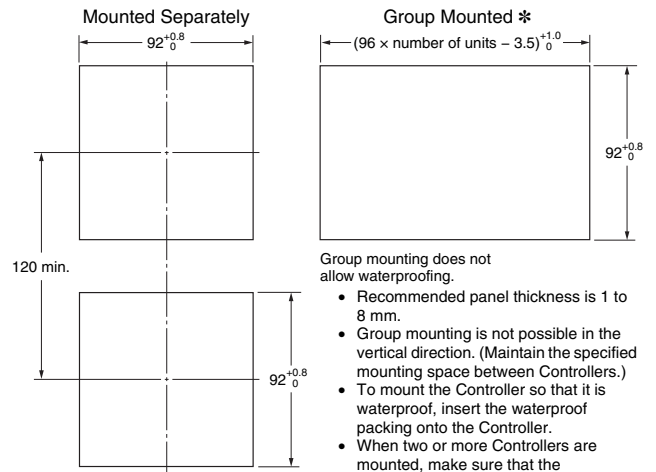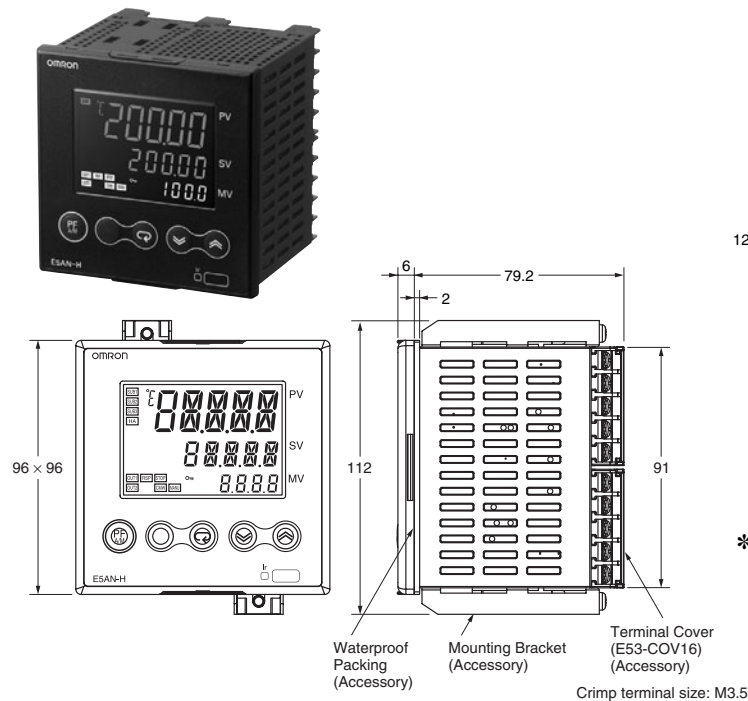


- Group mounting does not allow waterproofing.
- Recommended panel thickness is 1 to 8 mm.
 - Group mounting is not possible in the vertical direction. (Maintain the specified mounting space between Controllers.)
 - To mount the Controller so that it is waterproof, insert the waterproof packing onto the Controller.
 - When two or more Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature specified in the specifications.


* Group mounting is not possible if an SSR output is used for control output 1 or 2 and the E53-C3N or E53-C3DN Output Unit is used. For these combinations, maintain the following mounting space between Controllers.

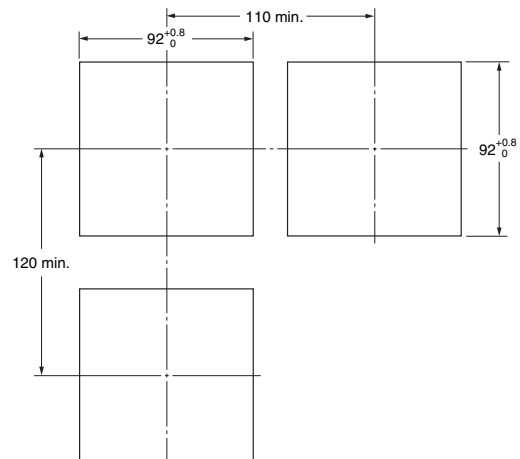

E5EN-H

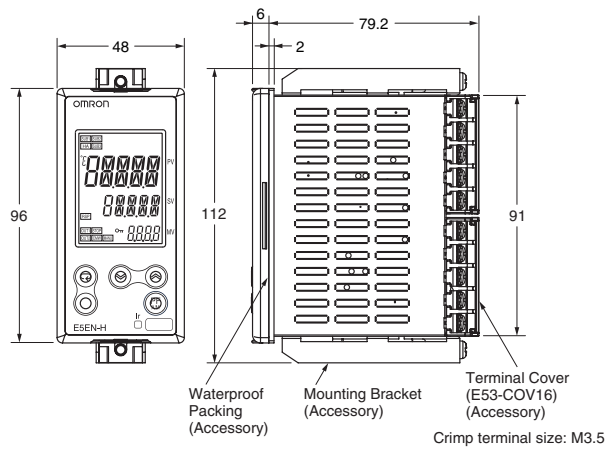


Mounted Separately

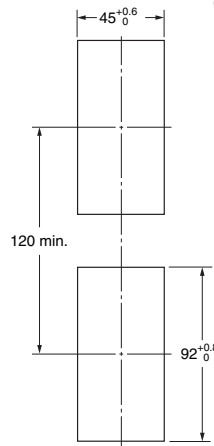

Group Mounted *


$(48 \times \text{number of units} - 2.5)^{+1.0}_0$

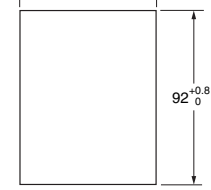

Group mounting does not allow waterproofing.

- Recommended panel thickness is 1 to 8 mm.
- Group mounting is not possible in the vertical direction. (Maintain the specified mounting space between Controllers.)
- When two or more Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature specified in the specifications.

* Group mounting is not possible if an SSR output is used for control output 1 or 2 and the E53-C3N or E53-C3DN Output Unit is used. For these combinations, maintain the following mounting space between Controllers.


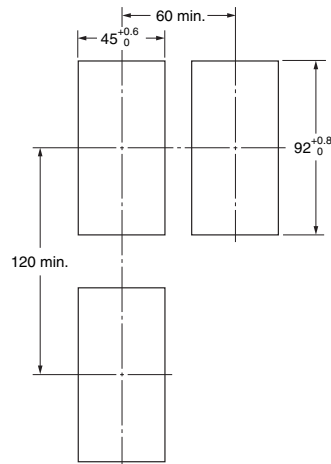


Accessories (Order Separately)

USB-Infrared Conversion Cable

E58-CIFIR



USB-Infrared Conversion Cable

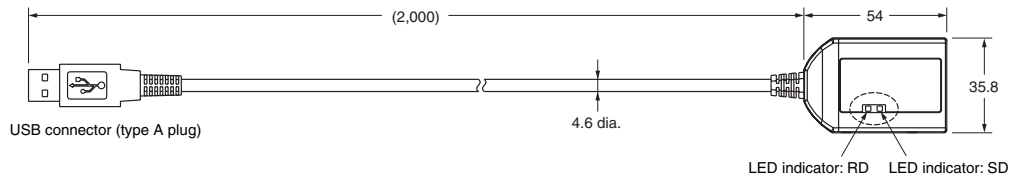

Mounting Adapter





With Mounting Adapter Connected

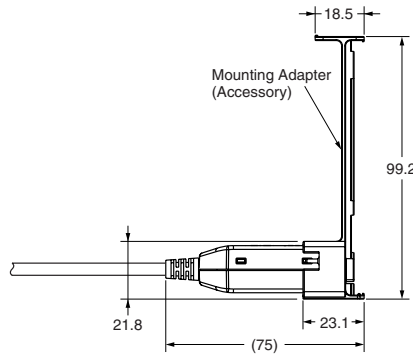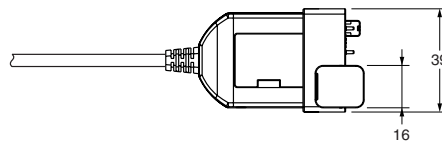



USB-Serial Conversion Cable

E58-CIFQ1

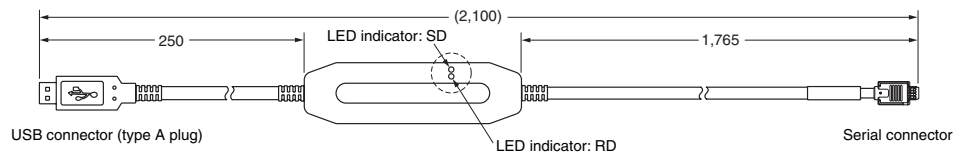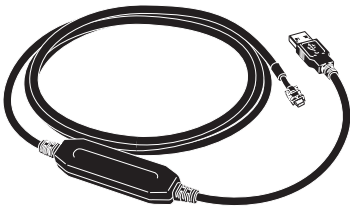

Terminal Covers


E53-COV16 (Six Covers provided.)

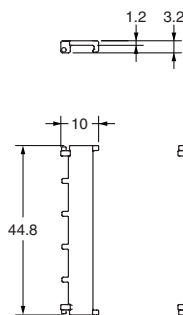

Waterproof Packing

Y92S-P4 (for DIN 96 × 96)

Y92S-P5 (for DIN 48 × 96)

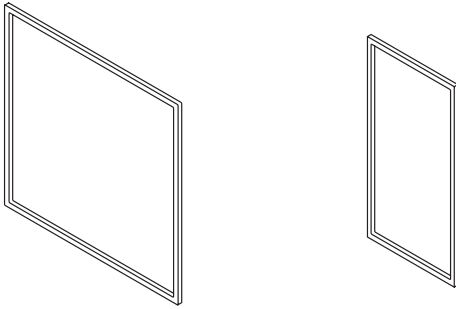

Order the Waterproof Packing separately if it becomes lost or damaged.



The Waterproof Packing can be used to achieve an IP66 degree of protection.

(Deterioration, shrinking, or hardening of the waterproof packing may occur depending on the operating environment. Therefore, periodic replacement is recommended to ensure the level of waterproofing specified in IP66. The time for periodic replacement depends on the operating environment. Be sure to confirm this point at your site. Consider one year a rough standard. OMRON shall not be liable for the level of water resistance if the customer does not perform periodic replacement.)

The Waterproof Packing does not need to be attached if a waterproof structure is not required.

Current Transformers


E54-CT1

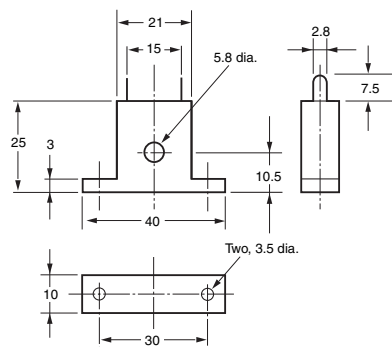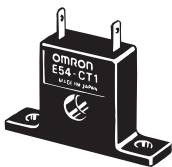


E54-CT1

Thru-current (Io) vs. Output Voltage (Eo) (Reference Values)

Maximum continuous heater current: 50 A (50/60 Hz)
 Number of windings: 400±2
 Winding resistance: 18±2 Ω

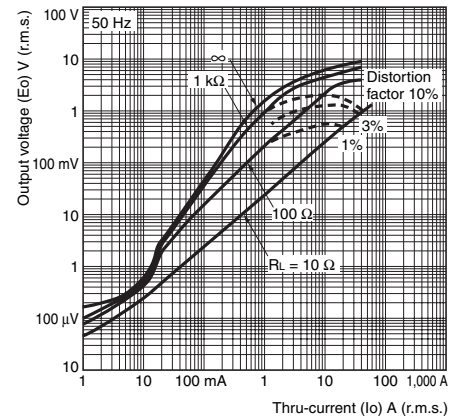


E54-CT3

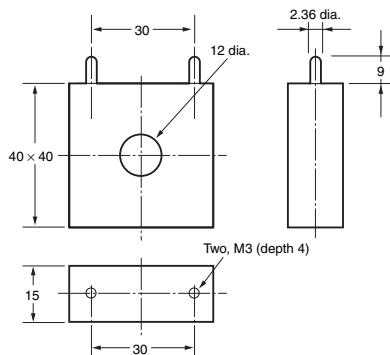

E54-CT3


Thru-current (Io) vs. Output Voltage (Eo) (Reference Values)

Maximum continuous heater current: 120 A (50/60 Hz)
 (Maximum continuous heater current for an OMRON Temperature Controller is 50 A.)
 Number of windings: 400±2
 Winding resistance: 8±0.8 Ω

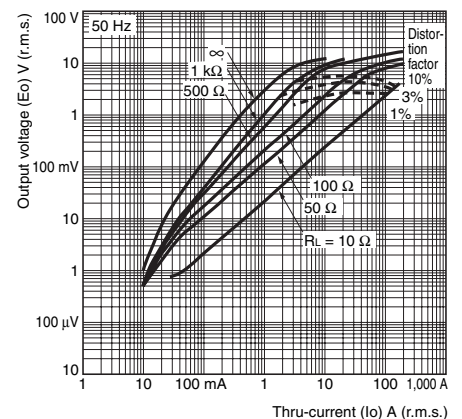


E54-CT3 Accessory


• Armature

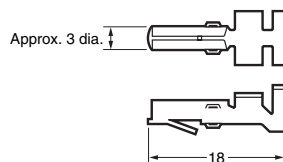

• Plug



Connection Example

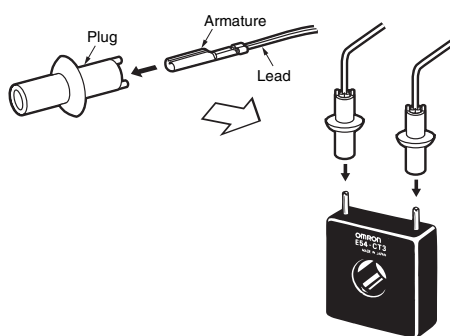

Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

Disclaimers

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

ERRORS AND OMISSIONS

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

2009.11

In the interest of product improvement, specifications are subject to change without notice.

OMRON Corporation
Industrial Automation Company

<http://www.ia.omron.com/>