

MDS-JE770

SERVICE MANUAL

Self Diagnostics
Supported model

AEP Model
UK Model
E Model

Ver 1.0 2001.05



Foreign patents licensed form Dolby Laboratories Licensing Corporation.

Model Name Using Similar Mechanism	MDS-S50
MD Mechanism Type	MDM-7A
Optical Pick-up Type	KMS-260B/260E

SPECIFICATIONS

System	MiniDisc digital audio system
Disc	MiniDisc
Laser	Semiconductor laser ($\lambda = 780 \text{ nm}$) Emission duration: continuous
Laser output	MAX 44.6 $\mu\text{W}^{1)}$
1) This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture.	
Laser diode	Material: GaAlAs
Revolutions (CLV)	400 rpm to 900 rpm
Error correction	ACIRC (Advanced Cross Interleave Reed Solomon Code)
Sampling frequency	44.1 kHz
Coding	ATRAC (Adaptive TRansform Acoustic Coding)/ATRAC 3
Modulation system	EFM (Eight-to-Fourteen Modulation)
Number of channels	2 stereo channels
Frequency response	5 to 20,000 Hz $\pm 0.3 \text{ dB}$
Signal-to-noise ratio	Over 98 dB during play
Wow and flutter	Below measurable limit

Inputs

ANALOG IN	Jack type: phono Impedance: 47 kilohms Rated input: 500 mVrms Minimum input: 125 mVrms
DIGITAL OPTICAL IN	Connector type: square optical Impedance: 660 nm (optical wave length) (European model only)
DIGITAL COAXIAL IN	Jack type: phono Impedance: 75 ohms Rated input: 0.5 Vp-p, $\pm 20 \%$

Outputs

PHONES	Jack type: stereo phone Rated output: 28 mW Load impedance: 32 ohms
ANALOG OUT	Jack type: phono Rated output: 2 Vrms (at 50 kilohms) Load impedance: over 10 kilohms
DIGITAL OPTICAL OUT	Connector type: square optical Rated output: -18 dBm Load impedance: 660 nm (optical wave length)

— Continued on next page —

MINIDISC DECK

9-873-890-11
2001E0200-1
© 2001.5

Sony Corporation
Home Audio Company
Shinagawa Tec Service Manual Production Group

SONY®

General

Power requirements

European model:	230 V AC, 50/60Hz
Other models:	110 – 120/220 – 240 V AC, 50/60Hz Adjustable with voltage selector

Power consumption	15 W(0.5 W in standby mode)
Dimensions (approx.)	430 X95 285 mm (w/h/d) incl. projecting parts and controls
Mass (approx.)	3.1 kg

Supplied accessories

Audio connecting cords (2)
Optical cable (1)
Remote commander (remote) (1)
R6 (size-AA) batteries (2)

SELF-DIAGNOSIS FUNCTION

The self-diagnosis function consists of error codes for customers which are displayed automatically when errors occur and error codes which show the error history in the test mode during servicing. For details on how to view error codes for the customer, refer to the following box in the instruction manual. For details on how to check error codes during servicing, refer to the following “Procedure for using the Self-Diagnosis Function (Error History Display Mode)”.

Self-diagnosis function

The deck’s self-diagnosis function automatically checks the condition of the MD deck when an error occurs, then issues a three- or five-digit code and an error message on the display. If the code and message alternate, find them in the following table and perform the indicated countermeasure. Should the problem persist, consult your nearest Sony dealer.

Three- or five-digit code/ Message	Cause/Remedy
C11/Protected	The inserted MD is record-protected. ➔ Take out the MD and close the record-protect slot.
C12/Cannot Copy	You tried to record a CD with a format that the external device connected to the deck does not support, such as CD-ROM or video CD. ➔ Remove the disc and insert a music CD.
C13/REC Error	The recording was not made properly. ➔ Set the deck in a stable surface, and repeat the recording procedure.
	The inserted MD is dirty (with smudges, fingerprints, etc.), scratched, or substandard in quality. ➔ Replace the disc and repeat the recording procedure.
C13/Read Error	The deck could not read the TOC on the MD properly. ➔ Take out the MD and insert it again.

Three- or five-digit code/ Message	Cause/Remedy
C14/Toc Error	The deck could not read the TOC on the MD properly. ➔ Insert another disc. ➔ If possible, erase all the tracks on the MD.
C41/Cannot Copy	The sound source is a copy of commercially available music software, or you tried to record a CD-R (Recordable CD). ➔ The Serial Copy Management System prevents making a digital copy. You cannot record a CD-R.
C71/Din Unlock	The sporadic appearance of this message is caused by the digital signal being recorded. This will not affect the recording.
	While recording from a digital component connected through the DIGITAL IN connector, the digital connecting cable was unplugged or the digital component turned off. ➔ Connect the cable or turn the digital component back on.
E0001/MEMORY NG	There is an error in the internal data that the deck needs in order to operate. ➔ Consult your nearest Sony dealer.
E0101/LASER NG	There is a problem with the optical pickup. ➔ The optical pick-up may have failed. Consult your nearest Sony dealer.

Procedure for using the Self-Diagnosis Function (Error History Display Mode).

Note: Perform the self-diagnosis function in the “error history display mode” in the test mode. The following describes the least required procedure. Be careful not to enter other modes by mistake. If you set other modes accidentally press the **[MENU/NO]** button to exit the mode.

1. While pressing the  knob and  button, connect the power plug to the outlet, and release the  knob and  button.
When the test mode is set, “[Check]” will be displayed.
2. Rotate the  knob and when “[Service]” is displayed, press the  button.
3. Rotate the  knob and display “Err Display”.
4. Pressing the  button sets the error history mode and displays “op rec tm”.
5. Select the contents to be displayed or executed using the  knob.
6. Pressing the  knob will display or execute the contents selected.
7. Pressing the  knob another time returns to step 4.
8. Pressing the  button displays “Err Display” and exits the error history mode.
9. To exit the test mode, press the  button. The unit sets into the STANDBY state, the disc is ejected, and the test mode ends.

ITEMS OF ERROR HISTORY MODE ITEMS AND CONTENTS

Selecting the Test Mode

Display	History
op rec tm	Displays the total recording time. When the total recording time is more than 1 minute, displays the hour and minute When less than 1 minute, displays “Under 1 min” The display time is the time the laser is set to high power, which is about 1/4 of the actual recording time.
op play tm	Displays the total playback time. When the total playback time is more than 1 minute, displays the hour and minute When less than 1 minute, displays “Under 1 min”
spdl rp tm	Displays the total rotating time of the spindle motor. When the total rotating time is more than 1 minute, displays the hour and minute When less than 1 minute, displays “Under 1 min”
retry err	Displays the total number of retry errors during recording and playback Displays “r xx p yy”. xx is the number of errors during recording. yy is the number of errors during playback. This is displayed in hexadecimal from 00 to FF.
total err	Displays the total number of errors Displays “total xx”. This is displayed in hexadecimal from 00 to FF.
err history	Displays the past ten errors. Displays “0x ErrCd@@”. X is the history number The younger the number, the more recent is the history (00 is the latest). @@ is the error code. Select the error history number using the  knob.
retry adrs	Displays the past five retry addresses. Displays “xx ADRS yyyy”, xx is the history number, yyyy is the cluster with the retry error. Select the error history number using the  knob.
er refresh	Mode for erasing the error and retry address histories Procedure 1. Press the  knob when displayed as “er refresh”. 2. Press the  button when the display changes to “er refresh?”. When “complete!” is displayed, it means erasure has completed. Be sure to check the following after executing this mode. *Data has been erased. *Perform recording and playback, and check that the mechanism is normal.
tm change	Mode for erasing the total time of recording and playback Procedure 1. Press the  knob when displayed as “tm refresh”. 2. Press the  button when the display changes to “tm refresh?”. When “complete!” is displayed, it means erasure has completed.
op change	Mode for erasing the total time of op rec tm, op play tm. These histories are based on the time of replacement of the optical pickup. If the optical pick-up has been replaced, perform this procedure and erase the history. Procedure 1. Press the  knob when displayed as “op change”. 2. Press the  button when the display changes to “op change?”. When “Complete!” is displayed, it means erasure has completed.


Display	History
spdl change	<p>Mode for erasing the total spdl rp tm time These histories are based on the time of replacement of the spindle motor. If the spindle motor has been replaced, perform this procedure and erase the history.</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Press the ◀◀AMS▶▶ knob when displayed as “spdl change” 2. Press the YES button when the display changes to “spdl change?” <p>When “Complete!” is displayed, it means erasure has completed.</p>

Table of Error Codes

Error Code	Description
10	Could not load
12	Loading switches combined incorrectly
20	Timed out without reading the top of PTOC
21	Could read top of PTOC, but detected error
22	Timed out without accessing UTOC
23	Timed out without reading UTOC
24	Error in UTOC
30	Could not start playback
31	Error in sector
40	Retry cause generated during normal recording
41	Retried in DRAM overflow
42	Retry occurred during TOC writing
43	Retry aborted during S.F editing
50	Other than access processing, and could not read address.
51	Focus NG occurred and overran.

MODEL IDENTIFICATION

— BACK PANEL —

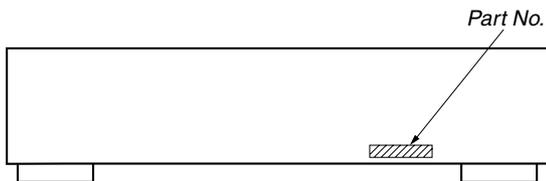

MODEL	PARTS No.
AEP models	4-233-025-6□
UK models	4-236-047-1□
SP models	4-233-025-8□

• Abbreviation
 SP : Singapore model

TABLE OF CONTENTS

1. SERVICING NOTES 5

2. GENERAL 12

3. DISASSEMBLY

3-1. Disassembly flow 13

3-2. Upper Case (408226) 14

3-3. Front Panel Section 14

3-4. Main Board 15

3-5. PT Board, VOL-SEL Board (SP model) 15

3-6. Mechanism Deck Section (MDM-7A) 16

3-7. Over Light Head (HR901), BD Board 16

3-8. Holder Assy 17

3-9. Loading Motor Assy (M103) 17

3-10. Sled Motor Assy (M102), Slider 18

3-11. Optical Pick-up 18

3-12. Spindle Moter Assy (M101) 19

4. TEST MODE20

5. ELECTRICAL ADJUSTMENTS 25

6. DIAGRAMS

6-1. Circuit Boards Location 36

6-2. Block Diagrams

•BD Section 38

•Main Section 39

6-3. Printed Wiring Board – BD Board – 40

6-4. Schematic Diagram – BD Section (1/2) – 41

6-5. Schematic Diagram – BD Section (2/2) – 42

6-6. Schematic Diagram – Main Section (1/2) – 43

6-7. Schematic Diagram – Main Section (2/2) – 44

6-8. Printed Wiring Board – Main Section – 45

6-9. Printed Wiring Board – Display Section – 46

6-10. Schematic Diagram – Display Section – 47

6-11. Printed Wiring Board – Power Section – 48

6-12. Schematic Diagram – Power Section – 49

6-13. IC Block Diagrams 50

6-14. IC Pin Functions 52

7. EXPLODED VIEWS

7-1. Chassis Section 60

7-2. Front Panel Section 61

7-3. Mechanism Section-1 (MDM-7A) 62

7-4. Mechanism Section-2 (MDM-7A) 63

8. ELECTRICAL PARTS LIST64

SECTION 1 SERVICE NOTES

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

Never look into the laser diode emission from right above when checking it for adjustment. It is feared that you will lose your sight.

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

CAUTION : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.
ADVARSEL : USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.
VORSICHT : UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET UND SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT. NICHT DEM STRAHL AUSSETZEN.
VARO! : AVATTAESSA JA SUOJALUKITUS OHTETTAESSA OLET ALTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
VARNING : OSYNLIG LASERSTRÅLING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD, BETRÄKTA EJ STRÅLEN.
ADVERSEL : USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES, UNNGÅ EKSPONERING FOR STRÅLEN.
VIGYAZÁT! : A BURKOLAT NYITÁSÁKOR LÁTHATATLAN LÉZERSUGÁRVESZÉLY! KERÜLJE A BESUGÁRZÁST!

This caution label is located inside the unit.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.



SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

JIG FOR CHECKING BD BOARD WAVEFORM

The special jig (J-2501-196-A) is useful for checking the waveform of the BD board. The names of terminals and the checking items to be performed are shown as follows.

- GND : Ground
- I+3V : For measuring IOP (Check the deterioration of the optical pick-up laser)
- IOP : For measuring IOP (Check the deterioration of the optical pick-up laser)
- TE : TRK error signal (Traverse adjustment)
- VC : Reference level for checking the signal
- RF : RF signal (Check jitter)
- FE : Focus error signal

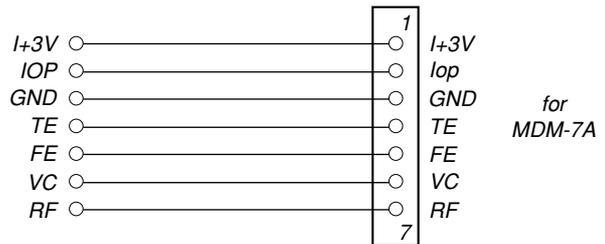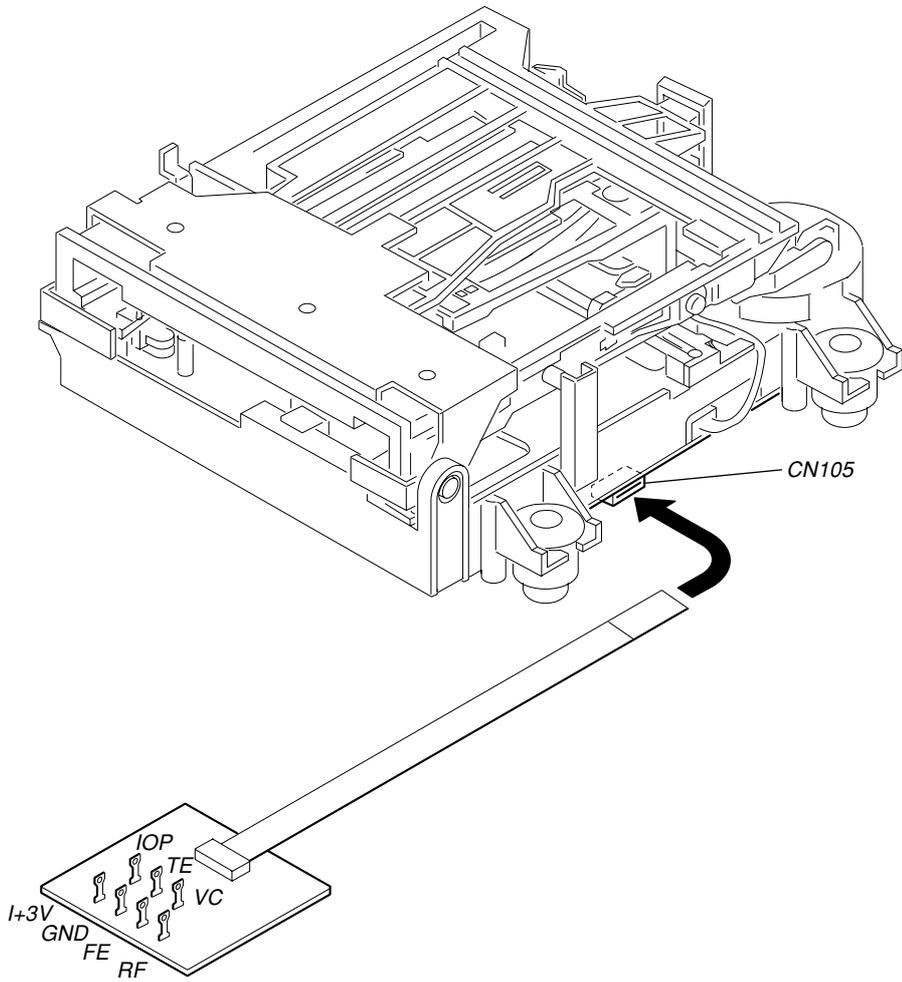

Iop DATA RECORDING AND DISPLAY WHEN OPTICAL PICK-UP AND NON-VOLATILE MEMORY (IC195 OF BD BOARD) ARE REPLACED

The Iop value labeled on the optical pick-up can be recorded in the non-volatile memory. By recording the value, it will eliminate the need to look at the value on the label of the optical pick-up. When replacing the optical pick-up or non-volatile memory (IC195 of B D board), record the Iop value on the optical pick-up according to the following procedure.

Record Procedure:

1. While pressing the  knob and  button, connect the power plug to the outlet, and release the  knob and  button.
2. Rotate the  knob to display “[Service]”, and press the  button.
3. Rotate the  knob to display “Iop Write” (C05), and press the  button.
4. The display becomes “Ref=@@.@” (@ is an arbitrary number) and the numbers which can be changed will blink.
5. Input the Iop value written on the optical pick-up.
To select the number : Rotate the  knob.
To select the digit : Press the  knob.
6. When the  button is pressed, the display becomes “Measu=@@.@” (@ is an arbitrary number).
7. As the adjustment results are recorded for the 6 value. Leave it as it is and press the  button.
8. “Complete!” will be displayed momentarily. The value will be recorded in the non-volatile memory and the display will become “Iop Write”.
9. Press the  button to complete.

Display Procedure:

1. While pressing the  knob and  button, connect the power plug to the outlet, and release the  knob and  button.
2. Rotate the  knob to display “[Service]”, and press the  button.
3. Rotate the  knob to display “Iop Read” (C26).
4. “@@.@/###.#” is displayed and the recorded contents are displayed.
@@.@ : indicates the Iop value labeled on the optical pick-up.
###.# : indicates the Iop value after adjustment
5. To end, press the  button or  button to display “Iop Read”(C26). Then press the  button.

OPTICAL PICK-UP BLOCK TYPE DISCRIMINATION

There are two types of the optical pick-up block in this model.
 These are compatible except for the laser power.
 Check the type of the optical pick-up block before replacement.
 Adjust following items after replacing the optical pick-up block.
 • 5-6-2. Laser Power Check (See page 28)
 • 5-10. LASER POWER ADJUSTMENT (See page 31)

Differences


	KMS-260B	KMS-260E
Color of the adhesive agent at PDIC portion	Pink	White
Form of FPC retainer plate	Close the hole on SL base	Not close the hole on SL base
APC variable resistor	Small volume (2 type)	Big variable resistor (3 type) and chip resistor (Fig. A)
		Small variable resistor (2 type) and chip resistor (Fig. B)

Fig. B type is for repair.

• Abbreviation

260B: KMS-260B model

260E: KMS-260E model

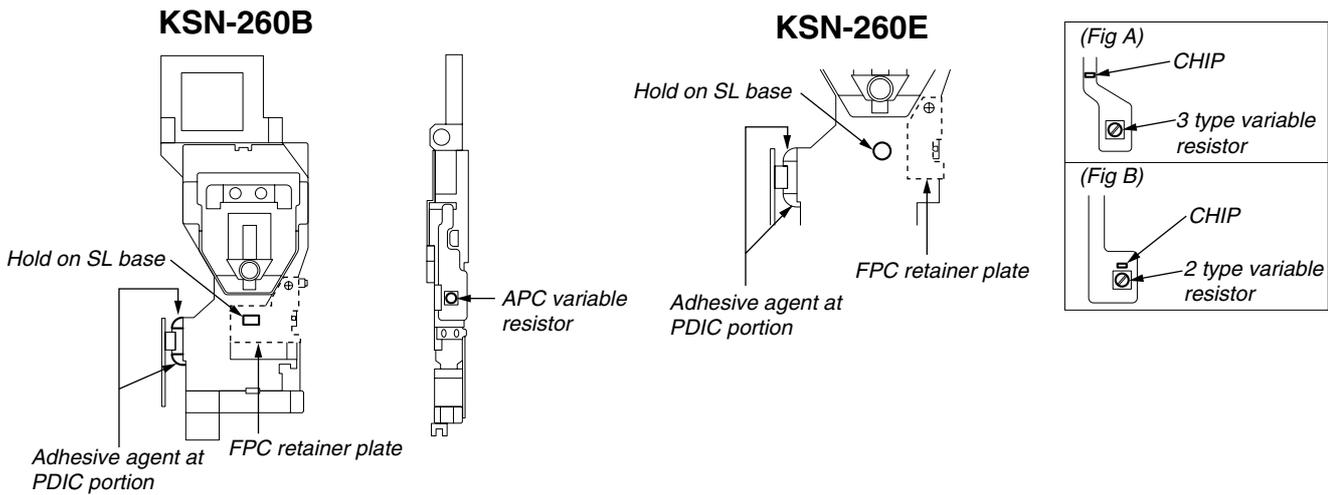

CHECKS PRIOR TO PARTS REPLACEMENT AND ADJUSTMENTS

Before performing repairs, perform the following checks to determine the faulty locations up to a certain extent. Details of the procedures are described in "5 Electrical Adjustments".

- 5-6-2. Laser power check (see page 28)
- 5-6-3. Iop Compare (see page 28)
- 5-6-4. Auto Check (see page 29)

Note:

The criteria for determination above is intended merely to determine if satisfactory or not, and does not serve as the specified value for adjustments.

When performing adjustments, use the specified values for adjustments.

FORCED RESET


The system microprocessor can be reset in the following procedure.

Use these procedure when the unit cannot be operated normally due to the overrunning of the microprocessor, etc.

Procedure :

Remove the short-pin attached to CN406, and then attach it again.

[MAIN BOARD] (Component Side)

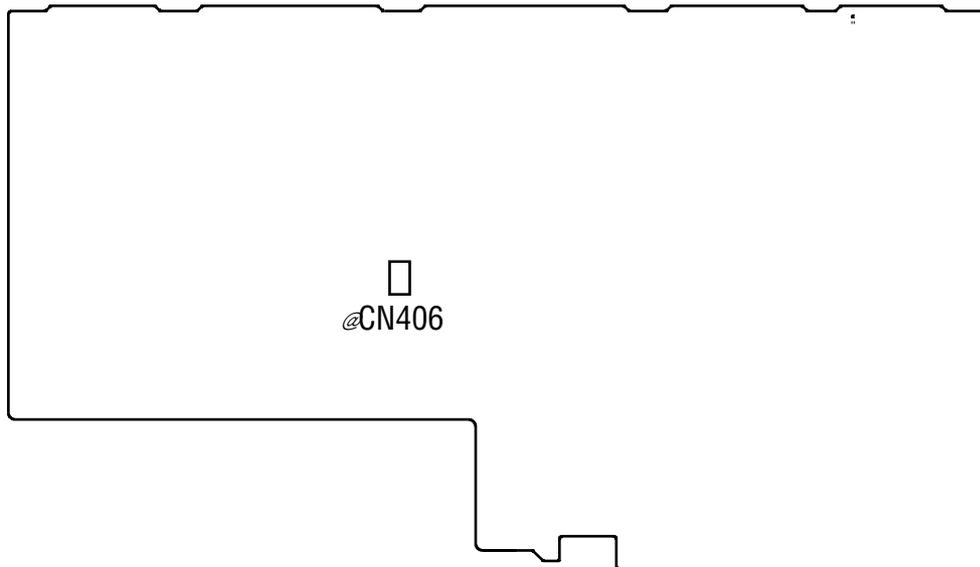

RETRY CAUSE DISPLAY MODE

- In this test mode, the causes for retry of the unit during recording can be displayed on the fluorescent indicator tube. During playback, the “track mode” for obtaining track information will be set. This is useful for locating the faulty part of the unit.
- The following will be displayed :
 During recording and stop : Retry cause, number of retries, and number of retry errors.
 During playback : Information such as type of disc played, part played, copyright.
 These are displayed in hexadecimal.

Procedure:

1. Insert the recordable disc.
2. Press **MENU/NO** button to display “Edit Menu” on the fluorescent display.
3. Turn **◀◀ AMS ▶▶** button to display “All Erase?” on the fluorescent display.
4. Press **YES** button to display “All Erase??” on the fluorescent display.
5. Press **YES** button, “Complete!” is displayed on the fluorescent display and it turns off immediately.
6. Procedure 1: Press the **■** button continuously for about 10 seconds.
 Procedure 2: Press the **LEVEL/DISPLAY/CHAR** button while pressing the **■** button and **MENU/NO** button.
7. When the mode is set, “RTs 00c 00e 000” is displayed.
8. Press the **● REC** button to start recording. Then press the **||** button and start recording.
9. To check the “track mode”, press the **▷** button to start play.
10. To exit the test mode, press the **⏏** button, and turn OFF the power. When “TOC” disappears, disconnect the power plug from the outlet. If the test mode cannot be exited, refer to “Forced Reset” on page 9.

Fig. 1 Reading the Test Mode Display (During recording and stop)

RTs@@@c##c***
 Fluorescent display tube display

- @@ : Cause of retry
- ## : Number of retries
- *** : Number of retry errors

Fig. 2 Reading the Test Mode Display (During playback)

@@###\$\$**
 Fluorescent display tube display

- @@ : Parts No. (name of area named on TOC)
- ### : Cluster } Address (Physical address on disc)
- ** : Sector
- \$\$: Track mode (Track information such as copyright information of each part)

Reading the Retry Cause Display

Hexadecimal	Higher Bits				Lower Bits				Hexadecimal	Cause of Retry	Occurring conditions
	8	4	2	1	8	4	2	1			
Bit	b7	b6	b5	b4	b3	b2	b1	b0			
Binary	0000				0	0	0	1	01	shock	When track jump (shock) is detected
	0000				0	0	1	0	02	ader5	When ADER was counted more than five times continuously
	0000				0	1	0	0	04	Discontinuous address	When ADIP address is not continuous
	0000				1	0	0	0	08	DIN unlock	When DIN unlock is detected
	0001				0	0	0	0	10	FCS incorrect	When not in focus
	0010				0	0	0	0	20	IVR rec error	When ABCD signal level exceeds the specified range
	0100				0	0	0	0	40	CLV unlock	When CLV is unlocked
	1000				0	0	0	0	80	Access fault	When access operation is not performed normally

Reading the Display:

Convert the hexadecimal display into binary display. If more than two causes, they will be added.

Example

When 42 is displayed:

Higher bit : 4 = 0100 → b6

Lower bit : 2 = 0010 → b1

In this case, the retry cause is combined of “CLV unlock” and “ader5”.

When A2 is displayed:

Higher bit : A = 1010 → b7+b5

Lower bit : 2 = 0010 → b2

The retry cause in this case is combined of “access fault”, “IVR rec error”, and “ader5”.

Reading the Track Mode Display

Hexadecimal	Higher Bits				Lower Bits				Hexa- decimal	Details	
	8	4	2	1	8	4	2	1		When 0	When 1
Bit	b7	b6	b5	b4	b3	b2	b1	b0			
Binary	0	0	0	0	0	0	0	1	01	Emphasis OFF	Emphasis ON
	0	0	0	0	0	0	1	0	02	Monaural	Stereo
	0	0	0	0	0	1	0	0	04	This is 2-bit display. Normally 01.	
	0	0	0	0	1	0	0	0	08	01:Normal audio. Others:Invalid	
	0	0	0	1	0	0	0	0	10	Audio (Normal)	Invalid
	0	0	1	0	0	0	0	0	20	Original	Digital copy
	0	1	0	0	0	0	0	0	40	Copyright	No copyright
	1	0	0	0	0	0	0	0	80	Write prohibited	Write allowed

Reading the Display:

Convert the hexadecimal display into binary display. If more than two causes, they will be added.

Example When 84 is displayed:

Higher bit : 8 = 1000 → b7

Lower bit : 4 = 0100 → b2

In this case, as b2 and b7 are 1 and others are 0, it can be determined that the retry cause is combined of “emphasis OFF”, “mo naural”, “original”, “copyright exists”, and “write allowed”.

Example When 07 is displayed:

Higher bit : 0 = 1000 → All 0

Lower bit : 7 = 0111 → b0+b1+b2

In this case, as b0, b1, and b2 are 1 and others are 0, it can be determined that the retry cause is combined of “emphasis ON”, “stereo”, “original”, “copyright exists”, and “write prohibited”.

Hexadecimal → Binary Conversion Table

Hexadecimal	Binary	Hexadecimal	Binary
0	0000	8	1000
1	0001	9	1001
2	0010	A	1010
3	0011	B	1011
4	0100	C	1100
5	0101	D	1101
6	0110	E	1110
7	0111	F	1111


SECTION 2 GENERAL

This section is extracted from instruction manual.

Parts Identification

The items are arranged in alphabetical order.
Refer to the pages indicated in parentheses () for details.

Main unit

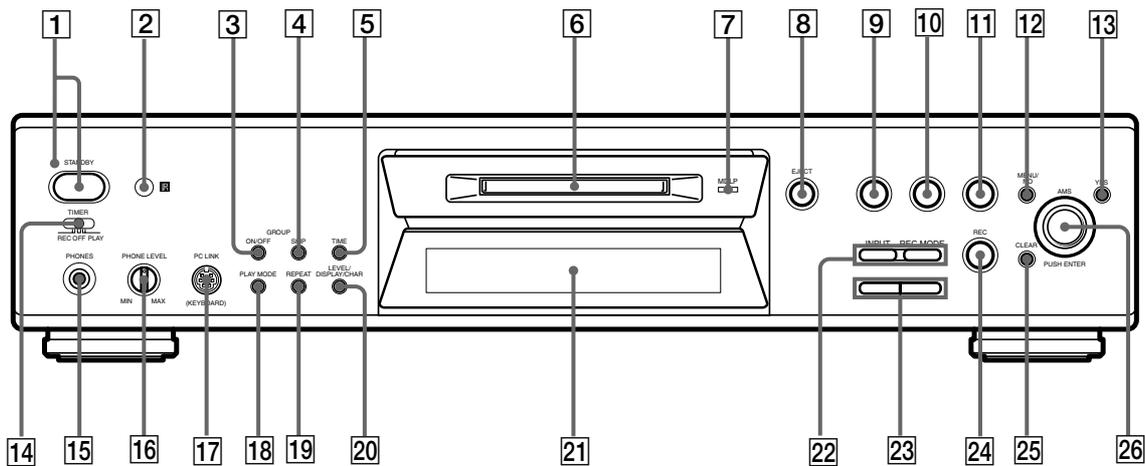

AMS **26** (15) (20) (25) (35) (39)
 CLEAR **25** (23) (30) (40)
 Display window **21**
 EJECT **8** (11) (20) (25)
 GROUP ON/OFF¹⁾ **3** (13) (22)
 (31)
 GROUP SKIP¹⁾ **4** (13) (22) (31)
 INPUT **22** (11)
 LEVEL/DISPLAY/CHAR **20**
 (11) (21) (29)
 MD insertion slot **6**
 MDLP indicator **7** (14) (21)
 MENU/NO **12** (15) (22) (25) (35)
 (39)

PC LINK (KEYBOARD)¹⁾ **17**
 (39)
 PHONE LEVEL¹⁾ **16** (21)
 PHONES jack¹⁾ **15** (17) (21) (36)
 PLAY MODE **18** (20) (37)
 REC MODE **22** (14) (22)
 REC **24** (11)
 Remote sensor²⁾ **2**
 REPEAT **19** (20)
 STANDBY indicator **1** (11) (20)
 TIME¹⁾ **5** (17) (21)
 TIMER¹⁾ **14** (37)
 YES **13** (15) (23) (25) (35) (39)

BUTTON DESCRIPTIONS

I/⏻ **1** (11) (20) (25)
 ▷ **9** (11) (20) (37) (40)
 || **10** (11) (20) (39) (40)
 ■ **11** (11) (20) (25) (37) (40)
 ◀▶ **23** (20) (26) (40)


- 1) MDS-JE770 only.
- 2) MDS-JE770 only. For MDS-JE470, the remote sensor is located on the display window.

SECTION 3 DISASSEMBLY

• This set can be disassembled in the order shown below.

3-1. DISASSEMBLY FLOW


• Abbreviation
SP : Singapore

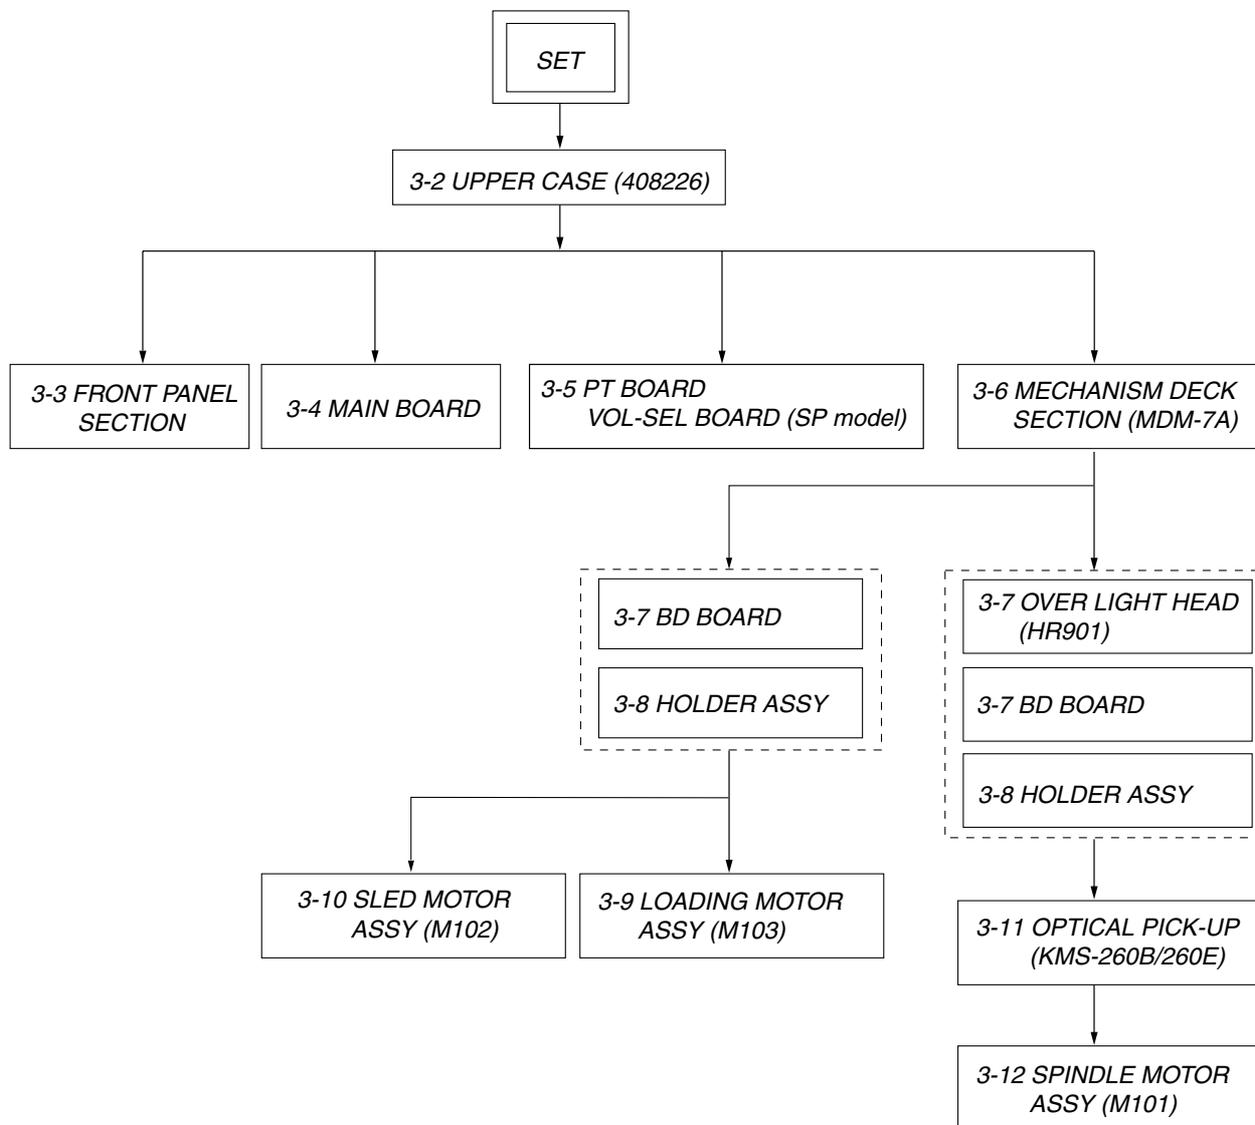


Note 1: The processes enclosed with [- - -], remove in the any order.

Note 2: You cannot go to the next process until every process enclosed with [- - -] has done.


3-2. UPPER CASE (408226)

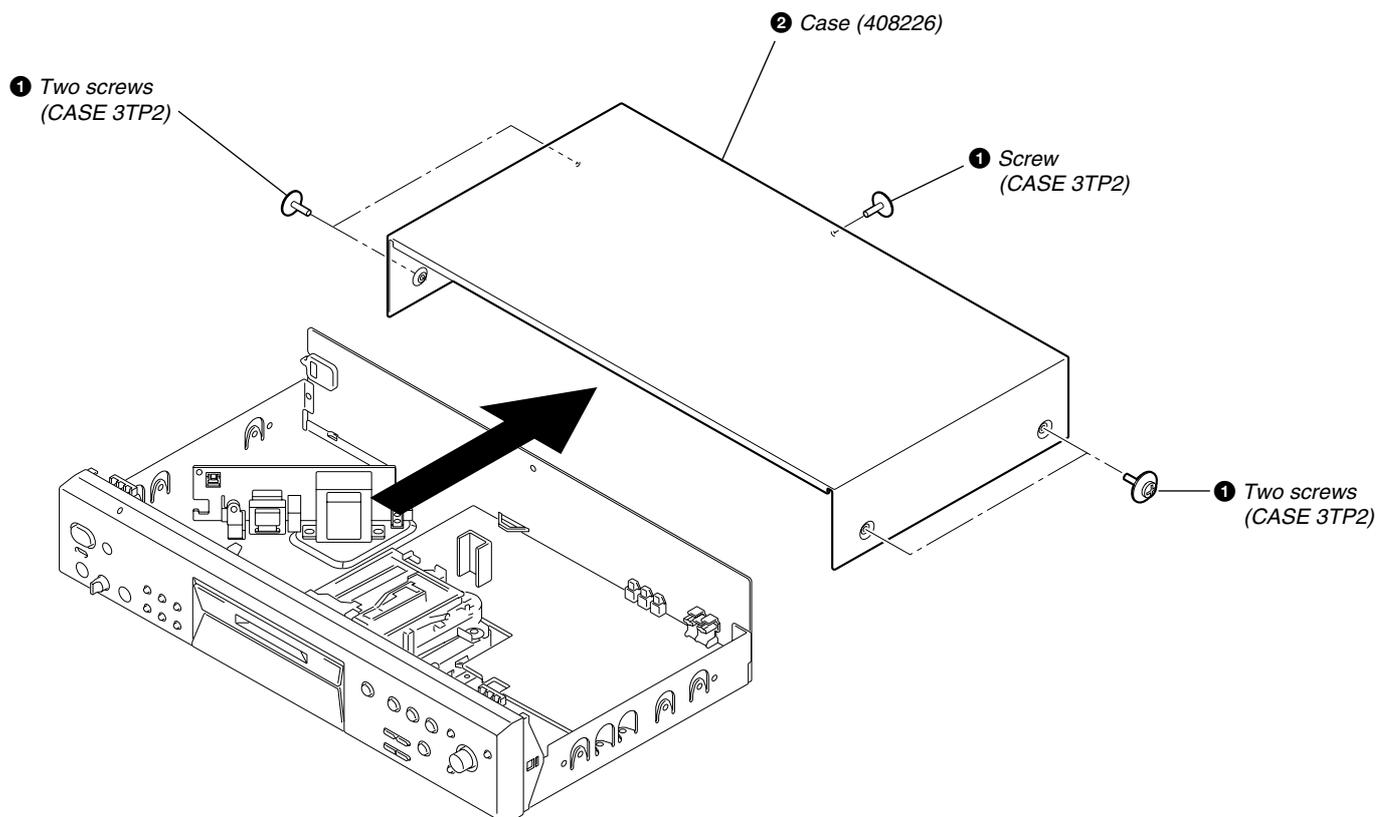


3-3. FRONT PANEL SECTION

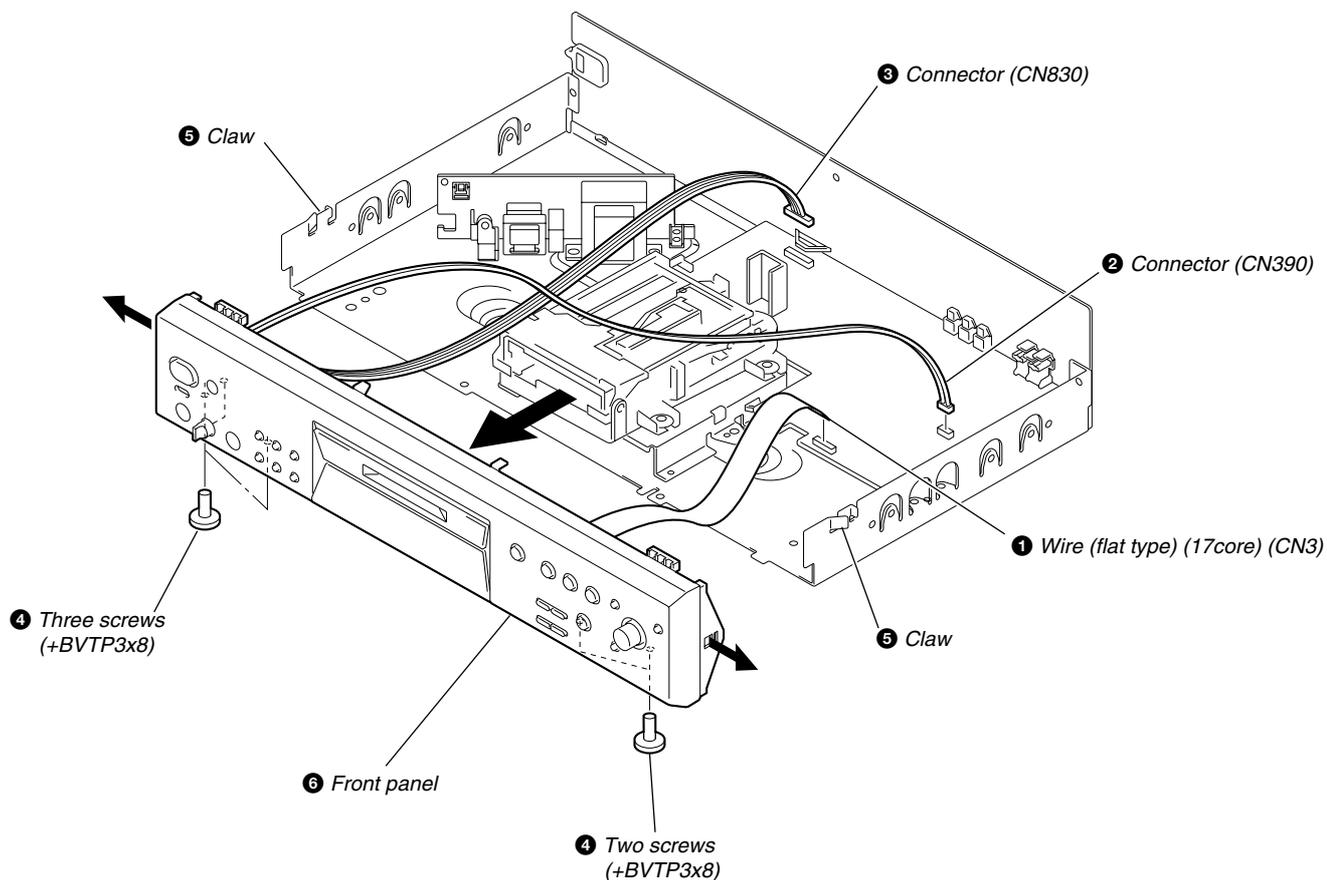


3-4. MAIN BOARD

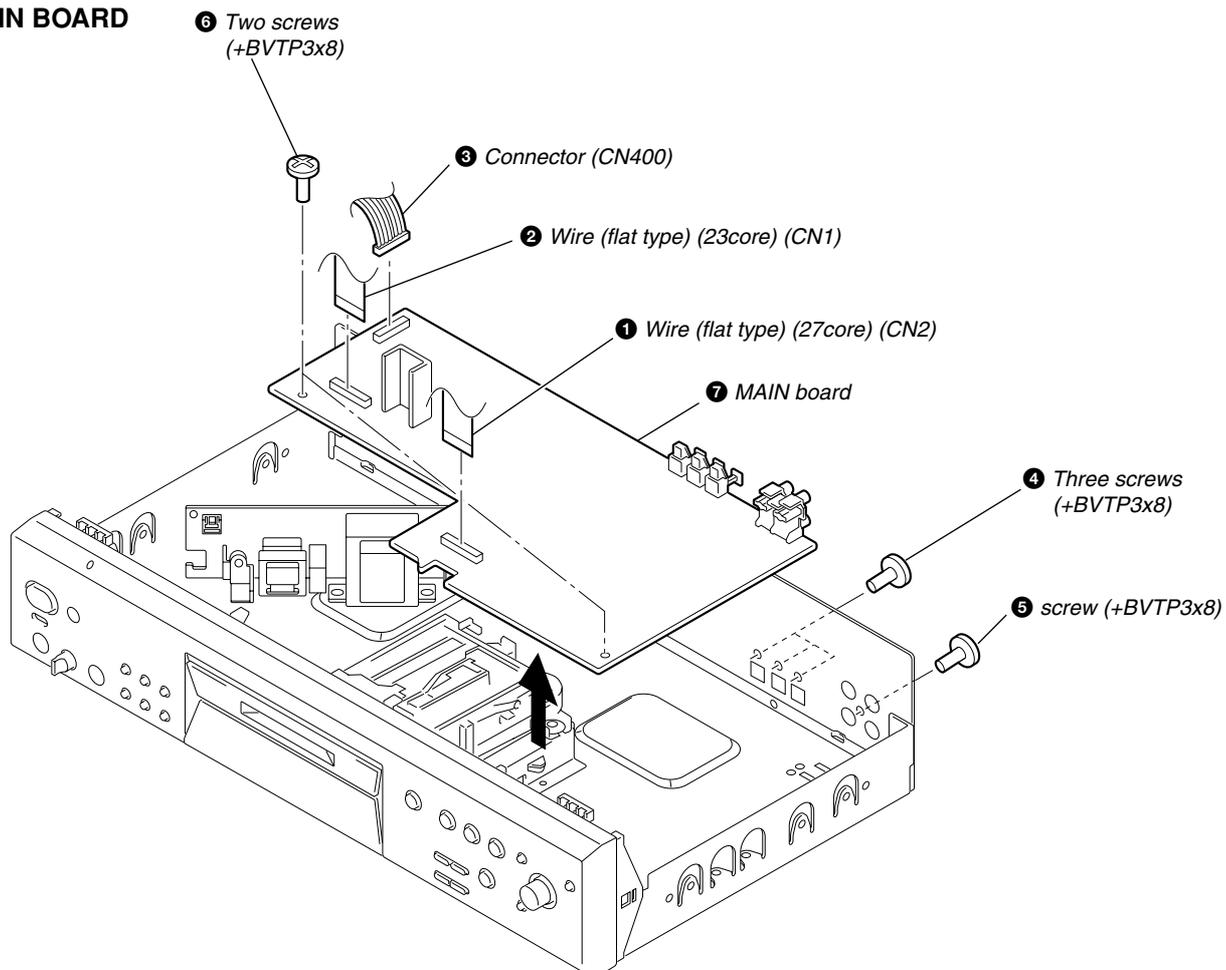

3-5. PT BOARD, VOL-SEL BOARD (SP model)

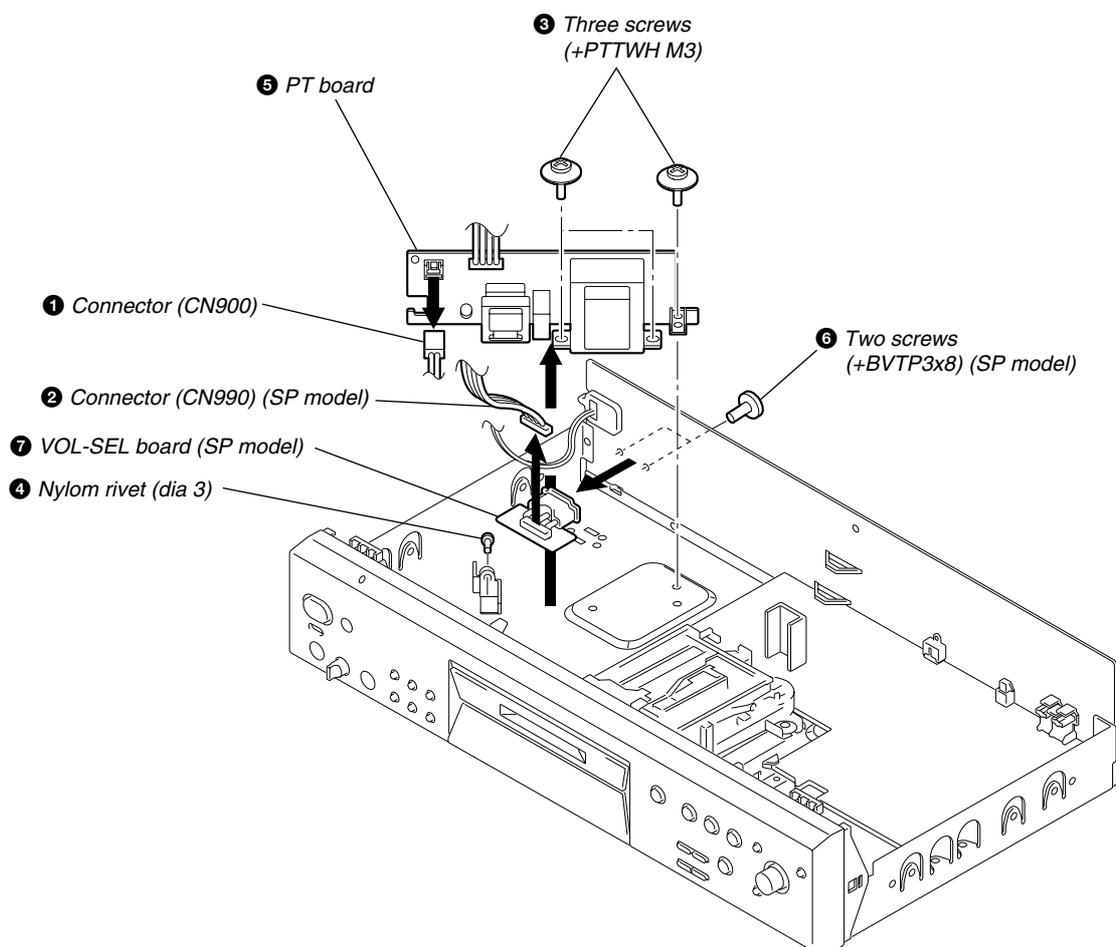


3-6. MECHANISM DECK SECTION (MDM-7A)

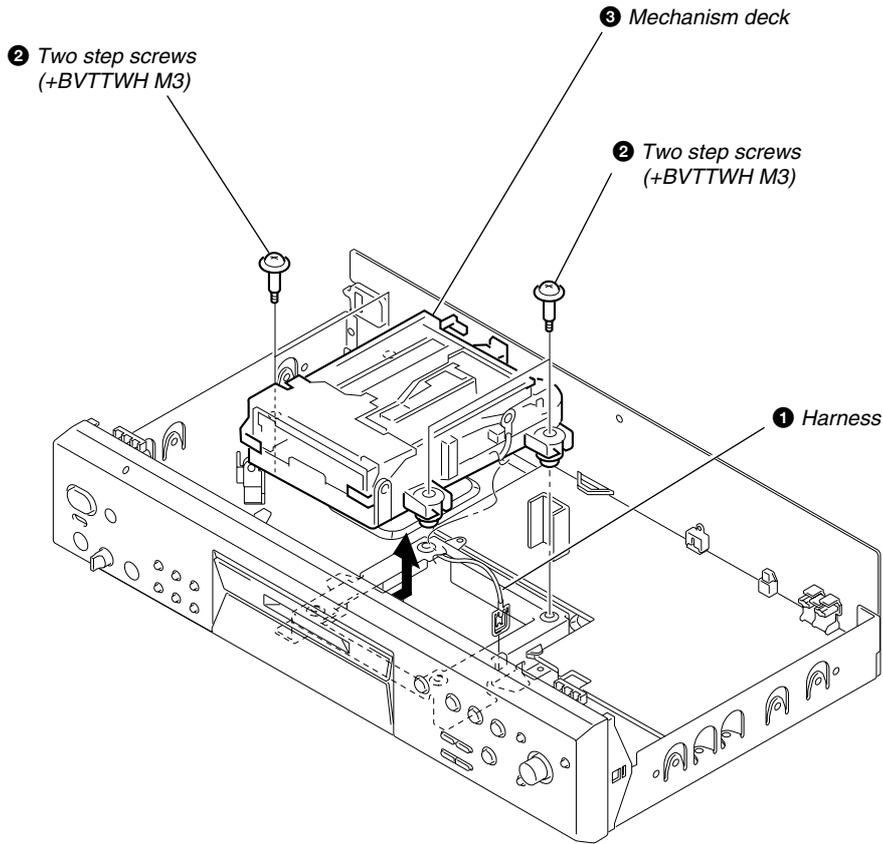


3-7. OVER LIGHT HEAD (HR901), BD BOARD

Note 1: If you disconnect the connector (CN104), you can remove the BD board without removing the over write head (HR901).


Note 2: Be careful to handle the over write head (HR901) because it is easy to be damaged.

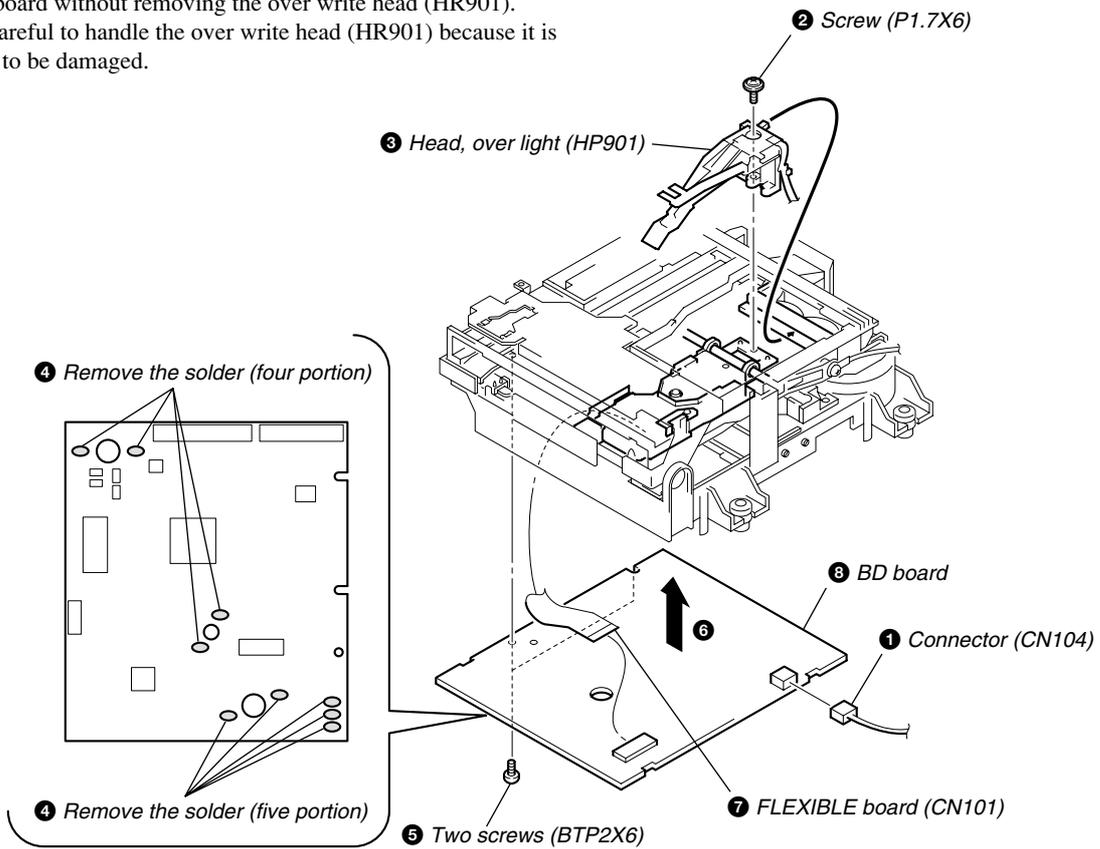


3-8. HOLDER ASSY

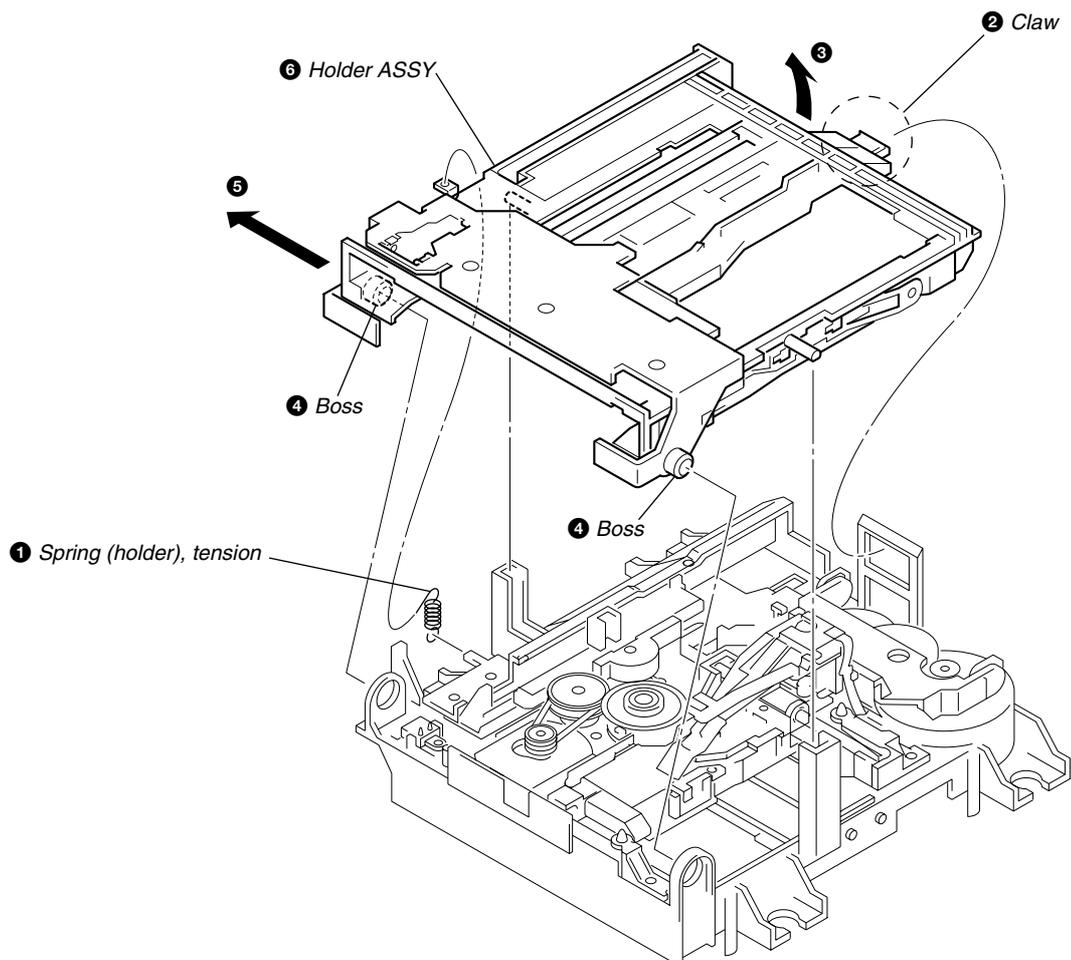


3-9. LOADING MOTOR ASSY (M103)

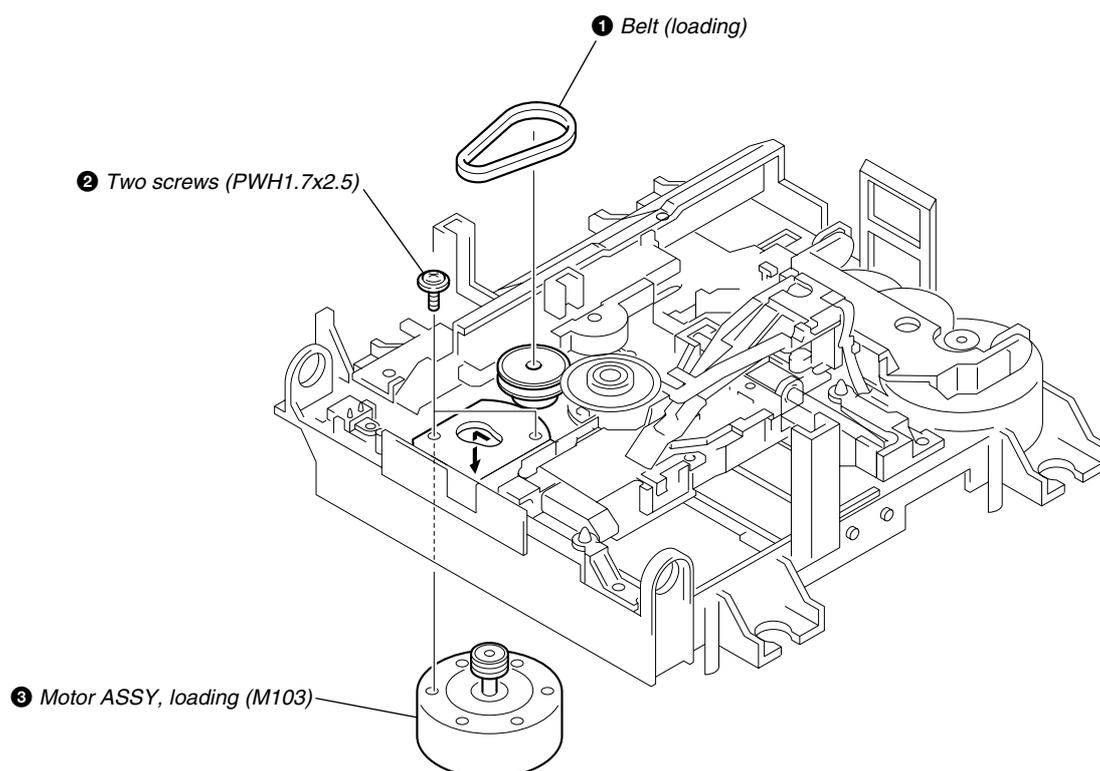


3-10. SLED MOTOR ASSY (M102), SLIDER

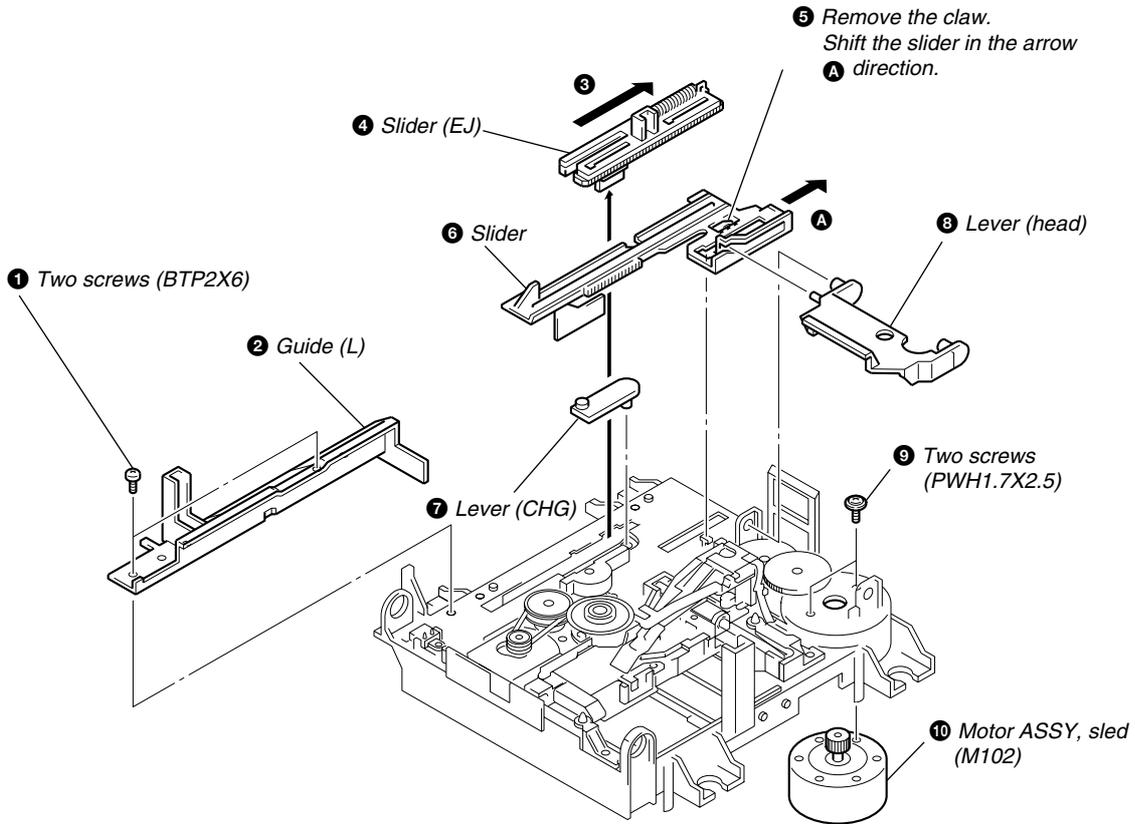

3-11. OPTICAL PICK-UP

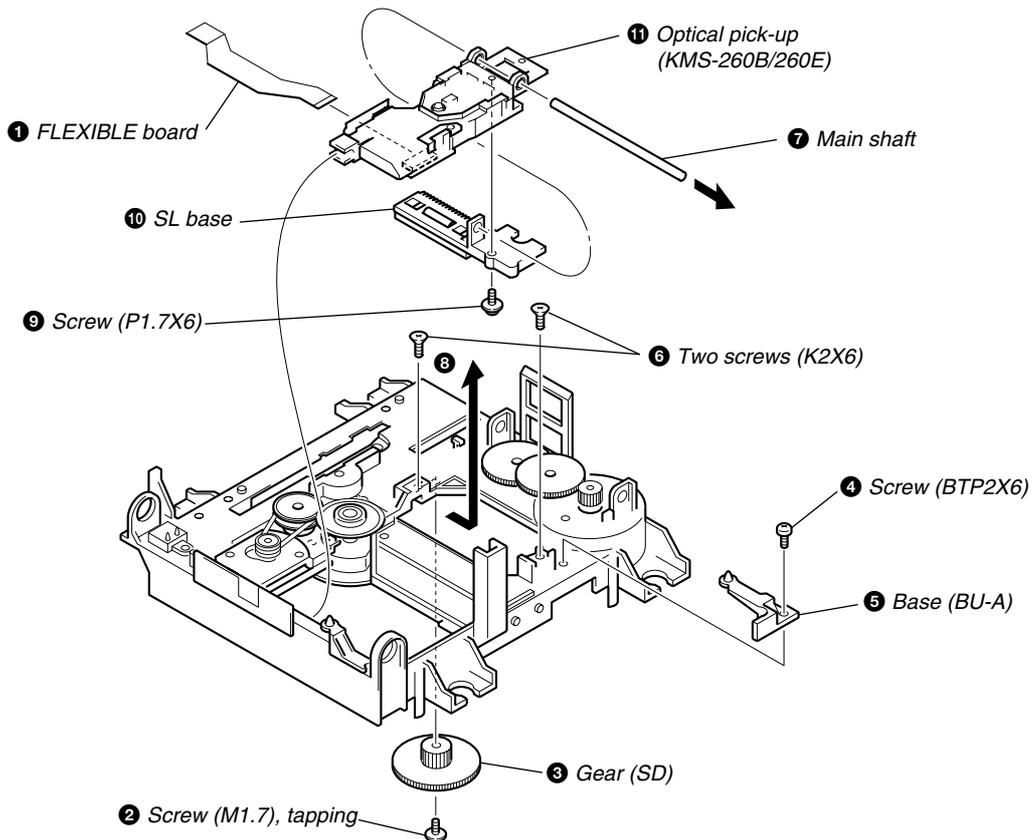

3-12. SPINDLE MOTER ASSY (M101)

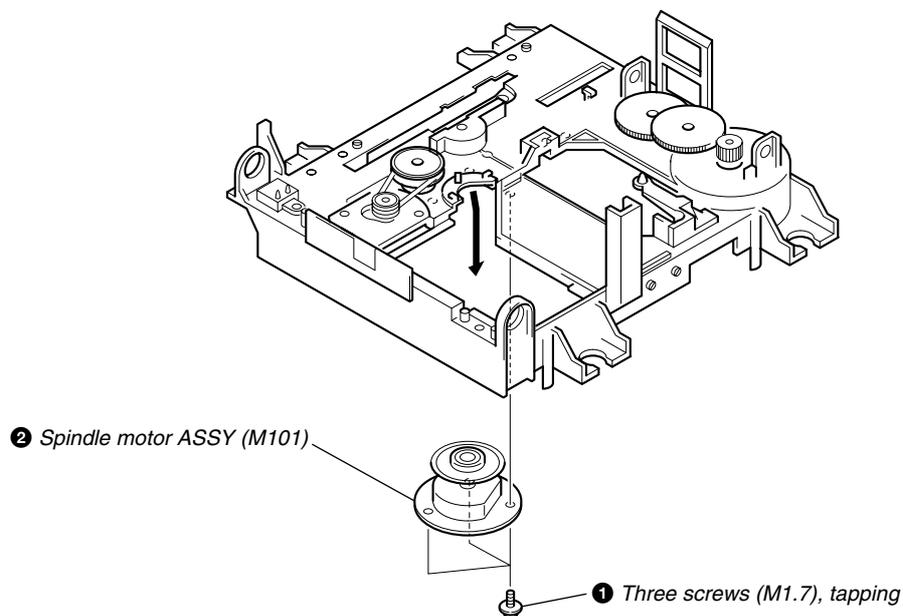

SECTION 4 TEST MODE

4-1. PRECAUTIONS FOR USE OF TEST MODE

- As loading related operations will be performed regardless of the test mode operations being performed, be sure to check that the disc is stopped before setting and removing it.
Even if the **EJECT** button is pressed while the disc is rotating during continuous playback, continuous recording, etc., the disc will not stop rotating.
Therefore, it will be ejected while rotating.
Be sure to press the **EJECT** button after pressing the **MENU/NO** button and the rotation of disc is stopped.

4-1-1. Recording laser emission mode and operating buttons

- Continuous recording mode (CREC 1MODE) (C35)
- Laser power check mode (LDPWR CHECK) (C13)
- Laser power adjustment mode (LDPWR ADJUS) (C04)
- Iop check (Iop Compare) (C27)
- Iop value nonvolatile writing (Iop NV Save) (C06)
- Traverse (MO) check (EF MO CHECK) (C14)
- Traverse (MO) adjustment (EF MO ADJUS) (C07)
- When pressing the **REC** button.

4-2. SETTING THE TEST MODE

The following are two methods of entering the test mode.

Procedure 1: While pressing the **AMS** knob and **STOP** button, connect the power plug to an outlet, and release the **AMS** knob and **STOP** button.

When the test mode is set, “[Check]” will be displayed. Rotating the **AMS** knob switches between the following three groups; ... ↔ Check ↔ Service ↔ Develop ↔ ...

Procedure 2: While pressing the **AMS** knob, connect the power plug to the outlet and release the **AMS** knob.

When the test mode is set, “TEMP CHECK”(C12) will be displayed. By setting the test mode using this method, only the “Check” group of method 1 can be executed.

NOTE: Do not use the test mode in the [Develop] group.

If used, the unit may not operate normally.

If the [Develop] group is set accidentally, press the **MENU/NO** button immediately to exit the [Develop] group.

4-3. EXITING THE TEST MODE

Press the **REPEAT** button. The disc is ejected when loaded, and “Standby” display blinks, and the STANDBY state is set.

4-4. BASIC OPERATIONS OF THE TEST MODE

All operations are performed using the **AMS** knob, **YES** button, and **MENU/NO** button.

The functions of these buttons are as follows.

Function name		Function
MENU/NO button		Cancel or move to top hierarchy
YES button		Set
AMS knob	Left or Right	Select
	Push	Set submenu

4-5. SELECTING THE TEST MODE

There are 26 types of test modes as shown below. The groups can be switched by rotating the $\llcorner \llcorner \text{AMS} \triangleright \triangleright \lrcorner$ knob. After selecting the group to be used, press the **YES** button. After setting a certain group, rotating the $\llcorner \llcorner \text{AMS} \triangleright \triangleright \lrcorner$ knob switches between these modes. Refer to “Group” in the table for details selected.

All adjustments and checks during servicing can be performed in the test mode in the Service group.

NOTE: Do not use the test mode in the [Develop] group.

If used, the unit may not operate normally.

If the [Develop] group is set accidentally, press the **MENU/NO** button immediately to exit the [Develop] group.

Display	No.	Details	Mark	Group	
				Check	Service
AUTO CHECK	C01	Automatic self-diagnosis			<input type="radio"/>
Err Display	C02	Error history display, clear			<input type="radio"/>
TEMP ADJUS	C03	Temperature compensation offset adjustment			<input type="radio"/>
LDPWR ADJUS	C04	Laser power adjustment			<input type="radio"/>
Iop Write	C05	Iop data writing			<input type="radio"/>
Iop NV Save	C06	Writes current Iop value in read nonvolatile memory using microprocessor			<input type="radio"/>
EF MO ADJUS	C07	Traverse (MO) adjustment			<input type="radio"/>
EF CD ADJUS	C08	Traverse (CD) adjustment			<input type="radio"/>
FBIAS ADJUS	C09	Focus bias adjustment			<input type="radio"/>
AG Set (MO)	C10	Focus, tracking gain adjustment (MO)			<input type="radio"/>
AG Set (CD)	C11	Focus, tracking gain adjustment (CD)			<input type="radio"/>
TEMP CHECK	C12	Temperature compensation offset check		<input type="radio"/>	<input type="radio"/>
LDPWR CHECK	C13	Laser power check		<input type="radio"/>	<input type="radio"/>
EF MO CHECK	C14	Traverse (MO) check		<input type="radio"/>	<input type="radio"/>
EF CD CHECK	C15	Traverse (CD) check		<input type="radio"/>	<input type="radio"/>
FBIAS CHECK	C16	Focus bias check		<input type="radio"/>	<input type="radio"/>
ScurveCHECK	C17	S-curve check	×	<input type="radio"/>	
VERIFYMODE	C18	Nonvolatile memory check	×	<input type="radio"/>	
DETRK CHECK	C19	Detrack check	×	<input type="radio"/>	
0920 CHECK	C25	Most circumference check	×	<input type="radio"/>	
Iop Read	C26	Iop data display		<input type="radio"/>	<input type="radio"/>
Iop Compare	C27	Comparison with initial Iop value written in nonvolatile memory		<input type="radio"/>	<input type="radio"/>
ADJ CLEAR	C28	Initialization of nonvolatile memory for adjustment values			<input type="radio"/>
INFORMATION	C31	Display of microprocessor version, etc.		<input type="radio"/>	<input type="radio"/>
CPLAY1MODE	C34	Continuous playback mode		<input type="radio"/>	<input type="radio"/>
CREC 1MODE	C35	Continuous recording mode		<input type="radio"/>	<input type="radio"/>

- For details of each adjustment mode, refer to “5. Electrical Adjustments”.
For details of “Err Display” (C02), refer to “Self-Diagnosis Function” on page 2.
- If a different mode has been selected by mistake, press the **MENU/NO** button to exit that mode.
- Modes with (X) in the Mark column are not used for servicing and therefore are not described in detail. If these modes are set accidentally, press the **MENU/NO** button to exit the mode immediately.

4-5-1. Operating the Continuous Playback Mode

1. Entering the continuous playback mode

- ① Set the disc in the unit. (Whichever recordable discs or discs for playback only are available.)
- ② Rotate the [◀◀ AMS ▶▶] knob and display “CPLAY1 MODE”(C34).
- ③ Press the [YES] button to change the display to “CPLAY1 MID”.
- ④ When access completes, the display changes to “C = [] AD = []”.

Note : The numbers “[]” displayed show you error rates and ADER.

2. Changing the parts to be played back

- ① Press the [YES] button during continuous playback to change the display as below.



When pressed another time, the parts to be played back can be moved.

- ② When access completes, the display changes to “C = [] AD = []”.

Note : The numbers “[]” displayed show you error rates and ADER.

3. Ending the continuous playback mode

- ① Press the [MENU/NO] button. The display will change to “CPLAY1 MODE”(C34).
- ② Press the [EJECT] button to remove the disc.

Note : The playback start addresses for IN, MID, and OUT are as follows.

- IN 40h cluster
- MID 300h cluster
- OUT 700h cluster

4-5-2. Operating the Continuous Recording Mode (Use only when performing self-recording/palyback check.)

1. Entering the continuous recording mode

- ① Set a recordable disc in the unit.
- ② Rotate the [◀◀ AMS ▶▶] knob and display “CREC1 MODE” (C35).
- ③ Press the [YES] button to change the display to “CREC1 MID”.
- ④ When access completes, the display changes to “CREC 1 ([])” and [REC] lights up.

Note : The numbers “[]” displayed shows you the recording position addresses.

2. Changing the parts to be recorded

- ① When the [YES] button is pressed during continuous recording, the display changes as below.



When pressed another time, the parts to be recorded can be changed. [REC] goes off.

- ② When access completes, the display changes to “CREC 1 ([])” and [REC] lights up.

Note : The numbers “[]” displayed shows you the recording position addresses.

3. Ending the continuous recording mode

- ① Press the [MENU/NO] button. The display changes to “CREC1 MODE” (C35) and [REC] goes off.
- ② Press the [EJECT] button to remove the disc.

Note 1 : The recording start addresses for IN, MID, and OUT are as follows.

- IN 40h cluster
- MID 300h cluster
- OUT 700h cluster

Note 2 : The [MENU/NO] button can be used to stop recording anytime.

Note 3 : Do not perform continuous recording for long periods of time above 5 minutes.

Note 4 : During continuous recording, be careful not to apply vibration.

4-6. FUNCTIONS OF OTHER BUTTONS

Function	Contents
▷	Sets continuous playback when pressed in the STOP state. When pressed during continuous playback, the tracking servo turns ON/OFF.
■	Stops continuous playback and continuous recording.
▶▶	The sled moves to the outer circumference only when this is pressed.
◀◀	The sled moves to the inner circumference only when this is pressed.
REC MODE	Switches between the pit and groove modes when pressed.
PLAY MODE	Switches the spindle servo mode (CLV S ↔ CLV A).
LEVEL/DISPLAY/CHAR	Switches the displayed contents each time the button is pressed.
⏏	Ejects the disc.
REPEAT	Exits the test mode.

4-7. TEST MODE DISPLAYS

Each time the LEVEL/DISPLAY/CHAR button is pressed, the display changes in the following order.
When CPLAY and CREC are started, the display will forcibly be switched to the error rate display as the initial mode.

1. Mode display

Displays “TEMP ADJUST” (C03), “CPLAY1MODE” (C34), etc.

2. Error rate display

Displays the error rate in the following way.

C = □□□□ AD = □□

C = Indicates the C error.

AD = Indicates ADER.

3. Address display

The address is displayed as follows. (MO:recordable disc, CD:playback only disc)

If the REC MODE button is pressed, the display switches from groove to pit or vice versa.

h = □□□□ s = □□□□ (MO pit and CD)


h = □□□□ a = □□□□ (MO groove)

h = Indicates the header address.

s = Indicates the SUBQ address.

a = Indicates the ADIP address.

Note: “-” is displayed when the address cannot be read.

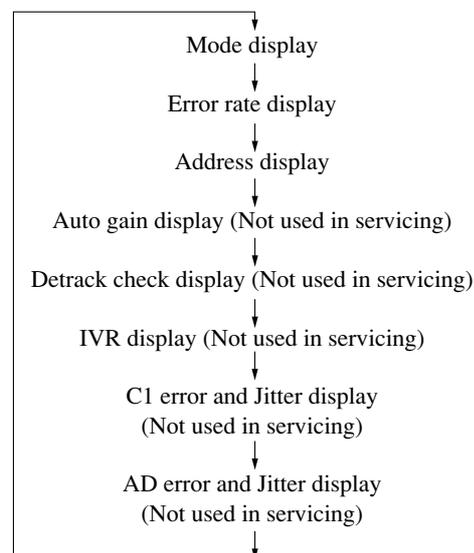

4-8. MEANINGS OF OTHER DISPLAYS

Display	Contents	
	When Lit	When Off
▷	Servo ON	Servo OFF
	Tracking servo OFF	Tracking servo ON
REC	Recording mode ON	Recording mode OFF
SYNC	CLV low speed mode	CLV normal mode
L.SYNC	ABCD adjustment completed	
OVER	Tracking offset cancel ON	Tracking offset cancel OFF
B/I	Tracking auto gain OK	
A-/REP	Focus auto gain OK	
REC MODE	Pit	Groove
DISC/LP2	High reflection	Low reflection
SLEEP/SHUF	CLV S	CLV A
MONO	CLV LOCK	CLV UNLOCK

4-9. AUTOMATIC SELF-DIAGNOSIS FUNCTION

This test mode performs CREC and CPLAY automatically for mainly checking the characteristics of the optical pick-up. To perform this test mode, the laser power must first be checked. Perform AUTO CHECK after the laser power check and Iop compare.

Procedure

1. Press the button. If “LDPWR ミチェック ” is displayed, it means that the laser power check has not been performed. In this case, perform the laser power check and Iop compare, and then repeat from step 1.
2. If a disc is in the mechanical deck, it will be ejected forcibly.
“DISC IN” will be displayed in this case. Load a test disc (MDW-74/GA-1) which can be recorded.
3. If a disk is loaded at step 2, the check will start automatically.
4. When “XX CHECK” is displayed, the item corresponding to XX will be performed.
When “06 CHECK” completes, the disc loaded at step 2 will be ejected:“DISC IN” will be displayed. Load the check disc (MDTDYS-1).
5. When the disc is loaded in step 4, the check will automatically be resumed from “07 CHECK”.
6. After completing to test item 12, check OK or NG will be displayed. If all items are OK“CHECK ALLOK” will be displayed. If any item is NG, it will be displayed as “NG:xxxx”.

When “CHECK ALL OK” is displayed, it means that the optical pick-up is normal. Check the operations of the other spindle motor, thread motor, etc.

When displayed as “NG:xxxx”, it means that the optical pick-up is faulty. In this case, replace the optical pick-up.

4-10. INFORMATION

Display the software version.

Procedure

1. If displayed as “INFORMATION”, press the button.
2. The software version will be displayed.
3. Press the button to end this mode.

4-11. WHEN MEMORY NG IS DISPLAYED

If the nonvolatile memory data is abnormal, “E001”/“MEMORY NG” will be displayed so that the MD deck does not continue operations. In this case, set the test mode promptly and perform the following procedure.

Procedure

1. Set the test mode. (Refer to 4-2.)
2. Normally a message for selecting the test mode will be displayed. However if the nonvolatile memory is abnormal, the following will be displayed. “INIT EEP?”
3. Press the button and button together.
4. Rotate the knob and select MDM-7A.
5. Press the knob. If the nonvolatile memory is successfully overwritten, the normal test mode will be set and a message to select the test mode will be displayed.

Note: When this setting is doing, readjustment is necessary.
(Adjustment it same as IC195 exchanged)


SECTION 5 ELECTRICAL ADJUSTMENTS

Note : 260B: KMS-260B
260E: KMS-260E


5-1. PARTS REPLACEMENT AND ADJUSTMENT

If malfunctions caused by Optical pick-up such as sound skipping are suspected, follow the following check.

Check before replacement

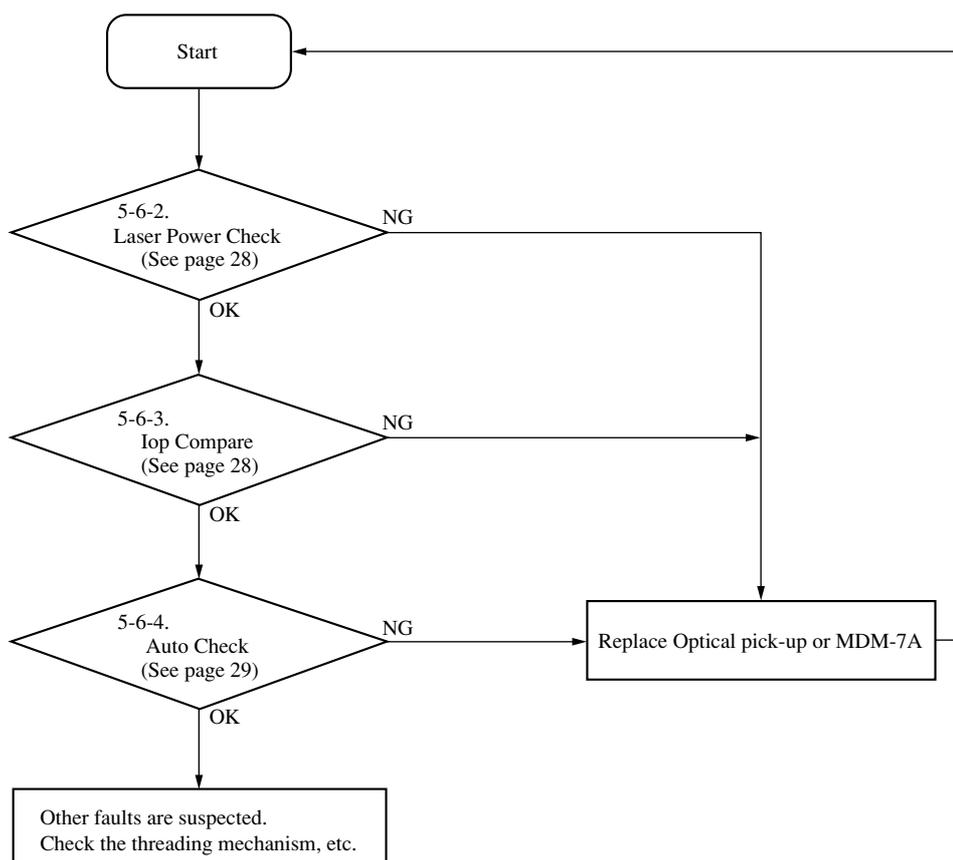

Adjustment flow

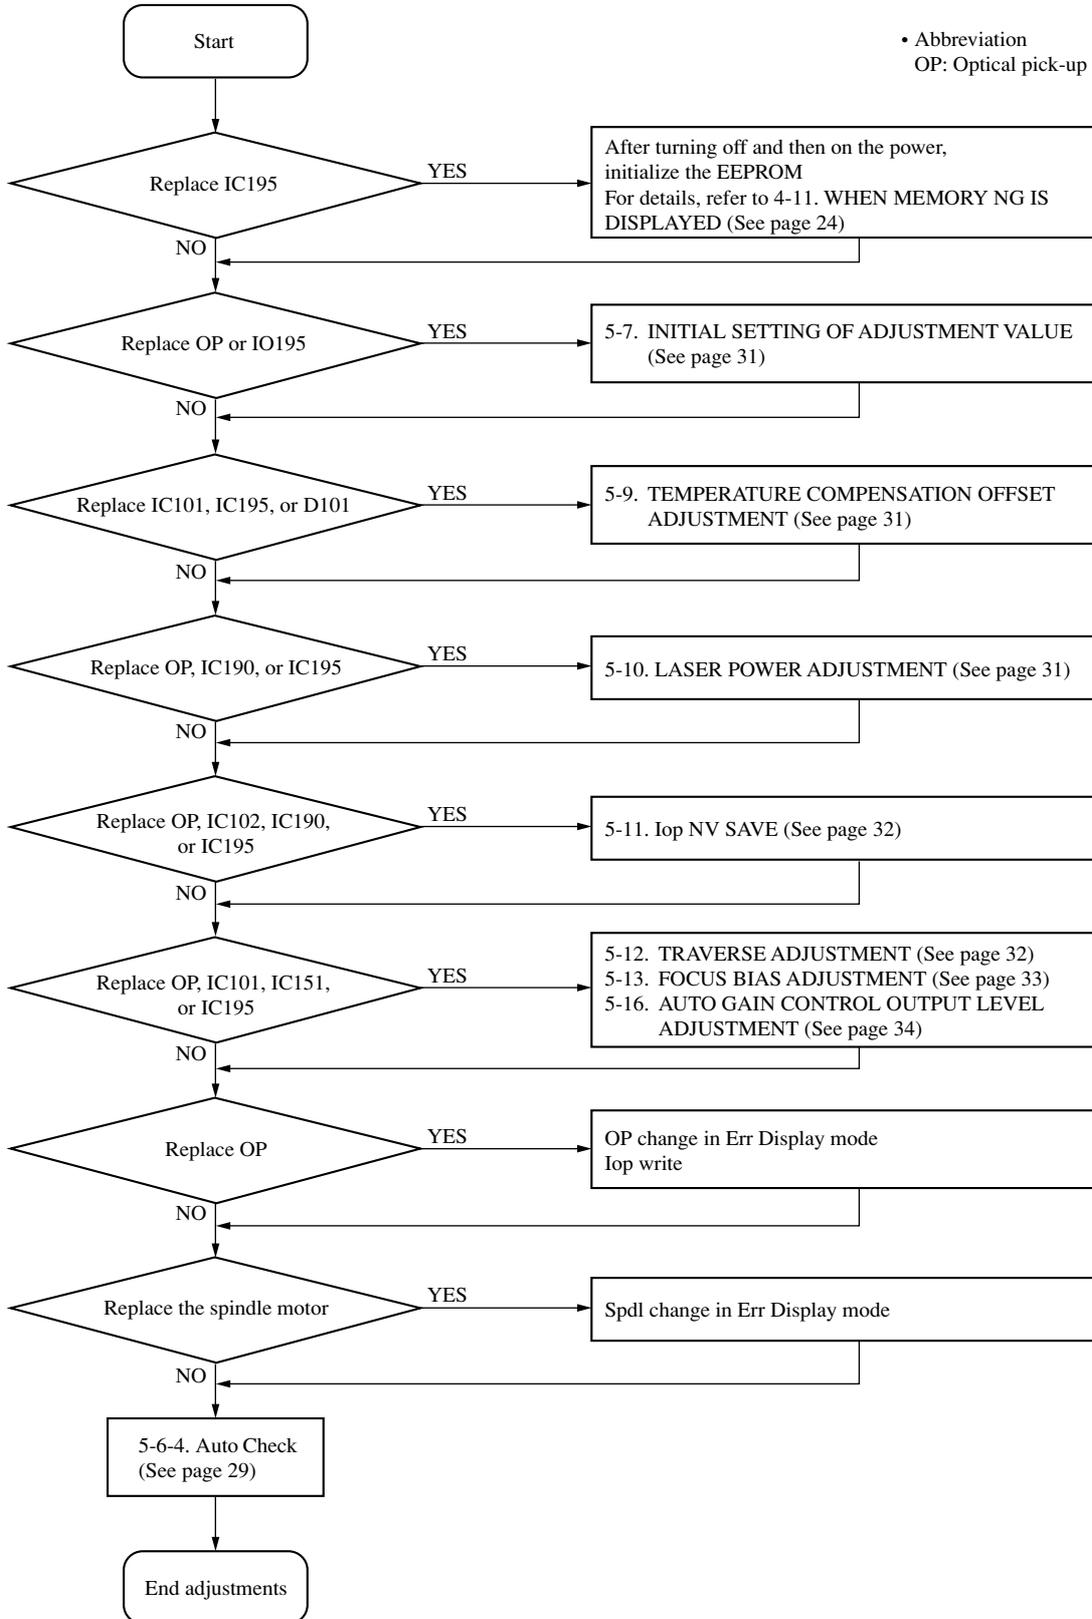


5-2. PRECAUTIONS FOR CHECKING LASER DIODE EMISSION

To check the emission of the laser diode during adjustments, never view directly from the top as this may lose your eye-sight.

5-3. PRECAUTIONS FOR USE OF OPTICAL PICK-UP (KMS-260B/260E)

As the laser diode in the optical pick-up is easily damaged by static electricity, solder the laser tap of the flexible board when using it. Before disconnecting the connector, desolder first. Before connecting the connector, be careful not to remove the solder. Also take adequate measures to prevent damage by static electricity. Handle the flexible board with care as it breaks easily.

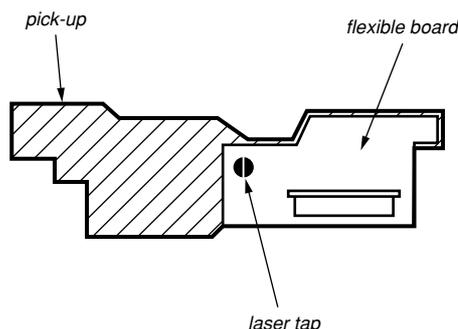

Optical pick-up flexible board

5-4. PRECAUTIONS FOR ADJUSTMENTS

- 1) When replacing the following parts, perform the adjustments and checks with ○ in the order shown in the following table.
- 2) Set the test mode when performing adjustments.
After completing the adjustments, exit the test mode.
Perform the adjustments and checks in “group S” of the test mode.
- 3) Perform the adjustments to be needed in the order shown.
- 4) Use the following tools and measuring devices.
 - Check Disc (MD) TDYS-1 (Parts No. 4-963-646-01)
 - Test Disk (MDW-74/GA-1) (Parts No. 4-229-747-01)
 - Laser power meter LPM-8001 (Parts No. J-2501-046-A)
 or
 MD Laser power meter 8010S (Parts No. J-2501-145-A)
- Oscilloscope (Measure after performing CAL of prove.)
- Digital voltmeter
- Thermometer
- Jig for checking BD board waveform (Parts No. : J-2501-196-A)
- 5) When observing several signals on the oscilloscope, etc., make sure that VC and ground do not connect inside the oscilloscope.
(VC and ground will become short-circuited.)
- 6) Using the above jig enables the waveform to be checked without the need to solder.
(Refer to Servicing Note on page 6.)
- 7) As the disc used will affect the adjustment results, make sure that no dusts nor fingerprints are attached to it.

Adjustment	Parts to be replaced						
	Optical Pick-up	IC101	IC102	IC151	IC190	IC195	D101
5-7. Initial setting of adjustment values	○	×	×	×	×	○	×
5-8. Recording of Iop information	○	×	×	×	×	○	×
5-9. TEMP ADJUST	×	○	×	×	×	○	○
5-10. Laser power adjustment	○	×	×	×	○	○	×
5-11. Iop NV Save	○	×	○	×	○	○	×
5-12. Traverse adjustment	○	○	×	○	×	○	×
5-13. Focus bias adjustment	○	○	×	○	×	○	×
5-16. Auto gain adjustment	○	○	×	○	×	○	×
5-6-4. AUTO CHECK	○	○	×	○	○	○	×

5-5. USING THE CONTINUOUSLY RECORDED DISC

* This disc is used in focus bias adjustment and error rate check.
The following describes how to create a continuous recording disc.

1. Insert a disc (blank disc) commercially available.
2. Rotate the [◀◀ AMS ▶▶] knob and display “CREC1 MODE”(C35).
3. Press the [YES] button again to display “CREC1 MID”.
Display “CREC (0300)” and start to recording.
4. Complete recording within 5 minutes.
5. Press the [MENU/NO] button and stop recording .
6. Press the [EJECT] button and remove the disc.

The above has been how to create a continuous recorded data for the focus bias adjustment and error rate check.

Note :

- Be careful not to apply vibration during continuous recording.

5-6. CHECKS PRIOR TO REPAIRS

These checks are performed before replacing parts according to “approximate specifications” to determine the faulty locations. For details, refer to “Checks Prior to Parts Replacement and Adjustments” (See page 9).

5-6-1. Temperature Compensation Offset Check

When performing adjustments, set the internal temperature and room temperature to 22 to 28°C.

Checks cannot be performed properly if performed after some time from power ON due to the rise in the temperature of the IC and diode, etc. So, perform the checks again after waiting some time.


Checking Procedure:

1. Rotate the [◀◀ AMS ▶▶] knob to display “TEMPCHECK”. (C12)
2. Press the [YES] button.
3. “T=@@ (##) [OK]” should be displayed. If “T=@@ (##) [NG]” is displayed, it means that the results are bad.
(@@ indicates the current value set, and ## indicates the value written in the non-volatile memory.)

5-6-2. Laser Power Check

Before checking, check the Iop value of the optical pick-up.
(Refer to 5-8. Recording and Displaying Iop Information.)

Connection :

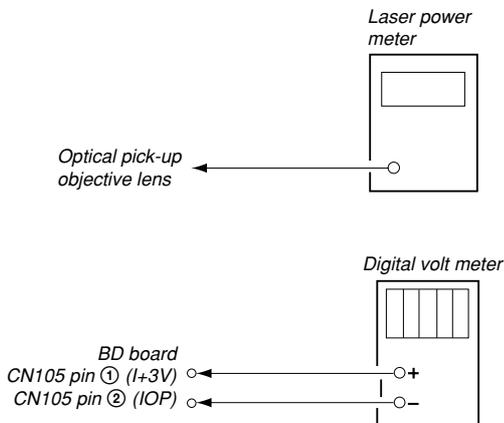

Checking Procedure:

1. Set the laser power meter on the objective lens of the optical pick-up. (When it cannot be set properly, press the [◀] button or [▶] button to move the optical pick-up.)
Connect the digital volt meter to CN105 pin ① (I+3V) and CN105 pin ② (IOP).
2. Then, rotate the [◀◀ AMS ▶▶] knob and display “LDPWR CHECK”.
3. Press the [YES] button once and display “LD 0.9 mW \$ []”.
Check that the reading of the laser power meter become the specified value.
4. Press the [YES] button once more and display “ LD 7.0 mW \$ []”.
Check that the reading the laser power meter and digital volt meter satisfy the specified value.

Specified Value :

Laser power meter reading : LD 0.9mW : 0.85-0.91mW (260B)
0.90-0.96mW (260E)
LD 7.0mW : 6.80-7.20mW (260B)
7.00-7.50mW (260E)

Digital voltmeter reading : Optical pick-up displayed value ± 10%

(Optical pick-up label)



(For details of the method for checking this value, refer to “5-8. Recording and Displaying Iop Information”.)

Iop = 57.6 mA in this case

$$Iop (mA) = \text{Digital voltmeter reading (mV)} / 1 (\Omega)$$

5. Press the [MENU/NO] button and display “LDPWR CHECK” and stop the laser emission.
(The [MENU/NO] button is effective at all times to stop the laser emission.)

Note 1: After step 4, each time the [YES] button is pressed, the display will be switched between “LD 0.7 mW \$ []”, “LD 6.2 mW \$ []”, and “LD Wp ホセ イ \$ []”. Nothing needs to be performed here.

5-6-3. Iop Compare

The current Iop value at laser power 7 mw output and reference Iop value (set at shipment) written in the nonvolatile memory are compared, and the rate of increase/decrease will be displayed in percentage.

Note: Perform this function with the optical pick-up set at room temperature.

Procedure

1. Rotate the [◀◀ AMS ▶▶] knob to display “Iop Compare”(C27).
2. Press the [YES] button and start measurements.
3. When measurements complete, the display changes to “±xx%yy”.
xx is the percentage of increase/decrease, and OK or NG is displayed at yy to indicate whether the percentage of increase/decrease is within the allowable range.
4. Press the [MENU/NO] button to end.

5-6-4. Auto Check

This test mode performs CREC and CPLA Y automatically for mainly checking the characteristics of the optical pick-up. To perform this test mode, the laser power must first be checked. Perform Auto Check after the laser power check and Iop compare.

Procedure

1. Press the **YES** button. If "LDPWR minicheck" is displayed, it means that the laser power check has not been performed. In this case, perform the laser power check and Iop compare, and then repeat from step 1.
2. If a disc is in the mechanical deck, it will be ejected forcibly. "DISC IN" will be displayed in this case. Load a test disc (MDW 74/GA-1) which can be recorded.
3. If a disk is loaded at step 2, the check will start automatically.
4. When "XX CHECK" is displayed, the item corresponding to XX will be performed.
When "06 CHECK" completes, the disc loaded at step 2 will be ejected. "DISC IN" will be displayed. Load the check disc (MD) TDYS-1.
5. When the disc is loaded, the check will automatically be resumed from "07 CHECK".
6. After completing to test item 12, check OK or NG will be displayed. If all items are OK, "CHECK ALL OK" will be displayed. If any item is NG, it will be displayed as "NG:xxxx".

When "CHECK ALL OK" is displayed, it means that the optical pick-up is normal. Check the operations of the other spindle motor thread motor, etc.

When displayed as "NG:xxxx", it means that the optical pick-up is faulty. In this case, replace the optical pick-up.


5-6-5. Other Checks

All the following checks are performed by the Auto Check mode. They therefore need not be performed in normal operation.

1. Load a continuously recorded test disc (MDW-74/GA-1). (Refer to "5-5. Using the Continuously Recorded Disc".)

5-6-6. Traverse Check

Connection :

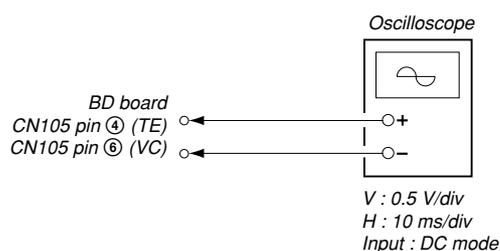


Checking Procedure:

1. Connect an oscilloscope to CN105 pin ④ (TE) and CN105 pin ⑥ (VC) of the BD board.
2. Load a test disc (MDW-74/GA-1). (Refer to Note 1.)
3. Press the **▶▶** button and move the optical pick-up outside the pit.
4. Rotate the **◀◀ AMS ▶▶** knob and display "EF MO CHECK".
5. Press the **YES** button and display "EFB = MO-R".
(Laser power READ power/Focus servo ON/tracking servo OFF/spindle (S) servo ON)

6. Observe the waveform of the oscilloscope, and check that the specified value is satisfied. Do not rotate the **AMS** knob. (Read power traverse checking)

(Traverse Waveform)

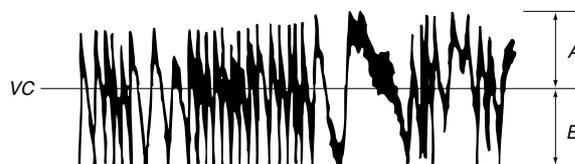


Specified value : Below 10% offset value

$$\text{Offset value (\%)} = \frac{|A - B|}{2(A + B)} \times 100$$

7. Press the **YES** button and display "EFB = MO-W".
8. Observe the waveform of the oscilloscope, and check that the specified value is satisfied. Do not rotate the **◀◀ AMS ▶▶** knob.

(Write power traverse checking)

(Traverse Waveform)

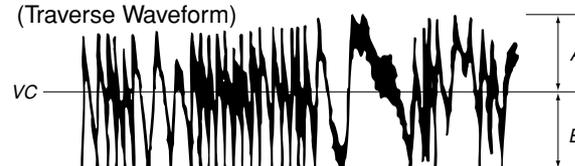


Specified value : Below 10% offset value

$$\text{Offset value (\%)} = \frac{|A - B|}{2(A + B)} \times 100$$

9. Press the **YES** button display "EFB = MO-P".
Then, the optical pick-up moves to the pit area automatically and servo is imposed.
10. Observe the waveform of the oscilloscope, and check that the specified value is satisfied. Do not rotate the **◀◀ AMS ▶▶** knob.

(Traverse Waveform)

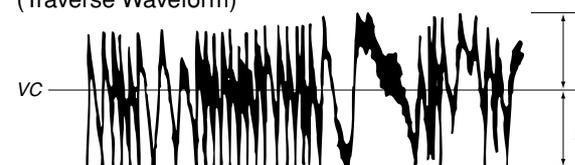


Specified value : Below 10% offset value

$$\text{Offset value (\%)} = \frac{|A - B|}{2(A + B)} \times 100$$

11. Press the **YES** button display "EF MO CHECK"(C14)
The disc stops rotating automatically.
12. Press the **EJECT** button and remove the disc.
13. Load the check disc (MD) TDYS-1.
14. Rotate the **◀◀ AMS ▶▶** knob and display "EF CD CHECK"(C15).
15. Press the **YES** button and display "EFB = CD". Servo is imposed automatically.

- Observe the waveform of the oscilloscope, and check that the specified value is satisfied. Do not rotate the $\llcorner \llcorner \text{AMS} \gg \gg \lrcorner$ knob.

(Traverse Waveform)

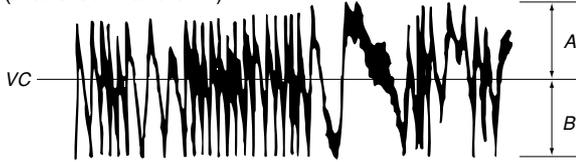


Specified value : Below 10% offset value

$$\text{Offset value (\%)} = \frac{|A - B|}{2(A + B)} \times 100$$

- Press the YES button and display “EF CD CHECK”.
- Press the EJECT button and remove the check disc (MD) TDYS-1.

Note 1 : MO reading data will be erased during if a recorded disc is used in this adjustment.

Note 2 : If the traverse waveform is not clear, connect the oscilloscope as shown in the following figure so that it can be seen more clearly.

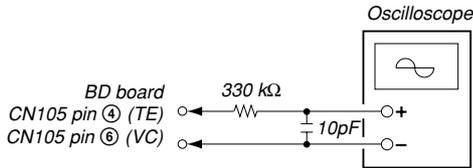

5-6-7. Focus Bias Check

Change the focus bias and check the focus tolerance amount.

Checking Procedure :

- Load a continuously recorded test disc (MDW-74/GA-1). (Refer to “5-5. Using the Continuously Recorded Disc”.)
- Rotate the $\llcorner \llcorner \text{AMS} \gg \gg \lrcorner$ knob and display “CPLA Y1 MODE”(C34).
- Press the YES button and display “CPLAY1 MID”.
- Press the MENU/NO button when “C = $\square\square\square\square$ AD = $\square\square$ ” is displayed.
- Rotate the $\llcorner \llcorner \text{AMS} \gg \gg \lrcorner$ knob and display “FBIAS CHECK”(C16).
- Press the YES button and display “ $\square\square\square\square/\square\square$ c = $\square\square$ ”.
The first four digits indicate the C error rate, the two digits after [/] indicate ADER, and the 2 digits after [c =] indicate the focus bias value.
Check that the C error is below 20 and ADER is below 2.
- Press the YES button and display “ $\square\square\square\square/\square\square$ b = $\square\square$ ”.
Check that the C error is below 100 and ADER is below 2.
- Press the YES button and display “ $\square\square\square\square/\square\square$ a = $\square\square$ ”.
Check that the C error is below 100 and ADER is below 2.
- Press the MENU/NO button, next press the EJECT button, and remove the test disc.

5-6-8. C PLAY Check

MO Error Rate Check

Checking Procedure :

- Load a continuously recorded test disc (MDW-74/GA-1). (Refer to “5-5. Using the Continuously Recorded Disc”.)
- Rotate the $\llcorner \llcorner \text{AMS} \gg \gg \lrcorner$ knob and display “CPLA Y1 MODE”(C34).
- Press the YES button and display “CPLAY1 MID”.
- The display changes to “C = $\square\square\square\square$ AD = $\square\square$ ”.
- If the C error rate is below 20, check that ADER is 00.
- Press the MENU/NO button, stop playback, press the EJECT button, and test disc.

CD Error Rate Check

Checking Procedure :

- Load a check disc (MD) TDYS-1.
- Rotate the $\llcorner \llcorner \text{AMS} \gg \gg \lrcorner$ knob and display “CPLA Y1 MODE”(C34).
- Press the YES button twice and display “CPLAY1 MID”.
- The display changes to “C1 = $\square\square\square\square$ AD = $\square\square$ ”.
- Check that the C1 error rate is below 20.
- Press the MENU/NO button, stop playback, press the EJECT button, and the test disc.

5-6-9. Self-Recording/playback Check

Prepare a continuous recording disc using the unit to be repaired and check the error rate.

Checking Procedure :

- Insert a recordable test disc (MDW-74/GA-1) into the unit.
- Rotate the $\llcorner \llcorner \text{AMS} \gg \gg \lrcorner$ knob to display “CREC1 MODE”(C34).
- Press the YES button to display the “CREC1 MID”.
- When recording starts, “**REC**” is displayed, this becomes “CREC 1 (@@@@)” (@@@@ is the address), and recording starts.
- About 1 minute later , press the MENU/NO button to stop continuous recording.
- Rotate the $\llcorner \llcorner \text{AMS} \gg \gg \lrcorner$ knob to display “C PLAY1 MODE”(C34).
- Press the YES button to display “C PLAY1 MID”.
- “C = $\square\square\square\square$ AD = $\square\square$ ” will be displayed.
- Check that the C error becomes below 20 and the AD error below 2.
- Press the MENU/NO button to stop playback, and press the EJECT button and remove the disc.

5-7. INITIAL SETTING OF ADJUSTMENT VALUE

Note:

Mode which sets the adjustment results recorded in the non-volatile memory to the initial setting value. However the results of the temperature compensation offset adjustment will not change to the initial setting value.

If initial setting is performed, perform all adjustments again excluding the temperature compensation offset adjustment.

For details of the initial setting, refer to "5-4. Precautions on Adjustments" and execute the initial setting before the adjustment as required.

Setting Procedure :

1. Rotate the **◀◀ AMS ▶▶** knob to display "ADJCLEAR" (C28).
2. Press the **YES** button. "Complete!" will be displayed momentarily and initial setting will be executed, after which "ADJ CLEAR"(C28) will be displayed.

5-8. RECORDING AND DISPLAYING THE Iop INFORMATION

The IOP data can be recorded in the non-volatile memory. The Iop value on the label of the optical pick-up and the Iop value after the adjustment will be recorded. Recording these data eliminates the need to read the label on the optical pick-up.

Recording Procedure :

1. While pressing the **◀◀ AMS ▶▶** knob and **■** button, connect the power plug to the outlet, and release the **◀◀ AMS ▶▶** knob and **■** button.
2. Rotate the **◀◀ AMS ▶▶** knob to display "[Service]", and press the **YES** button.
3. Rotate the **◀◀ AMS ▶▶** knob to display "Iop.Write"(C05), and press the **YES** button.
4. The display becomes Ref=@@@.@ (@ is an arbitrary number) and the numbers which can be changed will blink.
5. Input the Iop value written on the optical pick-up.
To select the number : Rotate the **◀◀ AMS ▶▶** knob.
To select the digit : Press the **◀◀ AMS ▶▶** knob
6. When the **YES** button is pressed, the display becomes "Measu=@@@.@" (@ is an arbitrary number).
7. As the adjustment results are recorded for the 6 value. Leave it as it is and press the **YES** button.
8. "Complete!" will be displayed momentarily. The value will be recorded in the non-volatile memory and the display will become "Iop Write"(C05).

Display Procedure :

1. Rotate the **◀◀ AMS ▶▶** knob to display "Iop.Read"(C26) and press the **YES** button.
2. "@@.@/###.#" is displayed and the recorded contents are displayed.
@@.@ indicates the Iop value labeled on the pick-up.
###.# indicates the Iop value after adjustment
3. To end, press the **◀◀ AMS ▶▶** button or **MENU/NO** button to display "Iop Read"(C26).

5-9. TEMPERATURE COMPENSATION OFFSET ADJUSTMENT

Save the temperature data at that time in the non-volatile memory as 25 °C reference data.

Note :

1. Usually, do not perform this adjustment.
2. Perform this adjustment in an ambient temperature of 22 °C to 28 °C. Perform it immediately after the power is turned on when the internal temperature of the unit is the same as the ambient temperature of 22 °C to 28 °C.
3. When D101 has been replaced, perform this adjustment after the temperature of this part has become the ambient temperature.

Adjusting Procedure :


1. Rotate the **◀◀ AMS ▶▶** knob and display "TEMPADJUS" (C03).
2. Press the **YES** button and select the "TEMP ADJUS"(C03) mode.
3. "TEMP = [] [OK]" and the current temperature data will be displayed.
4. To save the data, press the **YES** button.
When not saving the data, press the **MENU/NO** button.
5. When the **YES** button is pressed, "TEMP = [] SAVE" will be displayed and turned back to "TEMPADJUS"(C03) display then.
When the **MENU/NO** button is pressed, "TEMPADJUS" (C03) will be displayed immediately.

Specified Value :

The "TEMP = []" should be within "E0 - EF", "F0 - FF", "00 - 0F", "10 - 1F" and "20 - 2F".

5-10. LASER POWER ADJUSTMENT

Check the Iop value of the optical pick-up before adjustments. (Refer to 5-8. Recording and Displaying Iop Information.)

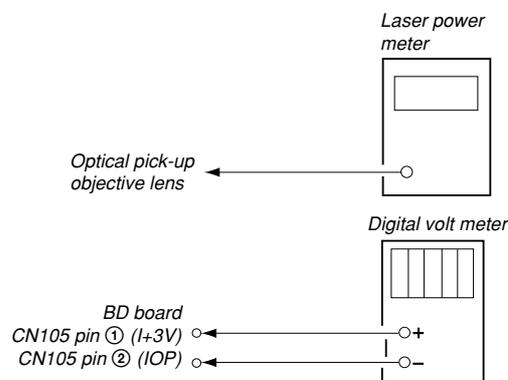

Connection :

Adjusting Procedure :

1. Set the laser power meter on the objective lens of the optical pick-up. (When it cannot be set properly, press the **◀** button or **▶** button to move the optical pick-up.)
Connect the digital volt meter to CN105 pin ① (I+3V) and CN105 pin ② (IOP).
2. Rotate the **◀◀ AMS ▶▶** knob and display "LDPWR ADJUST"(C04).
(Laser power : For adjustment)
3. Press the **YES** button once and display "LD 0.9 mW \$ []".
4. Rotate the **◀◀ AMS ▶▶** knob so that the reading of the laser power meter becomes the specified value. Press the **YES** button after setting the range knob of the laser power meter and save the adjustment results. ("LD SAVE \$ []" will be displayed for a moment.)
5. Then "LD 7.0 mW \$ []" will be displayed.
6. Rotate the **◀◀ AMS ▶▶** knob so that the reading of the laser power meter becomes the specified value, press the **YES** button and save it.

Note : Do not perform the emission with 7.0 mW more than 15 seconds continuously.

5-14. ERROR RATE CHECK

5-14-1. CD Error Rate Check

Checking Procedure :

1. Load a check disc (MD) TDYS-1.
2. Rotate the [◀◀ AMS ▶▶] knob and display “CPLA Y1 MODE”(C34).
3. Press the [YES] button twice and display “CPLAY1 MID”.
4. The display changes to “C = [] AD = []”.
5. Check that the C error rate is below 20.
6. Press the [MENU/NO] button, stop playback, press the [EJECT] button, and remove the test disc.

5-14-2. MO Error Rate Check

Checking Procedure :

1. Load a continuously recorded test disc (MDW-74/GA-1). (Refer to “5-5. Using the Continuously Recorded Disc”.)
2. Rotate the [◀◀ AMS ▶▶] knob and display “CPLA Y1 MODE”(C34).
3. Press the [YES] button and display “CPLAY1 MID”.
4. The display changes to “C = [] AD = []”.
5. If the C error rate is below 20, check that ADER is 00.
6. Press the [MENU/NO] button, stop playback, press the [EJECT] button, and remove the test disc.

5-15. FOCUS BIAS CHECK

Change the focus bias and check the focus tolerance amount.

Checking Procedure :

1. Load a continuously recorded test disc (MDW-74/GA-1). (Refer to “5-5. Using the Continuously Recorded Disc”.)
2. Rotate the [◀◀ AMS ▶▶] knob and display “CPLA Y1 MODE”(C34).
3. Press the [YES] button twice and display “CPLAY1 MID”.
4. Press the [MENU/NO] button when “C = [] AD = []” is displayed.
5. Rotate the [◀◀ AMS ▶▶] knob and display “FBIAS CHECK”(C16).
6. Press the [YES] button and display “[]/[] c = []”.
The first four digits indicate the C error rate, the two digits after [/] indicate ADR, and the 2 digits after [c =] indicate the focus bias value.
Check that the C error is below 20 and ADER is below 2.
7. Press the [YES] button and display “[]/[] b = []”.
Check that the C error is below 100 and ADER is below 2.
8. Press the [YES] button and display “[]/[] a = []”.
Check that the C error is below 100 and ADER is below 2.
9. Press the [MENU/NO] button, next press the [EJECT] button, and remove the continuously recorded disc.

Note 1 : If the C error and ADER are above other than the specified value at points a (step 8. in the above) or b (step 7. in the above), the focus bias adjustment may not have been carried out properly. Adjust perform the beginning again.

5-16. AUTO GAIN CONTROL OUTPUT LEVEL ADJUSTMENT

Be sure to perform this adjustment when the Optical pick-up is replaced.

If the adjustment results becomes “Adjust NG!”, the Optical pick-up may be faulty or the servo system circuits may be abnormal.

5-16-1. CD Auto Gain Control Output Level Adjustment

Adjusting Procedure :

1. Insert the check disc (MD) TDYS-1.
2. Rotate the [◀◀ AMS ▶▶] knob to display “AG Set (CD)” (C11).
3. When the [YES] button is pressed, the adjustment will be performed automatically.
“Complete!!” will then be displayed momentarily when the value is recorded in the non-volatile memory, after which the display changes to “AG Set (CD)”.
4. Press the [EJECT] button to remove the disc.


5-16-2. MO Auto Gain Control Output Level Adjustment

Adjusting Procedure :


1. Insert the reference disc (MDW-74/GA-1) for recording.
2. Rotate the [◀◀ AMS ▶▶] knob to display “AG Set (MO)” (C10).
3. When the [YES] button is pressed, the adjustment will be performed automatically.
“Complete!!” will then be displayed momentarily when the value is recorded in the non-volatile memory, after which the display changes to “AG Set (MO)”(C10).
4. Press the [EJECT] button to remove the disc.

5-17. ADJUSTING POINTS AND CONNECTING POINTS

[BD BOARD] (SIDE A)

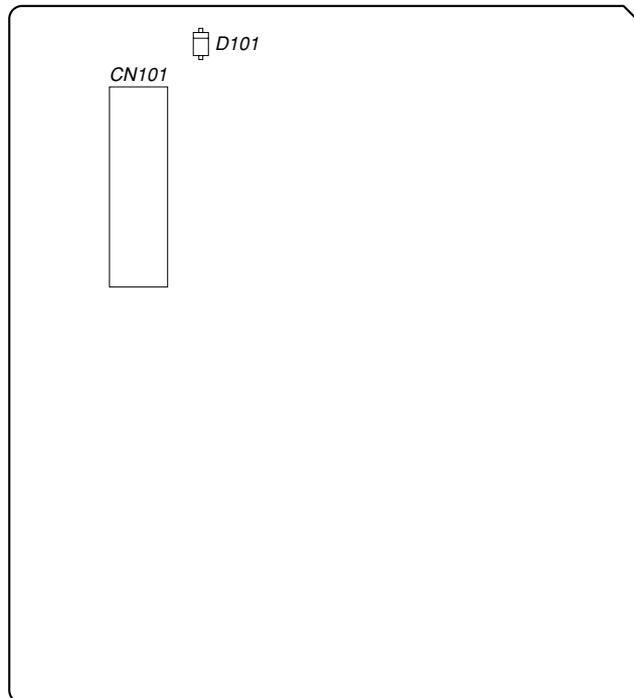


[BD BOARD] (SIDE B)

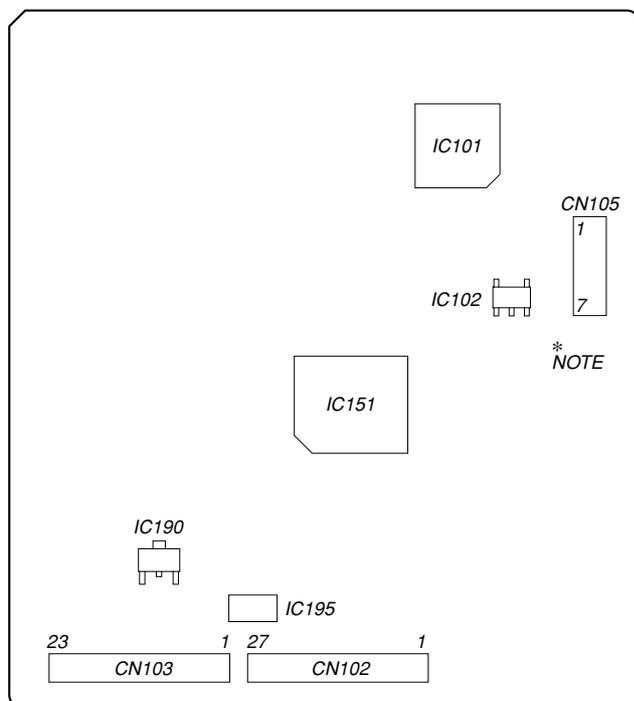

NOTE: It is useful to use the jig. for checking the waveform. (Refer to Servicing Note on page 6.)

SECTION 6 DIAGRAMS

6-1. CIRCUIT BOARDS LOCATION

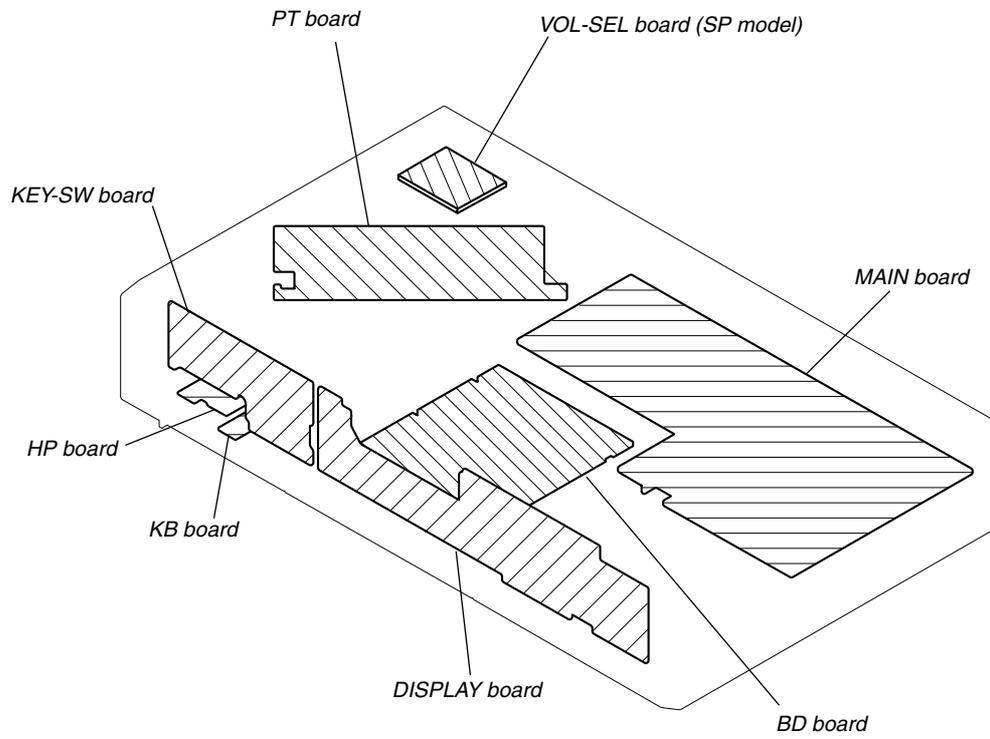

- Abbreviation
SP : Singapore model

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For schematic diagrams.

Note:

- All capacitors are in μF unless otherwise noted. $\text{pF}; \mu\text{F}$ 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{ W}$ or less unless otherwise specified.
- Δ : internal component.
- \square : panel designation.

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.


- --- : B+ Line.
- --- : B- Line.
- \square : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark : STOP
- () : PLAY
- < > : REC
- * : Impossible to measure
- Voltages are taken with aVOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
- Σ : PB
- \blacktriangleright : REC
- $\Sigma\Sigma\Sigma$: PB (DIGITAL OUT)
- $\blacktriangleright\blacktriangleright\blacktriangleright$: REC (DIGITAL IN)
- Abbreviation
- SP : Singapore model

For printed wiring boards.

Note:


- \circ : parts extracted from the component side.
- --- : parts extracted from the conductor side.
- \circ : Through hole.
- --- : Pattern from the side which enables seeing. (The other layers' patterns are not indicated.)

Caution:
Pattern face side: Parts on the pattern face side seen from the (Side B) pattern face are indicated.
Parts face side: Parts on the parts face side seen from the (Side A) parts face are indicated.

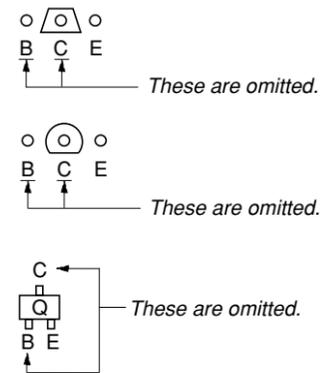


• WAVEFORMS


– BD Board –

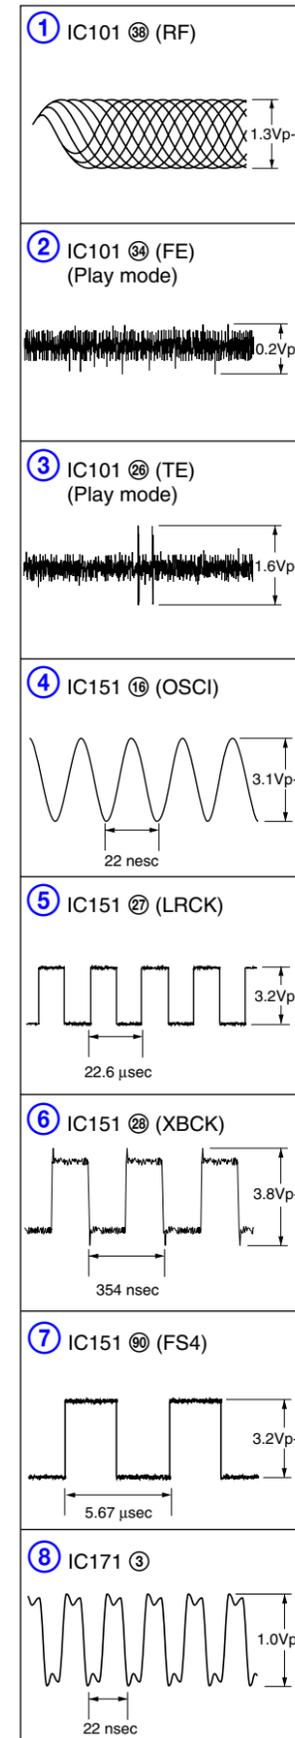


– MAIN Board –

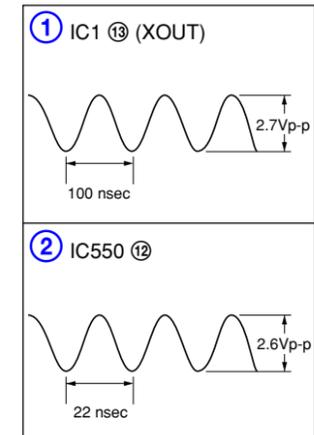


– DISPLAY Board –

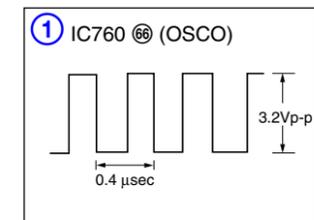

6-2. BLOCK DIAGRAMS – BD SECTION –

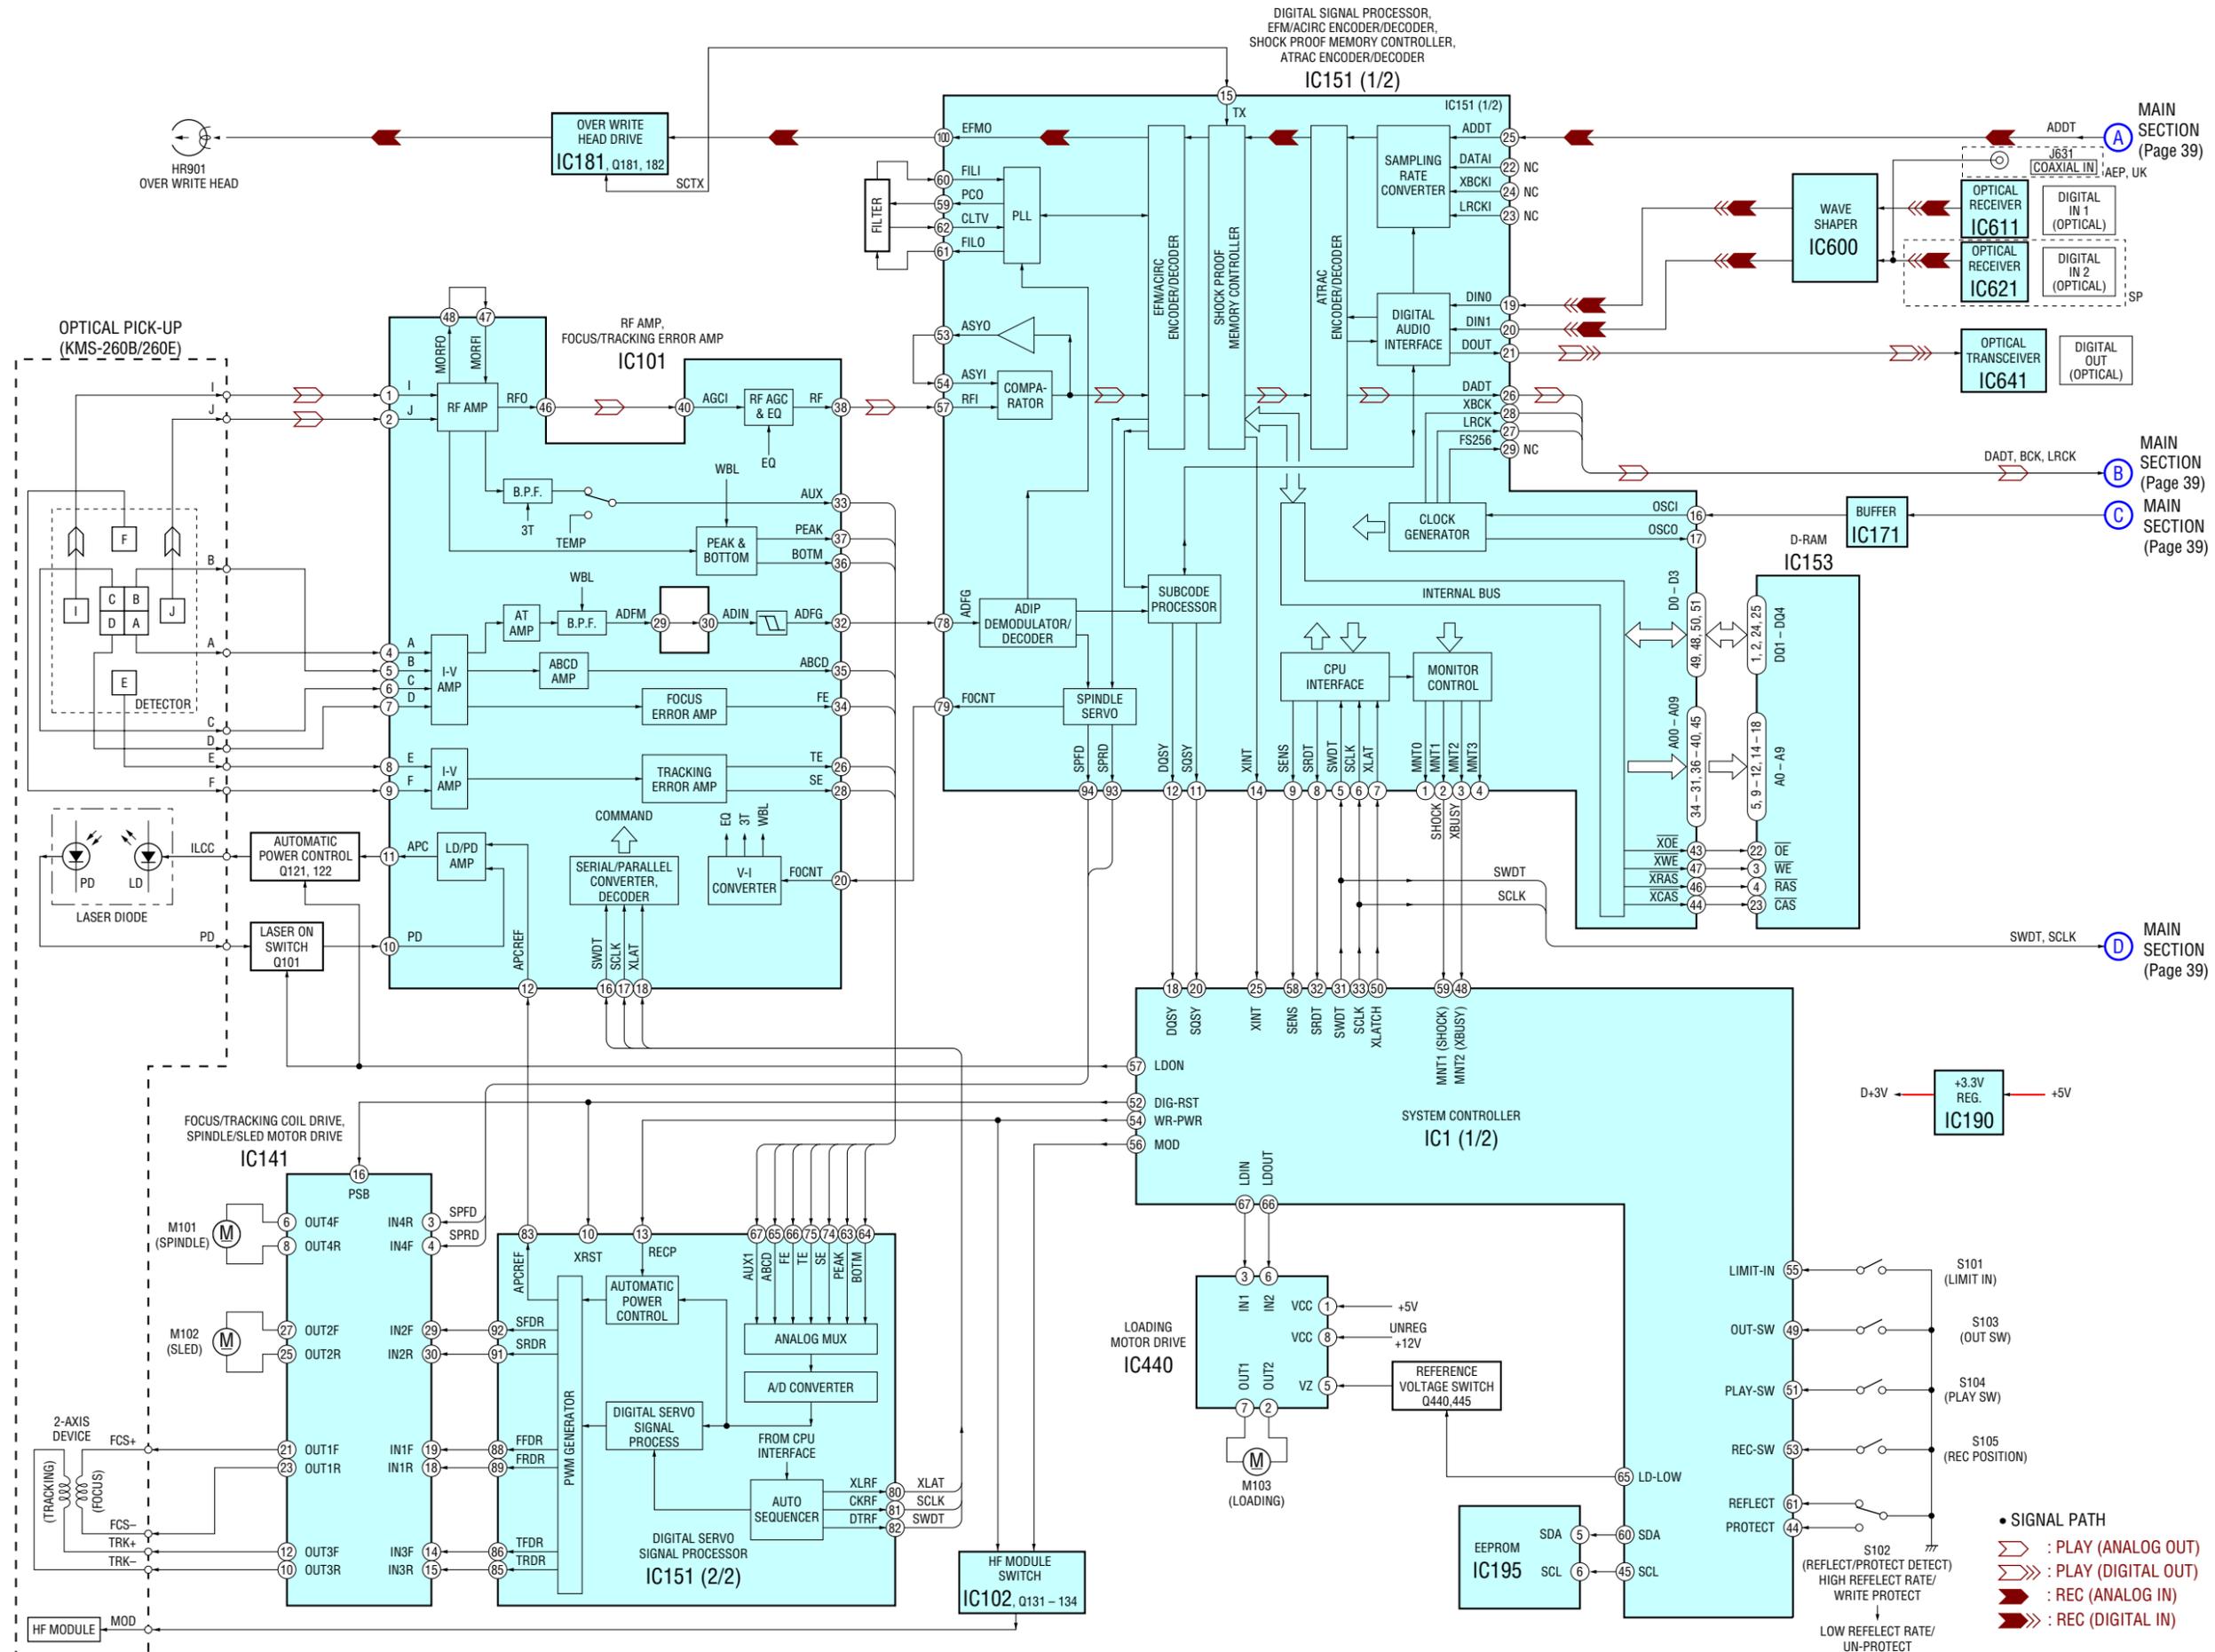


- MAIN SECTION -

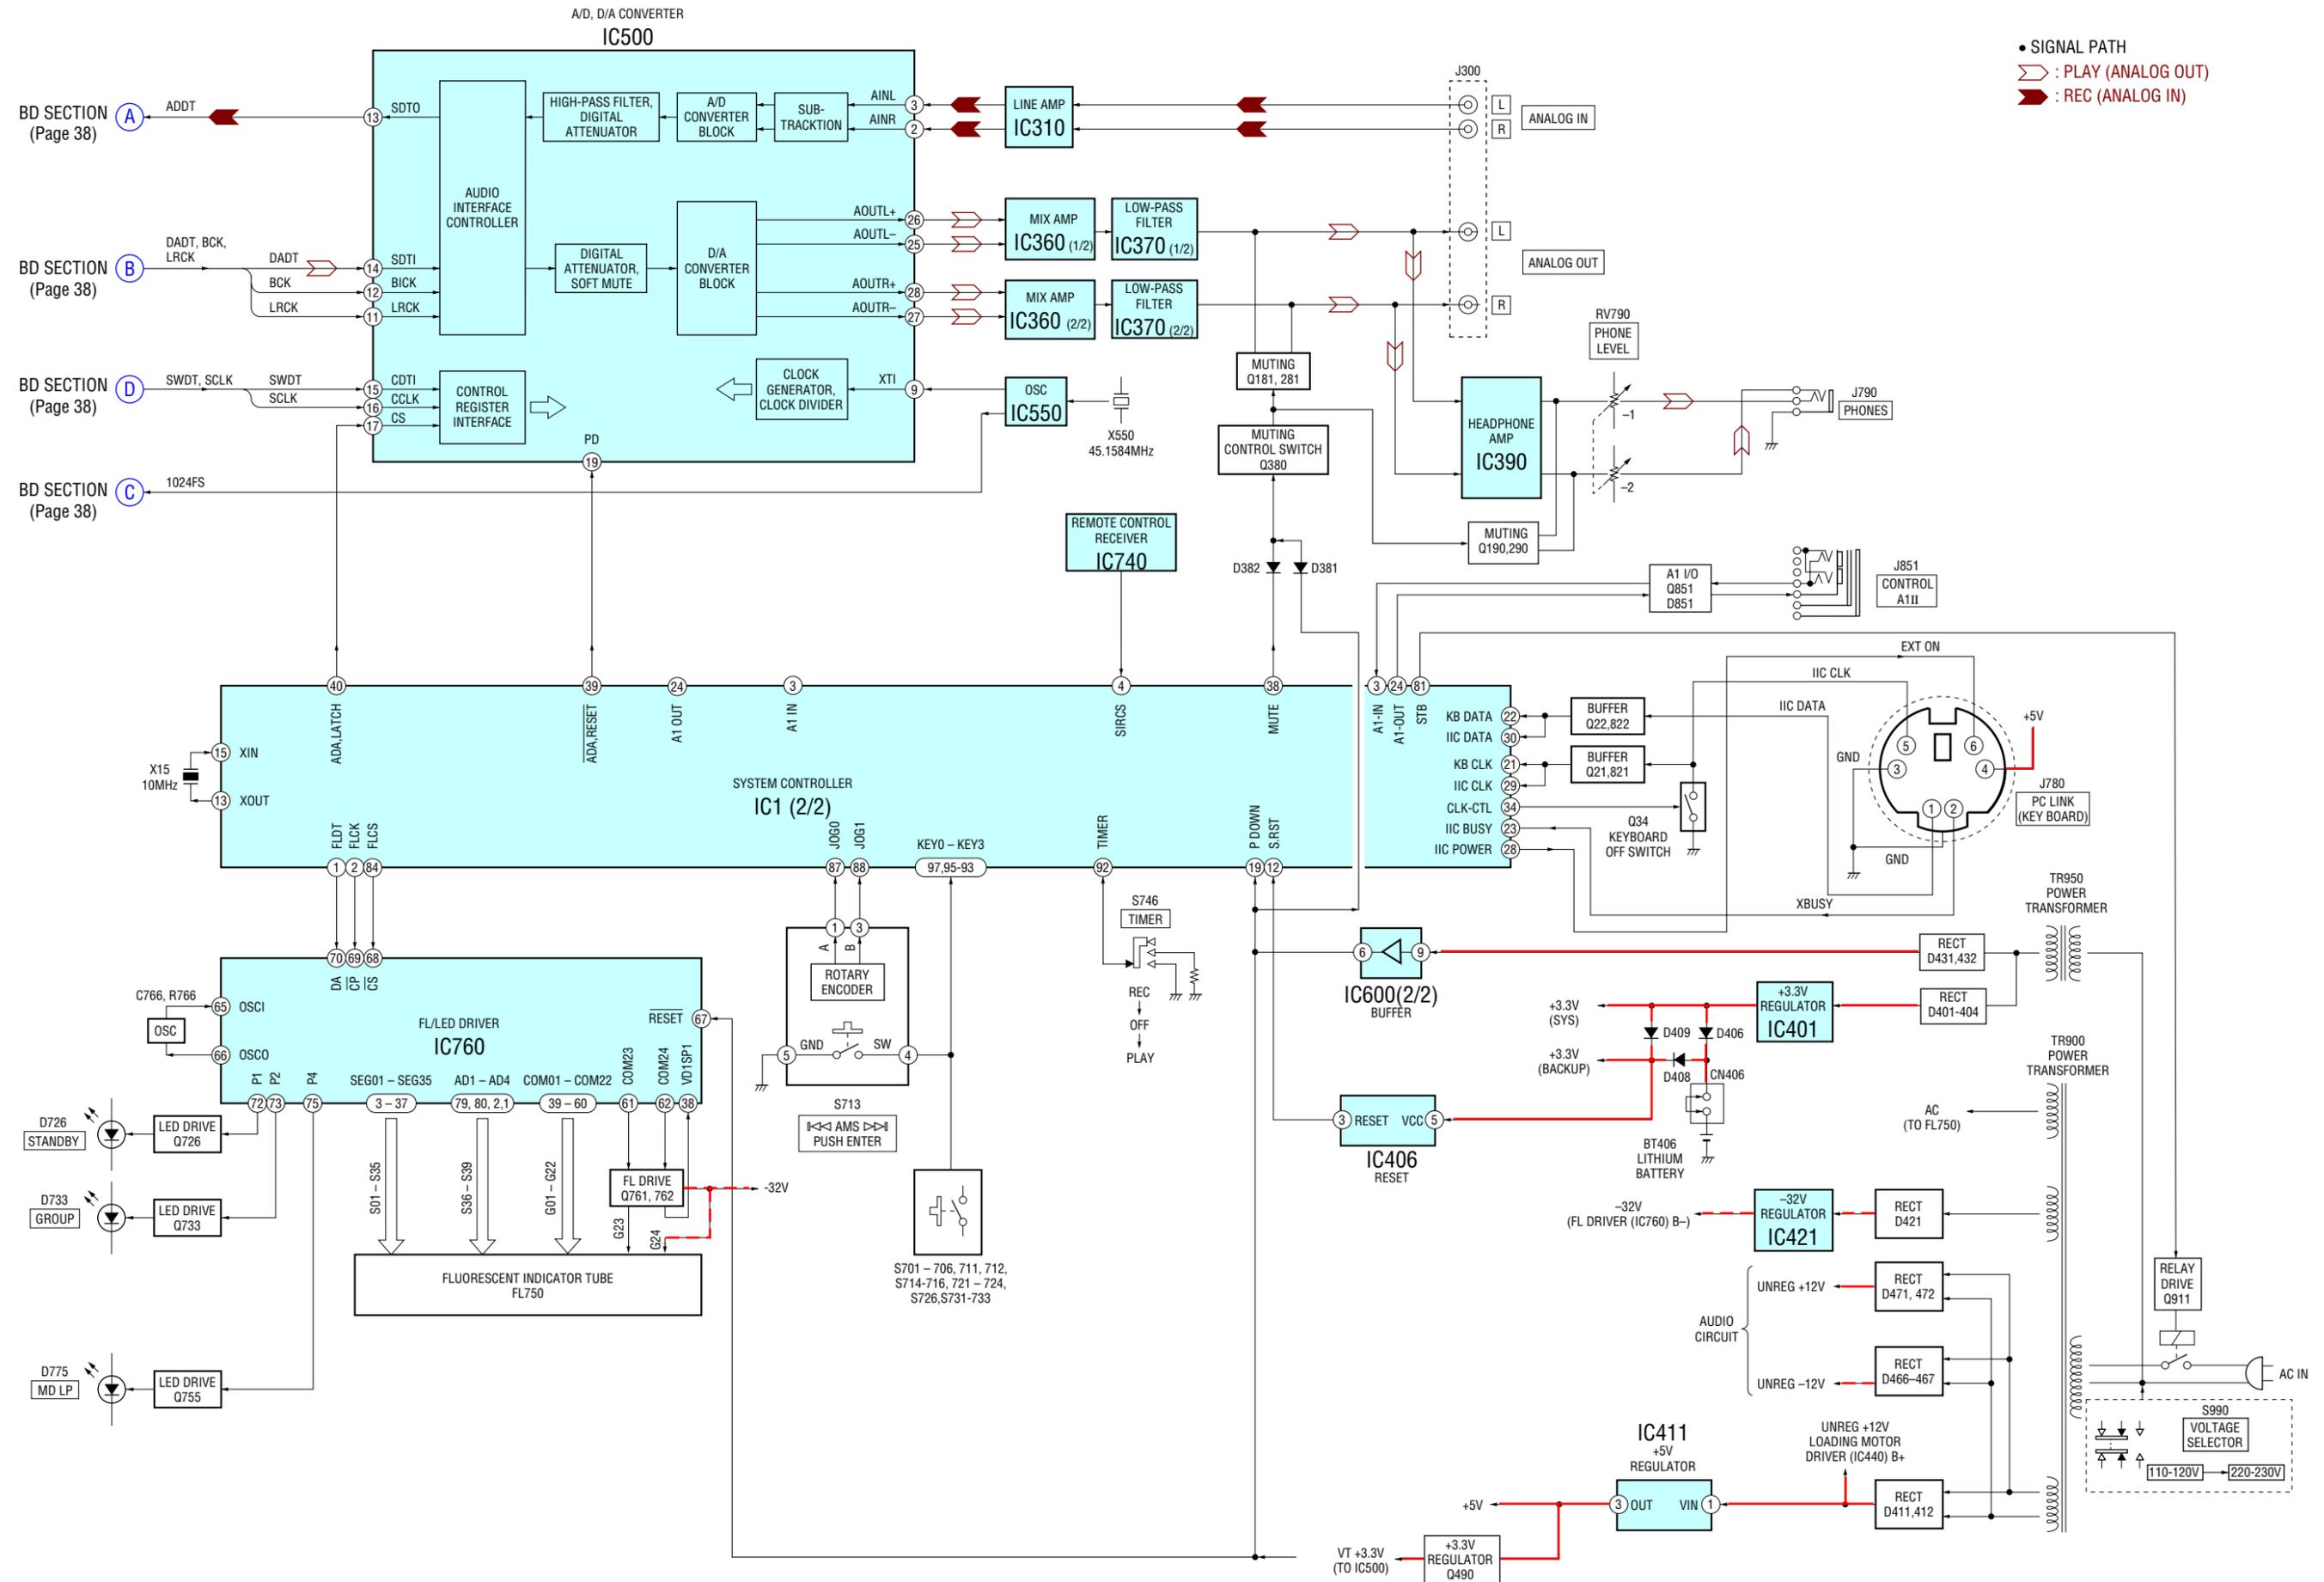

• SIGNAL PATH
 ◁ ▷ : PLAY (ANALOG OUT)
 ◀ ▶ : REC (ANALOG IN)

6-3. PRINTED WIRING BOARD – BD Board – • See page 36 for Circuit Board Location.

There are a few cases that the part isn't mounted in model is printed on diagram.

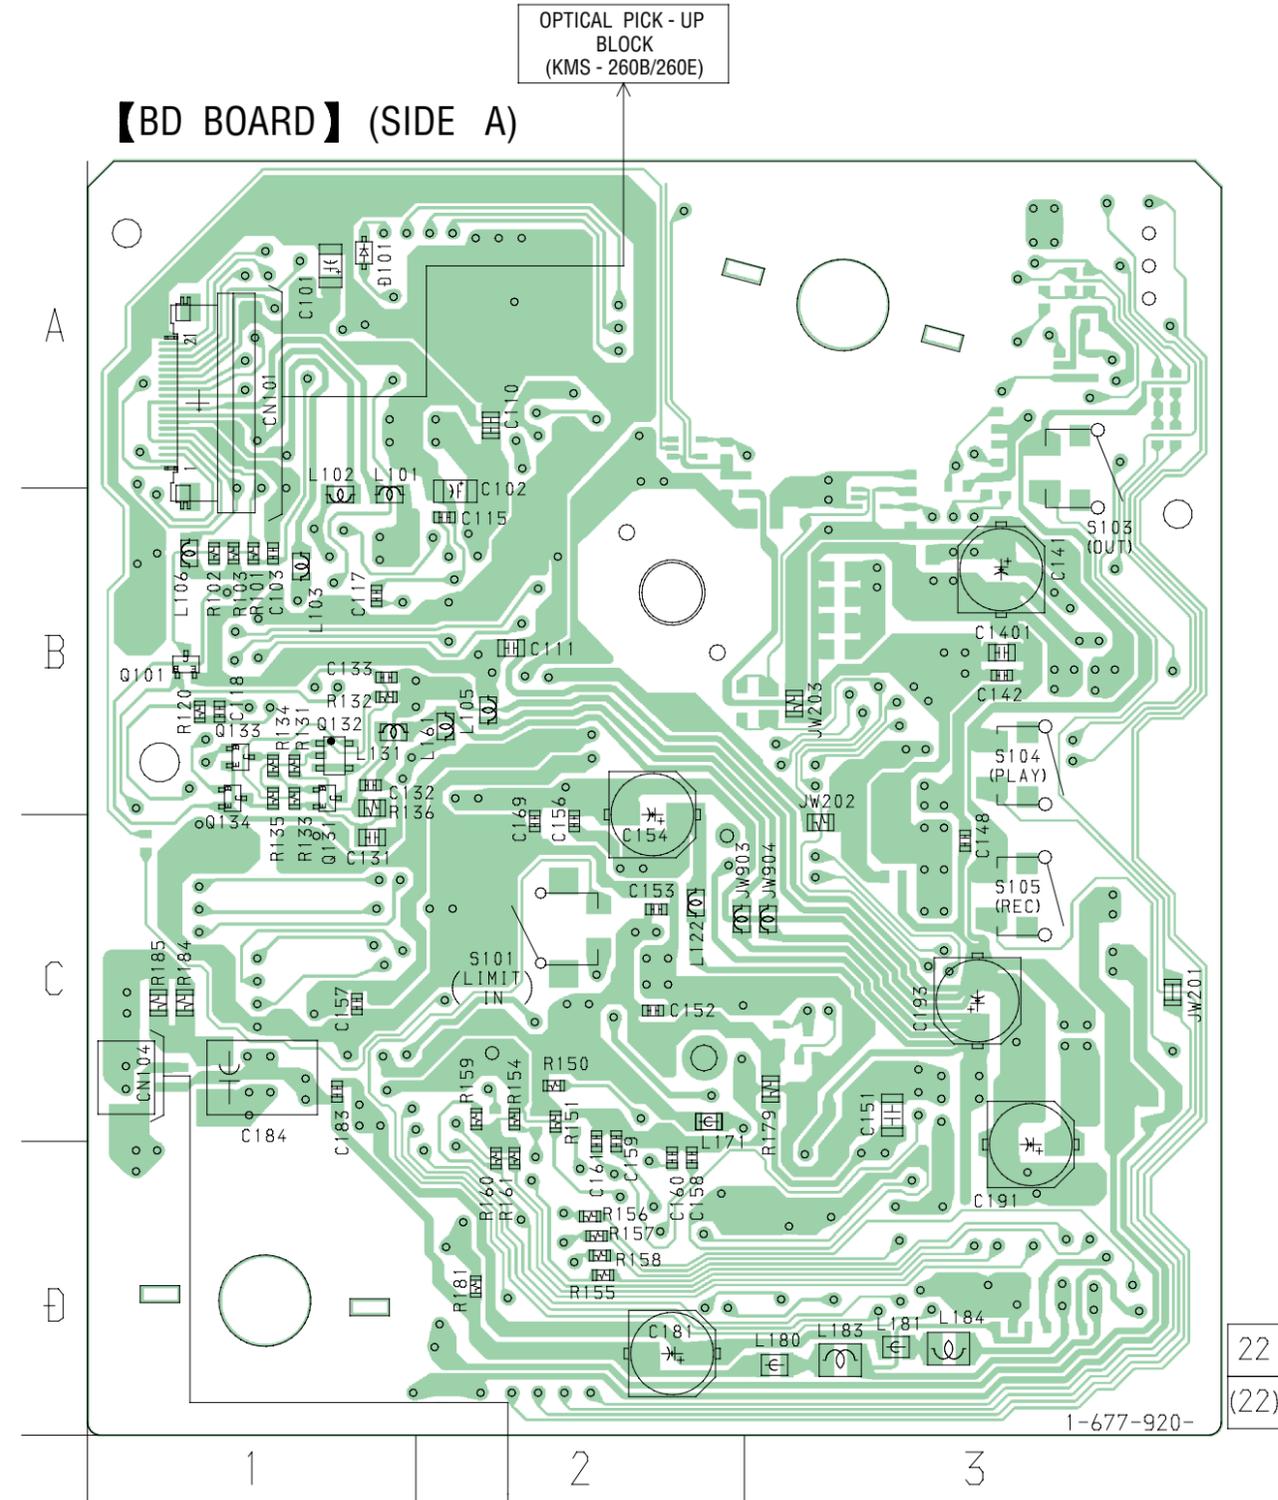


• Semiconductor Location

Ref. No.	Location
D101	A-4
Q101	B-1
Q131	C-1
Q132	B-1
Q133	B-1
Q134	B-1

HR901
OVER
WRITE HEAD

【BD BOARD】 (SIDE B)

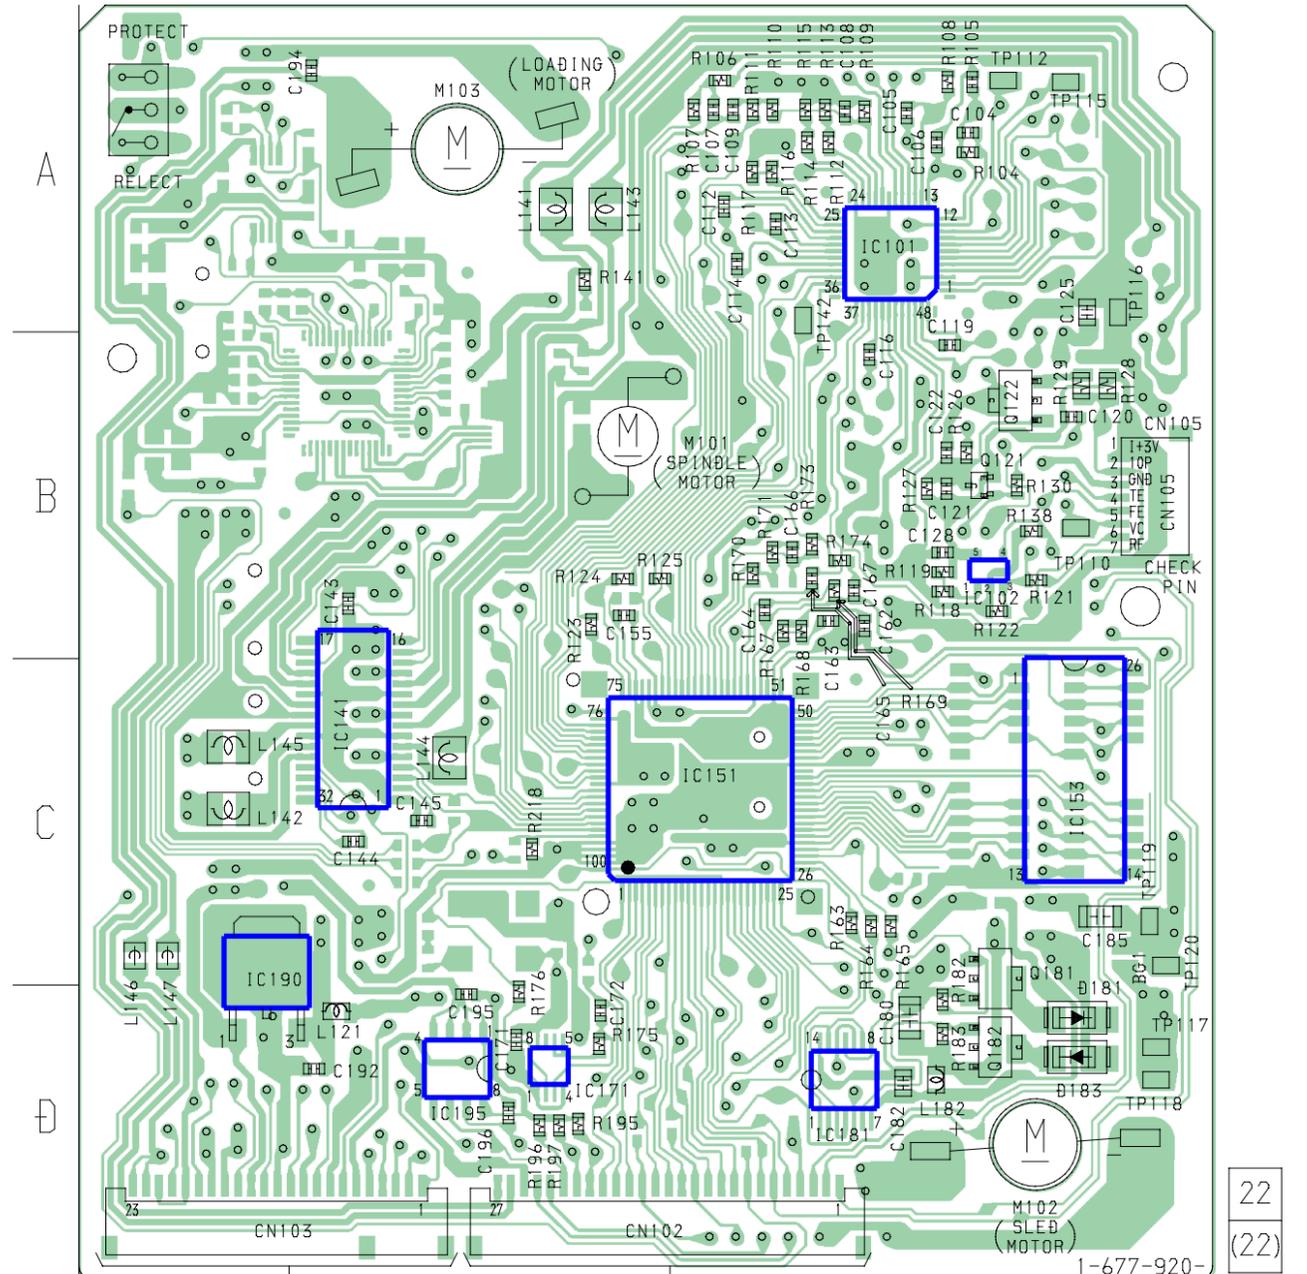


B
MAIN BOARD
CN1
(Page 45)

A
MAIN BOARD
CN2
(Page 45)

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D181	D-3	IC181	D-3
D183	D-3	IC190	D-1
		IC195	D-2
IC101	A-3	Q121	B-3
IC102	B-3	Q122	B-3
IC141	C-1	Q181	D-3
IC151	C-2	Q182	D-3
IC153	C-3		
IC171	D-2		

6-4. SCHEMATIC DIAGRAM – BD SECTION (1/2) – • See page 37 for Waveforms. • See page 52 for IC Pin Functions. • See page 50 for IC Block Diagrams.

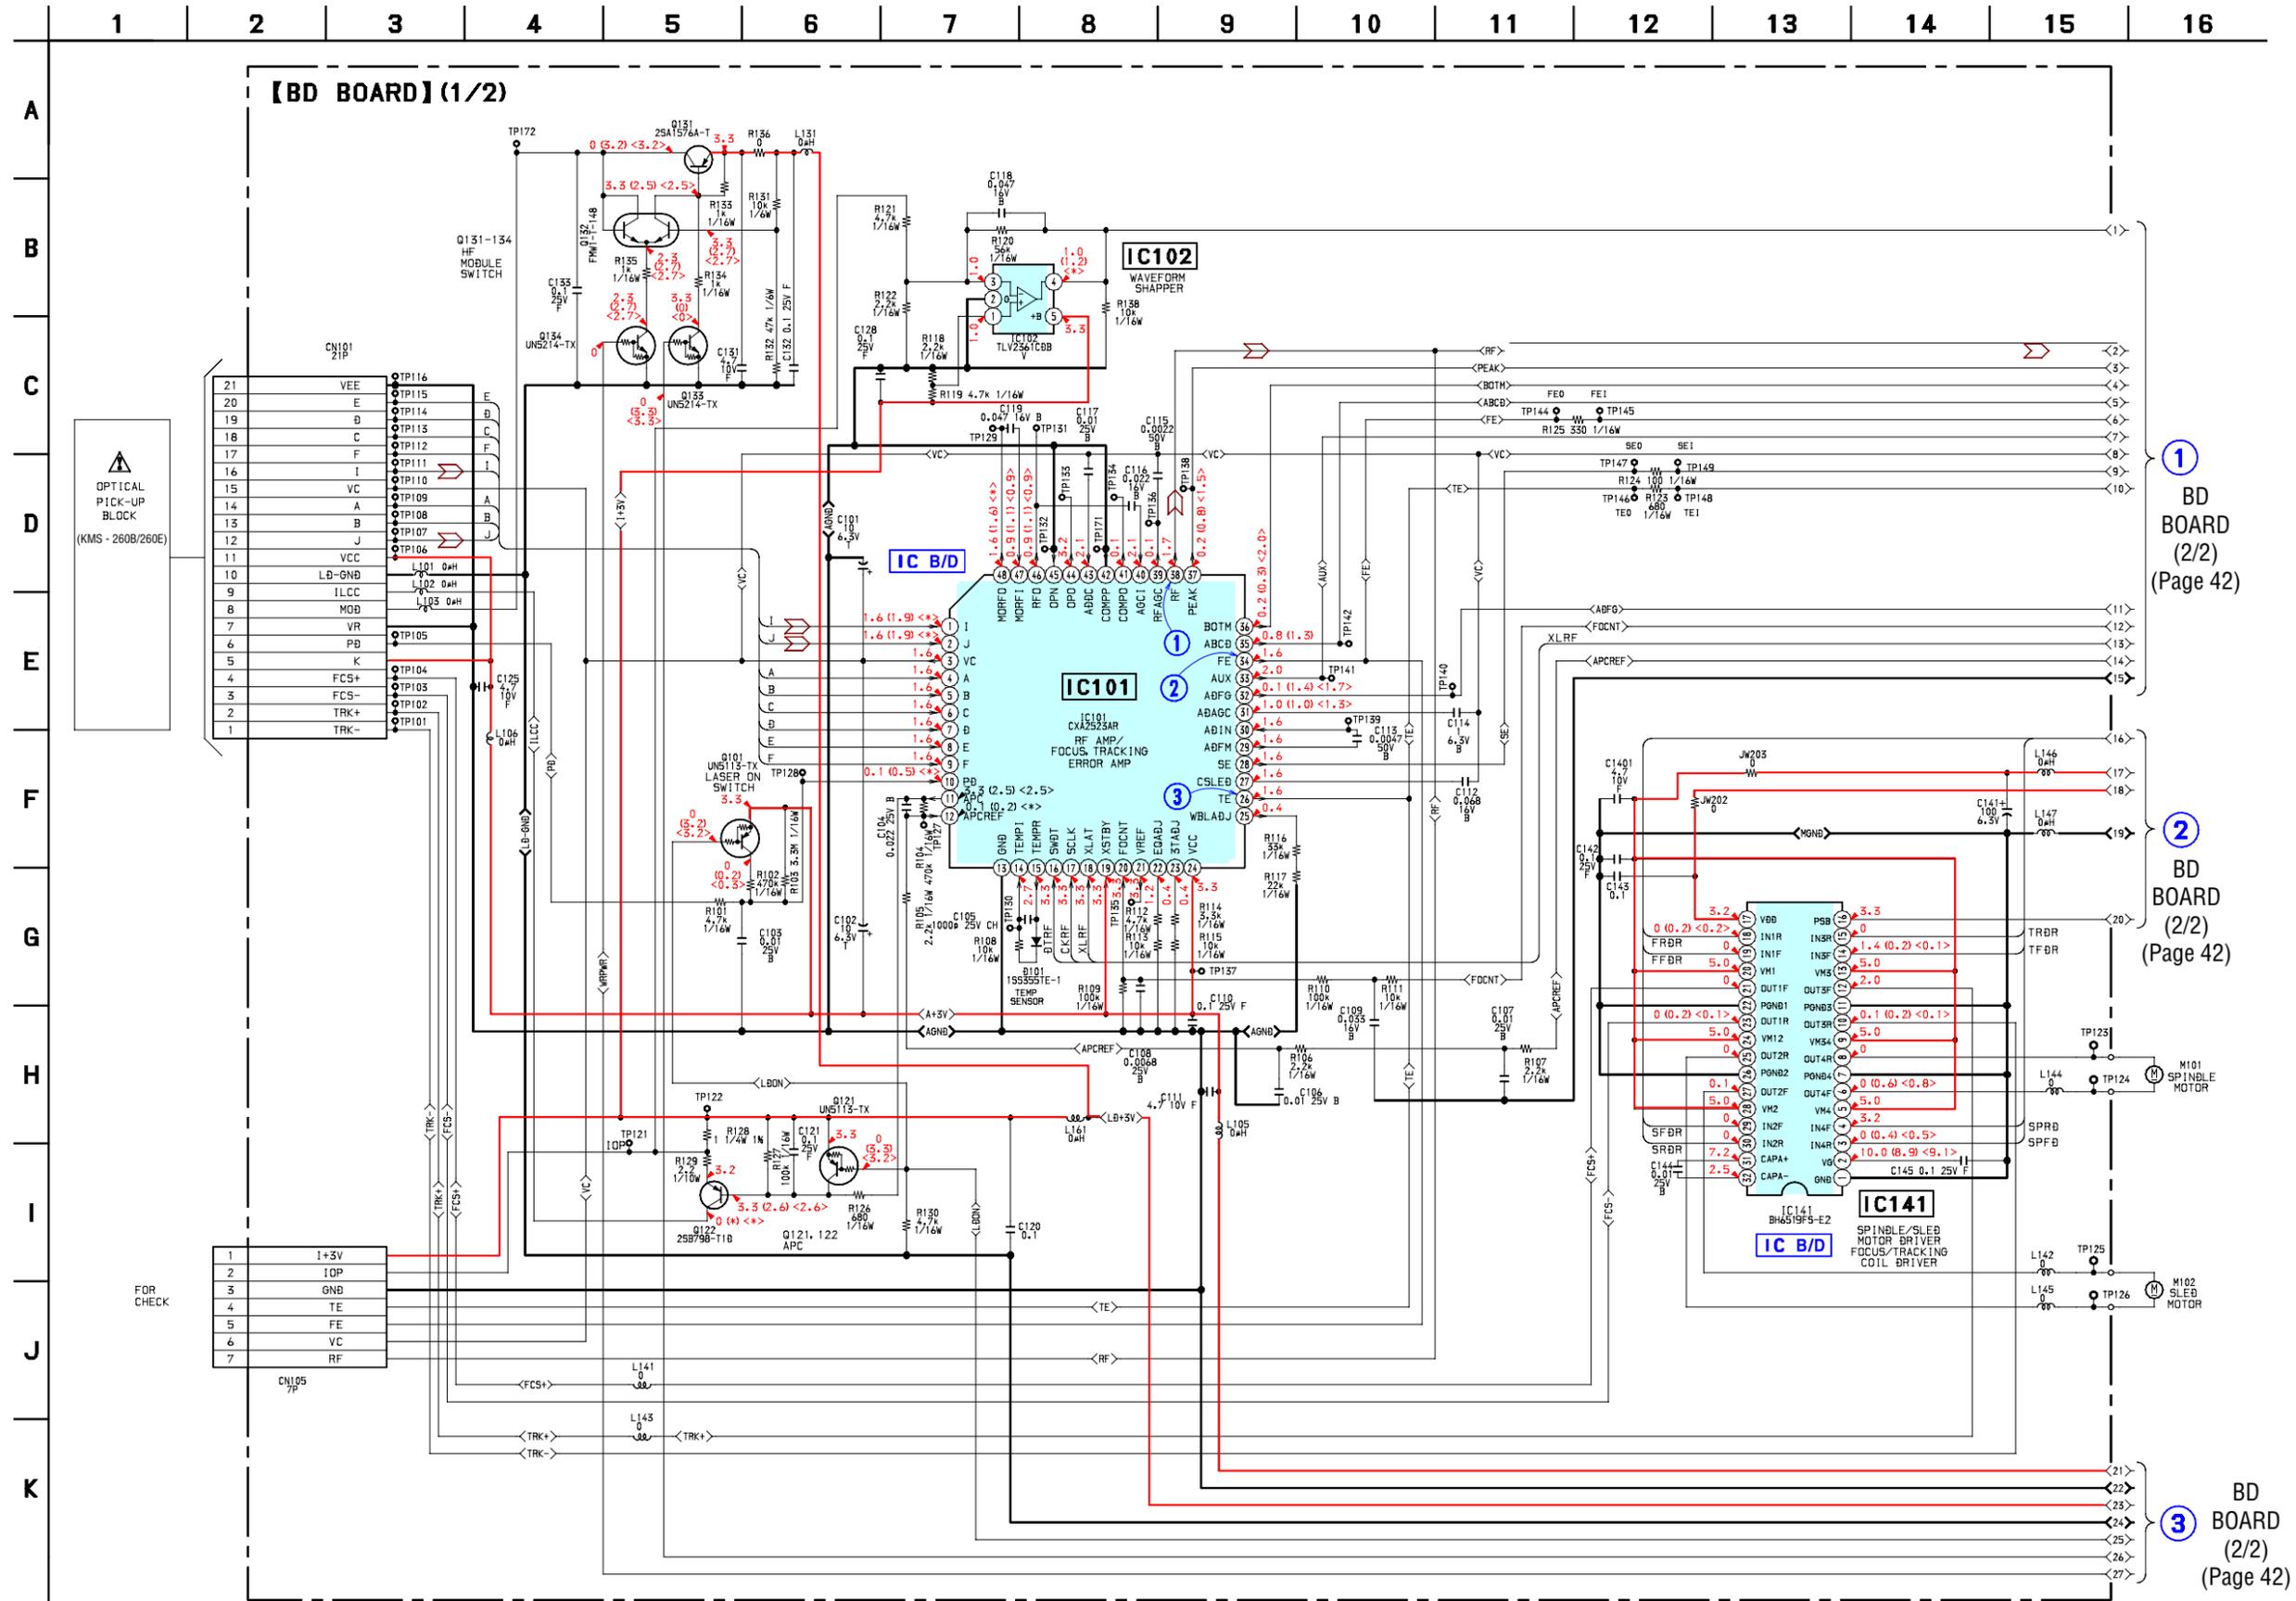


OPTICAL PICK-UP BLOCK (KMS - 260B/260E)


FOR CHECK

Note: The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

6-5. SCHEMATIC DIAGRAM – BD SECTION (2/2) – • See page 37 for Waveforms. • See page 53 for IC Pin Functions. • See page 50 for IC Block Diagrams.

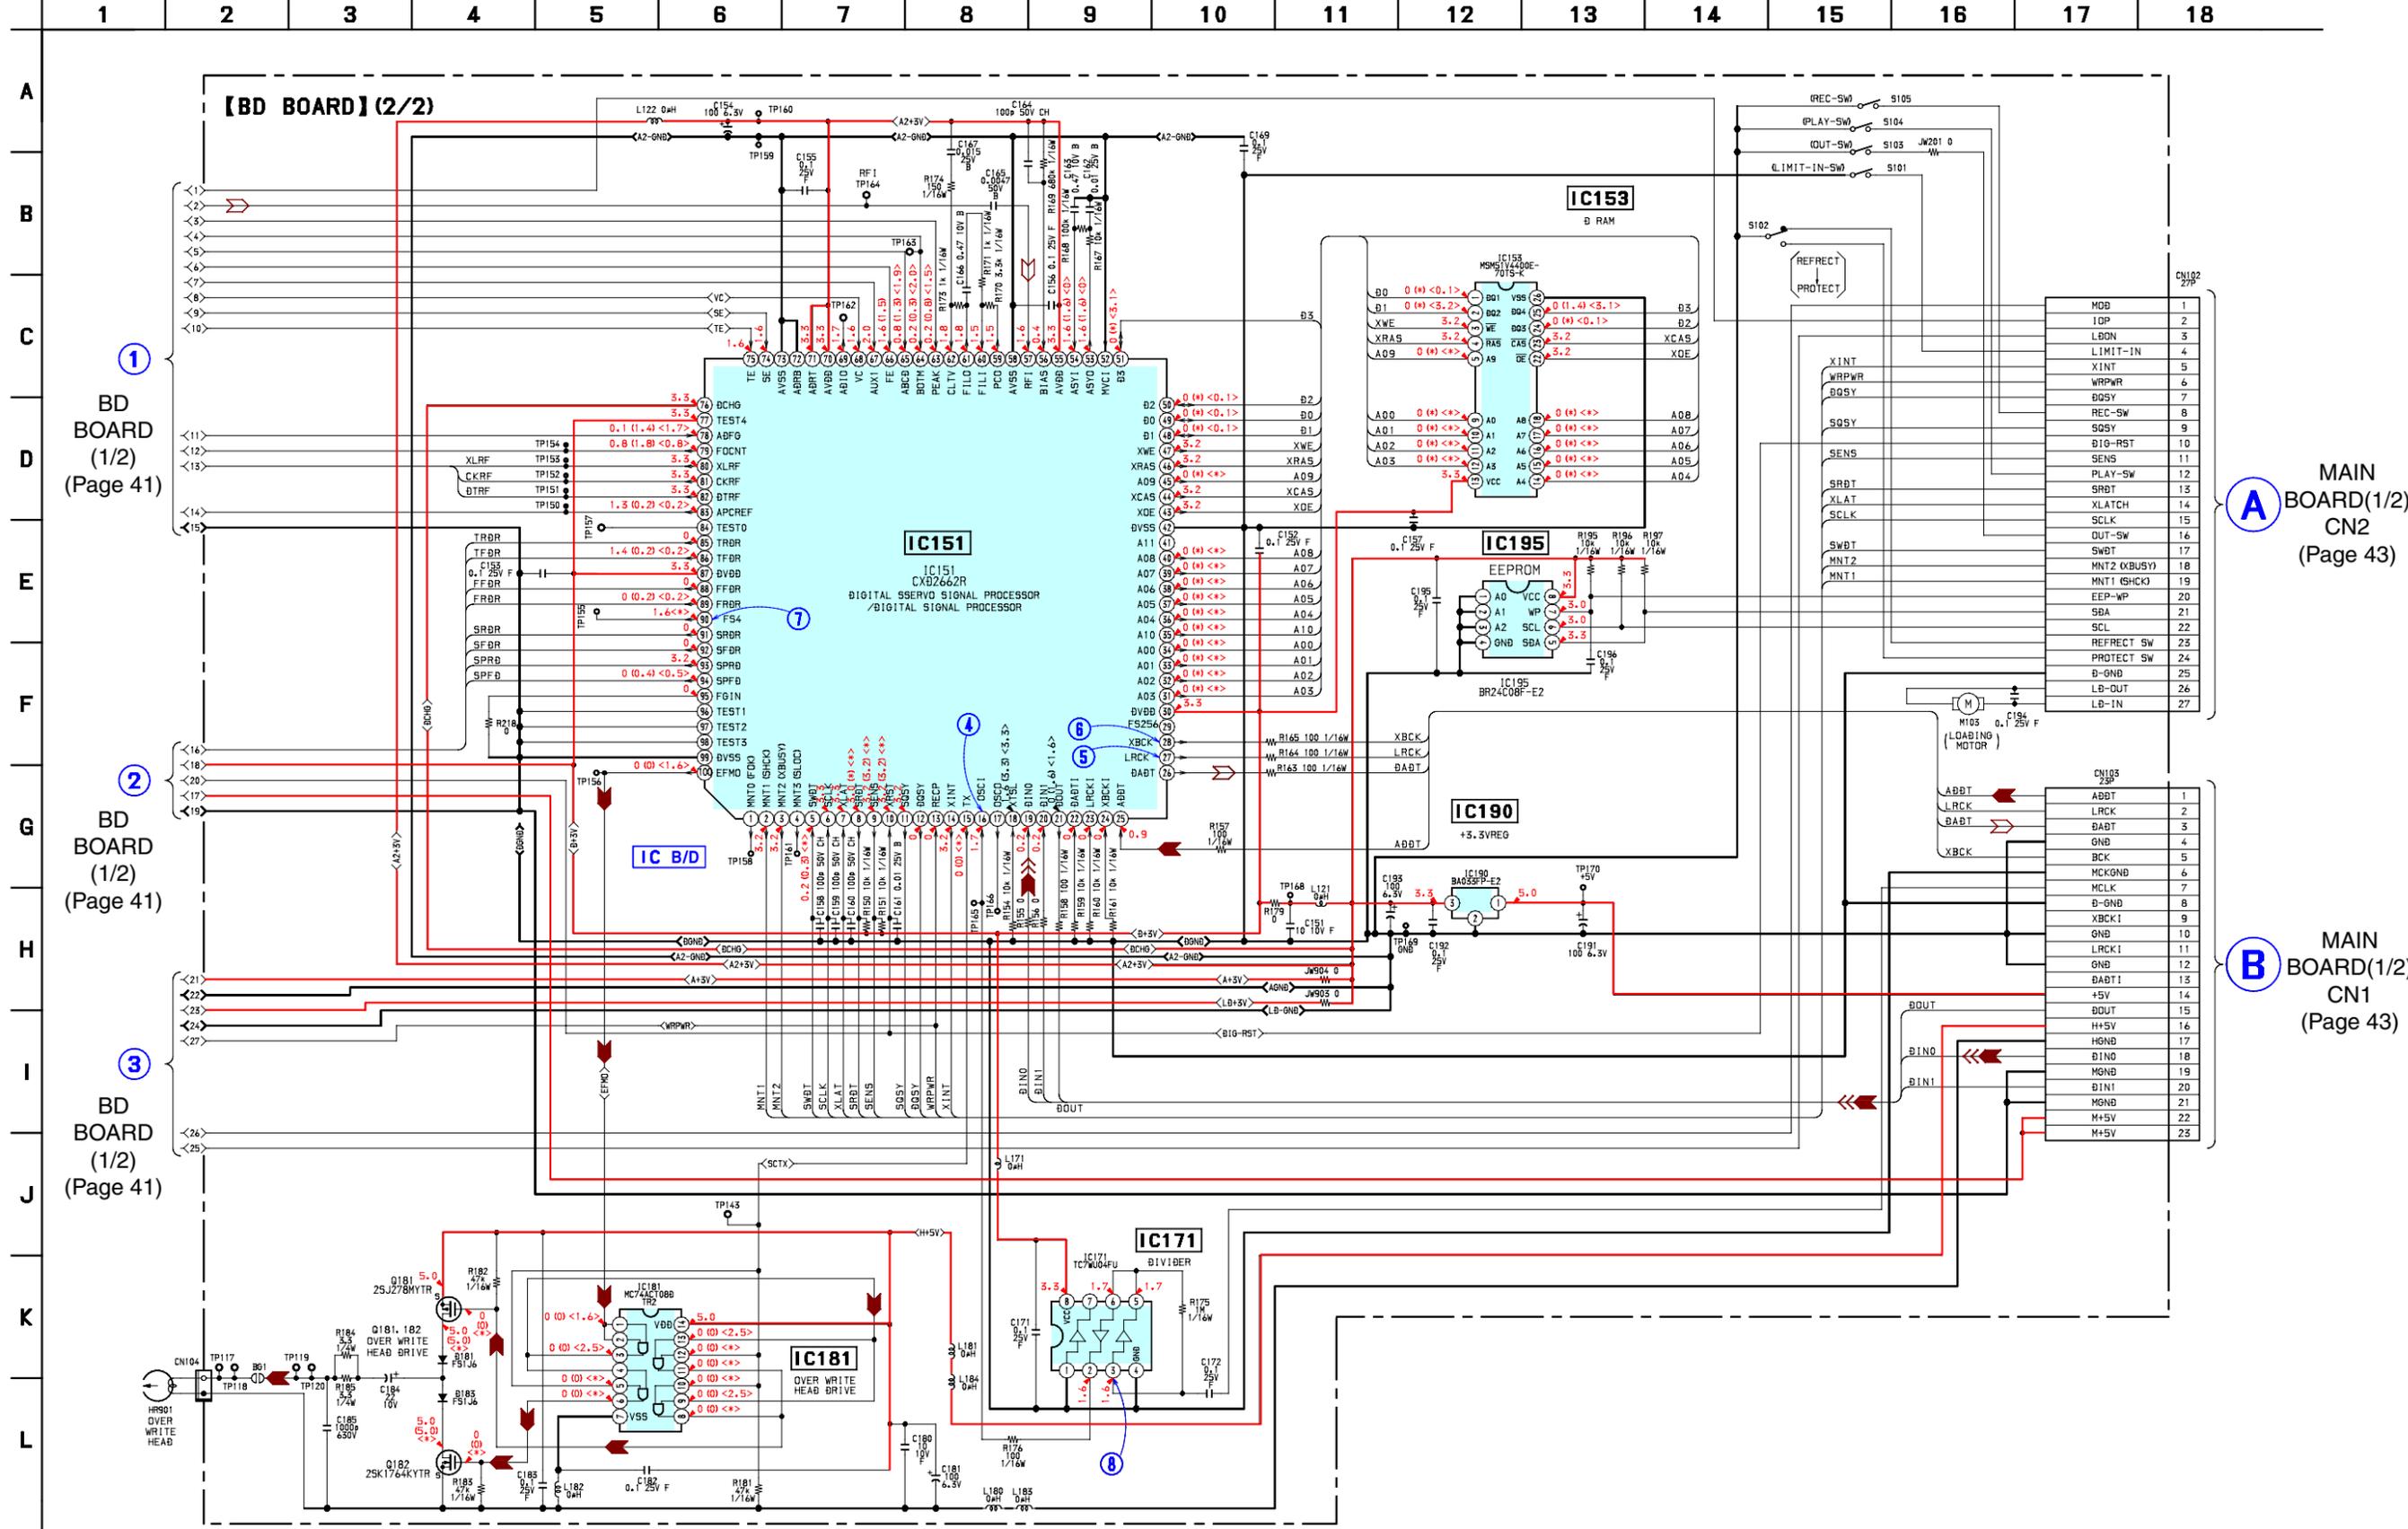


6-6. SCHEMATIC DIAGRAM – MAIN SECTION (1/2) – • See page 37 for Waveforms. • See page 56 for IC Pin Functions. • See page 51 for IC Block Diagrams.

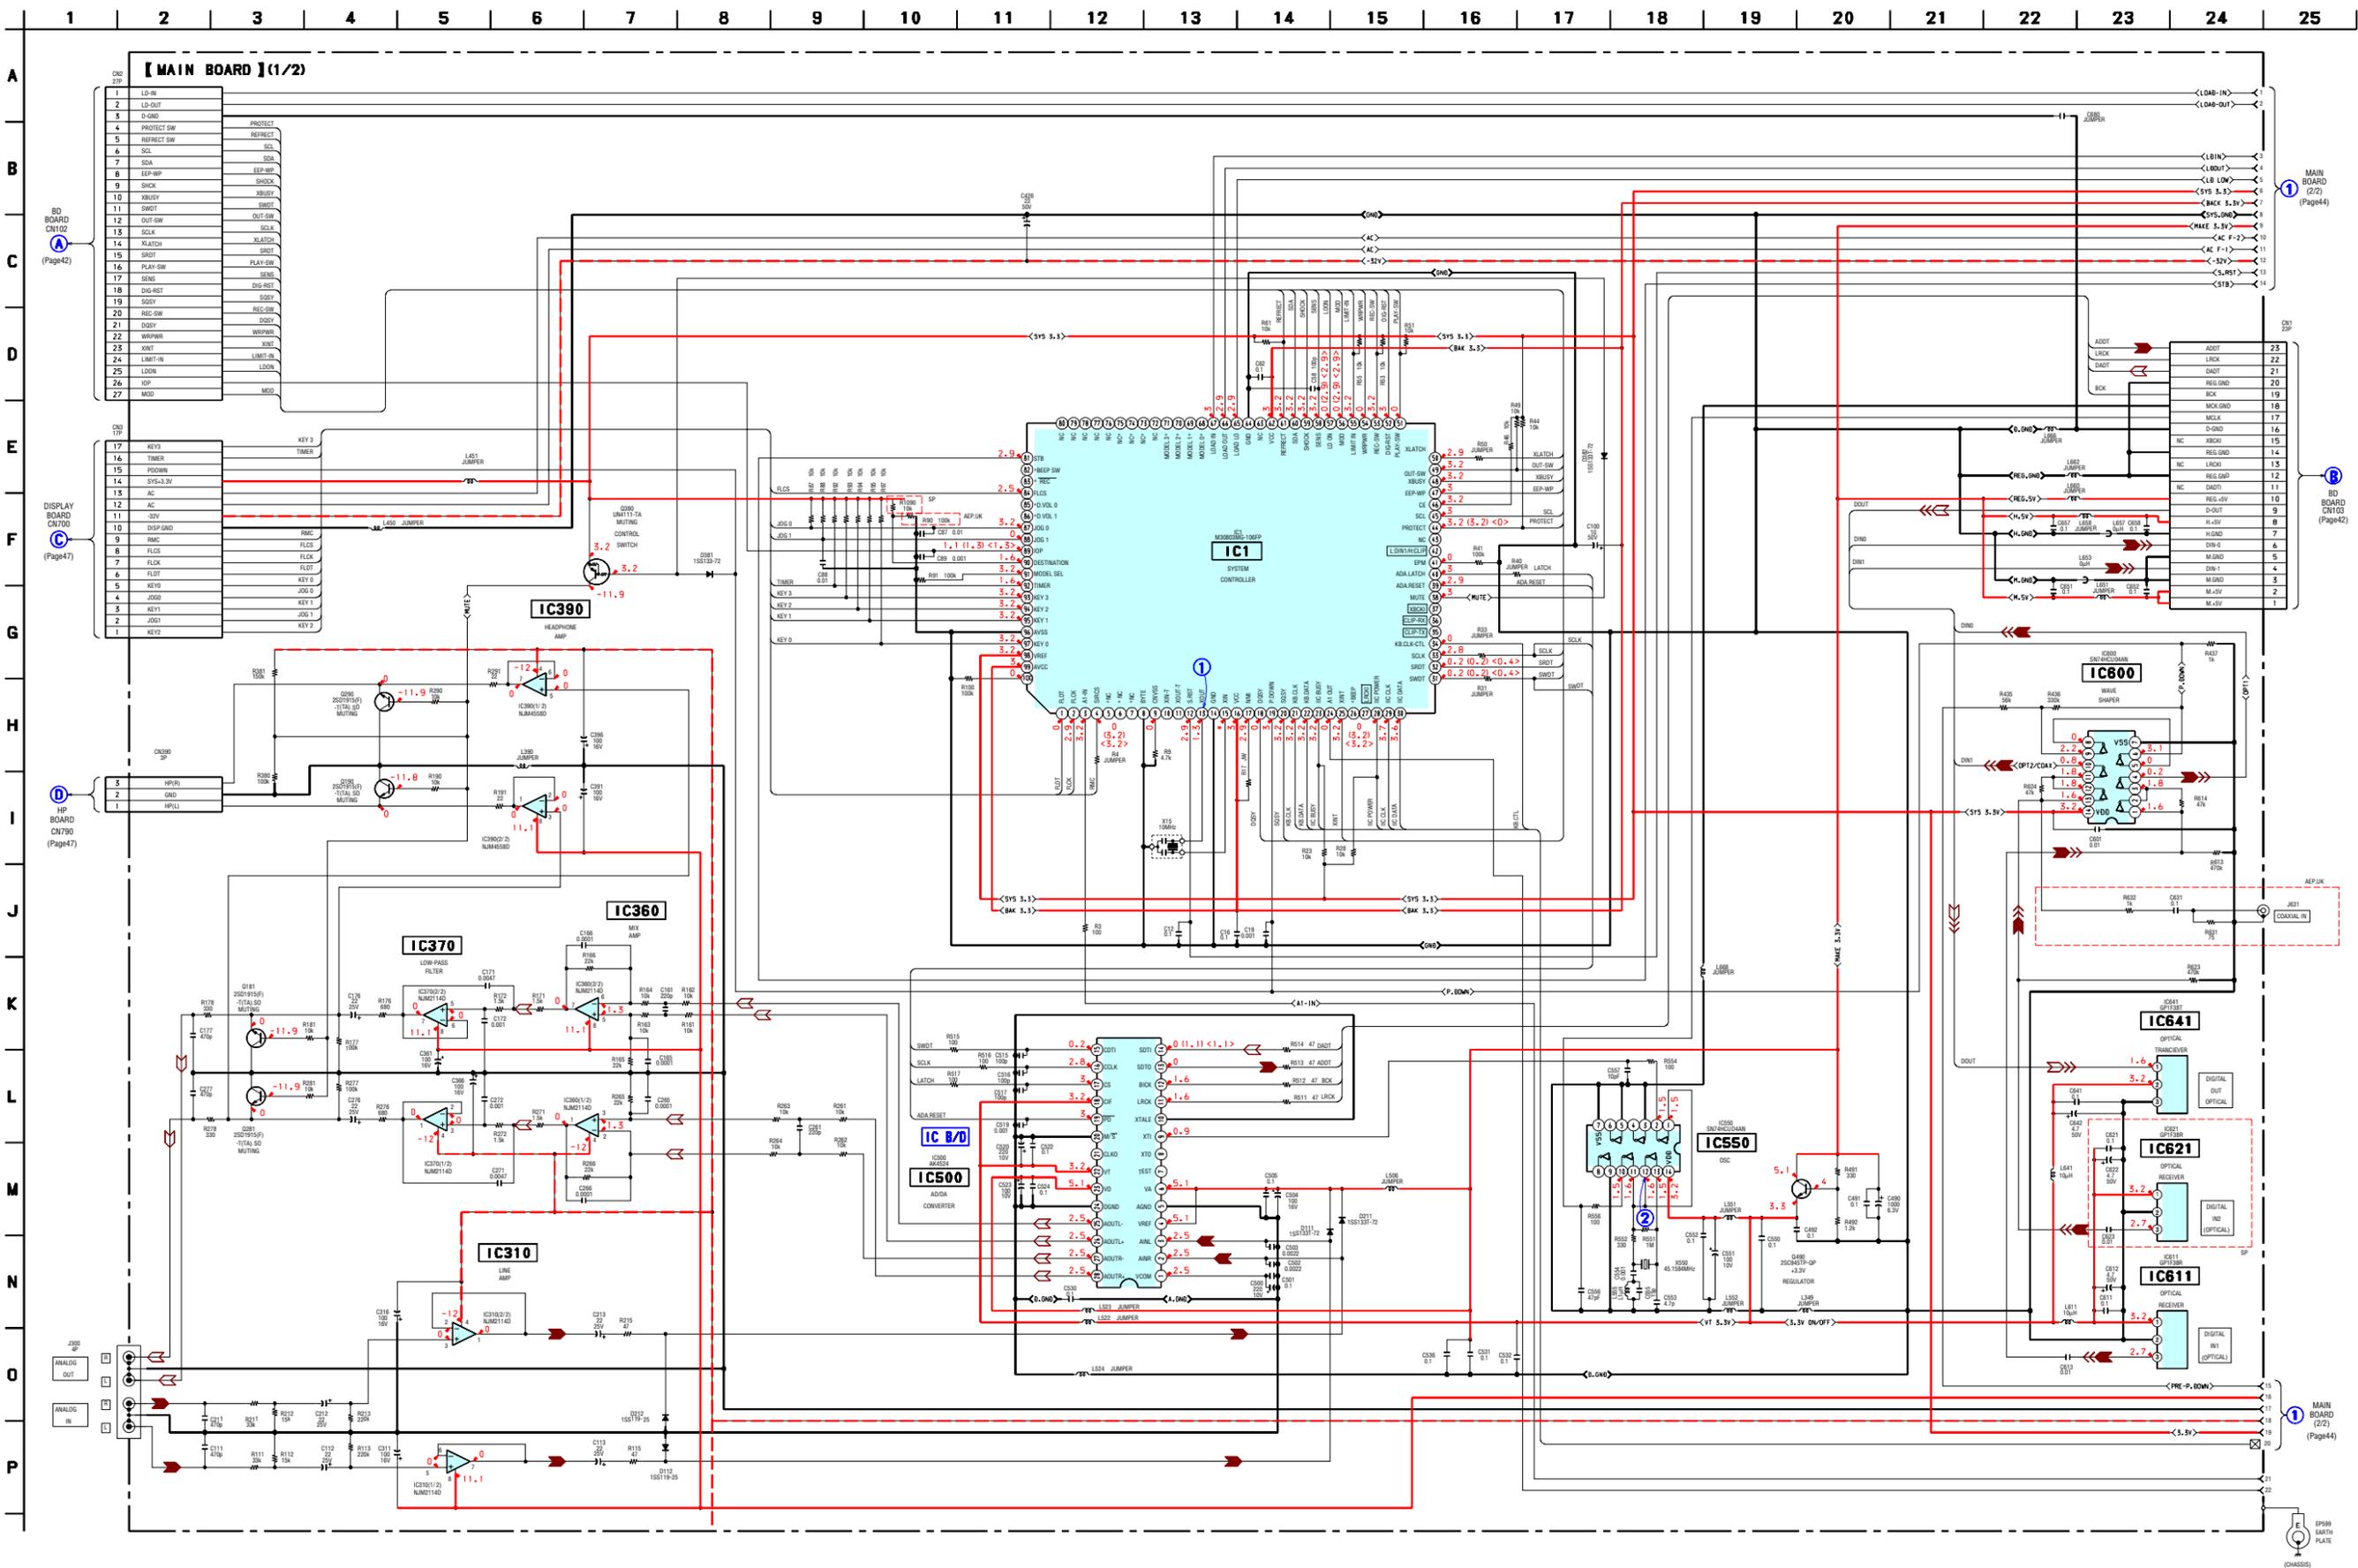

6-8. PRINTED WIRING BOARD – MAIN SECTION – • See page 36 for Circuit Board Location.

There are a few cases that the part isn't mounted in model is printed on diagram.

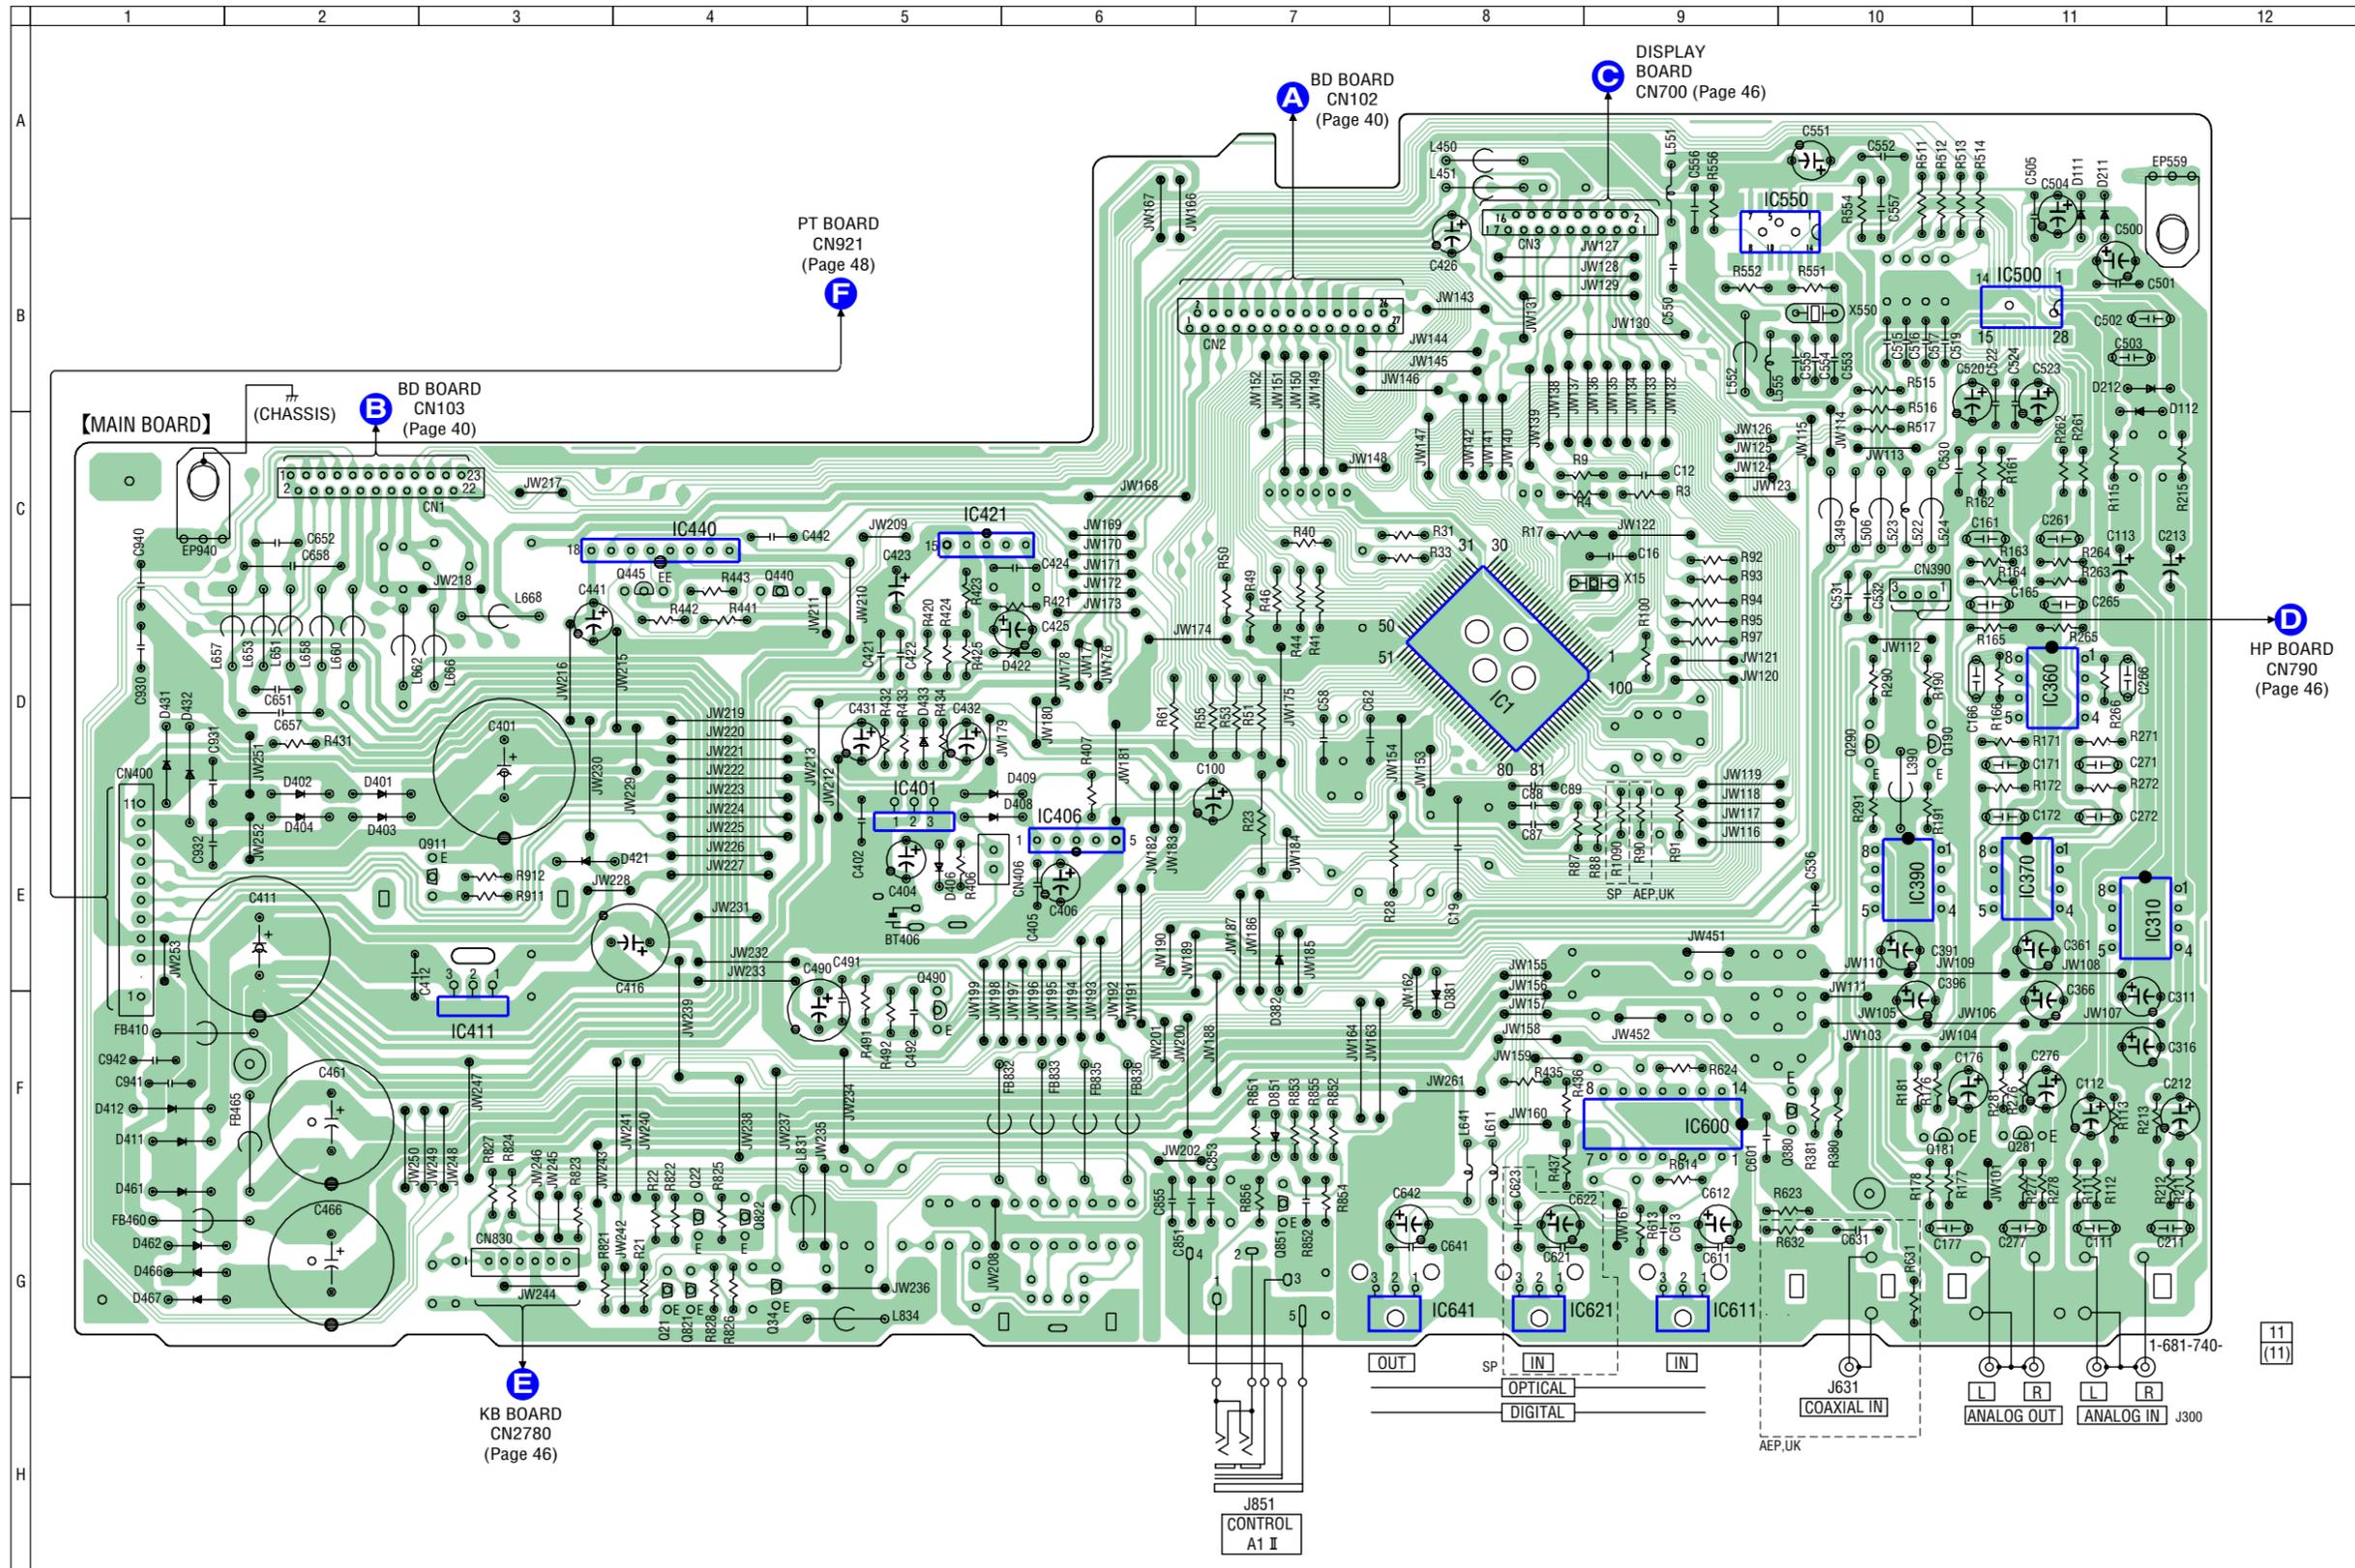


• Semiconductor Location

Ref. No.	Location
D111	A-11
D112	B-11
D211	A-11
D212	B-11
D381	F-8
D382	E-7
D401	D-2
D402	D-2
D403	E-2
D404	E-2
D406	E-5
D408	E-5
D409	D-5
D411	F-1
D412	F-1
D421	E-3
D422	D-6
D431	D-1
D432	D-1
D433	D-5
D461	G-1
D462	G-1
D466	G-1
D467	G-1
D851	F-7
IC1	D-8
IC310	E-11
IC360	D-11
IC370	E-11
IC390	E-10
IC401	E-5
IC406	E-6
IC411	F-3
IC421	C-5
IC440	C-4
IC500	B-11
IC550	B-10
IC600	F-9
IC611	G-9
IC621	G-8
IC641	G-8
Q21	G-4
Q22	G-4
Q34	G-4
Q181	F-10
Q190	D-10
Q281	F-11
Q290	D-10
Q380	F-10
Q440	C-4
Q445	C-4
Q490	F-5
Q821	G-4
Q822	G-4
Q851	G-7
Q911	E-3

6-9. PRINTED WIRING BOARD – DISPLAY SECTION – • See page 36 for Circuit Board Location.

There are a few cases that the part isn't mounted in model is printed on diagram.

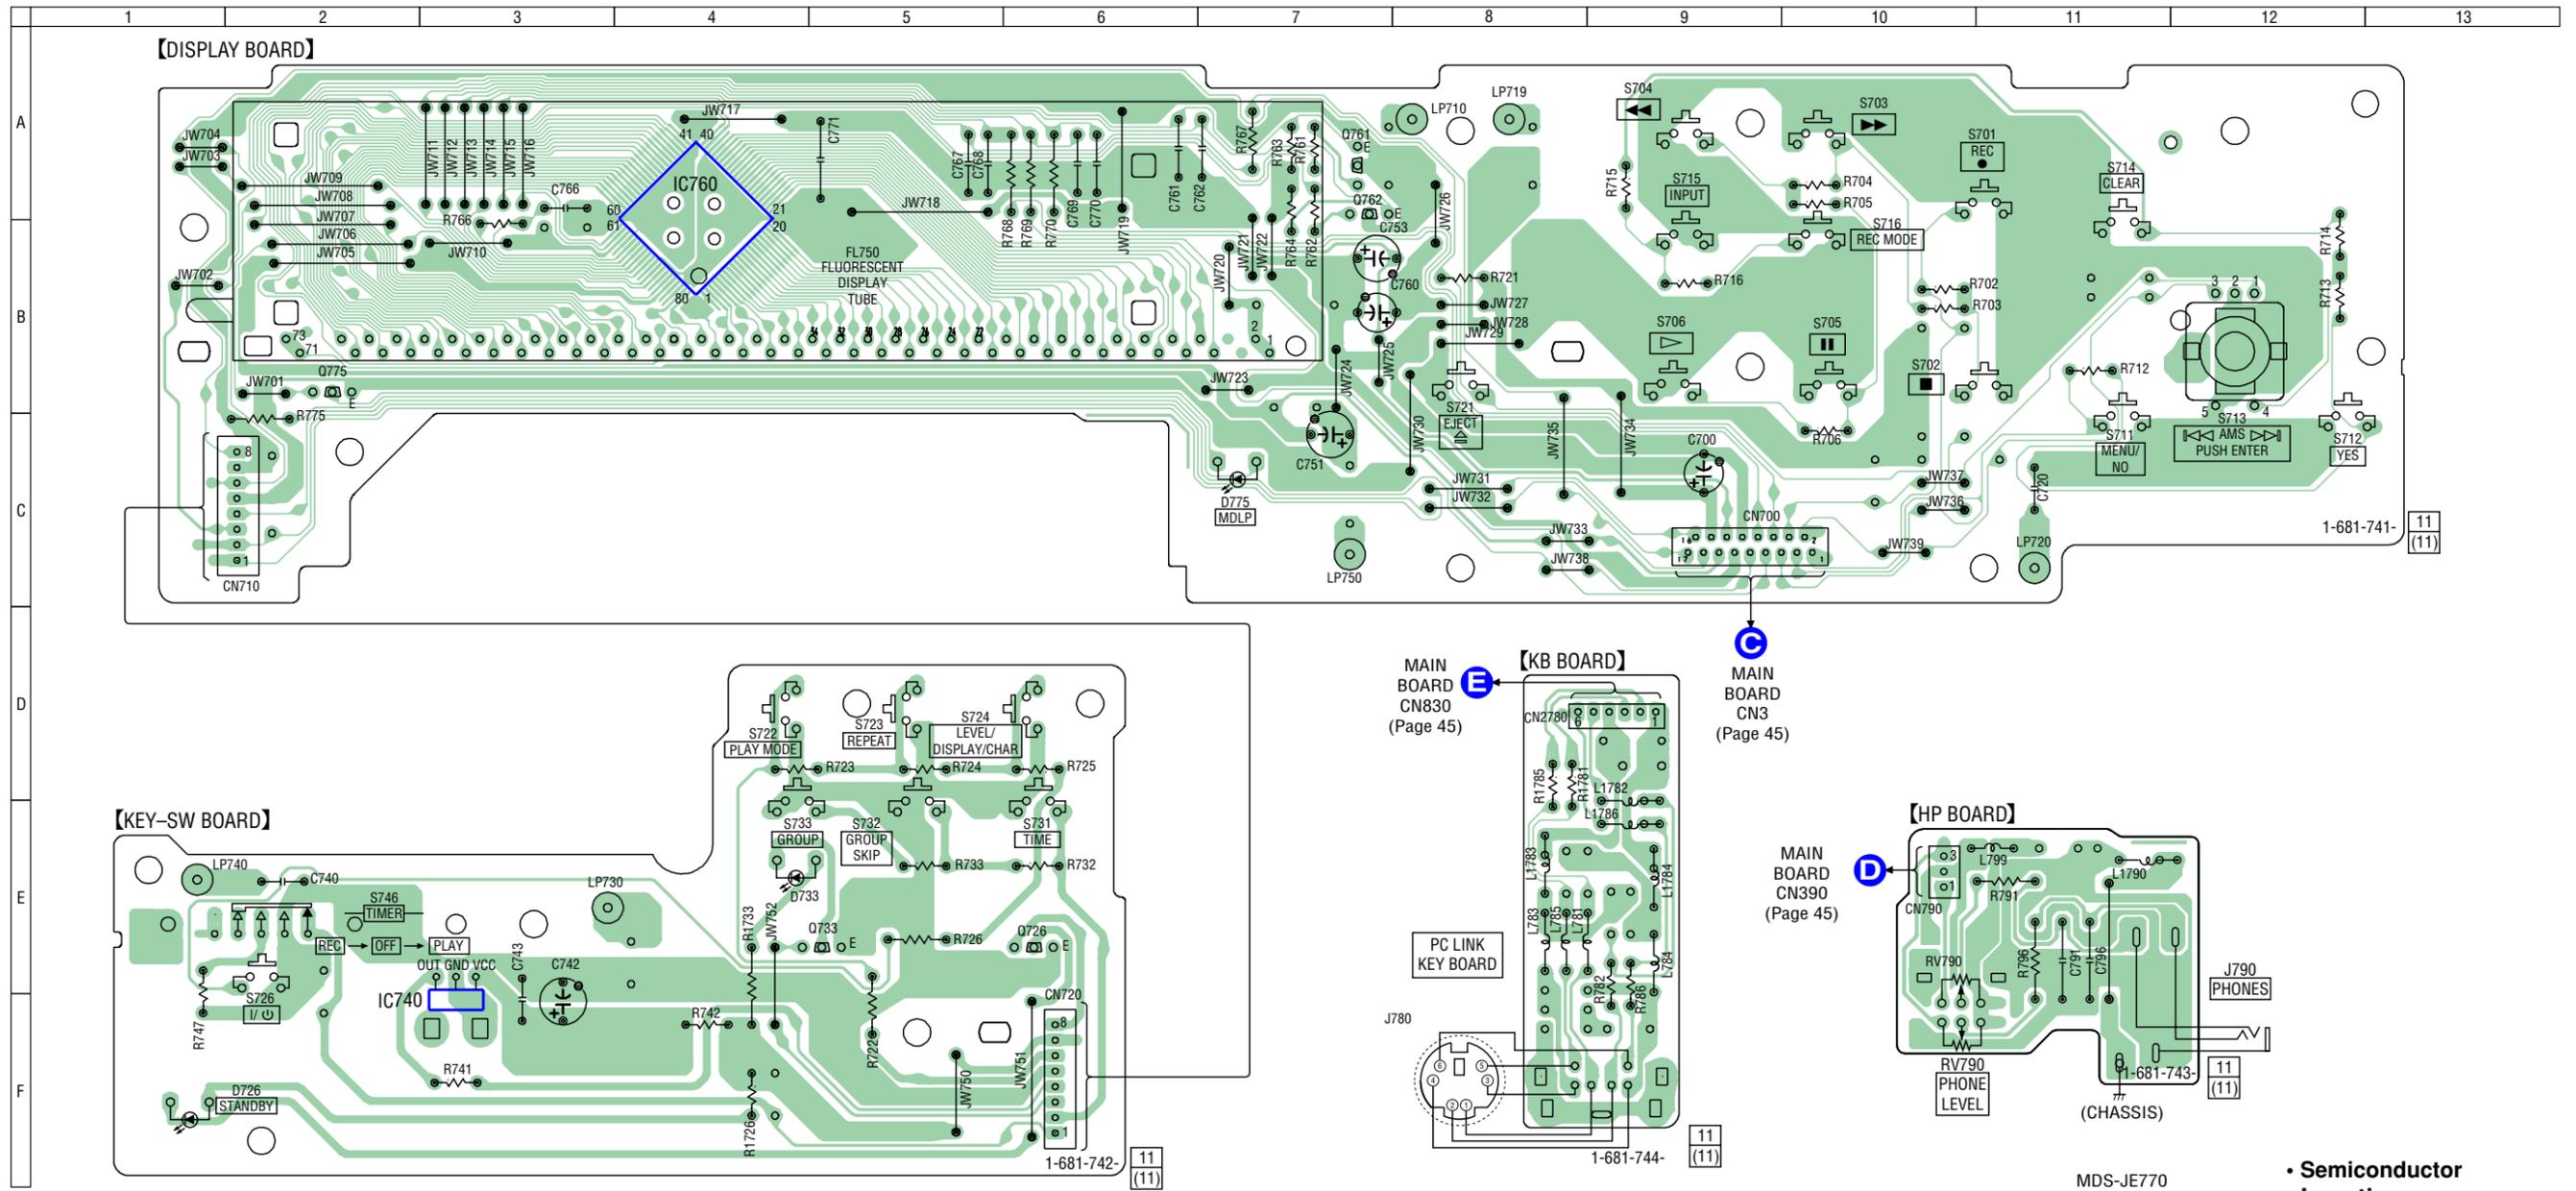


MDS-JE770
E
51499

• Semiconductor Location


Ref. No.	Location
D726	F-1
D733	E-4
D775	C-7
IC740	F-3
IC760	A-4
Q726	E-6
Q733	E-5
Q761	A-7
Q762	A-7
Q775	B-2

6-10. SCHEMATIC DIAGRAM - DISPLAY SECTION -

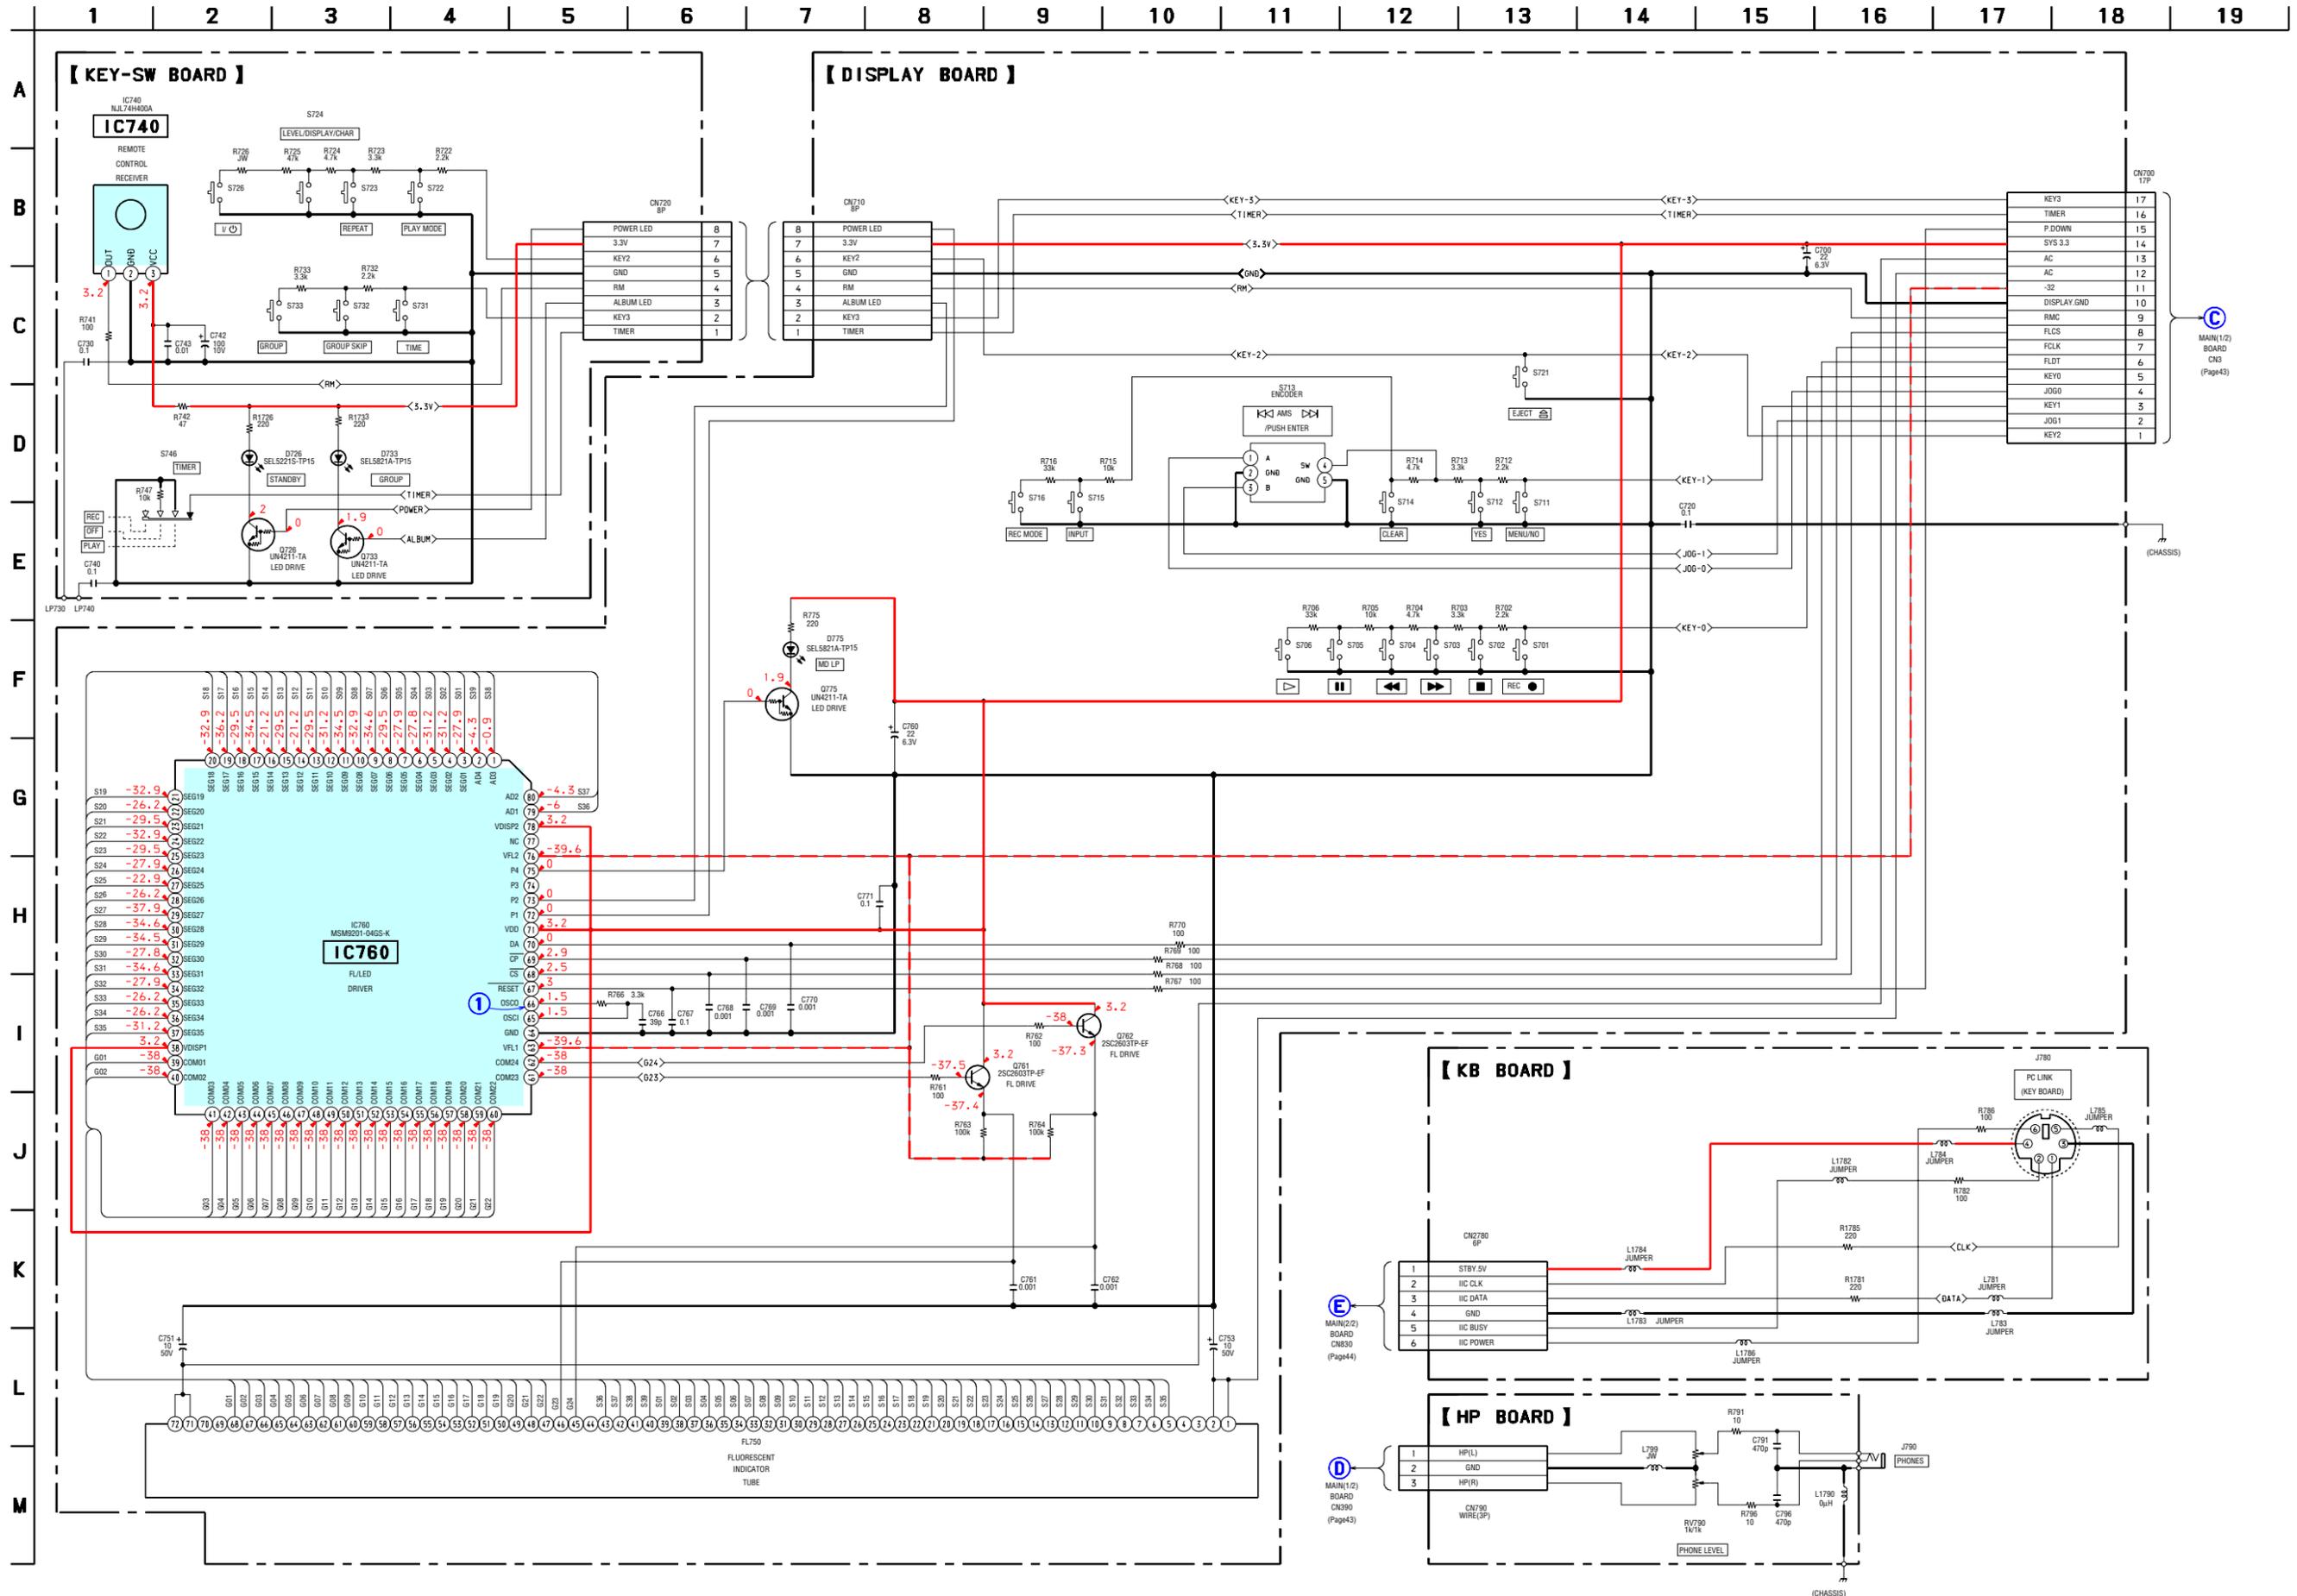


6-11. PRINTED WIRING BOARD – POWER SECTION – • See page 36 for Circuit Board Location.

There are a few cases that the part isn't mounted in model is printed on diagram.

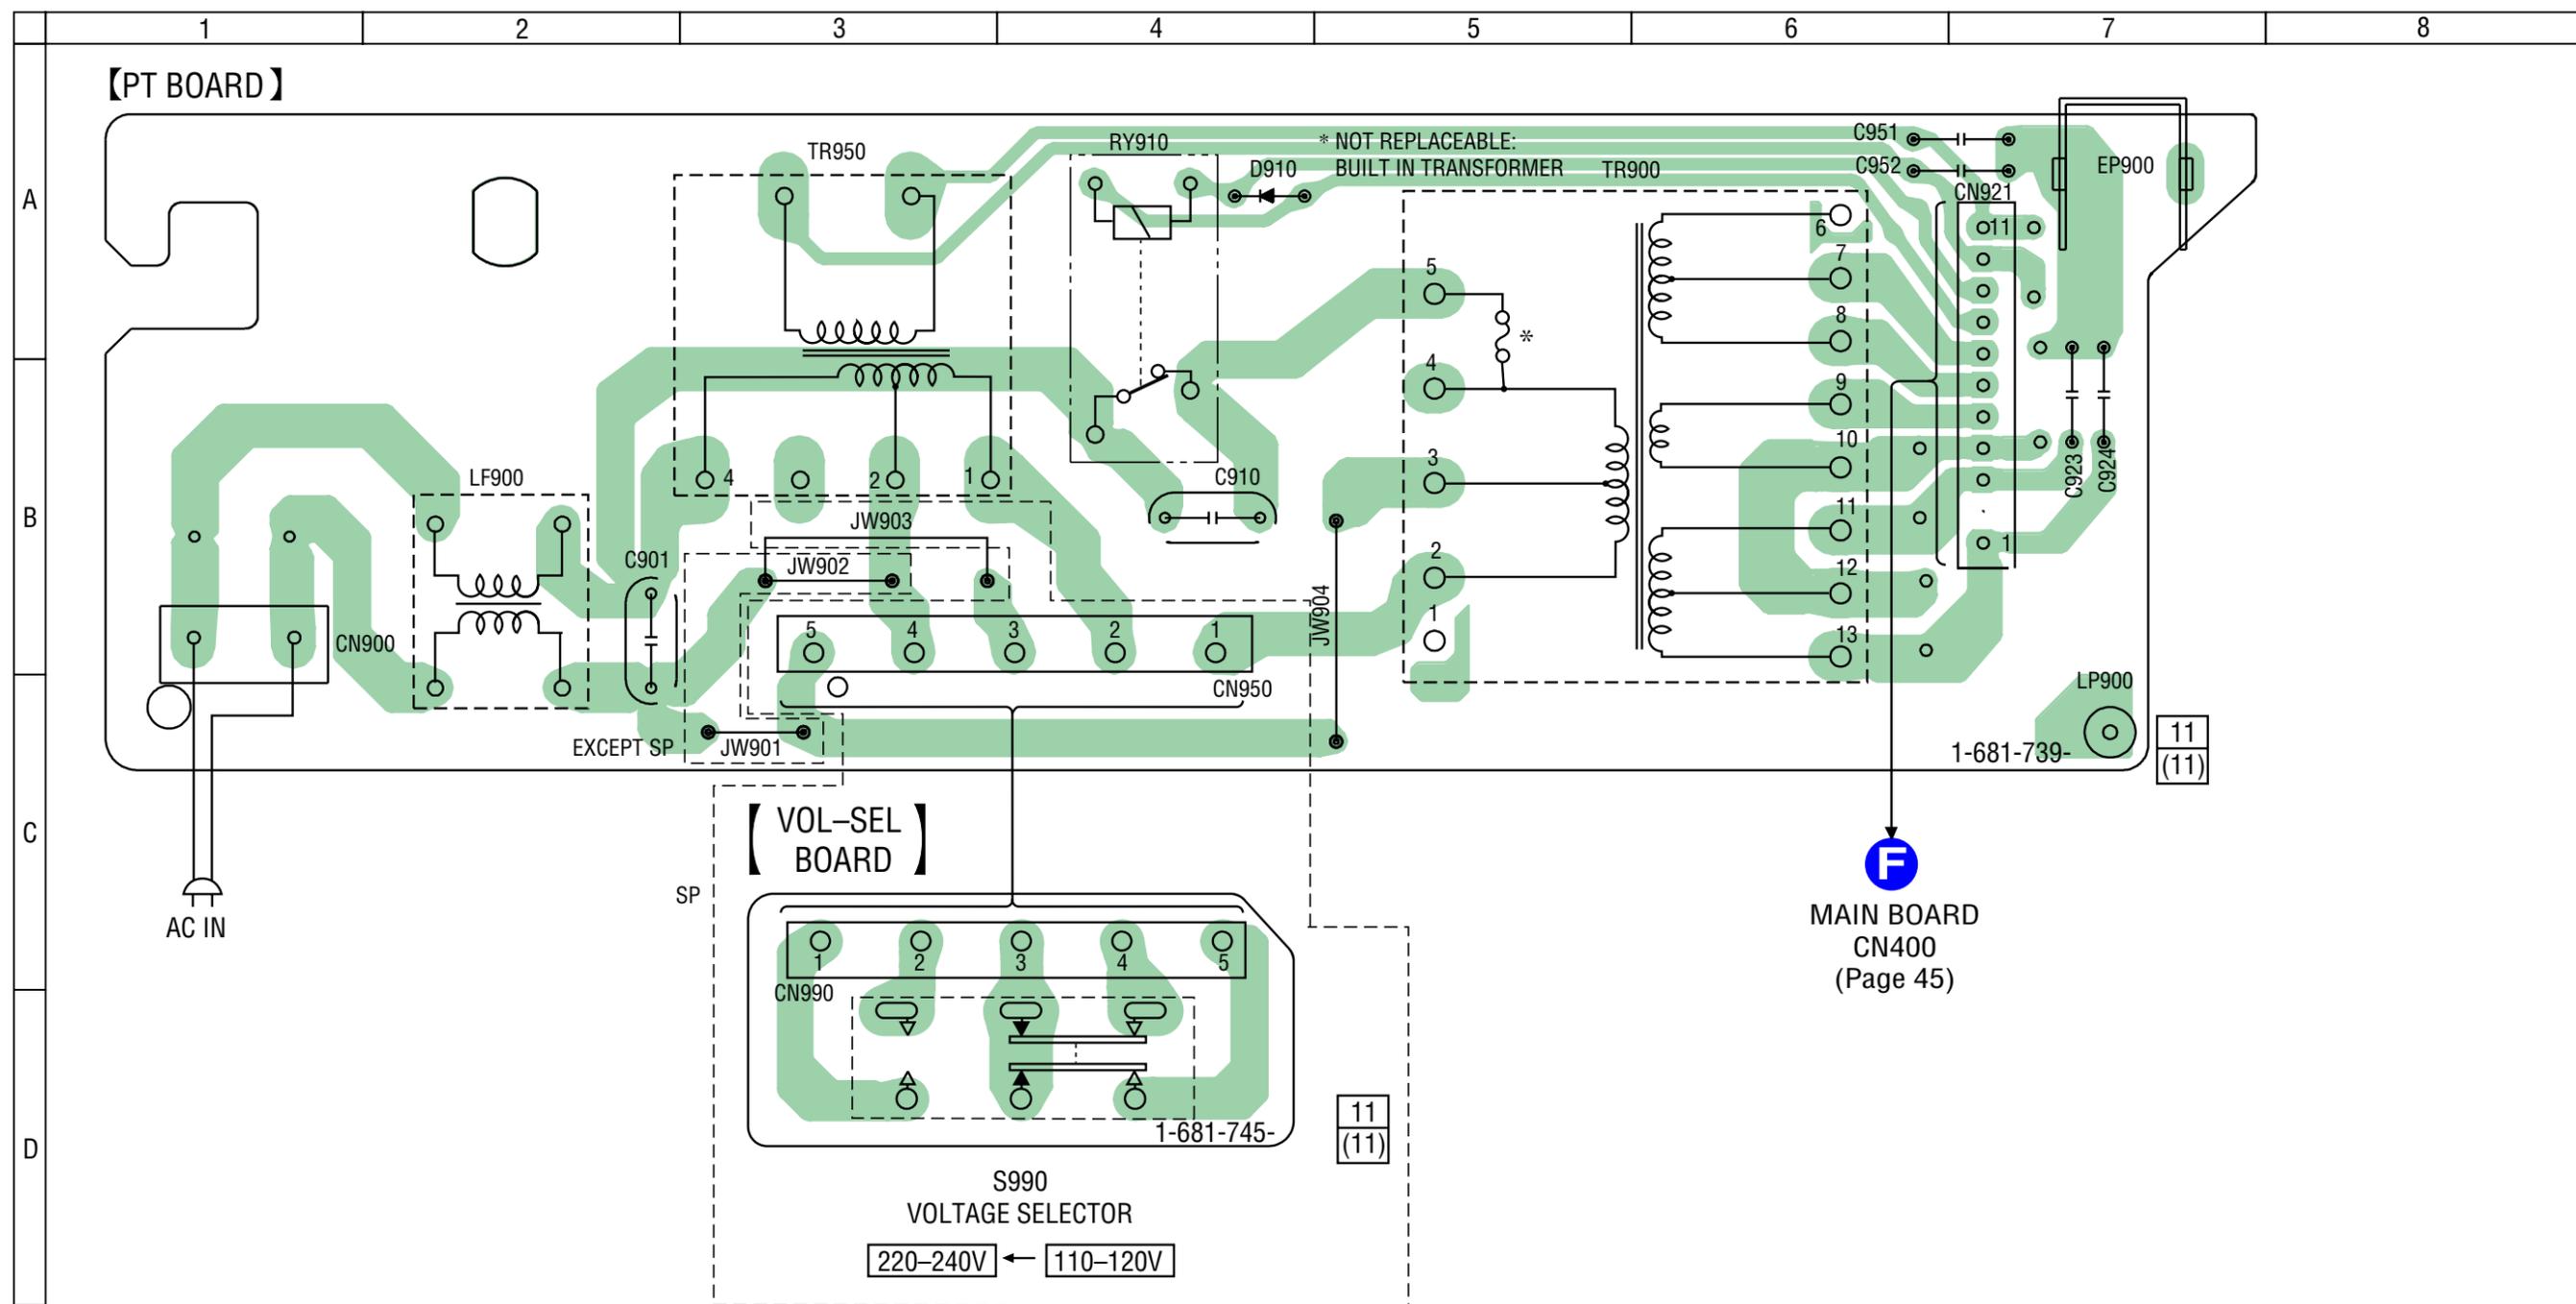


6-12. SCHEMATIC DIAGRAM – POWER SECTION –

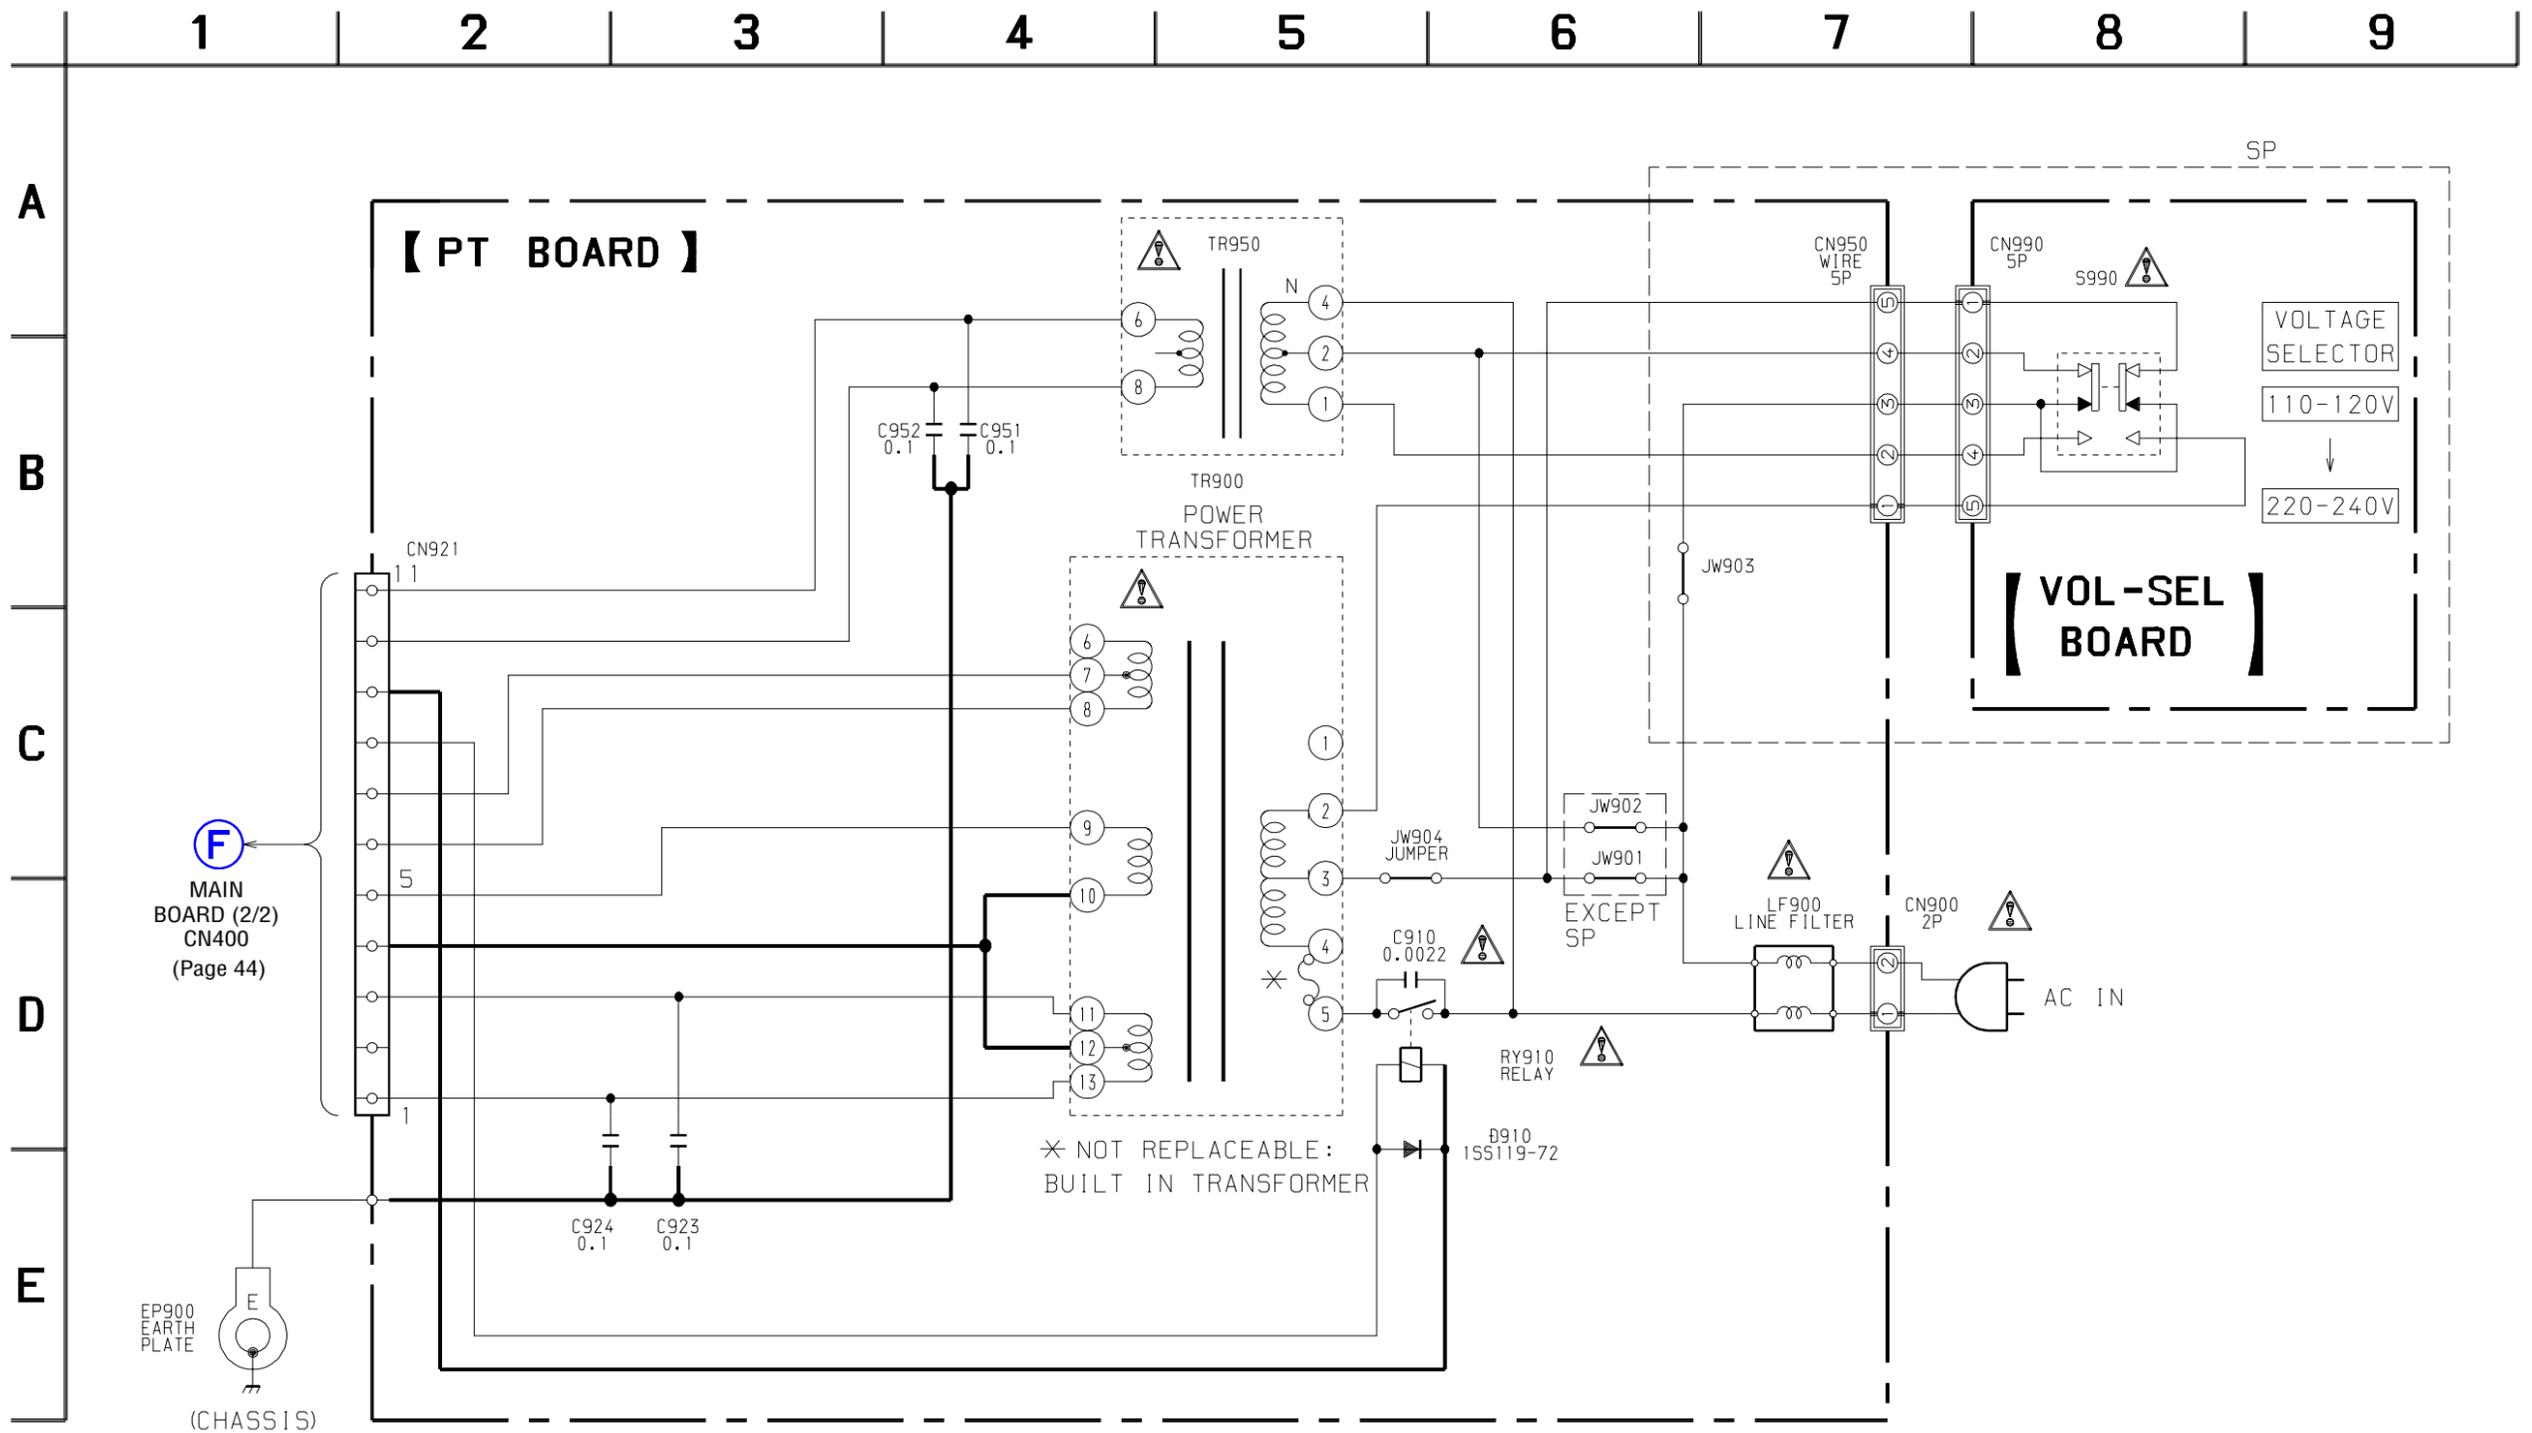


Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

6-13. IC BLOCK DIAGRAMS


IC101 CXA2523AR (BD BOARD)

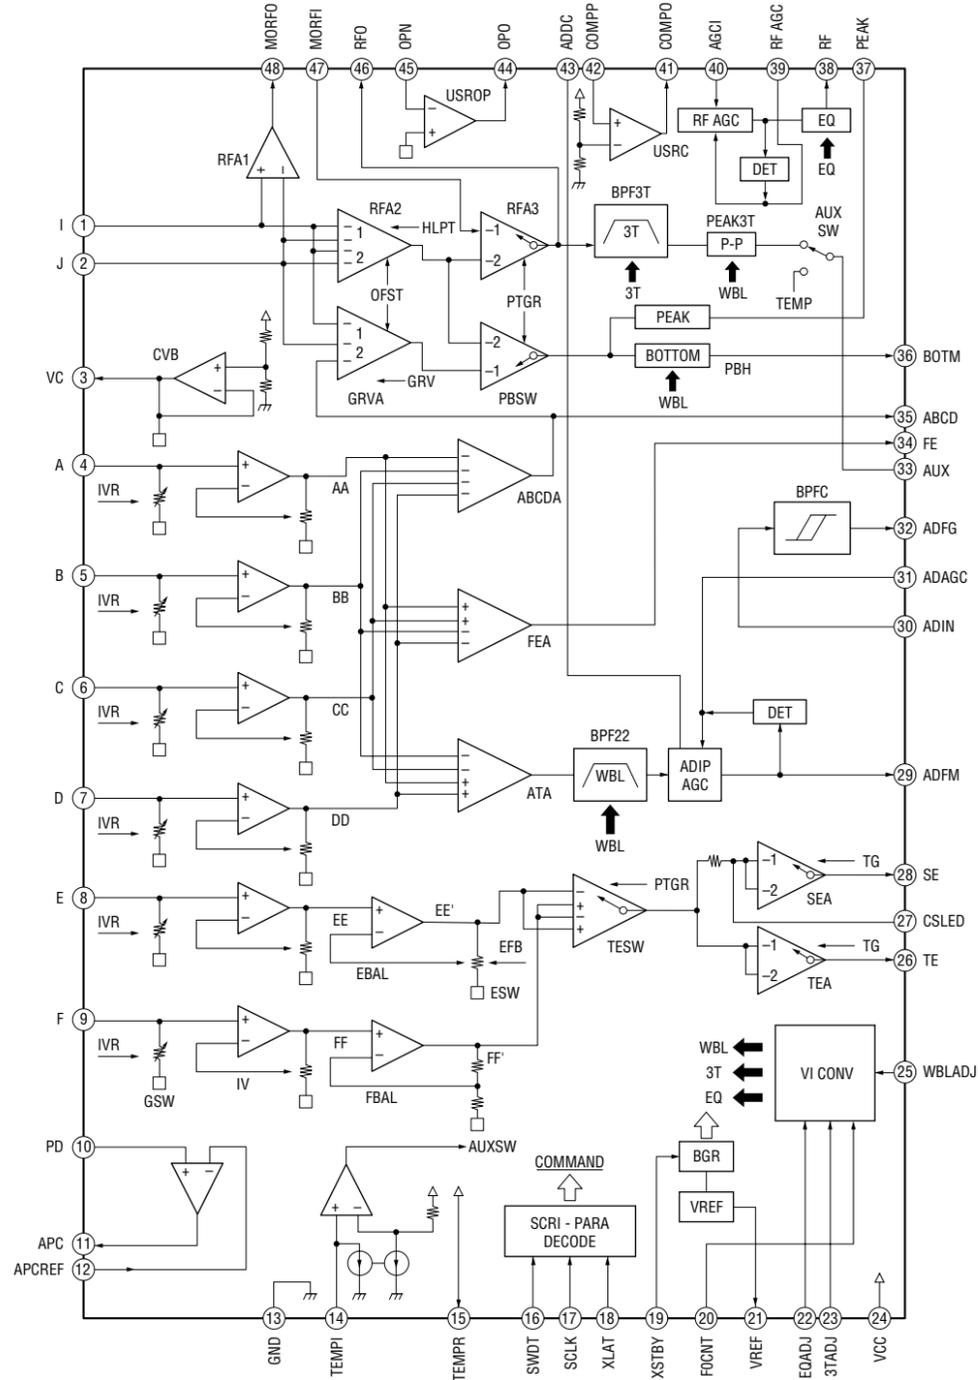


IC151 CXD2662R (BD BOARD)

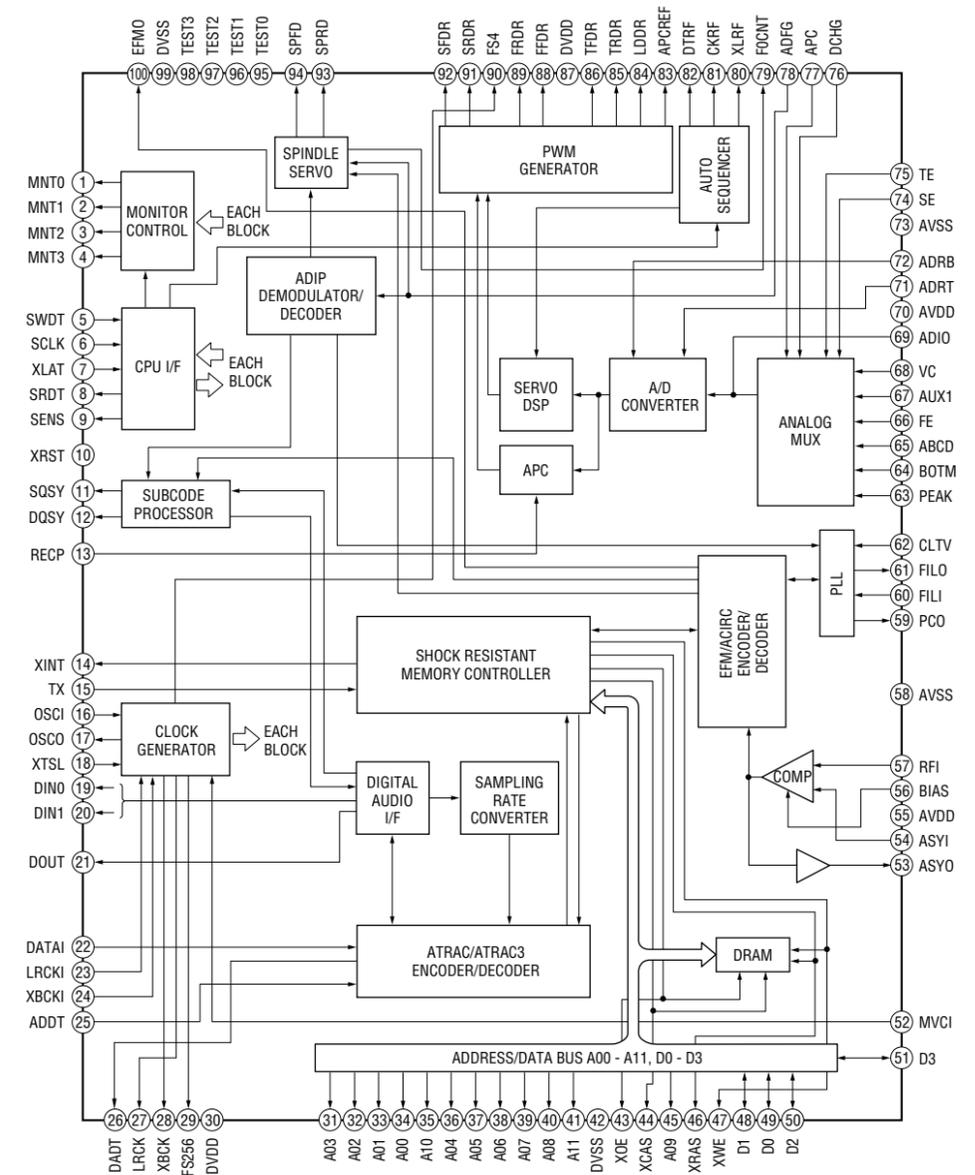


IC141 BH6519FS-E2 (BD BOARD)

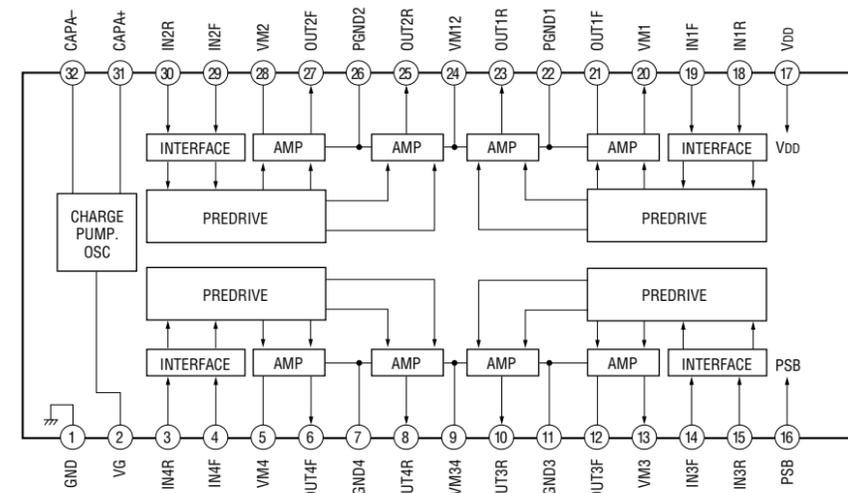


IC500 AK4524 (MAIN BOARD)

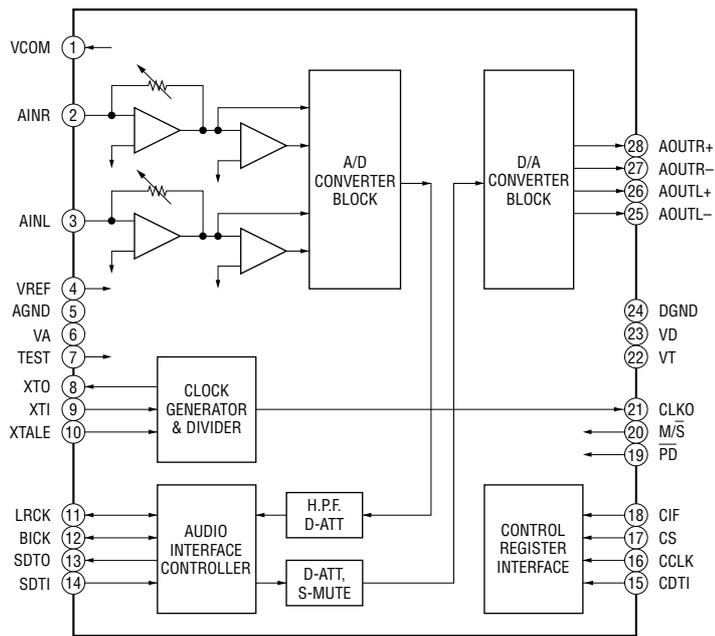

IC440 M54641L (MAIN BOARD)

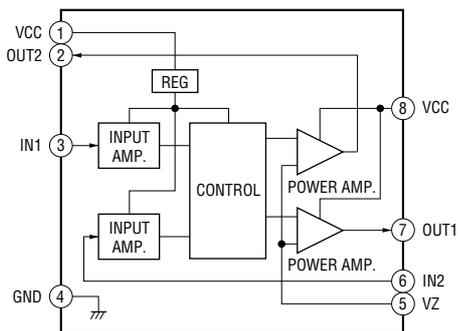

IC421 M5293L (MAIN BOARD)

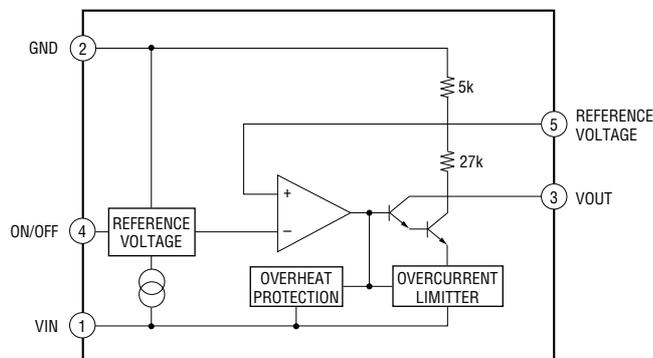

6-14. IC PIN FUNCTION DESCRIPTION

• IC101 CXA2523AR RF Amplifier (BD BOARD)

Pin No.	Pin Name	I/O	Description
1	I	I	I-V converted RF signal I input
2	J	I	I-V converted RF signal J input
3	VC	O	Middle point voltage (+1.5V) generation output
4 - 9	A to F	I	Signal input from the optical pick-up detector
10	PD	I	Light amount monitor input
11	APC	O	Laser APC output
12	APCREF	I	Reference voltage input for setting laser power
13	GND	—	Ground
14	TEMPI	I	Temperature sensor connection
15	TEMPR	O	Reference voltage output for the temperature sensor
16	SWDT	I	Serial data input from the CXD2662R
17	SCLK	I	Serial clock input from the CXD2662R
18	XLAT	I	Latch signal input from the CXD2662R “L”: Latch
19	XSTBY	I	Stand by signal input “L”: Stand by
20	F0CNT	I	Center frequency control voltage input of BPF22, BPF3T, EQ from the CXD2662R
21	VREF	O	Reference voltage output (Not used)
22	EQADJ	I	Center frequency setting pin for the internal circuit EQ
23	3TADJ	I	Center frequency setting pin for the internal circuit BPF3T
24	Vcc	I	+3V power supply
25	WBLADJ	I	Center frequency setting pin for the internal circuit BPF22
26	TE	O	Tracking error signal output to the CXD2662R
27	CSLED	—	External capacitor connection pin for the sled error signal LPF
28	SE	O	Sled error signal output to the CXD2662R
29	ADFM	O	FM signal output of ADIP
30	ADIN	I	ADIP signal comparator input ADFM is connected with AC coupling
31	ADAGC	—	External capacitor connection pin for AGC of ADIP
32	ADFG	O	ADIP duplex signal output to the CXD2662R
33	AUX	O	I3 signal/temperature signal output to the CXD2662R
34	FE	O	Focus error signal output to the CXD2662R
35	ABCD	O	Light amount signal output to the CXD2662R
36	BOTM	O	RF/ABCD bottom hold signal output to the CXD2662R
37	PEAK	O	RF/ABCD peak hold signal output to the CXD2662R
38	RF	O	RF equalizer output to the CXD2662R
39	RFAGC	—	External capacitor connection pin for the RF AGC circuit
40	AGCI	I	Input to the RF AGC circuit The RF amplifier output is input with AC coupling
41	COMPO	O	User comparator output (Not used)
42	COMPP	I	User comparator input (Fixed at “L”)
43	ADDC	—	External capacitor pin for cutting the low band of the ADIP amplifier
44	OPO	O	User operation amplifier output (Not used)
45	OPN	I	User operation amplifier inversion input (Fixed at “L”)
46	RFO	O	RF amplifier output
47	MORFI	I	Groove RF signal is input with AC coupling
48	MORFO	O	Groove RF signal output

• Abbreviation

APC: Auto Power Control

AGC: Auto Gain Control

• IC151 CXD2662R Digital Signal Processor, Digital Servo Signal Processor (BD BOARD)

Pin No.	Pin Name	I/O	Description
1	MNT0 (FOK)	O	Not used (open)
2	MNT1 (SHCK)	O	Track jump detection signal output to the system control
3	MNT2 (XBUSY)	O	In the state of executire command signal output
4	MNT3 (SLOC)	O	Not used (open)
5	SWDT	I	Writing data signal input from the system control
6	SCLK	I (S)	Serial clock signal input from the system control
7	XLAT	I (S)	Serial latch signal input from the system control
8	SRDT	O (3)	Reading data signal output to the system control
9	SENS	O (3)	Internal status (SENSE) output to the system control
10	XRST	I (S)	Reset signal input from the system control "L": Reset
11	SQSY	O	Subcode Q sync (SCOR) output to the system control "L" is output every 13.3 msec. Almost all, "H" is output
12	DQSY	O	Digital In U-bit CD format or MD format subcode Q sync (SCOR) output to the system control
13	RECP	I	Laser power switching input from the system control "H": Recording, "L": Playback
14	XINT	O	Interrupt status output to the system control
15	TX	O	Recording data output enable input from the system control
16	OSCI	I	System clock input (512Fs=22.5792 MHz)
17	OSCO	O	System clock output (512Fs=22.5792 MHz) (Not used)
18	XTSL	I	System clock frequency setting "L": 45.1584 MHz, "H": 22.5792 MHz (Fixed at "H")
19	DIN0	I	Digital audio input (Optical input)
20	DIN1	I	Digital audio input (Optical input) (Not used)
21	DOUT	O	Digital audio output (Optical output) (Not used)
22	DADTI	I	Serial data input
23	LRCKI	I	LR clock input "H" : Lch, "L" : R ch
24	XBCKI	I	Serial data clock input
25	ADDT	I	Data input from the A/D converter
26	DADT	O	Data output to the D/A converter
27	LRCK	—	LR clock output for the A/D and D/A converter (44.1 kHz)
28	XBCK	O	Bit clock output to the A/D and D/A converter (2.8224 MHz)
29	FS256	O	11.2896 MHz clock output (Not used)
30	DVDD	I	+3V power supply (Digital)
31 - 34	A03 to A00	O	DRAM address output
35	A10	O	DRAM address output (Not used)
36 - 40	A04 to A08	O	DRAM address output
41	A11	O	DRAM address output (Not used)
42	DVSS	—	Ground (Digital)
43	XOE	O	Output enable output for DRAM
44	XCAS	O	CAS signal output for DRAM
45	A09	O	Address output for DRAM
46	XRAS	O	RAS signal output for DRAM
47	XWE	O	Write enable signal output for DRAM

* I (S) stands for Schmidt input, I (A) for analog input, O (3) for 3-state output, and O (A) for analog output in the column I/O

Pin No.	Pin Name	I/O	Description
48	D1	I/O	Data input/output for DRAM
49	D0	I/O	
50, 51	D2, D3	I/O	
52	MVCI	I (S)	Clock input from an external VCO (Fixed at "L")
53	ASYO	O	Playback EFM duplex signal output
54	ASYI	I (A)	Playback EFM comparator slice level input
55	AVDD	I	+3V power supply (Analog)
56	BIAS	I (A)	Playback EFM comparator bias current input
57	RFI	I (A)	Playback EFM RF signal input
58	AVSS	—	Ground (Analog)
59	PCO	O (3)	Phase comparison output for the recording/playback EFM master PLL
60	FILI	I (A)	Filter input for the recording/playback EFM master PLL
61	FILO	O (A)	Filter output for the recording/playback EFM master PLL
62	CLTV	I (A)	Internal VCO control voltage input for the recording/playback EFM master PLL
63	PEAK	I (A)	Light amount signal peak hold input from the CXA2523AR
64	BOTM	I (A)	Light amount signal bottom hold input from the CXA2523AR
65	ABCD	I (A)	Light amount signal input from the CXA2523AR
66	FE	I (A)	Focus error signal input from the CXA2523AR
67	AUX1	I (A)	Auxiliary A/D input
68	VC	I (A)	Middle point voltage (+1.5V) input from the CXA2523AR
69	ADIO	O (A)	Monitor output of the A/D converter input signal (Not used)
70	AVDD	I	+3V power supply (Analog)
71	ADRT	I (A)	A/D converter operational range upper limit voltage input (Fixed at "H")
72	ADRB	I (A)	A/D converter operational range lower limit voltage input (Fixed at "L")
73	AVSS	—	Ground (Analog)
74	SE	I (A)	Sled error signal input from the CXA2523AR
75	TE	I (A)	Tracking error signal input from the CXA2523AR
76	DCHG	I (A)	Connected to +3V power supply
77	TEST4	I	Test input (Fixed at "H")
78	ADFG	I (S)	ADIP duplex FM signal input from the CXA2523AR (22.05 ± 1 kHz)
79	F0CNT	O	Filter f0 control output to the CXA2523AR
80	XLRF	O	Control latch output to the CXA2523AR
81	CKRF	O	Control clock output to the CXA2523AR
82	DTRF	O	Control data output to the CXA2523AR
83	APCREF	O	Reference PWM output for the laser APC
84	TEST0	O	PWM output for the laser digital APC (Not used)
85	TRDR	O	Tracking servo drive PWM output (-)

- Abbreviation

EFM: Eight to Fourteen Modulation

PLL : Phase Locked Loop

VCO: Voltage Controlled Oscillator

Pin No.	Pin Name	I/O	Description
86	TFDR	O	Tracking servo drive PWM output (+)
87	DVDD	I	+3V power supply (Digital)
88	FFDR	O	Focus servo drive PWM output (+)
89	FRDR	O	Focus servo drive PWM output (-)
90	FS4	O	176.4 kHz clock signal output (X'tal) (Not used)
91	SRDR	O	Sled servo drive PWM output (-)
92	SFDR	O	Sled servo drive PWM output (+)
93	SPRD	O	Spindle servo drive PWM output (-)
94	SPFD	O	Spindle servo drive PWM output (+)
95	FGIN	I (S)	Test input (Fixed at "L")
96 - 98	TEST1 to TEST3	I	
99	DVSS	—	Ground (Digital)
100	EFMO	O	EFM output when recording

- Abbreviation

EFM: Eight to Fourteen Modulation

• IC1 M30803MG-106FP SYSTEM CONTROL (MAIN BOARD)

Pin No.	Pin Name	I/O	Description
1	FLDT	O	Serial data signal output to the display driver.
2	FLCK	O	Serial clock signal output to the display driver. L: Active
3	A1-IN	I	A1 Control input.
4	SIRCS	I	Remote control input.
5 - 7	NC	—	Not used.
8	BYTE	I	Data bus changed input. (Connected to ground.)
9	CNVSS	—	Ground.
10	XIN-T	I	Not used . (open)
11	XOUT-T	O	Not used . (open)
12	S.RST	I	System rest input. L : reset
13	XOUT	O	Main clock output. (10MHz)
14	GND	—	Ground.
15	XIN	I	Main clock input. (10MHz)
16	VCC	I	Power supply. (+3.3V)
17	NMI	I	Fixed at H.
18	DQSY	I	Digital In U-bit format or MD format subcode Q sync (SCOR) input to CXD2662R.
19	P.DOWN	I	Power down detection input. L: Power down
20	SQSY	I	Subcode Q (SCOR) sync input from CXD2662R.
21	KB.CLK	O	Keyboard clock output.
22	KB.DATA	I	Keyboard data output.
23	IIC BUSY	I	IIC busy signal input.
24	A1 OUT	O	A1 control signal output.
25	XINIT	I	Interrupt status input from CXD2662R.
26	*BEEP	O	Not used. (open)
27	LRCKI	O	Not used. (open)
28	IIC POWER	O	IIC start-up check.
29	IIC CLK	O	IIC serial clock output.
30	IIC DATA	I/O	IIC serial data input/output.
31	SWDT	O	Writing data signal output to CXD2662R and AK4524.
32	SRDT	I	Reading data signal input from CXD2662R.
33	SCLK	O	Clock signal output to CXD2662R and AK4524.
34	KB.CLK-CTRL	O	Keyboard clock ON/OFF signal output.
35	CLIP-TX	O	Not used. (open)
36	CLIP-RX	I	Not used. (open)
37	XBCK1	O	Not used. (open)
38	MUTE	O	Line out muting output. L: Mute
39	ADA.RESET	O	Reset signal output to the AK4524. L: Active

Pin No.	Pin Name	I/O	Description
40	ADA. LATCH	O	Chip select signal output to the AK4524. L: Active
41	EPN	I	Not used. (Fixed at L)
42	L : DINT1/H : CLIP	—	Not used. (open)
43	NC	—	Not used.
44	PROTECT	I	Recording-protection claw detection input from the protection detection switch. H: Protect
45	SCL	O	Clock signal output to the EEP-ROM.
46	CE	I	Not used. (Fixed at H)
47	EEP-WP	O	EEP-ROM write protect signal output. L: write possibility
48	XBUSY	I	Busy signal input from the CXD2662R
49	OUT-SW	I	Detection signal input from the loading out detection switch.
50	XLATCH	O	Latch signal output to CXD2662R.
51	PLAY-SW	I	Detection signal input from the playback position detection switch. L: PLAY
52	DIG-RST	O	Digital rest signal output to the CXD2662R and motor driver. L: Reset
53	REC-SW	I	Detection signal input from the recording position detection switch. L: REC
54	WR PWR	O	Laser power ON/OFF signal output. L: PLAY H: REC
55	LIMIT-IN	I	Detection input from the limit switch. L: Sled limit-In H: Sled limit-Out
56	MOD	O	Laser modulation switching signal output. (L: STOP, H : PLAY, pluse : REC)
57	LDON	O	Laser ON/OFF control output. H: Laser ON
58	SENS	I	Internal status (SENSE) input from the CXD2662R.
59	SHOCK	I	Track jump signal input from the CXD2662R.
60	SDA	I/O	Data signal input/output pin with the EEP-ROM.
61	REFLECT	I	Disk reflection rate detection input from the reflect detection switch. H: Disk with low reflection rate.
62	VCC	I	Power supply. (+3.3V)
63	NC	—	Not used.
64	GND	—	Ground.
65	LOAD LO	O	Loading motor voltage control output
66	LOAD OUT	O	Loading motor control output. H: eject
67	LOAD IN	O	Loading motor control output. H: loading
68 - 71	MODEL SEL 0 - 3	—	Not used.
72 - 80	NC	—	Not used.

Pin No.	Pin Name	I/O	Description
81	STB	O	Strobe signal output to the power supply circuit. H: Power supply ON: L: standby
82	BEEP SW	—	Not used.
83	REC	—	Not used.
84	FLCS	O	Chip select signal output to the MSM9202 (IC760)
85, 86	D.VOL0,1	—	Not used.
87, 88	JOG0, JOG1	I	Jog dial pulse input from the rotary encoder.
89	IOP	I	Optical Pick-up voltage (current) detect signal input.
90	DISTINATION	I	Model discrimination.
91	MODEL SEL	I	Model discrimination.
92	TIMER	I	Timer select signal input
93	KEY3	I	Key input pin (A/D input)
94, 95	KEY2, 1	I	Key input pin (A/D input)
96	AVSS	—	Ground. (Analog)
97	KEY0	I	Key input pin (A/D input)
98	VREF	I	A/D reference voltage.
99	AVCC	I	Power supply. (+3.3V)
100	NC	I	Not used. (Fixed at L)

• IC760 MSM9201-04GS-K FL DRIVER (DISPLA BOARD)

Pin No.	Pin Name	I/O	Description
1, 2	AD3, AD4	O	Fluorescent display tube (FL760) anode electrode drive
3-37	SEG1-35	O	Fluorescent display tube (FL760) segment electrode drive
38	VDISP1	I	Power supply for fluorescent display tube (FL760) drive
39-62	COM1-24	O	Fluorescent display tube (FL760) grid electrode drive
63	VFL1	I	Power supply for fluorescent display tube (FL760) drive
64	GND	—	Ground
65	OSC0	I	Input for CR oscillation
66	OSC1	O	Output for CR oscillation
67	RESET	I	Reset input
68	CS	I	Chip select signal input from system controller (IC1)
69	CP	I	Shift clock signal input from system controller (IC1)
70	DA	I	Serial data signal input from system controller (IC1)
71	VDD	I	Power supply
72	P1	O	LED drive signal output
73	P2	O	LED drive signal output
74	P3	O	LED drive signal output Not used in this set (NC)
75	P4	O	LED drive signal output
76	VFL2	I	Power supply for fluorescent display tube (FL760) drive
77	NC	—	Not used
78	VDISP2	I	Power supply for fluorescent display tube (FL760) drive
79, 80	AD3, AD4	O	Fluorescent display tube (FL760) anode electrode drive

SECTION 7 EXPLODED VIEWS


NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.

- Color indication of Appearance Parts
Example :
KNOB, BALANCE (WHITE) ... (RED)
↑↑
Parts color Cabinet's color
- Abbreviation
SP : Singapore model

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.


7-1. CHASSIS SECTION

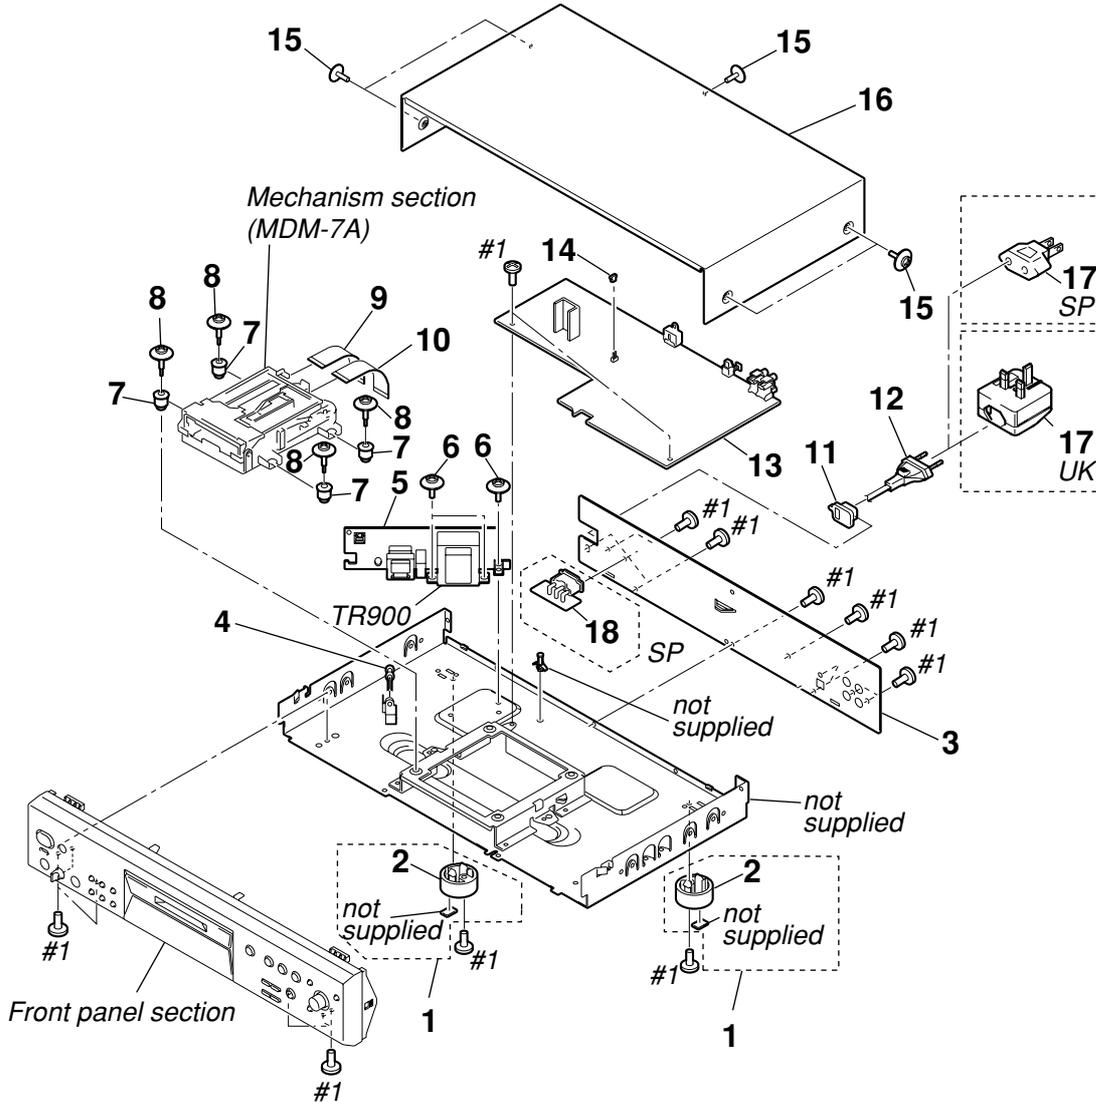

Ref. No.	Part No.	Description	Remarks
1	X-4953-448-1	FOOT ASSY	
2	4-232-237-01	FOOT (DIA. 30)	
3	4-233-025-61	PANEL, BACK (AEP)	
3	4-233-025-81	PANEL, BACK (SP)	
3	4-236-047-11	PANEL, BACK (UK)	
4	9-910-999-31	RIVET (DIA. 3), NYLON	
5	1-681-739-11	PT BOARD	
6	4-221-887-11	SCREW, +PTTWH (M3) (S) TITE	
7	4-228-689-01	INSULATOR	
8	4-228-643-11	SCREW (+BVTTWH M3), STEP	
9	1-792-811-11	WIRE (FLAT TYPE) (23 CORE)	
10	1-757-928-11	WIRE (FLAT TYPE) (27 CORE)	
* 11	3-703-244-00	BUSHING (2104), CORD	
\triangle 12	1-777-071-41	CORD, POWER	


Ref. No.	Part No.	Description	Remarks
13	A-2007-925-A	MAIN BOARD, COMPLETE (AEP,UK)	
13	A-2007-931-A	MAIN BOARD, COMPLETE (SP)	
* 14	1-569-972-21	SOCKET, SHORT 2P	
15	4-210-291-01	SCREW (CASE 3 TP2)...(BLACK)	
15	4-210-291-11	SCREW (CASE 3 TP2)...(SILVER)	
16	4-232-149-31	CASE (408226)...(BLACK)	
16	4-232-580-31	CASE (408226)...(SILVER)	
\triangle 17	1-569-008-21	ADAPTOR, CONVERSION (SP)	
\triangle 17	1-770-019-11	ADAPTOR, CONVERSION PLUG 3P (UK)	
18	1-681-745-11	VOL-SEL BOARD (SP)	
\triangle TR900	1-437-339-11	TRANSFORMER, POWER (AEP,UK)	
\triangle TR900	1-437-340-11	TRANSFORMER, POWER (SP)	

7-2. FRONT PANEL SECTION

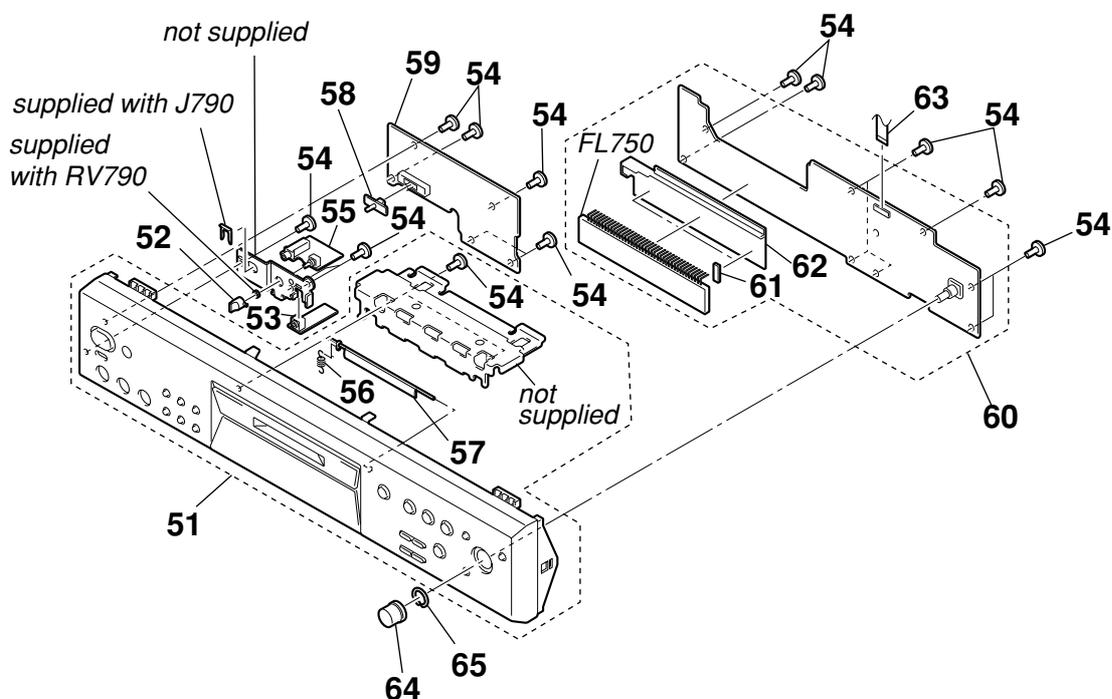


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	X-4953-713-1	PANEL ASSY, FRONT...(BLACK)		58	4-971-774-31	KNOB (TIMER)...(SILVER)	
51	X-4953-714-1	PANEL ASSY, FRONT...(SILVER)		59	1-681-742-11	KEY-SW BOARD	
52	3-931-378-01	KNOB (F10)...(BLACK)		60	A-2007-926-A	DISPLAY BOARD, COMPLETE (AEP,UK)	
52	3-931-378-31	KNOB (F10)...(SILVER)		60	A-2007-932-A	DISPLAY BOARD, COMPLETE (SP)	
53	1-681-744-11	KB BOARD		* 61	4-955-901-01	CUSHION (FL)	
54	4-951-620-01	SCREW (2.6X8), +BVTP		* 62	4-996-686-01	HOLDER (FL)	
55	1-681-743-11	HP BOARD		63	1-757-930-11	WIRE (FLAT TYPE) (17 CORE)	
56	4-228-630-01	SPRING (LID), TENSION COIL		64	4-231-928-01	KNOB (AMS)...(BLACK)	
57	4-228-629-81	LID (MD)...(BLACK)		64	4-231-928-11	KNOB (AMS)...(SILVER)	
57	4-230-848-21	LID (MD)...(SLVER)		65	3-354-981-11	SPRING (SUS), RING	
58	4-971-774-01	KNOB (TIMER)...(BLACK)		FL750	1-517-987-11	INDICATOR TUBE, FLUORESCENT	

7-3. MECHANISM SECTION-1
(MDM-7A)

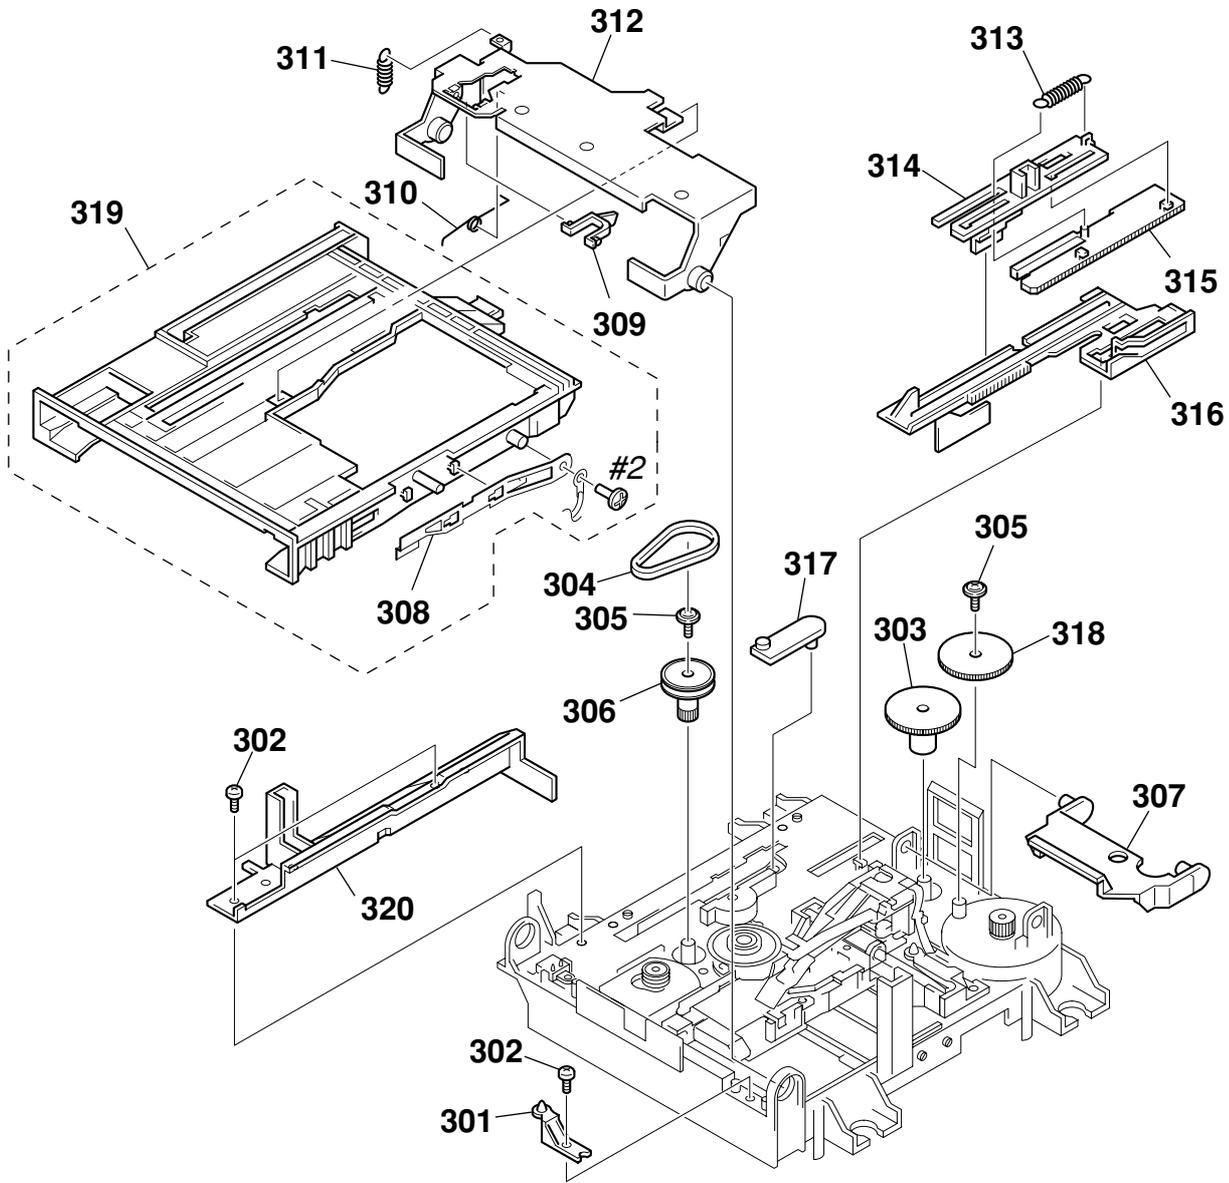

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* 301	4-996-267-01	BASE (BU-D)		311	4-231-118-01	SPRING (HOLDER), TENSION	
302	4-231-319-01	SCREW (2X6) CZN, +B (P) TRI		312	4-227-019-02	PLATE (HOLDER) ASSY, RETAINER	
303	4-227-007-01	GEAR (SB)		313	4-227-013-01	SPRING (EJ), TENSION	
304	4-227-025-01	BELT (LOADING)		314	4-226-995-01	SLIDER (EJ)	
305	3-372-761-01	SCREW (M1.7), TAPPING		315	4-226-996-01	LIMITTER (EJ)	
306	4-227-002-01	GEAR, PULLEY		316	4-226-997-04	SLIDER	
307	4-226-999-01	LEVER (HEAD)		317	4-226-998-01	LEVER (CHG)	
308	X-4952-665-1	SPRING (SHT) ASSY, LEAF		318	4-227-006-01	GEAR (SA)	
309	A-4672-990-F	LOCK (HOLDER)		319	A-4735-075-A	HOLDER ASSY	
310	4-229-533-01	SPRING (STOPPER), TORSION		320	4-226-994-01	GUIDE (L)	

7-4. MECHANISM SECTION-2
(MDM-7A)

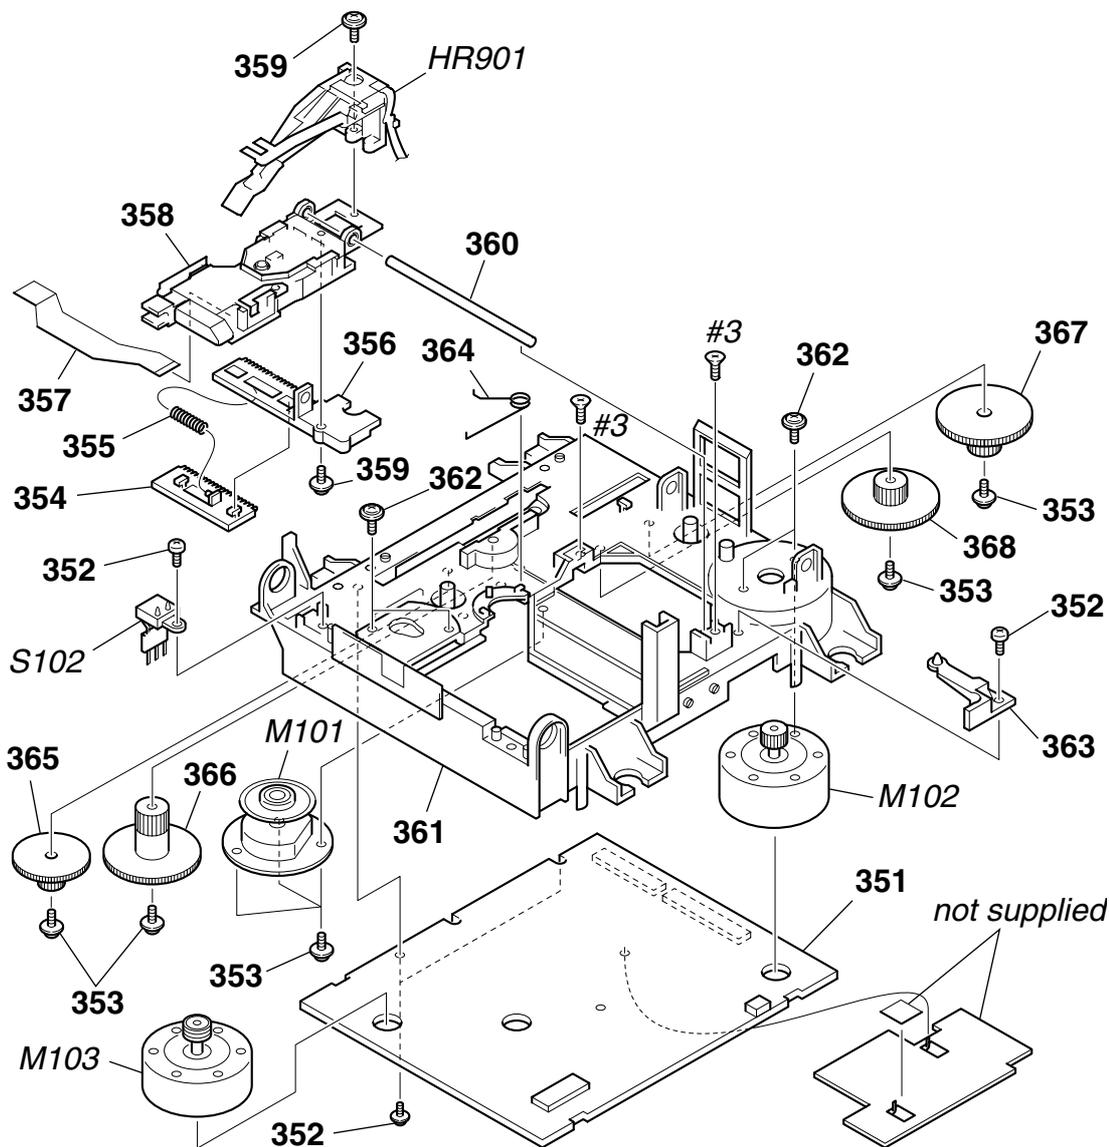

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
351	A-4725-471-A	BD BOARD, COMPLETE		362	4-232-270-01	SCREW (1.7X3.5), +PWH	
352	4-231-319-01	SCREW (2X6) CZN, +B (P) TRI		363	4-226-990-01	BASE (BU-A)	
353	3-372-761-01	SCREW (M1.7), TAPPING		364	4-227-023-01	SPRING (SPINDLE), TORSION	
354	4-226-993-01	RACK		365	4-227-004-01	GEAR (LC)	
355	4-227-014-01	SPRING (RACK), COMPRESSION		366	4-227-005-01	GEAR (LD)	
356	4-226-992-01	BASE, SL		367	4-227-009-01	GEAR (SD)	
357	1-678-514-11	FLEXIBLE BOARD		368	4-227-008-01	GEAR (SC)	
\triangle 358	A-4672-541-A	OPTICAL PICK-UP KMS-260E		HR901	1-500-670-11	HEAD, OVER LIGHT	
359	4-988-560-01	SCREW (+P 1.7X6)		M101	A-4672-898-A	MOTOR ASSY, SPINDLE	
360	4-996-265-01	SHAFT, MAIN		M102	A-4735-076-A	MOTOR ASSY, SLED	
361	4-226-989-01	CHASSIS		M103	A-4735-074-A	MOTOR ASSY, LOADING	
				S102	1-771-957-11	SWITCH, PUSH (2 KEY) (REFLECT/PROTECT SW)	

SECTION 8
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
uF: μF
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable

- COILS
uH: μH
- SEMICONDUCTORS
In each case, u: μ, for example:
uA...: μA... , uPA... , μPA... ,
uPB... , μPB... , uPC... , μPC... ,
uPD... , μPD...
• Abbreviation
SP : Singapore model

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	A-4725-471-A	BD BOARD, COMPLETE *****					
		<CAPACITOR>					
C101	1-135-259-11	TANTAL.CHIP 10uF	20% 6.3V	C160	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
C102	1-135-259-11	TANTAL.CHIP 10uF	20% 6.3V	C161	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C103	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C162	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C104	1-164-227-11	CERAMIC CHIP 0.022uF	10% 25V	C163	1-125-891-11	CERAMIC CHIP 0.47uF	10% 10V
C105	1-115-416-11	CERAMIC CHIP 0.001uF	5% 25V	C164	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
C106	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C165	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V
C107	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C166	1-125-891-11	CERAMIC CHIP 0.47uF	10% 10V
C108	1-162-969-11	CERAMIC CHIP 0.0068uF	10% 25V	C167	1-164-245-11	CERAMIC CHIP 0.015uF	10% 25V
C109	1-164-677-11	CERAMIC CHIP 0.033uF	10% 16V	C169	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C110	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C171	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C111	1-117-720-11	CERAMIC CHIP 4.7uF	10V	C172	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C112	1-110-563-11	CERAMIC CHIP 0.068uF	10% 16V	C180	1-117-370-11	CERAMIC CHIP 10uF	10V
C113	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V	C181	1-126-206-11	ELECT CHIP 100uF	20% 6.3V
C114	1-125-837-11	CERAMIC CHIP 1uF	10% 6.3V	C182	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C115	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V	C183	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C116	1-164-227-11	CERAMIC CHIP 0.022uF	10% 25V	C184	1-117-970-11	ELECT CHIP 22uF	20% 10V
C117	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C185	1-131-872-11	CERAMIC CHIP 1000PF	10% 630V
C118	1-165-176-11	CERAMIC CHIP 0.047uF	10% 16V	C191	1-126-206-11	ELECT CHIP 100uF	20% 6.3V
C119	1-165-176-11	CERAMIC CHIP 0.047uF	10% 16V	C192	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C120	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C193	1-126-206-11	ELECT CHIP 100uF	20% 6.3V
C121	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C194	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C125	1-117-720-11	CERAMIC CHIP 4.7uF	10V	C195	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C128	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C196	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C131	1-117-720-11	CERAMIC CHIP 4.7uF	10V	C1401	1-117-720-11	CERAMIC CHIP 4.7uF	10V
C132	1-164-156-11	CERAMIC CHIP 0.1uF	25V			<CONNECTOR>	
C133	1-164-156-11	CERAMIC CHIP 0.1uF	25V	CN101	1-766-833-21	CONNECTOR, FFC/FPC (ZIF) 21P	
C141	1-126-206-11	ELECT CHIP 100uF	20% 6.3V	CN102	1-784-835-21	CONNECTOR, FFC (LIF(NON-ZIF)) 27P	
C142	1-164-156-11	CERAMIC CHIP 0.1uF	25V	CN103	1-784-834-21	CONNECTOR, FFC (LIF(NON-ZIF)) 23P	
C143	1-164-156-11	CERAMIC CHIP 0.1uF	25V	* CN104	1-580-055-21	PIN, CONNECTOR (SMD) 2P	
C144	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	CN105	1-784-859-21	CONNECTOR, FFC (LIF(NON-ZIF)) 7P	
C145	1-164-156-11	CERAMIC CHIP 0.1uF	25V			<DIODE>	
C151	1-117-370-11	CERAMIC CHIP 10uF	10V	D101	8-719-988-61	DIODE 1SS355TE-17	
C152	1-164-156-11	CERAMIC CHIP 0.1uF	25V	D181	8-719-080-81	DIODE FS1J6	
C153	1-164-156-11	CERAMIC CHIP 0.1uF	25V	D183	8-719-080-81	DIODE FS1J6	
C154	1-126-206-11	ELECT CHIP 100uF	20% 6.3V			<IC>	
C155	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC101	8-752-080-95	IC CXA2523AR	
C156	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC102	8-759-473-51	IC TLV2361CDBV	
C157	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC141	8-759-836-79	IC BH6519FS-E2	
C158	1-162-927-11	CERAMIC CHIP 100PF	5% 50V	IC151	8-752-404-64	IC CXD2662R	
C159	1-162-927-11	CERAMIC CHIP 100PF	5% 50V	IC153	8-759-671-27	IC MSM51V4400E-70TS-K	
				IC171	8-759-096-87	IC TC7WU04FU(TE12R)	
				IC181	8-759-481-17	IC MC74ACT08DTR2	

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
IC190	8-759-460-72	IC BA033FP-E2		R116	1-216-839-11	METAL CHIP 33K	5% 1/16W
IC195	8-759-640-41	IC BR24C08F-E2		R117	1-216-837-11	METAL CHIP 22K	5% 1/16W
		<JUMPER RESISTOR>		R118	1-218-855-11	METAL CHIP 2.2K	0.5% 1/16W
				R119	1-218-863-11	METAL CHIP 4.7K	0.5% 1/16W
				R120	1-218-889-11	METAL CHIP 56K	0.5% 1/16W
JW201	1-216-295-91	SHORT 0		R121	1-218-863-11	METAL CHIP 4.7K	0.5% 1/16W
JW202	1-216-295-91	SHORT 0		R122	1-218-855-11	METAL CHIP 2.2K	0.5% 1/16W
JW203	1-216-295-91	SHORT 0		R123	1-216-819-11	METAL CHIP 680	5% 1/16W
JW903	1-216-295-91	SHORT 0		R124	1-216-809-11	METAL CHIP 100	5% 1/16W
JW904	1-216-295-91	SHORT 0		R125	1-216-815-11	METAL CHIP 330	5% 1/16W
		<COIL>		R126	1-216-819-11	METAL CHIP 680	5% 1/16W
L101	1-500-245-11	FERRITE 0uH		R127	1-216-845-11	METAL CHIP 100K	5% 1/16W
L102	1-500-245-11	FERRITE 0uH		R128	1-219-724-11	METAL CHIP 1	1% 1/4W
L103	1-500-245-11	FERRITE 0uH		R129	1-216-298-00	METAL CHIP 2.2	5% 1/10W
L105	1-414-235-22	FERRITE 0uH		R130	1-216-829-11	METAL CHIP 4.7K	5% 1/16W
L106	1-500-245-11	FERRITE 0uH		R131	1-216-833-11	METAL CHIP 10K	5% 1/16W
L121	1-500-245-11	FERRITE 0uH		R132	1-216-841-11	METAL CHIP 47K	5% 1/16W
L122	1-500-245-11	FERRITE 0uH		R133	1-216-821-11	METAL CHIP 1K	5% 1/16W
L131	1-500-245-11	FERRITE 0uH		R134	1-216-821-11	METAL CHIP 1K	5% 1/16W
L141	1-216-296-91	CONDUCTOR CHIP 0		R135	1-216-821-11	METAL CHIP 1K	5% 1/16W
L142	1-216-296-91	CONDUCTOR CHIP 0		R136	1-216-295-91	SHORT 0	
L143	1-216-296-91	CONDUCTOR CHIP 0		R138	1-216-833-11	METAL CHIP 10K	5% 1/16W
L144	1-216-296-91	CONDUCTOR CHIP 0		R150	1-216-833-11	METAL CHIP 10K	5% 1/16W
L145	1-216-296-91	CONDUCTOR CHIP 0		R151	1-216-833-11	METAL CHIP 10K	5% 1/16W
L146	1-469-855-21	FERRITE 0uH		R154	1-216-833-11	METAL CHIP 10K	5% 1/16W
L147	1-469-855-21	FERRITE 0uH		R155	1-216-864-11	METAL CHIP 0	5% 1/16W
L161	1-500-245-11	FERRITE 0uH		R156	1-216-864-11	METAL CHIP 0	5% 1/16W
L171	1-500-245-11	FERRITE 0uH		R157	1-216-809-11	METAL CHIP 100	5% 1/16W
L180	1-469-855-21	FERRITE 0uH		R158	1-216-809-11	METAL CHIP 100	5% 1/16W
L181	1-469-855-21	FERRITE 0uH		R159	1-216-833-11	METAL CHIP 10K	5% 1/16W
L182	1-500-245-11	FERRITE 0uH		R160	1-216-833-11	METAL CHIP 10K	5% 1/16W
L183	1-216-296-11	SHORT 0		R161	1-216-833-11	METAL CHIP 10K	5% 1/16W
L184	1-216-296-11	SHORT 0		R163	1-216-809-11	METAL CHIP 100	5% 1/16W
		<TRANSISTOR>		R164	1-216-809-11	METAL CHIP 100	5% 1/16W
Q101	8-729-403-35	TRANSISTOR UN5113-TX		R165	1-216-809-11	METAL CHIP 100	5% 1/16W
Q121	8-729-403-35	TRANSISTOR UN5113-TX		R167	1-216-833-11	METAL CHIP 10K	5% 1/16W
Q122	8-729-101-07	TRANSISTOR 2SB798-T1DK		R168	1-216-845-11	METAL CHIP 100K	5% 1/16W
Q131	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R169	1-216-855-11	METAL CHIP 680K	5% 1/16W
Q132	8-729-903-10	TRANSISTOR FMW1-T-148		R170	1-216-827-11	METAL CHIP 3.3K	5% 1/16W
Q133	8-729-402-93	TRANSISTOR UN5214-TX		R171	1-216-821-11	METAL CHIP 1K	5% 1/16W
Q134	8-729-402-93	TRANSISTOR UN5214-TX		R173	1-216-821-11	METAL CHIP 1K	5% 1/16W
Q181	8-729-018-75	TRANSISTOR 2SJ278MYTR		R174	1-216-811-11	METAL CHIP 150	5% 1/16W
Q182	8-729-017-65	TRANSISTOR 2SK1764KYTR		R175	1-216-857-11	METAL CHIP 1M	5% 1/16W
		<RESISTOR>		R176	1-216-809-11	METAL CHIP 100	5% 1/16W
R101	1-216-829-11	METAL CHIP 4.7K 5%	1/16W	R179	1-216-295-91	SHORT 0	
R102	1-216-853-11	METAL CHIP 470K 5%	1/16W	R181	1-216-841-11	METAL CHIP 47K	5% 1/16W
R103	1-216-863-11	RES-CHIP 3.3M 5%	1/16W	R182	1-216-841-11	METAL CHIP 47K	5% 1/16W
R104	1-216-853-11	METAL CHIP 470K 5%	1/16W	R183	1-216-841-11	METAL CHIP 47K	5% 1/16W
R105	1-216-825-11	METAL CHIP 2.2K 5%	1/16W	R184	1-220-942-11	METAL CHIP 3.3	1% 1/4W
R106	1-216-825-11	METAL CHIP 2.2K 5%	1/16W	R185	1-220-942-11	METAL CHIP 3.3	1% 1/4W
R107	1-216-825-11	METAL CHIP 2.2K 5%	1/16W	R195	1-216-833-11	METAL CHIP 10K	5% 1/16W
R108	1-216-833-11	METAL CHIP 10K 5%	1/16W	R196	1-216-833-11	METAL CHIP 10K	5% 1/16W
R109	1-216-845-11	METAL CHIP 100K 5%	1/16W	R197	1-216-833-11	METAL CHIP 10K	5% 1/16W
R110	1-216-845-11	METAL CHIP 100K 5%	1/16W	R218	1-216-864-11	METAL CHIP 0	5% 1/16W
R111	1-216-833-11	METAL CHIP 10K 5%	1/16W			<SWITCH>	
R112	1-216-829-11	METAL CHIP 4.7K 5%	1/16W	S101	1-762-596-21	SWITCH, PUSH (1 KEY) (LIMIT IN SW)	
R113	1-216-833-11	METAL CHIP 10K 5%	1/16W	S103	1-771-956-21	SWITCH, PUSH (1 KEY) (OUT SW)	
R114	1-216-827-11	METAL CHIP 3.3K 5%	1/16W	S104	1-771-955-21	SWITCH, PUSH (1 KEY) (PLAY SW)	
R115	1-216-833-11	METAL CHIP 10K 5%	1/16W	S105	1-771-955-21	SWITCH, PUSH (1 KEY) (REC SW)	

MDS-JE770

DISPLAY **HP** **KB** **KEY-SW**

Ref. No.	Part No.	Description	Remarks
	A-2007-926-A	DISPLAY BOARD, COMPLETE (AEP,UK)	
	A-2007-932-A	DISPLAY BOARD, COMPLETE (SP)	

*	4-955-901-01	CUSHION (FL)	
*	4-996-686-01	HOLDER (FL)	
	<CAPACITOR>		
C700	1-126-153-11	ELECT 22uF 20%	6.3V
C720	1-164-159-11	CERAMIC 0.1uF	50V
C751	1-124-261-00	ELECT 10uF 20%	50V
C753	1-124-261-00	ELECT 10uF 20%	50V
C760	1-126-153-11	ELECT 22uF 20%	6.3V
C761	1-162-294-31	CERAMIC 0.001uF 10%	50V
C762	1-162-294-31	CERAMIC 0.001uF 10%	50V
C766	1-162-213-31	CERAMIC 39PF 5%	50V
C767	1-164-159-11	CERAMIC 0.1uF	50V
C768	1-162-294-31	CERAMIC 0.001uF 10%	50V
C769	1-162-294-31	CERAMIC 0.001uF 10%	50V
C770	1-162-294-31	CERAMIC 0.001uF 10%	50V
C771	1-164-159-11	CERAMIC 0.1uF	50V
	<CONNECTOR>		
CN700	1-779-554-21	CONNECTOR, FFC (LIF(NON-ZIF))17P	
CN710	1-568-669-11	CONNECTOR, BOARD TO BOARD 8P	
	<DIODE>		
D775	8-719-046-39	LED SEL5821A-TP15 (MD LP)	
	<FLUORESCENT INDICATOR TUBE>		
FL750	1-517-987-11	INDICATOR TUBE, FLUORESCENT	
	<IC>		
IC760	8-759-680-17	IC MSM9201-04GS-K	
	<TRANSISTOR>		
Q761	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
Q762	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
Q775	8-729-900-80	TRANSISTOR UN4211-TA	
	<RESISTOR>		
R702	1-249-421-11	CARBON 2.2K 5%	1/4W F
R703	1-247-843-11	CARBON 3.3K 5%	1/4W
R704	1-249-425-11	CARBON 4.7K 5%	1/4W F
R705	1-249-429-11	CARBON 10K 5%	1/4W
R706	1-249-435-11	CARBON 33K 5%	1/4W
R712	1-249-421-11	CARBON 2.2K 5%	1/4W F
R713	1-247-843-11	CARBON 3.3K 5%	1/4W
R714	1-249-425-11	CARBON 4.7K 5%	1/4W F
R715	1-249-429-11	CARBON 10K 5%	1/4W
R716	1-249-435-11	CARBON 33K 5%	1/4W
R761	1-247-807-31	CARBON 100 5%	1/4W
R762	1-247-807-31	CARBON 100 5%	1/4W
R763	1-249-441-11	CARBON 100K 5%	1/4W
R764	1-249-441-11	CARBON 100K 5%	1/4W
R766	1-247-843-11	CARBON 3.3K 5%	1/4W
R767	1-247-807-31	CARBON 100 5%	1/4W
R768	1-247-807-31	CARBON 100 5%	1/4W
R769	1-247-807-31	CARBON 100 5%	1/4W
R770	1-247-807-31	CARBON 100 5%	1/4W

Ref. No.	Part No.	Description	Remarks
R775	1-249-409-11	CARBON 220 5%	1/4W F
	<SWITCH>		
S701	1-762-875-21	SWITCH, KEYBOARD (REC ●)	
S702	1-762-875-21	SWITCH, KEYBOARD (■)	
S703	1-762-875-21	SWITCH, KEYBOARD (▶▶)	
S704	1-762-875-21	SWITCH, KEYBOARD (◀◀)	
S705	1-762-875-21	SWITCH, KEYBOARD (▬▬)	
S706	1-762-875-21	SWITCH, KEYBOARD (▷)	
S711	1-762-875-21	SWITCH, KEYBOARD (MENU/NO)	
S712	1-762-875-21	SWITCH, KEYBOARD (YES)	
S713	1-475-235-21	ENCODER, ROTARY (◀◀ AMS ▶▶ /PUSH ENTER)	
S714	1-762-875-21	SWITCH, KEYBOARD (CLEAR)	
S715	1-762-875-21	SWITCH, KEYBOARD (INPUT)	
S716	1-762-875-21	SWITCH, KEYBOARD (REC MODE)	
S721	1-762-875-21	SWITCH, KEYBOARD (EJECT ≡)	

	1-681-743-11	HP BOARD	

	<CAPACITOR>		
C791	1-162-290-31	CERAMIC 470PF 10%	50V
C796	1-162-290-31	CERAMIC 470PF 10%	50V
	<JACK>		
J790	1-770-307-11	JACK (LARGE TYPE) (PHONES)	
	<COIL>		
L1790	1-412-473-21	INDUCTOR 0uH	
	<RESISTOR>		
R791	1-249-393-11	CARBON 10 5%	1/4W F
R796	1-249-393-11	CARBON 10 5%	1/4W F
	<VARIABLE RESISTOR>		
RV790	1-225-590-11	RES, VAR, CARBON 1K/1K (PHONE LEVEL)	

	1-681-744-11	KB BOARD	

	<JACK>		
J780	1-785-945-21	CONNECTOR, DIN (PC LINK (KEY BOARD))	
	<RESISTOR>		
R782	1-247-807-31	CARBON 100 5%	1/4W
R786	1-247-807-31	CARBON 100 5%	1/4W
R1781	1-249-409-11	CARBON 220 5%	1/4W F
R1785	1-249-409-11	CARBON 220 5%	1/4W F

	1-681-742-11	KEY-SW BOARD	

	<CAPACITOR>		
C730	1-164-159-11	CERAMIC 0.1uF	50V
C740	1-164-159-11	CERAMIC 0.1uF	50V
C742	1-124-584-00	ELECT 100uF 20%	10V
C743	1-162-306-11	CERAMIC 0.01uF 20%	16V

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		<CONNECTOR>		C172	1-130-471-00	MYLAR	0.001uF 5% 50V
CN720	1-766-739-11	CONNECTOR, BOARD TO BOARD 8P		C176	1-126-049-11	ELECT	22uF 20% 25V
		<DIODE>		C177	1-136-356-11	MYLAR	470PF 5% 50V
D726	8-719-046-44	LED SEL5221S-TP15 (STANDBY)		C211	1-136-356-11	MYLAR	470PF 5% 50V
D733	8-719-046-39	LED SEL5821A-TP15 (GROUP)		C212	1-126-049-11	ELECT	22uF 20% 25V
		<IC>		C213	1-126-049-11	ELECT	22uF 20% 25V
IC740	8-759-826-34	IC NJL74H400A		C261	1-137-505-11	MYLAR	220PF 5% 50V
		<TRANSISTOR>		C265	1-137-503-11	MYLAR	0.0001uF 5% 50V
Q726	8-729-900-80	TRANSISTOR UN4211-TA		C266	1-137-503-11	MYLAR	0.0001uF 5% 50V
Q733	8-729-900-80	TRANSISTOR UN4211-TA		C271	1-137-368-11	MYLAR	0.0047uF 5% 50V
		<RESISTOR>		C272	1-130-471-00	MYLAR	0.001uF 5% 50V
R722	1-249-421-11	CARBON 2.2K 5% 1/4W F		C276	1-126-049-11	ELECT	22uF 20% 25V
R723	1-247-843-11	CARBON 3.3K 5% 1/4W		C277	1-136-356-11	MYLAR	470PF 5% 50V
R724	1-249-425-11	CARBON 4.7K 5% 1/4W F		C311	1-126-023-11	ELECT	100uF 20% 16V
R725	1-249-437-11	CARBON 47K 5% 1/4W		C316	1-126-023-11	ELECT	100uF 20% 16V
R732	1-249-421-11	CARBON 2.2K 5% 1/4W F		C361	1-126-023-11	ELECT	100uF 20% 16V
R733	1-247-843-11	CARBON 3.3K 5% 1/4W		C366	1-126-023-11	ELECT	100uF 20% 16V
R741	1-247-807-31	CARBON 100 5% 1/4W		C391	1-126-933-11	ELECT	100uF 20% 16V
R742	1-249-401-11	CARBON 47 5% 1/4W F		C396	1-126-933-11	ELECT	100uF 20% 16V
R747	1-249-429-11	CARBON 10K 5% 1/4W		C401	1-126-939-11	ELECT	10000uF 20% 16V
R1726	1-249-409-11	CARBON 220 5% 1/4W F		C402	1-164-159-11	CERAMIC	0.1uF 50V
R1733	1-249-409-11	CARBON 220 5% 1/4W F		C404	1-126-933-11	ELECT	100uF 20% 16V
		<SWITCH>		C405	1-162-306-11	CERAMIC	0.01uF 30% 16V
S722	1-762-875-21	SWITCH, KEYBOARD (PLAY MODE)		C406	1-124-252-00	ELECT	0.33uF 20% 50V
S723	1-762-875-21	SWITCH, KEYBOARD (REPEAT)		C411	1-126-939-11	ELECT	10000uF 20% 16V
S724	1-762-875-21	SWITCH, KEYBOARD (LEVEL/DISPLAY/CHAR)		C412	1-164-159-11	CERAMIC	0.1uF 50V
S726	1-762-875-21	SWITCH, KEYBOARD (I / O)		C416	1-126-916-11	ELECT	1000uF 20% 6.3V
S731	1-762-875-21	SWITCH, KEYBOARD (TIME)		C421	1-164-159-11	CERAMIC	0.1uF 50V
S732	1-762-875-21	SWITCH, KEYBOARD (GROUP SKIP)		C422	1-164-159-11	CERAMIC	0.1uF 50V
S733	1-762-875-21	SWITCH, KEYBOARD (GROUP)		C423	1-128-576-11	ELECT	100uF 20% 63V
S746	1-786-174-11	SWITCH, SLIDE (TIMER REC/OFF/PLAY)		C424	1-164-159-11	CERAMIC	0.1uF 50V
*****				C425	1-126-967-11	ELECT	47uF 20% 50V
A-2007-925-A		MAIN BOARD, COMPLETE (AEP,UK)		C426	1-126-965-11	ELECT	22uF 20% 50V
A-2007-931-A		MAIN BOARD, COMPLETE (SP)		C431	1-104-663-11	ELECT	33uF 20% 25V
*****				C432	1-128-551-11	ELECT	22uF 20% 25V
7-685-646-79		SCREW +BVTP 3X8 TYPE2 TT(B)		C441	1-126-933-11	ELECT	100uF 20% 16V
		<CAPACITOR>		C442	1-162-306-11	CERAMIC	0.01uF 30% 16V
C12	1-164-159-11	CERAMIC 0.1uF 50V		C461	1-126-040-11	ELECT	1000uF 20% 35V
C16	1-164-159-11	CERAMIC 0.1uF 50V		C466	1-126-040-11	ELECT	1000uF 20% 35V
C19	1-162-294-31	CERAMIC 0.001uF 10% 50V		C490	1-126-916-11	ELECT	1000uF 20% 6.3V
C58	1-162-282-31	CERAMIC 100PF 10% 50V		C491	1-164-159-11	CERAMIC	0.1uF 50V
C62	1-164-159-11	CERAMIC 0.1uF 50V		C492	1-164-159-11	CERAMIC	0.1uF 50V
C87	1-162-306-11	CERAMIC 0.01uF 30% 16V		C500	1-126-934-11	ELECT	220uF 20% 10V
C88	1-162-306-11	CERAMIC 0.01uF 30% 16V		C501	1-164-159-11	CERAMIC	0.1uF 50V
C89	1-162-294-31	CERAMIC 0.001uF 10% 50V		C502	1-137-366-11	MYLAR	0.0022uF 5% 50V
C100	1-126-964-11	ELECT 10uF 20% 50V		C503	1-137-366-11	MYLAR	0.0022uF 5% 50V
C111	1-136-356-11	MYLAR 470PF 5% 50V		C504	1-124-994-11	ELECT	100uF 20% 10V
C112	1-126-049-11	ELECT 22uF 20% 25V		C505	1-164-159-11	CERAMIC	0.1uF 50V
C113	1-126-049-11	ELECT 22uF 20% 25V		C515	1-162-282-31	CERAMIC	100PF 10% 50V
C161	1-137-505-11	MYLAR 220PF 5% 50V		C516	1-162-282-31	CERAMIC	100PF 10% 50V
C165	1-137-503-11	MYLAR 0.0001uF 5% 50V		C517	1-162-282-31	CERAMIC	100PF 10% 50V
C166	1-137-503-11	MYLAR 0.0001uF 5% 50V		C519	1-162-294-31	CERAMIC	0.001uF 10% 50V
C171	1-137-368-11	MYLAR 0.0047uF 5% 50V		C520	1-126-934-11	ELECT	220uF 20% 10V
				C522	1-164-159-11	CERAMIC	0.1uF 50V
				C523	1-104-665-11	ELECT	100uF 20% 10V
				C524	1-164-159-11	CERAMIC	0.1uF 50V
				C530	1-164-159-11	CERAMIC	0.1uF 50V
				C531	1-164-159-11	CERAMIC	0.1uF 50V
				C532	1-164-159-11	CERAMIC	0.1uF 50V
				C536	1-164-159-11	CERAMIC	0.1uF 50V

MDS-JE770

MAIN

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks	
C550	1-164-159-11	CERAMIC	0.1uF	50V	D421	8-719-024-99	DIODE 11ES2-NTA2B	
C551	1-104-665-11	ELECT	100uF	20%	10V	D422	8-719-109-81	DIODE RD4.7ES-T2B2
C552	1-164-159-11	CERAMIC	0.1uF	50V	D431	8-719-911-19	DIODE 1SS133T-72	
C553	1-162-195-31	CERAMIC	4.7PF	10%	50V	D432	8-719-911-19	DIODE 1SS133T-72
					D433	8-719-911-19	DIODE 1SS133T-72	
C554	1-162-294-31	CERAMIC	0.001uF	10%	50V	D461	8-719-024-99	DIODE 11ES2-NTA2B
C555	1-162-203-31	CERAMIC	15PF	5%	50V	D462	8-719-024-99	DIODE 11ES2-NTA2B
C556	1-162-215-31	CERAMIC	47PF	5%	50V	D466	8-719-024-99	DIODE 11ES2-NTA2B
C557	1-162-199-31	CERAMIC	10PF	5%	50V	D467	8-719-024-99	DIODE 11ES2-NTA2B
C601	1-162-306-11	CERAMIC	0.01uF	30%	16V	D851	8-719-911-19	DIODE 1SS133T-72
C611	1-164-159-11	CERAMIC	0.1uF	50V				
C612	1-126-963-11	ELECT	4.7uF	20%	50V		<GROUND TERMINAL>	
C613	1-162-306-11	CERAMIC	0.01uF	30%	16V			
C621	1-164-159-11	CERAMIC	0.1uF	50V (SP)				
C622	1-126-963-11	ELECT	4.7uF	20%	50V (SP)	EP559	1-537-771-21	TERMINAL BOARD, GROUND
						EP940	1-537-771-21	TERMINAL BOARD, GROUND
C623	1-162-306-11	CERAMIC	0.01uF	30%	16V (SP)		<FERRITE BEAD>	
C631	1-164-159-11	CERAMIC	0.1uF	50V				
							(AEP,UK)	
C641	1-164-159-11	CERAMIC	0.1uF	50V		FB460	1-414-093-11	FERRITE OUH
C642	1-126-963-11	ELECT	4.7uF	20%	50V	FB465	1-414-093-11	FERRITE OUH
C651	1-164-159-11	CERAMIC	0.1uF	50V			<IC>	
C652	1-164-159-11	CERAMIC	0.1uF	50V		IC1	6-800-019-01	IC M30803MG-106FP
C657	1-164-159-11	CERAMIC	0.1uF	50V		IC310	8-759-712-02	IC NJM2114D
C658	1-164-159-11	CERAMIC	0.1uF	50V		IC360	8-759-712-02	IC NJM2114D
C851	1-164-159-11	CERAMIC	0.1uF	50V		IC370	8-759-712-02	IC NJM2114D
C852	1-164-159-11	CERAMIC	0.1uF	50V		IC390	8-759-634-51	IC NJM4558D
C853	1-164-159-11	CERAMIC	0.1uF	50V		IC401	8-759-445-59	IC BA033T
C854	1-164-159-11	CERAMIC	0.1uF	50V		IC406	8-759-481-02	IC M62016L
C855	1-164-159-11	CERAMIC	0.1uF	50V		IC411	8-759-231-53	IC M5F7805L
C930	1-164-159-11	CERAMIC	0.1uF	50V		IC421	8-759-633-42	IC M5293L
C931	1-164-159-11	CERAMIC	0.1uF	50V		IC440	8-759-633-65	IC M54641L
C932	1-164-159-11	CERAMIC	0.1uF	50V		IC500	8-759-579-68	IC AK4524
C940	1-164-159-11	CERAMIC	0.1uF	50V		IC550	8-759-917-18	IC SN74HCU04AN
C941	1-164-159-11	CERAMIC	0.1uF	50V		IC600	8-759-917-18	IC SN74HCU04AN
C942	1-164-159-11	CERAMIC	0.1uF	50V		IC611	8-749-012-70	IC GP1F38R (DIGITAL IN1)
						IC621	8-749-012-70	IC GP1F38R (DIGITAL IN2) (SP)
						IC641	8-749-012-69	IC GP1F38T (DIGITAL OUT)
								<JACK>
CN1	1-784-417-11	CONNECTOR, FFC (LIF(NON-ZIF)23P				J300	1-784-430-11	JACK, PIN 4P (ANALOG IN/OUT)
CN2	1-779-295-11	CONNECTOR, FFC (LIF(NON-ZIF))27P				J631	1-784-432-11	JACK, PIN 1P (COAXIAL IN) (AEP,UK)
CN3	1-815-620-11	CONNECTOR, FFC 17P				J851	1-779-655-21	JACK (SMALL TYPE) (2 GANG) (CONTROL AIII)
CN390	1-506-468-11	PIN, CONNECTOR 3P						<COIL>
CN400	1-691-772-11	PLUG (MICRO CONNECTOR) 10P				L555	1-414-142-11	INDUCTOR 1uH
CN406	1-568-683-11	PIN, CONNECTOR (PC BAORD) 2P				L611	1-410-509-11	INDUCTOR 10uH
CN830	1-568-955-11	PIN, CONNECTOR 6P				L641	1-410-509-11	INDUCTOR 10uH
						L653	1-412-473-21	INDUCTOR 0uH
						L657	1-412-473-21	INDUCTOR 0uH
								<TRANSISTOR>
D111	8-719-911-19	DIODE 1SS133T-72				Q21	8-729-900-80	TRANSISTOR UN4211-TA
D112	8-719-911-19	DIODE 1SS133T-72				Q22	8-729-900-80	TRANSISTOR UN4211-TA
D211	8-719-911-19	DIODE 1SS133T-72				Q34	8-729-900-80	TRANSISTOR UN4211-TA
D212	8-719-911-19	DIODE 1SS133T-72				Q181	8-729-044-08	TRANSISTOR 2SD1915(F)-T(TA).SO
D381	8-719-911-19	DIODE 1SS133T-72				Q190	8-729-044-08	TRANSISTOR 2SD1915(F)-T(TA).SO
D382	8-719-911-19	DIODE 1SS133T-72				Q281	8-729-044-08	TRANSISTOR 2SD1915(F)-T(TA).SO
D401	8-719-210-21	DIODE 11EQS04-NTA2B				Q290	8-729-044-08	TRANSISTOR 2SD1915(F)-T(TA).SO
D402	8-719-210-21	DIODE 11EQS04-NTA2B				Q380	8-729-422-57	TRANSISTOR UN4111-TA
D403	8-719-210-21	DIODE 11EQS04-NTA2B				Q440	8-729-900-80	TRANSISTOR UN4211-TA
D404	8-719-210-21	DIODE 11EQS04-NTA2B				Q445	8-729-119-76	TRANSISTOR 2SA1115TP-EF
D406	8-719-911-19	DIODE 1SS133T-72						
D408	8-719-210-21	DIODE 11EQS04-NTA2B						
D409	8-719-210-21	DIODE 11EQS04-NTA2B						
D411	8-719-024-99	DIODE 11ES2-NTA2B						
D412	8-719-024-99	DIODE 11ES2-NTA2B						

MDS-JE770

MAIN **PT** **VOL-SEL**

Ref. No.	Part No.	Description	Remarks
R912	1-249-437-11	CARBON 47K 5%	1/4W
R1090	1-249-429-11	CARBON 10K 5%	1/4W (SP)
<VIBRATOR>			
X15	1-795-004-21	VIBRATOR, CERAMIC (10MHz)	
X550	1-781-998-11	VIBRATOR, CRYSTAL (45.1584MHz)	

	1-681-739-11	PT BOARD *****	
<CAPACITOR>			
△ C910	1-113-920-11	CERAMIC 0.0022uF 20%	250V
C923	1-164-159-11	CERAMIC 0.1uF	50V
C924	1-164-159-11	CERAMIC 0.1uF	50V
C951	1-164-159-11	CERAMIC 0.1uF	50V
C952	1-164-159-11	CERAMIC 0.1uF	50V
<CONNECTOR>			
* CN900	1-580-230-11	PIN, CONNECTOR (PC BOARD) 2P (AC IN)	
<DIODE>			
D910	8-719-911-19	DIODE 1SS133T-72	
<LINE FILTER>			
△ LF900	1-419-625-11	COIL, LINE FILTER	
<RELAY>			
△ RY910	1-755-356-11	RELAY	
<TRANSFORMER>			
△ TR900	1-437-339-11	TRANSFORMER, POWER (AEP,UK)	
△ TR900	1-437-340-11	TRANSFORMER, POWER (SP)	
△ TR950	1-437-337-11	TRANSFORMER, POWER (SP)	
△ TR950	1-437-336-11	TRANSFORMER, POWER (AEP,UK)	

	1-681-745-11	VOL-SEL BOARD (SP) *****	
<CONNECTOR>			
* CN990	1-573-565-11	PIN, CONNECTOR 5P (SP)	
<SWITCH>			
△ S990	1-771-474-11	SWITCH, POWER (VOLTAGE SELECTOR) (SP)	

Ref. No.	Part No.	Description	Remarks
		MISCELLANEOUS *****	
9	1-792-811-11	WIRE (FLAT TYPE) (23 CORE)	
10	1-757-928-11	WIRE (FLAT TYPE) (27 CORE)	
△ 12	1-777-071-41	CORD, POWER	
* 14	1-569-972-21	SOCKET, SHORT 2P	
△ 17	1-569-008-21	ADAPTOR, CONVERSION (SP)	
△ 17	1-770-019-11	ADAPTOR, CONVERSION PLUG 3P (UK)	
63	1-757-930-11	WIRE (FLAT TYPE) (17 CORE)	
357	1-678-514-11	FLEXIBLE BOARD	
△ 358	A-4672-541-A	OPTICAL PICK-UP KMS-260E	
FL750	1-517-987-11	INDICATOR TUBE, FLUORESCENT	
M101	A-4672-898-A	MOTOR ASSY, SPINDLE	
M102	A-4735-076-A	MOTOR ASSY, SLED	
M103	A-4735-074-A	MOTOR ASSY, LOADING	
S102	1-771-957-11	SWITCH, PUSH (2 KEY) (REFLECT/PROTECT SW)	
△ TR900	1-437-339-11	TRANSFORMER, POWER (AEP,UK)	
△ TR900	1-437-340-11	TRANSFORMER, POWER (SP)	

ACCESSORIES & PACKING MATERIALS *****			
	1-476-723-11	REMOTE COMMANDER (RM-D10J)	
	1-574-264-11	CORD, LIGHT PLUG (OPTICAL)	
	1-791-732-11	CORD, CONNECTION (AUDIO)	
	4-233-926-11	MANUAL, INSTRUCTION (ENGLISH)	
	4-233-926-21	MANUAL, INSTRUCTION (FRENCH) (AEP,SP)	
	4-233-926-31	MANUAL, INSTRUCTION (SPANISH) (AEP)	
	4-233-926-41	MANUAL, INSTRUCTION (GERMAN,DUTCH,SWEDISH) (AEP)	
	4-233-926-51	MANUAL, INSTRUCTION (ITALIAN,POLISH) (AEP)	
	4-233-926-61	MANUAL, INSTRUCTION (TRADITIONAL CHINESE) (SP)	
	4-228-696-01	COVER, BATTERY (FOR RM-D10J)	

***** HARDWARE LIST *****			
#1	7-685-646-79	SCREW +BVPT 3X8 TYPE2 N-S	
#2	7-685-850-04	SCREW +BVTT 2X3 (S)	
#3	7-685-204-19	SCREW +KTP 2X6 TYPE2 NON-SLIT	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

MEMO

