

Single Rail 6-Phase PWM Controller with PMBus

General Description

The RTQ8826 is a 6/5/4/3/2/1 phase synchronous buck controller. The RTQ8826 adopts G-NAVP™ (Green Native AVP), which is Richtek's proprietary topology derived from finite DC gain of EA amplifier with current mode control, making it easy to set the droop to support all CPU/Microprocessor requirements of AVP (Adaptive Voltage Positioning). Based on the G-NAVP™ topology, the RTQ8826 features a new generation of quick response mechanism (Adaptive Quick Response, AQR) to optimize AVP performance during load transient and reduce output capacitors. The RTQ8826 supports VID on-the-fly function with four different slew rates via PMBus command setting. The DAC converts the VOUT_COMMAND code ranging from 0.25V to 1.516V with 1.953mV per step. The RTQ8826 integrates a high accuracy ADC for platform and function settings, such as SPS type, PMBus address, boot voltage and load-line. The RTQ8826 provides reset Vout function, Vout to be set to the VBOOT value while the RESET# pin is asserted low. The RTQ8826 provides VR_Ready and thermal indicators. It also features complete fault protection functions including over-voltage (OV), under-voltage (UV), slow over-current (SLOW_OC), fast over-current (Fast_OC), over-temperature (OT) and under-voltage lockout (UVLO). The RTQ8826 supports several functions which can be set by I2C/PMBus interface.


Applications

- Networking system
- Telecom, Datacom and Server system
- Point-of-load power supply (DSP, ASIC, FPGA)

Features

- **6/5/4/3/2/1 Phase PWM Controller**
- **G-NAVP™ (Green Native Adaptive Voltage Positioning) Topology**
- **Output Voltage Ranges from 0.25V to 1.516V**
- **Embedded LDO for Dr.MOS 3.3V PWM Level**
- **Pin Programmable 27 VBOOT Voltages**
- **Current Sensing by Either Current Type or Voltage Type SPS**
- **Digital Current Balancing with Programmable Gain for Thermal Balancing**
- **Differential Output Voltage Sense for High Output Accuracy**
- **Supports Start-Up Into Pre-Bias Voltage**
- **Pin Selection for Enabling Load-Line Function**
- **Supports Returning to VBOOT from Existing Voltage or from 0V**
- **PMBus v1.3 Compliant Serial Interface**
 - ▶ Pin Selectable 16 Addresses
 - ▶ 1.8V and 3.3V Logic Level Compliant
 - ▶ SMBALERT#
 - ▶ Internal Non-Volatile Memory (NVM) to Store Custom Configurations
 - ▶ Programmable Power Up/Down Timing
 - ▶ Monitoring for VOUT, IOUT and Temperature
 - ▶ Selectable Latch or Autonomous Recovery After Shutdown Due to Fault
 - ▶ Extensive Fault Detection and Protection Capability
 - ▶ VIN & VCC Input Pins UVLO
 - ▶ Averaged Output SLOW/FAST_OC Protection
 - ▶ Output OV & UV Protection
 - ▶ Output Temperature Warning & Protection
 - ▶ Indicator for VR_Ready & VR_Hot#
- **Small 48-Lead WQFN Package**

Simplified Application Circuit

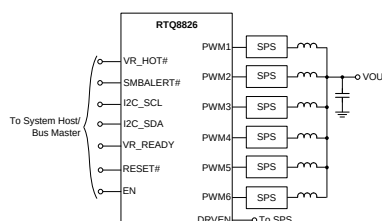

Ordering Information


RTQ8826 
Package Type
QW : WQFN-48L 7x7 (W-Type)
(Exposed Pad-Option 1)
Lead Plating System
G : Richtek Green Policy Compliant

Note:
Richtek products are Richtek Green Policy compliant and compatible with the current requirements of IPC/JEDEC J-STD-020.

Marking Information

RTQ8826 GQW YMDNN 	RTQ8826GQW : Product Number YMDNN : Date Code
--	--

Pin Configuration

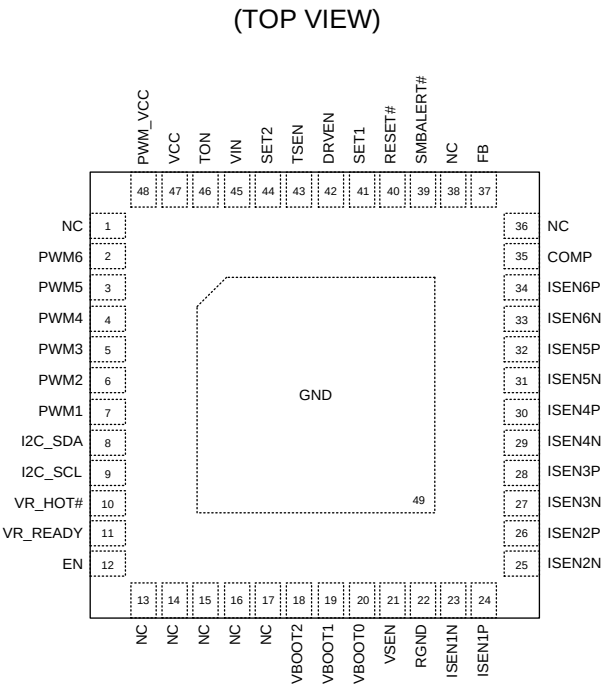


Functional Pin Description

Pin No.	Pin Name	Pin Function
1, 13, 14, 15, 16, 17, 36, 38	NC	No internal connection.
2	PWM6	Phase #6 PWM output. This signal is used to drive the PWM input of the FET driver IC. Unused PWM pins should be left unconnected. The tri-state window = 1.1V to 2V.
3	PWM5	Phase #5 PWM output. Refer to PWM6 description.
4	PWM4	Phase #4 PWM output. Refer to PWM6 description.
5	PWM3	Phase #3 PWM output. Refer to PWM6 description.
6	PWM2	Phase #2 PWM output. Refer to PWM6 description.
7	PWM1	Phase #1 PWM output. Refer to PWM6 description.
8	I2C_SDA	PMBus/I2C data signal.
9	I2C_SCL	PMBus/I2C clock signal.
10	VR_HOT#	Thermal warning flag. This open-drain output will be pulled low in the event of a sensed over-temperature warning without disabling the regulators.
11	VR_READY	Voltage regulator “Ready” output signal for rail A. The VR_READY indicator will be asserted when the controller reaches the VBoot voltage. This open-drain output requires an external pull-up resistor. The VR_READY will be pulled low when a shutdown fault occurs.
12	EN	Active high output enable input. Faults will be cleared when EN is reasserted.
18	VBOOT2	Sets boot voltage with VBOOT pins via resistor tied to ground. There are 27 VBOOT voltages ranging from 0.602V to 1.211V.
19	VBOOT1	Refer to VBOOT1 description.
20	VBOOT0	Refer to VBOOT0 description.
21	VSEN	Positive differential voltage sense input. Connect to positive remote sensing point.
22	RGND	Negative differential voltage sense input. Connect to negative remote sensing point.
23	ISEN1N	Phase #1 current sense inputs. The ISEN1N and ISEN1P pins are used to differentially sense the corresponding channel current.
24	ISEN1P	
25	ISEN2N	Phase #2 current sense inputs. Refer to ISEN1P/N description.
26	ISEN2P	
27	ISEN3N	Phase #3 current sense inputs. Refer to ISEN1P/N description.
28	ISEN3P	
29	ISEN4N	Phase #4 current sense inputs. Refer to ISEN1P/N description.
30	ISEN4P	
31	ISEN5N	Phase #5 current sense inputs. Refer to ISEN1P/N description.
32	ISEN5P	

Pin No.	Pin Name	Pin Function
33	ISEN6N	Phase #6 current sense inputs. Refer to ISEN1P/N description.
34	ISEN6P	
35	COMP	Error amplifier output.
37	FB	Error amplifier voltage feedback.
39	SMBALERT#	SMB_ALERT# output. Active low.
40	RESET#	Return to VBoot input pin. When asserted (active low), VOUT to be set to the VBoot value.
41	SET1	Sets PMBus address, SPS type and enabling load-line function with SET2 pin via resistor tied to ground.
42	DRVEN	External driver mode control. Must connect this pin directly to EN pin of smart power stage (SPS).
43	TSEN	Input pin for external temperature measurement.
44	SET2	Refer to SET1 description.
45	VIN	VIN (+12V) voltage divider input. The VIN pin must be connected to +12V supply through a resistor divider and is used to guarantee a valid input voltage before starting up (input under-voltage lockout).
46	TON	Input voltage sense pin. Connect a low pass filter of which time constant is at the switching frequency to this pin for setting on-time.
47	VCC	5V power supply input to controller. This pin should be connected to the system +5V supply and decoupled using high quality 1 μ F ceramic capacitors.
48	PWM_VCC	Internally generated 3.3V. This pin is provided for attaching external decoupling capacitors only. Use decoupling ceramic capacitors with high quality 0.1 μ F/X7R + 4.7 μ F/X7R, and the minimum effective capacitance should be more than 1 μ F. It is suggested to place the capacitors as close to PWM_VCC pin as possible. This pin has limited source and sink capability and should not be used to drive external components.
49 (Exposed Pad)	GND	Ground. The exposed pad must be soldered to a large PCB and connected to GND with enough via numbers for maximum power dissipation.

Functional Block Diagram

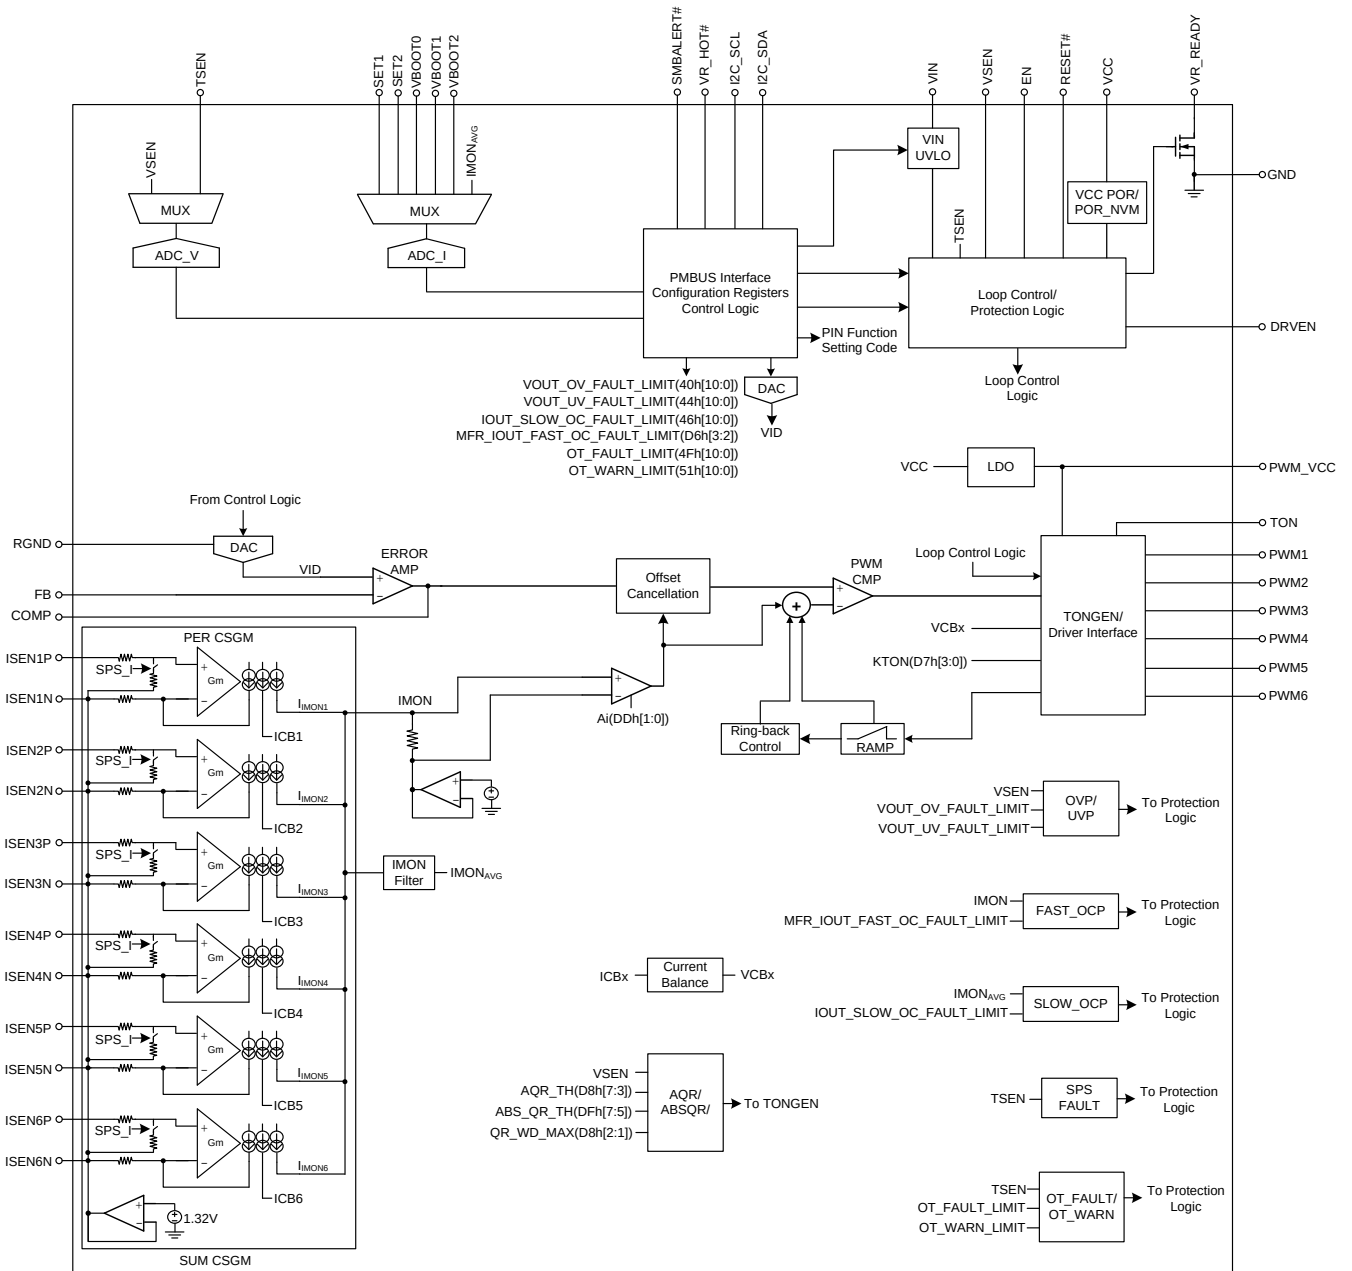

Operation

G-NAVP™ Control Mode

The RTQ8826 adopts G-NAVP™ (Green Native AVP), which is Richtek's proprietary topology. It is derived from current mode constant on-time control with finite DC gain of error amplifier and DC offset cancellation. The topology can achieve easy load-line design and provide high DC accuracy and fast transient response. When sensed current signal reaches sensed voltage signal, RTQ8826 generates a PWM pulse to achieve loop modulation. The left part in Figure 1 shows the basic G-

NAVP™ behavior waveforms. The COMP signal is the sensed voltage, that is inverted and amplified signal of output voltage. While current loading is increasing, referring to the right part in Figure 1, COMP rises due to output voltage droop. Then rising COMP forces PWM to turn on earlier and closer. While inductor current reaches loading current, COMP enters another steady state of higher voltage, and the corresponding output voltage is in the steady state of lower voltage. The load-line, output voltage drooping by an amount proportional to loading current, is achieved.

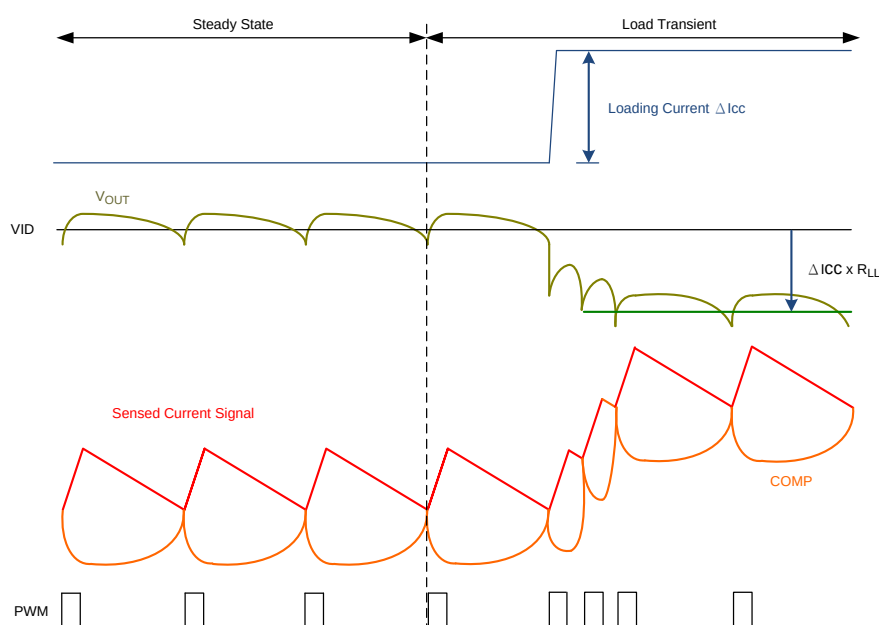


Figure 1. G-NAVP™ Behavior Waveform

POR/POR_NVM

NVM loading of the RTQ8826 begins after VCC crosses its rising VCC_POR_NVM threshold. When POR_NVM conditions are met, RTQ8826 will load NVM into the control registers.

Initialization of the RTQ8826 begins after VCC crosses its rising VCC_POR threshold. When POR conditions are met, the internal 3.3V LDO is enabled and begins pin setting indicated by the SET pin resistor value.

PMBus Interface/Control Logic/Configuration

Registers

The PMBus Interface receives or transmits signal with system host/bus master. Control logic executes command (Read/Write registers) and sends related signals to control VR. Configuration registers include function setting registers and PMBus basic required registers.

IMON Filter

The IMON Filter is used to average current signal by analog low-pass filter. It outputs IMON_{AVG} to the MUX of ADC for current reporting.

MUX and ADC

The MUX supports the inputs of SET1, SET2, VBOOT, TSEN, VSEN and IMONavg. The ADC converts these analog signals to digital codes for reporting or function settings.

UVLO

The RTQ8826 provide the input under-voltage lockout (UVLO) with VIN and VCC pins. When the VIN falls below VIN_OFF(36h) or the VCC falls below VCC_POR threshold, the UVLO fault is asserted. The device will stop power conversion to make sure the device works properly. For more information, see Application Information and Table 3.

Loop Control/Protection Logic

It controls power-on/off sequence, protections and PWM sequence.

DAC

Generates a reference VID voltage according to the VID code sent by Control Logic. According to VOUT_COMMAND command, Control Logic dynamically changes VID voltage to the target with required slew rate.

ERROR AMP

Inverts and amplifies the difference between output voltage and VID with externally setting finite DC gain. The output signal is COMP for PWM triggers.

PER CSGM

Senses per-phase inductor current. The outputs are used for loop response, Current Balance, current reporting and over-current protection.

SUM CSGM

Senses total inductor current with RIMON gain adjustment. SUM CSGM output is used for PWM trigger.

RAMP

RAMP helps loop stability and transient response.

PWM CMP

The PWM comparator compares COMP signal and sum current signal based on RAMP to trigger PWM.

Offset Cancellation

Cancel the current signal/comp voltage ripple issue to control output voltage accuracy.

Current Balance

Per-phase current sense signal is compared with sensed average current. The comparison result adjusts each phase PWM width to optimize current and thermal balance.

AQR/ABS_QR

AQR is a new generation of quick response mechanism (Adaptive Quick Response, AQR) which detects loading rising edge and allows all PWM to turn on. PWM pulse width triggered by AQR is adaptive to loading level. Absolutely Quick Response (ABS_QR) is used in the no load-line system which detects the absolute value of output voltage drop. The RTQ8826 also provides various ABS_QR threshold via MFR_ABS_QR (DFh) register and AQR threshold via MFR_AQR (D8h) register.

TONGEN/Driver Interface

PWM comparator output signal triggers TONGEN to generate PWM pulse. The PWM sequence is controlled by Loop Control. PWM pulse width is determined by frequency setting, current balance output, Adaptive Quick Response (AQR) and ABS-QR settings. Once AQR is triggered, VR allows all PWM to turn on at the same time. Driver interface provides high/low/tri-state to drive external driver. In addition, PWM state is controlled by protection logic. Different protections force required PWM state.

OVP/UVPI/SLOW_OCP/FAST_OCP/OTP/VIN_UVLO/SPS_FAULT

Over-voltage protection/Under-voltage protection / Slow over-current protection / Fast over-current protection / Over-temperature protection / Input Voltage under-voltage lockout/Smart Power Stage device fault protection.

Absolute Maximum Ratings (Note 1)

- VIN to GND ----- -0.3V to 6.5V
- TON to GND ----- -0.3V to 28V
- PWM_VCC to GND ----- -0.3V to 6.5V
- VCC to GND ----- -0.3V to 6.5V
- RGND to GND ----- -0.3V to 0.3V
- Other Pins ----- -0.3V to 6.8V
- Lead Temperature (Soldering, 10 sec.) ----- 260°C
- Junction Temperature ----- 150°C
- Storage Temperature Range ----- -65°C to 150°C

ESD Ratings (Note 2)

- HBM (Human Body Model) ----- 2kV

Recommended Operating Conditions (Note 3)

- VR Supply Voltage to GND ----- 4.5V to 24V
- Supply Input Voltage, VCC ----- 4.5V to 5.5V
- Junction Temperature Range ----- -40°C to 125°C

Thermal Information (Note 4)

- WQFN-48L 7x7, θ_{JA} ----- 26.5°C/W
- WQFN-48L 7x7, $\theta_{JC(Top)}$ ----- 10.3°C/W

Electrical Characteristics

(VCC = 5V, typical values are referenced to T_J = 25°C, Min and Max values are referenced to T_J from -40°C to 125°C, unless otherwise noted)

Parameter	Symbol	Test Conditions	Min	Typ	Max	Unit
Supply Voltage Range	V _{CC}		4.5	--	5.5	V
Controller Supply Current	I _{VCC}	V _{CC} = 5V EN = L, no switching	6	9	12	mA
VCC Power-ON Reset (POR)	V _{CC_POR_R}	Rising edge	4.2	4.3	4.4	V
	ΔV _{CC_POR_F_HYS}	Falling edge hysteresis	150	190	230	mV
VCC Power-ON Reset for NVM (POR_NVM)	V _{CC_POR_NVM_R}	Rising edge	--	3.2	3.6	V
	V _{CC_POR_NVM_F}	Falling edge	2.6	2.8	--	
VIN						
Sensing Power Stage Input Voltage Divider Range	V _{IN}		1.1	--	3	V
TON						
Sensing Power Stage Input Voltage Range	V _{TON}		4.5	--	17	V

Parameter		Symbol	Test Conditions	Min	Typ	Max	Unit
EN							
VR Enable Threshold	Logic-High	V _{IH_EN}		0.7	--	--	V
VR Disable Threshold	Logic-Low	V _{IL_EN}		--	--	0.6	V
Leakage Current of EN		I _{LEAK_EN}		−1	--	1	μA
SETx, VBOOTx							
Current Source from SETx pins and VBOOTx pins		I _{SET}	V(SET) = 1.6V	77	80	83	μA
I2C_SCL, I2C_SDA/O							
I2C_SCL/I2C_SDA Threshold	Logic-High	V _{IH_I2C}		1	--	--	V
	Logic-Low	V _{IL_I2C}		--	--	0.6	
Leakage Current of I2C_SCL/I2C_SDA		I _{LEAK_I2C}	I2C_SCL/SDA = H	−1	--	1	μA
Active Low Voltage of I2C_SDA		V _{I2C_SDA}	I _{I2C_SDA} = 10mA	0.04	--	0.13	V
PMBus Interface Timing Characteristics							
SCL Clock Rate		f _{SCL}		10	--	1000	kHz
Hold Time (Repeated) Start Condition.		t _{HD;STA}		0.26	--	--	μs
Low Period of the SCL Clock		t _{LOW}		0.5	--	--	μs
High Period of the SCL Clock		t _{HIGH}		0.6	--	50	μs
Set-Up Time for a Repeated START Condition		t _{SU;STA}		0.26	--	--	μs
Data Hold Time		t _{HD;DAT}		0	--	--	ns
Data Set-Up Time		t _{SU;DAT}		50	--	--	ns
Set-Up Time for STOP Condition		t _{SU;STO}		0.26	--	--	μs
Bus Free Time Between STOP and START Condition		t _{BUF}		0.5	--	--	μs
I2C_SCL/I2C_SDA Rise time		t _R		--	--	120	ns
I2C_SCL/I2C_SDA Fall time		t _F		--	--	120	ns
RESET#							
RESET# Threshold	Logic-High	V _{IH_RESET}		0.8	--	--	V
	Logic-Low	V _{IL_RESET}		--	--	0.4	
TSENx							
Input Voltage Range				0	--	2	V
ISENxN							
Common Mode Voltage Range		V _{ISENxN}		1.19	1.32	1.45	V
Current Sensing Amplifier							
Impedance at Positive Input		R _{ISENxP}	I-type SPS	1	--	--	MΩ
		R _{ISENxP}	V-type SPS	4.25	5	5.75	kΩ

Parameter	Symbol	Test Conditions	Min	Typ	Max	Unit
Current Sense Input Voltage	VCSIN_V-type SPS	Differential voltage range of current sense input. (VCSIN = ISENxP - ISENxN)	−40	--	400	mV
	VCSIN_I-type SPS	Differential voltage range of current sense input. (VCSIN = ISENxP - ISENxN)	−10	--	100	
Current Sense Gain Error	AMIRROR	Internal current mirror gain of per phase current sense. (AMIRROR = IMONx / ICS,PERx)	0.95	1	1.05	A/A
PWM Output						
PWM_VCC	VPWM_VCC		3	3.3	3.6	V
PWM Driving Capability						
PWM Source Resistance	RPWM_SRC		--	30	--	Ω
PWM Sink Resistance	RPWM_SNK		--	10	--	Ω
VR_READYx						
Output Voltage Low of VR_READY	VOL_VR_READY	I _{VR_READY} = 10mA	--	0.13	0.2	V
SMBALERT#, VR_HOT#						
Output Voltage Low of SMBALERT#/VR_HOT#	VOL_SMBALERT# VOL_VR_HOT#	ISMBALERT# = 10mA I _{VR_HOT#} = 10mA	--	--	0.13	V
Leakage Current of SMBALERT#/VR_HOT#	I _{LEAK_SMBALERT#} I _{LEAK_VR_HOT#}	SMBALERT# = H VR_HOT# = H	−1	--	1	μA
ton Setting						
ON-Time Setting	ton	V _{IN} = 12V, V _{ID} = 1V, freq. = 410kHz, k _{TON} = 1	--	208	--	ns
DAC Voltage Characteristics						
DAC Voltage Range	DAC		0.25	--	1.516	V
DAC Voltage Accuracy	DAC _(acc)	V _{ID} = 1.516V, 1.2V, 1V, 0.746V ; T _J from −10°C to 125°C	−1	--	1	%
		V _{ID} = 1.516V, 1.2V, 1V, 0.746V ; T _J from −40°C to 125°C	−1.3	--	1.3	
Telemetry for VOUT/IOUT/Temperature						
Output Voltage Measurement	M _{VOUT}	Range by V _{ID} setting	0	--	1.516	V
	M _{VOUT(acc)}	Accuracy	−10	--	10	LSB
	M _{VOUT(lsb)}	Bit Resolution	--	1.953	--	mV
Output Current Measurement	M _{IOUT}	Range	0	--	416	A
	M _{IOUT(acc)}	Accuracy, I _{OUT} ≤ 120A	−4.5	--	4.5	LSB
		Accuracy, I _{OUT} > 120A	−5	--	5	%
	M _{IOUT(lsb)}	Bit Resolution	--	1	--	A

Parameter		Symbol	Test Conditions	Min	Typ	Max	Unit
Temperature Measurement		Mtemp	Range	−75	--	175	°C
		Mtemp(acc)	Accuracy	−4	--	4	
		Mtemp(lsb)	Bit Resolution	--	1	--	
Protections							
Sensing Input Voltage Divider Under-Voltage Lockout (UVLO)	VIN_ON	VIN_ON	Programmable range, 10 different settings	1.2	--	3	V
		VIN_ON(acc)	Accuracy	−1.5	--	1.5	%
	VIN_OFF	VIN_OFF	Programmable range, 10 different settings	1.1	--	2.9	V
		VIN_OFF(acc)	Accuracy	−1.5	--	1.5	%
OVP Threshold Accuracy		VOV(acc)	VID ≥ 1V	−1.5	--	1.5	%
			VID < 1V	−15	--	15	mV
Debounce Time of All OVP		DT_OVP		--	0.5	--	μs
UVP Threshold Accuracy		VUV(acc)	VID ≥ 1V	−1.5	--	1.5	%
			VID < 1V	−25	--	25	mV
Debounce Time of UVP		DT_UVP		--	3	--	μs
Slow OCP Threshold Accuracy		ISLOW_OC(acc)		−3.5	--	3.5	%
Fast OCP Threshold Accuracy		IFAST_OC(acc)	(Note 5)	−5	--	5	%
OT_FAULT Threshold Accuracy		TOT_FAULT(acc)		−4	--	4	°C
OT_WARNING Threshold Accuracy		TOT_WARN(acc)		−4	--	4	°C
SPS FAULT Threshold		VSPS_FAULT	Driver Fault Comp. Threshold	2	2.2	2.24	V

Note 1. Stresses beyond those listed under “Absolute Maximum Ratings” may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions may affect device reliability.


Note 2. Devices are ESD sensitive. Handling precautions are recommended.

Note 3. The device is not guaranteed to function outside its operating conditions.

Note 4. For more information about thermal parameters, see the Application and Definition of Thermal Resistances report, [AN061](#).

Note 5. Not subject to production test - verified by design and/or characterization.


Typical Application Circuit

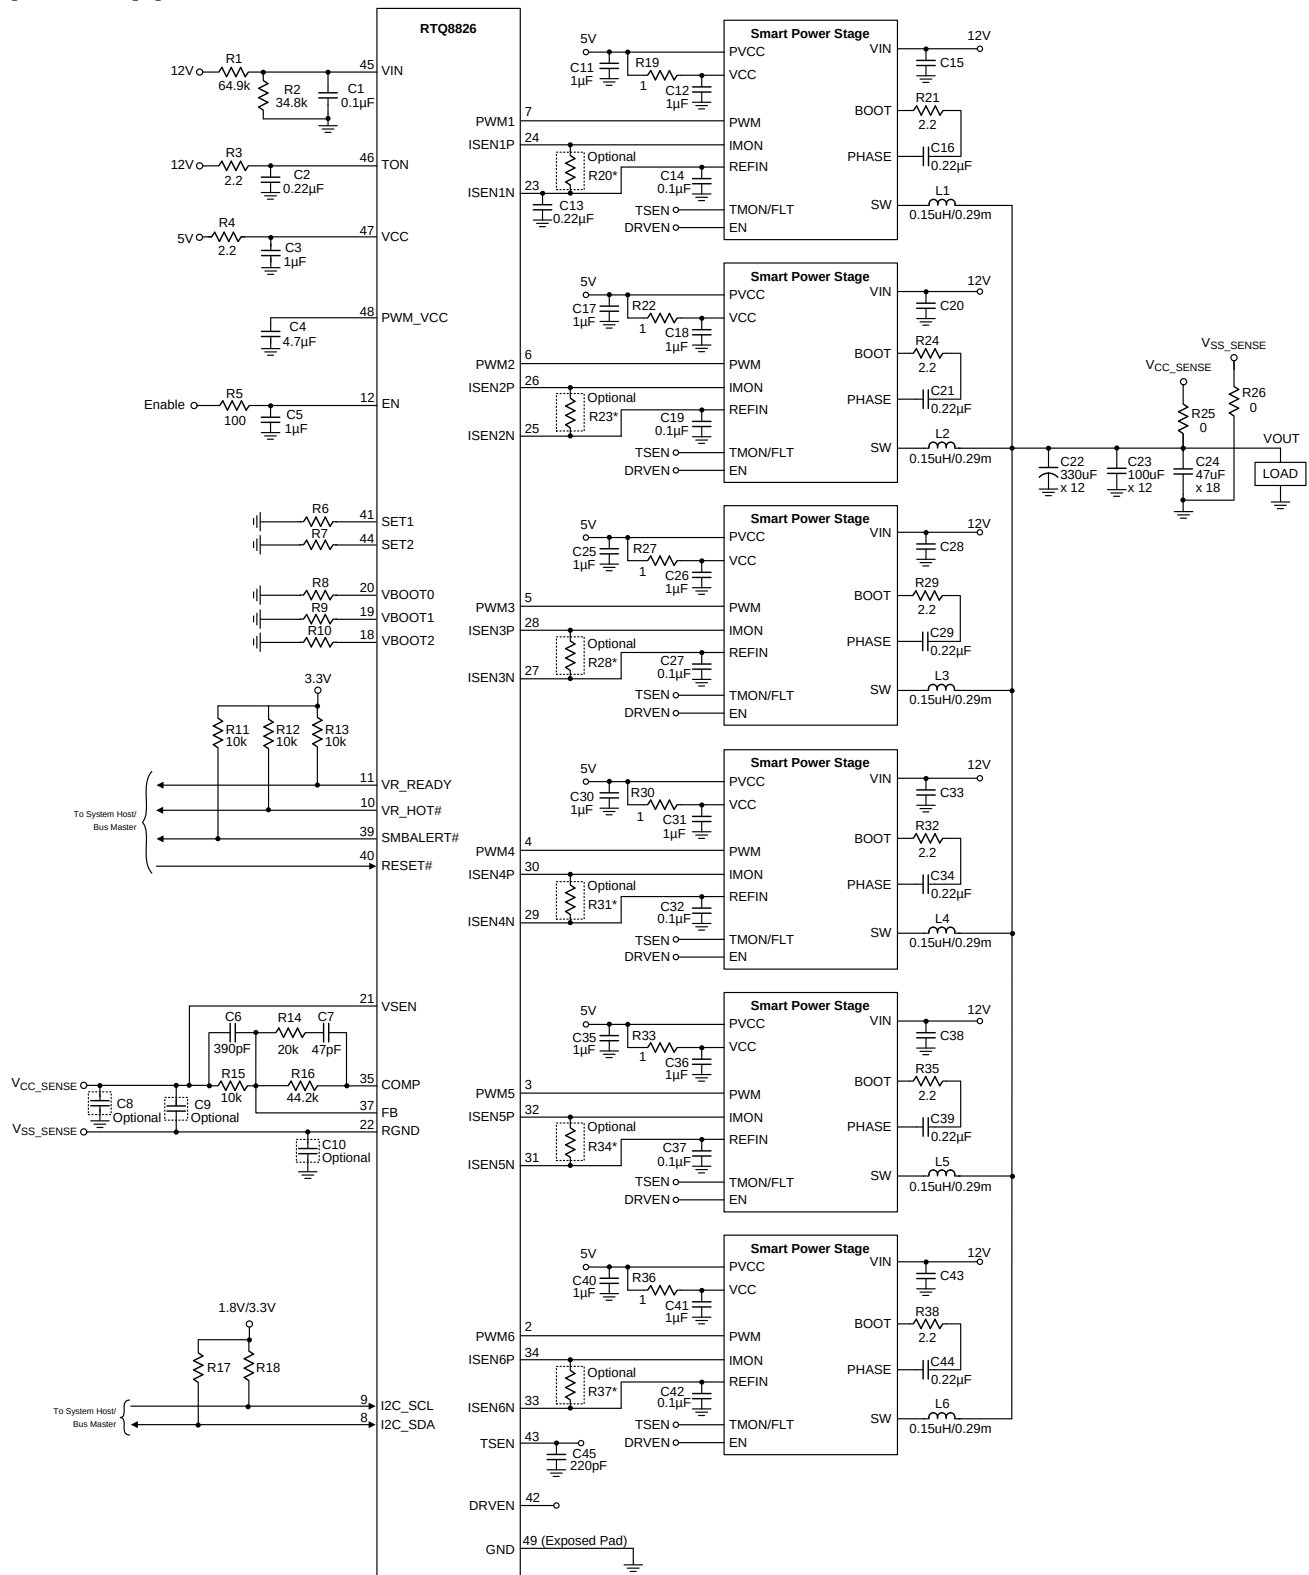


* An optional resistor for I-type SPS is suggested to be 249Ω

Typical Operating Characteristics


Power On from PMBUS

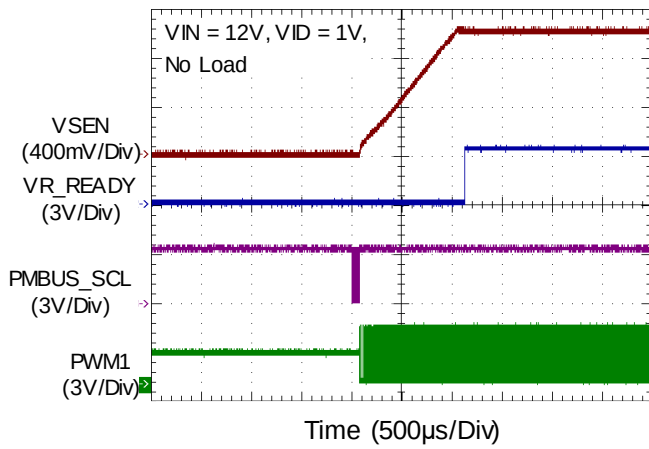


Power On from EN

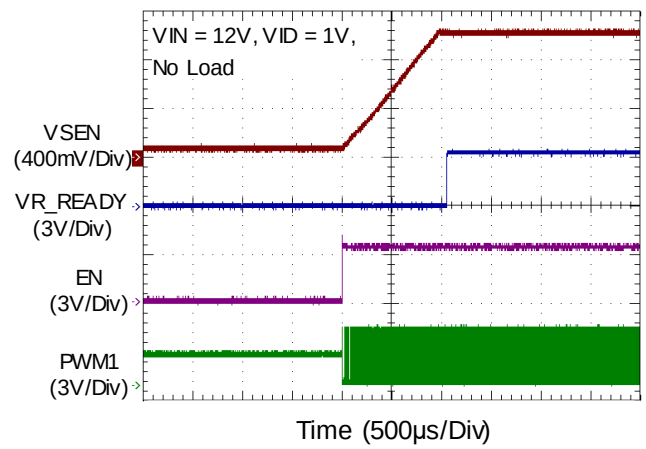


Power On from VIN

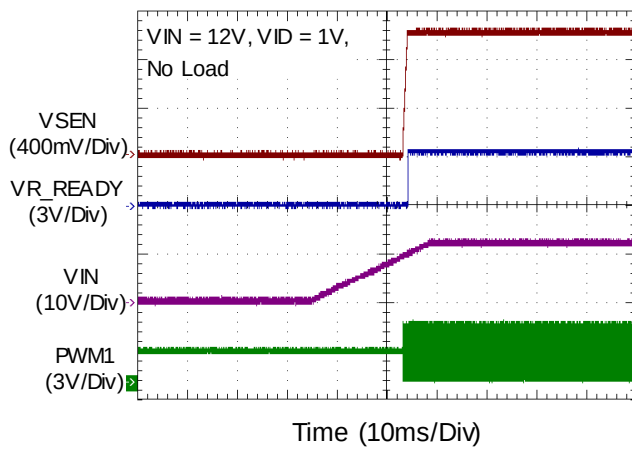


Power Off from PMBUS

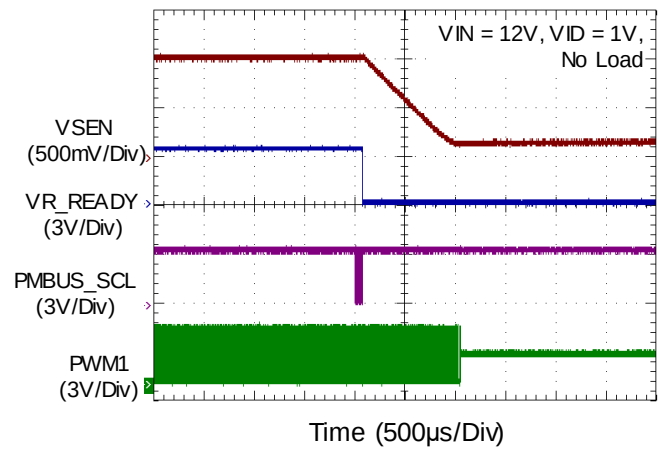


Power Off from EN (Soft Off)

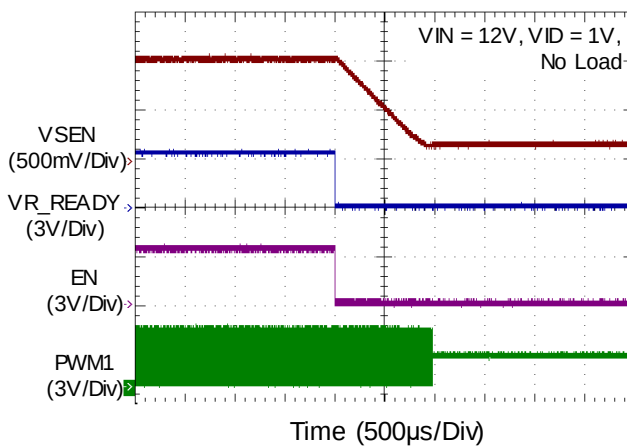


Power Off from EN (Immediately Off)

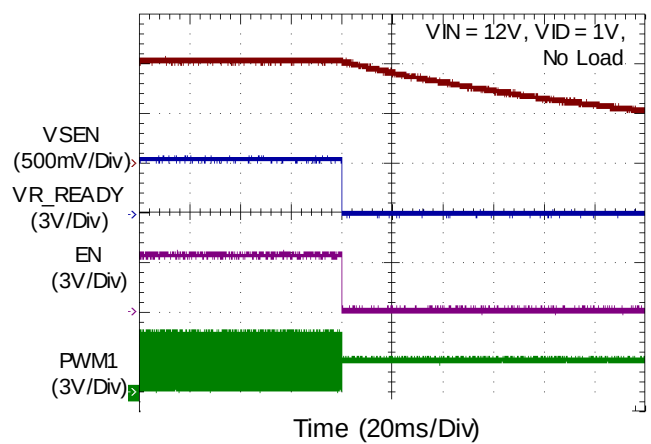


Power Off from VIN

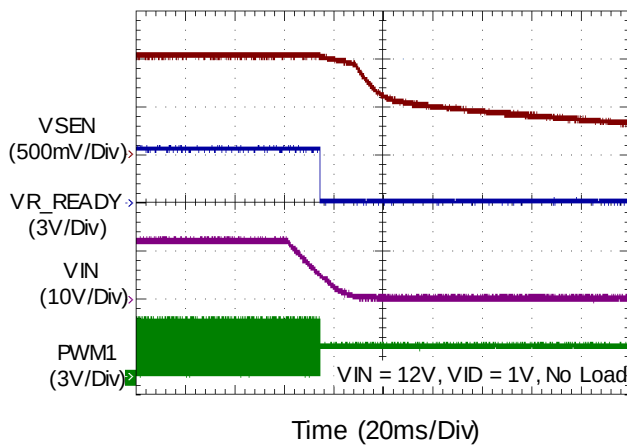


VR OCP (Latched Shutdown)

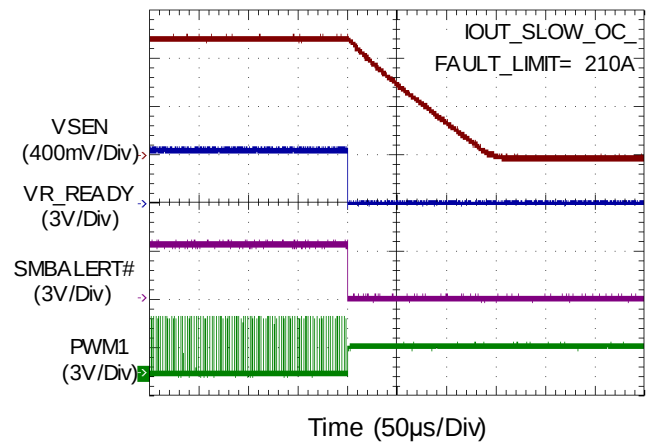


VR OCP (Hiccup Mode)

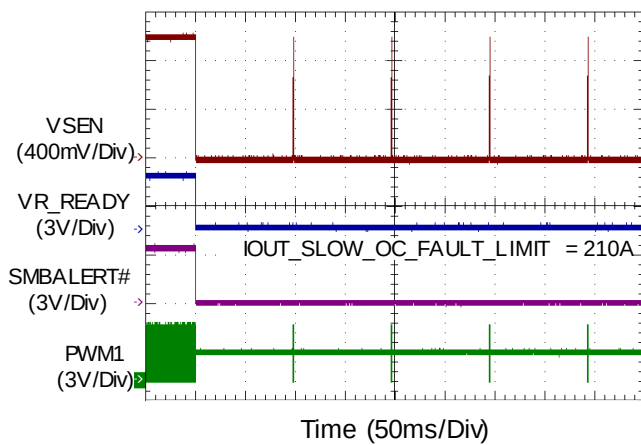


VR UVP

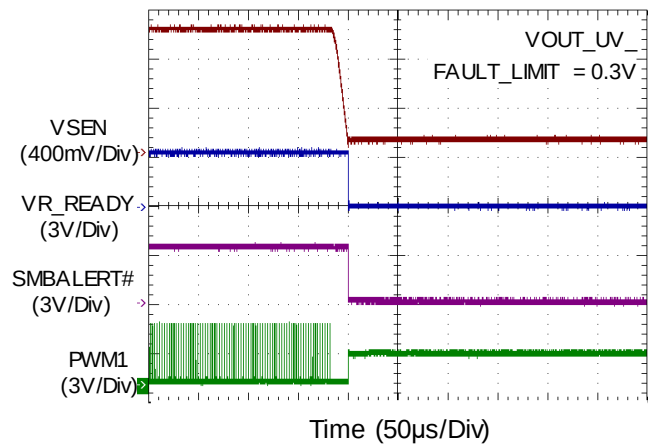


VR OVP (Soft Shutdown)

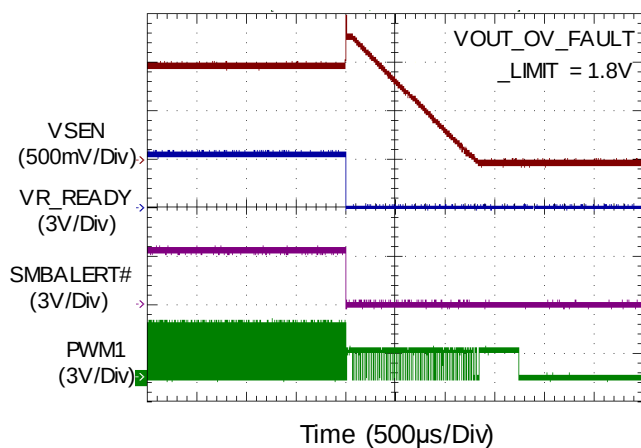


VR OVP (HiZ Shutdown)

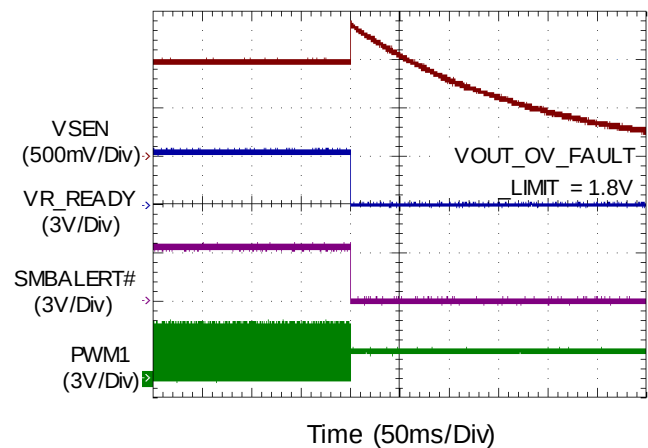


VR OVP (Turn On Low-Side MOSFET)

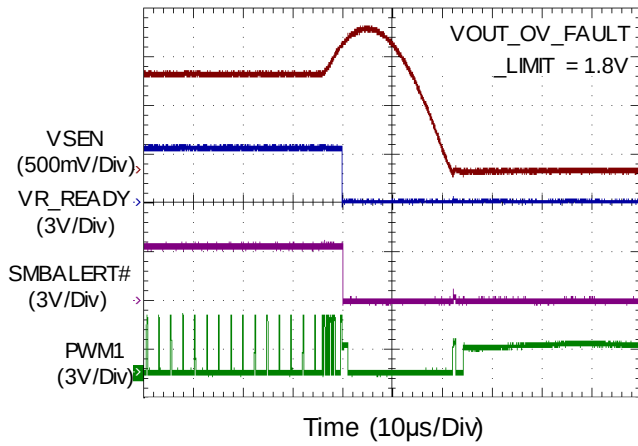


Dynamic-VID Up with Slow SR (1mV/µs)

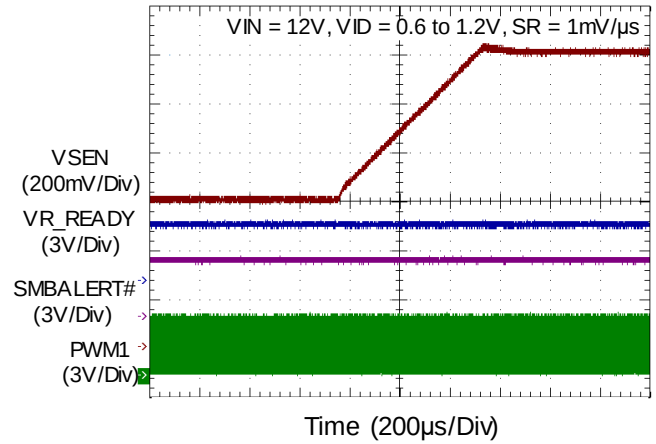


Dynamic-VID Down with slow SR (1mV/µs)

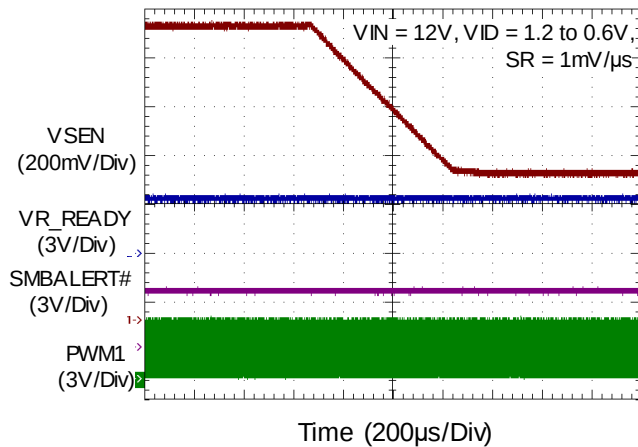


Dynamic-VID Up with Fast SR (16mV/µs)

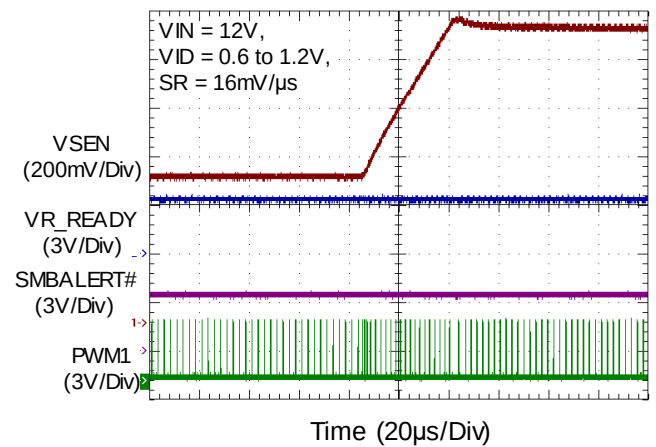


Dynamic-VID Down with Fast SR (16mV/µs)

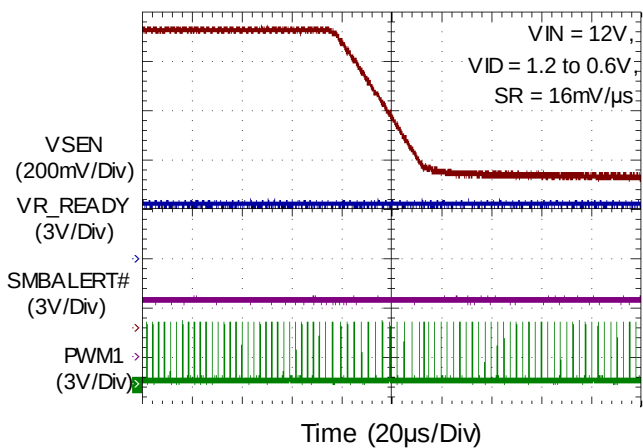


VR OTP

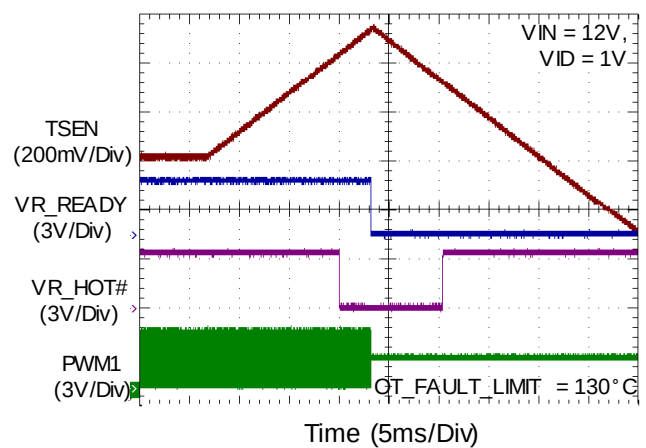


VR Thermal Warning

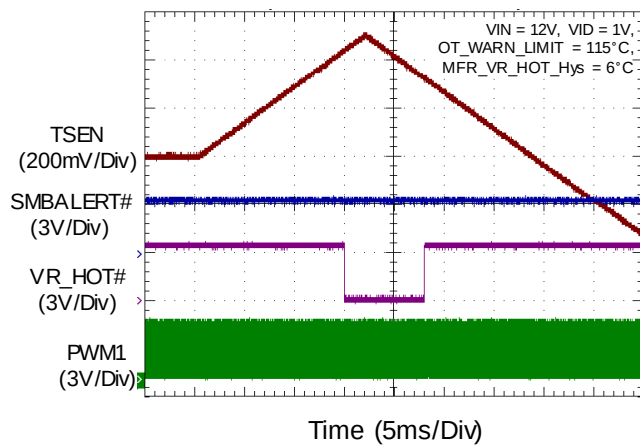


SPS Fault

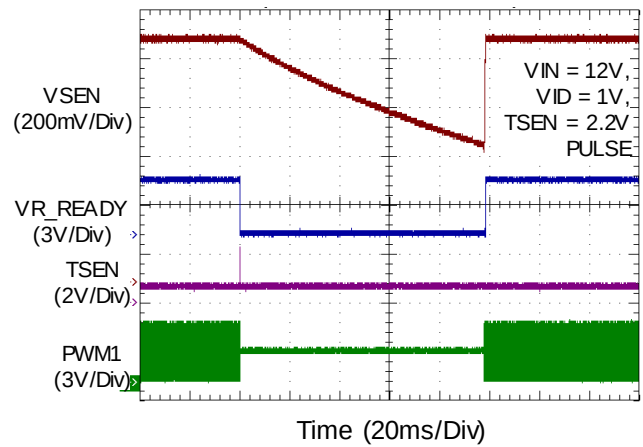


RESET# Function (Return to VBOOT)

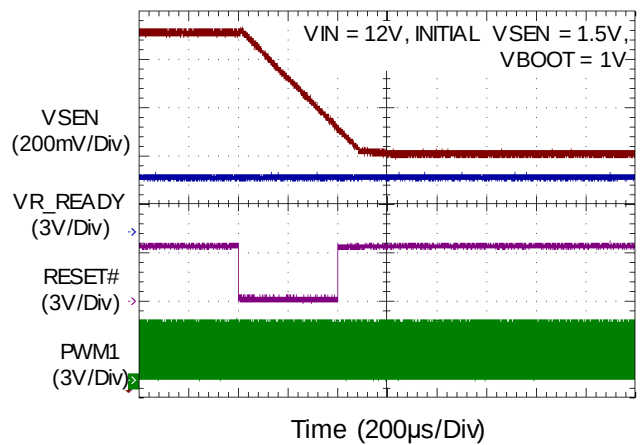


RESET# Function (Restart)

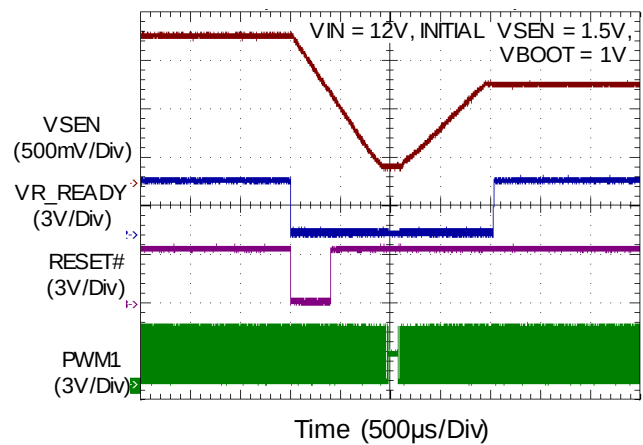


Output Ripple

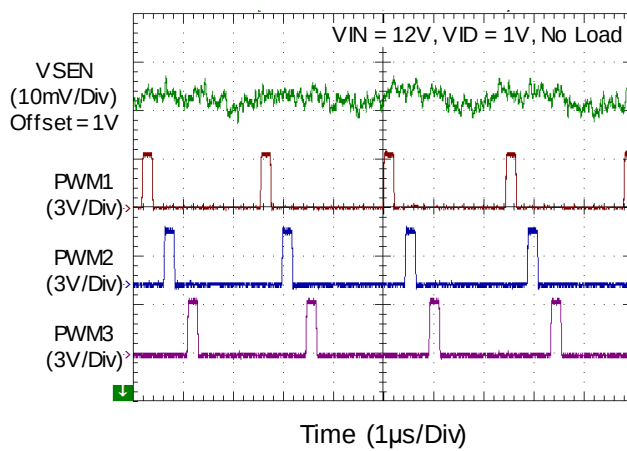


Transient Response

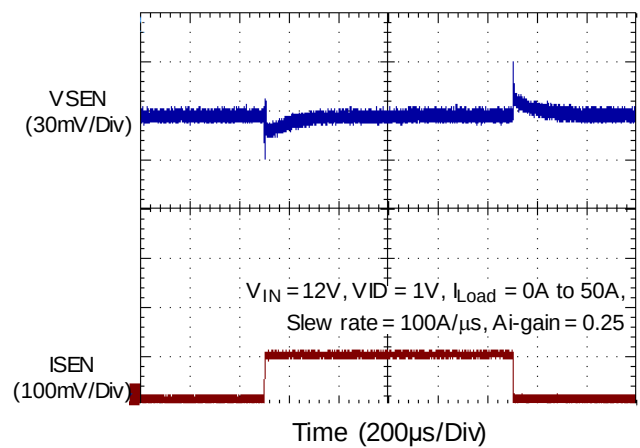


Transient Response

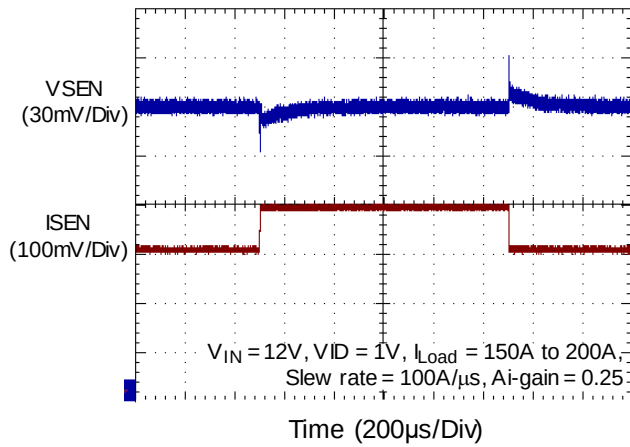


FB vs. Temperature

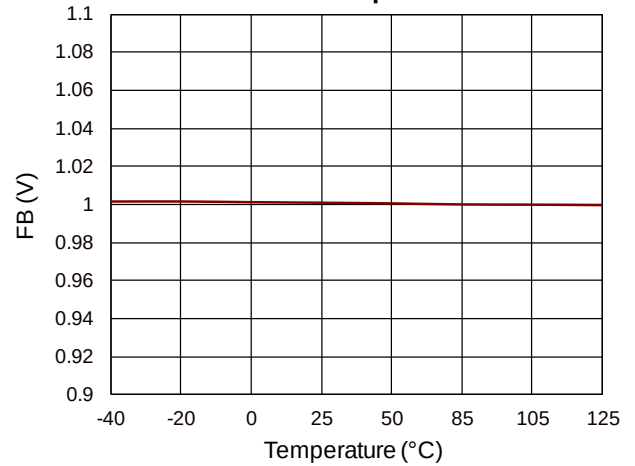


VSEN vs. Temperature

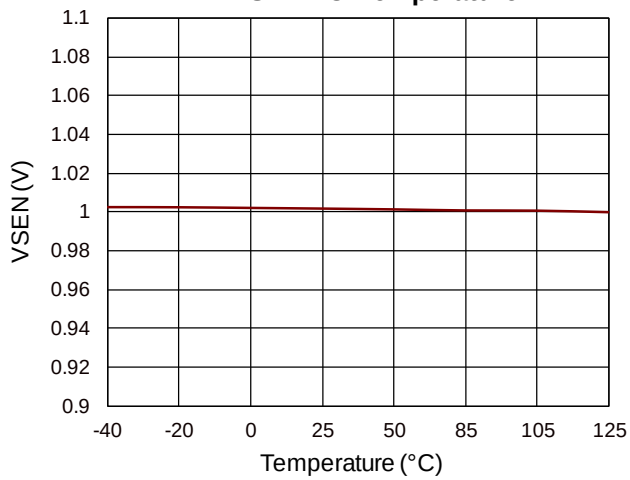


T_{ON} vs. Temperature

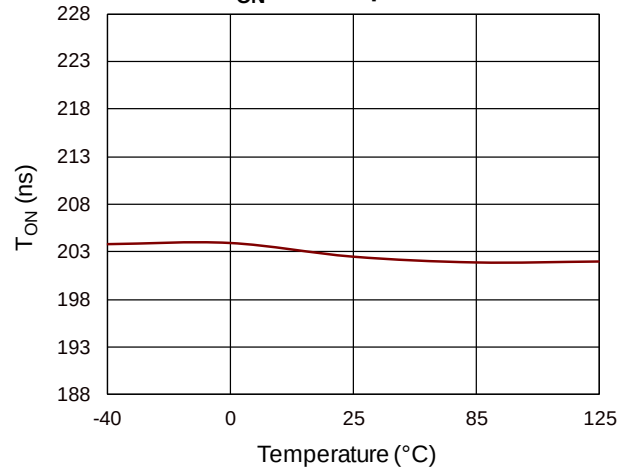


F_{SW} vs. Temperature

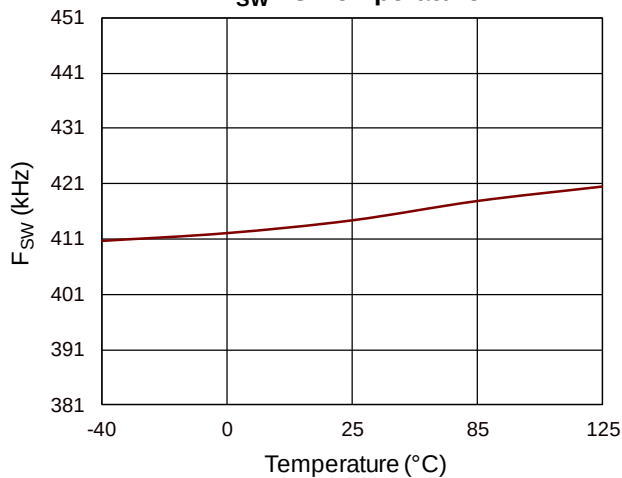

PWM_VCC vs. Temperature

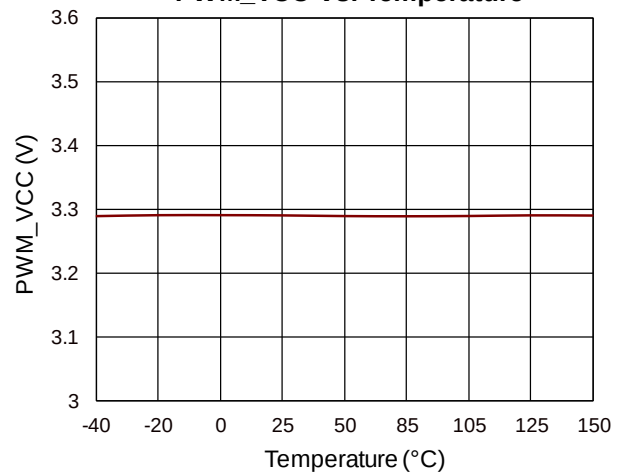

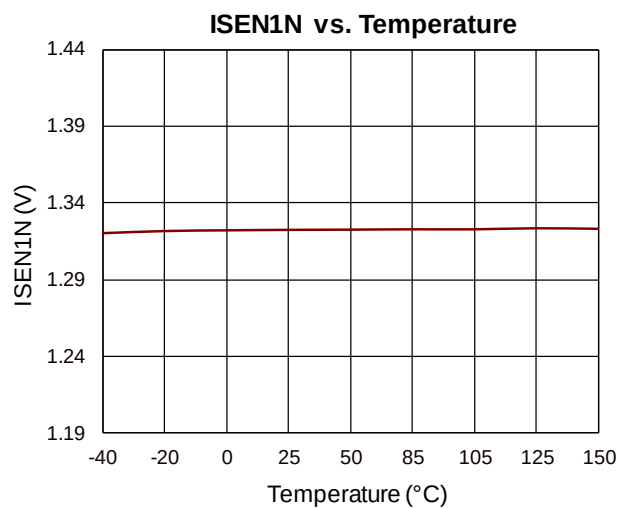

Application Information

Richtek's component specification does not include the following information in the Application Information section. Thereby no warranty is given regarding its validity and accuracy. Customers should take responsibility to verify their own designs and reserve suitable design margin to ensure the functional suitability of their components and systems.

The RTQ8826 is a 6/5/4/3/2/1 phase synchronous buck controller. The RTQ8826 uses an ADC to implement all kinds of settings to save the total pin number for ease of use and saving PCB space. The RTQ8826 is used in networking or telecom system.

Startup Configuration

The RTQ8826 is the state-machine based power management as shown in Figure 2 shows the state-machine. The operation is controlled by application-specific configuration settings loaded into the control registers. For typical applications, the control registers are pre-programmed at the factory and stored in the on-chip nonvolatile memory (NVM). However, the control registers can also be reprogrammed in the field via the serial communication PMBus and stored into the NVM.

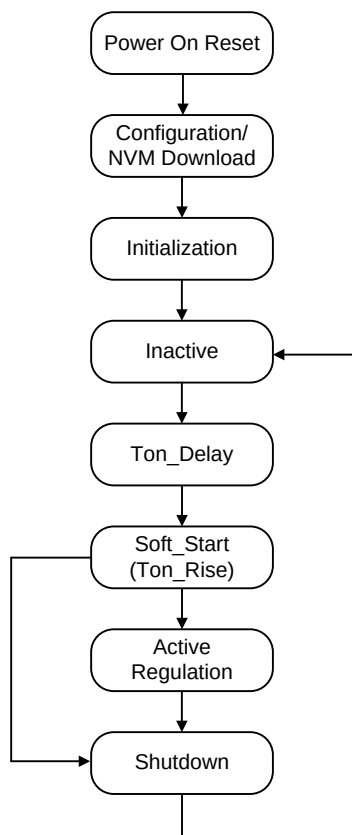


Figure 2. State-Machine

Power-ON Configuration

Supply a single +5.0V (VCC) to the RTQ8826 to start power-on. Figure 3 shows the power-on timings. NVM loading of the RTQ8826 begins after VCC crosses its rising VCC_POR_NVM threshold. When POR_NVM conditions are met, RTQ8826 will download NVM into the control registers. RTQ8826 operation is initialized while VCC exceeds VCC_POR threshold. Note that for power-on during OTP & SPS_Fault conditions, RTQ8826 will start from initialization after OTP & SPS_Fault are cleared. During this period, the internal 3.3V LDO is enabled, and the PWM outputs are held in high impedance (Hi-Z) state to ensure the SPS remains off. Set the correct default levels for static input signals with pull-down resistors, such as the I2C address, enabling load-line, SPS type and VBOOT (SET1, SET2, and VBOOTx). The maximum time from VCC exceeding VIN_POR threshold to initialization end is 5ms. When VCC and VIN satisfy their respective voltage conditions, the controller is in its shutdown state. It will transition to its active state and begin soft-start at the state of EN or OPERATION Command start-up. Note that SPS_VCC is strongly suggested to be ready before the RTQ8826_VCC exceeds VCC_POR threshold.

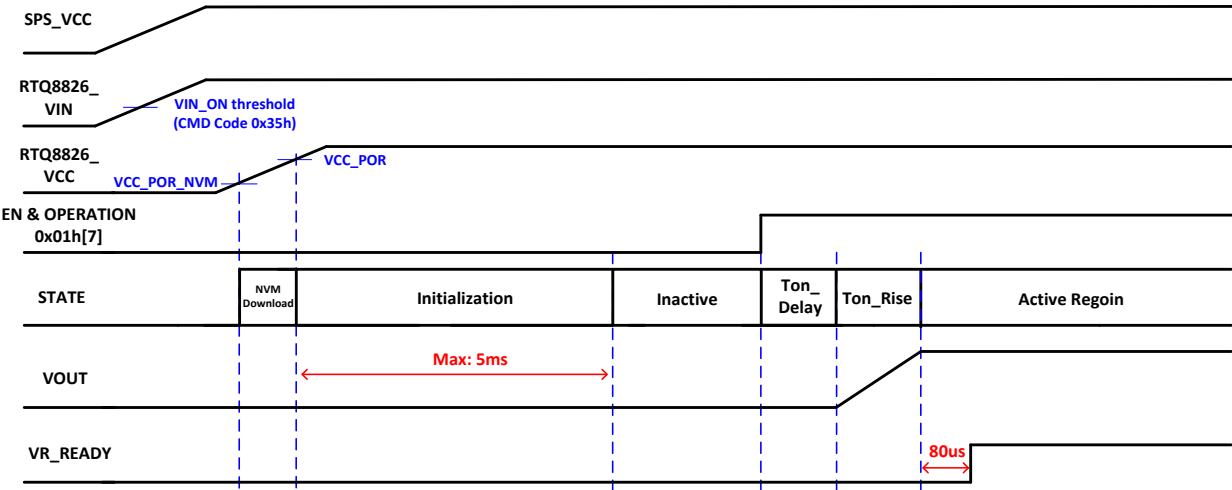


Figure 3. Power-ON Timings

Initialization

During the Initialization state, the RTQ8826 measures the external temperatures, input voltage, and executes the calibration routines within the IC. To properly set the boot-up voltage, resistors with 1% tolerance must be connected from the VBOOT, VBOOT1 and VBOOT2

pins to the ground. Table 1 shows the boot-up voltage. To properly set the PMBus address (7-bit addressing), SPS type and enabling load-line function, resistors with 1% tolerance must be connected from the SET1 and SET2 pins to the ground. Table 2 shows the PMBus address, SPS type and enabling load-line function.

Table 1. The Boot-up Voltage

VBOOT2	VBOOT1	VBOOT0	VBOOT (V)
0Ω	0Ω	0Ω	0.602
0Ω	0Ω	16.9kΩ	0.625
0Ω	0Ω	31.6kΩ	0.648
0Ω	16.9kΩ	0Ω	0.672
0Ω	16.9kΩ	16.9kΩ	0.695
0Ω	16.9kΩ	31.6kΩ	0.719
0Ω	31.6kΩ	0Ω	0.742
0Ω	31.6kΩ	16.9kΩ	0.766
0Ω	31.6kΩ	31.6kΩ	0.789
16.9kΩ	0Ω	0Ω	0.813
16.9kΩ	0Ω	16.9kΩ	0.836
16.9kΩ	0Ω	31.6kΩ	0.859
16.9kΩ	16.9kΩ	0Ω	0.883
16.9kΩ	16.9kΩ	16.9kΩ	0.906
16.9kΩ	16.9kΩ	31.6kΩ	0.930
16.9kΩ	31.6kΩ	0Ω	0.953
16.9kΩ	31.6kΩ	16.9kΩ	0.977

VBOOT2	VBOOT1	VBOOT0	VBOOT (V)
16.9kΩ	31.6kΩ	31.6kΩ	1.000
31.6kΩ	0Ω	0Ω	1.023
31.6kΩ	0Ω	16.9kΩ	1.047
31.6kΩ	0Ω	31.6kΩ	1.070
31.6kΩ	16.9kΩ	0Ω	1.094
31.6kΩ	16.9kΩ	16.9kΩ	1.117
31.6kΩ	16.9kΩ	31.6kΩ	1.141
31.6kΩ	31.6kΩ	0Ω	1.164
31.6kΩ	31.6kΩ	16.9kΩ	1.188
31.6kΩ	31.6kΩ	31.6kΩ	1.211

Table 2. The PMBus Address (7-bit format), SPS Type and Enabling Load-Line Function

SET2	SET1	SPS Type	Load-Line	PMBus Address	SET2	SET1	SPS Type	Load-Line	PMBus Address
0kΩ	0Ω	V-type	no LL	68	16.5kΩ	0Ω	V-type	no LL	70
	6.19kΩ			69		6.19kΩ			71
	9.09kΩ			6A		9.09kΩ			72
	12.4kΩ			6B		12.4kΩ			73
	16.5kΩ			6C		16.5kΩ			74
	21.5kΩ			6D		21.5kΩ			75
	27.4kΩ			6E		27.4kΩ			76
	35.7kΩ			6F		35.7kΩ			77
6.19kΩ	0Ω		LL*	68	21.5kΩ	0Ω		LL*	70
	6.19kΩ			69		6.19kΩ			71
	9.09kΩ			6A		9.09kΩ			72
	12.4kΩ			6B		12.4kΩ			73
	16.5kΩ			6C		16.5kΩ			74
	21.5kΩ			6D		21.5kΩ			75
	27.4kΩ			6E		27.4kΩ			76
	35.7kΩ			6F		35.7kΩ			77

SET2	SET1	SPS Type	Load-Line	PMBus Address	SET2	SET1	SPS Type	Load-Line	PMBus Address
9.09kΩ	0Ω	I-type	no LL	68	27.4kΩ	0Ω	I-type	no LL	70
	6.19kΩ			69		6.19kΩ			71
	9.09kΩ			6A		9.09kΩ			72
	12.4kΩ			6B		12.4kΩ			73
	16.5kΩ			6C		16.5kΩ			74
	21.5kΩ			6D		21.5kΩ			75
	27.4kΩ			6E		27.4kΩ			76
	35.7kΩ			6F		35.7kΩ			77
12.4kΩ	0Ω		LL*	68	35.7kΩ	0Ω		LL*	70
	6.19kΩ			69		6.19kΩ			71
	9.09kΩ			6A		9.09kΩ			72
	12.4kΩ			6B		12.4kΩ			73
	16.5kΩ			6C		16.5kΩ			74
	21.5kΩ			6D		21.5kΩ			75
	27.4kΩ			6E		27.4kΩ			76
	35.7kΩ			6F		35.7kΩ			77

*The Ai-gain for LL is set by MFR_Load_Line_DDh[[1:0].

Inactive State and Ton_Delay

Upon completion of the Initialization process, the RTQ8826 will enter the Inactive State. Before the system can be started, the RTQ8826 will verify that the following conditions are satisfied:

1. VCC is valid: The voltage applied to VCC must exceed VIN_POR for the internal power valid signal to be asserted. Otherwise, RTQ8826 will be shut down.
2. No shutdown faults are asserted.
3. VIN is valid: The voltage applied to VIN must exceed VIN_ON threshold for the internal VIN valid signal to be asserted. Otherwise, a VIN UVLO fault will be issued.
4. EN is asserted: It is recommended that EN be asserted only after VCC and VIN are ready.

Once the above startup conditions are satisfied, the RTQ8826 will wait for a programmable period of time (TON_DELAY) before ramping up the output voltage. TON_DELAY can be adjusted from 0ms to 51.0ms in 0.25ms increments.

Soft-Start (Ton_Rise)

Prior to entering the Active Regulation state, the RTQ8826 performs a controlled, monotonic soft-start ramp of the voltage output. At the onset of soft-start, the RTQ8826 will perform a pre-bias condition measurement of the output voltage. The RTQ8826 will set the initial startup ramp voltage at the appropriate level so that it will not sink current from the pre-biased output. Soft-start is performed by actively regulating the output voltage while digitally ramping up a DAC reference voltage from the measured pre-biased voltage to VBOOT voltage. When the regulator ramps to the VBOOT voltage during the TON_RISE time, it enters the Active Regulation State, and the VR_READY pin is asserted after 80μs.

Active Regulation

The RTQ8826 does not need a complex type III compensator to optimize control loop performance. It can adopt a type II compensator (one pole, one zero) in the G-NAVPTM topology to achieve the best performance in load-transient test. The one pole and one zero compensator is shown in Figure 4. REA2/REA1 is ERROR AMP gain and is suggested to be within 2.5

to 4.6 for better transient response.

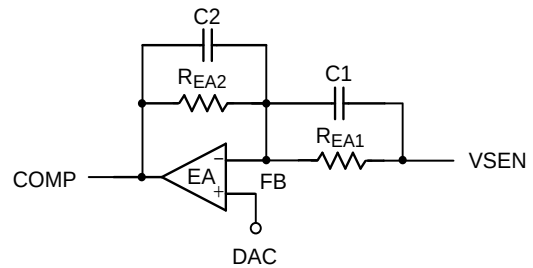


Figure 4. Type II Compensator

Shutdown

The Shutdown state can be entered from either Soft Start or Active Regulation states through user intervention (de-asserting EN) or through a detected fault including over-temperature, over-current, input under-voltage, output over-voltage, output under-voltage and SPS fault conditions. For cases where the shutdown is caused by a fault, the resultant shutdown response is always Hi-Z where the output stage power FETs are immediately switched off. Once the RTQ8826 enters the shutdown state, the IC will be transformed to the inactive state.

Maximum Active phases Number

The number of active phases is determined by ISENxP voltages. Normally, the RTQ8826 operates as a 6-phase PWM controller. Connecting directly or tie 0Ω from ISENA6P pin to VCC programs 5-phase operation, and connecting directly or tie 0Ω from ISENA5P pin to VCC programs 4-phase operation. The unused ISENxN pins and PWM pins can be floating.

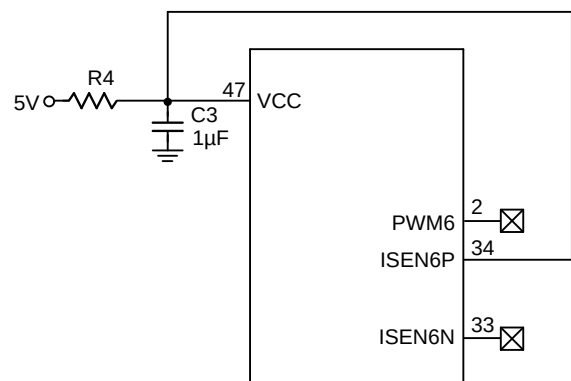


Figure 5. Disable the Sixth Phase

AC-droop

The RTQ8826 builds in AC-droop feature, and the output voltage is determined only by VID and does not vary with the loading current like load-line system behavior. The AC-droop can effectively suppress load transient ring back and control overshoot. Figure 6 shows the condition without AC-droop control. The output voltage without AC-droop control has extra ring back ΔV_2 due to C area charge. Figure 7 shows the condition with AC-droop control. While loading occurs, the RTQ8826 will temporarily change VID target to

short-term voltage target. Short-term voltage target is related to transient loading current ΔI_{CC} and can be represented as follows :

$$\text{Short_Term_Voltage_Target} = \text{VID} - \Delta I_{CC} \times R_{LL}$$

The setting method of R_{LL} is the same as loadline system. The short-term voltage target reverts to VID target slowly after a period of time. The short-term voltage target can help inductor current not to exceed loading current too much and then the ring back ΔV_2 can be suppressed. The overshoot amplitude is reduced to only ΔV_3 .

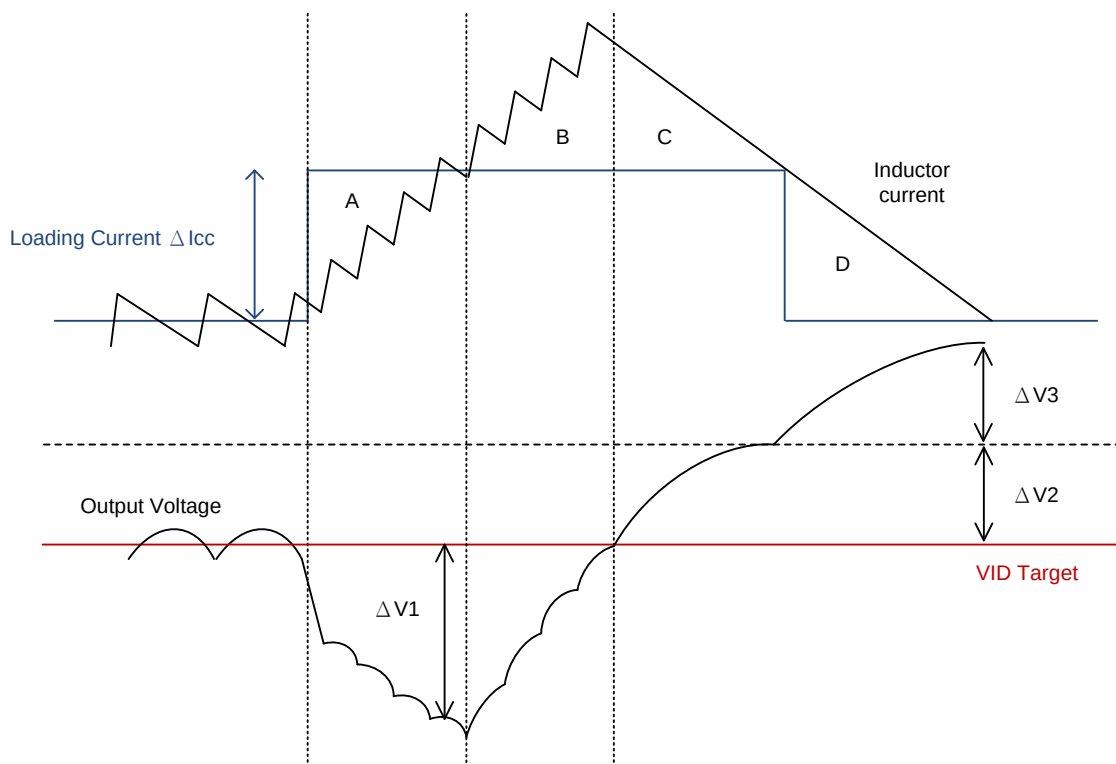


Figure 6. Without AC-droop Control

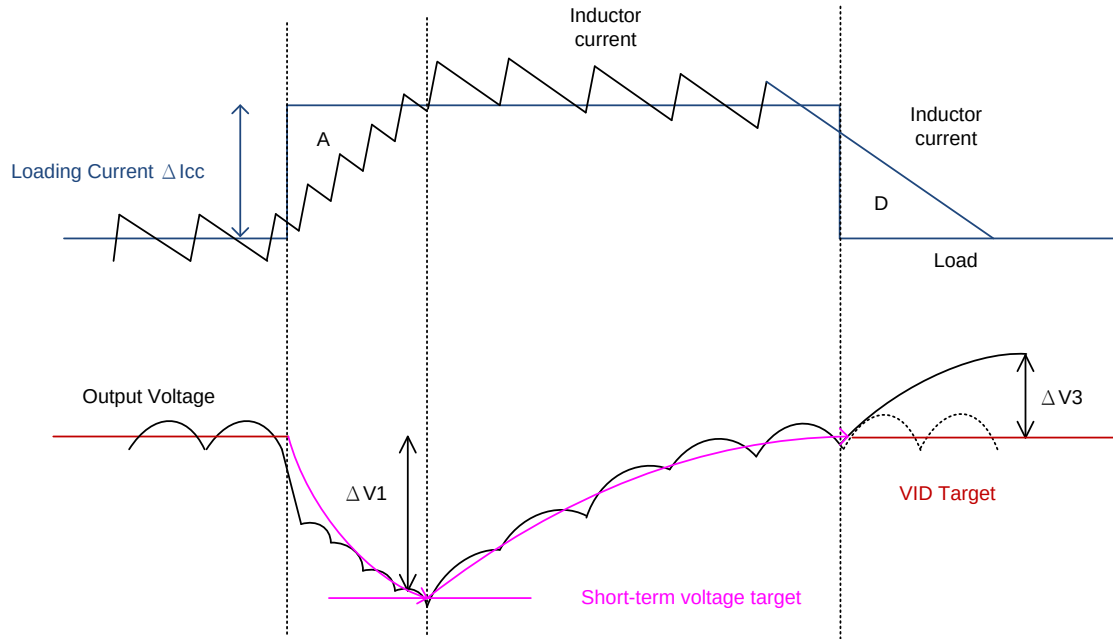


Figure 7. With AC-droop Control

Load-line (R_{LL})

An output voltage load-line (Adaptive Voltage Positioning) is specified in CPU VR for power saving and output capacitance reduction. The characteristic of load-line is that the output voltage decreases by an amount proportional to the increasing loading current, i.e. the slope between output voltage and loading current (R_{LL}) is shown in Figure 8. Figure 9 shows how the voltage and current loop parameters of RTQ8826 achieves load-line. The detailed equation is described as below :

For voltage type SPS :

$$R_{LL} = \frac{\text{Current Loop Gain}}{\text{Voltage Loop Gain}} = \frac{5\text{mV}}{1\text{A}} \times \frac{A_i}{\frac{R_{EA2}}{R_{EA1}}} \times \frac{5}{4}$$

For current type SPS :

$$R_{LL} = \frac{\text{Current Loop Gain}}{\text{Voltage Loop Gain}} = \frac{5\mu\text{A}}{1\text{A}} \times \frac{A_i}{\frac{R_{EA2}}{R_{EA1}}} \times 1250\Omega$$

A_i is current gain. $\frac{R_{EA2}}{R_{EA1}}$ is ERROR AMP gain and suggested to be within 2.5~3.5 for better transient response. R_{LL} can be programmed by A_i and $\frac{R_{EA2}}{R_{EA1}}$. A_i can be selected by MFR_Load_Line (DDh) register.

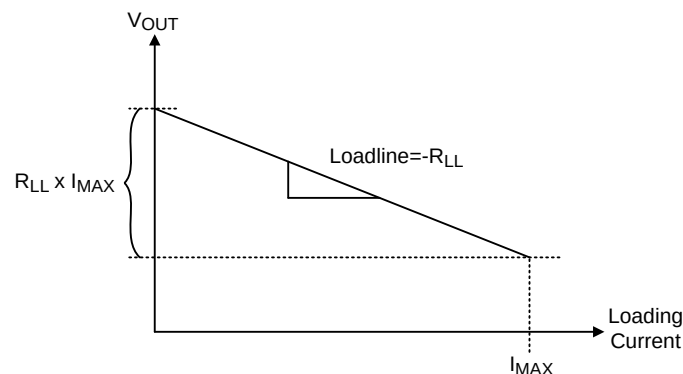


Figure 8. Load-Line (Droop)

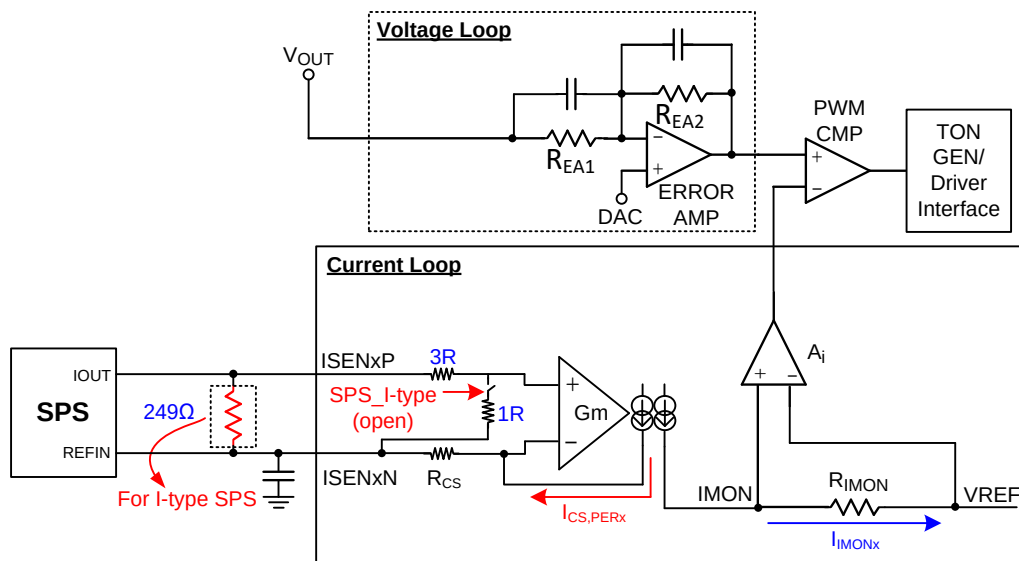
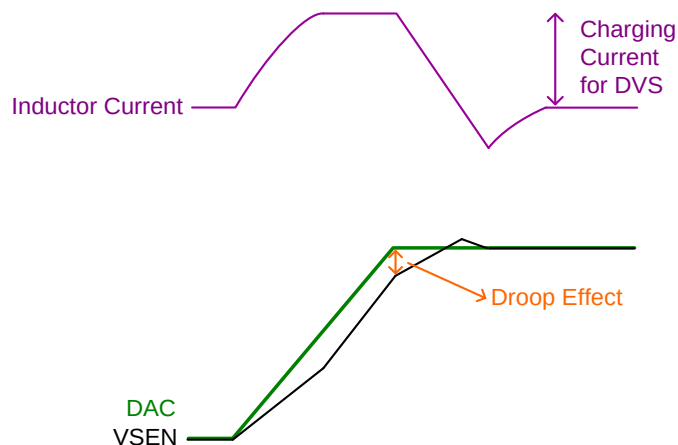


Figure 9. Voltage Loop and Current Loop for Load-line

Dynamic VS (DVS) Compensation

During V_{OUT} transition, an extra current is required to charge output capacitor for increasing voltage. The charging current approximates to the product of the DVS slew rate and output capacitance. For droop system, the extra charging current induces extra voltage drop so that the output voltage cannot reach target within the specified time. The extra voltage drop approximates to $DVS \text{ Slew Rate} \times \text{Output Capacitance} \times R_{LL}$ (R_{LL} is the load-line slope, Ω). This phenomenon is called droop effect. How charging current affects loop is illustrated in Figure 10. DVS compensation function is shown in Figure 11. An internal current I_{DVS_LIFT} is

sinking internally from FB pin to generate DVS compensation $I_{DVS_LIFT} \times R_{EA1}$. I_{DVS_LIFT} can be set via `MFR_DVS_Compensate` (DCh) register. For different scale of DVS SR, I_{DVS_LIFT} is internally adjusted. Compensating magnitude can also be adjusted by R_{EA1} . When DAC reaches the target, the inductor current is still high and needs time to settle down to the DC loading current. ERROR AMP compensation (resistance and capacitance network among VSEN, FB and COMP) also affects DVID behavior. The final setting should be based on the actual measurement.

Figure 10. Droop Effect in V_{OUT} Transition

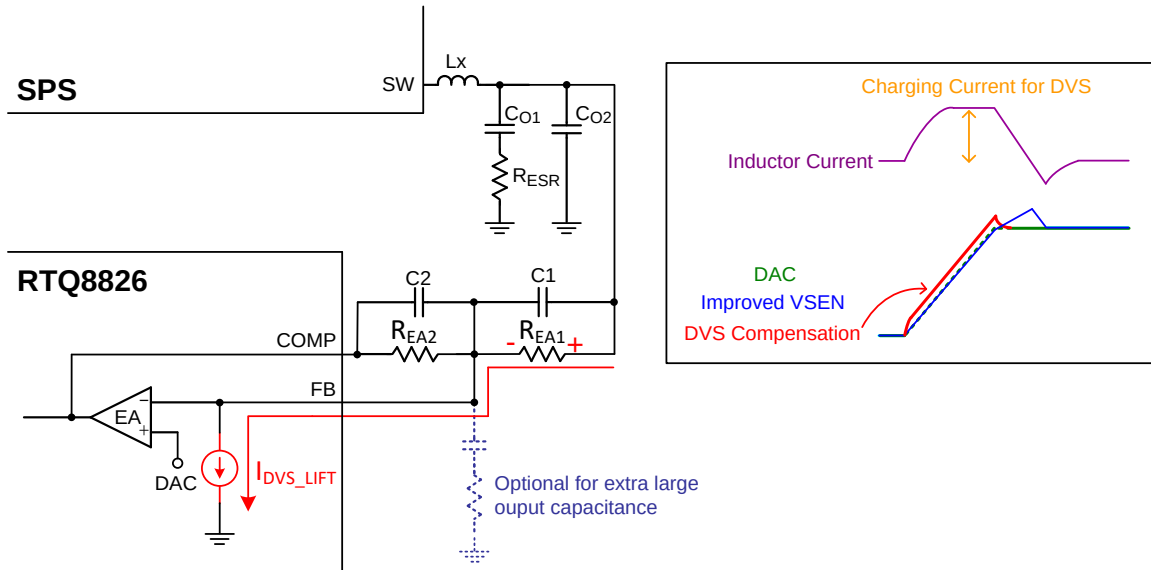


Figure 11. DVS Compensation

Differential Remote Sense Setting

The VR provides differential remote-sense inputs to eliminate the effects of voltage drops along the board traces, SOC internal power routes and socket contacts. The SOC contains on-die sense pins, VCC_SENSE and VSS_SENSE. The related connection is shown in Figure 12. The DAC voltage is referred to RGND to provide accurate voltage at remote SOC side. While SOC is not mounted on the system, two resistors of typical 100Ω are required to provide output voltage feedback.

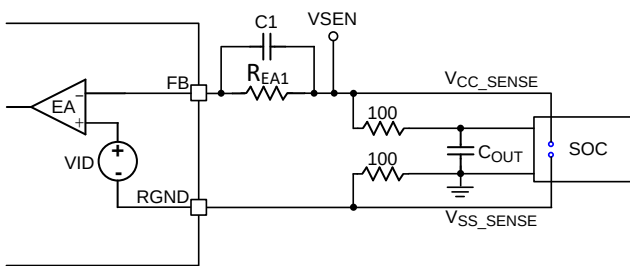


Figure 12. Remote Sensing Circuit

Switching Frequency

The topology G-NAVP™ (Green Native AVP) is one kind of current-mode constant on-time control. It generates an adaptive TON (PWM) with input voltage (VIN) for better line regulation. The TON is also adaptive to DAC voltage. For DAC < 0.6V application, the

adaptive TON is based on constant current ripple concept for better output voltage ripple size control. For DAC ≥ 0.6V application, the adaptive TON is based on constant frequency concept for better efficiency performance. Figure 13 shows the relationships between switching frequency vs DAC and current ripple vs DAC. The RTQ8826 provides a parameter setting of kTON to design TON width. The kTON is set via MFR_Kton (D7h) register.

The equations of TON are listed below :

DAC ≥ 0.6V,

$$T_{ON} = 2.2634 \mu s \times \frac{DAC}{k_{TON} \times (V_{IN} - 0.6V)} + 10ns$$

0.3 < DAC < 0.6V,

$$T_{ON} = 1.3584 \mu s \times \frac{1}{k_{TON} \times (V_{IN} - DAC)} + 10ns$$

DAC ≤ 0.3V,

$$T_{ON} = 1.3584 \mu s \times \frac{1}{k_{TON} \times (V_{IN} - 0.3)} + 10ns$$

The switching frequency can be derived from TON as shown below. The losses in the main power stage and driver characteristics are considered.

$$\text{Freq} = \frac{\text{DAC} + \frac{I_{CC}}{N} \times (\text{DCR} + \frac{R_{ONLS,max}}{n_{LS}} - N \times R_{LL})}{\left[V_{IN} + \frac{I_{CC}}{N} \times \left(\frac{R_{ONLS,max}}{n_{LS}} - \frac{R_{ONHS,max}}{n_{HS}} \right) \right] \times (T_{ON} - T_D + T_{ON,VAR}) + \frac{I_{CC}}{N} \times \frac{R_{ONLS,max}}{n_{LS}} \times T_D}$$

DAC : DAC voltage

VIN : input voltage

ICC : loading current

N : total phase number

R_{ONHS,max} : maximum equivalent high-side RDS(ON) n_{HS} : number of high-side MOSFETs

R_{ONLS,max} : maximum equivalent low-side RDS(ON)

n_{LS} : number of low-side MOSFETs

T_D : summation of the high-side MOSFET delay time and rising time

T_{ON,VAR} : on-time variation value

DCR : inductor DCR

R_{LL} : loadline setting (Ω)

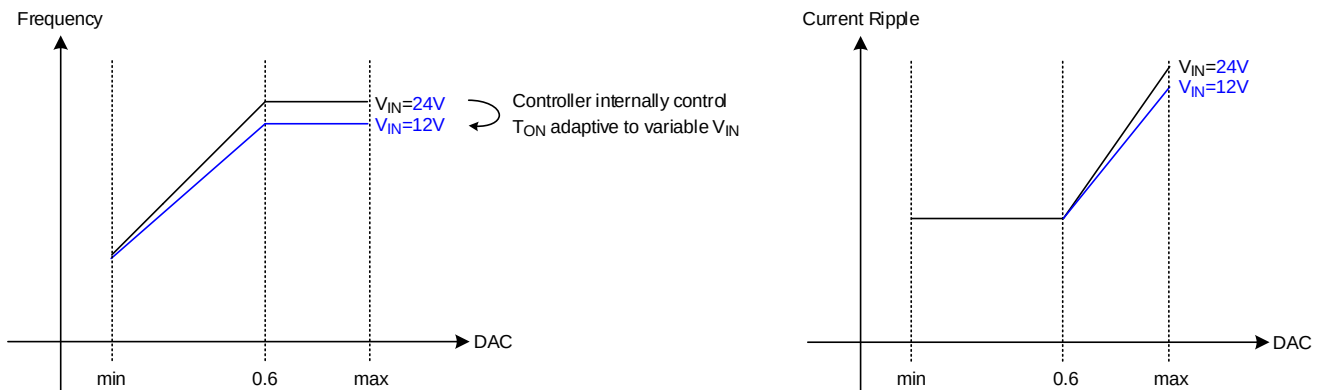


Figure 13. Switching Frequency and Current Ripple with Different DAC

Absolutely Quick Response (ABS_QR) and Adaptive Quick Response(AQR)


The RTQ8826 provides Absolutely Quick Response (ABS_QR) and Adaptive Quick Response (AQR) to optimize transient response for no load-line and load-line system respectively. Figure 14 shows the mechanism of Absolutely Quick Response (ABS_QR) and Adaptive Quick Response (AQR). The output voltage is monitored at the VSEN pin. Absolutely Quick Response (ABS_QR) is illustrated in Figure 14(a), the Vabs represents DAC minus ABS_QR Threshold. Since the output voltage does not change with loading during steady-state in no load-line system, RTQ8826 detects the absolute value of output voltage drop. While the absolute value of output voltage drop exceeds ABS_QR_threshold, an ABS_QR_TRIG signal is generated to turn on all PWMs at the same time, and ABS_QR_TRIG width is decided by the duration that the output voltage drop exceeds the ABS_QR_threshold.

In load-line system, ABS_QR is not applicable because output voltage decreases with the increasing loading current. Instead of ABS_QR, RTQ8826 provides Adaptive Quick Response (AQR) which detects output voltage drop slew rate in Figure 14(b). While the slew rate exceeds the AQR threshold, AQR_TRIG signal is generated until output voltage slew rate significantly slows down. The output voltage slew rate transition also indicates that inductor current almost reaches the loading current. Under such mechanism, AQR_TRIG width is adaptive to variable loading step. The AQR starting trigger threshold equation is described as below :


$$\text{AQR Starting Trigger Threshold} = -4u \times \frac{dV_{SEN}}{dt}$$

As ABS_QR_TRIG or AQR_TRIG is triggered, PWM_QR is generated by QR generation to force all PWMs to turn on simultaneously in Figure 14(c). For ABS_QR, PWM_QR pulse width is decided by output voltage drop and the maximum is adjustable by QR_WD_MAX(D8h[2:1]). For AQR, PWM_QR pulse width is decided by slew rate of output voltage drop and the maximum is adjustable by QR_WD_MAX(D8h[2:1]). The RTQ8826 also provides various ABS_QR threshold via MFR_ABS_QR (DFh) register and AQR threshold


via MFR_AQR (D8h) register. Smaller threshold indicates larger ABS_QR_TRIG or AQR_TRIG width. For ABS_QR, to avoid triggering ABS_QR in the steady-state, note that the threshold should be larger than output voltage ripple. For AQR, to avoid triggering AQR in the steady-state, note that the threshold should be larger than the falling slew rate of output voltage ripple and the falling slew rate of overshoot.

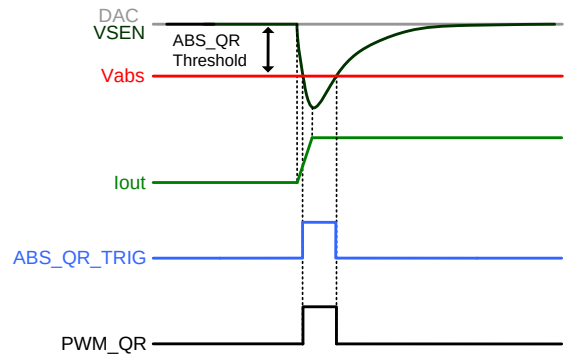

(a). Absolutely Quick Response Mechanism

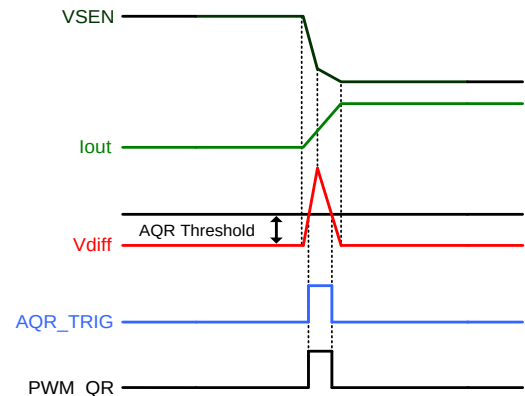

(b). Adaptive Quick Response Mechanism

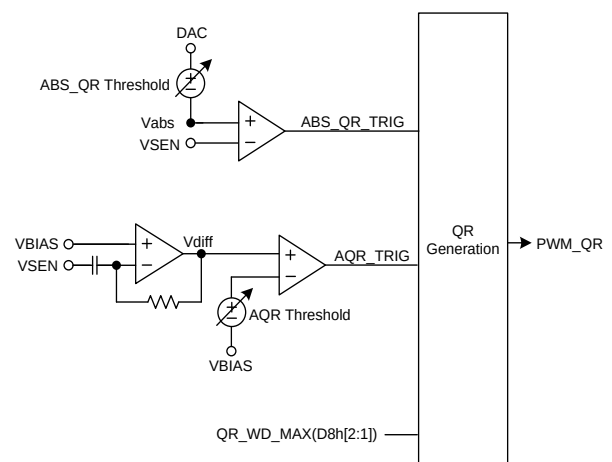


(c). Quick Response Block Diagram

Figure 14. Quick Response Mechanism



Reset VOUT

Without power cycling, the VOUT_COMMAND value and the corresponding output voltage can be reset to the default value which is latched when the devices are powered up from VCC. When the RESET# pin is pulled low, the RTQ8826 sets the VOUT_COMMAND value to the default value. Figure 15 shows the timing diagram for resetting the output voltage. When the RESET# pin is asserted low, after a short delay (greater than 2 μ s),

the output voltage begins to transition from the current value to the default VOUT_COMMAND value according to the slew-rate set in the VOUT_TRANSITION_RATE command. The reset VOUT mode selection in the MFR_RESET_RESPONSE_Rail_Fault_Mode (DAh) register is set. The VOUT_COMMAND value does not change to any values programmed in the VOUT_COMMAND register while the RESET# pin is held low.

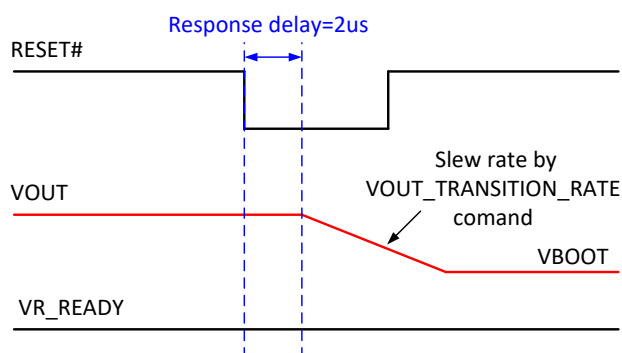

(a). Mode 1 : The output voltage begins to transition from the current value to the VBOOT value.

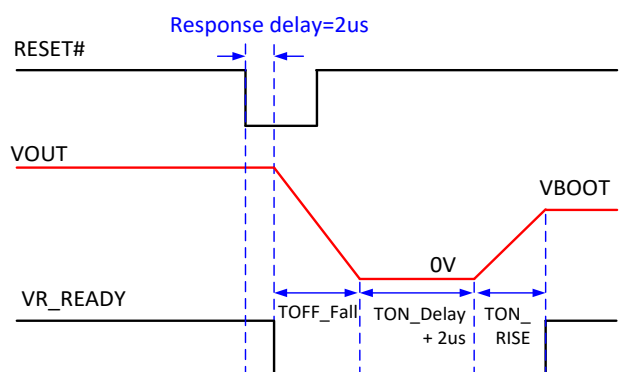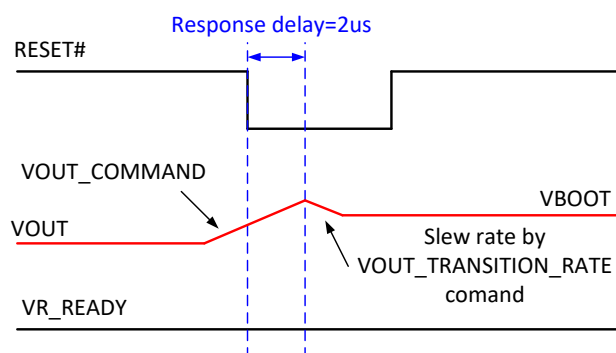

(b). Mode 2 : Rail is restarted.

Figure 15. Output Voltage Reset

Output Voltage Discharge

When the RTQ8826 is disabled through VIN, EN or PMBus OPERATION command, both the high-side and low-side MOSFETs are turned off. A discharge MOSFET connected between VSEN and GND is turned on to discharge the output voltage. The typical switch on-resistance of this MOSFET is about 40 Ω .


Per Phase SPS Current Sense

To achieve higher efficiency, SPS current sense is accomplished by sensing each SPS IOUT output individually using a 1.32V common mode buffer ISENxN pin to provide biasing for the current sense signal. The current sense lines should be run as differential pairs from the SPS back to the RTQ8826 on the same layer. Differential voltage range of current sense input ($V_{CSIN} = ISENxP - ISENxN$) is -40mV to 400mV with V-type SPS and -10mV~100mV with I-type SPS individually through pin setting with SET1 pin.


For V-type SPS, SPS IOUT output voltage represents current information at 5mV/A. To prevent V_{CSIN} from exceeding current sense amplifier input range, 1R is internally closed through pin setting, as illustrated in Figure 16(a). The internal current sense input is 0.25 time of V_{CSIN} through resistance divider.

For I-type SPS, SPS IOUT output current represents current information at 5 μ A/A. To prevent V_{CSIN} from exceeding current sense amplifier input range, 1R is internally open through pin setting, and RIMON is suggested to be 249 Ω and must be placed at IC side, as illustrated in Figure 16(b).

The current signal $I_{CS,PERx}$ is mirrored for loadline controls current reporting and current balance. The mirrored current to I_{MONx} is AMIRROR times $I_{CS,PERx}$. AMIRROR is internal current mirror gain of per phase current sense ($I_{MON} = AMIRROR \times I_{CS,PERx}$, AMIRROR = 1).

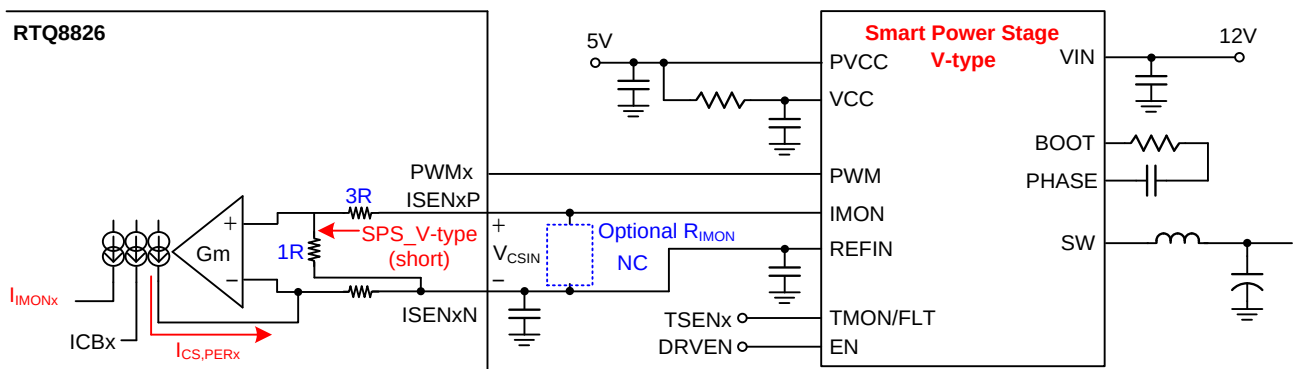

(a). V-type SPS Current Sense Configuration

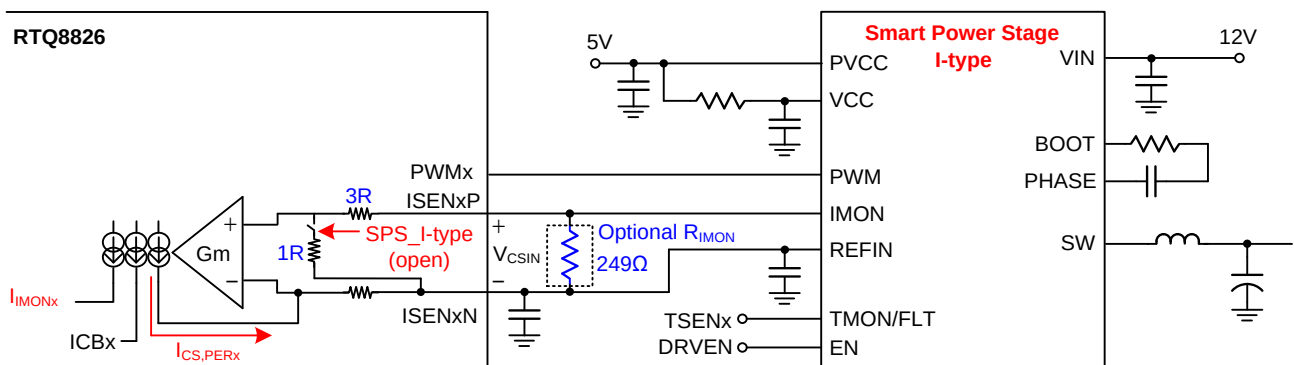

(b). I-type SPS Current Sense Configuration

Figure 16. SPS Current Sense Configuration

Under-Voltage Lockout (UVLO)

The RTQ8826 monitors the input voltage of power stage and the controller using the VIN and VCC pins to detect an under-voltage condition.

The device provides flexible user adjustment of the under-voltage lockout (UVLO) threshold and hysteresis for VIN. Two PMBus commands, VIN_ON (35h) and VIN_OFF (36h), allow the user to independently set turn on and turn off thresholds of these input voltages, with a minimum of 1.1V turn off to a maximum 3V turn on. Note that VIN pin must be connected to +12V supply through a resistor divider. While the VIN falls below VIN_OFF(36h) threshold, the VIN_UVLO fault is triggered. The device will de-assert VR_READY, assert SMBALERT#, STATUS_INPUT[3] is set to 01h and turns off both the high-side and low-side MOSFETs to stop power conversion immediately.

While the VCC falls below ($V_{CC_POR_R} - \Delta V_{CC_POR_F_HYS}$), the VCC_UVLO fault is triggered. The device will shut down and PWM will be Hi-Z state and PMBus registers will be invalid. For more information, see Table 3.

Thermal Monitoring and Over-Temperature

Protection (OTP)

The RTQ8826 supports integrated power stages with dedicated temperature monitors. The VR_HOT# pin indicates the temperature status of the voltage regulator. The VR_HOT# pin is an open-drain output and an external pull-up resistor is required. The VR_HOT# signal can be used to inform the system that the temperature of the voltage regulator is too high and the load should reduce its power consumption. VR_HOT# only indicates a thermal warning, not a fault. The RTQ8826 asserts VR_HOT and SMBALERT#, and PWM maintains control of FETs while OT_WARNING is triggered.

The OT_FAULT_LIMIT (4Fh) register set the over-temperature threshold and the MFR_VR_HOT_Hys (D9h) register set the VR_HOT# hysteresis. If temperature drops below OT warning condition minus hysteresis and then VR_HOT# de-asserts. The OTP is triggered and turns off both the high-side and low-side MOSFETs. Figure 17 shows the thermal warning to VR_HOT# and Figure 18 shows the over-temperature fault to shut down. There are three kinds of OTP Fault response: Latch-off, Restart, and Ignore. That can be set through the OT_FAULT_RESPONSE (50h) register. Table 3 summarizes the Fault Protection Responses scheme.

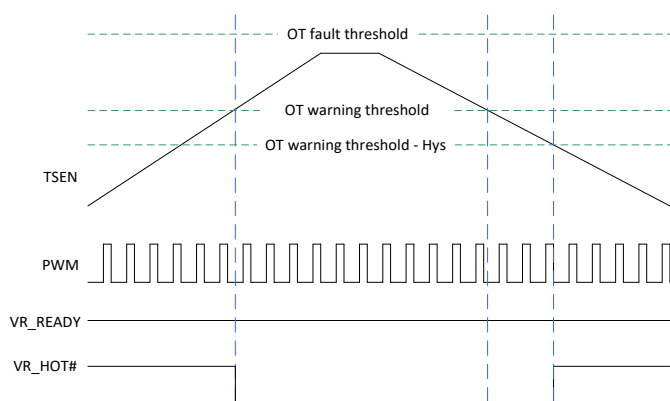


Figure 17. Thermal Warning

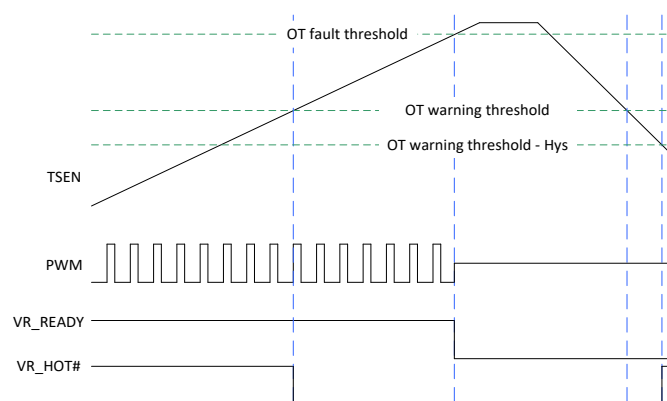


Figure 18. Over-temperature Fault

Slow Over-Current Protection (SLOW_OCP)

The RTQ8826 calculates the total current by summing of phase currents from all active phases. The IOUT_SLOW_OC_FAULT_LIMIT (46h) register sets the total over current threshold and the SLOW_OC_DLY_Time (D6h[1:0]) register sets the SLOW_OC delay time = 20 μ s/32 μ s/44 μ s/56 μ s. It is recommended that the SLOW_OCP threshold be set at number of active phases multiplied by the current handling capability of the power stage. The SLOW_OCP is masked during

VOUT transition period and 80 μ s after VOUT settles. The RTQ8826 de-asserts VR_READY, asserts SMBALERT# and turns off both the high-side and low-side MOSFETs while SLOW_OCP is triggered. Figure 19 shows the Slow Over-Current Fault to shut down. There are three kinds of SLOW_OCP Fault response : Latch-off, Restart , and Ignore. That can be set through the IOUT_SLOW_OC_FAULT_RESPONSE (47h) register. Table 3 summarizes the Fault Protection Responses scheme.

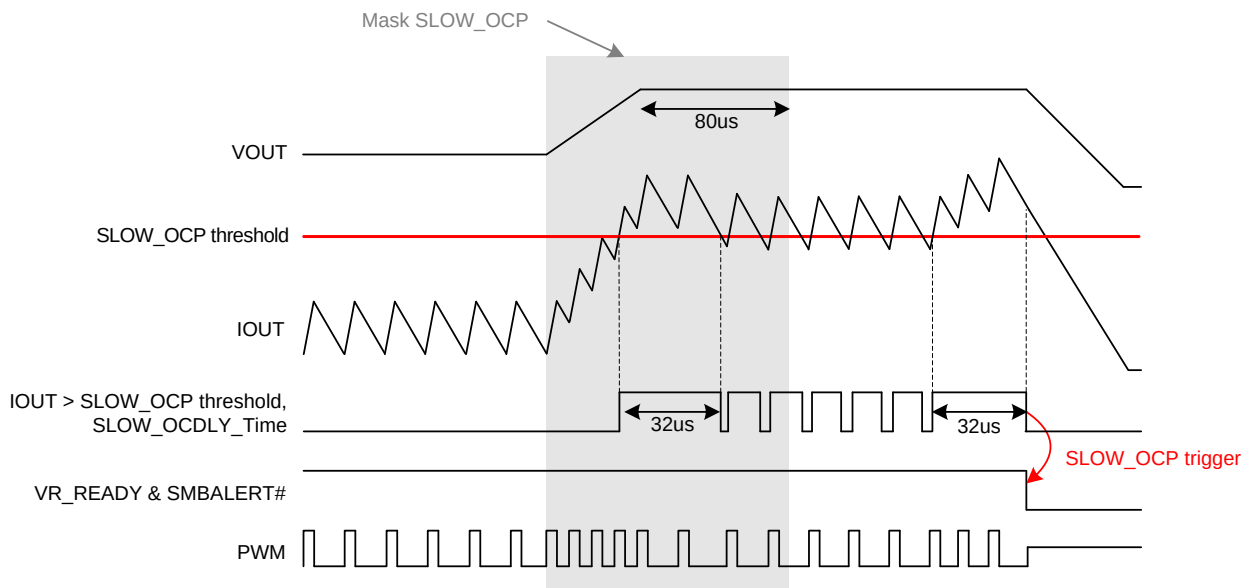


Figure 19. Slow Over-Current Fault SLOW_OC_DLY_Time (D6h[1:0]=01)

Fast Over-Current Protection (FAST_OCP)

The RTQ8826 provides Fast Over-Current Protection (FAST_OCP) in soft-start state after delay time = 2 μ s, e.g. hiccup, VOUT transition period etc. The IOUT_FAST_OC_FAULT_LIMIT (D6h[3:2]) register sets the value of the per-phase output current, in Amps, that causes an fast over-current fault condition. It is recommended that the FAST_OCP threshold(per-phase) be set above SLOW_OCP threshold(sum) to protect the device not destroyed from charging current or inrush current in soft-start state. The RTQ8826 de-asserts VR_READY, asserts SMBALERT# and turns off both the high-side and low-side MOSFETs while FAST_OCP is triggered. Figure 20 shows the Fast Over-Current Fault to shut down. There are three kinds of FAST_OCP Fault response : Latch-off, Restart , and

Ignore. That can be set through the MFR_IOUT_FAST_OC_FAULT_RESPONSE (E1h) register. Table 3 summarizes the Fault Protection Responses scheme.

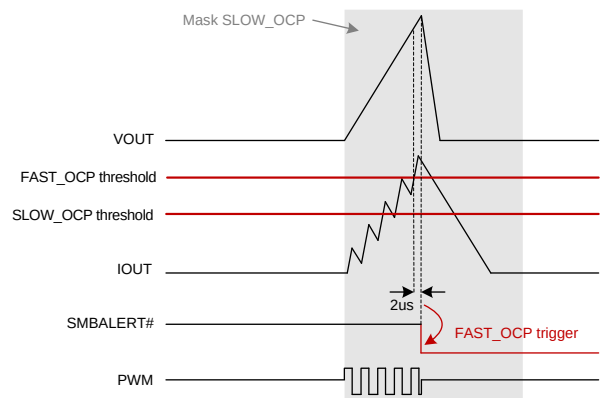


Figure 20. Fast Over-Current Fault

Under-Voltage Protection (UVP)

The RTQ8826 monitors the output voltage using the VSEN pin to detect an under-voltage condition. The VOUT_UV_FAULT_LIMIT (44h) register sets the under-voltage threshold. If the VSEN voltage drops below the UVP threshold with 3 μ s debounce time, the RTQ8826 de-asserts VR_READY, asserts SMBALERT# and turns off both the high-side and low-

side MOSFETs while UVP is triggered. The UVP is masked during VOUT transition period and 80 μ s after VOUT settles. Figure 21 shows the over-current fault to shut down. There are three kinds of UVP Fault response : Latch-off, Restart, and Ignore. That can be set through the VOUT_UV_FAULT_RESPONSE (45h) register. Table 3 summarizes the Fault Protection Responses scheme.

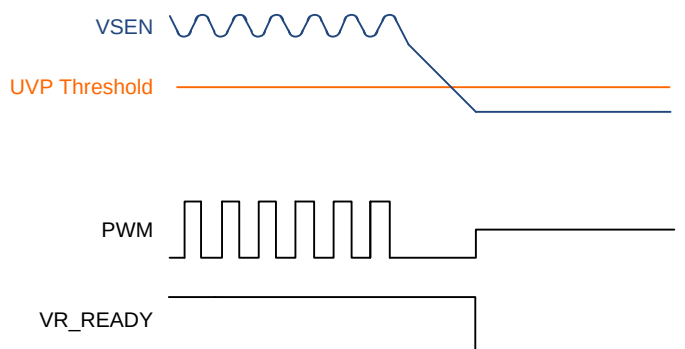


Figure 21. Under-Voltage Fault

Over-Voltage Protection (OVP)


The RTQ8826 monitors the output voltage using the VSEN pin to detect an over-voltage condition. There are three kinds of OVP behaviors, and the OVP behavior can be set through the MFR_OV_Behavior (DBh) register.

For the first OVP behavior, when OVP is triggered with 0.5 μ s filter time, the RTQ8826 de-asserts VR_READY, asserts SMBALERT# and turns off both high-side and low-side power MOSFETs.


For the second OVP behavior, when OVP is triggered with 0.5 μ s filter time, the RTQ8826 de-asserts VR_READY, asserts SMBALERT# and DAC voltage of the OVP rail will slowly ramp down to 0V.

For the third OVP behavior, when OVP is triggered with 0.5 μ s filter time, the RTQ8826 de-asserts VR_READY, asserts SMBALERT# and forces all PWMs low to turn


on low-side power MOSFETs. The PWM remains low until the output voltage is pulled down below DAC. The OVP mechanism is shown in Figure 22. There are three kinds of OVP Fault response : Latch-off, Restart, and Ignore. That can be set through the VOUT_OV_FAULT_RESPONSE (41h) register. Table 3 summarizes the Fault Protection Responses scheme.

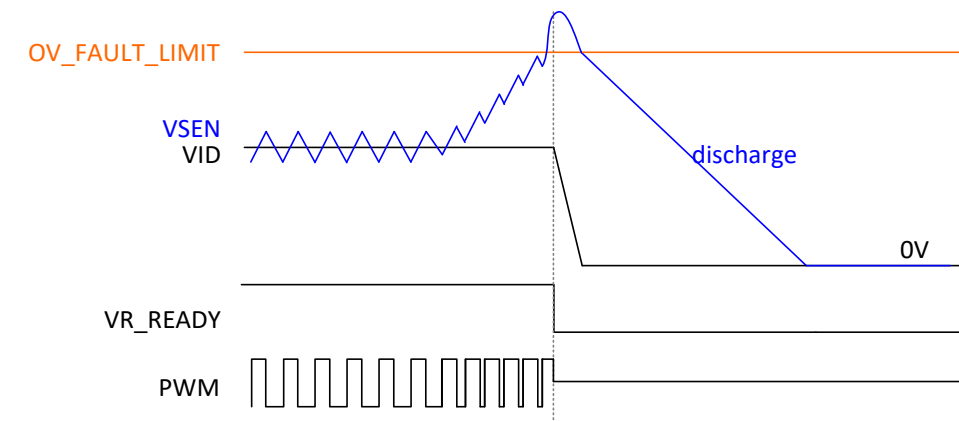

(a). The first OVP behavior (HiZ shutdown mode)

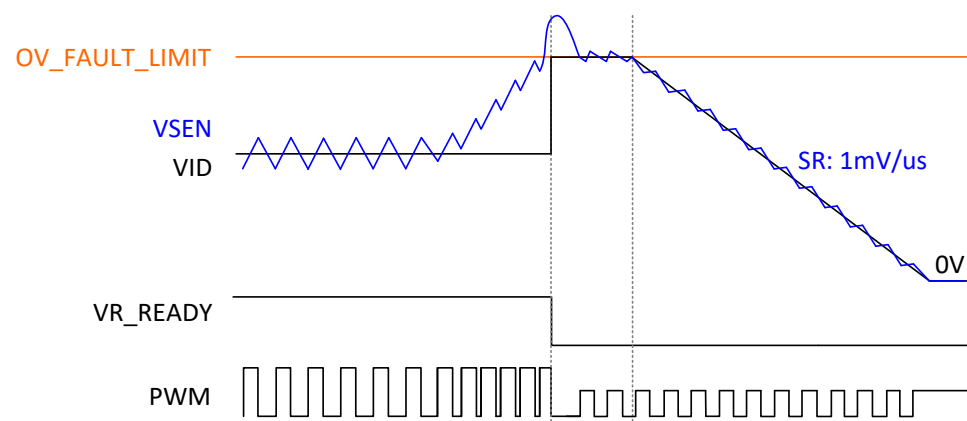

(b). The second OVP behavior (Soft-shutdown mode)

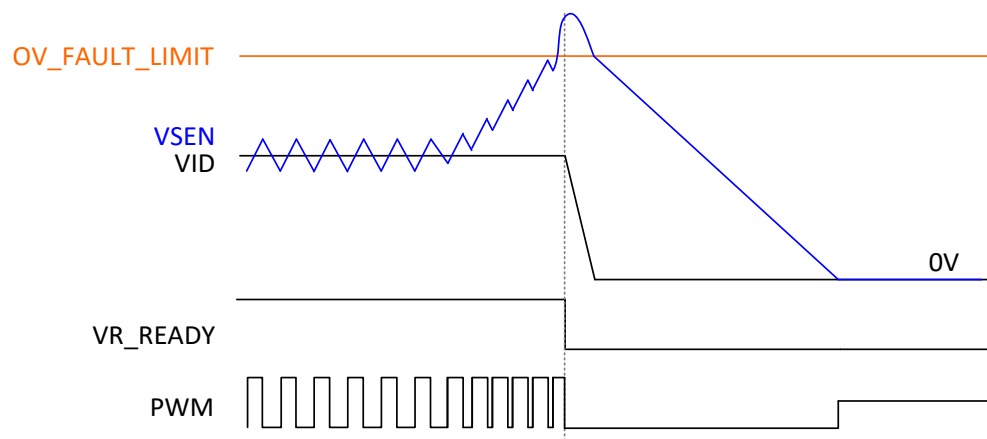

(c). The third OVP behavior (Turn on the low-side MOSFET)

Figure 22. Over-Voltage Fault

SPS Fault

The RTQ8826 supports integrated power stages with SPS Fault. The SPS (Smart Power Stage) will pull the temperature reporting pin(TSEN) high when a driver fault is detected by the integrate power stage. The RTQ8826 de-asserts VR_READY, asserts SMBALERT# and turns off both high-side and low-side power MOSFETs while TSEN exceeds Driver Fault Comp threshold. Then, RTQ8826 restarts after both 100ms and SPS Fault = L. Driver faults include over-current, over-temperature, high-side FET short, and low-side FET short etc. Table 3 summarizes the Fault Protection Responses scheme.

Telemetry for VOUT/IOUT/Temperature

The RTQ8826 supports the telemetry function for VOUT/IOUT/Temperature.

The device continually digitizes the sensed output voltage from differential voltage sense input (VSEN and RGND), and averages it to reduce measurement noise. Use the MFR_VOUT_RPT_GAIN (E0h) command to cancel IR drop effect to improve accuracy of VOUT reporting. Then the current value is stored in the READ_VOUT (8Bh) register.

To reduce the measurement noise, RTQ8826 continually senses and digitizes the corresponding per-phase currents, and averages them to the sum-current. $V_{SENxP} - I_{SENxN}$ voltage represents current information at 5mV/A. Using the IOUT_CAL_OFFSET (39h) command to null out any offset current in Amps, and use MFR_IOUT_CAL_GAIN (DEh) command to calibrate for the READ_IOUT (8Ch) result by removing systematic errors related to board layout after assembly. Then the current value is stored in the READ_IOUT (8Ch) register.

The device continually digitizes the sensed the corresponding channel temperature from temperature output pin of SPS (TSEN), and averages it to reduce measurement noise. V_{TSEN} voltage represents temperature information at $8mV/^{\circ}C + 0.6V$. Then the current value is stored in the READ_TEMPERATURE_1 (8Dh) register.

Fault Protection Responses

Table 3 summarizes the various fault protections and the corresponding responses.

Table 3. Fault Protection and Response Summary

FAULT or WARN	PMBus PROGRAMMING	FAULT RESPONSE	FET BEHAVIOR	ACTIVE DURING TON_RISE(+80μs)	DURING ACTIVE Regulation	SMBALERT#	VR_READY
VIN UVLO	VIN_ON(35h)	Shutdown	Both FETs off	Yes	Yes	Low (After VIN > VIN_ON)	Low
	VIN_OFF(36h)						
OVP	OV_FAULT_LIMIT(40h)	Latch-off	High-side FET is OFF, low-side FET response is configured by MFR_OV_Behavior[1:0]: OFF/ turn-on for soft-shutdown/ turn-on till VOUT=0V	Yes	Yes	Low	Low
		Restart	High-side FET is OFF, low-side FET response is configured by MFR_OV_Behavior[1:0]: OFF/ turn-on for soft-shutdown/ turn-on till VOUT=0V and then restart after 100ms +TON_DELAY			Low	Low
		Ignore	PWM maintains control of FETs			Low	High
UVP	UV_FAULT_LIMIT(44h)	Latch-off	Both FETs are off	No	Yes	Low	Low
		Restart	Both FETs are off, then restart after 100ms + TON_DELAY			Low	Low
		Ignore	PWM maintains control of FETs			Low	High
SLOW_OCP	IOUT_SLOW_OC_FAULT_LIMIT(46h)	Latch-off	Both FETs are off	No	Yes	Low	Low
		Restart	Both FETs are off, then restart after 100ms + TON_DELAY			Low	Low
		Ignore	PWM maintains control of FETs			Low	High
FAST_OCP	IOUT_FAST_OC_FAULT_LIMIT(D6h[3:2])	Latch-off	Both FETs are off	Yes	Yes	Low	Low
		Restart	Both FETs are off, then restart after 100ms + TON_DELAY			Low	Low
		Ignore	PWM maintains control of FETs			Low	High
OTP	OT_FAULT_LIMIT(4Fh)	Latch-off	Both FETs are off	Yes	Yes	Low	Low
		Restart	Both FETs are off, then restart after 100ms + TON_DELAY & OTP<"OTP_FAULT_LIMIT-15 degree"			Low	Low
		Ignore	PWM maintains control of FETs			Low	High
OT_WARNING	OT_WARN_LIMIT(51h)	VR_HOT# assert	PWM maintains control of FETs	Yes	Yes	Low	High

FAULT or WARN	PMBus PROGRAMMING	FAULT RESPONSE	FET BEHAVIOR	ACTIVE DURING TON_RISE(+80μs)	DURING ACTIVE Regulation	SMBALERT#	VR_READY
SPS FAULT	X	Restart	Both FETs are off, then restart after 100ms + TON_DELAY & SPS_FAULT=L	Yes	Yes	Low	Low

Thermal Considerations

The junction temperature should never exceed the absolute maximum junction temperature $T_{J(MAX)}$, listed under Absolute Maximum Ratings, to avoid permanent damage to the device. The maximum allowable power dissipation depends on the thermal resistance of the IC package, the PCB layout, the rate of surrounding airflow, and the difference between the junction and ambient temperatures. The maximum power dissipation can be calculated using the following formula :

$$P_{D(MAX)} = (T_{J(MAX)} - T_A) / \theta_{JA}$$

where $T_{J(MAX)}$ is the maximum junction temperature, T_A is the ambient temperature, and θ_{JA} is the junction-to-ambient thermal resistance.

For continuous operation, the maximum operating junction temperature indicated under Recommended Operating Conditions is 125°C. The junction-to-ambient thermal resistance, θ_{JA} , is highly package dependent. For a WQFN-48L 7x7 package, the thermal resistance, θ_{JA} , is 26.5°C/W on a standard JEDEC 51-7 high effective-thermal-conductivity four-layer test board. The maximum power dissipation at $T_A = 25^\circ\text{C}$ can be calculated as below :

$$P_{D(MAX)} = (125^\circ\text{C} - 25^\circ\text{C}) / (26.5^\circ\text{C/W}) = 3.77\text{W for a WQFN-48L 7x7 package.}$$

The maximum power dissipation depends on the operating ambient temperature for the fixed $T_{J(MAX)}$ and the thermal resistance, θ_{JA} . The derating curves in Figure 23 allows the designer to see the effect of rising ambient temperature on the maximum power dissipation.

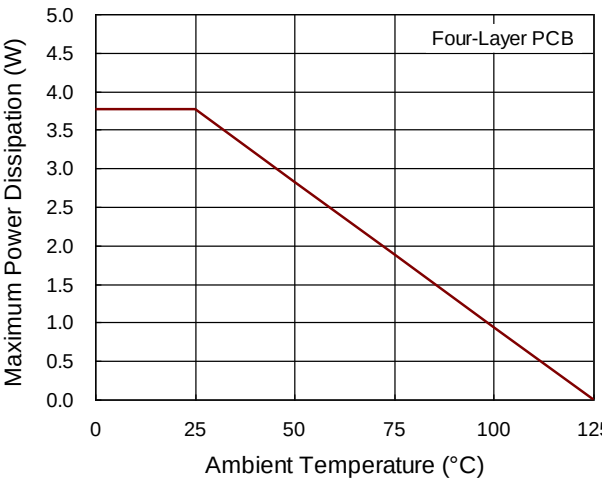


Figure 23. Derating Curve of Maximum Power Dissipation

Layout Guideline

Layout is critical for good power-supply design. A good layout design optimizes supply efficiency, alleviates thermal stress, and most importantly, minimizes the noise and interactions among traces. To achieve these, it is important for the designer to understand the current delivery paths and signal flows in the switching power supply. The following discussion presents design considerations for a proper layout design for multi-phase synchronous buck controller.

1. Power Stage

The power stage circuit includes the components that conduct high current. The large current traces should be short and wide to minimize PCB inductance, resistance and voltage drop. In a synchronous buck converter, Figure 24 identifies the continuous current and pulsating current paths. Due to the parasitic inductance in the pulsating current paths, it not only radiates magnetic fields, but also generates high voltage ringing and spikes across the PCB traces and MOSFETs. Thus, proper routing of power stage is important in the layout task.

- **Minimize Inductance in Pulsating Current Loop.**

- ▶ Minimize VIN power delivery Loop.
- ▶ VIN power or PGND planes of a multilayer PCB should not be segmented.
- ▶ The large current traces should be short and wide to minimize PCB inductance, resistance and voltage drop.
- ▶ To minimize the coupling capacitance between SW node and other noise-sensitive traces, the SW copper area should be minimized.
- **Minimize the pulsating loop (hot loop) inductance and absorb switching noise.**
 - ▶ As shown in Figure 25, to reduce ESR and ESL of capacitor and PCB, use low ESR MLCC types and multiple capacitors of different size like 1206, 0402 or 0603 size type close to the power loops of input and output.
 - ▶ To reduce the noise in the input power loop, it is highly recommended to add extra L-C filtering in the input line. When using pure inductance for L1, it is necessary to add the electrolytic capacitor C2 to damp any input supply ringing and ensure stable input supply.

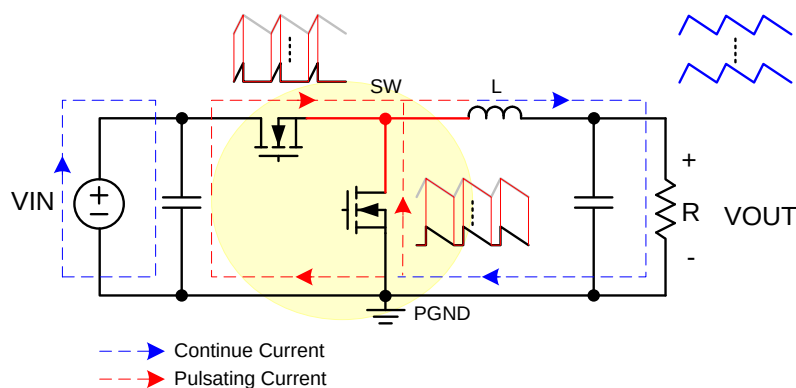


Figure 24. Buck Converter Current Loops

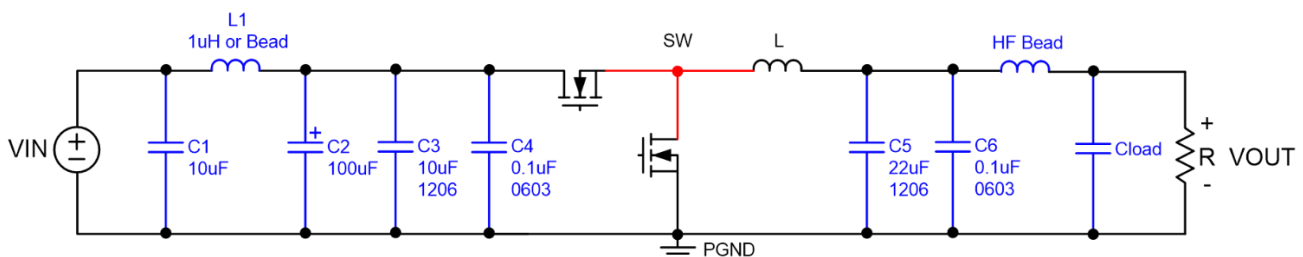


Figure 25. Input and Output Filters of Buck Converter

2. Controller Placement and General Rules

Two types of electrical coupling should be considered: inductive (magnetic fields) and capacitive (electric fields). The following are general layout rules for suppressing noise coupling:

- **Place RTQ8826 and its peripheral parts in a quiet area.**
 - ▶ To minimize the influence of noise, place RTQ8826 and its peripheral parts in a quiet area that keeps away from noise source such as VIN power delivery path, Phase node (Switch node), gate driver, PWM, Inductor and high-speed signal.
 - ▶ As shown in Figure 26, there are three location options for the controller and its peripheral circuit are recommended.
- **If the controller must be placed near the power stage, please keep the noise-sensitive signal a sufficient distance away the noise source.**
 - ▶ The noise sensitive signals such as current sense and voltage sense must keep away from VIN power delivery path, Phase node (Switching node) and Inductor.
 - ▶ RGND via is very sensitive to noise and needs attention. The magnetic field generated by fast changing signal in a via can induce a stronger electromotive force on a neighboring via. Therefore, the spacing from VIN Plane to RGND via shall keep at least 3mm that is proportional to IOUT. For more information, please refer to Figure 27.

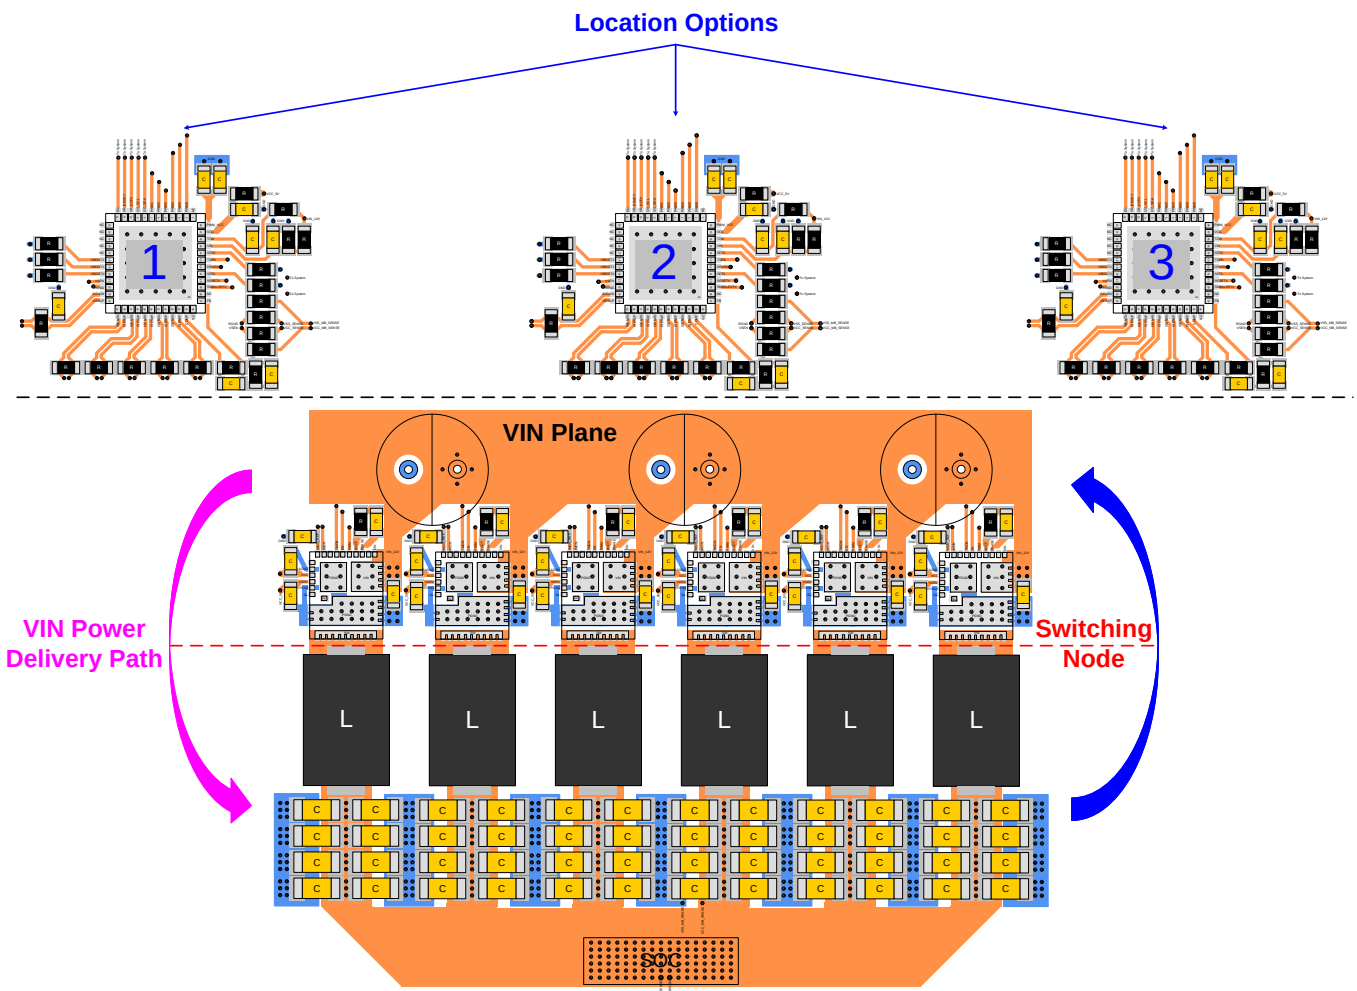


Figure 26. Controller Placement Relative to Power Stages

- ▶ As shown in Figure 28, if the PCB layout is too dense and the placement options 1~2 are not allowed, the RGND can be kept away from the VIN plane by rotating the controller and placing the RGND on the other side.
- **Figure 29 to Figure 32, summarize how to route multi-phase synchronous buck controller with 6-layer board.**
- ▶ Notice the parasitic Inductance in the pulsating current paths, proper power component and controller placement, keep critical loops small, and RGND via must keep away from noise source, place a whole layer GND copper plane under the switching loops, and carefully route the sensitive traces.

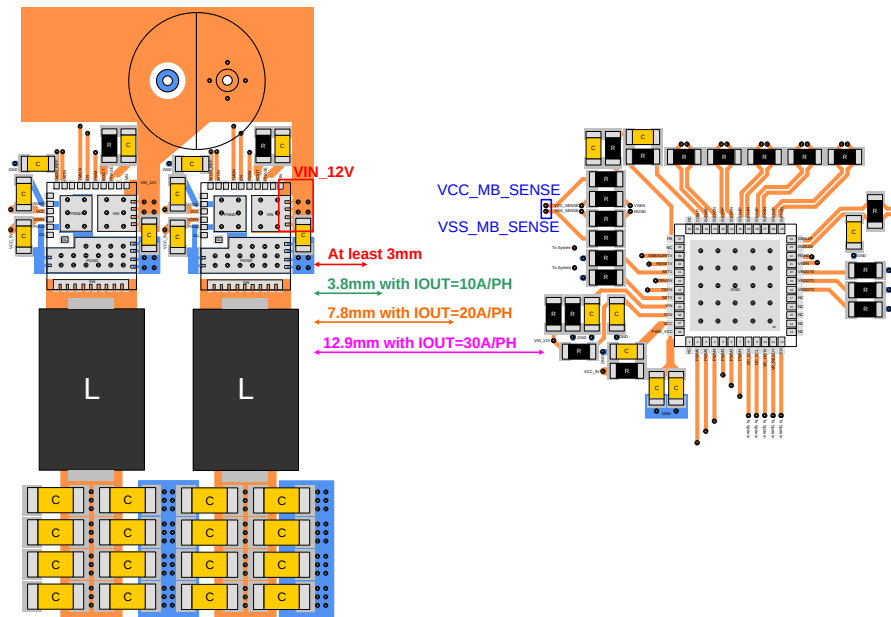


Figure 27. The Spacing from Power Stage to Peripheral Circuit of Controller

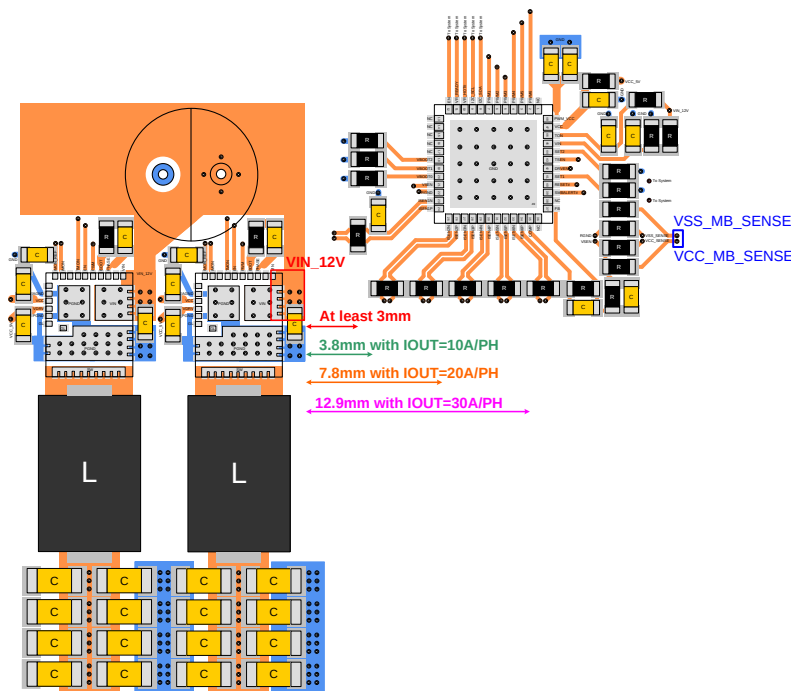


Figure 28. Controller Rotation to the Other Side

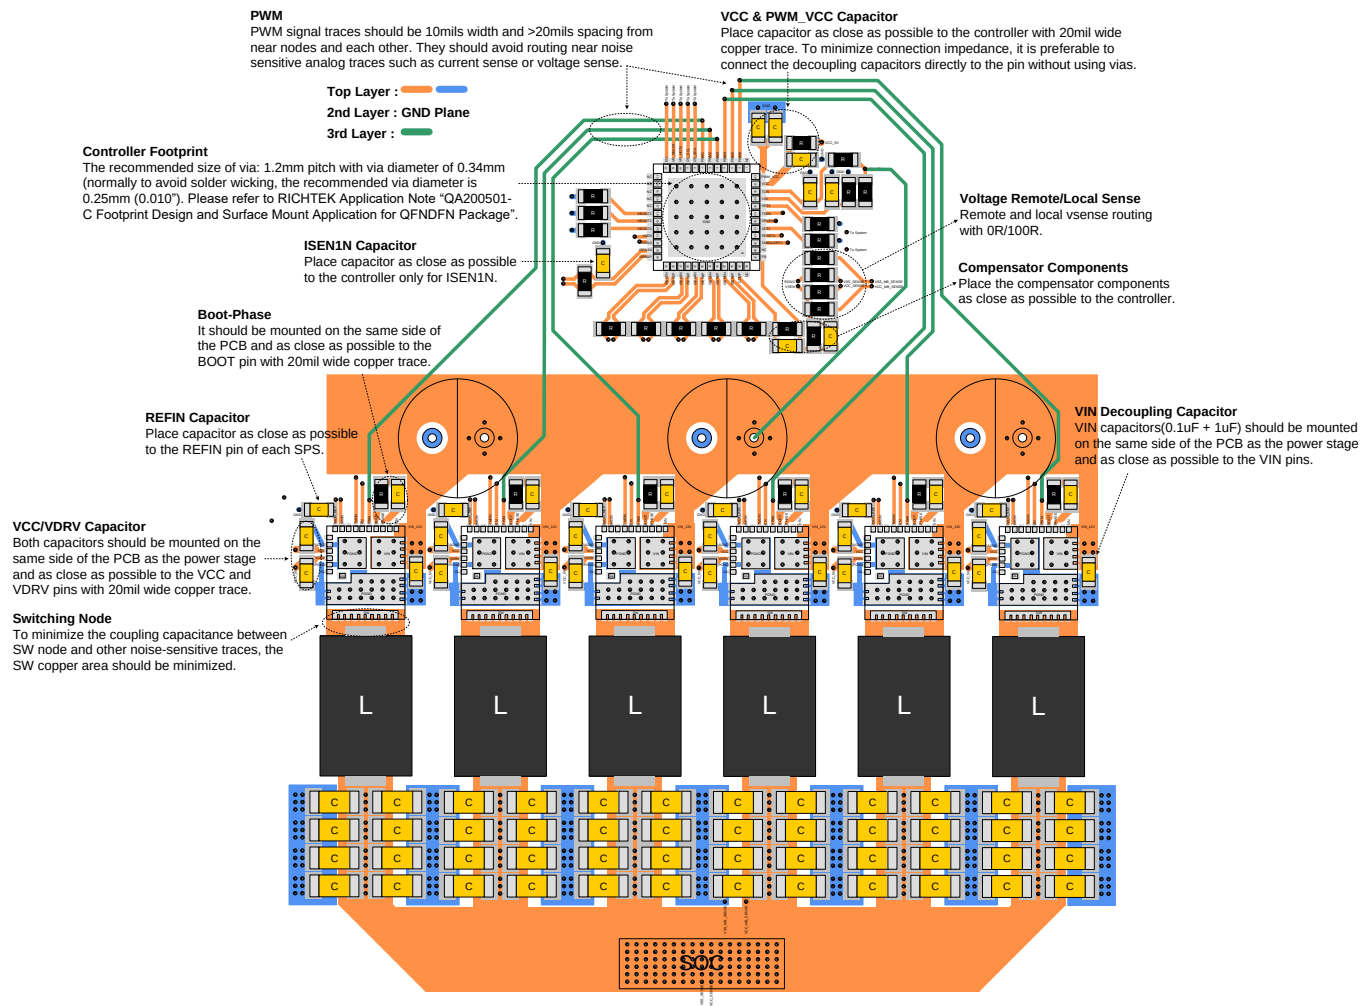


Figure 29. Layout Suggestion for RTQ8826: Top/2nd/3rd Layer

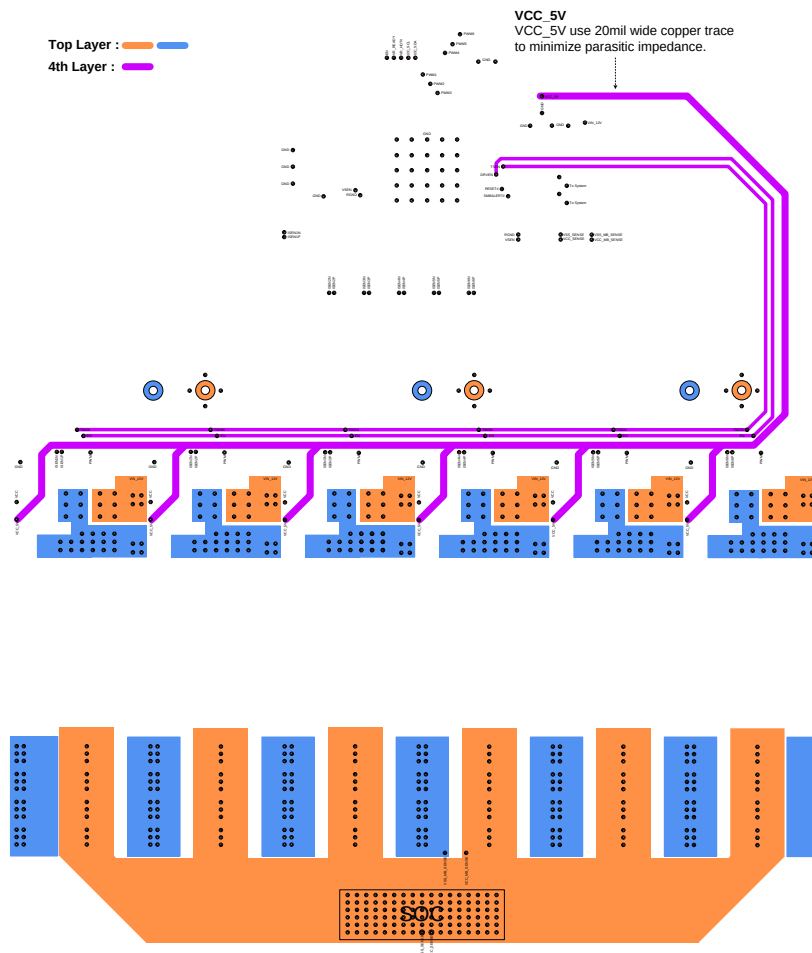


Figure 30. Layout Suggestion for RTQ8826: Top/4th Layer

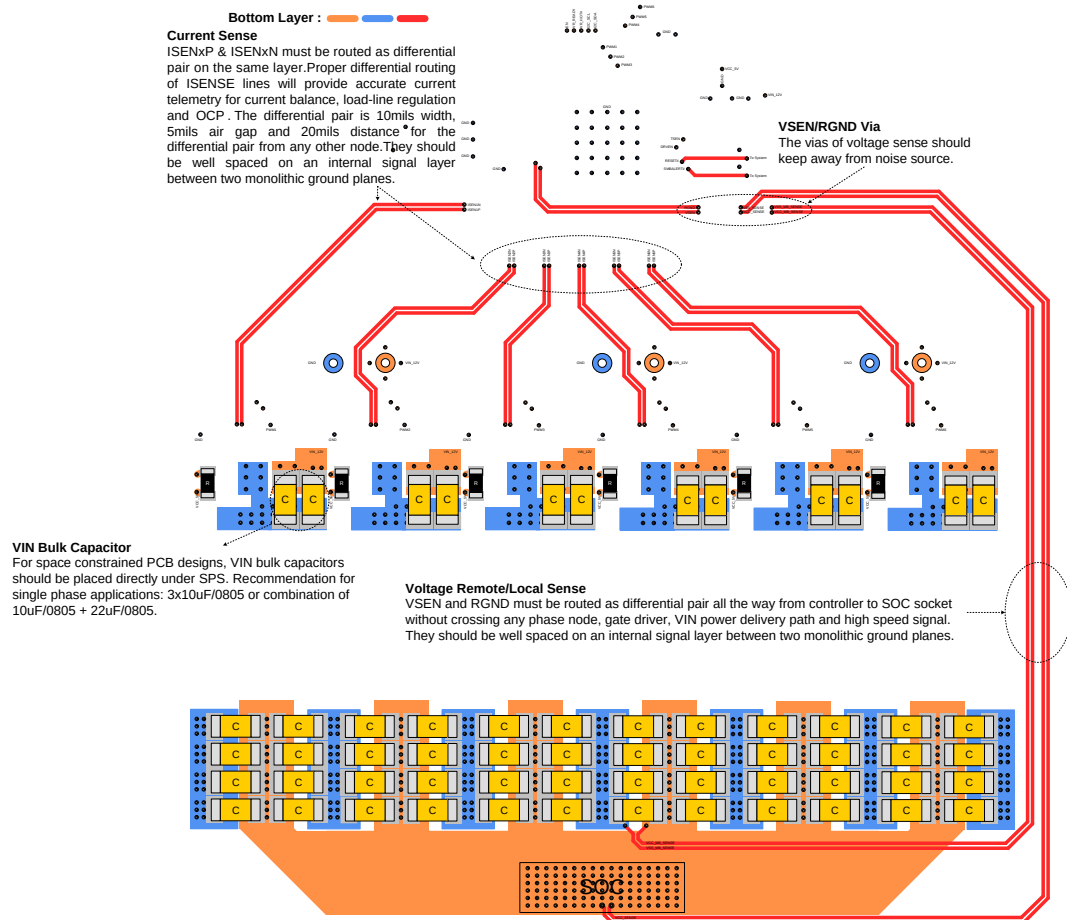


Figure 31. Layout Suggestion for RTQ8826: Bottom Layer

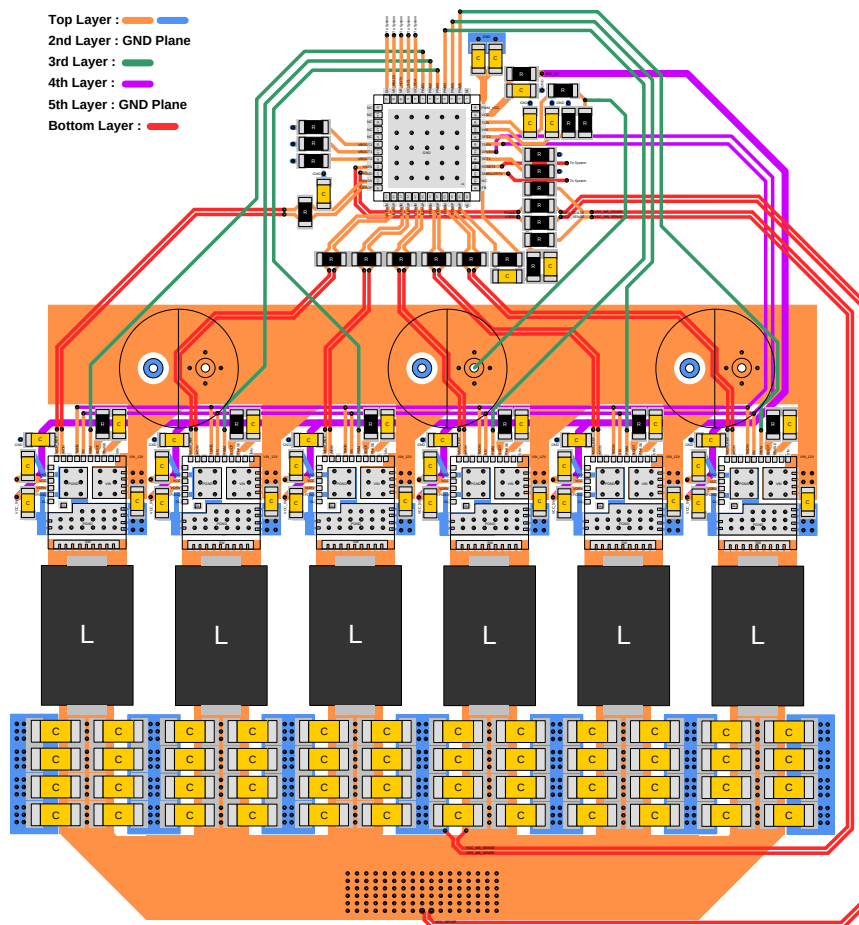


Figure 32. Layout Suggestion for RTQ8826: All Layer

PMBus Operation


The RTQ8826 PMBus slave address is pin selectable using the SET1 and SET2 pin and the resistor value described in Table 2. The PMBus slave address is the 7-bit format addresses. The PMBus data formats follow PMBus specification version 1.3.

PMBus Protocol


PMBus Packet Protocol Diagram Element Key

- S: Start Condition
- A: Acknowledge (“0”)
- NA: Not Acknowledge (“1”)
- Rd: Read (“1”)
- Wr: Write (“0”) Send Byte Protocol
- Sr: Repeated Start Condition
- PEC: Packet Error Checking
- P: Stop Condition
- ☒ Slave to Master
- ☐ Master to Slave


Send Byte Protocol




Write Byte Protocol



Write Word Protocol




Read Byte Protocol

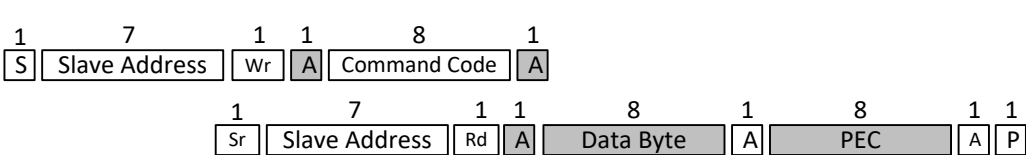


Read Word Protocol



Block Read Protocol

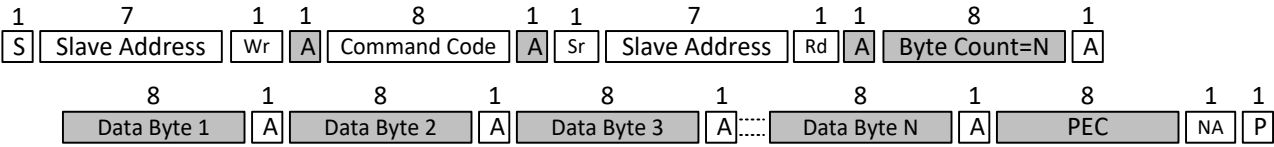

Alert Response Address (ARA) Protocol



Supported PMBus Commands

Command Code/Name		Description	Type	Default Value	NVM
00h	PAGE	Channel or page currently selected for any command that supports paging.	R/W Byte	0x00	No
01h	OPERATION	Operating mode control.	R/W Byte	0x00	Yes
02h	ON_OFF_CONFIG	EN pin and PMBus bus on/off command configuration.	R/W Byte	0x16	Yes
03h	CLEAR_FAULTS	Clears all fault status registers to 0x00 and releases SMBALERT#.	Send Byte	N/A	No
10h	WRITE_PROTECT	Level of protection provided by the device against accidental changes.	R/W Byte	0x00	Yes
15h	STORE_USER_ALL	Stores all current storable register settings into EEPROM as new defaults.	Send Byte	N/A	No
16h	RESTORE_USER_ALL	Restores all storable register settings from EEPROM.	Send Byte	N/A	No
19h	CAPABILITY	Summary of PMBus optional communication protocols supported by this device.	R Byte	0xD0	No
20h	VOUT_MODE	Output voltage format and exponent. (linear, exponent = -9)	R Byte	0x17	No
21h	VOUT_COMMAND	Nominal output voltage set point.	R/W Word	Initial VBOOT	No
24h	VOUT_MAX	Sets the maximum output voltage.	R/W Word	0x0308 (1.516V)	Yes
27h	VOUT_TRANSITION_RATE	The rate of output voltage changes when VOUT commanded to a new value.	R/W Word	0xD040 (1mV/us)	Yes
2Bh	VOUT_MIN	Sets the minimum output voltage.	R/W Word	0x0080 (0.25V)	Yes
35h	VIN_ON	Sets value of input voltage at which the device should start power conversion.	R/W Word	0xD0B4 (2.8V)	Yes
36h	VIN_OFF	Sets value of input voltage at which the device should stop power conversion.	R/W Word	0xD087 (2.1V)	Yes
39h	IOUT_CAL_OFFSET	The IOUT_CAL_OFFSET command is used to compensate for offset errors in the READ_IOUT results and IOUT_SLOW_OC_FAULT_LIMIT & IOUT_FAST_OC_FAULT_LIMIT.	R/W Word	0x0000 (0A)	Yes
40h	VOUT_OV_FAULT_LIMIT	Output over-voltage fault limit.	R/W Word	0x03B2 (1.8V)	Yes
41h	VOUT_OV_FAULT_RESPONSE	Sets response to output over-voltage faults to latch-off, hiccup mode or ignore.	R/W Byte	0xB9	Yes
44h	VOUT_UV_FAULT_LIMIT	Output under-voltage fault limit	R/W Word	0x00B2 (0.3V)	Yes
45h	VOUT_UV_FAULT_RESPONSE	Sets response to output under-voltage faults to latch-off, hiccup mode or ignore.	R/W Byte	0xB9	Yes
46h	IOUT_SLOW_OC_FAULT_LIMIT	Output slow over-current fault limit.	R/W Word	0x00D2 (210A)	Yes
47h	IOUT_SLOW_OC_FAULT_RESPONSE	Sets response to output slow over-current faults to latch-off, hiccup mode or ignore.	R/W Byte	0xB9	Yes
4Fh	OT_FAULT_LIMIT	Sets the value of the sensed temperature that causes an over-temperature fault condition.	R/W Word	0x0082 (130°C)	Yes
50h	OT_FAULT_RESPONSE	Sets response to over-temperature faults to latch-off, hiccup mode or ignore.	R/W Byte	0xB9	Yes
51h	OT_WARN_LIMIT	Sets the value of the sensed temperature that causes an over-temperature warning condition. If the temperature rises above warning condition and then VR_HOT# asserts low.	R/W Word	0x0073 (115°C)	Yes
60h	TON_DELAY	Sets the turn-on delay.	R/W Word	0xF000 (0ms)	Yes

Command Code/Name		Description	Type	Default Value	NVM
61h	TON_RISE	Time from when the output starts to rise until the output voltage reaches the VOUT commanded value.	R/W Word	0x0001 (1ms)	Yes
64h	TOFF_DELAY	Sets the turn-off delay.	R/W Word	0xF000 (0ms)	Yes
65h	TOFF_FALL	Time from when the output starts to fall until the output reaches zero volts.	R/W Word	0x0001 (1ms)	Yes
78h	STATUS_BYTE	Returns one byte summarizing of the most critical faults.	R/W Byte	Current status	No
79h	STATUS_WORD	Returns two bytes summarizing fault and warning conditions.	R/W Word	Current status	No
7Ah	STATUS_VOUT	Output voltage fault and warning status.	R/W Byte	Current status	No
7Bh	STATUS_IOUT	Output current fault and warning status.	R/W Byte	Current status	No
7Ch	STATUS_INPUT	Input supply fault and warning status.	R/W Byte	Current status	No
7Dh	STATUS_TEMPERATURE	Temperature fault and warning status.	R/W Byte	Current status	No
7Eh	STATUS_CML	Communication and memory fault and warning status.	R/W Byte	Current status	No
80h	STATUS_MFR_SPECIFIC	Manufacturer specific fault and state information.	R/W Byte	Current status	No
8Bh	READ_VOUT	Returns the output voltage in volts.	R Word	Current status	No
8Ch	READ_IOUT	Returns the output current in amps.	R Word	Current status	No
8Dh	READ_TEMPERATURE_1	Returns the temperature in degrees Celsius.	R Word	Current status	No
98h	PMBUS_REVISION	PMBus revision supported by this device. Current revision is 1.3.	R Byte	0x33	No
99h	MFR_ID	The manufacturer ID	R Block	0x1214	No
ADh	IC_DEVICE_ID	The IC device identification	R Block	0x8826	No
A Eh	IC_DEVICE_REV	The IC device revision	R Block	0x00	No
D0h	MFR_PH1_Current_Balance_Gain	Sets phase1 current balance gain.	R/W Byte	0x04 (100%)	Yes
D1h	MFR_PH2_Current_Balance_Gain	Sets phase2 current balance gain.	R/W Byte	0x04 (100%)	Yes
D2h	MFR_PH3_Current_Balance_Gain	Sets phase3 current balance gain.	R/W Byte	0x04 (100%)	Yes
D3h	MFR_PH4_Current_Balance_Gain	Sets phase4 current balance gain.	R/W Byte	0x04 (100%)	Yes
D4h	MFR_PH5_Current_Balance_Gain	Sets phase5 current balance gain.	R/W Byte	0x04 (100%)	Yes
D5h	MFR_PH6_Current_Balance_Gain	Sets phase6 current balance gain.	R/W Byte	0x04 (100%)	Yes
D6h	MFR_IOUT_FAST_OC_FAULT_LIMIT & SLOW_OCDLY	The IOUT_FAST_OC_FAULT_LIMIT command sets the value of the pre-phase output current, in Amps, that causes an fast over-current fault condition. The SLOW_OC_DLY_Time command sets the continuous time after the current must exceed IOUT_SLOW_OC_FAULT_LIMIT.	R/W Byte	0x02 (60A, 32us)	Yes
D7h	MFR_Kton_frequency	Sets switching frequency (kton). Total PWMs Frequency < 3.6MHz.	R/W Byte	0x04 (1)	Yes
D8h	MFR_AQR	Sets adaptive quick response threshold for load-line > 0mΩ and QR width maximum.	R/W Byte	0x00	Yes
D9h	MFR_VR_HOT_Hys	Sets VR_HOT# hysteresis. If temperature drops below OT warning condition minus hysteresis and then VR_HOT# de-asserts.	R/W Byte	0x01 (6°C)	Yes
DAh	MFR_RESET_RESPONSE_Rail_Fault	Sets VOUT behavior when RESET# assert. Sets	R/W Byte	0x01	Yes

Command Code/Name		Description	Type	Default Value	NVM
	_Mode	the behavior when the channel has fault.			
DBh	MFR_OV_Behavior	Sets PWM behavior during OVP. Hi-Z, turn-on the low side or soft shutdown	R/W Byte	0x00	Yes
DCh	MFR_DVS_Compensate	Sets DVS compensate.	R/W Byte	0x01	Yes
DDh	MFR_Load_Line	Sets Ai-gain for load line.	R/W Byte	0x0301h (0.5)	Yes
DEh	MFR_IOUT_CAL_GAIN	The MFR_IOUT_CAL_GAIN command is used to compensate for gain errors in the READ_IOUT results and IOUT_SLOW_OC_FAULT_LIMIT & IOUT_FAST_OC_FAULT_LIMIT.	R/W Byte	0x00 (0%)	Yes
DFh	MFR_ABS_QR	Sets quick response threshold for no load-line.	R/W Byte	0x00	Yes
E0h	MFR_VOUT_RPT_GAIN	The MFR_VOUT_RPT_GAIN command is used to compensate for gain errors in the READ_VOUT results.	R/W Byte	0x00 (0%)	Yes
E1h	MFR_IOUT_FAST_OC_FAULT_RESP ONSE	Sets response to output fast over-current faults to latch-off, hiccup mode or ignore.	R/W Byte	0xB9	Yes
E2h	MFR_CODE_VERSION	NVM code version.	R/W Byte	0x00	Yes

Command Code: 00h								
Description: The PAGE command provides the ability to configure, control and monitor multiple PWM channels through only one physical address. Each PAGE contains the operating commands for one PWM channel.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	PAGE							
Default Value	0x00h							
Read/Write	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name		Description					
[7:0]	Channel		[7:0] = 00h: rail A All other combinations are not defined.					

Command Code: 01h								
Description: The OPERATION command is issued to turn on or off (enable or disable) in conjunction with the input from the EN pin. Fault status will be cleared when output restarts through the OPERATION command (Off --> On).								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	OPERATION							
Default Value	0x00h							
Read/Write	RW	RW	R	R	R	R	R	R
Bits	Name		Description					
[7]	ON/OFF State		[7] = 0: Off. [7] = 1: On. Vout is set to Initial Vboot or Vout Command.					
[6]	Turn Off Behavior		[6] = 0: Immediately turn off the output through OPERATION[7] [6] = 1: Soft Off with the programmed turnoff delay (TOFF_DELAY) and ramp down (TOFF_FALL) through OPERATION[7]					
[5:4]	Voltage Command Source		[5:4] = 00: VOUT_COMMAND All other combinations are not defined.					
[3:0]	Reserved		Reserved					

Command Code: 02h								
Description: The ON_OFF_CONFIG command configures the combination of EN pin input and serial bus commands needed to turn the unit on and off.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	ON_OFF_CONFIG							
Default Value	0x16h							
Read/Write	R	R	R	RW	RW	RW	RW	RW
Bits	Name		Description					
[7:5]	Reserved		Reserved.					
[4]	Power up		[4] = 0: Device powers up any time power is present regardless of state of the EN pin. [4] = 1: Device does not power up by the EN pin. This bit is used in conjunction with bits [3:0] of the ON_OFF_CONFIG register to determine start up.					
[3]	OPER_CMD		[3] = 0: Device ignores the “on” bit in the OPERATION command. [3] = 1: Device responds to the “on” bit in the OPERATION command.					
[2]	EN_Response		[2] = 0: Device ignores the EN pin. Power conversion is controlled only by the OPERATION command. [2] = 1: Device requires the EN pin to be asserted to start the unit.					
[1]	Polarity of the EN pin		[1] = 0: EN pin is active low. [1] = 1: EN pin is active high.					
[0]	Turn off from EN pin		[0] = 0: Soft Off. Use the programmed turnoff delay (TOFF_DELAY) and ramp down (TOFF_FALL). [0] = 1: Immediately turn off the output.					

Command Code: 03h								
Description: The CLEAR_FAULTS command is used to clear any fault bits that have been set. This command clears all bits in all status commands simultaneously. At the same time, the device negates (clears, releases) its SMBALERT# pin signal output if the device is asserting the SMBALERT# pin signal.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	CLEAR_FAULTS							
Default Value	N/A							
Read/Write	W	W	W	W	W	W	W	W

Note: Fault status will be cleared when the output restarts through the EN pin, the OPERATION command, or the combined action of the EN pin and OPERATION command.

Command Code: 10h								
Description: The WRITE_PROTECT is used to control writing to the PMBus device. If a device receives a data byte that is not listed in [7:0] description, then the device shall treat this as invalid data.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	WRITE_PROTECT							
Default Value	0x00h							
Read/Write	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name		Description					
[7:0]	WRITE_PROTECT		[7:0] = 0x80h: Disable all writes except the WRITE_PROTECT command. [7:0] = 0x40h: Disable all writes except the WRITE_PROTECT, OPERATION, and PAGE commands. [7:0] = 0x20h: Disable all writes except the WRITE_PROTECT, OPERATION, PAGE, ON_OFF_CONFIG, and VOUT_COMMAND commands. [7:0] = 0x00h: Enable writes to all commands. All other combinations are not defined.					

Command Code: 15h								
Description: The STORE_USER_ALL command instructs the PMBus device to copy the entire contents of the Operating Memory to the matching locations in the non-volatile User Store memory.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	STORE_USER_ALL							
Default Value	N/A							
Read/Write	W	W	W	W	W	W	W	W

Command Code: 16h								
Description: The RESTORE_USER_ALL command instructs the PMBus device to copy the entire contents of the non-volatile User Store memory to the matching locations in the Operating Memory.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	RESTORE_USER_ALL							
Default Value	N/A							
Read/Write	W	W	W	W	W	W	W	W

Note. It is recommended that the output be disabled before issuing a RESTORE_USER_ALL command.

Command Code: 19h								
Description: The CAPABILITY command provides a way for the host system to determine some key capabilities of a PMBus device.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	CAPABILITY							
Default Value	0xD0h							
Read/Write	R	R	R	R	R	R	R	R
Bits	Name		Description					
[7]	PEC		[7] = 1: Packet error checking is supported.					
[6:5]	SPD		[6:5] = 10: Maximum supported bus speed is 1MHz.					
[4]	ALRT		[4] = 1: Device does have a SMBALERT# pin and does support the SMBus alert response protocol					
[3:0]	Reserved		Reserved					

Command Code: 20h								
Description: The VOUT_MODE command, used for reading and writing output voltage, consists of a three-bit Mode and a five-bit Parameter.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	VOUT_MODE							
Default Value	0x17h							
Read/Write	R	R	R	R	R	R	R	R
Bits	Name		Description					
[7:5]	Mode		[7:5] = 000: Linear mode.					
[4:0]	Exponent		[4:0] = 10111: Exponent for linear mode values is –9 (equivalent of 1.953mV/count).					

Command Code: 21h																
Description: The VOUT_COMMAND command sets the output voltage in volts.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	VOUT_COMMAND															
Default Value	Initial VBOOT															
Read/Write	R	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Vout Range (V)	VOUT_COMMAND data valid range (decimal)															
0.25V to 1.516V	128(dec) to 776(dec). $V_{out}(V) = [VOUT_COMMAND(dec) - 1] \times 1.953mV$, where VOUT_COMMAND(dec) is odd number. $V_{out}(V) = [VOUT_COMMAND(dec)] \times 1.953mV$, where VOUT_COMMAND(dec) is even number.															

Command Code: 24h																
Description: The VOUT_MAX command sets the maximum output voltage. To protect the devices on the output from exceeding the maximum operation voltage.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	VOUT_MAX															
Default Value	0x0308h															
Read/Write	R	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Vout Range (V)	VOUT_COMMAND data valid range (decimal)															
0.25V to 1.516V	128(dec) to 776(dec). $V_{out}(V) = [VOUT_COMMAND(dec) - 1] \times 1.953mV$, where VOUT_COMMAND(dec) is odd number. $V_{out}(V) = [VOUT_COMMAND(dec)] \times 1.953mV$, where VOUT_COMMAND(dec) is even number.															

Command Code: 27h																
Description: The VOUT_TRANSITION_RATE command sets the rate of change in mV/μs of any output voltage change during normal operation.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	VOUT_TRANSITION_RATE															
Default Value	0xD040h															
Read/Write	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name					Description										
[15:11]	Exponent					[15:11] = 11010: $2^{(-6)} = 0.015625$										
[10:0]	VOUT_SR					[10:0] ≤ 0x040h, VOUT_TRANSITION rate is 1mV/us (default) 0x040h < [10:0] ≤ 0x100h, VOUT_TRANSITION rate is 4mV/us 0x100h < [10:0] ≤ 0x200h, VOUT_TRANSITION rate is 8mV/us 0x200h < [10:0], VOUT_TRANSITION rate is 16mV/us										

Command Code: 2Bh																
Description: The VOUT_MIN command sets the minimum output voltage. To protect the devices on the output from falling below the minimum operation voltage.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	VOUT_MIN															
Default Value	0x0080h															
Read/Write	R	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Vout Range (V)	VOUT_COMMAND data valid range (decimal)															
0.25V to 1.516V	128(dec) to 776(dec). $V_{out}(V) = [VOUT_COMMAND(dec) - 1] \times 1.953mV$, where VOUT_COMMAND(dec) is odd number. $V_{out}(V) = [VOUT_COMMAND(dec)] \times 1.953mV$, where VOUT_COMMAND(dec) is even number.															

Command Code: 35h																
Description: The VIN_ON command sets the input voltage in Volts, at which the unit should start power conversion. VIN_ON must be set higher than VIN_OFF. Attempting to write either VIN_ON lower than VIN_OFF or VIN_OFF higher than VIN_ON results in the new value being rejected.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	VIN_ON															
Default Value	0xD0B4h															
Read/Write	R	R	R	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name					Description										
[15:11]	Exponent					[15:11] = 11010: $2^{(-6)} = 0.015625$										
[10:0]	VIN_ON threshold					$[10:0] \leq 0x04Dh$, VIN_ON threshold is 1.2V $0x04Dh < [10:0] \leq 0x05Ah$, VIN_ON threshold is 1.4V $0x05Ah < [10:0] \leq 0x067h$, VIN_ON threshold is 1.6V $0x067h < [10:0] \leq 0x074h$, VIN_ON threshold is 1.8V $0x074h < [10:0] \leq 0x080h$, VIN_ON threshold is 2.0V $0x080h < [10:0] \leq 0x08Dh$, VIN_ON threshold is 2.2V $0x08Dh < [10:0] \leq 0x09Ah$, VIN_ON threshold is 2.4V $0x09Ah < [10:0] \leq 0x0A7h$, VIN_ON threshold is 2.6V $0x0A7h < [10:0] \leq 0x0B4h$, VIN_ON threshold is 2.8V (default) $0x0B4h < [10:0]$, VIN_ON threshold is 3.0V										

Command Code: 36h

Description: The VIN_OFF command sets the input voltage in Volts, at which the unit should stop power conversion. VIN_ON must be set higher than VIN_OFF. Attempting to write either VIN_ON lower than VIN_OFF or VIN_OFF higher than VIN_ON results in the new value being rejected

Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	VIN_OFF															
Default Value	0xD087h															
Read/Write	R	R	R	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name					Description										
[15:11]	Exponent					[15:11] = 11010: $2^{(-6)} = 0.015625$										
[10:0]	VIN_OFF threshold					[10:0] ≤ 0x047h, VIN_OFF threshold is 1.1V 0x047h < [10:0] ≤ 0x054h, VIN_OFF threshold is 1.3V 0x054h < [10:0] ≤ 0x060h, VIN_OFF threshold is 1.5V 0x060h < [10:0] ≤ 0x06Dh, VIN_OFF threshold is 1.7V 0x06Dh < [10:0] ≤ 0x07Ah, VIN_OFF threshold is 1.9V 0x07Ah < [10:0] ≤ 0x087h, VIN_OFF threshold is 2.1V (default) 0x087h < [10:0] ≤ 0x094h, VIN_OFF threshold is 2.3V 0x094h < [10:0] ≤ 0x0A0h, VIN_OFF threshold is 2.5V 0x0A0h < [10:0] ≤ 0x0ADh, VIN_OFF threshold is 2.7V 0x0ADh < [10:0], VIN_OFF threshold is 2.9V										

Command Code: 39h

Description: The IOUT_CAL_OFFSET command is used to null out any offset current in Amps.

Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	IOUT_CAL_OFFSET															
Default Value	0x0000h															
Read/Write	R	R	R	R	R	RW	R	R	R	R	R	R	RW	RW	RW	RW
Bits	Name					Description										
[15:11]	Exponent					[15:11] = 00000: $2^0 = 1$										
[10:0]	IOUT_CAL_OFFSET					IOUT offset = [10:0] × 2 ⁰ , MSB(bit10) is programmable with sign, next 6 bits are sign extended only. Lower four bits are programmable with a default value of 0.										

Command Code: 40h																
Description: The VOUT_OV_FAULT_LIMIT command sets the value of the average sensed output voltage in Volts that causes a "fixed" over-voltage fault.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	VOUT_OV_FAULT_LIMIT															
Default Value	0x03B2h															
Read/Write	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Bits		Name				Description										
[15:11]		Reserved				Reserved										
[10:0]		VOUT_OV_FAULT_LIMIT				[10:0] ≤ 0x132h, VOUT OV threshold is 0.55V 0x132h < [10:0] ≤ 0x14Ch, VOUT OV threshold is 0.60V 0x14Ch < [10:0] ≤ 0x165h, VOUT OV threshold is 0.65V 0x165h < [10:0] ≤ 0x17Fh, VOUT OV threshold is 0.70V 0x17Fh < [10:0] ≤ 0x199h, VOUT OV threshold is 0.75V 0x199h < [10:0] ≤ 0x1B2h, VOUT OV threshold is 0.80V 0x1B2h < [10:0] ≤ 0x1CCh, VOUT OV threshold is 0.85V 0x1CCh < [10:0] ≤ 0x1E5h, VOUT OV threshold is 0.90V 0x1E5h < [10:0] ≤ 0x1FFh, VOUT OV threshold is 0.95V 0x1FFh < [10:0] ≤ 0x219h, VOUT OV threshold is 1.00V 0x219h < [10:0] ≤ 0x232h, VOUT OV threshold is 1.05V 0x232h < [10:0] ≤ 0x24Ch, VOUT OV threshold is 1.10V 0x24Ch < [10:0] ≤ 0x265h, VOUT OV threshold is 1.15V 0x265h < [10:0] ≤ 0x27Fh, VOUT OV threshold is 1.20V 0x27Fh < [10:0] ≤ 0x299h, VOUT OV threshold is 1.25V 0x299h < [10:0] ≤ 0x2B2h, VOUT OV threshold is 1.30V 0x2B2h < [10:0] ≤ 0x2CCh, VOUT OV threshold is 1.35V 0x2CCh < [10:0] ≤ 0x2E5h, VOUT OV threshold is 1.40V 0x2E5h < [10:0] ≤ 0x2FFh, VOUT OV threshold is 1.45V 0x2FFh < [10:0] ≤ 0x319h, VOUT OV threshold is 1.50V 0x319h < [10:0] ≤ 0x332h, VOUT OV threshold is 1.55V 0x332h < [10:0] ≤ 0x34Ch, VOUT OV threshold is 1.60V 0x34Ch < [10:0] ≤ 0x365h, VOUT OV threshold is 1.65V 0x365h < [10:0] ≤ 0x37Fh, VOUT OV threshold is 1.70V 0x37Fh < [10:0] ≤ 0x399h, VOUT OV threshold is 1.75V 0x399h < [10:0] ≤ 0x3B2h, VOUT OV threshold is 1.80V (default) 0x3B2h < [10:0] ≤ 0x3CCh, VOUT OV threshold is 1.85V 0x3CCh < [10:0] ≤ 0x3E5h, VOUT OV threshold is 1.90V 0x3E5h < [10:0] ≤ 0x3FFh, VOUT OV threshold is 1.95V 0x3FFh < [10:0] ≤ 0x419h, VOUT OV threshold is 2.00V 0x419h < [10:0] ≤ 0x432h, VOUT OV threshold is 2.05V 0x432h < [10:0], VOUT OV threshold is 2.10V										

Command Code: 41h								
Description: The VOUT_OV_FAULT_RESPONSE command sets the response type to an output over voltage fault.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	VOUT_OV_FAULT_RESPONSE							
Default Value	0xB9h							
Read/Write	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name		Description					
[7:6]	Response		[7:6] = 00: No shutdown (ignore fault response mode) [7:6] = 10: The device shuts down and responds according to the retry setting in bits [5:3]. All other combinations are not defined.					
[5:3]	Retry setting		[5:0] = 000 000: Latched shutdown					
[2:0]	Retry delay time		[5:0] = 111 001: Hiccup shutdown, retry delay time is 100ms + TON_DELAY. All other combinations are not defined.					

Command Code: 44h																
Description: The VOUT_UV_FAULT_LIMIT command sets the value of the average sensed output voltage in Volts that causes a "fixed" under-voltage fault.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	VOUT_UV_FAULT_LIMIT															
Default Value	0x00B2h															
Read/Write	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name					Description										
[15:11]	Reserved					Reserved										
[10:0]	VOUT_UV_FAULT_LIMIT					[10:0] ≤ 0x099h, VOUT UV is disabled 0x099h < [10:0] ≤ 0x0B2h, VOUT UV threshold is 0.30V (default) 0x0B2h < [10:0] ≤ 0x0CCh, VOUT UV threshold is 0.35V 0x0CCh < [10:0] ≤ 0x0E5h, VOUT UV threshold is 0.40V 0x0E5h < [10:0] ≤ 0x0FFh, VOUT UV threshold is 0.45V 0x0FFh < [10:0] ≤ 0x119h, VOUT UV threshold is 0.50V 0x119h < [10:0] ≤ 0x132h, VOUT UV threshold is 0.55V 0x132h < [10:0] ≤ 0x14Ch, VOUT UV threshold is 0.60V 0x14Ch < [10:0] ≤ 0x165h, VOUT UV threshold is 0.65V 0x165h < [10:0] ≤ 0x17Fh, VOUT UV threshold is 0.70V 0x17Fh < [10:0] ≤ 0x199h, VOUT UV threshold is 0.75V 0x199h < [10:0] ≤ 0x1B2h, VOUT UV threshold is 0.80V 0x1B2h < [10:0] ≤ 0x1CCh, VOUT UV threshold is 0.85V 0x1CCh < [10:0] ≤ 0x1E5h, VOUT UV threshold is 0.90V 0x1E5h < [10:0] ≤ 0x1FFh, VOUT UV threshold is 0.95V 0x1FFh < [10:0], VOUT UV threshold is 1.00V										

Command Code: 45h								
Description: The VOUT_UV_FAULT_RESPONSE command sets the response type to an output under-voltage fault.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	VOUT_UV_FAULT_RESPONSE							
Default Value	0xB9h							
Read/Write	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name		Description					
[7:6]	Response		[7:6] = 00: No shutdown (ignore fault response mode) [7:6] = 10: The device shuts down and responds according to the retry setting in bits [5:3]. All other combinations are not defined.					
[5:3]	Retry setting		[5:0] = 000 000: Latched shutdown					
[2:0]	Retry delay time		[5:0] = 111 001: Hiccup shutdown, retry delay time is 100ms + TON_DELAY. All other combinations are not defined.					

Command Code: 46h																
Description: The IOUT_SLOW_OC_FAULT_LIMIT command sets the value of the output current, in Amps, that causes an overcurrent fault condition.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	IOUT_SLOW_OC_FAULT_LIMIT															
Default Value	0x00D2h															
Read/Write	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name					Description										
[15:11]	Exponent					[15:11] = 00000: $2^{(0)} = 1$										
[10:0]	IOUT_SLOW_OC_FAULT_LIMIT					Iout(Slow_OCth) = [10:0] x $2^{(0)}$ Range = 30A to 360A										

Command Code: 47h								
Description: The IOUT_OC_FAULT_RESPONSE command sets the response type to an over-current fault.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	IOUT_SLOW_OC_FAULT_RESPONSE							
Default Value	0xB9h							
Read/Write	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name		Description					
[7:6]	Response		[7:6] = 00: No shutdown (ignore fault response mode) [7:6] = 10: The device shuts down and responds according to the retry setting in bits [5:3]. All other combinations are not defined.					
[5:3]	Retry setting		[5:0] = 000 000: Latched shutdown					
[2:0]	Retry delay time		[5:0] = 111 001: Hiccup shutdown, retry delay time is 100ms + TON_DELAY. All other combinations are not defined.					

Command Code: 4Fh

Description: The OT_FAULT_LIMIT command sets the value of the external sense temperature, in °C, that causes an over temperature fault.

Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	OT_FAULT_LIMIT															
Default Value	0x0082h															
Read/Write	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name					Description										
[15:11]	Exponent					[15:11] = 00000: $2^{(0)} = 1$										
[10:0]	OT_FAULT_LIMIT					TEMP _(OTth) = [10:0] × $2^{(0)}$ Range = 75°C to 165°C										

Command Code: 50h

Description: The OT_FAULT_RESPONSE command instructs the device on what action to take in response to an over temperature fault.

Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	OT_FAULT_RESPONSE							
Default Value	0xB9h							
Read/Write	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name		Description					
[7:6]	Response		[7:6] = 00: No shutdown (ignore fault response mode) [7:6] = 10: The device shuts down and responds according to the retry setting in bits [5:3]. All other combinations are not defined.					
[5:3]	Retry setting		[5:0] = 000 000: Latched shutdown [5:0] = 111 001: Hiccup shutdown, retry delay time is 100ms + TON_DELAY.					
[2:0]	Retry delay time		All other combinations are not defined.					

Command Code: 51h

Description: The OT_WARN_LIMIT command sets the value of the external sense temperature in °C, that causes an over temperature warning. If temperature rises above warning condition and then VR_HOT# asserts low.

Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	OT_WARN_LIMIT															
Default Value	0x0073h															
Read/Write	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name					Description										
[15:11]	Exponent					[15:11] = 00000: $2^{(0)} = 1$										
[10:0]	OT_WARN_LIMIT					TEMP _(OTth) = [10:0] × $2^{(0)}$ Range = 75°C to 165°C										

Command Code: 60h																
Description: The TON_DELAY command sets the time in milliseconds, from when a start condition is received until the output voltage starts to rise.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	TON_DELAY															
Default Value	0xF000h															
Read/Write	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name					Description										
[15:11]	Exponent					[15:11] = 11110: $2^{(-2)} = 0.25$										
[10:0]	TON_DELAY					Ton_DT = [10:0] x $2^{(-2)}$ Range = 0ms to 51ms										

Command Code: 61h																
Description: The TON_RISE command sets the time in milliseconds, from when the output starts to rise until the output voltage has entered the regulation band.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	TON_RISE															
Default Value	0x0001h															
Read/Write	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name					Description										
[15:11]	Exponent					[15:11] = 00000: $2^{(0)} = 1$										
[10:0]	TON_RISE					Trise = [10:0] x $2^{(0)}$ Range = 1ms to 10ms										

Command Code: 64h																
Description: The TOFF_DELAY command sets the time in milliseconds, from when a stop condition is received and when the output voltage starts to fall.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	TOFF_DELAY															
Default Value	0xF000h															
Read/Write	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name					Description										
[15:11]	Exponent					[15:11] = 11110: $2^{(-2)} = 0.25$										
[10:0]	TOFF_DELAY					Toff_DT = [10:0] x $2^{(-2)}$ Range = 0ms to 51ms										

Command Code: 65h																
Description: The TOFF_FALL command sets the time in milliseconds, from when a stop condition is received and when the output voltage starts to fall.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	TOFF_FALL															
Default Value	0x0001h															
Read/Write	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name					Description										
[15:11]	Exponent					[15:11] = 00000: $2^{(0)} = 1$										
[10:0]	TOFF_FALL					Tfall = [10:0] x $2^{(0)}$ Range = 1ms to 10ms										

Command Code: 78h								
Description: The STATUS_BYTE command returns one byte of information with a summary of the most critical faults.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	STATUS_BYTE							
Default Value	current status							
Read/Write	R	R	R	R	R	R	R	R
Bits	Name		Description					
[7]	BUSY		Not supported					
[6]	OFF		This bit is asserted if the unit is not providing power to the output, regardless of the reason, including simply not being enabled. (EN=L, OPERATION=L, rail disable)					
[5]	VOUT_OV_FAULT		An output over-voltage fault has occurred.					
[4]	IOUT_OC_FAULT		An output over-current fault has occurred.					
[3]	VIN_UV_FAULT		Not supported					
[2]	TEMPERATURE		A temperature fault or warning has occurred.					
[1]	CML		A communication, memory or logic fault has occurred.					
[0]	NONE_OF_THE_ABOVE		A fault or warning not listed in bits [7:1] has occurred. VOUT_UV_FAULT, IOUT_FAST_OC_FAULT, SPS_FAULT, VOUT_MAX_MIN_Warning)					

Command Code: 79h																
Description: The STATUS_WORD command returns two bytes of information with a summary of the units fault condition.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	STATUS_WORD															
Default Value	current status															
Read/Write	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Bits	Name				Description											
[15]	VOUT				An output voltage fault has occurred.											
[14]	IOUT				An output current fault has occurred.											
[13]	INPUT				An input voltage fault has occurred.											
[12]	MFRSPECIFIC				A manufacturer specific fault has occurred. (IOUT_FAST_OC_FAULT, SPS_FAULT)											
[11]	PG_STATUS#				The VR_Ready signal, if present, is negated.											
[10]	FANS				Not supported											
[9]	OTHER				Not supported											
[8]	UNKNOWN				Not supported											
[7]	BUSY				Not supported											
[6]	OFF				This bit is asserted if the unit is not providing power to the output, regardless of the reason, including simply not being enabled.											
[5]	VOUT_OV_FAULT				An output over-voltage fault has occurred.											
[4]	IOUT_OC_FAULT				An output over-current fault has occurred.											
[3]	VIN_UV_FAULT				Not supported											
[2]	TEMPERATURE				A temperature fault or warning has occurred.											
[1]	CML				A communications, memory or logic fault has occurred.											
[0]	NONE_OF_THE_ABOVE				A fault or warning not listed in bits [7:1] has occurred. (VOUT_UV_FAULT, IOUT_FAST_OC_FAULT, SPS_FAULT, VOUT_MAX_MIN Warning)											

Command Code: 7Ah								
Description: The STATUS_VOUT command returns one byte of information relating to the status of the output voltage related faults.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	STATUS_VOUT							
Default Value	current status							
Read/Write	RW	R	R	RW	RW	R	R	R
Bits	Name			Description				
[7]	VOUT_OV_FAULT			Output Over-voltage Fault. Write 1b to clear this bit.				
[6]	VOUT_OV_WARNING			Not supported				
[5]	VOUT_UV_WARNING			Not supported				
[4]	VOUT_UV_FAULT			Output Under-voltage Fault. Write 1b to clear this bit.				
[3]	VOUT_MAX_MIN WARNING			An attempt is made to program the VOUT_COMMAND in excess of the value in VOUT_MAX or under the value in VOUT_MIN. Write 1b to clear this bit.				
[2]	TON_MAX_FAULT			Not supported				
[1]	TOFF_MAX_WARNING			Not supported				
[0]	VOUT Tracking Error			Not supported				

Command Code: 7Bh

Description: The STATUS_IOUT command returns one byte of information relating to the status of the output current related faults.

Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	STATUS_IOUT							
Default Value	current status							
Read/Write	RW	R	R	R	R	R	R	R
Bits	Name		Description					
[7]	SLOW_OC_FAULT		Output Slow Over-current Fault. Write 1b to clear this bit.					
[6]	OC_LV_FAULT		Not supported					
[5]	OC_WARNING		Not supported					
[4]	UC_FAULT		Not supported					
[3]	Current Share Fault		Not supported					
[2]	In Power Limiting Mode		Not supported					
[1]	POUT_OP_FAULT		Not supported					
[0]	POUT_OP_WARNING		Not supported					

Command Code: 7Ch

Description: The STATUS_INPUT command returns one byte of VIN status information.

Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	STATUS_INPUT							
Default Value	Current status							
Read/Write	R	R	R	R	R/W	R	R	R
Bits	Name		Description					
[7]	VIN_OV_FAULT		Not supported					
[6]	VIN_OV_WARNING		Not supported					
[5]	VIN_UV_WARNING		Not supported					
[4]	VIN_UV_FAULT		Not supported					
[3]	Unit Off For Insufficient Input Voltage		The unit is off because of insufficient input voltage. The bit is set to 1 when the unit powers up and stays until the first time VIN exceeds VIN_ON. During the initial power up, the bit is not latched and does not trigger SMBALERT#. Once VIN exceeds VIN_ON for the first time, the bit will be latched at any subsequent VIN < VIN_OFF events, and the SMBALERT# will be triggered. Write 1b to clear this bit.					
[2]	IIN_OC_FAULT		Not supported					
[1]	IIN_OC_WARNING		Not supported					
[0]	PIN_OP_WARNING		Not supported					

Command Code: 7Dh								
Description: The STATUS_TEMPERATURE command returns one byte of information relating to the status of the external temperature related faults.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	STATUS_TEMPERATURE							
Default Value	current status							
Read/Write	RW	RW	R	R	R	R	R	R
Bits	Name		Description					
[7]	OT_FAULT		Over-temperature Fault. Write 1b to clear this bit.					
[6]	OT_WARNING		Over-temperature Warning. Write 1b to clear this bit.					
[5]	UT_WARNING		Not supported					
[4]	UT_FAULT		Not supported					
[3:0]	Reserved		Reserved					

Command Code: 7Eh								
Description: The STATUS_CML command returns one byte of information relating to the status of the communication-related faults of the converter.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	STATUS_CML							
Default Value	current status							
Read/Write	RW	RW	RW	RW	R	R	RW	R
Bits	Name		Description					
[7]	IVC		Invalid or Unsupported Command Received. This bit is writeable to clear.					
[6]	IVD		Invalid or Unsupported Data Received. Write 1b to clear this bit.					
[5]	PEC		Packet Error Check Failed. Write 1b to clear this bit.					
[4]	MEM		Memory Fault Detected. Write 1b to clear this bit.					
[3]	PROC		Not supported					
[2]	Reserved		Reserved					
[1]	OTH		A communication fault other than the ones listed in this table has occurred.(MTP busy or upload/download in progress while PMBus attempted W/R). Write 1b to clear this bit.					
[0]	Reserved		Reserved					

Command Code: 80h								
Description: The STATUS_MFR_SPECIFIC commands returns one byte with the manufacturer specific status information.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	STATUS_MFR_SPECIFIC							
Default Value	current status							
Read/Write	R	R	R	R	R	R	R	RW
Bits	Name		Description					
[7:2]	Reserved		Reserved					
[1]	IOUT_FAST_OC_FAULT		Output Fast Over-current Fault. Write 1b to clear this bit.					
[0]	SPS_FAULT		Smart power stage fault. Write 1b to clear this bit.					

Command Code: 8Bh																
Description: The READ_VOUT command returns the actual measured output voltage in the same format as set by the VOUT_MODE command																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	READ_VOUT															
Default Value	current status															
Read/Write	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Bits	Name					Description										
[15:0]	VOUT					VOUT = [15:0] x 2 ⁻⁹										

Command Code: 8Ch																
Description: The READ_IOUT command returns the average total output current in Amps.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	READ_IOUT															
Default Value	current status															
Read/Write	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Bits	Name					Description										
[15:11]	Exponent					[15:11] = 00000: 2 ⁽⁰⁾ = 1										
[10:0]	READ_IOUT					IOUT = [10:0] x 2 ⁰										

Command Code: 8Dh																
Description: The READ_TEMPERATURE_1 command returns the temperature in °C of the external sense element.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	READ_TEMPERATURE_1															
Default Value	current status															
Read/Write	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Bits	Name					Description										
[15:11]	Exponent					[15:11] = 00000: 2 ⁽⁰⁾ = 1										
[10:0]	READ_TEMPERATURE_1					TEMP = [10:0] x 2 ⁰ , bit10 is sign bit (as part of two's complement).										

Command Code: 98h								
Description: The PMBUS_REVISION command contains the revision of the PMBus to which the device is compliant.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	PMBUS_REVISION							
Default Value	0x33h							
Read/Write	R	R	R	R	R	R	R	R
Bits	Name		Description					
[7:4]	Part I Revision		[7:4] = 0011: (Rev 1.3)					
[3:0]	Part II Revision		[3:0] = 0011: (Rev 1.3)					

Command Code: 99h																
Description: The MFR_ID command indicates the manufacturer ID code is RT(Richtek).																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_ID															
Default Value	0x1214h															
Read/Write	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Bits	Name					Description										
[15:0]	MFR_ID					[15:0] = 0x1214h										

Command Code: ADh																
Description: The IC_DEVICE_ID command indicates the device code is 8826 - code identifier for RTQ8826.																
Bits	Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	IC_DEVICE_ID															
Default Value	0x8826h															
Read/Write	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Bits	Name					Description										
[15:0]	IC_DEVICE_ID					[15:0] = 0x8826h										

Command Code: AEh								
Description: The IC_DEVICE_REV starts at 0 with the first silicon and is incremented with each subsequent silicon revision.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	IC_DEVICE_REV							
Default Value	0x00h							
Read/Write	R	R	R	R	R	R	R	R
Bits	Name		Description					
[7:0]	IC_DEVICE_REV		The IC_DEVICE_REV starts at 0 with the first silicon and is incremented with each subsequent silicon revision.					

Command Code: D0h								
Description: Adjusts phase1 current balance gain.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_PH1_Current_Balance_Gain							
Default Value	0x04h							
Read/Write	R	R	R	R	R	RW	RW	RW
Bits	Name		Description					
[7:3]	Reserved		Reserved					
[2:0]	PH1 CBG		[2:0] = 000 : 69.2%, [2:0] = 001 : 76.9%, [2:0] = 010 : 84.6%, [2:0] = 011 : 92.3%, [2:0] = 100 : 100% (default), [2:0] = 101 : 107.69%, [2:0] = 110 : 115.38%, [2:0] = 111 : 123.08%					

Command Code: D1h								
Description: Adjusts phase2 current balance gain.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_PH2_Current_Balance_Gain							
Default Value	0x04h							
Read/Write	R	R	R	R	R	RW	RW	RW
Bits	Name		Description					
[7:3]	Reserved		Reserved					
[2:0]	PH2 CBG		[2:0] = 000 : 69.2%, [2:0] = 001 : 76.9%, [2:0] = 010 : 84.6%, [2:0] = 011 : 92.3%, [2:0] = 100 : 100% (default), [2:0] = 101 : 107.69%, [2:0] = 110 : 115.38%, [2:0] = 111 : 123.08%					

Command Code: D2h								
Description: Adjusts phase3 current balance gain.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_PH3_Current_Balance_Gain							
Default Value	0x04h							
Read/Write	R	R	R	R	R	RW	RW	RW
Bits	Name		Description					
[7:3]	Reserved		Reserved					
[2:0]	PH3 CBG		[2:0] = 000 : 69.2%, [2:0] = 001 : 76.9%, [2:0] = 010 : 84.6%, [2:0] = 011 : 92.3%, [2:0] = 100 : 100% (default), [2:0] = 101 : 107.69%, [2:0] = 110 : 115.38%, [2:0] = 111 : 123.08%					

Command Code: D3h								
Description: Adjusts phase4 current balance gain.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_PH4_Current_Balance_Gain							
Default Value	0x04h							
Read/Write	R	R	R	R	R	RW	RW	RW
Bits	Name		Description					
[7:3]	Reserved		Reserved					
[2:0]	PH4 CBG		[2:0] = 000 : 69.2%, [2:0] = 001 : 76.9%, [2:0] = 010 : 84.6%, [2:0] = 011 : 92.3%, [2:0] = 100 : 100% (default), [2:0] = 101 : 107.69%, [2:0] = 110 : 115.38%, [2:0] = 111 : 123.08%					

Command Code: D4h								
Description: Adjusts phase5 current balance gain.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_PH5_Current_Balance_Gain							
Default Value	0x04h							
Read/Write	R	R	R	R	R	RW	RW	RW
Bits	Name		Description					
[7:3]	Reserved		Reserved bits					
[2:0]	PH5 CBG		[2:0] = 000 : 69.2%, [2:0] = 001 : 76.9%, [2:0] = 010 : 84.6%, [2:0] = 011 : 92.3%, [2:0] = 100 : 100% (default), [2:0] = 101 : 107.69%, [2:0] = 110 : 115.38%, [2:0] = 111 : 123.08%					

Command Code: D5h								
Description: Adjusts phase6 current balance gain.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_PH6_Current_Balance_Gain							
Default Value	0x04h							
Read/Write	R	R	R	R	R	RW	RW	RW
Bits	Name		Description					
[7:3]	Reserved		Reserved					
[2:0]	PH6 CBG		[2:0] = 000 : 69.2%, [2:0] = 001 : 76.9%, [2:0] = 010 : 84.6%, [2:0] = 011 : 92.3%, [2:0] = 100 : 100% (default), [2:0] = 101 : 107.69%, [2:0] = 110 : 115.38%, [2:0] = 111 : 123.08%					

Command Code: D6h								
The IOUT_FAST_OC_FAULT_LIMIT command sets the value of the pre-phase output current, in Amps, that causes an fast over-current fault condition.								
Sets SLOW_OC delay time. The SLOW_OC_DLY_Time command sets continuous time after the current must exceed IOUT_SLOW_OC_FAULT_LIMIT.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_IOUT_FAST_OC_FAULT_LIMIT & MFR_SLOW_OCDLY							
Default Value	0x05							
Read/Write	R	R	R	R	RW	RW	RW	RW
Bits	Name		Description					
[7:4]	Reserved		Reserved					
[3:2]	IOUT_FAST_OC_FAULT_LIMIT		Iout(Fast_OCth) = [3:2] = 00 : 50A, [3:2] = 01 : 60A(default), [3:2] = 10 : 70A, [3:2] = 11 : 80A. For 6-phase, the max Iout(Fast_OCth) = 69A. (6-phase) [3:2] = 10 : 69A, [3:2] = 11 : 69A.					
[1:0]	SLOW_OC_DLY_Time		[1:0] = 00 : 20us, [1:0] = 01 : 32us (default), [1:0] = 10 : 44us, [1:0] = 11 : 56us					

Command Code: D7h								
Description: Sets Kton(switching frequency). The high switching frequency range is 550kHz ~ 1MHz, and the low switching frequency range is 220kHz ~ 500kHz.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_Kton							
Default Value	0x04h							
Read/Write	R	R	R	R	RW	RW	RW	RW
Bits	Name		Description					
[7:2]	Reserved		Reserved					
[3:0]	K _{TON} _freq		On-time (t _{ON}) K Factor Setting for high switching frequency [3:0] = 08h : 1.73, [3:0] = 09h : 1.91, [3:0] = 0Ah : 2.09, [3:0] = 0Bh : 2.27, [3:0] = 0Ch : 2.45, [3:0] = 0Dh : 2.82, [3:0] = 0Eh : 3.18, [3:0] = 0Fh : 3.55 On-time (t _{ON}) K Factor Setting for low switching frequency [3:0] = 00h : 0.64, [3:0] = 01h : 0.73, [3:0] = 02h : 0.82, [3:0] = 03h : 0.91, [3:0] = 04h : 1.00 (default), [3:0] = 05h : 1.18, [3:0] = 06h : 1.36, [3:0] = 07h : 1.55					

Command Code: D8h								
Description: Sets adaptive quick response threshold for load-line > 0mΩ and QR width maximum.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_AQR							
Default Value	0x00h							
Read/Write	RW	RW	RW	RW	RW	RW	RW	R
Bits	Name		Description					
[7:3]	AQR_TH		AQR Starting Trigger Threshold AQR_TH = [7:3] x 72mV, except [7:3]=00000 is disabled.					
[2:1]	QR_WD_MAX		QR Width Maximum [2:1] = 00 : 60%* tON (default), 01 : 80%* tON, 10 : 120%* tON, 11 : 160%* tON					
[0]	Reserved		Reserved					

Command Code: D9h								
Description: Sets VR_HOT# hysteresis. If temperature drops below OT warning condition minus hysteresis and then VR_HOT# de-asserts.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_VR_HOT_Hys							
Default Value	0x01h							
Read/Write	R	R	R	R	R	RW	RW	RW
Bits	Name		Description					
[7:3]	Reserved		Reserved					
[2:0]	VR_HOT# hysteresis		[2:0] = 000 : 3°C, [2:0] = 001 : 6°C (default), [2:0] = 010 : 9°C, [2:0] = 011 : 12°C, [2:0] = 100 : 15°C, [2:0] = 101 : 18°C, [2:0] = 110 : 21°C, [2:0] = 111 : 24°C					

Command Code: DAh								
Description: Sets VOUT behavior when RESET# asserts. Sets the behavior when the channel has fault.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_RESET_RESPONSE_Rail_Fault_Mode							
Default Value	0x01h							
Read/Write	R	R	R	R	R	R	RW	RW
Bits	Name		Description					
[7:2]	Reserved		Reserved					
[1]	Reset# pin response		[1] = 0: When the RESET# pin is asserted low, after a short delay (greater than 2μs), the output voltage begins to transition from the current value to the VBOOT value according to the slew-rate set in the VOUT_TRANSITION_RATE command. [1] = 1: When the RESET# pin is asserted low, after a short delay (greater than 2μs), channel is restarted.					
[0]	Channel fault mode		[0] = 0: All channel shutdown [0] = 1: Only fault channel shutdown (default)					

Command Code: DBh								
Description: Sets OV behavior.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_OV_Behavior							
Default Value	0x00h							
Read/Write	R	R	R	R	R	R	RW	RW
Bits	Name		Description					
[7:2]	Reserved		Reserved					
[1:0]	OV behavior		[1:0] = 00 : HiZ shutdown (default), [1:0] = 01 : Soft-shutdown, [1:0] = 10 : Turn on the low-side MOSFET [1:0] = 11 : Reserved					

Command Code: DCh								
Description: Sets DVS compensation.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_DVS_Compensate							
Default Value	0x01h							
Read/Write	R	R	R	R	R	R	RW	RW
Bits	Name		Description					
[7:2]	Reserved		Reserved					
[1:0]	DVS compensate		[1:0] = 00 : Disable While VOUT_TRANSITION rate is 1mV/us : [1:0] = 01 : 0.625uA, [1:0] = 10 : 1.25uA, [1:0] = 01: 2.5uA While VOUT_TRANSITION rate is 4mV/us : [1:0] = 01 : 1.25uA, [1:0] = 10 : 2.5uA, [1:0] = 01: 5uA While VOUT_TRANSITION rate is 8mV/us : [1:0] = 01 : 2.5uA, [1:0] = 10 : 5uA, [1:0] = 01: 10uA While VOUT_TRANSITION rate is 16mV/us : [1:0] = 01 : 5uA, [1:0] = 10 : 10uA, [1:0] = 01: 20uA					

Command Code: DDh								
Description: Sets Ai-gain for LL.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_Load_Line							
Default Value	0x01h							
Read/Write	R	R	R	R	R	R	RW	RW
Bits	Name		Description					
[7:2]	Reserved		Reserved					
[1:0]	Ai-gain		[1:0] = 00 : 0.25, [1:0] = 01 : 0.50 (default), [1:0] = 10 : 0.75, [1:0] = 11 : 1.00					

Command Code: DEh

Description: Sets IOUT gain calibration for the READ_IOUT result and the IOUT_SLOW_OC_FAULT_LIMIT & IOUT_FAST_OC_FAULT_LIMIT..

Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_IOUT_CAL_GAIN							
Default Value	0x00h							
Read/Write	R	R	R	R	RW	RW	RW	RW
Bits	Name		Description					
[7:4]	Reserved		Reserved					
[3:0]	IOUT gain		[3:0] = 0h : 0% (default), [3:0] = 1h : 0.78%, [3:0] = 2h : 1.56%, [3:0] = 3h : 2.34%, [3:0] = 4h : 3.13%, [3:0] = 5h : 3.91%, [3:0] = 6h : 4.69%, [3:0] = 7h : 5.47%, [3:0] = 8h : -6.25%, [3:0] = 9h : -5.47%, [3:0] = Ah : -4.69%, [3:0] = Bh : -3.91%, [3:0] = Ch : -3.13%, [3:0] = Dh : -2.34%, [3:0] = Eh : -1.56%, [3:0] = Fh : -0.78%					

Command Code: DFh

Description: Sets absolutely quick response threshold for no load-line.

Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_ABS_QR							
Default Value	0x00h							
Read/Write	RW	RW	RW	R	R	R	R	R
Bits	Name		Description					
[7:5]	ABS_QR_TH		ABS_QR Starting Trigger Threshold ABS_QR_TH = 15mV + [7:5] x 5mV, except [7:5]=000 is disabled.					
[4:0]	Reserved		Reserved					

Command Code: E0h


Description: Sets VOUT_RPT gain calibration for the READ_VOUT result.

Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_VOUT_RPT_GAIN							
Default Value	0x00h							
Read/Write	R	R	R	R	R	RW	RW	RW
Bits	Name		Description					
[7:3]	Reserved		Reserved					
[2:0]	VOUT_RPT gain		[2:0] = 000 : 0% (default), [2:0] = 001 : -2.34%, [2:0] = 010 : -4.68%, [2:0] = 011 : -7.02%, [2:0] = 100 : -9.36%, [2:0] = 101 : -11.7%, [2:0] = 110 : -14.04%, [2:0] = 111 : -16.38%					

Command Code: E1h								
Description: The MFR_IOUT_FAST_OC_FAULT_RESPONSE command sets the response type to an over-current fault.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_IOUT_FAST_OC_FAULT_RESPONSE							
Default Value	0xB9h							
Read/Write	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name		Description					
[7:6]	Response		[7:6] = 00: No shutdown (ignore fault response mode) [7:6] = 10: The device shuts down and responds according to the retry setting in bits [5:3]. All other combinations are not defined.					
[5:3]	Retry setting		[5:0] = 000 000: Latched shutdown					
[2:0]	Retry delay time		[5:0] = 111 001: Hiccup shutdown, retry delay time is 100ms + TON_DELAY. All other combinations are not defined.					

Command Code: E2h								
Description: Set MFR_CODE_VERSION to store NVM code version defined by user and the byte without defined format.								
Bits	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Name	MFR_CODE_VERSION							
Reset Value	0x00h							
Read/Write	RW	RW	RW	RW	RW	RW	RW	RW
Bits	Name		Description					
[7:0]	MFR_CODE_VERSION		NVM code version defined by user.					

Outline Dimension

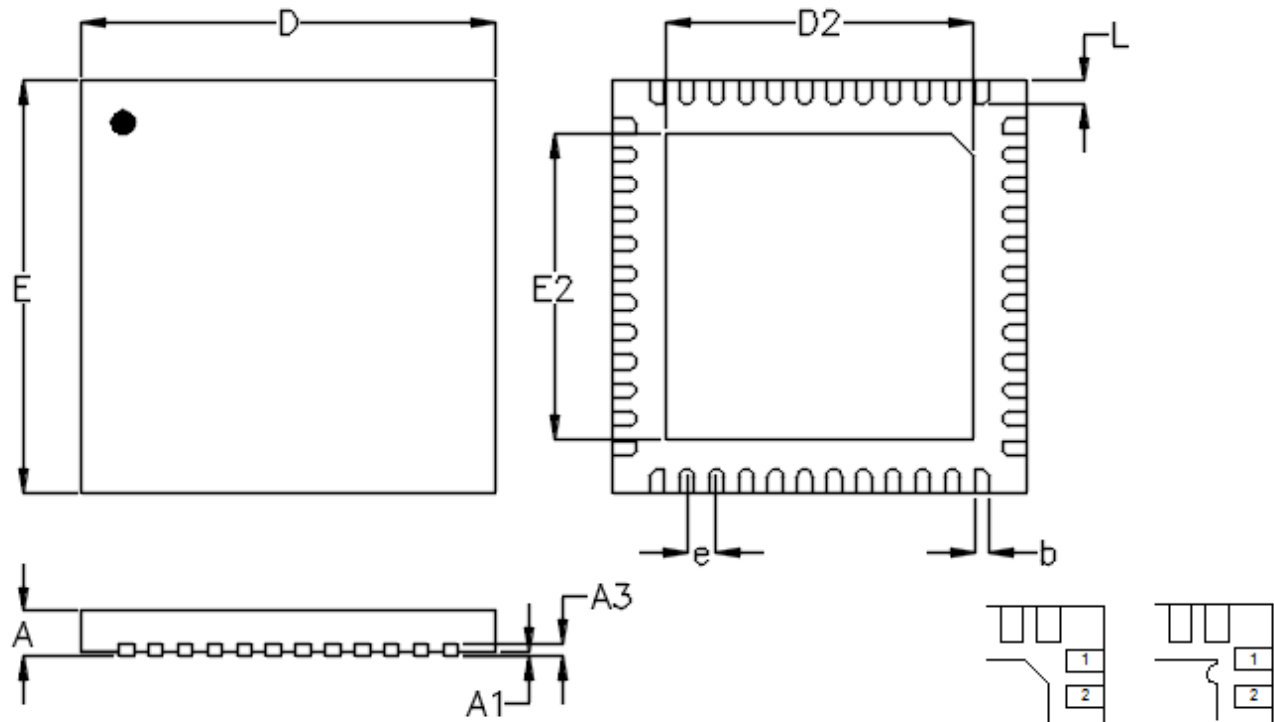

DETAIL A

Pin #1 ID and Tie Bar Mark Options


Note : The configuration of the Pin #1 identifier is optional, but must be located within the zone indicated.

Symbol		Dimensions In Millimeters		Dimensions In Inches	
		Min.	Max.	Min.	Max.
A		0.700	0.800	0.028	0.031
A1		0.000	0.050	0.000	0.002
A3		0.175	0.250	0.007	0.010
b		0.200	0.300	0.008	0.012
D		6.950	7.050	0.274	0.278
D2	Option1	5.050	5.250	0.199	0.207
	Option2	5.600	5.700	0.220	0.224
E		6.950	7.050	0.274	0.278
E2	Option1	5.050	5.250	0.199	0.207
	Option2	5.600	5.700	0.220	0.224
e		0.500		0.020	
L		0.350	0.450	0.014	0.018

W-Type 48L QFN 7x7 Package

Note : The package of RTQ8826 uses Option1.

Footprint Information

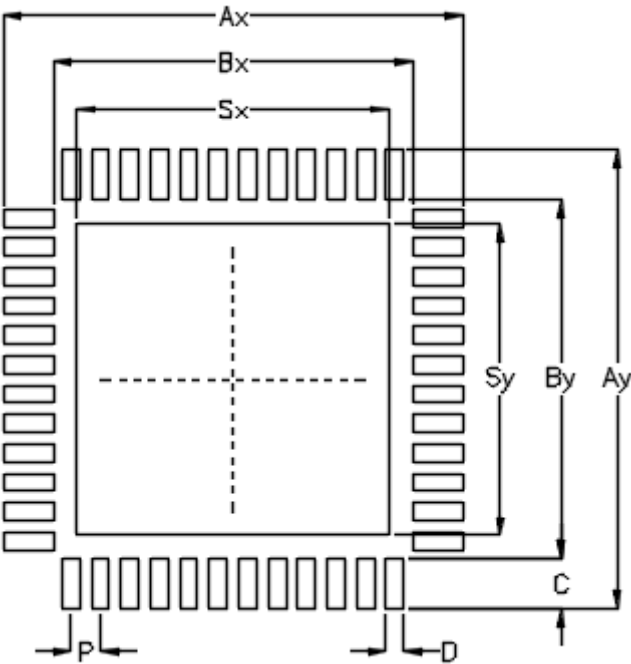


Package		Number of Pin	Footprint Dimension (mm)								Tolerance	
			P	Ax	Ay	Bx	By	C	D	Sx		Sy
V/W/U/XQFN7*7-48	Option1	48	0.50	7.80	7.80	6.10	6.10	0.85	0.30	5.30	5.30	±0.05
	Option2									5.65	5.65	


Note : The package of RTQ8826 uses Option1.

Packing Information

Tape and Reel Data

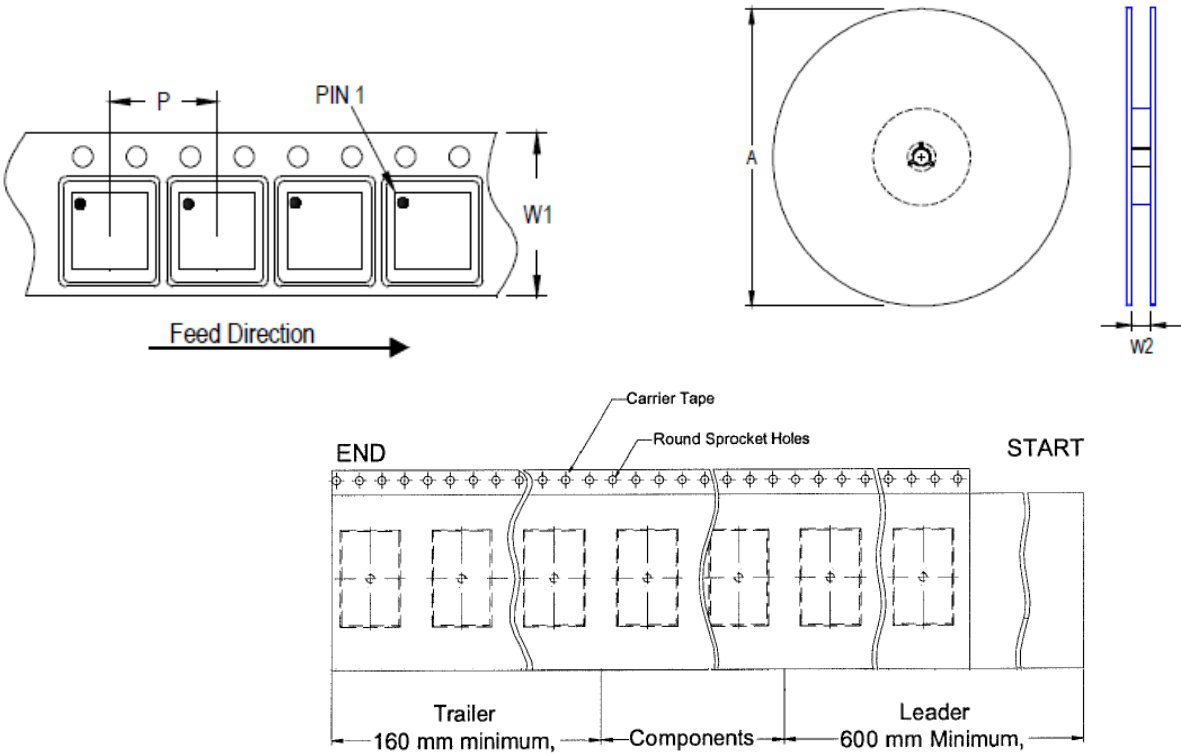

Package Type	Tape Size (W1) (mm)	Pocket Pitch (P) (mm)	Reel Size (A)		Units per Reel	Trailer (mm)	Leader (mm)	Reel Width (W2) Min./Max. (mm)
			(mm)	(in)				
QFN/DFN 7x7	16	12	330	13	2,500	160	600	16.4/18.4

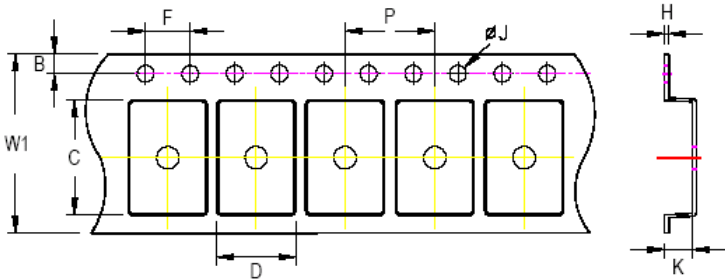

C, D, and K are determined by component size.
The clearance between the components and the cavity is as follows:
- For 16mm carrier tape: 1.0mm max.

Tape Size	W1	P		B		F		ØJ		H
	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Max.
16mm	16.3mm	11.9mm	12.1mm	1.65mm	1.85mm	3.9mm	4.1mm	1.5mm	1.6mm	0.6mm

Tape and Reel Packing

Step	Photo / Description	Step	Photo / Description
1	 Reel 13"	4	 1 reel per inner box Box G
2	 HIC & Desiccant (2 Unit) inside	5	 6 inner boxes per outer box
3	 Caution label is on backside of Al bag	6	 Outer box Carton A

Container Package	Reel		Box			Carton		
	Size	Units	Item	Reels	Units	Item	Boxes	Units
QFN and DFN 7x7	13"	2,500	Box G	1	2,500	Carton A	6	15,000

Packing Material Anti-ESD Property

Surface Resistance	Aluminum Bag	Reel	Cover tape	Carrier tape	Tube	Protection Band
Ω/cm^2	10^4 to 10^{11}	10^4 to 10^{11}	10^4 to 10^{11}	10^4 to 10^{11}	10^4 to 10^{11}	10^4 to 10^{11}

Richtek Technology Corporation

14F, No. 8, Tai Yuen 1st Street, Chupei City
Hsinchu, Taiwan, R.O.C.
Tel: (8863)5526789



Richtek products are sold by description only. Richtek reserves the right to change the circuitry and/or specifications without notice at any time. Customers should obtain the latest relevant information and data sheets before placing orders and should verify that such information is current and complete. Richtek cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Richtek product. Information furnished by Richtek is believed to be accurate and reliable. However, no responsibility is assumed by Richtek or its subsidiaries for its use; nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Richtek or its subsidiaries.

Copyright © 2024 Richtek Technology Corporation. All rights reserved. **RICHTEK** is a registered trademark of Richtek Technology Corporation.

Datasheet Revision History

Version	Date	Description	Item
02	2024/2/7	Modify	Ordering Information on P2 Recommended Operating Conditions on P8 Application Information on P19, 28 Outline Dimension on P74 Footprint Information on P75 Packing Information on P77