

SPECIFICATION FOR APPROVAL

() Preliminary Specification
 (●) Final Specification


Title

20.1" UXGA TFT LCD

BUYER	BENQ
MODEL	

SUPPLIER	LG.Philips LCD Co., Ltd.
*MODEL	LM201U02
Suffix	A3C3

*When you obtain standard approval, please use the above model name without suffix

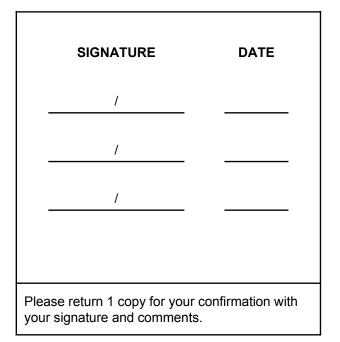

SIGNATURE	DATE
S.W.Lee / G.Manager REVIEWED BY	
H. S. Baek / G. Manager PREPARED BY	
K.G Park / Manager	
 MNT/TV Products Enginee LG. Philips LCD Co.,	• •

The preliminary document is subject to change without prior notice.



Contents

No	ITEM	Page
	COVER	1
	CONTENTS	2
	RECORD OF REVISIONS	3
1	GENERAL DESCRIPTION	4
2	ABSOLUTE MAXIMUM RATINGS	5
3	ELECTRICAL SPECIFICATIONS	6
3-1	ELECTRICAL CHARACTREISTICS	6
3-2	INTERFACE CONNECTIONS	8
3-3	SIGNAL TIMING SPECIFICATIONS	11
3-4	SIGNAL TIMING WAVEFORMS	12
3-5	COLOR INPUT DATA REFERNECE	13
3-6	POWER SEQUENCE	14
4	OPTICAL SFECIFICATIONS	15
5	MECHANICAL CHARACTERISTICS	19
6	RELIABLITY	22
7	INTERNATIONAL STANDARDS	23
7-1	SAFETY	23
7-2	EMC	23
8	PACKING	24
8-1	DESIGNATION OF LOT MARK	24
8-2	PACKING FORM	24
9	PRECAUTIONS	25
	APPENDIX	27



RECORD OF REVISIONS

Revision No	Revision Date	Page	DESCRIPTION
0.0	Nov.13.2001	-	First Draft (Preliminary)
0.1	Feb.20.2002	4	Outline Dimension: 24.5(D) mm -> 24.3(D) mm
		4	Weight: 4,100 g (typ.) ->3,700 g (typ.)
		19	Outline Dimension: 24.1(D) mm(Max) -> 24.3(D) mm(Typ)
		19	Weight: 4,100 g (Typ) ->3,700 g (Typ)
			4,300 g (Max) ->4,000 g (Max)
		20	Front View Update
		21	Rear View Update
		6,7	Electrical Characteristics Notes Update
		20	Front View Update
		21	Rear View Update
			4. Optical spec.
		15	Response time changed typ 30ms-→ 25ms
0.2	 Mar.08.2002	20	Front View Update(Lamp Wire:165mm->175mm)
0.2	Mai.00.2002	20	Rear View Update
	 Mar.21.2002		TMDS signal interface connector
			FI-WE21P-HF-E (JAE) ->FI-WE21P-HF-E (JAE)
			GT121-21P-LD (LG CABLE)
		15	Added the table 8
			Luminance Uniformity(TCO'99) : 1.7(max)
	Mar.27.2002	20	Front View Update
		21	Rear View Update
	Apr.02.2002	8	CNC1 Pin Configuration:Pin 8-> No Connection
		8	CNC1 Pin Configuration:Pin 18-> No Connection
		9	CNC2 Pin Configuration:Pin 12-> No Connection
	Apr.17.2002	10	Table 5; the color of backlight connector pin(LV) changed
			CN1: Pin2 (Blue -> Sky Blue), Pin 5(white -> Dark blue)
			CN2: Pin 2(white -> black)
			CN3: Pin 2(white -> black)
			CN4: Pin2 (Blue -> Sky blue), Pin 5(white -> Dark blue)



RECORD OF REVISIONS


Revision No	Revision Date	Page	DESCRIPTION
0.3	Jul.30.2002	16	4. Optical spec.
			Viewing Angle changed
			min 80 degree → typ 88 degree



1. General Description

The LM201U02 LCD is a Color Active Matrix Liquid Crystal Display with an integral Cold Cathode Fluorescent Lamp(CCFL) back light system. The matrix employs a-Si Thin Film Transistor as the active element. It is a transmissive type display operating in the normally black mode. This TFT-LCD has a 20.1 inch diagonally measured active display area with UXGA resolution(1200 vertical by 1600 horizontal pixel array). Each pixel is divided into Red, Green and Blue sub-pixels or dots which are arranged in vertical stripes. Gray scale or the luminance of the sub-pixel color is determined with a 8-bit gray scale signal for each dot, thus, presenting a palette of more than 16,777,216 colors.

The LM201U02 has been designed to apply the TMDSTM(Transition Minimized differential Signaling) as the interface method to enables a simple and low-cost implementation in both the host and monitor.

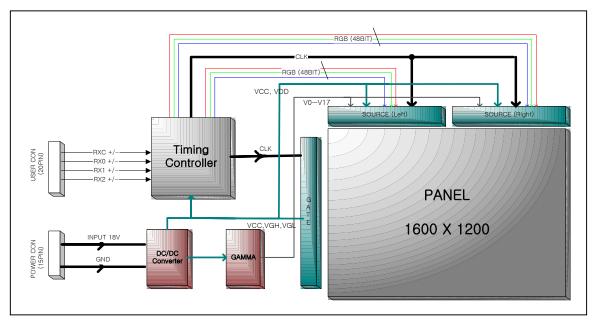

General Features

Active Screen Size Outline Dimension	20.1 inches(51cm) diagonal 467.8(H) x 361.0(V) x 24.3(D) mm(Typ.)
Pixel Pitch	0.255 mm x 0.255mm
Pixel Format	1600 horiz. By 1200 vert. Pixels RGB stripes arrangement
Color Depth	8-bit, 16,777,216 colors
Luminance, White	250 cd/m ² (Typ.)
Power Consumption	Total 41.0 Watt(Typ.)
Weight	3,700 g (typ.)
Display Operating Mode	Transmissive mode, normally black
Surface Treatment	Hard coating(3H) Anti-glare treatment of the front polarizer,
Interface	TMDS
LAMP	6 CCFL's(Cold Cathode Fluorescent Lamp)




2. Absolute Maximum Ratings

The following are maximum values which, if exceeded, may cause operation or damage to the unit.

Parameter	Symbol	Val	ues	Units	Notes	
Farameter	Symbol	Min	Max	Units		
Power Input Voltage	Vcc	-0.3	21	Vdc	at 25 \pm 5°C	
Operating Temperature	Тор	0	50	°C	1	
Storage Temperature	Hst	-20	60	°C	1	
Operating Ambient Humidity	Нор	10	90	%RH	1	
Storage Humidity	Нѕт	10	90	%RH	1	

Table 1. ABSOLUTE MAXIMUM RATINGS

Note : 1. Temperature and relative humidity range are shown in the figure below. Wet bulb temperature should be 39 °C Max, and no condensation of water.

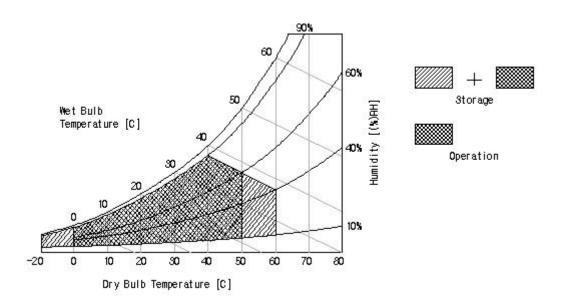



3. Electrical Specifications

3-1. Electrical Characteristics

The LM201U02 requires two power inputs. One input is employed to power the LCD electronics and to drive the voltages to drive the TFT array and liquid crystal. And the second input which powers the CCFL, is typically generated by an inverter. The inverter is an external unit to the LCD.

Parameter	Symbol		Values	Unit	Notes	
T drameter	Gynnoor	Min	Тур	Max	Onic	NOICS
MODULE :						
Power Supply Input Voltage	Vcc	18.0	20.0	22.0	Vdc	
Power Supply Input Current	lcc	_	0.4	0.7	Α	1
Power Consumption	Pc	-	6.3	12.6	Watt	1
Differential Impedance	Zm	90	100	110	Ohm	2
Inrush Current	I _{Rush}	-	-	3	Α	3
LAMP :						
Operating Voltage	V _{BL}	740(8mA)	750(7.5mA)	920(3mA)	V _{RMS}	3
Operating Current	I _{BL}	3.0	7.5	9.0	mA	
Established Starting Voltage	Vs					4
at 25 °C		-	-	1080	V _{RMS}	
at 0 °C		-	-	1500	V _{RMS}	
Operating Frequency	F _{BL}	40	50	60	kHz	5
Power Consumption	P _{BL}	-	33.8	37.2	Watt	6
Discharge Stabilization Time	Ts	-	-	3	min	7
Life Time		30,000			Hrs	8

Table 2. ELECTRICAL CHARACTERISTICS

Notes : 1. The input current shall be measured at V_{AA} of 18.0Vdc at 25 °C, refresh rate of 60Hz, and pixel clock frequency of 125MHz under 256gray(B/W) (typ)

- 2. This impedance value is needed to proper display and measured from TMDS Tx output and input connector of module.
- 3. The measuring condition The duration of rush current is about 20ms, and rising time of Power input is 1ms.
- 4. Operating voltage is measured at 25°C. The variance of the voltage is $\pm 10\%$.
- 5. The output voltage at the transformer in the inverter must be high considering to the loss of the ballast capacitor in the inverter. The voltage above V_s should be applied to the lamps for more than 1 second for start-up. Otherwise, the lamps may not be turned on.
- 6. Lamp frequency may produce interface with horizontal synchronous frequency and as a result this may cause beat on the display. Therefore lamp frequency shall be as away possible from the horizontal synchronous frequency and from its harmonics in order to prevent interference.

- 7. The lamp power consumption shown above does not include loss of external inverter at 25°C. lamp current is the lamp typical current.
- 8. Let's define the brightness of The used the lamp after being lighted for 5 minutes as 100%. TS is the time required for the brightness of the center of the lamp to be not less than 95%. The used lamp current is the lamp typical current.
- 9. The life time is defined as the time at which brightness of lamp is 50% compare to that of initial value at the typical lamp current on condition of continuous operating at 25±2°C.
- Note. Do not attach a conducting tape to connecting wire.

LG.PHILIPS LCD

If the lamp wire attach to a conducting tape, TFT-LCD Module has a low luminance and the inverter has abnormal action. Because leakage current is occurred between lamp wire and conducting tape.


The design of the inverter must have specifications for the lamp in LCD Assembly.

The performance of the Lamp in LCM, for example life time or brightness, is extremely influenced by the characteristics of the DC-AC inverter. So all the parameters of an inverter should be carefully designed so as not to produce too much leakage current from high-voltage output of the inverter. When you design or order the inverter, please make sure unwanted lighting caused by the mismatch of the lamp and the inverter(no lighting, flicker, etc) never occurs. When you confirm it, the LCD – Assembly should be operated in the same condition as installed in you instrument Requirements for a system inverter design, which is intended to have a better display performance, a better power efficiency and a more reliable lamp.

It shall help increase the lamp lifetime and reduce its leakage current.

- a. The asymmetry rate of the inverter current and voltage waveform should be 10% below;
- b. The distortion rate of the current and voltage waveform should be within $\sqrt{2 \pm 10\%}$;
- c. The ideal sine current and voltage waveform shall be symmetric in positive and negative polarities.

* Asymmetry rate = $|I_p - I_{-p}| / I_{rms}$ * 100%



* Distortion rate = I_p (or I_{-p}) / I_{rms}



3-2. Interface Connections

This LCD employs three kinds of interface connections. A 21 pin connector is used for TMDS signals from the host computer. A 15-pin connector is used for LCD module power and LCM controls signal from external monitor control circuits. And four connectors, a three pin and two pin connector, are used for the integral backlight system.

3-2-1. Signal Interface

The TMDS signal interface connector is FI-WE21P-HF-E by JAE and GT121-21P-LD by LG CABLE . Interface chip in host side, must be used TMDS[™], part No. Sil160, designed by Silicon Image Inc., or its equivalent.

The pin configuration for the 21 pin connector is shown in the table below.

Table 3 21PIN CONNECTOR (CNC1) PIN CONFIGURATION

Pin	Symbol	Description	Pin	Symbol	Description
1	TX1+	TMDS positive differential output (channel1)	11	TX2+	TMDS positive differential output (channel2)
2	TX1-	TMDS negative differential output (channel1)	12	TX2-	TMDS negative differential output (channel2)
3	SHLD1	Shield for TMDS channel 1	13	SHLD2	Shield for TMDS channel 2
4	SHLDC	Shield for TMDS clock	14	SHLD0	Shield for TMDS channel 0
5	TXC+	TMDS positive differential output (reference clock)	15	TX0+	TMDS positive differential output (channel 0)
6	TXC-	TMDS negative differential output (reference clock)	16	ТХ0-	TMDS negative differential output (channel 0)
7	GND	Logic Ground	17	NC	No Connection
8	NC	U U U U U U U U U U U U U U U U U U U		NC	No Connection
9	NC	No Connection	19	DDC_DAT	DDC2B Data (See note 2)
10	NC	No Connection	20	DDC_CLK	DDC2B Clock (See note 3)
			21	NC	No connection

1. Interface chips


1.1 LCD : Sil253(Silicon Image)

2. Connector

2.1 LCD : FI-WE21P-HF-E,GT121-21P-LD

2.2 Mating : FI-W21S or FI-W21M or compatible

2.3 Connector pin arrangement



Notes: 1. All shield pins and GND(ground) pin should be connected together and should also be connected to the LCD's metal frame.

2, 3. These pins are only for external monitor control circuits and directly connected to CNC2 connector.



3-2-2. Power Interface

A 15 pin connector (CNC2) for external monitor control circuits, is a model 53261 manufactured by Molex. The mating connector part number is 51021 or its equivalent. The pin configuration for this connector is shown in the table below.

Pin	Symbol	Description	Notes
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	GND NC GND V _{AA} GND NC NC NC NC NC SDA SCL GND	Ground No connection (Reserved) Ground LCM power supply, +20V(±10%) LCM power supply, +20V(±10%) Ground No connection (Reserved) No connection (Reserved) Ground No connection (Reserved) No connection (Reserved) No connection (Reserved) DDC data line out DDC clock line out Ground	1
Conn	lector pin arranger	nent 1 15	-

- Notes: 1. All GND(ground) pins should be connected together and should also be connected to the LCD's metal frame.
 - 2. Pin 13, 14 are for DDC2B communication between host computer and external monitor control circuits. These pins are directly connected to CNC1 connector.



3-2-3. Backlight Interface

The backlight interface connector is a model BHSR-02VS-1(CN2/CN3) and BHSR-05VS-2 (CN1/CN4) manufactured by JST. The mating connector part number are SM02B-BHSS-1-TB(2pin), SM04(9-E2)B-BHS-1-TB or equivalent. The pin configuration for the connector is shown in the table below.

No	Pin	Symbol	Description	Notes
014	1	HV	Power supply for lamp 1(High voltage side) - Pink	1
CN1	CN1 2 HV F		Power supply for lamp 2(High voltage side) – Sky Blue	1
	3	NC	NC	
	4	LV	Power supply for lamp 1(Low voltage side) - White	2
	5	LV	Power supply for lamp 2(Low voltage side) – Dark Blue	2
CN2	1	HV	Power supply for lamp 3(High voltage side) - Gray	1
CINZ	2	LV	Power supply for lamp 3(Low voltage side) - Black	2
CN12	1	HV	Power supply for lamp 4(High voltage side) - Gray	1
CN3	2	LV	Power supply for lamp 4(Low voltage side) - Black	2
CN4	1	HV	Power supply for lamp 6(High voltage side) - Pink	1
2 HV		HV	Power supply for lamp 5(High voltage side) – Sky Blue	1
	3	NC	NC	
	4	LV	Power supply for lamp 6(Low voltage side) - White	2
	5	LV	Power supply for lamp 5(Low voltage side) – Dark Blue	2

Table 5 BACKLIGHT CONNECTOR PIN CONFIGURATION

Notes: 1. The high voltage power terminal is colored pink,blue,gray. Ground pin color is white,blue,black. 2. The backlight ground should be common with LCD metal frame.

Up Side	<backlight connector="" diagram=""></backlight>		
	Lamp1		CN 1
	Lamp 2	┍╴╢╶┥	
	Lamp 3][CN 2

Down Side

Lamp 4	CN 3
Lamp 5	
Lamp 6	



3-3. Signal Timing Specifications

This is signal timing required at the input of the TMDS transmitter. All of the interface signal timing should be satisfied with the following specifications for it's proper operation.

	ITEM	SYMBOL	Min	Тур	Мах	Unit	Note
DCLK	Period	tськ	8.33	8.13	7.93	ns	
	Frequency	fclk	120	123	126	MHz	
Hsync	Period	tHP	1664	1680	1680		1
	Width-Active	twн	32	32	32	tcικ	2
Vsync	Period	tvp	1225	1230	1240	tHP	
	Frequency	fv	60	60	60	Hz	3
	Width-Active	twv	3 —	3	3	tHP	4
Data	Horizontal Valid	tнv	1600	1600	1600		
Enable	Horizontal Back Porch	tнвр	16	32	32	tclk	
	Horizontal Front Porch	thep	16	16	16		
	Horizontal Blank	-	64	80	thp- thv		twh+ thbp+ thfp
	Vertical Valid	tvv	1200	1200	1200		
	Vertical Back Porch	tvвр	20	25	35		
	Vertical Front Porch		2	2	2	tHP	
	Vertical Blank	-	25	30	tv₽- tv∨		twv+ tvbp+ tvfp

Table	6.	Timing	Table
IUDIC	ν.	i mining	I UDIC


Notes: 1. Hsync period shall be a double number of 8

2. Horizontal sync shall be active high.

- 3. Vertical frequency is only 60Hz
- 4. Vertical sync shall be active high.



3-4. Signal Timing Waveforms

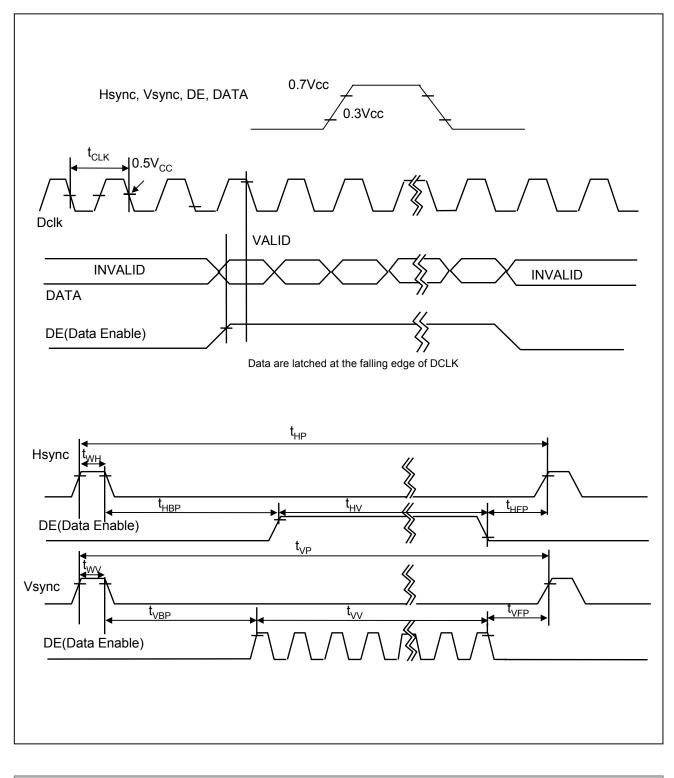



3-5. Color Input Data Reference


The brightness of each primary color(red,green and blue) is based on the 8-bit gray scale data input for the color; the higher the binary input, the brighter the color. The table below provides a reference for color versus data input.

												Inpu	ut Co	olor	Data	а		_							
	Color				RE	D							GRE	EEN							BL	UE			
		MS	_							MS								MS							SB
								R1																	B0
	Black	0 	0 	0 	0	0	0	0	0	0 	0	0	0	0 	0	0	0	0	0	0	0 	0 	0 	0	0
	Red (255)	1 	1 	1 	1	1	1	1 	1 	0 	0	0			0	0	0	0	0	0				0	0
	Green (255)	0 	0 	.0 	0	0	0	0		1 	1 	1 	1 	1 	1	1	1 	0	0	0				0	0
Basic	Blue (255)	0	0	.0	0	0	0	0	0	0	0	0	. 0	. 0	0	0	0	1	1	. 1	1 	1	1	.1	1
Color	Cyan	0	0	.0	.0	0	. 0	0	0	1	1	. 1	. 1	. 1	1	1	1	1	1	. 1	. 1	1	1 	.1	1
	Magenta	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1
	Yellow	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0
	White	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
	RED (000)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	RED (001)	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
RED							••••	• • • • •				• • • •			••••			····			••••			•••	
	RED (254)	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	RED (255)	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	GREEN (000)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	GREEN (001)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0
GREEN			••••		••••		••••	• • • • •	• • • •		••••	• • • •	••••		••••	••••	• • • •	····		••••	••••	••••		•••	
	GREEN (254)	0	 0	0	0	0	0	0	0	1	1	1	1	1	1	1	 0	0	0	0	0		0		
	GREEN (255)	 0	0	0	0	0	0	0	0	 1	1				1		 1	0	0	0			0		 0
	BLUE (000)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	BLUE (001)	 0	 0	 0		 0			 0	 0	0	 0	 0	 0		0	 0	 0	0	0	 0				
BLUE			••••		••••		••••	••••									••••							•••	
2202	BLUE (254)	 0				0			 0	 0	0	 0		 0		0	 0	 1		1	: 1	 1			
	BLUE (255)	 0	 0							 0		 0	 0	 0			 0	· · · ·		1	' 1			1	ĭ
	DLUE (200)	0	U	U	U	U	U	0	0	0	U	U	U	U	U	U	U		1	1	1	1	1	1	1

Table 7. COLOR DATA REFERENCE



3-6. Power Sequence

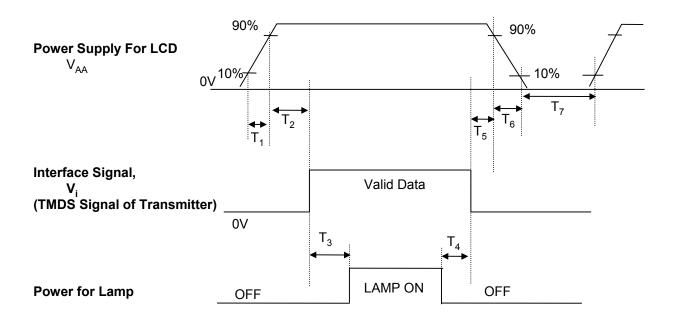

$\begin{tabular}{ c c c c c c c c c c c c c c c c c c c$	Parameter		Values		Units
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	Falameter	Min.	Тур.	Max.	Units
$ \begin{vmatrix} T_6^3 & - & - & 10 & ms \\ T_7 & 400 & - & - & ms \end{vmatrix} $	T ₃ T ₄ T ₅	200 0 -	- - - - - - -	50 - - 50	ms ms ms ms ms

- Notes : 1. Please avoid floating state of interface signal at invalid period.
 - 2. When the interface signal is invalid, be sure to pull down the power supply for LCD V_{AA} to 0V.
 - 3. Lamp power must be turn on after power supply for LCD and interface signal are valid.




4. Optical Specifications

Optical characteristics are determined after the unit has been 'ON' and stable for approximately 30 minutes in a dark environment at 25 °C. The values specified are at an approximate distance 50cm from the LCD surface at a viewing angle of Φ and θ equal to 0 ° and aperture 1 degree.

FIG. 1 presents additional information concerning the measurement equipment and method.

FIG. 1 Optical Characteristic Measurement Equipment and Method

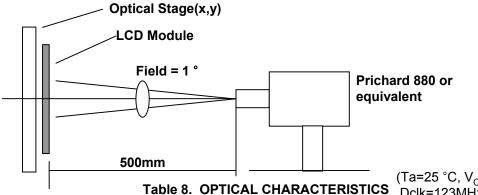

(Ta=25 °C, V_{CC}=20.0V, f_V=60Hz Dclk=123MHz, I_{BI}=7.5mA)


Deveryoter	Ourseland		Values			Neter
Parameter	Symbol	Min	Тур	MAx	Units	Notes
Contrast Ratio	CR	250	350	-		1
Surface Luminance, white	L _{WH}	200	250	-	cd/m ²	2
Luminance Variation	δ _{WHITE}	70	-	-	%	3
Luminance Uniformity(TCO'99)	L _R			1.7		4
Response Time	Tr		25	45	ms	5
Rising time	TrR		12	22		
Falling time	TrF		13	23		
Color Coordinates	1				1	
RED	RX	0.600	0.630	0.660	1	
	RY	0.310	0.340	0.370		
GREEN	GX	0.270	0.300	0.330		
	GY	0.550	0.580	0.610		
BLUE	BX	0.120	0.150	0.180		
	BY	0.080	0.110	0.140		
WHITE	wx wx	0.283	0.313	0.343		
	WY	0.299	0.329	0.359		
Viewing Angle						
x axis, right(∳=0°)	θr		88		degree	6
x axis, left (∳=180°)	θΙ		88			
y axis, up (φ=90°)	θu		88			
y axis, down (φ=270°)	θd		88]	
Gray Scale						7
Ver. 0.3	Jul	y.30. 2002				16 / 27




- Notes: 1. Contrast Ratio(CR) is defined mathematically as : Surface Luminance with all white pixels Contrast Ratio = Surface Luminance with all black pixels Contrast ratio shall be measured at the center of the display (Location P5). 2. Surface Luminance (L_{WH}) is measured at the center point (location P5) with all pixels displaying white 3. The variation in surface luminance, δ WHITE is defined as(VESA FPDM Ver1.0 306-1): Mimimum ($P_1, P_2, ..., P_9$) δ WHITE = X 100 Maximum (P₁, P₂,P₉) Where P1 to P9 are the luminance with all pixels displaying white at 9 locations. H/2 H/2 H/10H/10 \leftrightarrow \Leftrightarrow ΡЗ P2 </2 <P6 Ρ4 Ρ5 </2 Ρ9 P8 Н
 - 4. TCO'99 Certification Requirements and test methods for environmental labeling of display [flat] Report No.2 (×1.5.2. Luminance Uniformity) LR = (LMAX. + 30deg. / LMIN. + 30deg.) + (LMAX. - 30deg. / LMIN. - 30deg.)) / 2



5. The response time is defined as the following figure and shall be measured by switching the input signal for "black" and "white".

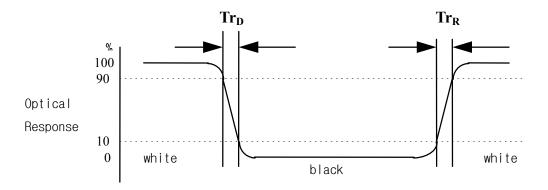

6. Viewing angle is the angle at which the contrast ratio is greater than 10.

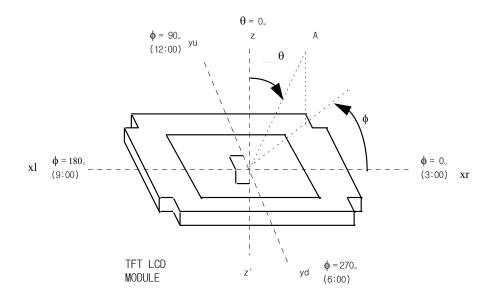



7. Grayscale Specification

Gray Level	Relative Luminance (%) Typ.
	Typ.
0	0.3
31	1.2
63	4.68
95	11.7
127	21.2
159	35.2
191	53.0
223	75.4
255	100




5. Mechanical Characteristics

The contents provide general mechanical characteristics for the model LM201U1. In addition the figures in the next page are detailed mechanical drawing of the LCD.

	Horizontal	$467.8\pm0.7\text{mm}$					
Outside dimensions	Vertical	$361\pm0.7mm$					
	Depth	24.3(Typ)mm					
Bezel area	Horizontal	413 mm					
	Vertical	311mm					
	Horizontal	408.0mm					
Active display area	Vertical	306.0mm					
Weight(approximate)	3,700g(Typ.),	4,000g(Max.)					
Surface Treatment	Hard coating(3H) Anti-glare treatment of the front polarizer						




<FRONT VIEW>

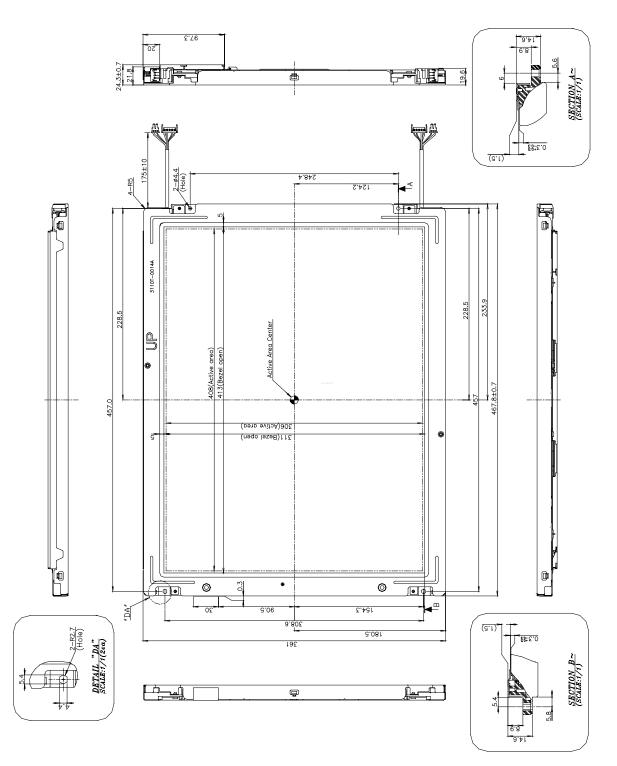



<REAR VIEW>

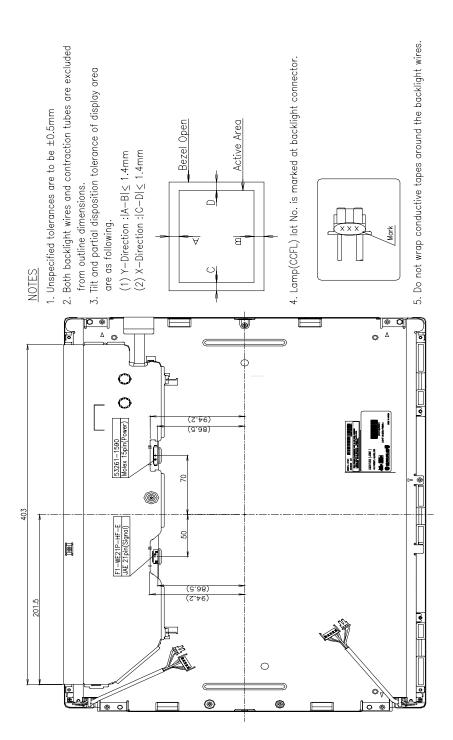



6. Reliability

Environment test condition

No.	Test Item	Conditions
1	High temperature storage test	Ta= 60°C 240h
2	Low temperature storage test	Ta= -20°C 240h
3	High temperature operation test	Ta= 50°C 60%RH 240h
4	Low temperature operation test	Ta= 0°C 240h
5	Vibration test (non-operating)	Waveform : Random Vibration level : 1.0G RMS Bandwidth : 10 ~ 500Hz Duration : X,Y,Z 10min One time each direction
6	Shock test (non-operating)	Shock level : 100G Waveform: half sine wave, 2ms Direction : ±X, ±Y, ±Z One time each direction
7	Altitude storage / shipment operating	0 - 40,000 feet(12,192m) 0 - 12,000 feet (3657.6m)

{ Result Evaluation Criteria }

There should be no change which might affect the practical display function when the display quality test is conducted under normal operating condition.



7. International Standards

7-1. Safety

- a) UL 1950 Third Edition, Underwriters Laboratories, Inc. Jan. 28, 1995.
 Standard for Safety of Information Technology Equipment Including Electrical Business Equipment.
- b) CAN/CSA C22.2 No. 950-95 Third Edition, Canadian Standards Association, Jan. 28, 1995. Standard for Safety of Information Technology Equipment Including Electrical Business Equipment.
- c) EN 60950 : 1992+A1: 1993+A2: 1993+A3: 1995+A4: 1997+A11: 1997
 IEC 950 : 1991+A1: 1992+A2: 1993+A3: 1995+A4: 1996
 European Committee for Electrotechnical Standardization(CENELEC)
 EUROPEAN STANDARD for Safety of Information Technology Equipment Including Electrical Business Equipment.

7-2. EMC


- a) ANSI C63.4 "Methods of Measurement of Radio-Noise Emissions from Low-Voltage Electrical and Electrical Equipment in the Range of 9kHZ to 40GHz. "American National Standards Institute(ANSI), 1992
- b) C.I.S.P.R "Limits and Methods of Measurement of Radio Interface Characteristics of Information Technology Equipment." International Special Committee on Radio Interference
- c) EN 55022 "Limits and Methods of Measurement of Radio Interface Characteristics of Information Technology Equipment." European Committee for Electrotechnical Standardization (CENELEC), 1998



8. Packing

8-1. Designation of Lot Mark

a) Lot Mark

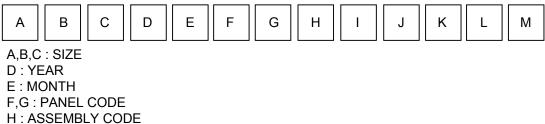

I,J,K,L,M : SERIAL NO.

Note:

1. YEAR

YEAR	97	98	99	2000	2001	2002	2003	2004	2005	2006	2007
Mark	7	8	9	0	1	2	3	4	5	6	7

2. MONTH

MONTH	Jan.	Feb.	Mar.	Apr.	May.	Jun.	Jul.	Aug.	Sep.	Oct.	Nov.	Dec.
Mark	1	2	3	4	5	6	7	8	9	А	В	С

3. Serial No.

Serial No.	1 ~ 99999	100000 ~
Mark	00001 ~ 99999	A0001 ~ A9999,, Z9999

b) Location of Lot Mark

Serial NO. is printed on the label. The label is attached to the backside of the LCD module. This is subject to change without prior notice.

8-2. Packing Form

- a) Package quantity in one box : 3 pcs
- b) Box Size : 470mm × 253mm × 573mm



9. PRECAUTIONS

Please pay attention to the following when you use this TFT LCD module.

9-1. MOUNTING PRECAUTIONS

- (1) You must mount a module using holes arranged in four corners or four sides.
- (2) You should consider the mounting structure so that uneven force(ex. Twisted stress) is not applied to the module.

And the case on which a module is mounted should have sufficient strength so that external force is not transmitted directly to the module.

- (3) Please attach a transparent protective plate to the surface in order to protect the polarizer. Transparent protective plate should have sufficient strength in order to the resist external force.
- (4) You should adopt radiation structure to satisfy the temperature specification.
- (5) Acetic acid type and chlorine type materials for the cover case are not describe because the former generates corrosive gas of attacking the polarizer at high temperature and the latter causes circuit break by electro-chemical reaction.
- (6) Do not touch, push or rub the exposed polarizers with glass, tweezers or anything harder than HB pencil lead. And please do not rub with dust clothes with chemical treatment. Do not touch the surface of polarizer for bare hand or greasy cloth.(Some cosmetics are determined to the polarizer.)
- (7) When the surface becomes dusty, please wipe gently with absorbent cotton or other soft materials like chamois soaks with petroleum benzene. Normal-hexane is recommended for cleaning the adhesives used to attach front / rear polarizers. Do not use acetone, toluene and alcohol because they cause chemical damage to the polarizer.
- (8) Wipe off saliva or water drops as soon as possible. Their long time contact with polarizer causes deformations and color fading.
- (9) Do not open the case because inside circuits do not have sufficient strength.

9-2. OPERATING PRECAUTIONS

- (1) The spike noise causes the mis-operation of circuits. It should be lower than following voltage : V=±200mV(Over and under shoot voltage)
- (2) Response time depends on the temperature.(In lower temperature, it becomes longer.)
- (3) Brightness depends on the temperature. (In lower temperature, it becomes lower.) And in lower temperature, response time(required time that brightness is stable after turned on) becomes longer.
- (4) Be careful for condensation at sudden temperature change. Condensation makes damage to polarizer or electrical contacted parts. And after fading condensation, smear or spot will occur.
- (5) When fixed patterns are displayed for a long time, remnant image is likely to occur.
- (6) Module has high frequency circuits. Sufficient suppression to the electromagnetic interference shall be done by system manufacturers. Grounding and shielding methods may be important to minimized the interference.



9-3. ELECTROSTATIC DISCHARGE CONTROL

Since a module is composed of electronic circuits, it is not strong to electrostatic discharge. Make certain that treatment persons are connected to ground through wrist band etc. And don't touch interface pin directly.

9-4. PRECAUTIONS FOR STRONG LIGHT EXPOSURE

Strong light exposure causes degradation of polarizer and color filter.

9-5. STORAGE

When storing modules as spares for a long time, the following precautions are necessary.

- (1) Store them in a dark place. Do not expose the module to sunlight or fluorescent light. Keep the temperature between 5°C and 35°C at normal humidity.
- (2) The polarizer surface should not come in contact with any other object.
 - It is recommended that they be stored in the container in which they were shipped.

9-6. HANDLING PRECAUTIONS FOR PROTECTION FILM

- (1) The protection film is attached to the bezel with a small masking tape When the protection film is peeled off, static electricity is generated between the film and polarizer. This should be peeled off slowly and carefully by people who are electrically grounded and with well ion-blown equipment or in such a condition, etc.
- (2) When the module with protection film attached is stored for a long time, sometimes there remains a very small amount of glue still on the bezel after the protection film is peeled off.
- (3) You can remove the glue easily. When the glue remains on the bezel or its vestige is recognized, please wipe them off with absorbent cotton waste or other soft material like chamois soaked with normal-hexane.



APPENDIX 1 : Required Signal Assignment for TMDS

Graphics Controller		Pane	elLink		Flat Panel	nel Controller	
24-bits	18-bits	SiI160	SiI161		18-bits	24-bits	
B0 - 0		DIE0	OE0			B0 - 0	
B1 - 0		DIE1	ÕE1			B1 - 0	
B2 - 0	B0 - 0	 DIE2	QE2		B0 - 0	B2 - 0	
B3 - 0	B1 - 0	DIE3	QE3		B1 - 0	B3 - 0	
B4 - 0	B2 - 0	 DIE4	QE4		B2 - 0	B4 - 0	
B5 - 0	B3 - 0	 DIE5	QE5		B3 - 0	B5 - 0	
B6 - 0	B4 - 0	 DIE6	QE6		B4 - 0	B6 - 0	
B7 - 0	B5 - 0	 DIE7	QE7		B5 - 0	B7 - 0	
G0 - 0		 DIE8	QE8			G0 - 0	
G1 - 0		 DIE9	QE9			G1 - 0	
G2 - 0	G0 - 0	 DIE10	QE10		G0 - 0	G2 - 0	
G3 - 0	G1 - 0	 DIE11	QE11		G1 - 0	G3 - 0	
G4 - 0	G2 - 0	 DIE12	QE12		G2 - 0	G4 - 0	
G5 - 0	G3 - 0	 DIE13	QE13		G3 - 0	G5 - 0	
G6 - 0	G4 - 0	 DIE14	QE14		G4 - 0	G6 - 0	
G7 - 0	G5 - 0	 DIE15	QE15		G5 - 0	G7 - 0	
R0 - 0		DIE16	QE16			R0 - 0	
R1 - 0	B 0 0	DIE17	QE17		B O 0	R1 - 0	
R2 - 0	R0 - 0	DIE18	QE18		R0 - 0	R2 - 0	
R3 - 0	R1 - 0	DIE19	QE19		R1 - 0	R3 - 0	
R4 - 0	R2 - 0	DIE20	QE20		R2 - 0	R4 - 0	
R5 - 0	R3 - 0	DIE21	QE21		R3 - 0	R5 - 0	
R6 - 0	R4 - 0	DIE22	QE22		R4 - 0	R6 - 0	
R7 - 0	R5 - 0	DIE23	QE23		R5 - 0	R7 - 0	
B0 - 1		 DIO0	QO0			B0 - 1	
B1 - 1		 DIO1	QO1	<u> </u>		B1 - 1	
B2 - 1	B0 - 1	 DIO2	QO2		B0 - 1	B2 - 1	
B3 - 1	B1 - 1	 DIO3	QO3		B1 - 1	B3 - 1	
B4 - 1	B2 - 1	 DIO4	QO4		B2 - 1	B4 - 1	
B5 - 1	B3 - 1	DIO5	QO5		B3 - 1	B5 - 1	
B6 - 1	B4 - 1	 DIO6	Q06		B4 - 1	B6 - 1	
B7 - 1	B5 - 1	DIO7	Q07		B5 - 1	B7 - 1	
G0 - 1		DIO8	Q08			G0 - 1	
G1 - 1	C0 1	DIO9	Q09		C0 1	G1 - 1	
G2 - 1	G0 - 1	DIO10	QO10		G0 - 1	G2 - 1	
G3 - 1	G1 - 1	DI011	Q011		G1 - 1	G3 - 1	
G4 - 1 G5 - 1	G2 - 1 G3 - 1	DIO12 DIO13	QO12 0013		G2 - 1 G3 - 1	G4 - 1 G5 - 1	
G5 - 1 G6 - 1	G3 - 1 G4 - 1	DIO13 DIO14	0013		G3 - 1 G4 - 1	G5 - 1 G6 - 1	
G7 - 1	G5 - 1	DI014 DI015	0014		G4 - 1 G5 - 1	G7 - 1	
R0 - 1	03-1	DI015 DI016	0015		05-1	R0 - 1	
R1 - 1		DI010 DI017	Q010			R0 - 1 R1 - 1	
R2 - 1	R0 - 1	DIO18	0018		R0 - 1	R2 - 1	
R3 - 1	R1 - 1	DI018	Q019		R1 - 1	R3 - 1	
R4 - 1	R2 - 1	 DIO20	Q020		R2 - 1	R4 - 1	
R5 - 1	R3 - 1	 DI021	Q021		R3 - 1	R5 - 1	
R6 - 1	R4 - 1	DIO22	0022		R4 - 1	R6 - 1	
R7 - 1	R5 - 1	 DIO23	Q023		R5 - 1	R7 - 1	
Shift CLK	Shift CLK	IDCK	ODCK		Shift CLK	Shift CLK	
VSYNC	VSYNC	VSYNC	VSYNC		VSYNC	VSYNC	
HSYNC	HSYNC	HSYNC	HSYNC		HSYNC	HSYNC	
DE	DE	DE	DE		DE	DE	
]		52	