

# MELSEC Q Series

Programmable Logic Controllers  
User's Manual  
Web Function

## **ETHERNET Modules** **QJ71E71-B2** **QJ71E71-B5**

Q Corresponding Ethernet  
Interface Module

User's Manual

**mitsubishi**

(Web function)

Q series  
Q series

Mitsubishi  
Programmable Controller

**MELSEC-Q**

**QJ71E71-100**

**QJ71E71-B5**

**QJ71E71-B2**



# • SAFETY PRECAUTIONS •

(Always read these instructions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The instructions given in this manual are concerned with this product. For the safety instructions of the programmable controller system, please read the user's manual of the CPU module to use.

In this manual, the safety instructions are ranked as "DANGER" and "CAUTION".



Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the  CAUTION level may lead to a serious consequence according to the circumstances. Always follow the instructions of both levels because they are important to personal safety.

Please save this manual to make it accessible when required and always forward it to the end user.

## [Design Precautions]

### DANGER

- For details on the operating status of each station when a communication abnormality occurs in the data link, see the manual for each data link. Erroneous outputs and malfunctions may lead to accidents.  
Not doing so can cause an accident due to false output or malfunction.
- To prevent malfunctions of the programmable controller system that may be caused by illegal e-mails from the outside, take a proper countermeasure (such as virus detection) so that illegal e-mails are not received by the mail server of this module.
- If it is necessary to ensure the security of the programmable controller system against unauthorized access from external devices via the Internet, appropriate measures must be incorporated by the user.
- Then controlling a running programmable controller (modifying data) by connecting peripheral devices to the CPU module or connecting a personal computer to the intelligent function module, configure an interlocking circuit in a sequence program so that the safety of the overall system is always maintained. Also, before performing other control operations (program modifications and operation status modifications (status control)) on the running programmable controller, be sure to read the manual carefully and thoroughly confirm the safety.  
Especially in the above mentioned control operations that are performed from an external device to a remote programmable controller, any problems on the programmable controller side may not be dealt with promptly due to abnormal data communication. In addition to configuring an interlocking circuit in a sequence program, determine how the system handles data communication abnormalities, etc. between the opposite devices and the programmable controller CPU.

## [Design Precautions]

### DANGER

- Do not write any data in the "system area" of the buffer memory of the intelligent function module. Also, do not output (turn on) the "use prohibited" signal, which is one of the output signals from the programmable controller CPU to the intelligent function module. If data is written to the "system area" or the "use prohibited" signal is output, there is a risk that the programmable controller system may malfunction.

### CAUTION

- Do not bundle the control wires and the communication cables with the main circuit and the power wires, and do not install them close to each other. They should be installed at least 100 mm (3.94 in.) away from each other. Failure to do so may generate noise that may cause malfunctions.
- When the status control (remote RUN/STOP, etc) of the programmable controller CPU is performed from the external device, select the "Always wait for OPEN" parameter set by a user in advance. (Select with the initial timing setting in the operational setting.) If "Do not wait for OPEN" is selected the communication line at remote STOP is closed. The communication line cannot be reopened on the programmable controller CPU side after that, and the remote RUN from the external device cannot start either.

## [Operating Precautions]

### CAUTION

- Please read the user's manual carefully and confirm the safety thoroughly before proceeding to perform control operations of the programmable controller (especially, modifications of data, programs and operation status (status control)) that is running by connecting personal computers, etc. to the intelligent function module.  
Incorrect modifications of data, programs and operating status may cause system malfunctions, damages to the machines, or accidents.

REVISIONS

\* The manual number is given on the bottom left of the back cover.

Print Date	* Manual Number	Revision
Jun., 2001	SH (NA)-080180-A	First Edition
Apr., 2003	SH (NA)-080180-B	<p><b>Additional model</b> QJ71E71-B5, QJ71E71-B2</p> <p><b>Correction</b> About the Generic Terms and Abbreviations, Section 1.1, Section 2.1, 2.2, Section 4.1, Chapter 6 (1)</p>
Aug., 2005	SH (NA)-080180-C	<p><b>Correction</b> Section 1.1, Section 4.1, 4.4.3, Chapter 6</p>
Jun., 2007	SH (NA)-080180-D	<p><b>Change of a term</b> "PLC" was changed to "programmable controller".</p> <p><b>Correction</b> About Manuals, About the Generic Terms and Abbreviations, Section 3.2 (1), Chapter 6 (3)</p>

Japanese Manual Version SH-080144-D

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2001 MITSUBISHI ELECTRIC CORPORATION

## INTRODUCTION

Thank you for purchasing the MELSEC-Q series programmable controller.  
Before using the equipment, please read this manual carefully to develop full familiarity with the functions and performance of the Q series programmable controller you have purchased, so as to ensure correct use.

### CONTENTS (This manual)

SAFETY PRECAUTIONS .....	A- 1
REVISIONS .....	A- 3
CONTENTS.....	A- 4
About Manuals .....	A- 8
The Manual's Use .....	A- 9
About the Generic Terms and Abbreviations .....	A-10
<b>1 OVERVIEW</b> .....	<b>1- 1 to 1- 4</b>
1.1 Overview.....	1- 1
<b>2 SYSTEM CONFIGURATIONS</b> .....	<b>2- 1 to 2- 4</b>
2.1 System Configurations.....	2- 1
2.2 Precautions for Using the Web Function.....	2- 3
<b>3 OPERATING PROCEDURE</b> .....	<b>3- 1 to 3- 4</b>
3.1 General Procedure up to Communication Using the Web Function .....	3- 1
3.2 How to Obtain and Set Up the Communication Library and the Sample Screen.....	3- 2
<b>4 VERIFYING THE OPERATION OF THE WEB FUNCTION USING A SAMPLE SCREEN</b> .....	<b>4- 1 to 4-16</b>
4.1 Web Function Items Available on the Sample Screen .....	4- 1
4.2 Operating Procedure.....	4- 1
4.3 Explanation of the Sample Screen .....	4- 2
4.4 Example of Data Communication on the Sample Screen .....	4- 3
4.4.1 Device Read/Write .....	4- 5
4.4.2 Remote RUN/STOP .....	4- 9
4.4.3 Data Request.....	4-11
4.4.4 Proxy Setting .....	4-13
4.5 Configurations of Files on the Sample Screen.....	4-15
<b>5 EXAMPLE OF CREATING A FILE FOR ACCESSING THE PROGRAMMABLE CONTROLLER</b> .....	<b>5- 1 to 5- 9</b>
<b>6 COMMUNICATION LIBRARY FUNCTIONS</b> .....	<b>6- 1 to 6- 5</b>
<b>INDEX</b> .....	<b>Index- 1 to Index- 2</b>

## 1 OVERVIEW

- 1.1 Overview of the Ethernet Module
- 1.2 Features of the Ethernet Module
- 1.3 Additional Functions in Function Version B or later
- 1.4 Software Configuration

## 2 SYSTEM CONFIGURATIONS

- 2.1 Applicable Systems
- 2.2 Devices Required for Network Configuration
- 2.3 For Use in Multiple CPU System
- 2.4 For Use with Q00J/Q00/Q01CPU
- 2.5 For Use with Q12PRH/Q25PRHCPU
- 2.6 For Use at MELSECNET/H Remote I/O Station
- 2.7 Checking the Function Version and Serial No.

## 3 SPECIFICATIONS

- 3.1 Performance Specifications
- 3.2 Data Codes for Communication
- 3.3 Relationship between the External Devices and Additional Functions for Each Communication Function
- 3.4 Ethernet Module Function List
- 3.5 Dedicated Instruction List
- 3.6 List of GX Developer Setting Items for Ethernet Modules
- 3.7 List of Input/Output Signals to/from the Programmable Controller CPU
- 3.8 List of Applications and Assignments of the Buffer Memory

## 4 SETTINGS AND PROCEDURES PRIOR TO OPERATION

- 4.1 Loading and Installation
- 4.2 Settings and Procedures Prior to Starting the Operation
- 4.3 Components of the Ethernet Module
- 4.4 Connecting to the Network
- 4.5 Settings from GX Developer
- 4.6 Network Parameters Setting the Number of MELSECNET/Ethernet Cards
- 4.7 Operational Settings
- 4.8 Self-Diagnostic Tests
- 4.9 Maintenance and Inspection

## 5 COMMUNICATION PROCEDURE

- 5.1 Overview of the Communication Procedure
- 5.2 Initial Processing
- 5.3 Router Relay Parameter
- 5.4 Confirming the Completion of the Initial Processing
- 5.5 Open Settings
- 5.6 Open Processing/Close Processing of the Connection
- 5.7 Pairing Open
- 5.8 Automatic Open UDP Port
- 5.9 Corresponding with the QCPU Remote Password Function
- 5.10 Hub Connection Status Monitor Function
- 5.11 Configuring a Network in Redundant System (Redundant System Support Function)

## 6 COMMUNICATION USING THE MC PROTOCOL

- 6.1 Data Communication Function
- 6.2 Utilizing the MX Component

## 7 FIXED BUFFER COMMUNICATION (WITH THE PROCEDURE EXIST CONTROL METHOD)

- 7.1 Control Method
- 7.2 Sending Control Method
- 7.3 Receiving Control Method
- 7.4 Data Format
- 7.5 Programming

## 8 FIXED BUFFER COMMUNICATION (WITH THE NO PROCEDURE CONTROL METHOD)

- 8.1 Control Method
- 8.2 Sending Control Method
- 8.3 Receiving Control Method
- 8.4 Data Format
- 8.5 Simultaneous Broadcast Using UDP/IP
- 8.6 Programming

## 9 COMMUNICATION USING THE RANDOM ACCESS BUFFER

- 9.1 Control Method
- 9.2 Data Format
- 9.3 Physical and Logical Addresses of the Random Access Buffer
- 9.4 Precautions when Creating Programs

## 10 DEDICATED INSTRUCTIONS

- 10.1 Dedicated Instruction List
- 10.2 ZP.BUFRCV
- 10.3 ZP.BUFRCVS
- 10.4 ZP.BUFSND
- 10.5 ZP.CLOSE
- 10.6 ZP.ERRCLR
- 10.7 ZP.ERRRD
- 10.8 ZP.OPEN
- 10.9 ZP.UINI

## 11 TROUBLESHOOTING

- 11.1 How to Check Errors Using LED Displays
- 11.2 How to Check an Error Through GX Developer
- 11.3 Error Code List
- 11.4 Troubleshooting Flowchart

APPENDIX

- Appendix 1 Function Upgrade for the Ethernet Module
- Appendix 2 The QnA/A Series Module
- Appendix 3 Installing the Ethernet Module on Existing Systems
- Appendix 4 Processing Time
- Appendix 5 ASCII Code List
- Appendix 6 References
- Appendix 7 External Dimensions
- Appendix 8 Program Examples
- Appendix 9 Communication Support Tool (MX Component)
- Appendix 10 Differences between the Ethernet and the IEEE802.3
- Appendix 11 ICMP Protocol Supported by the Ethernet Module
- Appendix 12 Setting Value Recording Sheets

- 1 OVERVIEW
  - 1.1 Overview of the MELSEC Communication Protocol
  - 1.2 Features of the MELSEC Communication Protocol
- 2 DATA COMMUNICATION USING THE MELSEC COMMUNICATION PROTOCOL
  - 2.1 Types and Applications of Data Communication Frames
  - 2.2 Accessible Range of Each Data Communication Frames
  - 2.3 How to Read the Control Procedures of the MC Protocol
  - 2.4 Access Timing of the Programmable Controller CPU Side
  - 2.5 Setting Method for Writing to the Programmable Controller CPU during RUN
  - 2.6 Accessing Other Stations
  - 2.7 Precautions on Data Communication
  - 2.8 Time Chart and Communication Time of the Transmission Sequence of the Serial Communication Module
  - 2.9 Transmission Time When Accessing Other Stations via MELSECNET/G, MELSECNET/H, MELSECNET/10
  - 2.10 Compatibility with Multiple CPU Systems
  - 2.11 Compatibility with the Q00CPU, Q01CPU Serial Communication Function
- 3 WHEN COMMUNICATING USING THE QnA COMPATIBLE 3E/3C/4C FRAMES OR 4E FRAME
  - 3.1 Message Formats
  - 3.2 List of Commands and Functions for the QnA Compatible 3E/3C/4C Frames and 4E Frame
  - 3.3 Device Memory Read/Write
  - 3.4 Buffer Memory Read/Write
  - 3.5 Reading from and Writing to the Buffer Memory of an Intelligent Function Module
  - 3.6 Programmable Controller CPU Status Control
  - 3.7 Drive Memory Defragmentation (for Other Station QnACPU)
  - 3.8 File Control
  - 3.9 Registering, Deleting and Reading User Frames: for Serial Communication Modules
  - 3.10 Global Function: for Serial Communication Modules
  - 3.11 Data Transmission to an External device (On-Demand Function): for Serial Communication Modules
  - 3.12 Initializing the Transmission Sequence: for Serial Communication Modules
  - 3.13 Mode Switching: for Serial Communication Module
  - 3.14 Turning Off Displayed LEDs and Initializing Communication Error Information and Error Code: for Serial Communication Module
  - 3.15 Turning Off the COM.ERR LED: for Ethernet Modules
  - 3.16 Loopback Test
  - 3.17 Registering or Canceling Programmable Controller CPU Monitoring: for Serial Communication Modules
  - 3.18 Remote Password Unlock/Lock
- 4 WHEN COMMUNICATING USING THE QnA COMPATIBLE 2C FRAMES
  - 4.1 Control Procedures and Message Formats
  - 4.2 Contents of the Data Designation Items
  - 4.3 List of Commands and Functions for QnA Compatible 2C Frames
  - 4.4 Precautions on the Data Communication
  - 4.5 Example of Data Communication Using QnA Compatible 2C Frames
- 5 WHEN COMMUNICATING USING THE A COMPATIBLE 1C FRAMES
  - 5.1 Control Procedures and Message Formats
  - 5.2 Device Memory Read/Write
  - 5.3 Extension File Register Read and Write
  - 5.4 Reading and Writing in the Buffer Memory of an Intelligent Function Module
  - 5.5 Loopback Test
- 6 WHEN COMMUNICATING USING THE A COMPATIBLE 1E FRAMES
  - 6.1 Message Formats and Control Procedures
  - 6.2 List of Commands and Functions for A Compatible 1E Frames
  - 6.3 Device Memory Read/Write
  - 6.4 Extension File Register Read and Write
  - 6.5 Reading and Writing in the Buffer Memory of an Intelligent Function Module
- APPENDIX
  - Appendix 1 Reading and Writing by Designation of the Device Memory Extension
  - Appendix 2 Reading from and Writing to the Buffer Memory
  - Appendix 3 Processing Time of the Programmable Controller CPU Side While Communicating Using the MC Protocol

## About Manuals

The following manuals are also related to this product.  
In necessary, order them by quoting the details in the tables below.

### **Related Manuals**

Manual name	Manual number (Model code)
<b>Q Corresponding Ethernet Interface Module User's Manual (Basic)</b> This manual explains the specifications of the Ethernet module, data communication procedures with opposite devices, line connections (open/close), fixed buffer communication, random access buffer communication, and troubleshooting.	SH-080009 (13JL88)
<b>Q Corresponding Ethernet Interface Module User's Manual (Application)</b> This manual explains the e-mail function of the Ethernet module, the programmable controller CPU status monitoring function, the communication function via MELSECNET/G, MELSECNET/H, MELSECNET/10 as well as the communication function using data link instructions, and how to use file transfer (FTP server), etc. (sold separately)	SH-080010 (13JL89)
<b>Q Corresponding MELSEC Communication Protocol Reference Manual</b> This manual explains the communication methods and control procedures through the MC protocol for the external devices to read and write data from/to the programmable controller CPU using the serial communication module/Ethernet module. (sold separately)	SH-080008 (13JF89)

## The Manual's Use

### ● How to use this manual

This manual explains how to use the Web function of the Ethernet module (QJ71E71-100, QJ71E71-B5 and QJ71E71-B2).

Please refer to the applicable items of this manual by referring to the following outline of the contents of this manual:

#### (1) To find out how to use the Web function and to learn about the operating environment

- Chapter 1 describes an overview of the Web function.
- Chapter 2 describes a system configuration for utilizing the Web function.

#### (2) To find out about the procedure for using the Web function

- Section 3.1 describes the procedure up to communication using the Web function.
- Section 3.2 describes how to obtain and set up the communication library and sample screen.
- Section 4.2 describes the procedure for accessing the programmable controller using a sample screen.

#### (3) To check the operation of the Web function

Chapter 4 describes an example when accessing the programmable controller using a sample screen.

#### (4) To create data used to access the programmable controller by the user

- Section 4.5 describes an overview of ASP (Active Server Pages) files for accessing the programmable controller, as well as HTML (Hyper Text Markup Language) files to be displayed by the Web browser, both of which are to be created by the user.
- Chapter 5 describes an example of file creation for programmable controller access.
- Chapter 6 describes the communication library functions.

POINT
To know about the following items, see the Ethernet Interface Module User's Manual (Basic).
(1) To learn startup processing of Ethernet module <ul style="list-style-type: none"><li>• Chapter 4 describes a general procedure up to operation of Ethernet module.</li><li>• Section 5.4 describes confirmation of initial processing completion.</li></ul>
(2) Detailed descriptions of the error codes Chapter 11 describes troubleshooting, how to check for errors, and detailed descriptions of error codes for the Ethernet modules.
(3) Storage locations of the error codes for the Ethernet module Section 11.3 lists the error code storage locations in the buffer memory.

## About the Generic Terms and Abbreviations

Unless otherwise specified, this manual uses the following generic terms and abbreviations to describe Type QJ71E71-100, QJ71E71-B5 and QJ71E71-B2 Ethernet Interface Modules.

Generic Term/Abbreviation	Description	
ASP	Abbreviation for Active Server Pages	
External device	Generic term for personal computers, computers, workstations and Ethernet module etc. that are connected by the Ethernet for data communication	
Ethernet module	Abbreviation for Model QJ71E71-100, QJ71E71-B5 and QJ71E71-B2 Ethernet Interface Modules	
Ethernet network system	Abbreviation for 10BASE2, 10BASE5, and 10BASE-T, 100BASE-TX network systems	
GX Developer	Generic product name for SWnD5C-GPPW-E, SWnD5C-GPPW-EA, SWnD5C-GPPW-EV, and SWnD5C-GPPW-EVA. ("n" means version 4 or later.) "-A" and "-V" mean "volume license product" and "version-upgrade product" respectively.	
HTML	Abbreviation for Hyper Text Markup Language.	
HTTP	Abbreviation for Hyper Text Transfer Protocol This protocol sends/receives the information on World Wide Web in the Internet.	
MC protocol	Abbreviation for MELSEC communication Protocol Name of a communication system for accessing the programmable controller CPU from an external device using the communication procedure for Q serial communication modules or Ethernet interface modules etc. Two type of communication systems are available; one using ASCII code data and the other using binary code data. For more details, see to the Reference Manual.	
MELSECNET/10	Abbreviation for MELSECNET/10 Network system	
MELSECNET/H	Abbreviation for MELSECNET/H Network system	
MELSECNET/G	Abbreviation for MELSECNET/G Network system	
Personal computer	Generic term for IBM PC/AT(or 100% compatible) personal computer	
QCPU	Q mode	Generic term for Q00JCPU, Q00CPU, Q01CPU, Q02CPU, Q02HCPU, Q06HCPU, Q12HCPU, Q25HCPU, Q12PHCPU, Q25PHCPU, Q12PRHCPU, Q25PRHCPU, Q02UCPU, Q03UDCPU, Q04UDHCPU and Q06UDHCPU
Reference Manual	Abbreviation for the Q Corresponding MELSEC Communication Protocol Reference Manual	
URL	Abbreviation for Uniform Resource Locator.	
User's Manual (Application)	Abbreviation for the Q Corresponding Ethernet Interface Module Use's Manual (Application)	
User's Manual (Basic)	Abbreviation for the Q Corresponding Ethernet Interface Module Use's Manual (Basic)	
User's Manual (Web function)	Abbreviation for the Q Corresponding Ethernet Interface Module Use's Manual (Web function)	
Web browsers	Abbreviation for software that views Web pages.	
Web server	Abbreviation for the computer in which Web server software operates.	
Web server software	Generic name of server software that supports the WWW (World Wide Web) services.	

# 1 OVERVIEW

This manual explains the Web function of the MELSEC-Q Series model QJ71E71-100, QJ71E71-B5 and QJ71E71-B2 Ethernet interface module (hereinafter called the Ethernet module).


When applying the following program examples to the actual system, make sure to examine the applicability and confirm that it will not cause system control problems.

## 1.1 Overview

The following shows an overview of the Web function of the Ethernet module.

### (1) Programmable controller monitoring via the Internet using the Web function

The Web function of the Ethernet module is used for the system administrator to monitor Q Series CPUs at a remote location via the Internet, using a commercially available Web browser.

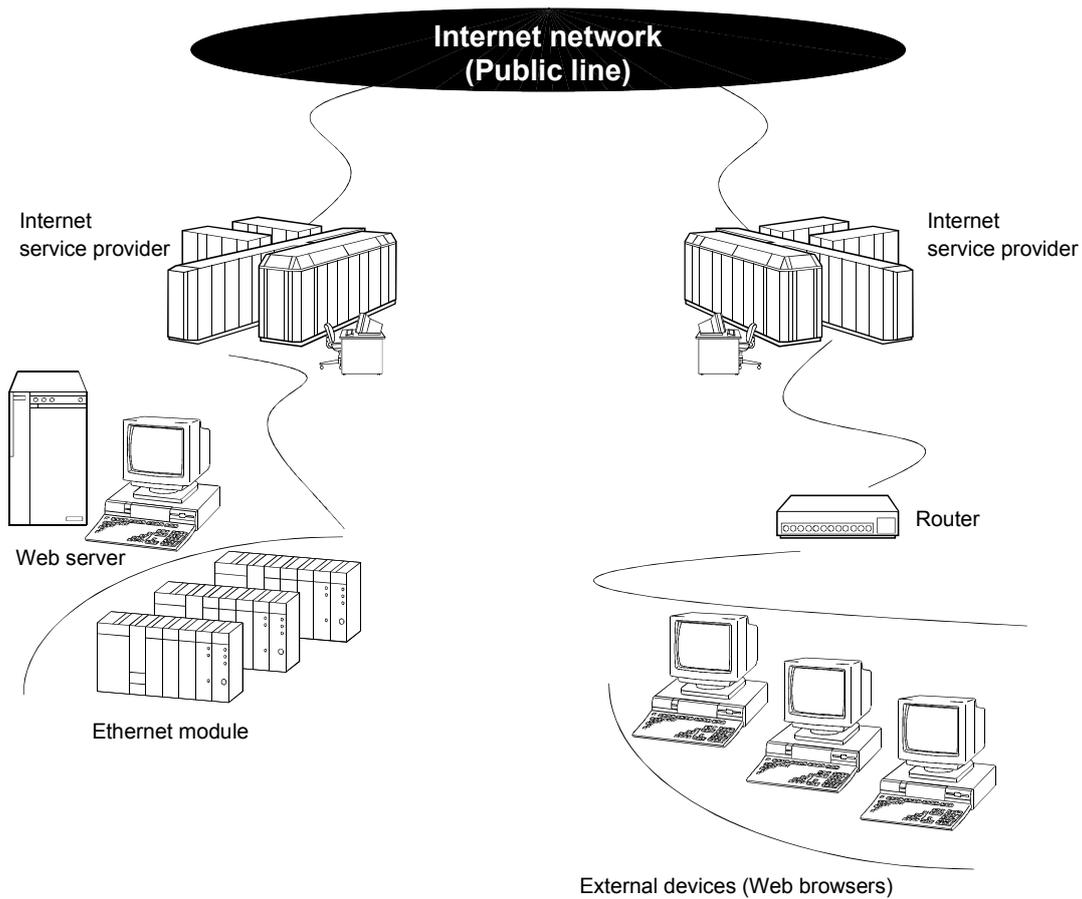

(2) Access function to the programmable controller

By using the Web function, the programmable controller data can be collected or updated, the CPU module operation can be monitored, and the status control of the CPU module can be performed in order to control and monitor the equipment on the programmable controller side using a Web browser (\*1).

\*1 With the Web function, exchange of information between the Ethernet module and the Web server, and between the Web server and the Web browser is performed via HTTP.

With the Web function, the programmable controller is accessed by sending/receiving messages of the MC protocol, which are used for communication between the programmable controller and the external device, via HTTP.


(3) Availability of a communication library and a sample screen

(a) The Web function can be used by installing the following:

	Required device/software	Description
Programmable controller side	Ethernet module	Subject module of this manual
Server computer (Web server)	Web server	See Section 2.1 (2).
	Communication library	See item (b).
	ASP files	Files created by the user to be used for accessing the programmable controller
	HTML files	Files created by the user to be used for displaying the Web browser
Device on the Web browser side	Web browser	See Section 2.1 (3).

(b) A sample screen (HTML files, ASP files) is provided. It is used to check the access function to the programmable controller using the communication library and the Web function. Contact your local agency or marketing company.


- 1) The user can easily create ASP files in order to access the programmable controller by using the communication library. In addition, the result of access to the programmable controller using ASP files can arbitrarily be displayed on the Web browser using user-created HTML files.

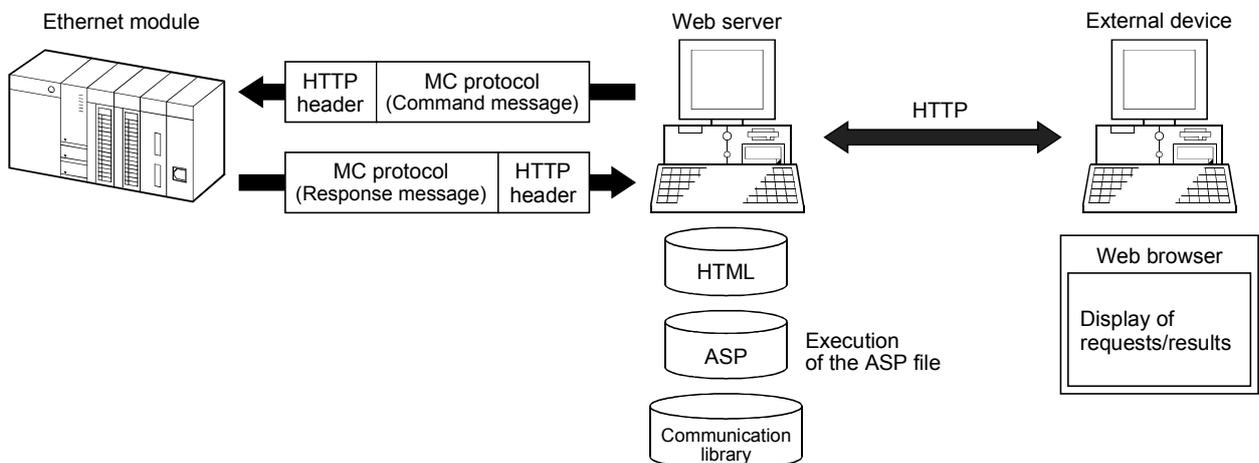

- 2) Device memory read/write, remote RUN/STOP and other operations can be performed for the QCPU of an Ethernet module mounted station by specifying the URL of the sample screen using the Web browser.

\* The execution result is displayed by simply entering the access device, the number of devices, etc. in the items to be displayed in the Web browser.

(Example) To read three points of data registers D0 = 1234H, D1 = 5678H and D2 = 9ABC<sub>H</sub>

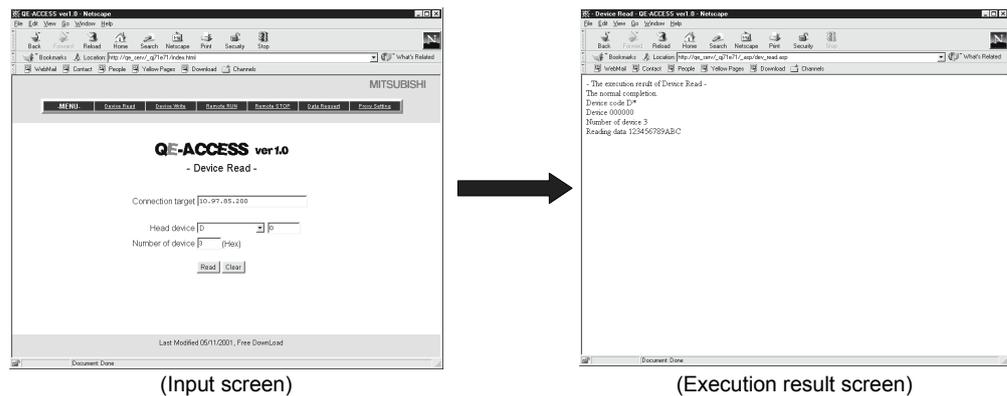

#### (4) Utilizing the Web server

Access to the programmable controller using the Web function becomes possible by combining an Ethernet module and a Web server computer.

(a) A system can easily be configured by utilizing a Web server.

- 1) Complicated screens can be created.

The user can create multiple HTML files and HTML files of large sizes without being limited by the size of the Ethernet module memory by storing these HTML files in a Web server.

\* The HTML files for Web browser can be created or changed easily if the user has knowledge of creating a web page.


- 2) Reducing the load on the Ethernet module

Since access programs for the programmable controller and control programs for Web browsers are executed in the Web server, the load on the Ethernet module can be minimized when accessing the programmable controller.

- 3) Separating an Ethernet line

By separating the line connecting between the Ethernet module and the Web server, and the line between the Web server and the Web browser, the screen data for the Web browser will not be sent to the line connecting between the Ethernet module and the Web server. Therefore, it is possible to reduce effect on the transmission/reception of data for system control for communication between the Ethernet module and the external device.

- (b) System expansion can easily be achieved because the Web server and the Ethernet module are separated.  
For example, the following function can be added:  
If it is necessary to maintain the security of the programmable controller system against any unauthorized access (to damage programs or data, etc.) from external devices, the user can take a measure by adding a firewall function to the Web server.
  - (c) The communication information between the Ethernet module and the Web server, and between the Web server and the Web browser can be recorded and used for maintenance using the functions of the Web server.
- (5) Remote password check function
- (a) The remote password check function of the Ethernet module is provided to prevent any unauthorized access to the QCPU by the user at a remote location.  
For details on the remote password check function, see Section 5.9 of the User's Manual (Basic).
  - (b) If the HTTP port is set as the target connection for remote password check, access to the QCPU will become possible by performing unlock processing of the remote password via the dialog box displayed in the Web browser.

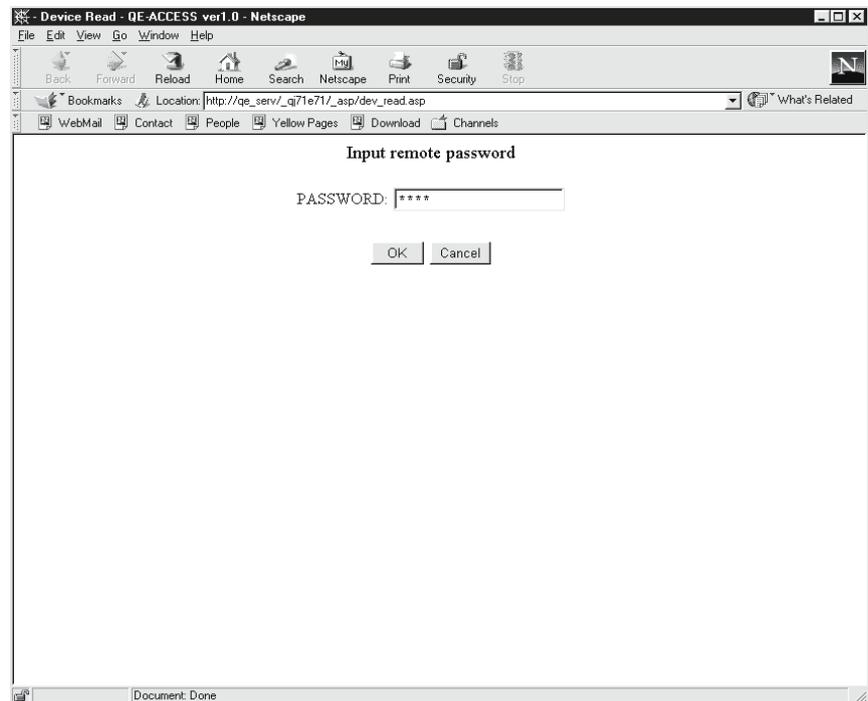

The remote password lock processing is performed when the Web browser ends.


## 2 SYSTEM CONFIGURATIONS

### 2.1 System Configurations


This section explains the environment and system configurations for using the Web function.

The following describes the system configurations for using the Web function of the Ethernet module.

#### (1) System configuration when accessing via the Internet

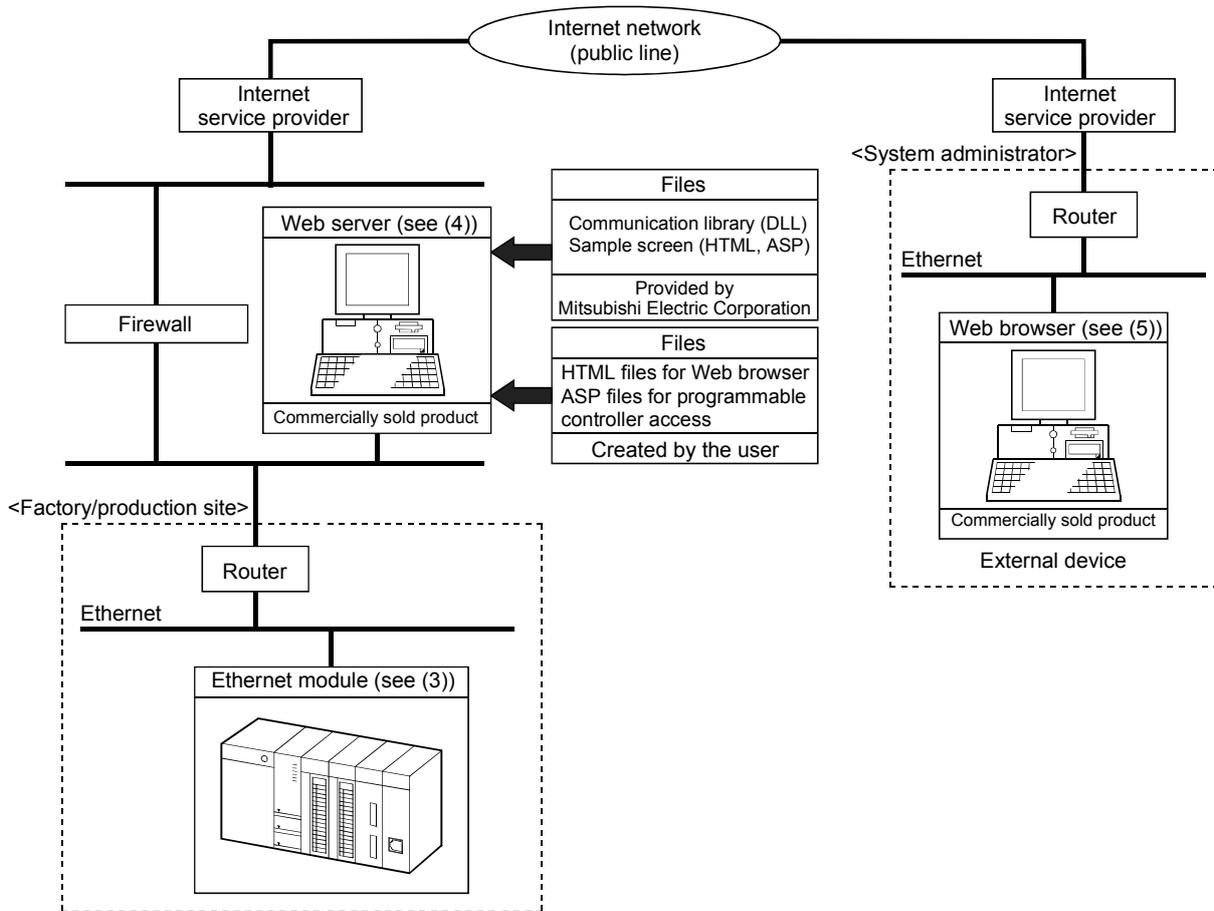

#### (2) System configuration when accessing via the Intranet

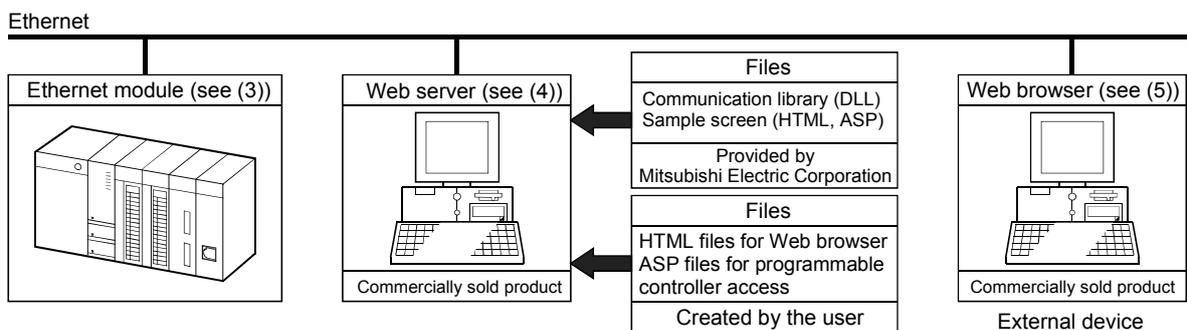

**(3) Ethernet module**

The Ethernet module that can use the Web function is as follows:

- Model QJ71E71-100 Ethernet interface module
- Model QJ71E71-B5 Ethernet interface module
- Model QJ71E71-B2 Ethernet interface module

For the applicable systems and the devices required for network configuration of the above Ethernet module, see Chapter 2 of the User's Manual (Basic).

**(4) Web server**

The Web server is a computer in which the Web server software operates.

(a) The operating environment of the Web server is listed below.

Name	Operating system (OS)	Remarks
Internet Information Server 5.0 (IIS5.0)	Microsoft® Windows® 2000 Server Operating System	(* 1)
	Microsoft® Windows® 2000 Professional Operating System	
Internet Information Server 4.0 (IIS4.0)	Microsoft® Windows NT® Server Network Operating System Version 4.0	(* 2)
Peer Web Services 4.0 (PWS4.0)	Microsoft® Windows NT® Workstation Operating System Version 4.0	
Personal Web Server 4.0 (PWS4.0)	Microsoft® Windows® 98 Operating System	(* 3)

\*1 Set up Internet Information Server 5.0 when installing the OS.

\*2 Set up Personal Web Server 4.0 when installing Windows NT® 4.0 Service Pack 3 or later and Option Pack.

(Windows NT® 4.0 Service Pack 3 or later and Option Pack can be obtained by downloading them from the web page of Microsoft Corporation or requesting their CD-ROMs to be sent.)

\*3 Set up Windows® 98 when installing the OS.

(b) It is necessary to set up the following files in the Web server in order to use the Web function.

- Communication library
- HTML files for Web browser
- ASP files for programmable controller access

**(5) Web browser**

Web browsers whose compatibility has been verified by Mitsubishi Electric Corporation are as follows:

- Internet Explorer 4.0 or later (Microsoft® Corporation)
- Netscape® Communicator 4.05 or later (Netscape® Communications Corporation)

## 2.2 Precautions for Using the Web Function

## (1) Precautions for configuring a system

- (a) It is necessary to take sufficient security measures for connection to the Internet.

Consult with a network installer, an Internet service provider, and a network administrator (person in charge of network planning and IP address management).


Mitsubishi Electric Corporation will not take any responsibility for any system problems that may occur while connecting to the Internet.

- (b) If a firewall function is installed in the network, set it so that the HTTP protocol can pass the firewall function.

- (c) When accessing multiple Ethernet modules via one Web server (Personal Web Server), the next processing may not be executed during the time from the request start through until the response is returned.

If no response is received due to a communication line fault, the next processing may be delayed until a timeout occurs on the Web server.

(Example) Accessing 2 Ethernet modules using one Web server

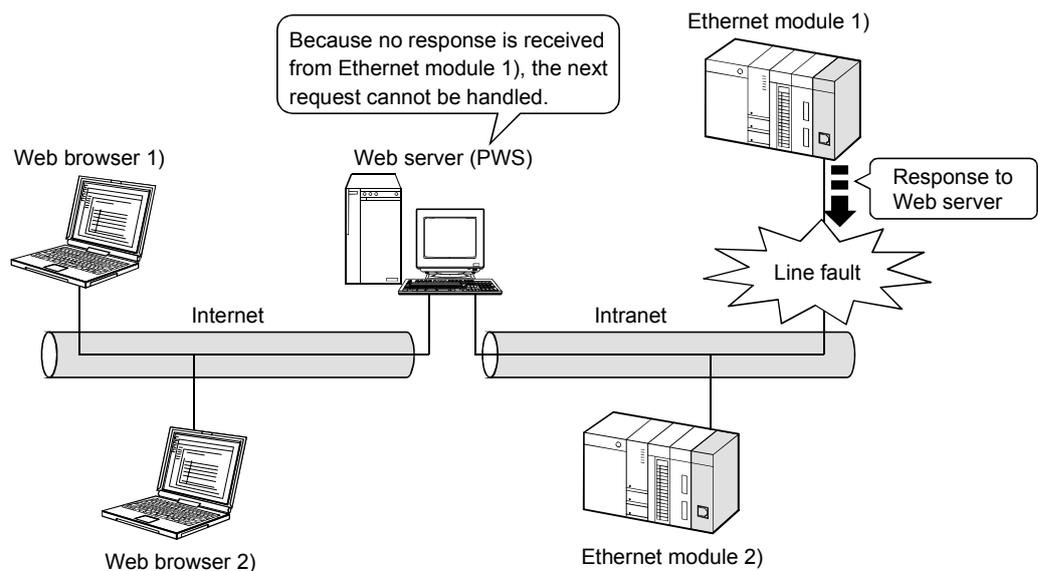

- Access from Web browser 1) to Ethernet module 1)
- Access from Web browser 2) to Ethernet module 2)

The line fault between the Web server and Ethernet module 1) disables the response from Ethernet module 1) to the Web server. This brings the Web server into the wait status and the access request from Web browser 2) to Ethernet module 2) has to wait at the Web server.

**(2) Precautions relating to security**

The remote password check function is not designed to completely prevent unauthorized access. When accessing a programmable controller CPU via the Internet, and if it is necessary to maintain the security of the programmable controller system, the user should take appropriate measures.

Mitsubishi Electric Corporation will not take any responsibility for any system problems that may occur due to unauthorized access.

\* Examples of measures against unauthorized access

- Installing a firewall function
- Security measures by the Web server

Take necessary measures by referring to the User's Manual of the device used.

**(3) Precautions for accessing the programmable controller CPU**

(a) When the user creates an ASP or HTML file for the Web function, use the communication library (QeAccess.dll) provided by Mitsubishi Electric Corporation.

The communication library cannot be created by the user.

For details on the communication library functions, see Chapter 6.

(b) The Web server provides a log function that records file access, etc. Periodically collect the access log for the programmable controller access file, and check the access status.

If there are too many unauthorized access logs to the Web server, the user should take appropriate measures to resolve unauthorized access.

(c) A maximum of four connections are allowed as the simultaneous access count when accessing the Ethernet module using the Web function.

If this maximum allowable access number is exceeded, a timeout error will be returned from a communication library function.

In case a timeout error occurs, extend the access interval time and retry.

**(4) Precautions for registering the communication library (DLL file)**

The regsvr32 may not be executed properly when registering the communication library (DLL file).

In that case, install the Microsoft® Corporation's Internet Explorer 5.5 or later and then, execute again.

### 3 OPERATING PROCEDURE

#### 3.1 General Procedure up to Communication Using the Web Function

The following shows a general procedure up to access to the programmable controller from the Web server using the Web function.


(1) Settings on the Ethernet module side

Start the Ethernet module mounted station.

(When it is operating normally, the [INIT. ] LED on the front of the Ethernet module lights up.)

For details, refer to the User's Manual (Basic).

(2) Settings on the external device side (Web server, Web browser)

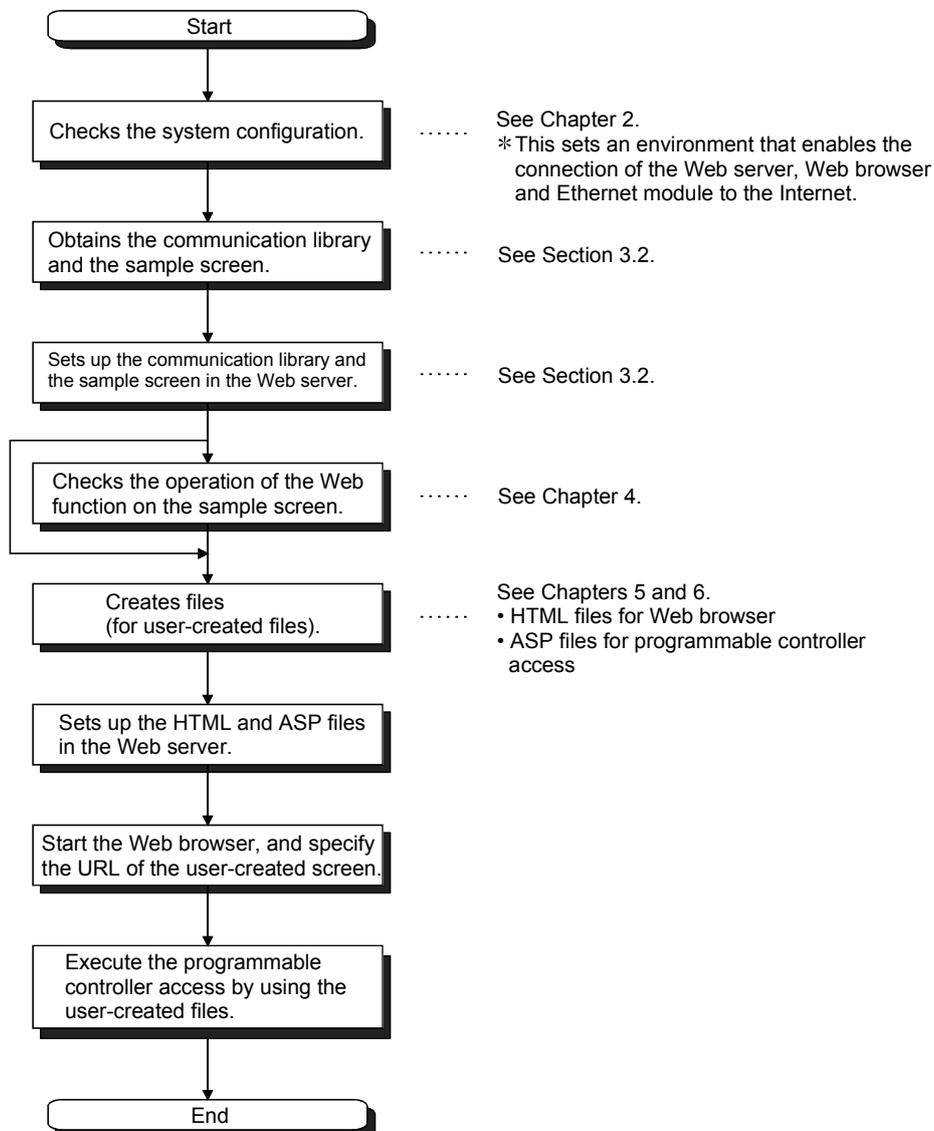

### 3.2 How to Obtain and Set Up the Communication Library and the Sample Screen

The following explains how to obtain the communication library and the sample screen, and their setup procedures in the Web server.

- (1) How to obtain the communication library and the sample screen  
Contact your local agency or marketing company to obtain "qeaccess-e.exe."  
The "qeaccess-e.exe" is a self-decompressing file.

(2) Setup

Set up the qeaccess.exe file in the Web server.

<b>POINT</b>
Web server software must be installed in the Web server in advance. For the operating environment, see Section 2.1.

(Procedure 1) Decompressing the qeaccess-e.exe file

Move the compressed qeaccess-e.exe file (approximately 75 KB) to any folder and decompress it. The following shows the file structure after decompression.

Folder name	File name	Remark
 _qj71e71	dev_read.html dev_write.html foot.html index.html menu.html proxy_set.html req_cmd.html rmt_run.html rmt_stop.html	For sample screen • HTML files
 _asp	dev_read.asp dev_write.asp proxy_set.asp req_cmd.asp rmt_run.asp rmt_stop.asp	For sample screen • ASP files
 _dll	QeAccess.dll	Communication library • DLL file
 _img	mitsubishi.gif qeaccess_logo.gif	For sample screen • Image files

(Procedure 2) Copying the files

Copy the decompressed folder (\_qj71e71) under the root folder “\inetpub\wwwroot” of the Web server.

## (Procedure 3) Registering the communication library (DLL file)


Register the DLL file in the OS registry of the Web server. The following shows how to register it in MS-DOS mode.

\* The regsvr32 may not be executed properly when registering the communication library (DLL file)

In that case, install the Microsoft® Corporation's Internet Explorer 5.5 or later and then, execute again.

- 1) Set the Web server to MS-DOS mode.
- 2) Switch the current directory.  
C:\> cd\inetpub\wwwroot\\_qj71e71\\_dll
- 3) Input the directory path of the regsvr32 command for Windows.  
set path = C:\windows\system
- 4) Register the communication library DLL with the regsvr32 command for Windows.  
C:\> \inetpub\wwwroot\\_qj71e71\\_dll> regsvr32 qeaccess.dll

(Example) When the root directory is in drive C

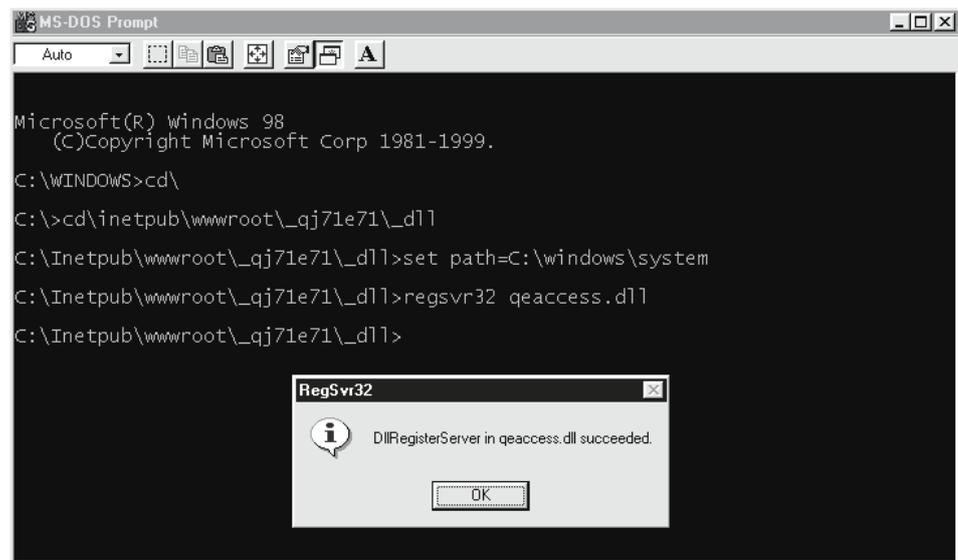

(Procedure 4) When all settings are complete, restart the Web server.

### REMARKS

When deleting the files that have been set up, delete all files below the \_qj71e71 folder of the root folder "\inetpub\wwwroot."

## 4 VERIFYING THE OPERATION OF THE WEB FUNCTION USING A SAMPLE SCREEN

This chapter explains how to access the QCPU using the Web function through a sample screen.

### 4.1 Web Function Items Available on the Sample Screen


The following lists the items of the Web function whose operations can be verified on the sample screen.

Function	File name	Description
Device Read	dev_read.html	Reads from a bit devices (X, Y, M, etc.) in 16-point units.
		Reads from a word devices (D, R, T, C, etc.) in one-point units.
Device Write	dev_write.html	Writes to a bit devices (X, Y, M, etc.) in 16-point units.
		Writes to a word devices (D, R, T, C, etc.) in one-point units.
Remote RUN	rmt_run.html	Requests a remote RUN operation to the programmable controller CPU.
Remote STOP	rmt_stop.html	Requests a remote STOP operation to the programmable controller CPU.
Data Request	req_cmd.html	Sends one MC protocol application data (subheader + text) that was input.
Proxy Setting	proxy_set.html	Specifies the proxy server when a Ethernet module is connected via a proxy server.

### 4.2 Operating Procedure

The following shows the operating procedure for accessing a QCPU from a sample screen.


Set up both the sample screen and the communication library in the Web server in advance. (See Chapter 3.)

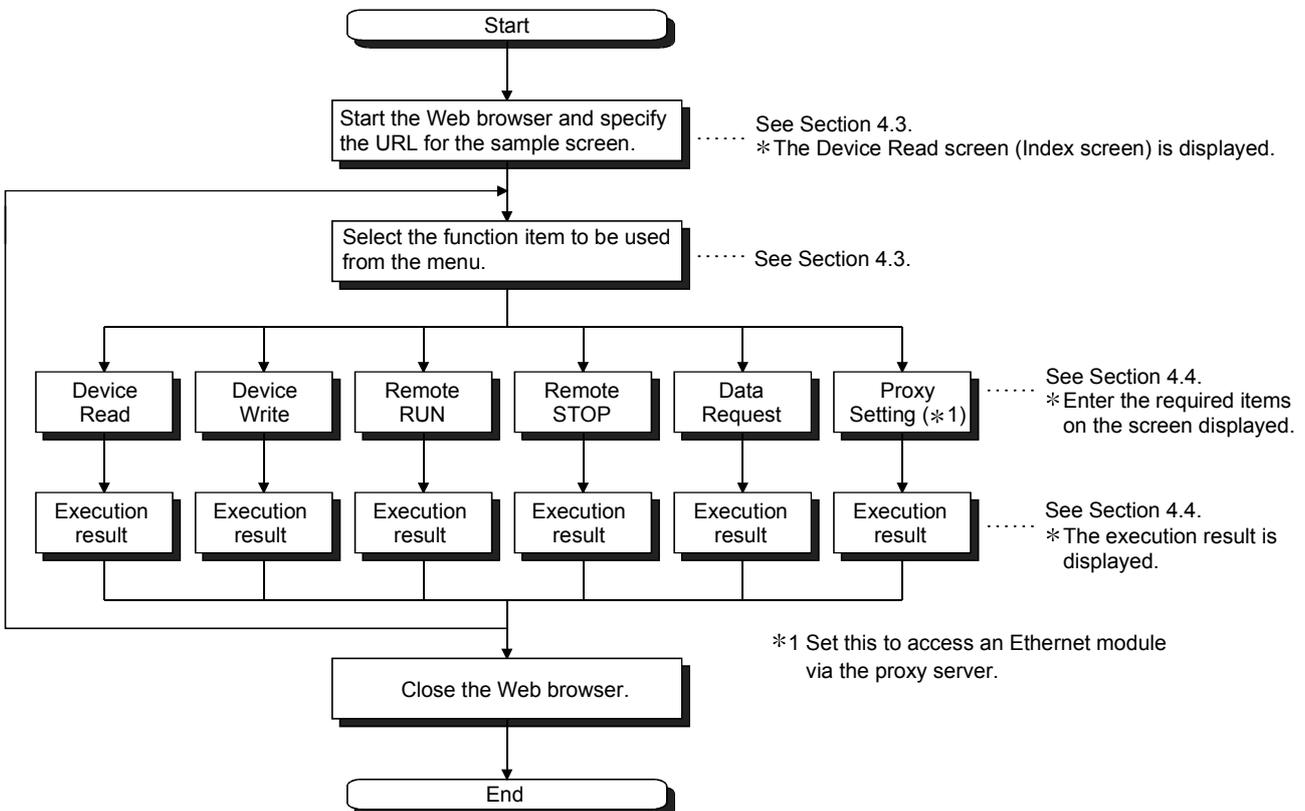

4.3 Explanation of the Sample Screen


The following shows the operations that are performed on the sample screen.

(1) Setting screen

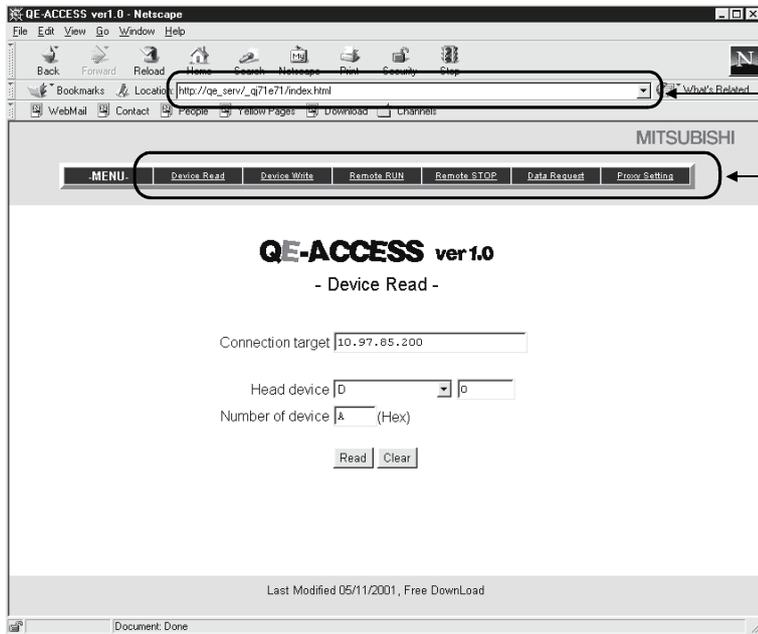

- 1) Start the Web browser and specify the URL for the sample screen.  
(Example) If the host name of the Web server is qe\_serv, specify http://qe\_serv/\_qj71e71/index.html.
- 2) Select the Web function item to be used from the menu.
- 3) Enter the required items on each function screen and execute the selected Web function item.  
(Example) The screen display when Device Read has been selected.

(2) Execution result screen

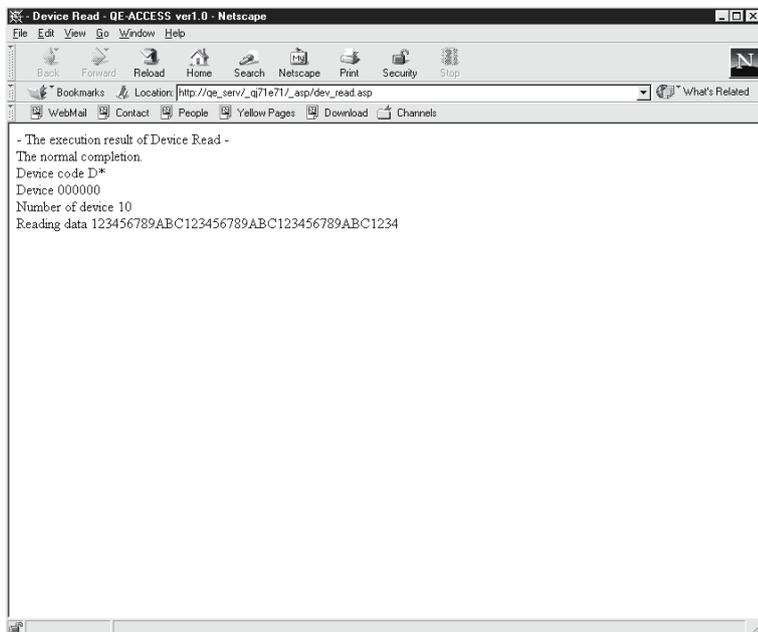


- 1) The execution result is displayed on a new screen.  
(When completed normally)  
The execution result is displayed.  
  
(When completed abnormally)  
An error code is displayed.  
\* Refer to the explanation of troubleshooting in the User's Manual (Basic).

4.4 Example of Data Communication on the Sample Screen

The following shows how to access a QCPU using the sample screen.

(1) System configuration

The following shows a system configuration for data communication.  
(Explanation of proxy setting is omitted.)

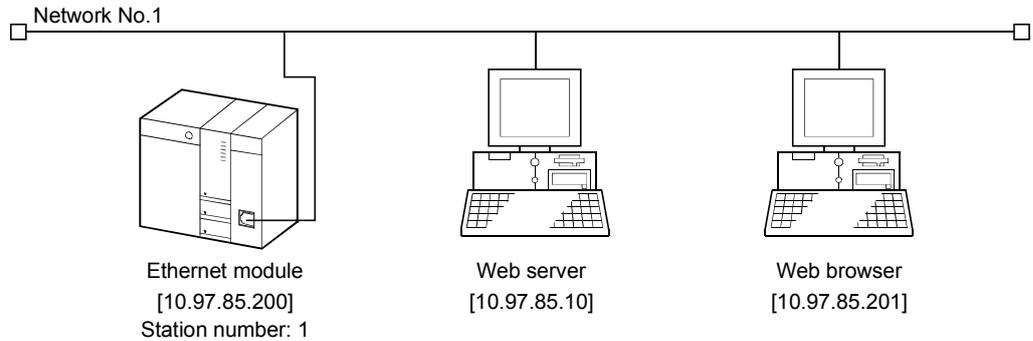

(2) Execution environment for the above data communication example  
(Ethernet module side)

(a) Mount an Ethernet module to slot 0 of the basic base unit.

(b) Set the parameters for Ethernet using GX Developer.  
For the setting items other than shown below, the default values will be used.


1) Network parameters

Setting screen	Setting item	Setting data
Network parameters setting the number of MELSECNET/Ethernet cards	Network type	Ethernet
	Starting I/O No.	0000
	Network No.	1
	Group No.	1
	Station No.	1
Operational settings	IP address	[10. 97. 85. 200]

2) Remote password


Setting screen	Setting item	Setting data	
Remote password settings	Password setting	* * * *	
	Password active module settings	Model name	QJ71E71
		Start X/Y	0000
Remote password detail settings	System connection	Check "HTTP port."	

(c) Write data to the data registers D0 through D3.

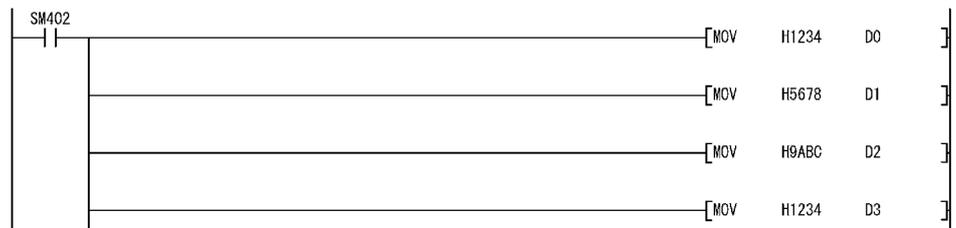

(d) Write the Ethernet parameters and programs to the programmable controller CPU and restart the programmable controller CPU.  
When it is operating normally, the initial processing of the Ethernet module will be completed normally and the [INIT. ] LED will be lit.

- (3) Execution environment of the above data communication example (external device side)
  - (a) Web server
    - 1) Set up the communication library and the sample screen. (See Section 3.2 (2).)
    - 2) Register the DLL file in the OS registry. (See Section 3.2 (2).)  
This registration is not required if it has already been registered.
    - 3) After all settings are completed, restart the Web server.
  - (b) Web browser  
Start the Web browser.
- (4) Execution of data communication
  - (a) URL display on the sample screen  
Specify the following URL for the sample screen in the Web browser.  
[http://10.97.85.10/\\_qj71e71/index.html](http://10.97.85.10/_qj71e71/index.html)
  - (b) Unlocking the remote password  
If the port of the Ethernet module to be used for data communication with the Web server is subject to remote password check, the following dialog box will be displayed when access to a QCPU will start.  
Enter the remote password to perform unlock processing.  
\* This operation is not required if the port of the Ethernet module is not subject to remote password check. (Therefore, the following dialog box will not be displayed.)

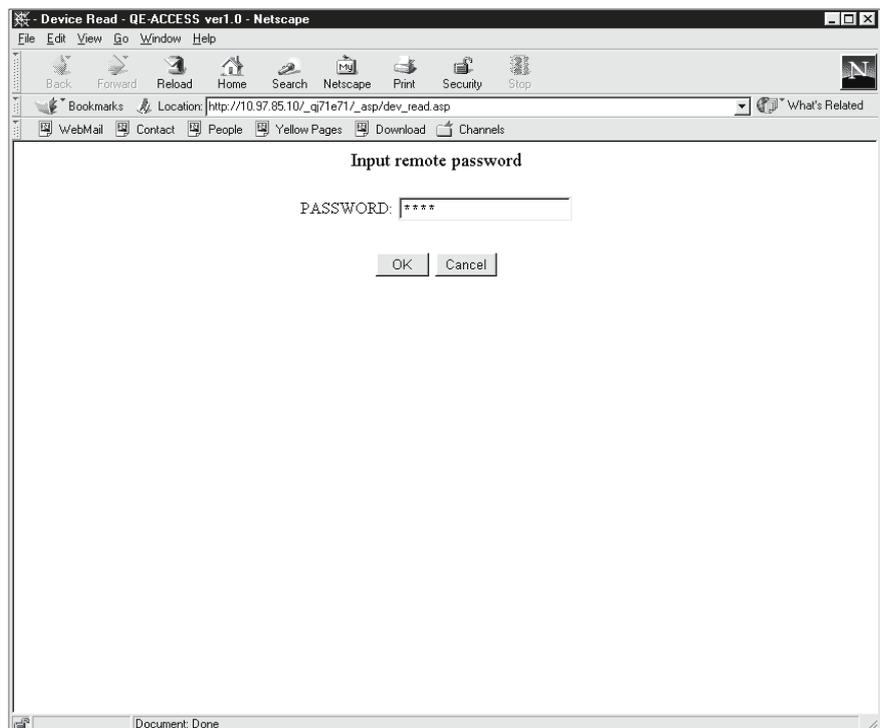


- (c) Data communication  
For an example of data communication, see Section 4.4.1 and subsequent sections.
- (d) End of data communication  
Close the Web browser.

4.4.1 Device Read/Write


The Device Read and Device Write functions (QnA compatible 3E frame commands 0401 and 1401) read and write the bit device memory (16-bit units) and word device memory (1-word units) of the local station's QCPU in batch mode. For details on the MC protocol, refer to the Reference Manual. This section explains an example of reading four points of the data registers D0 through D3.

(1) Device Read Screen

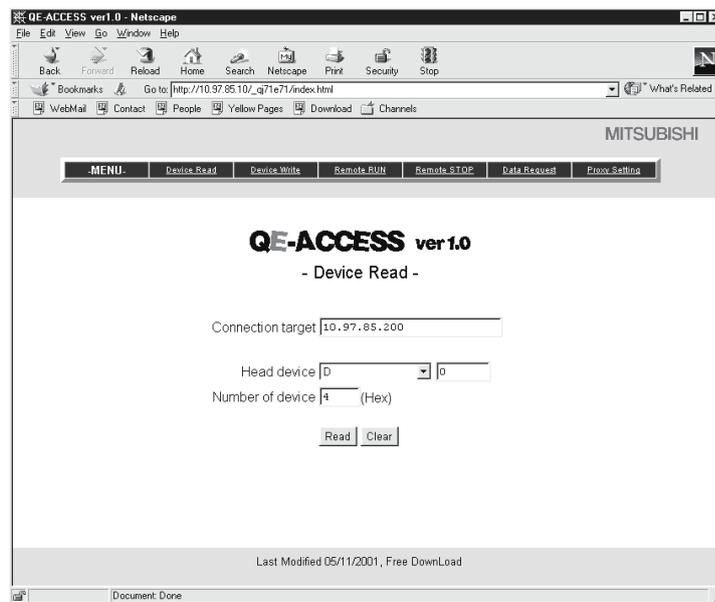

Setting item	Setting value
Connection target	10.97.85.200
Head device	D000000
Number of device	0004

(2) Execution result

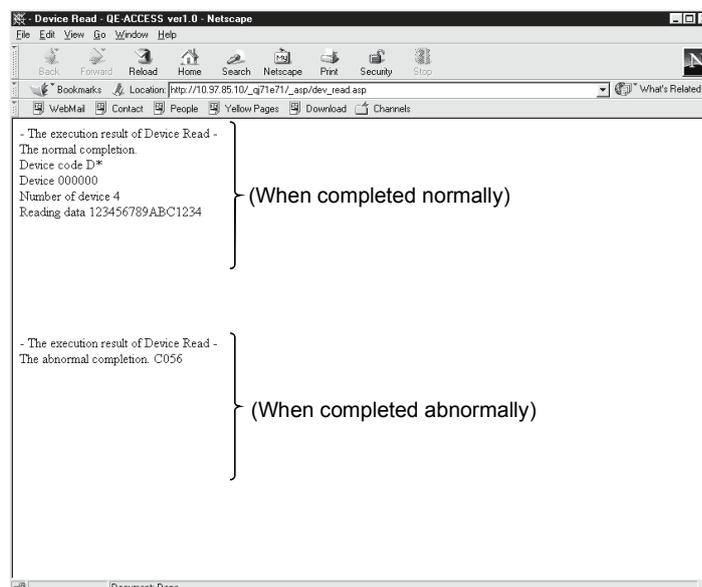

(3) Setting items

The following explains the setting items on the Device Read/Write screen.

(a) Connection target (character string)

Specify the IP address or host name of the connection target Ethernet module.

(Example) To specify using the IP address, enter 10. 97. 85. 200.

(b) Head device

Specify the device code and head device of the device for reading/writing data.

1) Device code (selection)

Select the device memory.

2) Head device (character string)

Specify the head number of the device memory for which data is to be read/written. Specify the head device number in decimal/hexadecimal from the target device memory.

(Example) To specify the data register D100, select the device code "D" and specify "000100" for the head device. (Only "100" may be specified by omitting the first three "0's.")

(Example) To specify the link register W1FF, select the device code "W" and specify "0001FF" for the head device. (Only "1FF" may be specified by omitting the first three "0's.")

(c) Number of device (character string)

Specify the number of points (hexadecimal) of the device for which reading/writing are to be performed.

(Example) To specify 20 points as the number of device points, specify "0014." (Only "14" may be specified by omitting the first two "0's.")

(d) Read data/write data (character string) (See item (4).)

1) Read data (execution result screen)

Displays the content of data for the number of device points read from the specified device memory.

2) Write data

Specify the data to be written to the device for the number of device points.

(4) Arrangement of read/write data

The following explains the transmission method and placement of the bit device data and word device data handled by device read/write operation.

The data is handled in word units during device read/write operation on the sample screen.

(a) When reading/writing the bit device memory


In the bit device memory, one word is expressed in 4-bit units sequentially from upper bits in hexadecimal.

(Example) To write data to 32 points from the internal relay M16  
(In the case of data read operation, the content of data (ON/OFF status) when 32 points are specified from the internal relay M16 is shown.)

Specify each setting item as follows:

- Device code : Select "M."
- Head device : Specify "000016."  
(Only "16" may be specified by omitting the first four "0's.")
- Number of device : "0002"  
(Only "2" may be specified by omitting the first three "0's.")
- Write data : Specify "AB1234CD."

The following data will be written. (In the case of device read operation, the following data will be read.)

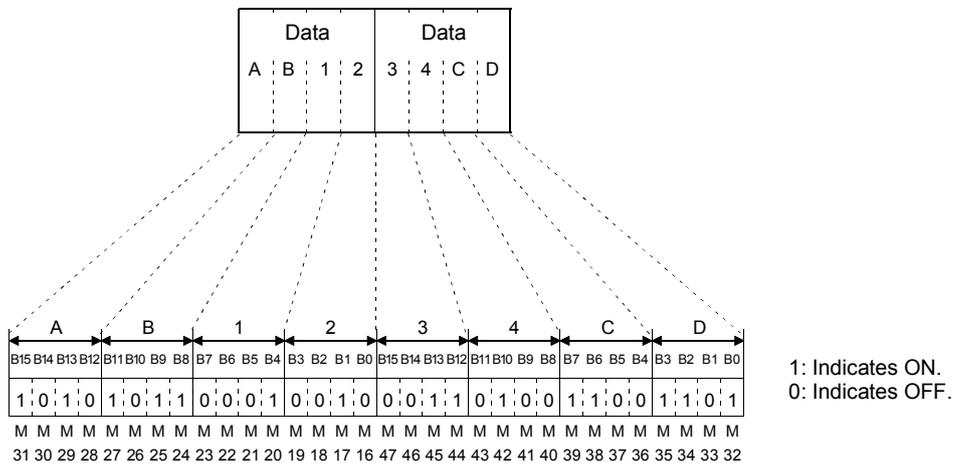

(b) When reading/writing the word device memory

In the word device memory, one word is expressed in 4-bit units sequentially from upper bits in hexadecimal.


(Example) To write data to the data registers D350 and D351

(In the case of data read operation, the content of data when the data registers D350 and D351 are specified is shown.)

Specify each setting item as follows:

- Device code : Select "D."
- Head device : Specify "000350."  
(Only "350" may be specified by omitting the first three "0's.")
- Number of device : "0002"  
(Only "2" may be specified by omitting the first three "0's.")
- Write data : Specify "56AB170F."

The following data will be written. (In the case of device read operation, the following data will be read.)

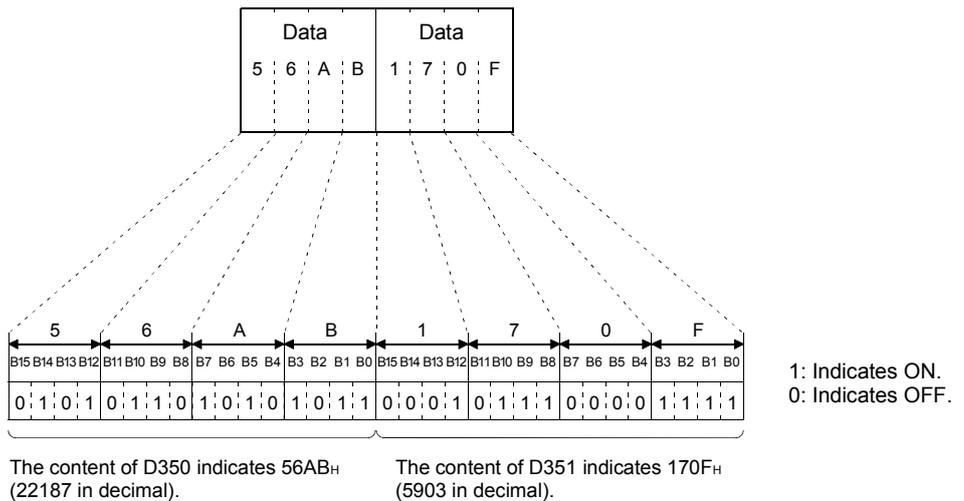


POINT
<p>If values (real numbers, character strings) other than integers are stored in the word device memory from which data is to be read, the Ethernet module reads the stored values as integer values.</p> <p>(Example 1) If a real number (0.75) is stored in D0 and D1, it will be read as the following integer value: "00003F40" (D0 = 0000<sub>H</sub>, D1 = 3F40<sub>H</sub>)</p> <p>(Example 2) If a character string ("12AB") is stored in D2 and D3, it will be read as the following integer value: "32314241" (D2 = 3231<sub>H</sub>, D3 = 4241<sub>H</sub>)</p>

4.4.2 Remote RUN/STOP


The Remote RUN and Remote STOP functions (QnA compatible 3E frame commands 1001 and 1002) stop and run the local station's QCPU. For details on the MC protocol, refer to the Reference Manual. This section explains an example of Remote RUN.

(1) Remote RUN screen

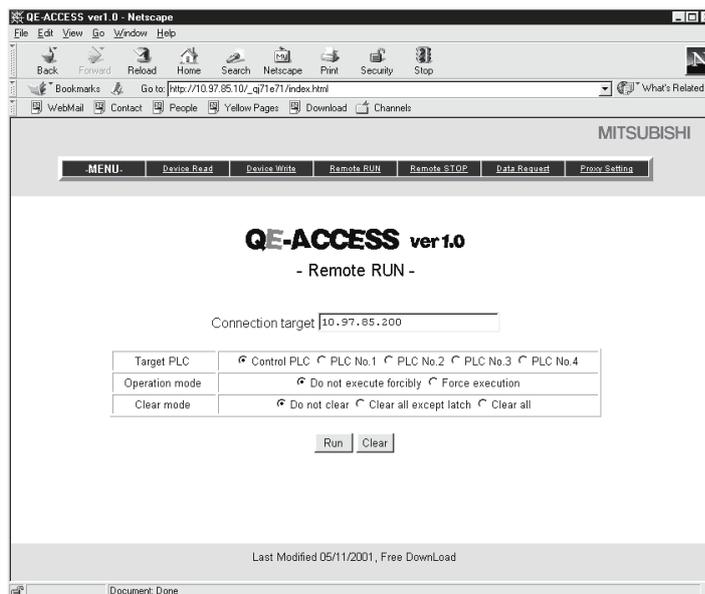

Setting item	Setting value
Connection target	10. 97. 85. 200
Operation mode	Do not execute forcibly.
Clear mode	Do not clear.

(2) Execution result

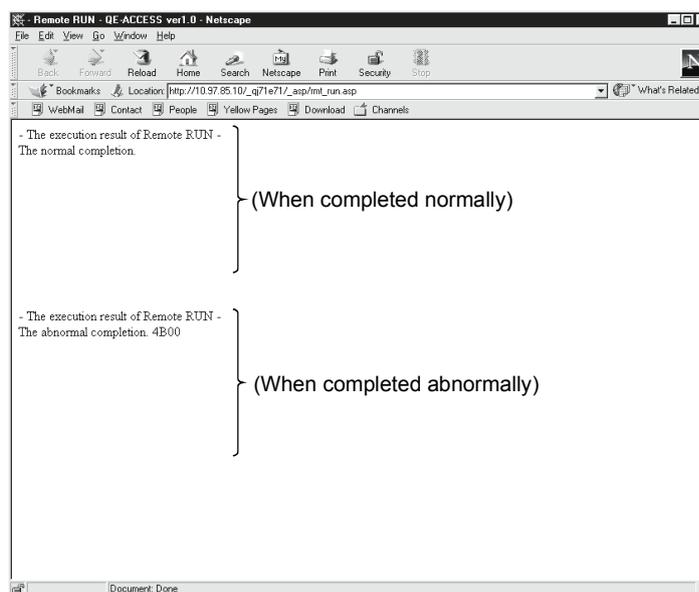

(3) Setting items

The following explains the setting items on the Remote RUN/STOP screen.

(a) Connection target (character string)

Specify the IP address or host name of the connection target Ethernet module.

(Example) To specify using the IP address, enter 10. 97. 85. 200.

(b) Target PLC (selection)

Select the target programmable controller for remote RUN/STOP operation.

\* To perform remote RUN/STOP to a single CPU, specify the control CPU.

(c) Operation mode (selection)

Select whether or not to execute remote RUN forcibly.

1) Do not execute forcibly

Does not perform remote RUN when remote STOP is being executed from other external device.

2) Force execution

Performs remote RUN even if remote STOP is being executed from other external device.

(d) Clear mode (selection)

Specify clear (initialization) processing of QCPU's device clear when starting QCPU calculation by remote RUN.

1) Do not clear

Does not clear the device memory.

2) Clear all except latch

Clears the device memory outside the latch range.

3) Clear all


Clears all device memory including the latch range.

4.4.3 Data Request

The Data Request function accesses the programmable controller CPU by inputting the application data of the MC protocol (QnA compatible 3E frame).


This section explains how to read four points of the data registers D0 through D3 by specifying the application data of Device Memory Batch Read (command 0401) for the QnA compatible 3E frame.

(1) Data Request screen

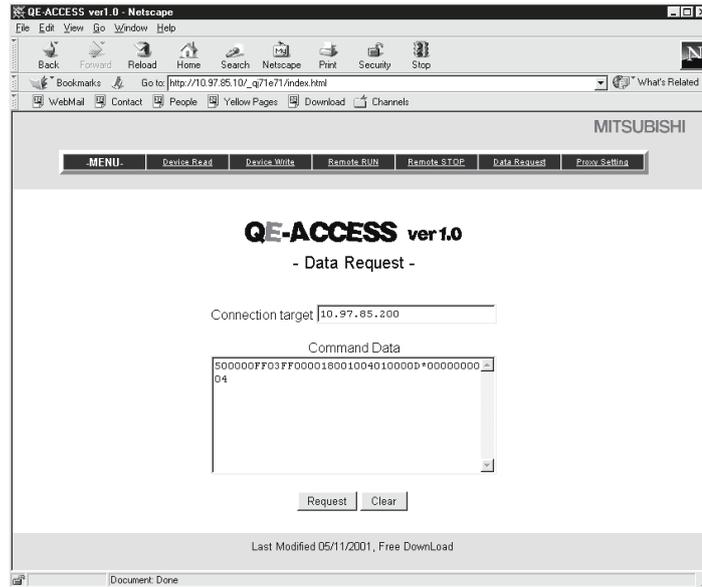


Setting item	Setting value
Connection target	10.97.85.200
Command Data	500000FF03FF000018001004010000D * 000000004

(Example) The following shows an example of the format for the application data of the MC protocol that is equivalent to the command data.

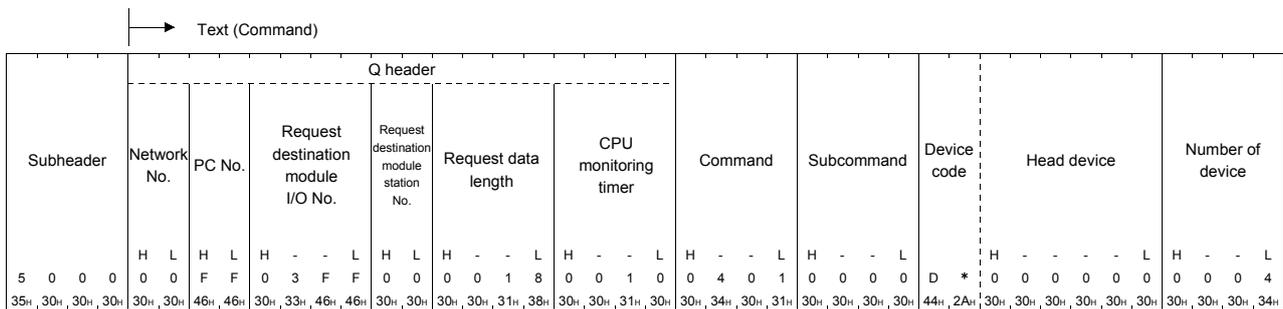

(2) Execution result

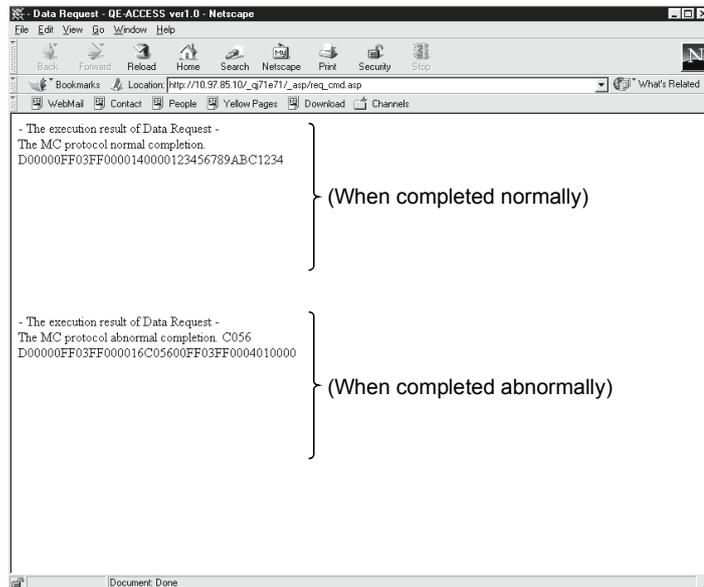

(3) Setting items

The following explains the setting items on the Data Request screen.

(a) Connection target (character string)

Specify the IP address or host name of the connection target Ethernet module.

(Example) To specify using the IP address, enter 10. 97. 85. 200.

(b) Command data (character string)

Specify the MC protocol application data using the same character string as the setting for ASCII code transmission.

For details on the MC protocol, refer to the Reference Manual.

(4) Precautions for use of Data Request

(a) Available communication frame

Application data of the QnA compatible 3E frame command can be specified.

Specification of the 4E or A compatible 1E frame is not allowed.

(b) No. of commands that can be specified at a time

Only one command can be specified at a time.

Continuous specification of more than one command is not allowed.

(c) Remote password unlock/lock (Command: 1630/1631)


Remote password unlock/lock (Command: 1630/1631) is not available.

The remote password to the HTTP port is unlocked in the dialog box, which is displayed in the Web browser when accessing to a programmable controller CPU. (See Section 1.1 (5).)

4.4.4 Proxy Setting

In case an Ethernet module is connected via a proxy server, specify the address and HTTP port of the proxy server to be routed through when accessing from the Web server to the Ethernet module.



It is necessary to set the URL of the Ethernet module in advance in order to access via the proxy server.

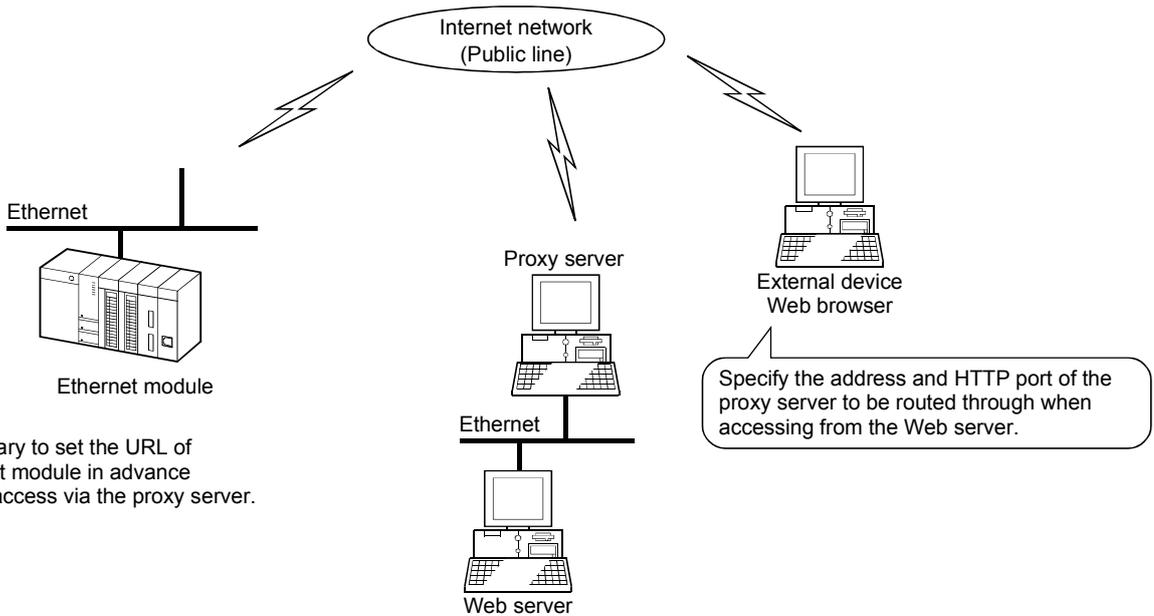


\* It is necessary to set the URL of the Ethernet module in advance in order to access via the proxy server.

(1) Proxy setting

(Example) To set the port 8000 of the proxy server (qe\_serv)

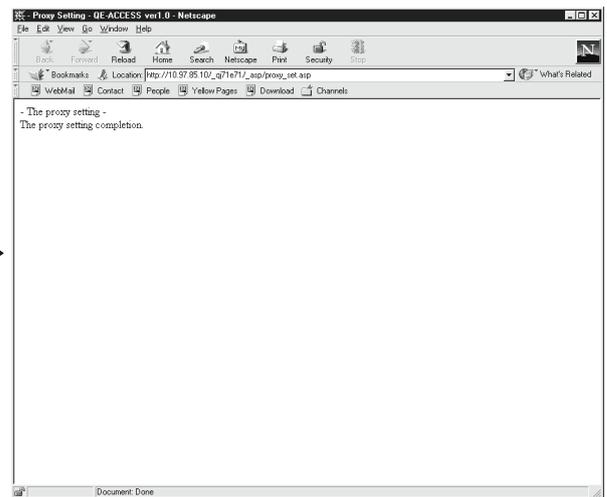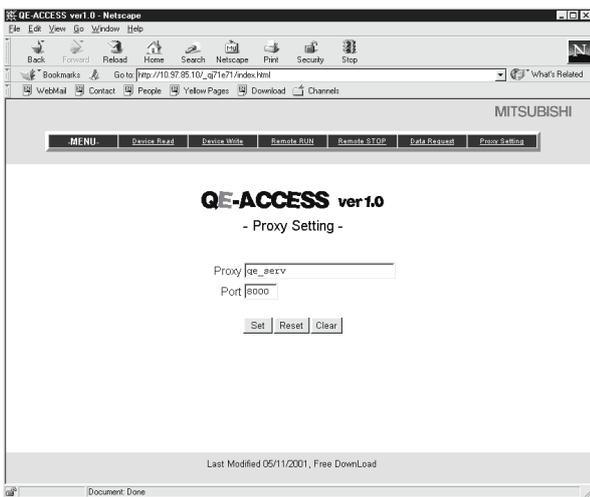

### (2) Resetting proxy

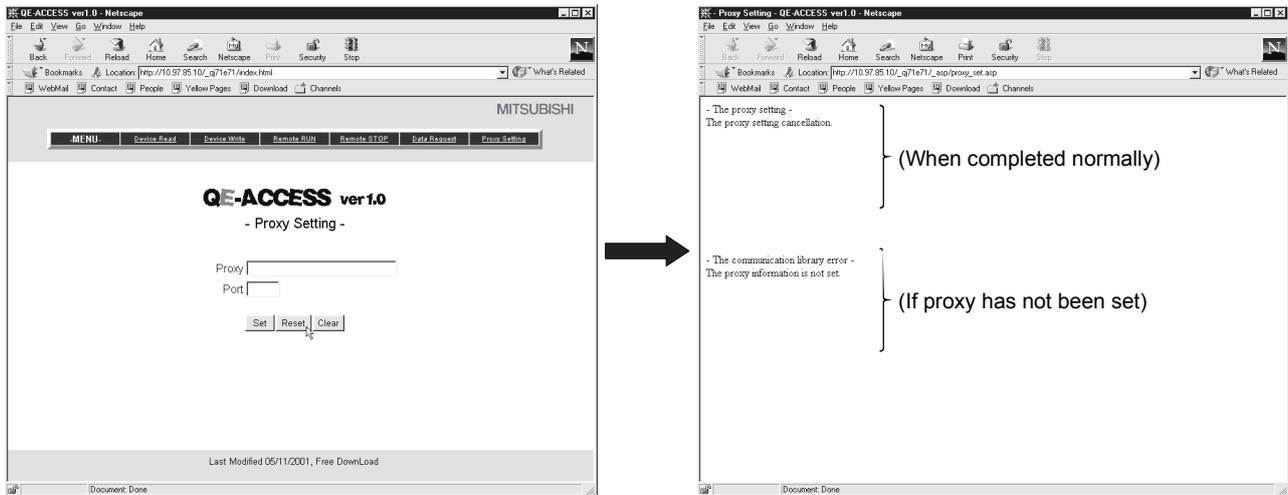

### (3) Setting items

The following explains the setting items on the Proxy Setting screen.

For the IP address and port of the proxy server to be used, consult with the network administrator (the person in charge of network planning and IP address management), and then specify them.

(a) Proxy (character string)

Specify the IP address or host name of the proxy server to be routed through.

(Example) To specify using the IP address, enter 10. 97. 85. 200.

(b) Port (character string)


Specify the port to be used.

4.5 Configurations of Files on the Sample Screen

The following shows the configuration of the HTML files for Web browser and the configuration of the ASP files for accessing the programmable controller, using the Device Read sample screen.

For communication library functions, see Chapter 6.

(Device Read screen)

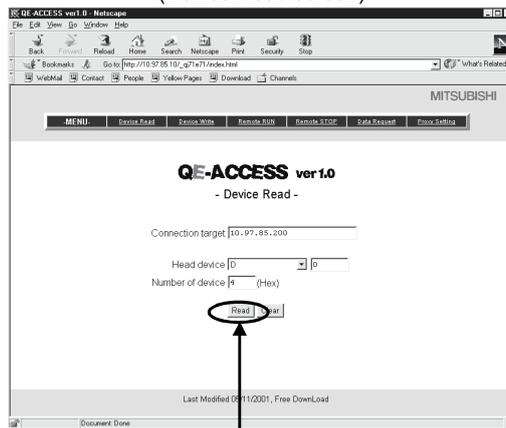

HTML file (dev\_read.html)

```

<HTML>
<TITLE>
- Device Read - QE-ACCESS ver1.0
</TITLE>
<BODY BGCOLOR="#FFFFFF"><BR>
<CENTER>
<IMG SRC=_img/qeaccess_logo.gif><BR>
<TT><FONT SIZE=5 FACE="Arial, Lucida, Sans, Time Roman">- Device Read -</FONT></TT><BR>

<!-- Action -->
<FORM ACTION="_asp/dev_read.asp" METHOD="POST" TARGET="_BLINK"><BR>
<TABLE BORDER="0">
<!-- Connection target -->
<TR>
<TD WIDTH="140" ALIGN="RIGHT"><FONT FACE="Arial, Lucida, Sans, Time Roman">Connection target</FONT></TD>
<TD WIDTH="200" COLSPAN="2"><INPUT TYPE="TEXT" SIZE="26" NAME="iHostName"></TD>
</TR>

<!-- Input type -->
<INPUT TYPE="SUBMIT" VALUE="Read">
<INPUT TYPE="RESET" VALUE="Clear">
</CENTER>
</BODY>
</HTML>
    
```

(Specify the transmission destination)

(Execute an ASP file)

1)

1)  
↓

ASP file (dev\_read.asp)

```

<%@ LANGUAGE="VBScript" %>
<HTML>
<HEAD>
<TITLE>- Device Read - QE-ACCESS ver1.0</TITLE>
</HEAD>
<BODY>
<!Getting of input data>
<%
HostName = Request.Form("iHostName")
DevCode = Request.Form("iDevCode")
DevNo = Request.Form("iDevNo")
DevNum = Request.Form("iDevNum")
PassWord = Request.Form("iPassWord")
PassInf = Request.Form("iPassInf")
PassCnt = Request.Form("iPassCnt")
%>
<!Setting of default value>
<%
NetNo = "00"
PcNo = "FF"
CpuTime = "0028"
RetType = "0"
%>
(Create an object (call the communication library))
<!Calling of DLL>
<%
Set Object = Server.CreateObject("QeAccess.McProtocol")
disp = Object.DevRead( HostName, NetNo, PcNo, CpuTime, DevCode, DevNo, DevNum, PassWord, RetType )
%>
(Execute device read)
<!Showing of execution result(When the password error occurs, it makes input a password.)>
<%
If InStr( disp, "<!HTTP error 401>" ) <> 0 Then
  If PassCnt < 3 Then
    If PassInf <> "Cancel" Then
      Response.Write("<CENTER>")
      Response.Write("<FONT SIZE=4>Input remote password</FONT>")
      Response.Write("<FORM ACTION=""dev_read.asp"" METHOD=""POST"" TARGET=""_BLINK"">")
      Response.Write("<TABLE>")
      Response.Write("<TD VALIGN=""middle"">PASSWORD:</TD><TD><INPUT TYPE=""PASSWORD""")
      Response.Write("<TABLE>")
      Response.Write("<P>")
      Response.Write("<TABLE>")
      Response.Write("<TD>")
      Response.Write("<INPUT TYPE=""SUBMIT"" NAME=""iPassInf"" VALUE="" OK "">")
      Response.Write("<TD>")
      Response.Write("<INPUT TYPE=""SUBMIT"" NAME=""iPassInf"" VALUE=""Cancel"">")
      Response.Write("<TD>")
      Response.Write("<TABLE>")
      Response.Write("<INPUT TYPE=""hidden"" NAME=""iHostName"" VALUE="" & HostName & "">")
      Response.Write("<INPUT TYPE=""hidden"" NAME=""iDevCode"" VALUE="" & DevCode & "">")
      Response.Write("<INPUT TYPE=""hidden"" NAME=""iDevNo"" VALUE="" & DevNo & "">")
      Response.Write("<INPUT TYPE=""hidden"" NAME=""iDevNum"" VALUE="" & DevNum & "">")
      Response.Write("<INPUT TYPE=""hidden"" NAME=""iPassCnt"" VALUE="" & PassCnt+1 & "">")
      Response.Write("</FORM>")
      Response.Write("</CENTER>")
    Else
      Response.Write(disp)
    End If
  Else
    Response.Write(disp)
  End If
Else
  Response.Write(disp)
End If
%>
</BODY>
</HTML>

```

(Execution result screen)

Description relating to the remote password


## 5 EXAMPLE OF CREATING A FILE FOR ACCESSING THE PROGRAMMABLE CONTROLLER

This chapter explains an example of creating a file for accessing the programmable controller.

\* This file (sample-e.exe) can be obtained by contacting your local agency or marketing company.

### (1) Configuration of a user-created screen


The following shows the screen configuration of a file used for accessing the programmable controller to be created in this chapter. (The function being used is enclosed with parentheses.)

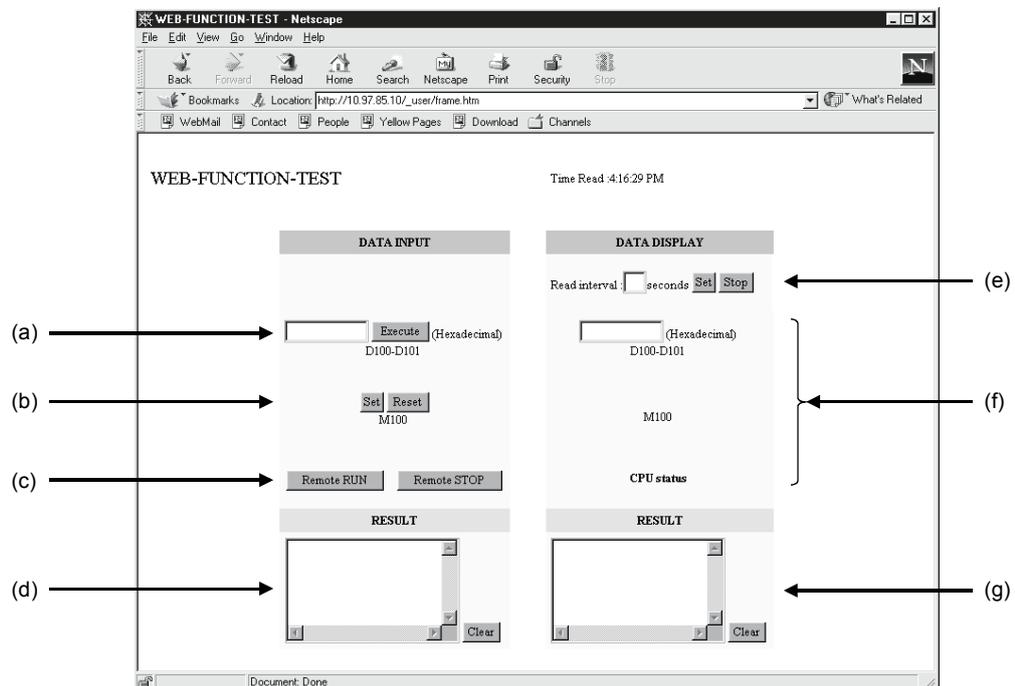


- (a) Device Write (DevWrite)  
Writes data into D100 and D101.
- (b) Device Write (DevWrite)  
Turns ON/OFF M100.
- (c) Remote RUN/STOP (RmtRun/RmtStop)  
Performs remote RUN/STOP.
- (d) Results  
Displays the execution results of items (a) through (c) above.
- (e) Read interval  
Sets the read interval time. Performs random read (see item (f) below) processing for each set time interval after the read interval is set. Ends random read processing by STOP.
- (f) Random read (ReqCmd)  
Reads the following device memory.
  - D100 and D101 (2 points), M100, SD203
- (g) Result  
Displays the execution result of item (f) above.

(2) File configuration

- (a) The following shows the file configuration of a file used for accessing the programmable controller.

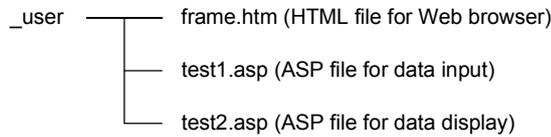

- (b) Copy the above files to the root directory "\inetpub\wwwroot" of the Web server.



- (c) Register the communication library (DLL file). (See Section 3.2.)  
If the communication library has already been registered, it is not necessary to register it.

(3) File content

Shows the content of the file to be created.  
Enter the host name for "HostName" in the program.

- (a) frame.htm

```

<HTML>
<HEAD>
<META HTTP-EQUIV="Content-Type" Content="text/html; charset=x-sjis">
<META NAME="GENERATOR" Content="Microsoft Visual Studio 6.0">
</HEAD>
<TITLE>WEB-FUNCTION-TEST</TITLE>
<FRAMESET COLS="50%,*" FRAMEBORDER=0>

<!Specify a read file>
<FRAME SRC="test1.asp">
<FRAME NAME="DATA" SRC="test2.asp">

</FRAMESET>
    
```

(b) test1.asp

```
<%@ Language=VBScript %>
<%
    Option Explicit

    Dim Password 'Password(not set)

    Dim disp      'Return value
    Dim Value     'Result

    Dim DevData  'Device data(use input value)

    Dim Answer   'For display
%>
<HTML>
<HEAD>
<META HTTP-EQUIV="Content-Type" Content="text/html; charset=x-sjis">
<META NAME="GENERATOR" Content="Microsoft Visual Studio 6.0">
</HEAD>
<%
    If Request.ServerVariables("REQUEST_METHOD")="POST" Then

        Dim Object      'Communication library
        Set Object=Server.CreateObject("QeAccess.McProtocol")

        Dim HostName    'Host name
        HostName="□.□.□.□"

        Dim NetNo       'Network number
        NetNo="00"

        Dim PcNo        'PC number
        PcNo="FF"

        Dim CpuTime     'CPU monitoring timer
        CpuTime="0040"

        'Click Set,Clear
        If Request.Form("SetData")<>"" Then

            'Call command data
            Dim DevCode  'Device code
            DevCode="M*"

            Dim DevNo    'Device number
            DevNo="000100"
```

```
Dim DevNum 'Number of device
DevNum="0001"

Dim SetData 'Set data
Select Case Request.Form("SetData")
Case "Set"
    SetData="0001"
Case "Reset"
    SetData="0000"
End Select

disp = Object.DevWrite( HostName, NetNo, PcNo, CpuTime, DevCode, DevNo,
DevNum, SetData, PassWord )

Else

'Click remote RUN,remote STOP
If Request.Form("CpuNo")<>" Then

    Dim CpuNo 'CPUNo
    CpuNo="03FF"

    Dim CmdMode 'Commmand mode
    CmdMode="0001"

    Select Case Request.Form("CpuNo")
    Case "Remote RUN"

        Dim ClrMode 'Clear mode
        ClrMode="02"

        disp=Object.RmtRun( HostName, NetNo, PcNo, CpuTime, CpuNo,
CmdMode, ClrMode, PassWord )
        Case "Remote STOP"

            disp=Object.RmtStop( HostName, NetNo, PcNo, CpuTime, CpuNo,
CmdMode, PassWord )

    End Select

Else

'Dim DevCode 'Device code
DevCode="D*"

'Dim DevNo 'Device number
DevNo="000100"
```

```

'Dim DevNum 'Number of device
DevNum="0002"

'Device data(use input value)
DevData=Trim(Request.Form("DevData"))
DevData=UCase(String(8-Len(DevData),"0") & DevData)

disp = Object.DevWrite( HostName, NetNo, PcNo, CpuTime, DevCode,
DevNo, DevNum, DevData, PassWord )
        End If
    End If
End If
%>
<BODY>
<TABLE HEIGHT=80>
<TR><TD>
<FONT SIZE=+2>WEB-FUNCTION-TEST</FONT><P>
</TD></TR>
</TABLE>
<FORM METHOD=POST>
<TABLE BGCOLOR=LIGHTYELLOW ALIGN=RIGHT CELLPADDING=5 CELLSPACING=0 BORDER=0>
<TR BGCOLOR=CCCCFF><TH COLSPAN=2>DATA INPUT</TH></TR>
<TR><TD COLSPAN=2 HEIGHT=50><BR></TD></TR>
<TR>
<TD COLSPAN=2 ALIGN=CENTER HEIGHT=50>
<INPUT TYPE=TEXT NAME="DevData" SIZE=10 MAXLENGTH=8 VALUE=<%=DevData%>>
<INPUT TYPE=SUBMIT VALUE="Execute">
(Hexadecimal)
<BR>
D100-D101
</TD>
</TR>
<TR>
<TD ALIGN=CENTER COLSPAN=2 HEIGHT=80>
<INPUT TYPE=SUBMIT NAME="SetData" VALUE="Set">
<INPUT TYPE=SUBMIT NAME="SetData" VALUE="Reset"><BR>
M100
</TD>
</TR>
<TR>
<TH HEIGHT=50><INPUT TYPE=SUBMIT NAME="CpuNo" VALUE="Remote RUN"></TH>
<TH HEIGHT=50><INPUT TYPE=SUBMIT NAME="CpuNo" VALUE="Remote STOP"></TH>
</TR>
<TR><TH COLSPAN=2 BGCOLOR="CCFFCC">RESULT</TH></TR>
<TR><TH COLSPAN=2>
<%
        Select Case Left(disp,5)
        Case "<!OK>"

```

```

        Answer="Normal completion"
    Case "<!NG>"

        Answer="Abnormal completion " & Mid(displ,Instr(displ,"error")+Len("error")+1,4)
    End Select

%>
<TEXTAREA NAME="Answer" ROWS=5><%=Answer%></TEXTAREA>
<INPUT TYPE=BUTTON VALUE=Clear ONCLICK="this.form.elements['Answer'].value="">
</TH></TR>
</TABLE>
</FORM>
</BODY>
</HTML>

(C) test2.asp
<%@ Language=VBScript %>
<%
    Option Explicit

    Dim Time      'Time

    Dim Password 'Password(not set)

    Dim displ     'Return value
    Dim Value     'Result

    Dim Answer    'For display
%>
<HTML>
<HEAD>
<META HTTP-EQUIV="Content-Type" Content="text/html; charset=x-sjis">
<META NAME="GENERATOR" Content="Microsoft Visual Studio 6.0">
<%
    If Request.QueryString("stop")="" And Request.QueryString("time")<>"" Then

        'Time setting
        Time=Request.QueryString("time")
    %>
    <!--Refresh by time-->
    <META HTTP-EQUIV="Refresh" CONTENT="<%=Time%>">
    <%
        End If
    %>
</HEAD>
<%

    'Execute if time is specified
    If Time<>"" Then

```

```

Dim Object      'Communication library
Set Object=Server.CreateObject("QeAccess.McProtcol")

Dim HostName   'Host name
HostName="□.□.□.□"

Dim CmdData    'Command data

CmdData="500000FF03FF0000340040040600000201SD0002030001D*0001000002M*0001000001"

Dim RetType    'Execution result type
RetType = "1"

disp=Object.ReqCmd( HostName, CmdData, PassWord, RetType )

Select Case Left(disp,5)
Case "<!OK>"
    Value=Mid(disp,Len("<!OK>")+1)
End Select
End If
%>
<BODY STYLE="RIGHT">

<TABLE HEIGHT=80>
<TR><TD>
Time Read :<%=FormatDateTime(Now(),3)%><P>
</TD></TR>
</TABLE>
<FORM>
<TABLE BGCOLOR=lightyellow CELLPADDING=5 CELLSPACING=0 BORDER=0>
<TR BGCOLOR=#ccccff><TH COLSPAN=2>DATA DISPLAY</TH></TR>
<TR>
<TD HEIGHT=50>
Read interval :<INPUT SIZE=2 MAXLENGTH=2 NAME=time VALUE="<%=Time%>"
ONCHANGE="check_number(this);">seconds
<INPUT TYPE=submit VALUE="Set">
<INPUT TYPE=submit NAME="stop" VALUE="Stop">
</TD>
</TR>
<TR>
<TD COLSPAN=2 ALIGN=middle HEIGHT=50>
<!Dara register read result>
<INPUT TYPE=TEXT SIZE=10 MAXLENGTH=8 VALUE="<%=Mid(Value,27,8)%>">
(Hexadecimal)
<BR>
D100-D101
</TD>
</TR>
<TR>

```

```

<TD ALIGN=middle COLSPAN=2 HEIGHT=80>
<FONT SIZE=+0><B>
<%
    Select Case Mid(Value,38,1)
    Case "0"
%>
OFF
<%
    Case "1"
%>
ON
<%
    End Select
%>
</B></FONT>
<BR>
M100
</TD>
</TR>
<TR>
<TH COLSPAN=2 HEIGHT=50 VALIGN=TOP>
<%
    Select Case Mid(Value,26,1)
    Case "0"
%>
RUN
<%
    Case "2"
%>
STOP
<%
    End Select
%>
<BR>CPU status
</TH>
</TR>
<TR><TH COLSPAN=2 BGCOLOR="#ccffcc">RESULT</TH></TR>
<TR><TH COLSPAN=2>
<%
    Select Case Left(displ,5)
    Case "<!OK>"

        Select Case Mid(Value,19,4)
        Case "0000"
            Answer="Normal completion"
        Case Else

```

```

                Answer="Abnormal completion " & Mid(Value,19,4)
            End Select
        Case "<!NG>"
            Answer="Abnormal completion" & Mid(displnstr(displnstr("error")+Len("error")+1,4)
        End Select
    %>
<TEXTAREA NAME="Answer" ROWS=5><%=Answer%></TEXTAREA>
<INPUT TYPE=BUTTON VALUE=Clear ONCLICK="this.form.elements['Answer'].value="">
</TH></TR>
</TABLE>
</FORM></P>
</BODY>
</HTML>
<SCRIPT LANGUAGE=javascript>
<!--
function check_number(element)
{
    var i;

    for(i=0;i<element.value.length;i++)
    {
        if ("0123456789".indexOf(element.value.charAt(i))!=-1)
        {
            alert(element.name+'Enter using a numeric value');
            element.value="";

            element.focus();

            return false;
        }
    }

    return true;
}
//-->
</SCRIPT>

```

## 6 COMMUNICATION LIBRARY FUNCTIONS

This chapter explains the communication library functions.

## (1) List of supported communication library functions

The following table lists the functions supported for the communication library.

Web function item	Function	Overview	Remarks
Device Read	DevRead	Reads from a bit device (X, Y, M, etc.) in 16-point units.	Corresponds to command 0401 (00□0) for QnA compatible 3E frame.
		Reads from a word device (D, R, T, C, etc.) in one-point units.	
Device Write	DevWrite	Writes to a bit device (X, Y, M, etc.) in 16-point units.	Corresponds to command 1401 (00□0) for QnA compatible 3E frame.
		Writes to a word device (D, R, T, C, etc.) in one-point units.	
Remote RUN	RmtRun	Requests a remote RUN operation to the programmable controller CPU.	Corresponds to command 1001 (0000) for QnA compatible 3E frame.
Remote STOP	RmtStop	Requests a remote STOP operation to the programmable controller CPU.	Corresponds to command 1002 (0000) for QnA compatible 3E frame.
Data Request	ReqCmd	Sends a user-specified command (an application data (subheader + text) of the MC protocol), and receives the result.	—
Proxy Setting	ProxySet	Specify the proxy server when connecting a Ethernet module via a proxy server.	—
Proxy Reset	ProxyReset	Resets the proxy setting.	—

## (2) Communication library functions

The following table lists the communication library functions.

Web function item	Function		
Device Read	BSTR *p = DevRead (HostName, NetNo, PcNo, CpuTime, DevCode, DevNo, DevNum, PassWord, RetType)		
	Argument	HostName: Connection target	Input
		NetNo: Network No.	Input
		PcNo: PC No.	Input
		CpuTime: CPU monitoring timer	Input
		DevCode: Device code	Input
		DevNo: Head device	Input
		DevNum: Number of device	Input
		PassWord: Password	Input
		RetType: Execution result type (1: Actual data only; Other than 1: Normal execution result)	Input
*p: Pointer to the execution result character string	Output		

Web function item	Function		
Device Write	BSTR *p = DevWrite (HostName, NetNo, PcNo, CpuTime, DevCode, DevNo, DevNum, DevData, PassWord)		
	Argument	HostName: Connection target	Input
		NetNo: Network No.	Input
		PcNo: PC No.	Input
		CpuTime: CPU monitoring timer	Input
		DevCode: Device code	Input
		DevNo: Head device	Input
		DevNum: Number of device	Input
		DevData: Write data	Input
PassWord: Password	Input		
	*p: Pointer to the execution result character string	Output	
Remote Run	BSTR *p = RmtRun (HostName, NetNo, PcNo, CpuTime, CpuNo, CmdMode, ClrMode, PassWord)		
	Argument	HostName: Connection target	Input
		NetNo: Network No.	Input
		PcNo: PC No.	Input
		CpuTime: CPU monitoring timer	Input
		CpuNo: Target programmable controller (Request destination module I/O No.)	Input
		CmdMode: Operation mode	Input
		ClrMode: Clear mode	Input
		PassWord: Password	Input
	*p: Pointer to the execution result character string	Output	
Remoto Stop	BSTR *p = RmtStop (HostName, NetNo, PcNo, CpuTime, CpuNo, CmdMode, PassWord)		
	Argument	HostName: Connection target	Input
		NetNo: Network No.	Input
		PcNo: PC No.	Input
		CpuTime: CPU monitoring timer	Input
		CpuNo: Target programmable controller (Request destination module I/O No.)	Input
		CmdMode: Operation mode	Input
		PassWord: Password	Input
			*p: Pointer to the execution result character string
Data Request	BSTR *p = ReqCmd (HostName, CmdData, PassWord, RetType)		
	Argument	HostName: Connection target	Input
		CmdData: Application data part (subheader + text (command))	Input
		PassWord: Password	Input
		RetType: Execution result type (1: Actual data only; Other than 1: Normal execution result)	Input
	*p: Pointer to the execution result character string	Output	
Proxy Setting	BSTR *p = ProxySet (ProxyName, PortNo)		
	Argument	ProxyName: Proxy server address	Input
		PortNo: HTTP port No.	Input
	*p: Pointer to the execution result character string	Output	
Proxy Reset	BSTR *p = ProxyReset ( )		
	Argument	*p: Pointer to the execution result character string	Output

## (3) Arguments used by the functions

The following table lists the arguments used by the communication library functions.

All of the arguments of the communication library are specified using the same character string as used for the communication settings of the MC protocol in ASCII code.

Argument	Data type	Overview	Setting range	Reference section
ClrMode	Character string	Specifies the clear mode.	00, 01, 02	Section 3.6
CmdData		Specifies the application data (subheader + text (command)) of the MC protocol (QnA compatible 3E frame).	Enter according to the MC protocol format.	Chapter 3
CmdMode		Specifies the remote operation mode.	0001, 0003	Section 3.6
CpuTime		Specifies the CPU monitoring timer.	0000 to FFFF	Section 3.1.3
CpuNo		Specifies the target CPU (request destination module I/O No.).	0000 to 01FF, 03E0 to 03E3, 03FF	Section 3.1.6
DevCode		Specifies the device code.	(See item (a).)	Section 3.3
DevData		Specifies data for the number of device.	—	
DevNo		Specifies the head device number.	(See item (a).)	
DevNum		Specifies the number of device.	1 to 960	
HostName		Specifies the IP address or host name of the connection target Ethernet module.	—	—
NetNo		Specifies the network No. to be routed thorough last.	00 to EF, FE	Section 3.1.3
PassWord		Specifies the remote password.	—	—
PcNo		Specifies the PC No. of the access station.	01 to 40, 7D, 7E, FF	Section 3.1.3
PortNo		Specifies the HTTP port No.	—	—
ProxyName		Specifies the IP address or host name of the proxy server.	—	—
RetType		Specifies the execution result type. 1: Actual data only Returns only the application data (subheader + text (response)) returned from the programmable controller CPU. Other than 1: Normal execution result Returns the data edited in the communication library.	—	—

## (a) Device codes and head device numbers

The following table lists the device codes and head device numbers.

The devices that can be accessed using device memory read/write vary, depending on the target programmable controller CPU. For details, refer to the Reference Manual.

Device	Device type		Device code	Device No. range (at default assignment)	Notation	
	Bit	Word			Decimal	Hexadecimal
Special relay	○		SM	000000 to 002047	○	
Special register		○	SD	000000 to 002047	○	
Input relay	○		X*	000000 to 001FFF		○
Output relay	○		Y*	000000 to 001FFF		○
Internal relay	○		M*	000000 to 008191	○	
Latch relay	○		L*	000000 to 008191	○	
Annunciator	○		F*	000000 to 002047	○	
Edge relay	○		V*	000000 to 002047	○	
Link relay	○		B*	000000 to 001FFF		○
Data register		○	D*	000000 to 012287	○	
Link register		○	W*	000000 to 001FFF		○
Timer	Contact	○	TS	000000 to 002047	○	
	Coil	○	TC		○	
	Current value		TN		○	
Retentive timer	Contact	○	SS		○	
	Coil	○	SC		○	
	Current value		SN		○	
Counter	Contact	○	CS	000000 to 001023	○	
	Coil	○	CC		○	
	Current value		CN		○	
Special link relay	○		SB	000000 to 007FFF		○
Special link register		○	SW	000000 to 007FFF		○
Step relay	○		S*	000000 to 008191	○	
Direct input	○		DX	000000 to 001FFF		○
Direct output	○		DY	000000 to 001FFF		○
Index register		○	Z*	000000 to 000015	○	
File register		○	R*	000000 to 032767	○	
			ZR	000000 to 0FE7FF		○

(4) Return values of the functions

The following explains the return values of the communication library functions.

- (a) A code for judging the execution result is added to the head of the return value.  
 For normal completion, <!OK> is added.  
 For abnormal completion, <!NG> is added.  
 \* For ReqCmd, <!OK> is added in the case of an MC protocol error.
- (b) A code for judging an error is added at abnormal completion.
  - 1) In the case of an HTTP error, <!NG><!HTTP error "HTTP error code"> is added.
  - 2) In the case of a WinSock error, <!NG><!WinSock error "WinSock error code"> is added.
  - 3) In the case of an MC protocol error, <!NG><!MCP error "error code (end code)"> is added.  
 \* Refer to either of the following manuals according to the error code, verify the error content, and take an appropriate action.  
 <Error codes>  
 4FFF<sub>H</sub> or lower : QCPU User's Manual (Hardware Design, Maintenance and Inspection)  
 C000<sub>H</sub> and higher : Section 11.3.3 of the User's Manual (Basic)
  - 4) In the case of a communication library error, an error message is displayed.
- (c) If the HTTP port is used or a remote password has been set in the programmable controller CPU of access destination, create a program for remote password input processing, using the error code for the following return value as a condition. (For an example of how to describe a program for remote password input processing, see Section 4.5.)  
 <!HTTP error 401>
- (d) The following table lists examples of the return values of the communication library functions.

Function	Condition		Return value (example)
DevRead	Normal completion	RetType = other than "1"	<!OK>- The execution result of Device Read - The normal completion. Device code D*  Device 000000 Number of device 4 Reading data 123456789ABC1234
		RetType = "1"	<!OK>123456789ABC1234
	Abnormal completion		<!NG><!MCP error C056>- The execution result of Device Read - The abnormal completion. C056 
DevWrite	Normal completion		<!OK>- The execution result of Device Write - The normal completion. 
	Abnormal completion		<!NG><!MCP error C056>- The execution result of Device Write - The abnormal completion. C056 
RmtRun	Normal completion		<!OK>- The execution result of Remote RUN - The normal completion. 
	Abnormal completion		<!NG><!MCP error 4B00>- The execution result of Remote RUN - The abnormal completion. 4B00 
RmtStop	Normal completion		<!OK>- The execution result of Remote STOP - The normal completion. 
	Abnormal completion		<!NG><!MCP error 4B00>- The execution result of Remote STOP - The abnormal completion. 4B00 
ReqCmd	Normal completion	RetType = other than "1"	<!OK>- The execution result of Data Request - The MC protocol normal completion. D00000FF03FF0000140000123456789ABC1234 
		RetType = "1"	<!OK>D00000FF03FF0000140000123456789ABC1234
	Abnormal completion	RetType = other than "1"	<!OK>- The execution result of Data Request - The MC protocol abnormal completion. C056 D00000FF03FF000016C05600FF03FF0004010000 
		RetType = "1"	<!OK>D00000FF03FF000016C05600FF03FF0004010000
ProxySet	Normal completion		<!OK>- The proxy setting - The proxy setting completion. 
	Abnormal completion		<!NG>- The communication library error - Check the setting value of the proxy. 
ProxyReset	Normal completion		<!OK>- The proxy setting - The proxy setting cancellation. 
	Abnormal completion		<!NG>- The communication library error - The proxy information is not set. 

INDEX

[C]  
 Communication Library argument ..... 6-3  
 Communication Library functions ..... 6-1  
 Configuration of files on the Sample screen ..... 4-15

[D]  
 Device code ..... 6-4  
 Decompressing the file ..... 3-3

[F]  
 File structure ..... 3-3

[H]  
 Head device numbers ..... 6-4  
 How to obtain the Communication library ..... 3-2  
 How to obtain the Sample screen ..... 3-2

[M]  
 Manual's use ..... A-9  
 MC protocol ..... A-10

[O]  
 Overview of web function ..... 1-1

[R]  
 Registering the Communication library ... 3-4  
 Related Manuals ..... A-8  
 Remote password check ..... 1-4

[S]  
 Setup the file ..... 3-3  
 Supported Communication library function ..... 6-1

[U]  
 Utilizing the Web server ..... 1-3

[V]  
 Verifying the Web function using a Sample screen ..... 4-1

[W]  
 Web browser ..... A-10, 2-2  
 Web function items available on the Sample screen ..... 4-1  
 Web server ..... A-10, 2-2  
 Web server software ..... A-10



# WARRANTY

Please confirm the following product warranty details before using this product.

## 1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company.

However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

### [Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place.

Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

### [Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
  1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
  2. Failure caused by unapproved modifications, etc., to the product by the user.
  3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
  4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
  5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
  6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
  7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

## 2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued. Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

## 3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

## 4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation of damages caused by any cause found not to be the responsibility of Mitsubishi, loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products, special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products, replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

## 5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

## 6. Product application

- (1) In using the Mitsubishi MELSEC programmable controller, the usage conditions shall be that the application will not lead to a major accident even if any problem or fault should occur in the programmable controller device, and that backup and fail-safe functions are systematically provided outside of the device for any problem or fault.
- (2) The Mitsubishi programmable controller has been designed and manufactured for applications in general industries, etc. Thus, applications in which the public could be affected such as in nuclear power plants and other power plants operated by respective power companies, and applications in which a special quality assurance system is required, such as for Railway companies or Public service purposes shall be excluded from the programmable controller applications.

In addition, applications in which human life or property that could be greatly affected, such as in aircraft, medical applications, incineration and fuel devices, manned transportation, equipment for recreation and amusement, and safety devices, shall also be excluded from the programmable controller range of applications.

However, in certain cases, some applications may be possible, providing the user consults their local Mitsubishi representative outlining the special requirements of the project, and providing that all parties concerned agree to the special circumstances, solely at the users discretion.

Microsoft, Windows, Windows NT are registered trademarks of Microsoft Corporation in the United States and other countries.

Netscape is a registered trademark of Netscape Communication Corporation in the United States and other countries.

Adobe and Acrobat are registered trademarks of Adobe Systems Incorporation.

Pentium and Celeron are trademarks of Intel Corporation in the United States and other countries.

Ethernet is a trademark of Xerox Co., Ltd. in the United States.

Other company names and product names used in this document are trademarks or registered trademarks of respective owners.



# Q Corresponding Ethernet Interface Module

## User's Manual (Web function)

MODEL	QJ71E71-U-WEB-E
MODEL CODE	13JR40
SH(NA)-080180-D(0706)MEE	



HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN  
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the  
Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.

HEADQUARTERS		EUROPEAN REPRESENTATIVES		EUROPEAN REPRESENTATIVES		EURASIAN REPRESENTATIVES	
MITSUBISHI ELECTRIC EUROPE B.V. German Branch Gothaer Straße 8 <b>D-40880 Ratingen</b> Phone: +49 (0)2102 / 486-0 Fax: +49 (0)2102 / 486-1120	<b>EUROPE</b>	GEVA Wiener Straße 89 <b>AT-2500 Baden</b> Phone: +43 (0)2252 / 85 55 20 Fax: +43 (0)2252 / 488 60	<b>AUSTRIA</b>	Beijer Electronics UAB Savanoriu Pr. 187 <b>LT-02300 Vilnius</b> Phone: +370 (0)5 / 232 3101 Fax: +370 (0)5 / 232 2980	<b>LITHUANIA</b>	Kazpromautomatics Ltd. 2, Scladskaya str. <b>KAZ-470046 Karaganda</b> Phone: +7 3212 / 50 11 50 Fax: +7 3212 / 50 11 50	<b>KAZAKHSTAN</b>
MITSUBISHI ELECTRIC EUROPE B.V. French Branch 25, Boulevard des Bouvets <b>F-92741 Nanterre Cedex</b> Phone: +33 (0)1 / 55 68 55 68 Fax: +33 (0)1 / 55 68 57 57	<b>FRANCE</b>	TEHNIKON Oktyabrskaya 16/5, Off. 703-711 <b>BY-220030 Minsk</b> Phone: +375 (0)17 / 210 46 26 Fax: +375 (0)17 / 210 46 26	<b>BELARUS</b>	INTEHSIS srl bld. Traian 23/1 <b>MD-2060 Kishinev</b> Phone: +373 (0)22 / 66 4242 Fax: +373 (0)22 / 66 4280	<b>MOLDOVA</b>	ELEKTROSTILY Rubzovskaja nab. 4-3, No. 8 <b>RU-105082 Moscow</b> Phone: +7 495 / 545 3419 Fax: +7 495 / 545 3419	<b>RUSSIA</b>
MITSUBISHI ELECTRIC EUROPE B.V. Irish Branch Westgate Business Park, Ballymount <b>IRL-Dublin 24</b> Phone: +353 (0)1 4198800 Fax: +353 (0)1 4198890	<b>IRELAND</b>	Koning & Hartman B.V. Industrial Solutions Woluwelaan 31 <b>BE-1800 Vilvoorde</b> Phone: +32 (0)2 / 257 02 40 Fax: +32 (0)2 / 257 02 49	<b>BELGIUM</b>	Koning & Hartman B.V. Haarlerbergweg 21-23 <b>NL-1101 CH Amsterdam</b> Phone: +31 (0)20 / 587 76 00 Fax: +31 (0)20 / 587 76 05	<b>NETHERLANDS</b>	ICOS Industrial Computer Systems ZAO Ryazanskij Prospekt, 8A, Office 100 <b>RU-109428 Moscow</b> Phone: +7 495 / 232 0207 Fax: +7 495 / 232 0327	<b>RUSSIA</b>
MITSUBISHI ELECTRIC EUROPE B.V. Italian Branch Viale Colleoni 7 <b>I-20041 Agrate Brianza (MI)</b> Phone: +39 039 / 60 53 1 Fax: +39 039 / 60 53 12	<b>ITALY</b>	AKHNATON 4 Andrej Ljapchev Blvd. Pb 21 <b>BG-1756 Sofia</b> Phone: +359 (0)2 / 97 44 05 8 Fax: +359 (0)2 / 97 44 06 1	<b>BULGARIA</b>	Beijer Electronics AS Postboks 487 <b>NO-3002 Drammen</b> Phone: +47 (0)32 / 24 30 00 Fax: +47 (0)32 / 84 85 77	<b>NORWAY</b>		
MITSUBISHI ELECTRIC EUROPE B.V. Japanese Branch Office Tower "Z" 14 F <b>8-12, 1 chome, Harumi Chuo-Ku</b> Tokyo 104-6212 Phone: +81 3 622 160 60 Fax: +81 3 622 160 75	<b>JAPAN</b>	INEA CR d.o.o. Losinjska 4 a <b>HR-10000 Zagreb</b> Phone: +385 (0)1 / 36 940 - 01 / -02 / -03 Fax: +385 (0)1 / 36 940 - 03	<b>CROATIA</b>	MPL Technology Sp. z o.o. Ul. Krakowska 50 <b>PL-32-083 Balice</b> Phone: +48 (0)12 / 630 47 00 Fax: +48 (0)12 / 630 47 01	<b>POLAND</b>		
MITSUBISHI ELECTRIC CORPORATION UK Branch Travellers Lane <b>UK-Hatfield, Herts. AL10 8XB</b> Phone: +44 (0)1707 / 27 61 00 Fax: +44 (0)1707 / 27 86 95	<b>UK</b>	AutoCont Control Systems, s.r.o. Jelinkova 59/3 <b>CZ-721 00 Ostrava Svinov</b> Phone: +420 (0)59 / 5691 150 Fax: +420 (0)59 / 5691 199	<b>CZECH REPUBLIC</b>	Sirius Trading & Services srl Aleea Lacul Morii Nr. 3 <b>RO-060841 Bucuresti, Sector 6</b> Phone: +40 (0)21 / 430 40 06 Fax: +40 (0)21 / 430 40 02	<b>ROMANIA</b>		
MITSUBISHI ELECTRIC EUROPE B.V. Spanish Branch Carretera de Rubí 76-80 <b>E-08190 Sant Cugat del Vallés (Barcelona)</b> Phone: +34 93 / 565 3131 Fax: +34 93 / 589 1579	<b>SPAIN</b>	AutoCont Control Systems, s.r.o. Technologická 374/6 <b>CZ-708 00 Ostrava - Pustkovec</b> Phone: +420 595 691 150 Fax: +420 595 691 199	<b>CZECH REPUBLIC</b>	CRAFT Consulting & Engineering d.o.o. Toplicna str.4 lok 6 <b>SER-1800 Nis</b> Phone: +381 (0)18 / 292-24-4/5, 523 962 Fax: +381 (0)18 / 292-24-4/5, 523 962	<b>SERBIA</b>		
MITSUBISHI ELECTRIC AUTOMATION 500 Corporate Woods Parkway <b>Vernon Hills, IL 60061</b> Phone: +1 847 478 21 00 Fax: +1 847 478 22 83	<b>USA</b>	B:TECH, a.s. Na Ostrove 84 <b>CZ - 58001 Havlickuv Brod</b> Phone: +420 (0)569 / 408 841 Fax: +420 (0)569 / 408 889	<b>CZECH REPUBLIC</b>	INEA SR d.o.o. Karadjordjeva 12/260 <b>SER-113000 Smederevo</b> Phone: +381 (0)26 / 617 163 Fax: +381 (0)26 / 617 163	<b>SERBIA</b>		
		B:TECH, a.s. Headoffice U Borové 69 <b>CZ-580 01 Havlickuv Brod</b> Phone: +420 569 777 777 Fax: +420 569 777 778	<b>CZECH REPUBLIC</b>	CS MTrade Slovensko, s.r.o. Vajanskeho 58 <b>SK - 92101 Piestany</b> Phone: +421 (0)33 / 7742 760 Fax: +421 (0)33 / 7735 144	<b>SLOVAKIA</b>		
		Beijer Electronics A/S Lautrupvej 1-3 <b>DK-2750 Ballerup</b> Phone: +45 (0)70 / 26 46 46 Fax: +45 (0)70 / 26 48 48	<b>DENMARK</b>	INEA d.o.o. Stegne 11 <b>SI-1000 Ljubljana</b> Phone: +386 (0)1 / 513 8100 Fax: +386 (0)1 / 513 8170	<b>SLOVENIA</b>		
		Beijer Electronics Eesti OÜ Pärnu mnt.160i <b>EE-11317 Tallinn</b> Phone: +372 (0)6 / 51 81 40 Fax: +372 (0)6 / 51 81 49	<b>ESTONIA</b>	Beijer Electronics Automation AB Box 426 <b>SE-20124 Malmö</b> Phone: +46 (0)40 / 35 86 00 Fax: +46 (0)40 / 35 86 02	<b>SWEDEN</b>		
		Beijer Electronics OY Jaakonkatu 2 <b>FIN-01620 Vantaa</b> Phone: +358 (0)207 / 463 500 Fax: +358 (0)207 / 463 501	<b>FINLAND</b>	ECONOTEC AG Hinterdorfstr. 12 <b>CH-8309 Nürensdorf</b> Phone: +41 (0)44 / 838 48 11 Fax: +41 (0)44 / 838 48 12	<b>SWITZERLAND</b>		
		UTECO A.B.E.E. 5, Mavrogenous Str. <b>GR-18542 Piraeus</b> Phone: +30 211 / 1206 900 Fax: +30 211 / 1206 999	<b>GREECE</b>	GTS Darulaceze Cad. No. 43 KAT. 2 TR-34384 Okmeydani-Istanbul Phone: +90 (0)212 / 320 1640 Fax: +90 (0)212 / 320 1649	<b>TURKEY</b>		
		Meltrade Ltd. Fertő utca 14. <b>HU-1107 Budapest</b> Phone: +36 (0)1 / 431-9726 Fax: +36 (0)1 / 431-9727	<b>HUNGARY</b>	CSC Automation Ltd. 15, M. Raskova St., Fl. 10, Office 1010 <b>UA-02002 Kiev</b> Phone: +380 (0)44 / 494 33 55 Fax: +380 (0)44 / 494-33-66	<b>UKRAINE</b>		
		Beijer Electronics SIA Vestienas iela 2 <b>LV-1035 Riga</b> Phone: +371 (0)784 / 2280 Fax: +371 (0)784 / 2281	<b>LATVIA</b>				

**MIDDLE EAST REPRESENTATIVES**

Ilan & Gavish Ltd. Automation Service 24 Shenkar St., Kiryat Arie <b>IL-49001 Petah-Tiqva</b> Phone: +972 (0)3 / 922 18 24 Fax: +972 (0)3 / 924 0761	<b>ISRAEL</b>
Texel Electronics Ltd. 2 Ha'umanut, P.O.B. 6272 <b>IL-42160 Netanya</b> Phone: +972 (0)9 / 863 08 91 Fax: +972 (0)9 / 885 24 30	<b>ISRAEL</b>

**AFRICAN REPRESENTATIVE**

CBI Ltd. Private Bag 2016 <b>ZA-1600 Isando</b> Phone: +27 (0)11 / 928 2000 Fax: +27 (0)11 / 392 2354	<b>SOUTH AFRICA</b>
---	---------------------