


T-100 (3mm) SOLID STATE INDICATOR LAMPS

RED DIFFUSED QL202HD RED CLEAR QL202HT HER DIFFUSED QL202ID **HER CLEAR QL202IT** QL202YD YELLOW DIFFUSED YELLOW CLEAR QL202YT **GREEN DIFFUSED** QL202GD **GREEN CLEAR** QL202GT

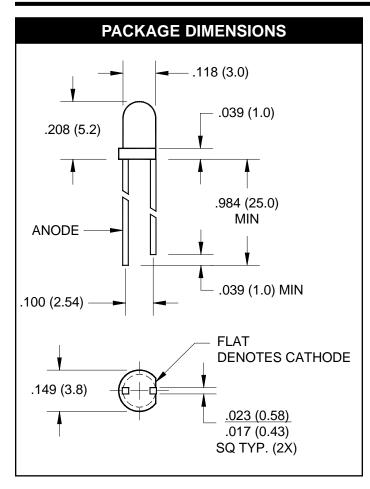

FEATURES

- Popular T-100 package
- Choice of viewing angles
- · Choice of tinted or tinted diffused lens

DESCRIPTION

These T-100 LEDs are used as general purpose indicators. They come in either a wide angle (70°) diffused lens or a moderate angle (32°) clear lens. The red and green lamps are made with GaP LEDs on a GaP substrate. The HER and yellow lamps are made with GaAsP LEDs on a GaP substrate. All have an epoxy encapsulation lens.

NOTES:

- 1. Dimensions for all drawings are in inches (mm).
- Lead spacing is measured where the leads emerge from the package.
- 3. Protruded resin under the flange is 1.5 mm (0.059") max.
- 4. Tolerance is +/-0.12" (0.3mm) unless otherwise noted.



T-100 (3mm) SOLID STATE INDICATOR LAMPS

ABSOLUTE MAXIMUM RATING (TA =25°C)							
Parameter	Symbol	Red	Her	Green	Yellow	Units	
Power Dissipation	P _D	100	100	100	100	mA	
Peak Forward Current (at f = 1.0 KHz, Duty factor = 1/10)	I _{FM}	50	100	100	100	mA	
Reversed Voltage	V _R	5	5	5	5	V	
Continuous DC Forward Current	IF	15	20	20	20	mA	
Lead Soldering Time at 260° C	T _{SOL}	5	5	5	5	sec	
Operating Temperature	T _{OPR}	-40 to +100	-40 to +100	-40 to +100	-40 to +100	°C	
Storage Temperature	T _{STG}	-40 to +100	-40 to +100	-40 to +100	-40 to +100	°C	

ELECTRICAL / OPTICAL CHARACTERISTICS (TA =25°C)							
Part Number	Symbol	QL202HD	QL202ID	QL202GD	QL202YD	Condition	
Luminous Intensity (mcd)						I _F = 10mA	
Minimum	I _V	0.5	1.1	1.1	1.1		
Typical		1.6	6.0	6.0	4.5		
Forward Voltage (V)						$I_F = 10mA$	
Typical	V _F	1.7	1.7	1.7	1.7		
Maximum		2.1	2.0	2.1	2.0		
Spectral Line Half Width (nm)	Δλ	90	45	30	35	$I_F = 10mA$	
Peak Wavelength (nm)	λр	697	635	565	585	IF = 10mA	
Viewing Angle (Total) (°)	2θ 1/2	70	70	70	70	IF = 10mA	

ELECTRICAL / OPTICAL CHARACTERISTICS (TA =25°C)								
Part Number	Symbol	QL202HT	QL202IT	QL202GT	QL202YT	Condition		
Luminous Intensity (mcd)						I _F = 10mA		
Minimum	I _V	2.5	3.5	3.0	3.5			
Typical		10.0	17.0	15.0	15.0			
Forward Voltage (V)						I _F = 10mA		
Typical	V _F	1.7	1.7	1.7	1.7			
Maximum		2.1	2.0	2.1	2.0			
Spectral Line Half Width (nm)	Δλ	90	45	30	35	$I_F = 10mA$		
Peak Wavelength (nm)	λр	697	635	565	585	IF = 10mA		
Viewing Angle (Total) (°)	2θ 1/2	32	32	32	32	IF = 10mA		

^{1.} The leads of the device were immersed in molten solder at 260°C, to a point 1/16 inch (1.6 mm) from the body of the device per MIL-S-750, with a dwell time of 5 seconds.



T-100 (3mm) SOLID STATE INDICATOR LAMPS

TYPICAL PERFORMANCE CURVES (TA =25°C)

Fig. 1 Forward Current vs. Forward Voltage

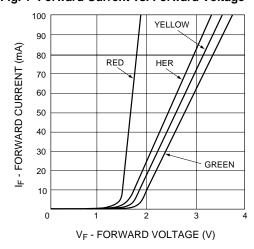


Fig. 2 Luminous Intensity vs. Forward Current



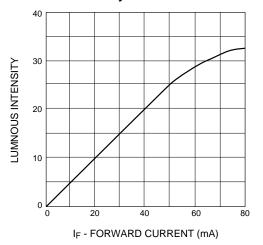


Fig. 3 Spatial Distribution

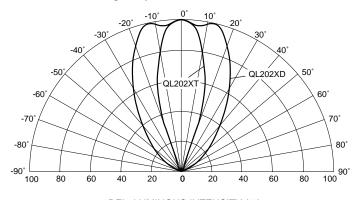

REL. LUMINOUS INTENSITY (%)

Fig. 4 Relative Intensity vs. Peak Wavelength

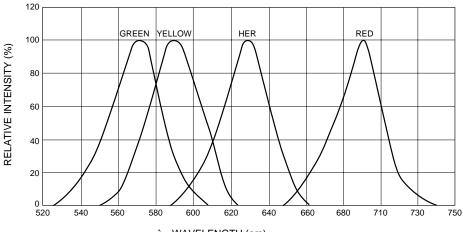

 λ - WAVELENGTH (nm)



T-100 (3mm) SOLID STATE INDICATOR LAMPS

DISCLAIMER

FAIRCHILD SEMICONDUCTOR RESERVES THE THE RIGHT TO MAKE CHANGES WITHOUT FURTHER NOTICE TO ANY PRODUCTS HEREIN TO IMPROVE RELIABILITY, FUNCTION OR DESIGN. FAIRCHILD DOES NOT ASSUME ANY LIABILITY ARISING OUT OF THE APPLICATION OR USE OF ANY PRODUCT OR CIRCUIT DESCRIBED HEREIN; NEITHER DOES IT CONVEY ANY LICENSE UNDER ITS PATENT RIGHTS, NOR THE RIGHTS OF OTHERS.

LIFE SUPPORT POLICY

FAIRCHILD'S PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS WRITTEN APPROVAL OF THE PRESIDENT OF FAIRCHILD SEMICONDUCTOR CORPORATION. As used herein:

- Life support devices or systems are devices or systems which, (a) are intended for surgical implant into the body,or (b) support or sustain life, and (c) whose failure to perform when properly used in accordance with instructions for use provided in labeling, can be reasonably expected to result in a significant injury of the user.
- A critical component in any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.