

ROITHNER LASERTECHNIK GIRDH

WIEDNER HAUPTSTRASSE 76 IO40 VIENNA AUSTRIA TEL. +43 I 586 52 43 -0, FAX. -44, OFFICE@ROITHNER-LASER.COM



RLT1600-10G



TECHNICAL DATA (PRELIMINARY)

High Power Infrared Laser Diode

Features

Peak Wavelength: single mode, typ. 1600 nm

Optical Ouput Power: 10 mW

Package: 9 mm



Electrical Connection

| Pin Configuration | | | Bottom View | |
|-------------------|--------|----------------------|-------------|------------------------------|
| 10 03 | n-type | | | 2 |
| 12 7 22 | PIN | Function | | |
| LD PD | 1 | LD Cathode | _ | > • • < |
| | 2 | LD Anode, PD Cathode | _ | \ 1 \ 3 \ \ |
| | 3 | PD Anode | _ | |
| 02 | | | _ | |

Absolute Maximum Ratings ($T_C=25$ °C)

| Item | Symbol | Value | Unit |
|----------------------------|------------------|---------|------|
| CW Output Power | Po | 10 | mW |
| Maximum LD Current | I _f | 85 | mA |
| Operating Case Temperature | T _C | -20 +40 | °C |
| Storage Temperature | T _{sta} | -40 +70 | °C |


Specifications (T_C=25°C)

| Item | Symbol | Condition | Min. | Тур. | Max. | Unit | | |
|--------------------------|----------------------|-----------------------|------|-------|------|------|--|--|
| Optical Specification | | | | | | | | |
| CW Output Power | Po | CW | ı | 10 | - | mW | | |
| Peak Wavelength | λ_{P} | $P_O = 40 \text{ mW}$ | 1580 | 1600 | 1620 | nm | | |
| Spectral Width (FWHM) | Δλ | $P_O = 40 \text{ mW}$ | ı | - | 7 | nm | | |
| FWHM Beam Divergence | Θ_{\parallel} | $P_O = 40 \text{ mW}$ | ı | 10 | - | deg | | |
| | θΪ | $P_O = 40 \text{ mW}$ | ı | 50 | - | deg | | |
| Emitting Aperature | WxH | | | 5 x 1 | | μm | | |
| Electrical Specification | | | | | | | | |
| Threshold Current | I _{th} | CW | ı | - | 40 | mA | | |
| Operating Current | l _{op} | $P_O = 40 \text{ mW}$ | ı | - | 85 | mA | | |
| Operating Voltage | U _{op} | $P_O = 40 \text{ mW}$ | • | 2 | - | V | | |
| Monitor Current | l _m | $P_0 = 40 \text{ mW}$ | - | - | - | μΑ | | |

The above specifications are for reference purpose only and subjected to change without prior notice.



Package Dimensons

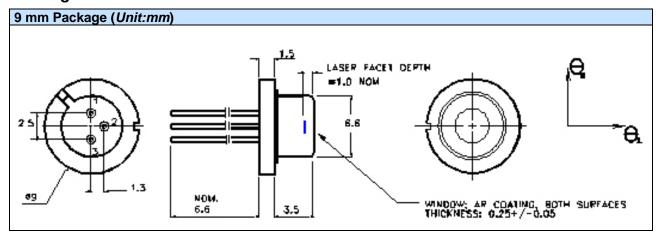

Safety of Laser light

Laser Light can damage the human eyes and skin. Do not expose the
eye or skin directly to any laser light and/or through optical lens. When
handling the LDs, wear appropriate safety glasses to prevent laser
light, even any reflections from entering to the eye. Focused laser
beam through optical instruments will increase the chance of eye
hazard.



These LDs are emitting invisible light.

Cautions

1. Operating methode

- This LD shall change its forward voltage requirement and optical ouput power according to temperature change. Also, the LD will require more operation current to maintain same ouput power as it degrades. In order to maintain output power, use of APC (Automatic Power Control) is recommended. Which use monitor feedback to adjust the operation current.
- Confirm that electrical spike current generated by switching on and off does not exceed the
 maximum operating current level specified herein above as absolute maximum rating. Also,
 employ appropriat countermeasures to reduce chattering and/or overshooting in the circuit.

2. Static Electricity

• Static electricity or electrical surges will reduce and degrade the reliability of the LDs. It is recommended to use a wrist trap or anti-electrostatic glove when handeling the product.

3. Absolute Maximum Rating

Active layer of LDs shall have high current density and generate high electric field during its
operation. In order to prevent excessive damage, the LD must be operated strictly below
absolute maximum rating.

