

MODEL: ST3151A04-2

Ver. 2.2

Date: 26.July.2012

Customer's	s Approval	сѕот	
Signature	Date	Approved By Product Director	Date
		Name: Richard Lung	
		Signature:	
		Reviewed By PM Manager	Date
		Name: Aaron Tu	
	X	Signature:	
		Reviewed By Project Leader	Date
		Name: Joe Kuo	
		Signature:	
		Reviewed By PM	Date
		Name: Charles Chin	
		Signature:	

Contents

1. General Description	4
1.1 Product Features	4
1.2 Overview	4
1.3 General Information	4
2.Absolute Maximum Ratings	5
2.1 Absolute Maximum Ratings (TA = 25 ± 2 °C)	5
2.2 Environment Requirement (Based on CSOT Module MT3151A04-2)	5
2.3 Absolute ratings of Environment (Open Cell)	
3. Electrical Specification	6
3.1 Open cell Power Consumption (TA = 25 ± 2 °C)	6
3.2 LVDS Characteristics	7
4. Input Terminal Pin Assignment	
4.1 Interface pin assignment	8
4.2 Block Diagram of Interface	10
4.3 LVDS Interface	10
4.3.1 VESA Format (SELLVDS = L or Open)	10
4.3.2 JEIDA Format (SELLVDS = H)	10
4.4 Pattern For Vcom Adjustment	11
5. Interface Timing	12
5.1 Timing Table (DE Only Mode)	
5.2 Power On/Off Sequence	13
6. Optical Characteristics	14
6.1 Measurement Conditions	14
6.2 Optical Specifications	15
7. Mechanical Characteristics	18
7.1 Mechanical Specification	18
7.2 Packing	19
7.2.1 Packing Specifications	19
7.2.2 Packing Method	19
8. Definition of Labels	20
8.1 Open Cell Label	20
8.2 Carton Label	20
8.3 Pallet Label	21
9. Precautions	22
9.1 Assembly and Handling Precautions	22
9.2 Safety Precautions	22

Revision History

Version	Date	Page (New)	Section	Description	Revision by
Ver. 2.1	06.Jun.2012	22	All	Approval Specification was First Issued.	Yuntong Sun
Ver. 2.2	26.July.2012	P8/P9/P10	4.1	User Connector Changed	Charles Chin
				WP Pin setting Changed	Charles Chin



1. General Description

1.1 Product Features

- HD Resolution (1366 x 768)

- Very High Contrast Ratio: 3000:1

- Fast Response Time

- Ultra Wide Viewing Angle: 178° (H)/178° (V) (CR ≥ 10)

- DE (Data Enable) Mode

- LVDS (Low Voltage Differential Signaling) Interface

1.2 Overview

ST3151A04-2 is a diagonal 31.5" color active matrix LCD open cell with 1ch-LVDS interface. This open cell is a transmissive type display operating in the normally black mode. It supports 1366 x 768 HD resolution and can display up to 16.7M colors (8-bit). Each pixel is divided into Red, Green and Blue sub-pixels which are arranged in vertical stripe. There is no backlight built-in.

This open cell dedicates for LCD TV products and provides excellent performance which includes high transparency, ultra wide viewing angle and high color depth. CSOT open cell comply with RoHS for identification.

1.3 General Information

Item	Specification	Unit	Note
Active Area	697.6845 (H) x 392.2560 (V)	mm	
Cell Size	714.835(H) x 410.570 (V) x 1.900 (D)	mm	
Weight	1.2	kg	Max.
Driving Scheme	a-Si TFT Active Matrix	-	
Number of Pixels	1366 x 768	pixel	
Pixel Pitch (Sub Pixel)	0.17025 (H) x 0.51075 (V)	mm	
Pixel Arrangement	RGB Vertical Stripe	-	
Display Colors	16.7 M	color	8-bit
Display Mode	Transmissive Mode, Normally Black	-	
Glass thickness (Array/CF)	0.7/0.7	mm	
Color Chromaticity	R=0.630, 0.332 G=0.319, 0.624 B=0.156, 0.050 W=0.282, 0.310		T civil all annual de CCOT?
Contrast Ratio	3000:1(Typ.)		Typical value measured at CSOT's module: MT3151A04-1
Cell Transmittance	6.5%(Typ.)	%	
View Angle(CR>10)	+89/-89(H),+89/-89(V) (Typ.)		
Polarizer(CF side)	Anti-glare, Haze 12%, Hard Coating (3H)		
Polarizer(TFT side)	Hard Coating (3H)		

2. Absolute Maximum Ratings


2.1 Absolute Maximum Ratings ($T_A = 25 \pm 2$ °C)

The followings are maximum values which, if exceeded, may cause damage to the unit.

Item	Symbol	Va	Unit	
Item	Symbol	Min.	Max.	OIIIt
Power Supply Voltage	V_{CC}	- 0.3	13.5	V
Input Signal Voltage	V _{IN}	- 0.3	3.6	V

2.2 Environment Requirement (Based on CSOT Module MT3151A04-2)

(1) Temperature and relative humidity range are shown as below.

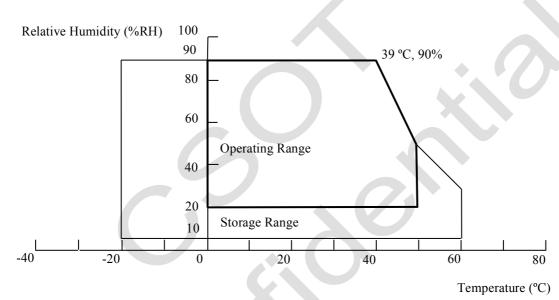

- (a) 90%RH maximum ($T_A < 39$ °C).
- (b) Wet-bulb temperature should be 39 °C maximum ($T_A > 39$ °C).
- (c) No condensation.
- (2) The storage temperature is between 20 °C to 60 °C, and the operating ambient temperature is between 0 °C to 50 °C. The maximum operating temperature is based on the test condition that the surface temperature of display area is less than or equal to 65 °C with LCD module in a temperature controlled chamber alone. Thermal management should be considered in final product design to prevent the surface temperature of display area from being over 65 °C. The range of operating temperature may degrade in case of improper thermal management in the end product design.
- (3) The rating of environment is based on LCD module. Leave LCD cell alone, this environment condition can't be guaranteed. Except LCD cell, the customer has to consider the ability of other parts of LCD module and LCD module process.

2.3 Absolute ratings of Environment (Open Cell)

When storing open cell as spares for a long time, please follow the precaution instructions:

- (1) Do not store the module in high temperature and high humidity for a long time. It is highly recommended to store the module with temperature from 20 °C to 30 °C in normal humidity (50±10%RH) with shipping package.
- (2) The open cell should be keep within one month shelf life.

3. Electrical Specification

3.1 Open cell Power Consumption (TA = 25 \pm 2 °C)

Parameter		Coursels al		Value	TT '4	N		
	Symbol	Min.	Тур.	Max.	Unit	Note		
Power Supply Vo	V _{CC}	10.8	12.0	13.2	V	(1)		
Rush Current		I_{RUSH}	-	-	3	A	(2)	
D 0 1	White Pattern	I_{CC}	-	0.31	0.41	A	(3)	
Power Supply Current	Horizontal Stripe	I_{CC}	-	0.31	0.41	A		
	Black Pattern	I_{CC}	-	0.2	0.26	A		

Note:

- (1) The ripple voltage should be controlled less than 10% of V_{CC} .
- (2) Measurement condition: V_{CC} rising time = 470 μ s.

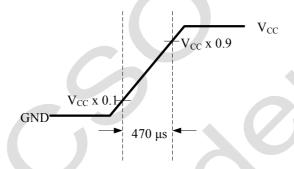


Fig. 3.1 V_{CC} rising time condition

(3) Measurement condition: $V_{CC} = 12 \text{ V}$, $Ta = 25 \pm 2 \text{ °C}$, F = 60 Hz. The test patterns are shown as below.


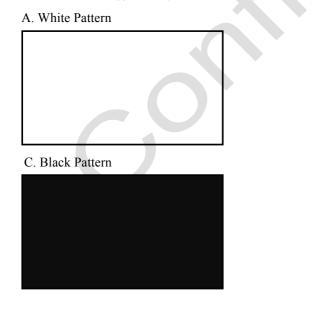


Fig. 3.2 Test patterns

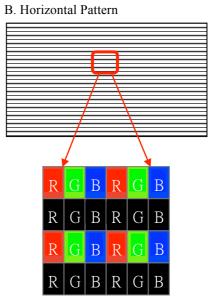

3.2 LVDS Characteristics

Parameter		Symbol		Value	Unit	Note	
		Symbol	Min.	Тур.	Max.	Ollit	Note
	Differential Input High Threshold Voltage	V_{TH}	+ 100	-	1	mV	
LVDS Interface	Differential Input Low Threshold Voltage	V_{TL}	-	-	- 100	mV	
	Common Input Voltage	V_{CM}	1.0	1.2	1.4	V	(1)
	Differential Input Voltage	$ V_{ID} $	200	ı	600	mV	
	Terminating Resistor	R_T	-	100	-	ohm	
CMOS Interface	Input High Threshold Voltage	V _{IH}	2.7	-	3.3	V	
	Input Low Threshold Voltage	V _{IL}	0.0	-	0.6	V	

Note:

(1) The LVDS input signal has been defined as follows:

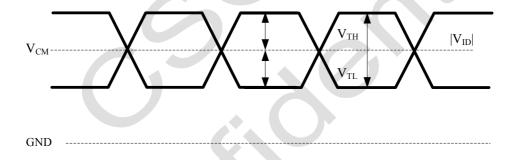


Fig. 3.3 LVDS input signal

4. Input Terminal Pin Assignment

4.1 Interface pin assignment

CN1: 196474-30041-3 (P-two) or equivalent (see Note (1))

Pin No.	Symbol	Description	Note
1	NC	Do not connect	
2	SCL	SCL	(3)
3	SDA	SDA	(3)
4	GND	Ground	
5	LV1N0	1st Channel LVDS Data Input (0-)	(2)
6	LV1P0	1st Channel LVDS Data Input (0+)	(2)
7	GND	Ground	
8	LV1N1	1st Channel LVDS Data Input (1-)	(2)
9	LV1P1	1st Channel LVDS Data Input (1+)	(2)
10	GND	Ground	
11	LV1N2	1st Channel LVDS Data Input (2-)	(2)
12	LV1P2	1st Channel LVDS Data Input (2+)	(2)
13	GND	Ground	
14	LVCK1N	1st Channel LVDS Clock Input (-)	(2)
15	LVCK1P	1st Channel LVDS Clock Input (+)	(2)
16	GND	Ground	
17	LV1N3	1st Channel LVDS Data Input (3-)	(2)
18	LV1P3	1st Channel LVDS Data Input (3+)	(2)
19	GND	Ground	
20	NC	Do not connect	
21	NC	Do not connect	
22	WP	Write Protection(L & Open: Do not read and write; H: read & write)	(3)
23	GND	Ground	
24	GND	Ground	
25	GND	Ground	
26	VCC	Power Supply ,+12 V DC regulated	
27	VCC	Power Supply ,+12 V DC regulated	
28	VCC	Power Supply ,+12 V DC regulated	
29	VCC	Power Supply ,+12 V DC regulated	
30	VCC	Power Supply ,+12 V DC regulated	

CN2: 12507WR-H10G or equivalent (see Note (1))

Pin No.	Symbol	Description	Note
1	VCC	Power Supply ,+12 V DC regulated	
2	VCC	Power Supply ,+12 V DC regulated	
3	GND	Ground	
4	Aging_EN	Aging enable set(H & open: free run mode[black pattern];L: Aging mode)	(4)
5	WP	Write Protection(L & Open: Do not read and write; H: read & write)	(3)
6	SDA	SDA	(3)
7	SCL	SCL	(3)
8	GND	Ground	
9	NC	Do not connect	
10	NC	Do not connect	

Note:

(1) The direction of pin assignment is shown as below:

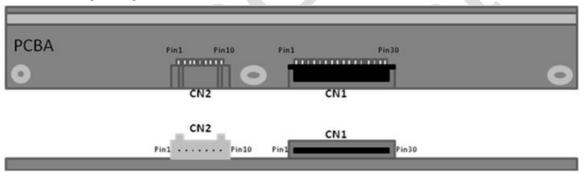


Fig. 4.1 LVDS direction sketch map

- (2) LVDS format JEIDA (default)
- (3) WP/SDA/SCL pull high and pull low set(H:3.3V;L:GND)

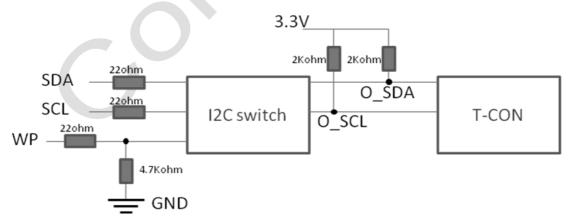


Fig. 4.2 WP/SDA/SCL PCBA set

(4) Aging_EN pull high set(H:3.3V;L:GND)


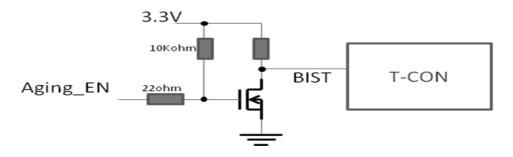


Fig. 4.3 Aging EN PCBA set

4.2 Block Diagram of Interface

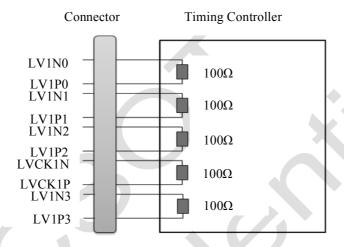


Attention:


- (1) This Open cell uses a 100 ohms (Ω) resistor between positive and negative lines of each receiver input.
- (2) LVDS cable impedance shall be 50 ohms per signal line or about 100 ohms per twist-pair line respectively.

4.3 LVDS Interface

4.3.1 VESA Format (SELLVDS = L or Open)

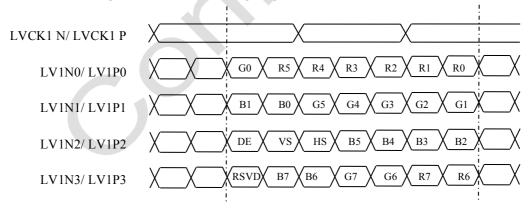


4.3.2 JEIDA Format (SELLVDS = H)

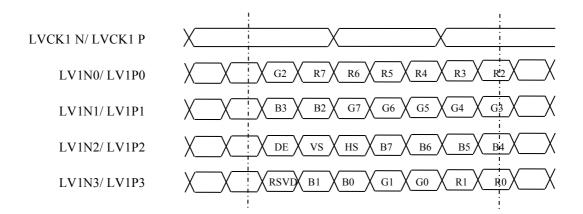

4.4 Pattern FOR Vcom Adjustment

1+2 line-inversion pattern

	Frame N							
+	-	+	1	+	ı	+	ı	+
-	+	-	+	-	+	-	+	1
-	+	-	+	-	+	-	+	1
+	-	+	- 1	+	- 1	+	- 1	+
+	-	+	ı	+	ı	+	ı	+
-	+	- 1	+	1	+	1	+	1
-	+	-	+	-	+	-	+	-

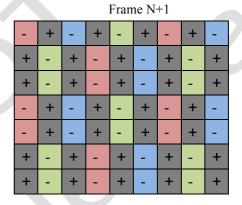

5. Interface Timing

5.1 Timing Table (DE Only Mode)

Signal	Item	Symbol	Min.	Тур.	Max.	Unit	Note
LVDS Clock	Frequency	F_{clk} (= 1 / T_{clk})	50.0	75.4	85.0	MHz	
	Frame Rate	F	47	60	63	Hz	
17 1	Vertical Frequency	F_{v}	47.0	48.4	60.9	KHz	
Vertical Term	Total	$T_{\rm v}$	784	806	1015	T_h	$T_{v} = T_{vd} + T_{vb}$
1 CIIII	Display	T_{vd}		768			
	Blank	$T_{\rm vb}$	16	38	247	T_h	
Horizontal Term	Total	T_h	1460	1560	2000	T_{clk}	$T_{h} = T_{hd} + T_{hb}$
	Display	T _{hd}		1366			
	Blank	T_{hb}	94	194	634	T _{clk}	

Attention:

(1) The TFT LCD Open cell is operated in DE only mode, H sync and V sync input signal have no effect on normal operation.

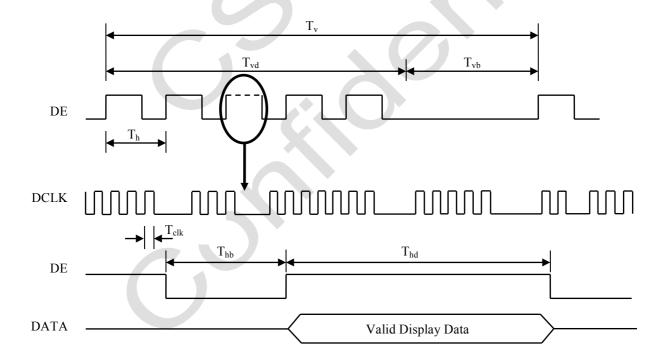


Fig. 5.1 Interface signal timing diagram

5.2 Power On/Off Sequence

To prevent a latch-up or DC operation of the Open cell, the power on/off sequence should be as the diagram below.

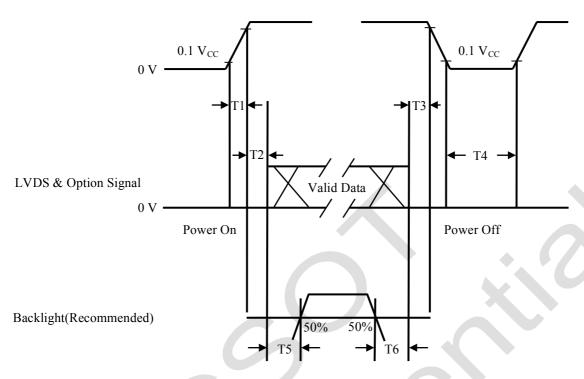


Fig. 5.2 Power On/Off

Damamatan		TT			
Parameter	Min. Typ.		Max.	Unit	
T1	0.5	-	10	ms	
T2	0	-	50	ms	
Т3	0	-	50	ms	
T4	1000	-	-	ms	
T5	500	-	-	ms	
Т6	100	-	-	ms	

Attention:

- (1) The supply voltage of the external system for the open cell input should follow the definition of V_{CC} .
- (2) When the customer's backlight turns on before the LCD operation or the LCD turns off before the backlight turns off, the display may momentarily become abnormal screen.
- (3) In case that V_{CC} is in off level, please keep the level of input signals on the low or high impedance. If T2 < 0, that may cause electrical overstress.
- (4) T4 should be measured after the module has been fully discharged between power off and on period.
- (5) Interface signal shall not be kept at high impedance when the power is on.

6. Optical Characteristics


6.1 Measurement Conditions

The table below is the test condition of optical measurement.

Item	Symbol	Value	Unit		
Ambient Temperature	T_{A}	25 ± 2	°C		
Ambient Humidity	H_A	50 ± 10	% RH		
Supply Voltage	V_{CC}	12	V		
Driving Signal	Refer to the typical value in Chapter 3: Electrical Specification				
Vertical Refresh Rate	F_R	60	Hz		

To avoid abrupt temperature change during optical measurement, it's suggested to warm up the LCD module more than 45 minutes after lighting the backlight and in the windless environment.

To measure the LCD cell, it is suggested to set up the standard measurement system as Fig. 6.1. The measuring area S should contain at least 500 pixels of the LCD cell as illustrated in Fig.6.2 (A means the area allocated to one pixel). In this model, for example, the minimum measuring distance Z is 370 mm when θ is 2 degree. Hence, 500 mm is the typical measuring distance. This measuring condition is referred to 301-2H of VESA FPDM 2.0 about viewing distance, angle, and angular field of view definition.

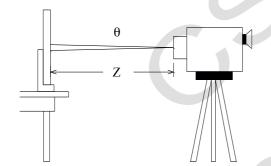

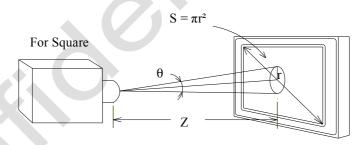


Fig. 6.1 The standard set-up system of measurement

Fig. 6.2 The area S contains at least 500 pixels to be measured

$$N = \frac{S}{A} \ge 500$$
pixels

N means the actual number of the pixels in the area S.

6.2 Optical Specifications

The table below of optical characteristics is measured by MINOLTA CS2000, MINOLTA CA310, ELDIM OPTI Scope-SA and ELDIM EZ Contrast in dark room.

Ite	m	Symbol	Condition	Min.	Тур.	Max.	Unit	Note
Static Contrast Ratio		CR		-	3000	-	-	(1) (2)
Response Time		T_{L}		-	6.5	12	ms	(3)
Center Transmittance		Т%		-	6.5		%	(2) (4)
Color Chromaticity (CIE1931)	Red	R_{X}	$\theta_{\rm H}$ = 0°, $\theta_{\rm V}$ = 0° Normal direction at center point with CSOT's module: MT3151A04-2	0.332 0.319 Typ. 0.624 - 0.03 0.156 0.050 0.282	0.630	Typ. + 0.03	-	(2) (5)
		R_{Y}			0.332		-	
	Green	G_X			0.319		-	
		G_{Y}			0.624			
	Blue	B_X			0.156			
		B_{Y}			0.050			
	White	W_X			0.282		-	
		W_{Y}			0.310		-	
	Color Gamut	CG		68	72	1	% NTSC	
Viewing Angle	Horizontal	θ_{H^+}	CR ≥ 10	-	89	-	Deg.	(6)
		$\theta_{ ext{H-}}$			89	-		
	Vertical	θ_{V^+}		7	89	-		
		$\theta_{ ext{V-}}$		-	89	ı		

Note:

(1) Definition of static contrast ratio (CR):

It's necessary to switch off all the dynamic and dimming function when measuring the static contrast ratio.

Static Contrast Ratio (CR) =
$$\frac{\text{CR-W}}{\text{CR-D}}$$

CR-W is the luminance measured by LMD (light-measuring device) at the center point of the LCD module with full-screen displaying white. The standard setup of measurement is illustrated in Fig. 6.3; CR-D is the luminance measured by LMD at the center point of the LCD module with full-screen displaying black. The LMD in this item is CS2000.

(2) The LMD in the item could be a spectroradiometer such as (KONICA MINOLTA) CS2000, CS1000(TOPCON), SR-UL2 or the same level spectroradiometer. Other display color analyzer (KONICA MINOLTA) CA210, CA310 or (TOPCON) BM-7 could be involved after being calibrated with a spectroradiometer on each stage of a product.

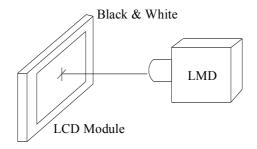


Fig. 6.3 The standard setup of CR measurement

(3) Response time T_L is defined as the average transition time in the response time matrix. The table below is the response time matrix in which each element $t_{X \text{ to } Y}$ is the transition time from luminance ratio X to Y. X and Y are two different luminance ratios among 0%, 25%, 50%, 75%, and 100% luminance. The transition time $t_{X \text{ to } Y}$ is defined as the time taken from 10% to 90% of the luminance difference between X and Y (X < Y) as illustrated in Fig.6.4. When X > Y, the definition of $t_{X \text{ to } Y}$ is the time taken from 90% to 10% of the luminance difference between X and Y. The response time is optimized on refresh rate F_r = 60Hz.

Measured Transition Time		Luminance Ratio of Previous Frame					
		0%	25%	50%	75%	100%	
	0%		t _{25% to 0%}	t _{50% to 0%}	t _{75% to 0%}	t _{100% to 0%}	
Ratio of 50	25%	t _{0% to 25%}		t _{50% to 25%}	t _{75% to 25%}	t _{100% to 25%}	
	50%	$t_{0\% \text{ to } 50\%}$	t _{25% to 50%}		t _{75% to 50%}	t _{100% to 50%}	
	75%	t _{0% to 75%}	t _{25% to 75%}	t _{50% to 75%}		t _{100% to 75%}	
	100%	t _{0% to 100%}	t _{25% to 100%}	t _{50% to 100%}	t _{75% to 100%}		

 $t_{X \text{ to } Y}$ means the transition time from luminance ratio X to Y.

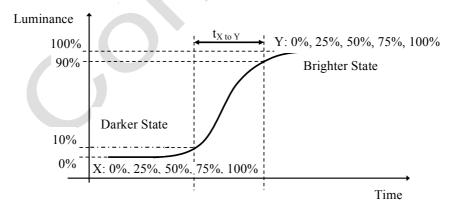


Fig. 6.4 The definition of $t_{X \text{ to } Y}$

All the transition time is measured at the center point of the LCD module by ELDIM OPTI Scope-SA.

(4) Definition of center Transmittance (T%):

The transmittance is measured with full white pattern (Gray 255)

(5) Definition of color chromaticity:

Each chromaticity coordinates (x, y) are measured in CIE1931 color space when full-screen displaying primary color R, G, B and white. The color gamut is defined as the fraction in percent of the area of the triangle bounded by R, G, B coordinates and the area is defined by NTSC 1953 color standard in the CIE color space. Chromaticity coordinates are measured by CS2000 and the standard setup of measurement is shown in Fig. 6.5.

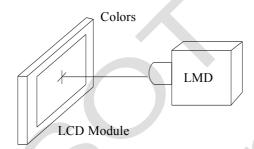


Fig. 6.5 The standard setup of color chromaticity measurement

(6) Definition of viewing angle coordinate system (θ_H , θ_V):

The contrast ratio is measured at the center point of the LCD module. The viewing angles are defined at the angle that the contrast ratio is larger than 10 at four directions relative to the perpendicular direction of the LCD module (two vertical angles: up θ_{V+} and down θ_{V-} ; and two horizontal angles: right θ_{H+} and left θ_{H-}) as illustrated in Fig. 6.6. The contrast ratio is measured by ELDIM EZ Contrast.


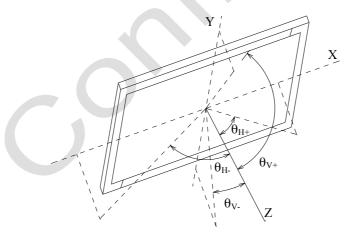


Fig. 6.6 Viewing angle coordination system

7. Mechanical Characteristics

7.1 Mechanical Specification

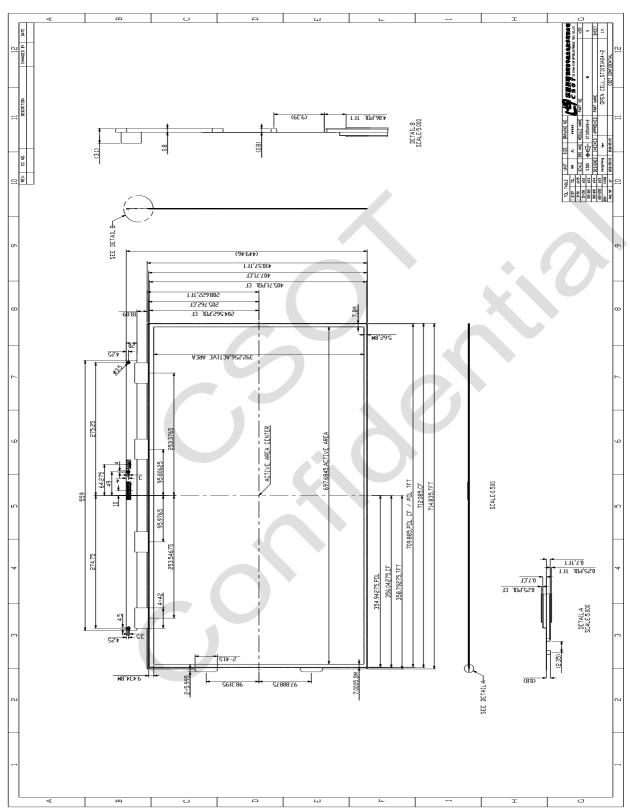


7.2 Packing

7.2.1 Packing Specifications

Itama	Specification				
Item	Quantity	Dimension (mm)	Weight (kg)		
Packing Box	24 pcs / box	0.45 0.0 (1) = 62.4 0.0 (W) = 260 0.0 (H)	Net Weight: 28.2 (Max.)		
		945.00 (L) x 634.00 (W) x 269.00 (H)	Gross Weight: 41.2 (Max.)		
Pallet	1	1290.00 (L) x 970.00 (W) x 145.00 (H)	Net Weight:23.0(Max)		
Stack Layer	5				
Boxes per Pallet	10 boxes / pallet				
Pallet after Packing	240 pcs / pallet	240 pcs / pallet	240 pcs / pallet		

7.2.2 Packing Method

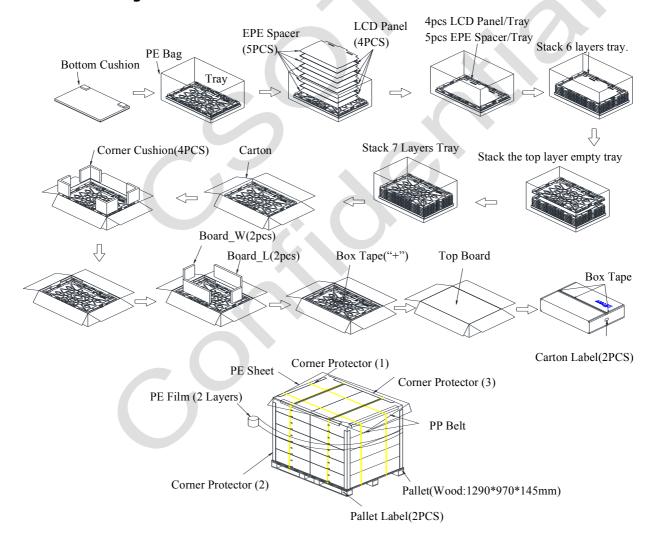


8. Definition of Labels

8.1 Open Cell Label



Model Name: ST3151A04-2

Ver.X.X: Version, for example: 0.1, 0.2, ..., 1.1, 1.2, ..., 2.1, 2.2, ...



Year: 2010 = 10, $2011 = 11 \dots 2020 = 20$, $2021 = 21 \dots$


Week: 01, 02, 03 ...



8.2 Carton Label



For RoHS compliant products, CSOT will add RoHS for identification.

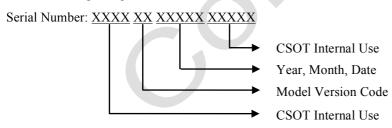

Manufactured Date:

Year: 2010 = 10, 2011 = 11...2020 = 20, 2021 = 21...


Month: $1\sim9$, $A\sim C$, for Jan. \sim Dec.

Date: 01~31, for 1st to 31st

Model Version Code: Version of product, for example: 01, 02, 11, 12...

8.3 Pallet Label





9. Precautions

9.1 Assembly and Handling Precautions

- (1) Do not apply rough force such as bending or twisting to the open cell during assembly.
- (2) It is recommended to assemble or install a open cell into the user's system in clean working areas. The dust and oil may cause electrical short or damage the polarizer.
- (3) Do not apply pressure or impulse to the open cell to prevent the damage to the open cell.
- (4) Always follow the correct power-on sequence. This can prevent the damage and latch-up to the LSI chips.
- (5) Do not plug in or pull out the interface connector while the open cell is in operation.
- (6) Use soft dry cloth without chemicals for cleaning because the surface of polarizer is very soft and easily be scratched.
- (7) Moisture can easily penetrate into the open cell and may cause the damage during operation.
- (8) High temperature or humidity may deteriorate the performance of the open cell. Please store open cell in the specified storage conditions.
- (9) When ambient temperature is lower than 10 °C, the display quality might be deteriorated. For example, the response time will become slow.

9.2 Safety Precautions

- (1) If the liquid crystal material leaks from the panel, it should be kept away from the eyes or mouth. In case of contact with hands, skin or clothes, it has to be washed away thoroughly with soap.
- (2) After the open cell end of life, it is not harmful in case of normal operation and storage.