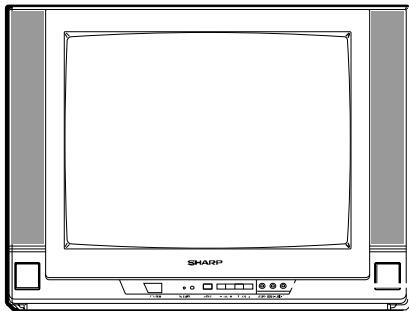


**SHARP****SERVICE MANUAL****COLOR TELEVISION****Chassis No. GA-1****20PL84  
MODELS**

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

**CONTENTS**

	Page
• ELECTRICAL SPECIFICATIONS .....	1
• IMPORTANT SERVICE SAFETY PRECAUTION .....	2
• LOCATION OF USER'S CONTROL .....	4
• INSTALLATION AND SERVICE INSTRUCTIONS .....	5
• CHASSIS LAYOUT .....	13
• BLOCK DIAGRAM .....	14
• DESCRIPTION OF SCHEMATIC DIAGRAMS & WAVEFORMS.....	16
• SCHEMATIC DIAGRAMS .....	17
• PRINTED WIRING BOARD ASSEMBLIES .....	21
• REPLACEMENT PARTS LIST .....	25
• PACKING OF THE SET .....	31

**ELECTRICAL SPECIFICATIONS**

POWER INPUT .....	110-220 V AC 50/60 Hz
POWER RATING .....	72 W
PICTURE SIZE .....	1,194 cm <sup>2</sup> (185sq inch)
CONVERGENCE .....	Magnetic
SWEET DEFLECTION .....	Magnetic
FOCUS .....	QPF Electrostatic
INTERMEDIATE FREQUENCIES	
Picture IF Carrier Frequency .....	45.75 MHz
Sound IF Carrier Frequency .....	41.25 MHz
Color Sub-Carrier Frequency .....	42.17 MHz (Nominal)
AUDIO POWER	
OUTPUT RATING .....	3.0 + 3.0 W (at 10% distortion)

SPEAKER	
SIZE .....	9 x 5 cm (Round)
VOICE COIL IMPEDANCE .....	32 ohm at 400 Hz
ANTENNA INPUT IMPEDANCE	
VHF/UHF .....	75 ohm Unbalanced
TUNING RANGES	
VHF-Channels .....	2 thru 13
UHF-Channels .....	14 thru 69
CATV Channels .....	1 thru 125

***Specifications are subject to change without prior notice.***

## IMPORTANT SERVICE SAFETY PRECAUTION

- Service work should be performed only by qualified service technicians who are thoroughly familiar with all safety checks and the servicing guidelines which follow:

### **WARNING**

1. For continued safety, no modification of any circuit should be attempted.
2. Disconnect AC power before servicing.
3. Semiconductor heat sinks are potential shock hazards when the chassis is operating.
4. The chassis in this receiver has two ground systems which are separated by insulating material. The non-isolated (hot) ground system is for the B+ voltage regulator circuit and the horizontal output circuit. The isolated ground system is for the low B+ DC voltages and the secondary circuit of the high voltage transformer.

To prevent electrical shock use an isolation transformer between the line cord and power receptacle, when servicing this chassis.

### **SERVICING OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE**

**When servicing the high voltage system, remove the static charge by connecting a 10k ohm resistor in series with an insulated wire (such as a test probe) between the picture tube ground and the anode lead. (AC line cord should be disconnected from AC outlet.)**

1. Picture tube in this receiver employs integral implosion protection.
2. Replace with tube of the same type number for continued safety.
3. Do not lift picture tube by the neck.
4. Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage anode completely.

### **X-RADIATION AND HIGH VOLTAGE LIMITS**

1. Be sure all service personnel are aware of the procedures and instructions covering X-radiation. The only potential source of X-ray in current solid state TV receivers is the picture tube. However, the picture tube does not emit measurable X-Ray radiation, if the high voltage is as specified in the "High Voltage Check" instructions. It is only when high voltage is excessive that X-radiation is capable of penetrating the shell of the picture tube including the lead in the glass material. The important precaution is to keep the high voltage below the maximum level specified.
2. It is essential that servicemen have available at all times an accurate high voltage meter. The calibration of this meter should be checked periodically.
3. High voltage should always be kept at the rated value –no higher. Operation at higher voltages may cause a failure of the picture tube or high voltage circuitry and;also, under certain conditions, may produce radiation in exceeding of desirable levels.
4. When the high voltage regulator is operating properly there is no possibility of an X-radiation problem. Every time a color chassis is serviced, the brightness should be tested while monitoring the high voltage with a meter to be certain that the high voltage does not exceed the specified value and that it is regulating correctly.
5. Do not use a picture tube other than that specified or make unrecommended circuit modifications to the high voltage circuitry.
6. When trouble shooting and taking test measurements on a receiver with excessive high voltage, avoid being unnecessarily close to the receiver. Do not operate the receiver longer than is necessary to locate the cause of excessive voltage.

# IMPORTANT SERVICE SAFETY PRECAUTION

## (Continued)

### **BEFORE RETURNING THE RECEIVER**

#### **(Fire & Shock Hazard)**


**Before returning the receiver to the user, perform the following safety checks.**

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.
  2. Inspect all protective devices such as non-metallic control knobs, insulating materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators and etc.
  3. To be sure that no shock hazard exists, check for leakage current in the following manner.
- Plug the AC cord directly into a 110~220 volt AC outlet, (Do not use an isolation transformer for this test).
  - Using two clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a  $0.15\mu\text{F}$  capacitor in series with all exposed metal cabinet parts and a known earth ground, such as electrical conduit or electrical ground connected to earth ground.
  - Use an AC voltmeter having with 5000 ohm per volt, or higher, sensitivity to measure the AC voltage drop across the resistor.

- Connect the resistor connection to all exposed metal parts having a return to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon and etc.) and measure the AC voltage drop across the resistor.

All checks must be repeated with the AC line cord plug connection reversed. (If necessary, a non-polarized adapter plug must be used only for the purpose of completing these check.)

Any current measured must not exceed 0.5 milliamp. Any measurements not within the limits outlined above indicate of a potential shock hazard and corrective action must be taken before returning the instrument to the customer.

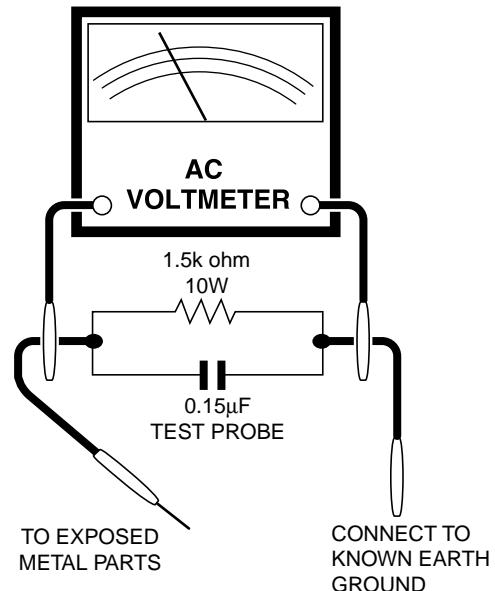


### **SAFETY NOTICE**

Many electrical and mechanical parts in television receivers have special safety-related characteristics. These characteristics are often not evident from visual inspection, nor can protection afforded by them be necessarily increased by using replacement components rated for higher voltage, wattage, etc.


Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by "" and shaded areas in the Replacement Parts Lists and Schematic Diagrams.

For continued protection, replacement parts must be identical to those used in the original circuit. The use of substitute replacement parts which do not have the same safety characteristics as the factory recommended replacement parts shown in this service manual, may create shock, fire, X-radiation or other hazards.

# LOCATION OF USER'S CONTROL

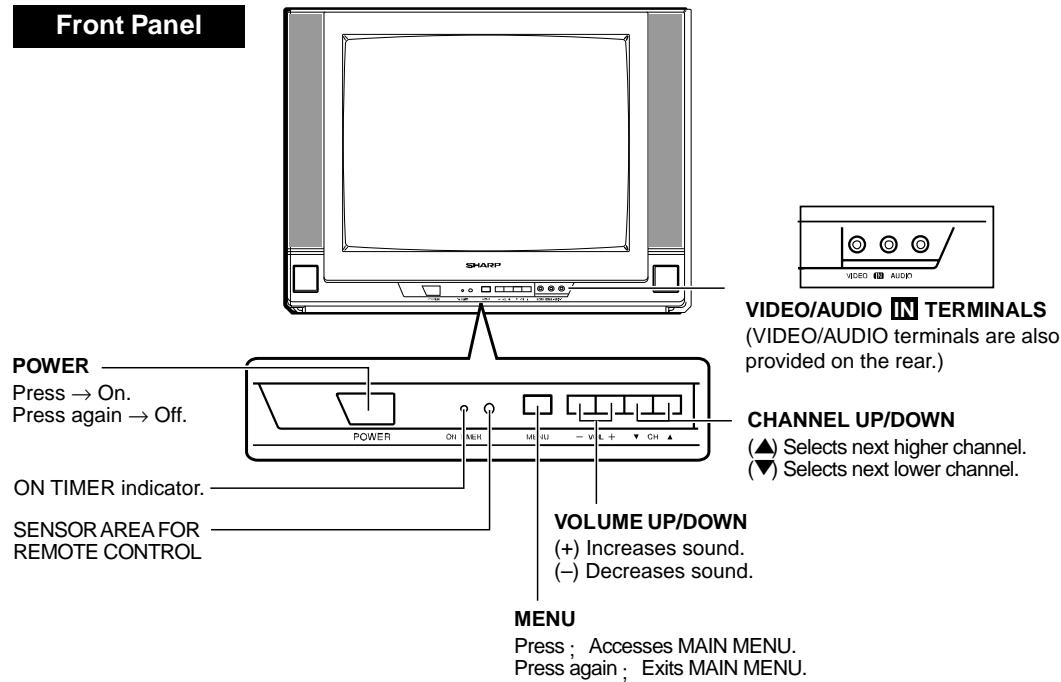

## Basic Remote Control Functions

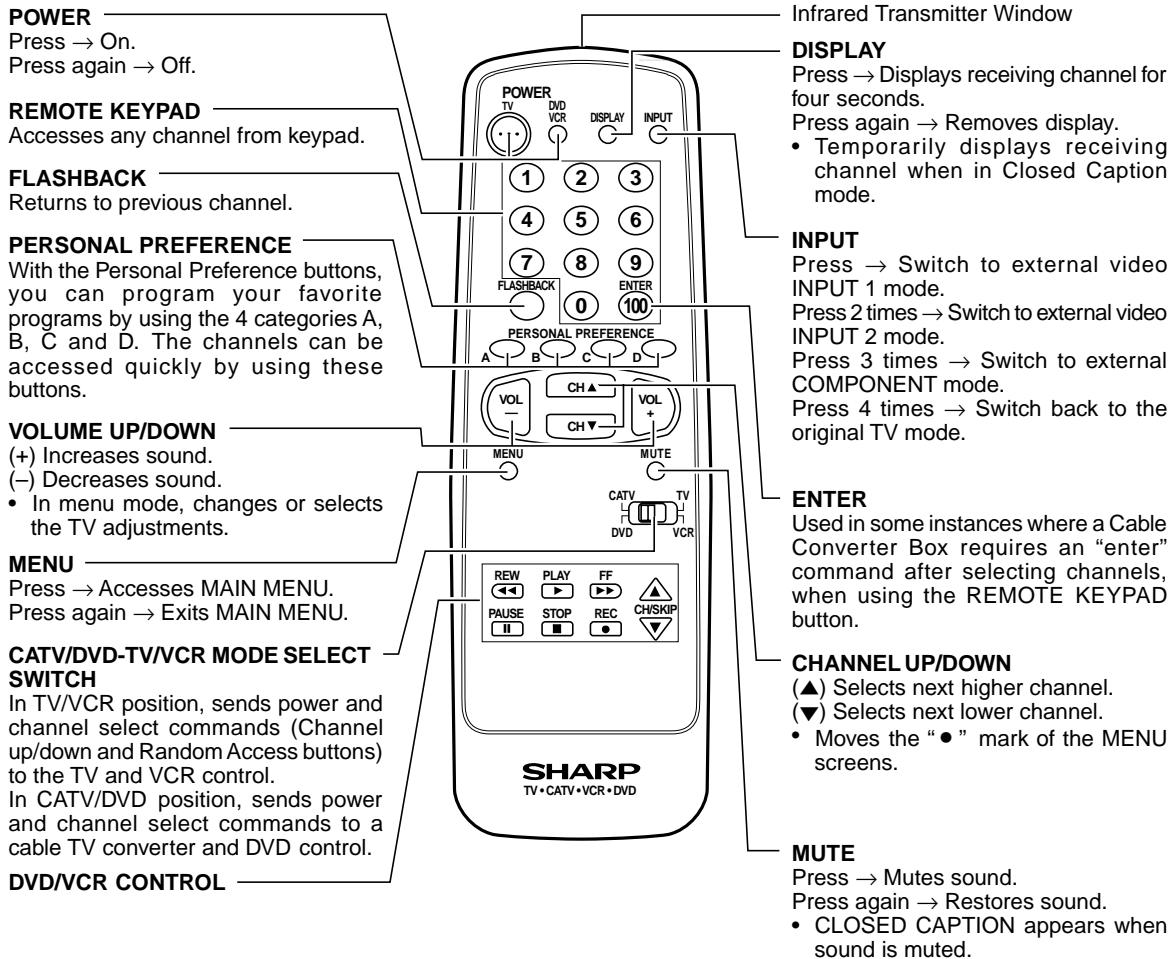

# INSTALLATION AND SERVICE INSTRUCTIONS

- Note:**
- (1) When performing any adjustments to resistor controls and transformers use non-metallic screwdrivers or TV alignment tools.
  - (2) Before performing adjustments, the TV set must be on at least 15 minutes.

## CIRCUIT PROTECTION

The receiver is protected by a 3.15A fuse (F701), mounted on PWB-A, wired into one side of the AC line input.

## +B DC REGULATOR CONFIRMATION

The + B DC output voltage adjustment is not included in this circuit. However, should confirmation be required proceed as follows.

1. Actuate receiver with 220V AC input voltage.
2. Receive a local channel.
3. Connect positive lead of digital voltmeter to C754 positive side on PWB-A ; negative lead to chassis ground.
4. Confirm this voltage reading is as below.

**CAUTION:** The reading should be within  $+130.0 \pm 2.0$  V DC to ensure normal function and circuitry reliability.

## X-RADIATION PROTECTOR CIRCUIT TEST

After service has been performed on the horizontal deflection system, high voltage system, B+ system, test the X-Radiation protection circuit to ascertain proper operation as follows:

1. Apply 220V AC using a variac transformer for accurate input voltage.
2. Allow for warm up and adjust all customer controls for normal picture and sound.
3. Receive a good local channel.
4. Connect a digital voltmeter to TP653 and make sure that the voltmeter reads  $21.4 \pm 1.5$  V.
5. Apply external 27.9V DC at TP653 by using an external DC supply, TV must be shut off.
6. To reset the protector, unplug the AC cord and make a short circuit between TP651 and TP652. Now make sure that normal picture appears on the screen.
7. If the operation of the horizontal oscillator does not stop in step 5, the circuit must be repaired before the set is returned to the customer.

## HIGH VOLTAGE CHECK

High voltage is not adjustable but must be checked to verify that the receiver is operating within safe and efficient design limitations as specified checks should be as follows:

1. Connect an accurate high voltage meter between ground and anode of picture tube.
2. Operate receiver for at least 15 minutes at 110~220V AC line voltage, with a strong air signal or a properly tuned in test signal.
3. Receive a good local channel.
4. The voltage should be approximately, 25.5kV (at picture MAX Bright center condition).  
If a correct reading cannot be obtained, check circuitry for malfunctioning components.

For adjustments of this model, the bus data is converted to various analog signals by the D/A converter circuit.

**Note:** There are still a few analog adjustments in this series such as focus and master screen voltage. Follow the steps below whenever the service adjustment is required. See "Table-B" to determine, if service adjustments are required.

## 1. Service mode

Before putting unit into the service mode, check that customer adjustments are in the normal mode. Use the reset function in the video adjustment menu to ensure customer controls are in their proper (reset) position.

## 2. Service item selection

Once in the service mode, press the Ch-up or Ch-down button on the remote controller or at the set. The service adjustment item will vary in increments of one. Select the item you wish to adjust.

## 3. Data number selection

Press the Vol-up or down button to adjust the data number.

## To enter the service mode and exit service mode.

Short JA137&JA138 for 1 Second and release to switch to the service mode position, and the microprocessor is in input mode.(Adjustment through the I<sup>2</sup>C bus control.) To exit the service mode, turn the television off by pressing the power button.

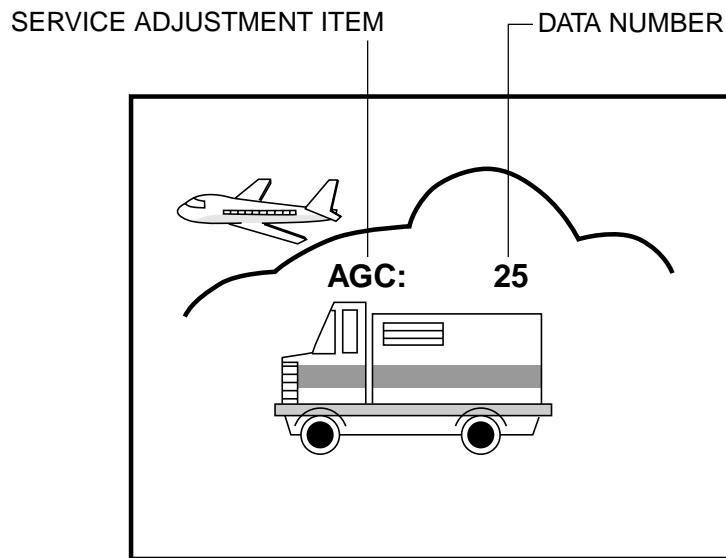


Figure A.

## ■ SERVICE MODE

(1) In the Service Mode, Key is used to select the mode in the following order.

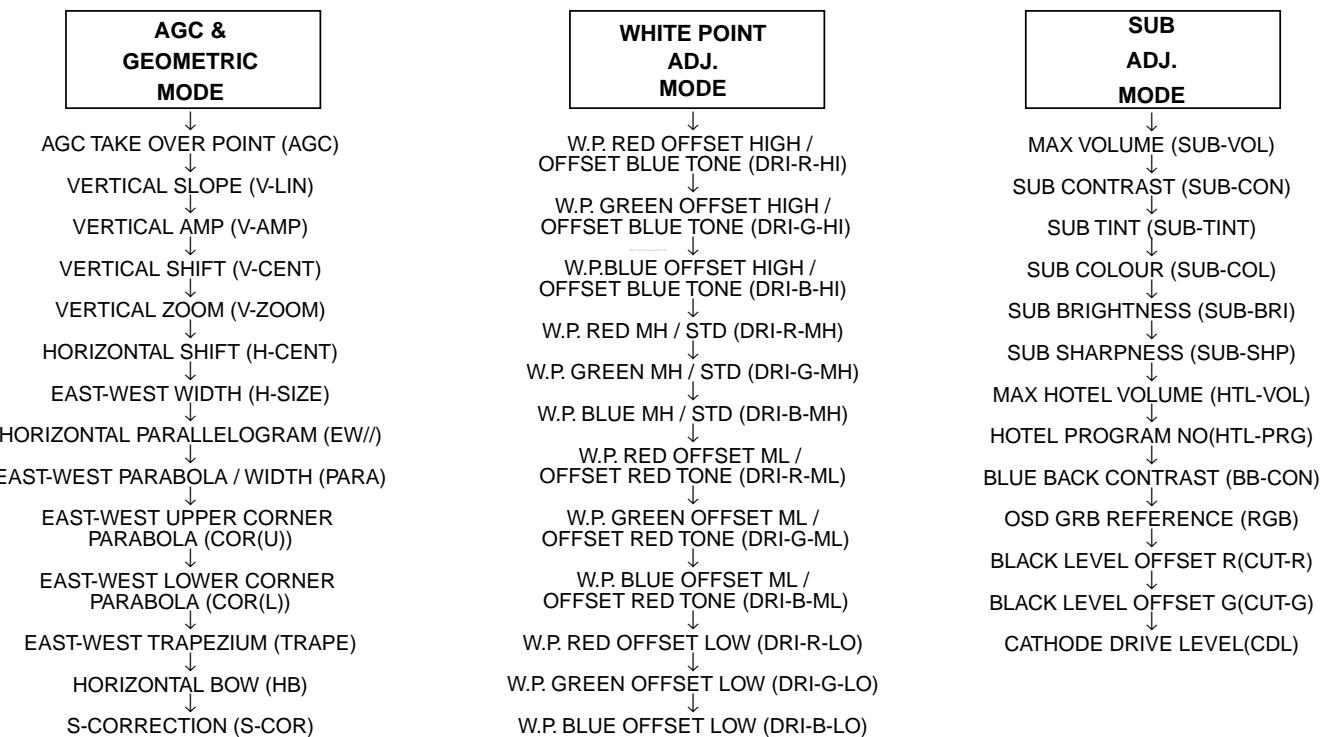
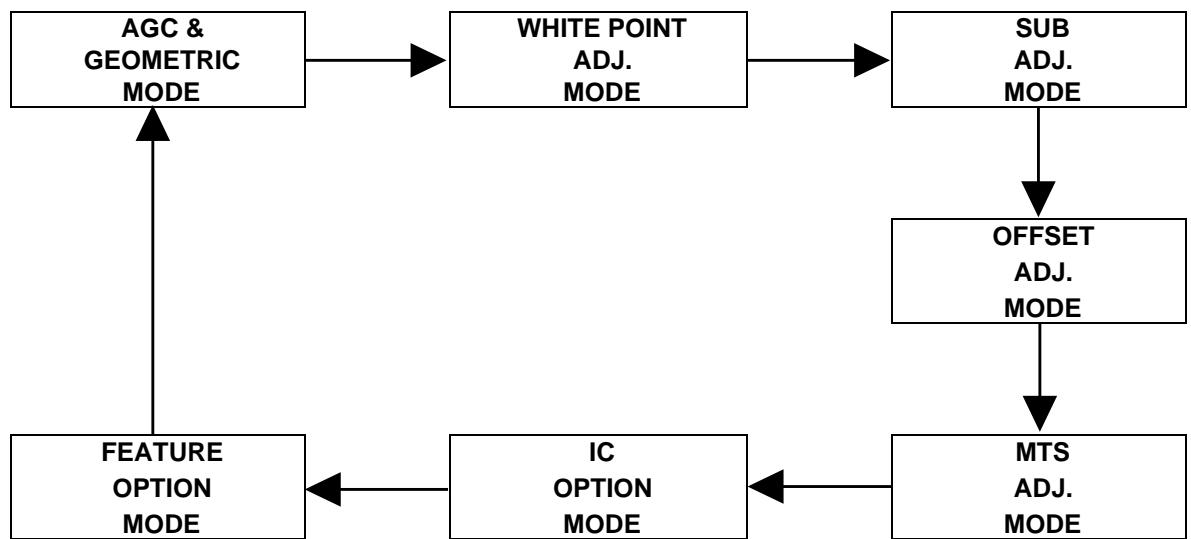




Figure B: ADJUSTMENT CATEGORIES

- ① Press the CH DOWN/UP key on the remote controller to get ready to select the mode one by one.
- ② Press the CH DOWN/UP key on the remote controller to select the modes reversibly one by one.
- ③ Using the VOLUME UP/DOWN key on the remote controller, the data can be modified.  
**(OSD disturbance can be erased by R/C display key)**

## SERVICE MODE

SERVICE POSITION	ADJUST ITEM	DATA			REMARK
		RANGE	INITIAL VALUE	FIX/ADJ	
AGC	AGC TAKE OVER POINT	0~63	14	ADJ	
V-LIN	VERTICAL SLOPE	0~63	32	ADJ	
V-AMP	VERTICAL AMP	0~63	32	ADJ	
V-CENT	VERTICAL SHIFT	0~63	32	ADJ	
V-ZOOM	VERTICAL ZOOM	0~63	32	FIX	
H-CENT	HORIZONTAL SHIFT	0~63	32	ADJ	
H-SIZE	EAST-WEST WIDTH	0~63	32	FIX	
EW//	HORIZONTAL PARALLELOGRAM	0~63	32	FIX	
PARA	EAST-WEST PARABOLA / WIDTH	0~63	32	FIX	
COR(U)	EAST-WEST UPPER CORNER PARABOLA	0~63	32	FIX	
COR(L)	EAST-WEST LOWER CORNER PARABOLA	0~63	32	FIX	
TRAPE	EAST-WEST TRAPEZIUM	0~63	32	FIX	
HB	HORIZONTAL BOW	0~63	32	FIX	
S-COR	S-CORRECTION	0~63	0	FIX	must be "17"
DRI-R-HI	"W,P RED OFFSET HIGH / OFFSET BLUE TONE"	0~63	32	FIX	must be "32"
DRI-G-HI	W.P. GREEN OFFSET HIGH / OFFSET BLUE TONE	0~63	32	FIX	must be "33"
DRI-B-HI	W.P.BLUE OFFSET HIGH / OFFSET BLUE TONE	0~63	32	FIX	must be "37"
DRI-R-MH	W.P. RED MH / STD	0~63	25	FIX	must be "32"
DRI-G-MH	W.P. GREEN MH / STD	0~63	32	ADJ	
DRI-B-MH	W.P. BLUE MH / STD	0~63	32	ADJ	
DRI-R-ML	W.P. RED OFFSET ML / OFFSET RED TONE	0~63	32	FIX	must be "32"
DRI-G-ML	W.P. GREEN OFFSET ML / OFFSET RED TONE	0~63	32	FIX	must be "32"
DRI-B-ML	W.P. BLUE OFFSET ML / OFFSET RED TONE	0~63	32	FIX	must be "25"
DRI-R-LO	W.P. RED OFFSET LOW	0~63	32	FIX	must be "32"
DRI-G-LO	W.P. GREEN OFFSET LOW	0~63	32	FIX	must be "22"
DRI-B-LO	W.P. BLUE OFFSET LOW	0~63	32	FIX	must be "19"
SUB-VOL	MAX VOLUME	0~63	63	FIX	must be "63"
SUB-CON	SUB CONTRAST	0~63	63	FIX	must be "54"
SUB-COL	SUB COLOUR	0~63	32	ADJ	
SUB-BRI	SUB BRIGHTNESS	0~63	32	ADJ	
SUB-TINT	SUB TINT	0~63	32	ADJ	
SUB-SHP	SUB SHARPNESS	0~63	32	FIX	must be "27"
HTL-VOL	MAX HOTEL VOLUME	0~63	32	FIX	
HTL-PRG	HOTEL PROGRAM NO	0~125 or >125 for none	255	FIX	
BB-CON	BLUE BACK CONTRAST	0~15	10	FIX	must be "5"
RGB	OSD GRB REFERENCE	0~15	15	FIX	must be "5"
CUT-R	BLACK LEVEL OFFSET R	0~63	32	ADJ	
CUT-G	BLACK LEVEL OFFSET G	0~63	32	ADJ	
CDL	CATHODE DRIVE LEVEL	0~15	0	FIX	must be "6"
DL-TV	Y-D TIME (TV) [ YD ]	0~15	12	FIX	must be "2"
DL-AV	Y-D TIME (AV) [ YD ]	0~15	12	FIX	must be "8"
INIT	INITIAL/DEFAULT LANGUAGE	0(English), 1(Spanish), 2(French)	0	FIX	must be "1"
FAO-VOL	FAO-MAX VOLUME	0~63	63	FIX	must be "63"
ESV_OFFSET	ENERGY SAVE OFFSET	0~63	10	FIX	must be "20"
CCPOS	CLOSE CAPTION POSITION	0~255	32	ADJ	
ATT	ATTENUATE INPUT SIGNAL LEVEL	0~15	10	FIX*	
VCO	VCO FREE RUNNING FREQUENCY ADJ.	0~63	32	FIX*	
FILTER	"STEREO, SAP, DBX FILTER ADJ."	0~63	28	FIX*	
WIDEBAND	STEREO SEPARATION ADJUSTMENT (300HZ)	0~63	32	FIX*	
SPECTRAL	STEREO SEPARATION ADJUSTMENT (3KHZ)	0~63	27	FIX*	
BASS	BASS LEVEL	0~15	8	FIX	
TREBLE	TREBLE LEVEL	0~15	8	FIX	
VSD	VERTICAL SCAN DISABLE	0 or 1 when item selected	0	FIX	
BKS	BLACK STRETCH	0(disable) or 1(enable)	1	FIX	
AVL	AUTOMATIC VOLUME LEVELLING	0(disable) or 1(enable)	1	FIX	
FFI	FAST FILTER IF-PLL	0(disable) or 1(enable)	0	FIX	
EVG	ENABLE VERTICAL GUARD	0(disable) or 1(enable)	1	FIX	
EHT	EHT TRACKING MODE	0(disable) or 1(enable)	1	FIX	
OSO	OVERSCAN SWITCH OFF	0(disable) or 1(enable)	0	FIX	
ACL	AUTO COLOUR LIMIT	0(disable) or 1(enable)	0	FIX	
FCO	FORCED COLOUR-ON	0(disable) or 1(enable)	0	FIX	
VMI	VIDEO MUTE AT IDENT LOSS	0(disable) or 1(enable)	1	FIX	
VMC	VIDEO MUTE AT PROGRAM/SOURCE CHANGE	0(disable) or 1(enable)	1	FIX	
HTL	HOTEL MODE	0(disable) or 1(enable)	0	FIX	
BTSC	GAIN FM DEMODULATOR	0(disable) or 1(enable)	0	FIX	
CP	CHARGE PUMP	0(fast tuning) or 1(moderate speed tuning)	0	FIX	

Table - A

SERVICE POSITION	ADJUST ITEM	DATA			REMARK
		RANGE	INITIAL VALUE	FIX/ADJ	
FMWS	FM WINDOW SELECTION	0(disable) or1(enable)	0	FIX	
SM0	SOUND MUTE BIT 0 (SM0)	0(disable) or1(enable)	1	FIX	
SM1	SOUND MUTE BIT 1	0(disable) or1(enable)	0	FIX	
AGC0	IF AGC SPEED BIT 0	0(disable) or1(enable)	1	FIX	
AGC1	IF AGC SPEED BIT 1	0(disable) or1(enable)	0	FIX	
FOA-FE	PHI 1 TIME CONSTANT FOR FE	0(disable) or1(enable)	0	FIX	
FOB-FE	PHI 1 TIME CONSTANT FOR FE	0(disable) or1(enable)	0	FIX	
FOA-AV	PHI 1 TIME CONSTANT FOR AV	0(disable) or1(enable)	1	FIX	
FOB-AV	PHI 1 TIME CONSTANT FOR AV	0(disable) or1(enable)	1	FIX	
FSL	FORCED SLICING LEVEL FOR VERTICAL SYNC.	0(disable) or1(enable)	0	FIX	
HP2	SYNCHRONISATION OF OSD/TEXT DISPLAY	0(disable) or1(enable)	0	FIX	
RGBL	RGB BLANK	0(disable) or1(enable)	0	FIX	
V-CHIP	V-CHIP	0(disable) or1(enable)	0	FIX	
MTS	MTS DECODING ENABLED	0(disable) or1(enable)	0	FIX*	
DEMO	DEMO MODE	0(disable) or1(enable)	1	FIX	
CLOCK	REAL TIME CLOCK / ON TIMER	0(disable) or1(enable)	1	FIX	must be "1"
E-SAVE	ENERGY SAVE	0(disable) or1(enable)	1	FIX	
P_PREF	PERSONAL PREFERENCE PROGRAM	0(disable) or1(enable)	0	FIX	
UNIV+	UNIVERSAL PLUS	0(disable) or1(enable)	0	FIX	
SPEAKER	SPEAKER ON/OFF	0(disable) or1(enable)	0	FIX	
FAO	FIXED AUDIO OUT	0(disable) or1(enable)	0	FIX	
VIEW-TM	VIEW TIMER	0(disable) or1(enable)	1	FIX	must be "1"
FRENCH	FRENCH LANGUAGE	0(disable) or1(enable)	0	FIX	
EZ-SETUP	EZ SETUP / AUTOPRESET	0(AUTOPRESET) or 1(EZ SETUP)	1	FIX	
W-TEMP	WHITE TEMP OR FAVORITE COLOR	0(FC) or 1(WT)	0	FIX	
AV	AV ENABLED OR DISABLED	0(without ext. source) or 1(with external source)	0	FIX	
AV2	AV2 ENABLED OR DISABLED	0(1 input) or 1(2 input)	0	FIX*	
DSK	DYNAMIC SKIN CONTROL	0(disable) or1(enable)	0	FIX	
RPO0	RATIO PRE- AND OVERSHOOT BIT 0	0(disable) or1(enable)	0	FIX	
RPO1	RATIO PRE- AND OVERSHOOT BIT 1	0(disable) or1(enable)	0	FIX	
AGN	GAIN FM DEMODULATOR	0(normal) or1(+6dB)	0	FIX	
AUTO-OFF	AUTO SWITCH OFF ENABLED	0(disable) or1(enable)	1	FIX	
PON-CH		0(disable) or1(enable)	0	FIX	

Table - A

Holding down to short JA137 & JA138 and turn on the main power SW will automatically write the initial values into IC1003.

This is only can done when a new EEPROM is used. (Judge with the first 4 bytes.)

PART REPLACED	ADJUSTMENT		NOTES
	NECESSARY	UNNECESSARY	
IC801		X	Data is stored in IC1003.
IC1003	X		Holding down to short JA137 & JA138 and turn on the main power SW will automatically write the initial values into IC1003. This is only can done when a new EEPROM is used. (Judge with the first 4 bytes.)
CRT	X		Adjust items related to picture tube only.



Table - B

## ■ SERVICE ADJUSTMENT

### RF AGC Adjustment

1. Receive a good local channel.
2. Enter the service mode signal category and select the service adjustment "AGC".
3. Set the data value to point where no noise or beat appears.
4. Select another channel to confirm that no noise or beat appears.



## CHROMA ADJUSTMENT

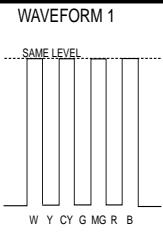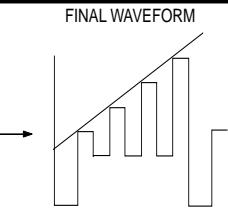No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	<b>SUB-TINT (I<sup>2</sup>C BUS CONTROL)</b>	<ol style="list-style-type: none"> <li>1. Receive the "Colour Bar" signal through AV in.</li> <li>2. Connect the oscilloscope to TP853 (Pin (5) of P882) BLUE-OUT.           <ul style="list-style-type: none"> <li>• Range : 100mV/div. (AC)(Use Probe 10:1)</li> <li>• Sweep time : 10 μsec/div.</li> </ul> </li> <li>3. Call the "SUB-TINT" mode in service mode. Adjust the "SUB-TINT" bus data to obtain the waveform shown as Fig 1.</li> <li>4. "SUB-TINT" bus data decrease 4 steps to get final waveform. (Fig 2.)</li> <li>5. Clear the SERVICE mode.</li> </ol>	 <p>Fig 1</p>  <p>Fig 2</p>


## HORIZONTAL AND VERTICAL DEFLECTION LOOP ADJUSTMENT

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	<b>V-SLOPE(I<sup>2</sup>C BUS CONTROL)</b>	<ol style="list-style-type: none"> <li>1. Receive Monoscope Pattern Signal.</li> <li>2. Call the "V-LIN" mode.</li> <li>3. Increase or decrease "V-LIN" by Volume key till the horizontal line in the center of monoscope is just at the position where the blanking starts.</li> </ol>	
2	<b>V-CENTER (I<sup>2</sup>C BUS CONTROL)</b>	<ol style="list-style-type: none"> <li>1. Call the "V-CENT" mode.</li> <li>2. Increase or decrease "V-CENT" by Volume key till the picture is centered.</li> </ol>	
3	<b>V - AMP (I<sup>2</sup>C BUS CONTROL)</b>	<ol style="list-style-type: none"> <li>1. Call the "V-AMP" mode.</li> <li>2. Increase or decrease "V - AMP" by Volume key to set overscan of 10.0% typical. Adjustment Spec 10.0% range ±1%.</li> </ol>	
4	<b>S-CORRECTION (I<sup>2</sup>C BUS CONTROL)</b>	<b>FIXED DATA, NO NEED TO ADJUST.</b>	
5	<b>H - CENTER</b>	<ol style="list-style-type: none"> <li>1. Call the "H-CENT" mode.</li> <li>2. Increase or decrease "H-CENT" by Volume key to center the picture horizontal.</li> </ol>	
6	<b>Focus adjustment</b>	<ol style="list-style-type: none"> <li>1. Receive the "Monoscope Pattern" signal.</li> <li>2. Press R/C to set Picture NORMAL condition.</li> <li>3. Adjust the focus control to get the best focus.</li> </ol>	


# CRT CUT-OFF, BACKGROUND AND SUB-CONTRAST ADJUSTMENT

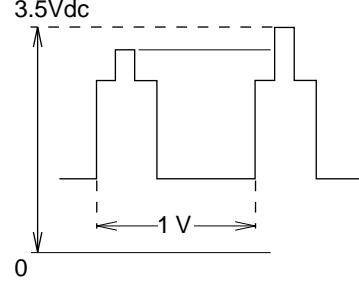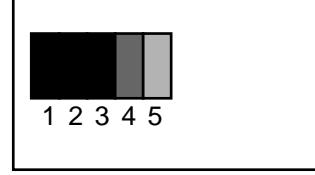No.	Adjusting point	Adjusting procedure/conditions	Waveform and others												
1	<b>CRT CUTOFF ADJUSTMENT (I<sup>2</sup>C BUS CONTROL)</b>	<p>1. Switch TV to VIDEO mode, BLUE BACK OFF, with NO VIDEO signal.      2. Press R/C to set Picture Normal condition.      3. Connect the oscilloscope to Red OUT from IC801.(TP47R)</p> <p style="text-align: center;">Range : 1 V/Div (DC) Sweep : 5 msec/Div</p> <p>4. Adjust SCREEN VR , so that the tip of signal reach 3.5 Vdc + 0.1 Vdc.</p>													
2	<b>SUB-BRIGHT-NESS ADJUSMENT (I<sup>2</sup>C BUS CONTROL)</b>	<p>1. Call " SUB-BRI" in service mode. (Receive Cross-hatch pattern with 5 black level windows)      2. Adjust the " SUB BRIGHT " bus data in order that the line 1, 2 and 3 have the same darkness wherelse line 4 is slightly brighter than line 1, 2 and 3 and finally line 5 will be the brighter than line 4.</p>	 <p>1, 2, 3 are in same black level.</p>												
3	<b>WHITE BAL- ANCE SERV- ICE MODE ADJ. (I<sup>2</sup>C BUS CONTROL)</b>	<p>1. Receive the "Monoscope Pattern" signal.      2. Press R/C to set Picture NORMAL condition.      3. Connect the DC miliammeter between the TP 602 (-) TP 603 (+).      4. Check Beam current should be around (990<math>\mu</math>A)      5. Set it to service mode and adjust the DRI-G-MH, &amp; DRI-B-MH data to have a colour temperature of 11,600°K ( white ).      6. Receive "WHITE" pattern, WITH BURST signal, and set BRIGHTNESS Y by generator, to ** 10 cd/m<sup>2</sup> (MINOLTA CA-100) by reducing LUMINATE Y signal.      7. Adjust "CUT-R" &amp; "CUT-G" to get 11,600°K. Then go back NORMAL mode (HIGH BRIGHT**) to check colour temperature. If out of range, back to (1).</p> <p><b>Note: This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 500<math>\mu</math>A.</b></p> <table border="1" data-bbox="414 1537 740 1676"> <tr><td>DRI-R-MH=32</td><td>(FIXED)</td></tr> <tr><td>DRI-G-MH=33</td><td>(FIXED)</td></tr> <tr><td>DRI-B-MH=37</td><td>(FIXED)</td></tr> <tr><td>DRI-R-MH=32</td><td>(FIXED)</td></tr> </table>	DRI-R-MH=32	(FIXED)	DRI-G-MH=33	(FIXED)	DRI-B-MH=37	(FIXED)	DRI-R-MH=32	(FIXED)	<p># 11,600° K X : 0.273 Y : 0.280</p> <p>( MINOLTA COLOUR ANALYZER CA-100)</p> <p>*NOTE: Above DATA can be UP/DOWN by volume key.</p> <table data-bbox="1024 1148 1351 1205"> <tr><td>LOW</td><td>HIGH</td></tr> <tr><td>20"</td><td>1.8cd/m<sup>2</sup> 115cd/m<sup>2</sup></td></tr> </table> <p>* 11,600° K DRI-GW="DRI-GS"DATA-5 DRI-BW="DRI-BS" DATA-5</p>	LOW	HIGH	20"	1.8cd/m <sup>2</sup> 115cd/m <sup>2</sup>
DRI-R-MH=32	(FIXED)														
DRI-G-MH=33	(FIXED)														
DRI-B-MH=37	(FIXED)														
DRI-R-MH=32	(FIXED)														
LOW	HIGH														
20"	1.8cd/m <sup>2</sup> 115cd/m <sup>2</sup>														
4	<b>Maximum beam check</b>	<p>1. Receive the "Monoscope Pattern" signal.      2. Press R/C to set Picture NORMAL condition.      3. Connect the DC miliammeter between TP603 (+) and TP602 (-).      (Full Scale: 3 mA Range)      4. Beam current must be within 990 ± 50 <math>\mu</math>A.</p>													


# CHASSIS LAYOUT

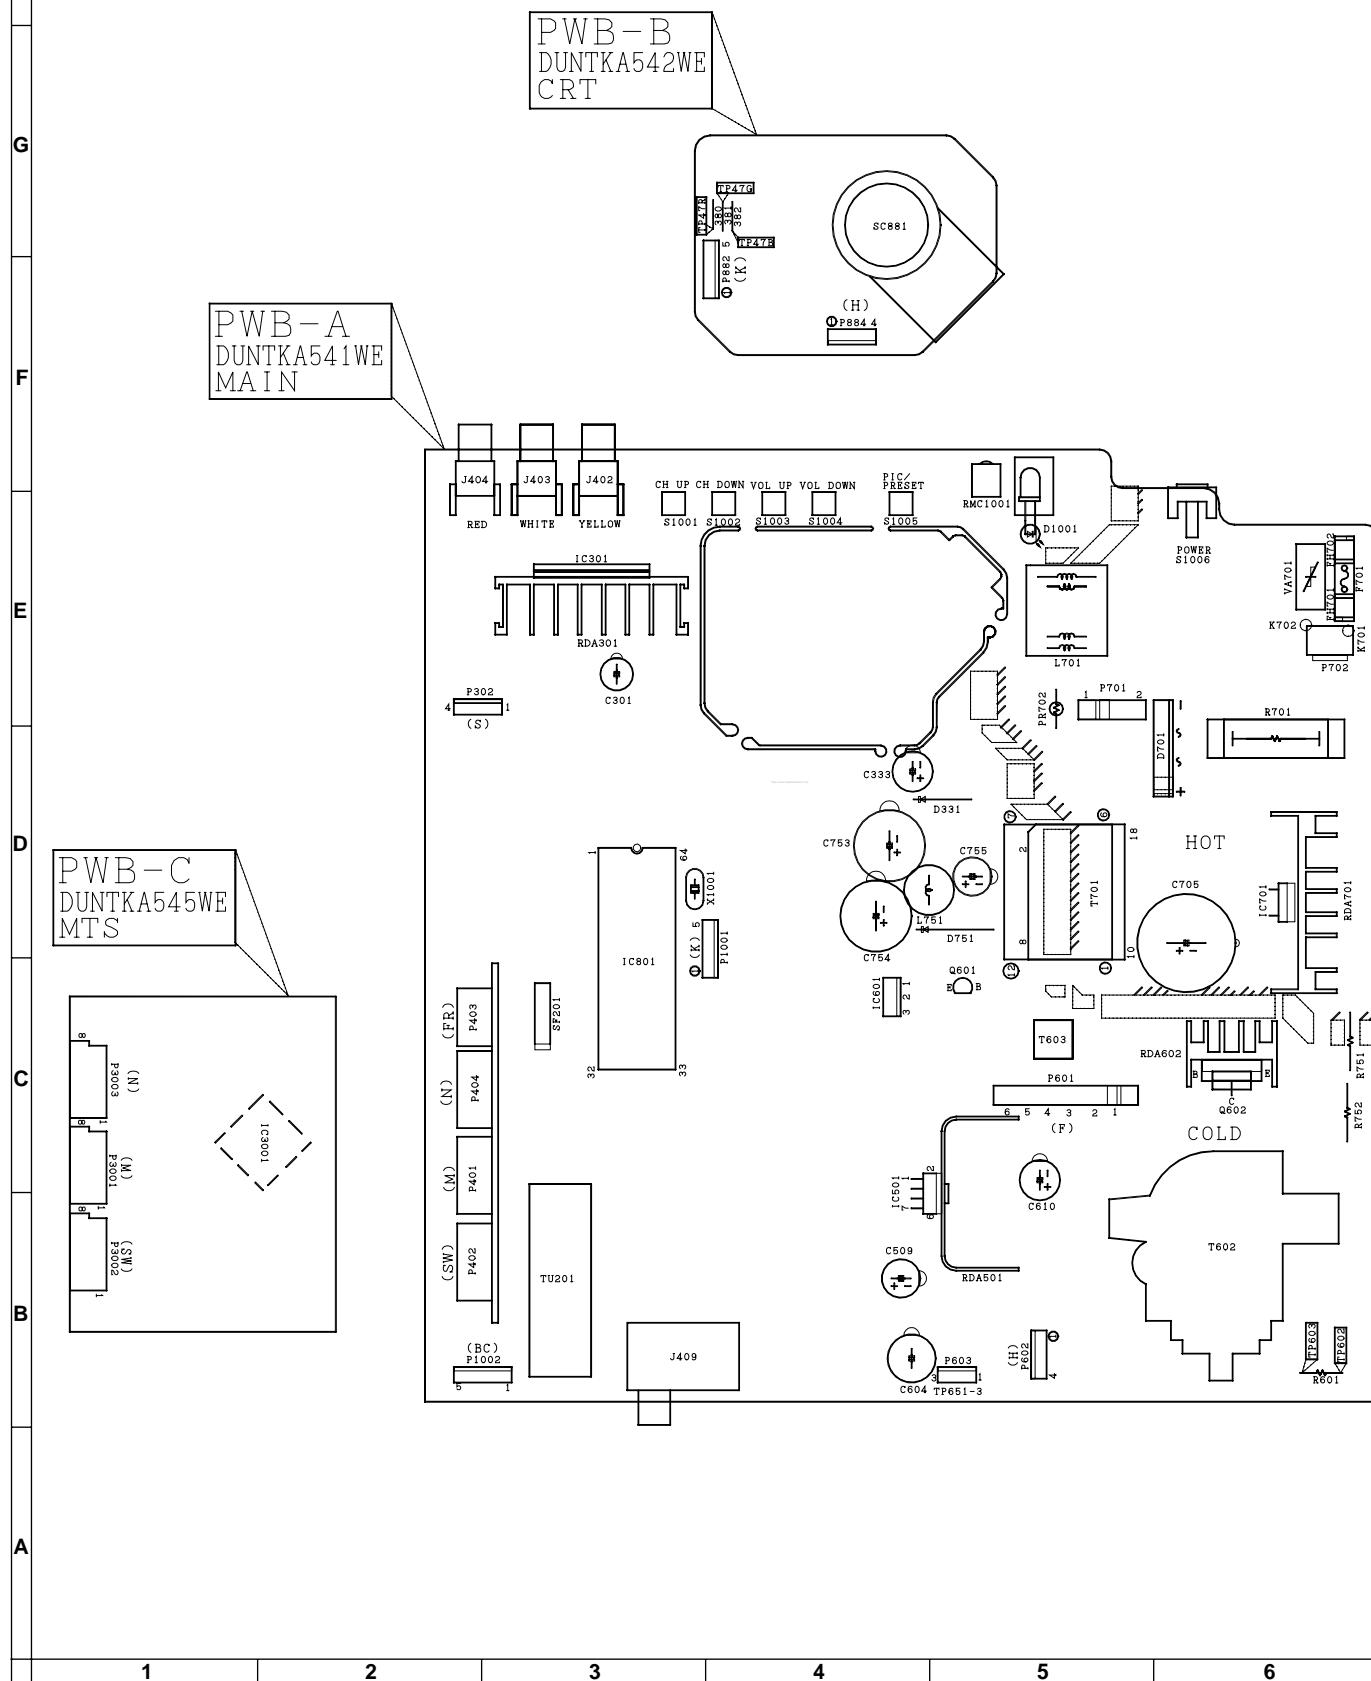

# BLOCK DIAGRAM-1

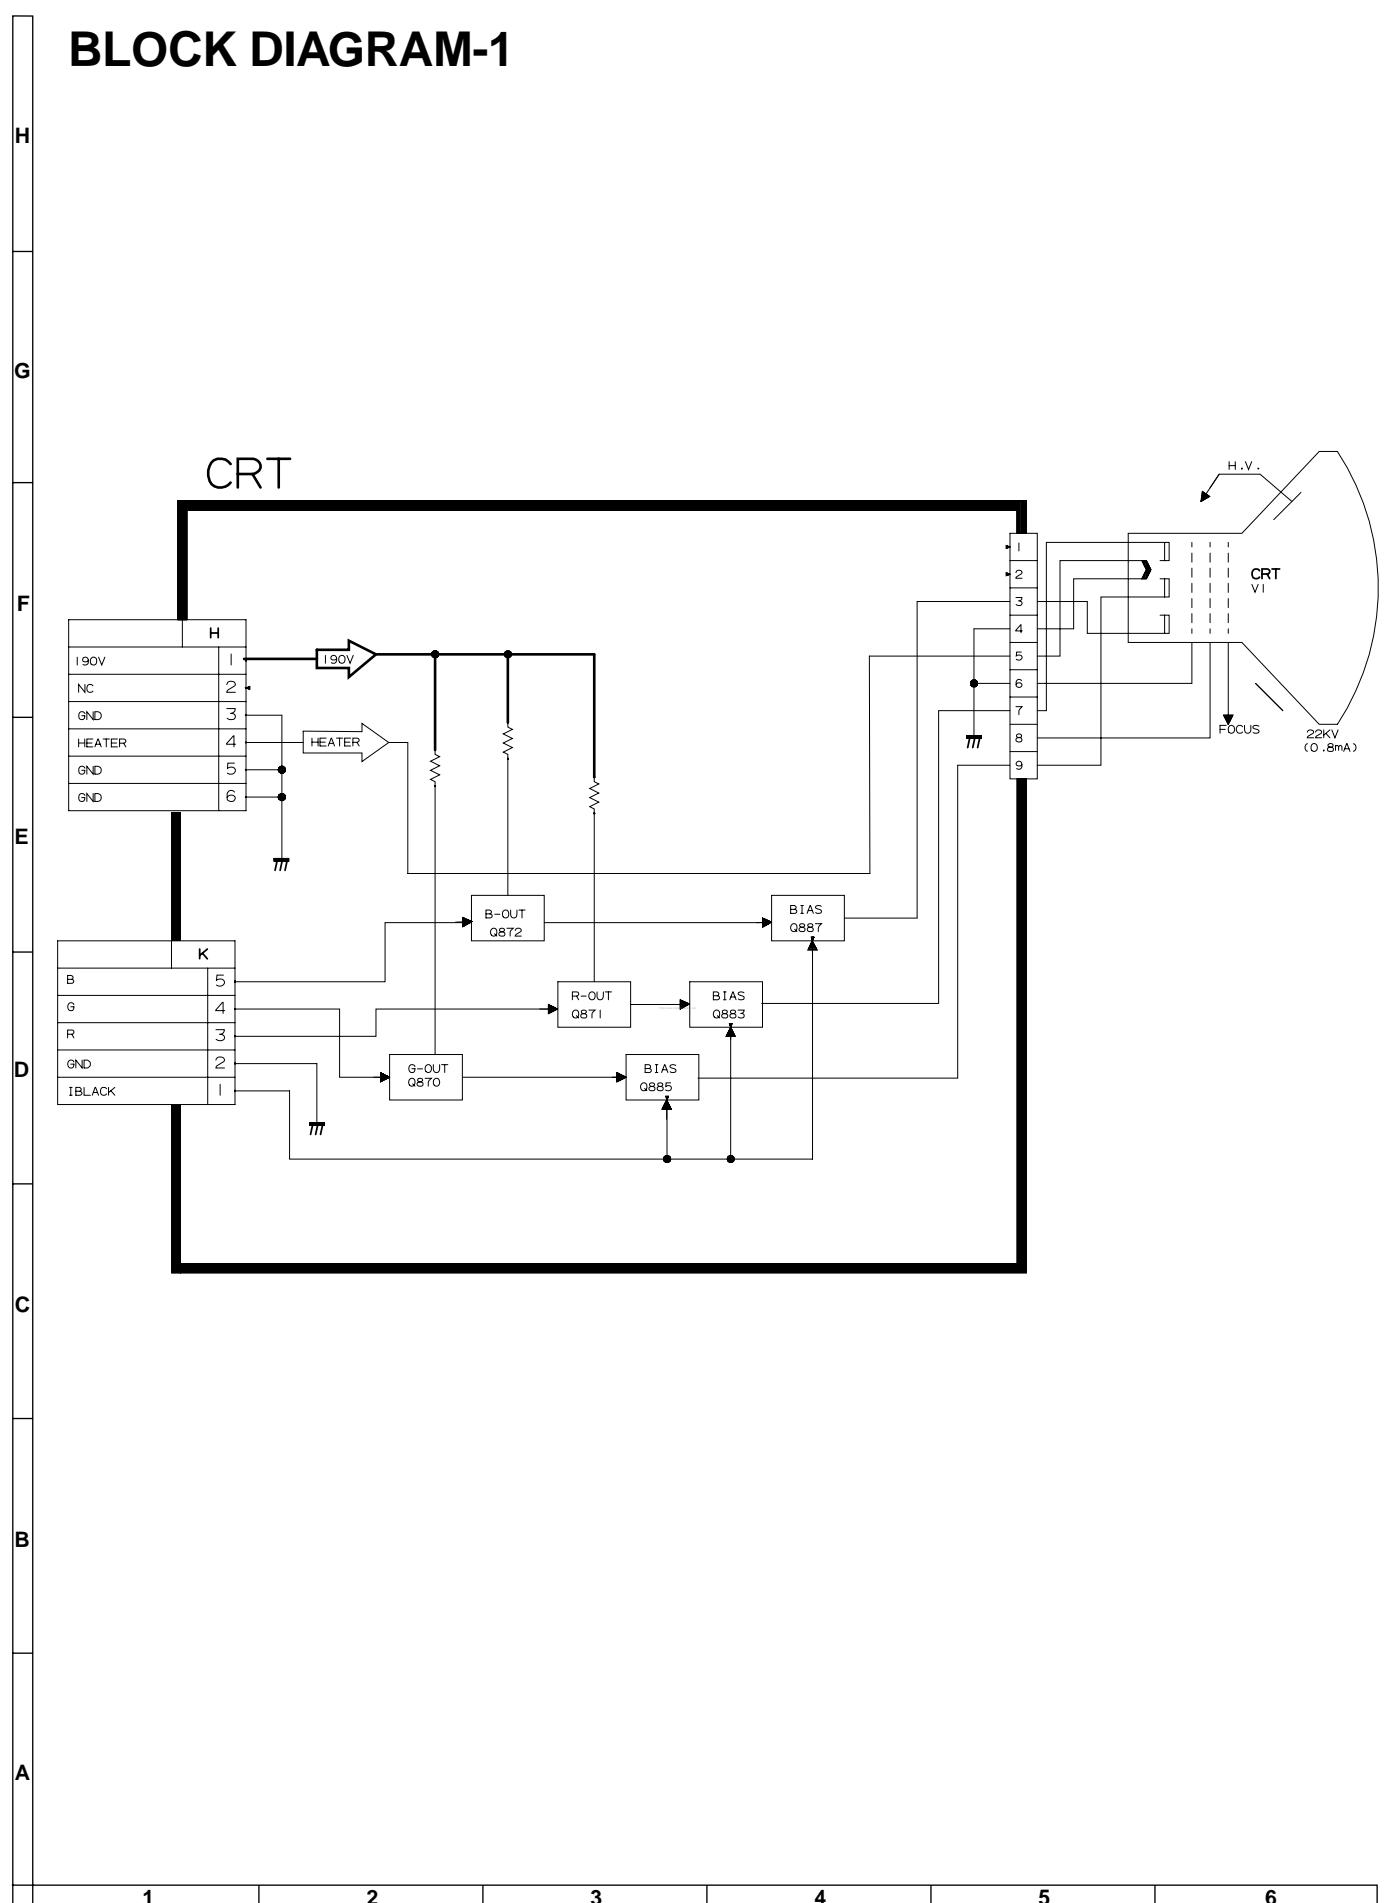

## **MODEL 20PL84 BLOCK DIAGRAM**

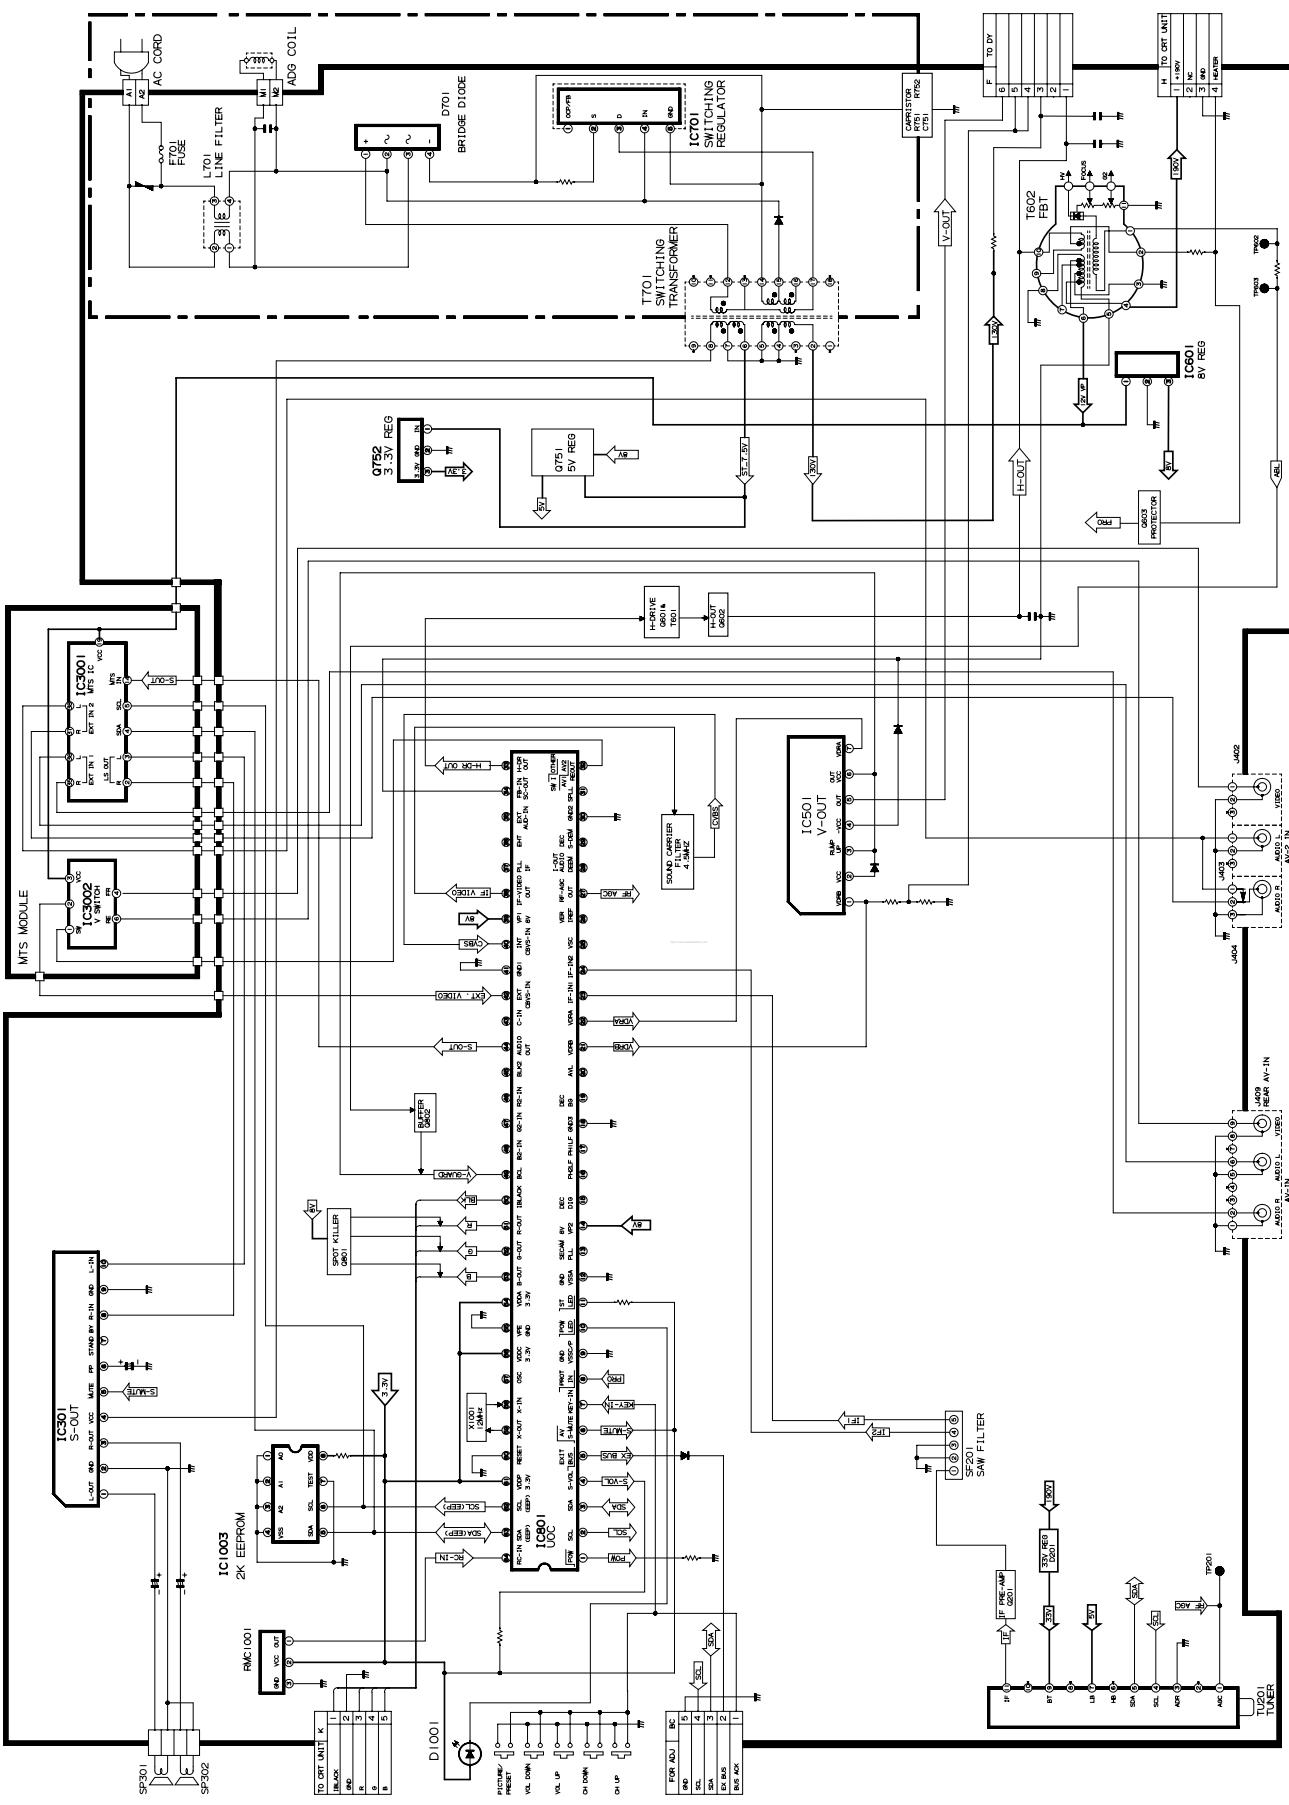

# DESCRIPTION OF SCHEMATIC DIAGRAM

**NOTES:**

1. The unit of resistance "ohm" is omitted.  
( $K=k\Omega=1000\Omega$ ,  $M=M\Omega$ )
2. All resistors are 1/16 watt, unless otherwise noted.
3. All capacitors are  $\mu F$ , unless otherwise noted.  
( $P=pF=\mu\mu F$ )
4. (G) indicates  $\pm 2\%$  tolerance may be used.
5.  $\perp$  indicates line isolated ground.
6.  $\downarrow$  indicates hot ground.

**VOLTAGE MEASUREMENT CONDITIONS:**

1. All DC voltages are measured with DVM connected between points indicated and chassis ground, line voltage set at 120V AC and all controls set for normal picture unless otherwise indicated.
2. All voltages measured with  $1000\mu V$  B & W or Color signal.

**WAVEFORM MEASUREMENT CONDITIONS:**




1. Photographs taken on a standard gated color bar signal, the tint setting adjusted for proper color. The wave shapes at the red, green and blue cathodes of the picture tube depend on the tint, color level and picture control.
2.  indicates waveform check points (See chart, waveforms are measured from point indicated to chassis ground.)

 AND SHADED (  ) COMPONENTS  
= SAFETY RELATED PARTS.

 MARK= X-RAY RELATED PARTS.


This circuit diagram is a standard one, printed circuits may be subject to change for product improvement without prior notice.

## WAVEFORMS

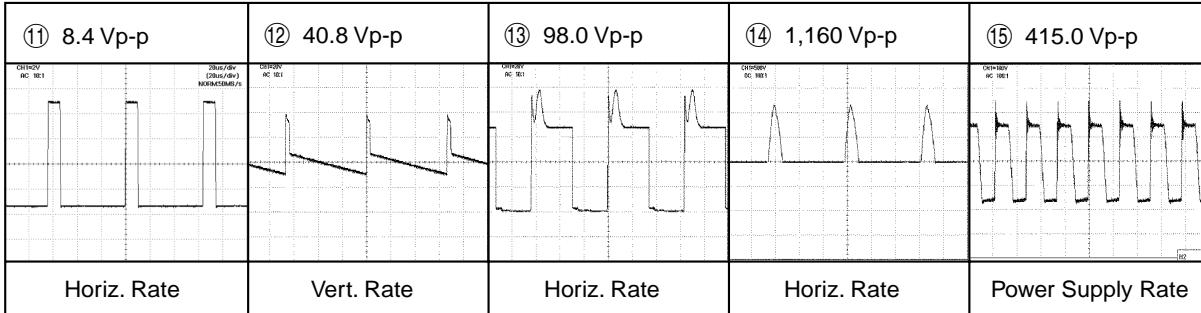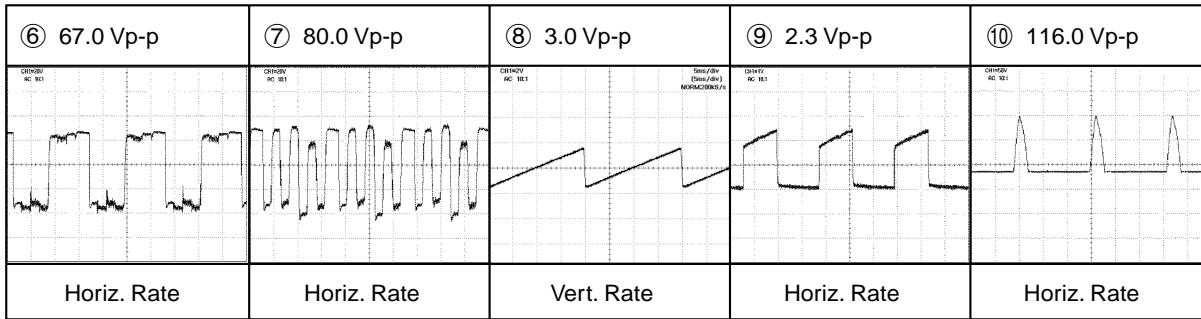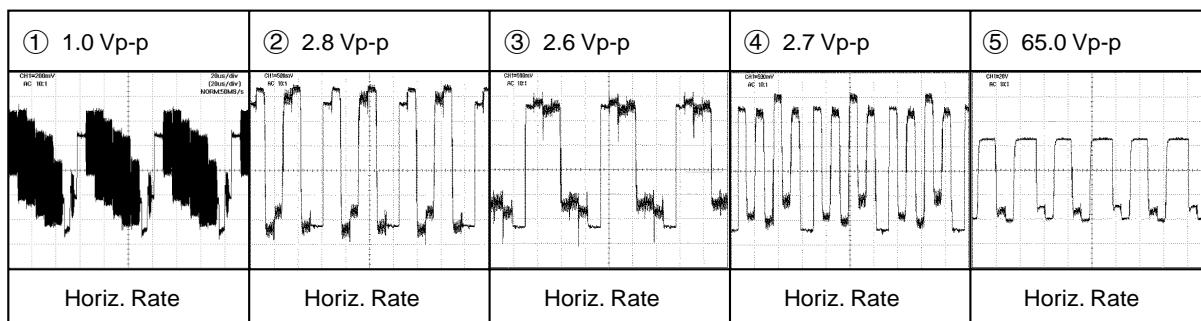


# SCHEMATIC DIAGRAM: CRT Unit


H  
G  
F  
E  
D  
C  
B  
A

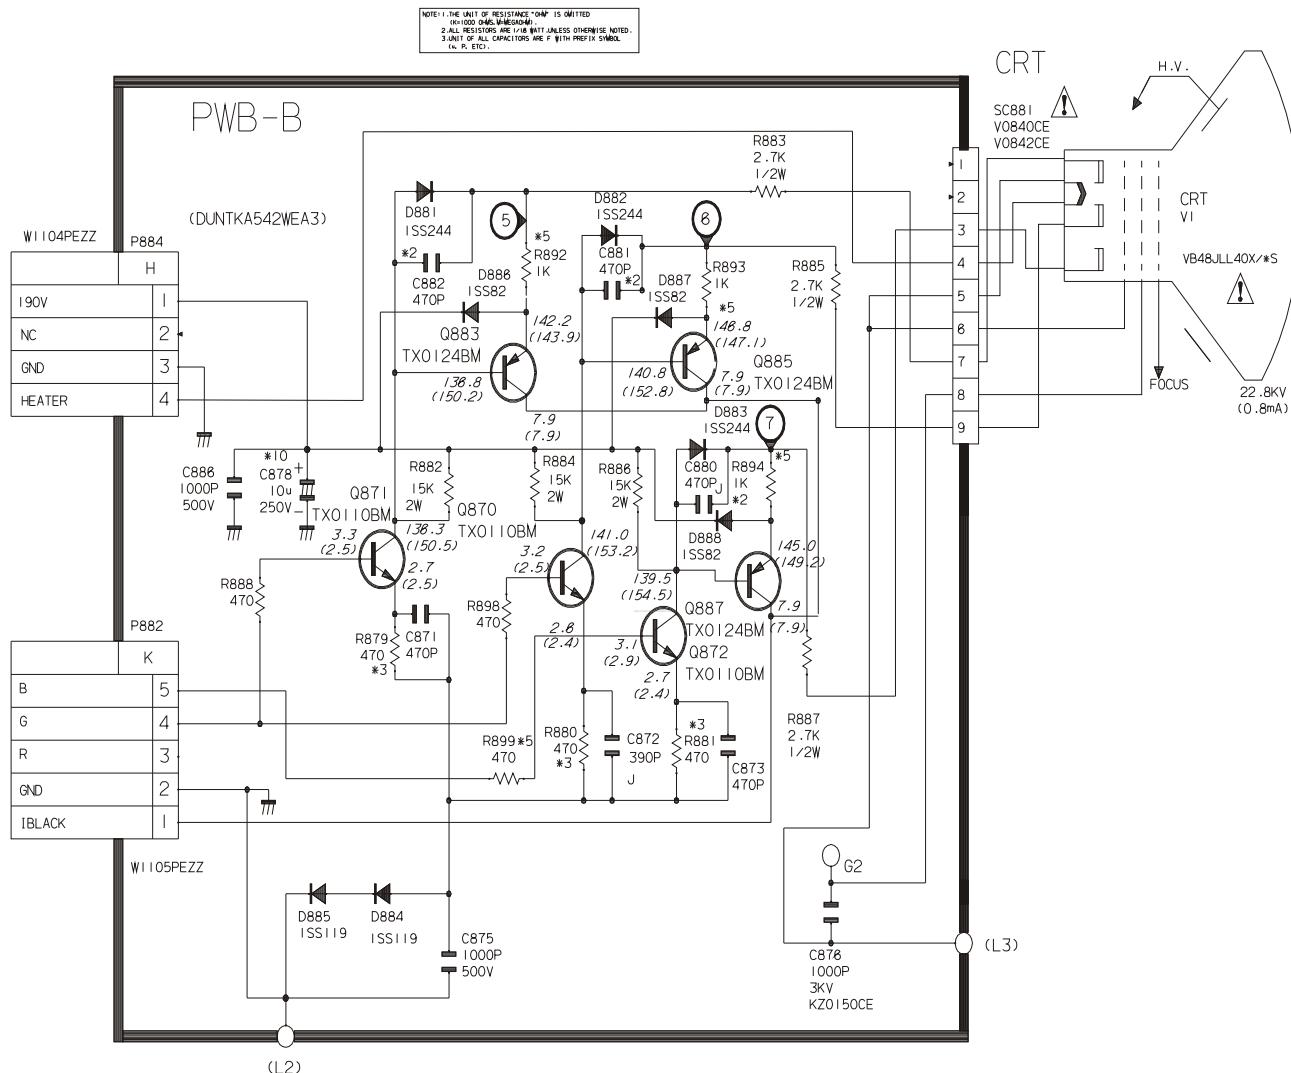

1 2 3 4 5 6

## SCHEMATIC DIAGRAM: MAIN-1 Unit

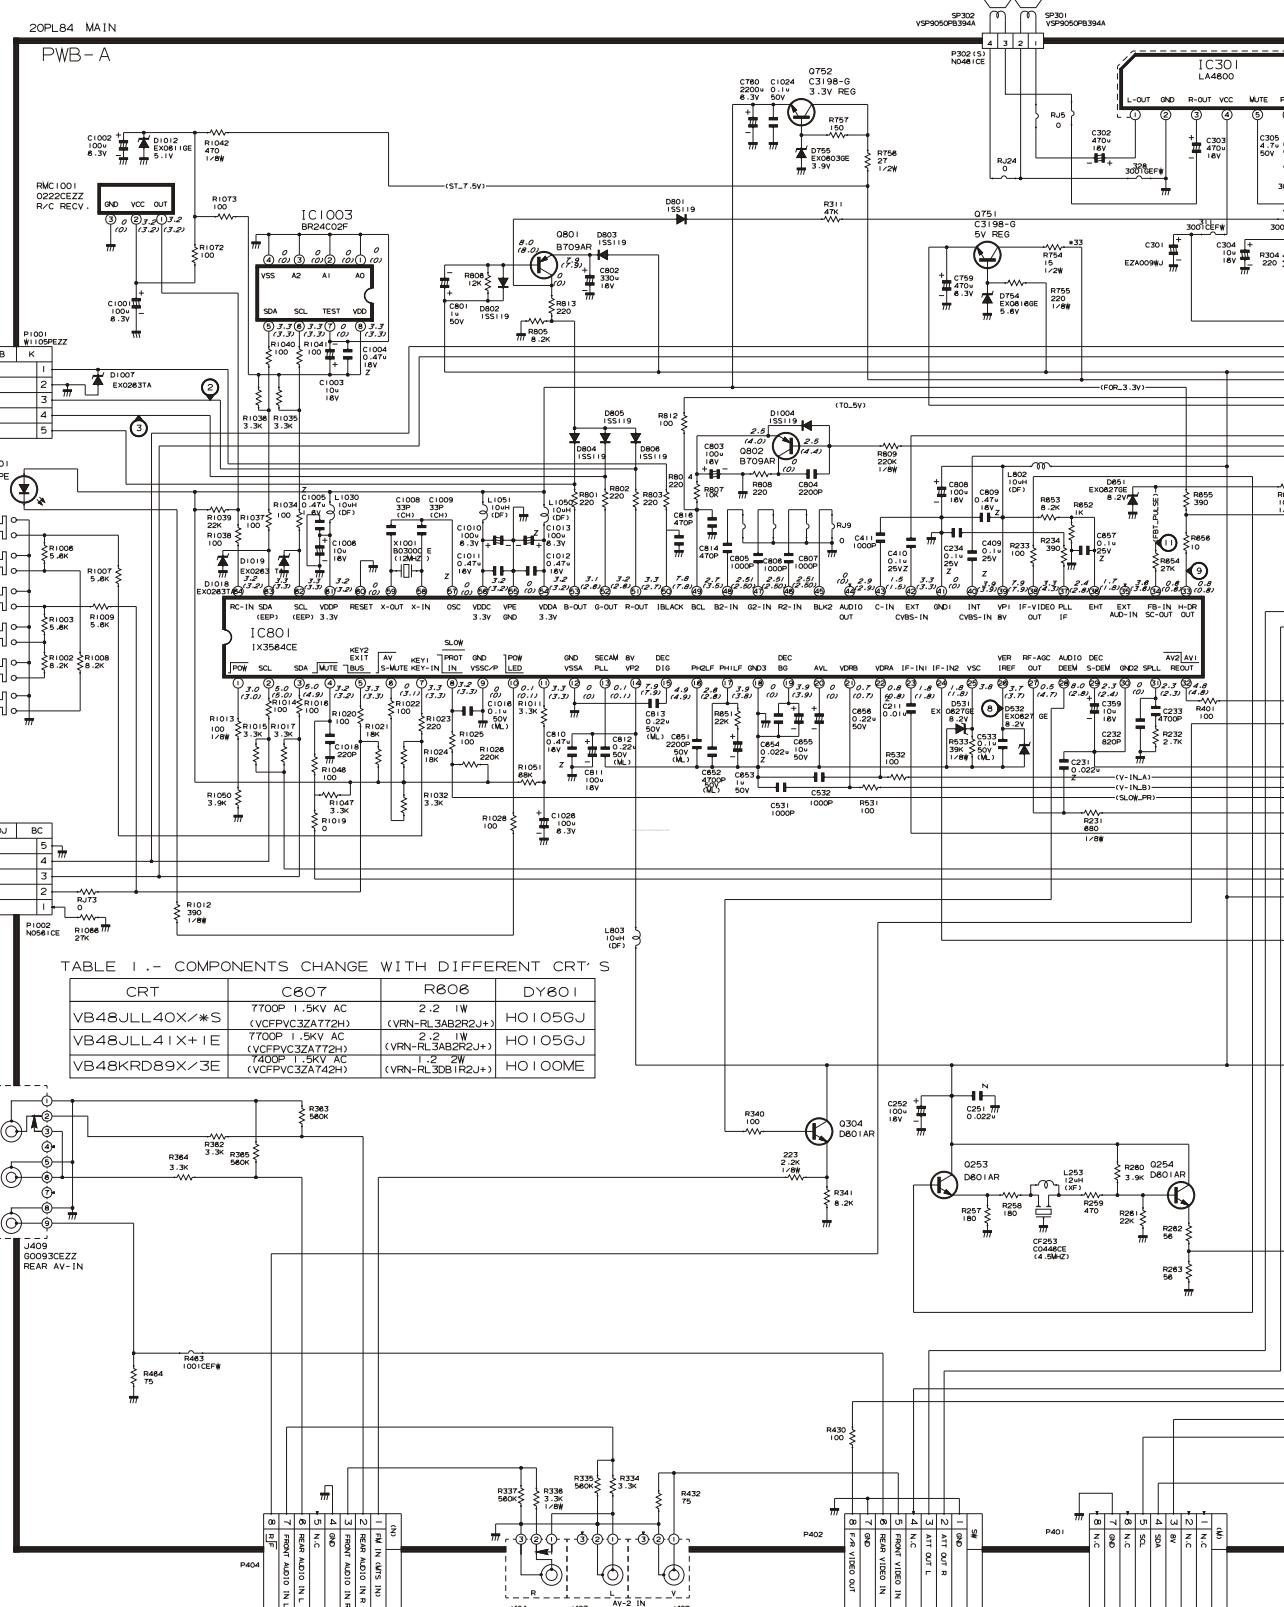

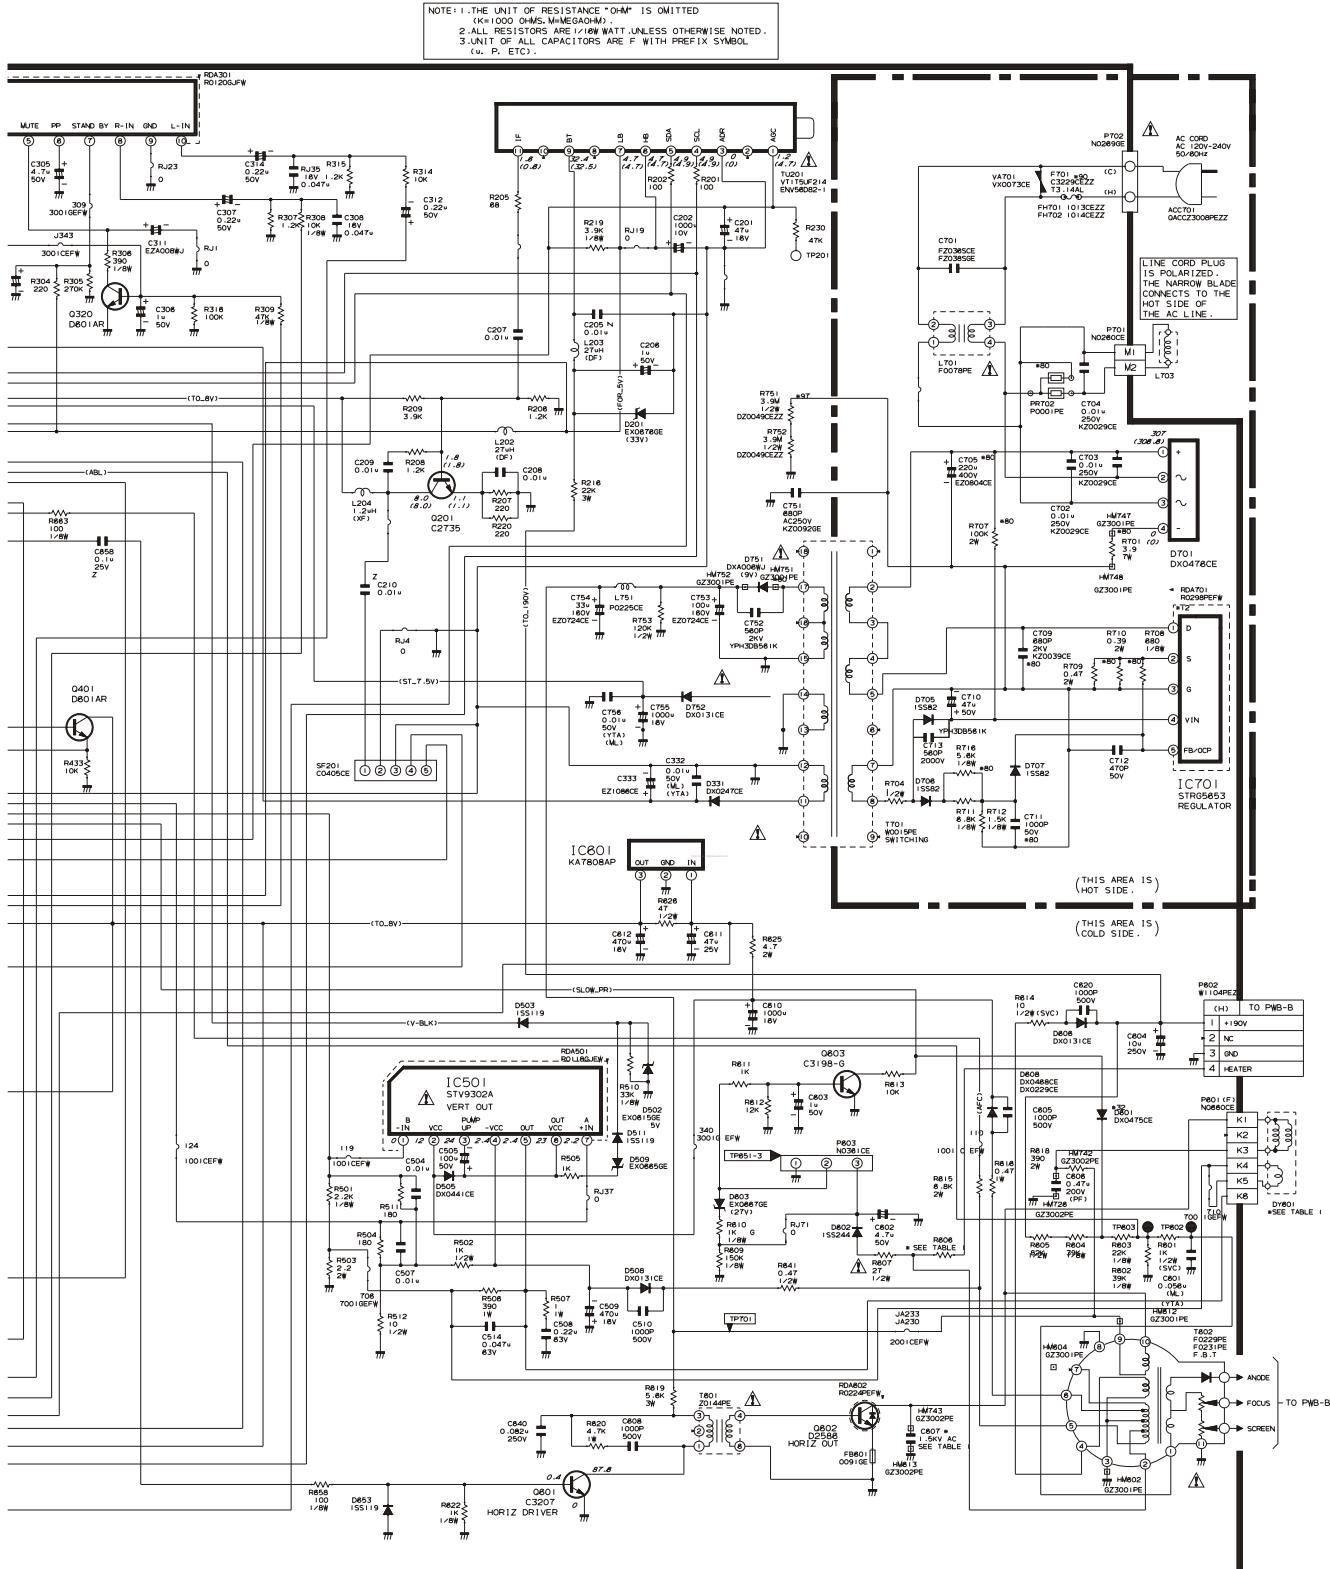

## SCHEMATIC DIAGRAM: MAIN-1 Unit

H

G

F

E


D

C

B

A

MTS MODULE

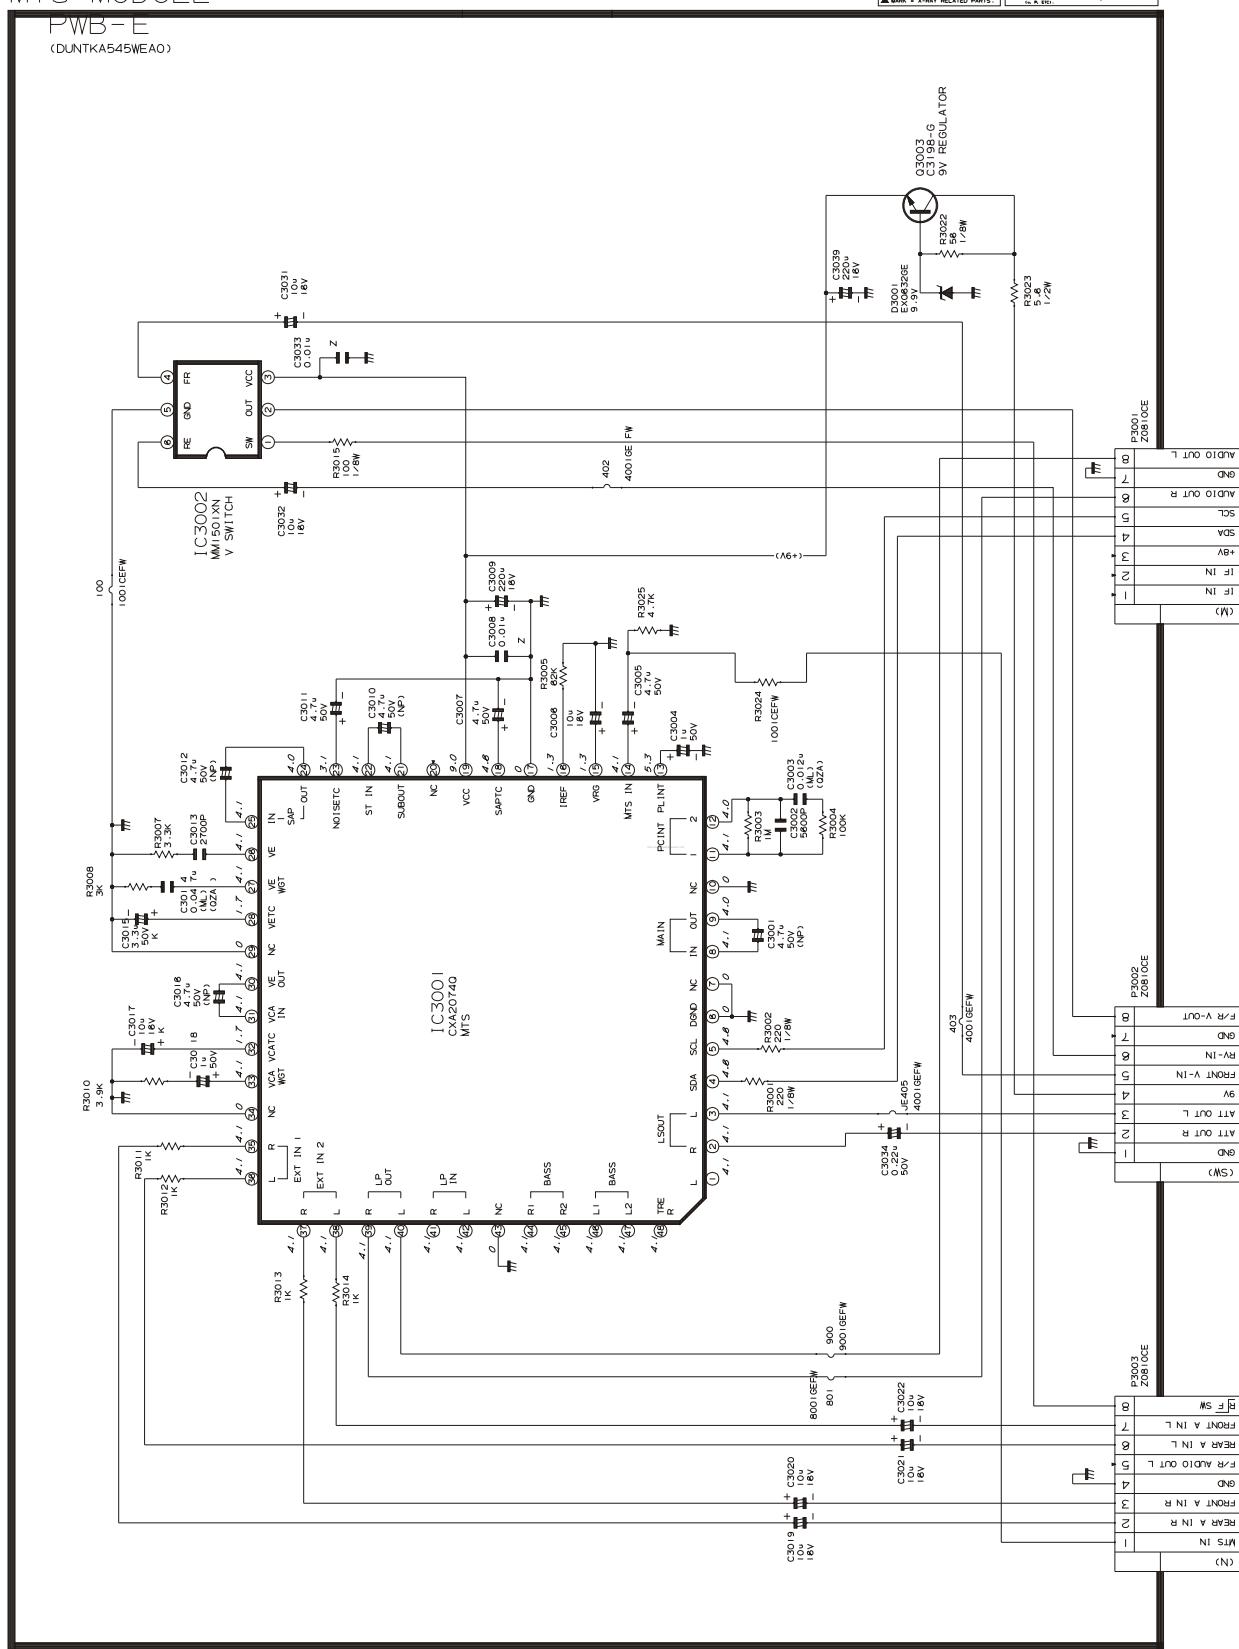

# **PRINTED WIRING BOARD ASSEMBLIES**

H

G


E

D

C


B

A

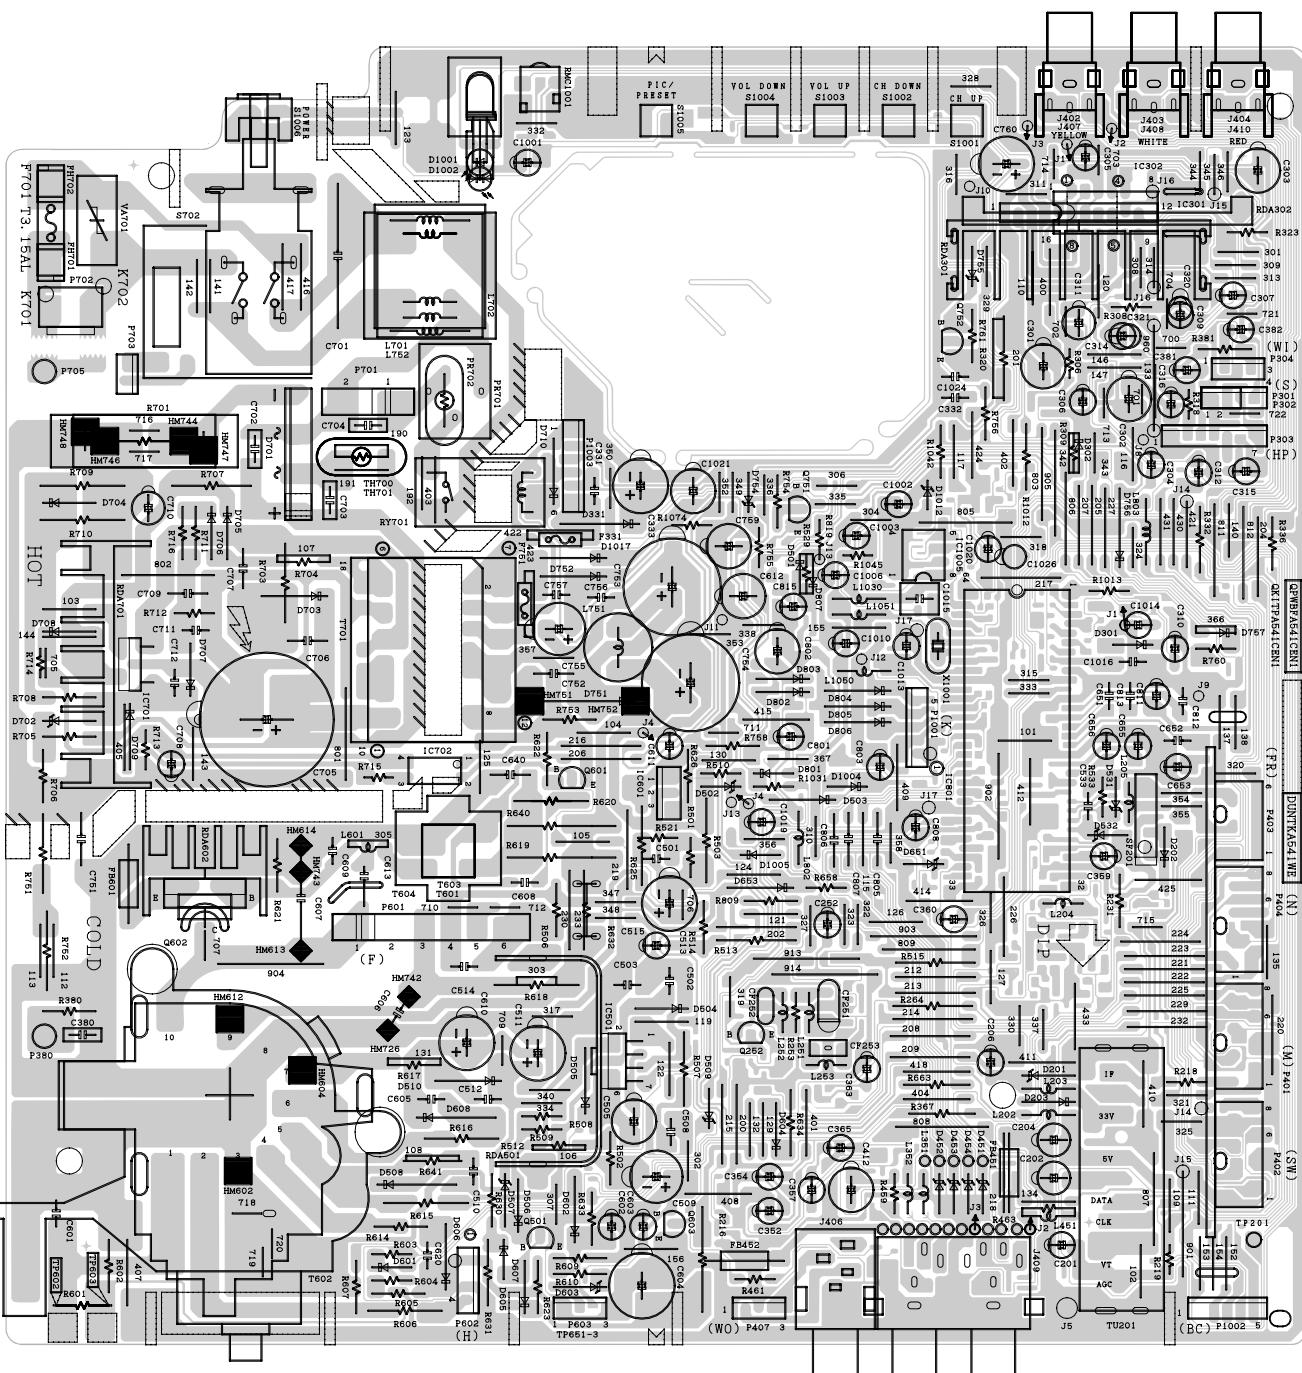


## PWB-A: MAIN Unit (Wiring Side)



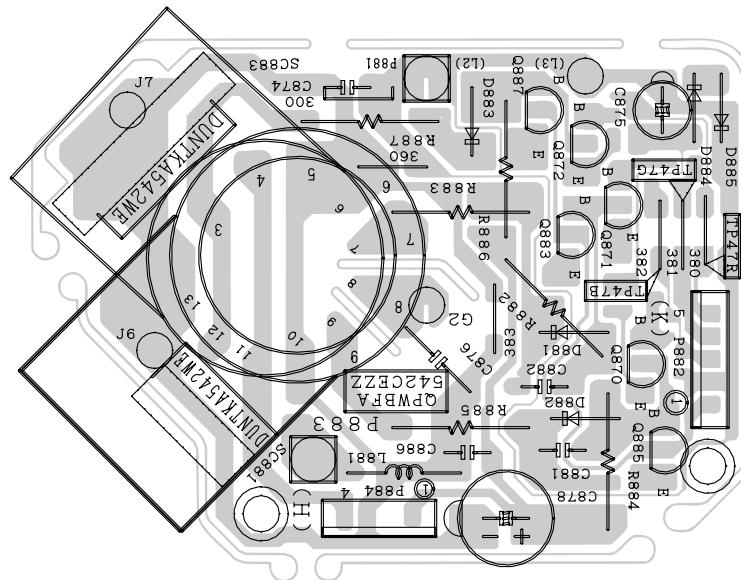

## PWB-B: CRT Unit (Wiring Side)

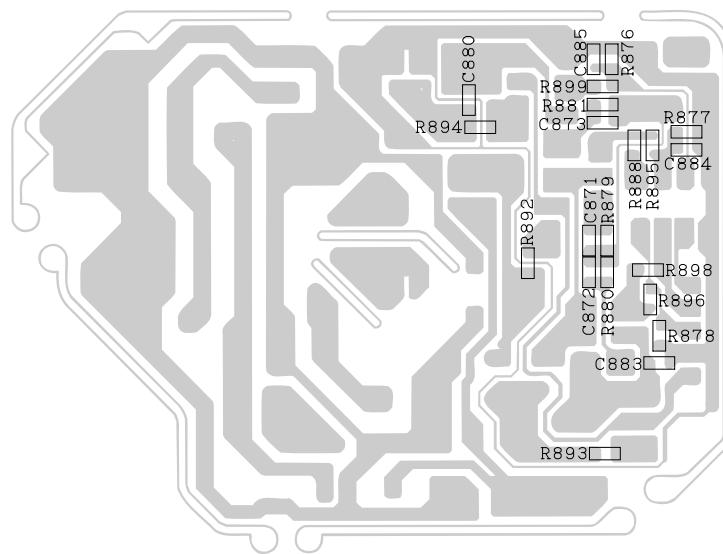

## PWB-B: CRT Unit (Chip Parts Side)

H

G

F


E

D


C

B

A

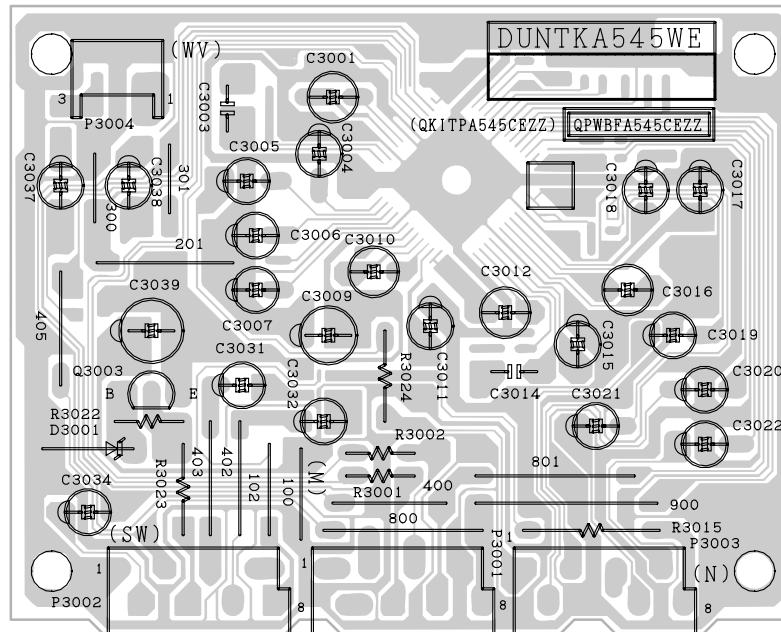

PWB-E: MTS MODULE Unit (Wiring Side)

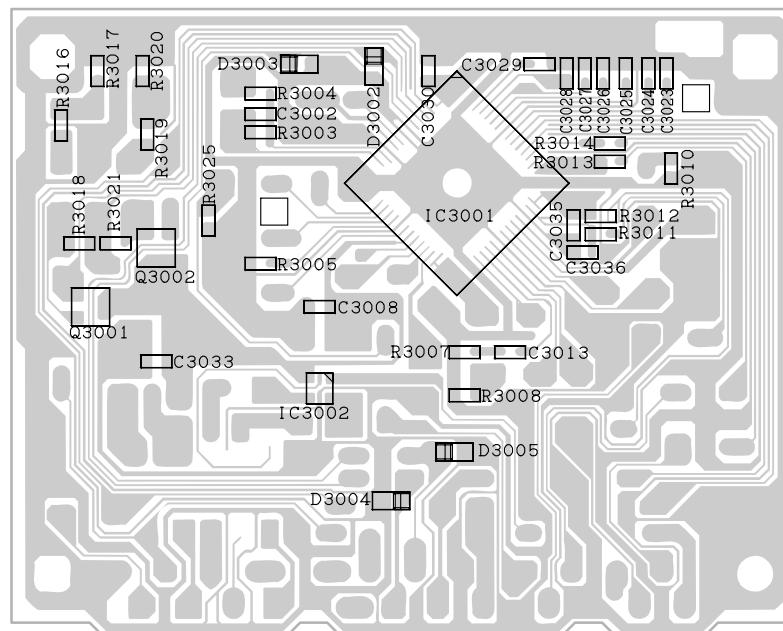

PWB-E: MTS MODULE Unit (Chip Parts Side)

# PARTS LIST

## PARTS REPLACEMENT

Replacement parts which have these special safety characteristics identified in this manual; electrical components having such features are identified by  $\Delta$  and shaded areas in the Replacement Parts Lists and Schematic Diagrams. The use of a substitute replacement part which does not have the same safety characteristic as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

### "HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.

- |                 |                |
|-----------------|----------------|
| 1. MODEL NUMBER | 2. REF. NO.    |
| 3. PART NO.     | 4. DESCRIPTION |

**in USA:** Contact your nearest SHARP Parts Distributor to order.  
For location of SHARP Parts Distributor, Please call Toll-Free; 1-800-BE-SHARP

« MARK: SPARE PARTS-DELIVERY SECTION

p MARK: X-RAY RELATED PARTS

Ref. No.	Part No.	★ Description	Code
----------	----------	---------------	------

## PICTURE TUBE

$\Delta$	V1	VB48JLL40X*S	X	CRT 19V (ORION)	BU
$\Delta$	DY601	RCILH0105GJZZ	X	DY (20V)	AT
$\Delta$	L703	RCILG0074PEZZ	X	Degaussing Coil	AL
		PMAGF3045CEZZ	X	Purity magnet	AD
		PSPAG0012MEZZ	X	Wedge	AB
		QEARC2016PEZZ	X	Earth parts	AE
		LHLDW0102GJKZ	X	Wire tie (20.32 CM)	AA

## PRINTED WIRING BOARD ASSEMBLIES (NOT REPLACEMENT ITEM)

PWB-A	DUNTKA541WEL6	—	MAIN Unit	—
PWB-B	DUNTKA542WEA3	—	CRT Unit	—
PWB-C	DUNTKA545WEA0	—	MTS Unit	—

Ref. No.	Part No.	★ Description	Code	
<b>PWB-A: DUNTKA541WEL6</b>				
<b>MAIN UNIT</b>				
<b>TUNER</b>				
	<b>NOTE: THE PARTS HERE SHOWN ARE SUPPLIED AS AN ASSEMBLY BUT NOT INDEPENDETLY</b>			
$\Delta$	TU201	VTUVT1T5UF214	X TUNER	
		<b>INTEGRATED CIRCUITS</b>		
	IC301	VHILA4600++-1	X LA4600++	
$\Delta$	IC501	VHISTV9302A-1	X STV9302A	
	IC601	VHIIKA7808AP-1	X KIA7808API	
	IC701	VHISTRG5653-1	X STRG5653	
	IC801	RH-IX3564CEN4	X IX3564CE	
	IC1003	VHIBR24C02F1EY	X BR24C02F-WE2	
	<b>TRANSISTOR</b>			
	Q201	VS2SC2735//1EY	X 2SC2735	
	Q253	VS2SD601AR/-1Y	X 2SD601AR	
	Q254	VS2SD601AR/-1Y	X 2SD601AR	
	Q304	VS2SD601AR/-1Y	X 2SD601AR	
	Q320	VS2SD601AR/-1Y	X 2SD601AR	
	Q401	VS2SD601AR/-1Y	X 2SD601AR	
	Q601	VS2SC3207//1+	X 2SC3207-AT	
	Q602	VS2SD2586//1E	X 2SD2586	
	Q603	VS2SC3198-G-1+	X 2SC3198-G	
	Q751	VS2SC3198-G-1+	X 2SC3198-G	
	Q752	VS2SC3198-G-1+	X 2SC3198-G	
	Q801	VS2SB709AR/-1Y	X 2SB709AR	
	Q802	VS2SB709AR/-1Y	X 2SB709AR	
	<b>DIODES</b>			
$\Delta$	D201	RH-EX0676GEZZY	X Zener	
	D331	RH-DX0247CEZZ	X Diode	
$\Delta$	D502	RH-EX0615GEZZY	X Zener	
	D503	VHD1SS119//1-Y	X Diode	
	D505	RH-DX0441CEZZY	X Diode	
	D508	RH-DX0131CEZZY	X Diode	
	D509	RH-EX0665GEZZY	X Zener	
	D511	VHD1SS119//1-Y	X Diode	
	D531	RH-EX0627GEZZY	X Zener	
	D532	RH-EX0627GEZZY	X Zener	
	D601	RH-DX0475CEZZY	X Diode	
$\Delta$	D602	VHD1SS244//1-Y	X Diode	
$\Delta$	D603	RH-EX0667GEZZY	X Zener	
$\Delta$	D606	RH-DX0131CEZZY	X Diode	
$\Delta$	D608	RH-DX0468CEZZ	X Diode	
	D651	RH-EX0627GEZZY	X Zener	
	D653	VHD1SS119//1-Y	X Diode	
	D701	RH-DX0476CEZZ	X Diode	
	D705	VHD1SS82//1AY	X Diode	
	D706	VHD1SS82//1AY	X Diode	
	D707	VHD1SS82//1AY	X Diode	
$\Delta$	D751	RH-DXA006WJZZ	X Diode	
$\Delta$	D752	RH-DX0131CEZZY	X Diode	
	D754	RH-EX0616GEZZY	X Zener	
	D755	RH-EX0603GEZZY	X Zener	
	D801	VHD1SS119//1-Y	X Diode	
	D802	VHD1SS119//1-Y	X Diode	
	D803	VHD1SS119//1-Y	X Diode	
	D804	VHD1SS119//1-Y	X Diode	
	D805	VHD1SS119//1-Y	X Diode	
	D806	VHD1SS119//1-Y	X Diode	
	D1001	RH-PX0013PEZZ	X LED, ON TIMER	
	D1004	VHD1SS119//1-Y	X Diode	
	D1007	RH-EX0263TAZZY	X EX0263TA	
	D1012	RH-EX0611GEZZY	X Zener	
	D1018	RH-EX0263TAZZY	X EX0263TA	
	D1019	RH-EX0263TAZZY	X EX0263TA	
	VA701	RH-VX0073CEZZ	X Varistor	

Ref. No.	Part No.	★ Description	Code
<b>PWB-A: DUNTKA541WEL6</b>			
<b>MAIN UNIT</b>			
<b>PACKAGED CIRCUITS</b>			
PR702	RMPTP0001PEZZ	X Packaged Circuit	AG
X1001	RCRSB0300CEZZ	X Crystal	AD
<b>FILTERS AND COILS</b>			
CF253	RFILC0446CEZZ	X Filter,	AC
L202	VP-DF270K0000Y	X Peaking, 27mH	AA
L203	VP-DF270K0000Y	X Peaking, 27mH	AA
L204	VP-XF1R2K0000Y	X Peaking 1.2mH	AA
L253	VP-XF120K0000Y	X Peaking 12μH	AA
△ L701	RCILF0078PEZZ	X Coil Line Filter	AE
△ L751	RCILP0225CEZZ	X Coil,	AD
L802	VP-DF100K0000Y	X Peaking, 10mH	AA
L803	VP-DF100K0000Y	X Peaking, 10mH	AA
L1030	VP-DF100K0000Y	X Peaking, 10mH	AA
L1050	VP-DF100K0000Y	X Peaking, 10mH	AA
L1051	VP-DF100K0000Y	X Peaking, 10mH	AA
SF201	RFILC0405CEZZ	X Filter,(4.5MHZ)	AF
<b>TRANSFORMERS</b>			
△ T601	RTRNZ0144PEZZ	X Transformer	AD
△ T602	RTRNF0229PEZZ	X H-Volt Transformer	AS
△ T701	RTRNW0015PEZZ	X Transformer	AG
<b>CAPACITORS</b>			
<i>[EL... Electrolytic, M-Poly... Metallized Polypro Film]</i>			
C201	VCEA0A1CW476M+	X 47 16V EL. AA	
C202	VCEA0A1AW108M+	X 1000 10V EL. AB	
C205	VCKYCY1HF103ZY	X 0.01 50V Ceramic AA	
C206	VCEA0A1HW105M+	X 1 50V EL. AA	
C207	VCKYCY1HB103KY	X 0.01 50V Ceramic AA	
C208	VCKYCY1HB103KY	X 0.01 50V Ceramic AA	
C209	VCKYCY1HB103KY	X 0.01 50V Ceramic AA	
C210	VCKYCY1HF103ZY	X 0.01 50V Ceramic AA	
C211	VCKYCY1HF103ZY	X 0.01 50V Ceramic AA	
C231	VCKYCY1HF223ZY	X 0.022 50V Ceramic AA	
C232	VCKYCY1HB821KY	X 820p 50V Ceramic AA	
C233	VCKYCY1HB472KY	X 100 35V EL. AA	
C234	VCKYCY1EF104ZY	X 0.1 25V Ceramic AA	
C251	VCKYCY1HF223ZY	X 0.022 50V Ceramic AA	
C252	VCEA0A1CW107M+	X 100 16V EL. AA	
C301	RC-EZA009WJZZ+	X 220 16V EL. AB	
C302	VCEA0A1CW477M+	X 470 16V EL. AB	
C303	VCEA0A1CW477M+	X 470 16V EL. AB	
C304	VCEA0A1CW106M+	X 10 16V EL. AA	
C305	VCEA0A1HW475M+	X 4.7 50V EL. AA	
C306	VCEA0A1HW105M+	X 1 50V EL. AA	
C307	VCEA0A1HW224M+	X 0.22 50V EL. AA	
C308	VCKYCY1CB473KY	X 0.047 16V Ceramic AA	
C311	RC-EZA008WJZZ+	X 100 16V EL. AB	
C312	VCEA0A1HW224M+	X 0.22 50V EL. AA	
C314	VCEAKA1HW224M+	X 0.22 50V EL. AB	
△ C332	VCQYTA1HM103J+	X 0.01 50V Mylar AA	
△ C333	RC-EZ1086CEZZ	X 1000 16V EL. AC	
C359	VCEA0A1CW106M+	X 10 16V EL. AA	
C409	VCKYCY1EF104ZY	X 0.1 25V Ceramic AA	
C410	VCKYCY1EF104ZY	X 0.1 25V Ceramic AA	
C411	VCKYCY1HB102KY	X 1000p 50V Ceramic AA	
C504	VCKYCY1HB103KY	X 0.01 50V Ceramic AA	
C505	VCEA0A1HW107M+	X 100 50V EL. AB	
C507	VCKYCY1HB103KY	X 0.01 50V Ceramic AA	
C508	VCFYSA1JB224J+	X 0.22 63V Mylar AC	
C509	VCEA0A1CW477M+	X 470 16V EL. AB	
C510	VCKYPA2HB102K+	X 1000p 500V Ceramic AA	
C514	VCFYSA1JB473J+	X 0.047 63V Mylar AB	
C531	VCKYCY1HB102KY	X 1000p 50V Ceramic AA	
C532	VCKYCY1HB102KY	X 1000p 50V Ceramic AA	

Ref. No.	Part No.	★ Description	Code
C533	VCQYTA1HM104J+	X 0.1 50V Mylar AB	
C601	VCQYTA1HM563J+	X 0.056 50V Mylar AA	
C602	VCEA0A1HW475M+	X 4.7 50V EL. AA	
C603	VCEA0A1HW105M+	X 1 50V EL. AA	
C604	VCEA0A2EW106M+	X 10 250V EL. AC	
C605	VCKYPA2HB102K+	X 1000p 500V Ceramic AA	
C606	VCFPVC2DB474J	X 0.47 200V M-Poly. AC	
C607	VCFPVC3ZA772H	X 7700p 1.5kV M-Poly. AC	
C608	VCKYPA2HB102K+	X 1000p 500V Ceramic AA	
C610	VCEA0A1CW108M+	X 1000 16V EL. AC	
C611	VCEA0A1EW476M+	X 47 25V EL. AA	
C612	VCEA0A1CW477M+	X 470 16V EL. AB	
C620	VCKYPA2HB102K+	X 1000p 500V Ceramic AA	
C640	VCFYSB2EB823J	X 0.082 250V M.Poly.. AB	
C651	VCQYTA1HM222J+	X 2200p 50V Mylar AA	
C652	VCQYTA1HM472J+	X 4700p 50V Mylar AA	
C653	VCEA0A1HW105M+	X 1 50V EL. AA	
C654	VCKYCY1HF223ZY	X 0.022 50V Ceramic AA	
C655	VCEA0A1HW106M+	X 10 50V EL. AA	
C656	VCEA0A1HW224M+	X 0.22 50V EL. AA	
C657	VCKYCY1EF104ZY	X 0.1 25V Ceramic AA	
C658	VCKYCY1EF104ZY	X 0.1 25V Ceramic AA	
△ C701	RC-FZ036SCEZZ	X 0.1mF AC125V Plastic AC	
C702	RC-KZ0029CEZZ+	X 0.01 AC250V Ceramic AB	
C703	RC-KZ0029CEZZ+	X 0.01 AC250V Ceramic AB	
C704	RC-KZ0029CEZZ+	X 0.01 AC250V Ceramic AB	
C705	RC-EZ0804CEZZ	X 220 400V EL. AL	
C709	RC-KZ0039CEZZ	X 680 2kV Ceramic AC	
C710	VCEA0A1HW476M+	X 47 50V EL. AB	
C711	VCKYPA1HB102K+	X 1000p 50V Ceramic AA	
C712	VCKYPA1HB471K+	X 470p 50V Ceramic AA	
C713	VCKYPH3DB561K	X 560p 2kV Ceramic AB	
△ C751	RC-KZ0092GEZZA	X 3300p AC250V Ceramic AC	
△ C752	VCKYPH3DB561K	X 560p 2kV Ceramic AB	
△ C753	RC-EZ0724CEZZ	X 100 160V EL. AD	
△ C754	RC-EZ0724CEZZ	X 100 160V EL. AD	
△ C755	VCEA0A1CW108M+	X 1000 16V EL. AC	
△ C756	VCQYTA1HM103J+	X 0.01 50V Mylar AA	
C759	VCEA0A0JW477M+	X 470 6.3V EL. AB	
C760	VCEA0A0JW228M+	X 2200 6.3V EL. AC	
C801	VCEA0A1HW105M+	X 1 50V EL. AA	
C802	VCEA0A1CW337M+	X 330 16V EL. AB	
C803	VCEA0A1CW107M+	X 100 16V EL. AA	
C804	VCKYCY1HB222KY	X 2200p 50V Ceramic AA	
C805	VCKYD41HB102KY	X 1000p 50V Ceramic AA	
C806	VCKYD41HB102KY	X 1000p 50V Ceramic AA	
C807	VCKYD41HB102KY	X 1000p 50V Ceramic AA	
C808	VCEA0A1CW107M+	X 100 16V EL. AA	
C809	VCKYCY1CF474ZY	X 0.47 16V Ceramic AA	
C810	VCKYCY1CF474ZY	X 0.47 16V Ceramic AA	
C811	VCEA0A1CW107M+	X 100 16V EL. AA	
C812	VCFYFA1HA224J+	X 0.22 50V Mylar AB	
C813	VCFYFA1HA224J+	X 0.22 50V Mylar AB	
C814	VCKYCY1HB471KY	X 470p 50V Ceramic AA	
C816	VCKYCY1HB471KY	X 470p 50V Ceramic AA	
C1001	VCEA0A0JW107M+	X 100 6.3V EL. AA	
C1002	VCEA0A0JW107M+	X 100 6.3V EL. AA	
C1003	VCEA0A1CW106M+	X 10 16V EL. AA	
C1004	VCKYCY1CF474ZY	X 0.47 16V Ceramic AA	
C1005	VCKYCY1CF474ZY	X 0.47 16V Ceramic AA	
C1006	VCEA0A1CW106M+	X 10 16V EL. AA	
C1008	VCCCCY1HH330JY	X 33p 50V Ceramic AA	
C1009	VCCCCY1HH330JY	X 33p 50V Ceramic AA	
C1010	VCEA0A0JW107M+	X 100 6.3V EL. AA	
C1011	VCKYCY1CF474ZY	X 0.47 16V Ceramic AA	
C1012	VCKYCY1CF474ZY	X 0.47 16V Ceramic AA	
C1013	VCEA0A0JW107M+	X 100 6.3V EL. AA	
C1016	VCQYTA1HM104J+	X 0.1 50V Mylar AB	
C1018	VCKYCY1HB221KY	X 220p 50V Ceramic AA	

Ref. No.	Part No.	★	Description	Code
<b>PWB-A: DUNTKC290WEA4</b>				
<b>MAIN UNIT</b>				
<b>CAPACITORS</b>				
<i>[EL... Electrolytic, M-Poly... Metallized Polypro Film]</i>				
C1024	VCQYTA1HM104J+	X	0.1	50V Mylar AB
C1026	VCEA0A0JW107M+	X	100	6.3V EL. AA
<b>RESISTORS</b>				
<i>[M-Ox... Metal Oxide, M-Film ... Metal Film]</i>				
RJ1	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ2	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ4	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ5	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ8	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ9	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ10	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ13	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ14	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ15	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ16	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ17	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ19	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ21	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ23	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ24	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ26	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ28	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ32	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ34	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ35	VCKYCY1CB473KY	X	0.047	16V Ceramic AA
RJ37	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ38	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ41	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ42	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ43	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ46	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ49	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ50	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ51	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ52	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ53	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ55	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ70	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ71	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ73	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ75	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ76	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
RJ77	VRS-CY1JF000JY	X	00	1/16W M-Ox. AA
R201	VRS-CY1JF101JY	X	100	1/16W M-Ox. AA
R202	VRS-CY1JF101JY	X	100	1/16W M-Ox. AA
R205	VRS-CY1JF680JY	X	68	1/16W M-Ox. AA
R206	VRS-CY1JF122JY	X	1.2k	1/16W M-Ox. AA
R207	VRS-CY1JF221JY	X	220	1/16W M-Ox. AA
R208	VRS-CY1JF122JY	X	1.2k	1/16W M-Ox. AA
R209	VRS-CY1JF392JY	X	3.9k	1/16W M-Ox. AA
R216	VRS-RG3LB223J+	X	22k	3W M-Ox. AB
R219	VRD-RA2BE392JY	X	3.9k	1/8W Carbon AA
R220	VRS-CY1JF221JY	X	220	1/16W M-Ox. AA
R230	VRS-CY1JF473JY	X	47k	1/16W M-Ox. AA
R231	VRD-RA2BE681JY	X	1.5k	1/8W Carbon AA
R232	VRS-CY1JF272JY	X	2.7k	1/16W M-Ox. AA
R233	VRS-CY1JF101JY	X	100	1/16W M-Ox. AA
R234	VRS-CY1JF391JY	X	390	1/16W M-Ox. AA
R257	VRS-CY1JF181JY	X	180	1/16W M-Ox. AA
R258	VRS-CY1JF181JY	X	180	1/16W M-Ox. AA
R259	VRS-CY1JF471JY	X	470	1/16W M-Ox. AA
R260	VRS-CY1JF392JY	X	3.9k	1/16W M-Ox. AA

Ref. No.	Part No.	★	Description	Code
R261	VRS-CY1JF223JY	X	22k	1/16W M-Ox. AA
R262	VRS-CY1JF560JY	X	56	1/16W M-Ox. AA
R263	VRS-CY1JF560JY	X	56	1/16W M-Ox. AA
R304	VRS-CY1JF221JY	X	220	1/16W M-Ox. AA
R305	VRS-CY1JF274JY	X	270k	1/16W M-Ox. AA
R306	VRD-RA2BE391JY	X	390	1/8W Carbon AA
▲ △ R307	VRS-CY1JF122JY	X	1.2k	1/16W M-Ox. AA
R308	VRD-RA2BE103JY	X	10k	1/8W Carbon AA
R309	VRD-RA2BE473JY	X	47k	1/8W Carbon AA
R311	VRS-CY1JF473JY	X	47k	1/16W M-Ox. AA
R314	VRS-CY1JF103JY	X	10k	1/16W M-Ox. AA
R315	VRS-CY1JF122JY	X	1.2k	1/16W M-Ox. AA
R316	VRS-CY1JF104JY	X	100k	1/16W M-Ox. AA
R334	VRS-CY1JF332JY	X	3.3k	1/16W M-Ox. AA
R335	VRS-CY1JF564JY	X	560k	1/16W M-Ox. AA
R336	VRD-RA2BE332JY	X	3.3k	1/8W Carbon AA
R337	VRS-CY1JF564JY	X	560k	1/16W M-Ox. AA
R340	VRS-CY1JF101JY	X	100	1/16W M-Ox. AA
R341	VRS-CY1JF822JY	X	8.2k	1/16W M-Ox. AA
R362	VRS-CY1JF332JY	X	3.3k	1/16W M-Ox. AA
R363	VRS-CY1JF564JY	X	560k	1/16W M-Ox. AA
R364	VRS-CY1JF332JY	X	3.3k	1/16W M-Ox. AA
R365	VRS-CY1JF564JY	X	560k	1/16W M-Ox. AA
R401	VRS-CY1JF101JY	X	100	1/16W M-Ox. AA
R430	VRS-CY1JF101JY	X	100	1/16W M-Ox. AA
R432	VRS-CY1JF750JY	X	75	1/16W M-Ox. AA
R433	VRS-CY1JF103JY	X	10k	1/16W M-Ox. AA
R464	VRS-CY1JF750JY	X	75	1/16W M-Ox. AA
R501	VRD-RA2BE222JY	X	2.2k	1/8W Carbon AA
R502	VRD-RM2HD102JY	X	1.0k	1/2W Carbon AA
R503	VRN-RL3DB2R2J+	X	2.2	2W M-Film AB
R504	VRS-CY1JF181JY	X	180	1/16W M-Ox. AA
R505	VRS-CY1JF102JY	X	1k	1/16W M-Ox. AA
R506	VRS-RG3AB391J+	X	390	1W M-Ox. AB
R507	VRN-RL3AB1R0J+	X	1.0	1W M-Film AB
R510	VRD-RA2BE333JY	X	33k	1/8W Carbon AA
R511	VRS-CY1JF181JY	X	180	1/16W M-Ox. AA
R512	VRD-RM2HD100JY	X	10	1/2W Carbon AA
R531	VRS-CY1JF101JY	X	100	1/16W M-Ox. AA
R532	VRS-CY1JF101JY	X	100	1/16W M-Ox. AA
R533	VRD-RA2BE393JY	X	39k	1/8W Carbon AA
R601	VRS-RG2HC102J+	X	1k	1/2W M-Ox. AB
R602	VRD-RA2BE393JY	X	39k	1/8W Carbon AA
R603	VRD-RA2BE223JY	X	22k	1/8W Carbon AA
R604	VRD-RA2BE393JY	X	39k	1/8W Carbon AA
R605	VRD-RM2HD823JY	X	82k	1/2W Carbon AA
R606	VRN-RL3AB2R2J+	X	2.2	1W M-Film AB
R607	VRD-RM2HD270JY	X	27	1/2W Carbon AA
R609	VRD-RA2BE154JY	X	150k	1/8W Carbon AA
R610	VRD-RA2BE102GY	X	1.0k	1/8W Carbon AA
R611	VRS-CY1JF102JY	X	1k	1/16W M-Ox. AA
R612	VRS-CY1JF123JY	X	12k	1/16W M-Ox. AA
R613	VRS-CY1JF103JY	X	10k	1/16W M-Ox. AA
R614	VRS-RG2HC100J+	X	10	1/2W M-Ox. AB
R615	VRS-RG3DB682J+	X	6.8k	2W M-Ox. AB
R616	VRN-RL3ABR47J+	X	0.47	1W M-Film AB
R618	VRS-RG3DB391J+	X	390	2W M-Ox. AB
R619	VRS-RG3LB562J+	X	5.6k	3W M-Ox. AB
R620	VRS-RG3AB472J+	X	4.7k	1W M-Ox. AB
R622	VRD-RA2BE102JY	X	1k	1/8W Carbon AA
R625	VRN-VV3DB4R7J	X	4.7	2W M-Film AB
R626	VRD-RM2HD470JY	X	47	1/2W Carbon AA
R641	VRN-RL2HCR47J+	X	0.47	1/2W M-Film AB
R651	VRS-CY1JF223JY	X	22k	1/16W M-Ox. AA
R652	VRS-CY1JF102JY	X	1k	1/16W M-Ox. AA
R653	VRS-CY1JF822JY	X	8.2k	1/16W M-Ox. AA
R654	VRS-CY1JF273JY	X	27k	1/16W M-Ox. AA
R655	VRS-CY1JF391JY	X	390	1/16W M-Ox. AA
R656	VRS-CY1JF100JY	X	10	1/16W M-Ox. AA

Ref. No.	Part No.	★	Description	Code
<b>PWB-A: DUNTKA541WEL6</b>				
<b>MAIN UNIT</b>				
<b>RESISTORS</b>				
<b>[M-Ox... Metal Oxide, M-Film ... Metal Film]</b>				
R658	VRD-RA2BE101JY	X	100 1/8W Carbon	AA
R663	VRD-RA2BE101JY	X	100 1/8W Carbon	AA
R701	VRW-KQ3NC3R9K	X	3.9 7W Cement	AC
R704	VRN-SV2HC1R0J	X	1.0 1/2W M-Film	AA
R707	VRS-VV3DB104J	X	100k 2W M-Ox.	AA
R708	VRD-RA2BE681JY	X	1.5k 1/8W Carbon	AA
R709	VRN-RL3DBR47J+	X	0.47 2W M-Film	AB
R710	VRN-RL3DBR39J+	X	0.39 2W M-Film	AB
R711	VRD-RA2BE682JY	X	6.8k 1/8W Carbon	AA
R712	VRD-RA2BE152JY	X	1.5k 1/8W Carbon	AA
R716	VRD-RA2BE562JY	X	5.6k 1/8W Carbon	AA
R751	RR-DZ0049CEZZY	X	3.9M 1/2W Solid	AB
R752	RR-DZ0049CEZZY	X	3.9M 1/2W Solid	AB
R753	VRD-RM2HD124JY	X	120k 1/2W Carbon	AA
R754	VRD-RM2HD150JY	X	15 1/2W Carbon	AA
R755	VRD-RA2BE221JY	X	220 1/8W Carbon	AA
R756	VRD-RM2HD270JY	X	27 1/2W Carbon	AA
R757	VRS-CY1JF151JY	X	150 1/16W M-Ox.	AA
R801	VRS-CY1JF221JY	X	220 1/16W M-Ox.	AA
R802	VRS-CY1JF221JY	X	220 1/16W M-Ox.	AA
R803	VRS-CY1JF221JY	X	220 1/16W M-Ox.	AA
R804	VRS-CY1JF221JY	X	220 1/16W M-Ox.	AA
R805	VRS-CY1JF822JY	X	8.2k 1/16W M-Ox.	AA
R806	VRS-CY1JF123JY	X	12k 1/16W M-Ox.	AA
R807	VRS-CY1JF103JY	X	10k 1/16W M-Ox.	AA
R808	VRS-CY1JF221JY	X	220 1/16W M-Ox.	AA
R809	VRD-RA2BE224JY	X	220k 1/8W M-Ox.	AA
R812	VRS-CY1JF101JY	X	100 1/16W M-Ox.	AA
R813	VRS-CY1JF221JY	X	220 1/16W M-Ox.	AA
R1002	VRS-CY1JF822JY	X	8.2k 1/16W M-Ox.	AA
R1003	VRS-CY1JF562JY	X	5.6k 1/16W M-Ox.	AA
R1006	VRS-CY1JF562JY	X	5.6k 1/16W M-Ox.	AA
R1007	VRS-CY1JF562JY	X	5.6k 1/16W M-Ox.	AA
R1008	VRS-CY1JF822JY	X	8.2k 1/16W M-Ox.	AA
R1009	VRS-CY1JF562JY	X	5.6k 1/16W M-Ox.	AA
R1011	VRS-CY1JF332JY	X	3.3k 1/16W M-Ox.	AA
R1012	VRD-RA2BE391JY	X	390 1/8W Carbon	AA
R1013	VRD-RA2BE101JY	X	100 1/8W Carbon	AA
R1014	VRS-CY1JF101JY	X	100 1/16W M-Ox.	AA
R1015	VRS-CY1JF332JY	X	3.3k 1/16W M-Ox.	AA
R1016	VRS-CY1JF101JY	X	100 1/16W M-Ox.	AA
R1017	VRS-CY1JF332JY	X	3.3k 1/16W M-Ox.	AA
R1019	VRS-CY1JF000JY	X	00 1/16W M-Ox.	AA
R1020	VRS-CY1JF101JY	X	100 1/16W M-Ox.	AA
R1021	VRS-CY1JF183JY	X	18k 1/16W M-Ox.	AA
R1022	VRS-CY1JF101JY	X	100 1/16W M-Ox.	AA
R1023	VRS-CY1JF221JY	X	220 1/16W M-Ox.	AA
R1024	VRS-CY1JF183JY	X	18k 1/16W M-Ox.	AA
R1025	VRS-CY1JF101JY	X	100 1/16W M-Ox.	AA
R1026	VRS-CY1JF224JY	X	220k 1/16W M-Ox.	AA
R1028	VRS-CY1JF101JY	X	100 1/16W M-Ox.	AA
R1032	VRS-CY1JF332JY	X	3.3k 1/16W M-Ox.	AA
R1034	VRS-CY1JF101JY	X	100 1/16W M-Ox.	AA
R1035	VRS-CY1JF332JY	X	3.3k 1/16W M-Ox.	AA
R1036	VRS-CY1JF332JY	X	3.3k 1/16W M-Ox.	AA
R1037	VRS-CY1JF101JY	X	100 1/16W M-Ox.	AA
R1038	VRS-CY1JF101JY	X	100 1/16W M-Ox.	AA
R1039	VRS-CY1JF223JY	X	22k 1/16W M-Ox.	AA
R1040	VRS-CY1JF101JY	X	100 1/16W M-Ox.	AA
R1041	VRS-CY1JF101JY	X	100 1/16W M-Ox.	AA
R1042	VRD-RA2BE471JY	X	470 1/8W Carbon	AA
R1046	VRS-CY1JF101JY	X	100 1/16W M-Ox.	AA

Ref. No.	Part No.	★	Description	Code
<b>SWITCHES</b>				
S1001	QSW-KA003WJZZ+	X	Switch,	AB
S1002	QSW-KA003WJZZ+	X	Switch,	AB
S1003	QSW-KA003WJZZ+	X	Switch,	AB
S1004	QSW-KA003WJZZ+	X	Switch,	AB
S1005	QSW-KA003WJZZ+	X	Switch,	AB
S1006	QSW-K0114CEZZ	X	Switch,	AE
<b>MISCELLANEOUS PARTS</b>				
F701	QFS-C3229CEZZ	X	Fuse,T3.14AL	AC
FB601	RBLN-0091GEZZY	X	Ferrite Bead	AA
FH701	QFSHD1013CEZZ+	X	FUSE CLIP	AB
FH702	QFSHD1014CEZZ+	X	FUSE CLIP	AB
J402	QJAKE0211CE04	X	RCA JACK YELLOW	AB
J403	QJAKE0211CE09	X	RCA JACK WHITE	AB
J404	QJAKE0210CE02	X	RCA Jack red	AB
J409	QJAKG0093CEZZ	X	Rear A/V Terminal Jack	AF
P302	QPLGN0461CEZZ	X	plug (4 PINS)	AA
P601	QPLGN0660CEZZ	X	plug (6 pins)	AC
P602	LHLDW1104PEZZ	X	Holder	AA
P603	QPLGN0361CEZZA	X	plug 3pin (TP651-3)	AB
P701	QPLGN0260CEZZ	X	plug 2pin(M1-2)	AB
P702	QPLGN0269GEZZ	X	plug 2pin(P1-2)	AB
P1001	LHLDW1105PEZZ	X	Holder	AA
P1002	QPLGN0561CEZZ	X	plug (5 pins)	AB
RMC100	RRMCU0222CEZZ	X	R/C Receiver	AF
PRDAR0118GJFW	X	Heat Sink	AD	
PRDAR0120GJFW	X	Heat Sink	AD	
PRDAR0224PEFW	X	Heat Sink	AC	
PRDAR0298PEFW	X	Heat Sink	AD	
LHLDP1066PE00	X	Holder	AB	
LHLDW1104PEZZ	X	Holder	AA	
LHLDW1105PEZZ	X	Holder	AA	
TP201	QLUGP0102PEZZ	X	Test point	AA
<b>PWB-B: DUNTKA542WEA3</b>				
<b>CRT UNIT</b>				
<b>TRANSISTOR</b>				
Q870	RH-TX0110BMZZ+	X	TX0110BM	AB
Q871	RH-TX0110BMZZ+	X	TX0110BM	AB
Q872	RH-TX0110BMZZ+	X	TX0110BM	AB
Q883	RH-TX0124BMZZ+	X	TX0124BM	AB
Q885	RH-TX0124BMZZ+	X	TX0124BM	AB
Q887	RH-TX0124BMZZ+	X	TX0124BM	AB
<b>DIODES</b>				
D881	VHD1SS244//1Y	X	Diode	AA
D882	VHD1SS244//1Y	X	Diode	AA
D883	VHD1SS244//1Y	X	Diode	AA
D884	VHD1SS119//1Y	X	Diode	AA
D885	VHD1SS119//1Y	X	Diode	AA
D886	VHD1SS82//1AY	X	Diode	AB
D887	VHD1SS82//1AY	X	Diode	AB
D888	VHD1SS82//1AY	X	Diode	AB
<b>CAPACITORS</b>				
<b>[EL... Electrolytic, M-Poly... Metallized Polypro Film]</b>				
C871	VCCSCY1HL471JY	X	470p 50V Ceramic	AB
C872	VCCSCY1HL391JY	X	390p 50V Ceramic	AB
C873	VCCSCY1HL471JY	X	470p 50V Ceramic	AB
C875	VCKYPA2HB102K+	X	1000p 500V Ceramic	AA

Ref. No.	Part No.	★	Description	Code
<b>PWB-B: DUNTKA542WEA3</b>				
<b>CRT UNIT</b>				
<b>CAPACITORS</b>				
<b>[EL... Electrolytic, M-Poly... Metalized Polypro Film]</b>				
C876	RC-KZ0150CEZZ	X	1000p 3kV	Ceramic AB
C878	VCEA0A2EW106M+	X	10 250V	EL. AC
C880	VCCSCY1HL471JY	X	470p 50V	Ceramic AB
C881	VCKYPA1HB471K+	X	470p 50V	Ceramic AA
C882	VCKYPA1HB471K+	X	470p 50V	Ceramic AA
C886	VCKYPA2HB102K+	X	1000p 500V	Ceramic AA
<b>RESISTORS</b>				
<b>[M-Ox... Metal Oxide, M-Film ... Metal Film]</b>				
R879	VRS-CY1JF471JY	X	470 1/16W	M-Ox. AA
R880	VRS-CY1JF471JY	X	470 1/16W	M-Ox. AA
R881	VRS-CY1JF471JY	X	470 1/16W	M-Ox. AA
R882	VRS-VV3DB153J	X	15k 2W	M-Ox. AA
R883	VRD-RM2HD272JY	X	2.7k 1/2W	Carbon AA
R884	VRS-VV3DB153J	X	15k 2W	M-Ox. AA
R885	VRD-RM2HD272JY	X	2.7k 1/2W	Carbon AA
R886	VRS-VV3DB153J	X	15k 2W	M-Ox. AA
R887	VRD-RM2HD272JY	X	2.7k 1/2W	Carbon AA
R888	VRS-CY1JF471JY	X	470 1/16W	M-Ox. AA
R892	VRS-CY1JF102JY	X	1k 1/16W	M-Ox. AA
R893	VRS-CY1JF102JY	X	1k 1/16W	M-Ox. AA
R894	VRS-CY1JF102JY	X	1k 1/16W	M-Ox. AA
R898	VRS-CY1JF471JY	X	470 1/16W	M-Ox. AA
R899	VRS-CY1JF471JY	X	470 1/16W	M-Ox. AA
<b>MISCELLANEOUS PARTS</b>				
SC881	QSOCV0840CEZZ	X	SOCKET (CRT)	AD

Ref. No.	Part No.	★	Description	Code
<b>RESISTORS</b>				
<b>[M-Ox... Metal Oxide, M-Film ... Metal Film]</b>				
R3001	VRD-RA2BE221JY	X	220 1/8W	Carbon AA
R3002	VRD-RA2BE221JY	X	220 1/8W	Carbon AA
R3003	VRS-CY1JF105JY	X	1M 1/16W	M-Ox. AA
R3004	VRS-CY1JF104JY	X	100k 1/16W	M-Ox. AA
R3005	VRS-CY1JF623JY	X	62k 1/16W	M-Ox. AA
R3007	VRS-CY1JF332JY	X	3.3k 1/16W	M-Ox. AA
R3008	VRS-CY1JF302JY	X	3k 1/16W	M-Ox. AA
R3010	VRS-CY1JF392JY	X	3.9k 1/16W	M-Ox. AA
R3011	VRS-CY1JF102JY	X	1k 1/16W	M-Ox. AA
R3012	VRS-CY1JF102JY	X	1k 1/16W	M-Ox. AA
R3013	VRS-CY1JF102JY	X	1k 1/16W	M-Ox. AA
R3014	VRS-CY1JF102JY	X	1k 1/16W	M-Ox. AA
R3015	VRD-RA2BE101JY	X	100 1/8W	Carbon AA
R3022	VRD-RA2BE560JY	X	56 1/8W	Carbon AA
R3023	VRD-RM2HD5R6JY	X	5.6 1/2W	Carbon AA
R3025	VRS-CY1JF333JY	X	33k 1/16W	M-Ox. AA
<b>PLUG'S</b>				
P3001	QPLGZ0810CEZZ	X	plug 32"	AD
P3002	QPLGZ0810CEZZ	X	plug 32"	AD
P3003	QPLGZ0810CEZZ	X	plug 32"	AD

## PWB-C: DUNTKA545WEA0

### MTS UNIT

<b>INTEGRATED CIRCUITS</b>				
IC3001	VHICXA2074Q-1Y	X	CXA2074Q	AR
IC3002	VHIMM1501XN-1Y	X	MM1501XN	AD
<b>TRANSISTOR</b>				
Q3003	VS2SC3198-G-1+	X	2SC3198-G	AB
<b>DIODE</b>				
D3001	RH-EX0632GEZZY	X	Zener Diode	9.59 V AB
<b>CAPACITORS</b>				
<b>[EL... Electrolytic, M-Poly... Metalized Polypro Film]</b>				
C3001	VCE9GA1HW475M+	X	4.7 50V	EL. AB
C3002	VCKYCY1HB562KY	X	5600p 50V	Ceramic AA
C3003	VCQYTA1HM123J+	X	0.012 50V	Mylar AA
C3004	VCEA0A1HW105M+	X	1 50V	EL. AA
C3005	VCEA9A1HW475M+	X	4.7 50 V	EL. AB
C3006	VCEA0A1CW106M+	X	10 16V	EL. AA
C3007	VCEA0A1HW475M+	X	4.7 50V	EL. AA
C3008	VCKYCY1HF103ZY	X	0.01 50V	Ceramic AA
C3009	VCEA0A1CW227M+	X	220 16V	EL. AB
C3010	VCE9GA1HW475M+	X	4.7 50V	EL. AB
C3011	VCEA0A1HW475M+	X	4.7 50V	EL. AA
C3012	VCE9GA1HW475M+	X	4.7 50V	EL. AB
C3013	VCKYCY1HB272KY	X	2700p 50V	Ceramic AA
C3014	VCQYTA1HM473J+	X	0.047 50V	Mylar AA
C3015	VCEACA1HC335K+	X	3.3 50V	EL. AC
C3016	VCE9GA1HW475M+	X	4.7 50V	EL. AB
C3017	VCEACA1CC106K+	X	10 16V	EL. AC
C3018	VCEA0A1HW105M+	X	1 50V	EL. AA
C3019	VCEA0A1CW106M+	X	10 16V	EL. AA
C3020	VCEA0A1CW106M+	X	10 16V	EL. AA
C3021	VCEA0A1CW106M+	X	10 16V	EL. AA
C3022	VCEA0A1CW106M+	X	10 16V	EL. AA
C3031	VCEA0A1CW106M+	X	10 16V	EL. AA

Ref. No.	Part No.	★ Description	Code
----------	----------	---------------	------

## MISCELLANEOUS PARTS

ACC701	QACCZA020WJPZ	X AC Cord	AG
SP301	VSP9050PB394A	X speaker	AG
SP302	VSP9050PB394A	X speaker	AG
LHLDK0012PEZZ	X AC Cord holder	AB	
LHLDW1009PEZZ	X Purse lock	AA	
LHLDW1033PEZZ	X Wire tie (10.4 CM)	AA	
LHLDW1060CEZZ	X Purse lock	AB	
LHLDZ0063PEZZ	X Insulator ring	AB	
LX-TZ0104GJFD	X Screw (CRT)	AC	
LX-WZ0102GJFD	X TV washer (1.01)	AB	
LHLDW1070PEKZ	X holder clamp u	AB	
QCNW-2562PEZZ	X Wire (speaker)	AE	
QCNW-2619PEZZ	X Connecting Cord	AC	
QCNW-2620PEZZ	X Connecting Cord	AC	

## SUPPLIED ACCESORIES

RRMCG1639CESA	X Infrared R-C Unit	AT
TINS-B218WJZZ	X operation manual	AG
RUNTK0690CEZZ	X ANTENNA ADAPTOR	AK
TLABM0005GJZZ	X Model Label	AC
TLABN0101GJZZ	X Remark label	AA
TCAUS3000GJZZ	X Caution label	AA

Ref. No.	Part No.	★ Description	Code
----------	----------	---------------	------


## PACKING PARTS (NOT REPLACEMENT ITEM)

SPAKCB305WJZZ	X Packing case	AT
SPAKP0102GJZZ	X Lamifoam	AE
SPAKX0124GJZZ	X Packing Foam	AM
SSAKA0101GJZZ	X Plastic bag	AB


## CABINET PARTS

1	CCABAA010WEH4	X Front Cabinet Ass'y	BE
1-1	<b>Not Available</b>	— Front Cabinet	—
1-2	HBDGB1001GJSB	X Badge	AD
1-3	GCOVA0110GJSA	X Cover	AM
1-4	JBTN-0113GJSD	X Button (power)	AK
1-5	MSPRC0005PEFW	X spring	AA
1-6	JBTN-0114GJSD	X Button (control)	AK
2	GCABB0129GJKA	X Rear Cabinet	AY

## CABINET PARTS LOCATION

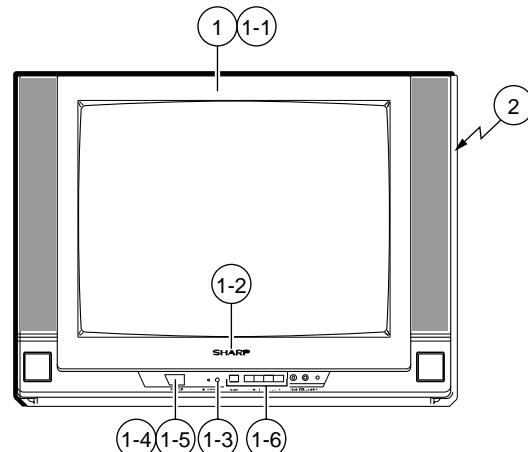

# PACKING OF THE SET

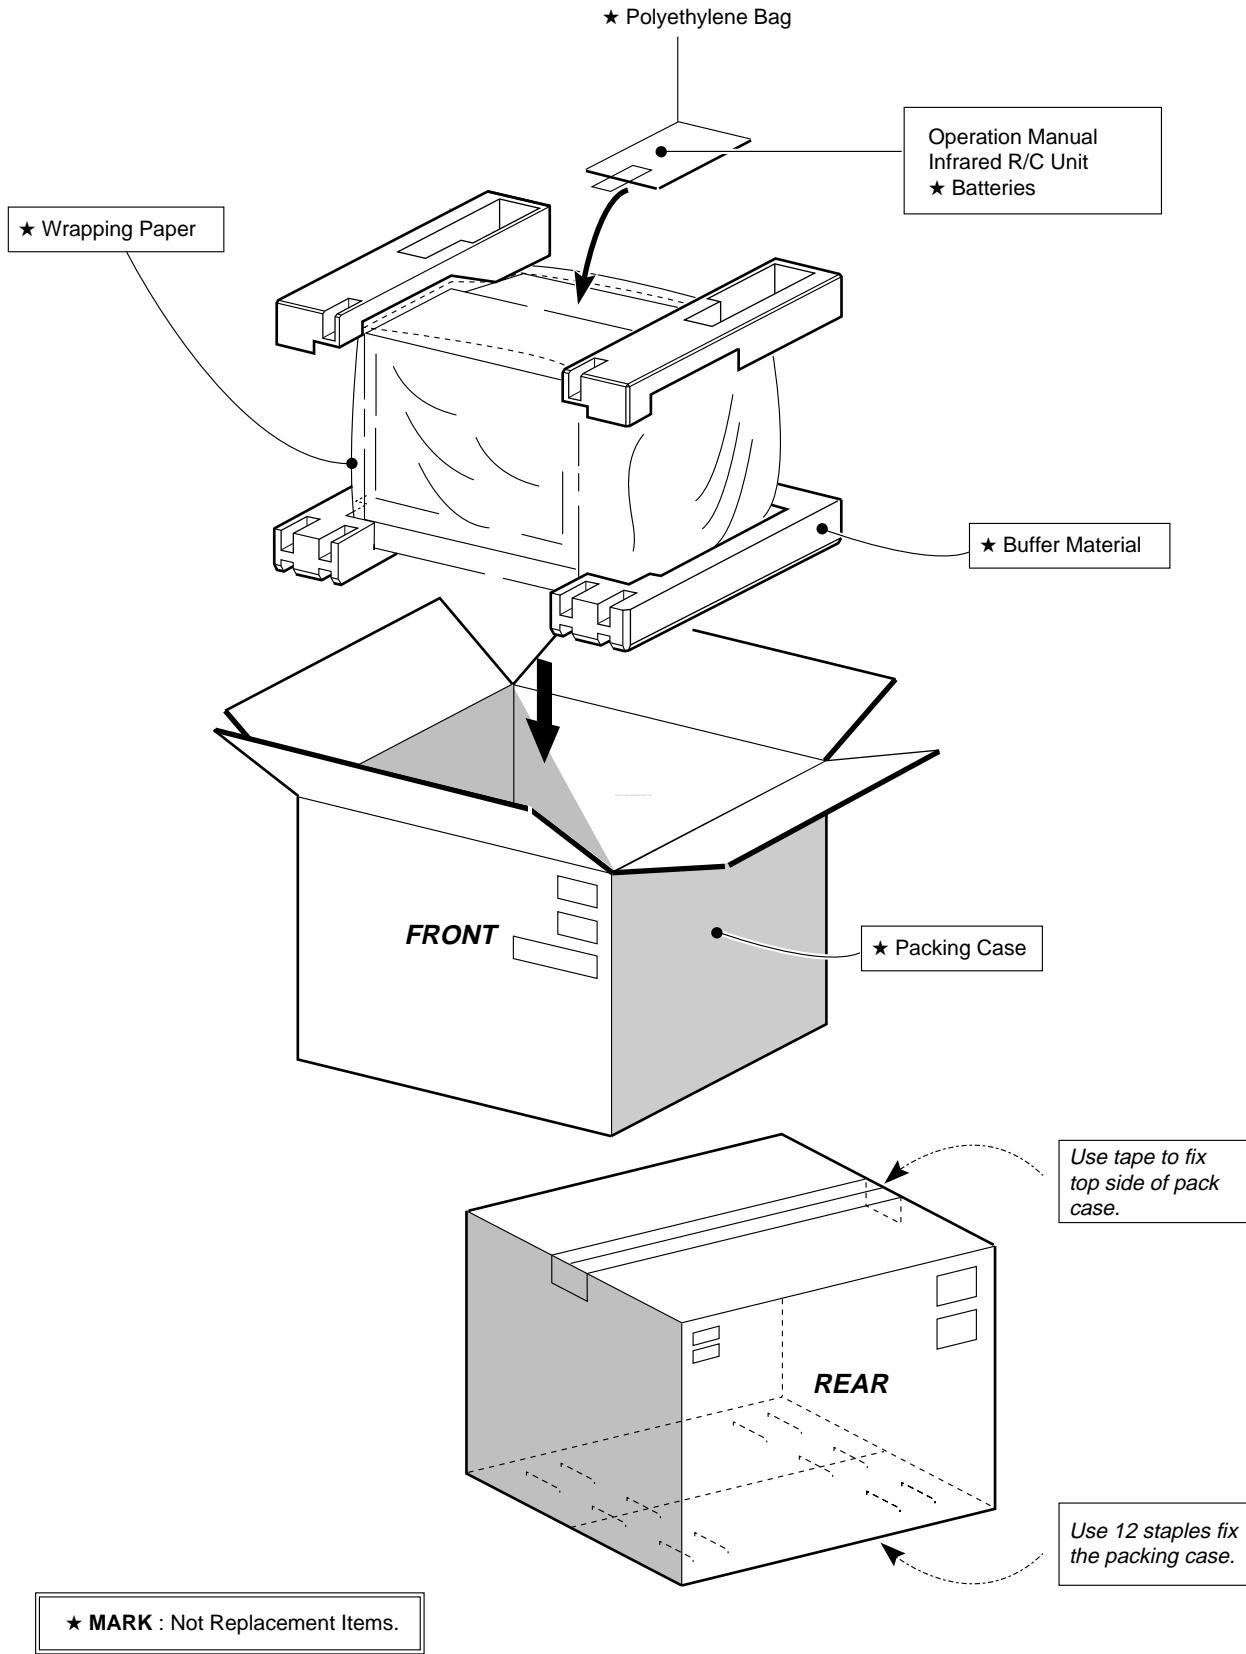

# SHARP

**COPYRIGHT © 2004 BY SHARP CORPORATION**

**ALL RIGHTS RESERVED.**

No part of this publication may be reproduced,  
stored in a retrieval system, or transmitted in  
any form or by any means, electronic, mechanical,  
photocopying, recording, or otherwise, without  
prior written permission of the publisher.

QRC0009-L  
August. 2004  
Modify : SEMEX

Design and Production Information
Design : SEM
Production : SEMEX

J B

SHARP ELECTRONICA MEXICO S. A. DE C. V.  
Quality & Reliability Control Center  
Blvd. SHARP No. 3510 Parque Industrial Rosarito  
Playas de Rosarito, México B. C. 22710