

CDX-GT610U/GT616U/ GT617UE

SERVICE MANUAL

Ver. 1.1 2007.03

AEP Model

UK Model

CDX-GT610U/GT616U

East European Model

CDX-GT617UE



(Photo: CDX-GT610U)

- The tuner and CD sections have no adjustments.

Model Name Using Similar Mechanism	CDX-GT410U/GT414U
CD Drive Mechanism Type	MG-101U-188//Q
Optical Pick-up Name	DAX-25A

SPECIFICATIONS

CD player section

Signal-to-noise ratio 120 dB
 Frequency response 10 – 20,000 Hz
 Wow and flutter Below measurable limit

Tuner section

FM

Tuning range CDX-GT610U/GT616U:
 87.5 – 108.0 MHz
 CDX-GT617UE:
 FM1/FM2: 87.5 – 108.0 MHz (at 50 kHz step)
 FM3: 65 – 74 MHz (at 30 kHz step)

Antenna terminal External antenna connector
 Intermediate frequency 10.7 MHz/450 kHz
 Usable sensitivity 9 dBf
 Selectivity 75 dB at 400 kHz
 Signal-to-noise ratio 67 dB (stereo), 69 dB (mono)
 Harmonic distortion at 1 kHz

0.5% (stereo), 0.3% (mono)
 Separation 35 dB at 1 kHz
 Frequency response 30 – 15,000 Hz

MW/LW

Tuning range MW: 531 – 1,602 kHz
 LW: 153 – 279 kHz
 Antenna terminal External antenna connector
 Intermediate frequency 10.7 MHz/450 kHz
 Sensitivity MW: 30 μV, LW: 40 μV

USB player section

Interface USB (Full-speed)
 Maximum current 500 mA

Power amplifier section

Outputs Speaker outputs (sure seal connectors)
 Speaker impedance 4 – 8 ohms
 Maximum power output 50 W × 4 (at 4 ohms)

– Continued on next page –

FM/MW/LW COMPACT DISC PLAYER

9-887-473-02
 2007C04-1
 © 2007.03

Sony Corporation
 eVehicle Division
 Published by Sony Techno Create Corporation

SONY®

CDX-GT610U/GT616U/GT617UE

General

Outputs	Audio outputs terminal (front/rear) Subwoofer output terminal (mono) Power antenna relay control terminal Power amplifier control terminal
Inputs	Telephone ATT control terminal Illumination control terminal BUS control input terminal BUS audio input terminal/AUX IN terminal Remote controller input terminal Antenna input terminal
Tone controls	Low: ±10 dB at 60 Hz (XPLOD) Mid: ±10 dB at 1 kHz (XPLOD) High: ±10 dB at 10 kHz (XPLOD)
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 178 × 50 × 180 mm (7 1/8 × 2 × 7 1/8 in.) (w/h/d)
Mounting dimensions	Approx. 182 × 53 × 162 mm (7 1/4 × 2 1/8 × 6 1/2 in.) (w/h/d)
Mass	Approx. 1.3 kg (3 lb. 5 oz.)
Supplied accessories	Card remote commander: RM-X151 Parts for installation and connections (1 set)

Design and specifications are subject to change without notice.

US and foreign patents licensed from Dolby Laboratories.

SERVICE NOTES

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

Notes on Chip Component Replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

TEST DISCS

Please use the following test discs for the check on the CD section.


YDES-18 (Part No. 3-702-101-01)

PATD-012 (Part No. 4-225-203-01)

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

If the optical pick-up block is defective, please replace the whole optical pick-up block.
Never turn the semi-fixed resistor located at the side of optical pick-up block.

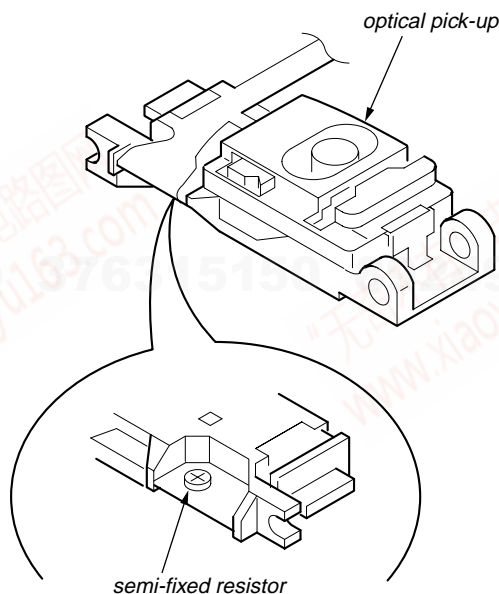

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

This compact disc player is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the exterior.



This label is located on the bottom of the chassis.

• CD playback

You can play CD-DA (also containing CD TEXT*), CD-R/CD-RW (MP3/WMA/AAC files also containing Multi Session) and ATRAC CD (ATRAC3 and ATRAC3plus format).


Type of discs	Label on the disc
CD-DA	
MP3 WMA AAC ATRAC CD	

* A CD TEXT disc is a CD-DA that includes information such as disc, artist and track name.

EXTENSION CABLE AND SERVICE POSITION

When repairing or servicing this set, connect the jig (extension cable) as shown below.

- Connect the MAIN board (CN350) and the SERVO board (CN2) with the extension cable (Part No. J-2502-076-1).

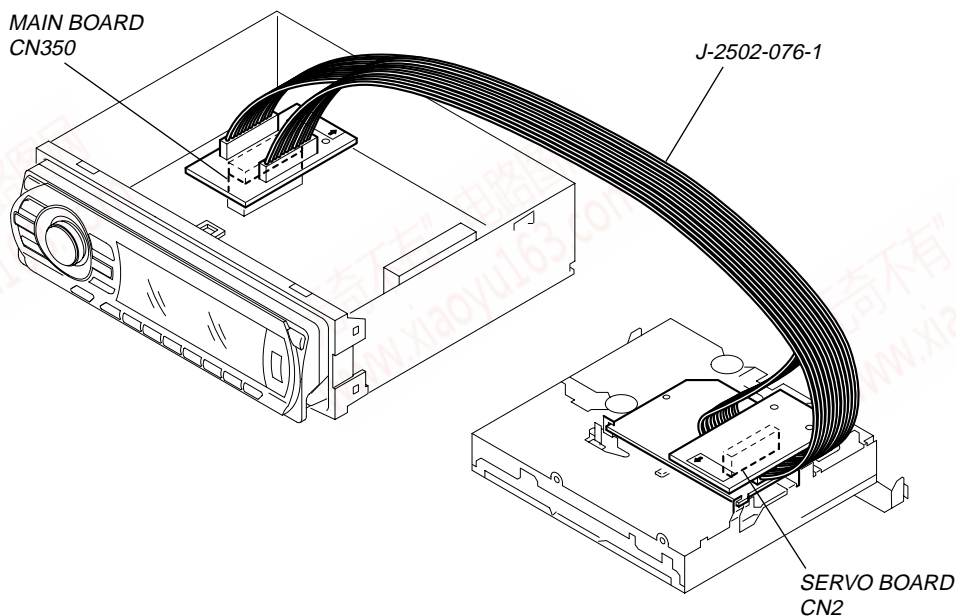

● UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead. (Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size.)

LF : LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40°C higher than ordinary solder. Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time. Soldering irons using a temperature regulator should be set to about 350°C. Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity. Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder. It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

CDX-GT610U/GT616U/GT617UE

Ver. 1.1


NOTE FOR REPLACEMENT OF THE SERVO BOARD

When repairing, the complete SERVO board (A-1206-357-A) should be replaced since any parts in the SERVO board cannot be repaired.

NOTE FOR REPLACEMENT OF THE USB CONNECTOR (J11)

To replace the USB connector requires alignment.

1. Insert the USB connector into the front panel.
2. Place the KEY board on the front panel and align the terminals of the USB connector with the holes in the KEY board.
3. Solder the four terminals of the connector.

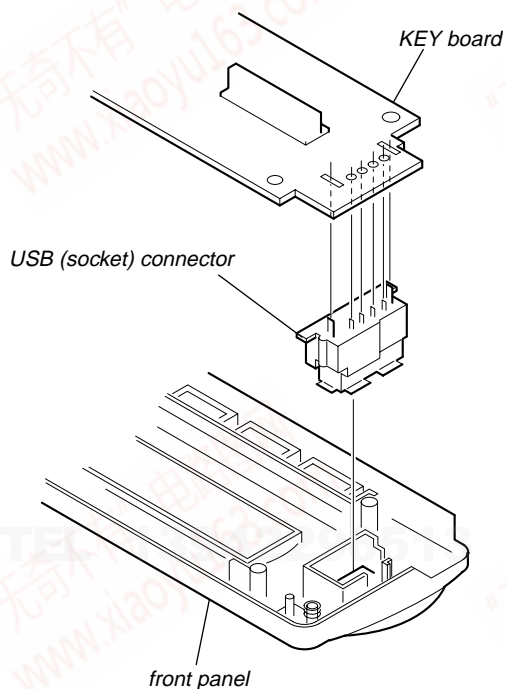

NOTE FOR THE 20-PIN CONNECTOR (CN901)

Do not use alcohol to clean the 20-pin connector (CN901) connecting the front panel with the main body.

Do not touch the connector directly with your bare hand. Poor contact may be caused.

TABLE OF CONTENTS

1. GENERAL	
Location of Controls	5
Connections	6
2. DISASSEMBLY	
2-1. Sub Panel Assy	11
2-2. CD Mechanism Block	11
2-3. Main Board	12
2-4. Servo Board	12
2-5. Chassis (T) Sub Assy	13
2-6. Roller Arm Assy	13
2-7. Chassis (OP) Assy	14
3. DIAGNOSIS FUNCTION	15
4. DIAGRAMS	
4-1. Block Diagram –Main Section–	19
4-2. Block Diagram –Display Section–	20
4-3. Printed Wiring Board –Main Section–	22
4-4. Schematic Diagram –Main Section (1/3)–	23
4-5. Schematic Diagram –Main Section (2/3)–	24
4-6. Schematic Diagram –Main Section (3/3)–	25
4-7. Printed Wiring Board –Sub Section–	26
4-8. Schematic Diagram –Sub Section–	27
4-9. Printed Wiring Board –Key Section–	28
4-10. Schematic Diagram –Key Section–	29
5. EXPLODED VIEWS	
5-1. Main Section	33
5-2. Front Panel Section	34
5-3. CD Mechanism Section (MG-101U-188//Q)	35
6. ELECTRICAL PARTS LIST	36


SECTION 1
GENERAL

This section is extracted from instruction manual.


• LOCATION OF CONTROLS
• CDX-GT610U/GT616U

Location of controls and basic operations


Main unit

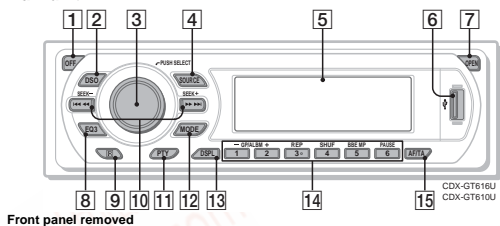

Front panel removed

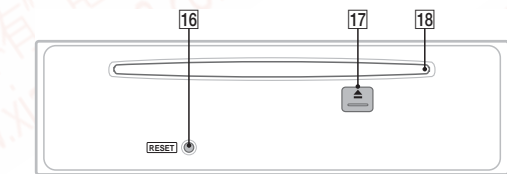

Card remote commander
RM-X151

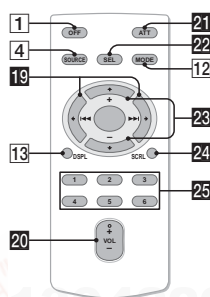

Refer to the pages listed for details. The corresponding buttons on the card remote commander control the same functions as those on the unit.

- 1 **OFF button**
To power off; stop the source.
- 2 **DSO button 4**
To select the DSO mode (1, 2, 3 or OFF). The larger the number, the more enhanced the effect.
- 3 **Volume control dial/select button 12**
To adjust volume (rotate); select setup items (press and rotate).
- 4 **SOURCE button**
To power on; change the source (Radio/CD/MD*/USB/AUX).
- 5 **Display window**
- 6 **USB terminal 11**
To connect to the USB device.
- 7 **OPEN button 5**

6

- 8 **EQ3 (equalizer) button 12**
To select an equalizer type (XPLOD, VOCAL, EDGE, CRUISE, SPACE, GRAVITY, CUSTOM or OFF).
- 9 **Receptor for the card remote commander**
- 10 **SEEK +/- buttons**
CD/MD*/USB*:
To skip tracks (press); skip tracks continuously (press, then press again within about 1 second and hold); reverse/fast-forward a track (press and hold).
Radio:
To tune in stations automatically (press); find a station manually (press and hold).
- 11 **PTY (Program Type) button 10**
To select PTY in RDS.
- 12 **MODE button 8, 11, 13**
To select the radio band (FM/MW/LW); select the unit*; select the play mode**.
- 13 **DSPL (display) button 8, 9, 11**
To change display items.
- 14 **Number buttons**
CD/MD*/USB*:
① ②: **GP*/ALBM** +/-**
To skip albums (press); skip albums continuously (press and hold).**
③: **REP 8, 11, 13**
④: **SHUF 8, 11, 13**
⑤: **BBE MP** 2**
To activate the BBE MP function, set "BBE MP-ON." To cancel, set "BBE MP-OFF."
⑥: **PAUSE****
To pause playback. To cancel, press again.
Radio:
To receive stored stations (press); store stations (press and hold).
- 15 **AF (Alternative Frequencies)/TA (Traffic Announcement) button 9**
To set AF and TA in RDS.
- 16 **RESET button 4**
- 17 **(eject) button 5**
To eject the disc.
- 18 **Disc slot 5**
To insert the disc.

The following buttons on the card remote commander have also different buttons/functions from the unit. Remove the insulation film before use (page 4).


- 19 **◀ (←) (→) ▶ buttons**
To control CD/radio/MD/USB, the same as (SEEK) +/- on the unit.
 - 20 **VOL (volume) +/- button**
To adjust volume.
 - 21 **ATT (attenuate) button**
To attenuate the sound. To cancel, press again.
 - 22 **SEL (select) button**
The same as the select button on the unit.
 - 23 **↑ (+) ↓ (-) buttons**
To control CD, the same as ①/② (GP/ALBM +/-) on the unit.
 - 24 **SCRL (scroll) button 8, 11**
To scroll the display item.
 - 25 **Number buttons**
To receive stored stations (press); store stations (press and hold).
- *1 When an MD changer is connected.
*2 When a USB device is connected.
*3 When a CD/MD changer is connected.
*4 When an ATRAC Audio Device is connected.
*5 When an ATRAC CD is played.
*6 When an MP3/WMA/AAC is played.
*7 If the changer/USB is connected, the operation is different; see page 13.
*8 When playing back on this unit and a USB device.
- Notes**
- When ejecting/inserting a disc, keep any USB devices disconnected to avoid damage to the disc.
 - If the unit is turned off and the display disappears, it cannot be operated with the card remote commander unless (SOURCE) on the unit is pressed, or a disc is inserted to activate the unit first.
- Tip**
For details on how to replace the battery, see "Replacing the lithium battery of the card remote commander" on page 17.
- About USB cap**
When not using the USB terminal (6), use the supplied USB cap to prevent dust or dirt entering. Keep the USB cap out of the reach of children to prevent accidental swallowing.

7


• CDX-GT617UE

Location of controls and basic operations


Main unit

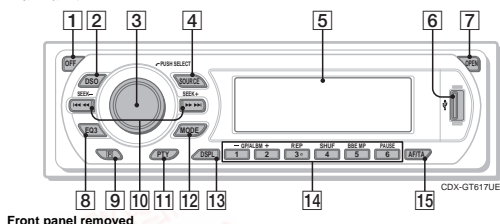

Front panel removed

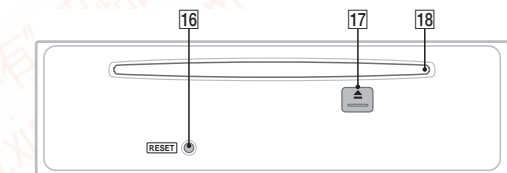

Card remote commander
RM-X151

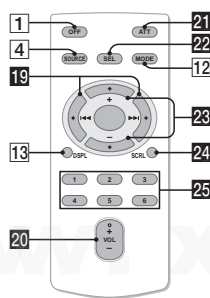

Refer to the pages listed for details. The corresponding buttons on the card remote commander control the same functions as those on the unit.

- 1 **OFF button**
To power off; stop the source.
- 2 **DSO button 4**
To select the DSO mode (1, 2, 3 or OFF). The larger the number, the more enhanced the effect.
- 3 **Volume control dial/select button 12**
To adjust volume (rotate); select setup items (press and rotate).
- 4 **SOURCE button**
To power on; change the source (Radio/CD/MD*/USB/AUX).
- 5 **Display window**
- 6 **USB terminal 11**
To connect to the USB device.
- 7 **OPEN button 5**

6

- 8 **EQ3 (equalizer) button 12**
To select an equalizer type (XPLOD, VOCAL, EDGE, CRUISE, SPACE, GRAVITY, CUSTOM or OFF).
- 9 **Receptor for the card remote commander**
- 10 **SEEK +/- buttons**
CD/MD*/USB*:
To skip tracks (press); skip tracks continuously (press, then press again within about 1 second and hold); reverse/fast-forward a track (press and hold).
Radio:
To tune in stations automatically (press); find a station manually (press and hold).
- 11 **PTY (Program Type) button 10**
To select PTY in RDS.
- 12 **MODE button 8, 11, 13**
To select the radio band (FM/MW/LW); select the unit*; select the play mode**.
- 13 **DSPL (display) button 8, 9, 11**
To change display items.
- 14 **Number buttons**
CD/MD*/USB*:
① ②: **GP*/ALBM** +/-**
To skip albums (press); skip albums continuously (press and hold).**
③: **REP 8, 11, 13**
④: **SHUF 8, 11, 13**
⑤: **BBE MP** 2**
To activate the BBE MP function, set "BBE MP-ON." To cancel, set "BBE MP-OFF."
⑥: **PAUSE****
To pause playback. To cancel, press again.
Radio:
To receive stored stations (press); store stations (press and hold).
- 15 **AF (Alternative Frequencies)/TA (Traffic Announcement) button 9**
To set AF and TA in RDS.
- 16 **RESET button 4**
- 17 **(eject) button 5**
To eject the disc.
- 18 **Disc slot 5**
To insert the disc.


The following buttons on the card remote commander have also different buttons/functions from the unit. Remove the insulation film before use (page 4).

- 19 **◀ (←) (→) ▶ buttons**
To control CD/radio/MD/USB, the same as (SEEK) +/- on the unit.
 - 20 **VOL (volume) +/- button**
To adjust volume.
 - 21 **ATT (attenuate) button**
To attenuate the sound. To cancel, press again.
 - 22 **SEL (select) button**
The same as the select button on the unit.
 - 23 **↑ (+) ↓ (-) buttons**
To control CD, the same as ①/② (GP/ALBM +/-) on the unit.
 - 24 **SCRL (scroll) button 8, 11**
To scroll the display item.
 - 25 **Number buttons**
To receive stored stations (press); store stations (press and hold).
- *1 When an MD changer is connected.
*2 When a USB device is connected.
*3 When a CD/MD changer is connected.
*4 When an ATRAC Audio Device is connected.
*5 When an ATRAC CD is played.
*6 When an MP3/WMA/AAC is played.
*7 If the changer/USB is connected, the operation is different; see page 13.
*8 When playing back on this unit and a USB device.
- Notes**
- When ejecting/inserting a disc, keep any USB devices disconnected to avoid damage to the disc.
 - If the unit is turned off and the display disappears, it cannot be operated with the card remote commander unless (SOURCE) on the unit is pressed, or a disc is inserted to activate the unit first.
- Tip**
For details on how to replace the battery, see "Replacing the lithium battery of the card remote commander" on page 17.
- About USB cap**
When not using the USB terminal (6), use the supplied USB cap to prevent dust or dirt entering. Keep the USB cap out of the reach of children to prevent accidental swallowing.

7

CDX-GT610U/GT616U/GT617UE

- CONNECTIONS
- CDX-GT610U/GT616U

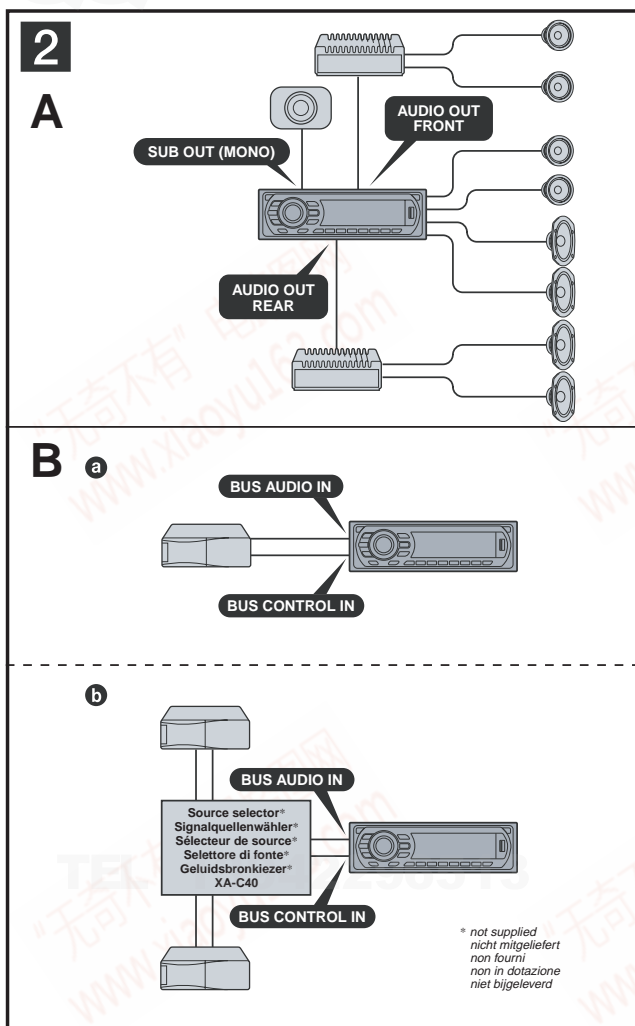

Connection example 2

- Notes (2-A)**
- Be sure to connect the ground (earth) lead before connecting the amplifier.
 - The alarm will only sound if the built-in amplifier is used.

Tip (2-B-6)
For connecting two or more CD/MD changers, the source selector XA-C40 (not supplied) is necessary.

Anschlussbeispiel 2

- Hinweise (2-A)**
- Schließen Sie unbedingt zuerst das Massekabel an, bevor Sie den Verstärker anschließen.
 - Der Warnton wird nur ausgegeben, wenn der integrierte Verstärker verwendet wird.

Tipp (2-B-6)
Zum Anschließen von zwei oder mehr CD/MD-Wechslern wird der Signalquellenwähler XA-C40 (nicht mitgeliefert) benötigt.

Exemple de raccordement 2

- Remarques (2-A)**
- Raccordez d'abord le câble de mise à la masse avant de connecter l'amplificateur.
 - L'alarme est émise uniquement lorsque l'amplificateur intégré est utilisé.

Conseil (2-B-6)
Dans le cas du raccordement de deux changeurs de CD/MD ou plus, le sélecteur de source XA-C40 (non fourni) est indispensable.

Esempio di collegamento 2


- Note (2-A)**
- Assicurarsi di collegare il cavo di terra prima di collegare l'apparecchio all'amplificatore.
 - L'allarme viene emesso solo se è in uso l'amplificatore incorporato.

Suggerimento (2-B-6)
Per collegare due o più cambia CD/MD, occorre utilizzare il selettore di fonte XA-C40 (non in dotazione).

Voorbeeldaansluitingen 2

- Opmerkingen (2-A)**
- Sluit eerst de aarddraad aan voordat u de versterker aansluit.
 - U hoort de pieptoon alleen als de ingebouwde versterker wordt gebruikt.

Tip (2-B-6)
Om twee of meer CD/MD-wisselaars aan te sluiten, hebt u de geluidsbronkiezer XA-C40 (niet bijgeleverd) nodig.

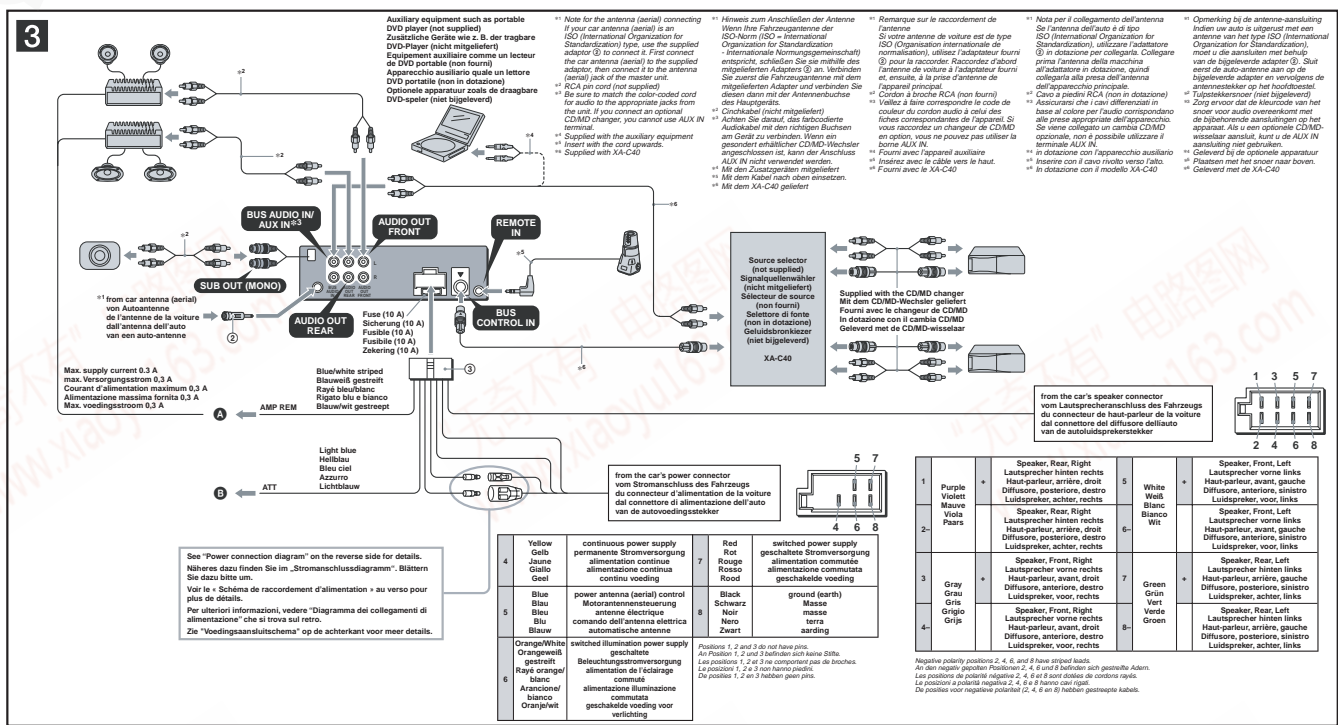

Connection diagram 3

- To AMP REMOTE IN of an optional power amplifier. This connection is only for amplifiers. Connecting any other system may damage the unit.
- To the interface cable of a car telephone

Warning

If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power connecting lead (Q) may damage the antenna (aerial).

Notes on the control power and supply leads

- The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.
- When your car has built-in FM/MLW antenna (aerial) in the rear-side glass, connect the power antenna (aerial) control lead (blue) or the accessory power supply lead (red) to the power terminal of the existing antenna (aerial) booster. For details, consult your dealer.
- A power antenna (aerial) without a relay box cannot be used with this unit.

Memory lock connection
When the yellow power supply lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Notes on speaker connection

- Before connecting the speakers, turn the unit off.
- Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid its damage.
- Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
- Do not connect the ground (earth) lead of this unit to the negative (-) terminal of the speaker.
- Do not attempt to connect the speakers in parallel.
- Connect only passive speakers. Connecting active speakers (with built-in amplifier) to the speaker terminals may damage the unit.
- To avoid a malfunction, do not use the built-in speaker leads installed in your car if the unit shares a common negative (-) lead for the right and left speakers.
- Do not connect the unit's speaker leads to each other.

Note on connection
If speaker and amplifier are not connected correctly, "FAILURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Anschlussdiagramm 3

- An AMP REMOTE IN des optionalen Endverstärkers. Dieser Anschluss ist ausschließlich für Verstärker gedacht. Schließen Sie nichts anderes daran an. Andernfalls kann das Gerät beschädigt werden.
- An Schnittstellenkabel eines Autorufens

Warning

Wenn Sie eine Motorantenne ohne Relaiskästchen verwenden, kann durch Anschließen dieses Geräts mit dem mitgelieferten Stromversorgungs-kabel (Q) die Antenne beschädigt werden.

Hinweise zu den Steuer- und Stromversorgungsleitungen

- Die Motorantennen-Steuerung (blau) liefert +12 V Gleichstrom, wenn Sie den Tuner einschalten oder die AF (Alternativfrequenz) oder die TA-Funktion (Verkehrsdurchsagen) aktivieren.
- Wenn das Fahrzeug mit einer im Heck-/Seitenfensterglas integrierten FM (UKW)/MLWV-Antenne ausgestattet ist, schließen Sie die Motorantennen-Steuerung (blau) oder die Zubehörspeiserleitung (rot) an den Stromversorgungsanschluss des vorhandenen Antennenverstärkers an. Näheres dazu erfahren Sie bei Ihrem Händler.
- Es kann nur eine Motorantenne mit Relaiskästchen angeschlossen werden.

Stromversorgung des Speichers
Wenn die gelbe Stromversorgungsleitung angeschlossen ist, wird der Speicher stets (auch bei ausgeschalteter Zündung) mit Strom versorgt.

Hinweise zum Lautsprecheranschluss

- Schalten Sie das Gerät aus, bevor Sie die Lautsprecher anschließen.
- Verwenden Sie Lautsprecher mit einer Impedanz zwischen 4 und 8 Ohm und ausreichender Belastbarkeit. Ansonsten können die Lautsprecher beschädigt werden.
- Verbinden Sie die Lautsprecheranschlüsse nicht mit dem Wagenchassis und verbinden Sie auch nicht die Anschlüsse des rechten mit denen des linken Lautspechters.
- Verbinden Sie nicht Lautsprecher parallel.
- An die Lautsprecheranschlüsse dieses Geräts dürfen nur Passivlautsprecher angeschlossen werden. Schließen Sie keine Aktivlautsprecher (Lautsprecher mit eingebautem Verstärker) an, da das Gerät sonst beschädigt werden könnte.
- Um Fehlfunktionen zu vermeiden, verwenden Sie nicht die im Fahrzeug installierten, integrierten Lautsprecherleitungen, wenn am Ende eine gemeinsame negative (-) Leitung für den rechten und den linken Lautsprecher verwendet wird.
- Verbinden Sie nicht die Lautsprecherkabel des Geräts miteinander.

Hinweis zum Anschließen
Wenn Lautsprecher und Verstärker nicht richtig angeschlossen sind, erscheint "FAILURE" im Display. Verweisen Sie sich in diesem Fall, dass Lautsprecher und Verstärker richtig angeschlossen sind.

Schémas de raccordement 3

- Au niveau de AMP REMOTE IN d'un amplificateur de puissance facultatif. Ce raccordement est réservé aux amplificateurs. Le raccordement à tout autre système peut endommager l'appareil.
- Le vers le cordon de liaison d'un téléphone de voiture

Avertissement

Si vous disposez d'une antenne électrique sans boîtier de relais, le branchement de cet appareil au moyen du cordon d'alimentation fourni (Q) risque d'endommager l'antenne.

Remarques sur les câbles de commande et d'alimentation

- Le câble de commande (bleu) fournit du courant continu de +12 V lorsque vous mettez le tuner sous tension ou lorsque vous activez la fonction AF (fréquence alternative) ou TA (informations de circulation).
- Lorsque votre voiture est équipée d'une antenne FM/MLWV (PO) intégrée dans la vitre arrière latérale, raccordez le câble de commande d'antenne (bleu) ou l'ensemble d'alimentation des accessoires (rouge) au bornier de l'amplificateur d'antenne existant. Pour plus de détails, consultez votre revendeur.
- Une antenne électrique sans boîtier de relais ne peut pas être utilisée avec cet appareil.

Raccordement pour la conservation de la mémoire
Lorsque le câble de commande d'antenne est connecté, le circuit de la mémoire est alimenté en permanence même si la clé de contact est en position d'arrêt.

Remarques sur le raccordement des haut-parleurs

- Avant de raccorder les haut-parleurs, mettez l'appareil hors tension.
- Utilisez des haut-parleurs ayant une impédance de 4 à 8 ohms et une capacité adéquate sous peine de les endommager.
- Ne pas raccorder les bornes du système des haut-parleurs au châssis de la voiture et ne pas connecter les bornes du haut-parleur droit à celles du haut-parleur gauche.
- Ne pas raccorder le câble de mise à la masse de cet appareil à la borne négative (-) du haut-parleur.
- Ne pas tenter de raccorder les haut-parleurs en parallèle.
- Connecter uniquement des haut-parleurs passifs. La connexion de haut-parleurs actifs (avec des amplificateurs intégrés) aux bornes des haut-parleurs pourrait endommager l'appareil.
- Pour éviter tout problème de fonctionnement, n'utilisez pas les câbles des haut-parleurs intégrés installés dans votre voiture si l'appareil dispose d'un câble négatif commun (-) pour les haut-parleurs droit et gauche.
- Ne raccordez pas entre eux les cordons des haut-parleurs de l'appareil.

Remarque sur le raccordement
Si les enceintes et l'amplificateur ne sont pas raccordés correctement, le message "FAILURE" s'affiche. Dans ce cas, assurez-vous que les enceintes et l'amplificateur sont raccordés correctement.

Schema di collegamento 3

- A AMP REMOTE IN di un amplificatore di potenza opzionale. Questo collegamento è riservato esclusivamente agli amplificatori. Non collegare un tipo di sistema diverso oltrevie di causare danni all'apparecchio.
- Al cavo di interfaccia di un telefono per auto

Avvertenza

Quando si collega l'antenna elettrica senza boîtier di relais, il branchamento di questo apparecchio all'antenna elettrica se questo non dispone di scatola a relai.

Note sui cavi di controllo e di alimentazione

- Il cavo (blu) di controllo dell'antenna elettrica fornisce alimentazione pari a +12 V CC quando si attiva il sintonizzatore oppure la funzione TA (notiziario sui traffici) o AF (frequenza alternativa).
- Se l'automobile è dotata di antenna FM/MLWV incorporata nel vetro posteriore laterale, collegare il cavo (blu) di controllo dell'antenna elettrica o il cavo (rosso) di ingresso dell'alimentazione accessoria al terminale di alimentazione del preamplificatore dell'antenna esistente. Per ulteriori informazioni, consultare il proprio fornitore.
- Non è possibile usare un'antenna elettrica senza scatola a relai con questo apparecchio.

Collegamento per la conservazione della memoria
Quando il cavo di ingresso alimentazione giallo è collegato, viene sempre fornita alimentazione al circuito di memoria anche quando l'interruttore di accensione è spento.

Note sul collegamento dei diffusori

- Prima di collegare i diffusori spegnere l'apparecchio.
- Usare diffusori di impedenza compresa tra 4 e 8 ohm e con capacità di potenza adeguata, altrimenti i diffusori potrebbero venire danneggiati.
- Non collegare i terminali del sistema elettrico a quello dell'auto e non collegare i terminali dei diffusori destro a quelli del diffusore sinistro.
- Non collegare i cavi di terra di questo apparecchio al terminale negativo (-) del diffusore.
- Non collegare i diffusori in parallelo.
- Assicurarsi di collegare soltanto diffusori passivi, poiché il collegamento di diffusori attivi, dotati di amplificatori incorporati, ai terminali dei diffusori potrebbe danneggiare l'apparecchio.
- Per evitare problemi di funzionamento, non utilizzare i cavi dei diffusori incorporati installati nell'automobile se l'apparecchio condiziona un cavo comune negativo (-) per i diffusori destro e sinistro.
- Non collegare fra loro i cavi dei diffusori dell'apparecchio.

Note sui collegamenti
Se l'amplificatore e il diffusore non sono collegati correttamente, "FAILURE" viene visualizzato nel display. In tal caso, accertarsi che l'amplificatore e il diffusore siano collegati correttamente.

Aansluitschema 3

- Naar AMP REMOTE IN van een optionele eindverstärker. Deze aansluiting is alleen bedoeld voor versterkers. Door een ander systeem aan te sluiten kan het apparaat worden beschadigd.
- Naar het interface-snoer van een autorufofoon

Waarschuwing

Indien er een elektrische antenne hebt zonder relaiskast, kan het aansluiten van dit apparaat met het bijgeleverde netsnoer (Q) de antenne beschadigen.

Opmerkingen over de bedrings- en voedingskabels

- De motorantennen-Steuerung (blauw) levert +12 V gelijkstroom wanneer u de tuner inschakelt of de AF (Alternative Frequency) of TA (Traffic Announcement) functie activeert.
- Wanneer uw auto is uitgerust met een FM/MLWV-antenne in de achterzijde glas, moet u de motorantennen-Steuerung (blauw) of de hulpvoedingskabel (rood) aansluiten op de voedingsgang van de bestaande antenneversterker. Raadpleeg uw dealer voor meer details.
- Met dit apparaat is het niet mogelijk een automatische antenne zonder relaiskast te gebruiken.

Instandhouden van het geheugen
Zolang de gele stroomvoering is aangesloten, blijft de stroomvoering van het geheugen intact, ook wanneer het contact van de auto wordt uitgeschakeld.


Opmerkingen betreffende het aansluiten van de luidsprekers

- Zorg dat het apparaat is uitgeschakeld, alvorens de luidsprekers aan te sluiten.
- Gebruik luidsprekers met een impedantie van 4 tot 8 Ohm en let op dat die het vermogen van de versterker kunnen weerstaan. Als u dit niet doet, kunnen de luidsprekers ernstig beschadigd raken.
- Verbind in geen geval de aansluitingen van de luidsprekers met het chassis van de auto en sluit de aansluitingen van de rechten- en linkerluidspreker niet op elkaar aan.
- Verbond de aarddraad van dit apparaat niet met de negatieve (-) aansluiting van de luidspreker.
- Probeer nooit de luidsprekers parallel aan te sluiten.
- Sluit geen actieve luidsprekers (met ingebouwde versterkers) aan op de luidsprekeransluiting van dit apparaat. Dit zal leiden tot beschadiging van de actieve luidsprekers. Sluit dus altijd slechts luidsprekers zonder ingebouwde versterker aan.
- Al bij defecten te vermijden mag u de bestaande luidsprekerbedrading in uw auto niet gebruiken wanneer er een gemeenschappelijke negatieve (-) draad is voor de rechter- en linkerluidspreker.
- Verbond de luidsprekerdraden niet met elkaar.

Opmerking over aansluiten
Als luidspreker en versterker niet correct zijn aangesloten, wordt "FAILURE" in het display weergegeven. In dit geval moet u zorgen dat de luidspreker en versterker correct zijn aangesloten.

CDX-GT610U/GT616U/GT617UE

• CDX-GT617UE

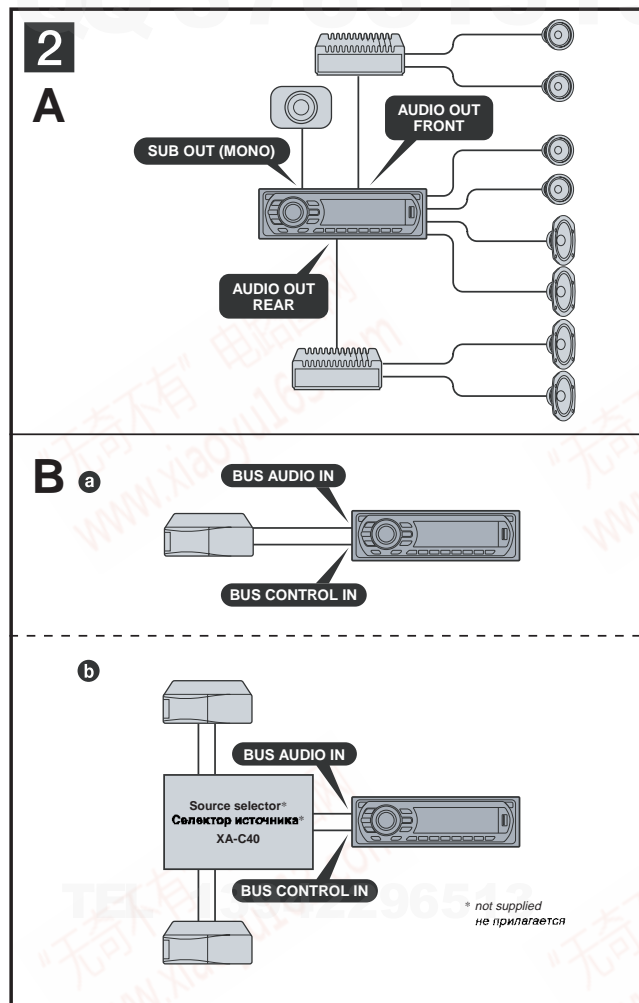

Connection example 2

Notes (2-A)

- Be sure to connect the ground (earth) lead before connecting the amplifier.
- The alarm will only sound if the built-in amplifier is used.

Tip (2-B-1)

For connecting two or more CD/MD changers, the source selector XA-C40 (not supplied) is necessary.


Пример подключения 2

Примечания (2-A)

- Прежде чем подключать аппарат к усилителю, обязательно подключите провод заземления.
- Звуковой сигнал будет воспроизводиться только в том случае, если используется встроенный усилитель.

Совет (2-B-1)

При подключении двух или более проигрывателей CD/MD требуется селектор источника XA-C40 (не прилагается).

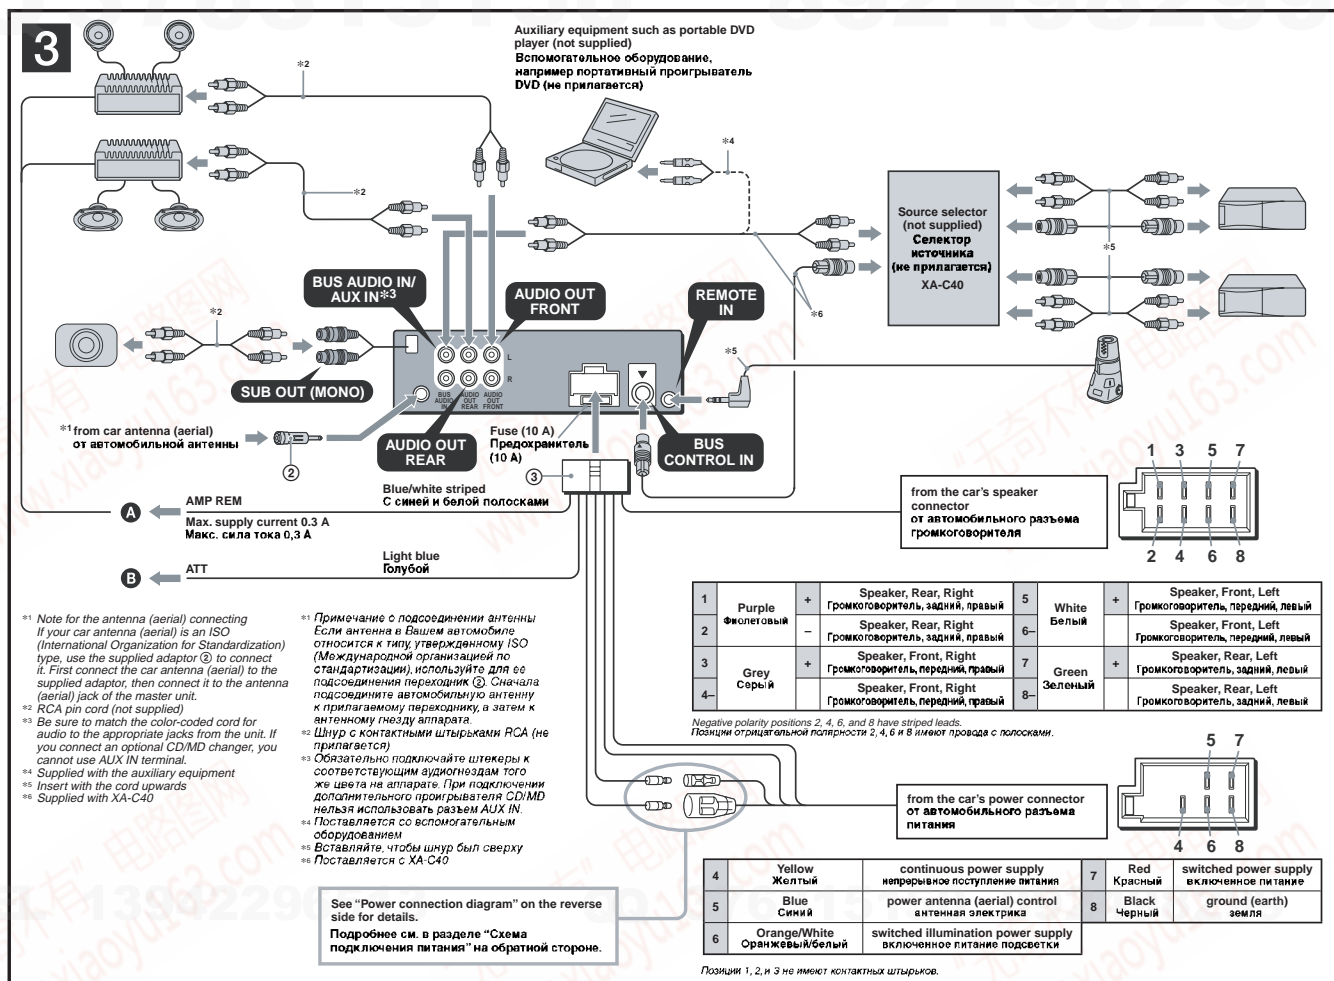

Connection diagram 3

- A To AMP REMOTE IN of an optional power amplifier**
This connection is only for amplifiers. Connecting any other system may damage the unit.
- B To the interface cable of a car telephone**

Warning

If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power supply lead (3) may damage the antenna (aerial).

- Notes on the control and power supply leads**
- The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner, or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.
 - When your car has built-in FM/AM/LW antenna (aerial) in the rear/side glass, connect the power antenna (aerial) control lead (blue) or the accessory power input lead (red) to the power terminal of the existing antenna (aerial) booster. For details, consult your dealer.
 - A power antenna (aerial) without a relay box cannot be used with this unit.

Memory hold connection
When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

- Notes on speaker connection**
- Before connecting the speakers, turn the unit off.
 - Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid its damage.
 - Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
 - Do not connect the ground (earth) lead of this unit to the negative (-) terminal of the speaker.
 - Do not attempt to connect the speakers in parallel.
 - Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
 - To avoid a malfunction, do not use the built-in speaker leads installed in your car if the unit shares a common negative (-) lead for the right and left speakers.
 - Do not connect the unit's speaker leads to each other.

Note on connection
If speaker and amplifier are not connected correctly, "FAILURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Схема подсоединения 3

- A Подключение к входу AMP REMOTE IN дополнительного усилителя мощности**
Этот вариант подключения используется только для усилителей. Подключение любой другой системы может привести к повреждению аппарата.
- B К интерфейсному кабелю автомобильного телефона**

Предостережение

Если Вы используете антенну с электрическим приводом без релейного блока, подсоединение этого аппарата посредством прилагаемого провода питания устройства (3) может привести к повреждению антенны.

- О проводах управления и питания**
- При включении тюнера, а также использовании функции AF (Альтернативные частоты) или ТА (Сообщения о текущей ситуации на дорогах) по проводу питания антенны с электрическим приводом (синим) подается напряжение +12 В постоянного тока.
 - Если на заднем/боксовом стекле автомобиля установлена встроенная антенна диапазона FM/AM/LW, подсоедините провод питания приемной антенны (синий) или провод питания аппарата (красный) к клемме питания существующего усилителя антенны. Чтобы получить дополнительные сведения, обратитесь к своему дилеру.
 - Антенна с электрическим приводом, не снабженная релейным блоком, с этим аппаратом использоваться не может.


Подсоединение для поддержки памяти
Когда к аппарату подсоединен желтый электрический провод блока памяти будет постоянно получать питание даже при выключенном зажигании.

- Примечания относительно подсоединения громкоговорителей**
- Прежде чем подсоединять громкоговорители, выключите аппарат.
 - Используйте громкоговорители с полным сопротивлением 4 - 8 Ом, обладающие способностью принимать достаточно мощный сигнал. В противном случае они могут быть повреждены.
 - Не подсоединяйте контактные гнезда громкоговорителя к корпусу автомобиля и не соединяйте гнезда правого громкоговорителя с гнездами левого.
 - Не подключайте провод заземления аппарата к отрицательному (-) контакту громкоговорителя.
 - Не пытайтесь подсоединить громкоговорители параллельно.
 - Подсоединять можно только пассивные громкоговорители. Подсоединение активных громкоговорителей (со встроенным усилителем) к гнездам для громкоговорителей может привести к повреждению аппарата.
 - Во избежание неправильной работы аппарата не используйте встроенные в автомобиль провода громкоговорителей, если используется общий отрицательный провод (-) для правого и левого громкоговорителей.
 - Не подсоединяйте друг к другу провода громкоговорителей аппарата.

Примечание относительно подсоединения
Если громкоговоритель и усилитель подсоединены неправильно, на дисплее отобразится надпись "FAILURE". В этом случае проверьте правильность подсоединения громкоговорителя и усилителя.


SECTION 2 DISASSEMBLY

Note: This set can be disassembled according to the following sequence.

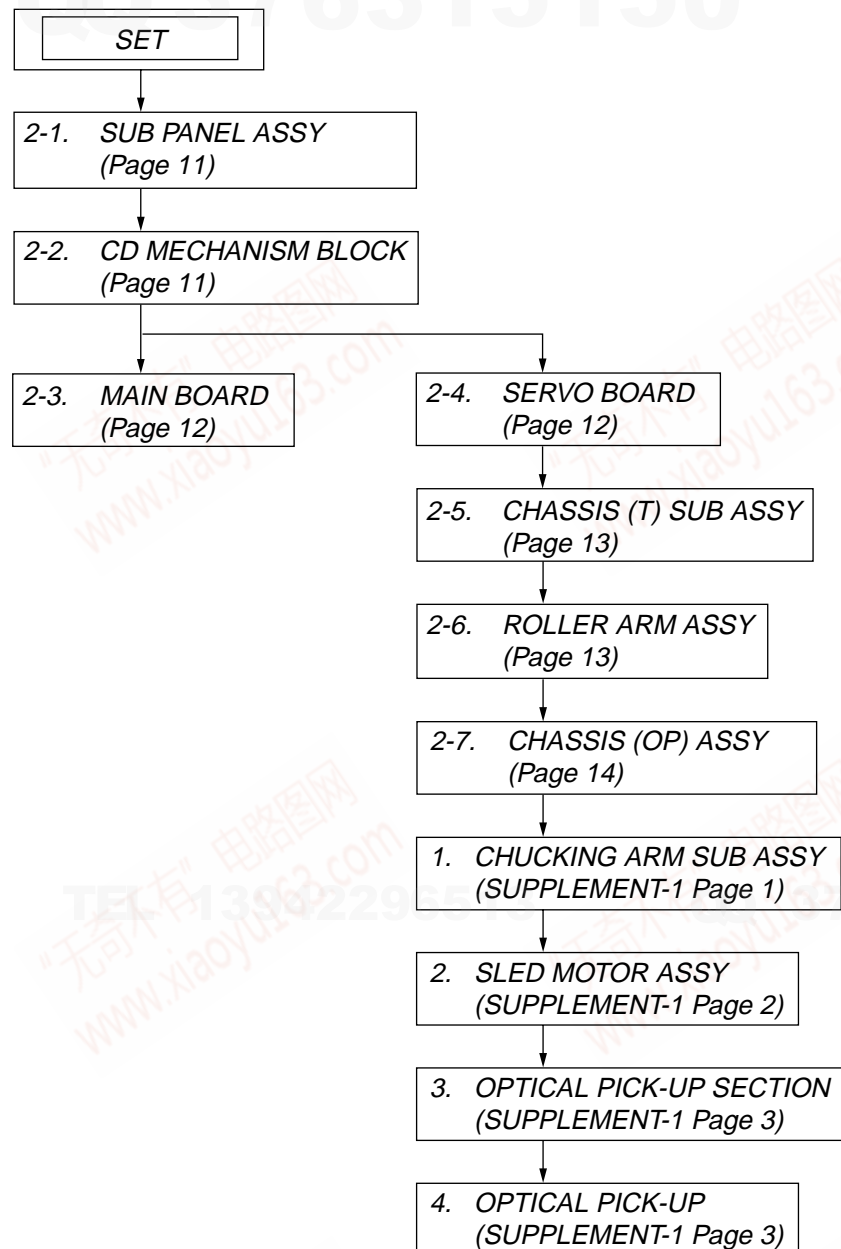


Note: Follow the disassembly procedure in the numerical order given.

2-1. SUB PANEL ASSY

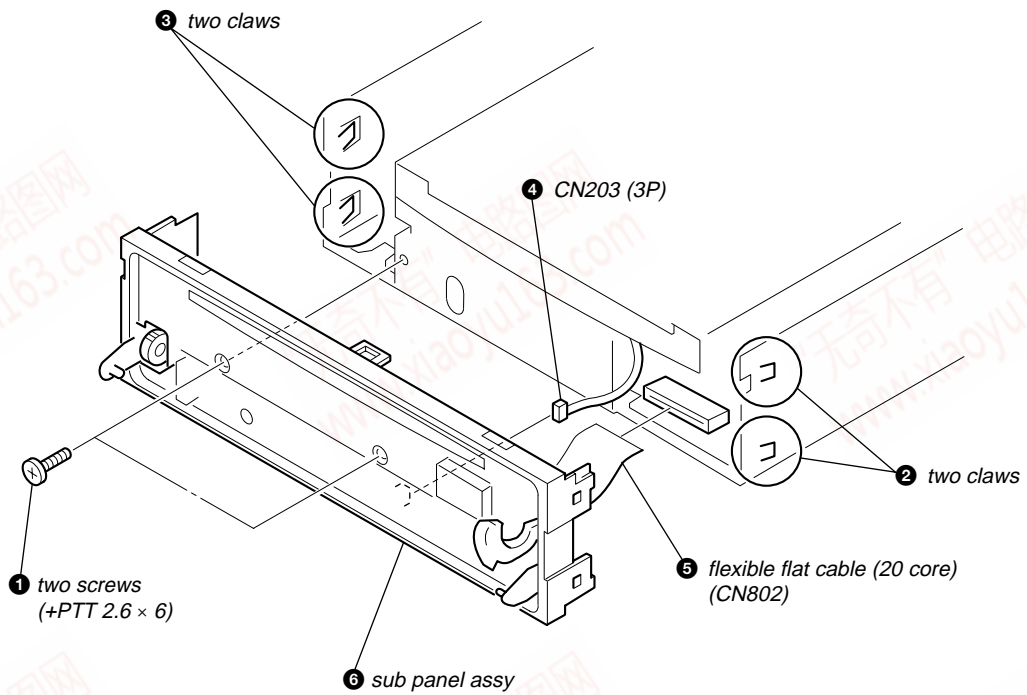


2-2. CD MECHANISM BLOCK

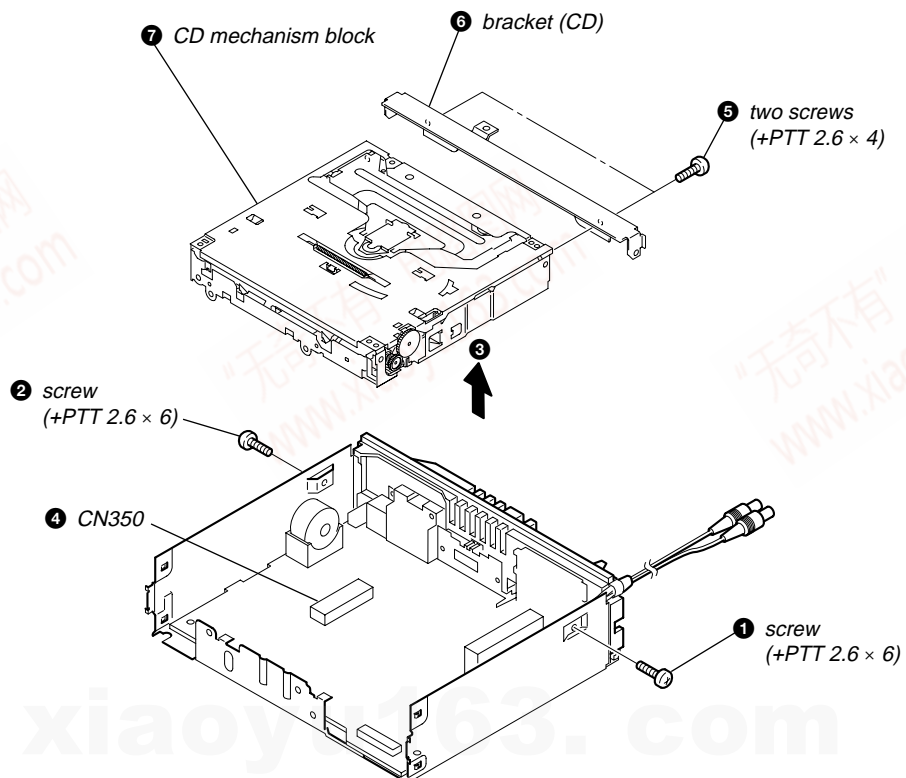


CDX-GT610U/GT616U/GT617UE


2-3. MAIN BOARD

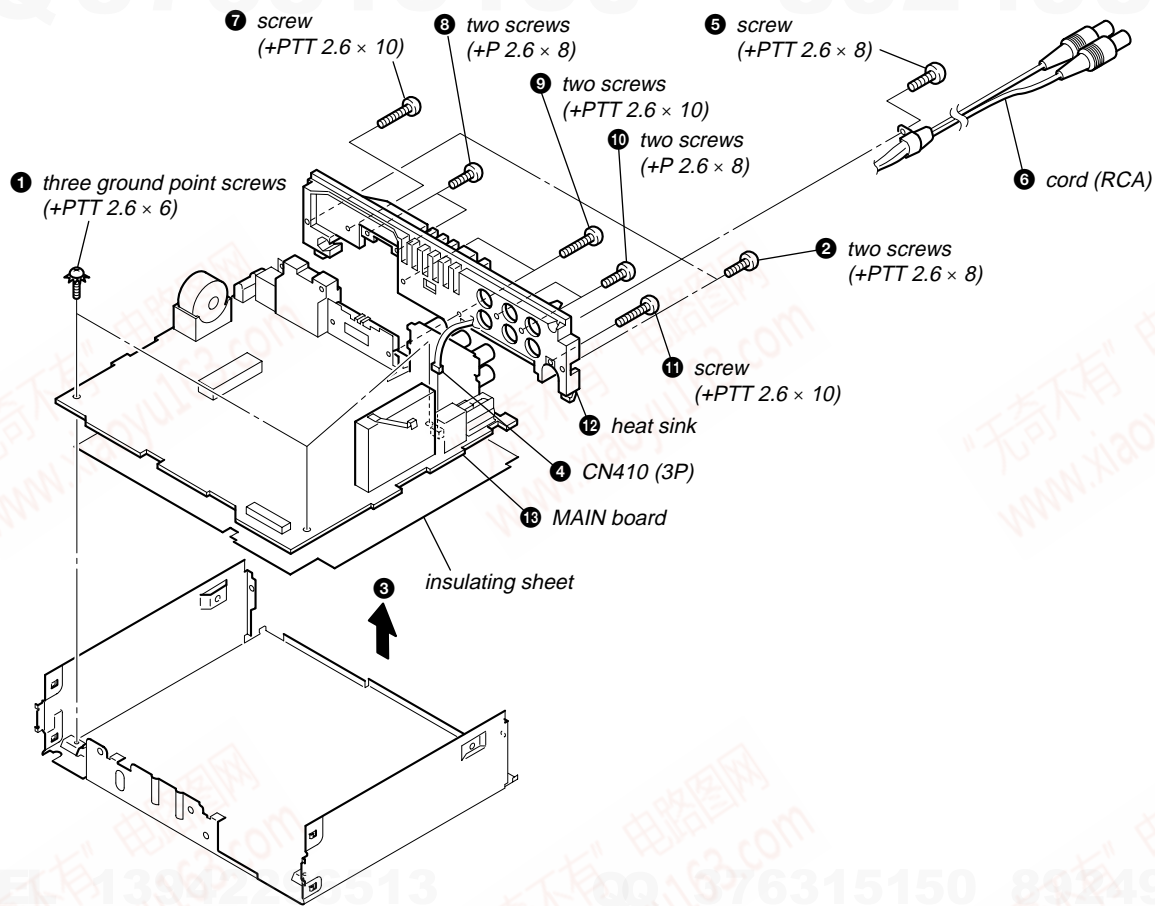


2-4. SERVO BOARD

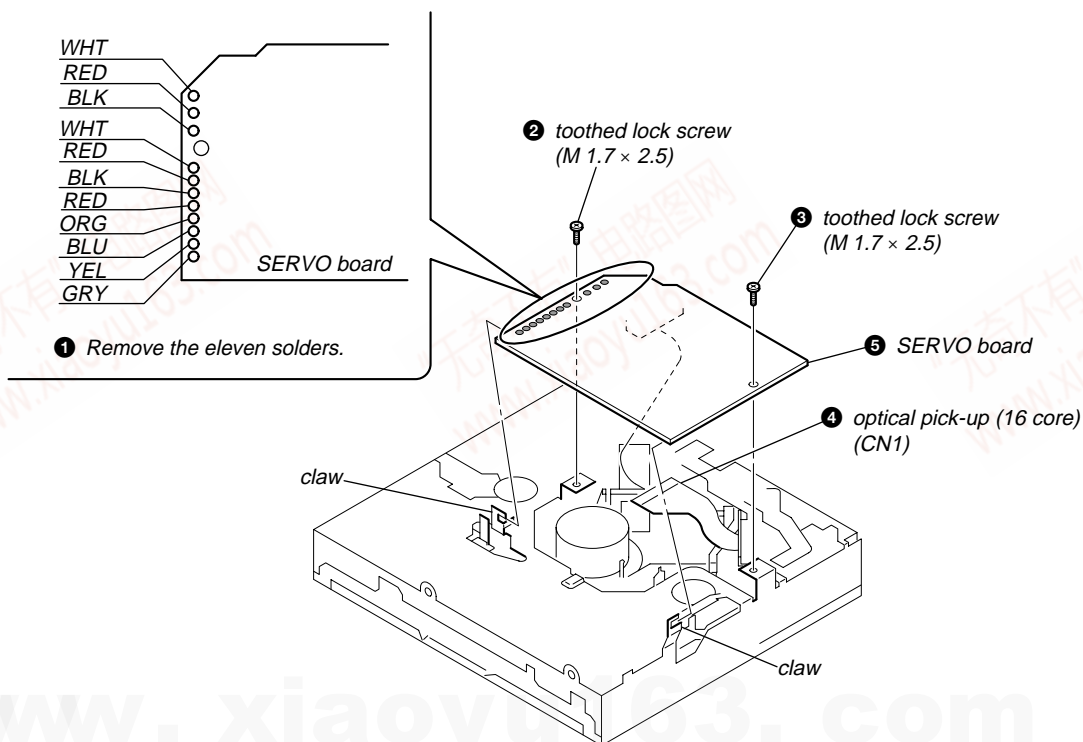

2-5. CHASSIS (T) SUB ASSY

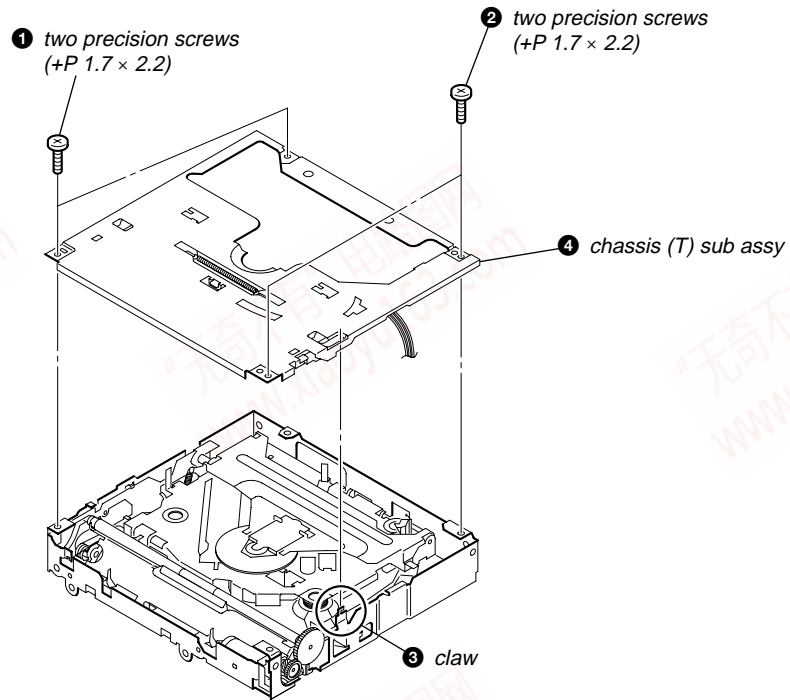


2-6. ROLLER ARM ASSY

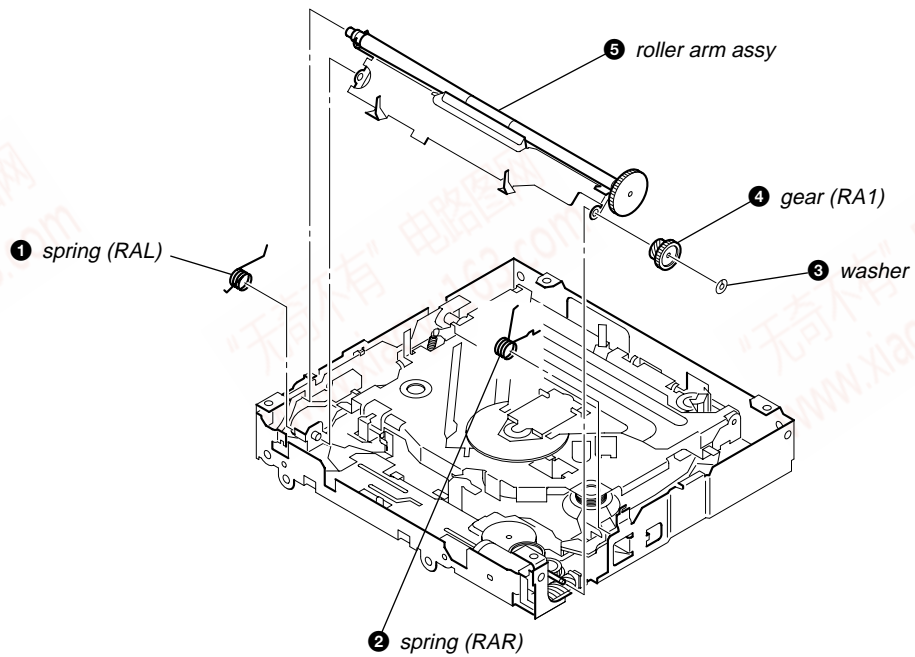

CDX-GT610U/GT616U/GT617UE

Ver. 1.1

2-7. CHASSIS (OP) ASSY

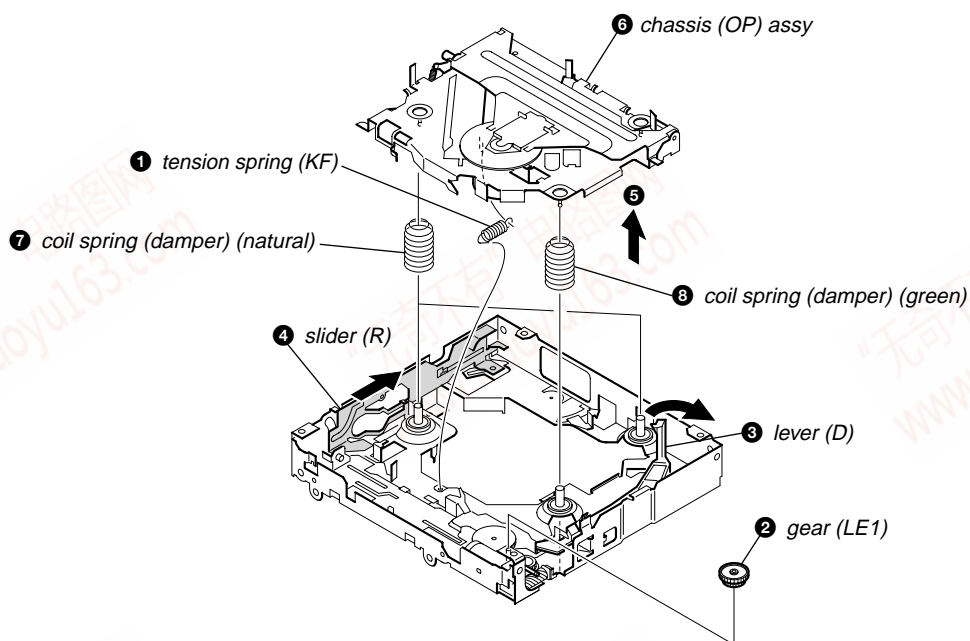


TEL 13942296513 QQ 376315150 892498299

TEL 13942296513 QQ 376315150 892498299

CDX-GT610U/GT616U/GT617UE


4-5. CD error information display mode

4-5-1. Error description

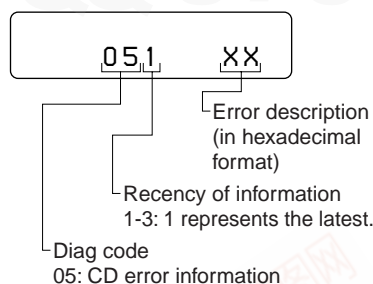


Indication	Description
1X	SERVO ERROR
3X	LOADING ERROR
4X	TRACK JUMP
5X	TEXT ERROR
FX	MECHA ERROR

4-5-2. Disc type and operating hours

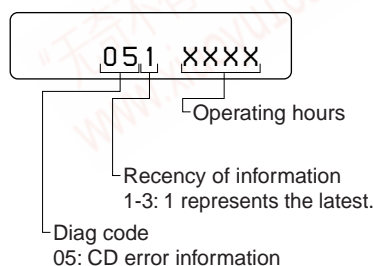


Indication	Disc type
0	MP3
1	WMA
2	AAC
3	ATRAC
8	CD/DA
F	UNKNOWN


The display mode is switched by each rotation of [2/GP/ALBM+] or [1/GP/ALBM-] keys during the CD error information display mode.

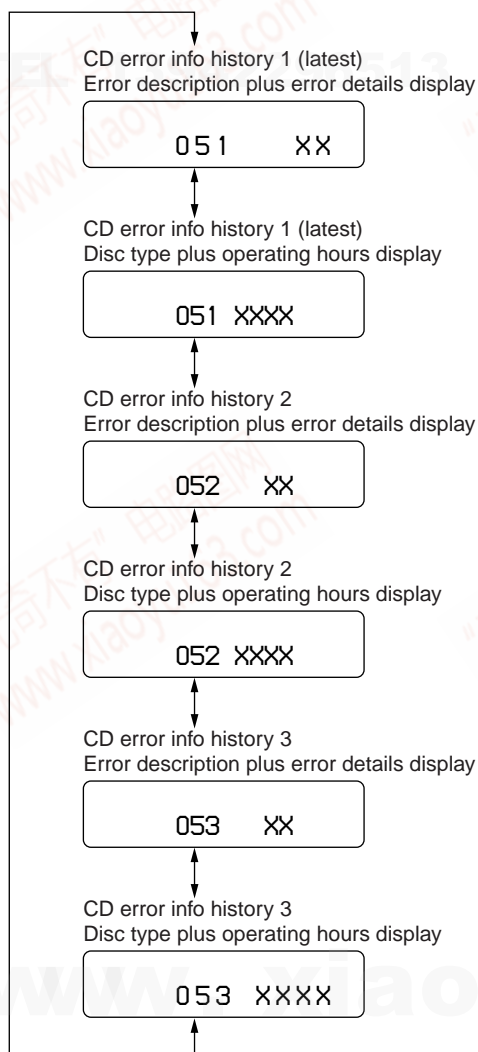

4-6. OFFSET/FAILURE error display mode

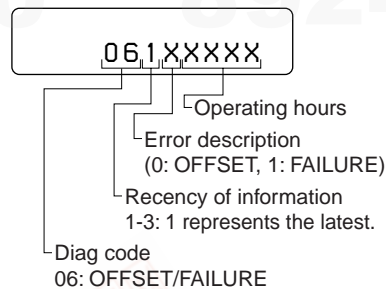


The display mode is switched by each rotation of [2/GP/ALBM+] or [1/GP/ALBM-] keys during the OFFSET/FAILURE error display mode.

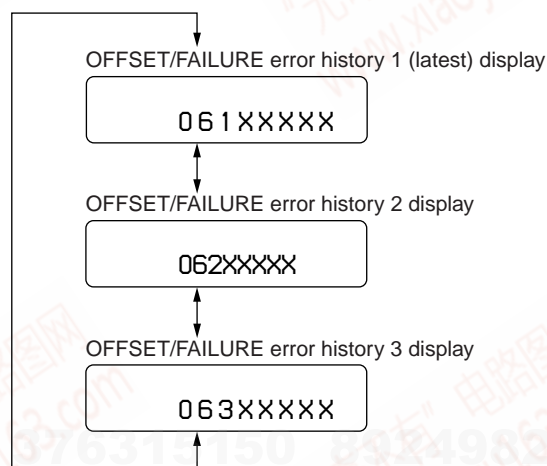


4-7. USB error information display mode

4-7-1. Error description

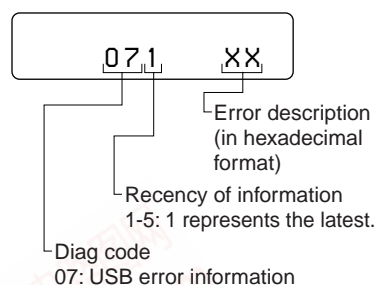


Indication	Description
15	DEVICE ERROR
17	FILE ERROR (NO MUSIC)
1E	POWER ON ERROR
1F	BOOT ERROR
3A	INVALID EJECT ERROR
43	READ ERROR
44	INVALID FORMAT FILE
FA	NOT SUPPORT DEVICE
FB	HUB NOT SUPPORT

4-7-2. Disc type and operating hours

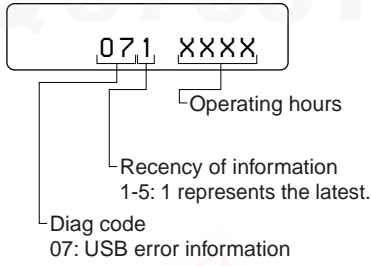

The display mode is switched by each rotation of [2/GP/ALBM+] or [1/GP/ALBM-] keys during the CD error information display mode.

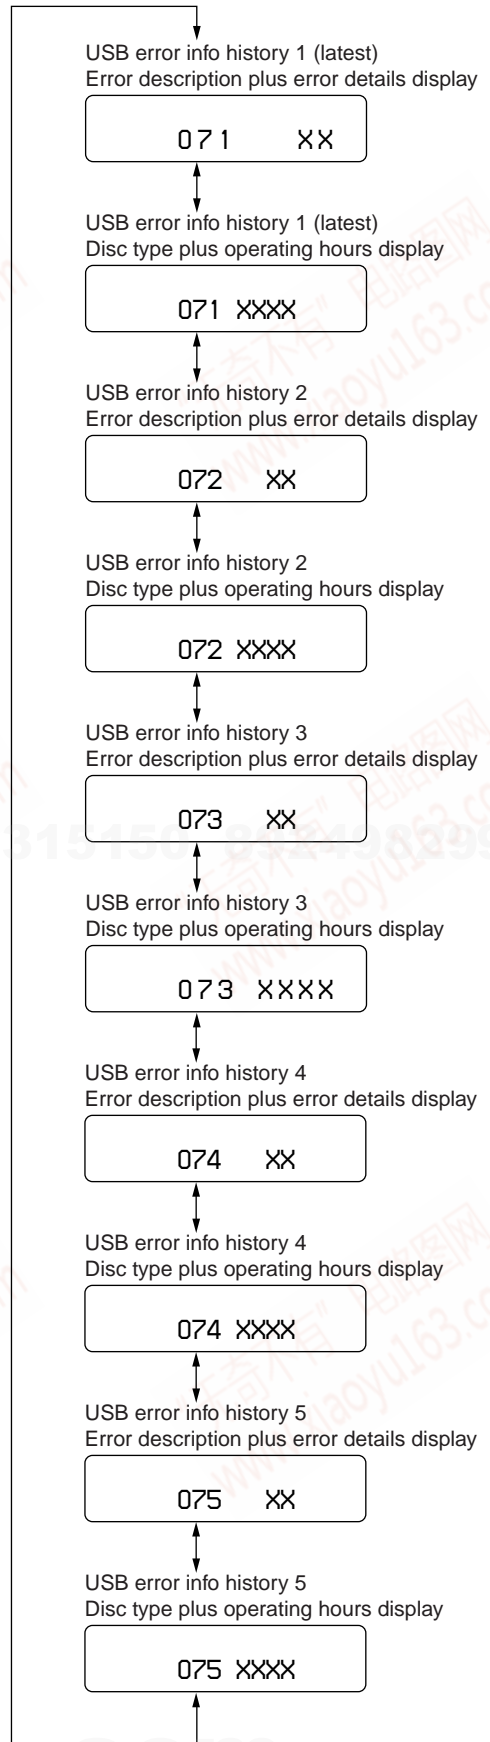

CDX-GT610U/GT616U/GT617UE

MEMO

QQ 376315150

892498299

TEL 13942296513 QQ 376315150 892498299

TEL 13942296513 QQ 376315150 892498299

"无奇不有" 电路图网
www.xiaoyu163.com

TEL 13942296513 QQ 376315150 892498299

"无奇不有" 电路图网
www.xiaoyu163.com

TEL 13942296513 QQ 376315150 892498299

"无奇不有" 电路图网
www.xiaoyu163.com

TEL 13942296513 QQ 376315150 892498299

"无奇不有" 电路图网
www.xiaoyu163.com

TEL 13942296513 QQ 376315150 892498299

"无奇不有" 电路图网
www.xiaoyu163.com

TEL 13942296513 QQ 376315150 892498299


"无奇不有" 电路图网
www.xiaoyu163.com

TEL 13942296513 QQ 376315150 892498299


www.xiaoyu163.com

SECTION 4 DIAGRAMS

4-1. BLOCK DIAGRAM — MAIN SECTION —

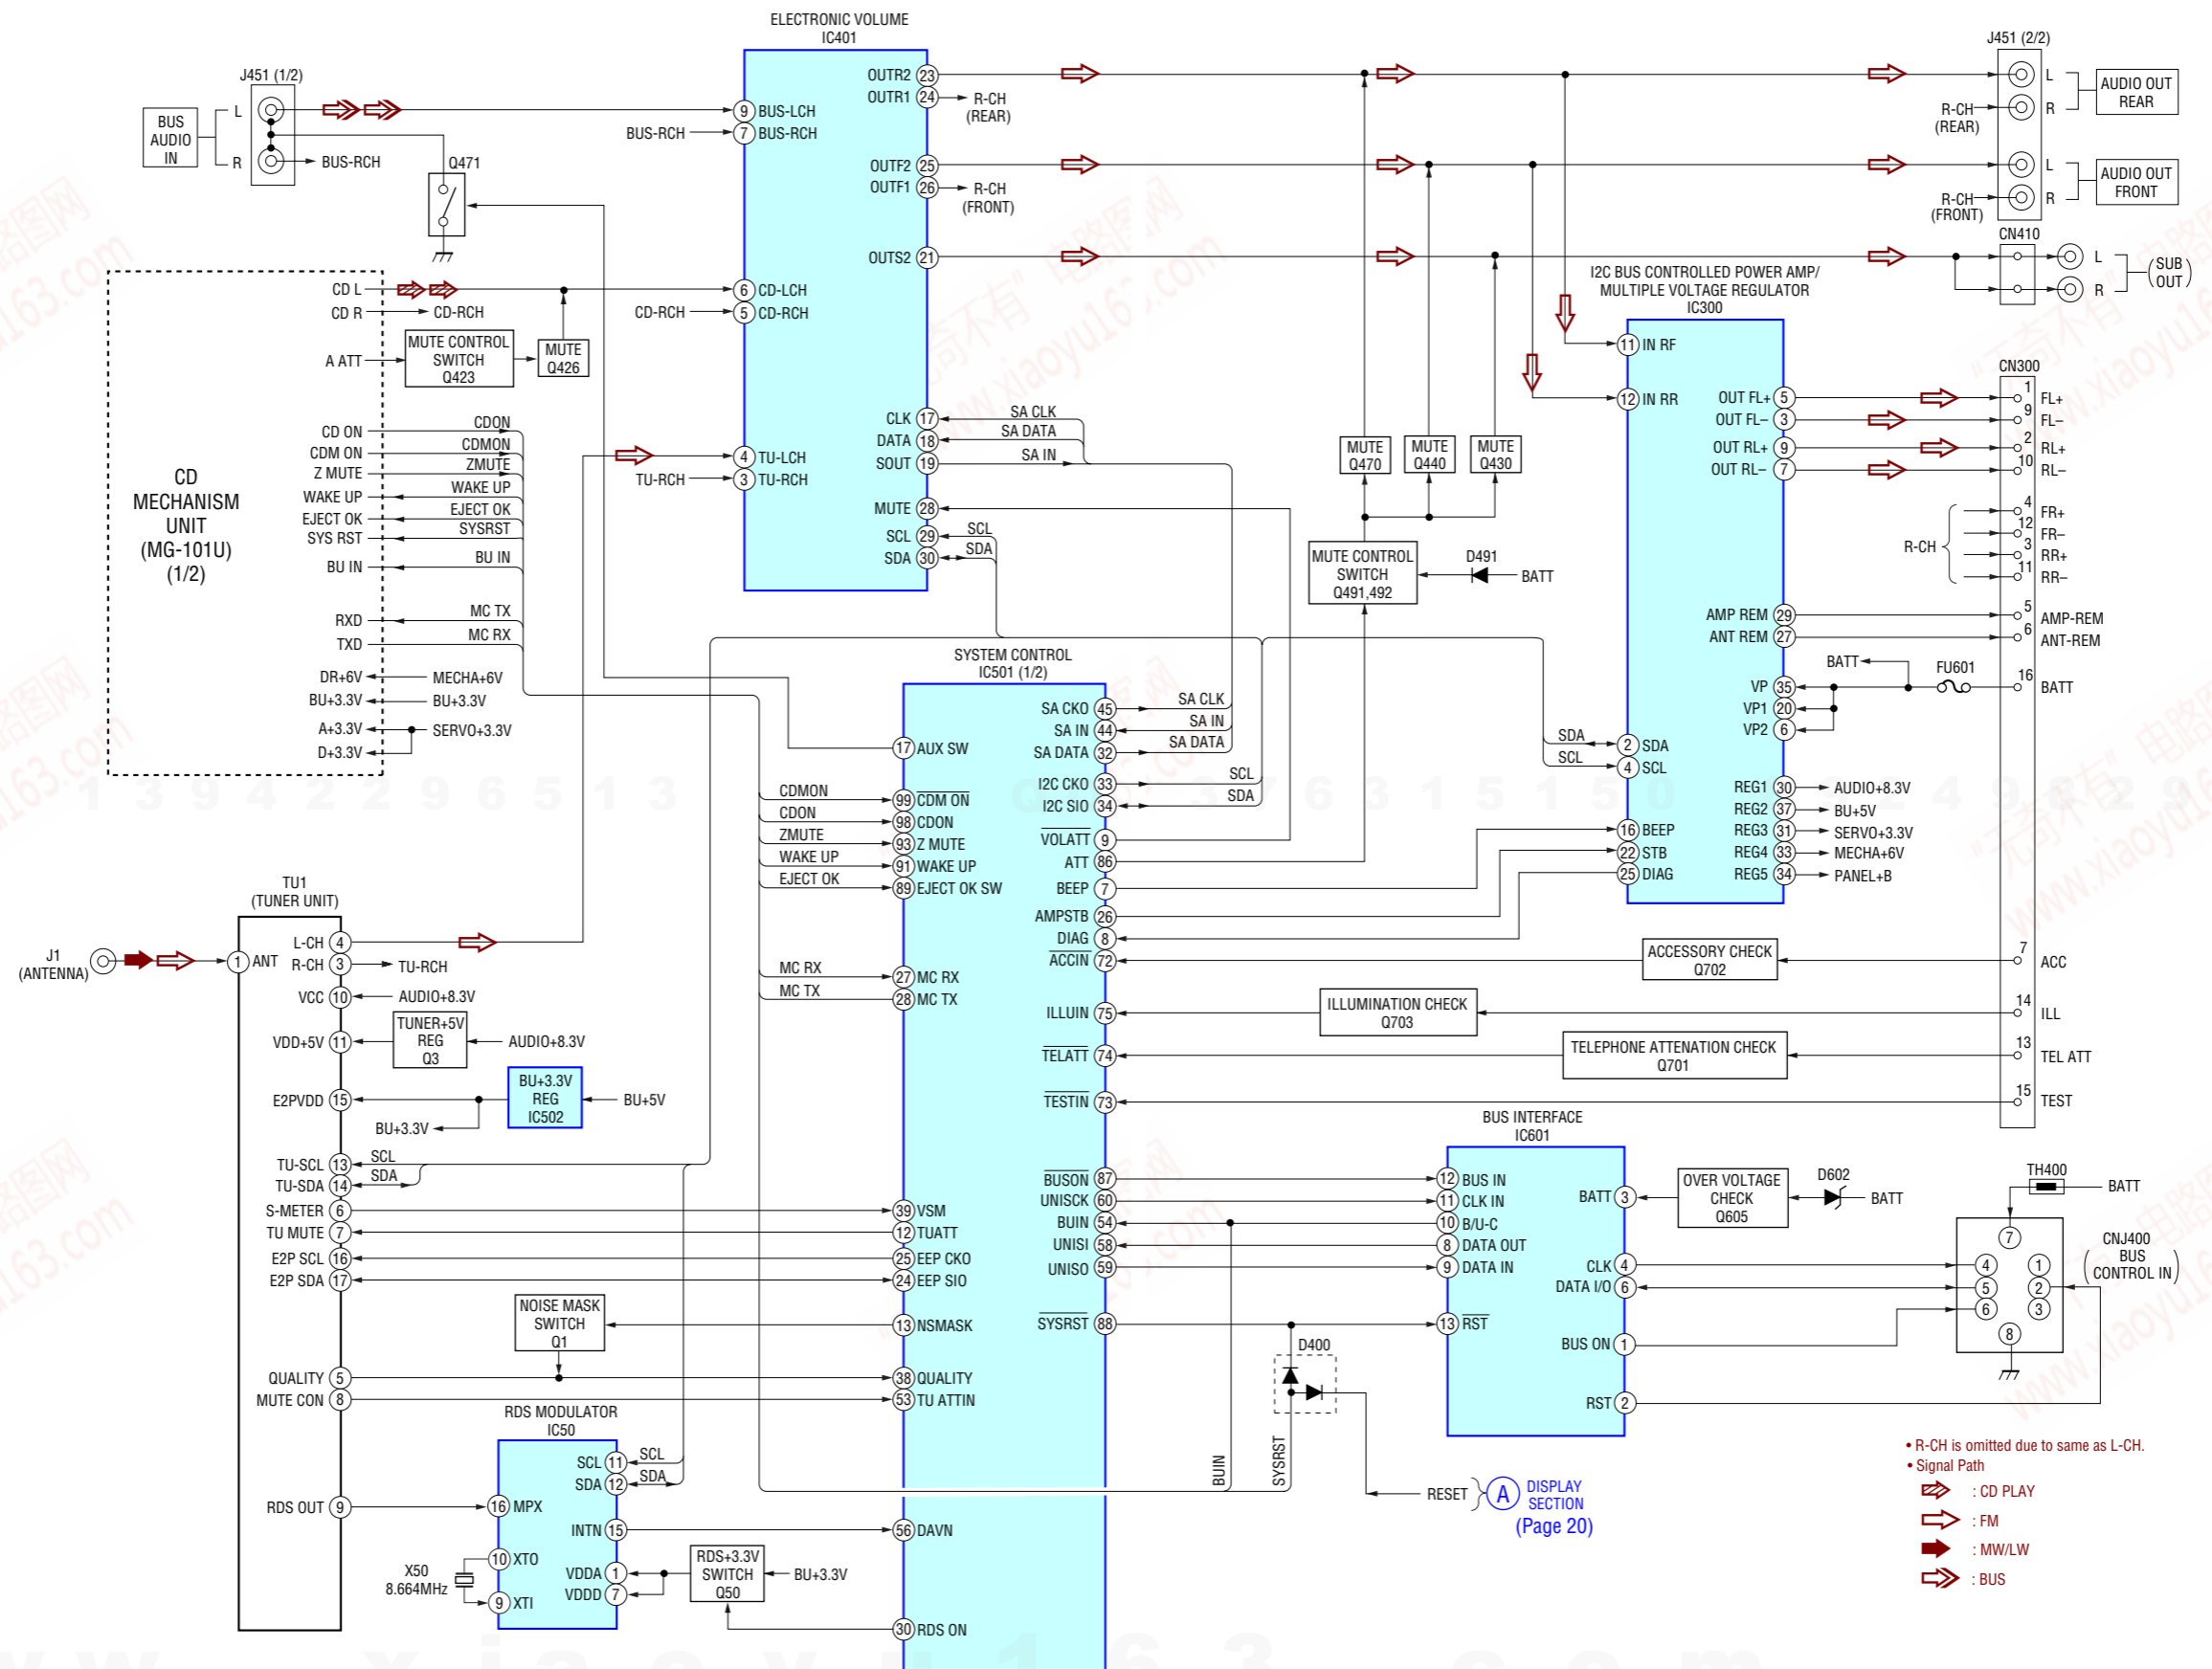

4-2. BLOCK DIAGRAM — DISPLAY SECTION —

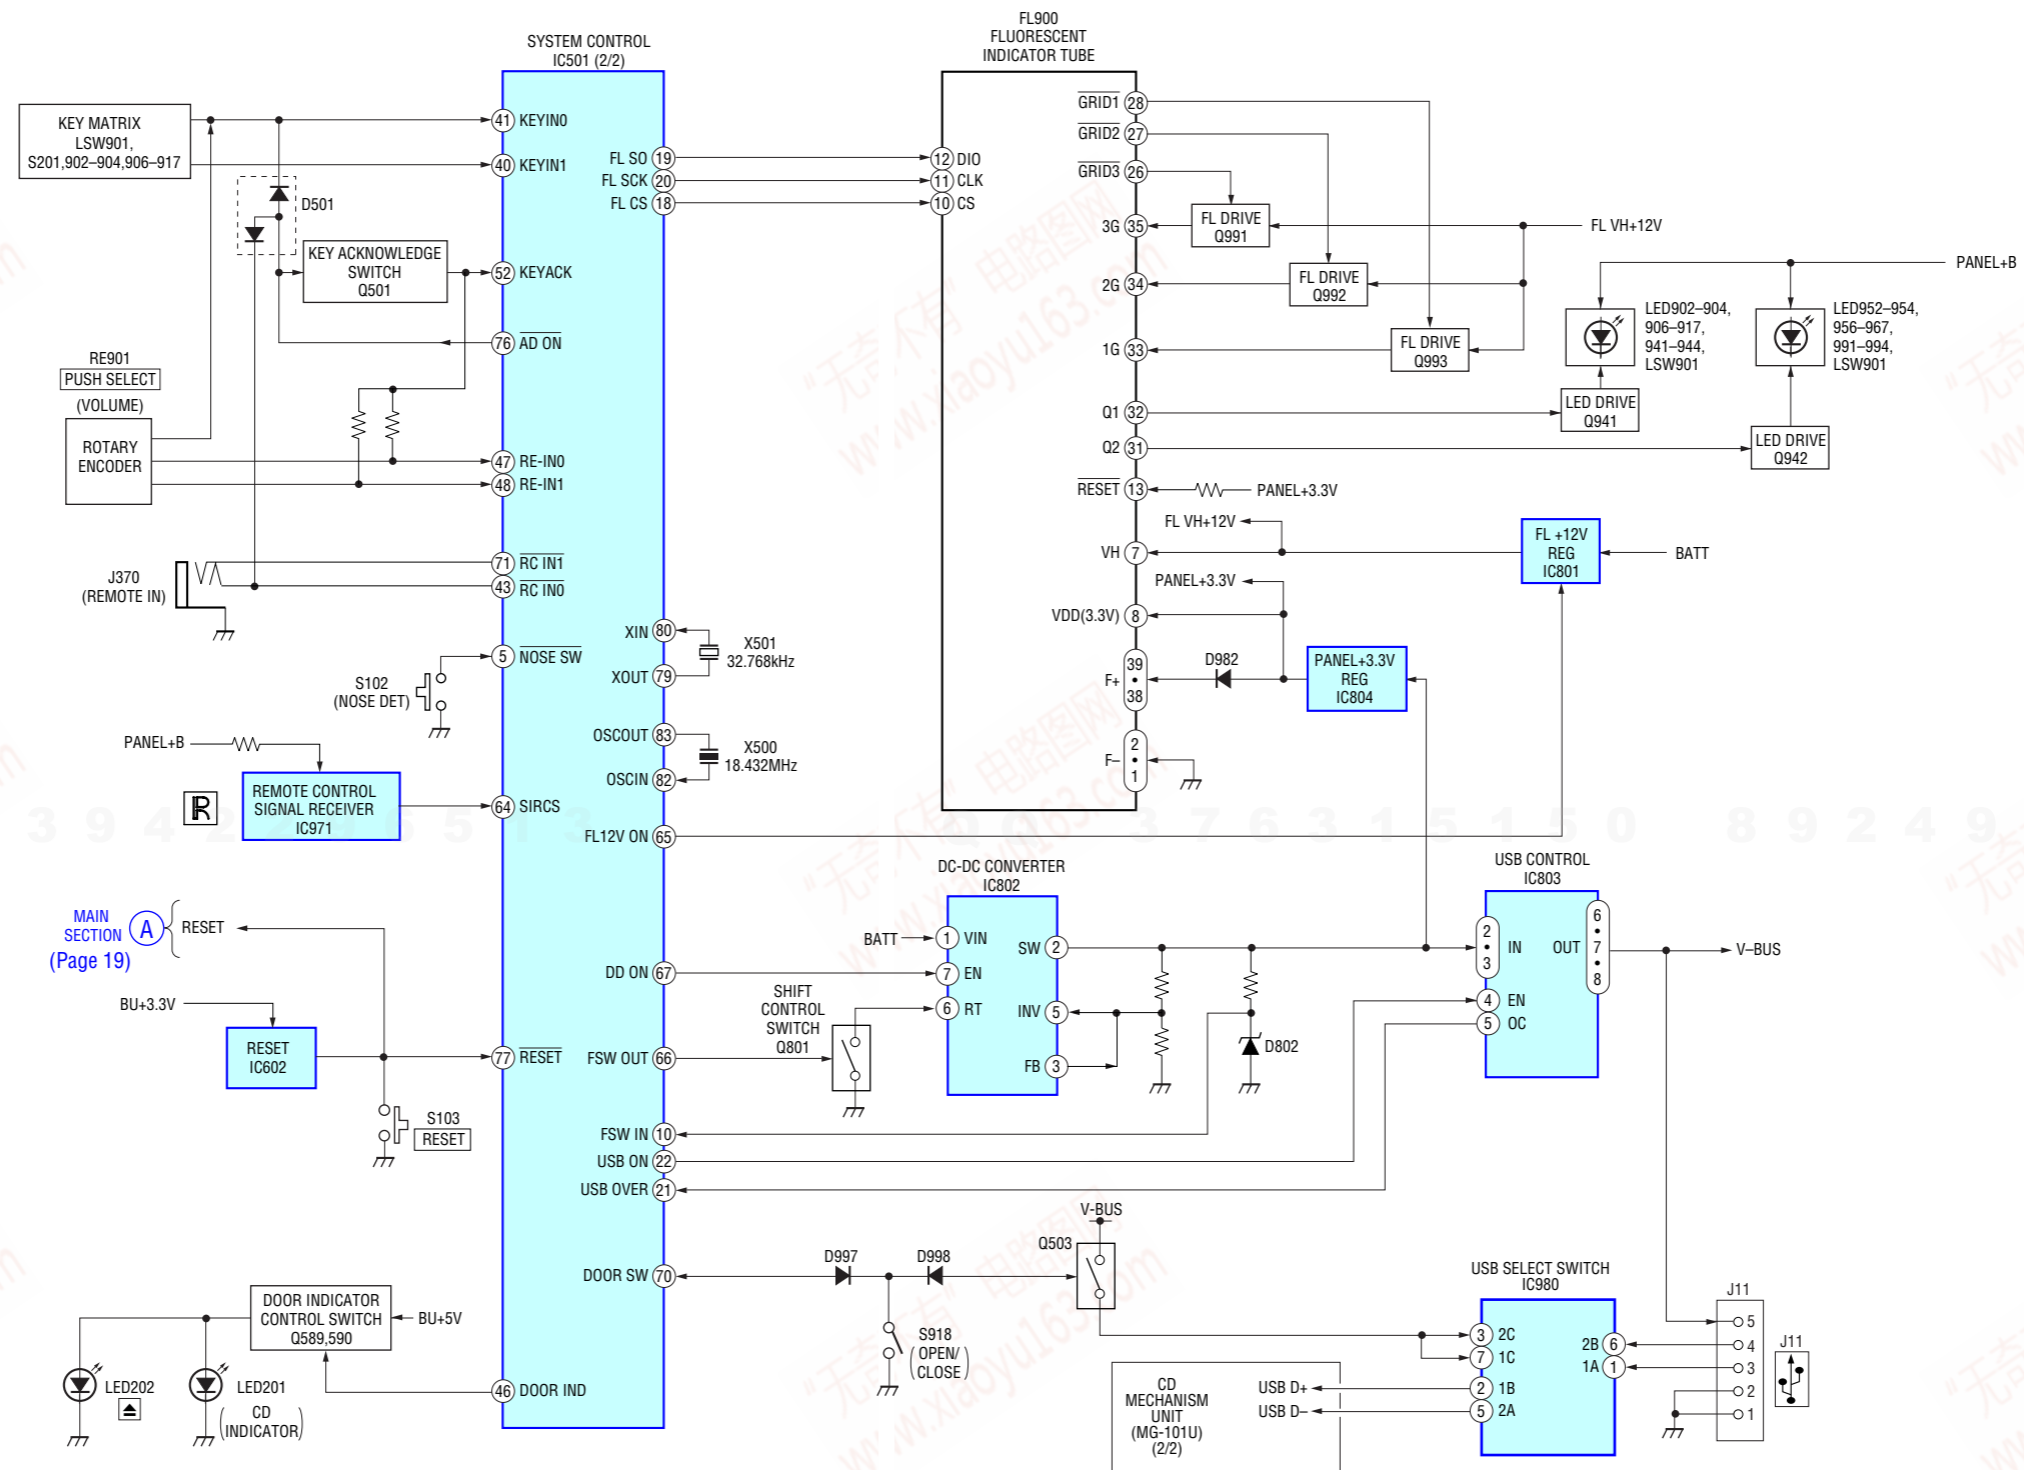

• NOTE FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS. (In addition to this, the necessary note is printed in each block.)

For schematic diagrams.

Note:

- All capacitors are in μF unless otherwise noted. (p: pF) 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- Δ : internal component.
- \square : panel designation.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.




- --- : B+ Line.
- --- : B- Line.
- \square : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark : FM
- () : MW/LW
- <> : CD PLAY
- * : Impossible to measure
- Voltages are taken with a VOM (Input impedance 10 $\text{k}\Omega$). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
- \square : CD PLAY
- \square : FM
- \square : MW/LW
- \square : BUS

For printed wiring boards.

Note:


- --- : parts extracted from the component side.
- --- : parts extracted from the conductor side.
- \circ : Through hole.
- \square : Pattern from the side which enables seeing. (The other layers' patterns are not indicated.)

Caution: Pattern face side: Parts on the pattern face side seen from the (Side B) pattern face are indicated. Parts face side: Parts on the parts face side seen from the (Side A) parts face are indicated.

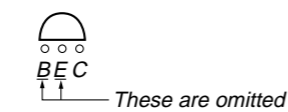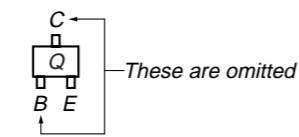

• Waveforms


— MAIN Board —

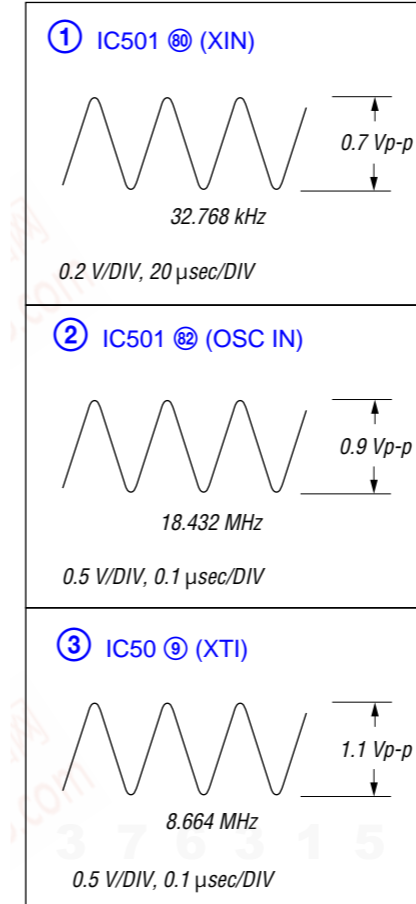

TEL 13942296513 QQ 376315150 892498299

TEL 13942296513 QQ 376315150 892498299


4-3. PRINTED WIRING BOARD — MAIN SECTION —  : Uses unleaded solder.

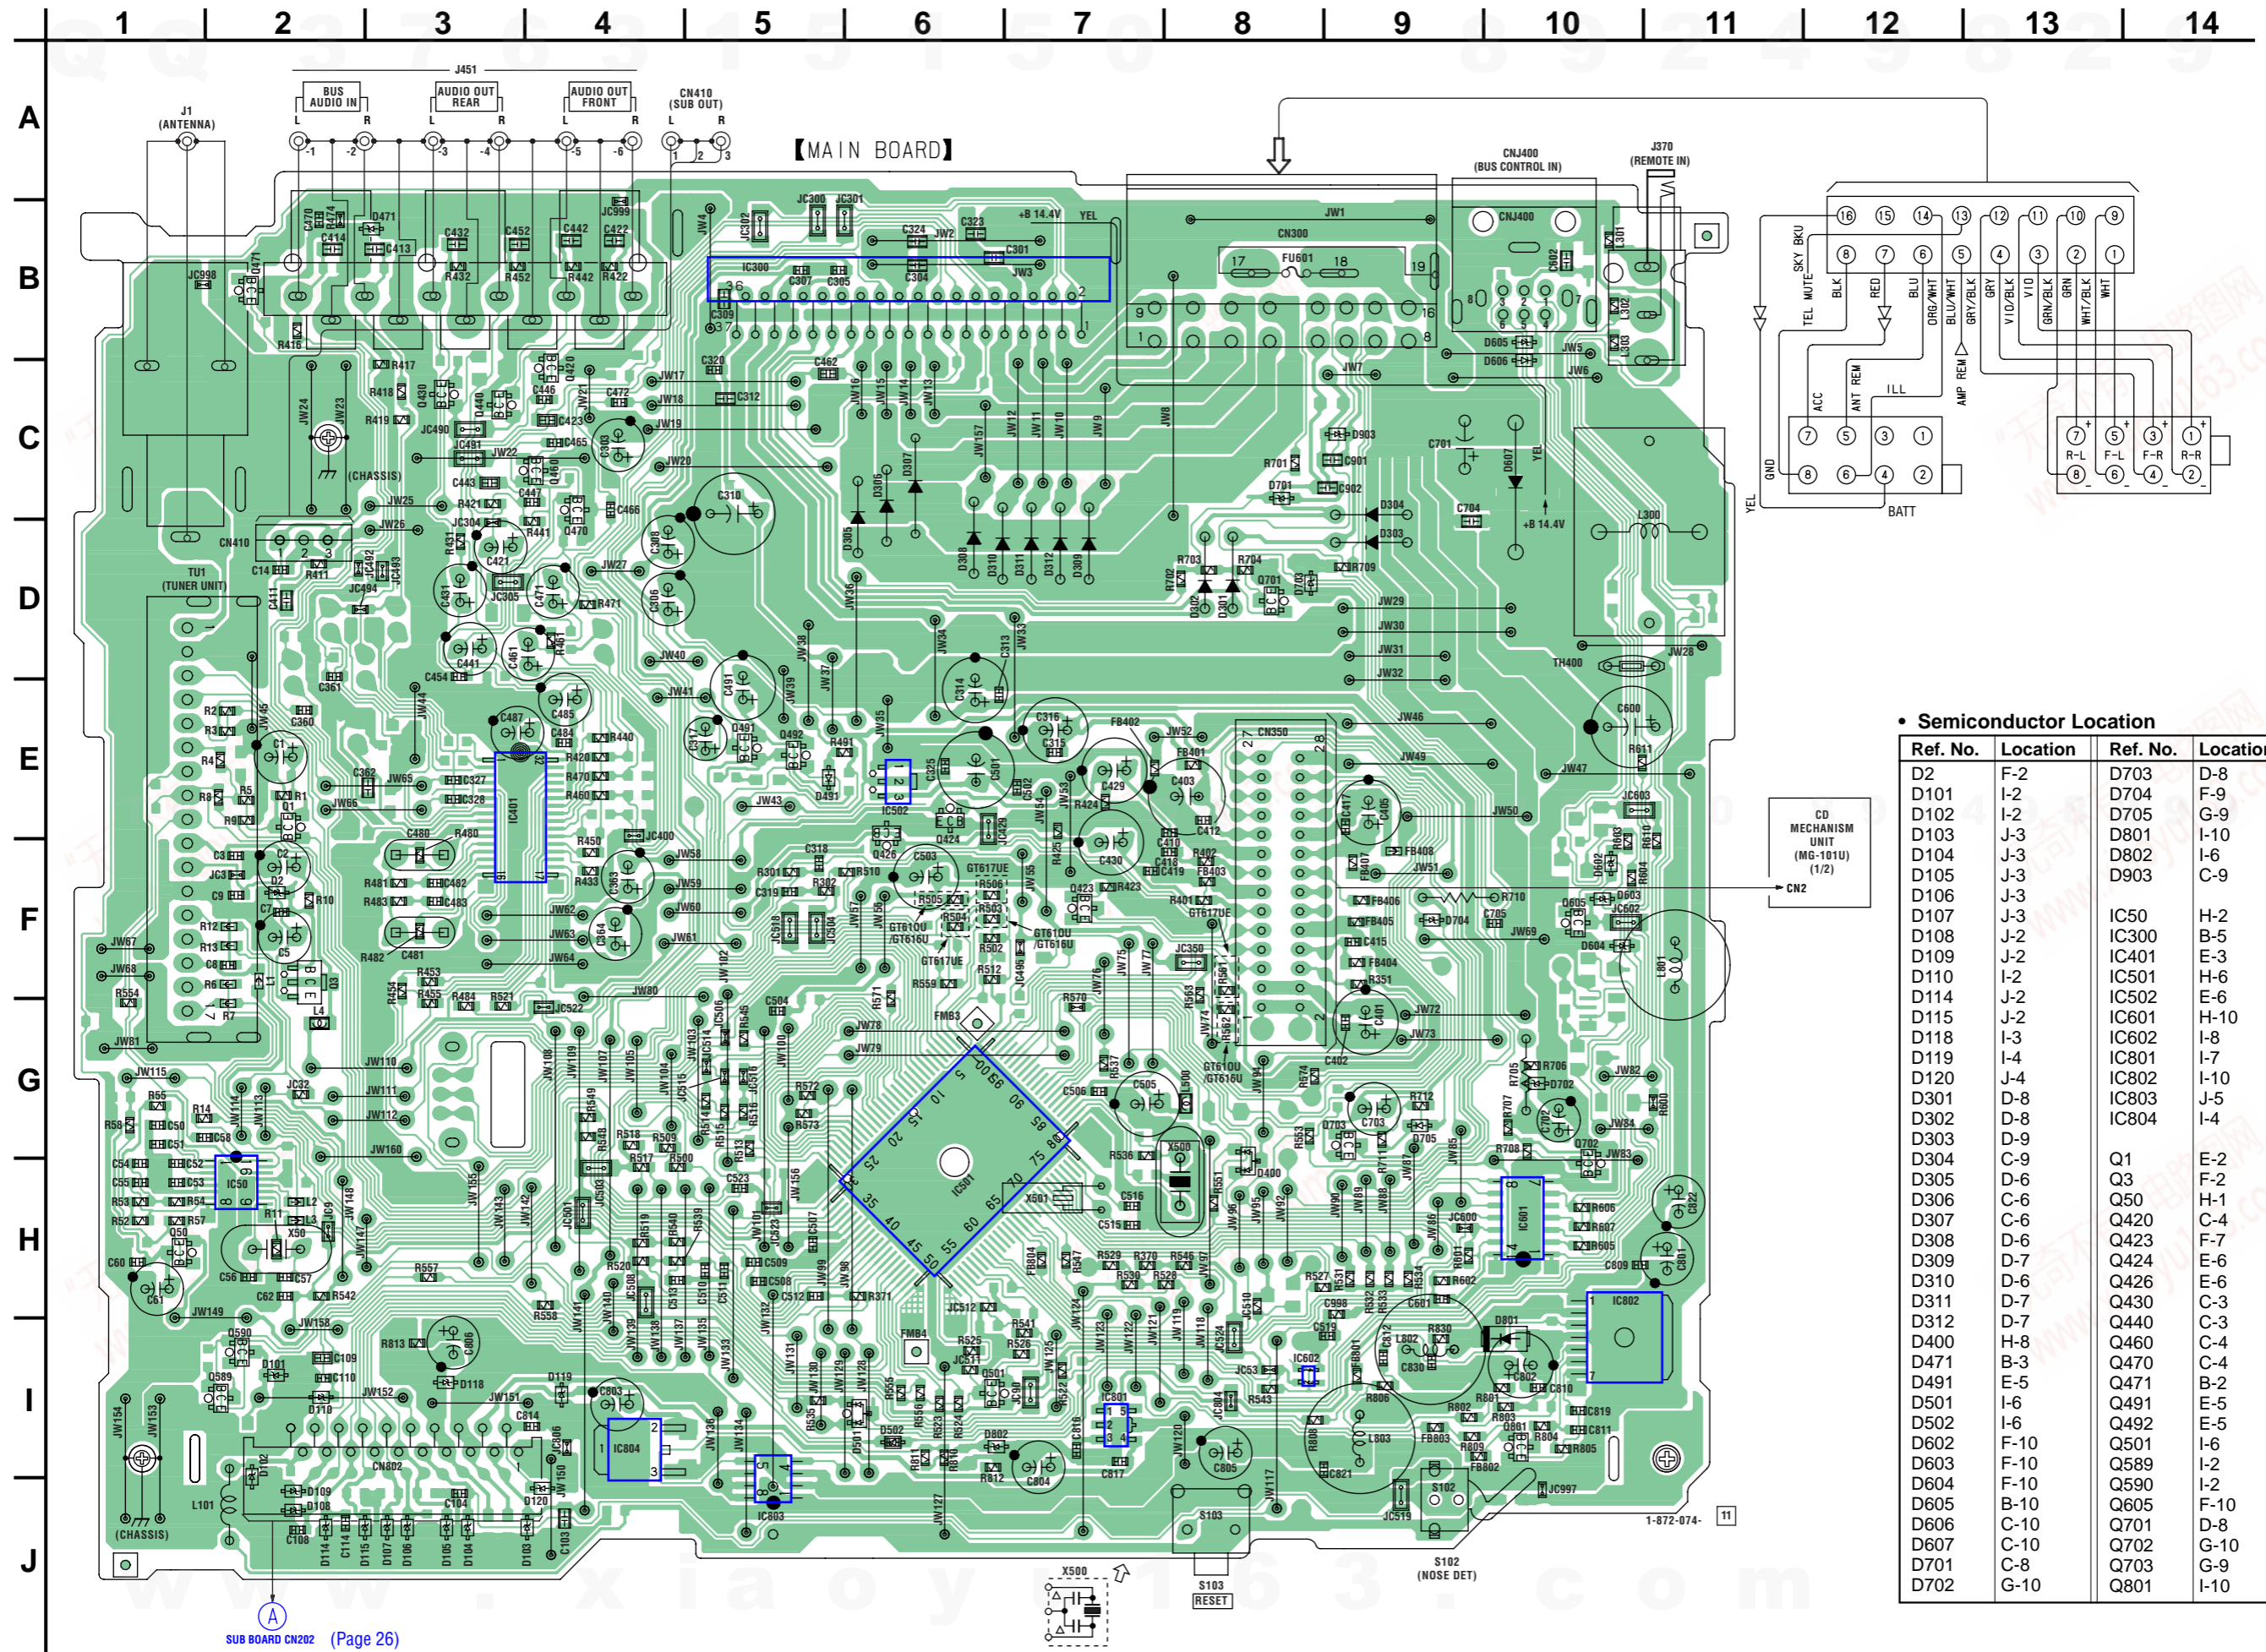

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D2	F-2	D703	D-8
D101	I-2	D704	F-9
D102	I-2	D705	G-9
D103	J-3	D801	I-10
D104	J-3	D802	I-6
D105	J-3	D903	C-9
D106	J-3		
D107	J-3	IC50	H-2
D108	J-2	IC300	B-5
D109	J-2	IC401	E-3
D110	I-2	IC501	H-6
D114	J-2	IC502	E-6
D115	J-2	IC601	H-10
D118	I-3	IC602	I-8
D119	I-4	IC801	I-7
D120	J-4	IC802	I-10
D301	D-8	IC803	J-5
D302	D-8	IC804	I-4
D303	D-9		
D304	C-9	Q1	E-2
D305	D-6	Q3	F-2
D306	C-6	Q50	H-1
D307	C-6	Q420	C-4
D308	D-6	Q423	F-7
D309	D-7	Q424	E-6
D310	D-6	Q426	E-6
D311	D-7	Q430	C-3
D312	D-7	Q440	C-3
D400	H-8	Q460	C-4
D471	B-3	Q470	C-4
D491	E-5	Q471	B-2
D501	I-6	Q491	E-5
D502	I-6	Q492	E-5
D602	F-10	Q501	I-6
D603	F-10	Q589	I-2
D604	F-10	Q590	I-2
D605	B-10	Q605	F-10
D606	C-10	Q701	D-8
D607	C-10	Q702	G-10
D701	C-8	Q703	G-9
D702	G-10	Q801	I-10


4-4. SCHEMATIC DIAGRAM — MAIN SECTION (1/3) — • Refer to page 30 for IC Block Diagrams.

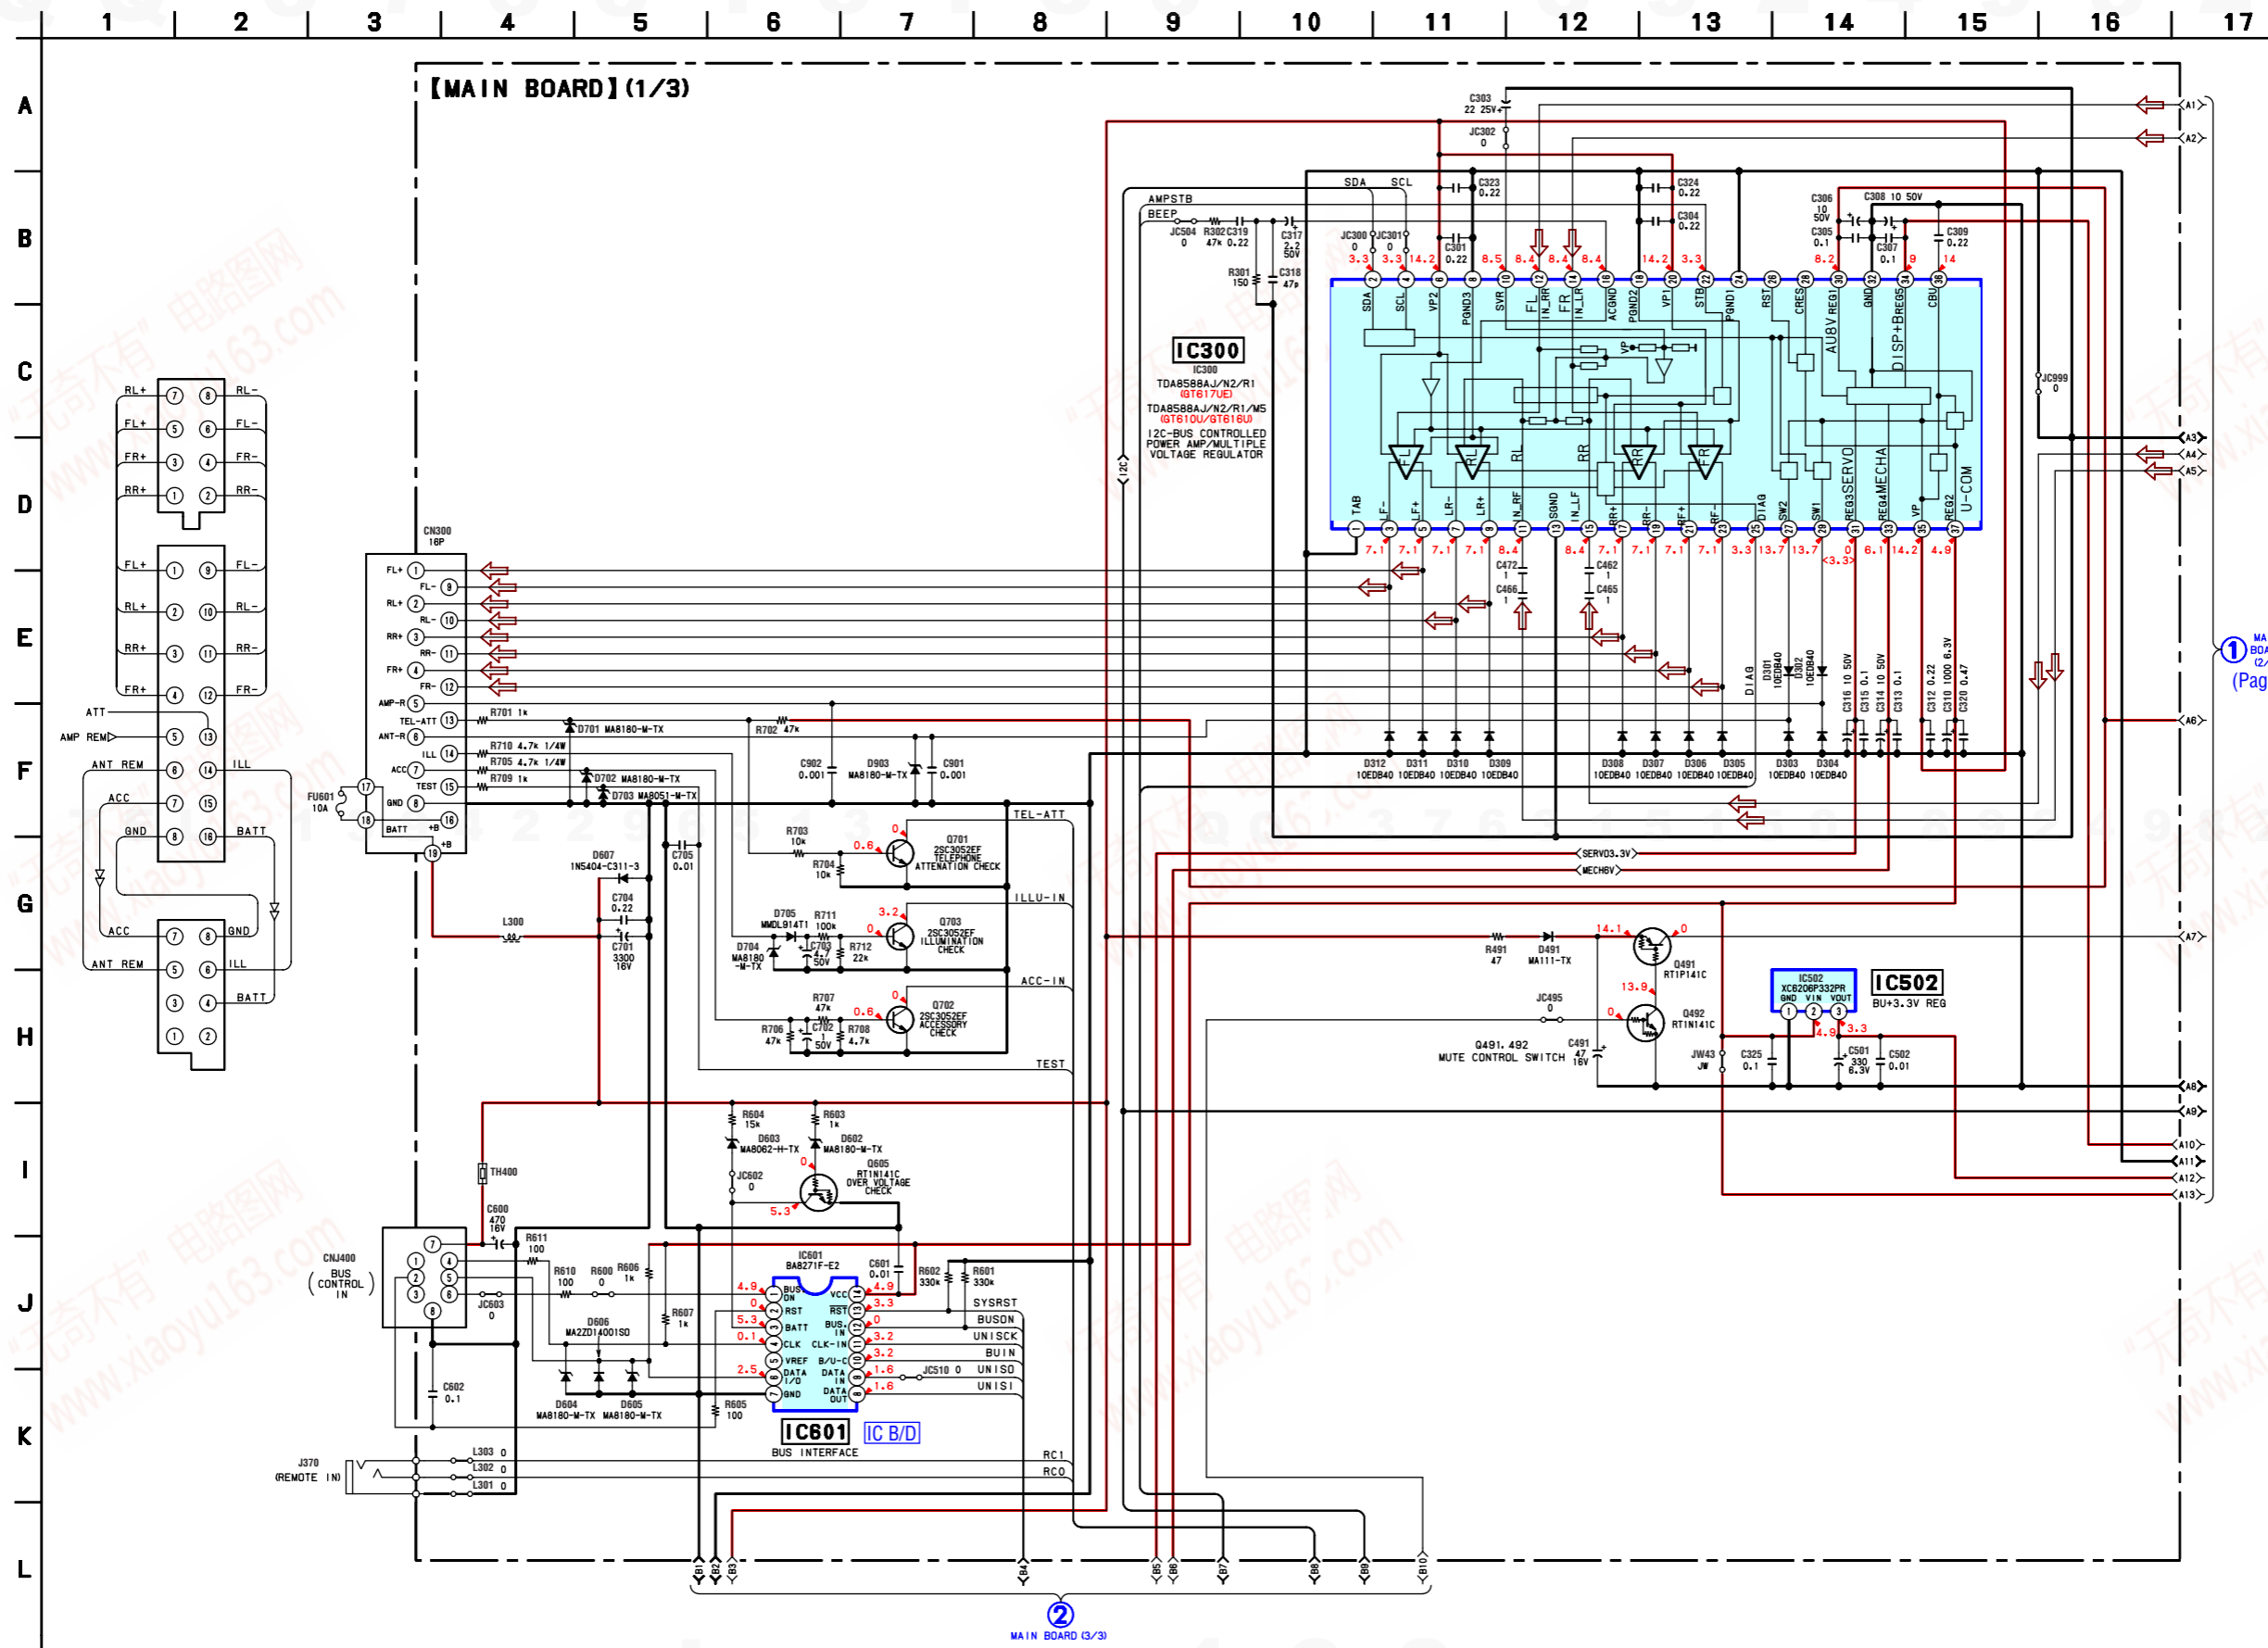

② MAIN BOARD (3/3) (Page 25)

4-5. SCHEMATIC DIAGRAM — MAIN SECTION (2/3) —

- Refer to page 21 for Waveforms.
- Refer to page 30 for IC Block Diagrams.

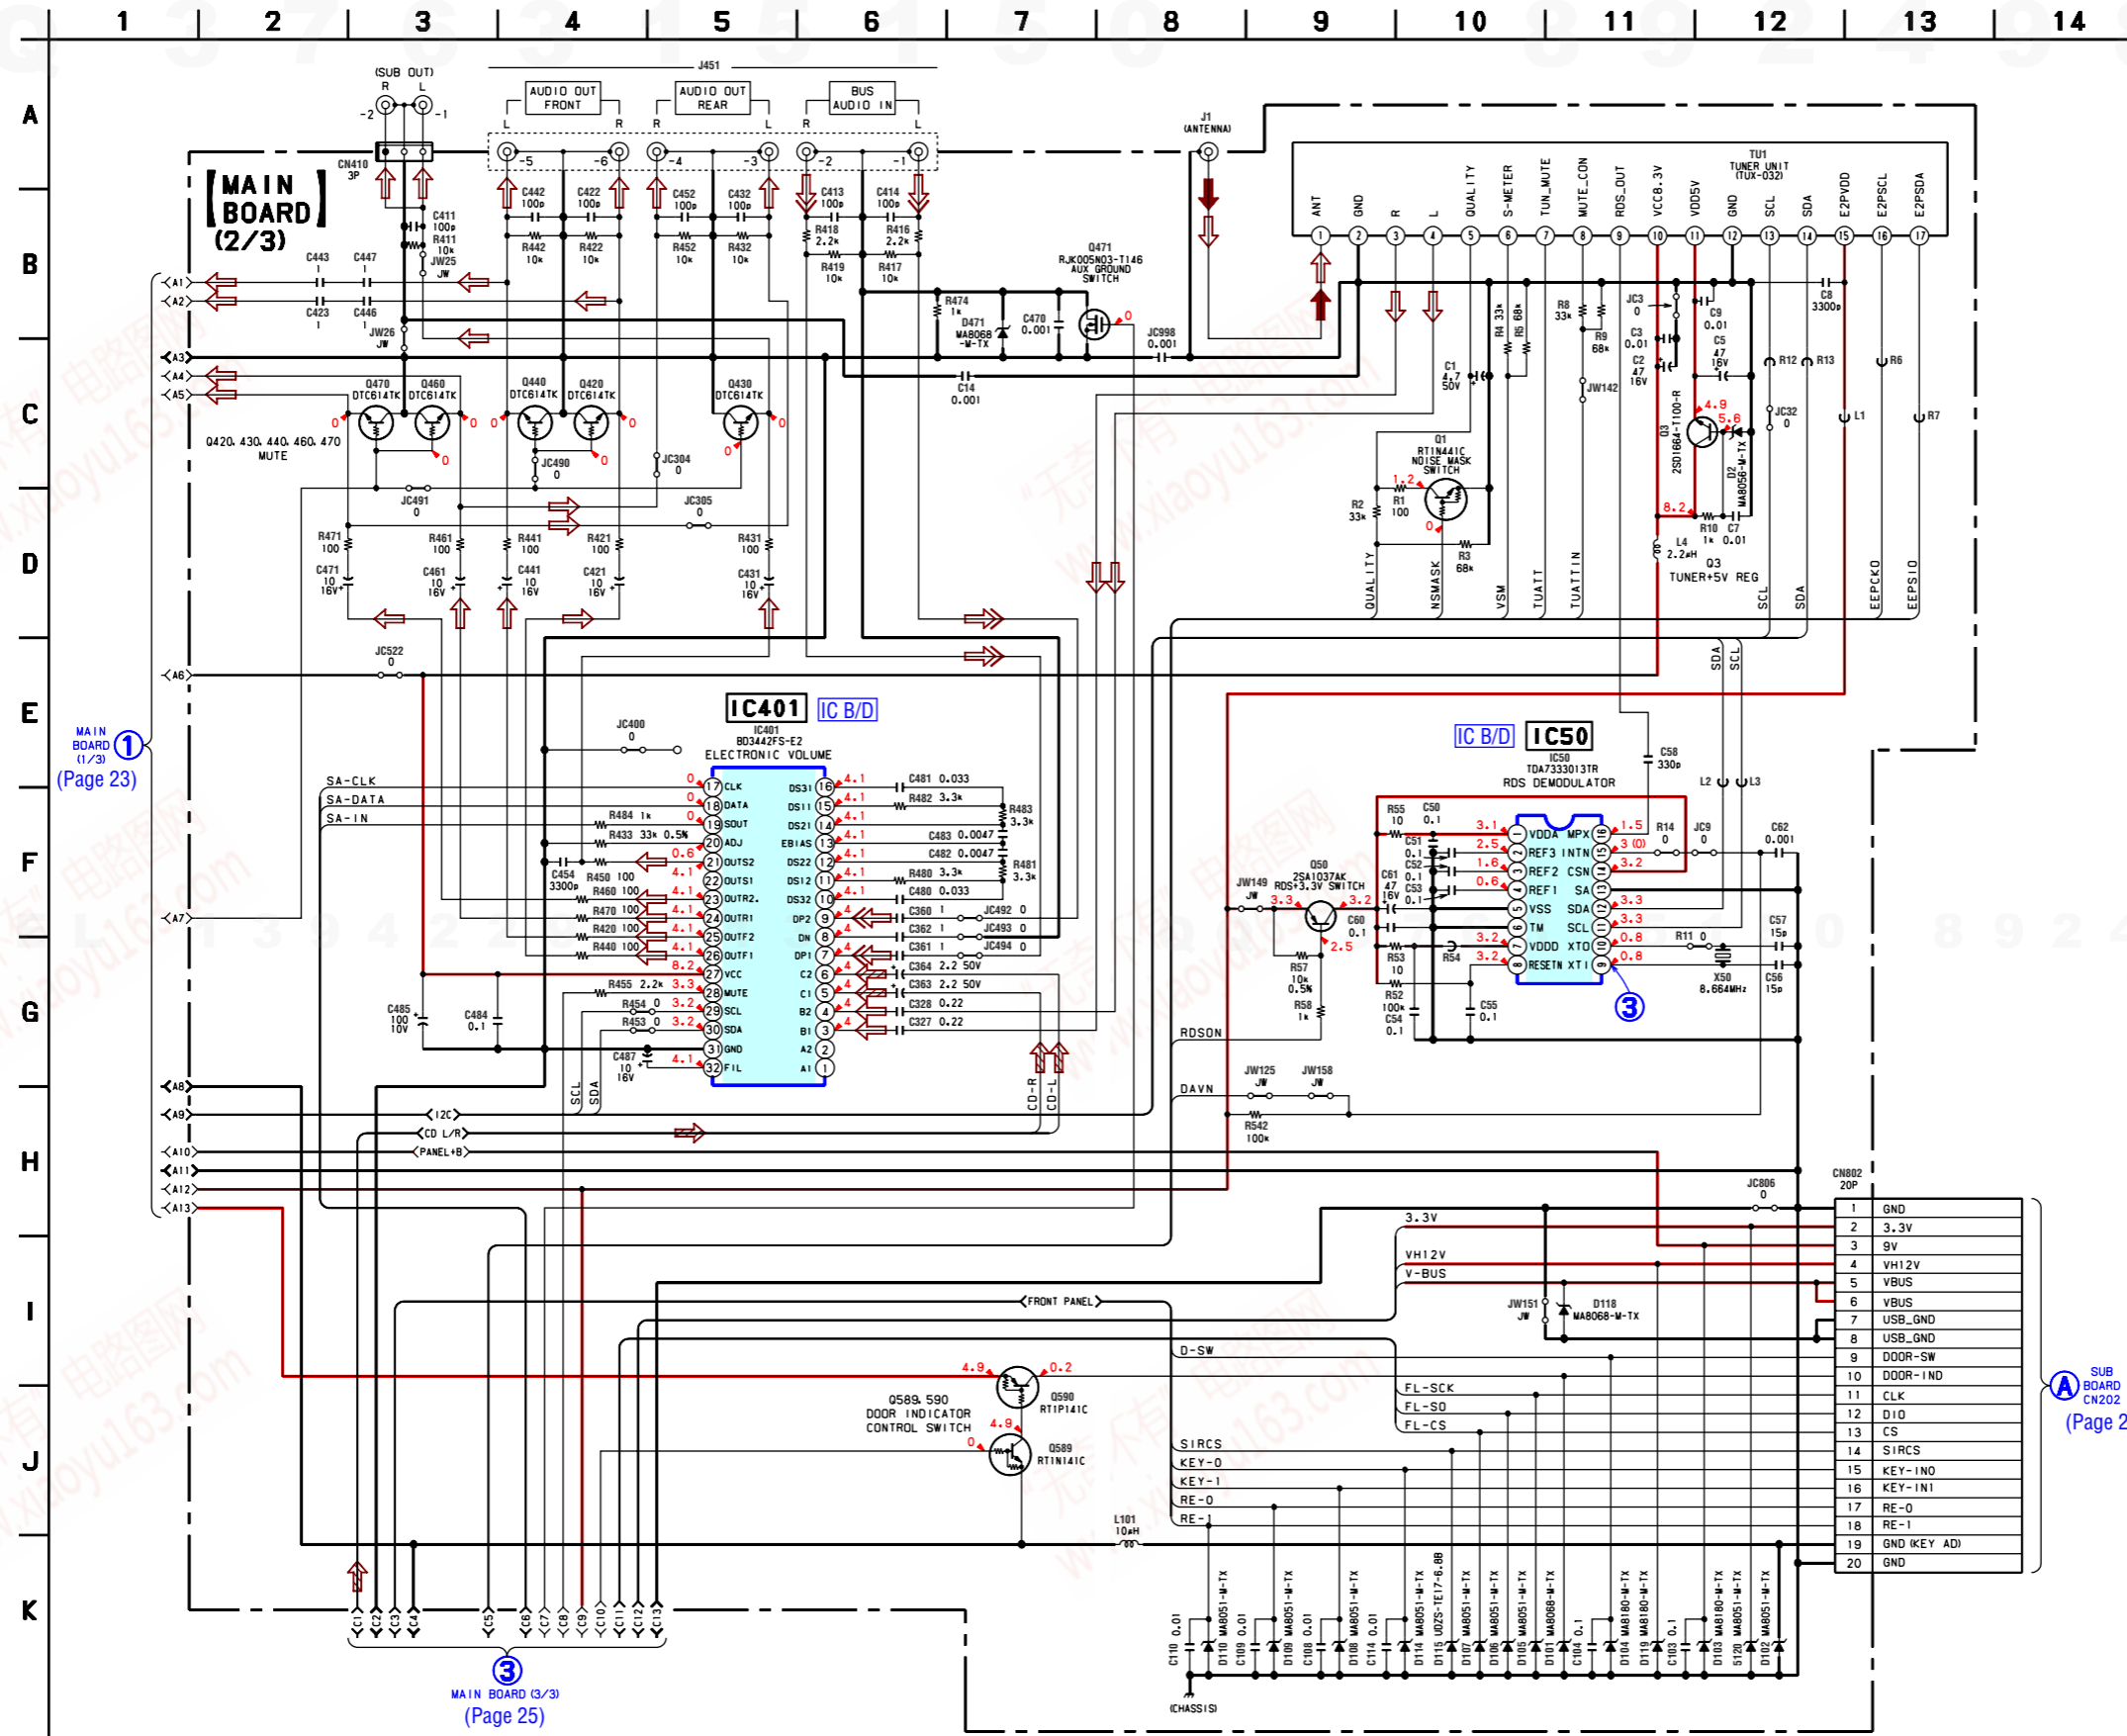


MAIN BOARD (1/3) (Page 23)

MAIN BOARD (3/3) (Page 25)


SUB BOARD CN202 (Page 27)

4-6. SCHEMATIC DIAGRAM — MAIN SECTION (3/3) —

- Refer to page 21 for Waveforms.
- Refer to page 30 for IC Block Diagrams.
- Refer to page 31 for IC Pin Description of IC501.

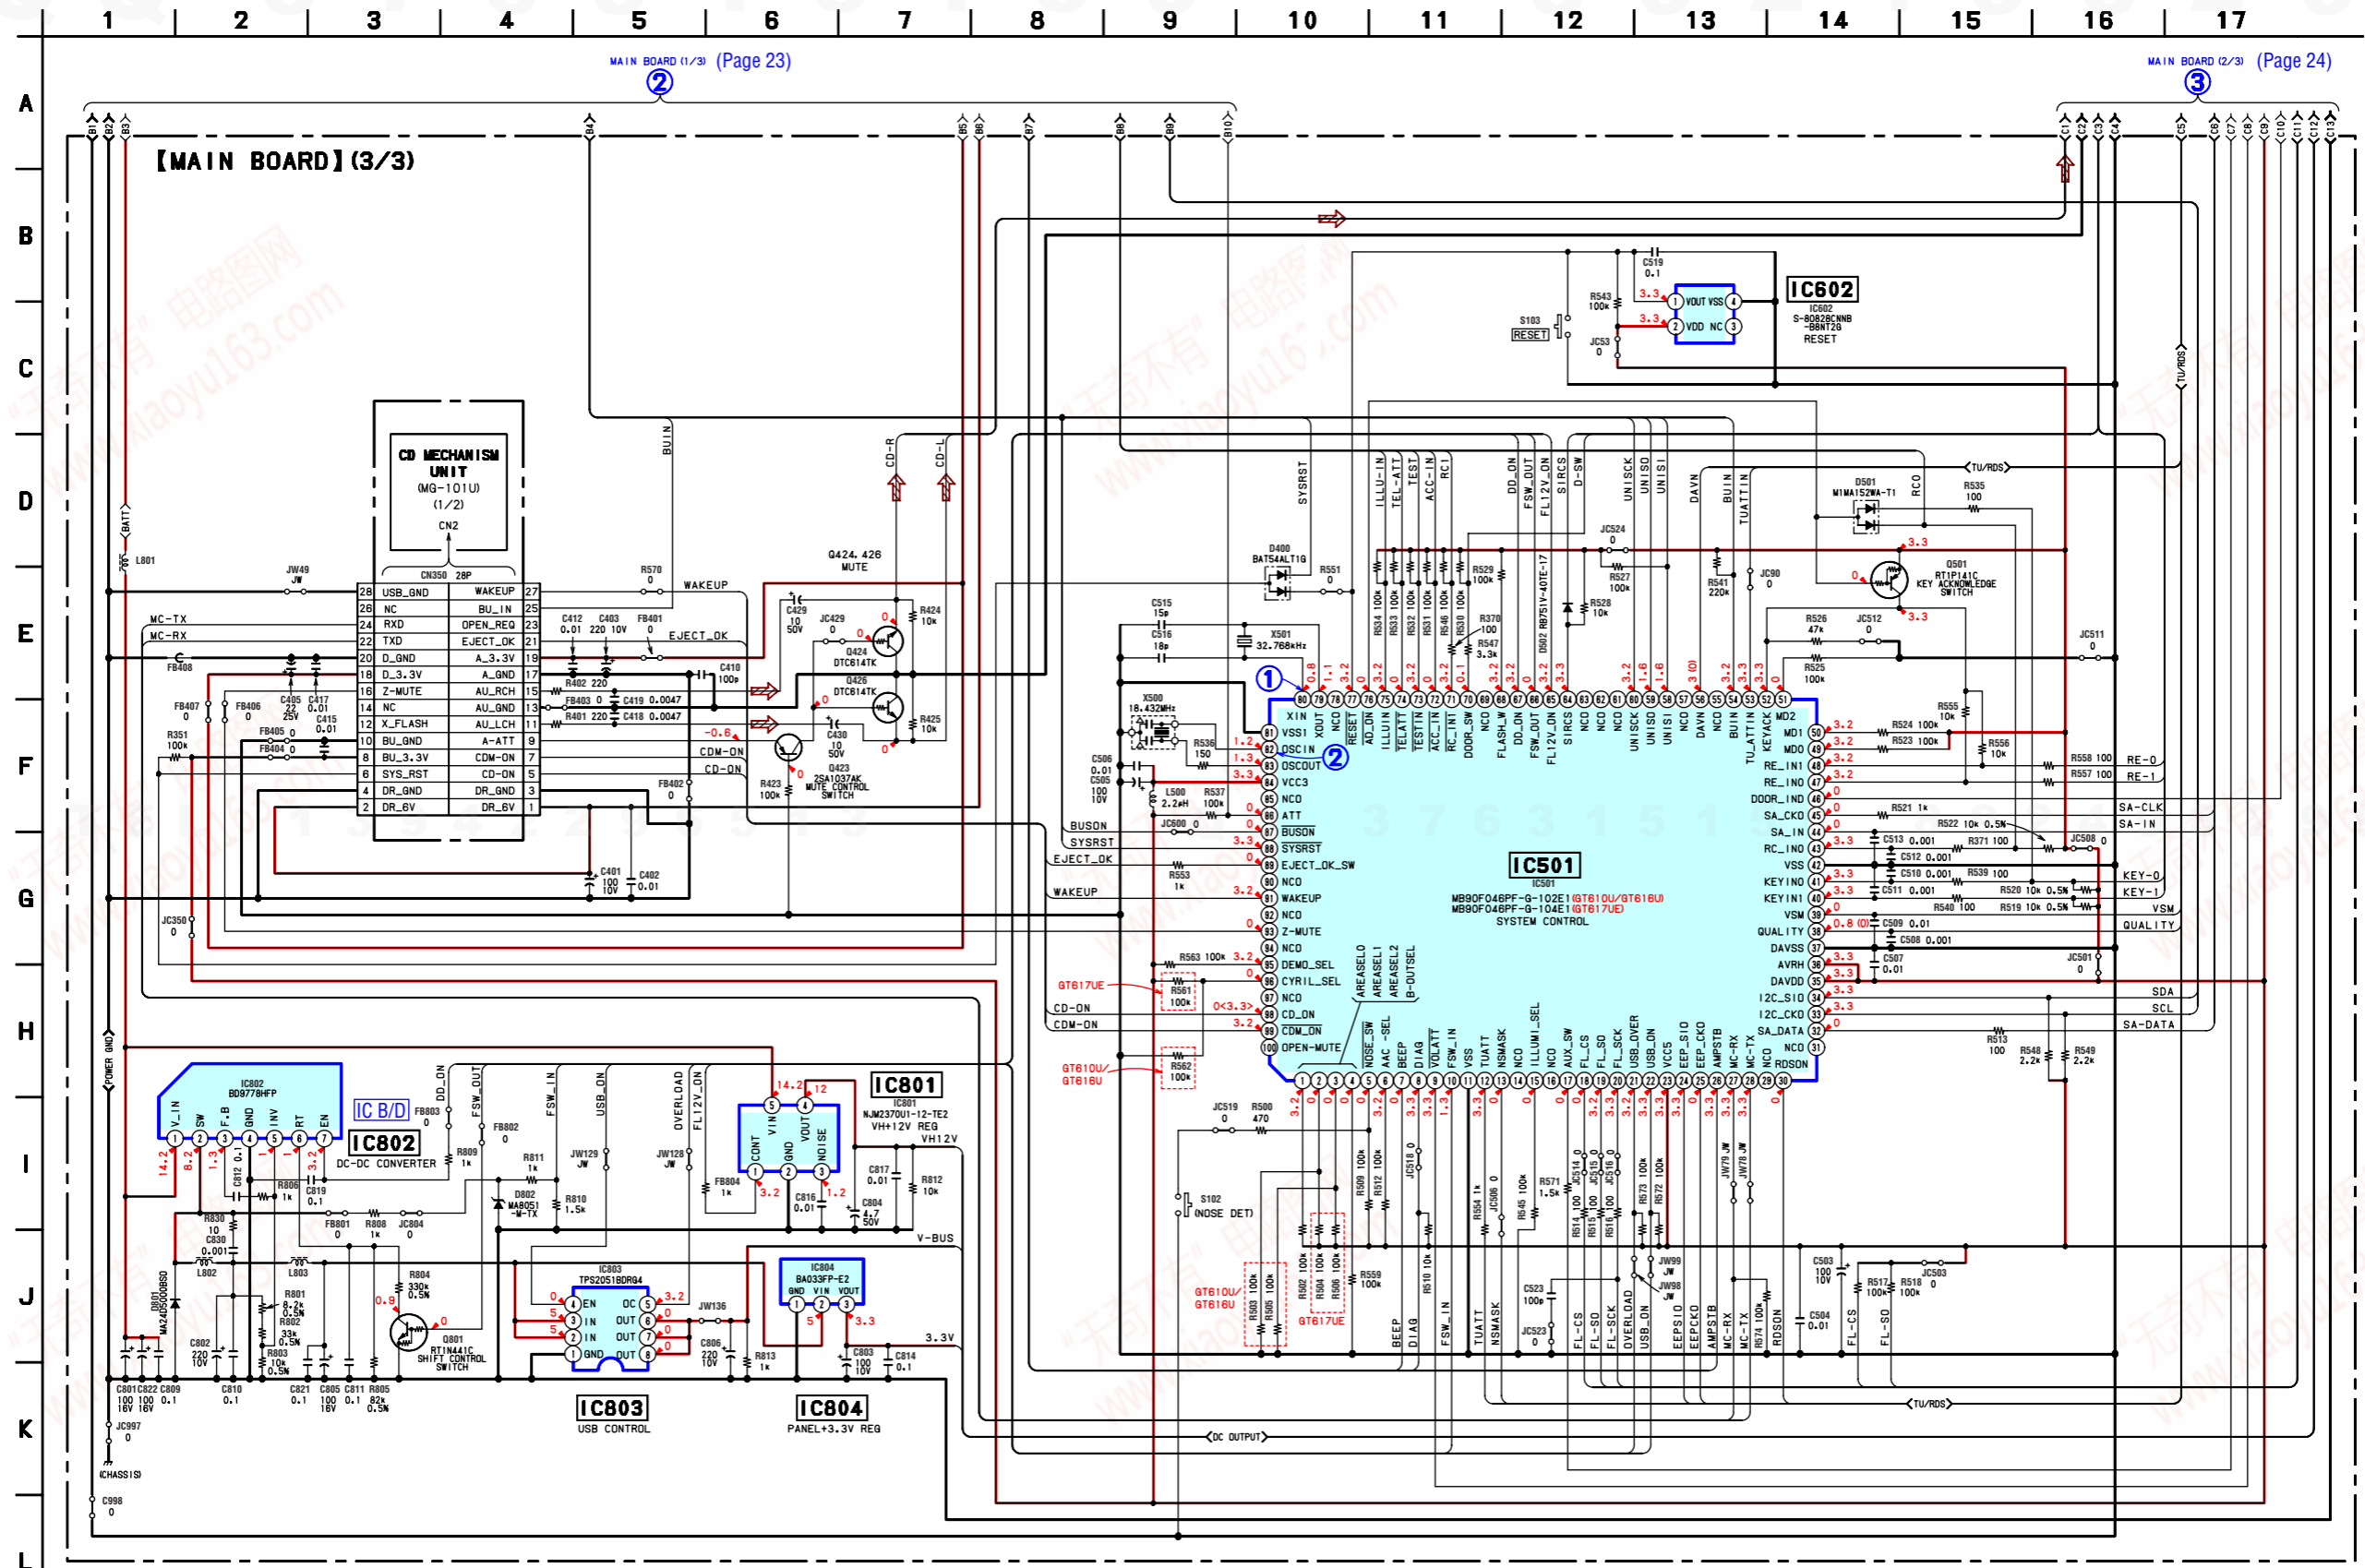


4-7. PRINTED WIRING BOARD — SUB SECTION —  : Uses unleaded solder.

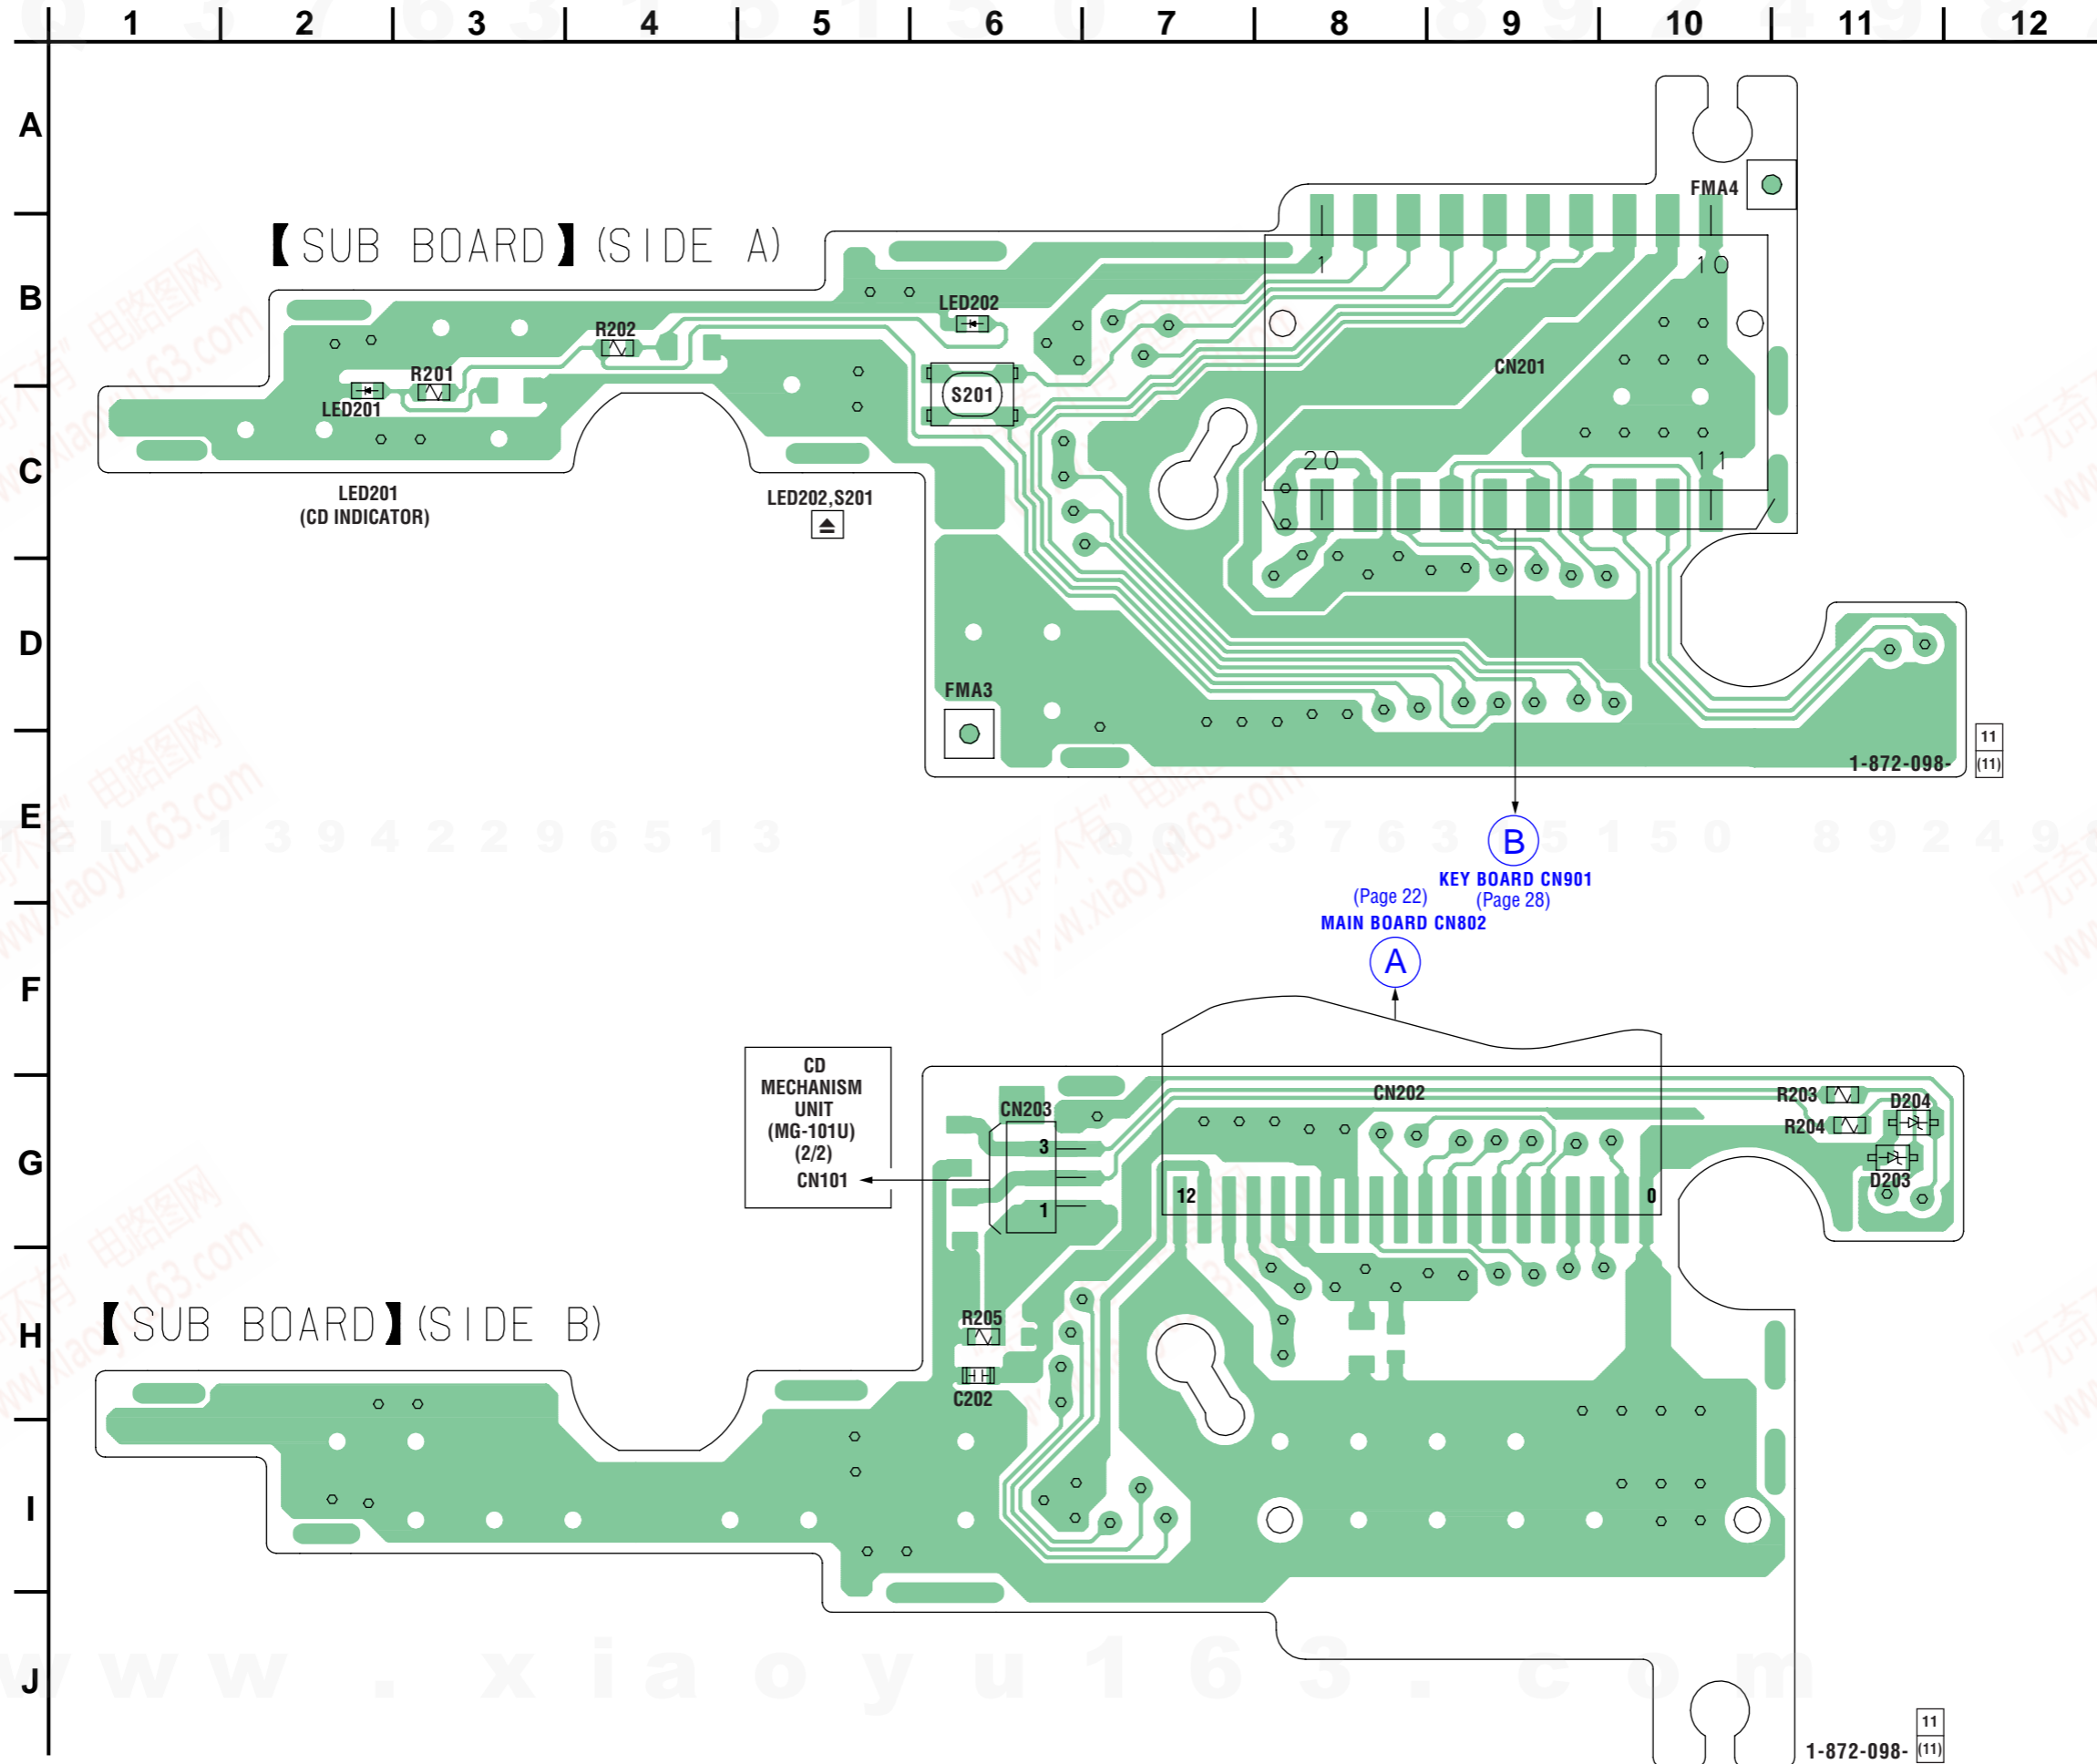

TEL 13942296513 QQ 376315150 892498299

TEL 13942296513 QQ 376315150 892498299


4-8. SCHEMATIC DIAGRAM — SUB SECTION —

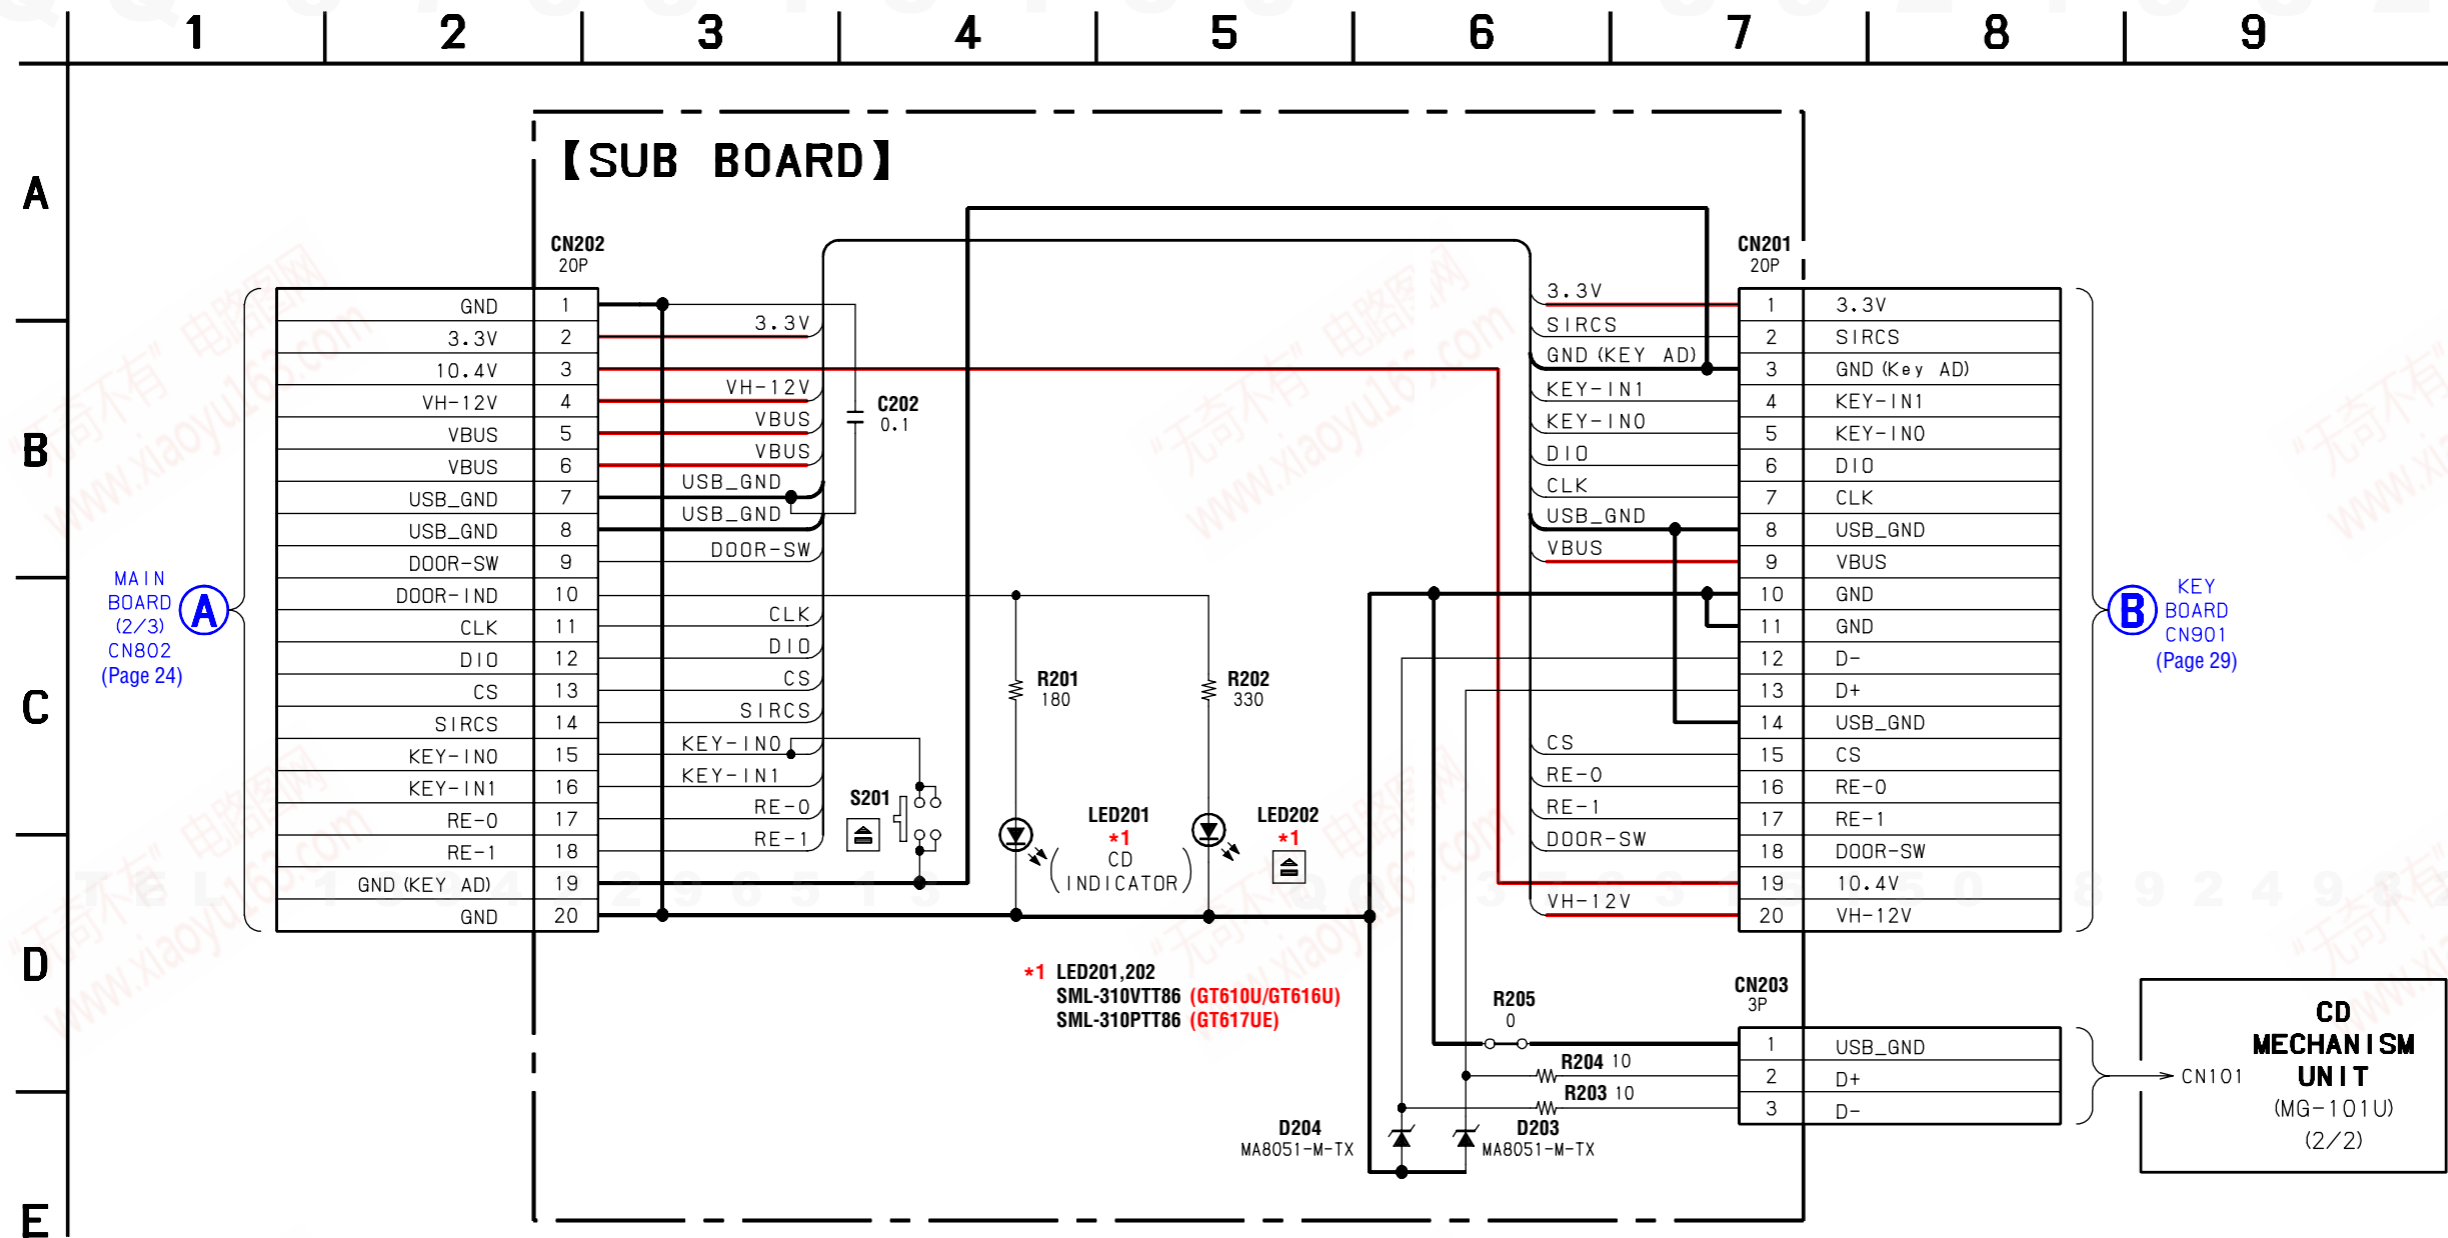

TEL 13942296513 QQ 376315150 892498299

TEL 13942296513 QQ 376315150 892498299


4-9. PRINTED WIRING BOARD — KEY SECTION —  : Uses unleaded solder.

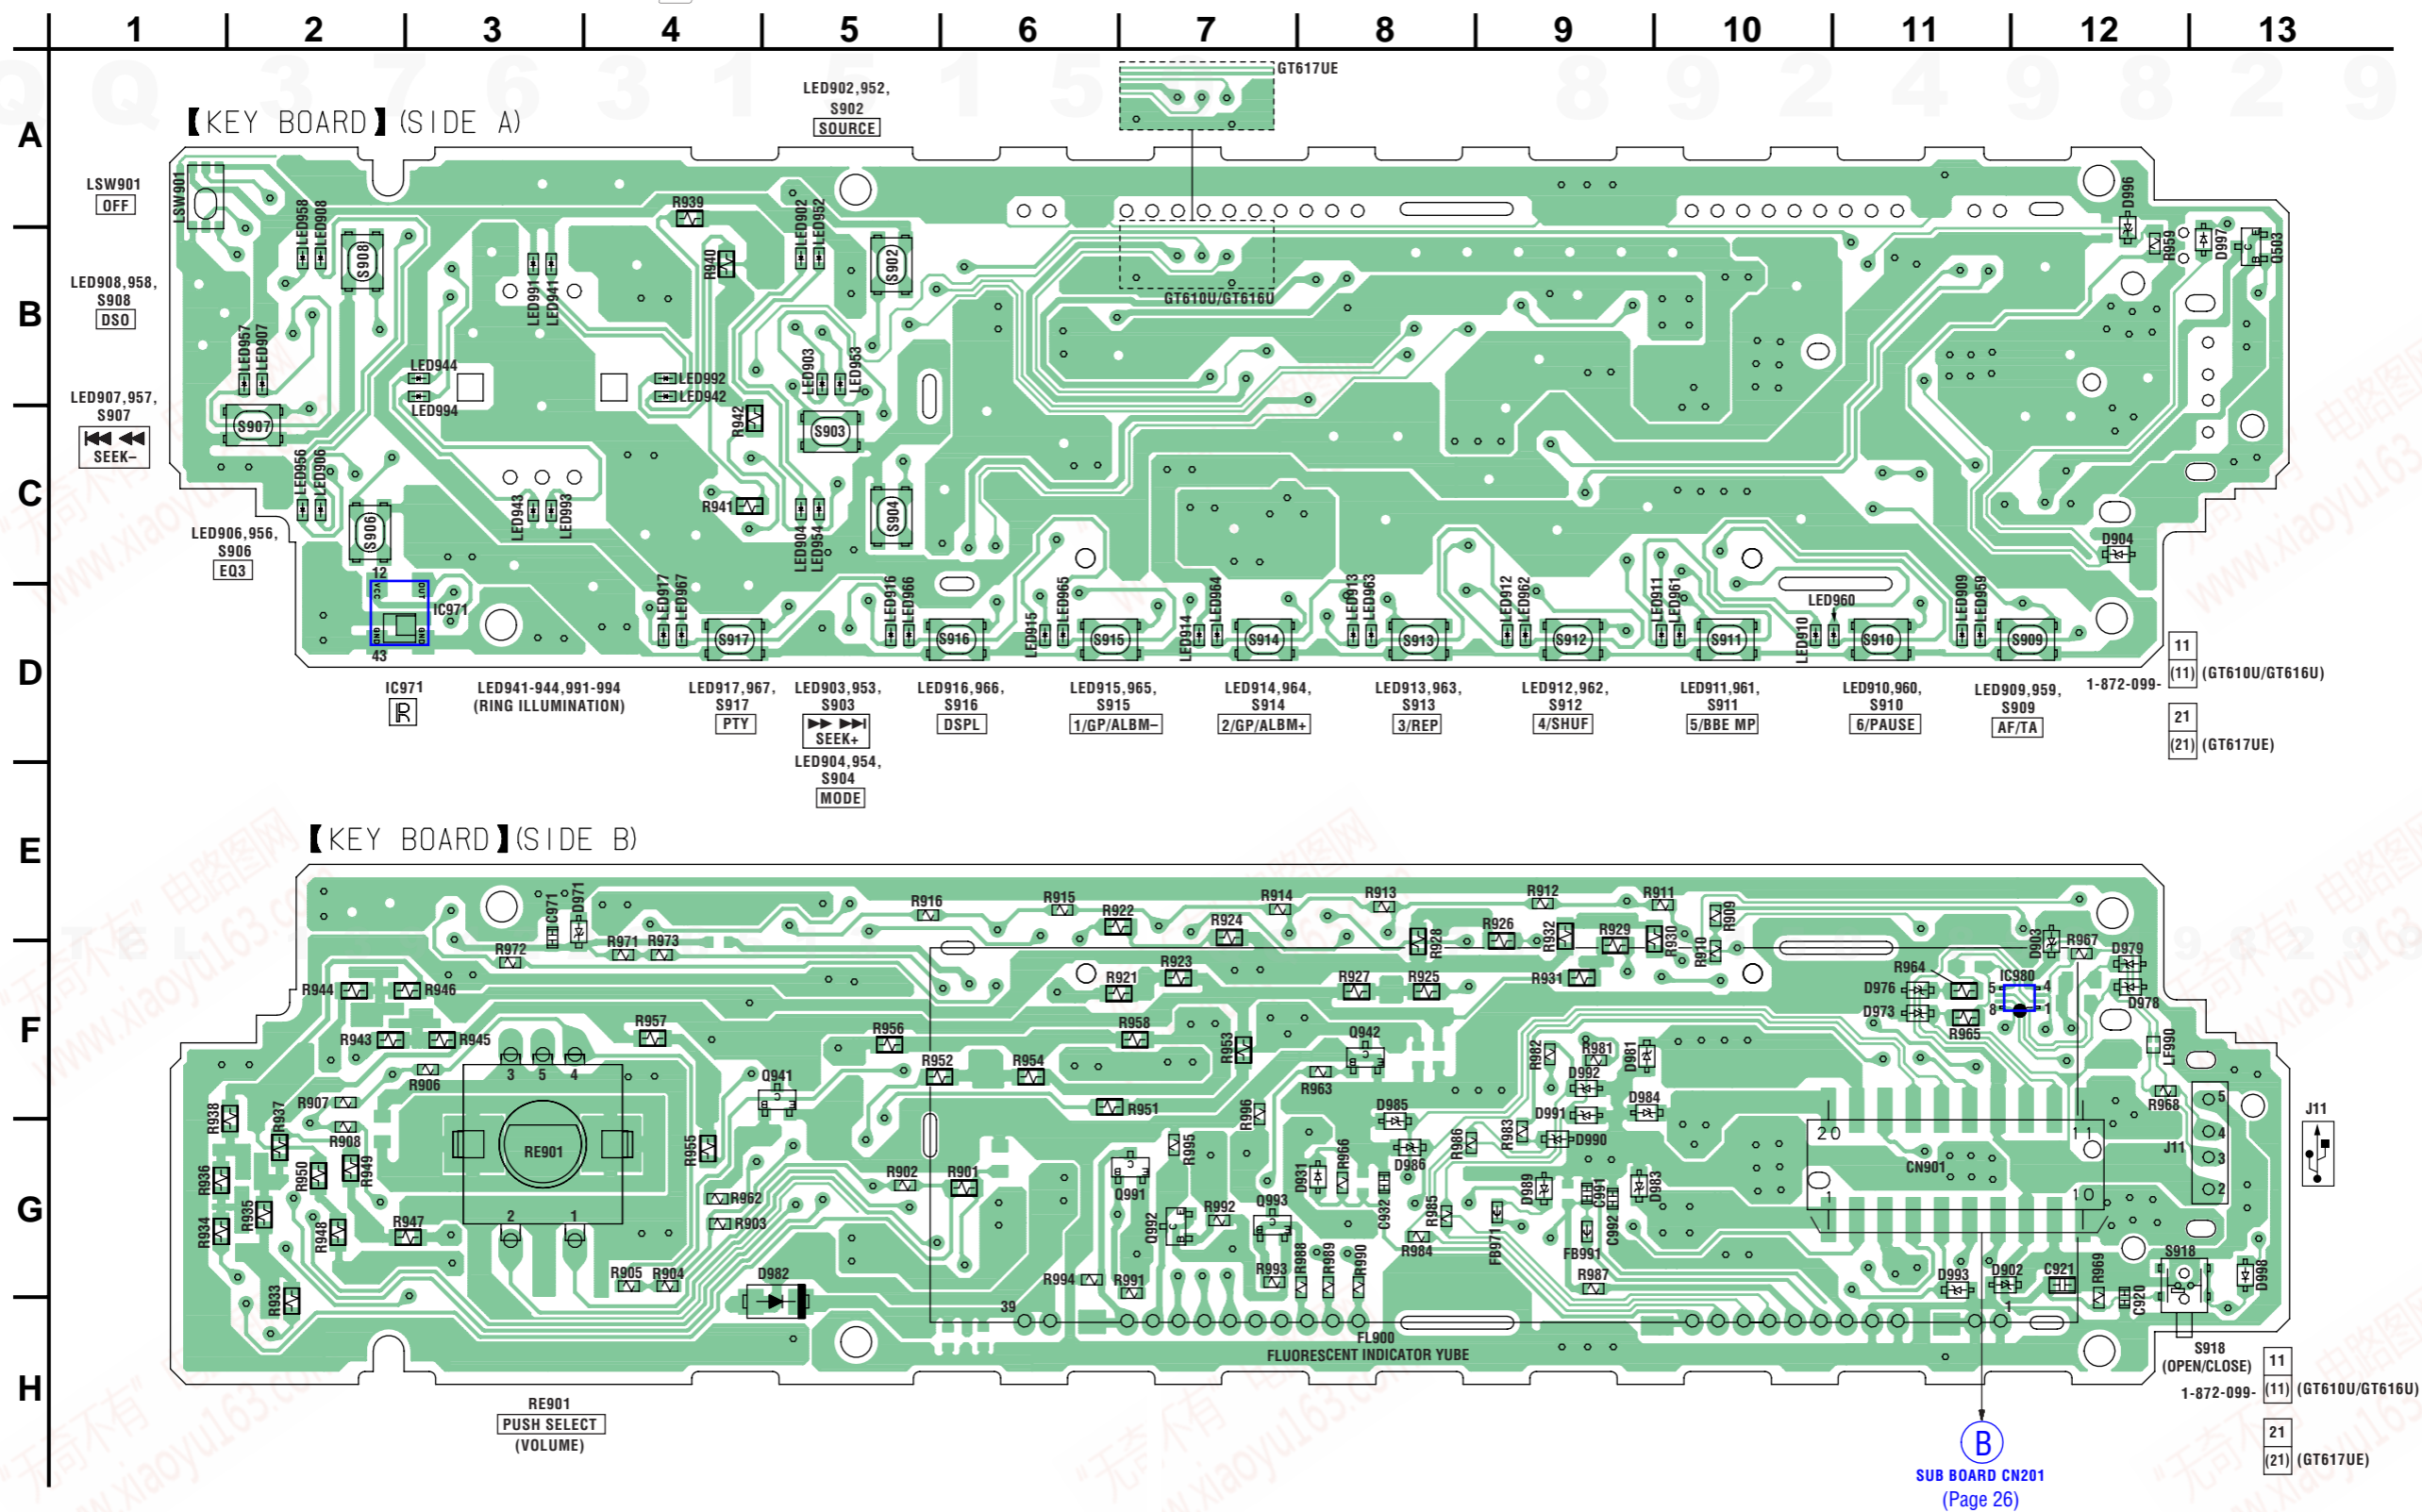

• Semiconductor Location


Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D902	G-11	D984	F-9	IC971	D-3	LED912	D-9	LED954	C-5	LED967	D-4
D903	E-12	D985	F-8	IC980	F-12	LED913	D-8	LED956	C-2	LED991	B-3
D904	C-12	D986	G-8			LED914	D-7	LED957	B-2	LED992	B-4
D931	G-8	D989	G-9	LED902	B-5	LED915	D-6	LED958	B-2	LED993	C-3
D971	E-3	D990	G-9	LED903	B-5	LED916	D-5	LED959	D-11	LED994	B-3
D973	F-11	D991	F-9	LED904	C-5	LED917	D-4	LED960	D-11		
D976	F-11	D992	F-9	LED906	C-2	LED941	B-3	LED961	D-10	Q503	B-13
D978	F-12	D993	G-11	LED907	B-2	LED942	B-4	LED962	D-9	Q941	F-5
D979	F-12	D996	A-12	LED908	B-2	LED943	C-3	LED963	D-8	Q942	F-8
D981	F-9	D997	B-13	LED909	D-11	LED944	B-3	LED964	D-7	Q991	G-7
D982	D-5	D998	G-13	LED910	D-10	LED952	B-5	LED965	D-6	Q992	G-7
D983	G-9			LED911	D-10	LED953	B-5	LED966	D-5	Q993	G-7

4-10. SCHEMATIC DIAGRAM — KEY SECTION —

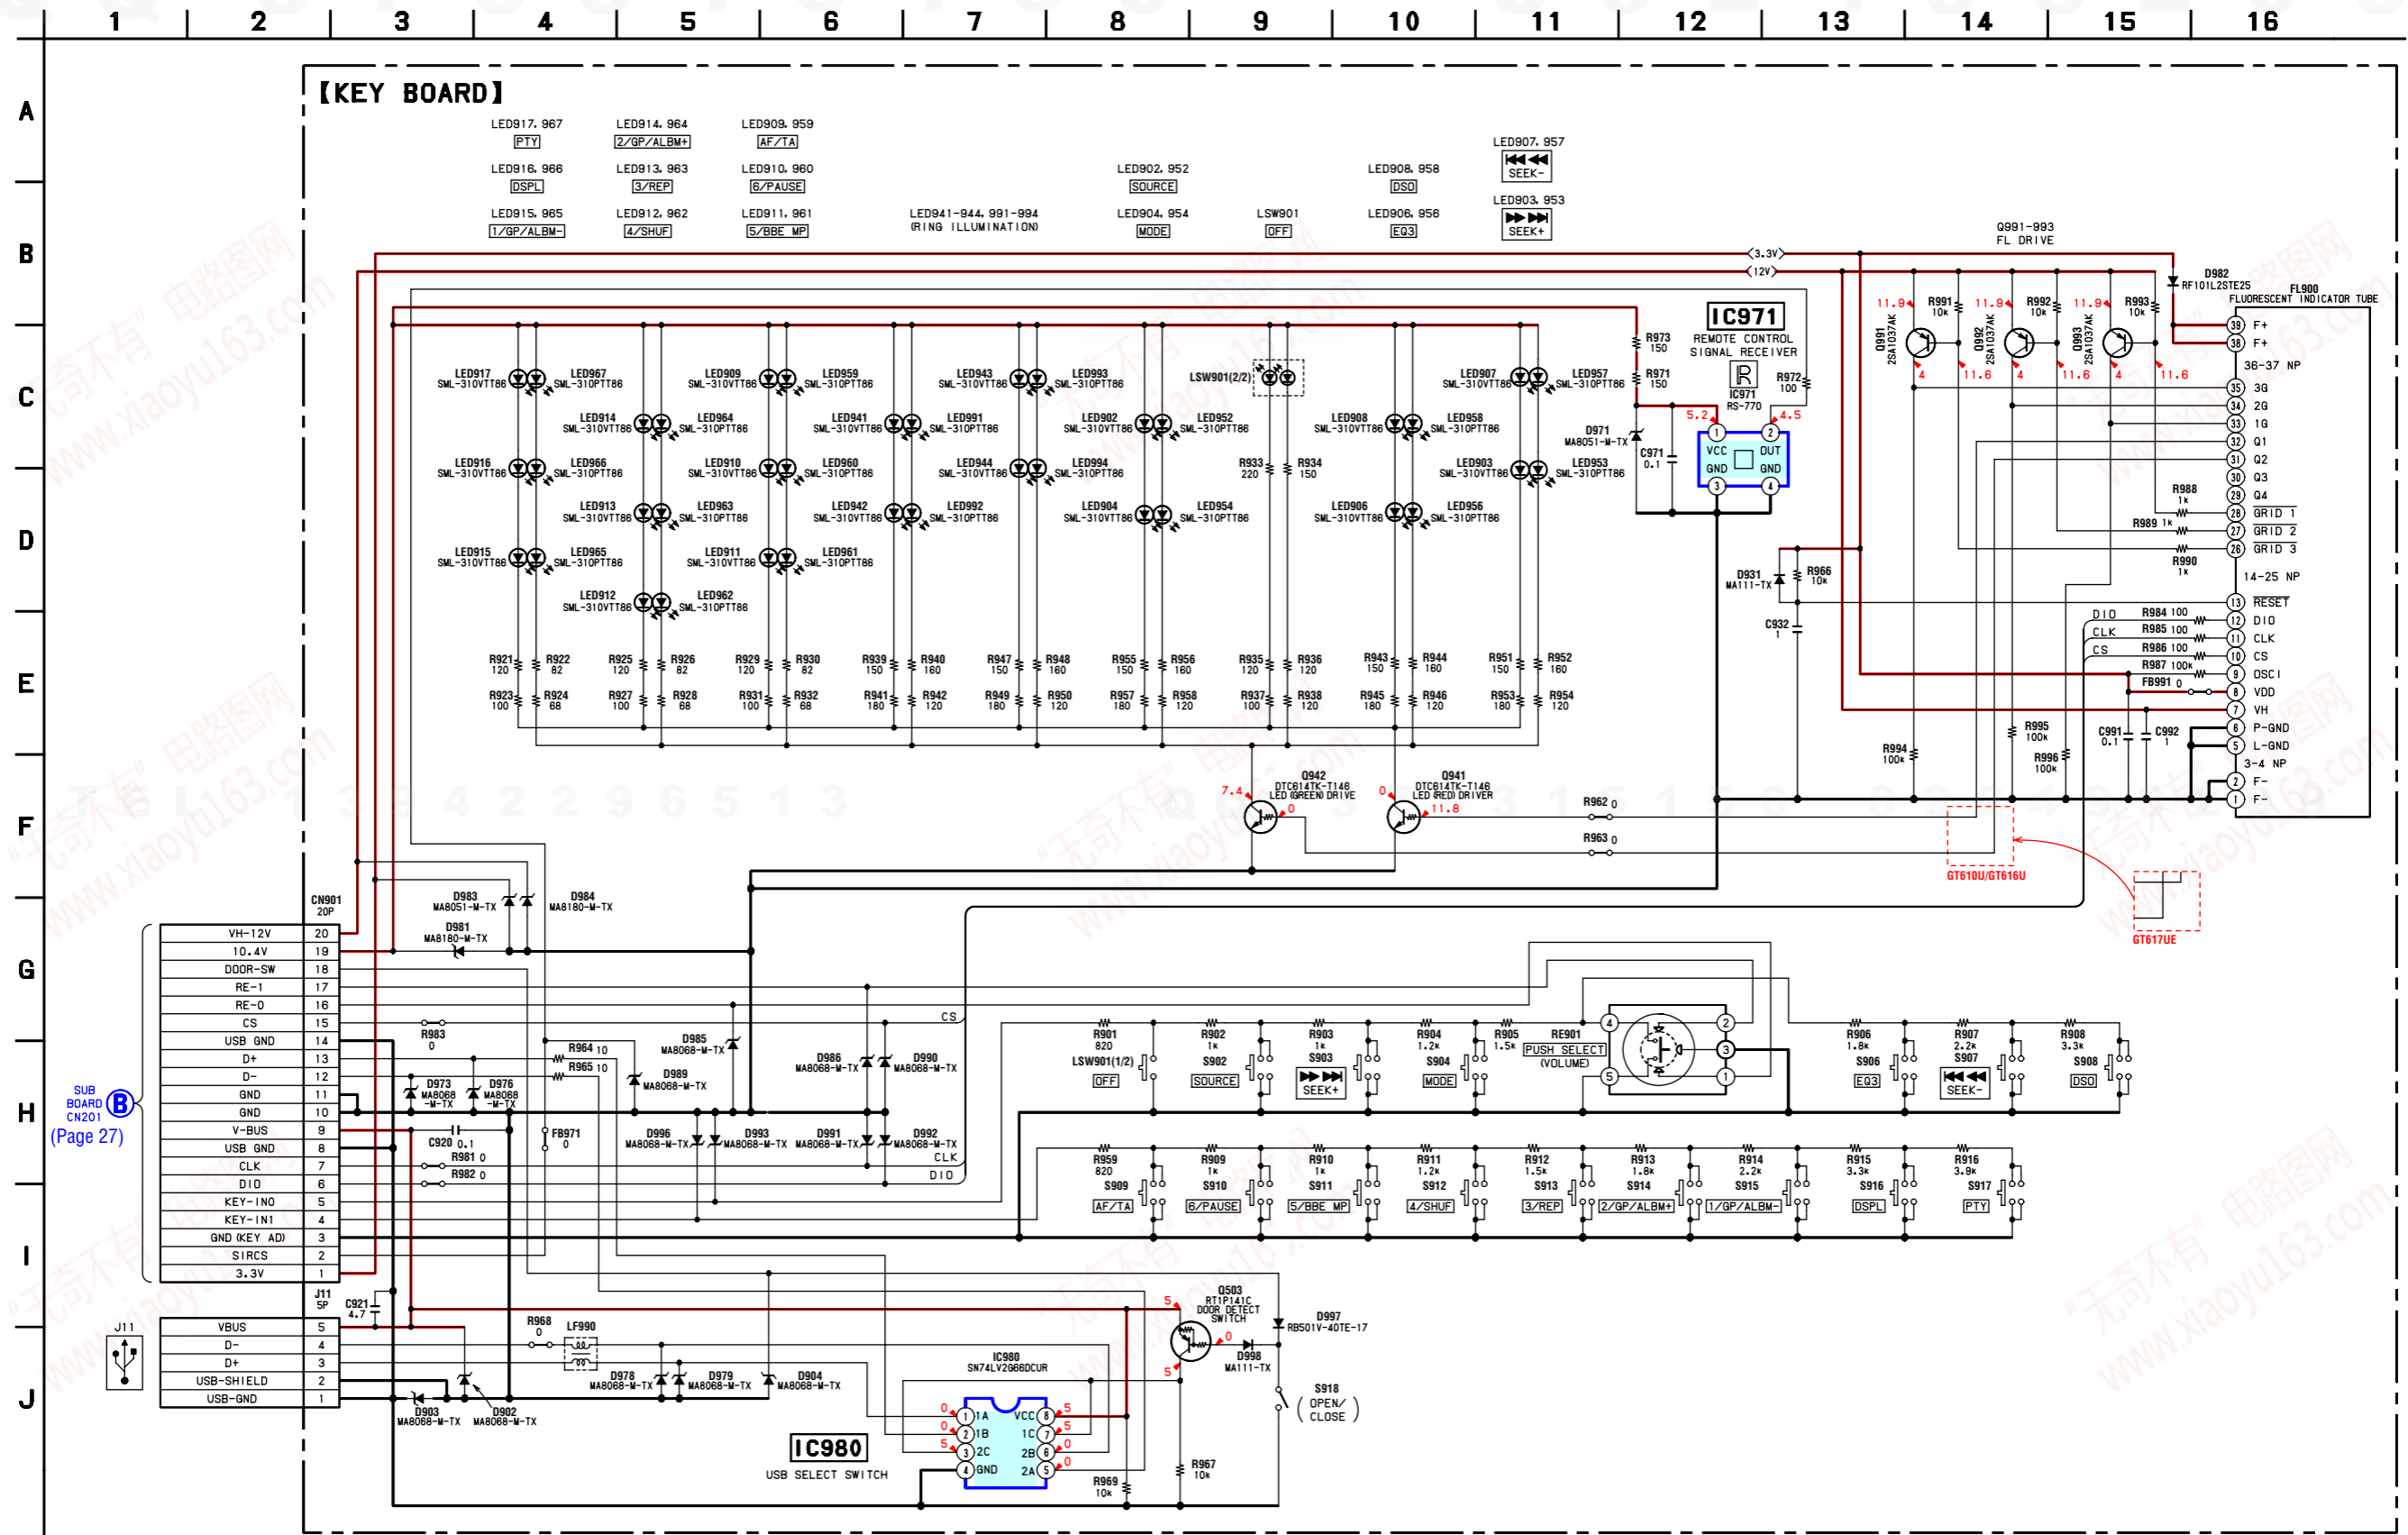


• IC BLOCK DIAGRAMS


IC601 BA8271F-E2 (MAIN Board (1/3))

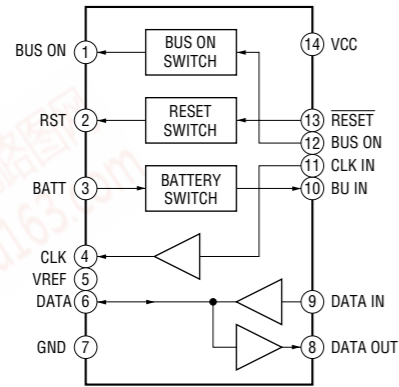


IC50 TDA7333013TR (MAIN Board (2/3))

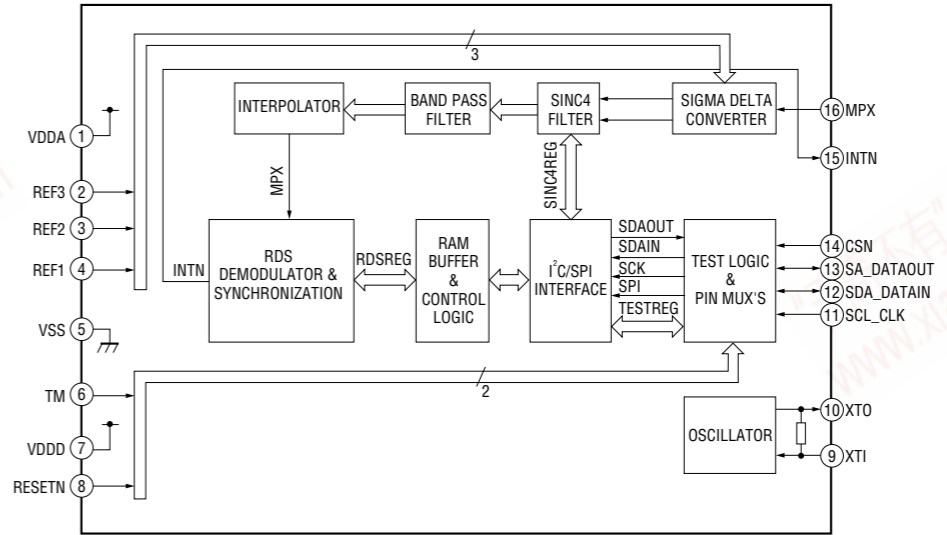

IC401 BD3442FS-E2 (MAIN Board (2/3))

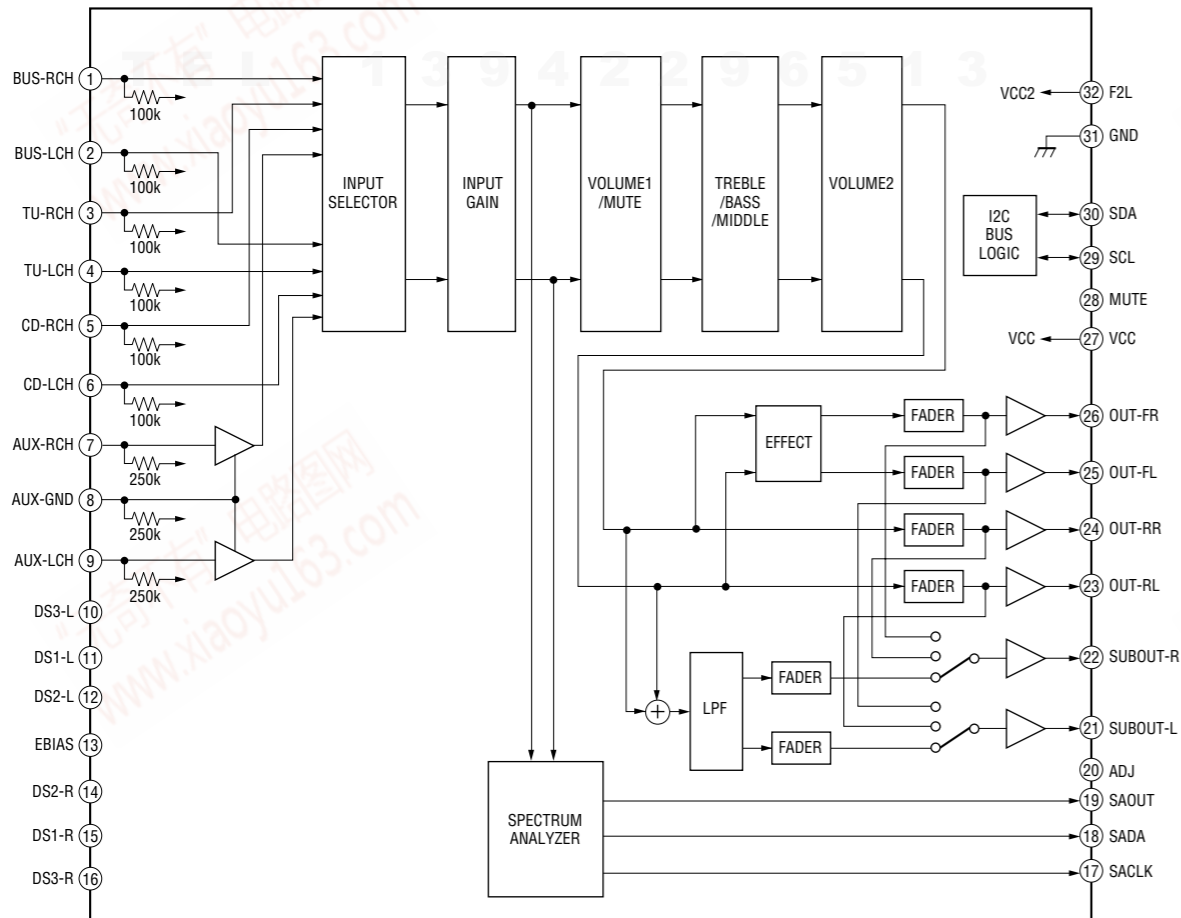

IC802 BD9778HFP (MAIN Board (3/3))

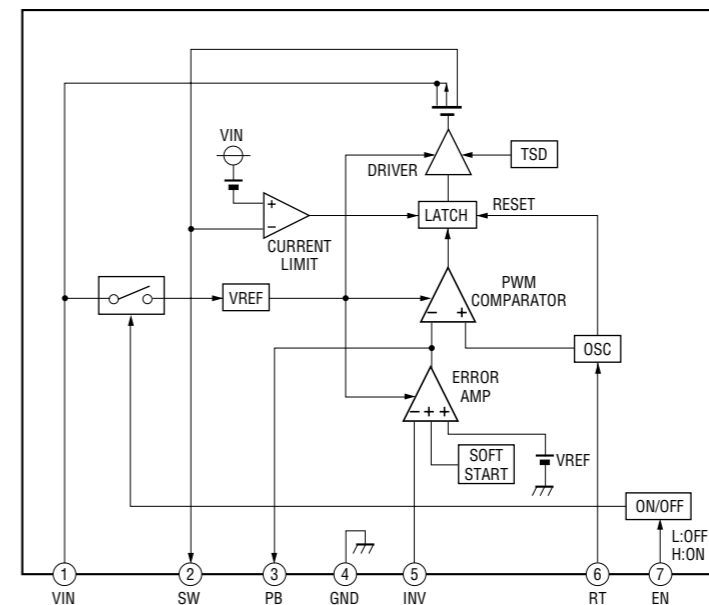

• IC PIN DESCRIPTION

IC501 MB90F046PF-G-102E1 (SYSTEM CONTROL) (CDX-GT610U/GT616U) (MAIN BOARD (3/3))

IC501 MB90F046PF-G-104E1 (SYSTEM CONTROL) (CDX-GT617UE) (MAIN BOARD (3/3))

Pin No.	Pin Name	I/O	Pin Description
1	AREASEL0	I	Destination setting pin 0
2	AREASEL1	I	Destination setting pin 1
3	AREASEL2	I	Destination setting pin 2
4	B-OUTSEL	I	Black-out with/without discrimination signal input "H": Black-out
5	NOSE SW	I	Front panel attachment detect signal input "L": with panel
6	AAC SEL	I	AAC play setting signal input "H": AAC
7	BEEP	O	Beep signal output to power amplifier
8	DIAG	I	Status signal input from power amplifier
9	VOLATT	O	Electronic volume attenuate control signal output
10	FSW IN	I	D/D converter oscillator frequency count signal input
11	VSS	—	Ground pin
12	TUATT	O	Tuner mute control signal output
13	NSMASK	O	Noise mask signal output
14	NCO	O	Not used. (Open)
15	ILLUMI SEL	I	Illumination voltage setting signal input
16	NCO	O	Not used. (Open)
17	AUX SW	O	AUX change over signal output "L": AUX, "H": BUS IN
18	FL CS	O	Fluorescent indicator tube chip select signal output
19	FL SO	O	Fluorescent indicator tube serial data signal output
20	FL SCK	O	Fluorescent indicator tube serial clock signal output
21	USB OVR	I	Overcurrent detect signal input from USB power supply high side switch
22	USB ON	O	USB power supply high side switch control signal output
23	VCC5	—	Power supply pin (+3.3 V)
24	EEP SIO	I/O	EEPROM bus serial data signal input/output
25	EEP CKO	O	EEPROM bus serial clock signal output
26	AMPSTB	O	Standby signal output to power amplifier
27	MC RX	I	Mechanism microcomputer communication signal input RX
28	MC TX	O	Mechanism microcomputer communication signal output TX
29	NCO	O	Not used. (Open)
30	RDS ON	O	RDS (Radio Data System) on signal output Tuner on: "L"
31	NCO	O	Not used. (Open)
32	SA DATA	O	Data signal output for electronic volume IC spectrum analyzer
33	I2C SCK	O	I2C bus serial clock signal output
34	I2C SIO	I/O	I2C bus serial data signal input/output
35	DAVDD	—	A/D converter power supply pin (+3.3 V)
36	AVRH	—	A/D converter external reference power supply pin (+3.3 V)
37	DAVSS	—	Ground pin
38	QUALITY	I	Noise detect signal input
39	VSM	I	S-meter voltage detect signal input
40	KEYIN1	I	Key signal input 1
41	KEYIN0	I	Key signal input 0
42	VSS	—	Ground pin
43	RCIN0	I	Rotary commander key signal input
44	SA IN	I	Spectrum analyzer data signal input
45	SA CKO	O	Spectrum analyzer clock signal output
46	DOOR IND	O	Disc door indicator control signal output
47	RE IN0	I	Rotary encoder signal input 0
48	RE IN1	I	Rotary encoder signal input 1
49	MD0	I	Operation mode setting pin (Connect to VDD.)

CDX-GT610U/GT616U/GT617UE

Pin No.	Pin Name	I/O	Pin Description
50	MD1	I	Operation mode setting pin (Connect to VDD.)
51	MD2	I	Operation mode setting pin (Connect to VSS.)
52	KEYACK	I	Key acknowledgment detect signal input
53	TU ATTIN	I	Tuner mute zero cross detect signal input
54	BUIN	I	Back-up power supply detect signal input
55	NCO	O	Not used. (Open)
56	DAVN	I	RDS (Radio Data System) data block synchronized detect signal input
57	NCO	O	Not used. (Open)
58	UNISI	I	SONY bus data signal input
59	UNISO	O	SONY bus data signal output
60	UNISCK	O	SONY bus clock signal output
61 to 63	NCO	O	Not used. (Open)
64	SIRCS	I	Remote control signal input
65	FL12V ON	O	12V power supply control signal output for fluorescent indicator tube
66	FSW OUT	O	D/D converter oscillator frequency shift control signal output
67	DD ON	O	3.3V D/D converter power on/off control signal output for fluorescent indicator tube
68	FLASH W	I	Memory mode change signal input Normally "H": Single chip mode, after reset "L": flash write mode
69	NCO	O	Not used. (Open)
70	DOOR SW	I	Front panel open/close detect switch signal input
71	RC IN1	I	Rotary commander shift key signal input
72	ACC IN	I	Accessory power supply detect signal input
73	TESTIN	I	Test mode detect signal input
74	TELATT	I	Telephone attenuate detect signal input
75	ILLUIN	I	Illumination detect signal input "H": Illumination off
76	AD ON	O	A/D converter power supply control signal output
77	RESET	I	CPU reset signal input
78	NCO	O	Not used. (Open)
79	XOUT	O	Low speed operation clock signal output (32.768 kHz)
80	XIN	I	Low speed operation clock signal input (32.768 kHz)
81	VSS1	—	Ground pin
82	OSCIN	I	High speed operation clock signal input (18.432 MHz)
83	OSCOU	O	High speed operation clock signal output (18.432 MHz)
84	VCC3	—	Power supply pin (+3.3 V)
85	NCO	O	Not used. (Open)
86	ATT	O	Audio mute control signal output
87	BUSON	O	Bus on signal output
88	SYRST	O	System reset signal output
89	EJECT OK SW	O	Eject OK signal output to CD mechanism unit
90	NCO	O	Not used. (Open)
91	WAKE UP	O	Mechanism microcomputer wake up signal output
92	NCO	O	Not used. (Open)
93	Z MUTE	I	Mute signal input
94	NCO	O	Not used. (Open)
95	DEMO SEL	I	DEMO select signal input "H": DEMO on, "L": DEMO off
96	CYRIL SEL	I	Cyril correspondence discrimination signal input "L": No correspondence
97	NCO	O	Not used. (Open)
98	CD ON	I	CD mechanism servo power supply control request signal input
99	CDM ON	I	CD mechanism deck power supply control request signal input
100	OPEN MUTE	O	Not used. (Open)

SECTION 5 EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example :


KNOB, BALANCE (WHITE) ... (RED)

↑↑
Parts Color Cabinet's Color

- Accessories are given in the last of this parts list.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


5-1. MAIN SECTION

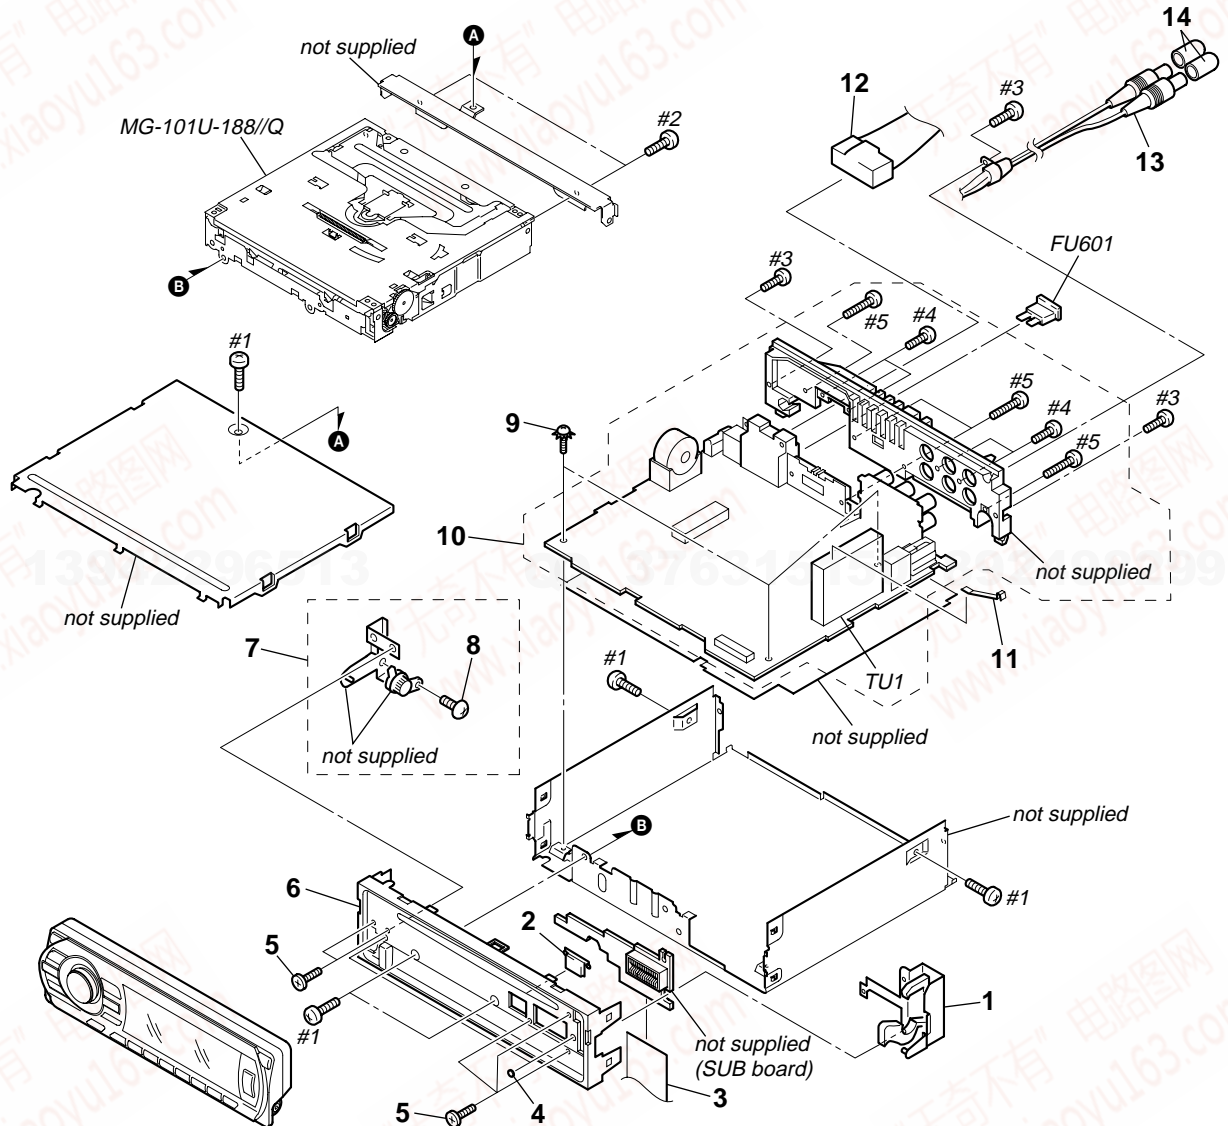

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	X-2149-741-1	LOCK ASSY		11	2-021-848-01	SHEET (TU), GROUND	
23	-246-441-01	BUTTON (EJECT)		12	1-831-837-11	CORD (WITH CONNECTOR) (ISO) (POWER)	
31	-833-591-11	CABLE, FLEXIBLE FLAT (20 CORE)		13	1-833-887-11	CONNECTION CORD (RCA) (SUB OUT (MONO))	
43	-260-247-01	CUSHION (SUB PANEL)		14	3-264-798-01	CAP	
53	-042-244-01	SCREW (T)		FU601	1-532-877-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A	
6	X-2149-726-1	PANEL ASSY, SUB		TU1	A-3220-961-B	TUNER UNIT (TUX-032)	
7	X-3384-203-1	GEAR ASSY		#1	7-685-792-09	SCREW +PTT 2.6X6 (S)	
83	-713-786-51	SCREW +P 2X3		#2	7-685-790-01	SCREW +PTT 2.6X4 (S)	
93	-376-464-11	SCREW (+PTT 2.6X6), GROUND POINT		#3	7-685-793-09	SCREW +PTT 2.6X8 (S)	
10	A-1217-699-A	MAIN BOARD, COMPLETE (GT610U/GT616U)		#4	7-685-134-19	SCREW +P 2.6X8 TYPE2 NON-SLIT	
10	A-1217-728-A	MAIN BOARD, COMPLETE (GT617UE)		#5	7-685-794-09	SCREW +PTT 2.6X10 (S)	

CDX-GT610U/GT616U/GT617UE


5-2. FRONT PANEL SECTION

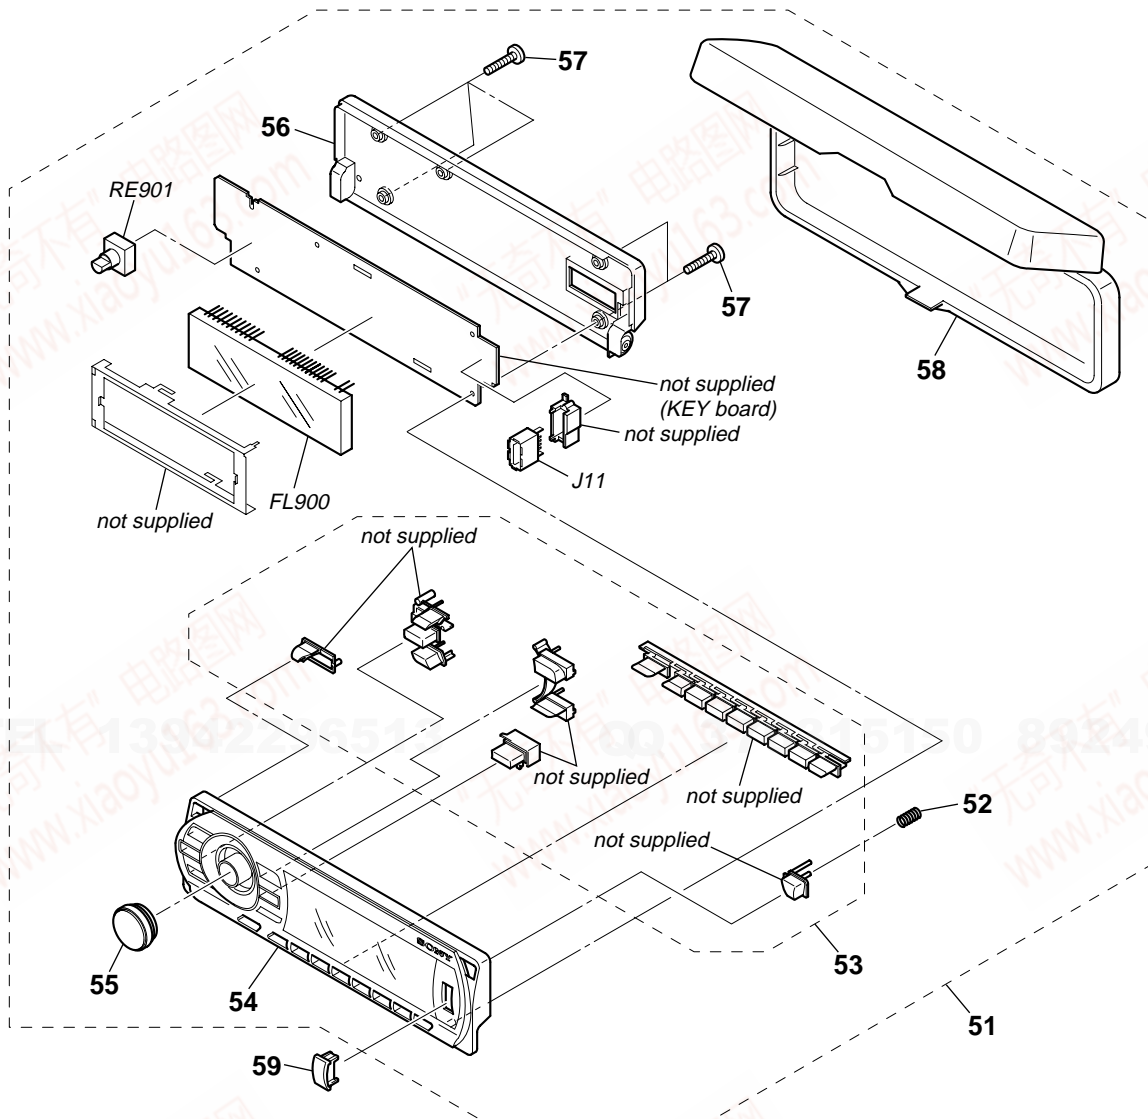

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	A-1217-701-A	PANEL OVERALL ASSY, FRONT (GT610U)		55	X-2149-198-1	KNOB ASSY (S)	
51	A-1217-705-A	PANEL OVERALL ASSY, FRONT (GT616U)		56	X-2159-462-1	PANEL (SV) ASSY, BACK	
51	A-1217-730-A	PANEL OVERALL ASSY, FRONT (GT617UE)		57	3-250-543-21	SCREW (+B P-TITE M2)	
52	3-264-712-01	SPRING (OPEN)		58	X-2149-228-2	CASE ASSY (for FRONT PANEL)	
53	X-2159-395-1	BUTTON ASSY (S) (GT610U)		59	2-686-945-01	CAP (USB)	
53	X-2159-397-1	BUTTON ASSY (S) (GT616U/GT617UE)		FL900	1-519-916-12	INDICATOR TUBE, FLUORESCENT	
54	X-2159-394-1	PANEL (SV) ASSY, FRONT (GT610U)		J11	1-820-858-11	CONNECTOR, USB (SOCKET) (USB)	
54	X-2159-396-1	PANEL (SV) ASSY, FRONT (GT616U)		RE901	1-479-902-11	ENCODER, ROTARY (PUSH SELECT/VOLUME)	
54	X-2159-399-1	PANEL (SV) ASSY, FRONT (GT617UE)					

5-3. CD MECHANISM SECTION
(MG-101U-188//Q)

NOTE: Refer to SUPPLEMENT-1 for disassembly of OPTICAL PICK-UP.

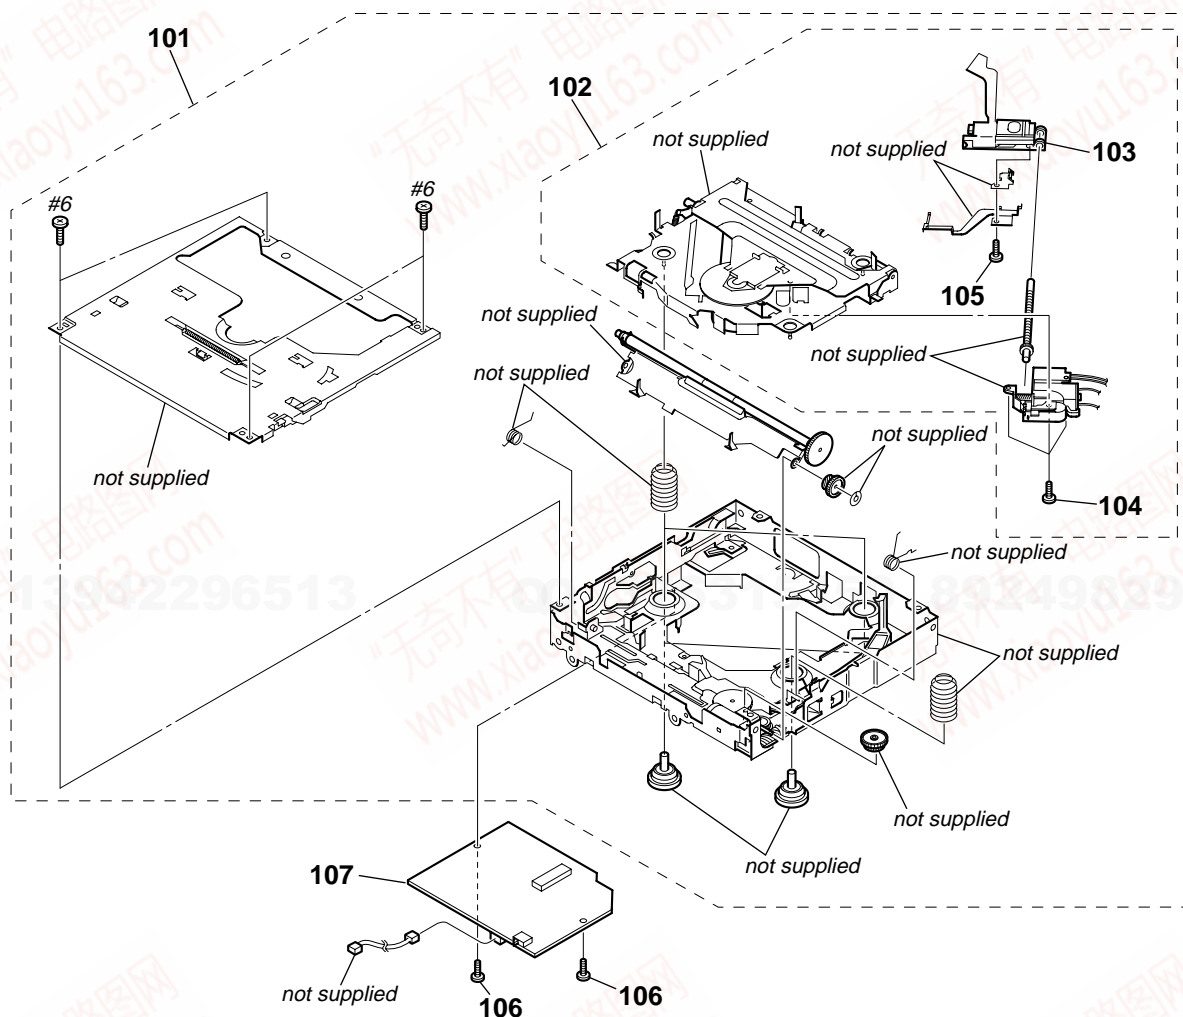

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	A-1234-480-A	MECHANICAL BLOCK (U) ASSY		105	3-348-998-31	SCREW (M1.4X2.5), TAPPING, PAN	
102	A-1177-169-A	DAXEV//Q		106	3-352-758-31	SCREW (M1.7X2.5), TOOTHED LOCK	
△ 103	X-2149-672-1	SERVICE ASSY, OP (DAX-25A)		107	A-1206-357-A	SERVO BOARD, COMPLETE	
104	2-626-869-01	SCREW (M2X3), SERRATION		#6	7-627-000-08	SCREW, PRECISION +P 1.7X2.2 TYPE3	

CDX-GT610U/GT616U/GT617UE

SECTION 6
ELECTRICAL PARTS LIST

KEY

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u : μ , for example:
uA.. : μ A.. uPA.. : μ PA..
uPB.. : μ PB.. uPC.. : μ PC.. uPD.. : μ PD..
- CAPACITORS
uF : μ F
- COILS
uH : μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark
		KEY BOARD *****	
		< CAPACITOR >	
C920	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C921	1-127-760-11	CERAMIC CHIP 4.7uF	10% 6.3V
C932	1-125-837-11	CERAMIC CHIP 1uF	10% 6.3V
C971	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C991	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C992	1-165-908-11	CERAMIC CHIP 1uF	10% 10V
		< CONNECTOR >	
CN901	1-818-141-11	PLUG, CONNECTOR 20P	
		< DIODE >	
D902	8-719-977-12	DIODE DTZ6.8B	
D903	8-719-977-12	DIODE DTZ6.8B	
D904	8-719-977-12	DIODE DTZ6.8B	
D931	8-719-404-50	DIODE MA111-TX	
D971	8-719-420-90	DIODE MA8051-M	
D973	8-719-977-12	DIODE DTZ6.8B	
D976	8-719-977-12	DIODE DTZ6.8B	
D978	8-719-977-12	DIODE DTZ6.8B	
D979	8-719-977-12	DIODE DTZ6.8B	
D981	8-719-057-80	DIODE MA8180-M-TX	
D982	6-501-089-01	DIODE RF101L2STE25	
D983	8-719-420-90	DIODE MA8051-M	
D984	8-719-057-80	DIODE MA8180-M-TX	
D985	8-719-977-12	DIODE DTZ6.8B	
D986	8-719-977-12	DIODE DTZ6.8B	
D989	8-719-977-12	DIODE DTZ6.8B	
D990	8-719-977-12	DIODE DTZ6.8B	
D991	8-719-977-12	DIODE DTZ6.8B	
D992	8-719-977-12	DIODE DTZ6.8B	
D993	8-719-977-12	DIODE DTZ6.8B	
D996	8-719-977-12	DIODE DTZ6.8B	
D997	8-719-058-24	DIODE RB501V-40TE-17	
D998	8-719-404-50	DIODE MA111-TX	
		< JUMPER RESISTOR >	
FB971	1-216-864-11	SHORT CHIP 0	
FB991	1-216-864-11	SHORT CHIP 0	

Ref. No.	Part No.	Description	Remark
		< FLUORESCENT INDICATOR TUBE >	
FL900	1-519-916-12	INDICATOR TUBE, FLUORESCENT	
		< IC >	
IC971	6-600-163-01	IC RS-770 (IR)	
* IC980	6-703-107-01	IC SN74LVC2G6DCUR	
		< CONNECTOR >	
J11	1-820-858-11	CONNECTOR, USB (SOCKET) (USB)	
		< DIODE >	
LED902	8-719-053-09	LED SML-310VTT86 (SOURCE)	
LED903	8-719-053-09	LED SML-310VTT86 (▶▶▶▶ SEEK+)	
LED904	8-719-053-09	LED SML-310VTT86 (MODE)	
LED906	8-719-053-09	LED SML-310VTT86 (EQ3)	
LED907	8-719-053-09	LED SML-310VTT86 (◀◀◀◀ SEEK-)	
LED908	8-719-053-09	LED SML-310VTT86 (DSO)	
LED909	8-719-053-09	LED SML-310VTT86 (AF/TA)	
LED910	8-719-053-09	LED SML-310VTT86 (6/PAUSE)	
LED911	8-719-053-09	LED SML-310VTT86 (5/BBE MP)	
LED912	8-719-053-09	LED SML-310VTT86 (4/SHUF)	
LED913	8-719-053-09	LED SML-310VTT86 (3/REP)	
LED914	8-719-053-09	LED SML-310VTT86 (2/GP/ALBM +)	
LED915	8-719-053-09	LED SML-310VTT86 (1/GP/ALBM -)	
LED916	8-719-053-09	LED SML-310VTT86 (DSPL)	
LED917	8-719-053-09	LED SML-310VTT86 (PTY)	
LED941	8-719-053-09	LED SML-310VTT86 (RING ILLUMINATION)	
LED942	8-719-053-09	LED SML-310VTT86 (RING ILLUMINATION)	
LED943	8-719-053-09	LED SML-310VTT86 (RING ILLUMINATION)	
LED944	8-719-053-09	LED SML-310VTT86 (RING ILLUMINATION)	
LED952	8-719-078-21	LED SML-310PTT86 (SOURCE)	
LED953	8-719-078-21	LED SML-310PTT86 (▶▶▶▶ SEEK+)	
LED954	8-719-078-21	LED SML-310PTT86 (MODE)	
LED956	8-719-078-21	LED SML-310PTT86 (EQ3)	
LED957	8-719-078-21	LED SML-310PTT86 (◀◀◀◀ SEEK-)	
LED958	8-719-078-21	LED SML-310PTT86 (DSO)	
LED959	8-719-078-21	LED SML-310PTT86 (AF/TA)	
LED960	8-719-078-21	LED SML-310PTT86 (6/PAUSE)	
LED961	8-719-078-21	LED SML-310PTT86 (5/BBE MP)	
LED962	8-719-078-21	LED SML-310PTT86 (4/SHUF)	
LED963	8-719-078-21	LED SML-310PTT86 (3/REP)	
LED964	8-719-078-21	LED SML-310PTT86 (2/GP/ALBM +)	
LED965	8-719-078-21	LED SML-310PTT86 (1/GP/ALBM -)	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
LED966	8-719-078-21	LED SML-310PTT86 (DSPL)		R940	1-216-030-00	RES-CHIP 160 5%	1/10W
LED967	8-719-078-21	LED SML-310PTT86 (PTY)		R941	1-216-031-00	RES-CHIP 180 5%	1/10W
LED991	8-719-078-21	LED SML-310PTT86 (RING ILLUMINATION)		R942	1-216-027-00	RES-CHIP 120 5%	1/10W
LED992	8-719-078-21	LED SML-310PTT86 (RING ILLUMINATION)		R943	1-216-029-00	RES-CHIP 150 5%	1/10W
LED993	8-719-078-21	LED SML-310PTT86 (RING ILLUMINATION)		R944	1-216-030-00	RES-CHIP 160 5%	1/10W
LED994	8-719-078-21	LED SML-310PTT86 (RING ILLUMINATION)		R945	1-216-031-00	RES-CHIP 180 5%	1/10W
		< COIL >		R946	1-216-027-00	RES-CHIP 120 5%	1/10W
LF990	1-457-223-11	COIL, COMMON MODE CHOKE		R947	1-216-029-00	RES-CHIP 150 5%	1/10W
		< SWITCH >		R948	1-216-030-00	RES-CHIP 160 5%	1/10W
LSW901	1-798-017-11	SWITCH, TACTILE (WITH LED) (OFF)		R949	1-216-031-00	RES-CHIP 180 5%	1/10W
		< TRANSISTOR >		R950	1-216-027-00	RES-CHIP 120 5%	1/10W
Q503	8-729-027-23	TRANSISTOR DTA114EKA-T146		R951	1-216-029-00	RES-CHIP 150 5%	1/10W
Q941	6-550-752-01	TRANSISTOR DTC614TKT146		R952	1-216-030-00	RES-CHIP 160 5%	1/10W
Q942	6-550-752-01	TRANSISTOR DTC614TKT146		R953	1-216-031-00	RES-CHIP 180 5%	1/10W
Q991	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		R954	1-216-027-00	RES-CHIP 120 5%	1/10W
Q992	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		R955	1-216-029-00	RES-CHIP 150 5%	1/10W
Q993	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		R956	1-216-030-00	RES-CHIP 160 5%	1/10W
		< RESISTOR >		R957	1-216-031-00	RES-CHIP 180 5%	1/10W
R901	1-216-047-11	RES-CHIP 820 5%	1/10W	R958	1-216-027-00	RES-CHIP 120 5%	1/10W
R902	1-216-821-11	METAL CHIP 1K 5%	1/10W	R959	1-216-047-11	RES-CHIP 820 5%	1/10W
R903	1-216-821-11	METAL CHIP 1K 5%	1/10W	R962	1-216-864-11	SHORT CHIP 0	
R904	1-216-822-11	METAL CHIP 1.2K 5%	1/10W	R963	1-216-864-11	SHORT CHIP 0	
R905	1-216-823-11	METAL CHIP 1.5K 5%	1/10W	R964	1-216-001-00	RES-CHIP 10 5%	1/10W
R906	1-216-824-11	METAL CHIP 1.8K 5%	1/10W	R965	1-216-001-00	RES-CHIP 10 5%	1/10W
R907	1-216-825-11	METAL CHIP 2.2K 5%	1/10W	R966	1-216-833-11	METAL CHIP 10K 5%	1/10W
R908	1-216-827-11	METAL CHIP 3.3K 5%	1/10W	R967	1-216-833-11	METAL CHIP 10K 5%	1/10W
R909	1-216-821-11	METAL CHIP 1K 5%	1/10W	R968	1-216-864-11	SHORT CHIP 0	
R910	1-216-821-11	METAL CHIP 1K 5%	1/10W	R969	1-216-833-11	METAL CHIP 10K 5%	1/10W
R911	1-216-822-11	METAL CHIP 1.2K 5%	1/10W	R971	1-216-811-11	METAL CHIP 150 5%	1/10W
R912	1-216-823-11	METAL CHIP 1.5K 5%	1/10W	R972	1-216-809-11	METAL CHIP 100 5%	1/10W
R913	1-216-824-11	METAL CHIP 1.8K 5%	1/10W	R973	1-216-811-11	METAL CHIP 150 5%	1/10W
R914	1-216-825-11	METAL CHIP 2.2K 5%	1/10W	R981	1-216-864-11	SHORT CHIP 0	
R915	1-216-827-11	METAL CHIP 3.3K 5%	1/10W	R982	1-216-864-11	SHORT CHIP 0	
R916	1-216-828-11	METAL CHIP 3.9K 5%	1/10W	R983	1-216-864-11	SHORT CHIP 0	
R921	1-216-027-00	RES-CHIP 120 5%	1/10W	R984	1-216-809-11	METAL CHIP 100 5%	1/10W
R922	1-216-023-00	RES-CHIP 82 5%	1/10W	R985	1-216-809-11	METAL CHIP 100 5%	1/10W
R923	1-216-025-11	RES-CHIP 100 5%	1/10W	R986	1-216-809-11	METAL CHIP 100 5%	1/10W
R924	1-216-021-00	RES-CHIP 68 5%	1/10W	R987	1-216-845-11	METAL CHIP 100K 5%	1/10W
R925	1-216-027-00	RES-CHIP 120 5%	1/10W	R988	1-216-821-11	METAL CHIP 1K 5%	1/10W
R926	1-216-023-00	RES-CHIP 82 5%	1/10W	R989	1-216-821-11	METAL CHIP 1K 5%	1/10W
R927	1-216-025-11	RES-CHIP 100 5%	1/10W	R990	1-216-821-11	METAL CHIP 1K 5%	1/10W
R928	1-216-021-00	RES-CHIP 68 5%	1/10W	R991	1-216-833-11	METAL CHIP 10K 5%	1/10W
R929	1-216-027-00	RES-CHIP 120 5%	1/10W	R992	1-216-833-11	METAL CHIP 10K 5%	1/10W
R930	1-216-023-00	RES-CHIP 82 5%	1/10W	R993	1-216-833-11	METAL CHIP 10K 5%	1/10W
R931	1-216-025-11	RES-CHIP 100 5%	1/10W	R994	1-216-845-11	METAL CHIP 100K 5%	1/10W
R932	1-216-021-00	RES-CHIP 68 5%	1/10W	R995	1-216-845-11	METAL CHIP 100K 5%	1/10W
R933	1-216-033-00	RES-CHIP 220 5%	1/10W	R996	1-216-845-11	METAL CHIP 100K 5%	1/10W
R934	1-216-029-00	RES-CHIP 150 5%	1/10W			< ROTARY ENCODER >	
R935	1-216-027-00	RES-CHIP 120 5%	1/10W	RE901	1-479-902-11	ENCODER, ROTARY (PUSH SELECT/VOLUME)	
R936	1-216-027-00	RES-CHIP 120 5%	1/10W			< SWITCH >	
R937	1-216-025-11	RES-CHIP 100 5%	1/10W	S902	1-786-653-21	SWITCH, TACTILE (SOURCE)	
R938	1-216-027-00	RES-CHIP 120 5%	1/10W	S903	1-786-653-21	SWITCH, TACTILE (▶▶▶▶ SEEK+)	
R939	1-216-029-00	RES-CHIP 150 5%	1/10W	S904	1-786-653-21	SWITCH, TACTILE (MODE)	
				S906	1-786-653-21	SWITCH, TACTILE (EQ3)	
				S907	1-786-653-21	SWITCH, TACTILE (◀◀◀◀ SEEK-)	

CDX-GT610U/GT616U/GT617UE

KEY MAIN

Ref. No.	Part No.	Description	Remark
S908	1-786-653-21	SWITCH, TACTILE (DSO)	
S909	1-786-653-21	SWITCH, TACTILE (AF/TA)	
S910	1-786-653-21	SWITCH, TACTILE (6/PAUSE)	
S911	1-786-653-21	SWITCH, TACTILE (5/BBE MP)	
S912	1-786-653-21	SWITCH, TACTILE (4/SHUF)	
S913	1-786-653-21	SWITCH, TACTILE (3/REP)	
S914	1-786-653-21	SWITCH, TACTILE (2/GP/ALBM +)	
S915	1-786-653-21	SWITCH, TACTILE (1/GP/ALBM -)	
S916	1-786-653-21	SWITCH, TACTILE (DSPL)	
S917	1-786-653-21	SWITCH, TACTILE (PTY)	
S918	1-798-032-11	SWITCH, DETECTION (OPEN/CLOSE)	

A-1217-699-A	MAIN BOARD, COMPLETE (GT610U/GT616U)		
A-1217-728-A	MAIN BOARD, COMPLETE (GT617UE)		

7-685-134-19	SCREW +P 2.6X8 TYPE2 NON-SLIT		
7-685-794-09	SCREW +PTT 2.6X10 (S)		
< CAPACITOR >			
C1	1-126-963-11	ELECT	4.7uF 20% 50V
C2	1-126-947-11	ELECT	47uF 20% 35V
C3	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C5	1-126-947-11	ELECT	47uF 20% 35V
C7	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C8	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V
C9	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C14	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C50	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C51	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C52	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C53	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C54	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C55	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C56	1-162-917-11	CERAMIC CHIP	15PF 5% 50V
C57	1-162-917-11	CERAMIC CHIP	15PF 5% 50V
C58	1-162-959-11	CERAMIC CHIP	330PF 5% 50V
C60	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C61	1-126-947-11	ELECT	47uF 20% 35V
C62	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C103	1-165-319-11	CERAMIC CHIP	0.1uF 50V
C104	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C108	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C109	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C110	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C114	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C301	1-115-340-11	CERAMIC CHIP	0.22uF 10% 25V
C303	1-128-551-11	ELECT	22uF 20% 63V
C304	1-115-340-11	CERAMIC CHIP	0.22uF 10% 25V
C305	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C306	1-126-964-11	ELECT	10uF 20% 50V
C307	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C308	1-126-964-11	ELECT	10uF 20% 50V
C309	1-115-340-11	CERAMIC CHIP	0.22uF 10% 25V
C310	1-126-916-11	ELECT	1000uF 20% 6.3V
C312	1-115-340-11	CERAMIC CHIP	0.22uF 10% 25V
C313	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C314	1-124-261-00	ELECT	10uF 20% 50V

Ref. No.	Part No.	Description	Remark
C315	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C316	1-124-261-00	ELECT	10uF 20% 50V
C317	1-124-257-00	ELECT	2.2uF 20% 50V
C318	1-162-923-11	CERAMIC CHIP	47PF 5% 50V
C319	1-127-715-11	CERAMIC CHIP	0.22uF 10% 16V
C320	1-125-891-11	CERAMIC CHIP	0.47uF 10% 10V
C323	1-115-340-11	CERAMIC CHIP	0.22uF 10% 25V
C324	1-115-340-11	CERAMIC CHIP	0.22uF 10% 25V
C325	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C327	1-127-715-11	CERAMIC CHIP	0.22uF 10% 16V
C328	1-127-715-11	CERAMIC CHIP	0.22uF 10% 16V
C360	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C361	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C362	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C363	1-124-257-00	ELECT	2.2uF 20% 50V
C364	1-124-257-00	ELECT	2.2uF 20% 50V
C401	1-124-584-00	ELECT	100uF 20% 10V
C402	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C403	1-126-176-11	ELECT	220uF 20% 10V
C405	1-124-248-00	ELECT	22uF 20% 25V
C410	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C411	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C412	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C413	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
C414	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
C415	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C417	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C418	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C419	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C421	1-126-791-11	ELECT	10uF 20% 35V
C422	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
C423	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C429	1-124-261-00	ELECT	10uF 20% 50V
C430	1-124-261-00	ELECT	10uF 20% 50V
C431	1-126-791-11	ELECT	10uF 20% 35V
C432	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
C441	1-126-791-11	ELECT	10uF 20% 35V
C442	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
C443	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C446	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C447	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C452	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
C454	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V
C461	1-126-791-11	ELECT	10uF 20% 35V
C462	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C465	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C466	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C470	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C471	1-126-791-11	ELECT	10uF 20% 35V
C472	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C480	1-136-159-00	FILM	0.033uF 5% 50V
C481	1-136-159-00	FILM	0.033uF 5% 50V
C482	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C483	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C484	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C485	1-104-665-11	ELECT	100uF 20% 25V
C487	1-126-791-11	ELECT	10uF 20% 35V
C491	1-124-589-11	ELECT	47uF 20% 16V

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C501	1-128-057-11	ELECT	330uF 20% 6.3V	D105	8-719-420-90	DIODE MA8051-M	
C502	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	D106	8-719-420-90	DIODE MA8051-M	
C503	1-124-584-00	ELECT	100uF 20% 10V	D107	8-719-420-90	DIODE MA8051-M	
C504	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	D108	8-719-420-90	DIODE MA8051-M	
C505	1-124-584-00	ELECT	100uF 20% 10V	D109	8-719-420-90	DIODE MA8051-M	
C506	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	D110	8-719-420-90	DIODE MA8051-M	
C507	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	D114	8-719-420-90	DIODE MA8051-M	
C508	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D115	8-719-978-33	DIODE DTZ-TT11-6.8B	
C509	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	D118	8-719-977-12	DIODE DTZ6.8B	
C510	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D119	8-719-057-80	DIODE MA8180-M-TX	
C511	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D120	8-719-420-90	DIODE MA8051-M	
C512	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D301	6-500-522-01	DIODE 10EDB40-TA1B2	
C513	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D302	6-500-522-01	DIODE 10EDB40-TA1B2	
C515	1-162-917-11	CERAMIC CHIP	15PF 5% 50V	D303	6-500-522-01	DIODE 10EDB40-TA1B2	
C516	1-162-918-11	CERAMIC CHIP	18PF 5% 50V	D304	6-500-522-01	DIODE 10EDB40-TA1B2	
C519	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	D305	6-500-522-01	DIODE 10EDB40-TA1B2	
C523	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	D306	6-500-522-01	DIODE 10EDB40-TA1B2	
C600	1-126-935-11	ELECT	470uF 20% 16V	D307	6-500-522-01	DIODE 10EDB40-TA1B2	
C601	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	D308	6-500-522-01	DIODE 10EDB40-TA1B2	
C602	1-165-319-11	CERAMIC CHIP	0.1uF 50V	D309	6-500-522-01	DIODE 10EDB40-TA1B2	
C701	1-131-868-81	ELECT	3300uF 20% 16V	D310	6-500-522-01	DIODE 10EDB40-TA1B2	
C702	1-126-160-11	ELECT	1uF 20% 50V	D311	6-500-522-01	DIODE 10EDB40-TA1B2	
C703	1-126-163-11	ELECT	4.7uF 20% 50V	D312	6-500-522-01	DIODE 10EDB40-TA1B2	
C704	1-115-340-11	CERAMIC CHIP	0.22uF 10% 25V	D400	6-501-013-01	DIODE BAT54ALT1G	
C705	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	D471	8-719-977-12	DIODE DTZ6.8B	
C801	1-126-933-11	ELECT	100uF 20% 16V	D491	8-719-404-50	DIODE MA111-TX	
C802	1-126-934-11	ELECT	220uF 20% 16V	D501	8-719-050-37	DIODE M1MA152WA-T1	
C803	1-104-665-11	ELECT	100uF 20% 25V	D502	8-719-060-48	DIODE RB751V-40TE-17	
C804	1-126-963-11	ELECT	4.7uF 20% 50V	D602	8-719-057-80	DIODE MA8180-M-TX	
C805	1-126-933-11	ELECT	100uF 20% 16V	D603	8-719-422-67	DIODE MA8062-H	
C806	1-126-934-11	ELECT	220uF 20% 16V	D604	8-719-057-80	DIODE MA8180-M-TX	
C809	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	D605	8-719-057-80	DIODE MA8180-M-TX	
C810	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	D606	8-719-072-70	DIODE MA2ZD14001S0	
C811	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	D607	6-501-571-01	DIODE 1N5404-C311-3	
C812	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	D701	8-719-057-80	DIODE MA8180-M-TX	
C814	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	D702	8-719-057-80	DIODE MA8180-M-TX	
C816	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	D703	8-719-420-90	DIODE MA8051-M	
C817	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	D704	8-719-057-80	DIODE MA8180-M-TX	
C819	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	D705	8-719-081-97	DIODE MMDL914T1	
C821	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	D801	6-501-657-01	DIODE MA24D5000BS0	
C822	1-126-933-11	ELECT	100uF 20% 16V	D802	8-719-420-90	DIODE MA8051-M	
C830	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D903	8-719-057-80	DIODE MA8180-M-TX	
C901	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V			< FERRITE BEAD >	
C902	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V				
C998	1-216-864-11	SHORT CHIP	0				
		< CONNECTOR >					
CN300	1-774-701-21	PIN, CONNECTOR 16P		FB401	1-216-295-11	SHORT CHIP	0
CN350	1-820-611-11	CONNECTOR, BOARD TO BOARD 28P		FB402	1-216-864-11	SHORT CHIP	0
* CN410	1-564-506-11	PLUG, CONNECTOR 3P		FB403	1-216-864-11	SHORT CHIP	0
CN802	1-569-913-11	SOCKET, CONNECTOR 20P		FB404	1-216-295-11	SHORT CHIP	0
CNJ400	1-580-907-41	PLUG, CONNECTOR 8P (BUS CONTROL IN)		FB405	1-216-864-11	SHORT CHIP	0
		< DIODE >					
D2	8-719-977-03	DIODE DTZ5.6B		FB406	1-216-864-11	SHORT CHIP	0
D101	8-719-977-12	DIODE DTZ6.8B		FB407	1-216-295-11	SHORT CHIP	0
D102	8-719-420-90	DIODE MA8051-M		FB408	1-469-876-11	INDUCTOR, FERRITE BEAD	
D103	8-719-057-80	DIODE MA8180-M-TX		FB801	1-216-864-11	SHORT CHIP	0
D104	8-719-057-80	DIODE MA8180-M-TX		FB802	1-216-864-11	SHORT CHIP	0
				FB803	1-216-864-11	SHORT CHIP	0
				FB804	1-216-821-11	METAL CHIP	1K 5% 1/10W

CDX-GT610U/GT616U/GT617UE

MAIN

Ref. No.	Part No.	Description	Remark
		< IC >	
IC50	6-803-747-01	IC TDA7333013TR	
IC300	6-705-359-02	IC TDA8588AJ/N2/R1 (GT617UE)	
IC300	6-705-359-11	IC TDA8588AJ/N2/R1/M5 (GT610U/GT616U)	
IC401	6-710-065-01	IC BD3442FS-E2	
IC501	6-807-002-01	IC MB90F046PF-G-102E1 (GT610U/GT616U)	
IC501	6-807-259-01	IC MB90F046PF-G-104E1 (GT617UE)	
IC502	6-704-529-01	IC XC6206P332PR	
IC601	6-703-884-01	IC BA8271F-E2	
IC602	6-703-224-01	IC S-80828CNNB-B8NT2G	
IC801	6-710-493-01	IC NJM2370U1-12-TE2	
IC802	6-707-911-01	IC BD9778HFP	
IC803	6-710-624-01	IC TPS2051BDRG4	
IC804	8-759-460-72	IC BA033FP-E2	
		< JACK >	
J1	1-815-185-13	JACK (ANTENNA)	
J370	1-566-822-41	JACK (REMOTE IN)	
J451	1-774-700-41	JACK, PIN 6P (BUS AUDIO IN, AUDIO OUT REAR/FRONT)	
		< JUMPER RESISTOR >	
JC3	1-216-864-11	SHORT CHIP	0
JC9	1-216-295-11	SHORT CHIP	0
JC32	1-216-864-11	SHORT CHIP	0
JC53	1-216-864-11	SHORT CHIP	0
JC90	1-216-296-11	SHORT CHIP	0
JC300	1-216-296-11	SHORT CHIP	0
JC301	1-216-296-11	SHORT CHIP	0
JC302	1-216-296-11	SHORT CHIP	0
JC304	1-216-864-11	SHORT CHIP	0
JC305	1-216-296-11	SHORT CHIP	0
JC350	1-216-296-11	SHORT CHIP	0
JC400	1-216-295-11	SHORT CHIP	0
JC429	1-216-296-11	SHORT CHIP	0
JC490	1-216-296-11	SHORT CHIP	0
JC491	1-216-296-11	SHORT CHIP	0
JC492	1-216-864-11	SHORT CHIP	0
JC493	1-216-295-11	SHORT CHIP	0
JC494	1-216-864-11	SHORT CHIP	0
JC495	1-216-864-11	SHORT CHIP	0
JC501	1-216-296-11	SHORT CHIP	0
JC503	1-216-296-11	SHORT CHIP	0
JC504	1-216-296-11	SHORT CHIP	0
JC506	1-216-864-11	SHORT CHIP	0
JC508	1-216-296-11	SHORT CHIP	0
JC510	1-216-864-11	SHORT CHIP	0
JC511	1-216-864-11	SHORT CHIP	0
JC512	1-216-864-11	SHORT CHIP	0
JC514	1-216-864-11	SHORT CHIP	0
JC515	1-216-864-11	SHORT CHIP	0
JC516	1-216-864-11	SHORT CHIP	0
JC518	1-216-296-11	SHORT CHIP	0
JC519	1-216-296-11	SHORT CHIP	0
JC522	1-216-295-11	SHORT CHIP	0
JC523	1-216-295-11	SHORT CHIP	0
JC524	1-216-296-11	SHORT CHIP	0

Ref. No.	Part No.	Description	Remark
JC600	1-216-864-11	SHORT CHIP	0
JC602	1-216-296-11	SHORT CHIP	0
JC603	1-216-296-11	SHORT CHIP	0
JC804	1-216-295-11	SHORT CHIP	0
JC806	1-216-864-11	SHORT CHIP	0
JC997	1-216-864-11	SHORT CHIP	0
JC998	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
JC999	1-216-864-11	SHORT CHIP	0
		< COIL >	
L1	1-500-245-11	INDUCTOR, FERRITE BEAD	
L2	1-414-595-11	INDUCTOR, FERRITE BEAD	
L3	1-414-595-11	INDUCTOR, FERRITE BEAD	
L4	1-469-844-11	INDUCTOR	2.2uH
L101	1-410-509-11	INDUCTOR	10uH
L300	1-456-617-11	COIL, CHOKE	
L301	1-216-864-11	SHORT CHIP	0
L302	1-216-864-11	SHORT CHIP	0
L303	1-216-864-11	SHORT CHIP	0
L500	1-469-844-11	INDUCTOR	2.2uH
L801	1-457-418-11	COIL, CHOKE	
L802	1-457-378-11	COIL, CHOKE	
L803	1-457-418-11	COIL, CHOKE	
		< TRANSISTOR >	
Q1	1-801-806-11	TRANSISTOR	DTC144EKA
Q3	8-729-106-68	TRANSISTOR	2SD1615A-GP
Q50	8-729-026-49	TRANSISTOR	2SA1037AK-T146-R
Q420	6-550-752-01	TRANSISTOR	DTC614TKT146
Q423	8-729-026-49	TRANSISTOR	2SA1037AK-T146-R
Q424	6-550-752-01	TRANSISTOR	DTC614TKT146
Q426	6-550-752-01	TRANSISTOR	DTC614TKT146
Q430	6-550-752-01	TRANSISTOR	DTC614TKT146
Q440	6-550-752-01	TRANSISTOR	DTC614TKT146
Q460	6-550-752-01	TRANSISTOR	DTC614TKT146
Q470	6-550-752-01	TRANSISTOR	DTC614TKT146
Q471	6-550-683-01	FET	RJK005N03-T146
Q491	8-729-027-23	TRANSISTOR	DTA114EKA-T146
Q492	8-729-027-43	TRANSISTOR	DTC114EKA-T146
Q501	8-729-027-23	TRANSISTOR	DTA114EKA-T146
Q589	8-729-027-43	TRANSISTOR	DTC114EKA-T146
Q590	8-729-027-23	TRANSISTOR	DTA114EKA-T146
Q605	8-729-027-43	TRANSISTOR	DTC114EKA-T146
Q701	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q702	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q703	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q801	1-801-806-11	TRANSISTOR	DTC144EKA
		< RESISTOR >	
R1	1-216-809-11	METAL CHIP	100 5% 1/10W
R2	1-216-839-11	METAL CHIP	33K 5% 1/10W
R3	1-216-843-11	METAL CHIP	68K 5% 1/10W
R4	1-216-839-11	METAL CHIP	33K 5% 1/10W
R5	1-216-843-11	METAL CHIP	68K 5% 1/10W
R6	1-414-595-11	INDUCTOR, FERRITE BEAD	
R7	1-414-595-11	INDUCTOR, FERRITE BEAD	
R8	1-216-839-11	METAL CHIP	33K 5% 1/10W
R9	1-216-843-11	METAL CHIP	68K 5% 1/10W

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R10	1-216-821-11	METAL CHIP 1K	5% 1/10W	R505	1-216-845-11	METAL CHIP 100K	5% 1/10W
R11	1-216-864-11	SHORT CHIP 0					(GT610U/GT616U)
R12	1-414-595-11	INDUCTOR, FERRITE BEAD		R506	1-216-845-11	METAL CHIP 100K	5% 1/10W
R13	1-414-595-11	INDUCTOR, FERRITE BEAD					(GT617UE)
R14	1-216-864-11	SHORT CHIP 0		R509	1-216-845-11	METAL CHIP 100K	5% 1/10W
R52	1-216-845-11	METAL CHIP 100K	5% 1/10W	R510	1-216-833-11	METAL CHIP 10K	5% 1/10W
R53	1-216-797-11	METAL CHIP 10	5% 1/10W	R512	1-216-845-11	METAL CHIP 100K	5% 1/10W
R54	1-414-595-11	INDUCTOR, FERRITE BEAD		R513	1-216-809-11	METAL CHIP 100	5% 1/10W
R55	1-216-797-11	METAL CHIP 10	5% 1/10W	R514	1-216-809-11	METAL CHIP 100	5% 1/10W
R57	1-218-871-11	METAL CHIP 10K	0.5% 1/10W	R515	1-216-809-11	METAL CHIP 100	5% 1/10W
R58	1-216-821-11	METAL CHIP 1K	5% 1/10W	R516	1-216-809-11	METAL CHIP 100	5% 1/10W
R301	1-216-811-11	METAL CHIP 150	5% 1/10W	R517	1-216-845-11	METAL CHIP 100K	5% 1/10W
R302	1-216-841-11	METAL CHIP 47K	5% 1/10W	R518	1-216-845-11	METAL CHIP 100K	5% 1/10W
R351	1-216-845-11	METAL CHIP 100K	5% 1/10W	R519	1-218-871-11	METAL CHIP 10K	0.5% 1/10W
R370	1-216-809-11	METAL CHIP 100	5% 1/10W	R520	1-218-871-11	METAL CHIP 10K	0.5% 1/10W
R371	1-216-809-11	METAL CHIP 100	5% 1/10W	R521	1-216-821-11	METAL CHIP 1K	5% 1/10W
R401	1-216-813-11	METAL CHIP 220	5% 1/10W	R522	1-218-871-11	METAL CHIP 10K	0.5% 1/10W
R402	1-216-813-11	METAL CHIP 220	5% 1/10W	R523	1-216-845-11	METAL CHIP 100K	5% 1/10W
R411	1-216-833-11	METAL CHIP 10K	5% 1/10W	R524	1-216-845-11	METAL CHIP 100K	5% 1/10W
R416	1-216-825-11	METAL CHIP 2.2K	5% 1/10W	R525	1-216-845-11	METAL CHIP 100K	5% 1/10W
R417	1-216-833-11	METAL CHIP 10K	5% 1/10W	R526	1-216-841-11	METAL CHIP 47K	5% 1/10W
R418	1-216-825-11	METAL CHIP 2.2K	5% 1/10W	R527	1-216-845-11	METAL CHIP 100K	5% 1/10W
R419	1-216-833-11	METAL CHIP 10K	5% 1/10W	R528	1-216-833-11	METAL CHIP 10K	5% 1/10W
R420	1-216-809-11	METAL CHIP 100	5% 1/10W	R529	1-216-845-11	METAL CHIP 100K	5% 1/10W
R421	1-216-809-11	METAL CHIP 100	5% 1/10W	R530	1-216-845-11	METAL CHIP 100K	5% 1/10W
R422	1-216-833-11	METAL CHIP 10K	5% 1/10W	R531	1-216-845-11	METAL CHIP 100K	5% 1/10W
R423	1-216-845-11	METAL CHIP 100K	5% 1/10W	R532	1-216-845-11	METAL CHIP 100K	5% 1/10W
R424	1-216-833-11	METAL CHIP 10K	5% 1/10W	R533	1-216-845-11	METAL CHIP 100K	5% 1/10W
R425	1-216-833-11	METAL CHIP 10K	5% 1/10W	R534	1-216-845-11	METAL CHIP 100K	5% 1/10W
R431	1-216-809-11	METAL CHIP 100	5% 1/10W	R535	1-216-809-11	METAL CHIP 100	5% 1/10W
R432	1-216-833-11	METAL CHIP 10K	5% 1/10W	R536	1-216-811-11	METAL CHIP 150	5% 1/10W
R433	1-218-883-11	METAL CHIP 33K	0.5% 1/10W	R537	1-216-845-11	METAL CHIP 100K	5% 1/10W
R440	1-216-809-11	METAL CHIP 100	5% 1/10W	R539	1-216-809-11	METAL CHIP 100	5% 1/10W
R441	1-216-809-11	METAL CHIP 100	5% 1/10W	R540	1-216-809-11	METAL CHIP 100	5% 1/10W
R442	1-216-833-11	METAL CHIP 10K	5% 1/10W	R541	1-216-849-11	METAL CHIP 220K	5% 1/10W
R450	1-216-809-11	METAL CHIP 100	5% 1/10W	R542	1-216-845-11	METAL CHIP 100K	5% 1/10W
R452	1-216-833-11	METAL CHIP 10K	5% 1/10W	R543	1-216-845-11	METAL CHIP 100K	5% 1/10W
R453	1-216-864-11	SHORT CHIP 0		R545	1-216-845-11	METAL CHIP 100K	5% 1/10W
R454	1-216-864-11	SHORT CHIP 0		R546	1-216-845-11	METAL CHIP 100K	5% 1/10W
R455	1-216-825-11	METAL CHIP 2.2K	5% 1/10W	R547	1-216-827-11	METAL CHIP 3.3K	5% 1/10W
R460	1-216-809-11	METAL CHIP 100	5% 1/10W	R548	1-216-825-11	METAL CHIP 2.2K	5% 1/10W
R461	1-216-809-11	METAL CHIP 100	5% 1/10W	R549	1-216-825-11	METAL CHIP 2.2K	5% 1/10W
R470	1-216-809-11	METAL CHIP 100	5% 1/10W	R551	1-216-864-11	SHORT CHIP 0	
R471	1-216-809-11	METAL CHIP 100	5% 1/10W	R553	1-216-821-11	METAL CHIP 1K	5% 1/10W
R474	1-216-821-11	METAL CHIP 1K	5% 1/10W	R554	1-216-821-11	METAL CHIP 1K	5% 1/10W
R480	1-216-827-11	METAL CHIP 3.3K	5% 1/10W	R555	1-216-833-11	METAL CHIP 10K	5% 1/10W
R481	1-216-827-11	METAL CHIP 3.3K	5% 1/10W	R556	1-216-833-11	METAL CHIP 10K	5% 1/10W
R482	1-216-827-11	METAL CHIP 3.3K	5% 1/10W	R557	1-216-809-11	METAL CHIP 100	5% 1/10W
R483	1-216-827-11	METAL CHIP 3.3K	5% 1/10W	R558	1-216-809-11	METAL CHIP 100	5% 1/10W
R484	1-216-821-11	METAL CHIP 1K	5% 1/10W	R559	1-216-845-11	METAL CHIP 100K	5% 1/10W
R491	1-216-805-11	METAL CHIP 47	5% 1/10W	R561	1-216-845-11	METAL CHIP 100K	5% 1/10W
R500	1-216-817-11	METAL CHIP 470	5% 1/10W				(GT617UE)
R502	1-216-845-11	METAL CHIP 100K	5% 1/10W	R562	1-216-845-11	METAL CHIP 100K	5% 1/10W
R503	1-216-845-11	METAL CHIP 100K	5% 1/10W				(GT610U/GT616U)
R504	1-216-845-11	METAL CHIP 100K	5% 1/10W	R563	1-216-845-11	METAL CHIP 100K	5% 1/10W
			(GT610U/GT616U)	R570	1-216-864-11	SHORT CHIP 0	
			(GT617UE)	R571	1-216-823-11	METAL CHIP 1.5K	5% 1/10W
				R572	1-216-845-11	METAL CHIP 100K	5% 1/10W
				R573	1-216-845-11	METAL CHIP 100K	5% 1/10W

CDX-GT610U/GT616U/GT617UE

Ver. 1.1

MAIN SERVO SUB

Ref. No.	Part No.	Description	Remark
R574	1-216-845-11	METAL CHIP 100K 5%	1/10W
R600	1-216-864-11	SHORT CHIP 0	
R601	1-216-851-11	METAL CHIP 330K 5%	1/10W
R602	1-216-851-11	METAL CHIP 330K 5%	1/10W
R603	1-216-821-11	METAL CHIP 1K 5%	1/10W
R604	1-216-835-11	METAL CHIP 15K 5%	1/10W
R605	1-216-809-11	METAL CHIP 100 5%	1/10W
R606	1-216-821-11	METAL CHIP 1K 5%	1/10W
R607	1-216-821-11	METAL CHIP 1K 5%	1/10W
R610	1-216-809-11	METAL CHIP 100 5%	1/10W
R611	1-216-809-11	METAL CHIP 100 5%	1/10W
R701	1-216-821-11	METAL CHIP 1K 5%	1/10W
R702	1-216-841-11	METAL CHIP 47K 5%	1/10W
R703	1-216-833-11	METAL CHIP 10K 5%	1/10W
R704	1-216-833-11	METAL CHIP 10K 5%	1/10W
R705	1-249-425-11	CARBON 4.7K 5%	1/4W
R706	1-216-841-11	METAL CHIP 47K 5%	1/10W
R707	1-216-841-11	METAL CHIP 47K 5%	1/10W
R708	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R709	1-216-049-11	RES-CHIP 1K 5%	1/10W
R710	1-249-425-11	CARBON 4.7K 5%	1/4W
R711	1-216-845-11	METAL CHIP 100K 5%	1/10W
R712	1-216-837-11	METAL CHIP 22K 5%	1/10W
R801	1-218-869-11	METAL CHIP 8.2K 0.5%	1/10W
R802	1-218-883-11	METAL CHIP 33K 0.5%	1/10W
R803	1-218-871-11	METAL CHIP 10K 0.5%	1/10W
R804	1-218-907-11	METAL CHIP 330K 0.5%	1/10W
R805	1-218-893-11	METAL CHIP 82K 0.5%	1/10W
R806	1-216-821-11	METAL CHIP 1K 5%	1/10W
R808	1-216-821-11	METAL CHIP 1K 5%	1/10W
R809	1-216-821-11	METAL CHIP 1K 5%	1/10W
R810	1-216-823-11	METAL CHIP 1.5K 5%	1/10W
R811	1-216-821-11	METAL CHIP 1K 5%	1/10W
R812	1-216-833-11	METAL CHIP 10K 5%	1/10W
R813	1-216-821-11	METAL CHIP 1K 5%	1/10W
R830	1-216-797-11	METAL CHIP 10 5%	1/10W
		< SWITCH >	
S102	1-786-458-11	SWITCH, PUSH (1 KEY) (NOSE DET)	
S103	1-692-431-21	SWITCH, TACTILE (RESET)	
		< THERMISTOR (POSITIVE) >	
TH400	1-803-350-21	THERMISTOR, POSITIVE	
		< TUNER UNIT >	
TU1	A-3220-961-B	TUNER UNIT (TUX-032)	
		< VIBRATOR >	
X50	1-813-532-11	VIBRATOR, CRYSTAL (8.664MHz)	
X500	1-813-524-21	VIBRATOR, CERAMIC (18.432MHz)	
X501	1-813-202-11	VIBRATOR, CRYSTAL (32.768kHz)	

A-1206-357-A	SERVO BOARD, COMPLETE		

Ref. No.	Part No.	Description	Remark
		SUB BOARD	

	1-833-591-11	CABLE, FLEXIBLE FLAT (20 CORE)	
		< CAPACITOR >	
C202	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
		< CONNECTOR >	
CN201	1-818-142-11	SOCKET, CONNECTOR 20P	
CN203	1-691-550-11	PIN, CONNECTOR (1.5mm) (SMD) 3P	
		< DIODE >	
D203	8-719-420-90	DIODE MA8051-M	
D204	8-719-420-90	DIODE MA8051-M	
LED201	8-719-053-09	LED SML-310VTT86 (CD INDICATOR)	(GT610U/GT616U)
LED201	8-719-078-21	LED SML-310PTT86 (CD INDICATOR)	(GT617UE)
LED202	8-719-053-09	LED SML-310VTT86 (▲) (GT610U/GT616U)	
LED202	8-719-078-21	LED SML-310PTT86 (▲) (GT617UE)	
		< RESISTOR >	
R201	1-216-812-11	METAL CHIP 180 5%	1/10W
R202	1-216-815-11	METAL CHIP 330 5%	1/10W
R203	1-216-797-11	METAL CHIP 10 5%	1/10W
R204	1-216-797-11	METAL CHIP 10 5%	1/10W
R205	1-216-864-11	SHORT CHIP 0	
		< SWITCH >	
S201	1-786-653-21	SWITCH, TACTILE (▲)	

		MISCELLANEOUS	

12	1-831-837-11	CORD (WITH CONNECTOR) (ISO) (POWER)	
13	1-833-887-11	CONNECTION CORD (RCA) (SUB OUT (MONO))	
△103	X-2149-672-1	SERVICE ASSY, OP (DAX-25A)	
FU601	1-532-877-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A	


		ACCESSORIES	

	1-479-077-13	REMOTE COMMANDER (RM-X151)	
	2-548-729-01	LID, BATTERY CASE (for RM-X151)	
	2-888-758-31	MANUAL, INSTRUCTION (ENGLISH,GERMAN, FRENCH,ITALIAN,DUTCH)	(GT610U/GT616U)
	2-888-758-41	MANUAL, INSTRUCTION (ENGLISH,RUSSIAN)	(GT617UE)
	2-888-759-31	MANUAL, INSTRUCTION, INSTALL (ENGLISH, GERMAN,FRENCH,ITALIAN,DUTCH)	(GT610U/GT616U)
	2-888-759-41	MANUAL, INSTRUCTION, INSTALL (ENGLISH, RUSSIAN) (GT617UE)	
	X-2149-228-2	CASE ASSY (for FRONT PANEL)	

892498299

Ref. No.	Part No.	Description	Remark
PARTS FOR INSTALLATION AND CONNECTIONS			

151	X-3382-647-1	FRAME ASSY, FITTING	
152	2-638-099-01	COLLAR	
153	3-246-471-01	KEY (FRAME)	
154	X-3381-154-1	SCREW ASSY (BS4), FITTING (GT617UE)	
155	X-3382-926-1	SCREW ASSY (BS), FITTING (GT610U/GT616U)	
156	3-349-410-11	BUSHING	
157	1-465-459-31	ADAPTOR, ANTENNA	
158	1-831-837-11	CORD (WITH CONNECTOR) (ISO) (POWER)	

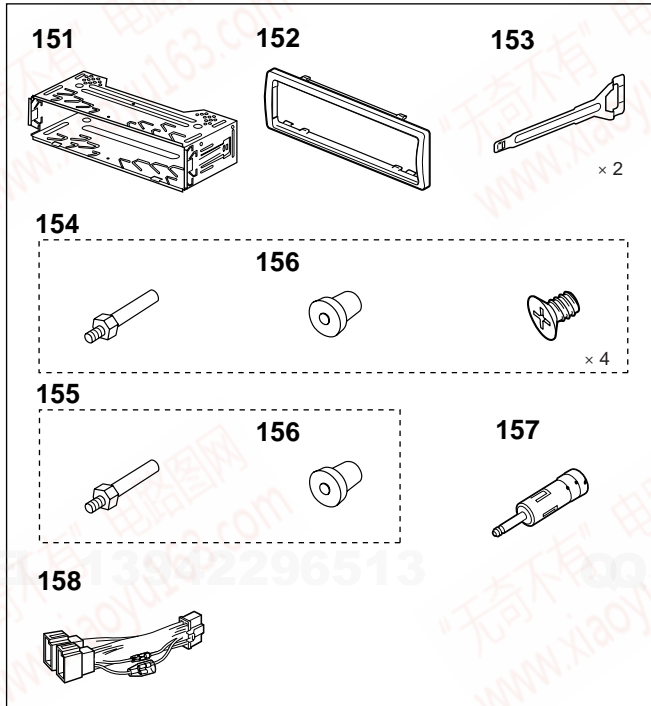

CDX-GT610U/GT616U/GT617UE

MEMO

QQ 376315150

892498299

TEL 13942296513 QQ 376315150 892498299

TEL 13942296513 QQ 376315150 892498299

"无奇不有" 电路图网
www.xiaoyu163.com

"无奇不有" 电路图网
www.xiaoyu163.com

"无奇不有" 电路图网
www.xiaoyu163.com

TEL 13942296513
"无奇不有" 电路图网
www.xiaoyu163.com

QQ 376315150
"无奇不有" 电路图网
www.xiaoyu163.com

892498299
"无奇不有" 电路图网
www.xiaoyu163.com

"无奇不有" 电路图网
www.xiaoyu163.com

"无奇不有" 电路图网
www.xiaoyu163.com

"无奇不有" 电路图网
www.xiaoyu163.com

www.xiaoyu163.com

CDX-GT610U/GT616U/ GT617UE

SONY

SERVICE MANUAL

Ver. 1.1 2007.03

AEP Model

UK Model

CDX-GT610U/GT616U

East European Model

CDX-GT617UE


SUPPLEMENT-1

File this supplement with the service manual.

Subject: Notes for removal of the OPTICAL PICK-UP added.


DISASSEMBLY

1. CHUCKING ARM SUB ASSY

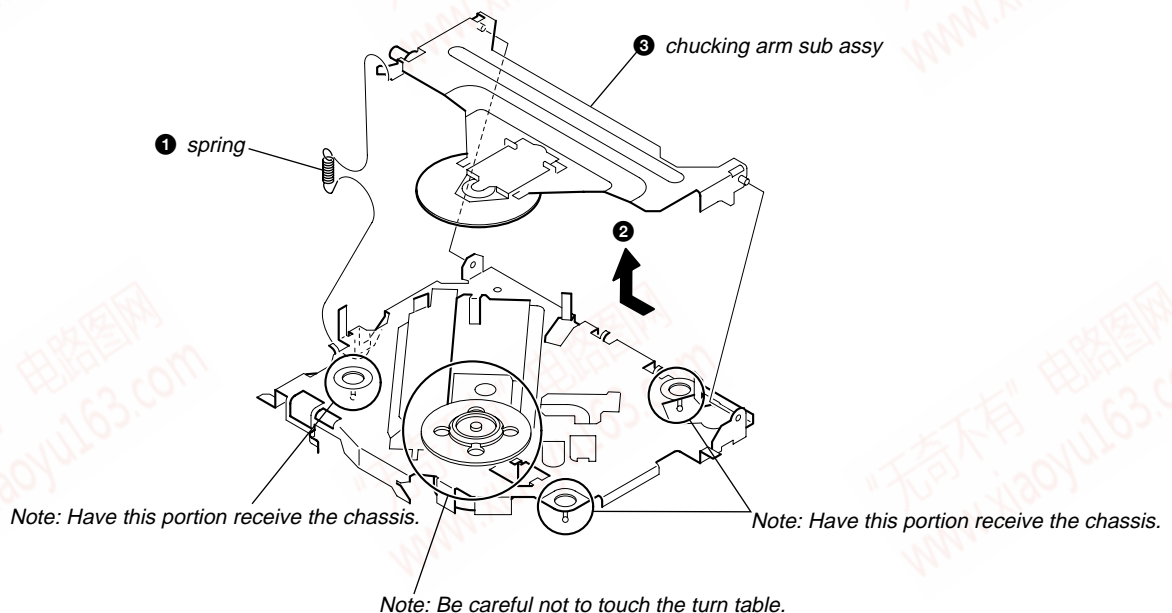


CDX-GT610U/GT616U/GT617UE

2. SLED MOTOR ASSY

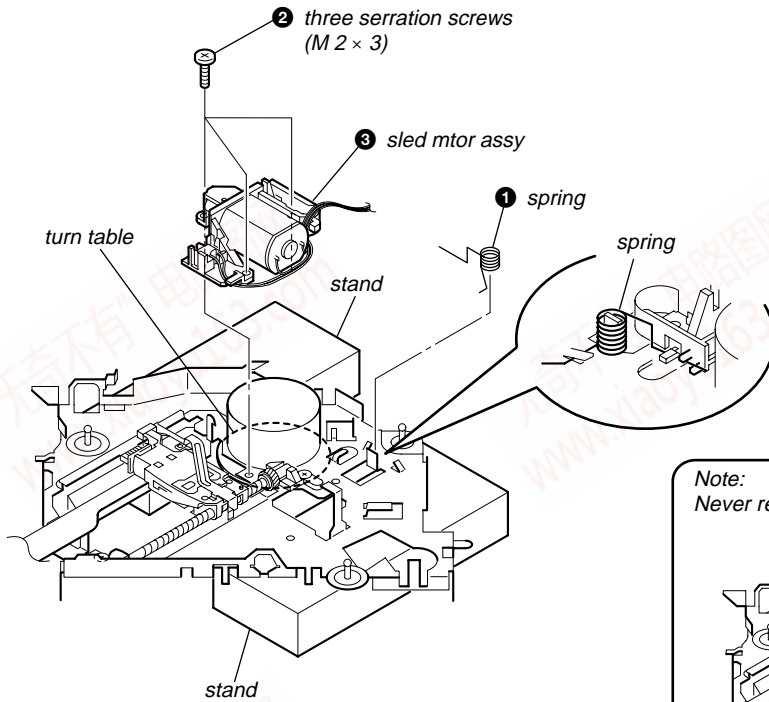


Note: Place the stand with care not to touch the turn table.



Note:
Never remove these parts since they were adjusted.

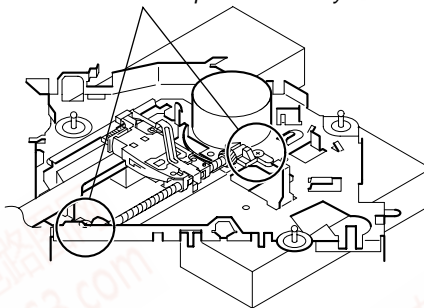


Note for Assembly

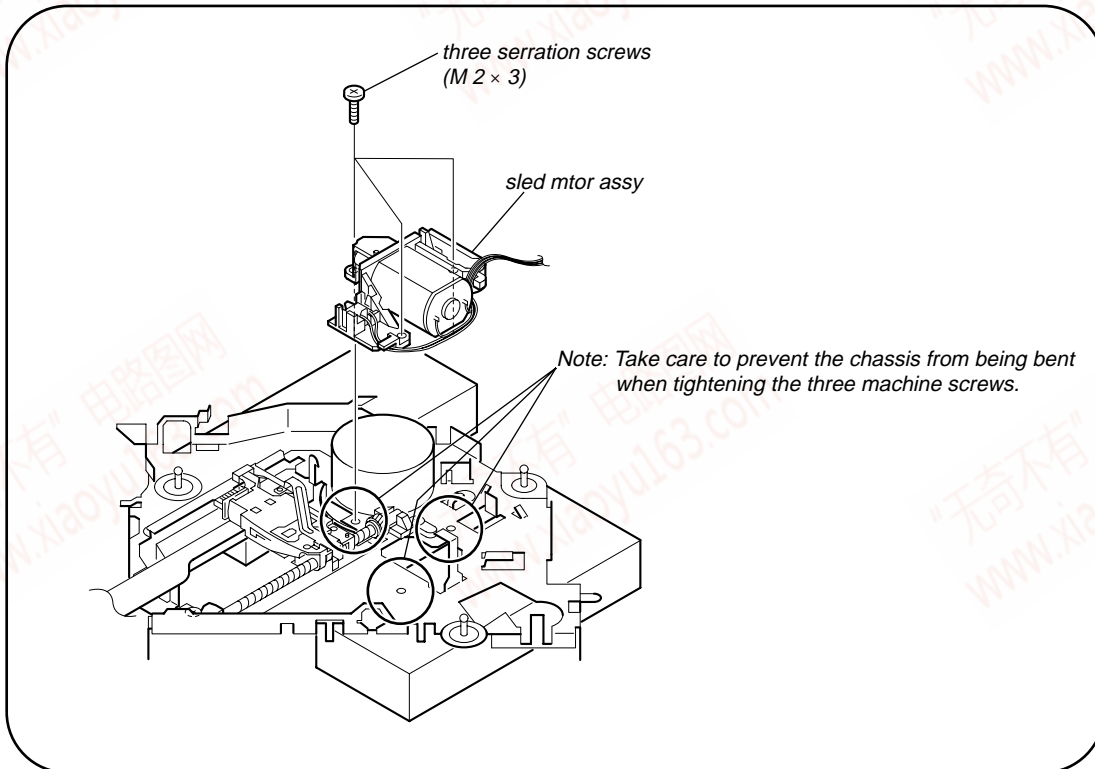

3. OPTICAL PICK-UP SECTION

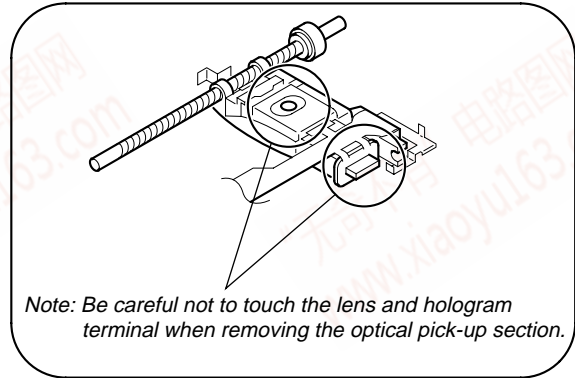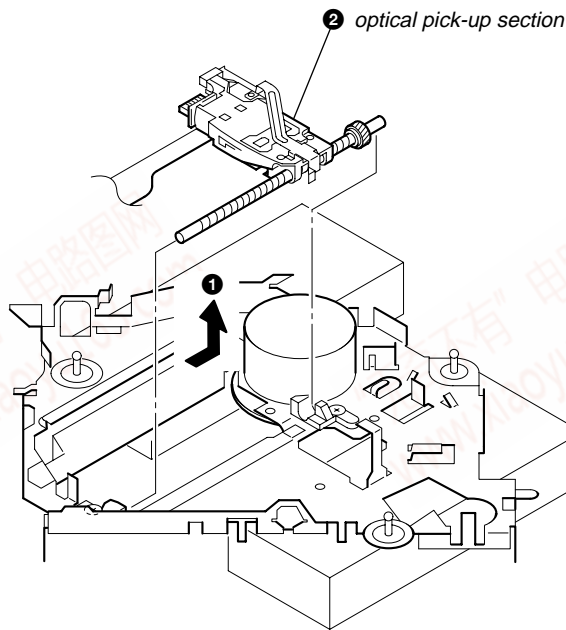

4. OPTICAL PICK-UP

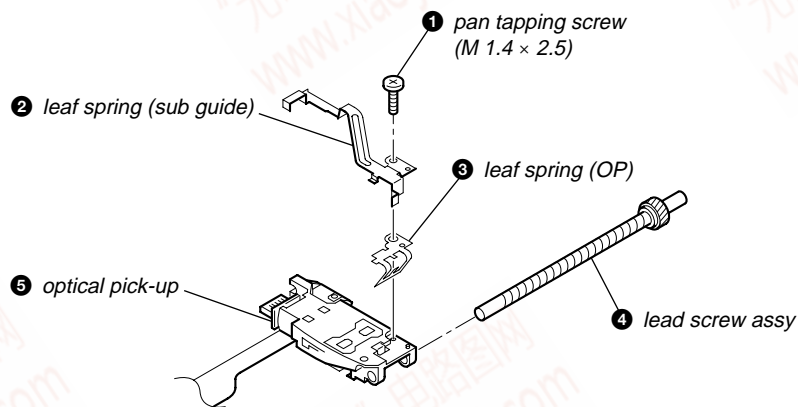

Notes for Assembly

