

GDM-5403

SERVICE MANUAL


AEP Model

Chassis No. SCC-L22M-A

(OEM STD)

Chassis No. SCC-L22U-A

(ELSA, FORMAC)

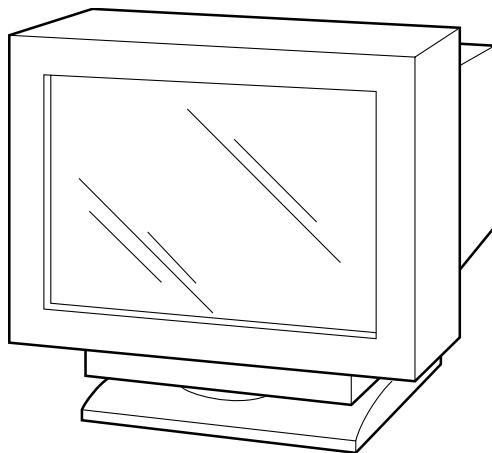

G1 CHASSIS

SPECIFICATIONS

CRT	0.24 mm aperture grille pitch 21 inches measured diagonally 90-degree deflection	Power consumption Dimensions	Approx. 145 W Approx. 498 × 491 × 478 mm (w/h/d) (19 5/8 × 19 3/8 × 18 7/8 inches)
Viewable image size	FD Trinitron Approx. 403.8 × 302.2 mm (w/h) (16 × 12 inches)	Mass Plug and Play	Approx. 32 kg (70 lb 9 oz) DDC1/2B/2Bi, GTF**
Maximum resolution	19.8" viewing image Horizontal: 1600 dots Vertical: 1200 lines		
Standard image area	Approx. 388 × 291 mm (w/h) (15 3/8 × 11 1/2 inches) or Approx. 364 × 291 mm (w/h) (14 3/8 × 11 1/2 inches)		
Deflection frequency*	Horizontal: 30 to 109 kHz Vertical: 48 to 160 Hz		* Recommended horizontal and vertical timing condition • Horizontal sync width duty should be more than 4.8% of total horizontal time or 0.8 µs, whichever is larger. • Horizontal blanking width should be more than 2.3 µsec. • Vertical blanking width should be more than 450 µsec.
AC input voltage/current	100 to 240 V, 50 – 60 Hz, 2.0 – 1.0 A		** If the input signal is Generalized Timing Formula (GTF) compliant, the GTF feature of the monitor will automatically provide an optimal image for the screen.

Design and specifications are subject to change without notice.

COLOR GRAPHIC DISPLAY

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the B+ and HV to see if they are specified values. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
8. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described below.


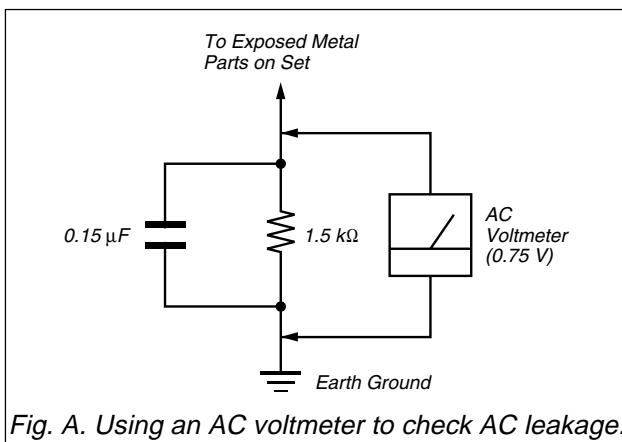


Fig. A. Using an AC voltmeter to check AC leakage.

CAUTION ON DAS (ECS) CONNECTOR

- The connector for DAS (ECS) adjustment is provided inside the cover shown below. Be careful with an electrical shock when connecting the connector with the power supplied. Also, return the removed cover to the home position.

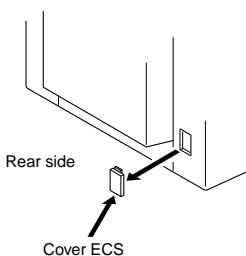

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes).

Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

WARNING!!

NEVER TURN ON THE POWER IN A CONDITION IN WHICH THE DEGAUSS COIL HAS BEEN REMOVED.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK △ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

POWER SAVING FUNCTION

This monitor meets the power-saving guidelines set by VESA, ENERGY STAR, and NUTEK. If the monitor is connected to a computer or video graphics board that is DPMS (Display Power Management Signaling) compliant, the monitor will automatically reduce power consumption in three stages as shown below.


Power mode	Power consumption	⊕ (power) indicator
normal operation	≤ 145 W	green
1 standby	≤ 100 W	green and orange alternate
2 suspend (sleep)*	≤ 15 W	green and orange alternate
3 active off** (deep sleep)*	Approx. 1 W	orange
power off	0 W	off

* "Sleep" and "deep sleep" are power saving modes defined by the Environmental Protection Agency.

** When your computer enters a power saving mode, the input signal is cut and NO INPUT SIGNAL appears on the screen. After a few seconds, the monitor enters power saving mode.


DIAGNOSIS

This monitor is equipped with a self-diagnosis function. If there is a problem with your monitor or computer(s), the screen will go blank and the ⊕ (power) indicator will either light up green or flash orange. If the ⊕ (power) indicator is lit in orange, the computer is in power saving mode. Try pressing any key on the keyboard.

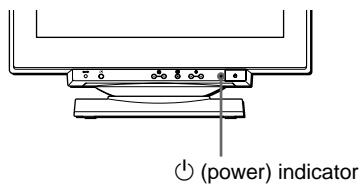

If the ⊕ (power) indicator is green

- 1 Disconnect the video input cable or turn off the connected computer.
- 2 Press the ⊕ (power) button twice to turn the monitor off and then on.
- 3 Press the → button for 2 seconds before the monitor enters power saving mode.



If all four color bars appear (white, red, green, blue), the monitor is working properly. Reconnect the video input cables and check the condition of your computer(s).

If the color bars do not appear, there is a potential monitor failure. Inform your service representative of the monitor's condition.

If the ⊕ (power) indicator is flashing orange

Press the ⊕ (power) button twice to turn the monitor off and then on.

If the ⊕ (power) indicator lights up green, the monitor is working properly.

If the ⊕ (power) indicator is still flashing, there is a potential monitor failure. Count the number of seconds between orange flashes of the ⊕ (power) indicator and inform your service representative of the monitor's condition. Be sure to note the model name and serial number of your monitor. Also note the make and model of your computer and video board.

TIMING SPECIFICATION

MODE AT PRODUCTION	MODE 1	MODE 2
RESOLUTION	1600 X 1200	1280 X 1024
CLOCK	229.500 MHz	157.500 MHz
— HORIZONTAL —		
H-FREQ	106.250 kHz usec	91.146 kHz usec
H. TOTAL	9.412	10.971
H. BLK	2.440	2.844
H. FP	0.279	0.406
H. SYNC	0.837	1.016
H. BP	1.325	1.422
H. ACTIV	6.972	8.127
— VERTICAL —		
V. FREQ (HZ)	85.000 Hz lines	85.024 Hz lines
V. TOTAL	1250	1072
V. BLK	50	48
V. FP	1	1
V. SYNC	3	3
V. BP	46	44
V. ACTIV	1200	1024
— SYNC —		
INT(G)	NO	NO
EXT (H/V) /POLARITY	YES P/P	YES P/P
EXT (CS) /POLARITY	NO	NO
INT/NON INT	NON INT	NON INT

2000.01.04 VER.

TABLE OF CONTENTS

<i>Section</i>	<i>Title</i>	<i>Page</i>
1. GENERAL		1-1
2. DISASSEMBLY		
2-1. Cabinet Removal		2-1
2-2. D Board Removal		2-1
2-3. G Board Removal		2-2
2-4. A Board Terminal Board Bracket Removal		2-2
2-5. N Board Removal		2-3
2-6. Service Position		2-3
2-7. Bezel Assembly, H Board Removal		2-4
2-8. J Board Removal		2-4
2-9. Picture Tube Removal		2-5
2-10. Harness Location		2-6
3. SAFETY RELATED ADJUSTMENT		3-1
4. ADJUSTMENTS		4-1
5. DIAGRAMS		
5-1. Block Diagrams		5-1
5-2. Frame Schematic Diagram		5-7
5-3. Circuit Boards Location		5-9
5-4. Schematic Diagrams and Printed Wiring Boards		5-9
(1) Schematic Diagram of A Board		5-11
(2) Schematic Diagrams of H, J Boards		5-17
(3) Schematic Diagram of D Board		5-19
(4) Schematic Diagrams of N (@, ⑥, ⑭) Board		5-23
(5) Schematic Diagram of G Board		5-31
5-5. Semiconductors		5-35
6. EXPLODED VIEWS		
6-1. Chassis		6-1
6-2. Picture Tube		6-2
6-3. Packing Materials		6-3
7. ELECTRICAL PARTS LIST		7-1

Note: Hand degauss must be used on stand-by or power-off condition.

This model has an automatic earth magnetism correction function by using an earth magnetism sensor and a LCC coil. When using a hand degauss while monitor (LCC coil) is being operated, it sometimes gets magnetized, and the system may not work properly as a result.

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

Precautions

Warning on power connections

Use an appropriate power cord for your local power supply.

Example of plug types



for 100 to 120 V AC



for 240 V AC only

- Before disconnecting the power cord, wait at least 30 seconds after turning off the power to allow the static electricity on the screen's surface to discharge.
- After the power is turned on, the screen is demagnetized (degaussed) for about 2 seconds. This generates a strong magnetic field around the screen which may affect data stored on magnetic tapes and disks placed near the monitor. Be sure to keep magnetic recording equipment, tapes, and disks away from the monitor.

The equipment should be installed near an easily accessible outlet.

Installation

Do not install the monitor in the following places:

- on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies, etc.) that may block the ventilation holes
- near heat sources such as radiators or air ducts, or in a place subject to direct sunlight
- in a place subject to severe temperature changes
- in a place subject to mechanical vibration or shock
- on an unstable surface
- near equipment which generates magnetism, such as a transformer or high voltage power lines
- near or on an electrically charged metal surface

Maintenance


- Clean the screen with a soft cloth. If you use a glass cleaning liquid, do not use any type of cleaner containing an anti-static solution or similar additive as this may scratch the screen's coating.
- Do not rub, touch, or tap the surface of the screen with sharp or abrasive items such as a ballpoint pen or screwdriver. This type of contact may result in a scratched picture tube.
- Clean the cabinet, panel and controls with a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent, such as alcohol or benzene.

Transportation

When you transport this monitor for repair or shipment, use the original carton and packing materials.

Use of the tilt-swivel

This monitor can be adjusted within the angles shown below. To turn the monitor vertically or horizontally, hold it at the bottom with both hands.

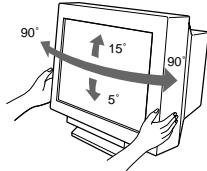


SECTION 1

GENERAL

Identifying parts and controls

See the pages in parentheses for further details.

Front

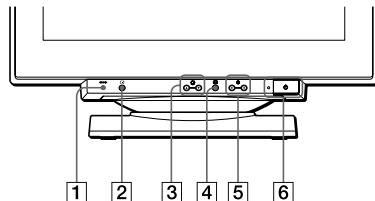

① (reset) button (page 14)

This button resets the adjustments to the factory settings.

② ASC (auto sizing and centering) button (page 7)

This button automatically adjusts the size and centering of the picture.

③ (brightness) / buttons (page 9)

These buttons display the BRIGHTNESS/CONTRAST menu and function as the / buttons when selecting menu items.

④ (menu) button (page 9)


This button displays the main menu.

⑤ (contrast) / buttons (page 9)

These buttons display the BRIGHTNESS/CONTRAST menu and function as the / buttons when making adjustments.

⑥ (power) switch and indicator (pages 6, 14, 18)

This button turns the monitor on and off. The power indicator lights up in green when the monitor is turned on, and either flashes in green and orange, or lights up in orange when the monitor is in power saving mode.

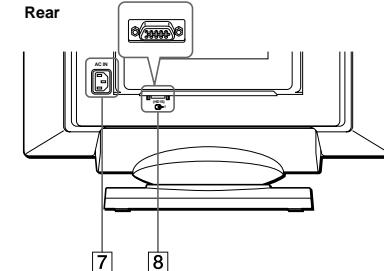

⑦ AC IN connector (page 6)

This connector provides AC power to the monitor.

⑧ Video input connector (HD15) (C-1) (page 6)

This connector inputs RGB video signals (0.700 Vp-p, positive) and sync signals.



GB

Pin No.	Signal
1	Red
2	Green (Sync on Green)
3	Blue
4	ID (Ground)
5	DDC Ground*
6	Red Ground
7	Green Ground
8	Blue Ground
9	DDC + 5V*
10	Ground
11	ID (Ground)
12	Bi-Directional Data (SDA)*
13	H. Sync
14	V. Sync
15	Data Clock (SCL)*


* DDC (Display Data Channel) is a standard of VESA.

Setup

This monitor works with platforms running at horizontal frequencies between 30 and 109 kHz.

Step 1: Connect your monitor to your computer

With the monitor and computer switched off, connect the video signal cable to the video input connector of the monitor and to the video output of the computer.

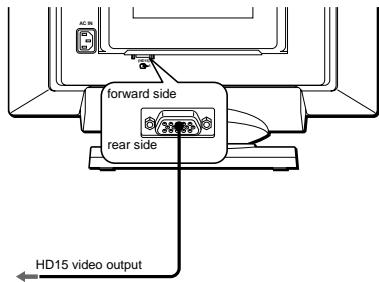


Notes

- Do not touch the pins of the video signal cable connector as this might bend the pins.
- When connecting the video signal cable, check the alignment of the HD15 connector. Do not force the connector in the wrong way or the pins might bend.

Step 2: Connect the power cord

With the monitor and computer switched off, first connect the proper power cord for your local power supply to the monitor, then connect it to a power outlet.

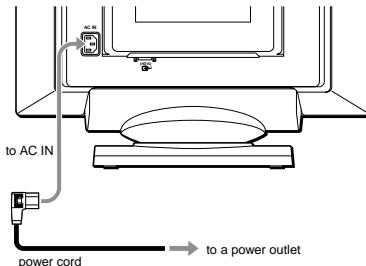

Step 3: Turn on the monitor and computer

First turn on the monitor, then turn on the computer.



The installation of your monitor is complete.
If necessary, use the monitor's controls to adjust the picture.

If no picture appears on your screen

- Check that the monitor is correctly connected to the computer.
- If NO INPUT SIGNAL appears on the screen, follow the on-screen messages (page 15).
- If you are replacing an old monitor with this model and OUT OF SCAN RANGE appears on the screen, reconnect the old monitor. Then adjust the computer's graphic board so that the horizontal frequency is between 30 – 109 kHz, and the vertical frequency is between 48 – 160 Hz.


For more information about the on-screen messages, see "Trouble symptoms and remedies" on page 16.

Selecting the on-screen menu language (LANGUAGE)

English, French, German, Spanish, Italian, Dutch, Swedish, Russian and Japanese versions of the on-screen menus are available. The default setting is English.


1 Press the button.

See page 9 for more information on using the button.

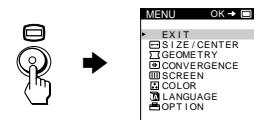

2 Press the / buttons to highlight LANGUAGE and press the button again.

See page 9 for more information on using the / buttons.

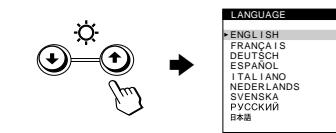

3 Press the / buttons to select a language.

- ENGLISH
- FRANÇAIS: French
- DEUTSCH: German
- ESPAÑOL: Spanish
- ITALIANO: Italian
- NEDERLANDS: Dutch
- SVENSKA: Swedish
- РУССКИЙ: Russian
- 日本語: Japanese

To close the menu

Press the button once to return to the main MENU, and twice to return to normal viewing. If no buttons are pressed, the menu closes automatically after about 30 seconds.

To reset to English


Press the (reset) button while the LANGUAGE menu is displayed on the screen.

Automatically sizing and centering the picture

You can easily adjust the picture to fill the screen by pressing the (auto sizing and centering) button.

Press the button.

The picture automatically fills the screen.



Notes

- This function is intended for use with a computer that provides a full-screen picture. It may not work properly if the background color is dark or if the input picture does not fill the screen to the edges.
- Pictures with an aspect ratio of 5:4 (resolution: 1280 × 1024, 1600 × 1280) are displayed at their actual resolution and do not fill the screen to the edges.
- The displayed image moves for a few seconds when the button is pressed. This is not a malfunction.

GB

Customizing Your Monitor

You can make numerous adjustments to your monitor using the on-screen menu.

Navigating the menu

Press the  button to display the main MENU on your screen.




Use the  and  buttons to select one of the following menus. See page 9 for more information on using the  and  buttons.

1 EXIT

Select EXIT to close the menu.

2 SIZE/CENTER (page 10)

Select the SIZE/CENTER menu to adjust the picture's size, centering or zoom.



3 GEOMETRY (page 10)

Select the GEOMETRY menu to adjust the picture's rotation and shape.

7 LANGUAGE (page 7)


Select the LANGUAGE menu to choose the on-screen menu's language.



8 OPTION (page 13)


Select the OPTION menu to adjust the monitor's options. The options include:

- degaussing the screen
- changing the on-screen menu position
- locking the controls




Displaying the current input signal

The horizontal and vertical frequencies of the current input signal are displayed in the main MENU. If the signal matches one of this monitor's factory preset modes, the resolution is also displayed.

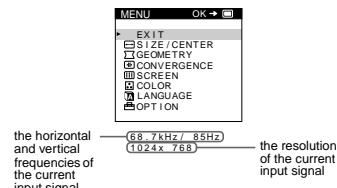


4 CONVERGENCE (page 11)

Select the CONVERGENCE menu to adjust the picture's horizontal and vertical convergence.




5 SCREEN (page 11)

Select the SCREEN menu to adjust the picture's quality. You can adjust the landing and moire cancellation effect.



6 COLOR (page 12)

Select the COLOR menu to adjust the picture's color temperature. You can use this to match the monitor's colors to a printed picture's colors.

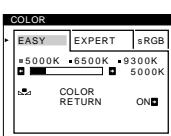

Using the , , and , buttons


1 Display the main MENU.

Press the  button to display the main MENU on your screen.




2 Select the menu you want to adjust.

Press the  buttons to highlight the desired menu. Press the  button to select the menu item.



3 Adjust the menu.

Press the  buttons to select the desired adjustment item. Press the  buttons to make the adjustment.



4 Close the menu.

Press the  button once to return to the main MENU, and twice to return to normal viewing. If no buttons are pressed, the menu closes automatically after about 30 seconds.



Resetting the adjustments

Press the  (reset) button. See page 14 for more information on resetting the adjustments.




Adjusting the brightness and contrast

Brightness and contrast adjustments are made using a separate BRIGHTNESS/CONTRAST menu.

These settings are stored in memory for the signals from the currently selected input connector.

1 Press either one of the (brightness) or (contrast) buttons.

The BRIGHTNESS/CONTRAST menu appears on the screen.



2 Press the (brightness) buttons to adjust the brightness (), and (contrast) buttons to adjust the contrast ().

If you are using the sRGB mode

If you selected the sRGB mode in the COLOR menu, the following BRIGHTNESS/CONTRAST menu appears on the screen.



For more information about using the sRGB mode, see "Adjusting the color of the picture (COLOR)" on page 12.

The menu automatically disappears after about 3 seconds.

GB

Adjusting the size of the picture (SIZE/CENTER)

This setting is stored in memory for the current input signal.

- 1 Press the  button.**
The main MENU appears on the screen.
- 2 Press the  buttons to highlight  and press the  button again.**
The SIZE/CENTER menu appears on the screen.
- 3 First press the  buttons to select  for horizontal adjustment, or  for vertical adjustment. Then press the  buttons to adjust the size.**

Adjusting the centering of the picture (SIZE/CENTER)

This setting is stored in memory for the current input signal.

- 1 Press the  button.**
The main MENU appears on the screen.
- 2 Press the  buttons to highlight  and press the  button again.**
The SIZE/CENTER menu appears on the screen.
- 3 First press the  buttons to select  for horizontal adjustment, or  for vertical adjustment. Then press the  buttons to adjust the centering.**

Enlarging or reducing the picture (ZOOM)

This setting is stored in memory for the current input signal.

- 1 Press the  button.**
The main MENU appears on the screen.
- 2 Press the  buttons to highlight  and press the  button again.**
The SIZE/CENTER menu appears on the screen.
- 3 Press the  buttons to select , and press the  buttons to enlarge or reduce the picture.**

Note

Adjustment stops when either the horizontal or vertical size reaches its maximum or minimum value.

Adjusting the shape of the picture (GEOMETRY)

The GEOMETRY settings allow you to adjust the rotation and shape of the picture.

The  (rotation) setting is stored in memory for all input signals. All other settings are stored in memory for the current input signal.

- 1 Press the  button.**
The main MENU appears on the screen.
- 2 Press the  buttons to highlight  and press the  button again.**
The GEOMETRY menu appears on the screen.
- 3 First press the  buttons to select the desired adjustment item. Then press the  buttons to make the adjustment.**

Select	To
	rotate the picture
	expand or contract the picture sides
	shift the picture sides to the left or right
	adjust the picture width at the top of the screen
	shift the picture to the left or right at the top of the screen

Adjusting the convergence (CONVERGENCE)

The CONVERGENCE settings allow you to adjust the quality of the picture by controlling the convergence. The convergence refers to the alignment of the red, green, and blue color signals. If you see red or blue shadows around letters or lines, adjust the convergence.

These settings are stored in memory for all input signals.

- 1 Press the  button.**
The main MENU appears on the screen.
- 2 Press the  buttons to highlight  and press the  button again.**
The CONVERGENCE menu appears on the screen.
- 3 First press the  buttons to select the desired adjustment item. Then press the  buttons to make the adjustment.**

Select	To
	horizontally shift red or blue shadows
	vertically shift red or blue shadows
 TOP V CONVER TOP	vertically shift red or blue shadows at the top of the screen
 BOT V CONVER BOTTOM	vertically shift red or blue shadows at the bottom of the screen

Adjusting the quality of the picture (SCREEN)

The SCREEN settings allow you to adjust the quality of the picture by controlling the moire and landing.

- If the color is irregular at the corners of the screen, adjust the landing.
- If elliptical or wavy patterns appear on the screen, cancel the moire.

The CANCEL MOIRE and MOIRE ADJUST settings are stored in memory for the current input signal. All other settings are stored in memory for all input signals.


- 1 Press the  button.**
The main MENU appears on the screen.
- 2 Press the  buttons to highlight  and press the  button again.**
The SCREEN menu appears on the screen.
- 3 First press the  buttons to select the desired adjustment item. Then press the  buttons to make the adjustment.**

Select	To
 LANDING	reduce any color irregularities in the screen's top left corner to a minimum.
 LANDING	reduce any color irregularities in the screen's top right corner to a minimum.
 LANDING	reduce any color irregularities in the screen's bottom left corner to a minimum.
 LANDING	reduce any color irregularities in the screen's bottom right corner to a minimum.
 CANCEL MOIRE*	turn the moire cancellation function ON or OFF.  (MOIRE ADJUST) appears in the menu when you select ON.
 MOIRE ADJUST	adjust the degree of moire cancellation until the moire is at a minimum.

* Moire is a type of natural interference which produces soft, wavy lines on your screen. It may appear due to interference between the pattern of the picture on the screen and the phosphor pitch pattern of the monitor.

Note

The picture may become fuzzy when CANCEL MOIRE is set to ON.



Adjusting the color of the picture (COLOR)

The COLOR settings allow you to adjust the picture's color temperature by changing the color level of the white color field. Colors appear reddish if the temperature is low, and bluish if the temperature is high. This adjustment is useful for matching the monitor's color to a printed picture's colors.

1 Press the button.

The main MENU appears on the screen.

2 Press the buttons to highlight COLOR and press the button again.

The COLOR menu appears on the screen.


3 Press the buttons to select the adjustment mode.

There are three types of adjustment modes, EASY, EXPERT and sRGB.

4 First press the buttons to select the desired adjustment item. Then press the buttons to make the adjustment.

Adjust the selected mode according to the following instructions.

EASY mode

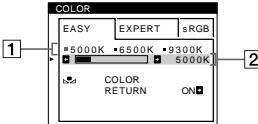

1 First press the buttons to select the color temperature row [1], then press the buttons to select a color temperature.

The preset color temperatures are 5000K, 6500K, and 9300K. Since the default setting is 9300K, the whites will change from a bluish hue to a reddish hue as the temperature is lowered to 6500K and 5000K.


2 If necessary, fine tune the color temperature. First press the buttons to select the color temperature adjustment row [2], then press the buttons to fine tune the color temperature.

If you fine tune the color temperature, the new color settings are stored in memory for each of the three color temperatures and item [1] of the on-screen menu changes as follows.

- [5000K]→[1]
- [6500K]→[2]
- [9300K]→[3]

EXPERT mode

You can make additional adjustments to the color in greater detail by selecting the EXPERT mode.

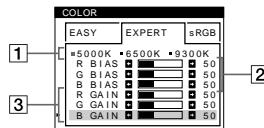

1 Press the buttons to select the color temperature row [1], then press the buttons to select a color temperature.

2 Press the buttons to select the adjustment item [2], then press the buttons to adjust the BIAS (black level).

This adjusts the dark areas of an image.

3 Press the buttons to select the adjustment item [3], then press the buttons to adjust the GAIN (white level).

This adjusts the light areas of an image.

You can adjust the R (red), G (green), B (blue) component of the input signal when making changes to items [2] and [3].

If you fine tune the color temperature, the new color settings are stored in memory for each of the three color temperatures and item [1] of the on-screen menu change as follows.

- [5000K]→[1]
- [6500K]→[2]
- [9300K]→[3]

sRGB mode

The sRGB color setting is an industry standard color space protocol designed to correlate the displayed and printed colors of sRGB compliant computer products. To adjust the colors to the sRGB profile, simply select the sRGB mode in the COLOR menu. However, in order to display the sRGB colors correctly ($\gamma=2.2$, 6500K), you must set your computer to the sRGB profile and adjust the brightness () and contrast () to the numbers shown in the menu. For information on how to change the brightness () and contrast (), see page 9.

Note

Your computer and other connected products (such as a printer), must be sRGB compliant.



Restoring the color from the EASY or sRGB menus

The colors of most display monitors tend to gradually lose brilliance over several years of service. The COLOR RETURN feature found in the EASY and sRGB menus allows you to restore the color to the original factory quality levels. The explanation below explains how to restore the monitor's color from the EASY menu.

1 Press the buttons to select EASY or sRGB mode.

2 First press the buttons to select (COLOR RETURN), then press the button.

The picture disappears while the color is being restored (about 2 seconds). After the color is restored, the picture reappears on the screen again.

Notes

- Before using this feature, the monitor must be in normal operation mode (green power indicator on) for at least 30 minutes. If the monitor goes into power saving mode, you must return the monitor to normal operation mode and wait for 30 minutes for the monitor to be ready. You may need to adjust your computer's power saving settings to keep the monitor in normal operation mode for the full 30 minutes. If the monitor is not ready, the following message will appear.



- The monitor may gradually lose its ability to perform this function due to the natural aging of the picture tube.

Additional settings (OPTION)

You can manually degauss (demagnetize) the monitor, change the menu position, and lock the controls.

1 Press the button.

The main MENU appears on the screen.

2 Press the buttons to highlight OPTION and press the button again.

The OPTION menu appears on the screen.

3 Press the buttons to select the desired adjustment item.

Adjust the selected item according to the following instructions.

Degaussing the screen

The monitor is automatically demagnetized (degaussed) when the power is turned on.

To manually degauss the monitor, first press the buttons to select (DEGAUSS). Then press the button.

The screen is degaussed for about 2 seconds. If a second degauss cycle is needed, allow a minimum interval of 20 minutes for the best result.

GB

Changing the menu's position

Change the menu's position if it is blocking an image on the screen.

To change the menu's on-screen position, first press the buttons to select (OSD H POSITION) for horizontal adjustment, or (OSD V POSITION) for vertical adjustment. Then press the buttons to shift the on-screen menu.

Locking the controls

To protect adjustment data by locking the controls, first press the buttons to select (CONTROL LOCK). Then press the button to select ON.

Only the (power) switch, EXIT, and (CONTROL LOCK) of the OPTION menu will operate. If any other items are selected, the mark appears on the screen.

To cancel the control lock

Repeat the procedure above and set (CONTROL LOCK) to OFF.

Resetting the adjustments

This monitor has the following three reset methods. Use the **---** (reset) button to reset the adjustments.



Resetting a single adjustment item

Use the **---**, **↑**, **↓** buttons to select the adjustment item you want to reset, and press the **---** (reset) button.

Resetting all of the adjustment data for the current input signal

Press the **---** (reset) button when no menu is displayed on the screen.

Note that the following items are not reset by this method:

- on-screen menu language (page 7)
- adjustment mode in the COLOR menu (EASY, EXPERT, sRGB) (page 12)
- on-screen menu position (page 13)
- control lock (page 13)

Resetting all of the adjustment data for all input signals

Press and hold the **---** (reset) button for more than two seconds.

Note

The **---** (reset) button does not function when **ON** (CONTROL LOCK) is set to ON.

Technical Features

Power saving function

This monitor meets the power-saving guidelines set by VESA, ENERGY STAR, and NUTEK. If the monitor is connected to a computer or video graphics board that is DPMS (Display Power Management Signaling) compliant, the monitor will automatically reduce power consumption in three stages as shown below.

Power mode	Power consumption	(power) indicator
normal operation	≤ 145 W	green
1 standby	≤ 100 W	green and orange alternate
2 suspend (sleep)*	≤ 15 W	green and orange alternate
3 active off** (deep sleep)*	Approx. 1 W	orange
power off	0 W	off

* "Sleep" and "deep sleep" are power saving modes defined by the Environmental Protection Agency.


** When your computer enters a power saving mode, the input signal is cut and NO INPUT SIGNAL appears on the screen. After a few seconds, the monitor enters power saving mode.

Troubleshooting

Before contacting technical support, refer to this section.

If thin lines appear on your screen (damper wires)


The lines you are experiencing on your screen are normal for the Trinitron monitor and are not a malfunction. These are shadows from the damper wires used to stabilize the aperture grille and are most noticeable when the screen's background is light (usually white). The aperture grille is the essential element that makes a Trinitron picture tube unique by allowing more light to reach the screen, resulting in a brighter, more detailed picture.



On-screen messages

If there is something wrong with the input signal, one of the following messages appears on the screen.

If NO INPUT SIGNAL appears on the screen

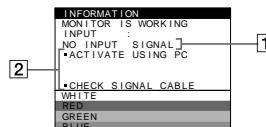

① The input signal condition NO INPUT SIGNAL


This indicates that no signal is input.

② The remedies

One or more of the following messages may appear on the screen.

- If ACTIVATE USING PC appears on the screen, try pressing any key on the computer, and confirm that your computer's graphic board is completely seated in the correct bus slot.
- If CHECK SIGNAL CABLE appears on the screen, check that the monitor is correctly connected to the computer (page 6).

If OUT OF SCAN RANGE appears on the screen

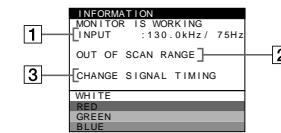

① The frequencies of the current input signal

If the monitor recognizes the frequencies of the current input signal, the horizontal and vertical frequencies are also displayed.

② The input signal condition OUT OF SCAN RANGE

This indicates that the input signal is not supported by the monitor's specifications.

③ The remedies

CHANGE SIGNAL TIMING appears on the screen. If you are replacing an old monitor with this monitor, reconnect the old monitor. Then adjust the computer's graphic board to that the horizontal frequency is between 30 – 109 kHz, and the vertical frequency is between 48 – 160 Hz.

GB

For more information, see "Trouble symptoms and remedies" on page 16.

Trouble symptoms and remedies

If the problem is caused by the connected computer or other equipment, please refer to the connected equipment's instruction manual. Use the self-diagnosis function (page 18) if the following recommendations do not resolve the problem.

Symptom	Check these items
No picture	<ul style="list-style-type: none"> If the (power) indicator is not lit <ul style="list-style-type: none"> Check that the power cord is properly connected. Check that the (power) switch is in the "on" position. If the NO INPUT SIGNAL message appears on the screen, or if the (power) indicator is either orange or alternating between green and orange <ul style="list-style-type: none"> Check that the HD15 video input connector's pins are not bent or pushed in. ■ Problems caused by the connected computer or other equipment <ul style="list-style-type: none"> The computer is in power saving mode. Try pressing any key on the computer keyboard. Check that the computer's power is "on." Check that the graphic board is completely seated in the proper bus slot. If the NO INPUT SIGNAL and CHECK SIGNAL CABLE message appear on the screen, or if the (power) indicator is either orange or alternating between green and orange <ul style="list-style-type: none"> Check that the video signal cable is properly connected and all plugs are firmly seated in their sockets (page 6). Check that the HD15 video input connector's pins are not bent or pushed in. ■ Problems caused by the connected computer or other equipment <ul style="list-style-type: none"> Check that the graphic board is completely seated in the proper bus slot. If the OUT OF SCAN RANGE message appears on the screen <ul style="list-style-type: none"> ■ Problems caused by the connected computer or other equipment <ul style="list-style-type: none"> Check that the video frequency range is within that specified for the monitor. If you replaced an old monitor with this monitor, reconnect the old monitor and adjust the frequency range to the following. Horizontal: 30 – 109 kHz Vertical: 48 – 160 Hz If no message is displayed and the (power) indicator is green or flashing orange <ul style="list-style-type: none"> Use the Self-diagnosis function (page 18).
Picture flickers, bounces, oscillates, or is scrambled	<ul style="list-style-type: none"> Isolate and eliminate any potential sources of electric or magnetic fields such as other monitors, laser printers, electric fans, fluorescent lighting, or televisions. Move the monitor away from power lines or place a magnetic shield near the monitor. Try plugging the monitor into a different AC outlet, preferably on a different circuit. Try turning the monitor 90° to the left or right. ■ Problems caused by the connected computer or other equipment <ul style="list-style-type: none"> Check your graphics board manual for the proper monitor setting. Confirm that the graphics mode and the frequency of the input signal are supported by this monitor. Even if the frequency is within the proper range, some video boards may have a sync pulse that is too narrow for the monitor to sync correctly. Adjust the computer's refresh rate (vertical frequency) to obtain the best possible picture.
Picture is fuzzy	<ul style="list-style-type: none"> Adjust the brightness and contrast (page 9). Degauss the monitor* (page 13). If CANCEL MOIRE is ON, the picture may become fuzzy. Decrease the moire cancellation effect or set CANCEL MOIRE to OFF (page 11).

Symptom	Check these items
Picture is ghosting	<ul style="list-style-type: none"> Eliminate the use of video cable extensions and/or video switch boxes. Check that all plugs are firmly seated in their sockets.
Picture is not centered or sized properly	<ul style="list-style-type: none"> Press the button (page 7). Adjust the size (page 10) or centering (page 10). Note that some video modes do not fill the screen to the edges.
Edges of the image are curved	<ul style="list-style-type: none"> Adjust the geometry (page 10).
Wavy or elliptical pattern (moire) is visible	<ul style="list-style-type: none"> Set CANCEL MOIRE to ON and adjust the degree of moire cancellation until the moire is at a minimum (page 11).
■ Problems caused by the connected computer or other equipment	<ul style="list-style-type: none"> Change your desktop pattern.
Color is not uniform	<ul style="list-style-type: none"> Degauss the monitor* (page 13). If you place equipment that generates a magnetic field, such as a speaker, near the monitor, or if you change the direction the monitor faces, color may lose uniformity. Adjust the landing (page 11).
White does not look white	<ul style="list-style-type: none"> Adjust the color temperature (page 12).
Letters and lines show red or blue shadows at the edges	<ul style="list-style-type: none"> Adjust the convergence (page 11).
Monitor buttons do not operate (ON appears on the screen)	<ul style="list-style-type: none"> If the control lock is set to ON, set it to OFF (page 13).
COLOR RETURN function does not operate	<ul style="list-style-type: none"> Before using this function, the monitor must be in normal operation mode (green power indicator on) for at least 30 minutes. For more information on using the COLOR RETURN function, see page 13. Adjust the computer's power saving settings to keep the monitor in normal operation mode for more than 30 minutes. The monitor may gradually lose its ability to perform this function due to the natural aging of the picture tube.

A hum is heard right after the power is turned on

- This is the sound of the auto-degauss cycle. When the power is turned on, the monitor is automatically degaussed for two seconds.

* If a second degauss cycle is needed, allow a minimum interval of 20 minutes for the best result. A humming noise may be heard, but this is not a malfunction.

Displaying this monitor's name, serial number, and date of manufacture.

While the monitor is receiving a video signal, press and hold the button for more than five seconds to display this monitor's information box.


If the problem persists, call your service representative and give the following information.

- Model name: GDM-5403
- Serial number
- Name and specifications of your computer and graphics board.



Self-diagnosis function

This monitor is equipped with a self-diagnosis function. If there is a problem with your monitor or computer(s), the screen will go blank and the \odot (power) indicator will either light up green or flash orange. If the \odot (power) indicator is lit in orange, the computer is in power saving mode. Try pressing any key on the keyboard.



If the \odot (power) indicator is green

- 1 Disconnect the video input cable or turn off the connected computer.
- 2 Press the \odot (power) button twice to turn the monitor off and then on.
- 3 Press the \rightarrow button for 2 seconds before the monitor enters power saving mode.



If all four color bars appear (white, red, green, blue), the monitor is working properly. Reconnect the video input cables and check the condition of your computer(s).

If the color bars do not appear, there is a potential monitor failure. Inform your service representative of the monitor's condition.

If the \odot (power) indicator is flashing orange

Press the \odot (power) button twice to turn the monitor off and then on.

If the \odot (power) indicator lights up green, the monitor is working properly.

If the \odot (power) indicator is still flashing, there is a potential monitor failure. Count the number of seconds between orange flashes of the \odot (power) indicator and inform your service representative of the monitor's condition. Be sure to note the model name and serial number of your monitor. Also note the make and model of your computer and video board.

Specifications

CRT	0.24 mm aperture grille pitch 21 inches measured diagonally 90-degree deflection FD Trinitron
Viewable image size	Approx. 403.8 × 302.2 mm (w/h) (16 × 12 inches) 19.8" viewing image
Maximum resolution	Horizontal: 1600 dots Vertical: 1200 lines
Standard image area	Approx. 388 × 291 mm (w/h) (15 $\frac{5}{8}$ × 11 $\frac{1}{2}$ inches) or Approx. 364 × 291 mm (w/h) (14 $\frac{3}{8}$ × 11 $\frac{1}{2}$ inches)
Deflection frequency*	Horizontal: 30 to 109 kHz Vertical: 48 to 160 Hz
AC input voltage/current	100 to 240 V, 50 – 60 Hz, 2.0 – 1.0 A
Power consumption	Approx. 145 W
Dimensions	Approx. 498 × 491 × 478 mm (w/h/d) (19 $\frac{5}{8}$ × 19 $\frac{3}{8}$ × 18 $\frac{7}{8}$ inches)
Mass	Approx. 32 kg (70 lb 9 oz)
Plug and Play	DDC1/2B/2Bi, GTF**


- * Recommended horizontal and vertical timing condition
• Horizontal sync width duty should be more than 4.8% of total horizontal time or 0.8 μ s, whichever is larger.
• Horizontal blanking width should be more than 2.3 μ sec.
• Vertical blanking width should be more than 450 μ sec.
** If the input signal is Generalized Timing Formula (GTF) compliant, the GTF feature of the monitor will automatically provide an optimal image for the screen.

Design and specifications are subject to change without notice.


SECTION 2

DISASSEMBLY


2-1. CABINET REMOVAL

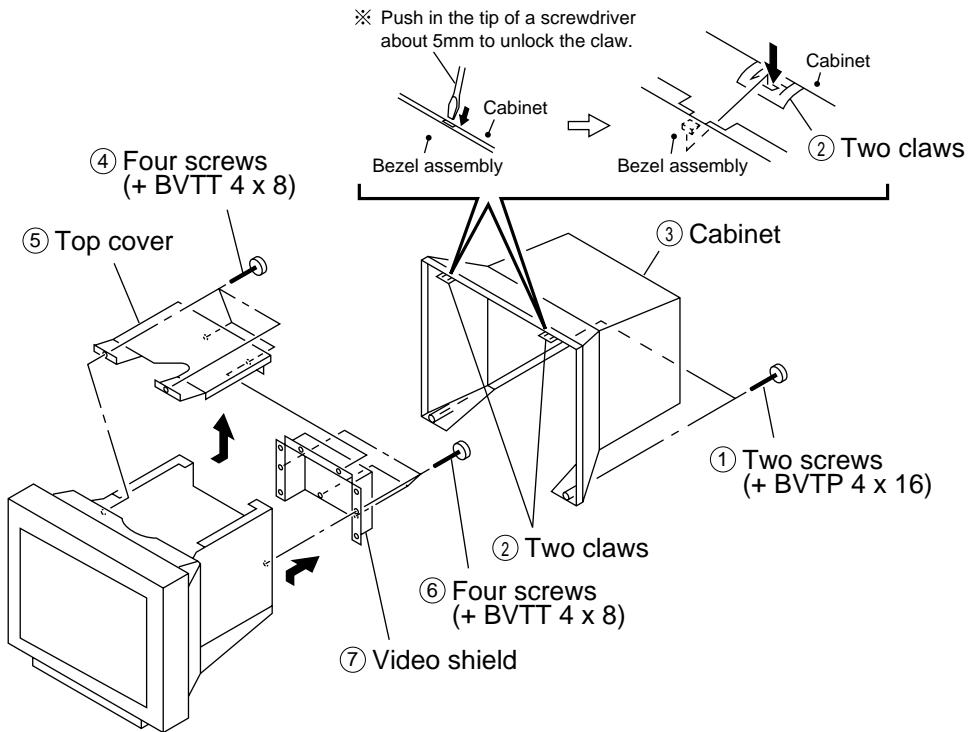


2-2. D BOARD REMOVAL


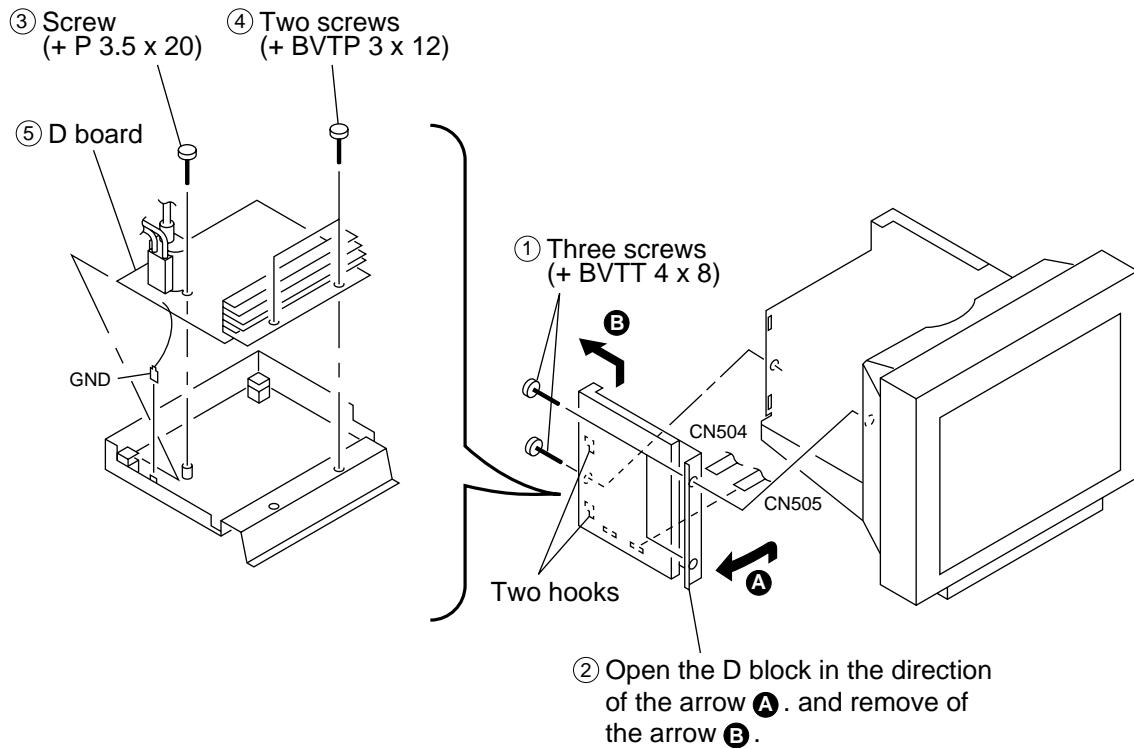


2-3. G BOARD REMOVAL

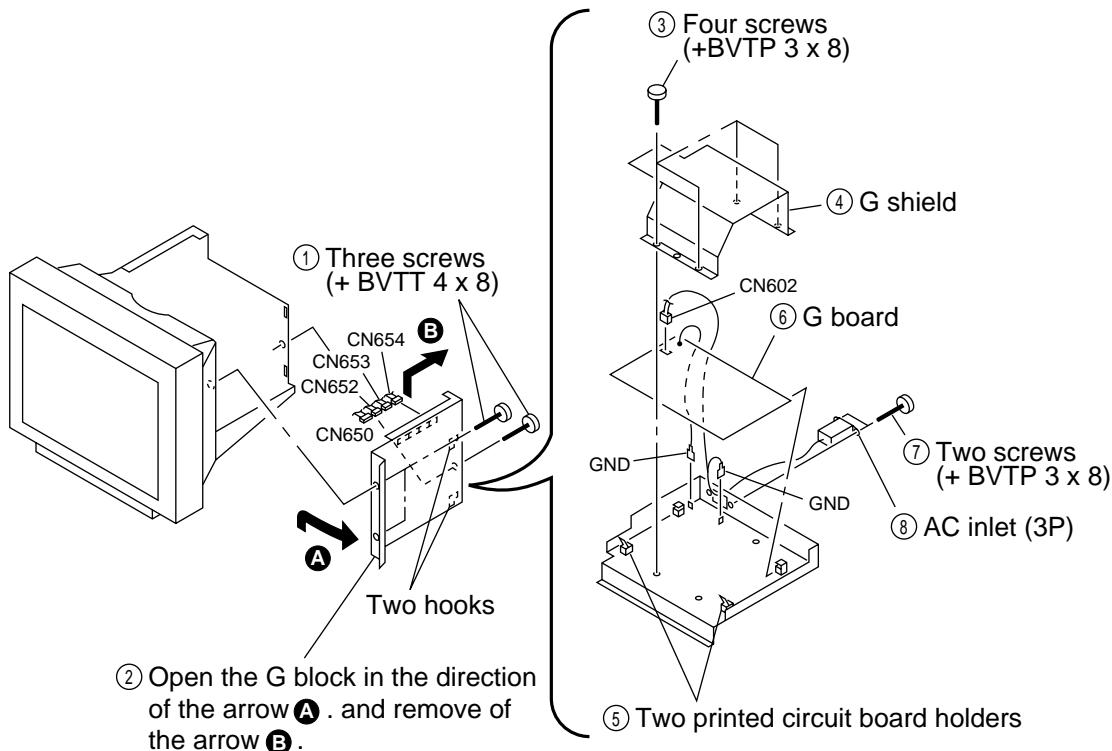


2-4. A BOARD, TERMINAL BOARD BRACKET REMOVAL

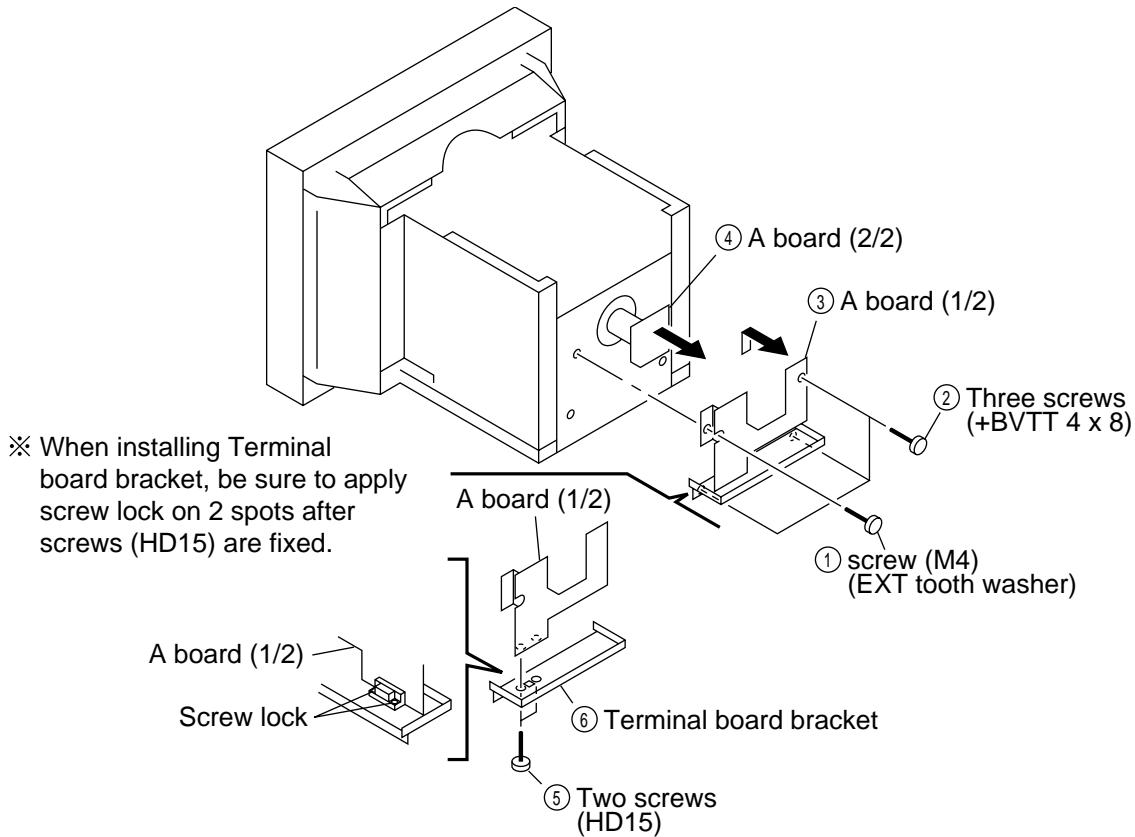

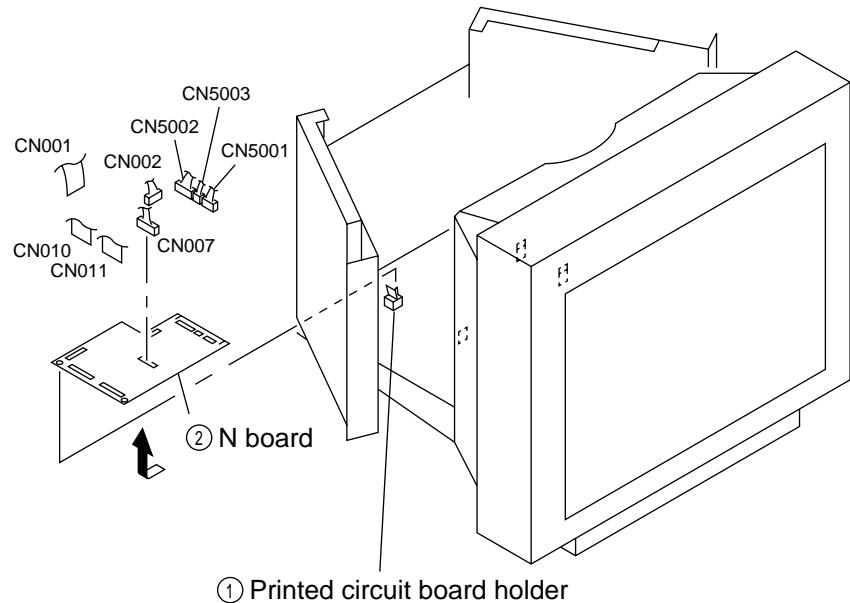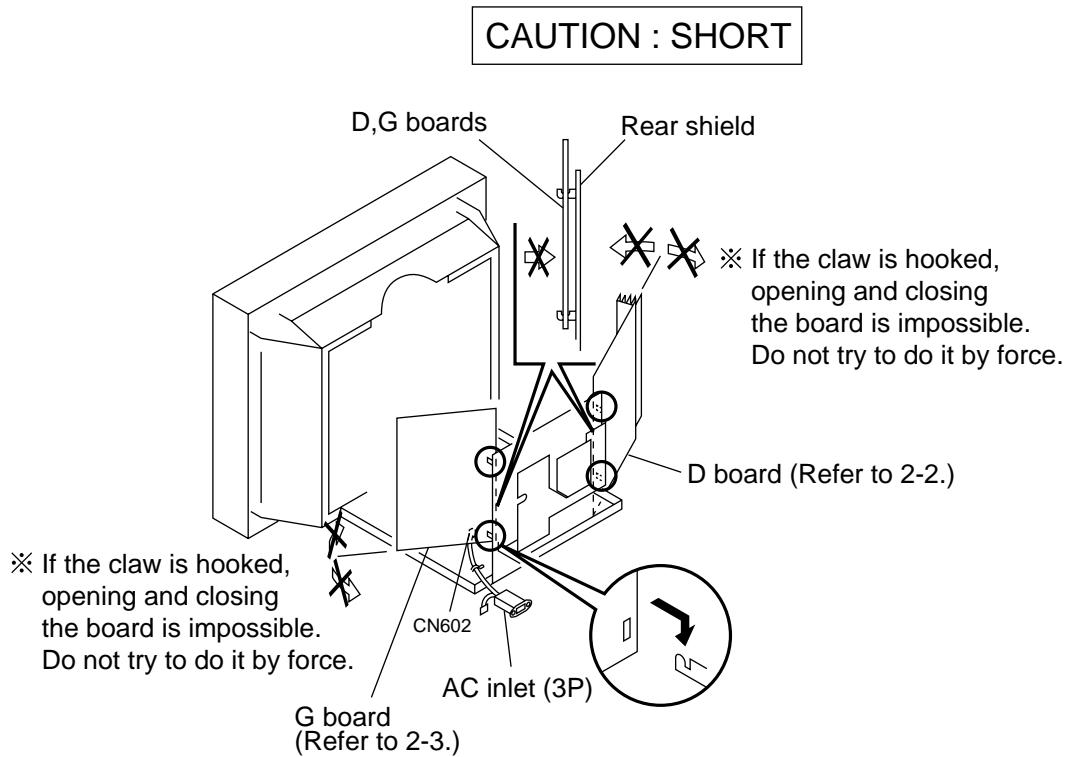
2-5. N BOARD REMOVAL**2-6. SERVICE POSITION**

2-7. BEZEL ASSEMBLY, H BOARD REMOVAL

- ① Before removing the bezel assembly, secure the picture tube by attaching two screws to the picture tube shield at the positions shown with an arrow (diagonal two places) to prevent the picture tube from falling. (Use the screws +BVTT 4 x 8 that fix top cover.)

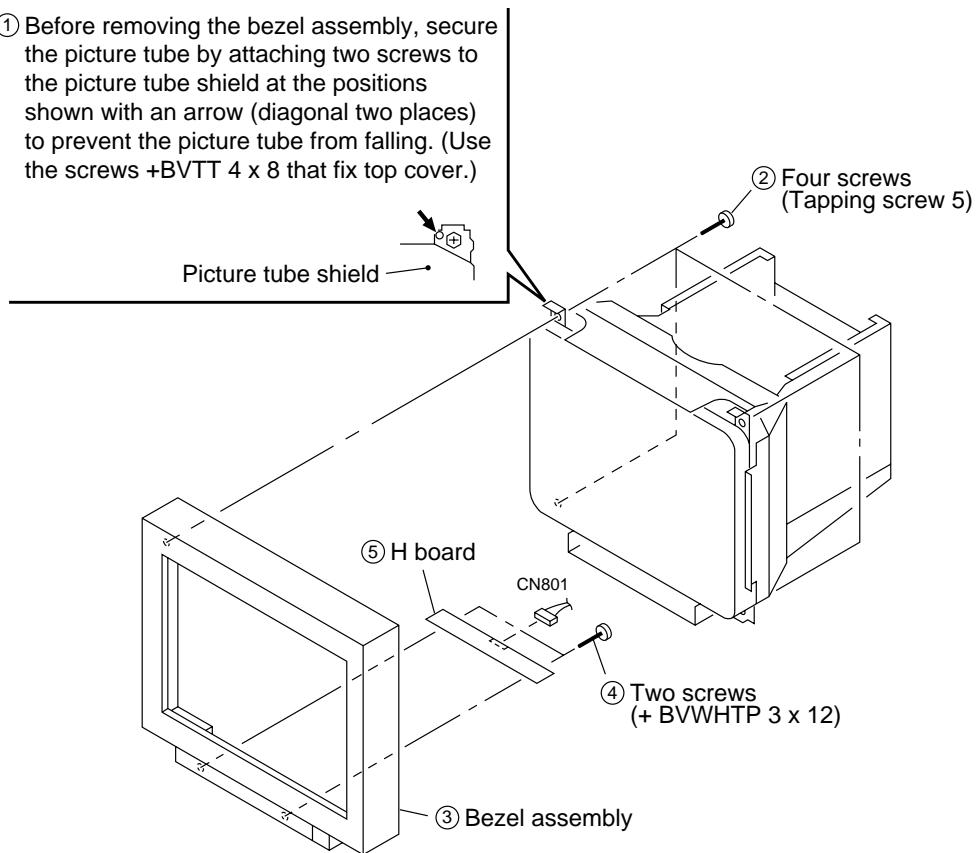


2-8. J BOARD REMOVAL

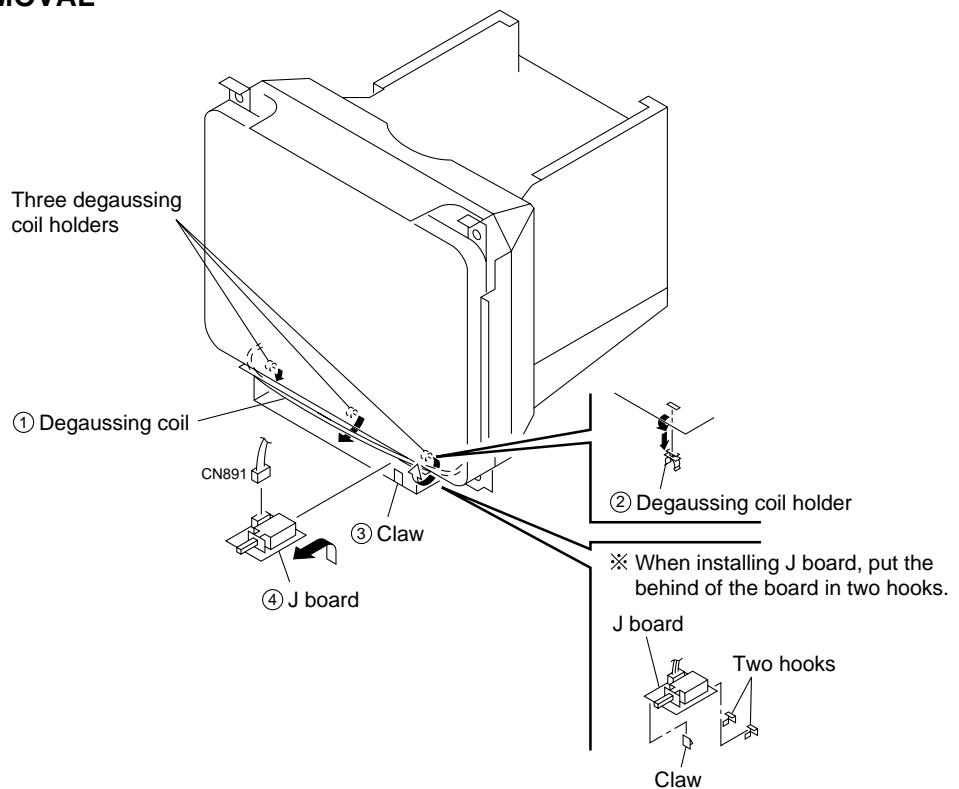

2-9. PICTURE TUBE REMOVAL


※ Remove the bezel assembly. (Refer to 2-7)

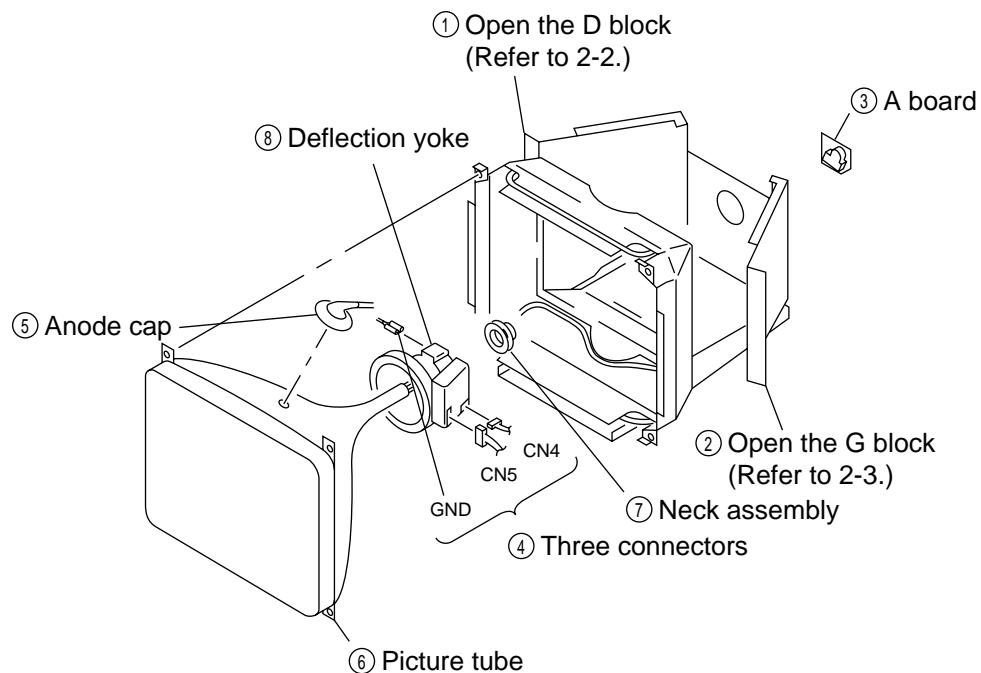

• REMOVAL OF ANODE-CAP

NOTE: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon painted on the CRT, after removing the anode.

• REMOVING PROCEDURES

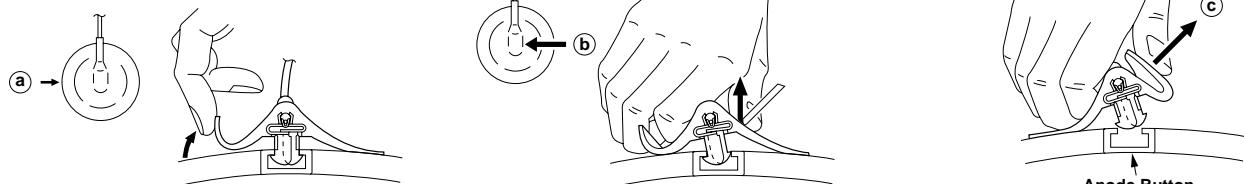


① Turn up one side of the rubber cap in the direction indicated by the arrow Ⓐ.

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow Ⓑ.


③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow Ⓒ.

• HOW TO HANDLE AN ANODE-CAP

- ① Don't scratch the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to damage inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly!
The shatter-hook terminal will stick out or damage the rubber.

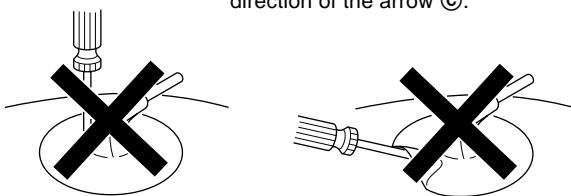

2-10. HARNESS LOCATION

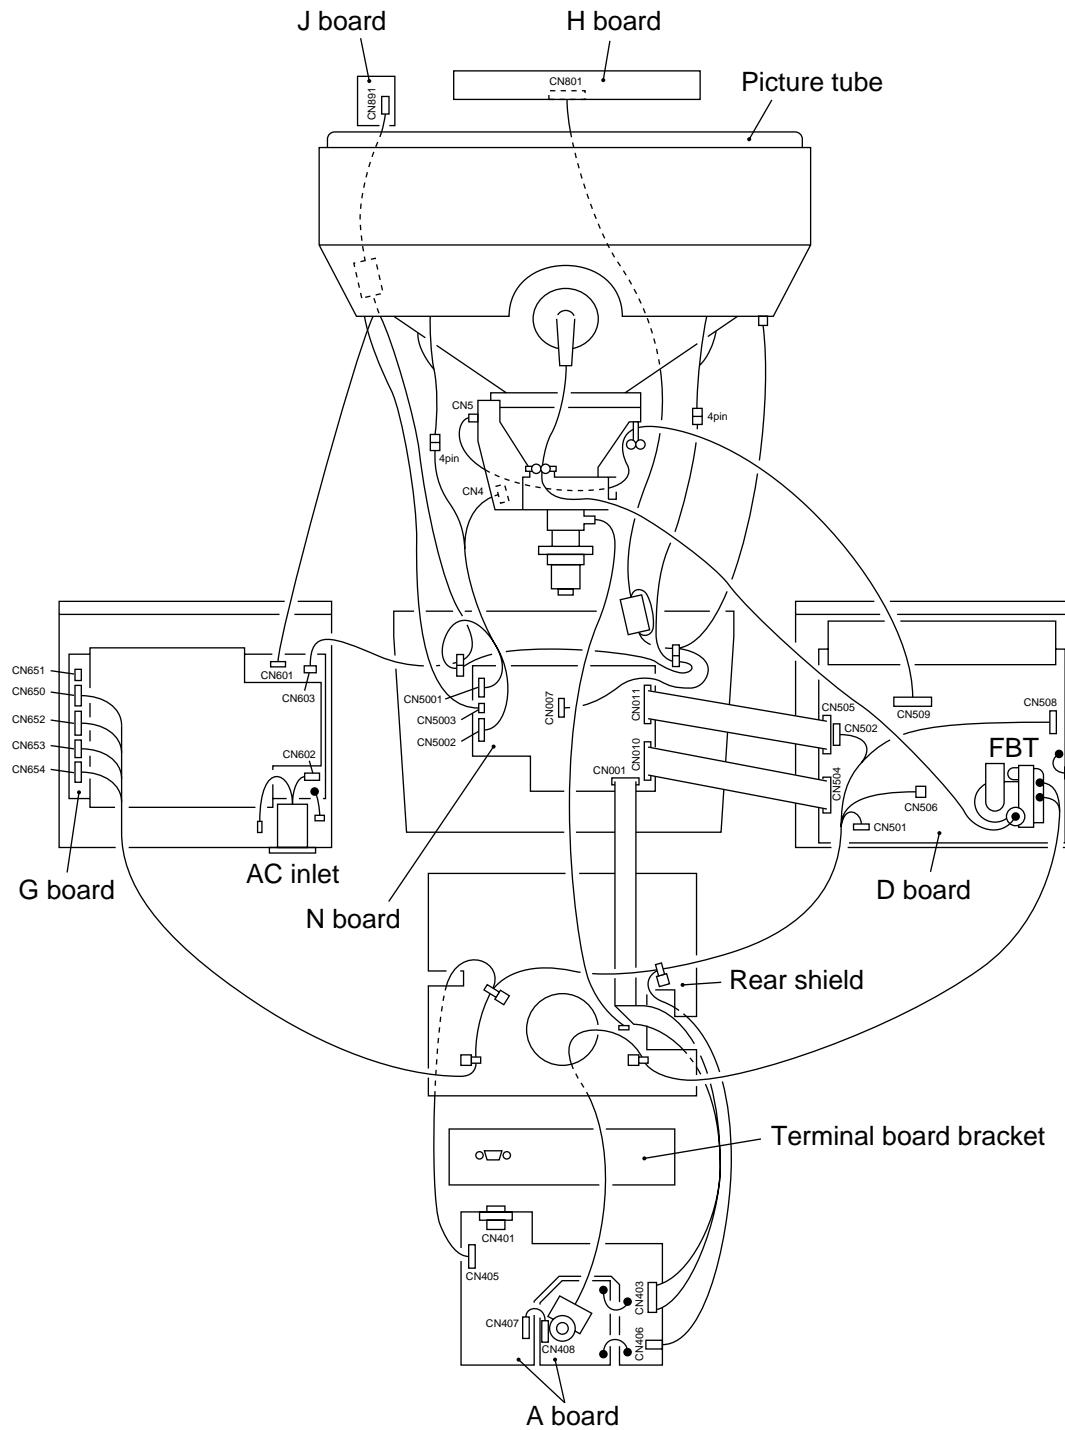

SECTION 3

SAFETY RELATED ADJUSTMENT

When replacing or repairing the shown below table, the following operational checks must be performed as a safety precaution against X-rays emissions from the unit.

	Part Replaced (☒)
HV ADJ	RV901

	Part Replaced (☒)
HV Regulator Circuit Check	D Board C920, IC901, R923 R924, R929, R945, RV901, T902 (FBT) • Mounted D Board
HV Protector Circuit Check	D Board C922, C925, C926, D912, D914, D915, D921, Q907, Q908, R921, R922, R932, R937, R939, T902 (FBT) • Mounted D Board
Beam Current Protector Circuit Check	D Board C910, C921, C933, D901, D902, D913, IC503, IC901, R901, R920, R928, R930, R931, R940, R941, T902 (FBT) • Mounted D Board G Board IC652 • Mounted G Board N Board IC001, R031, R032 • Mounted N Board

* Confirm one minute after turning on the power.

a) HV Regulator Circuit Check

- 1) Enter black crosshatch signal (black on white background), and check that high voltage is in the specified range.

[Specification]: 27.00 ± 0.10 kV

- 2) Check that the voltage of D912 cathode on the D board is 27.0 V or more.

b) HV Protector Circuit Check

- 1) Enter black crosshatch signal (black on white background).
- 2) Apply the specified voltage to the D912 cathode on the D board, and check that high voltage is 0.1 kV or less.

[Specification]: $31.90 + 0.00/- 0.05$ V

c) Beam Current Protector Circuit Check

(1st Protector): D Board

- 1) Apply 4.5 V DC to CN504 ⑩ pin on the D board, and check high voltage value.
- 2) Connect constant current source to a section between T902 (FBT) ⑪ pin and ⑫ pin (GND) on the D board, and check that high voltage checked in 1) lowers by 1.50 kV or more when the specified current flows to the ⑪ pin.
[Specification]: $2.00 + 0.00/- 0.01$ mA

d) Beam Current Protector Circuit Check

(2nd Protector): D Board

- 1) Connect constant current source to a section between T902 (FBT) ⑪ pin and ⑫ pin (GND) on the D board, and check that the voltage of CN504 ⑩ pin becomes 0 V or less when the specified current flows to the ⑪ pin.
[Specification]: $1.70 + 0.00/- 0.01$ mA

e) Beam Current Protector Circuit Check

: G Board

- 1) Apply 264 V AC.
- 2) Enter about 5 V to CN650 ④ pin on the G board, and check that the output voltage of CN653 ② pin is about 15 V.
- 3) Enter about 0 ± 0.2 V to CN654 ④ pin, and check that the output voltage of CN653 ② pin becomes 1.0 V or less.

f) Beam Current Protector Circuit Check

: N Board

- 1) Check that the protector operates, when the voltage of CN010 ⑯ pin on the N board is lowered to 0 V or less (for more than 2 seconds).

SECTION 4

ADJUSTMENTS

Note: Hand degauss must be used on stand-by or power-off condition.

This model has an automatic earth magnetism correction function by using an earth magnetism sensor and a LCC coil. When using a hand degauss while monitor (LCC coil) is being operated, it sometimes gets magnetized, and the system may not work properly as a result.

• Landing Rough Adjustment

1. Enter the full white signal. (or the full black dots signal).
2. Adjust the contrast to the maximum.
3. Make the screen monogreen.

Note: Off the outputs from R ch and B ch of SG.

4. Reverse the DY, and adjust coarsely the purity magnet so that a green raster positions in the center of screen.
5. Adjust the tilt of DY, and fix lightly with a clamp.

Note: "TILT" = "128".

• Landing Fine Adjustment

1. Put the set inside the Helmholtz coil. ("LCC SW" = "12")
2. Input the single green signal and set the "CONTRAST" = "255".

Note: After the W/B adjustment with 9300 K, measure an average of ΣI_k when a full white signal is entered in the CONT MAX/BRT CENT status. Then make adjustment so that the specified screen can be attained after aging for 2 hours with I_k equivalent to 30% of the average value.

3. Demagnetize the metal part of the chassis with the hand degausser and coil degausser, and the CRT surface with the hand degausser.
Input AC 230V to AC IN, turn on and off the power to perform auto degaussing. (Perform auto degaussing by setting "FUNCTION SW" = 1. Return to the original value after use.)

Demagnetize the CRT surface with the hand degausser again.

Note:

- (1) Hand degauss must be used on stand-by or power-off condition.

This model has an automatic earth magnetism correction function by using an earth magnetism sensor and a LCC coil. When using a hand degauss while monitor (LCC coil) is being operated, it sometimes gets magnetized, and the system may not work properly as a result.

- (2) Adjust in a non-magnetic field.
- (3) If adjusting in a magnetic fields, add the shift from the non-magnetic field in your estimation.
4. Attach the wobbling coil to the designated part of the CRT neck.
5. Attach the sensor of the landing adjustment unit on the CRT surface.
6. Adjust the DY position and purity, and the DY tilt, and landing of the center and 4 corners with the landing checker.

After adjustment, set "LCC SW" to "13".

- Write terrestrial magnetism sensor reading VX and VY to "LCC VX" and "LCC VY" respectively. Adjust the landing by moving "LCC NS", "LCC LT", "LCC LB", "LCC RT" and "LCC RB". However, the register adjustment must be limited within the following range.

"LCC NS" 128 ± 15

"LCC LT", "LCC LB", "LCC RT", "LCC RB" 128 ± 40

Save the service data.

<Specifications>

Adjust so that the green is within the specification given right.

4 corner adjust target : within ± 1

(μm)		
0 ± 3	0 ± 7.5	0 ± 3
0 ± 3	0 ± 7.5	0 ± 3
0 ± 3	0 ± 7.5	0 ± 3

The red and blue must be within the specification given right with respect to the green.

(μm)		
± 6	± 6	± 6
± 6	± 6	± 6
± 6	± 6	± 6

A difference between red and blue must be within the specification given right.

(μm)		
10	10	10
10	7	10
10	10	10

* Adjustment and measurement should be made at the points one inch inside the fluorescent screen.

7. Tighten DY screw.

Note: Torque $22 \pm 2 \text{ kg}\cdot\text{cm}$ ($2.2 \pm 0.2 \text{ Nm}$) auto degauss it.

8. For the up/down swing, swing the DY and insert a wedge so that the up and down pins are equal at the top and bottom. Adjust the H.TRP VR of DY so that the horizontal trapezoid is equal at the left and right. Insert the wedge firmly so that the DY does not shake.
9. Check the landing of each corner, and if it does not satisfy the specification, adjust the landing of four corners using "LCC LT", "LCC LB", "LCC RT" and "LCC RB". However, the register adjustment must be limited within the following range.


"LCC NS" 128 ± 15

"LCC LT", "LCC LB", "LCC RT", "LCC RB" 128 ± 40

After adjustment, save the service data.

10. Remove the sensor and wobbling coil.
11. Switch the signal to R.G.B., and check that each color is pure.
12. Check that the DY is not tilting, and fix the purity Mg with a white pen. Fix wedges with RTV.


Connect the communication cable of the computer to the connector located on the D board. Run the service software and then follow the instruction.

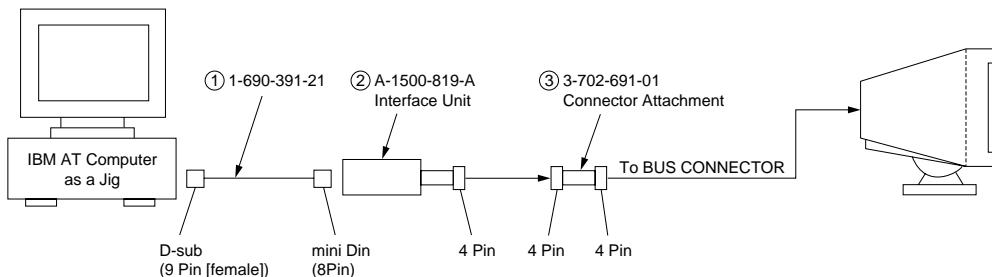


*The parts above (① ~ ③) are necessary for DAS adjustment.

• Convergence Rough Adjustment


- (1) Receive an image of the white crosshatch signals (white lines on black).
- (2) Place the protrusions of the 6-fold poles magnet attached to the CRT neck upon each other.
- (3) Make rough adjustment of the H and V direction convergence by using 4-fold poles magnet.

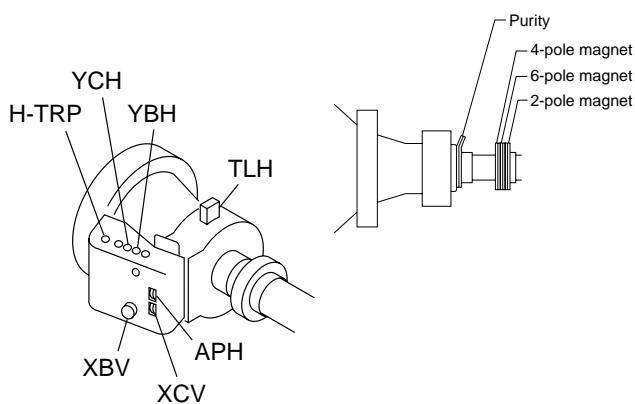

* Set so that the protruding parts of the 2 magnet rings agree with each other.

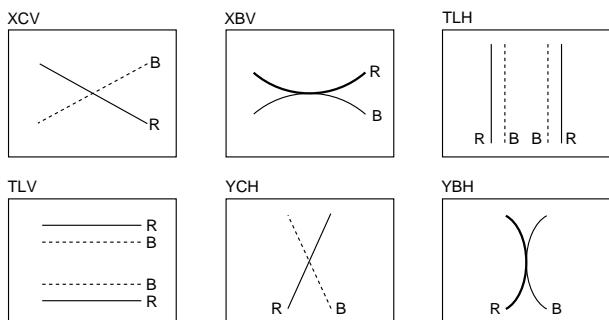


• Convergence Specification

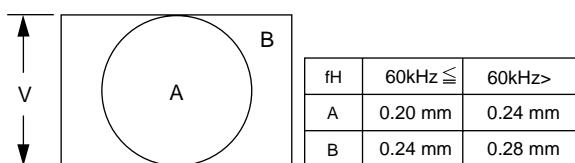

• White Balance Adjustment Specification

1. 9300 K
 $x = 0.283 \pm 0.005$
 $y = 0.298 \pm 0.005$
(All White)
2. 6500 K
 $x = 0.313 \pm 0.005$
 $y = 0.329 \pm 0.005$
(All White)
3. 5000 K
 $x = 0.346 \pm 0.005$
 $y = 0.359 \pm 0.005$
(All White)


• Vertical and Horizontal Position and Size Specification

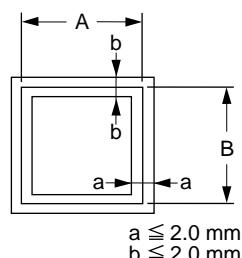

MODE	4 : 3	5 : 4
A	388	364
B	291	291



• Focus adjustment

Adjust the focus volume 1 and 2 for the optimum focus.

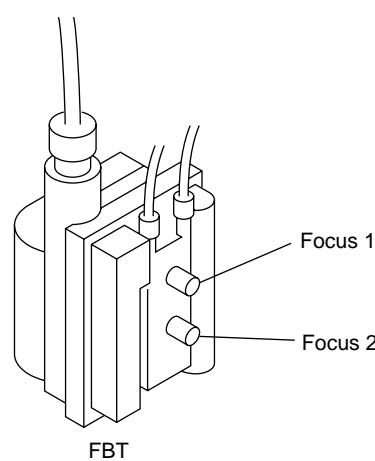



SECTION 5 DIAGRAMS

5-1. BLOCK DIAGRAMS

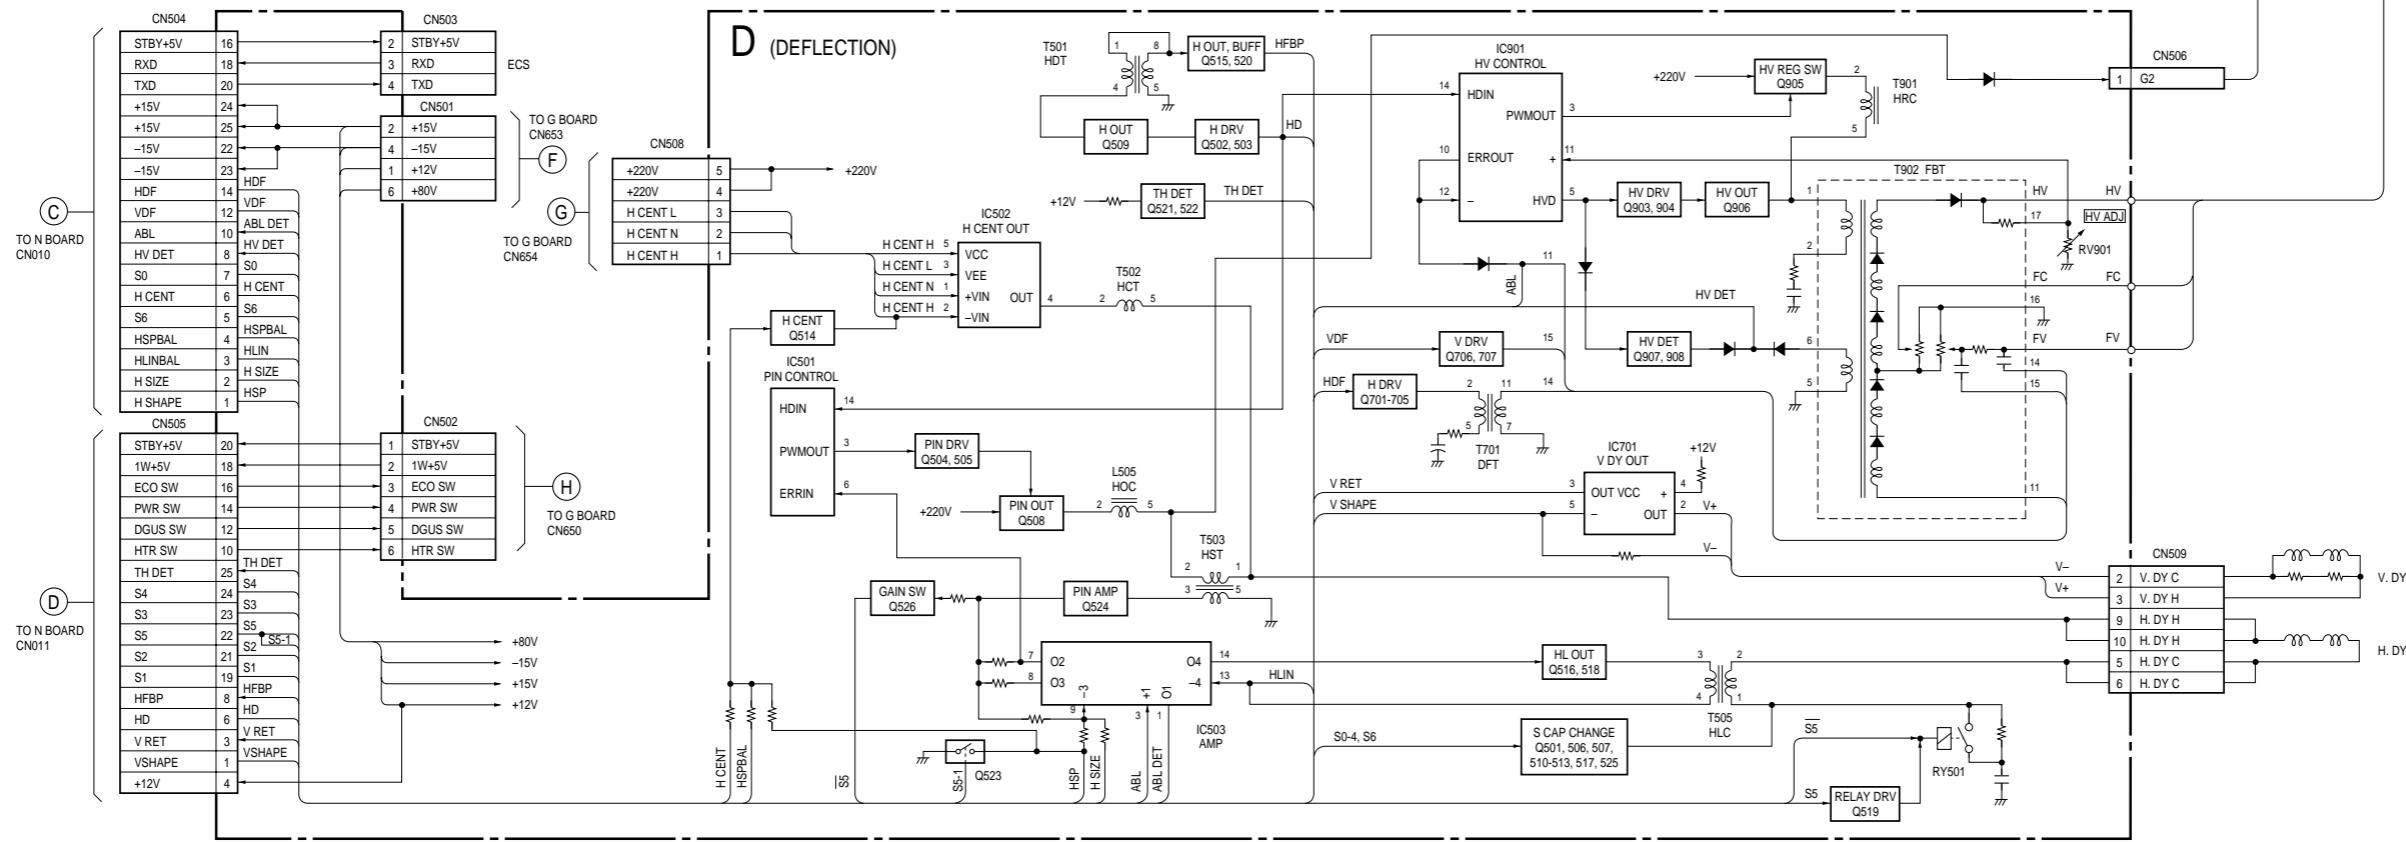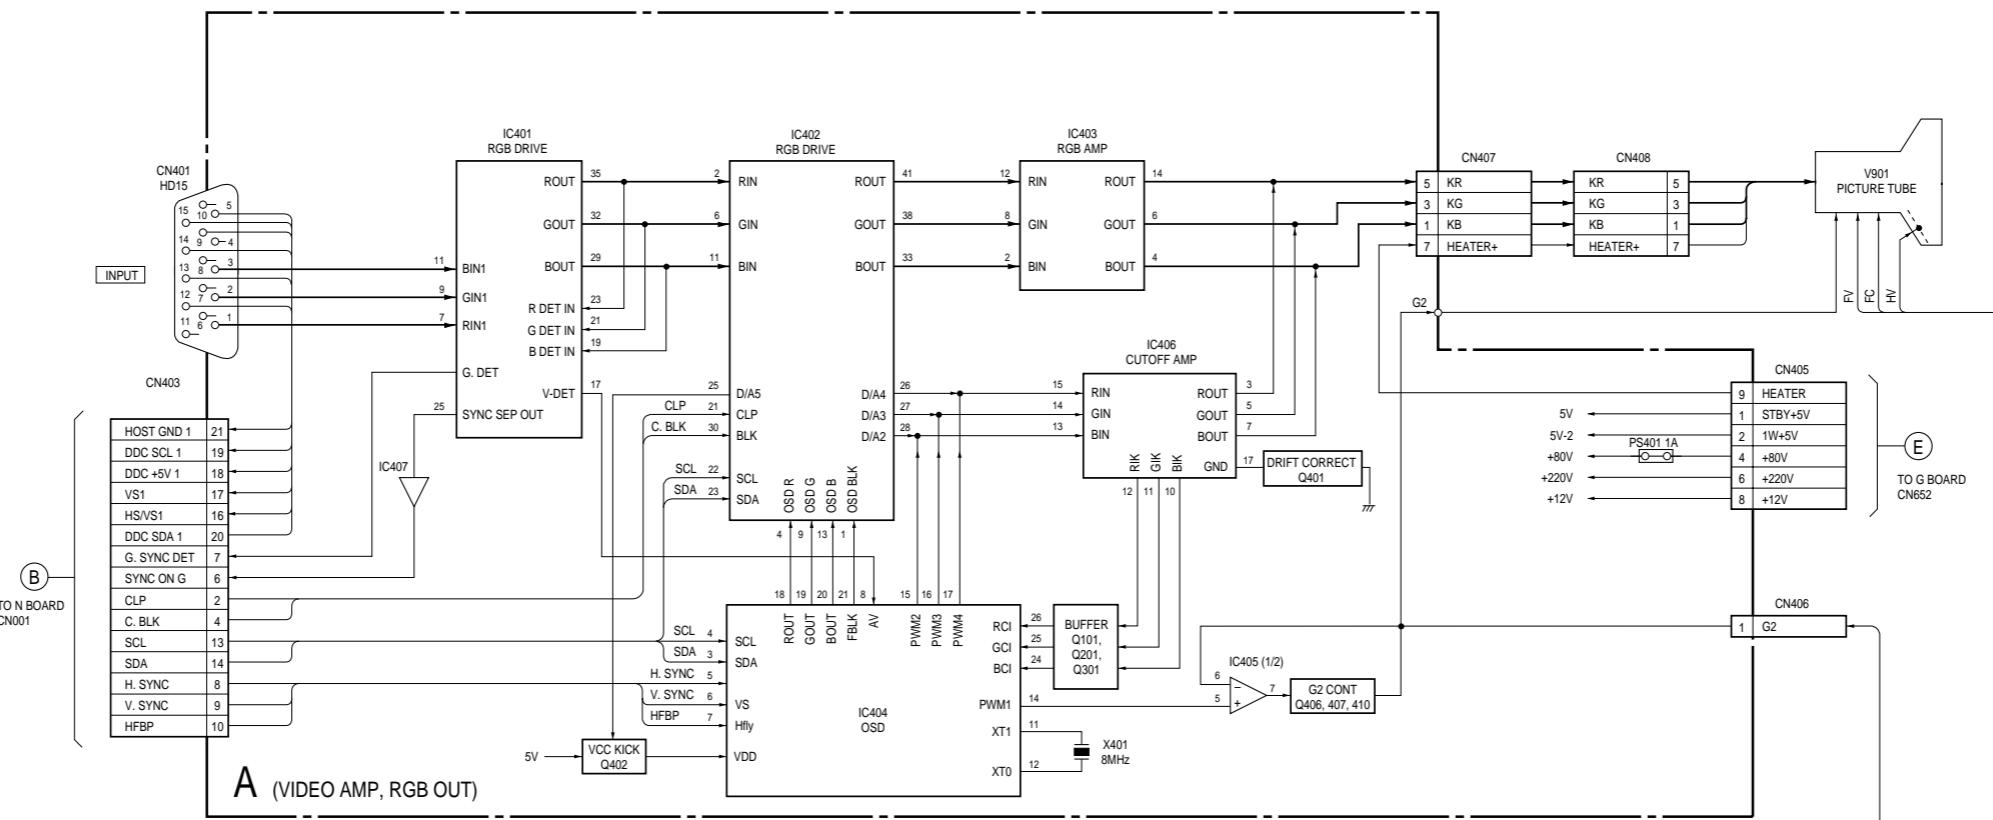


N (μ -COM, V.CONV, H. CONV,
LCC, GEO MAGNETIC SENSOR)

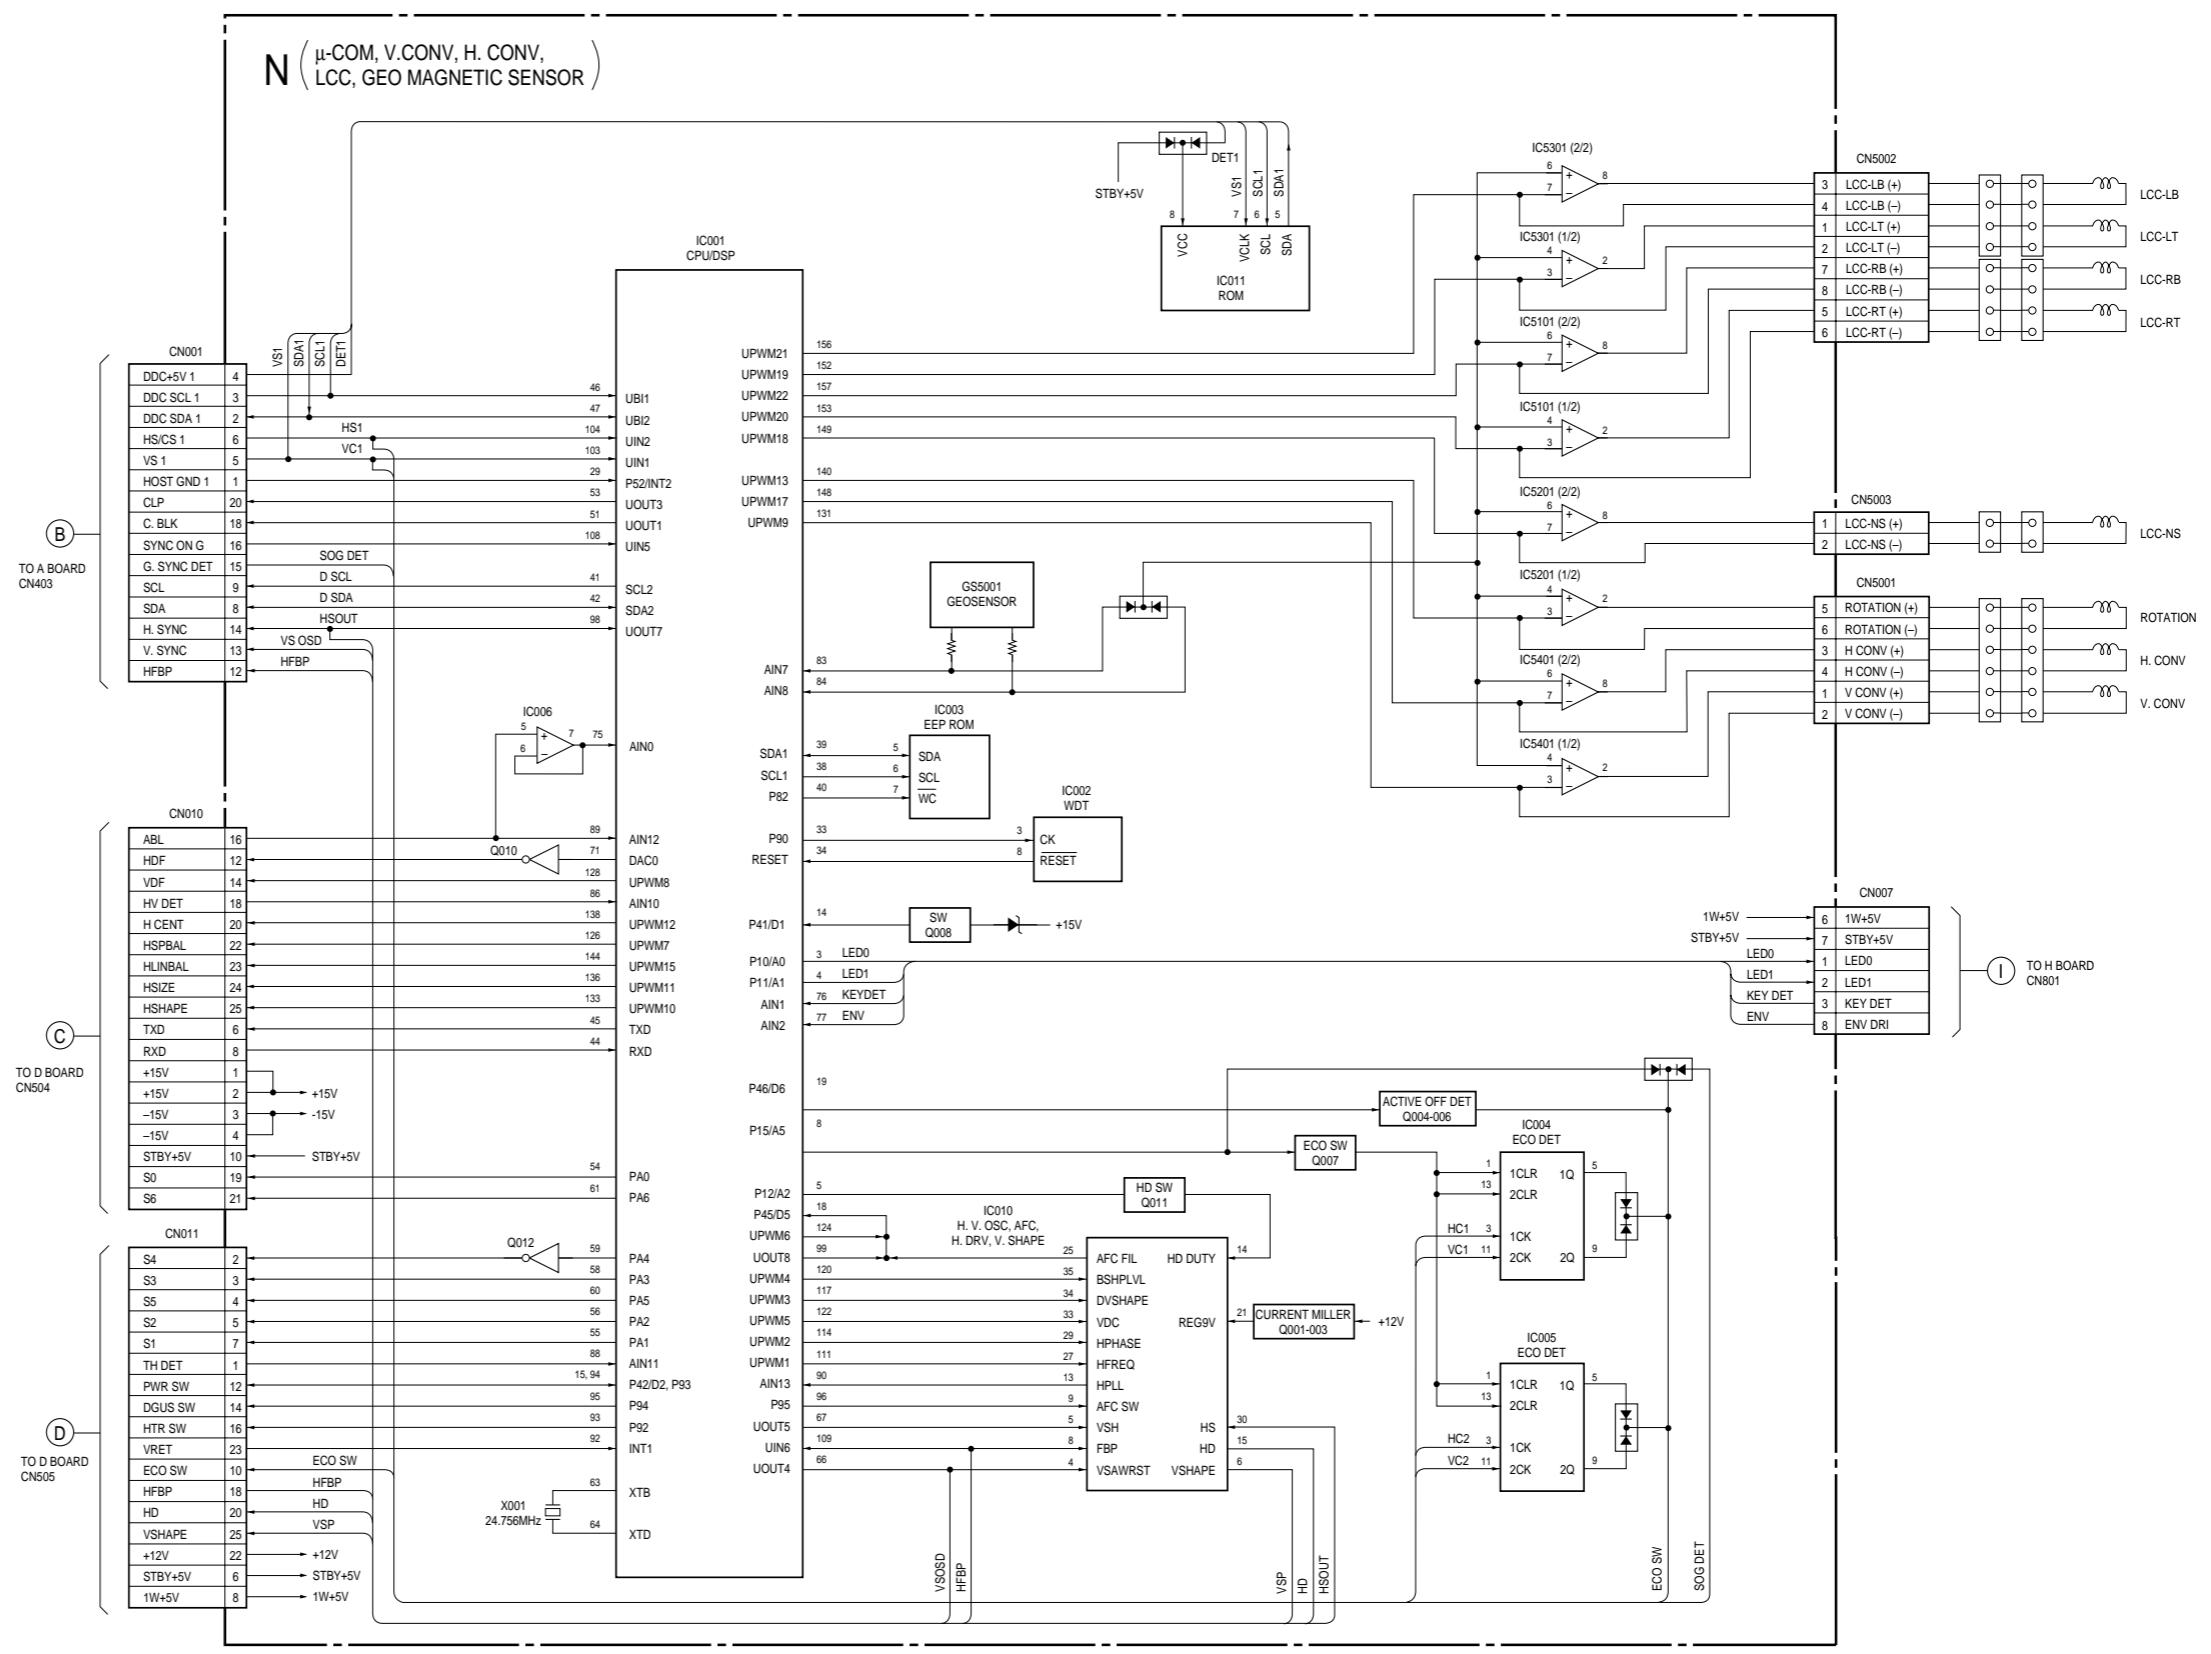


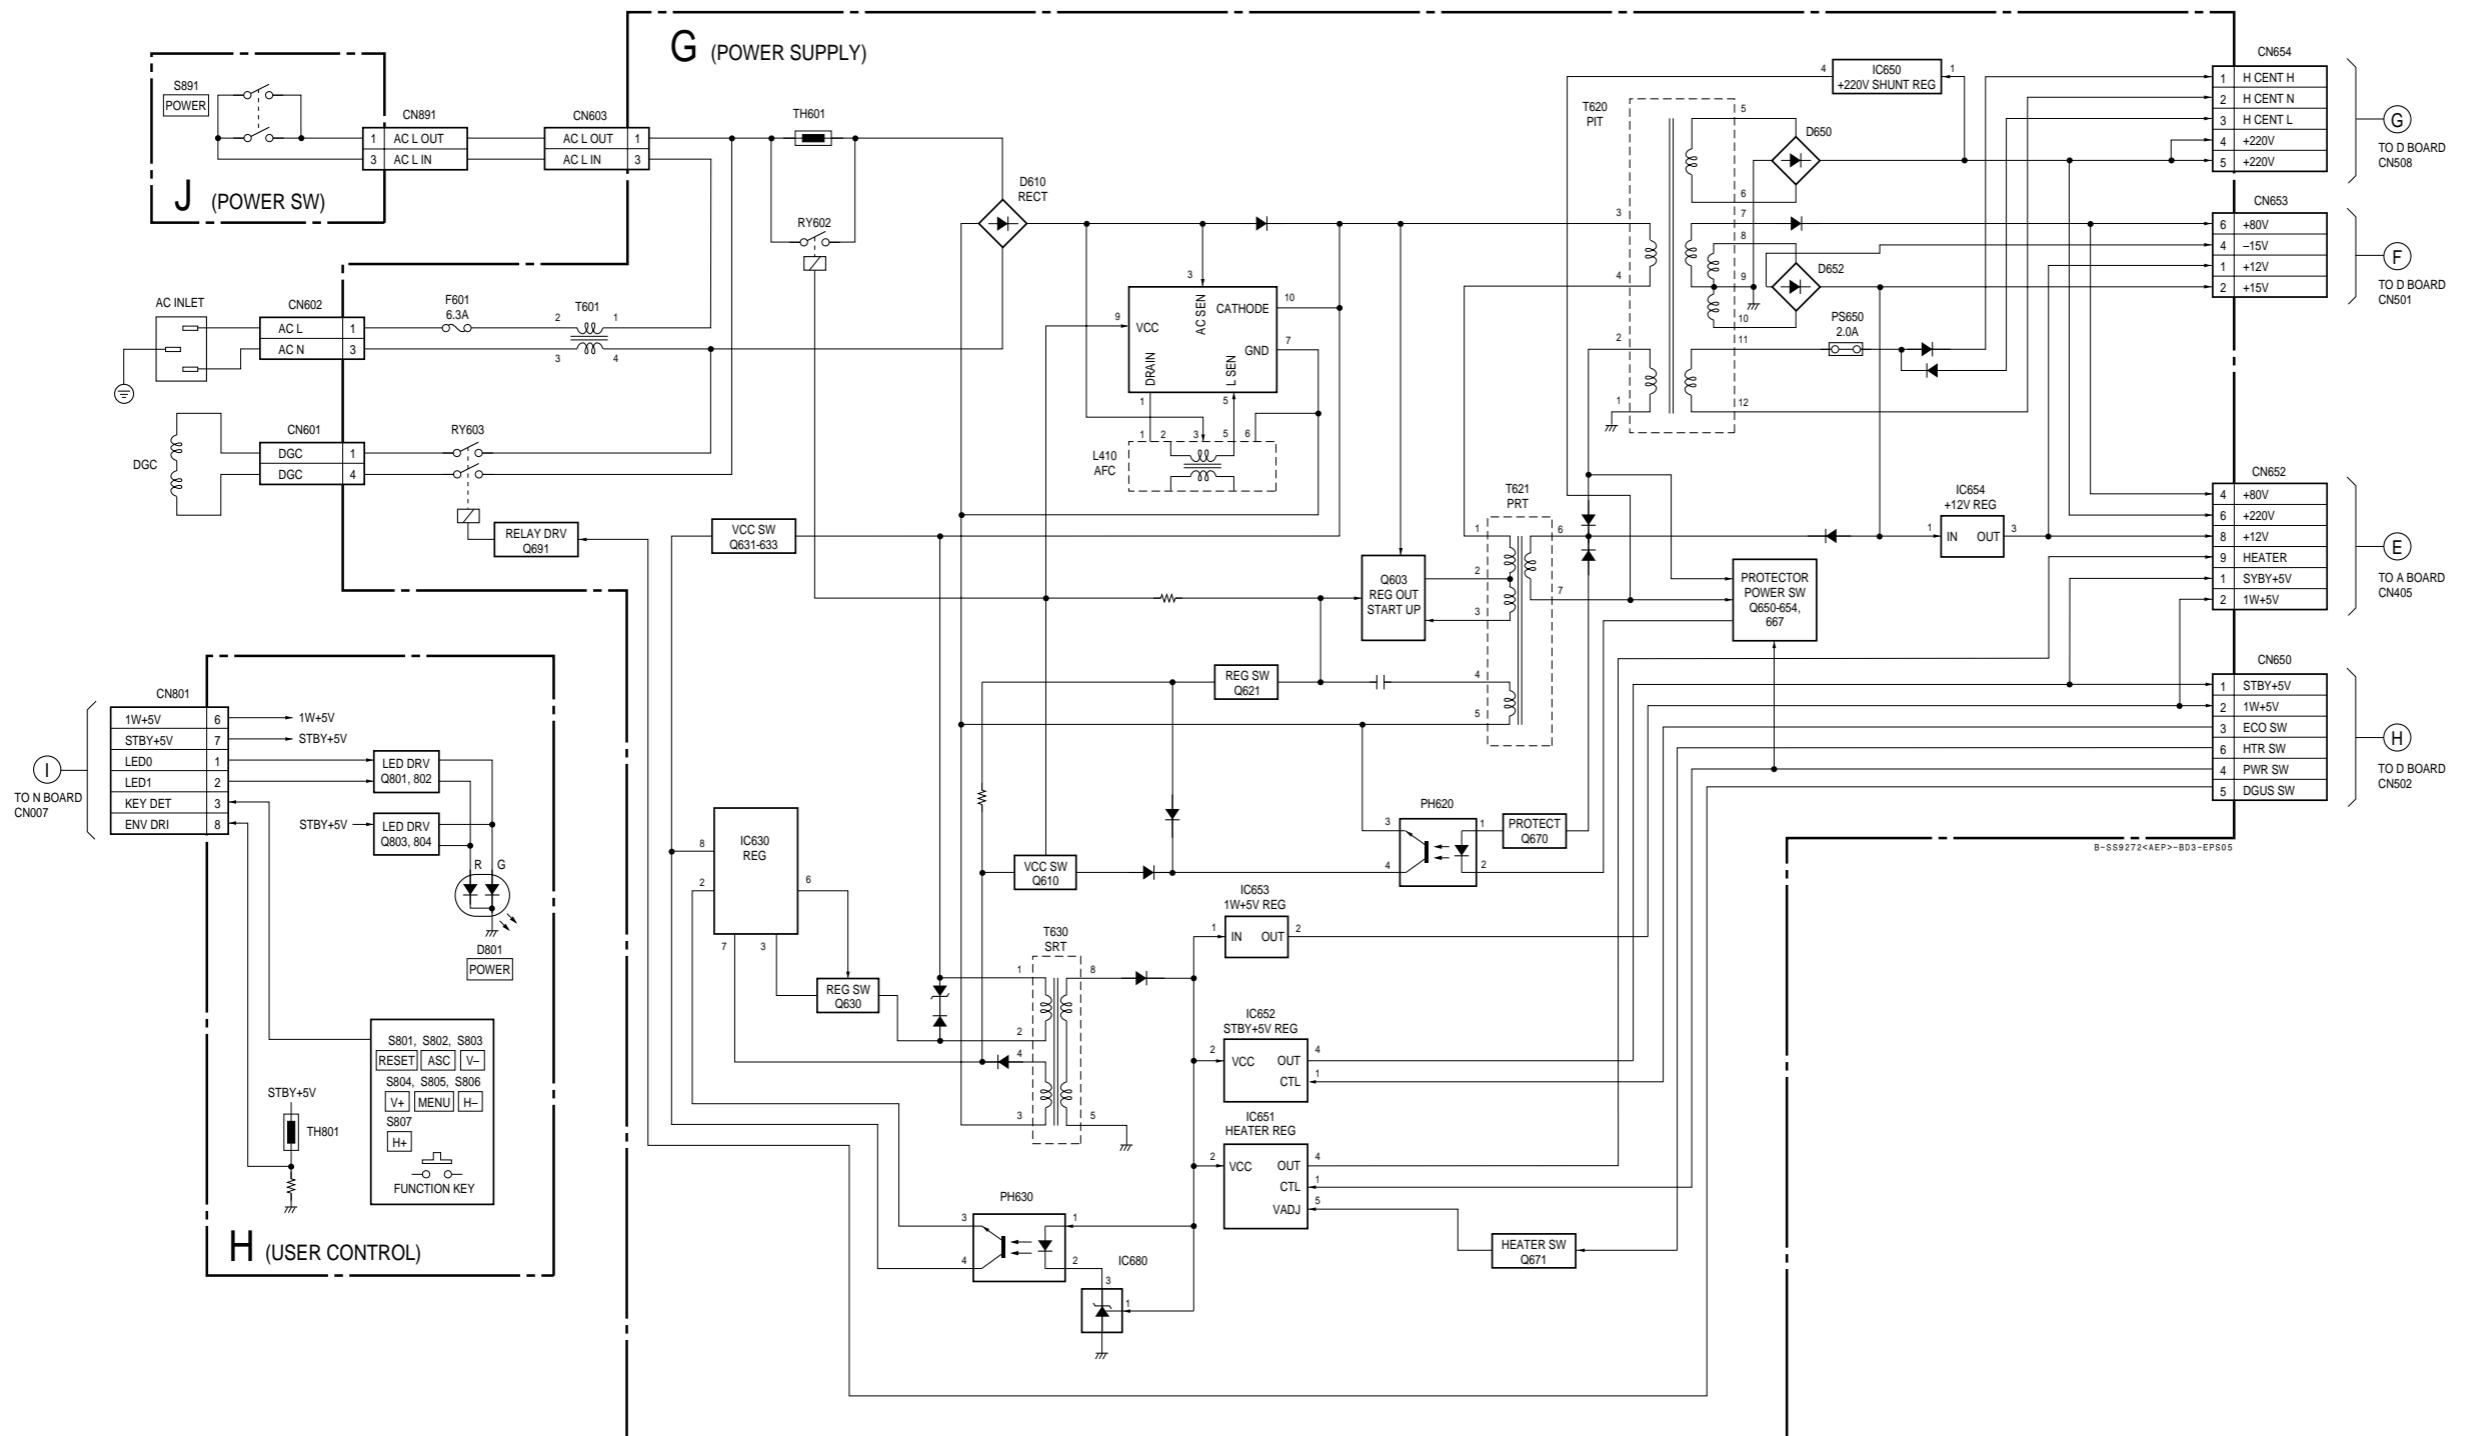

5-2. FRAME SCHEMATIC DIAGRAM

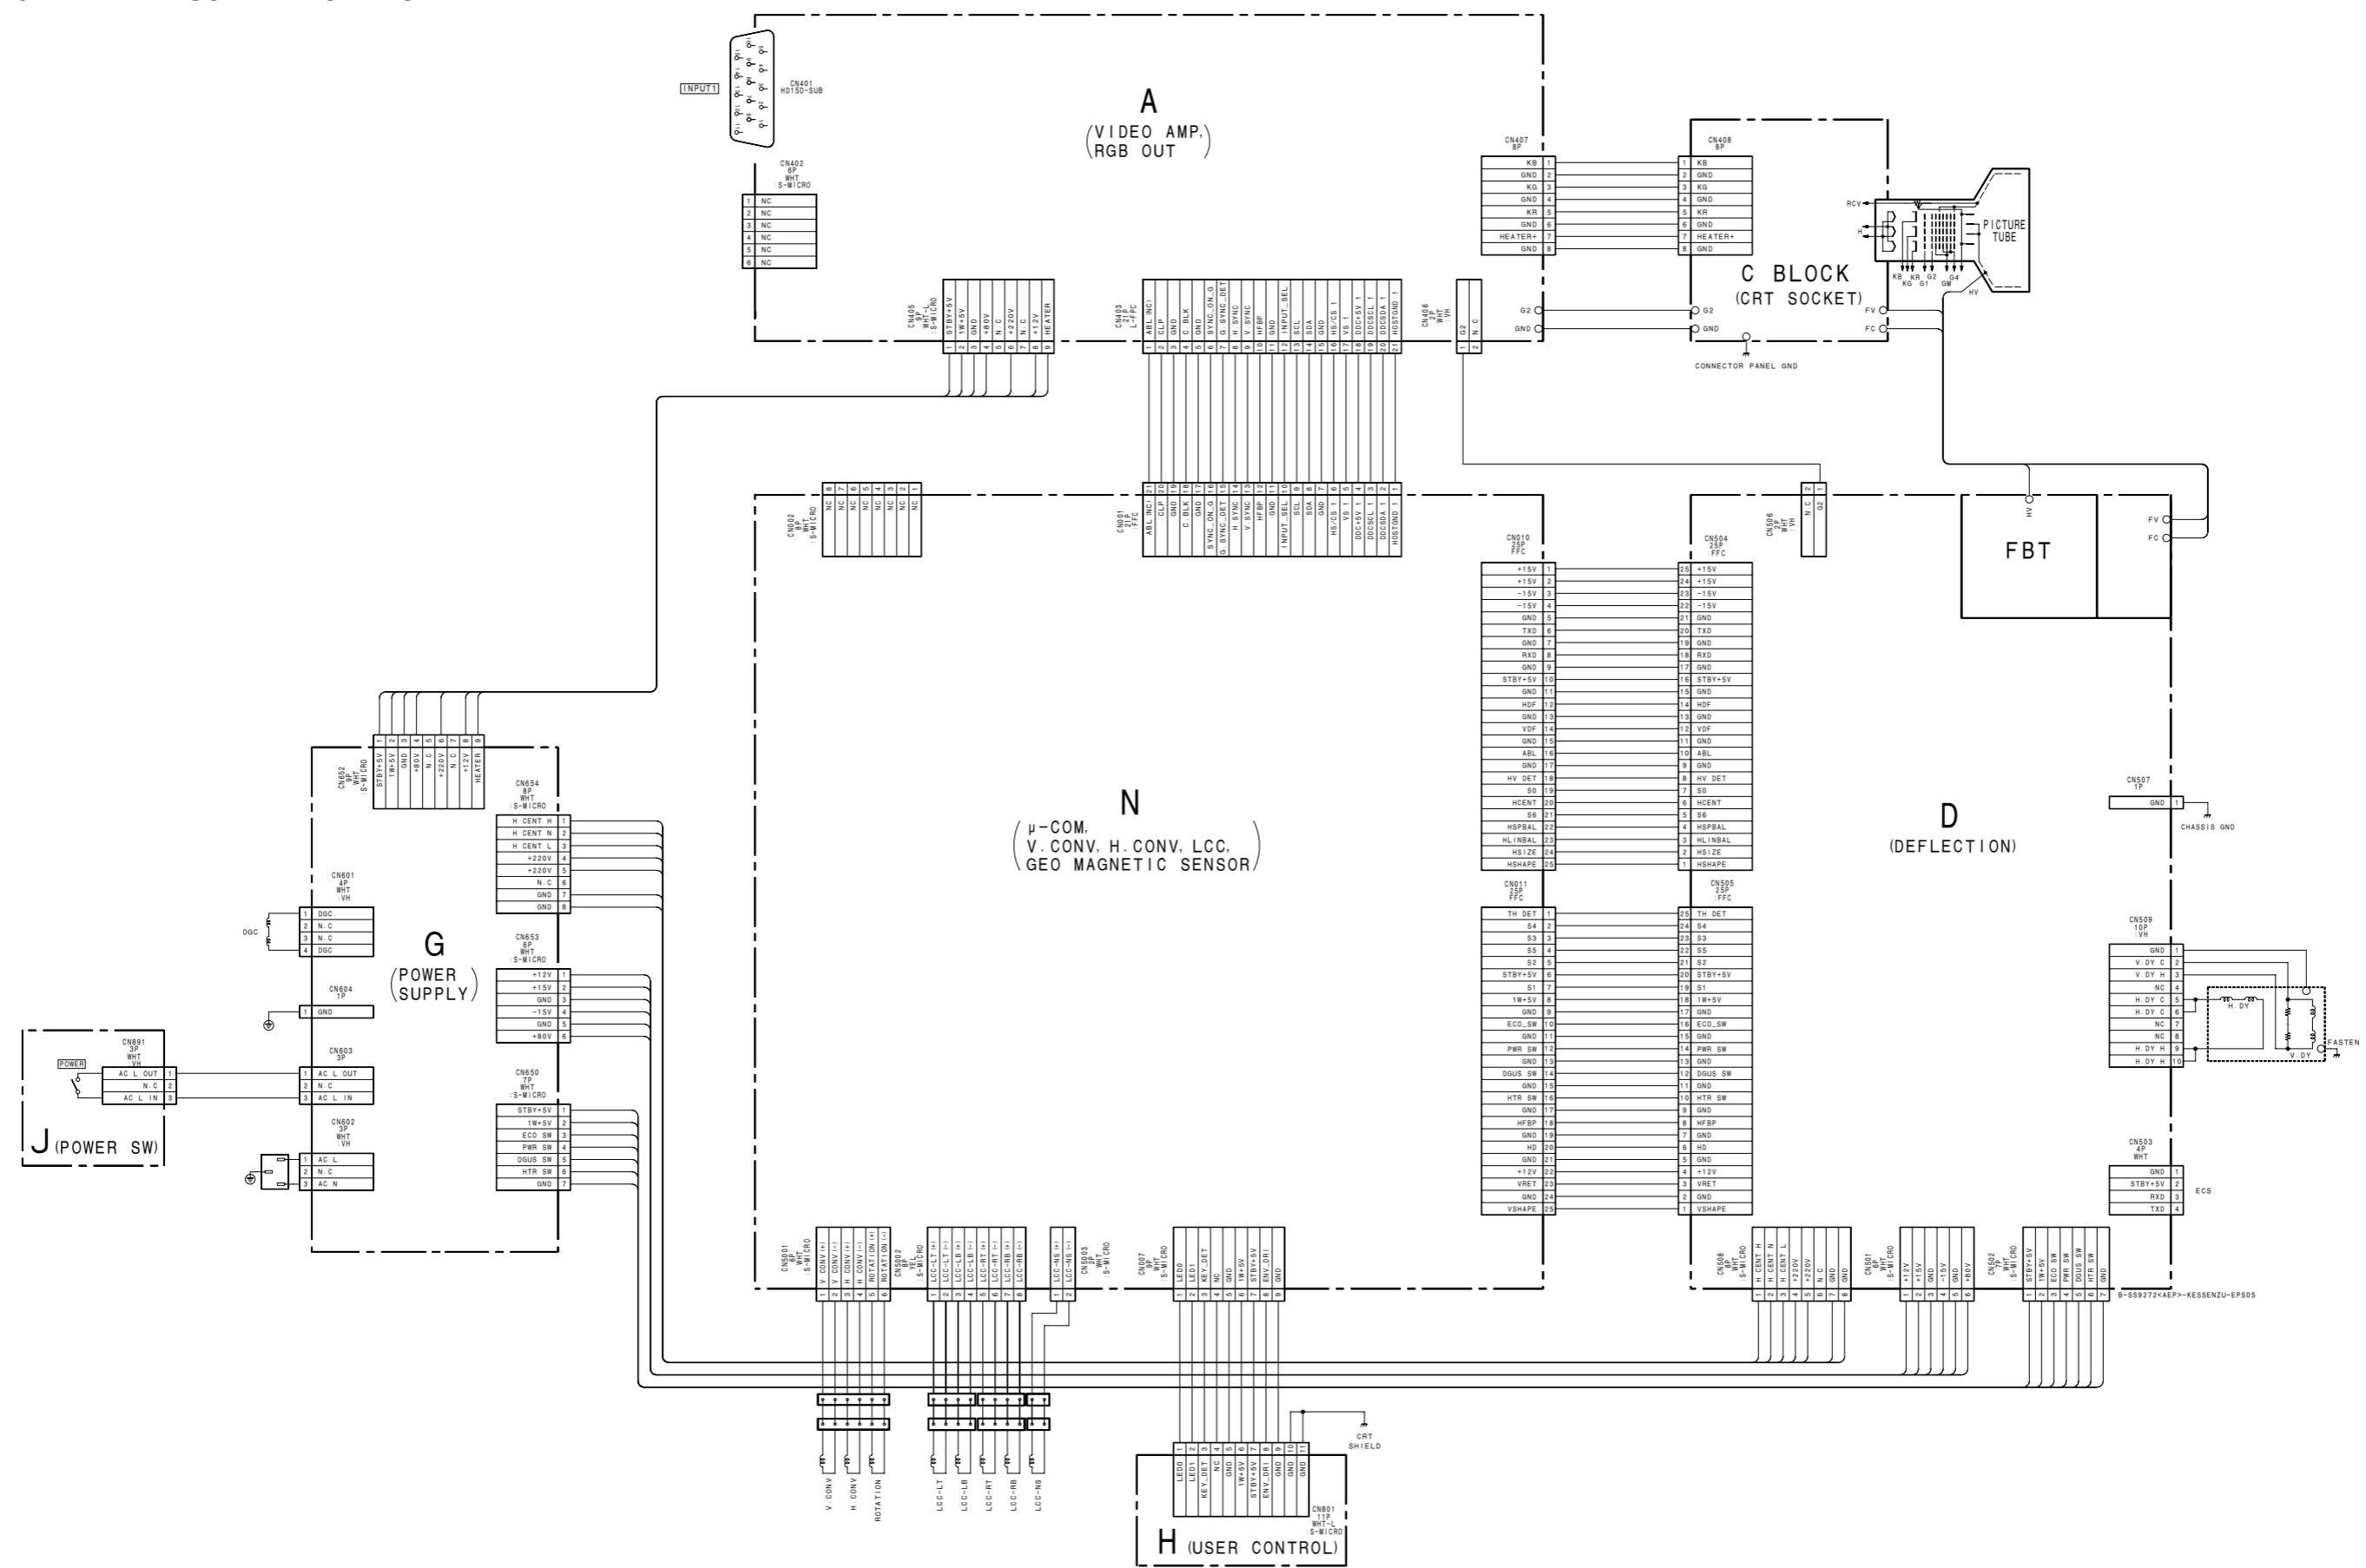

5-3. CIRCUIT BOARDS LOCATION

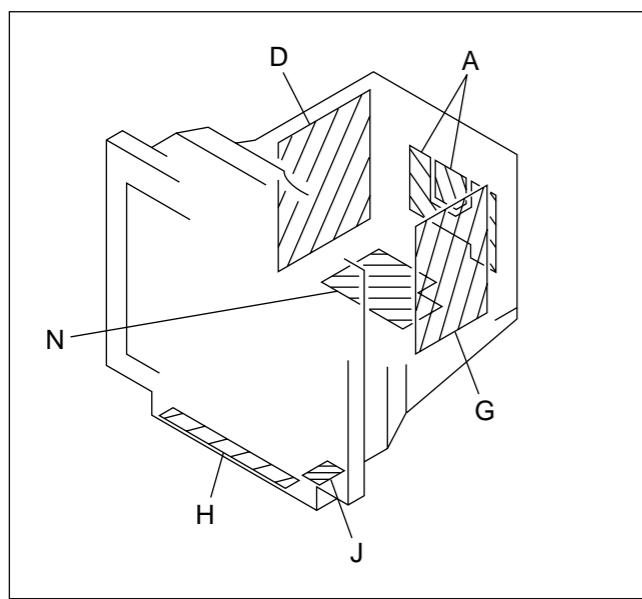

5-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS


Note:

- All capacitors are in μF unless otherwise noted. (pF : $\mu\mu\text{F}$) Capacitors without voltage indication are all 50 V.
 - Indication of resistance, which does not have one for rating electrical power, is as follows.
- | |
|---|
| Pitch: 5 mm |
| Rating electrical power 1/4 W (CHIP : 1/10 W) |
- All resistors are in ohms.
 - : nonflammable resistor.
 - : fusible resistor.
 - : internal component.
 - : panel designation, and adjustment for repair.
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 - : earth-ground.
 - : earth-chassis.
 - The components identified by in this basic schematic diagram have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
 - When replacing components identified by , make the necessary adjustments indicated. (See page 3-1)
 - When replacing the part in below table, be sure to perform the related adjustment.

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

- All voltages are in V.
- Readings are taken with a 10 M Ω digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
- : Can not be measured.
- Circle numbers are waveform references.
- : B + bus.
- : B - bus.
- Divided circuit diagram

One sheet of N board circuit diagram is divided into three sheets, each having the code N-Ⓐ to N-Ⓒ. For example, the destination **(ab1)** on the code N-Ⓐ sheet is connected to **(ab1)** on the N-Ⓑ sheet.

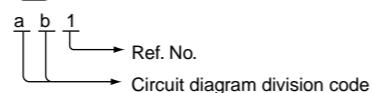

Part Replaced ()	
HV ADJ	RV901

Part Replaced ()	
HV Regulator Circuit Check	D Board C920, IC901, R923 R924, R929, R945, RV901, T902 (FBT) • Mounted D Board
HV Protector Circuit Check	D Board C922, C925, C926, D912, D914, D915, D921, Q907, Q908, R921, R922, R932, R937, R939, T902 (FBT) • Mounted D Board
Beam Current Protector Circuit Check	D Board C910, C921, C933, D901, D902, D913, IC503, IC901, R901, R920, R928, R930, R931, R940, R941, T902 (FBT) G Board IC652 • Mounted G Board N Board IC001, R031, R032 • Mounted N Board


Terminal name of semiconductors in silk screen printed circuit (*)

Device	Printed symbol	Terminal name	Circuit
① Transistor		Collector Base Emitter	
② Transistor		Collector Base Emitter	
③ Diode		Cathode Anode	
④ Diode		Cathode Anode (NC)	
⑤ Diode		Cathode Anode (NC)	
⑥ Diode		Common Anode Cathode	
⑦ Diode		Common Anode Cathode	
⑧ Diode		Common Anode Anode	
⑨ Diode		Common Anode Anode	
⑩ Diode		Common Cathode Cathode	
⑪ Diode		Common Cathode Cathode	
⑫ Diode		Anode Anode Cathode Anode	
⑬ Transistor (FET)		Drain Source Gate	
⑭ Transistor (FET)		Drain Source Gate	
⑮ Transistor (FET)		Source Drain Gate	
⑯ Transistor		Emitter Collector Base	
-			

(Chip semiconductors that are not actually used are included.)

Ver.1.6


(1) Schematic Diagram of A Board

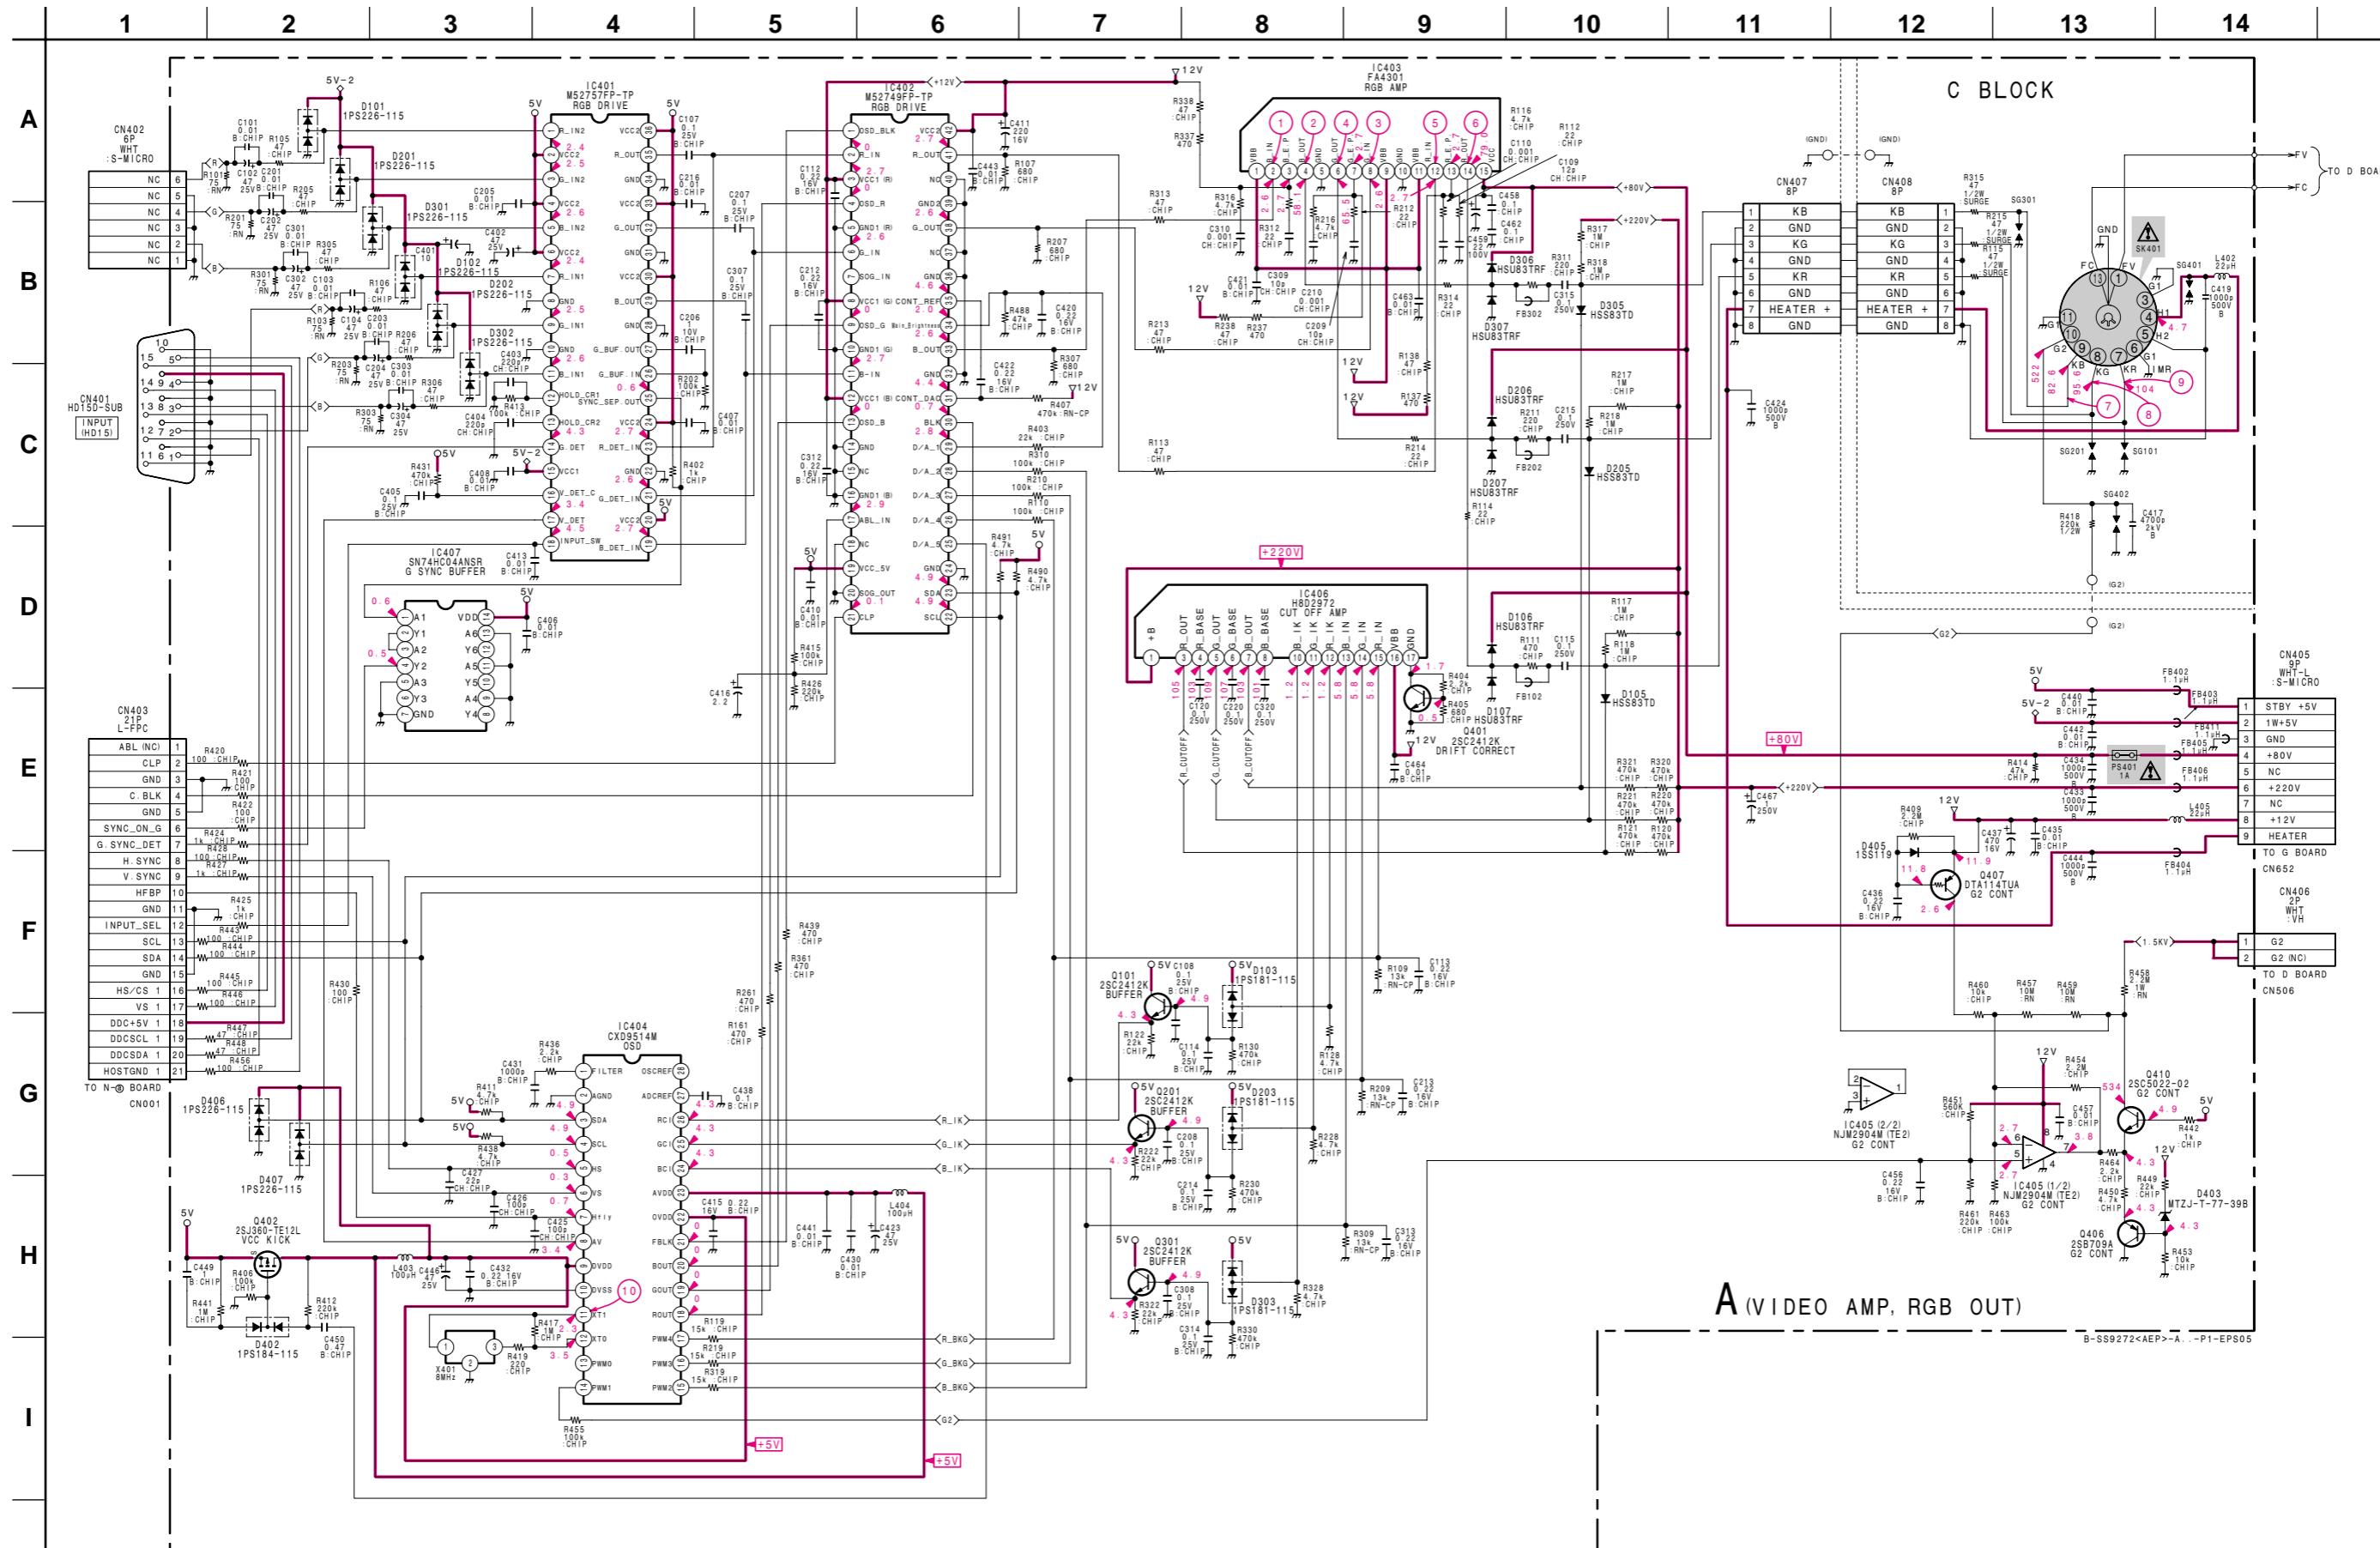


Schematic diagram

A board →

• A BOARD IC401 M52757FP


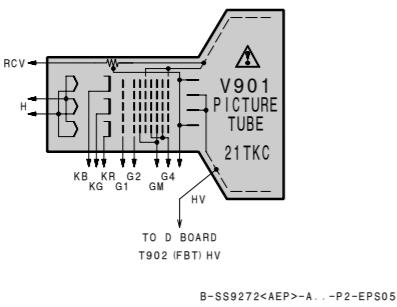


B-SS9272<AEPI>-A...-P2-EPS05

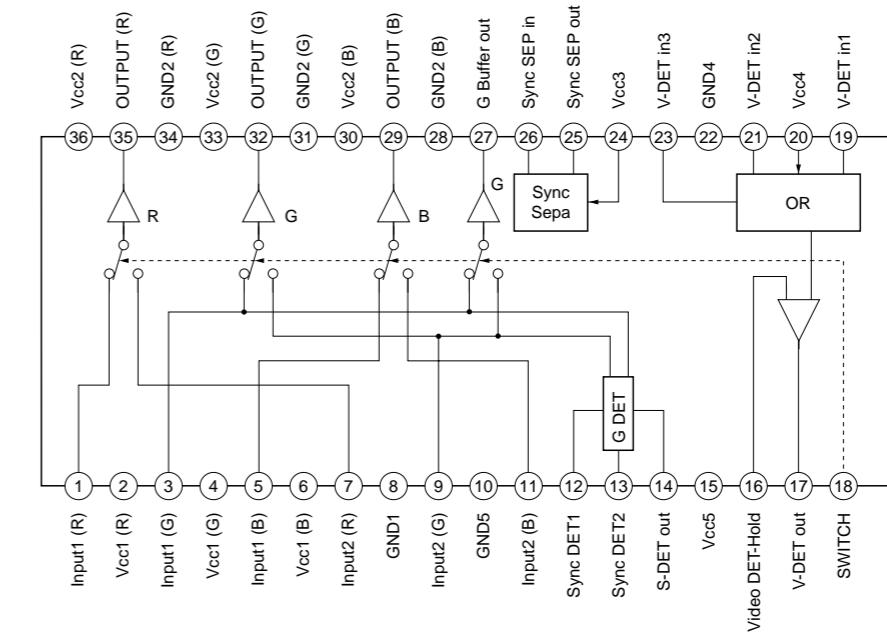


• A BOARD IC402 M52749FP

• A BOARD WAVEFORMS

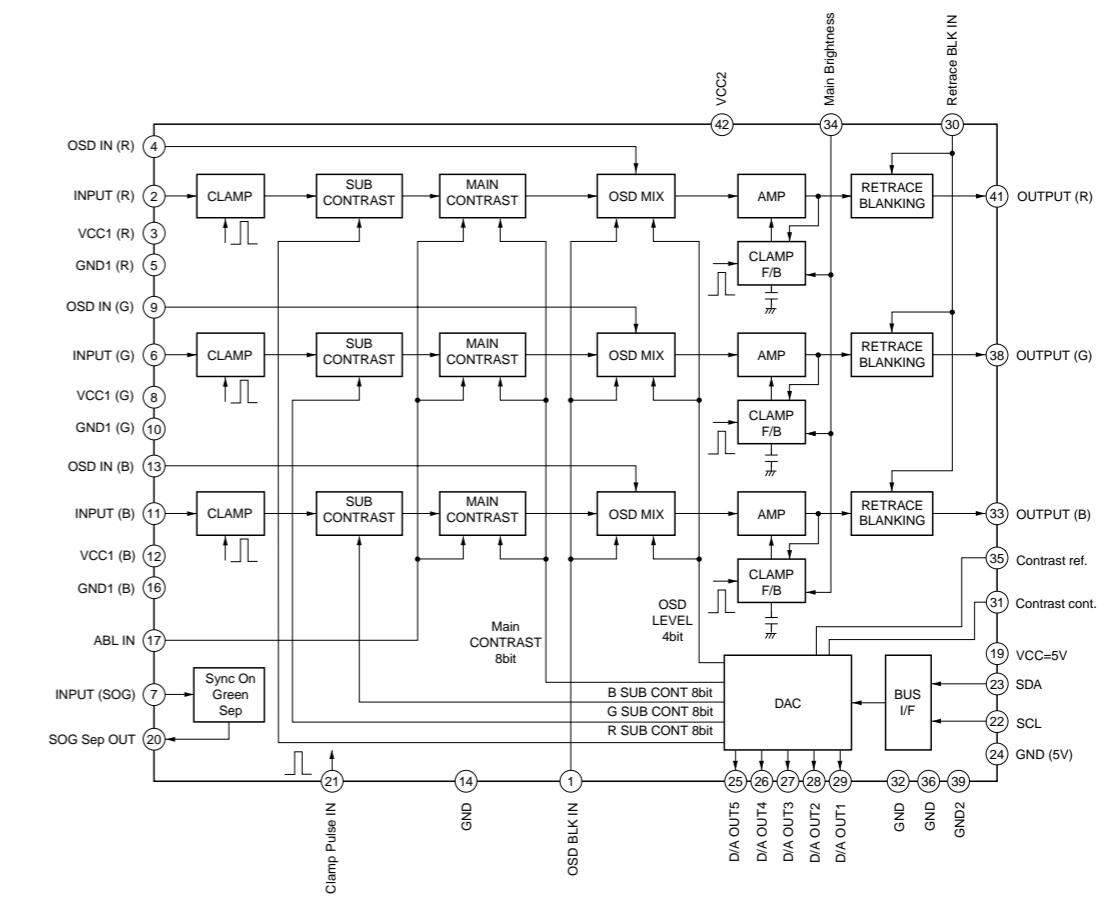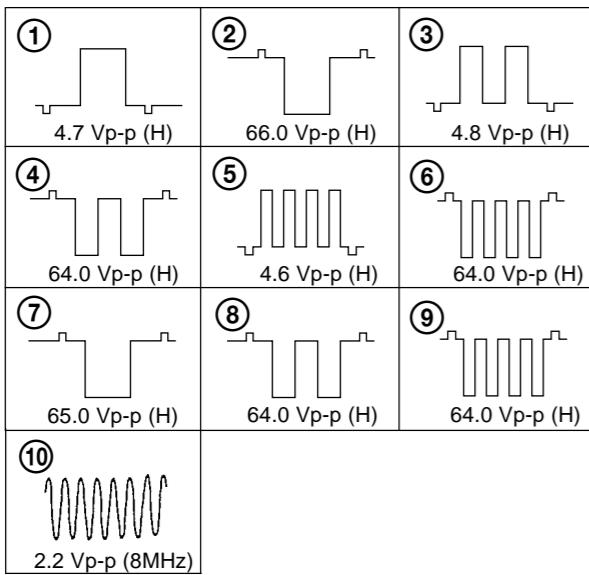

A [VIDEO AMP
RGB OUT]

— A BOARD (Conductor Side) —

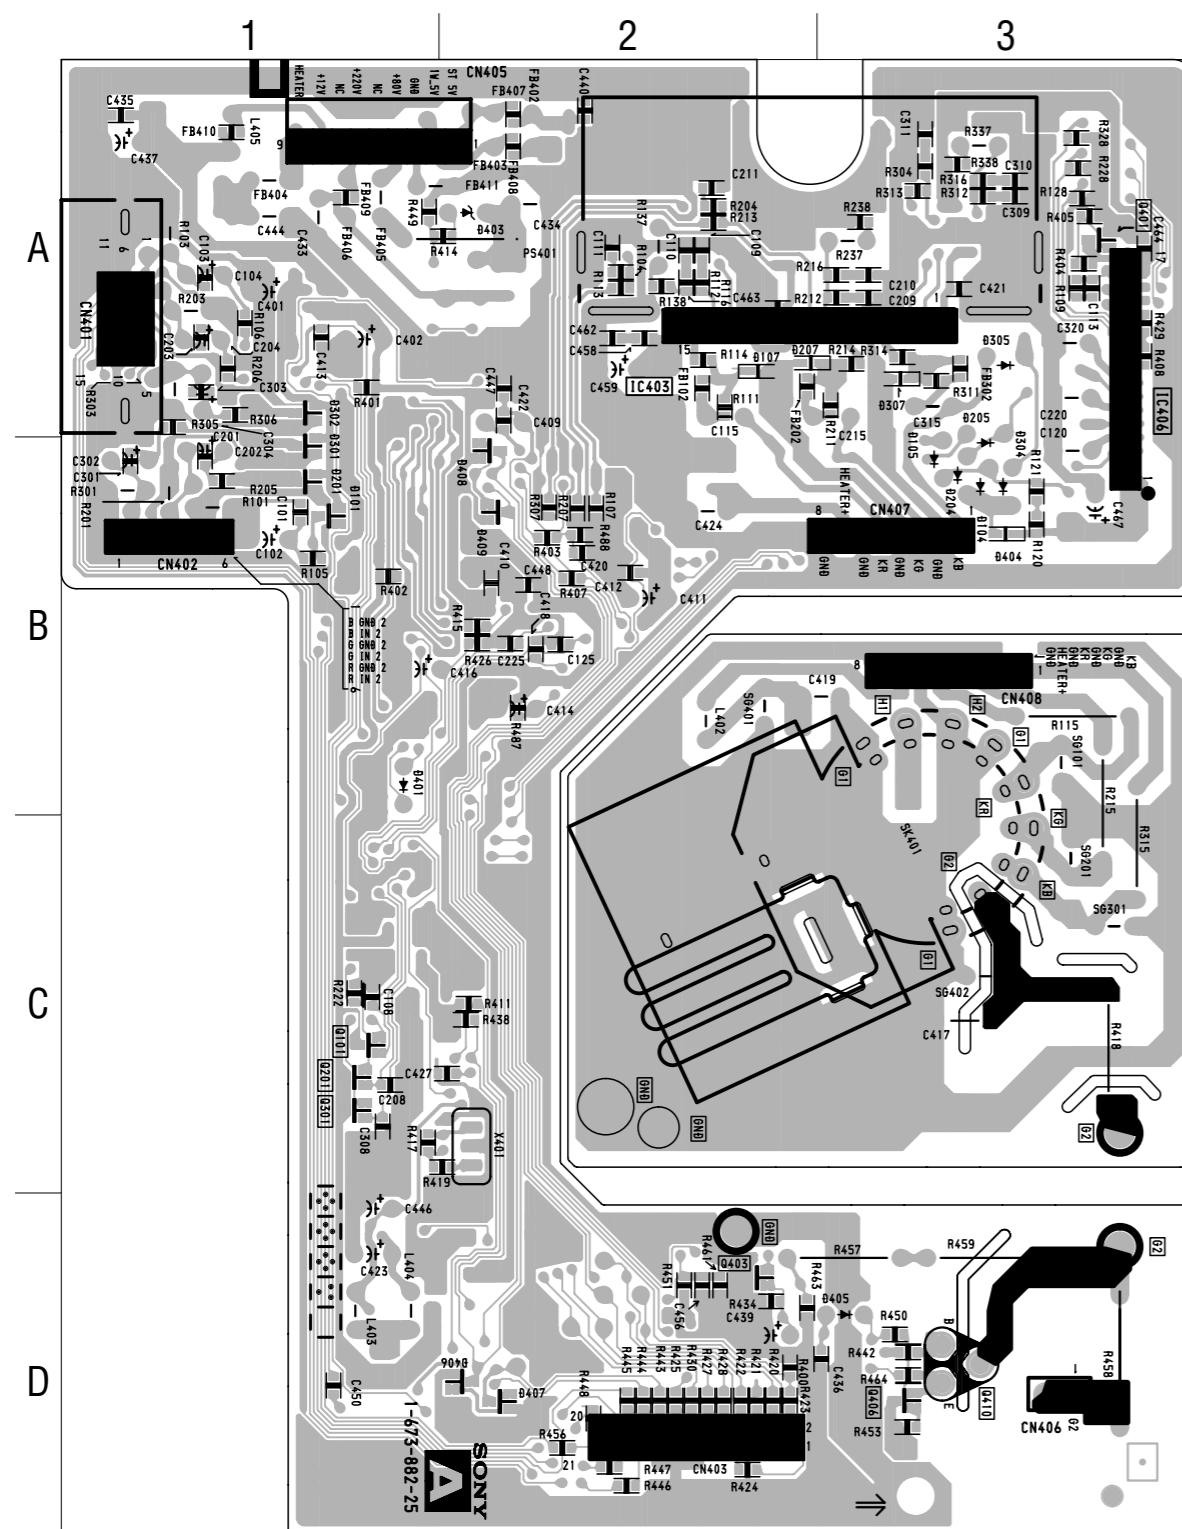

— A BOARD
SEMICONDUCTOR
LOCATION

IC	(Conductor Side)	(Component Side)
IC401	B-3	
IC402	B-2	
IC403	A-2	
IC404	C-3	
IC405	D-2	
IC406	A-1	
IC407	D-2	


TRANSISTOR	(Conductor Side)	(Component Side)
Q101	C-1	①
Q201	C-1	①
Q301	C-1	①
Q401	A-3	①
Q402	D-3	⑤
Q406	D-3	①
Q407	D-2	②
Q410	D-3	-

DIODE	(Conductor Side)	(Component Side)
D101	B-1	⑥
D102	A-3	⑦
D103	A-1	⑪
D105	B-1	-
D106	A-2	③
D107	A-2	③
D201	B-1	⑥
D202	A-3	⑦
D203	A-1	⑪
D205	B-3	-
D206	A-1	③
D207	A-2	③
D301	B-1	⑥
D302	A-1	⑥
D303	A-3	⑪
D305	A-3	⑪
D306	A-1	③
D307	A-3	③
D402	A-2	③
D403	A-2	②
D405	D-3	①
D406	D-2	⑥
D407	D-2	⑥

CRYSTAL	(Conductor Side)	(Component Side)
X401	C-2	C-2

*: Refer to Terminal name of
semiconductors in silk screen
printed circuit (see page 5-10)

— A BOARD (Component Side) —

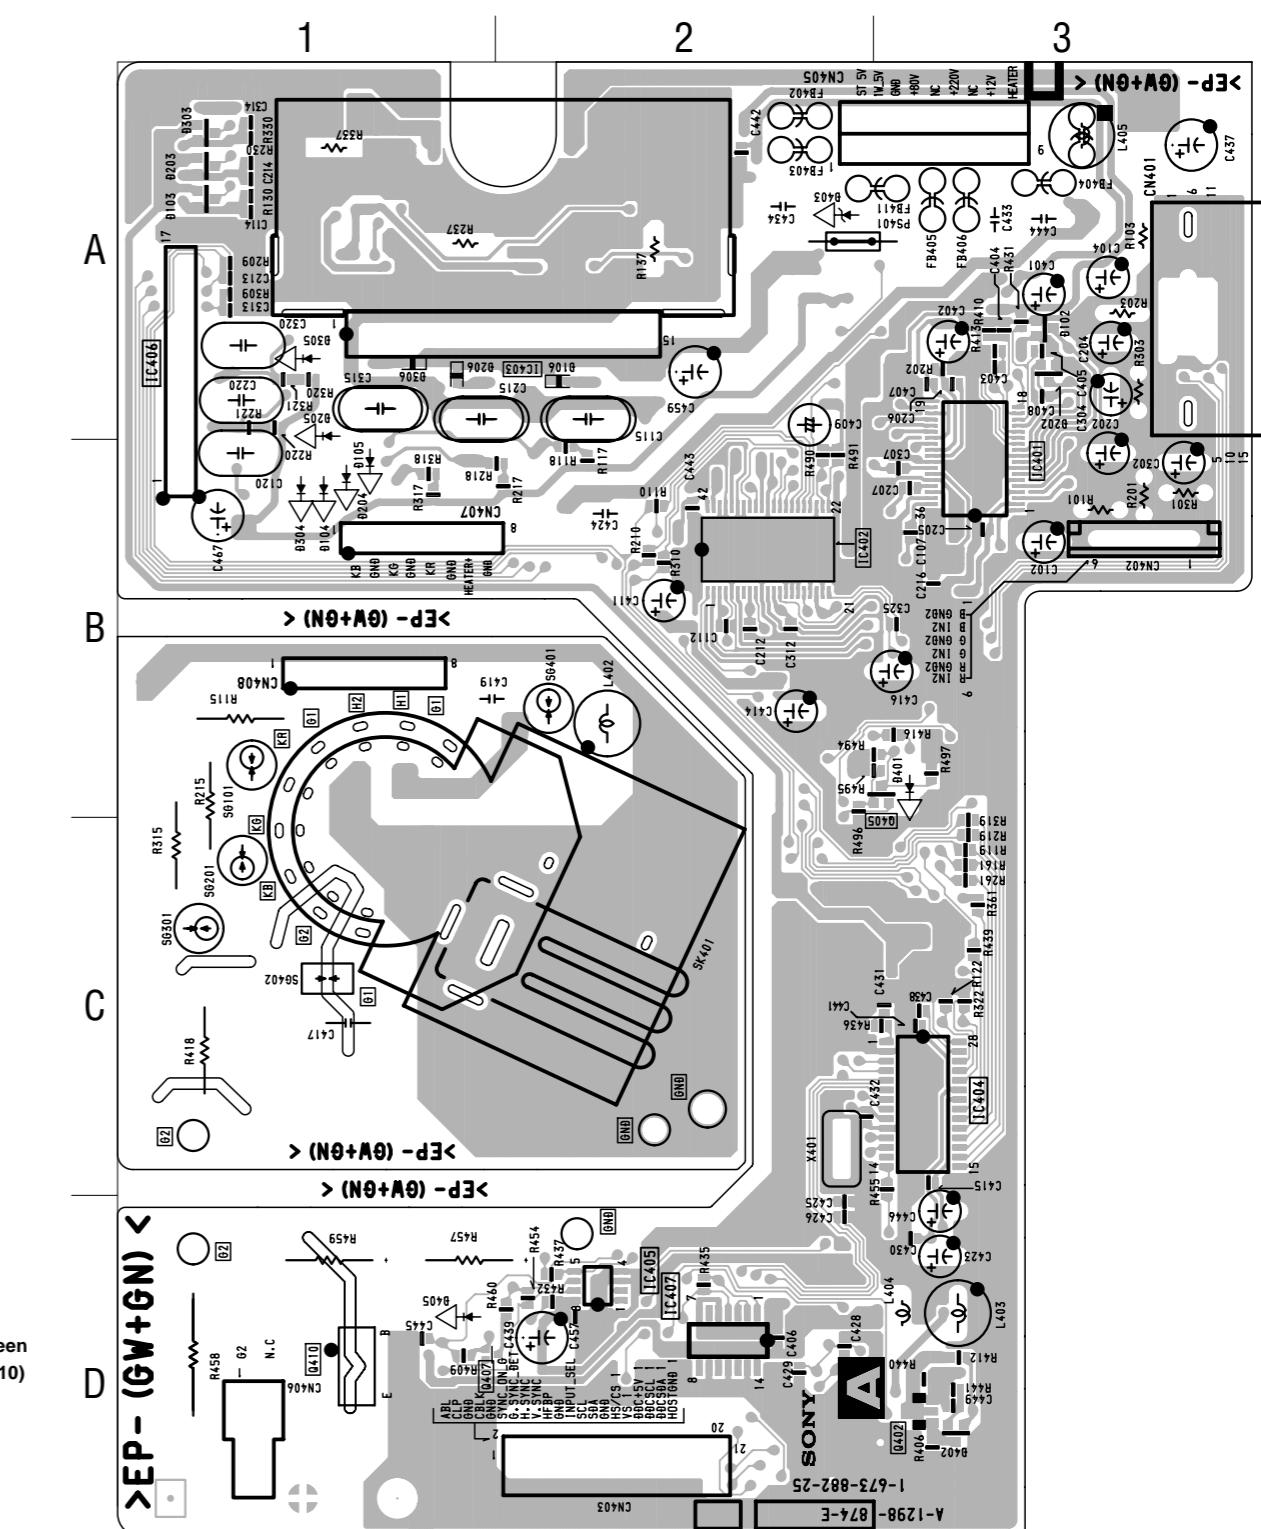


Schematic diagram
← **A** board

NOTE:


The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

(2) Schematic Diagrams of H, J Boards


H [USER CONTROL] **J** [POWER SW]

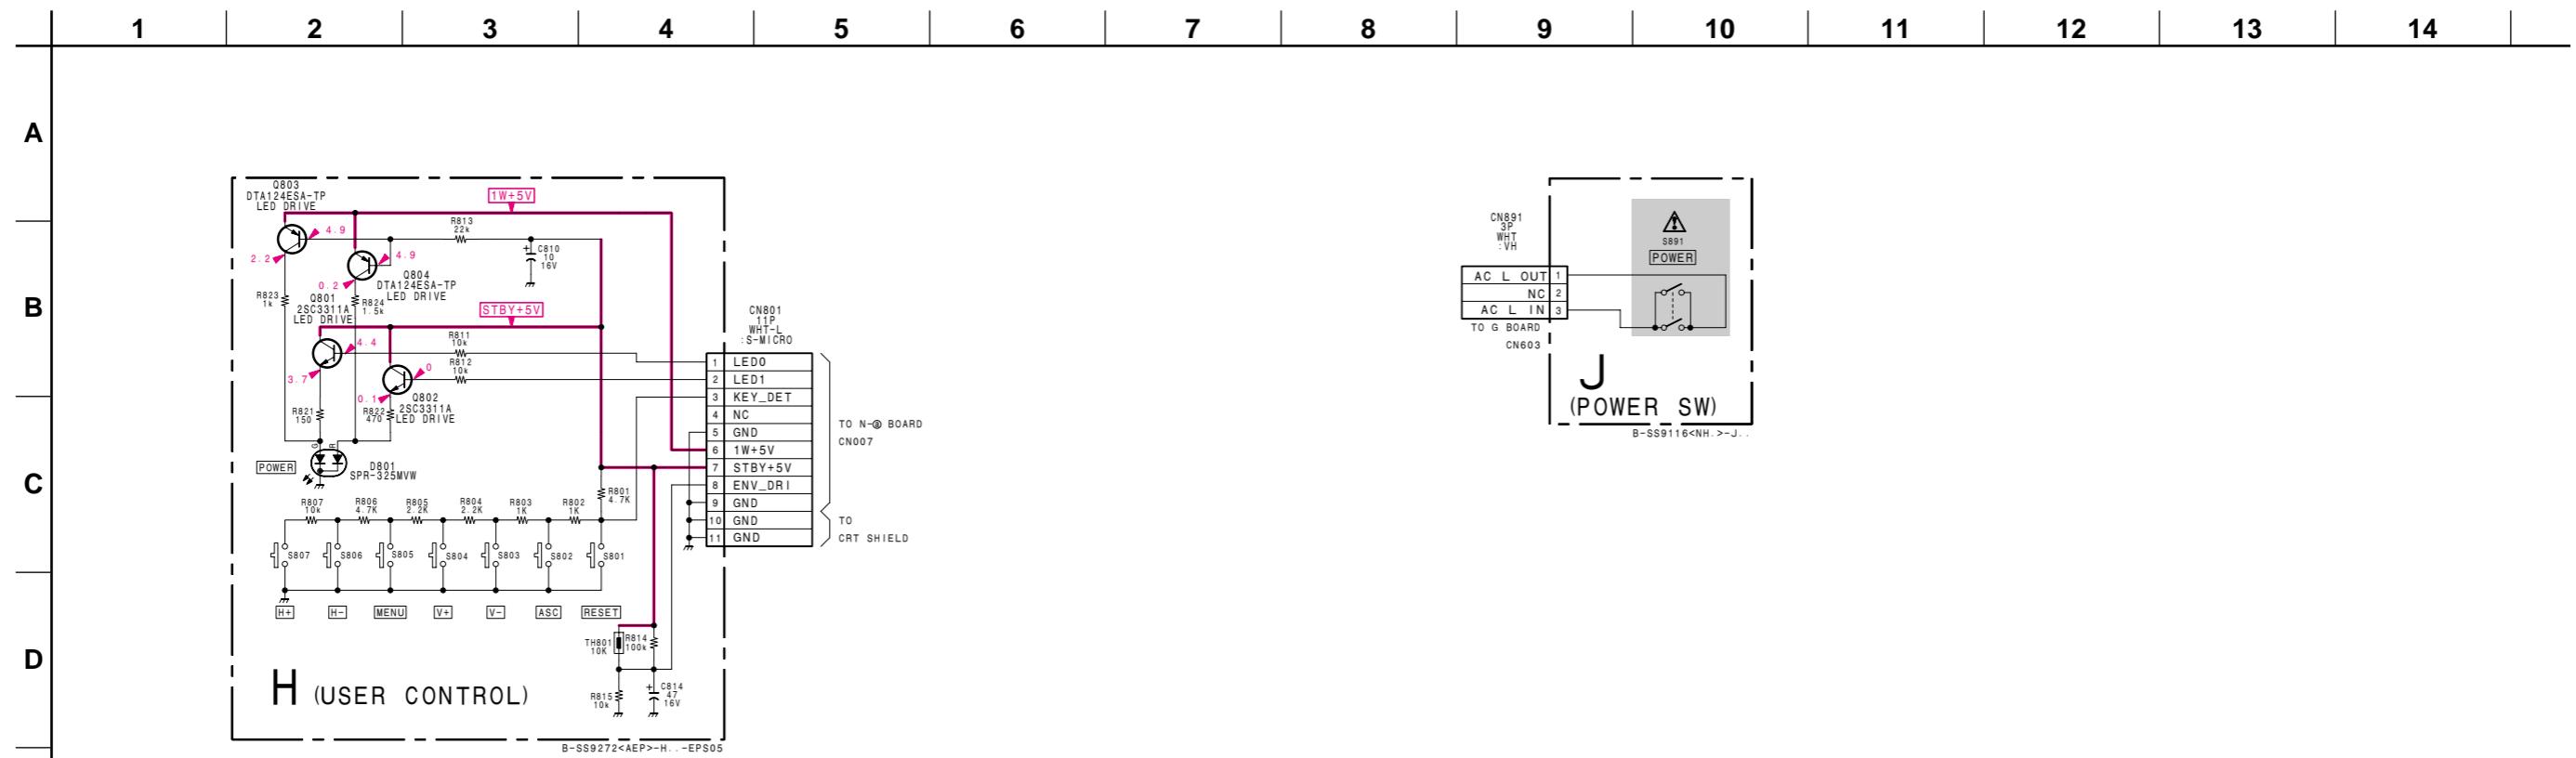


— H BOARD —

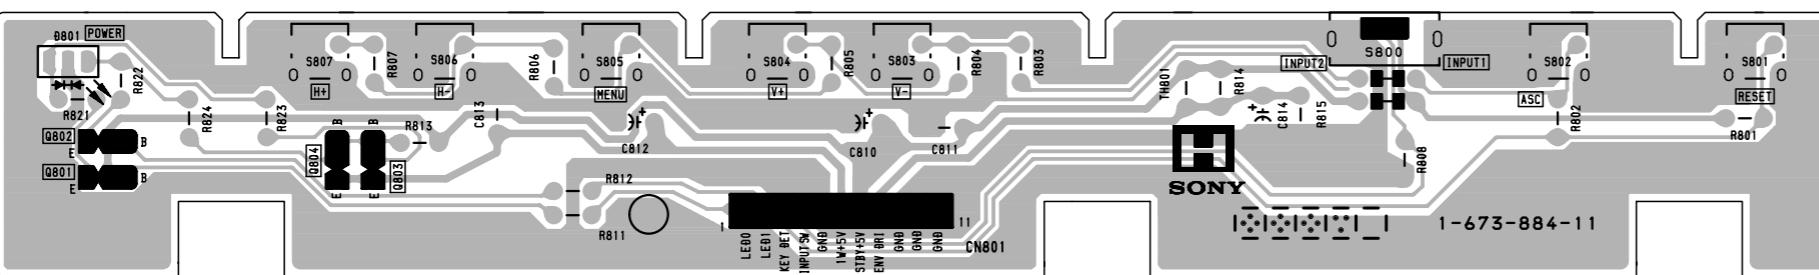

— J BOARD —

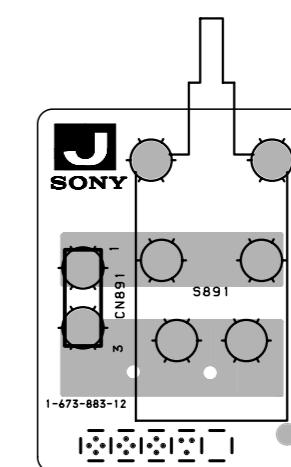

(3) Schematic Diagram of D Board

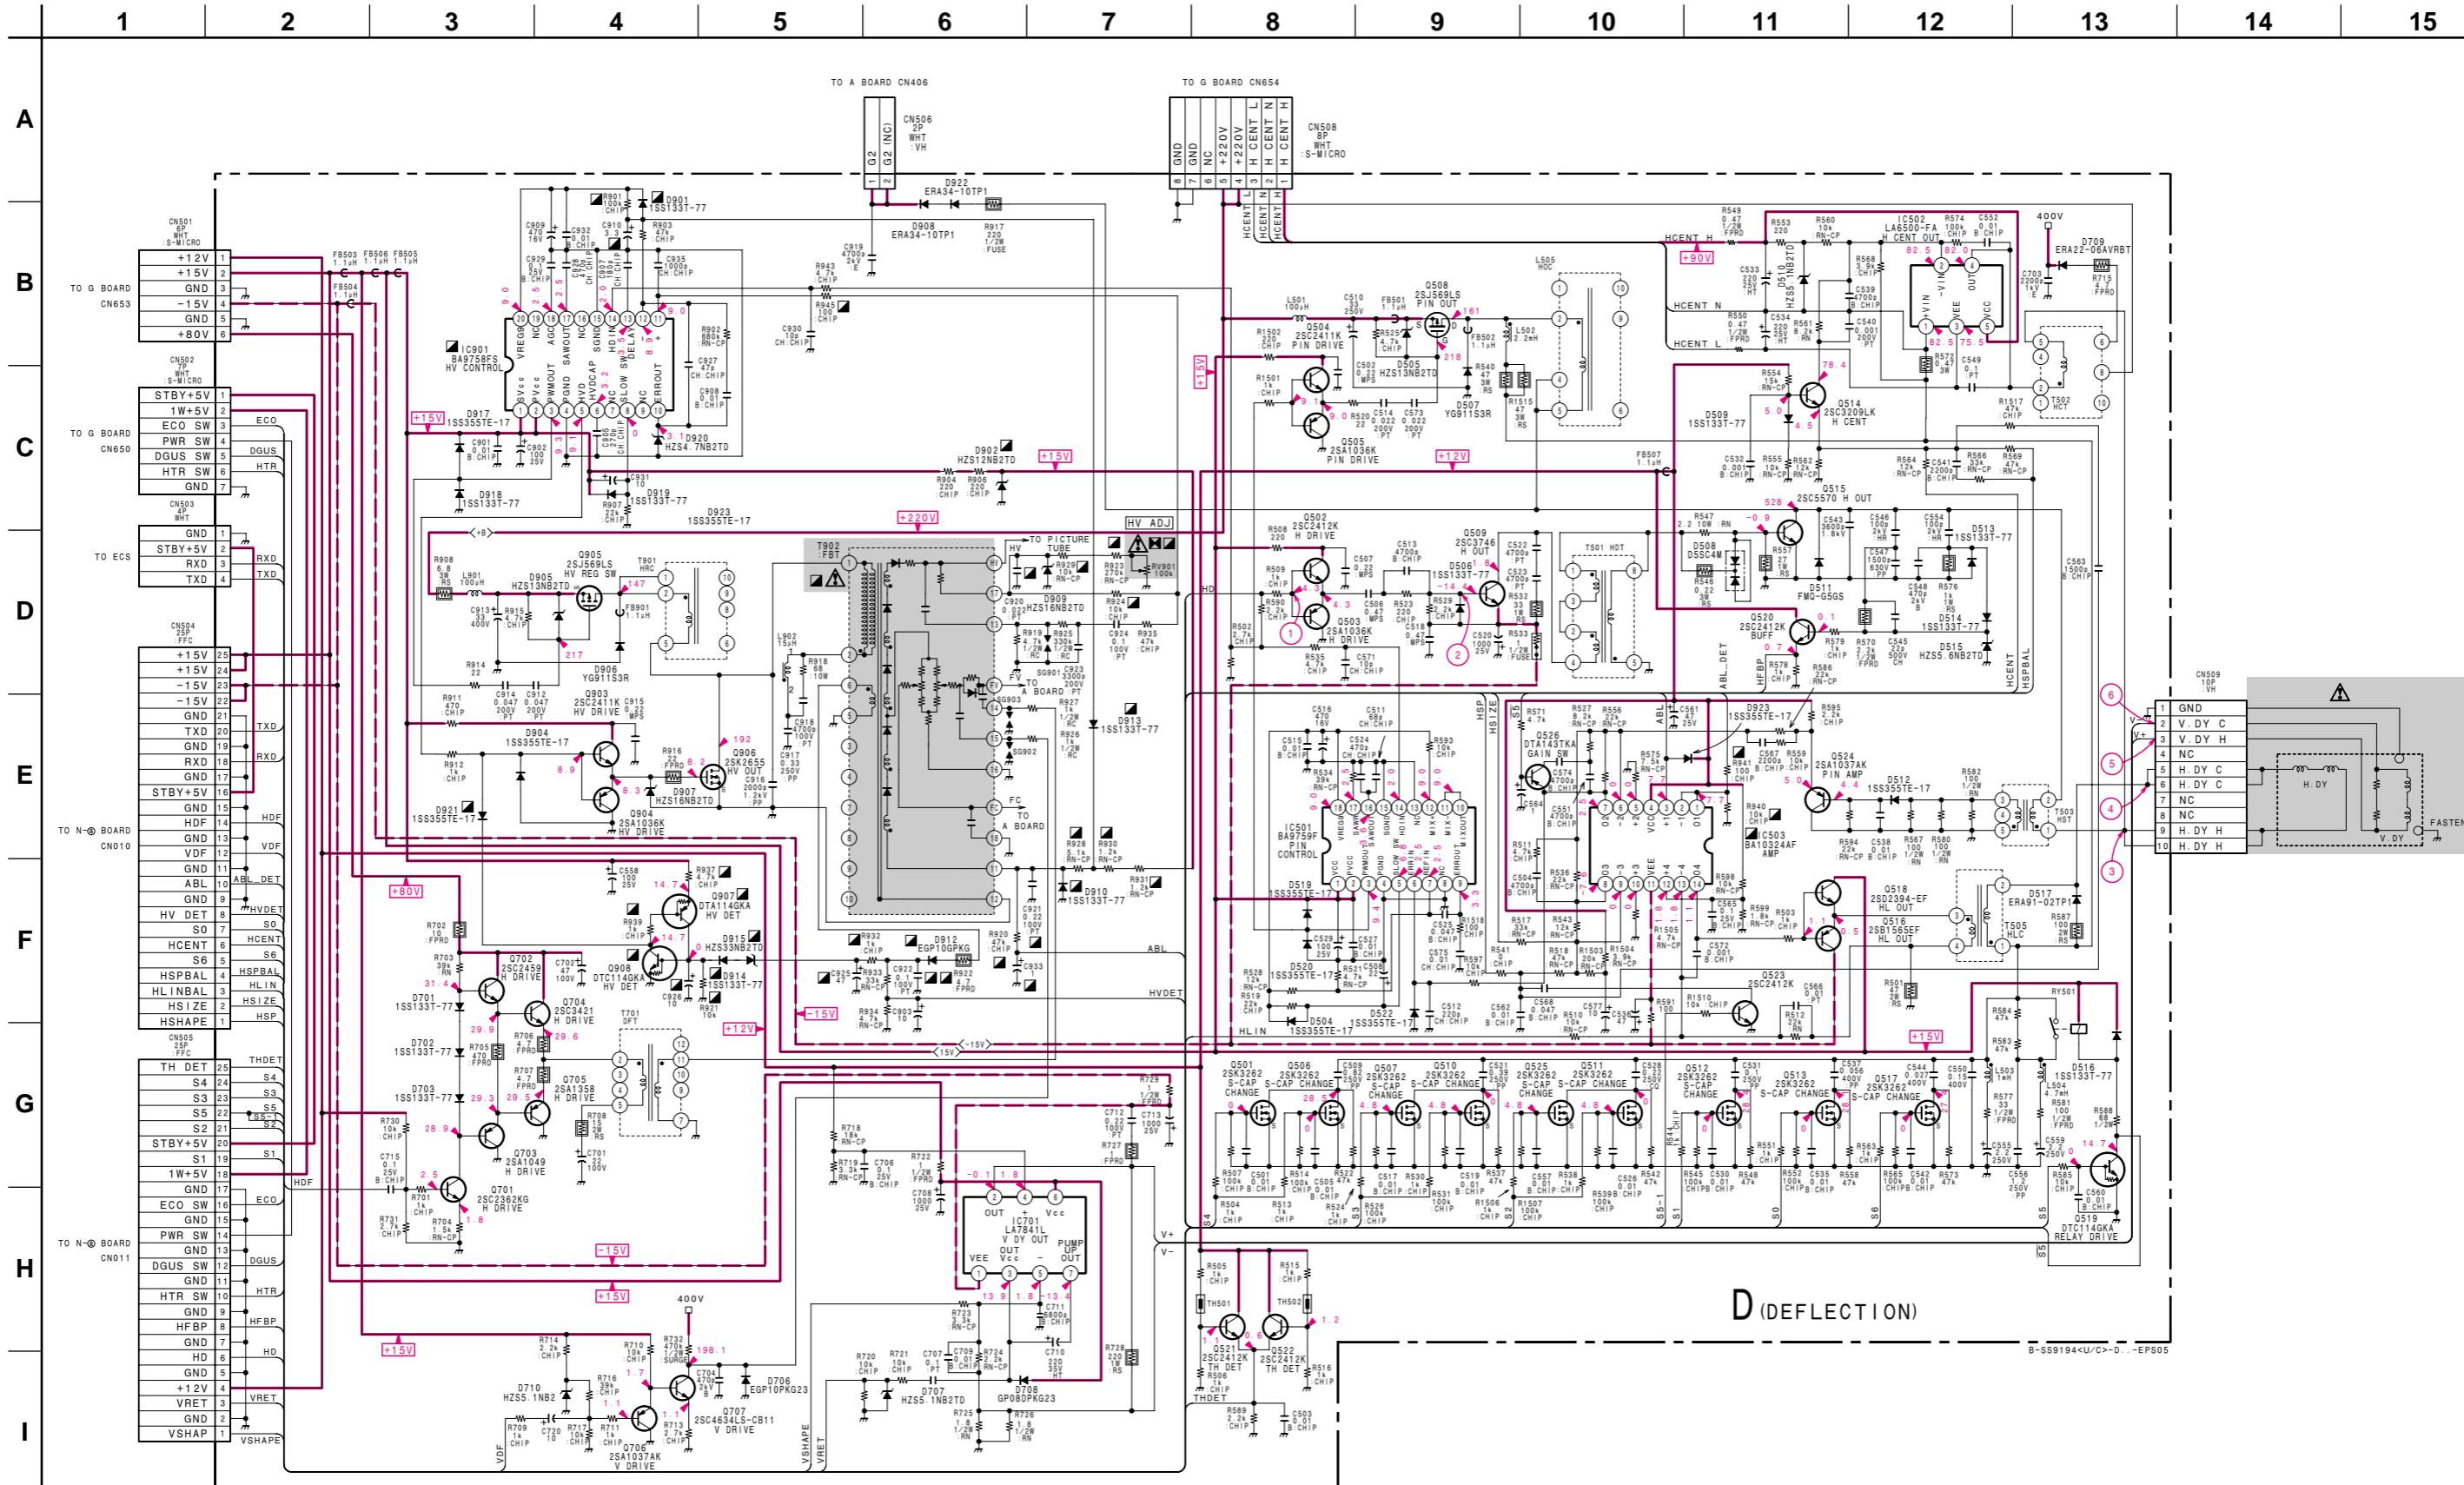


Schematic diagrams
← [H] [J] boards →

Schematic diagram
D board

D [DEFLECTION]

- D BOARD WAVEFORMS


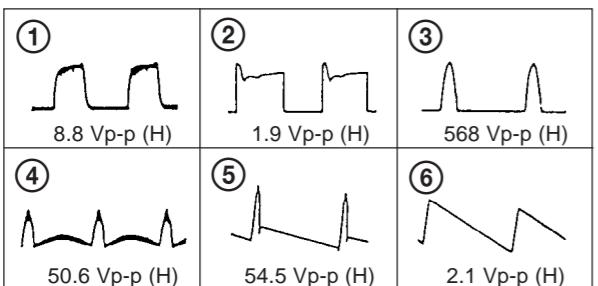


• D BOARD SEMICONDUCTOR LOCATION

IC		DIODE	
TRANSISTOR		*	
IC501	C-4	D504	D-4
IC502	A-1	D505	A-1
IC503	C-4	D506	A-4
IC701	A-5	D507	A-2
IC901	C-1	D508	A-3
		D509	B-2
		D510	A-1
	*	D511	A-2
		D512	B-3
Q501	B-5	D513	B-2
Q502	A-4	D514	B-3
Q503	A-4	D515	B-2
Q504	C-4	D516	B-4
Q505	D-4	D517	B-3
Q506	B-5	D519	C-4
Q507	C-5	D520	D-4
Q508	A-2	D522	C-4
Q509	A-4	D701	D-4
Q510	C-5	D702	D-4
Q511	C-5	D703	D-4
Q512	C-5	D706	D-2
Q513	C-5	D707	A-5
Q514	B-2	D708	A-5
Q515	A-3	D709	B-2
Q516	B-4	D710	D-3
Q517	D-5	D901	B-1
Q518	B-4	D902	B-2
Q519	D-4	D904	B-3
Q520	B-5	D905	C-3
Q521	B-5	D906	C-3
Q522	C-5	D907	B-3
Q524	B-3	D908	C-3
Q525	C-5	D909	C-1
Q526	C-4	D910	C-2
Q701	D-4	D912	C-2
Q702	D-3	D913	B-1
Q703	D-4	D914	C-2
Q704	D-3	D915	C-2
Q705	D-4	D917	B-2
Q706	D-3	D918	B-1
Q707	D-3	D919	B-1
Q903	B-3	D920	B-1
Q904	C-3	D921	B-2
Q905	C-3	D922	C-3
Q906	C-3	D923	C-4
Q907	B-2		
Q908	B-2		
		VARIABLE RESISTOR	
		RV901 B-1	

*: Refer to Terminal name of
semiconductors in silk screen
printed circuit (see page 5-10)

— P BOARD —

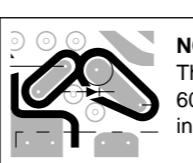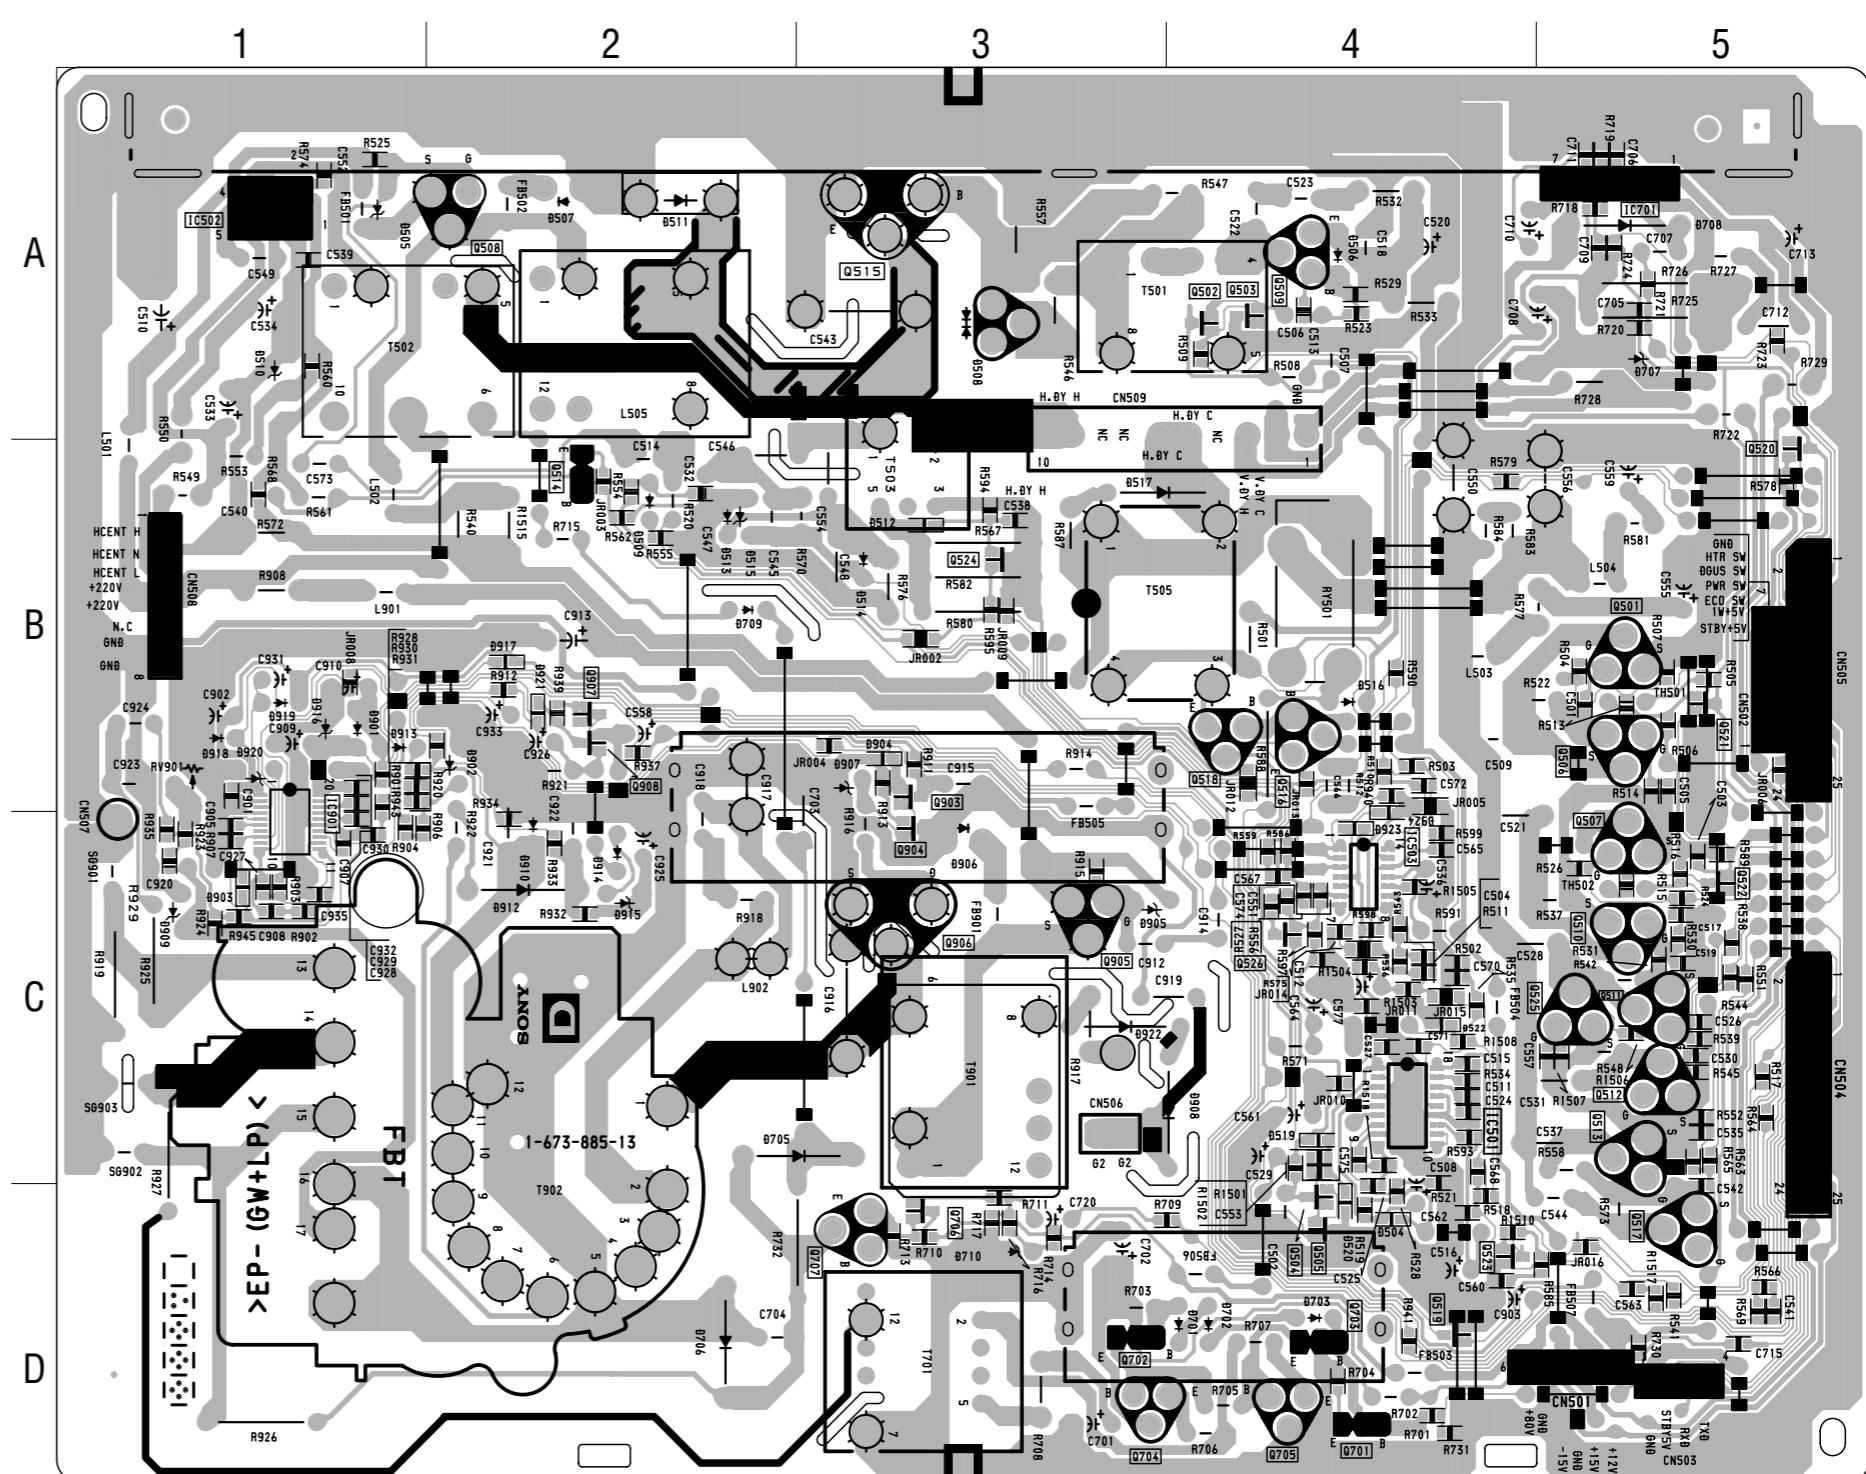


NOTE:


NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

- Divided circuit diagram


One sheet of N board circuit diagram is divided into three sheets, each having the code N-Ⓐ to N-Ⓒ. For example, the destination (ab1) on the code N-Ⓐ sheet is connected to (ab1) on the N-Ⓑ sheet.

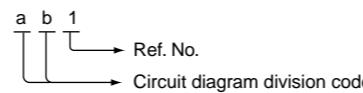

(4) Schematic Diagrams of N (@, b, c) Board

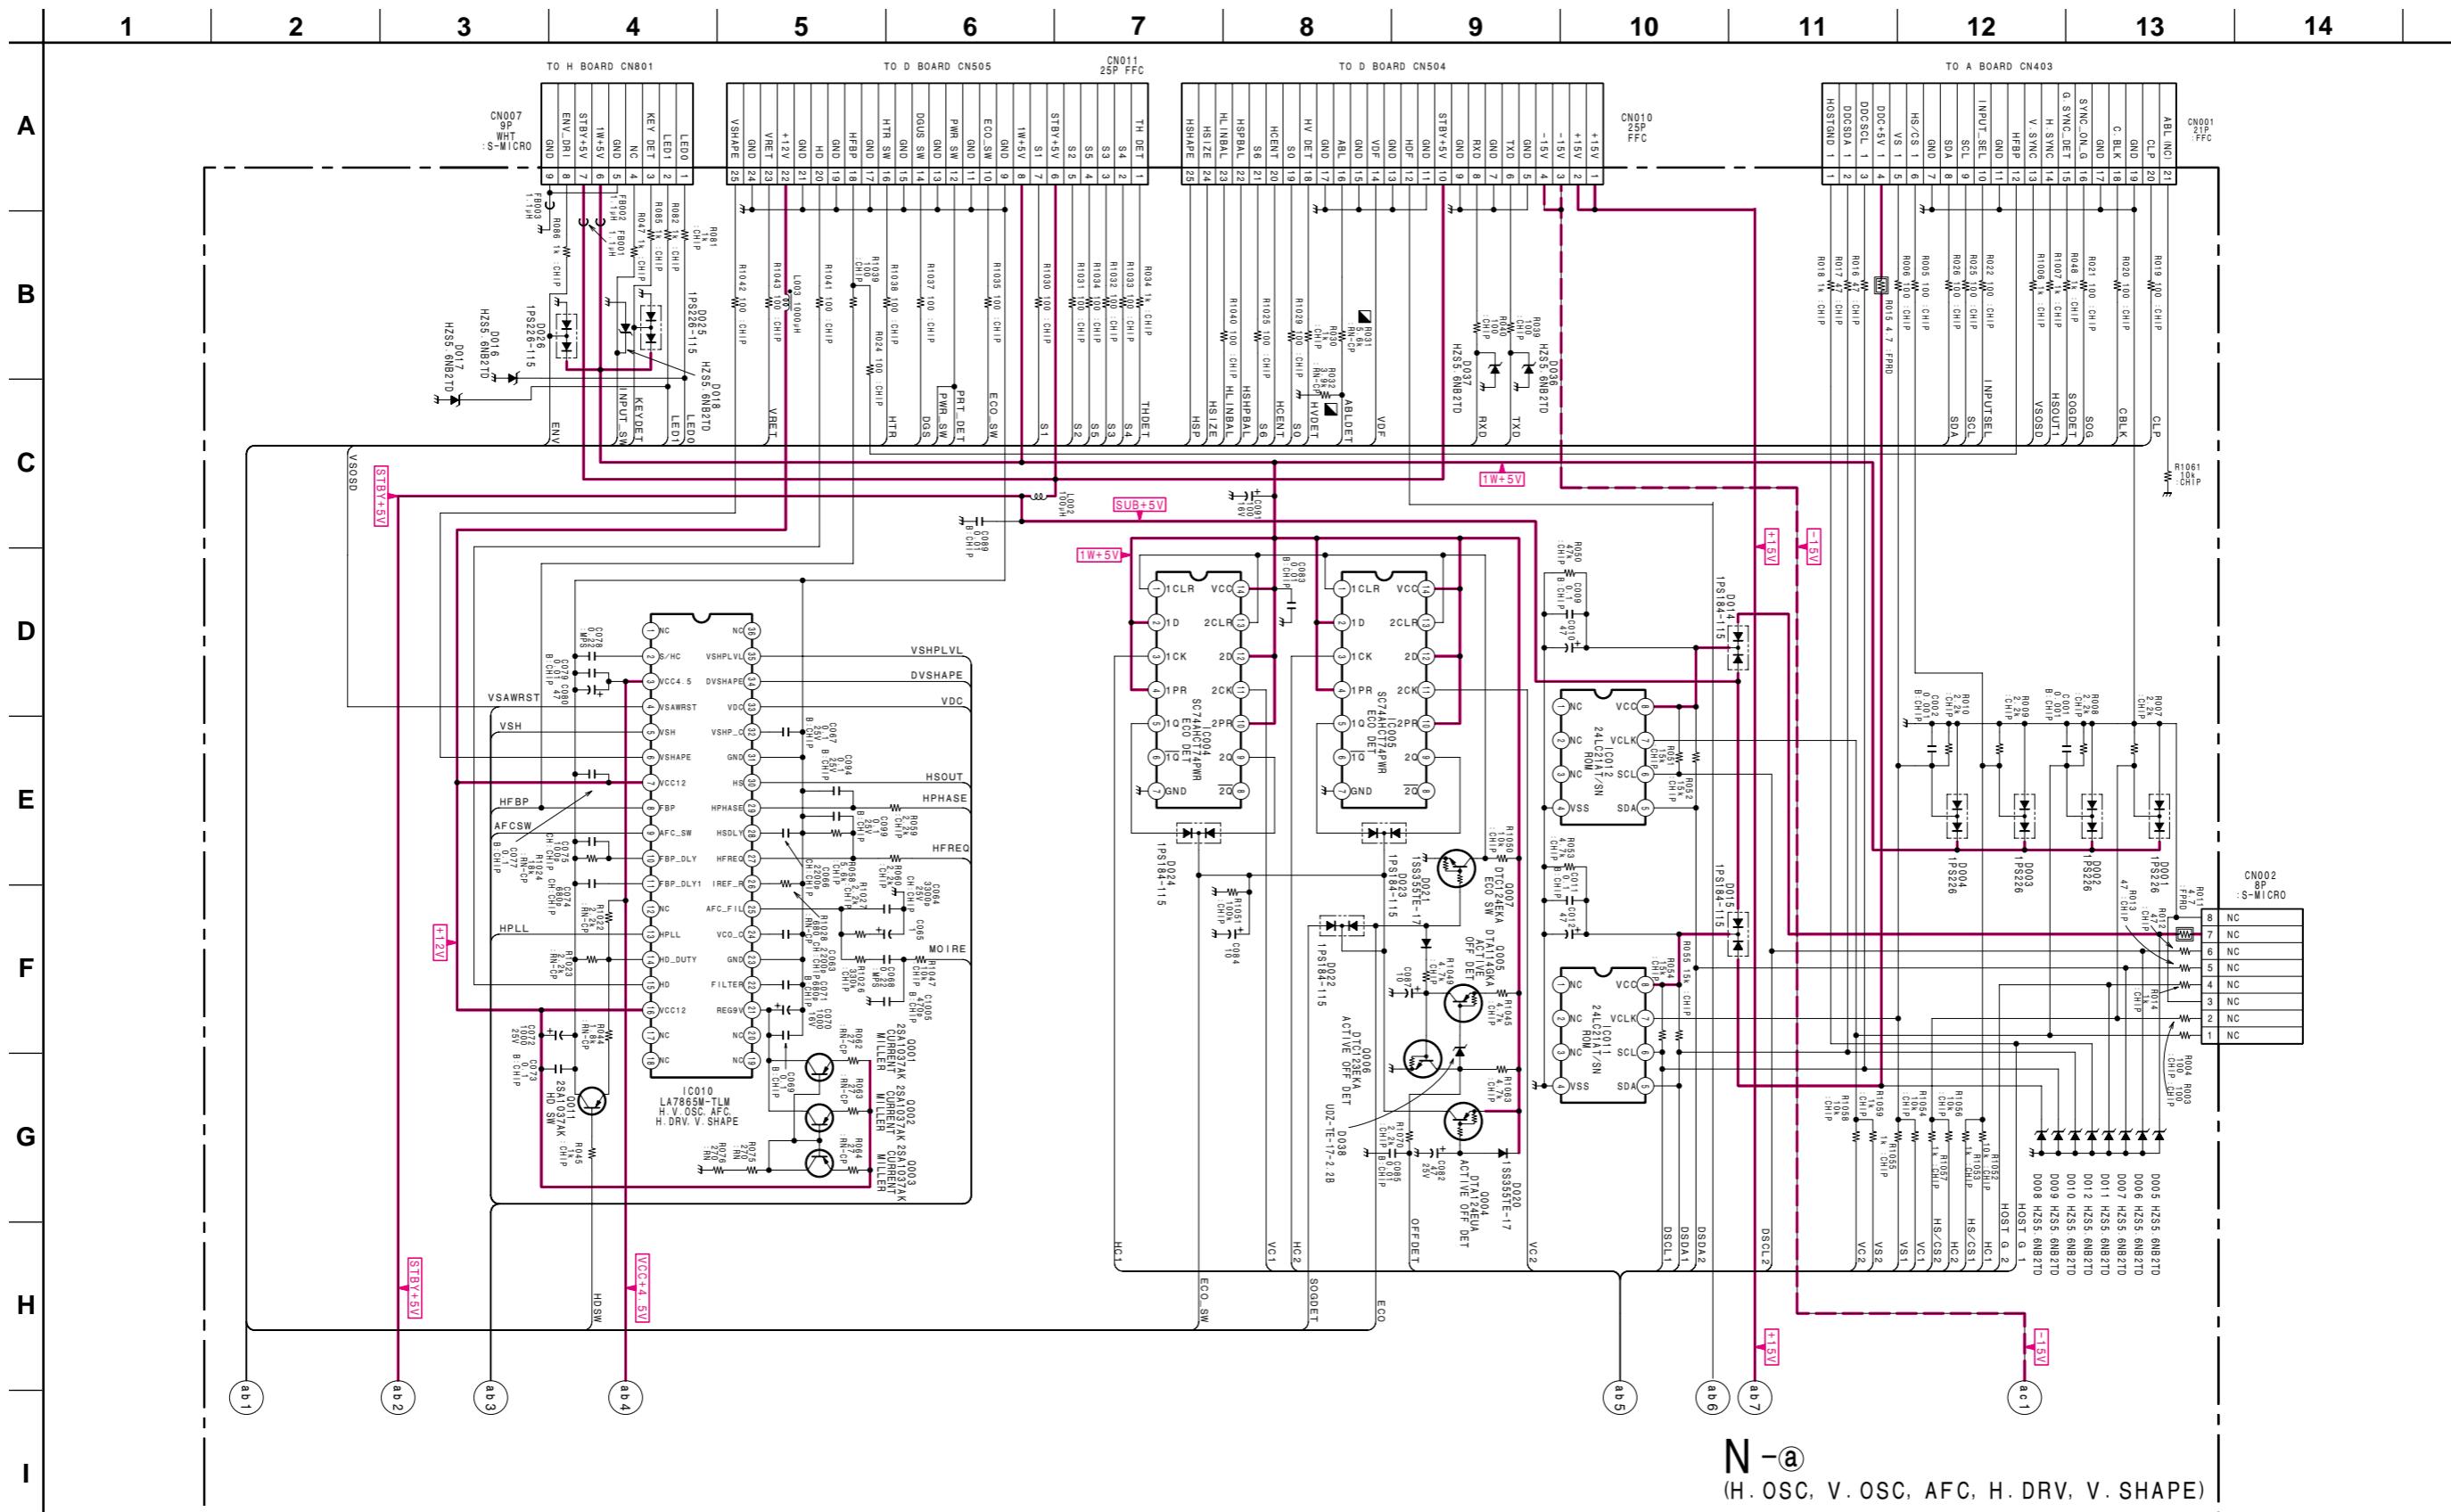

Schematic diagram

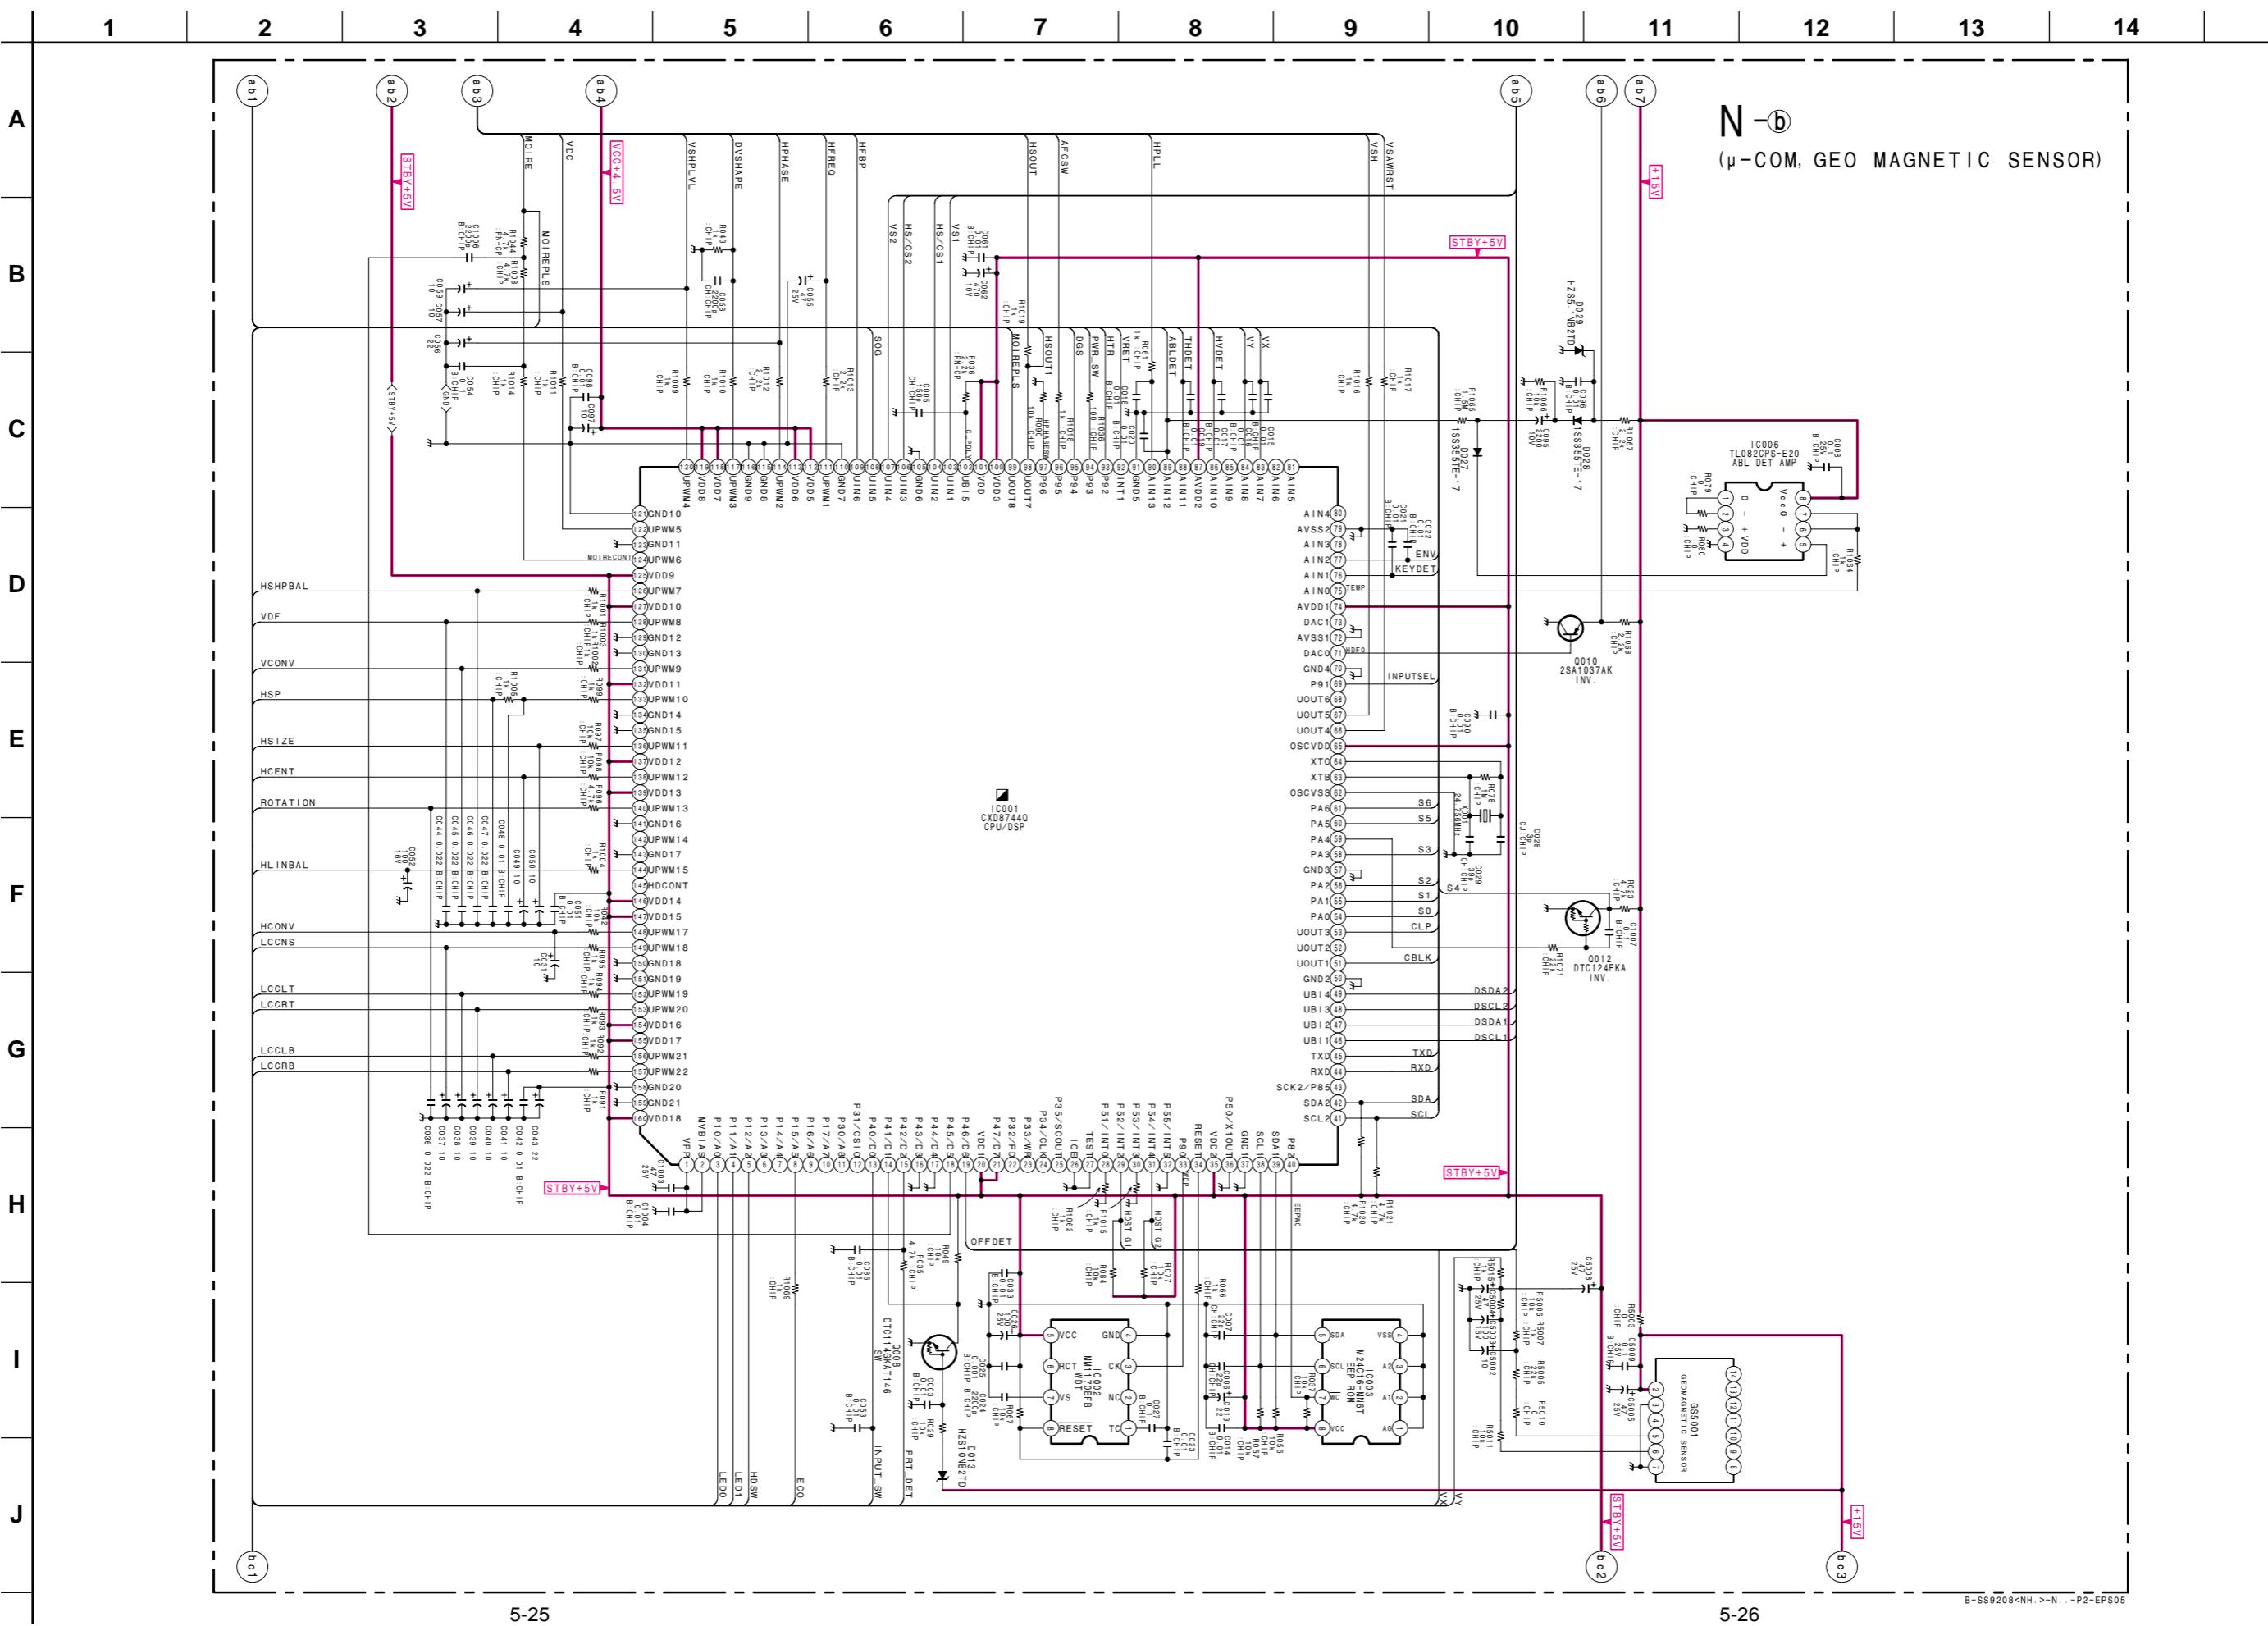

1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14

A

B

C

D


E

F

G

H

Schematic diagram
← [N]-⑤ board

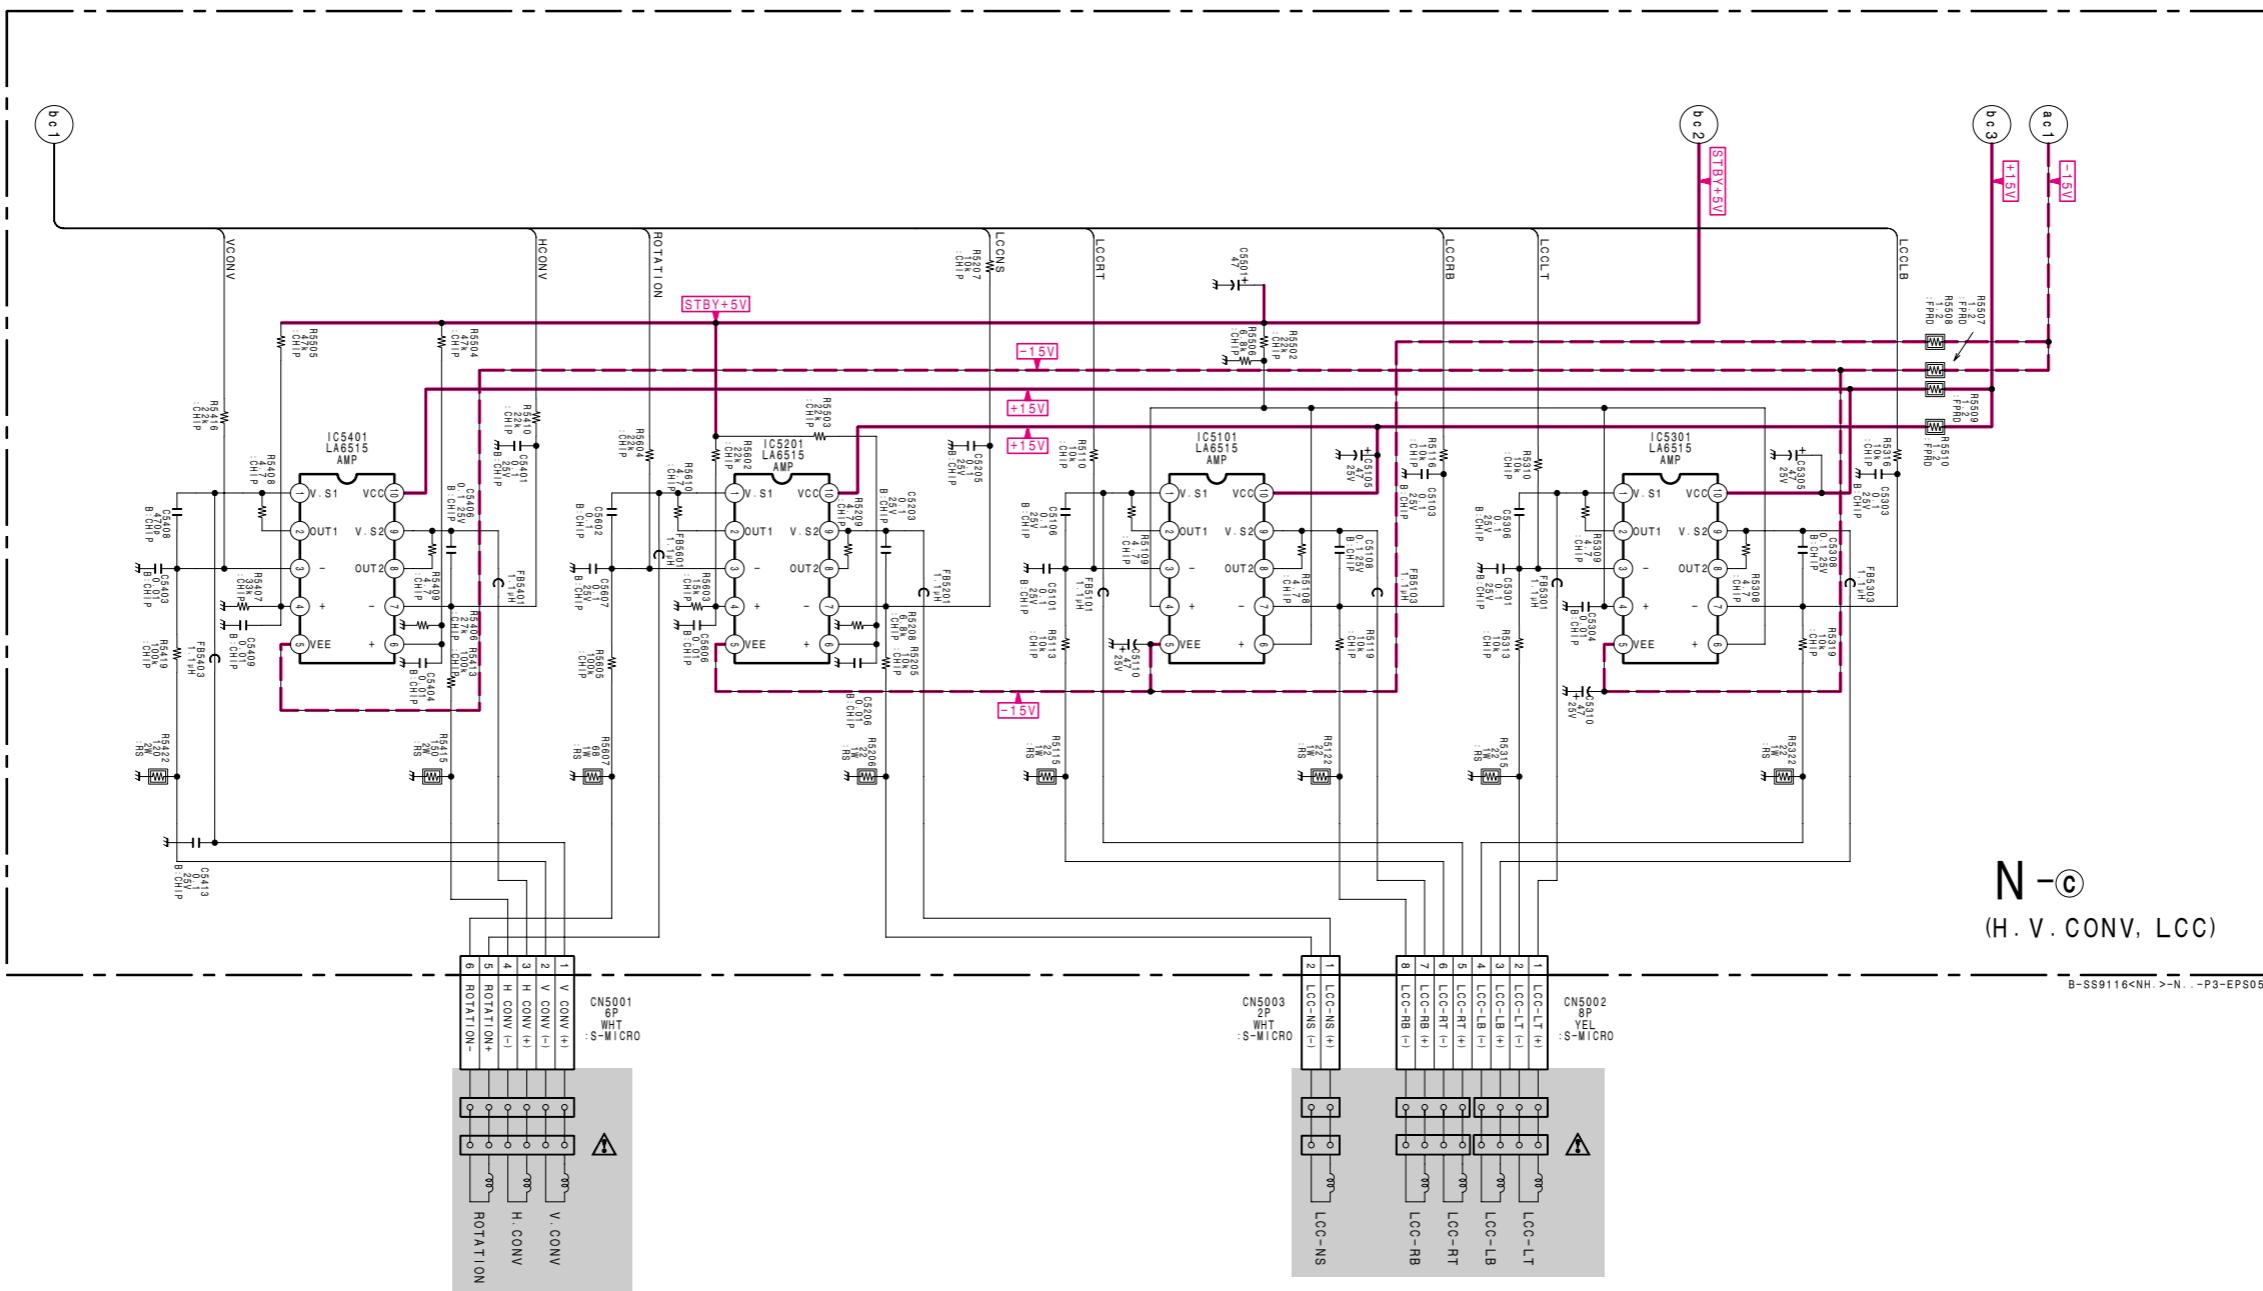


Schematic diagram
[N]-⑤ board →

N

μ-COM, V.CONV, H.CONV,
LCC, GEO MAGNETIC SENSOR

— N BOARD (Conductor Side) —

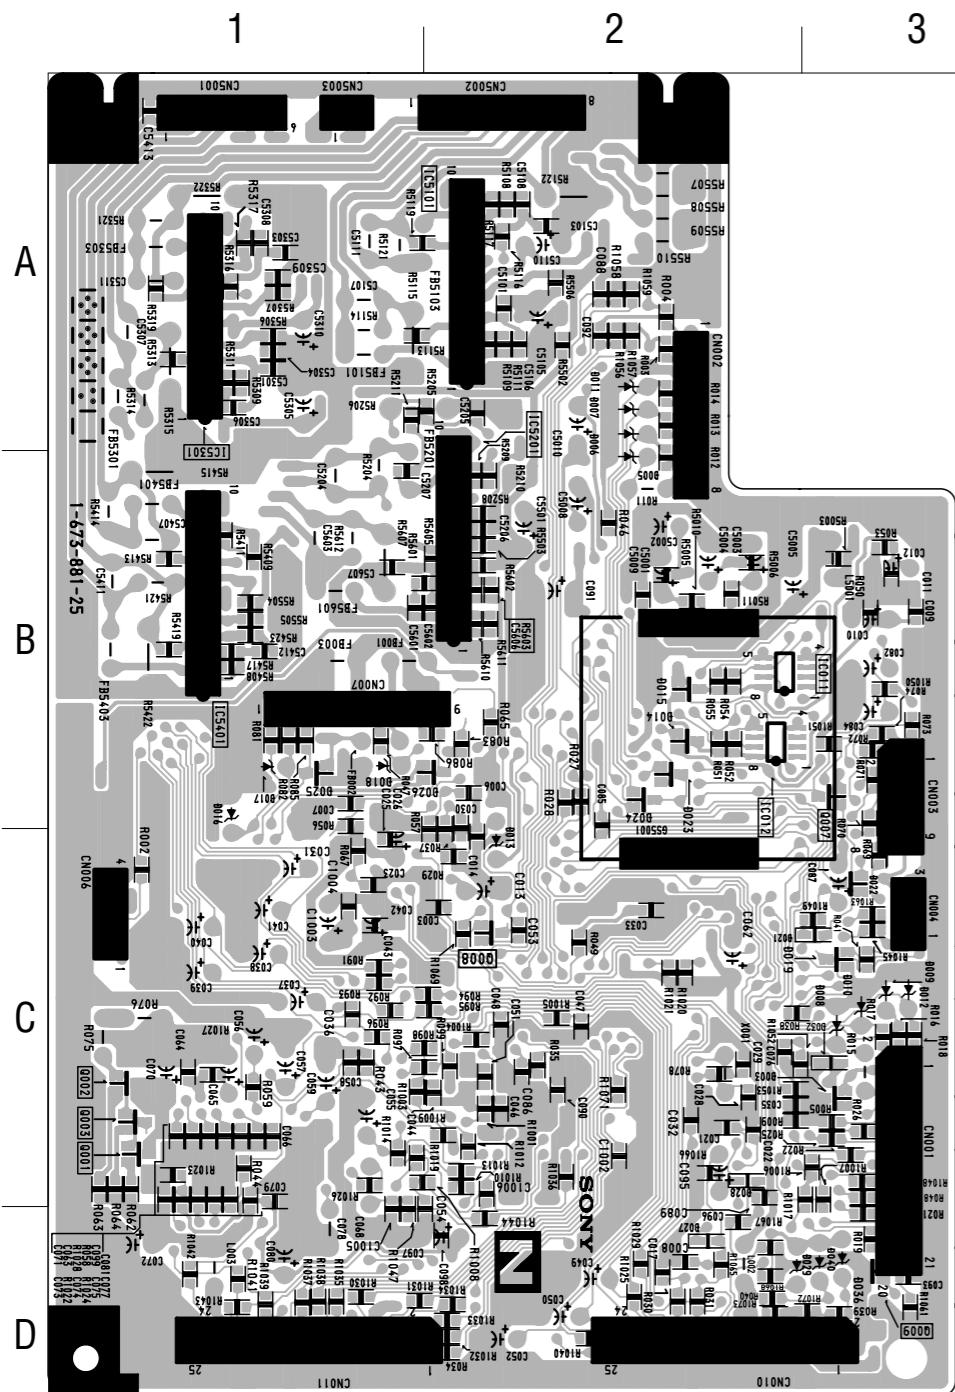

• N BOARD
SEMICONDUCTOR
LOCATION

IC	
(Conductor Side)	(Component Side)
IC001	C-2
IC002	C-2
IC003	C-2
IC004	B-2
IC005	B-2
IC006	D-1
IC010	C-2
IC011	B-2
IC012	B-2
IC5101	A-2
IC5201	B-2
IC5301	A-1
IC5401	B-1


TRANSISTOR	
(Conductor Side)	(Component Side)
Q001	C-1
Q002	C-1
Q003	C-1
Q004	B-1
Q005	C-1
Q006	C-1
Q007	B-3
Q008	C-2
Q010	C-1
Q011	C-2
Q012	D-2

DIODE	
(Conductor Side)	(Component Side)
D001	A-1
D002	A-1
D003	C-3
D004	C-1
D005	B-2
D006	A-2
D007	A-2
D008	C-3
D009	C-3
D010	C-3
D011	A-2
D012	C-3
D013	C-2
D014	B-2
D015	B-2
D016	B-1
D017	B-1
D018	B-1
D020	B-2
D021	C-3
D022	C-3
D023	B-2
D024	B-2
D025	B-1
D026	B-2
D027	D-2
D028	D-2
D029	D-3
D036	D-3
D038	C-1


CRYSTAL	
(Conductor Side)	(Component Side)
X001	C-2
	C-1

*: Refer to Terminal name of
semiconductors in silk screen
printed circuit (see page 5-10)

— N BOARD (Component Side) —

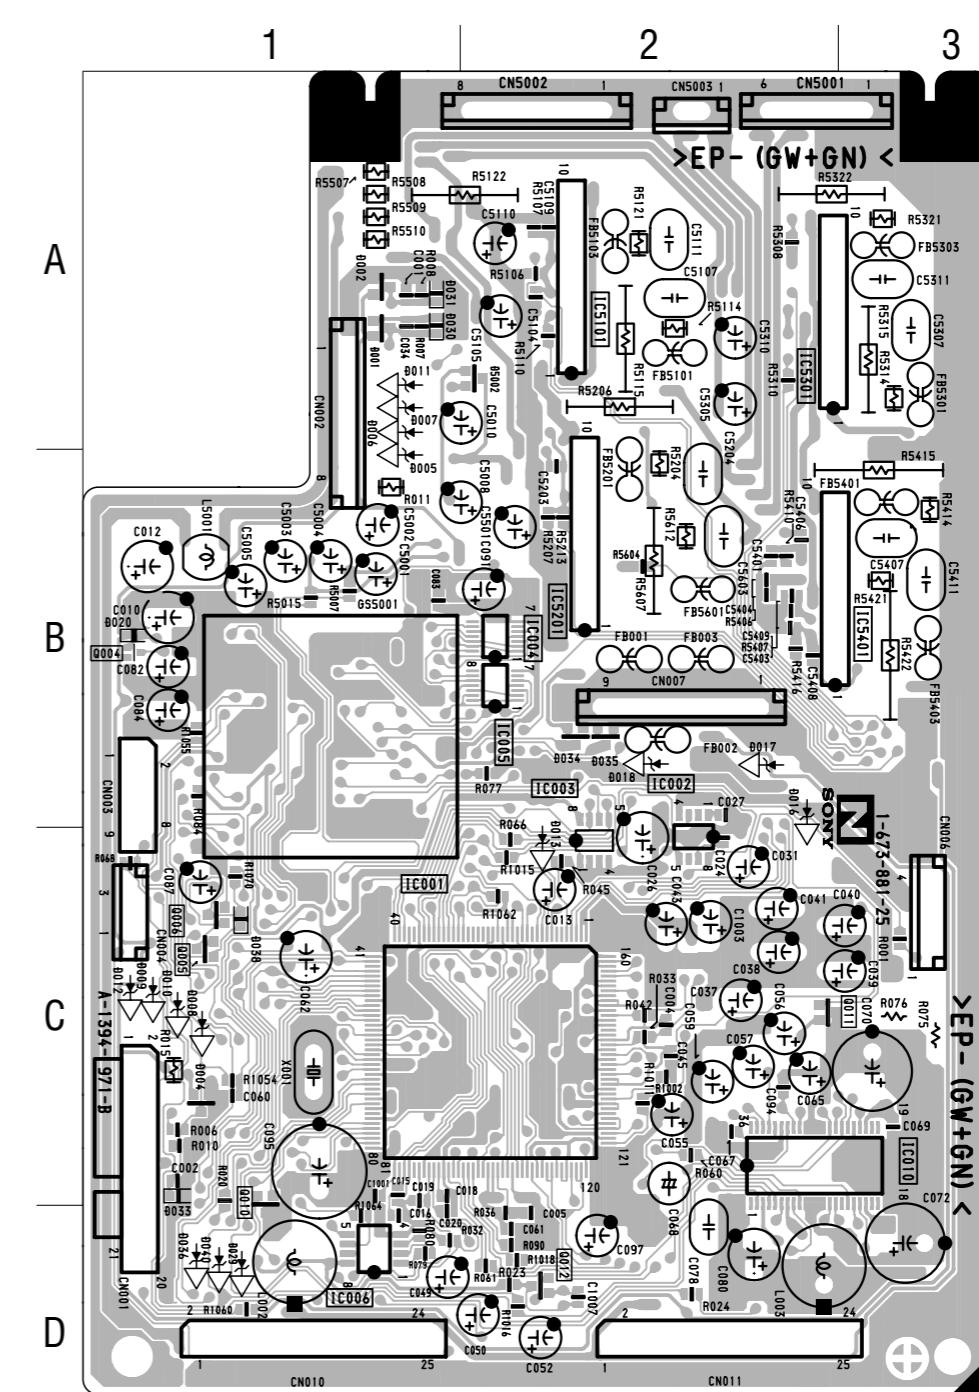


(5) Schematic Diagram of G Board

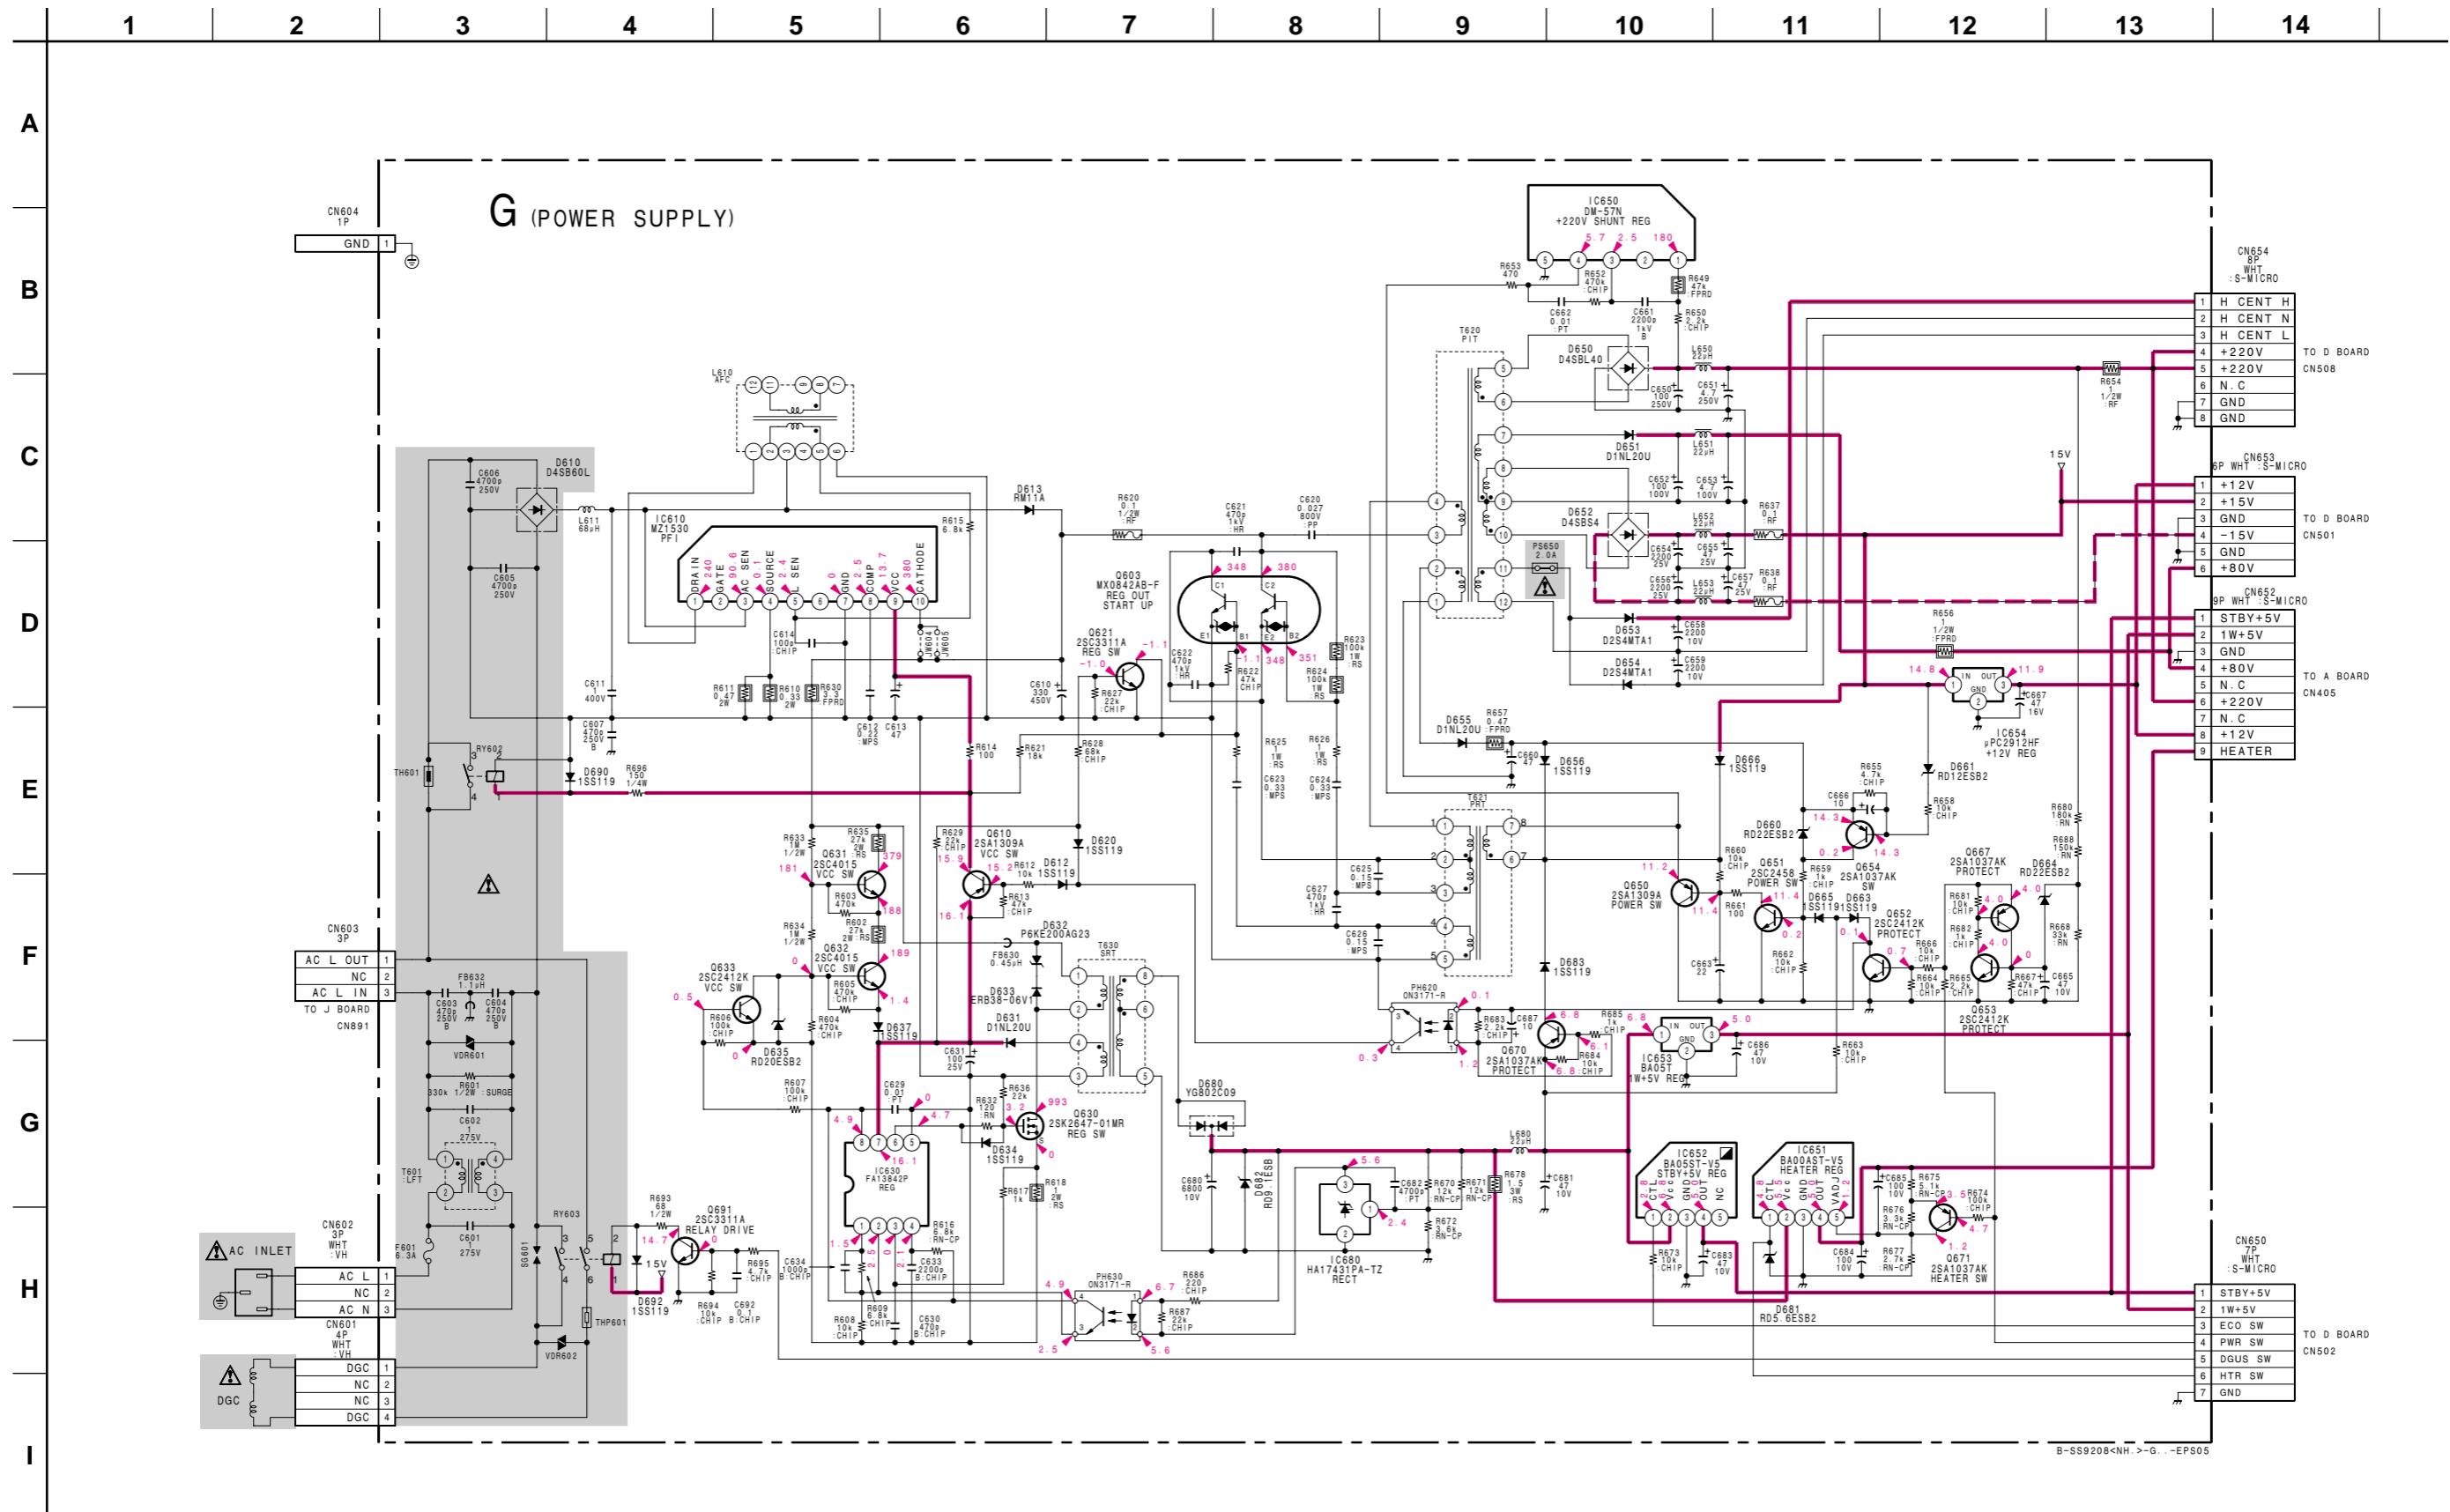

G [POWER SUPPLY]

— G BOARD —

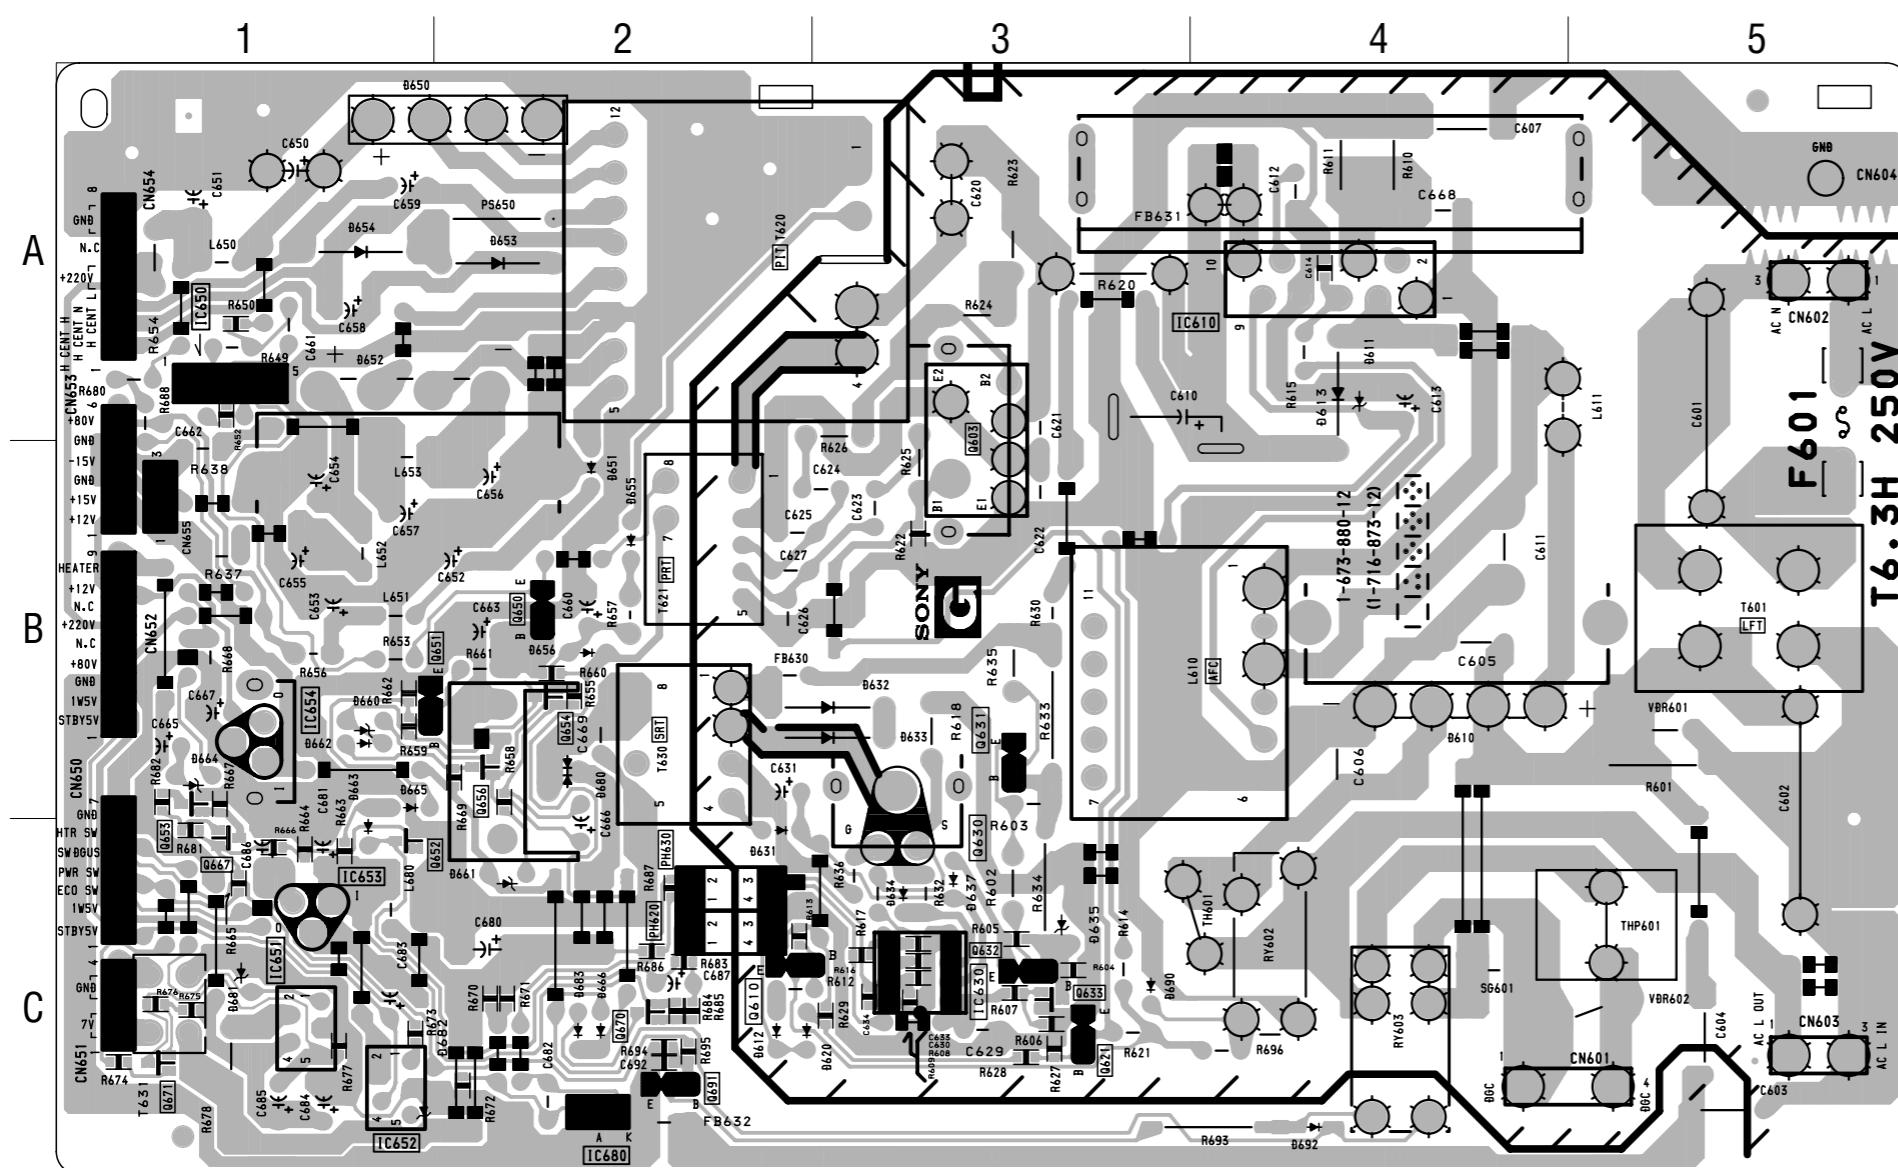

NOTE:-


NOTE: The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

- G BOARD
SEMICONDUCTOR
LOCATION

IC		
IC610	A-4	
IC630	C-3	
IC650	A-1	
IC651	C-1	
IC652	C-1	
IC653	C-1	
IC654	B-1	
IC680	C-2	
TRANSISTOR		
		*
Q603	A-3	—
Q610	C-2	—
Q621	C-3	—
Q630	C-3	—
Q631	B-3	—
Q632	C-3	—
Q633	C-3	①
Q650	B-2	—
Q651	B-1	—
Q652	C-1	①
Q653	B-1	①
Q654	B-2	①
Q667	C-1	①
Q670	C-2	①
Q671	C-1	①
Q691	C-2	—
DIODE		
D610	B-4	
D612	C-2	
D613	A-4	
D620	C-2	
D631	C-2	
D632	B-3	
D633	B-3	
D634	C-3	
D635	C-3	
D637	C-3	
D650	A-2	
D651	B-2	
D652	A-1	
D653	A-2	
D654	A-1	
D655	B-2	
D656	B-2	
D660	B-1	
D661	C-2	
D663	C-1	
D664	B-1	
D665	B-1	
D666	C-2	
D680	B-2	
D681	C-1	
D682	C-1	
D683	C-2	
D690	C-3	
D692	C-4	

*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 5-10)

5-5. SEMICONDUCTORS

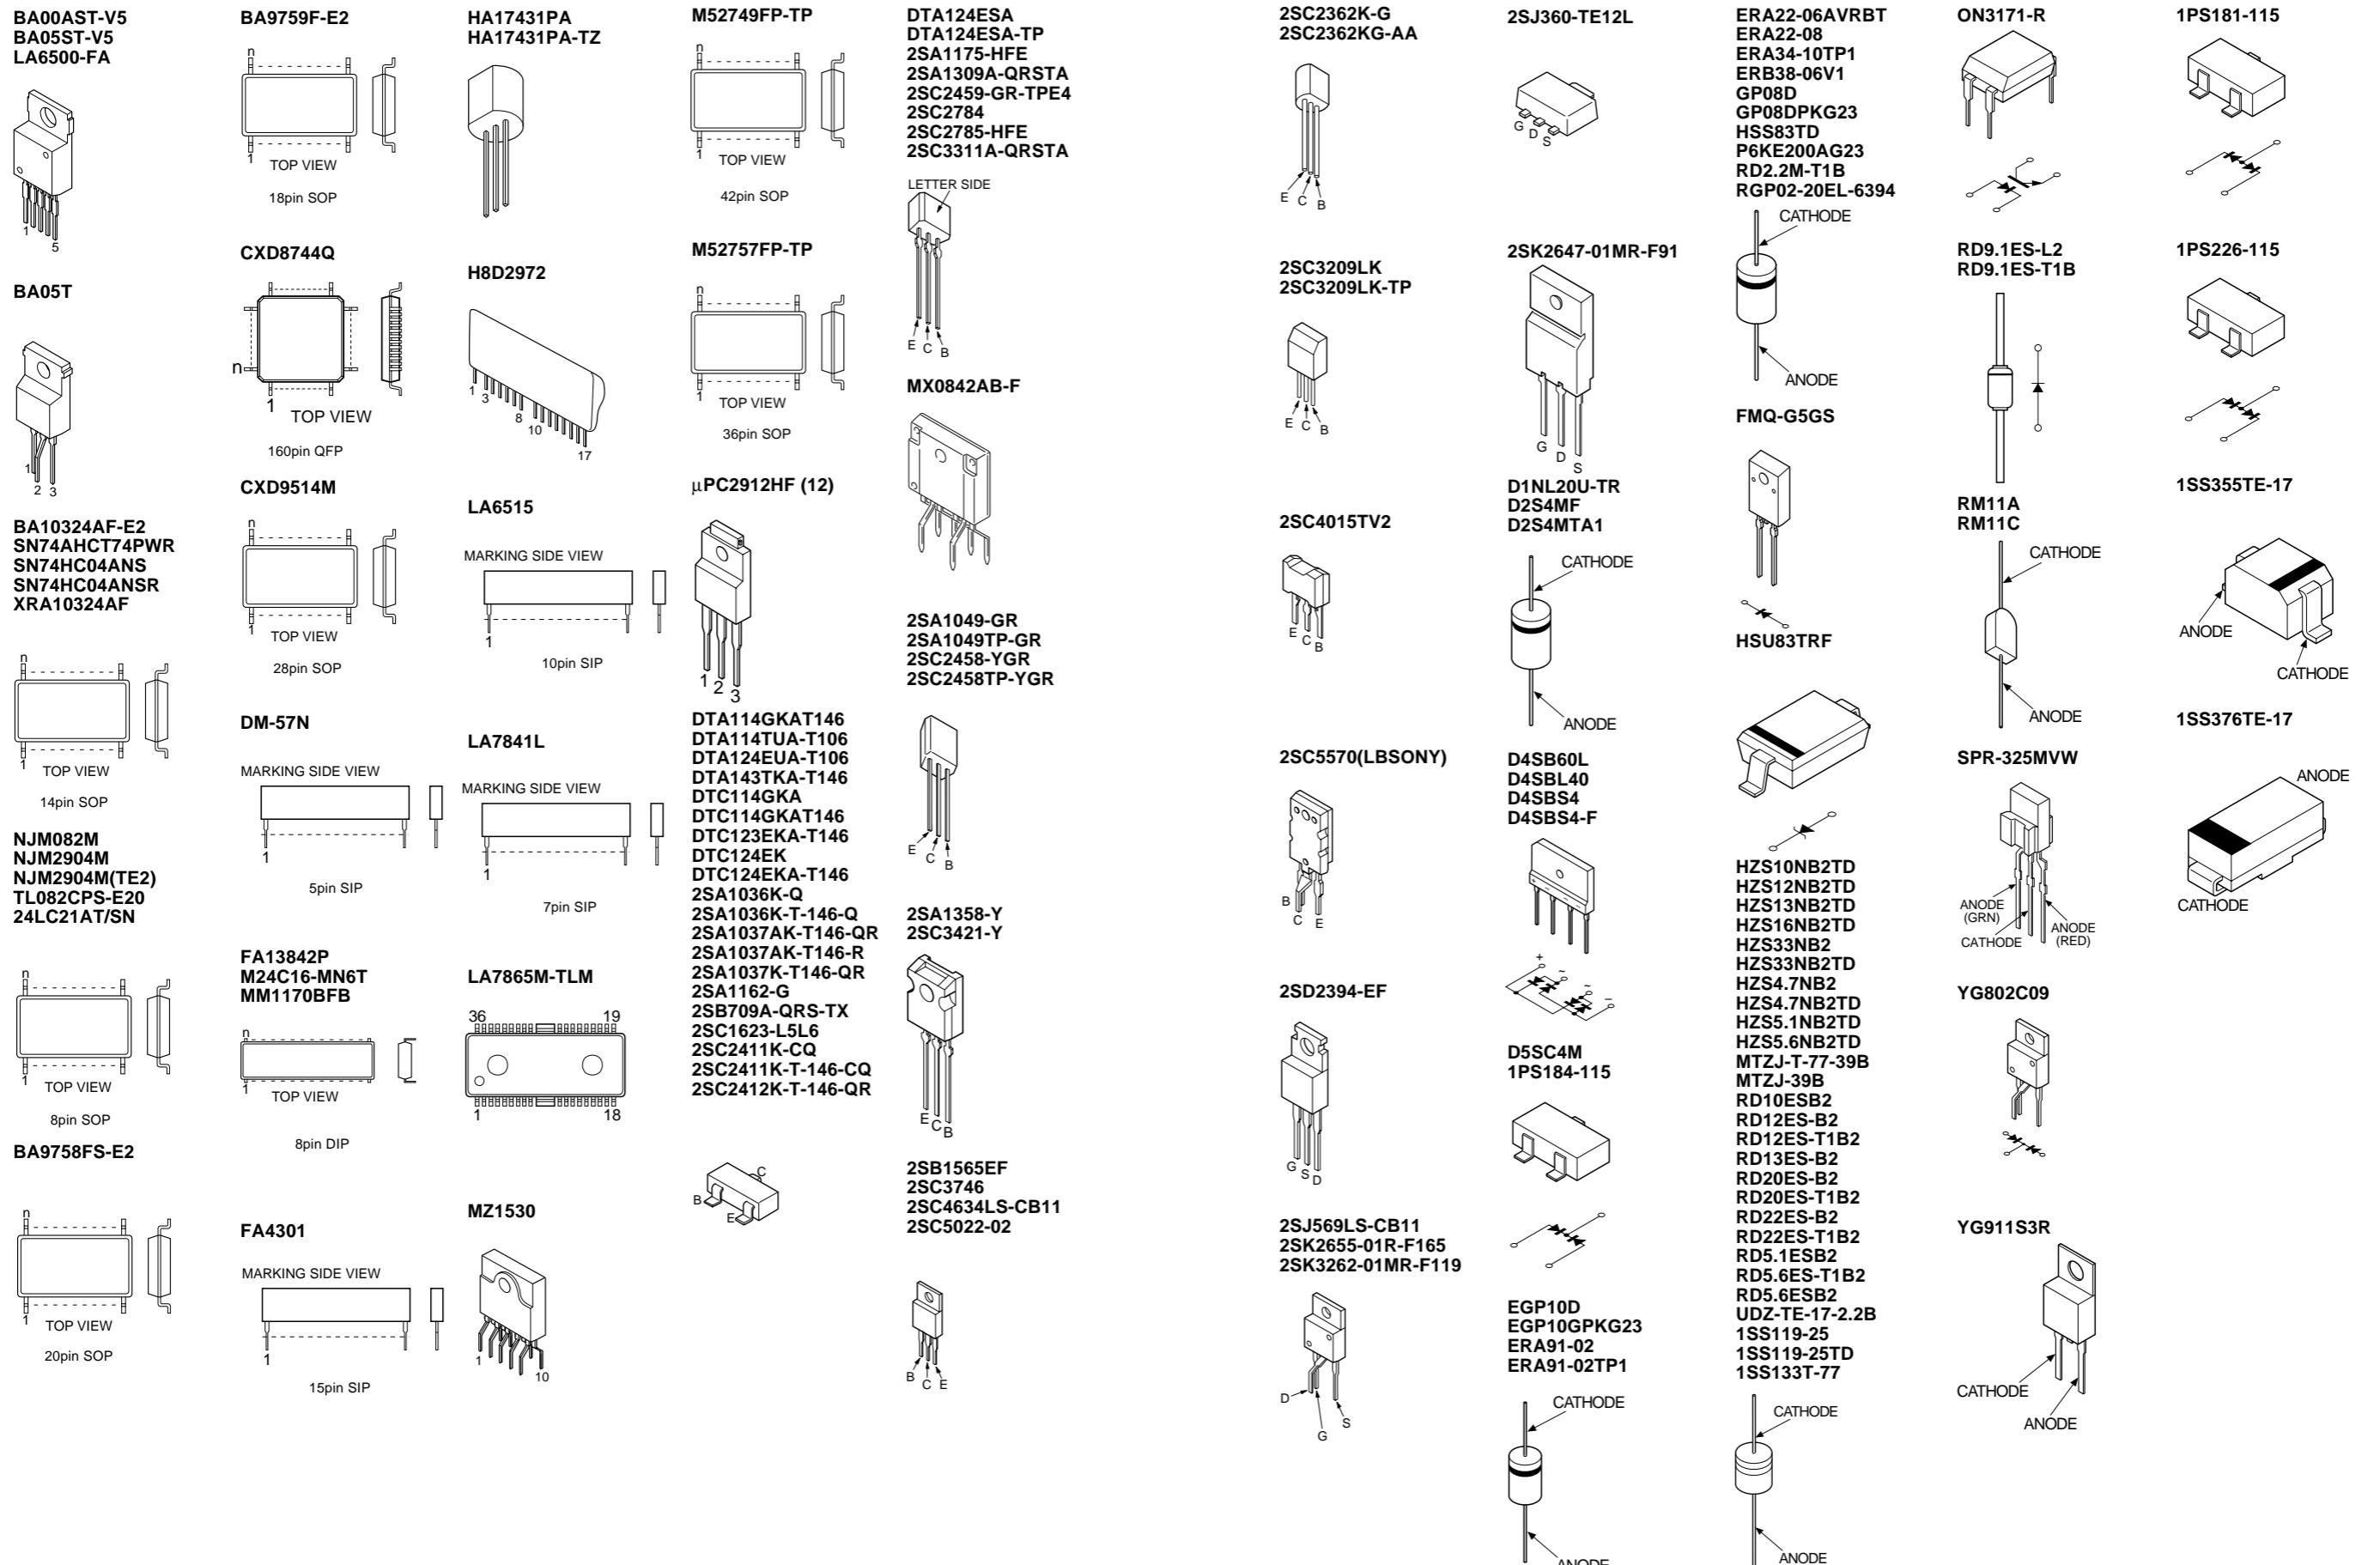

SECTION 6

EXPLODED VIEWS


- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified \triangle marked are critical for safety.
Replace only with the part number specified.

6-1. CHASSIS


- 7-685-648-79 +BVTP 3X12
- ◆ 7-685-646-79 +BVTP 3X8
- \triangle 7-685-881-09 +BVTT 4X8

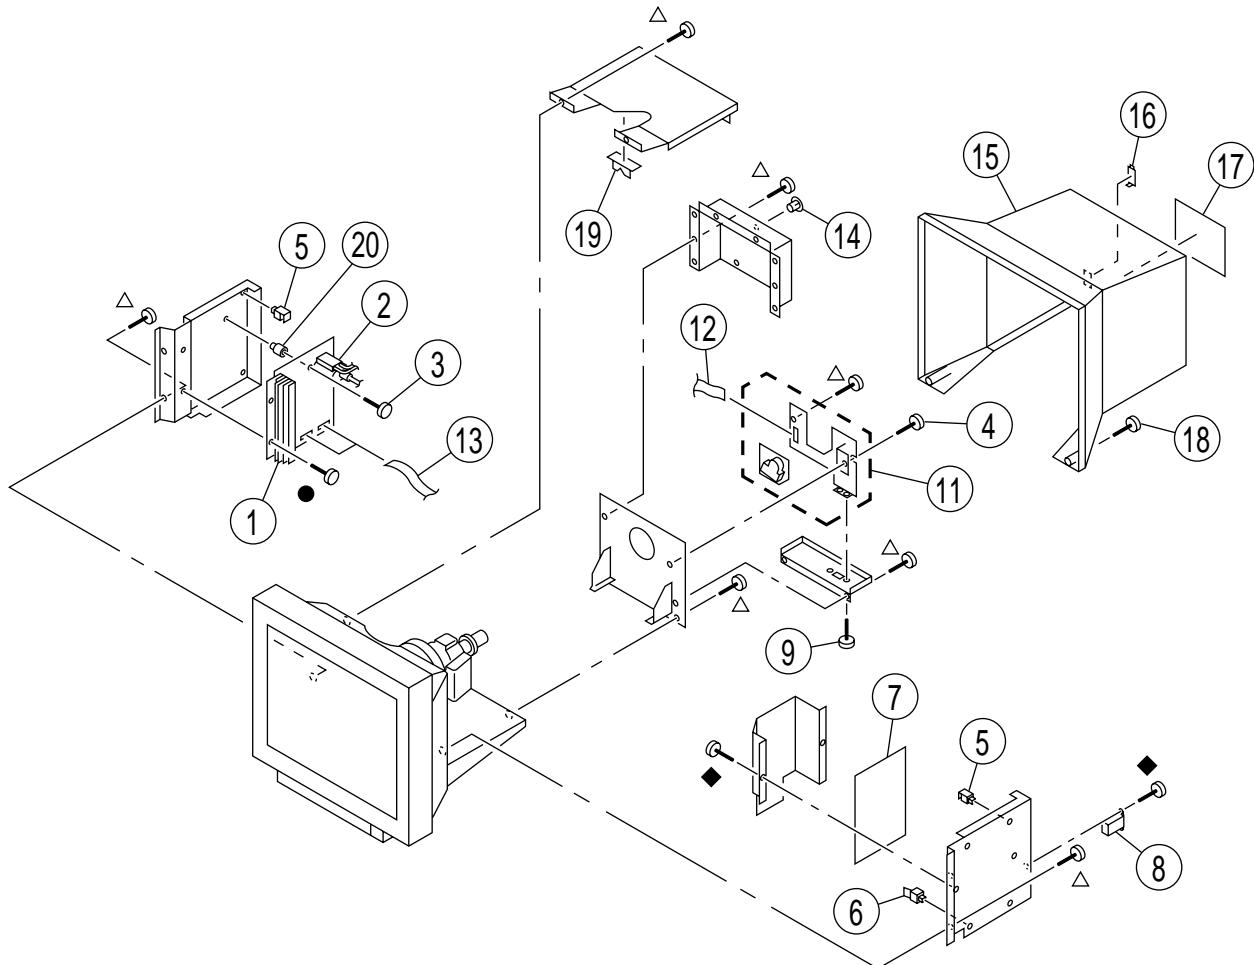

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
1	* A-1346-859-B	D BOARD, COMPLETE		2	1-900-246-08	CONNECTOR ASSY (F)	
2	\triangle X-4560-175-1	TRANSFORMER ASSY, FLYBACK (NX-4502/J1D4)		13	1-900-250-06	CONNECTOR ASSY (F)	
3	4-062-115-01	SCREW +P 3.5X20 TYPE2		14	* 4-069-570-01	SPACER, PRINTED CIRCUIT BOARD	
4	4-389-025-11	SCREW (M4) (EXT TOOTH WASHER)		15	4-073-300-11	CABINET	
5	* 3-701-903-11	HOLDER, PRINTED CIRCUIT BOARD		16	* 4-204-328-21	COVER, ECS	
6	4-070-730-01	HOLDER, PRINTED CIRCUIT BOARD		17	* 4-205-299-01	LABEL, INFORMATION [OEM STD]	
7	* A-1316-480-A	G BOARD, COMPLETE		17	* 4-205-354-01	LABEL, INFORMATION [FORMAC]	
8	\triangle 1-251-382-31	INLET, AC 3P (WITH NOISE FILTER)		17	* 4-205-369-01	LABEL, INFORMATION [ELSA]	
9	4-205-206-01	SCREW (HD15)		18	4-039-358-01	SCREW (4X16) (+) BV TAPPING	
11	* A-1298-988-B	A BOARD, COMPLETE		19	* 4-063-711-01	SUPPORT, HV CABLE	
				20	* 4-060-359-01	HOLDER, PRINTED CIRCUIT BOARD	


6-2. PICTURE TUBE

- 7-685-663-71 +BVTP 4X16
 △ 7-685-881-09 +BVTT 4X8

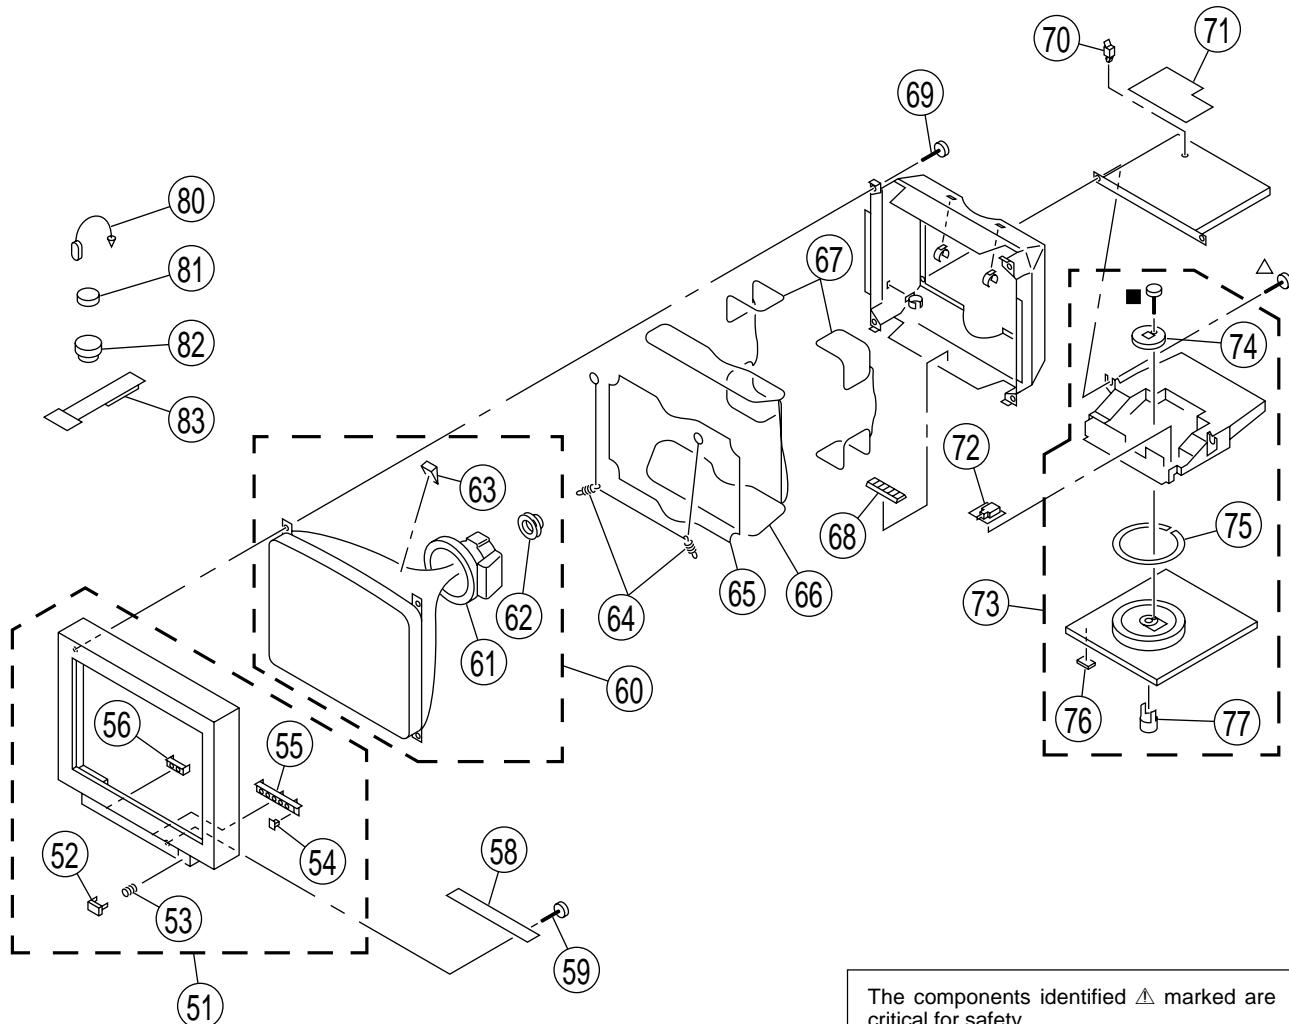

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
51	X-4200-581-1	BEZEL ASSY [OEM STD]	52-56	66	△ 1-419-128-21	COIL, DEGAUSSING	
51	X-4200-585-1	BEZEL ASSY [FORMAC]	52-56	67	△ 1-419-129-21	COIL, LANDING CORRECTION	
51	X-4200-587-1	BEZEL ASSY [ELSA]	52-56	68	4-062-670-01	SPACER, PICTURE TUBE	
52	4-073-296-01	BUTTON, POWER		69	4-203-648-01	SCREW (5), SELF TAPPING	
53	4-042-593-01	SPRING, COMPRESSION		70	4-070-730-01	HOLDER, PRINTED CIRCUIT BOARD	
54	4-073-295-01	BAR, OPTICAL		71	* A-1394-967-B	N BOARD, COMPLETE	
55	4-073-301-01	BUTTON, MULTI		72	* A-1388-260-B	J BOARD, COMPLETE	
56	4-073-298-01	BUTTON, RESET		73	X-4037-324-1	STAND ASSY	74-77
58	* A-1372-740-A	H BOARD, COMPLETE [ELSA, FORMAC]		74	4-204-326-01	STOPPER (A)	
58	* A-1646-207-A	H BOARD, COMPLETE [OEM STD]		75	* 4-204-376-01	RING, TILT SWIVEL	
59	4-029-432-01	SCREW (3X12), (+) BVWHTP		76	* 4-061-996-11	CUSHION	
60	△ 8-738-813-61	ITC ASSY (21TKC-R1)	61-63	77	4-072-648-01	STOPPER (B)	
61	△ 8-451-509-11	DEFLECTION YOKE (Y21TKM-M)		80	4-308-870-00	CLIP, LEAD WIRE	
62	△ 1-452-912-61	NECK ASSENBLY (NA-2914)		81	1-452-032-00	MAGNET, DISK: 10mmφ	
63	2-162-100-21	SPACER, DEFLECTION YOKE		82	1-452-094-00	MAGNET, ROTATABLE DISK: 15mmφ	
64	* 4-047-316-01	SPRING, EXTENSION		83	4-051-736-21	PIECE A (90), CONV. CORRECT	
65	△ 1-419-130-21	COIL, LANDING CORRECTION					

6-3. PACKING MATERIALS

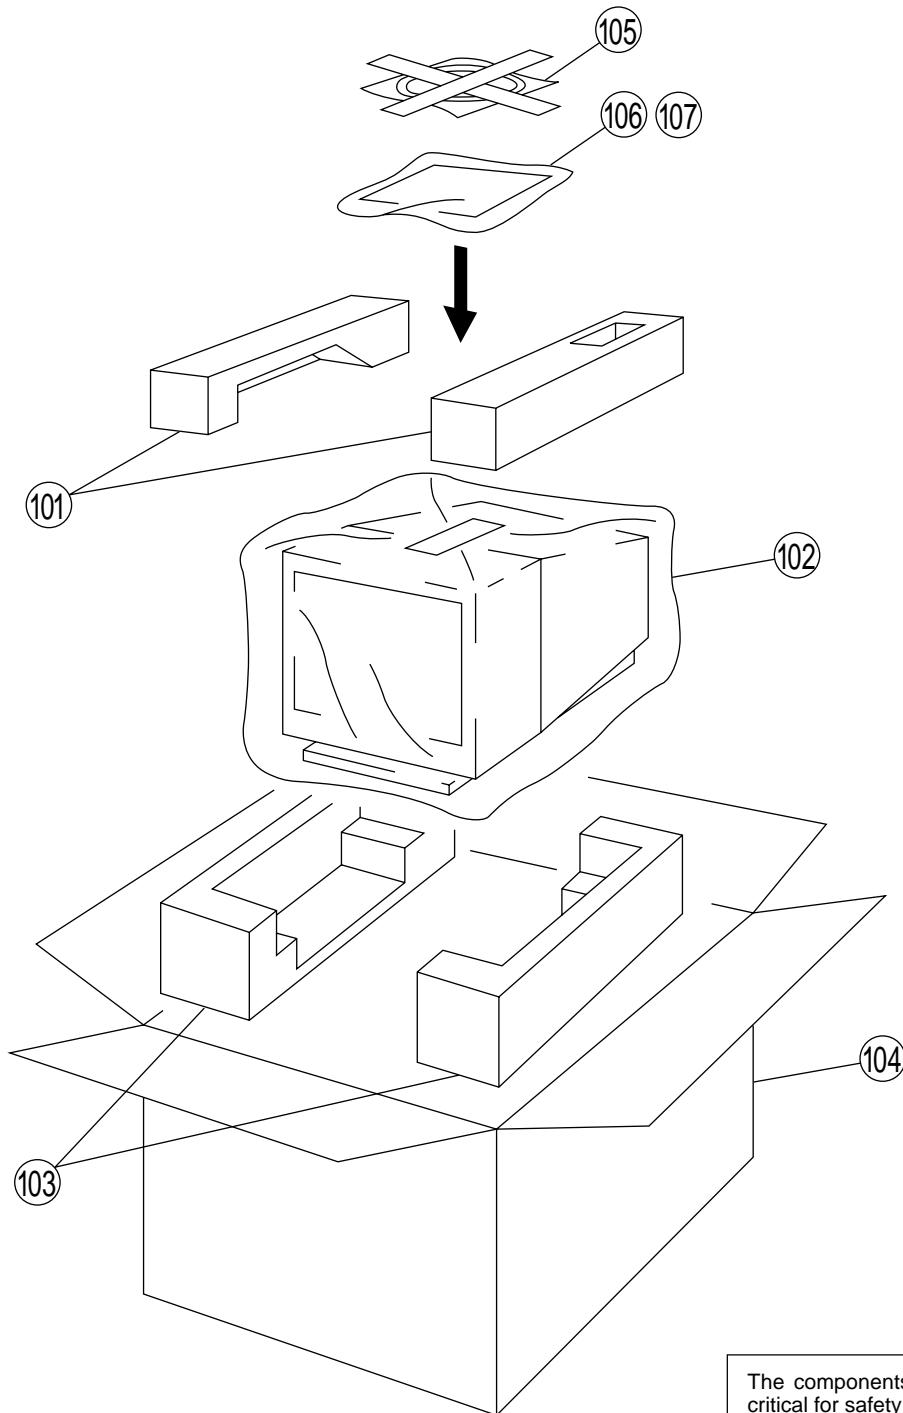

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
101	* 4-073-356-01	CUSHION (UPPER) (ASSY)		105	1-793-504-11	CABLE ASSY (15P D SUB X 2 CONNECTOR)	
102	* 4-368-079-01	BAG, POLYETHYLENE		106	3-868-394-11	MANUAL, INSTRUCTION [ELSA]	
103	* 4-073-357-01	CUSHION (LOWER) (ASSY)		106	4-075-849-11	MANUAL, INSTRUCTION [OEM STD]	
104	* 4-205-298-01	INDIVIDUAL CARTON [OEM STD]		106	4-075-849-31	MANUAL, INSTRUCTION [FORMAC]	
104	* 4-205-355-01	INDIVIDUAL CARTON [FORMAC]		107	△ 1-782-784-21	CORD SET, POWER	
104	* 4-205-367-01	INDIVIDUAL CARTON [ELSA]					

SECTION 7

ELECTRICAL PARTS LIST


NOTE:

The components identified  marked are critical for safety.
Replace only with the part number specified.

When indicating parts by reference number, please include the board name.

The components identified by  in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

RESISTORS

- All resistors are in ohms
- F : nonflammable

• All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
	* A-1298-988-BA	BOARD, COMPLETE	*****	C310	1-163-275-11	CERAMIC CHIP 0.001μF	5% 50V
	7-682-950-01	SCREW +PSW 3X12 (IC403)		C312	1-164-489-11	CERAMIC CHIP 0.22μF	10% 16V
		<CAPACITOR>		C313	1-164-489-11	CERAMIC CHIP 0.22μF	10% 16V
C101	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C314	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C102	1-104-664-11	ELECT 47μF	20% 25V	C315	1-104-341-11	FILM 0.1μF	10% 250V
C103	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C320	1-104-341-11	FILM 0.1μF	10% 250V
C104	1-104-664-11	ELECT 47μF	20% 25V	C401	1-126-964-11	ELECT 10μF	20% 50V
C107	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V	C402	1-104-664-11	ELECT 47μF	20% 25V
C108	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V	C403	1-163-259-91	CERAMIC CHIP 220pF	5% 50V
C109	1-163-229-11	CERAMIC CHIP 12pF	5% 50V	C404	1-163-259-91	CERAMIC CHIP 220pF	5% 50V
C110	1-163-275-11	CERAMIC CHIP 0.001μF	5% 50V	C405	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C112	1-164-489-11	CERAMIC CHIP 0.22μF	10% 16V	C406	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C113	1-164-489-11	CERAMIC CHIP 0.22μF	10% 16V	C407	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C114	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V	C408	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C115	1-104-341-11	FILM 0.1μF	10% 250V	C410	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C120	1-104-341-11	FILM 0.1μF	10% 250V	C411	1-126-934-11	ELECT 220μF	20% 16V
C201	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C413	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C202	1-104-664-11	ELECT 47μF	20% 25V	C415	1-164-489-11	CERAMIC CHIP 0.22μF	10% 16V
C203	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C416	1-126-961-11	ELECT 2.2μF	20% 50V
C204	1-104-664-11	ELECT 47μF	20% 25V	C417	1-104-574-11	CERAMIC 0.0047μF	10% 2KV
C205	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C419	1-162-318-11	CERAMIC 0.001μF	10% 500V
C206	1-109-982-11	CERAMIC CHIP 1μF	10% 10V	C420	1-164-489-11	CERAMIC CHIP 0.22μF	10% 16V
C207	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V	C421	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C208	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V	C422	1-164-489-11	CERAMIC CHIP 0.22μF	10% 16V
C209	1-163-227-11	CERAMIC CHIP 10pF	0.5pF 50V	C423	1-104-664-11	ELECT 47μF	20% 25V
C210	1-163-275-11	CERAMIC CHIP 0.001μF	5% 50V	C424	1-162-318-11	CERAMIC 0.001μF	10% 500V
C212	1-164-489-11	CERAMIC CHIP 0.22μF	10% 16V	C425	1-163-251-11	CERAMIC CHIP 100pF	5% 50V
C213	1-164-489-11	CERAMIC CHIP 0.22μF	10% 16V	C426	1-163-251-11	CERAMIC CHIP 100pF	5% 50V
C214	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V	C427	1-163-235-11	CERAMIC CHIP 22pF	5% 50V
C215	1-104-341-11	FILM 0.1μF	10% 250V	C430	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C216	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C431	1-163-275-11	CERAMIC CHIP 0.001μF	5% 50V
C220	1-104-341-11	FILM 0.1μF	10% 250V	C432	1-164-489-11	CERAMIC CHIP 0.22μF	10% 16V
C301	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C433	1-162-318-11	CERAMIC 0.001μF	10% 500V
C302	1-104-664-11	ELECT 47μF	20% 25V	C434	1-162-318-11	CERAMIC 0.001μF	10% 500V
C303	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C435	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C304	1-104-664-11	ELECT 47μF	20% 25V	C436	1-164-489-11	CERAMIC CHIP 0.22μF	10% 16V
C307	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V	C437	1-126-935-11	ELECT 470μF	20% 16V
C308	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V	C438	1-115-339-11	CERAMIC CHIP 0.1μF	10% 50V
C309	1-163-227-11	CERAMIC CHIP 10pF	0.5pF 50V	C440	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
				C441	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
				C442	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
				C443	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
				C444	1-162-318-11	CERAMIC 0.001μF	10% 500V

A

The components identified **△** marked are critical for safety.
Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK		
C446	1-104-664-11	ELECT	47μF	20%	25V	FB411	1-412-911-11	FERRITE	1.1μH
C449	1-109-982-11	CERAMIC CHIP	1μF	10%	10V				
C450	1-107-823-11	CERAMIC CHIP	0.47μF	10%	16V				
C456	1-164-489-11	CERAMIC CHIP	0.22μF	10%	16V				
C457	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V				
C458	1-115-339-11	CERAMIC CHIP	0.1μF	10%	50V				
C459	1-128-560-11	ELECT	22μF	20%	100V				
C462	1-115-339-11	CERAMIC CHIP	0.1μF	10%	50V				
C463	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V				
C464	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V				
C467	1-107-957-11	ELECT	1μF	20%	250V				
<CONNECTOR>									
CN401	1-793-183-11	CONNECTOR, D SUB 15P							
CN402*1-564-509-11	PLUG, CONNECTOR 6P								
CN403	1-784-463-11	CONNECTOR, FFC/FPC 21P							
CN405*1-564-524-11	PLUG, CONNECTOR 9P								
CN406*1-766-179-11	PIN, CONNECTOR (PC BOARD) 2P								
<DIODE>									
D101	8-719-062-51	DIODE 1PS226-115							
D102	8-719-062-51	DIODE 1PS226-115							
D103	8-719-066-10	DIODE 1PS181-115							
D105	8-719-051-85	DIODE HSS83TD							
D106	8-719-052-12	DIODE 1SS376TE-17							
D107	8-719-052-12	DIODE 1SS376TE-17							
D201	8-719-062-51	DIODE 1PS226-115							
D202	8-719-062-51	DIODE 1PS226-115							
D203	8-719-066-10	DIODE 1PS181-115							
D205	8-719-051-85	DIODE HSS83TD							
D206	8-719-052-12	DIODE 1SS376TE-17							
D207	8-719-052-12	DIODE 1SS376TE-17							
D301	8-719-062-51	DIODE 1PS226-115							
D302	8-719-062-51	DIODE 1PS226-115							
D303	8-719-066-10	DIODE 1PS181-115							
D305	8-719-051-85	DIODE HSS83TD							
D306	8-719-052-12	DIODE 1SS376TE-17							
D307	8-719-052-12	DIODE 1SS376TE-17							
D402	8-719-066-11	DIODE 1PS184-115							
D403	8-719-982-36	ZENER DIODE MTZJ-39B							
D405	8-719-911-19	DIODE 1SS119-25							
D406	8-719-062-51	DIODE 1PS226-115							
D407	8-719-062-51	DIODE 1PS226-115							
<FERRITE BEAD>									
FB102	1-500-419-22	FERRITE							
FB202	1-500-419-22	FERRITE							
FB302	1-500-419-22	FERRITE							
FB402	1-412-911-11	FERRITE	1.1μH						
FB403	1-412-911-11	FERRITE	1.1μH						
FB404	1-412-911-11	FERRITE	1.1μH						
FB405	1-412-911-11	FERRITE	1.1μH						
FB406	1-412-911-11	FERRITE	1.1μH						
<IC LINK>									
PS401△	1-533-590-31	LINK, IC (1A/90V AC, 60V DC)							
<TRANSISTOR>									
Q101	8-729-120-28	TRANSISTOR 2SC1623-L5L6							
Q201	8-729-120-28	TRANSISTOR 2SC1623-L5L6							
Q301	8-729-120-28	TRANSISTOR 2SC1623-L5L6							
Q401	8-729-120-28	TRANSISTOR 2SC1623-L5L6							
Q402	8-729-050-41	TRANSISTOR 2SJ360TE12L							
Q406	8-729-216-22	TRANSISTOR 2SA1162-G							
Q407	8-729-028-74	TRANSISTOR DTA114TUA-T106							
Q410	8-729-032-61	TRANSISTOR 2SC5022-02							
<RESISTOR>									
R101	1-215-394-00	METAL	75		1%	1/4W			
R103	1-215-394-00	METAL	75		1%	1/4W			
R105	1-216-017-91	RES-CHIP	47		5%	1/10W			
R106	1-216-017-91	RES-CHIP	47		5%	1/10W			
R107	1-216-045-00	RES-CHIP	680		5%	1/10W			
R109	1-216-678-11	METAL CHIP	13K		0.5%	1/10W			
R110	1-216-097-91	RES-CHIP	100K		5%	1/10W			
R111	1-216-041-00	RES-CHIP	470		5%	1/10W			
R112	1-216-009-91	RES-CHIP	22		5%	1/10W			
R113	1-216-017-91	RES-CHIP	47		5%	1/10W			
R114	1-216-009-91	RES-CHIP	22		5%	1/10W			
R115	1-219-742-11	CARBON	47		5%	1/2W			
R116	1-216-065-91	RES-CHIP	4.7K		5%	1/10W			
R117	1-216-121-91	RES-CHIP	1M		5%	1/10W			
R118	1-216-121-91	RES-CHIP	1M		5%	1/10W			
R119	1-216-077-91	RES-CHIP	15K		5%	1/10W			
R120	1-216-113-00	RES-CHIP	470K		5%	1/10W			
R121	1-216-113-00	RES-CHIP	470K		5%	1/10W			
R122	1-216-081-00	RES-CHIP	22K		5%	1/10W			
R128	1-216-065-91	RES-CHIP	4.7K		5%	1/10W			
R130	1-216-113-00	RES-CHIP	470K		5%	1/10W			



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R137	1-249-413-11	CARBON	470 5% 1/4W	R406	1-216-097-91	RES-CHIP	100K 5% 1/10W
R138	1-216-017-91	RES-CHIP	47 5% 1/10W	R407	1-218-768-11	METAL CHIP	470K 0.5% 1/10W
R161	1-216-041-00	RES-CHIP	470 5% 1/10W	R409	1-216-129-00	RES-CHIP	2.2M 5% 1/10W
R201	1-215-394-00	METAL	75 1% 1/4W	R411	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R202	1-216-097-91	RES-CHIP	100K 5% 1/10W	R412	1-216-105-91	RES-CHIP	220K 5% 1/10W
R203	1-215-394-00	METAL	75 1% 1/4W	R413	1-216-097-91	RES-CHIP	100K 5% 1/10W
R205	1-216-017-91	RES-CHIP	47 5% 1/10W	R414	1-216-089-91	RES-CHIP	47K 5% 1/10W
R206	1-216-017-91	RES-CHIP	47 5% 1/10W	R415	1-216-097-91	RES-CHIP	100K 5% 1/10W
R207	1-216-045-00	RES-CHIP	680 5% 1/10W	R417	1-216-121-91	RES-CHIP	1M 5% 1/10W
R209	1-216-678-11	METAL CHIP	13K 0.5% 1/10W	R418	1-260-127-11	CARBON	220K 5% 1/2W
R210	1-216-097-91	RES-CHIP	100K 5% 1/10W	R419	1-216-033-00	RES-CHIP	220 5% 1/10W
R211	1-216-033-00	RES-CHIP	220 5% 1/10W	R420	1-216-025-91	RES-CHIP	100 5% 1/10W
R212	1-216-009-91	RES-CHIP	22 5% 1/10W	R421	1-216-025-91	RES-CHIP	100 5% 1/10W
R213	1-216-017-91	RES-CHIP	47 5% 1/10W	R422	1-216-025-91	RES-CHIP	100 5% 1/10W
R214	1-216-009-91	RES-CHIP	22 5% 1/10W	R424	1-216-049-91	RES-CHIP	1K 5% 1/10W
R215	1-219-742-11	CARBON	47 5% 1/2W	R425	1-216-049-91	RES-CHIP	1K 5% 1/10W
R216	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R426	1-216-105-91	RES-CHIP	220K 5% 1/10W
R217	1-216-121-91	RES-CHIP	1M 5% 1/10W	R427	1-216-049-91	RES-CHIP	1K 5% 1/10W
R218	1-216-121-91	RES-CHIP	1M 5% 1/10W	R428	1-216-025-91	RES-CHIP	100 5% 1/10W
R219	1-216-077-91	RES-CHIP	15K 5% 1/10W	R430	1-216-025-91	RES-CHIP	100 5% 1/10W
R220	1-216-113-00	RES-CHIP	470K 5% 1/10W	R431	1-216-113-00	RES-CHIP	470K 5% 1/10W
R221	1-216-113-00	RES-CHIP	470K 5% 1/10W	R436	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R222	1-216-081-00	RES-CHIP	22K 5% 1/10W	R438	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R228	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R439	1-216-041-00	RES-CHIP	470 5% 1/10W
R230	1-216-113-00	RES-CHIP	470K 5% 1/10W	R441	1-216-121-91	RES-CHIP	1M 5% 1/10W
R237	1-249-413-11	CARBON	470 5% 1/4W	R442	1-216-049-91	RES-CHIP	1K 5% 1/10W
R238	1-216-017-91	RES-CHIP	47 5% 1/10W	R443	1-216-025-91	RES-CHIP	100 5% 1/10W
R261	1-216-041-00	RES-CHIP	470 5% 1/10W	R444	1-216-025-91	RES-CHIP	100 5% 1/10W
R301	1-215-394-00	METAL	75 1% 1/4W	R445	1-216-025-91	RES-CHIP	100 5% 1/10W
R303	1-215-394-00	METAL	75 1% 1/4W	R446	1-216-025-91	RES-CHIP	100 5% 1/10W
R305	1-216-017-91	RES-CHIP	47 5% 1/10W	R447	1-216-017-91	RES-CHIP	47 5% 1/10W
R306	1-216-017-91	RES-CHIP	47 5% 1/10W	R448	1-216-017-91	RES-CHIP	47 5% 1/10W
R307	1-216-045-00	RES-CHIP	680 5% 1/10W	R449	1-216-081-00	RES-CHIP	22K 5% 1/10W
R309	1-216-678-11	METAL CHIP	13K 0.5% 1/10W	R450	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R310	1-216-097-91	RES-CHIP	100K 5% 1/10W	R451	1-216-115-00	RES-CHIP	560K 5% 1/10W
R311	1-216-033-00	RES-CHIP	220 5% 1/10W	R453	1-216-073-00	RES-CHIP	10K 5% 1/10W
R312	1-216-009-91	RES-CHIP	22 5% 1/10W	R454	1-216-129-00	RES-CHIP	2.2M 5% 1/10W
R313	1-216-017-91	RES-CHIP	47 5% 1/10W	R455	1-216-097-91	RES-CHIP	100K 5% 1/10W
R314	1-216-009-91	RES-CHIP	22 5% 1/10W	R456	1-216-025-91	RES-CHIP	100 5% 1/10W
R315	1-219-742-11	CARBON	47 5% 1/2W	R457	1-211-895-11	METAL	10M 10% 1/4W
R316	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R458	1-219-398-51	METAL	2.2M 5% 1W
R317	1-216-121-91	RES-CHIP	1M 5% 1/10W	R459	1-211-895-11	METAL	10M 10% 1/4W
R318	1-216-121-91	RES-CHIP	1M 5% 1/10W	R460	1-216-073-00	RES-CHIP	10K 5% 1/10W
R319	1-216-077-91	RES-CHIP	15K 5% 1/10W	R461	1-216-105-91	RES-CHIP	220K 5% 1/10W
R320	1-216-113-00	RES-CHIP	470K 5% 1/10W	R463	1-216-097-91	RES-CHIP	100K 5% 1/10W
R321	1-216-113-00	RES-CHIP	470K 5% 1/10W	R464	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R322	1-216-081-00	RES-CHIP	22K 5% 1/10W	R488	1-216-089-91	RES-CHIP	47K 5% 1/10W
R328	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R490	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R330	1-216-113-00	RES-CHIP	470K 5% 1/10W	R491	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R337	1-249-413-11	CARBON	470 5% 1/4W				
R338	1-216-017-91	RES-CHIP	47 5% 1/10W				
R361	1-216-041-00	RES-CHIP	470 5% 1/10W				
R402	1-216-049-91	RES-CHIP	1K 5% 1/10W				
R403	1-216-081-00	RES-CHIP	22K 5% 1/10W				
							<SPARK GAP>
R404	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	SG101	1-576-354-21	GAP, SPARK	
R405	1-216-045-00	RES-CHIP	680 5% 1/10W	SG201	1-576-354-21	GAP, SPARK	
				SG301	1-576-354-21	GAP, SPARK	

A G

The components identified **△** marked are critical for safety.
Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
SG401	1-576-354-21	GAP, SPARK		C657	1-104-664-11	ELECT	47μF 20% 25V
SG402	1-519-422-11	GAP, SPARK		C658	1-126-927-11	ELECT	2200μF 20% 10V
				C659	1-128-339-11	ELECT	2200μF 20% 10V
		<SOCKET>		C660	1-126-967-11	ELECT	47μF 20% 50V
SK401	△ 1-451-499-11	SOCKET, PICTURE TUBE		C661	1-107-429-11	CERAMIC	0.0022μF 10% 1KV
				C662	1-137-370-11	FILM	0.01μF 5% 50V
X401	1-781-472-21	VIBRATOR, CERAMIC (8MHz)		C663	1-126-965-11	ELECT	22μF 20% 50V
				C665	1-107-909-11	ELECT	47μF 20% 10V
		<CRYSTAL>		C666	1-126-964-11	ELECT	10μF 20% 50V
				C667	1-107-909-11	ELECT	47μF 20% 16V
				C680	1-115-747-51	ELECT	0.0068F 20% 10V
				C681	1-104-664-11	ELECT	47μF 20% 10V
				C682	1-137-368-11	FILM	0.0047μF 5% 50V

* A-1316-480-A G BOARD, COMPLETE				C683	1-104-664-11	ELECT	47μF 20% 10V
*****				C684	1-128-526-11	ELECT	100μF 20% 10V
				C685	1-128-526-11	ELECT	100μF 20% 10V
				C686	1-104-664-11	ELECT	47μF 20% 10V
				C687	1-126-964-11	ELECT	10μF 20% 50V
				C692	1-115-339-11	CERAMIC CHIP	0.1μF 10% 50V
<CAPACITOR>							
C601	△ 1-113-513-11	FILM	1μF 20% 275V	<CONNECTOR>			
C602	△ 1-113-513-11	FILM	1μF 20% 275V	CN601*	1-580-689-11	PIN, CONNECTOR (PC BOARD)	4P
C603	△ 1-113-900-51	CERAMIC	470pF 10% 250V	CN602*	1-691-960-11	PIN, CONNECTOR (PC BOARD)	3P
C604	△ 1-113-900-51	CERAMIC	470pF 10% 250V	CN603*	1-691-960-11	PIN, CONNECTOR (PC BOARD)	3P
C605	△ 1-113-926-91	CERAMIC	0.0047μF 250V	CN650*	1-564-510-11	PLUG, CONNECTOR	7P
C606	△ 1-113-926-91	CERAMIC	0.0047μF 250V	CN652*	1-564-512-11	PLUG, CONNECTOR	9P
C607	1-113-900-11	CERAMIC	470pF 10% 250V	CN653*	1-564-509-11	PLUG, CONNECTOR	6P
C610	1-117-849-11	ELECT	330μF 20% 450V	CN654*	1-564-511-11	PLUG, CONNECTOR	8P
C611	1-137-479-11	FILM	1μF 10% 400V	<DIODE>			
C612	1-136-169-00	FILM	0.22μF 5% 50V	D610	△ 8-719-510-53	DIODE D4SB60L	
C613	1-126-967-11	ELECT	47μF 20% 50V	D612	8-719-911-19	DIODE 1SS119-25	
C614	1-163-251-11	CERAMIC CHIP	100pF 5% 50V	D613	8-719-304-63	DIODE RM11C	
C620	1-128-990-11	FILM	27000pF 5% 800V	D620	8-719-911-19	DIODE 1SS119-25	
C621	1-104-330-91	CERAMIC	470pF 10% 1KV	D631	8-719-063-73	DIODE D1NL20U-TR	
C622	1-104-330-91	CERAMIC	470pF 10% 1KV	D632	8-719-059-23	DIODE P6KE200AG23	
C623	1-136-171-00	FILM	0.33μF 5% 50V	D633	8-719-069-63	DIODE ERB38-06V1	
C624	1-136-171-00	FILM	0.33μF 5% 50V	D634	8-719-911-19	DIODE 1SS119-25	
C625	1-136-167-00	FILM	0.15μF 5% 50V	D635	8-719-110-53	ZENER DIODE RD20ESB2	
C626	1-136-167-00	FILM	0.15μF 5% 50V	D637	8-719-911-19	DIODE 1SS119-25	
C627	1-104-330-91	CERAMIC	470pF 10% 1KV	D650	8-719-064-49	DIODE D4SBL40	
C629	1-137-370-11	FILM	0.01μF 5% 50V	D651	8-719-063-73	DIODE D1NL20U-TR	
C630	1-163-005-11	CERAMIC CHIP	470pF 10% 50V	D652	8-719-052-91	DIODE D4SBS4-F	
C631	1-104-665-11	ELECT	100μF 20% 25V	D653	8-719-022-97	DIODE D2S4MF	
C633	1-164-161-11	CERAMIC CHIP	0.0022μF 10% 50V	D654	8-719-022-97	DIODE D2S4MF	
C634	1-163-009-11	CERAMIC CHIP	0.001μF 10% 50V	D655	8-719-063-73	DIODE D1NL20U-TR	
C650	1-107-656-11	ELECT	100μF 20% 250V	D656	8-719-911-19	DIODE 1SS119-25	
C651	1-107-651-11	ELECT	4.7μF 20% 250V	D660	8-719-110-57	ZENER DIODE RD22ESB2	
C652	1-128-563-11	ELECT	100μF 20% 100V	D661	8-719-110-31	ZENER DIODE RD12ESB2	
C653	1-128-581-11	ELECT	4.7μF 20% 100V	D663	8-719-911-19	DIODE 1SS119-25	
C654	1-126-943-11	ELECT	2200μF 20% 25V	D664	8-719-110-57	ZENER DIODE RD22ESB2	
C655	1-104-664-11	ELECT	47μF 20% 25V	D665	8-719-911-19	DIODE 1SS119-25	
C656	1-126-943-11	ELECT	2200μF 20% 25V	D666	8-719-911-19	DIODE 1SS119-25	
				D680	8-719-989-87	DIODE YG802C09	



The components identified Δ marked are critical for safety.
Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
D681	8-719-109-89	ZENER DIODE RD5.6ESB2		Q652	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D682	8-719-121-26	ZENER DIODE RD9.1ESL2		Q653	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D683	8-719-911-19	DIODE 1SS119-25		Q654	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D690	8-719-911-19	DIODE 1SS119-25		Q667	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D692	8-719-911-19	DIODE 1SS119-25		Q670	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
				Q671	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
		<FUSE>					
F601	Δ 1-576-233-11	FUSE (H.B.C.) (6.3A/250V)					
		<FERRITE BEAD>					
FB630	1-410-396-41	FERRITE	0.45 μ H	R601	Δ 1-220-825-91	CARBON	330K 5% 1/2W
FB632	Δ 1-410-397-31	FERRITE	1.1 μ H	R602	1-216-465-11	METAL OXIDE	27K 5% 2W F
				R603	1-247-895-91	CARBON	470K 5% 1/4W
				R604	1-216-113-00	RES-CHIP	470K 5% 1/10W
				R605	1-216-113-00	RES-CHIP	470K 5% 1/10W
		<IC>					
IC610	8-749-015-89	IC MZ1530		R606	1-216-097-91	RES-CHIP	100K 5% 1/10W
IC630	8-759-535-32	IC FA13842P		R607	1-216-097-91	RES-CHIP	100K 5% 1/10W
IC650	8-749-012-49	IC DM-57N		R608	1-216-073-00	RES-CHIP	10K 5% 1/10W
IC651	8-759-592-79	IC BA00AST-V5		R609	1-216-069-00	RES-CHIP	6.8K 5% 1/10W
IC652	8-759-496-15	IC BA05ST-V5		R610	1-217-152-00	METAL	0.33 10% 2W
IC653	8-759-450-47	IC BA05T		R611	1-217-153-00	METAL	0.47 10% 2W
IC654	8-759-643-66	IC μ PC2912HF (12)		R612	1-249-429-11	CARBON	10K 5% 1/4W
IC680	8-759-321-95	IC HA17431PA		R613	1-216-089-91	RES-CHIP	47K 5% 1/10W
				R614	1-247-807-31	CARBON	100 5% 1/4W
				R615	1-249-427-11	CARBON	6.8K 5% 1/4W
		<COIL>					
L610	1-419-126-21	COIL, CHOKE (AFC)	216 μ H	R616	1-216-671-11	METAL CHIP	6.8K 0.5% 1/10W
L611	1-411-674-11	INDUCTOR	68 μ H	R617	1-249-417-11	CARBON	1K 5% 1/4W
L650	1-414-742-21	INDUCTOR	22 μ H	R618	1-216-369-00	METAL OXIDE	1 5% 2W F
L651	1-414-742-21	INDUCTOR	22 μ H	R620	1-202-933-61	FUSIBLE	0.1 10% 1/2W F
L652	1-412-529-11	INDUCTOR	22 μ H	R621	1-249-432-11	CARBON	18K 5% 1/4W
L653	1-412-529-11	INDUCTOR	22 μ H	R622	1-216-089-91	RES-CHIP	47K 5% 1/10W
L680	1-414-742-21	INDUCTOR	22 μ H	R623	1-218-642-11	METAL OXIDE	100K 5% 1W F
				R624	1-218-642-11	METAL OXIDE	100K 5% 1W F
				R625	1-216-349-00	METAL OXIDE	1 5% 1W F
				R626	1-216-349-00	METAL OXIDE	1 5% 1W F
		<PHOTO COUPLER>					
PH620	8-749-924-35	PHOTO COUPLER ON3171-R		R627	1-216-683-11	METAL CHIP	22K 0.5% 1/10W
PH630	8-749-924-35	PHOTO COUPLER ON3171-R		R628	1-216-695-11	METAL CHIP	68K 0.5% 1/10W
				R629	1-216-683-11	METAL CHIP	22K 0.5% 1/10W
				R630	1-249-387-11	CARBON	3.3 5% 1/4W F
				R632	1-215-399-00	METAL	120 1% 1/4W
		<IC LINK>					
PS650 Δ	1-533-593-31	LINK, IC (2A/90V AC, 60V DC)		R633	1-260-135-11	CARBON	1M 5% 1/2W
				R634	1-260-135-11	CARBON	1M 5% 1/2W
				R635	1-216-465-11	METAL OXIDE	27K 5% 2W F
				R636	1-247-863-91	CARBON	22K 5% 1/4W
				R637	1-219-134-11	FUSIBLE	0.1 10% 1/4W
		<TRANSISTOR>					
Q603	8-729-045-39	TRANSISTOR MX0842AB-F		R638	1-219-134-11	FUSIBLE	0.1 10% 1/4W
Q610	8-729-119-76	TRANSISTOR 2SA1175-HFE		R649	1-249-437-11	CARBON	47K 5% 1/4W F
Q621	8-729-119-78	TRANSISTOR 2SC2785-HFE		R650	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
Q630	8-729-045-03	TRANSISTOR 2SK2647-01MR-F91		R652	1-216-113-00	RES-CHIP	470K 5% 1/10W
Q631	8-729-041-66	TRANSISTOR 2SC4015TV2		R653	1-249-413-11	CARBON	470 5% 1/4W
Q632	8-729-041-66	TRANSISTOR 2SC4015TV2		R654	1-211-796-11	FUSIBLE	1 5% 1/2W F
Q633	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R655	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
Q650	8-729-119-76	TRANSISTOR 2SA1175-HFE		R656	1-260-292-11	CARBON	1 5% 1/2W
Q651	8-729-230-45	TRANSISTOR 2SC2458-YGR		R657	1-249-443-11	CARBON	0.47 5% 1/4W F
				R658	1-216-073-00	RES-CHIP	10K 5% 1/10W



The components identified Δ marked are critical for safety.
Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK		REF.NO.	PART NO.	DESCRIPTION	REMARK			
R659	1-216-049-91	RES-CHIP	1K	5%	1/10W	<VARISTOR>					
R660	1-216-073-00	RES-CHIP	10K	5%	1/10W	VDR601 Δ 1-801-268-51 VARISTOR TNR14V471K660					
R661	1-247-807-31	CARBON	100	5%	1/4W	VDR602 Δ 1-810-622-11 VARISTOR					
R662	1-216-073-00	RES-CHIP	10K	5%	1/10W						
R663	1-216-073-00	RES-CHIP	10K	5%	1/10W						
R664	1-216-073-00	RES-CHIP	10K	5%	1/10W						
R665	1-216-057-00	RES-CHIP	2.2K	5%	1/10W						
R666	1-216-073-00	RES-CHIP	10K	5%	1/10W						
R667	1-216-089-91	RES-CHIP	47K	5%	1/10W						
R668	1-215-457-00	METAL	33K	1%	1/4W	* A-1346-859-B D BOARD, COMPLETE					
R670	1-216-677-11	METAL CHIP	12K	0.5%	1/10W						
R671	1-216-677-11	METAL CHIP	12K	0.5%	1/10W	3-710-578-01 COVER, VOLUME, 6 MOLD (RV901)					
R672	1-216-664-11	METAL CHIP	3.6K	0.5%	1/10W	4-070-828-01 INSULATING SHEET (Q515)					
R673	1-216-073-00	RES-CHIP	10K	5%	1/10W	4-070-829-02 INSULATING SHEET (IC502)					
R674	1-216-097-91	RES-CHIP	100K	5%	1/10W	4-070-830-01 INSULATING SHEET (IC701)					
R675	1-216-668-11	METAL CHIP	5.1K	0.5%	1/10W	4-382-854-11 SCREW (M3X10), P, SW (+)					
R676	1-216-663-11	METAL CHIP	3.3K	0.5%	1/10W	(IC701, Q704, Q705, Q905, Q906, R918)					
R677	1-216-661-11	METAL CHIP	2.7K	0.5%	1/10W	7-685-647-79 SCREW +BVTP 3X10 TYPE2 TT(B)					
R678	1-216-391-11	METAL OXIDE	1.5	5%	3W F	(D511, IC502, Q508, Q515, R547)					
R680	1-215-475-00	METAL	180K	1%	1/4W						
R681	1-216-073-00	RES-CHIP	10K	5%	1/10W	<CAPACITOR>					
R682	1-216-049-91	RES-CHIP	1K	5%	1/10W	C501 1-163-021-91 CERAMIC CHIP 0.01 μ F		10%	50V		
R683	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	C502 1-136-169-00 FILM 0.22 μ F		5%	50V		
R684	1-216-073-00	RES-CHIP	10K	5%	1/10W	C503 1-163-021-91 CERAMIC CHIP 0.01 μ F		10%	50V		
R685	1-216-049-91	RES-CHIP	1K	5%	1/10W	C504 1-163-017-00 CERAMIC CHIP 0.0047 μ F		10%	50V		
R686	1-216-033-00	RES-CHIP	220	5%	1/10W	C505 1-163-021-91 CERAMIC CHIP 0.01 μ F		10%	50V		
R687	1-216-081-00	RES-CHIP	22K	5%	1/10W						
R688	1-215-473-00	METAL	150K	1%	1/4W	C506 1-137-194-81 FILM 0.47 μ F		5%	50V		
R693	1-260-085-11	CARBON	68	5%	1/2W	C507 1-136-169-00 FILM 0.22 μ F		5%	50V		
R694	1-216-073-00	RES-CHIP	10K	5%	1/10W	C508 1-126-965-11 ELECT 22 μ F		20%	50V		
R695	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	C509 1-117-670-31 FILM 0.82 μ F		5%	250V		
R696	1-249-407-11	CARBON	150	5%	1/4W	C510 1-117-398-11 ELECT 33 μ F		20%	250V		
<RELAY>											
RY602 Δ 1-755-318-11 RELAY, POWER											
RY603 Δ 1-755-067-21 RELAY											
<SPARK GAP>											
SG601 Δ 1-533-982-11 GAP, SPARK											
<TRANSFORMER>											
T601	Δ 1-429-180-11	TRANSFORMER, LINE FILTER			C521 1-117-666-11 FILM 0.39 μ F		5%	250V			
T620	1-433-894-11	TRANSFORMER, CONVERTER (PIT)	C522 1-137-368-11 FILM 0.0047 μ F		5%	50V					
T621	1-429-992-11	TRANSFORMER, CONVERTER (PRT)	C523 1-137-368-11 FILM 0.0047 μ F		5%	50V					
T630	1-433-895-31	TRANSFORMER, CONVERTER (SRT)	C524 1-163-133-00 CERAMIC CHIP 470pF		5%	50V					
<THERMISTOR>											
TH601	Δ 1-809-260-11	THERMISTOR, POWER	C525 1-104-760-11 CERAMIC CHIP 0.047 μ F		10%	50V					
THP601 Δ 1-809-827-31 THERMISTOR, POSITIVE											
<TRANSFORMER>											
C526	1-163-021-91	CERAMIC CHIP 0.01 μ F	C531 1-107-846-11 FILM 0.1 μ F		5%	250V					
C527	1-163-021-91	CERAMIC CHIP 0.01 μ F	C532 1-163-009-11 CERAMIC CHIP 0.001 μ F		10%	50V					
C528	1-117-663-31	FILM 0.22 μ F	C533 1-107-889-11 ELECT 220 μ F		20%	25V					
C529	1-104-665-11	ELECT 100 μ F	C534 1-107-889-11 ELECT 220 μ F		20%	25V					
C530	1-163-021-91	CERAMIC CHIP 0.01 μ F									



REF.NO.	PART NO.	DESCRIPTION	REMARK		REF.NO.	PART NO.	DESCRIPTION	REMARK	
C535	1-163-021-91	CERAMIC CHIP 0.01μF	10%	50V	C905	1-163-127-00	CERAMIC CHIP 270pF	5%	50V
C536	1-126-967-11	ELECT 47μF	20%	50V	C907	1-163-257-11	CERAMIC CHIP 180pF	5%	50V
C537	1-113-694-11	FILM 0.056μF	5%	400V	C908	1-163-021-91	CERAMIC CHIP 0.01μF	10%	50V
C538	1-163-021-91	CERAMIC CHIP 0.01μF	10%	50V	C909	1-126-935-11	ELECT 470μF	20%	16V
C539	1-163-017-00	CERAMIC CHIP 0.0047μF	10%	50V	C910	1-126-962-11	ELECT 3.3μF	20%	50V
C540	1-106-343-00	MYLAR 0.001μF	10%	200V	C912	1-106-383-00	MYLAR 0.047μF	10%	200V
C541	1-164-161-11	CERAMIC CHIP 0.0022μF	10%	50V	C913	1-119-748-11	ELECT 33μF	20%	400V
C542	1-163-021-91	CERAMIC CHIP 0.01μF	10%	50V	C914	1-106-383-00	MYLAR 0.047μF	10%	200V
C543	1-135-350-11	FILM 3600pF	3%	1.8KV	C915	1-136-169-00	FILM 0.22μF	5%	50V
C544	1-125-925-11	FILM MELF 0.027μF	5%	400V	C916	1-117-626-11	FILM 2000pF	3%	1.2KV
C545	1-107-597-11	CERAMIC 22pF	5%	500V	C917	1-117-665-11	FILM 0.33μF	5%	250V
C546	1-107-444-11	CERAMIC 100pF	5%	2KV	C918	1-106-359-00	MYLAR 0.0047μF	10%	100V
C547	1-130-061-91	FILM 0.0015μF	5%	630V	C919	1-115-350-51	CERAMIC 0.0047μF	2KV	
C548	1-162-134-11	CERAMIC 470pF	10%	2KV	C920	1-137-372-11	FILM 0.022μF	5%	50V
C549	1-130-495-00	FILM 0.1μF	5%	50V	C921	1-106-228-00	MYLAR 0.22μF	10%	100V
C550	1-127-833-11	FILM 0.15μF	5%	400V	C922	1-106-220-00	MYLAR 0.1μF	10%	100V
C551	1-163-017-00	CERAMIC CHIP 0.0047μF	10%	50V	C923	1-106-355-12	MYLAR 0.0033μF	10%	200V
C552	1-163-021-91	CERAMIC CHIP 0.01μF	10%	50V	C924	1-106-220-00	MYLAR 0.1μF	10%	100V
C554	1-107-444-11	CERAMIC 100pF	5%	2KV	C925	1-126-967-11	ELECT 47μF	20%	50V
C555	1-107-683-11	ELECT 2.2μF		250V	C926	1-126-964-11	ELECT 10μF	20%	50V
C556	1-115-356-11	FILM 1.2μF	5%	250V	C927	1-163-243-11	CERAMIC CHIP 47pF	5%	50V
C557	1-163-021-91	CERAMIC CHIP 0.01μF	10%	50V	C928	1-163-133-00	CERAMIC CHIP 470pF	5%	50V
C558	1-104-665-11	ELECT 100μF	20%	25V	C929	1-164-004-11	CERAMIC CHIP 0.1μF	10%	25V
C559	1-107-649-11	ELECT 2.2μF	20%	250V	C930	1-163-227-11	CERAMIC CHIP 10pF	0.5pF	50V
C560	1-163-021-91	CERAMIC CHIP 0.01μF	10%	50V	C931	1-126-964-11	ELECT 10μF	20%	50V
C561	1-104-664-11	ELECT 47μF	20%	25V	C932	1-163-021-91	CERAMIC CHIP 0.01μF	10%	50V
C562	1-163-021-91	CERAMIC CHIP 0.01μF	10%	50V	C933	1-126-960-11	ELECT 1μF	20%	50V
C563	1-163-011-11	CERAMIC CHIP 0.0015μF	10%	50V	C935	1-163-275-11	CERAMIC CHIP 0.001μF	5%	50V
C564	1-126-960-11	ELECT 1μF	20%	50V					
C565	1-164-004-11	CERAMIC CHIP 0.1μF	10%	25V					
C566	1-137-370-11	FILM 0.01μF	5%	50V					
C567	1-164-161-11	CERAMIC CHIP 0.0022μF	10%	50V					
C568	1-104-760-11	CERAMIC CHIP 0.047μF	10%	50V					
C571	1-163-227-11	CERAMIC CHIP 10pF	0.5pF	50V					
C572	1-163-009-11	CERAMIC CHIP 0.001μF	10%	50V					
C573	1-106-375-12	MYLAR 0.022μF		200V					
C574	1-163-017-00	CERAMIC CHIP 0.0047μF	10%	50V					
C575	1-163-021-91	CERAMIC CHIP 0.01μF	10%	50V					
C577	1-126-964-11	ELECT 10μF	20%	50V					
C701	1-128-560-11	ELECT 22μF	20%	100V					
C702	1-128-562-11	ELECT 47μF	20%	100V					
C703	1-104-331-11	CERAMIC 0.0022μF	10%	1KV					
C704	1-104-568-11	CERAMIC 470pF	10%	2KV					
C706	1-164-004-11	CERAMIC CHIP 0.1μF	10%	25V					
C707	1-130-495-00	FILM 0.1μF	5%	50V					
C708	1-126-942-61	ELECT 1000μF	20%	25V					
C709	1-163-021-91	CERAMIC CHIP 0.01μF	10%	50V					
C710	1-107-894-11	ELECT 220μF	20%	35V					
C711	1-163-019-00	CERAMIC CHIP 0.0068μF	10%	50V					
C712	1-106-228-00	MYLAR 0.22μF	10%	100V					
C713	1-126-942-61	ELECT 1000μF	20%	25V					
C715	1-164-004-11	CERAMIC CHIP 0.1μF	10%	25V					
C720	1-126-964-11	ELECT 10μF	20%	50V					
C901	1-163-021-91	CERAMIC CHIP 0.01μF	10%	50V					
C902	1-104-665-11	ELECT 100μF	20%	25V					
C903	1-126-964-11	ELECT 10μF	20%	50V					
<CONNECTOR>									
CN501*1-564-509-11 PLUG, CONNECTOR 6P									
CN502*1-564-510-11 PLUG, CONNECTOR 7P									
CN503*1-508-879-11 BASE POST									
CN504 1-784-786-11 CONNECTOR, FFC 25P									
CN505 1-784-786-11 CONNECTOR, FFC 25P									
CN506 1-764-101-11 PIN, CONNECTOR (PC BOARD) 2P									
CN508*1-564-511-11 PLUG, CONNECTOR 8P									
CN509*1-778-955-11 PIN, CONNECTOR (PC BOARD) 10P									
<DIODE>									
D504 8-719-988-61 DIODE 1SS355TE-17									
D505 8-719-110-36 ZENER DIODE RD13ESB2									
D506 8-719-991-33 DIODE 1SS133T-77									
D507 8-719-063-89 DIODE YG911S3R									
D508 8-719-031-79 DIODE D5SC4M									
D509 8-719-991-33 DIODE 1SS133T-77									
D510 8-719-109-85 ZENER DIODE RD5.1ESB2									
D511 8-719-066-36 DIODE FMQ-G5GS									
D512 8-719-988-61 DIODE 1SS355TE-17									
D513 8-719-991-33 DIODE 1SS133T-77									
D514 8-719-991-33 DIODE 1SS133T-77									
D515 8-719-109-89 ZENER DIODE RD5.6ESB2									
D516 8-719-991-33 DIODE 1SS133T-77									
D517 8-719-951-30 DIODE ERA91-02									

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
D519	8-719-988-61	DIODE 1SS355TE-17		JR006	1-216-295-91	SHORT	0
D520	8-719-988-61	DIODE 1SS355TE-17		JR008	1-216-295-91	SHORT	0
D522	8-719-988-61	DIODE 1SS355TE-17		JR009	1-216-295-91	SHORT	0
D701	8-719-991-33	DIODE 1SS133T-77		JR010	1-216-295-91	SHORT	0
D702	8-719-991-33	DIODE 1SS133T-77		JR011	1-216-295-91	SHORT	0
D703	8-719-991-33	DIODE 1SS133T-77		JR012	1-216-296-91	SHORT	0
D706	8-719-979-58	DIODE EGP10D		JR013	1-216-295-91	SHORT	0
D707	8-719-109-85	ZENER DIODE RD5.1ESB2		JR014	1-216-296-91	SHORT	0
D708	8-719-908-03	DIODE GP08D		JR015	1-216-296-91	SHORT	0
D709	8-719-948-45	DIODE ERA22-08		JR016	1-216-295-91	SHORT	0
D710	8-719-109-85	ZENER DIODE RD5.1ESB2					
D901	8-719-991-33	DIODE 1SS133T-77					
D902	8-719-110-31	ZENER DIODE RD12ESB2					
D904	8-719-988-61	DIODE 1SS355TE-17		L501	1-412-537-31	INDUCTOR	100μH
D905	8-719-110-36	ZENER DIODE RD13ESB2		L502	1-406-673-11	COIL, CHOKE	2.2mH
D906	8-719-063-89	DIODE YG911S3R		L503	1-406-671-11	COIL, CHOKE	1mH
D907	8-719-930-97	ZENER DIODE HZS16NB2TD		L504	1-406-675-11	COIL, CHOKE	4.7mH
D908	8-719-018-82	DIODE RGP02-20EL-6394		L505	1-416-401-31	COIL, CHOKE	5mH
D909	8-719-930-97	ZENER DIODE HZS16NB2TD		L901	1-412-537-31	INDUCTOR	100μH
D910	8-719-991-33	DIODE 1SS133T-77		L902	1-406-660-41	COIL, CHOKE	15μH
D912	8-719-979-58	DIODE EGP10D					
D913	8-719-991-33	DIODE 1SS133T-77					
D914	8-719-991-33	DIODE 1SS133T-77					
D915	8-719-929-72	ZENER DIODE HZS33NB2		Q501	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
D917	8-719-988-61	DIODE 1SS355TE-17		Q502	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D918	8-719-991-33	DIODE 1SS133T-77		Q503	8-729-901-97	TRANSISTOR 2SA1036K-Q	
D919	8-719-991-33	DIODE 1SS133T-77		Q504	8-729-901-87	TRANSISTOR 2SC2411K-CQ	
D920	8-719-928-85	ZENER DIODE HZS4.7NB2		Q505	8-729-901-97	TRANSISTOR 2SA1036K-Q	
D921	8-719-988-61	DIODE 1SS355TE-17		Q506	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
D922	8-719-018-82	DIODE RGP02-20EL-6394		Q507	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
D923	8-719-988-61	DIODE 1SS355TE-17		Q508	8-729-048-53	TRANSISTOR 2SJ569LS-CB11	
				Q509	8-729-820-73	TRANSISTOR 2SC3746	
				Q510	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
				Q511	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
FB501	1-410-397-21	FERRITE	1.1μH	Q512	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
FB502	1-410-397-21	FERRITE	1.1μH	Q513	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
FB503	1-412-911-11	FERRITE	1.1μH	Q514	8-729-140-50	TRANSISTOR 2SC3209LK	
FB504	1-412-911-11	FERRITE	1.1μH	Q515	8-729-048-48	TRANSISTOR 2SC5570 (LBSONY)	
FB505	1-412-911-11	FERRITE	1.1μH	Q516	8-729-024-95	TRANSISTOR 2SB1565EF	
FB506	1-410-397-21	FERRITE	1.1μH	Q517	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
FB507	1-410-397-21	FERRITE	1.1μH	Q518	8-729-019-01	TRANSISTOR 2SD2394-EF	
FB901	1-410-397-21	FERRITE	1.1μH	Q519	8-729-033-25	TRANSISTOR DTC114GKA	
				Q520	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
				Q521	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
				Q522	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
				Q523	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
IC501	8-759-585-82	IC BA9759F-E2		Q524	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
IC502	8-759-803-42	IC LA6500-FA		Q525	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
IC503	8-759-058-50	IC XRA10324AF		Q526	8-729-027-35	TRANSISTOR DTA143TKA-T146	
IC701	8-759-444-82	IC LA7841L		Q701	8-729-800-32	TRANSISTOR 2SC2362K-G	
IC901	8-759-585-81	IC BA9758FS-E2		Q702	8-729-178-43	TRANSISTOR 2SC2784-E	
				Q703	8-729-204-91	TRANSISTOR 2SA1049-GR	
				Q704	8-729-207-82	TRANSISTOR 2SC3421-Y	
				Q705	8-729-207-89	TRANSISTOR 2SA1358-Y	
				Q706	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
				Q707	8-729-046-80	TRANSISTOR 2SC4634LS-CB11	



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
Q903	8-729-901-87	TRANSISTOR 2SC2411K-CQ		R547	1-219-726-11	METAL	2.2
Q904	8-729-901-97	TRANSISTOR 2SA1036K-Q		R548	1-249-437-11	CARBON	47K
Q905	8-729-048-53	TRANSISTOR 2SJ569LS-CB11		R549	1-260-288-11	CARBON	0.47
Q906	8-729-044-21	TRANSISTOR 2SK2655-01R-F165		R550	1-260-288-11	CARBON	0.47
Q907	8-729-033-26	TRANSISTOR DTA114GKAT146		R551	1-216-049-91	RES-CHIP	1K
Q908	8-729-033-25	TRANSISTOR DTC114GKA		R552	1-216-097-91	RES-CHIP	100K
<RESISTOR>				R553	1-247-815-91	CARBON	220
				R554	1-216-679-11	METAL CHIP	15K
				R555	1-216-675-91	METAL CHIP	10K
R501	1-215-884-11	METAL OXIDE	47	R556	1-216-683-11	METAL CHIP	22K
R502	1-216-059-00	RES-CHIP	2.7K	R557	1-216-423-11	METAL OXIDE	27
R503	1-216-049-91	RES-CHIP	1K	R558	1-249-437-11	CARBON	47K
R504	1-216-049-91	RES-CHIP	1K	R559	1-216-073-00	RES-CHIP	10K
R505	1-216-049-91	RES-CHIP	1K	R560	1-216-675-91	METAL CHIP	10K
R506	1-216-049-91	RES-CHIP	1K	R561	1-215-443-00	METAL	8.2K
R507	1-216-097-91	RES-CHIP	100K	R562	1-216-677-11	METAL CHIP	12K
R508	1-247-815-91	CARBON	220	R563	1-216-049-91	RES-CHIP	1K
R509	1-216-049-91	RES-CHIP	1K	R564	1-216-677-11	METAL CHIP	12K
R510	1-216-675-91	METAL CHIP	10K	R565	1-216-097-91	RES-CHIP	100K
R511	1-216-065-91	RES-CHIP	4.7K	R566	1-216-687-11	METAL CHIP	33K
R512	1-215-453-00	METAL	22K	R567	1-214-840-00	METAL	100
R513	1-216-049-91	RES-CHIP	1K	R568	1-216-665-11	METAL CHIP	3.9K
R514	1-216-097-91	RES-CHIP	100K	R569	1-216-691-11	METAL CHIP	47K
R515	1-216-049-91	RES-CHIP	1K	R570	1-260-332-51	CARBON	2.2K
R516	1-216-049-91	RES-CHIP	1K	R571	1-249-425-11	CARBON	4.7K
R517	1-216-687-11	METAL CHIP	33K	R572	1-216-385-11	METAL OXIDE	0.47
R518	1-216-691-11	METAL CHIP	47K	R573	1-249-437-11	CARBON	47K
R519	1-216-081-00	RES-CHIP	22K	R574	1-216-097-91	RES-CHIP	100K
R520	1-247-791-91	CARBON	22	R575	1-216-672-11	METAL CHIP	7.5K
R521	1-216-667-11	METAL CHIP	4.7K	R576	1-215-869-11	METAL OXIDE	1K
R522	1-249-437-11	CARBON	47K	R577	1-260-310-71	CARBON	33
R523	1-216-033-00	RES-CHIP	220	R578	1-216-049-91	RES-CHIP	1K
R524	1-216-049-91	RES-CHIP	1K	R579	1-216-049-91	RES-CHIP	1K
R525	1-216-065-91	RES-CHIP	4.7K	R580	1-214-840-00	METAL	100
R526	1-216-097-91	RES-CHIP	100K	R581	1-260-316-51	CARBON	100
R527	1-216-673-11	METAL CHIP	8.2K	R582	1-214-840-00	METAL	100
R528	1-216-677-11	METAL CHIP	12K	R583	1-249-437-11	CARBON	47K
R529	1-216-057-00	RES-CHIP	2.2K	R584	1-249-437-11	CARBON	47K
R530	1-216-049-91	RES-CHIP	1K	R585	1-216-073-00	RES-CHIP	10K
R531	1-216-097-91	RES-CHIP	100K	R586	1-216-683-11	METAL CHIP	22K
R532	1-215-860-11	METAL OXIDE	33	R587	1-215-886-11	METAL OXIDE	100
R533	1-211-796-11	FUSIBLE	1	R588	1-260-085-11	CARBON	68
R534	1-216-689-11	METAL CHIP	39K	R589	1-216-057-00	RES-CHIP	2.2K
R535	1-216-065-91	RES-CHIP	4.7K	R590	1-216-057-00	RES-CHIP	2.2K
R536	1-216-683-11	METAL CHIP	22K	R591	1-247-807-31	CARBON	100
R537	1-249-437-11	CARBON	47K	R593	1-216-073-00	RES-CHIP	10K
R538	1-216-049-91	RES-CHIP	1K	R594	1-216-683-11	METAL CHIP	22K
R539	1-216-097-91	RES-CHIP	100K	R595	1-216-659-11	METAL CHIP	2.2K
R540	1-215-909-11	METAL OXIDE	47	R597	1-216-073-00	RES-CHIP	10K
R541	1-216-295-91	SHORT	0	R598	1-216-675-91	METAL CHIP	10K
R542	1-249-437-11	CARBON	47K	R599	1-216-657-11	METAL CHIP	1.8K
R543	1-216-677-11	METAL CHIP	12K	R701	1-216-049-91	RES-CHIP	1K
R544	1-216-049-91	RES-CHIP	1K	R702	1-249-393-11	CARBON	10
R545	1-216-097-91	RES-CHIP	100K	R703	1-215-459-00	METAL	39K
R546	1-216-381-11	METAL OXIDE	0.22	R704	1-216-655-11	METAL CHIP	1.5K
				R705	1-249-413-11	CARBON	470



The components identified by **☒** in this manual have been carefully factory-selected for eachset in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

The components identified **△** marked are critical for safety. Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK				
R706	1-249-389-11	CARBON	4.7	5%	1/4W F	R935	1-216-089-91	RES-CHIP	47K	5%	1/10W
R707	1-249-389-11	CARBON	4.7	5%	1/4W F	R937	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R708	1-215-881-11	METAL OXIDE	15	5%	2W F	R939	1-216-049-91	RES-CHIP	1K	5%	1/10W
R709	1-216-049-91	RES-CHIP	1K	5%	1/10W	R940	1-216-073-00	RES-CHIP	10K	5%	1/10W
R710	1-216-073-00	RES-CHIP	10K	5%	1/10W	R941	1-216-025-91	RES-CHIP	100	5%	1/10W
R711	1-216-049-91	RES-CHIP	1K	5%	1/10W	R943	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R713	1-216-059-00	RES-CHIP	2.7K	5%	1/10W	R945	1-216-025-91	RES-CHIP	100	5%	1/10W
R714	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R1501	1-216-049-91	RES-CHIP	1K	5%	1/10W
R715	1-249-389-11	CARBON	4.7	5%	1/4W F	R1502	1-216-033-00	RES-CHIP	220	5%	1/10W
R716	1-216-689-11	RES-CHIP	39K	5%	1/10W	R1503	1-216-682-11	METAL CHIP	20K	0.5%	1/10W
R717	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1504	1-216-665-11	METAL CHIP	3.9K	0.5%	1/10W
R718	1-216-681-11	METAL CHIP	18K	0.5%	1/10W	R1505	1-216-667-11	METAL CHIP	4.7K	0.5%	1/10W
R719	1-216-663-11	METAL CHIP	3.3K	0.5%	1/10W	R1506	1-216-049-91	RES-CHIP	1K	5%	1/10W
R720	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1507	1-216-097-91	RES-CHIP	100K	5%	1/10W
R721	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1510	1-216-073-00	RES-CHIP	10K	5%	1/10W
R722	1-260-292-11	CARBON	1	5%	1/2W	R1515	1-215-909-11	METAL OXIDE	47	5%	3W F
R723	1-216-663-11	METAL CHIP	3.3K	0.5%	1/10W	R1517	1-216-089-91	RES-CHIP	47K	5%	1/10W
R724	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W	R1518	1-216-025-91	RES-CHIP	100	5%	1/10W
R725	1-214-798-21	METAL	1.8	1%	1/2W	<VARIABLE RESISTOR>					
R726	1-214-798-21	METAL	1.8	1%	1/2W	<RELAY>					
R727	1-249-381-11	CARBON	1	5%	1/4W F	RY501 1-755-198-11 RELAY					
R728	1-215-865-11	METAL OXIDE	220	5%	1W F	<SPARK GAP>					
R729	1-260-292-11	CARBON	1	5%	1/2W	SG901 1-517-499-21 GAP, SPARK					
R730	1-216-073-00	RES-CHIP	10K	5%	1/10W	SG902 1-519-422-11 GAP, SPARK					
R731	1-216-059-00	RES-CHIP	2.7K	5%	1/10W	SG903 1-519-422-11 GAP, SPARK					
R732	1-219-510-11	CARBON	470K	5%	1/2W	<TRANSFORMER>					
R901	1-216-097-91	RES-CHIP	100K	5%	1/10W	T501	1-435-070-11	TRANSFORMER, HORIZONTAL DRIVE			
R902	1-216-117-00	RES-CHIP	680K	5%	1/10W	T502	1-429-301-11	TRANSFORMER, FERRITE (HCT)			
R903	1-216-089-91	RES-CHIP	47K	5%	1/10W	T503	1-431-413-21	TRANSFORMER, FERRITE (HST)			
R904	1-216-033-00	RES-CHIP	220	5%	1/10W	T505	1-419-127-11	COIL, HORIZONTAL LINEARITY			
R906	1-216-033-00	RES-CHIP	220	5%	1/10W	T701	1-431-414-11	TRANSFORMER, FERRITE (DFT)			
R907	1-216-081-00	RES-CHIP	22K	5%	1/10W	T901	1-416-402-11	INDUCTOR 500μH			
R908	1-216-399-00	METAL OXIDE	6.8	5%	3W F	T902	△ X-4560-175-1	TRANSFORMER ASSY, FLYBACK (NX-4502//J1D4)			
R911	1-216-041-00	RES-CHIP	470	5%	1/10W	<THERMISTOR>					
R912	1-216-049-91	RES-CHIP	1K	5%	1/10W	TH501 1-807-796-11 THERMISTOR					
R914	1-247-791-91	CARBON	22	5%	1/4W	TH502 1-807-796-11 THERMISTOR					
R915	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	*****					
R916	1-249-397-11	CARBON	22	5%	1/4W F						
R917	1-211-824-71	FUSIBLE	220	5%	1/2W F						
R918	1-219-727-11	METAL	68	5%	10W						
R919	1-219-748-11	CARBON	4.7K	5%	1/2W						
R920	1-216-089-91	RES-CHIP	47K	5%	1/10W						
R921	1-249-429-11	CARBON	10K	5%	1/4W						
R922	1-249-389-11	CARBON	4.7	5%	1/4W F						
R923	1-218-762-11	METAL CHIP	270K	0.5%	1/10W						
R924	1-216-073-00	RES-CHIP	10K	5%	1/10W						
R925	1-220-825-11	CARBON	330K	5%	1/2W						
R926	1-219-746-11	CARBON	1K	5%	1/2W						
R927	1-219-746-11	CARBON	1K	5%	1/2W						
R928	1-216-668-11	METAL CHIP	5.1K	0.5%	1/10W						
R929	1-216-675-91	METAL CHIP	10K	0.5%	1/10W						
R930	1-216-653-11	METAL CHIP	1.2K	0.5%	1/10W						
R931	1-216-653-11	METAL CHIP	1.2K	0.5%	1/10W						
R932	1-216-049-91	RES-CHIP	1K	5%	1/10W						
R933	1-216-687-11	METAL CHIP	33K	0.5%	1/10W						
R934	1-216-667-11	METAL CHIP	4.7K	0.5%	1/10W						

The components identified Δ marked are critical for safety.
Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
		* A-1372-740-AH BOARD, COMPLETE [ELSA, FORMAC] * A-1646-207-AH BOARD, COMPLETE [OEM STD]	*****			<THERMISTOR>	
						TH801 1-807-796-11 THERMISTOR	
		<CAPACITOR>					*****
C810	1-126-791-11 ELECT	10 μ F	20%	16V			
C814	1-126-786-11 ELECT	47 μ F	20%	16V			

		<CONNECTOR>				<CONNECTOR>	
		CN801*1-564-526-11 PLUG, CONNECTOR 11P				CN891*1-691-960-11 PIN, CONNECTOR (PC BOARD) 3P	
		<DIODE>				<SWITCH>	
D801	8-719-064-11 DIODE SPR-325MVW					S891 Δ 1-571-433-31 SWITCH, PUSH (AC POWER)	

		<TRANSISTOR>					
Q801	8-729-119-78 TRANSISTOR 2SC2785-HFE						
Q802	8-729-119-78 TRANSISTOR 2SC2785-HFE						*****
Q803	8-729-029-40 TRANSISTOR DTA124ESA						
Q804	8-729-029-40 TRANSISTOR DTA124ESA						

		<RESISTOR>					
R801	1-249-425-11 CARBON	4.7K	5%	1/4W			
R802	1-249-417-11 CARBON	1K	5%	1/4W		<CAPACITOR>	
R803	1-249-417-11 CARBON	1K	5%	1/4W	C001	1-163-009-11 CERAMIC CHIP 0.001 μ F	10% 50V
R804	1-249-421-11 CARBON	2.2K	5%	1/4W	C002	1-163-009-11 CERAMIC CHIP 0.001 μ F	10% 50V
R805	1-249-421-11 CARBON	2.2K	5%	1/4W	C003	1-163-021-91 CERAMIC CHIP 0.01 μ F	10% 50V
R806	1-249-425-11 CARBON	4.7K	5%	1/4W	C005	1-163-255-91 CERAMIC CHIP 150pF	5% 50V
R807	1-249-429-11 CARBON	10K	5%	1/4W	C006	1-163-235-11 CERAMIC CHIP 22pF	5% 50V
R811	1-249-429-11 CARBON	10K	5%	1/4W	C007	1-163-235-11 CERAMIC CHIP 22pF	5% 50V
R812	1-249-429-11 CARBON	10K	5%	1/4W	C008	1-164-004-11 CERAMIC CHIP 0.1 μ F	10% 25V
R813	1-247-863-91 CARBON	22K	5%	1/4W	C009	1-115-339-11 CERAMIC CHIP 0.1 μ F	10% 50V
R814	1-249-441-11 CARBON	100K	5%	1/4W	C010	1-126-967-11 ELECT	47 μ F 20% 50V
R815	1-249-429-11 CARBON	10K	5%	1/4W	C011	1-115-339-11 CERAMIC CHIP 0.1 μ F	10% 50V
R821	1-249-407-11 CARBON	150	5%	1/4W	C012	1-126-967-11 ELECT	47 μ F 20% 50V
R822	1-249-413-11 CARBON	470	5%	1/4W	C013	1-126-965-11 ELECT	22 μ F 20% 50V
R823	1-249-417-11 CARBON	1K	5%	1/4W	C014	1-163-021-91 CERAMIC CHIP 0.01 μ F	10% 50V
R824	1-249-419-11 CARBON	1.5K	5%	1/4W	C015	1-163-021-91 CERAMIC CHIP 0.01 μ F	10% 50V
					C016	1-163-021-91 CERAMIC CHIP 0.01 μ F	10% 50V
		<SWITCH>			C017	1-163-021-91 CERAMIC CHIP 0.01 μ F	10% 50V
S801	1-692-431-21 SWITCH, TACTILE (RESET)				C018	1-163-021-91 CERAMIC CHIP 0.01 μ F	10% 50V
S802	1-692-431-21 SWITCH, TACTILE (ASC)				C019	1-163-021-91 CERAMIC CHIP 0.01 μ F	10% 50V
S803	1-692-431-21 SWITCH, TACTILE (V-)				C020	1-163-021-91 CERAMIC CHIP 0.01 μ F	10% 50V
S804	1-692-431-21 SWITCH, TACTILE (V+)				C021	1-163-021-91 CERAMIC CHIP 0.01 μ F	10% 50V
S805	1-692-431-21 SWITCH, TACTILE (MENU)				C022	1-163-021-91 CERAMIC CHIP 0.01 μ F	10% 50V
S806	1-692-431-21 SWITCH, TACTILE (H-)				C023	1-163-021-91 CERAMIC CHIP 0.01 μ F	10% 50V
S807	1-692-431-21 SWITCH, TACTILE (H+)				C024	1-164-161-11 CERAMIC CHIP 0.0022 μ F	10% 50V
					C025	1-163-009-11 CERAMIC CHIP 0.001 μ F	10% 50V
					C026	1-104-665-11 ELECT	100 μ F 20% 25V
					C027	1-115-339-11 CERAMIC CHIP 0.1 μ F	10% 50V
					C028	1-163-220-11 CERAMIC CHIP 3pF	0.25pF 50V
					C029	1-163-241-11 CERAMIC CHIP 39pF	5% 50V
					C031	1-126-964-11 ELECT	10 μ F 20% 50V



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C033	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C097	1-126-964-11	ELECT 10μF	20% 50V
C036	1-163-037-11	CERAMIC CHIP 0.022μF	10% 50V	C098	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C037	1-126-964-11	ELECT 10μF	20% 50V	C099	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C038	1-126-964-11	ELECT 10μF	20% 50V	C1003	1-104-664-11	ELECT 47μF	20% 25V
C039	1-126-964-11	ELECT 10μF	20% 50V	C1004	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C040	1-126-964-11	ELECT 10μF	20% 50V	C1005	1-163-005-11	CERAMIC CHIP 470pF	10% 50V
C041	1-126-964-11	ELECT 10μF	20% 50V	C1006	1-164-161-11	CERAMIC CHIP 0.0022μF	10% 50V
C042	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C1007	1-115-339-11	CERAMIC CHIP 0.1μF	10% 50V
C043	1-126-965-11	ELECT 22μF	20% 50V	C5002	1-126-964-11	ELECT 10μF	20% 50V
C044	1-163-037-11	CERAMIC CHIP 0.022μF	10% 50V	C5003	1-126-933-11	ELECT 100μF	20% 16V
C045	1-163-037-11	CERAMIC CHIP 0.022μF	10% 50V	C5004	1-104-664-11	ELECT 47μF	20% 25V
C046	1-163-037-11	CERAMIC CHIP 0.022μF	10% 50V	C5005	1-104-664-11	ELECT 47μF	20% 25V
C047	1-163-037-11	CERAMIC CHIP 0.022μF	10% 50V	C5008	1-104-664-11	ELECT 47μF	20% 25V
C048	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C5009	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C049	1-126-964-11	ELECT 10μF	20% 50V	C5101	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C050	1-126-964-11	ELECT 10μF	20% 50V	C5103	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C051	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C5105	1-104-664-11	ELECT 47μF	20% 25V
C052	1-126-933-11	ELECT 100μF	20% 16V	C5106	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C053	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C5108	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C054	1-115-339-11	CERAMIC CHIP 0.1μF	10% 50V	C5110	1-104-664-11	ELECT 47μF	20% 25V
C055	1-104-664-11	ELECT 47μF	20% 25V	C5203	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C056	1-126-965-11	ELECT 22μF	20% 50V	C5205	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C057	1-126-964-11	ELECT 10μF	20% 50V	C5206	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C058	1-164-690-91	CERAMIC CHIP 0.0022μF	5% 50V	C5301	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C059	1-126-964-11	ELECT 10μF	20% 50V	C5303	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C061	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C5304	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C062	1-126-925-11	ELECT 470μF	20% 10V	C5305	1-104-664-11	ELECT 47μF	20% 25V
C063	1-164-690-91	CERAMIC CHIP 0.0022μF	5% 50V	C5306	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C064	1-115-419-11	CERAMIC CHIP 3300pF	5% 25V	C5308	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C065	1-126-960-11	ELECT 1μF	20% 50V	C5310	1-104-664-11	ELECT 47μF	20% 25V
C066	1-164-690-91	CERAMIC CHIP 0.0022μF	5% 50V	C5401	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C067	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V	C5403	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C068	1-136-169-00	FILM 0.22μF	5% 50V	C5404	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C069	1-115-339-11	CERAMIC CHIP 0.1μF	10% 50V	C5406	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C070	1-126-767-11	ELECT 1000μF	20% 16V	C5408	1-163-005-11	CERAMIC CHIP 470pF	10% 50V
C071	1-163-007-11	CERAMIC CHIP 680pF	10% 50V	C5409	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C072	1-126-942-61	ELECT 1000μF	20% 25V	C5413	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C073	1-115-339-11	CERAMIC CHIP 0.1μF	10% 50V	C5501	1-126-967-11	ELECT 47μF	20% 50V
C074	1-163-137-00	CERAMIC CHIP 680pF	5% 50V	C5602	1-115-339-11	CERAMIC CHIP 0.1μF	10% 50V
C075	1-163-251-11	CERAMIC CHIP 100pF	5% 50V	C5606	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C077	1-115-339-11	CERAMIC CHIP 0.1μF	10% 50V	C5607	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C078	1-136-169-00	FILM 0.22μF	5% 50V	<CONNECTOR>			
C079	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	CN001	1-784-500-11	CONNECTOR, FFC/FPC 21P	
C080	1-126-967-11	ELECT 47μF	20% 50V	CN002*	1-564-511-11	PLUG, CONNECTOR 8P	
C082	1-104-664-11	ELECT 47μF	20% 25V	CN007*	1-564-512-11	PLUG, CONNECTOR 9P	
C083	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	CN010	1-784-786-11	CONNECTOR, FFC 25P	
C084	1-126-964-11	ELECT 10μF	20% 50V	CN011	1-784-786-11	CONNECTOR, FFC 25P	
C085	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	CN5001*	1-564-509-11	PLUG, CONNECTOR 6P	
C086	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	CN5002*	1-564-511-11	PLUG, CONNECTOR 8P	
C087	1-126-964-11	ELECT 10μF	20% 50V	CN5003*	1-564-505-11	PLUG, CONNECTOR 2P	
C089	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	<DIODE>			
C090	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	D001	8-719-062-51	DIODE 1PS226-115	
C091	1-126-933-11	ELECT 100μF	20% 16V				
C094	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V				
C095	1-117-722-11	ELECT 2200μF	20% 10V				
C096	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V				





REF.NO.	PART NO.	DESCRIPTION	REMARK		REF.NO.	PART NO.	DESCRIPTION	REMARK			
R030	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1003	1-216-049-91	RES-CHIP	1K	5%	1/10W
R031	1-216-669-11	METAL CHIP	5.6K	0.5%	1/10W	R1004	1-216-049-91	RES-CHIP	1K	5%	1/10W
R032	1-216-665-11	METAL CHIP	3.9K	0.5%	1/10W	R1005	1-216-049-91	RES-CHIP	1K	5%	1/10W
R034	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1006	1-216-049-91	RES-CHIP	1K	5%	1/10W
R035	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	R1007	1-216-049-91	RES-CHIP	1K	5%	1/10W
R036	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W	R1008	1-216-667-11	METAL CHIP	4.7K	0.5%	1/10W
R037	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1009	1-216-049-91	RES-CHIP	1K	5%	1/10W
R039	1-216-025-91	RES-CHIP	100	5%	1/10W	R1010	1-216-049-91	RES-CHIP	1K	5%	1/10W
R040	1-216-025-91	RES-CHIP	100	5%	1/10W	R1011	1-216-049-91	RES-CHIP	1K	5%	1/10W
R042	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1012	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R043	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1013	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R044	1-216-657-11	METAL CHIP	1.8K	0.5%	1/10W	R1014	1-216-049-91	RES-CHIP	1K	5%	1/10W
R045	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1015	1-216-049-91	RES-CHIP	1K	5%	1/10W
R047	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1016	1-216-049-91	RES-CHIP	1K	5%	1/10W
R048	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1017	1-216-049-91	RES-CHIP	1K	5%	1/10W
R049	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1018	1-216-049-91	RES-CHIP	1K	5%	1/10W
R050	1-216-089-91	RES-CHIP	47K	5%	1/10W	R1019	1-216-049-91	RES-CHIP	1K	5%	1/10W
R051	1-216-077-91	RES-CHIP	15K	5%	1/10W	R1020	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R052	1-216-077-91	RES-CHIP	15K	5%	1/10W	R1021	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R053	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	R1022	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R054	1-216-077-91	RES-CHIP	15K	5%	1/10W	R1023	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R055	1-216-077-91	RES-CHIP	15K	5%	1/10W	R1024	1-216-681-11	METAL CHIP	18K	0.5%	1/10W
R056	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1025	1-216-025-91	RES-CHIP	100	5%	1/10W
R057	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1026	1-216-109-00	RES-CHIP	330K	5%	1/10W
R058	1-216-067-00	RES-CHIP	5.6K	5%	1/10W	R1027	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R059	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R1028	1-216-647-11	METAL CHIP	680	0.5%	1/10W
R060	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R1029	1-216-025-91	RES-CHIP	100	5%	1/10W
R061	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1030	1-216-025-91	RES-CHIP	100	5%	1/10W
R062	1-216-613-11	METAL CHIP	27	0.5%	1/10W	R1031	1-216-025-91	RES-CHIP	100	5%	1/10W
R063	1-216-613-11	METAL CHIP	27	0.5%	1/10W	R1032	1-216-025-91	RES-CHIP	100	5%	1/10W
R064	1-216-613-11	METAL CHIP	27	0.5%	1/10W	R1033	1-216-025-91	RES-CHIP	100	5%	1/10W
R066	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1034	1-216-025-91	RES-CHIP	100	5%	1/10W
R067	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1035	1-216-025-91	RES-CHIP	100	5%	1/10W
R075	1-215-407-00	METAL	270	1%	1/4W	R1036	1-216-025-91	RES-CHIP	100	5%	1/10W
R076	1-215-407-00	METAL	270	1%	1/4W	R1037	1-216-025-91	RES-CHIP	100	5%	1/10W
R077	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1038	1-216-025-91	RES-CHIP	100	5%	1/10W
R078	1-216-121-91	RES-CHIP	1M	5%	1/10W	R1039	1-216-025-91	RES-CHIP	100	5%	1/10W
R079	1-216-295-91	SHORT	0			R1040	1-216-025-91	RES-CHIP	100	5%	1/10W
R080	1-216-295-91	SHORT	0			R1041	1-216-025-91	RES-CHIP	100	5%	1/10W
R081	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1042	1-216-025-91	RES-CHIP	100	5%	1/10W
R082	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1043	1-216-025-91	RES-CHIP	100	5%	1/10W
R084	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1044	1-216-667-11	METAL CHIP	4.7K	0.5%	1/10W
R085	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1045	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R086	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1047	1-216-073-00	RES-CHIP	10K	5%	1/10W
R090	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1049	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R091	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1050	1-216-073-00	RES-CHIP	10K	5%	1/10W
R092	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1051	1-216-097-91	RES-CHIP	100K	5%	1/10W
R093	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1052	1-216-073-00	RES-CHIP	10K	5%	1/10W
R094	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1053	1-216-049-91	RES-CHIP	1K	5%	1/10W
R095	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1054	1-216-073-00	RES-CHIP	10K	5%	1/10W
R096	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	R1055	1-216-049-91	RES-CHIP	1K	5%	1/10W
R097	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1056	1-216-073-00	RES-CHIP	10K	5%	1/10W
R098	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1057	1-216-049-91	RES-CHIP	1K	5%	1/10W
R099	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1058	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1001	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1059	1-216-049-91	RES-CHIP	1K	5%	1/10W
R1002	1-216-049-91	RES-CHIP	1K	5%	1/10W	R1061	1-216-073-00	RES-CHIP	10K	5%	1/10W



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R1062	1-216-049-91	RES-CHIP	1K 5% 1/10W	R5510	1-249-382-11	CARBON	1.2 5% 1/4W F
R1063	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R5602	1-216-081-00	RES-CHIP	22K 5% 1/10W
R1064	1-216-049-91	RES-CHIP	1K 5% 1/10W	R5603	1-216-077-91	RES-CHIP	15K 5% 1/10W
R1065	1-216-125-00	RES-CHIP	1.5M 5% 1/10W	R5604	1-216-081-00	RES-CHIP	22K 5% 1/10W
R1066	1-216-073-00	RES-CHIP	10K 5% 1/10W	R5605	1-216-097-91	RES-CHIP	100K 5% 1/10W
R1067	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R5607	1-215-862-11	METAL OXIDE	68 5% 1W F
R1068	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R5610	1-216-308-00	RES-CHIP	4.7 5% 1/10W
R1069	1-216-049-91	RES-CHIP	1K 5% 1/10W				
R1070	1-216-057-00	RES-CHIP	2.2K 5% 1/10W				<CRYSTAL>
R1071	1-216-081-00	RES-CHIP	22K 5% 1/10W	X001	1-760-682-21	VIBRATOR, CRYSTAL (24.756MHz)	
R5003	1-216-295-91	SHORT	0				
R5005	1-216-081-00	RES-CHIP	22K 5% 1/10W				
R5006	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R5007	1-216-049-91	RES-CHIP	1K 5% 1/10W				
R5010	1-216-295-91	SHORT	0				
R5011	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R5015	1-216-049-91	RES-CHIP	1K 5% 1/10W				
R5108	1-216-308-00	RES-CHIP	4.7 5% 1/10W				
R5109	1-216-308-00	RES-CHIP	4.7 5% 1/10W				
R5110	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R5113	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R5115	1-215-859-00	METAL OXIDE	22 5% 1W F				
R5116	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R5119	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R5122	1-215-859-00	METAL OXIDE	22 5% 1W F				
R5205	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R5206	1-215-859-00	METAL OXIDE	22 5% 1W F				
R5207	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R5208	1-216-069-00	RES-CHIP	6.8K 5% 1/10W				
R5209	1-216-308-00	RES-CHIP	4.7 5% 1/10W				
R5308	1-216-308-00	RES-CHIP	4.7 5% 1/10W				
R5309	1-216-308-00	RES-CHIP	4.7 5% 1/10W				
R5310	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R5313	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R5315	1-215-859-00	METAL OXIDE	22 5% 1W F				
R5316	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R5319	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R5322	1-215-859-00	METAL OXIDE	22 5% 1W F				
R5406	1-216-083-00	RES-CHIP	27K 5% 1/10W				
R5407	1-216-085-00	RES-CHIP	33K 5% 1/10W				
R5408	1-216-308-00	RES-CHIP	4.7 5% 1/10W				
R5409	1-216-308-00	RES-CHIP	4.7 5% 1/10W				
R5410	1-216-081-00	RES-CHIP	22K 5% 1/10W				
R5413	1-216-097-91	RES-CHIP	100K 5% 1/10W				
R5415	1-215-887-00	METAL OXIDE	150 5% 2W F				
R5416	1-216-081-00	RES-CHIP	22K 5% 1/10W				
R5419	1-216-097-91	RES-CHIP	100K 5% 1/10W				
R5422	1-216-451-11	METAL OXIDE	120 5% 2W F				
R5502	1-216-081-00	RES-CHIP	22K 5% 1/10W				
R5503	1-216-081-00	RES-CHIP	22K 5% 1/10W				
R5504	1-216-089-91	RES-CHIP	47K 5% 1/10W				
R5505	1-216-089-91	RES-CHIP	47K 5% 1/10W				
R5506	1-216-069-00	RES-CHIP	6.8K 5% 1/10W				
R5507	1-249-382-11	CARBON	1.2 5% 1/4W F				
R5508	1-249-382-11	CARBON	1.2 5% 1/4W F				
R5509	1-249-382-11	CARBON	1.2 5% 1/4W F				

