

HCD-DZ100K/DZ500KF

SERVICE MANUAL

E Model



Ver. 1.1 2005.11



Photo: HCD-DZ100K

HCD-DZ100K/DZ500KF are the amplifier , DVD/CD and tuner section in DAV-DZ100K/DZ500KF.

This system incorporates with Dolby*¹ Digital and Dolby Pro Logic (II) adaptive matrix surround decoder and the DTS*² Digital Surround System.

*1 Manufactured under license from Dolby Laboratories. "Dolby," "Pro Logic," and the double-D symbol are trademarks of Dolby Laboratories.

*2 Manufactured under license from Digital Theater Systems, Inc. "DTS" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc.

Model Name Using Similar Mechanism	HCD-DZ300
Mechanism Type	CDM85-DVBU102
Optical Pick-up Name	KHM-310CAA/C2NP

SPECIFICATIONS

Amplifier section (HCD-DZ100K)

Stereo mode (rated) 55 W + 55 W (3 ohms at 1kHz, DIN)
Surround mode (reference) music power output
Front: 120 W + 120 W (with SS-TS31)
Center*: 120 W (with SS-CT31)
Surround*: 120 W + 120 W
(with SS-TS31B)
Subwoofer*: 120 W (with SS-WS31)

Amplifier section (HCD-DZ500KF)

Stereo mode (rated) 55 W + 55 W (3 ohms at 1 kHz, DIN)
Surround mode (reference) music power output
Front: 143 W + 143 W (with SS-TS46)
Center*: 143 W (with SS-CT46)
Surround*: 143 W + 143 W
(with SS-TS46B)
Subwoofer*: 285 W (with SS-WS42)

* Depending on the sound field settings and the source, there may be no sound output.

Inputs (Analog)

VIDEO Sensitivity: 450 mV
Impedance: 50 kilohms
AUDIO IN Sensitivity: 250/125 mV
Impedance: 50 kilohms
Microphone Type: Dynamic

Super Audio CD/DVD system

Laser Semiconductor laser
(Super Audio CD/DVD: $\lambda = 650$ nm)
(CD: $\lambda = 790$ nm)
Emission duration: continuous
Signal format system PAL/NTSC
Frequency response (at 2 CH STEREO mode) DVD (PCM): 2 Hz to 22 kHz (± 1.0 dB)
CD: 2 Hz to 20 kHz (± 1.0 dB)
Harmonic distortion Less than 0.03 %

Tuner section

System PLL quartz-locked digital synthesizer system
FM tuner section
Tuning range 87.5 – 108.0 MHz (50 kHz step)
Antenna (aerial) FM wire antenna (aerial)
Antenna (aerial) terminals 75 ohms, unbalanced
Intermediate frequency 10.7 MHz
AM tuner section
Tuning range 531 – 1,602 kHz (with the interval set at 9 kHz)
Antenna (aerial) AM loop antenna (aerial)
Intermediate frequency 450 kHz

– Continued on next page –

SUPER AUDIO CD/DVD RECEIVER

9-879-838-02
2005K02-1
© 2005.11

Sony Corporation
Home Audio Division
Published by Sony Engineering Corporation

SONY®

Video section

Outputs	Video: 1 V _{p-p} 75 ohms S video: Y: 1 V _{p-p} 75 ohms C: 0.286 V _{p-p} 75 ohms COMPONENT: Y: 1 V _{p-p} 75 ohms P _B /C _B , P _R /C _R : 0.7 V _{p-p} 75 ohms
Input	VIDEO: 1 V _{p-p} 75 ohms

General


Power requirements	220 – 240 V AC, 50/60 Hz
Power consumption	On: 145 W (HCD-DZ100K) On: 160 W (HCD-DZ500KF) Standby: 0.3 W (at the Power Saving mode)

Dimensions (approx.) 430 × 70 × 295 mm (w/h/d)
incl. projecting parts

Mass (approx.) 3.6 kg

Design and specifications are subject to change without notice.

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

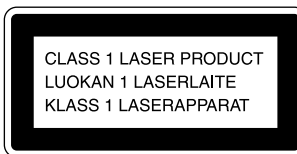

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead. (Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)



LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
Soldering irons using a temperature regulator should be set to about 350 °C.
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

1. SERVICING NOTE	4	5-5. Schematic Diagram – DMB10 Board (2/4) –	30
2. GENERAL	6	5-6. Schematic Diagram – DMB10 Board (3/4) –	31
3. DISASSEMBLY		5-7. Schematic Diagram – DMB10 Board (4/4) –	32
3-1. Disassembly Flow	8	5-8. Printed Wiring Board – MAIN Board (Side A) –	33
3-2. Case, Front Panel Assy	9	5-9. Printed Wiring Board – MAIN Board (Side B) –	34
3-3. FL Board	10	5-10. Schematic Diagram – MAIN Board (1/9) –	35
3-4. KEY Board, STBY Board	10	5-11. Schematic Diagram – MAIN Board (2/9) –	36
3-5. I/O Board, DC Fan	11	5-12. Schematic Diagram – MAIN Board (3/9) –	37
3-6. DMB10 Board	11	5-13. Schematic Diagram – MAIN Board (4/9) –	38
3-7. MAIN Board	12	5-14. Schematic Diagram – MAIN Board (5/9) –	39
3-8. DVD Mechanism Deck (CDM85-DVBU102)	13	5-15. Schematic Diagram – MAIN Board (6/9) –	40
3-9. Tray	13	5-16. Schematic Diagram – MAIN Board (7/9) –	41
3-10. Belt, MS-203 Board	14	5-17. Schematic Diagram – MAIN Board (8/9) –	42
3-11. Base Unit (DVBU-102)	15	5-18. Schematic Diagram – MAIN Board (9/9) –	43
3-12. Optical Pick-up (KHM-310CAA/C2NP)	15	5-19. Printed Wiring Board – PANEL Section (1/2) –	44
4. TEST MODE	16	5-20. Schematic Diagram – PANEL Section (1/2) –	45
5. DIAGRAMS	21	5-21. Printed Wiring Board – PANEL Section (2/2) –	46
5-1. Block Diagram – RF/SERVO Section –	22	5-22. Schematic Diagram – PANEL Section (2/2) –	47
– Video Section –	23	5-23. Printed Wiring Board – I/O Board (Side A) –	48
– DSP Section –	24	5-24. Printed Wiring Board – I/O Board (Side B) –	49
– Audio Section –	25	5-25. Schematic Diagram – I/O Board –	50
– Power Section –	26	6. EXPLODED VIEWS	
5-2. Printed Wiring Board – DMB10 Board (Side A) –	27	6-1. Overall Section	64
5-3. Printed Wiring Board – DMB10 Board (Side B) –	28	6-2. Front Panel Assy Section	65
5-4. Schematic Diagram – DMB10 Board (1/4) –	29	6-3. Chassis Section	66
		6-4. DVD Mechanism Deck Section	67
		7. ELECTRICAL PARTS LIST	68

SECTION 1 SERVICING NOTE


NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK





The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

Note: Incorrect operations may be performed if the test mode is not entered properly.
In this case, press the  button to turn the power off, and retry to enter the test mode.



DISC SLOT LOCK


The disc slot lock function for the antitheft of a demonstration disc in the store is equipped.

Setting Procedure :

1. Press the  button to turn the set on.
2. Press the  button to set DVD function.
3. Insert a disc.
4. Press the  button and the  button simultaneously for five seconds.
5. The message "LOCKED" is displayed and the slot is locked.

Releasing Procedure :

1. Press the  button and the  button simultaneously for five seconds again.
2. The message "UNLOCKED" is displayed and the slot is unlocked.


Note: When "LOCKED" is displayed, the slot lock is not released by turning power on/off with the  button.

IC103 is written in and settled EEPROM. Supply with a single article has not been carried out. In case you exchange by DMB10 board (A-1139-088-A), please put on IC103 currently used with the model again.

Self-diagnosis Function

(When letters/numbers appear in the display)

When the self-diagnosis function is activated to prevent the system from malfunctioning, a 5-character service number (e.g., C 13 50) with a combination of a letter and 4 digits appears on the screen and the front panel display. In this case, check the following table.

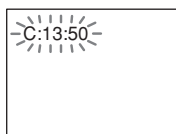


First 3 characters of the service number	Cause and/or corrective action
C 13	The disc is dirty. ➔Clean the disc with a soft cloth
C 31	The disc is not inserted correctly. ➔Restart the system, then re-insert the disc correctly.
E XX (xx is a number)	To prevent a malfunction, the system has performed the self-diagnosis function. ➔Contact your nearest Sony dealer or local authorized Sony service facility and give the 5-character service number. Example: E 61 10

• SERVICE POSITION (DMB10 BOARD)

When servicing side B of the DMB10 board

Remove the DMB10 board from bracket.
(Refer to DISASSEMBLY 3-6. (page 11)).
Set the DMB10 board facing the side B upward as shown.
Connect the cable and make the repair work.

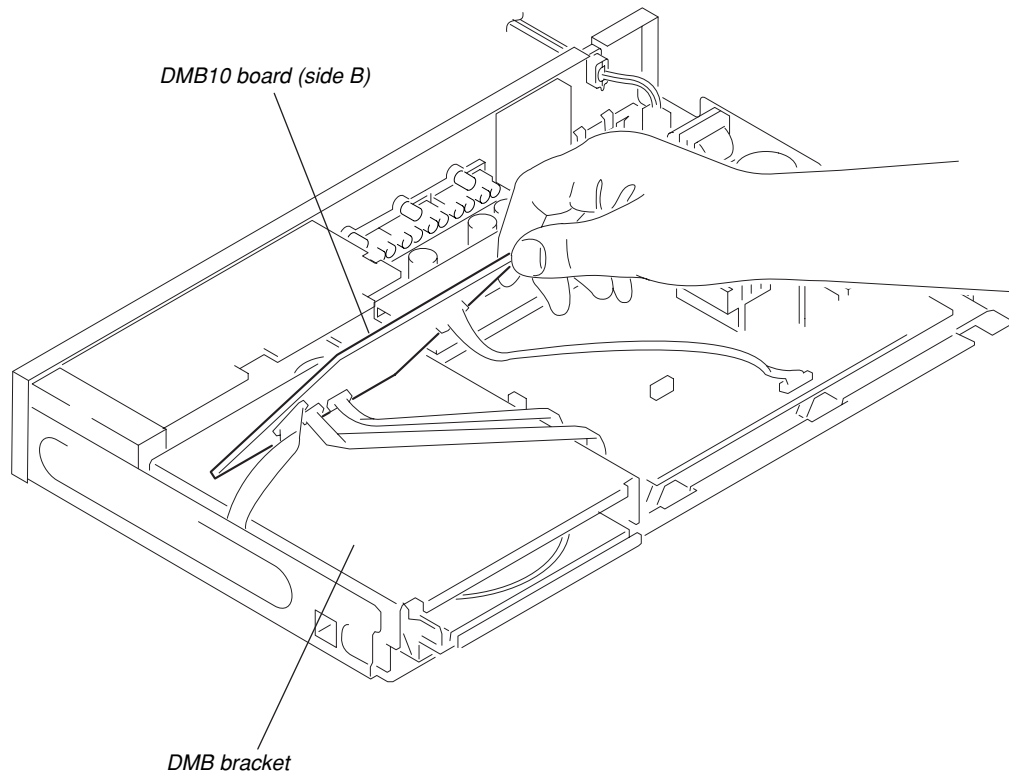


This section is extracted from instruction manual.

Index to Parts and Controls


For more information, refer to the pages indicated in parentheses.

Front panel

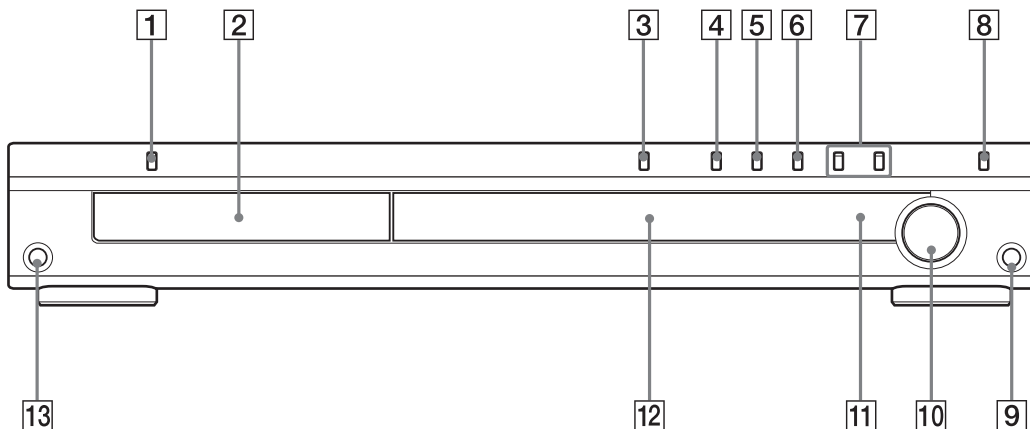


- | | |
|---------------------------|-------------------------------|
| 1 I/⏻ (on/standby) | 8 FUNCTION |
| 2 Disc tray | 9 MIC jack |
| 3 ⏪ (open/close) | 10 VOLUME |
| 4 ▶ (play) | 11 📡 (remote sensor) |
| 5 ⏸ (pause) | 12 Front panel display |
| 6 ■ (stop) | 13 AUDIO IN jack |
| 7 ⏮/⏭ | |

Rear panel

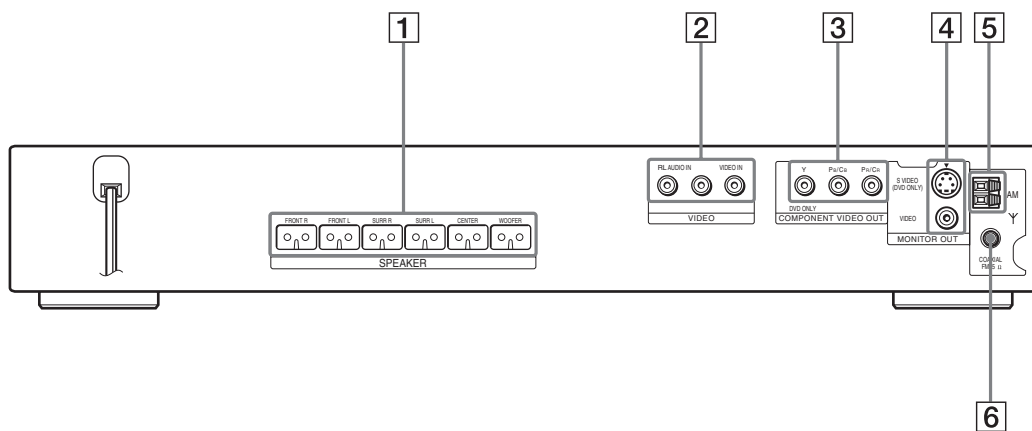

- | | |
|-------------------------------------|---|
| 1 SPEAKER jacks | 4 MONITOR OUT (VIDEO / SVIDEO) jacks |
| 2 VIDEO VIDEO/AUDIO IN jacks | 5 AM terminal |
| 3 COMPONENT VIDEO OUT jacks | 6 FM 75 COAXIAL jack |

Remote

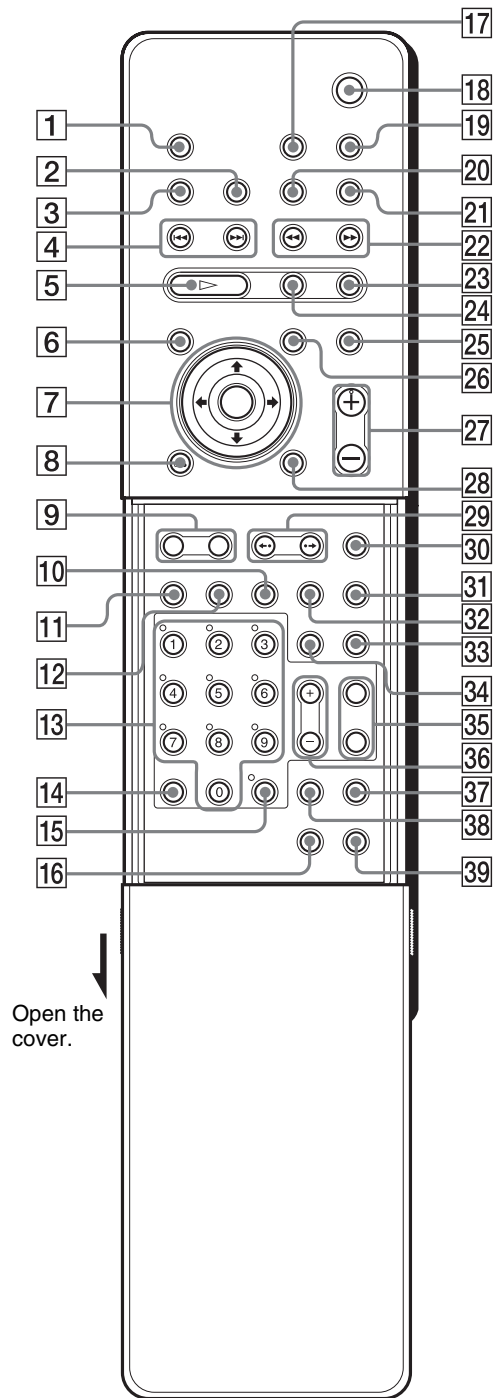

- 1 TV
- 2 This button is not available for this model.
- 3 SOUND FIELD


- 4 ◀◀/▶▶ PRESET -/+, TV CH -/+
- 5 ▷ (play)
The ▷ button has a tactile dot.*
- 6 TOP MENU
- 7 ←/↑/↓/→/ENTER
←/↑/↓/→ have tactile dots.*
- 8 ↻ RETURN
- 9 ALBUM -/+
- 10 ANGLE
- 11 AUDIO
The AUDIO button has a tactile dot.*
- 12 SUBTITLE
- 13 Number buttons
The number 5 button has a tactile dot.*
- 14 CLEAR, -/--
- 15 REPEAT, FM MODE
- 16 PROGRESSIVE, TUNER MENU
- 17 TV I/⏻ (on/standby)
- 18 I/⏻ (on/standby)
- 19 THEATRE SYNC
- 20 TV/VIDEO, SLEEP
- 21 FUNCTION
- 22 ◀◀/▶▶◀/▶▶ SLOW, TUNING -/+
- 23 ■ (stop)
- 24 || (pause)
- 25 MUTING
- 26 MENU
- 27 VOLUME, TV VOL +/-
The VOLUME, TV VOL + button has a tactile dot.*
- 28 ☰ DISPLAY
- 29 ◀•/◀||/•→/||▶ REPLAY, ADVANCE, STEP
- 30 DISPLAY
- 31 DSGX
- 32 PICTURE NAVI
- 33 KARAOKE
- 34 ECHO
- 35 KEYCON #/b
The KEYCON # button has a tactile dot.*
- 36 MIC VOL +/-
- 37 MULTI/2CH
- 38 SA-CD/CD
- 39 AMP MENU

*Use the tactile dot as a reference when operating the system.

SECTION 3 DISASSEMBLY


3-1. DISASSEMBLY FLOW

- This set can be disassembled in the order shown below.
- The dotted square with arrow ([] →) prompts you to move to the next job when all of the works within the dotted square ([]) are completed.

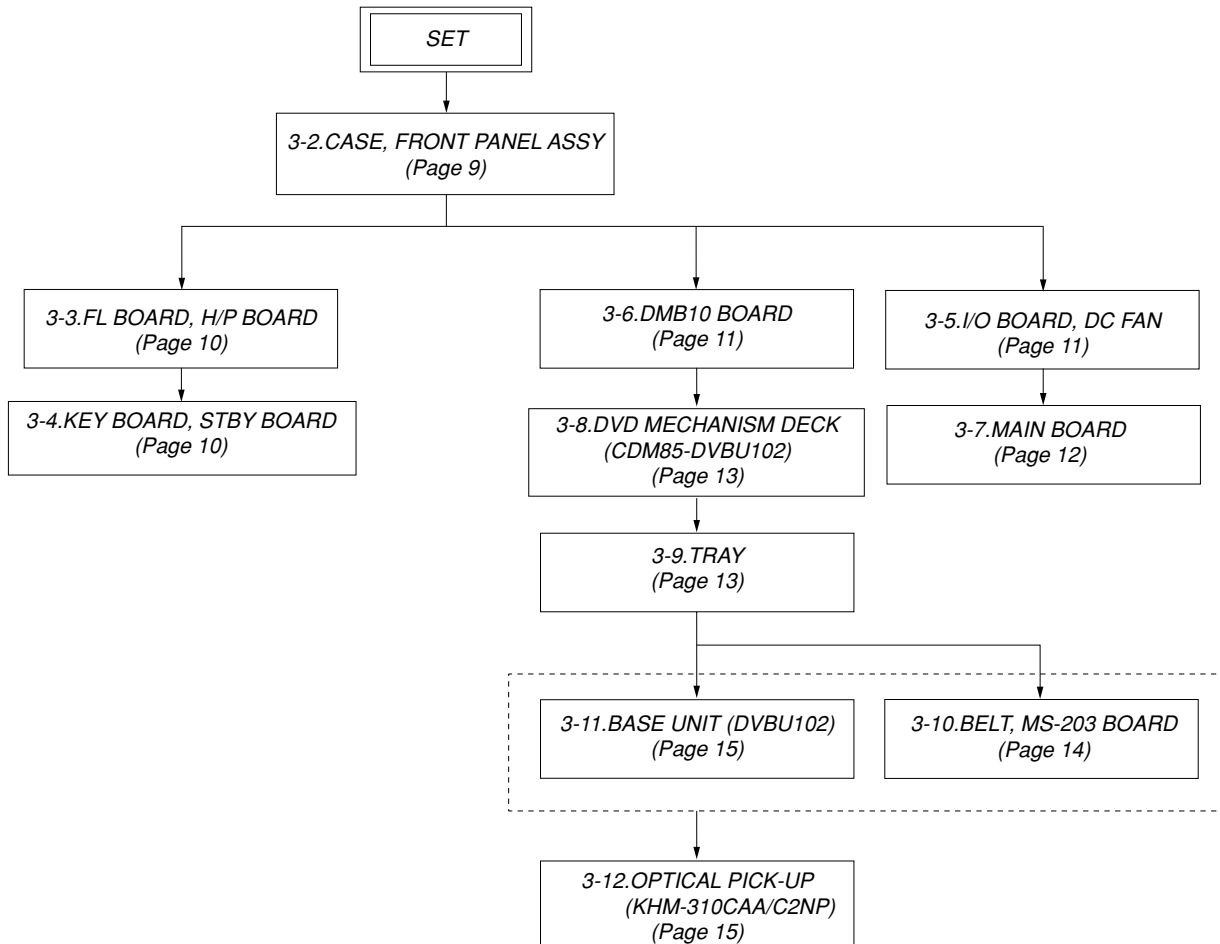


Note: Follow the disassembly procedure in the numerical order given.


3-2. CASE, FRONT PANEL ASSY

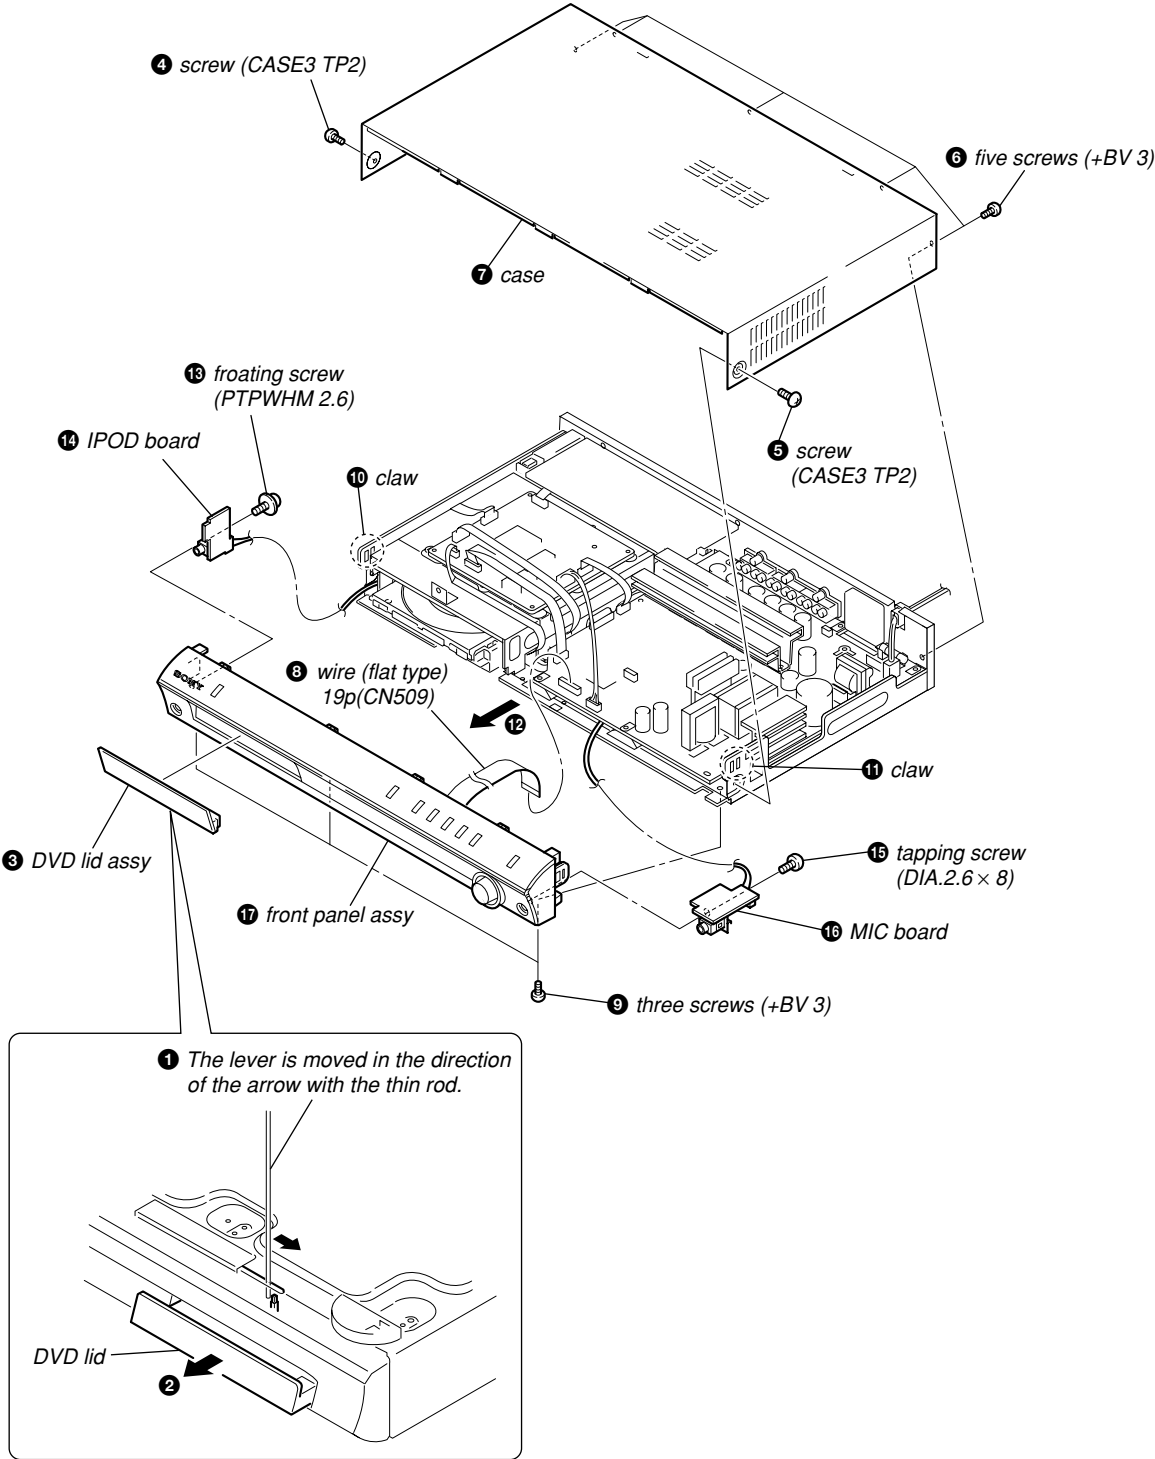


3-3. FL BOARD

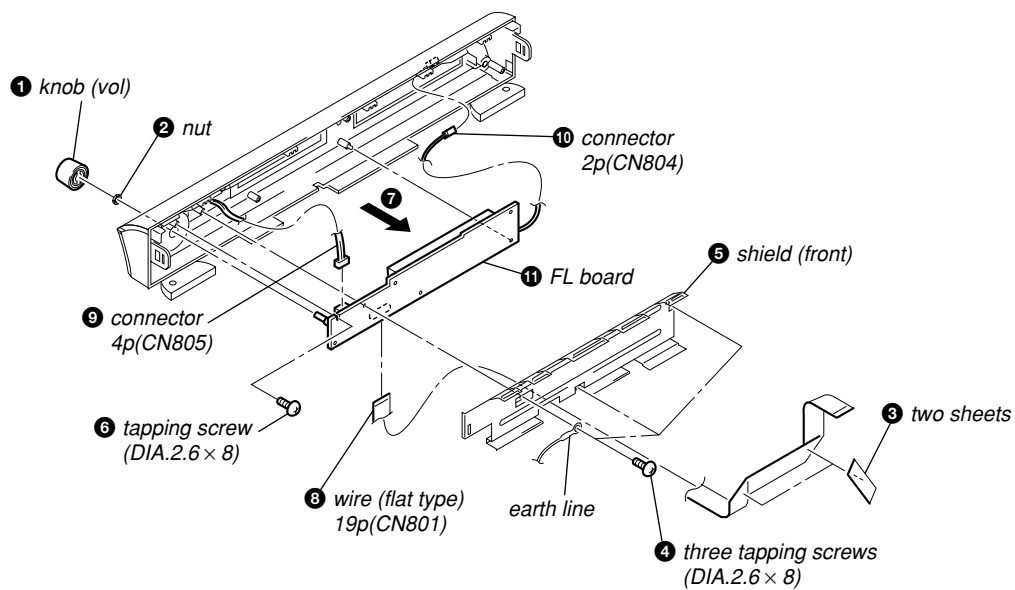


3-4. KEY BOARD, STBY BOARD

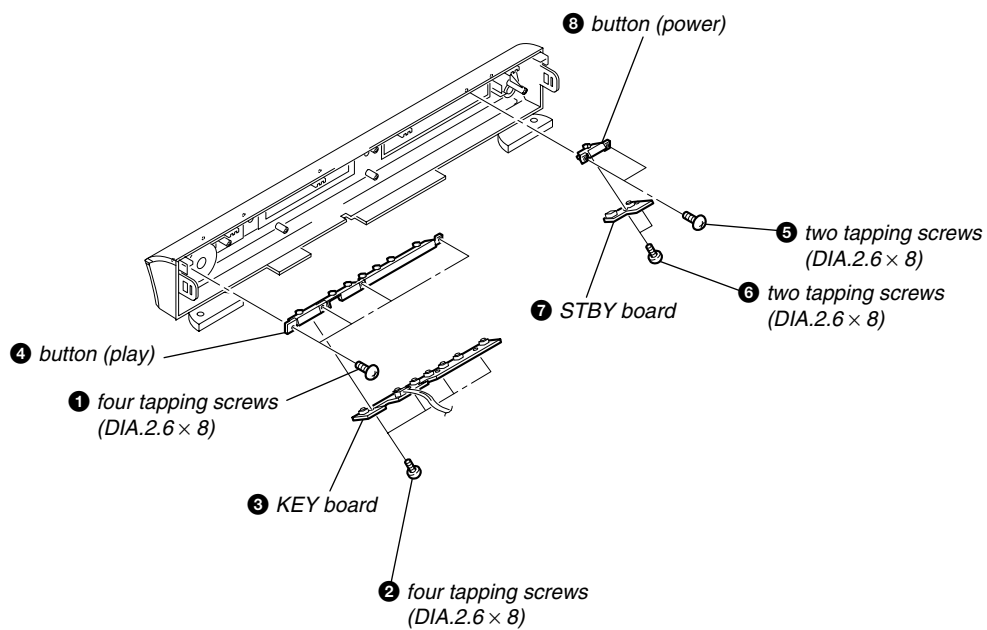


3-5. I/O BOARD, DC FAN

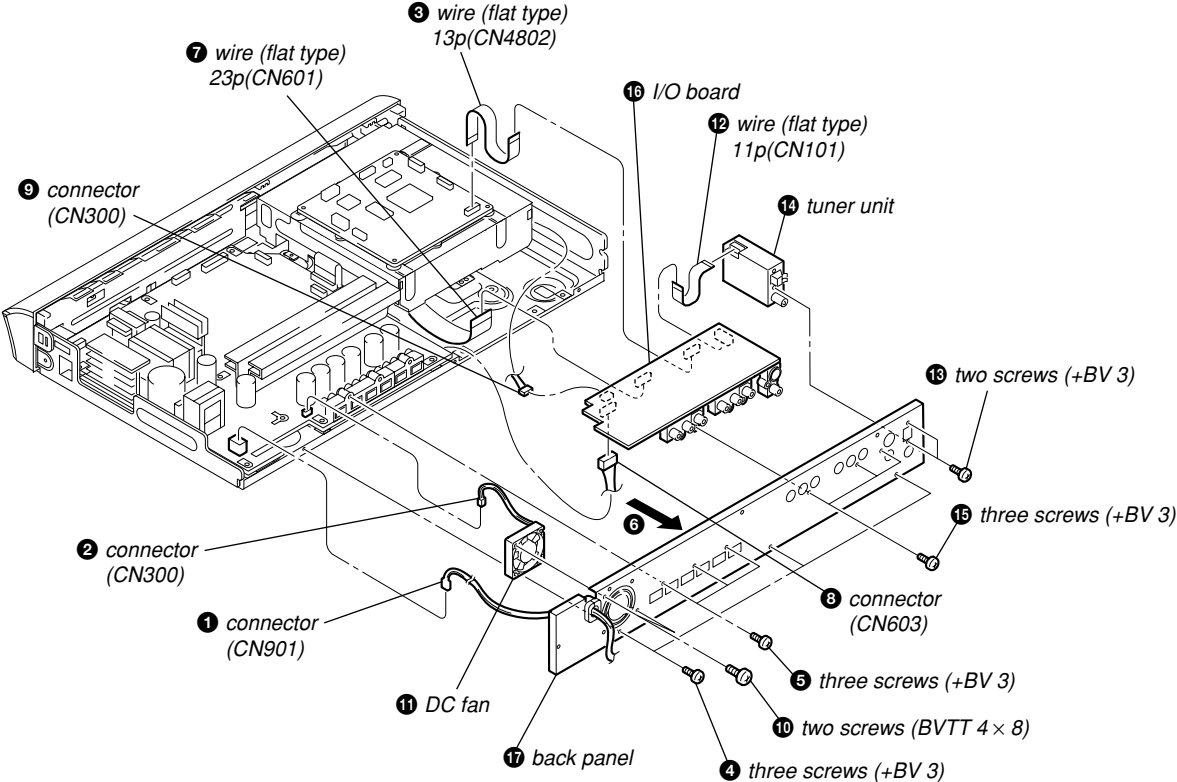


3-6. DMB10 BOARD

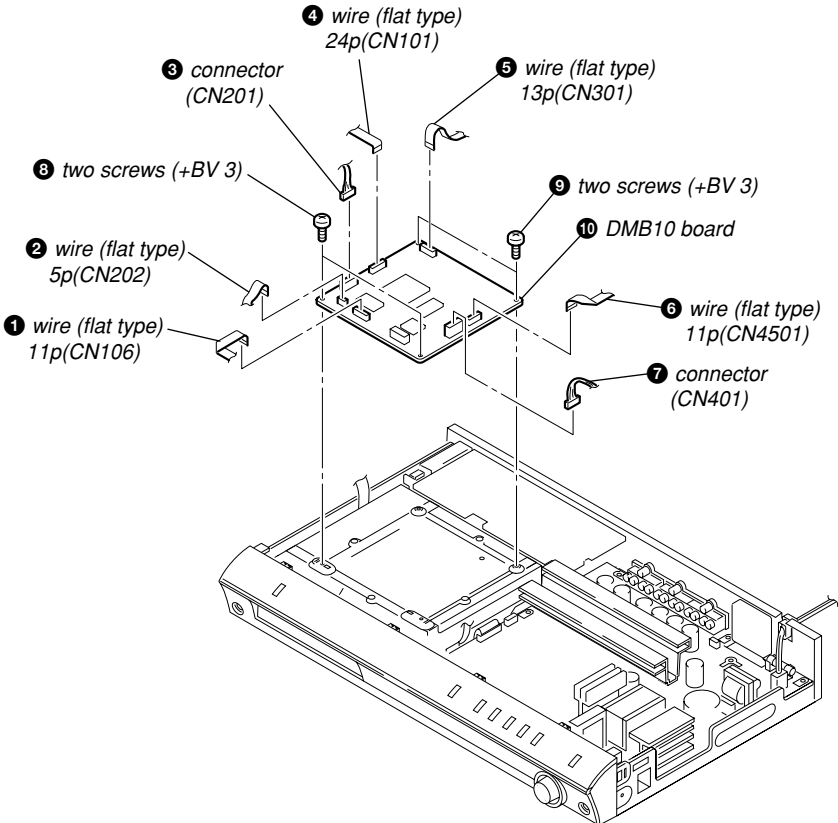


3-7. MAIN BOARD

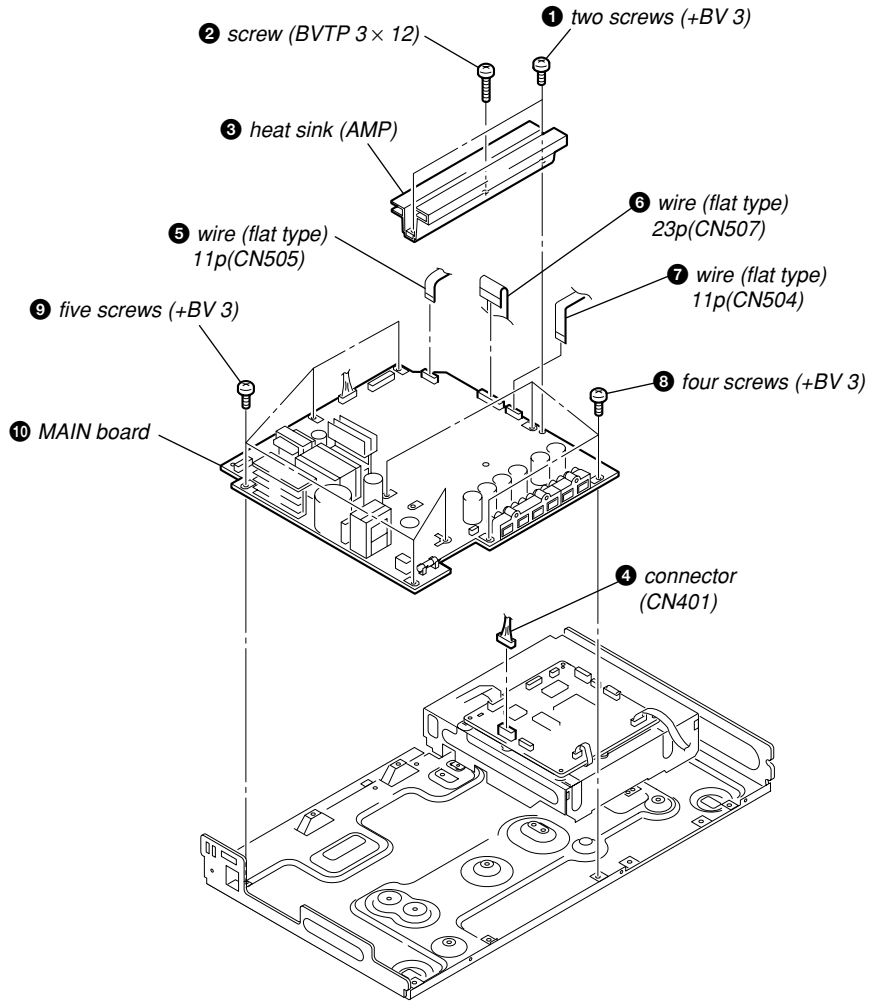


3-8. DVD MECHANISM DECK (CDM85-DVBU102)

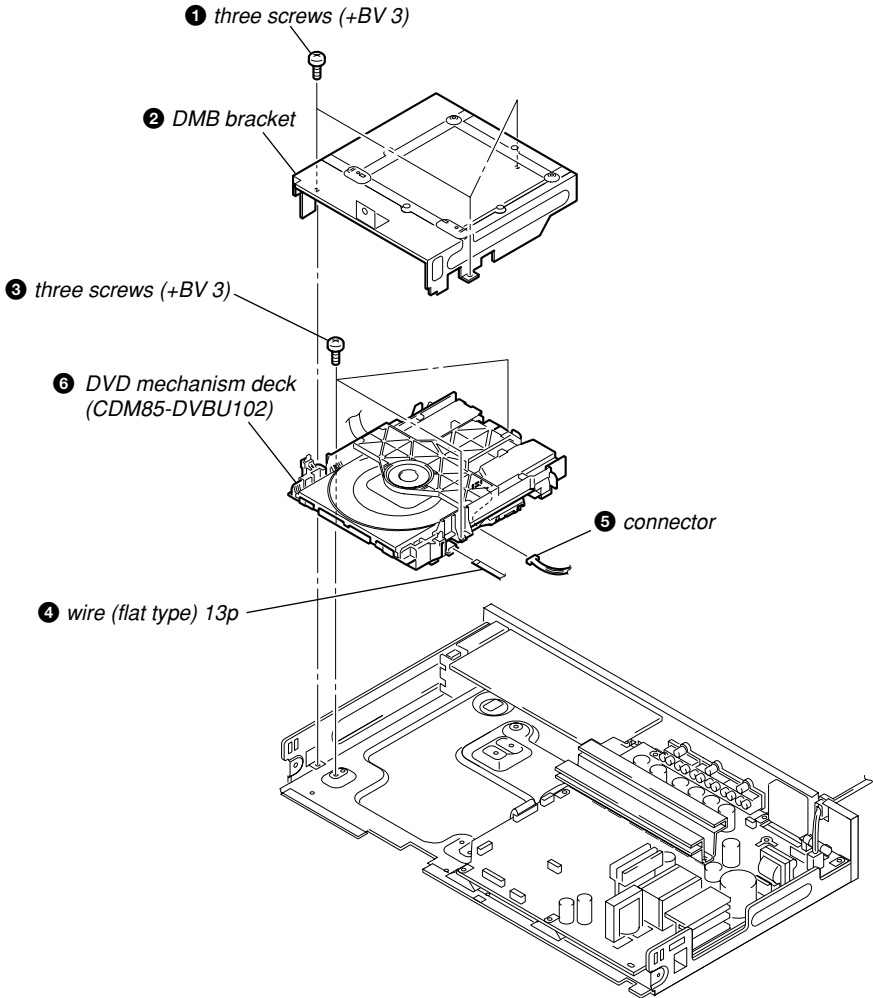


3-9. TRAY

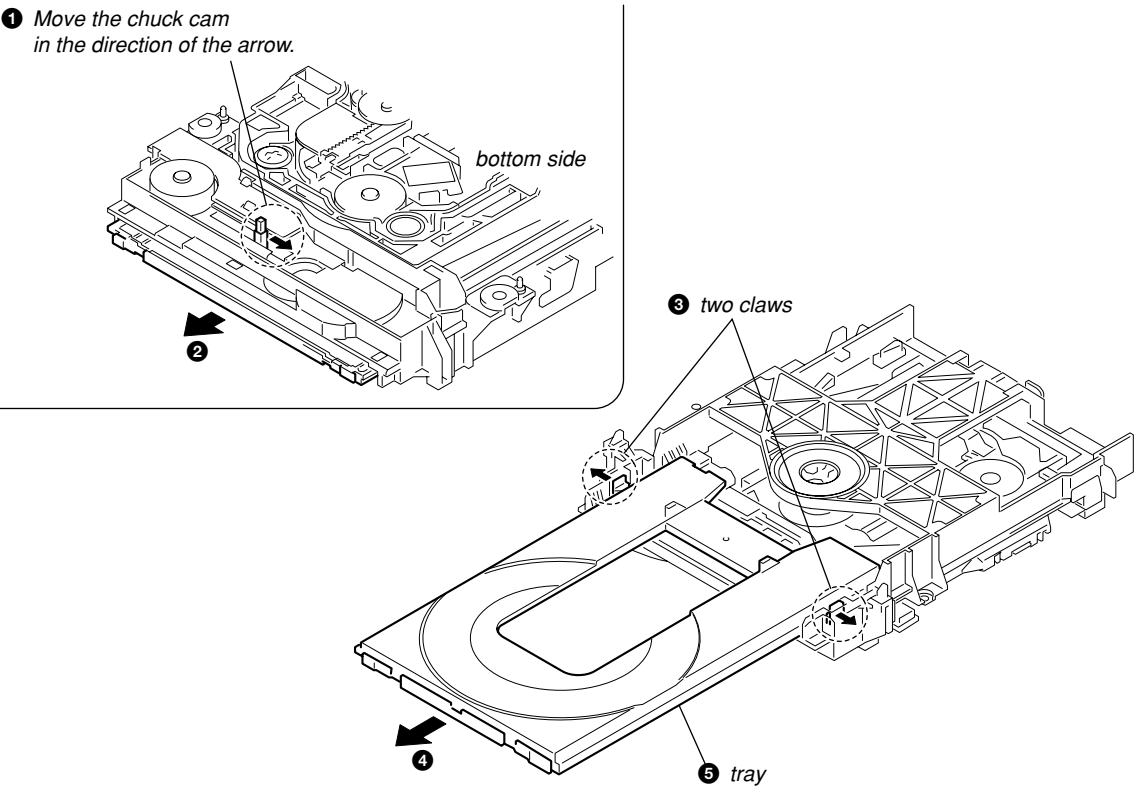


3-10. BELT, MS-203 BOARD

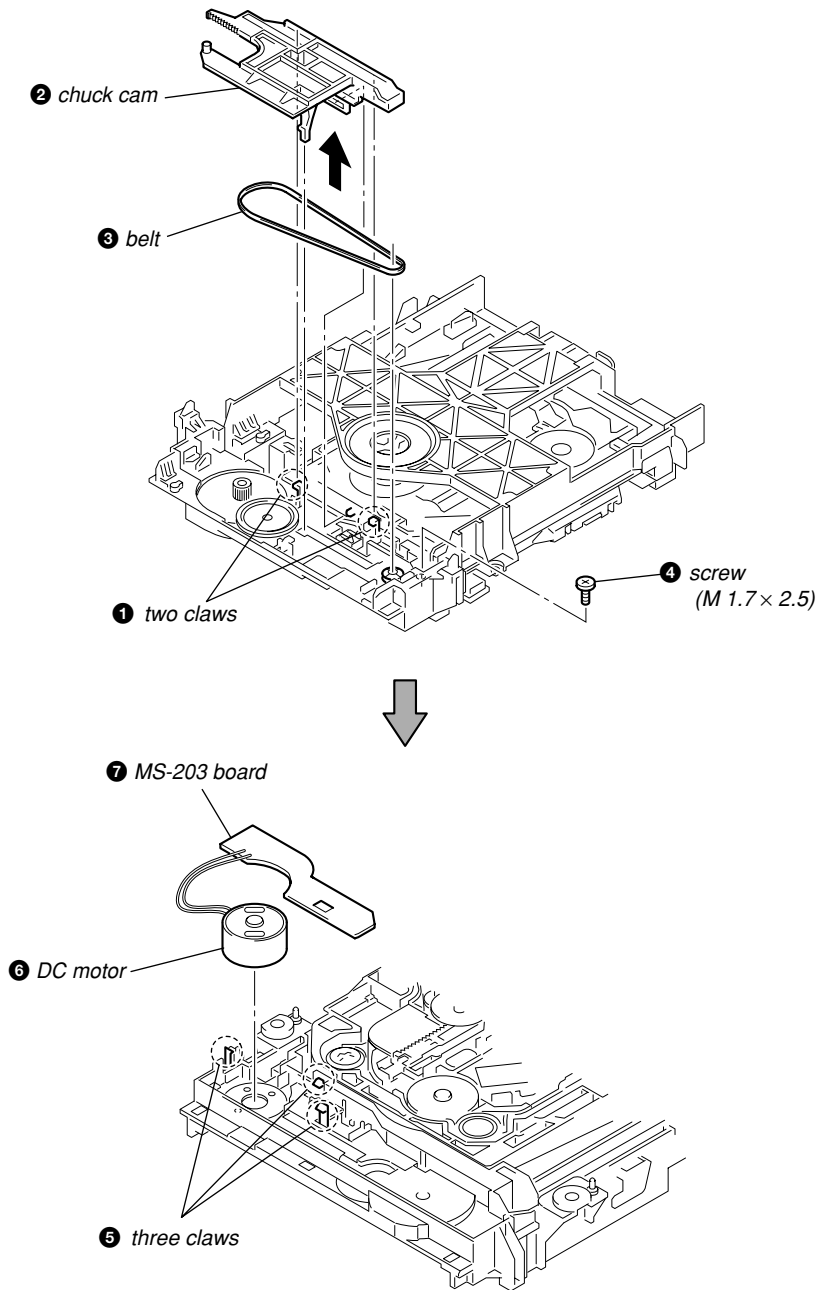

3-11. BASE UNIT (DVBU102)

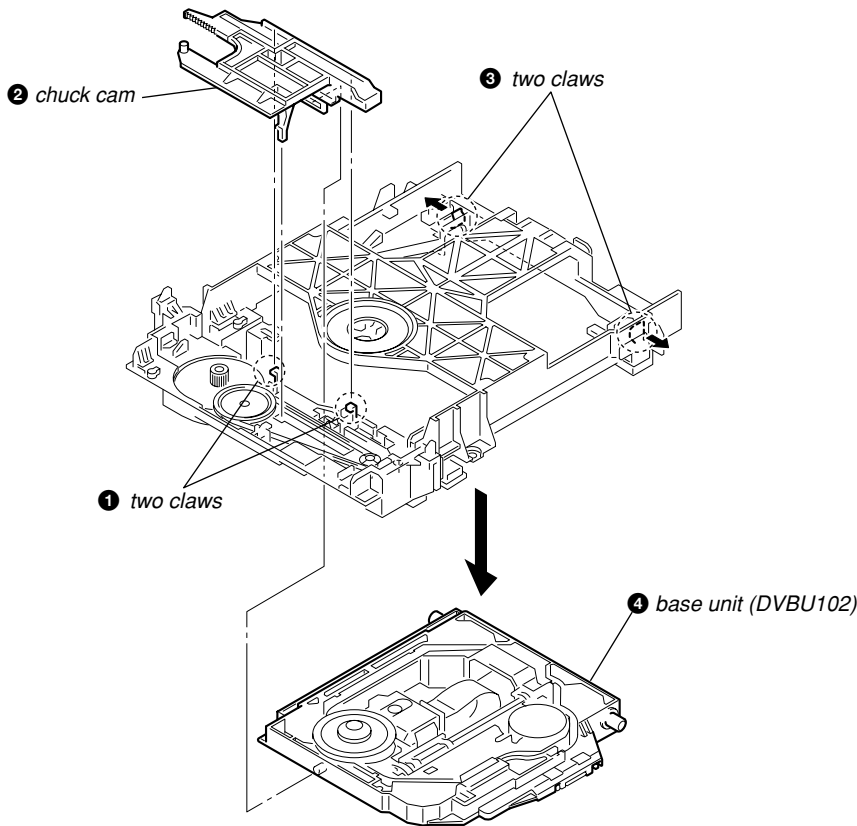

3-12. OPTICAL PICK-UP (KHM-310CAA/C2NP)

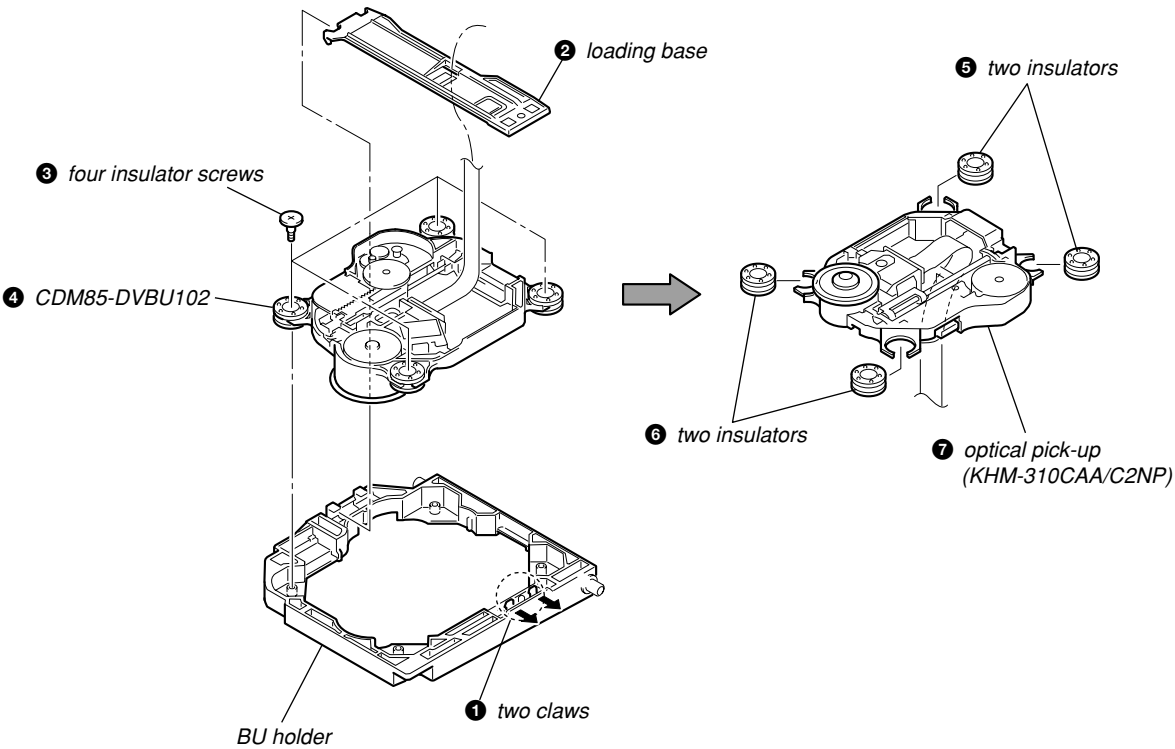

SECTION 4 TEST MODE

- Note 1:** Regarding the notification symbol “R”
Because the number of the operating buttons of this product are limited, some operations require use of the operating buttons of the remote commander. When a specific operation requires use of the operating buttons of the remote commander, “R” is added to the specific operating procedure in this manual. For example, **MENU/NO** + **R** is **MENU/NO** button of remote commander.
- Note 2:** Incorrect operations may be performed if the test mode is not entered properly.
In this case, press the **I/O** button to turn the power off, and retry to enter the test mode.

1. Cold Reset

- The cold reset clears all data including preset data stored in the RAM to initial conditions. Execute this mode when returning the set to the customers.

Procedure:

- Press the **I/O** button to turn the power on.
- Press three buttons **■**, **⏏** and **I/O** simultaneously.
- When this button is operated, display as “COLD RESET” for a while and all of the settings are reset.

2. Panel Test Mode

- This mode is used to check the software version, LCD, LED and keyboard.

2-1. DVD LED Test Mode

Procedure:

- Press the **I/O** button to turn on the power.
- Press three buttons **■**, **⏏** and **⏏** simultaneously.
- When the display LED test mode is activated, all segments are turned on.
- To exit from this mode, pull out the AC plug.

2-2. Version Test Mode

Note:

() : For DZ500KF

Procedure:

- When the panel test mode is activated, press the **⏏** button and the message “DS1K***” (“DS6K***”) is displayed, the version test mode is activated.
- Whenever press the **⏏** button, the version is displayed in order of CC2, MC, SYS, UI, DVD, TA, TM and DS1K (DS6K).
- Press the **▶▶** button and the date of the software production is displayed.
- Press the **▶▶** button again and the version is displayed.
- To exit from this mode, pull out the AC plug.

2-3. Key Test Mode

Procedure:

- When the panel test mode is activated, press the **▶** button, to select the key test mode.
- To enter the KEY test mode, the fluorescent indicator displays “K0 VO”. Each time a button is pressed, “KEY” value increases. However, once a button is pressed, it is no longer taken into account. When all keys are pressed correctly, “K8 VO” is displayed.
- To exit from this mode, pull out the AC plug.

3. Disc Tray Lock

The disc tray lock function for the antitheft of an demonstration disc in the store is equipped.

Setting Procedure :

- Press the **I/O** button to turn the set on.
- Press the **FUNCTION** button to set DVD function.
- Insert a disc.
- Press the **■** button and the **⏏** button simultaneously for five seconds.
- The message “LOCKED” is displayed and the tray is locked.

Releasing Procedure :

- Press the **■** button and the **⏏** button simultaneously for five seconds. again.
- The message “UNLOCKED” is displayed and the tray is unlocked.

Note: When “LOCKED” is displayed, the slot lock is not released by turning power on/off with the **I/O** button.

4. DVD Ship Mode

- Use this mode when returning the set to the customer after repair.

Procedure:

- Press the **I/O** button to turn the set on.
- Press the **FUNCTION** button to set the function “DVD”.
- Press three buttons **■** and **I/O** simultaneously.
- After a message “MECHA LOCK” is displayed on the fluorescent indicator tube, pull out the AC plug.
- To exit from this mode, press the **I/O** button to turn the set on.

5. DVD Debug In Mode

Procedure:

- Press the **I/O** button to turn the set on.
- Press the **FUNCTION** button to set the function “DVD”.
- Press the three buttons **⏏**, **⏏** and **▶▶** simultaneously.
- To exit from this mode, press the **I/O** button to turn the set on.

6. AM Step Change

- A step of AM channels can be changed over between 9 kHz and 10 kHz.

Procedure:



- Press **I/O** button to turn the set ON.
- Select the function “TUNER”, and press **FUNCTION** button to select the BAND “AM”.
- Press **I/O** button to turn the set OFF.
- Press **▶▶** and **I/O** buttons simultaneously, and the display of fluorescent indicator tube changes to “AM 9 k STEP” or “AM 10 k STEP”, and thus the channel step is changed over.

DVD SECTION**4-1. GENERAL DESCRIPTION**


The Mirror Time and IOP measurement allows you to make diagnosis and adjustment simply by using the remote commander and monitor TV. The instructions, diagnosis results, etc. are given on the on screen display (OSD).

The Mirror Time and IOP measurement is required in such events where servicing a DVD-Player includes changing the Base Unit (BU). For each new BU to be used with a certain DMB10 board, Mirror Time and IOP measurement need to be carried out.

4-2. STARTING TEST MODE

Press three buttons ,  and **VOLUME** + simultaneously with the DVD player in standby mode. The Test Mode starts, then the menu shown below will be displayed on the TV screen.


< > : DZ500KF

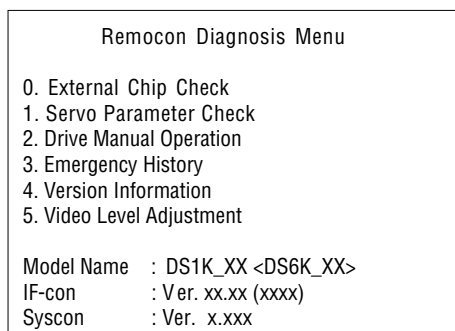


The menu above is the Remocon Diagnosis Menu screen which consists of six main function. At the bottom of the menu screen, the model name and IF-con version. To enter Mirror Time Adjustment menu, press button **2 "R"** on the remote commander to enter Drive Manual Operation menu. To exit from the Test Mode, press the power button on the remote commander.

4-3. DRIVE MANUAL OPERATION

The Drive Manual Operation menu consists of five main function. By pressing **2 "R"** button on the remote commander in the Remocon Diagnosis Menu, the screen will appear as below.

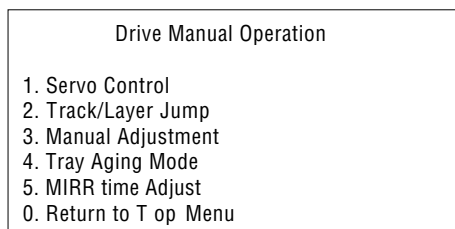**4-4. MIRROR TIME ADJUSTMENT**

To enter Mirror Time Adjustment, press **5 "R"** button on the remote commander. The screen will appear as below.

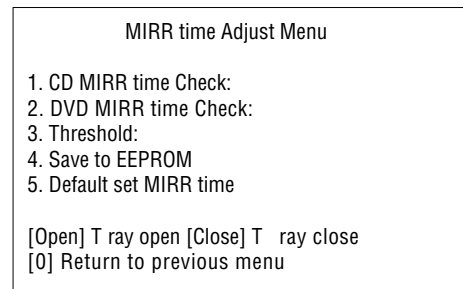

There are five main commands in the MIRR time Adjust menu as shown in the figure above. The functions of each command are described in the following page.

1. CD MIRR time Check

This command checks the Mirror time value for CD disc.

2. DVD MIRR time Check

This command checks the Mirror time value for DVD disc.

3. Threshold

This command displays the threshold value between CD and DVD mirror time.


4. Save to EEPROM

This command saves an adjusted mirror time value to the EEPROM.

5. Default set MIRR time

This command will set CD and DVD mirror time to firmware default value.

[Open] / [Close]



Pressing the  button controls the tray for disc change during mirror time adjustment.

[0] Return to previous menu


Press **0 "R"** button to return to previous menu.

4-4-1. EXECUTING MIRROR TIME ADJUSTMENT


In order to execute mirror time adjustment, the following standard procedures must be followed.

- (1) In standby mode, press three buttons ,  and **VOLUME** + simultaneously.
- (2) Select "2. Drive Manual Operation".


< > : DZ500KF

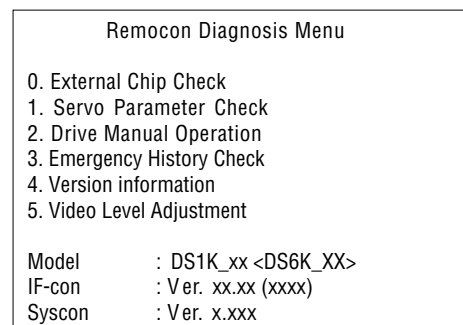

(3) Select “5. MIRR time Adjust”.

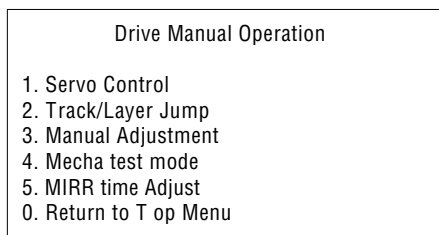


(4) Select “5. Default set MIRR time”.

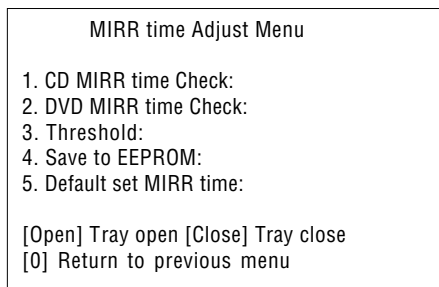

(5) Select “3. Threshold”.

(6) Confirm the number. If it is 7D, go to next step. If it is any other value, return to step 4.

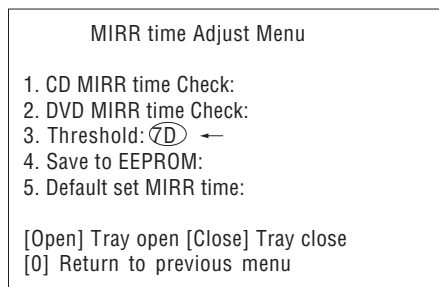

(7) Push button to eject tray.


(8) Insert Test Disc HLX-504 into tray.

(9) Push button to close tray.

(10) Push “2. DVD MIRR time Check”.


(11) Wait for HEX number to display.

(12) Confirm the number, if XX is 28 ~ 70, proceed with next step. If no, return to 8.

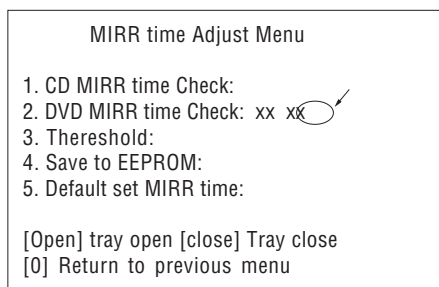

(13) Push “4. Save to EEPROM”.

(14) Confirm the same values are displayed. If it is not same, return to step 7.

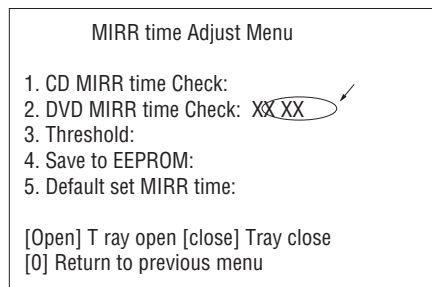

(15) Push button to eject tray.


(16) Take out HLX-504 and insert Test Disc YEDS-18 into tray.

(17) Push button to close tray.

(18) Push “1. CD MIRR time check”.


(19) Wait for HEX number to display.

(20) Confirm the number, if YY is 5A ~ E8, proceed with next step. If no, return to 15.

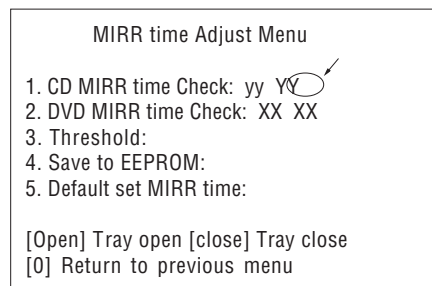

(21) Push “4. Save to EEPROM”.

(22) Confirm the same values are displayed. If it is not the same, return to step 15.

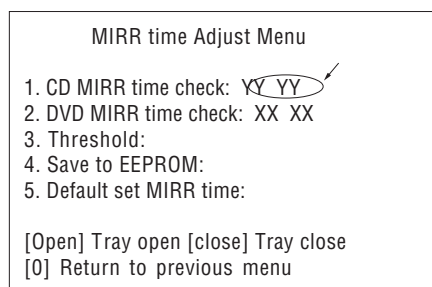

(23) Push button to eject tray.

(24) Remove Test Disc YEDS-18 from tray.

(25) Push button to close tray.



(26) Press button to the Drive Manual Operation menu.

(27) Press button to return to the Remocon Diagnosis Menu.


(28) Press the button to switch OFF set.

4-5. EXECUTING IOP MEASUREMENT


In order to execute mirror time adjustment, the following standard procedures must be followed.

- (1) In standby mode, press three buttons ,  and **VOLUME** + simultaneously.


< > : DZ500KF

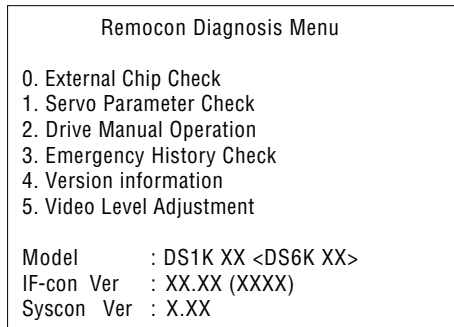

- (2) Select “2. Drive Manual Operation” by pressing the **2 “R”** button on the remote commander. The screen will appear as below.

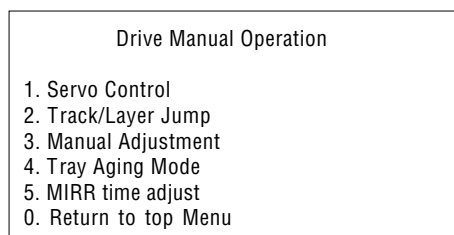


- (3) Select “3. ManualAdjustment” by pressing the **3 “R”** button on the remote commander. The screen will appear as below.

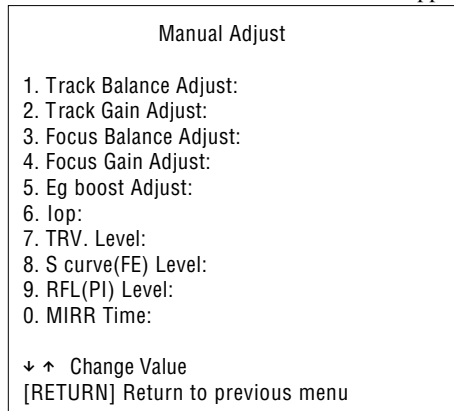

- (4) Select Iop by pressing **6 “R”** button on the remote commander

- (5) Wait until a hexadecimal number appear.

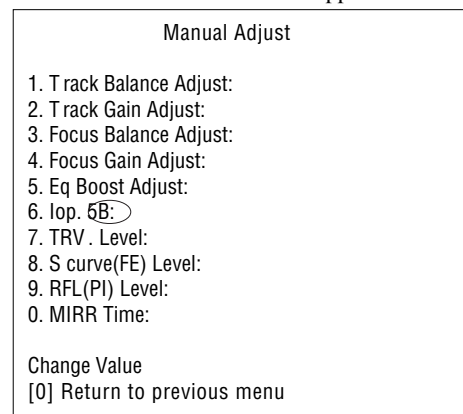

- (6) Convert each data from hexadecimal to decimal using conversion table.

- (7) Subtract between these two values.

- (8) If the remainder is smaller than 93 (decimal), then it is OK. However if the value is higher than 93, then the BU is defective and need to be change.

- (9) Press **RETURN “R”** button to return back to previous menu.

- (10) Press **0 “R”** button to return to Top Menu and power OFF the DVD Player.

ELECTRICAL ADJUSTMENT

DVD SECTION

[TEST DISC LIST]


Use the following test disc on test mode.

- CD: YEDS-18 (PART No. 3-702-101-01)
or
PATD-012 (PART No. 4-225-203-01)
- DVD (SL) :
NTSC
HLX-503 (PART No. J-6090-069-A)
or
HLX-504 (PART No. J-6090-088-A)
PAL HLX-506 (PART No. J-6090-077-A)
- DVD (DL) :
NTSC
HLX-501 (PART No. J-6090-071-A)
or
HLX-505 (PART No. J-6090-089-A)
PAL HLX-507 (PART No. J-6090-089-A)

Note: Do not use exiting test disc for DVD.
Confirmation of mirror time adjustment and IOP adjustment (Refer to page 24 of the TEST MODE)

[RFMON Level Check]


Connection:

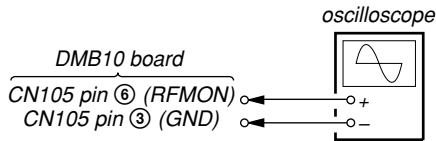

Procedure:


1. Connect an oscilloscope to CN105 pin ⑥ (RFMON) and CN105 pin ③ (GND) on the DMB10 board.
2. Turn the power on.
3. Set the test disc (DVD: HLX-503 (NTSC) or HLX-504 (PL), CD: YEDS-18) on the tray and press button to playback.
4. Confirm that oscilloscope waveform is clear and check RFMON signal level is correct or not.

Note: A clear RFMON signal waveform means that the shape can be clearly distinguished at the center of the waveform.

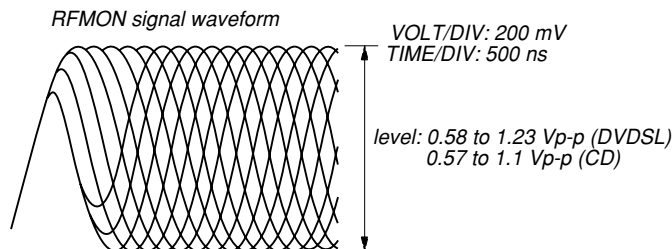

Checking Location: DMB10 board (Side A)

【DMB10 BOARD】(SIDE A)

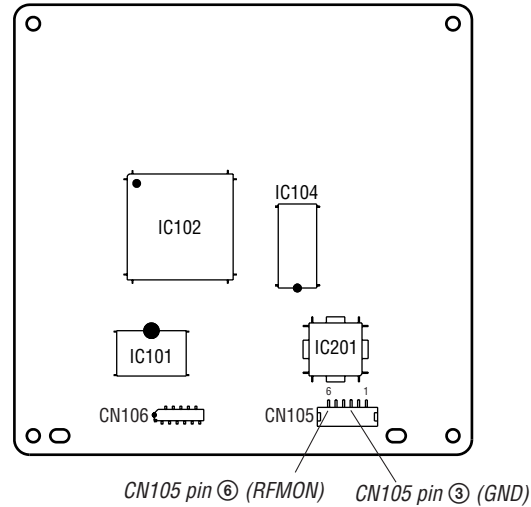

SECTION 5 DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For Schematic Diagrams.

- Note:**
- All capacitors are in μF unless otherwise noted. (p: pF)
 - 50 WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $1/4\text{ W}$ or less unless otherwise specified.
 - Δ : internal component.
 - : panel designation.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

☆ IC103 is a written in and settled EEPROM. Supply with a single article has not been carried out. In case you exchange by DMB10 board (A-1 139-088-A), please put on IC103 currently used with the model again.


- — : B+ Line.
- - - - : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- Voltages and waveforms are dc with respect to ground in service mode.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- no mark : DVD STOP
- Voltages are taken with VOM (Input impedance 10 M Ω).
- Circled numbers refer to waveforms.
- Signal path.
 - : AUDIO
 - : CD PLAY
 - : DVD PLAY
 - : SACD PLAY
 - : TUNER
 - : VIDEO
 - : Y
 - : CHROMA
 - : COMPONENT VIDEO
 - : AUDIO IN
 - : MIC

For Printed Wiring Boards.


- Note:**
- : parts extracted from the component side.
 - : Through hole.
 - : Pattern from the side which enables seeing. (The other layers' patterns are not indicated.)

Caution:
 Pattern face side: Parts on the pattern face side seen from (SIDE B) the pattern face are indicated.
 Parts face side: Parts on the parts face side seen from (SIDE A) the parts face are indicated.


• Indication of transistor.

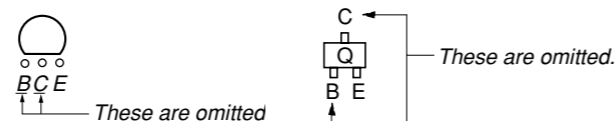


• Waveforms
- DMB10 Board -

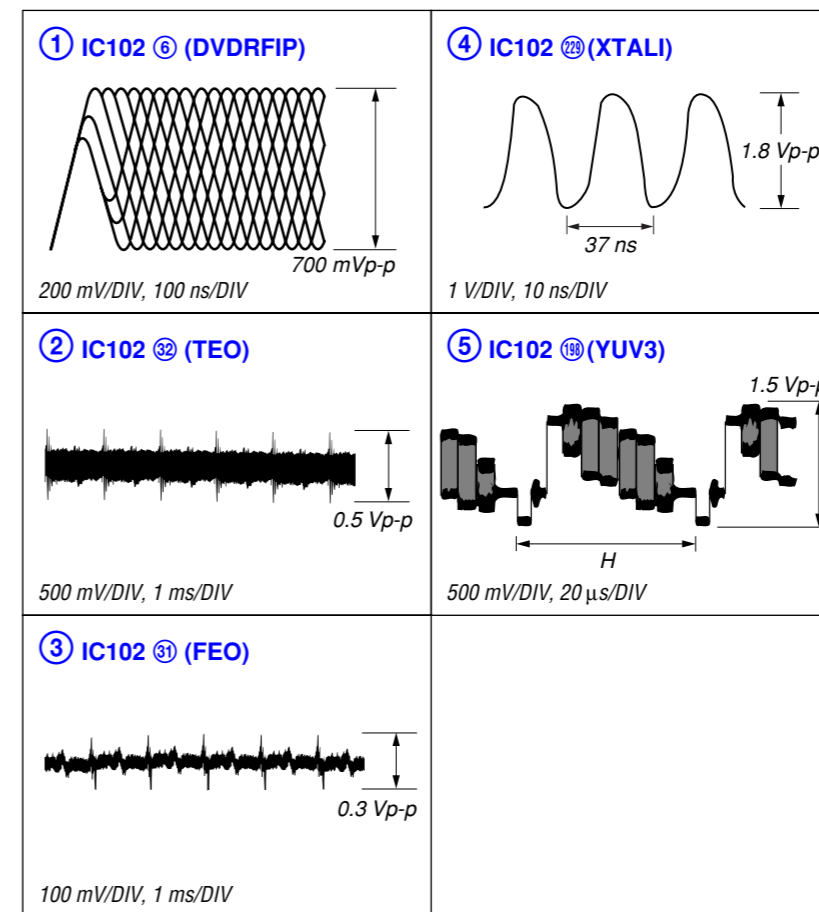


- I/O Board -

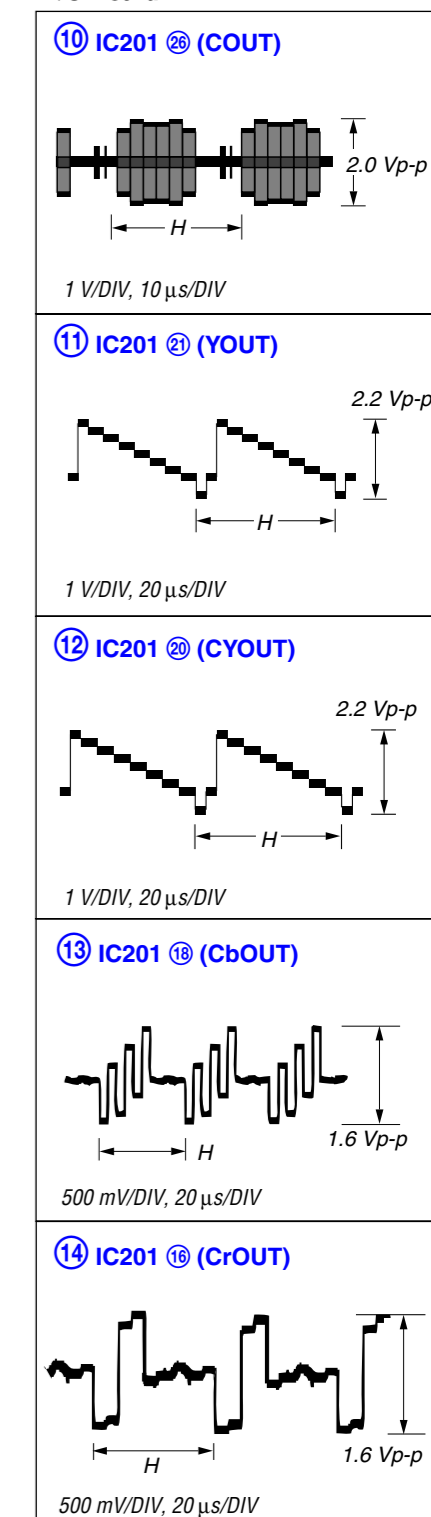


- MAIN Board -

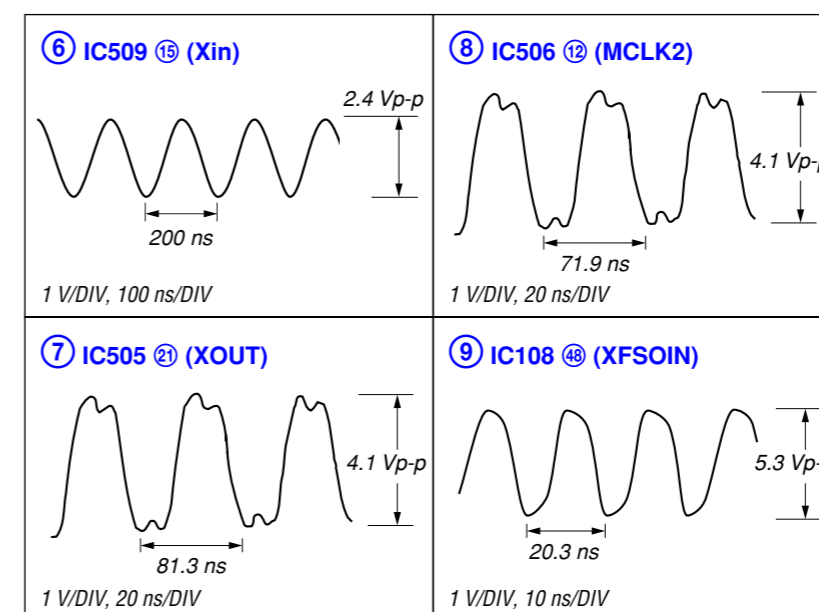


• Circuit Boards Location

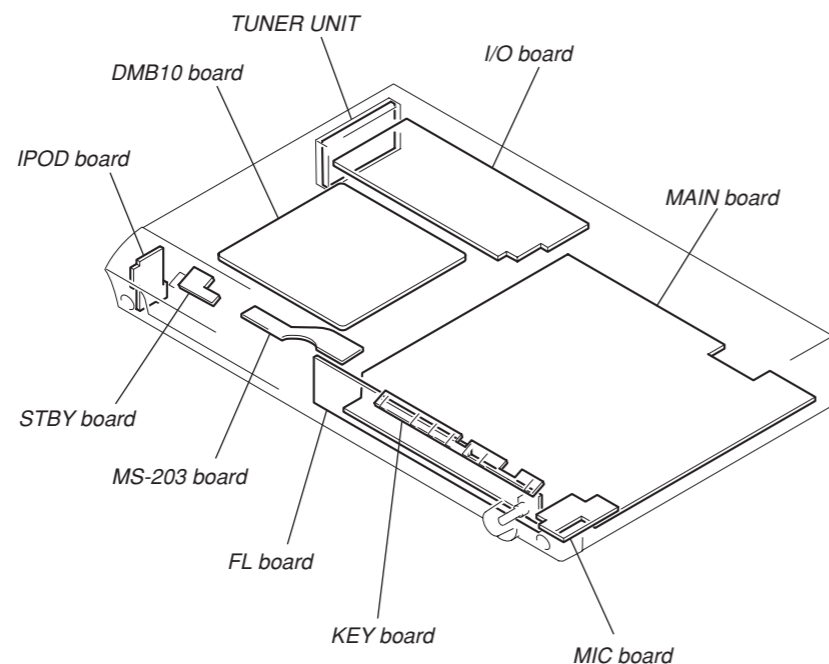


5-1. BLOCK DIAGRAM – RF/SERVO SECTION –

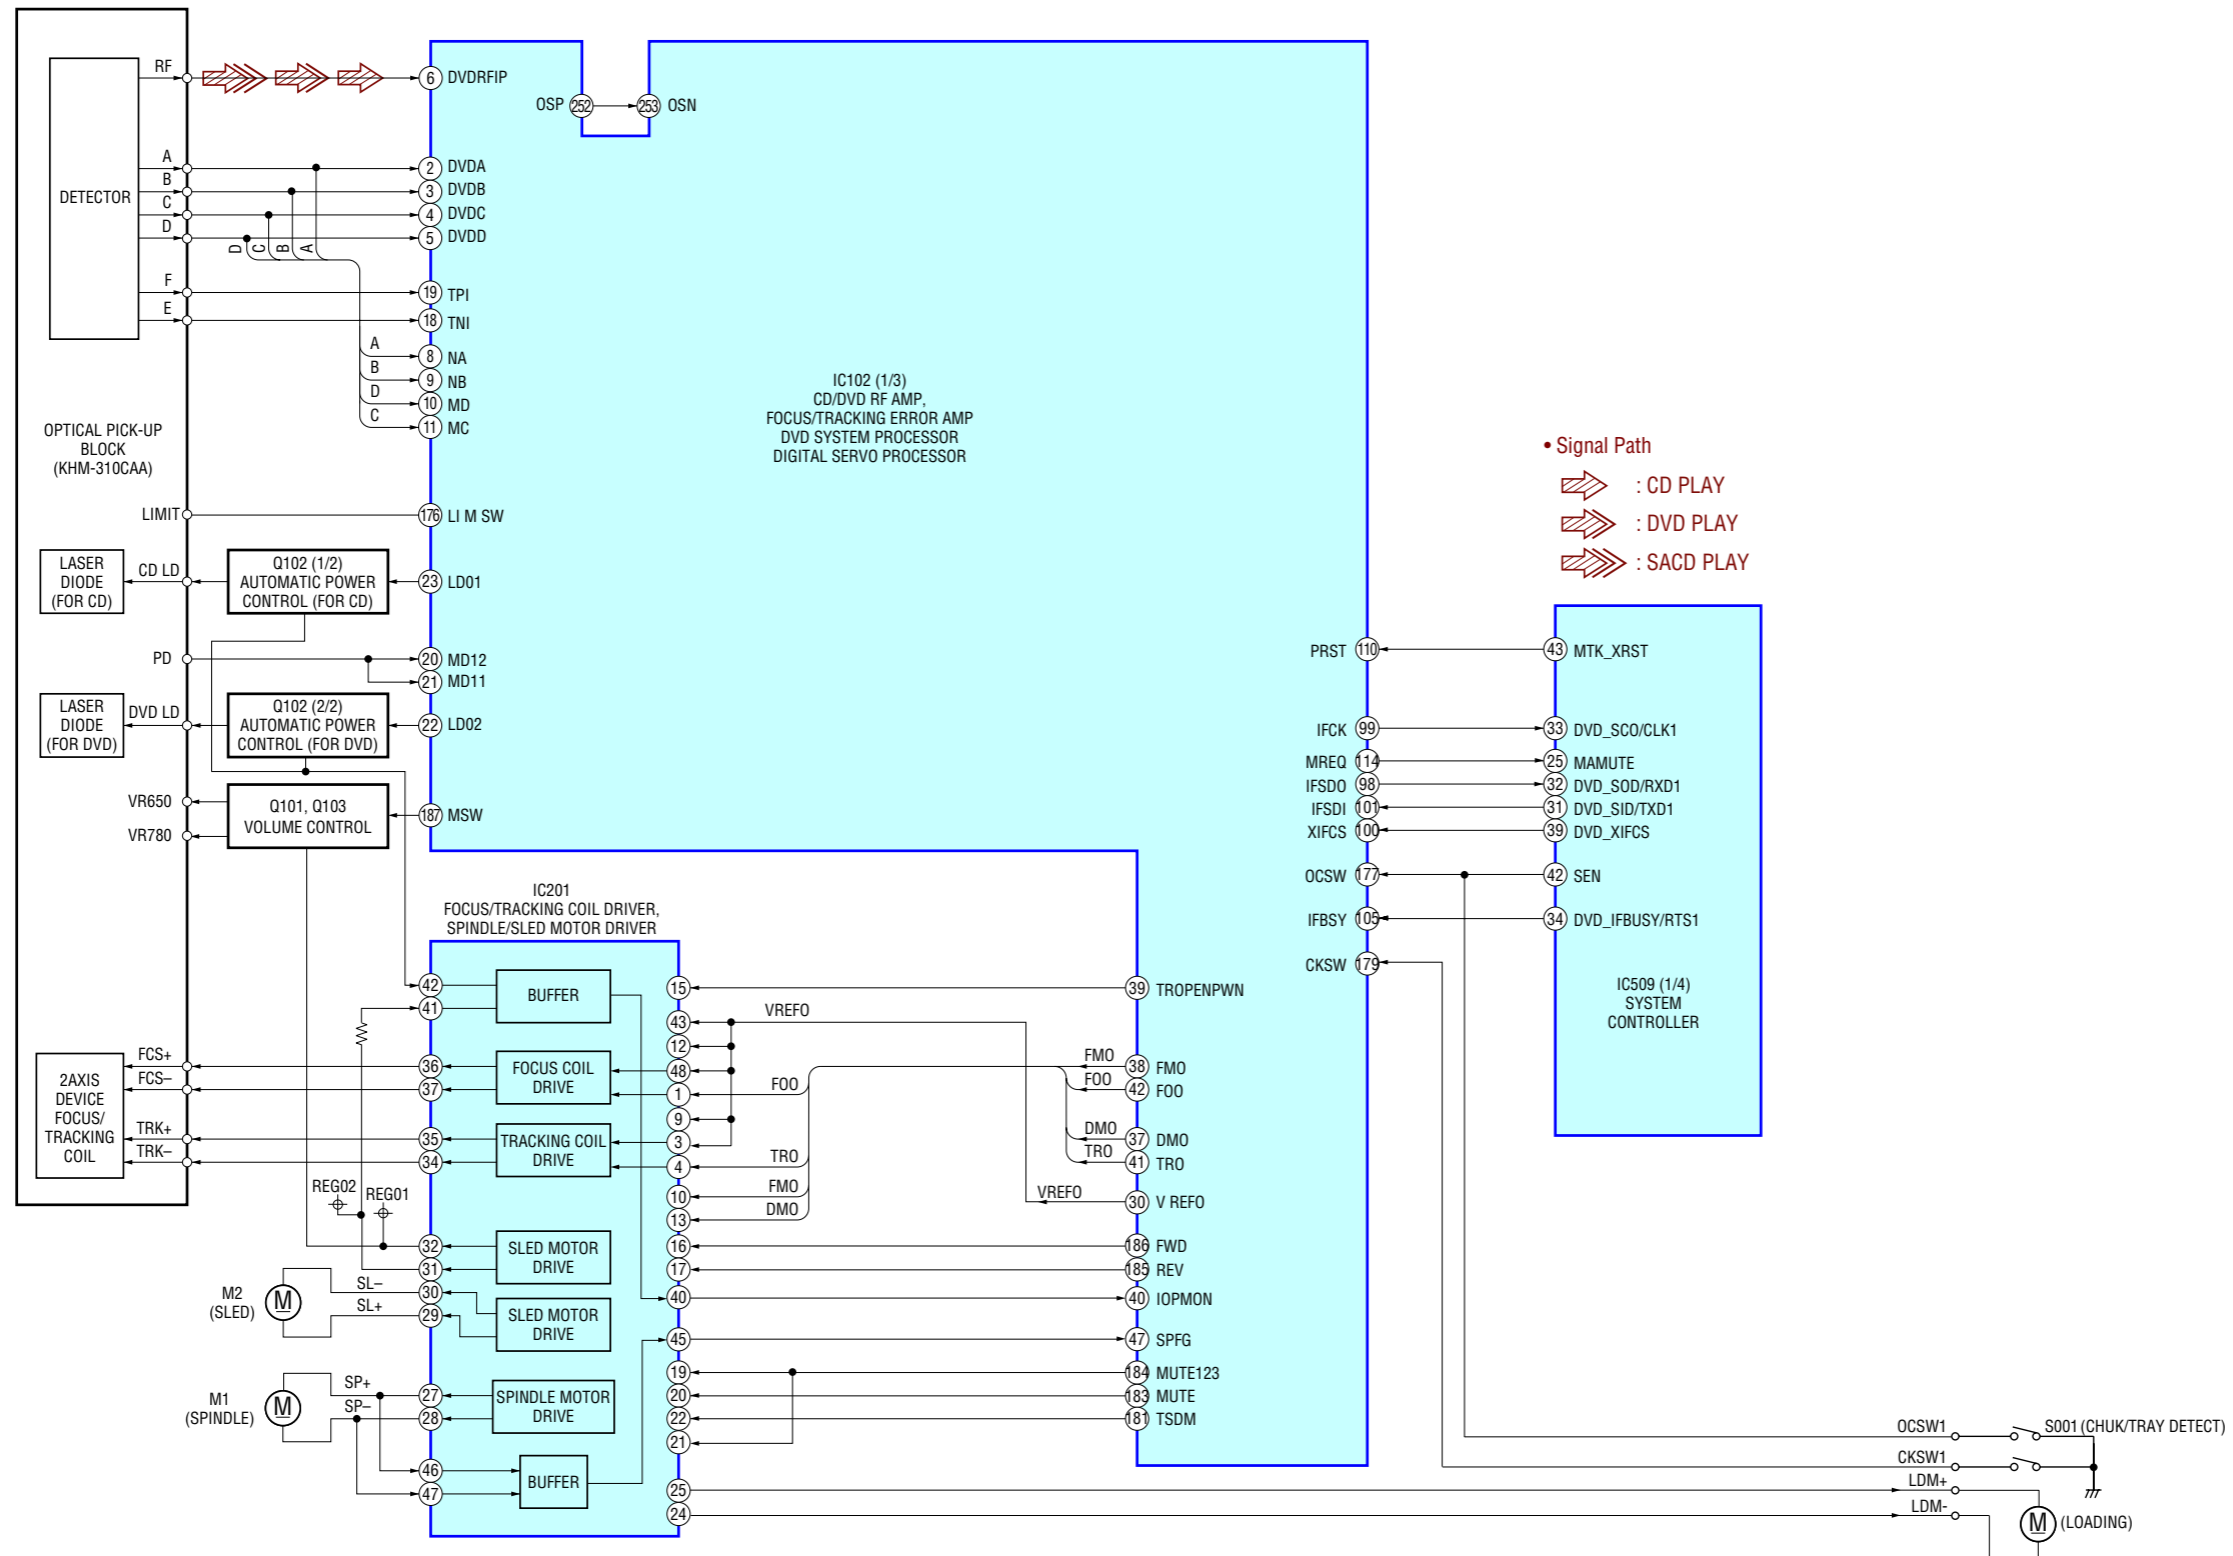

- VIDEO SECTION -

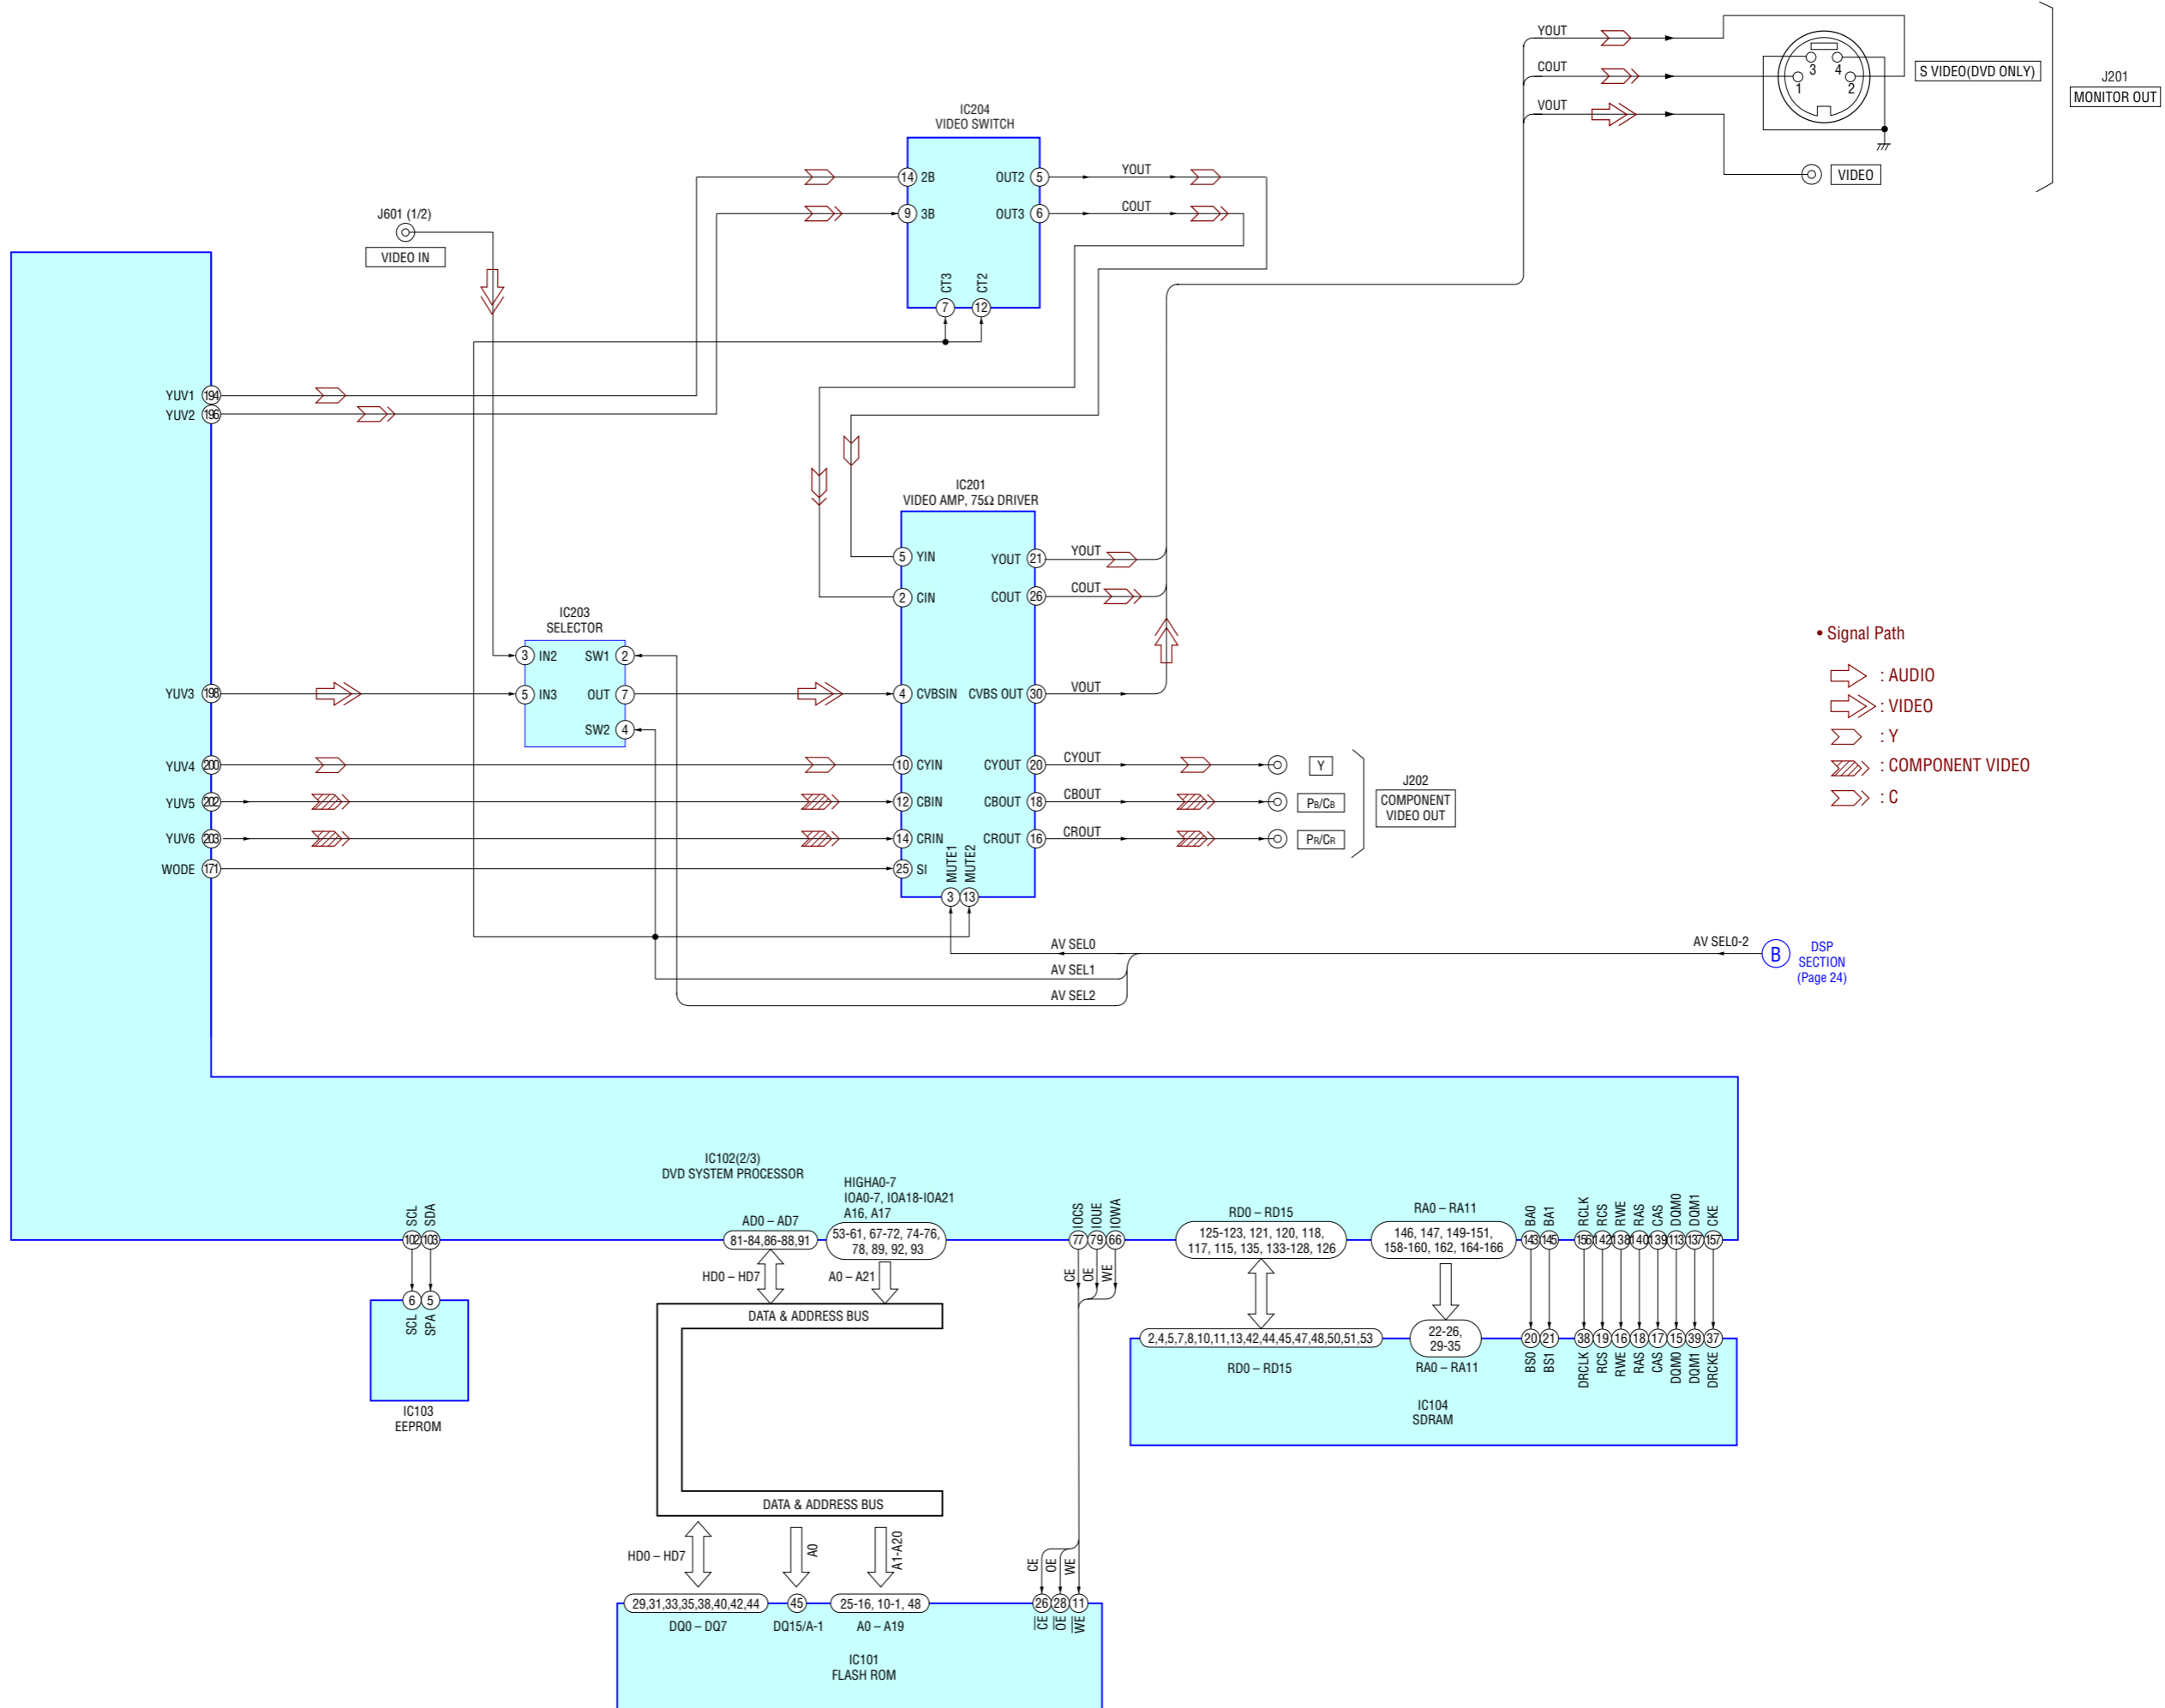


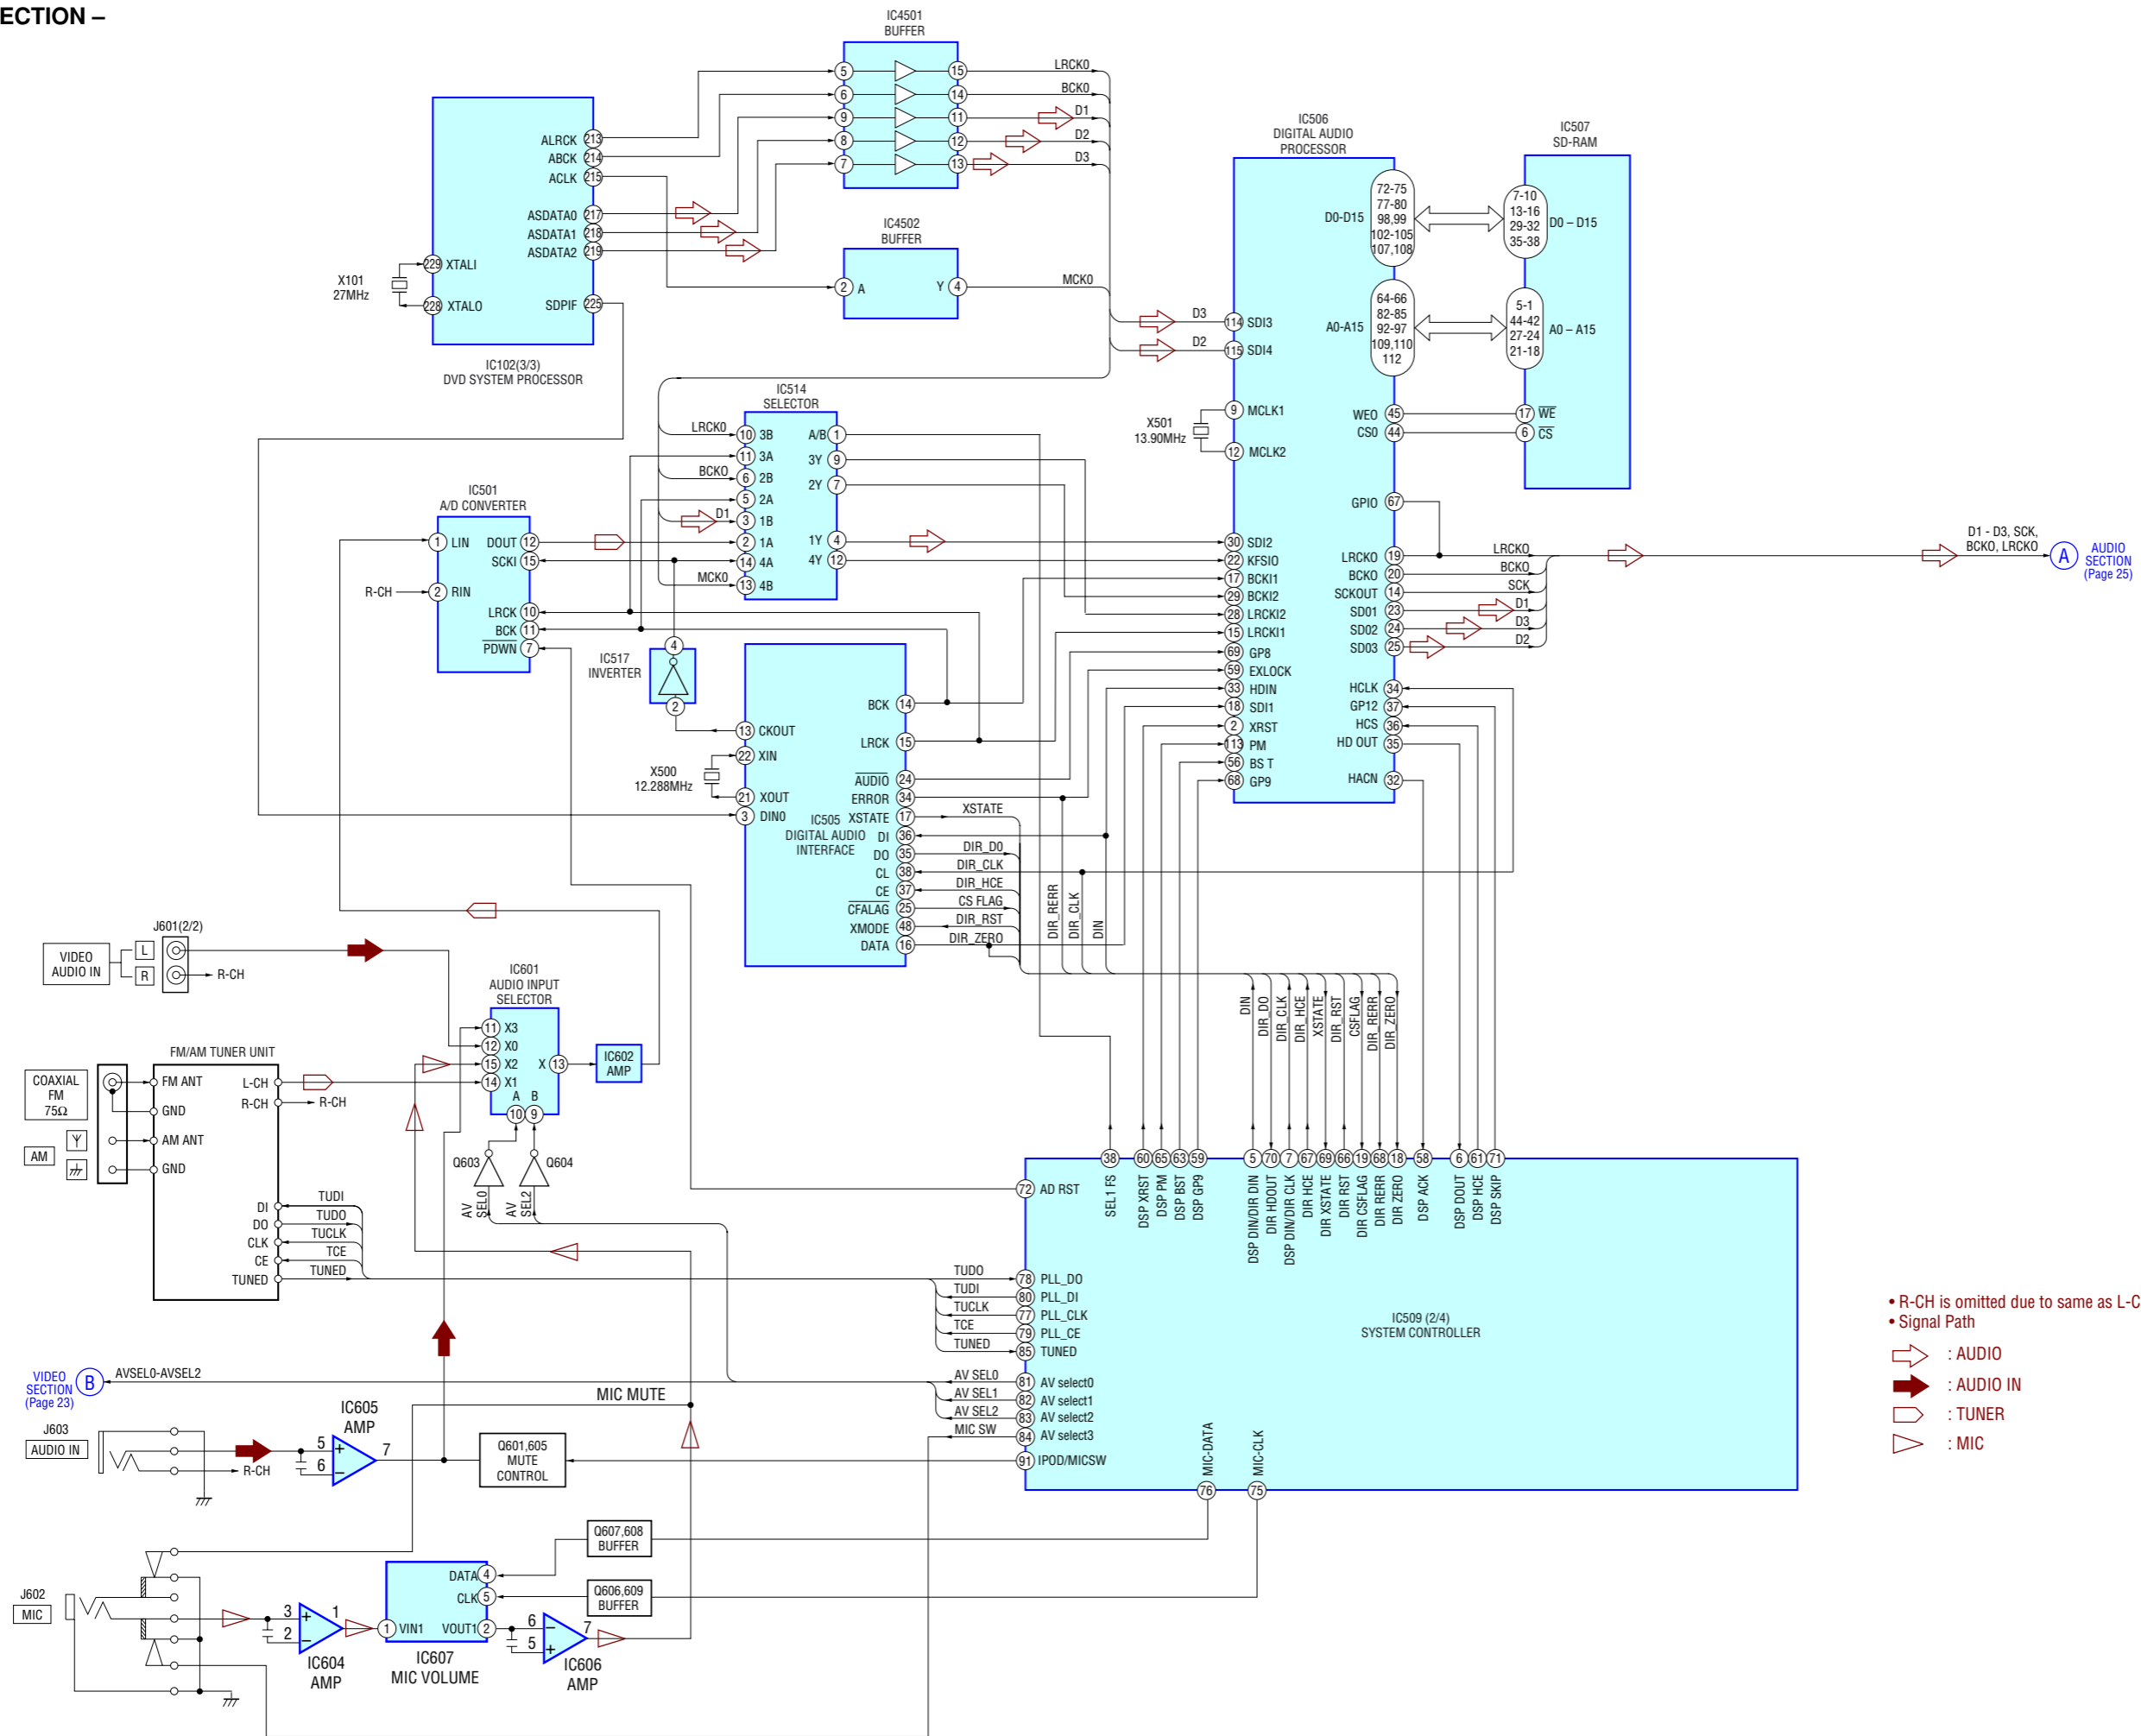


- R-CH is omitted due to same as L-CH.
- Signal Path
- ◁ : AUDIO
- ➡ : AUDIO IN
- ◻ : TUNER
- ◁ : MIC

- AUDIO SECTION -

• Signal Path
 ⇨ : AUDIO

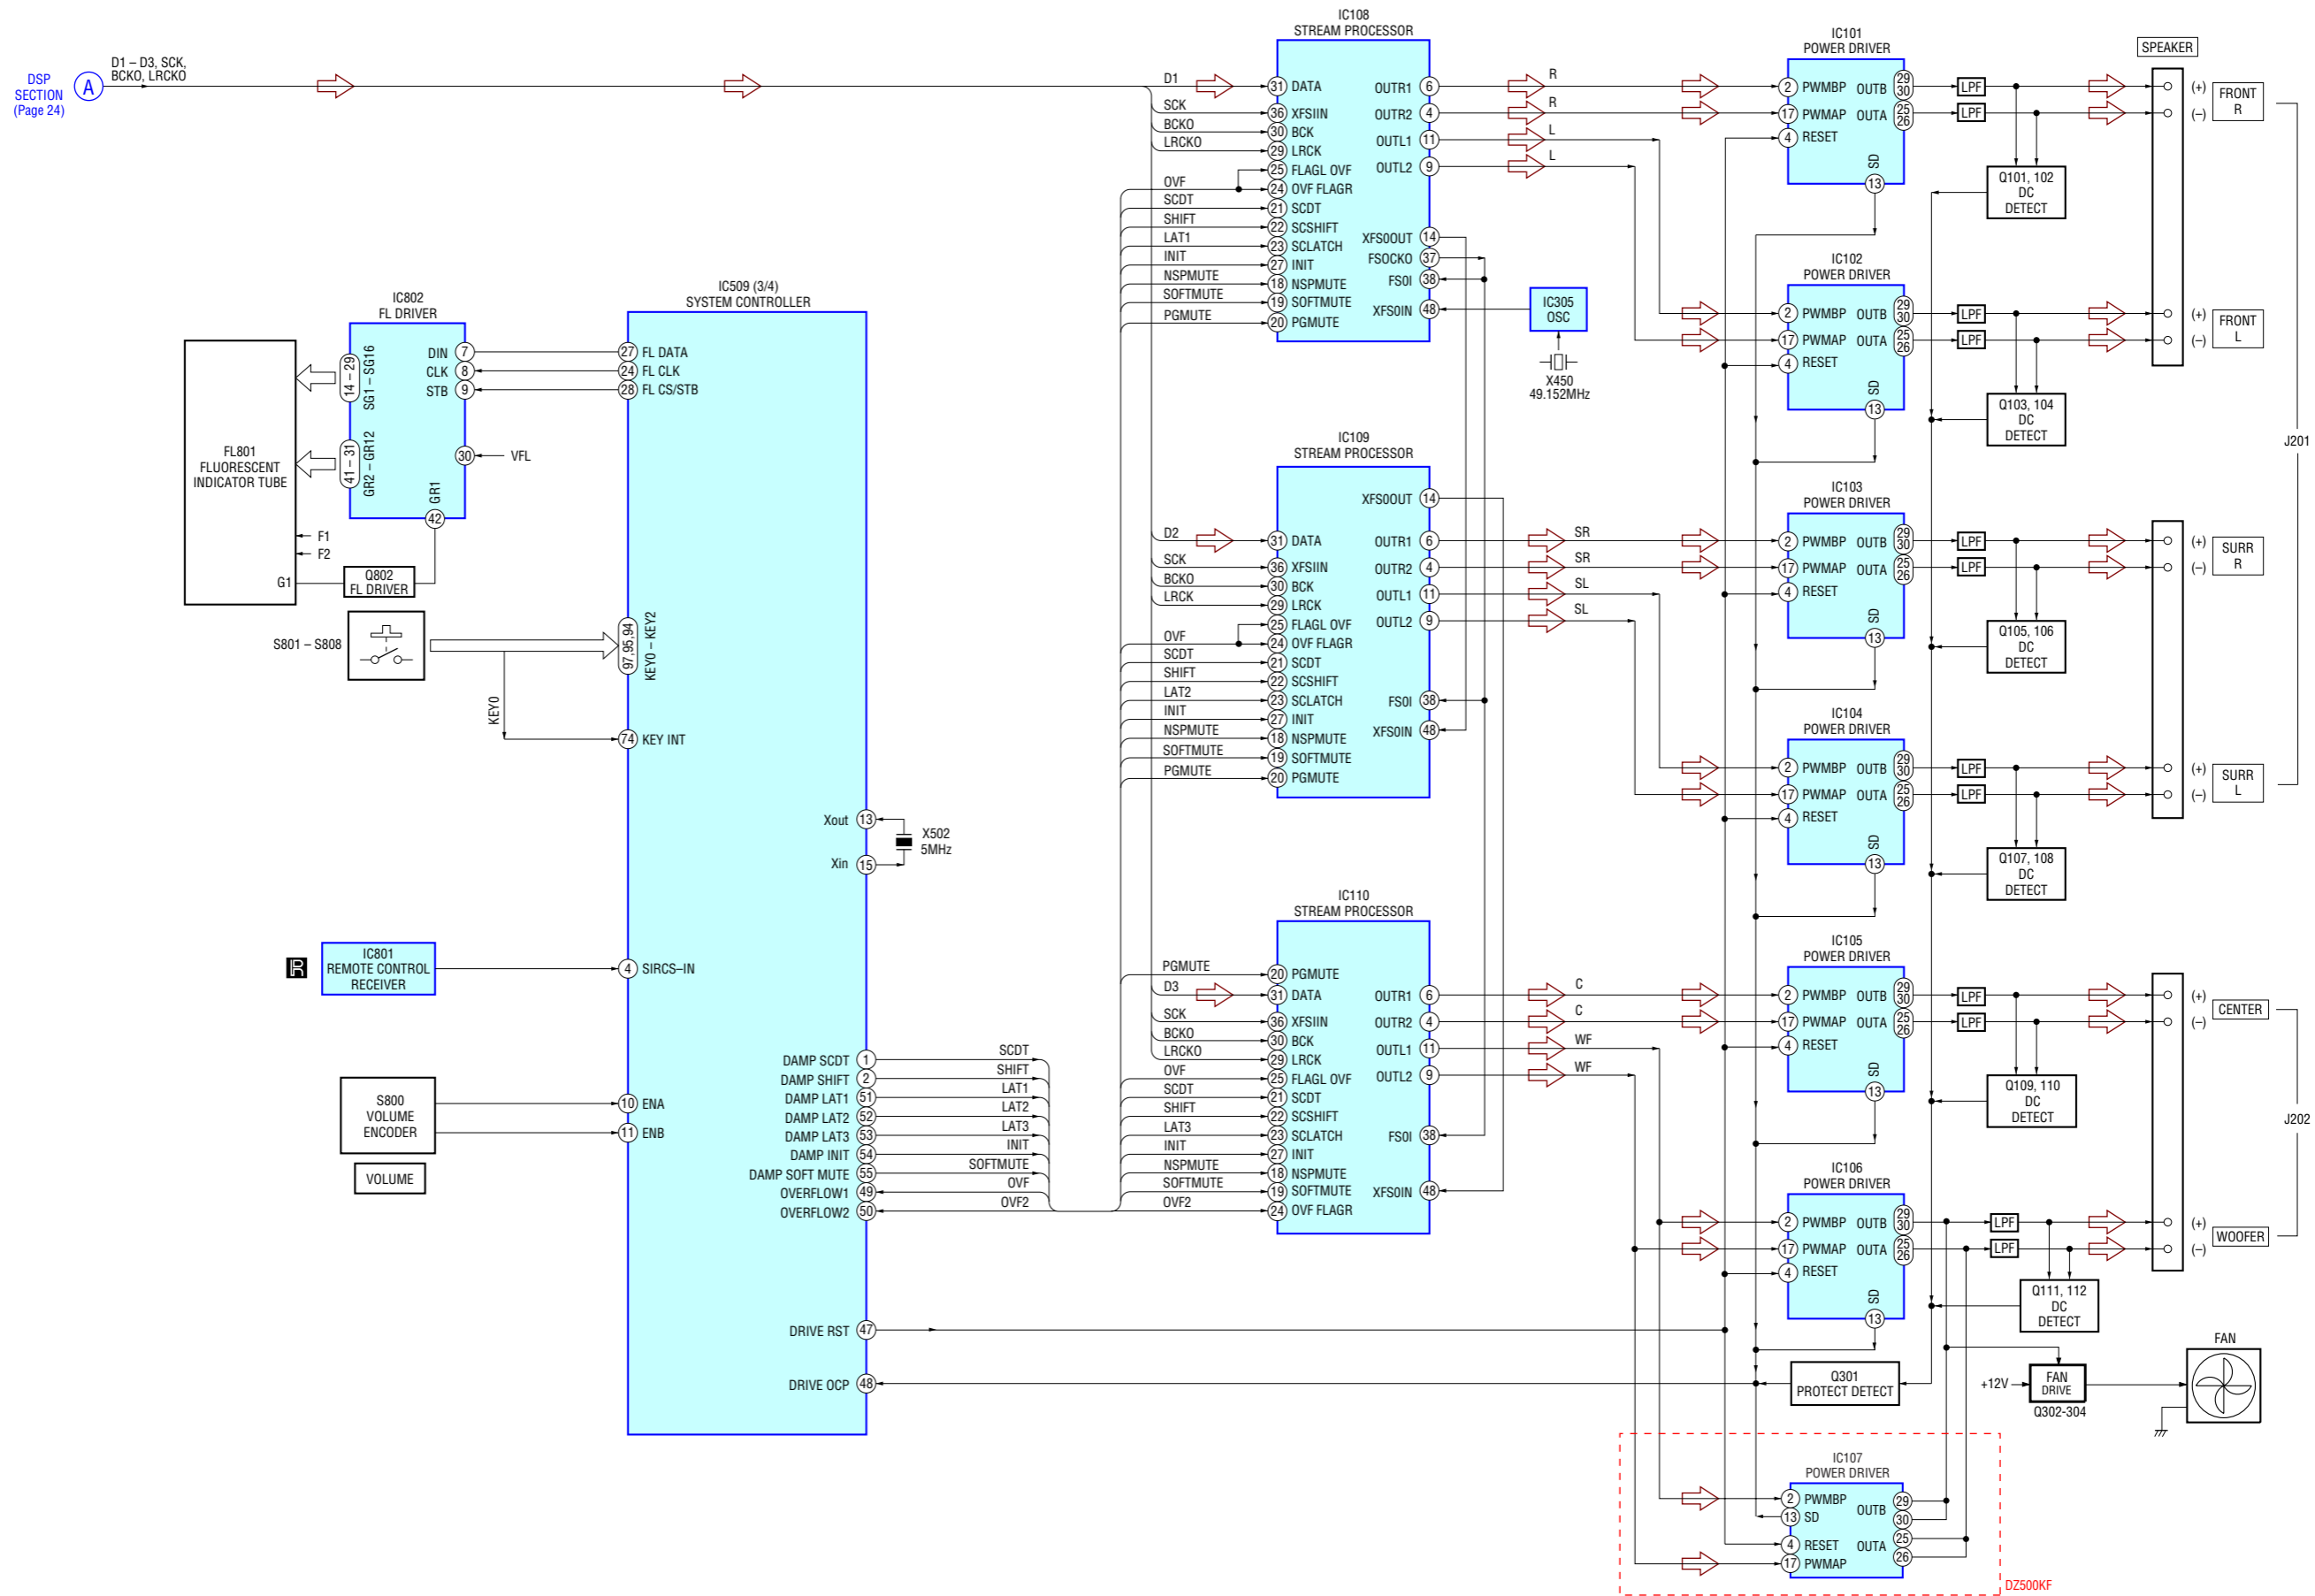


- POWER SECTION -

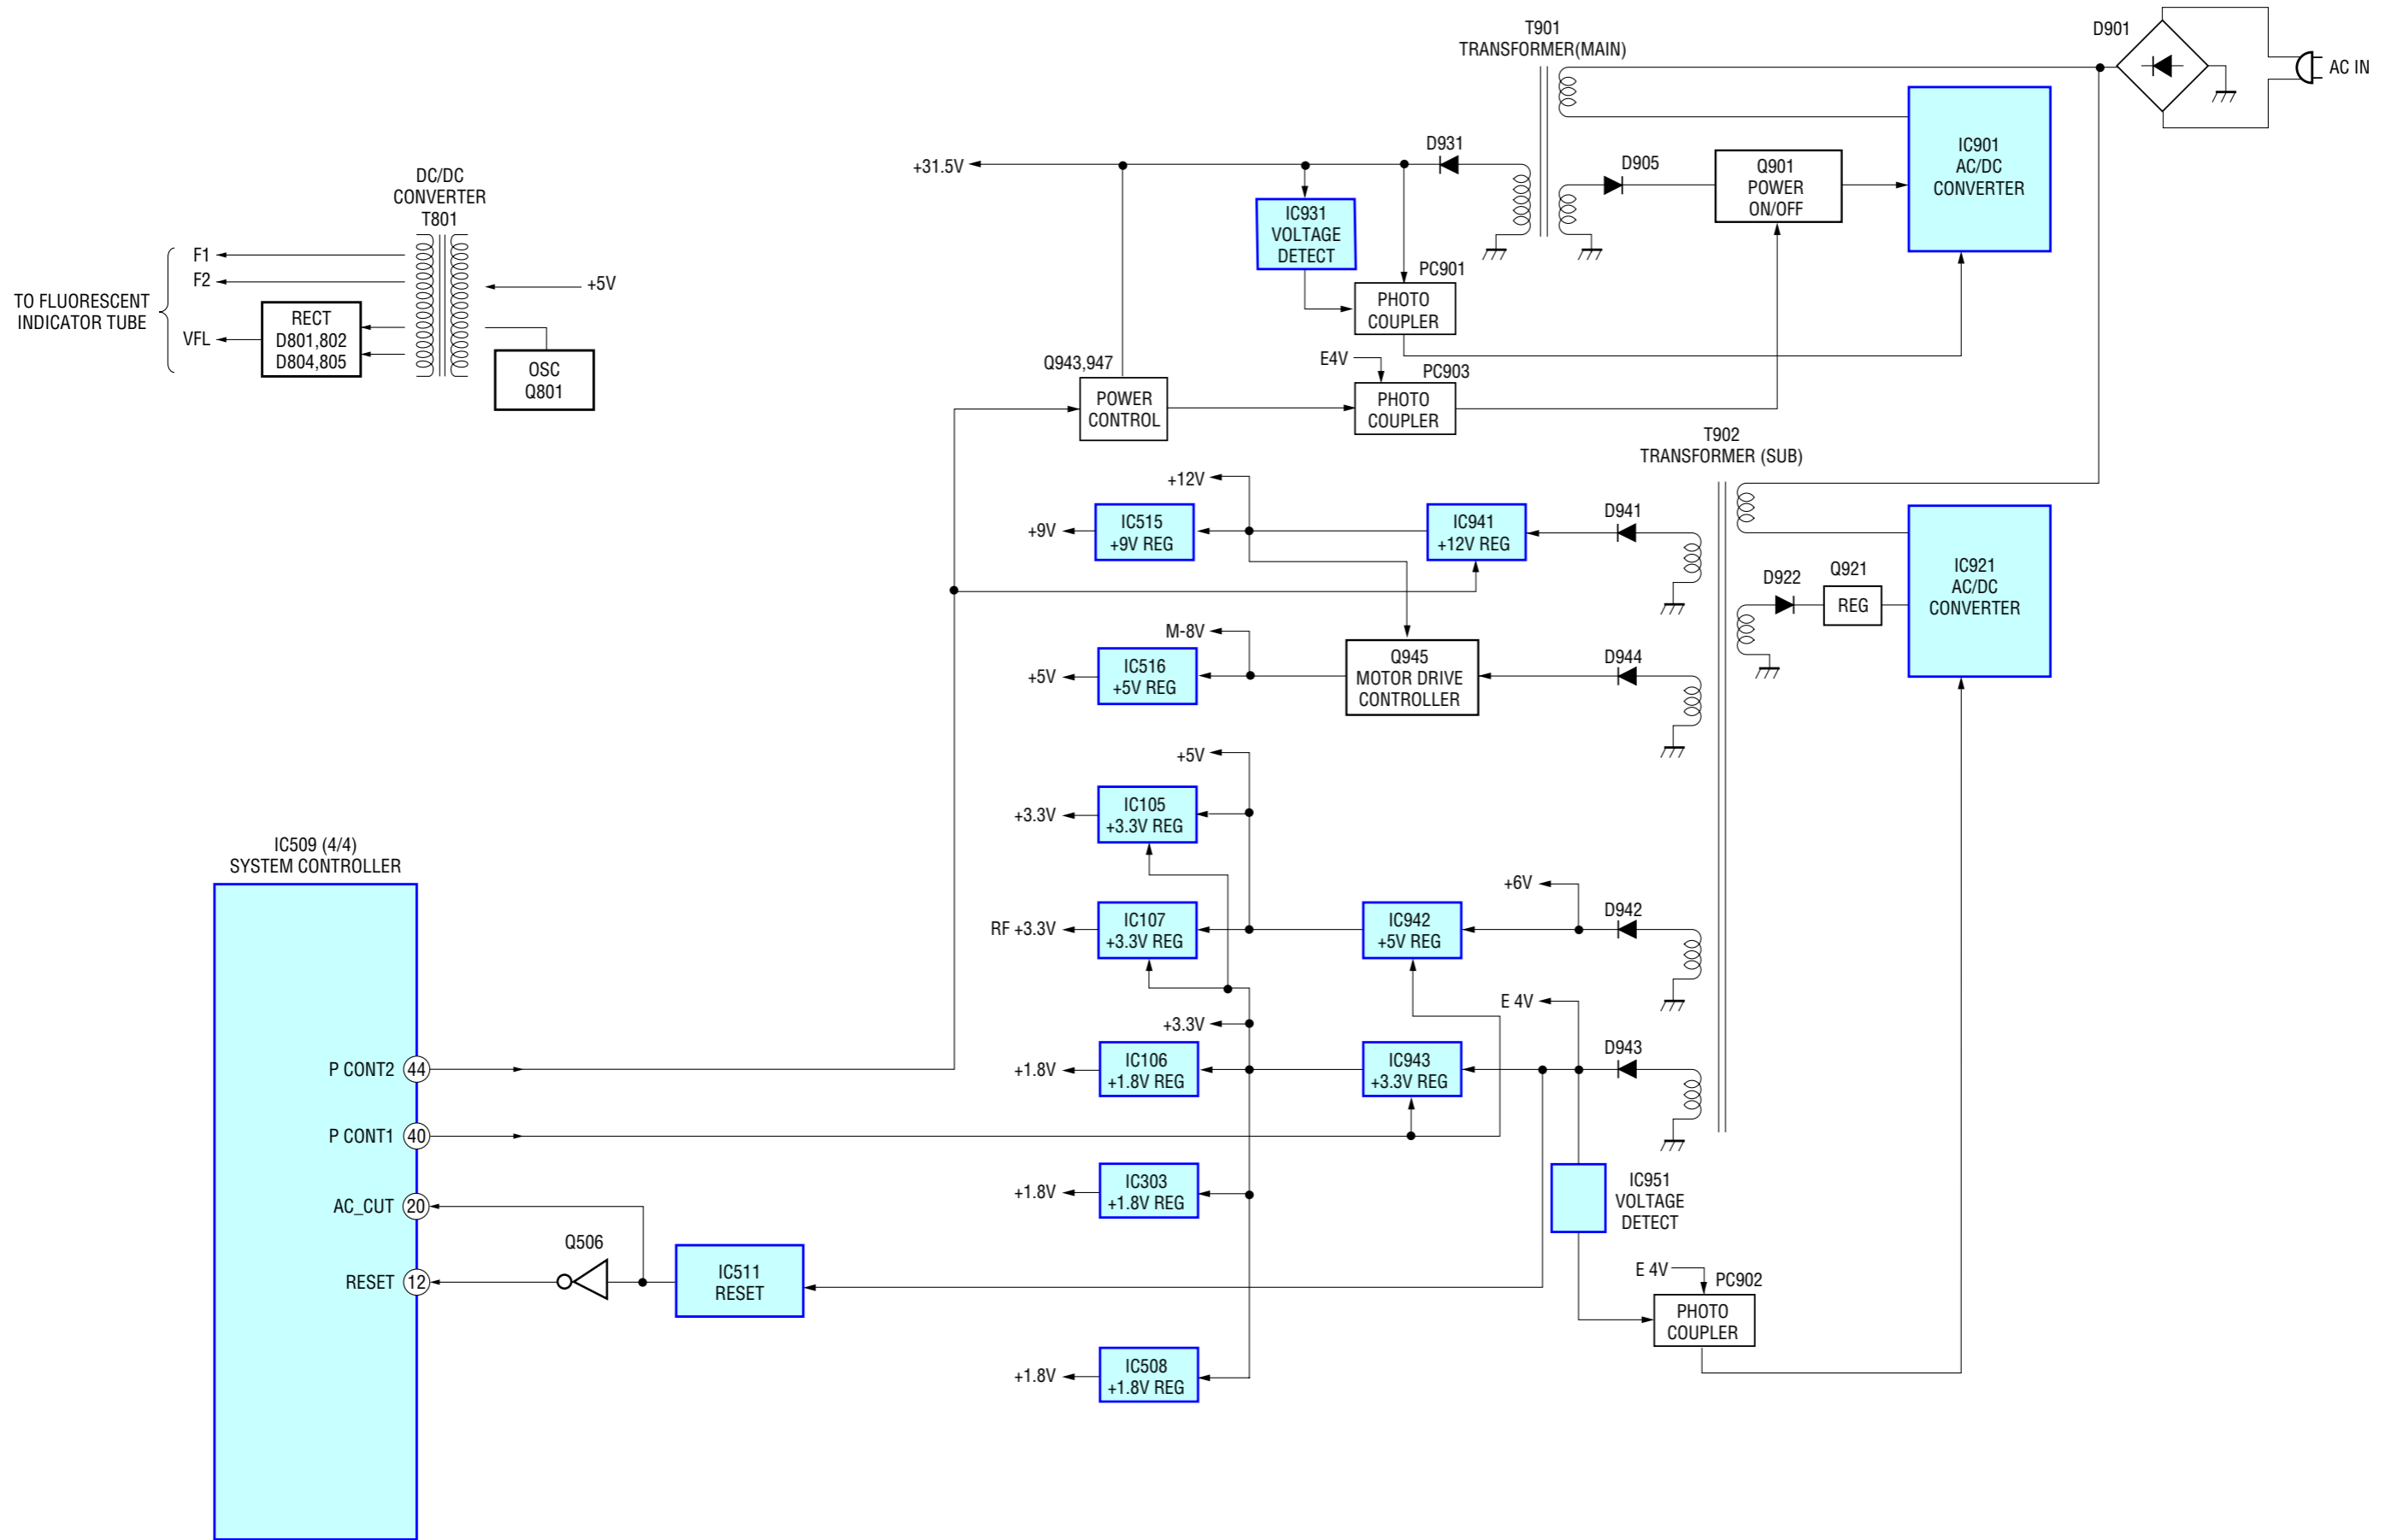

5-2. PRINTED WIRING BOARD – DMB10 BOARD (SIDE A) –


• See page 21 for Circuit Boards Location.  :Uses unleaded solder.

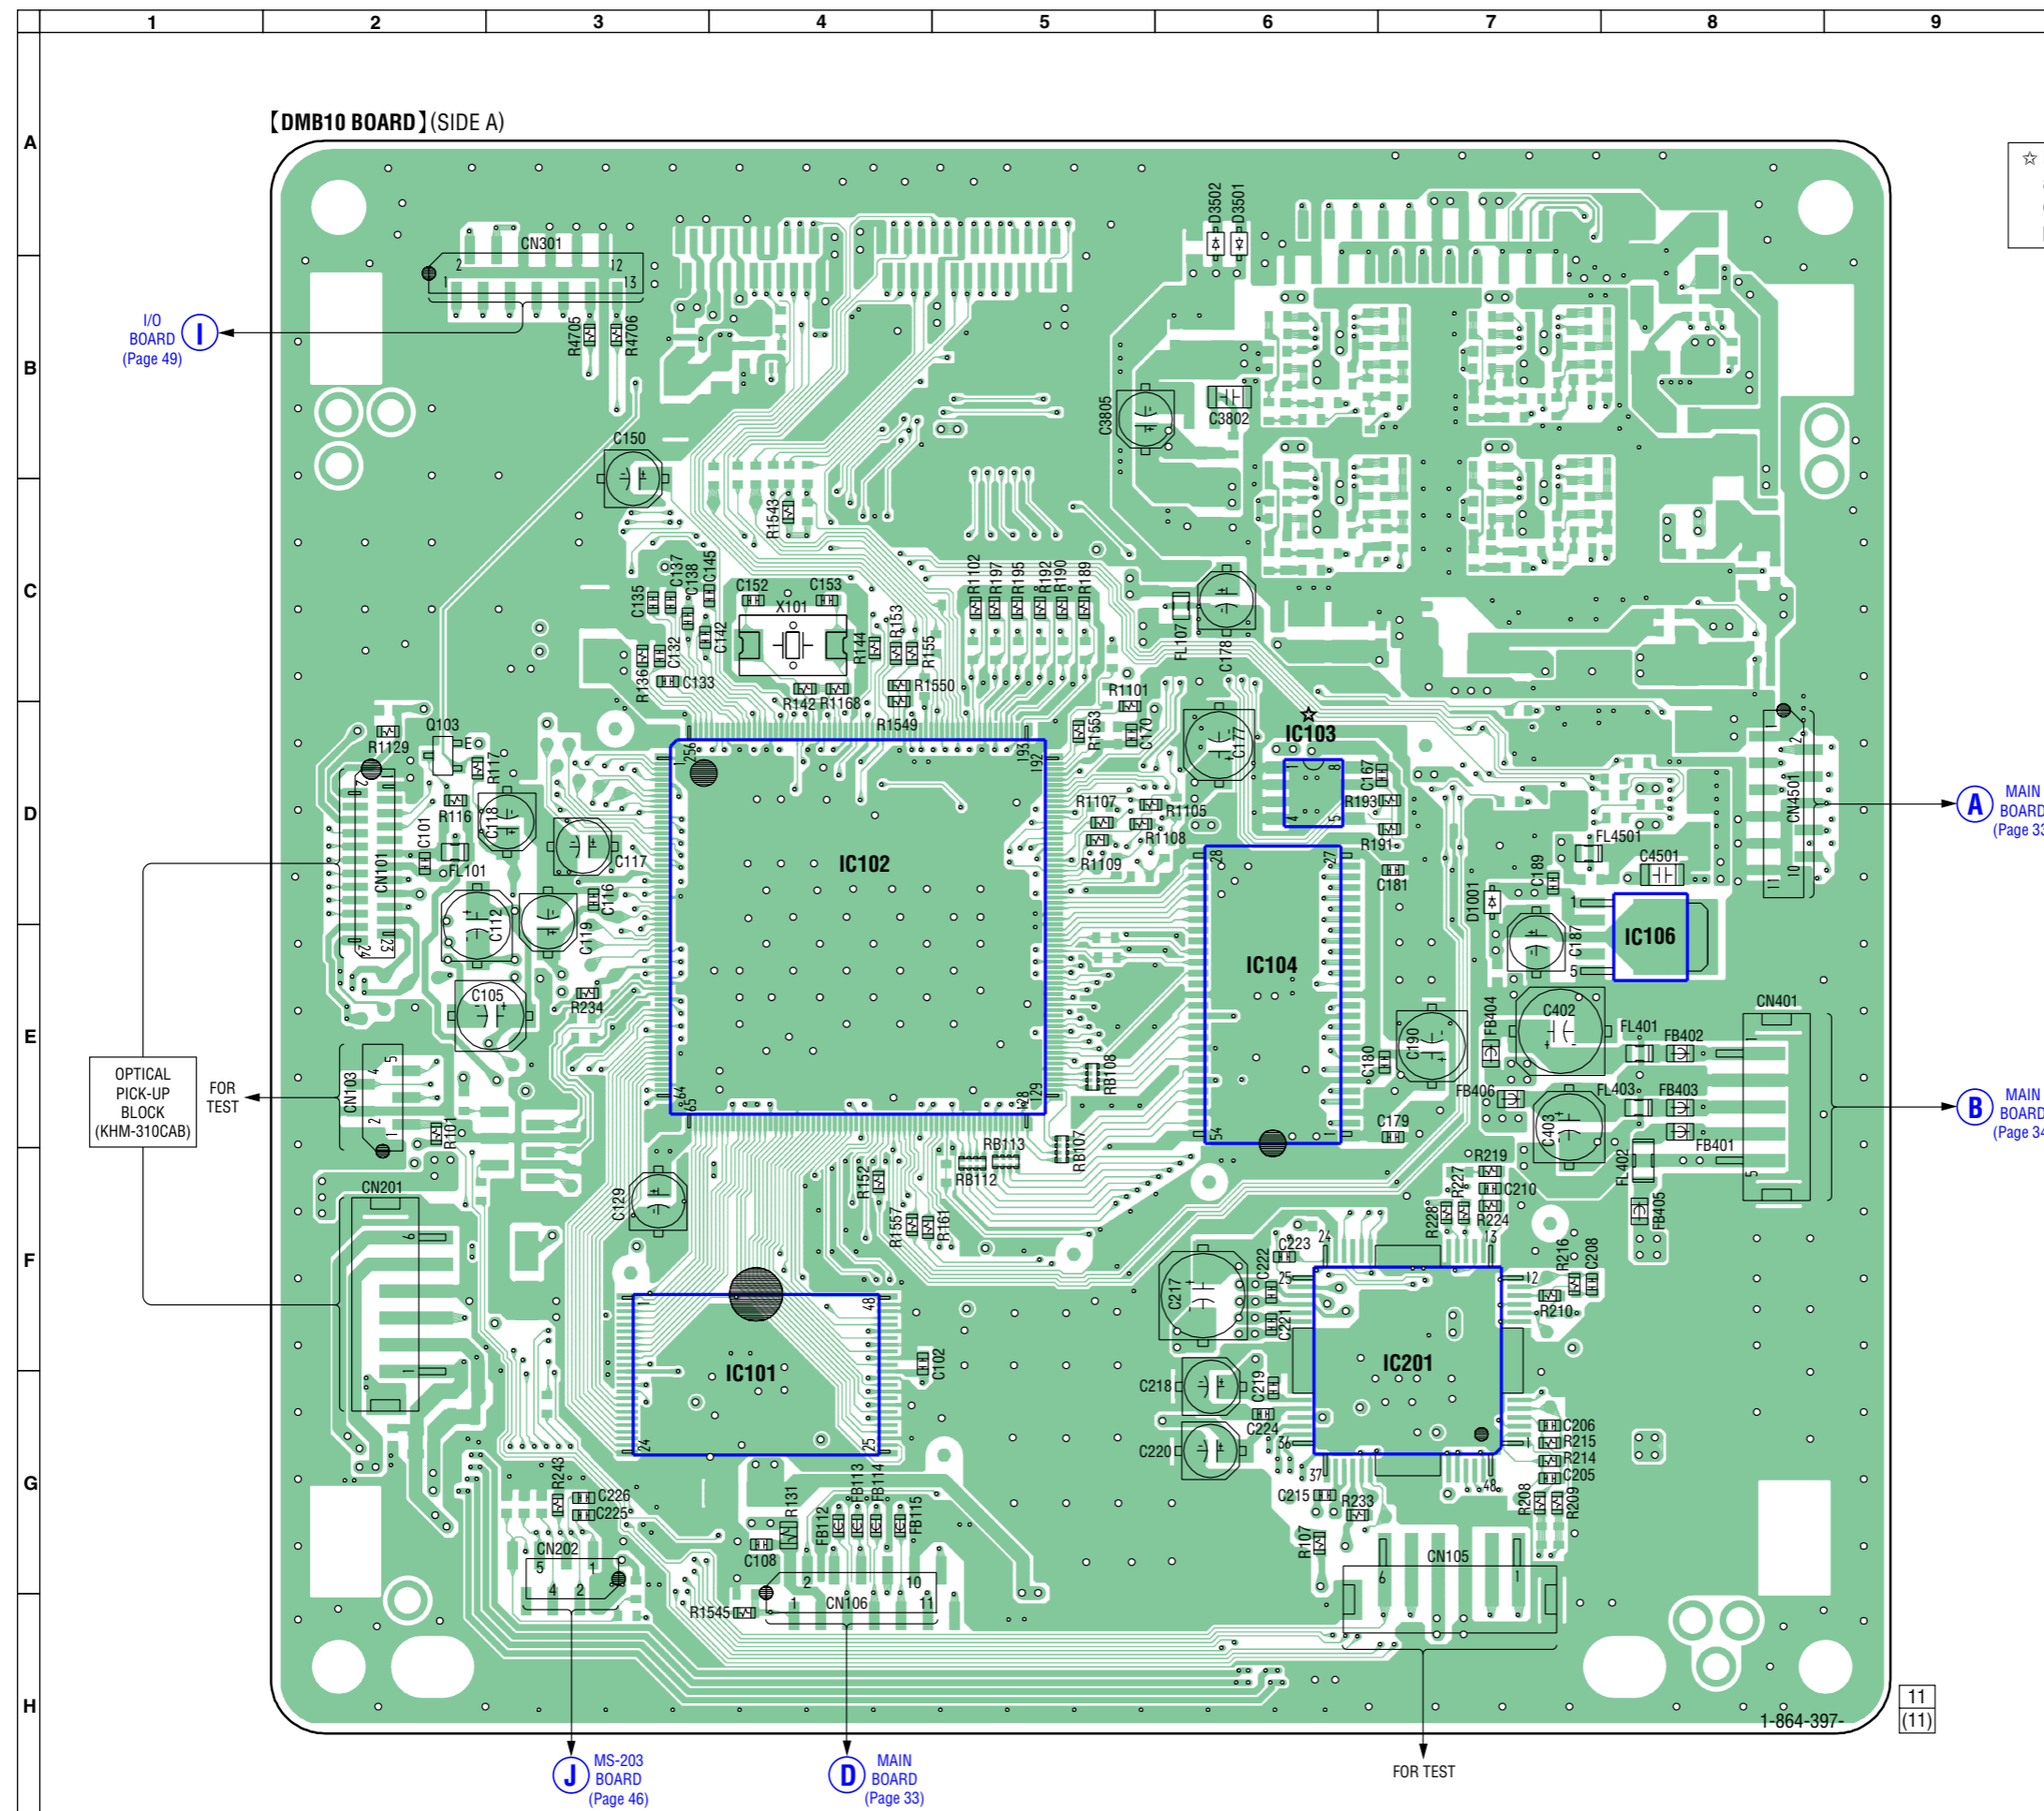

☆ IC103 is a written in and settled EEPROM. Supply with a single article has not been carried out. In case you exchange by DMB10 board (A-1139-088-A), please put on IC103 currently used with the model again.

• Semiconductor Location

Ref. No.	Location
D1001	D-7
D3501	A-6
D3502	A-6
IC101	G-4
IC102	D-4
IC103	D-6
IC104	E-6
IC106	E-8
IC201	F-7
Q103	D-2

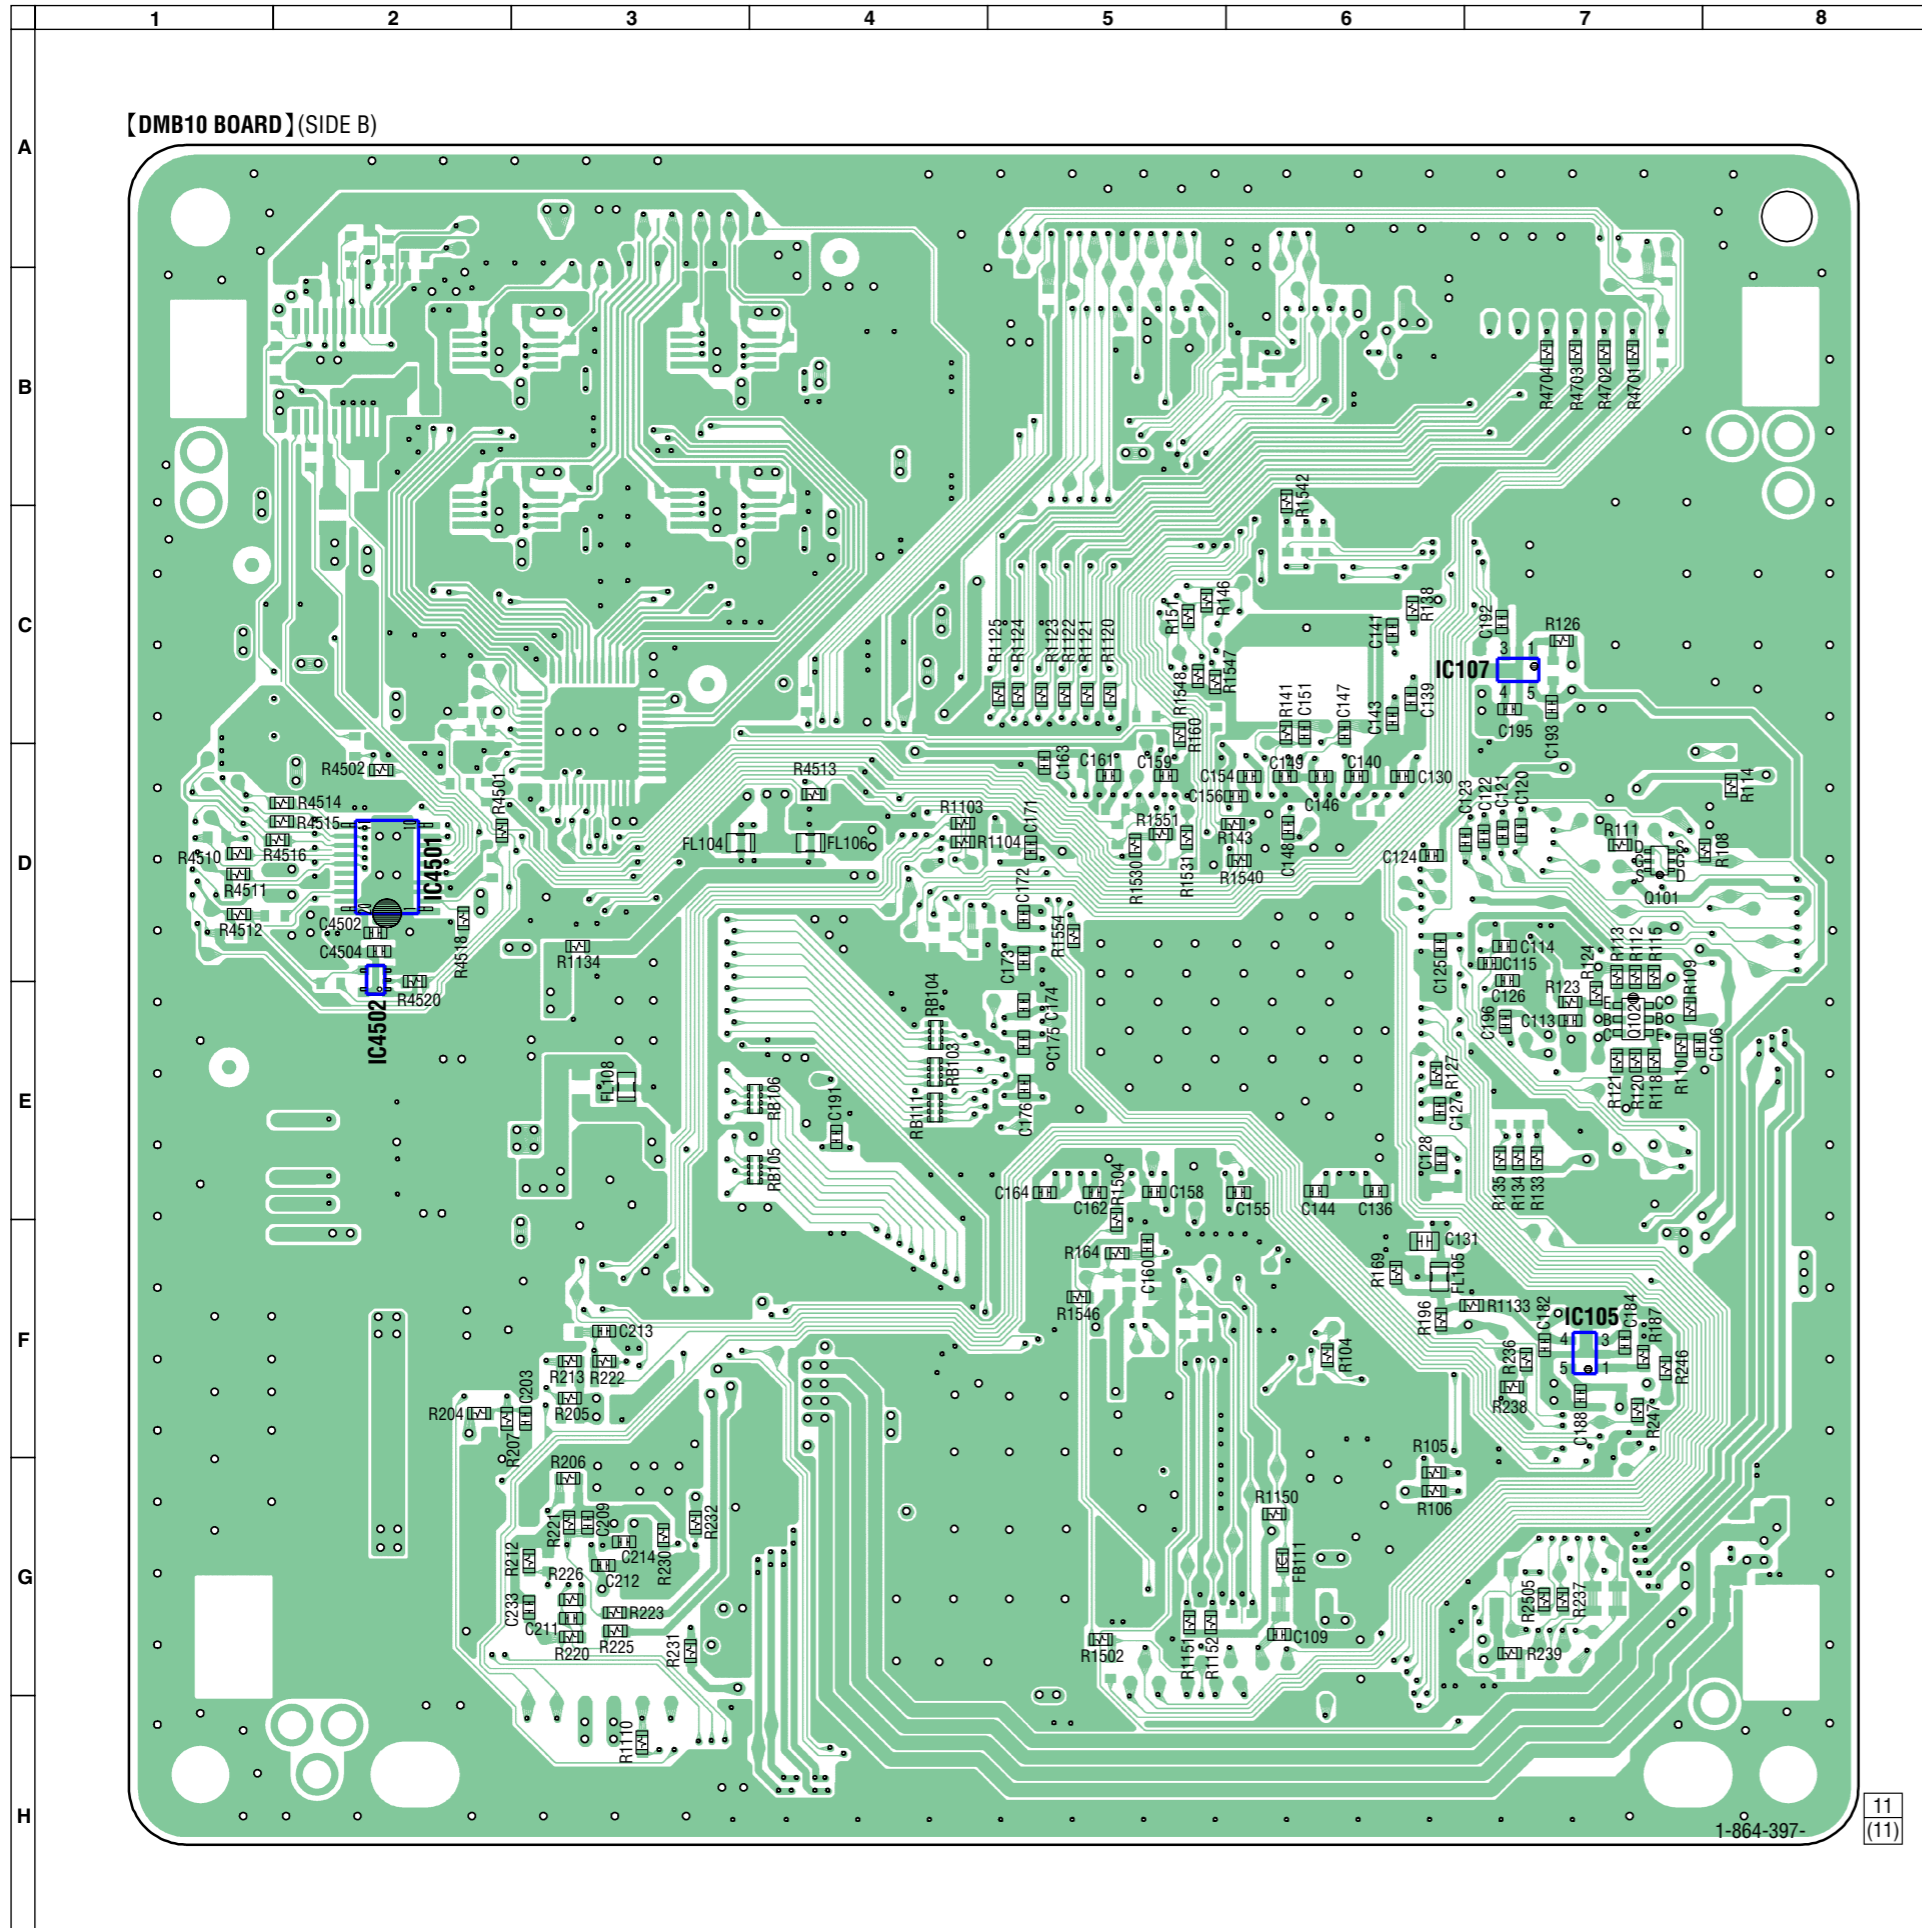


• Semiconductor Location


Ref. No.	Location
IC105	F-7
IC107	C-7
IC4501	D-2
IC4502	E-2
Q101	D-7
Q102	E-7


11
(11)

5-4. SCHEMATIC DIAGRAM – DMB10 BOARD (1/4) –

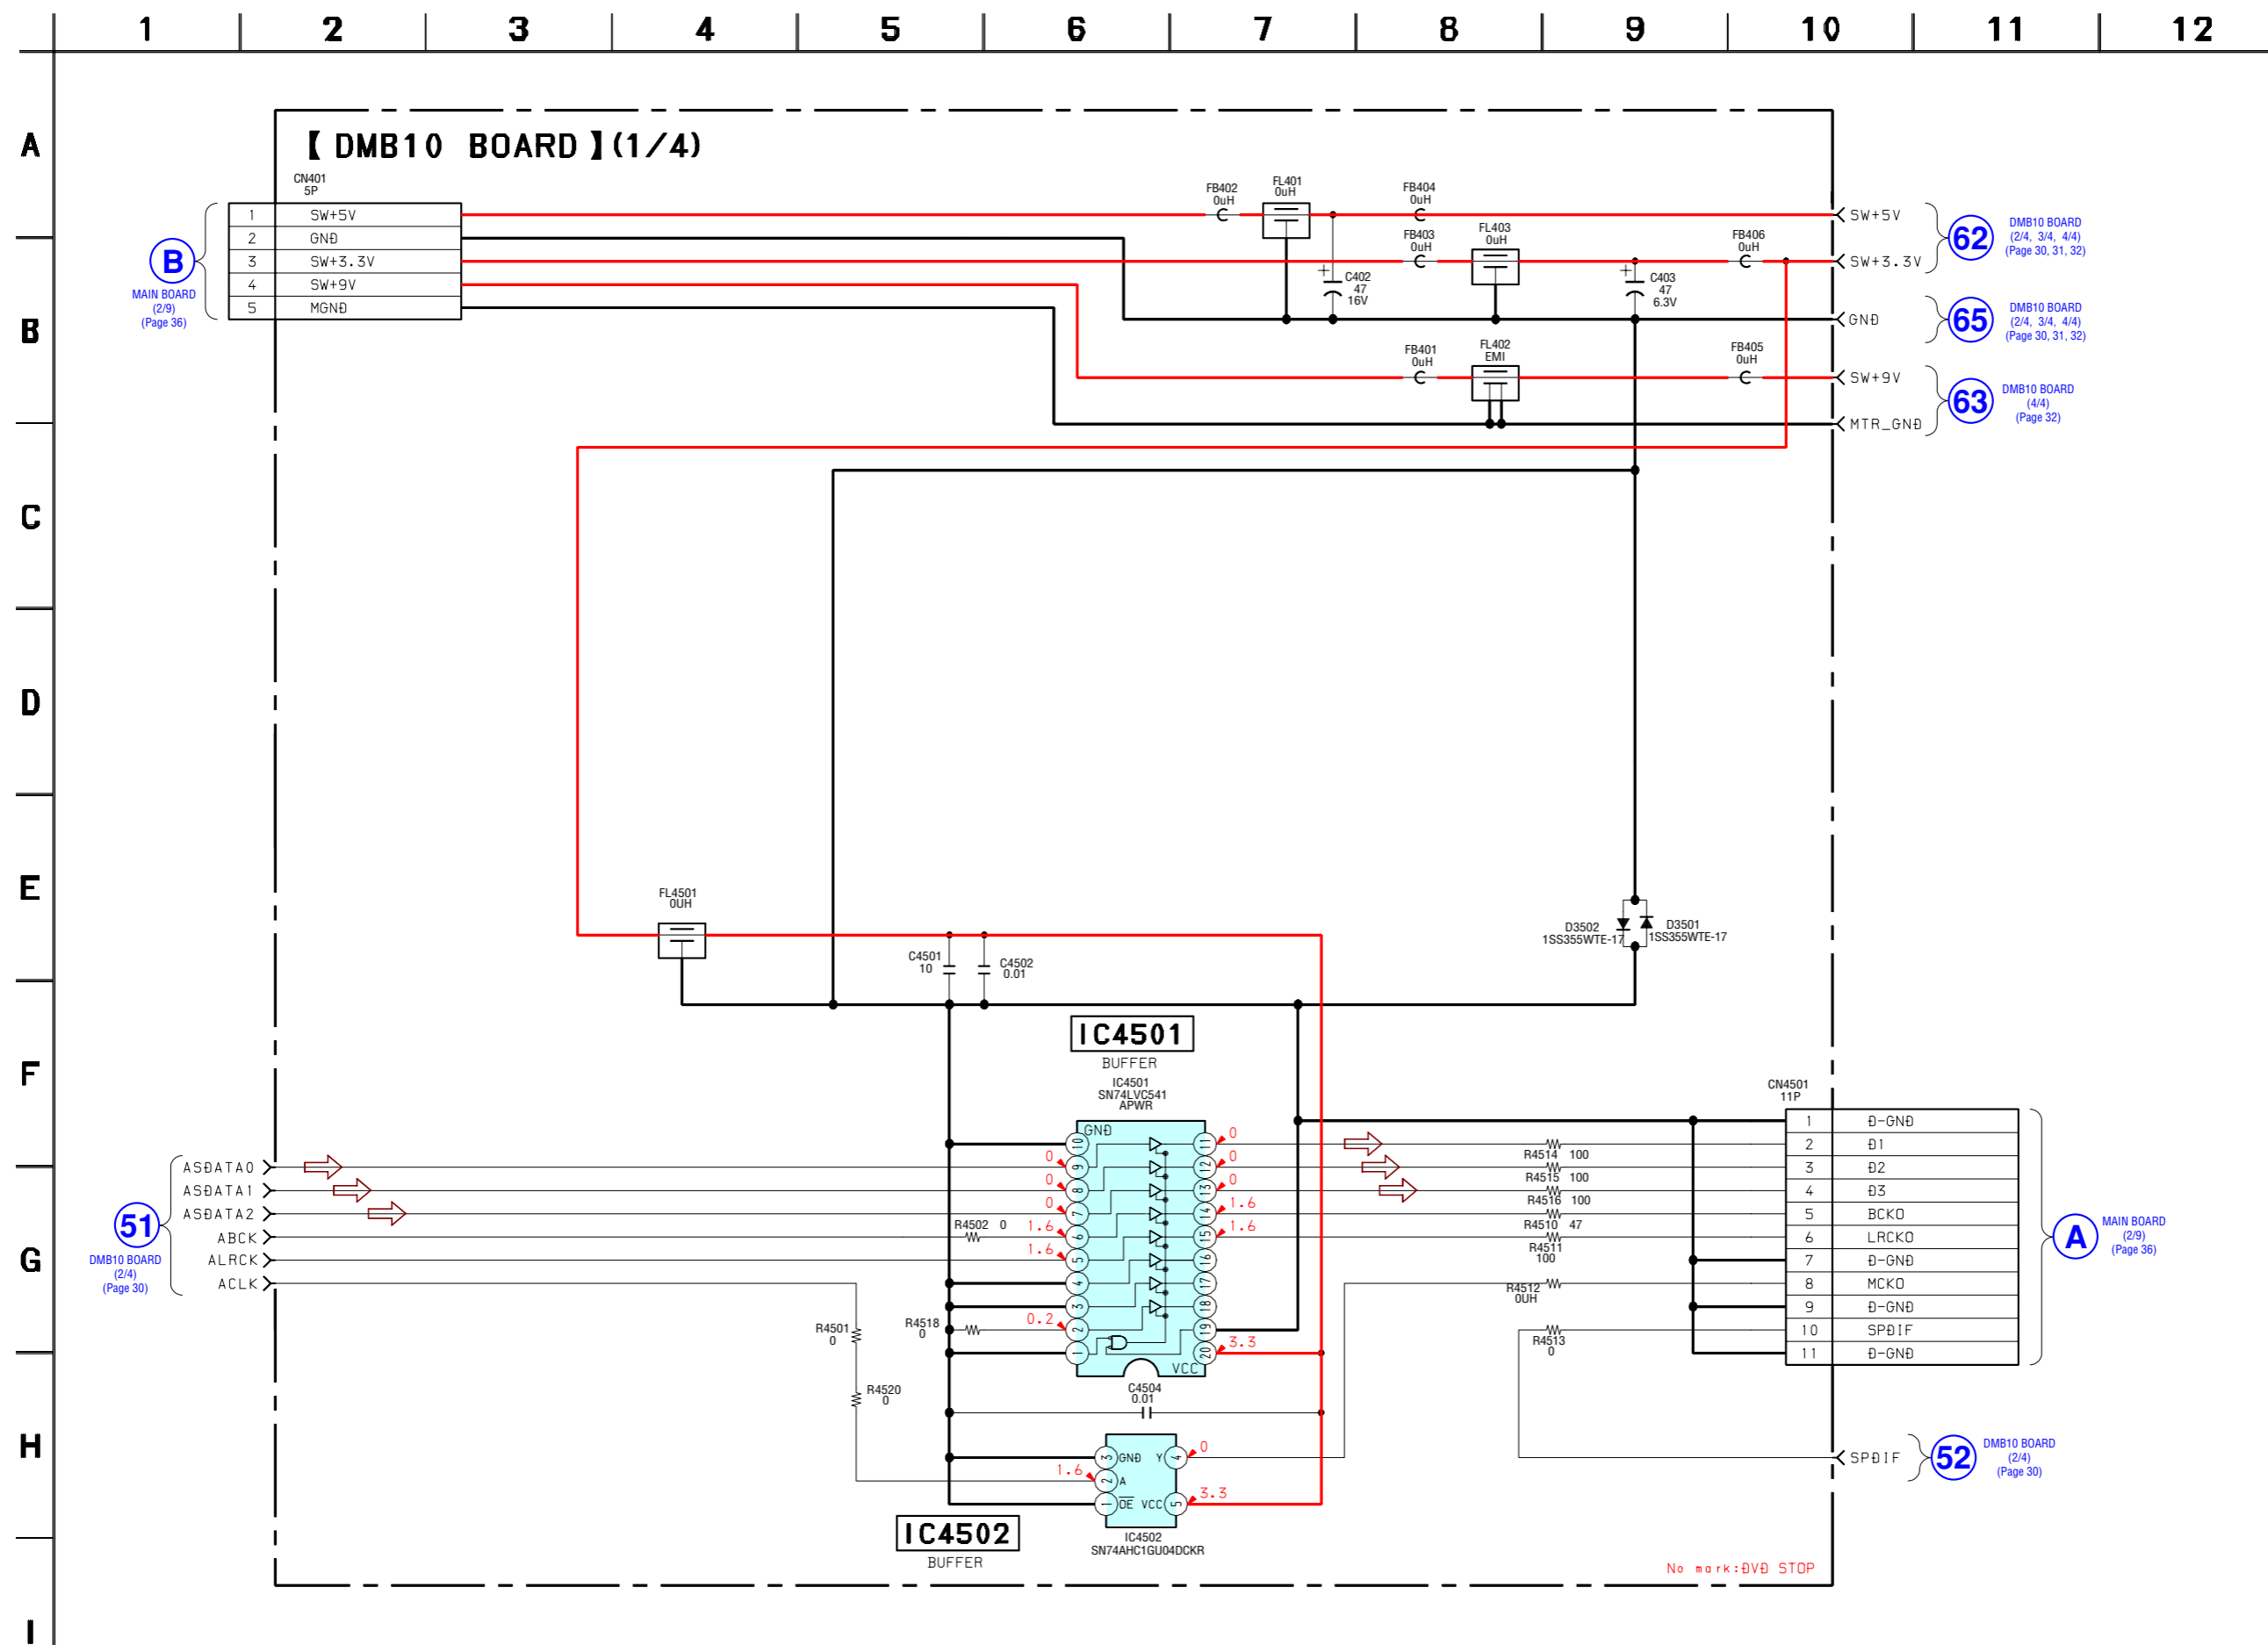

5-6. SCHEMATIC DIAGRAM – DMB10 BOARD (3/4) –

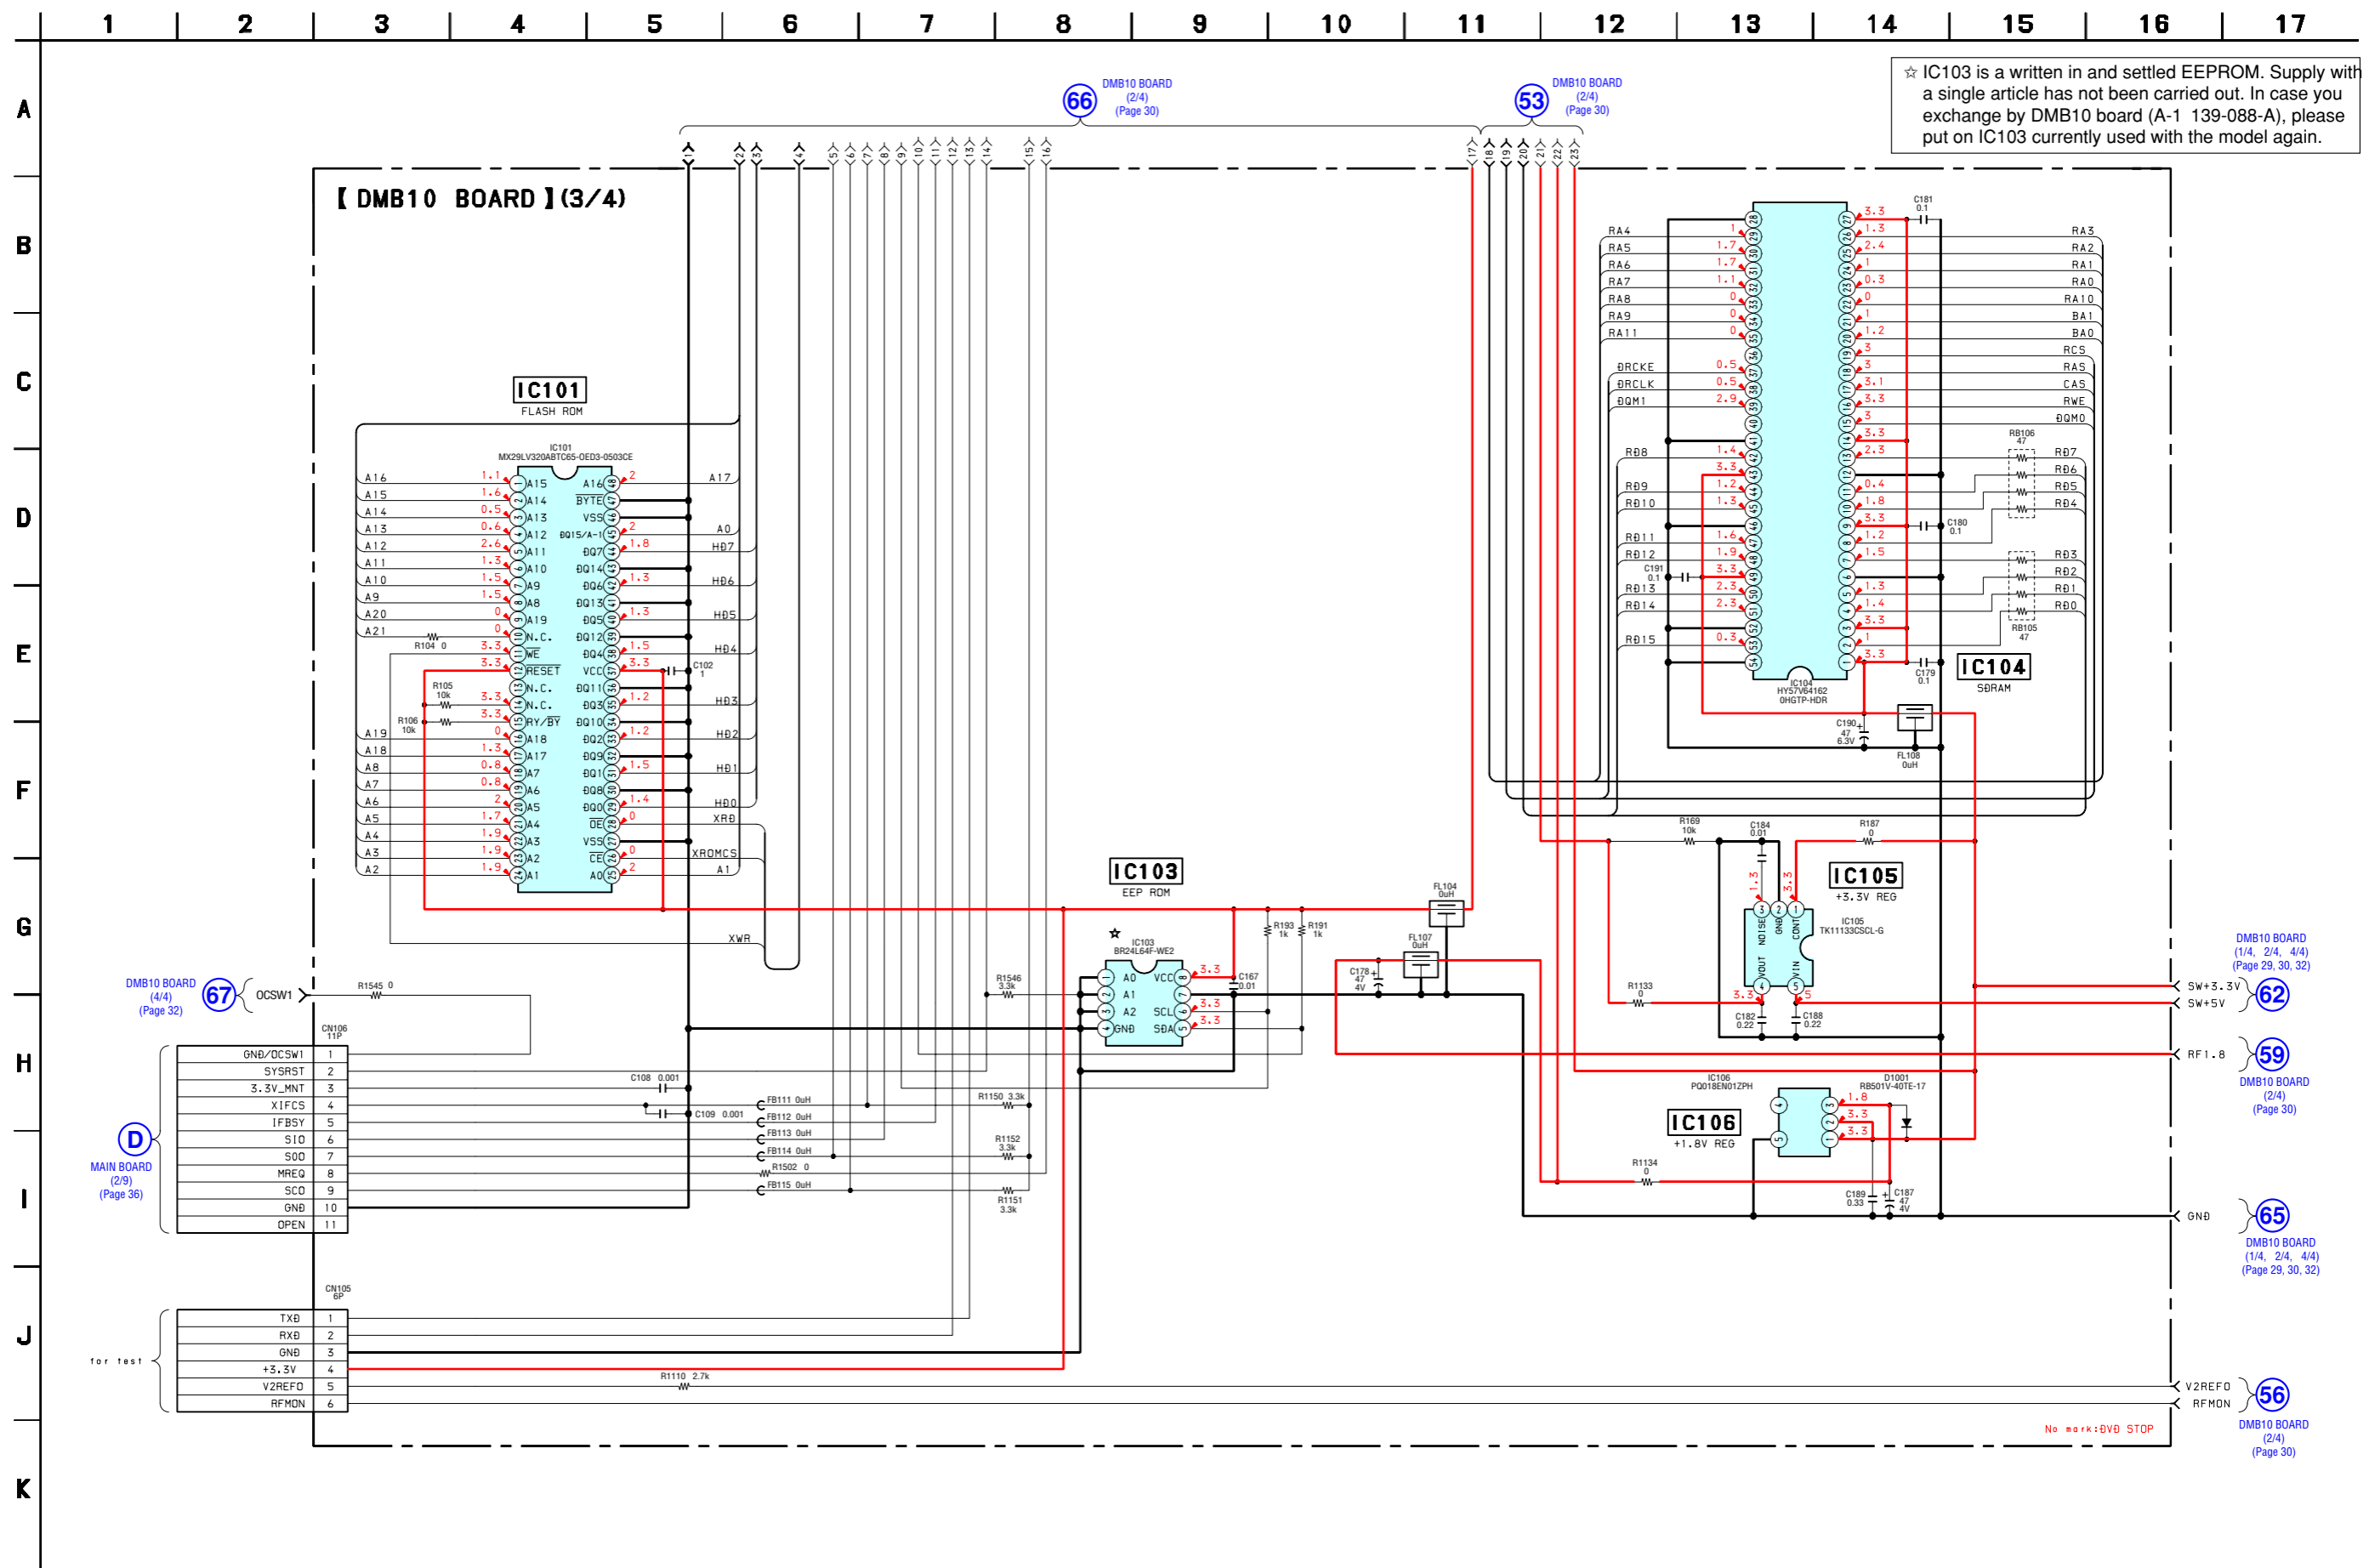

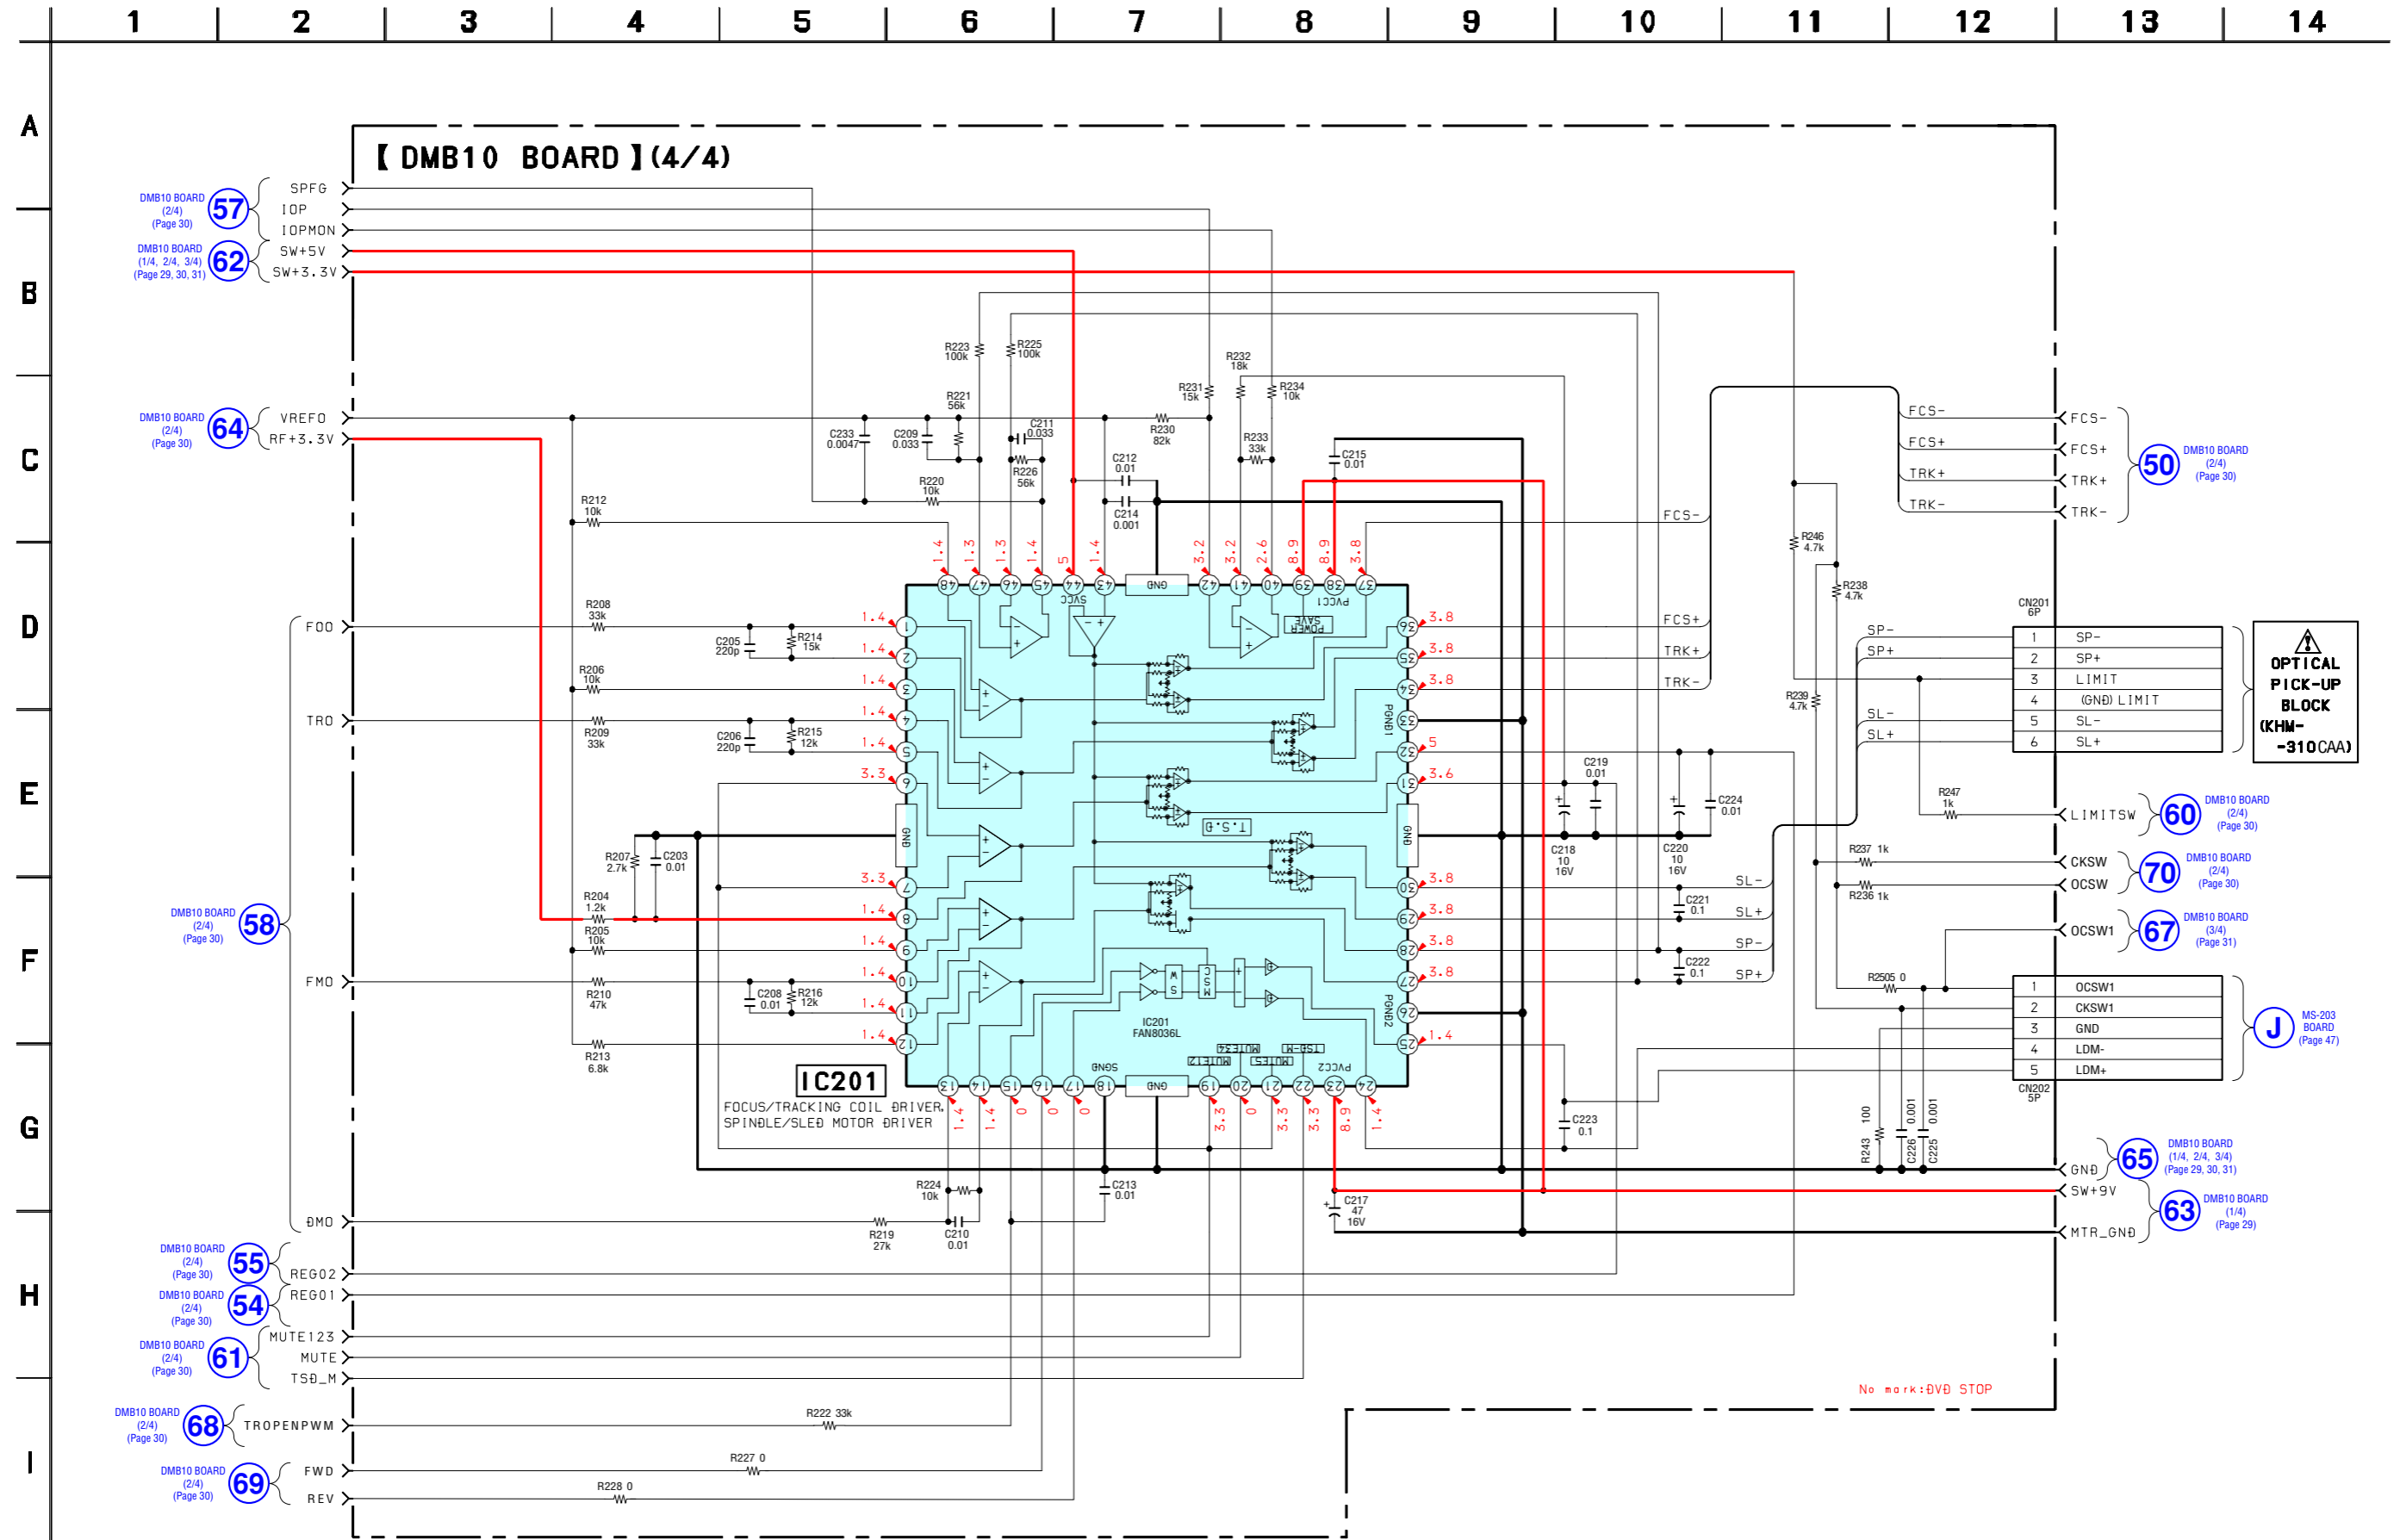


5-8. PRINTED WIRING BOARD – MAIN BOARD (SIDE A) –

• See page 21 for Circuit Boards Location.




:Uses unleaded solder.

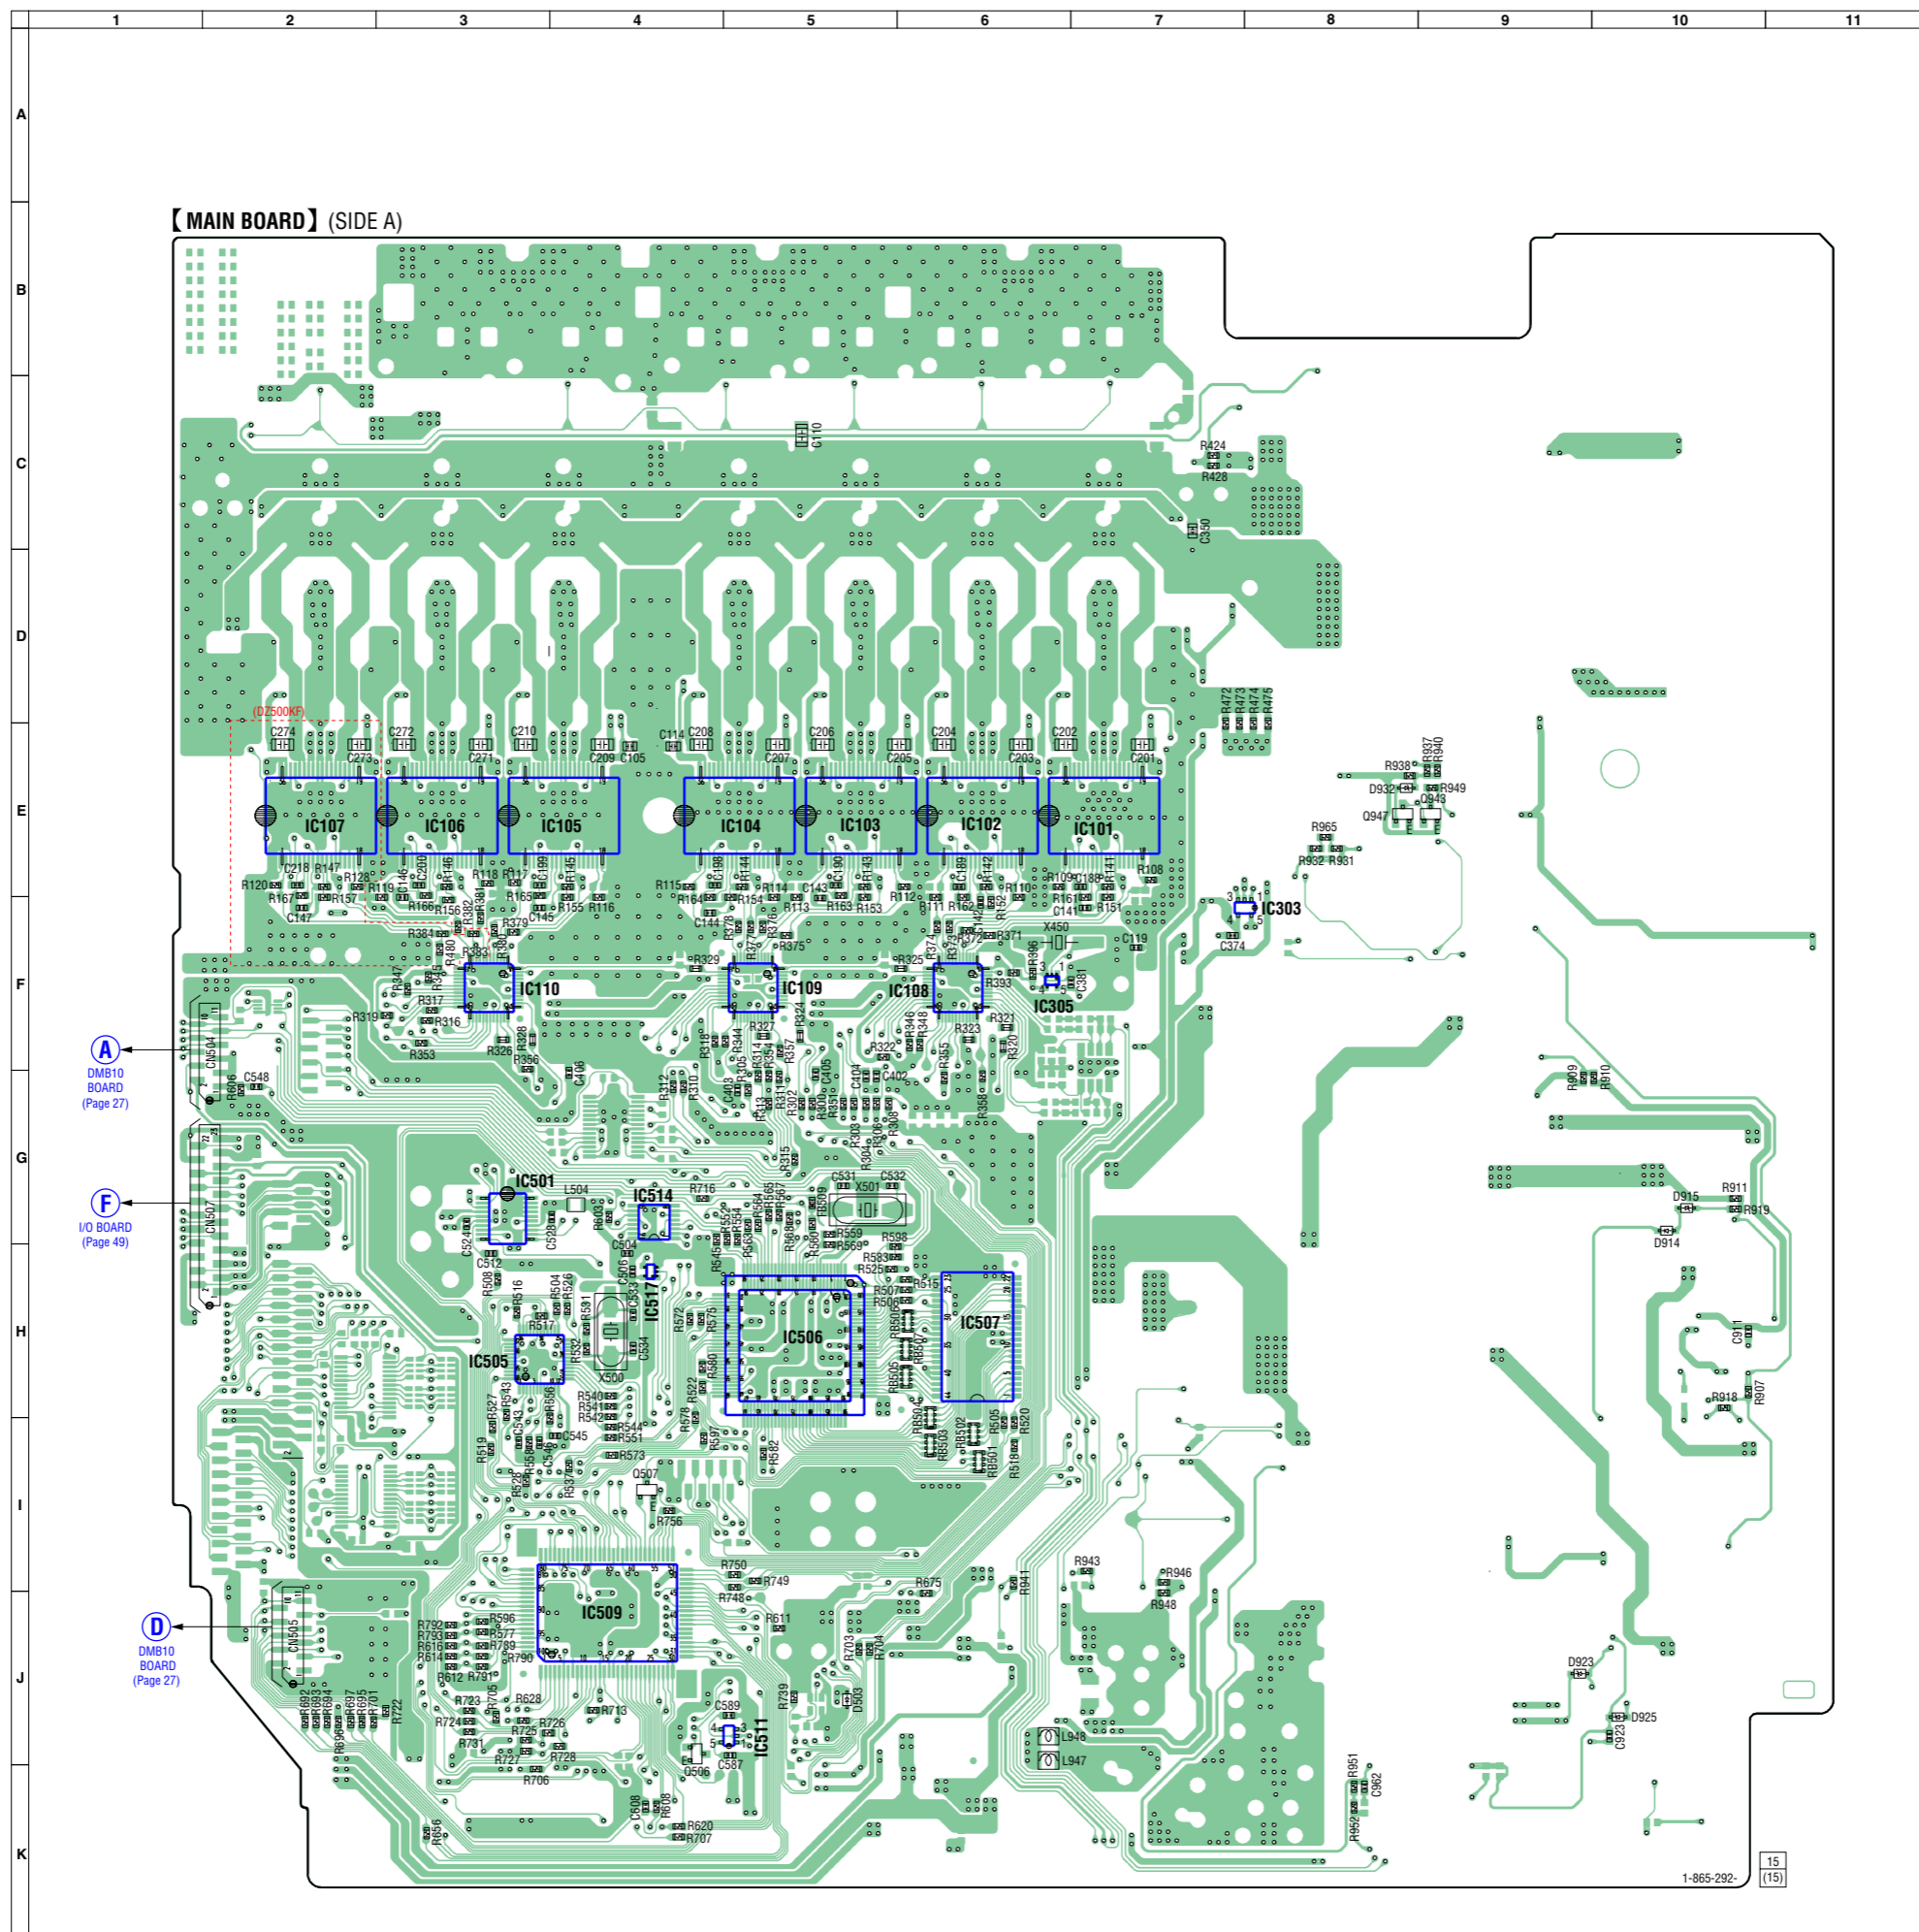


• Semiconductor Location

Ref. No.	Location
D503	J-5
D914	G-10
D915	G-10
D923	J-9
D925	J-10
D932	E-8
IC101	E-7
IC102	E-6
IC103	E-5
IC104	E-5
IC105	E-4
IC106	E-3
IC107	E-2
IC108	F-6
IC109	F-5
IC110	F-3
IC303	F-8
IC305	F-6
IC501	G-3
IC505	H-3
IC506	H-5
IC507	H-6
IC509	J-4
IC511	J-5
IC514	G-4
IC517	H-4
Q506	K-4
Q507	I-4
Q943	E-9
Q947	E-8

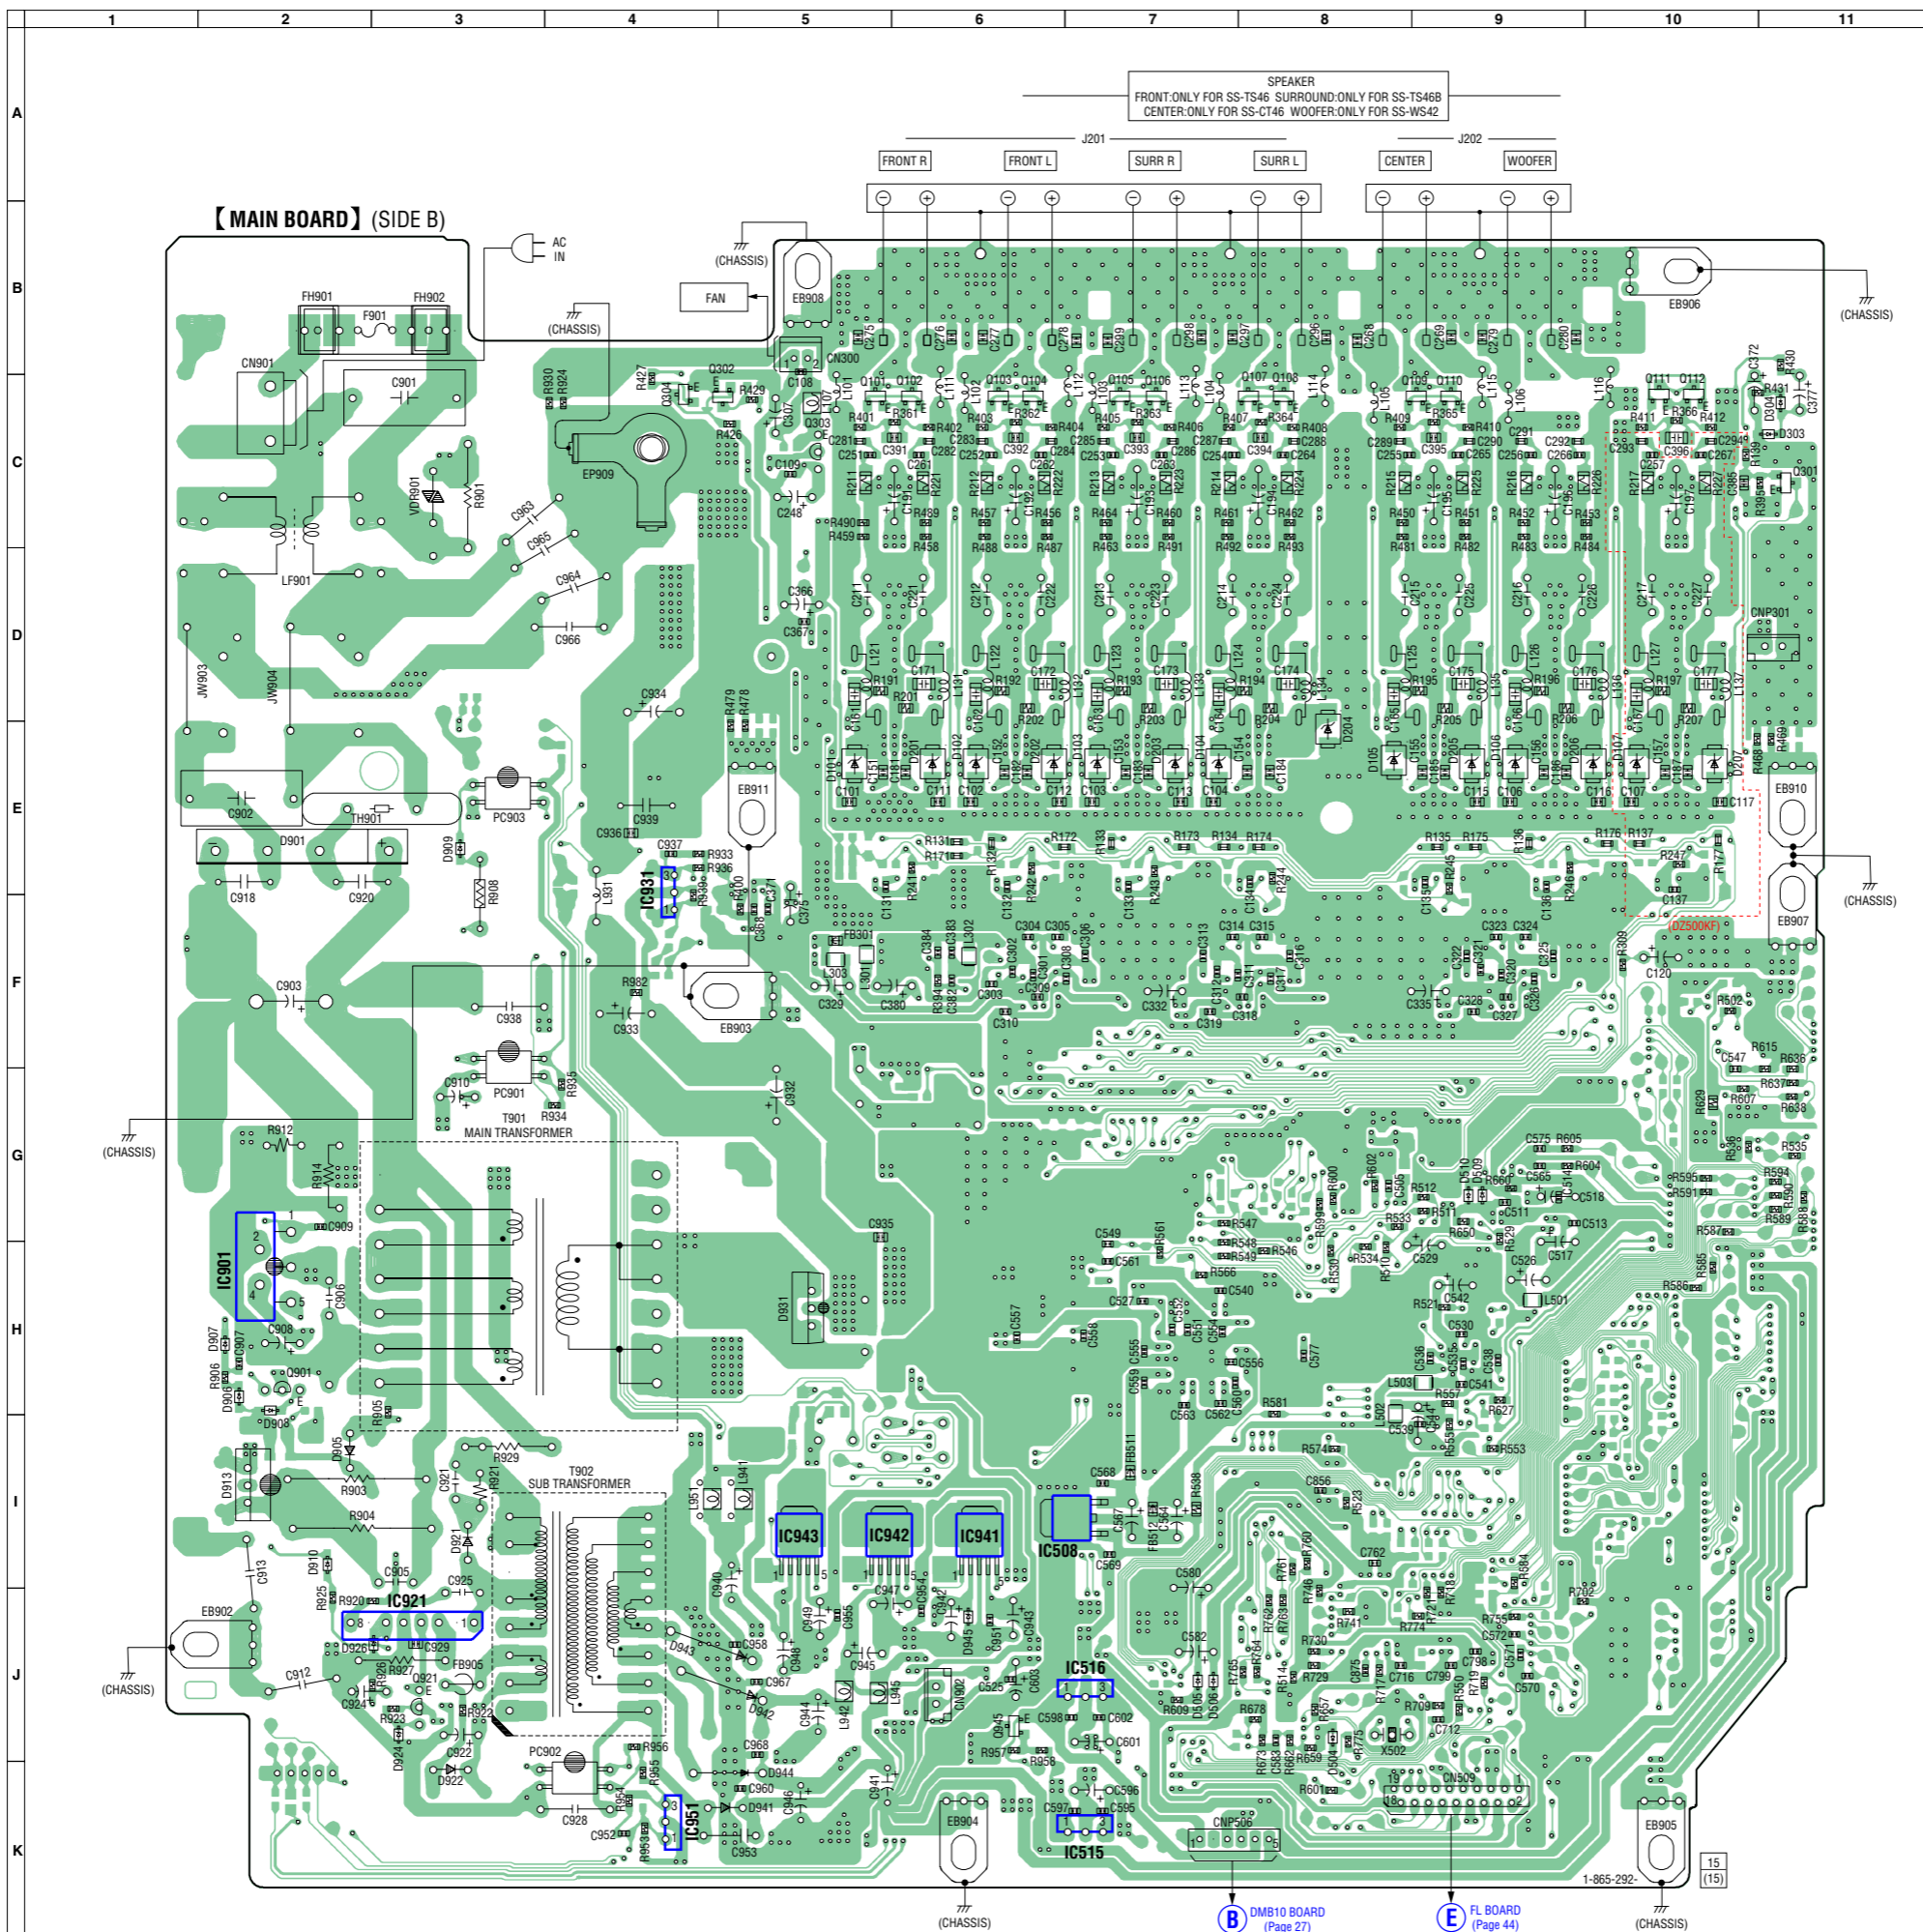



• Semiconductor Location

Ref. No.	Location
D101	E-5
D102	E-6
D103	E-7
D104	E-7
D105	E-8
D106	E-9
D107	E-10
D201	E-6
D202	E-6
D203	E-7
D204	E-8
D205	E-9
D206	E-9
D207	E-10
D303	C-11
D304	C-11
D504	J-8
D505	J-7
D506	J-7
D509	G-9
D510	G-9
D901	E-2
D905	I-2
D906	H-2
D907	H-2
D908	I-2
D909	E-3
D910	I-2
D913	I-2
D921	I-3
D922	K-3
D924	J-3
D926	J-2
D931	H-5
D941	K-5
D942	J-5
D943	J-4
D944	K-5
D945	J-6
IC508	I-6
IC515	K-7
IC516	J-7
IC901	H-2
IC921	J-3
IC931	E-4
IC941	I-6
IC942	I-5
IC943	I-5
IC951	K-4
PC901	G-3
PC902	JH-3
PC903	E-3
Q101	C-5
Q102	C-6
Q103	C-6
Q104	C-6
Q105	C-7
Q106	C-7
Q107	C-8
Q108	C-8
Q109	C-9
Q110	C-9
Q111	C-10
Q112	C-10
Q301	C-11
Q302	B-5
Q303	C-5
Q304	C-4
Q901	H-2
Q921	J-3
Q945	J-6

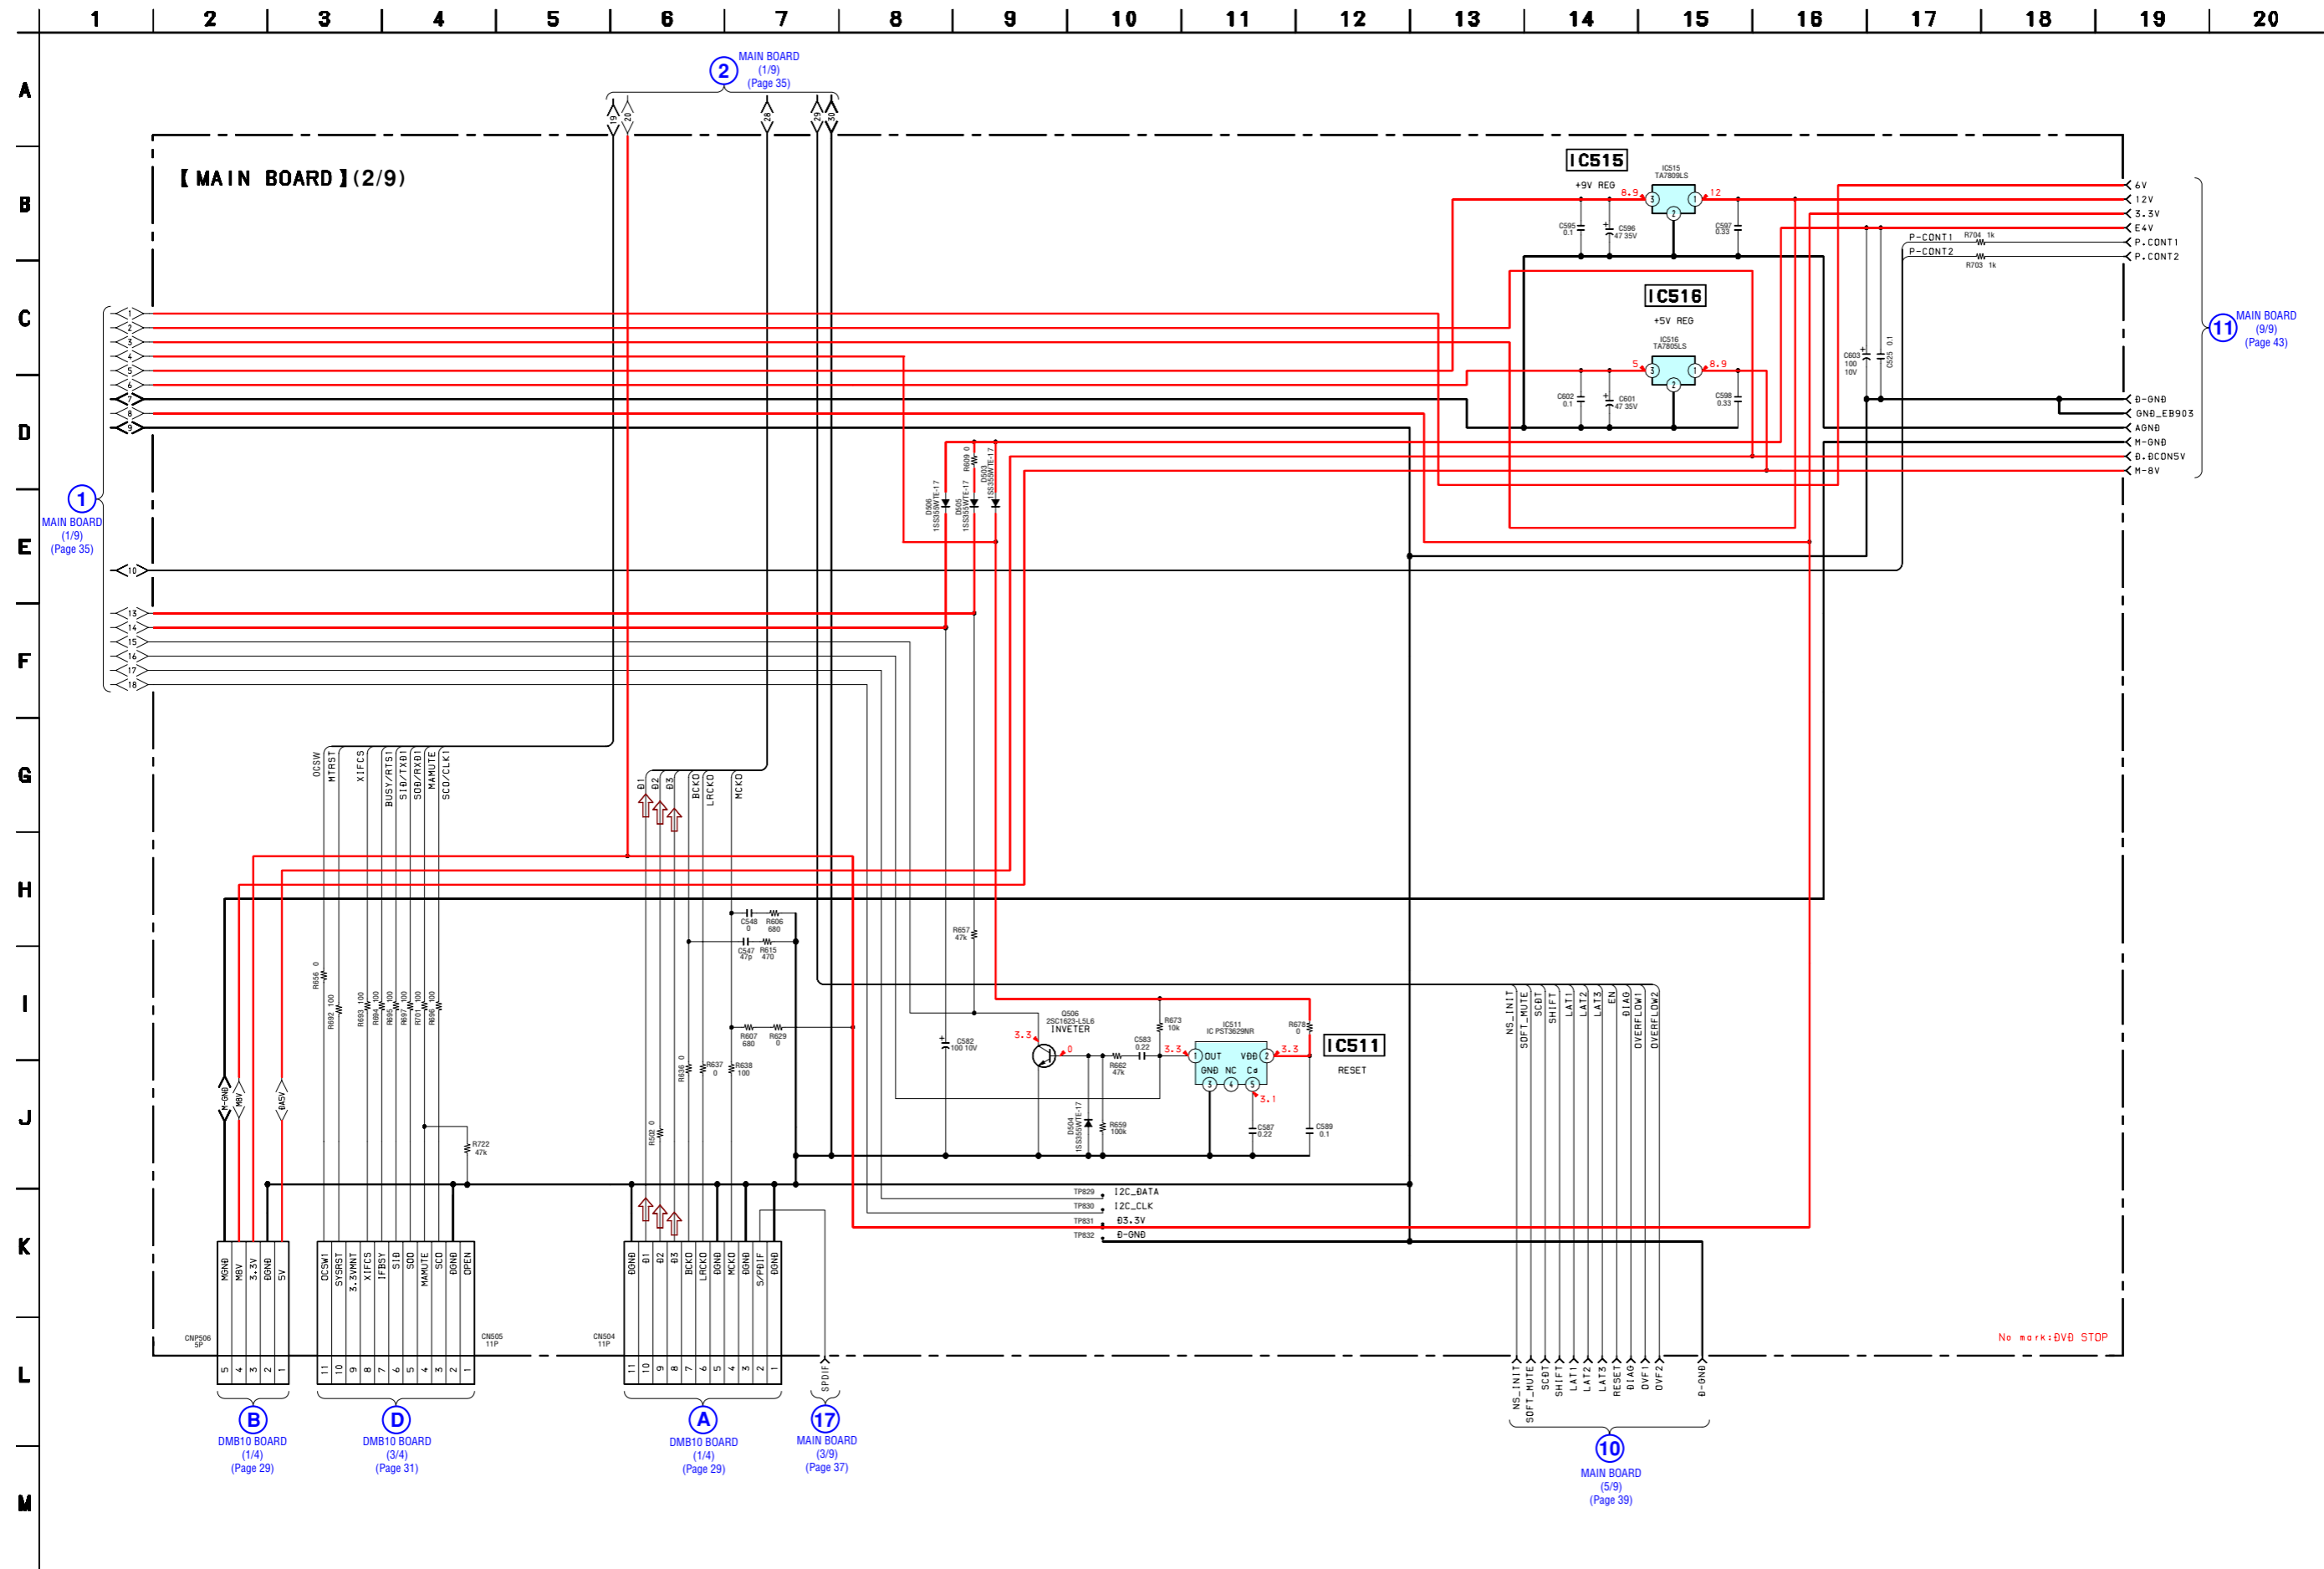


5-12. SCHEMATIC DIAGRAM – MAIN BOARD (3/9) – • See page 52 for IC Block Diagrams. • See page 21 for Waveform.

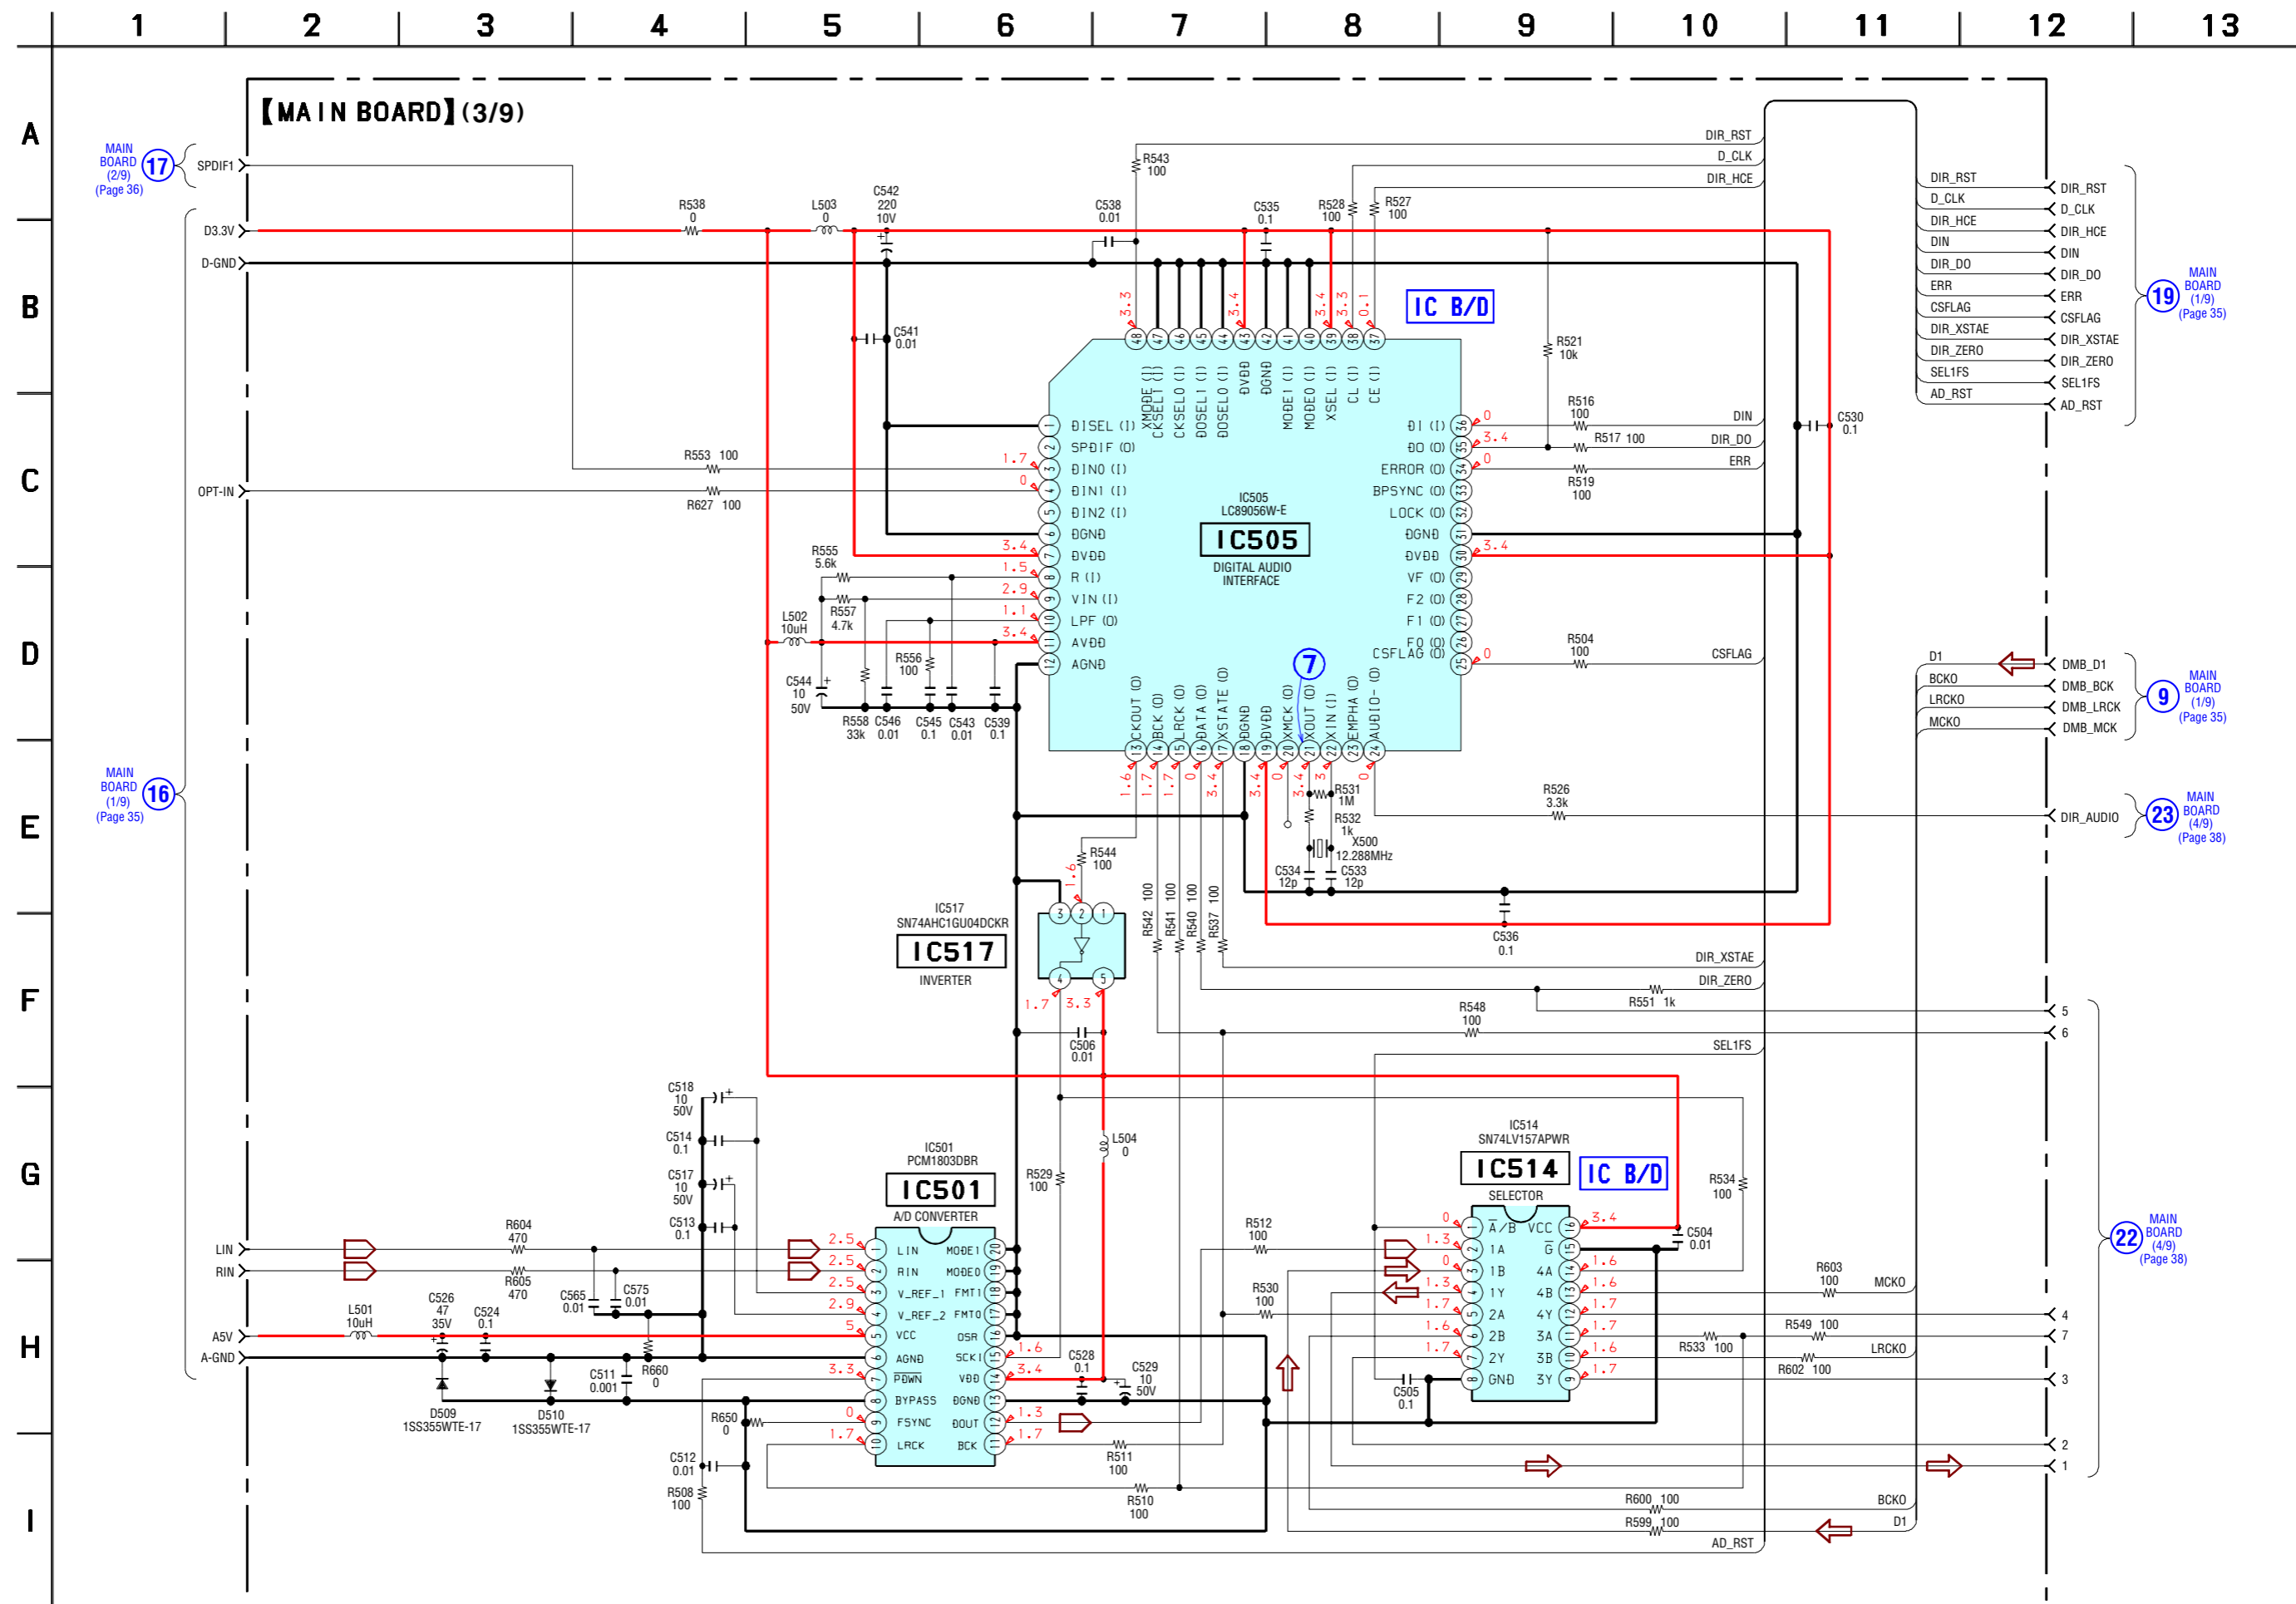


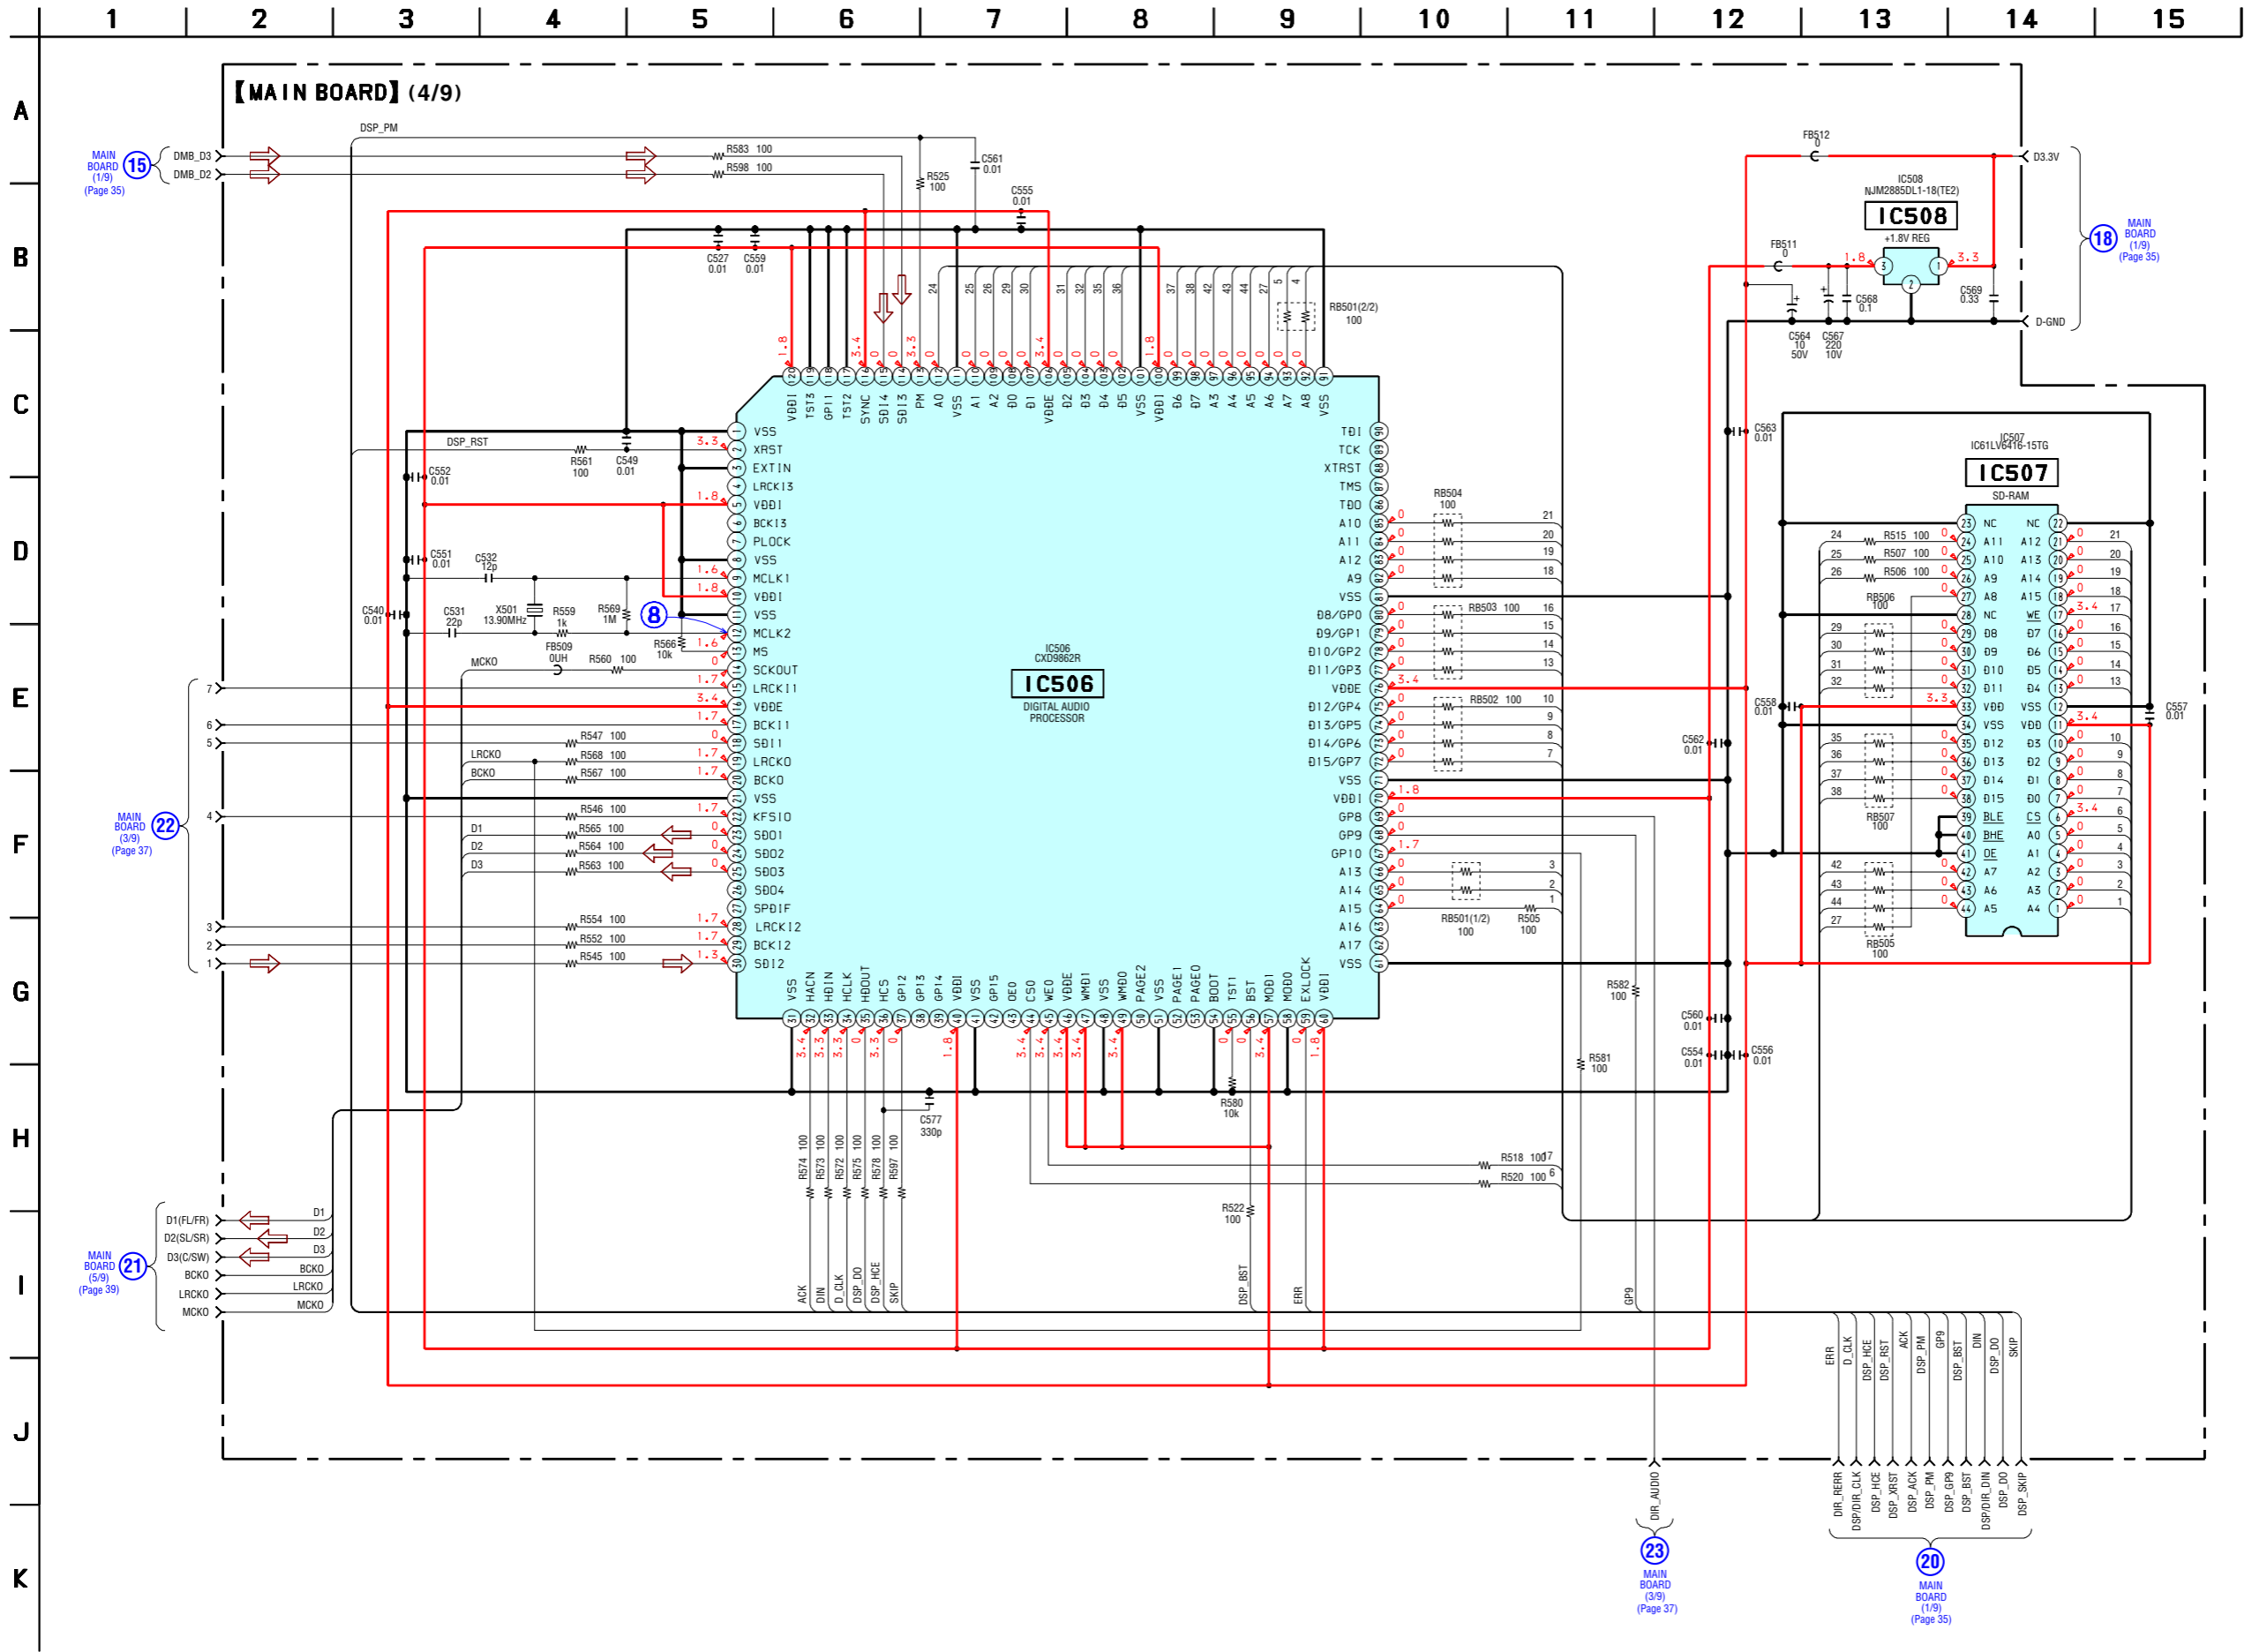


5-14. SCHEMATIC DIAGRAM – MAIN BOARD (5/9) – • See page 51 for IC Block Diagram.

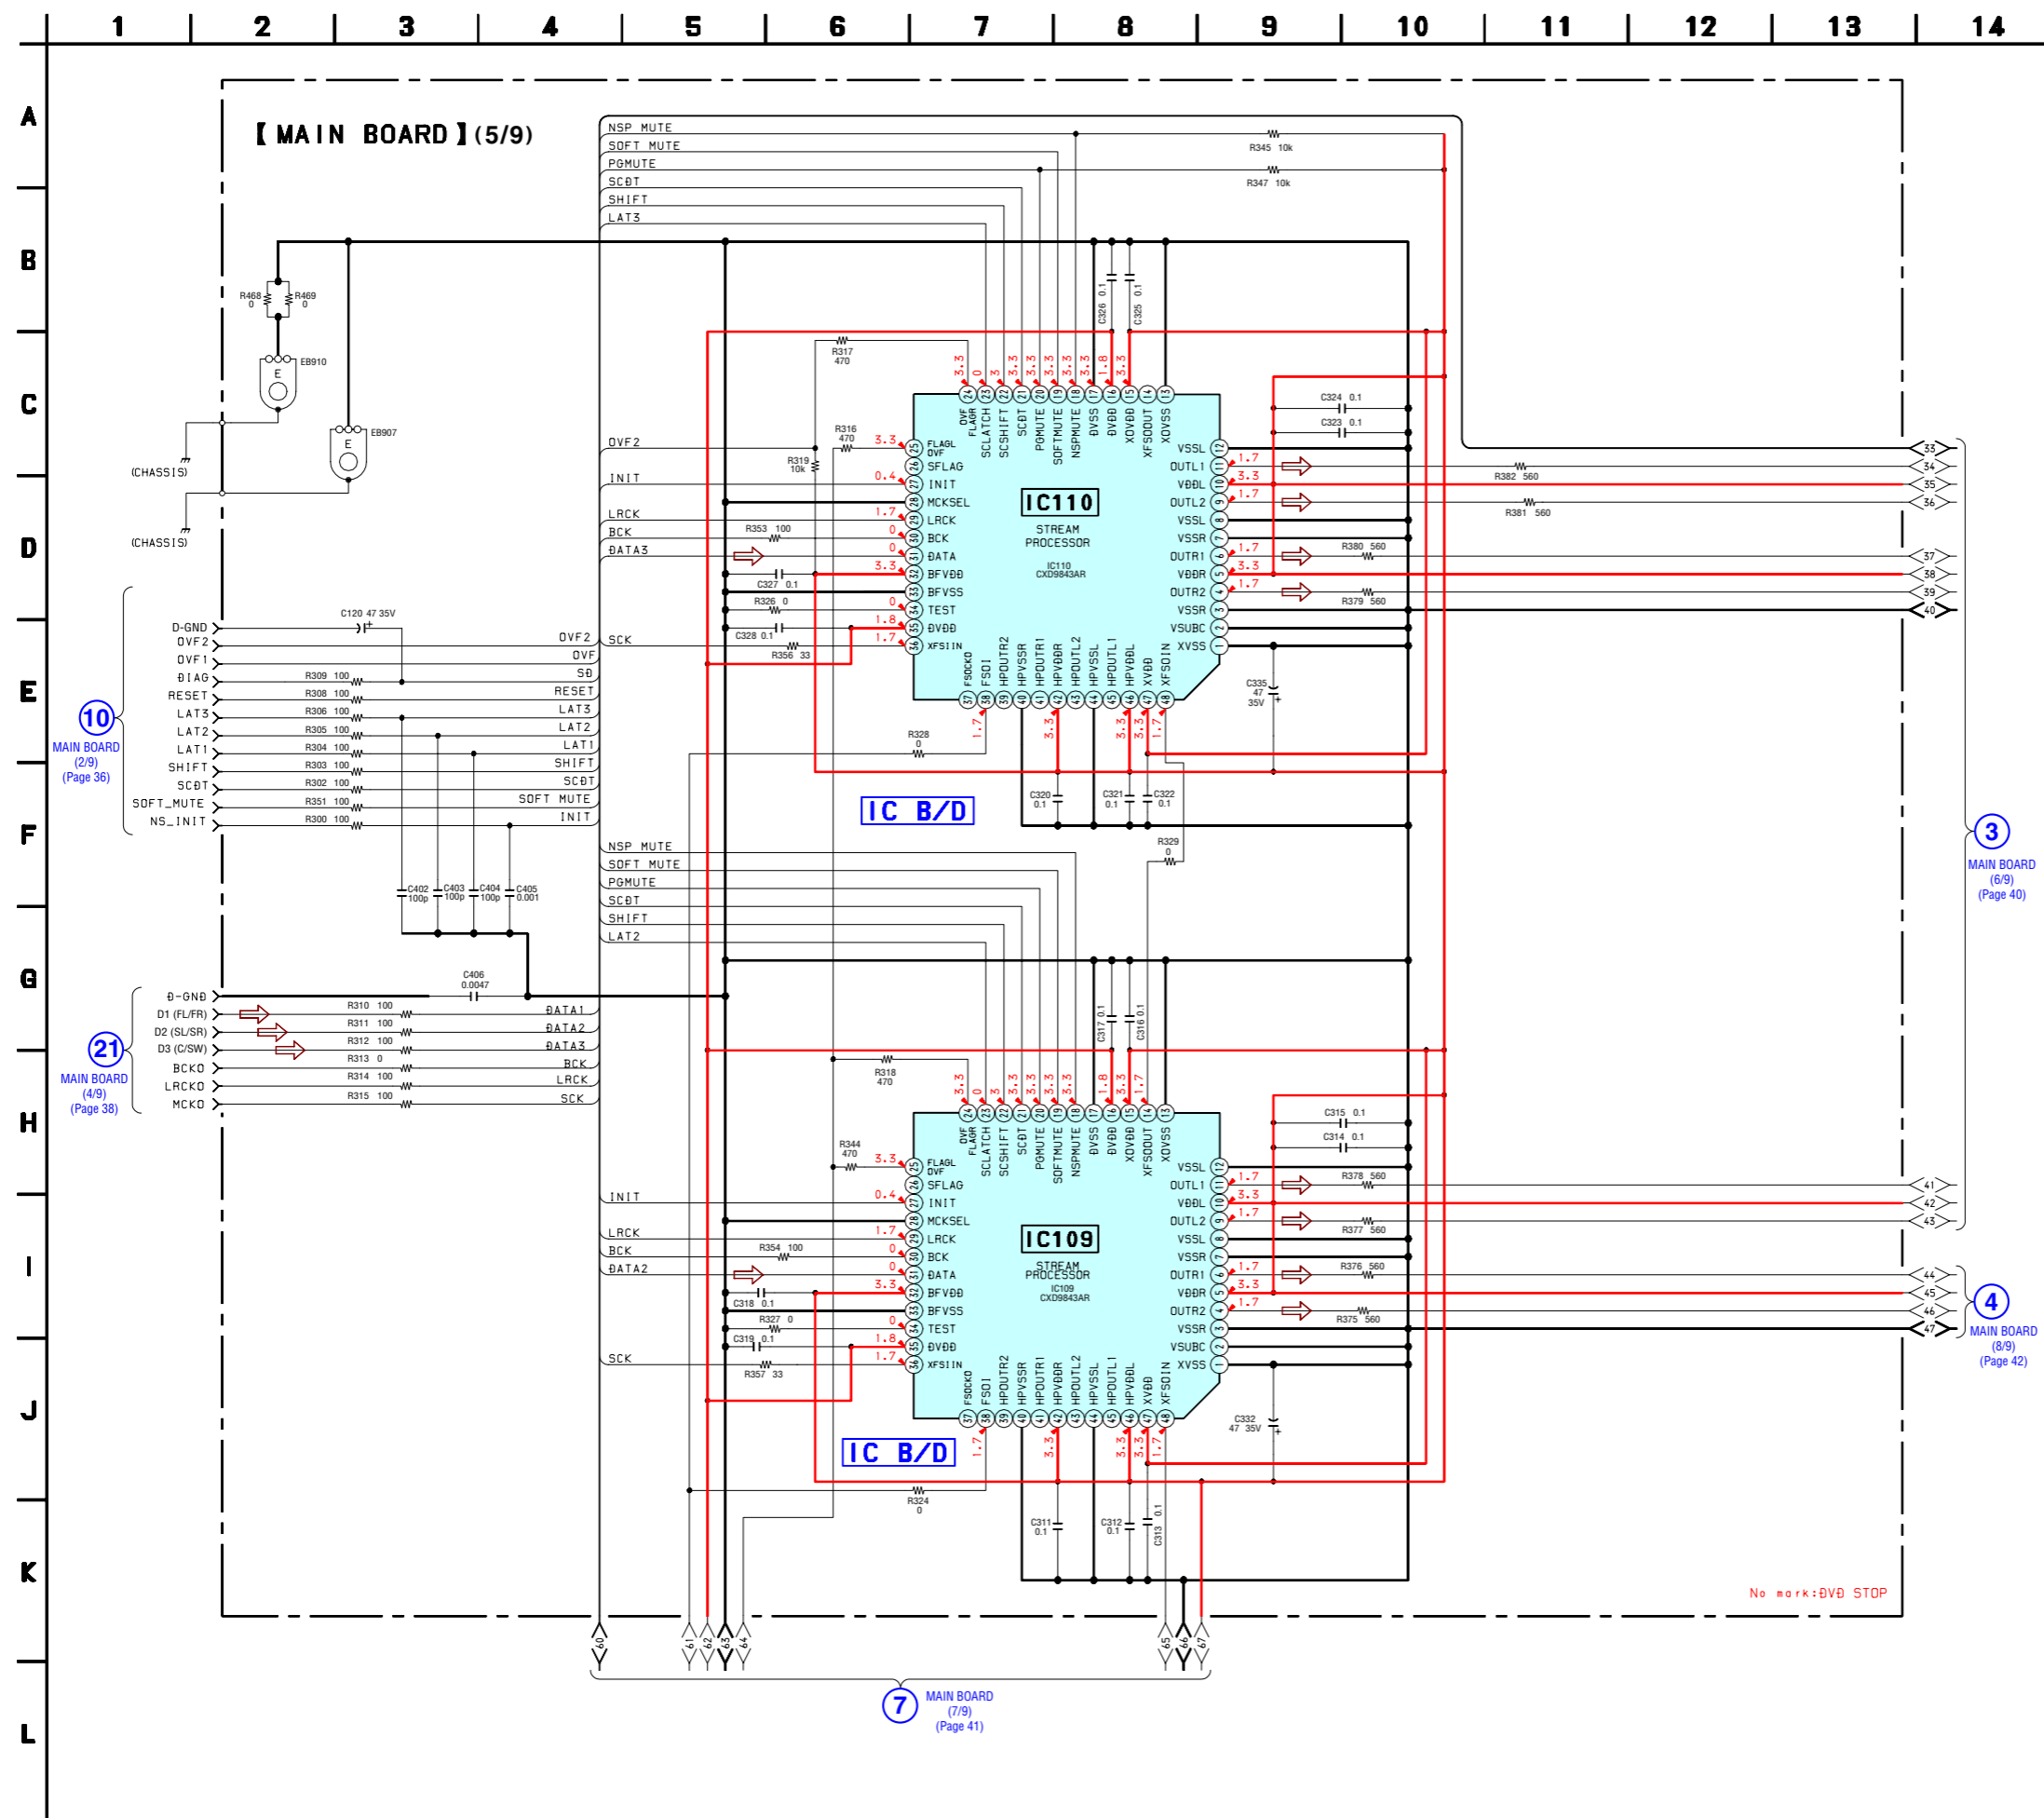

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18

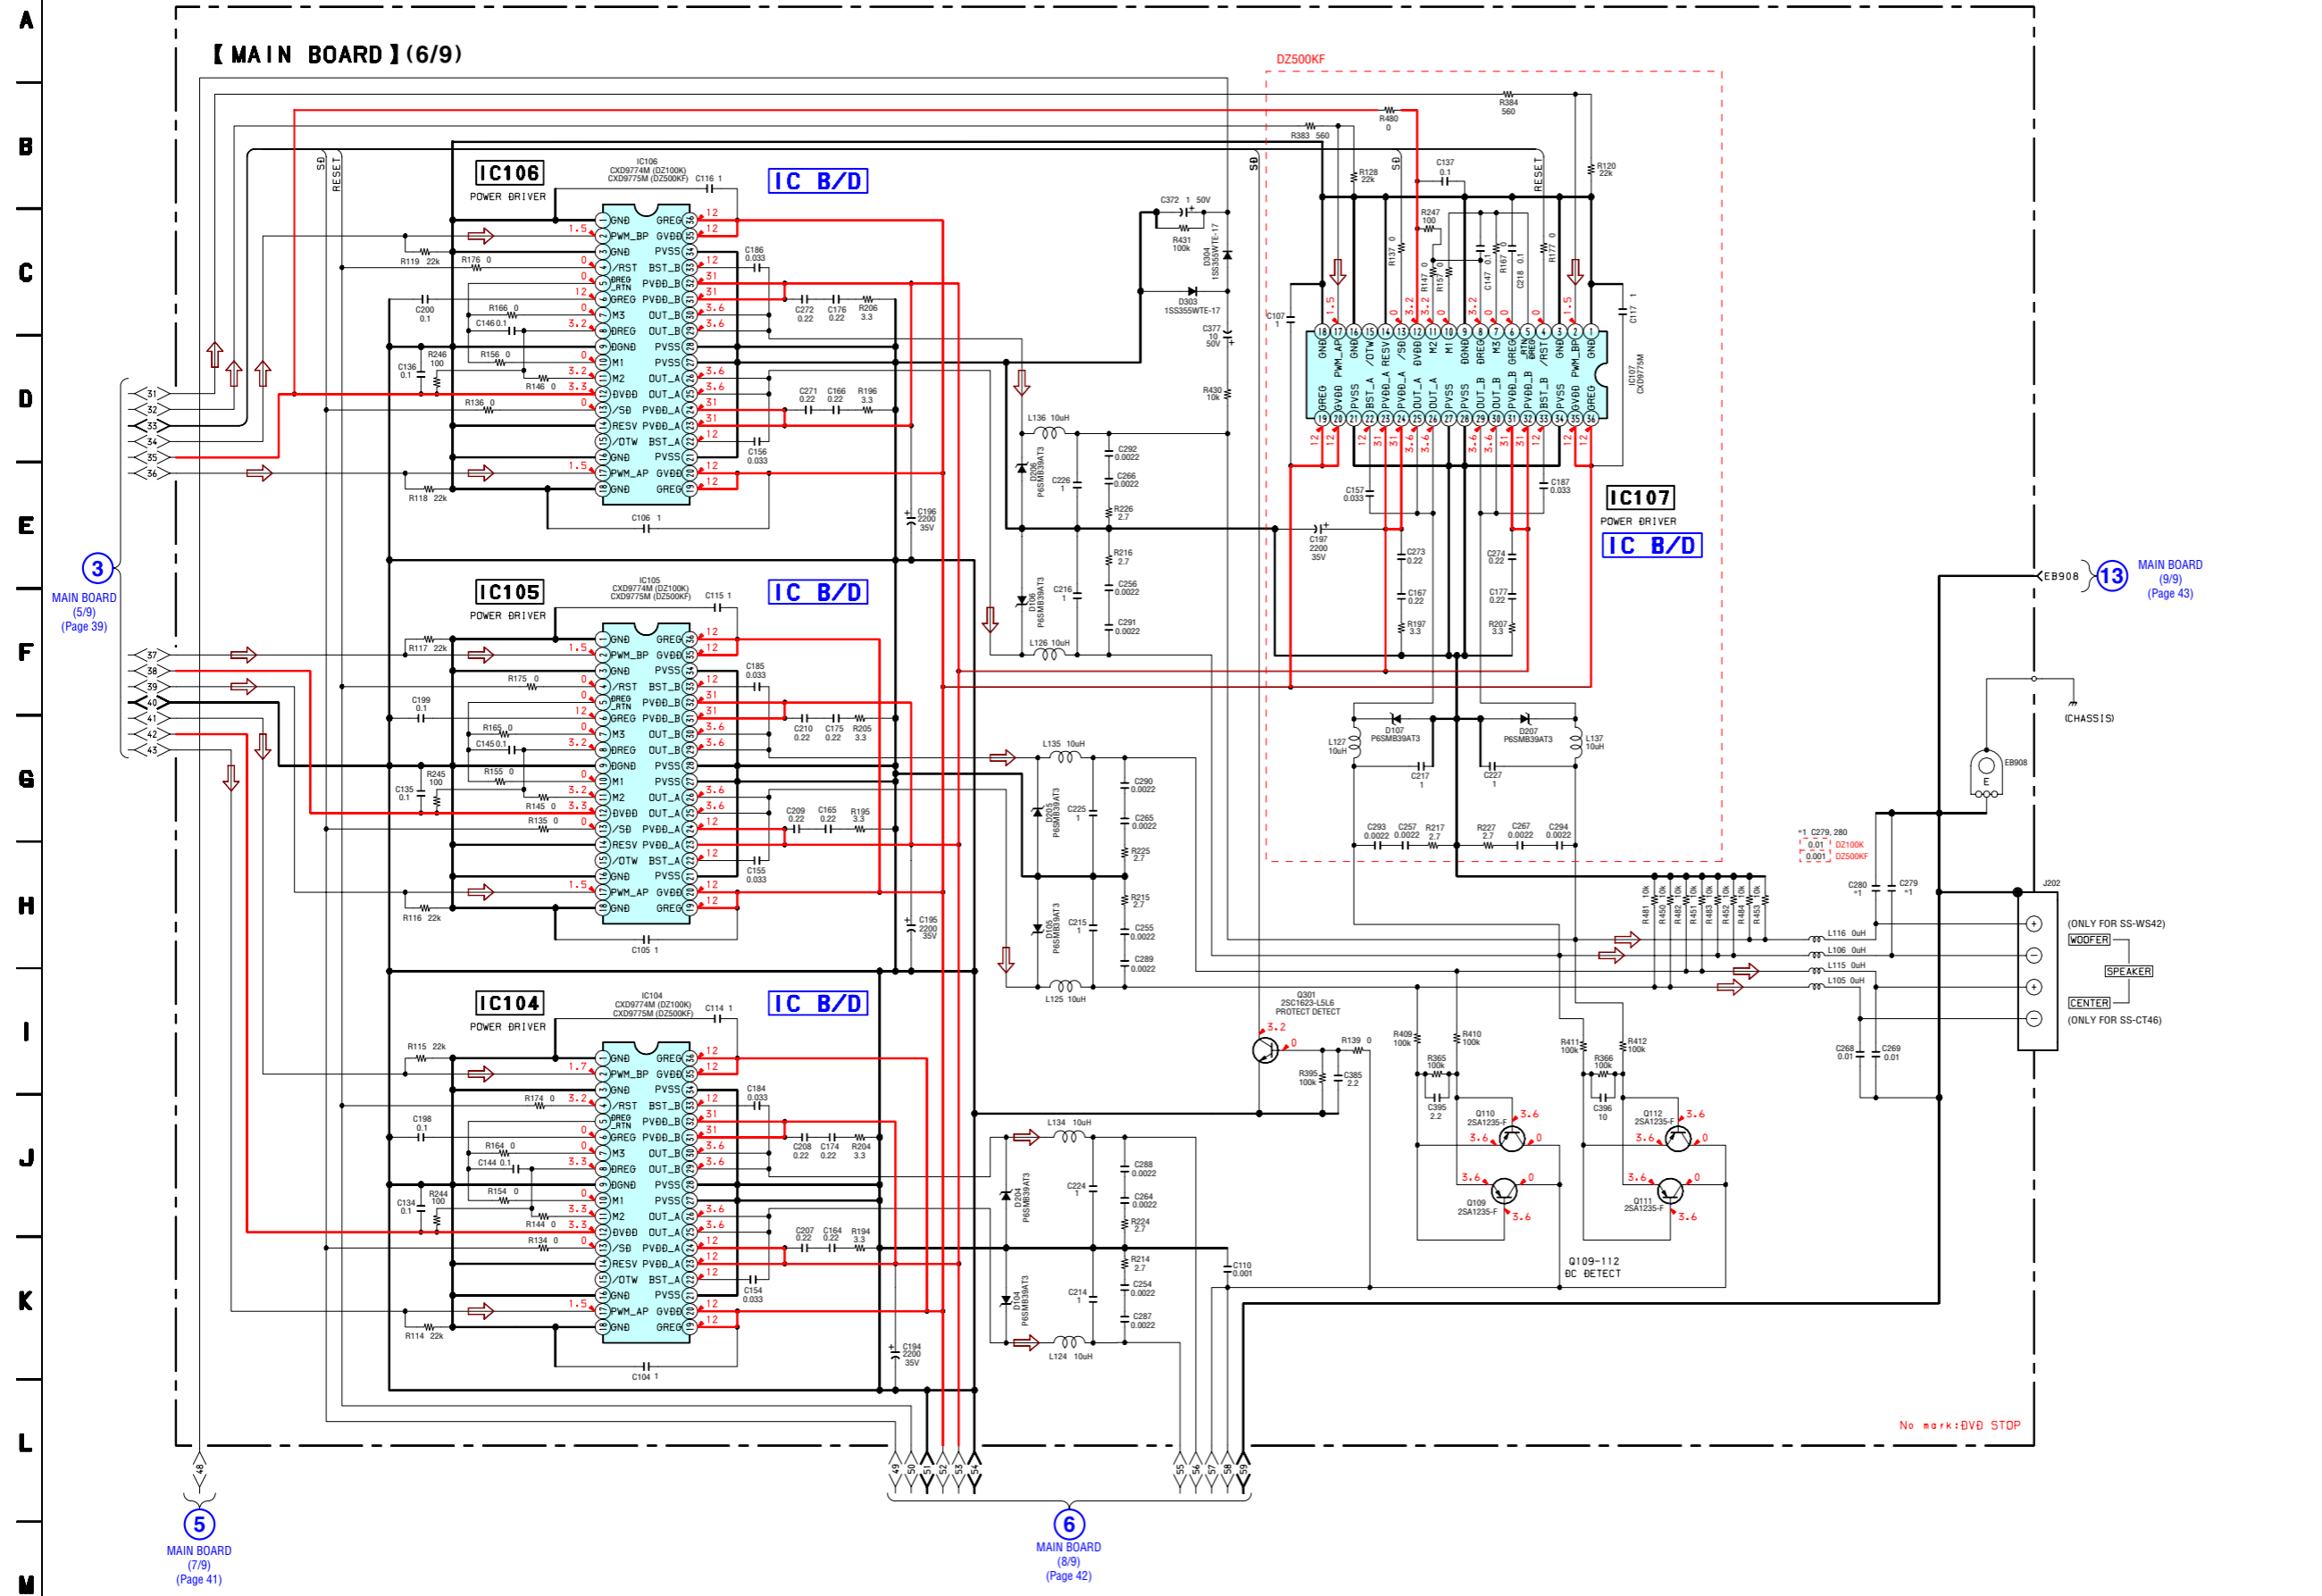

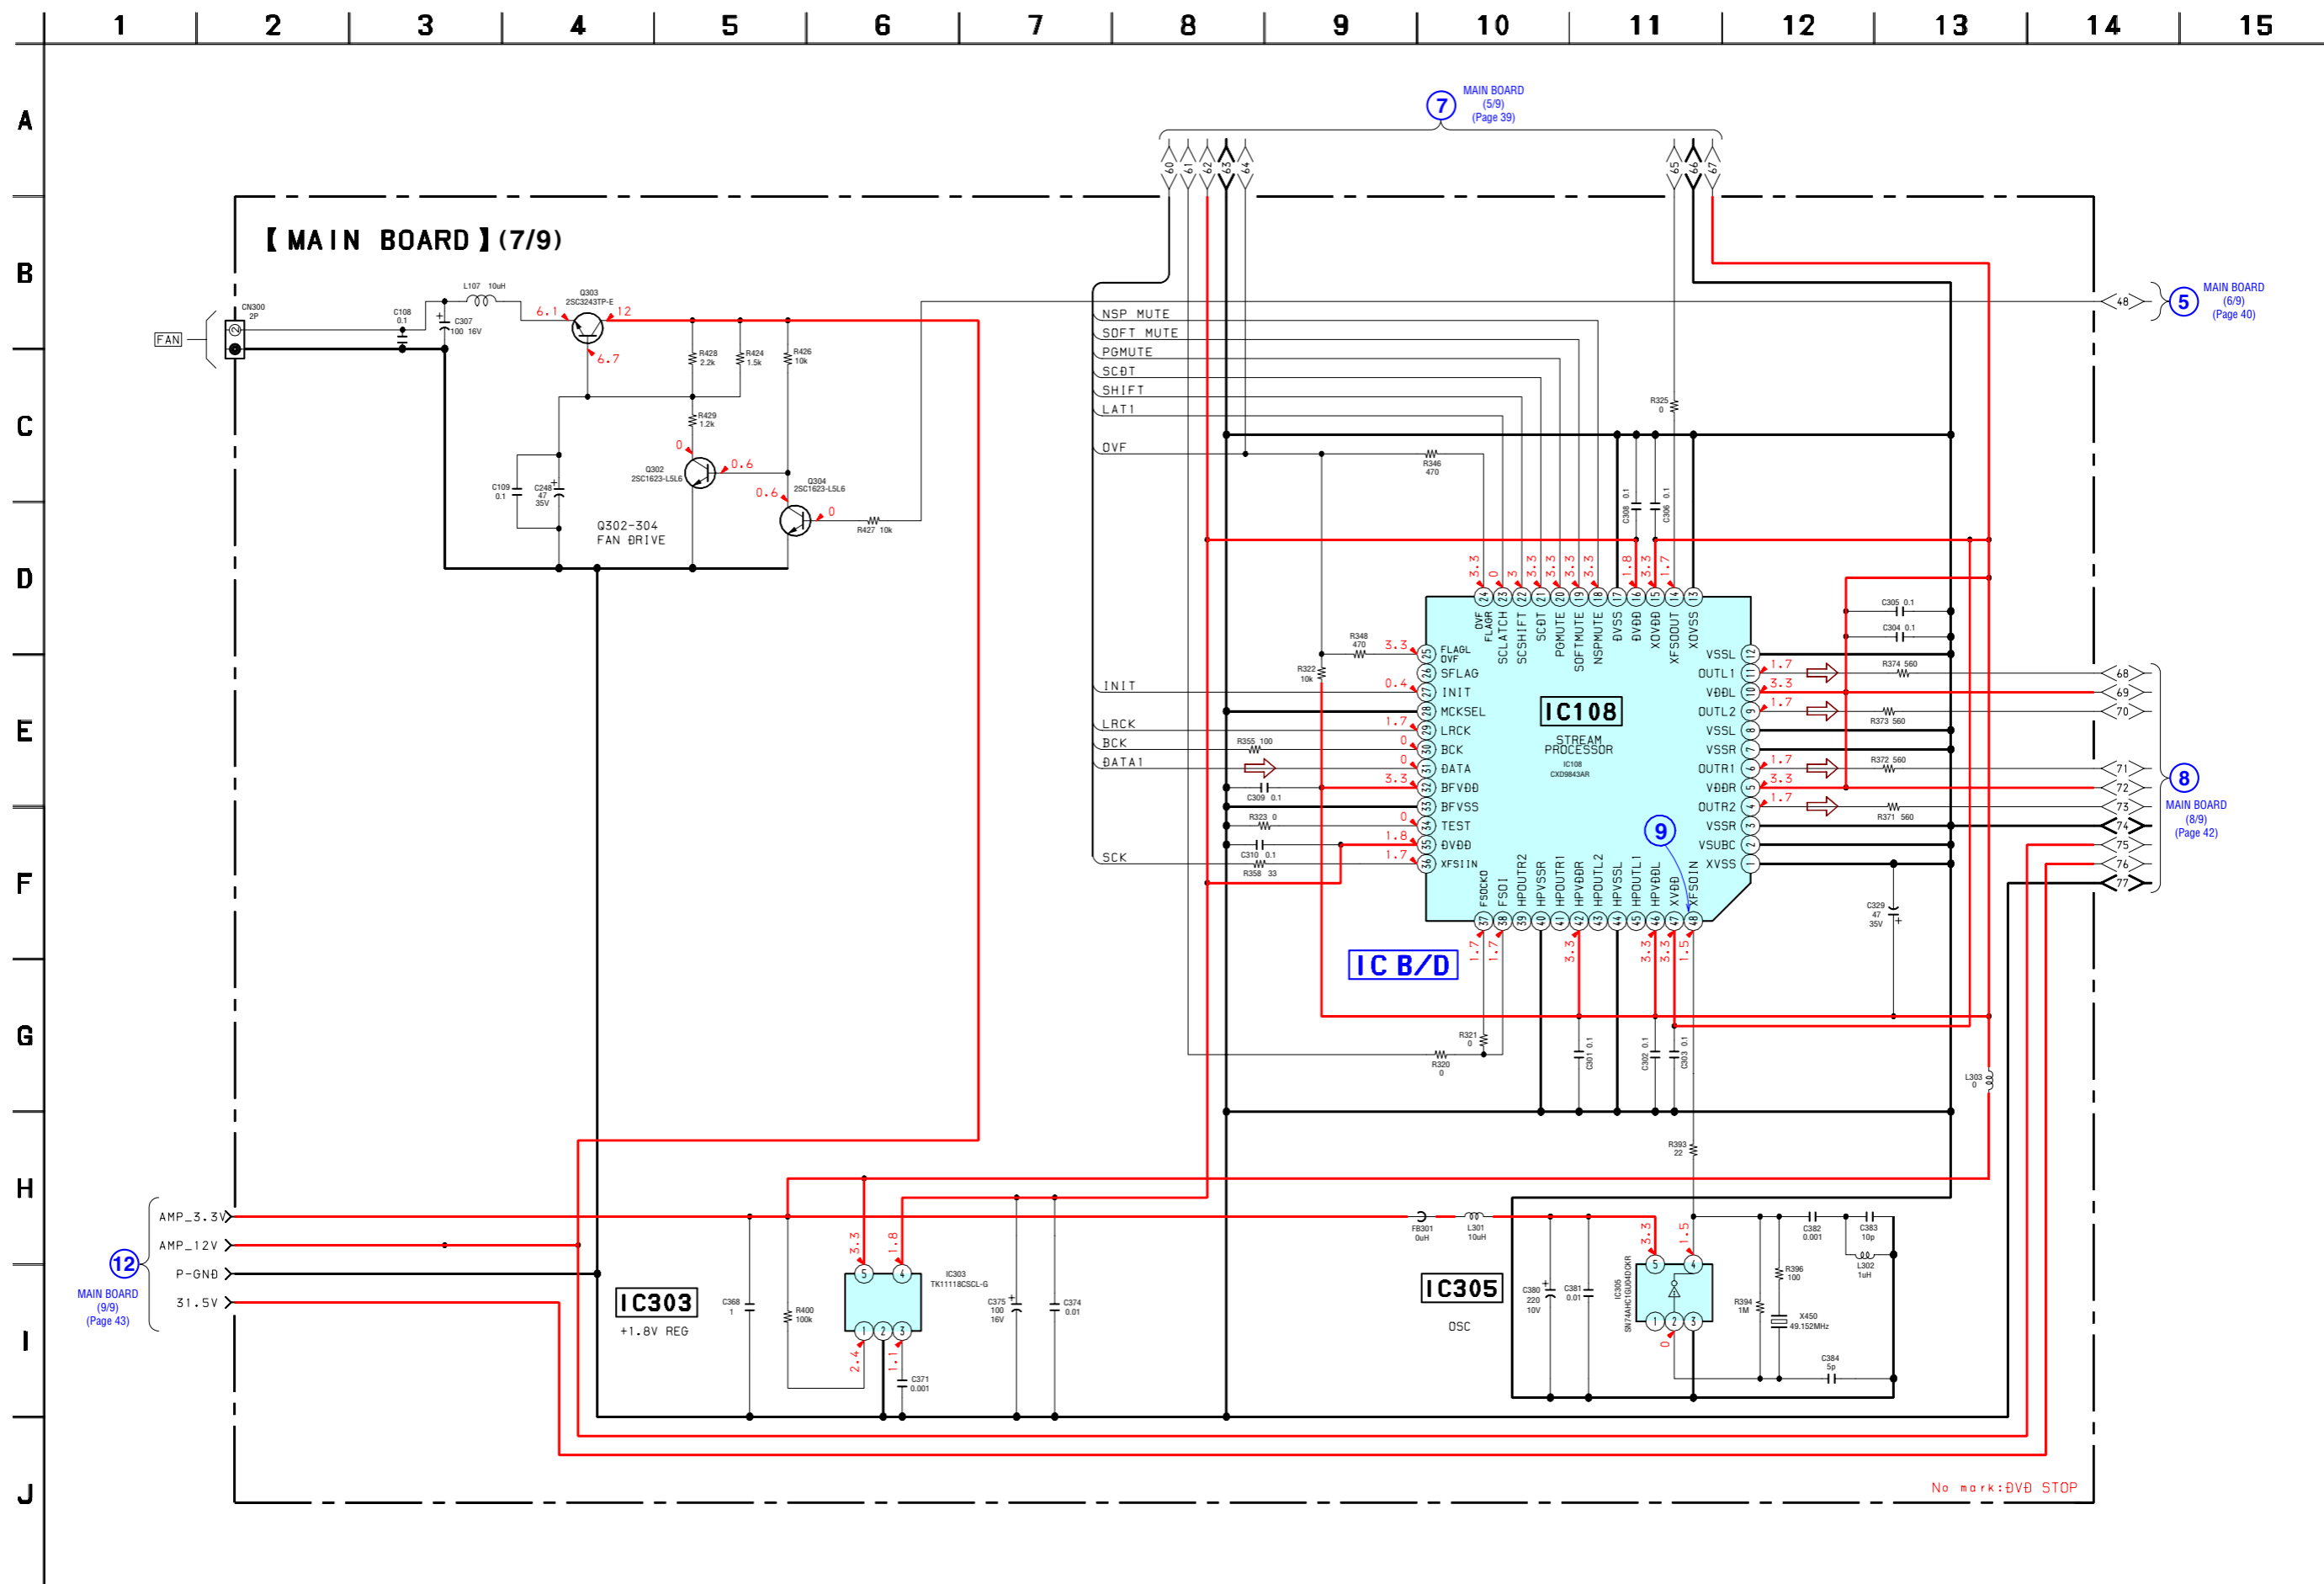


12 MAIN BOARD (9/9) (Page 43)

7 MAIN BOARD (5/9) (Page 39)

5 MAIN BOARD (6/9) (Page 40)

8 MAIN BOARD (8/9) (Page 42)


5-18. SCHEMATIC DIAGRAM – MAIN BOARD (9/9) –

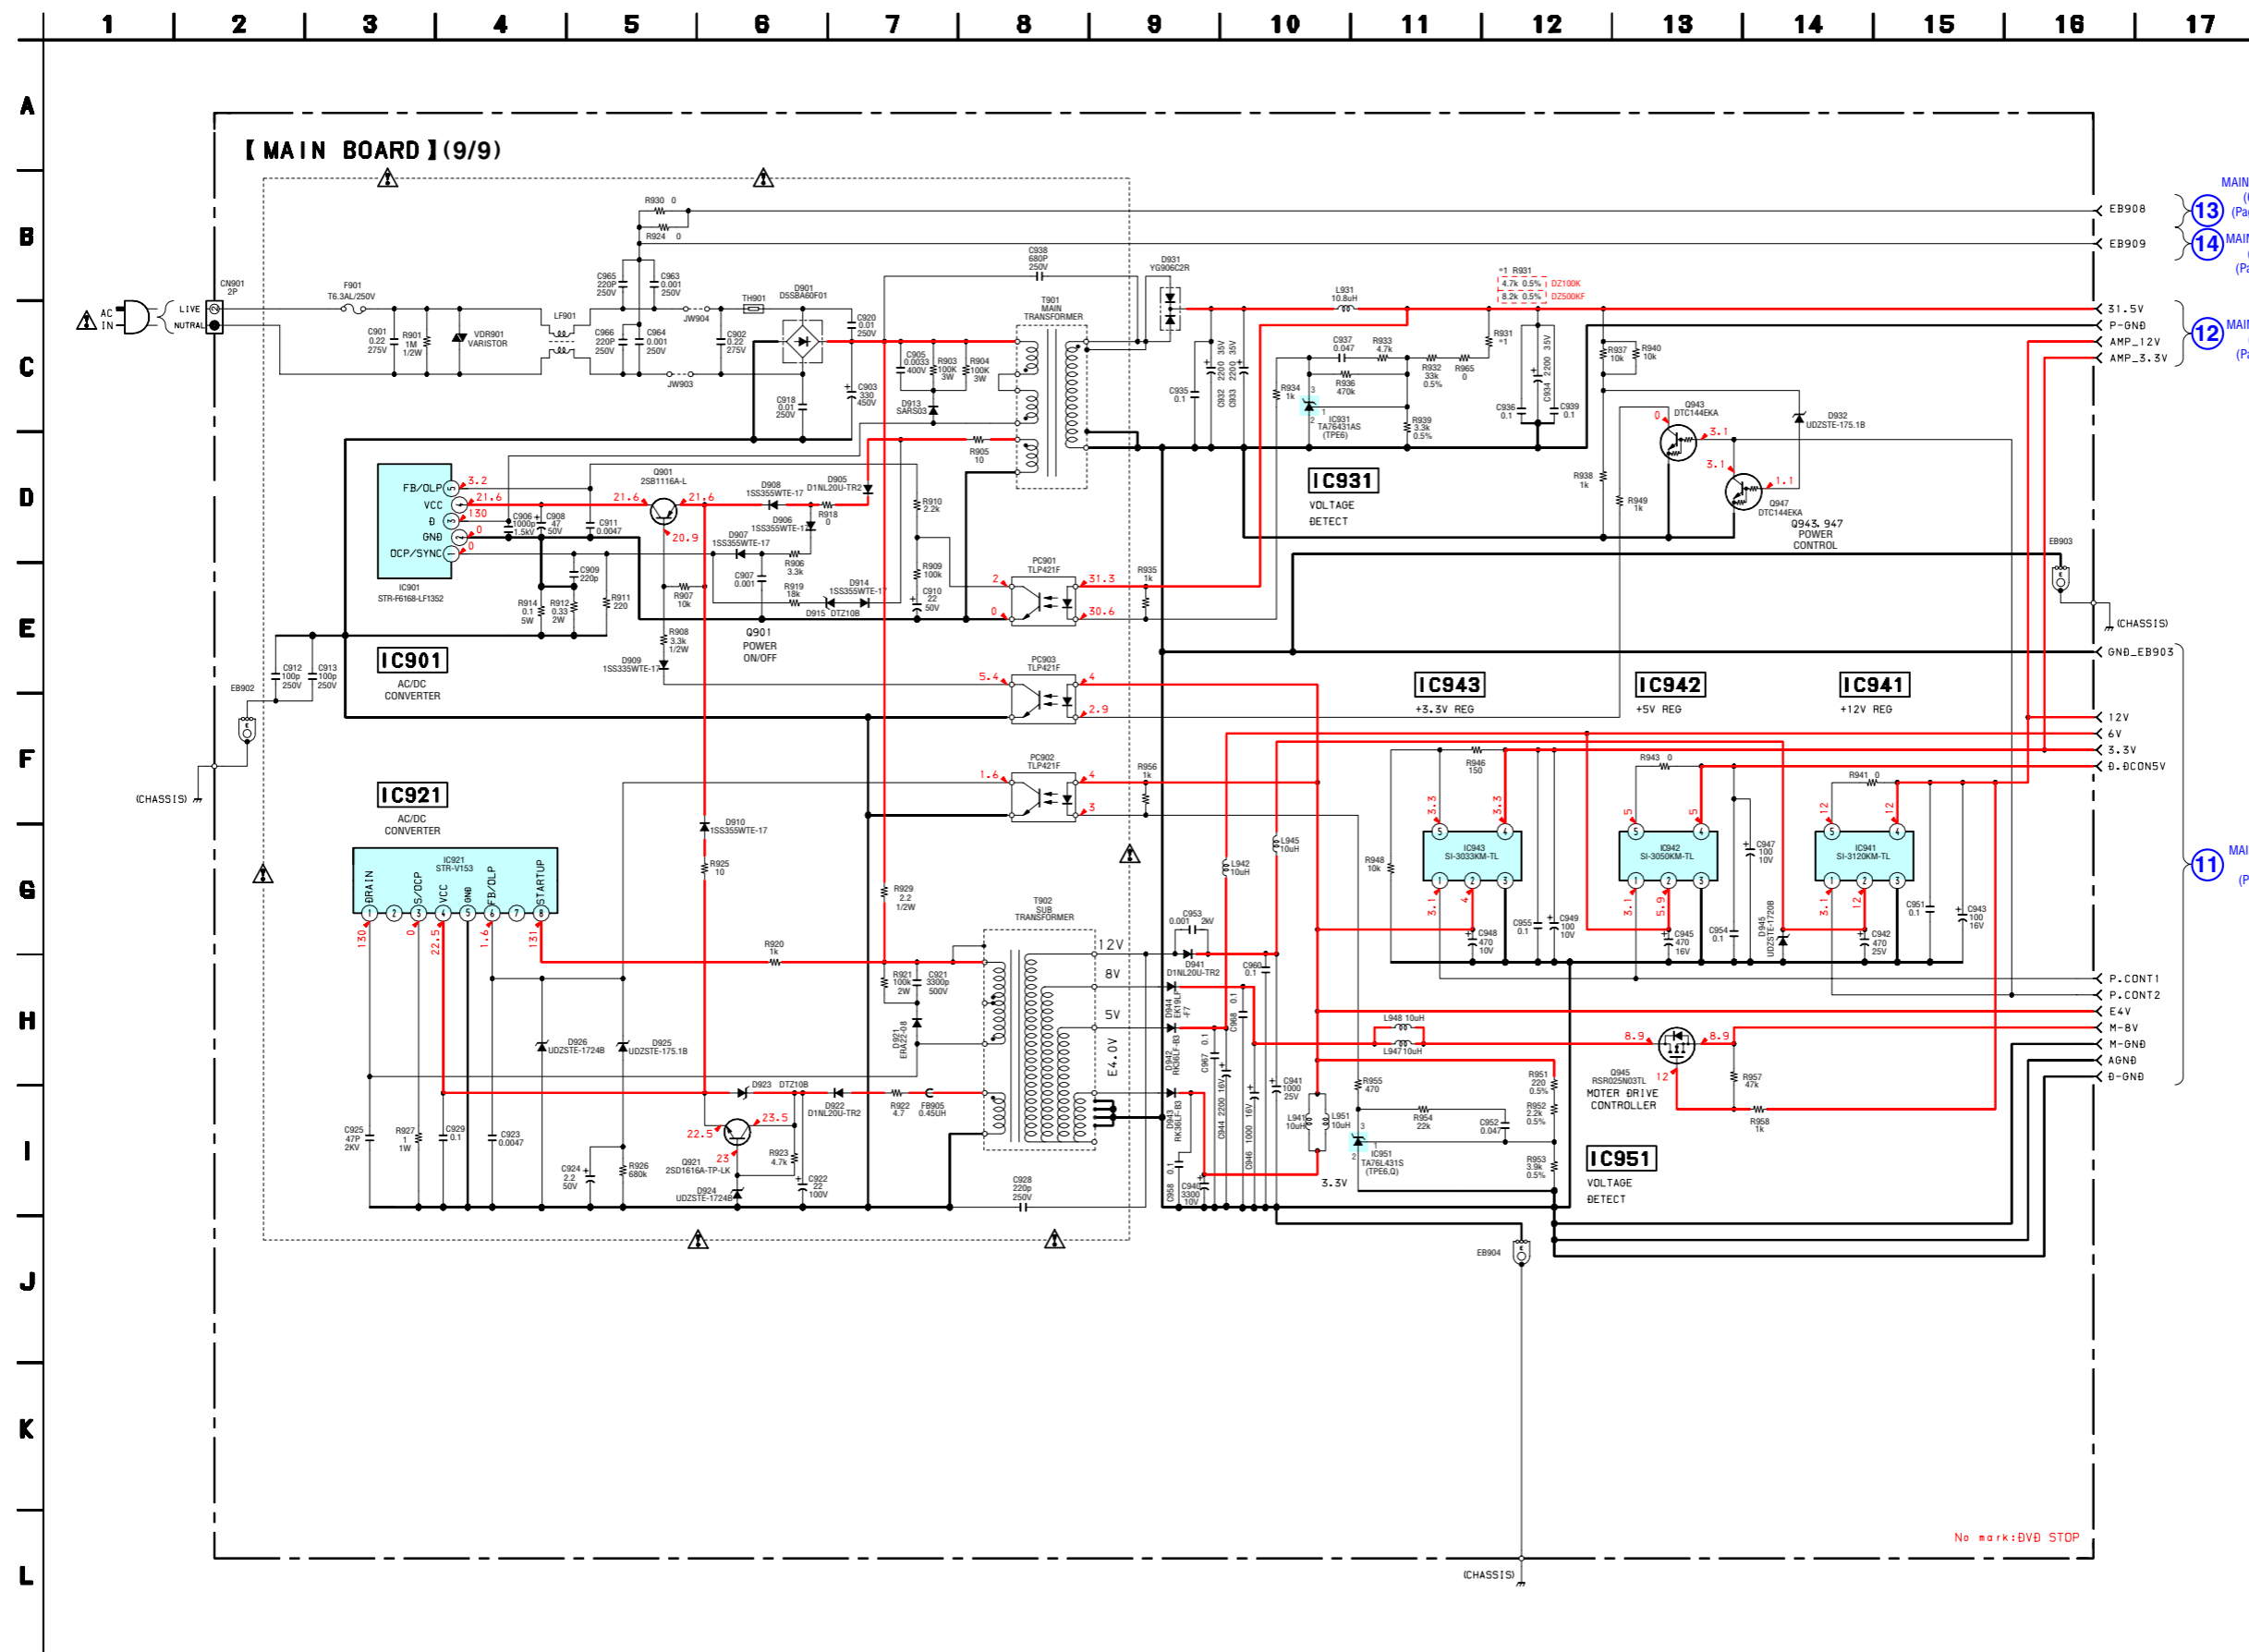

13 MAIN BOARD (6/9) (Page 40)
 14 MAIN BOARD (8/9) (Page 42)

12 MAIN BOARD (7/9) (Page 41)


11 MAIN BOARD (2/9) (Page 36)

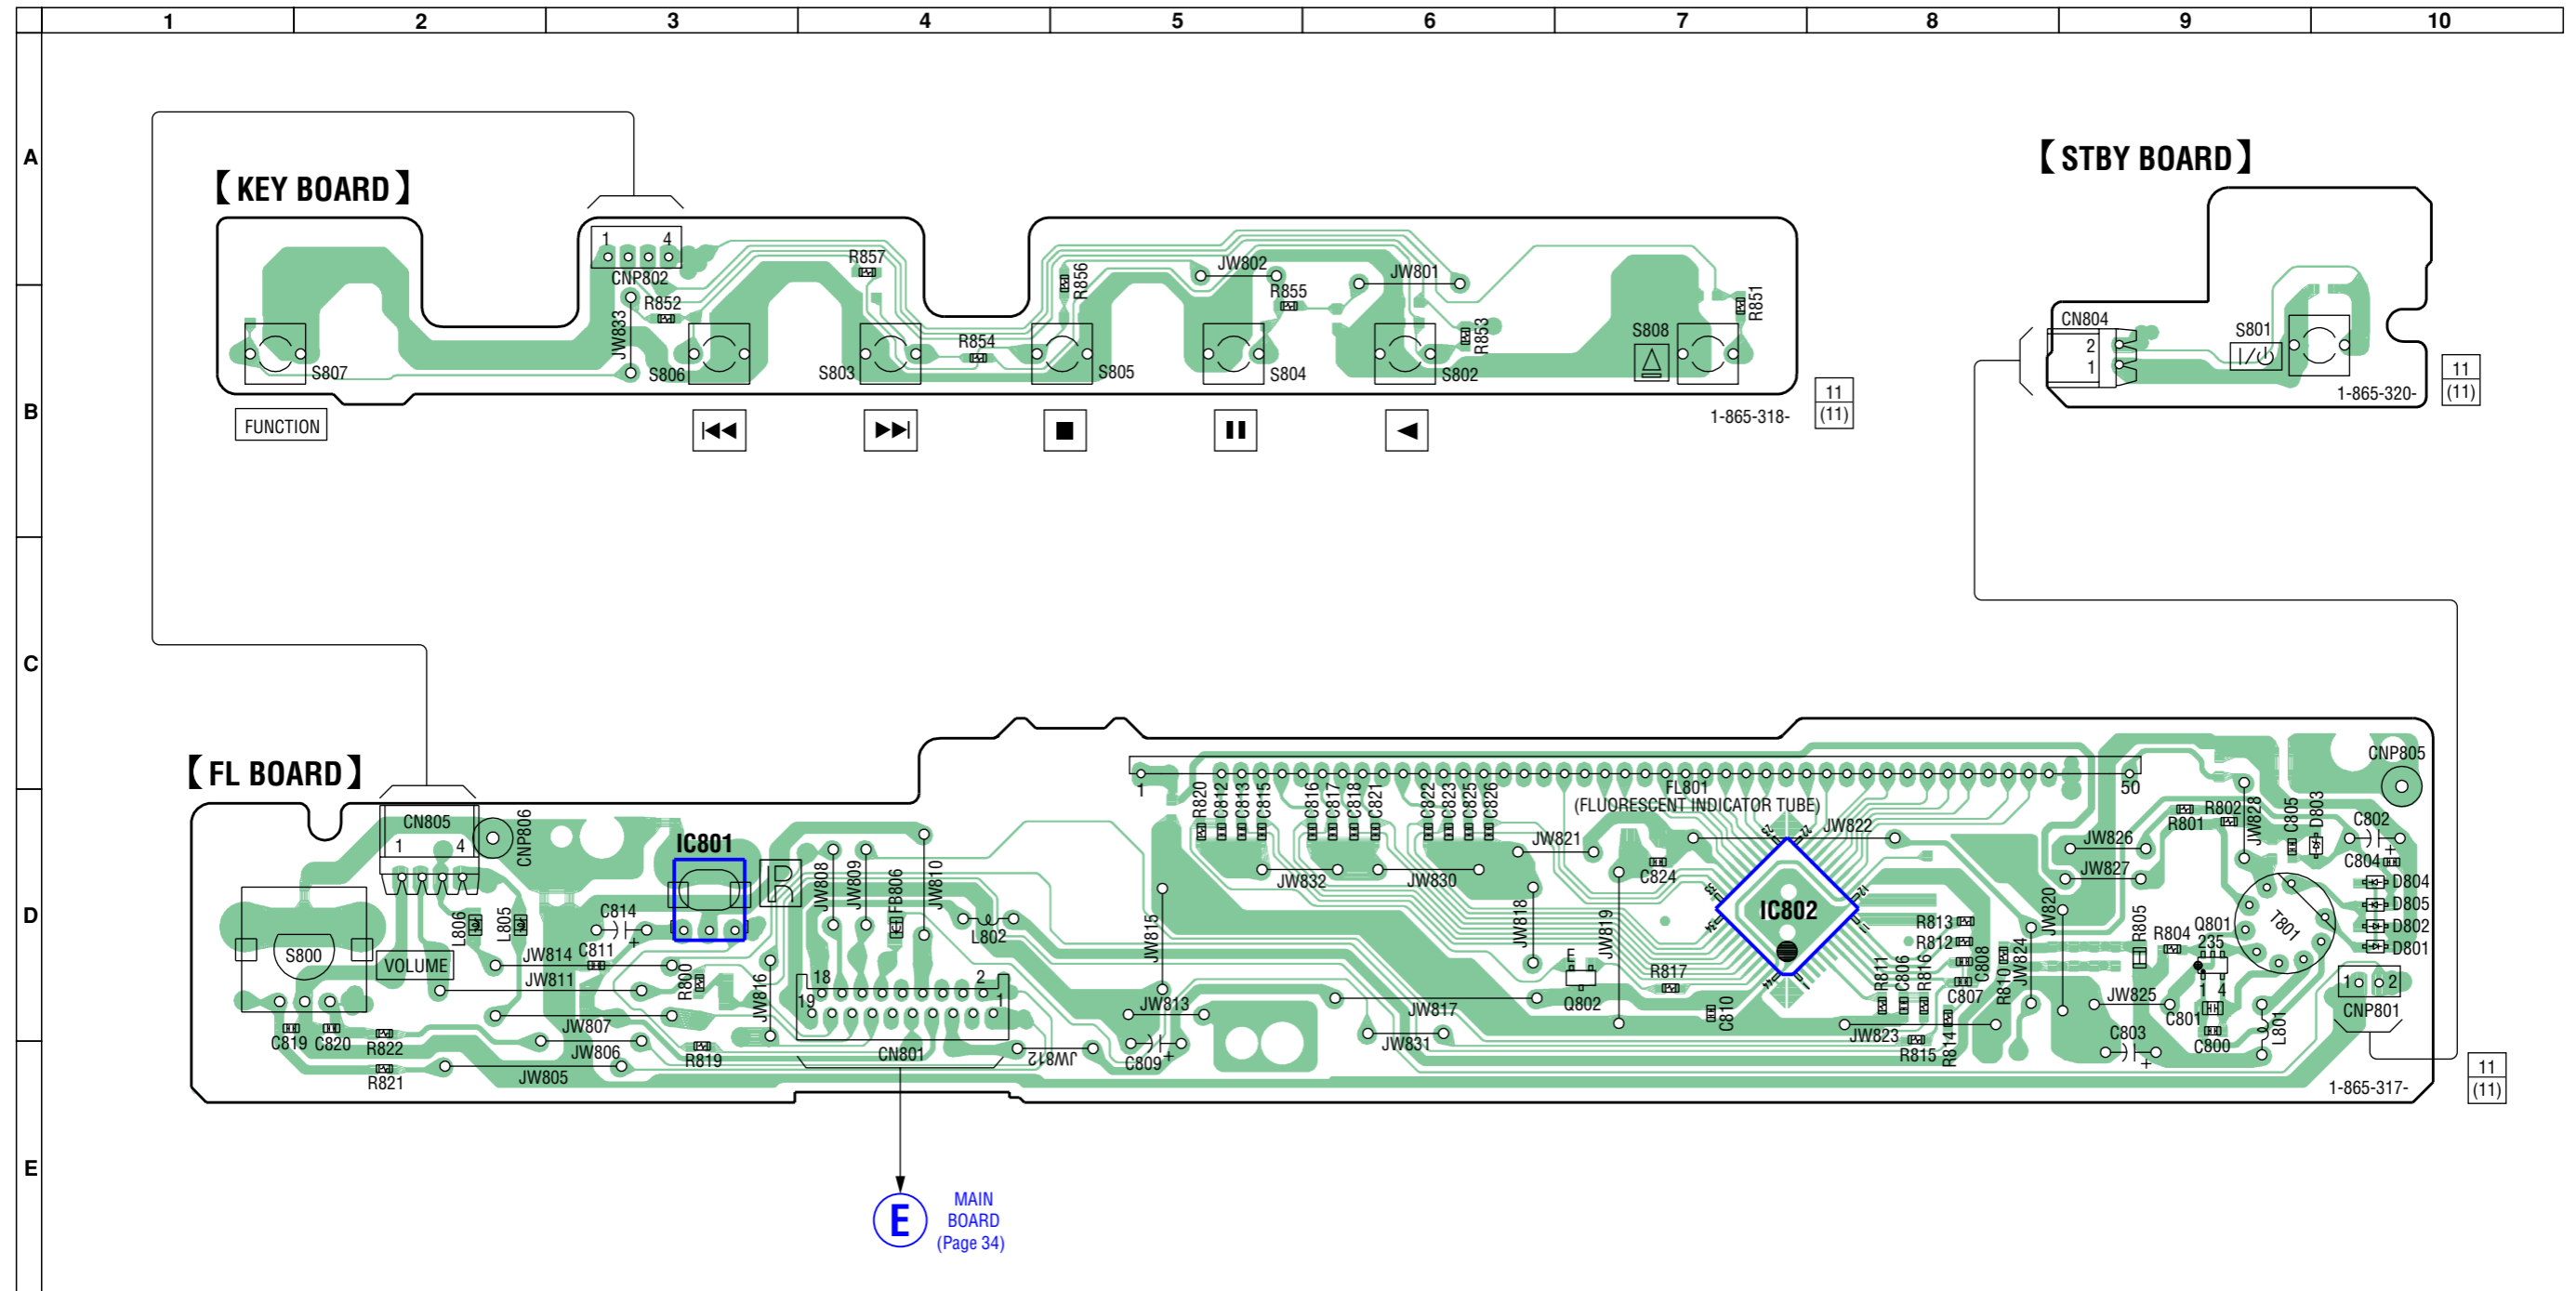


• Semiconductor Location

Ref. No.	Location
D801	D-10
D802	D-10
D803	D-10
D804	D-10
D805	D-10
IC801	D-3
IC802	D-8
Q801	D-9
Q802	D-7

5-20. SCHEMATIC DIAGRAM – PANEL SECTION (1/2) – • See page 53 for IC Block Diagram.

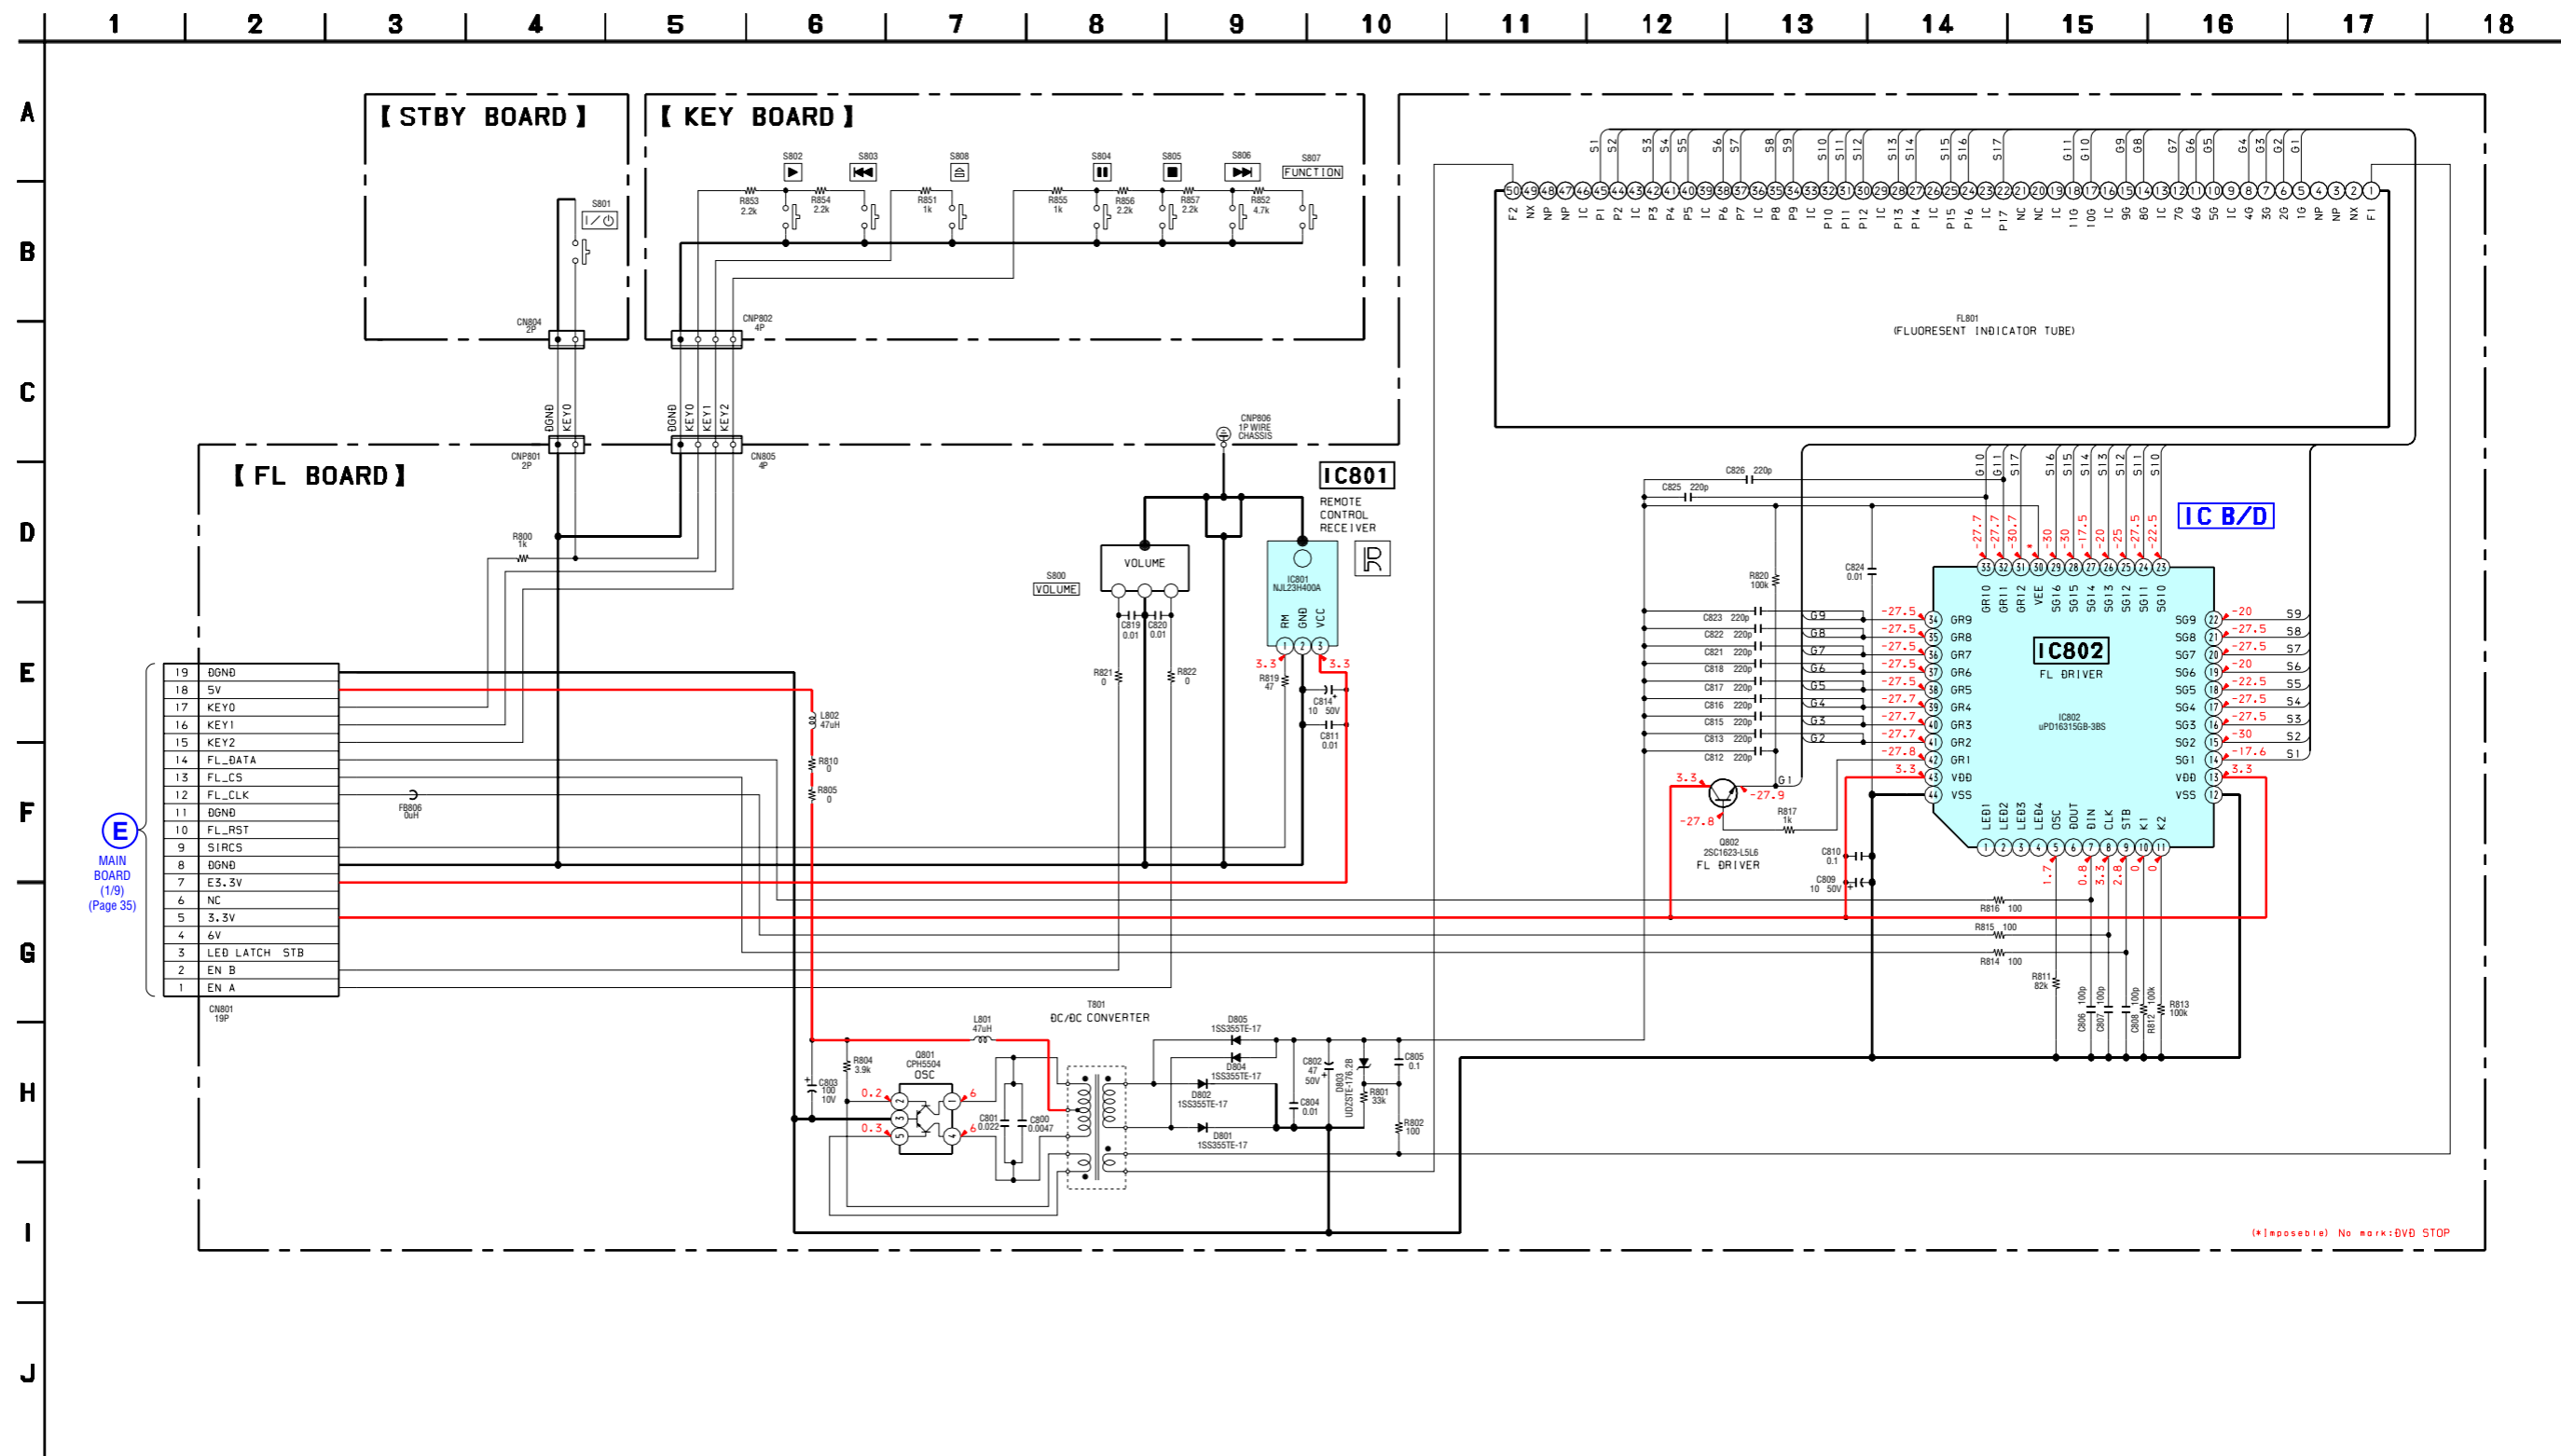


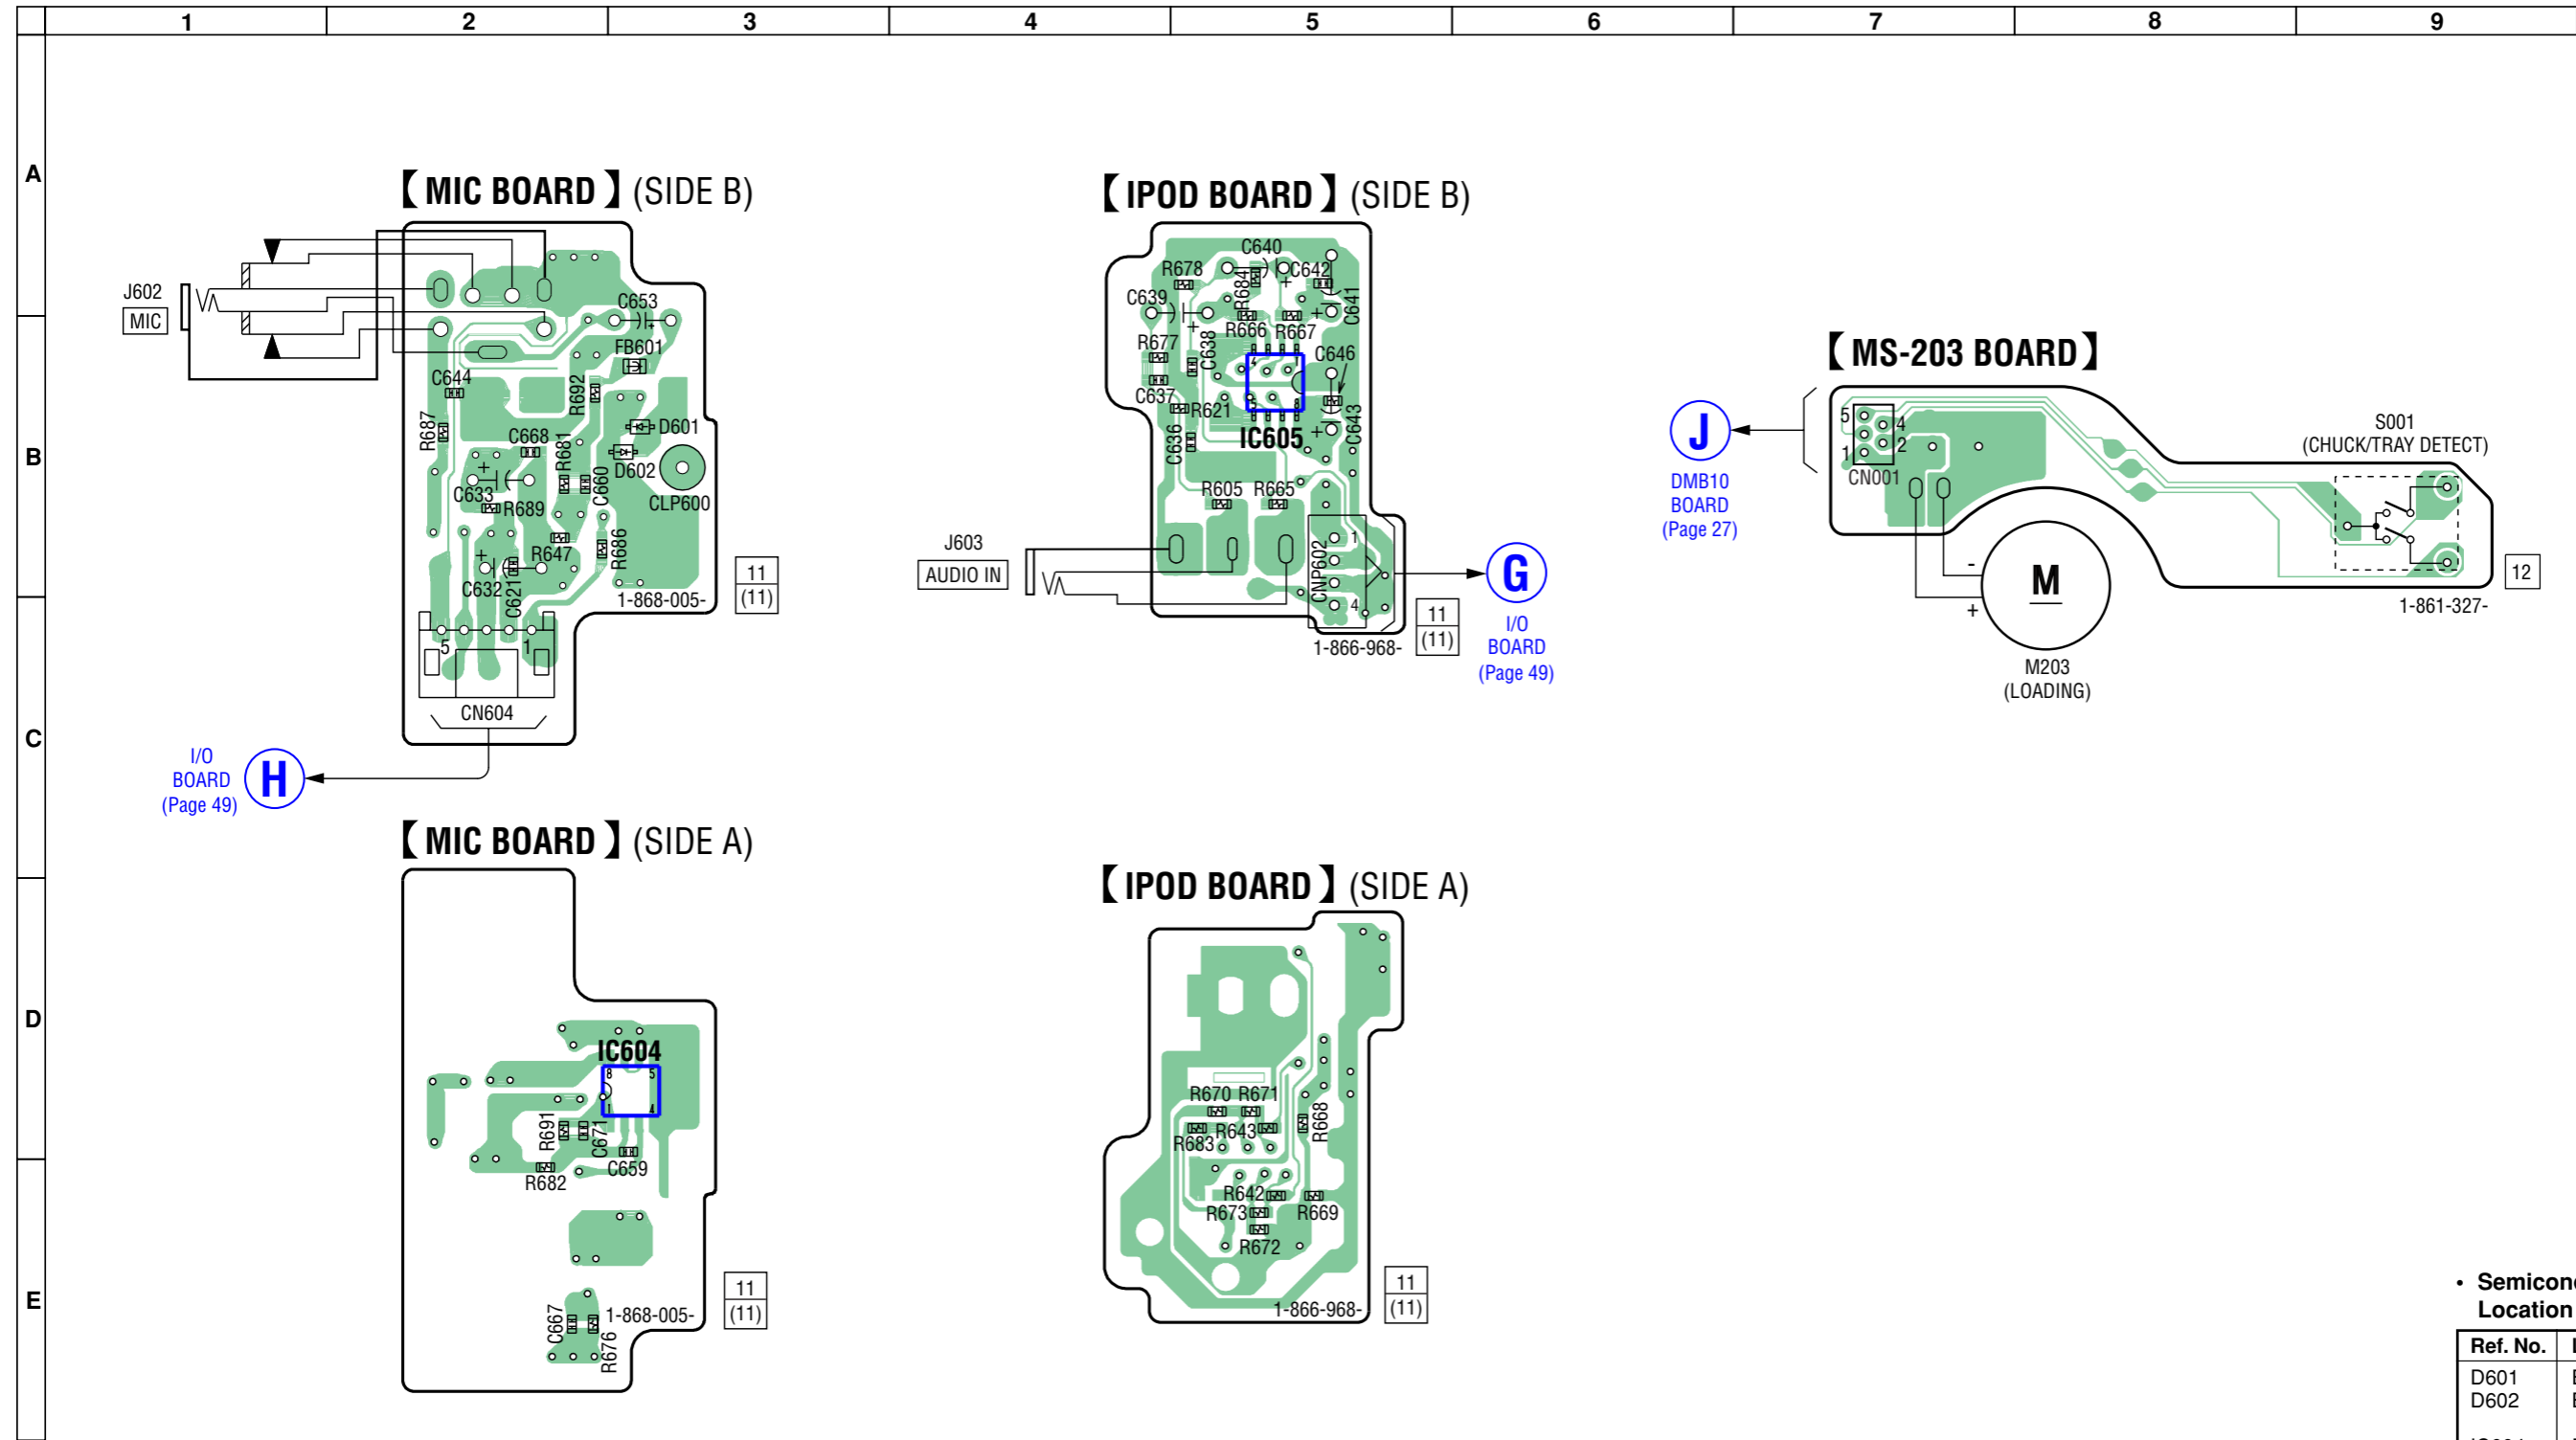


• Semiconductor Location

Ref. No.	Location
D601	B-3
D602	B-3
IC604	D-3
IC605	B-5

5-22. SCHEMATIC DIAGRAM – PANEL SECTION (2/2) –

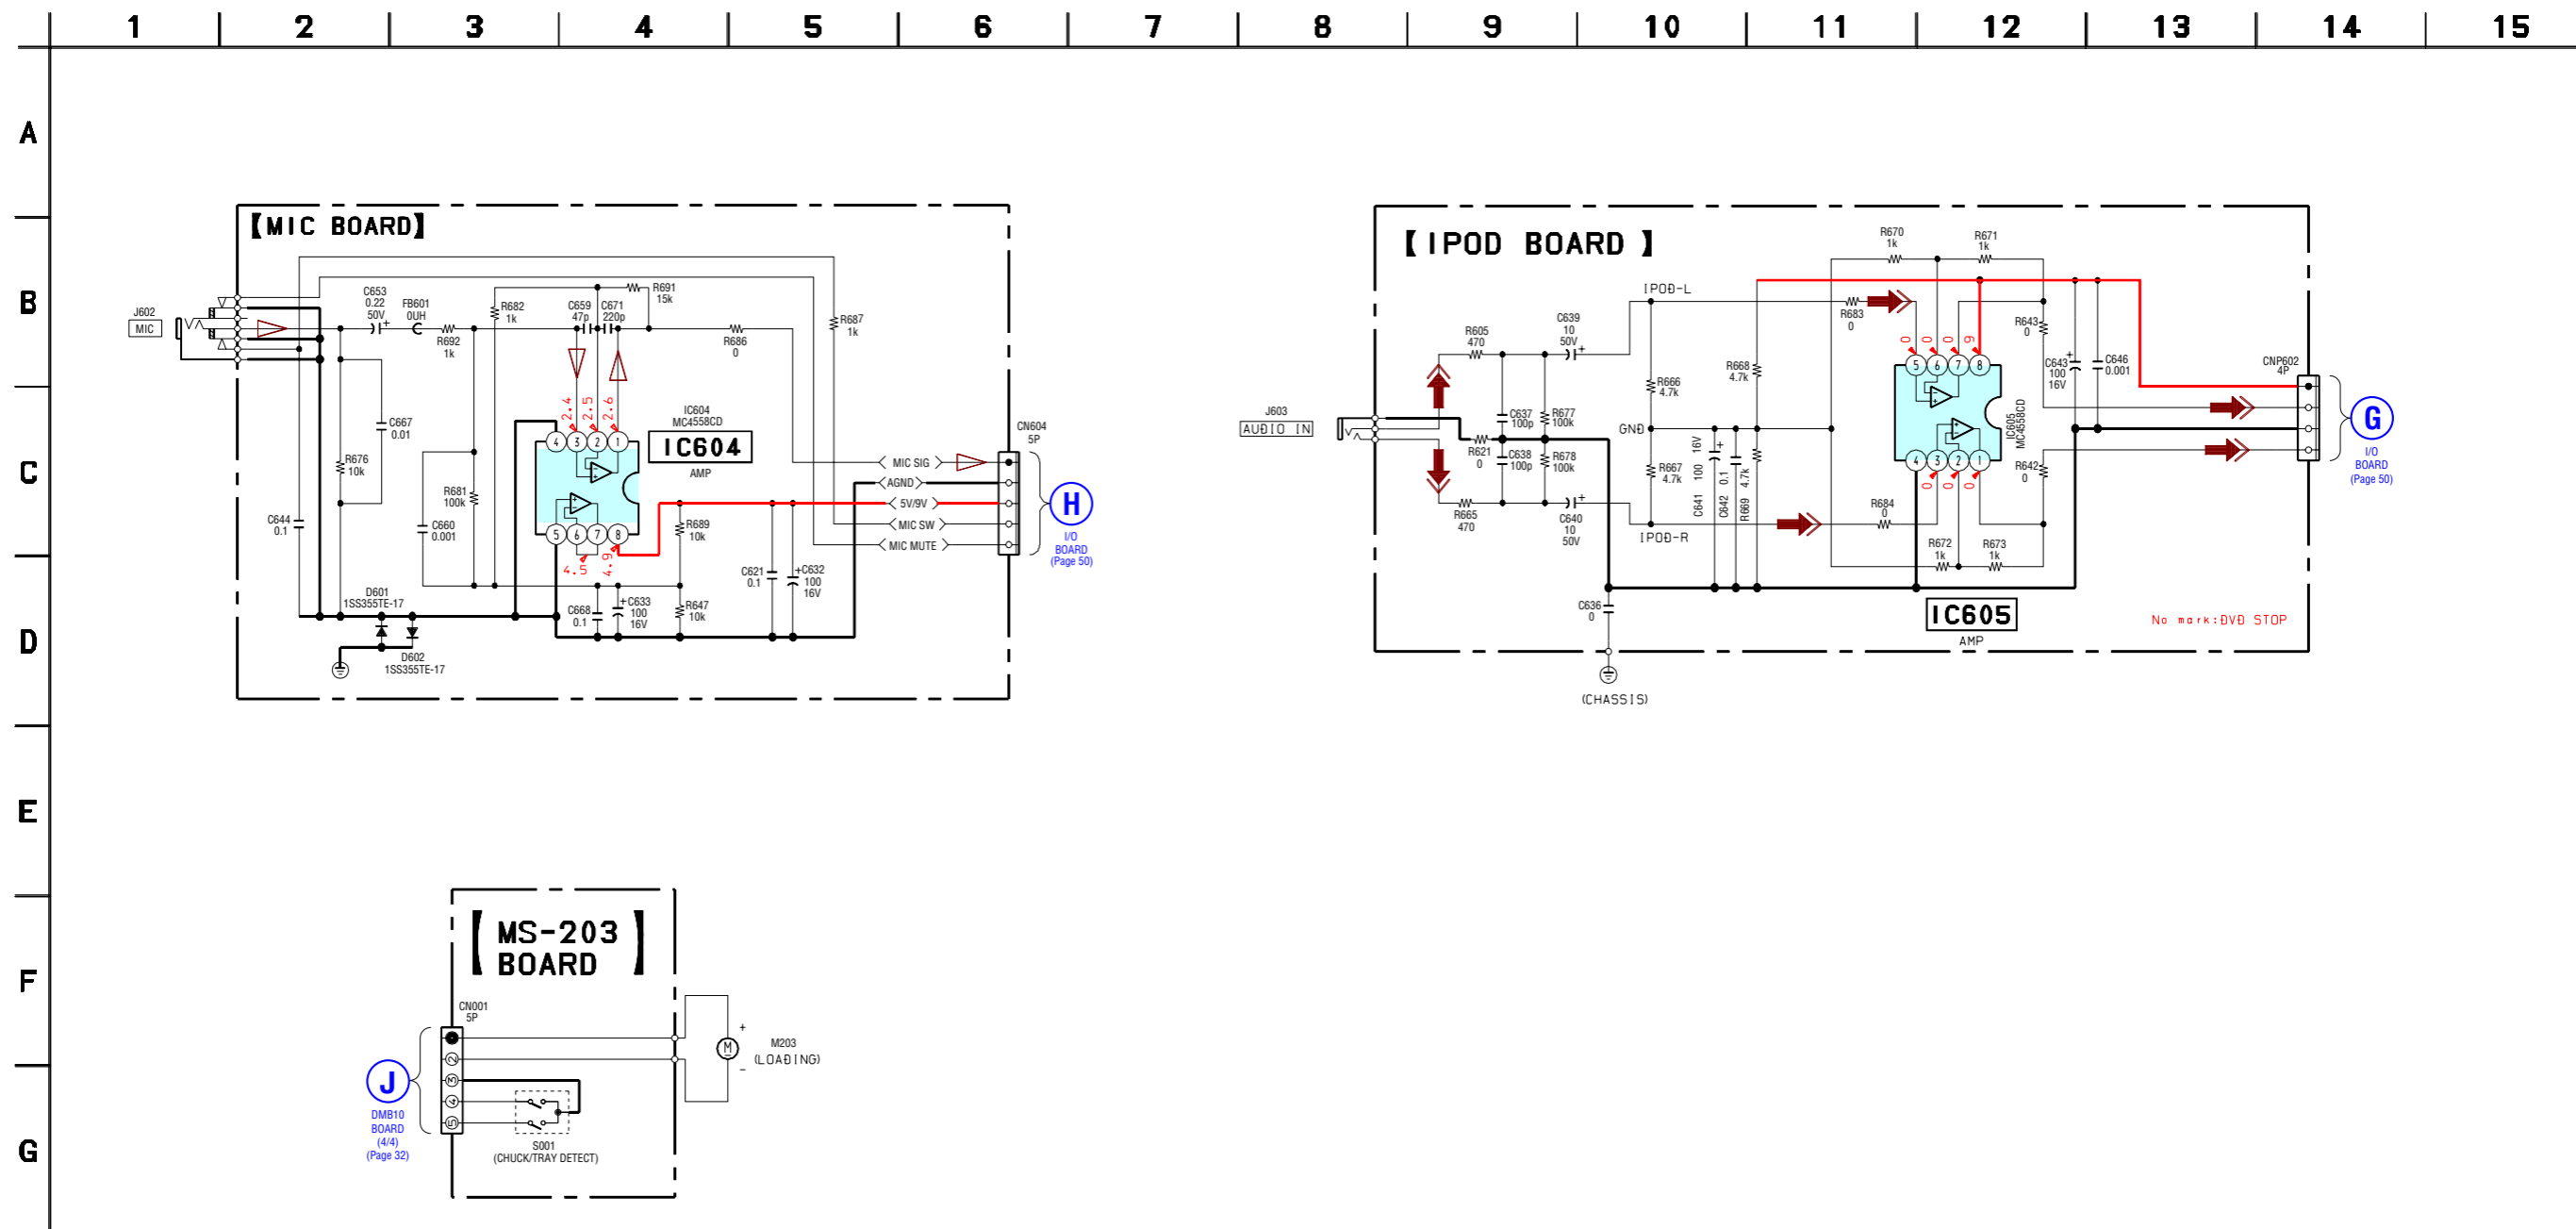

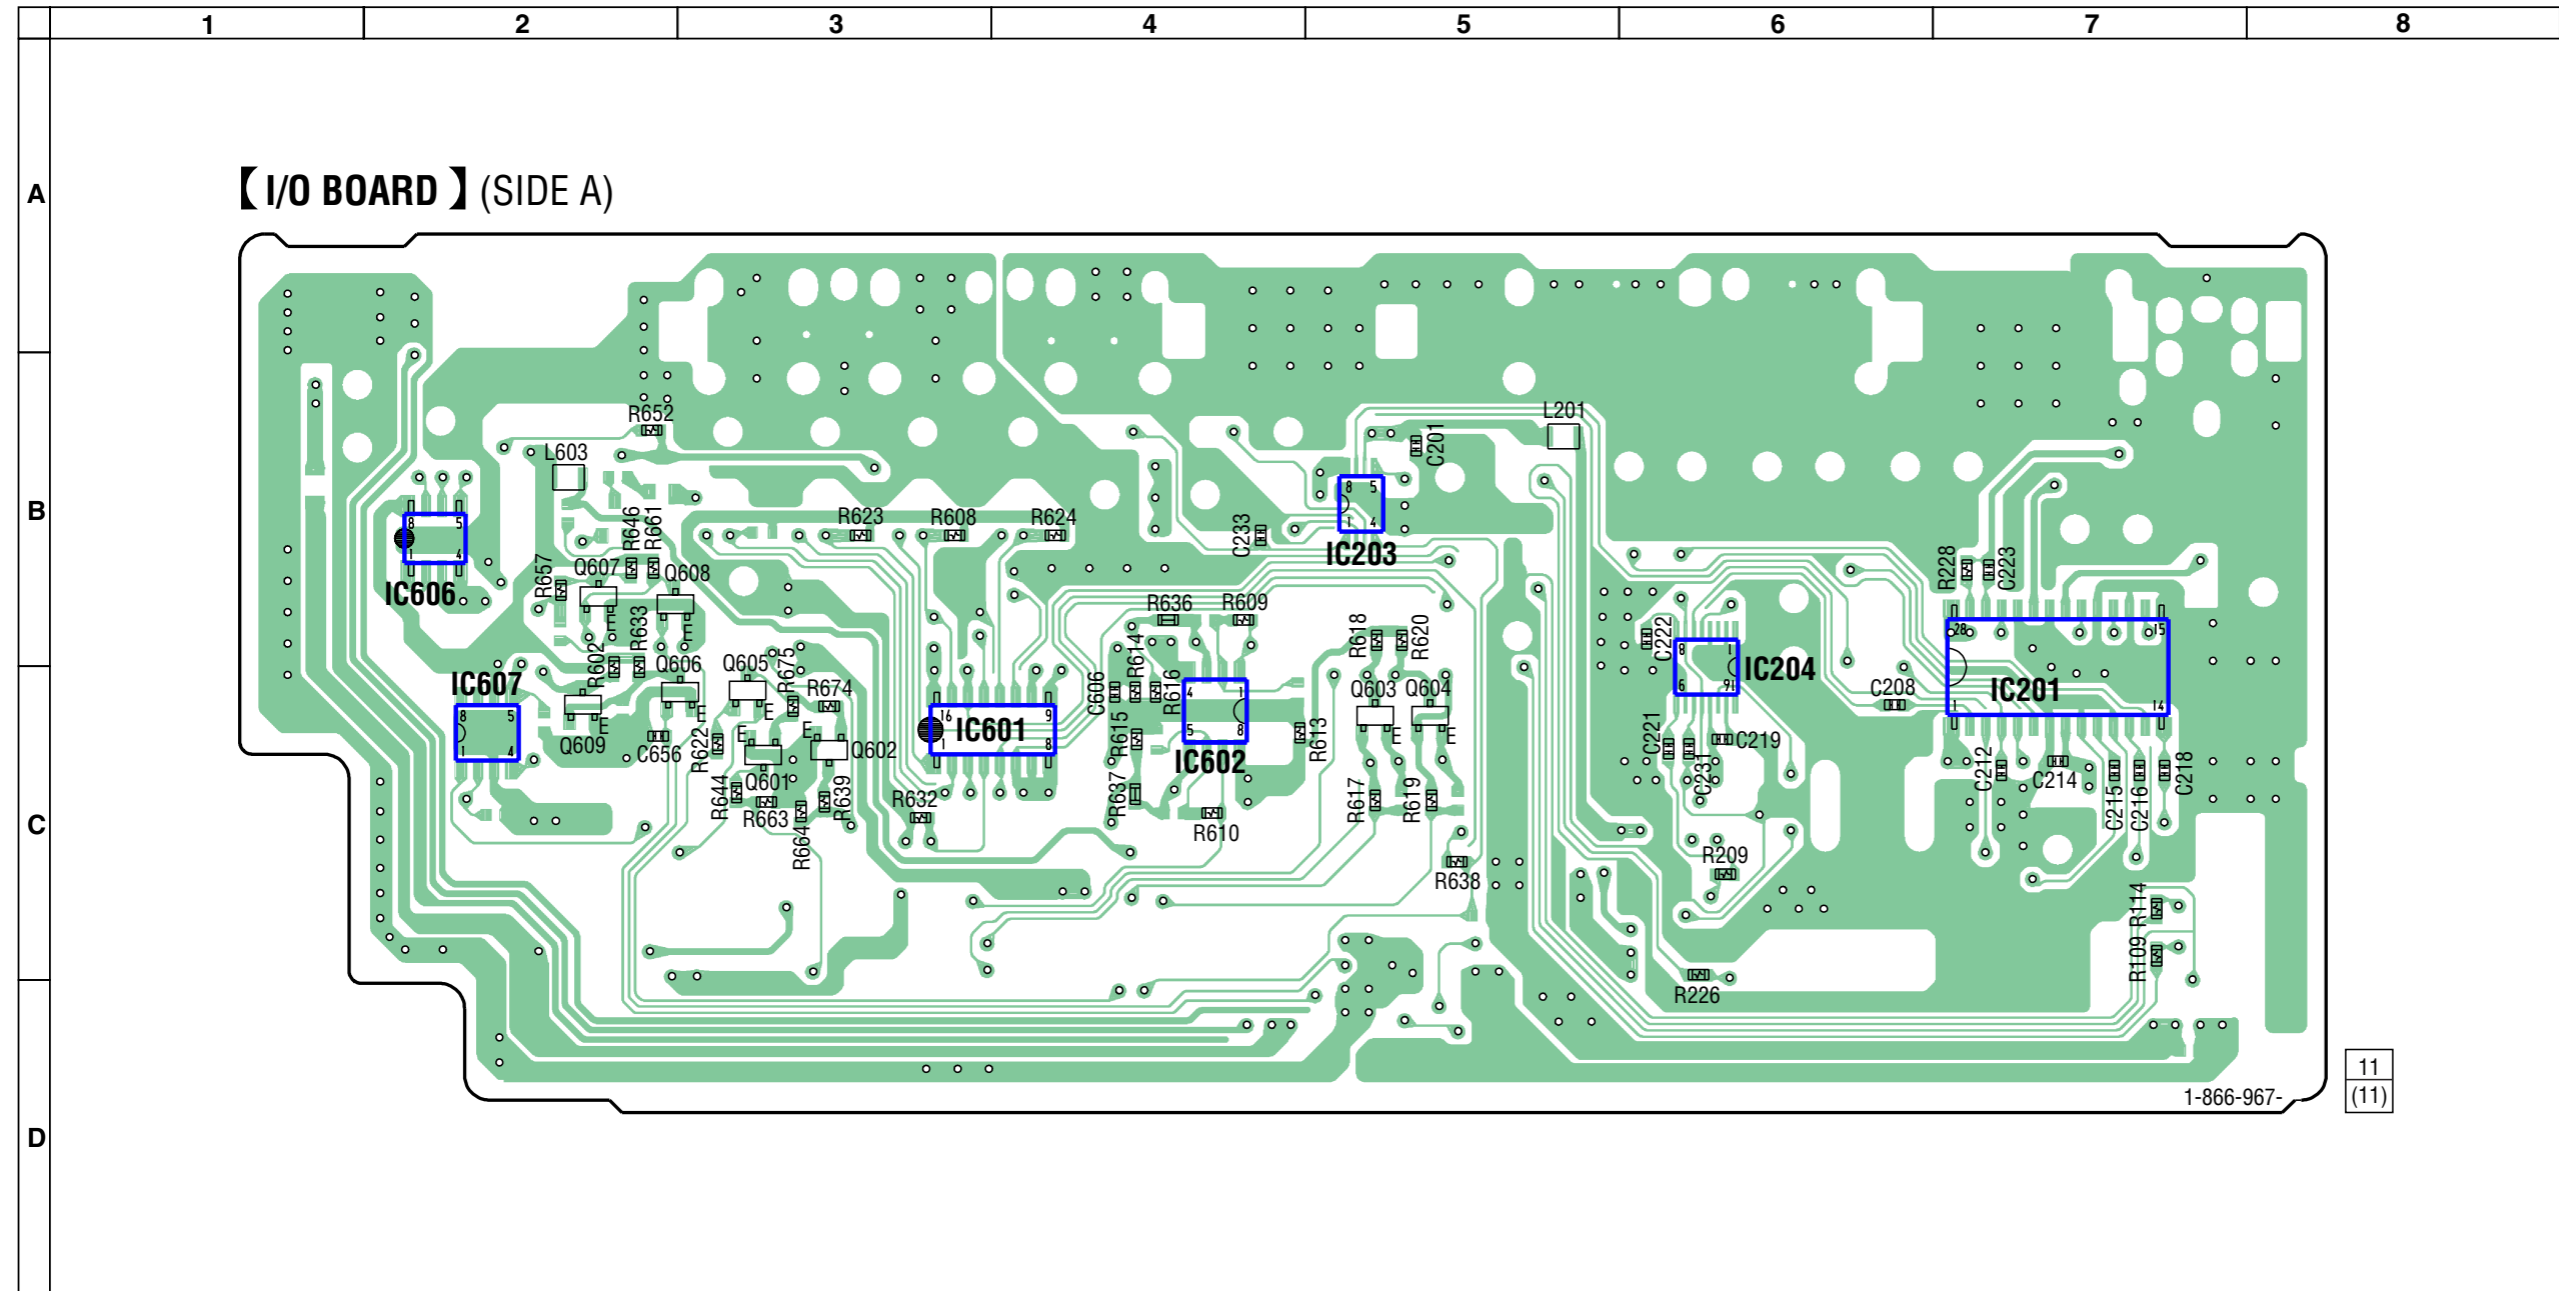


• Semiconductor Location

Ref. No.	Location
IC201	C-7
IC203	B-5
IC204	B-6
IC601	C-3
IC602	C-4
IC606	B-2
IC607	C-2
Q601	C-3
Q602	C-3
Q603	C-5
Q604	C-5
Q605	B-3
Q606	B-3
Q607	B-2
Q608	B-3
Q609	C-2

1-866-967-

11
(11)

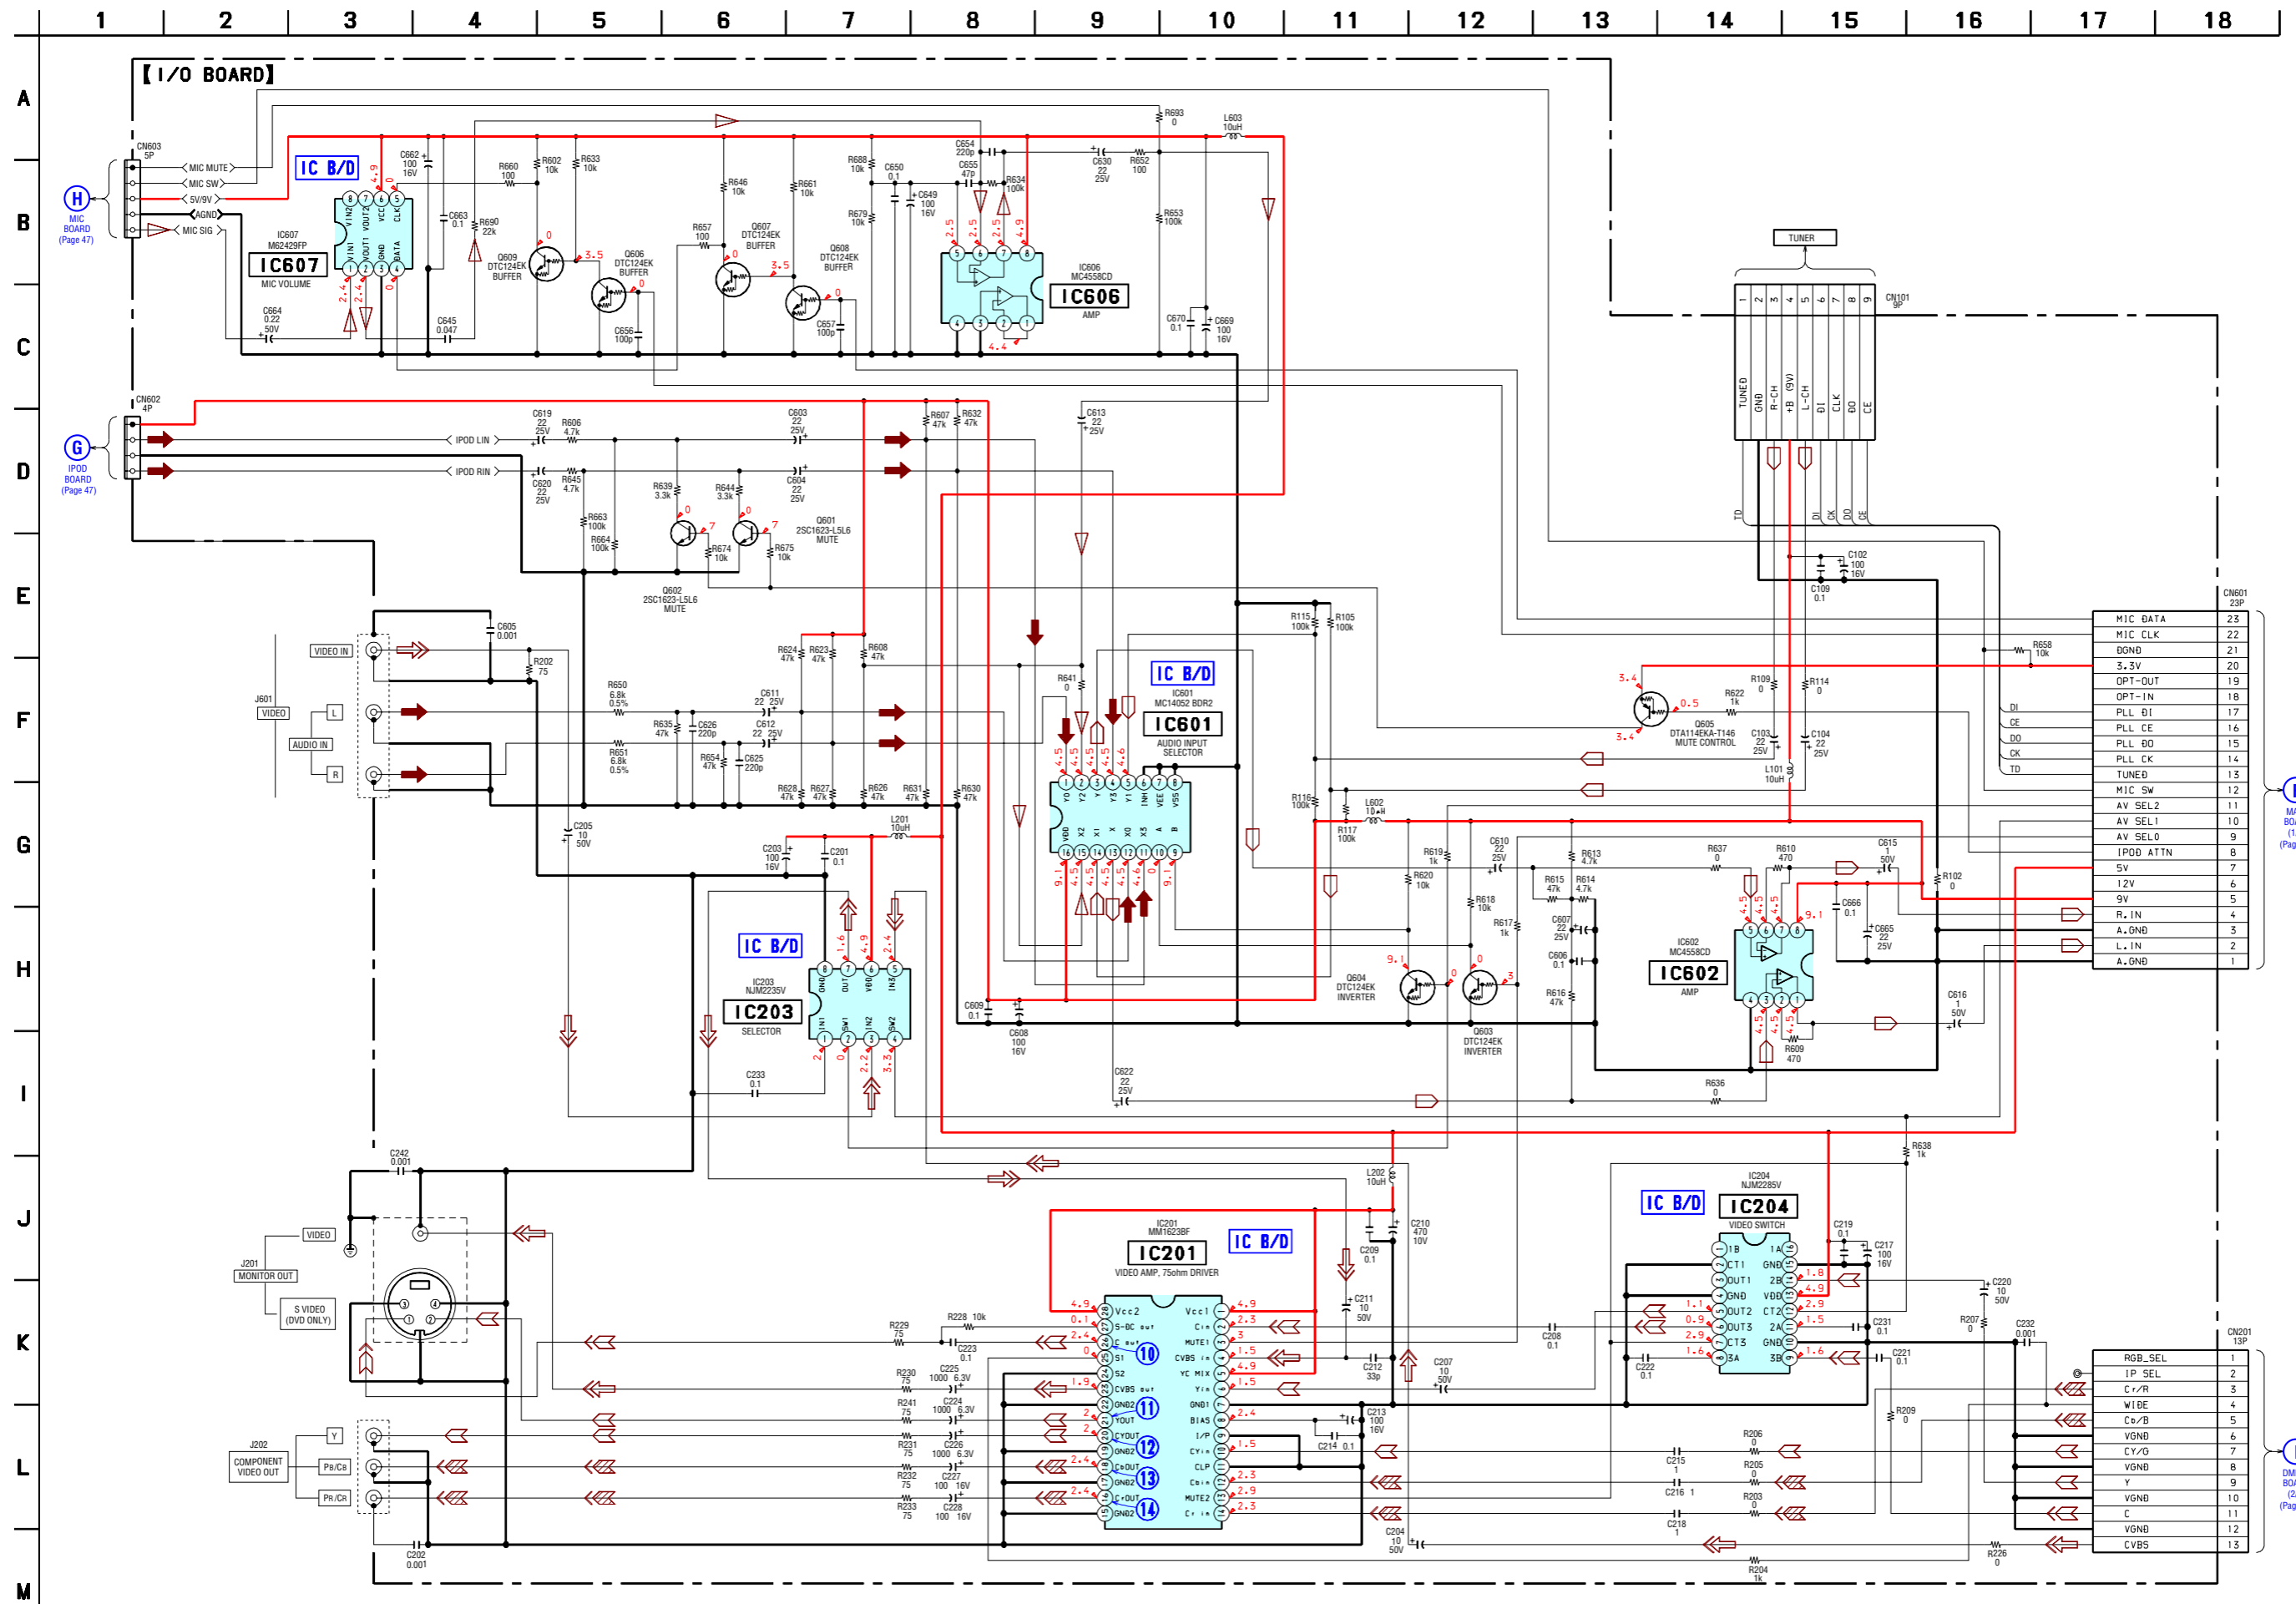

MIC DATA	23
MIC CLK	21
BGND	22
3.3V	20
OPT-OUT	19
OPT-IN	18
PLL DI	17
PLL CE	16
PLL BD	15
PLL CK	14
TUNED	13
MIC SW	12
AV SEL2	11
AV SEL1	10
AV SEL0	9
IPD0 ATTN	8
5V	7
12V	6
9V	5
R. IN	4
A. GND	3
L. IN	2
A. GND	1


(F) MAIN BOARD (1/9) (Page 35)

RGB_SEL	1
IP_SEL	2
C+/R	3
WIDE	4
Cb/B	5
VGND	6
CY/G	7
VGND	8
Y	9
VGND	10
C	11
VGND	12
CVBS	13


(I) DM810 BOARD (2/4) (Page 30)

• IC Block Diagrams


– MAIN Board –
IC101-107 CXD9774M

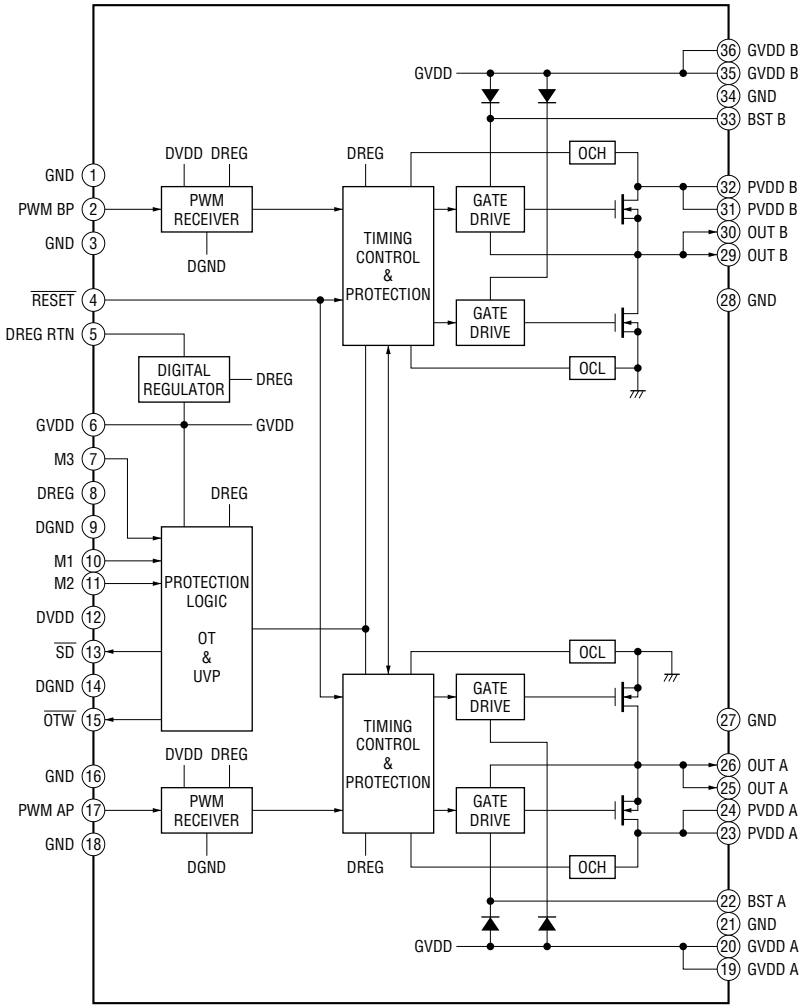


IC108-110 CXD9843AR

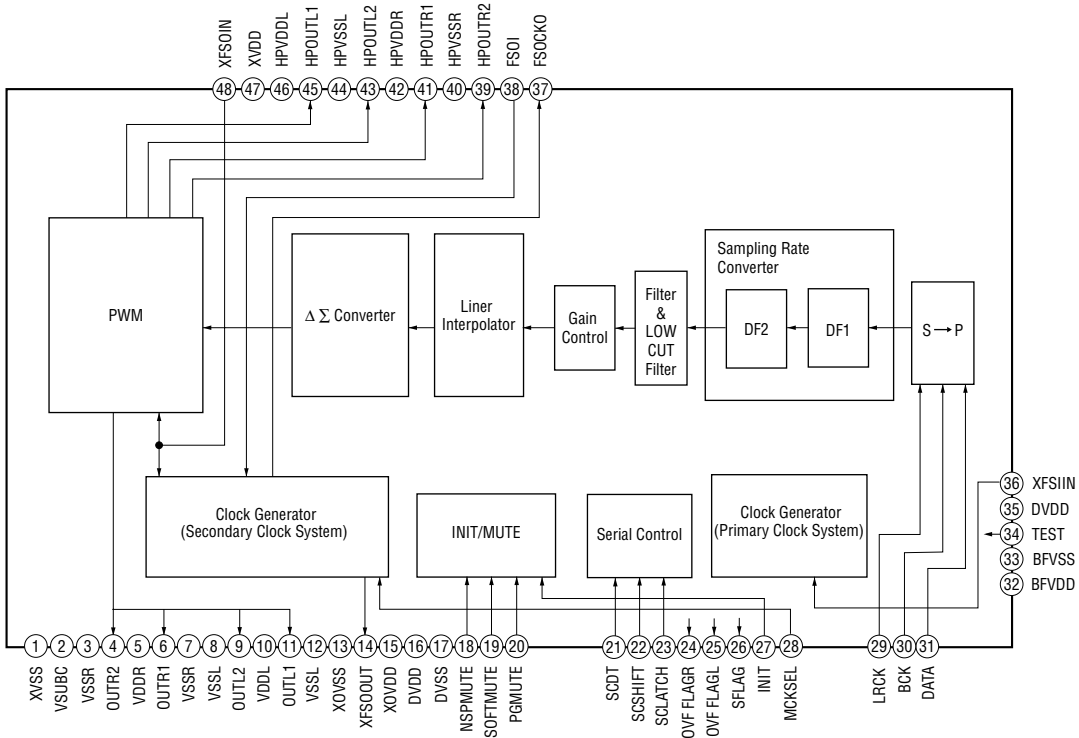


IC505 LC89056W-E

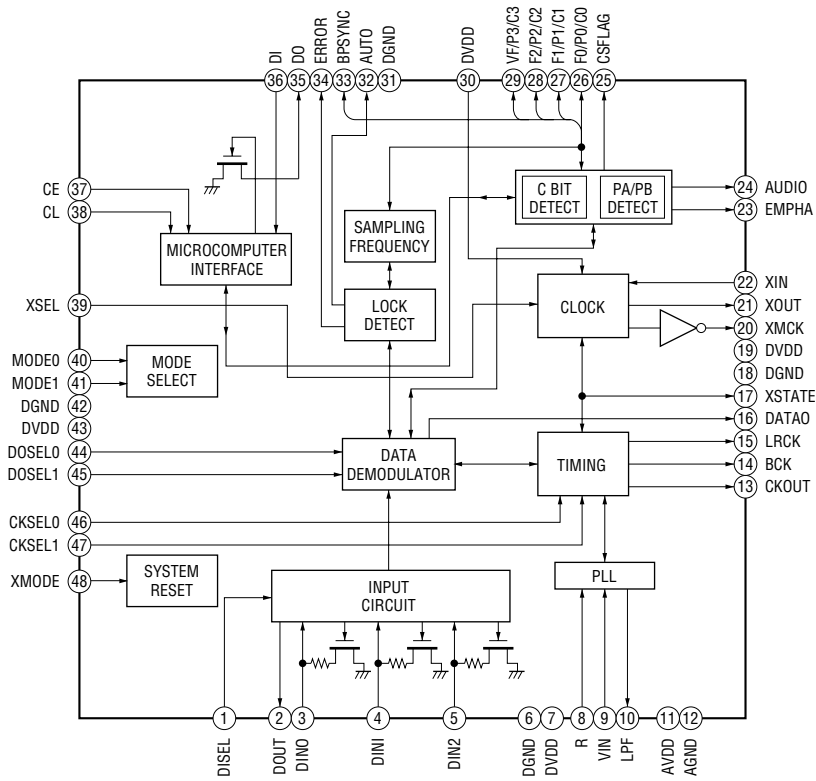

IC514 SN74LV157APWR

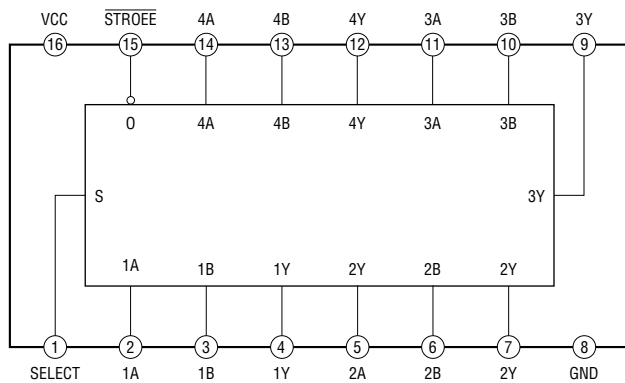


- FL Board -
IC802 uPD16315GB-3BS

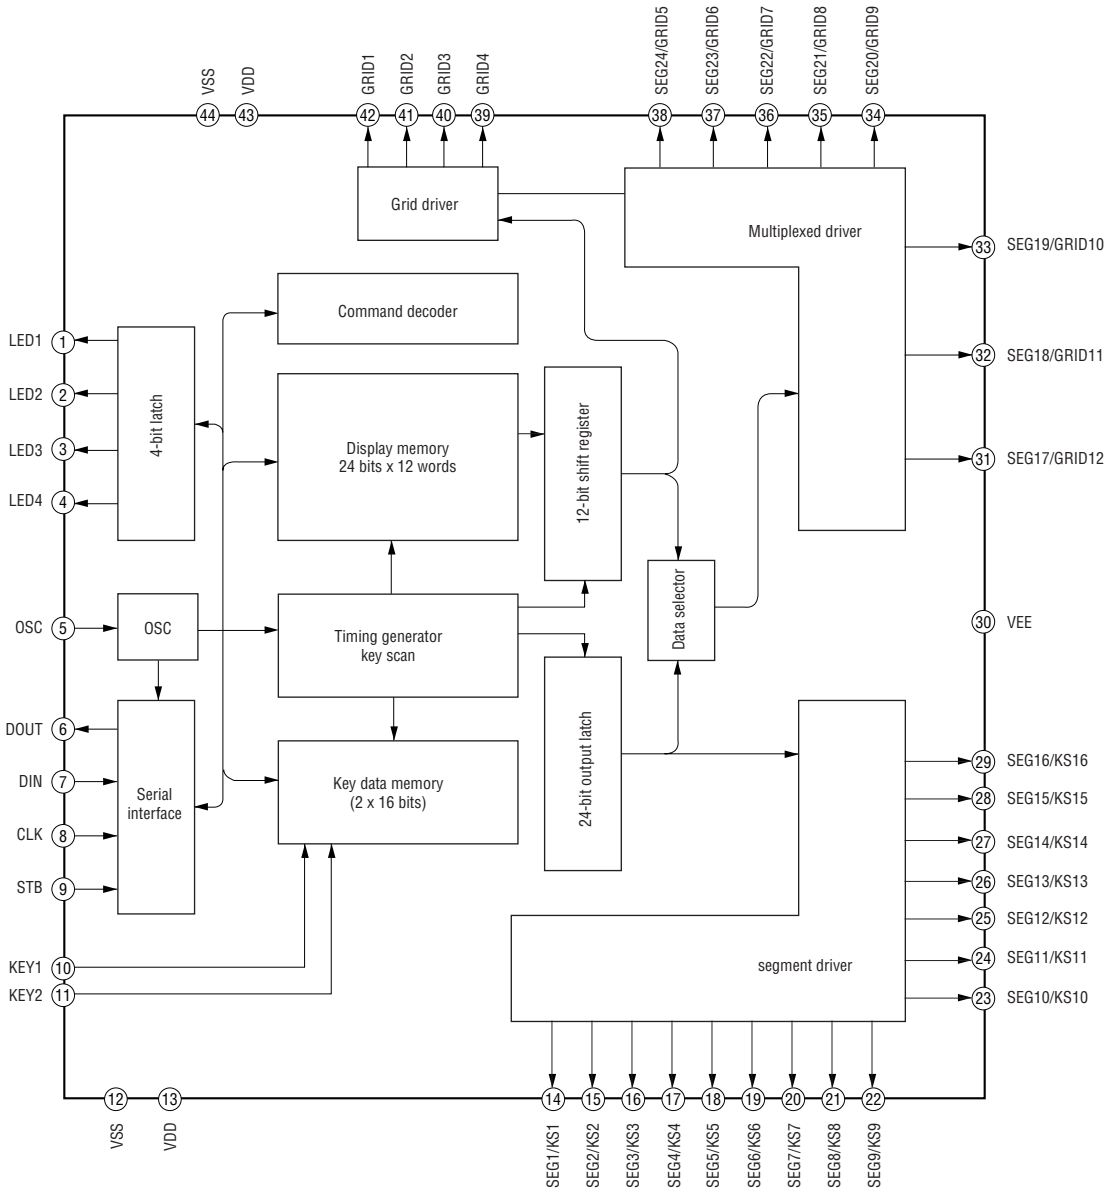


– I/O Board –


IC201 MM1623BFBE

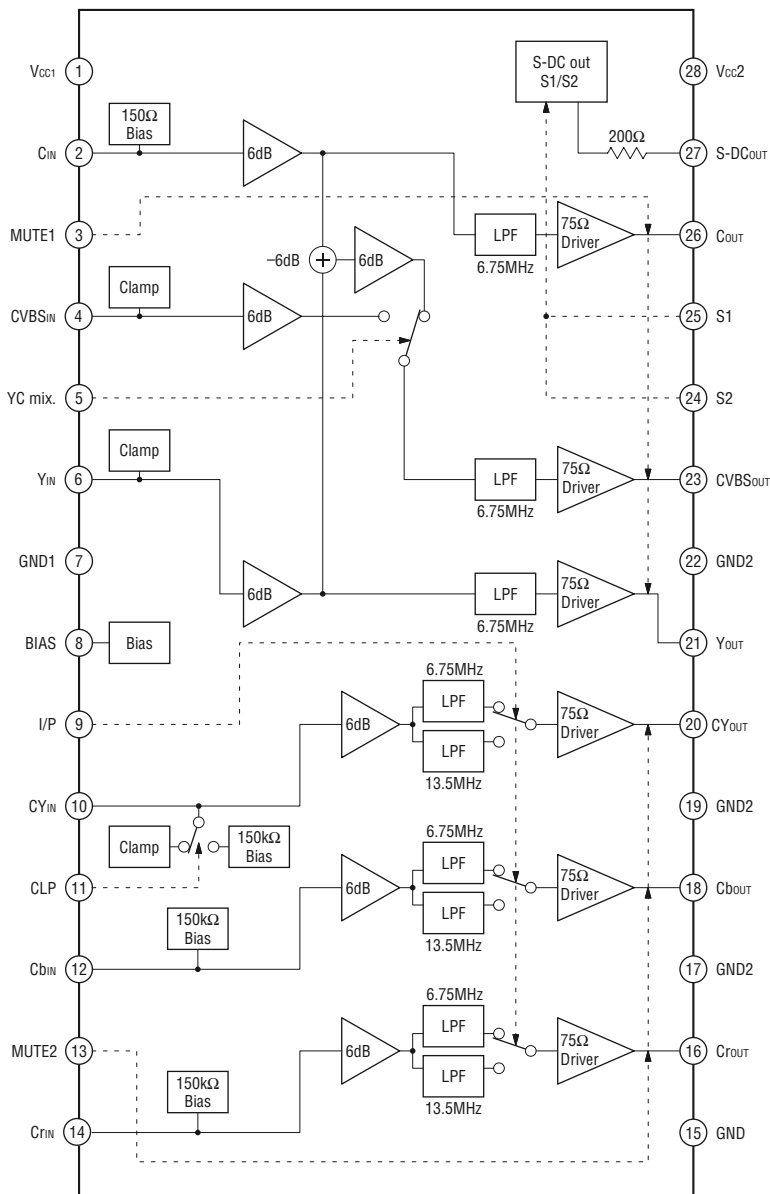


IC203 NJM2235V (TE2)

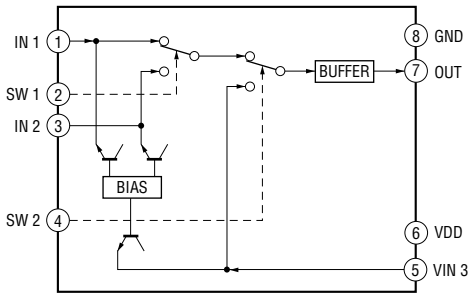


IC601 MC14052BDR2

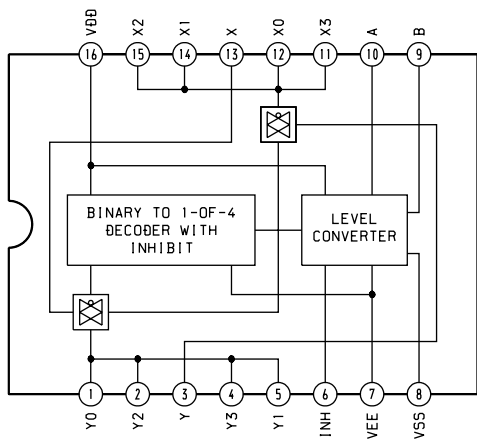

IC204 NJM2285V-TE2

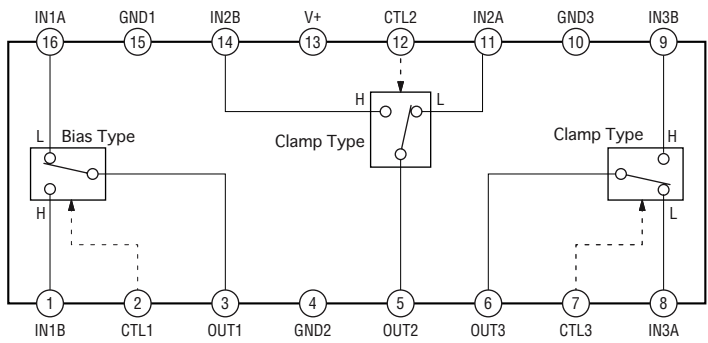

IC607 M62429FP-TP

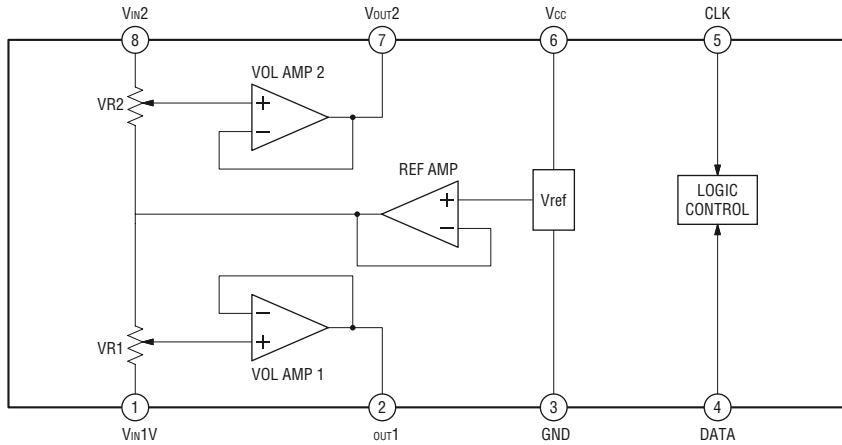

• IC Pin Function Description

MAIN BOARD IC509 M30622MGP-A17FPU0 (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	DAMP SCDT/ DIAT_SDATA	O	Digital amp (IC108 to 110) data output
2	DAMP SHIFT/ DIAT_SCLK	O	Digital amp (IC108 to 110) data output (not used)
3	V-CONTROL	O	Voltage control for amp (not used)
4	SIRCS_IN	I	Sircs input
5	DSP_DIN/DIR_DIN	O	DSP /DIR data output (not used)
6	DSP_DOUT	I	DSP data input (not used)
7	DSP_CLK/DIR_CLK	O	DSP/DIR clock (not used)
8	BYTE	—	Ground terminal
9	CNVSS	—	Ground terminal
10	EN_A	I	Volume signal input from ENCODER (A)
11	EN_B	I	Volume signal input from ENCODER (B)
12	RESET	I	System reset signal input
13	XOUT	O	Main clock output (5MHz)
14	VSS	—	Ground terminal
15	XIN	I	Main clock input (10MHz)
16	VCC	—	Power supply (+3.3V)
17	NMI	I	Not used
18	DIR_ZERO	I	DIR zero input (not used)
19	DIR_CSFLAG	I	DIR csflag input (not used)
20	AC_CUT	I	Detect AC-CUT (primary power off)
21	XRST	O	XRST signal output (not used)
22	XSCEN	O	Voltage control output (not used)
23	DIAT_CSOD	I	DIAT CSOD signal output (not used)
24	FL_CLK/LED_CLK	O	FL driver (IC802) / LED driver (IC803) clock
25	MAMUTE	I	MAMUTE Signal input from DVD RF (IC102)
26	LED_LAT	O	LED driver latch output
27	FL_D_OUT/LED_DATA	O	FL driver (IC802) / LED Driver (IC803) data out
28	FL_CS/STB	O	FL driver (IC802) chip select output
29	I2C_CLK	I/O	I2C clock input/output
30	I2C_DATA	I/O	I2C data input/output
31	DVD_SID/TXD1	O	SID data output to DVD RF (IC102)
32	DVD_SOD/RXD1	I	SOD data input from DVD RF (IC102)
33	DVD_SCO/CLK1	I	Clock signal input from DVD RF (IC102)
34	DVD_XIFBUSY/RTS1	O	IFBUSY signal output to DVD RF (IC102)
35	(NO USE)	—	Not used
36	(NO USE)	—	Not used
37	(NO USE)	—	Not used
38	SEL1FS	O	DIR_SELECT/Flash Write RTS1 (not used)
39	DVD_XIFCS	I	DVD RF (IC102) chip select signal
40	P_CONT1	O	Control reay for power supply
41	EMP/FL_RESET	O	FL driver reset
42	SEN	I	OCSW signal input (not used)
43	MTK_XRST	O	DVD reset signal
44	P_CONT2	O	Control reay for power supply 2 (300ms)
45	DEVICE	I	Not used

Pin No.	Pin Name	I/O	Description
46	CE/STBY_LED	O	Flash Write CE (not used)
47	DRIVE_RST(EN)	O	Driver signal reset
48	DRIVE_OCP(DIAG)	I	Digital amp (power driver) diag
49	OVERFLOW1	I	Over flow status1 of digital amp (IC110)
50	OVERFLOW2	I	Over flow status2 of digital amp (IC108 to 110)
51	DAMP LATCH1	O	Digital amp (IC108) chip select1 signal output
52	DAMP LATCH2	O	Digital amp (IC109) chip select2 signal output
53	DAMP LATCH3	O	Digital amp (IC110) chip select3 signal output
54	DAMP INIT	O	Digital amp (IC108 to 110) reset signal output
55	DAMP SOFT MUTE	O	Digital amp (IC108 to 110) soft muting output
56	HP SW	I	Switch headphone is insert
57	HP MUTE	O	Control of muting headphone signal
58	DSP_ACK	I	DSP acknowledge (not used)
59	DSP_GP9	I	DSP GP9 in (not used)
60	DSP_XRST	O	DSP reset (not used)
61	DSP_HCE	O	DSP chip enable (not used)
62	VCC	—	Power supply (+3.3V)
63	DSP_BST	O	DSP bootstrap (for DSP INIT) (not used)
64	VSS	—	Ground terminal
65	DSP_PM	O	DSP PLL initial (not used)
66	DIR_RST	O	DIR reset out (not used)
67	DIR_HCE	O	DIR chip enable signal output (not used)
68	DIR_RERR	I	DIR error input (not used)
69	DIR_XSTATE	I	DIR change clock status (not used)
70	DIR_HDOUT	I	DIR Data input (not used)
71	DSP_SKIP	O	DSP GP12 (not used)
72	AD_RST	O	ADC reset (not used)
73	MODE0	O	Not used
74	KEY INT	I	Wakeup from ECO mode by key input
75	RDS-CLK/MIC-CLK	O	MIC volume IC (IC607) control clock output
76	RDS-DATA/MIC-DATA	O	MIC volume IC (IC607) control data output
77	PLL-CLK	O	Tuner clock
78	PLL-DO	I	Tuner data input (uCOM←pack)
79	PLL-CE	O	Tuner chip enable
80	PLL-DI	O	Tuner data output (pack←uCOM)
81	AV SELECT 0	O	Audio/Video select0
82	AV SELECT 1	O	Audio/Video select1
83	AV SELECT 2	O	Audio/Video select2
84	AV SELECT 3	O	Audio/Video select3 (not used)
85	TUNED	I	Tuner pack tuned input
86	IO_CE	O	I/O expander chip enable / control of loading CD tray (open action)
87	IO_RESET	O	I/O expander reset / control of loading CD tray (close action)
88	IO_DI	O	I/O expander data out / SW2 of CDM
89	IO_DO	I	I/O expander data in / SW3 of CDM
90	IO_CLK	O	I/O expander clock
91	IPOD/MIC SW	O	Audio attenuate control output
92	DESTINATION	I	Destination select

Pin No.	Pin Name	I/O	Description
93	MODEL	I	Model select
94	KEY2	I	Key input 2
95	KEY1	I	Key input 1
96	VSS	—	Ground
97	KEY0	I	Key input 0
98	VREF	—	Reference Voltage (+3.3V)
99	VCC	—	Power supply (+3.3V)
100	M-ST/WMUTE	O	LINK (multi STEREO) control output

DMB10 BOARD IC102 CXD9804R

(CD/DVD RF AMP, FOCUS/TRACKING ERR AMP, DVD SYSTEM PROCESSOR, DIGITAL SERVO PROCESSOR)

Pin No.	Pin Name	I/O	Description
1	AGND	—	Terminal Ground
2	DVDA	I	AC coupled input path A
3	DVDB	I	AC coupled input path B
4	DVDC	I	AC coupled input path C
5	DVDD	I	AC coupled input path D
6	DVDRFIP	I	AC coupled DVD RF signal input RFIP
7	DVDRFIN	I	AC coupled DVD RF signal input RFIN (not used)
8	NA	I	DC coupled main-beam RF signal input A
9	NB	I	DC coupled main-beam RF signal input B
10	MC	I	DC coupled main-beam RF signal input C
11	MD	I	DC coupled main-beam RF signal input D
12	SA	I	DC coupled sub-beam RF signal input A (not used)
13	SB	I	DC coupled sub-beam RF signal input B (not used)
14	SC	I	DC coupled sub-beam RF signal input C (not used)
15	SD	I	DC coupled sub-beam RF signal input D (not used)
16	CDFON	I	CD focusing error negative input (not used)
17	CDFOP	I	CD focusing error positive input (not used)
18	TNI	I	3 beam satellite PD signal negative input
19	TPI	I	3 beam satellite PD signal positive input
20	MDI1	I	Laser power PD monitor input
21	MDI2	I	Laser power PD monitor input
22	LDO2	O	Laser drive output
23	LDO1	O	Laser drive output
24	SVDD3	—	Power Supply (+3.3V)
25	CSO	O	Central servo, Positive main beam summing output (not used)
26	RFLVL	O	RFRP low pass, or Positive main beam summing output (not used)
27	SGND	—	Terminal Ground
28	V2REFO	O	Reference voltage 2.8V
29	V2O	O	Reference voltage 2.0V
30	VREFO	O	Reference voltage 1.4V
31	FEO	O	Focus error monitor output (not used)
32	TEO	O	Tracking error monitor output (not used)
33	TEZISLV	O	TE Slicing Level (not used)
34	OPOUT	O	Op amp output (not used)
35	OPIN	I	Op amp negative input (not used)
36	OPIN	I	Op amp positive input (not used)
37	DMO	O	Disk motor control output. PWM output
38	FMO	O	Feed motor control. PWM output
39	TROPENPWM	O	Tray PWM output/Tray open output.
40	IOPMON	O	General PWM output
41	TRO	O	Tracking servo output
42	FOO	O	Focus servo output
43	USBVSS	—	Terminal Ground
44	USBP	I	USB port DPLUS analog pin (not used)
45	USBM	I	USB port DMINUS analog pin (not used)
46	USBVDD3	—	Power Supply (+3.3V)
47	SPFG	I	Motor Hall sensor input

Pin No.	Pin Name	I/O	Description
48	AN0	I	Not Used
49	AN1	I	Not Used
50	AN2	I	Not Used
51	MAMUTE	O	MAMUTE signal output to System Controller (IC509) (not used)
52	DVDD18	—	Power Supply (+1.8V)
53 to 58	IOA 2 to 7	O	Address bus 2 to 7 output to PROM (IC101)
59	HIGHA0	O	Address bus 8 output to PROM (IC101)
60, 61	IOA18, 19	O	Address bus 18, 19 output to PROM (IC101)
62	DVSS	—	Terminal Ground
63	APLLCAP	I	APLL External Capacitance connection
64	APLLVSS	—	Terminal Ground
65	DVDD3	—	Power Supply (+3.3V)
66	I OWR	O	WE signal output to PROM (IC101)
67	A16	O	Address bus 16 output to PROM (IC101)
68 to 72	HIGHA 7 to 3	O	Address bus 15 to 11 output to PROM (IC101)
73	DVDD3	—	Power Supply (+3.3V)
74, 75	HIGHA 2, 1	O	Address bus 10, 9 output to PROM (IC101)
76	IOA20	O	Address bus 20 output to PROM (IC101)
77	IOCS	O	CE signal output to PROM (IC101)
78	IOA1	O	Address bus 1 output to PROM (IC101)
79	IOOE	O	OE signal output to PROM (IC101)
80	DVDD3	—	Power Supply (+3.3V)
81 to 84	AD 0 to 3	I	Data bus 0 to 3 input from PROM (IC101)
85	DVSS	—	Terminal Ground
86 to 88	AD 4 to 6	I	Data bus 4 to 6 input from PROM (IC101)
89	IOA21	O	Address bus 21 output to PROM (IC101)
90	ALE	O	Address latch enable (not used)
91	AD7	I	Data bus 7 input from PROM (IC101)
92	A17	O	Address bus 17 output to PROM (IC101)
93	IOA0	O	Address bus 0 output to PROM (IC101)
94	DVSS	—	Terminal Ground
95	UWA	I	System Controller write strobe (not used)
96	URD	I	System Controller read strobe (not used)
97	DVDD18	—	Power Supply (+1.8V)
98	IFSDO	I	DVD SOD signal input from System Controller (IC509)
99	IFCK	O	DVD SCO signal output to System Controller (IC509)
100	XIFCS	I	DVD XIFCS signal input from System Controller (IC509)
101	IFSDI	I	VIFBUSY signal input from System Controller (IC509)
102	SCL	O	SCL signal output to EEPROM (IC103)
103	SDA	O	SDA signal output to EEPROM (IC103)
104	TRG-SW	O	RS232 RXD signal output (not used)
105	IF-BSY	I	RS232 TXD signal input from System Controller (IC509)
106	RXD	I	RD232 RXD clock
107	TXD	I	RD232 TXD data
108	DVDD3	—	Power Supply (+3.3V)
109	ICE	I	ICE mode enable (not used)
110	PRST	I	MTRST signal input from System Controller (IC509)

Pin No.	Pin Name	I/O	Description
111	IR	I	IR control signal input (not used)
112	INT0	I	External interrupt0 (not used)
113	DQMO	O	DQM0 signal output to SD-RAM (IC104)
114	MREQ	I	DQM signal input
115	RD7	I	Data bus 7 from SD-RAM (IC104)
116	DVSS	—	Terminal Ground
117, 118	RD 6, 5	I	Data bus 6, 5 from SD-RAM (IC104)
119	DVSS	—	Terminal Ground
120, 121	RD 4, 3	I	Data bus 4, 3 from SD-RAM (IC104)
122	DVDD18	—	Power Supply (+1.8V)
123 to 125	RD 2 to 0	I	Data bus 2 to 0 from SD-RAM (IC104)
126	RD15	I	Data bus 15 from SD-RAM (IC104)
127	DVDD3	—	Power Supply (+3.3V)
128	RD 14	I	Data bus 14 from SD-RAM (IC104)
129 to 133	RD 13 to 9	I	Data bus 13 to 9 from SD-RAM (IC104)
134	DVSS	—	Terminal Ground
135	RD8	I	Data bus 8 from SD-RAM (IC104)
136	GPIO	—	Not Used
137	DQM1	O	DQM1 signal output to SD-RAM (IC104)
138	RWE	O	WE signal output to SD-RAM (IC104)
139	CAS	O	CAS signal output to SD-RAM (IC104)
140	RAS	O	RAS signal output to SD-RAM (IC104)
141	DVDD3	—	Power Supply (+3.3V)
142	RCS	O	RCS signal output to SD-RAM (IC206)
143	BAO	O	BAO signal output to SD-RAM (IC206)
144	DVSS	—	Terminal Ground
145	BA1	O	BA1 signal output to SD-RAM (IC104)
146	RA10	O	Address bus 10 output to SD-RAM (IC104)
147	RA0	O	Address bus 0 output to SD-RAM (IC104)
148	DVSS	—	Terminal Ground
149 to 151	RA 1 to 3	O	Address bus 1 to 3 output to SD-RAM (IC104)
152	DVDD18	—	Power Supply (+1.8V)
153	RVREF	I	Reference voltage (not used)
154	RCLKB	I	Dram clock (not used)
155	DVDD3	—	Power Supply (+3.3V)
156	RCLK	O	CLK signal output to SD-RAM (IC104)
157	CKE	O	CKE signal output to SD-RAM (IC104)
158 to 160	RA 11 to 8	O	Address bus 11 to 8 output to SD-RAM (IC104)
161	DVSS	—	Terminal Ground
162	RA7	O	Address bus 7 output to SD-RAM (IC104)
163	DVSS	—	Terminal Ground
164 to 166	RA 6 to 4	O	Address bus 6 to 4 output to SD-RAM (IC104)
167	DVDD3	—	Power Supply (+3.3V)
168	DISC/X	—	Not Used
169	RGB	O	RGB control signal output (not used)
170	XSMRST	—	Not Used
171	WODE	O	SI signal output to VIDEO AMP (IC201)

Pin No.	Pin Name	I/O	Description
172	NT	—	Not Used
173	DVDD18	—	Power Supply (+1.8V)
174	EUR	—	Not Used
175	DVSS	—	Terminal Ground
176	LIMSW	O	LIMSW signal output to Optical pick-up
177	OCSW	I	SEN signal input from System Controller (IC509)/OCSW signal input
178	VCLK	—	Not Used
179	CKSW	I	CKSW signal input
180	IO3	—	Not Used
181	TSDM	O	TSDM signal output to Motor driver (IC201)
182	DVDD3	—	Power Supply (+3.3V)
183	MUTE	O	MUTE signal output to Motor driver (IC201)
184	MUTE123	O	MUTE signal output to Motor driver (IC201)
185	REV	O	REV signal output to Motor driver (IC201)
186	FWD	O	FWD signal output to Motor driver (IC201)
187	MSW	O	Volume control signal output to Optical pick-up
188	DSEL	O	Select signal output (not used)
189	DAVCC	—	Power Supply (+3.3V)
190	VREF	I	Bandgap reference voltage (not used)
191	FS	O	Full scale adjustment (pull down)
192	YUV0	—	Not Used
193	DVSS	—	Terminal Ground
194	YUV1	O	Y signal output to VIDEO AMP (IC201)
195	DAVDD	—	Power Supply (+3.3V)
196	YUV2	O	CHROMA signal output to VIDEO AMP (IC201)
197	DAVSS	—	Terminal Ground
198	YUV3	O	VIDEO signal output to VIDEO AMP (IC201)
199	DAVDD	—	Power Supply (+3.3V)
200	YUV4	O	G signal output to VIDEO AMP (IC201)
201	DAVSS	—	Terminal Ground
202	YUV5	O	B signal output to VIDEO AMP (IC201)
203	YUV6	O	R signal output to VIDEO AMP (IC201)
204	DVDD3	—	Power Supply (+3.3V)
205	MIC/VSYNC	—	Not Used
206	VOICE/YUV7	—	Not Used
207	KRMOD/HSYNC	—	Not Used
208	SMSCK	—	Not Used
209	SPDATA/SMSDI	I	Audio data of SPDIF input (not used)
210	SMSDO	—	Not Used
211	XSMCS	—	Not Used
212	DVDD3	—	Power Supply (+3.3V)
213	ALRCK	I	Audio left/right channel clock
214	ABCK	O	Audio bit clock
215	ACLK	I	Audio DAC master clock
216	DVSS	—	Terminal Ground
217	ASDATA0	O	Audio serial data
218	ASDATA1	O	Audio serial data

Pin No.	Pin Name	I/O	Description
219	ASDATA2	O	Audio serial data
220	XRST	—	Not Used
221	DVDD18	—	Power Supply (+1.8V)
222	ASDATA4	O	Audio serial data (not used)
223	DVSS	—	Terminal Ground
224	DWIDE	—	Not Used
225	SDPIF	—	SPDIF output (not used)
226	RFGND18	—	Terminal Ground
227	RFVDD18	—	Power Supply (+1.8V)
228	XTALO	O	Oscillator output signal
229	XTALI	I	Oscillator input signal
230	JITFO	O	RF jitter meter output
231	JITFN	I	Negative input of operation amplifier for RF jitter meter
232	PLLVSS	—	Terminal Ground
233	IDAC	—	Not Used
234	PLLVDD3	—	Power Supply (+3.3V)
235	LPFON	O	Negative output of loop filter amplifier
236	LPFIP	I	Positive input of loop filter amplifier
237	LPFIN	I	Negative input of loop filter amplifier
238	LPFOP	O	Positive output of loop filter amplifier
239	VDD3	I	Power Supply (+3.3V)
240	VCM	I	SACD-Common mode Reference
241	VSS	—	Terminal Ground
242	VREFP	I	SACD-TOP Reference
243	VREFN	I	SACD-Bottom Reference
244	RFVDD3	—	Power Supply (+3.3V)
245	RFRPDC	I	RFRP signal input
246	RFRPAC	I	RFRP signal input
247	HRFZC	I	High frequency RF ripple zero crossing
248	CRTPLP	O	Defect level filter capacitor connecting
249	RFGND	—	Terminal Ground
250	CEQP	O	EQ offset loop capacitance (not used)
251	CEQN	O	EQ offset loop capacitance (not used)
252	OSP	O	RF offset cancellation capacitor connecting
253	OSN	I	RF offset cancellation capacitor connecting
254	RFGC	O	RF offset loop capacitor connecting for DVD-ROM
255	IREF	I	Current reference input
256	AVDD3	—	Power Supply (+3.3V)


SECTION 6 EXPLODED VIEWS

NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.


The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

6-1. OVERALL SECTION

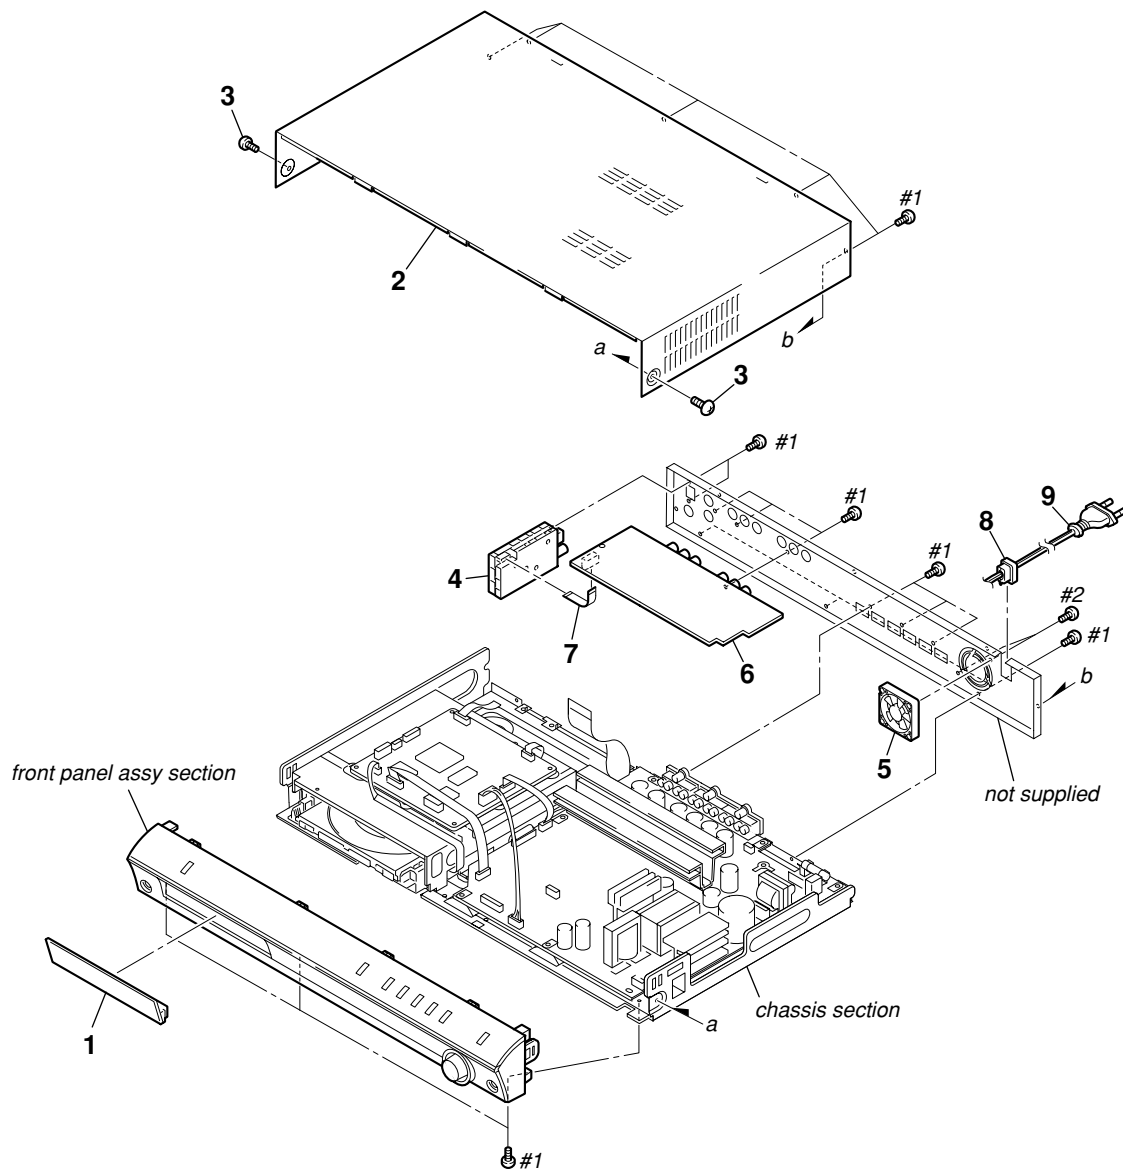


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	X-2025-254-1	DVD LID ASSY		7	1-828-952-11	WIRE (FLAT TYPE) (9 CORE)	
2	2-546-005-01	CASE		8	4-217-350-11	STOPPER, CORD	
3	3-363-099-51	SCREW (CASE 3 TP2)		\triangle 9	1-828-528-11	CORD, POWER	
4	A-1074-643-A	TUNER UNIT (DTP-005)		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
5	1-787-331-11	FAN, D.C.		#2	7-685-881-09	SCREW +BVTT 4X8 (S)	
6	A-1133-108-A	I/O BOARD, COMPLETE					

6-2. FRONT PANEL ASSY SECTION

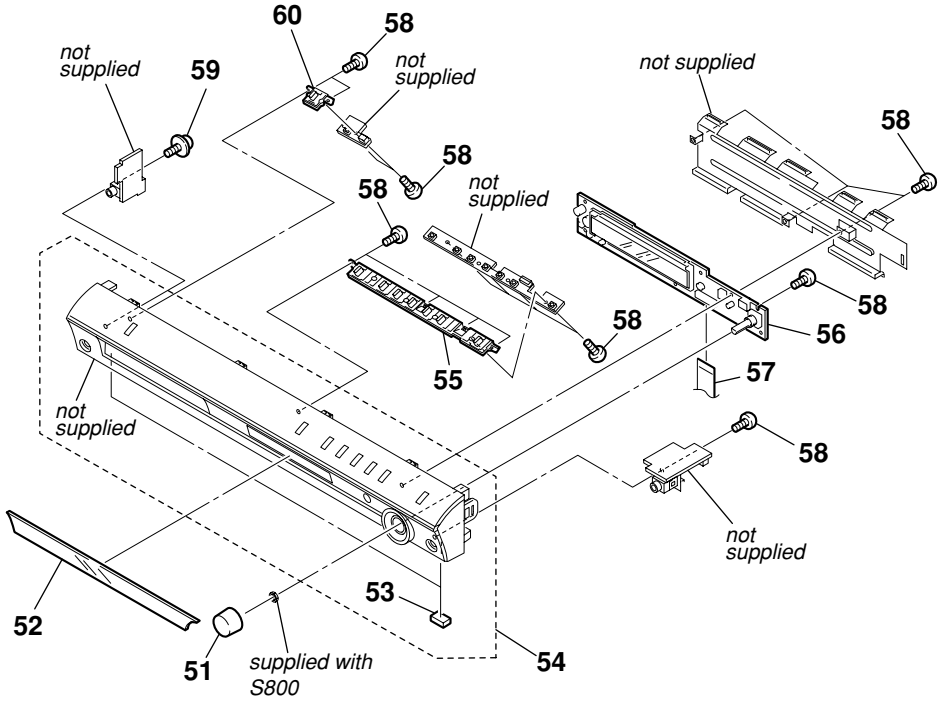


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	2-546-006-01	KNOB (VOL)		56	A-1088-414-A	FL BOARD, COMPLETE	
52	2-546-002-01	WINDOW (FL)		57	1-828-361-11	WIRE (FLAT TYPE) (19 CORE)	
53	4-232-478-41	FOOT		58	4-931-757-31	SCREW (DIA.2.6X8) (IT3B), TAPPING	
54	X-2067-432-1	FRONT PANEL ASSY (DZ100K)		59	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
54	X-2067-453-1	FRONT PANEL ASSY (DZ500KF)		60	2-546-003-01	BUTTON (POWER)	
55	2-637-546-01	BUTTON (PLAY)					

6-3. CHASSIS SECTION

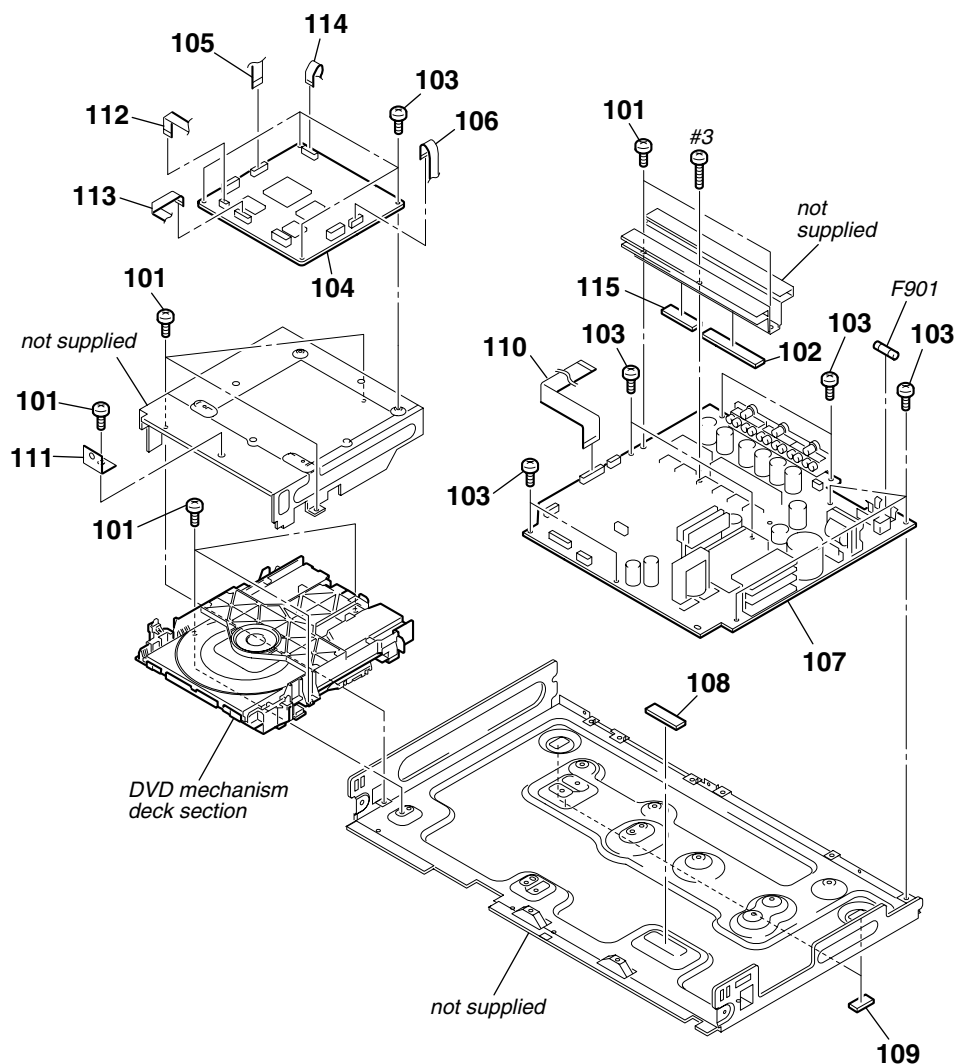

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	3-077-331-01	+BV3 (3-CR)		110	1-830-464-11	WIRE (FLAT TYPE) (23 CORE)	
102	4-254-947-11	SHEET (AMP), RADIATION		* 111	3-233-819-01	BRACKET (PWB)	
103	3-077-331-21	+BV3 (3-CR)		112	1-830-549-11	WIRE (FLAT TYPE) (5 CORE)	
104	A-1139-088-A	DMB10 BOARD, COMPLETE		113	1-830-545-11	WIRE (FLAT TYPE) (11 CORE) (200mm)	
105	1-830-550-11	WIRE (FLAT TYPE) (24 CORE)		114	1-830-548-11	WIRE (FLAT TYPE) (13 CORE)	
106	1-830-546-11	WIRE (FLAT TYPE) (11 CORE) (80mm)		115	4-254-947-01	SHEET (AMP), RADIATION (DZ500KF)	
107	A-1133-098-A	MAIN BOARD, COMPLETE (DZ100K)		△ F901	1-532-506-33	FUSE (T6.3AL/250V)	
107	A-1133-241-A	MAIN BOARD, COMPLETE (DZ500KF)		#3	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
108	4-254-954-01	SHEET (DMB), RADIATION					
109	4-232-478-41	FOOT					

6-4. DVD MECHANISM DECK SECTION

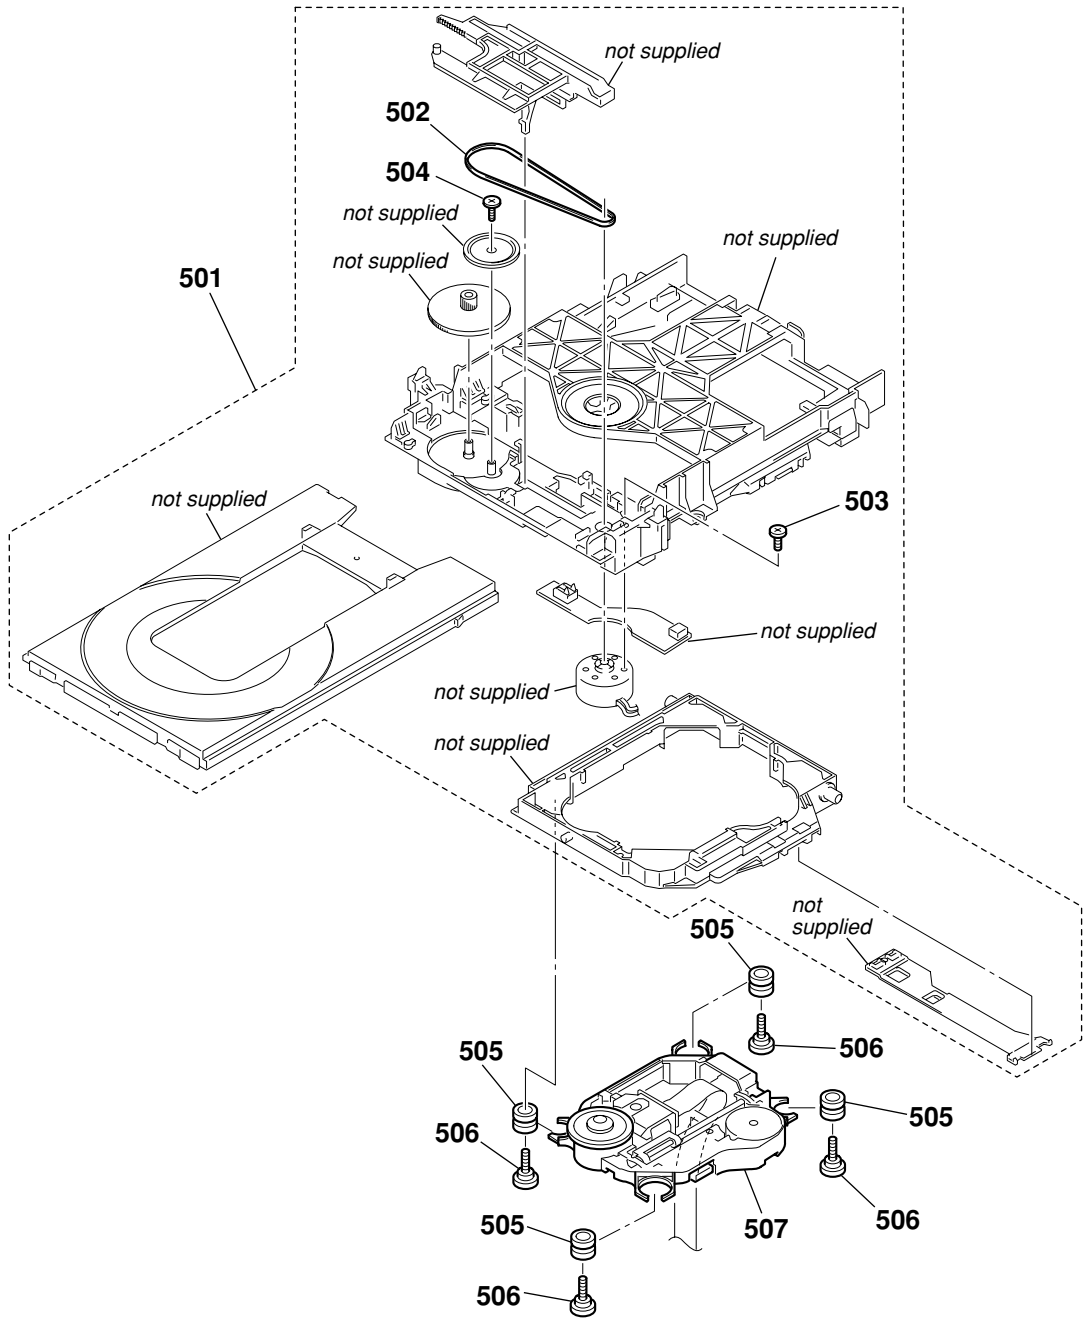

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
501	A-6071-669-A	LOADING ASSY (M)		505	2-634-618-01	INSULATOR	
502	3-088-371-01	BELT		506	3-087-599-01	INSULATOR SCREW	
503	4-974-725-11	SCREW (M1.7X2.5), P		△507	8-820-290-02	OPTICAL PICK-UP KHM-310CAA/C2RP	
504	4-674-137-11	SCREW (PTP2X5)					

SECTION 7
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS
uF: μF

- COILS
uH: μH
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- SEMICONDUCTORS
In each case, u: μ, for example:
uA. . . : μA. . . , uPA. . . : μPA. . .
uPB. . . : μPB. . . , uPC. . . : μPC. . .
uPD. . . : μPD. . .

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	A-1139-088-A	DMB10 BOARD, COMPLETE *****		C149	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
		< CAPACITOR >		C150	1-124-779-00	ELECT CHIP 10uF	20% 16V
C101	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C151	1-115-416-11	CERAMIC CHIP 0.001uF	5% 25V
C102	1-125-837-91	CERAMIC CHIP 1uF	10% 6.3V	C152	1-162-916-11	CERAMIC CHIP 12PF	5% 50V
C105	1-126-205-11	ELECT CHIP 47uF	20% 6.3V	C153	1-162-916-11	CERAMIC CHIP 12PF	5% 50V
C106	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C154	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C108	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V	C155	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C109	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V	C156	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C112	1-126-205-11	ELECT CHIP 47uF	20% 6.3V	C158	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C113	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C159	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C114	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C160	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C115	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C161	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C116	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C162	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C117	1-124-779-00	ELECT CHIP 10uF	20% 16V	C163	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C118	1-124-779-00	ELECT CHIP 10uF	20% 16V	C164	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C119	1-124-779-00	ELECT CHIP 10uF	20% 16V	C167	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C120	1-165-908-11	CERAMIC CHIP 1uF	10% 10V	C170	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C121	1-165-908-11	CERAMIC CHIP 1uF	10% 10V	C171	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C122	1-165-908-11	CERAMIC CHIP 1uF	10% 10V	C172	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C123	1-165-908-11	CERAMIC CHIP 1uF	10% 10V	C173	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C124	1-165-908-11	CERAMIC CHIP 1uF	10% 10V	C174	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C125	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C175	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C126	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C176	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C127	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C177	1-126-205-11	ELECT CHIP 47uF	20% 6.3V
C128	1-162-965-11	CERAMIC CHIP 0.0015uF	10% 50V	C178	1-126-208-21	ELECT CHIP 47uF	20% 4V
C129	1-124-779-00	ELECT CHIP 10uF	20% 16V	C179	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C130	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C180	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C131	1-125-838-11	CERAMIC CHIP 2.2uF	10% 6.3V	C181	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C132	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C182	1-127-715-91	CERAMIC CHIP 0.22uF	10% 16V
C133	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C184	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C135	1-164-677-11	CERAMIC CHIP 0.033uF	10% 16V	C187	1-126-208-21	ELECT CHIP 47uF	20% 4V
C136	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C188	1-127-715-91	CERAMIC CHIP 0.22uF	10% 16V
C137	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C189	1-128-934-91	CERAMIC CHIP 0.33uF	20% 10V
C138	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V	C190	1-126-205-11	ELECT CHIP 47uF	20% 6.3V
C139	1-162-919-11	CERAMIC CHIP 22PF	5% 50V	C191	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C140	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C192	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C141	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C193	1-127-715-91	CERAMIC CHIP 0.22uF	10% 16V
C142	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C195	1-127-715-91	CERAMIC CHIP 0.22uF	10% 16V
C143	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C196	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V
C144	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C203	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C145	1-165-908-11	CERAMIC CHIP 1uF	10% 10V	C205	1-164-230-11	CERAMIC CHIP 220PF	5% 50V
C146	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V	C206	1-164-230-11	CERAMIC CHIP 220PF	5% 50V
C147	1-165-176-11	CERAMIC CHIP 0.047uF	10% 16V	C208	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C148	1-165-176-11	CERAMIC CHIP 0.047uF	10% 16V	C209	1-164-677-11	CERAMIC CHIP 0.033uF	10% 16V
				C210	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
				C211	1-164-677-11	CERAMIC CHIP 0.033uF	10% 16V

IC103 is a written in and settled EEPROM. Supply with a single article has not been carried out. In case you exchange by DMB10 board (A-1139-088-A), please put on IC103 currently used with the model again.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C212	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	FL401	1-234-494-21	FILTER, EMI REMOVAL (SMD)	
C213	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	FL402	1-233-893-21	FILTER, CHIP EMI	
C214	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	FL403	1-234-494-21	FILTER, EMI REMOVAL (SMD)	
C215	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	FL4501	1-234-494-21	FILTER, EMI REMOVAL (SMD)	
C217	1-126-204-11	ELECT CHIP	47uF 20% 16V			< IC >	
C218	1-124-779-00	ELECT CHIP	10uF 20% 16V	IC101	6-805-878-01	IC MX29LV320ABTC65-OED3-0503CE	
C219	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	IC102	6-706-727-01	IC CXD9804R	
C220	1-124-779-00	ELECT CHIP	10uF 20% 16V	☆ IC103	(Not supplied)	IC BR24L64F-WE2	
C221	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	IC104	6-706-390-11	IC HY57V641620HGTP-HDR	
C222	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	IC105	6-702-302-01	IC TK11133CSCL-G	
C223	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	IC106	6-708-153-01	IC PQ018EN01ZPH	
C224	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	IC107	6-702-302-01	IC TK11133CSCL-G	
C225	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	IC201	6-704-524-01	IC FAN8036L	
C226	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	IC4501	8-759-573-97	IC SN74LVC541APWR	
C233	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	IC4502	8-759-649-50	IC SN74AHC1GU04DCKR	
C402	1-126-204-11	ELECT CHIP	47uF 20% 16V			< TRANSISTOR >	
C403	1-126-205-11	ELECT CHIP	47uF 20% 6.3V	Q101	6-550-008-01	TRANSISTOR UM6K1N-TN	
C4501	1-117-370-11	CERAMIC CHIP	10uF 10V	Q102	6-550-653-01	TRANSISTOR QST8TR	
C4502	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	Q103	8-729-027-52	TRANSISTOR DTC124EKA-T146	
C4504	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V			< RESISTOR >	
		< CONNECTOR >		R101	1-216-809-11	METAL CHIP 100 5% 1/10W	
CN101	1-815-763-32	CONNECTOR, FFC/FPC 24P		R104	1-216-864-11	SHORT CHIP 0	
* CN105	1-770-470-21	PIN, CONNECTOR (PC BOARD) 6P		R105	1-216-833-11	METAL CHIP 10K 5% 1/10W	
CN106	1-784-370-21	CONNECTOR, FFC/FPC 11P		R106	1-216-833-11	METAL CHIP 10K 5% 1/10W	
* CN201	1-770-470-21	PIN, CONNECTOR (PC BOARD) 6P		R107	1-216-833-11	METAL CHIP 10K 5% 1/10W	
CN202	1-784-365-21	CONNECTOR, FFC/FPC 5P		R108	1-216-857-11	METAL CHIP 1M 5% 1/10W	
CN301	1-793-989-21	FFC/CONNECTOR, FPC (LIF (NON-ZIF)) 13P		R109	1-216-864-11	SHORT CHIP 0	
CN401	1-779-993-11	PIN, CONNECTOR (PWB) 5P		R110	1-216-841-11	METAL CHIP 47K 5% 1/10W	
CN4501	1-784-370-21	CONNECTOR, FFC/FPC 11P		R111	1-216-809-11	METAL CHIP 100 5% 1/10W	
		< DIODE >		R112	1-211-977-11	METAL CHIP 22 0.5% 1/10W	
D1001	8-719-058-24	DIODE RB501V-40TE-17		R113	1-211-977-11	METAL CHIP 22 0.5% 1/10W	
D3501	6-501-193-01	DIODE 1SS355WTE-17		R114	1-216-845-11	METAL CHIP 100K 5% 1/10W	
D3502	6-501-193-01	DIODE 1SS355WTE-17		R115	1-211-977-11	METAL CHIP 22 0.5% 1/10W	
		< FERRITE BEAD >		R116	1-216-821-11	METAL CHIP 1K 5% 1/10W	
FB111	1-414-226-21	INDUCTOR, FERRITE BEAD		R117	1-216-841-11	METAL CHIP 47K 5% 1/10W	
FB112	1-414-226-21	INDUCTOR, FERRITE BEAD		R118	1-216-801-11	METAL CHIP 22 5% 1/10W	
FB113	1-414-226-21	INDUCTOR, FERRITE BEAD		R120	1-216-801-11	METAL CHIP 22 5% 1/10W	
FB114	1-414-226-21	INDUCTOR, FERRITE BEAD		R121	1-216-801-11	METAL CHIP 22 5% 1/10W	
FB115	1-414-226-21	INDUCTOR, FERRITE BEAD		R123	1-216-864-11	SHORT CHIP 0	
FB401	1-469-324-21	FERRITE, EMI (SMD) (2012)		R124	1-216-841-11	METAL CHIP 47K 5% 1/10W	
FB402	1-469-324-21	FERRITE, EMI (SMD) (2012)		R126	1-216-864-11	SHORT CHIP 0	
FB403	1-469-324-21	FERRITE, EMI (SMD) (2012)		R127	1-216-809-11	METAL CHIP 100 5% 1/10W	
FB404	1-469-324-21	FERRITE, EMI (SMD) (2012)		R133	1-216-827-11	METAL CHIP 3.3K 5% 1/10W	
FB405	1-469-324-21	FERRITE, EMI (SMD) (2012)		R134	1-216-827-11	METAL CHIP 3.3K 5% 1/10W	
FB405	1-469-324-21	FERRITE, EMI (SMD) (2012)		R135	1-216-827-11	METAL CHIP 3.3K 5% 1/10W	
FB406	1-469-324-21	FERRITE, EMI (SMD) (2012)		R136	1-216-835-11	METAL CHIP 15K 5% 1/10W	
		< FILTER >		R138	1-216-845-11	METAL CHIP 100K 5% 1/10W	
FL101	1-234-494-21	FILTER, EMI REMOVAL (SMD)		R141	1-218-916-11	METAL CHIP 750K 0.5% 1/10W	
FL104	1-234-494-21	FILTER, EMI REMOVAL (SMD)		R142	1-216-845-11	METAL CHIP 100K 5% 1/10W	
FL105	1-234-494-21	FILTER, EMI REMOVAL (SMD)		R143	1-216-809-11	METAL CHIP 100 5% 1/10W	
FL106	1-234-494-21	FILTER, EMI REMOVAL (SMD)		R144	1-216-864-11	SHORT CHIP 0	
FL107	1-234-494-21	FILTER, EMI REMOVAL (SMD)		R146	1-216-805-11	METAL CHIP 47 5% 1/10W	
FL108	1-234-494-21	FILTER, EMI REMOVAL (SMD)		R151	1-216-805-11	METAL CHIP 47 5% 1/10W	
				R152	1-216-864-11	SHORT CHIP 0	
				R153	1-216-805-11	METAL CHIP 47 5% 1/10W	

IC103 is a written in and settled EEPROM. Supply with a single article has not been carried out. In case you exchange by DMB10 board (A-1139-088-A), please put on IC103 currently used with the model again.

HCD-DZ100K/DZ500KF

DMB10

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R155	1-216-805-11	METAL CHIP	47 5%	1/10W	R1121	1-500-284-21	INDUCTOR, FERRITE BEAD
R160	1-216-805-11	METAL CHIP	47 5%	1/10W	R1122	1-500-284-21	INDUCTOR, FERRITE BEAD
R161	1-216-809-11	METAL CHIP	100 5%	1/10W	R1123	1-500-284-21	INDUCTOR, FERRITE BEAD
R164	1-216-809-11	METAL CHIP	100 5%	1/10W	R1124	1-500-284-21	INDUCTOR, FERRITE BEAD
R169	1-216-833-11	METAL CHIP	10K 5%	1/10W	R1125	1-500-284-21	INDUCTOR, FERRITE BEAD
R187	1-216-864-11	SHORT CHIP	0		R1129	1-216-845-11	METAL CHIP 100K 5%
R189	1-218-827-11	METAL CHIP	150 0.5%	1/10W	R1133	1-216-864-11	SHORT CHIP 0
R190	1-218-827-11	METAL CHIP	150 0.5%	1/10W	R1134	1-216-864-11	SHORT CHIP 0
R191	1-216-821-11	METAL CHIP	1K 5%	1/10W	R1150	1-216-827-11	METAL CHIP 3.3K 5%
R192	1-218-827-11	METAL CHIP	150 0.5%	1/10W	R1151	1-216-827-11	METAL CHIP 3.3K 5%
R193	1-216-821-11	METAL CHIP	1K 5%	1/10W	R1152	1-216-827-11	METAL CHIP 3.3K 5%
R195	1-218-827-11	METAL CHIP	150 0.5%	1/10W	R1168	1-216-817-11	METAL CHIP 470 5%
R196	1-216-864-11	SHORT CHIP	0		R1502	1-216-864-11	SHORT CHIP 0
R197	1-218-827-11	METAL CHIP	150 0.5%	1/10W	R1504	1-400-244-11	BEAD, FERRITE (CHIP) (1608)
R204	1-216-822-11	METAL CHIP	1.2K 5%	1/10W	R1530	1-216-864-11	SHORT CHIP 0
R205	1-216-833-11	METAL CHIP	10K 5%	1/10W	R1531	1-216-864-11	SHORT CHIP 0
R206	1-216-833-11	METAL CHIP	10K 5%	1/10W	R1540	1-216-829-11	METAL CHIP 4.7K 5%
R207	1-216-826-11	METAL CHIP	2.7K 5%	1/10W	R1542	1-216-864-11	SHORT CHIP 0
R208	1-216-839-11	METAL CHIP	33K 5%	1/10W	R1543	1-216-833-11	METAL CHIP 10K 5%
R209	1-216-839-11	METAL CHIP	33K 5%	1/10W	R1545	1-216-864-11	SHORT CHIP 0
R210	1-216-841-11	METAL CHIP	47K 5%	1/10W	R1546	1-216-827-11	METAL CHIP 3.3K 5%
R212	1-216-833-11	METAL CHIP	10K 5%	1/10W	R1547	1-216-829-11	METAL CHIP 4.7K 5%
R213	1-218-867-11	METAL CHIP	6.8K 0.5%	1/10W	R1548	1-216-829-11	METAL CHIP 4.7K 5%
R214	1-216-835-11	METAL CHIP	15K 5%	1/10W	R1549	1-216-829-11	METAL CHIP 4.7K 5%
R215	1-216-834-11	METAL CHIP	12K 5%	1/10W	R1550	1-216-829-11	METAL CHIP 4.7K 5%
R216	1-216-834-11	METAL CHIP	12K 5%	1/10W	R1551	1-216-829-11	METAL CHIP 4.7K 5%
R219	1-216-838-11	METAL CHIP	27K 5%	1/10W	R1553	1-216-864-11	SHORT CHIP 0
R220	1-216-833-11	METAL CHIP	10K 5%	1/10W	R1554	1-216-829-11	METAL CHIP 4.7K 5%
R221	1-218-889-11	METAL CHIP	56K 0.5%	1/10W	R1557	1-216-809-11	METAL CHIP 100 5%
R222	1-216-839-11	METAL CHIP	33K 5%	1/10W	R2505	1-216-864-11	SHORT CHIP 0
R223	1-218-895-11	METAL CHIP	100K 0.5%	1/10W	R4501	1-216-864-11	SHORT CHIP 0
R224	1-216-833-11	METAL CHIP	10K 5%	1/10W	R4502	1-216-864-11	SHORT CHIP 0
R225	1-218-895-11	METAL CHIP	100K 0.5%	1/10W	R4510	1-216-805-11	METAL CHIP 47 5%
R226	1-218-889-11	METAL CHIP	56K 0.5%	1/10W	R4511	1-216-809-11	METAL CHIP 100 5%
R227	1-216-864-11	SHORT CHIP	0		R4512	1-400-244-11	BEAD, FERRITE (CHIP) (1608)
R228	1-216-864-11	SHORT CHIP	0		R4513	1-216-864-11	SHORT CHIP 0
R230	1-218-893-11	METAL CHIP	82K 0.5%	1/10W	R4514	1-216-809-11	METAL CHIP 100 5%
R231	1-218-875-11	METAL CHIP	15K 0.5%	1/10W	R4515	1-216-809-11	METAL CHIP 100 5%
R232	1-218-877-11	METAL CHIP	18K 0.5%	1/10W	R4516	1-216-809-11	METAL CHIP 100 5%
R233	1-218-883-11	METAL CHIP	33K 0.5%	1/10W	R4518	1-216-864-11	SHORT CHIP 0
R234	1-216-833-11	METAL CHIP	10K 5%	1/10W	R4520	1-216-864-11	SHORT CHIP 0
R236	1-216-821-11	METAL CHIP	1K 5%	1/10W	R4701	1-216-864-11	SHORT CHIP 0
R237	1-216-821-11	METAL CHIP	1K 5%	1/10W	R4702	1-216-864-11	SHORT CHIP 0
R238	1-216-829-11	METAL CHIP	4.7K 5%	1/10W	R4703	1-216-864-11	SHORT CHIP 0
R239	1-216-829-11	METAL CHIP	4.7K 5%	1/10W	R4704	1-216-864-11	SHORT CHIP 0
R243	1-216-809-11	METAL CHIP	100 5%	1/10W	R4705	1-216-864-11	SHORT CHIP 0
R246	1-216-829-11	METAL CHIP	4.7K 5%	1/10W	R4706	1-216-864-11	SHORT CHIP 0
R247	1-216-821-11	METAL CHIP	1K 5%	1/10W			
R1101	1-216-825-11	METAL CHIP	2.2K 5%	1/10W			< COMPOSITION CIRCUIT BLOCK >
R1102	1-218-827-11	METAL CHIP	150 0.5%	1/10W	RB103	1-234-795-21	RES, NETWORK 0X4 (2010)
R1103	1-216-833-11	METAL CHIP	10K 5%	1/10W	RB104	1-234-795-21	RES, NETWORK 0X4 (2010)
R1104	1-216-833-11	METAL CHIP	10K 5%	1/10W	RB105	1-234-371-21	RES, NETWORK 47 (1005X4)
R1105	1-216-833-11	METAL CHIP	10K 5%	1/10W	RB106	1-234-371-21	RES, NETWORK 47 (1005X4)
R1107	1-216-864-11	SHORT CHIP	0		RB107	1-234-370-21	RES, NETWORK 22 (1005X4)
R1108	1-216-833-11	METAL CHIP	10K 5%	1/10W	RB108	1-234-370-21	RES, NETWORK 22 (1005X4)
R1109	1-216-864-11	SHORT CHIP	0		RB111	1-234-795-21	RES, NETWORK 0X4 (2010)
R1110	1-216-826-11	METAL CHIP	2.7K 5%	1/10W	RB112	1-234-370-21	RES, NETWORK 22 (1005X4)
R1120	1-500-284-21	INDUCTOR, FERRITE BEAD			RB113	1-234-370-21	RES, NETWORK 22 (1005X4)

HCD-DZ100K/DZ500KF

I/O

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C217	1-126-933-11	ELECT	100uF 20% 16V			< IC >	
C218	1-115-156-11	CERAMIC CHIP	1uF 10V	IC201	6-705-602-01	IC MM1623BFBE	
C219	1-164-156-11	CERAMIC CHIP	0.1uF 25V	IC203	8-759-696-10	IC NJM2235V (TE2)	
C220	1-126-964-11	ELECT	10uF 20% 50V	IC204	8-759-284-49	IC NJM2285V-TE2	
C221	1-164-156-11	CERAMIC CHIP	0.1uF 25V	IC601	8-759-385-76	IC MC14052 BDR2	
C222	1-164-156-11	CERAMIC CHIP	0.1uF 25V	IC602	8-759-649-89	IC MC4558CD	
C223	1-164-156-11	CERAMIC CHIP	0.1uF 25V	IC606	8-759-649-89	IC MC4558CD	
C224	1-126-916-11	ELECT	1000uF 20% 6.3V	IC607	6-706-078-01	IC M62429FP-TP	
C225	1-126-916-11	ELECT	1000uF 20% 6.3V			< JACK >	
C226	1-126-916-11	ELECT	1000uF 20% 6.3V	J201	1-780-211-11	TERMINAL BOARD (S TERMINAL+1P)	
C227	1-126-933-11	ELECT	100uF 20% 16V			(MONITOR OUT)	
C228	1-126-933-11	ELECT	100uF 20% 16V	J202	1-817-449-11	JACK, PIN 3P (COMPONENT VIDEO OUT)	
C231	1-164-156-11	CERAMIC CHIP	0.1uF 25V	J601	1-764-592-11	JACK 3P (VIDEO)	
C232	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V			< COIL >	
C233	1-164-156-11	CERAMIC CHIP	0.1uF 25V	L101	1-469-525-91	INDUCTOR 10uH	
C242	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	L201	1-469-525-91	INDUCTOR 10uH	
C603	1-104-662-91	ELECT	22uF 20% 25V	L202	1-469-525-91	INDUCTOR 10uH	
C604	1-104-662-91	ELECT	22uF 20% 25V	L602	1-469-525-91	INDUCTOR 10uH	
C605	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	L603	1-469-525-91	INDUCTOR 10uH	
C606	1-164-156-11	CERAMIC CHIP	0.1uF 25V			< TRANSISTOR >	
C607	1-104-662-91	ELECT	22uF 20% 25V	Q601	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
C608	1-126-933-11	ELECT	100uF 20% 16V	Q602	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
C609	1-164-156-11	CERAMIC CHIP	0.1uF 25V	Q603	8-729-901-00	TRANSISTOR DTC124EK	
C610	1-104-662-91	ELECT	22uF 20% 25V	Q604	8-729-901-00	TRANSISTOR DTC124EK	
C611	1-104-662-91	ELECT	22uF 20% 25V	Q605	8-729-027-23	TRANSISTOR DTA114EKA-T146	
C612	1-104-662-91	ELECT	22uF 20% 25V	Q606	8-729-901-00	TRANSISTOR DTC124EK	
C613	1-104-662-91	ELECT	22uF 20% 25V	Q607	8-729-901-00	TRANSISTOR DTC124EK	
C615	1-126-960-11	ELECT	1uF 20% 50V	Q608	8-729-901-00	TRANSISTOR DTC124EK	
C616	1-126-960-11	ELECT	1uF 20% 50V	Q609	8-729-901-00	TRANSISTOR DTC124EK	
C619	1-104-662-91	ELECT	22uF 20% 25V			< RESISTOR >	
C620	1-104-662-91	ELECT	22uF 20% 25V	R102	1-216-864-11	SHORT CHIP 0	
C622	1-104-662-91	ELECT	22uF 20% 25V	R105	1-216-845-11	METAL CHIP 100K 5% 1/10W	
C625	1-162-960-11	CERAMIC CHIP	220PF 10% 50V	R109	1-216-864-11	SHORT CHIP 0	
C626	1-162-960-11	CERAMIC CHIP	220PF 10% 50V	R114	1-216-864-11	SHORT CHIP 0	
C630	1-104-662-91	ELECT	22uF 20% 25V	R115	1-216-845-11	METAL CHIP 100K 5% 1/10W	
C645	1-130-491-00	MYLAR	0.047uF 5% 50V	R116	1-216-845-11	METAL CHIP 100K 5% 1/10W	
C649	1-126-933-11	ELECT	100uF 20% 16V	R117	1-216-845-11	METAL CHIP 100K 5% 1/10W	
C650	1-164-156-11	CERAMIC CHIP	0.1uF 25V	R202	1-218-285-11	METAL CHIP 75 5% 1/10W	
C654	1-162-960-11	CERAMIC CHIP	220PF 10% 50V	R203	1-216-864-11	SHORT CHIP 0	
C655	1-162-923-11	CERAMIC CHIP	47PF 5% 50V	R204	1-216-821-11	METAL CHIP 1K 5% 1/10W	
C656	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	R205	1-216-864-11	SHORT CHIP 0	
C657	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	R206	1-216-864-11	SHORT CHIP 0	
C662	1-126-933-11	ELECT	100uF 20% 16V	R207	1-216-864-11	SHORT CHIP 0	
C663	1-164-156-11	CERAMIC CHIP	0.1uF 25V	R209	1-216-864-11	SHORT CHIP 0	
C664	1-124-464-11	ELECT	0.22uF 20% 50V	R226	1-216-864-11	SHORT CHIP 0	
C665	1-104-662-91	ELECT	22uF 20% 25V	R228	1-216-833-11	METAL CHIP 10K 5% 1/10W	
C666	1-164-156-11	CERAMIC CHIP	0.1uF 25V	R229	1-218-285-11	METAL CHIP 75 5% 1/10W	
C669	1-126-933-11	ELECT	100uF 20% 16V	R230	1-218-285-11	METAL CHIP 75 5% 1/10W	
C670	1-164-156-11	CERAMIC CHIP	0.1uF 25V	R231	1-218-285-11	METAL CHIP 75 5% 1/10W	
		< CONNECTOR >		R232	1-218-285-11	METAL CHIP 75 5% 1/10W	
CN101	1-568-828-11	CONNECTOR, FFC 9P		R233	1-218-285-11	METAL CHIP 75 5% 1/10W	
CN201	1-779-281-11	CONNECTOR, FFC (LIF (NON-ZIF)) 13P		R241	1-218-285-11	METAL CHIP 75 5% 1/10W	
CN601	1-779-291-11	CONNECTOR, FFC (LIF (NON-ZIF)) 23P		R602	1-216-833-11	METAL CHIP 10K 5% 1/10W	
* CN602	1-568-942-11	PIN, CONNECTOR 4P		R606	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
CN603	1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P					

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R607	1-216-841-11	METAL CHIP	47K 5% 1/10W	C639	1-126-964-11	ELECT 10uF 20% 50V	
R608	1-216-841-11	METAL CHIP	47K 5% 1/10W	C640	1-126-964-11	ELECT 10uF 20% 50V	
R609	1-216-817-11	METAL CHIP	470 5% 1/10W	C641	1-126-933-11	ELECT 100uF 20% 16V	
R610	1-216-817-11	METAL CHIP	470 5% 1/10W	C642	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
R613	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	C643	1-126-933-11	ELECT 100uF 20% 16V	
R614	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	C646	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
R615	1-216-841-11	METAL CHIP	47K 5% 1/10W			< IC >	
R616	1-216-841-11	METAL CHIP	47K 5% 1/10W	IC605	8-759-649-89	IC MC4558CD	
R617	1-216-821-11	METAL CHIP	1K 5% 1/10W			< JACK >	
R618	1-216-833-11	METAL CHIP	10K 5% 1/10W	J603	1-566-822-51	JACK (AUDIO IN)	
R619	1-216-821-11	METAL CHIP	1K 5% 1/10W			< RESISTOR >	
R620	1-216-833-11	METAL CHIP	10K 5% 1/10W	R605	1-216-817-11	METAL CHIP 470 5% 1/10W	
R622	1-216-821-11	METAL CHIP	1K 5% 1/10W	R621	1-216-864-11	SHORT CHIP 0	
R623	1-216-841-11	METAL CHIP	47K 5% 1/10W	R642	1-216-864-11	SHORT CHIP 0	
R624	1-216-841-11	METAL CHIP	47K 5% 1/10W	R643	1-216-864-11	SHORT CHIP 0	
R626	1-216-841-11	METAL CHIP	47K 5% 1/10W	R665	1-216-817-11	METAL CHIP 470 5% 1/10W	
R627	1-216-841-11	METAL CHIP	47K 5% 1/10W	R666	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
R628	1-216-841-11	METAL CHIP	47K 5% 1/10W	R667	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
R630	1-216-841-11	METAL CHIP	47K 5% 1/10W	R668	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
R631	1-216-841-11	METAL CHIP	47K 5% 1/10W	R669	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
R632	1-216-841-11	METAL CHIP	47K 5% 1/10W	R670	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R633	1-216-833-11	METAL CHIP	10K 5% 1/10W	R671	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R634	1-216-845-11	METAL CHIP	100K 5% 1/10W	R672	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R635	1-216-841-11	METAL CHIP	47K 5% 1/10W	R673	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R636	1-216-864-11	SHORT CHIP	0	R677	1-216-845-11	METAL CHIP 100K 5% 1/10W	
R637	1-216-864-11	SHORT CHIP	0	R678	1-216-845-11	METAL CHIP 100K 5% 1/10W	
R638	1-216-821-11	METAL CHIP	1K 5% 1/10W	R683	1-216-864-11	SHORT CHIP 0	
R639	1-216-827-11	METAL CHIP	3.3K 5% 1/10W	R684	1-216-864-11	SHORT CHIP 0	
R641	1-216-864-11	SHORT CHIP	0	*****			
R644	1-216-827-11	METAL CHIP	3.3K 5% 1/10W			KEY BOARD	
R645	1-216-829-11	METAL CHIP	4.7K 5% 1/10W			*****	
R646	1-216-833-11	METAL CHIP	10K 5% 1/10W			< RESISTOR >	
R650	1-218-867-11	METAL CHIP	6.8K 0.5% 1/10W	R851	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R651	1-218-867-11	METAL CHIP	6.8K 0.5% 1/10W	R852	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
R652	1-216-809-11	METAL CHIP	100 5% 1/10W	R853	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R653	1-216-845-11	METAL CHIP	100K 5% 1/10W	R854	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R654	1-216-841-11	METAL CHIP	47K 5% 1/10W	R855	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R657	1-216-809-11	METAL CHIP	100 5% 1/10W	R856	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R658	1-216-833-11	METAL CHIP	10K 5% 1/10W	R857	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R660	1-216-809-11	METAL CHIP	100 5% 1/10W			< SWITCH >	
R661	1-216-833-11	METAL CHIP	10K 5% 1/10W	S802	1-762-875-21	SWITCH, KEYBOARD (▶)	
R663	1-216-845-11	METAL CHIP	100K 5% 1/10W	S803	1-762-875-21	SWITCH, KEYBOARD (◀◀)	
R664	1-216-845-11	METAL CHIP	100K 5% 1/10W	S804	1-762-875-21	SWITCH, KEYBOARD (▣)	
R674	1-216-833-11	METAL CHIP	10K 5% 1/10W	S805	1-762-875-21	SWITCH, KEYBOARD (■)	
R675	1-216-833-11	METAL CHIP	10K 5% 1/10W	S806	1-762-875-21	SWITCH, KEYBOARD (▶▶)	
R679	1-216-833-11	METAL CHIP	10K 5% 1/10W	S807	1-762-875-21	SWITCH, KEYBOARD (FUNCTION)	
R688	1-216-833-11	METAL CHIP	10K 5% 1/10W	S808	1-762-875-21	SWITCH, KEYBOARD (≡)	
R690	1-216-837-11	METAL CHIP	22K 5% 1/10W	*****			
R693	1-216-864-11	SHORT CHIP	0				

		IPOD BOARD					

		< CAPACITOR >					
C636	1-216-864-11	SHORT CHIP	0				
C637	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				
C638	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				

HCD-DZ100K/DZ500KF

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
A-1133-098-A		MAIN BOARD, COMPLETE (DZ100K)		C166	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
A-1133-241-A		MAIN BOARD, COMPLETE (DZ500KF)		C167	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
		*****					(DZ500KF)
1-533-313-11		FUSE HOLDER		C171	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
7-685-647-79		SCREW +BVTP 3X10 TYPE2 IT-3		C172	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
				C173	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
		< CAPACITOR >		C174	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
C101	1-164-346-11	CERAMIC CHIP 1uF	16V	C175	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
C102	1-164-346-11	CERAMIC CHIP 1uF	16V	C176	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
C103	1-164-346-11	CERAMIC CHIP 1uF	16V	C177	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
C104	1-164-346-11	CERAMIC CHIP 1uF	16V				(DZ500KF)
C105	1-164-346-11	CERAMIC CHIP 1uF	16V	C181	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V
C106	1-164-346-11	CERAMIC CHIP 1uF	16V	C182	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V
C107	1-164-346-11	CERAMIC CHIP 1uF	16V	C183	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V
			(DZ500KF)	C184	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V
C108	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C185	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V
C109	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C186	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V
C110	1-163-205-00	CERAMIC CHIP 0.001uF 10%	50V	C187	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V
							(DZ500KF)
C111	1-164-346-11	CERAMIC CHIP 1uF	16V	C188	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C112	1-164-346-11	CERAMIC CHIP 1uF	16V	C189	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C113	1-164-346-11	CERAMIC CHIP 1uF	16V	C190	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C114	1-164-346-11	CERAMIC CHIP 1uF	16V	C191	1-107-898-11	ELECT 2200uF 20%	35V
C115	1-164-346-11	CERAMIC CHIP 1uF	16V	C192	1-107-898-11	ELECT 2200uF 20%	35V
C116	1-164-346-11	CERAMIC CHIP 1uF	16V	C193	1-107-898-11	ELECT 2200uF 20%	35V
C117	1-164-346-11	CERAMIC CHIP 1uF	16V	C194	1-107-898-11	ELECT 2200uF 20%	35V
			(DZ500KF)	C195	1-107-898-11	ELECT 2200uF 20%	35V
C119	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	C196	1-107-898-11	ELECT 2200uF 20%	35V
C120	1-126-947-11	ELECT 47uF 20%	35V	C197	1-107-898-11	ELECT 2200uF 20%	35V
C131	1-164-156-11	CERAMIC CHIP 0.1uF	25V				(DZ500KF)
C132	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C198	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C133	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C199	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C134	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C200	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C135	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C201	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
C136	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C202	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
C137	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C203	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
			(DZ500KF)	C204	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
C141	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C205	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
C142	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C206	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
C143	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C207	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
C144	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C208	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
C145	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C209	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
C146	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C210	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V
C147	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C211	1-136-177-00	FILM 1uF 5%	50V
			(DZ500KF)	C212	1-136-177-00	FILM 1uF 5%	50V
C151	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V	C213	1-136-177-00	FILM 1uF 5%	50V
C152	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V	C214	1-136-177-00	FILM 1uF 5%	50V
C153	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V	C215	1-136-177-00	FILM 1uF 5%	50V
C154	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V	C216	1-136-177-00	FILM 1uF 5%	50V
C155	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V	C217	1-136-177-00	FILM 1uF 5%	50V
C156	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V				(DZ500KF)
C157	1-115-185-11	CERAMIC CHIP 0.033uF 10%	50V	C218	1-164-156-11	CERAMIC CHIP 0.1uF	25V
			(DZ500KF)				(DZ500KF)
C161	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V	C221	1-136-177-00	FILM 1uF 5%	50V
C162	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V	C222	1-136-177-00	FILM 1uF 5%	50V
C163	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V	C223	1-136-177-00	FILM 1uF 5%	50V
C164	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V	C224	1-136-177-00	FILM 1uF 5%	50V
C165	1-125-898-91	CERAMIC CHIP 0.22uF 10%	50V	C225	1-136-177-00	FILM 1uF 5%	50V
				C226	1-136-177-00	FILM 1uF 5%	50V

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark
C227	1-136-177-00	FILM	1uF	5%	50V		C301	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
					(DZ500KF)		C302	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C248	1-126-947-11	ELECT	47uF	20%	35V		C303	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
							C304	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C251	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C305	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C252	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C306	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C253	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C307	1-126-933-11	ELECT	100uF	20%	16V	
C254	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C308	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C255	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C309	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C256	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C310	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C257	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	(DZ500KF)	C311	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C261	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C312	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C262	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C313	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C263	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C314	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C264	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C315	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C265	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C316	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C266	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C317	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C267	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	(DZ500KF)	C318	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C268	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V		C319	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C269	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V		C320	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C271	1-125-898-91	CERAMIC CHIP	0.22uF	10%	50V		C321	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C272	1-125-898-91	CERAMIC CHIP	0.22uF	10%	50V		C322	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C273	1-125-898-91	CERAMIC CHIP	0.22uF	10%	50V	(DZ500KF)	C323	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C274	1-125-898-91	CERAMIC CHIP	0.22uF	10%	50V	(DZ500KF)	C324	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C275	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V		C325	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C276	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V		C326	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C277	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V		C327	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C278	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V		C328	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C279	1-163-009-91	CERAMIC CHIP	0.001uF	10%	50V	(DZ500KF)	C329	1-126-947-11	ELECT	47uF	20%	35V	
C279	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	(DZ100K)	C332	1-126-947-11	ELECT	47uF	20%	35V	
C280	1-163-009-91	CERAMIC CHIP	0.001uF	10%	50V	(DZ500KF)	C335	1-126-947-11	ELECT	47uF	20%	35V	
C280	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	(DZ100K)	C350	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	
C281	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C366	1-126-934-11	ELECT	220uF	20%	16V	
C282	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C367	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C283	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C368	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	
C284	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C371	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C285	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C372	1-126-960-11	ELECT	1uF	20%	50V	
C286	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C374	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C287	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C375	1-126-933-11	ELECT	100uF	20%	16V	
C288	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C377	1-126-964-11	ELECT	10uF	20%	50V	
C289	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C380	1-126-923-91	ELECT	220uF	20%	10V	
C290	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C381	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C291	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C382	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C292	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C383	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V	
C293	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	(DZ500KF)	C384	1-162-910-11	CERAMIC CHIP	5PF	0.25PF	50V	
C294	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	(DZ500KF)	C385	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C296	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V		C391	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C297	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V		C392	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C298	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V		C393	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C299	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V		C394	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
							C395	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
							C396	1-117-370-11	CERAMIC CHIP	10uF		10V	
							C402	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	
							C403	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	
							C404	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	
							C405	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
							C406	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	
							C504	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	

HCD-DZ100K/DZ500KF

MAIN

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
C505	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C583	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C506	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C587	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C511	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C589	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C512	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C595	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C513	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C596	1-126-947-11	ELECT	47uF	20%	35V
C514	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C597	1-165-112-11	CERAMIC CHIP	0.33uF		16V
C517	1-126-964-11	ELECT	10uF	20%	50V	C598	1-165-112-11	CERAMIC CHIP	0.33uF		16V
C518	1-126-964-11	ELECT	10uF	20%	50V	C601	1-126-947-11	ELECT	47uF	20%	35V
C524	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C602	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C525	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C603	1-104-658-91	ELECT	100uF	20%	10V
C526	1-126-947-11	ELECT	47uF	20%	35V	C608	1-162-953-11	CERAMIC CHIP	100PF	5%	50V
C527	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	C712	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C528	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C716	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C529	1-126-964-11	ELECT	10uF	20%	50V	C762	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C530	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C798	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C531	1-162-919-11	CERAMIC CHIP	22PF	5%	50V	C799	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C532	1-162-916-11	CERAMIC CHIP	12PF	5%	50V	C856	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C533	1-162-916-11	CERAMIC CHIP	12PF	5%	50V	C875	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C534	1-162-916-11	CERAMIC CHIP	12PF	5%	50V	△C901	1-165-529-11	MYLAR	0.22uF	10	275V
C535	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	△C902	1-165-529-11	MYLAR	0.22uF	10	275V
C536	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	△C903	1-112-333-11	ELECT (BLOCK)	330uF	20%	450V
C538	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	△C905	1-112-335-91	FILM	0.0033uF	5%	400V
C539	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	△C906	1-117-815-11	FILM	1000PF	3%	1.5KV
C540	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	△C907	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C541	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	△C908	1-107-909-11	ELECT	47uF	20%	50V
C542	1-126-923-91	ELECT	220uF	20%	10V	△C909	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C543	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	△C910	1-107-907-11	ELECT	22uF	20%	50V
C544	1-126-964-11	ELECT	10uF	20%	50V	△C911	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C545	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	△C912	1-117-693-11	CERAMIC	100PF	10%	250V
C546	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	△C913	1-117-693-11	CERAMIC	100PF	10%	250V
C547	1-162-923-11	CERAMIC CHIP	47PF	5%	50V	△C918	1-113-925-11	CERAMIC	0.01uF	20%	250V
C548	1-216-864-11	SHORT CHIP	0			△C920	1-113-925-11	CERAMIC	0.01uF	20%	250V
C549	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	△C921	1-165-136-11	CERAMIC	3300PF	10%	500V
C551	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	△C922	1-128-560-11	ELECT	22uF	20%	100V
C552	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	△C923	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C554	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	△C924	1-124-257-00	ELECT	2.2uF	20%	50V
C555	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	△C925	1-107-974-81	CERAMIC	47PF	5%	2KV
C556	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	△C928	1-113-896-11	CERAMIC	220PF	10%	250V
C557	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	△C929	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
C558	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	C932	1-100-924-21	ELECT	2200uF	20%	35V
C559	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	C933	1-100-924-21	ELECT	2200uF	20%	35V
C560	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	C934	1-107-898-11	ELECT	2200uF	20%	35V
C561	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	C935	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C562	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	C936	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C563	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	C937	1-100-756-91	CERAMIC CHIP	0.047uF		50V
C564	1-126-964-11	ELECT	10uF	20%	50V	△C938	1-117-698-51	CERAMIC	680PF	10%	250V
C565	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	C939	1-136-165-00	FILM	0.1uF	5%	50V
C567	1-126-923-91	ELECT	220uF	20%	10V	C940	1-128-947-31	ELECT	3300uF	20%	10V
C568	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C941	1-128-954-21	ELECT	1000uF	20%	25V
C569	1-165-112-11	CERAMIC CHIP	0.33uF		16V	C942	1-126-941-11	ELECT	470uF	20%	25V
C570	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C943	1-126-933-11	ELECT	100uF	20%	16V
C571	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C944	1-128-951-21	ELECT	2200uF	20%	16V
C572	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C945	1-126-935-11	ELECT	470uF	20%	16V
C575	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	C946	1-128-950-21	ELECT	1000uF	20%	16V
C577	1-162-961-11	CERAMIC CHIP	330PF	10%	50V	C947	1-104-658-91	ELECT	100uF	20%	10V
C580	1-126-916-11	ELECT	1000uF	20%	6.3V	C948	1-126-925-91	ELECT	470uF	20%	10V
C582	1-104-658-91	ELECT	100uF	20%	10V	C949	1-165-722-31	ELECT	100uF	20%	10V
						C951	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C952	1-100-756-91	CERAMIC CHIP	0.047uF	50V	△D924	8-719-083-69	DIODE UDZSTE-1724B
C953	1-117-214-11	CERAMIC	0.001uF	10% 2KV	△D925	8-719-069-54	DIODE UDZSTE-175.1B
C954	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	△D926	8-719-083-69	DIODE UDZSTE-1724B
C955	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	D931	6-500-383-01	DIODE YG906C2R
C958	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	D932	8-719-069-54	DIODE UDZSTE-175.1B
C960	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	D941	8-719-063-74	DIODE D1NL20U-TR2
△C963	1-117-699-11	CERAMIC	0.001uF	20% 250V	D942	8-719-080-53	DIODE RK36LF-B3
△C964	1-117-699-11	CERAMIC	0.001uF	20% 250V	D943	8-719-080-53	DIODE RK36LF-B3
△C965	1-113-896-11	CERAMIC	220PF	10% 250V	D944	6-500-288-11	DIODE EK19LF-F7
△C966	1-113-896-11	CERAMIC	220PF	10% 250V	D945	8-719-083-67	DIODE UDZSTE-1720B
C967	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V			< TERMINAL BOARD >
C968	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	EB902	1-537-770-21	TERMINAL BOARD, GROUND
		< CONNECTOR >			EB903	1-537-770-21	TERMINAL BOARD, GROUND
CN300	1-564-704-11	PIN, CONNECTOR (SMALL TYPE) 2P			EB904	1-537-770-21	TERMINAL BOARD, GROUND
CN504	1-784-370-21	CONNECTOR, FFC/FPC 11P			EB905	1-537-770-21	TERMINAL BOARD, GROUND
CN505	1-784-370-21	CONNECTOR, FFC/FPC 11P			EB906	1-537-770-21	TERMINAL BOARD, GROUND
CN507	1-793-991-11	FFC/CONNECTOR, FPC (LIF (NON-ZIF)) 23P			EB907	1-537-770-21	TERMINAL BOARD, GROUND
CN509	1-779-287-11	CONNECTOR, FFC (LIF (NON-ZIF)) 19P			EB908	1-537-770-21	TERMINAL BOARD, GROUND
CN901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P			EB910	1-537-770-21	TERMINAL BOARD, GROUND
		< DIODE >			EB911	1-537-770-21	TERMINAL BOARD, GROUND
D101	6-500-260-01	DIODE P6SMB39AT3					< FERRITE BEAD >
D102	6-500-260-01	DIODE P6SMB39AT3			FB301	1-469-760-21	FERRITE, EMI (SMD) (2012)
D103	6-500-260-01	DIODE P6SMB39AT3			FB509	1-469-121-21	FERRITE, EMI (SMD) (1608)
D104	6-500-260-01	DIODE P6SMB39AT3			FB511	1-216-295-91	SHORT CHIP 0
D105	6-500-260-01	DIODE P6SMB39AT3			FB512	1-216-295-91	SHORT CHIP 0
D106	6-500-260-01	DIODE P6SMB39AT3			△FB905	1-410-396-41	FERRITE 0.45uH
D107	6-500-260-01	DIODE P6SMB39AT3 (DZ500KF)					< IC >
D201	6-500-260-01	DIODE P6SMB39AT3			IC101	6-704-802-01	IC CXD9774M (DZ100K)
D202	6-500-260-01	DIODE P6SMB39AT3			IC101	6-705-695-01	IC CXD9775M (DZ500KF)
D203	6-500-260-01	DIODE P6SMB39AT3			IC102	6-704-802-01	IC CXD9774M (DZ100K)
D204	6-500-260-01	DIODE P6SMB39AT3			IC102	6-705-695-01	IC CXD9775M (DZ500KF)
D205	6-500-260-01	DIODE P6SMB39AT3			IC103	6-704-802-01	IC CXD9774M (DZ100K)
D206	6-500-260-01	DIODE P6SMB39AT3			IC103	6-705-695-01	IC CXD9775M (DZ500KF)
D207	6-500-260-01	DIODE P6SMB39AT3 (DZ500KF)			IC104	6-704-802-01	IC CXD9774M (DZ100K)
D303	6-501-193-01	DIODE 1SS355WTE-17			IC104	6-705-695-01	IC CXD9775M (DZ500KF)
D304	6-501-193-01	DIODE 1SS355WTE-17			IC105	6-704-802-01	IC CXD9774M (DZ100K)
D503	6-501-193-01	DIODE 1SS355WTE-17			IC105	6-705-695-01	IC CXD9775M (DZ500KF)
D504	6-501-193-01	DIODE 1SS355WTE-17			IC106	6-704-802-01	IC CXD9774M (DZ100K)
D505	6-501-193-01	DIODE 1SS355WTE-17			IC106	6-705-695-01	IC CXD9775M (DZ500KF)
D506	6-501-193-01	DIODE 1SS355WTE-17			IC107	6-705-695-01	IC CXD9775M (DZ500KF)
D509	6-501-193-01	DIODE 1SS355WTE-17			IC108	6-707-939-01	IC CXD9843AR
D510	6-501-193-01	DIODE 1SS355WTE-17			IC109	6-707-939-01	IC CXD9843AR
△D901	8-719-082-57	DIODE D5SBA60F01			IC110	6-707-939-01	IC CXD9843AR
△D905	8-719-063-74	DIODE D1NL20U-TR2			IC303	6-702-300-01	IC TK11118CSCL-G
△D906	6-501-193-01	DIODE 1SS355WTE-17			IC305	8-759-649-50	IC SN74AHC1GU04DCKR
△D907	6-501-193-01	DIODE 1SS355WTE-17			IC501	6-707-608-01	IC PCM1803DBR
△D908	6-501-193-01	DIODE 1SS355WTE-17			IC505	8-759-825-15	IC LC89056W-E
△D909	6-501-193-01	DIODE 1SS355WTE-17			IC506	6-707-754-01	IC CXD9862R
△D910	6-501-193-01	DIODE 1SS355WTE-17			IC507	6-704-037-01	IC IC61LV6416-15TG
△D913	6-500-241-01	DIODE SARS03			IC508	6-707-485-01	IC NJM2885DL1-18 (TE2)
△D914	6-501-193-01	DIODE 1SS355WTE-17			IC509	6-805-684-01	IC M30622MGP-A17FPUO
△D915	8-719-977-28	DIODE DTZ10B			IC511	6-701-680-01	IC PST3629NR
△D921	8-719-948-45	DIODE ERA22-08			IC514	8-759-549-07	IC SN74LV157APWR
△D922	8-719-063-74	DIODE D1NL20U-TR2			IC515	6-703-550-01	IC TA7809LS
△D923	8-719-977-28	DIODE DTZ10B			IC516	6-703-547-01	IC TA7805LS
					IC517	8-759-649-50	IC SN74AHC1GU04DCKR

HCD-DZ100K/DZ500KF

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
△ IC901	6-707-742-11	IC STR-F6168-LF1352				< LINE FILTER >	
△ IC921	6-707-740-01	IC STR-V153		△ LF901	1-457-079-11	LINE FILTER COIL	
IC931	8-759-648-34	IC TA76431AS (TPE6)				< IC >	
IC941	6-707-746-01	IC SI-3120KM-TL		△ PC901	6-600-438-01	IC TLP421F (D4-GR)	
IC942	6-707-745-10	IC SI-3050KM-TL		△ PC902	6-600-438-01	IC TLP421F (D4-GR)	
IC943	6-707-744-01	IC SI-3033KM-TL		△ PC903	6-600-438-01	IC TLP421F (D4-GR)	
IC951	6-707-743-01	IC TA76L431S (TPE6, Q)				< TRANSISTOR >	
		< JACK >		Q101	8-729-600-22	TRANSISTOR 2SA1235-F	
J201	1-780-202-11	TERMINAL BOARD (SP) (4P) (SPEAKER)		Q102	8-729-600-22	TRANSISTOR 2SA1235-F	
J202	1-780-203-11	TERMINAL BOARD (SP) (2P) (WOOFER, CENTER)		Q103	8-729-600-22	TRANSISTOR 2SA1235-F	
		< COIL >		Q104	8-729-600-22	TRANSISTOR 2SA1235-F	
L101	1-457-078-11	AIR-CORE COIL		Q105	8-729-600-22	TRANSISTOR 2SA1235-F	
L102	1-457-078-11	AIR-CORE COIL		Q106	8-729-600-22	TRANSISTOR 2SA1235-F	
L103	1-457-078-11	AIR-CORE COIL		Q107	8-729-600-22	TRANSISTOR 2SA1235-F	
L104	1-457-078-11	AIR-CORE COIL		Q108	8-729-600-22	TRANSISTOR 2SA1235-F	
L105	1-457-078-11	AIR-CORE COIL		Q109	8-729-600-22	TRANSISTOR 2SA1235-F	
L106	1-457-078-11	AIR-CORE COIL		Q110	8-729-600-22	TRANSISTOR 2SA1235-F	
L107	1-414-398-11	INDUCTOR 10uH		Q111	8-729-600-22	TRANSISTOR 2SA1235-F	
L111	1-457-077-11	AIR-CORE COIL		Q112	8-729-600-22	TRANSISTOR 2SA1235-F	
L112	1-457-077-11	AIR-CORE COIL		Q301	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L113	1-457-077-11	AIR-CORE COIL		Q302	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L114	1-457-077-11	AIR-CORE COIL		Q303	6-550-702-01	TRANSISTOR 2SC3243-TP-E	
L115	1-457-077-11	AIR-CORE COIL		Q304	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L116	1-457-077-11	AIR-CORE COIL		Q506	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L121	1-456-680-11	INDUCTOR 10uH		Q507	8-729-027-23	TRANSISTOR DTA114EKA-T146	
L122	1-456-680-11	INDUCTOR 10uH		△ Q901	8-729-140-04	TRANSISTOR 2SB1116A-L	
L123	1-456-680-11	INDUCTOR 10uH		△ Q921	8-729-142-51	TRANSISTOR 2SD1616A-TP-LK	
L124	1-456-680-11	INDUCTOR 10uH		Q943	1-801-806-11	TR DTC144EKA	
L125	1-456-680-11	INDUCTOR 10uH		Q945	6-550-718-01	TRANSISTOR RSR025N03TL	
L126	1-456-680-11	INDUCTOR 10uH		Q947	1-801-806-11	TR DTC144EKA	
L127	1-456-680-11	INDUCTOR 10uH (DZ500KF)				< RESISTOR >	
L131	1-456-680-11	INDUCTOR 10uH		R108	1-216-837-11	METAL CHIP 22K 5% 1/10W	
L132	1-456-680-11	INDUCTOR 10uH		R109	1-216-837-11	METAL CHIP 22K 5% 1/10W	
L133	1-456-680-11	INDUCTOR 10uH		R110	1-216-837-11	METAL CHIP 22K 5% 1/10W	
L134	1-456-680-11	INDUCTOR 10uH		R111	1-216-837-11	METAL CHIP 22K 5% 1/10W	
L135	1-456-680-11	INDUCTOR 10uH		R112	1-216-837-11	METAL CHIP 22K 5% 1/10W	
L136	1-456-680-11	INDUCTOR 10uH		R113	1-216-837-11	METAL CHIP 22K 5% 1/10W	
L137	1-456-680-11	INDUCTOR 10uH (DZ500KF)		R114	1-216-837-11	METAL CHIP 22K 5% 1/10W	
L301	1-414-754-11	INDUCTOR 10uH		R115	1-216-837-11	METAL CHIP 22K 5% 1/10W	
L302	1-412-939-11	INDUCTOR 1uH		R116	1-216-837-11	METAL CHIP 22K 5% 1/10W	
L303	1-216-295-91	SHORT CHIP 0		R117	1-216-837-11	METAL CHIP 22K 5% 1/10W	
L501	1-414-754-11	INDUCTOR 10uH		R118	1-216-837-11	METAL CHIP 22K 5% 1/10W	
L502	1-414-754-11	INDUCTOR 10uH		R119	1-216-837-11	METAL CHIP 22K 5% 1/10W	
L503	1-216-295-91	SHORT CHIP 0		R120	1-216-837-11	METAL CHIP 22K 5% 1/10W	
L504	1-216-295-91	SHORT CHIP 0		R128	1-216-837-11	METAL CHIP 22K 5% 1/10W (DZ500KF)	
L931	1-457-058-11	INDUCTOR 10.8uH		R131	1-216-864-11	SHORT CHIP 0 (DZ500KF)	
L941	1-414-398-11	INDUCTOR 10uH		R132	1-216-864-11	SHORT CHIP 0	
L942	1-414-398-11	INDUCTOR 10uH		R133	1-216-864-11	SHORT CHIP 0	
L945	1-414-398-11	INDUCTOR 10uH		R134	1-216-864-11	SHORT CHIP 0	
L947	1-414-398-11	INDUCTOR 10uH		R135	1-216-864-11	SHORT CHIP 0	
L948	1-414-398-11	INDUCTOR 10uH		R136	1-216-864-11	SHORT CHIP 0	
L951	1-414-398-11	INDUCTOR 10uH		R137	1-216-864-11	SHORT CHIP 0 (DZ500KF)	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R139	1-216-864-11	SHORT CHIP	0	R226	1-216-136-00	RES-CHIP	2.7 5% 1/8W
R141	1-216-864-11	SHORT CHIP	0	R227	1-216-136-00	RES-CHIP	2.7 5% 1/8W
R142	1-216-864-11	SHORT CHIP	0				(DZ500KF)
R143	1-216-864-11	SHORT CHIP	0	R241	1-216-809-11	METAL CHIP	100 5% 1/10W
				R242	1-216-809-11	METAL CHIP	100 5% 1/10W
R144	1-216-864-11	SHORT CHIP	0	R243	1-216-809-11	METAL CHIP	100 5% 1/10W
R145	1-216-864-11	SHORT CHIP	0	R244	1-216-809-11	METAL CHIP	100 5% 1/10W
R146	1-216-864-11	SHORT CHIP	0	R245	1-216-809-11	METAL CHIP	100 5% 1/10W
R147	1-216-864-11	SHORT CHIP	0 (DZ500KF)	R246	1-216-809-11	METAL CHIP	100 5% 1/10W
R151	1-216-864-11	SHORT CHIP	0	R247	1-216-809-11	METAL CHIP	100 5% 1/10W
							(DZ500KF)
R152	1-216-864-11	SHORT CHIP	0	R300	1-216-809-11	METAL CHIP	100 5% 1/10W
R153	1-216-864-11	SHORT CHIP	0	R302	1-216-809-11	METAL CHIP	100 5% 1/10W
R154	1-216-864-11	SHORT CHIP	0	R303	1-216-809-11	METAL CHIP	100 5% 1/10W
R155	1-216-864-11	SHORT CHIP	0	R304	1-216-809-11	METAL CHIP	100 5% 1/10W
R156	1-216-864-11	SHORT CHIP	0	R305	1-216-809-11	METAL CHIP	100 5% 1/10W
R157	1-216-864-11	SHORT CHIP	0 (DZ500KF)	R306	1-216-809-11	METAL CHIP	100 5% 1/10W
R161	1-216-864-11	SHORT CHIP	0	R308	1-216-809-11	METAL CHIP	100 5% 1/10W
R162	1-216-864-11	SHORT CHIP	0	R309	1-216-809-11	METAL CHIP	100 5% 1/10W
R163	1-216-864-11	SHORT CHIP	0	R310	1-216-809-11	METAL CHIP	100 5% 1/10W
R164	1-216-864-11	SHORT CHIP	0	R311	1-216-809-11	METAL CHIP	100 5% 1/10W
R165	1-216-864-11	SHORT CHIP	0	R312	1-216-809-11	METAL CHIP	100 5% 1/10W
R166	1-216-864-11	SHORT CHIP	0	R313	1-216-864-11	SHORT CHIP	0
R167	1-216-864-11	SHORT CHIP	0 (DZ500KF)	R314	1-216-809-11	METAL CHIP	100 5% 1/10W
R171	1-216-864-11	SHORT CHIP	0	R315	1-216-809-11	METAL CHIP	100 5% 1/10W
R172	1-216-864-11	SHORT CHIP	0	R316	1-216-817-11	METAL CHIP	470 5% 1/10W
R173	1-216-864-11	SHORT CHIP	0	R317	1-216-817-11	METAL CHIP	470 5% 1/10W
R174	1-216-864-11	SHORT CHIP	0	R318	1-216-817-11	METAL CHIP	470 5% 1/10W
R175	1-216-864-11	SHORT CHIP	0	R319	1-216-833-11	METAL CHIP	10K 5% 1/10W
R176	1-216-864-11	SHORT CHIP	0	R320	1-216-864-11	SHORT CHIP	0
R177	1-216-864-11	SHORT CHIP	0 (DZ500KF)	R321	1-216-864-11	SHORT CHIP	0
R191	1-220-942-11	METAL CHIP	3.3 1% 1/4W	R322	1-216-833-11	METAL CHIP	10K 5% 1/10W
R192	1-220-942-11	METAL CHIP	3.3 1% 1/4W	R323	1-216-864-11	SHORT CHIP	0
R193	1-220-942-11	METAL CHIP	3.3 1% 1/4W	R324	1-216-864-11	SHORT CHIP	0
R194	1-220-942-11	METAL CHIP	3.3 1% 1/4W	R325	1-216-864-11	SHORT CHIP	0
R195	1-220-942-11	METAL CHIP	3.3 1% 1/4W	R326	1-216-864-11	SHORT CHIP	0
R196	1-220-942-11	METAL CHIP	3.3 1% 1/4W	R327	1-216-864-11	SHORT CHIP	0
R197	1-220-942-11	METAL CHIP	3.3 1% 1/4W	R328	1-216-864-11	SHORT CHIP	0
				R329	1-216-864-11	SHORT CHIP	0
R201	1-220-942-11	METAL CHIP	3.3 1% 1/4W	R344	1-216-817-11	METAL CHIP	470 5% 1/10W
R202	1-220-942-11	METAL CHIP	3.3 1% 1/4W	R345	1-216-833-11	METAL CHIP	10K 5% 1/10W
R203	1-220-942-11	METAL CHIP	3.3 1% 1/4W	R346	1-216-817-11	METAL CHIP	470 5% 1/10W
R204	1-220-942-11	METAL CHIP	3.3 1% 1/4W	R347	1-216-833-11	METAL CHIP	10K 5% 1/10W
R205	1-220-942-11	METAL CHIP	3.3 1% 1/4W	R348	1-216-817-11	METAL CHIP	470 5% 1/10W
R206	1-220-942-11	METAL CHIP	3.3 1% 1/4W	R351	1-216-809-11	METAL CHIP	100 5% 1/10W
R207	1-220-942-11	METAL CHIP	3.3 1% 1/4W	R353	1-216-809-11	METAL CHIP	100 5% 1/10W
				R354	1-216-809-11	METAL CHIP	100 5% 1/10W
R211	1-216-136-00	RES-CHIP	2.7 5% 1/8W	R355	1-216-809-11	METAL CHIP	100 5% 1/10W
R212	1-216-136-00	RES-CHIP	2.7 5% 1/8W	R356	1-216-803-11	METAL CHIP	33 5% 1/10W
R213	1-216-136-00	RES-CHIP	2.7 5% 1/8W	R357	1-216-803-11	METAL CHIP	33 5% 1/10W
R214	1-216-136-00	RES-CHIP	2.7 5% 1/8W	R358	1-216-803-11	METAL CHIP	33 5% 1/10W
R215	1-216-136-00	RES-CHIP	2.7 5% 1/8W	R361	1-216-845-11	METAL CHIP	100K 5% 1/10W
R216	1-216-136-00	RES-CHIP	2.7 5% 1/8W	R362	1-216-845-11	METAL CHIP	100K 5% 1/10W
R217	1-216-136-00	RES-CHIP	2.7 5% 1/8W	R363	1-216-845-11	METAL CHIP	100K 5% 1/10W
				R364	1-216-845-11	METAL CHIP	100K 5% 1/10W
R221	1-216-136-00	RES-CHIP	2.7 5% 1/8W	R365	1-216-845-11	METAL CHIP	100K 5% 1/10W
R222	1-216-136-00	RES-CHIP	2.7 5% 1/8W	R366	1-216-845-11	METAL CHIP	100K 5% 1/10W
R223	1-216-136-00	RES-CHIP	2.7 5% 1/8W	R371	1-216-818-11	METAL CHIP	560 5% 1/10W
R224	1-216-136-00	RES-CHIP	2.7 5% 1/8W				
R225	1-216-136-00	RES-CHIP	2.7 5% 1/8W				

HCD-DZ100K/DZ500KF

MAIN

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R372	1-216-818-11	METAL CHIP	560	5%	1/10W	R478	1-216-864-11	SHORT CHIP	0		
R373	1-216-818-11	METAL CHIP	560	5%	1/10W	R479	1-216-864-11	SHORT CHIP	0		
R374	1-216-818-11	METAL CHIP	560	5%	1/10W						
R375	1-216-818-11	METAL CHIP	560	5%	1/10W	R480	1-216-864-11	SHORT CHIP	0	(DZ500KF)	
R376	1-216-818-11	METAL CHIP	560	5%	1/10W	R481	1-216-833-11	METAL CHIP	10K	5%	1/10W
R377	1-216-818-11	METAL CHIP	560	5%	1/10W	R482	1-216-833-11	METAL CHIP	10K	5%	1/10W
R378	1-216-818-11	METAL CHIP	560	5%	1/10W	R483	1-216-833-11	METAL CHIP	10K	5%	1/10W
R379	1-216-818-11	METAL CHIP	560	5%	1/10W	R484	1-216-833-11	METAL CHIP	10K	5%	1/10W
R380	1-216-818-11	METAL CHIP	560	5%	1/10W	R487	1-216-833-11	METAL CHIP	10K	5%	1/10W
R381	1-216-818-11	METAL CHIP	560	5%	1/10W	R488	1-216-833-11	METAL CHIP	10K	5%	1/10W
R382	1-216-818-11	METAL CHIP	560	5%	1/10W	R489	1-216-833-11	METAL CHIP	10K	5%	1/10W
R383	1-216-818-11	METAL CHIP	560	5%	1/10W	R490	1-216-833-11	METAL CHIP	10K	5%	1/10W
R384	1-216-818-11	METAL CHIP	560	5%	1/10W	R491	1-216-833-11	METAL CHIP	10K	5%	1/10W
					(DZ500KF)	R492	1-216-833-11	METAL CHIP	10K	5%	1/10W
					(DZ500KF)	R493	1-216-833-11	METAL CHIP	10K	5%	1/10W
R393	1-216-801-11	METAL CHIP	22	5%	1/10W	R502	1-216-864-11	SHORT CHIP	0		
R394	1-216-857-11	METAL CHIP	1M	5%	1/10W	R504	1-216-809-11	METAL CHIP	100	5%	1/10W
R395	1-216-845-11	METAL CHIP	100K	5%	1/10W	R505	1-216-809-11	METAL CHIP	100	5%	1/10W
R396	1-216-809-11	METAL CHIP	100	5%	1/10W	R506	1-216-809-11	METAL CHIP	100	5%	1/10W
R400	1-216-845-11	METAL CHIP	100K	5%	1/10W	R507	1-216-809-11	METAL CHIP	100	5%	1/10W
R401	1-216-845-11	METAL CHIP	100K	5%	1/10W	R508	1-216-809-11	METAL CHIP	100	5%	1/10W
R402	1-216-845-11	METAL CHIP	100K	5%	1/10W	R510	1-216-809-11	METAL CHIP	100	5%	1/10W
R403	1-216-845-11	METAL CHIP	100K	5%	1/10W	R511	1-216-809-11	METAL CHIP	100	5%	1/10W
R404	1-216-845-11	METAL CHIP	100K	5%	1/10W	R512	1-216-809-11	METAL CHIP	100	5%	1/10W
R405	1-216-845-11	METAL CHIP	100K	5%	1/10W	R514	1-216-821-11	METAL CHIP	1K	5%	1/10W
R406	1-216-845-11	METAL CHIP	100K	5%	1/10W	R515	1-216-809-11	METAL CHIP	100	5%	1/10W
R407	1-216-845-11	METAL CHIP	100K	5%	1/10W	R516	1-216-809-11	METAL CHIP	100	5%	1/10W
R408	1-216-845-11	METAL CHIP	100K	5%	1/10W	R517	1-216-809-11	METAL CHIP	100	5%	1/10W
R409	1-216-845-11	METAL CHIP	100K	5%	1/10W	R518	1-216-809-11	METAL CHIP	100	5%	1/10W
R410	1-216-845-11	METAL CHIP	100K	5%	1/10W	R519	1-216-809-11	METAL CHIP	100	5%	1/10W
R411	1-216-845-11	METAL CHIP	100K	5%	1/10W	R520	1-216-809-11	METAL CHIP	100	5%	1/10W
R412	1-216-845-11	METAL CHIP	100K	5%	1/10W	R521	1-216-833-11	METAL CHIP	10K	5%	1/10W
R424	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R522	1-216-809-11	METAL CHIP	100	5%	1/10W
R426	1-216-833-11	METAL CHIP	10K	5%	1/10W	R523	1-216-833-11	METAL CHIP	10K	5%	1/10W
R427	1-216-833-11	METAL CHIP	10K	5%	1/10W	R525	1-216-809-11	METAL CHIP	100	5%	1/10W
R428	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R526	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R429	1-216-822-11	METAL CHIP	1.2K	5%	1/10W	R527	1-216-809-11	METAL CHIP	100	5%	1/10W
R430	1-216-833-11	METAL CHIP	10K	5%	1/10W	R528	1-216-809-11	METAL CHIP	100	5%	1/10W
R431	1-216-845-11	METAL CHIP	100K	5%	1/10W	R529	1-216-809-11	METAL CHIP	100	5%	1/10W
R450	1-216-833-11	METAL CHIP	10K	5%	1/10W	R530	1-216-809-11	METAL CHIP	100	5%	1/10W
R451	1-216-833-11	METAL CHIP	10K	5%	1/10W	R531	1-216-857-11	METAL CHIP	1M	5%	1/10W
R452	1-216-833-11	METAL CHIP	10K	5%	1/10W	R532	1-216-821-11	METAL CHIP	1K	5%	1/10W
R453	1-216-833-11	METAL CHIP	10K	5%	1/10W	R533	1-216-809-11	METAL CHIP	100	5%	1/10W
R456	1-216-833-11	METAL CHIP	10K	5%	1/10W	R534	1-216-809-11	METAL CHIP	100	5%	1/10W
R457	1-216-833-11	METAL CHIP	10K	5%	1/10W	R535	1-216-821-11	METAL CHIP	1K	5%	1/10W
R458	1-216-833-11	METAL CHIP	10K	5%	1/10W	R536	1-216-821-11	METAL CHIP	1K	5%	1/10W
R459	1-216-833-11	METAL CHIP	10K	5%	1/10W	R537	1-216-809-11	METAL CHIP	100	5%	1/10W
R460	1-216-833-11	METAL CHIP	10K	5%	1/10W	R538	1-216-295-91	SHORT CHIP	0		
R461	1-216-833-11	METAL CHIP	10K	5%	1/10W	R540	1-216-809-11	METAL CHIP	100	5%	1/10W
R462	1-216-833-11	METAL CHIP	10K	5%	1/10W	R541	1-216-809-11	METAL CHIP	100	5%	1/10W
R463	1-216-833-11	METAL CHIP	10K	5%	1/10W	R542	1-216-809-11	METAL CHIP	100	5%	1/10W
R464	1-216-833-11	METAL CHIP	10K	5%	1/10W	R543	1-216-809-11	METAL CHIP	100	5%	1/10W
R468	1-216-864-11	SHORT CHIP	0			R544	1-216-809-11	METAL CHIP	100	5%	1/10W
R469	1-216-864-11	SHORT CHIP	0			R545	1-216-809-11	METAL CHIP	100	5%	1/10W
R472	1-216-864-11	SHORT CHIP	0			R546	1-216-809-11	METAL CHIP	100	5%	1/10W
R473	1-216-864-11	SHORT CHIP	0			R547	1-216-809-11	METAL CHIP	100	5%	1/10W
R474	1-216-864-11	SHORT CHIP	0			R548	1-216-809-11	METAL CHIP	100	5%	1/10W
R475	1-216-864-11	SHORT CHIP	0			R549	1-216-809-11	METAL CHIP	100	5%	1/10W

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R550	1-216-864-11	SHORT CHIP	0	R614	1-216-833-11	METAL CHIP	10K 5% 1/10W
R551	1-216-821-11	METAL CHIP	1K 5% 1/10W	R615	1-216-817-11	METAL CHIP	470 5% 1/10W
R552	1-216-809-11	METAL CHIP	100 5% 1/10W	R616	1-216-833-11	METAL CHIP	10K 5% 1/10W
R553	1-216-809-11	METAL CHIP	100 5% 1/10W	R620	1-216-809-11	METAL CHIP	100 5% 1/10W
R554	1-216-809-11	METAL CHIP	100 5% 1/10W	R627	1-216-809-11	METAL CHIP	100 5% 1/10W
R555	1-216-830-11	METAL CHIP	5.6K 5% 1/10W	R628	1-216-821-11	METAL CHIP	1K 5% 1/10W
R556	1-216-809-11	METAL CHIP	100 5% 1/10W	R629	1-216-295-91	SHORT CHIP	0
R557	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	R636	1-216-864-11	SHORT CHIP	0
R558	1-216-839-11	METAL CHIP	33K 5% 1/10W	R637	1-216-864-11	SHORT CHIP	0
R559	1-216-821-11	METAL CHIP	1K 5% 1/10W	R638	1-216-809-11	METAL CHIP	100 5% 1/10W
R560	1-216-809-11	METAL CHIP	100 5% 1/10W	R650	1-216-864-11	SHORT CHIP	0
R561	1-216-809-11	METAL CHIP	100 5% 1/10W	R656	1-216-864-11	SHORT CHIP	0
R563	1-216-809-11	METAL CHIP	100 5% 1/10W	R657	1-216-841-11	METAL CHIP	47K 5% 1/10W
R564	1-216-809-11	METAL CHIP	100 5% 1/10W	R659	1-216-845-11	METAL CHIP	100K 5% 1/10W
R565	1-216-809-11	METAL CHIP	100 5% 1/10W	R660	1-216-864-11	SHORT CHIP	0
R566	1-216-833-11	METAL CHIP	10K 5% 1/10W	R662	1-216-841-11	METAL CHIP	47K 5% 1/10W
R567	1-216-809-11	METAL CHIP	100 5% 1/10W	R673	1-216-833-11	METAL CHIP	10K 5% 1/10W
R568	1-216-809-11	METAL CHIP	100 5% 1/10W	R675	1-216-809-11	METAL CHIP	100 5% 1/10W
R569	1-216-857-11	METAL CHIP	1M 5% 1/10W	R678	1-216-864-11	SHORT CHIP	0
R572	1-216-809-11	METAL CHIP	100 5% 1/10W	R692	1-216-809-11	METAL CHIP	100 5% 1/10W
R573	1-216-809-11	METAL CHIP	100 5% 1/10W	R693	1-216-809-11	METAL CHIP	100 5% 1/10W
R574	1-216-809-11	METAL CHIP	100 5% 1/10W	R694	1-216-809-11	METAL CHIP	100 5% 1/10W
R575	1-216-809-11	METAL CHIP	100 5% 1/10W	R695	1-216-809-11	METAL CHIP	100 5% 1/10W
R577	1-218-867-11	METAL CHIP	6.8K 0.50% 1/10W	R696	1-216-809-11	METAL CHIP	100 5% 1/10W
R577	1-216-841-11	METAL CHIP	47K 5% 1/10W	R697	1-216-809-11	METAL CHIP	100 5% 1/10W
R578	1-216-809-11	METAL CHIP	100 5% 1/10W	R701	1-216-809-11	METAL CHIP	100 5% 1/10W
R580	1-216-833-11	METAL CHIP	10K 5% 1/10W	R702	1-216-833-11	METAL CHIP	10K 5% 1/10W
R581	1-216-809-11	METAL CHIP	100 5% 1/10W	R703	1-216-821-11	METAL CHIP	1K 5% 1/10W
R582	1-216-809-11	METAL CHIP	100 5% 1/10W	R704	1-216-821-11	METAL CHIP	1K 5% 1/10W
R583	1-216-809-11	METAL CHIP	100 5% 1/10W	R705	1-216-833-11	METAL CHIP	10K 5% 1/10W
R584	1-216-809-11	METAL CHIP	100 5% 1/10W	R706	1-216-809-11	METAL CHIP	100 5% 1/10W
R585	1-216-809-11	METAL CHIP	100 5% 1/10W	R707	1-216-809-11	METAL CHIP	100 5% 1/10W
R586	1-216-809-11	METAL CHIP	100 5% 1/10W	R709	1-216-833-11	METAL CHIP	10K 5% 1/10W
R587	1-216-809-11	METAL CHIP	100 5% 1/10W	R713	1-216-864-11	SHORT CHIP	0
R588	1-216-809-11	METAL CHIP	100 5% 1/10W	R717	1-216-833-11	METAL CHIP	10K 5% 1/10W
R589	1-216-821-11	METAL CHIP	1K 5% 1/10W	R719	1-216-833-11	METAL CHIP	10K 5% 1/10W
R590	1-216-809-11	METAL CHIP	100 5% 1/10W	R722	1-216-841-11	METAL CHIP	47K 5% 1/10W
R591	1-216-809-11	METAL CHIP	100 5% 1/10W	R723	1-216-809-11	METAL CHIP	100 5% 1/10W
R594	1-216-809-11	METAL CHIP	100 5% 1/10W	R724	1-216-809-11	METAL CHIP	100 5% 1/10W
R595	1-216-809-11	METAL CHIP	100 5% 1/10W	R725	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R596	1-216-841-11	METAL CHIP	47K 5% 1/10W	R726	1-216-821-11	METAL CHIP	1K 5% 1/10W
R597	1-216-809-11	METAL CHIP	100 5% 1/10W	R727	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R598	1-216-809-11	METAL CHIP	100 5% 1/10W	R728	1-216-821-11	METAL CHIP	1K 5% 1/10W
R599	1-216-809-11	METAL CHIP	100 5% 1/10W	R729	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R600	1-216-809-11	METAL CHIP	100 5% 1/10W	R730	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R601	1-216-809-11	METAL CHIP	100 5% 1/10W	R731	1-216-809-11	METAL CHIP	100 5% 1/10W
R602	1-216-809-11	METAL CHIP	100 5% 1/10W	R739	1-216-841-11	METAL CHIP	47K 5% 1/10W
R603	1-216-809-11	METAL CHIP	100 5% 1/10W	R741	1-216-841-11	METAL CHIP	47K 5% 1/10W
R604	1-216-817-11	METAL CHIP	470 5% 1/10W	R746	1-216-841-11	METAL CHIP	47K 5% 1/10W
R605	1-216-817-11	METAL CHIP	470 5% 1/10W	R748	1-216-821-11	METAL CHIP	1K 5% 1/10W
R606	1-216-819-11	METAL CHIP	680 5% 1/10W	R749	1-216-821-11	METAL CHIP	1K 5% 1/10W
R607	1-216-819-11	METAL CHIP	680 5% 1/10W	R750	1-216-821-11	METAL CHIP	1K 5% 1/10W
R608	1-216-809-11	METAL CHIP	100 5% 1/10W	R755	1-216-821-11	METAL CHIP	1K 5% 1/10W
R609	1-216-864-11	SHORT CHIP	0	R756	1-216-821-11	METAL CHIP	1K 5% 1/10W
R611	1-216-833-11	METAL CHIP	10K 5% 1/10W	R760	1-216-809-11	METAL CHIP	100 5% 1/10W
R612	1-216-833-11	METAL CHIP	10K 5% 1/10W	R761	1-216-809-11	METAL CHIP	100 5% 1/10W
				R762	1-216-809-11	METAL CHIP	100 5% 1/10W
				R763	1-216-809-11	METAL CHIP	100 5% 1/10W

HCD-DZ100K/DZ500KF

MAIN **MIC**

Ref. No.	Part No.	Description	Quantity	Power	Remark
R764	1-216-809-11	METAL CHIP	100	5%	1/10W
R765	1-216-809-11	METAL CHIP	100	5%	1/10W
R774	1-216-821-11	METAL CHIP	1K	5%	1/10W
R775	1-216-841-11	METAL CHIP	47K	5%	1/10W
R789	1-216-809-11	METAL CHIP	100	5%	1/10W
R790	1-216-809-11	METAL CHIP	100	5%	1/10W
R791	1-216-809-11	METAL CHIP	100	5%	1/10W
R792	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R793	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R793	1-216-841-11	METAL CHIP	47K	5%	1/10W
△ R901	1-219-759-11	METAL	1M	5%	1/2W
△ R903	1-215-929-11	METAL OXIDE	100K	5%	3W
△ R904	1-215-929-11	METAL OXIDE	100K	5%	3W
△ R905	1-216-797-11	METAL CHIP	10	5%	1/10W
△ R906	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
△ R907	1-216-833-11	METAL CHIP	10K	5%	1/10W
△ R908	1-260-105-11	CARBON	3.3K	5%	1/2W
△ R909	1-216-845-11	METAL CHIP	100K	5%	1/10W
△ R910	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
△ R911	1-216-813-11	METAL CHIP	220	5%	1/10W
△ R912	1-216-363-00	METAL OXIDE	0.33	5%	2W
△ R914	1-214-789-00	METAL	0.1	10%	5W
△ R918	1-216-864-11	SHORT CHIP	0		
△ R919	1-216-836-11	METAL CHIP	18K	5%	1/10W
△ R920	1-216-821-11	METAL CHIP	1K	5%	1/10W
△ R921	1-215-904-61	METAL OXIDE	100K	5%	2W
△ R922	1-216-793-11	METAL CHIP	4.7	5%	1/10W
△ R923	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
△ R924	1-216-864-11	SHORT CHIP	0		
△ R925	1-216-797-11	METAL CHIP	10	5%	1/10W
△ R926	1-216-855-11	METAL CHIP	680K	5%	1/10W
△ R927	1-216-349-00	METAL OXIDE	1	5%	1W
△ R929	1-249-478-11	CARBON	2.2	5%	1/2W
△ R930	1-216-864-11	SHORT CHIP	0		
R931	1-218-863-11	METAL CHIP	4.7K	0.50%	1/10W
R931	1-218-869-11	METAL CHIP	8.2K	0.50%	1/10W
R932	1-218-883-11	METAL CHIP	33K	0.50%	1/10W
R933	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R934	1-216-821-11	METAL CHIP	1K	5%	1/10W
R935	1-216-821-11	METAL CHIP	1K	5%	1/10W
R936	1-216-853-11	METAL CHIP	470K	5%	1/10W
R937	1-216-833-11	METAL CHIP	10K	5%	1/10W
R938	1-216-821-11	METAL CHIP	1K	5%	1/10W
R939	1-218-859-11	METAL CHIP	3.3K	0.50%	1/10W
R940	1-216-833-11	METAL CHIP	10K	5%	1/10W
R941	1-216-864-11	SHORT CHIP	0		
R943	1-216-864-11	SHORT CHIP	0		
R946	1-216-811-11	METAL CHIP	150	5%	1/10W
R948	1-216-833-11	METAL CHIP	10K	5%	1/10W
R949	1-216-821-11	METAL CHIP	1K	5%	1/10W
R951	1-218-831-11	METAL CHIP	220	0.50%	1/10W
R952	1-218-855-11	METAL CHIP	2.2K	0.50%	1/10W
R953	1-218-861-11	METAL CHIP	3.9K	0.50%	1/10W
R954	1-216-837-11	METAL CHIP	22K	5%	1/10W

Ref. No.	Part No.	Description	Quantity	Power	Remark
R955	1-216-817-11	METAL CHIP	470	5%	1/10W
R956	1-216-821-11	METAL CHIP	1K	5%	1/10W
R957	1-216-841-11	METAL CHIP	47K	5%	1/10W
R958	1-216-821-11	METAL CHIP	1K	5%	1/10W
R965	1-216-864-11	SHORT CHIP	0		
< COMPOSITION CIRCUIT BLOCK >					
RB501	1-233-576-11	RES, CHIP NETWORK	100		(3216)
RB502	1-233-576-11	RES, CHIP NETWORK	100		(3216)
RB503	1-233-576-11	RES, CHIP NETWORK	100		(3216)
RB504	1-233-576-11	RES, CHIP NETWORK	100		(3216)
RB505	1-233-576-11	RES, CHIP NETWORK	100		(3216)
RB506	1-233-576-11	RES, CHIP NETWORK	100		(3216)
RB507	1-233-576-11	RES, CHIP NETWORK	100		(3216)
< TRANSFORMER >					
△ T901	1-443-651-11	TRANSFORMER, CONVERTER			
△ T902	1-443-650-11	TRANSFORMER, CONVERTER			
< THERMISTOR >					
△ TH901	1-805-842-21	THERMISTOR, NTC 6.0			
< VARISTOR >					
△ VDR901	1-805-482-11	VARISTOR			
< VIBRATOR >					
X450	1-795-660-21	QUARTZ CRYSTAL UNIT (49.152MHZ)			
X500	1-795-843-11	VIBRATOR, CRYSTAL (12.288MHZ)			
X501	1-813-325-11	VIBRATOR, CRYSTAL (13.90MHZ)			
X502	1-795-058-21	VIBRATOR, CERAMIC (5MHZ)			

MIC BOARD					

< CAPACITOR >					
C621	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C632	1-125-972-91	ELECT	100uF	20%	16V
C633	1-125-972-91	ELECT	100uF	20%	16V
C644	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C653	1-124-464-11	ELECT	0.22uF	20%	50V
C659	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C660	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C667	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C668	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C671	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
< CONNECTOR >					
CN604	1-564-721-11	PIN, CONNECTOR (SMALL TYPE) 5P			
< DIODE >					
D601	8-719-988-61	DIODE 1SS355TE-17			
D602	8-719-988-61	DIODE 1SS355TE-17			
< FERRITE BEAD >					
FB601	1-469-144-21	FERRITE, EMI (SMD) (2012)			

Ref. No.	Part No.	Description	Remark
		< IC >	
IC604	8-759-649-89	IC MC4558CD	
		< JACK >	
J602	1-566-891-21	JACK (MIC)	
		< RESISTOR >	
R647	1-216-833-11	METAL CHIP	10K 5% 1/10W
R676	1-216-833-11	METAL CHIP	10K 5% 1/10W
R681	1-216-845-11	METAL CHIP	100K 5% 1/10W
R682	1-216-821-11	METAL CHIP	1K 5% 1/10W
R686	1-216-864-11	SHORT CHIP	0
R687	1-216-821-11	METAL CHIP	1K 5% 1/10W
R689	1-216-833-11	METAL CHIP	10K 5% 1/10W
R691	1-216-835-11	METAL CHIP	15K 5% 1/10W
R692	1-216-821-11	METAL CHIP	1K 5% 1/10W

MS-203 BOARD			

		< CONNECTOR >	
CN001	1-815-412-11	CONNECTOR, FFC/FPC 5P	
CN001	1-815-412-11	CONNECTOR, FFC/FPC 5P	
		< SWITCH >	
S001	1-786-693-11	SWITCH, DETECTION	(CHUCKING/TRAY DETECT)

STBY BOARD			

		< CONNECTOR >	
CN804	1-506-481-11	PIN, CONNECTOR 2P	
		< SWITCH >	
S801	1-762-875-21	SWITCH, KEYBOARD (I/⏻)	

MISCELLANEOUS			

4	A-1074-643-A	TUNER UNIT (DTP-005)	
5	1-787-331-11	FAN, D.C.	
7	1-828-952-11	WIRE (FLAT TYPE) (9 CORE)	
△9	1-828-528-11	CORD, POWER	
57	1-828-361-11	WIRE (FLAT TYPE) (19 CORE)	
105	1-830-550-11	WIRE (FLAT TYPE) (24 CORE)	
106	1-830-546-11	WIRE (FLAT TYPE) (11 CORE) (80mm)	
110	1-830-464-11	WIRE (FLAT TYPE) (23 CORE)	
112	1-830-549-11	WIRE (FLAT TYPE) (5 CORE)	
113	1-830-545-11	WIRE (FLAT TYPE) (11 CORE) (200mm)	
114	1-830-548-11	WIRE (FLAT TYPE) (13 CORE)	
△507	8-820-290-02	OPTICAL PICK-UP KHM-310CAA/C2RP	
△F901	1-532-506-33	FUSE (T6.3AL/250V)	
