

HCD-DZ230/DZ231/HDZ235

SERVICE MANUAL

Self Diagnosis
Supported model

Ver. 1.1 2007.03



Photo : HCD-DZ230

US Model
Canadian Model
HCD-HDZ235
AEP Model
UK Model
HCD-DZ230/DZ231

HCD-DZ230/DZ231/HDZ235 are the amplifier, DVD/CD and tuner section in DAV-DZ230/DZ231/HDZ235.

This system incorporates with Dolby* Digital and Dolby Pro Logic (II) adaptive matrix surround decoder and the DTS** Digital Surround System.

* Manufactured under license from Dolby Laboratories.

"Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.

** Manufactured under license from DTS, Inc.

"DTS" and "DTS Digital Surround" are registered trademarks of DTS, Inc.

Model Name Using Similar Mechanism	HCD-DZ110
Mechanism Type	CDM85-DVBU102
Optical Pick-up Name	KHM-313CAA

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS for the US model (HDZ235)

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 3 ohms loads, both channels driven, from 120 - 20,000 Hz; rated 84 watts per channel minimum RMS power, with no more than 0.7 % total harmonic distortion from 250 milli watts to rated output.

Amplifier section

Stereo mode (rated) 108 W + 108 W (at 3 ohms, 1 kHz, 1 % THD)
(DZ230/DZ231)

Surround mode (reference) RMS output power FL/FR/C/SL/SR*: 142 watts (per channel at 3 ohms, 1 kHz, 10 % THD)
Subwoofer*: 140 watts (at 3 ohms, 80 Hz, 10 % THD)

* Depending on the sound field settings and the source, there may be no sound output.

Inputs (Analog)	AM tuner section
TV/VIDEO (AUDIO IN)	Tuning range
AUDIO IN	North American models: 530 – 1,710 kHz (with the interval set at 10 kHz) 531 – 1,710 kHz (with the interval set at 9 kHz)
Outputs (Analog)	European models: 531 – 1,602 kHz (with the interval set at 9 kHz)
Phones	Antenna (aerial) Intermediate frequency 450 kHz
DVD system	Video section
Laser	DZ230/DZ231: VIDEO: 1 Vp-p 75 ohms R/G/B: 0.7 Vp-p 75 ohms HDMI OUT: Type A (19 pin)
Signal format system	HDZ235: VIDEO: 1 Vp-p 75 ohms S VIDEO: Y: 1 Vp-p 75 ohms C: 0.286 Vp-p 75 ohms COMPONENT: Y: 1 Vp-p 75 ohms Pb/Cb, Pr/Cr: 0.7 Vp-p 75 ohms HDMI OUT: Type A (19 pin)
Tuner section	
System	
FM tuner section	
Tuning range	
North American models:	87.5-108.0 MHz (100 kHz step)
Other models:	87.5-108.0 MHz (50 kHz step)
Antenna (aerial)	FM wire antenna (aerial)
Antenna (aerial) terminals	75 ohms, unbalanced
Intermediate frequency	10.7 MHz

— Continued on next page —


DVD RECEIVER

General

DZ230/DZ231:
 Power requirements 220 – 240 V AC, 50/60 Hz
 Power outputs (DIGITAL MEDIA PORT)
 DC OUT: 5 V, 700 mA

HDZ235:
 Power requirements 120 V AC, 60 Hz
 Power consumption On: 150 W
 Standby: 0.3 W (at the Power Saving mode)
 Dimensions (approx.) 430 × 63 × 380 mm (17 × 2 1/2 × 15 inches) (w/h/d)
 incl. projecting parts
 Mass (approx.) 4.1 kg (9 lb 1 oz)

Design and specifications are subject to change without notice.

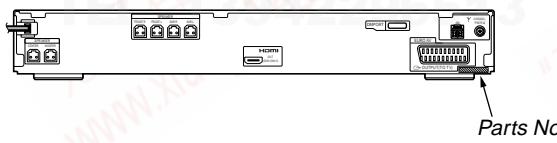MODEL IDENTIFICATION**- Rear Panel -**

Model	Part No.
DZ230 : AEP, UK models	2-889-997-0□
DZ231 : AEP, UK models	2-889-997-1□
HDZ235 : US, CND models	2-889-997-2□

- Abbreviation
CND : Canadian model

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ▲ OR DOTTED LINE WITH MARK ▲ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE ▲ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
 Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage.
 Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes.). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

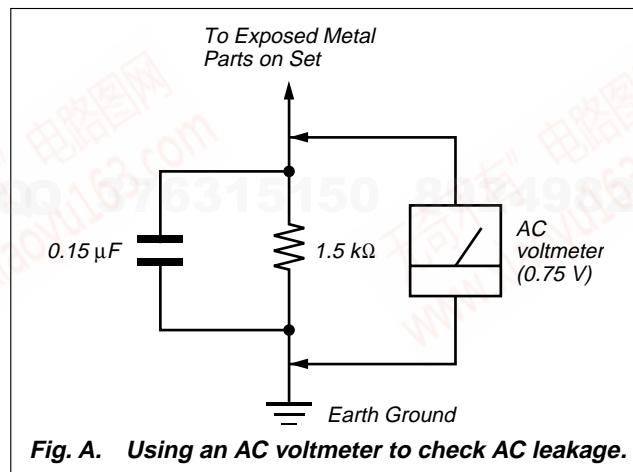


Fig. A. Using an AC voltmeter to check AC leakage.

Special Component Notice

The components identified by mark □ contain confidential information.
 Strictly follow the instructions whenever the components are repaired and/or replaced.

Notice pour composants spéciaux

Les composants identifiés par la marque □ contiennent des informations confidentielles.
 Suivre scrupuleusement les instructions chaque fois qu'un composant est remplacé et / ou réparé.

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERPAPPARAT

This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)

: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
Soldering irons using a temperature regulator should be set to about 350 °C.
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

Self-diagnosis Function

(When letters/numbers appear in the display)

When the self-diagnosis function is activated to prevent the system from malfunctioning, a 5-character service number (e.g., C 13 50) with a combination of a letter and 4 digits appears on the screen and the front panel display. In this case, check the following table.



First 3 characters of the service number	Cause and/or corrective action
C 13	The disc is dirty. → Clean the disc with a soft cloth
C 31	The disc is not inserted correctly. → Restart the system, then re-insert the disc correctly.
E XX (xx is a number)	To prevent a malfunction, the system has performed the self-diagnosis function. → Contact your nearest Sony dealer or local authorized Sony service facility and give the 5-character service number. Example: E 61 10

When displaying the version number on the screen

When you turn on the system, the version number [VER.X.XX] (X is a number) may appear on the screen. Although this is not a malfunction and for Sony service use only, normal system operation will not be possible. Turn off the system, and then turn on the system again to operate.



892498299

TABLE OF CONTENTS

1. SERVICING NOTE	5	6-10. Schematic Diagram – MAIN Board (3/9) –	39
2. GENERAL	9	6-11. Schematic Diagram – MAIN Board (4/9) –	40
3. DISASSEMBLY		6-12. Schematic Diagram – MAIN Board (5/9) –	41
3-1. Disassembly Flow	12	6-13. Schematic Diagram – MAIN Board (6/9) –	42
3-2. Case (DS), Front Panel Assy	13	6-14. Schematic Diagram – MAIN Board (7/9) –	43
3-3. FL Board	14	6-15. Schematic Diagram – MAIN Board (8/9) –	44
3-4. JACK Board, P-SW Board	15	6-16. Schematic Diagram – MAIN Board (9/9) –	45
3-5. DMPорт Board (DZ230/DZ231), Tuner (FM/AM)	15	6-17. Printed Wiring Board – MS-203 Board –	46
3-6. IO-SCART Board (DZ230/DZ231).....	16	6-18. Schematic Diagram – MS-203 Board –	46
3-7. IO-S-OUT Board (HDZ235)	16	6-19. Printed Wiring Board – IO-SCART Board (DZ230/DZ231) –	47
3-8. POWER Board	17	6-20. Schematic Diagram – IO-SCART Board (DZ230/DZ231) –	48
3-9. SPEAKER Board, D.C. Fan	17	6-21. Printed Wiring Board – IO-S-OUT Board (HDZ235) –	49
3-10. MAIN Board	18	6-22. Schematic Diagram – IO-S-OUT Board (HDZ235) –	50
3-11. DVD Mechanism Deck (CDM85-DVBU102)	19	6-23. Printed Wiring Boards – FL, JACK Board –	51
3-12. Tray	19	6-24. Schematic Diagram – FL Board –	52
3-13. Belt, MS-203 Board	20	6-25. Schematic Diagram – JACK Board –	53
3-14. Optical Pick-up (KHM-313CAA)	21	6-26. Printed Wiring Board – DMPорт Board (DZ230/DZ231) –	54
4. TEST MODE	22	6-27. Schematic Diagram – DMPорт Board (DZ230/DZ231) –	54
5. ELECTRICAL ADJUSTMENT	27	6-28. Printed Wiring Boards – SPEAKER, P-SW Board –	55
6. DIAGRAMS		6-29. Schematic Diagram – SPEAKER, P-SW Board –	55
6-1. Block Diagram – RF Section –	30	6-30. Printed Wiring Board – POWER Board –	56
6-2. Block Diagram – VIDEO Section –	31	6-31. Schematic Diagram – POWER Board –	57
6-3. Block Diagram – AUDIO Section –	32		
6-4. Block Diagram – AMP Section –	33		
6-5. Block Diagram – POWER Section –	34		
6-6. Printed Wiring Board – MAIN Board (Side A) –	35		
6-7. Printed Wiring Board – MAIN Board (Side B) –	36		
6-8. Schematic Diagram – MAIN Board (1/9) –	37		
6-9. Schematic Diagram – MAIN Board (2/9) –	38		
7. EXPLODED VIEWS			
7-1. Overall Section	70		
7-2. Front Panel Section	71		
7-3. Chassis Section	72		
7-4. DVD Mechanism Deck Section (CDM85-DVBU102) ...	73		
8. ELECTRICAL PARTS LIST	74		

SECTION 1

SERVICING NOTE

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

DISC TRAY LOCK

The disc tray lock function for the antitheft of an demonstration disc in the store is equipped.

Setting Procedure :

1. Press the **[I/O]** button to turn the set on.
2. Press the **[FUNCTION]** button to set DVD function.
3. Insert a disc.
4. Press the **[■]** button and the **[▲]** button simultaneously for five seconds.
5. The message “LOCKED” is displayed and the tray is locked.

Releasing Procedure :

1. Press the **[■]** button and the **[▲]** button simultaneously for five seconds again.
2. The message “UNLOCKED” is displayed and the tray is unlocked.

Note: When “LOCKED” is displayed, the tray lock is not released by turning power on/off with the **[I/O]** button.

On cleaning discs, disc/lens cleaners

- Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction.

IMPORTANT NOTICE

Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.

Projection televisions are especially susceptible to this.

Attention when transported

Use this mode when returning the set to the customer after repair.

Procedure:

1. Press the **[I/O]** button to turn the set on.
2. Press the **[FUNCTION]** button to set the function “DVD”.
3. Remove all discs, and then press two buttons **[▷]** and **[I/O]** simultaneously.
4. After a message “MECHA LOCK” is displayed on the fluorescent indicator tube, pull out the AC plug.
5. To exit from this mode, press the **[I/O]** button to turn the set on.

Note about CDs/DVDs

The system can play CD-ROMs/CD-Rs/CD-RWs recorded in the following formats:

- audio CD format
- VIDEO CD format
- MP3 audio tracks, JPEG image files, and DivX video files* of format conforming to ISO 9660 Level 1/Level 2, or its extended format, Joliet

The system can play DVD-ROMs/DVD+RWs/DVD-RWs/DVD+Rs/DVD-Rs recorded in the following formats:

- MP3 audio tracks, JPEG image files, and DivX video files* of format conforming to UDF (Universal Disc Format)
- * Except for United Kingdom and North American models.

Example of discs that the system cannot play

The system cannot play the following discs:

- CD-ROMs/CD-Rs/CD-RWs other than those recorded in the formats listed on “Note about CDs/DVDs”
- CD-ROMs recorded in PHOTO CD format
- Data part of CD-Extras
- DVD Audios
- Super Audio CD
- DATA DVDs that do not contain MP3 audio tracks, JPEG image files, or DivX video files*
- * Except for United Kingdom and North American models.
- DVD-RAMs

Also, the system cannot play the following discs:

- A DVD VIDEO with a different region code
- A disc that has a non-standard shape (e.g., card, heart)
- A disc with paper or stickers on it
- A disc that has the adhesive of cellophane tape or a sticker still left on it

Notes about CD-R/CD-RW/DVD-R/DVD-RW/DVD+R/DVD+RW

In some cases, CD-R/CD-RW/DVD-R/DVD-RW/DVD+R/DVD+RW cannot be played on this system due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software.

The disc will not play if it has not been correctly finalized. For more information, see the operating instructions for the recording device.

Note that some playback functions may not work with some DVD+RWs/DVD+Rs, even if they have been correctly finalized. In this case, view the disc by normal playback. Also some DATA CDs/DATA DVDs created in Packet Write format cannot be played.

Copyrights

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.


This system incorporates with Dolby* Digital and Dolby Pro Logic (II) adaptive matrix surround decoder and the DTS** Digital Surround System.

- * Manufactured under license from Dolby Laboratories. “Dolby”, “Pro Logic”, and the double-D symbol are trademarks of Dolby Laboratories.
- ** Manufactured under license from DTS, Inc. “DTS” and “DTS Digital Surround” are registered trademarks of DTS, Inc.

How to open the disc table when power switch turns off

Insert a tapering driver into the aperture of the unit bottom, and slide it in the direction of the arrow.

Peel off the seal and so the lever is moved in the direction of the arrow with the thin rod.

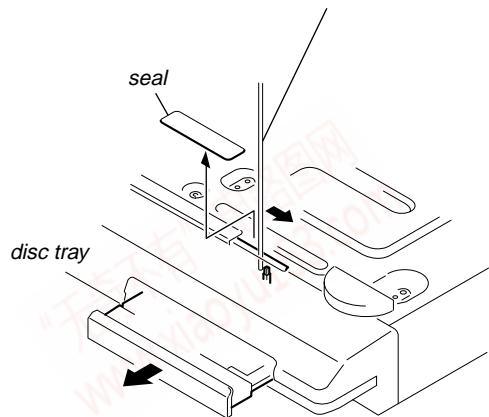

Discharge the charged electricity in capacitors to prevent electric shock as follows

When disassembling the machine, be sure to discharge the charged electricity in the following capacitors.

Use a resistor of 800 ohms, 2 Watts for discharging the following capacitors.


POWER board

C903: 390 V



C932, C933, C934, CN904: 30 V

MAIN board

CN3002: 30 V

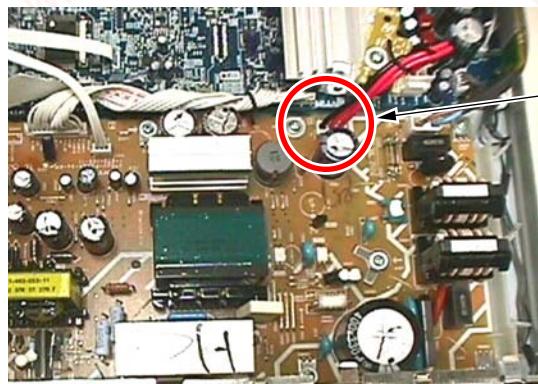

Point of capacitor discharge for C932, C933, C934:
Connect to the red and black wire of CN904

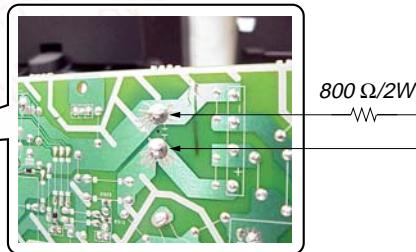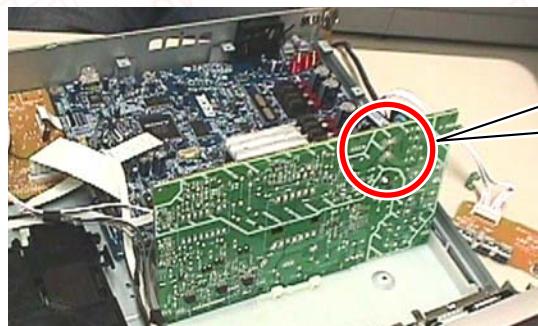

Point of capacitor discharge for C903:
Connect to the foot of CN903




Parts that require fixing using adhesive agent

The following parts on the POWER board and on the MAIN board must be fixed by using the adhesive agent (such as Sony Bond Master) as it is specified by Safety Regulations. When any part or printed circuit board is replaced during repair work, be sure to confirm that the following capacitors and resistors are fixed by using the adhesive agent (such as Sony Bond Master) without fail.

MAIN board : • C3081 and C3082 (C3081 is inclined to C3082 a little.)

POWER board: • C924 and R927 (refer to below fig.)
 • C913 (Push down to C903 side and so fix.)
 • C910 and C930 (refer to below fig.)
 • EB905 side of C903
 • EB905 side of C934
 • C964 and C963 (refer to below fig.)
 • Space between C933 and C932

POWER BOARD

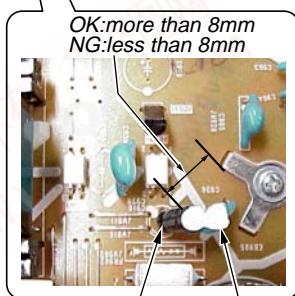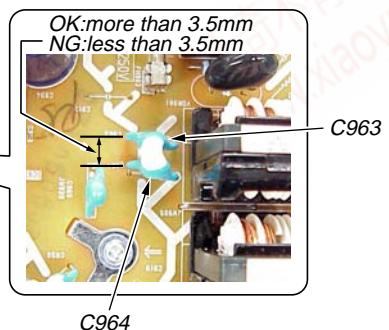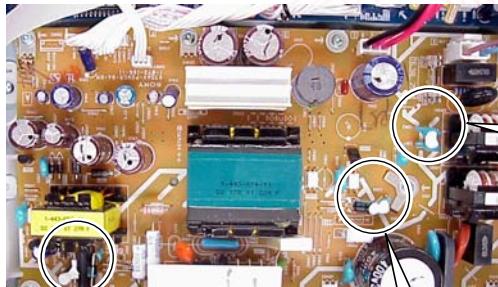


TEL 13942296513 QQ 376315150 892498299

"无可不有" 电路图网
www.xiaoyu163.com

www.xiaoyu163.com

Precaution when installing a new OP unit /
Precaution before unsoldering the static electricity prevention solder bridge

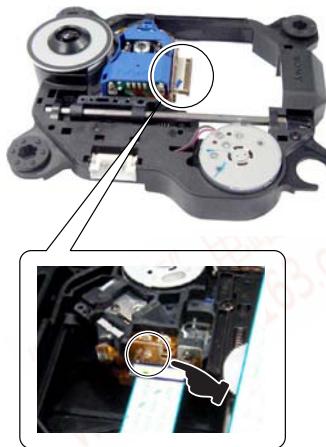



When installing a new OP unit, be sure to connect the flexible printed circuit board first of all before removing the static electricity prevention solder bridge by unsoldering.

Remove the static electricity prevention solder bridge by unsoldering after the flexible printed circuit board has already been connected.
(Do not remove nor unsolder the solder bridge as long as the OP unit is kept standalone.)

MAIN board service position

Please take the above-mentioned position in the repair of MAIN board.

In that case, it is necessary the following extension cable during CN304 on IO-SCART board (DZ230/DZ231)/
IO-S-OUT board (HDZ235) and CN4301 (DZ230/DZ231), CN4302 (HDZ235) on MAIN board.

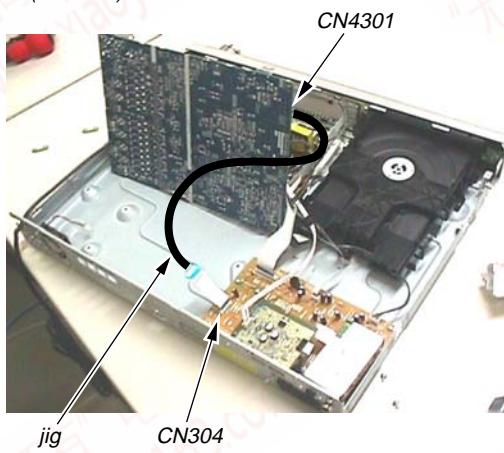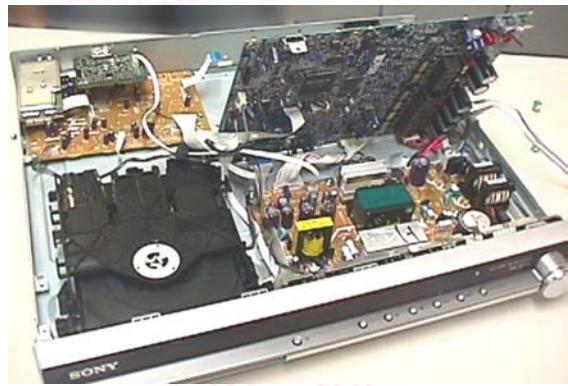


DZ230/DZ231: jig P/N: J-2501-102-A
(pitch 1.00 mm/13p/length 300 mm)

HDZ235: jig P/N: J-2501-242-A
(pitch 1.00 mm/11p/length 300 mm)

**SECTION 2
GENERAL**

Front panel

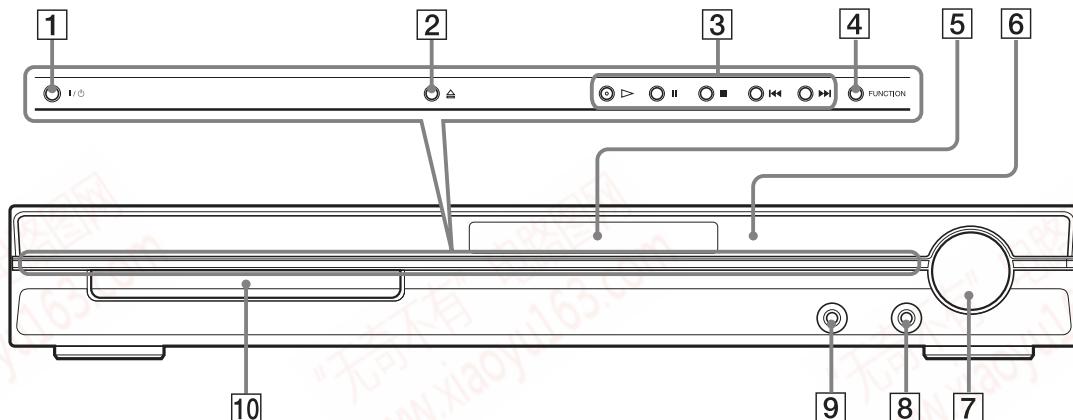


- [1] I/O (on/standby)
- [2] △ (open/close)
- [3] Disc operation
- [4] FUNCTION
- [5] Front panel display
- [6] (remote sensor)

- [7] VOLUME control
- [8] PHONES jack
- [9] AUDIO IN/A.CAL MIC jack
- [10] Disc tray

Rear panel

DZ230/DZ231

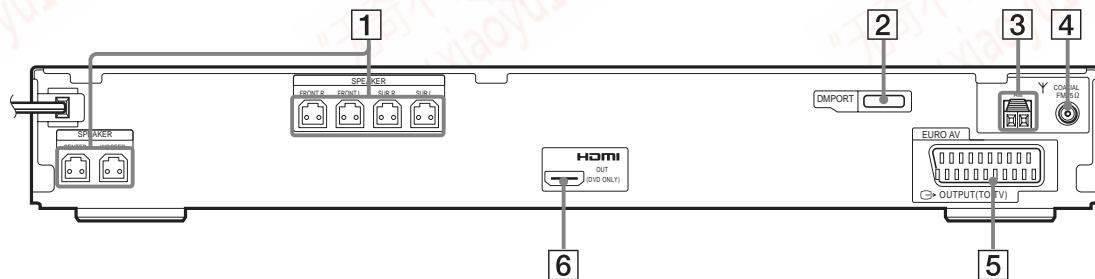

- [1] SPEAKER jacks

- [4] COAXIAL FM 75Ω jack


- [2] DMPORT (DIGITAL MEDIA PORT) jack

- [5] EURO AV → OUTPUT (TO TV) jack

- [3] AM terminal

- [6] HDMI OUT jack

HDZ235

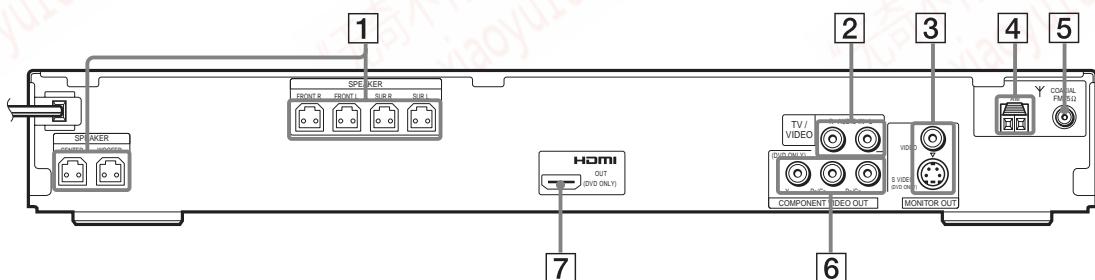

- [1] SPEAKER jacks

- [5] COAXIAL FM 75Ω jack

- [2] TV/VIDEO (AUDIO IN R/L) jacks

- [6] COMPONENT VIDEO OUT jacks

- [3] MONITOR OUT (S VIDEO/VIDEO) jacks


- [7] HDMI OUT jack

- [4] AM terminal

QQ 376315150 892498299

Front panel display

About the indications in the front panel display

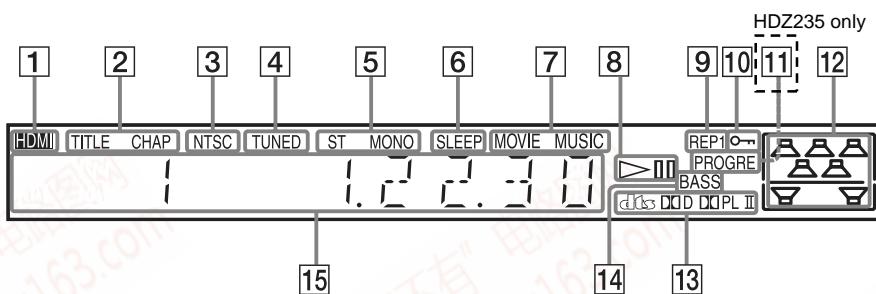

- 1** Lights up when the HDMI OUT jack is correctly connected to HDCP (high-bandwidth digital content protection) compliant device with HDMI or DVI (digital visual interface) input.
- 2** Lights up when the time information of a title or chapter appears in the front panel display. (DVD only)
- 3** Lights up when the color system is set to NTSC. (DZ230/DZ231 only)
- 4** Lights up when a station is received. (Radio only)
- 5** Stereo/Monaural effect (Radio only)
- 6** Lights up when the sleep timer is set.
- 7** Lights up when the movie or music mode is selected.
- 8** Playing status (DVD function only)
- 9** Current repeat mode
- 10** Lights up when the child lock function is set to on. (HDZ235 only)
- 11** Lights up when the system outputs progressive signals (DVD function only).
- 12** Indicates the selected [SPEAKER FORMATION].
- 13** Current surround format (Except for JPEG)
- 14** Lights up when the DYNAMIC BASS is selected.
- 15** Displays system's status such as chapter, title, or track number, time information, radio frequency, playing status, sound field, etc.

QQ 376315150 892498299

Remote control

ALPHABETICAL ORDER

A - O
 ANGLE [5]
 AUDIO [4]
 CLEAR [34]
 D.TUNING [24]
 DISC SKIP* [35]
 DISPLAY [2]
 DVD MENU [26]
 DVD TOP MENU [14]
 DYNAMIC BASS [23]
 ENTER [25]
 FUNCTION [22]
 MOVIE/MUSIC [17]
 MUTING [7]
 Number buttons** [15]


P - Z
 PICTURE NAVI [6]
 PRESET +/- [28] [32]
 SOUND FIELD [16]
 SUBTITLE [24]
 SYSTEM MENU [25]
 THEATRE SYNC [20]
 TUNING +/- [10] [12]
 TV [30]
 TV CH +/- [21]
 TV INPUT [18]
 TV VOL +/- [36]
 VIDEO FORMAT [3]
 VOLUME +/-** [8]

BUTTON DESCRIPTIONS

[1] [TV] (on/standby) [1]
 [37] [TV] (on/standby) [37]
 [13] [↔/↑/↓/→/ +] [13]
 [9] [↔/•/•→] REPLAY/
 ADVANCE [9]
 [32] [28] [↔/→/↔/→]
 [10] [↔/→/↔/→] [12] [10]
 [12] [↔/→/↔/→] SLOW [12] [10]
 [31] [▷ (play)**] [31]
 [9] [◁/▷/◁/▷] STEP [9]
 [29] [■ (stop)] [29]
 [11] [■ (pause)] [11]
 [19] [▲ (open/close)] [19]
 [27] [DISPLAY] [27]
 [33] [RETURN] [33]
 [34] [-/-]

* The DISC SKIP button is not available for this model.

** The ▷, number 5, and VOLUME + buttons have tactile dots. Use the tactile dots as references when operating the system.

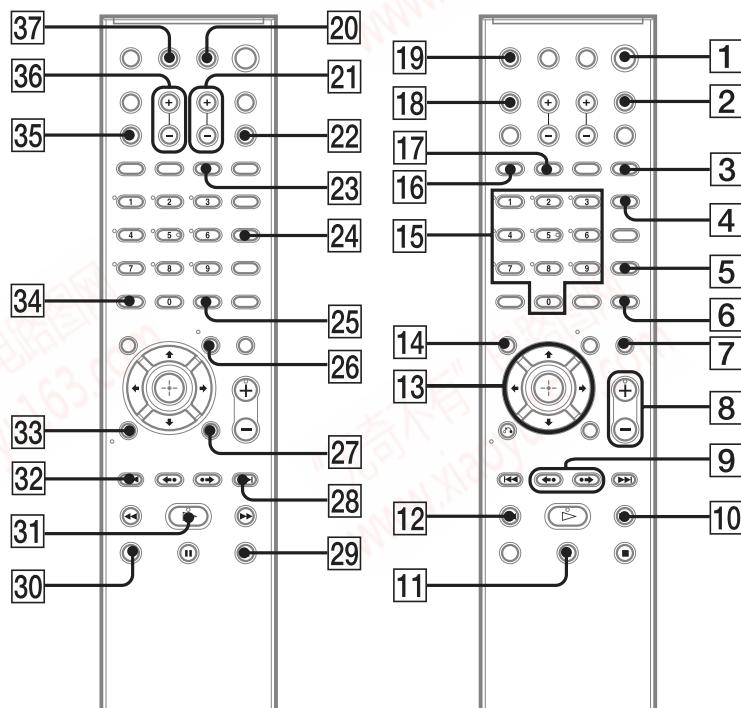


www.xiaoyu163.com

**SECTION 3
DISASSEMBLY**


3-1. DISASSEMBLY FLOW

- This set can be disassembled in the order shown below.

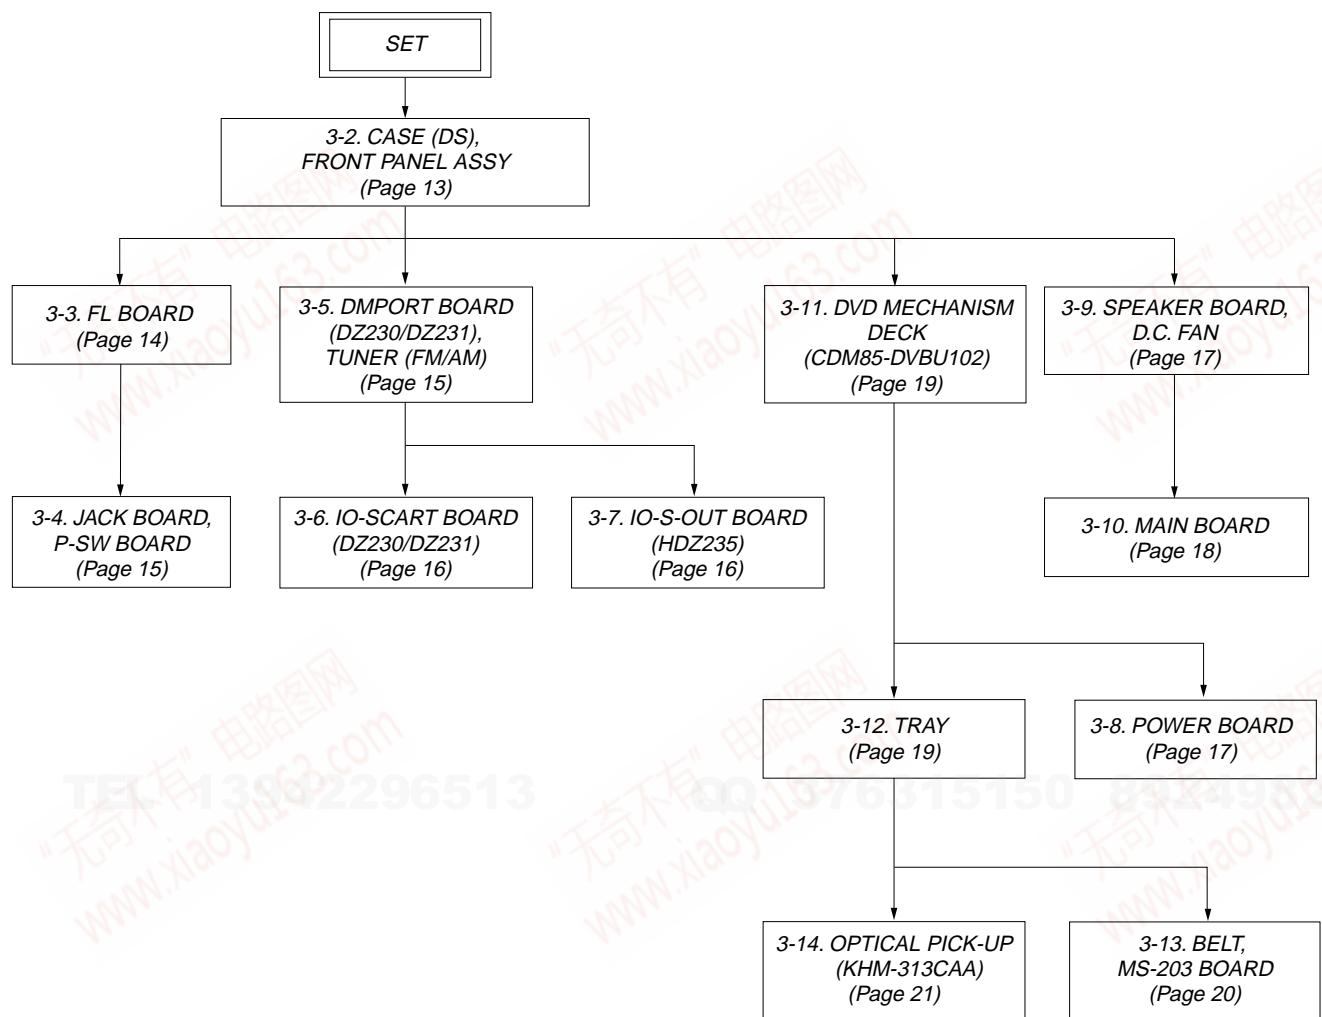


Note: Follow the disassembly procedure in the numerical order given.

3-2. CASE (DS), FRONT PANEL ASSY

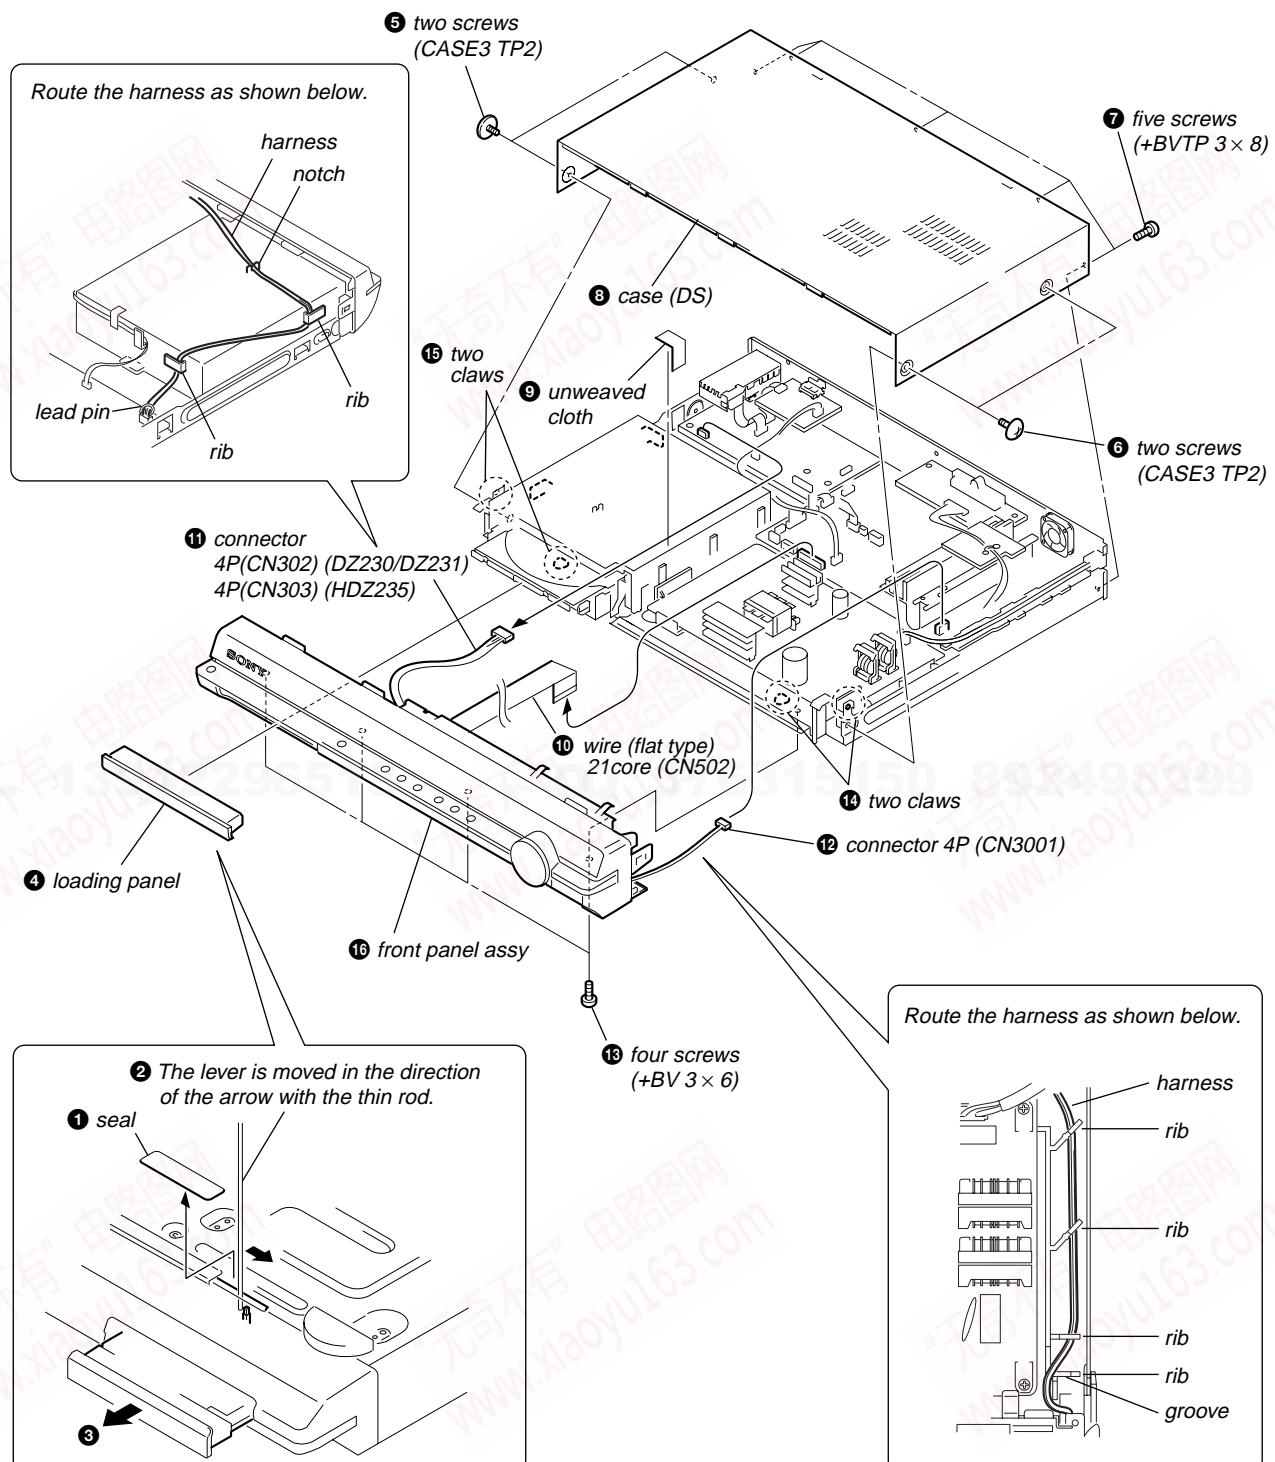


3-3. FL BOARD

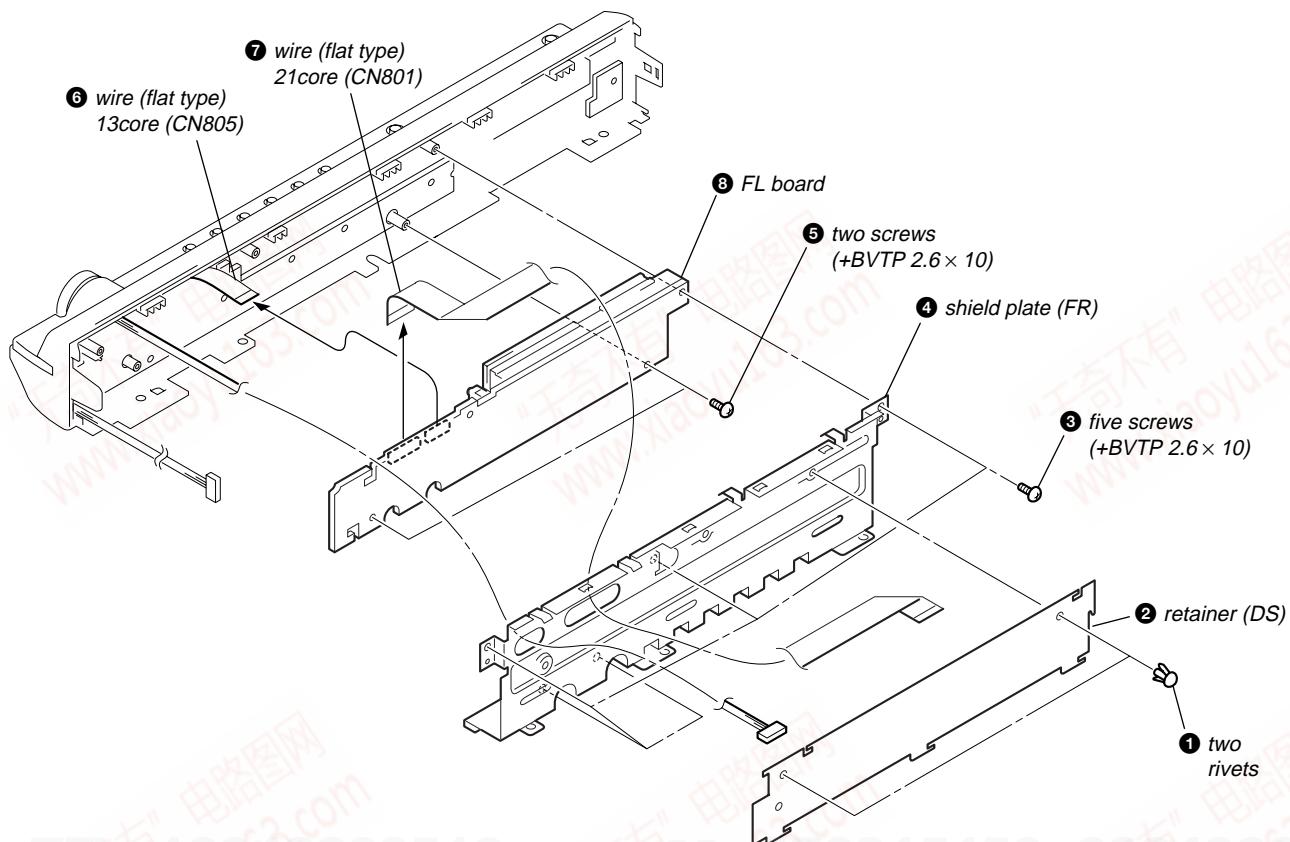


PRECAUTION DURING THE RETAINER (DS) INSTALLATION


(1) Assemble seven claws securely.

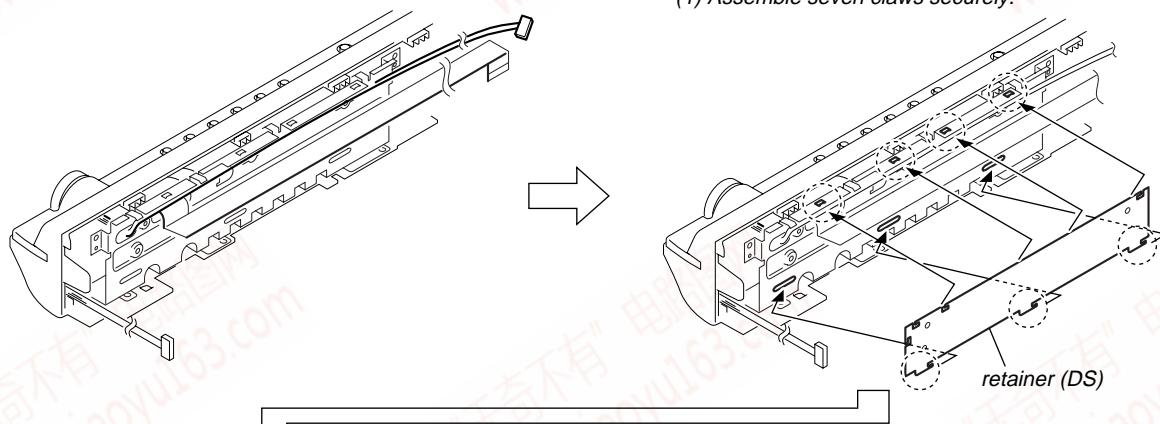


(2) Route the harness as shown below.

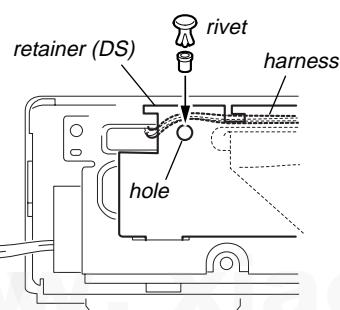


(3) Route the harness as shown below.

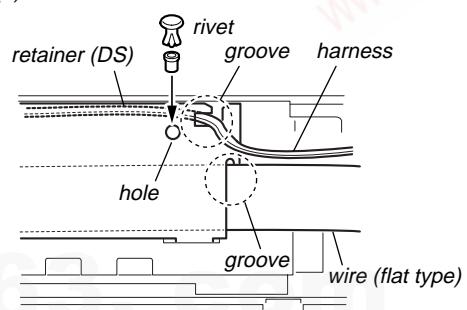


3-4. JACK BOARD, P-SW BOARD

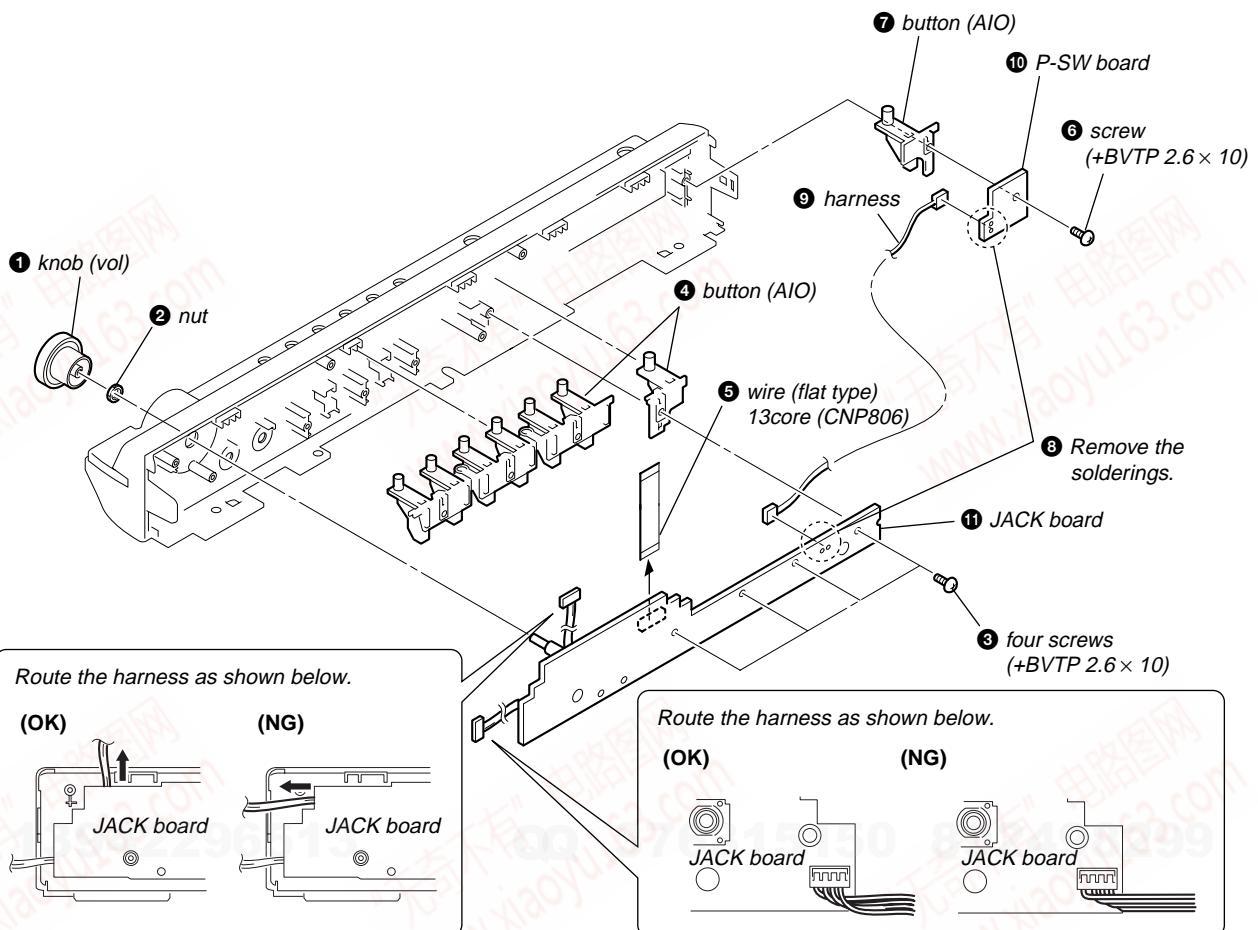


3-5. DMPORT BOARD (DZ230/DZ231), TUNER (FM/AM)

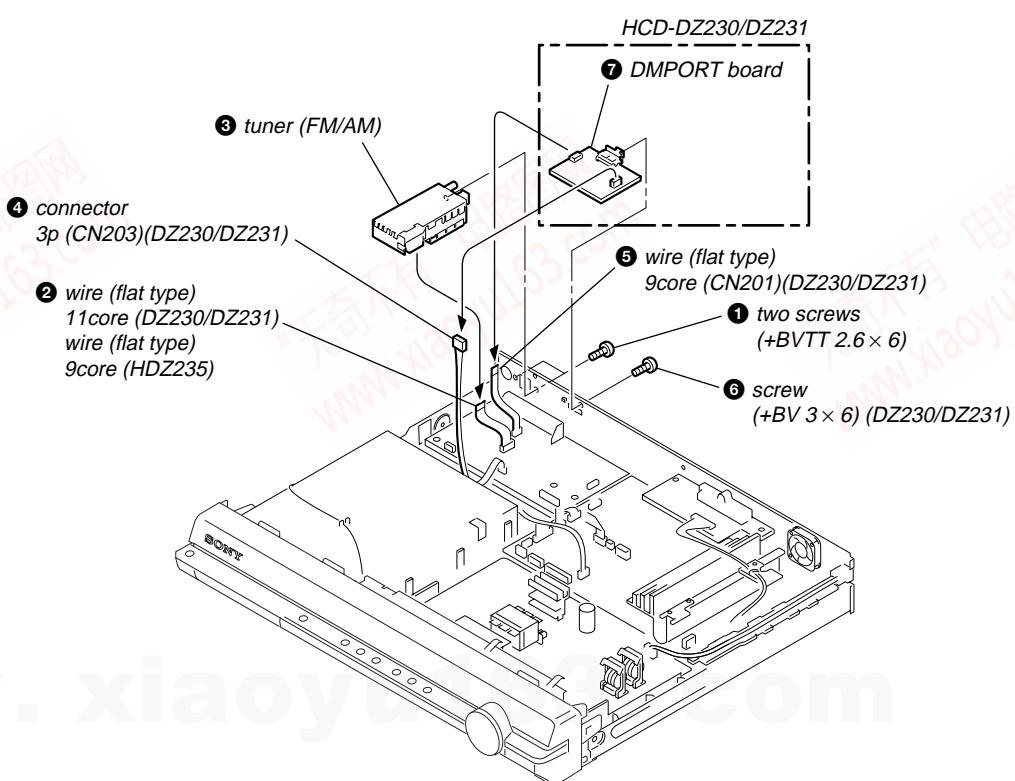


3-6. IO-SCART BOARD (DZ230/DZ231)

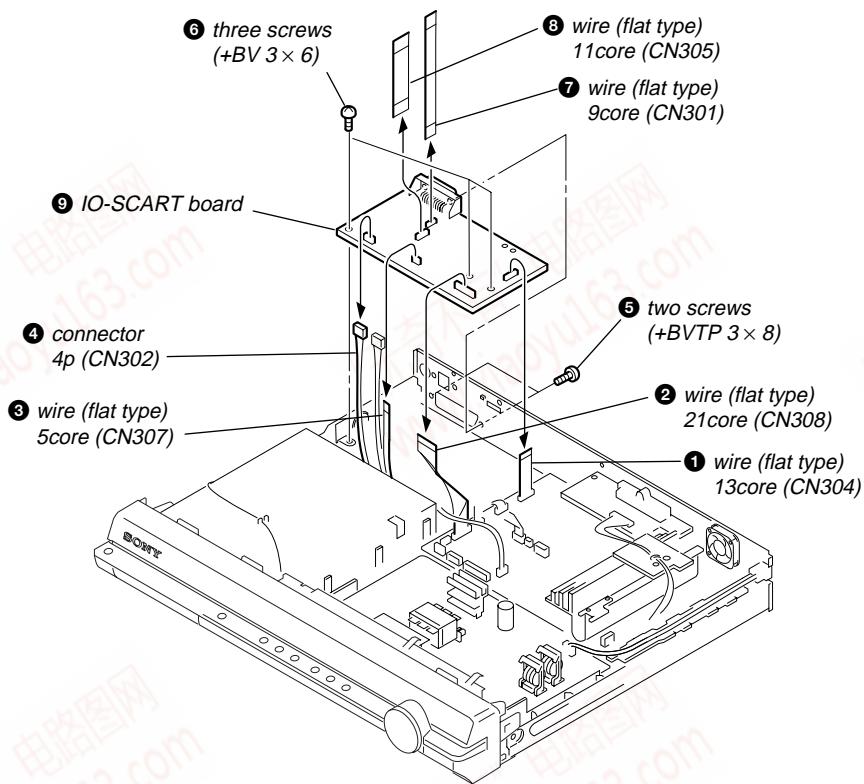


3-7. IO-S-OUT BOARD (HDZ235)

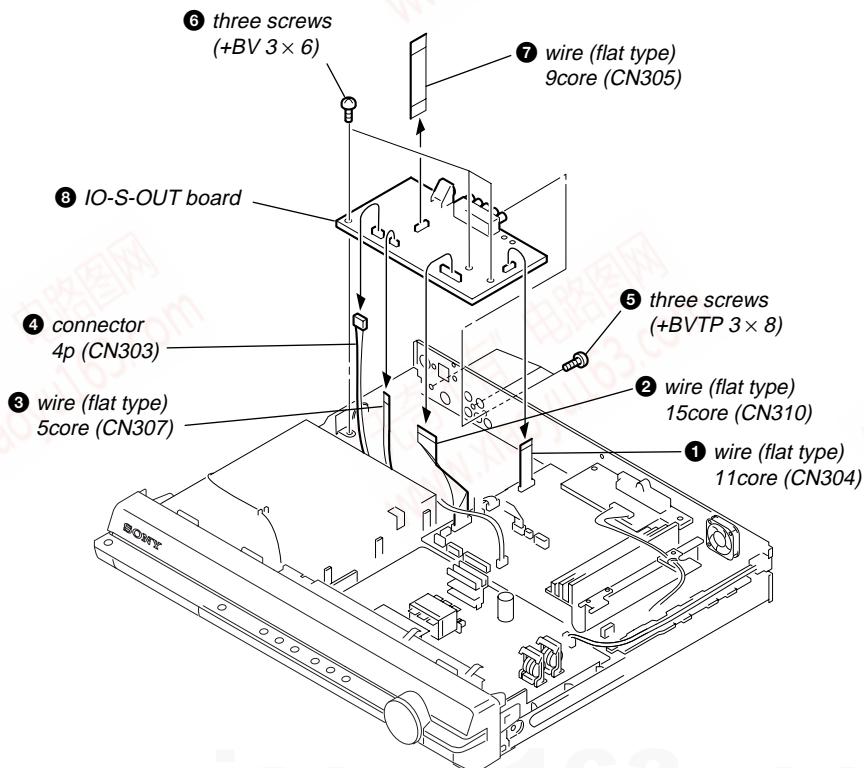

3-8. POWER BOARD

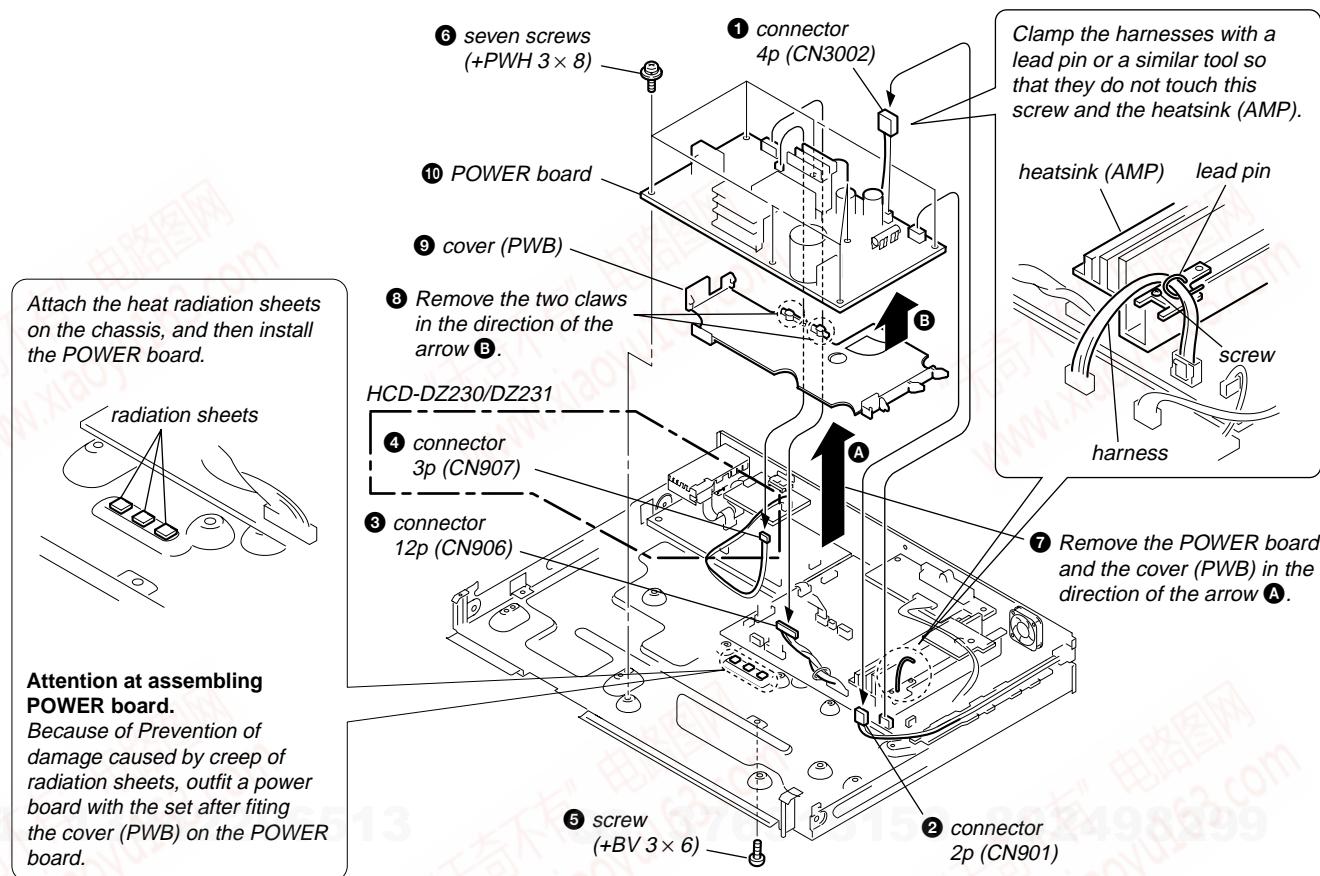


3-9. SPEAKER BOARD, D.C. FAN

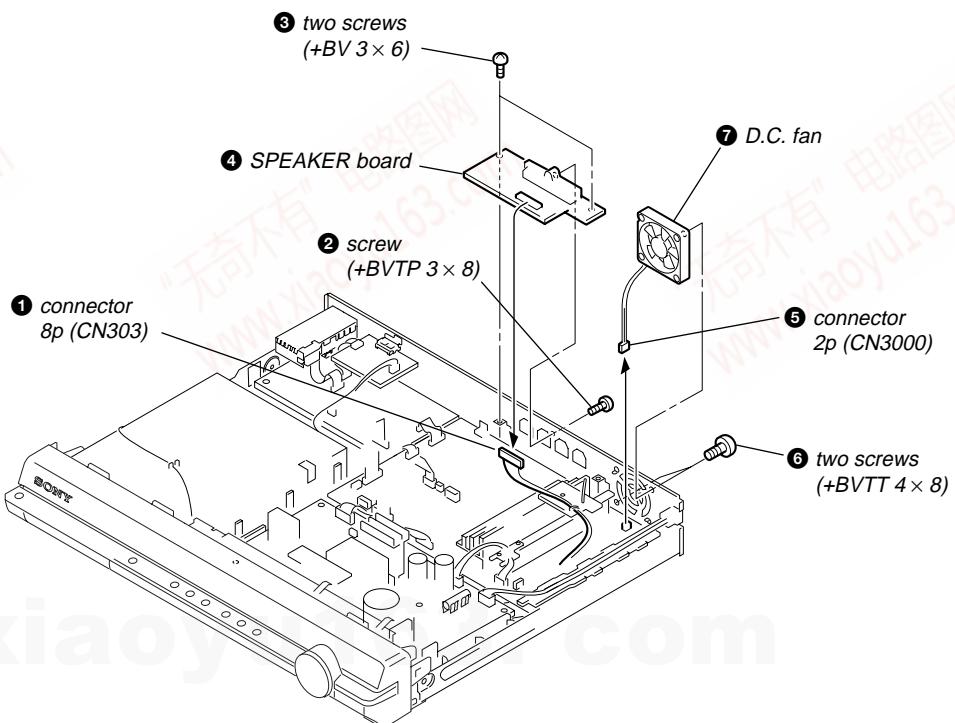

3-10. MAIN BOARD

Attaching the two radiation sheets on the IC MAIN board first, and then attach the heatsink (AMP).

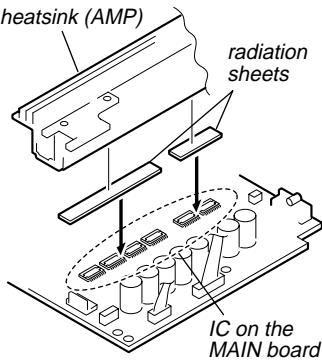

⑤ two screws (+BV 3×10)

⑥ screw (+BVTP 3×12)

⑦ heatsink (AMP), HEATSINK B board, HEATSINK A board

⑧ two radiation sheet


① connector 4p (CN3002)

② connector 2p (CN901)


③ two screws (+BV 3×6)

④ INSURATOR board


Route the power code according to a white line on the INSURATOR board.

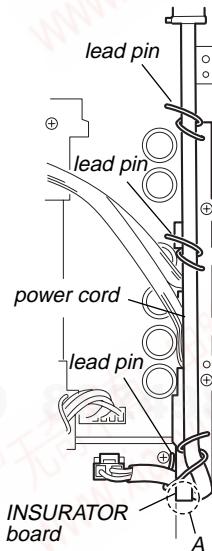

Clamp the harnesses with a lead pin or a similar tool so that they do not touch this screw and the heatsink (AMP).

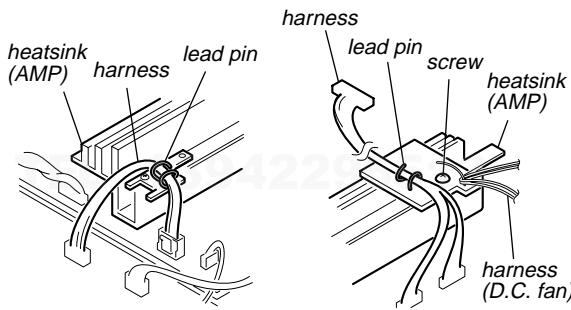

Clamp the harness with a lead pin or a similar tool so that they do not touch the heatsink (AMP).

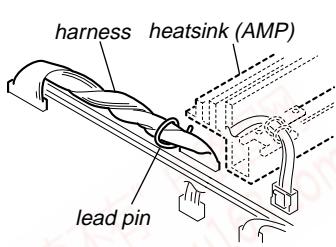

⑩ connector 6p (CN1201)

⑨ wire (flat type) 24core (CN1101)

⑪ wire (flat type) 5core (CN1202)

⑫ MAIN board

⑩ seven screws (+BV 3×6)

⑬ connector 12p (CN906)

⑭ wire (flat type) 21core (CN605) (DZ230/DZ231)
wire (flat type) 15core (CN608) (HDZ235)

⑮ wire (flat type) 13core (CN4301) (DZ230/DZ231)
wire (flat type) 11core (CN4302) (HDZ235)

⑯ screw (+B 3×6)


⑰ screw (+BVTP 3×8)

⑱ connector 4p (CN3001)

⑲ wire (flat type) 5core (CN702)


⑳ wire (flat type) 21core (CN502)

3-11. DVD MECHANISM DECK (CDM85-DVBU102)

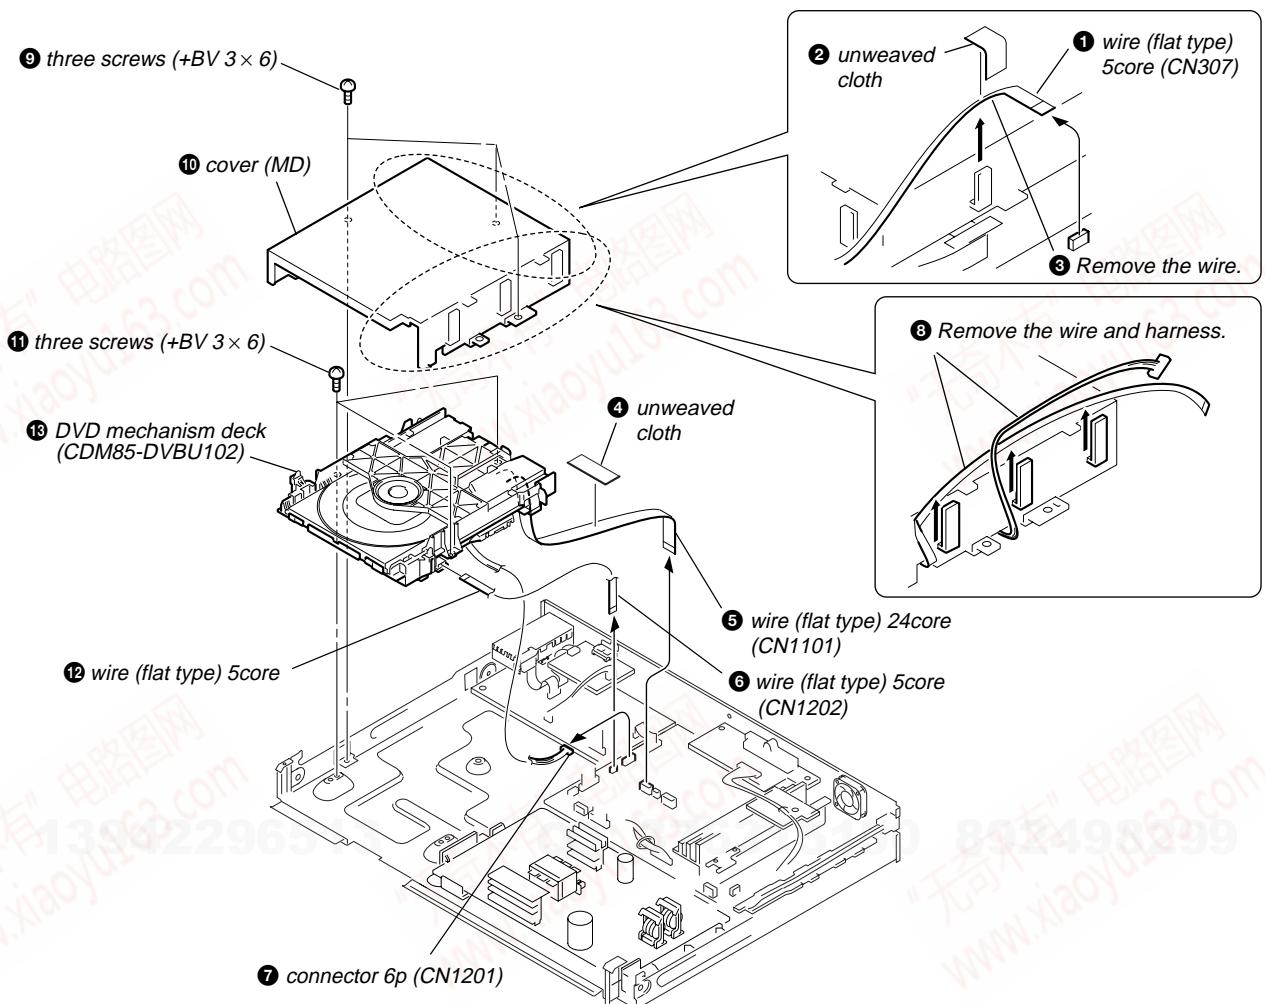


3-12. TRAY

- ①** Move the chuck cam in the direction of the arrow.

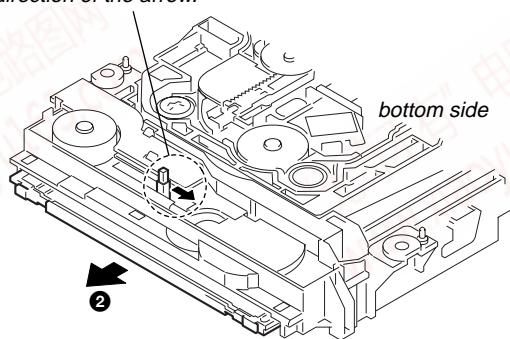


- ③** two claws

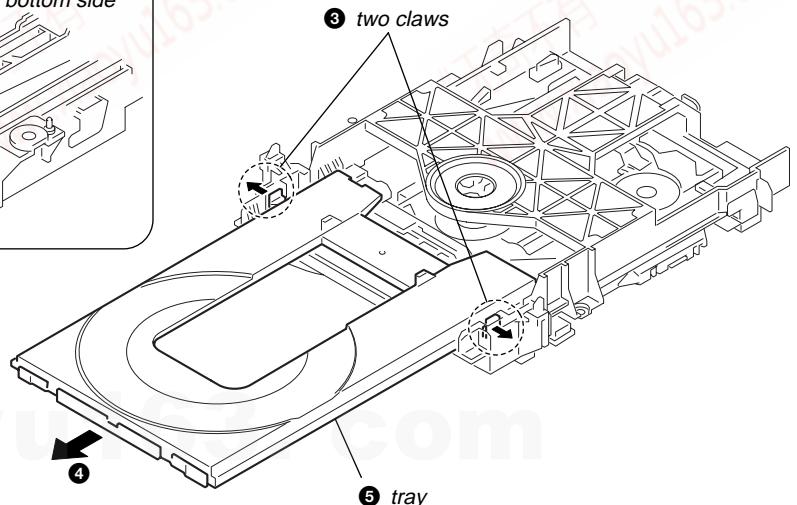


- ㉓ tray**

3-13. BELT, MS-203 BOARD

892498299

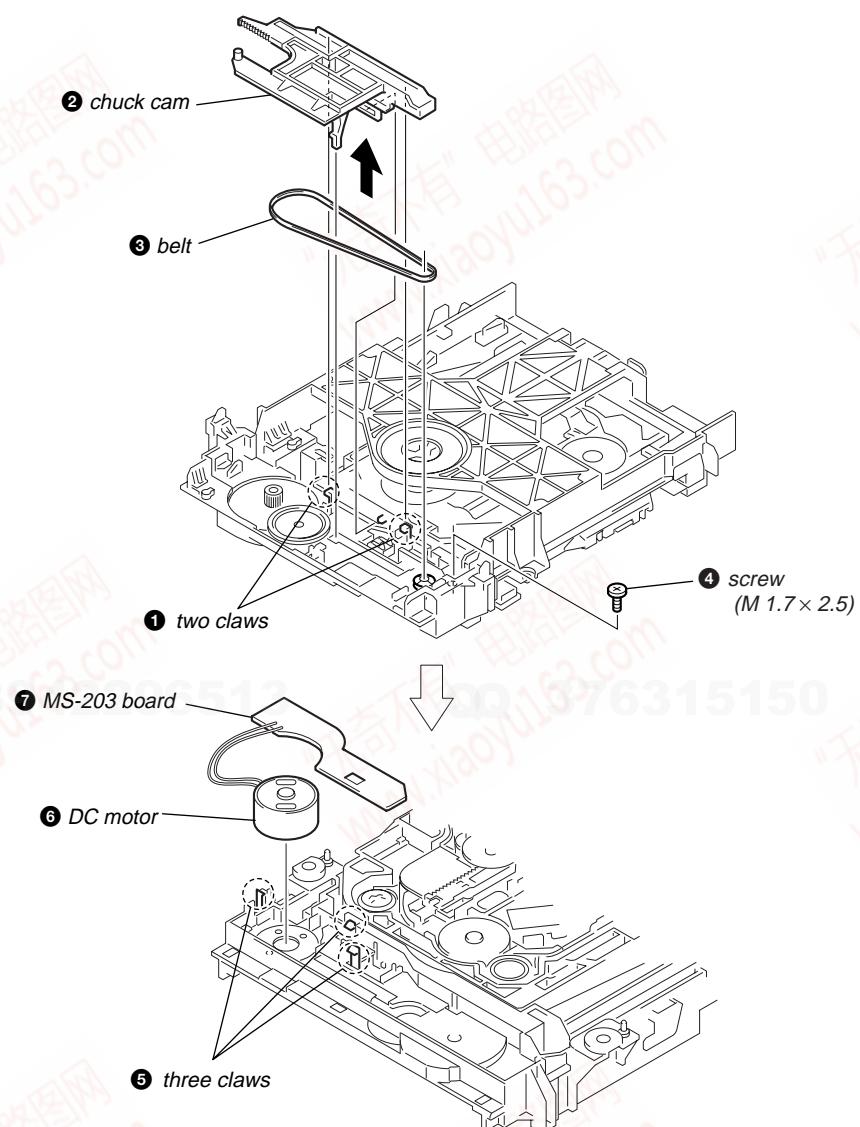

3-14. OPTICAL PICK-UP (KHM-313CAA)

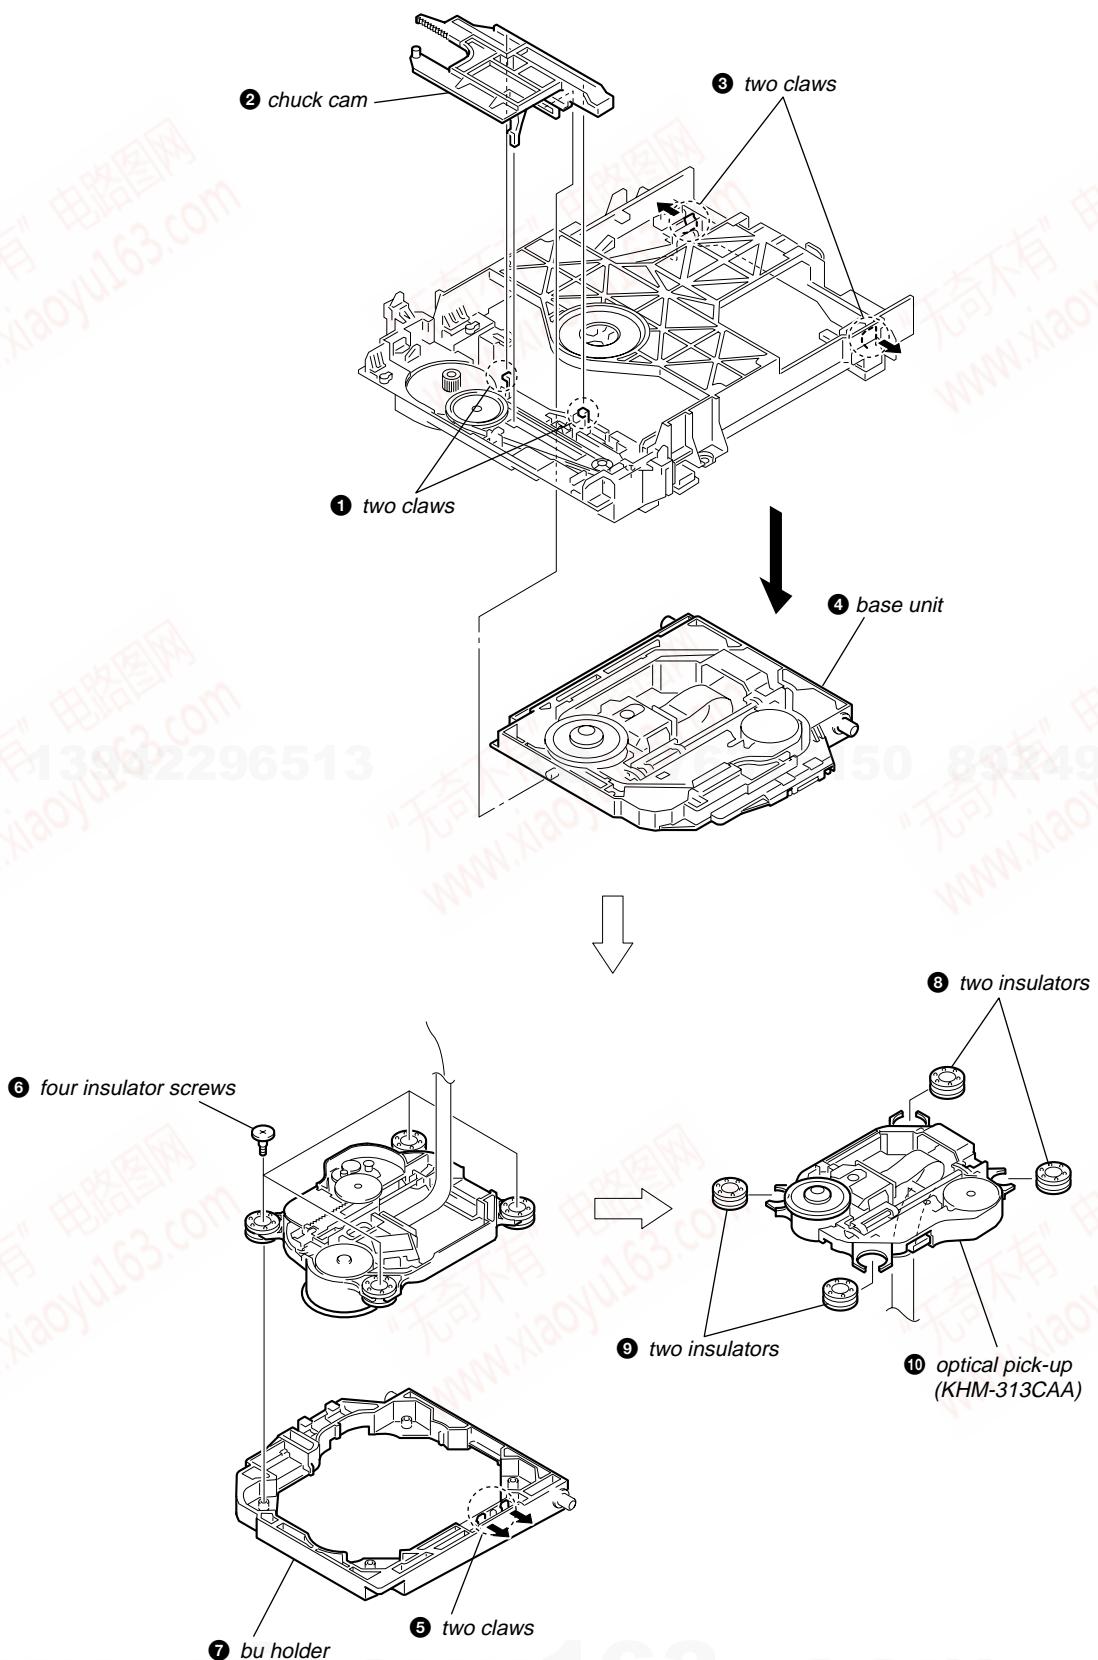

www.xiaoyu163.com

SECTION 4

TEST MODE

Note: Incorrect operations may be performed if the test mode is not entered properly.
In this case, press the **[I/O]** button to turn the power off, and retry to enter the test mode.

1. Cold Reset

- The cold reset clears all data including preset data stored in the RAM to initial conditions. Execute this mode when returning the set to the customers.

Procedure:

- Press the **[I/O]** button to turn the power on.
- Press three buttons **[■]**, **[▲]** and **[I/O]** simultaneously.
- When this button is operated, display as “COLD RESET” for a while and all of the settings are reset.

2. Panel Test Mode

- This mode is used to check the software version, FL, LED and KEY.

2-1. Display Test Mode

Procedure:

- Press the **[I/O]** button to turn the power on.
- Press three buttons **[II]**, **[◀]** and **[▲]** simultaneously.
- When the display test mode is activated, all segments are turned on.
- To exit from this mode, press three buttons **[II]**, **[◀]** and **[▲]** simultaneously.

2-2. Version Test Mode

Procedure:

- When the display test mode is activated, press the **[◀]** button and the message “DS2” (DZ230/DZ231), “DS2+” (HDZ235) are displayed, the version test mode is activated.
- Whenever the **[◀]** button is pressed, the display changes in the following order.
“DS2” (Model name) → “CE2*1” (Destination) → MC
*1: CE2 changes depending on destination.
- Press the **[▶]** button and the date of the software production is displayed.
- Press the **[▶]** button again and the version is displayed.
- To exit from this mode, press three buttons **[II]**, **[◀]** and **[▲]** simultaneously.

2-3. Key Test Mode

Procedure:

- When the display test mode is activated, press the **[▶]** button, to select the key test mode.
- To enter the KEY test mode, the fluorescent indicator displays “K0 V0”. Each time an another button is pressed, “KEY” value increases. However, once a button is pressed, it is no longer taken into account. When all keys are pressed correctly, “K8 V0” is displayed.
- When the **VOLUME** control is turned in the direction of (+), “V0” is changed to “V1”, then ... “V9”.
When the **VOLUME** control is turned in the direction of (-), “V0” is changed to “V9”, then ... “V1”.
- To exit from this mode, press three buttons **[II]**, **[◀]** and **[▲]** simultaneously.

3. Disc Tray Lock

The disc tray lock function for the antitheft of an demonstration disc in the store is equipped.

Setting Procedure :

- Press the **[I/O]** button to turn the set on.
- Press the **FUNCTION** button to set DVD function.
- Insert a disc.
- Press the **[■]** button and the **[▲]** button simultaneously for five seconds.
- The message “LOCKED” is displayed and the tray is locked.

Releasing Procedure :

- Press the **[■]** button and the **[▲]** button simultaneously for five seconds again.
- The message “UNLOCKED” is displayed and the tray is unlocked.

Note: When “LOCKED” is displayed, the tray lock is not released by turning power on/off with the **[I/O]** button.

4. DVD Ship Mode

Use this mode when returning the set to the customer after repair.

Procedure:

- Press the **[I/O]** button to turn the set on.
- Press the **FUNCTION** button to set the function “DVD”.
- Remove all discs, and then press two buttons **[▶]** and **[I/O]** simultaneously.
- After a message “MECHA LOCK” is displayed on the fluorescent indicator tube, pull out the AC plug.
- To exit from this mode, press the **[I/O]** button to turn the set on.

5. AM Step Change

- A step of AM channels can be changed over between 9 kHz and 10 kHz.

Procedure:

- Press the **[I/O]** button to turn the set ON.
- Select the function “TUNER”, and press **FUNCTION** button to select the BAND “AM”.
- Press the **[I/O]** button to turn the set OFF.
- Press two buttons **[▶]** and **[I/O]** simultaneously, and the display of fluorescent indicator tube changes to “AM 9k STEP” or “AM 10k STEP”, and thus the channel step is changed over.

6. Product Out

This mode moves the optical pick-up to the position durable to vibration and clears all data including preset data stored in the RAM to initial conditions. Use this mode when returning the set to the customer after repair.

Procedure:

- Press the **[I/O]** button to turn the power on.
- Press the **FUNCTION** button to set the function “DVD”.
- Remove all discs, and then press three buttons **[▶]**, **[▲]** and **[I/O]** simultaneously.
- After the “STANDBY” blinking display finishes, the message “MECHA LOCK” is displayed on the fluorescent indicator tube disconnect the AC power plug, then the ship mode is set.

DVD SECTION

7-1. GENERAL DESCRIPTION

The IOP measurement allows you to make diagnosis and adjustment simply by using the remote commander and monitor TV. The instructions, diagnosis results, etc. are given on the on-screen display (OSD).

Be sure to execute the IOP measurement when a BU (Base Unit) is replaced.

7-2. HOW TO ENTER TEST MODE

While pressing the **[■]** and **[▲]** buttons simultaneously, turn **VOLUME** control in the direction of (+) with the DVD player in power on.

The Test Mode starts, displayed “SERVICE IN” on this model display then the menu shown below will be displayed on the TV screen.

* The display of the “Model Name” of the “Remocon Diagnosis Menu” change with the model and the destination. Refer to below on the model name.

DZ230/231 : DS2

HDZ235 : DS2PLUS




*1: Changes depending on destination

The menu above is the Remocon Diagnosis Menu screen which consists of five main functions. At the bottom of the menu screen, the model name and IF-con version. To exit from the Test Mode, press the power button on the remote commander.

7-3. EXECUTING IOP MEASUREMENT


In order to execute IOP measurement, the following standard procedures must be followed.

- (1) In power on, while pressing the **[■]** and **[▲]** buttons simultaneously, turn the **VOLUME** control in the direction of (+).

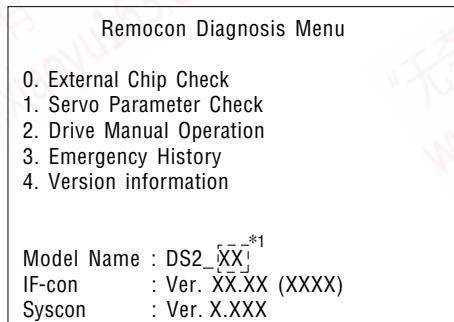


*1: Changes depending on destination

- (2) Select “2. Drive Manual Operation” by pressing the **[2]** button on the remote commander. The screen will appear as shown.

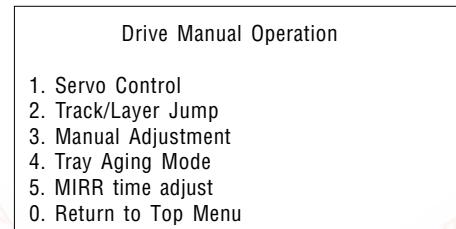


- (3) Select “3. Manual Adjustment” by pressing the **[3]** button on the remote commander. The screen will appear as shown.

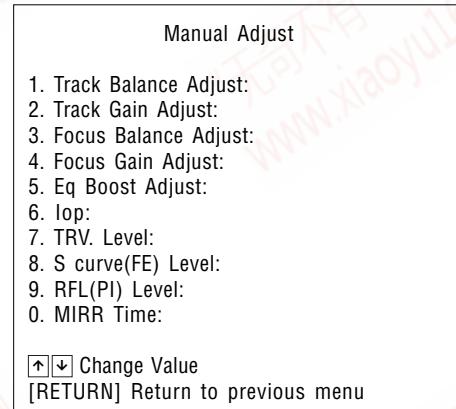

- (4) Select “6.IOP” by pressing the **[6]** button on the remote commander.

- (5) Wait until a hexadecimal number appear.

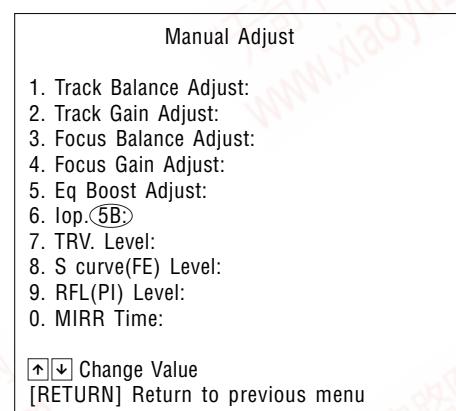

- (6) Convert each data from hexadecimal to decimal using conversion table.

- (7) Please find the label on the rear of the BU (Base Unit). The default IOP value is written in the label.

- (8) Subtract between these two values.

- (9) If the remainder is smaller than 93 (decimal), then it is OK. However if the value is higher than 93, then the BU is defective and need to be change.


- (10) Press the **[RETURN]** button on the remote commander to return back to previous menu.

- (11) Press the **[0]** button on the remote commander to return to Top Menu.

7-4. EMERGENCY HISTORY


To check the emergency history, please follow the following procedure.

- (1) From the Top Menu of Remocon Diagnosis Menu, select “3. Emergency History Check” by pressing the [3] button on the remote commander. The following screen appears on the on-screen display.

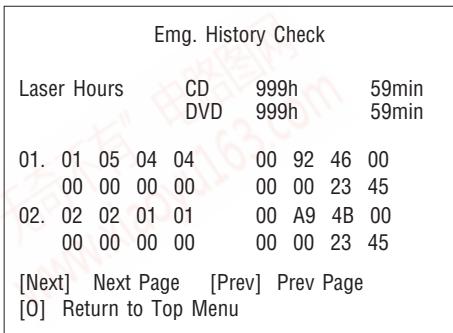

- (2) You can check the total time when the laser is turned on during playback of DVD and CD from the above menu. The maximum time, which can be displayed are 999h 59min.
- (3) You can check the error code of latest 10 emergency history from the above menu. To view the previous or next page of emergency history, press [◀] or [▶] button on the remote commander. The error code consists of the following three blocks. The first block indicates the error code. The second block indicates the parameter and the third block indicates the time of error code as shown below.

• Error Code

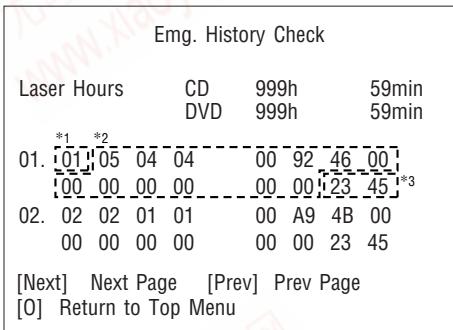

*1 : Error Code

*2 : Parameter of error code

*3 : Time of error code

The meaning of error code is as below:

- 01: Communication error (No reply from syscon)
- 02: Syscon hung up
- 03: Power OFF request when syscon hung up
- 19: Thermal shutdown
- 24: MoveSledHome error
- 25: Mechanical move error (5 Changer)
- 26: Mechanical move stack error
- 30: DC motor adjustment error
- 31: DPD offset adjustment error
- 32: TE balance adjustment error
- 33: TE sensor adjustment error
- 34: TE loop gain adjustment error
- 35: FE loop gain adjustment error
- 36: Bad jitter after adjustment
- 40: Focus NG
- 42: Focus layer jump NG

52: Open kick spindle error

51: Spindle stop error

60: Focus on error

61: Seek fail error

62: Read Q data/ID error

70: Lead in data read fail


71: TOC read time out (CD)

80: Can't buffering

81: Unknown media type


7-4-1. Clear the Laser Hour

Press [DISPLAY] button and then press [CLEAR] button on the remote commander. The data for both CD and DVD data are reset.

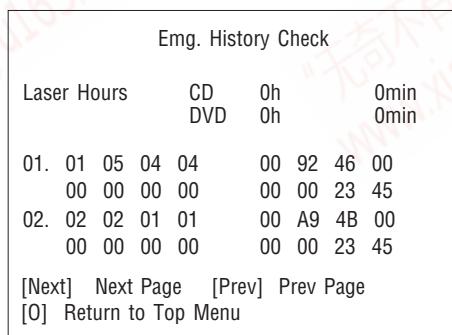


7-4-2. Clear the Emergency History

Press [DVD TOP MENU] button and then press [CLEAR] button on the remote commander. The error code for all emergency history would be reset.

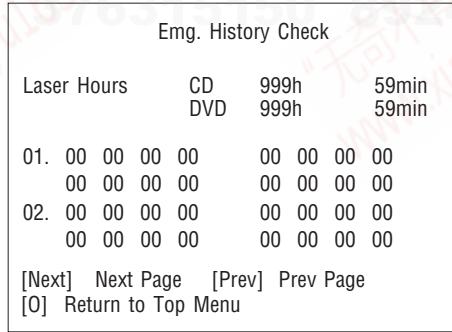

7-4-3. Clear the Initialize Setup Data

Press [DVD MENU] button and then press [CLEAR] button on the remote commander.

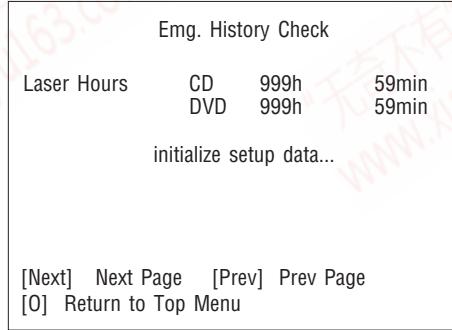

7-4-4. Return to the Top Menu of Remocon Diagnosis Menu

Press [0] button on the remote commander.

• Check Version Information

To check the version information, please follow the following procedure.

- From the Top Menu of Remocon Diagnosis Menu, select "4. Version Information" by pressing the [4] button on the remote commander. The following screen appears on the on-screen display.




To return to the Top Menu of Remocon Diagnosis Menu, press [0] button on the remote commander.

7-5. AUTOMATIC ACOUSTIC FIELD CALIBRATION MICROPHONE TEST MODE

Procedure:

- Press the [I/O] button to turn the power on.
- Press the [FUNCTION] button to set the function "DVD".
- Insert ECM-AC2 supplied as an accessory into the AUDIO IN/A.CAL MIC jack.
- While pressing the [II] and [H] buttons simultaneously, turn the [VOLUME] control in the direction of (+).
- Confirm that the following are shown on the display panel.
 - The JACK inserted/non-inserted detection display and the STEREO/MONO detection display.
 - Presence of DIGITAL voice input to the microcomputer. (OK: input, NG: no input)
 - The value of the MIC input to the microcomputer. (shown "255h")

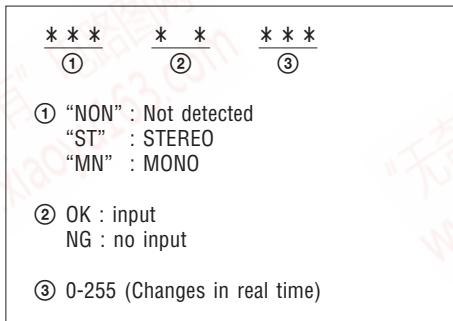


8. DEMO PLAY OUT

It is a mode to release the demonstration reproduct by the dedicated demonstration disc.

- During playback the DEMO Disc, press the [■] and [▷] buttons for five seconds simultaneously.
- The message "DEMO OFF" is displayed, a mode to reproduct the demonstration is released.

9. DIGITAL MEDIA PORT TEST (DZ230/DZ231)

- Connect the DMPORT CHECK JIG (P/N: J-2501-309-A) with the terminal DMPORT.
- Press the [I/O] button to turn the power on.
- Confirm that both LEDs of the DMPORT confirmation JIG lights. (Confirmation the power supply line.)
- Set the [FUNCTION] button with "DMPORT" on this model.
- Press the [II], [H] buttons and turn the [VOLUME] control in the direction of (+) simultaneously, the DMPORT test mode is activated.
- It is confirmed that "DMPORT OK" is displayed on this set display. (Confirmation of communication line)
- To a pinjack of the DMPORT confirmation JIG input information relevant to audio signal (sine-wave 1.0Vrms) and composite video signal (white 100% 1.0Vp-p, color bar, etc.)
- Confirm the output of speakers and monitor TV. (Confirmation of analog signal)
- To exit from this mode, press the [II], [H] buttons and turn the [VOLUME] control in the direction of (+).

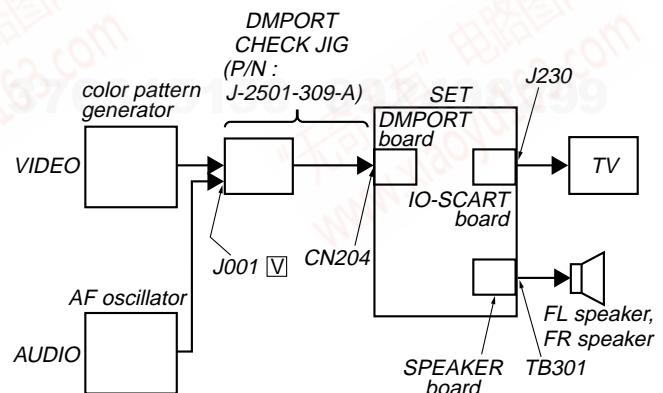

10. DMPORT DEVICE TEST (DZ230/DZ231)

Procedure:

- To enter this test mode, press the [■], [FUNCTION] buttons and turn the [VOLUME] control in the direction of (+) simultaneously.
- To exit from this test mode, press the [I/O] button to turn the power off.

11. PROTECTION FACTOR (SD DETECTION/ DC DETECTION) IDENTIFICATION TEST MODE

When an error is detected, the FL tube alternately displays “PROTECTOR ⇔ PUSH POWER”.

- ↓ Press the **[V/∅]** button.
- ↓ * Buttons other than the **[V/∅]** button are invalid.

“STANDBY” blinks three times on the FL tube.

- ↓ The protection release state (POWER OFF) is established.
(No FL tube display)

- ↓ Press the **[V/∅]** button.
- The power to the system turns on, and the normal operation is established. (Restore)

During the protection state:

1. If the AC plug is connected or disconnected during the protection state, the protection state is released, and the normal operation is established. (The protection state is not maintained.)
2. The protection factor is displayed by pressing the **FUNCTION**, **[▲]** and **[▶]** buttons at the same time during the protection state
(during the “PROTECTOR ⇔ PUSH POWER” display).
 - ⇒ When SD is detected: Repeats “SD DETECT ⇔ PUSH POWER”.
 - ⇒ When DC is detected: Repeats “DC DETECT ⇔ PUSH POWER”.

PL: SD detection

When the “L” output from the SD (shutdown) port on the S-MASTER POWER Driver is detected, the power system other than that of the FL tube is turned off, and the protection state is established.

DC detection

When the “L” output from the power/speaker error detection circuit (DC detection port) is detected for two seconds continually, the power system other than that of the FL tube is turned off, and the protection state is established.

SECTION 5 ELECTRICAL ADJUSTMENT


DVD SECTION

When the optical pick-up assy is replaced, perform the "EXECUTING IOP MEASUREMENT".

EXECUTING IOP MEASUREMENT (See page 23)

TUNER SECTION

[FM Tune Level Check]

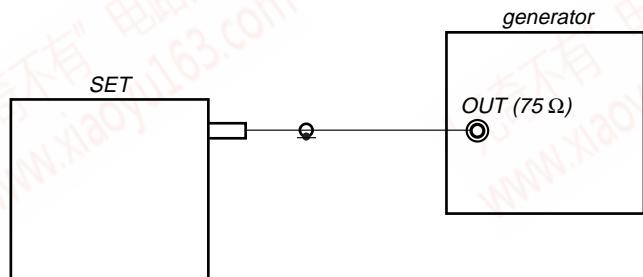

Procedure:

1. Turn the power on.
2. Input the following signal from Signal Generator to FM antenna input directly.
 - * Carrier Freq: A = 87.5 MHz, B = 98 MHz, C = 108 MHz
 - Deviation : 75 kHz
 - Modulation : 1 kHz
 - ANT input : 35 dBu (EMF)
- Note:** Please use 75 ohm "coaxial cable" to connect SG and the set. You cannot use video cable for checking.
Please use SG whose output impedance is 75 ohm.
3. Set to FM tuner function and tune A, B and C signals.
4. Confirm "TUNED" is lit on the display for A, B and C signals.

The mark of "TUNED" means "The selected station signal is received in good condition."

SECTION 6 DIAGRAMS

**THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)**

For Schematic Diagrams.

Note:

- All capacitors are in μF unless otherwise noted. (p: pF)
50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- \triangle : internal component.
- \square : panel designation.

Note:
The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.

Note:
Les composants identifiés par une marque \triangle sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- --- : B+ Line.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- Voltages and waveforms are dc with respect to ground in service mode.
- Waveforms are taken with a oscilloscope.
Voltage variations may be noted due to normal production tolerances.
no mark : DVD STOP
 $*$: Impossible to measure
- Voltages are taken with VOM (Input impedance $10\text{ M}\Omega$).
- Circled numbers refer to waveforms.
- Signal path.
 - \Rightarrow : AUDIO
 - $\Rightarrow\Rightarrow$: CD PLAY
 - $\Rightarrow\Rightarrow\Rightarrow$: DVD PLAY
 - $\Rightarrow\Rightarrow\Rightarrow\Rightarrow$: DIMPORT
 - $\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow$: TUNER
 - $\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow$: VIDEO
 - $\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow$: Y
 - $\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow$: CHROMA
 - $\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow$: COMPONENT VIDEO
 - $\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow$: R, G, B
 - $\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow\Rightarrow$: AUDIO IN
- Abbreviation
CND : Canadian model

For Printed Wiring Boards.


Note:

- --- : parts extracted from the component side.
- \circ : Through hole.
- \blacksquare : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)



Caution:

Pattern face side: Parts on the pattern face side seen from (SIDE B) the pattern face are indicated.
Parts face side: Parts on the parts face side seen from (SIDE A) the parts face are indicated.


- Indication of transistor.

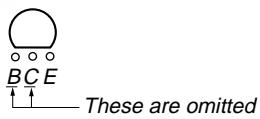


• Circuit Boards Location

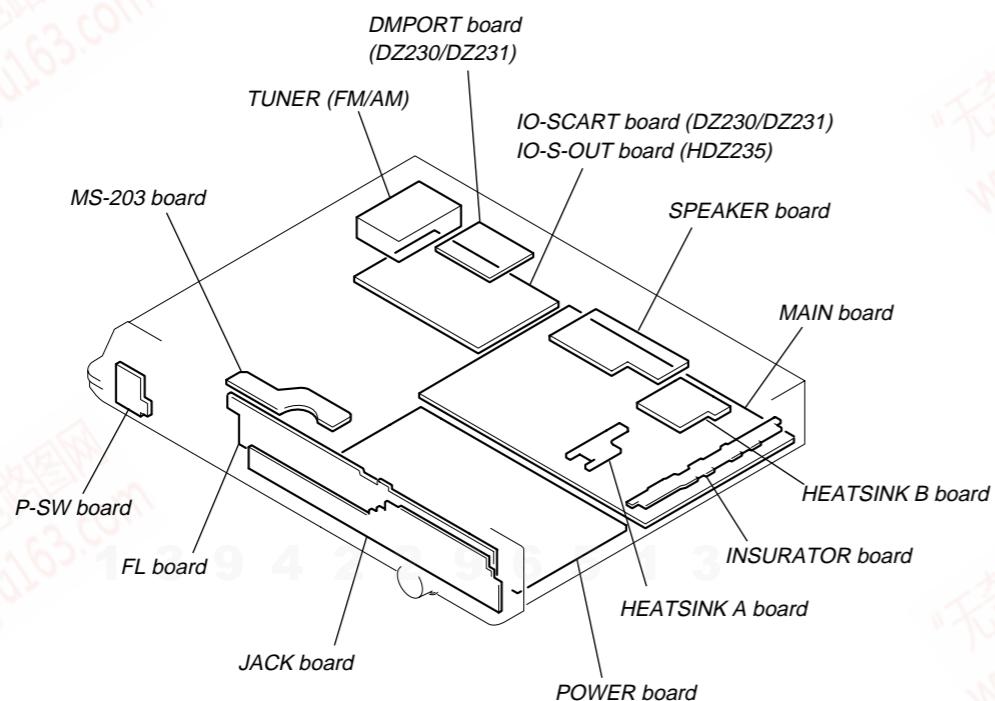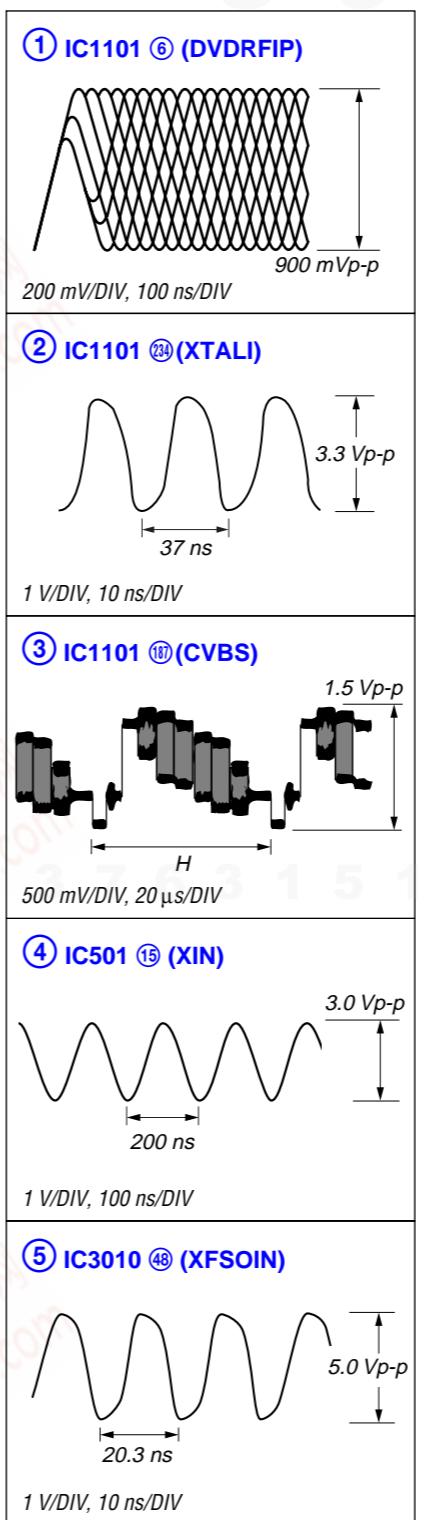• Waveforms
- MAIN Board -


- IO-SCART Board (DZ230/DZ231) -

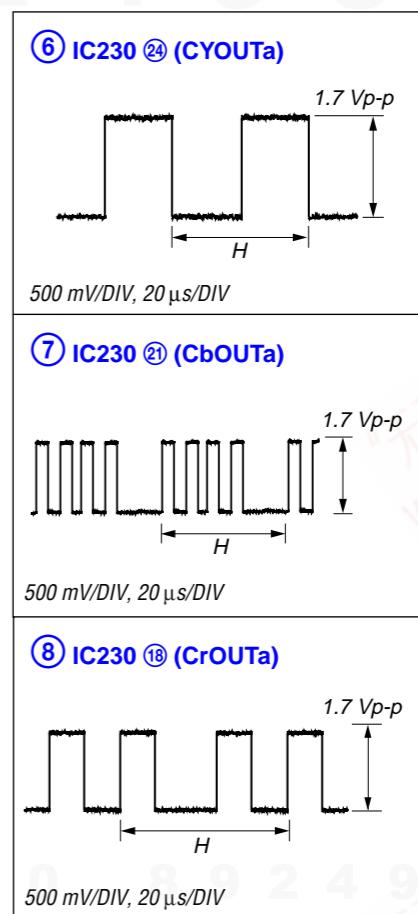


- IO-S-OUT Board (HDZ235) -

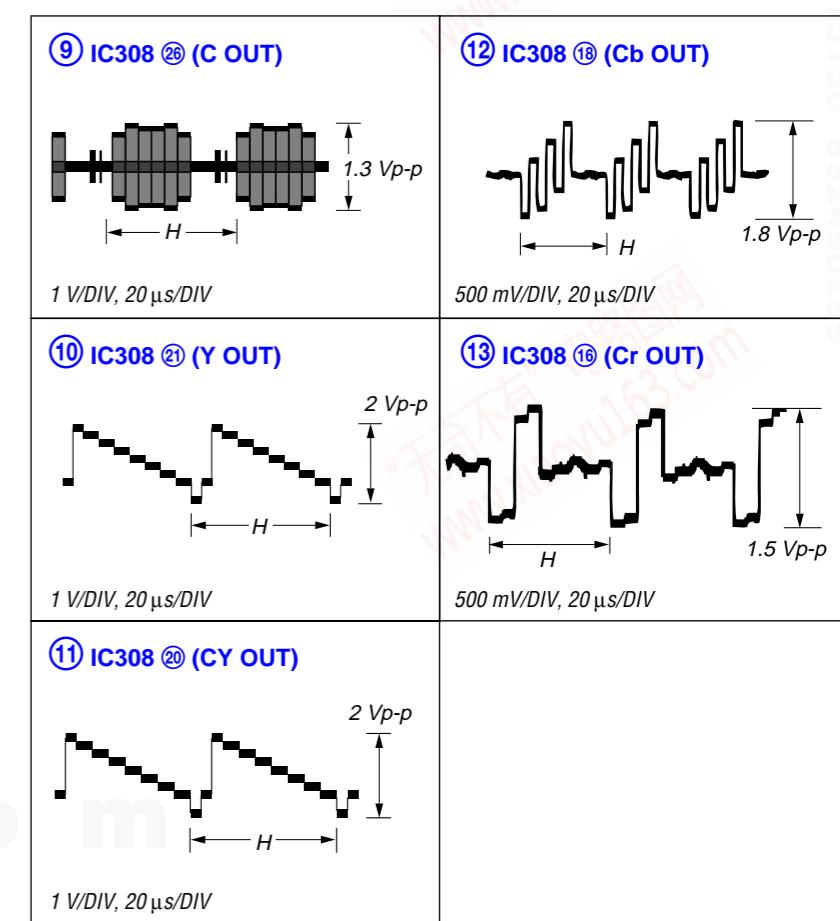


6-1. BLOCK DIAGRAM – RF SECTION –

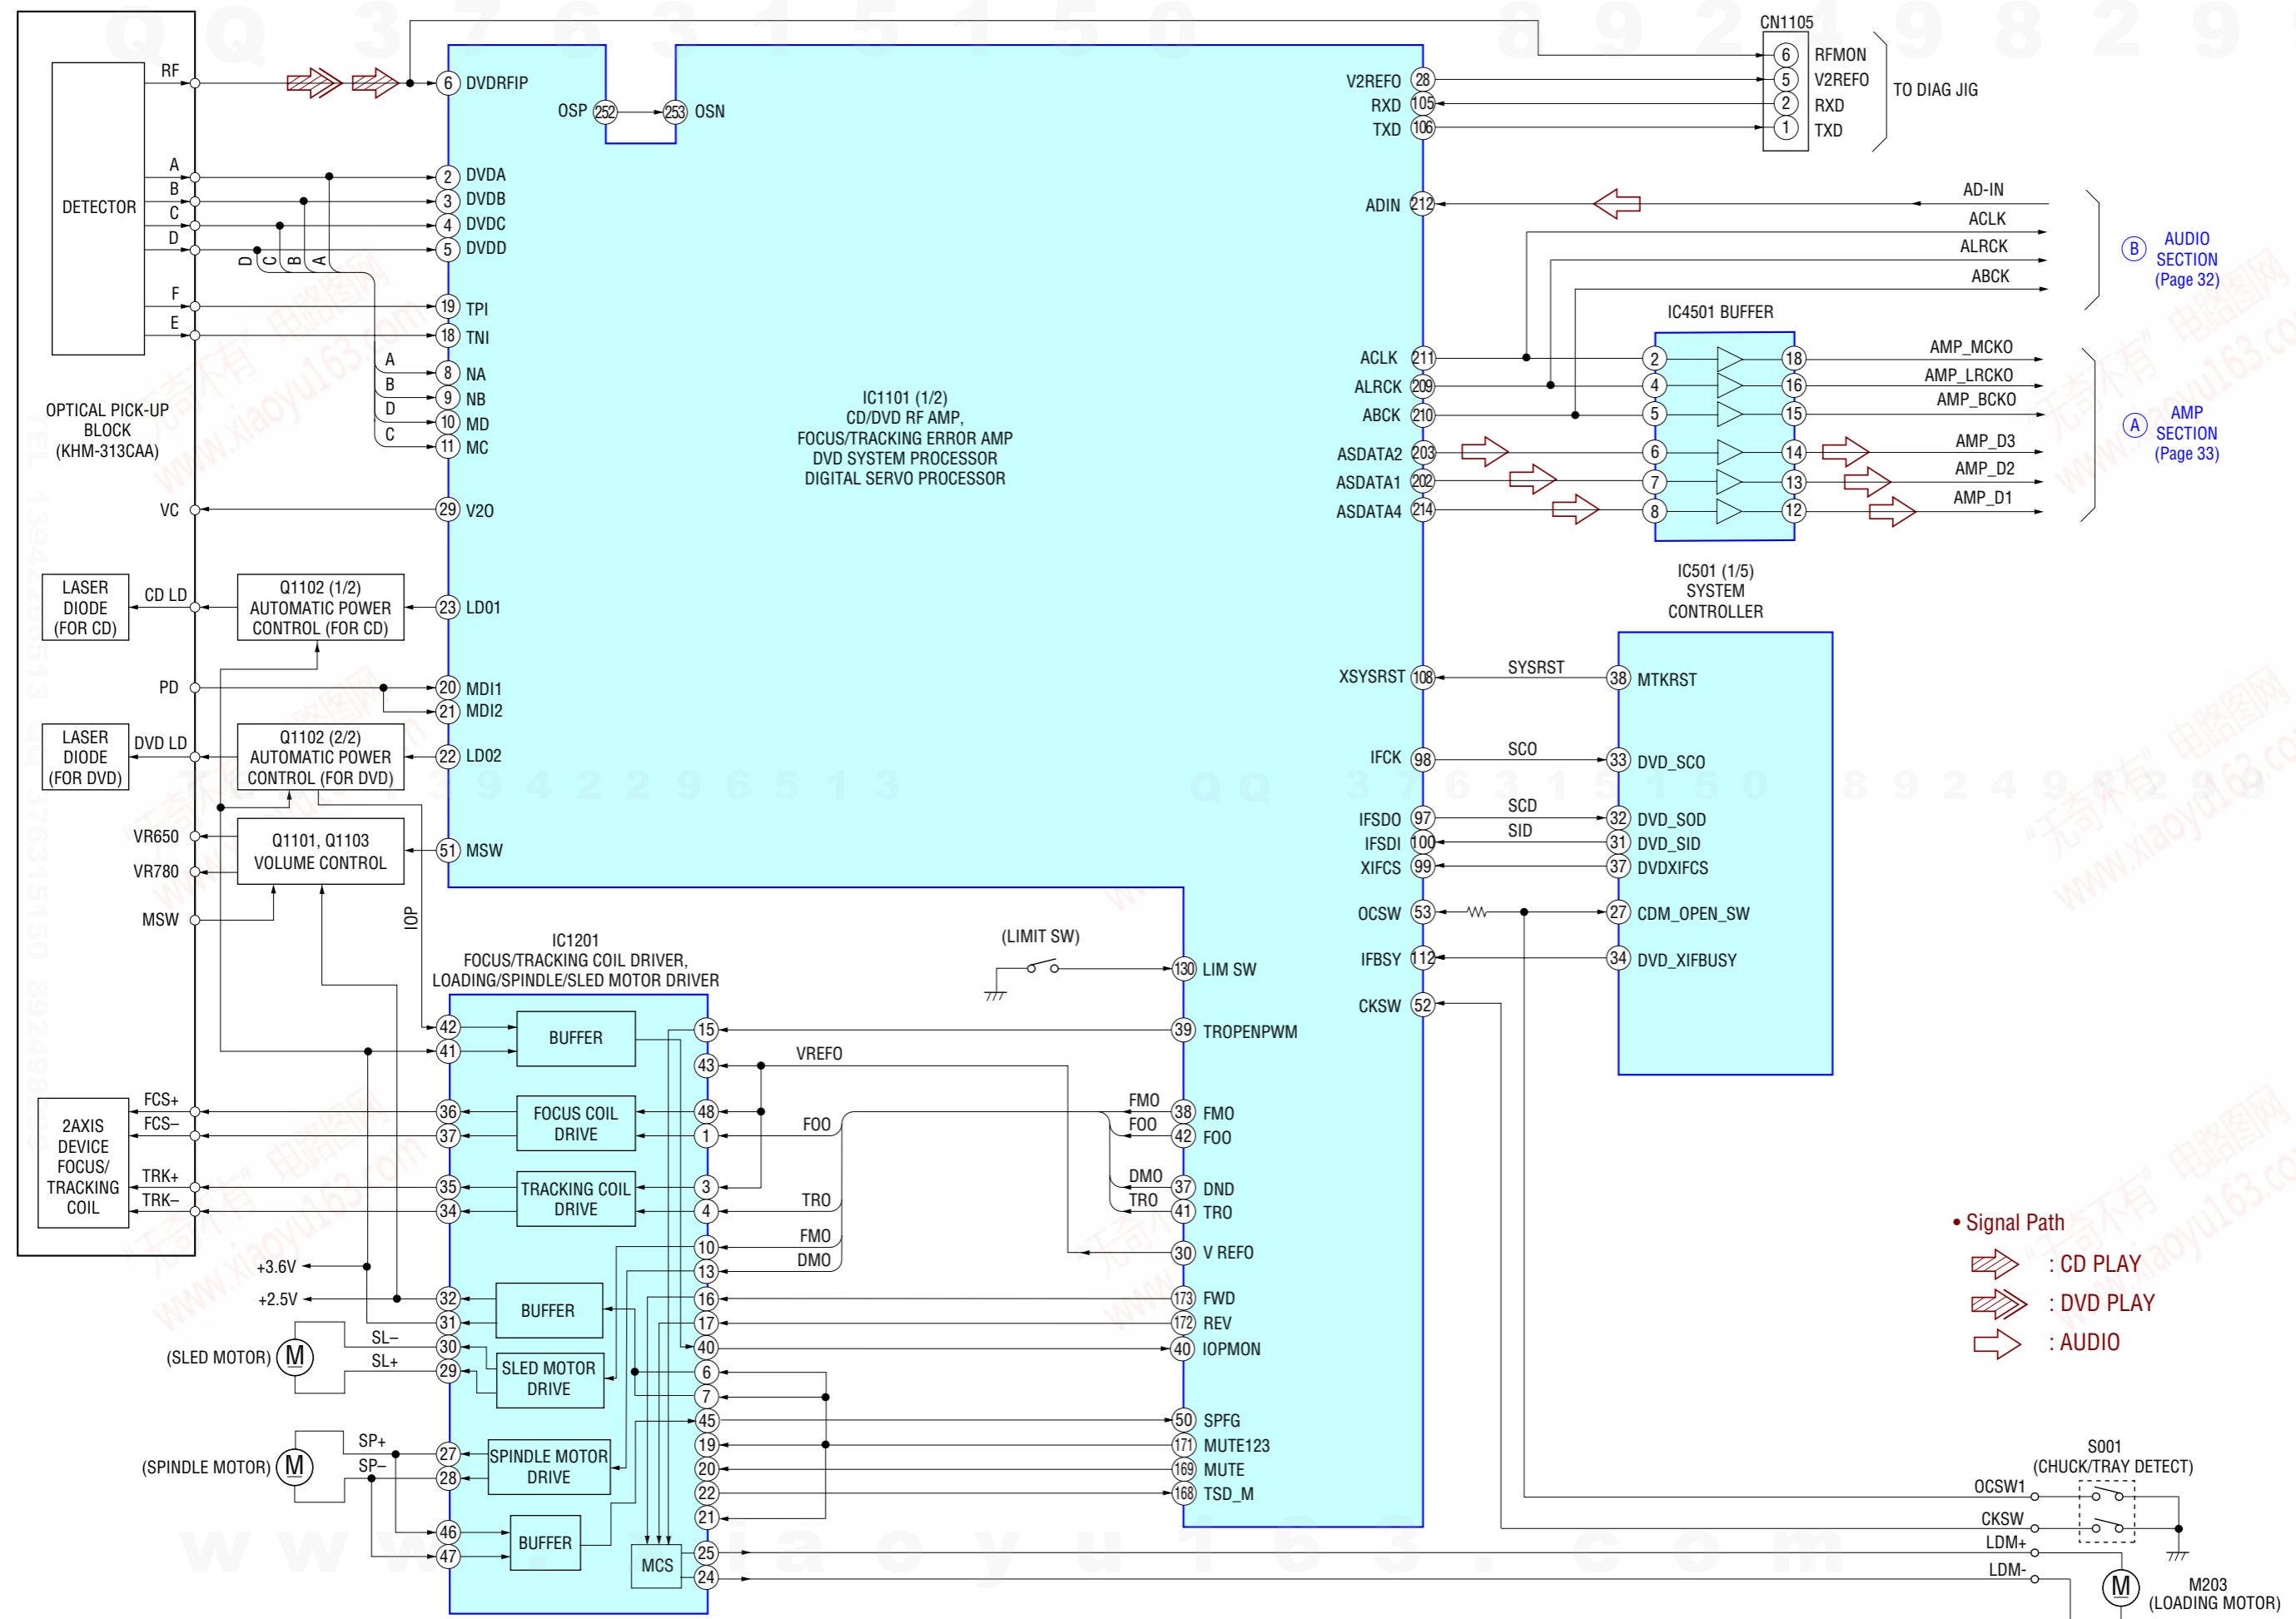


6-2. BLOCK DIAGRAM – VIDEO SECTION –

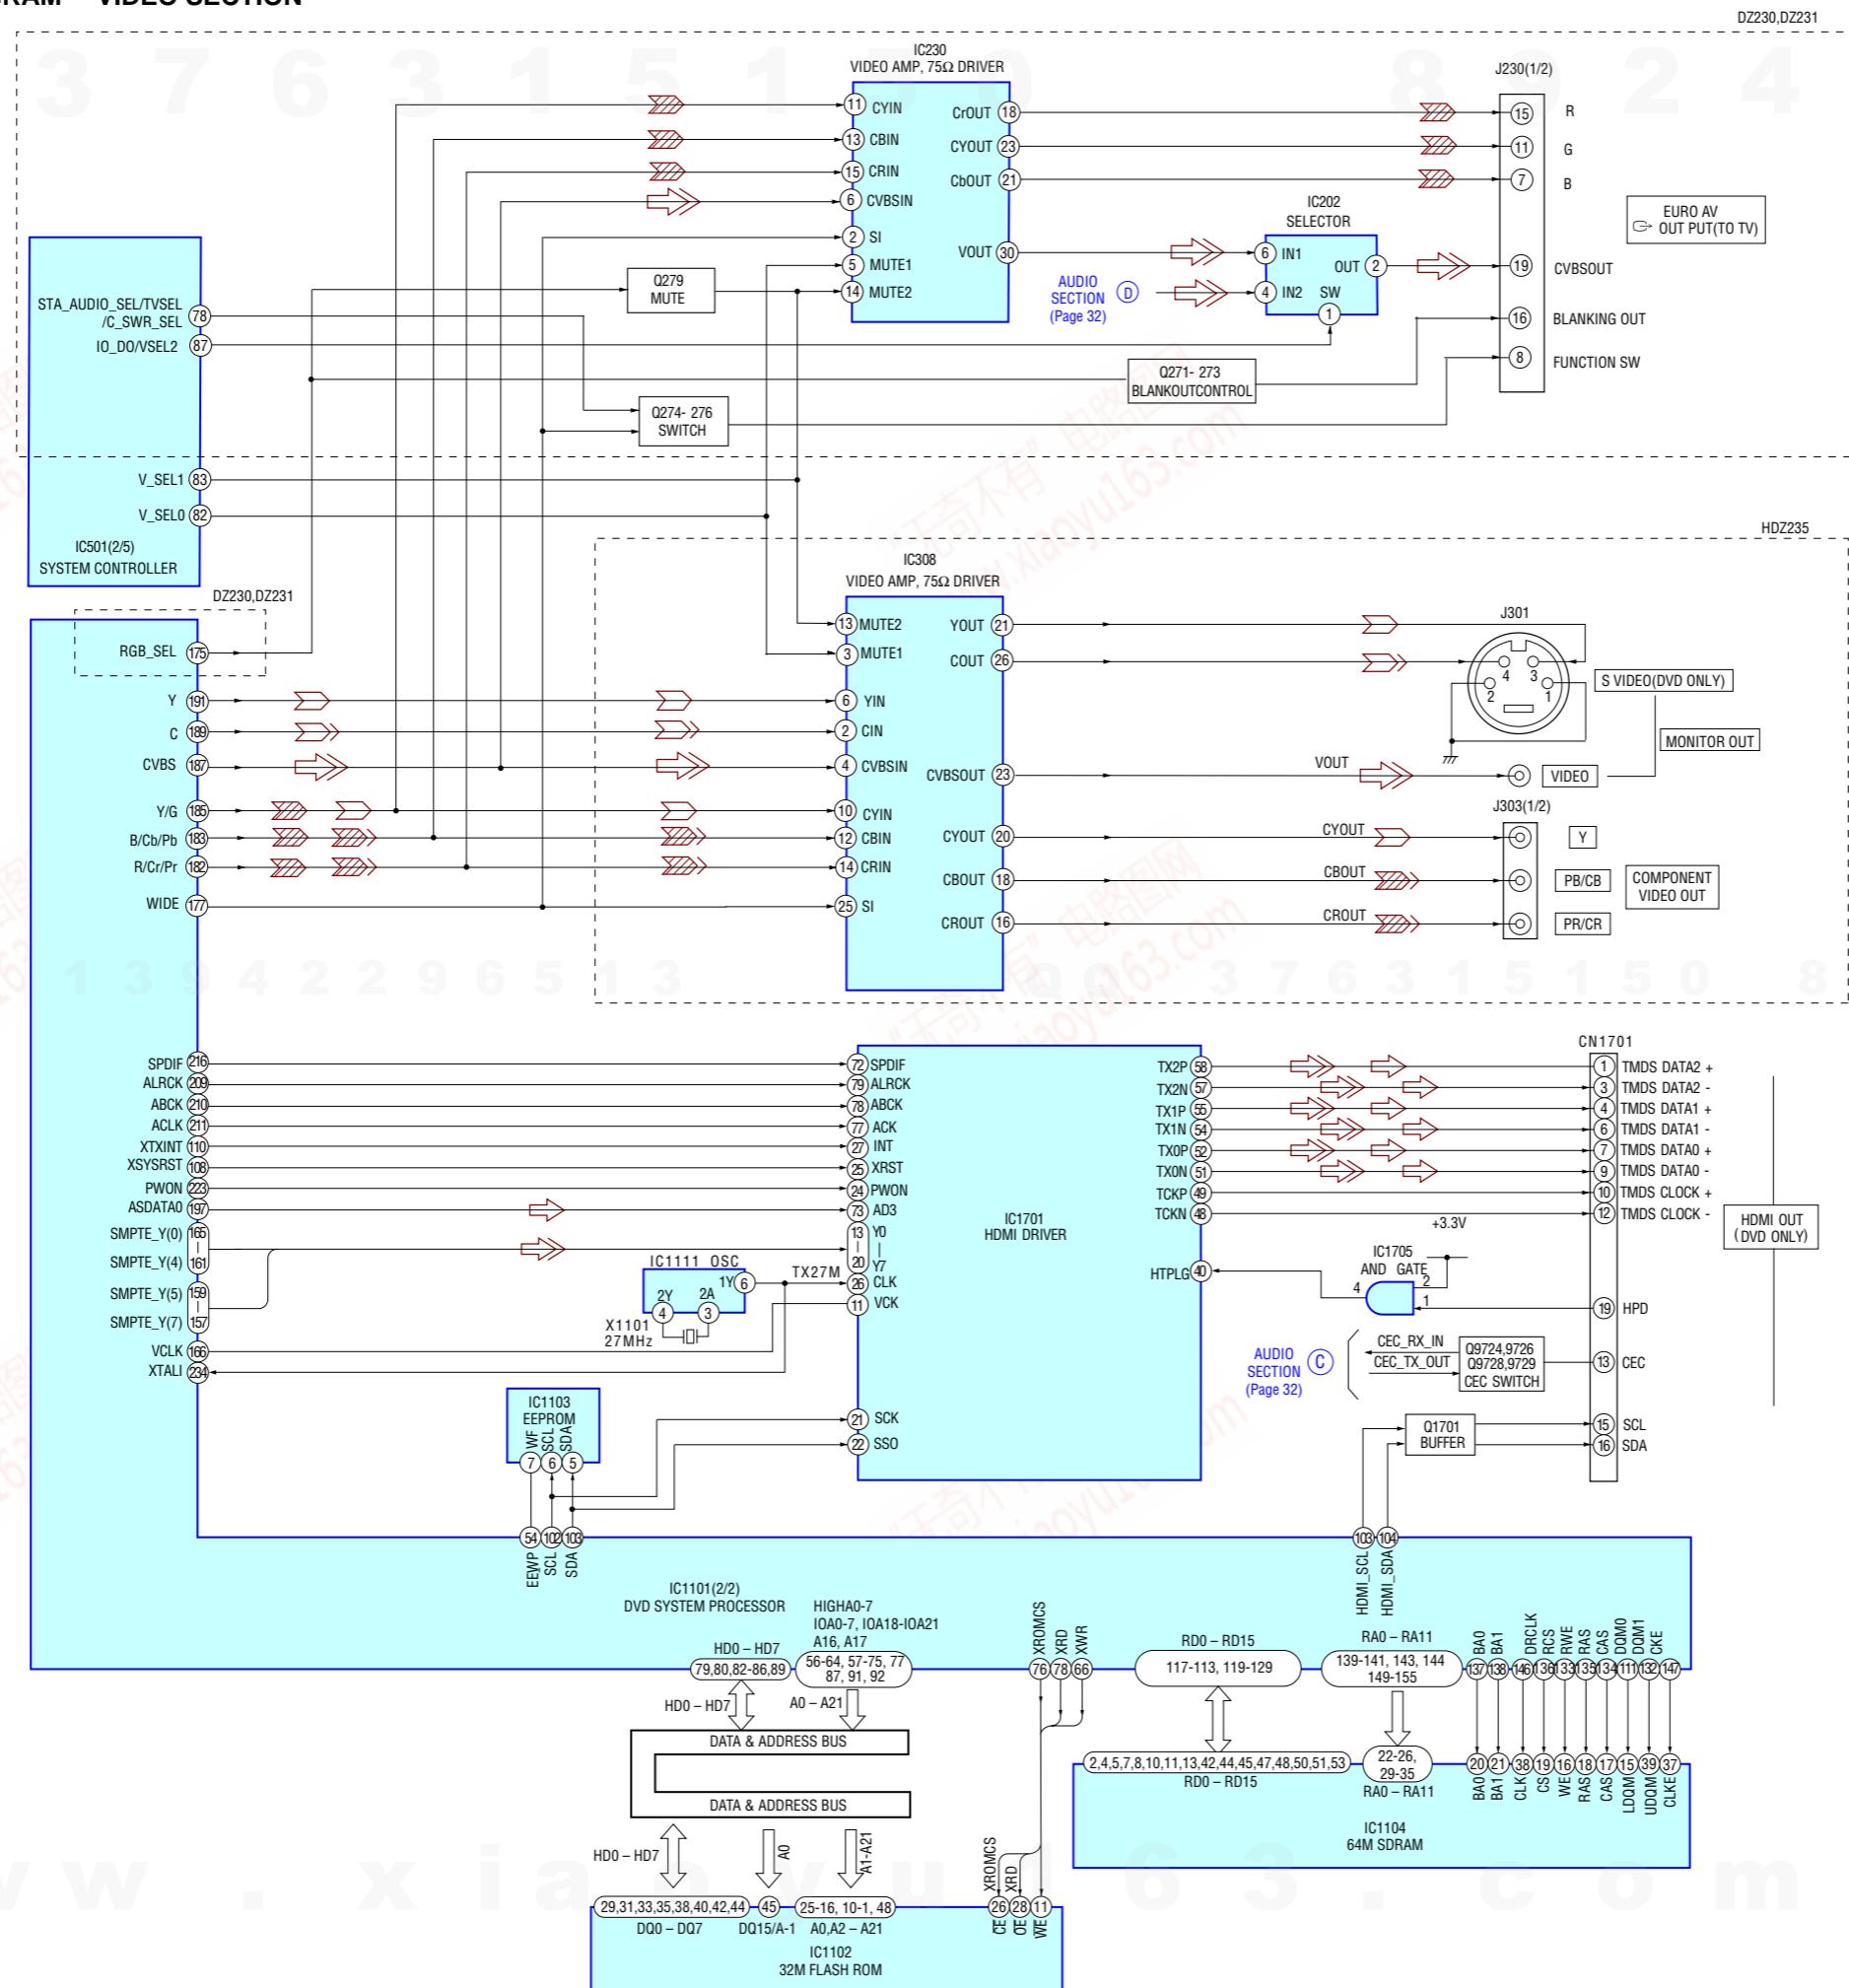


6-3. BLOCK DIAGRAM – AUDIO SECTION –

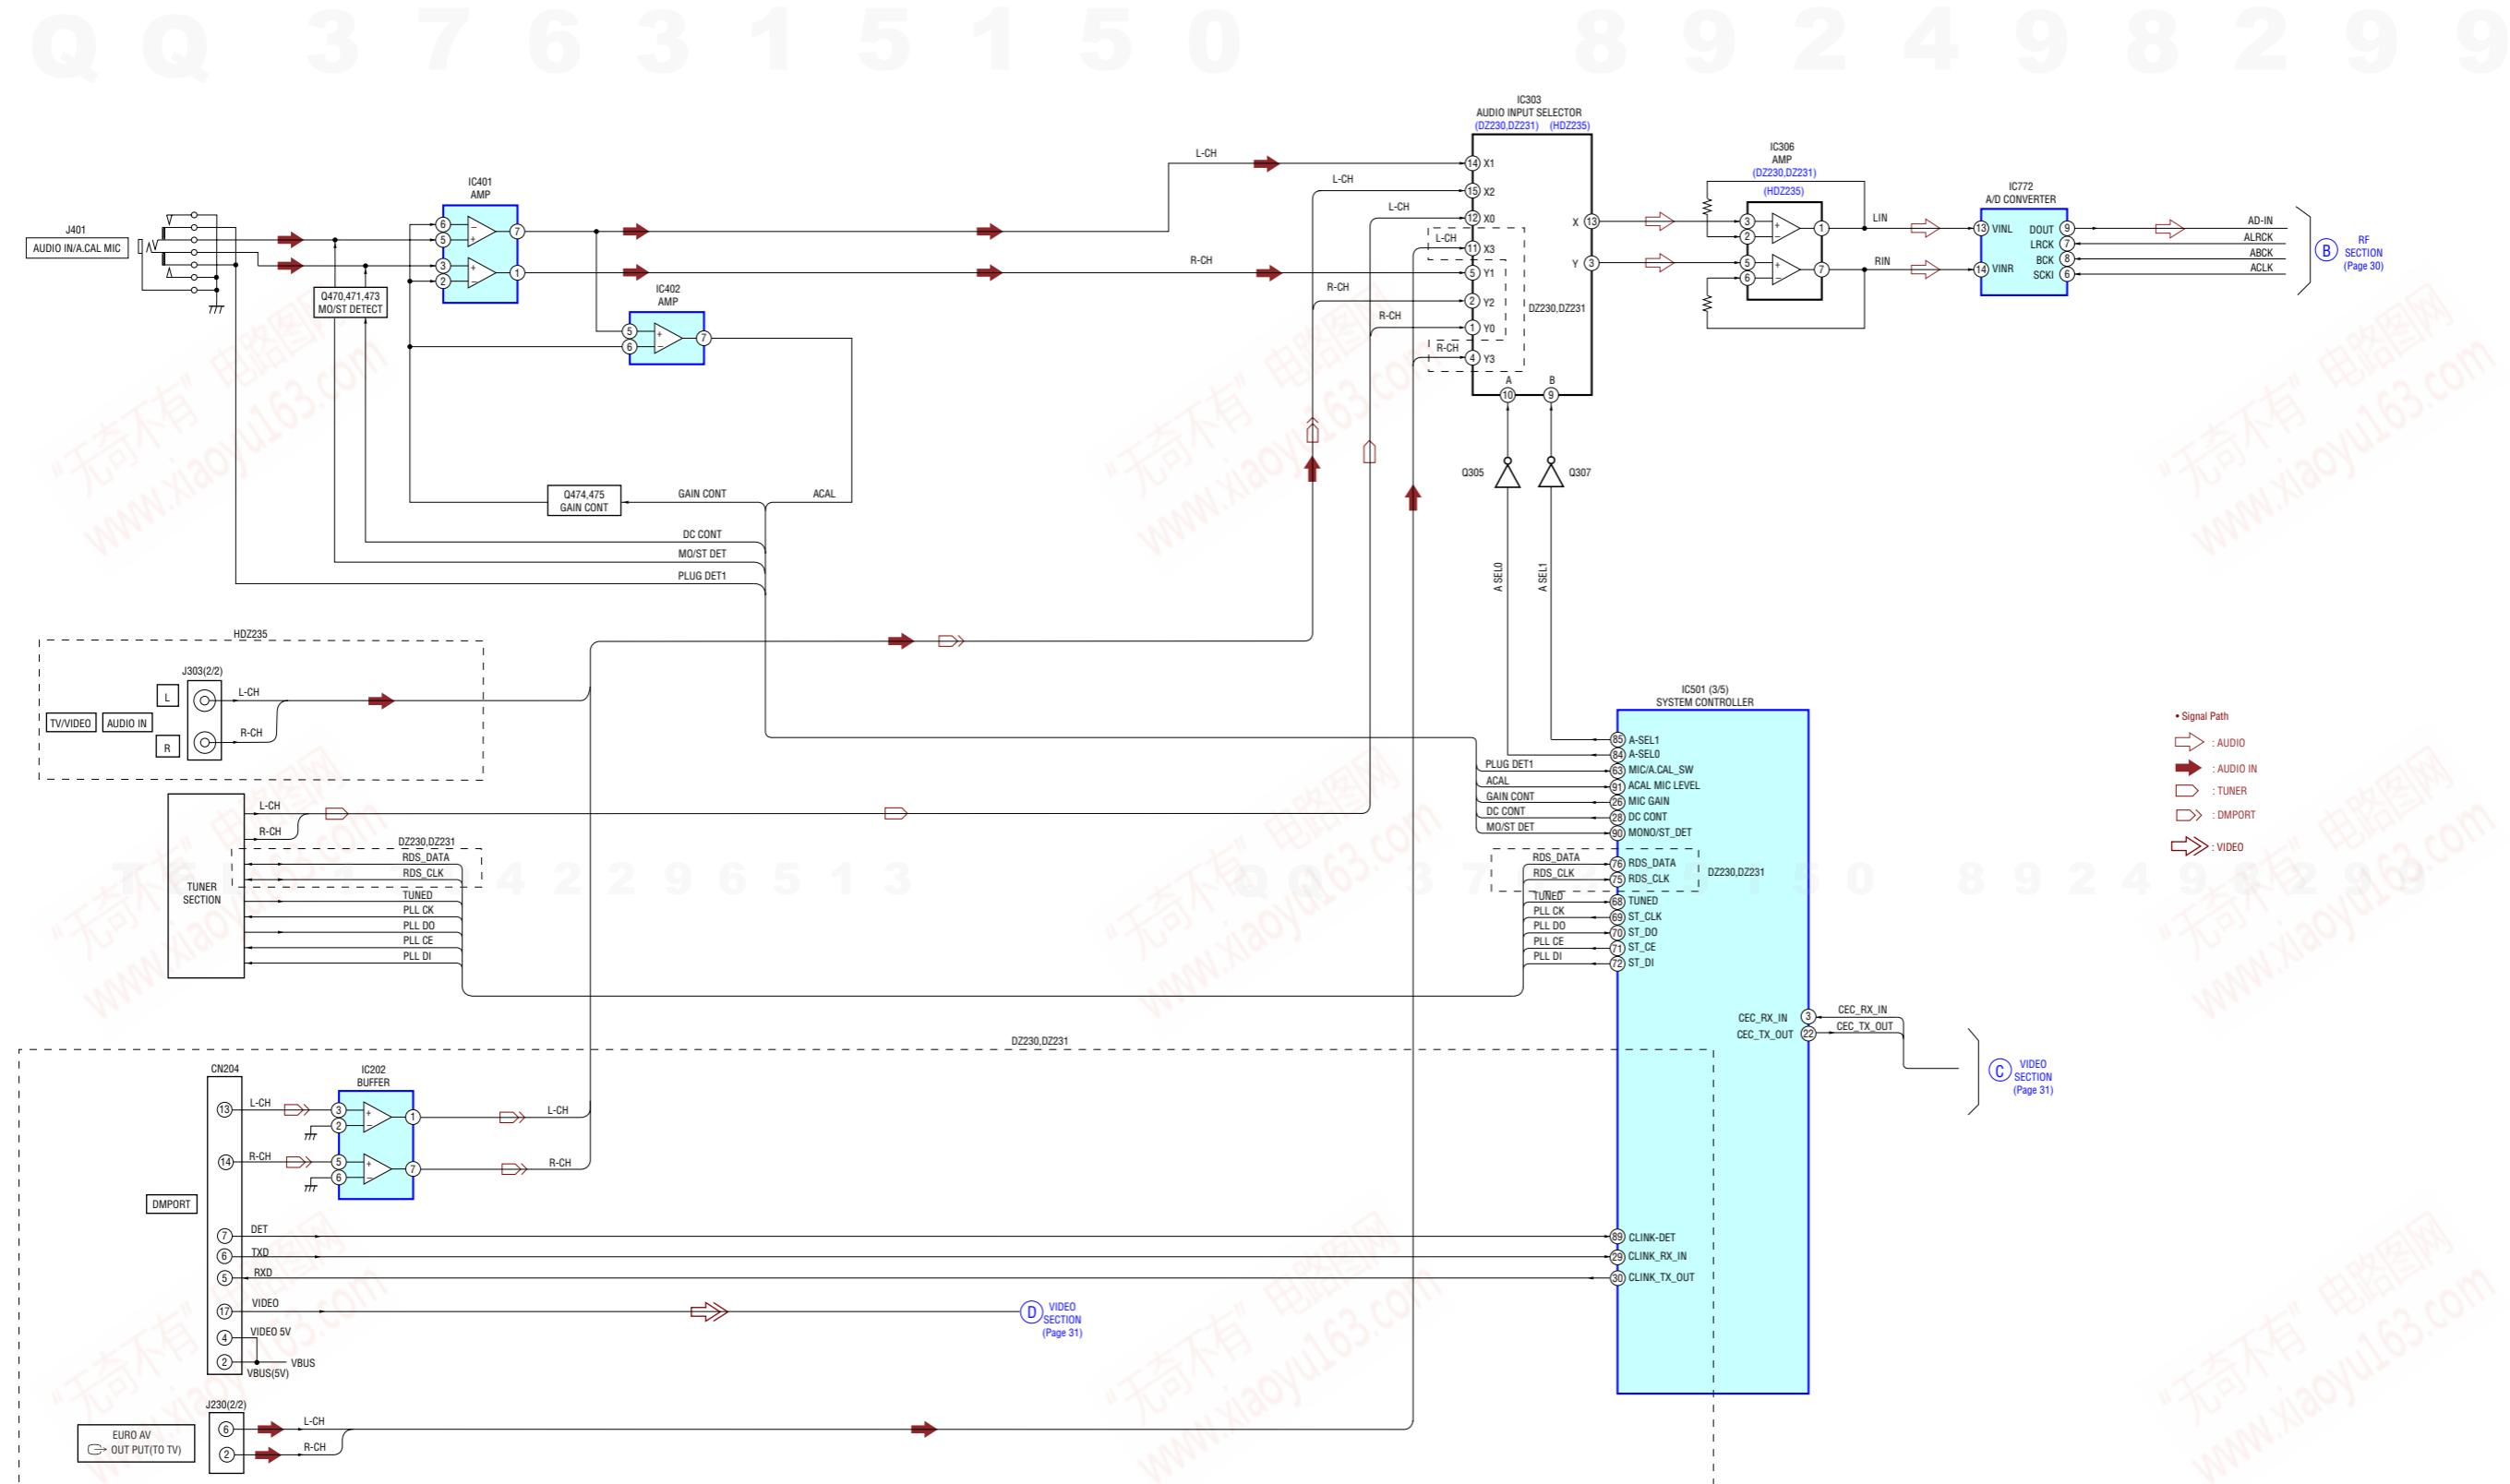

6-4. BLOCK DIAGRAM – AMP SECTION –

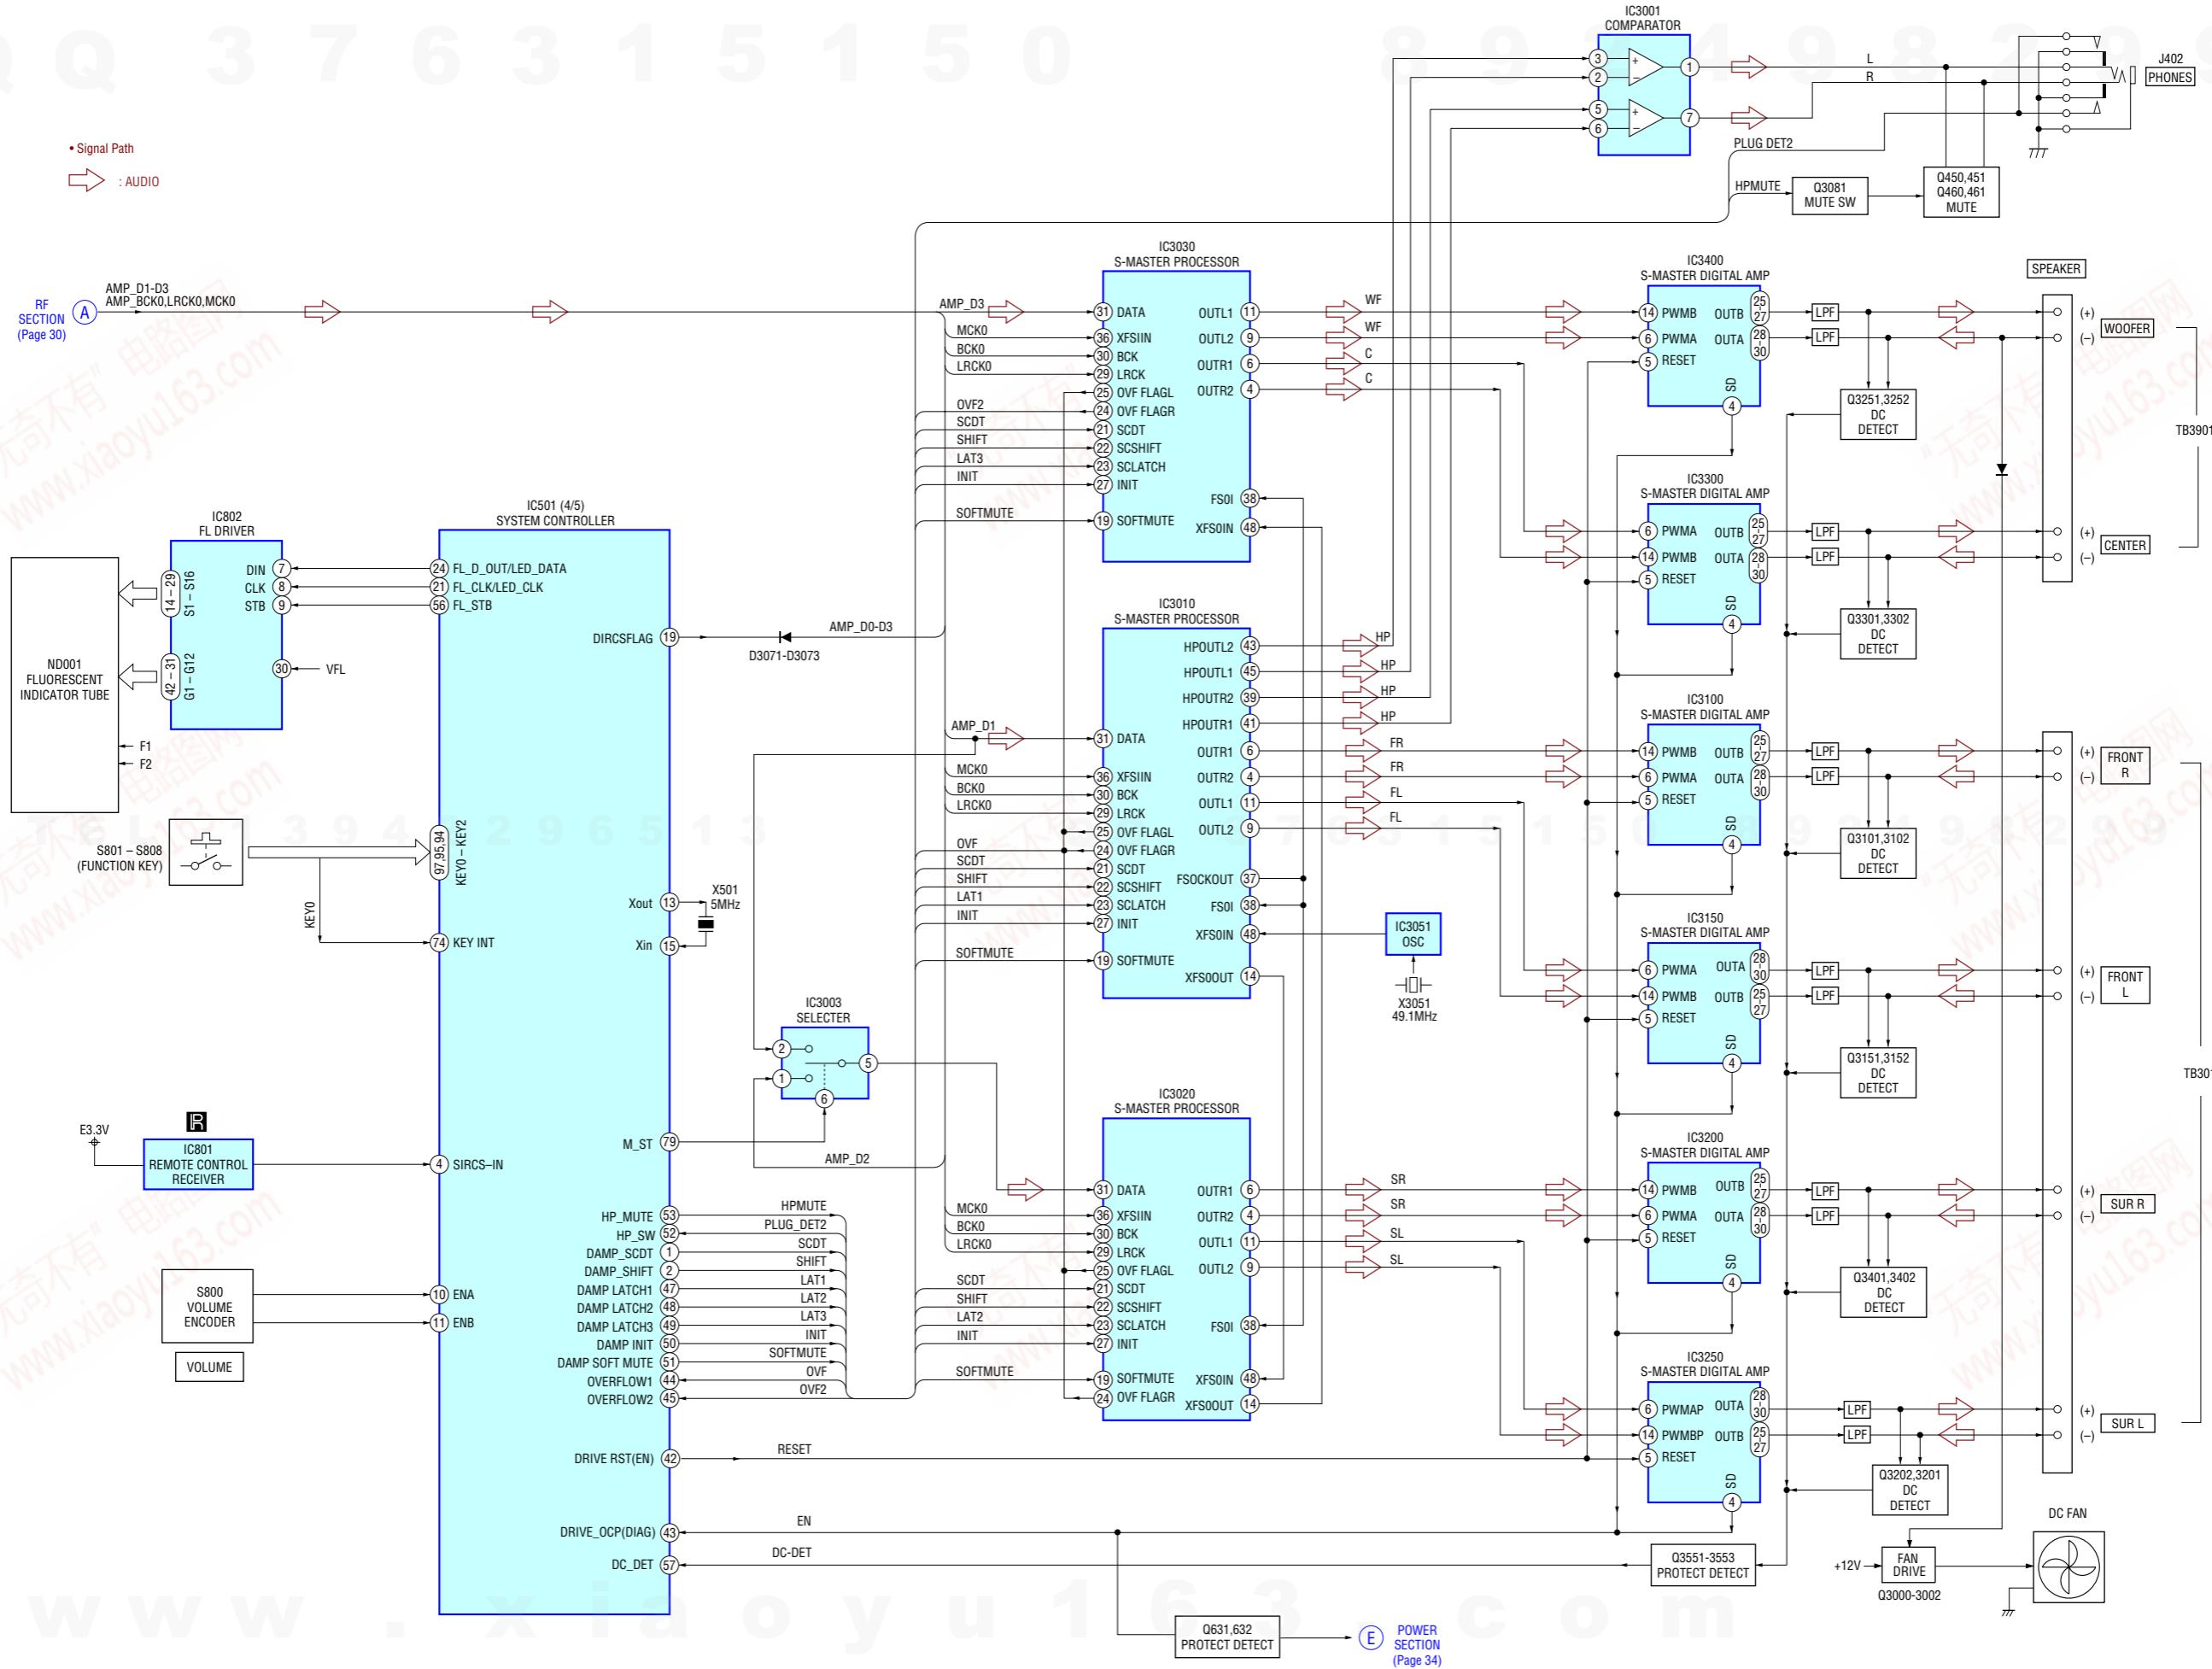


6-5. BLOCK DIAGRAM – POWER SECTION –

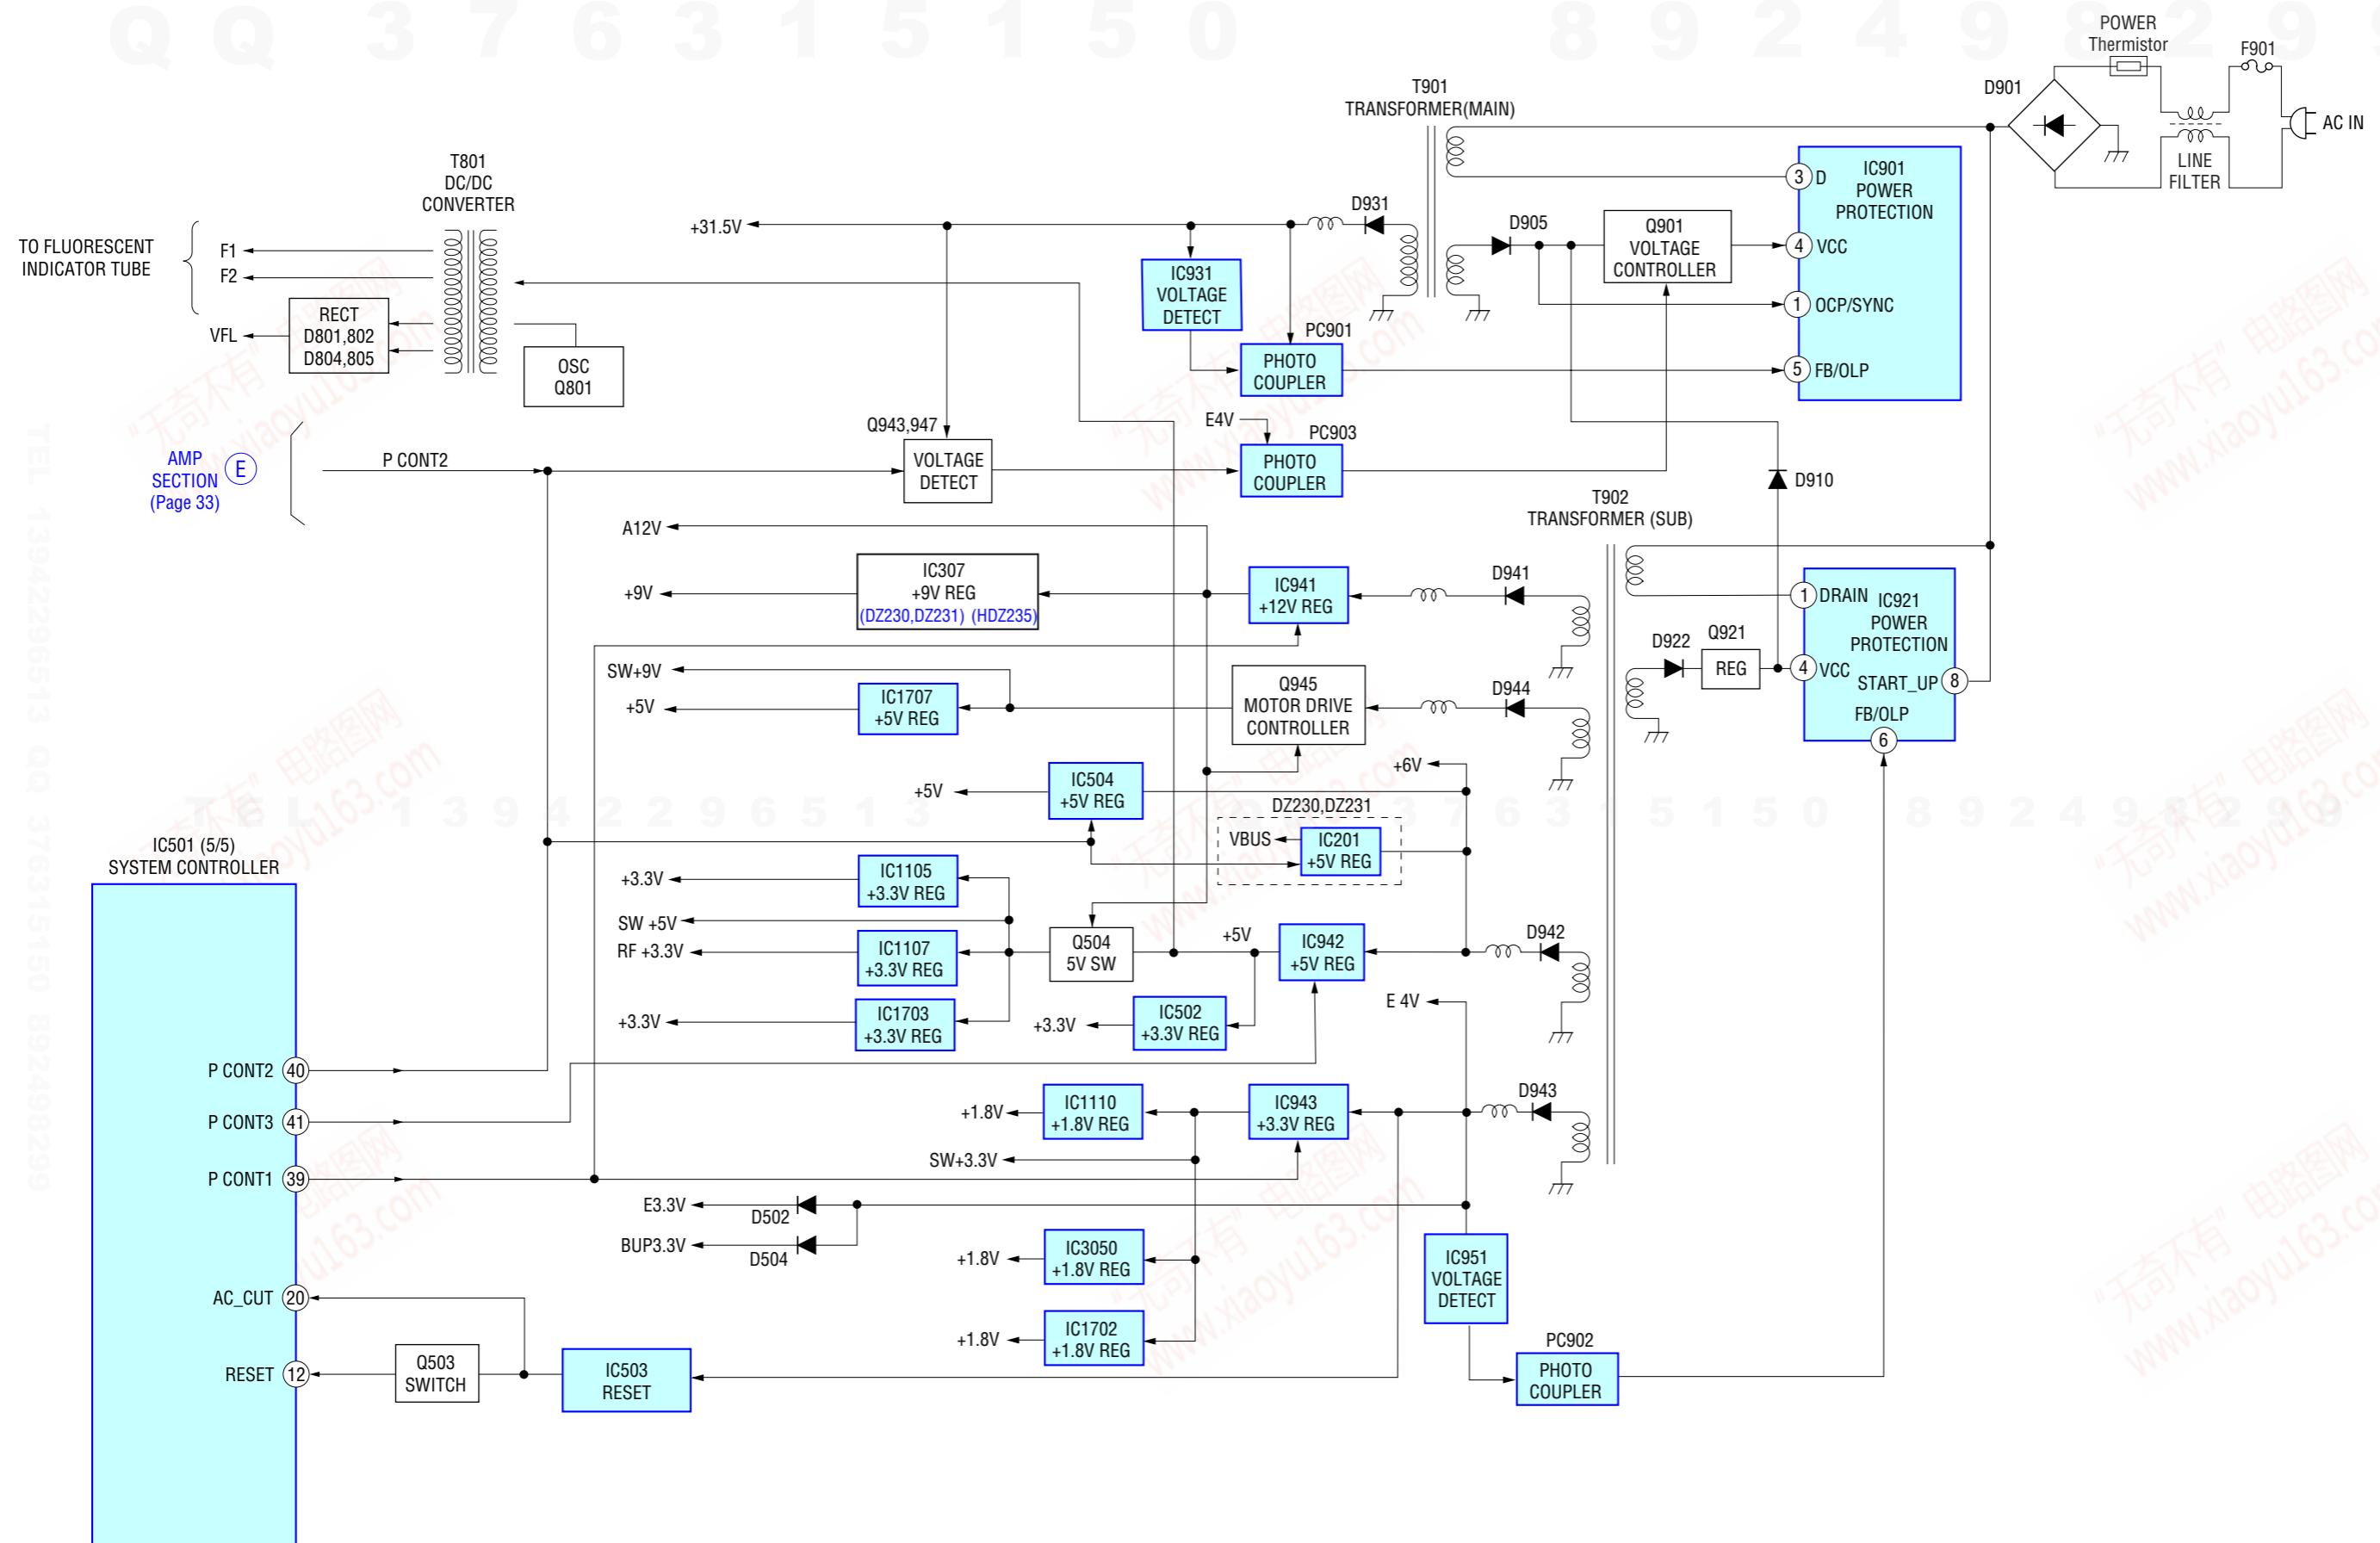


6-6. PRINTED WIRING BOARD – MAIN BOARD (SIDE A) – • See page 29 for Circuit Boards Location.



:Uses unleaded solder.

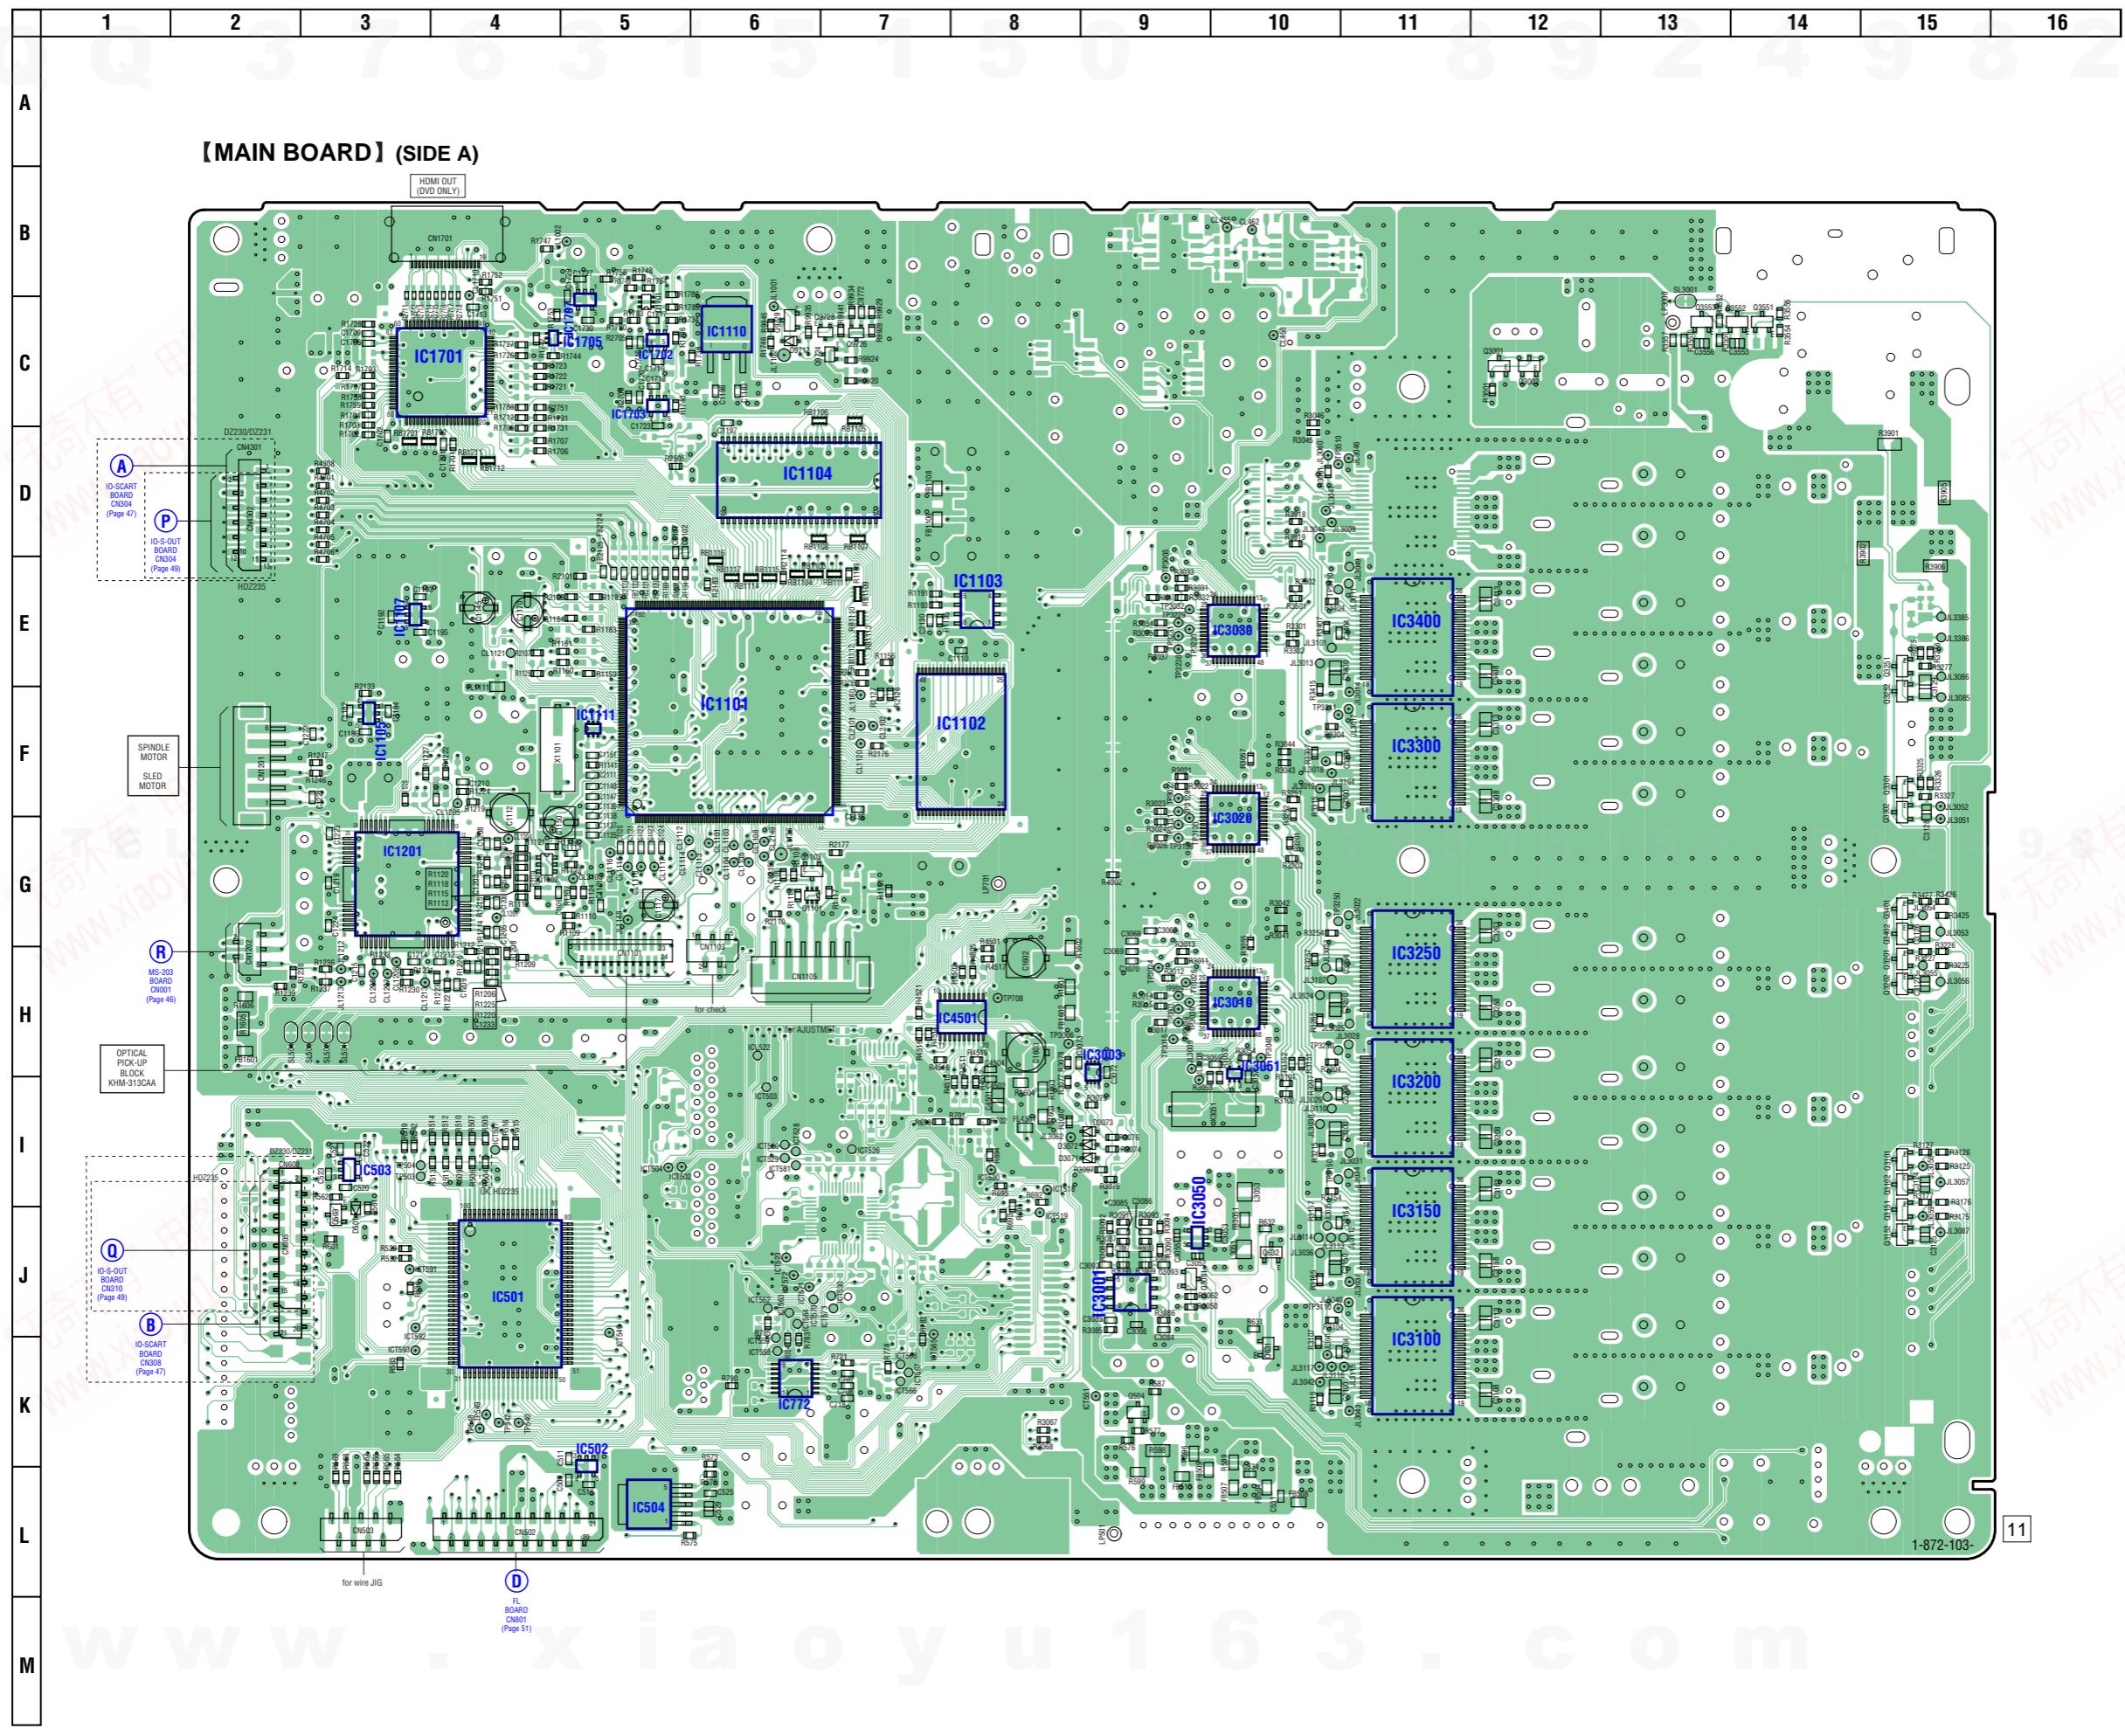


6-7. PRINTED WIRING BOARD – MAIN BOARD (SIDE B) – • See page 29 for Circuit Boards Location.

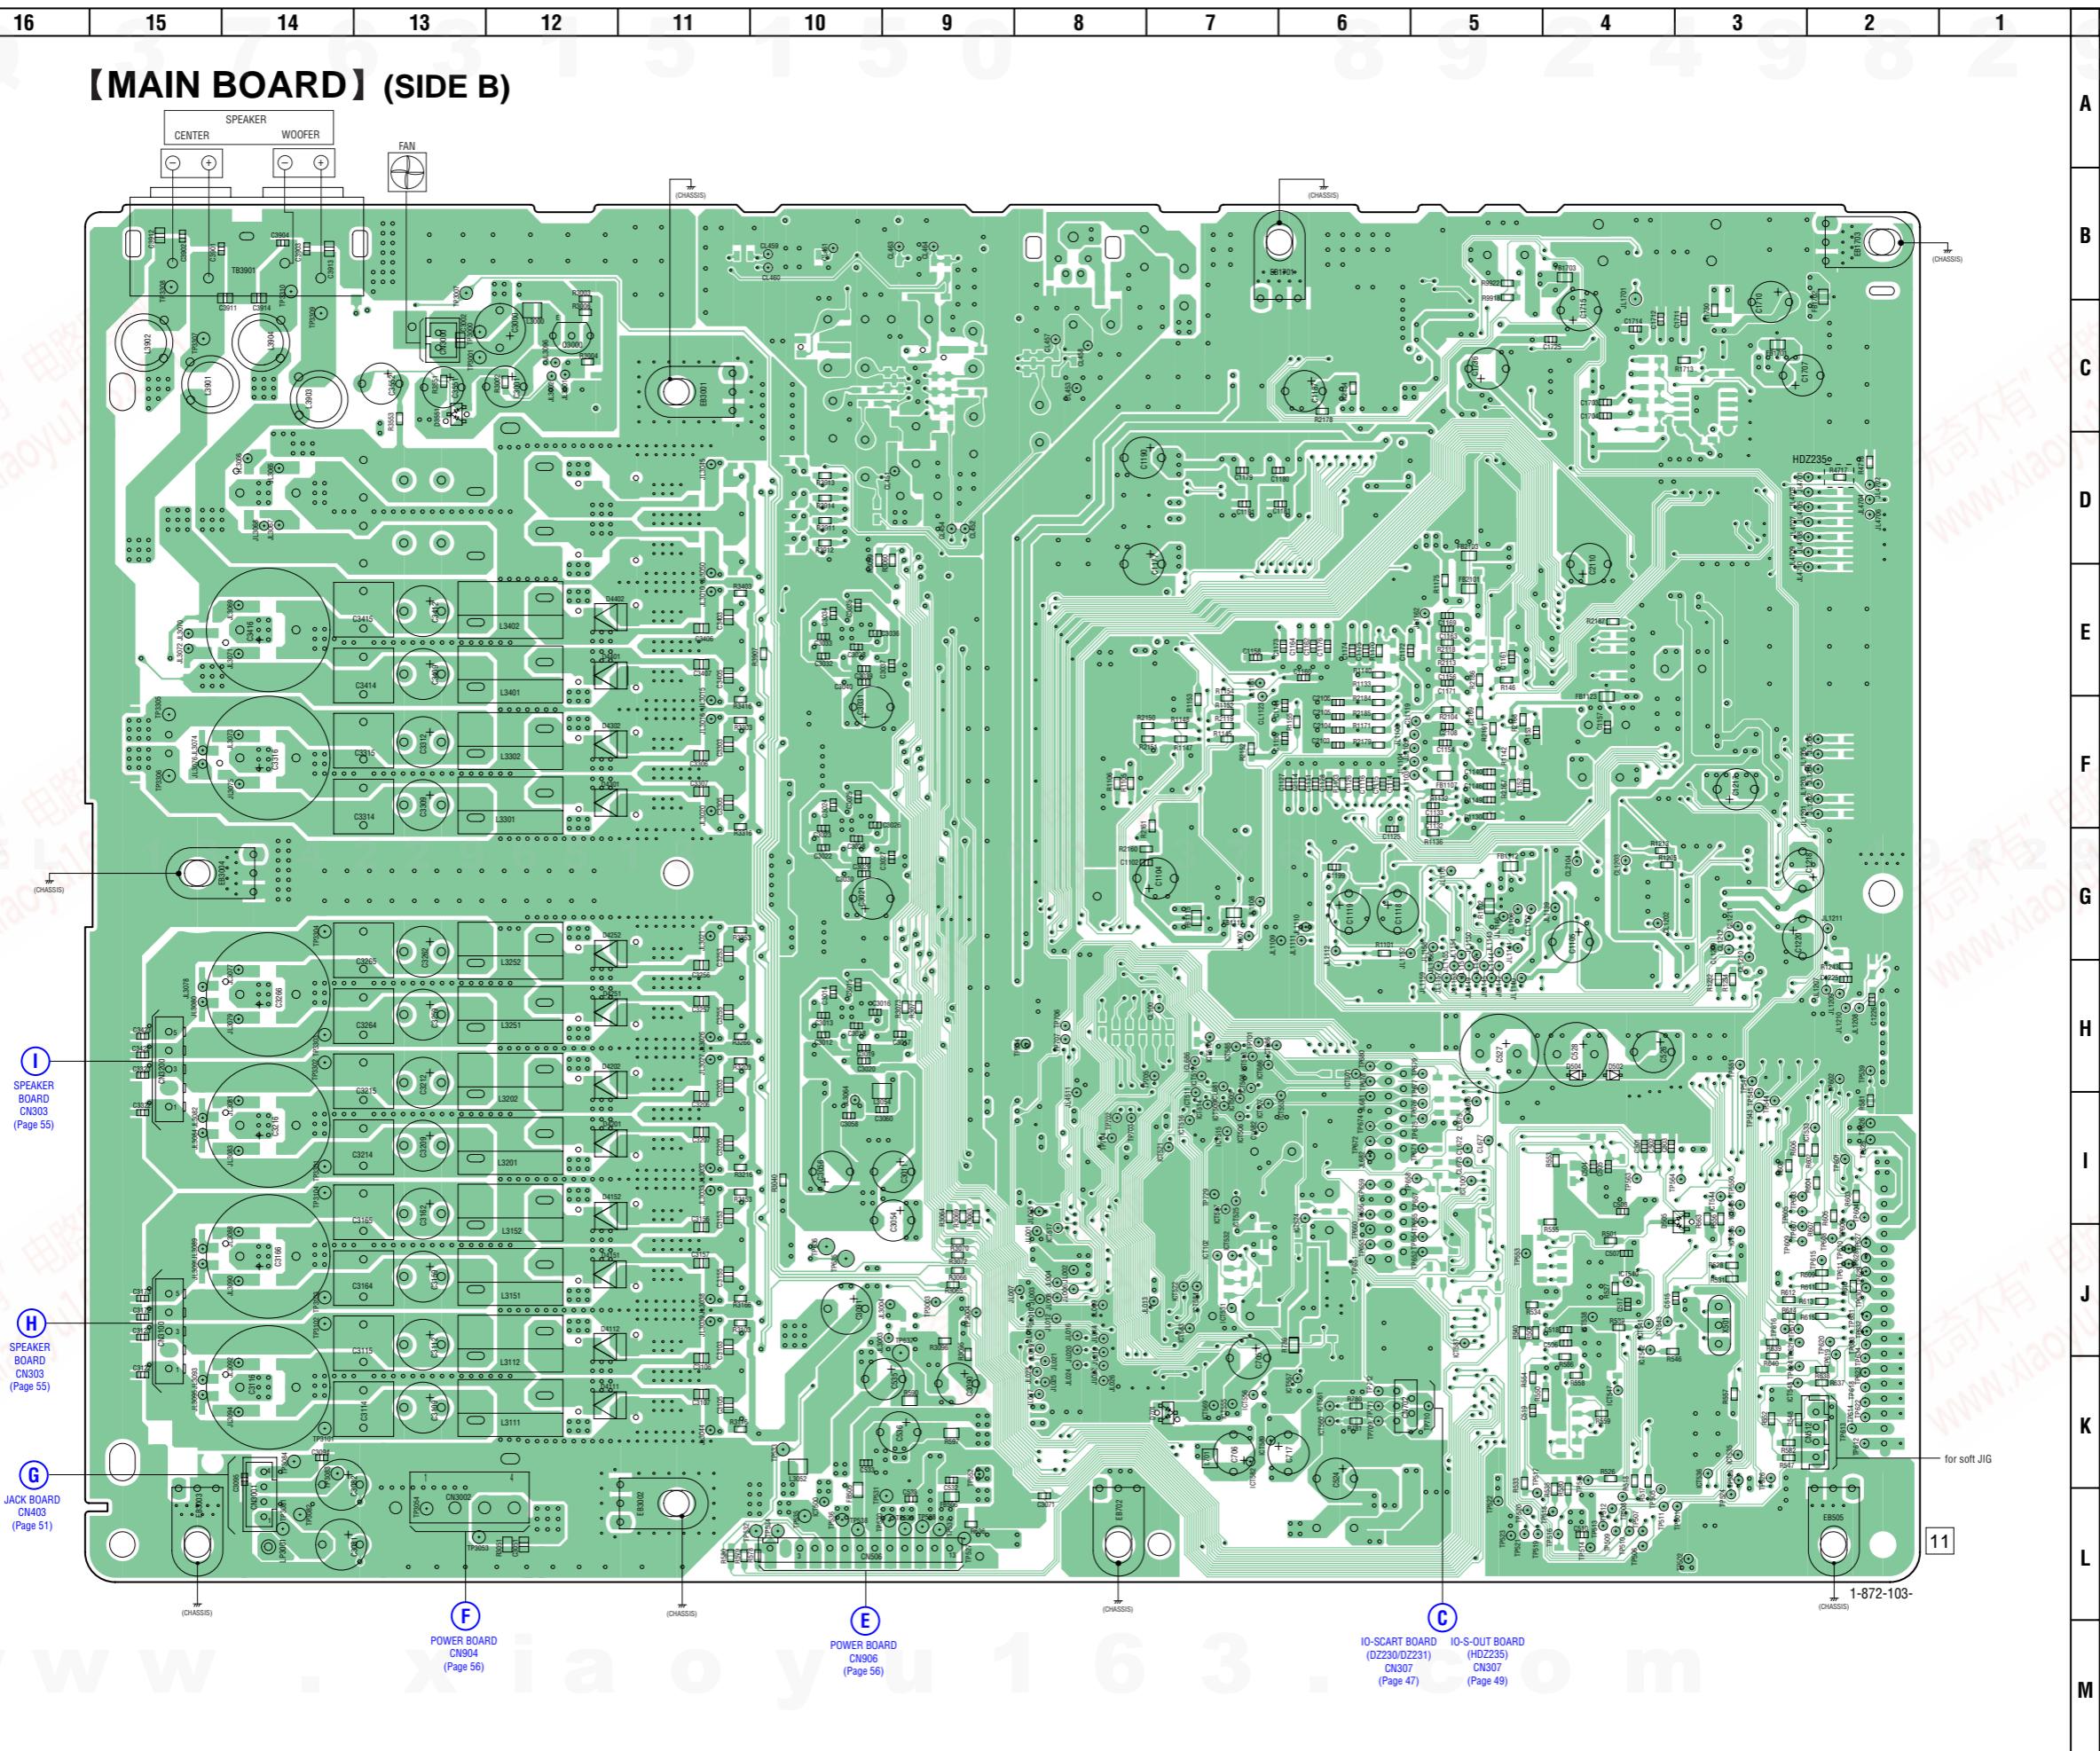 :Uses unleaded solder.


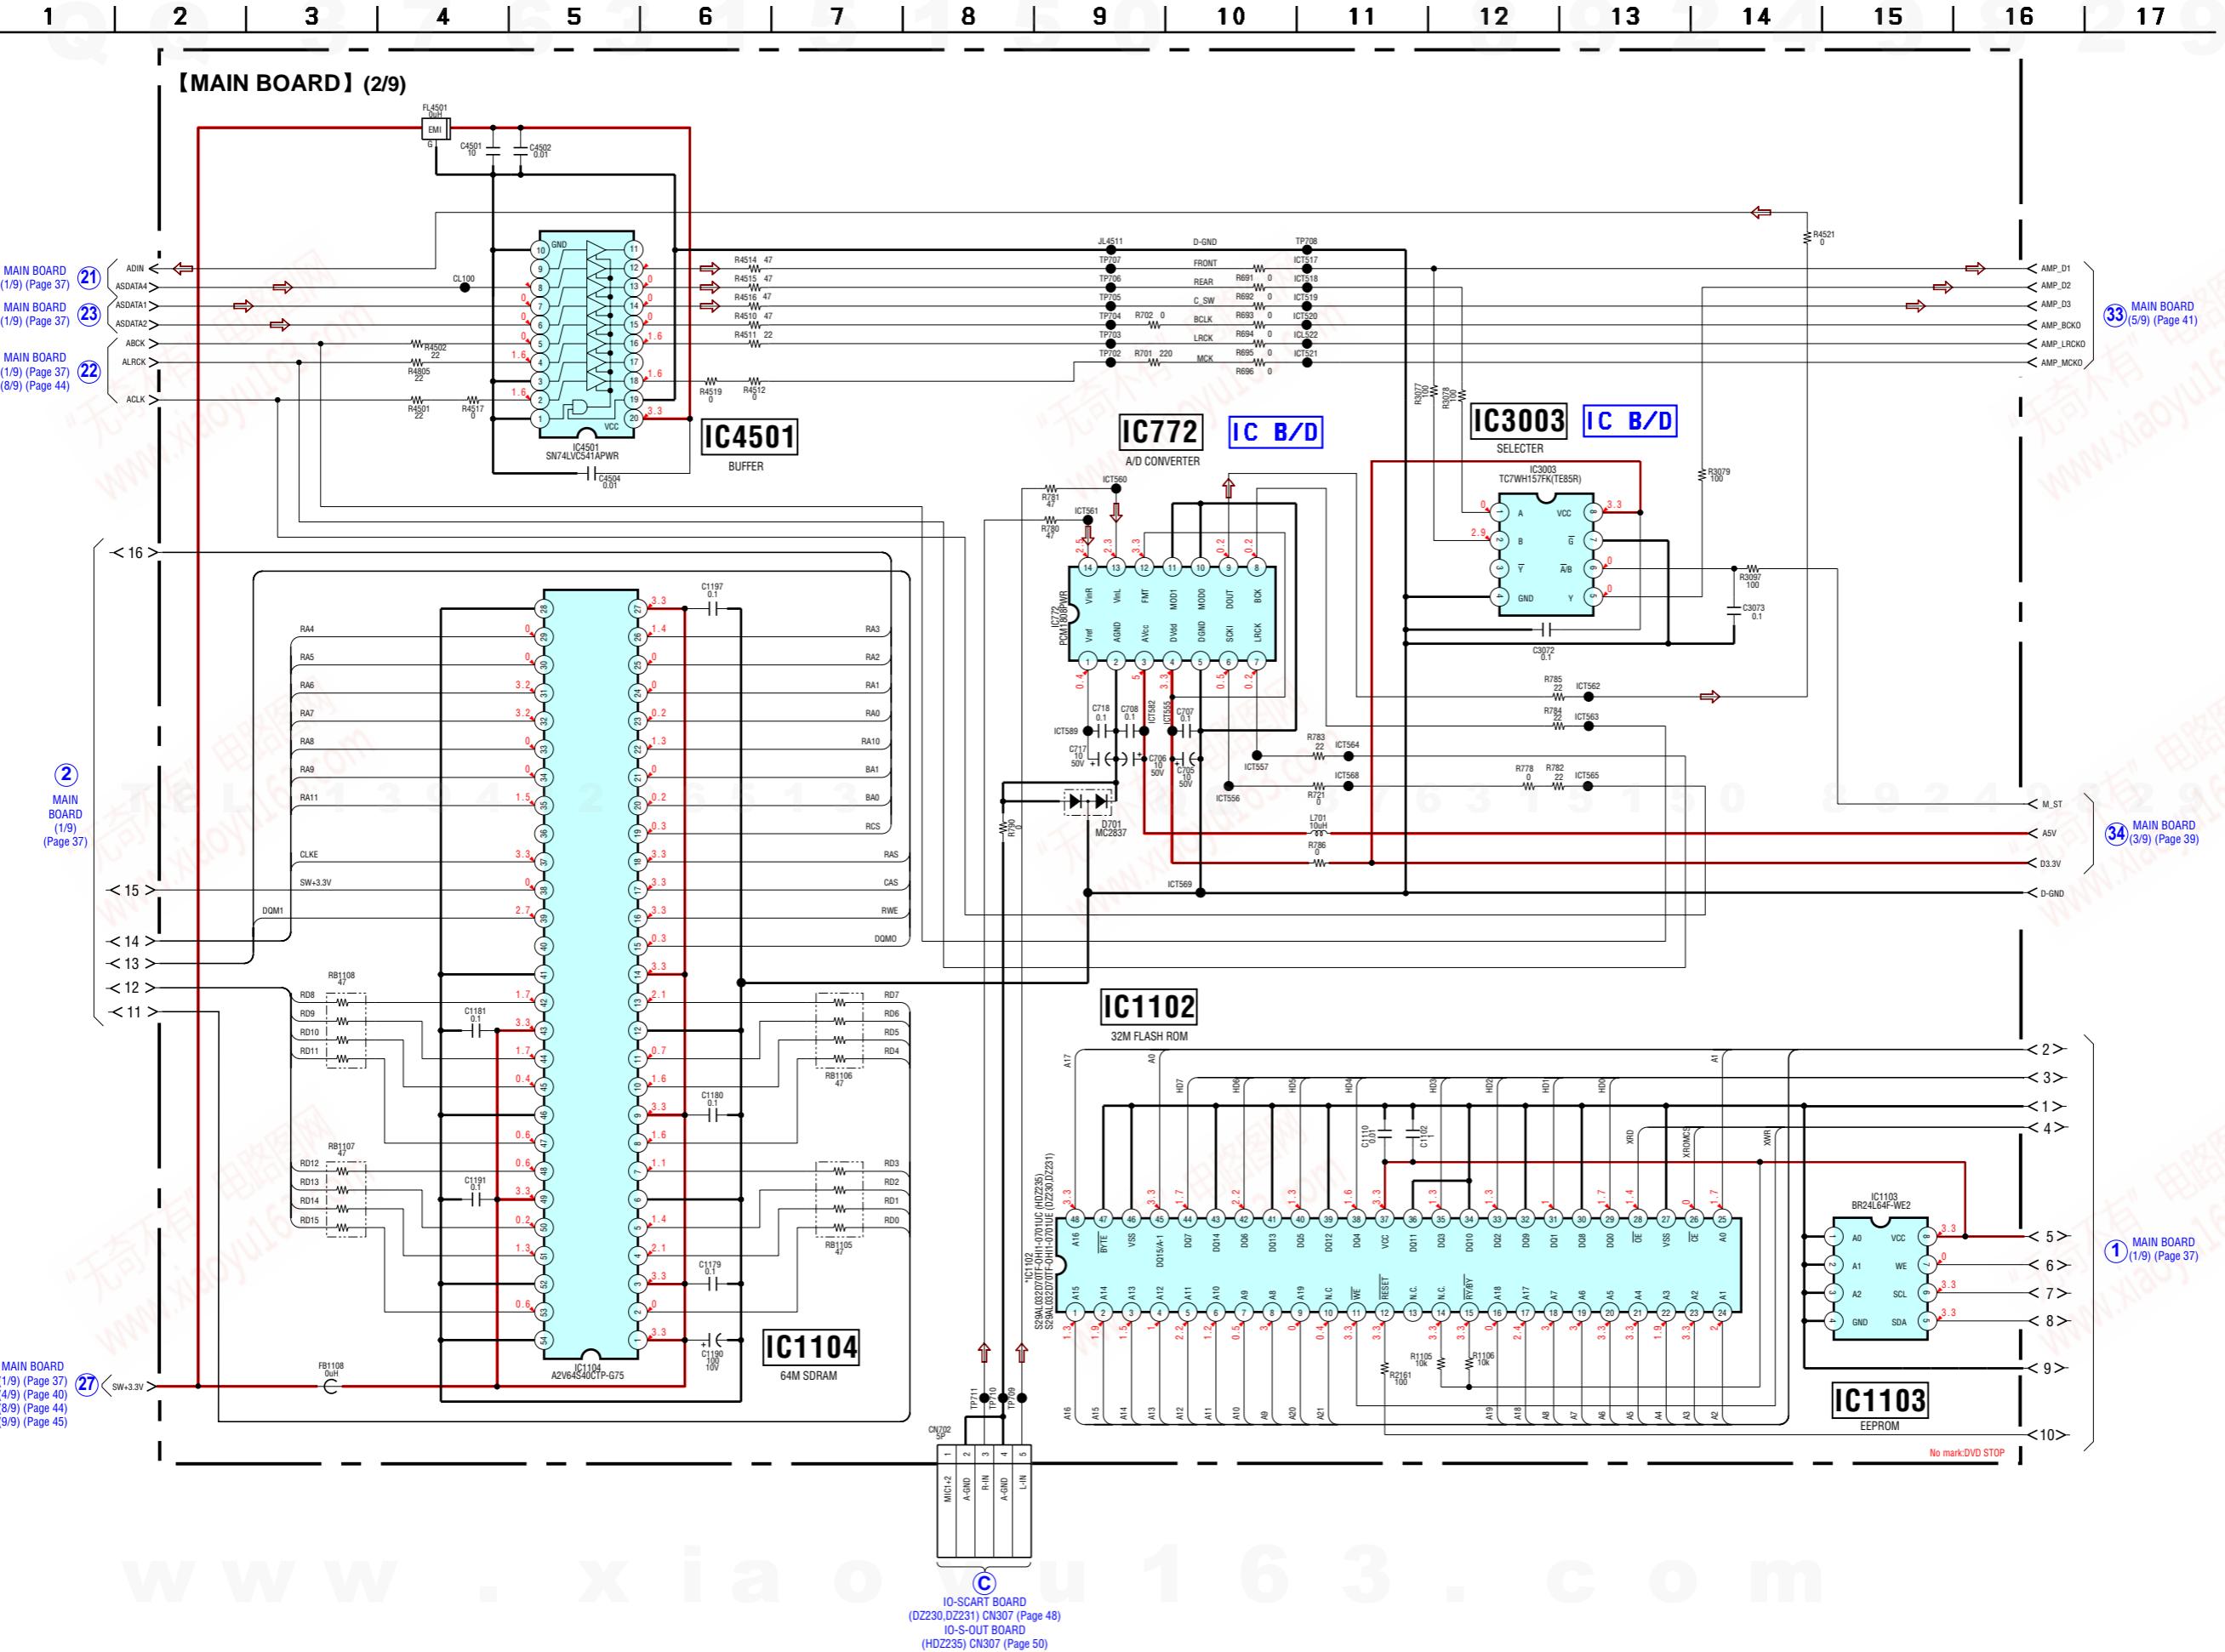
6-8. SCHEMATIC DIAGRAM – MAIN BOARD (1/9) –

• See page 29 for Waveforms. • See page 62 for IC Pin Function Description.

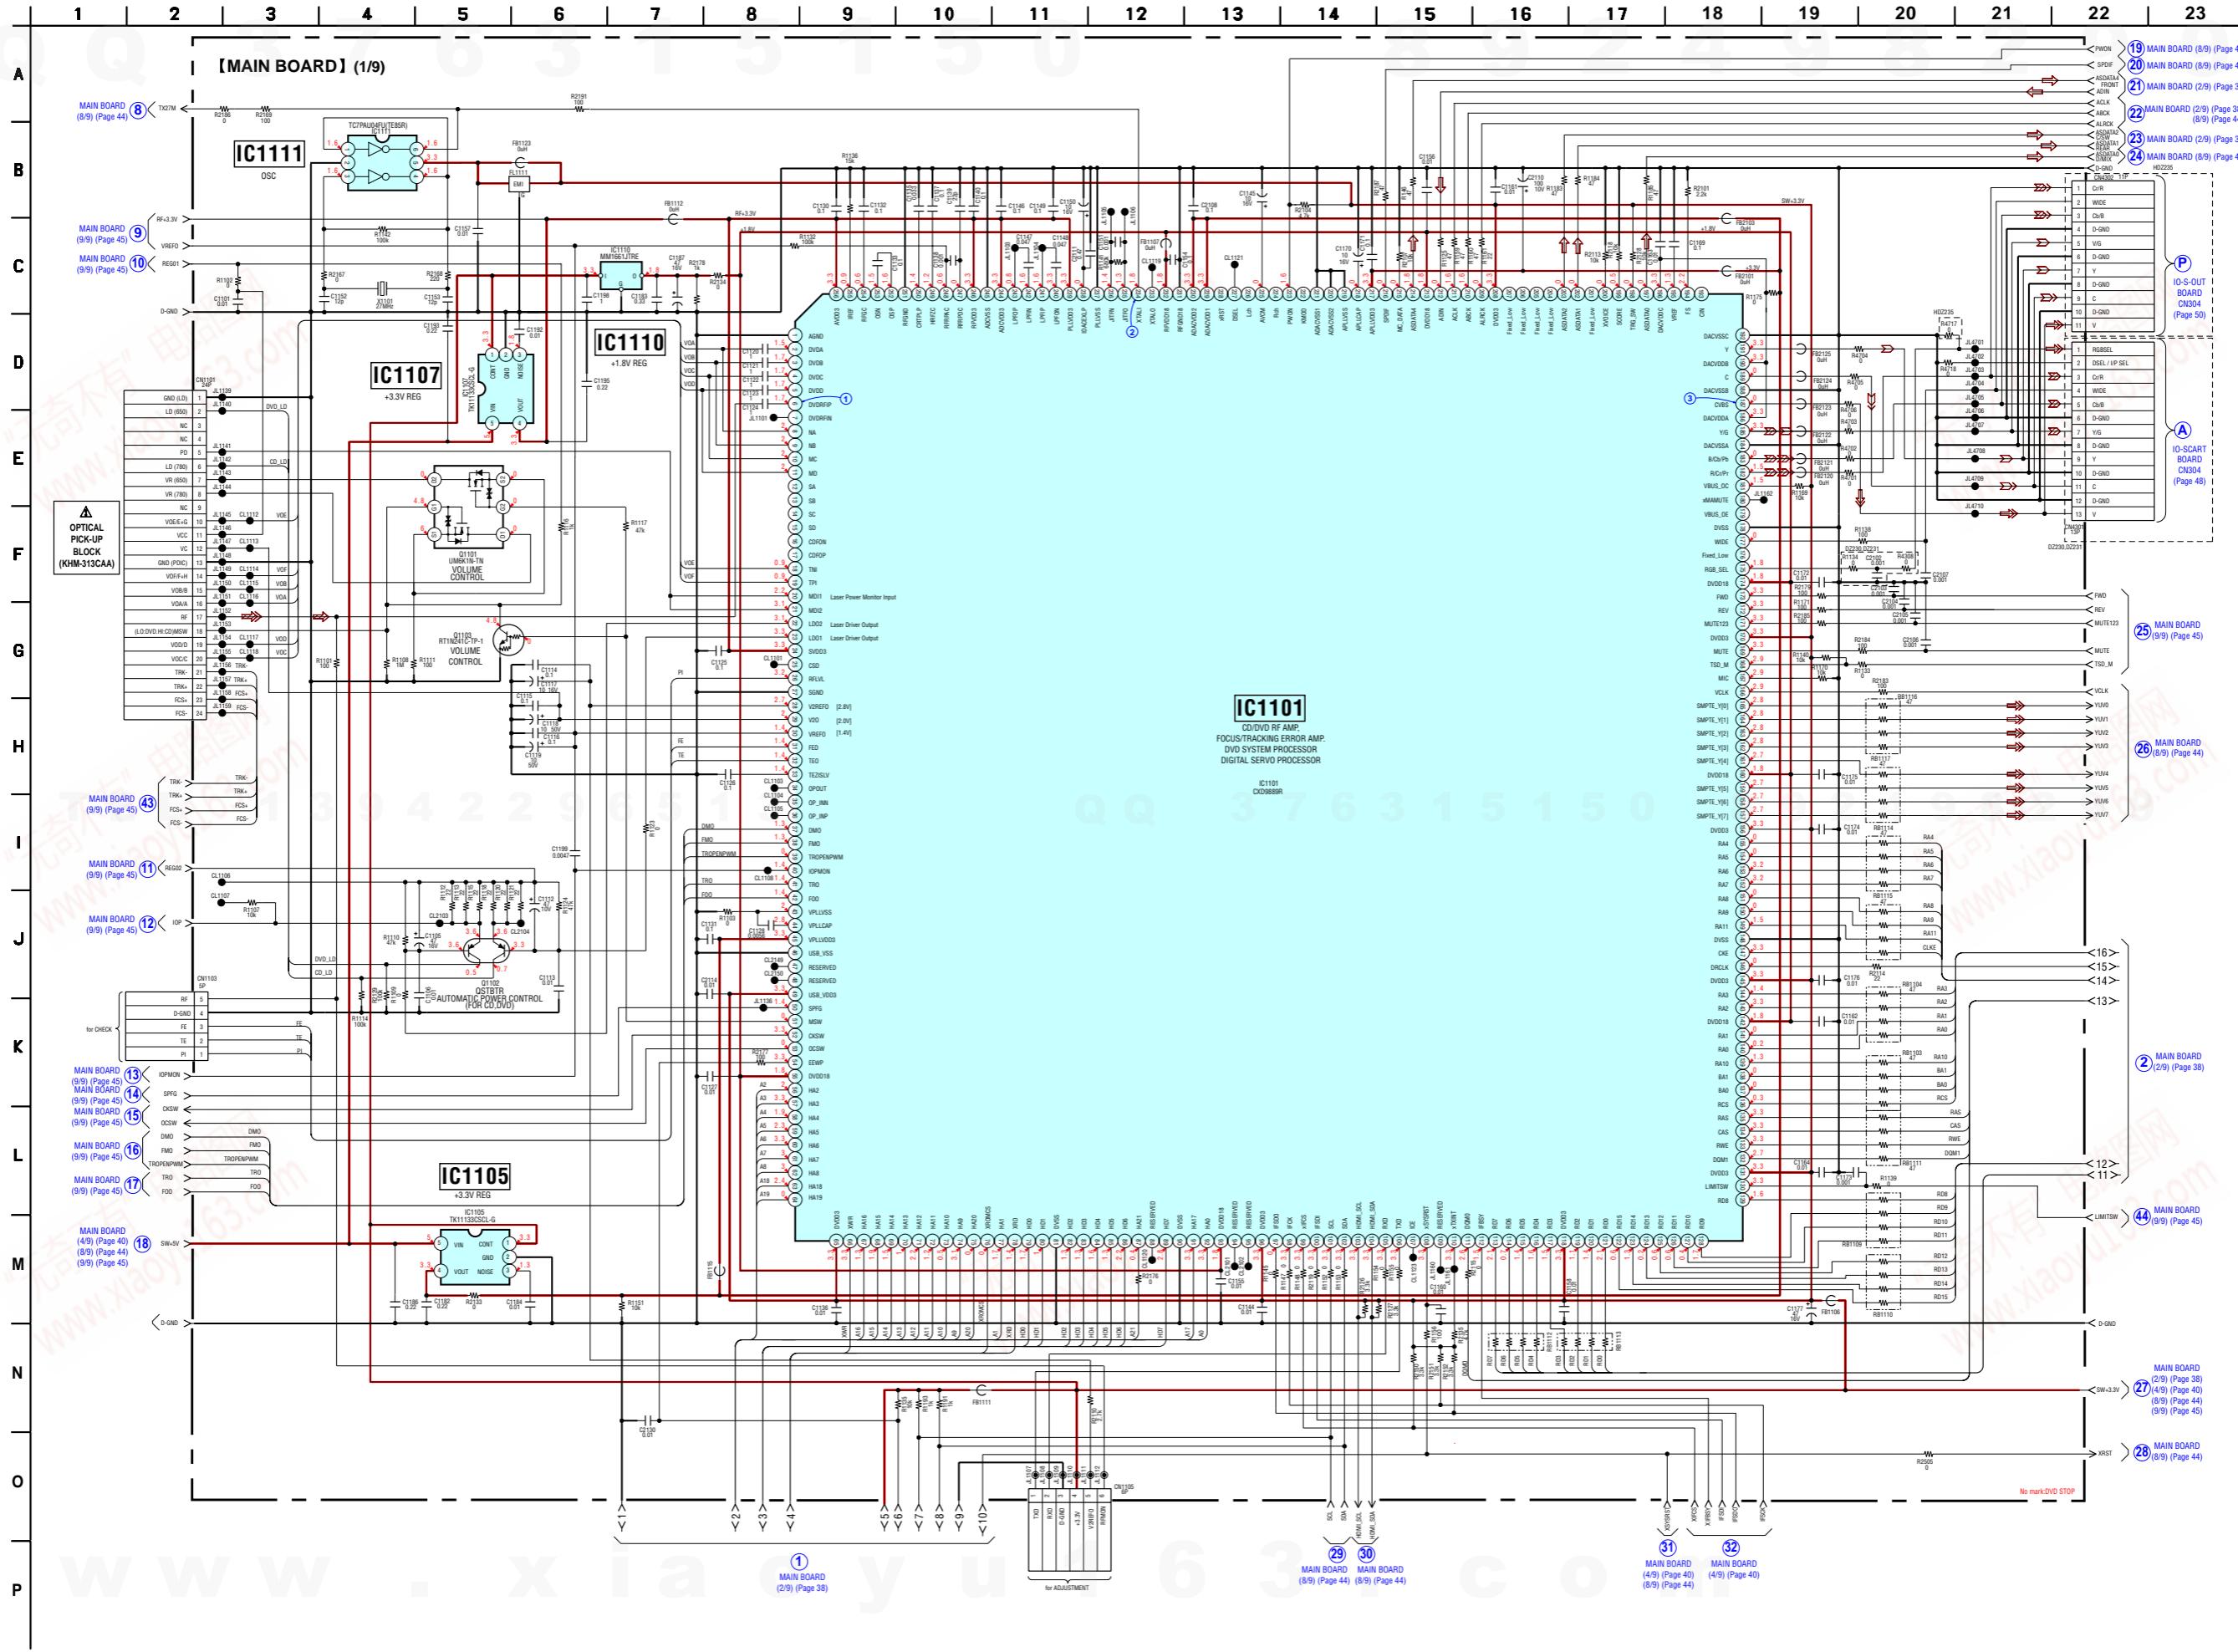


6-9. SCHEMATIC DIAGRAM – MAIN BOARD (2/9) –

• See page 58, 59 for IC Block Diagrams.




6-10. SCHEMATIC DIAGRAM – MAIN BOARD (3/9) –


• See page 29 for Waveform. • See page 67 for IC Pin Function Description.

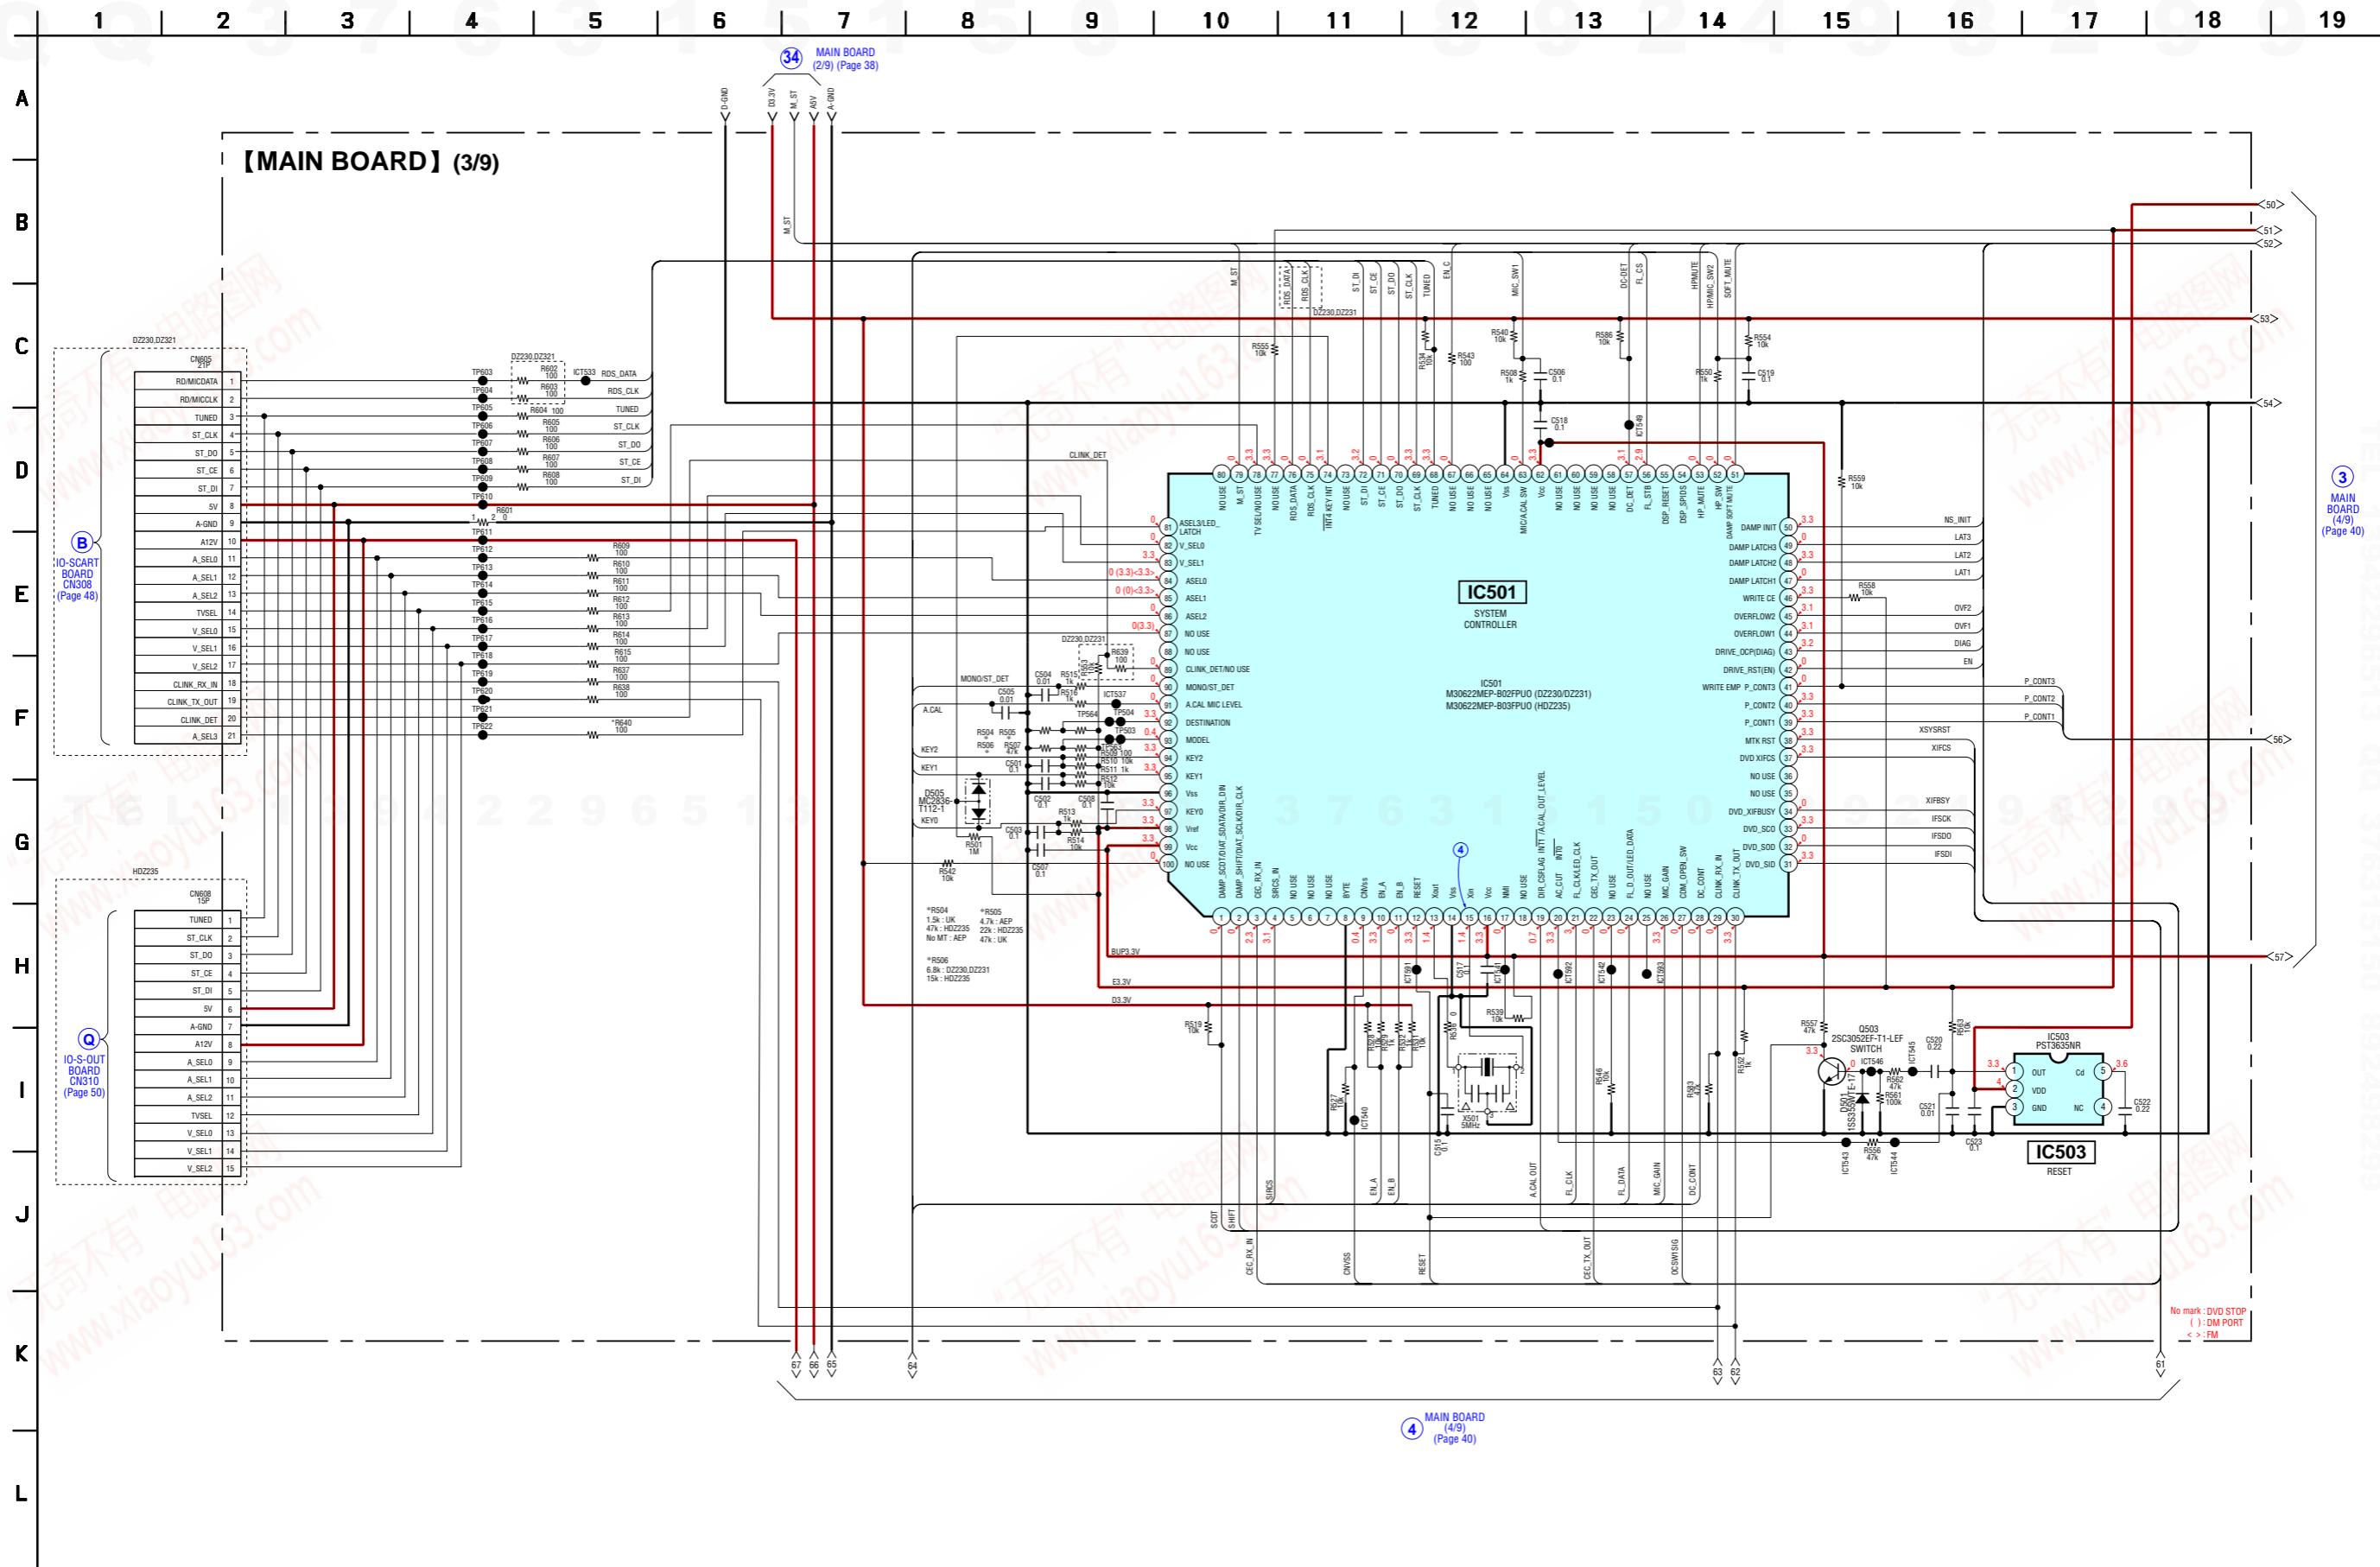


6-11. SCHEMATIC DIAGRAM – MAIN BOARD (4/9) –

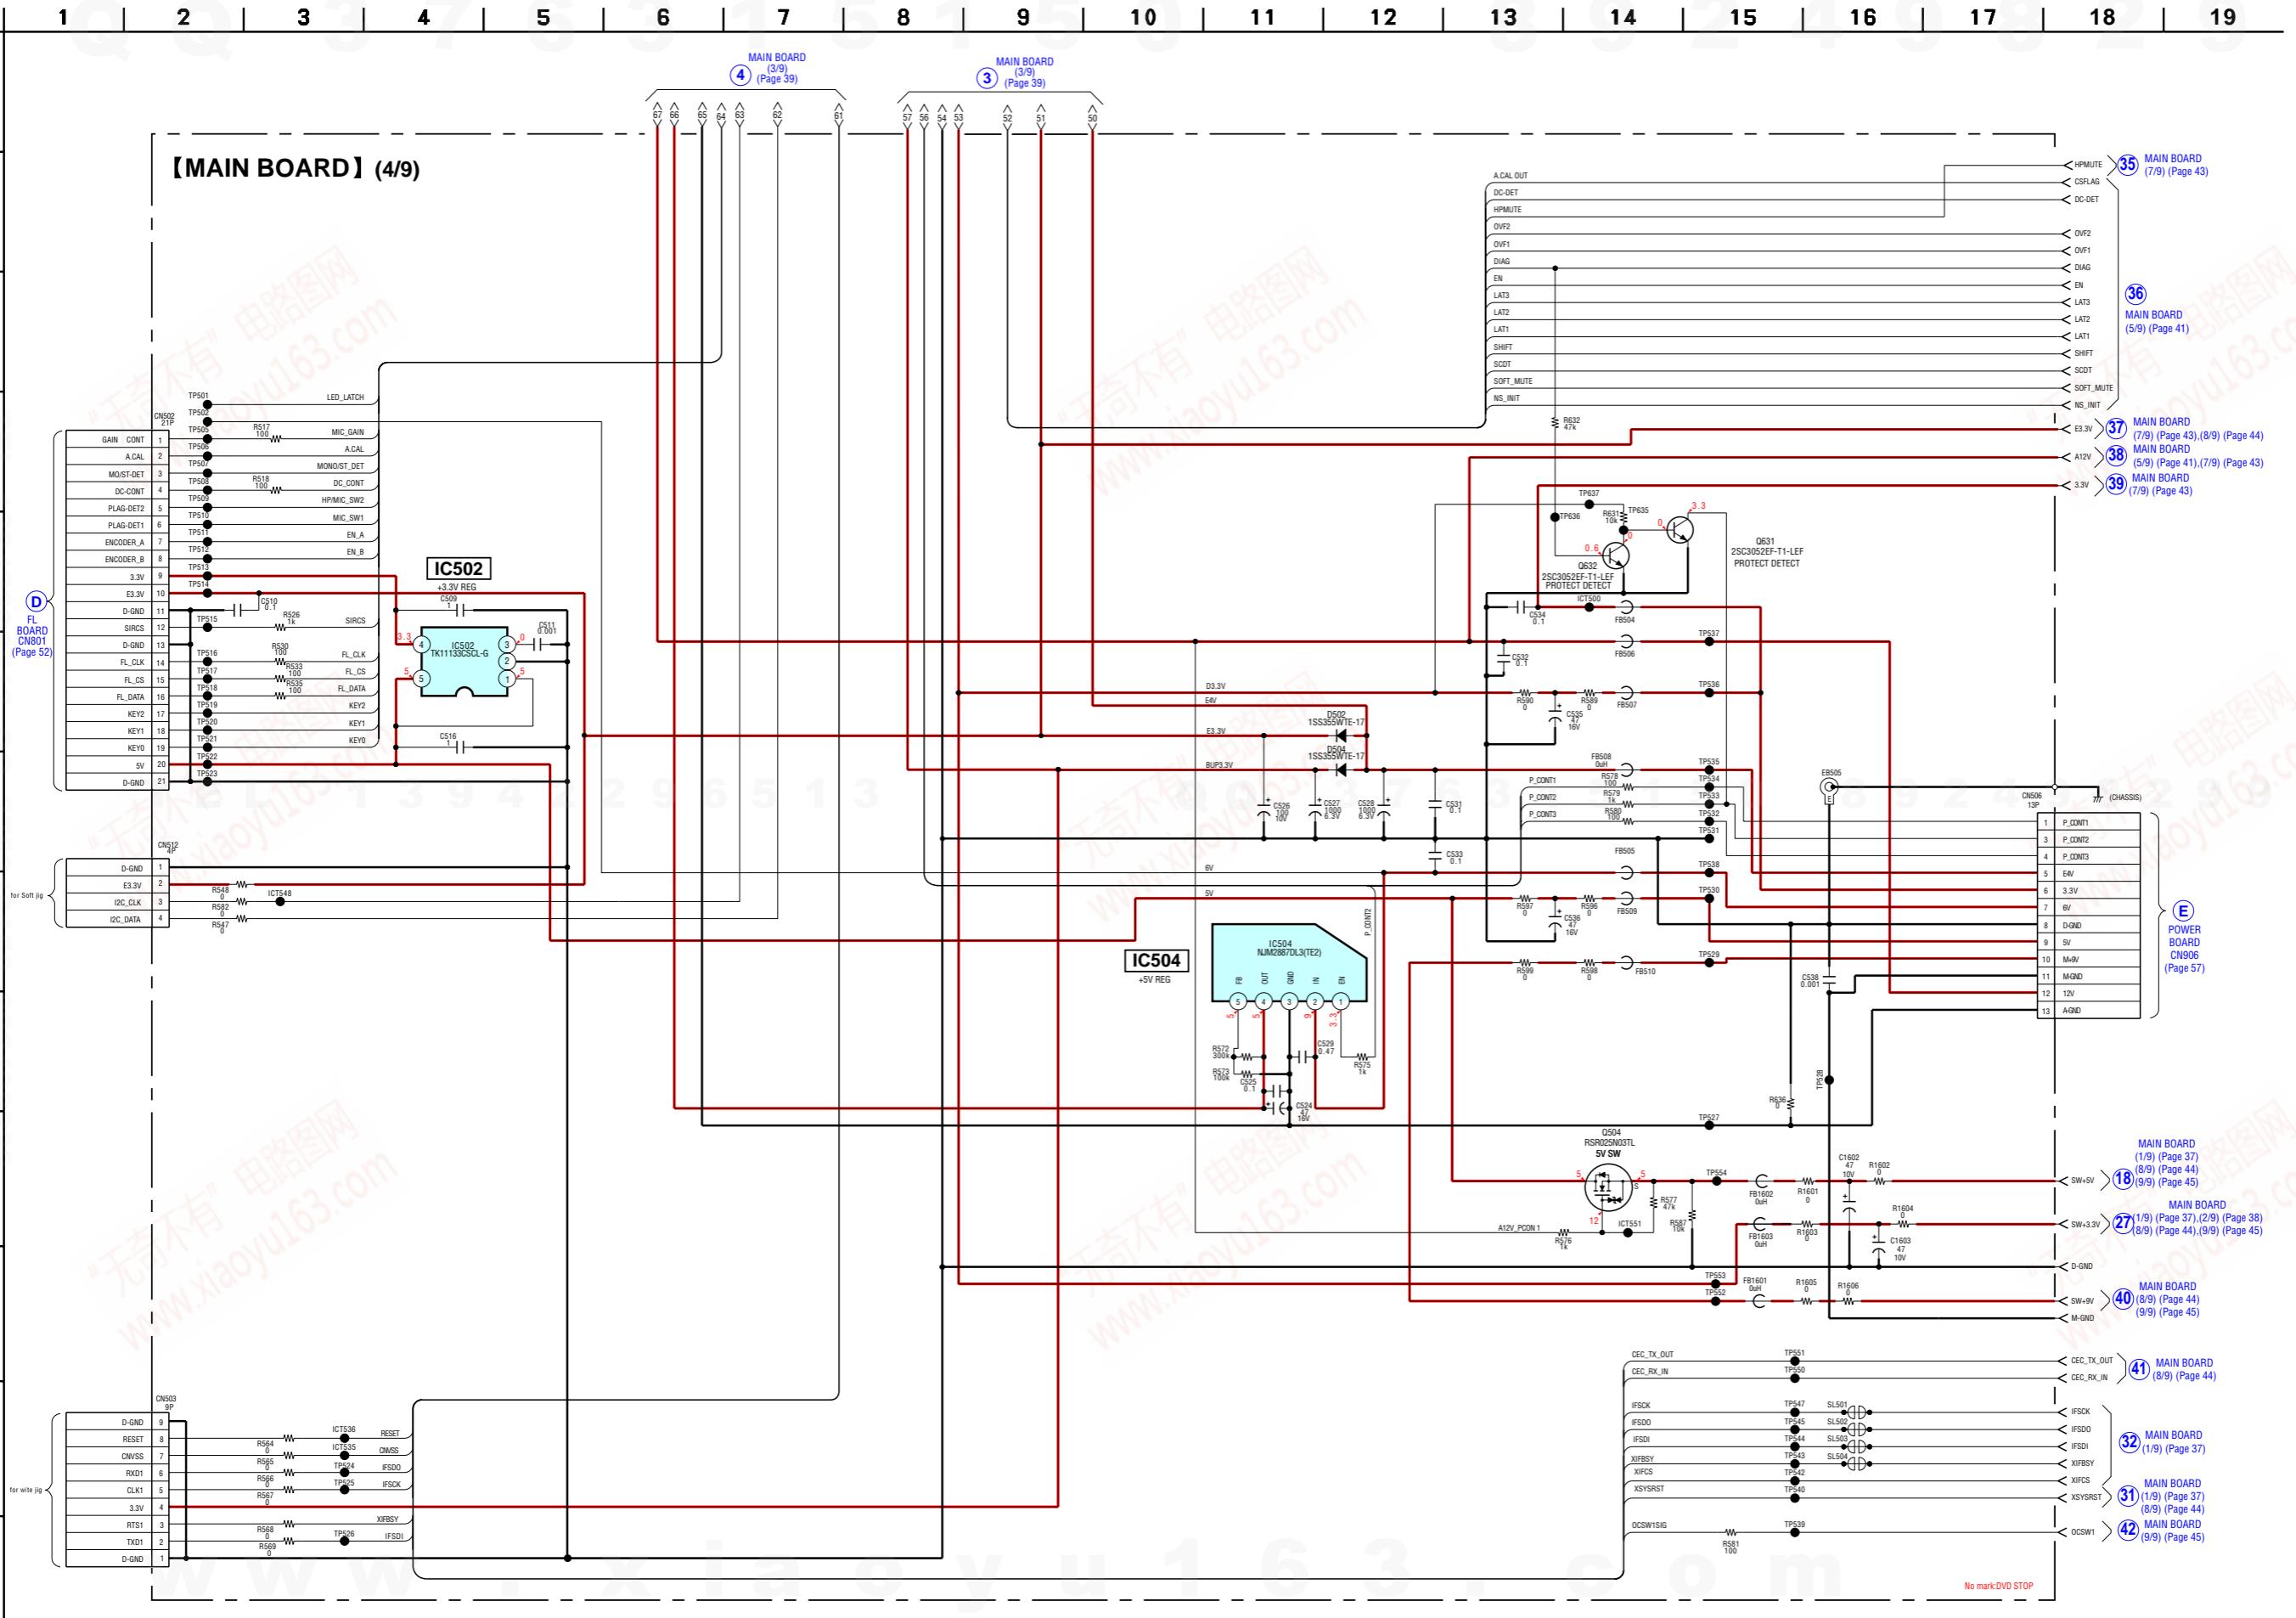


6-12. SCHEMATIC DIAGRAM – MAIN BOARD (5/9) – • See page 58 for IC Block Diagram.

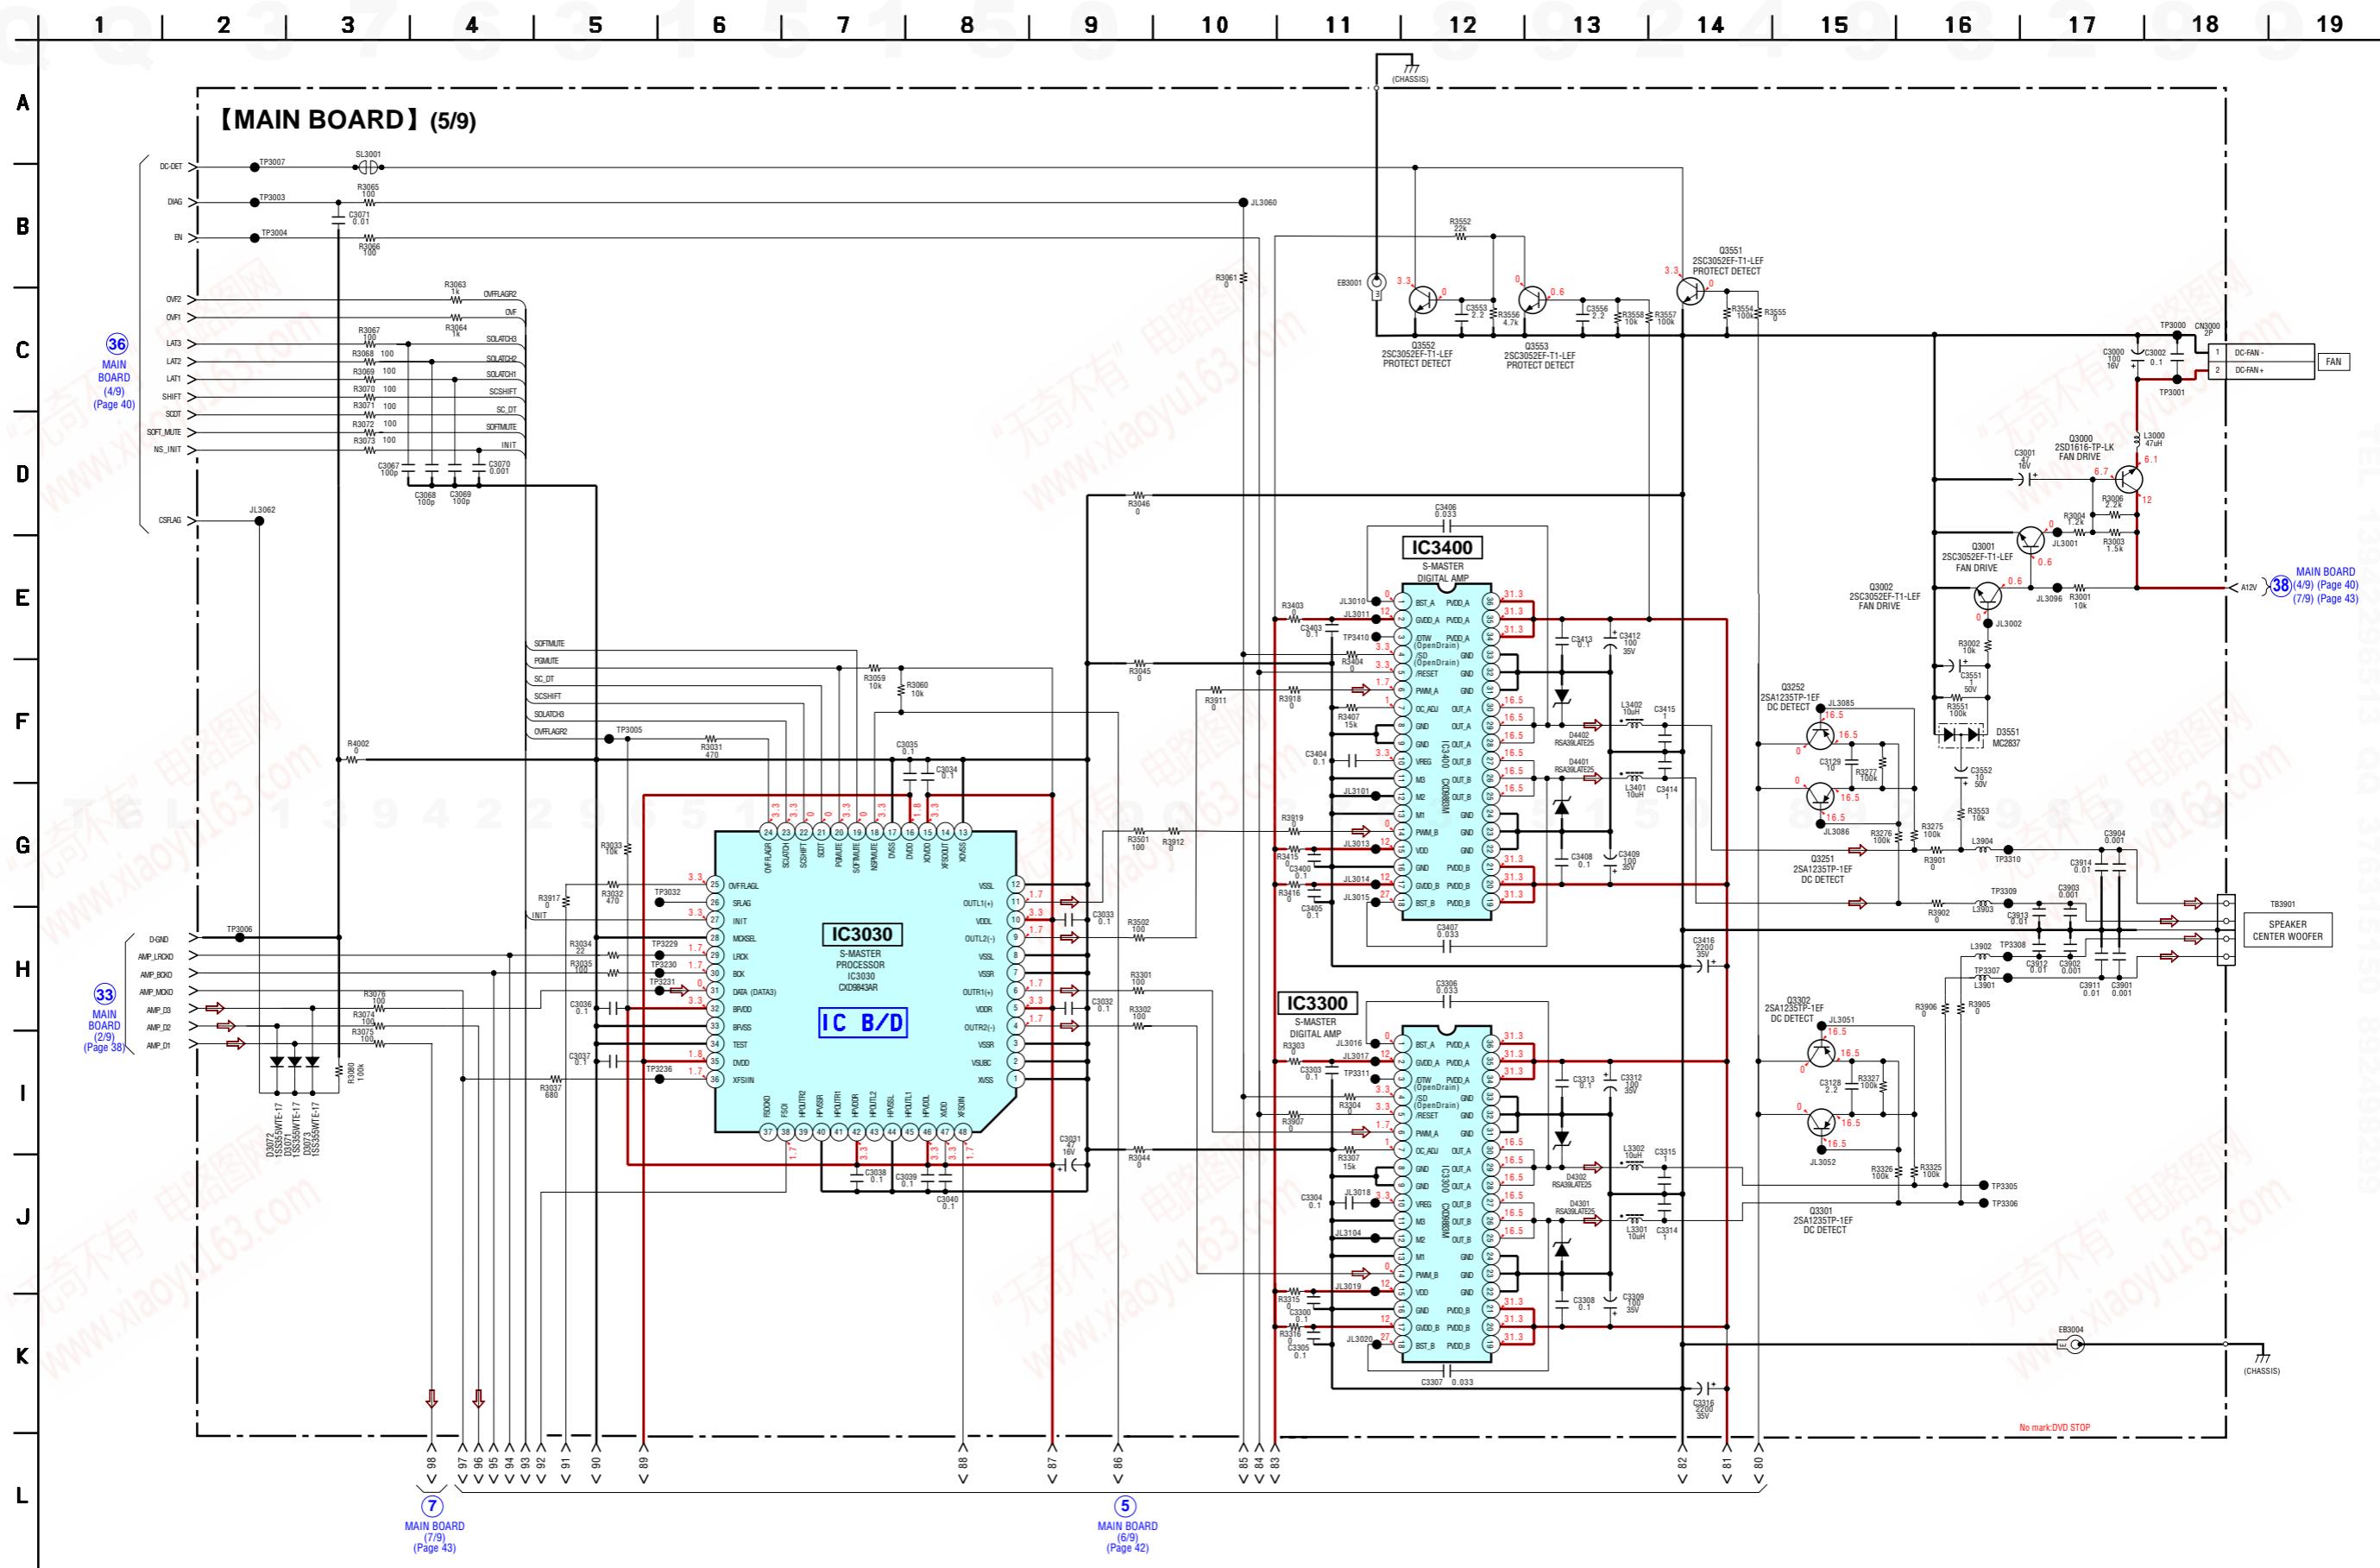


6-13. SCHEMATIC DIAGRAM – MAIN BOARD (6/9) – • See page 58 for IC Block Diagram.

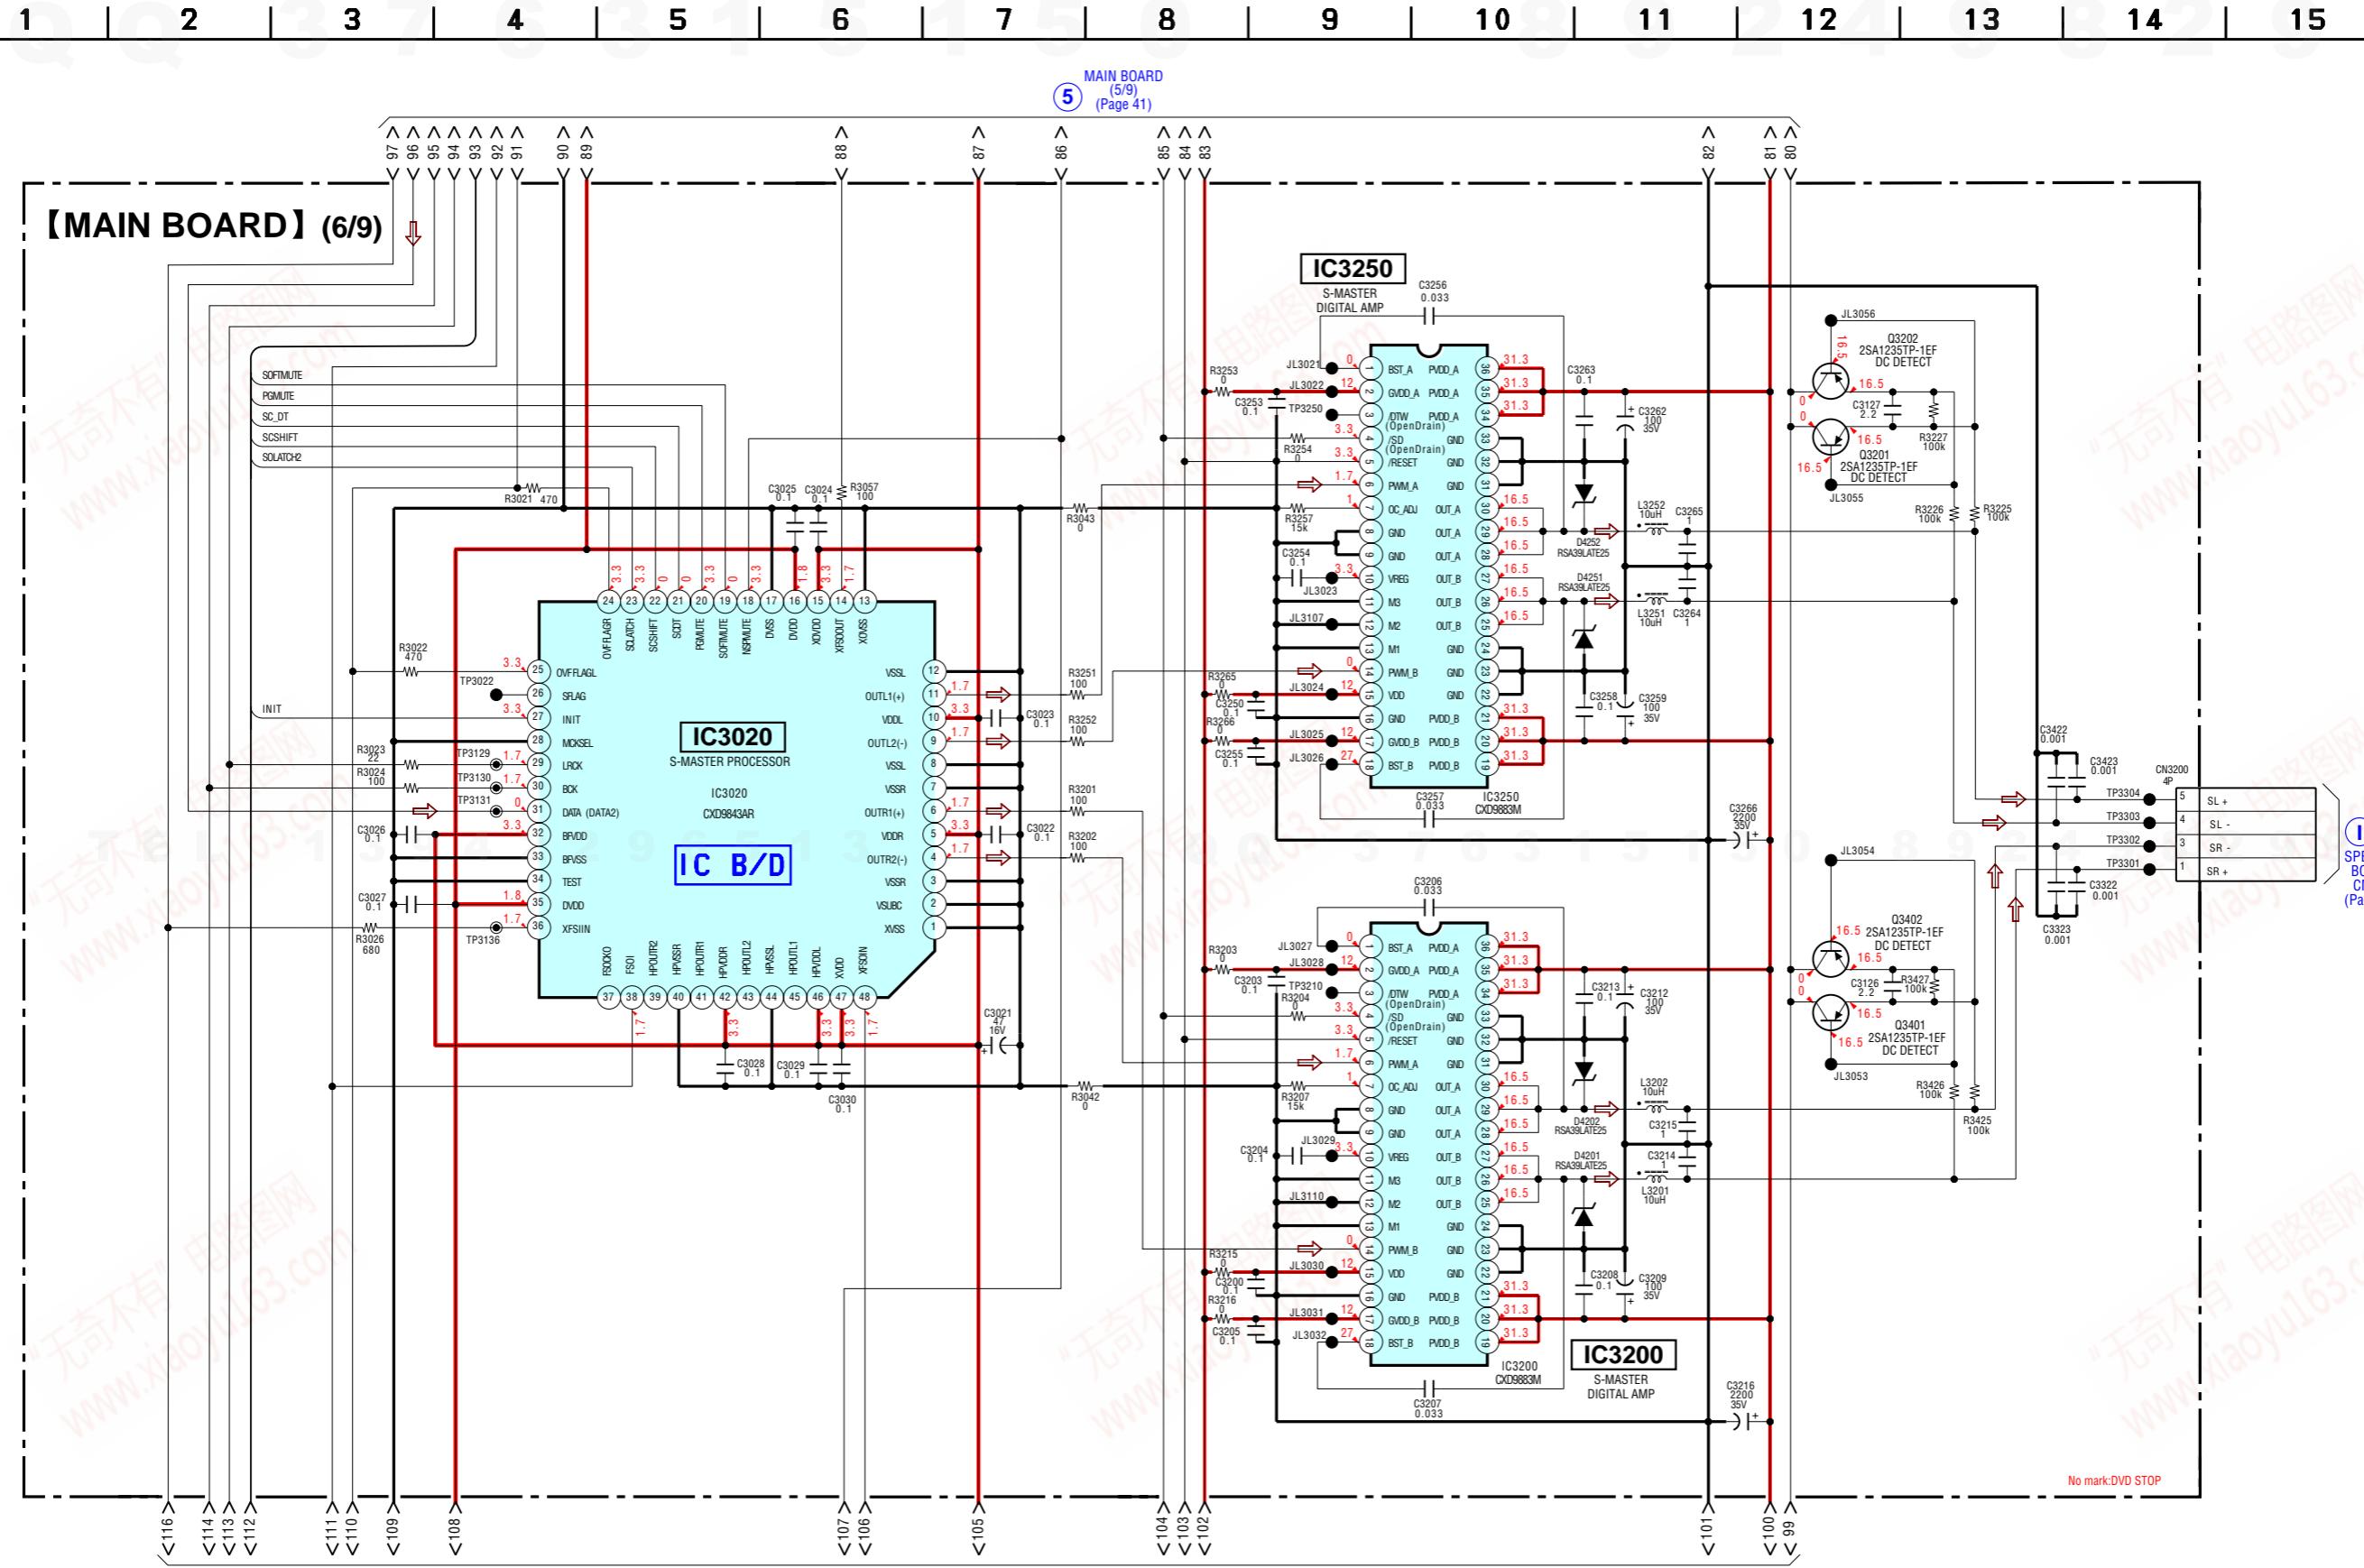


6-14. SCHEMATIC DIAGRAM – MAIN BOARD (7/9) – • See page 29 for Waveform. • See page 58 for IC Block Diagram.

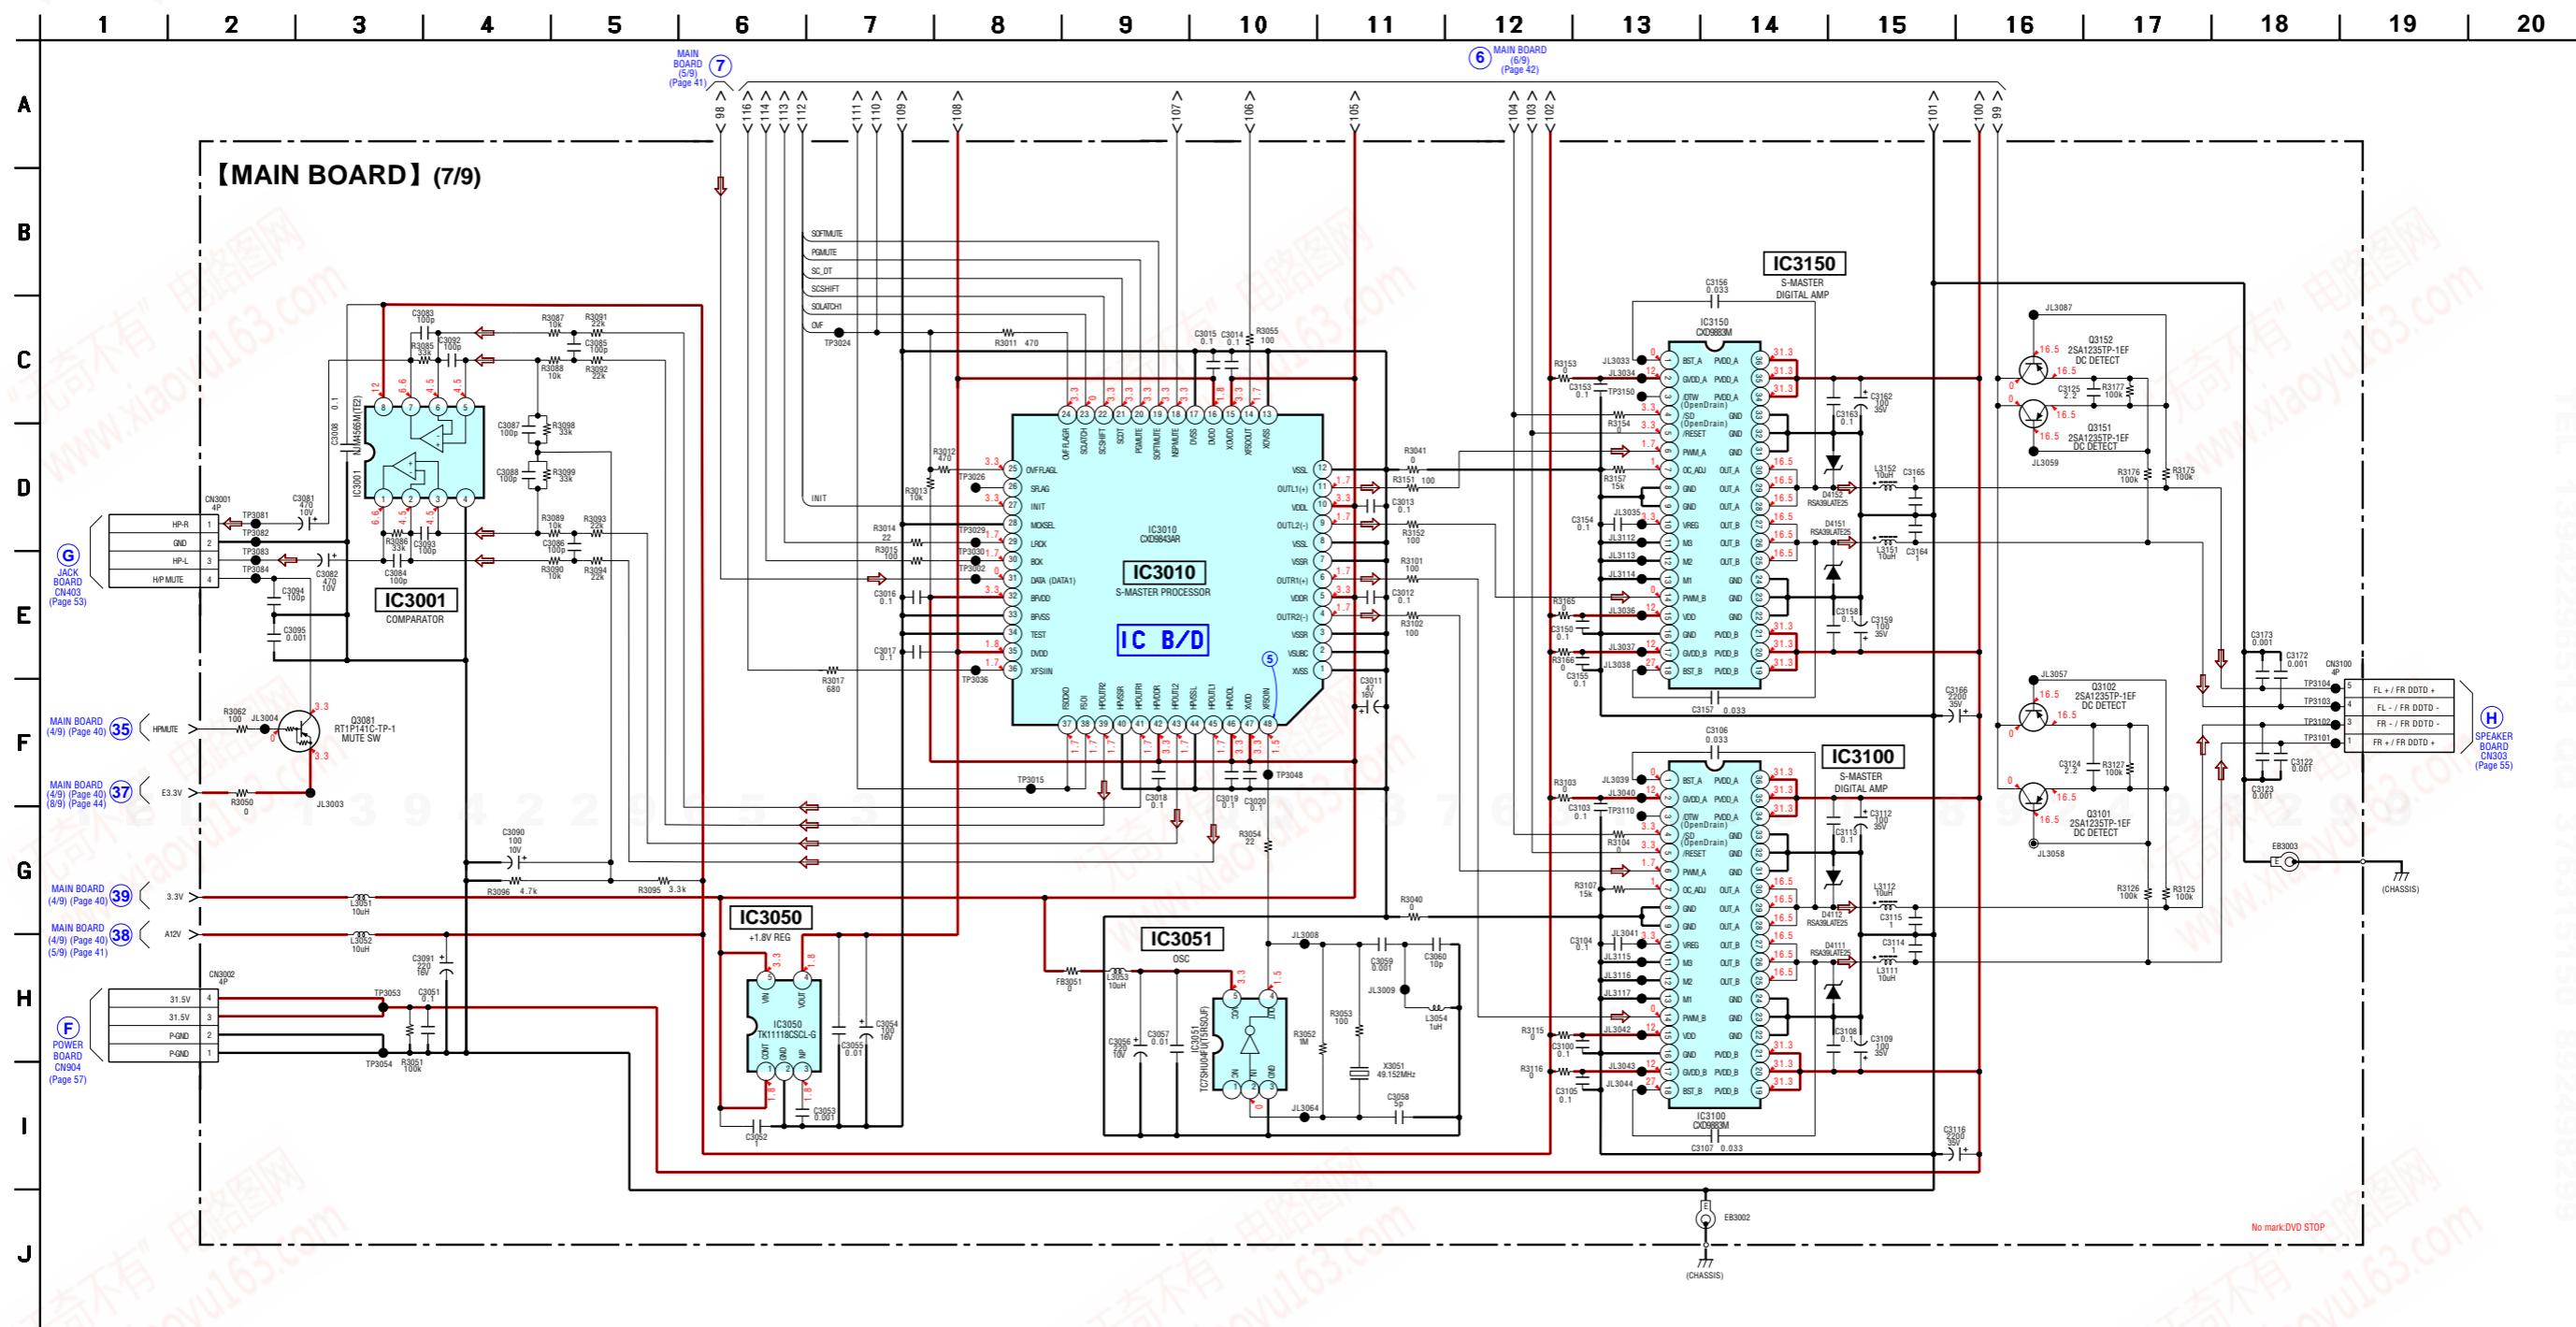

6-15. SCHEMATIC DIAGRAM – MAIN BOARD (8/9) – • See page 25 for Waveforms. • See page 59 for IC Pin Function Description.

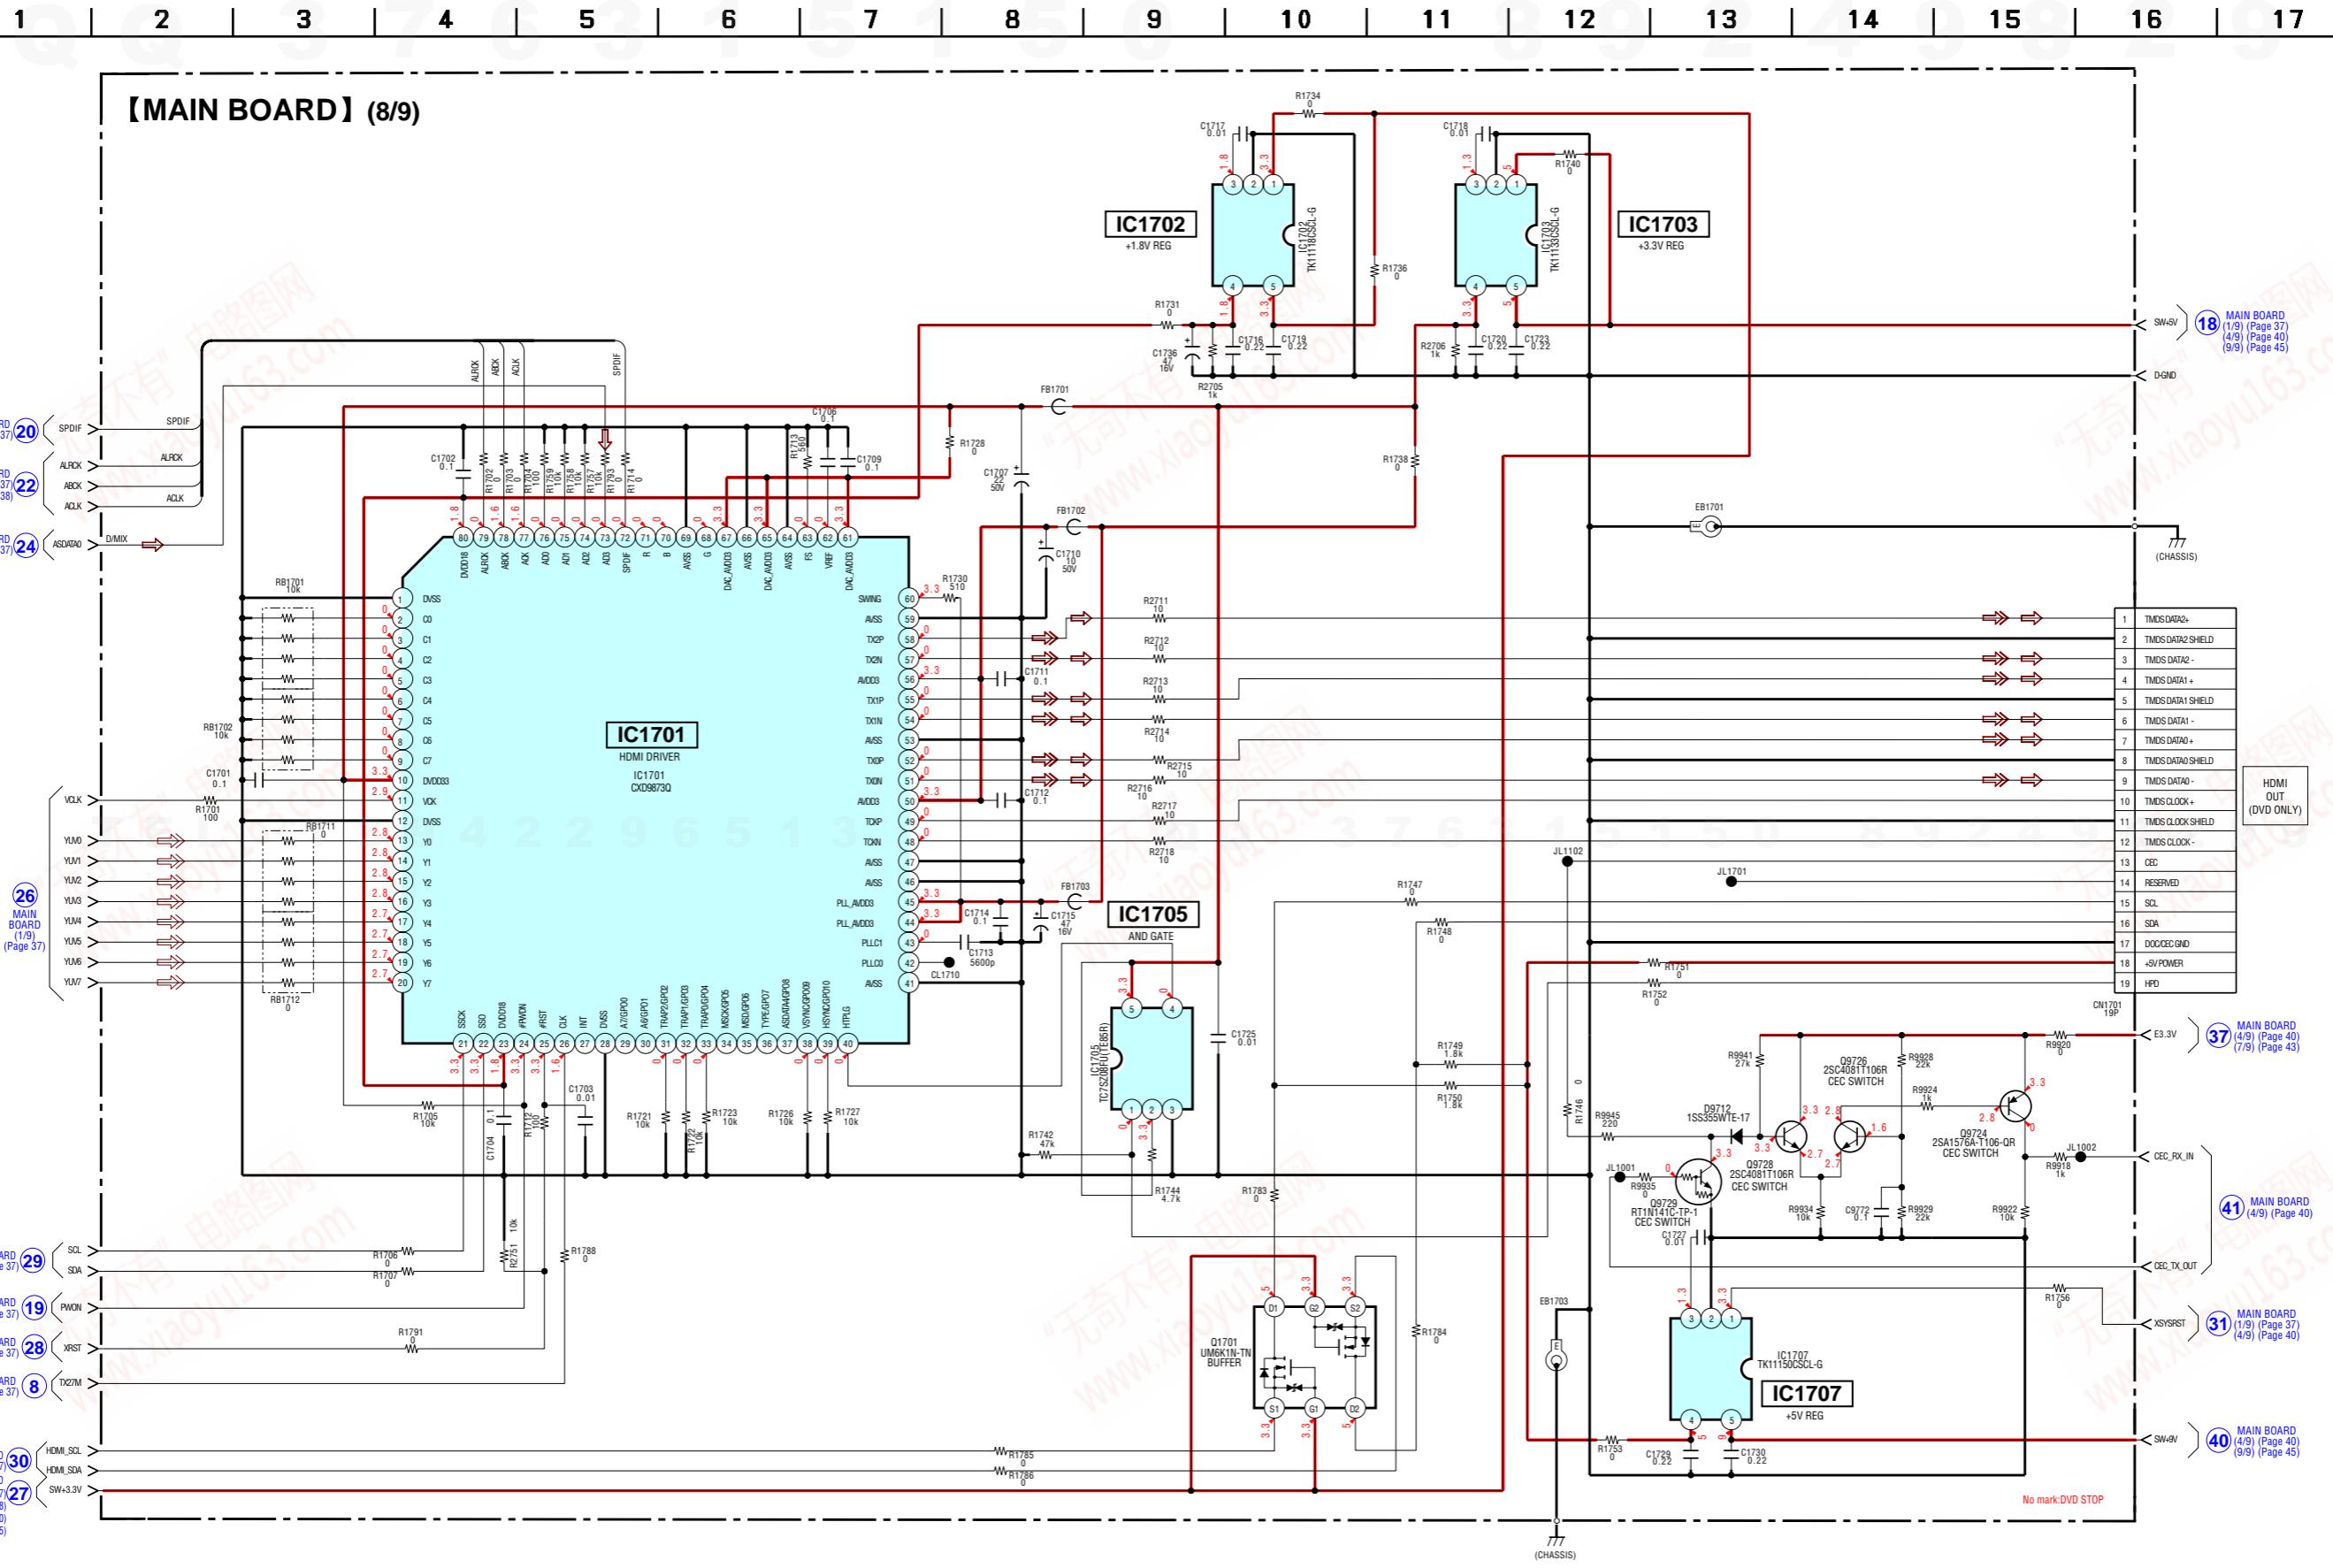


6-16. SCHEMATIC DIAGRAM – MAIN BOARD (9/9) – • See page 58 for IC Block Diagram.

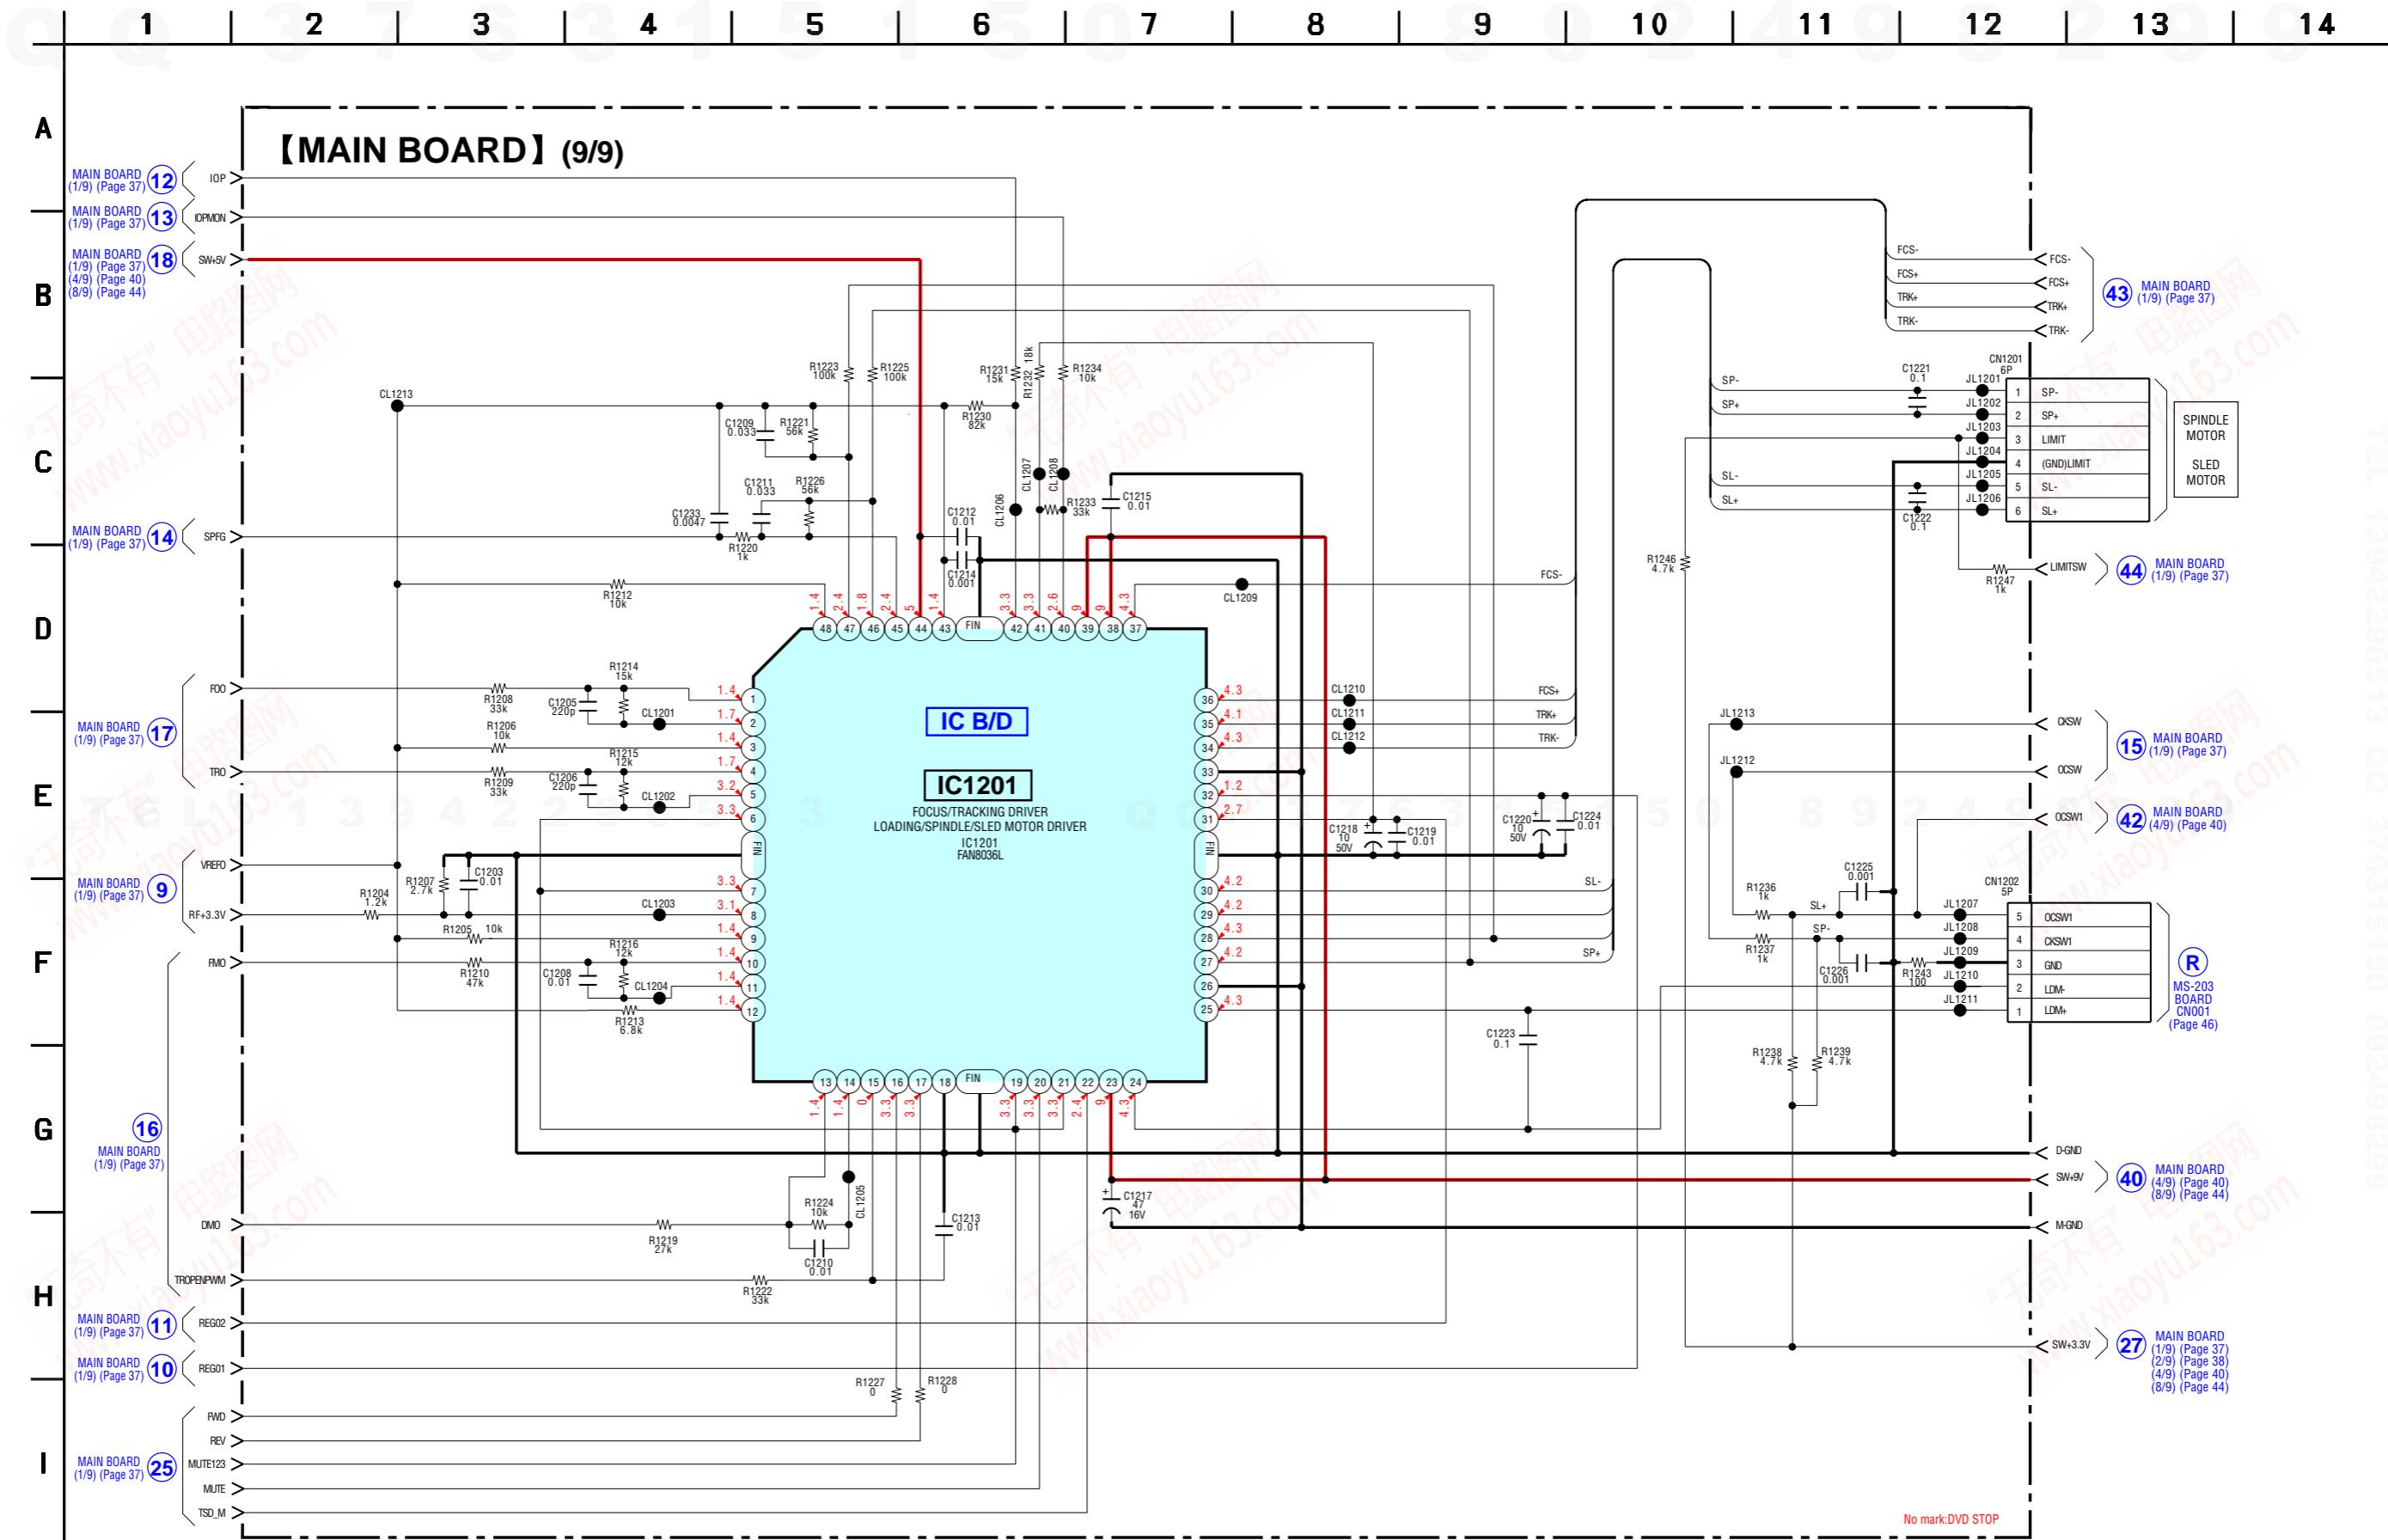


6-17. PRINTED WIRING BOARD – MS-203 BOARD – • See page 29 for Circuit Boards Location.




:Uses unleaded solder.

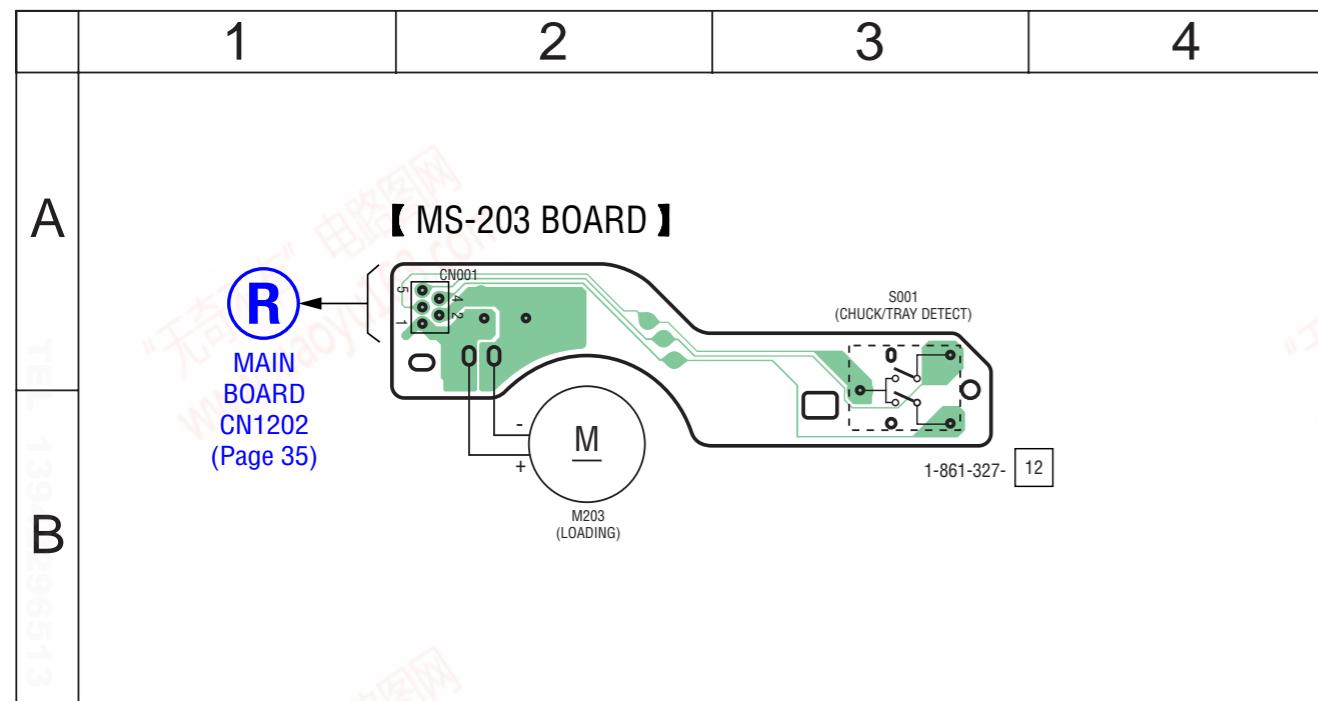


6-18. SCHEMATIC DIAGRAM – MS-203 BOARD –

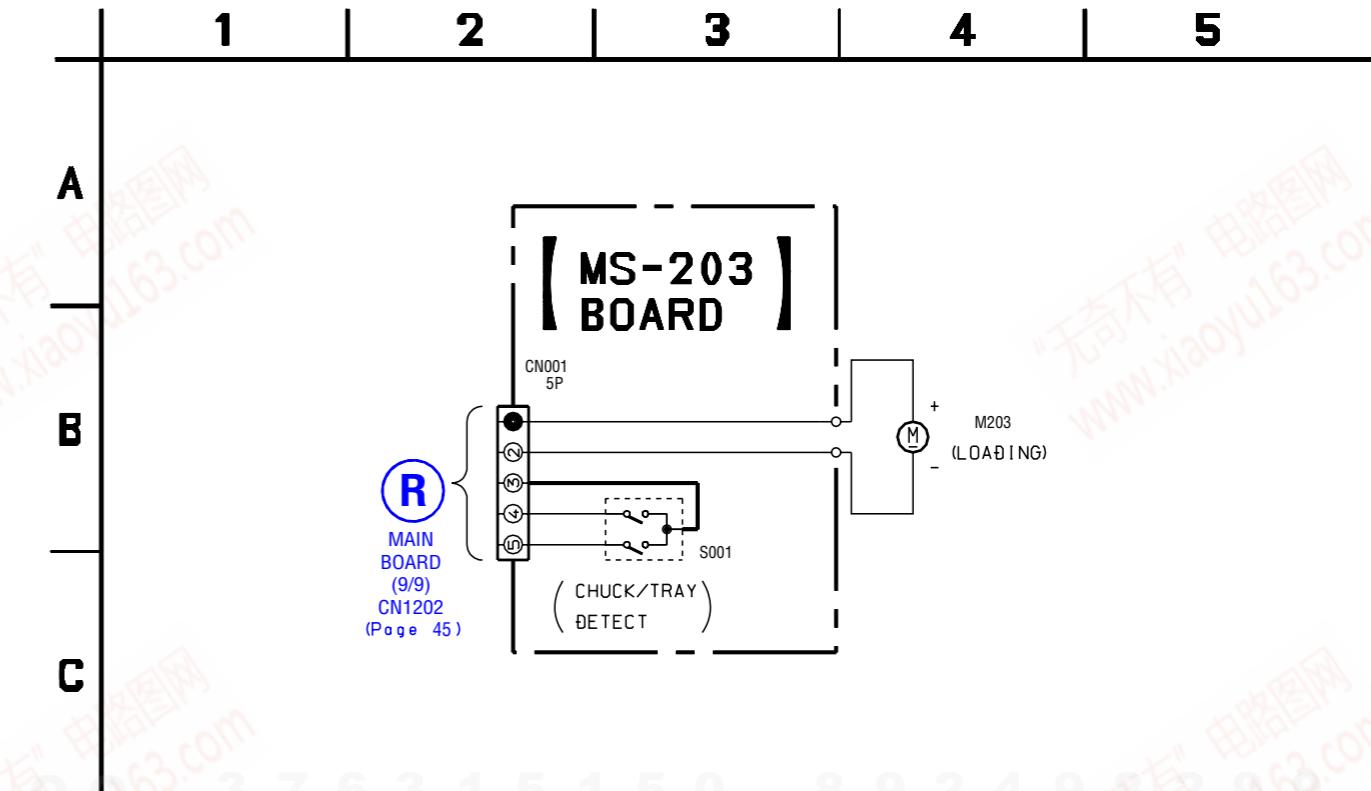


6-19. PRINTED WIRING BOARD – IO-SCART BOARD (DZ230/DZ231) – • See page 29 for Circuit Boards Location.  :Uses unleaded solder.

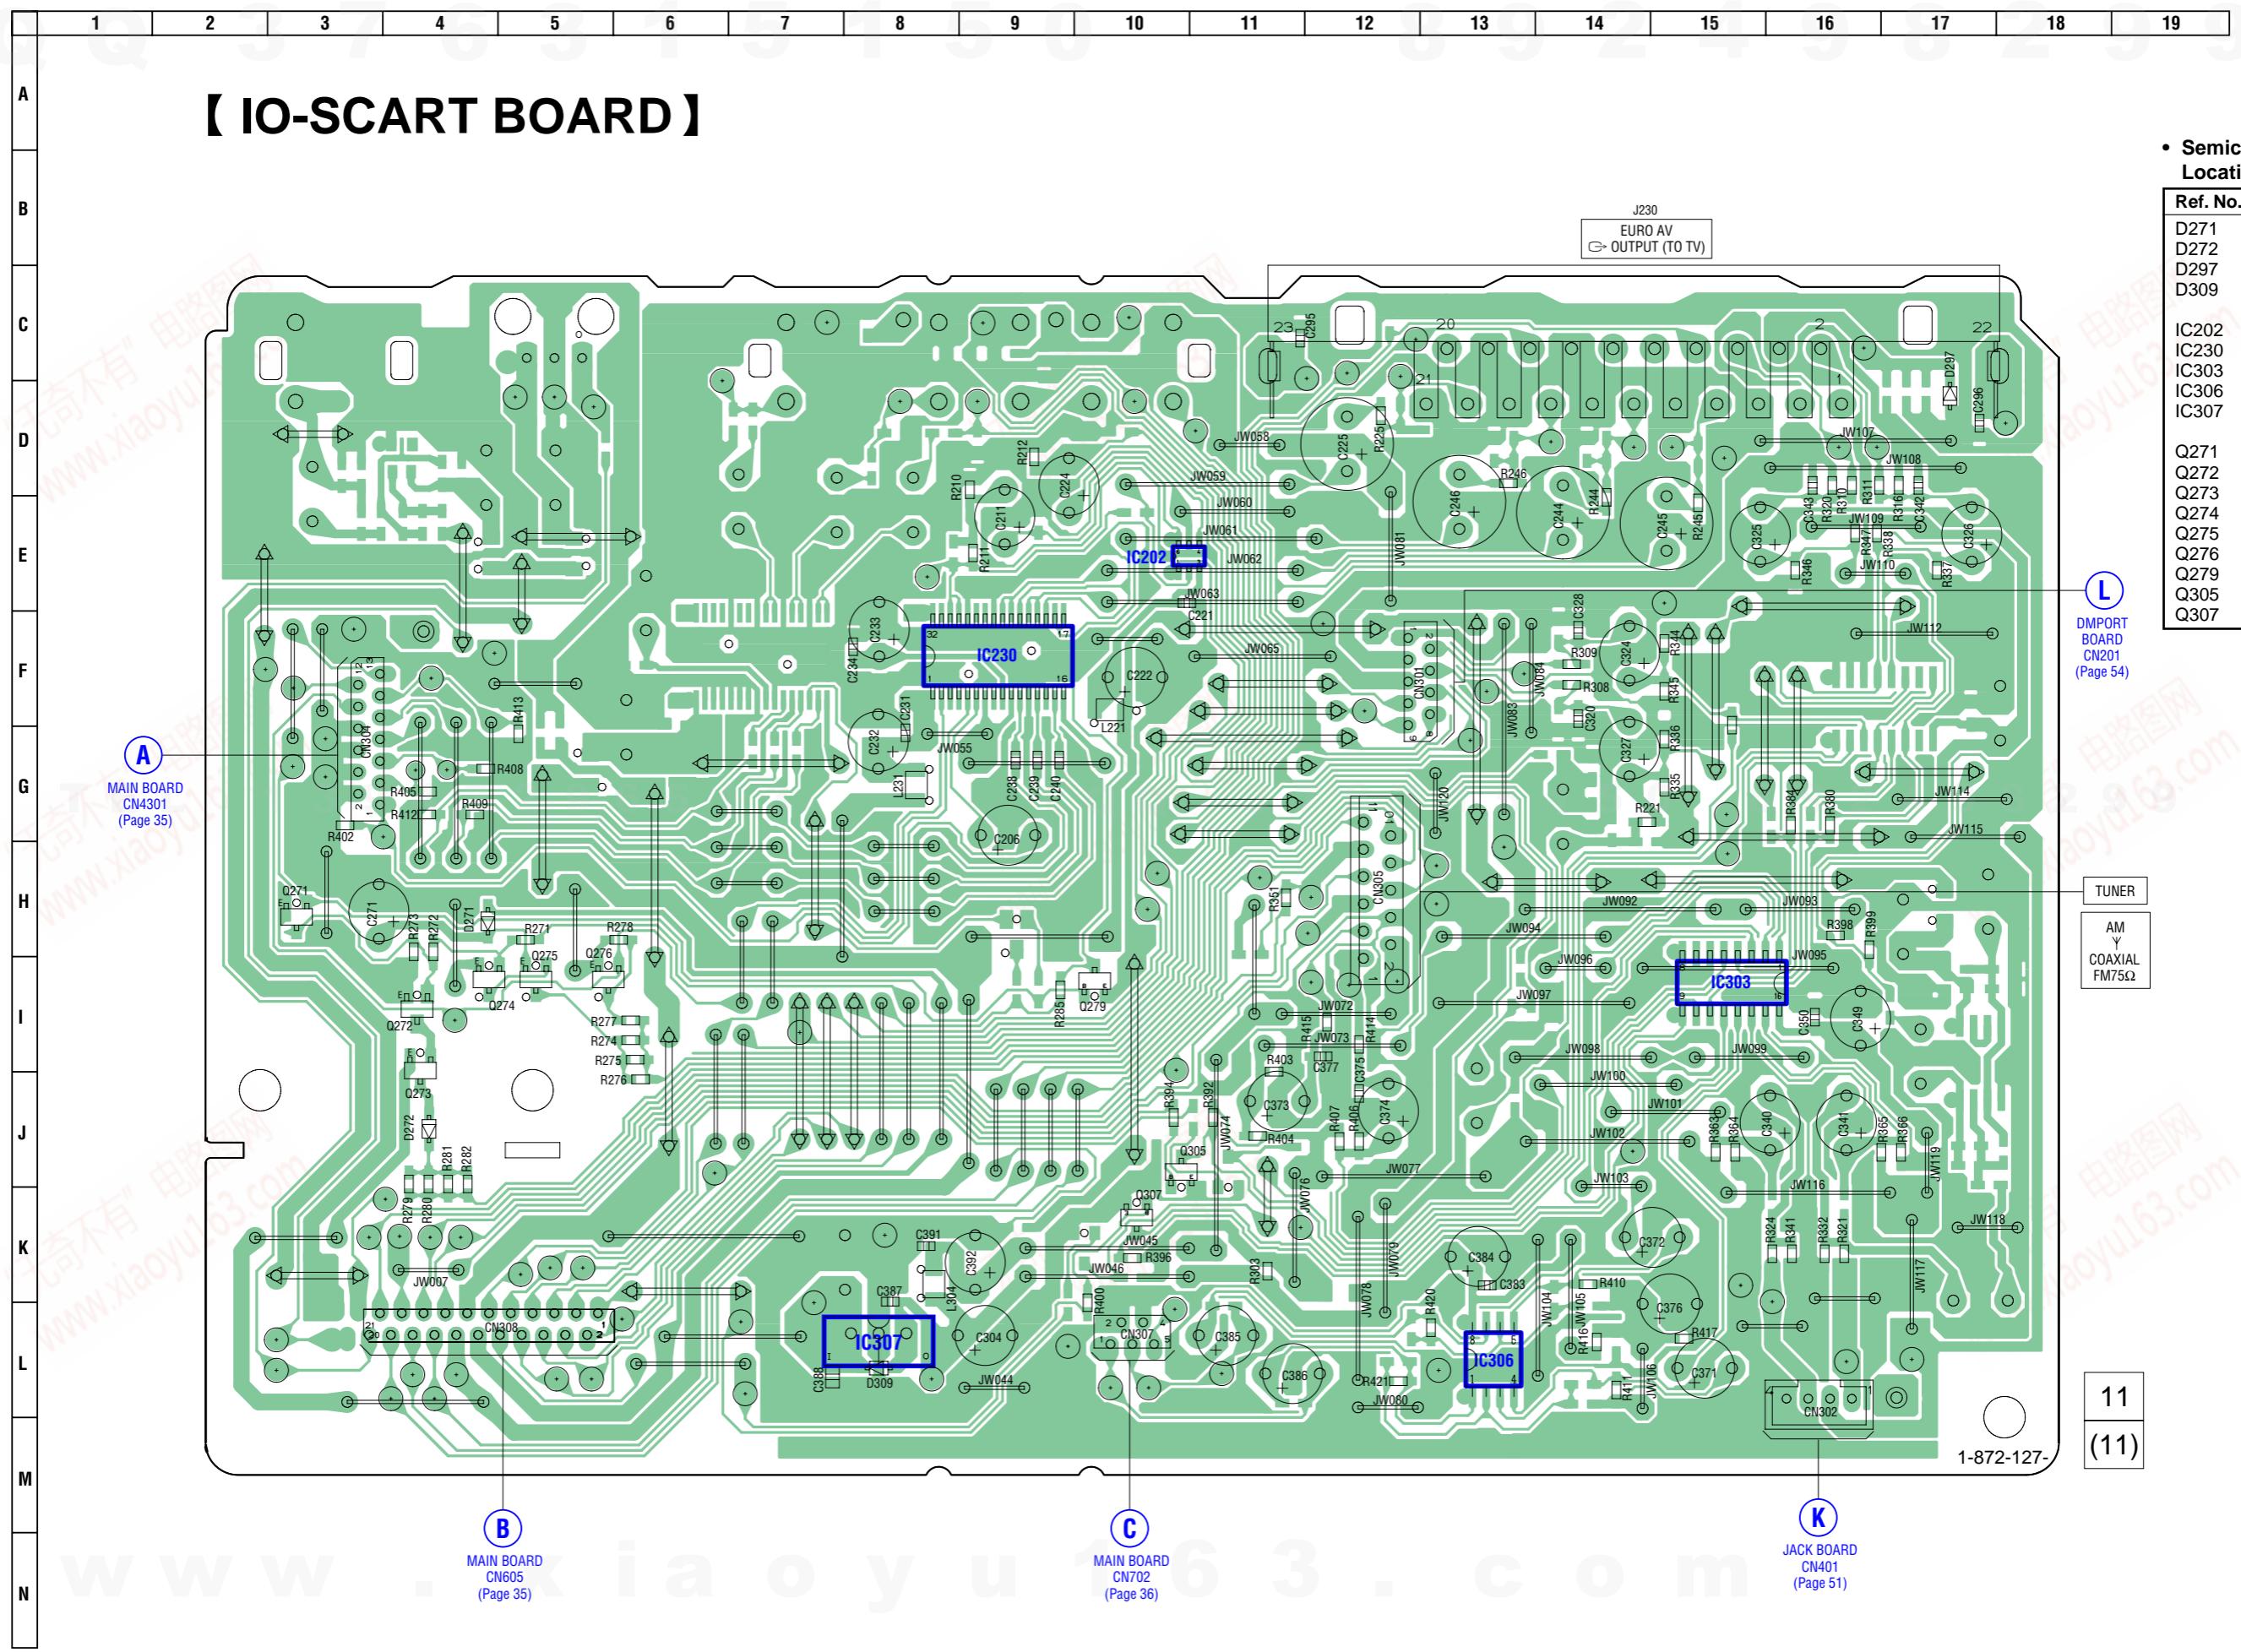

6-20. SCHEMATIC DIAGRAM – IO-SCART BOARD (DZ230/DZ231) – • See page 29 for Waveforms. • See page 59, 60 for IC Block Diagrams.

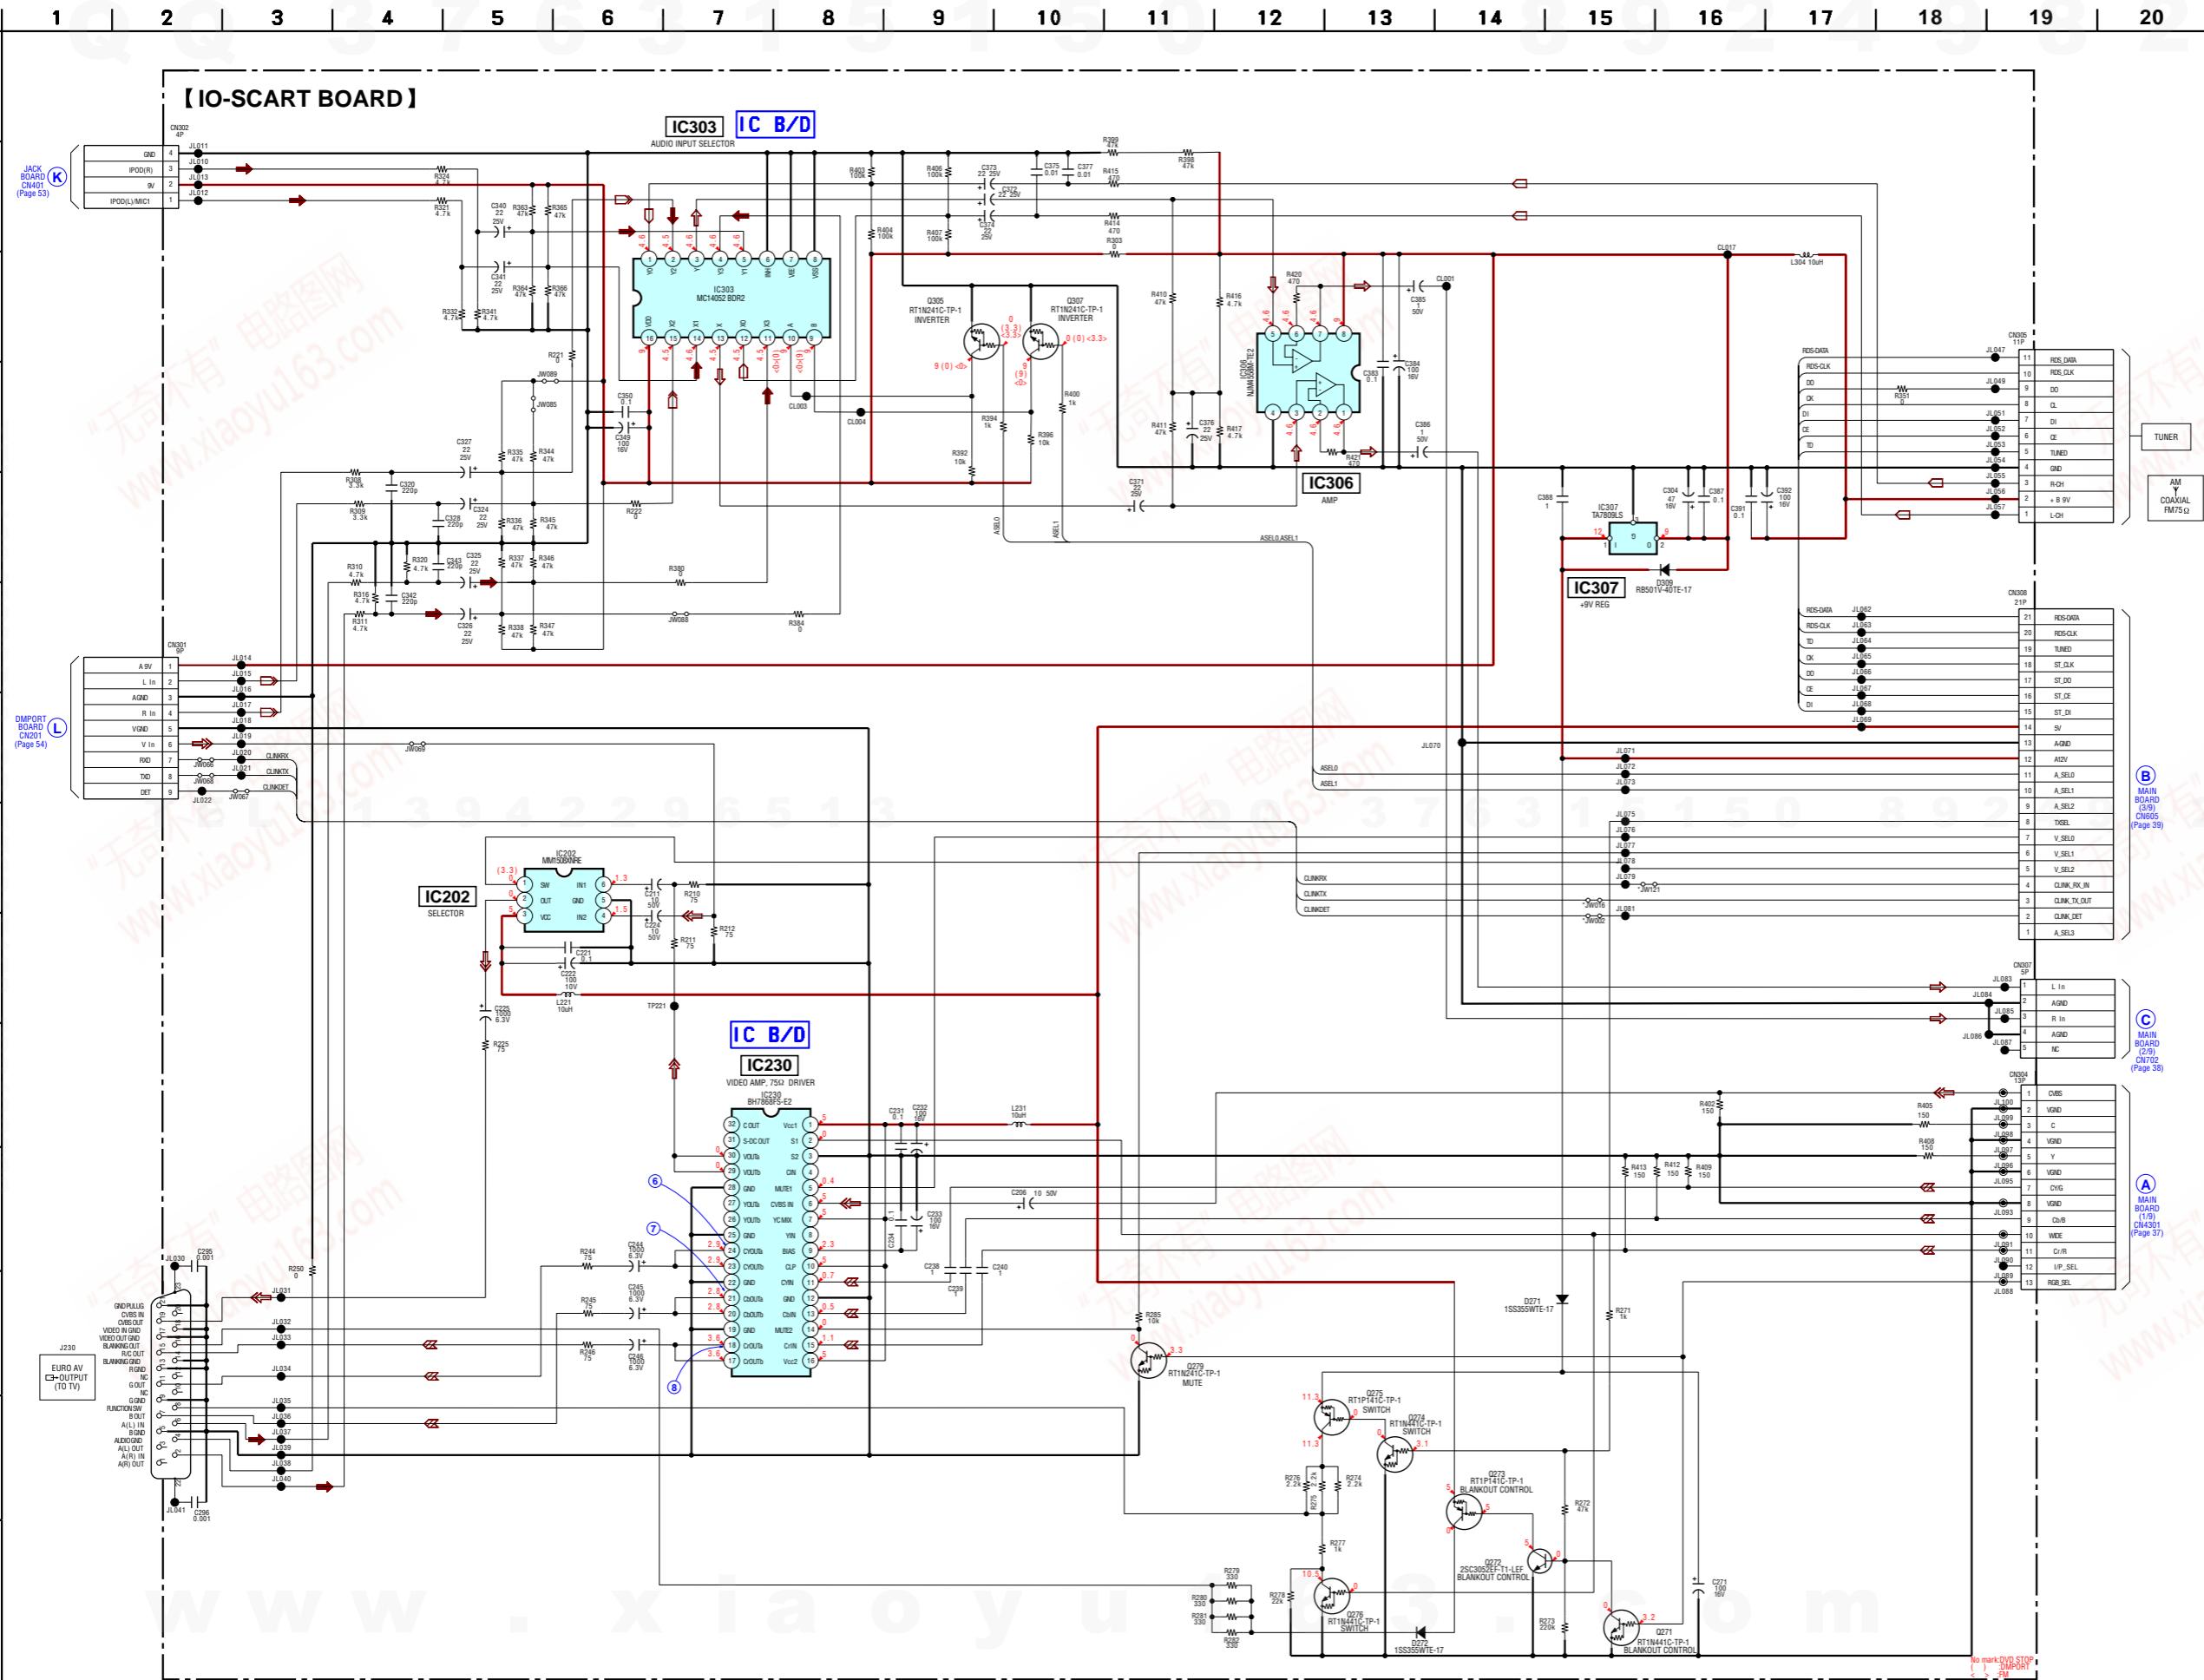


6-21. PRINTED WIRING BOARD – IO-S-OUT BOARD (HDZ235) – • See page 29 for Circuit Boards Location.  :Uses unleaded solder.

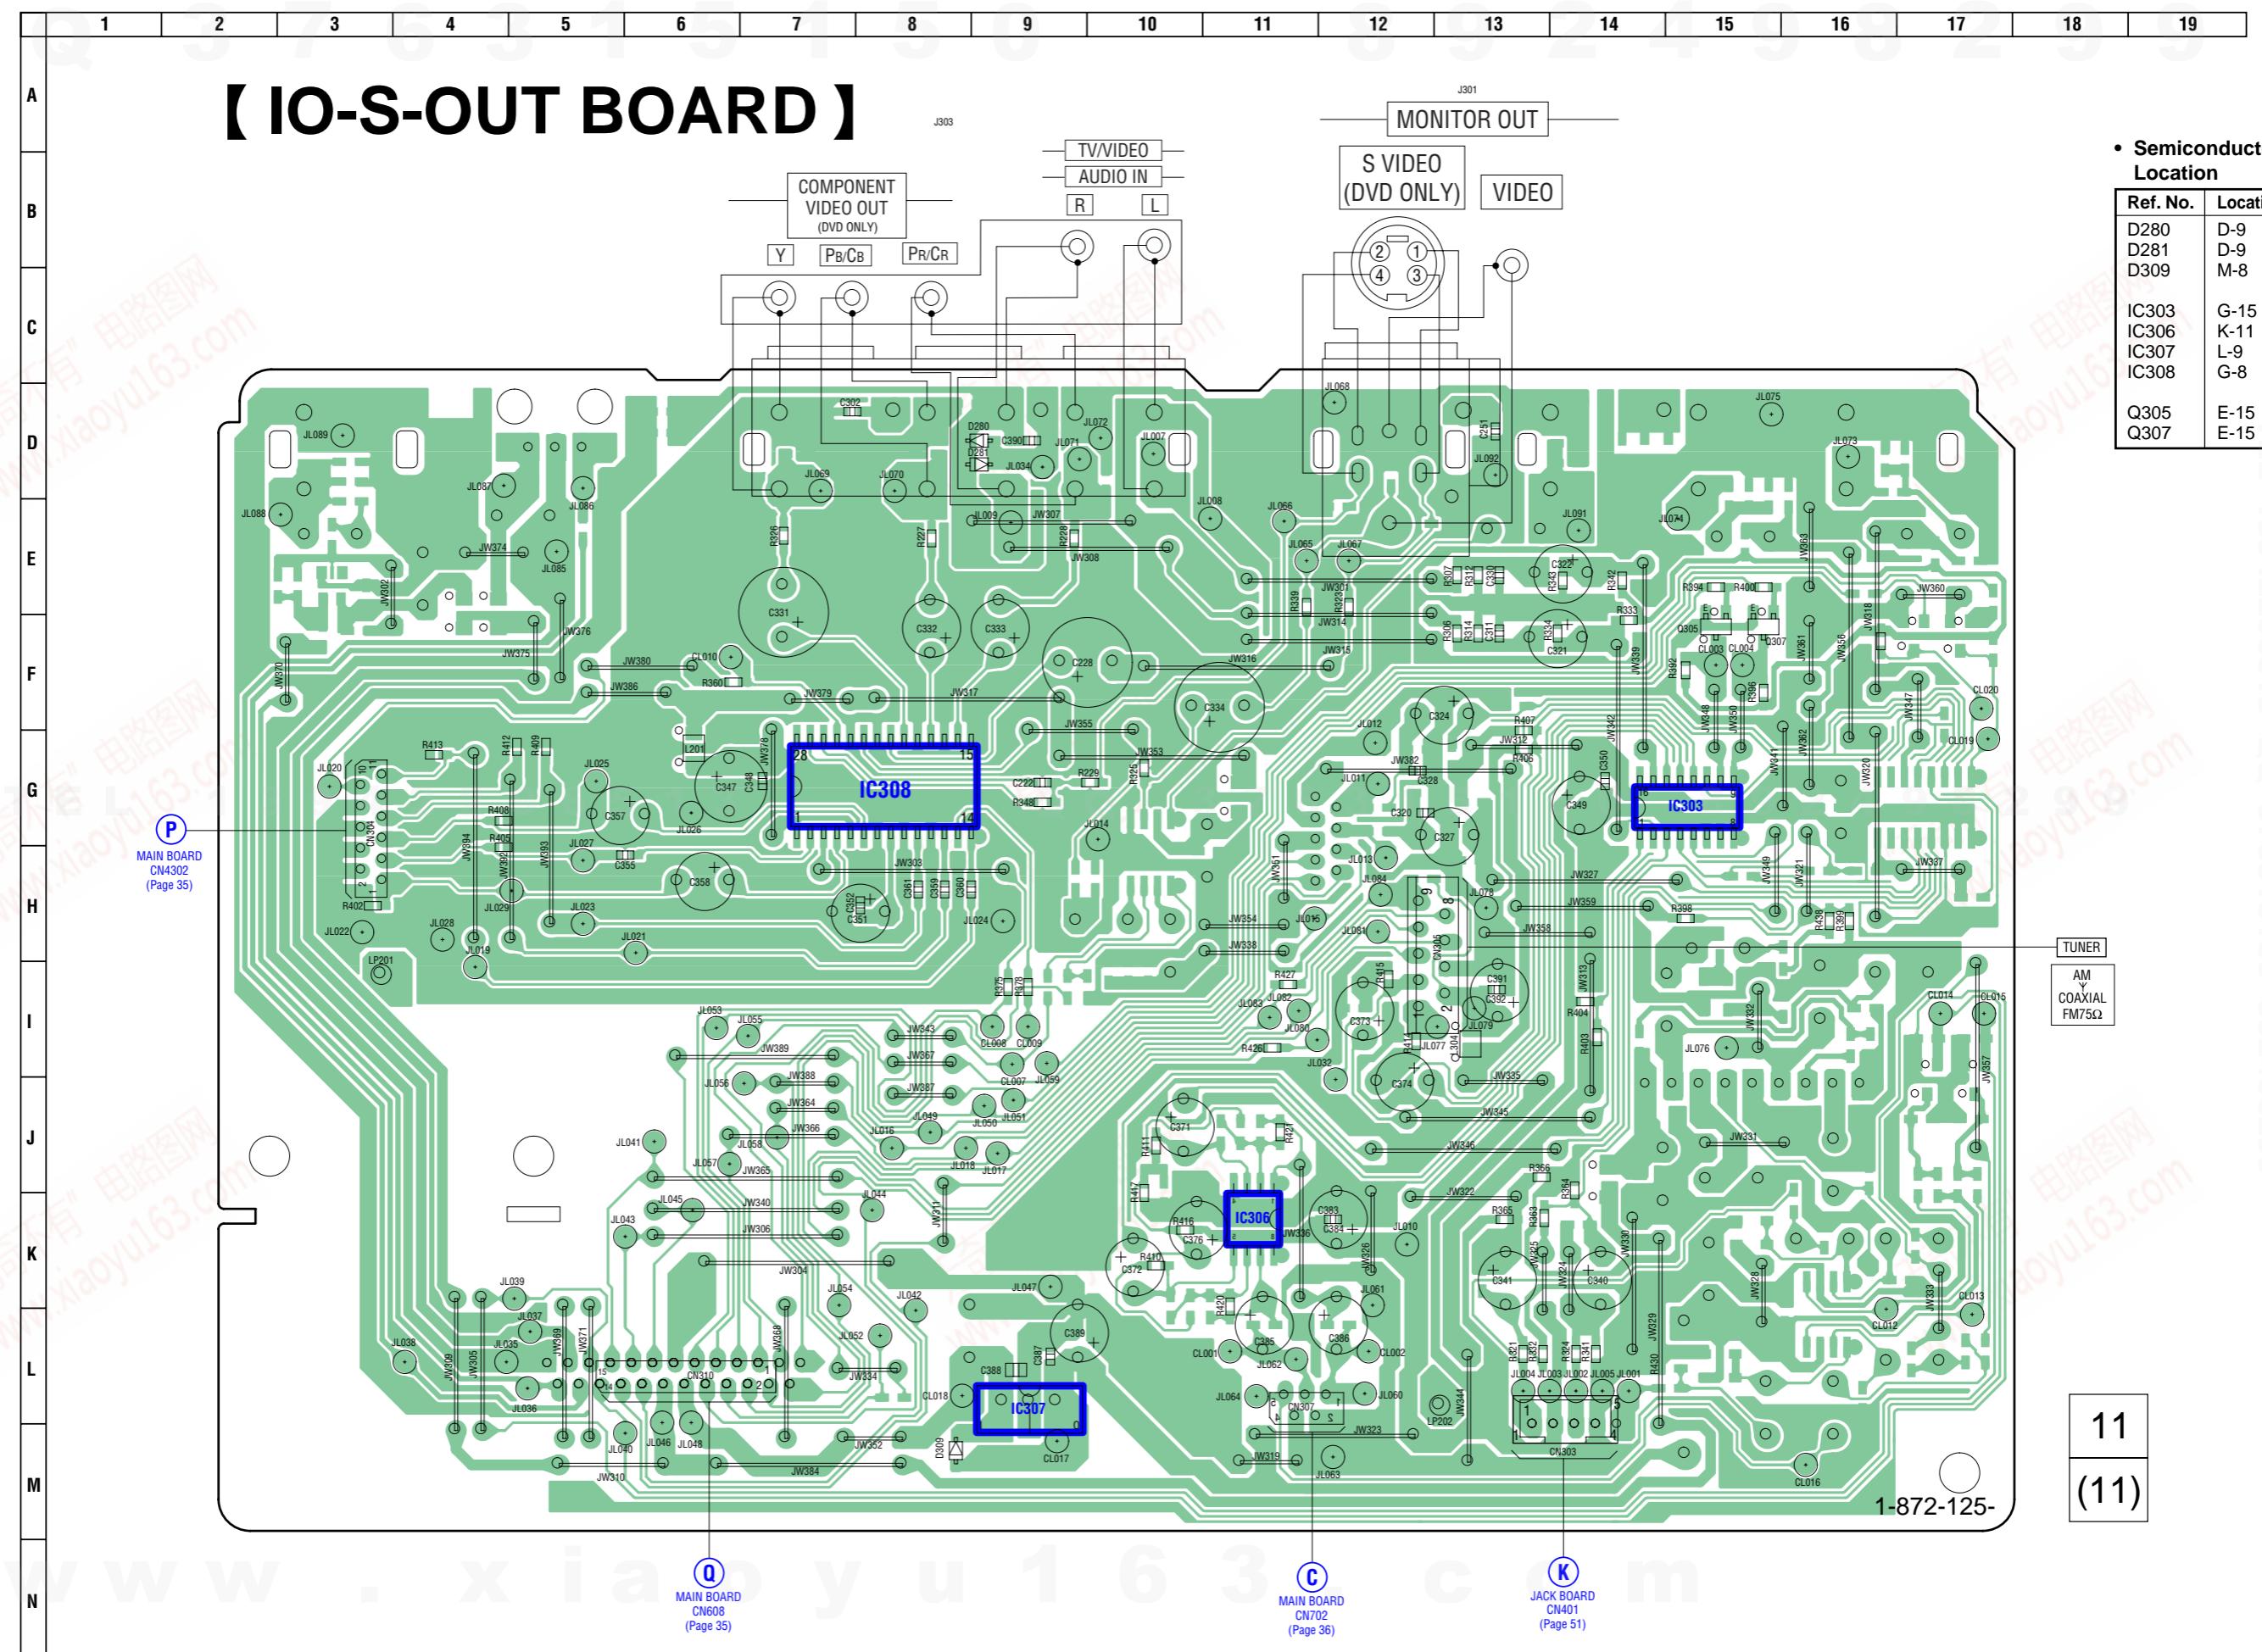


6-22. SCHEMATIC DIAGRAM – IO-S-OUT BOARD (HDZ235) – • See page 29 for Waveforms. • See page 59 for IC Block Diagrams.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18

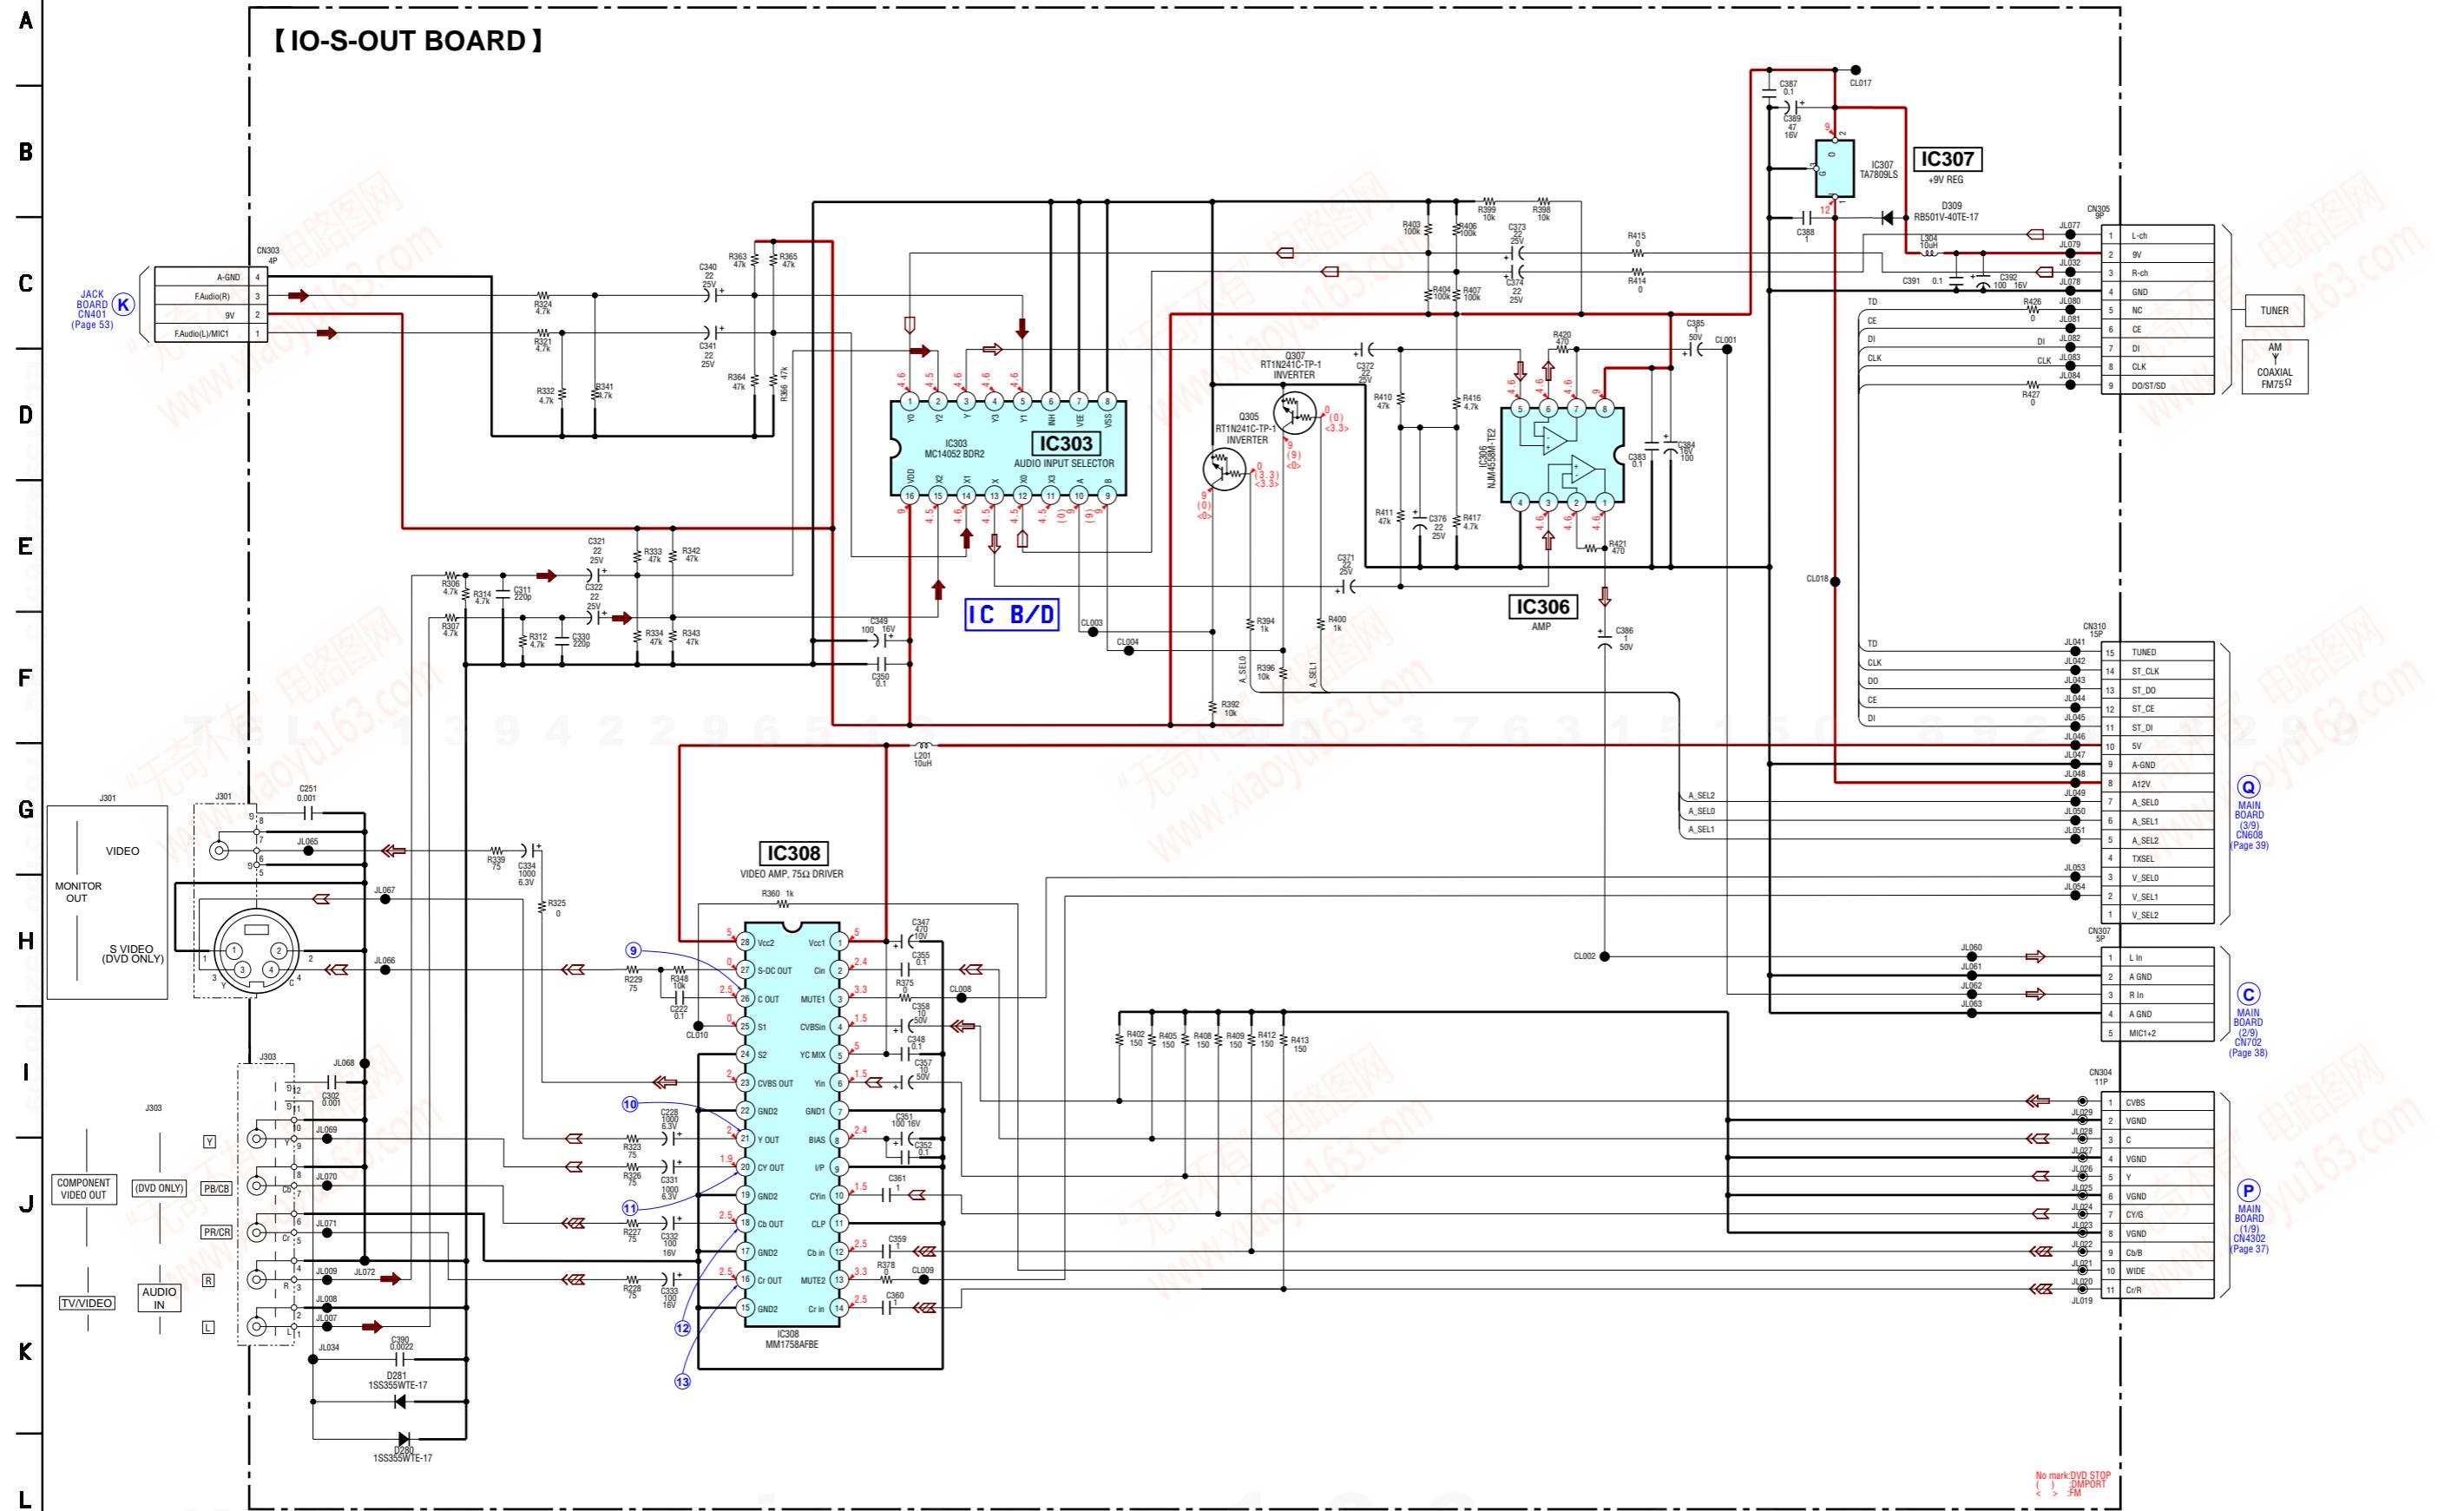



6-23. PRINTED WIRING BOARDS – FL, JACK BOARD – • See page 29 for Circuit Boards Location.  :Uses unleaded solder.

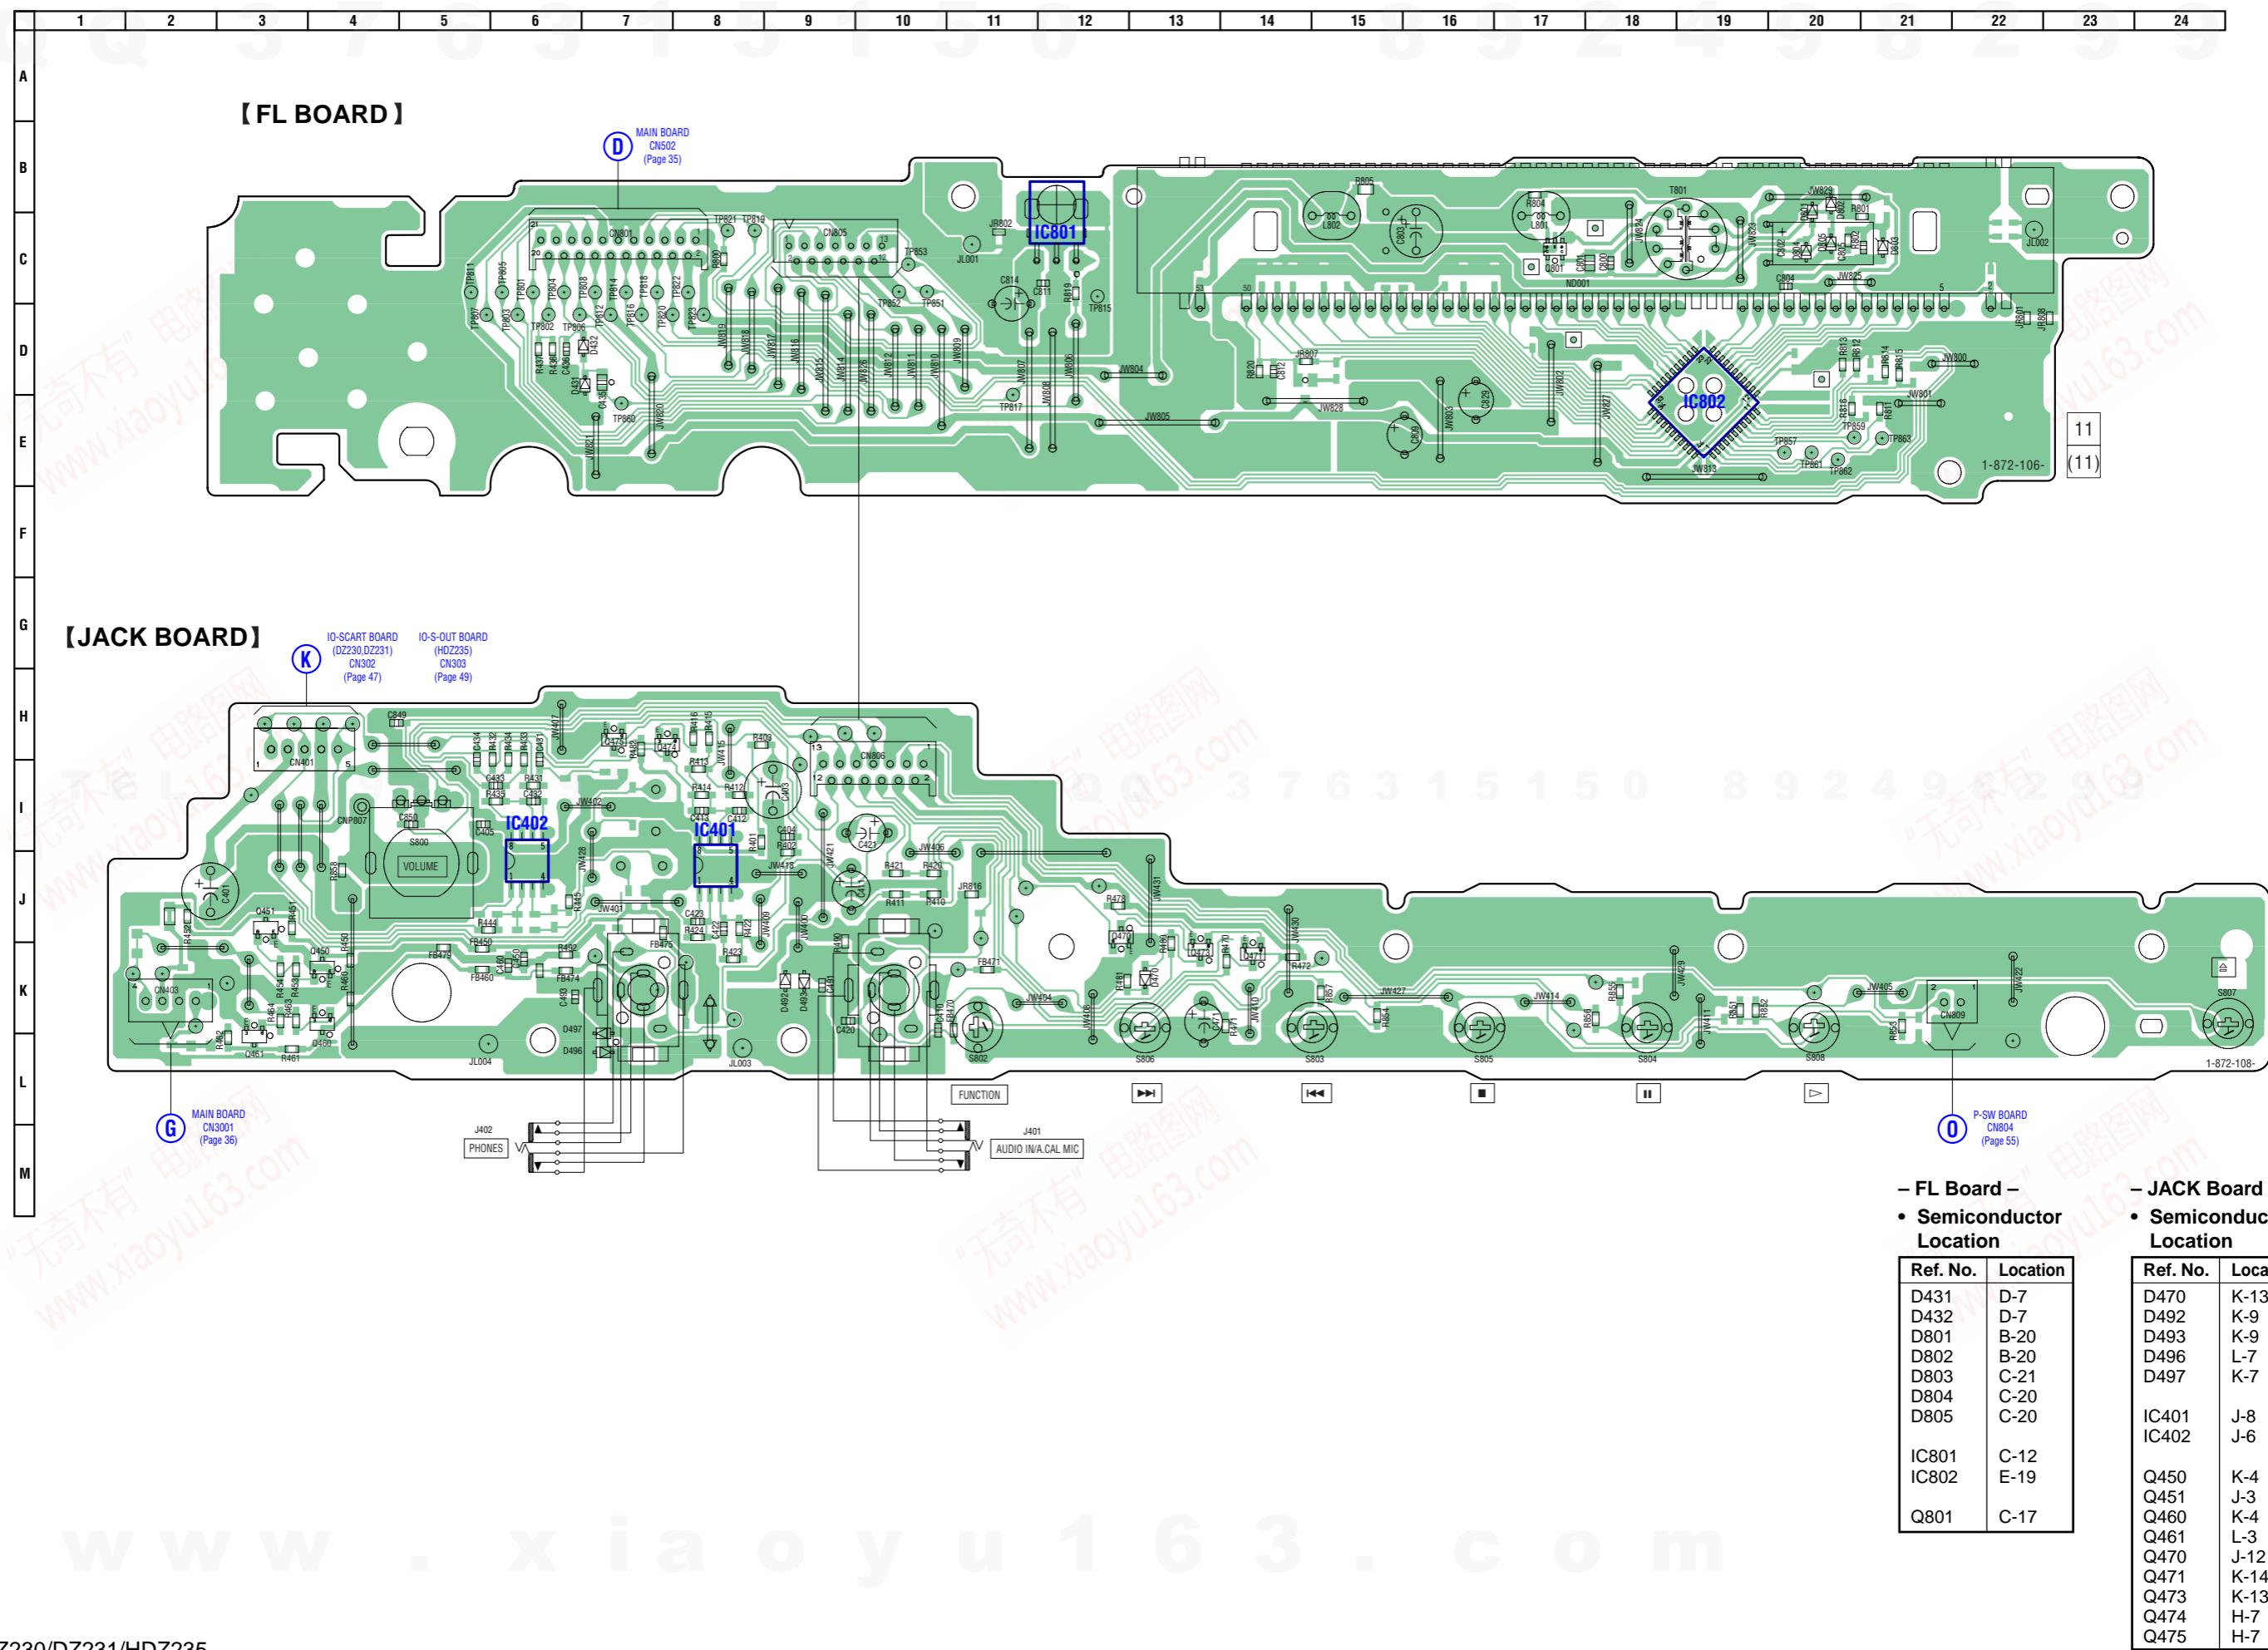


6-24. SCHEMATIC DIAGRAM – FL BOARD – • See page 61 for IC Block Diagram.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

【 FL BOARD 】

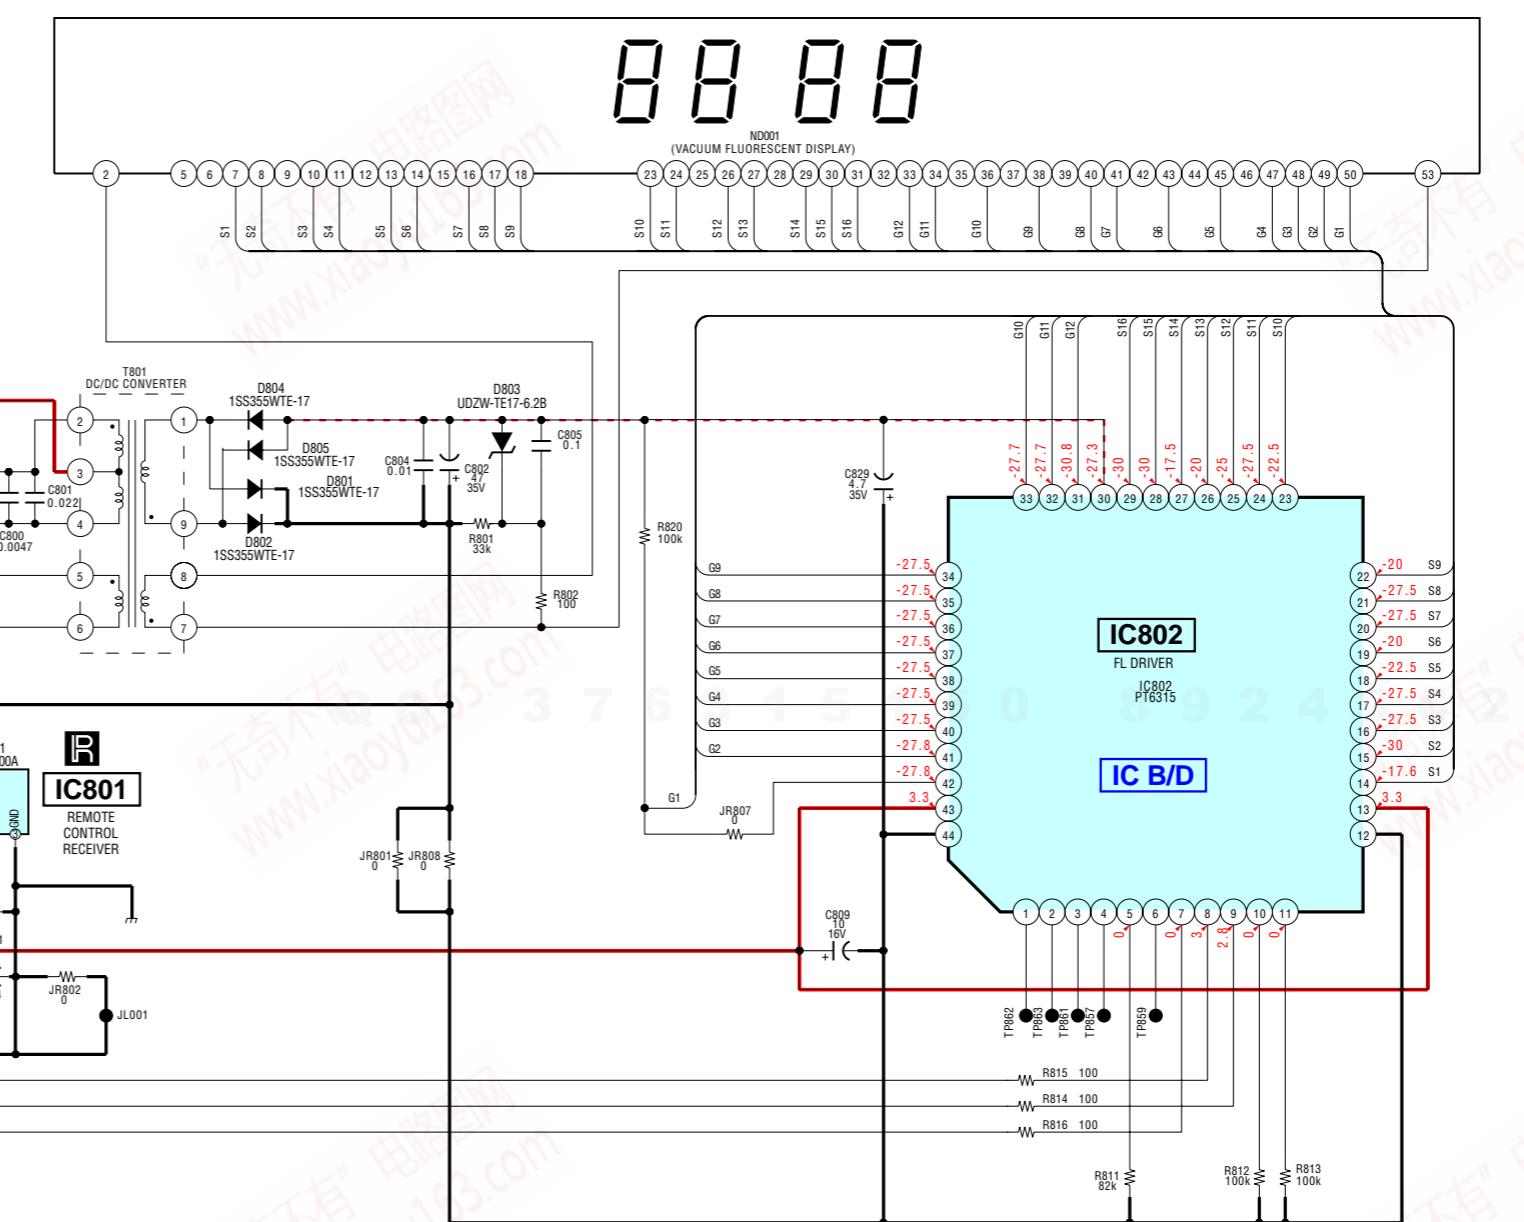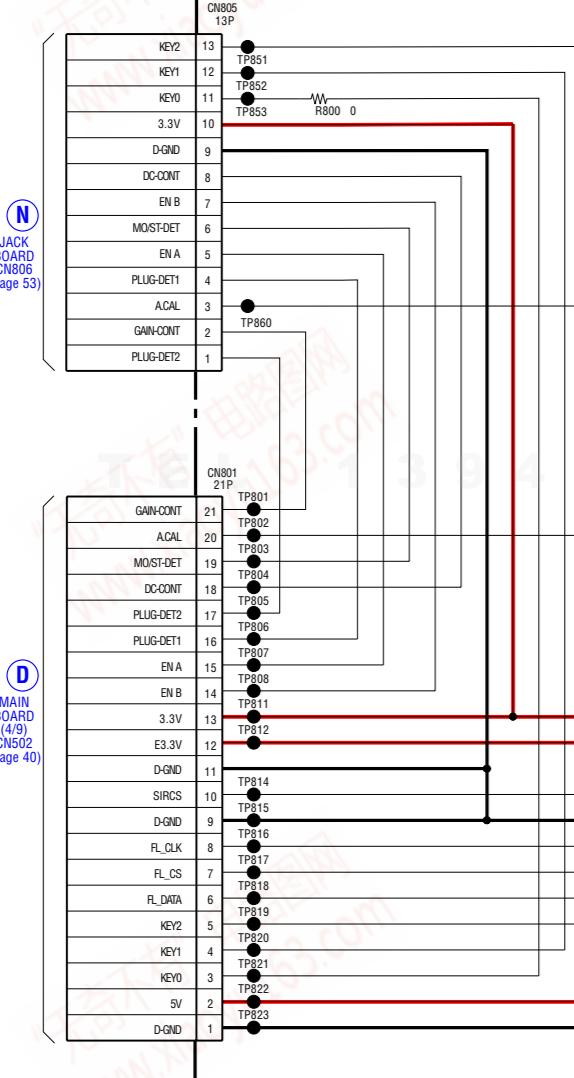

6-25. SCHEMATIC DIAGRAM – JACK BOARD –

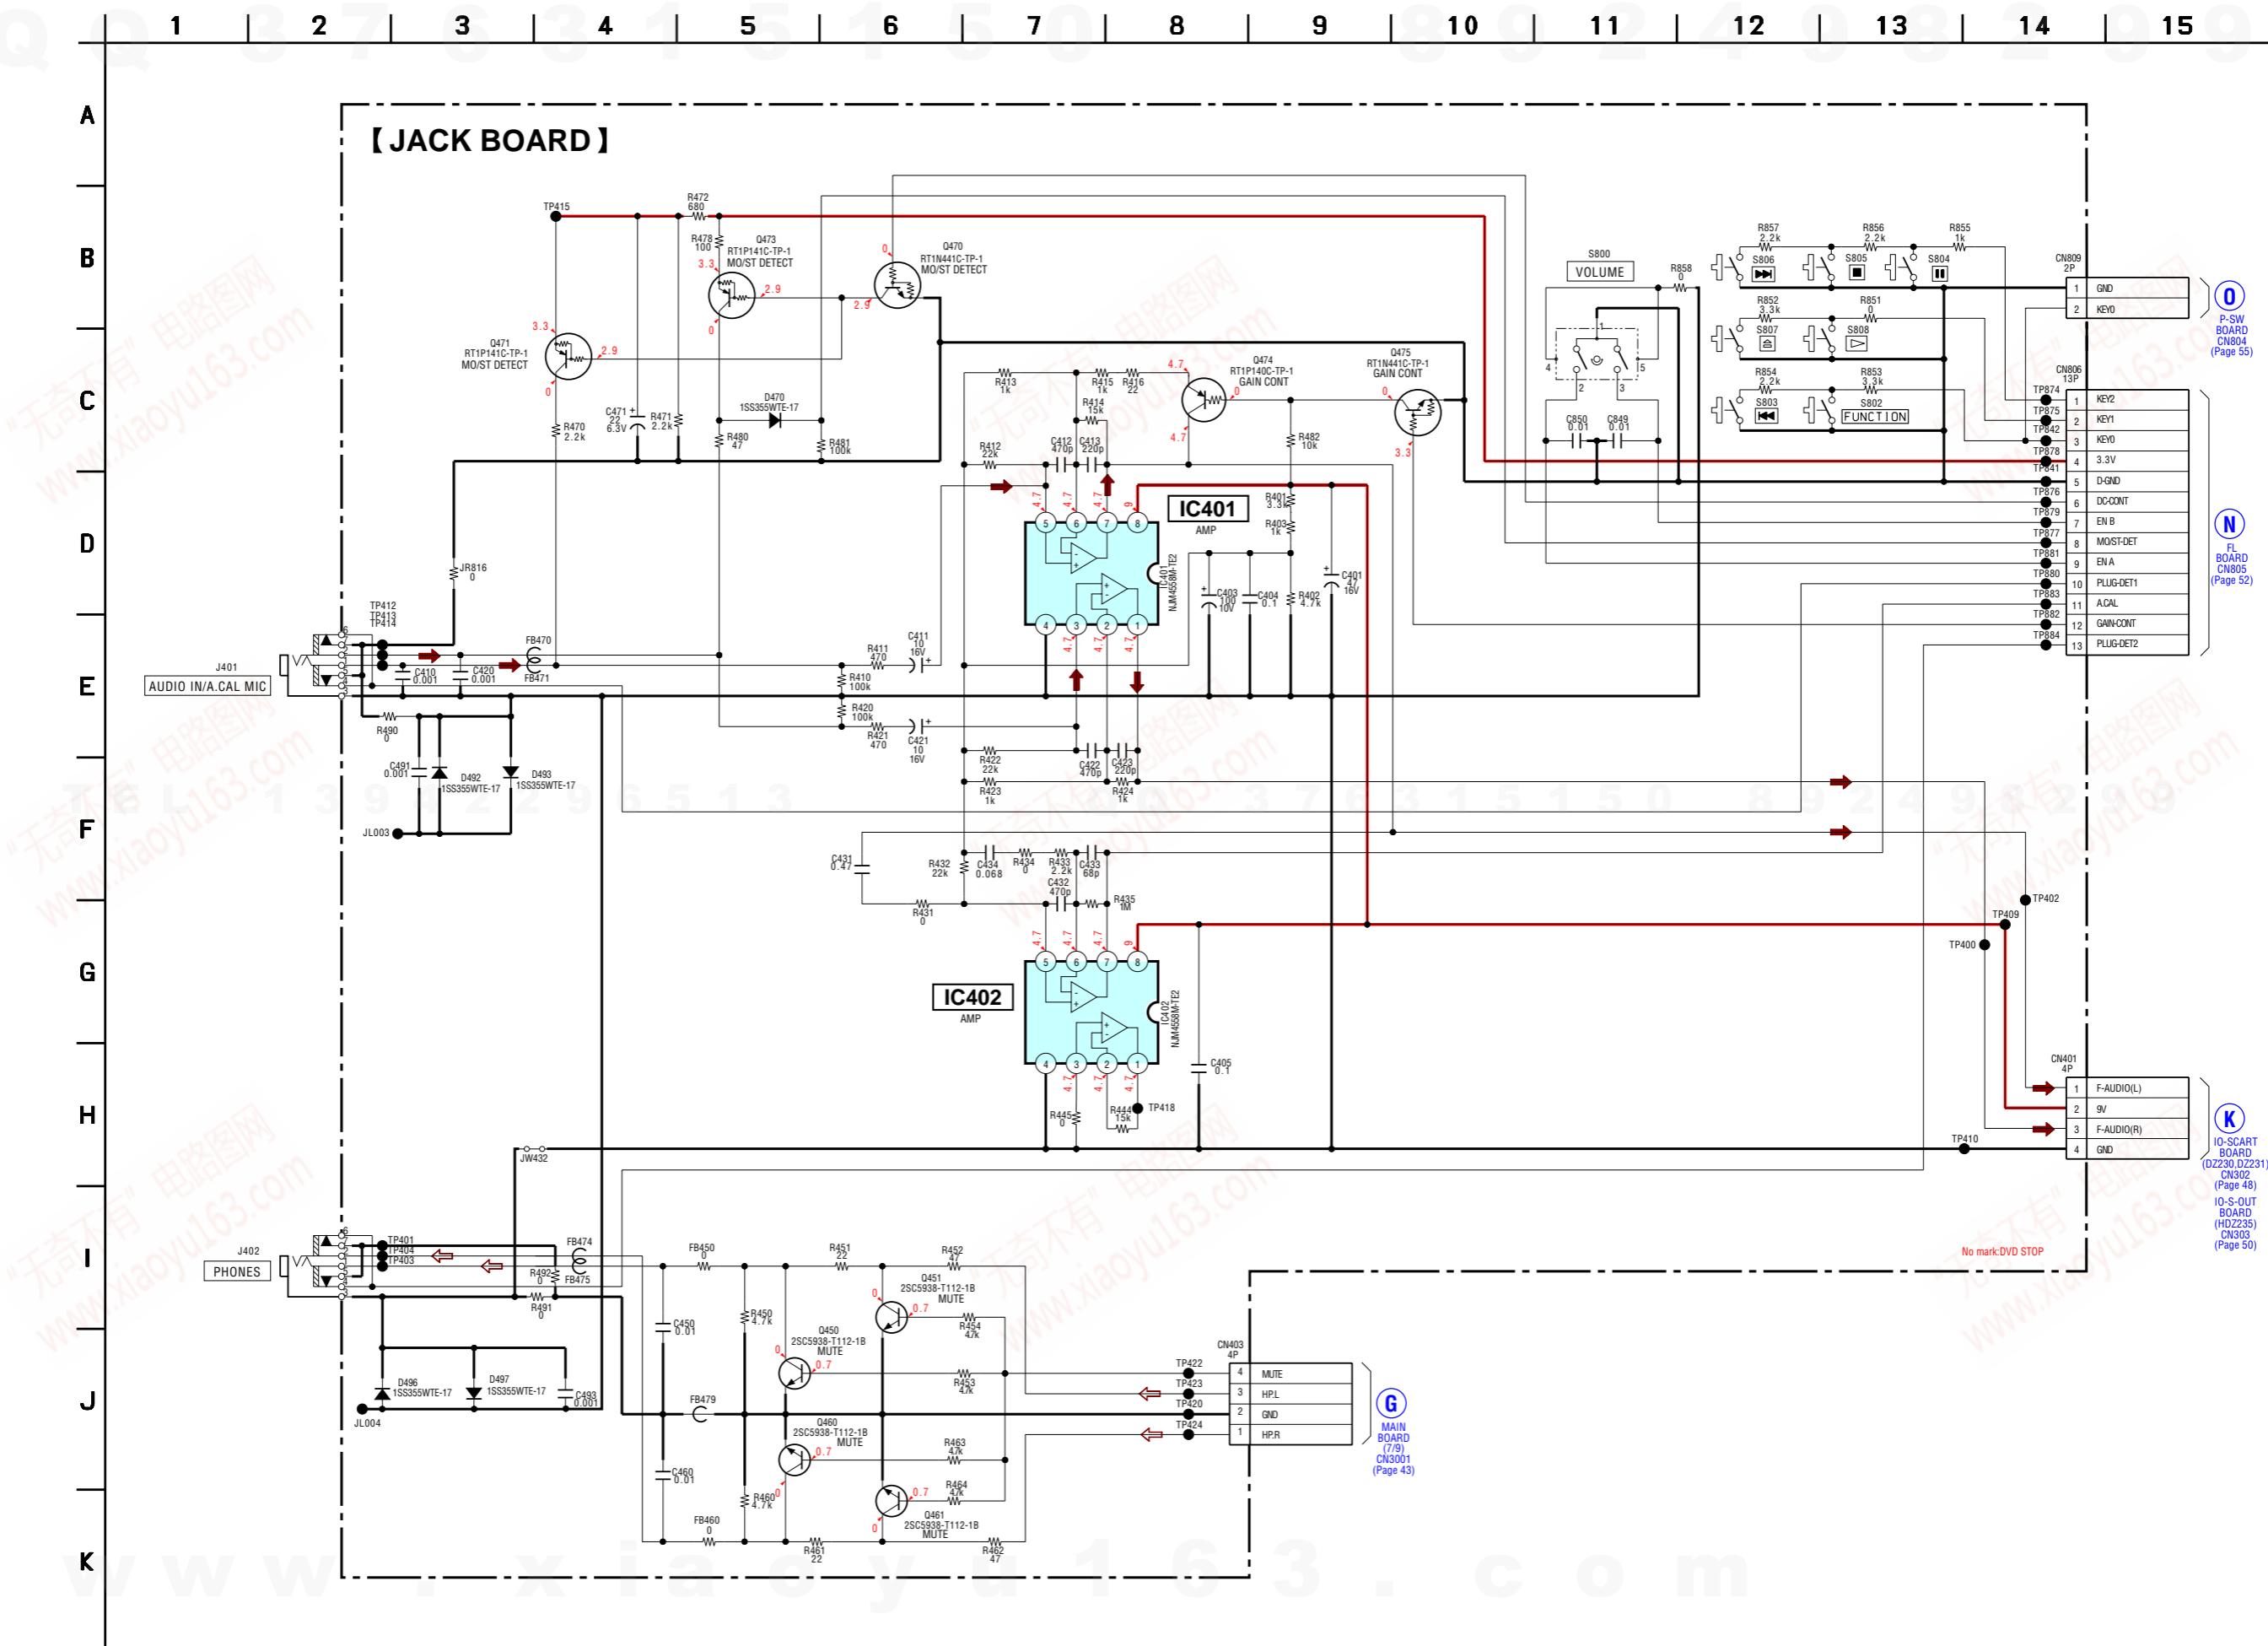


6-26. PRINTED WIRING BOARD – DMPORT BOARD (DZ230/DZ231) – • See page 29 for Circuit Boards Location.


 :Uses unleaded solder.



【DMPORT BOARD】(SIDE A)

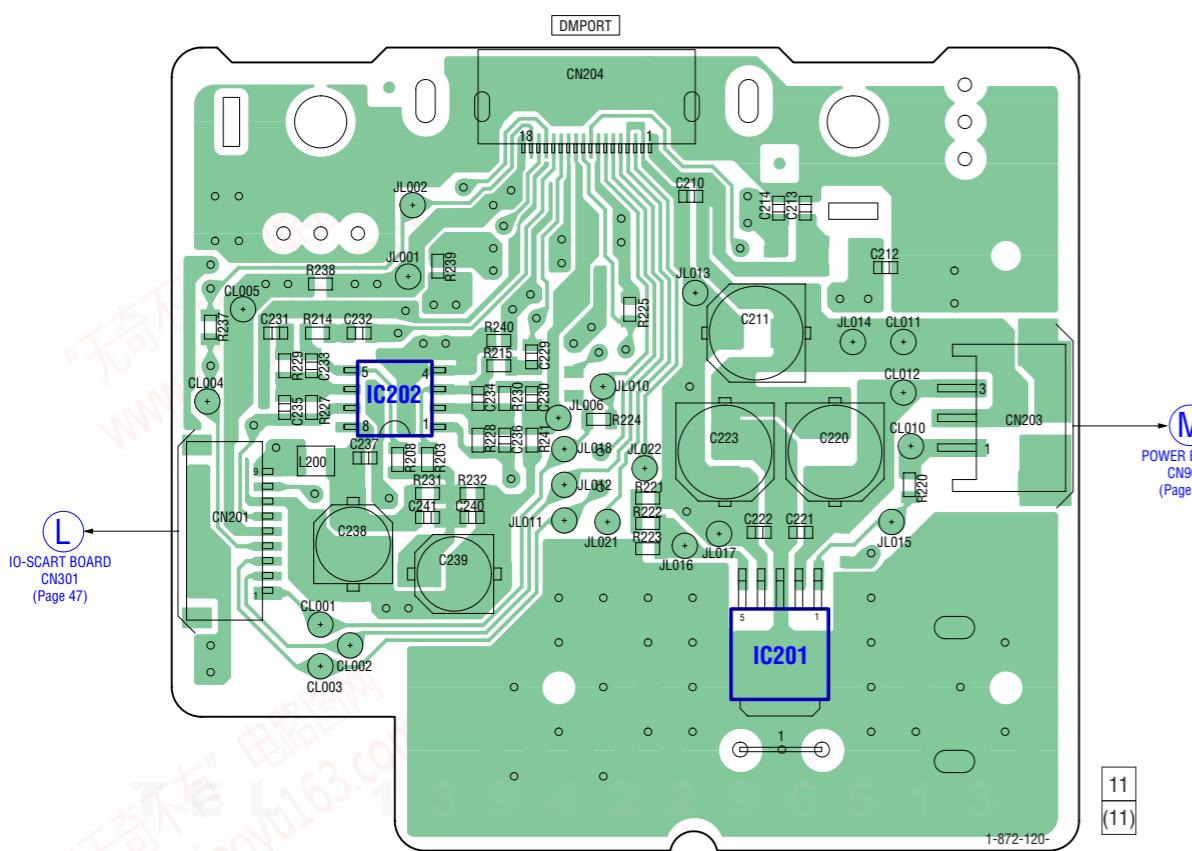


【DMPORT BOARD】(SIDE B)

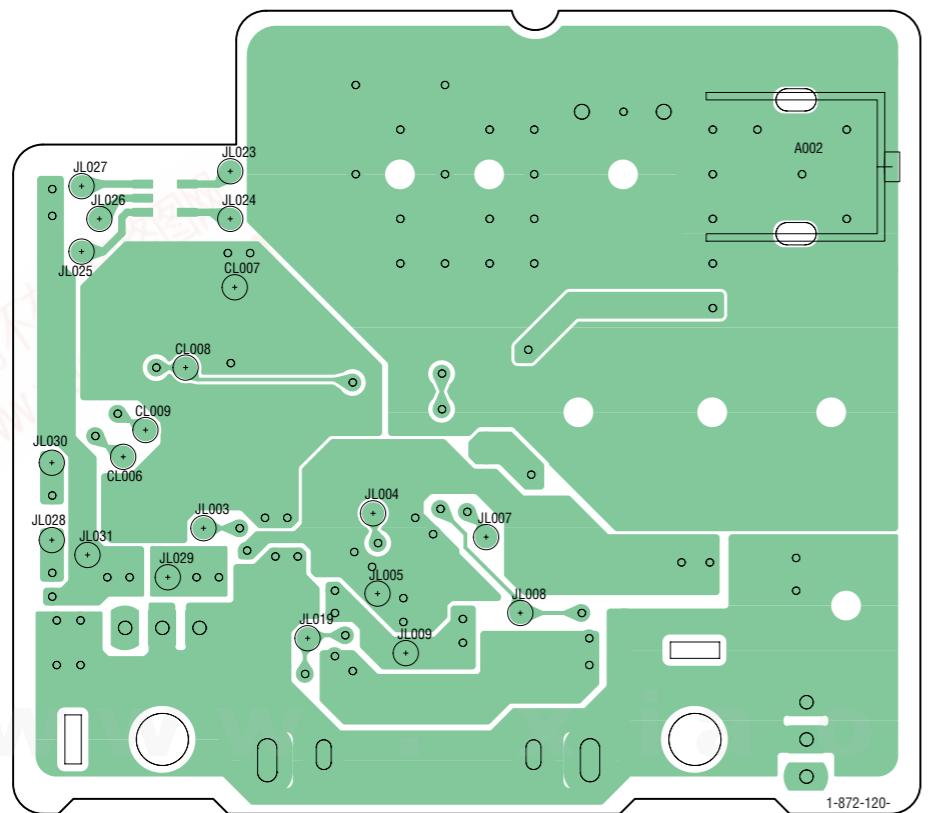

6-27. SCHEMATIC DIAGRAM – DMPORT BOARD (DZ230/DZ231) – • See page 61 for IC Block Diagram.



【DMPORT BOARD】

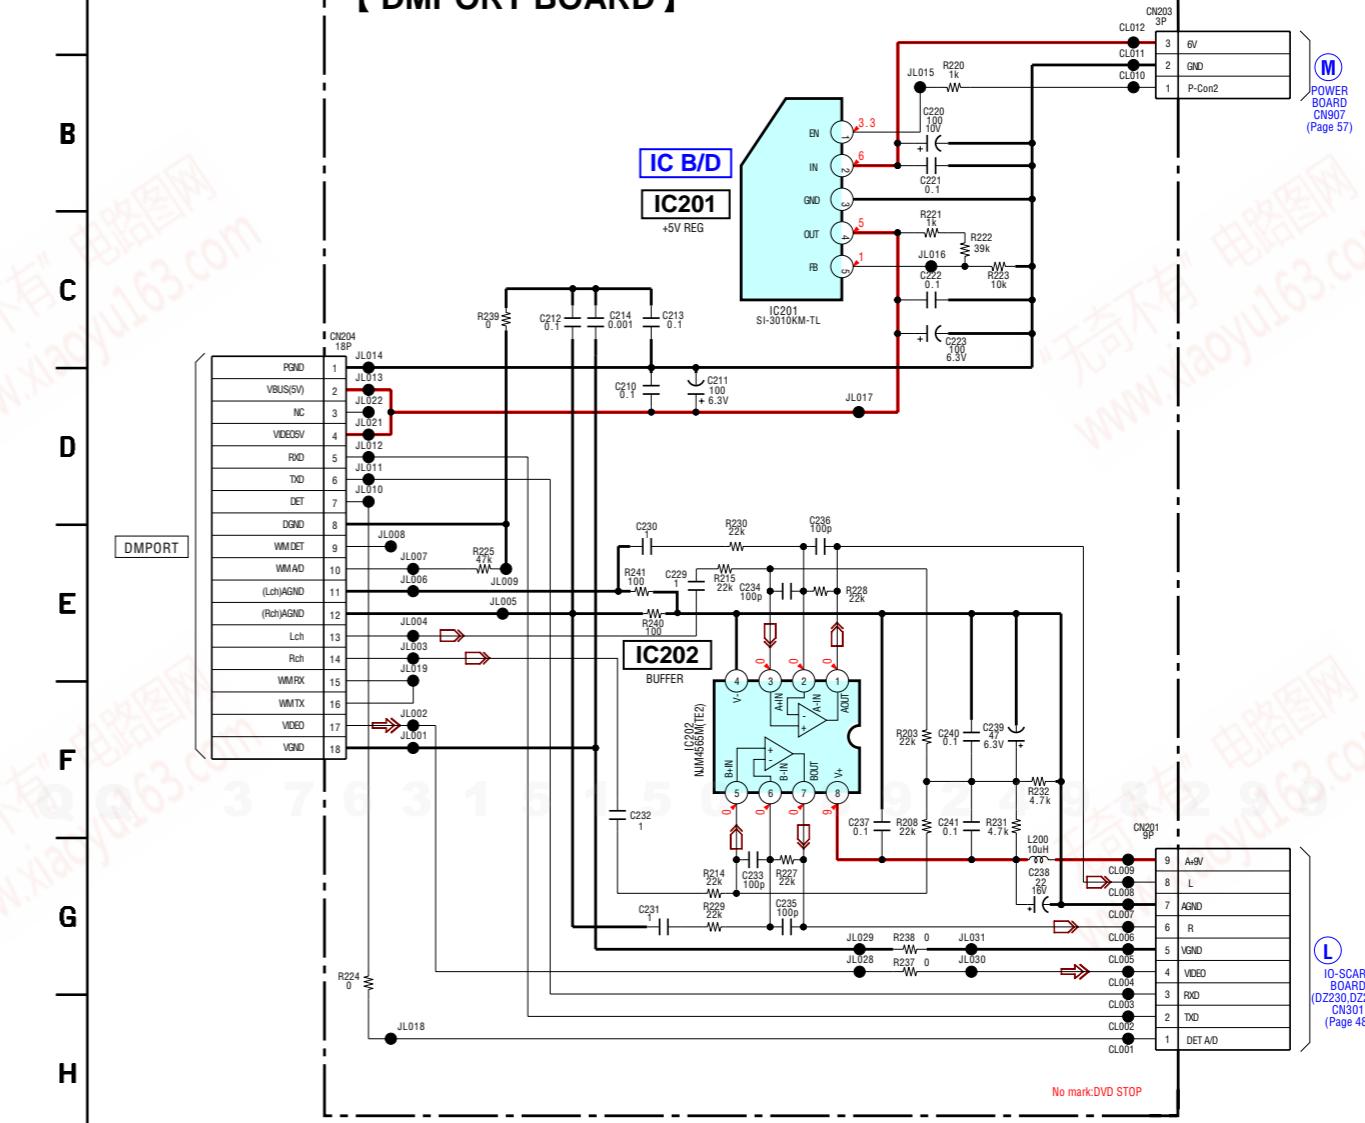


6-28. PRINTED WIRING BOARDS – SPEAKER, P-SW BOARD –


• See page 29 for Circuit Boards Location.



:Uses unleaded solder.

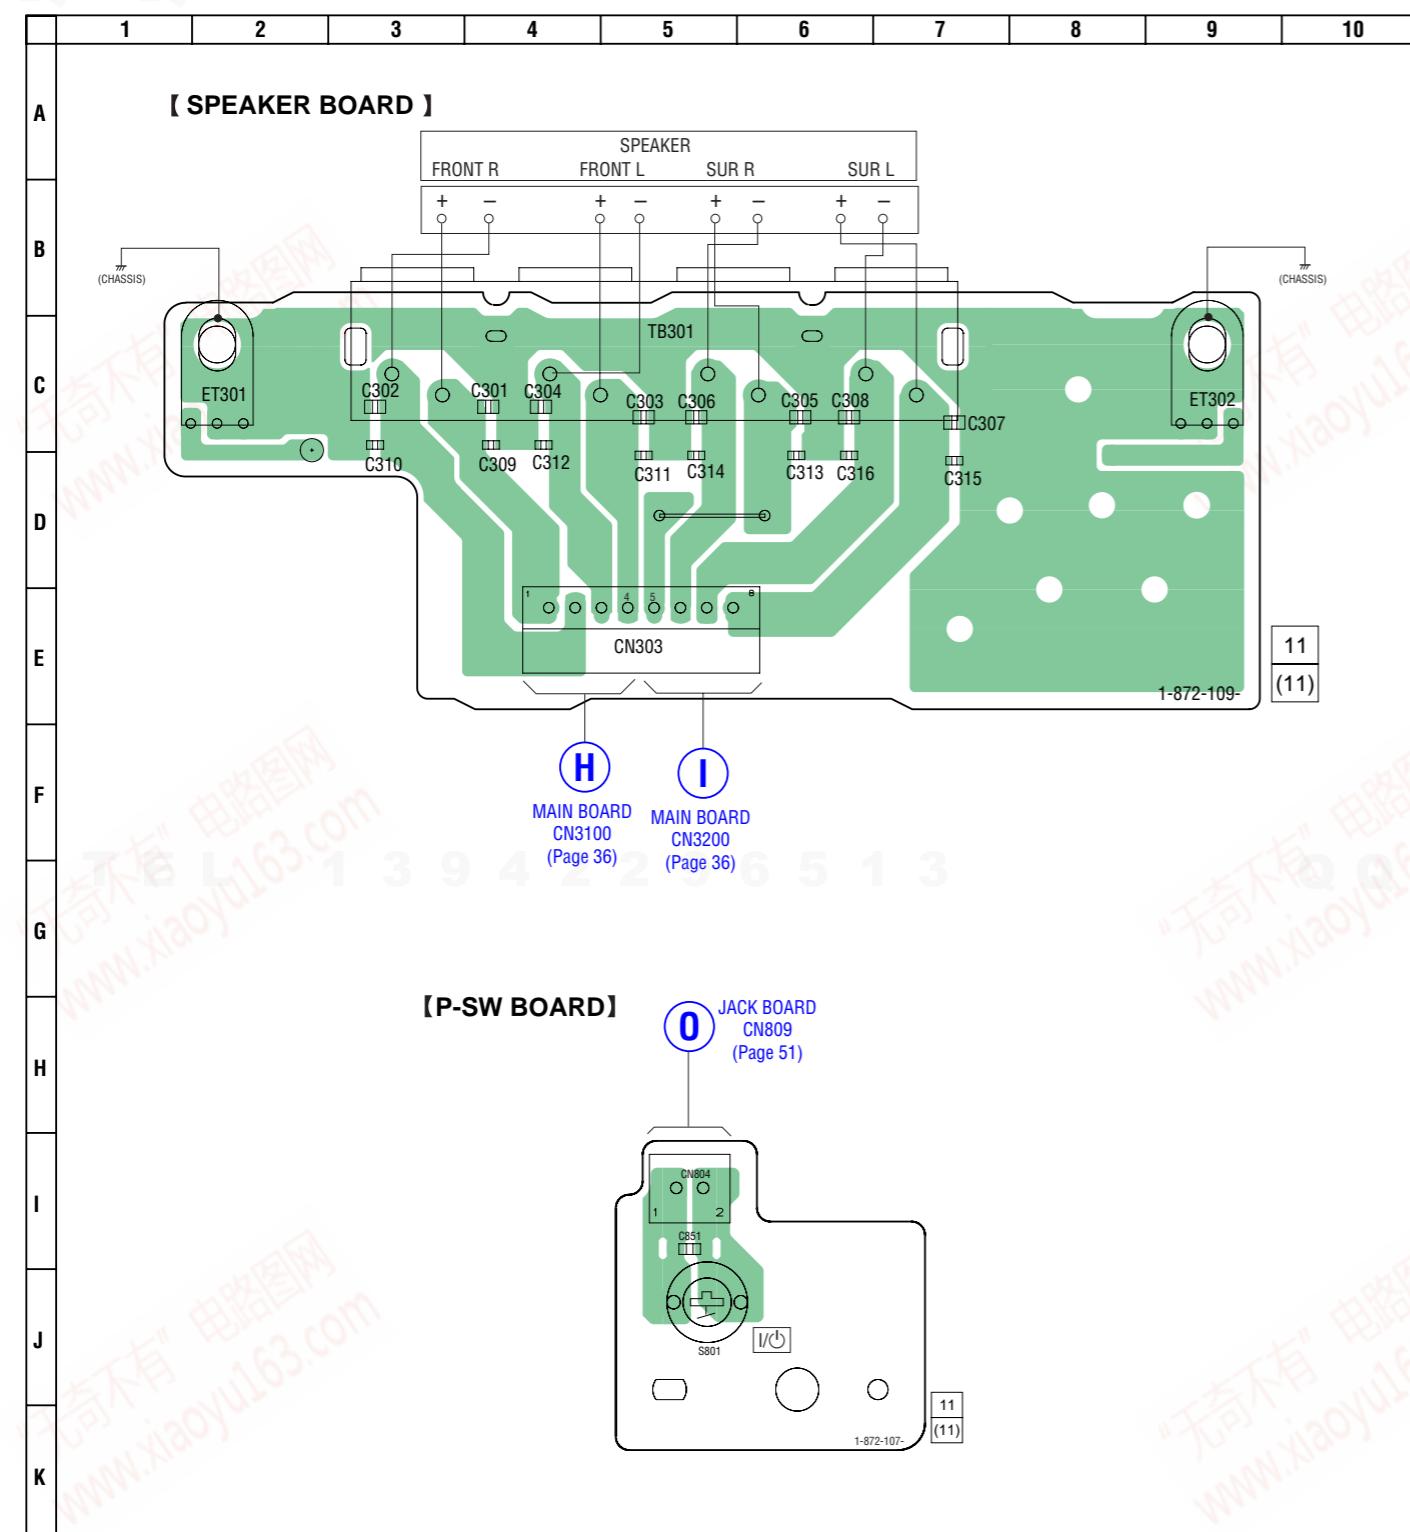


6-29. SCHEMATIC DIAGRAM – SPEAKER, P-SW BOARD –

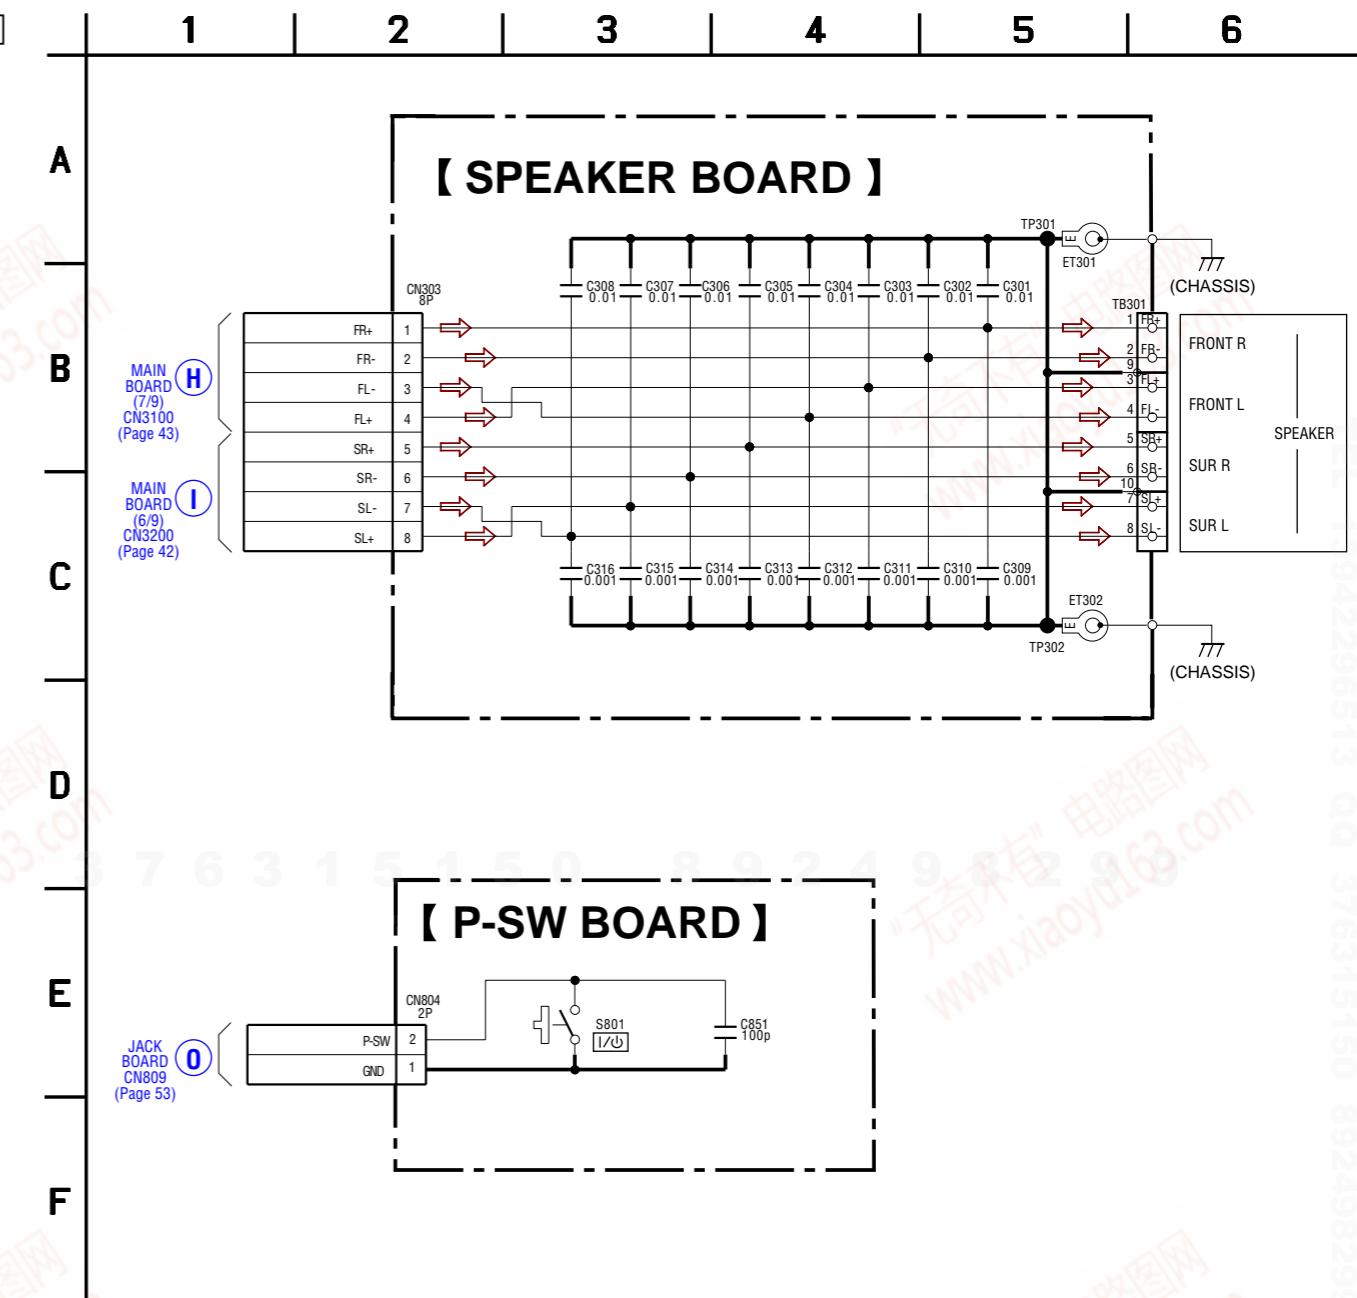

1	2	3	4	5	6	7	8	9	10	11	12	13	14
---	---	---	---	---	---	---	---	---	----	----	----	----	----

【POWER BOARD】

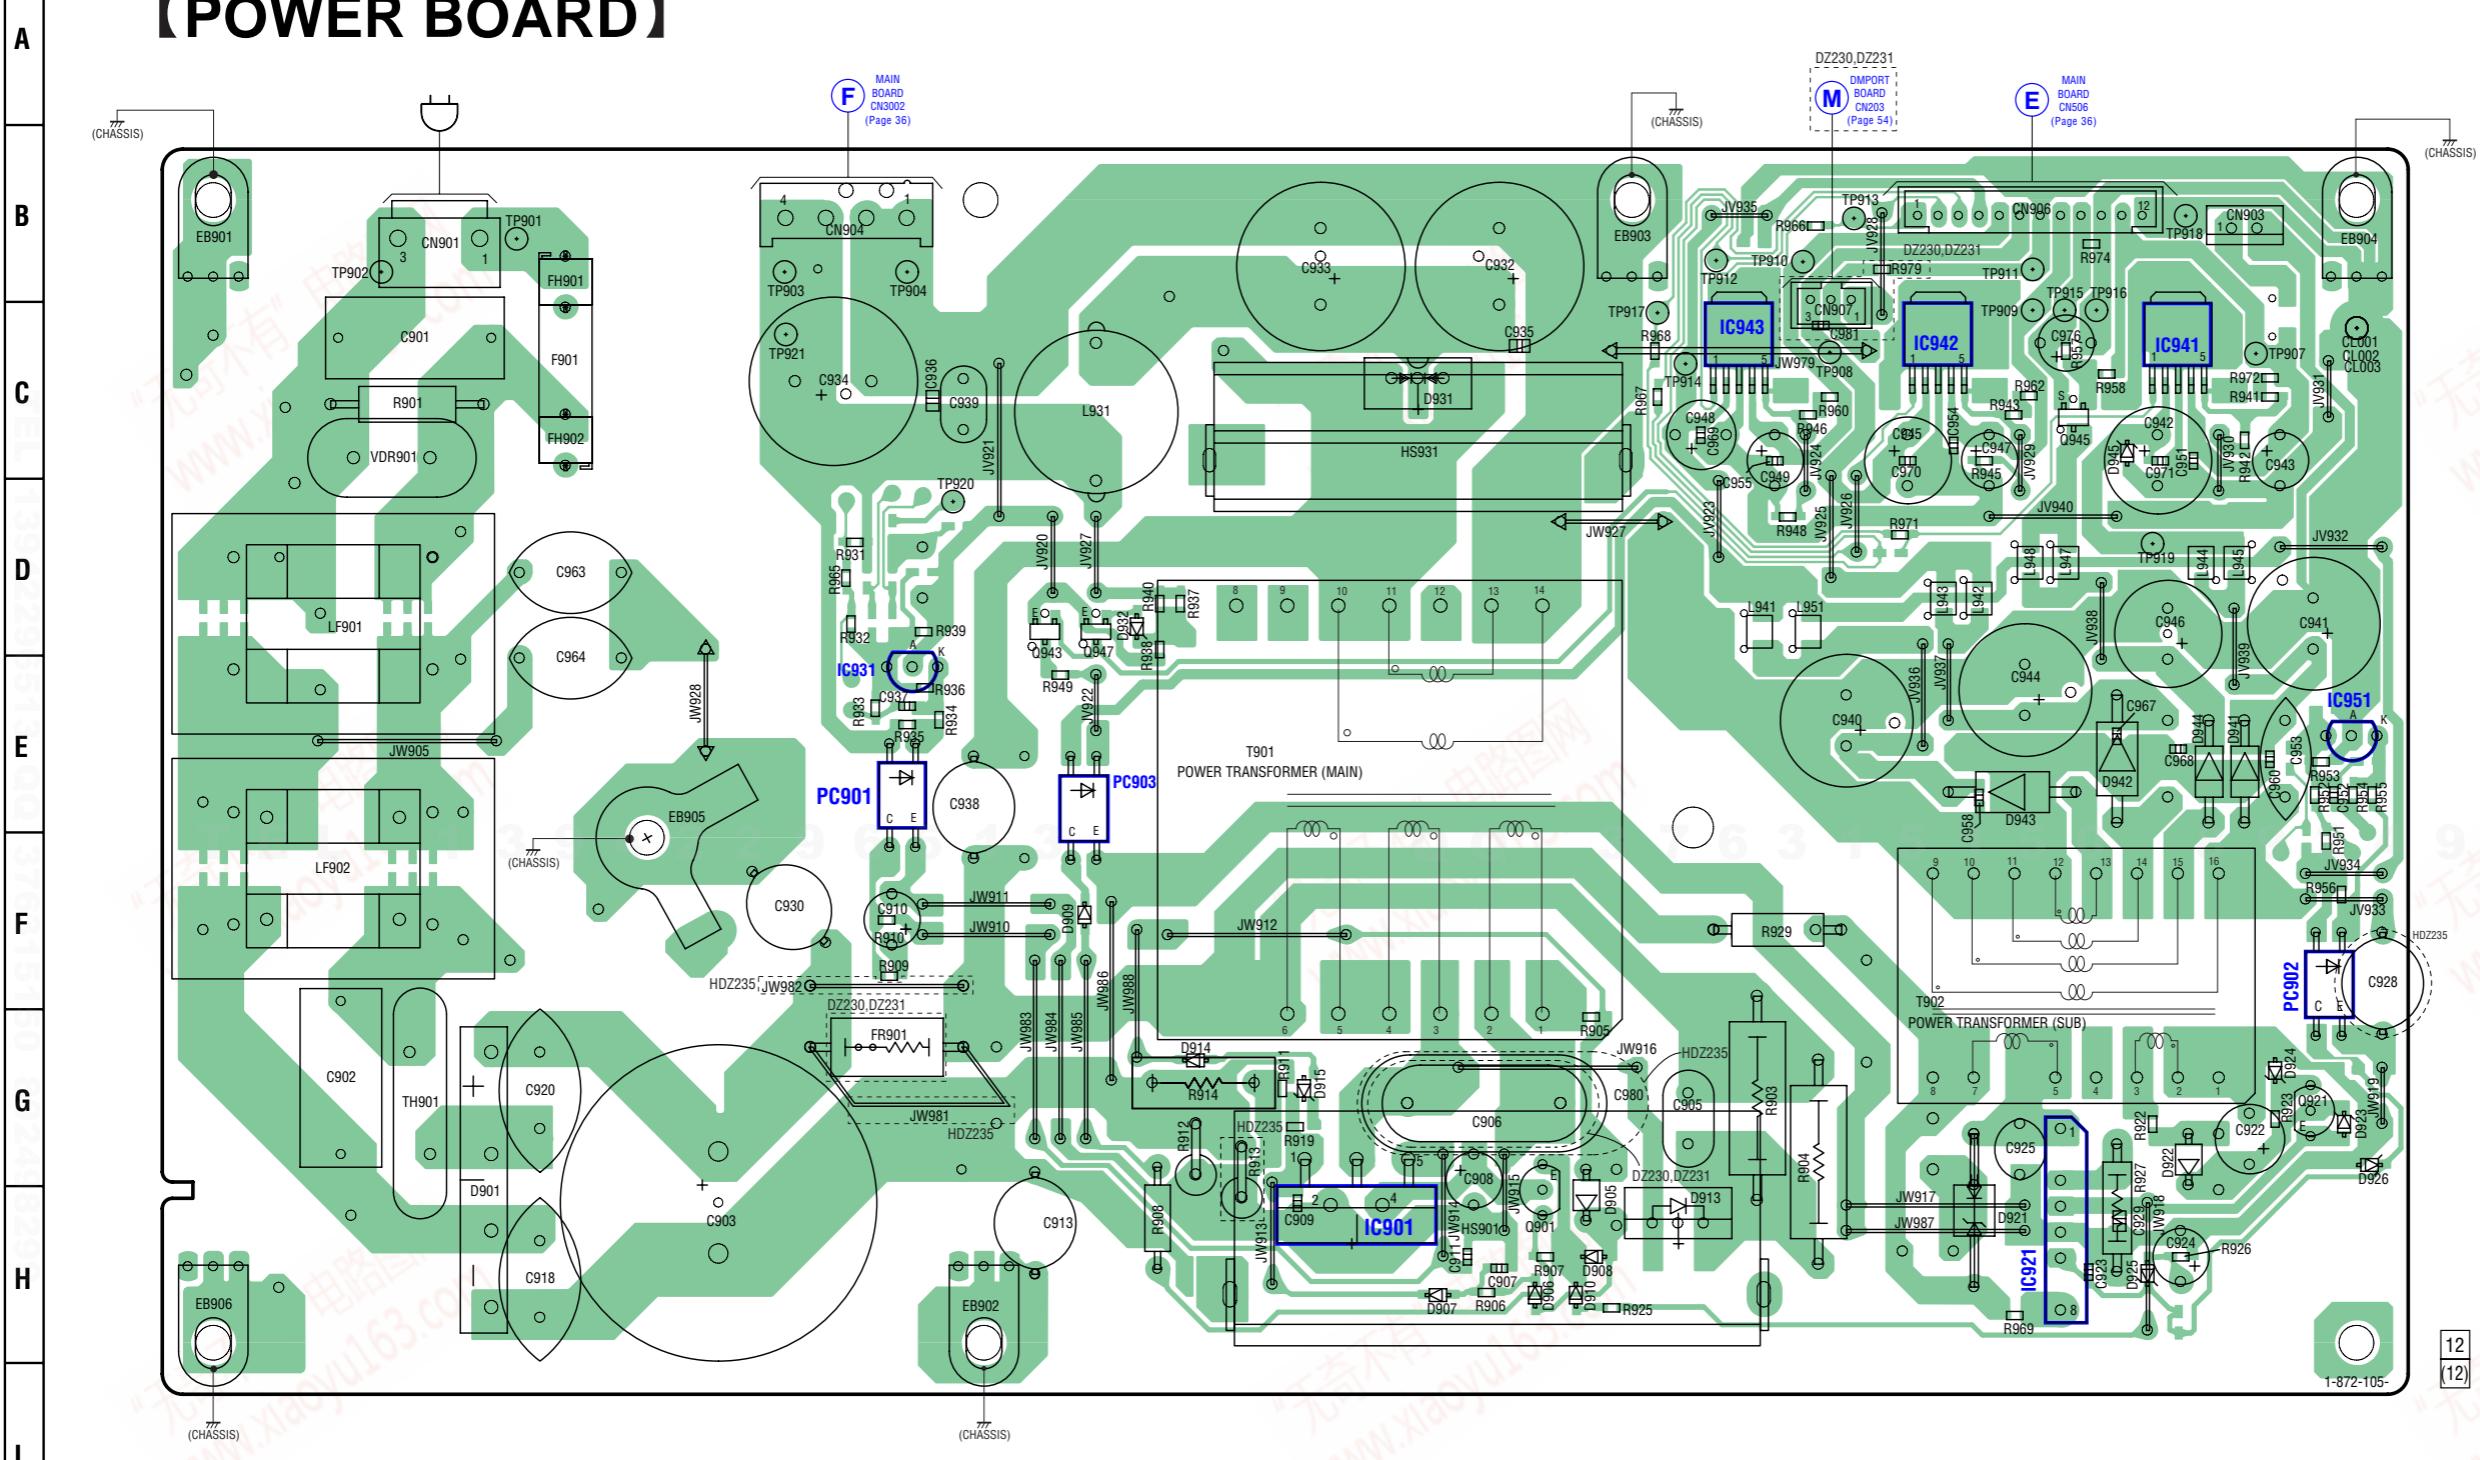


• Semiconductor Location

Ref. No.	Location
D901	G-3
D905	H-9
D906	H-9
D907	H-8
D908	H-9
D909	F-6
D910	H-9
D913	H-10
D914	G-7
D915	G-8
D921	H-11
D922	G-13
D923	G-14
D924	G-13
D925	H-12
D926	G-14
D931	C-8
D932	D-7
D941	E-13
D942	E-12
D943	E-12
D944	E-13
D945	C-12
IC901	H-8
IC921	H-12
IC931	E-5
IC941	C-13
IC942	C-11
IC943	C-10
IC951	E-14
PC901	E-5
PC902	F-13
PC903	E-6
Q901	H-9
Q921	G-13
Q943	D-6
Q945	C-12
Q947	D-6

12
(12)


6-31. SCHEMATIC DIAGRAM – POWER BOARD – • See page 60 for IC Block Diagram.

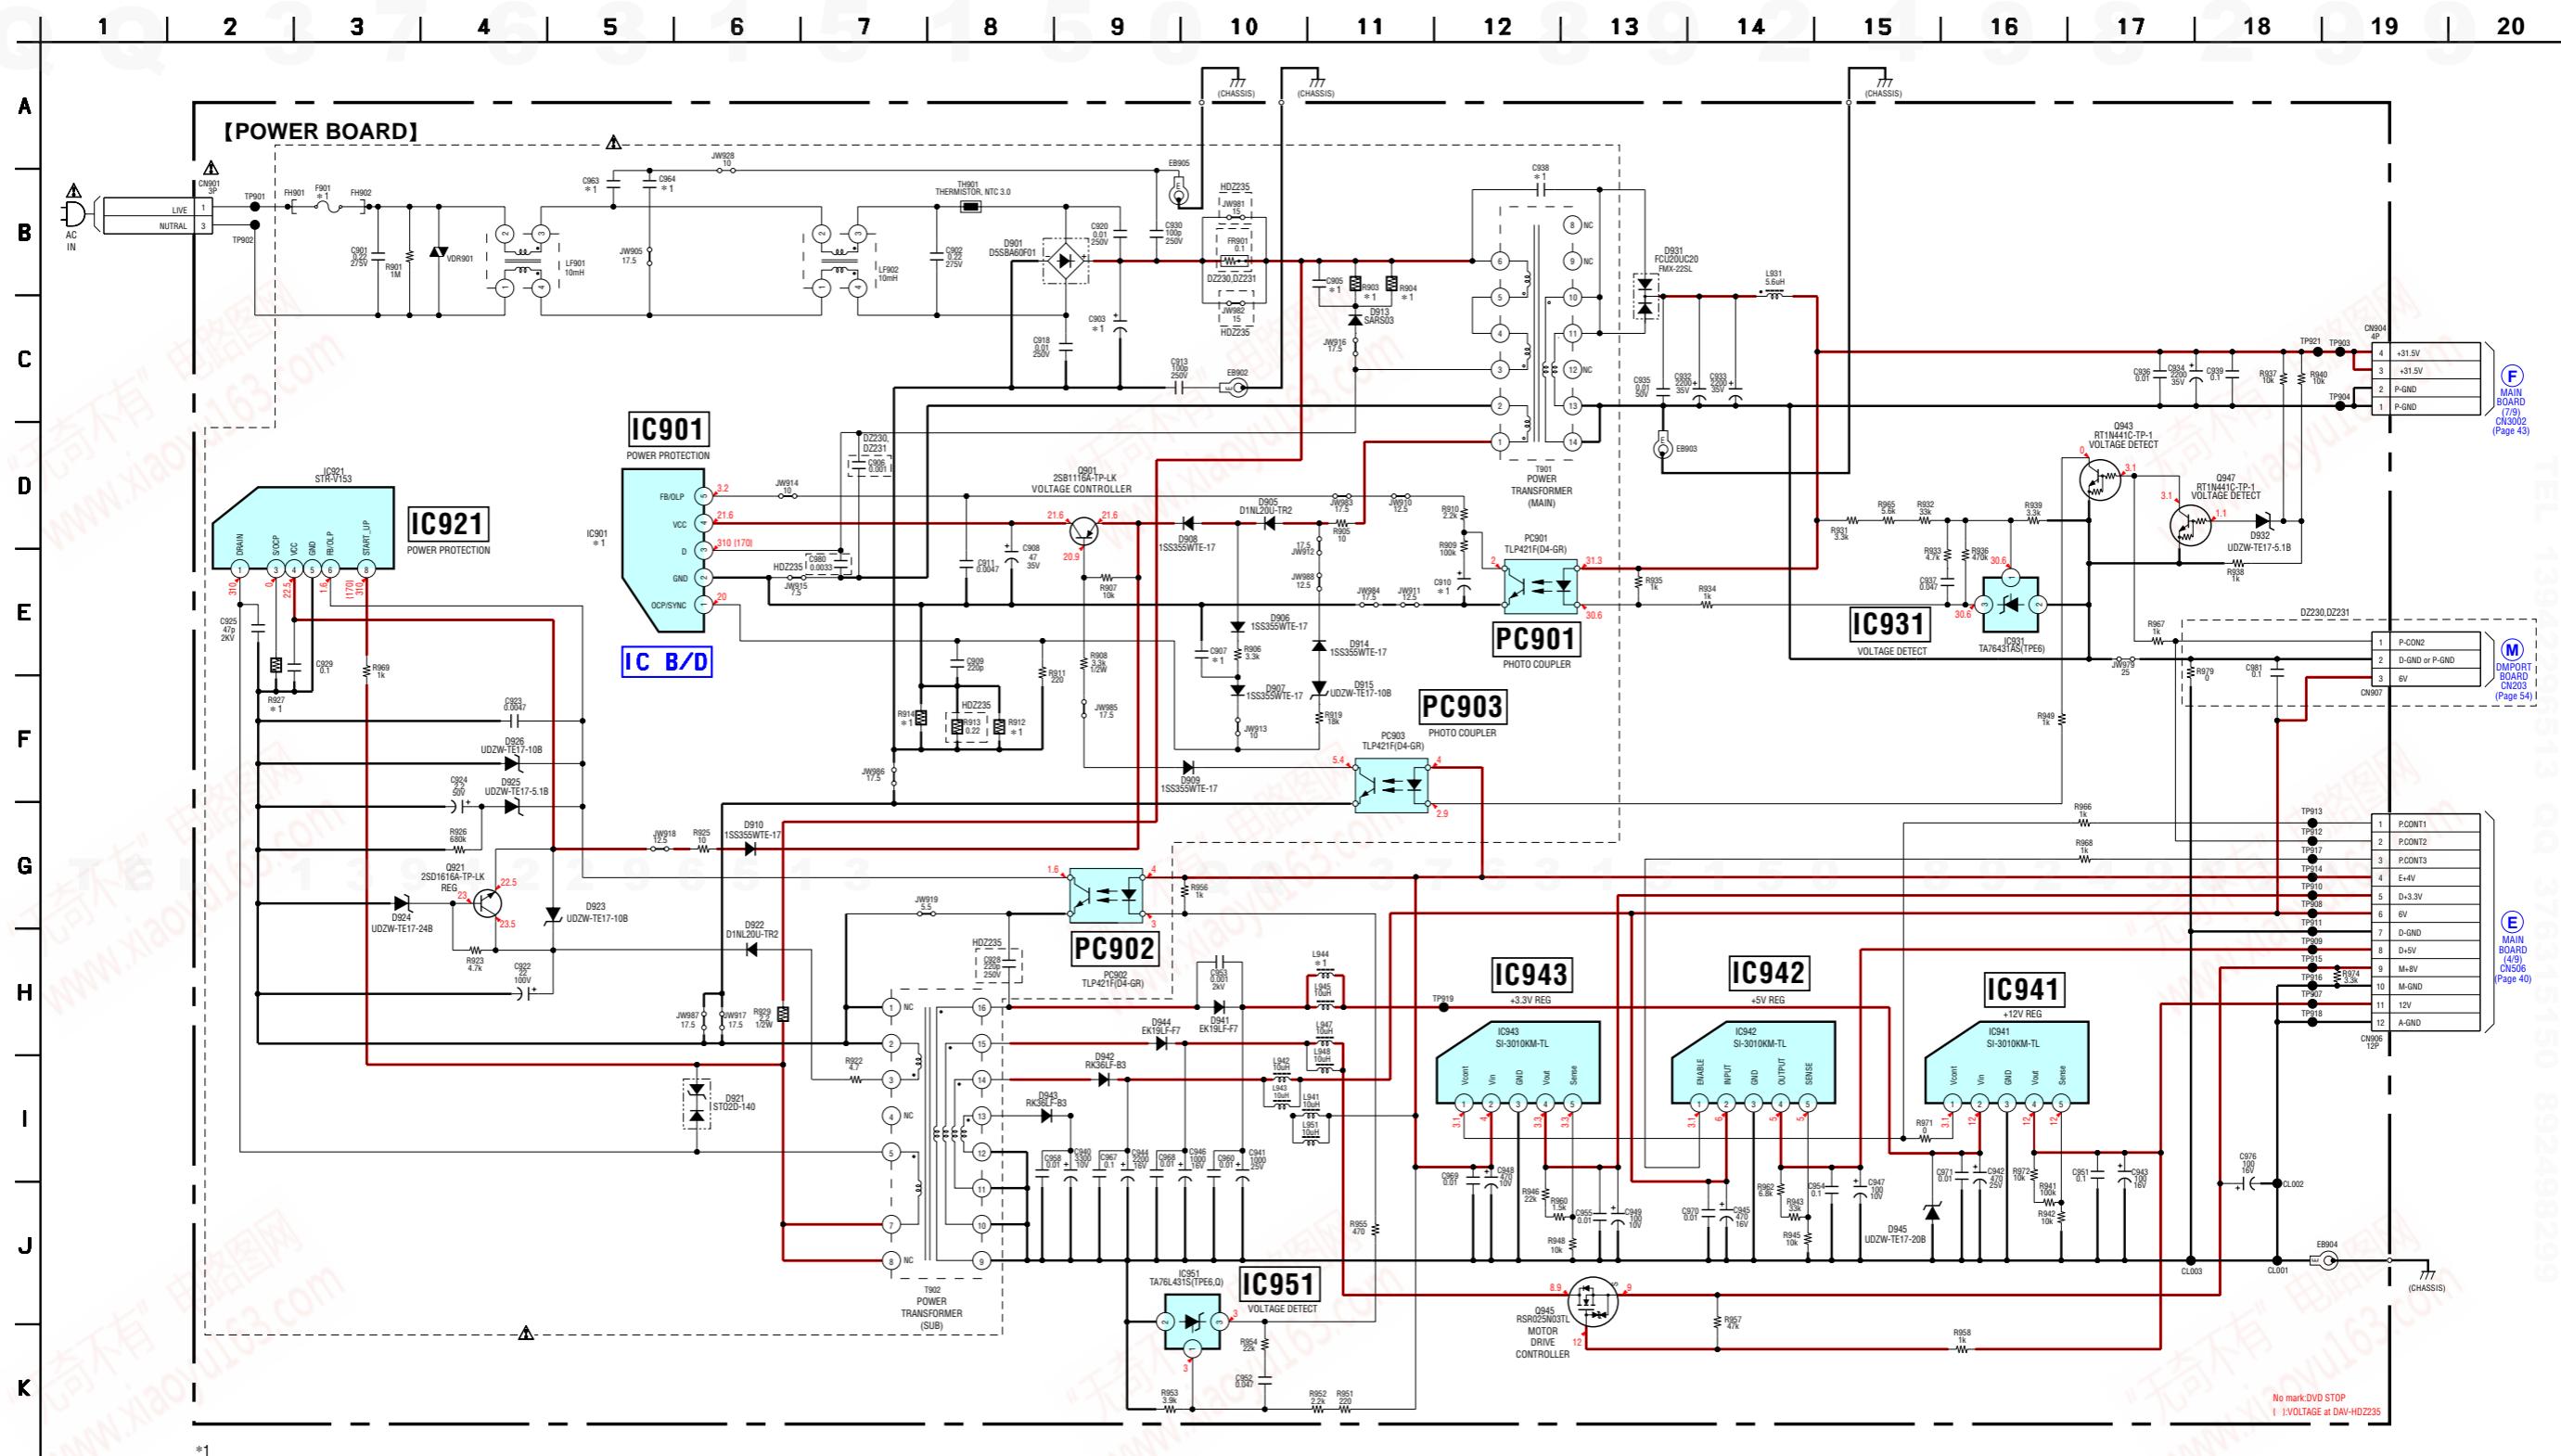


	DZ230/DZ231	HDZ235
C903	330uF 20% 400V	1000uF 20% 200V
C905	0.0033uF 5% 400V	0.01uF 5% 400V
C907	0.001uF 10% 50V	0.0015uF 10% 50V
C910	22uF 20% 50V	10uF 20% 50V
C938	470PF 10% 250V	330PF 10% 250V
C963	470PF 10% 250V	0.0022uF 20% 250V
C964	470PF 10% 250V	0.0022uF 20% 250V
F901	T6.3AH/250V 8A/125V	
IC901	STR-F6168-LF1352	STR-F6138-LF1352
R903	100K 5% 3W	33K 5% 3W
R904	100K 5% 3W	33K 5% 3W
R912	0.33 5% 2W	0.22 5% 2W
R914	0.1 10% 5W	0.05 5% 5W
R927	1 5% 1W	0.82 5% 1W

• IC Block Diagrams
– MAIN Board –


IC1201 FAN8036L

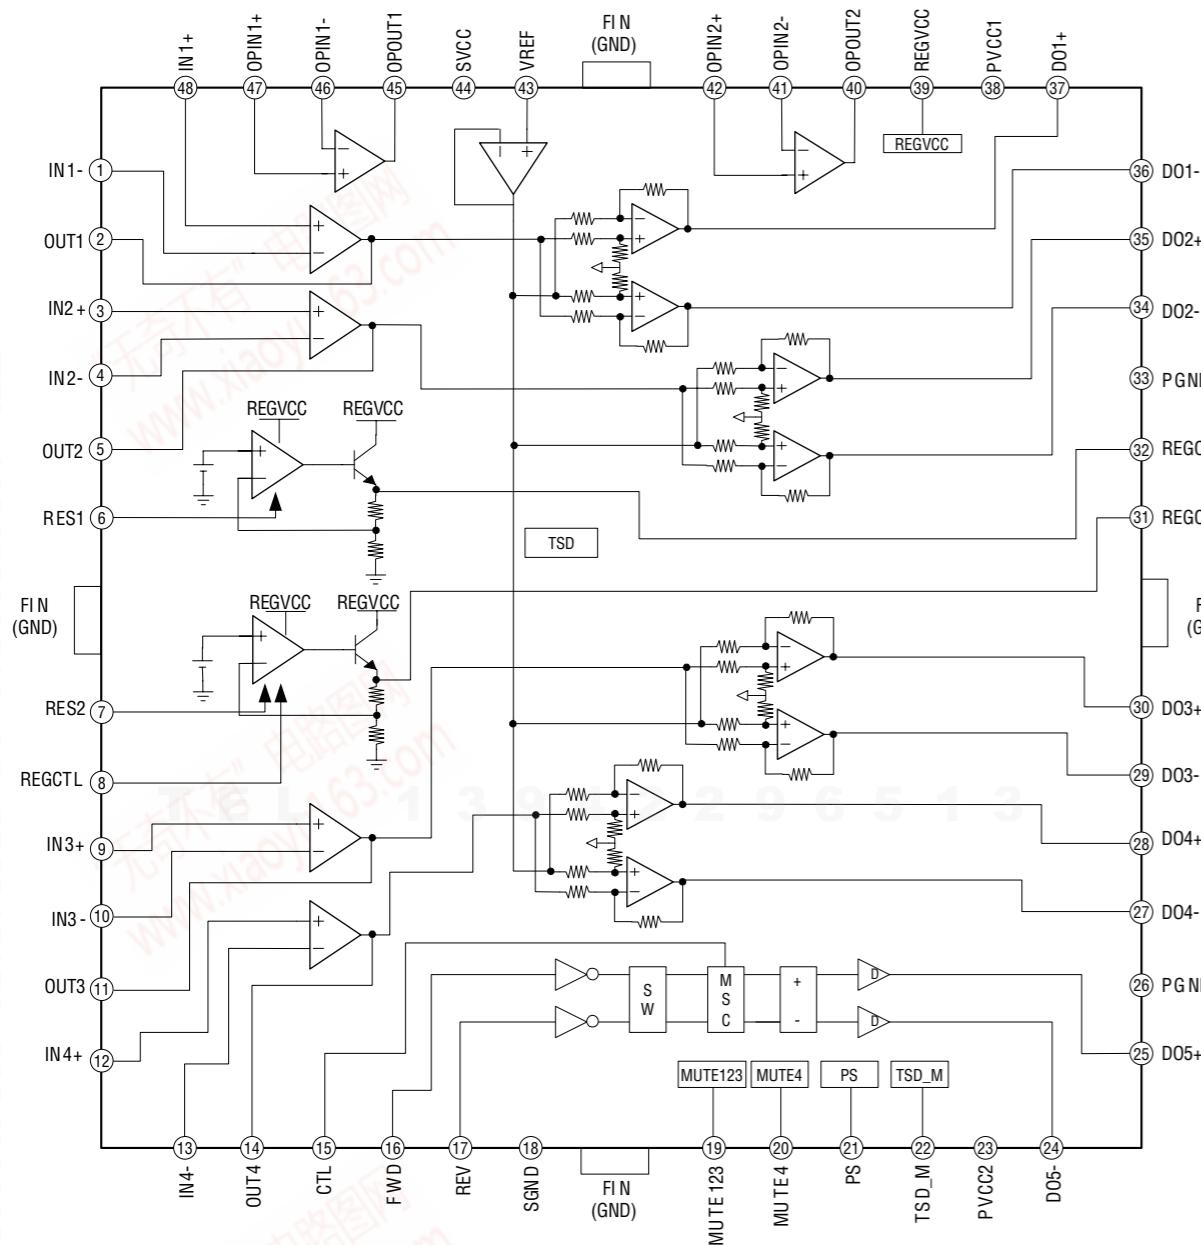

IC3010, IC3020, IC3030 CXD9843AR

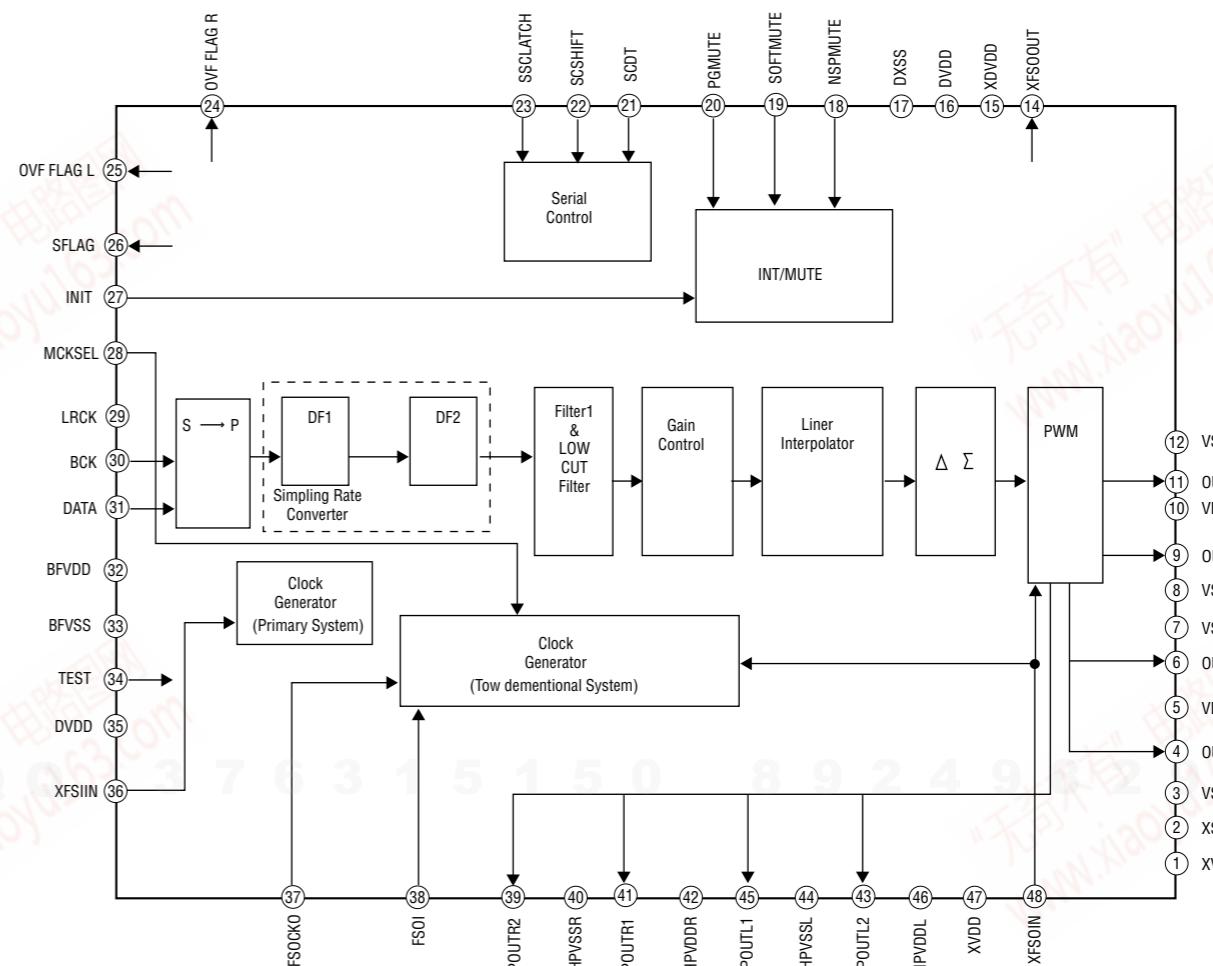


IC3003 TC7WH157FK (TE85R)

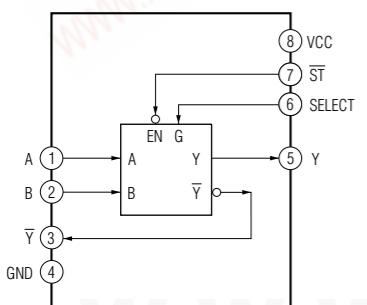

QQ 376315150 892498299
 - MAIN Board -

IC772 PCM1808PWR

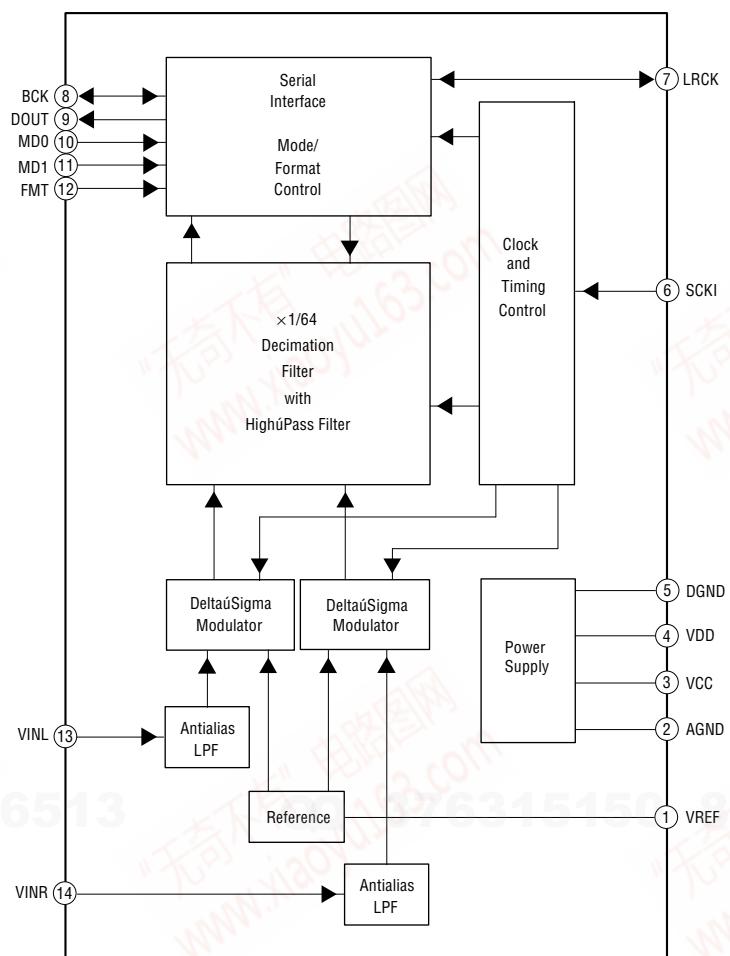


- IO-SCART Board (DZ230/DZ231) -

IC303 MC14052BDR2

- IO-S-OUT Board (HDZ235) -


IC303 MC14052BDR2

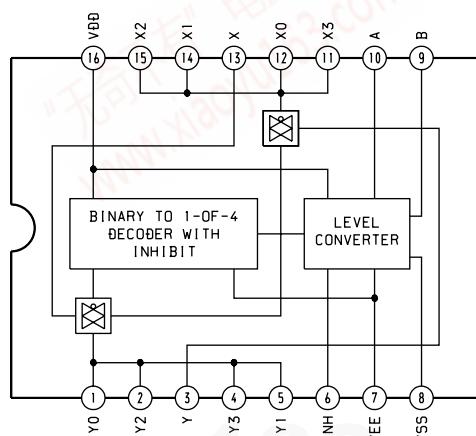

www.xiaoyu163.com


- IO-SCART Board (DZ230/DZ231) -

IC230 BH7868FS-E2

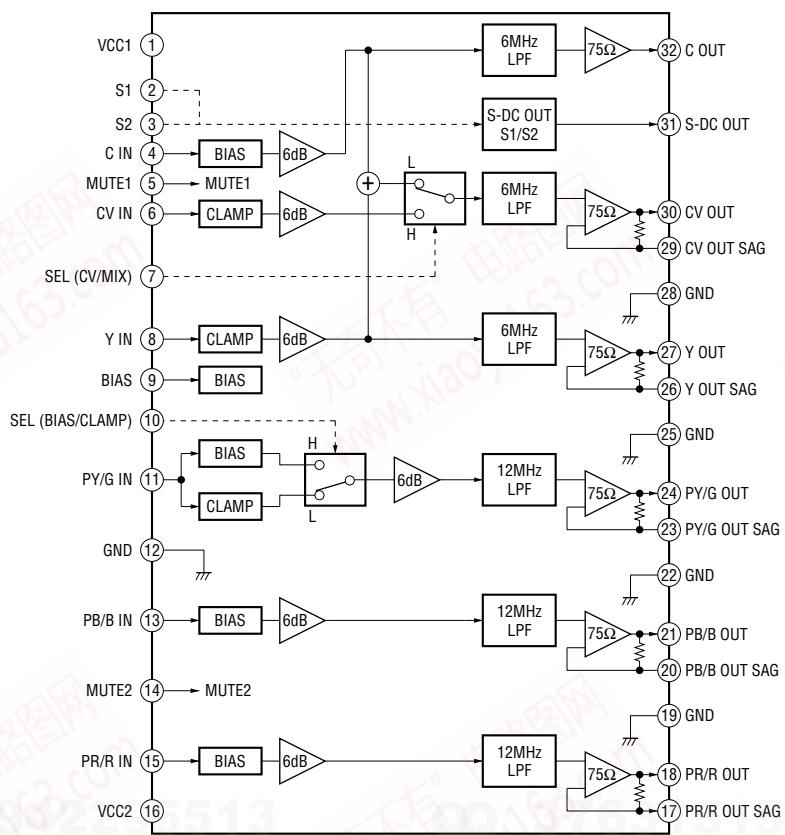


- POWER Board -

IC901 STR-F6138-LF1352

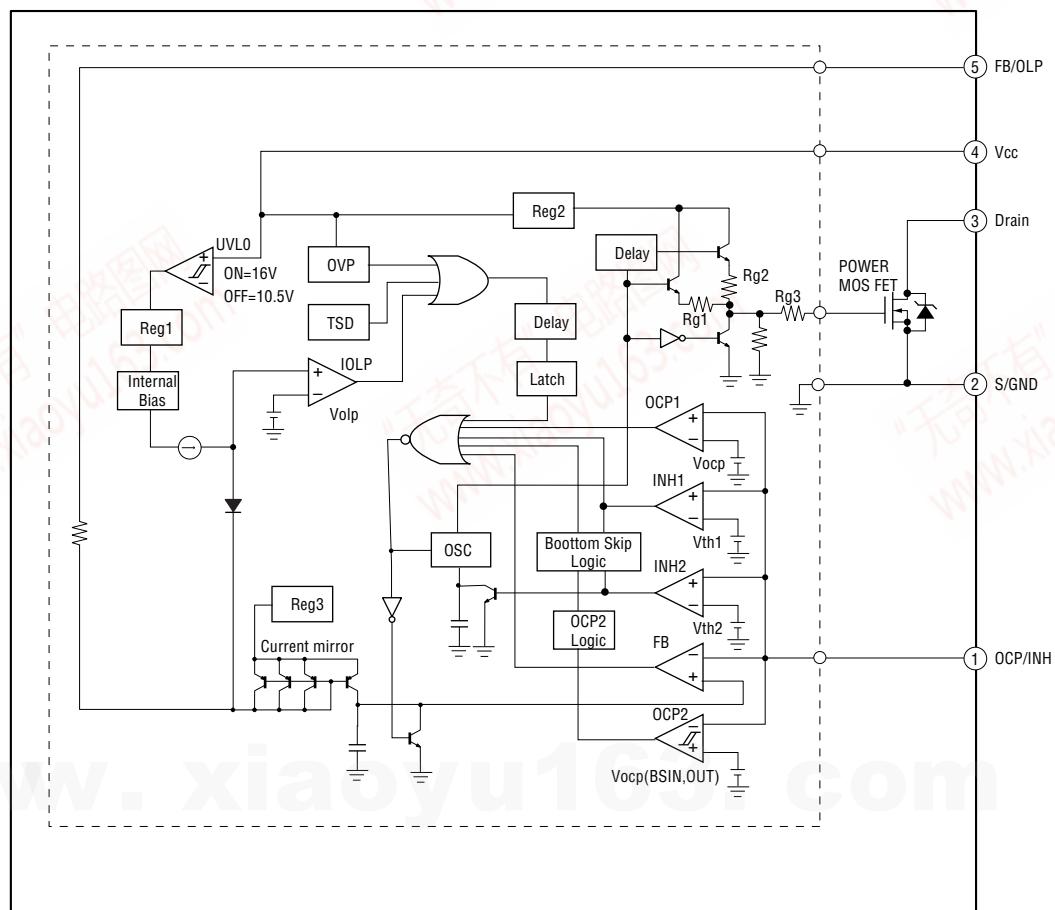


- FL Board -

IC802 uPD16315GB-3BS

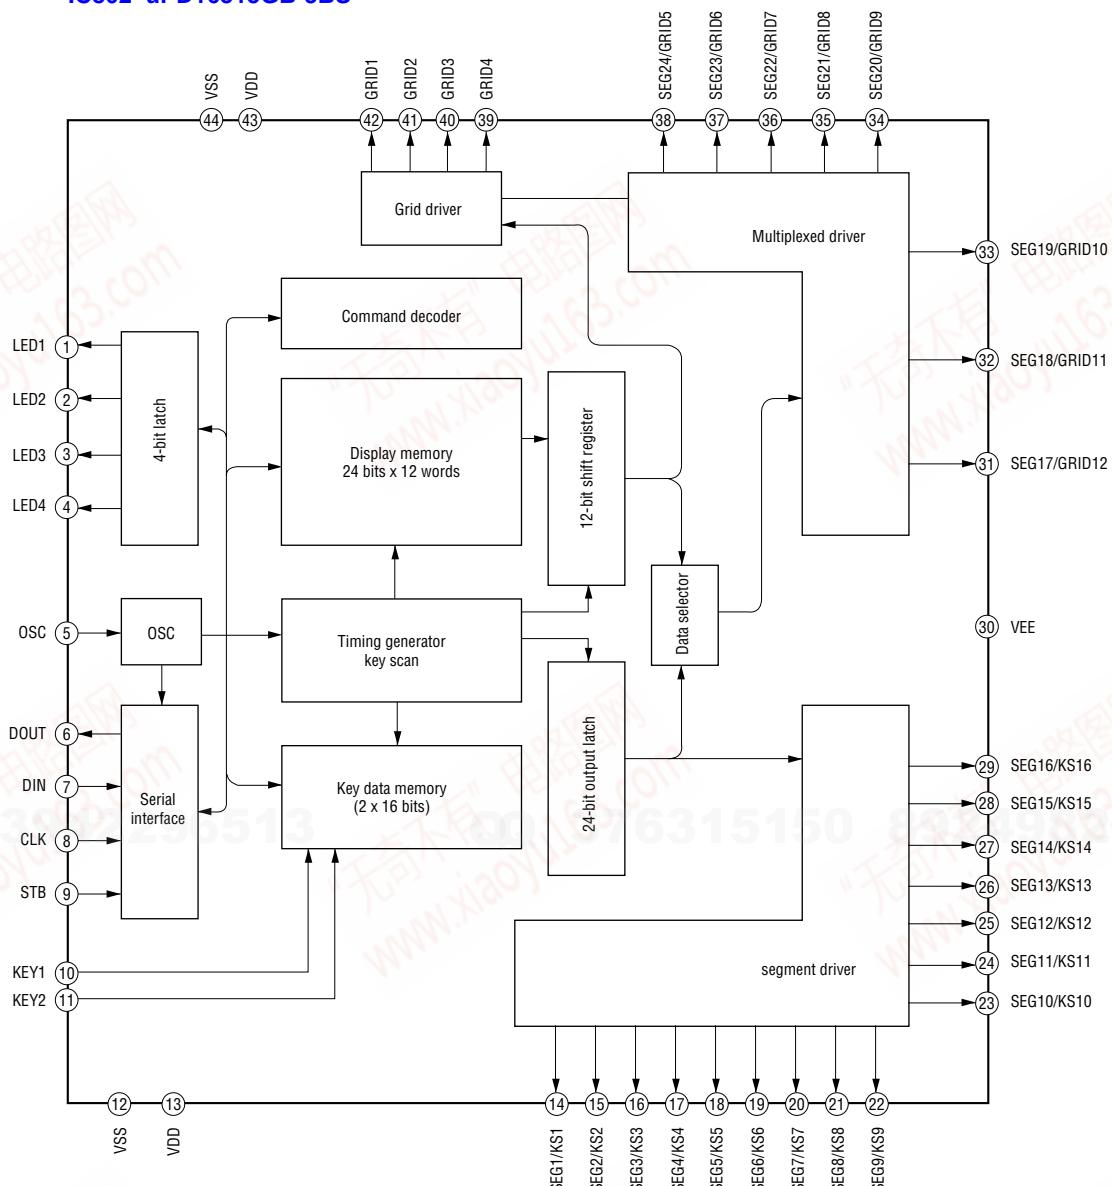

- DMPORT Board (DZ230/DZ231) -

IC201 SI-3010KM-TL

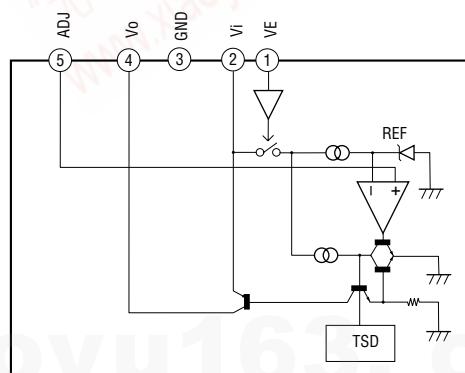

• IC Pin Function Description**MAIN BOARD IC1101 CXD9889R****(CD/DVD RF AMP, FOCUS/TRACKING ERR AMP, DVD SYSTEM PROCESSOR, DIGITAL SERVO PROCESSOR)**

Pin No.	Pin Name	I/O	Description
1	AGND	—	Ground terminal
2	DVDA	I	AC coupled input path A
3	DVDB	I	AC coupled input path B
4	DVDC	I	AC coupled input path C
5	DVDD	I	AC coupled input path D
6	DVDRFIP	I	AC coupled DVD RF signal input RFIP
7	DVDRFIN	I	AC coupled DVD RF signal input RFIN (not used (Open))
8	NA	I	DC coupled main-beam RF signal input A
9	NB	I	DC coupled main-beam RF signal input B
10	MC	I	DC coupled main-beam RF signal input C
11	MD	I	DC coupled main-beam RF signal input D
12	SA	I	DC coupled sub-beam RF signal input A (not used (Open))
13	SB	I	DC coupled sub-beam RF signal input B (not used (Open))
14	SC	I	DC coupled sub-beam RF signal input C (not used (Open))
15	SD	I	DC coupled sub-beam RF signal input D (not used (Open))
16	SDFON	I	CD focusing error negative input (not used (Open))
17	SDFOP	I	CD focusing error positive input (not used (Open))
18	TNI	I	3 beam satellite PD signal negative input
19	TPI	I	3 beam satellite PD signal positive input
20	MDI1	I	Laser power monitor input
21	MDI2	I	Laser power monitor input
22	LDO2	O	Laser driver output
23	LDO1	O	Laser driver output
24	SVDD3	—	Power supply (RF+3.3V)
25	CSO	O	Central servo (not used (Open))
26	RFLVL	O	RFRP low pass output for jig
27	SGND	—	Ground terminal
28	V2REFO	O	Reference voltage 2.8V
29	V20	O	Reference voltage 2.0V
30	VREFO	O	Reference voltage 1.4V
31	FEO	O	Focus error monitor output for jig
32	TEO	O	Tracking error monitor output for jig
33	TEZISLV	O	TE Slicing Level
34	OP_OUT	O	Op amp output (not used (Open))
35	OP_INN	I	Op amp negative input (not used (Open))
36	OP_INP	I	Op amp positive input (not used (Open))
37	DMO	O	Disc motor control output. PWM output
38	FMO	O	Feed motor control. PWM output
39	TROPENPWM	O	Tray PWM output/Tray open output
40	IOPMON	I	Iop Monitor
41	TRO	O	Tracking servo output
42	FOO	O	Focus servo output
43	VPLLVSS	—	Ground terminal
44	VPLLCAP	—	PLL External Capacitor
45	VPLLVDD3	—	Power supply (+3.3V from IC1105)
46	USB_VSS	—	Ground terminal
47	RESERVED	—	USB port DPLUS pin for HS DL (not used (Open))

Pin No.	Pin Name	I/O	Description
48	RESERVED	—	USB port DMINUS pin for HS DL (not used (Open))
49	USB_VDD3	—	Power supply (SW+3.3V)
50	SPFG	I	Spindle FG input
51	MSW	O	DVD/CD switch (H:DVD / L:CD)
52	CKSW	I	CKSW input
53	OCSW	I	OCSW input
54	EEWP	O	EEPROM Write Protect control (L:Write allowed)
55	DVDD18	—	Power supply (+1.8V from IC1110)
56 to 64	HA2 to 8, 18, 19	O	Host address bus 2 to 8, 18, 19 output to Flash ROM (IC1102)
65	DVDD3	—	Power supply (SW+3.3V)
66	XWR	O	Write enable output to Flash ROM (IC1102) (active Low)
67 to 75	HA16 to 9, 20	O	Host address bus 15 to 9, 20 output to Flash ROM (IC1102)
76	XROMCS	O	Chip select output to Flash ROM (IC1102) (active Low)
77	HA1	O	Host address bus 1 output to Flash ROM (IC1102)
78	XRD	O	Read enable output to Flash ROM (IC1102) (active Low)
79, 80	HD0,1	I/O	Host data bus 0,1 input/output for Flash ROM (IC1102)
81	DVSS	—	Ground terminal
82 to 86	HD2 to 6	I/O	Host data bus 2 to 6 input/output for Flash ROM (IC1102)
87	HA21	O	Host address bus 21 output to Flash ROM (IC1102)
88	RESERVED	—	Not used (Open)
89	HD7	I/O	Host data bus 7 input/output for Flash ROM (IC1102)
90	DVSS	—	Ground terminal
91, 92	HA17, 0	O	Host address bus 17, 0 output to Flash ROM (IC1102)
93	DVDD18	—	Power supply (+1.8V from IC1110)
94	RESERVED	—	Not used (Open)
95	RESERVED	—	Not used (Open)
96	DVDD3	—	Power supply (SW+3.3V)
97	IFSDO	O	Ext. CPU Serial data output (H/W method)
98	IFCK	O	Ext. CPU Serial clock (H/W method)
99	xIFCS	O	Chip select for Ext.CPU (Low Active, H/W method)
100	IFSDI	I	Ext. CPU Serial data input (H/W method)
101	SCL	O	IIC clock output to E2PROM and HDMI controller
102	SDA	I/O	IIC data input/output for E2PROM and HDMI controller
103	HDMI_SCL	O	HDMI DDC line SCL
104	HDMI_SDA	I/O	HDMI DDC line SDA
105	RXD	I	RS232C RXD signal input from Jig
106	TXD	O	RS232C TXD signal output to Jig
107	ICE	O	ICE mode enable (not used (Open))
108	xSYSRST	I	Reset input from system controller (IC501) (active Low)
109	RESERVED	I	IR control signal input (not used (Open))
110	xTXINT	I	Interrupt signal from HDMI controller (not used (Fixed "H" (SW+3.3V)))
111	DQMO	O	Lower byte mask output to SDRAM (IC1104) (H:Mask / L:Enable)
112	IFBSY	I	Ready/Busy interrupt signal input from system controller (IC501) (H:Busy / L:Ready)
113 to 117	RD7 to 3	I/O	Data bus 7 to 3 input/output for SDRAM (IC1104)
118	DVDD3	—	Power supply (SW+3.3V)
119 to 129	RD2 to 0, 15 to 8	I/O	Data bus 2 to 0, 15 to 8 input/output for SDRAM (IC1104)
130	LIMITSW	I	LIMITSW signal input
131	DVDD3	—	Power supply (SW+3.3V)
132	DQMI	O	Upper byte mask output to SDRAM (IC1104) (H:Mask / L:Enable)

Pin No.	Pin Name	I/O	Description
133	RWE#	O	Write enable output to SDRAM (IC1104)
134	CAS#	O	Column address strobe output to SDRAM (IC1104)
135	RAS#	O	Row address strobe output to SDRAM (IC1104)
136	RCS#	O	Chip select output to SDRAM (IC1104)
137, 138	BA0, 1	O	Bank address 0, 1 output to SDRAM (IC1104)
139 to 141	RA10, 0, 1	O	Address bus 10, 0, 1 output to SDRAM (IC1104)
142	DVDD18	—	Power supply (+1.8V from IC1110)
143, 144	RA2, 3	O	Address bus 2, 3 output to SDRAM (IC1104)
145	DVDD3	—	Power supply (SW+3.3V)
146	DRCLK	O	Clock output to SDRAM (IC1104)
147	CKE	O	Clock enable output to SDRAM (IC1104)
148	DVSS	—	Ground terminal
149 to 155	RA11, 9 to 4	O	Address bus 11,9 to 4 output to SDRAM (IC1104)
156	DVDD3	—	Power supply (SW+3.3V)
157 to 159	SMPTE_Y[7] to [5]	O	Video data output bit7 to 5
160	DVDD18	—	Power supply (+1.8V from IC1110)
161 to 165	SMPTE_Y[4] to [0]	O	Video data output bit4 to 0
166	VCLK	O	27MHz synchronous clock output for Video data
167	MIC	I	Karaoke microphone detect signal (H:MIC exist / L:MIC removed) (Fixed to Ground)
168	TSD_M	I	TSD signal input
169	MUTE	O	Mute output for Spindle motor
170	DVDD3	—	Power supply (SW+3.3V)
171	MUTE123	O	Mute output for Focus/Tracking/Sledding
172, 173	REV, FWD	O	Direction control signal output for Loading motor
174	DVDD18	—	Power supply (+1.8V from IC1110)
175	RGB_SEL	O	RGB/YCbCr select output signal (H:RGB disable / L:RGB enable) (HDZ235:not used (Open))
176	Fixed_low	O	Reserved (not used (Open))
177	WIDE	O	WIDE select output for Multi connector (H:16:9 / L:4:3)
178	DVSS	—	Ground terminal
179	VBUS_OE	O	VBUS_control OE (H:ON / L:OFF) (not used (Open))
180	xMAMUTE	O	Main Audio Mute signal (H:Un Mute / L:Mute) (not used (Open))
181	VBUS_OC	I	VBUS_control OC (H: Non_OVER / L:OVER) (Fixed to “H” (SW+3.3V))
182	R/Cr/Pr	O	Red or CR signal output
183	B/Cb/Pb	O	Blue or CB signal output
184	DACVSSA	—	Ground terminal
185	Y/G	O	Green or Y signal output
186	DACVDDA	—	Power supply (+3.3V from IC1105)
187	CVBS	O	Composite video signal output
188	DACVSSB	—	Ground terminal
189	C	O	Chroma signal output for S-Video
190	DACVDDB	—	Power supply (+3.3V from IC1105)
191	Y	O	Y signal output for S-Video
192	DACVSSC	—	Ground terminal
193	CIN	O	Compensation Capacitor (not used)
194	FS	I	Full Scale Adjustment
195	VREF	I	Bandgap Ref Voltage (No connect)
196	DACVDDC	—	Power supply (+3.3V from IC1105)
197	ASDATA0	O	Audio serial data 4: Down-mixed L/R

Pin No.	Pin Name	I/O	Description
198	TRG_SW	I	Slot-in MECHA Triger SW detect (not used (Fixed to "H" (SW+3.3V)))
199	SCORE	I	Calculation of SCORE (not used (Fixed to Ground))
200	XVOICE	I	Detection of MIC signal (H:Voice exist / L:Voice is absence) (not used (Fixed to Ground))
201	Fixed_Low	—	Not used (Open)
202	ASDATA1	O	Audio serial data 1: SL/SR
203	ASDATA2	O	Audio serial data 2: C/SW
204	Fixed_Low	—	Not used (Open)
205	Fixed_Low	—	Not used (Open)
206	Fixed_Low	—	Not used (Open)
207	Fixed_Low	—	Not used (Open)
208	DVDD3	—	Power supply (SW+3.3V)
209	ALRCK	O	Audio left/right channel clock output
210	ABCK	O	Audio bit clock output
211	ACLK	O	Master clock output for Audio DAC
212	ADIN	I	Ex. Analog Audio data input
213	DVDD18	—	Power supply (+1.8V from IC1110)
214	ASDATA4	O	Audio serial data 0: FL/FR
215	MC_DATA	I	Mic signal Input (not used (Fixed to Ground))
216	SPDIF	O	SPDIF output
217	APLLVDD3	—	Power supply (+3.3V from IC1105)
218	APLLCAP	I	APLL External Capacitance connection
219	APLLVSS	—	Ground terminal
220	ADACVSS2	—	Ground terminal
221	ADACVSS1	—	Ground terminal
222	KMOD	O	Karaoke mode status output (H:Karaoke / L:Normal) (not used (Open))
223	PWON	O	Power down control signal to HDMI controller
224	Rch	O	Audio DAC Right channel output (not used (Open))
225	AVCM	—	Audio DAC Reference Voltage
226	Lch	O	Audio DAC Left channel output (not used (Open))
227	DSEL	O	Interlace/Progressive select output signal (H:480i / L:480p) (not used (Open))
228	xRST	O	Reset output signal for ADAC (Low Active) (not used (Open))
229	ADACVDD1	—	Power supply (+3.3V from IC1105)
230	ADACVDD2	—	Power supply (+3.3V from IC1105)
231	RFGND18	—	Ground terminal
232	RFVDD18	—	Power supply (+1.8V from IC1110)
233	XTALO	O	27MHz crystal output (not used (Open))
234	XTALI	I	27MHz crystal input
235	JITFO	O	The output terminal of RF jitter meter
236	JITFN	I	The input terminal of RF jitter meter
237	PLLVSS	—	Ground terminal
238	IDACEXLP	I	RF Data PLL DAC LPF
239	PLLVDD3	—	Power supply (RF+3.3V)
240	LPFON	O	The negative output of loop filter amplifier
241	LPFIP	I	The positive input terminal of loop filter amplifier
242	LPFIN	I	The negative input terminal of loop filter amplifier
243	LPFOP	O	The positive output of loop filter amplifier
244	ADCVDD3	—	Power supply (RF+3.3V)
245	ADCVSS	—	Ground terminal

Pin No.	Pin Name	I/O	Description
246	RFVDD3	—	Power supply (RF+3.3V)
247	RFRPDC	O	RF ripple detect output
248	RFRPAC	I	RF ripple detect input (through AC-coupling)
249	HRFZC	I	High frequency RF ripple zero crossing
250	CRTPLP	O	Defect level filter capacitor connecting
251	RFGND18	—	Ground terminal
252	OSP	O	RF offset cancellation capacitor connecting
253	OSN	O	RF offset cancellation capacitor connecting
254	RFGC	O	RF AGC loop capacitor connecting for DVD-ROM
255	IREF	I	Current reference input
256	AVDD3	—	Power supply (RF+3.3V)

MAIN BOARD IC501 M30622MEP-B02FPU0 (DZ230/DZ231), M30622MEP-B03FPU0 (HDZ235) (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	DAMP_SCDT/ DIAT_SDATA/DIR_DIN	O	DAMP processor data output
2	DAMP_SHIFT/ DIAT_SCLK/DIR_CLK	O	DAMP processor clock output
3	CEC_RX_IN	I	CEC data input
4	SIRCS_IN	I	Sires input
5	NO USE	O	Not used (Open)
6	NO USE	O	Not used (Open)
7	NO USE	O	Not used (Open)
8	BYTE	I	External data bus (Ground terminal)
9	CNVSS	I	Change processor mode (Pull down)
10, 11	EN_A, EN_B	I	Volume control for ENCODER (Pull up)
12	RESET	I	System reset signal input
13	XOUT	O	Crystal output for main clock (5MHz)
14	VSS	—	Ground terminal
15	XIN	I	Crystal input for main clock (5MHz)
16	VCC	—	Power supply (BUP+3.3V)
17	NMI	I	Not used (Fixed to "H" (+3.3V))
18	NO USE	O	Not used (Open)
19	A.CAL_OUT_LEVEL	I	Out level detect for auto calibration
20	AC_CUT	I	Detect AC-CUT
21	FL_CLK/LED_CLK	O	FL and LED driver clock output
22	CEC_TX_OUT	O	CEC data output
23	NO USE	I	Not used (Fixed to "L")
24	FL_D_OUT/LED_DATA	O	FL and LED driver data output
25	NO USE	—	Not used (Open)
26	MIC_GAIN	O	MIC gain control
27	CDM_OPEN_SW	I	CDM open switch input
28	DC_CONT	O	A.CAL MIC DC control output
29	CLINK_RX_IN	I	C-Link data input (HDZ235: Not used (Fixed to "L"))
30	CLINK_TX_OUT	O	C-Link data output (HDZ235: Not used)
31	DVD_SID	O	Media Tek data out / Flash write TXD1
32	DVD_SOD	I	Media Tek data in / Flash write RXD1
33	DVD_SCO	I	Media Tek clock in / Flash write CLK1
34	DVD_XIFBUSY	O	Media Tek busy request / Flash write RTS1
35	NO USE	O	Not used (Open)
36	NO USE	O	Not used (Open)
37	DVD_XIFCS	I	Media Tek chip select
38	MTK_RST	O	Media Tek reset
39	P_CONT1	O	Control for power supply 1
40	P_CONT2	O	Control for power supply 2
41	P_CONT3	O	Control for power supply 3
42	DRIVE_RST(EN)	O	DAMP driver reset
43	DRIVE_OCP(DIAG)	I	DAMP driver shut down
44	OVERFLOW1	I	DAMP processor F/C/S over flow detect
45	OVERFLOW2	I	DAMP processor SW over flow detect
46	WRITE CE	I	Flash write CE (not used (Fixed to "H" (+3.3V)))
47	DAMP LATCH1	O	DAMP processor latch1

Pin No.	Pin Name	I/O	Description
48	DAMP LATCH2	O	DAMP processor latch2
49	DAMP LATCH3	O	DAMP processor latch3
50	DAMP INIT	O	DAMP processor reset
51	DAMP SOFT MUTE	O	DAMP processor soft muting
52	HP_SW	I	Headphone detect
53	HP_MUTE	O	Headphone muting
54	NO USE	O	Not used (Open)
55	NO USE	O	Not used (Open)
56	FL_STB	O	FL driver chip select output
57	DC_DET	I	Speaker DC detect input
58	NO USE	O	Not used (Open)
59	NO USE	O	Not used (Open)
60	NO USE	O	Not used (Open)
61	NO USE	O	Not used (Open)
62	VCC	—	Power supply (BUP+3.3V)
63	MIC/A.CAL_SW	I	MIC insert switch
64	VSS	—	Ground terminal
65	NO USE	O	Not used (Open)
66	NO USE	O	Not used (Open)
67	NO USE	O	Not used (Open)
68	TUNED	I	TUNER tuned input
69	ST_CLK	O	TUNER clock output
70	ST_DO	I	TUNER data input
71	ST_CE	O	TUNER chip enable
72	ST_DI	O	TUNER data output
73	NO USE	O	Not used (Open)
74	KEY INT	I	Wakeup from ECO mode by key input
75	RDS_CLK	I	RDS clock input (DZ230/DZ231)
	NO USE	O	Not used (Open)(HDZ235)
76	RDS-DATA	I	RDS data input (DZ230/DZ231)
	NO USE	O	Not used (Open)(HDZ235)
77	NO USE	O	Not used (Fixed to "H" (E3.3V))
78	TV SEL	O	TV control output (DZ230/DZ231)
	NO USE	O	Not used (HDZ235)
79	M_ST	O	LINK (Multi STEREO) control output
80	NO USE	O	Not used
81	ASEL3	O	Audio selector 3
82	V_SEL0	O	Video selector 0
83	V_SEL1	O	Video selector 1
84	ASEL0	O	Audio selector 0
85	ASEL1	O	Audio selector 1
86	ASEL2	O	Audio selector 2 (HDZ235: Not used)
87	NO USE	O	Not used
88	NO USE	O	Not used
89	CLINK_DET	I	C-Link detect input (DZ230/DZ231)
	NO USE	O	Not used (Open)(HDZ235)
90	MONO/ST_DET	I	Front jack MONO or STEREO detect
91	A.CAL MIC LEVEL	I	MIC level detect for auto calibration
92	DESTINATION	I	Destination select input

Pin No.	Pin Name	I/O	Description
93	MODEL	I	Model select input
94	KEY2	I	Key input 2 input
95	KEY1	I	Key input 1 input
96	VSS	—	Ground terminal
97	KEY0	I	Key input 0 input
98	VREF	—	Reference voltage (E3.3V)
99	VCC	—	Power supply (BUP+3.3V)
100	NO USE	O	Not used

SECTION 7 EXPLODED VIEWS

NOTE:


- XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Abbreviation
CND : Canadian model

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by mark \square contain confidential information.
Strictly follow the instructions whenever the components are repaired and/or replaced.

Les composants identifiés par la marque \square contiennent des informations confidentielles.
Suivre scrupuleusement les instructions chaque fois qu'un composant est remplacé et / ou réparé.

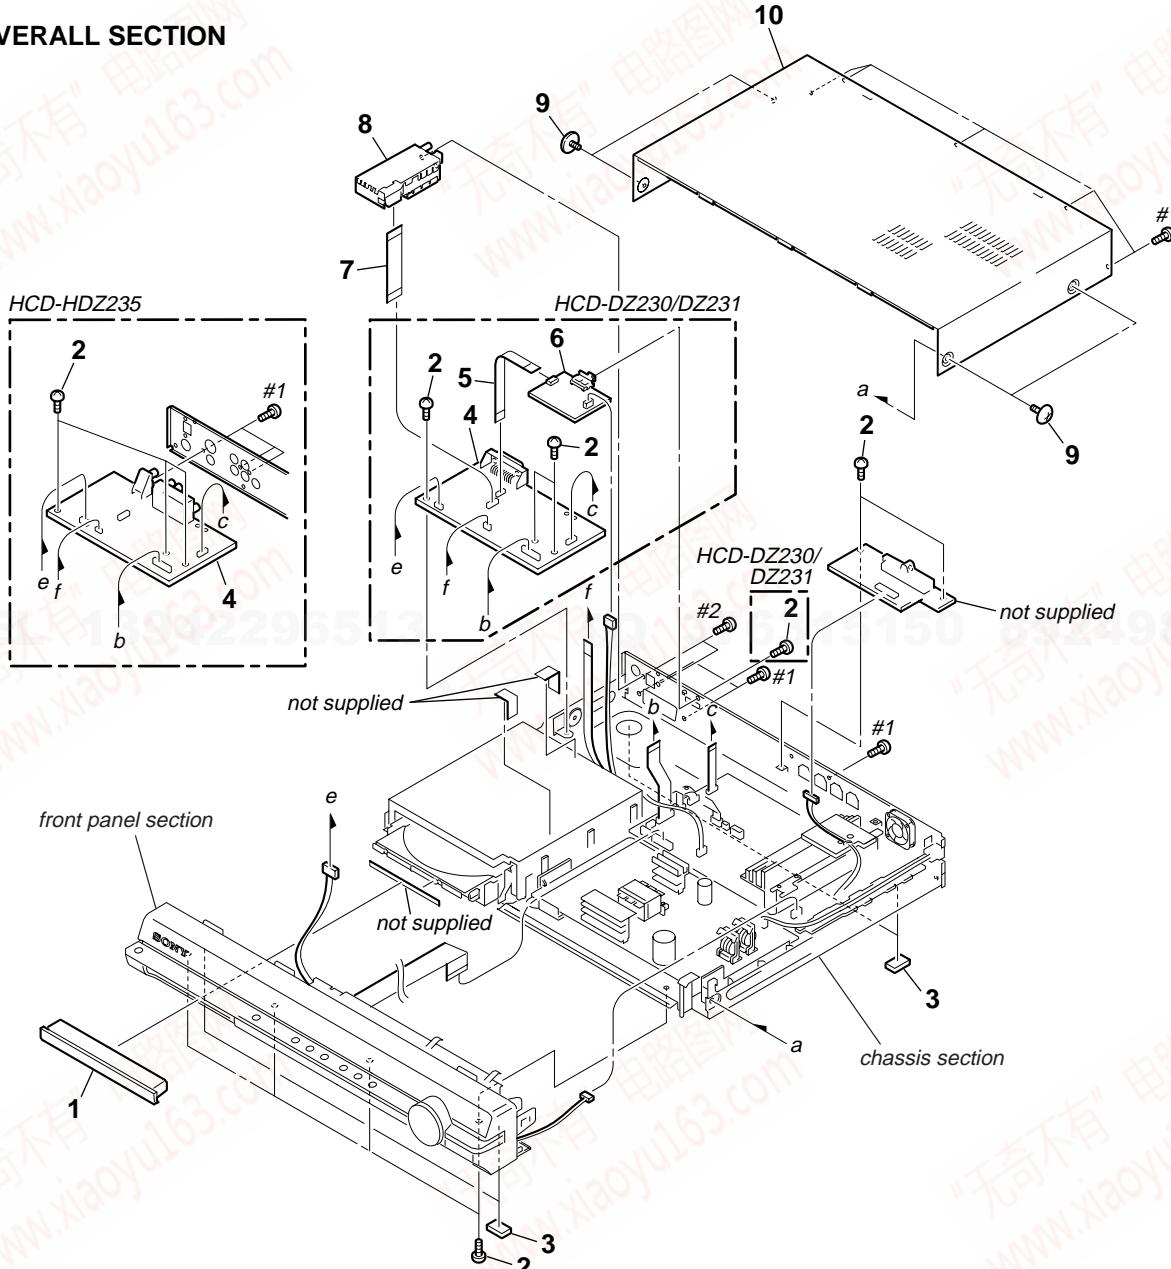
7-1. OVERALL SECTION

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	2-889-987-01	PANEL, LOADING (DZ231/HDZ235)		8	1-693-724-11	TUNER (FM/AM) (DZ230/DZ231)	
1	2-889-987-11	PANEL, LOADING (DZ230)		8	1-693-731-11	TUNER (FM/AM) (HDZ235)	
2	3-077-331-21	+BV3 (3-CR)		9	3-363-099-22	SCREW (CASE 3 TP2) (DZ230)	
3	4-232-478-31	FOOT		9	3-363-099-51	SCREW (CASE 3 TP2) (DZ231/HDZ235)	
4	A-1218-023-A	IO-SCART BOARD, COMPLETE (DZ230/DZ231)		10	2-889-996-11	CASE (DS) (DZ231/HDZ235)	
4	A-1236-513-A	IO-S-OUT BOARD, COMPLETE (HDZ235)		10	2-889-996-31	CASE (DS) (DZ230)	
5	1-828-307-51	WIRE (FLAT TYPE)(9 CORE) (DZ230/DZ231)		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
6	A-1218-025-A	DMPORT BOARD, COMPLETE (DZ230/DZ231)		#2	7-685-862-09	SCREW +BVTT 2.6X6 (S)	
7	1-828-952-51	WIRE (FLAT TYPE)(9 CORE) (HDZ235)					
7	1-828-962-51	WIRE (FLAT TYPE)(11 CORE) (DZ230/DZ231)					

Note: If the wire (flat type) was replaced, fold it some as the wire (flat type) before replacement.

7-2. FRONT PANEL SECTION


QQ 970915150 892498299

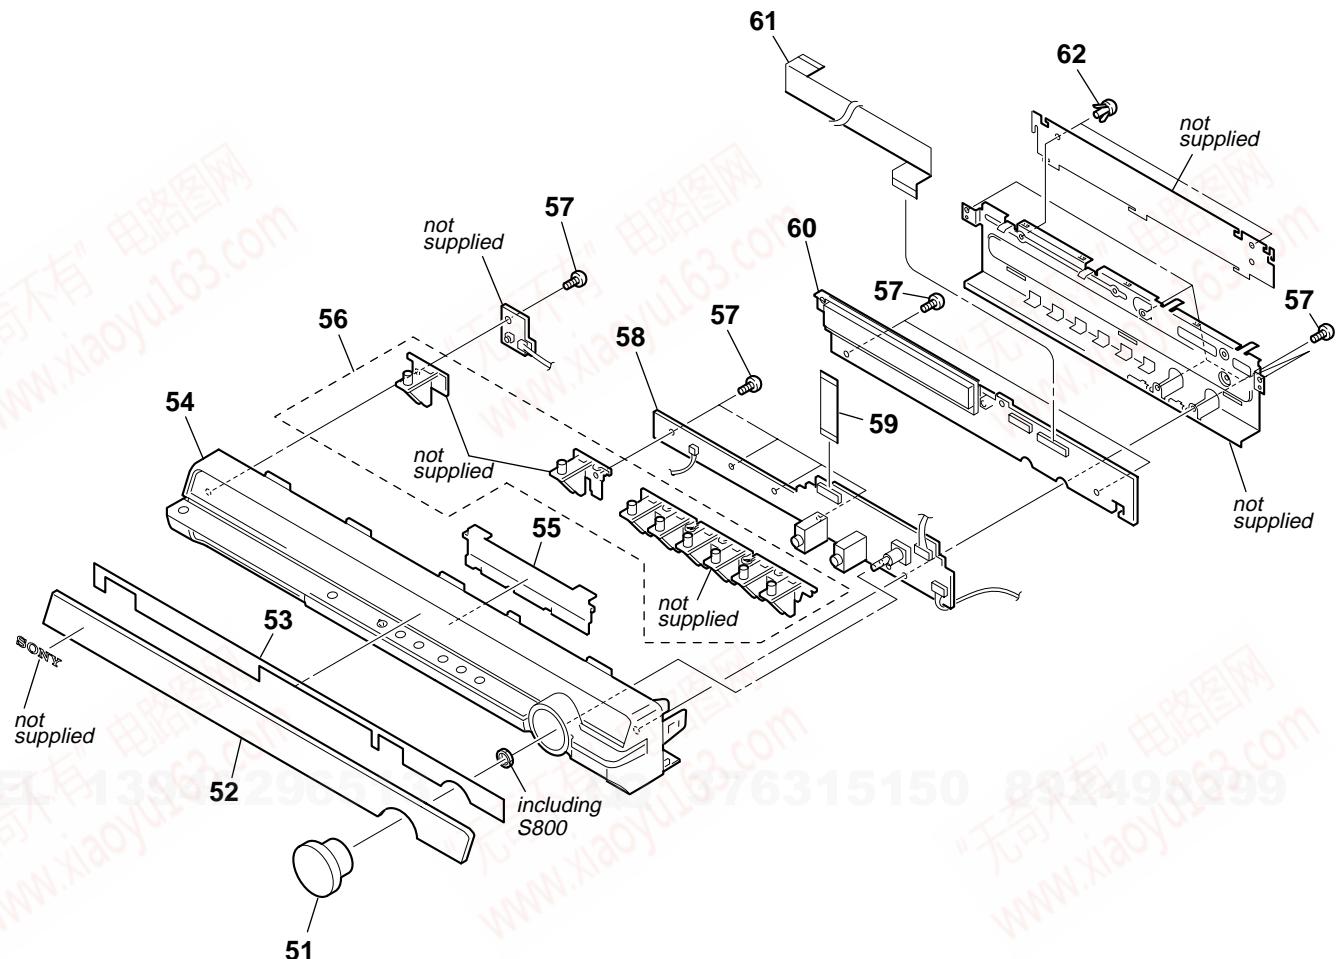

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	2-889-990-01	KNOB (VOL)		55	2-889-992-01	FILTER, COLOR	
52	2-889-982-01	WINDOW, INDICATION (INJ) (DZ230)		56	2-889-983-01	BUTTON (AIO)	
52	2-889-982-21	WINDOW, INDICATION (INJ) (HDZ235)		57	3-087-053-11	+BVTP2.6 (3CR)	
52	2-889-982-51	WINDOW, INDICATION (INJ) (DZ231)		58	A-1218-017-A	JACK BOARD, COMPLETE	
53	2-898-988-01	SHEET (DS WINDOW), ADHESIVE		59	1-828-325-51	WIRE (FLAT TYPE)(13 CORE)	
54	2-889-981-01	PANEL, FRONT (AIO) (DZ230: AEP)		60	A-1218-015-A	FL BOARD, COMPLETE	
54	2-889-981-11	PANEL, FRONT (AIO) (DZ230: UK)		61	1-828-374-51	WIRE (FLAT TYPE)(21 CORE)	
54	2-889-981-41	PANEL, FRONT (AIO) (HDZ235)		62	3-531-576-01	RIVET	
54	2-889-981-51	PANEL, FRONT (AIO) (DZ231: AEP)					
54	2-889-981-61	PANEL, FRONT (AIO) (DZ231: UK)					

Note: If the wire (flat type) was replaced, fold it some as the wire (flat type) before replacement.


7-3. CHASSIS SECTION

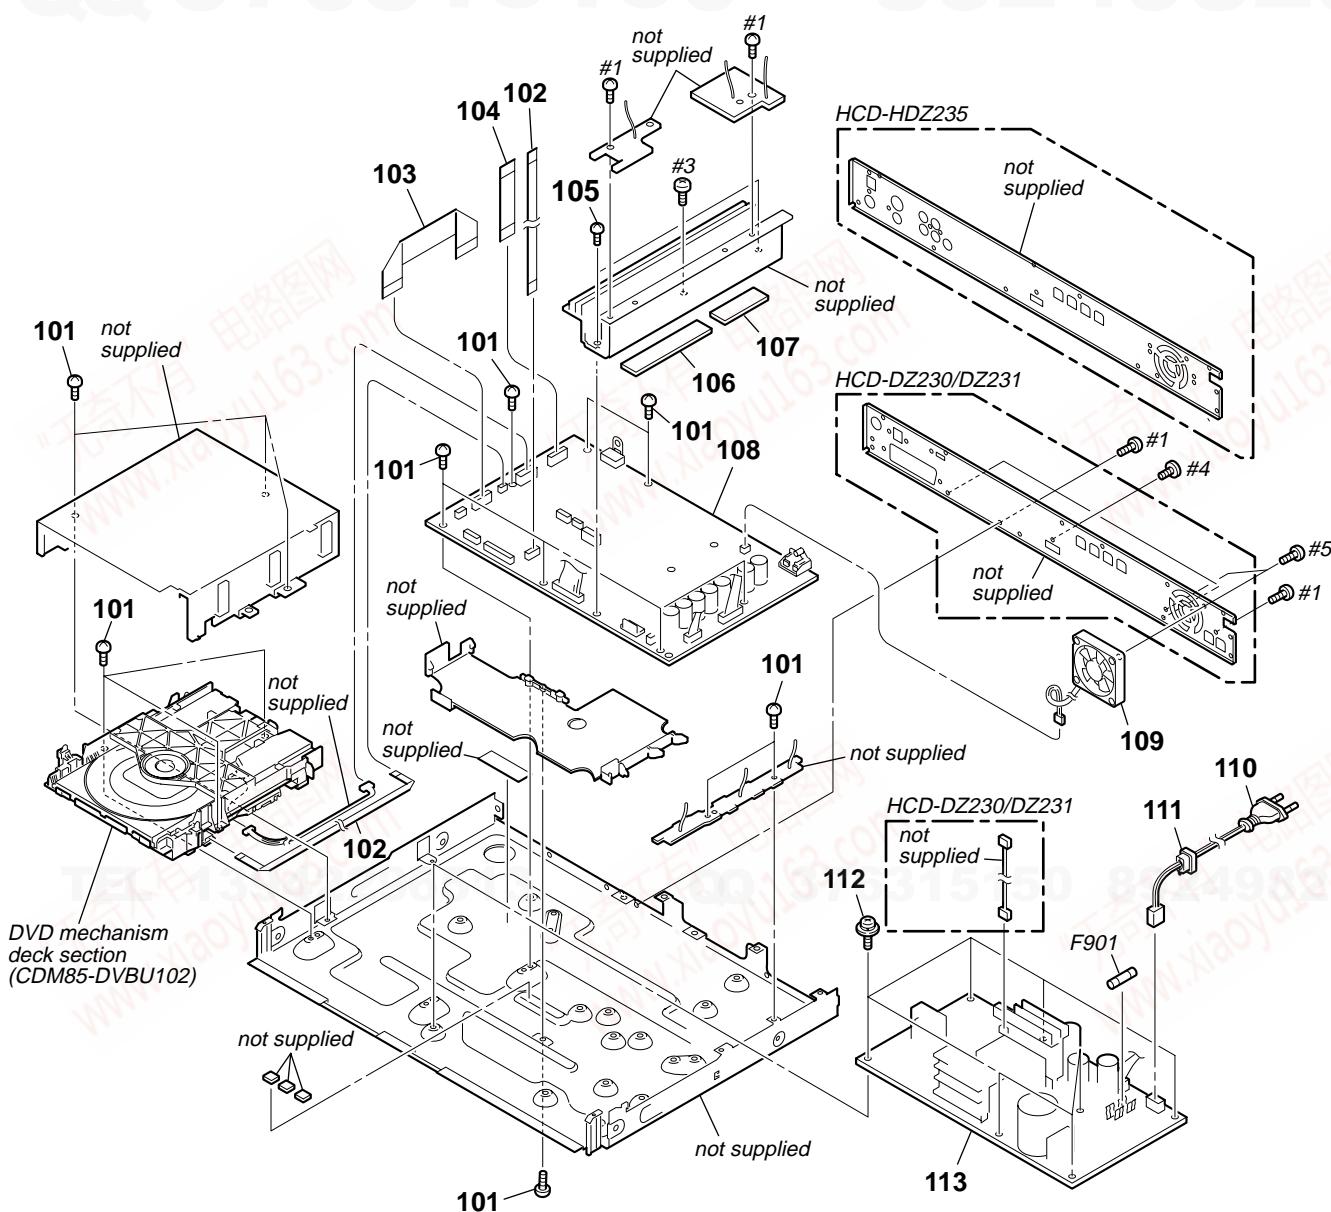

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	3-077-331-21	+BV3 (3-CR)		△ 110	1-751-520-31	CORD, POWER (UK)	
102	1-828-292-51	WIRE (FLAT TYPE)(5 CORE)		△ 110	1-830-188-11	CORD, POWER (AEP)	
103	1-828-339-51	WIRE (FLAT TYPE)(15 CORE) (HDZ235)		△ 110	1-830-190-11	CORD, POWER (HDZ235)	
103	1-828-369-51	WIRE (FLAT TYPE)(21 CORE) (DZ230/DZ231)		△ 111	3-703-244-00	BUSHING (2104), CORD	
104	1-828-317-51	WIRE (FLAT TYPE)(11 CORE) (HDZ235)		112	2-677-839-01	+PWH 3X8 (SUMITITE)	
104	1-828-327-51	WIRE (FLAT TYPE)(13 CORE) (DZ230/DZ231)		113	A-1218-005-A	POWER BOARD, COMPLETE (DZ230/DZ231)	
105	3-077-331-11	+BV3 (3-CR)		113	A-1228-785-A	POWER BOARD, COMPLETE (HDZ235)	
106	2-597-972-41	SHEET, RADIATION (HDZ235)		△ F901	1-533-311-12	FUSE, GLASS CYLINDRICAL (DIA.5) (8A/125V) (HDZ235)	
106	3-100-158-11	SHEET, RADIATION (DZ230/DZ231)		△ F901	1-576-233-51	FUSE (H.B.C.) (T6.3AH/250V)(DZ230/DZ231)	
107	2-597-972-61	SHEET, RADIATION (HDZ235)		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
107	3-100-158-21	SHEET, RADIATION (DZ230/DZ231)		#3	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
108	A-1242-239-A	MAIN BOARD, COMPLETE (AEP)		#4	7-682-547-04	SCREW +B 3X6	
108	A-1242-240-A	MAIN BOARD, COMPLETE (UK)		#5	7-685-881-09	SCREW +BVTT 4X8 (S)	
108	A-1242-726-A	MAIN BOARD, COMPLETE (HDZ235)					
109	1-787-331-11	FAN, D.C.					

Note: If the wire (flat type) was replaced, fold it some as the wire (flat type) before replacement.

7-4. DVD MECHANISM DECK SECTION (CDM85-DVBU102)

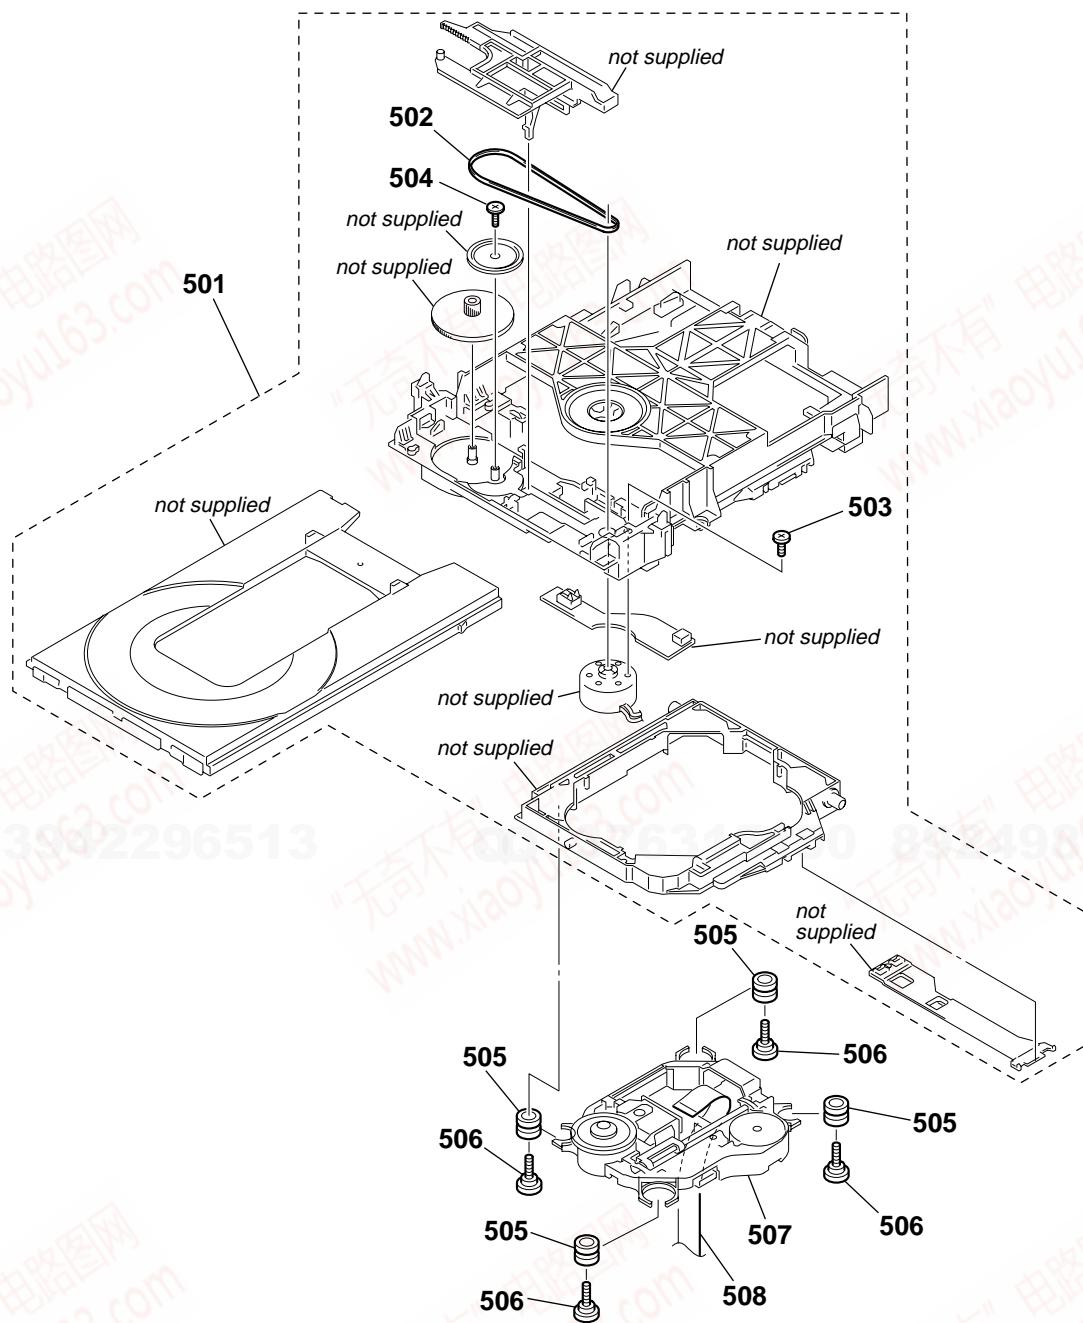

Ref. No.	Part No.	Description
501	A-6071-669-A	LOADING ASSY (M)
502	3-088-371-01	BELT
503	4-974-725-11	SCREW (M1.7X2.5), P
504	4-674-137-11	SCREW (PTP2X5)
505	2-634-618-01	INSULATOR

Remark	Ref. No.	Part No.	Description	Remark
	506	3-087-599-01	INSULATOR SCREW	
△	507	8-820-321-05	OPTICAL PICK UP ASSY KHM-313CAA/C2RP	
	508	1-828-773-51	WIRE (FLAT TYPE)(24 CORE)	

Note: If the wire (flat type) was replaced, fold it some as the wire (flat type) before replacement.

SECTION 8

ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS
uF: μ F
- COILS
uH: μ H
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

SEMICONDUCTORS

In each case, u: μ , for example:
uA... : μ A..., uPA... : μ PA...,
uPB... : μ PB..., uPC... : μ PC...,
uPD... : μ PD...

Abbreviation

CND : Canadian model

When indicating parts by reference number, please include the board name.

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by mark \triangle contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced.

Les composants identifiés par la marque \triangle contiennent des informations confidentielles. Suivre scrupuleusement les instructions chaque fois qu'un composant est remplacé et / ou réparé.

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark								
						< RESISTOR >											
A-1218-025-A DMPORT BOARD, COMPLETE (DZ230/DZ231)						*****											
< CAPACITOR >						R203	1-218-879-11	METAL CHIP	22K	0.5%	1/10W						
C210	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R208	1-218-879-11	METAL CHIP	22K	0.5%	1/10W						
C211	1-126-206-11	ELECT CHIP	100uF	20%	6.3V	R214	1-218-879-11	METAL CHIP	22K	0.5%	1/10W						
C212	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R215	1-218-879-11	METAL CHIP	22K	0.5%	1/10W						
C213	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R220	1-216-821-11	METAL CHIP	1K	5%	1/10W						
C214	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	R221	1-216-821-11	METAL CHIP	1K	5%	1/10W						
C220	1-128-995-21	ELECT CHIP	100uF	20%	10V	R222	1-216-840-11	METAL CHIP	39K	5%	1/10W						
C221	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R223	1-216-833-11	METAL CHIP	10K	5%	1/10W						
C222	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R224	1-216-864-11	SHORT CHIP	0								
C223	1-126-206-11	ELECT CHIP	100uF	20%	6.3V	R225	1-218-887-11	METAL CHIP	47K	0.5%	1/10W						
C229	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	R227	1-218-879-11	METAL CHIP	22K	0.5%	1/10W						
C230	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	R228	1-218-879-11	METAL CHIP	22K	0.5%	1/10W						
C231	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	R229	1-218-879-11	METAL CHIP	22K	0.5%	1/10W						
C232	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	R230	1-218-879-11	METAL CHIP	22K	0.5%	1/10W						
C233	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	R231	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
C234	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	R232	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
C235	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	R237	1-216-864-11	SHORT CHIP	0								
C236	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	R238	1-216-864-11	SHORT CHIP	0								
C237	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R239	1-216-864-11	SHORT CHIP	0								
C238	1-126-395-11	ELECT CHIP	22uF	20%	16V	R240	1-216-809-11	METAL CHIP	100	5%	1/10W						
C239	1-126-205-11	ELECT CHIP	47uF	20%	6.3V	R241	1-216-809-11	METAL CHIP	100	5%	1/10W						
C240	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	*****											
C241	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	A-1218-015-A FL BOARD, COMPLETE											
< CONNECTOR >						< CAPACITOR >											
CN201	1-784-861-51	CONNECTOR, FFC (LIF (NON-ZIF)) 9P				C435	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V						
CN203	1-774-730-21	PIN, CONNECTOR (PC BOARD) 3P				C436	1-115-156-11	CERAMIC CHIP	1uF		10V						
CN204	1-817-615-21	CONNECTOR BOARD TO BOARD 18P				C800	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V						
(DMPORT)						C801	1-163-037-11	CERAMIC CHIP	0.022uF	10%	50V						
< IC >						C802	1-126-947-11	ELECT	47uF	20%	35V						
IC201	6-705-308-01	IC SI-3010KM-TL				C803	1-126-933-11	ELECT	100uF	20%	16V						
IC202	8-759-710-97	IC NJM4565M-D				C804	1-162-974-11	CERAMIC CHIP	0.01uF		50V						
< COIL >						C805	1-164-360-11	CERAMIC CHIP	0.1uF		16V						
L200	1-469-525-91	INDUCTOR	10uH			C809	1-126-157-11	ELECT	10uF	20%	16V						
						C811	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V						
						C814	1-126-157-11	ELECT	10uF	20%	16V						
						C829	1-124-259-11	ELECT	4.7uF	20%	50V						

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
< CONNECTOR >											
CN801	1-779-558-11	CONNECTOR, FFC (LIF (NON-ZIF)) 21P				A-1218-023-A		IO-SCART BOARD, COMPLETE (DZ230/DZ231)			*****
CN805	1-794-506-51	CONNECTOR, FFC/FPC 13P									
< DIODE >											
D431	6-501-193-01	DIODE 1SS355WTE-17				C206	1-126-964-11	ELECT	10uF	20%	50V
D432	6-501-193-01	DIODE 1SS355WTE-17				C211	1-126-964-11	ELECT	10uF	20%	50V
D801	6-501-193-01	DIODE 1SS355WTE-17				C221	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
D802	6-501-193-01	DIODE 1SS355WTE-17				C222	1-104-658-91	ELECT	100uF	20%	10V
D803	6-501-169-01	DIODE UDW-TE17-6.2B				C224	1-126-964-11	ELECT	10uF	20%	50V
D804	6-501-193-01	DIODE 1SS355WTE-17				C225	1-126-916-11	ELECT	1000uF	20%	6.3V
D805	6-501-193-01	DIODE 1SS355WTE-17				C231	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
< IC >											
IC801	6-600-349-21	IC NJL23H400A				C232	1-126-933-11	ELECT	100uF	20%	16V
IC802	8-759-643-83	IC uPD16315GB-3BS				C233	1-126-933-11	ELECT	100uF	20%	16V
< JUMPER RESISTOR >											
JR801	1-216-864-11	SHORT CHIP	0			C234	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
JR802	1-216-864-11	SHORT CHIP	0			C238	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
JR807	1-216-864-11	SHORT CHIP	0			C239	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
JR808	1-216-864-11	SHORT CHIP	0			C240	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
< COIL >											
L801	1-410-671-31	INDUCTOR	47uH			C244	1-126-916-11	ELECT	1000uF	20%	6.3V
L802	1-410-671-31	INDUCTOR	47uH			C245	1-126-916-11	ELECT	1000uF	20%	6.3V
< FLUORESCENT INDICATOR TUBE >											
ND001	1-451-590-11	VACUUM FLUORESCENT DISPLAYS				C246	1-126-916-11	ELECT	1000uF	20%	6.3V
< TRANSISTOR >											
Q801	6-550-065-01	TRANSISTOR	CPH5504-TL-E			C271	1-126-933-11	ELECT	100uF	20%	16V
< RESISTOR >											
R436	1-216-834-11	METAL CHIP	12K	5%	1/10W	C295	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R437	1-216-835-11	METAL CHIP	15K	5%	1/10W	C296	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R800	1-216-864-11	SHORT CHIP	0			C304	1-126-947-11	ELECT	47uF	20%	35V
R801	1-216-839-11	METAL CHIP	33K	5%	1/10W	C320	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R802	1-216-809-11	METAL CHIP	100	5%	1/10W	C324	1-104-662-91	ELECT	22uF	20%	25V
R804	1-216-828-11	METAL CHIP	3.9K	5%	1/10W	C325	1-104-662-91	ELECT	22uF	20%	25V
R805	1-216-295-91	SHORT CHIP	0			C326	1-104-662-91	ELECT	22uF	20%	25V
R811	1-216-844-11	METAL CHIP	82K	5%	1/10W	C327	1-104-662-91	ELECT	22uF	20%	25V
R812	1-216-845-11	METAL CHIP	100K	5%	1/10W	C328	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R813	1-216-845-11	METAL CHIP	100K	5%	1/10W	C340	1-104-662-91	ELECT	22uF	20%	25V
R814	1-216-809-11	METAL CHIP	100	5%	1/10W	C341	1-104-662-91	ELECT	22uF	20%	25V
R815	1-216-809-11	METAL CHIP	100	5%	1/10W	C342	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R816	1-216-809-11	METAL CHIP	100	5%	1/10W	C343	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R819	1-216-805-11	METAL CHIP	47	5%	1/10W	C349	1-126-933-11	ELECT	100uF	20%	16V
R820	1-216-845-11	METAL CHIP	100K	5%	1/10W	C350	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
< TRANSFORMER >											
T801	1-443-645-11	TRANSFORMER, DC CONVERTER				C371	1-104-662-91	ELECT	22uF	20%	25V

						C372	1-104-662-91	ELECT	22uF	20%	25V
						C373	1-104-662-91	ELECT	22uF	20%	25V
						C374	1-104-662-91	ELECT	22uF	20%	25V
						C375	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
						C376	1-104-662-91	ELECT	22uF	20%	25V
						C377	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
						C383	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
						C384	1-126-933-11	ELECT	100uF	20%	16V
						C385	1-126-960-11	ELECT	1uF	20%	50V
						C386	1-126-960-11	ELECT	1uF	20%	50V
						C387	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
						C388	1-127-573-11	CERAMIC CHIP	1uF	10%	16V
						C391	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
						C392	1-126-933-11	ELECT	100uF	20%	16V
< CONNECTOR >											
CN301	1-779-277-11	CONNECTOR, FFC (LIF (NON-ZIF)) 9P				CN302	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P			
CN304	1-779-281-11	CONNECTOR, FFC (LIF (NON-ZIF)) 13P				CN305	1-568-830-11	CONNECTOR, FFC 11P (TUNER)			
CN307	1-779-273-11	CONNECTOR, FFC (LIF (NON-ZIF)) 5P									

HCD-DZ230/DZ231/HDZ235

IO-SCART	IO-S-OUT
-----------------	-----------------

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
CN308	1-779-289-11	CONNECTOR, FFC (LIF (NON-ZIF)) 21P		R285	1-216-833-11	METAL CHIP	10K
D271	6-501-193-01	DIODE 1SS355WTE-17		R303	1-216-864-11	SHORT CHIP	0
D272	6-501-193-01	DIODE 1SS355WTE-17		R308	1-216-827-11	METAL CHIP	3.3K
D309	8-719-058-24	DIODE RB501V-40TE-17		R309	1-216-827-11	METAL CHIP	3.3K
		< DIODE >		R310	1-216-829-11	METAL CHIP	4.7K
				R311	1-216-829-11	METAL CHIP	4.7K
				R316	1-216-829-11	METAL CHIP	4.7K
				R320	1-216-829-11	METAL CHIP	4.7K
		< IC >		R321	1-216-829-11	METAL CHIP	4.7K
IC202	6-703-622-01	IC MM1508XNRE		R324	1-216-829-11	METAL CHIP	4.7K
IC230	6-707-489-01	IC BH7868FS-E2		R332	1-216-829-11	METAL CHIP	4.7K
IC303	8-759-385-76	IC MC14052 BDR2		R335	1-216-841-11	METAL CHIP	47K
IC306	8-759-100-96	IC uPC4558G2		R336	1-216-841-11	METAL CHIP	47K
IC307	6-703-550-01	IC TA7809LS		R337	1-216-841-11	METAL CHIP	47K
		< JACK >		R338	1-216-841-11	METAL CHIP	47K
J230	1-816-044-11	CONNECTOR, SQUARE TYPE 21P (EURO AV / \square OUTPUT(TO TV))		R341	1-216-829-11	METAL CHIP	4.7K
		< COIL >		R344	1-216-841-11	METAL CHIP	47K
L221	1-469-525-91	INDUCTOR	10uH	R345	1-216-841-11	METAL CHIP	47K
L231	1-469-525-91	INDUCTOR	10uH	R346	1-216-841-11	METAL CHIP	47K
L304	1-469-525-91	INDUCTOR	10uH	R347	1-216-841-11	METAL CHIP	47K
		< TRANSISTOR >		R351	1-216-864-11	SHORT CHIP	0
Q271	1-801-806-11	TR DTC144EKA		R363	1-216-841-11	METAL CHIP	47K
Q272	8-729-120-28	TRANSISTOR	2SC1623-L5L6	R364	1-216-841-11	METAL CHIP	47K
Q273	8-729-027-23	TRANSISTOR	DTA114EKA-T146	R365	1-216-841-11	METAL CHIP	47K
Q274	1-801-806-11	TR DTC144EKA		R366	1-216-841-11	METAL CHIP	47K
Q275	8-729-027-23	TRANSISTOR	DTA114EKA-T146	R380	1-216-864-11	SHORT CHIP	0
				R384	1-216-864-11	SHORT CHIP	0
				R392	1-216-833-11	METAL CHIP	10K
		< RESISTOR >		R394	1-216-821-11	METAL CHIP	1K
R210	1-218-285-11	METAL CHIP	75	R396	1-216-833-11	METAL CHIP	10K
R211	1-218-285-11	METAL CHIP	75	R398	1-216-841-11	METAL CHIP	47K
R212	1-218-285-11	METAL CHIP	75	R399	1-216-841-11	METAL CHIP	47K
R221	1-216-864-11	SHORT CHIP	0	R400	1-216-821-11	METAL CHIP	1K
R222	1-216-864-11	SHORT CHIP	0	R402	1-218-827-11	METAL CHIP	150
				R403	1-216-845-11	METAL CHIP	100K
				R404	1-216-845-11	METAL CHIP	100K
				R405	1-218-827-11	METAL CHIP	150
				R406	1-216-845-11	METAL CHIP	100K
				R407	1-216-845-11	METAL CHIP	100K
				R408	1-218-827-11	METAL CHIP	150
				R409	1-218-827-11	METAL CHIP	150
				R410	1-216-841-11	METAL CHIP	47K
				R411	1-216-841-11	METAL CHIP	47K
				R412	1-218-827-11	METAL CHIP	150
				R413	1-218-827-11	METAL CHIP	150
				R414	1-216-817-11	METAL CHIP	470
				R415	1-216-817-11	METAL CHIP	470
				R416	1-216-829-11	METAL CHIP	4.7K
				R417	1-216-829-11	METAL CHIP	4.7K
				R420	1-216-817-11	METAL CHIP	470
				R421	1-216-817-11	METAL CHIP	470

							A-1236-513-A IO-S-OUT BOARD, COMPLETE (HDZ235)

							< CAPACITOR >
R281	1-216-815-11	METAL CHIP	330	R282	1-216-815-11	METAL CHIP	330
							0.1uF
				C222	1-107-826-11	CERAMIC CHIP	0.1uF
							10%
							16V

IO-S-OUT

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description		Remark	
C228	1-126-916-11	ELECT	1000uF	20%	6.3V			< JACK >			
C251	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	J301	1-694-920-11	TERMINAL BOARD (S TERMINAL+1P)			
C302	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V			(MONITOR OUT)			
C311	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	J303	1-820-784-11	JACK, PIN 5P (COMPONENT VIDEO OUT)			
C321	1-104-662-91	ELECT	22uF	20%	25V			< COIL >			
C322	1-104-662-91	ELECT	22uF	20%	25V	L201	1-469-525-91	INDUCTOR	10uH		
C330	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	L304	1-469-525-91	INDUCTOR	10uH		
C331	1-126-916-11	ELECT	1000uF	20%	6.3V			< TRANSISTOR >			
C332	1-126-933-11	ELECT	100uF	20%	16V	Q305	8-729-027-52	TRANSISTOR	DTC124EKA-T146		
C333	1-126-933-11	ELECT	100uF	20%	16V	Q307	8-729-027-52	TRANSISTOR	DTC124EKA-T146		
C334	1-126-916-11	ELECT	1000uF	20%	6.3V			< RESISTOR >			
C340	1-104-662-91	ELECT	22uF	20%	25V	R227	1-218-285-11	METAL CHIP	75	5%	1/10W
C341	1-104-662-91	ELECT	22uF	20%	25V	R228	1-218-285-11	METAL CHIP	75	5%	1/10W
C347	1-126-925-91	ELECT	470uF	20%	10V	R229	1-218-285-11	METAL CHIP	75	5%	1/10W
C348	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R306	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
C349	1-126-933-11	ELECT	100uF	20%	16V	R307	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
C350	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V						
C351	1-126-933-11	ELECT	100uF	20%	16V	R312	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
C352	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R314	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
C355	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R321	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
C357	1-126-964-11	ELECT	10uF	20%	50V	R323	1-218-285-11	METAL CHIP	75	5%	1/10W
C358	1-126-964-11	ELECT	10uF	20%	50V	R324	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
C359	1-165-908-11	CERAMIC CHIP	1uF	10%	10V						
C360	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	R325	1-216-864-11	SHORT CHIP	0		
C361	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	R326	1-218-285-11	METAL CHIP	75	5%	1/10W
C371	1-104-662-91	ELECT	22uF	20%	25V	R332	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
C372	1-104-662-91	ELECT	22uF	20%	25V	R333	1-216-841-11	METAL CHIP	47K	5%	1/10W
C373	1-104-662-91	ELECT	22uF	20%	25V	R334	1-216-841-11	METAL CHIP	47K	5%	1/10W
C374	1-104-662-91	ELECT	22uF	20%	25V						
C376	1-104-662-91	ELECT	22uF	20%	25V	R339	1-218-285-11	METAL CHIP	75	5%	1/10W
C383	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R341	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
C384	1-126-933-11	ELECT	100uF	20%	16V	R342	1-216-841-11	METAL CHIP	47K	5%	1/10W
C385	1-126-960-11	ELECT	1uF	20%	50V	R343	1-216-841-11	METAL CHIP	47K	5%	1/10W
C386	1-126-960-11	ELECT	1uF	20%	50V	R348	1-216-833-11	METAL CHIP	10K	5%	1/10W
C387	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V						
C388	1-127-573-11	CERAMIC CHIP	1uF	10%	16V	R360	1-216-821-11	METAL CHIP	1K	5%	1/10W
C389	1-126-947-11	ELECT	47uF	20%	35V	R363	1-216-841-11	METAL CHIP	47K	5%	1/10W
C390	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	R364	1-216-841-11	METAL CHIP	47K	5%	1/10W
C391	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R365	1-216-841-11	METAL CHIP	47K	5%	1/10W
C392	1-126-933-11	ELECT	100uF	20%	16V	R366	1-216-841-11	METAL CHIP	47K	5%	1/10W
		< CONNECTOR >									
CN303	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P				R375	1-216-864-11	SHORT CHIP	0		
CN304	1-779-279-11	CONNECTOR, FFC (LIF (NON-ZIF)) 11P				R378	1-216-864-11	SHORT CHIP	0		
CN305	1-568-828-11	CONNECTOR, FFC 9P (TUNER)				R392	1-216-833-11	METAL CHIP	10K	5%	1/10W
CN307	1-779-273-11	CONNECTOR, FFC (LIF (NON-ZIF)) 5P				R394	1-216-821-11	METAL CHIP	1K	5%	1/10W
CN310	1-779-283-11	CONNECTOR, FFC (LIF (NON-ZIF)) 15P				R396	1-216-833-11	METAL CHIP	10K	5%	1/10W
		< DIODE >									
D280	6-501-193-01	DIODE 1SS355WTE-17				R398	1-216-833-11	METAL CHIP	10K	5%	1/10W
D281	6-501-193-01	DIODE 1SS355WTE-17				R399	1-216-833-11	METAL CHIP	10K	5%	1/10W
D309	8-719-058-24	DIODE RB501V-40TE-17				R400	1-216-821-11	METAL CHIP	1K	5%	1/10W
		< IC >				R402	1-218-827-11	METAL CHIP	150	0.5%	1/10W
IC303	8-759-385-76	IC MC14052 BDR2				R403	1-216-845-11	METAL CHIP	100K	5%	1/10W
IC306	8-759-100-96	IC uPC4558G2									
IC307	6-703-550-01	IC TA7809LS				R404	1-216-845-11	METAL CHIP	100K	5%	1/10W
IC308	6-710-470-01	IC MM1758AFBE				R405	1-218-827-11	METAL CHIP	150	0.5%	1/10W
						R406	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R407	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R408	1-218-827-11	METAL CHIP	150	0.5%	1/10W
						R409	1-218-827-11	METAL CHIP	150	0.5%	1/10W
						R410	1-216-841-11	METAL CHIP	47K	5%	1/10W
						R411	1-216-841-11	METAL CHIP	47K	5%	1/10W

IO-S-OUT JACK

Ref. No.	Part No.	Description	Value	tolerance	Remark	Ref. No.	Part No.	Description	Remark
R412	1-218-827-11	METAL CHIP	150	0.5%	1/10W	FB479	1-500-236-22	BEAD, FERRITE (CHIP) (1608)	
R413	1-218-827-11	METAL CHIP	150	0.5%	1/10W			< IC >	
R414	1-216-864-11	SHORT CHIP	0			IC401	8-759-100-96	IC uPC4558G2	
R415	1-216-864-11	SHORT CHIP	0			IC402	8-759-100-96	IC uPC4558G2	
R416	1-216-829-11	METAL CHIP	4.7K	5%	1/10W			< JACK >	
R417	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	J401	1-819-878-31	JACK (AUDIO IN/A.CAL MIC)	
R420	1-216-817-11	METAL CHIP	470	5%	1/10W	J402	1-819-878-31	JACK (PHONES)	
R421	1-216-817-11	METAL CHIP	470	5%	1/10W			< JUMPER RESISTOR >	
R426	1-216-864-11	SHORT CHIP	0			JR816	1-216-864-11	SHORT CHIP	0
R427	1-216-864-11	SHORT CHIP	0					< TRANSISTOR >	
R438	1-216-833-11	METAL CHIP	10K	5%	1/10W	Q450	6-550-889-01	TRANSISTOR	2SC5938-T112-1B
*****	*****	*****	*****	*****	*****	Q451	6-550-889-01	TRANSISTOR	2SC5938-T112-1B
A-1218-017-A	JACK BOARD, COMPLETE				*****	Q460	6-550-889-01	TRANSISTOR	2SC5938-T112-1B
	*****				*****	Q461	6-550-889-01	TRANSISTOR	2SC5938-T112-1B
	< CAPACITOR >				*****	Q470	1-801-806-11	TR DTC144EKA	
C401	1-124-589-11	ELECT	47uF	20%	16V	Q471	8-729-027-23	TRANSISTOR	DTA114EKA-T146
C403	1-124-584-00	ELECT	100uF	20%	10V	Q473	8-729-027-23	TRANSISTOR	DTA114EKA-T146
C404	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	Q474	8-729-027-24	TRANSISTOR	DTA114TKA-T146
C405	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	Q475	1-801-806-11	TR DTC144EKA	
C410	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V			< RESISTOR >	
C411	1-126-157-11	ELECT	10uF	20%	16V	R401	1-216-827-11	METAL CHIP	3.3K
C412	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	R402	1-216-829-11	METAL CHIP	4.7K
C413	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	R403	1-216-821-11	METAL CHIP	1K
C420	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	R410	1-216-845-11	METAL CHIP	100K
C421	1-126-157-11	ELECT	10uF	20%	16V	R411	1-216-817-11	METAL CHIP	470
C422	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	R412	1-216-837-11	METAL CHIP	22K
C423	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	R413	1-216-821-11	METAL CHIP	1K
C431	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V	R414	1-216-835-11	METAL CHIP	15K
C432	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	R415	1-216-821-11	METAL CHIP	1K
C433	1-162-925-11	CERAMIC CHIP	68PF	5%	50V	R416	1-216-801-11	METAL CHIP	22
C434	1-110-563-11	CERAMIC CHIP	0.068uF	10%	16V	R420	1-216-845-11	METAL CHIP	100K
C450	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	R421	1-216-817-11	METAL CHIP	470
C460	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	R422	1-216-837-11	METAL CHIP	22K
C471	1-124-222-91	ELECT	22uF	20%	6.3V	R423	1-216-821-11	METAL CHIP	1K
C491	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	R424	1-216-821-11	METAL CHIP	1K
C493	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	R431	1-216-864-11	SHORT CHIP	0
C849	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	R432	1-216-837-11	METAL CHIP	22K
C850	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	R433	1-216-825-11	METAL CHIP	2.2K
	< CONNECTOR >				R434	1-216-864-11	SHORT CHIP	0	
CN806	1-779-550-21	CONNECTOR, FFC (LIF (NON-ZIF)) 13P			R435	1-216-857-11	METAL CHIP	1M	
	< DIODE >				R444	1-216-864-11	SHORT CHIP	0	
D470	6-501-193-01	DIODE 1SS355WTE-17			R445	1-216-864-11	SHORT CHIP	0	
D492	6-501-193-01	DIODE 1SS355WTE-17			R450	1-216-829-11	METAL CHIP	4.7K	
D493	6-501-193-01	DIODE 1SS355WTE-17			R451	1-216-801-11	METAL CHIP	22	
D496	6-501-193-01	DIODE 1SS355WTE-17			R452	1-216-805-11	METAL CHIP	47	
D497	6-501-193-01	DIODE 1SS355WTE-17			R453	1-216-829-11	METAL CHIP	4.7K	
	< FERRITE BEAD >				R454	1-216-829-11	METAL CHIP	4.7K	
FB450	1-216-864-11	SHORT CHIP	0		R460	1-216-829-11	METAL CHIP	4.7K	
FB460	1-216-864-11	SHORT CHIP	0		R461	1-216-801-11	METAL CHIP	22	
FB470	1-500-236-22	BEAD, FERRITE (CHIP) (1608)			R462	1-216-805-11	METAL CHIP	47	
FB471	1-500-236-22	BEAD, FERRITE (CHIP) (1608)			R463	1-216-829-11	METAL CHIP	4.7K	
FB474	1-500-236-22	BEAD, FERRITE (CHIP) (1608)			R464	1-216-829-11	METAL CHIP	4.7K	
FB475	1-500-236-22	BEAD, FERRITE (CHIP) (1608)							

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description		Remark	
R470	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	C527	1-126-916-11	ELECT	1000uF	20%	6.3V
R471	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	C528	1-126-916-11	ELECT	1000uF	20%	6.3V
R472	1-216-819-11	METAL CHIP	680	5%	1/10W	C529	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
R478	1-216-809-11	METAL CHIP	100	5%	1/10W	C531	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R480	1-216-805-11	METAL CHIP	47	5%	1/10W	C532	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R481	1-216-845-11	METAL CHIP	100K	5%	1/10W	C533	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R482	1-216-833-11	METAL CHIP	10K	5%	1/10W	C534	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R490	1-216-864-11	SHORT CHIP	0			C535	1-126-947-11	ELECT	47uF	20%	35V
R491	1-216-864-11	SHORT CHIP	0			C536	1-126-947-11	ELECT	47uF	20%	35V
R492	1-216-864-11	SHORT CHIP	0			C538	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R851	1-216-864-11	SHORT CHIP	0			C705	1-126-964-11	ELECT	10uF	20%	50V
R852	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	C706	1-126-964-11	ELECT	10uF	20%	50V
R853	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	C707	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R854	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	C708	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R855	1-216-821-11	METAL CHIP	1K	5%	1/10W	C717	1-126-964-11	ELECT	10uF	20%	50V
R856	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	C718	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R857	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	C1101	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R858	1-216-864-11	SHORT CHIP	0			C1102	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
< SWITCH >											
S800	1-418-725-51	ENCODER, ROTARY (12 TYPE) (VOLUME)				C1105	1-126-947-11	ELECT	47uF	20%	35V
S802	1-762-875-21	SWITCH, KEYBOARD (FUNCTION)				C1106	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
S803	1-762-875-21	SWITCH, KEYBOARD (◀▶)				C1110	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
S804	1-762-875-21	SWITCH, KEYBOARD (II)				C1112	1-128-994-21	ELECT CHIP	47uF	20%	10V
S805	1-762-875-21	SWITCH, KEYBOARD (■)				C1113	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
S806	1-762-875-21	SWITCH, KEYBOARD (▶▶)				C1114	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
S807	1-762-875-21	SWITCH, KEYBOARD (△)				C1115	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
S808	1-762-875-21	SWITCH, KEYBOARD (▷)				C1116	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V

②	A-1242-239-A	MAIN BOARD, COMPLETE (AEP)				C1117	1-124-779-00	ELECT CHIP	10uF	20%	16V
②	A-1242-240-A	MAIN BOARD, COMPLETE (UK)				C1118	1-126-964-11	ELECT	10uF	20%	50V
②	A-1242-726-A	MAIN BOARD, COMPLETE (HDZ235)				C1119	1-126-964-11	ELECT	10uF	20%	50V

< CAPACITOR >											
C501	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1120	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C502	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1121	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C503	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1122	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C504	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1123	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C505	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1124	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C506	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1125	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C507	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1126	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C508	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1127	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C509	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1128	1-164-172-11	CERAMIC CHIP	0.0056uF	10%	25V
C510	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1130	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C511	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C1131	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C515	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1132	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C516	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1133	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C517	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1135	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C518	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1136	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C519	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1137	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C520	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V	C1138	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C521	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1139	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C522	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V	C1140	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C523	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1144	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C524	1-126-947-11	ELECT	47uF	20%	35V	C1145	1-124-779-00	ELECT CHIP	10uF	20%	16V
C525	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1146	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C526	1-104-658-91	ELECT	100uF	20%	10V	C1147	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C1148											
C1149											
C1150											
C1151											
C1152											

HCD-DZ230/DZ231/HDZ235**MAIN**

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description		Remark		
C1153	1-162-916-11	CERAMIC CHIP	12PF	5%	50V	C1602	1-128-994-21	ELECT CHIP	47uF	20%	10V
C1154	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1603	1-128-994-21	ELECT CHIP	47uF	20%	10V
C1155	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1701	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1156	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1702	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1157	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1703	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1158	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1704	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1160	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1706	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1161	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1707	1-126-965-91	ELECT	22uF	20%	50V
C1162	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1709	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1163	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1710	1-126-964-11	ELECT	10uF	20%	50V
C1164	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1711	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1169	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1712	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1170	1-124-779-00	ELECT CHIP	10uF	20%	16V	C1713	1-164-172-11	CERAMIC CHIP	0.0056uF	10%	25V
C1171	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1714	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1172	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1715	1-126-947-11	ELECT	47uF	20%	35V
C1173	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C1716	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V
C1174	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1717	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1175	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1718	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1176	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1719	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V
C1177	1-126-947-11	ELECT	47uF	20%	35V	C1720	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V
C1179	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1723	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V
C1180	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1725	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1181	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1727	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1182	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V	C1729	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V
C1183	1-128-934-91	CERAMIC CHIP	0.33uF	20%	10V	C1730	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V
C1184	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1736	1-126-947-11	ELECT	47uF	20%	35V
C1186	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V	C2102	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C1187	1-126-947-11	ELECT	47uF	20%	35V	(DZ230/DZ231)					
C1190	1-104-658-91	ELECT	100uF	20%	10V	C2103	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C1191	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C2104	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C1192	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C2105	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C1193	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V	C2106	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C1195	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V	C2107	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C1197	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C2108	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1198	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C2110	1-104-658-91	ELECT	100uF	20%	10V
C1199	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	C2111	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
C1203	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C2114	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1205	1-164-230-11	CERAMIC CHIP	220PF	5%	50V	C2130	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1206	1-164-230-11	CERAMIC CHIP	220PF	5%	50V	C3000	1-126-382-11	ELECT	100uF	20%	16V
C1208	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C3001	1-126-947-11	ELECT	47uF	20%	35V
C1209	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V	C3002	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
C1210	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C3008	1-164-156-11	CERAMIC CHIP	0.1uF	10%	25V
C1211	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V	C3011	1-126-947-11	ELECT	47uF	20%	35V
C1212	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C3012	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1213	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C3013	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1214	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C3014	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1215	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C3015	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1217	1-126-947-11	ELECT	47uF	20%	35V	C3016	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1218	1-126-964-11	ELECT	10uF	20%	50V	C3017	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1219	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C3018	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1220	1-126-964-11	ELECT	10uF	20%	50V	C3019	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1221	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3020	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1222	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3021	1-126-947-11	ELECT	47uF	20%	35V
C1223	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3022	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1224	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C3023	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1225	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C3024	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1226	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C3025	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1233	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	C3026	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description		Remark		
C3027	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3116	1-112-831-11	ELECT	2200uF	20%	35V
C3028	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3122	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3029	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3123	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3030	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3124	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C3031	1-126-947-11	ELECT	47uF	20%	35V	C3125	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C3032	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3126	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C3033	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3127	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C3034	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3128	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C3035	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3129	1-117-370-11	CERAMIC CHIP	10uF		10V
C3036	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3150	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3037	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3153	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C3038	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3154	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C3039	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3155	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C3040	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3156	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V
C3051	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	C3157	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V
C3052	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C3158	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3053	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C3159	1-112-246-11	ELECT	100uF	20%	35V
C3054	1-126-933-11	ELECT	100uF	20%	16V	C3162	1-112-246-11	ELECT	100uF	20%	35V
C3055	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C3163	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3056	1-126-923-91	ELECT	220uF	20%	10V	C3164	1-136-177-00	FILM	1uF	5%	50V
C3057	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C3165	1-136-177-00	FILM	1uF	5%	50V
C3058	1-162-910-11	CERAMIC CHIP	5PF	0.25PF	50V	C3166	1-112-831-11	ELECT	2200uF	20%	35V
C3059	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C3172	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3060	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V	C3173	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3067	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C3200	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3068	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C3203	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C3069	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C3204	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C3070	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C3205	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C3071	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C3206	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V
C3072	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3207	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V
C3073	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3208	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3081	1-126-925-91	ELECT	470uF	20%	10V	C3209	1-112-246-11	ELECT	100uF	20%	35V
C3082	1-126-925-91	ELECT	470uF	20%	10V	C3212	1-112-246-11	ELECT	100uF	20%	35V
C3083	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C3213	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3084	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C3214	1-136-177-00	FILM	1uF	5%	50V
C3085	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C3215	1-136-177-00	FILM	1uF	5%	50V
C3086	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C3216	1-112-831-11	ELECT	2200uF	20%	35V
C3087	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C3250	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3088	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C3253	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C3090	1-104-658-91	ELECT	100uF	20%	10V	C3254	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C3091	1-126-934-11	ELECT	220uF	20%	16V	C3255	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C3092	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C3256	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V
C3093	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C3257	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V
C3094	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C3258	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3095	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C3259	1-112-246-11	ELECT	100uF	20%	35V
C3100	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V	C3262	1-112-246-11	ELECT	100uF	20%	35V
C3103	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V	C3263	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3104	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C3264	1-136-177-00	FILM	1uF	5%	50V
C3105	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V	C3265	1-136-177-00	FILM	1uF	5%	50V
C3106	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V	C3266	1-112-831-11	ELECT	2200uF	20%	35V
C3107	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V	C3300	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3108	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V	C3303	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C3109	1-112-246-11	ELECT	100uF	20%	35V	C3304	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C3112	1-112-246-11	ELECT	100uF	20%	35V	C3305	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C3113	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V	C3306	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V
C3114	1-136-177-00	FILM	1uF	5%	50V	C3307	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V
C3115	1-136-177-00	FILM	1uF	5%	50V	C3308	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
					C3309	1-112-246-11	ELECT	100uF	20%	35V	

MAIN

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description	Remark
< DIODE >								
C3312	1-112-246-11	ELECT	100uF	20%	35V	D501	6-501-193-01	DIODE 1SS355WTE-17
C3313	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V	D502	6-501-193-01	DIODE 1SS355WTE-17
C3314	1-136-177-00	FILM	1uF	5%	50V	D504	6-501-193-01	DIODE 1SS355WTE-17
C3315	1-136-177-00	FILM	1uF	5%	50V	D505	6-500-334-01	DIODE MC2836-T112-1
C3316	1-112-831-11	ELECT	2200uF	20%	35V	D701	6-501-579-01	DIODE MC2837
C3322	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	D3071	6-501-193-01	DIODE 1SS355WTE-17
C3323	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	D3072	6-501-193-01	DIODE 1SS355WTE-17
C3400	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V	D3073	6-501-193-01	DIODE 1SS355WTE-17
C3403	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V	D3551	6-501-579-01	DIODE MC2837
C3404	1-164-156-11	CERAMIC CHIP	0.1uF		25V	D4111	6-501-696-01	DIODE RSA39LATE25
C3405	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V	D4112	6-501-696-01	DIODE RSA39LATE25
C3406	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V	D4151	6-501-696-01	DIODE RSA39LATE25
C3407	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V	D4152	6-501-696-01	DIODE RSA39LATE25
C3408	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V	D4201	6-501-696-01	DIODE RSA39LATE25
C3409	1-112-246-11	ELECT	100uF	20%	35V	D4202	6-501-696-01	DIODE RSA39LATE25
C3412	1-112-246-11	ELECT	100uF	20%	35V	D4251	6-501-696-01	DIODE RSA39LATE25
C3413	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V	D4252	6-501-696-01	DIODE RSA39LATE25
C3414	1-136-177-00	FILM	1uF	5%	50V	D4301	6-501-696-01	DIODE RSA39LATE25
C3415	1-136-177-00	FILM	1uF	5%	50V	D4302	6-501-696-01	DIODE RSA39LATE25
C3416	1-112-831-11	ELECT	2200uF	20%	35V	D4401	6-501-696-01	DIODE RSA39LATE25
C3422	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	D4402	6-501-696-01	DIODE RSA39LATE25
C3423	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	D9712	6-501-193-01	DIODE 1SS355WTE-17
C3551	1-126-960-11	ELECT	1uF	20%	50V	< FERRITE BEAD >		
C3552	1-126-964-11	ELECT	10uF	20%	50V			
C3553	1-164-505-11	CERAMIC CHIP	2.2uF		16V			
C3556	1-164-505-11	CERAMIC CHIP	2.2uF		16V	FB504	1-469-324-21	FERRITE, EMI (SMD) (2012)
C3901	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	FB505	1-469-324-21	FERRITE, EMI (SMD) (2012)
C3902	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	FB506	1-469-324-21	FERRITE, EMI (SMD) (2012)
C3903	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	FB507	1-469-324-21	FERRITE, EMI (SMD) (2012)
C3904	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	FB508	1-469-324-21	FERRITE, EMI (SMD) (2012)
C3911	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	FB509	1-469-324-21	FERRITE, EMI (SMD) (2012)
C3912	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	FB510	1-469-324-21	FERRITE, EMI (SMD) (2012)
C3913	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	FB1106	1-469-324-21	FERRITE, EMI (SMD) (2012)
C3914	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	FB1107	1-469-324-21	FERRITE, EMI (SMD) (2012)
C4501	1-117-370-11	CERAMIC CHIP	10uF		10V	FB1108	1-469-324-21	FERRITE, EMI (SMD) (2012)
C4502	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	FB1111	1-469-670-21	FERRITE, EMI (SMD) (2012)
C4504	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	FB1112	1-469-670-21	FERRITE, EMI (SMD) (2012)
C9772	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	FB1115	1-469-670-21	FERRITE, EMI (SMD) (2012)
< CONNECTOR >								
CN502	1-778-692-51	CONNECTOR, FFC/FPC 21P				FB1123	1-469-324-21	FERRITE, EMI (SMD) (2012)
CN503	1-784-368-51	CONNECTOR, FFC/FPC 9P				FB1601	1-469-324-21	FERRITE, EMI (SMD) (2012)
CN512	1-506-469-11	PIN, CONNECTOR 4P				FB1602	1-469-324-21	FERRITE, EMI (SMD) (2012)
CN605	1-778-692-51	CONNECTOR, FFC/FPC 21P (DZ230/DZ231)				FB1603	1-469-324-21	FERRITE, EMI (SMD) (2012)
CN608	1-784-374-51	CONNECTOR, FFC/FPC 15P (HDZ235)				FB1701	1-469-324-21	FERRITE, EMI (SMD) (2012)
CN702	1-779-273-11	CONNECTOR, FFC (LIF (NON-ZIF)) 5P				FB1702	1-469-324-21	FERRITE, EMI (SMD) (2012)
CN1101	1-815-763-32	CONNECTOR, FFC/FPC 24P				FB1703	1-469-324-21	FERRITE, EMI (SMD) (2012)
CN1103	1-784-365-51	CONNECTOR, FFC/FPC 5P				FB2101	1-469-324-21	FERRITE, EMI (SMD) (2012)
* CN1105	1-770-470-21	PIN, CONNECTOR (PC BOARD) 6P				FB2103	1-469-324-21	FERRITE, EMI (SMD) (2012)
* CN1201	1-770-470-21	PIN, CONNECTOR (PC BOARD) 6P				FB2120	1-469-118-21	FERRITE, EMI (SMD) (1608)
CN1202	1-784-365-51	CONNECTOR, FFC/FPC 5P				FB2121	1-469-118-21	FERRITE, EMI (SMD) (1608)
CN1701	1-820-735-11	HDMI CONNECTOR				FB2122	1-469-118-21	FERRITE, EMI (SMD) (1608)
CN3000	1-564-704-41	PIN, CONNECTOR (SMALL TYPE) 2P				FB2123	1-469-118-21	FERRITE, EMI (SMD) (1608)
CN3001	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P				FB2124	1-469-118-21	FERRITE, EMI (SMD) (1608)
CN3002	1-785-102-11	PIN, CONNECTOR (3.96mm PITCH) 4P				FB2125	1-469-118-21	FERRITE, EMI (SMD) (1608)
CN4301	1-784-372-51	CONNECTOR, FFC/FPC 13P (DZ230/DZ231)				FB3051	1-216-295-91	SHORT CHIP 0
CN4302	1-784-370-51	CONNECTOR, FFC/FPC 11P (HDZ235)				< FILTER >		
						FL1111	1-234-494-21	FILTER, EMI REMOVAL (SMD)

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
FL4501	1-234-177-21	FILTER, CHIP EMI < IC >		L3402	1-456-680-11	INDUCTOR	10uH
IC501	6-807-087-01	IC M30622MEP-B02FPU0 (DZ230/DZ231)		L3901	1-457-077-11	AIR-CORE COIL	
IC501	6-807-088-01	IC M30622MEP-B03FPU0 (HDZ235)		L3902	1-457-078-11	AIR-CORE COIL	
IC502	6-702-302-01	IC TK11133CSCL-G		L3903	1-457-077-11	AIR-CORE COIL	
IC503	6-708-922-01	IC PST3635NR		L3904	1-457-078-11	AIR-CORE COIL	
IC504	6-709-034-01	IC NJM2887DL3 (TE2)					< TRANSISTOR >
IC772	6-710-554-01	IC PCM1808PWR		Q503	8-729-120-28	TRANSISTOR	2SC1623-L5L6
IC1101	6-710-093-01	IC CXD9889R		Q504	6-550-718-01	TRANSISTOR	RSR025N03TL
IC1102	6-807-162-01	IC S29AL032D70TF-OHI1-0701UC (HDZ235)		Q631	8-729-120-28	TRANSISTOR	2SC1623-L5L6
IC1102	6-807-163-01	IC S29AL032D70TF-OHI1-0701CE (DZ230/DZ231)		Q632	8-729-120-28	TRANSISTOR	2SC1623-L5L6
IC1103	not supplied	IC BR24L64F-WE2		Q1101	6-550-008-01	TRANSISTOR	UM6K1N-TN
IC1104	6-709-370-01	IC A2V64S40CTP-G75		Q1102	6-550-653-01	TRANSISTOR	QST8TR
IC1105	6-702-302-01	IC TK11133CSCL-G		Q1103	8-729-027-52	TRANSISTOR	DTC124EKA-T146
IC1107	6-702-302-01	IC TK11133CSCL-G		Q1701	6-550-008-01	TRANSISTOR	UM6K1N-TN
IC1110	6-707-739-01	IC MM1661JTRE		Q3000	8-729-142-48	TRANSISTOR	2SD1616-TP-LK
IC1111	6-704-100-01	IC TC7PAU04FU (TE85R)		Q3001	8-729-120-28	TRANSISTOR	2SC1623-L5L6
IC1201	6-704-524-01	IC FAN8036L		Q3002	8-729-120-28	TRANSISTOR	2SC1623-L5L6
IC1701	6-708-682-01	IC CXD9873Q		Q3081	8-729-027-23	TRANSISTOR	DTA114EKA-T146
IC1702	6-702-300-01	IC TK11118CSCL-G		Q3101	8-729-600-22	TRANSISTOR	2SA1235-F
IC1703	6-702-302-01	IC TK11133CSCL-G		Q3102	8-729-600-22	TRANSISTOR	2SA1235-F
IC1705	8-759-592-47	IC TC7SZ08FU (TE85R)		Q3151	8-729-600-22	TRANSISTOR	2SA1235-F
IC1707	6-705-337-01	IC TK11150CSCL-G		Q3152	8-729-600-22	TRANSISTOR	2SA1235-F
IC3001	8-759-710-97	IC NJM4565M-D		Q3201	8-729-600-22	TRANSISTOR	2SA1235-F
IC3003	8-759-680-48	IC TC7WH157FK (TE85R)		Q3202	8-729-600-22	TRANSISTOR	2SA1235-F
IC3010	6-707-939-01	IC CXD9843AR		Q3251	8-729-600-22	TRANSISTOR	2SA1235-F
IC3020	6-707-939-01	IC CXD9843AR		Q3252	8-729-600-22	TRANSISTOR	2SA1235-F
IC3030	6-707-939-01	IC CXD9843AR		Q3301	8-729-600-22	TRANSISTOR	2SA1235-F
IC3050	6-702-300-01	IC TK11118CSCL-G		Q3302	8-729-600-22	TRANSISTOR	2SA1235-F
IC3051	6-706-492-01	IC TC7SHU04FU (T5RSOJF)		Q3401	8-729-600-22	TRANSISTOR	2SA1235-F
IC3100	6-708-921-01	IC CXD9883M		Q3402	8-729-600-22	TRANSISTOR	2SA1235-F
IC3150	6-708-921-01	IC CXD9883M		Q3551	8-729-120-28	TRANSISTOR	2SC1623-L5L6
IC3200	6-708-921-01	IC CXD9883M		Q3552	8-729-120-28	TRANSISTOR	2SC1623-L5L6
IC3250	6-708-921-01	IC CXD9883M		Q3553	8-729-120-28	TRANSISTOR	2SC1623-L5L6
IC3300	6-708-921-01	IC CXD9883M		Q9724	8-729-026-53	TRANSISTOR	2SA1576A-T106-QR
IC3400	6-708-921-01	IC CXD9883M		Q9726	8-729-905-35	TRANSISTOR	2SC4081-R
IC4501	8-759-573-97	IC SN74LVC541APWR		Q9728	8-729-905-35	TRANSISTOR	2SC4081-R
			< COIL >	Q9729	8-729-027-43	TRANSISTOR	DTC114EKA-T146
							< RESISTOR >
L701	1-414-754-11	INDUCTOR	10uH	R146	1-216-805-11	METAL CHIP	47 5% 1/10W
L3000	1-469-527-91	INDUCTOR	47uH	R501	1-216-857-11	METAL CHIP	1M 5% 1/10W
L3051	1-414-754-11	INDUCTOR	10uH	R504	1-216-823-11	METAL CHIP	1.5K 5% 1/10W
L3052	1-414-754-11	INDUCTOR	10uH	R504	1-216-841-11	METAL CHIP	47K 5% 1/10W (UK) (HDZ235)
L3053	1-414-754-11	INDUCTOR	10uH	R505	1-216-829-11	METAL CHIP	4.7K 5% 1/10W (AEP)
L3054	1-412-939-11	INDUCTOR	1uH	R505	1-216-837-11	METAL CHIP	22K 5% 1/10W (HDZ235)
L3111	1-456-680-11	INDUCTOR	10uH	R505	1-216-841-11	METAL CHIP	47K 5% 1/10W (UK)
L3112	1-456-680-11	INDUCTOR	10uH	R506	1-218-867-11	METAL CHIP	6.8K 0.5% 1/10W (DZ230/DZ231)
L3151	1-456-680-11	INDUCTOR	10uH	R506	1-216-835-11	METAL CHIP	15K 5% 1/10W (HDZ235)
L3152	1-456-680-11	INDUCTOR	10uH	R507	1-216-841-11	METAL CHIP	47K 5% 1/10W
L3201	1-456-680-11	INDUCTOR	10uH	R508	1-216-821-11	METAL CHIP	1K 5% 1/10W
L3202	1-456-680-11	INDUCTOR	10uH				
L3251	1-456-680-11	INDUCTOR	10uH				
L3252	1-456-680-11	INDUCTOR	10uH				
L3301	1-456-680-11	INDUCTOR	10uH				
L3302	1-456-680-11	INDUCTOR	10uH				
L3401	1-456-680-11	INDUCTOR	10uH				

HCD-DZ230/DZ231/HDZ235**MAIN**

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark				
R509	1-216-809-11	METAL CHIP	100	5%	1/10W	R586	1-216-833-11	METAL CHIP	10K	5%	1/10W
R510	1-216-833-11	METAL CHIP	10K	5%	1/10W	R587	1-216-833-11	METAL CHIP	10K	5%	1/10W
R511	1-216-821-11	METAL CHIP	1K	5%	1/10W	R589	1-216-295-91	SHORT CHIP	0		
R512	1-216-833-11	METAL CHIP	10K	5%	1/10W	R590	1-216-295-91	SHORT CHIP	0		
R513	1-216-821-11	METAL CHIP	1K	5%	1/10W	R596	1-216-295-91	SHORT CHIP	0		
R514	1-216-833-11	METAL CHIP	10K	5%	1/10W	R597	1-216-295-91	SHORT CHIP	0		
R515	1-216-821-11	METAL CHIP	1K	5%	1/10W	R598	1-216-296-11	SHORT CHIP	0		
R516	1-216-821-11	METAL CHIP	1K	5%	1/10W	R599	1-216-295-91	SHORT CHIP	0		
R517	1-216-809-11	METAL CHIP	100	5%	1/10W	R601	1-216-864-11	SHORT CHIP	0		
R518	1-216-809-11	METAL CHIP	100	5%	1/10W	R602	1-216-809-11	METAL CHIP	100	5%	1/10W (DZ230/DZ231)
R519	1-216-833-11	METAL CHIP	10K	5%	1/10W	R603	1-216-809-11	METAL CHIP	100	5%	1/10W (DZ230/DZ231)
R526	1-216-821-11	METAL CHIP	1K	5%	1/10W	R604	1-216-809-11	METAL CHIP	100	5%	1/10W
R527	1-216-833-11	METAL CHIP	10K	5%	1/10W	R605	1-216-809-11	METAL CHIP	100	5%	1/10W
R528	1-216-833-11	METAL CHIP	10K	5%	1/10W	R606	1-216-809-11	METAL CHIP	100	5%	1/10W
R529	1-216-821-11	METAL CHIP	1K	5%	1/10W	R607	1-216-809-11	METAL CHIP	100	5%	1/10W
R530	1-216-809-11	METAL CHIP	100	5%	1/10W	R608	1-216-809-11	METAL CHIP	100	5%	1/10W
R531	1-216-833-11	METAL CHIP	10K	5%	1/10W	R609	1-216-809-11	METAL CHIP	100	5%	1/10W
R534	1-216-833-11	METAL CHIP	10K	5%	1/10W	R610	1-216-809-11	METAL CHIP	100	5%	1/10W
R535	1-216-809-11	METAL CHIP	100	5%	1/10W	R611	1-216-809-11	METAL CHIP	100	5%	1/10W
R536	1-216-864-11	SHORT CHIP	0			R612	1-216-809-11	METAL CHIP	100	5%	1/10W
R539	1-216-833-11	METAL CHIP	10K	5%	1/10W	R613	1-216-809-11	METAL CHIP	100	5%	1/10W
R540	1-216-833-11	METAL CHIP	10K	5%	1/10W	R614	1-216-809-11	METAL CHIP	100	5%	1/10W
R542	1-216-833-11	METAL CHIP	10K	5%	1/10W	R615	1-216-809-11	METAL CHIP	100	5%	1/10W
R546	1-216-833-11	METAL CHIP	10K	5%	1/10W	R631	1-216-833-11	METAL CHIP	10K	5%	1/10W
R547	1-216-864-11	SHORT CHIP	0			R632	1-216-841-11	METAL CHIP	47K	5%	1/10W
R548	1-216-864-11	SHORT CHIP	0			R636	1-216-864-11	SHORT CHIP	0		
R550	1-216-821-11	METAL CHIP	1K	5%	1/10W	R637	1-216-809-11	METAL CHIP	100	5%	1/10W
R552	1-216-821-11	METAL CHIP	1K	5%	1/10W	R638	1-216-809-11	METAL CHIP	100	5%	1/10W
R553	1-216-833-11	METAL CHIP	10K	5%	1/10W (DZ230/DZ231)	R639	1-216-809-11	METAL CHIP	100	5%	1/10W (DZ230/DZ231)
R554	1-216-833-11	METAL CHIP	10K	5%	1/10W	R640	1-216-809-11	METAL CHIP	100	5%	1/10W
R555	1-216-833-11	METAL CHIP	10K	5%	1/10W	R691	1-216-864-11	SHORT CHIP	0		
R556	1-216-841-11	METAL CHIP	47K	5%	1/10W	R692	1-216-864-11	SHORT CHIP	0		
R557	1-216-841-11	METAL CHIP	47K	5%	1/10W	R693	1-216-864-11	SHORT CHIP	0		
R558	1-216-833-11	METAL CHIP	10K	5%	1/10W	R694	1-216-864-11	SHORT CHIP	0		
R559	1-216-833-11	METAL CHIP	10K	5%	1/10W	R695	1-216-864-11	SHORT CHIP	0		
R561	1-216-845-11	METAL CHIP	100K	5%	1/10W	R696	1-216-864-11	SHORT CHIP	0		
R562	1-216-841-11	METAL CHIP	47K	5%	1/10W	R701	1-216-813-11	METAL CHIP	220	5%	1/10W
R563	1-216-833-11	METAL CHIP	10K	5%	1/10W	R702	1-216-864-11	SHORT CHIP	0		
R564	1-216-864-11	SHORT CHIP	0			R721	1-216-864-11	SHORT CHIP	0		
R565	1-216-864-11	SHORT CHIP	0			R778	1-216-864-11	SHORT CHIP	0		
R566	1-216-864-11	SHORT CHIP	0			R780	1-216-805-11	METAL CHIP	47	5%	1/10W
R567	1-216-864-11	SHORT CHIP	0			R781	1-216-805-11	METAL CHIP	47	5%	1/10W
R568	1-216-864-11	SHORT CHIP	0			R782	1-216-801-11	METAL CHIP	22	5%	1/10W
R569	1-216-864-11	SHORT CHIP	0			R783	1-216-801-11	METAL CHIP	22	5%	1/10W
R572	1-216-751-11	METAL CHIP	300K	0.5%	1/10W	R784	1-216-801-11	METAL CHIP	22	5%	1/10W
R573	1-216-845-11	METAL CHIP	100K	5%	1/10W	R785	1-216-801-11	METAL CHIP	22	5%	1/10W
R575	1-216-821-11	METAL CHIP	1K	5%	1/10W	R786	1-216-295-91	SHORT CHIP	0		
R576	1-216-821-11	METAL CHIP	1K	5%	1/10W	R790	1-216-864-11	SHORT CHIP	0		
R577	1-216-841-11	METAL CHIP	47K	5%	1/10W	R1101	1-216-809-11	METAL CHIP	100	5%	1/10W
R578	1-216-809-11	METAL CHIP	100	5%	1/10W	R1102	1-216-295-91	SHORT CHIP	0		
R579	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1103	1-216-864-11	SHORT CHIP	0		
R580	1-216-809-11	METAL CHIP	100	5%	1/10W	R1105	1-216-833-11	METAL CHIP	10K	5%	1/10W
R581	1-216-809-11	METAL CHIP	100	5%	1/10W	R1106	1-216-833-11	METAL CHIP	10K	5%	1/10W
R582	1-216-864-11	SHORT CHIP	0			R1107	1-216-833-11	METAL CHIP	10K	5%	1/10W
R583	1-216-841-11	METAL CHIP	47K	5%	1/10W	R1108	1-216-857-11	METAL CHIP	1M	5%	1/10W

MAIN

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description		Remark
R1109	1-216-864-11	SHORT CHIP	0		R1216	1-216-834-11	METAL CHIP	12K	5% 1/10W
R1110	1-216-841-11	METAL CHIP	47K	5% 1/10W	R1219	1-216-838-11	METAL CHIP	27K	5% 1/10W
R1111	1-216-809-11	METAL CHIP	100	5% 1/10W	R1220	1-216-821-11	METAL CHIP	1K	5% 1/10W
R1112	1-211-977-11	METAL CHIP	22	0.5% 1/10W	R1221	1-218-889-11	METAL CHIP	56K	0.5% 1/10W
R1113	1-211-977-11	METAL CHIP	22	0.5% 1/10W	R1222	1-216-839-11	METAL CHIP	33K	5% 1/10W
R1114	1-216-845-11	METAL CHIP	100K	5% 1/10W	R1223	1-218-895-11	METAL CHIP	100K	0.5% 1/10W
R1115	1-211-977-11	METAL CHIP	22	0.5% 1/10W	R1224	1-216-833-11	METAL CHIP	10K	5% 1/10W
R1116	1-216-821-11	METAL CHIP	1K	5% 1/10W	R1225	1-218-895-11	METAL CHIP	100K	0.5% 1/10W
R1117	1-216-841-11	METAL CHIP	47K	5% 1/10W	R1226	1-218-889-11	METAL CHIP	56K	0.5% 1/10W
R1118	1-216-801-11	METAL CHIP	22	5% 1/10W	R1227	1-216-864-11	SHORT CHIP	0	
R1120	1-216-801-11	METAL CHIP	22	5% 1/10W	R1228	1-216-864-11	SHORT CHIP	0	
R1121	1-216-801-11	METAL CHIP	22	5% 1/10W	R1230	1-218-893-11	METAL CHIP	82K	0.5% 1/10W
R1123	1-216-864-11	SHORT CHIP	0		R1231	1-218-875-11	METAL CHIP	15K	0.5% 1/10W
R1124	1-216-841-11	METAL CHIP	47K	5% 1/10W	R1232	1-218-877-11	METAL CHIP	18K	0.5% 1/10W
R1125	1-216-805-11	METAL CHIP	47	5% 1/10W	R1233	1-218-883-11	METAL CHIP	33K	0.5% 1/10W
R1132	1-216-845-11	METAL CHIP	100K	5% 1/10W	R1234	1-216-833-11	METAL CHIP	10K	5% 1/10W
R1133	1-216-864-11	SHORT CHIP	0		R1236	1-216-821-11	METAL CHIP	1K	5% 1/10W
R1134	1-216-864-11	SHORT CHIP	0 (DZ230/DZ231)		R1237	1-216-821-11	METAL CHIP	1K	5% 1/10W
R1135	1-216-833-11	METAL CHIP	10K	5% 1/10W	R1238	1-216-829-11	METAL CHIP	4.7K	5% 1/10W
R1136	1-216-835-11	METAL CHIP	15K	5% 1/10W	R1239	1-216-829-11	METAL CHIP	4.7K	5% 1/10W
R1138	1-216-809-11	METAL CHIP	100	5% 1/10W	R1243	1-216-809-11	METAL CHIP	100	5% 1/10W
R1139	1-216-864-11	SHORT CHIP	0		R1246	1-216-829-11	METAL CHIP	4.7K	5% 1/10W
R1140	1-216-833-11	METAL CHIP	10K	5% 1/10W	R1247	1-216-821-11	METAL CHIP	1K	5% 1/10W
R1141	1-216-855-11	METAL CHIP	680K	5% 1/10W	R1601	1-216-295-91	SHORT CHIP	0	
R1142	1-216-845-11	METAL CHIP	100K	5% 1/10W	R1602	1-216-295-91	SHORT CHIP	0	
R1145	1-216-864-11	SHORT CHIP	0		R1603	1-216-295-91	SHORT CHIP	0	
R1147	1-216-864-11	SHORT CHIP	0		R1604	1-216-295-91	SHORT CHIP	0	
R1148	1-216-864-11	SHORT CHIP	0		R1605	1-216-296-11	SHORT CHIP	0	
R1151	1-216-833-11	METAL CHIP	10K	5% 1/10W	R1606	1-216-295-91	SHORT CHIP	0	
R1152	1-216-864-11	SHORT CHIP	0		R1701	1-216-809-11	METAL CHIP	100	5% 1/10W
R1153	1-216-864-11	SHORT CHIP	0		R1702	1-216-864-11	SHORT CHIP	0	
R1154	1-216-864-11	SHORT CHIP	0		R1703	1-216-864-11	SHORT CHIP	0	
R1155	1-216-864-11	SHORT CHIP	0		R1704	1-216-809-11	METAL CHIP	100	5% 1/10W
R1156	1-216-809-11	METAL CHIP	100	5% 1/10W	R1705	1-216-833-11	METAL CHIP	10K	5% 1/10W
R1159	1-216-805-11	METAL CHIP	47	5% 1/10W	R1706	1-216-864-11	SHORT CHIP	0	
R1160	1-216-805-11	METAL CHIP	47	5% 1/10W	R1707	1-216-864-11	SHORT CHIP	0	
R1161	1-216-801-11	METAL CHIP	22	5% 1/10W	R1712	1-216-809-11	METAL CHIP	100	5% 1/10W
R1169	1-216-833-11	METAL CHIP	10K	5% 1/10W	R1713	1-218-841-11	METAL CHIP	560	0.5% 1/10W
R1170	1-216-833-11	METAL CHIP	10K	5% 1/10W	R1714	1-216-864-11	SHORT CHIP	0	
R1171	1-216-809-11	METAL CHIP	100	5% 1/10W	R1721	1-216-833-11	METAL CHIP	10K	5% 1/10W
R1175	1-216-864-11	SHORT CHIP	0		R1722	1-216-833-11	METAL CHIP	10K	5% 1/10W
R1183	1-216-805-11	METAL CHIP	47	5% 1/10W	R1723	1-216-833-11	METAL CHIP	10K	5% 1/10W
R1184	1-216-805-11	METAL CHIP	47	5% 1/10W	R1726	1-216-833-11	METAL CHIP	10K	5% 1/10W
R1185	1-216-805-11	METAL CHIP	47	5% 1/10W	R1727	1-216-833-11	METAL CHIP	10K	5% 1/10W
R1191	1-216-821-11	METAL CHIP	1K	5% 1/10W	R1728	1-216-864-11	SHORT CHIP	0	
R1193	1-216-821-11	METAL CHIP	1K	5% 1/10W	R1730	1-218-840-11	METAL CHIP	510	0.5% 1/10W
R1204	1-216-822-11	METAL CHIP	1.2K	5% 1/10W	R1731	1-216-864-11	SHORT CHIP	0	
R1205	1-216-833-11	METAL CHIP	10K	5% 1/10W	R1734	1-216-864-11	SHORT CHIP	0	
R1206	1-216-833-11	METAL CHIP	10K	5% 1/10W	R1736	1-216-864-11	SHORT CHIP	0	
R1207	1-216-826-11	METAL CHIP	2.7K	5% 1/10W	R1738	1-216-864-11	SHORT CHIP	0	
R1208	1-216-839-11	METAL CHIP	33K	5% 1/10W	R1740	1-216-864-11	SHORT CHIP	0	
R1209	1-216-839-11	METAL CHIP	33K	5% 1/10W	R1742	1-216-841-11	METAL CHIP	47K	5% 1/10W
R1210	1-216-841-11	METAL CHIP	47K	5% 1/10W	R1744	1-216-829-11	METAL CHIP	4.7K	5% 1/10W
R1212	1-216-833-11	METAL CHIP	10K	5% 1/10W	R1746	1-216-864-11	SHORT CHIP	0	
R1213	1-218-867-11	METAL CHIP	6.8K	0.5% 1/10W	R1747	1-216-864-11	SHORT CHIP	0	
R1214	1-216-835-11	METAL CHIP	15K	5% 1/10W	R1748	1-216-864-11	SHORT CHIP	0	
R1215	1-216-834-11	METAL CHIP	12K	5% 1/10W	R1749	1-216-824-11	METAL CHIP	1.8K	5% 1/10W
					R1750	1-216-824-11	METAL CHIP	1.8K	5% 1/10W

HCD-DZ230/DZ231/HDZ235**MAIN**

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R1751	1-216-864-11	SHORT CHIP	0	R2718	1-208-635-11	METAL CHIP	10 0.5%
R1752	1-216-864-11	SHORT CHIP	0	R2751	1-216-833-11	METAL CHIP	10K 5%
R1753	1-216-864-11	SHORT CHIP	0	R3001	1-216-833-11	METAL CHIP	10K 5%
R1756	1-216-864-11	SHORT CHIP	0	R3002	1-216-833-11	METAL CHIP	10K 5%
R1757	1-216-833-11	METAL CHIP	10K 5% 1/10W	R3003	1-216-823-11	METAL CHIP	1.5K 5% 1/10W
R1758	1-216-833-11	METAL CHIP	10K 5% 1/10W	R3004	1-216-822-11	METAL CHIP	1.2K 5% 1/10W
R1759	1-216-833-11	METAL CHIP	10K 5% 1/10W	R3006	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R1783	1-216-864-11	SHORT CHIP	0	R3011	1-216-817-11	METAL CHIP	470 5% 1/10W
R1784	1-216-864-11	SHORT CHIP	0	R3012	1-216-817-11	METAL CHIP	470 5% 1/10W
R1785	1-216-864-11	SHORT CHIP	0	R3013	1-216-833-11	METAL CHIP	10K 5% 1/10W
R1786	1-216-864-11	SHORT CHIP	0	R3014	1-216-801-11	METAL CHIP	22 5% 1/10W
R1788	1-216-864-11	SHORT CHIP	0	R3015	1-216-809-11	METAL CHIP	100 5% 1/10W
R1791	1-216-864-11	SHORT CHIP	0	R3017	1-216-819-11	METAL CHIP	680 5% 1/10W
R1793	1-216-864-11	SHORT CHIP	0	R3021	1-216-817-11	METAL CHIP	470 5% 1/10W
R2101	1-218-855-11	METAL CHIP	2.2K 0.5% 1/10W	R3022	1-216-817-11	METAL CHIP	470 5% 1/10W
R2104	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	R3023	1-216-801-11	METAL CHIP	22 5% 1/10W
R2107	1-216-833-11	METAL CHIP	10K 5% 1/10W	R3024	1-216-809-11	METAL CHIP	100 5% 1/10W
R2110	1-216-826-11	METAL CHIP	2.7K 5% 1/10W	R3026	1-216-819-11	METAL CHIP	680 5% 1/10W
R2113	1-216-833-11	METAL CHIP	10K 5% 1/10W	R3031	1-216-817-11	METAL CHIP	470 5% 1/10W
R2114	1-216-801-11	METAL CHIP	22 5% 1/10W	R3032	1-216-817-11	METAL CHIP	470 5% 1/10W
R2115	1-216-864-11	SHORT CHIP	0	R3033	1-216-833-11	METAL CHIP	10K 5% 1/10W
R2118	1-216-833-11	METAL CHIP	10K 5% 1/10W	R3034	1-216-801-11	METAL CHIP	22 5% 1/10W
R2119	1-216-864-11	SHORT CHIP	0	R3035	1-216-809-11	METAL CHIP	100 5% 1/10W
R2126	1-216-827-11	METAL CHIP	3.3K 5% 1/10W	R3037	1-216-819-11	METAL CHIP	680 5% 1/10W
R2127	1-216-827-11	METAL CHIP	3.3K 5% 1/10W	R3040	1-216-864-11	SHORT CHIP	0
R2128	1-216-833-11	METAL CHIP	10K 5% 1/10W	R3041	1-216-864-11	SHORT CHIP	0
R2129	1-216-845-11	METAL CHIP	100K 5% 1/10W	R3042	1-216-864-11	SHORT CHIP	0
R2133	1-216-864-11	SHORT CHIP	0	R3043	1-216-864-11	SHORT CHIP	0
R2134	1-216-864-11	SHORT CHIP	0	R3044	1-216-864-11	SHORT CHIP	0
R2135	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	R3045	1-216-864-11	SHORT CHIP	0
R2150	1-216-827-11	METAL CHIP	3.3K 5% 1/10W	R3046	1-216-864-11	SHORT CHIP	0
R2151	1-216-827-11	METAL CHIP	3.3K 5% 1/10W	R3050	1-216-864-11	SHORT CHIP	0
R2152	1-216-827-11	METAL CHIP	3.3K 5% 1/10W	R3051	1-216-097-11	RES-CHIP	100K 5% 1/10W
R2161	1-216-809-11	METAL CHIP	100 5% 1/10W	R3052	1-216-857-11	METAL CHIP	1M 5% 1/10W
R2167	1-216-864-11	SHORT CHIP	0	R3053	1-216-809-11	METAL CHIP	100 5% 1/10W
R2168	1-216-813-11	METAL CHIP	220 5% 1/10W	R3054	1-216-801-11	METAL CHIP	22 5% 1/10W
R2169	1-216-809-11	METAL CHIP	100 5% 1/10W	R3055	1-216-809-11	METAL CHIP	100 5% 1/10W
R2176	1-216-864-11	SHORT CHIP	0	R3057	1-216-809-11	METAL CHIP	100 5% 1/10W
R2177	1-216-809-11	METAL CHIP	100 5% 1/10W	R3059	1-216-833-11	METAL CHIP	10K 5% 1/10W
R2178	1-216-821-11	METAL CHIP	1K 5% 1/10W	R3060	1-216-833-11	METAL CHIP	10K 5% 1/10W
R2179	1-216-809-11	METAL CHIP	100 5% 1/10W	R3061	1-216-864-11	SHORT CHIP	0
R2183	1-216-809-11	METAL CHIP	100 5% 1/10W	R3062	1-216-809-11	METAL CHIP	100 5% 1/10W
R2184	1-216-809-11	METAL CHIP	100 5% 1/10W	R3063	1-216-821-11	METAL CHIP	1K 5% 1/10W
R2185	1-216-809-11	METAL CHIP	100 5% 1/10W	R3064	1-216-821-11	METAL CHIP	1K 5% 1/10W
R2186	1-216-864-11	SHORT CHIP	0	R3065	1-216-809-11	METAL CHIP	100 5% 1/10W
R2187	1-216-805-11	METAL CHIP	47 5% 1/10W	R3066	1-216-809-11	METAL CHIP	100 5% 1/10W
R2191	1-216-809-11	METAL CHIP	100 5% 1/10W	R3067	1-216-809-11	METAL CHIP	100 5% 1/10W
R2505	1-216-864-11	SHORT CHIP	0	R3068	1-216-809-11	METAL CHIP	100 5% 1/10W
R2705	1-216-821-11	METAL CHIP	1K 5% 1/10W	R3069	1-216-809-11	METAL CHIP	100 5% 1/10W
R2706	1-216-821-11	METAL CHIP	1K 5% 1/10W	R3070	1-216-809-11	METAL CHIP	100 5% 1/10W
R2711	1-208-635-11	METAL CHIP	10 0.5% 1/16W	R3071	1-216-809-11	METAL CHIP	100 5% 1/10W
R2712	1-208-635-11	METAL CHIP	10 0.5% 1/16W	R3072	1-216-809-11	METAL CHIP	100 5% 1/10W
R2713	1-208-635-11	METAL CHIP	10 0.5% 1/16W	R3073	1-216-809-11	METAL CHIP	100 5% 1/10W
R2714	1-208-635-11	METAL CHIP	10 0.5% 1/16W	R3074	1-216-809-11	METAL CHIP	100 5% 1/10W
R2715	1-208-635-11	METAL CHIP	10 0.5% 1/16W	R3075	1-216-809-11	METAL CHIP	100 5% 1/10W
R2716	1-208-635-11	METAL CHIP	10 0.5% 1/16W	R3076	1-216-809-11	METAL CHIP	100 5% 1/10W
R2717	1-208-635-11	METAL CHIP	10 0.5% 1/16W	R3077	1-216-809-11	METAL CHIP	100 5% 1/10W
				R3078	1-216-809-11	METAL CHIP	100 5% 1/10W

MAIN

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description		Remark		
R3079	1-216-809-11	METAL CHIP	100	5%	1/10W	R3301	1-216-809-11	METAL CHIP	100	5%	1/10W
R3080	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3302	1-216-809-11	METAL CHIP	100	5%	1/10W
R3085	1-216-839-11	METAL CHIP	33K	5%	1/10W	R3303	1-216-864-11	SHORT CHIP	0		
R3086	1-216-839-11	METAL CHIP	33K	5%	1/10W	R3304	1-216-864-11	SHORT CHIP	0		
R3087	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3307	1-216-835-11	METAL CHIP	15K	5%	1/10W
R3088	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3315	1-216-864-11	SHORT CHIP	0		
R3089	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3316	1-216-864-11	SHORT CHIP	0		
R3090	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3325	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3091	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3326	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3092	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3327	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3093	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3403	1-216-864-11	SHORT CHIP	0		
R3094	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3404	1-216-864-11	SHORT CHIP	0		
R3095	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3407	1-216-835-11	METAL CHIP	15K	5%	1/10W
R3096	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R3415	1-216-864-11	SHORT CHIP	0		
R3097	1-216-809-11	METAL CHIP	100	5%	1/10W	R3416	1-216-864-11	SHORT CHIP	0		
R3098	1-216-839-11	METAL CHIP	33K	5%	1/10W	R3425	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3099	1-216-839-11	METAL CHIP	33K	5%	1/10W	R3426	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3101	1-216-809-11	METAL CHIP	100	5%	1/10W	R3427	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3102	1-216-809-11	METAL CHIP	100	5%	1/10W	R3501	1-216-809-11	METAL CHIP	100	5%	1/10W
R3103	1-216-864-11	SHORT CHIP	0			R3502	1-216-809-11	METAL CHIP	100	5%	1/10W
R3104	1-216-864-11	SHORT CHIP	0			R3551	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3107	1-216-835-11	METAL CHIP	15K	5%	1/10W	R3552	1-216-837-11	METAL CHIP	22K	5%	1/10W
R3115	1-216-864-11	SHORT CHIP	0			R3553	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3116	1-216-864-11	SHORT CHIP	0			R3554	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3125	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3555	1-216-864-11	SHORT CHIP	0		
R3126	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3556	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R3127	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3557	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3151	1-216-809-11	METAL CHIP	100	5%	1/10W	R3558	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3152	1-216-809-11	METAL CHIP	100	5%	1/10W	R3901	1-216-296-11	SHORT CHIP	0		
R3153	1-216-864-11	SHORT CHIP	0			R3902	1-216-296-11	SHORT CHIP	0		
R3154	1-216-864-11	SHORT CHIP	0			R3905	1-216-296-11	SHORT CHIP	0		
R3157	1-216-835-11	METAL CHIP	15K	5%	1/10W	R3906	1-216-296-11	SHORT CHIP	0		
R3165	1-216-864-11	SHORT CHIP	0			R3907	1-216-864-11	SHORT CHIP	0		
R3166	1-216-864-11	SHORT CHIP	0			R3911	1-216-864-11	SHORT CHIP	0		
R3175	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3912	1-216-864-11	SHORT CHIP	0		
R3176	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3913	1-216-864-11	SHORT CHIP	0		
R3177	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3914	1-216-864-11	SHORT CHIP	0		
R3201	1-216-809-11	METAL CHIP	100	5%	1/10W	R3917	1-216-864-11	SHORT CHIP	0		
R3202	1-216-809-11	METAL CHIP	100	5%	1/10W	R3918	1-216-864-11	SHORT CHIP	0		
R3203	1-216-864-11	SHORT CHIP	0			R3919	1-216-864-11	SHORT CHIP	0		
R3204	1-216-864-11	SHORT CHIP	0			R4002	1-216-864-11	SHORT CHIP	0		
R3207	1-216-835-11	METAL CHIP	15K	5%	1/10W	R4308	1-216-864-11	SHORT CHIP	0	(DZ230/DZ231)	
R3215	1-216-864-11	SHORT CHIP	0			R4501	1-216-801-11	METAL CHIP	22	5%	1/10W
R3216	1-216-864-11	SHORT CHIP	0			R4502	1-216-801-11	METAL CHIP	22	5%	1/10W
R3225	1-216-845-11	METAL CHIP	100K	5%	1/10W	R4510	1-216-805-11	METAL CHIP	47	5%	1/10W
R3226	1-216-845-11	METAL CHIP	100K	5%	1/10W	R4511	1-216-801-11	METAL CHIP	22	5%	1/10W
R3227	1-216-845-11	METAL CHIP	100K	5%	1/10W	R4512	1-216-864-11	SHORT CHIP	0		
R3251	1-216-809-11	METAL CHIP	100	5%	1/10W	R4514	1-216-805-11	METAL CHIP	47	5%	1/10W
R3252	1-216-809-11	METAL CHIP	100	5%	1/10W	R4515	1-216-805-11	METAL CHIP	47	5%	1/10W
R3253	1-216-864-11	SHORT CHIP	0			R4516	1-216-805-11	METAL CHIP	47	5%	1/10W
R3254	1-216-864-11	SHORT CHIP	0			R4517	1-216-864-11	SHORT CHIP	0		
R3257	1-216-835-11	METAL CHIP	15K	5%	1/10W	R4519	1-216-864-11	SHORT CHIP	0		
R3265	1-216-864-11	SHORT CHIP	0			R4521	1-216-864-11	SHORT CHIP	0		
R3266	1-216-864-11	SHORT CHIP	0			R4701	1-216-864-11	SHORT CHIP	0		
R3275	1-216-845-11	METAL CHIP	100K	5%	1/10W	R4702	1-216-864-11	SHORT CHIP	0		
R3276	1-216-845-11	METAL CHIP	100K	5%	1/10W	R4703	1-216-864-11	SHORT CHIP	0		
R3277	1-216-845-11	METAL CHIP	100K	5%	1/10W	R4704	1-216-864-11	SHORT CHIP	0		
						R4705	1-216-864-11	SHORT CHIP	0		

HCD-DZ230/DZ231/HDZ235

MAIN	MS-203	POWER
-------------	---------------	--------------

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R4706	1-216-864-11	SHORT CHIP	0	A-1218-005-A		POWER BOARD, COMPLETE (DZ230/DZ231)	
R4717	1-216-864-11	SHORT CHIP	0 (HDZ235)	A-1228-785-A		POWER BOARD, COMPLETE (HDZ235)	
R4718	1-216-864-11	SHORT CHIP	0				*****
R4805	1-216-801-11	METAL CHIP	22 5% 1/10W	7-685-647-79		SCREW +BVTP 3X10 TYPE2 IT-3	
R9918	1-216-821-11	METAL CHIP	1K 5% 1/10W			< CAPACITOR >	
R9920	1-216-864-11	SHORT CHIP	0				
R9922	1-216-833-11	METAL CHIP	10K 5% 1/10W	△C901	1-165-529-11	MYLAR	0.22uF 10 275V
R9924	1-216-821-11	METAL CHIP	1K 5% 1/10W	△C902	1-165-529-11	MYLAR	0.22uF 10 275V
R9928	1-216-837-11	METAL CHIP	22K 5% 1/10W	△C903	1-114-345-11	ELECT (BLOCK)	1000uF 20% 200V (HDZ235)
R9929	1-216-837-11	METAL CHIP	22K 5% 1/10W	△C903	1-114-346-11	ELECT (BLOCK)	330uF 20% 400V (DZ230/DZ231)
R9934	1-216-833-11	METAL CHIP	10K 5% 1/10W	△C905	1-112-334-91	FILM	0.01uF 5% 400V (HDZ235)
R9935	1-216-864-11	SHORT CHIP	0	△C905	1-112-335-91	FILM	0.0033uF 5% 400V (DZ230/DZ231)
R9941	1-216-838-11	METAL CHIP	27K 5% 1/10W	△C906	1-117-815-11	FILM	1000PF 3% 1.5KV (DZ230/DZ231)
R9945	1-216-813-11	METAL CHIP	220 5% 1/10W	△C907	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (DZ230/DZ231)
				△C907	1-162-965-11	CERAMIC CHIP	0.0015uF 10% 50V (HDZ235)
				△C908	1-104-962-91	ELECT	47uF 20% 35V
RB1103	1-234-371-21	RES, NETWORK	47 (1005X4)	△C909	1-162-960-11	CERAMIC CHIP	220PF 10% 50V
RB1104	1-234-371-21	RES, NETWORK	47 (1005X4)	△C910	1-107-906-11	ELECT	10uF 20% 50V (HDZ235)
RB1105	1-234-371-21	RES, NETWORK	47 (1005X4)	△C910	1-107-907-11	ELECT	22uF 20% 50V (DZ230/DZ231)
RB1106	1-234-371-21	RES, NETWORK	47 (1005X4)	△C911	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
RB1107	1-234-371-21	RES, NETWORK	47 (1005X4)	△C913	1-117-693-11	CERAMIC	100PF 10% 250V
RB1108	1-234-371-21	RES, NETWORK	47 (1005X4)	△C918	1-113-925-11	CERAMIC	0.01uF 20% 250V
RB1109	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)	△C920	1-113-925-11	CERAMIC	0.01uF 20% 250V
RB1110	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)	△C922	1-128-560-11	ELECT	22uF 20% 100V
RB1111	1-234-371-21	RES, NETWORK	47 (1005X4)	△C923	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
RB1112	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)	△C924	1-126-961-11	ELECT	2.2uF 20% 50V
				△C925	1-107-974-81	CERAMIC	47PF 5% 2KV
				△C928	1-117-695-51	CERAMIC	220PF 10% 250V (HDZ235)
				△C929	1-115-339-11	CERAMIC CHIP	0.1uF 10% 50V
TB3901	1-780-453-11	TERMINAL BOARD (SPEAKER) 2P (SPEAKER CENTER/WOOFER)		△C930	1-117-693-11	CERAMIC	100PF 10% 250V
				C932	1-100-924-21	ELECT	2200uF 20% 35V
				C933	1-100-924-21	ELECT	2200uF 20% 35V
X501	1-795-058-21	VIBRATOR, CERAMIC (5MHz)		C934	1-126-953-11	ELECT	2200uF 20% 35V
X1101	1-795-630-11	VIBRATOR, CRYSTAL (27MHz)		C935	1-163-021-91	CERAMIC CHIP	0.01uF 10% 50V
X3051	1-795-660-21	QUARTZ CRYSTAL UNIT (49.152MHz)		C936	1-163-021-91	CERAMIC CHIP	0.01uF 10% 50V
				C937	1-100-756-91	CERAMIC CHIP	0.047uF 50V
				△C938	1-117-696-51	CERAMIC	330PF 10% 250V (HDZ235)
				△C938	1-117-697-51	CERAMIC	470PF 10% 250V (DZ230/DZ231)
				C939	1-136-165-00	FILM	0.1uF 5% 50V
CN001	1-815-412-11	CONNECTOR, FFC/FPC 5P		C940	1-128-947-31	ELECT	3300uF 20% 10V
				C941	1-128-954-11	ELECT	1000uF 20% 25V
				C942	1-126-941-11	ELECT	470uF 20% 25V
S001	1-786-693-11	SWITCH, DETECTION (CHUCK/TRAY DETECT)		C943	1-126-933-11	ELECT	100uF 20% 16V
				C944	1-128-951-21	ELECT	2200uF 20% 16V
				C945	1-126-935-11	ELECT	470uF 20% 16V
				C946	1-128-950-21	ELECT	1000uF 20% 16V
				C947	1-104-658-91	ELECT	100uF 20% 10V

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description		Remark	
C948	1-126-925-91	ELECT	470uF	20%	10V			< TERMINAL BOARD >			
C949	1-104-658-91	ELECT	100uF	20%	10V	EB901	1-537-770-21	TERMINAL BOARD, GROUND			
C951	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	EB902	1-537-770-21	TERMINAL BOARD, GROUND			
C952	1-100-756-91	CERAMIC CHIP	0.047uF		50V	EB903	1-537-770-21	TERMINAL BOARD, GROUND			
C953	1-117-214-11	CERAMIC	0.001uF	10%	2KV	EB904	1-537-770-21	TERMINAL BOARD, GROUND			
C954	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	EB906	1-537-770-21	TERMINAL BOARD, GROUND			
C955	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V			< FUSE HOLDER >			
C958	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	FH901	1-533-217-41	HOLDER, FUSE			
C960	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	FH902	1-533-217-41	HOLDER, FUSE			
△C963	1-117-697-51	CERAMIC	470PF	10%	250V (DZ230/DZ231)			< FUSIBLE RESISTOR >			
△C963	1-117-700-51	CERAMIC	0.0022uF	20%	250V (HDZ235)	△FR901	1-242-949-11	FUSIBLE	0.1	10% 1W (DZ230/DZ231)	
△C964	1-117-697-51	CERAMIC	470PF	10%	250V (DZ230/DZ231)			< IC >			
△C964	1-117-700-51	CERAMIC	0.0022uF	20%	250V (HDZ235)	△IC901	6-707-741-01	IC STR-F6138-LF1352 (HDZ235)			
C967	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	△IC901	6-707-742-01	IC STR-F6168-LF1352 (DZ230/DZ231)			
C968	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	△IC921	6-707-740-01	IC STR-V153			
C969	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	IC931	8-759-648-34	IC TA76431AS (TPE6)			
C970	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	IC941	6-705-308-01	IC SI-3010KM-TL			
C971	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V						
C976	1-126-933-11	ELECT	100uF	20%	16V	IC942	6-705-308-01	IC SI-3010KM-TL			
△C980	1-117-828-11	FILM	3300PF	3%	1.5KV (HDZ235)	IC943	6-705-308-01	IC SI-3010KM-TL			
C981	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V (DZ230/DZ231)	IC951	6-707-743-01	IC TA76L431S (TPE6, Q)			
								< COIL >			
						L931	1-457-438-11	COIL, CHOKE	5.6uH		
						L941	1-414-398-11	INDUCTOR	10uH		
△CN901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P				L942	1-414-398-11	INDUCTOR	10uH		
* CN906	1-564-714-11	PIN, CONNECTOR (SMALL TYPE) 12P				L943	1-414-398-11	INDUCTOR	10uH		
CN907	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P (DZ230/DZ231)				L944	1-414-398-11	INDUCTOR	10uH		
						L945	1-414-398-11	INDUCTOR	10uH		
						L947	1-414-398-11	INDUCTOR	10uH		
						L948	1-414-398-11	INDUCTOR	10uH		
						L951	1-414-398-11	INDUCTOR	10uH		
								< LINE FILTER >			
△D901	8-719-082-57	DIODE D5SBA60F01				△LF901	1-457-054-21	COIL, LINE FILTER			
△D905	8-719-063-74	DIODE D1NL20U-TR2				△LF902	1-457-054-21	COIL, LINE FILTER			
△D906	6-501-193-01	DIODE 1SS355WTE-17						< PHOTO COUPLER >			
△D907	6-501-193-01	DIODE 1SS355WTE-17									
△D908	6-501-193-01	DIODE 1SS355WTE-17				△PC901	6-600-438-01	IC TLP421F (D4-GR)			
△D909	6-501-193-01	DIODE 1SS355WTE-17				△PC902	6-600-438-01	IC TLP421F (D4-GR)			
△D910	6-501-193-01	DIODE 1SS355WTE-17				△PC903	6-600-438-01	IC TLP421F (D4-GR)			
△D913	6-500-241-01	DIODE SARS03						< TRANSISTOR >			
△D914	6-501-193-01	DIODE 1SS355WTE-17				△Q901	8-729-141-88	TRANSISTOR	2SB1116A-TP-LK		
△D915	6-501-174-01	DIODE UDZW-TE17-10B				△Q921	8-729-142-51	TRANSISTOR	2SD1616A-TP-LK		
△D921	6-501-424-01	DIODE ST02D-140				Q943	1-801-806-11	TR DTC144EKA			
△D922	8-719-063-74	DIODE D1NL20U-TR2				Q945	6-550-718-01	TRANSISTOR	RSR025N03TL		
△D923	6-501-174-01	DIODE UDZW-TE17-10B				Q947	1-801-806-11	TR DTC144EKA			
△D924	6-501-183-01	DIODE UDZW-TE17-24B						< RESISTOR >			
△D925	6-501-167-01	DIODE UDZW-TE17-5.1B									
△D926	6-501-174-01	DIODE UDZW-TE17-10B				△R901	1-219-759-11	METAL	1M	5%	1/2W
D931	6-501-849-01	DIODE FMX-22SL				△R903	1-215-926-00	METAL OXIDE	33K	5%	3W F
D932	6-501-167-01	DIODE UDZW-TE17-5.1B				△R903	1-215-929-11	METAL OXIDE	100K	5%	3W F (HDZ235) (DZ230/DZ231)
D941	6-500-288-11	DIODE EK19LF-F7									
D942	8-719-080-53	DIODE RK36LF-B3									
D943	8-719-080-53	DIODE RK36LF-B3									
D944	6-500-288-11	DIODE EK19LF-F7									
D945	6-501-181-01	DIODE UDZW-TE17-20B									

POWER	P-SW	SPEAKER
-------	------	---------

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description		Remark
△ R904	1-215-926-00	METAL OXIDE	33K	5% (HDZ235)	R966	1-216-821-11	METAL CHIP	1K	5% 1/10W
△ R904	1-215-929-11	METAL OXIDE	100K	5% (DZ230/DZ231)	R967	1-216-821-11	METAL CHIP	1K	5% 1/10W
△ R905	1-216-797-11	METAL CHIP	10	5% 1/10W	R968	1-216-821-11	METAL CHIP	1K	5% 1/10W
△ R906	1-216-827-11	METAL CHIP	3.3K	5% 1/10W	R969	1-216-821-11	METAL CHIP	1K	5% 1/10W
△ R907	1-216-833-11	METAL CHIP	10K	5% 1/10W	R971	1-216-864-11	SHORT CHIP	0	
△ R908	1-260-105-11	CARBON	3.3K	5% 1/2W	R972	1-216-833-11	METAL CHIP	10K	5% 1/10W
△ R909	1-216-845-11	METAL CHIP	100K	5% 1/10W	R974	1-216-827-11	METAL CHIP	3.3K	5% 1/10W
△ R910	1-216-825-11	METAL CHIP	2.2K	5% 1/10W	R979	1-216-864-11	SHORT CHIP	0 (DZ230/DZ231)	
△ R911	1-216-813-11	METAL CHIP	220	5% 1/10W			< TRANSFORMER >		
△ R912	1-216-361-61	METAL OXIDE	0.22	5% (HDZ235)	T901	1-443-649-11	TRANSFORMER, CONVERTER (HDZ235)		
△ R912	1-216-363-00	METAL OXIDE	0.33	5% (DZ230/DZ231)	T901	1-443-874-11	TRANSFORMER, CONVERTER (DZ230/DZ231)		
△ R913	1-216-361-61	METAL OXIDE	0.22	5% (HDZ235)	T902	1-443-650-11	TRANSFORMER, CONVERTER		
△ R914	1-220-891-11	METAL	0.1	10% (DZ230/DZ231)			< THERMISTOR >		
△ R914	1-243-669-11	METAL	0.05	5% (HDZ235)	△ TH901	1-805-841-21	THERMISTOR, NTC 3.0 (HDZ235)		
△ R919	1-216-836-11	METAL CHIP	18K	5% 1/10W	△ TH901	1-805-842-21	THERMISTOR, NTC 6.0 (DZ230/DZ231)		
△ R922	1-216-793-11	METAL CHIP	4.7	5% 1/10W			< VARISTOR >		
△ R923	1-216-829-11	METAL CHIP	4.7K	5% 1/10W	△ VDR901	1-805-482-11	VARISTOR		
△ R925	1-216-797-11	METAL CHIP	10	5% 1/10W			P-SW BOARD		
△ R926	1-216-855-11	METAL CHIP	680K	5% 1/10W			*****		
△ R927	1-216-348-00	METAL OXIDE	0.82	5% (HDZ235)			< CAPACITOR >		
△ R927	1-216-349-00	METAL OXIDE	1	5% (DZ230/DZ231)	C851	1-162-927-11	CERAMIC CHIP	100PF	5% 50V
△ R929	1-246-106-11	METAL OXIDE	2.2	5% 1/2W F			< SWITCH >		
R931	1-218-859-11	METAL CHIP	3.3K	0.5% 1/10W			S801	1-762-875-21	SWITCH, KEYBOARD (I/O)
R932	1-218-883-11	METAL CHIP	33K	0.5% 1/10W					
R933	1-216-829-11	METAL CHIP	4.7K	5% 1/10W					
R934	1-216-821-11	METAL CHIP	1K	5% 1/10W			SPEAKER BOARD		
R935	1-216-821-11	METAL CHIP	1K	5% 1/10W			*****		
R936	1-216-853-11	METAL CHIP	470K	5% 1/10W			< CAPACITOR >		
R937	1-216-833-11	METAL CHIP	10K	5% 1/10W					
R938	1-216-821-11	METAL CHIP	1K	5% 1/10W	C301	1-163-021-91	CERAMIC CHIP	0.01uF	10% 50V
R939	1-218-859-11	METAL CHIP	3.3K	0.5% 1/10W	C302	1-163-021-91	CERAMIC CHIP	0.01uF	10% 50V
R940	1-216-833-11	METAL CHIP	10K	5% 1/10W	C303	1-163-021-91	CERAMIC CHIP	0.01uF	10% 50V
R941	1-216-845-11	METAL CHIP	100K	5% 1/10W	C304	1-163-021-91	CERAMIC CHIP	0.01uF	10% 50V
R942	1-216-833-11	METAL CHIP	10K	5% 1/10W	C305	1-163-021-91	CERAMIC CHIP	0.01uF	10% 50V
R943	1-216-839-11	METAL CHIP	33K	5% 1/10W	C306	1-163-021-91	CERAMIC CHIP	0.01uF	10% 50V
R945	1-216-833-11	METAL CHIP	10K	5% 1/10W	C307	1-163-021-91	CERAMIC CHIP	0.01uF	10% 50V
R946	1-216-837-11	METAL CHIP	22K	5% 1/10W	C308	1-163-021-91	CERAMIC CHIP	0.01uF	10% 50V
R948	1-216-833-11	METAL CHIP	10K	5% 1/10W	C309	1-162-964-11	CERAMIC CHIP	0.001uF	10% 50V
R949	1-216-821-11	METAL CHIP	1K	5% 1/10W	C310	1-162-964-11	CERAMIC CHIP	0.001uF	10% 50V
R951	1-218-831-11	METAL CHIP	220	0.5% 1/10W	C311	1-162-964-11	CERAMIC CHIP	0.001uF	10% 50V
R952	1-218-855-11	METAL CHIP	2.2K	0.5% 1/10W	C312	1-162-964-11	CERAMIC CHIP	0.001uF	10% 50V
R953	1-218-861-11	METAL CHIP	3.9K	0.5% 1/10W	C313	1-162-964-11	CERAMIC CHIP	0.001uF	10% 50V
R954	1-216-837-11	METAL CHIP	22K	5% 1/10W	C314	1-162-964-11	CERAMIC CHIP	0.001uF	10% 50V
R955	1-216-817-11	METAL CHIP	470	5% 1/10W	C315	1-162-964-11	CERAMIC CHIP	0.001uF	10% 50V
R956	1-216-821-11	METAL CHIP	1K	5% 1/10W	C316	1-162-964-11	CERAMIC CHIP	0.001uF	10% 50V
R957	1-216-841-11	METAL CHIP	47K	5% 1/10W			< CONNECTOR >		
R958	1-216-821-11	METAL CHIP	1K	5% 1/10W	* CN303	1-564-523-11	PLUG, CONNECTOR 8P		
R960	1-216-823-11	METAL CHIP	1.5K	5% 1/10W					
R962	1-218-867-11	METAL CHIP	6.8K	0.5% 1/10W					
R965	1-218-865-11	METAL CHIP	5.6K	0.5% 1/10W					

SPEAKER

Ref. No.	Part No.	Description	Remark
< TERMINAL >			

TB301 1-780-454-11 TERMINAL BOARD (SPEAKER) 4P
 (SPEAKER FRONT R/FRONT L/SUR R/SUR L)

MISCELLANEOUS

5	1-828-307-51	WIRE (FLAT TYPE)(9 CORE) (DZ230/DZ231)
7	1-828-952-51	WIRE (FLAT TYPE)(9 CORE) (HDZ235)
7	1-828-962-51	WIRE (FLAT TYPE)(11 CORE) (DZ230/DZ231)
8	1-693-724-11	TUNER (FM/AM) (DZ230/DZ231)
8	1-693-731-11	TUNER (FM/AM) (HDZ235)
59	1-828-325-51	WIRE (FLAT TYPE)(13 CORE)
61	1-828-374-51	WIRE (FLAT TYPE)(21 CORE)
102	1-828-292-51	WIRE (FLAT TYPE)(5 CORE)
103	1-828-339-51	WIRE (FLAT TYPE)(15 CORE) (HDZ235)
103	1-828-369-51	WIRE (FLAT TYPE)(21 CORE) (DZ230/DZ231)
104	1-828-317-51	WIRE (FLAT TYPE)(11 CORE) (HDZ235)
104	1-828-327-51	WIRE (FLAT TYPE)(13 CORE) (DZ230/DZ231)
109	1-787-331-11	FAN, D.C.
△110	1-751-520-31	CORD, POWER (UK)
△110	1-830-188-11	CORD, POWER (AEP)
△110	1-830-190-11	CORD, POWER (HDZ235)
△507	8-820-321-05	OPTICAL PICK UP ASSY KHM-313CAA/C2RP
508	1-828-773-51	WIRE (FLAT TYPE)(24 CORE)
△F901	1-533-311-12	FUSE, GLASS CYLINDRICAL (DIA.5) (8A/125V) <small>(HDZ235)</small>
△F901	1-576-233-51	FUSE (H.B.C.) (T6.3AH/250V)(DZ230/DZ231)

