

SERVICE MANUAL

FE-1 CHASSIS

<i>MODEL</i>	<i>COMMANDER</i>	<i>DEST</i>	<i>CHASSIS NO.</i>	<i>MODEL</i>	<i>COMMANDER</i>	<i>DEST</i>	<i>CHASSIS NO.</i>
KV-29X5A	RM-883	Italian	SCC-Q06A-A	KV-29X5K	RM-883	OIRT	SCC-Q03A-A
KV-29X5B	RM-883	French	SCC-Q02A-A	KV-29X5L	RM-883	Irish	SCC-Q07A-A
KV-29X5D	RM-883	AEP	SCC-Q04A-A	KV-29X5R	RM-883	OIRT	SCC-Q03B-A
KV-29X5E	RM-883	Spanish	SCC-Q05A-A	KV-29X5U	RM-883	UK	SCC-Q01A-A



TRINITRON® COLOR TV
SONY®



KV-29X5





ITEM MODEL	Television System	Stereo System	Channel Coverage	Color System
Italian	B/G/H	GERMAN Stereo	ITALIA VHF : A-H2 (C) UHF : 21-69 PAL B/G/H VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10	PAL NTSC4.43, NTSC3.58 (VIDEO IN)
French	B/G/H, D/K, L, I	GERMAN/NICAM Stereo	L VHF : F02-F10 UHF : F21-F60 CABLE : B-Q B/G/H VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10 ITALIA VHF : A-H2 (C) UHF : 21-69 I UHF : B21-B69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
AEP	B/G/H, D/K	GERMAN Stereo	PAL B/G/H VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10 ITALIA VHF : A-H2 (C) UHF : 21-69 D/K VHF : R01-R12 UHF : R21-R69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
Spanish	B/G/H, D/K	GERMAN/NICAM Stereo	PAL B/G VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 CABLE TV (2) : S01-S05, M1-M10, U1-U10 ITALIA VHF : A-H2 (C) UHF : 21-69 D/K VHF : R01-R12 UHF : R21-R69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
OIRT	B/G/H, D/K	KV-29X5K GERMAN/NICAM Stereo KV-29X5R GERMAN Stereo	B/G/H VHF : E2-E12 UHF : E21-E69 CABLE TV (1) : S1-S41 D/K VHF : R01-R12 UHF : R21-R69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
Irish	I	NICAM Stereo	VHF : A-H2 VHF : E02-E12 CABLE CHANNELS S1-S20 HYPERBAND S21-S46	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
UK	I	NICAM Stereo	UHF : B21-B69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)

MODEL	29X5A	29X5B	29X5D	29X5E	29X5K	29X5L	29X5R	29X5U
Power Consumption	100.1 W	108 W	108 W	108 W	108 W	158.5 W	108 W	158.5 W

[PICTURE TUBE]




Super Trinitron
Approx. 72cm (29 inches)
(Approx. 68 cm picture measured diagonally)
110 degree deflection

[FRONT]

-  Video input - phono jack
-  Audio inputs - phono jacks
-  S Video input 4 pin DIN
-  Headphone jacks : stereo minijack

Input/Output Terminals

[REAR]

-  21-pin Euro connector (CENELEC standard).
 - Inputs for Audio and Video signals.
 - Inputs for RGB.
 - Outputs of TV Video and Audio signals.
-  21-pin Euro connector.
 - inputs for Audio and Video signals.
 - inputs for S Video.
 - outputs for Audio and Video signals (selectable).
-  Phono Jack
 - Outputs for Audio Signals

- Sound output 2 x 20W (Music Power)
- Power requirements 220 - 240V
- Dimensions Approx 676x557x525mm
- Weight Approx 43.5kg
- Supplied accessories RM-883 Remote Commander (1)
IEC designated R6 battery (1)
- Other features NICAM*, FASTEXT, TOPTXT
*(KV-29X5B/29X5E/29X5L/29X5U only)


[RM-883]

- Remote control system infrared control
- Power requirements 1.5V dc
1 battery IEC designation R6 (size AA)
- Dimensions Approx 65x225x21mm (w/h/d)
- Weight Approx 157g (Not including battery)

Design and specifications are subject to change without notice.


Model Name	KV-29X5A	KV-29X5B	KV-29X5D	KV-29X5E	KV-29X5K	KV-29X5L	KV-29X5R	KV-29X5U
Item								
Pal Comb	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
PIP	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
RGB Priority	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
Woofers Box	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Scart 1	ON	ON	ON	ON	ON	ON	ON	ON
Scart 2	ON	ON	ON	ON	ON	ON	ON	ON
Front in (3)	ON	ON	ON	ON	ON	ON	ON	ON
Scart 4	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Projector	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
AKB in 16:9 mode	ON	ON	ON	ON	ON	ON	ON	ON
Norm B/G	ON	ON	ON	ON	ON	OFF	ON	OFF
Norm I	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF
Norm D/K	OFF	ON	ON	ON	ON	OFF	ON	OFF
Norm AUS	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Norm L	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
Norm SAT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Norm M	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Teletext	ON	ON	ON	ON	ON	ON	ON	ON
Nicam Stereo	OFF	ON	OFF	ON	ON	ON	OFF	ON
Language Preset	Italian	French	German	Spanish	OIRT	English	OIRT	English

WARNING (KV-29X5L / KV-29X5U only)

The flexible mains lead is supplied connected to a **B.S. 1363** fused plug having a fuse of **5 AMP** capacity. Should the fuse need to be replaced, use a **5 AMP FUSE** approved by **ASTA** to **BS 1362**, ie one that carries the  mark.



IF THE PLUG SUPPLIED WITH THIS APPLIANCE IS NOT SUITABLE FOR THE OUTLET SOCKETS IN YOUR HOME, IT SHOULD BE CUT OFF AND AN APPROPRIATE PLUG FITTED. THE PLUG SEVERED FROM THE MAINS LEAD MUST BE DESTROYED AS A PLUG WITH BARED WIRES IS DANGEROUS IF ENGAGED IN A LIVE OUTLET SOCKET.

When an alternative type of plug is used it should be fitted with a **5 AMP FUSE**, otherwise the circuit should be protected by a **5 AMP FUSE** at the distribution board.

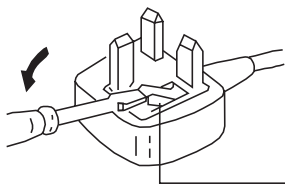

How to replace the fuse.
Open the fuse compartment with a screwdriver blade and replace the fuse.

21 pin connector (→ 1, ← 2 / → S 2)

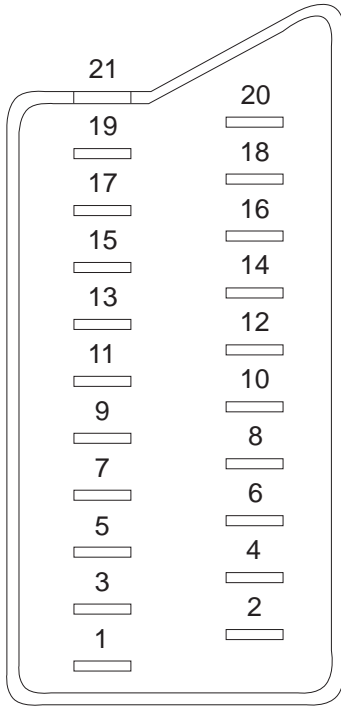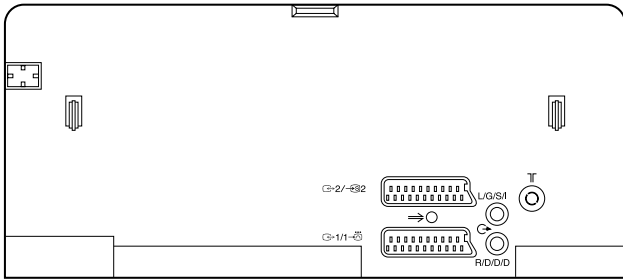

Pin No	1	2	4	Signal	Signal level
1	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedance : Less than 1kohm*
2	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedance : More than 10kohm*
3	○	○	○	Audio output A (left)	Standard level : 0.5V rms Output impedance : Less than 1kohm*
4	○	○	○	Ground (audio)	
5	○	○	○	Ground (blue)	
6	○	○	○	Audio input A (left)	Standard level : 0.5V rms Output impedance : More than 10kohm*
7	○	●	●	Blue input	0.7 +/- 3dB, 75 ohms positive
8	○	○	○	Function select (AV control)	High state (9.5-12V) : Part mode Low state (0-2V) : TV mode Input impedance : More than 10K ohms Input capacitance : Less than 2nF
9	○	○	○	Ground (green)	
10	○	○	○	Open	
11	○	●	●	Green	Green signal : 0.7 +/- 3dB, 75 ohms, positive
12	○	○	○	Open	
13	○	○	○	Ground (red)	
14	○	○	○	Ground (blanking)	
15	○	-	-	Red input	0.7 +/- 3dB, 75 ohms, positive
	-	○	○	(S signal Chroma input)	0.3 +/- 3dB, 75 ohms, positive
16	○	●	●	Blanking input (Ys signal)	High state (1-3V) Low state (0-0.4V) Input impedance : 75 ohms
17	○	○	○	Ground (video output)	
18	○	○	○	Ground (video input)	
19	○	○	○	Video output	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
20	○	-	-	Video input	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
	-	○	○	Video input Y (S signal)	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
21	○	○	○	Common ground (plug, shield)	

○ Connected ● Not Connected (open) * at 20Hz - 20kHz

Pin No	Signal	Signal level
1	Ground	
2	Ground	
3	Y (S signal) input	1V +/- 3dB 75 ohm, positive Sync 0.3V -3/+10dB
4	C (S signal) input	0.3V +/- 3dB 75 ohm, positive Sync

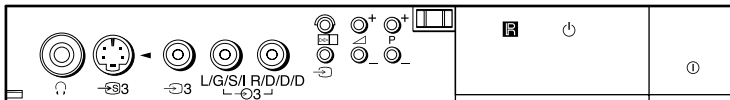


TABLE OF CONTENTS

<i>Section</i>	<i>Title</i>	<i>Page</i>	<i>Section</i>	<i>Title</i>	<i>Page</i>
1. GENERAL			5. DIAGRAMS		
	Overview of TV buttons	6	5-1.	Block Diagram	25
	Adjusting the Picture and Sound	7	5-2.	Circuit Board Location	32
	Using the Sleep Timer	8	5-3.	Schematic Diagrams and Printed Wiring Boards	32
	Viewing Teletext	8		* S1 Board	34
	Exchanging Programme Positions	9		* A Board	41
	Manually Tuning the TV	9		* VMBoard	46
	Fine-Tuning Channels	10		* C Board	49
	Using Optional Equipment	10		* H1 Board	51
	Troubleshooting/Specifications	11	5-4.	Semiconductors	53
			5-5.	IC Blocks	55
2. DISASSEMBLY			6. EXPLODED VIEWS		
2-1.	Rear Cover Removal	12	6-1.	Chassis	56
2-2.	Chassis Assy Removal	12	6-2.	Picture Tube	57
2-3.	Service Position	12	7. ELECTRICAL PARTS LIST		58
2-4.	S1 Board Removal	13			
2-5.	H1 Board Removal	13			
2-6.	Picture Tube Removal	14			
2-7.	Removal and Replacement of the Main - Bracket Bottom Plates	15			
3. SET-UP ADJUSTMENTS					
3-1.	Beam Landing	16			
3-2.	Convergence	17			
3-3.	Screen [G2] White Balance	19			
3-4.	Focus	19			
4. CIRCUIT ADJUSTMENTS					
4-1.	Electrical Adjustments	20			
4-2.	Test Mode 2	23			
4-3.	FE-1 Self Diagnostic Software	24			

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR THE CARBON PAINTED ON THE CRT, AFTER REMOVAL OF THE ANODE CAP

WARNING !!

AN ISOLATING TRANSFORMER SHOULD BE USED DURING ANY SERVICE WORK TO AVOID POSSIBLE SHOCK HAZARD DUE TO LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARKED \triangle ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION !!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÂSSIS SOUS TENTION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE. LE CHÂSSIS DE CE RÉCEPTEUR EST DIRECTMENT RACCORDÉ À L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ !!


LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MARQUE \triangle SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIÈCES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SÈCURITÉ DU FONCTIONNEMENT, NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÈCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÈMENTS PUBLIÉS PAR SONY.

SECTION 1 GENERAL


The operating instructions mentioned here are partial abstracts from the Operating Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

Basic TV Features

Overview of TV Buttons

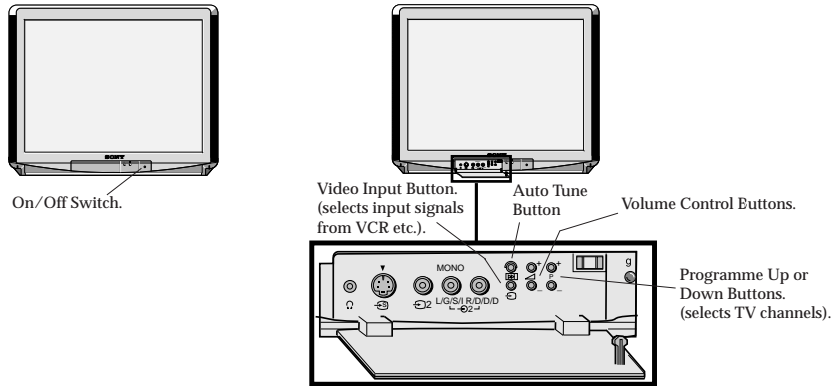


Overview of Remote Control Buttons

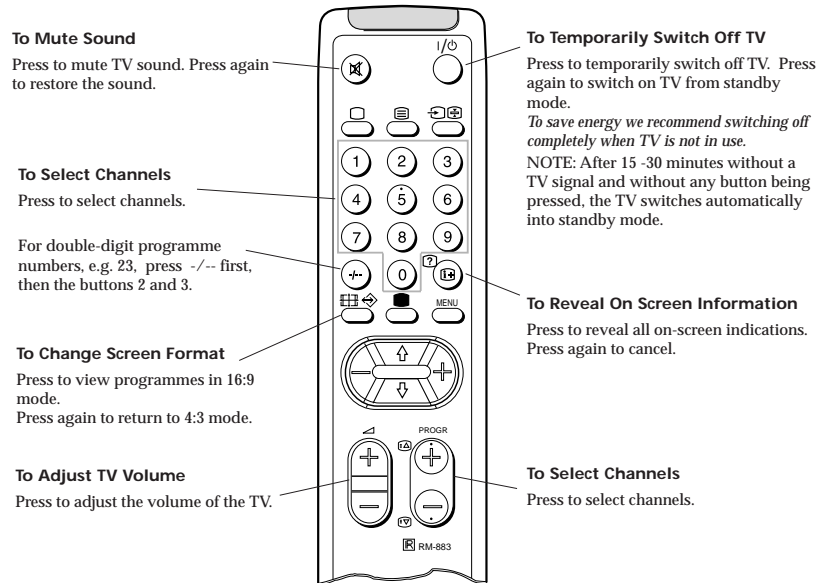

Additional TV Features

Using Select Mode

You can select different preset picture and sound modes.

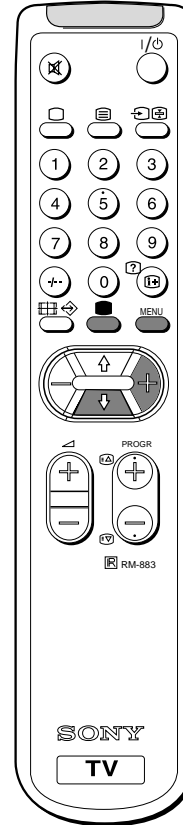


- 1 Press the MENU button on the remote control to display the menu on the TV screen.
- 2 With the cursor pointing at the symbol on the TV screen as shown, press the yellow button.
- 3 Press the blue button to select the desired mode:
 - reverts to settings made in "Adjusting the Picture and Sound" sections of the manual
 - for films
 - for programmes broadcast live
- 4 Press the MENU button to remove the menu display from the TV screen.

Note: The mode selected in step 3 is now stored.


Changing Modes Quickly

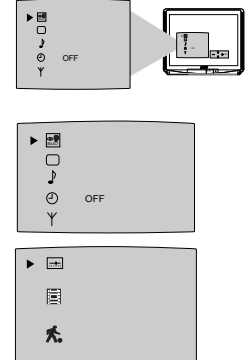



- 1 Press the button on the remote control to display the three different modes.
- 2 Press the button again to select your desired mode.





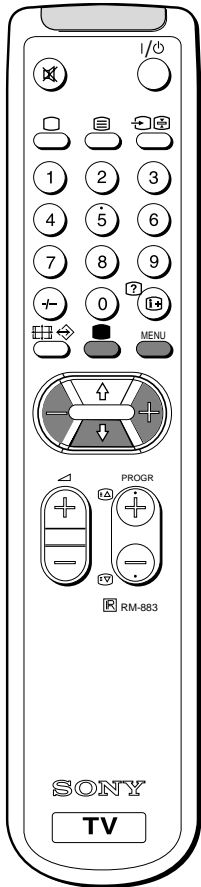






Adjusting the Picture

Although the picture is adjusted at the factory, you can modify it to suit your own requirement.




- 1 Press the  button on the remote control to display the three different modes on the TV screen.
- 2 Press the  button to highlight the user mode symbol  as shown.
- 3 Press the MENU button to display the menu on the TV screen.
- 4 Press the blue button on the control to select the  symbol on the TV screen then press the yellow button.
- 5 Press the blue button to select the item you wish to change (see below).
- 6 Press the red or yellow button to alter the selected item.
- 7 Press the MENU button to remove the menu display from the TV screen.



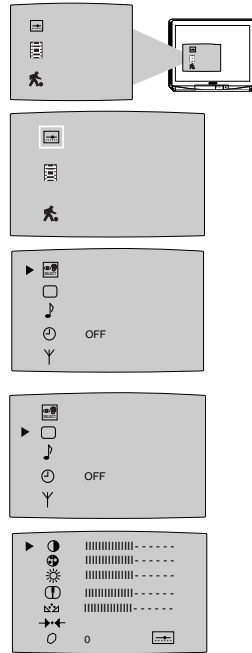

Symbol	Item
	• Contrast
	• Colour
	• Brightness
	• Sharpness
	• Hue control (only for NTSC video signals)
	• Reset - resets to factory preset picture level
	• Picture rotation - adjusts picture tilt (only for KV-29X5U model)
	• Represents the mode selected in the "Using Select Mode" section.



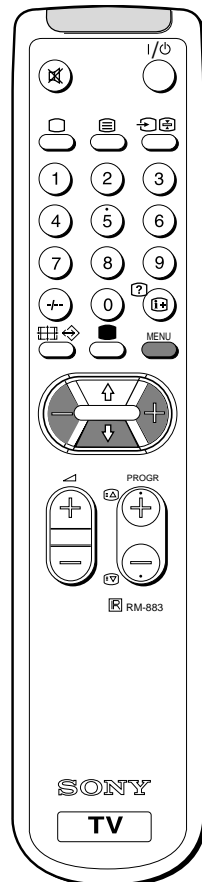






Adjusting the Sound

Although the sound is adjusted at the factory, you can modify it to suit your own requirement.




- 1 Press the  button on the remote control to display the three different modes on the TV screen.
- 2 Press the  button to highlight the user mode symbol  as shown.
- 3 Press the MENU button to display the menu on the TV screen.
- 4 Press the blue button to select the  symbol on the TV screen then press the yellow button.
- 5 Press the blue button to select the item you wish to change (see below).
- 6 Press the red or yellow button to alter the selected item.
- 7 Press the MENU button to remove the menu display from the TV screen.

Symbol	Item
	• Mono sound/Stereo sound A: Channel 1 sound/B: Channel 2 sound (to select your desired language from a dual sound broadcast)
DSP	• On/Off (digital sound processor)
	• Treble
	• Bass
	• Balance
	• Reset (resets to factory preset sound level)
	• Represents the mode selected in the "Using Select Mode" section of the manual.

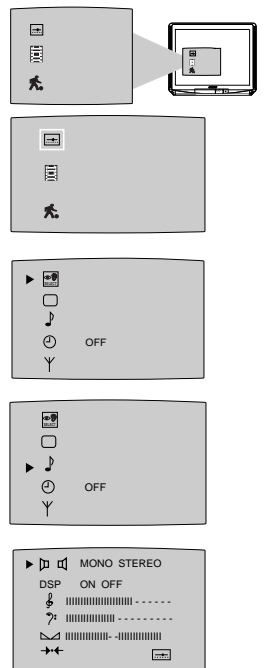



Using the Sleep Timer


The TV may be set to switch automatically to the standby mode after a length of time chosen by you. You may set the time in 15 minute steps up to 4 hours.

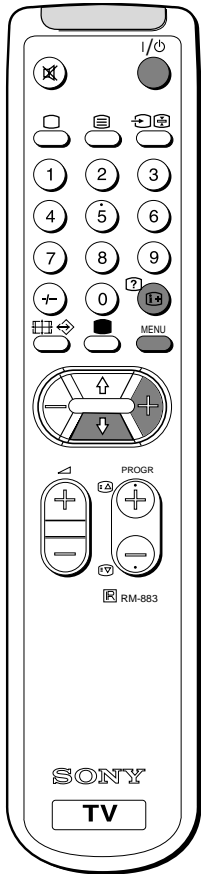


1 Press the MENU button on the remote control to display the menu on the TV screen.

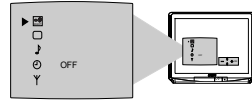


2 Press the blue button on the control to select the  symbol on the TV screen, then press the yellow button.

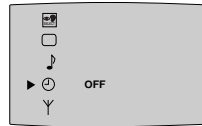

3 Press the yellow button repeatedly until the required amount of time delay appears on the screen.


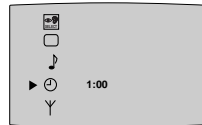


4 Once the time delay has been selected, press the MENU button to remove the on-screen display.

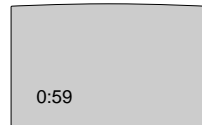


One minute before standby, the display shown appears on the screen.

Notes:

- When watching TV, press the  button to display time remaining.
- To return to normal operation from standby mode, press the .


Viewing Teletext

Teletext is an information service transmitted by most TV stations.

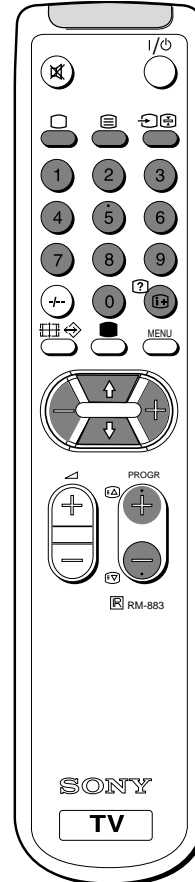

Selecting Teletext


1 Press a number button on the remote control to select the channel which carries the teletext service you wish to receive.

2 Press the  button on the remote control to switch on teletext.

3 Input three digits for the page number using the numbered buttons on the control.



4 Press the  button to switch off teletext.


Note: Teletext errors may occur if the broadcasting signals are weak.

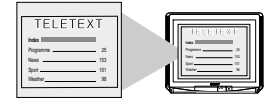

Using Other Teletext Functions

To Superimpose Teletext on to the TV



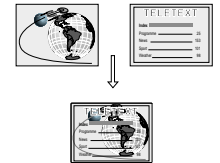Press  once in teletext mode or twice in TV mode to superimpose teletext on to the TV screen. Press  again to cancel teletext mode.




To Move to Next or Preceding Page

Press PROGR +/- on the remote control to select the previous or next page.

To Freeze a Teletext Page

Press  on the control to freeze the page. Press  again to cancel the freeze.

Revealing concealed information (eg: answers to a quiz).


Press  to reveal information. Press again to conceal the information.

Using colour buttons to access pages (Fastext)







When the colour coded menu appears at the bottom of a page, press the colour button (green, red, yellow or blue) to access the corresponding page.

Exchanging Programme Positions

After tuning you may wish to change the order in which the channels appear on the TV. You may wish for example to exchange the channel on programme number 8 with the channel on programme number 4.

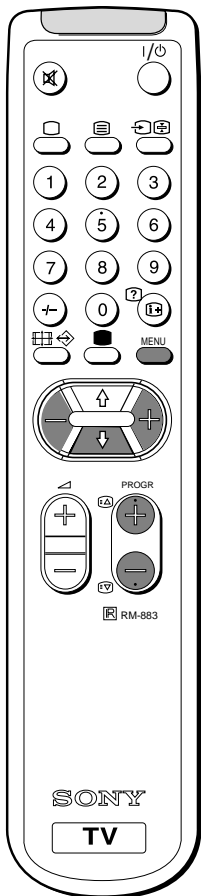


- 1 Press the MENU button on the remote control.
- 2 Press the blue button on the control to select Υ on the TV screen, then press the yellow button.
- 3 Press the blue button to select Υ then press the yellow button.
- 4 With the cursor pointing at PROGR on the TV screen as shown, press PROGR + or - button until the channel you wish to rearrange appears on screen, then press the blue button once.
- 5 Press the red or yellow button to select the new programme number (e.g. PROGR 04) for your selected channel.
- 6 Press the blue button to select Υ then press the yellow button to exchange the channels.
- 7 Repeat steps 4 to 6 if you wish to change the order of the other channels on your TV, then press MENU to return to normal TV screen.
- 8 Press the PROGR+/- button to view your selected channels on their new programme numbers.

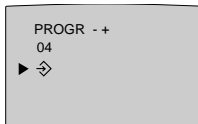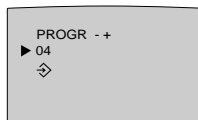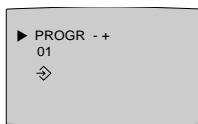
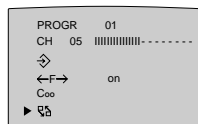
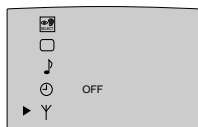
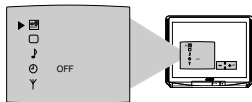


Manually Tuning the TV

You have already tuned the TV to receive all available channels using the 'Automatically Tuning the TV' procedure at the start of this manual. You can however carry out this operation manually using the following instructions.

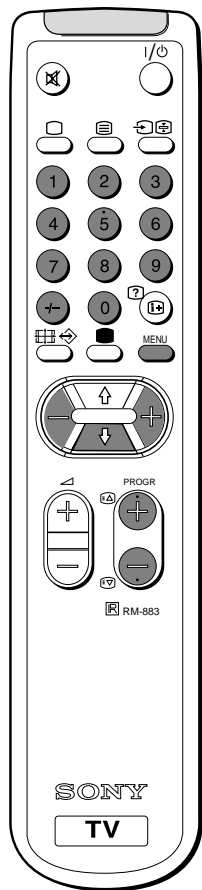


- 1 Press the MENU button on the remote control to display the menu on the TV screen.
- 2 Press the blue button to select the Υ symbol on the TV screen then press the yellow button.
- 3 With the cursor pointing at PROGR on the TV screen as shown, press PROGR + or - button on the remote control to allocate a programme number to the channel (eg PROGR 01). For double digit numbers e.g. 55, press the -/-- button on the remote control then the corresponding numbered buttons.
- 4 Press the blue button to select the tuning bar scale then press the yellow or red button once to start the channel search. (Yellow to search up the scale or red to search down). When a channel is found it appears on the TV screen.
- 5 If you do not wish to store this channel on the programme number you selected, press the yellow or red button to continue searching for the desired channel.
- 6 If this is the channel you wish to store, press the blue button to select the Υ symbol on the screen then press the yellow button to store.
- 7 Repeat steps 3 to 6 if you wish to store more channels then press the MENU button to remove the menu from the TV screen.

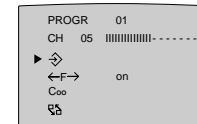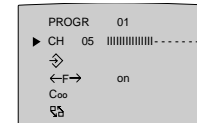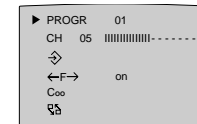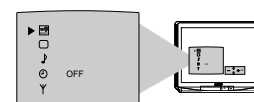

Fine-Tuning Channels

If a channel is slightly off tune, you can use this fine tune procedure to obtain a better picture reception.

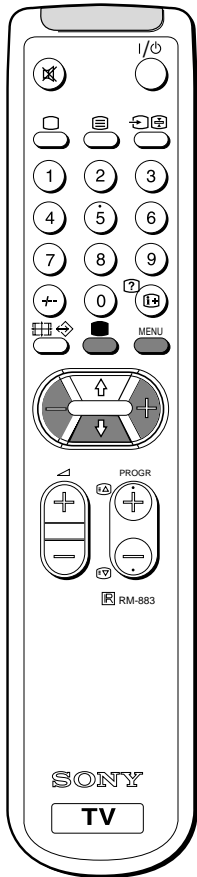





1 With the channel you wish to fine-tune on the screen, press the MENU button on the remote control. The menu display appears on the TV screen.

2 Press the blue button on the remote control to select the Y symbol on the TV screen then press the yellow button.

3 Press the blue button to select the ←F→ symbol on the TV screen then press the red or yellow button to adjust the tuning.

4 Press the blue button to select the ⇄ symbol on the TV screen then press the yellow button to store.

5 Press the MENU button to remove the menu from the TV screen.

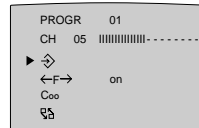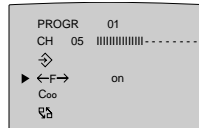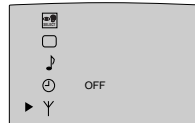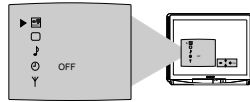

Using Optional Equipment

You can connect optional audio or video equipment to your TV, such as a VCR, a camcorder or video games as shown.

Select and View the Input Signal

- 1 Connect your equipment to the designated TV socket.
- 2 Press the ⇄ button repeatedly on your remote control until the correct input symbol appears on the TV screen.


Symbol Input signals

- ⇄1 • Audio/video input signal through the Euro AV connector **F**
- ⇄2 • RGB input signal through the Euro AV connector **F**
- ⇄2 • Audio/video input signal through the Euro AV connector **E** or the phono sockets **C** and **D**
- ⇄3 • S video input signal through the socket **B**.

3 Switch on the connected equipment.

4 To return to normal TV picture, press the □ button on the remote control.

Note: To avoid picture distortion, do not connect equipment to the **B**, **C** or **E** connectors at the same time.

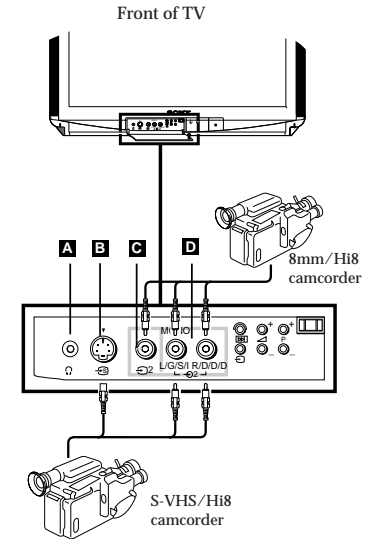

Additional Information

Connecting a VCR

We recommend you tune in the VCR signal to TV programme number '0' using the 'Manually Tuning in the TV' section of this instruction manual.

Connecting Headphones


Plug in your headphones to the socket **A** on the front of the TV set.

Connecting Decoders

Plug in decoders to the socket **F** on the rear of the TV.







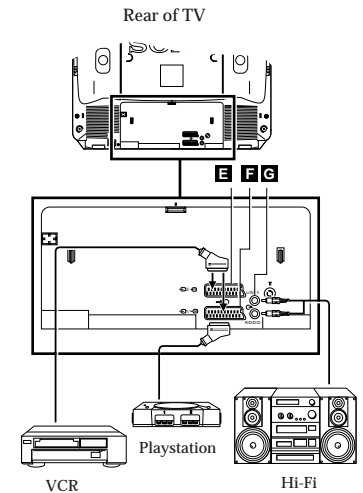




Connecting to External Audio Equipment

Plug in your Hi-Fi equipment to the **G** sockets on the rear of the TV if you wish to amplify the audio output from the TV.



Troubleshooting

Here are some simple solutions to problems which may affect the picture and sound.

Problem	Solution
No picture (screen is dark), no sound	<ul style="list-style-type: none"> Plug the TV in. Press the  button on the front of TV. If the  indicator is on press  button or a programme number button on the remote control. Check the aerial connection. Check that the selected video source is on. Turn the TV off for 3 or 4 seconds and then turn it on again using the  button on the front of the TV.
Poor or no picture (screen is dark), but good sound.	<ul style="list-style-type: none"> Using the MENU system, select the Picture Adjustment display. Adjust the brightness, picture and colour balance levels. From the Picture Adjustment display select  to return to the factory settings.
Poor picture quality when watching a RGB video source.	<ul style="list-style-type: none"> Press the  button repeatedly on the remote control until the RGB symbol  is displayed on the screen.
Good picture, no sound	<ul style="list-style-type: none"> Press the  +/- button on the remote control. If  is displayed on the screen, press the  button on the remote control.
No colour on colour programmes	<ul style="list-style-type: none"> Using the MENU system, select the Picture Adjustment display. Adjust the colour balance. From the Picture Adjustment display select  to return to the factory settings.
Distorted picture when changing programmes or selecting teletext	<ul style="list-style-type: none"> Turn off any equipment connected to the 21 pin Euro connector on the rear of the TV.
Remote control does not function	<ul style="list-style-type: none"> Replace the batteries.

- If you continue to have these problems, have your TV serviced by qualified personnel.
- NEVER open the casing yourself.

Specifications

TV system

I

Colour system

PAL

NTSC 3.58, 4.43 (only Video In)

Channel coverage

UHF: B21-B69

Picture tube

KV-25X5U:

Super Trinitron

Approx. 63 cm (25 inches) (Approx. 59 cm picture measured diagonally),

100° deflection

KV-29X5U:

Super Trinitron

Approx. 72 cm (29 inches) (Approx. 68 cm picture measured diagonally),

100° deflection

Inputs

• Rear Terminals


 21-pin Euro connector (CENELEC standard) including audio/video input, RGB input, TV audio/video output

 21-pin Euro connector (CENELEC standard) including audio/video input, S-video input, Monitor audio/video output

• Front Terminals


 video input - phono jack

 audio inputs - phono jacks

 S video input - 4 pin DIN

Outputs

 Headphones jack - minijack stereo

 Audio outputs (variable) - phono jacks

Sound output:

2 x 10 W (RMS)

Power consumption

KV-25X5U: 139 W

KV-29X5U: 158.5 W

Standby Power consumption

1 W

Dimensions (wxhxd)

KV-25X5U: Approx. 593 x 502 x 506 mm

KV-29X5U: Approx. 676 x 557 x 525 mm

Weight

KV-25X5U: Approx. 33.2 kg

KV-29X5U: Approx. 43.5 kg

Accessories supplied

RM-883 Remote Control (1)

IEC designated batteries (2)


Other features

TELETEXT, Fastext


Design and specifications are subject to change without notice.

SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

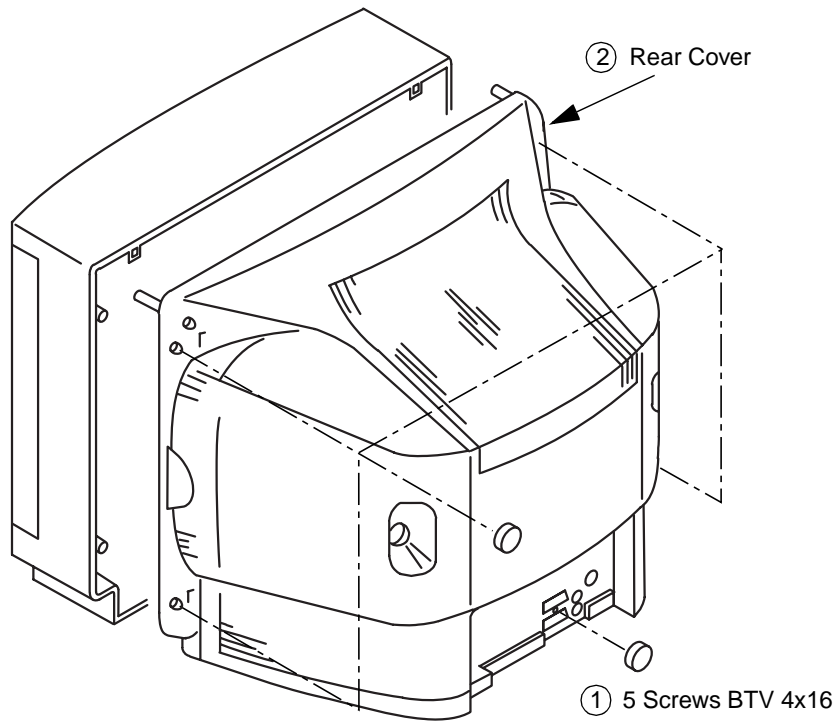


2-2. CHASSIS ASSY REMOVAL

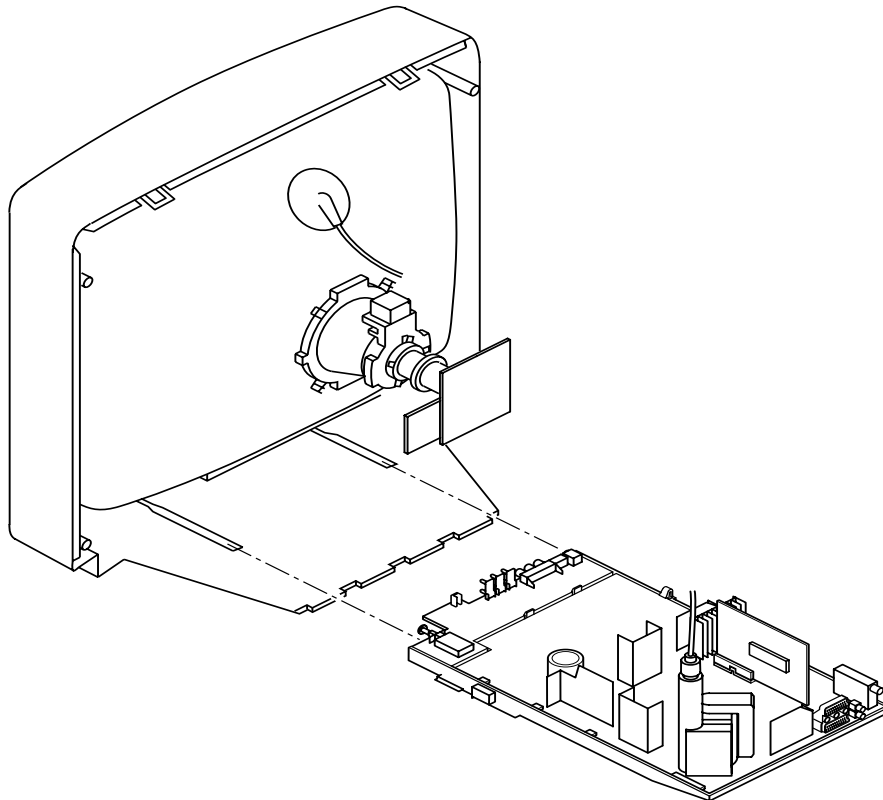

2-3. SERVICE POSITION

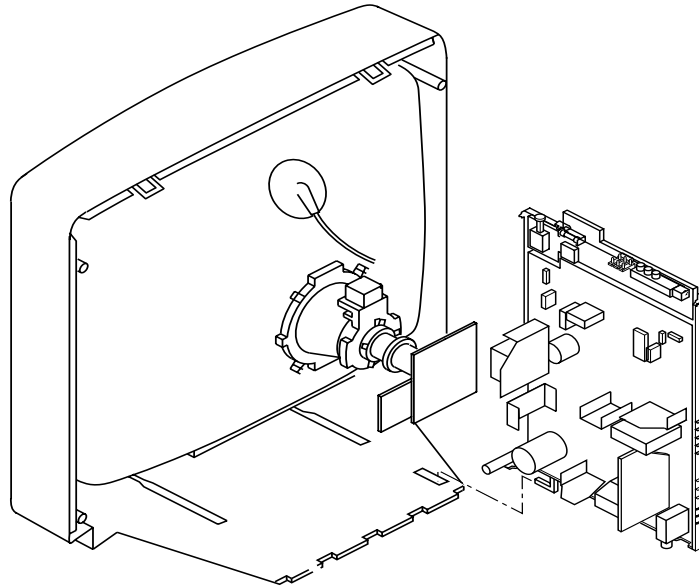


2-4. H1 BOARD REMOVAL

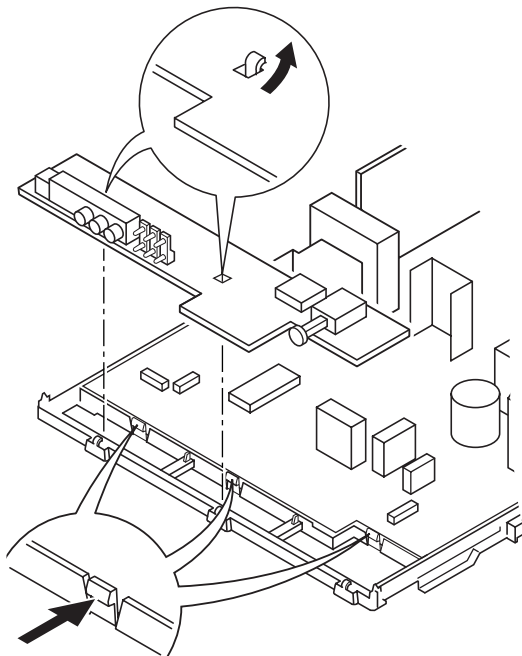


To release, push the claws in the direction of the arrow as indicated.

2-5. S1 BOARD REMOVAL

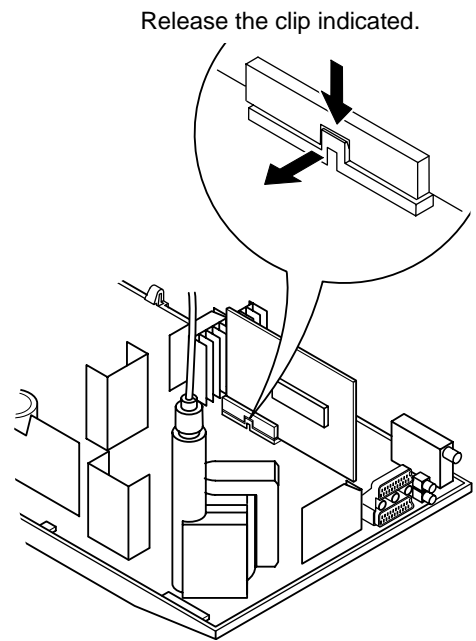

Release the clip indicated.


2-6. PICTURE TUBE REMOVAL

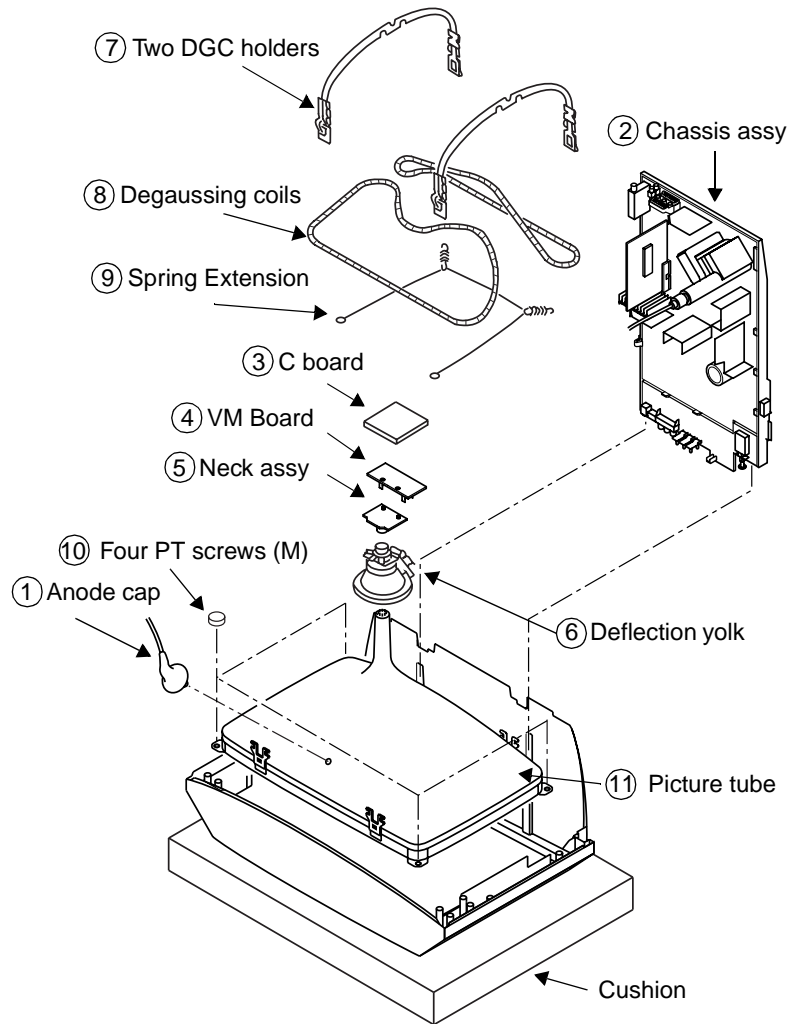


• REMOVAL OF ANODE-CAP

Note : Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT, after removing the anode.


* REMOVING PROCEDURES.

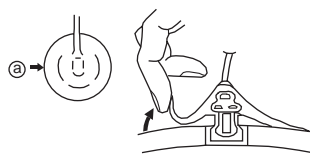

① Turn up one side of the rubber cap in the direction indicated by the arrow (a)

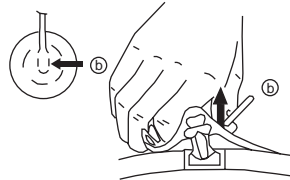


② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow (b)

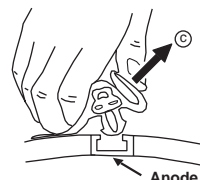

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow (c)

• HOW TO HANDLE THE ANODE-CAP

- ① To prevent damaging the surface of the anode-cap do not use sharp materials.
- ② Do not apply too great a pressure on the rubber, as this may cause damage to the anode connector.
- ③ A metal fitting called a shatter hook terminal is fitted inside the rubber cap. Do not turn the rubber foot over excessively this may cause damage if the shatter hook sticks out.

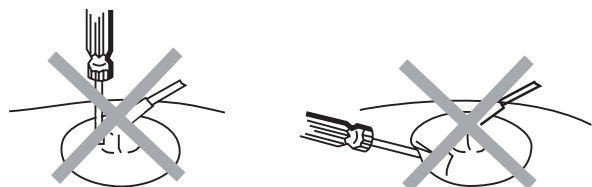


REMOVAL AND REPLACEMENT OF THE MAIN-BRACKET BOTTOM PLATES.

(1) REMOVING THE PLATES

In the event of servicing being required to the solder side of the A Board printed wiring board, the bottom plates fitted to the main chassis bracket require to be removed.

This is performed by cutting the gates with a sharp wire cutter at the locations shown and indicated by arrows.

Note : There are 2 plates fitted to the main bracket and secured by 4 gates.
Only remove the necessary plate to gain access to the printed wiring board.

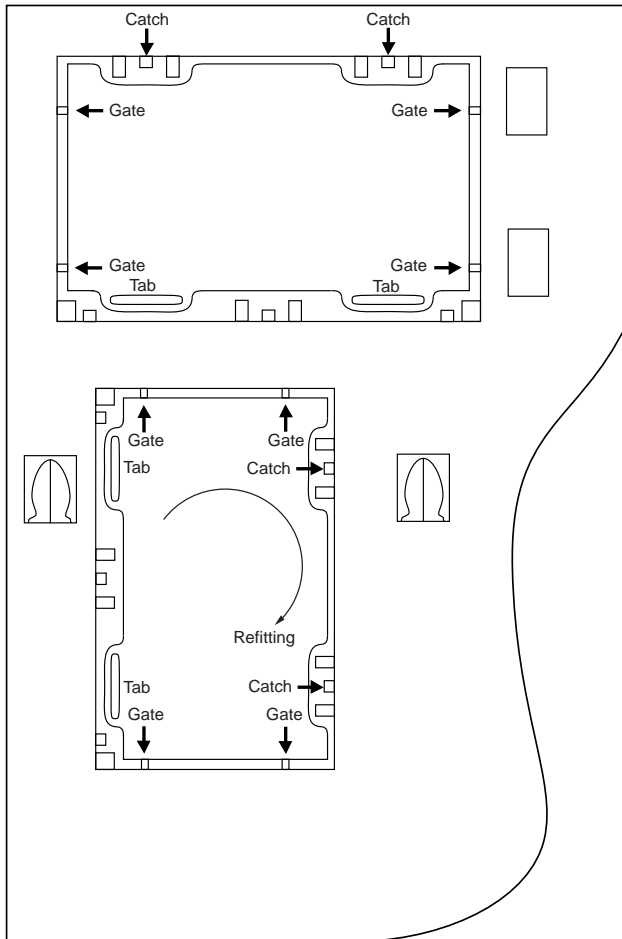


For safety reasons, on no account should the plates be removed and not refitted after servicing.

(2) REFITTING THE PLATES

Because the plates differ in size it is important that the correct plates are refitted in their original location.

Please note that the plates need to be rotated 180 degrees from the cut position to allow the tabs to be fitted in the catch positions.

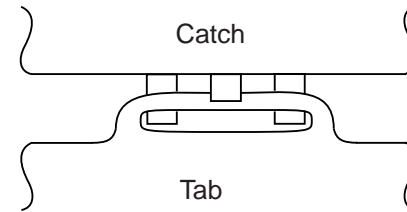

SECTION 3 SET-UP ADJUSTMENTS

- When complete readjustment is necessary or a new picture tube is installed, carry out the following adjustments.
- Unless there are specific instructions to the contrary, carry out these adjustments with the rated power supply.
- Unless there are specific instructions to the contrary, set the controls and switches to the following settings :

Contrast 80% [or remote control normal]
 Brightness 50%

Carry out the following adjustments in this order :

- 3-1. Beam Landing
- 3-2. Convergence
- 3-3. Focus
- 3-4. White balance

- Note :** Test equipment required
1. Color bar/pattern generator.
 2. Degausser.
 3. Oscilloscope.
 4. Digital multimeter.
 5. DC Power supply.

Preparation:

1. In order to reduce the influence of geomagnetism on the set's picture tube, face it in an easterly or westerly direction.
2. Switch on the TV set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input an all-white signal from the pattern generator. Set the Contrast and Brightness to normal.
2. Set the pattern generator raster signal to all Red.
3. Move the deflection yolk forward and adjust with the purity control so that the Red is at the centre and the Blue and Green take up equally sized areas on each side of the screen. [See Fig.3-1 - 3-3].
4. Move the deflection yolk forward and adjust so that the entire screen becomes Red. [See Fig.3-1].
5. Switch the raster signal to Blue, then to Green and verify the purity condition.
6. When the position of the deflection yolk has been determined, fasten the deflection yolk with the screws.
7. If the beam does not land correctly in all the corners, use magnets to correct it. [See Fig.3-4].

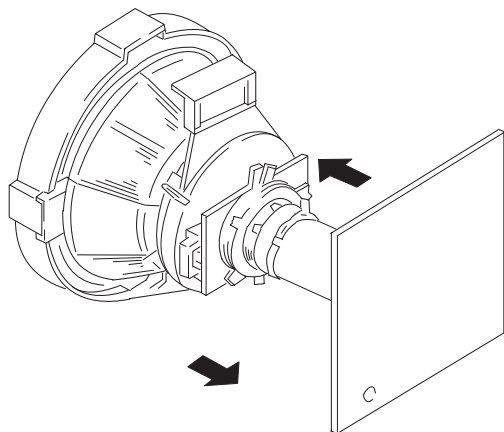


Fig. 3-1

Fig. 3-2

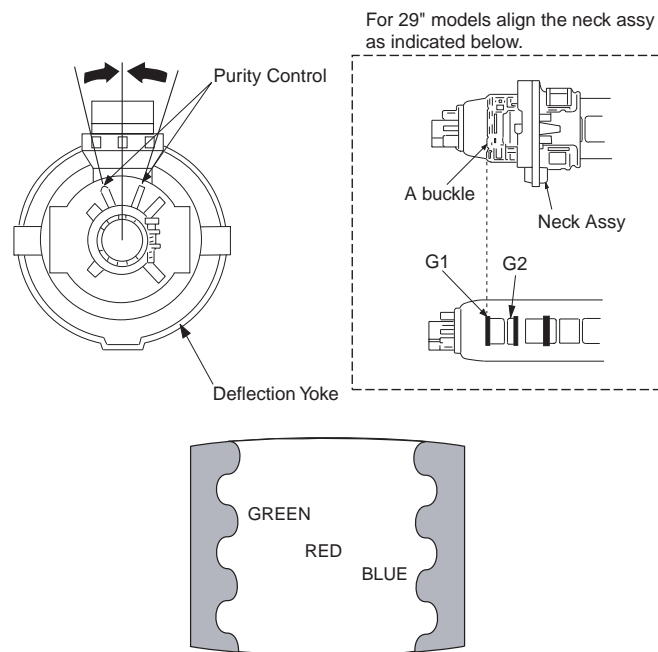


Fig. 3-3

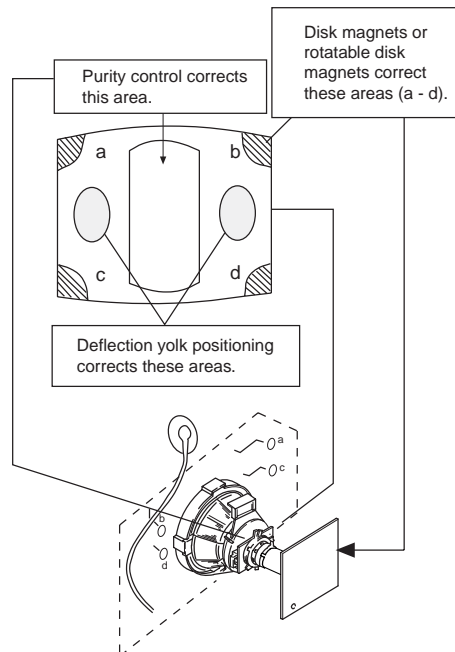



Fig. 3-4

3-2. CONVERGENCE

Preparation:


- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Minimize the Brightness setting.
- Input a dot pattern from the pattern generator.

(1) Horizontal and vertical static convergence




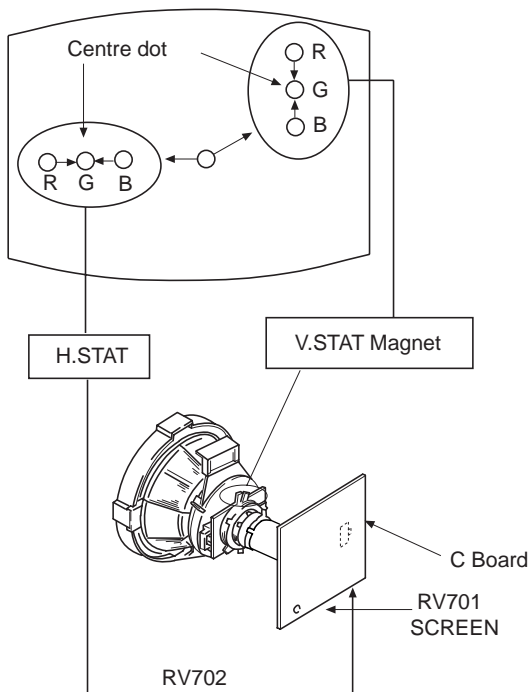


1. [Moving horizontally], adjust the H.STAT control so that the Red, Green and Blue points are on top of each other at the centre of the screen.
2. [Moving vertically], adjust the V.STAT magnet so that the Red, Green and Blue points are on top of each other at the centre of the screen.
3. If the H.STAT variable resistor is unable to bring the Red, Green and Blue points together at the centre of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner indicated below. [In this case, the H.STAT variable resistor and the V.STAT magnet influence each other].


- Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

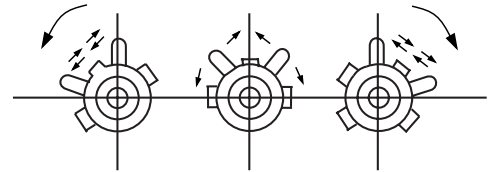


4. If the V.STAT magnet is moved in the direction of the (a) and (b) arrows, the Red, Green and Blue points move as indicated below.

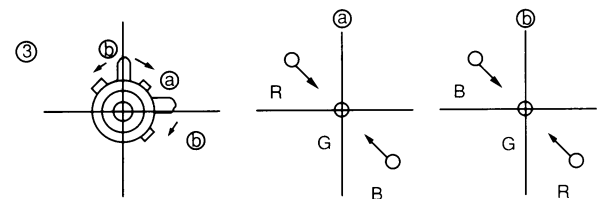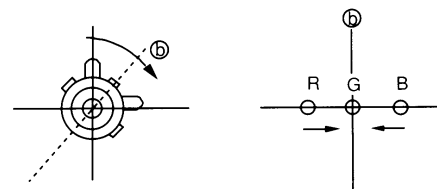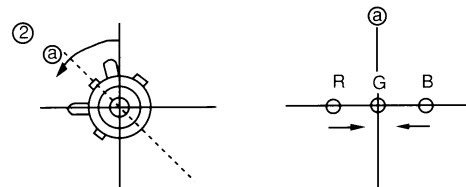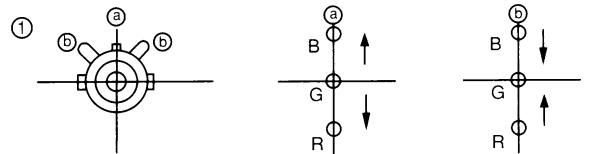

(2) Operation of the BMC (Hexapole) magnet.

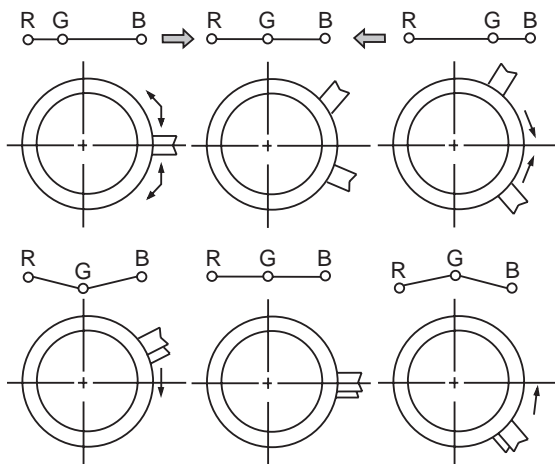

- The respective dot position resulting from moving each magnet interact, so be sure to perform adjustment whilst tracking.
Use the H.STAT VR to adjust the Red, Green and Blue dots so that they coincide at the centre of the screen [by moving the dots in the horizontal direction].

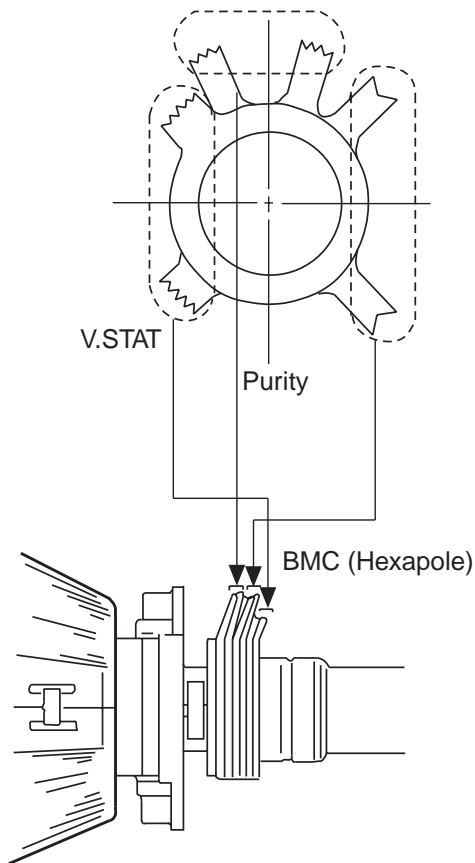


(3) Dynamic convergence adjustment.

Preparation:




- Before starting this adjustment, adjust the horizontal and vertical static convergence.
- Slightly loosen the deflection yolk screws.

- Remove the deflection yolk spacer.
- Move the deflection yolk as indicated in the figure below and optimize the convergence.
- Tighten the deflection yolk screws.
- Re-install the deflection yolk spacer.

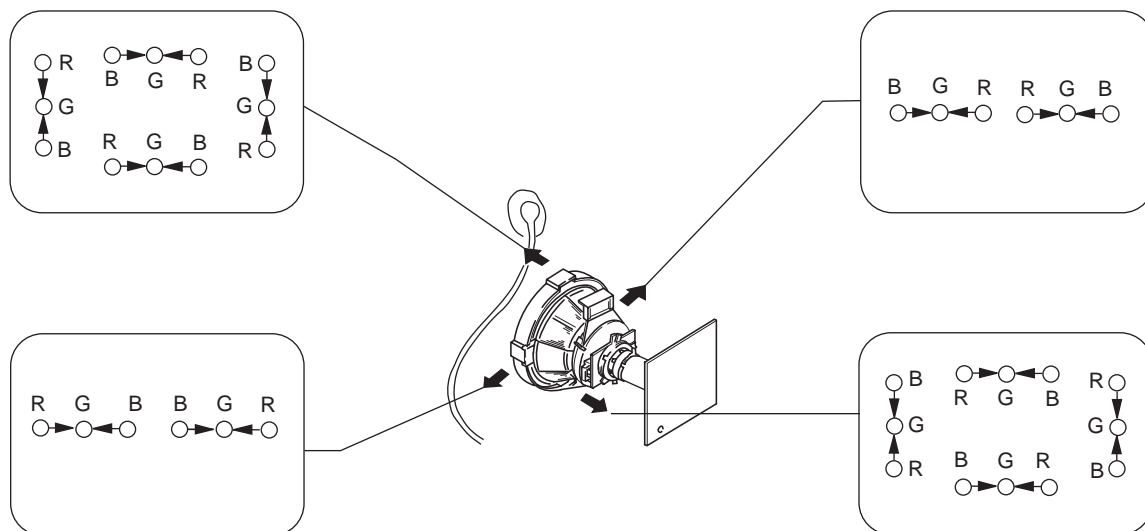

(4) Screen corner convergence.

- If you are unable to adjust the corner convergence properly, this can be corrected by the use of permalloy assemblies.

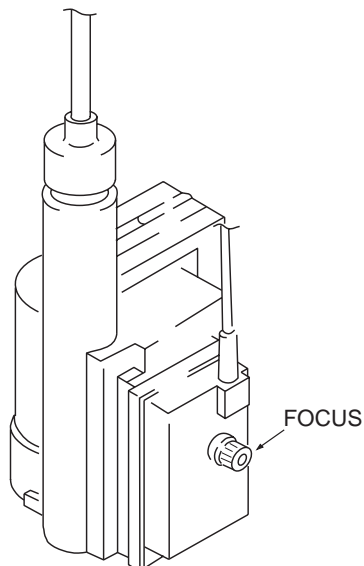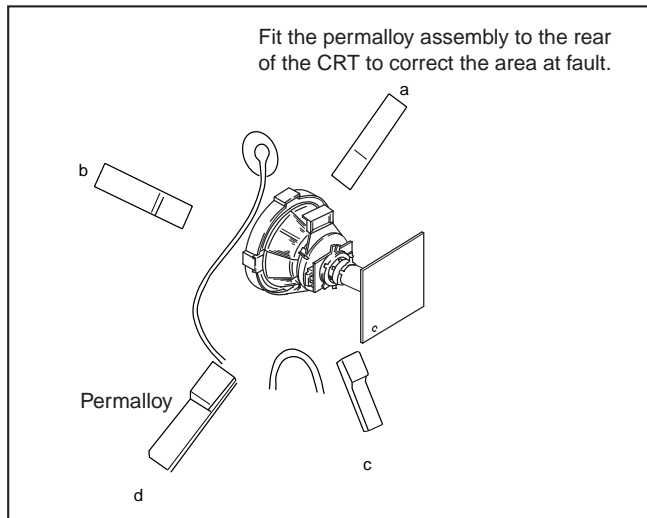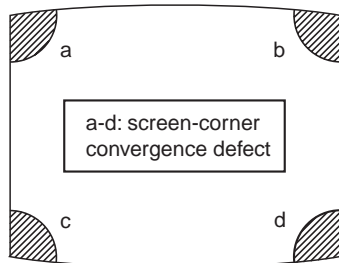**3-3. Screen [G2], White balance****G2 Setting**

- Input a dot signal from the pattern generator.
- Set the Picture, Brightness and Colour to minimum.
- Apply 170Vdc from an external power supply to the R, G and B cathodes of the CRT.
- Whilst watching the picture, adjust the G2 control [RV701 SCREEN] located on the C Board to the point just before the flyback return lines disappear.

White balance adjustment

- Input a 'PAL' all-white signal from the pattern generator.
- Enter into the Service Mode.
- Enter into the 'Picture' service menu.
- Select the 'Green drive' and adjust so that the White Balance becomes optimum.
- Select the 'Blue drive' and adjust so that the White Balance becomes optimum.
- Set the Picture to MIN.
- Set the 'R-cut-off' to 07.
- Adjust the 'G-cut-off', and the 'B-cut-off' so that the White Balance becomes optimum.
- Press the button to return to TV operation.

PICTURE

R - Drive	Adj
G - Drive	Adj
B - Drive	Adj
R - cut - off	Adj
G - cut - off	Adj
B - cut - off	Adj
ID - start	02
ID - stop	01
ID - level	01
Bellfo	Adj
Sub Colour	Adj
Sub Brightness	Adj

3-4. FOCUS

- Input a Phillips colour pattern
- Set the picture settings to normal.
- Adjust the focus control located on the Flyback transformer to bring the centre of the screen into focus.

Note :Bring only the centre area of the screen into focus, switch to an all-white pattern and confirm that the magenta ring is hardly noticed. To obtain optimum focus balance the focus setting between optimum screen centre focus and a reduced magenta ring level.


SECTION 4 CIRCUIT ADJUSTMENTS

4-1. ELECTRICAL ADJUSTMENTS

Service adjustments to this model can be performed using the supplied Remote Commander RM-883.

HOW TO ENTER INTO SERVICE MODE

1. Turn on the main power switch and enter into the stand-by mode.
2. Press the following sequence of buttons on the Remote Commander.

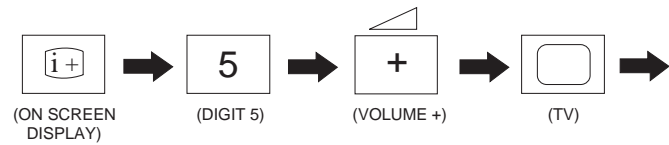

- 'TT--' will appear in the upper right corner of the screen.
Other status information will also be displayed.
3. Press 'MENU' on the remote commander to obtain the following menu on the screen.

TEST MENU
> Picture
Geometry
Sound
TV Status
AGC Adjust
Technical

4. Move to the corresponding adjustment item using the 'Green' [up] or 'Blue' [down] buttons on the Remote Commander.
5. Press the 'Yellow' button to enter into the required menu item.
6. Press the 'Menu' button on the Remote Commander to quit the Service Mode when all adjustments have been completed.

Note : The data shown in the 'TV STATUS' table is dependant on destination and country.

PICTURE

R - Drive	Adj
G - Drive	Adj
B - Drive	Adj
R - cut - off	Adj
G - cut - off	Adj
B - cut - off	Adj
ID - start	02
ID - stop	01
ID - level	01
Bellfo	Adj
Sub Colour	Adj
Sub Brightness	Adj

GEOMETRY

V centre	Adj
V size	Adj
V Lin	Adj
S Corr	Adj
H Cent	Adj
H Size	Adj
Pin Amp	Adj
Corner Pin	Adj
Pin Phase	Adj
V Bow	Adj
V Angle	Adj
Upper V Lin	Adj
Lower V Lin	Adj
Left HBLK	07
Right HBLK	07
CD Mode (AV)	01

SOUND

Nicam Error Lower	20
Nicam Error Upper	80
Nicam Error Rate	xx [Status only]
AGC Gain Level	xx [Status only]

TV STATUS

Destination	A/L/E/U/D/B/K/R
Text Language	East/West

TECHNICAL


GD - Secam	30
BD - Secam	31
RC - Secam	11
GC - Secam	19
BC - Secam	10
GD - Sports	30
BD - Sports	36
RC - Sports	14
GC - Sports	15
BC - Sports	17
Y - Delay (AV)	07

SUB BRIGHTNESS ADJUSTMENT


1. Input a Phillips colour pattern.
2. Press 'TEST' 'TEST' 13 on the Remote Commander.
3. Adjust the 'Sub-Brightness' data so that there is barely a difference between the 0 IRE and 10 IRE signal levels.

SUB CONTRAST ADJUSTMENT

1. Input a video signal that contains a small 100% white area on a black background
2. Set the picture control to maximum. ['TT01']
3. Connect an oscilloscope to Pin 1 of CN504 [A Board].
4. Enter into the 'Picture' service menu.
5. Adjust the 'R - Drive' data to obtain the following waveform.

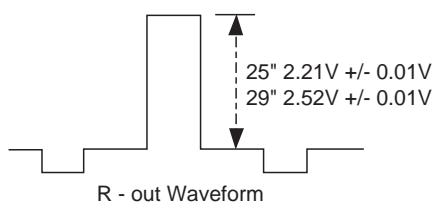**SUB COLOUR ADJUSTMENT**

1. Receive a PAL colour bar signal.
2. Connect an oscilloscope to Pin 3 of CN504 [A Board].
3. Enter into the 'Picture' service menu.
4. Adjust the 'Sub Colour' data so that the Cyan, Magenta and Blue colour bars are of equal levels as indicated below.

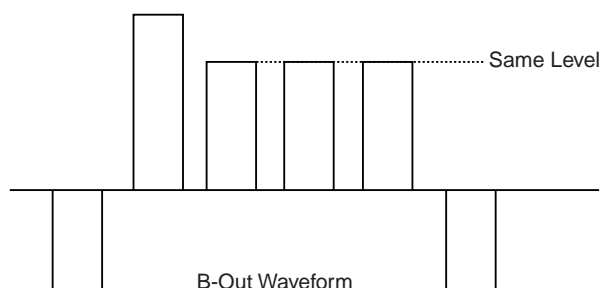

Note: Ensure that no signal is applied to the Antenna socket while carrying out the following IF adjustments.

SYSTEM B/G, D/K, I & L I.F ADJUSTMENT


1. Input a 38.9Mhz carrier signal at 100dBuV to Pin 11 [IF output] of the tuner [TU101].
2. Measure the voltage at Pin 17 of [IC101].
3. Adjust L103 [A Board] to obtain a voltage of 2.5V +/- 0.3V.

SYSTEM L BAND 1 I.F ADJUSTMENT

1. Input a 34.0MHz carrier signal at 100dBuV to Pin 11 [IF output] of the tuner [TU101].
2. Select 'system L' + C00 [channel 00].
3. Measure the voltage at Pin 17 [IC101].
4. Adjust RV101 [A Board] to obtain a voltage of 2.5V +/- 0.3V.

TUNER AGC ADJUSTMENT


1. Receive a signal of 65dBuV / 75 ohm terminated, via the tuner antenna socket.
2. Connect a voltmeter to JW130 [A Board].
3. Enter into the 'Test Menu'.
3. Select the 'AGC Adjust' menu item.
4. Adjust the data using the Yellow and Green buttons on the Remote Commander to obtain a voltage of 3.0V +/- 0.2V.

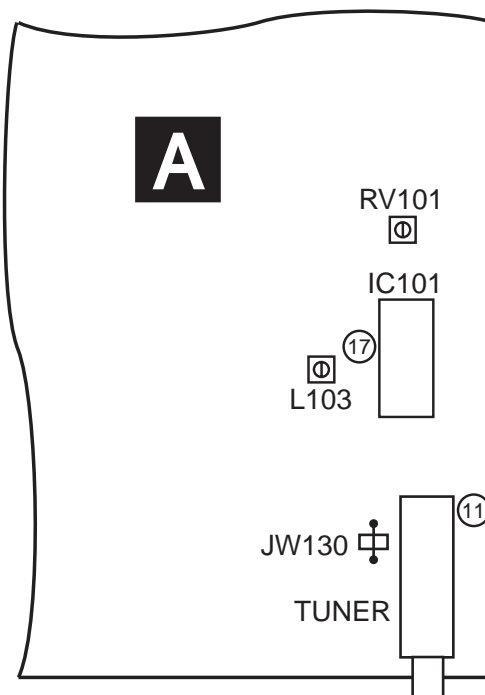

DEFLECTION SYSTEM ADJUSTMENT

1. Enter into the 'Geometry' service menu.
2. Select and adjust each item in order to obtain the optimum image.

GEOMETRY	
V centre	Adj
V size	Adj
V Lin	Adj
S Corr	Adj
H Cent	Adj
H Size	Adj
Pin Amp	Adj
Corner Pin	Adj
Pin Phase	Adj
V Bow	Adj
V Angle	Adj
Upper V Lin	Adj
Lower V Lin	Adj
Left HBLK	07
Right HBLK	07
CD Mode (AV)	01

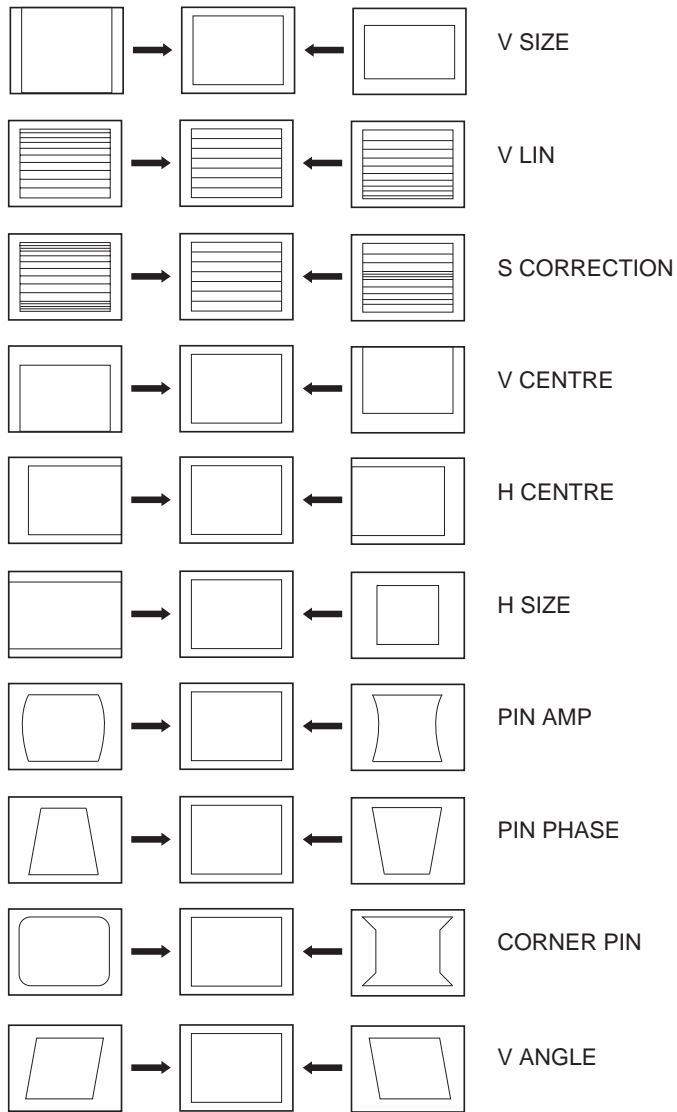

4-2. TEST MODE 2:

Is available by pressing 'TEST' button twice, OSD 'TT' appears. The functions described below are available by pressing the two numbers. To release the Test mode 2, press 0 twice, or switch the TV into stand-by mode, or press the TV button on the remote commander.

00	Cancel Test mode
01	Picture maximum
02	Picture minimum
03	Volume 35%
04	Volume 50%
05	Volume 65%
06	Volume 80%
07	Ageing mode On/Off
08	Set shipping conditions
09	Display TV Status
10	No function
11	Sub Picture Adjustment
12	Sub Colour Adjustment
13	Sub Brightness Adjustment
14	Text H position Adjustment
15	Rotation test
16	Picture level 50%
17	Audio mute ON
18	Disable Blanking
19	No function
20	No function
21	Destination A
22	Destination L
23	Destination E
24	Destination U
25	Destination D
26	Destination B
27	Destination K
28	Destination R
29	No function
30	No function
31	Audio shutoff Disable/Enable
32	RGB priority Disable/Enable
33	Rotation On/OFF
34	Text language East/West
35	Wide CRT/4:3 CRT
36	VM ON/OFF test
37	No function
38	No function
39	No function
40	No function
41	Re-initialize the NVM [Only when Prog=59]

42	Re-initialise geometry settings [Only when Prog=59]
43	No function
44	No function
45	No function
46	No function
47	No function
48	Set NVM as NON Virgin [Only when Prog=59]
49	Set NVM as Virgin [Only when Prog=59]
50	No function
51	No function
52	No function
53	No function
54	No function
55	No function
56	No function
57	No function
58	No function
59	No function
60	No function
61	Auto AGC Adjust
62	Alternative Dest B Autotuning
63	Enable/Disable Y/C input
64	Signal Quality Check for Auto Tune
65	Signal Quality NOT Checked for Auto Tune
66	No function
67	Manual AGC Adjust
68 -100	No function


4-3. FE-1 SELF DIAGNOSTIC SOFTWARE

The identification of errors within the FE-1 chassis is triggered in one of two ways :- 1: Busy or 2: Device failure to respond to IIC. In the event of one of these situations arising the software will first try to release the bus if busy (Failure to do so will report with continuous flashing LED) and then communicate with each device in turn to establish if a device is faulty. If a device is found to be faulty the relevant device number will be displayed through the LED (Series of flashes which must be counted) See Table 1., non fatal errors are reported using this method. Each time the software detects an error it is stored within the NVM. See Table 2.

Table 1


ERROR	LED ERROR COUNT
No error	00
Not allowed (may be confused with Sircs response flash!)	01
Protection circuit trip < ANY TIME >	02
Reserved	03
No vertical sync	04
AKB	05
IIC bus clock and/or data lines low at Power ON	06
NVM no IIC bus acknowledge at Power ON	07
Jungle controller no IIC acknowledge at Power ON	08
Tuner no acknowledge at Power ON	09
Sound processor no acknowledge at Power ON	10

Flash Timing Example : e.g. error number 3

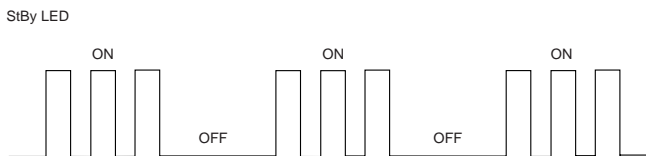

How to enter into Table 2

1. Turn on the main power switch of the TV set and enter into the 'Standby Mode'.
2. Press the following sequence of buttons on the Remote Commander.

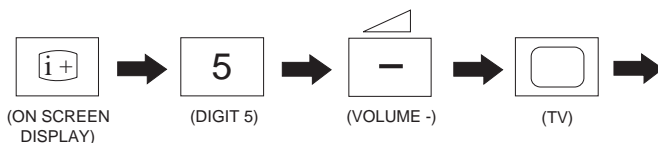





3. The following table will be displayed indicating the error count.

Table 2


Error	Times
2	-
3	-
4	-
5	-
6	-
7	-
8	-
9	-
10	-

Note: To clear the error count data press '80' on the Remote commander.

5-1 BLOCK DIAGRAMS (2)

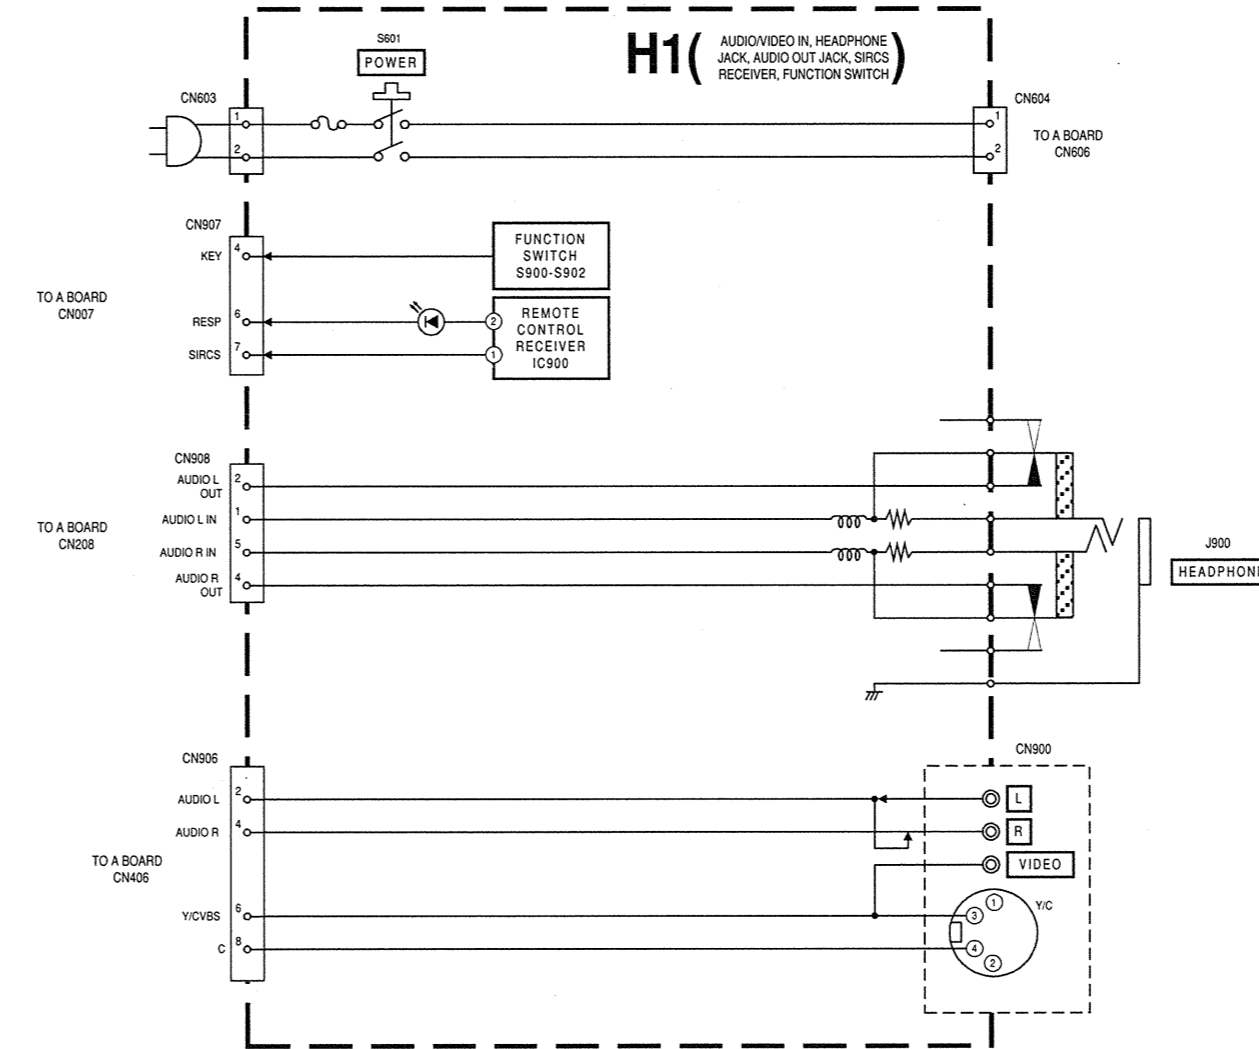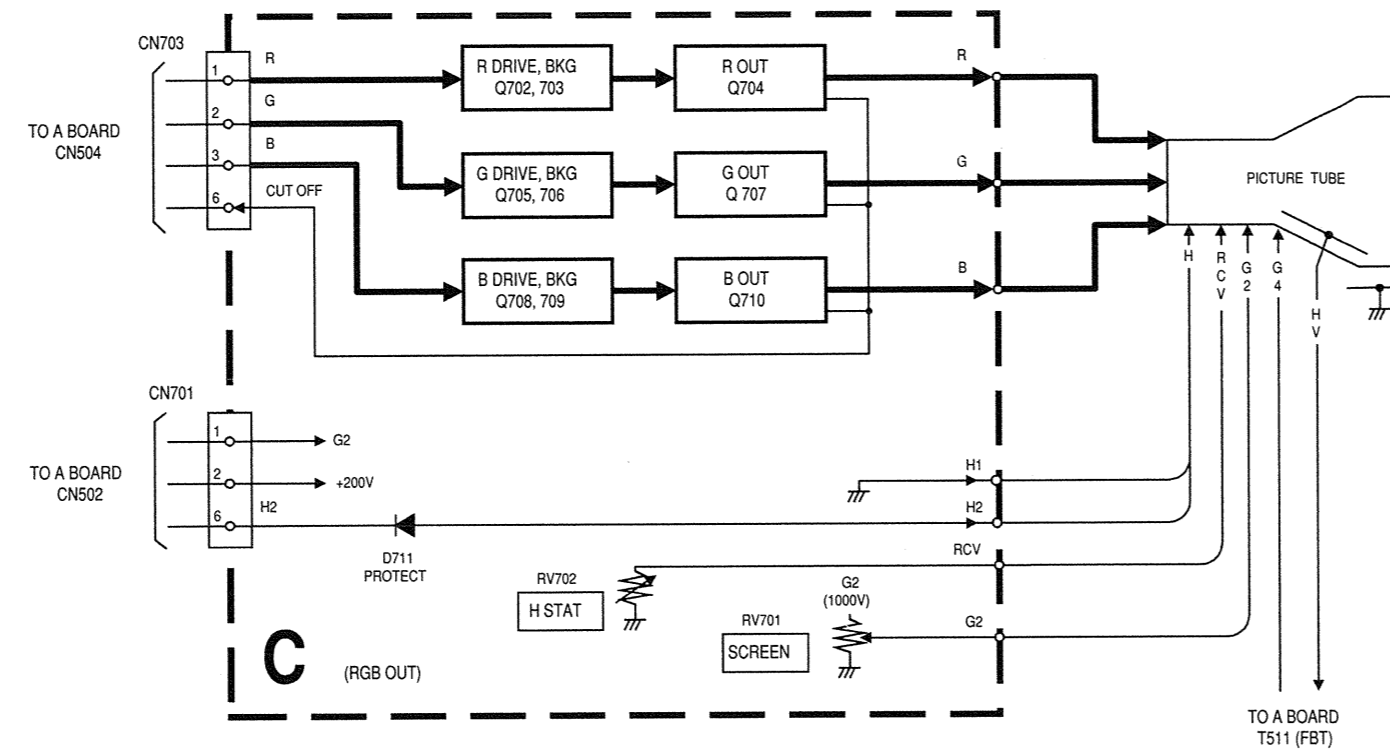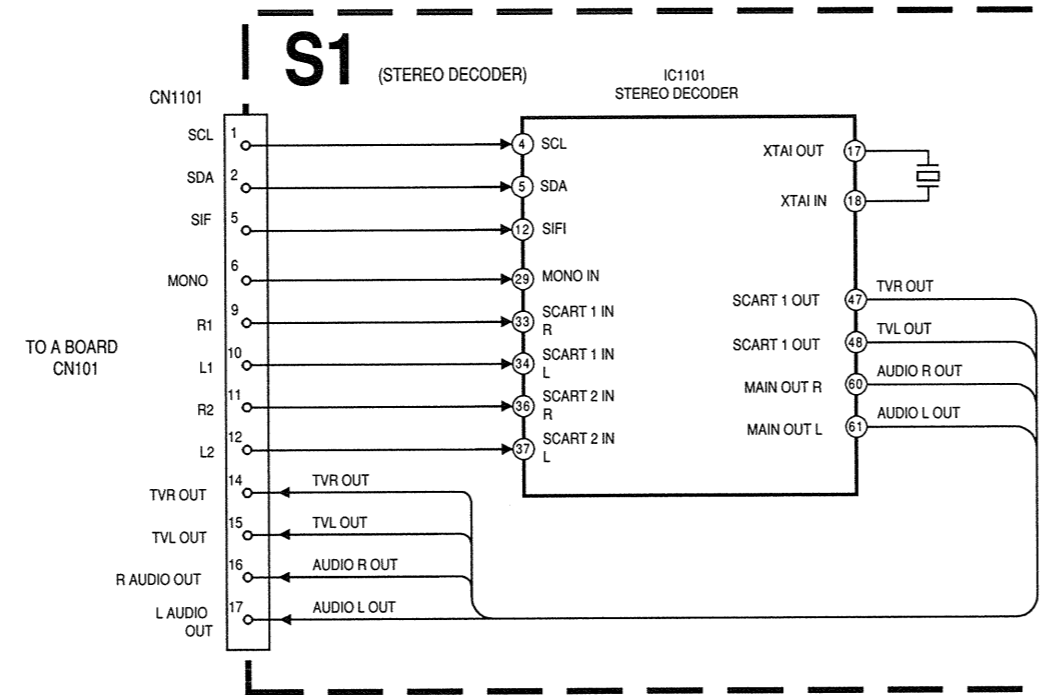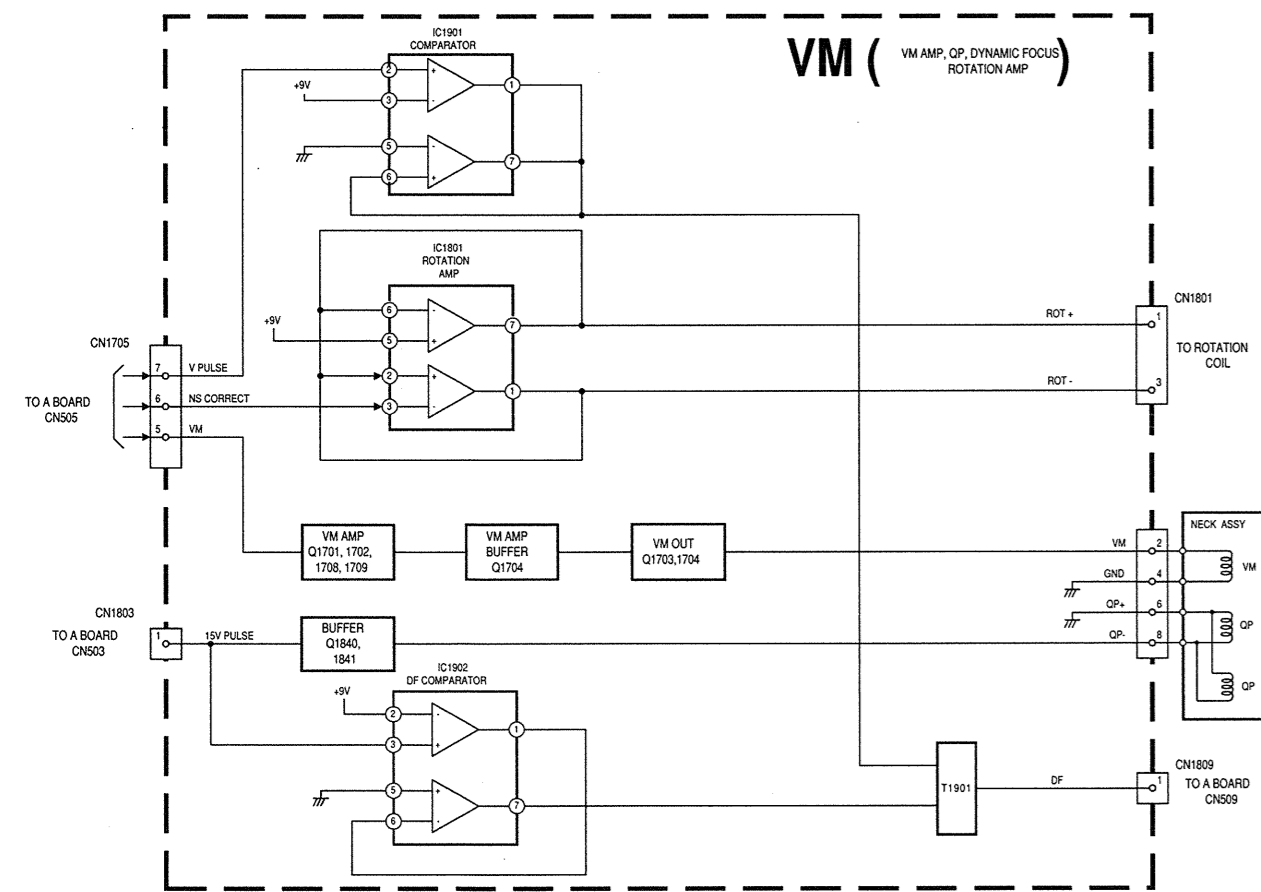

5-2. CIRCUIT BOARD LOCATION

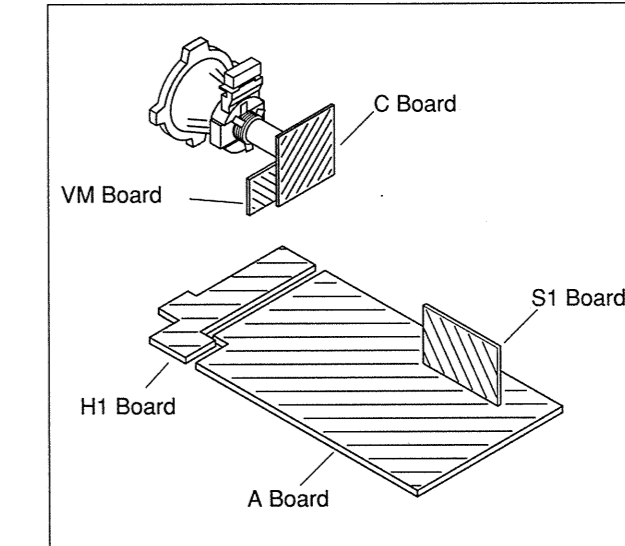

5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

- Note :**
- All capacitors are in μF unless otherwise noted.
 - pF : μF 50WV or less are not indicated except for electrolytic types.
 - Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5mm
Electrical power rating : 1/4W

- Chip resistors are 1/10W
- All resistors are in ohms.
- $k = 1000$ ohms, $M = 1000,000$ ohms
- : nonflammable resistor.
- : fusible resistor.
- : internal component.
- : panel designation or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All voltages are in Volts.
- Readings are taken with a 10Mohm digital multimeter.
- Readings are taken with a color bar input signal.
- Voltage variations may be noted due to normal production tolerances.


- : B + bus.
- : B - bus.
- : RF signal path.
- : earth - ground.
- : earth - chassis.

Reference Information


RESISTOR	RN	: METAL FILM
	RC	: SOLID
	FPRD	: NON FLAMMABLE CARBON
	FUSE	: NON FLAMMABLE FUSIBLE
	RS	: NON FLAMMABLE METAL OXIDE
	RB	: NON FLAMMABLE CEMENT
	RW	: NON FLAMMABLE WIREWOUND
		: ADJUSTMENT RESISTOR
COIL	LF-8L	: MICRO INDUCTOR
CAPACITOR	TA	: TANTALUM
	PS	: STYROL
	PP	: POLYPROPYLENE
	PT	: MYLAR
	MPS	: METALIZED POLYESTER
	MPP	: METALIZED POLYPROPYLENE
	ALB	: BIPOLAR
	ALT	: HIGH TEMPERATURE
	ALR	: HIGH RIPPLE

Note: The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

Note: Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces de numéro spécifique.

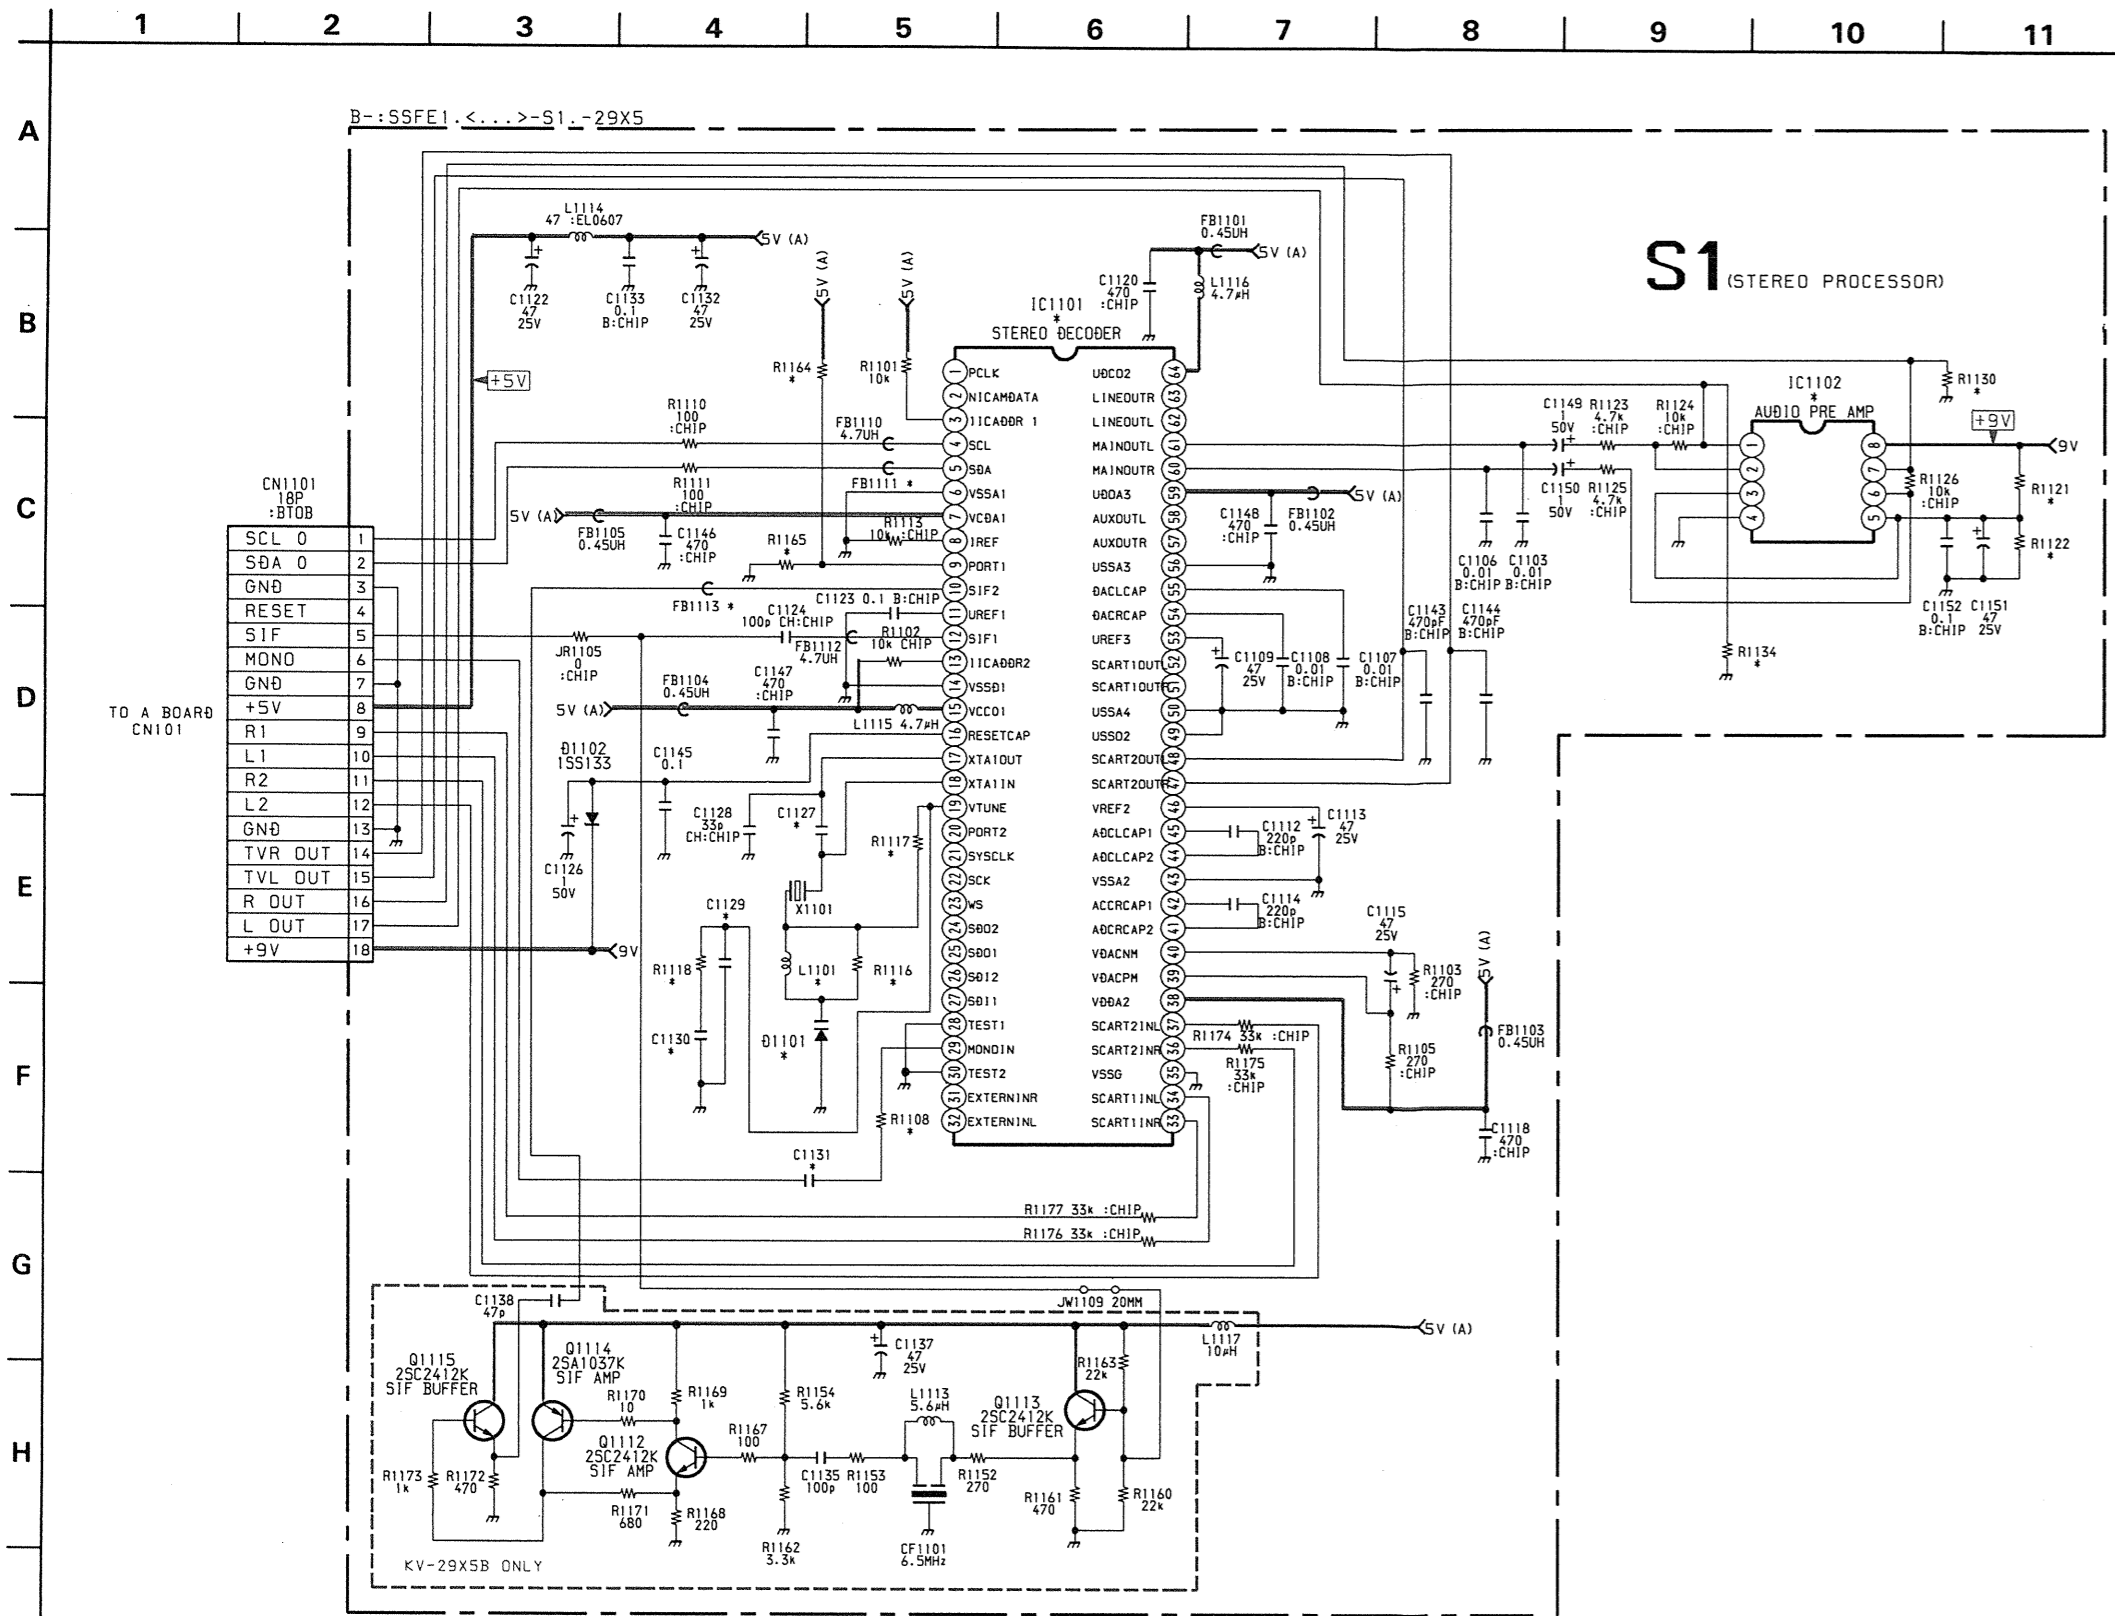

S1 [STEREO PROCESSOR]

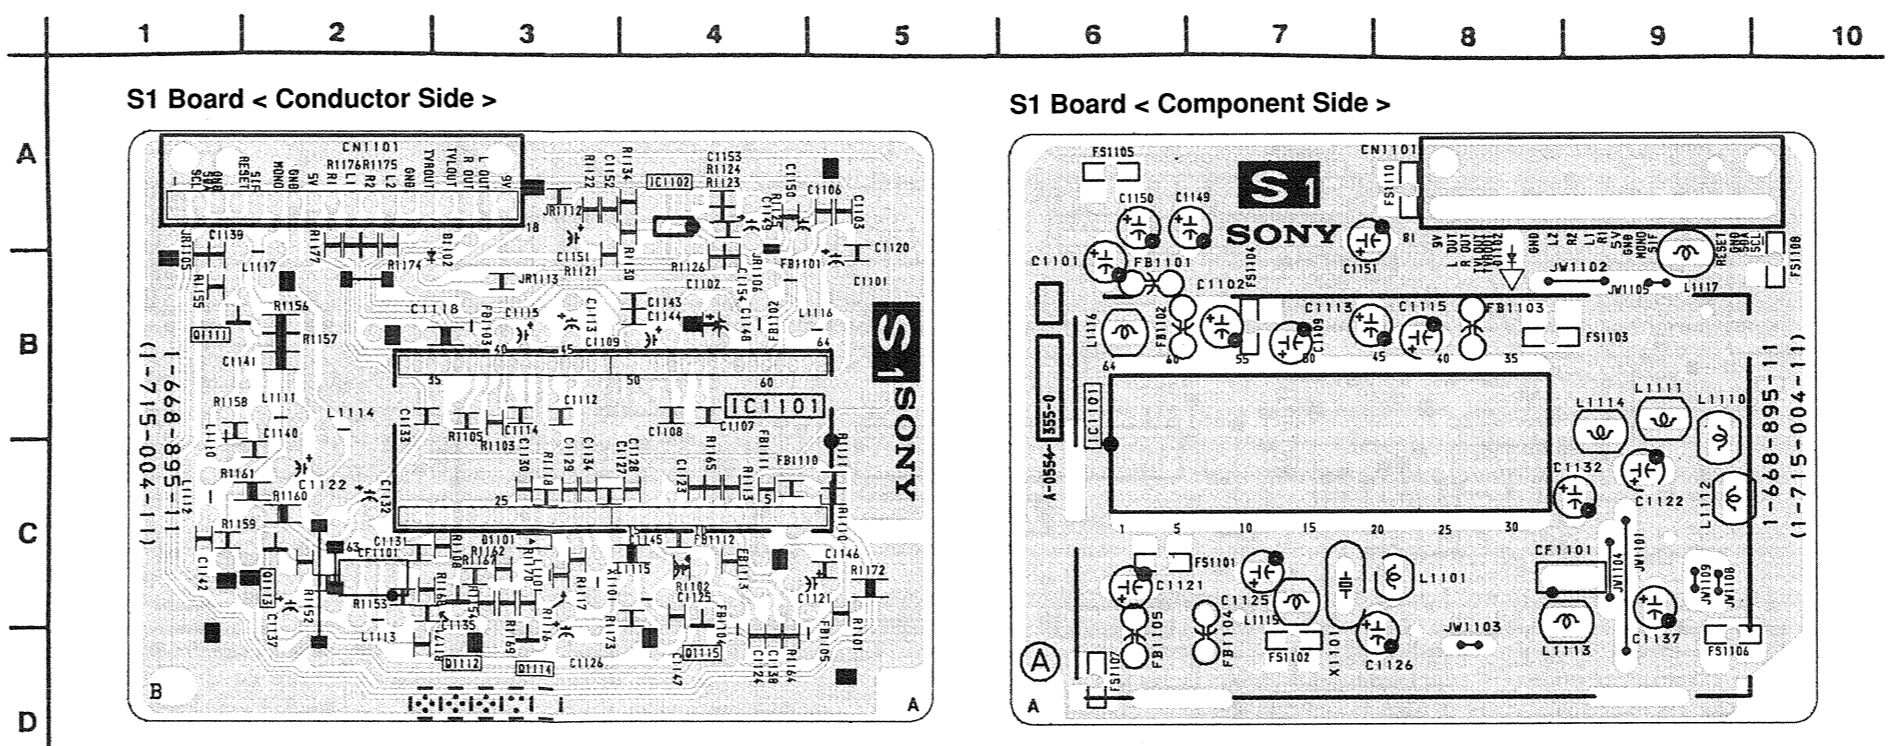

S1 BOARD IC VOLTAGE TABLE

IC Voltage Table		
Ref No	Pin No	Voltage (V)
IC1101	4	3.4
	5	3.2
	7	4.8
	8	2.3
	9	4.8
	10-12	2.3
	13	4.8
	15	4.8
	16	4.8
	17	2.6
	18	3.5
	19	4.0
	33-34	2.4
	36-37	2.4
	38-39	4.8
	41-42	2.4
	44-48	2.4
	53-55	2.4
	59	4.8
60-61	2.4	
64	4.8	
IC1102	1	4.5
	2	4.1
	3	4.5
	6	4.3
	7	3.5
	8	9.0

S1 BOARD TRANSISTOR VOLTAGE TABLE

Transistor Voltage Table				
Ref No	(B) Base	(C) Collector	(E) Emitter	(E) Emitter
Q1111	2.0	4.1	1.3	
Q1112	1.5	3.5	0.9	
Q1113	1.9	4.1	1.3	
Q1114	3.5	3.3	4.1	
Q1115	3.3	4.1	2.7	


S1 BOARD * MARK

Ref	29X5A	29X5B	29X5D	29X5E	29X5K	29X5L	29X5R	29X5U
C1127	22PF	33PF	22PF	33PF	22PF	33PF	22PF	33PF
C1129	-	0.033UF	-	0.033UF	-	0.033UF	-	0.33UF
C1130	-	0.33UF	-	0.33UF	-	0.33UF	-	0.33UF
C1131	0.47UF	0.47UF	0.47UF	-	0.47UF	-	0.47UF	-
D1101	0	BB135	0	BB135	0	BB135	0	BB135
FB1111	6.8UH	4.7UH	6.8UH	4.7UH	6.8UH	4.7UH	6.8UH	4.7UH
FB1113	-	4.7UH	-	-	-	-	-	-
IC1101	TDA9870	TDA9875P	TDA9870	TDA9875P	TDA9870	TDA9875P	TDA9870	TDA9875P
IC1102	LM358DR-E2	NJM4558M-TE2	LM358DR-E2	NJM4558M-TE2	LM358DR-E2	NJM4558M-TE2	LM358DR-E2	NJM4558M-TE2
L1101	-	2.7UH	-	2.7UH	-	2.7UH	-	2.7UH
R1108	2.2K	2.2K	2.2K	-	2.2K	-	2.2K	-
R1116	0	39K	0	39K	0	39K	0	39K
R1117	-	10K	-	10K	-	10K	-	10K
R1118	-	20K	-	20K	-	20K	-	20K
R1121	4.7K	10K	4.7K	10K	4.7K	10K	4.7K	10K
R1122	4.7K	10K	4.7K	10K	4.7K	10K	4.7K	10K
R1130	10K	-	10K	-	10K	-	10K	-
R1134	10K	-	10K	-	10K	-	10K	-
R1164	-	10K	-	10K	-	10K	-	10K
R1165	0	-	0	-	0	-	0	-

A POWER SUPPLY,
DEFLECTION, TUNING, PROCESSOR
VIDEO SIGNAL PROCESSOR, AV IN/OUT

A BOARD

IC	DIODE	D539	F - 2
IC001	C - 11	D001	D - 8
IC003	D - 10	D002	D - 8
IC004	D - 9	D004	D - 10
IC005	B - 11	D007	D - 9
IC101	A - 4	D008	D - 7
IC201	B - 7	D009	C - 11
IC301	D - 6	D010	D - 10
IC501	I - 4	D011	E - 12
IC531	C - 4	D012	D - 11
IC603	F - 6	D014	D - 11
IC604	E - 6	D015	D - 11
IC605	C - 8	D017	E - 10
IC606	I - 7	D018	D - 7
IC608	D - 12	D023	E - 10
IC609	E - 11	D101	B - 2
		D201	C - 8
		D202	C - 8
		D204	C - 9
		D205	B - 8
		D206	B - 7
		D306	C - 6
		D307	C - 6
		D308	E - 5
		D309	E - 5
		D405	C - 1
		D406	C - 2
		D407	D - 2
		D409	B - 1
		D415	D - 2
		D417	D - 2
		D422	C - 1
		D423	C - 1
		D427	B - 2
		D501	I - 4
		D502	H - 4
		D511	G - 3
		D512	H - 3
		D513	I - 3
		D514	I - 3
		D534	D - 3
		D535	F - 4
		D536	F - 2
		D538	F - 4
		D631	F - 11
		D632	E - 10
		D633	E - 9
		D601	G - 8
		D602	I - 6
		D603	H - 6
		D605	G - 6
		D608	H - 8
		D610	F - 7
		D613	E - 9
		D614	G - 6
		D619	I - 8
		D621	F - 10
		D626	F - 9
		D627	F - 9
		D628	E - 10
		D629	E - 11

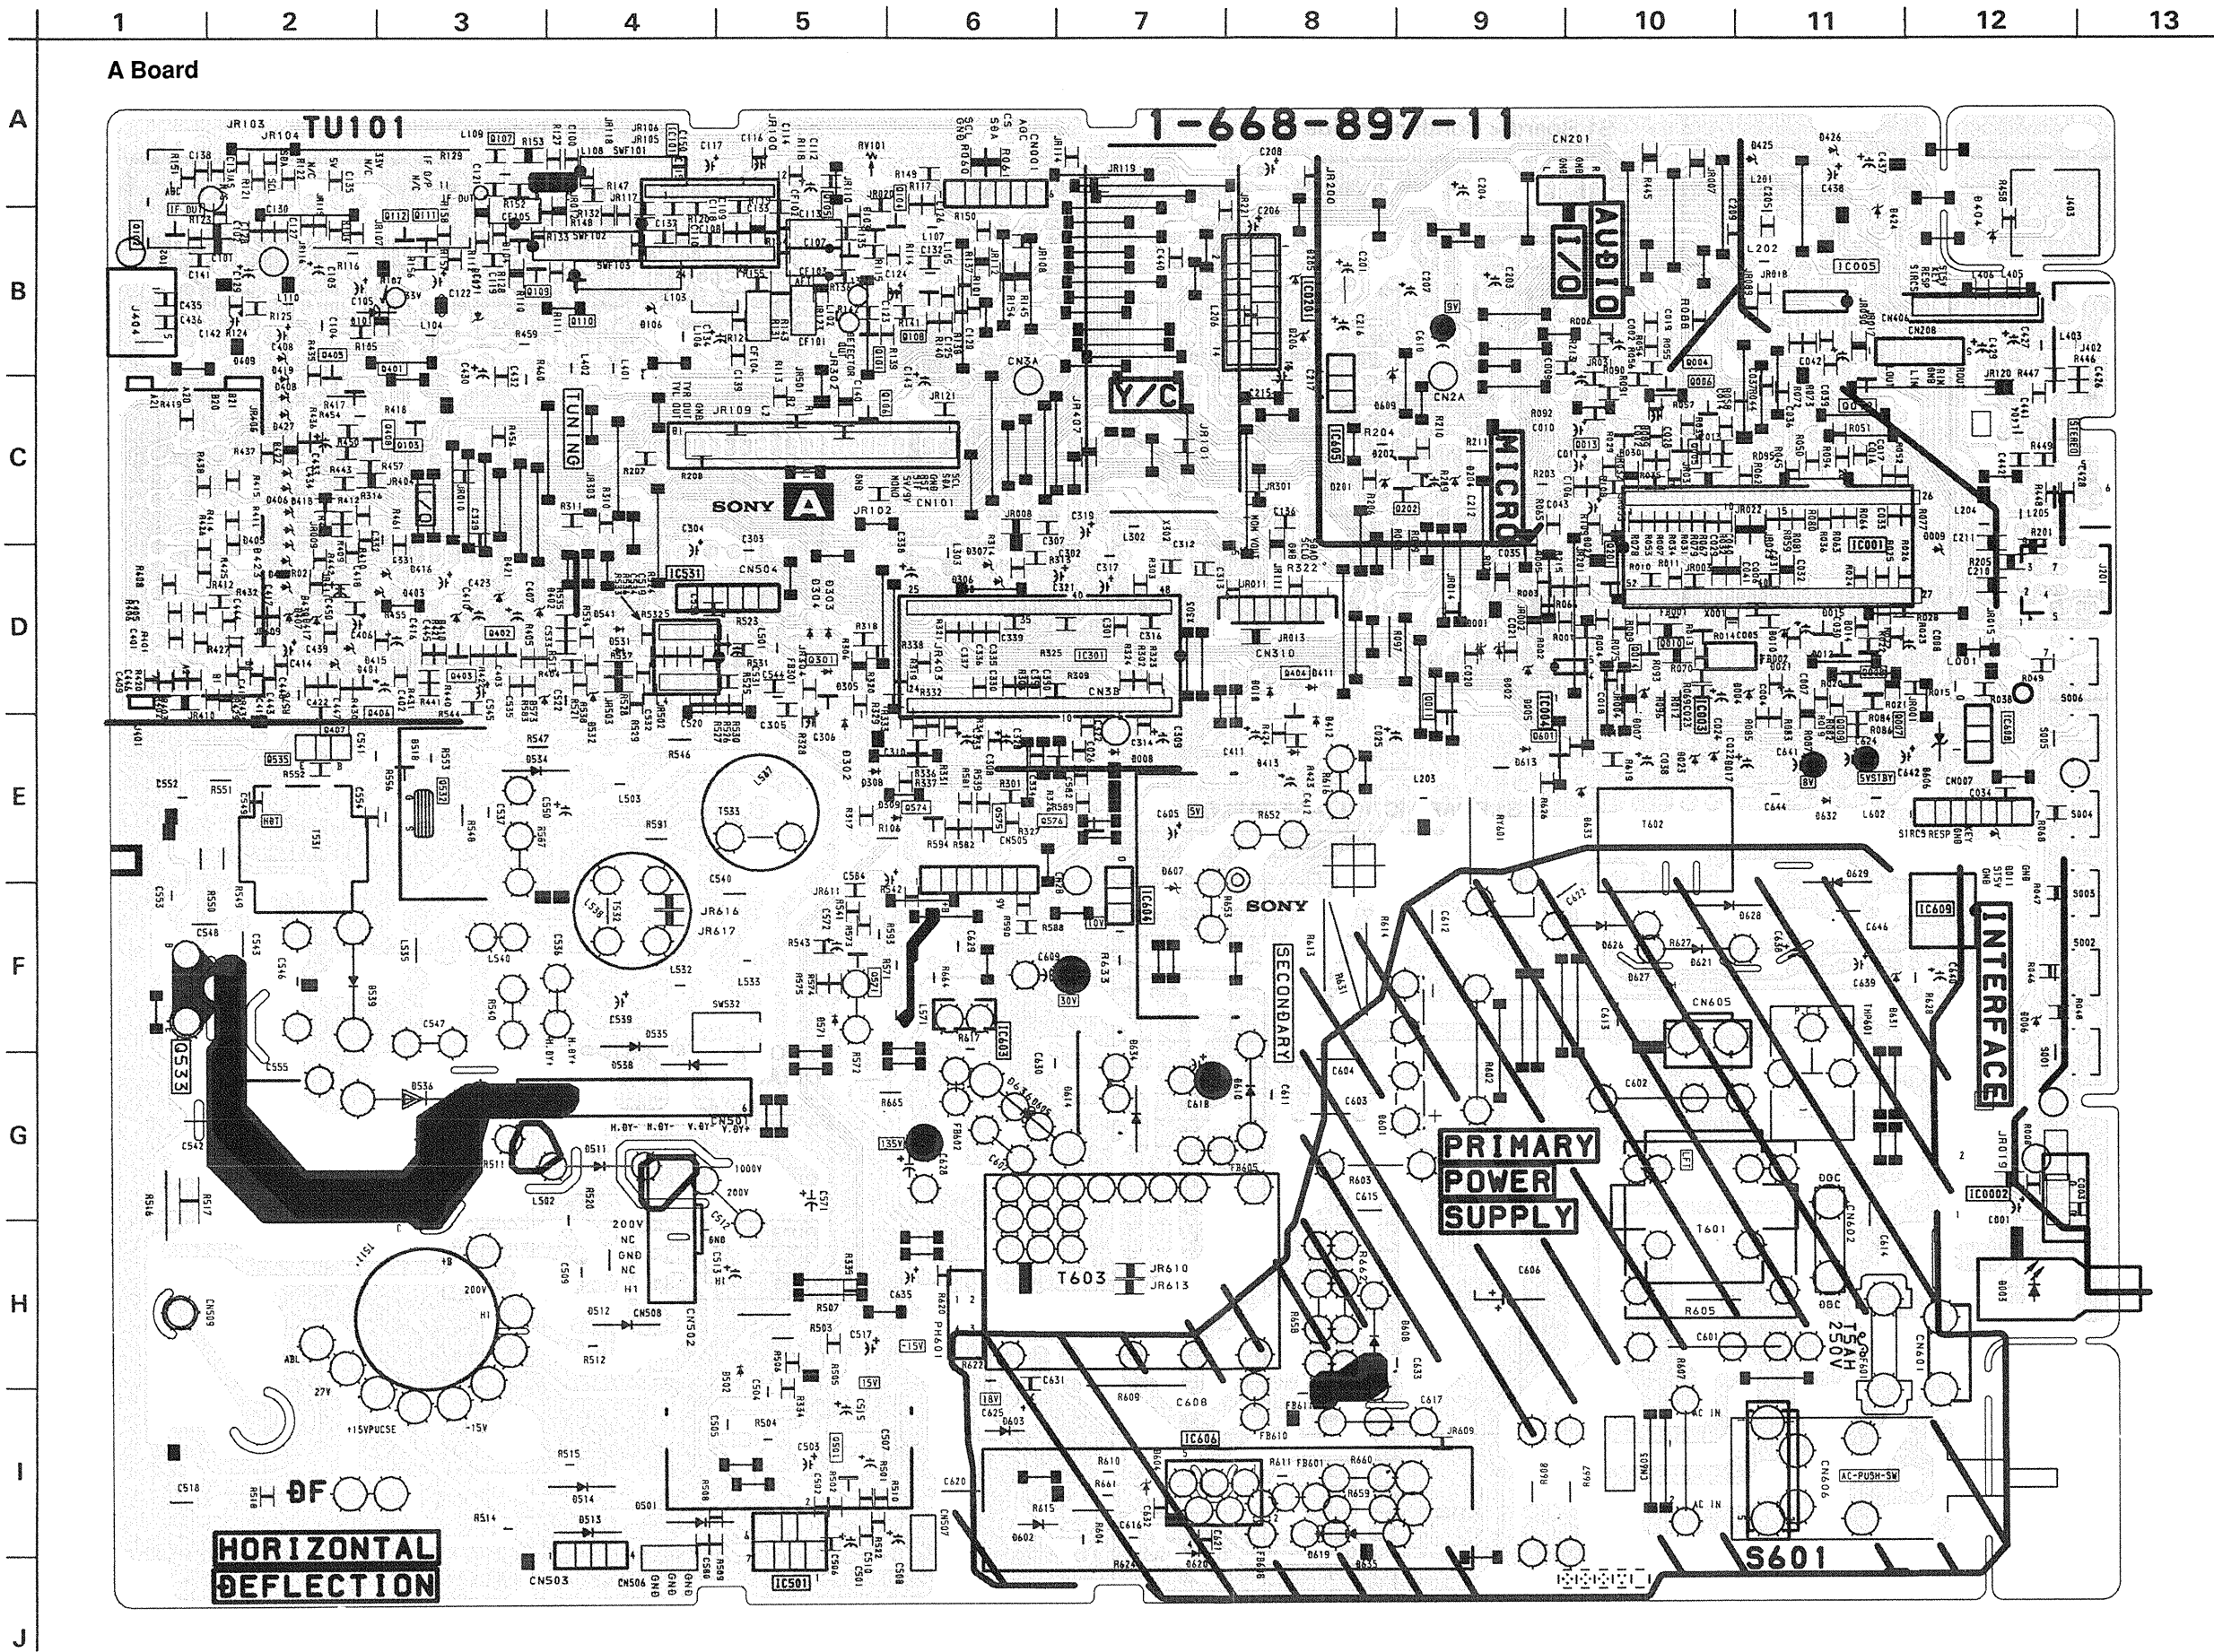


NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

A BOARD TRANSISTOR VOLTAGE TABLE


Ref No	Transistor Voltage Table		
	(B) Base	(C) Collector	(E) Emitter
Q004	4.7	0.7	4.9
Q005	0.3	4.8	-
Q006	-	2.0	-
Q007	-	4.9	-
Q008	-	4.9	-
Q009	-	4.9	-
Q010	0.6	-	-
Q011	0.5	-	-
Q012	-	4.8	-
Q101	2.0	-	2.6
Q109	-	4.7	-
Q110	4.3	-	-
Q111	2.3	2.9	2.9
Q112	2.9	-	-
Q202	0.6	-	-
Q401	8.0	3.4	8.6
Q405	4.4	8.8	3.7
Q408	2.6	8.0	2.0
Q532	7.3	3.1	-
Q533	-0.2	-152.0	-
Q535	-0.7	92.0	-
Q571	134.2	-	134.4
Q574	-	2.0	-
Q576	3.4	6.7	2.8
Q601	4.0	3.6	4.8

A BOARD IC VOLTAGE TABLE

IC Voltage Table								
Ref No	Pin No	Voltage (V)	Ref No	Pin No	Voltage (V)	Ref No	Pin No	Voltage (V)
IC001	4	0.8	IC101	1 - 2	3.2	IC201	34 - 35	3.3
	6	3.2		3	4.8		41	5.0
	7 - 8	4.8		4	3.0		42	8.6
	9	0.3		5	2.8		43	5.0
	10	2.0		6	2.7		44	8.8
	11	1.5		7	3.9		45	5.2
	12	4.7		8	2.2		48	1.5
	19	3.6		12	2.0		1	15.3
	20	4.3		15	1.5		5	15.3
	21	4.8		17	0.3		7	15.3
	24	2.5		18 - 19	2.6		10	4.5
	25	2.1		21	4.7		12	15.3
	26	2.4		22	0.9		13	31.2
	30	4.8		23 - 24	3.2		14	15.3
	31	5.0		1	3.3		1	1.4
	36	0.2		2	5.0		2	14.0
37	0.1	3	4.3	3	-13.0			
38 - 39	5.0	4	5.0	4	-14.0			
41 - 42	2.2	6	4.4	5	0.2			
44	4.8	8	4.5	6	14.5			
45	2.8	11	3.9	7	1.4			
47	0.1	12	2.4	1	1.6			
48	2.4	13	3.5	2	1.7			
49	3.3	14	3.4	3	1.9			
50	3.1	15	5.6	5	2.8			
51	0.1	16	7.6	6	2.0			
5 - 6	4.8	18	1.3	7	7.3			
7	3.3	19	2.4	8	8.8			
8	3.2	20	3.8	IC606	1 - 2	-60.0		
9	3.2	21	1.6	4	-51.3			
10	4.7	22 - 24	1.5	IC609	4	-58.0		
12	4.7	26 - 28	4.5					
13	1.5	30	4.5					
14	4.7	31 - 32	4.4					
16	4.7	33	8.1					

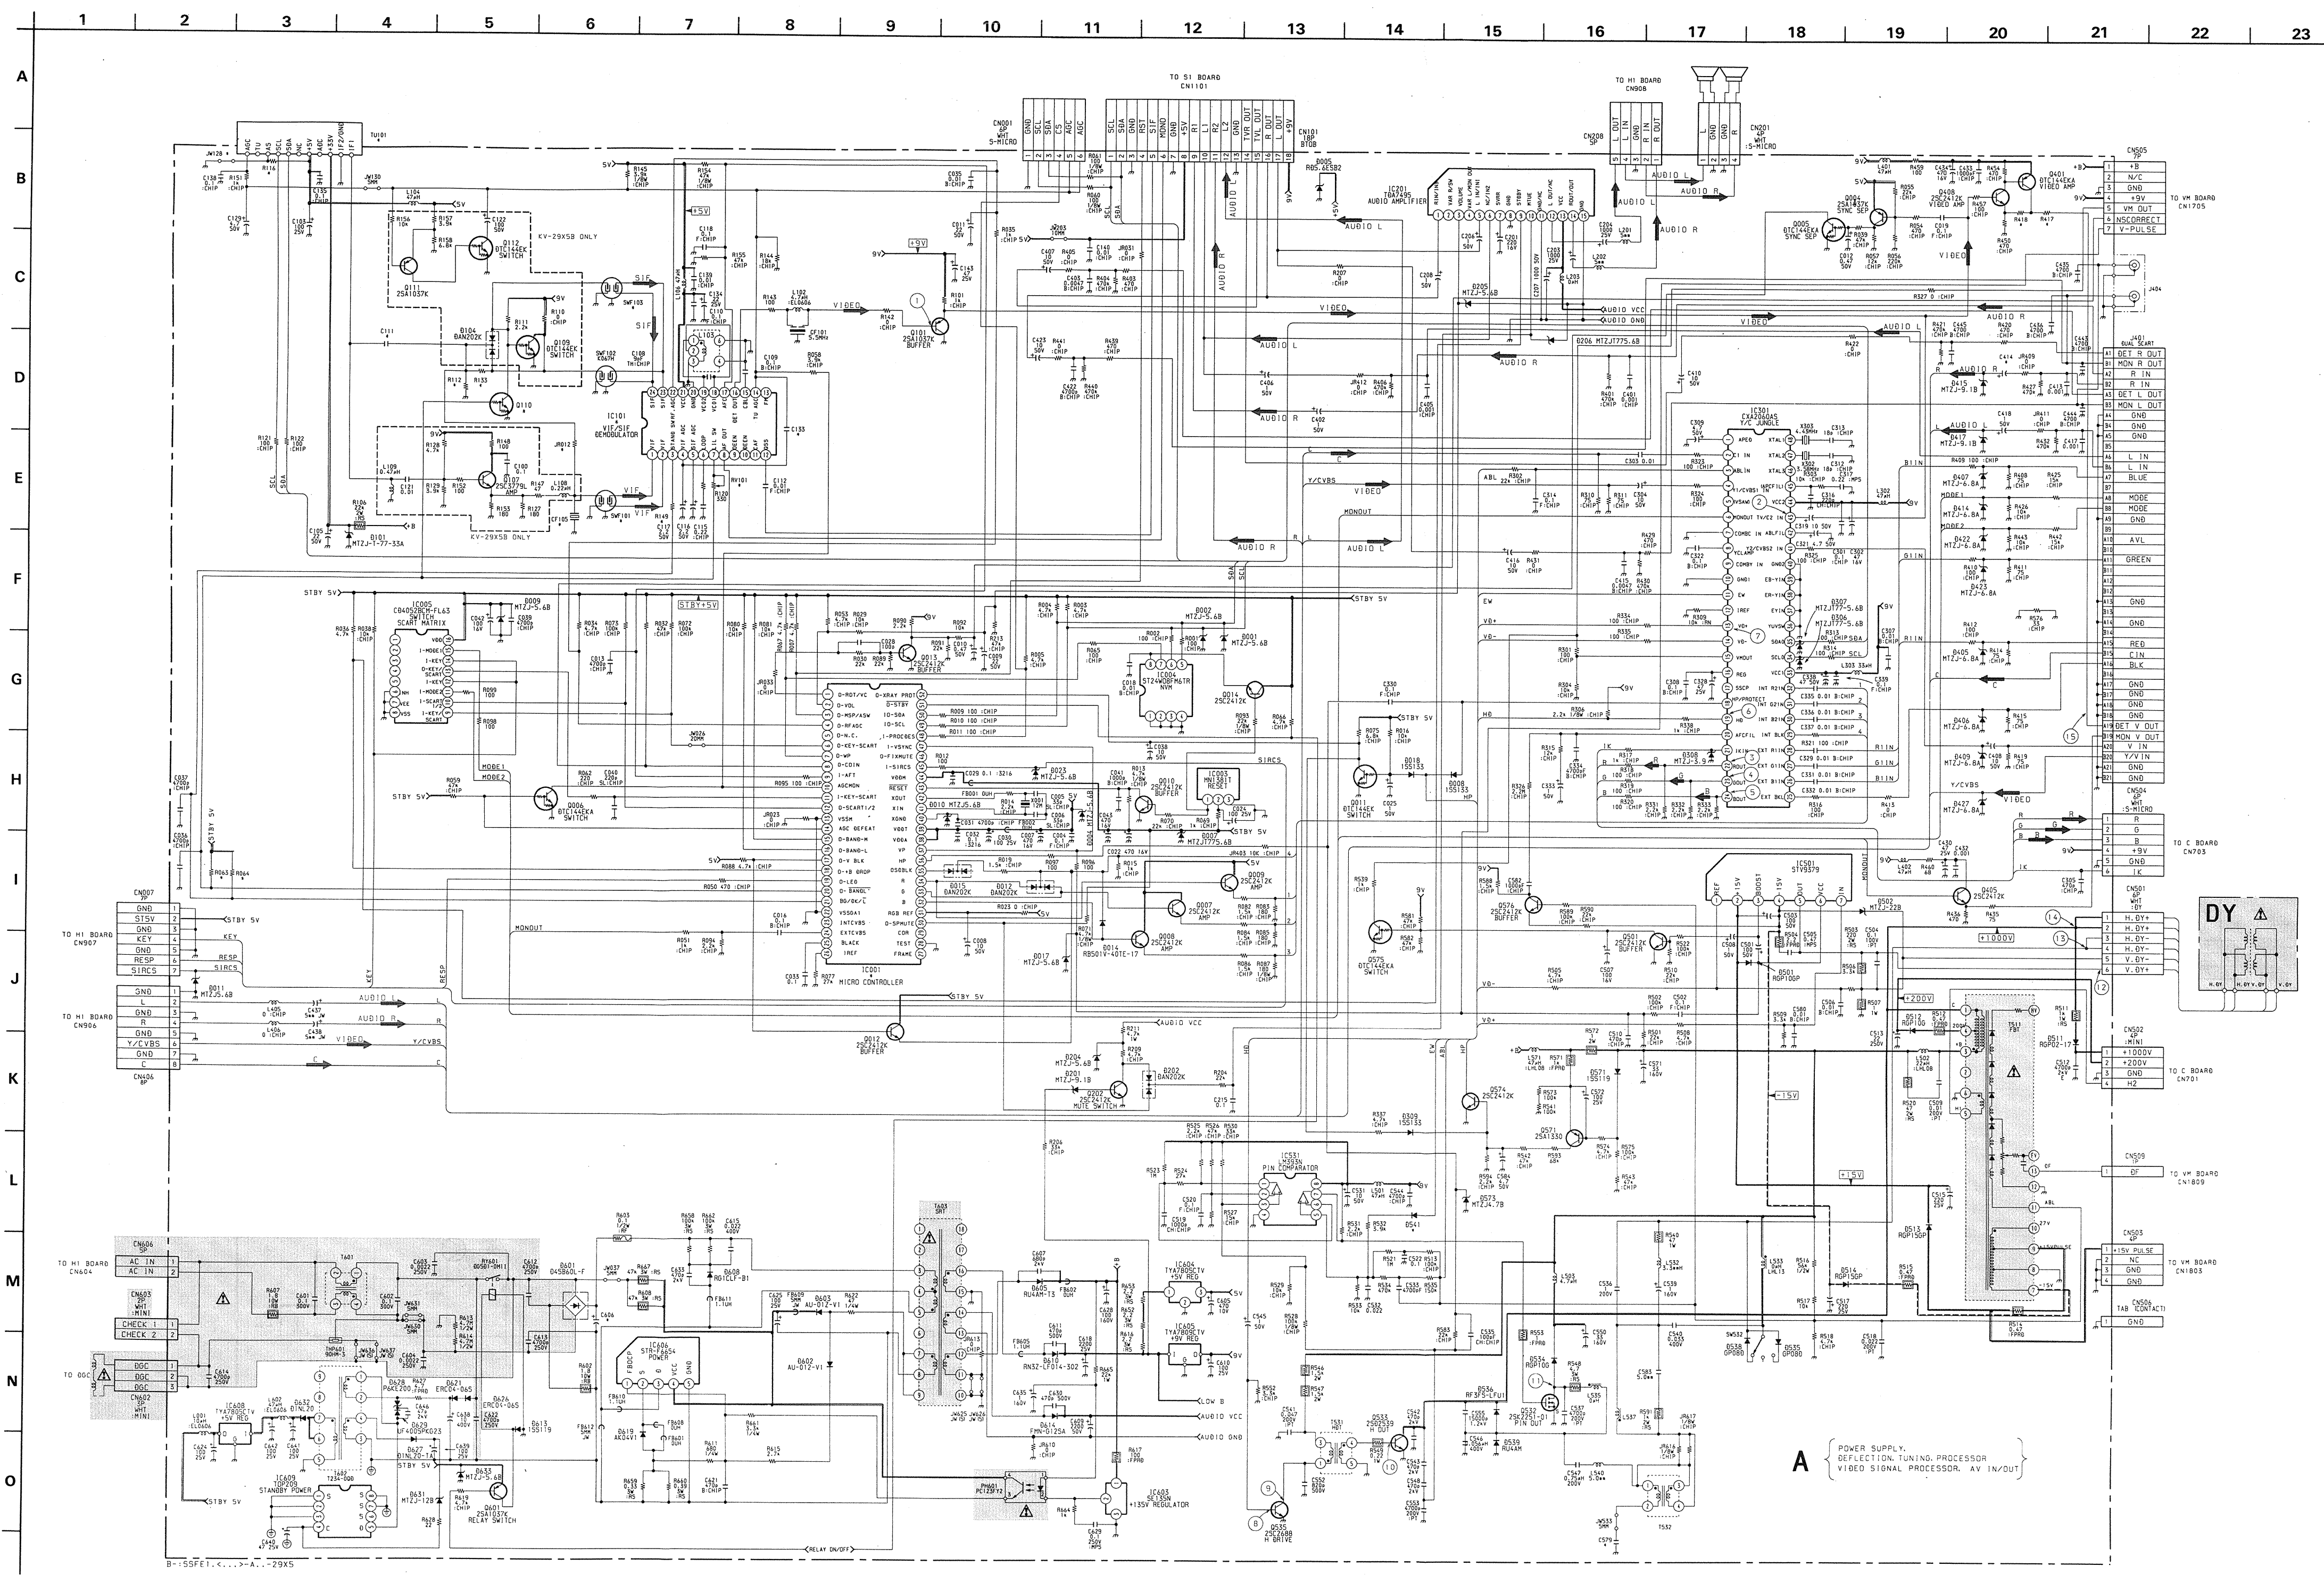


WAVEFORMS A BOARD

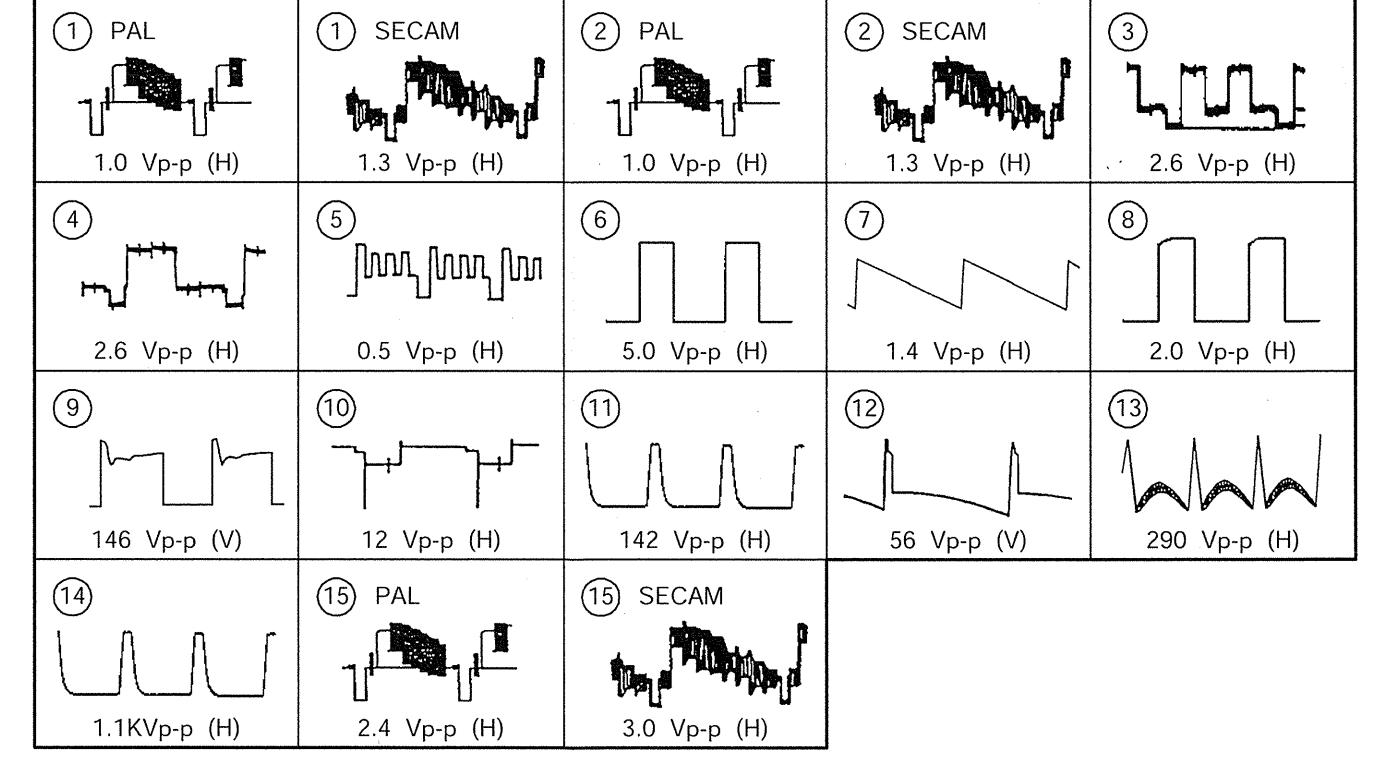


A BOARD * MARK

Ref	29X5A	29X5B	29X5D	29X5E	29X5K	29X5L	29X5R	29X5U
C111	0	0.1UF	0	0	0	0	0	0
C133	-	1UF	-	-	-	-	-	-
C14	1UF	0.001UF	1UF	1UF	0.001UF	1UF	1UF	1UF
C579	-	LEAD JUMPER (5.0MM)	-	-	LEAD JUMPER (5.0MM)	-	-	LEAD JUMPER (5.0MM)
C606	330UF	330UF	330UF	330UF	-	330UF	330UF	330UF
CF105	-	TRAP CERAMIC	-	-	-	-	-	TRAP CERAMIC
D541	LEAD JUMPER	-	LEAD JUMPER	LEAD JUMPER	-	LEAD JUMPER	LEAD JUMPER	LEAD JUMPER
IC001	SA4547PS/ MIA/040	SA4547PS/ MIA/038	SA4547PS/ MIA/038	SA4547PS/ MIA/038	SA4547PS/ MIA/038	SA4547PS/ MIA/038	SA4547PS/ MIA/038	SA4547PS/ MIA/038
IC101	TD9817/V	TD9817/V1	TD9817/V	TD9817/V	TD9817/V1	TD9817/V1	TD9817/V	TD9817/V
JR012	0	0	0	0	0	0	0	0
JW128	47K	LEAD JUMPER (5.0MM)	47K	LEAD JUMPER (5.0MM)	47K	47K	LEAD JUMPER (5.0MM)	LEAD JUMPER (5.0MM)
Q110	-	DTC144EK-T146	-	-	-	-	-	-
RO63	-	4.7K	-	-	-	-	-	-
RO64	-	4.7K	-	-	-	-	-	-
R112	-	2.2K	-	-	-	-	-	-
R116	47K	-	47K	47K	47K	47K	-	-
R133	0	-	0	0	0	0	0	0
R149	-	1K	-	-	-	-	-	-
R417	75	75	75	75	75	75	75	68
R418	470 1/2W	470 1/2W	470 1/2W	470 1/2W	470 1/2W	470 1/2W	470 1/2W	470 1/2W
RV101	-	22K	-	-	-	-	-	-
SWF101	1-767-874-11	1-579-273-11	1-767-874-11	1-767-874-11	1-767-874-11	1-579-273-11	1-767-874-11	1-767-874-11
SWF103	-	FILTER, SURFACE WAVE	-	-	-	-	-	-
TU101	TELE9-001A	TELE9-001A	TELE9-001A	TELE9-001A	BTP-AC411	TELE9-001A	BTP-AC402	BTP-AU602

A { POWER SUPPLY, DEFLECTION, TUNING, PROCESSOR VIDEO SIGNAL PROCESSOR, AV IN/OUT }

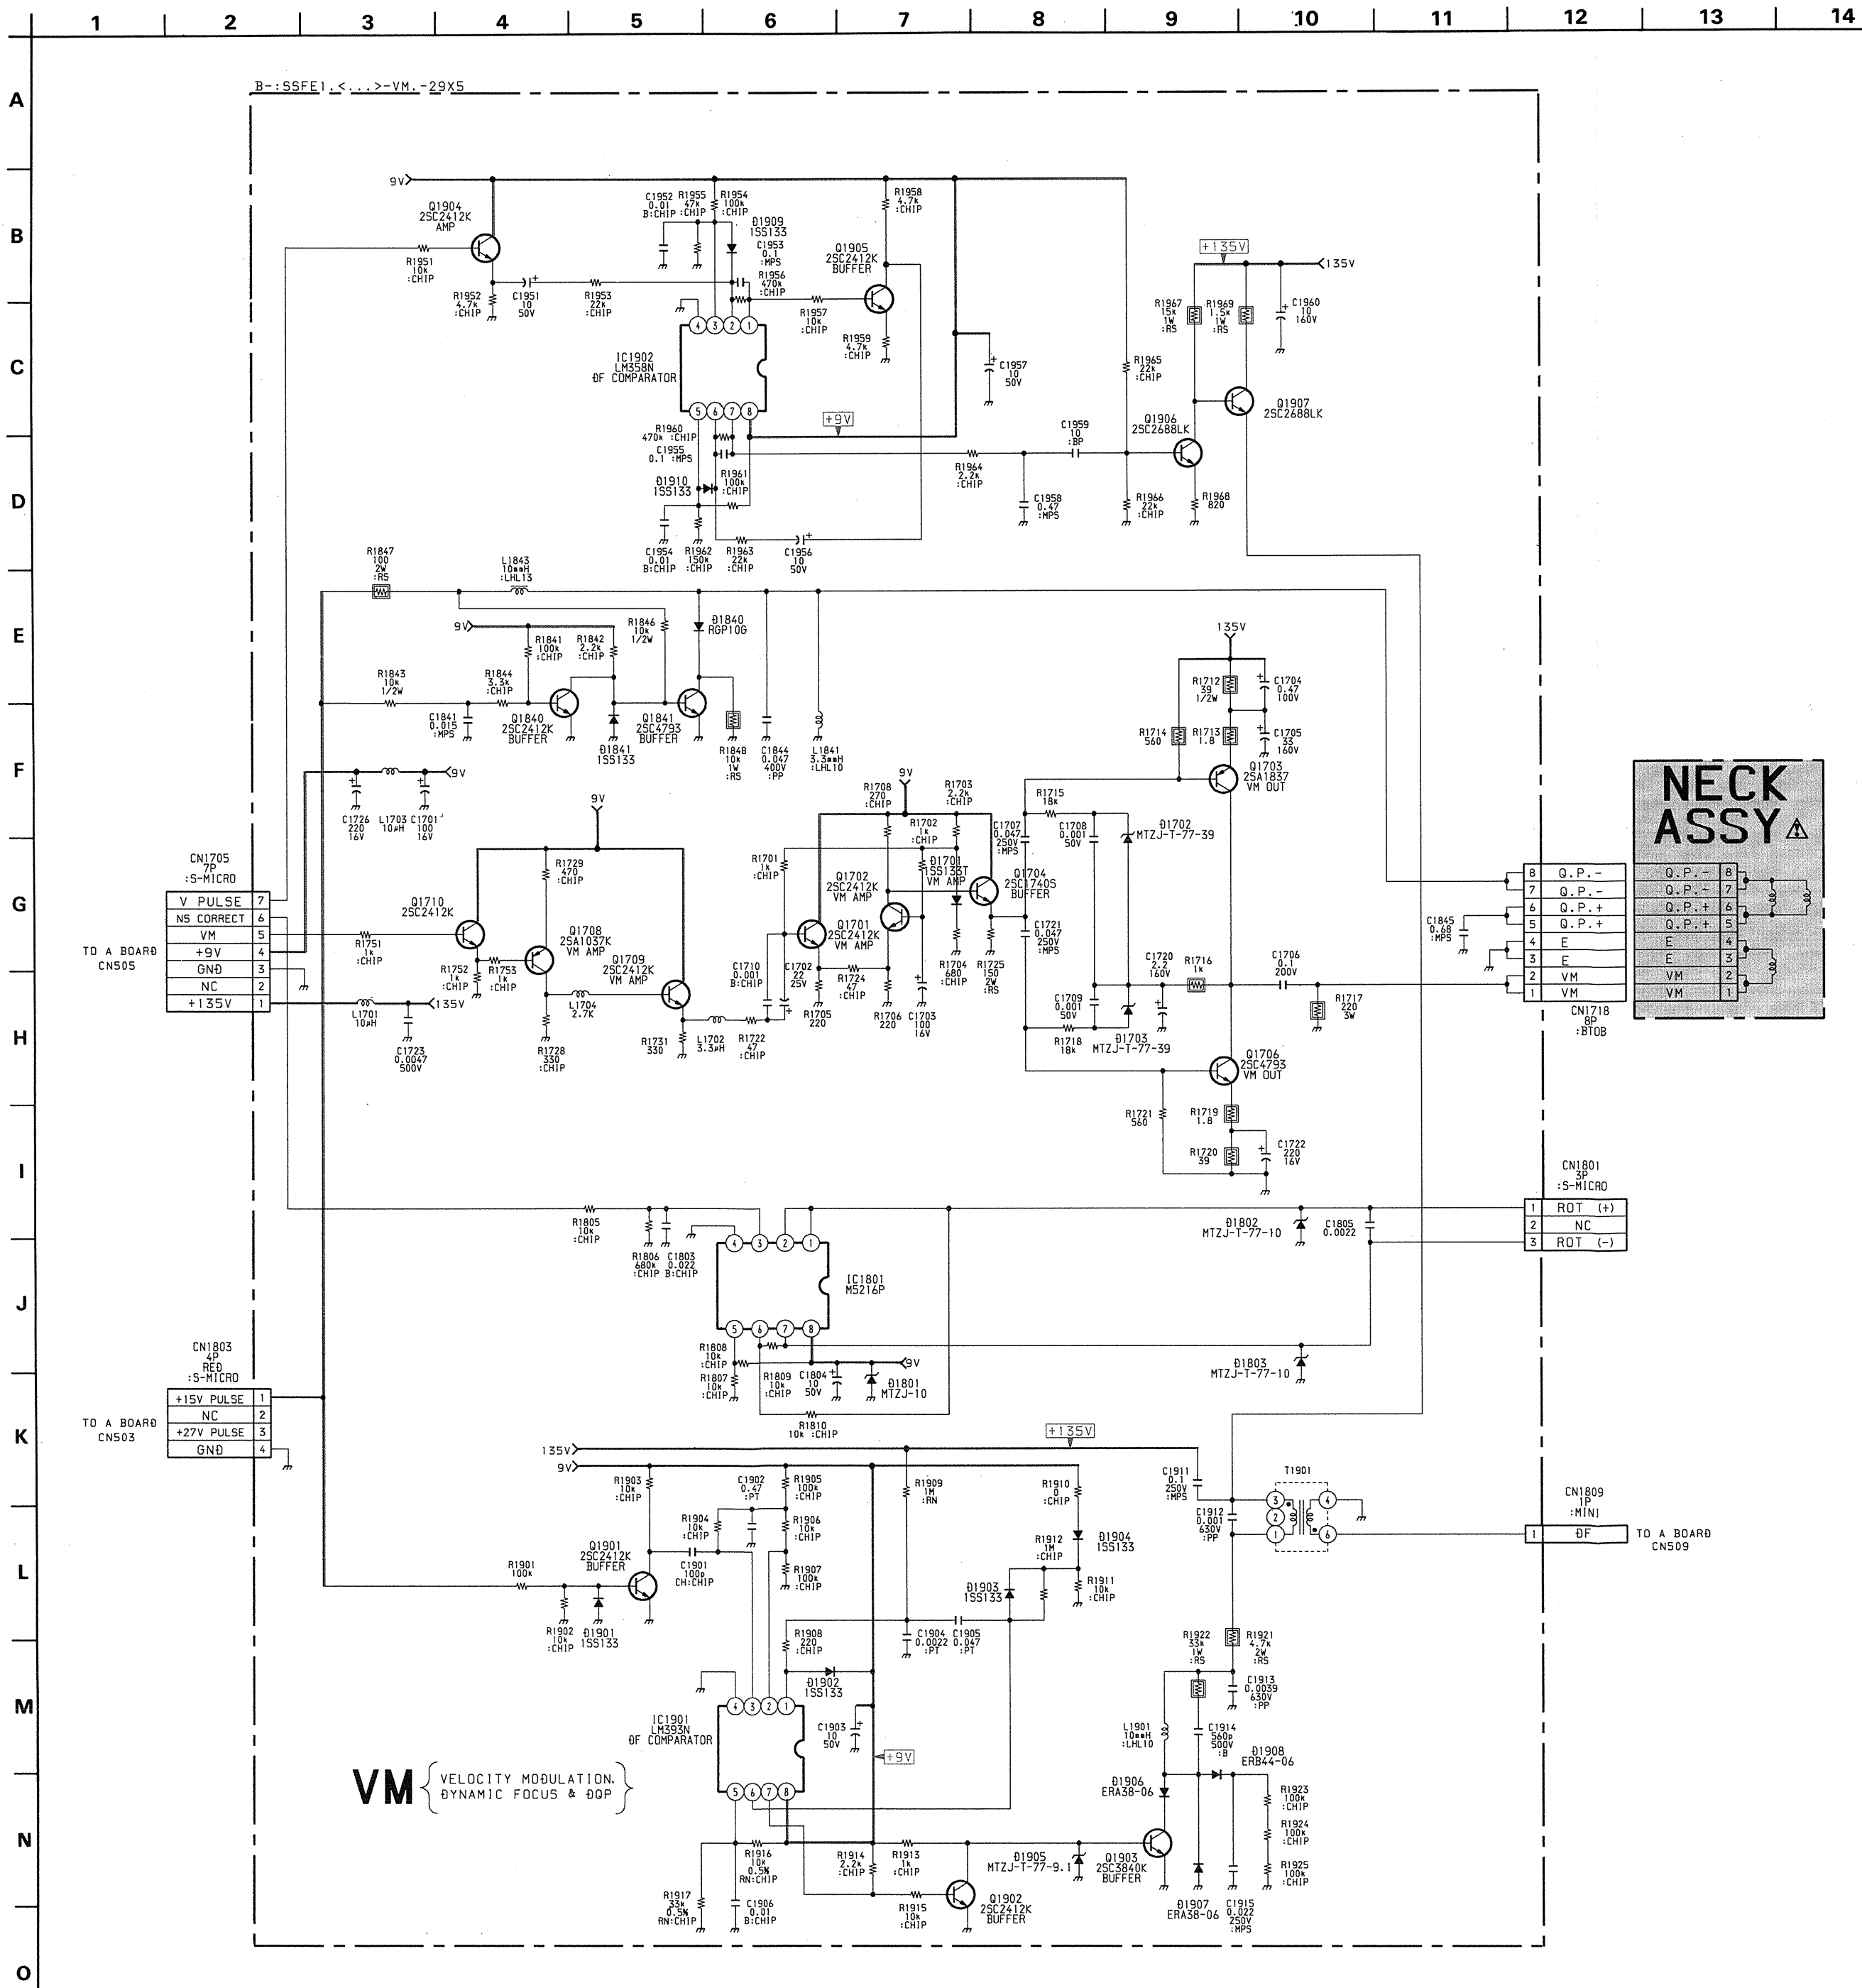

VM VELOCITY MODULATION, DYNAMIC FOCUS & DQP

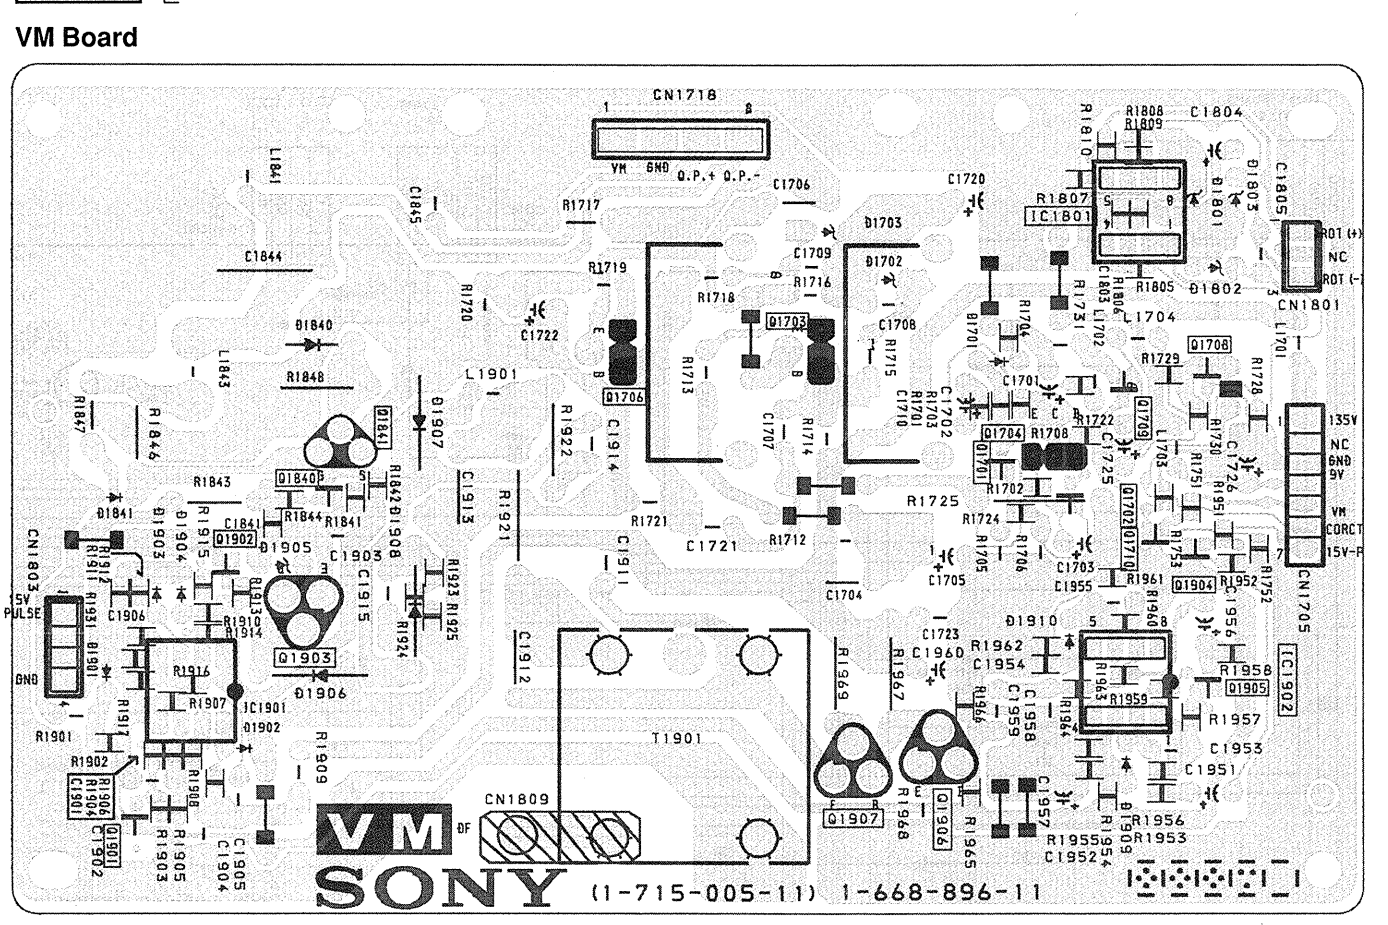


VM BOARD IC VOLTAGE TABLE

Ref No	Pin No	Voltage (V)
IC1801	1-3	5.0
	5-6	4.3
	7	3.7
	8	8.0
	9	4.8
	1	1.7
	2	4.0
IC1901	3	4.5
	5	6.7
	6	6.8
	7	3.6
	8	8.0
	1-3	2.8
	5-6	5.2
	7	5.0
IC1902	8	8.0
	8	8.0

VM BOARD TRANSISTOR VOLTAGE TABLE

Ref No	(B) Base	(C) Collector	(E) Emitter
Q1701	2.4	8.7	1.8
Q1702	2.4	6.5	1.8
Q1703	133.4	52.0	133.8
Q1704	8.7	8.5	5.8
Q1706	0.8	52.0	0.5
Q1708	5.0	2.1	5.6
Q1709	5.4	8.0	4.7
Q1710	5.6	8.0	5.0
Q1840	-0.3	4.7	-
Q1901	0.4	1.3	-
Q1902	0.4	0.3	-
Q1903	0.3	62.0	-
Q1904	-	8.0	0.1
Q1905	2.7	6.5	2.2
Q1906	4.0	68.8	3.4
Q1907	68.7	122.2	68.2
Q1841	4.7	18.0	-



C RGB OUT

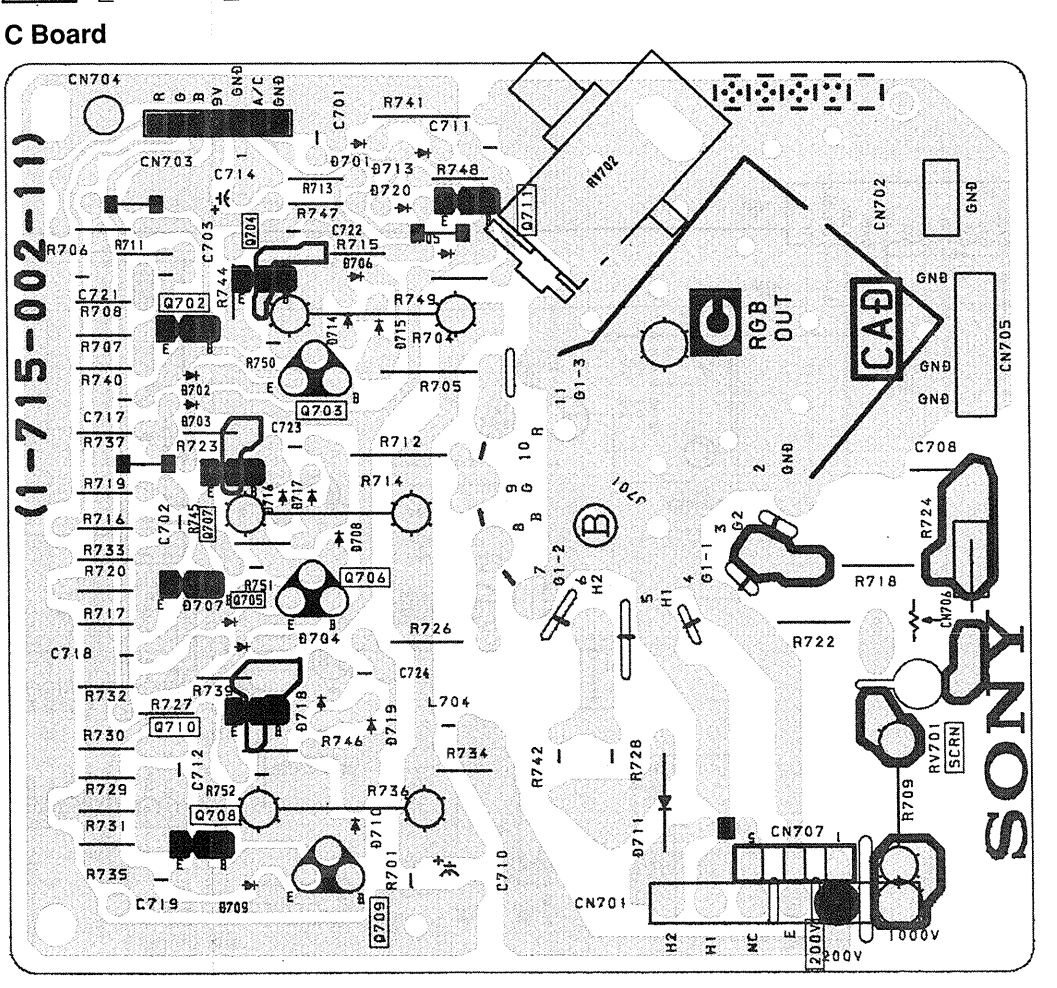

C BOARD TRANSISTOR VOLTAGE TABLE


Ref No	(B) Base	(C) Collector	(E) Emitter
Q702	1.5	8.3	1.1
Q703	8.8	169.8	8.3
Q704	169.5	1.9	209.5
Q705	1.5	8.3	1.1
Q706	8.8	170.7	8.3
Q707	170.5	1.9	215.7
Q708	1.5	8.3	1.0
Q709	8.9	171.3	8.3
Q710	171.2	1.9	206.3

WAVEFORMS C BOARD

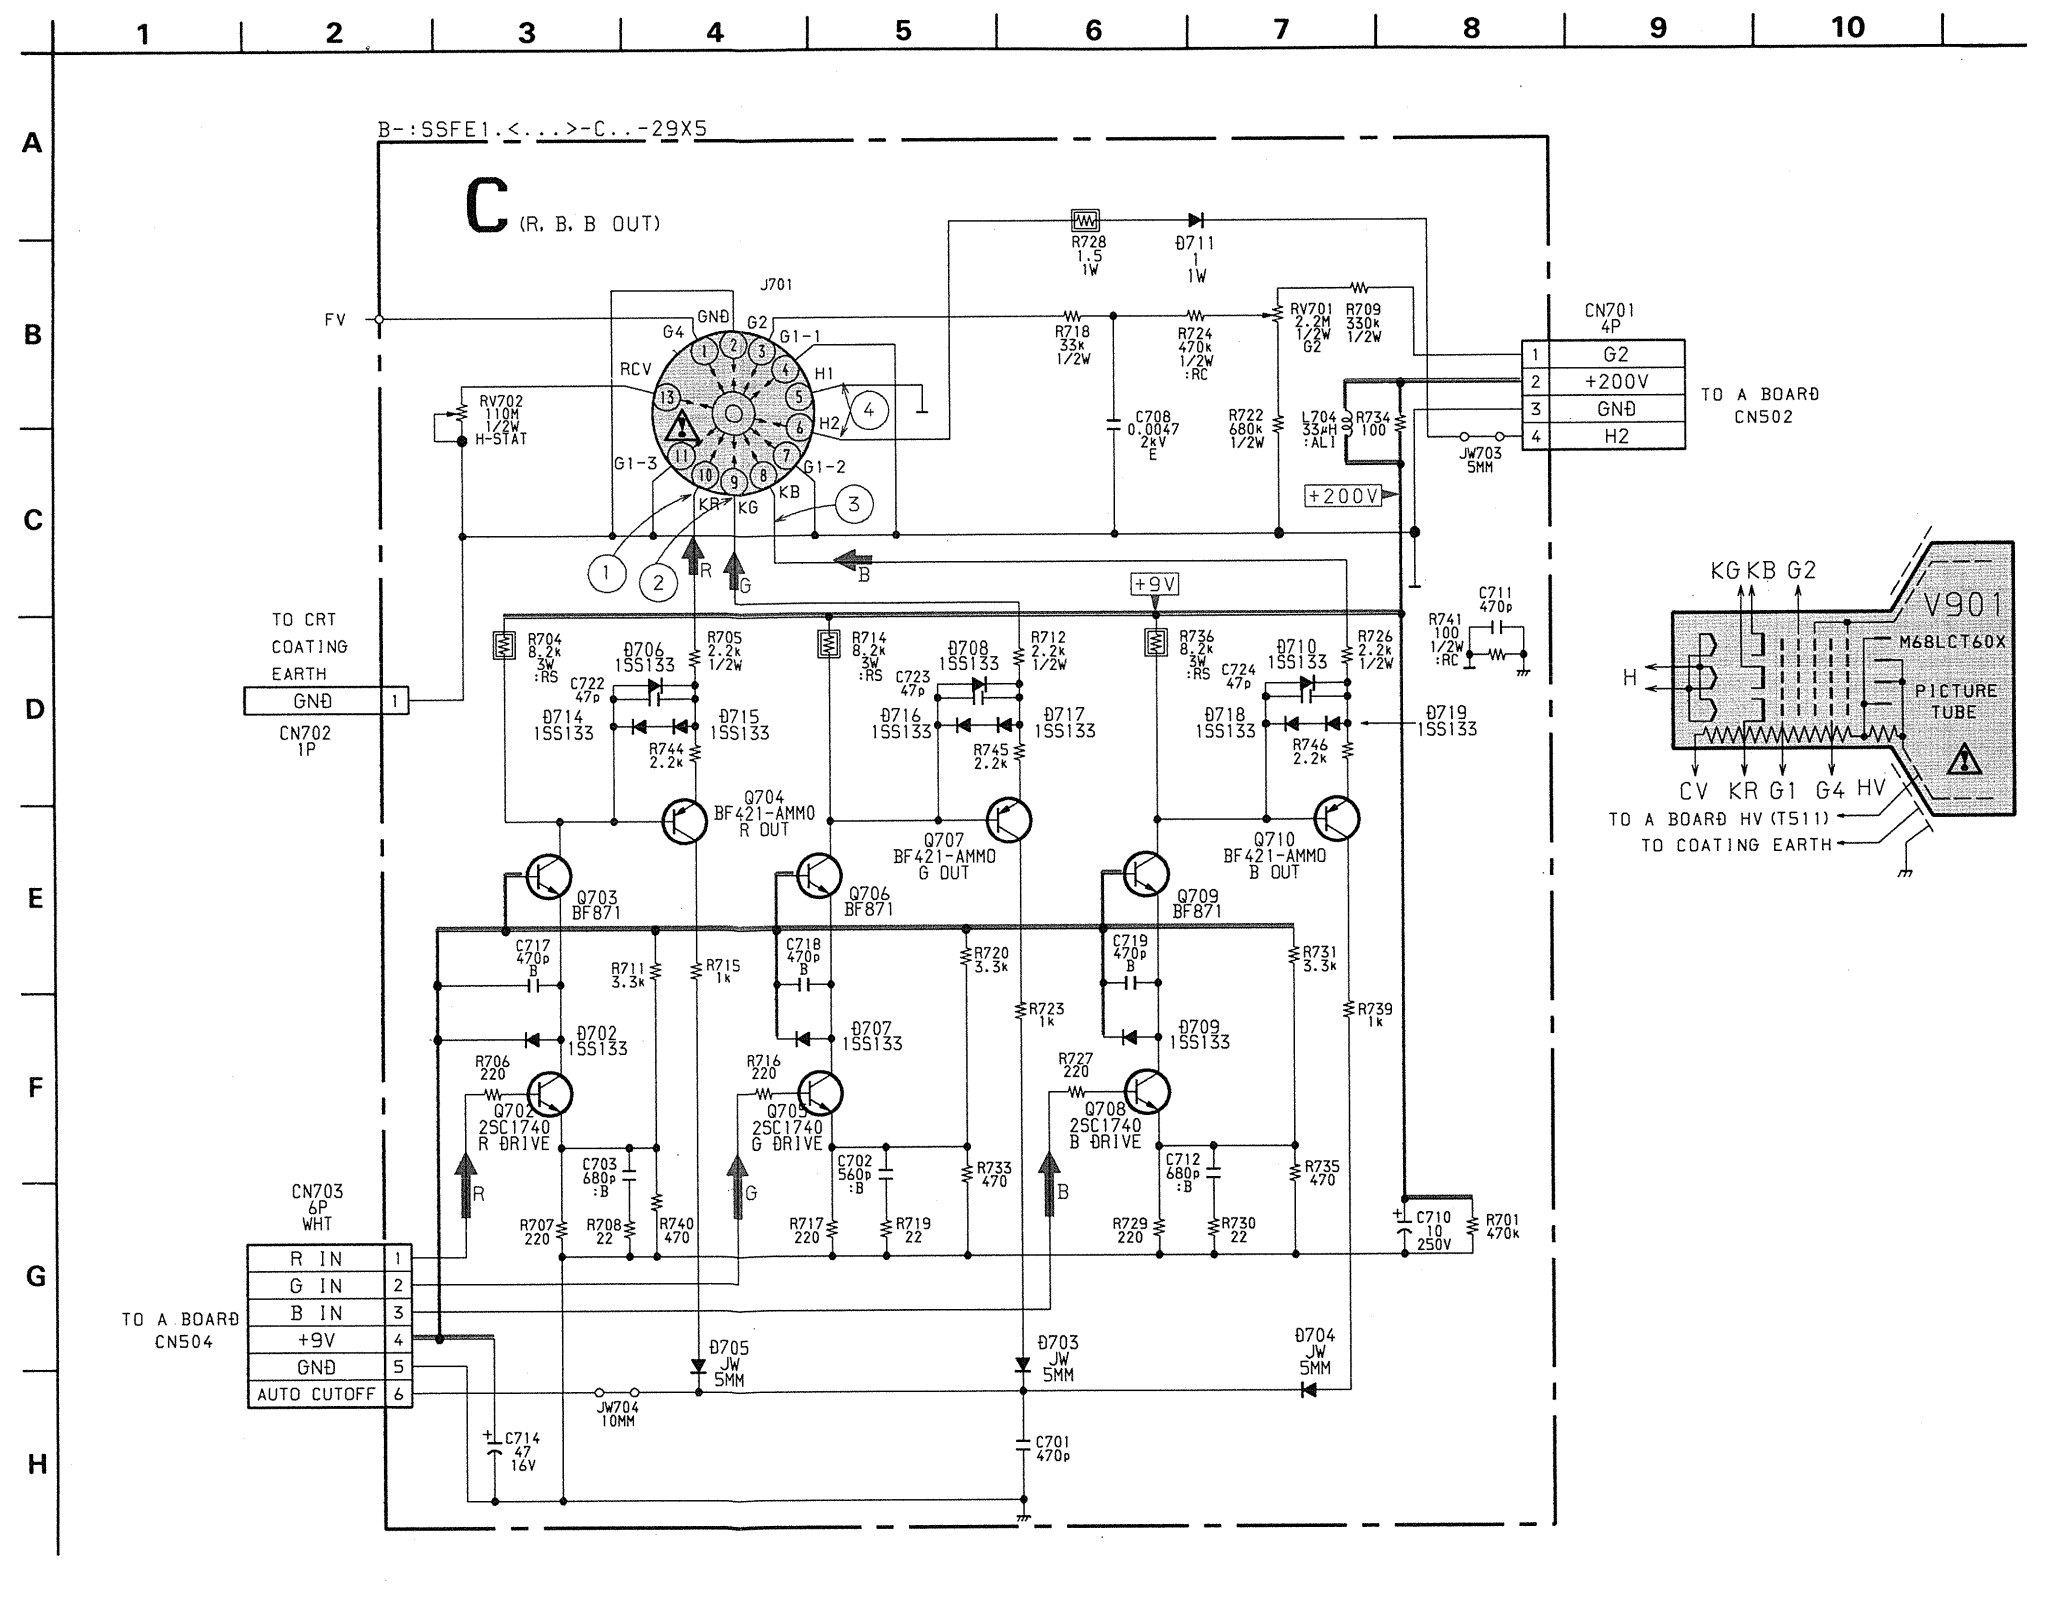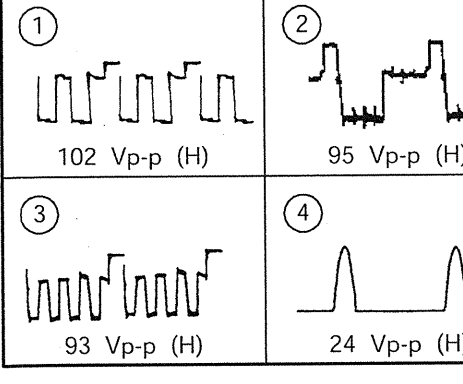


5-4 SEMICONDUCTORS


CD4052BCM

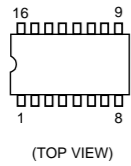


LM358DR-EZ
NJM4558M-TE2
NJM2903D

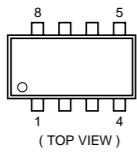


LM393P
TDA2822M
TEA2124

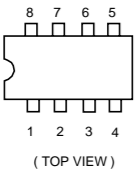


SAA5497PS/MIA/038
SAA5497PS/MIA/039
SAA5497PS/MIA040

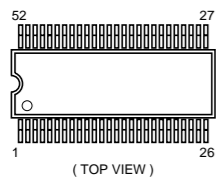


SBX1981-51

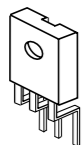


SE-135N
SE135N-LF12

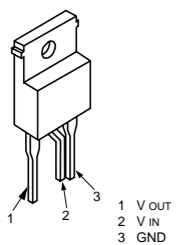


STR-F6654

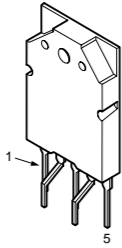


STV9379

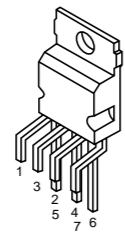


ST24W08FM6TR

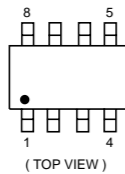


TDA7495

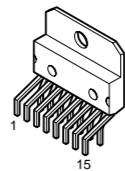


TDA9818-V1
TDA9817-V1

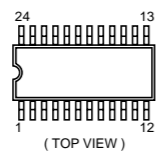


TDA9875
TDA9870

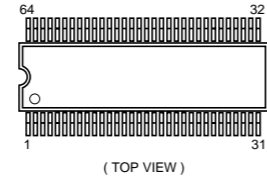


TOP209P

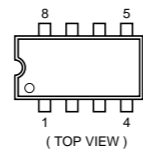


TYA7805CTV
TYA7809CTV

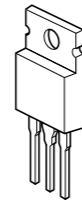


BF421-AMMO
2SA1091-O

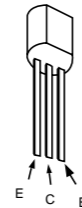


2SC688-LK

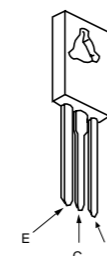


2SA1837

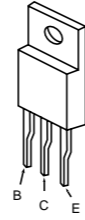


2SC4793

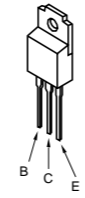


BF871-127

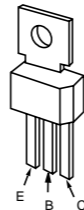


DTA144ESA
DTA144ESA-TP
DTC114EK
DTC114EKA-T146
DTC143TKA-T146
DTC144EKA-T-146R
2SA1037K-T-146-
R2SA1162-G
2SC2412K-QR
2SC2412K-T-146-R

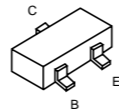


IRF614

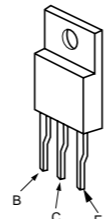


2SA933AS-QRT
2SA933AS-RT
2SC1740S-RT

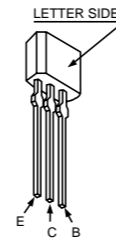

2SK2251-01-F19

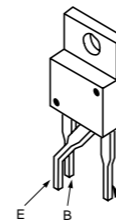


AK04-V1
AU-012-V1
BYD33G
BYD33G-
AMMO
DINL20-TR
ERB44-06TP1
EG-1Z-V1
EL1Z
ERD28-06S

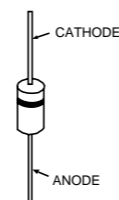


ERD28-08S
ERC06-15
FMN-G12S
RG1CLF-B1
RGP10GPKG23
RU3YX-LF-C4
RU3YX-V1
RU-4AM-T3
1SS292T-77

DAN202K
DAN202K-T146

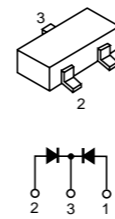


ERA81-004TP1
ERA83-006
MTZJ-T-77-3.9B
MTZJ-T-77-5.6B
MTZJ-T-77-5.6C
MTZJ-T-77-6.8A
MTZJ-T-77-6.8C
MTZJ-T-77-7.5C
MTZJ-T-77-9.1A
MTZJ-T-77-9.1A
MTZJ-T-77-10


MTZJ-T-77-33A
MTZJ-33C
MTZJ-7.5B
RD3.9ES-B2
RD5.6ESB2
RD6.8ES-B2
RD7.5ESB2
RD9.1ES-B3
1SS119-25TD
1SS133T-77

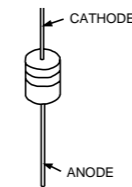

SEL12108-D

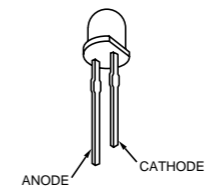


UF4005PK623

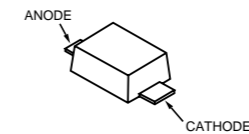


5-5. IC BLOCK DIAGRAMS


A BOARD IC501 STV 9379

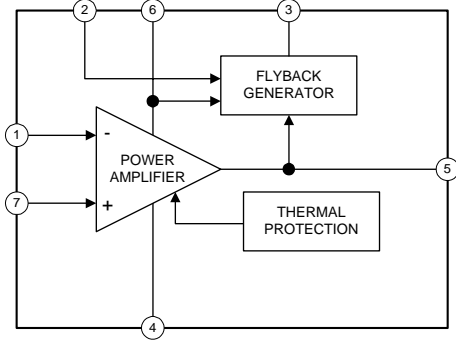


A BOARD IC201 TDA7495

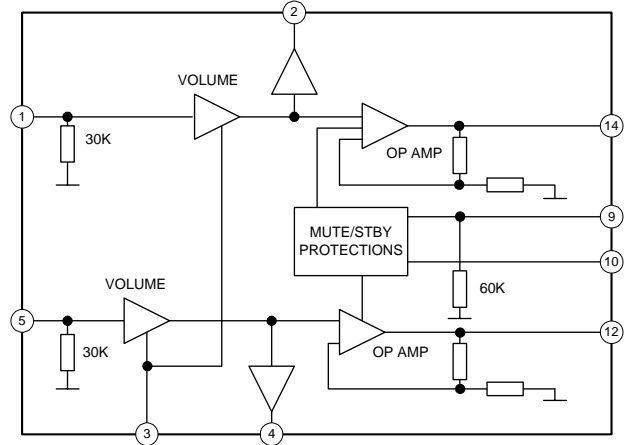


A BOARD IC101 TDA9817/V1

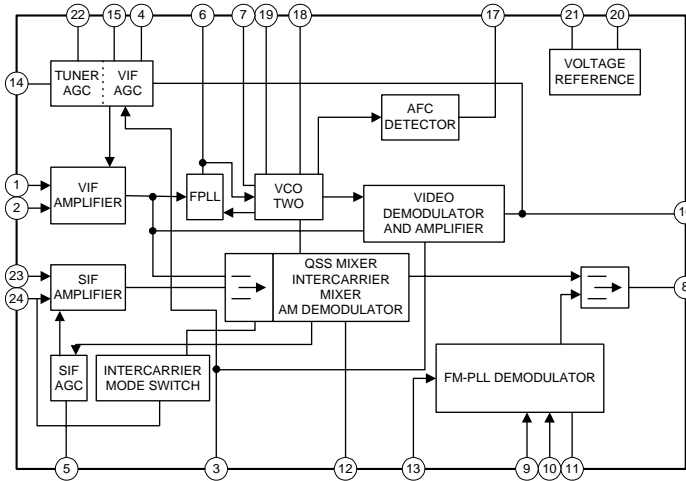

A BOARD IC606 STR-F6654

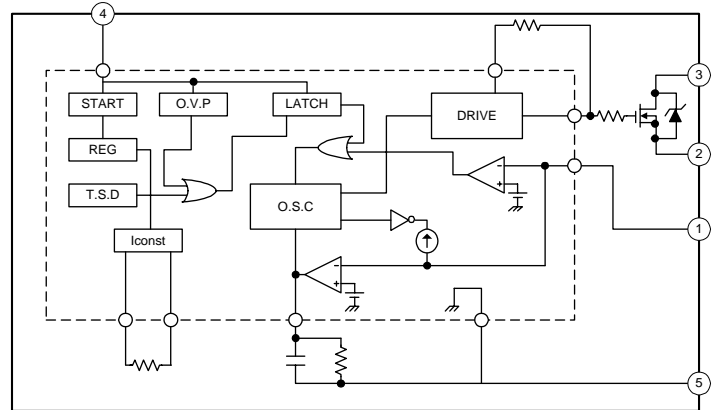

A BOARD IC301 CXA2060AS

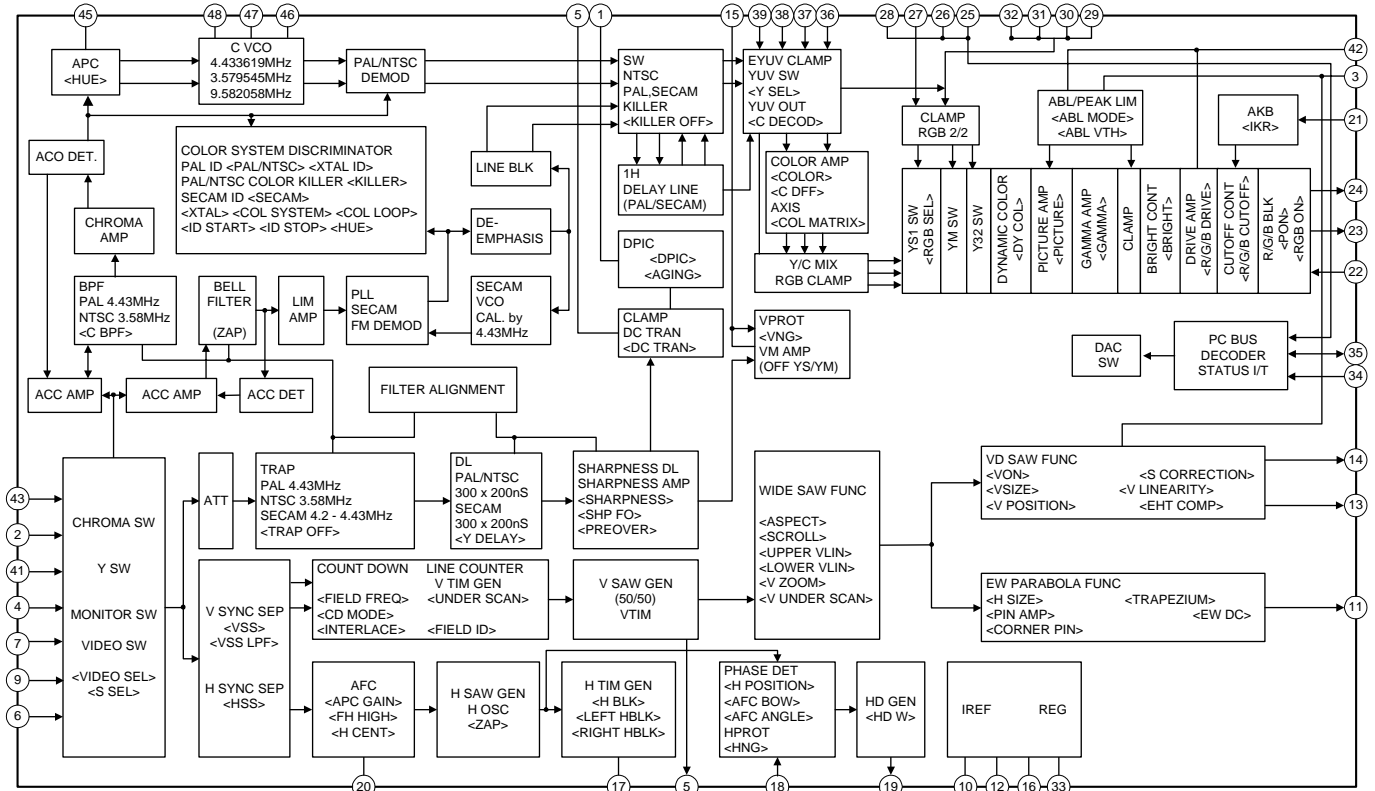

SECTION 6 EXPLODED VIEWS

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.


Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

NOTE :

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked “ * ” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

6-1. CHASSIS


- 7-685-663-79 x 1
- 7-685-663-71 x 4

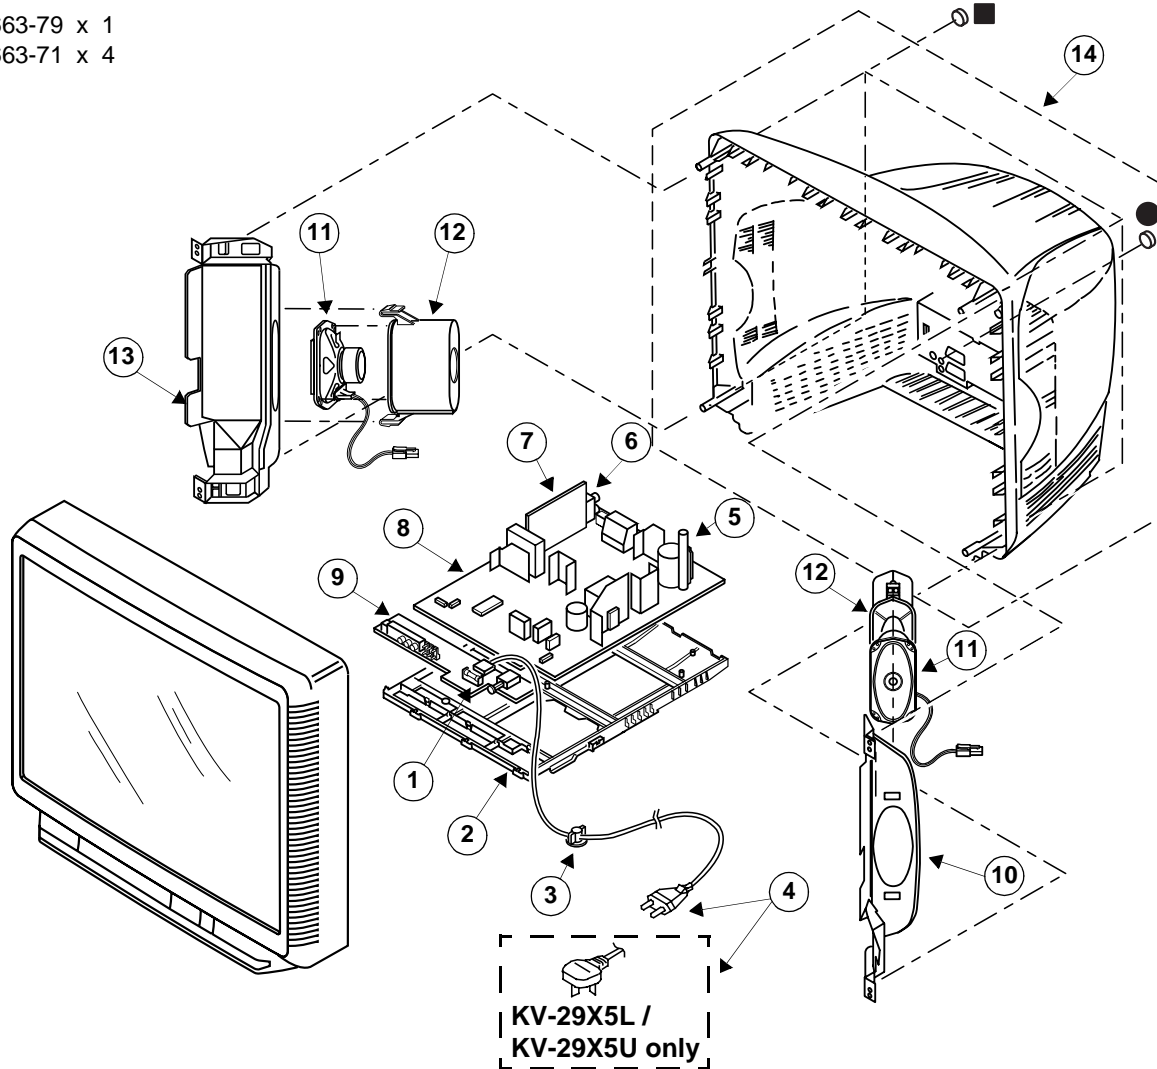

KV-29X5L /
KV-29X5U only

REF. NO.	PART. NO	DESCRIPTION	REMARK	REF. NO.	PART. NO	DESCRIPTION	REMARK
1	Δ 1-652-433-21	SWITCH, PUSH (AC POWER)		8	*A-1632-721-A	A BOARD, COMPLETE (KV-29X5A)	
2	4-204-051-01	BRACKET, MAIN			*A-1632-716-A	A BOARD, COMPLETE (KV-29X5B)	
3	4-202-531-01	AC CORD LOCK (SC)			*A-1632-715-A	A BOARD, COMPLETE (KV-29X5D)	
4	Δ 1-756-286-11	CORD, POWER (KV-29X5A/29X5B/29X5D/29X5E/29X5K/29X5R)			*A-1632-720-A	A BOARD, COMPLETE (KV-29X5E)	
	1-776-204-11	CORD, POWER (FILTER) (KV-29X5L/29X5U)			*A-1632-759-A	A BOARD, COMPLETE (KV-29X5K)	
5	Δ 1-453-265-11	TRANSFORMER ASSY, FLYBACK (NX-1681/U2B4)			*A-1632-722-A	A BOARD, COMPLETE (KV-29X5L)	
6	1-693-418-11	TUNER (TELE9-001A) (KV-29X5A/29X5B/29X5D/29X5E/29X5L)			*A-1632-717-A	A BOARD, COMPLETE (KV-29X5R)	
	8-598-432-00	TUNER (BTP-AC411) (KV-29X5K)		9	*A-1646-157-A	H1 BOARD, COMPLETE	
	8-598-361-01	TUNER (BTP-AC402) (KV-29X5R)		10	4-204-052-01	BAFFLE BOARD (R)	
	8-598-360-01	TUNER (BTP-AU602) (KV-29X5U)		11	1-503-902-11	SPEAKER (15X6.5 CM)	
7	*A-1652-053-A	S1 BOARD, COMPLETE (KV-29X5A/29X5D/29X5K/29X5R)		12	4-204-054-01	BOX, SPEAKER	
	*A-1652-056-A	S1 BOARD, COMPLETE (KV-29X5B)		13	4-204-053-01	BAFFLE BOARD (L)	
	*A-1652-052-A	S1 BOARD, COMPLETE (KV-29X5E/29X5L/29X5U)		14	X-4200-373-1	COVER ASSY, REAR	

6-2. PICTURE TUBE

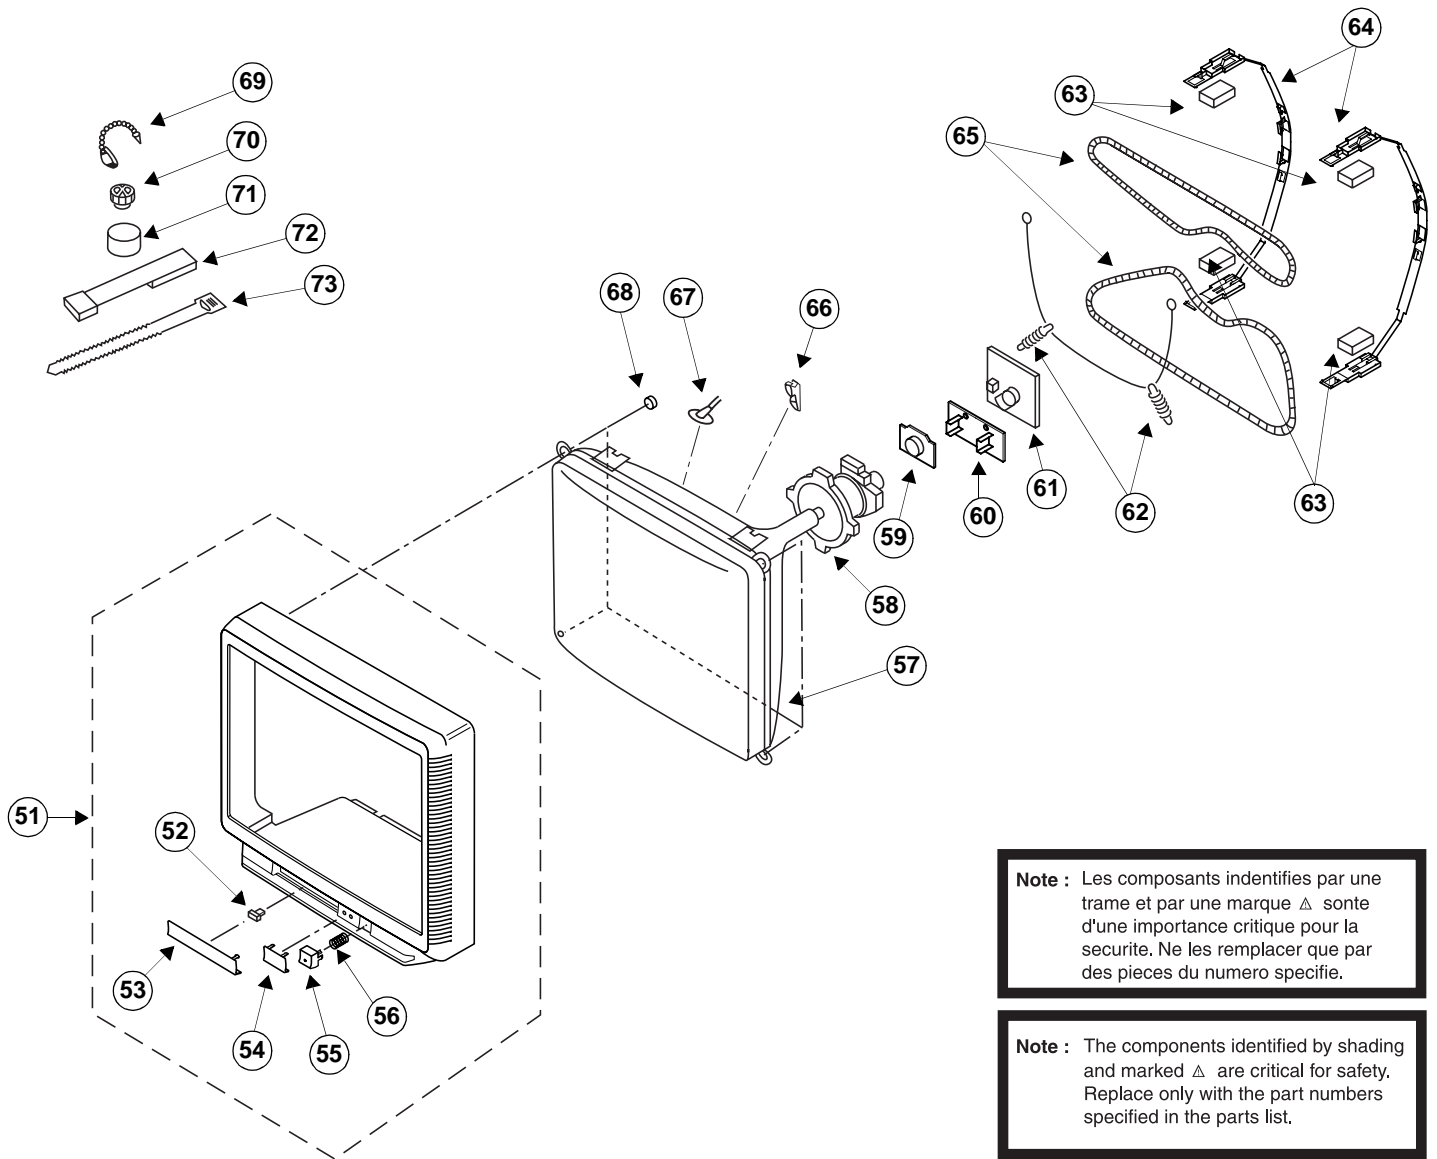

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
51	X-4200-372-1	BEZNET ASSY (BLACK)	52-56	62	4-200-433-11	SPRING, EXTENSION	
	X-4200-372-3	BEZNET ASSY (GREY)		63	4-203-390-11	CUSHION, DGC	
52	4-047-464-01	CATCHER, PUSH		64	4-202-749-01	HOLDER, DGC (29")	
53	4-204-050-01	DOOR, CONTROL (PAINTED) (BLACK)		65	Δ 1-406-807-11	COIL, DEMAGNETIZATION	
	4-204-050-21	DOOR, CONTROL (PAINTED) (GREY)		66	3-704-495-01	SPACER, DY	
54	4-204-047-01	WINDOW, ORNAMENTAL		67	Δ 1-251-317-31	CAP ASSY, HIGH VOLTAGE	
55	4-204-049-01	BUTTON, POWER		68	4-203-043-01	SCREW (PT)	
56	4-202-964-01	SPRING		69	4-308-870-00	CLIP, LEAD WIRE	
57	Δ 8-733-856-05	PICTURE TUBE (SD-269) (M68LCT60X)		70	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM \varnothing	
58	Δ 8-451-467-12	DEFLECTION YOKE (Y29GXA2B)		71	1-425-032-00	MAGNET, DISK; 10MM \varnothing	
59	Δ 8-453-005-21	NECK ASSY (NA297 - M2)		72	X-4387-214-1	PERMALLOY ASSY, CORRECTION	
60	*A-1644-088-A	VM BOARD, COMPLETE		73	3-701-007-00	BAND, BINDING	
61	*A-1638-111-A	C BOARD COMPLETE					

SECTION 7 ELECTRICAL PARTS LIST

When indicating parts by reference number, please include the board name.

CAPACITORS COILS
MF : mF, PF : mmF MMH : mH , uH

- Items marked “ * “ are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- RESISTORS
- All resistors are in ohms.
- F : nonflammable.

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

A

REF. NO.	PART. NO	DESCRIPTION	REMARK	REF. NO.	PART. NO	DESCRIPTION	REMARK
	*A-1632-721-A	A BOARD COMPLETE (KV-29X5A) *****		C030	1-104-665-11	ELECT 100MF 20%	25V
	*A-1632-716-A	A BOARD COMPLETE (KV-29X5B) *****		C031	1-163-017-00	CERAMIC CHIP 0.0047MF 10%	50V
	*A-1632-715-A	A BOARD COMPLETE (KV-29X5D) *****		C032	1-163-077-00	CERAMIC CHIP 0.1MF 10%	25V
	*A-1632-720-A	A BOARD COMPLETE (KV-29X5E) *****		C033	1-164-004-11	CERAMIC CHIP 0.1MF 10%	25V
	*A-1632-759-A	A BOARD COMPLETE (KV-29X5K) *****		C035	1-164-232-11	CERAMIC CHIP 0.01MF 10%	50V
	*A-1632-722-A	A BOARD COMPLETE (KV-29X5L) *****		C036	1-163-017-00	CERAMIC CHIP 0.0047MF 10%	50V
	*A-1632-717-A	A BOARD COMPLETE (KV-29X5R) *****		C037	1-163-017-00	CERAMIC CHIP 0.0047MF 10%	50V
	*A-1632-713-A	A BOARD COMPLETE (KV-29X5U) *****		C038	1-126-964-11	ELECT 10MF 20%	50V
	4-382-854-11	SCREW (M3X10), P, SW (+)		C039	1-163-017-00	CERAMIC CHIP 0.0047MF 10%	50V
		< CAPACITOR >		C040	1-163-125-00	CERAMIC CHIP 220PF 5%	50V
C004	1-163-038-00	CERAMIC CHIP 0.1MF	25V	C041	1-163-205-00	CERAMIC CHIP 0.001MF 10%	50V
C005	1-163-105-00	CERAMIC CHIP 33PF	5% 50V	C042	1-126-933-11	ELECT 100MF 20%	16V
C006	1-163-105-00	CERAMIC CHIP 33PF	5% 50V	C043	1-126-935-11	ELECT 470MF 20%	16V
C007	1-126-935-11	ELECT 470MF	20% 16V	C100	1-163-038-00	CERAMIC CHIP 0.1MF	25V (KV-29X5B)
C008	1-126-964-11	ELECT 10MF	20% 50V	C103	1-104-665-11	ELECT 100MF 20%	25V
C009	1-126-965-11	ELECT 22MF	20% 50V	C105	1-126-965-11	ELECT 22MF 20%	50V
C010	1-126-959-11	ELECT 0.47MF	20% 50V	C108	1-163-465-11	CERAMIC CHIP 9PF	0.25PF 50V
C011	1-126-965-11	ELECT 22MF	20% 50V	C109	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C012	1-126-959-11	ELECT 0.47MF	20% 50V	C110	1-163-038-00	CERAMIC CHIP 0.1MF	25V
C013	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V	C111	1-216-296-00	SHORT 0 (KV-29X5A/29X5D/29X5E/29X5K/ KV-29X5L/29X5R/29X5U)	50V (KV-29X5B)
C016	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	1-163-059-00	CERAMIC CHIP 0.01MF		50V
C018	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C112	1-163-031-11	CERAMIC CHIP 0.01MF	50V
C019	1-163-038-00	CERAMIC CHIP 0.1MF	25V	C115	1-164-489-11	CERAMIC CHIP 0.22MF 10%	16V
C022	1-126-935-11	ELECT 470MF	20% 16V	C116	1-126-961-11	ELECT 2.2MF 20%	50V
C024	1-104-665-11	ELECT 100MF	20% 25V	C117	1-126-961-11	ELECT 2.2MF 20%	50V
C025	1-126-960-11	ELECT 1MF	20% 50V	C118	1-163-038-00	CERAMIC CHIP 0.1MF	25V
C028	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	C121	1-163-031-11	CERAMIC CHIP 0.01MF	50V (KV-29X5B)
C029	1-163-077-00	CERAMIC CHIP 0.1MF	10% 25V	C122	1-104-665-11	ELECT 100MF 20%	25V (KV-29X5B)
				C129	1-126-963-11	ELECT 4.7MF 20%	50V
				C133	1-162-638-11	CERAMIC CHIP 1MF	16V (KV-29X5B)
				C134	1-128-551-11	ELECT 22MF 20%	25V

REF. NO.	PART.NO	DESCRIPTION	REMARK	REF. NO.	PART.NO	DESCRIPTION	REMARK
C135	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C410	1-126-964-11	ELECT 10MF	20% 50V
C138	1-165-319-11	CERAMIC CHIP 0.1MF	50V	C413	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
C139	1-163-031-11	CERAMIC CHIP 0.01MF	50V	C414	1-126-960-11	ELECT 1MF	20% 50V
C140	1-163-031-11	CERAMIC CHIP 0.01MF	50V			(KV-29X5A/29X5D/29X5E/29X5L/29X5R)	
C143	1-104-664-11	ELECT 47MF	20% 25V		1-163-141-00	ELECT 0.001MF	20% 50V
						(KV-29X5B/29X5K/29X5U)	
C201	1-104-666-11	ELECT 220MF	20% 25V	C415	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
C203	1-126-942-61	ELECT 1000MF	20% 25V	C416	1-126-964-11	ELECT 10MF	20% 50V
C204	1-126-942-61	ELECT 1000MF	20% 25V	C417	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
C206	1-126-960-11	ELECT 1MF	20% 50V	C418	1-126-960-11	ELECT 1MF	20% 50V
C207	1-126-972-11	ELECT 1000MF	20% 50V	C422	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
C208	1-126-960-11	ELECT 1MF	20% 50V	C423	1-126-964-11	ELECT 10MF	20% 50V
C215	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C430	1-104-664-11	ELECT 47MF	20% 25V
C301	1-163-038-00	CERAMIC CHIP 0.1MF	25V	C432	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
C302	1-126-967-11	ELECT 47MF	20% 16V	C433	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
C303	1-101-004-00	CERAMIC 0.01MF	50V	C434	1-126-935-11	ELECT 470MF	20% 16V
C304	1-126-964-11	ELECT 10MF	20% 50V	C435	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
C305	1-163-005-11	CERAMIC CHIP 470PF	10% 50V	C436	1-163-055-00	CERAMIC CHIP 0.0047MF	10% 50V
C307	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C437	1-535-465-11	LEAD, JUMPER (5.0MM)	
C308	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C438	1-535-465-11	LEAD, JUMPER (5.0MM)	
C309	1-126-963-11	ELECT 4.7MF	20% 50V	C443	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
C312	1-163-099-00	CERAMIC CHIP 18PF	5% 50V	C444	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
C313	1-163-099-00	CERAMIC CHIP 18PF	5% 50V	C445	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
C314	1-163-038-00	CERAMIC CHIP 0.1MF	25V	C501	1-126-968-11	ELECT 100MF	20% 50V
C316	1-163-259-91	CERAMIC CHIP 220PF	5% 50V	C502	1-163-038-00	CERAMIC CHIP 0.1MF	25V
C317	1-136-169-00	FILM 0.22MF	5% 50V	C503	1-126-968-11	ELECT 100MF	20% 50V
C319	1-126-964-11	ELECT 10MF	20% 50V	C504	1-106-220-00	MYLAR 0.1MF	10% 100V
C321	1-126-963-11	ELECT 4.7MF	20% 50V	C505	1-136-173-00	FILM 0.47MF	5% 50V
C322	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C506	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C328	1-104-664-11	ELECT 47MF	20% 25V	C507	1-126-933-11	ELECT 100MF	20% 16V
C329	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C508	1-126-960-11	ELECT 1MF	20% 50V
C330	1-163-038-00	CERAMIC CHIP 0.1MF	25V	C509	1-107-364-11	MYLAR 0.01MF	10% 200V
C331	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C510	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
C332	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C512	1-162-114-00	CERAMIC 0.0047MF	2KV
C333	1-126-960-91	ELECT 1MF	20% 50V	C513	1-107-662-11	ELECT 22MF	20% 250V
C334	1-163-017-91	CERAMIC CHIP 4700PF	10% 50V	C515	1-104-666-11	ELECT 220MF	20% 25V
C335	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C517	1-104-666-11	ELECT 220MF	20% 25V
C336	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C518	1-106-375-12	MYLAR 0.022MF	99% 200V
C337	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C519	1-163-275-11	CERAMIC CHIP 0.001MF	5% 50V
C338	1-126-967-11	ELECT 47MF	20% 50V	C520	1-163-038-00	CERAMIC CHIP 0.1MF	25V
C339	1-163-038-00	CERAMIC CHIP 0.1MF	25V	C522	1-137-399-11	FILM 0.1MF	5% 50V
C401	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V	C531	1-126-964-11	ELECT 10MF	20% 50V
C402	1-126-960-11	ELECT 1MF	20% 50V	C532	1-163-037-11	CERAMIC CHIP 0.022MF	10% 50V
C403	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V	C533	1-163-017-91	CERAMIC CHIP 0.0047MF	10% 50V
C405	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V	C535	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C406	1-126-960-11	ELECT 1MF	20% 50V	C536	1-117-671-11	FILM 1MF	5% 200V
C407	1-126-964-11	ELECT 10MF	20% 50V	C537	1-137-417-11	MYLAR 0.0047MF	10% 200V
C408	1-126-964-11	ELECT 10MF	20% 50V				

REF. NO.	PART.NO	DESCRIPTION	REMARK	REF. NO.	PART.NO	DESCRIPTION	REMARK
D014	8-719-058-24	DIODE RB501V-40TE-17		D613	8-719-911-19	DIODE 1SS119-25	
D015	8-719-914-43	DIODE DAN202K		D614	8-719-058-38	DIODE FMN-G12S	
D017	8-719-109-89	DIODE RD5.6ESB2		D619	8-719-043-76	DIODE AK04V0	
D018	8-719-991-33	DIODE 1SS133T-77		D621	8-719-068-00	DIODE ERC04-06SE	
D023	8-719-109-89	DIODE RD5.6ESB2		D626	8-719-068-00	DIODE ERC04-06SE	
D101	8-719-982-24	DIODE MTZJ-T-33A		D627	8-719-510-26	DIODE D1NL20	
D104	8-719-914-43	DIODE DAN202K (KV-29X5B)		D628	8-719-059-23	DIODE P6KE200AG23	
D201	8-719-929-15	DIODE HZS9.1NB2		D629	8-719-979-64	DIODE UF4005PKG23	
D202	8-719-914-43	DIODE DAN202K		D631	8-719-110-31	DIODE RD12ES-B2	
D204	8-719-109-89	DIODE RD5.6ESB2		D632	8-719-510-64	DIODE S2LA20F	
D205	8-719-109-89	DIODE RD5.6ESB2		D633	8-719-109-89	DIODE RD5.6ES-B2	
D206	8-719-109-89	DIODE RD5.6ESB2				< FERRITE BEAD >	
D306	8-719-109-89	DIODE RD5.6ESB2		FB001	1-412-911-11	FERRITE	0UH
D307	8-719-109-89	DIODE RD5.6ESB2		FB002	1-412-911-11	FERRITE	0UH
D308	8-719-109-72	DIODE RD5.9ESB2		FB601	1-412-911-11	FERRITE	0UH
D309	8-719-991-33	DIODE 1SS133T-77		FB602	1-412-911-11	FERRITE	0UH
D405	8-719-109-97	DIODE RD5.8ESB2		FB605	1-410-397-21	FERRITE	1.1UH
D406	8-719-109-97	DIODE RD5.8ESB2					
D407	8-719-109-97	DIODE RD6.8ES-B2		FB608	1-412-911-11	FERRITE	0UH
D409	8-719-109-97	DIODE RD6.8ES-B2		FB609	1-535-465-11	LEAD, JUMPER (5.0MM)	
D414	8-719-109-97	DIODE RD6.8ES-B2		FB610	1-410-397-21	FERRITE	1.1UH
D415	8-719-929-15	DIODE HZS9.1NB2		FB611	1-410-397-21	FERRITE	1.1UH
D417	8-719-929-15	DIODE HZS9-1NB2		FB612	1-535-465-11	LEAD, JUMPER (5.0MM)	
D422	8-719-109-97	DIODE RD6.8ES-B2				< IC >	
D423	8-719-109-97	DIODE RD6.8ES-B2		IC001	8-759-525-78	IC SAA5497PS/M1A/040 (KV-29X5A/29X5D)	
D427	8-719-109-97	DIODE RD6.8ES-B2			8-759-526-01	IC SAA5497PS/M1A/038 (KV-29X5B/29X5E/29X5K/29X5L/29X5U)	
D501	8-719-302-43	DIODE EL1Z			8-759-525-77	IC SAA5497PS/M1A/039 (KV-29X5R)	
D502	8-719-924-13	DIODE MTZJ-T-77-22B		IC003	8-759-468-56	IC MN1381T	
D511	8-719-028-72	DIODE RGP02-17EL-6433		IC004	8-759-432-33	IC ST24W08FM6TR	
D512	8-719-302-43	DIODE EL1Z		IC005	8-759-516-41	IC CD4052BCM	
D513	8-719-979-85	DIODE EGP20G		IC101	8-759-466-47	IC TDA9817/V1 (KV-29XA/29X5D/29X5E/ KV-29X5K/29X5L/29X5R/ KV-29X5U)	
D514	8-719-979-85	DIODE EGP20G			8-759-466-49	IC TDA9818/V1 (KV-29X5B)	
D534	8-719-302-43	DIODE EL1Z		IC201	8-759-442-74	IC TDA7495	
D535	8-719-908-03	DIODE GP08D		IC301	8-752-082-35	IC CXA2060AS	
D536	8-719-945-80	DIODE ERC06-15S		IC501	8-759-192-71	IC STV9379	
D538	8-719-908-03	DIODE GP08D		IC531	8-759-450-95	IC LM393N	
D539	8-719-900-26	DIODE ERD29-08J		IC603	8-749-920-61	IC SE135N	
D541	1-535-465-11	LEAD, JUMPER (5.0MM) (KV-29X5A/29X5D/29X5E/29X5L/29X5R)		IC604	8-759-524-82	IC TYA7805CTV	
D571	8-719-911-19	DIODE 1SS119-25		IC605	8-759-524-83	IC TYA7809CTV	
D573	8-719-921-40	DIODE MTZJ-4.7C		IC606	8-749-013-75	IC STR-F6654	
D601	8-719-510-53	DIODE D4SB60L		IC608	8-759-524-82	IC TYA7805CTV	
D602	8-719-046-74	DIODE AU-01Z-V1		IC609	8-759-468-89	IC TOP209P	
D603	8-719-312-61	DIODE EU-1Z					
D605	8-719-312-10	DIODE RU4AM-T3					
D608	8-719-067-88	DIODE RG1CLF-B1					
D610	8-719-067-78	DIODE RN3Z-LF014-302					

A

The components identified by shading and marked Δ are critical for safety
Replace only with the part number specified.

REF. NO.	PART.NO	DESCRIPTION	REMARK	REF. NO.	PART.NO	DESCRIPTION	REMARK
		< PHOTO COUPLER >					
PH601	Δ 8-749-010-64	PHOTO COUPLER PC123FY2		Q014	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
		< SOCKET >		Q101	8-729-216-22	TRANSISTOR 2SA1162-G	
J401	1-766-296-11	CONNECTOR, DUAL SCART		Q107	8-729-022-54	TRANSISTOR 2SC3779C,D-AA	(KV-29X5B)
J404	1-770-989-11	JACK, PIN 2P		Q109	1-801-806-11	TRANSISTOR DTC144EKA	(KV-29X5B)
		< COIL >		Q110	1-801-806-11	TRANSISTOR DTC144EKA	(KV-29X5B)
L001	1-408-603-31	INDUCTOR 10UH		Q111	8-729-216-22	TRANSISTOR 2SA1162-G	(KV-29X5B)
L102	1-408-599-21	INDUCTOR 4.7UH		Q112	1-801-806-11	TRANSISTOR DTC144EKA	
L103	1-403-686-11	COIL		Q202	8-729-620-06	TRANSISTOR 2SC3052-EF	
L104	1-410-671-31	INDUCTOR 47UH		Q401	8-729-216-22	TRANSISTOR 2SA1162-G	
L106	1-408-417-00	INDUCTOR 47UH		Q405	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L108	1-410-985-11	INDUCTOR CHIP 0.22UH	(KV-29X5B)	Q408	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L109	1-410-789-11	INDUCTOR 0.47UH	(KV-29X5B)	Q501	8-729-620-06	TRANSISTOR 2SC3052-EF	
L201	1-535-465-11	LEAD, JUMPER (5.0MM)		Q532	8-729-038-83	TRANSISTOR 2SK2251-01-F19	
L202	1-535-465-11	LEAD, JUMPER (5.0MM)		Q533	8-729-040-62	TRANSISTOR 2SD2539 (LBSONY)	
L203	1-406-979-11	INDUCTOR 0UH		Q535	8-729-119-80	TRANSISTOR 2SC2688-LK	
L302	1-408-417-00	INDUCTOR 47UH		Q571	8-729-105-08	TRANSISTOR 2SA1330-06	
L303	1-408-609-41	INDUCTOR 33UH		Q574	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L401	1-408-417-00	INDUCTOR 47UH		Q575	1-801-806-11	TRANSISTOR DTC144EKA	
L402	1-408-417-00	INDUCTOR 47UH		Q576	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L405	1-216-295-00	SHORT 0		Q601	8-729-216-22	TRANSISTOR 2SA1162-G	
L406	1-216-295-00	SHORT 0				< RESISTOR >	
L501	1-408-417-00	INDUCTOR 47UH		JR012	1-216-296-00	SHORT 0	(KV-29X5A/29X5D/29X5E/ KV-29X5K/29X5L/29X5R/29X5U)
L502	1-412-529-41	INDUCTOR 22UH		JR023	1-216-296-00	SHORT 0	
L503	1-412-521-31	INDUCTOR 4.7UH		JR031	1-216-295-00	SHORT 0	
L532	1-412-553-41	INDUCTOR 3.3MMH		JR033	1-216-296-00	SHORT 0	
L533	1-406-989-21	INDUCTOR 0UH		JR403	1-216-073-00	RES,CHIP 10K 5% 1/10W	
L535	1-459-111-00	INDUCTOR 0UH		JR409	1-216-295-00	SHORT 0	
L537	1-409-855-11	COIL, HORIZONTAL LINEARITY		JR411	1-216-295-00	SHORT 0	
L540	1-535-465-11	LEAD, JUMPER (5.0MM)		JR412	1-216-295-00	SHORT 0	
L571	1-412-533-21	INDUCTOR 47UH		JR610	1-216-296-00	SHORT 0	
L602	1-408-417-00	INDUCTOR 47UH		JR613	1-216-296-00	SHORT 0	
		< TRANSISTOR >		JW128	1-249-437-11	CARBON 47K 5% 1/4W	(KV-29X5A/29X5D/29X5E/29X5L)
Q004	8-729-216-22	TRANSISTOR 2SA1162-G			1-535-465-11	LEAD, JUMPER (5.0MM)	(KV-29X5B/29X5K/29X5R/29X5U)
Q005	1-801-806-11	TRANSISTOR DTC144EKA		R001	1-216-025-00	RES,CHIP 100 5% 1/10W	
Q006	1-801-806-11	TRANSISTOR DTC144EKA		R002	1-216-025-00	RES,CHIP 100 5% 1/10W	
Q007	8-729-620-06	TRANSISTOR 2SC3052-EF		R003	1-216-065-00	RES,CHIP 4.7K 5% 1/10W	
Q008	8-729-620-06	TRANSISTOR 2SC3052-EF		R004	1-216-065-00	RES,CHIP 4.7K 5% 1/10W	
Q009	8-729-620-06	TRANSISTOR 2SC3052-EF		R005	1-216-065-00	RES,CHIP 4.7K 5% 1/10W	
Q010	8-729-620-06	TRANSISTOR 2SC3052-EF		R007	1-216-065-00	RES,CHIP 4.7K 5% 1/10W	
Q011	1-801-806-11	TRANSISTOR DTC144EKA		R009	1-216-025-00	RES,CHIP 100 5% 1/10W	
Q012	8-729-620-06	TRANSISTOR 2SC3052-EF		R010	1-216-025-00	RES,CHIP 100 5% 1/10W	
Q013	8-729-620-06	TRANSISTOR 2SC3052-EF		R011	1-216-025-00	RES,CHIP 100 5% 1/10W	
				R012	1-247-807-31	CARBON 100 5% 1/4W	

REF. NO.	PART.NO	DESCRIPTION	REMARK	REF. NO.	PART.NO	DESCRIPTION	REMARK
R013	1-216-214-00	RES,CHIP	4.7K 5% 1/8W	R089	1-216-081-00	RES,CHIP	22K 5% 1/10W
R014	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R090	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R015	1-216-049-00	RES,CHIP	1K 5% 1/10W	R091	1-216-081-00	RES,CHIP	22K 5% 1/10W
R016	1-216-073-00	RES,CHIP	10K 5% 1/10W	R092	1-216-073-00	RES,CHIP	10K 5% 1/10W
R019	1-216-053-00	RES,CHIP	1.5K 5% 1/10W	R093	1-216-230-00	RES,CHIP	22K 5% 1/8W
R023	1-216-295-00	SHORT	0	R094	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R029	1-216-073-00	RES,CHIP	10K 5% 1/10W	R095	1-216-025-00	RES,CHIP	100 5% 1/10W
R030	1-216-081-00	RES,CHIP	22K 5% 1/10W	R096	1-247-807-31	CARBON	100 5% 1/4W
R032	1-216-089-00	RES,CHIP	47K 5% 1/10W	R097	1-247-807-31	CARBON	100 5% 1/4W
R034	1-216-065-00	RES,CHIP	4.7K 5% 1/10W	R098	1-247-807-31	CARBON	100 5% 1/4W
R035	1-216-049-00	RES,CHIP	1K 5% 1/10W	R099	1-247-807-31	CARBON	100 5% 1/4W
R036	1-216-065-00	RES,CHIP	4.7K 5% 1/10W	R101	1-216-049-00	RES,CHIP	1K 5% 1/10W
R038	1-216-073-00	RES,CHIP	10K 5% 1/10W	R106	1-215-900-11	METAL OXIDE	22K 5% 2W F
R039	1-216-089-91	RES,CHIP	47K 5% 1/10W	R110	1-216-296-91	SHORT	0 (KV-29X5B)
R050	1-216-041-00	RES,CHIP	470 5% 1/10W	R111	1-216-057-00	RES,CHIP	2.2K 5% 1/10W (KV-29X5B)
R051	1-216-049-00	RES,CHIP	1K 5% 1/10W	R112	1-216-057-00	RES,CHIP	2.2K 5% 1/10W (KV-29X5B)
R053	1-216-065-00	RES,CHIP	4.7K 5% 1/10W	R116	1-249-437-11	CARBON	47K 5% 1/4W
R054	1-216-041-00	RES,CHIP	470 5% 1/10W			(KV-29X5A/29X5D)/29X5E/29X5K/29X5L)	
R055	1-216-081-00	RES,CHIP	22K 5% 1/10W	R120	1-216-037-00	RES,CHIP	330 5% 1/10W
R056	1-216-105-00	RES,CHIP	220K 5% 1/10W	R121	1-216-025-00	RES,CHIP	100 5% 1/10W
R057	1-216-075-00	RES,CHIP	12K 5% 1/10W	R122	1-216-025-00	RES,CHIP	100 5% 1/10W
R058	1-216-063-91	RES,CHIP	3.9K 5% 1/10W	R127	1-216-031-00	RES,CHIP	180 5% 1/10W (KV-29X5B)
R059	1-216-089-00	RES,CHIP	47K 5% 1/10W	R128	1-216-065-00	RES,CHIP	4.7K 5% 1/10W (KV-29X5B)
R060	1-216-174-00	RES,CHIP	100 5% 1/8W	R129	1-216-063-91	RES,CHIP	3.9K 5% 1/10W (KV-29X5B)
R061	1-216-174-00	RES,CHIP	100 5% 1/8W	R133	1-216-295-00	SHORT	0 (KV-29X5A/29X5D/29X5E/29X5K/29X5L/29X5R/29X5U)
R062	1-216-033-00	RES,CHIP	220 5% 1/10W	R142	1-216-295-00	SHORT	0
R063	1-216-065-00	RES,CHIP	4.7K 5% 1/10W (KV-29X5B)	R143	1-216-025-00	RES,CHIP	100 5% 1/10W
R064	1-216-065-00	RES,CHIP	4.7K 5% 1/10W (KV-29X5B)	R144	1-216-079-00	RES,CHIP	18K 5% 1/10W
R065	1-216-025-00	RES,CHIP	100 5% 1/10W	R145	1-216-212-00	RES,CHIP	3.9K 5% 1/8W
R066	1-216-065-00	RES,CHIP	4.7K 5% 1/10W	R147	1-216-017-91	RES,CHIP	47 5% 1/10W (KV-29X5B)
R067	1-216-065-00	RES,CHIP	4.7K 5% 1/10W	R148	1-216-174-00	RES,CHIP	100 5% 1/8W (KV-29X5B)
R069	1-216-049-00	RES,CHIP	1K 5% 1/10W	R149	1-216-049-00	RES,CHIP	1K 5% 1/10W (KV-29X5B)
R070	1-216-081-00	RES,CHIP	22K 5% 1/10W	R151	1-216-049-00	RES,CHIP	1K 5% 1/10W
R071	1-216-214-00	RES,CHIP	4.7K 5% 1/8W	R152	1-216-025-00	RES,CHIP	100 5% 1/10W (KV-29X5B)
R072	1-216-097-00	RES,CHIP	100K 5% 1/10W	R153	1-216-180-00	RES,CHIP	180 5% 1/8W (KV-29X5B)
R073	1-216-097-00	RES,CHIP	100K 5% 1/10W	R154	1-216-238-91	RES,CHIP	47K 5% 1/8W
R075	1-216-069-00	RES,CHIP	6.8K 5% 1/10W	R155	1-216-089-00	RES,CHIP	47K 5% 1/10W
R080	1-216-073-00	RES,CHIP	10K 5% 1/10W	R156	1-216-073-00	RES,CHIP	10K 5% 1/10W (KV-29X5B)
R081	1-216-073-00	RES,CHIP	10K 5% 1/10W	R157	1-216-063-91	RES,CHIP	3.9K 5% 1/10W (KV-29X5B)
R082	1-216-053-00	RES,CHIP	1.5K 5% 1/10W	R158	1-216-069-00	RES,CHIP	6.8K 5% 1/10W (KV-29X5B)
R083	1-216-031-00	RES,CHIP	180 5% 1/10W	R204	1-247-863-91	CARBON	22K 5% 1/4W
R084	1-216-053-00	RES,CHIP	1.5K 5% 1/10W	R206	1-216-085-00	RES,CHIP	33K 5% 1/10W
R085	1-216-031-00	RES,CHIP	180 5% 1/10W	R207	1-216-295-00	SHORT	0
R086	1-216-053-00	RES,CHIP	1.5K 5% 1/10W	R209	1-216-065-00	RES,CHIP	4.7K 5% 1/10W
R087	1-216-180-00	RES,CHIP	180 5% 1/8W	R211	1-215-873-00	METAL OXIDE	4.7K 5% 1W F
R088	1-216-065-00	RES,CHIP	4.7K 5% 1/10W	R213	1-216-089-00	RES,CHIP	47K 5% 1/10W
				R301	1-216-025-00	RES,CHIP	100 5% 1/10W

The components identified by shading and marked Δ are critical for safety
Replace only with the part number specified.

A

REF. NO.	PART.NO	DESCRIPTION	REMARK	REF. NO.	PART.NO	DESCRIPTION	REMARK	
R524	1-216-083-91	RES,CHIP	27K 5% 1/10W	R616	1-216-393-00	METAL OXIDE 2.2 5% 3W	F	
R525	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R617	1-249-405-11	CARBON 100 5% 1/4W	F	
R526	1-216-089-00	RES,CHIP	47K 5% 1/10W	R619	1-216-065-00	RES,CHIP 4.7K 5% 1/10W		
R527	1-216-077-91	RES,CHIP	15K 5% 1/10W	R622	1-249-401-11	CARBON 47 5% 1/4W		
R528	1-216-246-00	RES,CHIP	100K 5% 1/8W	R627	1-249-389-11	CARBON 4.7 5% 1/4W	F	
R529	1-216-073-00	RES,CHIP	10K 5% 1/10W	R628	1-247-791-91	CARBON 22 5% 1/4W		
R530	1-216-085-00	RES,CHIP	33K 5% 1/10W	R652	1-216-393-00	METAL OXIDE 2.2 5% 3W	F	
R531	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R653	1-216-393-00	METAL OXIDE 2.2 5% 3W	F	
R532	1-216-063-91	RES,CHIP	3.9K 5% 1/10W	R658	1-215-929-11	METAL OXIDE 100K 5% 3W	F	
R533	1-216-073-71	RES,CHIP	10K 5% 1/10W	R659	1-216-383-21	METAL OXIDE 0.33 5% 3W	F	
R534	1-216-113-91	RES,CHIP	470K 5% 1/10W	R660	1-216-384-21	METAL OXIDE 0.39 5% 3W	F	
R535	1-216-101-91	RES,CHIP	150K 5% 1/10W	R661	1-247-843-11	CARBON 3.3K 5% 1/4W		
R539	1-216-049-00	RES,CHIP	1K 5% 1/10W	R662	1-215-929-11	METAL OXIDE 100K 5% 3W	F	
R540	1-215-861-51	METAL OXIDE	47 5% 1W	F	R664	1-249-417-11	CARBON 1K 5% 1/4W	
R541	1-216-097-00	RES,CHIP	100K 5% 1/10W	R665	1-215-877-11	METAL OXIDE 22K 5% 1W	F	
R542	1-216-089-00	RES,CHIP	47K 5% 1/10W	R667	1-215-927-00	METAL OXIDE 47K 5% 3W	F	
R543	1-216-089-00	RES,CHIP	47K 5% 1/10W					
R546	1-215-893-11	METAL OXIDE	1.5K 5% 2W	F		< VARIABLE RESISTOR >		
R547	1-215-893-11	METAL OXIDE	1.5K 5% 2W	F				
R548	1-216-397-11	METAL OXIDE	4.7 5% 3W	F	RV101	1-241-765-11	RES, ADJ, CARBON 22K (KV-29X5B)	
R549	1-216-341-11	METAL OXIDE	0.22 5% 1W	F			< RELAY >	
R552	1-216-061-00	RES,CHIP	3.3K 5% 1/10W					
R553	1-249-381-11	CARBON	1 5% 1/4W	F	RY601 Δ	1-755-245-11	RELAY	
R571	1-249-417-11	CARBON	1K 5% 1/4W	F			< SWITCH >	
R572	1-216-369-00	METAL OXIDE	1 5% 2W	F				
R573	1-216-097-00	RES,CHIP	100K 5% 1/10W		SW532	1-572-707-11	SWITCH, LEVER	
R574	1-216-065-00	RES,CHIP	4.7K 5% 1/10W				< TRANSFORMER >	
R575	1-216-097-00	RES,CHIP	100K 5% 1/10W					
R576	1-249-399-11	CARBON	33 5% 1/4W		T511 Δ	1-453-265-11	FBT ASSY, NX-1681/U2B4	
R581	1-216-089-00	RES,CHIP	47K 5% 1/10W		T531	1-437-195-11	TRANSFORMER, HORIZONTAL DRIVE	
R582	1-216-089-00	RES,CHIP	47K 5% 1/10W		T532	1-431-228-11	TRANSFORMER, POWER MODULATION	
R583	1-216-081-00	RES,CHIP	22K 5% 1/10W		T601 Δ	1-427-962-11	TRANSFORMER, LINE FILTER	
R588	1-216-053-91	RES,CHIP	1.5K 5% 1/10W		T602	1-431-732-11	TRANSFORMER, CONVERTER (SRT)	
R589	1-216-097-00	RES,CHIP	100K 5% 1/10W		T603 Δ	1-431-777-11	TRANSFORMER, CONVERTER	
R590	1-216-081-71	RES,CHIP	22K 5% 1/10W				< THERMISTOR >	
R591	1-215-892-11	METAL OXIDE	1K 5% 2W	F				
R593	1-249-439-11	CARBON	68K 5% 1/4W		THP601 Δ	1-810-96-11	THERMISTOR, POSITIVE	
R594	1-216-057-00	RES,CHIP	2.2K 5% 1/10W				< TUNER >	
R602	1-202-961-11	CEMENTED	1.8 5% 10W					
R603	1-202-933-61	FUSIBLE	0.1 10% 1/2W	F	TU101	1-693-418-11	TUNER (TELE9-001A)	
R607 Δ	1-202-961-11	CEMENTED	1.8 5% 10W				(KV-29X5A/29X5B/29X5D/29X5E/29X5L)	
R608	1-215-927-00	METAL OXIDE	47K 5% 3W	F	8-598-432-00	TUNER (BTP-AC411)	(KV-29X5K)	
R611	1-249-415-11	CARBON	680 5% 1/4W		8-598-361-01	TUNER (BTP-AC402)	(KV-29X5R)	
R613 Δ	1-240-030-91	METAL	4.7M 5% 1/2W		8-598-360-01	TUNER (BTP-AU602)	(KV-29X5U)	
R614 Δ	1-240-030-91	METAL	4.7M 5% 1/2W					
R615	1-249-422-11	CARBON	2.7K 5% 1/4W					



The components identified by shading and marked Δ are critical for safety. Replace only with the part number specified.

REF. NO.	PART. NO	DESCRIPTION	REMARK	REF. NO.	PART. NO	DESCRIPTION	REMARK
		< CRYSTAL >		D719	8-719-991-33	DIODE 1SS133T-77	
X001	1-578-774-11	VIBRATOR, CRYSTAL				< CRT SOCKET >	
X302	1-567-505-11	OSCILLATOR, CRYSTAL					
X303	1-567-504-11	OSCILLATOR, CRYSTAL		J701	Δ 1-526-990-21	SOCKET, CRT	
*****						< COIL >	
	A-1638-111-A	C BOARD, COMPLETE		I704	1-408-609-41	INDUCTOR 33UH	
		*****				< TRANSISTOR >	
		< CAPACITOR >		Q702	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C701	1-102-114-00	CERAMIC 470PF	10% 50V	Q703	8-729-906-70	TRANSISTOR BF871-127	
C702	1-102-115-00	CERAMIC 560PF	10% 50V	Q704	8-729-200-17	TRANSISTOR BF421L-AMMO	
C703	1-102-116-00	CERAMIC 680PF	10% 50V	Q705	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C708	1-162-114-00	CERAMIC 0.0047MF	2KV	Q706	8-729-906-70	TRANSISTOR BF871-127	
C710	1-107-652-11	ELECT 10MF	20% 250V				
C711	1-102-114-00	CERAMIC 470PF	10% 50V	Q707	8-729-200-17	TRANSISTOR BF421L-AMMO	
C712	1-102-116-00	CERAMIC 680PF	10% 50V	Q708	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C714	1-126-967-11	ELECT 47MF	20% 16V	Q709	8-729-906-70	TRANSISTOR BF871-127	
C717	1-102-114-00	CERAMIC 470PF	10% 50V	Q710	8-729-200-17	TRANSISTOR BF421L-AMMO	
C718	1-102-114-00	CERAMIC 470PF	10% 50V			< RESISTOR >	
C719	1-102-114-00	CERAMIC 470PF	10% 50V	R701	1-247-895-91	CARBON 470K 5% 1/4W	
C722	1-101-880-00	CERAMIC 47PF	5% 50V	R704	1-216-486-00	METAL OXIDE 8.2K 5% 3W F	
C723	1-101-880-00	CERAMIC 47PF	5% 50V	R705	1-260-103-11	CARBON 2.2K 5% 1/2W	
C724	1-101-880-00	CERAMIC 47PF	5% 50V	R706	1-247-815-91	CARBON 220 5% 1/4W	
		< CONNECTOR >		R707	1-247-815-91	CARBON 220 5% 1/4W	
CN701	1-784-633-11	PIN, CONNECTOR 4P		R708	1-247-791-91	CARBON 22 5% 1/4W	
CN702	1-695-915-11	TAB (CONTACT)		R709	1-202-844-00	SOLID 330K 10% 1/2W	
CN703	*1-564-509-11	PLUG, CONNECTOR 6P		R711	1-247-843-11	CARBON 3.3K 5% 1/4W	
		< DIODE >		R712	1-260-103-11	CARBON 2.2K 5% 1/2W	
D702	8-719-991-33	DIODE 1SS133T-77		R714	1-216-486-00	METAL OXIDE 8.2K 5% 3W F	
D703	1-535-465-11	LEAD, JUMPER (5.0MM)					
D704	1-535-465-11	LEAD, JUMPER (5.0MM)		R715	1-249-417-11	CARBON 1K 5% 1/4W	
D705	1-535-465-11	LEAD, JUMPER (5.0MM)		R716	1-247-815-91	CARBON 220 5% 1/4W	
D706	8-719-991-33	DIODE 1SS133T-77		R717	1-247-815-91	CARBON 220 5% 1/4W	
D707	8-719-991-33	DIODE 1SS133T-77		R718	1-202-814-11	SOLID 33K 10% 1/2W	
D708	8-719-991-33	DIODE 1SS133T-77		R719	1-247-791-91	CARBON 22 5% 1/4W	
D709	8-719-991-33	DIODE 1SS133T-77					
D710	8-719-991-33	DIODE 1SS133T-77		R720	1-247-843-11	CARBON 3.3K 5% 1/4W	
D711	1-216-349-51	METAL OXIDE 4.7K	5% 2W	R722	1-202-848-00	SOLID 680K 10% 1/2W	
D714	8-719-991-33	DIODE 1SS133T-77		R723	1-249-417-11	CARBON 1K 5% 1/4W	
D715	8-719-991-33	DIODE 1SS133T-77		R724	1-260-131-11	CARBON 470K 5% 1/2W	
D716	8-719-991-33	DIODE 1SS133T-77		R726	1-260-103-11	CARBON 2.2K 5% 1/2W	
D717	8-719-991-33	DIODE 1SS133T-77					
D718	8-719-991-33	DIODE 1SS133T-77		R727	1-247-815-91	CARBON 220 5% 1/4W	
				R728	1-216-351-00	METAL OXIDE 1.5 5% 1W F	
				R729	1-247-815-91	CARBON 220 5% 1/4W	
				R730	1-247-791-91	CARBON 22 5% 1/4W	
				R731	1-247-843-11	CARBON 3.3K 5% 1/4W	
				R733	1-247-823-91	CARBON 470 5% 1/4W	

C

VM

REF. NO.	PART. NO	DESCRIPTION	REMARK	REF. NO.	PART. NO	DESCRIPTION	REMARK
R734	1-247-823-91	CARBON	470 5% 1/4W	C1912	1-129-702-00	FILM	0.001MF 5% 630V
R735	1-247-823-91	CARBON	470 5% 1/4W	C1913	1-136-558-11	FILM	0.0039MF 5% 630V
R736	1-216-486-00	METAL OXIDE	8.2K 5% 3W F	C1914	1-102-157-00	CERAMIC	560PF 10% 500V
R739	1-249-417-11	CARBON	1K 5% 1/4W	C1915	1-137-102-11	FILM	0.022MF 10% 250V
R740	1-247-823-91	CARBON	470 5% 1/4W	C1951	1-126-964-11	ELECT	10MF 20% 50V
R741	1-202-549-00	SOLID	100 20% 1/2W	C1952	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V
R744	1-249-421-11	CARBON	2.2K 5% 1/4W	C1953	1-136-165-00	FILM	0.1MF 5% 50V
R745	1-249-421-11	CARBON	2.2K 5% 1/4W	C1954	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V
R746	1-249-421-11	CARBON	2.2K 5% 1/4W	C1955	1-136-165-00	FILM	0.1MF 5% 50V
< VARIABLE RESISTOR >				C1956	1-126-964-11	ELECT	10MF 20% 50V
RV701	1-230-641-11	RES, ADJ, METAL GLAZE	2.2M	C1957	1-126-964-11	ELECT	10MF 20% 50V
RV702	1-241-656-21	RES, ADJ, METAL FILM	110M	C1958	1-136-173-00	FILM	0.47MF 5% 50V
*****				C1959	1-107-714-11	ELECT	10MF 20% 50V
*A-1644-088-A	VM BOARD, COMPLETE			C1960	1-107-636-11	ELECT	10MF 20% 160V
	*****			< CONNECTOR >			
< CAPACITOR >				CN1705	*1-564-510-11	PLUG, CONNECTOR	7P
C1701	1-126-933-11	ELECT	100MF 20% 16V	CN1718	1-774-418-11	CONNECTOR, BOARD TO BOARD	8P
C1702	1-128-551-11	ELECT	22MF 20% 25V	CN1801	*1-564-506-11	PLUG, CONNECTOR	3P
C1703	1-126-933-11	ELECT	100MF 20% 16V	CN1803	*1-564-507-11	PLUG, CONNECTOR	4P
C1704	1-107-357-11	FILM	0.47MF 5% 100V	CN1809	*1-508-784-12	PIN CONNECTOR	5MM PITCH
C1705	1-107-638-11	ELECT	33MF 20% 160V	< DIODE >			
C1706	1-104-999-11	FILM	0.1MF 5% 200V	D1701	8-719-991-33	DIODE	1SS133T-77
C1707	1-136-207-11	FILM	0.047MF 10% 250V	D1702	8-719-110-88	DIODE	RD39ESB2
C1708	1-137-364-11	FILM	0.001MF 5% 50V	D1703	8-719-110-88	DIODE	RD39ESB2
C1709	1-137-364-11	FILM	0.001MF 5% 50V	D1801	8-719-110-17	DIODE	RD10ESB2
C1710	1-163-009-11	CERAMIC CHIP	0.001MF 10% 50V	D1802	8-719-110-17	DIODE	RD10ESB2
C1720	1-107-667-11	ELECT	2.2MF 20% 160V	D1803	8-719-110-17	DIODE	RD10ESB2
C1721	1-136-207-11	FILM	0.047MF 10% 250V	D1840	8-719-302-43	DIODE	ELIZ
C1722	1-126-934-11	ELECT	220MF 20% 16V	D1841	8-719-991-33	DIODE	1SS133T-77
C1723	1-161-830-00	CERAMIC	0.0047MF 500V	D1901	8-719-991-33	DIODE	1SS133T-77
C1726	1-126-934-11	ELECT	220MF 20% 16V	D1902	8-719-991-33	DIODE	1SS133T-77
C1803	1-163-037-11	CERAMIC CHIP	0.022MF 10% 50V	D1903	8-719-991-33	DIODE	1SS133T-77
C1804	1-126-964-11	ELECT	10MF 20% 50V	D1904	8-719-991-33	DIODE	1SS133T-77
C1805	1-137-366-11	FILM	0.0022MF 5% 50V	D1905	8-719-923-60	DIODE	MTZJ-T-77-9.1A
C1841	1-163-023-00	CERAMIC CHIP	0.015MF 10% 50V	D1906	8-719-970-87	DIODE	ERA38-06
C1844	1-130-959-00	FILM	0.047MF 10% 400V	D1907	8-719-970-87	DIODE	ERA38-06
C1845	1-136-175-00	FILM	0.68MF 5% 50V	D1908	8-719-300-33	DIODE	RU-3AM
C1901	1-163-251-11	CERAMIC CHIP	100PF 5% 50V	D1909	8-719-991-33	DIODE	1SS133T-77
C1902	1-137-374-11	FILM	0.047MF 5% 50V	D1910	8-719-991-33	DIODE	1SS133T-77
C1903	1-126-964-11	ELECT	10MF 20% 50V	< IC >			
C1904	1-137-366-11	FILM	0.0022MF 5% 50V	IC1801	8-759-603-37	IC	M5216P
C1905	1-137-374-11	FILM	0.047MF 5% 50V	IC1901	8-759-450-95	IC	LM393N
C1906	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V	IC1902	8-759-008-70	IC	LM358N
C1911	1-136-189-00	FILM	0.1MF 10% 250V				



REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
< COIL >				R1722	1-216-017-00	RES,CHIP	47 5% 1/10W
L1701	1-408-603-31	INDUCTOR	10UH	R1724	1-216-017-00	RES,CHIP	47 5% 1/10W
L1702	1-408-597-31	INDUCTOR	3.3UH	R1725	1-215-887-00	METAL OXIDE	150 5% 2W F
L1703	1-408-603-31	INDUCTOR	10UH	R1728	1-216-037-00	RES,CHIP	330 5% 1/10W
L1704	1-249-422-11	CARBON	2.7K 5% 1/4W	R1729	1-216-041-00	RES,CHIP	470 5% 1/10W
L1841	1-406-674-11	INDUCTOR	3.3mmH	R1731	1-249-411-11	CARBON	330 5% 1/4W
L1843	1-406-989-21	INDUCTOR	10mmH	R1751	1-216-049-00	RES,CHIP	1K 5% 1/10W
L1901	1-406-677-11	INDUCTOR	10mmH	R1752	1-216-049-00	RES,CHIP	1K 5% 1/10W
< TRANSISTOR >				R1753	1-216-049-00	RES,CHIP	1K 5% 1/10W
Q1701	8-729-120-28	TRANSISTOR	2SC1623-L5L6	R1805	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q1702	8-729-120-28	TRANSISTOR	2SC1623-L5L6	R1806	1-216-117-00	RES,CHIP	680K 5% 1/10W
Q1703	8-729-017-05	TRANSISTOR	2SA1837	R1807	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q1704	*4-368-683-11	SPRING, TRANSISTOR	(Q1703)	R1808	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q1704	8-729-119-78	TRANSISTOR	2SC2785-HFE	R1809	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q1706	8-729-017-06	TRANSISTOR	2SC4793	R1810	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q1708	8-729-216-22	TRANSISTOR	2SA1162-G	R1841	1-216-097-00	RES,CHIP	100K 5% 1/10W
Q1709	8-729-120-28	TRANSISTOR	2SC1623-L5L6	R1842	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
Q1710	8-729-620-06	TRANSISTOR	2SC3052-EF	R1843	1-260-111-11	CARBON	10K 5% 1/2W
Q1840	8-729-120-28	TRANSISTOR	2SC1623-L5L6	R1844	1-216-061-00	RES,CHIP	3.3K 5% 1/10W
Q1841	8-729-017-06	TRANSISTOR	2SC4793	R1846	1-260-111-11	CARBON	10K 5% 1/2W
Q1901	8-729-620-06	TRANSISTOR	2SC3052-EF	R1847	1-215-886-11	METAL OXIDE	100 5% 2W F
Q1902	8-729-620-06	TRANSISTOR	2SC3052-EF	R1848	1-215-875-11	METAL OXIDE	10K 5% 1W F
Q1903	8-729-011-06	TRANSISTOR	2SC3840K	R1901	1-249-441-11	CARBON	100K 5% 1/4W
Q1904	8-729-620-06	TRANSISTOR	2SC3052-EF	R1902	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q1905	8-729-620-06	TRANSISTOR	2SC3052-EF	R1903	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q1906	8-729-119-80	TRANSISTOR	2SC2688-LK	R1904	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q1907	8-729-119-80	TRANSISTOR	2SC2688-LK	R1905	1-216-097-00	RES,CHIP	100K 5% 1/10W
< RESISTOR >				R1906	1-216-073-00	RES,CHIP	10K 5% 1/10W
R1701	1-216-049-00	RES,CHIP	1K 5% 1/10W	R1907	1-216-097-00	RES,CHIP	100K 5% 1/10W
R1702	1-216-049-00	RES,CHIP	1K 5% 1/10W	R1908	1-216-033-00	RES,CHIP	220 5% 1/10W
R1703	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R1909	1-215-493-00	METAL	1M 1% 1/4W
R1704	1-216-045-00	RES,CHIP	680 5% 1/10W	R1910	1-216-295-00	SHORT	0
R1705	1-247-815-91	CARBON	220 5% 1/4W	R1911	1-216-073-00	RES,CHIP	10K 5% 1/10W
R1706	1-247-815-91	CARBON	220 5% 1/4W	R1912	1-208-845-11	RES,CHIP	1M 5% 1/10W
R1708	1-216-035-00	RES,CHIP	270 5% 1/10W	R1913	1-216-049-00	RES,CHIP	1K 5% 1/10W
R1712	1-260-311-11	CARBON	39 5% 1/2W	R1914	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R1713	1-249-384-11	CARBON	1.8 5% 1/4W F	R1915	1-216-073-00	RES,CHIP	10K 5% 1/10W
R1714	1-249-414-11	CARBON	560 5% 1/4W F	R1916	1-216-675-11	METAL CHIP	10K 0.50% 1/10W
R1715	1-249-432-11	CARBON	18K 5% 1/4W	R1917	1-216-687-11	METAL CHIP	33K 0.50% 1/10W
R1716	1-249-417-11	CARBON	1K 5% 1/4W F	R1921	1-215-896-51	METAL OXIDE	4.7K 5% 2W F
R1717	1-215-913-11	METAL OXIDE	220 5% 3W F	R1922	1-215-878-00	METAL OXIDE	33K 5% 1W F
R1718	1-249-432-11	CARBON	18K 5% 1/4W	R1923	1-216-097-00	RES,CHIP	100K 5% 1/10W
R1719	1-249-384-11	CARBON	1.8 5% 1/4W F	R1924	1-216-097-00	RES,CHIP	100K 5% 1/10W
R1720	1-249-400-11	CARBON	39 5% 1/4W F	R1925	1-216-097-00	RES,CHIP	100K 5% 1/10W
R1721	1-249-414-11	CARBON	560 5% 1/4W	R1951	1-216-073-00	RES,CHIP	10K 5% 1/10W
				R1952	1-216-065-00	RES,CHIP	4.7K 5% 1/10W

S1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
*A-1652-053-A	S1 BOARD, COMPLETE	(KV-29X5A/29X5D/ *****)		C1149	1-126-960-11	ELECT 1MF	20% 50V
*A-1652-056-A	S1 BOARD, COMPLETE	(KV-29X5B)		C1150	1-126-960-11	ELECT 1MF	20% 50V
*A-1652-052-A	S1 BOARD, COMPLETE	(KV-29X5E/29X5L/29X5U)		C1151	1-104-664-11	ELECT 47MF	20% 25V
				C1152	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
						< FILTER >	
	< CAPACITOR >			CF1101	1-409-327-00	TRAP, CERAMIC (6.5MHZ)	(KV-29X5B)
						< CONNECTOR >	
C1103	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	CN1101	1-766-925-11	CONNECTOR, BOARD TO BOARD 18P	
C1106	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V			< DIODE >	
C1107	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	D1101	8-216-295-00	SHORT 0 (KV-29X5A/29X5D/29X5K/29X5R)	
C1108	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V		8-719-066-72	DIODE BB135 (KV-29X5B/29X5E/29X5L/29X5U)	
C1109	1-104-664-11	ELECT 47MF	20% 25V	D1102	8-719-991-33	DIODE 1SS133T-77	
						< FERRITE BEAD >	
C1112	1-163-001-11	CERAMIC CHIP 220PF	10% 50V	FB1101	1-410-396-41	FERRITE 0.45UH	
C1113	1-104-664-11	ELECT 47MF	20% 25V	FB1102	1-410-396-41	FERRITE 0.45UH	
C1114	1-163-001-11	CERAMIC CHIP 220PF	10% 50V	FB1103	1-410-396-41	FERRITE 0.45UH	
C1115	1-104-664-11	ELECT 47MF	20% 25V	FB1104	1-410-396-41	FERRITE 0.45UH	
C1118	1-162-637-11	CERAMIC CHIP 0.47MF	16V	FB1105	1-410-396-41	FERRITE 0.45UH	
C1120	1-164-005-11	CERAMIC CHIP 0.47MF	25V	FB1110	1-412-002-31	INDUCTOR CHIP 4.7UH	
C1122	1-104-664-11	ELECT 47MF	20% 25V	FB1111	1-412-004-31	INDUCTOR CHIP 6.8UH	
C1123	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V			(KV-29XA/29X5D/29X5K/29X5R)	
C1124	1-163-251-11	CERAMIC CHIP 100PF	5% 50V		1-412-002-31	INDUCTOR CHIP 4.7UH	
C1126	1-126-960-11	ELECT 1MF	20% 50V			(KV-29XB/29X5E/29X5L/29X5U)	
C1127	1-163-235-11	CERAMIC CHIP 22PF	5% 50V	FB1112	1-412-002-31	INDUCTOR CHIP 4.7UH	
		(KV-29X5A/29X5D/29X5K/29X5R)		FB1113	1-412-002-31	INDUCTOR CHIP 4.7UH	(KV-29X5B)
	1-163-239-11	CERAMIC CHIP 33PF	5% 50V				
		(KV-29X5B/29X5E/29X5L/29X5U)					
C1128	1-163-239-11	CERAMIC CHIP 33PF	5% 50V				
C1129	1-163-989-11	CERAMIC CHIP 0.033MF	10% 25V				
		(KV-29X5B/29X5E/29X5L/29X5U)					
C1130	1-110-501-11	CERAMIC CHIP 0.33MF	10% 16V				
		(KV-29X5B/29X5E/29X5L/29X5U)					
C1131	1-164-005-11	CERAMIC CHIP 0.47MF	25V			< IC >	
		(KV-29X5A/29X5B/29X5D/29X5K/29X5R)		IC1101	8-759-522-62	IC TDA9870 (KV-29X5A/29X5D/29X5K/29X5R)	
					8-759-466-48	IC TDA9875P (KV-29X5B/29X5E/29X5L/29X5U)	
C1132	1-104-664-11	ELECT 47MF	20% 25V	IC1102	8-759-998-98	IC LM358D (KV-29X5A/29X5D/29X5K/29X5R)	
C1133	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V		8-759-100-96	IC UPC4558G2 (KV-29X5B/29X5E/29X5L/29X5U)	
C1135	1-163-117-00	CERAMIC CHIP 100PF	5% 50V				
			(KV-29X5B)				
C1137	1-104-664-11	ELECT 47MF	20% 25V			< COIL >	
			(KV-29X5B)	L1101	1-408-596-31	INDUCTOR 2.7UH	
						(KV-29XB/295XE/295XL/295XU)	
C1138	1-163-109-00	CERAMIC CHIP 47PF	5% 50V	L1113	1-408-600-31	INDUCTOR 5.6UH	(KV-29X5B)
			(KV-29X5B)	L1114	1-410-671-31	INDUCTOR 47UH	
C1143	1-163-005-11	CERAMIC CHIP 470PF	10% 50V	L1115	1-408-599-31	INDUCTOR 4.7UH	
C1144	1-163-005-11	CERAMIC CHIP 470PF	10% 50V				
C1145	1-163-077-00	CERAMIC CHIP 0.1MF	10% 25V	L1116	1-408-599-31	INDUCTOR 4.7UH	
				L1117	1-410-971-11	INDUCTOR 10UH	(KV-29X5B)
C1146	1-164-005-11	CERAMIC CHIP 0.47MF	25V				
C1147	1-164-005-11	CERAMIC CHIP 0.47MF	25V				
C1148	1-164-005-11	CERAMIC CHIP 0.47MF	25V				

The components identified by shading and marked Δ are critical for safety
 Replace only with the part number specified.

REF. NO.	PART.NO	DESCRIPTION	REMARK	REF. NO.	PART.NO	DESCRIPTION	REMARK
MISCELLANEOUS *****				REMOTE COMMANDER *****			
Δ	1-406-807-11	COIL, DEMAGNETIZATION					
	1-452-032-00	MAGNET, DISC; 10MM \emptyset					
	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM \emptyset					
Δ	8-453-005-21	NECK ASSY (NA297-M2)					
Δ	1-453-265-11	TRANSFORMER ASSY, FLYBACK	(NX-1681/U2B4)				
	1-503-902-11	SPEAKER (15X6.5CM)					
Δ	1-251-317-31	CAP ASSY, HIGH-VOLTAGE					
Δ	1-652-433-21	SWITCH, PUSH (AC POWER)					
Δ	1-756-286-11	CORD, POWER					
		(KV-29X5A/29X5B/29X5D/29X5E/29X5K/29X5R)					
Δ	1-776-204-11	CORD, POWER (FILTER)	(KV-29X5L/29X5U)				
	1-693-418-11	TUNER (TELE9-001A)	(KV-29X5A/29X5B/29X5D/ KV-29X5E/29X5L)				
	8-598-432-01	TUNER (BTP-AC411)	(KV-29X5K)				
	8-598-361-01	TUNER (BTP-AC402)	(KV-29X5R)				
	8-598-360-01	TUNER (BTP-AU602)	(KV-29X5U)				
Δ	8-733-856-05	PICTURE TUBE (SD-269)	(M68LCT60X)				
Δ	8-451-467-12	DEFLECTION YOKE (Y29GXA2B)					

ACCESSORIES AND PACKING MATERIALS *****							
	4-042-476-01	BAG, PROTECTION					
	4-204-027-01	INDIVIDUAL CARTON					
	4-204-028-01	CUSHION (UPPER) (ASSY)					
	4-204-029-01	CUSHION (LOWER) (ASSY)					
	4-204-043-41	MANUAL, INSTRUCTION (KV-29X5A)					
		(ITALIAN)					
	4-204-043-51	MANUAL, INSTRUCTION (KV-29X5B)					
		(FRENCH/GERMAN/ITALIAN/DUTCH)					
	4-204-074-11	MANUAL, INSTRUCTION (KV-29X5D)					
		(GERMAN/GREEK/DUTCH/ENGLISH/TURKISH)					
	4-204-043-71	MANUAL, INSTRUCTION (KV-29X5E)					
		(SPANISH)					
	4-204-043-81	MANUAL, INSTRUCTION (KV-29X5E)					
		(FINNISH/NORWEGIAN/HUNGARIAN/ PORTUGUESE/DANISH/SWEDISH)					
	4-204-074-61	MANUAL, INSTRUCTION (KV-29X5L/29X5U)					
		(ENGLISH)					
	4-204-043-91	MANUAL, INSTRUCTION (KV-29X5K)					
		(CZECH/ENGLISH/POLISH/HUNGARIAN)					
	4-204-074-91	MANUAL, INSTRUCTION (KV29X5R)					
		(RUSSIAN/BULGARIAN/ENGLISH)					

S1 BOARD IC VOLTAGE TABLE

IC Voltage Table		
Ref No	Pin No	Voltage (V)
IC1101	4	3.4
	5	3.2
	7	4.8
	8	2.3
	9	4.8
	10 - 12	2.3
	13	4.8
	15	4.8
	16	4.8
	17	2.6
	18	3.5
	19	4.0
	33 - 34	2.4
	36 - 37	2.4
	38 - 39	4.8
	41 - 42	2.4
	44 - 48	2.4
	53 - 55	2.4
	59	4.8
	60 - 61	2.4
64	4.8	
IC1102	1	4.5
	2	4.1
	3	4.5
	6	4.3
	7	3.5
	8	9.0

A BOARD TRANSISTOR VOLTAGE TABLE

Transistor Voltage Table			
Ref No	(B) Base	(C) Collector	(E) Emitter
Q004	4.7	0.7	4.9
Q005	0.3	4.8	-
Q006	-	2.0	-
Q007	-	4.9	-
Q008	-	4.9	-
Q009	-	4.9	-
Q010	0.6	-	-
Q011	0.5	-	-
Q012	-	4.8	-
Q101	2.0	-	2.6
Q109	-	4.7	-
Q110	4.3	-	-
Q111	2.3	2.9	2.9
Q112	2.9	-	-
Q202	0.6	-	-
Q401	8.0	3.4	8.6
Q405	4.4	8.8	3.7
Q408	2.6	8.0	2.0
Q532	7.3	3.1	-
Q533	-0.2	-152.0	-
Q535	-0.7	92.0	-
Q571	134.2	-	134.4
Q574	-	2.0	-
Q576	3.4	6.7	2.8
Q601	4.0	3.6	4.8

VM BOARD IC VOLTAGE TABLE

IC Voltage Table		
Ref No	Pin No	Voltage (V)
IC1801	1 - 3	5.0
	5 - 6	4.3
	7	3.7
	8	8.0
	9	4.8
IC1901	1	1.7
	2	4.0
	3	4.5
	5	6.7
	6	6.8
	7	3.6
	8	8.0
	8	8.0
IC1902	1 - 3	2.8
	5 - 6	5.2
	7	5.0
	8	8.0

VM BOARD TRANSISTOR VOLTAGE TABLE

Transistor Voltage Table			
Ref No	(B) Base	(C) Collector	(E) Emitter
Q1701	2.4	8.7	1.8
Q1702	2.4	6.5	1.8
Q1703	133.4	52.0	133.8
Q1704	8.7	8.5	5.8
Q1706	0.8	52.0	0.5
Q1708	5.0	2.1	5.6
Q1709	5.4	8.0	4.7
Q1710	5.6	8.0	5.0
Q1840	-0.3	4.7	-
Q1901	0.4	1.3	-
Q1902	0.4	0.3	-
Q1903	0.3	62.0	-
Q1904	-	8.0	0.1
Q1905	2.7	6.5	2.2
Q1906	4.0	68.8	3.4
Q1907	68.7	122.2	68.2
	Gate	Drain	Source
Q1841	4.7	18.0	-

S1 BOARD TRANSISTOR VOLTAGE TABLE

Transistor Voltage Table			
Ref No	(B) Base	(C) Collector	(E) Emitter
Q1111	2.0	4.1	1.3
Q1112	1.5	3.5	0.9
Q1113	1.9	4.1	1.3
Q1114	3.5	3.3	4.1
Q1115	3.3	4.1	2.7

C BOARD TRANSISTOR VOLTAGE TABLE

Transistor Voltage Table			
Ref No	(B) Base	(C) Collector	(E) Emitter
Q702	1.5	8.3	1.1
Q703	8.8	169.8	8.3
Q704	169.5	1.9	209.5
Q705	1.5	8.3	1.1
Q706	8.8	170.7	8.3
Q707	170.5	1.9	215.7
Q708	1.5	8.3	1.0
Q709	8.9	171.3	8.3
Q710	171.2	1.9	206.3

A BOARD IC VOLTAGE TABLE

IC Voltage Table								
Ref No	Pin No	Voltage (V)	Ref No	Pin No	Voltage (V)	Ref No	Pin No	Voltage (V)
IC001	4	0.8	IC101	1 - 2	3.2	IC301	34 - 35	3.3
	6	3.2		3	4.8		41	5.0
	7 - 8	4.8		4	3.0		42	8.6
	9	0.3		5	2.8		43	5.0
	10	2.0		6	2.7		44	8.8
	11	1.5		7	3.9		45	5.2
	12	4.7		8	2.2	48	1.5	
	19	3.6		12	2.0	IC201	1	15.3
	20	4.3		15	1.5		5	15.3
	21	4.8		17	0.3		7	15.3
	24	2.5		18 - 19	2.6		10	4.5
	25	2.1		21	4.7		12	15.3
	26	2.4	22	0.9	13		31.2	
	30	4.8	23 - 24	3.2	14	15.3		
	31	5.0	IC301	1	3.3	IC501	1	1.4
	36	0.2		2	5.0		2	14.0
	37	0.1		3	4.3		3	-13.0
	38 - 39	5.0		4	5.0		4	-14.0
	41 - 42	2.2		6	4.4		5	0.2
	44	4.8		8	4.5		6	14.5
	45	2.8		11	3.9	7	1.4	
	47	0.1		12	2.4	IC531	1	1.6
	48	2.4		13	3.5		2	1.7
	49	3.3		14	3.4		3	1.9
50	3.1	15		5.6	5		2.8	
51	0.1	16		7.6	6		2.0	
5 - 6	4.8	18	1.3	7	7.3			
IC004	7	3.3	19	2.4	8	8.8		
	8	3.2	20	3.8	IC606	1 - 2	-60.0	
IC005	9	3.2	21	1.6		4	-51.3	
	10	4.7	22 - 24	1.5	IC609	4	-58.0	
	12	4.7	26 - 28	4.5				
	13	1.5	30	4.5				
	14	4.7	31 - 32	4.4				
	16	4.7	33	8.1				

A BOARD * MARK


Ref	29X5A	29X5B	29X5D	29X5E	29X5K	29X5L	29X5R	29X5U
C111	0	0-1UF	0	0	0	0	0	0
C133	-	1UF	-	-	-	-	-	-
C414	1UF	0.001UF	1UF	1UF	0.001UF	1UF	1UF	1UF
C579	-	LEAD JUMPER (5.0MM)	-	-	LEAD JUMPER (5.0MM)	-	-	LEAD JUMPER (5.0MM)
C606	330UF	330UF	330UF	330UF	-	330UF	330UF	330UF
CF105	-	TRAP CERAMIC	-	-	-	-	-	TRAP CERAMIC
D541	LEAD JUMPER	-	LEAD JUMPER	LEAD JUMPER	-	LEAD JUMPER	LEAD JUMPER	-
IC001	SAA5497PS/MIA/040	SAA5497PS/MIA/038	SAA5497PS/MIA/040	SAA5497PS/MIA/038	SAA5497PS/MIA/038	SAA5497PS/MIA/038	SAA5497PS/MIA/039	SAA5497PS/MIA/038
IC101	TDA9817/V	TDA9818/V1	TDA9817/V	TDA9817/V	TDA9817/V1	TDA9817/V1	TDA9817/V	TDA9817/V
JR012	0	-	0	0	0	0	0	0
JW128	47K	LEAD JUMPER (5.0MM)	47K	LEAD JUMPER (5.0MM)	47K	47K	LEAD JUMPER (5.0MM)	LEAD JUMPER (5.0MM)
Q110	-	DTC144EK-T146	-	-	-	-	-	-
RO63	-	4.7K	-	-	-	-	-	-
RO64	-	4.7K	-	-	-	-	-	-
R112	-	2.2K	-	-	-	-	-	-
R116	47K	-	47K	47K	47K	47K	-	-
R133	0	-	0	0	0	0	0	0
R149	-	1K	-	-	-	-	-	-
R417	75	75	75	75	75	75	75	68
R418	470 ½W	470 ½W	470 ½W	470 ½W	470 ½W	470 ½W	470 ½W	470 ½W
RV101	-	22K	-	-	-	-	-	-
SWF101	1-767-874-11	1-579-273-11	1-767-874-11	1-767-874-11	1-767-874-11	1-579-273-11	1-767-874-11	1-767-874-11
SWF103	-	FILTER, SURFACE WAVE	-	-	-	-	-	-
TU101	TELE9-001A	TELE9-001A	TELE9-001A	TELE9-001A	BTP-AC411	TELE9-001A	BTP-AC402	BTP-AU602

S1 BOARD * MARK


Ref	29X5A	29X5B	29X5D	29X5E	29X5K	29X5L	29X5R	29X5U
C1127	22PF	33PF	22PF	33PF	22PF	33PF	22PF	33PF
C1129	-	0.033UF	-	0.033UF	-	0.033UF	-	0.33UF
C1130	-	0.33UF	-	0.33UF	-	0.33UF	-	0.33UF
C1131	0.47UF	0.47UF	0.47UF	-	0.47UF	-	0.47UF	-
D1101	0	BB135	0	BB135	0	BB135	0	BB135
FB1111	6.8UH	4.7UH	6.8UH	4.7UH	6.8UH	4.7UH	6.8UH	4.7UH
FB1113	-	4.7UH	-	-	-	-	-	-
IC1101	TDA9870	TDA9875P	TDA9870	TDA9875P	TDA9870	TDA9875P	TDA9870	TDA9875P
IC1102	LM358DR-E2	NJM4558M-TE2	LM358DR-E2	NJM4558M-TE2	LM358DR-E2	NJM4558M-TE2	LM358DR-E2	NJM4558M-TE2
L1101	-	2.7UH	-	2.7UH	-	2.7UH	-	2.7UH
L1113	-	5.6UH	-	-	-	-	-	-
L1117	-	10UH	-	-	-	-	-	-
R1108	2.2K	2.2K	2.2K	-	2.2K	-	2.2K	-
R1116	0	39K	0	39K	0	39K	0	39K
R1117	-	10K	-	10K	-	10K	-	10K
R1118	-	20K	-	20K	-	20K	-	20K
R1121	4.7K	10K	4.7K	10K	4.7K	10K	4.7K	10K
R112	4.7K	10K	4.7K	10K	4.7K	10K	4.7K	10K
R1130	10K	-	10K	-	10K	-	10K	-
R1134	10K	-	10K	-	10K	-	10K	-
R1164	-	10K	-	10K	-	10K	-	10K
R1165	0	-	0	-	0	-	0	-



IC		DIODE		D534	D - 3
IC001	C - 11	D001	D - 8	D535	F - 4
IC003	D - 10	D002	D - 8	D536	F - 2
IC004	D - 9	D004	D - 10	D538	F - 4
IC005	B - 11	D005	D - 8	D539	F - 2
IC101	A - 4	D007	D - D9	D571	F - 5
IC201	B - 7	D008	D - 7	D601	G - 8
IC301	D - 6	D009	C - 11	D602	I - 6
IC501	I - 4	D010	D - 10	D603	H - 6
IC531	C - 4	D011	E - 12	D605	G - 6
IC603	F - 6	D012	D - 11	D608	H - 8
IC604	E - 6	D014	D - 11	D610	F - 7
IC605	C - 8	D15	D - 11	D613	E - 9
IC606	I - 7	D017	E - 10	D614	G - 6
IC608	D - 12	D018	D - 7	D619	I - 8
IC609	E - 11	D023	E - 10	D621	F - 10
TRANSISTOR		D101	B - 2	D626	F - 9
Q004	B - 9	D104	A - 3	D627	F - 9
Q005	C - 10	D201	C - 8	D628	E - 10
Q006	B - 9	D202	C - 8	D629	E - 11
Q007	D - 10	D204	C - 9	D631	F - 11
Q008	D - 11	D205	B - 8	D632	E - 10
Q009	D - 11	D206	B - 7	D633	E - 9
Q010	D - 10	D306	C - 6	D535	F - 4
Q011	D - 8	D307	C - 6	D536	F - 2
Q202	C - 8	D308	E - 5	D538	F - 4
Q401	B - 2	D309	E - 5	D539	F - 2
Q405	B - 2	D405	C - 1		
Q408	B - 2	D406	C - 2		
Q501	I - 5	D407	D - 2		
Q532	E - 2	D409	B - 1		
Q533	F - 1	D415	D - 2		
Q535	D - 1	D417	D - 2		
Q571	F5	D422	C - 1		
Q574	E - 5	D423	C - 1		
Q575	E - 6	D427	B - 2		
Q576	E - 6	D501	I - 4		
Q202	C - 8	D502	H - 4		
Q401	B - 2	D501	I - 4		
Q405	B - 2	D502	H - 4		
Q408	B - 2	D511	G - 3		
Q501	I - 5	D512	H - 3		
Q532	E - 2	D513	I - 3		
Q533	F - 1	D514	I - 3		

WAVEFORMS A BOARD

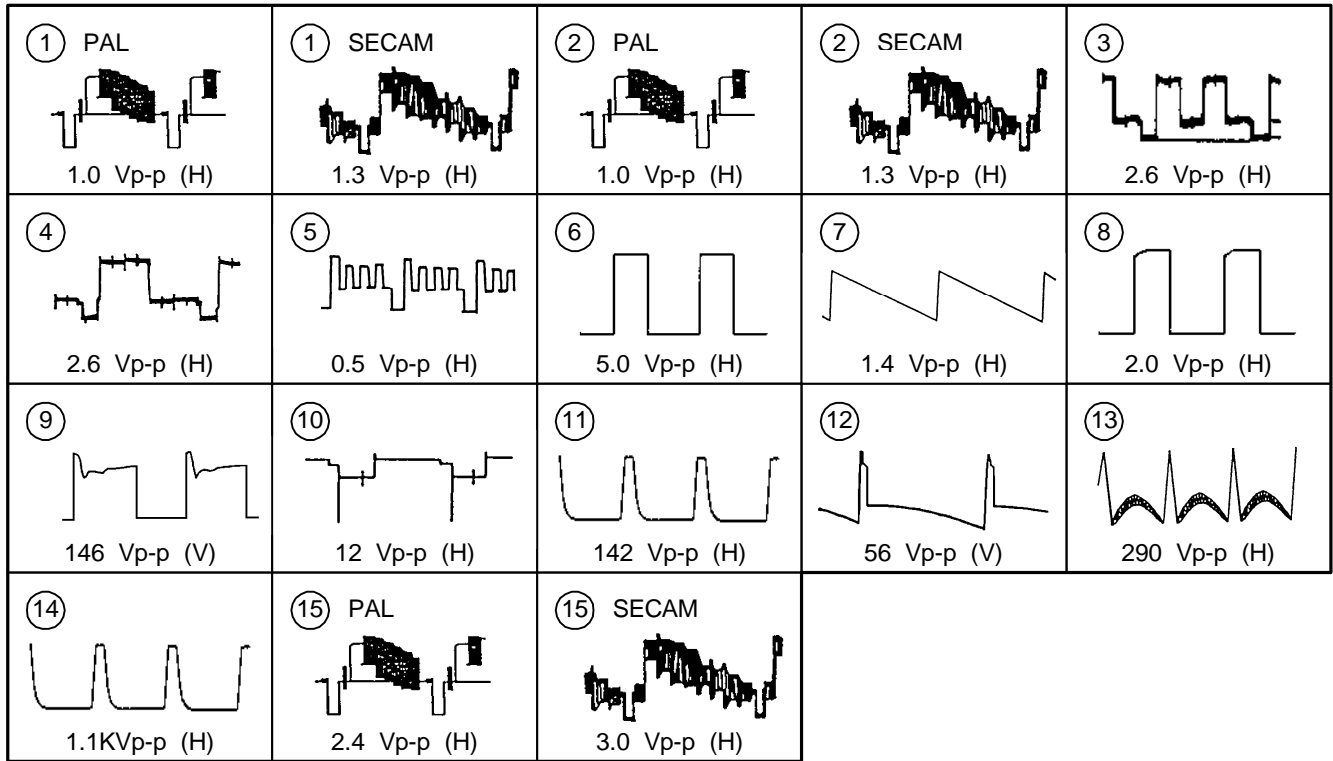


WAVEFORMS C BOARD




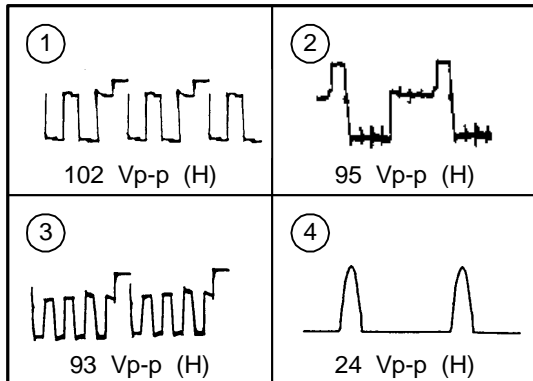


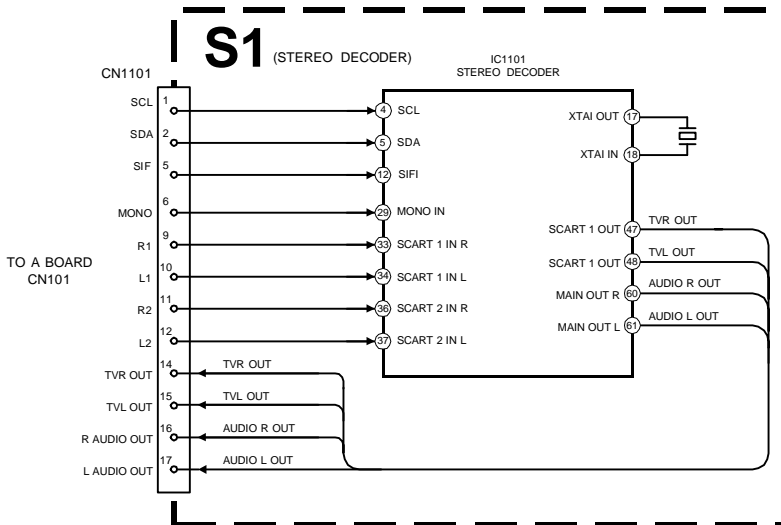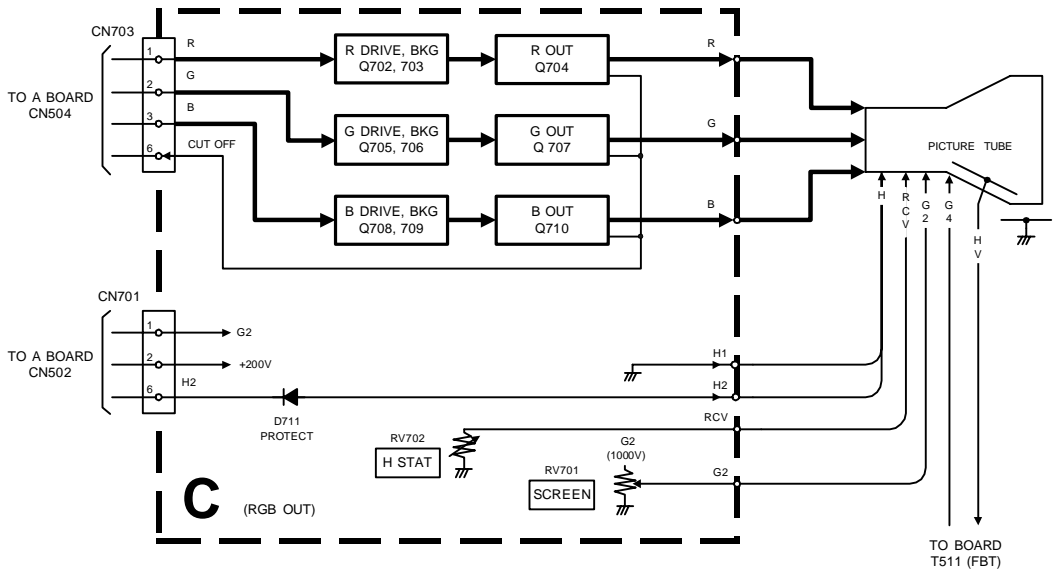


5-1 BLOCK DIAGRAMS (1)

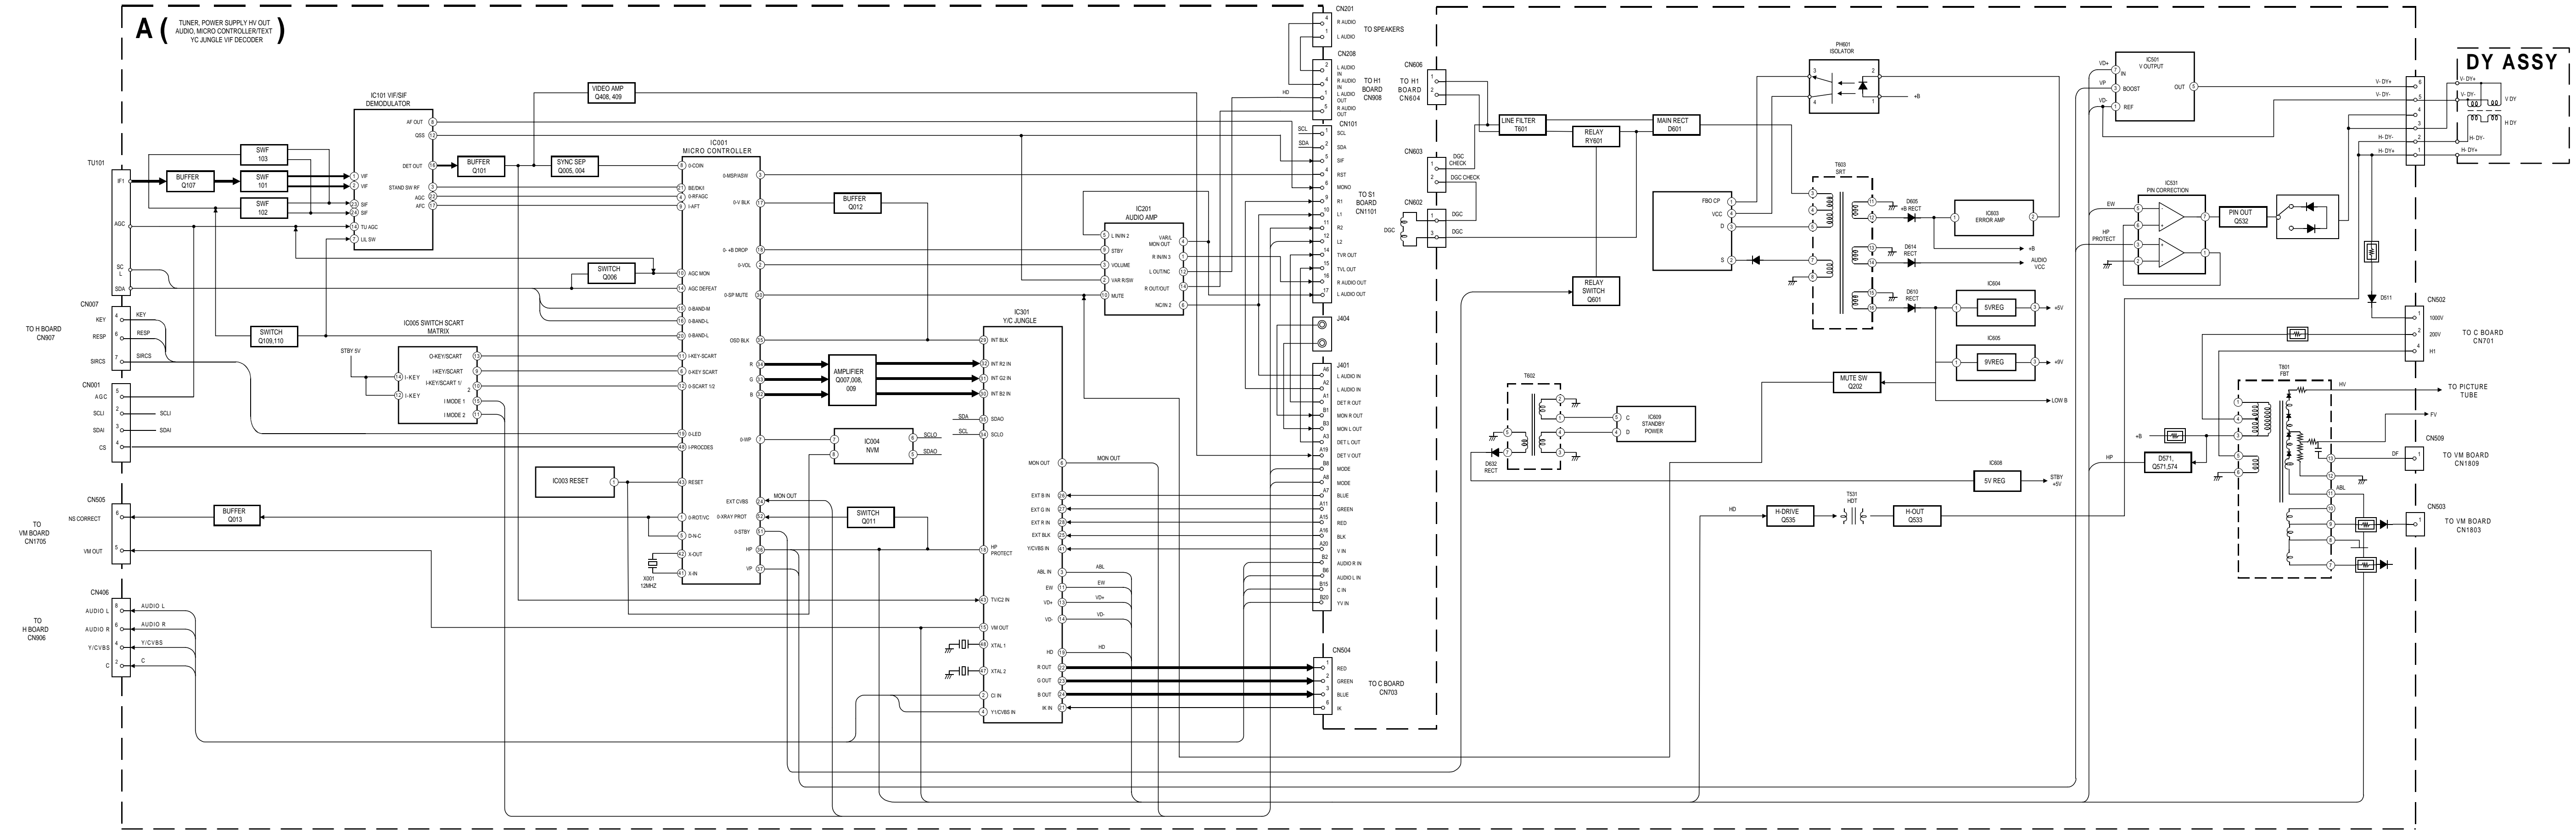

5-1 BLOCK DIAGRAMS (2)

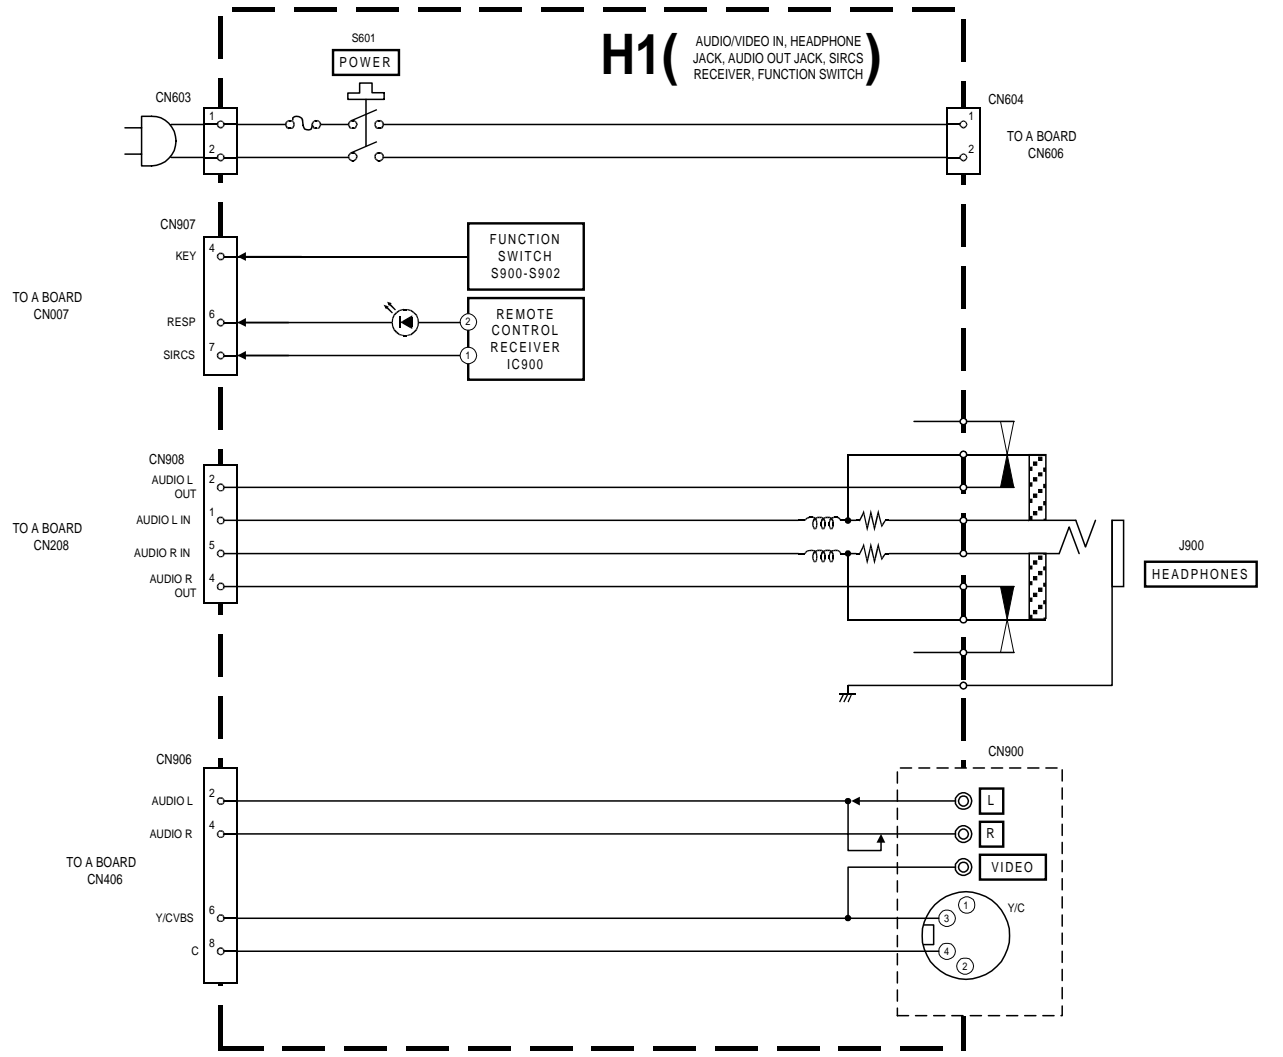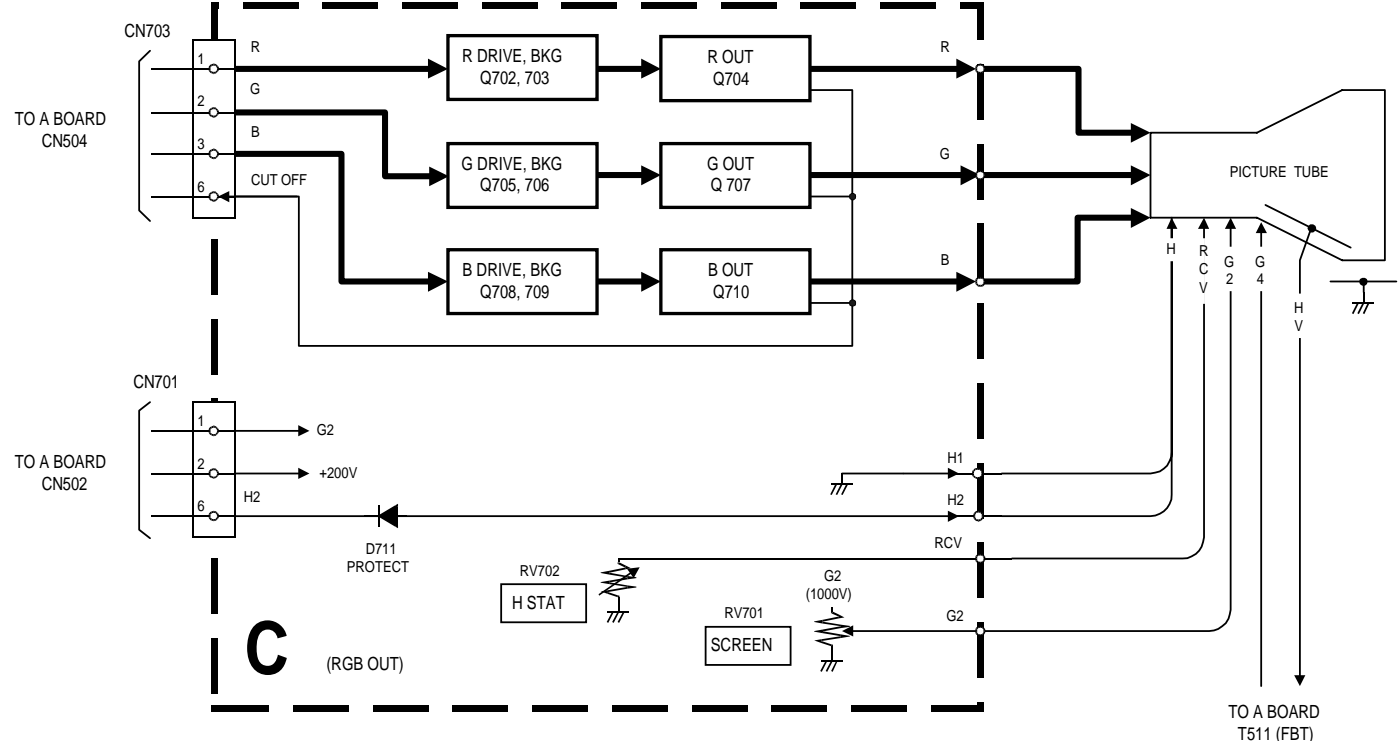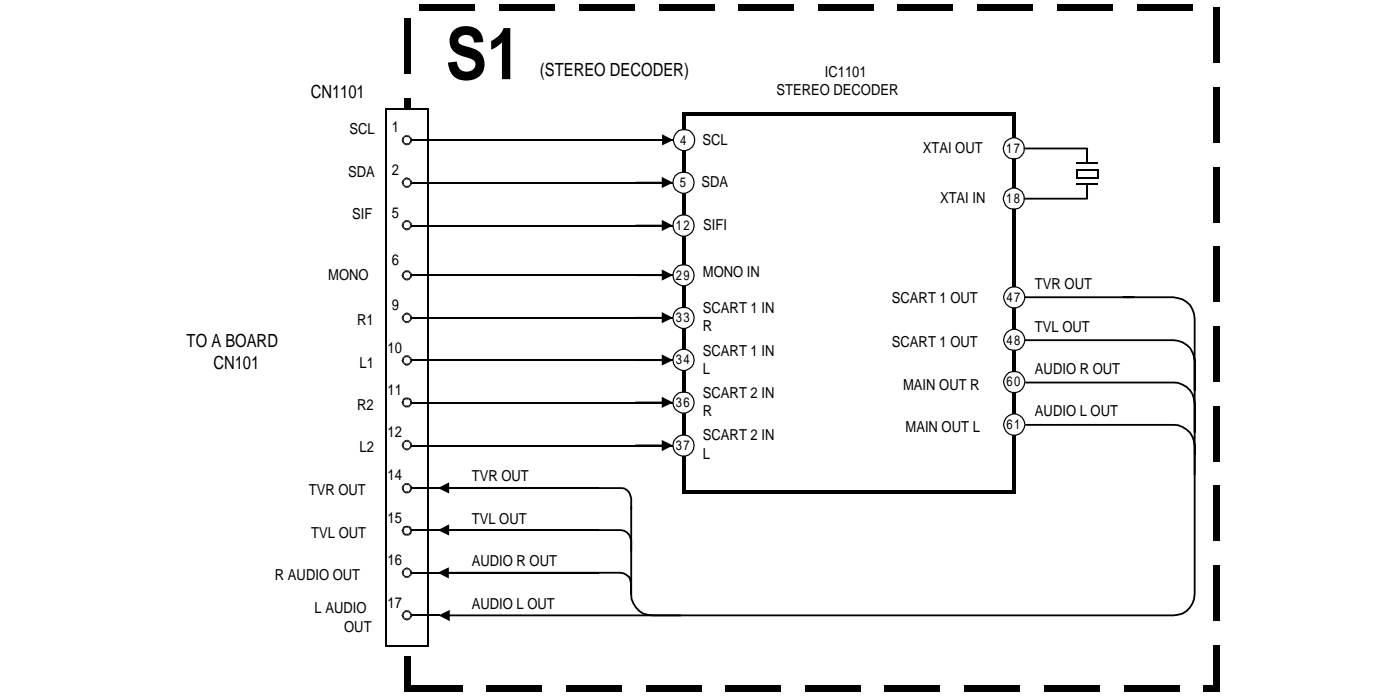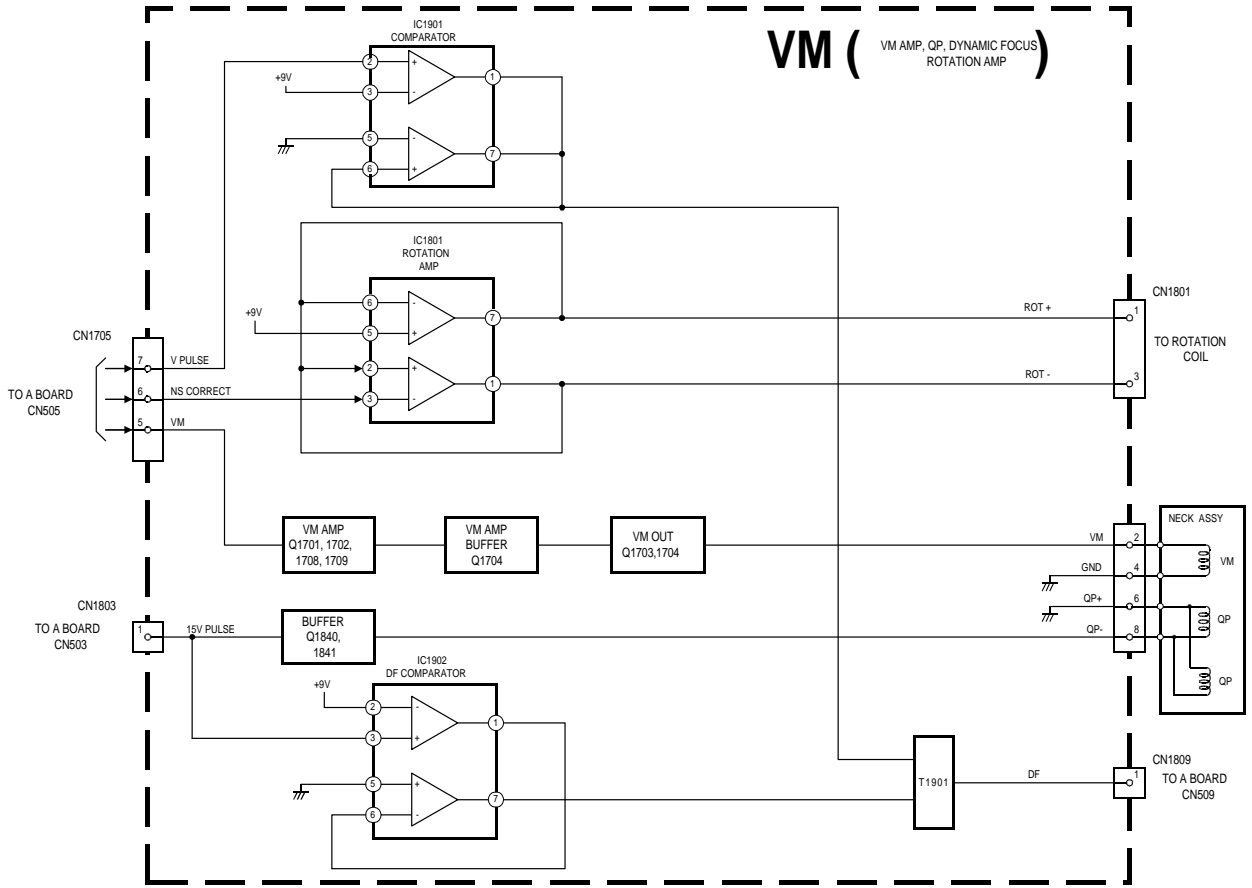

5-2. CIRCUIT BOARD LOCATION

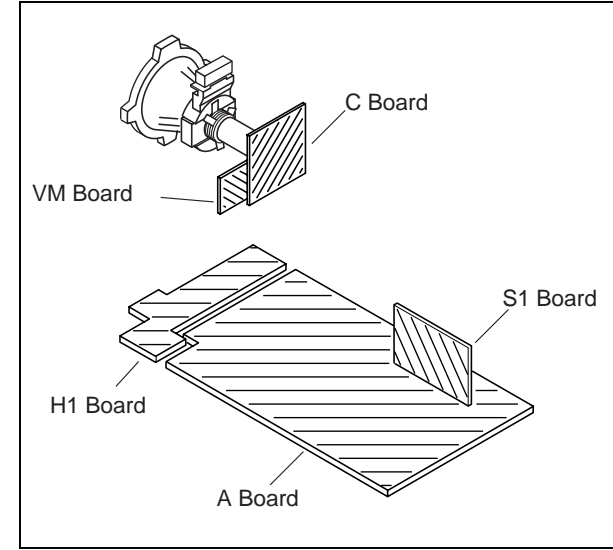

5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

- Note :**
- All capacitors are in μF unless otherwise noted.
 - pF : μF 50WV or less are not indicated except for electrolytic types.
 - Indication of resistance, which does not have one for rating electrical power, is as follows.
- Pitch : 5mm
Electrical power rating : 1/4W
- Chip resistors are 1/10W
 - All resistors are in ohms.
 - $k = 1000$ ohms, $M = 1000,000$ ohms
- : nonflammable resistor.
 - : fusible resistor.
 - : internal component.
 - : panel designation or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 - All voltages are in Volts.
 - Readings are taken with a 10Mohm digital multimeter.
 - Readings are taken with a color bar input signal.
 - Voltage variations may be noted due to normal production tolerances.
- : B + bus.
 - : B - bus.
 - : RF signal path.
 - : earth - ground.
 - : earth - chassis.

Reference Information

RESISTOR	RN	: METAL FILM
	RC	: SOLID
	FPRD	: NON FLAMMABLE CARBON
	FUSE	: NON FLAMMABLE FUSIBLE
	RS	: NON FLAMMABLE METAL OXIDE
	RB	: NON FLAMMABLE CEMENT
	RW	: NON FLAMMABLE WIREWOUND
		: ADJUSTMENT RESISTOR
COIL	LF-8L	: MICRO INDUCTOR
CAPACITOR	TA	: TANTALUM
	PS	: STYROL
	PP	: POLYPROPYLENE
	PT	: MYLAR
	MPS	: METALIZED POLYESTER
	MPP	: METALIZED POLYPROPYLENE
	ALB	: BIPOLAR
	ALT	: HIGH TEMPERATURE
	ALR	: HIGH RIPPLE

Note: The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

Note: Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces de numéro spécifique.

