



LCD Television Service Manual

Chassis: MSD308PX

K15 Series

Ver 1.1

Hisense Electric Co., Ltd.

September, 2011

Contents

Contents	- 2 -
Service Manual	- 3 -
1. Precautions and notices.....	- 3 -
1.1 Warning.....	- 4 -
1.2 Notes.....	- 7 -
2. Product Specifications:	- 10 -
2.1 Specification:	- 10 -
2.2 Main Board:	- 12 -
K15 Series.....	- 12 -
2.3 Wiring Diagram:	- 13 -
3. Factory/Service OSD Menu and Adjustment.....	- 14 -
3.1 To enter the Factory OSD Menu.....	- 14 -
3.2 Factory OSD Menu.....	- 14 -
4. Software Upgrading.....	- 16 -
4.1 Upgrading with the ISP_TOOL.....	- 16 -
4.2 Upgrading with the USB	- 20 -
5. Circuit instruction	- 21 -
5.1 Power assign and block diagram	- 21 -
5.2 Image and signal process	- 22 -
5.3 Troubleshooting	- 28 -
6. Explode View.....	- 35 -
7. Schematic circuit diagram	- 35 -

Service Manual

1. Precautions and notices

BEFORE SERVICING THE LCD TV, READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

WHEN REPLACEMENT PARTS ARE REQUIRED, BE SURE TO USE REPLACEMENT PARTS SPECIFIED BY THE MANUFACTURER.

Proper service and repair is important to the safe, reliable operation of all Hisense Electric Co., Ltd Equipment. The service procedures recommended by Hisense and described in this Service Guide are effective methods of performing service operations. Some of these service operations require the use of tools specially designed for the purpose. The special tools should be used when and as recommended.

It is important to note that this manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It is also important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. Hisense could not possibly know, evaluate and advise the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Hisense has not undertaken any

such broad evaluation. Accordingly, a serviceman that uses a service procedure or tools, which are not recommended by Hisense, must first satisfy himself thoroughly that neither his safety nor the safe of the equipment will be jeopardized by the service method selected.

Hereafter throughout this manual, Hisense Electric Co., Ltd will be referred to as Hisense.

1.1 Warning

1.1.1

Critical components having special safety characteristics are identified with a ▲ by the Ref. No. in the parts list. Use of substitute replacement parts, which do not have the same specified safety characteristics, may create shock, fire, or other hazards.

Under no circumstances should the original design be modified or altered without written permission from Hisense. Hisense assumes no liability, express or implied, arising out of any unauthorized modification of design. Serviceman assumes all liability.

DANGER CAUTION

TO ENSURE THE CONTINUED RELIABILITY OF THIS PRODUCT, USE ONLY ORIGINAL MANUFACTURER'S REPLACEMENT PARTS, WHICH ARE LISTED WITH THEIR PART NUMBERS IN THE PARTS LIST SECTION OF THIS SERVICE GUIDE.

1.1.2.

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD).

Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the set by a wristband with resistance. Keep components and tools also at this same potential.

1. Never replace modules or other components while the unit is switched on.

2. When making settings, use plastic rather than metal tools. This will prevent any short circuits and the danger of a circuit becoming unstable.

1.1.3

To prevent electrical shock, do not use this polarized ac plug with an extension cord, receptacle, or the outlet unless the blades can be fully inserted to prevent blade exposure.

To prevent electrical shock, match wide blade or plug to wide slot, fully insert.

1.1.4

When replacement parts are required, be sure to use replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

1.1.5

Safety regulations require that after a repair the set must be returned in its original condition. In particular attention should be paid to the following points.

- Note: The wire trees should be routed correctly and fixed with the mounted cable clamps.

- The insulation of the mains lead should be checked for external damage.

1.1.6

-
- (1) Do not touch Signal and Power Connector while this product operates. Do not touch EMI ground part and Heat Sink of Film Filter.
 - (2) Do not supply a voltage higher than that specified to this product. This may damage the product and may cause a fire.
 - (3) Do not use this product in locations where the humidity is extremely high, where it may be splashed with water, or where flammable materials surround it. Do not install or use the product in a location that does not satisfy the specified environmental conditions. This may damage the product and may cause a fire.
 - (4) If a foreign substance (such as water, metal, or liquid) gets inside the panel module, immediately turn off the power. Continuing to use the product may cause fire or electric shock.
 - (5) If the product emits smoke, and abnormal smell, or makes an abnormal sound, immediately turn off the power. Continuing to use the product, it may cause fire or electric shock.
 - (6) Do not disconnect or connect the connector while power to the product is on. It takes some time for the voltage to drop to a sufficiently low level after the power has been turned off. Confirm that the voltage has dropped to a safe level before disconnecting or connecting the connector.
 - (7) Do not pull out or insert the power cable from/to an outlet with wet hands. It may cause electric shock.
 - (8) Do not damage or modify the power cable. It may cause fire or electric shock.

(9) If the power cable is damaged, or if the connector is loose, do not use the product: otherwise, this can lead to fire or electric shock.

(10) If the power connector or the connector of the power cable becomes dirty or dusty, wipe it with a dry cloth. Otherwise, this can lead to fire.

(11) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

1.2 Notes

Notes on Safe Handling of the LCD panel and during service

The work procedures shown with the Note indication are important for ensuring the safety of the product and the servicing work. Be sure to follow these instructions.

- Before starting the work, secure a sufficient working space.
- At all times other than when adjusting and checking the product, be sure to turn OFF the POWER Button and disconnect the power cable from the power source of the TV during servicing.
- To prevent electric shock and breakage of PC board, start the servicing work at least 30 seconds after the main power has been turned off. Especially when installing and removing the power board, start servicing at least 2 minutes after the main power has been turned off.
- While the main power is on, do not touch any parts or circuits other than the ones

specified. If any connection other than the one specified is made between the measuring equipment and the high voltage power supply block, it can result in electric shock or activation of the leakage-detection circuit breaker.

- When installing the LCD module in, and removing it from the packing carton, be sure to have at least two persons perform the work.
- When the surface of the panel comes into contact with the cushioning materials, be sure to confirm that there is no foreign matter on top of the cushioning materials before the surface of the panel comes into contact with the cushioning materials. Failure to observe this precaution may result in, the surface of the panel being scratched by foreign matter.
- When handling the circuit board, be sure to remove static electricity from your body before handling the circuit board.
- Be sure to handle the circuit board by holding the large parts as the heat sink or transformer. Failure to observe this precaution may result in the occurrence of an abnormality in the soldered areas.
- Do not stack the circuit boards. Failure to observe this precaution may result in problems resulting from scratches on the parts, the deformation of parts, and short-circuits due to residual electric charge.
- Routing of the wires and fixing them in position must be done in accordance with the original routing and fixing configuration when servicing is completed. All the wires are routed far away from the areas that become hot (such as the heat sink). These wires are

fixed in position with the wire clamps so that the wires do not move, thereby ensuring that they are not damaged and their materials do not deteriorate over long periods of time. Therefore, route the cables and fix the cables to the original position and states using the wire clamps.

- Perform a safety check when servicing is completed. Verify that the peripherals of the serviced points have not undergone any deterioration during servicing. Also verify that the screws, parts and cables removed for servicing purposes have all been returned to their proper locations in accordance with the original setup.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the set.

2. Product Specifications:

2.1 Specification:

LHDN32K15/16CEU:

Model	LHDN32 XX
Panel System	32 inches LED Backlight Panel
Display Resolution	1366×768 Pixels
Television System	PAL I B/G D/K, SECAM B/G D/K L/L' DVB-T DVB-C
Brightness	450cd
Contrast Ratio	5000:1
Inputs/Output	220-240V AC 50/60Hz 60W
SCART	1
HDMI	2
VGA	1
PC Audio	1
Y/Pb/Pr	1
USB	1
VIDEO IN (RCA)	1
AUDIO IN (RCA)	1 (L+R)
ANT	1
Coaxial Audio Output	1
PCMCIA	1
Speaker Power	8W+8W

HEADPHONE	1
Power Source	220-240V ~50/60Hz
Dimension(W×H×D) with base	772.3mm×560.2mm×220.6mm / 772.3mm×560.2mm×220.6mm
Dimension(W×H×D) without base	772.3mm×495mm×46.5mm / 772.3mm×510.6mm×46.5mm
Weight with base(Kg)	9.2Kg
Weight without base(Kg)	8.7Kg

Note: Features and specifications are subject to changes without notice.


LTDN24K15CEU:

Model	LTDN24 XX
Panel System	24 inches LED Backlight Panel
Display Resolution	1920x1080 Pixels
Television System	PAL I B/G D/K, SECAM B/G D/K L/L' DVB-T DVB-C
Brightness	300cd/m ²
Contrast Ratio	1000:1
Inputs/Output	100-240V AC 50/60Hz 33W
SCART	1
HDMI	2
VGA	1
PC Audio	1
Y/Pb/Pr	1
USB	1
VIDEO IN (RCA)	1
AUDIO IN (RCA)	1 (L+R)
ANT	1
Coaxial Audio Output	1
PCMCIA	1
Speaker Power	2W+2W
HEADPHONE	1
Dimension(W×H×D) with base (mm)	564x426x180
Dimension(W×H×D) without base(mm)	564x370x44
Weight with base(Kg)	4.4
Weight without base(Kg)	4.6

Note: Features and specifications are subject to changes without notice.

2.2 Main Board:

K15 Series

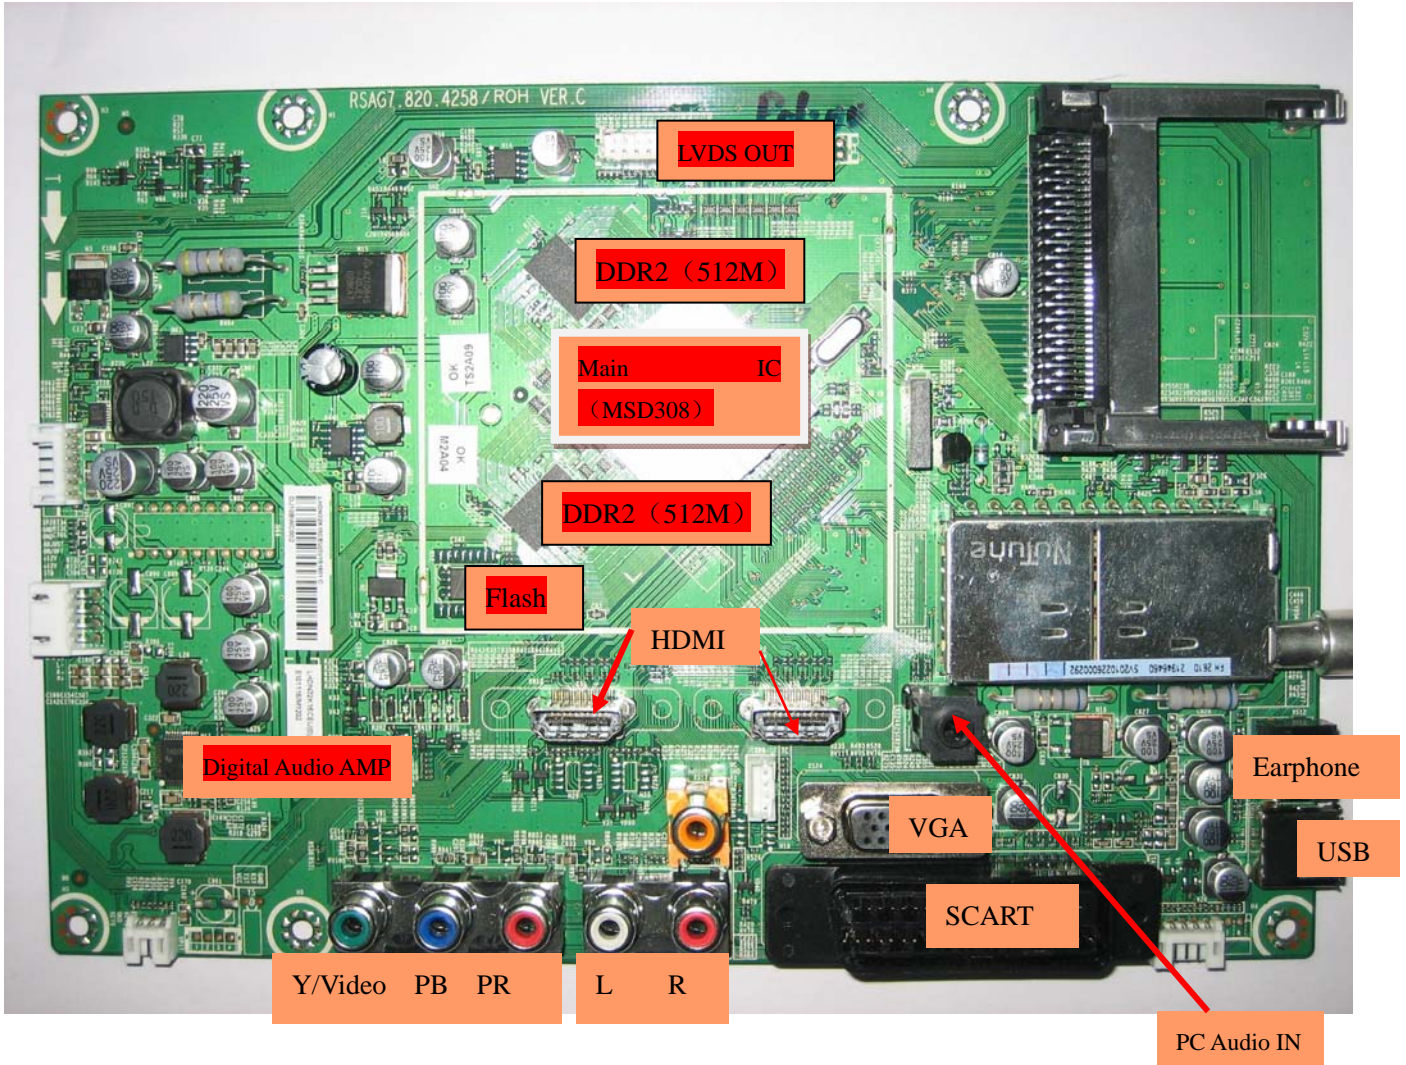


Note:

The above “Main board image” is only take LHDN32K15CEU for example, others please refer to the actual units to determine the boards.

2.3 Wiring Diagram:

LHDN 32K15CEU”

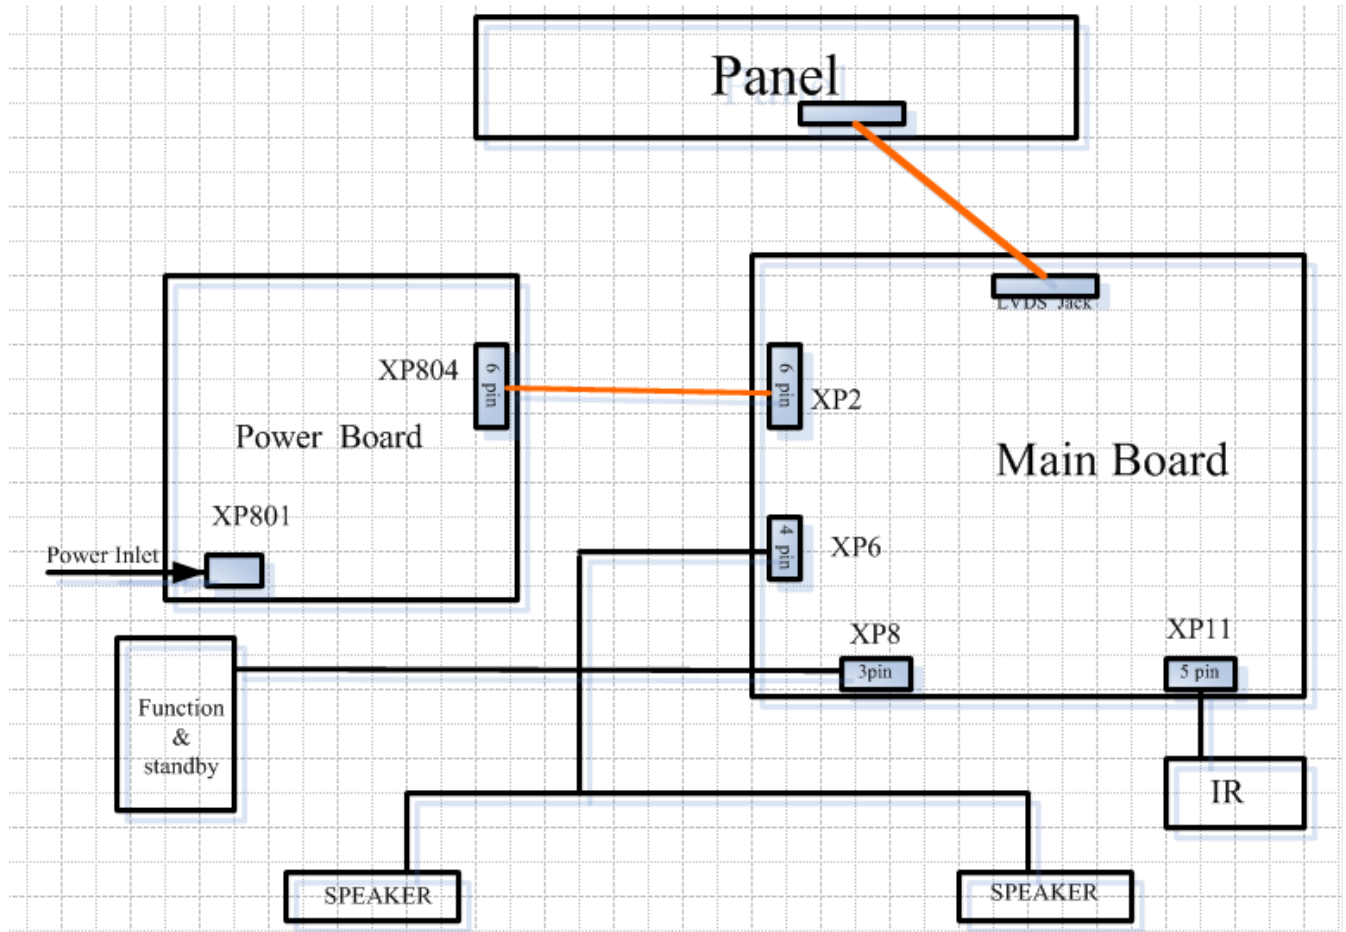

Model	Panel Mode	LVDS (Main-Panel)
LTDN24K15CEU	M236H3-LA2\V236H1-LE2	HX2-2X20KLB400P-CM0\ROH
LHDN32K15/K16CEU	HE315DH-E02 (S3) \ROH	HX2-2×15KLB400P-HS-1\ROH
LHDN32K15CEU (1)	HE315DH-E06\S3\ROH	Same to LHDN32K15

3. Factory/Service OSD Menu and Adjustment

3.1 To enter the Factory OSD Menu

a. With factory RC (remote control)

1. Press “M” button and enter factory mode.(Note1)
2. Press “Menu” button and enter factory OSD menu.
3. Press “CH+”/“CH-” button select the function menu, press “VOL+”/“VOL-” enter the selected function menu. Press “VOL+”/“VOL-” button adjust values in the menu.
4. Press “M” button exit factory mode in the factory OSD menu.

When TV outgoing factory, user can not enter factory OSD menu with Factory Remote

Note:

1. In the “Factory Menu”, item “Function”->”TOFAC” ,you can select “M” or “U”, default is “U”.
----M-Means you can enter factory mode with factory RC or user RC.
----U-Means you can enter factory mode only with user’s RC.
2. Mode “M” is only used for factory production.

b. With user’s RC

Power on the TV.

1. Press “Menu” button and call up User OSD Menu.
2. Select “ Sound” -> “Balance” item.
3. Press number key 1->9->6 ->9 in sequence when “Balance” item is focused.
Note: If necessary, re-do number keys.
4. Factory OSD appears.

Note: Press the standby button then AC turn off and restart the TV, which can exit factory OSD menu.

3.2 Factory OSD Menu

The Factory OSD Menu comprises Factory Menu and Design Menu .

3.2.1、 Factory Menu

Factory Menu

White Balance
ADC Calibration
Funtion
Lnit
Test Pattern
Version
Clear protectly
Clear unprotectly

Function

TO FAC : M or U
Power Mode Save
Software Update
LOGO: Hisense
OSD language: English
WDT: ON
UART Debug : None

White Balance

R-DRV:
G- DRV:
B- DRV
R-CUT:
G- CUT:
B- CUT:
Color Temp: Medium
Panel Set : B1

3.2.2、 Design Menu

Design Menu

Picture Mode
Audio Mode
Picture Curve
Audio Curve
SSC Adjust
Saving Mode
Overscan
Not Stand

Note:

The above “Factory/Service OSD Menu” are reference only, please refer to the actual units to determine the appearances.

4. Software Upgrading


4.1 Upgrading with the ISP_TOOL

4.1.1 Hardware connecting

You can update the software through a special tool (as following)

Connect the Debug board to the TV use VGA interface or the RS232 (4 pin), the other USB port to the compute.

You can update the software through a special tool (as following)

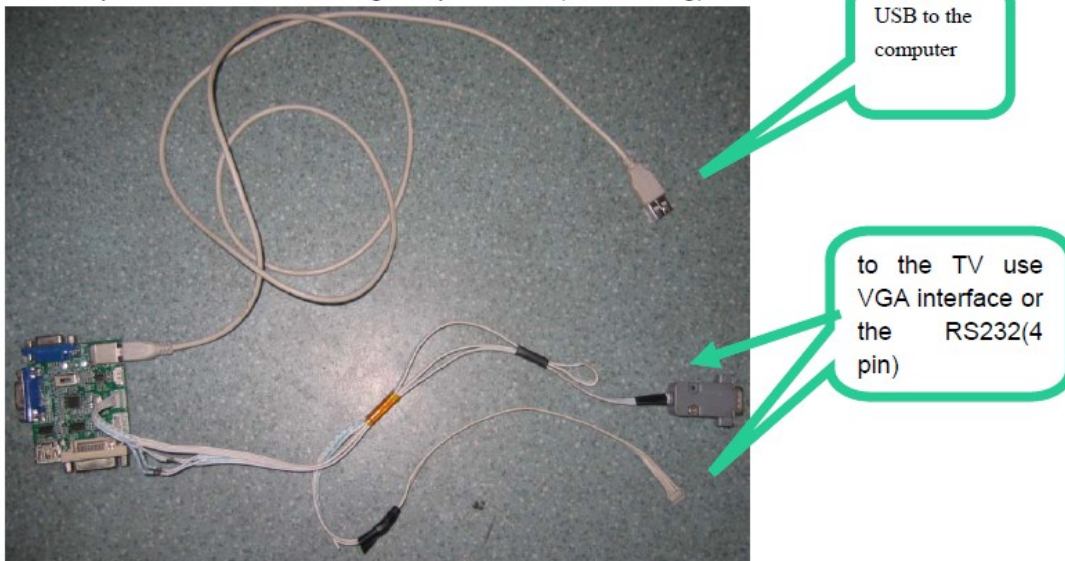


4.1.2 Install the ISP_TOOL4.5.0.4-----only for the first time update.

- 1、 The software is upgraded by a burning tool- ISP_TOOL.exe
- 2、 Find the folder where the ISP_TOOL4.5.0.4 lies in.




There are three folders/files in this folder together.
DLPOR10.dll and FTD2XX.DLL must be in the same folder

- 3、 Double click the ISP_TOOL4.5.0.4 icon, and then a dialog window will show as below.

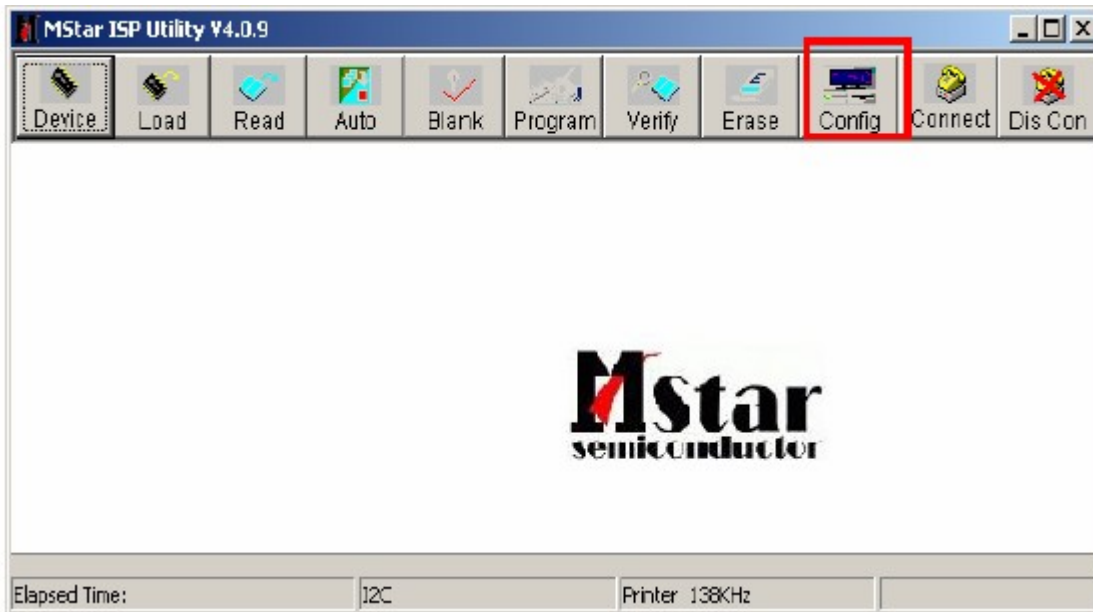

4、Click the” **Config** “button. And then a dialog window will show as below.

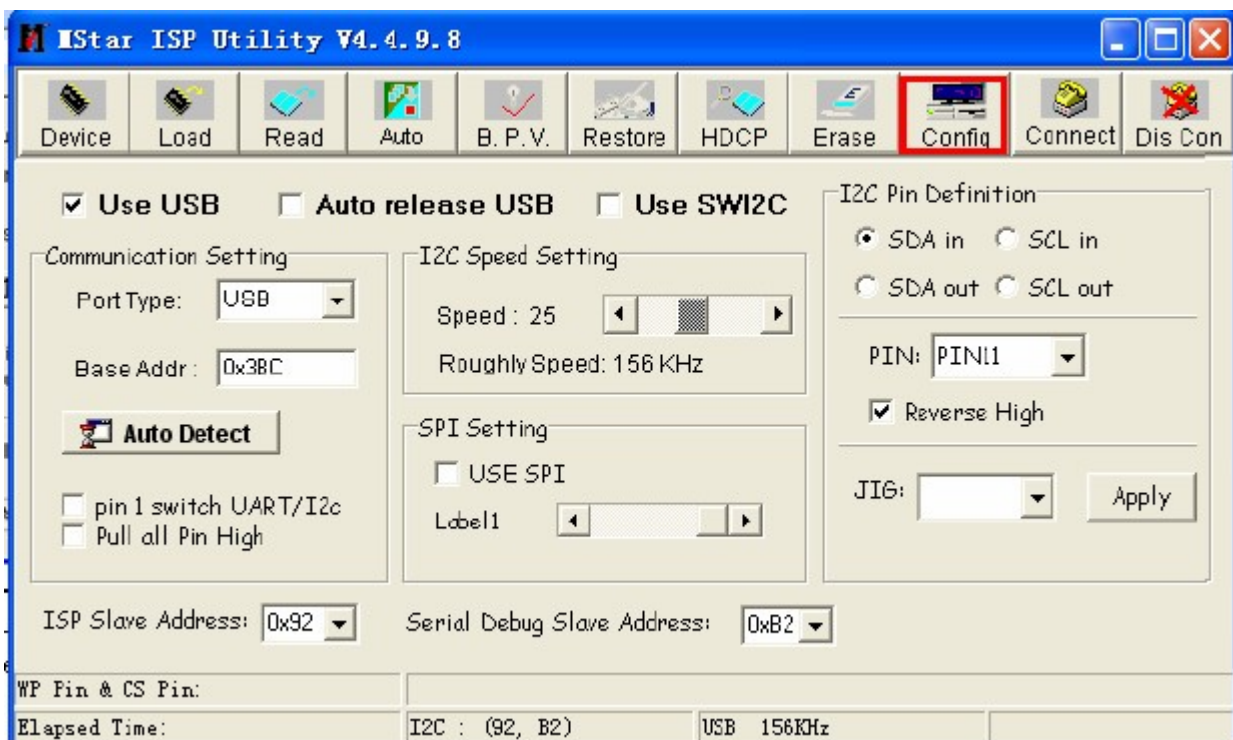

Draw on the front of “Use USB”
Port Type setting is USB
Base Addr setting is 0x38C
ISP Slave Address choose 0x92
Serial Debug Slave Address choose 0xB2,

5、Click the “Connect”button, if appear the following figure, It indicates that the ISP_TOOL has


connected.(According to the tv set,"Device Type" maybe different.)




If appear the following figure, It indicates that the ISP_TOOL has not connected. Please click the“DisCon”button and “Connect”button to connect..



6、Click the“Read ”button, **Choose the correct update file.**

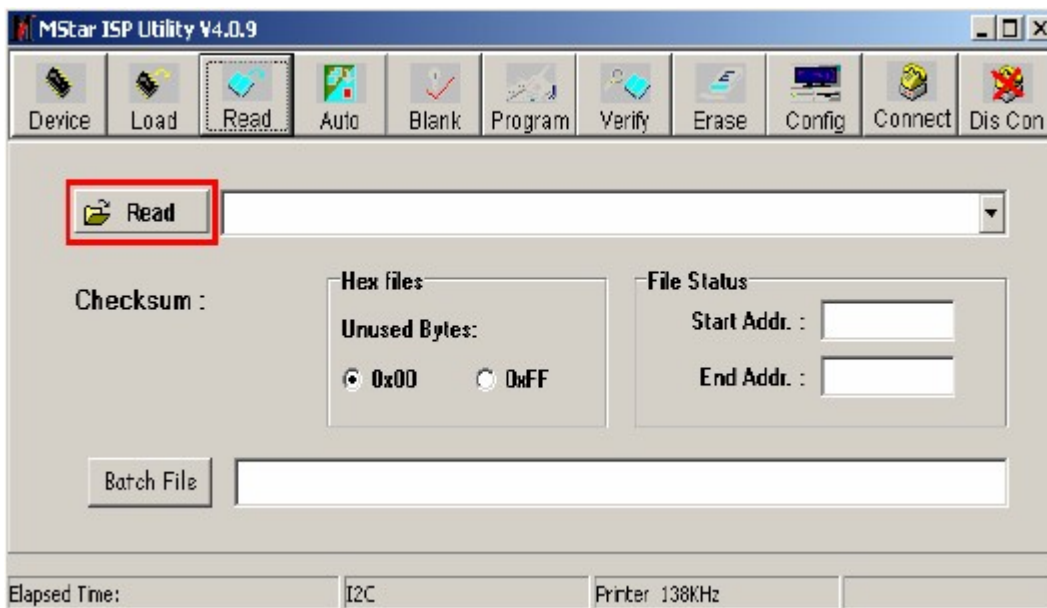

7、 After the update file has been chosen successfully。
Click the“Auto”button and choose parameters as following。

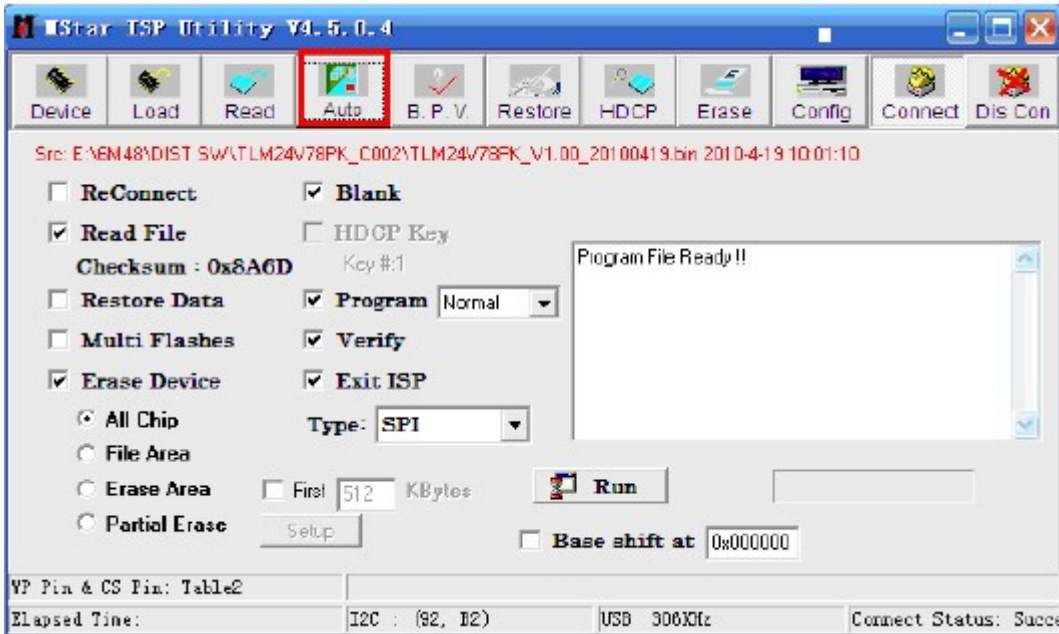

8、Click the “Run” button and wait update end.
If show any error message , then do “Dis Con” >> “Connect”, and click the “Run” button again, till show the following dialog window。

4.2 Upgrading with the USB

Software can update with USB device:

1. Copy the "*.BIN" file such as "MERGE.BIN" to the root directory of a USB disk.
2. Insert the USB disk into the USB slot of the TV SET.
3. Press "Menu" button and call up User OSD Menu, choose "Channel" -> "Software Update(USB)" item. (Note 1)
4. Press "OK", it will show a confirm message box, Press [◀] button to select "yes" in the confirm message box, to start automatic update.
5. Then it will update the software automatically, Please don't power off during the updating process.
6. After the software is successfully upgraded, TV SET will restart automatically.

Note:

1. In some TV SET, "Software Update(USB)" item maybe in "OPTION" menu.
2. After updating, you must confirm the software version in the "Factory Menu" and you'd better do a " **UnProtected Clear**" in the "Factory Menu".

5. Circuit instruction


5.1 Power assign and block diagram

Power assign:


The Power only has +12V_IN output , other voltages are converted from +12V_IN.

- 5Vstb is converted by N19 from +12V_IN, 5VAIN and 5V_USB are converted by N43 from 5Vstb.
- 3.3Vstb and 3.3V_mcu as standby power supply for standby mode.
- 3.3V_Normal supply power for N5 and Main IC N46 is converted by N3 from 5VAIN; 2.5V_Normal supply power for N46 is converted by N13 from 5VAIN; VDDC(1.28V) supply power for main IC(core voltage) is converted by N1 from 5VAIN;1.8VA supply power for N41(DDR),N45(DDR) is converted by N15 from 5VAIN.
- VCC_A supply power for N17(audio amplifier) is converted by N42 from +12V_IN; 5V_Tuner supply power for Tuner is converted by N16 from +12V; 5V_USB supply power for USB interface.
- VCC-Panel supply power for Panel is converted by N14 from +12V_IN

Block diagram:

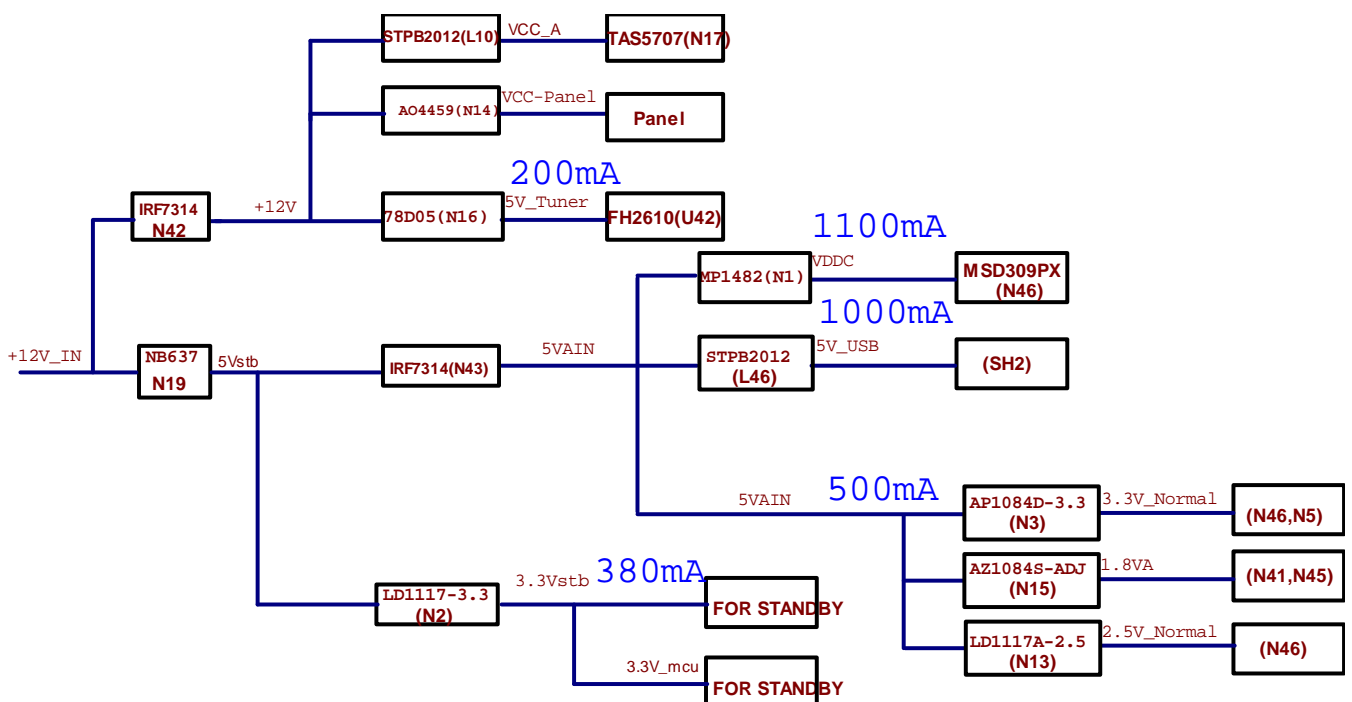

5.2 Image and signal process

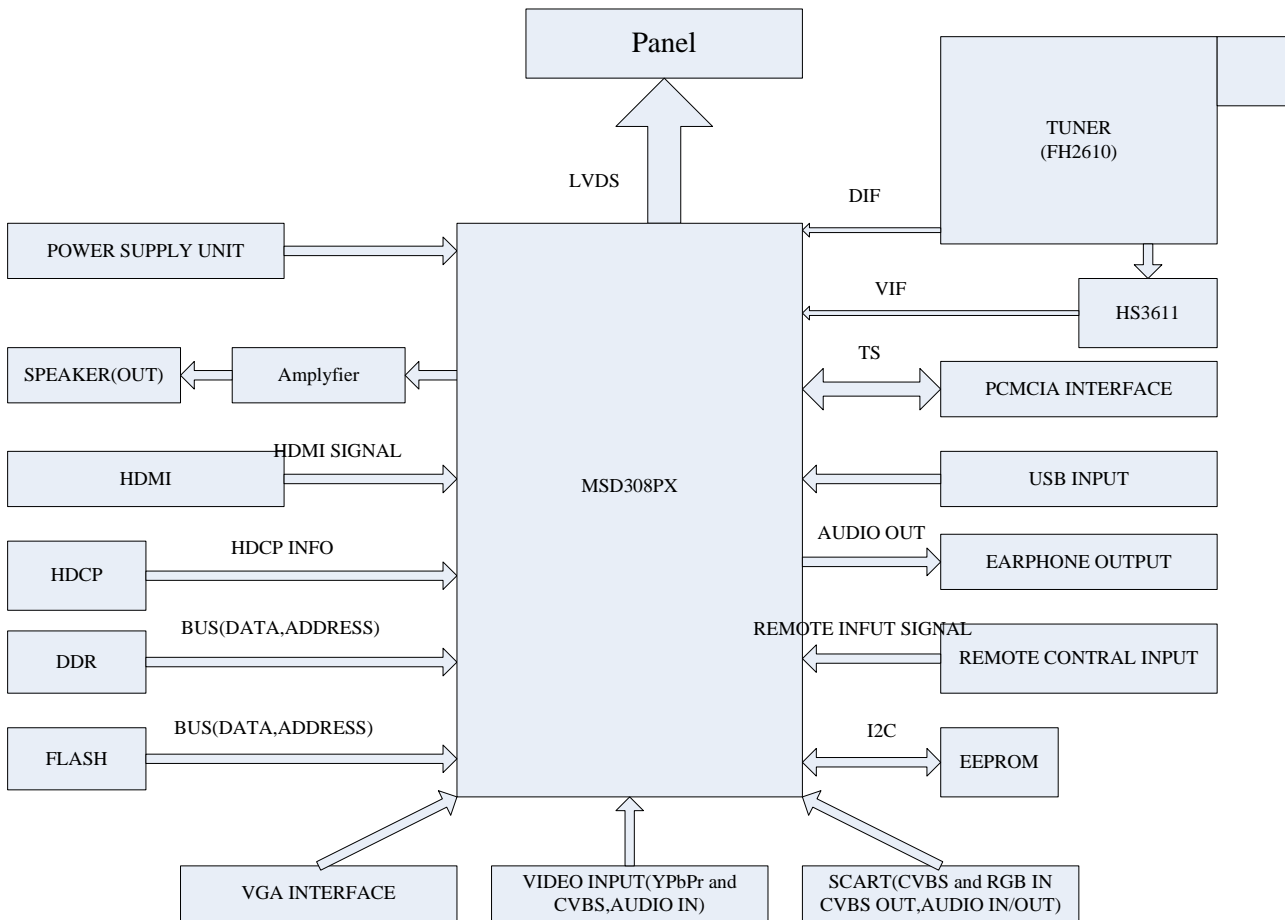


a) RF Signal

Digital intermediate frequency and simulation intermediate frequency are processed by Tuner (U42) from RF Signal. Transport Stream is demodulated directly by main IC from Digital intermediate frequency then enter PCMCIA card to decipher later return the main IC. The simulation intermediate signal that has passed amplification and surface acoustic wave filter to get intermediate frequency enters the main IC. After processed by main IC, next the video signal is processed by SCALER output LVDS signal.to panel . The audio signal is processed and the Audio amplified to the Speakers.


b). AV Signal

The video signal of AV and YPbPr share the same Terminal of XS13, then enter U46.

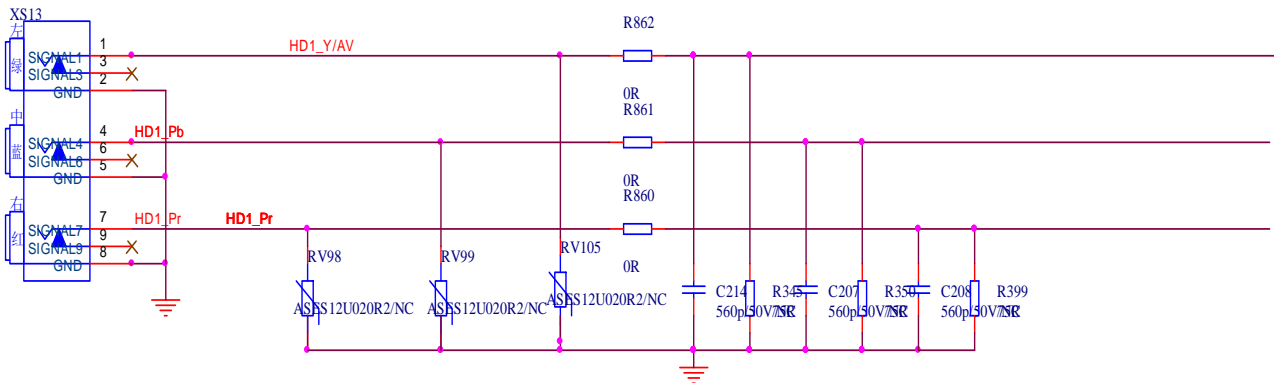


The CVBS video signal of SCART input the Terminal of XS7, then enter U46.


The RGB video signal of SCART input the Terminal of XS7, then enter U46

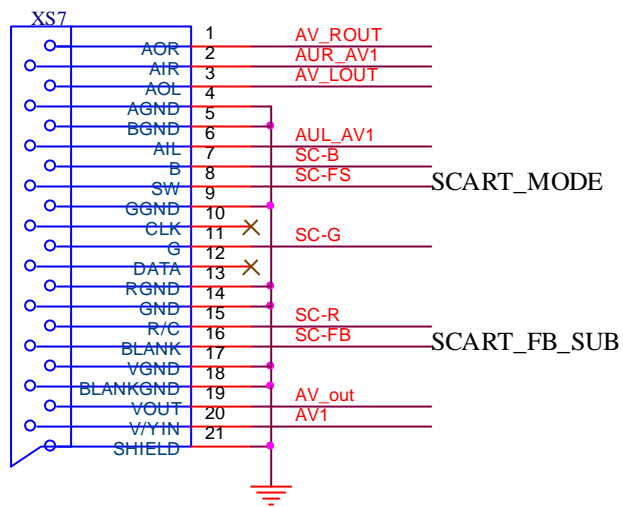

SCART_RGB

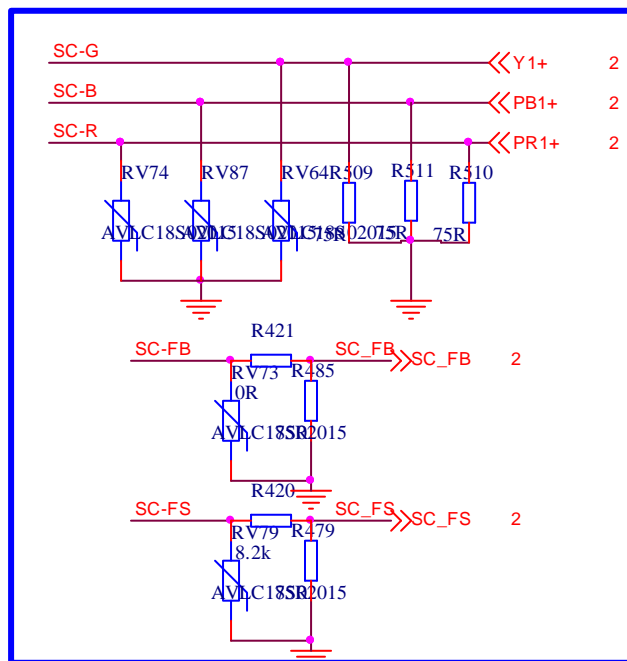


SCART_CVBS_in

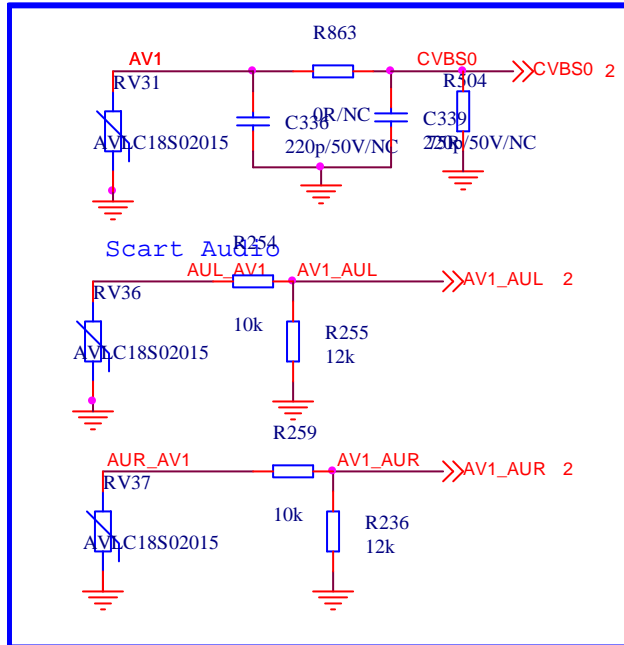


c) VGA Signal

PC (VGA) signal input from XS24 , later enter U46 .

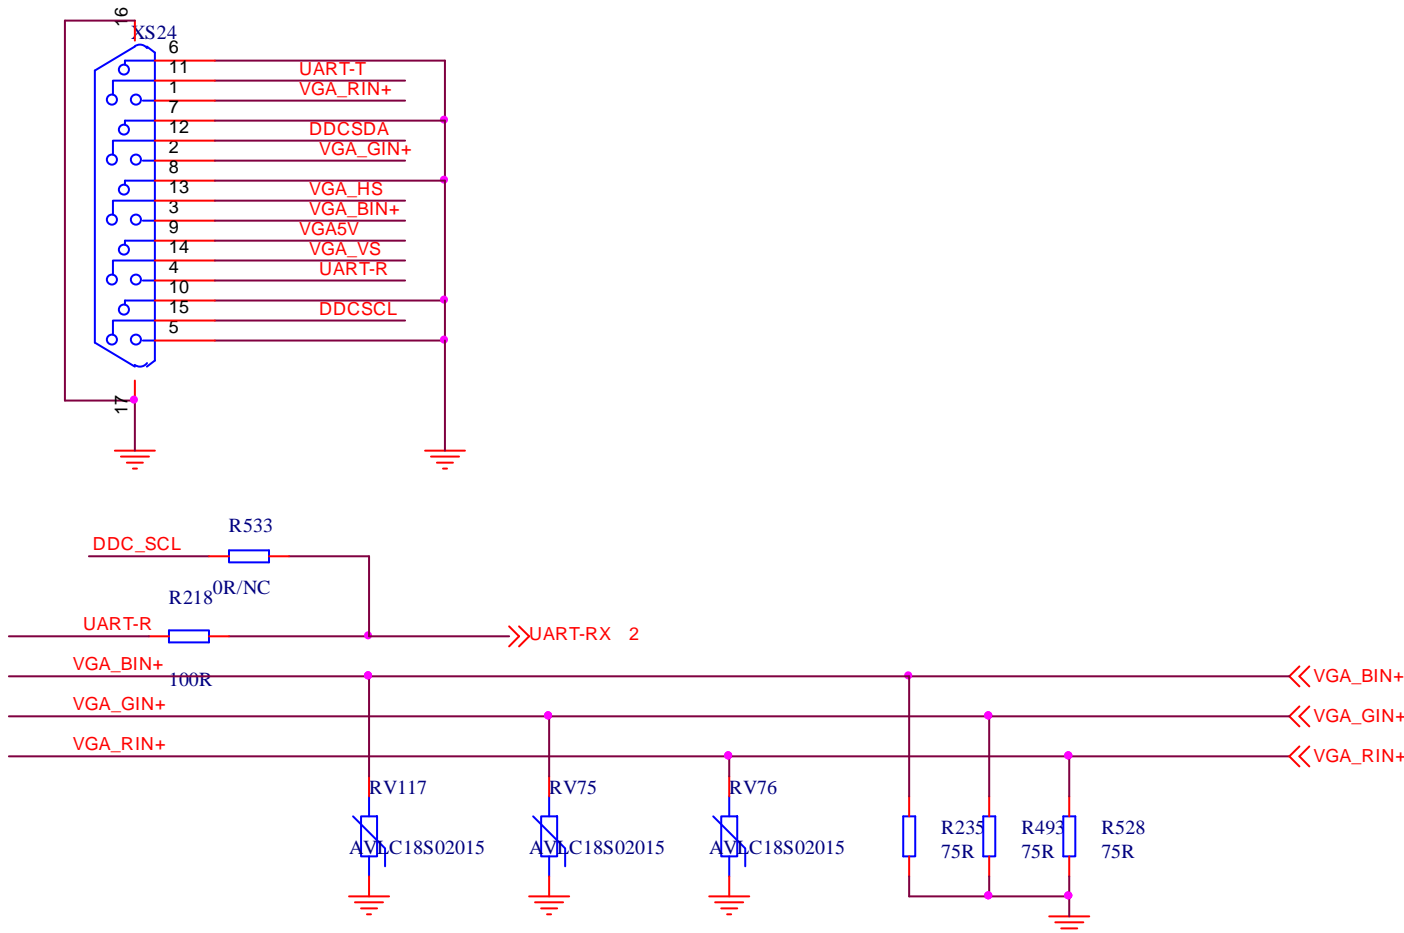


- d) The HDMI and USB signals directly input U46.
- e) SCART CVBS output from U46 pass through the following amplified circuit .output from XS7

SCART_CVBS_out

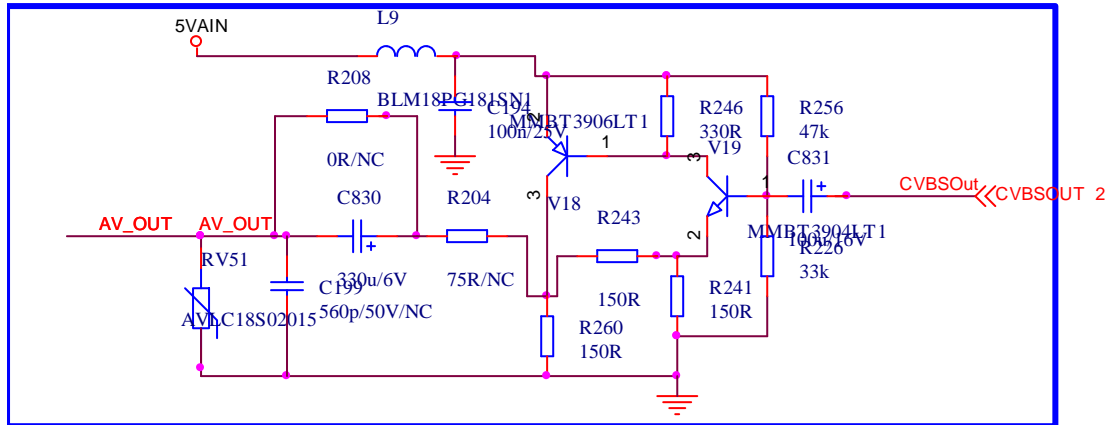

- f) Audio Signal (except HDMI and USB)
VGA audio input through XS6, AV and YPbPr Audio input share the same terminal XS14

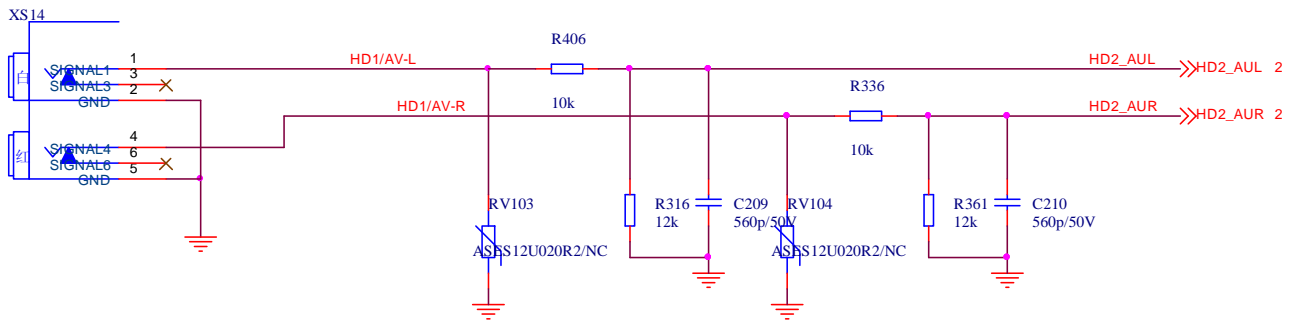


Audio output

After audio signal was processed by the main IC, outputting digital audio signal that enter I2S and TAS5707 to amplify processing ,finally output to Speakers or soundbars


- g) Control Process:

The Power only has 12V(+12V_IN) output , other voltages are converted from 12V(+12V_IN). N43 and N42 can interrupt other voltages while standby, only reserve standby 5V(5Vstb) and standby 12V(+12V_IN). as following. When TV Power on , PWR-ON/OFF Signal is Low level, 5VAIN Power supply normally ; otherwise when TV standby , N43 is shut off , 5VAIN Power _supply is low.


+12V standby signal control as similar as 5VAIN

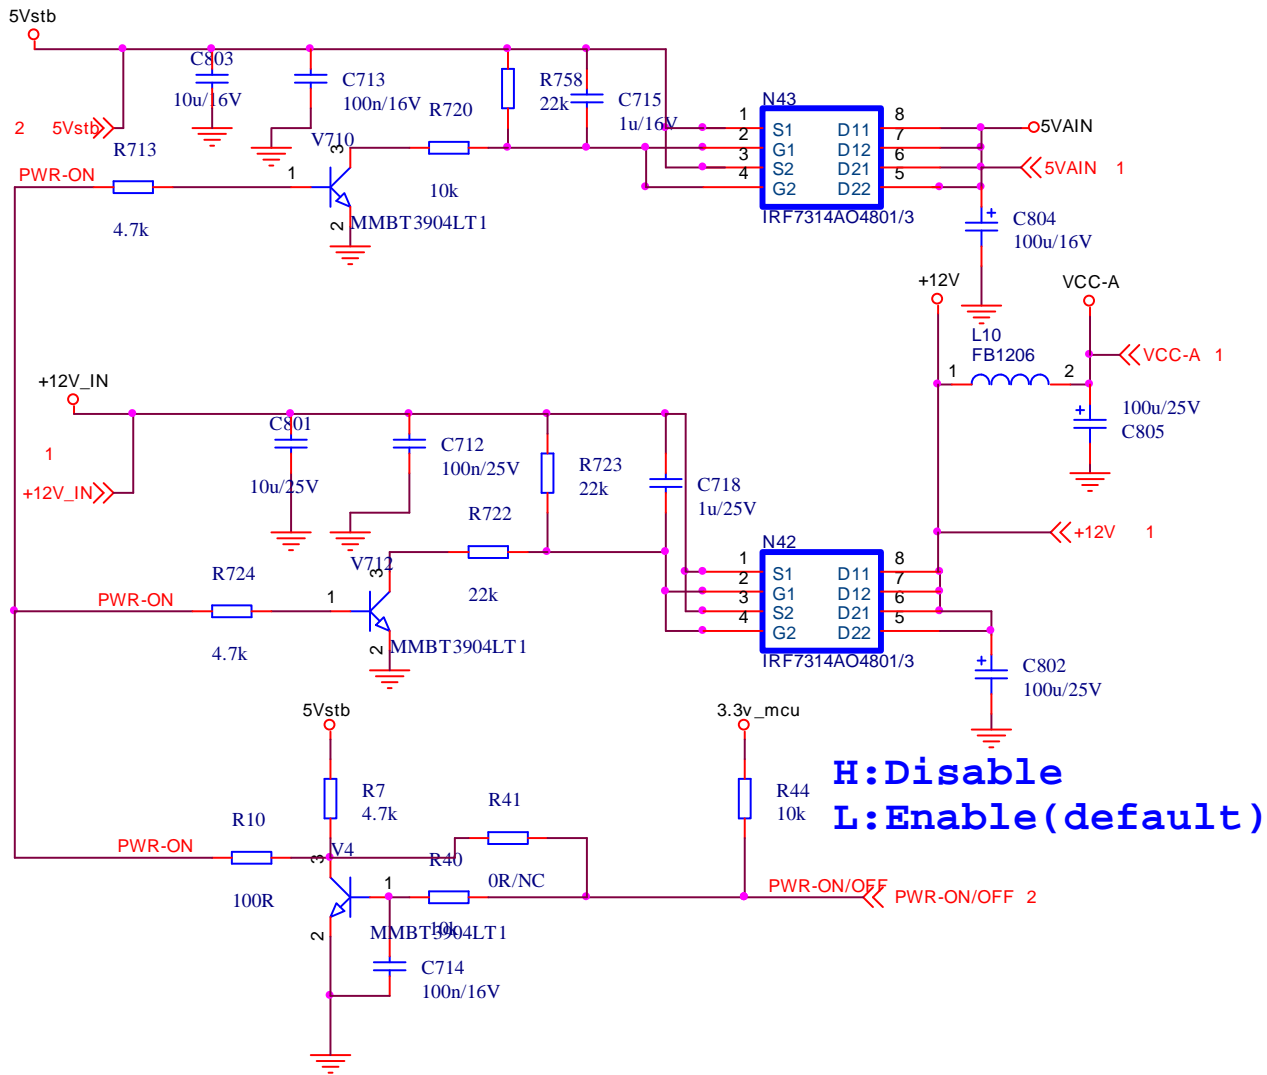

Power on, the Panel _Backlight and Brightness are control by the main board . the PIN 4 of XP2 is BL_ON/OFF, the high or low level control the BL_ON/OFF; the PIN 3 of XP2 is BL_ brightness Adjust, through control the level high or low to control the BL_ brightness.

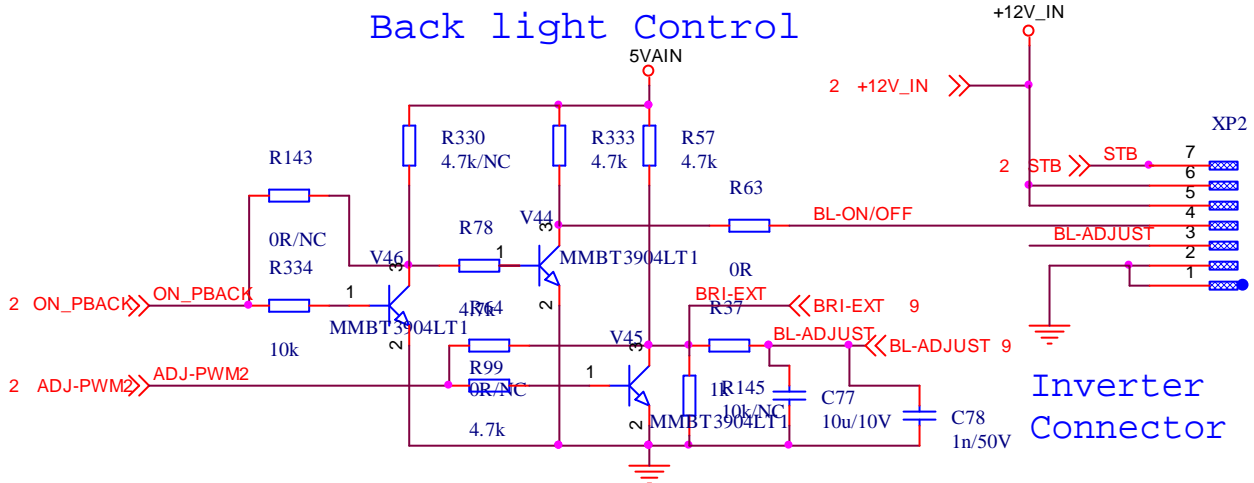

I2C master. for example :search channels , save the customer setting.and the operation of IR and Keypad.
Also can receive information from the EEPROM (N5 AT24C32N)

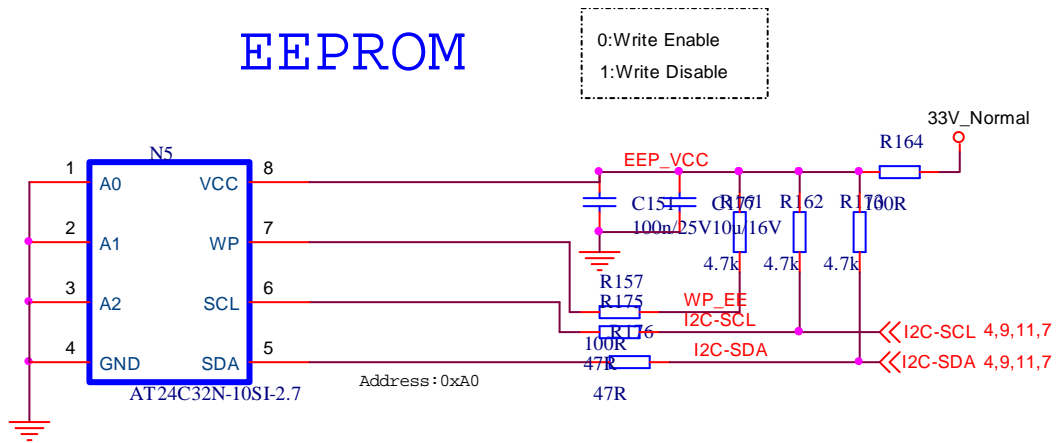


h) The main control signal, as list:


Control Signal	net name	recommend	Remark
Standby signal (Power control)	PWR-ON/OFF	Low level power on	PWR-ON/OFF pass V4、inverse phase
	PWR-ON	High level power on	
BL-control	ON_PBACK	High level power on	
	BL-ON/OFF	Low level power on	
Audio amplify mute	MUTE_5707	Low level mute	
Backlight contral	ADJ-PWM2		Contral brightness of backlight
Key "0"	KEYPAD-KEY0		Key
Key "1"	KEYPAD-KEY1		Key
Remote control signal	IR_IN		IR

5.3 Troubleshooting


5.3.1 Troubleshooting for Remote Control

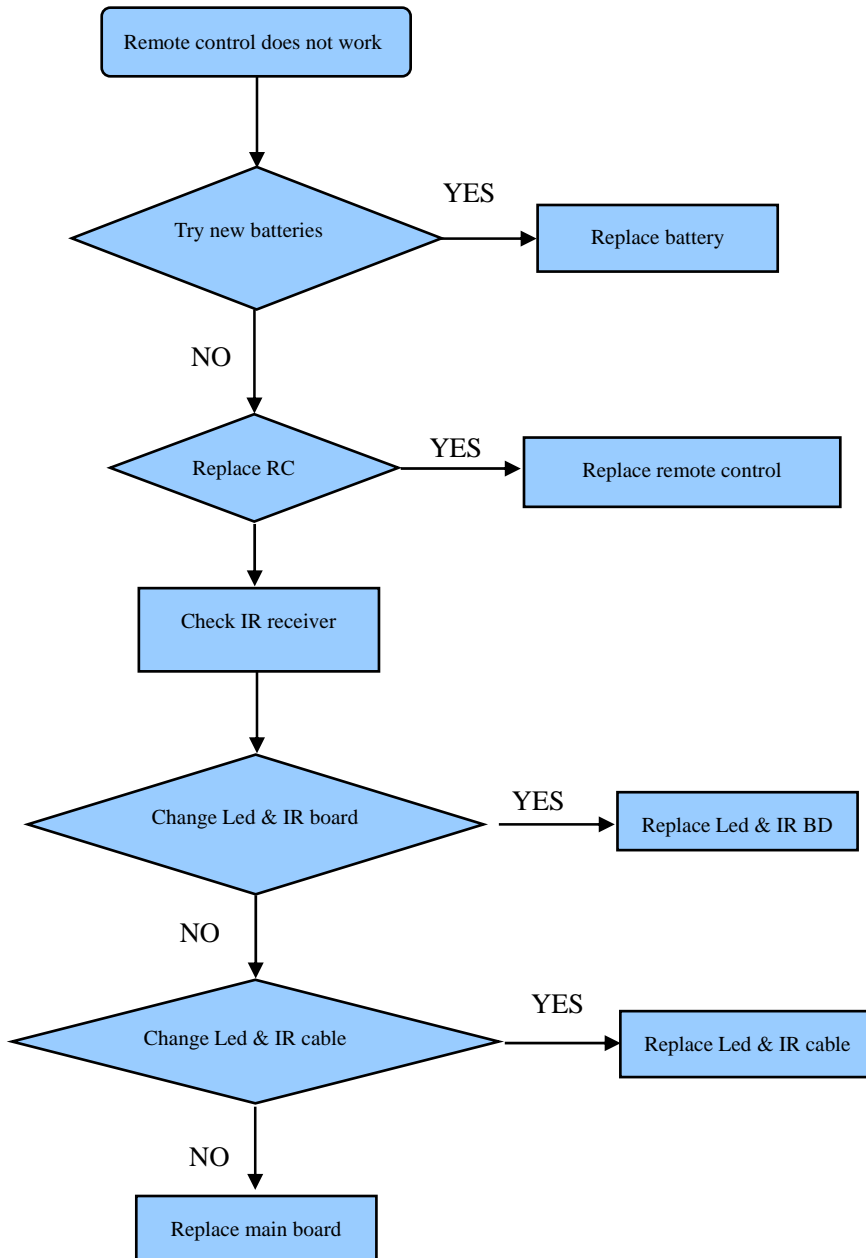


5.3.2 Troubleshooting for Function Key

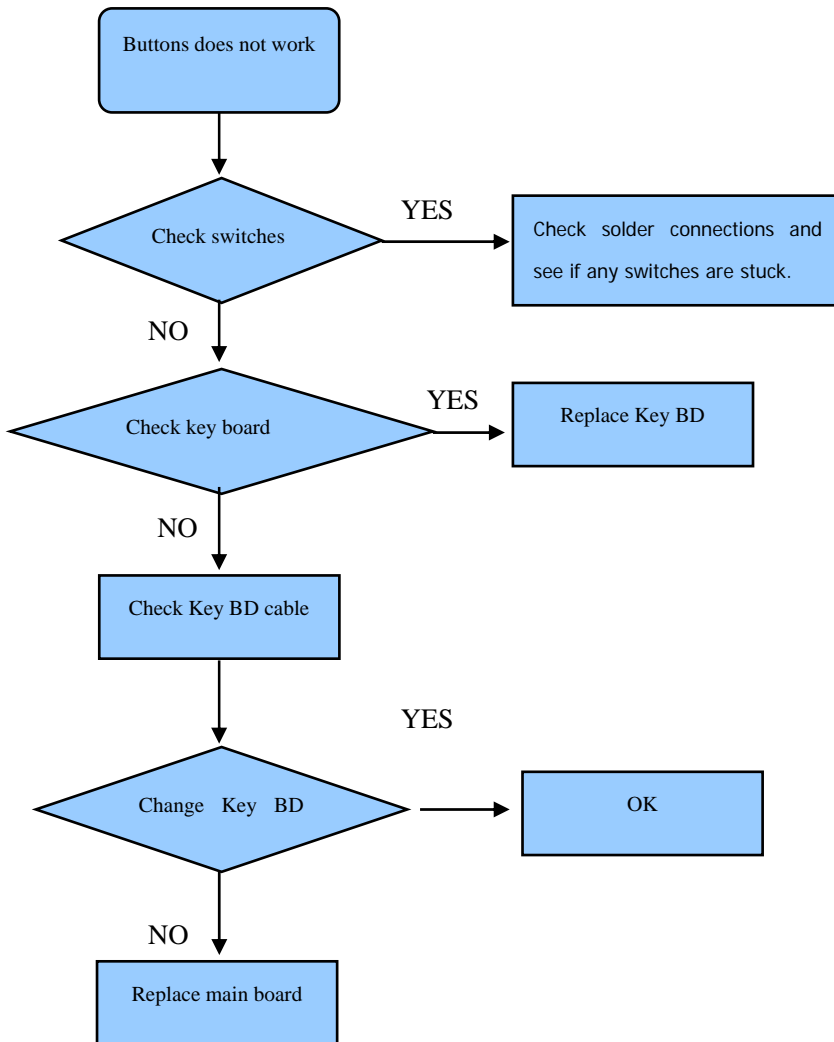


5.3.3 TV won't Power On

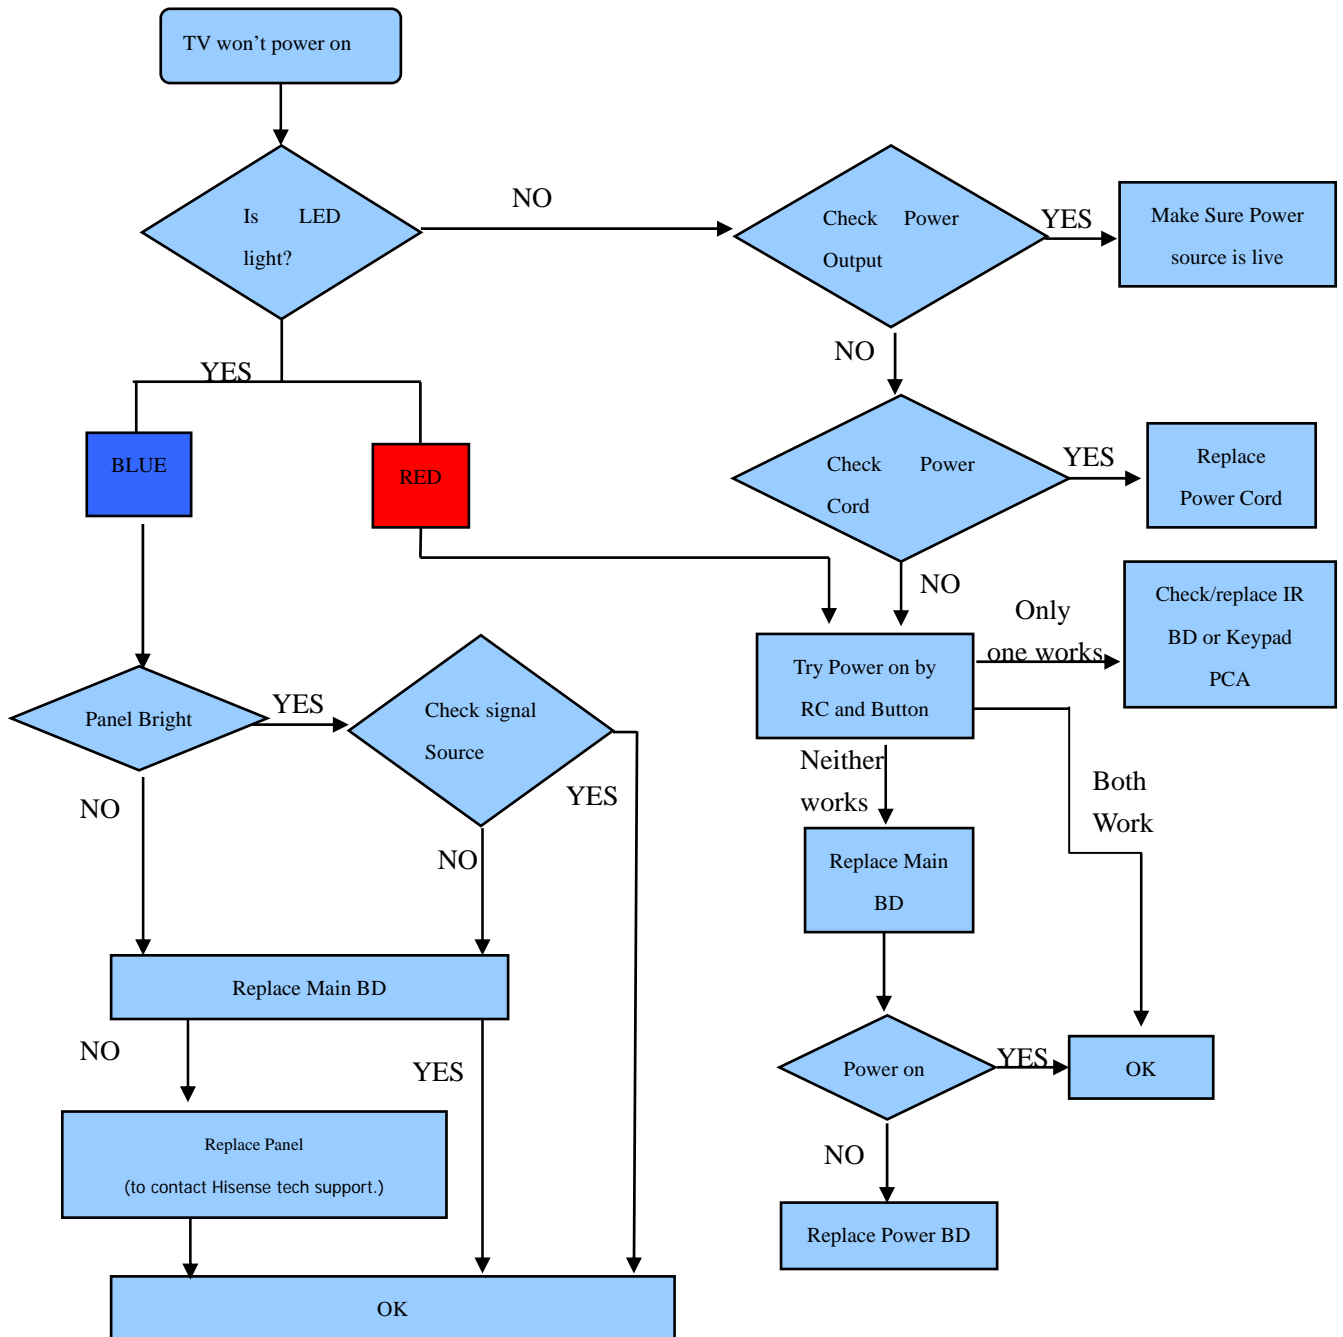


5.3.4 Troubleshooting for Audio

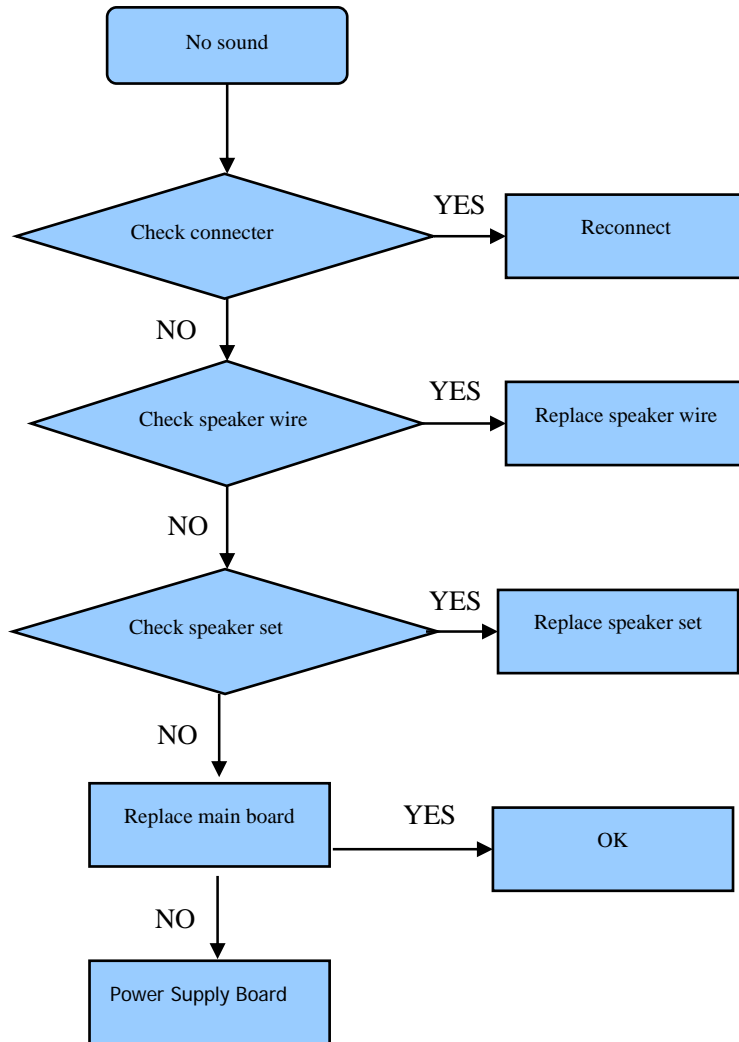


5.3.5 Troubleshooting for TV/VGA/HDMI input

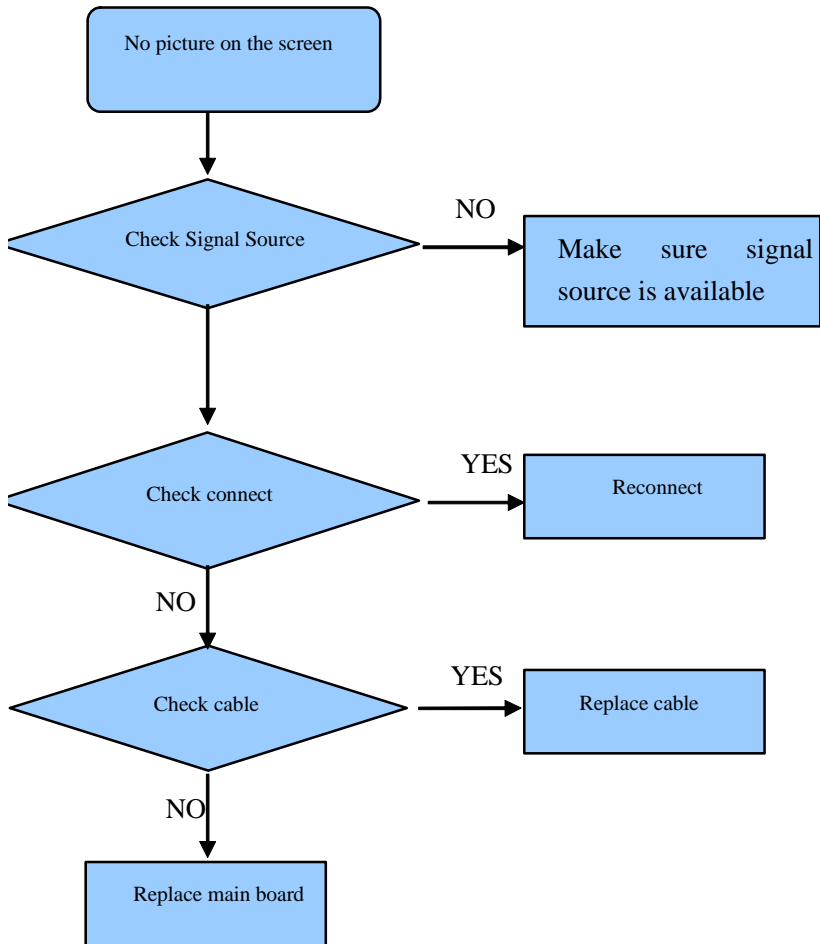

5.3.6 Troubleshooting for YPbPr input

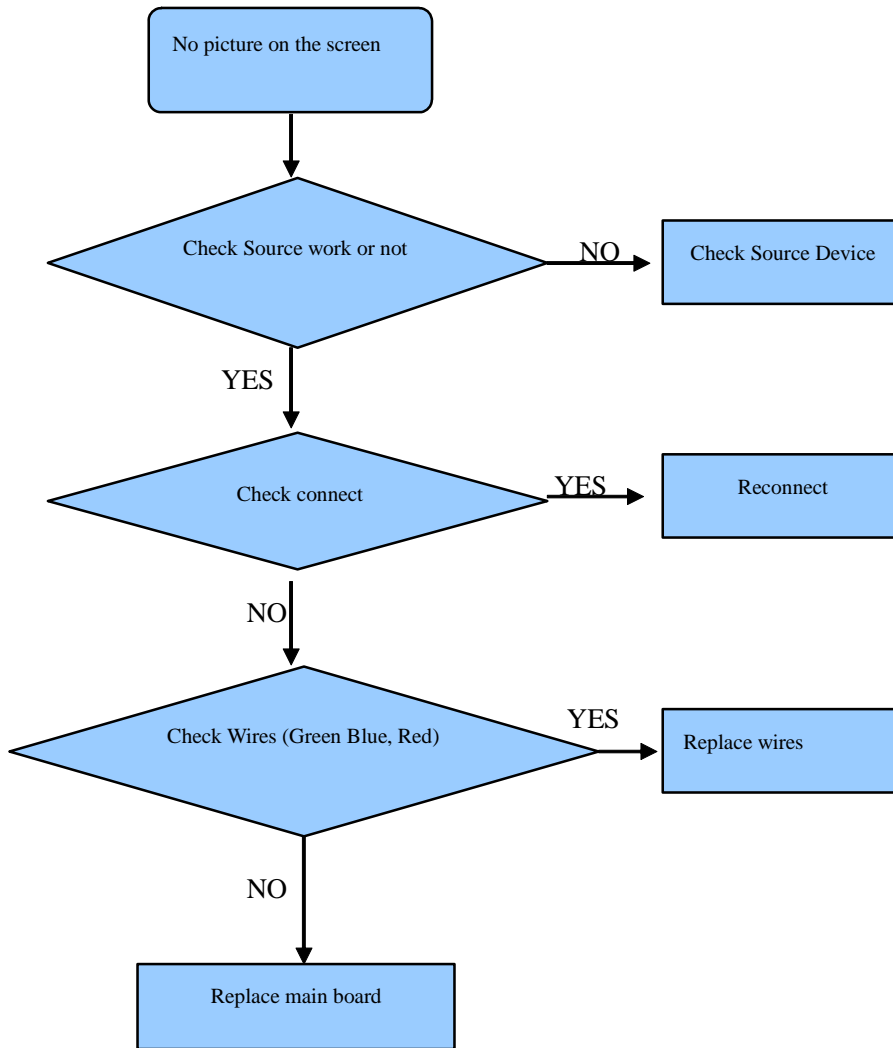


5.3.7 Troubleshooting for Video input

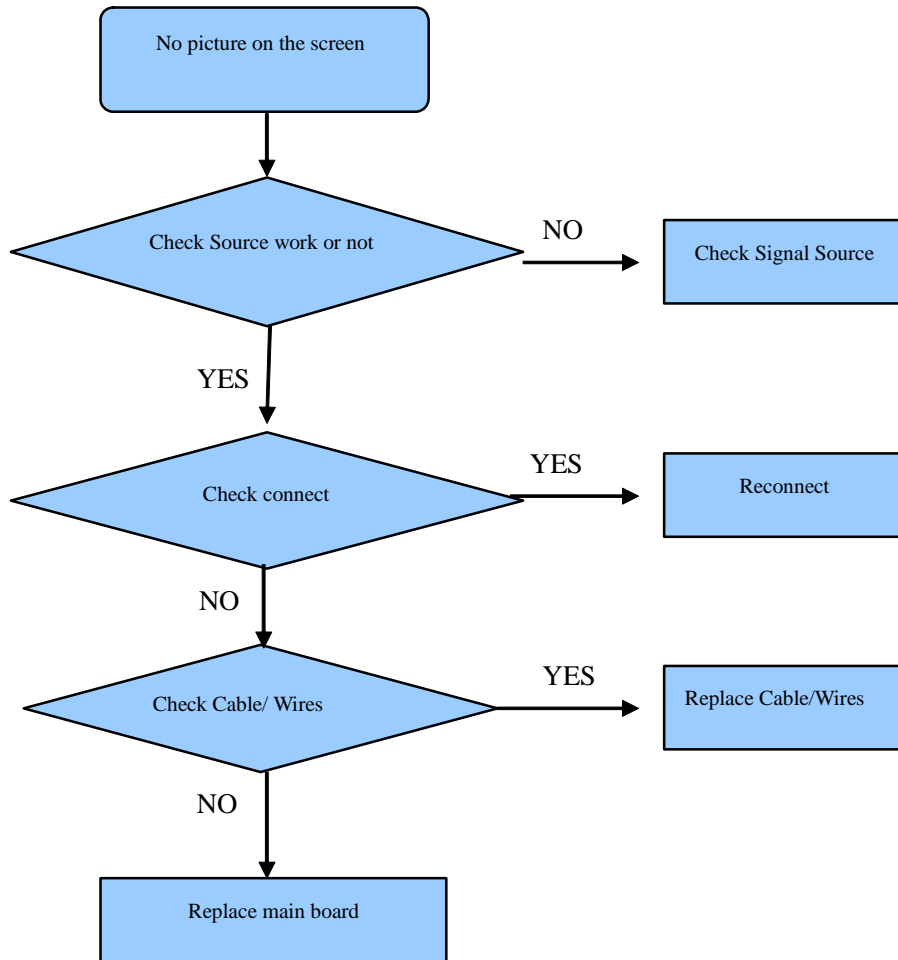

6. Explode View

7. Schematic circuit diagram

RSAG2.025.2543

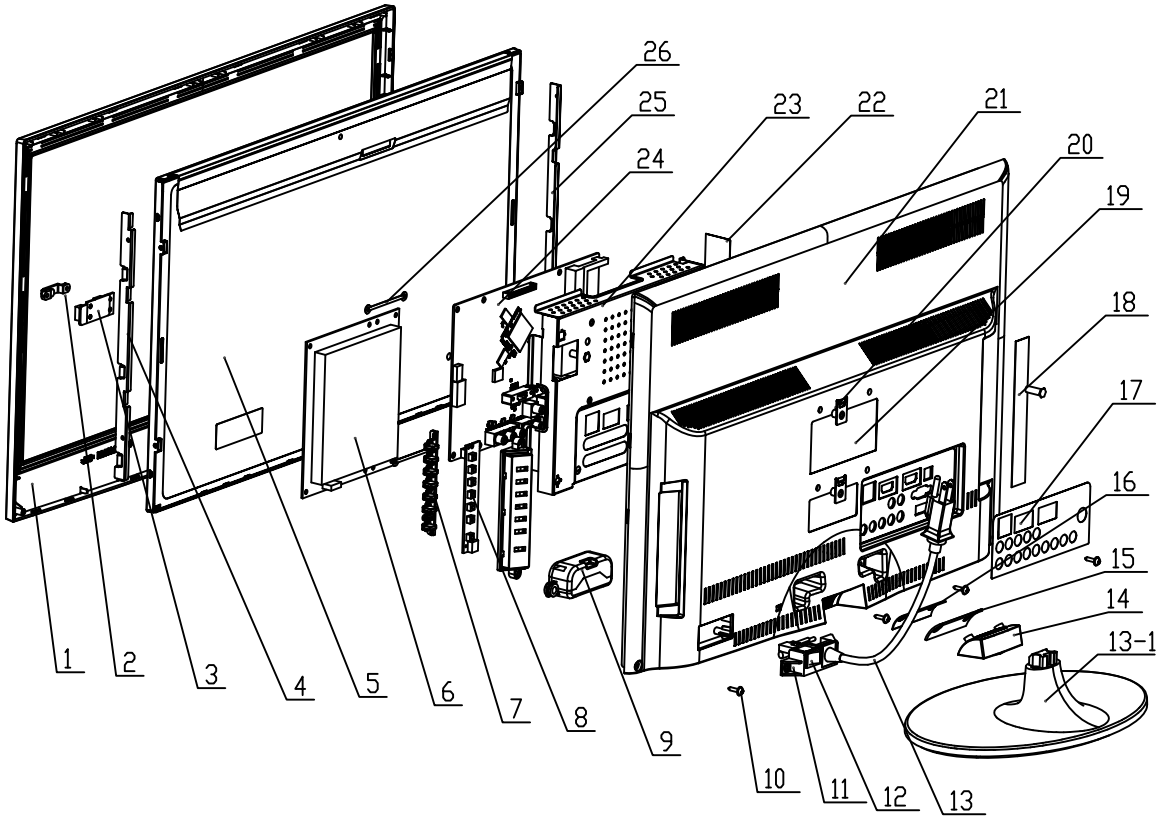


LT0N24K15CEU	
Explode view	
海信海信电视股份有限公司	

LTDN24K15CEU

No.	Description	Qty.	Code Number	Remark
1	Front bezel	1	RSAG8. 074. 896\FB2\V0\ROH\X0	
2	Led Lens	1	RSAG8. 640. 0213\ROH	
3	IR Board	1	RSAG2. 908. 4193-03\ROH	
4	Bracket	1	RSAG8. 038. 2452\ROH	
5	LCD Panel	1	M236H3-LA2\V236H1-LE2\GS\JK\ROH	
6	Power Board	1	RSAG2. 908. 2256-52\ROH	
7	Bracket	1	RSAG8. 078. 937\ROH\X0	
8	Keypad PCA (wit	1	RSAG2. 908. 1962\ROH	
9	Bracket	1	RSAG8. 078. 938\ROH\X1	
10	Screw	4	SJ2825-87 ST3X12C \ROH\STD	
11	Bracket	1	RSAG8. 078. 932\ROH\X0	
12	Power Switch	1	HF-606 (TV)-P通PS8-12-D-047B\ROH	
13	Power Cord	1	YS-3-8E-2\ROH	
(13-1)	STAND	1	RSAG6. 121. 0224\FB2\ROH\X1\SKD	
14	Bracket	1	RSAG8. 078. 946\ROH\X0	
15	Bracket	1	RSAG8. 600. 171\ROH\X0	
16	Bracket	1	RSAG8. 038. 2486\ROH	
17	Bottom Label	1	RSAG8. 804. 4251\ROH	
18	Side Label	1	RSAG8. 804. 4250\ROH	
19	Rating Label	1	See the TV Rear Back. Difference because of Brands	
20	Bracket Unit	2	RSAG6. 150. 804\ROH	
21	Rear Cover	1	RSAG8. 074. 1095\B2\V0\ROH\X0	
22	Label	1	RSAG8. 804. 4247\ROH	
23	Bracket Unit	1	RSAG6. 150. 1052\ROH	
24	Main Board	1	RSAG2. 908. 4258-01\ROH	

25	Bracket	1	RSAG8.038.2453\ROH	
26	Bracket	2	RSAG8.038.2485\ROH	

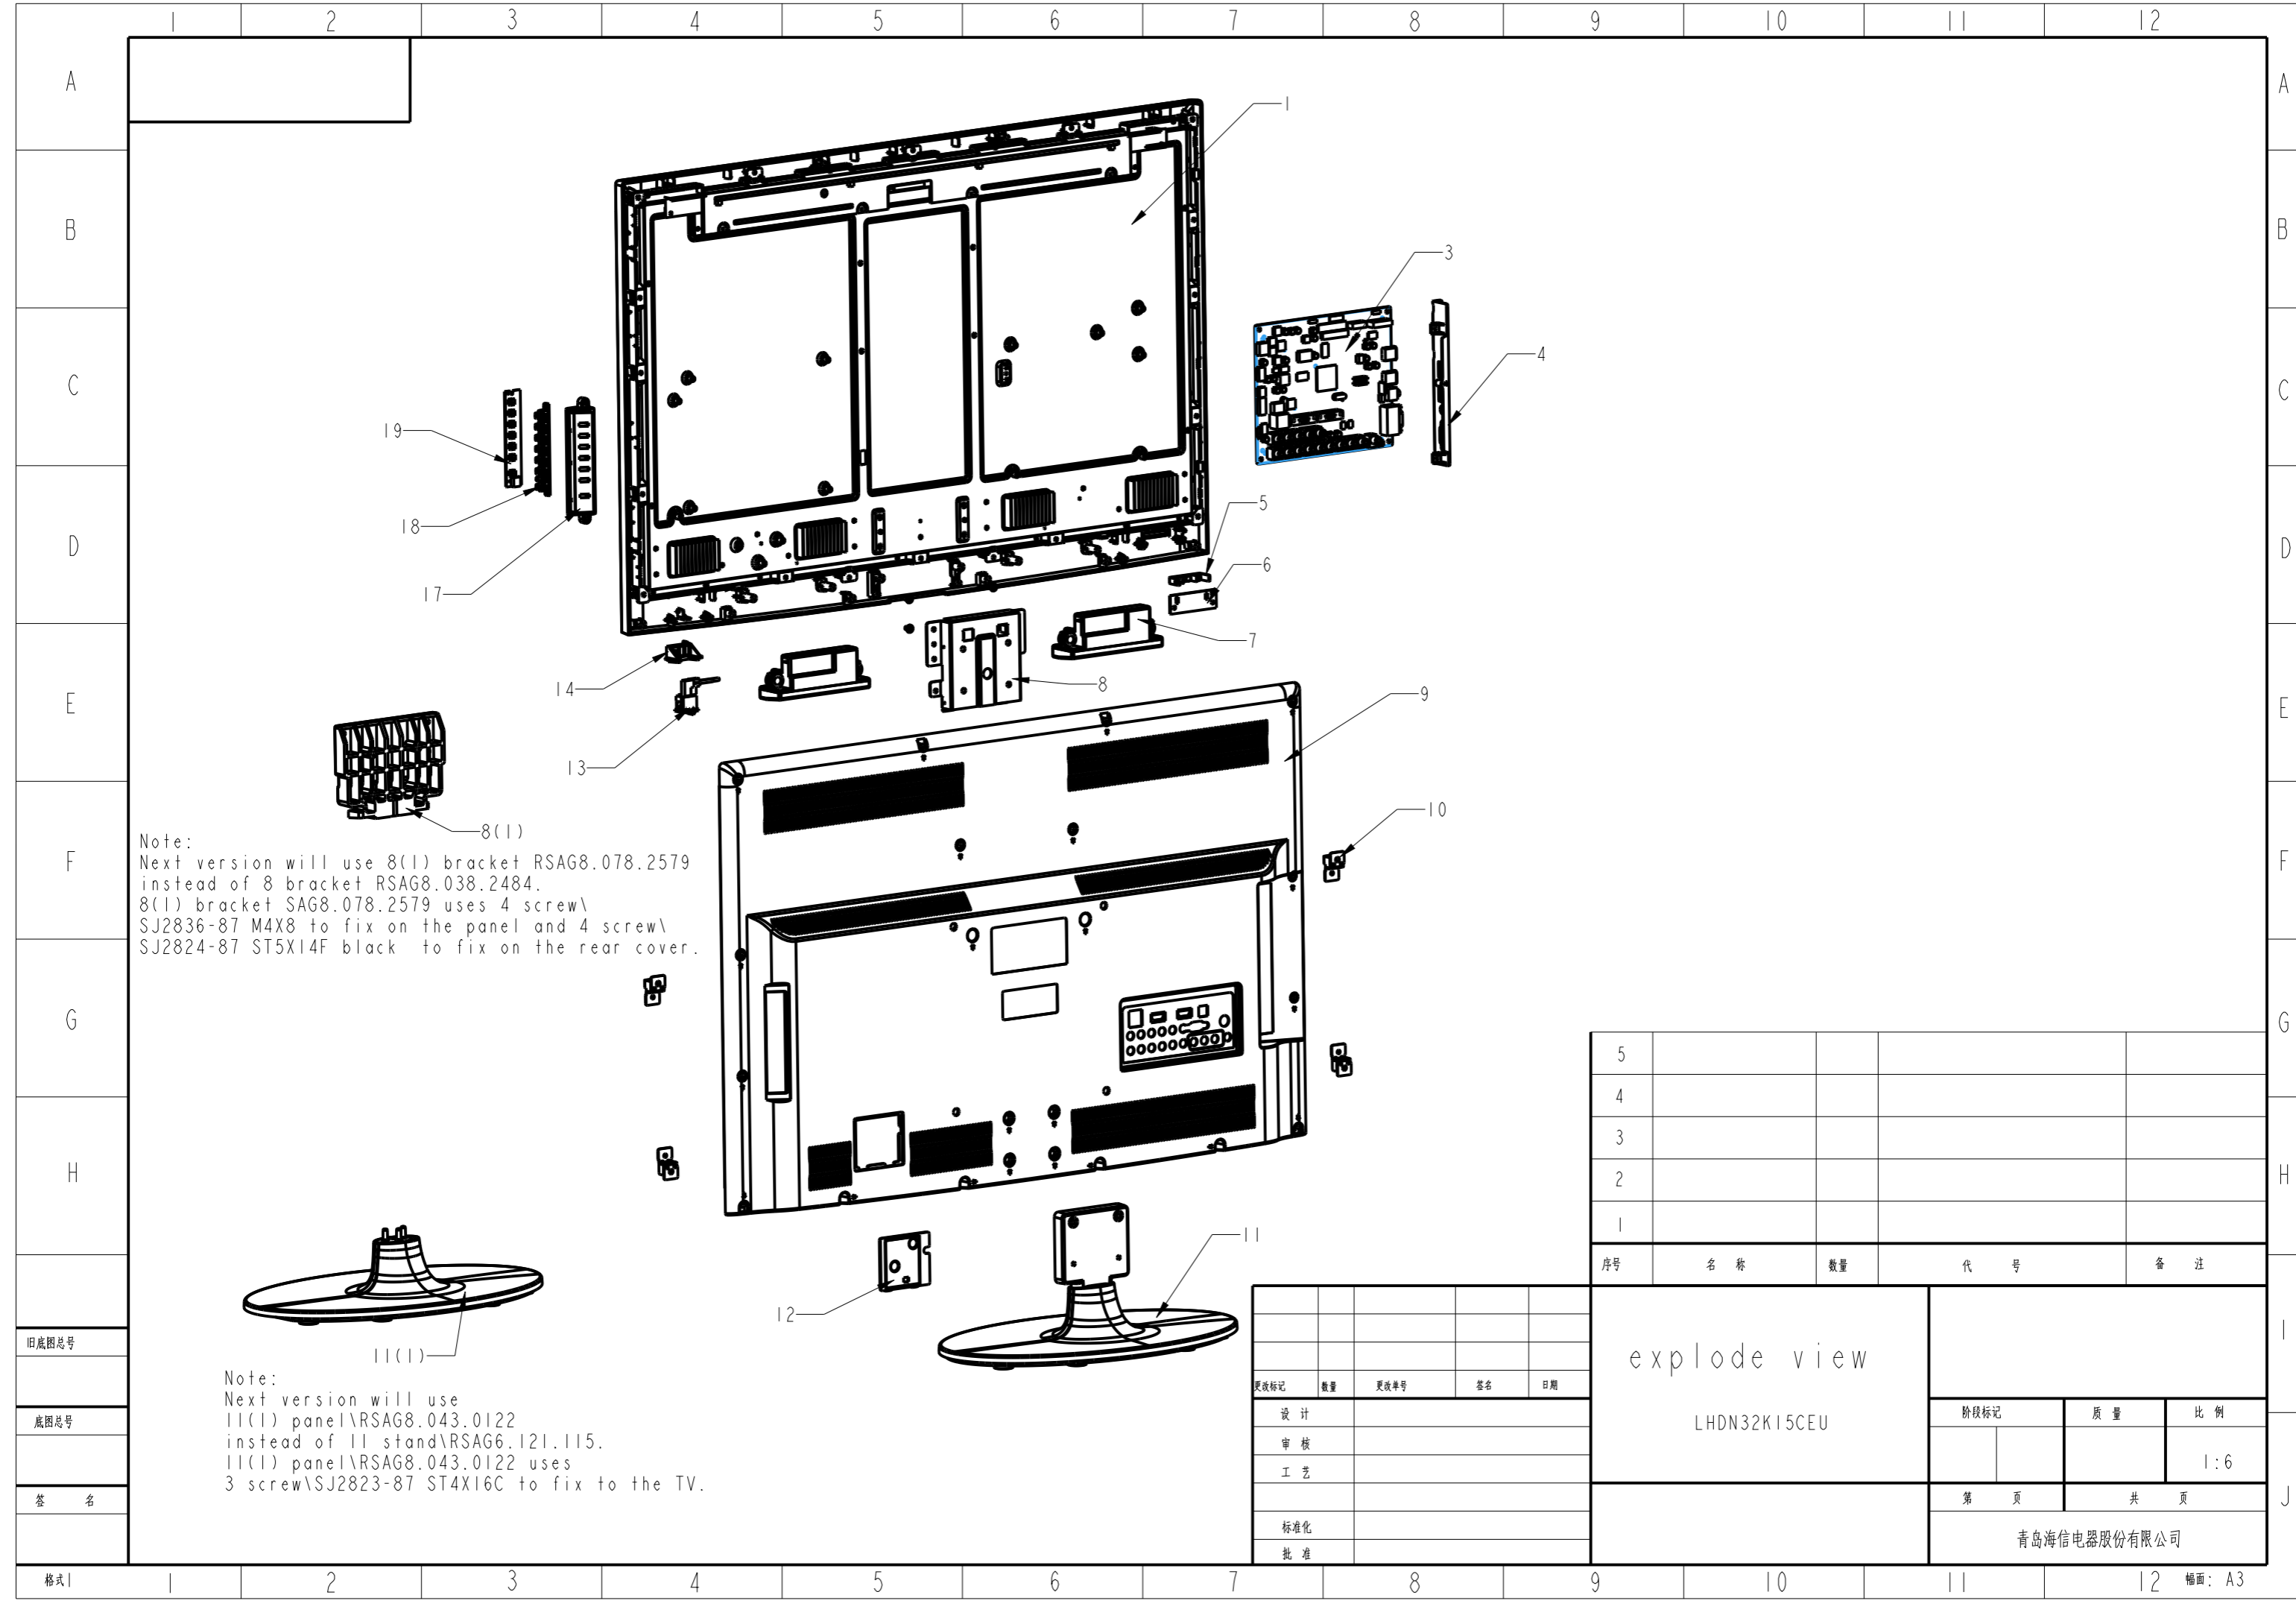

Note:
 Next version will use 8(1) bracket RSAG8.078.2579
 instead of 8 bracket RSAG8.038.2484.
 8(1) bracket SAG8.078.2579 uses 4 screw\
 SJ2836-87 M4X8 to fix on the panel and 4 screw\
 SJ2824-87 ST5X14F black to fix on the rear cover.

Note:
 Next version will use
 11(1) panel\RSAG8.043.0122
 instead of 11 stand\RSAG6.121.115.
 11(1) panel\RSAG8.043.0122 uses
 3 screw\SJ2823-87 ST4X16C to fix to the TV.

5				
4				
3				
2				
1				
序号	名称	数量	代号	备注

更改标记	数量	更改单号	签名	日期
设计				
审核				
工艺				
标准化				
批准				

explode view		阶段标记		质量	比例
					1:6
LHDN32KI5CEU		第 页		共 页	
		青岛海信电器股份有限公司			

旧底图总号
 底图总号
 签名
 格式|


I
 J
 幅面: A3

LHDN32K15CEU Parts List


No.	Code Number	Description	QTY	Note
1	HE315DH-E02	LED panel	1	Front bezel is fixed with panel.
2				
3	RSAG2. 908. 4258	main board	1	fix with 3 screw\SJ2836-87 M3X8 white and 1 screw\SJ2831-87 ST3X8.
4	RSAG8. 081. 1039	Terminal Bracket	1	
5	RSAG8. 640. 0203	lens	1	
6	RSAG2. 908. 2310-52	IR Board	1	fix with 2 screw\SJ2825-87 ST3X10C black.
7	VIT3010-8W8 Ω -01	Speaker	2	fix with 4 screw\RSAG8. 912. 018.
8	RSAG8. 038. 2484	bracket	1	fix to panel with 2 screw\GB/T818-2000 M4X6 white and 2 screw\SJ2836-87 M4X6, fix to front bezel with 2 screw\SJ2824-87 ST4X14F black.
9	RSAG8. 074. 917	Rear Cover	1	fix to front bezel with 14 screw\SJ2824-87 ST4X14F black.
10	RSAG6. 150. 685	bracket	4	fix with 4 screw\SJ2824-87 ST4X10F black.
11	RSAG6. 121. 115	stand	1	fix with 4 screw\SJ2824-87 ST5X14F black.
12	RSAG8. 078. 2589	bracket	1	fix with 2 screw\SJ2830-87 M3X6 black.

13	HF-606 (TV) -P通PS8-12-D-047B	Power Switch	1		
14	RSAG8.078.820	bracket	1	fix to front bezel with screw\SJ2822-87 ST3X10C black.	
15					
16					
17	RSAG8.078.938	bracket	1	fix with 2 screw\SJ2836-87 M3X8 white.	
18	RSAG8.078.937	bracket	1		
19	RSAG2.908.1962	Keypad PCA	1		
8 (1)	RSAG8.078.2579\ROH	bracket	1	fix to panel with 4 screw\SJ2836-87 M4X8 white, fix to Rear Cover with 4 screw\SJ2824-87 ST5X14F black. (next version uses Bracket 8(1))	1102433
11 (1)	RSAG8.043.0122\SKD\ROH	stand	1	fix to TV with 3 screw\SJ2824-87 ST4X16C black. (next version uses Stand 11(1))	152661


背光控制

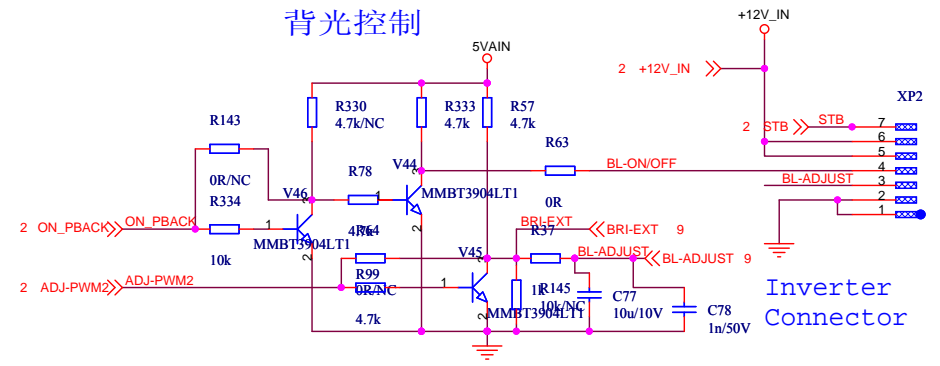


$V_{out}=0.8 \cdot (1+5.1K/0.953K)=5.08V$ 此为待机12V转待机5伏

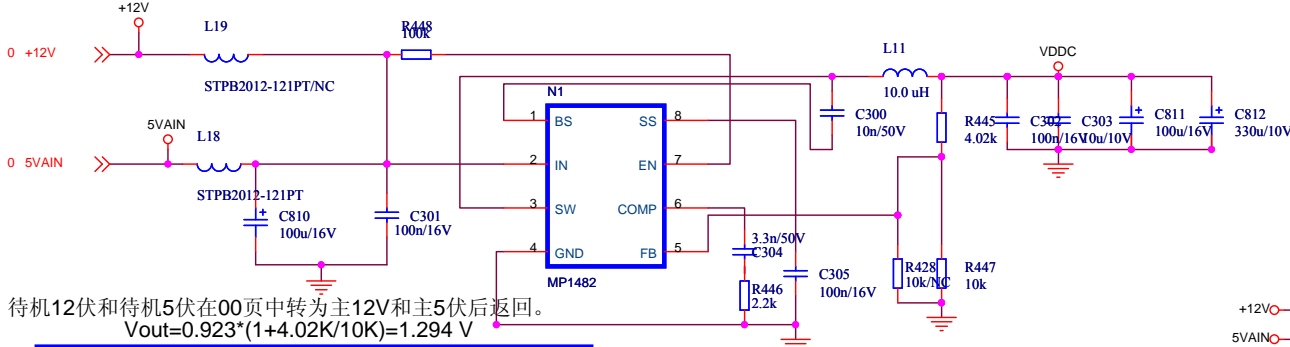


待机12伏和待机5伏在00页中转为+12V和+5V后返回。
 $V_{out}=0.923 \cdot (1+4.02K/10K)=1.294V$

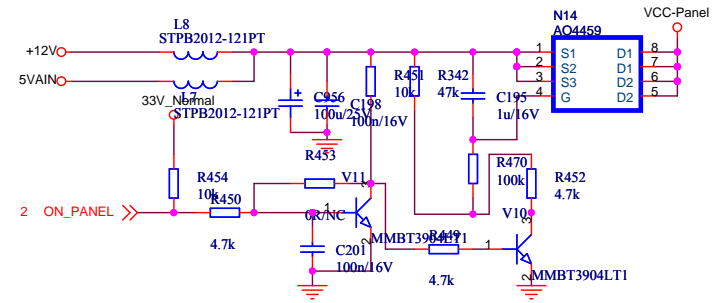


3.3V Power_Normal

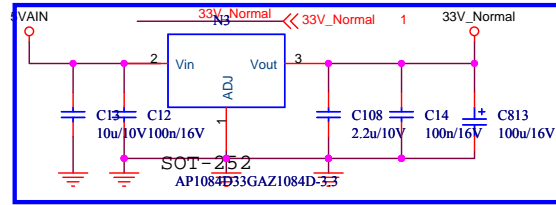


2.5V Power

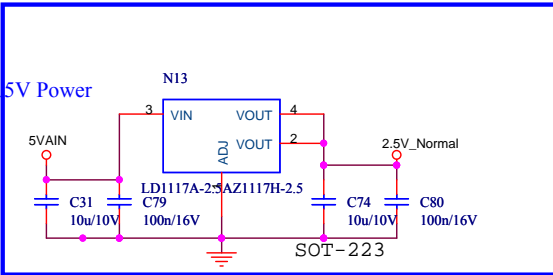


3.3V Power_Standby

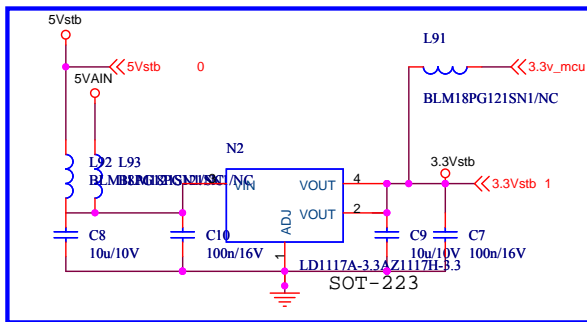

Power for PCMCIA



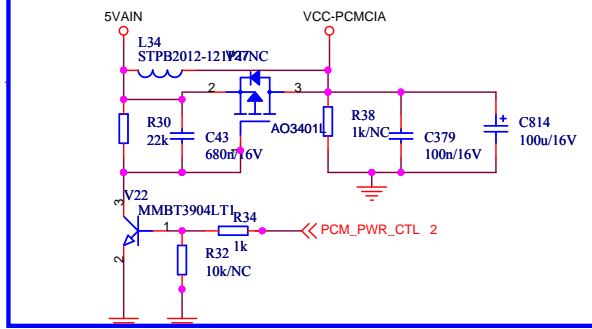


1.8V Power for DDR




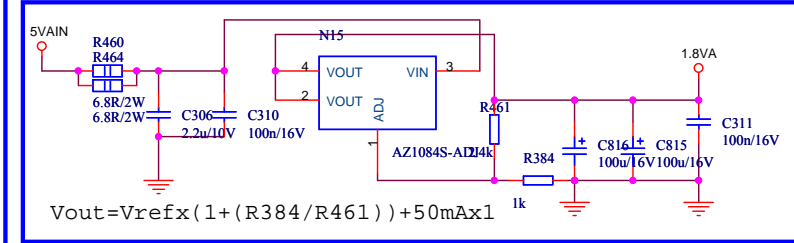


$V_{out}=V_{refx} \cdot (1+(R384/R461)) + 50mA \cdot x1$

Title			Rev
MSD309PX			
Size	Document Number		
B	System Power		A
Date:	Saturday, November 27, 2010	Sheet	1 of 10

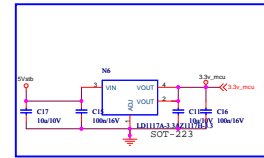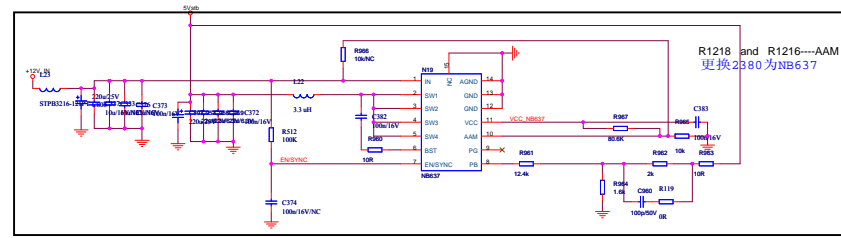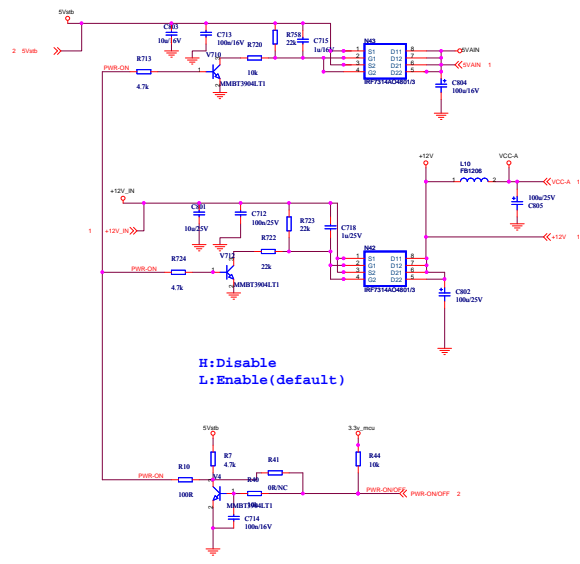


present for MCU

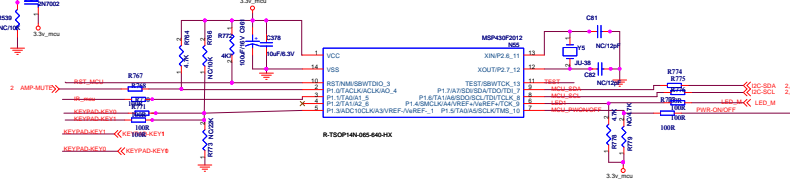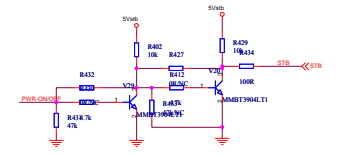



HDTV-1 YPbPr INPUT












YPbPr AND AV INPUT INPUT, AUDIO 共用,
更改为立式插座。

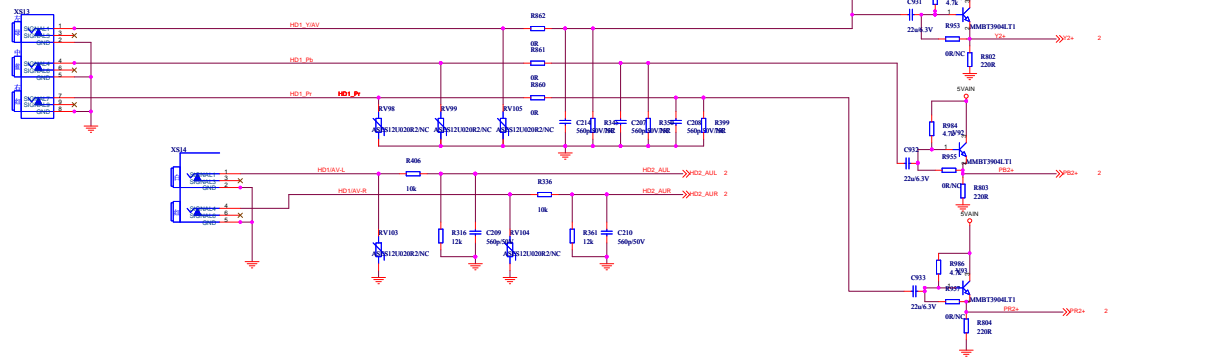




SPDIF OUT




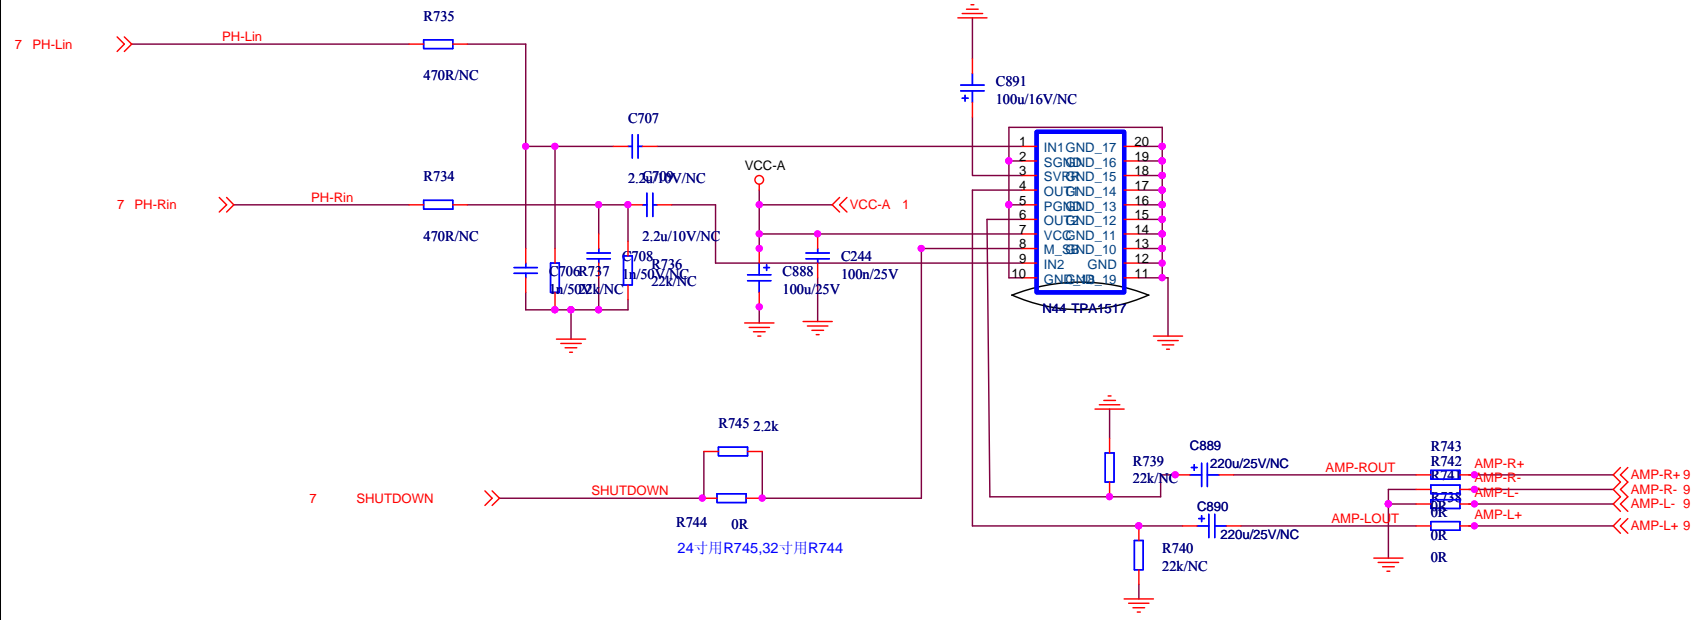


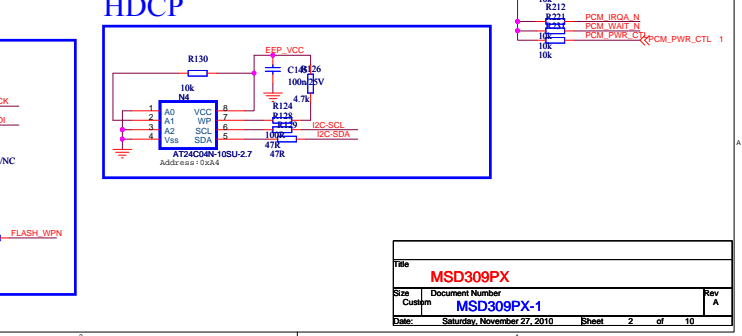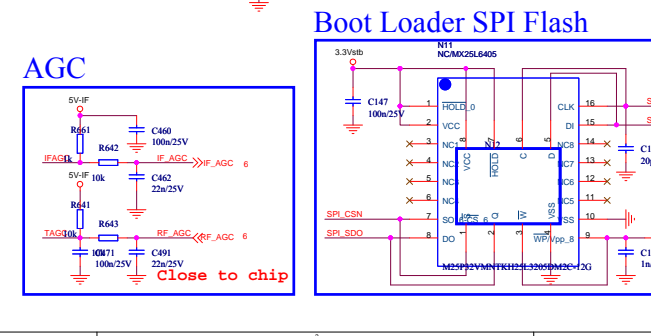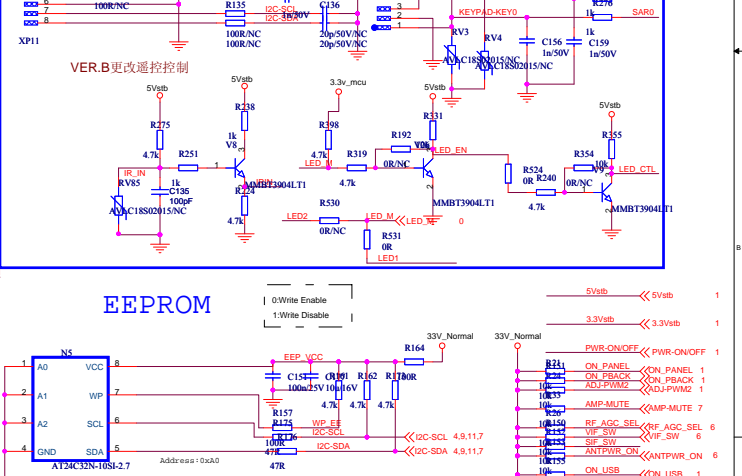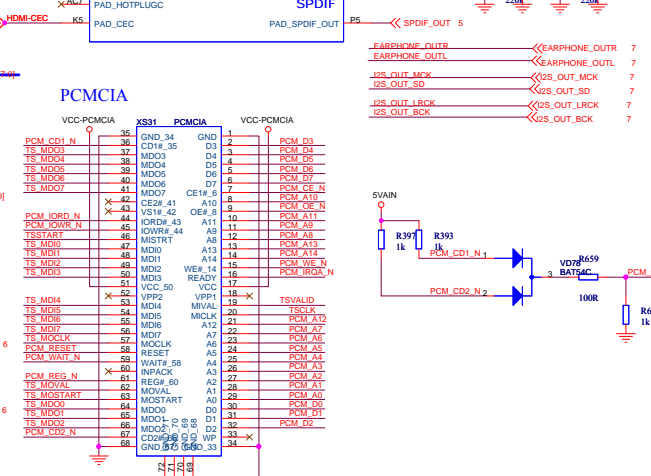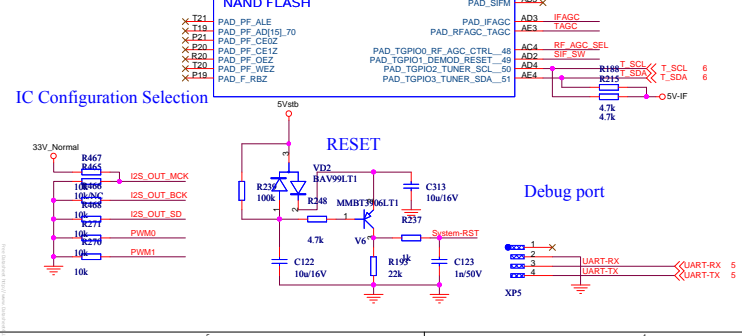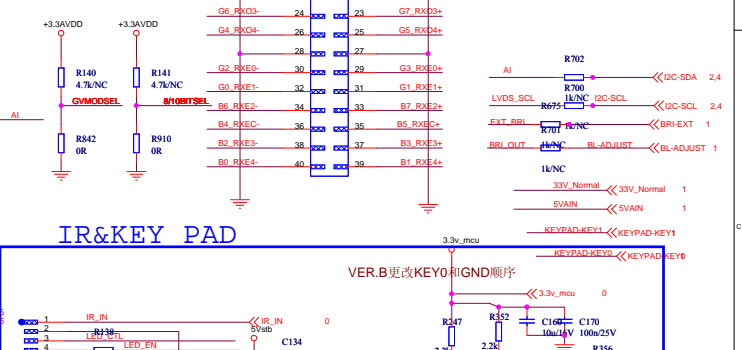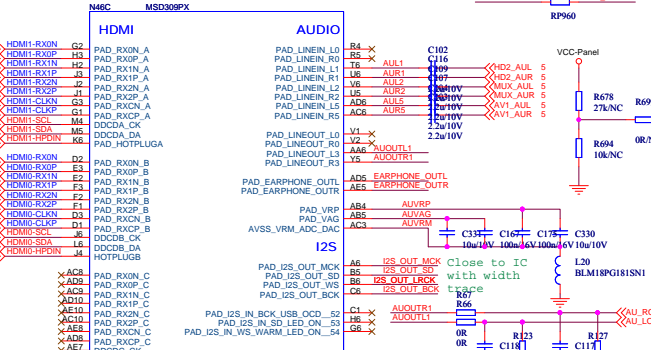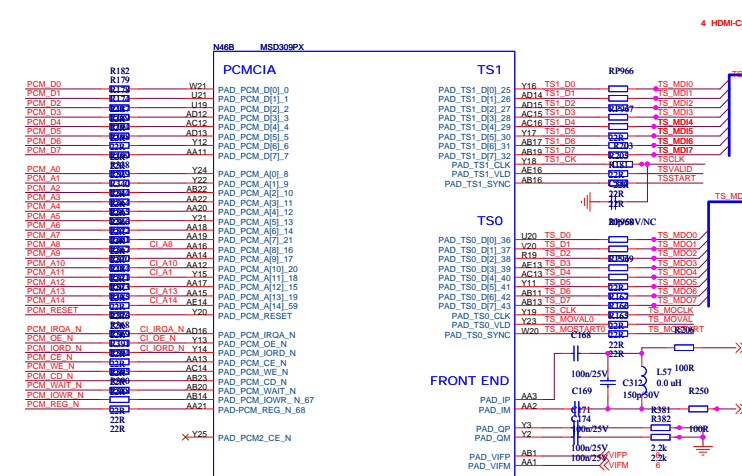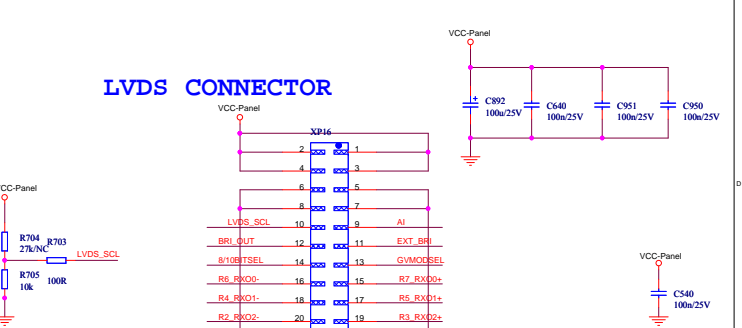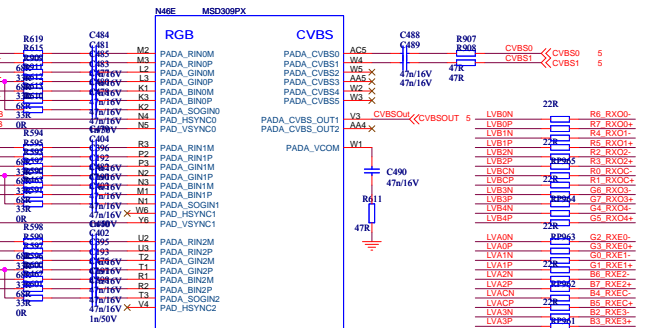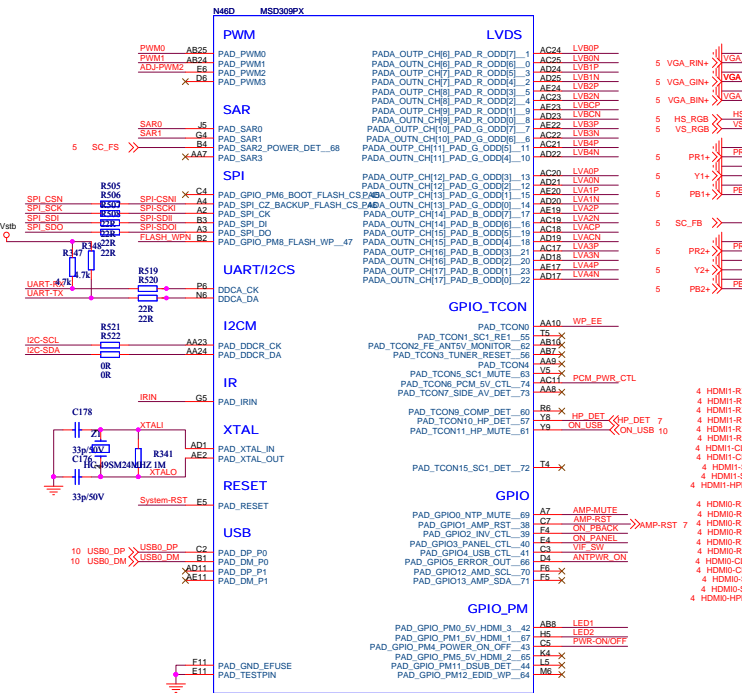


HDMI1 (下面)

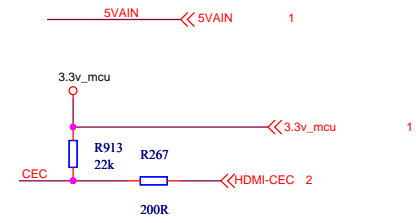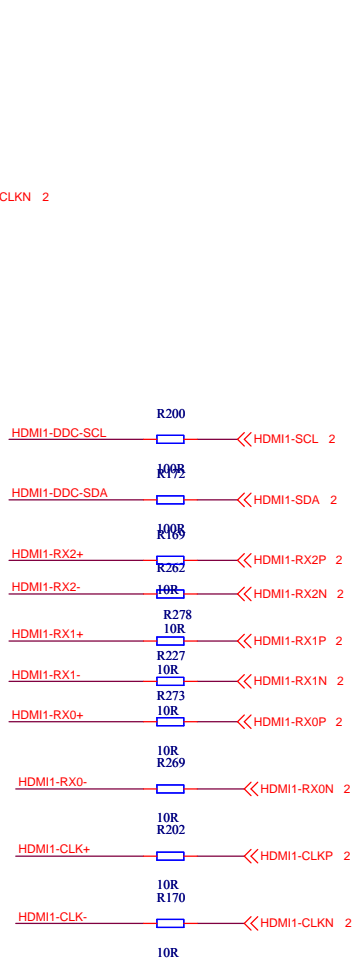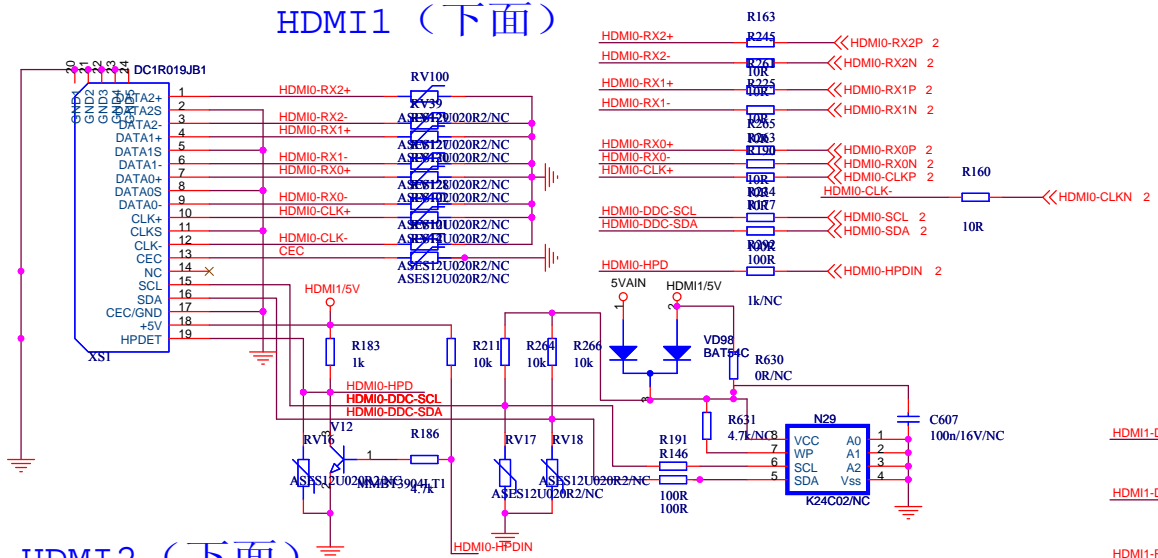


HDMI2 (下面)

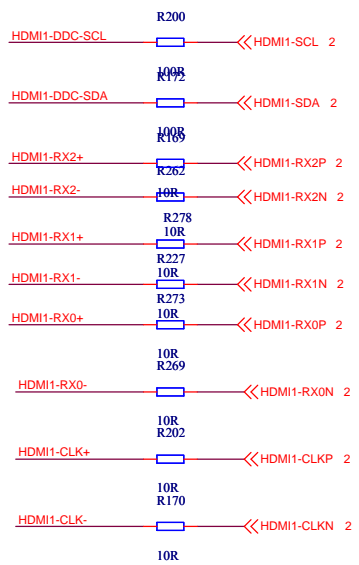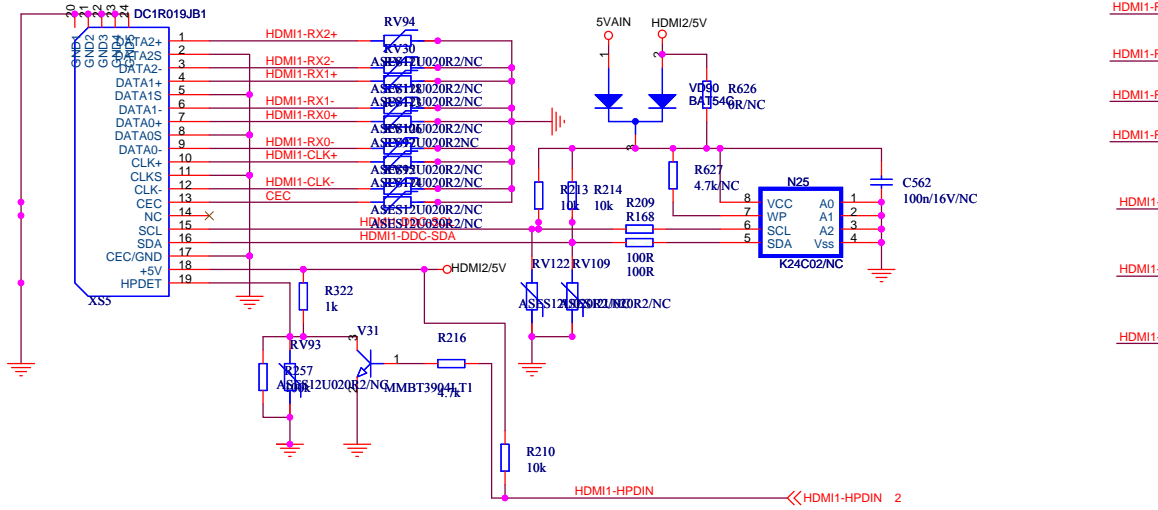

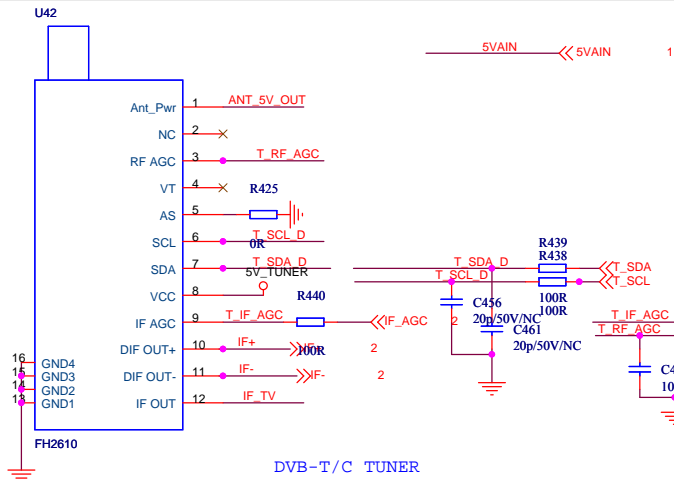


DVB-T/C TUNER

FR_AGC





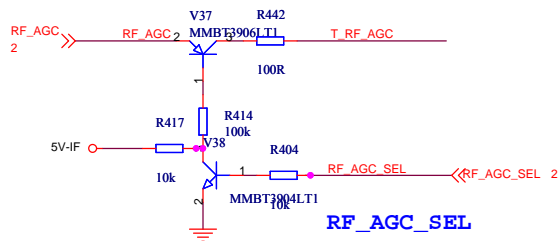


RF_AGC_SEL
0: DTV
1: ATV


ANT POWER

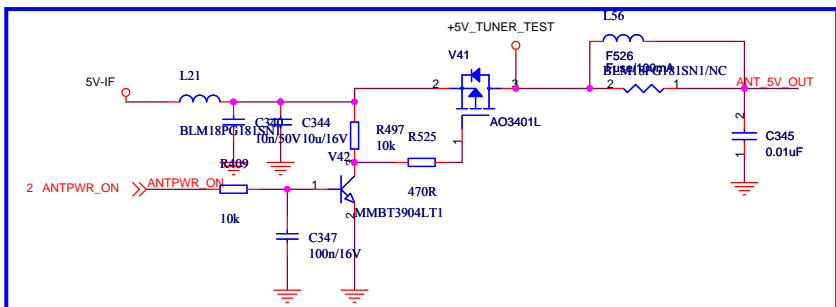


TUNER POWER

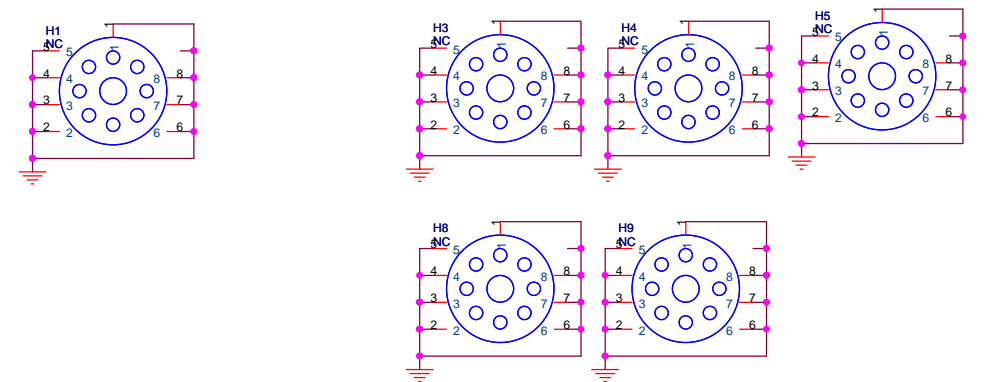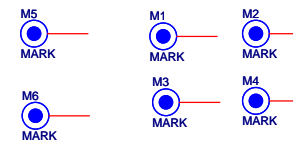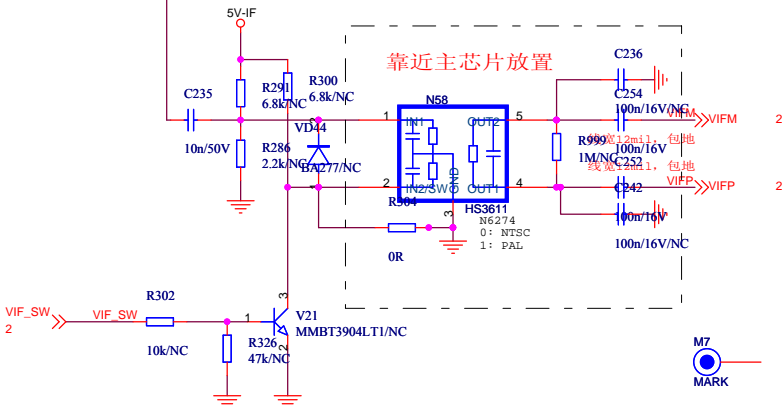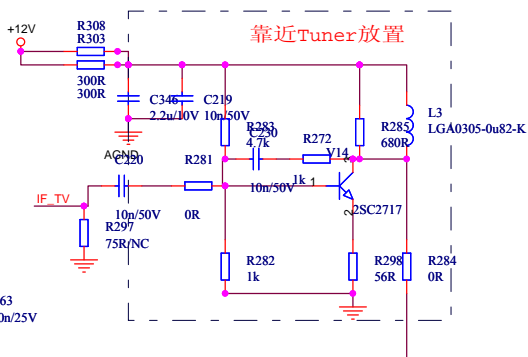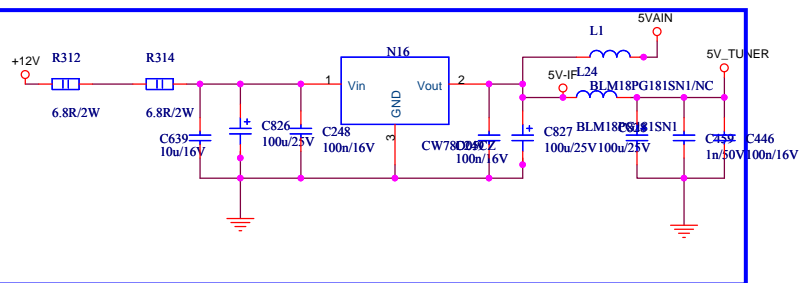


Headphone out

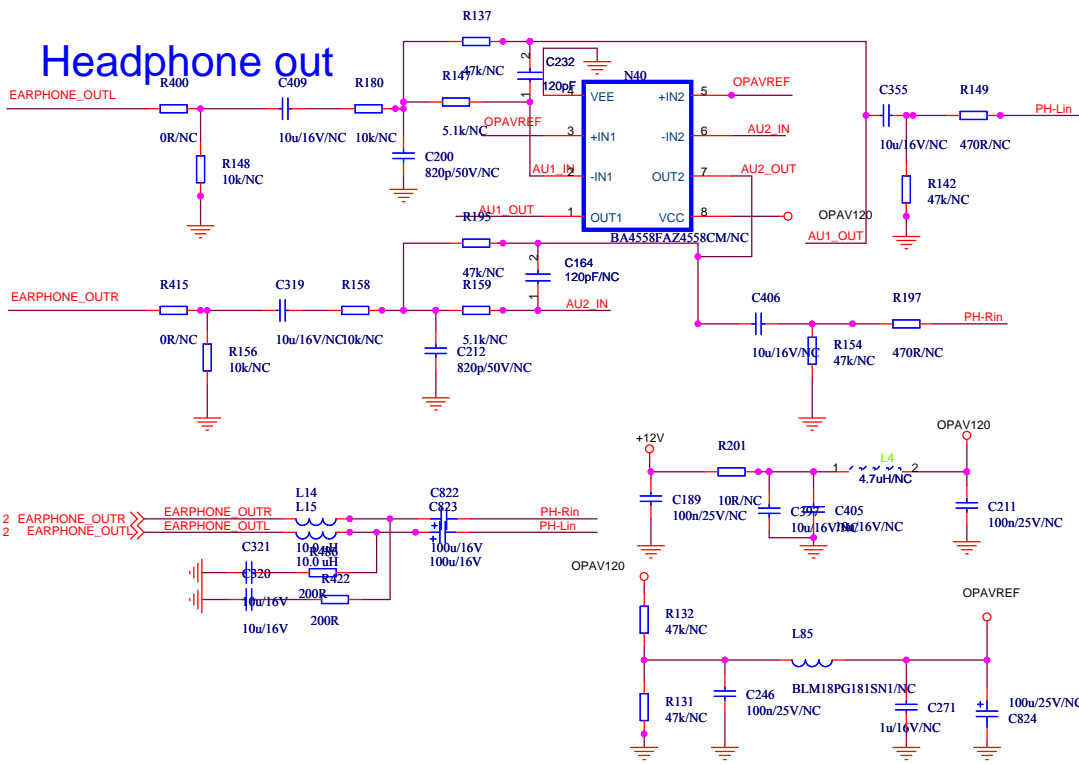


Amplifier

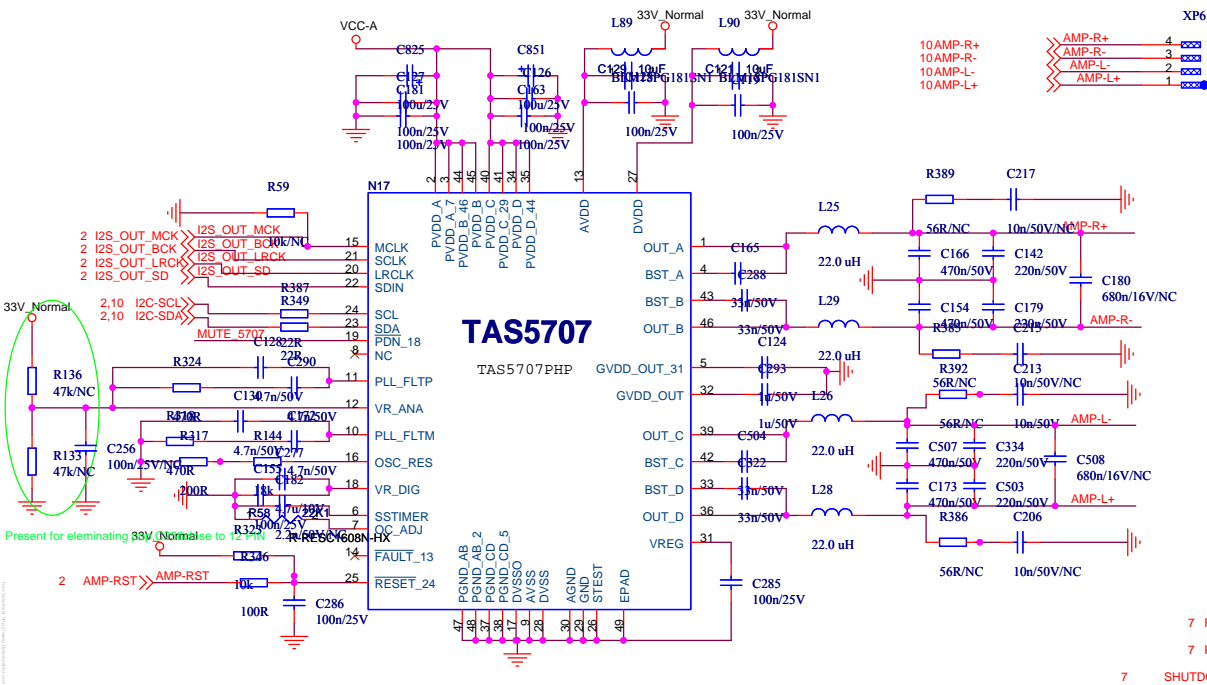


Mute Circuit

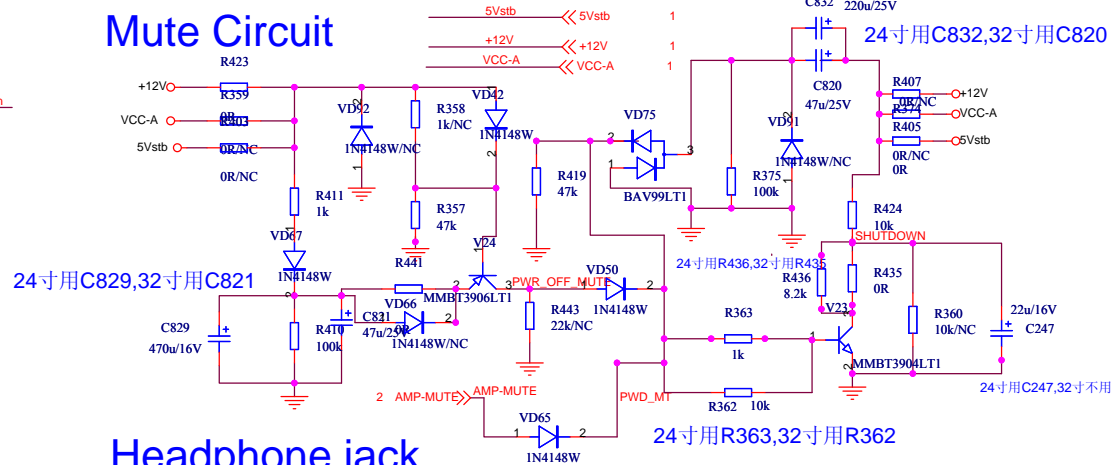


Headphone jack

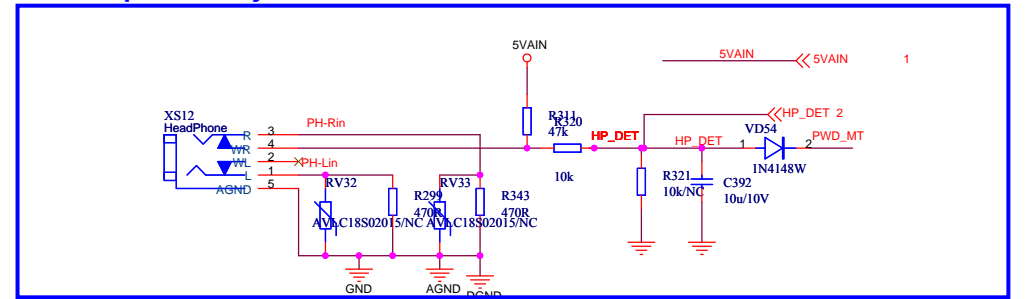

Amplifier Mute

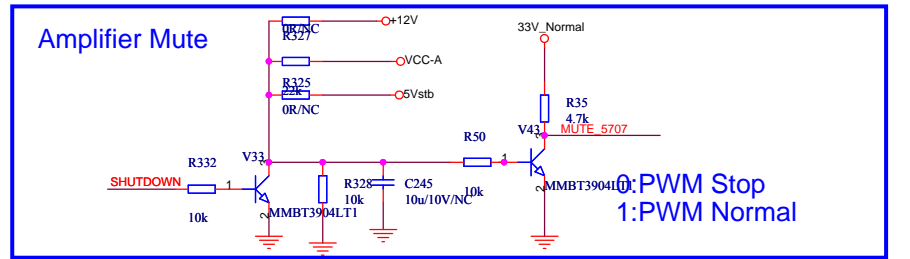


Headphone Mute

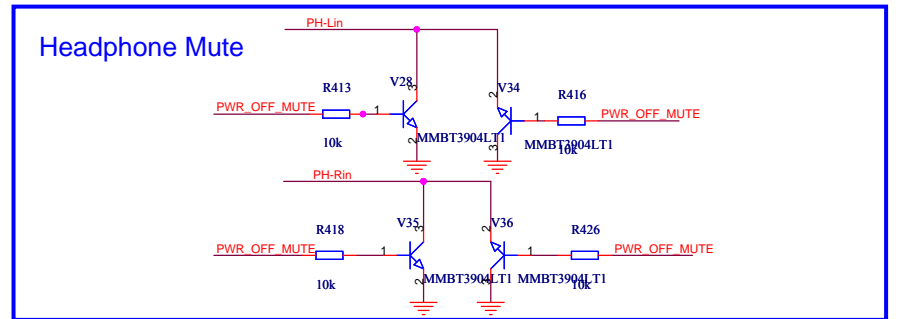


Title	MSD309PX		
Size	Custom	Document Number	Rev A
Date: Tuesday, January 11, 2011		Sheet	7 of 10


Power for USB

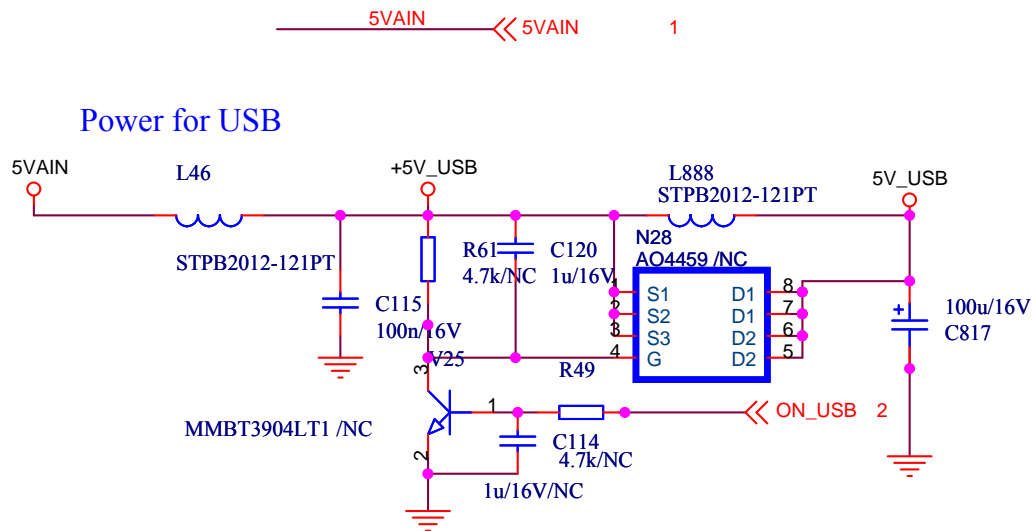

USB Input

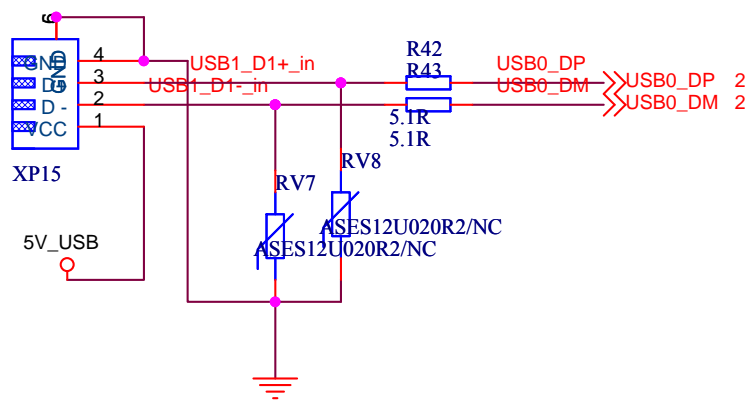

Shield

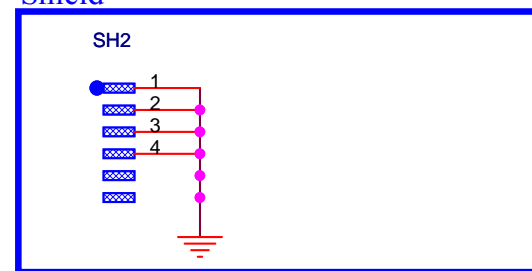

Title		
MSD309PX		
Size	Document Number	Rev
A	USB	A
Date:	Saturday, November 27, 2010	Sheet 10 of 10